

OWNER'S MANUAL
& REFERENCE



GNC 250™ Pilot's Guide



INTRODUCTION

Foreword

Software Version 2.06 or above

© 1995 GARMIN International

9875 Widmer Road, Lenexa, KS 66215, USA

Romsey House, Station Approach Romsey, Hampshire, UK S051 8DU


All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of GARMIN.

Information in this document is subject to change without notice. GARMIN reserves the right to change or improve their products and to make changes in the content of this material without obligation to notify any person or organization of such changes or improvements.

October 1995

190-00067-50 Rev. A

Printed in USA



GARMIN™, GNC 250™, Spell'N'Find™, AutoLocate™, MultiTrac8™, GPSCOM™ and AutoStore™ are trademarks of GARMIN and may only be used with permission.

NavData® is a registered trademark of Jeppesen Sanderson, Inc.

All rights reserved.

INTRODUCTION

Cautions

NOTE: This device complies with Part 15 of the FCC limits for Class B digital devices. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Furthermore, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference, the user is encouraged to try to correct the interference by relocating the equipment or connecting the equipment to a different circuit than the affected equipment. Consult an authorized dealer or other qualified avionics technician for additional help if these remedies do not correct the problem.

Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The GARMIN GNC 250 does not contain any user-serviceable parts. Repairs should only be made by an authorized GARMIN service center. Unauthorized repairs or modifications could void your warranty and authority to operate this device under Part 15 regulations.

CAUTION

The Global Positioning System is operated by the United States government, which is solely responsible for its accuracy and maintenance. The system is subject to changes which could affect the accuracy and performance of all GPS equipment. Although the GARMIN GNC 250 is a precision electronic NAVigation AID (NAVAID), any NAVAID can be misused or misinterpreted and therefore become unsafe.

Use the GNC 250 at your own risk. To reduce the risk of unsafe operation, carefully review and understand all aspects of this Owner's Manual and thoroughly practice using the simulator mode prior to actual use. When in actual use, carefully compare indications from the GNC 250 to all available navigation sources, including the information from other NAVAIDS, visual sightings, charts, etc. For safety, always resolve any discrepancies before continuing navigation.

The altitude calculated by the GNC 250 is geometric height above mean sea level and could vary significantly from altitude displayed by pressure altimeters in aircraft. **Never** use GPS altitude for vertical navigation.

The Jeppesen database incorporated in the GNC 250 must be updated regularly in order to ensure that its information is current. Updates are released every 28 days. A database information packet is included in your GNC 250 package.

Pilots using an out-of-date database do so entirely at their own risk.

Accessories & Packing List

Congratulations on choosing the finest, most advanced panel mount VFR GPSCOM available. The GNC 250 represents GARMIN's commitment to provide an accurate, easy-to-use GPS for all of your aviation needs.

Before installing and getting started with your unit, please check to see that your package includes the following items. If any parts are missing or damaged, please see your GARMIN dealer immediately.

Standard Package:

- GNC 250 unit & NavData® Card
- Installation Rack & Connectors
- Pilot's Guide & Quick Reference Guide
- Database Subscription Packet
- Warranty Registration Card

Optional Accessories

- Remote Battery Pack
- AC Adapter
- PC 250 Interface Kit
- User Data Card
- 28 to 14 volt DC converter

*To obtain accessories for your GNC 250,
please contact your nearest GARMIN dealer.*

INTRODUCTION

Warranty

To obtain warranty service, see your local dealer or call the GARMIN Customer Service department for a returned merchandise tracking number. The unit should be securely packaged with the tracking number clearly marked on the outside of the package, and sent freight prepaid and insured to a GARMIN authorized warranty service facility.

Every GARMIN GPS is built to exacting standards to provide years of trouble-free service. GARMIN warrants this product to be free from defects in materials and workmanship for one year from the date of purchase.

GARMIN International, Inc. will at its sole option, repair or replace any components which fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor. The customer is, however, responsible for any transportation costs. This warranty does not cover failures due to abuse, misuse, accident or unauthorized alteration or repairs. GARMIN International, Inc. assumes no responsibility for special, incidental, punitive or consequential damages, or loss of use.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING ANY LIABILITY ARISING UNDER WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.



PART ONE: INTRODUCTION

Foreword	i
Cautions	ii
Accessories/Packing List	iii
Capabilities	iv
Table of Contents	v-vi
Key and Knob Functions	vii-viii
GNC 250 Takeoff Tour	1-8

PART TWO: REFERENCE

Section 1: Navigation with the GNC 250 (NAV key)	9
Navigating and planning functions	
Section 2: Communicating with the GNC 250	29
Using the GNC 250's radio	
Section 3: Waypoint and Database Information (WPT key)	33
Finding and using database and waypoint information	
Section 4: Nearest Waypoints (NRST key)	53
Finding nearest waypoints, SUAs and FSS frequencies	
Section 5: Direct-to & Route Navigation (RTE key)	58
Creating and using routes	

To quickly and easily locate information on specific tasks, please refer to the Index on page 97.

INTRODUCTION

Table of Contents

Section 6: Messages and Unit Settings (MSG key)	71
Appendix A: NavData [®] and User Data Card Use	81
Appendix B: Installation and Maintenance of the GNC 250	83
Appendix C: Simulator	84
Appendix D: GNC 250 Abbreviations and Messages	86
Appendix E: Specifications	94
Appendix F: Map Datums	95
Appendix G: Index	97

GARMIN is fully committed to your satisfaction as a customer. If you have any questions regarding the GNC 250, please contact our customer service department at:

GARMIN International, Inc.
9875 Widmer Rd.
Lenexa, KS 66215-1239
(913) 599-1515
FAX (913) 599-2377

Key and Knob Functions



The power/volume knob controls unit power and radio volume.

SQ

The squelch button activates automatic squelch control.



The direct-to key performs an instant direct-to, allows you to enter a waypoint, and sets a direct course to the destination.

NRST

The nearest key is used to obtain information on the 9 nearest airports, VORs, NDBs, intersections, user waypoints and 2 nearest FSSs.

The nearest key also accesses any active SUA information. See Section 4 for more information on the nearest waypoints.

RTE

The route key enables you to create, edit, activate and invert routes. Search-and-rescue, parallel offset and closest point of approach are also performed using the route key. See Section 5 for more information on routes.

WPT

The waypoint key is used to view information such as runways, frequencies, position and comments on airports, VORs, NDBs, intersections and user waypoints. See Section 3 for more information on the database.

NAV

The navigation key is used to view navigation and position information. Planning operations are also performed using the **NAV** key. See Section 1 for more information on navigation and planning operations.

The GNC 250 is designed to minimize keystrokes when performing operations. There are typically several ways to perform the same operation. In general, using the knobs will decrease keystrokes and time spent using the GNC 250. Experiment to find the most effective way to use the GNC 250 to your advantage.

INTRODUCTION

Key and Knob Functions

This manual will describe entering data using the ● and ○ knobs. Experiment with them and become efficient in entering data with the concentric knobs. This will greatly reduce the amount of time required to navigate with the GNC 250.

MSG

The message key is used to view system messages. The **MSG** key is also used to access the GNC 250's unit settings. See Section 6 for more information on messages and unit settings.



The transfer key flip-flops the active and standby frequencies.

CLR

The clear key is used to erase information or cancel an entry.

ENT

The enter key is used to approve an operation or complete data entry. It is also used to confirm information, such as during power on.

CRSR

The cursor key is used to activate or deactivate the cursor in the separate areas of the GNC 250. Pressing **CRSR** once will activate the cursor in the comm 'window' and enable the pilot to change frequencies. Pressing **CRSR** again will activate the cursor in the GPS window (indicated by flashing characters in a GPS window field). It is used to highlight fields for data entry, changing information or cycling through available options.



The outer knob is used to advance through pages, advance the cursor, or move through data fields.



The inner knob is used to change data or scroll through information that cannot fit on the screen all at once.

TAKEOFF TOUR


Power On



The GARMIN GNC 250 is a powerful navigational tool that provides pilots with accurate navigational data and communication capability, along with a host of database information at your fingertips. The Takeoff Tour is designed to familiarize you with the operation of the GNC 250, including powering up the unit, changing frequencies, entering data and performing a simple direct-to, and a limited introduction to the 'Nearest' functions. In addition, this section also briefly covers the position, CDI and frequency pages available from the NAV key. These pages will be used for most of your in-flight navigation.

The Takeoff Tour assumes that the GPSCOM™ and antennas have been properly installed and you have not changed any of the GNC 250's default settings. If you have changed any of the factory default settings (position format, units of measure, selectable fields, etc.), the pictures used may not match your configuration. Prior to using your GNC 250 for the first time, we recommend that you taxi to a location that is well away from buildings and other aircraft so the unit can collect satellite data without interruption.

Powering up the GNC 250

The GNC 250's power and volume are controlled using the  (power/volume) knob at the bottom left of the unit. Rotating it clockwise will turn the unit on and increase the radio volume. After turning the unit on, a **welcome page** will be displayed while the unit performs a self test.

The **database page** will appear, showing the current database information on the NavData card, with the valid operating dates, cycle number and database type indicated. Databases are updated every 28 days and are available for one-time or subscription purchase.

To acknowledge the database information:

1. Press the  key.

```
136.97 119.02
GNC 250 Ver 2.06
01995 GARMIN Corp
Performing self test
```

Welcome Page

```
118.90 122.95
AMERICAS VFR SUA
eff 14-sep-95 (9510)
exp 12-oct-95 ok?
```

Database Confirmation Page

TAKEOFF TOUR

Acquiring Satellites

```
118.95 121.75
Acquiring epe----f
sat 1 9 18 19 31
sbl 9 6 5 7 5
```

Satellite Status Page

```
118.95 121.75
Need alt- Press NAV
```

Enter the altitude manually if necessary.

```
136.97 119.02
Search Sky dop ---
sat 1
sbl -
```

Searching the Sky

Once the database has been acknowledged, the **satellite status page** will appear, and the GNC 250 will begin to collect satellite information. An 'Acquiring' status will be displayed on the Satellite Status page, and the signal values on the bottom line of the page will begin displaying numeric values. This is a good indication that you are receiving signals, and satellite lock will occur. Following the first-time use of your GNC 250, the time required for a position fix will vary- usually from 2 to 5 minutes.

If the unit can only obtain enough satellites for 2D navigation (no altitude), the unit will use the altitude provided by your altitude encoder (if one is connected and working). If not, you will be prompted to enter the altitude with a 'Need alt- Press NAV' message. If this message occurs, press the **NAV** key and use the **▲** and **▼** knobs to enter the altitude shown on your altimeter. Press **ENT** when finished.

If the GNC 250 has not been operated for a period of six months or has moved over 300 miles without actively tracking satellites, it may have to 'Search the Sky' to collect new data. This means the unit is acquiring satellite data to establish almanac and satellite orbit information, which can take 7 1/2 to 30 minutes. The satellite status page will display a 'Search Sky' status, and the message annunciator (**MSG**), next to the **MSG** key, will also flash to alert you of a system message.

To view a system message:


1. Press **MSG**.

The **message page** will appear and display the status or warning information applicable to the receiver's current operating condition.

To return to the previous page after viewing a message:

1. Press **MSG**.

While the GNC 250 is acquiring a position, let's take a minute to dial in the active and standby frequencies you'll be using for the first phase of your flight. The GNC 250's display can be broken down into two separate 'windows', the **comm window** (the top line of the display) and the **GPS window** (the bottom three lines of the display).

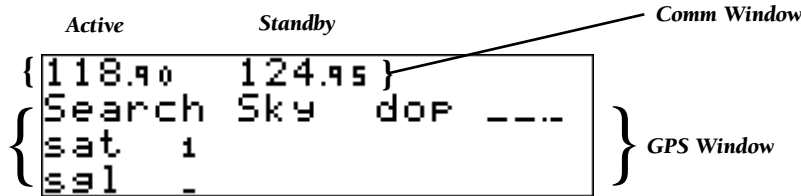


The **CRSR** key is used to activate the cursor in a particular window (see right) to provide access to various comm and navigation features. To select the active frequency, you must first enter the frequency in the standby field, and use the **←→** key to move it to the active field.

To change the standby communication frequency:

1. Press **CRSR** once to activate the cursor in the comm window.
2. Rotate the outer knob (⊙) to select the MHz, and the inner knob (●) to select the kHz of the desired frequency.

To place the standby frequency in the active field, press **←→**.

Once you've entered the active frequency, simply repeat steps 1 and 2 to enter the standby frequency. After both frequencies have been entered, you may elect to keep the comm window 'hot' by leaving the cursor on the standby frequency, or remove the cursor by pressing the **CRSR** key twice.

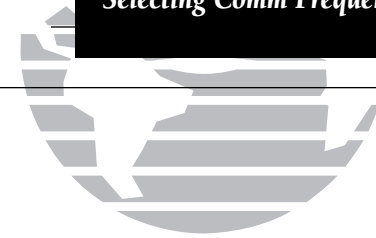

```
118.90 <124.95>
Search Sky dop ---
sat 1
ssl -
```

Status page with cursor active in comm window.

```
124.95 <118.90>
Search Sky dop ---
sat 1
ssl -
```

Switching the active and standby frequencies will not remove the cursor from the comm window.

TAKEOFF TOUR

Position Page

```
118.90 123.95
++++↑++++ ss :140%
dis 26.81% trk 320°
so to:KDLO ete11:29
```

The CDI page with active destination.

```
118.90 124.95
KIXD apr 118.90
twr#118.30
↓snd#124.30
```

Navigation Communications Page

After the GNC 250 acquires satellites and computes a position, the **position page** will appear automatically, and you'll be informed with a 'Ready for navigation' message on the message page.

Altitude, MSA or ESA

```
118.95 121.75
alt 1082%
N35° 19.490' W118° 59.751'
Eaft L45 035° 9.00%
```

Position (lat/lon)

Reference Waypoint Field


The position page displays your present latitude and longitude, altitude and a reference waypoint field. The altitude and reference waypoint fields are also selectable (see Section 1 for more information) to allow you to configure the unit to your own preferences. The default settings are:

- **Altitude**— Your present GPS altitude
- **Present Position**— Latitude and longitude displayed in degrees/minutes
- **Reference Waypoint**— The bearing and distance to the nearest airport




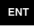

The position page is one of six pages available under the GNC 250's NAV key:

- **CDI page**
- **Position page**
- **NAV menu 1**
- **NAVCOM page**
- **Satellite status page**
- **NAV menu 2**

During most flights, the position, CDI (course deviation indicator) and NAVCOM pages will be the primary pages used for navigation. The pages available under each key are accessible by pressing the desired key and rotating the outer knob, or by pressing the NAV key repeatedly.

The GNC 250 uses direct point-to-point navigation to guide you from takeoff to touchdown in the VFR environment. Once a destination is selected, the unit will provide speed, course and distance data based upon a direct course from your present position to your destination. A destination can be selected from any page with the **direct-to** () key.

To select a direct-to destination:

1. Press the  key. The CDI page will appear with the destination field flashing.
2. Rotate the  knob to enter the first letter of the destination waypoint identifier. The destination waypoint may be an airport, VOR, NDB, intersection or user waypoint, as long as it is in the database or stored in memory as a user waypoint.
3. Rotate the  knob to the right to move the cursor to the next character position.
4. Repeat steps 2 and 3 to spell out the rest of the waypoint identifier.
5. Press  to confirm the identifier. The direct-to confirmation page will appear.
6. Press  to confirm the destination.

```

122.95 118.90
*****↑*****  gs : 120%
dis 135.06%   trk 231°
so to:KICT   ete 1:08
    
```

Once the direct-to destination is confirmed, the **CDI page** will appear with the destination indicated in the lower left hand corner of the screen. Your present speed and track over the ground, and the distance and estimated time enroute to your destination are also displayed. The graphical CDI, located at the top left of the screen, displays your position relative to the desired course and provides turn anticipation and waypoint messages during route navigation.



```

118.90 122.95
No actv wpt  gs : 0%
dis -----%   trk ___°
----->----- ete _:--
    
```

The CDI page without a direct-to destination.

```

122.95 118.90
Enter wpt    gs : 0%
dis -----%   trk ___°
so to:KICT_  ete _:--
    
```

Entering the direct-to waypoint identifier.

```

122.95 118.90
so to apt:KICT
N37° 39.00' W097° 25.99'
auto crs:220° ok?
    
```

Direct-to Confirmation Page

TAKEOFF TOUR

CDI & NAVCOM Pages

```
118.90 123.95
++++↑++++ gs :140%
dis 25.92% trn R00°
so to:KDLO trk 320°
```

CDI page with 'trn' and 'trk' displayed.

```
118.90 123.95
++++↑++++ gs :140%
dis 25.53% brg 320°
so to:KDLO trk 320°
```

CDI page with 'brg' and 'trk' displayed.

```
118.90 124.95
KIXD apr 118.90
twr%118.30
↓end%124.30
```


NAVCOM Page

In addition to the destination field and graphical CDI, the GNC 250 CDI page features four selectable fields for various navigation data so that the page may be configured to your own preferences (see Section 1 for more information). The default settings for the CDI page are:




- **Ground Speed (gs)**— Your present speed over the ground in knots
- **Distance (dis)**— The distance to your destination in nautical miles
- **Track (trk)**— Your present course over the ground
- **Estimated Time Enroute (ete)**— The time to your destination based upon your present speed and course in hours and minutes

The next page available under the GNC 250's NAV key is the **navigation communications (NAVCOM) page**. It provides you with a complete list of airport frequencies at your departure and arrival airports, allowing convenient selection of frequencies you'll need along your flight path. If you do not have an active departure airport, the navigation communications page will display the frequencies for the airport nearest your present position.

To view the NAVCOM page from the CDI page, rotate  one stop to the right.

The NAVCOM page lists your departure and arrival airports on the left side of the page, with all the database frequencies listed in a column down the right side of the page. To scroll through the list of frequencies, simply rotate the inner knob () in the direction of the arrow prompts at the bottom left of the page.

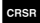To place a frequency from the list in the standby field:

1. Press the  key twice to activate the cursor in the GPS window.
2. Use the  knob to select the desired frequency. Press  to place the frequency in the standby field. The cursor will automatically advance to the next frequency on the list.

Once a direct-to is activated, the CDI page will provide navigation to the destination until the direct-to is cancelled or another direct-to destination is activated.

To cancel a direct-to from the CDI page:

1. Press the **CRSR** key twice to activate the cursor in the destination field.
2. Press **CLR**.
3. Press **ENT**.

The GNC 250's **NRST** key provides the nine nearest airports, VORs, NDBs, intersections and user waypoints, as well as the two closest FSSs (Flight Service Stations) and any SUA (special use airspace) alerts for your present position. The nearest waypoint feature is a handy safety feature that may be used to execute a quick direct-to in case of an in-flight emergency or to review the closest facilities to your present position. The nearest feature can also be used to quickly find the contact frequency of the nearest airport and enter it in the standby field.

To view the nine nearest airports:

1. Press the **NRST** key. The nearest airport will be displayed, with the range and bearing from your present position, along with elevation, frequency and runway data.
2. To review the rest of the nearest airport list, rotate the **ENT** knob to the right.

To place a nearest airport frequency in the standby field:


1. Press **ENT**. Press the **← →** key to place the frequency in the active field.

To view the nearest list for other waypoint categories (VOR, NDB, etc.):

1. Rotate the **ENT** knob to the right, or press the **NRST** key repeatedly.
2. Rotate **ENT** to scroll through the list.

TAKEOFF TOUR

Canceling a Direct-To Nearest Waypoints

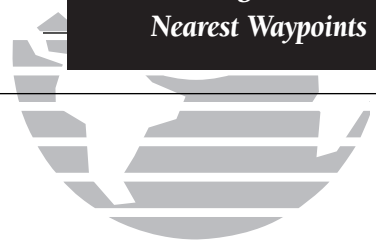

```
118.90 122.95  
nr1 apt KFOE 10800  
042° 15.2% twr 120.00  
rnwy 13 /31 128000
```

Nearest Airport Page

```
118.90 120.80  
nr1 apt KFOE 10800  
042° 15.5% twr 120.00  
rnwy 13 /31 128000
```

To place a nearest airport frequency in the standby field, press ENT.

```
118.95 121.75  
nr1 vor RIS 111.40  
151° 4.97% dme  
RIVERSIDE
```

Nearest VOR Page

TAKEOFF TOUR

Nearest Airports Shutting Down

```
118.90 120.80  
nr3 apt KEMP 1210%  
201° 29.2% uni 122.80  
rnwy 01 /19 5000%
```

Third Nearest Airport Page

```
118.90 120.80  
apt:KEMP N CEN USA  
EMPORIA KS  
EMPORIA MUN
```

To review a nearest waypoint, highlight the identifier and press ENT.

Once the nearest airport (or any other nearest waypoint) page is displayed, the selected waypoint can be quickly reviewed or selected as a direct-to destination.

To review the selected waypoint from the nearest waypoint list:

1. Press **CRSR** twice to activate the waypoint field.
2. Press **ENT** to display the waypoint identification page.
3. Rotate **○** to view any additional waypoint information available.
4. Press **NRST** to return to the nearest waypoint page.

To select a nearest waypoint as a direct-to destination:

1. Press the **→** key. The direct-to confirmation page for the selected waypoint will appear.
2. Press **ENT** to confirm.

Congratulations! You've now gone through the basic operation of the GNC 250. We encourage you to experiment with your new GPSCOM to get to know all the advanced navigation features it has to offer. If you'd like a little more practice, try using the built-in simulator described in Appendix C. An optional AC adapter will even let you plan and simulate flights in the comfort of your home or office.

To turn the GNC 250 off:

1. Turn the **○** knob to the left until the unit shuts off.

Section 1 Navigation Key

The GNC 250 features six navigation pages to provide various position, course, speed, status and planning information. The pages may be viewed by pressing the NAV key and rotating the outer knob, or by pressing the NAV key repeatedly.

CDI page

```
118.90 124.95
*****f*****gs :130%
dis 142.4% brs 333°
so to:KOMA trk 339°
```

NAVCOM page

```
118.90 124.95
KIXD apr 118.90
twr 118.30
dnd 124.30
```

Position page

```
118.95 121.75
alt 8394
N38°57.09' W094°44.783'
Eapt KOJC 353° 6.26%
```



```
118.90 126.95
APPr Time? Clock?
Trip Time? RAIM Prd?
Scheduler? Sunrise?
```

NAV Menu 2

```
118.90 124.95
Trip Plan? Dalt/tas?
Fuel Plan? Winds?
Unav Plan? Chklist?
```

NAV Menu 1

```
118.95 121.75
3D Nav dop 1.5
sat 3 14 18 19 22 25 28 29
sbl 2 7 5 7 9 5 - 8
```

Satellite Status Page



```
118.95 121.75
3D Nav dop 1.5
sat 3 14 18 19 22 25 28 29
sbl 2 7 5 7 9 5 - 8
```

Remember! The NAV pages will only display information **AFTER** the position and navigational information has been calculated from the satellites. If you are on the Position page before the unit has calculated a position, you will be able to enter an approximate position and altitude. This is helpful in speeding satellite acquisition if the unit has moved a great distance with the power off.

If you are not sure the GPS is actively calculating position, check the receiver status field for '2D NAV' or '3D NAV' by pressing the NAV key and rotating the outer knob until the Satellite Status page appears. The current receiver status is displayed at the top left of the page.

The **CDI**, **NAVCOM** and **position** pages are the primary pages used during in-flight navigation, while the nav menu and status pages offer access to planning, calculation and status functions. Note that rotating the outer knob clockwise will continuously cycle through all the nav pages, whereas turning the knob counterclockwise will stop the page selection sequence at the CDI page.

Whenever the NAV key pages are in use, the indicator light (D) next to the NAV key will illuminate. If the GNC 250 requires you to enter data on a navigation page, a message prompt with specific instructions will appear and the indicator will flash. If you leave the NAV page sequence for another set of pages, the last NAV page displayed will appear when you return to the nav sequence.

SECTION

1

NAV KEY
CDI Page

```

118.90 122.95
+++++↓+++++  gs :120%
dis  1.33%   brk 329°
so to:KIXD  ete__!_
  
```

The TO/FROM arrow will indicate whether you are 'to' or 'from' the destination waypoint.

```

118.90 124.30
No actv wpt  gs :120%
dis  _____%   trk 356°
-----→-----  ete__!_
  
```

The CDI page will display 'No actv wpt' in the CDI field if there is no active-to destination.

The GNC 250's **CDI page** provides you with the important information needed to navigate directly to your destination. The destination field, located at the bottom left of the page, displays the current destination waypoint or active route leg being navigated. If no direct-to destination or route is being navigated, the destination field will remain blank.

The diagram shows a CDI page with the following text and labels:

```

118.90 123.95
+++++↑+++++  gs :140%
dis  26.81%   trk 320°
so to:KDLO  ete11:29
  
```

- Messages or CDI**: Points to the top line of the display.
- Distance field**: Points to the 'dis' field.
- Ground Speed**: Points to the 'gs' field.
- Direction field**: Points to the 'trk' field.
- Active Waypoint**: Points to the 'so to:' field.
- Time Field**: Points to the 'ete' field.

The **graphical CDI** at the top left of the page shows your position relative to the desired course (the moving D-bar) to the destination waypoint. The **TO/FROM arrow** in the center of the scale indicates whether you are heading to (an up arrow) the waypoint or if you have passed the waypoint (a down arrow). The default setting of the CDI scale is 5.0 nm. If you are not navigating to a destination, the CDI field will display a 'no actv wpt' message, and only speed and track data will be available. The CDI field is also used to display the GNC 250's turn anticipation and waypoint alert data during route operations (see section 5).

In addition to displaying your active destination and the course deviation scale, the CDI page features four selectable fields for various distance, direction and time options. This allows you to configure the CDI page to your preferences. The default settings displayed are ground speed, distance, track and estimated time enroute.

The following functions may be displayed in the ground speed field:

- **gs**— Your present speed over the ground.
- **str**— Steer direction and distance, or digital crosstrack error. An ‘L’ or ‘R’ indicates which direction to steer, while the distance value indicates how far you are off course.

The following functions may be displayed in the distance field:


- **dis**— Distance from present position to the ‘active to’ waypoint.
- **str**— Steer direction and distance, or digital crosstrack error. An ‘L’ or ‘R’ indicates which direction to steer, while the distance value indicates how far you are off course.

The following steering functions may be displayed in the direction field:

- **trk**— Track, the direction of movement relative to the ground.
- **brg**— Bearing, the direction from your present position to the waypoint.
- **cts**— Course to steer to reduce cross track error and re-intercept course.
- **dtk**— Desired track, the course between the active from and to waypoints.
- **trn**— Turn, the direction and degrees to turn to get back on course.

The following information can be displayed in the time field:

- **eta**— Estimated Time of Arrival (at the active to waypoint).
- **ete**— Estimated Time Enroute (to the active to waypoint).
- **trk**— Track, or the direction of movement relative to the ground.
- **vn**— Vertical Navigation, or VNAV. If VNAV has been activated, this field indicates either the elapsed time before the VNAV maneuver is to begin or the VNAV altitude (the suggested altitude you should be flying in order to complete the maneuver).

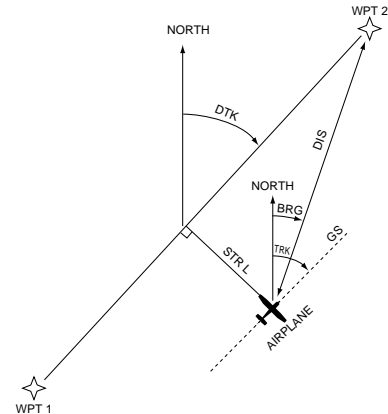

```

118.90 124.30
KACY  ats 108.60%
      apr 124.60 brg?
      ◊apr 134.25 brg?

```

The NAVCOM page lists the frequencies for your departure (or nearest) and arrival airports in the following order:




Departure

- Unicom
- ATIS
- Clearance Delivery
- Clearance Pretaxi
- Ground
- Tower
- Multicom
- Other
- Departure
- TCA
- TMA
- CTA
- ARSA
- TRSA

Arrival

- ATIS
- Approach
- Arrival
- TCA
- TMA
- CTA
- ARSA
- TRSA
- Tower
- Multicom
- Other
- Ground
- Unicom


To change any of the selectable fields on the CDI page:

1. Press **CRSR** twice to activate the cursor in the GPS window.
2. Rotate  to highlight the field you would like to change.
3. Rotate  to change the field to display the desired information.
4. Rotate  to highlight another field, or **CRSR** to finish.

```

118.90 124.95
KIXD  apr 118.90
      twr%118.30
      ↓and%124.30

```

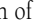The next page available from the GNC 250's NAV key is the **navigation communications (NAVCOM) page**. The NAVCOM page provides a list of the airport frequencies at your departure and arrival airports, allowing convenient selection of frequencies you'll need along your flight path. To scroll through the list of frequencies, rotate the inner knob () in the direction of the arrow prompts at the bottom left of the page.

The frequencies displayed for the departure and arrival airports are listed in the order you are most likely to use them (see left), with the available frequencies displayed to the right of the airport identifier. If you do not have an active route with a departure airport, the NAVCOM page will display the frequencies for the airport nearest your present position.

If a frequency has sector or altitude restrictions, the frequency will be followed by a 'brg?' indication.

To view restrictions on a frequency:

1. Press **CRSR** twice to activate the cursor in the GPS window.
2. Rotate **◂** to highlight the 'brg?' next to the frequency you wish to view.
3. Press **ENT** to begin viewing restrictions.

Once you begin viewing restrictions, you can view any additional frequencies with restrictions by rotating **◂**. You can also view the airport information pages by rotating **◂**. Information contained on these pages is covered in Section 3. To return to the NAVCOM page, press **NAV**.

Some frequencies in the NAVCOM page have tags which designate their usage:

- 'tx' – transmit only
- 'rx' – receive only
- 'pt' – part time frequency

To make any of the frequencies on the NAVCOM page the standby frequency:

1. Press **CRSR** twice to activate the cursor in the GPS window.
2. Rotate **◂** until the desired frequency is highlighted.
3. Press **ENT** to make the highlighted frequency the standby frequency. The cursor will automatically advance to the next frequency on the list.

An arrow prompt displayed on the bottom line indicates additional frequencies are available.



```
118.90 124.95
KIXD apr 118.90
      twr 118.30
      land 124.30
```

NAVCOM Page

```
118.90 124.30
KACY ats 108.60%
      apr 124.60 brg?
      qapr 134.25 brg?
```

NAVCOM page with receive only (rx) frequencies and frequencies with restrictions (brg).

```
118.90 124.95
KACY◂ apr 124.60
130-309°
```

Frequency restrictions on 124.60.

SECTION

1

NAV KEY

Position Page

```

118.95 121.75
msa 2700ft
N40° 38.330' W073° 46.731'
fact KJFK 124° 2.13M
  
```

Position page displaying MSA.

```

118.95 121.75
esa 16700ft
N40° 38.330' W073° 46.731'
fact KJFK 124° 2.13M
  
```

The same position page displaying ESA. MSA and ESA are computed based on data stored in the NavData card. This information cannot be solely relied upon as an absolute measure of safe altitude in your area, particularly if the data card is out of date. Consult current charts and NOTAMS for more complete information.

The GNC 250 **position page** displays your present latitude and longitude, altitude and a reference waypoint field. The altitude and reference waypoint fields are selectable to configure the page to your own preferences and current navigation needs.

Altitude, MSA or ESA

```

118.95 124.95
alt 1080ft
N38° 55.351' W095° 01.775'
fact KIXD 306° 8.52M
  
```

Position (lat/lon)

Reference Waypoint Field

The altitude field can display either the present altitude, minimum safe altitude (MSA) or enroute safe altitude (ESA). MSA is the recommended minimum altitude within a ten mile radius of your present position. ESA is the recommended minimum altitude within a ten mile radius of your course on an active route or direct-to. MSA and ESA altitudes are calculated from information contained in the database and generally include mountains, buildings and other permanent features (see left).

To change the altitude field:

1. Press **CRSR** twice to obtain a flashing cursor in the GPS window.
2. Rotate **○** until the 'alt/ESA/MSA' field is highlighted.
3. Rotate **●** to display the desired data. Press **CRSR** to return to normal navigation.

The position page also features a **reference waypoint field**, located at the bottom of the page, to indicate your bearing and distance from a selected waypoint. The reference waypoint field can display the following:

- Range, bearing and identifier from the nearest airport, VOR, NDB, intersection, or user waypoint
- Range, bearing, and identifier from a user specified waypoint

The default setting is to display the nearest airport.


To change the reference waypoint field to display the nearest airport, VOR, NDB, intersection, user waypoint or the range and bearing from a user selected waypoint:

1. Press **CRSR** twice to activate the cursor in the GPS window.
2. Rotate **○** to highlight the proximity field after the \bar{r} .
3. Use **●** to choose which waypoint type you would like displayed. (Choose 'wpt' if you would like a specific waypoint range and bearing to be displayed.)
4. Press **CRSR** to remove the cursor, or:

If you have selected 'wpt':

5. Rotate **○** to advance the cursor to highlight the identifier field.
6. Use the **●** and **○** knobs to enter the identifier name. (This waypoint identifier can be an airport, VOR, NDB, intersection, or user waypoint.) Press **ENT**.
7. Press **CRSR** to confirm the selection.

This allows any waypoint's distance and bearing to be listed continuously on the position page, and is especially useful when trying to locate your position on a sectional.



```

124.95  118.90
alt  1081ft
N39° 00.000' W095° 00.000'
rapt KIXD  329° 11.33%
    
```

Position page displaying the nearest airport (KIXD) as the reference waypoint.

```

124.95  118.90
alt  1081ft
N39° 00.000' W095° 00.000'
rwpt: TOP  103° 26.94%
    
```

Position page displaying the TOP VOR as the reference waypoint. This configuration can be used to help monitor your distance and radial to a waypoint of your choice.

Note the waypoint category is listed as 'wpt' rather than 'VOR' because the GNC 250 is not using the nearest VOR for the reference waypoint.

```

118.95 121.75
3D Nav      epe 1314
sat  3 14 18 19 22 25 28 29
SS1  2 7 5 7 9 5 - 8
  
```

Status page with EPE displayed.

```


118.95 121.75
3D Nav      dop 1.5
sat  3 14 18 19 22 25 28 29
SS1  2 7 5 7 9 5 - 8
  
```

Status page with DOP displayed.

The GNC 250's **satellite status page** provides satellite information to monitor GPS coverage and receiver performance. This is helpful when you may be experiencing low signal levels due to poor coverage or installation problems.

To view the satellite status page:

1. Press **NAV** and rotate **○** until the satellite status page appears.

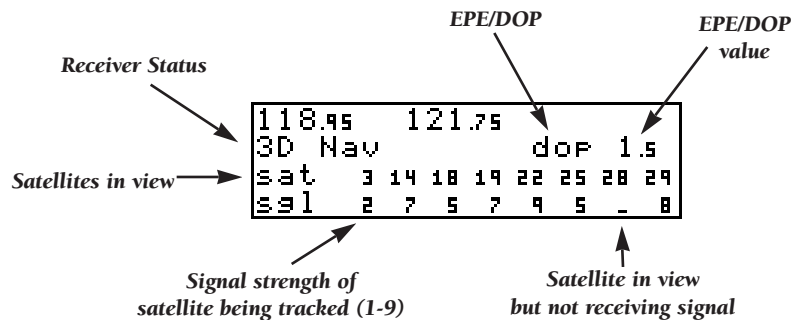

The top line of the status page displays the receiver status and the current position accuracy in DOP or EPE. The default setting is DOP.

The following functions may be displayed in the DOP/EPE field:

- **dop**— Dilution of Precision, a measure of the satellite geometry quality and relative accuracy of your position, with 1 meaning good geometry and 10 meaning poor.
- **epe**— Estimated Position Error, an overall measure of your positional accuracy in feet or meters using signal and data quality, receiver tracking status and DOP.

To change the DOP/EPE field:

1. Press **NAV** and rotate **⊙** to display the satellite status page.
2. If the desired field (EPE or DOP) is not displayed, press **CRSR** twice.
3. Use **⊙** to change between 'epe' and 'dop'. Press **CRSR** to finish.

The **receiver status field**, located at the top left of the page, can display the following messages under various conditions:

- Search sky** - The GNC 250 is searching the sky for visible satellites. You will be informed with the message 'Searching the Sky'.
- Acquiring** - The GNC 250 is acquiring satellites for navigation.
- 2D Nav** - The GNC 250 is in 2D navigation mode. If your installation does not include an altitude serializer, you must enter the altitude manually (see page 2).
- 3D Nav** - The GNC 250 is in 3D navigation mode and will compute altitude.
- Simulator** - The GNC 250 is in simulator mode, which should only be used for practice and trip planning. **Never** use simulator mode for actual navigation.
- Poor cvrg** - The GNC 250 cannot acquire sufficient satellites for navigation.
- Need alt** - The GNC 250 needs altitude in order to start/continue navigation. Go to the position page and enter the altitude.
- Not usable** - The GNC 250 is unusable due to incorrect initialization or abnormal satellite conditions. Turn the unit off and on again.




```
118.95 121.75
Acquiring epe____f
sat 1 9 10 19 31
ssl 9 6 5 7 5
```

Acquiring satellites for navigation.

```
136.97 119.02
Search Sky dop ___
sat 1
ssl -
```

Searching the Sky.

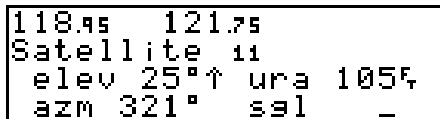



```

118.95 121.75
Satellite 11
elev 25°↑ ura 105%
azm 321° sgl -
  
```

Viewing individual satellite information.



The second and third lines of the satellite status page provide the satellite number and signal strength of each satellite in view. Additional information regarding each satellite's azimuth, elevation and other data is also available.

To view individual satellite information:

1. Press **NAV** and use  to display the satellite status page.
2. Press **CRSR** twice to activate the cursor in the GPS window.
3. Use  to highlight the satellite number you wish to view and press **ENT**.

This will display the satellite data page, showing the selected satellite's number, elevation angle, rise or fall indication, User Range Accuracy (URA, or the range measurement accuracy as determined by the satellite), azimuth and signal strength.

To view other satellites:

4. Rotate  to view information for the next satellite.
5. Rotate  and press **CRSR** on the satellite status page when you are finished.

In addition to the other four pages, the GNC 250 features two menu pages to perform a host of planning and navigation functions. **NAV Menu 1** provides access to the following functions:

- **Trip Planning**
- **Fuel Planning**
- **VNAV Planning**
- **Density altitude/true air speed calc.**
- **Winds aloft calculations**
- **Checklists**


To display NAV Menu 1:

1. Press **NAV**.
2. Rotate **○** until NAV Menu 1 is displayed.

Trip Plan is the first function listed on NAV Menu 1 and allows the pilot to view distance, ESA, bearing and estimated time enroute (ETE) between any two waypoints, and for programmed route legs. The ground speed can be varied manually to calculate several possible ETEs.

To use the trip planning function:

1. Press **NAV** and rotate **○** until NAV Menu 1 is displayed.
2. Press **CRSR** twice, then **ENT** to access trip planning.
3. Rotate **●** to select waypoint mode or desired route number and press **ENT**.
4. For direct-to navigation, use **●** and **○** to enter the 'to' and 'from' waypoints. Press **ENT** to accept the waypoints. To use your present position as a waypoint, leave the waypoint field blank.
5. For route calculations, choose either 'cum' for cumulative data (from beginning to end) or the leg desired by rotating **●**.
6. Use **●** and **○** to enter the ground speed. Press **ENT** to calculate the values and **CRSR** to finish.



```
118.90 124.95
Trip Plan? Dalt/tas?
Fuel Plan? Winds?
Unav Plan? Chklist?
```

NAV Menu 1

```
118.90 124.95
Wpt:      ----->-----
000°    0.00%  gs:    0%
esa  ----->  ete  -----
```

Trip Planning Page

```
118.90 124.95
Wpt:      KIXD  >KTCS
240° 688.61%  gs:  120%
esa 14400%  ete 5:44
```

Trip planning with values calculated.

```
118.90 124.95
Trip Plan? Dalt/tas?
Fuel Plan? Winds?
Unav Plan? Chklist?
```

Nav Menu 1

```
118.90 124.95
ialt: 1300% cas:110%
Pres: 29.95% tat: 68%
dalt 2000% tas 113%
```




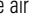
Density Altitude/True Airspeed Page

```
118.90 124.95
wpt: ----->KDAL
gs: 140% flow: 10.0%
endur 5:00 lfob 23%
```

Fuel Planning Page

The **density altitude/true airspeed function** is also accessed from NAV Menu 1. Density altitude is the altitude at which your aircraft will perform depending on several environmental conditions, including air pressure and total air temperature (the temperature including the effect of speed, read on a standard outside temperature gauge on most aircraft). True airspeed considers the same factors.

To calculate the density altitude and true air speed:

1. Press **NAV** and rotate **○** until NAV Menu 1 is displayed.
2. Press **CRSR** twice and rotate **○** to highlight 'Dalt/tas?'.

3. Press **ENT** to access the density altitude page.
4. Use **○** and **○** to enter the indicated altitude and press **ENT**.

5. Use **○** and **○** to enter the calibrated airspeed (cas). Press **ENT**.

6. Use **○** and **○** to enter the air pressure ('pres') and press **ENT**.

7. Use **○** and **○** to enter the total air temperature.
8. Press **ENT** and the density altitude and true airspeed will be calculated and displayed.
9. Press **CRSR** to remove the cursor.

If your installation includes components to provide any of the information required on the density altitude page, they will be used as the defaults.

The **fuel planning** page will display fuel requirements for both direct-to navigation and programmed routes. The fuel planning function requires the pilot to know the initial amount of fuel on board and the flow rate. You may also enter different ground speeds to view various information based on different travel times. If your installation is interfaced to a fuel flow sensor, the flow rate and other information will be used from the fuel flow sensor.

To perform fuel planning operations:

1. Press **NAV** and rotate **○** until NAV Menu 1 is displayed.
2. Press **CRSR** twice and rotate **○** until 'Fuel Plan?' is highlighted. Press **ENT**.
3. Rotate **●** to select either 'wpt' for direct navigation or the desired route number. Press **ENT**.
4. For waypoint-waypoint navigation, use **●** and **○** to enter the 'to' and 'from' waypoints. Press **ENT** to accept the waypoints. To use the present position as a waypoint, leave the corresponding waypoint field blank.
5. For route calculations, choose either 'cum' for cumulative route fuel requirements (from beginning to end) or the leg desired by rotating **●**.

If leg is selected, it displays the amount of fuel required to fly until that leg is complete.

For example: The fuel required to complete leg 2 is leg 1 + leg 2.
Fuel required to complete leg 4 is leg 1 + leg 2 + leg 3 + leg 4.

6. Rotate **○** to advance the cursor to 'fob:' or 'gs:' (depending on which is displayed).
7. Use **●** and **○** to enter the fuel on board or the ground speed. Press **ENT**.
8. Rotate **○** back two positions to highlight the 'fob:' or 'gs:' field again.
9. Rotate **●** to display the other information. Press **ENT**.
10. Use **●** and **○** to enter the remaining data. Press **ENT**.
11. Use **●** and **○** to enter the flow rate, in units per hour, if needed. Press **ENT**.

The GNC 250 will calculate the range and endurance (how long the fuel will last) of your aircraft. These are found in the first field on the bottom row of the page. The fuel left on board (lfob) and reserve after the selected direct-to, leg or route will also be displayed in the second field on the bottom row.



```
118.90  124.95
wpt:      KICT →KFOE
fob:    23% flow:  6.5%
rng  495.4% lfob  18%
```

Fuel Planning Page

```
118.90  124.95
wpt:      KICT →KFOE
fob:    23% flow:  6.5%
endur  3:32 rsv   2:43
```

Fuel planning page with other information.

```

118.90 124.95
Trip Plan? Dalt/tas?
Fuel Plan? Winds?
Unav Plan? Chklist?

```

NAV Menu 1

```

118.90 126.95
hdg:352° tas:140%
wind %268° at 9%
head wind is 0%

```

Winds Aloft Page

```







118.90 126.95
fr: 6100% to: 1000%
by: 5.0% before KOMA
at: 90fpm activate?

```

Vertical Navigation Page












The GNC 250's **winds aloft function** is used to calculate the true direction and speed of the any winds, and indicates whether you are flying with a head wind or tail wind, and the wind speed.

To calculate winds aloft:

1. Press **NAV** and rotate  until NAV Menu 1 is displayed.
2. Press **CRSR** twice and rotate  until 'Winds?' is highlighted. Press **ENT**.
3. Use  and  to enter your present heading in the 'hdg:' field. If your installation includes a fuel/air data computer, this will be displayed automatically. Press **ENT**.
4. Use  and  to enter your true airspeed (TAS) in the 'tas:' field. If you have previously calculated it using the density altitude/true air speed function, it will be displayed as the default. Press **ENT**. The wind direction and speed and head/tail wind will be displayed.

The **VNAV function** calculates vertical speed requirements to reach a desired altitude before or after a specified distance from a waypoint. This is helpful when you'd like to descend to a certain altitude near an airport or climb to an altitude before reaching a route or direct-to waypoint.

To calculate vertical navigation parameters:

1. Press **NAV** and rotate  until NAV Menu 1 is displayed.
2. Press **CRSR** twice and rotate  until 'Vnav Plan?' is highlighted. Press **ENT**.
3. Use  and  to enter the initial (from) altitude. Your GPS altitude will be displayed as the default. Press **ENT**.
4. Use  and  to enter the desired final (to) altitude. Press **ENT**.
5. Use  and  to enter the distance from the waypoint. Press **ENT**.
6. Use  to select 'before' or 'after' the waypoint. Press **ENT**.
7. Use  and  to select the waypoint identifier (it must be a waypoint in the active route or a direct-to waypoint). Press **ENT**.

You will now notice that the vertical speed field has been calculated, based on your present speed. If you desire a more rapid climb or descent:

- Use and to enter the new desired vertical speed, or press to accept the calculated value.
- Press to activate the vertical navigation function.

If you enter a greater value, the GNC 250 will display the elapsed time before the maneuver is to begin. When the countdown reaches 15 seconds, you will be informed with the message 'Start altitude chng'. The VNAV function will automatically be cancelled if the active direct-to or route is changed in any way, and you will be informed with a 'VNAV cancelled' message.


The GNC 250 will allow you to create up to nine **checklists** with 30 items each to remind you of repetitive tasks that can be called up at any time for review. The checklist feature is useful for creating pre-flight checklists, landing checklists, emergency procedures, etc. Each name or function can have up to 16 characters each.

To create a checklist:

- Press and rotate until NAV Menu 1 is displayed.
- Press twice and rotate until 'Chklist?' is highlighted. Press .
- Press and use to highlight the checklist you would like to create or edit. Press .
- Use and to enter the title of the checklist. Press .

This will display the checklist items page. On this page, you can enter each task, such as 'Check Fuel'.

- Use and to enter the checklist item. Press .
- You may repeat step 5 to enter additional items, or press to finish.



```
118.90 124.95
fr: 3000% to: 1200%
by: 5.0% before KFOE
at: 148fpm vnav actv
```

VNAV function in the active state.

```
118.90 124.30
++++↑++++ gs :120%
dis 17.30% trk 064°
so to:KMKC vn 3400%
```

VNAV displayed on CDI page.

```
118.90 124.95
Select check list
:PRE TAXI
↓ :EMERGENCY
```

Checklist Catalog page.

```

118.90 124.95
EMERGENCY
✓ : THROTTLE CLOSED
↓ : MX CTRL IDL CUTO
  
```

Executing a checklist.

```

118.90 126.95
Appr Time? Clock?
Trip Time? RAIM Prd?
Scheduler? Sunrise?
  
```

NAV Menu 2

```

118.90 126.95
Count down timer
from 0:25:00
Start? Stop? Reset?
  
```

Approach Timer

To execute a checklist:

1. Press **NAV** and rotate **○** until NAV Menu 1 is displayed.
2. Press **CRSR** twice and rotate **○** until 'Chklist?' is highlighted. Press **ENT**.
3. Use **○** to highlight the checklist you would like to see. Press **ENT**.
4. Press **ENT** to check off list items.

To delete a checklist item or an entire checklist:

1. To delete a checklist item, highlight the desired item and press **CLR**, followed by **ENT**.
2. To delete an entire checklist, highlight the desired list and press **CLR**, followed by **ENT**.

The GNC 250's **NAV Menu 2** provides access to various timer and planning functions, including:

- **Approach timer**
- **Trip Timer**
- **Scheduler**
- **Clock (Date and time)**
- **RAIM Prediction**
- **Sunrise and sunset calculations**

The **approach timer** acts as either a count up or a count down timer that can be set or reset at any time.








To activate/change/view the approach timer:

1. Press **NAV** and rotate **○** until NAV Menu 2 is displayed.
2. Press **CRSR** twice and rotate **○** until 'Appr Time?' is highlighted. Press **ENT**.
3. Rotate **●** to select either 'Count up' or 'Count down'. Press **ENT**.
4. Use **●** and **○** to set the time to begin counting from. Press **ENT**.
5. Rotate **○** to select the desired function: 'Start', 'Stop', or 'Reset'. Press **ENT** to execute.

When the count down timer reaches zero, you will be informed with a 'Timer expired' message. The timer will then begin to count up, keeping track of how long it has been since it expired. The timers run, if not altered, anytime the GNC 250 is on.

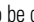

The GNC 250 **clock function** keeps track of both UTC time (Greenwich Mean Time or Zulu Time calculated from the satellites) and local time, and allows you to designate which format is used for ETA calculations. The local time and date can be set without doing a UTC to local time conversion.

To set the local date/time:

1. Press **NAV** and rotate  until NAV Menu 2 is displayed.
2. Press **CRSR** twice and rotate  until 'Clock?' is highlighted. Press **ENT**.
3. Use  to select either 'UTC' or 'local' time to be displayed in the time fields. Press **ENT**.
4. Use  and  to set the local date. Press **ENT**.
5. Use  and  to set the local time. Press **ENT**.
6. Press **CRSR** to complete.

The GNC 250's **trip timer** will automatically keep track of the duration of your current trip and can be configured to run when the GNC 250 is on, or when your ground speed exceeds a specified value (see section 6).

To view or reset the trip timer:

1. Press **NAV** and rotate  until NAV Menu 2 is displayed.
2. Press **CRSR** twice and rotate  until 'Trip time?' is highlighted. Press **ENT**. The current time of day, departure time and time enroute will be displayed.
3. To reset the timer, press **ENT**. To skip resetting the timer, press **CRSR**.



```
118.90 124.95
Timer expired
```

Timer expired message.

```
118.90 125.95
Select local (lcl)
27-mar-95 10:01:14 U
27-mar-95 16:01 lcl
```

Entering a local time.

```
118.90 125.95
Time 16:01
Dep 15:55
Trip 8:25 Reset?
```

Resetting the trip timer.

```
118.90 124.95
wpt:KTCS
eta:14:58 12-feb-96
Compute RAIM?
```

Enter the time and date for RAIM prediction.

```
118.90 124.95
KTCS 48504 av gas
N33°14.17' W107°16.26'
NF-3PR ok?
```









Confirm the selected waypoint.

```
118.90 124.95
wpt:KTCS
eta:14:58 12-feb-96
RAIM Available
```

RAIM available for the entered time and date.

The **RAIM Prediction function** allows you to confirm that GPS coverage is available for a specific location or waypoint any day of the year. **Receiver Autonomous Integrity Monitoring** performs checks to ensure that the GNC 250 will have adequate satellite geometry to work with during your flight. RAIM availability will be near 100% in Oceanic, En route and Terminal phases of flight.






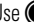

To predict RAIM availability:

1. Press **NAV** and rotate  until NAV Menu 2 is displayed.
2. Press **CRSR** twice and rotate  to highlight 'RAIM Prd?'. Press **ENT**.
3. Rotate  to highlight the field which you would like to change.
4. Use  and  to enter the waypoint name, or leave it blank to use your current position. Press **ENT** to accept.
5. Use  and  to enter the ETA in hours and minutes (in local or UTC time, whichever you have selected from the clock display), and the day, month and year. The current date will be displayed automatically. Press **ENT** to accept.
6. Rotate  to highlight 'Compute RAIM?'.
7. Press **ENT** to compute information.


When the computations are complete, the GNC 250 will display whether or not RAIM is available for the specified waypoint at the specified date and time.

The **scheduler function** will display reminder messages after a certain elapsed time such as Change oil, Switch fuel tanks, Overhaul, etc. For example, if you enter 'Change Oil' to be displayed in 30 hours, the message 'Change Oil' will be displayed after the GNC 250 has been on in Normal operating mode for 30 hours. After appearing, the message will be displayed each time the GNC 250 is turned on until it is changed or deleted.

To enter a scheduled message:

1. Press **NAV** and rotate  to display NAV Menu 2.
2. Press **CRSR** twice and rotate  until 'Scheduler?' is highlighted.
3. Press **ENT**.
4. Rotate  to highlight the message you would like to edit. To delete, press **CLR**, then **ENT**.
5. Use  and  to enter the message. Press **ENT**.
6. Use  and  to set the elapsed time until the message is displayed, in hours and minutes, up to 99 hours and 59 minutes (this time is cumulative and counts whenever the GNC 250 is on in normal operating mode).
7. Press **ENT**.

You may edit another scheduled message by repeating steps 3, 4 and 5, or if you are finished, press **CRSR**.



```

118.90  124.95
Scheduled messages
:CHANGE_  ___  0:00
:-----  -:
    
```

Entering a scheduled message.

```

118.90  124.95
Scheduled messages
:CHANGE OIL   10:00
↓:ANNUAL     57:00
    
```

The scrolling arrow prompt indicates which direction to scroll to view additional listings.


```

118.90  124.95
CHANGE OIL
    
```

The scheduled message will appear after the timer expires and after the GNC 250 is powered up until the message is changed.

SECTION
1

NAV KEY
Sunrise/Sunset
Calculations

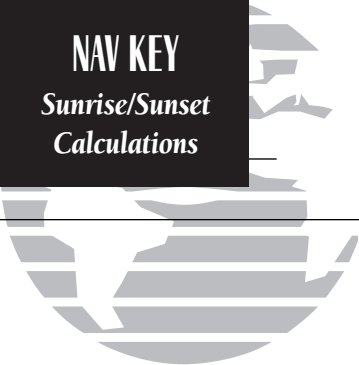







```
118.90 124.95  
Sunrise/sunset  
wpt:KTCS 27-sep-96  
Rise 13:00 Set 1:00
```

Sunrise/Sunset Planning Page

The GNC 250's **sunrise/sunset planning function** allows you to calculate the time of sunrise or sunset at any waypoint or your present position for a specified date.

To calculate sunrise and sunset times at a waypoint or at your present location:

1. Press **NAV** and rotate  until NAV Menu 2 is displayed.
2. Press **CRSR** twice and rotate  to highlight 'Sunrise?'. Press **ENT**.
3. Use  and  to enter the waypoint identifier, or leave blank to use current position. Press **ENT**.
4. Press **ENT** to accept the waypoint information.
5. Use  and  to enter the date desired.
6. Press **ENT** and the sunrise and sunset times will be calculated and displayed.


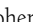
Section 2

Communicating with the GNC 250

The GNC 250 features a digital VHF radio that provides a seamless transition from communication to navigation, bringing the two most important functions in flying together in one panel-mount unit. The GNC 250 operates in the aviation voice band, from 118.000 to 136.975 MHz, in 25 kHz steps.


Communication frequencies are selected by activating the cursor in the **standby frequency field** and using the inner and outer knobs to dial in the desired frequency. A frequency may also be quickly selected from the navigation database by simply highlighting the frequency and pressing the **ENT** key. Once a desired frequency is displayed in the standby field, it may be made the active frequency by pressing the **↔** key. *Note that the active frequency may not be accessed directly.* Whenever the cursor is active in the comm window, the standby frequency will be highlighted (e.g., '<121.50>').

To access the standby frequency, press **CRSR.**

This allows you to change the megahertz (number to the left of the decimal) by rotating  and the kilohertz (number to the right of the decimal) by rotating . If you would like to keep the standby field 'hot' (ready for an immediate frequency change), leave the cursor active in the comm window. To remove the cursor, press **CRSR** twice after you have selected the desired frequency.

To make the standby frequency the active frequency, press **↔.**

The frequencies will be flip-flopped and you'll be able to transmit and receive on the standby frequency previously entered. This can be done at any time, regardless of cursor or GPS status.



```
118.90 124.30
++++↑++++  gs :120%
dis 31.23%  trk 257°
so to:KFOE  ete15:37
```

CDI page with cursor inactive.

```
118.90 <124.30>
++++↑++++  gs :120%
dis 30.60%  trk 256°
so to:KFOE  ete15:18
```

CDI page with standby field active.

```
124.30 <118.90>
++++↑++++  gs :120%
dis 30.83%  trk 256°
so to:KFOE  ete15:25
```

*To flip-flop the frequencies, press **↔**.*

SECTION 2 COMM FEATURES

Overview/ Auto-Tuning

```
118.95 121.75
nr1 apt KEGT 1270%
193° 5.47% apr 134.00
rnwy 17 /35 3500%
```

To auto-tune from the nearest airport page, press ENT.

```
118.90 124.30
KICT↓ ats 125.15
clr 125.70 and 121.90
twr 118.20 uni 122.95
```

To select a frequency from a list, highlight the desired frequency and press ENT.

During the course of navigating with the GNC 250, there may be times when you need to quickly select a comm frequency while you are entering data in the GPS window. Whenever data entry in the GPS window is interrupted by activating the standby frequency field, the GPS field in use will become 'splatted', or blocked out.

```
118.90 124.30
Enter wpt ss : 0%
dis -----m trk ---°
go to:KTCS_ etc_:_:
```

```
118.90 <124.30>
Enter wpt ss : 0%
dis -----m trk ---°
go to:■■■■■ etc_:_:
```

Once the standby frequency has been entered, you may return to data entry by pressing the CRSR key. The flashing cursor will return you to the active GPS field at the point where you stopped data entry.

The GNC 250's **auto-tune feature** allows you to quickly select any database frequency in the GPS window as your standby frequency.

To auto-tune a single frequency displayed in the GPS window:

1. Press **ENT** with the cursor inactive.
2. To make the standby frequency the active frequency, press **←▶**.

To auto-tune a frequency from a list displayed in the GPS window:

1. Press **CRSR** twice to activate the cursor in the GPS window.
2. Rotate **◂** to highlight the desired frequency.
3. Press **ENT** to make the selected frequency the standby frequency.

Another useful feature integrating the GNC 250's navigation and communication capabilities is the **Navigation Communications (NAVCOM)** page, which is accessed using the **NAV** key. See pages 12-13 for more on the NAVCOM page.

The GNC 250's **automatic squelch** and **volume controls** are located at the bottom left of the unit, near the NavData card slot.

To adjust the radio volume:


1. Rotate the **◂** knob.

Whenever the GNC 250 is powered up, the automatic squelch will be in the 'on' position, allowing only transmissions which are powerful enough for clear broadcast to be received. Manual squelch control is not available.

To override the automatic squelch control:

1. Press the **SO** key. Press **SO** again to return to automatic squelch.

Whenever the GNC 250 is transmitting, a 'tx' icon will appear between the active and standby frequency fields. If the microphone is stuck or accidentally left in the keyed position, or if the headsets continue to transmit after the key is released, the radio will timeout after 35 seconds of continuous broadcasting. You'll also receive a 'Stuck mic/Tx disabled' message as long as the stuck condition exists.



```

118.95 TX 121.75
KLAX      APR      124.50
255-044a

```

^a'TX' indicating radio transmission.

```
121.50  118.95
+++++↑++++  ss :120%
dis 135.0km  trk 231°
go to:KICT  ete 1:08
```

The emergency channel will appear in the active field.

The GNC 250's **emergency channel select feature** provides a quick method of selecting the 121.5 MHz frequency as the active frequency in the event of an in-flight emergency. The emergency channel select is available whenever the unit is on, regardless of GPS or cursor status, or loss of the display.

To automatically tune for emergency transmission:

1. Press and hold the  key for more than two seconds.

Section 3 Waypoint and Database Information

The GNC 250 uses a Jeppesen NavData® card to provide position and facility information for thousands of airports, VORs, NDBs and intersections. Each facility in the database is stored as a waypoint with its own latitude/longitude, identifier (up to five letters and/or numbers), and other pertinent information. Up to 1,000 user waypoints may also be created and stored in the GNC 250's internal memory.

```
118.90 124.95
Select waypoint type
apt? vor? ndb?
int? user?
```

Waypoint Menu Page

```
127.95 120.90
Proximity waypoints
:KACY dis:15.0%
:_____dis:____%
```

Proximity Waypoints Page



```
118.95 121.75
Wpts with comments
L45 KLAX ARCH
KIXD
```

Waypoint Comments List

```
118.95 121.75
3 user waypoints
FLTCH (PRX)
INDY in rt 5
```

User Waypoint List

Waypoint information is available through four primary waypoint pages accessible from the GNC 250's WPT key. The waypoint pages may be scrolled through by pressing the WPT key and rotating the outer knob until the desired page is displayed, or by pressing the WPT key repeatedly.

Please note that your GNC 250 uses ICAO identifiers for all airports. All U.S. airport identifiers which contain only letters use the prefix 'K'. For example, Los Angeles International is KLAX under the ICAO standard. Other airports, such as Otten Memorial (3VS), that contain numbers in the identifier, do not require the 'K' prefix. Many foreign countries use two letter prefixes. For more information on ICAO identifiers, contact:

Document Sales Unit
International Civil Aviation Organization
1000 Sherbrooke, Suite 400
Montreal, Quebec
Canada H3A 2R2



SECTION 3

WPT KEY Waypoint Categories & Menu Page

```
118.90 124.95  
Select waypoint type  
apt? vor? ndb?  
int? user?
```

Waypoint Menu Page

```
118.90 124.95  
KICT 13304 av/jet  
N37° 39.00' W097° 25.99'  
ils class C
```

Airport Position Page

```
118.95 121.75  
vor: BAL 115.10 W008°  
N39° 10.26' W076° 39.67'  
tacan
```



VOR Position Page

The GNC 250 organizes waypoints into one of five waypoint categories for your convenience. Each waypoint category provides different types of detailed information for a selected facility:

- **Airports** - Identifier, city/state, country, facility name, position (lat/lon), elevation, fuel services and communications frequencies.
- **VORs** - Identifier, city/state, country, facility name, position (lat/lon), frequency, magnetic variation, co-located DME or TACAN and weather broadcast indication.
- **NDBs** - Identifier, city/state, country, facility name, position (lat/lon), frequency and weather broadcast indication.
- **Intersections** - Identifier, country, position (lat/lon), nearest VOR.
- **User** - Identifier (name), position (lat/lon), reference waypoint.

To view the waypoint information for a desired waypoint, select the waypoint category from the waypoint menu page.

To choose a waypoint category (for viewing information):

1. Press **WPT** and rotate  to display the waypoint menu page.
2. Press **CRSR** twice and rotate  to highlight the desired waypoint category.
3. Press **ENT** to accept the waypoint category. The waypoint identification or position page for the selected category will appear with the waypoint identifier field ready for entry.

After a waypoint category is selected, information for a waypoint may be viewed by entering the identifier or name of the desired waypoint. Airports, VORs and NDBs may be entered by either the identifier, name or the location (city) of the facility. Intersections and user waypoints must be entered by the identifier.

To enter a waypoint identifier:

1. With the flashing cursor over the waypoint field, use **◐** and **◑** to enter the waypoint identifier.

As the identifier is entered, the GNC 250's Spell'N'Find™ feature will scroll through the available database, displaying any waypoints with the same identifier letters you have entered to that point. When the desired waypoint is displayed, press **CRSR** to remove the cursor.

To obtain waypoint information by entering the facility name of the airport, the name of the VOR or NDB, or its location:

1. Press **WPT** and rotate **◐** to display the waypoint menu page.
2. Press **CRSR** twice and rotate **◐** to highlight the desired waypoint category.
3. Press **ENT** to accept the waypoint category.
4. Rotate **◐** to highlight the middle field to enter location (city) **OR**:
 Rotate **◐** to highlight the bottom field to enter facility name or VOR/NDB name.
5. Use **◐** and **◑** to enter the location or the name, and press **CRSR** to finish.

As the information is entered, the GNC 250 will display any entries in its database that match the letters you have entered. If duplicate entries exist for the entered identifier, name or location, additional entries may be viewed by rotating **◐**. Once the desired waypoint is displayed, press **CRSR** to continue.



```
127.95 120.90
apt:KUKL N CEN USA
BURLINGTON KS
COFFEY CO
```

Entering a waypoint by identifier.

```
127.95 120.90
apt:2F5 S CEN USA
LAMESA-----TX
LAMESA MUN
```

Entering a waypoint by city. Note that punctuation marks are not used when entering locations or names. Use spaces, where appropriate, to identify these marks. For example, St. Louis would be entered as "ST LOUIS" without a period.

SECTION 3

WPT KEY Airport Information

Once a waypoint category and identifier have been selected, the GNC 250 will provide extensive information through a set of waypoint pages for the selected category. We'll now go through the pages available for each waypoint category in the order they appear on the waypoint menu page: airports, VORs, NDBs, intersections and user waypoints.

Airport Information

Airport Identification Page

```
118.45° 121.75  
apt:KICT N CEN USA  
WICHITA KS  
WICHITA MID CONTINEN
```

Airport Comments Page

```
118.45° 121.75  
apt:KICT comments  
TRAFFIC CAN BE  
HEAVY
```

Airport Position Page

```
118.45° 121.75  
KICT 1330° av/jet  
N37° 39.00' W097° 25.99'  
ils class C
```




```
118.45° 121.75  
KICT 01L/19R 10300'  
hard surf ft lghts  
ils ITWT 109.10 rw01L
```

Airport Runway Page

```
118.45° 121.75  
KICT atis 125.15  
clr 125.70 and 121.90  
twr 118.20 uni 122.95
```

Airport Communication Page

To scroll through the airport pages:

1. Make sure the cursor is not flashing. If it is, press **CRSR**.
2. Rotate  in either direction to scroll through the available pages.

The GNC 250 features five airport pages:

airport identification— allows entry of desired airport by identifier, facility name or city; displays region and/or country of facility.

airport position— allows entry of desired airport by identifier; displays latitude, longitude and elevation; indicates usage and fuel availability; displays available approaches and airport control/radar capability.

airport communication— allows entry of desired airport by identifier; displays radio frequencies/usage, and sector and altitude restrictions.

airport runway— allows entry of desired airport by identifier; indicates runway designations, length, surface and lighting information; displays ILS/localizer and/or pilot-controlled lighting frequencies.

airport comments— allows entry of desired airport by identifier; displays user comments for the selected airport.



The **airport identification page** displays a selected airport's identifier, region and country, city/state and facility name. The identification page is always the first airport page available, allowing you to quickly review an airport facility or select another facility by entering the identifier, facility name or city of the desired airport.



```
118.90 124.95
KICT 1330% av/jet
N37° 39.00' W097° 25.99'
ils class C
```

Airport Position Page

```
118.90 124.95
KICT↓ ats 125.15
clr 125.70 end 121.90
twr 118.20 uni 122.95
```


Airport Communication Page

```
118.90 124.95
KICT↓ 01L/19R 10300%
hard srfc ft lights
ils ITWI 109.10 rw01L
```

Airport Runway Page

SECTION
3

WPT KEY
*Airport
Position Page*

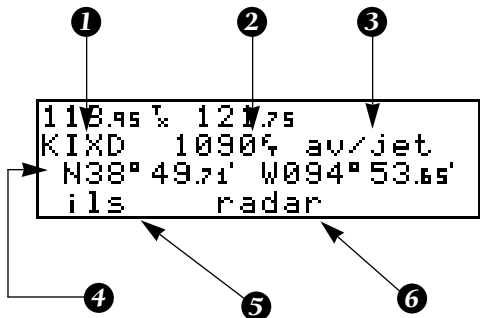

Airport Position Page

1. Identifier (selectable)
2. Elevation
3. Fuel Availability
4. Airport Position
5. Approach Information
6. Controlled Airspace/Radar Capability

The **airport position page** displays the latitude, longitude and elevation of the selected airport, as well as usage or fuel availability, available approaches and airport control/radar capability. The following descriptions and abbreviations are used on the airport position page:

Elevation— In feet or meters

Usage/Fuel— If the airport is for military use, it will display 'military'.

If it is private, the GNC 250 will display 'private'. If it is a public airport, it will display the fuel type(s) available:

- **av gas**— 80-87 octane, 100 LL, 100-130 octane, or mogas is available
- **jet**— Jet A, Jet A-1 or Jet A+ fuel is available
- **av/jet**— Both av gas and jet fuel are available

Position— In degrees/minutes or degrees/minutes/seconds of latitude and longitude.

Approach Information— displays the airport approaches available

- **no apr**— No approach is available
- **np-apr**— Non-precision approach is available
- **loc**— Localizer approach is available
- **ils**— ILS approach is available

Controlled Airspace Information— displays controlled airspace type




- **class B**
- **class C**
- **cta**
- **tma**

Radar— displays approach/departure radar capability

- **radar**— indicates radar is present

The **airport communication page** displays the radio frequencies and usage for the selected airport, as well as sector and altitude restrictions.

To view the communication page from any of the airport information pages:

1. Rotate  with the flashing cursor removed to display the communication page.
2. Rotate  in the direction of the arrow prompt to view additional frequencies. You may also view additional frequencies with the cursor on by rotating the  knob.

The following descriptions and abbreviations are used on the communication page:

Frequencies without restriction information:

- **ats** - Automatic terminal information service (ATIS)
- **ptx** - Pre-taxi
- **clr** - Clearance delivery
- **gnd** - Ground
- **twr** - Tower
- **uni** - Unicom
- **mul** - Multicom
- **atf** - Aerodrome traffic frequency
- **ctf** - Common traffic advisory frequency (CTAF)
- **mf** - Mandatory frequency
- **oth** - Other frequencies

Frequencies with restriction information:

- **dep** - Departure
- **arv** - Arrival
- **cta** - ICAO control area
- **class C**
- **apr** - Approach
- **class B**
- **tma** - ICAO terminal control area
- **trsa** - Terminal radar service area

'Receive only' frequencies will display an 'rx' indicator, while 'transmit only' frequencies will display a 'tx'. If a frequency has sector and/or altitude restrictions, they will also be displayed. Sector restrictions define a range of radials from the facility, while altitude restrictions may describe an area above, below or between altitudes. Additional instructions, if available, will be displayed on the bottom line.



```
118.90 124.95
KCLT↓
ats 132.10  clr 127.15
gnd 121.80  gnd 121.90
```

Airport Communications Page for KCLT.

```
124.30 118.90
KLAX0 def 124.30
045-224°
```

Frequency Page with Sector Restrictions.

```
118.95 tx 121.75
3VS uni 122.80
```

Airport Communication Page for 3VS.

SECTION 3

WPT KEY Airport Runway Page

```
124.30 118.90  
KICT↓ 01L/19R 103004  
hard srfc ft lights  
ils ITWI 109.10 rw01L
```



Airport Runway Page for KICT.


```
124.30 118.90  
KICT◇ 01L/19R 103004  
hard srfc ft lights  
ils IHOV 110.50 rw19R
```

To view additional runways, rotate the inner knob in the direction of the arrow prompts.

The **airport runway page** displays runway designations, length, surface and lighting for the selected airport, as well as ILS/localizer and/or pilot-controlled lighting frequencies.

To view the runway page from any of the airport information pages:

1. Rotate  with the flashing cursor removed to display the runway page.
2. To view additional runway information, rotate  with the flashing cursor removed. The scrolling arrow prompt, located beside the identifier field, indicates which direction to scroll for additional runway information.

If a localizer and ILS are used on the same runway, rotating  will display both sets of information.

The following descriptions and abbreviations are used on the airport runway page:

Runway surfaces:

- **hard** - Hard (concrete, asphalt, etc.)
- **seal** - Sealed surface
- **dirt** - Dirt surface
- **unkn** - Unknown surface
- **turf** - Turf (grass)
- **grav** - Gravel surface
- **soft** - Unknown soft surface
- **watr** - Water landing site

Runway lighting:

- **pt lights** - Part time lights
- **ft lights** - Full time lights
- **pc** - Pilot controlled (with frequency)
- **no lights** - No runway lighting

VOR Information

The GNC 250 features three VOR waypoint pages:

VOR identification— allows entry of desired VOR by identifier, facility name or city; displays region and/or country of facility.

VOR position— allows entry of desired VOR by identifier; displays latitude, longitude and frequency; provides magnetic variation, weather broadcasts and DME/TACAN information.


VOR comments— allows entry of desired VOR by identifier; displays user comments for the selected facility.

VOR information is accessed by entering the desired facility by identifier, city or facility name (see page 35) on any VOR waypoint page. The VOR identification and comments pages are identical in form and function to their airport page counterparts.

To scroll through the VOR pages:

1. Make sure the cursor is not flashing. If it is, press **CRSR**.
2. Rotate **○** in either direction to scroll through the available pages.

In addition to displaying the VOR frequency, magnetic variation and position, the VOR position page indicates if a DME or TACAN is co-located at the facility. The 'wx bdcst' field indicates that the VOR also transmits weather information.



```
118.95 121.75  
vor: BAL NE USA  
BALTIMORE MD  
BALTIMORE
```

VOR Identification Page

```
118.95 121.75  
vor: BAL 115.10 W008°  
N39° 10.26' W076° 39.67'  
tacan
```

VOR Position Page

```
118.95 121.75  
vor: BAL comments
```

VOR Comments Page

SECTION
3

WPT KEY
NDB Information

```
118.95 121.75
ndb:AM SE USA FL
TAMPA
PICNY
```

NDB Identification Page

```
118.95 121.75
ndb:AM comments
```

NDB Comments Page

NDB Information

```
124.30 118.90
ndb:AM 388.0
N27°51.68' W082°32.76'
wx bdcst
```

NDB Position Page

The GNC 250 also uses identification, position and comments pages for NDB information. The NDB waypoint pages are used in the same manner as VOR pages: NDB information is accessed by entering the desired facility's identifier, city or name (see page 35) on the NDB identification page.

To scroll through the NDB pages:

1. Make sure the cursor is not flashing. If it is, press **CRSR**.
2. Rotate **⊖** in either direction to scroll through the available pages.

The NDB position page (see above) displays the selected facility's identifier, frequency and position, as well as any weather broadcasts available. The NDB comment page will display any user comments for the selected NDB (see page 50 for instructions on entering user comments).

Intersection Information

```
118.95 121.75  
int: COOLE N CEN USA  
N37°10.82' W093°25.03'  
S 8GF 197° 11.3%
```

Intersection Position Page

The last database waypoint category available is intersections. Two intersection pages are available: intersection position and intersection comments. Intersections may be entered by identifier only (not city or name) on either intersection page.

To scroll through the Intersection pages:

1. Make sure the cursor is not flashing. If it is, press **CRSR**.
2. Rotate **○** to toggle between the available pages.

The intersection position page displays the selected facility's identifier, region and/or country, latitude and longitude, and the identifier, distance and bearing to the nearest VOR (not necessarily the VOR used to define the intersection). The intersection comment page will display any user comments for the selected intersection (see page 50).

```
122.95 118.90  
int:AANNE comments
```

Intersection Comments Page



SECTION 3

WPT KEY User Waypoints

```
122.95 118.90
usr:HOME
N39°01.53' W094°39.46'
f:KOJC 015.0°11.3%
```

User Waypoint Page

```
122.95 118.90
usr:HOME comments
95 STREET
```

User Waypoint Comments Page




```
122.95 118.90
usr:HOME_ comments
95 STREET
```

Entering a user waypoint name.

User Waypoint Information








In addition to the airport, VOR, NDB and intersection waypoints contained in your NavData® card, the GNC 250 allows you to store up to 1,000 user-defined waypoints. Once a user waypoint is created, two user waypoint pages will display the following information:

- Waypoint identifier
- Position in latitude and longitude
- Identifier, range and bearing from a reference waypoint
- User comments



To scroll between the user waypoint position page and the user comments page, rotate . User waypoints may be created or modified using the  key. After selecting the waypoint identifier, as shown on page 35, you will be prompted to enter information if the waypoint is new. There are three ways to create a user waypoint's position from the  key:

1. Enter the exact position of the new waypoint.
2. Reference a known waypoint.
3. Enter a range and bearing from your current position.

To create or edit a user waypoint:







1. Press .
2. Press  twice and use  to highlight the 'user?' field. Press .
3. Use  and  to enter the waypoint identifier. Press .

If the waypoint identifier entered does not exist in the database, you will be prompted to select a method to enter the new waypoint's position into the database. If the waypoint exists (you're just reviewing or editing a user waypoint), skip step 4 and move on to the next set of instructions.



4. Select the desired waypoint entry method using  and press .


You will automatically be placed on the latitude and longitude field (if you selected 'enter posn?'), the 'from' field (if you select 'ref wpt?') or the 'bearing' field (if you select 'rng/brg from posn?').

To enter/edit the position of the user waypoint:

1. Use  and  to enter the latitude. You may select either north or south and enter a latitude up to (but not including) 90°.
2. Press .
3. Use  and  to enter the longitude. You may select either east or west and enter a longitude up to (but not including) 180°.
4. Press .

Once the latitude and longitude have been entered, the flashing cursor will move to the reference waypoint field, where you may enter a reference waypoint to calculate a bearing and distance to the new waypoint position. If you are not entering a reference waypoint:

5. Press  to advance the flashing cursor to the 'ok?' prompt and press  to save the new waypoint in internal memory.

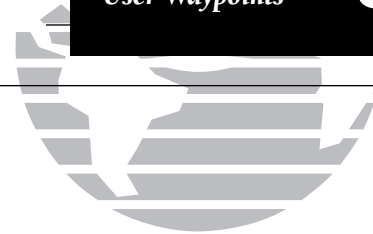

```
118.95 121.75
usr INDY is new
enter posn? ref wpt?
rng/brg from posn?
```

Selecting a method to enter a new user waypoint.

```
118.95 121.75
usr:INDY
N31°35.02' W052°49.10'
r: _____ ° ____ok?
```

Entering the user waypoint's exact position.

SECTION 3

WPT KEY Reference Waypoints

```
124.30 118.90  
usr:KNOX  
N38°53.78' W094°48.11'  
b:KQJC 310.0° 4.2%ok?
```

Entering a user waypoint by reference waypoint.

```
124.30 118.90  
usr:BUS  
N39°07.74' W095°41.52'  
b:_____ 017.0° 12.2%ok?
```

To create a user waypoint from your present position, leave the reference waypoint field blank and enter a bearing and distance from your present position. The GNC 250 will calculate the new waypoint's coordinates automatically.

To enter/edit a user waypoint position from a reference waypoint:

1. Use and to enter the reference waypoint's identifier.
2. Press **ENT**. The waypoint's position will appear.
3. Use and to enter the bearing from the reference waypoint.
4. Press **ENT**.
5. Use and to enter the distance from the reference waypoint.
6. Press **ENT**. The latitude and longitude will be calculated for the waypoint.
7. Press **ENT** to confirm the 'ok?' prompt and save the waypoint position.

If you have chosen to create a waypoint at a certain bearing and distance from your current position, your current position will be displayed and you will enter the bearing and distance at which you would like the new waypoint to be located.

To create a user waypoint offset from your present position:

1. Use and to enter the bearing from your position.
2. Press **ENT**.
3. Use and to enter the distance from your position.
4. Press **ENT**. The latitude and longitude will be calculated for the new waypoint.
5. Press **ENT** to confirm the 'ok?' prompt and save the waypoint position.




The GNC 250's **AutoStore™ function** provides another method of creating user waypoints. AutoStore is used to instantly capture your present position as a user waypoint with a touch of a button and add the new waypoint to the end of a specified route if desired.

To perform an AutoStore:

1. Press **NAV** and rotate  to display the position page.
2. Press **ENT**.

This will display the 'Save' waypoint screen, which will allow you to rename the waypoint and choose the route for it to be added to. The GNC 250 will assign the next available three-digit number as the default waypoint name, preceded by a '+' sign. This will help you differentiate AutoStore waypoints from other user waypoints.

To change the name or the route of an AutoStore waypoint:

1. Rotate  to select the name or route number field.
2. Use  and  to enter the name or route number. If you do not want to add the waypoint to a route, be sure to keep the route field blank.
3. Press **ENT** to accept.
4. Press **ENT** to confirm the 'ok?' prompt.

If the waypoint name is already used for another waypoint, you will be informed with the message 'WPT exists ____'. The default waypoint number will be redisplayed, and you may enter a different name.



```
122.95 118.90
Save wpt: +000
N39°00.00' W095°00.00'
Store in rte: __ ok?
```

AutoStore waypoint with default name.

```
122.95 118.90
Save wpt: ARRD_
N39°00.00' W095°00.00'
Store in rte: __ ok?
```

The default waypoint name may be changed before saving the waypoint.

SECTION 3

WPT KEY Proximity Waypoints

```
124.30 118.90
Proximity waypoints
:KNOX dis: 5.0%
↓ :KIXD dis:10.0%
```

Proximity Waypoints Page

```
118.95 121.75
Prox alarm-Press NAV
```

Proximity Alarm

The second page available from the GNC 250's WPT key is the **proximity waypoints page**. This page allows you to define an alarm circle around a selected waypoint and is useful in defining alarm circles around towers or obstructions. Up to nine proximity waypoints can be entered, with an alarm radius of up to 99.9 nm.

To create or edit a proximity waypoint:

1. Press **WPT** and use to display the 'Proximity waypoints' page.
2. Press **CRSR** twice and use to highlight the first available field.
4. Use and to enter the identifier. It may be an airport, VOR, NDB, INT or user waypoint. Press **ENT**.
5. Use and to enter the radius of the alarm circle. Press **ENT**.

If two proximity waypoints are entered and their regions overlap, you will be informed with the message 'Proximity overlap'. This message will be displayed each time you turn on the GNC 250 for as long as the overlap remains. **Warning:** If you enter the overlap area you will only be informed of the *nearest* proximity waypoint.

To remove a waypoint from the proximity waypoints page:

1. Press **CRSR** twice, if necessary, to obtain a cursor in the GPS window.
2. Press **CLR** to erase the name, and then **ENT** to delete.

To scroll through the proximity waypoints list:

1. Rotate with the flashing cursor inactive (or use with the flashing cursor active) to scroll through the available proximity waypoints. The scrolling arrow prompt will indicate the direction to scroll to view additional waypoints, if available.

The third page available from the GNC 250's WPT key is the **user waypoint list**, which can be used to quickly scan, review, rename or delete user waypoints.

To display the user waypoint list:

1. Press **WPT** and use **◂** to display the user waypoint list.
2. To scroll through the list, rotate **⦿**.

The total number of user waypoints is displayed at the top of the page, with user waypoints listed two at a time in alphabetical order. The scrolling arrow prompt, located at the top left of the page, will indicate which direction to scroll to view additional waypoints. The status of each waypoint, if applicable, will be displayed to the right of the identifier. A status will appear when it is the active-to waypoint, part of an active or stored route or a proximity waypoint. To edit, rename or delete waypoints, the cursor must highlight the desired waypoint.

To highlight a waypoint:

1. Press **CRSR** twice and use **◂** to highlight the desired waypoint.

To edit a highlighted waypoint:

1. Press **ENT** to obtain the waypoint position page. Edit the waypoint position as described on pages 45-46. **Note:** The active-to waypoint cannot be edited.

To delete a waypoint from the list:

1. Highlight the desired waypoint and press **CLR**. Press **ENT** to confirm the deletion.

To rename a waypoint from the list:

1. Highlight the desired waypoint. Use **⦿** and **◂** to enter a new identifier for the waypoint.
2. Press **ENT** on the confirmation page to change the name, or press **CLR** to cancel.



```
124.30  118.90
◂ 4 user waypoints
BUS
FLTCH
```

User Waypoint List

```
118.95  121.75
Rename waypoint
old name ARCH
new name QUICK  ok?
```

Renaming a user waypoint.

SECTION 3

WPT KEY Waypoint Comments

```
122.95 118.90
usr:ARROW comments
STADIUM-----
```

Entering waypoint comments.

```
118.95 121.75
Wpts with comments
L45 KLAX ARCH
KIXD
```

Waypoints with Comments List

The last page available through the GNC 250's WPT key is the **waypoint comments page**, which lists all waypoints that have a user comment. User comments may be added to 250 waypoints stored in the user or NavData® database, and allow you to note two lines of special information concerning a particular waypoint.

To enter user comments:

1. Enter the waypoint identifier from any waypoint page (see page 35), and press **CRSR** to remove the flashing cursor.
2. Rotate **○** to display the 'comments' page.
3. Press **CRSR** twice and use **○** to highlight either the second or third line.
4. Use **○** and **○** to enter the comment.
5. Press **ENT** to accept, and repeat steps 4 and 5, if necessary, to enter information on another line.
6. Press **CRSR** to remove the cursor.

To view the 'waypoints with comments' list:

1. Press **WPT** and use **○** to display the 'Wpts with comments' page.
2. Use **○** to scroll through the list.

The GNC 250 will display the waypoints with comments in alphabetical order, up to six waypoints at a time. The scrolling arrow prompt will indicate which direction to scroll to view additional waypoints.

To view comments for a selected waypoint:

1. Highlight the desired waypoint and press **ENT**.
2. Rotate **○** to display any other available pages for the selected waypoint.

The GNC 250's extensive waypoint database makes it possible for several waypoints to share the same identifier. To ensure that you are selecting the waypoint desired, the GNC 250 will always offer the **waypoint confirmation page** (which shows the waypoint's position) when an identifier is entered for a particular function.

To accept the waypoint position:

1. Press **ENT** with the cursor over the 'ok?' prompt.

To reject the waypoint position:


1. Press **CLR** with the cursor over the 'ok?' prompt.


Once a waypoint has been accepted or rejected, the previous page will be displayed. If there is more than one waypoint available for a selected identifier, the GNC 250 will display a duplicate waypoint page for you to choose the desired waypoint. The waypoint identifier and number of duplicates will be shown at the top of the page, with the waypoint type and region of each duplicate indicated below. The waypoints listed are sorted by the distance from your present position.

To scroll through additional duplicate waypoints:

1. Rotate  with the flashing cursor active, or  with the flashing cursor inactive.

To select the desired waypoint from the duplicates list:

1. Activate the flashing cursor and rotate  to highlight the desired waypoint.
2. Press **ENT**. The waypoint confirmation page will appear.
3. Press **ENT** over the 'ok?' prompt to accept the waypoint or **CLR** to reject the waypoint and return to the duplicate waypoints list.

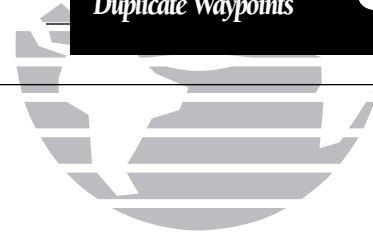

```
124.30 118.90
KACY 80% av/jet
N39° 27.45' W074° 34.63'
ils class C ok?
```

Waypoint Confirmation Page

```
124.30 118.90
2 duplicate MA
ndb S CEN USA?
ndb CANADA?
```

Duplicate Waypoints Page

```
118.95 121.75
Proximity wpt locked
Route wpt locked
Wpt comment locked
```

Alarms possible for locked waypoints.

```
118.90 124.30
Enter wpt ss :120%
dis _____% trk 080°
so to:_____ete:___
```

To blank a waypoint field, highlight the field and press the CLR key.

Because the GNC 250 relies on a NavData card for most waypoint information, there may be instances when waypoint information is not available for use. **Locked waypoints** exist when a waypoint contained in a route or used as a proximity waypoint is not contained on the NavData card, or no card is inserted in the unit. If this condition exists, you'll be alerted with a 'Proximity wpt locked', 'Route wpt locked' or 'Wpt comment locked' message when the unit is powered up. The identifier of a locked waypoint will be replaced with a 'lockd' message, which indicates you cannot obtain waypoint information or navigate to the waypoint. The identifier of a locked waypoint may be displayed by highlighting 'lockd' and pressing ENT. Locked waypoints may be deleted from routes, the user waypoint list or the proximity waypoints list by following the instructions in the appropriate section.

The **waypoint scanning feature** provides a fast way to scan through airports, VORs, NDBs and intersections in the database by identifier, facility name or city. Waypoint scanning may be used from any blank identifier field in the GPS window.

To enter a waypoint by scanning the identifier, facility name or city:

1. With the cursor over a blank identifier field, press **WPT**. If the identifier field is not blank, highlight the field with the flashing cursor and press **CLR** before pressing **WPT**.
2. Use **○** to highlight the waypoint category you wish to scan.
3. Press **ENT** to activate the scanning mode.
4. Rotate **○** to place the flashing cursor over the field you want to scan (identifier, facility or city name).
5. Use **●** and **○** to enter the letters of the identifier, city or facility name. The GNC 250 will scan the database and display the first waypoint that matches your entry.
6. Press **ENT** to accept the waypoint, and **ENT** again to confirm the waypoint for the function being used.

The GNC 250's **NRST key** provides detailed information on the nine nearest airports, VORs, NDBs, intersections and user waypoints within 200 nm of your current position. In addition, it will display the two nearest Flight Service Station (FSS) points of communication and alert you to any Special Use Airspace (SUA) you may be in or near. The NRST key can be used in conjunction with the GNC 250's direct-to function to quickly set a course to a nearby facility in case of an in-flight emergency.

To view the nearest waypoint information:

1. Press **NRST**.

This will display the nearest airport to your present position, subject to the runway surface type and minimum runway length selected (see page 73).

To scroll through the next eight nearest airports, rotate **⦿**.

You may examine both the communication frequencies and the runway information directly from the nearest airport page. You may also place the displayed frequency into the standby field by pressing **ENT** from the nearest airport page.

To view more comm/runway information:

1. Press **CRSR** twice and rotate **⦿** to highlight the comm field or the runway field.
2. Rotate **⦿** to scroll through more information, if available.

To perform a direct-to from any of the nearest waypoint pages:

1. Press **→←**. The waypoint confirmation page will appear.
2. Press **ENT** to accept the waypoint or **CLR** to cancel.

The nearest waypoints for other categories (VORs, NDBs, etc.) may be viewed by rotating **⦿**. Rotating **⦿** continuously to the left will stop page selection on the nearest airport category.



```

118.95 121.75
nr1 apt KEGT 12704
193° 5.47% apr 134.00
rwy 17 /35 35004
  
```

Nearest airport with other frequency information. If an airport has multiple frequencies available, they may be quickly viewed without activating the cursor by pressing the CLR key repeatedly.

```

118.95 121.75
nr1 fss COLUMBIA
122.15
  
```

Nearest FSS page. To view additional frequencies (if available), highlight the frequency and rotate the outer knob.

```
118.95 121.75
sua1 near&ahead 1:31
KANSAS CITY c1 B
KMCI 8000%M- ground
```

Nearest SUA

```
118.95 121.75
sua1 near < 2nm
FAA KANSAS CITY ARTC
29000%M- ground
```

Nearest SUA with controlling agency displayed.

NOTE: The GNC 250 will flash the **■** next to the **MSG** key to inform you of SUA alerts. You do not have to repeatedly check the Nearest Waypoint page for SUA information. It is provided to supply more information on the SUA and its boundaries. The GNC 250 will not flash alerts, however, if it has been turned off or if your altitude is such that you will not enter the buffered airspace. Turning off SUA alerts and setting the altitude buffer is described on page 77. **Any** SUA that meets these conditions will be displayed on the nearest pages.

The next page available under the GNC 250's NRST key is the **SUA alert page**. The SUA alert page will alert you with up to nine controlled or restricted airspaces near or in your flight path, according to the following conditions:

- If your projected course will take you inside an SUA within the next 10 minutes, the message '**SUA ahead < 10 min**' will be displayed.
- If you are within two nautical miles of an SUA and your current course will take you inside, the message '**SUA Near & Ahead**' will be displayed.
- If you are within two nautical miles of an SUA and your current course will **not** take you inside, the message '**Near SUA < 2nm**' will be displayed.
- If you have entered an SUA, the message '**Inside SUA**' will be displayed.

Note that the GNC 250's SUA alerts are based on three-dimensional data (latitude, longitude and altitude) to avoid nuisance alerts. The alert boundaries for controlled airspace are also sectorized to provide complete information on any nearby airspace. Once you have met one of the described conditions, the message annunciator will flash, alerting you of an SUA message.

To view an SUA message:


1. Press the **MSG** key.
2. Press **MSG** again to return to the previous page.

Once you are notified of a SUA alert, detailed information concerning the specific SUA is provided by the NRST key.

To view the SUA alert page:

1. Press the **NRST** key.
2. Rotate **○** one stop to the right to view the SUA alert page.

The SUA alert page contains the following information:

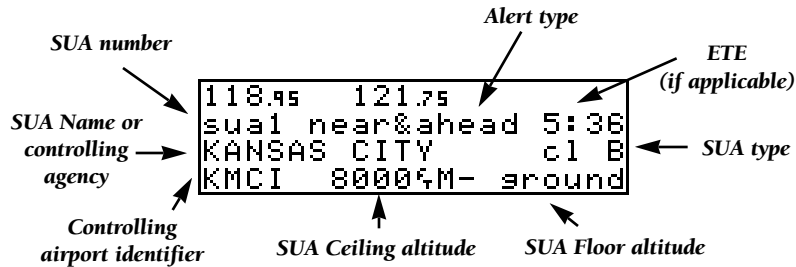

The 'SUA number' field displays which SUA you are viewing (you may be alerted with up to nine SUAs). SUAs are ranked with 'sua1' being the highest priority, and 'sua9' being the lowest priority from your current position. The 'SUA alert' field displays the corresponding alert message for this SUA, such as near, near and ahead, etc. (see page 54). The ETE (estimated time enroute), located at the top right of the page, will only be displayed if you are projected to enter the airspace.

The second line of the SUA alert page displays the name or controlling agency of the SUA, along with the SUA type to which you are being alerted.

To toggle between the SUA name and controlling agency display:

1. Rotate  one stop in either direction.

If the SUA name or controlling agency is too long to fit on the display, the GNC 250 will automatically scroll to display the rest of the information.



**SECTION
4**

**NRST KEY
SUA Messages**

```
118.95 121.75
sua1 near&ahead 1:31
KANSAS CITY cl B
KMCI 8000ftM- ground
```

SUA Alert Page

```
118.95 121.75
KMCI class B 118.90
SOUTH OF A LINE FROM
```

Frequency information for SUA.

The following SUA types can appear in the SUA type field:

Message	Airspace Type
alrt	- Alert
caut	- Caution
cl B	- Class B
cl C	- Class C
cta	- ICAO Control Area
dngr	- Danger
moa	- Military Operations Area
proh	- Prohibited
rstc	- Restricted
tma	- ICAO Terminal Control Area
trng	- Training
trsa	- Terminal Radar Service Area
unsp	- Unspecified
warn	- Warning

The last line on the SUA alert page displays the SUA's controlling airport identifier and the ceiling and floor altitudes for the SUA alert. Controlling agency frequencies may be viewed by highlighting the controlling airport identifier with the cursor and pressing **ENT**. The following are examples of what can appear in the altitude fields:

Message	Meaning
8000 ^f tM	- 8000 feet mean sea level (MSL)
3000 ^f tA	- 3000 feet above ground level (AGL)
ground	- Ground level
msl	- Mean sea level
notam	- See Notice to Airmen (NOTAM) for altitude restrictions
not sp	- Altitude is not specified
unlmtd	- Altitude is unlimited

```
118.90 124.30
cl B/cta on moa on
cl C/tma on oth on
alt: 200% rstcd on
```

SUA Settings Page

All SUA alert messages except for prohibited areas may be turned on or off through the GNC 250's unit settings options, found under the MSG key (see page 77). Alerts for prohibited areas will always be displayed, regardless of unit settings or operating mode. SUA alerts may be turned off so the pilot can avoid continuous alerts in areas with extensive special use airspace.

Important: Turning off the SUA alerts only stops the display of SUA messages. Any applicable SUA alert pages will still be available from the NRST key.

The GNC 250 also features an altitude buffer which may be set to provide a greater level of protection from penetrating an SUA. By specifying an altitude in the buffer, you can effectively stretch an SUA's altitude boundaries in both directions. This allows the pilot to add an extra margin of prevention around controlled or restricted airspace. For instructions on setting the altitude buffer, see page 77.



```
118.90 124.30
cl B/cta on moa on
cl C/tma on oth on
alt: 500% rstcd on
```

Altitude buffer set at 500 feet.

SECTION 5

DIRECT-TO & ROUTE NAV


Section 5 Direct-to & Route Navigation

One of the many benefits of GPS navigation is the ability to fly directly to a waypoint or fly a chain of waypoints without using ground-based navigation aids. To take advantage of the convenience and efficiency provided by point-to-point GPS navigation, the GNC 250 provides two basic methods of selecting a destination for your flight: **direct-to** and **route navigation**. The direct-to function provides a fast way to set a course to a destination waypoint from your present position. The route function allows the pilot to create a chain of waypoints to fly in sequence.

ROUTE TERMINOLOGY

The diagram at the right shows a basic route consisting of five waypoints and four legs.

The waypoint you are travelling to is called the **'active to'** waypoint, and the waypoint immediately behind you is called the **'active from'** waypoint. The course line between the active from and the active to waypoint is called the **'active leg'**.

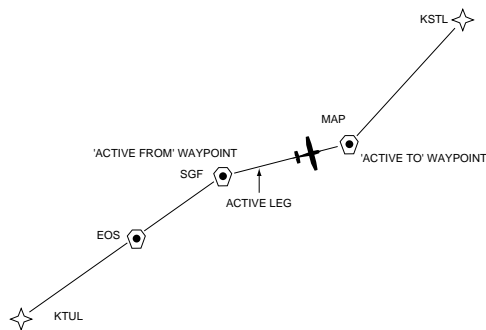

As you pass each waypoint in the route, the GNC 250's automatic sequencing and turn anticipation features will automatically select the next waypoint as the **'active to'** waypoint and provide smooth steering guidance around the turn. If you are not currently navigating a particular route leg (e.g., your starting position is not a route waypoint), the GPS will select the appropriate leg as the active route segment.

The GNC 250's **direct-to function** provides a quick method of setting a course to a destination waypoint. Once a direct-to destination is activated, the GNC 250 will establish a point-to-point route line along the great circle from your present position to the destination and provide steering guidance and navigation data to the waypoint until it is cancelled. If you are navigating to a waypoint and get off course, the direct-to function may also be used to re-center the d-bar to proceed to the same waypoint.

To select a direct-to destination:

1. Press the **→** key. The CDI page will appear with the destination field flashing.
2. Use **▲** and **▼** to enter the identifier of the desired waypoint.
3. Press **ENT** to confirm the identifier, and **ENT** to accept the direct-to confirmation page.


To re-center the d-bar to the same active-to waypoint:

1. Press the **→** key, followed by **ENT** twice.

A direct-to may also be quickly activated from many pages that display a single waypoint identifier (e.g., the nearest airport page) by simply pressing **→** and **ENT**. For pages that display a list of waypoints (e.g., the user waypoint list page), you must highlight the desired waypoint with the flashing cursor before pressing the **→** key. Once a direct-to is activated, the GNC 250 will provide navigation guidance until the direct-to is cancelled or the unit is turned off.

To cancel a direct-to destination:

1. Place the flashing cursor over the destination field on the CDI page.
2. Press **CLR**. The destination field will go blank.
3. Press **ENT**. The GNC 250 will resume navigating Route 0 (the active route) if available.

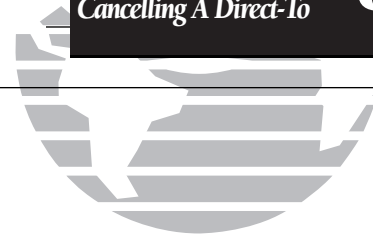

```
122.95 118.90
Enter wpt 95 : 0%
dis -----M brs ---°
go to:KGJT_ete_!_
```

To select a direct-to destination, press the **→** key and enter the waypoint identifier.

```
118.90 124.30
nr1 apt KT0P 880%
284° 16.6M twr 118.70
rnwy 13 /31 5000%
```

To quickly select a direct-to from any page that displays a single waypoint identifier (e.g., the nearest airport page), press **→**, followed by **ENT**.

SECTION 5


DIRECT-TO Manually Selecting A Course

```
118.90 124.30  
go to apt:KICT  
N37° 39.00' W097° 25.99'  
hold crs:246° ok?
```

The waypoint sequencing field, located at the bottom left of the direct-to confirmation page, allows you to 'hold' on a selected route waypoint and prevent the GNC 250 from sequencing to the next route waypoint.

If you have selected the 'hold' setting from the waypoint sequencing field, your selected course will appear at the bottom left of the CDI page. You may change your selected course right from this field by highlighting the course field and rotating the inner knob. Press ENT to confirm the course.

Whenever you perform a direct-to, the GNC 250 will set a point-to-point great circle course to your destination. You can also manually define the magnetic course to your destination with the GNC 250's **course select** feature. The course select feature is available from the bottom line of the **direct-to confirmation page** and works like selecting your desired course on a VOR indicator.

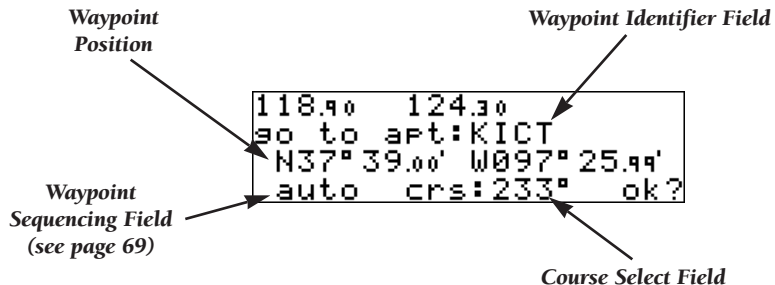

To manually set a course:

1. Press the **->** key. The direct-to confirmation page will appear.
2. Rotate **○** to place the flashing cursor on the course select field.
3. Use **●** to begin entry of the selected course (the **○** and **●** knobs may be used once you have started editing the course select field).
4. Press **ENT** to accept the course, and **ENT** again to acknowledge the 'ok?' prompt.

The GNC 250 will now use the selected course for your CDI and DTK steering guidance. To reset the course to a GPS-calculated course from your present position, simply press **->**, followed by **ENT**.


The GNC 250 lets you create up to 20 routes (numbered 0 through 19), with up to 31 waypoints each. Routes are created, copied and edited through the **RTE** key, which features two route pages selectable from the GNC 250's outer knob: the **active route page** and the **route catalog page**. The active route page provides information and editing functions for Route 0, which always serves as the route you are currently navigating. The route catalog page serves as the main page for creating, editing, activating, deleting and copying all routes.

Routes 1-19 are used as storage routes, which are stored in the GNC 250's internal memory. Once a storage route is 'activated', it is placed into Route 0 for navigation until it is cancelled, overwritten by activating another route or erased when the GPS is turned off. If you want to save a route currently in Route 0, be sure to copy it to an open storage route (routes 1-19) before it is cancelled, overwritten or erased.

The GNC 250's **route catalog page** is used to create, edit, delete or copy routes, and serves as the main page for a host of functions. These include route activation, determining the closest point of approach and search and rescue operations. It also displays a summary of routes currently stored in memory, with the departure and arrival route waypoints and total distance for the selected route number. To scroll through the available routes, rotate **⦿**. A one-line user comment may be added to any storage route, which will be displayed on the route catalog page.

To add user comments to any route (except route 0):

1. Rotate **⦿** to display the route you would like to add comments to.
2. Press **CRSR** twice and use **⦿** to highlight the bottom row.
3. Use **⦿** and **⦿** to enter comments, and press **ENT**. To erase, press **CLR**, then **ENT**.

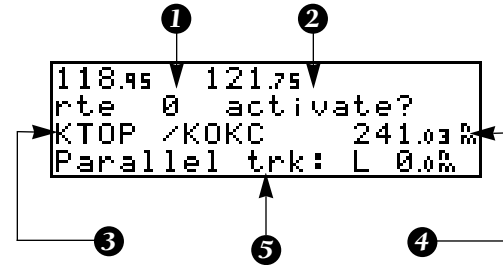

Route Catalog Page

1. Route selection field
2. Route action field
3. Departure/Arrival waypoints
4. Cumulative distance of route
5. Comments/Parallel track offset field

SECTION 5

ROUTES Creating & Editing Routes

```
118.95 121.75
rte 1 edit?
KTOP /KOKC 241.03 M
Parallel trk: L 0.0%
```

Selecting the route edit function.

```
118.95 121.75
:KTOP :KFOE_ rt
:KEMP :KOKC 1
:-----:-----
```

Adding a waypoint to route 1.

The **route action field**, located at the top right of the page, is used to select the desired route operation. The following functions are available:

- **Activate** - activate the route for navigation
- **Reverse** - activate a route in reverse order
- **Edit** - create a new route, or edit an existing route
- **Delete** - delete a route
- **Copy** - copy the current route to an empty route
- **CPA** - calculate the closest point of approach
- **Search** - perform search and rescue ladder operations

The **route editing function** allows you to create new routes and edit existing routes. Creating routes before takeoff can help make route operations faster and easier during your flight.

To create or edit a route from the route catalog page:

1. Use to display the route number you would like to edit.
2. Press **CRSR** twice.
3. Use to select 'edit?'. Press **ENT**. The route review page will appear.

To add a waypoint:

4. Rotate to highlight the first blank waypoint field or the point where you want to enter the new waypoint. The first waypoint field will already be flashing if you're creating a new route.
5. Use and to enter the waypoint's identifier. Press **ENT**.
6. Press **ENT** to confirm the 'ok?' prompt on the waypoint confirmation page.
7. Repeat steps 4 through 6 to add the next waypoint, or press **CRSR** to finish.

To delete a waypoint:

1. Rotate **○** to highlight the waypoint you wish to delete.
2. Press **CLR** to remove the name, then press **ENT** to delete.
3. Repeat steps 1 and 2 to delete additional waypoints, or press **CRSR** to finish.

To delete an entire route:

1. Use **○** to display the route number you would like to delete (route 0 for the active route).
2. Press **CRSR** twice and use **○** to highlight the action field.
3. Use **○** to select 'delete?'. Press **ENT** to delete.

Once a route is defined through the route catalog page, it may be activated from the route catalog page. Activating or reversing a route places the selected route into route 0 and overwrites the existing active route.

To activate a route:

1. Press **RTE** and use **○** to display the route catalog page.
2. Rotate **○** to display the route you would like to activate.
3. Press **CRSR** twice and use **○** to display 'activate?'. Press **ENT**.

After travelling a route or creating a route with the GNC 250's AutoStore feature, the route activation field may be used to activate the route in reverse order.

To activate a route in reverse order:

1. Press **RTE** and use **○** to display the route catalog page.
2. Use **○** to display the route number you would like to reverse.
3. Press **CRSR** twice and use **○** to display 'reverse?'. Press **ENT**.

```
118.95 121.75
rte 0 delete?
KTOP /KOKC 241.03%
Parallel trk: L 0.0%
```

Deleting route 0.

```
118.95 121.75
rte 0 reverse?
KTOP /KOKC 241.03%
Parallel trk: L 0.0%
```


Reversing route 0.

SECTION 5

ROUTES Copying Routes CPA Function

```
118.95 121.75
Closest Pt of apprch
route 6 KDAL /KLIT
6:TXK 327° 26.7% ok?
```

Calculating Closest Point of Approach.

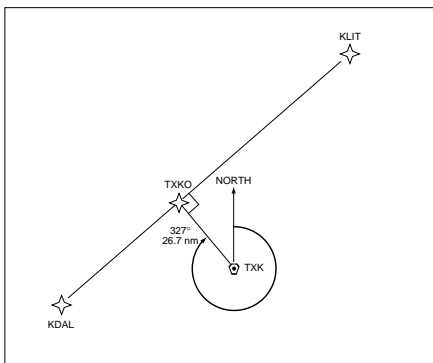

Closest Point of Approach

The route action field also features a **copy function** that permits you to copy any route to another open storage route. The copy function can be used to save the contents of the active route (route 0) to an open storage route.

To copy a route:

1. Press **RTE** and use to display the route catalog page.
2. Use to display the route to which you would like to copy to. The route must be empty.
3. Press **CRSR** twice and rotate to select 'copy?'. Press **ENT**.
4. Use to enter the route you would like to copy. The departure/arrival identifiers will be displayed for your reference. Press **ENT** to copy the route.

The **CPA function** calculates the closest distance that a route will pass to a reference waypoint, and helps when creating new route waypoints referenced to a NAVAID.

To calculate the closest point of approach (CPA) from the route catalog page:


1. Use to display the route you would like to use for the CPA function. The route must consist of at least two waypoints, and the reference facility must fall between the waypoints of a route leg.
2. Press **CRSR** twice and rotate to select 'cpa?'. Press **ENT**.
3. Use and to enter the identifier of the reference waypoint.
4. Press **ENT**. The bearing and distance of the closest point on the route will be displayed.
5. Press **ENT** to add the cpa waypoint to the route, or **CLR** to finish. If you do add the cpa waypoint to the route, it will be named based on the reference waypoint plus a number (0-9) added to the end (e.g., KMCI3 for KMCI). If the waypoint does not fall between waypoints on the route, the reference waypoint does not exist or a unique name cannot be assigned to the CPA waypoint, you'll be informed with the 'Invalid CPA wpt ____' message.

The GNC 250's **search and rescue function** provides navigation guidance for search and rescue operations, navigating in a ladder pattern to maximize coverage and efficiency. This is done in reference to two waypoints called 'anchor waypoints'. The first leg will be a specified distance from the line connecting the anchor waypoints. This is called the 'offset distance'. The 'increment distance' is the distance between each subsequent leg. The ladder can be created on either side of the waypoints.

To perform a search and rescue operation:

1. Create a route of **only** two waypoints.
2. Press **RTE** and use **○** to display the route catalog page.
3. Use **●** to select the 2-waypoint route.
4. Press **CRSR** twice and use **●** to display 'search?'. Press **ENT**.
5. Use **●** and **○** to enter the leg increment value and R or L. Press **ENT**.
6. Rotate **○** to highlight the initial offset, and use **●** and **○** to enter the initial offset value, and R or L.
7. Press **ENT** three times to accept the operation values and begin navigation.

After activating a search and rescue, you will be informed with an 'Offset nav in effect' message each time you traverse the route offset from the anchor waypoints. Once you've arrived at the destination waypoint, the leg increment will be added to your present offset, and the route will be automatically reversed. If a search and rescue is interrupted, note the parallel track direction (R or L) and distance on the catalog page for route 0. When you resume search and rescue operations, use this as the initial offset.

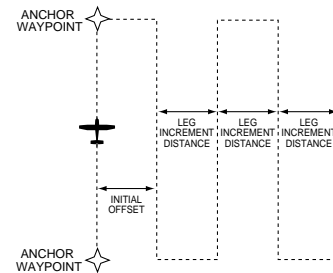


```
118.95 121.75
Route 0 KLWC /KTOP
initial offst:L 0.0%
increment:L 0.0% ok?
```

Performing a search and rescue operation.

SECTION 5

ROUTES Parallel Track Offset Navigation

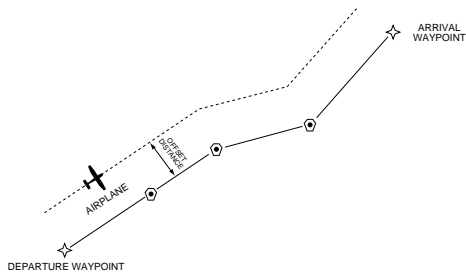

Parallel Track

```
118.95 121.75
rte 0 search?
KLWC /KTOP 19.28%
Parallel trk: L 0.0%
```

Enter parallel track value after route activation.

During route navigation, it is sometimes desirable to navigate a specified distance away from the 'active leg' to help avoid certain airspaces or regions. The GNC 250's **parallel track feature** will automatically guide you along a selected offset from the active leg.

To use offset navigation, or parallel track:

1. Press **RTE** and use \odot to display the route catalog page.
2. Use \bullet to display route 0 (parallel track can only be used on the active route).
3. Press **CRSR** twice and use \odot to highlight the parallel track value field.
4. Use \bullet and \odot to enter the desired distance and direction (R or L) from the leg.
5. Press **ENT** to accept.

It is important to note that offset navigation is only available on route navigation, not direct-to navigation. When offset navigation is activated, an 'Offset nav in effect' message will be displayed with the distance and direction noted on the route catalog page for route 0. If you enter an offset which causes a leg to be reversed, you'll be informed with the message 'Ofst too big for rte'. If you change the active route in any way or perform a direct-to, you'll be informed with an 'Offset nav cancelled' message.

Flying and Modifying the Active Route


Once a route has been created and activated, the GNC 250 will provide navigation to each route waypoint through the active route and CDI pages. From the active route page, you may also create and modify the active route. The CDI page will display detailed navigation data on your progress to each route waypoint and provide turn anticipation, waypoint arrival and next desired track information. By understanding the relationship between the active route and CDI pages and the role of the waypoint sequencing selector, you'll be able to get the most out of the GNC 250's advanced route features.

Whenever the GNC 250 is navigating an on-route direct-to or route, the **active route page** will provide a list of the route waypoints in sequence, along with distance, time and course information. You may also create and edit a route directly from the active route page. If you want to save a route created from the active route page (route 0), you must copy it to an open storage route (see page 64) before turning the unit off or activating another route. The active route page may be displayed by pressing the **RTE** key and rotating **⊖** left continuously. It will also appear whenever a route is activated.

To scroll through the active route waypoints:

1. Rotate **⊖** with the flashing cursor inactive (or **⊕** with the cursor active).

The active leg identifiers field, located at the top left of the page, displays the waypoint identifiers of the route leg you are currently navigating. The first waypoint identifier displayed is the **'active from'** waypoint. The second waypoint is the **'active to'** waypoint. The line connecting these waypoints is known as the **'active leg'**. If you are navigating a direct-to, the field will display the destination with a 'goto' designation.



```
118.90 124.30
KOJC →KFOE cum ete
→KFOE 22.91% 0:14
⊕ :KTCS 682.2% 7:01
```

USING THE ACTIVE ROUTE PAGE

The GNC 250's active route page provides a working list of the route you are navigating, allowing you to view all route waypoints, along with distance, timing or desired track information. The scrolling route prompt to the left of the route waypoint list indicates which way to scroll to view additional route waypoints.

The active route page can also be used to manually select your next 'active-to' destination, which allows you to fly the route out of sequence without modifying it. The GNC 250 will resume navigation of the remainder of the route in sequence once you arrive at the selected waypoint.

SECTION 5

ROUTES Active Route Page Inserting Waypoints

```
118.90 124.30
go to KICT cum dtk
  +KICT 136.8% 234°
↓ :KFOE 251.1% 042°
```

Active route page with cumulative distance and desired track displayed.

```
118.90 124.30
go to KICT leg ete
  +KICT 135.7% 1:08
↓ :KFOE 114.3% 2:05
```

Active route page with leg distance and estimated time enroute displayed.

```
118.90 124.30
go to KICT leg ete
  :KEMP - ----% ---:
⊙ :KFOE ----% ---:
```

Adding KEMP waypoint to the active route.








The leg field can be selected to display cumulative distance or the distance for each route leg. If cumulative is selected, the first leg's distance will be displayed. The second leg will represent the first leg's distance plus the second leg, and so on. The time field may be configured to display the estimated time enroute (ete), estimated time of arrival (eta) or desired track (dtk) for each leg.

To change the leg and time fields:

1. With the flashing cursor active, rotate  to highlight the field you want to change.
2. Rotate  to select the desired setting and press .

The active route page may also be used to create a new route or edit the route you are currently navigating, and provides a fast method of selecting any route waypoint as your next destination waypoint without modifying the active route. If you are editing the active route and want to save it in its original form, copy it to an open storage route before editing.

To add waypoints to the active route:

1. Press  twice, if necessary, to activate the cursor.
2. Use  to highlight the first blank waypoint field, *or* highlight the waypoint before which you would like to add the new waypoint.
3. Use  and  to enter the new waypoint identifier. Press .
4. Press  to accept or  to cancel. The cursor will automatically move to the next waypoint field, and the remaining route waypoints (if any are present) will move down the list accordingly.

To delete a waypoint from the active route:

1. Press **CRSR** twice, if necessary, to activate the cursor.
2. Use **○** to highlight the waypoint you would like to delete from the active route.
3. Press **CLR**, followed by **ENT**. The next route waypoint (if available) will move up to take the position of the deleted waypoint.

The active route page also allows you to select your next destination waypoint manually from the active route waypoint list and resume the remainder of the route in sequence. This procedure, referred to as an **'on-route' direct-to**, allows the pilot to fly the active route in a different sequence without editing the active route itself.

To perform an on-route direct-to from the active route page:

1. Press **CRSR** twice and rotate **○** to highlight the desired waypoint.
2. Press **→**, followed by **ENT** to confirm the 'ok?' prompt on the waypoint confirmation page.

The GNC 250 will now provide guidance to the selected waypoint and resume navigating the remainder of the route in sequence once you arrive at the next destination waypoint. The **waypoint sequencing field**, located at the bottom left of the direct-to confirmation page, allows you to select manual or automatic waypoint sequencing of route waypoints. Setting the selector to the 'hold' setting holds your current 'active-to' waypoint as your navigation reference and prevents the GPS from sequencing to the next waypoint in the route. The waypoint sequencing selector may be used in conjunction with the course select feature (see page 60) to manually select the course to the 'hold' waypoint.

```
118.90 124.30
go to apt:KIXD
N38°49.90' W094°53.39'
hold crs:074° ok?
```

You can hold on a destination waypoint by setting the waypoint sequencing field to the 'hold' position. A user-defined course may also be entered in the course select field.

```
118.90 124.30
+*****^***** gs :120%
dis 15.30% trk 107°
074°:KIXD ete 9:48
```


Whenever waypoint sequencing is set to 'hold', the desired course is displayed at the bottom left of the CDI page. See page 70 for more details.

SECTION 5

ROUTES Waypoint Sequencing

```
122.95 118.90  
Nxt dtk 297° ss :160°  
dis 0.21% dtk 302°  
go to:PM00 ete 0:05
```

As you approach a route waypoint, the graphical CDI will be replaced by a flashing 'next dtk xxx°' prompt indicated the desired track of the next leg.

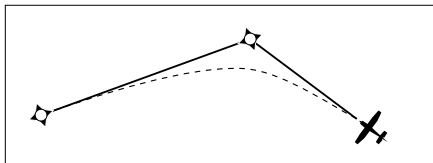

If the turn angle and your present speed will require a bank angle that exceeds 25°, you'll be notified with a 'Steep turn ahead' message approximately 90 seconds before arrival at the active to waypoint.

To 'hold' on the active-to waypoint:

1. Press **→**. The direct-to confirmation page will appear.
2. Rotate **○** to highlight the waypoint sequencing field, and rotate **●** to select 'hold'.
3. Press **ENT**. The cursor will advance to the course select field where you may manually enter the desired course to the 'hold' waypoint. The default course is the GPS course calculated from your present position.
4. Press **ENT** to accept the course select field.
5. Press **ENT** to confirm the 'ok?' prompt.

During route operations, the CDI page is used to provide turn anticipation, next desired track and waypoint arrival information to the pilot. The GNC 250's **turn anticipation feature** will smooth out the transition between adjacent route legs by providing CDI guidance along a curved path segment. This leg transition is based on the aircraft's actual ground speed and the difference between the course angle of the two legs. The GNC 250 will automatically sequence to the next leg when you are abeam the 'active to' waypoint on the curved transition segment, and the to/from indicator on the CDI will flip momentarily. During the transition, the CDI display will be referenced to the dotted line illustrated at the left of this page. As you approach a route waypoint, the graphical CDI will be replaced by a flashing 'Next dtk xxx°' prompt, indicating the desired track of the next route leg.

Turn anticipation will not be provided if you have set the waypoint sequencing field to 'hold' or your current ground speed and the course angle between the two legs would require a bank angle greater than 25°. If the leg transition is too short for a smooth transition, a 'Leg not smoothed' message will appear, and the pilot should expect a rapid change in the CDI deflection.

Section 6

Messages and Unit Settings

The GNC 250's MSG key provides access to system messages and allows you to customize your GPSCOM to your own preferences through a settings submenu. Whenever the GNC 250 needs to alert you to a navigation, communication or system message, the annunciator light next to the **MSG** key will flash. Some messages are advisory in nature (e.g., the arrival and countdown alarms), while others may require your immediate attention (e.g., a stuck microphone message). For a complete list of GNC 250 messages, please see Appendix D.

To view a message, press **MSG. Press **MSG** again to return to the previous page.**


The GNC 250's settings submenu is also accessed from the MSG key.

To view the settings submenu, press and hold **MSG for more than 2 seconds.**

Once the settings submenu has been accessed, the following setup pages are available by rotating  with the flashing cursor inactive:

- **CDI scale settings**
- **Nearest airport search**
- **Display intensity settings**
- **Navigation units**
- **Map datums**
- **Mag. var./arrival alarm settings**
- **Battery saver**
- **Trip timer settings**
- **SUA settings**
- **I/O Settings (channel 2 only)**

The first available page under the settings submenu is the **CDI settings page**, which allows you to define the scale of the GNC 250's course deviation indicator.



```
118.95 121.75  
Prox alarm-Press NAV
```

To view a message, press MSG.

```
127.95 128.20  
CDI Settings  
scale Auto : 5.0%
```

To access the settings submenu pages, press and hold the MSG key for two seconds. The GNC 250 will return to the last submenu viewed the next time you access the unit settings.

SECTION 6

UNIT SETTINGS CDI Settings Magnetic Variation




```
127.95 128.20  
CDI Settings  
scale Auto : 5.0%
```

When the 'auto' CDI setting is selected, the GNC 250 will automatically change the CDI scale when you are within 30 nm of a departure or arrival airport.

```
118.90 124.30  
Mag Var / Arvl Alarm  
user mag: E00 °  
arrival: 0.0%
```

Entering a user magnetic variation.

To change the CDI scale:

1. Press and hold **MSG**, and rotate  to select the 'CDI Settings' page.
2. Press **CRSR** twice and rotate  to select 'Auto', '+5.0 nm', '+1.0 nm' or '+0.3 nm'.
3. Rotate  to highlight 'ok?' and press **ENT** to approve.
Note: the selected CDI scale will not take effect until approved.

The scale values represent full scale deflection of the CDI to either side. The default setting is ± 5.0 nm. The 'Auto' setting will start the CDI scale at 5 nm, and gradually ramp down the scale to the 1 nm range once you are within 30 nm of a departure or arrival airport. You must have an active direct-to or route with an airport as your final destination waypoint, or be within 30 nm of a departure airport. Note that the GNC 250 uses **Receiver Autonomous Integrity Monitoring (RAIM)** to cross-check its position. The RAIM protection limits listed below follow the selected CDI scale, changing automatically with the 'Auto' setting:

CDI Scale






+/-5.0 nm or Auto (en route)
+/- 1.0 nm or Auto (terminal)
+/- 0.3 nm

RAIM Protection

2.0 nm
1.0 nm
0.3 nm

The GNC 250 has three **magnetic variation options**: true, auto, or user-defined.

To set the magnetic variation:

1. Press and hold **MSG** and use  to display the 'Mag Var/Arvl Alarm' page.
2. Press **CRSR** twice and use  to select auto, true or user.
3. If user is selected, use  to highlight the magnetic variation value, and use  and  to enter the value and E or W. Press **CRSR** to finish.

If 'auto' mag var is selected, all track, course and heading information will be corrected with the variation computed by the GPS. The 'true' setting will reference all information to true north, and the 'user' setting will correct information to an entered value.

The GNC 250's **arrival alarm** can be set to notify the pilot with a message when you have reached a user defined distance to a final destination waypoint (the direct-to waypoint or the last waypoint in a route). Once you have reached the set distance (up to 99.9 units), an 'Arrival at ____' message will be displayed.


To set the arrival alarm distance:

1. Press and hold **MSG** and use **○** to display the 'Mag Var/Arvl Alarm' page.
2. Press **CRSR** twice and use **○** to select the arrival distance field.
3. Use **●** and **○** to enter the desired distance. Press **CRSR** to finish.

The **nearest airport search** settings allow you to define the runway length and surface type used in determining the nine nearest airports displayed. A minimum runway distance and surface may be entered to prevent airports with small runways, or runways that are not of appropriate surface, from being displayed. The default settings are '0 ft/mt' for runway length and 'any' for runway surface.

To set the minimum runway length and runway surface:

1. Press and hold **MSG** and use **○** to display the 'Nearest apt search' page.
2. Press **CRSR** twice and use **●** and **○** to enter the minimum runway length upon which your aircraft can land (up to 9999 units). Press **ENT** to accept the distance.
3. Rotate **●** to display the surface selection you desire. Choices include:
 - any surface
 - hard only surface
 - soft/hard surface
 - water only surface
4. Use **○** to select 'ok?' and press **ENT** to confirm and **CRSR** to complete.



```


118.90 124.30
Mag Var / Arvl Alarm
auto mag E005°
arrival: 10 %
  
```

Setting the arrival alarm.

```

127.95 128.20
Nearest apt search
min rnwy len:2000%
hard only srfc
  
```

Runway length and surface type settings.

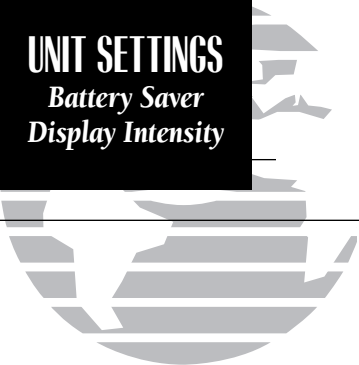

```
127.95 128.20
Battery saver--turn
off display 30 sec
after last keypress
```

Display timeout settings.

```
127.95 128.20
Display intensity
mode: auto
level: 50%
```

Automatic display intensity.

The GNC 250's **battery saver feature** can be programmed to automatically turn off the display when using the optional remote battery pack. This will increase the remote battery life in event of power failure. During this time, the GNC 250 will continue to navigate and track satellites, but will not display information until a key is pressed or a knob is turned.

To set the display timeout:

1. Press and hold **MSG** and rotate **○** to display the 'Battery saver' page.
2. Press **CRSR** twice to activate the cursor.
3. Rotate **○** until the desired value is displayed (0, 30, 60 or 90 seconds). Entering 0 will leave the display on at all times. Press **CRSR** to finish.

The GNC 250 features automatic brightness control to adjust the display for optimum viewing in any condition. This is done using a photocell at the top left corner of the display bezel. It is important that this photocell not be covered to ensure proper display adjustment. You may also select manual control of the display brightness to tailor the GNC 250 to your needs.

To change the display intensity settings:

1. Press and hold **MSG** and rotate **○** to display the display intensity page.
2. Press **CRSR** twice and use **○** to select 'auto' or 'manual' control.
3. Press **ENT**.
4. If manual is selected, use **○** to set the display intensity.
5. Press **CRSR** to complete.

The **trip timer** provides a running clock on NAV Menu 2 (see page 25), and can be configured to run when power is on or when your ground speed exceeds a user-defined minimum.

To change the trip timer settings:

 
1. Press and hold **MSG**, and use **○** to display the trip timer settings page.
2. Press **CRSR** twice to activate the cursor.
3. Use **●** to select either 'pwr is on' or 'gs exceeds'.
4. If you choose 'pwr is on', press **CRSR** to complete.
5. If you choose 'gs exceeds', use **○** to highlight the speed field.
6. Enter the speed using **●** and **○**.
7. Press **ENT** to accept, and press **CRSR** to complete.

The GNC 250 can be configured to display data in standard or metric **units of measure**. These apply to: distance, position, speed, altitude, fuel, pressure and temperature.


To change the units of measure:

1. Press and hold **MSG** and rotate **○** to display the nav units page.
2. Press **CRSR** twice and rotate **○** to highlight the field you would like to change.
3. Use **●** to change the unit of measure.
4. Rotate **○** to advance to the next field, or press **CRSR** when finished.

(Continued on the next page.)



Trip Timer Settings.

 

Default Units of Measure Settings.

SECTION 6

UNIT SETTINGS *Units of Measure*

```
127.95 128.20
Posn dms alt ° MPM
nav % % fuel %
Pres % temp °C
```

Units of Measure Settings (metric).

The available units of measure are:

- position :**
- degrees, minutes and seconds (dms) [hddd° mm' ss.s"]
 - degrees and minutes (dm) [hddd° mm.mmm']
- altitude :**
- feet (ft)
 - meters (mt)
- vertical speed :**
- feet per minute (fpm)
 - meters per minute (mpm)
 - meters per second (mps)
- nav units :**
- nautical miles and knots (nm, kt)
 - statute miles and miles per hour (mi and mh)
 - kilometers and kilometers per hour (km and kh)
- fuel :**
- gallons (gl)
 - imperial gallons (ig)
 - kilograms (kg)
 - pounds (lb)
 - liters (lt)
- pressure :**
- inches of mercury (hg)
 - millibars (mb)
- temperature :**
- degrees Fahrenheit (°F)
 - degrees Celsius (°C)

The **Special Use Airspace settings page** will allow you turn the controlled/restricted airspace message alerts on or off. This will not affect the alerts being listed on the nearest page. It will simply turn off the warning when you are approaching or near an SUA. Warnings can be turned off for the following airspaces:

- class B/cta :** ICAO control area **moa:** Military operations area
- class C/tma :** ICAO Terminal Control Area **other:** Other areas
- rstc:** Restricted areas

SUA warnings for prohibited airspace cannot be turned off. The 'alt' field, located at the bottom of the SUA settings page, is an altitude buffer which 'expands' the vertical range of the SUA, so you will be notified if you are within a certain range of an SUA. For example, if the buffer is set at 500 feet, and you are 500 feet above or below an SUA, you will not be notified with an alert message; if you are less than 500 feet above or below an SUA and projected to enter it, you will be notified with an alert message. The default setting for the altitude buffer is 200 feet.

To set the warnings or change the altitude buffer:

1. Press and hold **MSG**, and use **○** to display the SUA settings page.
2. Press **CRSR** twice.
3. Rotate **○** to highlight the field you would like to change.
4. Use **●** to change to 'on' or 'off'.
5. To change the altitude buffer, highlight the buffer value, and use **●** and **○** to change the data. Press **ENT** to accept.
6. Press **CRSR** to complete.

```
127.95 127.20
cl B/cta on moa on
cl C/tma on oth on
alt: 100% rstcd on
```

SUA Settings

```
118.90 124.30
cl B/cta on moa on
cl C/tma on oth on
alt: 500% rstcd on
```

Altitude Buffer set at 500 feet.

SECTION 6

UNIT SETTINGS Map Datums

```
127.95 127.20
Map datum
WGS 84
Define user datum?
```

Map Datum Page

```
127.95 127.20
Map datum
USER
Define user datum?
```

Map Datum Page with 'USER' selected.

```
127.95 127.20
dx: 100% dy: -40%
dz: 30% da: 10%
df: -1.00000000e-4 ok?
```

User Datum page.

The GNC 250 NavData® card contains over 100 map datums for you to use when navigating. By default, your unit calculates positions using the WGS-84 map datum. If you are using charts based on another datum, you must set the GNC 250 to use the same datum. Using a map datum that does not match the sectionals you are using can result in significant differences in position information. If you are using maps for reference only, the GNC 250 will provide correct navigation guidance to the waypoints contained in the database, regardless of the datum selected.

To change the map datum to one listed in Appendix F:

1. Press and hold **MSG**, and use **○** to highlight the map datum page.
2. Press **CRSR** twice.
3. Use **○** to highlight the current map datum.
4. Use **●** to change the datum.
5. Press **CRSR** to complete.


To create a user datum:

1. Press and hold **MSG**, and use **○** to highlight the map datum page.
2. Press **CRSR** twice.
3. Use **○** to highlight 'Define user datum?'. Press **ENT**.
4. Enter the five parameters of the map datum using **●** and **○**. Press **ENT** to accept a field. The signs of each value (+/-) should follow the convention: WGS84-local geodetic system.
5. Use **○** to highlight 'ok?', and press **ENT**.
6. To activate the user datum, select 'USER' on the map datum page as described above.

The last page available under the GNC 250's setup menu is the **I/O setup page**. The I/O setup page lets you configure the GNC 250 to output to a RS-232 mapping device or a PC (with the optional GARMIN PC Kit or other mapping software) and select the appropriate baud rate. The I/O setup page only provides access to I/O channel 2 output. For information on using I/O channel 1, please see your GNC 250 installation manual. The input option for channel 2 is intended for future interfacing capabilities and is not a selectable option at this time.

To change the output settings for I/O channel 2:

1. Press and hold **MSG**, and rotate **○** until the I/O setup page is displayed.
2. Press **CRSR** twice, and rotate **●** to select 'off' or 'plotting' for output to a RS-232 device.
3. Rotate **○** to advance the cursor to the baud rate field.
4. Use **●** to select the desired baud rate (300,1200, 2400, 4800 or 9600).
5. Press **CRSR** to finish.

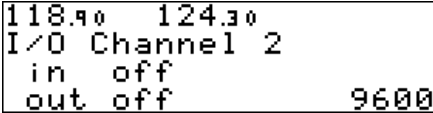

```
118.90 124.30
I/O Channel 2
in off
out off          9600
```

I/O Page Settings

Appendix A NavData® and User Data Installation and Operation


The NavData card supplied with your GNC 250 can be installed or removed when the GNC 250 is on or off. Insert the card with the thumb tab at the top, and the beveled corner at the bottom. If the NavData card is not present when the unit is powered on, you will receive a 'No Jeppesen database' message on the database confirmation page, and you will only be able to use user waypoints for navigation. If the NavData card is removed during operation, a 'No data card present' warning will appear, asking you to reinsert the data card within 30 seconds. If the card is not replaced within 30 seconds, the GNC 250 will automatically reinitialize. You may also reinitialize the unit manually by pressing ENT.

An optional **user data card** can be used to make a backup of user waypoints, routes, etc. and transfer information to another GNC 250.

To save user data to the user data card:

1. Install the user data card.
2. Rotate  to highlight 'Save user data?'. Press  to confirm.


The message 'Saving to card' is displayed while the GNC 250 transfers all user data to the User Data card. It may take a few minutes to complete the transfer. When all user data is transferred, the GNC 250 will instruct you to turn the unit off, remove the user card and insert the Jeppesen NavData card. After this is complete, the GNC 250 is ready for normal operation.

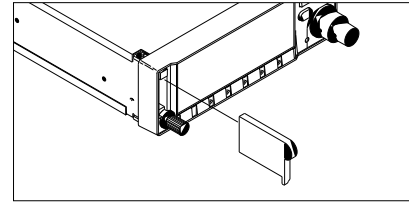

Insert the card with the thumb tab at the top, and the beveled corner on the bottom right.

```
122.77 118.10
No data card present
Reinit in 30 seconds
or ENT to reinit
```

Data Card Warning



```

118.95  121.75
User card transfer
Restore user data?
Save user data?

```



Data Transfer Page

```


118.95  121.75
Restore from card
all data
Replace? Update? ok?

```




*Restore Data Page***To restore user data from a user data card to the GNC 250:**

1. Install the user data card.
2. Rotate  to highlight 'Restore user data?'.
3. Press .

The GNC 250 will ask you which type of data to replace. You may choose checklists, scheduler messages, user waypoints, proximity waypoints, routes, waypoint comments, or all data.

4. Rotate  to select the type of data to replace.

You may either replace or update the information in the database. Replacing the data will replace **ALL** user data with the data from the card. Updating the data will not delete unrelated material, but will only change what is necessary to use the data received from the user data card.

5. Rotate  to select either 'Replace?' or 'Update?'.
6. Press  to begin transferring data to the GNC 250. The GNC 250 will now transfer all of the data requested. This may take a few minutes.
7. To continue with more data transfer types, repeat steps 4, 5 and 6. Otherwise, press  when 'ok?' is highlighted.
8. Turn the GNC 250 off and replace the user data card with a NavData card. The GNC 250 is now ready for normal operation.


Appendix B

Installation, Removal and Maintenance of the GNC 250

The aviation rack is designed to allow easy removal of the GNC 250. This enables you to use the unit at home to create routes, interface to a PC, etc. using an optional AC adapter.

To install the GNC 250 into the aviation rack:

1. Insert a 3/32" allen wrench in the small hole adjacent to the dual knob.
2. Rotate the wrench counterclockwise until it stops to ensure the pawl latch is in the proper position.
3. Insert the GNC 250 into the aviation rack and rotate the wrench clockwise to secure the unit. To ensure proper connector seating, gently press on the left side of the unit until tightened.

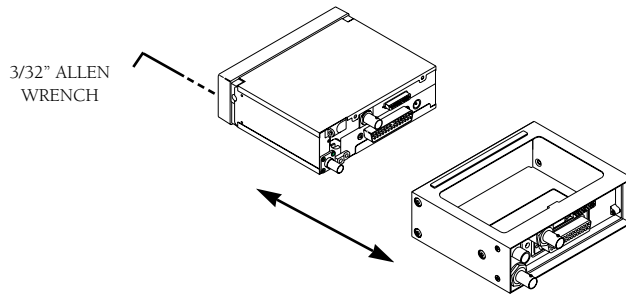


To remove the GNC 250 from the aviation rack:

1. Insert a 3/32" allen wrench in the small hole adjacent to the dual knob.
2. Rotate the wrench counterclockwise until the GNC 250 can be removed from the rack.

The GNC 250 is built to exacting standards and does not require user maintenance. If the faceplate and lens require cleaning, use a soft cloth and non-abrasive cleaner.

*The user data is maintained by an internal battery with a projected life of 3 to 5 years. If the GNC 250 detects a low memory battery, you will be informed with the message 'Memory battery low'. Failure to have the battery replaced may result in loss of data each time you turn your unit off. This will **greatly** increase satellite acquisition time and no user data will be saved. This condition will be accompanied by the message 'Stored data lost'.*

The GNC 250 contains a crystal oscillator which may drift after many years of operation. If the unit detects excessive oscillator drift, you will be informed with the message 'Osc needs adjustment'. When this occurs, contact an authorized GARMIN service center for service. Failure to do so may result in severely degraded acquisition performance.



```

118.90 122.95
Selct operatins mode
Normal
ok?
  
```

Operating Mode Page

```

118.95 121.75
Selct operatins mode
Simulator
ok?
  
```

Selecting the simulator mode.




```

118.90 122.95
AMERICAS VFR SUA
eff 14-sep-95 (9510)
exp 12-oct-95 ok?
  
```

Database Confirmation Page

The GNC 250's simulator mode allows you to plan and practice flights in your home and office using an optional remote battery pack or AC adapter. The simulator is not accessible when the GNC 250 is running off the master avionics switch. All waypoint and route planning done in simulator mode will be saved in the unit's internal memory.

To operate the GNC 250 in simulator mode:

1. Turn the unit on by rotating the  knob clockwise. The welcome page will appear while the unit conducts a self test. Once the self test is complete, the welcome page will be replaced by the operating mode page.
2. Rotate  to move the flashing cursor over the operating mode field ('Normal').
3. Rotate  to select 'Simulator' and press the **ENT** key. The cursor will advance to the 'ok?' prompt.
4. Press **ENT** to confirm.

Once the GNC 250 has been placed in simulator mode, the database confirmation page will appear, showing the operating dates, cycle number and database type available.

To acknowledge the database information:

1. Press **ENT**.

After the database has been acknowledged, the initial position reference page will appear, where you may specify the starting position for your simulated trip. You can define the initial position by entering a waypoint identifier in the reference field, or by manually entering coordinates in the lat/lon field.



To enter an initial position reference by waypoint identifier:

1. Rotate to highlight the waypoint identifier field.
2. Use and to spell out the identifier of the desired airport, navaid or user waypoint.
3. Press to confirm the identifier. The waypoint confirmation page will appear, displaying the waypoint's position.
4. Press to confirm the 'ok?' prompt.

The position page will now appear, and you may now use most of the GNC 250 navigation features for practice and planning. You'll also receive a 'Do not use for nav' message to remind you that the simulator mode should never be used for actual navigation. During simulator operation, you will be able to enter a ground speed from the CDI page, and define a course to a destination from the direct-to confirmation page. Altitude may only be entered by using the VNAV function available from the NAV menu 1 page (see page 22).

To enter a ground speed from the CDI page:

1. Press and rotate to display the CDI page.
2. Press twice to activate the cursor in the GPS window.
3. Rotate to highlight the ground speed field.
4. Use and to enter the desired speed. Press to accept, and to finish.

To exit the simulator mode, the GNC must be turned off by rotating the knob counter-clockwise until the unit shuts down. All waypoints and routes created in simulator mode will be retained in the GNC 250's internal memory.

```
118.90 122.95
Init Posn ref:L45__
N35°19.44' W118°59.75'
ok?
```

Entering an initial position reference.

```
118.90 122.95
No actv wpt gs : 0%
dis -----% trk ---°
----->----- eta:!
```

Enter simulated ground speed from the CDI page.

```
122.95 118.90
go to apt:KICT
N37°39.00' W097°25.99'
auto crs:220° ok?
```

Enter a simulated course from the direct-to confirmation page. The GNC 250 will set the course between route legs automatically when simulating navigation.



Appendix D

GNC 250 Messages and Abbreviations

The GNC 250 uses the Message Page to communicate important information to you. Some messages are advisory in nature, others are warnings that may require your intervention. This appendix provides a complete list of GNC 250 messages and their meanings.

- Altitude input fail** - The altitude serializer input is not available for the GNC 250. Check the I/O settings and/or the serializer installation. If enough satellites are available for a 3D position fix, no pilot action is required, providing no RAIM warnings are present. If only a 2D fix is possible, the pilot should maintain the GPS altitude within 1,000 feet of the pressure altitude from the position page.
- Arrival at _____** - Your craft has entered the arrival alarm circle for the indicated waypoint.
- Arrvl at offset _____** - Your craft has entered the arrival alarm circle for the indicated waypoint offset by the parallel track distance.
- Battery low** - The optional remote battery pack is low on power and limited operating time remains. The battery should be recharged for continued operation.
- Battery rqrs service** - A problem has been detected in the optional remote battery pack. The battery should be serviced at an authorized GARMIN service center.
- Cannot chng actv wpt** - An attempt has been made to modify the position of the 'active to' or 'active from' waypoint. The GNC 250 will not allow the modifications.
- Cannot nav lockd rte** - An attempt has been made to activate a route containing a locked waypoint. The GNC 250 cannot perform navigation in this situation.
- Cannot ofst goto rte** - An attempt has been made to engage the offset navigation feature while the GNC 250 is navigating using a single waypoint route. The GNC 250 will not allow offset navigation in this situation.
- Checklist is full** - The selected checklist is full. No new items can be added until existing items are deleted.
- Collecting data** - The GNC 250 is collecting orbital data while searching the sky. The antenna should have a good view of the sky and the GNC 250 should be allowed to finish data collection before turning the unit off.
- COM failed** - The comm in the GNC 250 has failed. Take the unit to an authorized GARMIN service center immediately.



- Comment memory full** - The waypoint comment memory is full. You must delete existing waypoint comments before adding new ones.
- Configuration reset** - The GNC 250 has detected a failure in its installation configuration memory. Data from the user memory has been used to reset the configuration. Check the installation settings for correctness. If the message persists, the unit is not usable and should be taken to an authorized service center for repair.
- Data card failed** - The GNC 250 has detected a problem with the data card. The data is not usable and the card should be returned to Jeppesen or an authorized GARMIN service center.
- Data card write fail** - The user data card failed to program. The card should be returned to an authorized GARMIN service center.
- Degraded accuracy** - The GNC 250 has detected poor satellite geometry while RAIM is not available. Additional cross-checking with a secondary navigation source should be performed to verify the integrity of the GPS position.
- Do not use for nav** - The GNC 250 is in the simulator mode and must not be used for actual navigation.
- EEPROM write fail** - The GNC 250 has detected a failure while programming its installation configuration memory. The unit is not usable and should be taken to an authorized service center.
- Final altitude alert** - The suggested altitude is within 1000 feet of the final altitude entered on the VNAV Planning page.

Fuel/Air input fail

- The fuel and/or air data input is not available to the GNC 250. Check the I/O settings or fuel/air data system installation.

Inside SUA

Invalid CPA wpt _____

- You have entered a Special Use Airspace.
- The closest point of approach cannot be created from the waypoint entered on the CPA Page. This occurs when the computed point does not fall on one of the route legs, or when a unique waypoint name for the closest point of approach cannot be found.

Invalid copy route

- A non-empty route was selected for a copy operation. A route must be empty before another route can be copied to it.

Invalid CPA route

- The selected route contains less than two waypoints and cannot be used for CPA operations.

Invalid SAR route

- The selected route does not contain exactly two waypoints and cannot be used for SAR operations.



- Leg not smoothed** - The upcoming leg is too short for smooth waypoint transitions. Expect a rapid change in the CDI.
- Memory battery low** - The battery that sustains user memory is low and should be replaced by an authorized GARMIN service center as soon as possible. Failure to do so may result in loss of stored data, including all user waypoints and routes.
- Near SUA < 2 nm** - Your position is within 2 nautical miles of an SUA, and your current course will **not** take you inside.
- Need alt - press NAV** - The GNC 250 needs altitude input in order to start and/or continue 2D navigation. Press the NAV key and enter your antenna altitude on the Position page. The altitude you enter should be as accurate as possible. An inaccurate altitude will directly translate into inaccurate position information.
- Offset nav cancelled** - Offset navigation has been cancelled due to a direct-to operation or modification of the active route.
- Offset nav in effect** - Offset navigation mode is in effect.
- Ofst too big for rte** - The parallel track distance is too large for the active route.
- Osc needs adjustment** - The GNC 250 has detected excessive drift in its internal crystal oscillator which may result in longer acquisition time. The unit should be taken to an authorized service center immediately.
- Poor GPS coverage** - The GNC 250 cannot acquire sufficient satellites necessary to provide navigation.
- Prox alarm-press NAV** - Your craft has penetrated the alarm circle of a proximity waypoint. Press NAV to see the bearing and distance to the proximity waypoint.
- Proximity overlap** - The circles defined by two proximity waypoints overlap. When entering the area of the overlap, the GNC 250 will warn you of the closest proximity waypoint, but not both. You should be certain this condition is desirable.
- Proximity wpt locked** - At least one proximity waypoint is locked because the waypoint has been removed from the Jeppesen NavData®, the data card is missing, or the data card has failed.
- Proximity wpt moved** - One or more proximity waypoints were moved at least 0.33 arc minutes due to a database change.
- Proximty wpt deleted** - One or more proximity waypoints were deleted while receiving data from the PC Interface Kit.
- Pwr down and re-init** - The GNC 250 is unusable until power has been cycled and the unit re-initialized. Abnormal satellite conditions may exist.



- RAIM not available** - The GNC 250 is unable to cross-check its position using RAIM. You may continue to navigate using visual flight rules. Your position should be verified every 15 minutes using other navigation sources. If you have selected a CDI scale other than 'Auto', selecting a larger CDI scale may remove the conditions causing this message.
- RAIM position warn** - RAIM has detected position errors. If you have selected a CDI scale other than 'Auto', selecting a larger CDI scale may remove the conditions causing this message.
- RAM failed** - The GNC 250 has detected a failure in its internal memory. If the message persists, the GNC 250 is unusable and should be taken to an authorized GARMIN service center.
- Rcvr needs service** - The GNC 250 has detected a condition requiring service in the receiver hardware. The GNC 250 should be taken to an authorized GARMIN service center.
- Ready for navigation** - The GNC 250 is ready for navigation.
- Received invalid wpt** - A waypoint was received in an upload operation that has an invalid identifier or position.
- Receiver failed** - The GNC 250 has detected a failure in the receiver hardware. If the message persists, the GNC 250 is unusable and should be taken to an authorized GARMIN service center.
- Remote ENT key stuck** - The remote ENT key is stuck in the 'pressed' state. Check the installation.
- Remote XFR key stuck** - The remote XFR key is stuck in the 'pressed' state. Check the installation.
- ROM failed** - The GNC 250 has detected a failure in its permanent memory. If this message occurs, the unit is unusable and should be taken to an authorized GARMIN service center.
- Route is empty** - An attempt has been made to activate an empty route.
- Route is full** - An attempt has been made to add more than 31 waypoints to a route. The GNC 250 will not allow more than 31 waypoints per route.
- Route wpt deleted** - One or more route waypoints were deleted while receiving data from the optional PC150 Interface Kit.
- Route wpt locked** - At least one route waypoint is locked because the waypoint has been removed from the Jeppesen NavData®, the data card is missing, or the data card has failed.
- Route wpt moved** - One or more route waypoints were moved at least 0.33 arc minutes due to a database change.

**Searching the sky**

- The GNC 250 is in the search-the-sky mode. Allow the unit to complete data collection before turning it off.

Start altitude chng

- The altitude change entered on the VNAV Planning page is about to begin.

Steep turn ahead

- This message appears approximately 90 seconds prior to a turn that requires a bank angle in excess of 25 degrees in order to stay on course. Turn anticipation will not be provided for the turn.

Stored data lost

- Stored user data, including waypoints, routes and satellite orbital data have been lost due to a low memory battery or inadvertent master reset.

Stuck mic/tx disabled

- The microphone/headsets have been transmitting continuously for 35 seconds, and the transmitter has been disabled. Releasing the transmit key will allow you to transmit again. If this message persists, check the installation.

SUA ahead < 10 min

- The projected course and current speed will take you inside an SUA within the next 10 minutes.

SUA near & ahead

- Your position is within two nautical miles of an SUA and your current course will take you inside.

Timer expired

- The approach timer has expired.

User data RX started

- Data receive operations have started.

Usr data TX complete

- Data transmit operations are complete.

VNAV cancelled

- The VNAV function has been cancelled due to a change in the active route.

WGS 84 datum selectd

- The system map datum was changed to WGS 84 because the selected map datum has been removed from the NavData card, the data card is missing, or the data card has failed.

Wpt comment locked

- At least one waypoint comment is locked because the waypoint has been removed from the Jeppesen NavData®, the data card is missing, or the data card has failed.

Wpt exists _____

- You have entered a waypoint name on the AutoStore™ Page or User Waypoint Catalog Page that already exists in memory. Enter a waypoint name that does not exist.

Wpt memory full

- The waypoint memory is full. You should delete unused waypoints to make room for new waypoints.




This section of Appendix D provides a complete list of GNC 250 abbreviations and their meanings.

ALT-	Altitude	DIS-	Distance To Waypoint
APP-	Approach	DME -	Distance Measuring Equipment
APR-	Approach	DOP-	Dilution of Precision
APT-	Airport Waypoint	DTK-	Desired Track
ARV-	Arrival	ELEV-	Elevation
ATF-	Aerodrome Traffic Frequency	ENDUR-	Endurance
ATS-	Automatic Terminal Information Service (ATIS)	EPE-	Estimated Position Error
AVGS-	Aviation Gas	ESA-	Enroute Safe Altitude
AZM-	Azimuth (bearing)	ETA-	Estimated Time of Arrival
BRG-	Bearing	ETE-	Estimated Time Enroute
CAS-	Calibrated Airspeed	FLOW-	Fuel Flow Rate
CDI-	Course Deviation Indicator	FOB-	Fuel On Board
CL B-	Class B	FPM-	Feet Per Minute
CL C-	Class C	FR-	From
CLR-	Clearance Delivery	FSS-	Flight Service Station
CPA-	Closest Point of Approach	FT-	Feet
CTA-	ICAO Control Area	FT-	Full Time
CTAF-	Common Traffic Advisory Frequency	GL-	Gallons
CTF-	Common Traffic Advisory Frequency	GND-	Ground
CTS-	Course To Steer	GPS-	Global Positioning System
CUM-	Cumulative	GS-	Ground Speed
DALT-	Density Altitude	HDG-	Heading
DEG-	Degrees	HG-	Inches of Mercury
DEP-	Departure	IALT-	Indicated Altitude
		ILS-	Instrument Landing System
		IG-	Imperial Gallons
		INT-	Intersection Waypoint

SECTION
D

MESSAGES &
ABBREVIATIONS



JET A-	Jet Fuel - Type A	NDB-	NDB Waypoint
JET B-	Jet Fuel - Type B	NM-	Nautical Miles
KH-	Kilometers Per Hour	NP-	Non-Precision
KM-	Kilometers	NR-	Nearest
KT-	Knots	OBS-	Omni-directional Bearing Select (Inbound Course Select)
LB-	Pounds	OTH-	Other
LCL-	Local	°C-	Degrees Celsius
LEN-	Length	°F-	Degrees Fahrenheit
LFOB-	Leftover Fuel On Board	PC-	Pilot Controlled
LFLOW-	Left Fuel Flow	POSN-	Position
LOC-	Localizer	PRES-	Barometric Pressure (Altimeter Setting)
LT-	Liters	PROX-	Proximity
MAG VAR-	Magnetic Variation	PRX-	Proximity
MB-	Millibars Of Pressure	PT-	Part Time
MF-	Mandatory Frequency	PTX-	Pre-Taxi
MH-	Statute Miles Per Hour	PWR-	Power
MI-	Statute Miles	RDR-	Radar
MIC-	Microphone	REQ-	Required
MIN-	Minimum	RF-	Reference
MIN -	Minutes	RFLOW-	Right Fuel Flow
MOA-	Military Operations Area	RNG-	Range
MPM-	Meters Per Minute	RNWX-	Runway
MPS-	Meters Per Second	RSTCD-	Restricted
MSA-	Minimum Safe Altitude	RSV-	Reserves
MT-	Meters		
MUL-	Multicom		



RTE-	Route	USR-	User Waypoint
RX-	Receive Only	UTC-	Universal Time Coordinated (GMT/ Zulu)
SAR-	Search And Rescue	VN-	VNAV or Vertical Navigation
SEC-	Seconds	VNAV-	Vertical Navigation
SEQ-	Sequence	VOR-	VOR Waypoint
SGL-	Signal	WPT-	Waypoint
SLCT-	Select	WX-	Weather
SRFC-	Surface	XFR-	Transfer
STR-	Steer To		
TACAN-	TACTical Air Navigational Aid		
TAS-	True Airspeed		
TAT -	Total Air Temperature		
TEMP-	Temperature		
TMA-	ICAO Terminal Control Area		
TRK-	Track Angle		
TRN-	Turn Angle		
TRSA-	Terminal Radar Service Area		
TWR-	Tower		
TX-	Transmit Only		
U-	UTC Time		
UNI-	Unicom		
URA-	User Range Accuracy		
USER-	User Waypoint		



*** Subject to accuracy degradation to 100m 2DRMS under the US DOD-imposed Selective Availability Program.*

```
122.77 118.10
Turning off 30 scnds
Press any key to
continue navigation
```

Whenever the GNC 250 is connected to the optional remote battery pack and power from the master switch is lost, the unit will revert to battery power. To continue navigation, press any key when the power down page appears.

Appendix E Specifications

PHYSICAL

Size:	6.25"W x 5.8"D x 2"H (159mm x 147mm x 51mm)
Weight:	39 ounces (1.11kg)
Rack Size:	6.32"W x 5.64"D x 2"H (161mm x 143mm x 51mm)
Rack Weight:	11 ounces (0.31kg)

POWER

Input:	10-15V DC with power cable (aircraft power) Optional remote battery pack 115V or 230V AC w/ optional adapter
--------	--

ENVIRONMENTAL

Temperature:	-4° F to 158° F (-20°C to 70°C) Operating -67°F to 185°F (-55°C to 85°C) Storage
--------------	---

PERFORMANCE

Comm:	760 channel, aviation band 118-136.975 MHz 5 watt minimum transmit power
Receiver:	MultiTrac 8™
Acquisition Time:	2-2.5 minutes (typical) 15 seconds (warm start, with ephemeris)
Update Rate:	1 per second, continuously
Accuracy:	15 meters (49ft.) RMS**
Dynamics:	999 knots velocity, 3g acceleration

INTERFACES

ARINC 429, Plotting (NMEA 0183 V2.0), Aviation, PC Interface, Altitude Serializer, Fuel Sensor, Fuel/Air Data Computer

Appendix F

Map Datums



ADINDAN	Ethiopia, Mali, Senegal, Sudan	DOS 1968	Gizo Island (New Georgia Islands)
AFGOOYE	Somalia	EASTER ISLAND 1967	Easter Island
AIN EL ABD 1970	Bahrain Island, Saudi Arabia	EUROPEAN 1950	Austria, Belgium, Denmark, Finland, France, Germany, Gibraltar, Greece, Italy, Luxembourg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland
ANNA 1 ASTRO 1965	Cocos Islands		
ARC 1950	Botswana, Lesotho, Malawi, Swaziland, Zaire, Zambia, Zimbabwe	EUROPEAN 1979	Austria, Finland, Netherlands, Norway, Spain, Sweden, Switzerland
ARC 1960	Kenya, Tanzania		
ASCENSION IS 1958	Ascension Island	FINLAND HAYFORD 1910	Finland
ASTRO B4 SOROL ATOLL	Tern Island	G. SEGARA	Borneo
ASTRO BEACON "E"	Iwo Jima Island	GANDAJIKA BASE	Republic of Maldives
ASTRO DOS 71/4	St. Helena Island	GEODETIC DATUM 1949	New Zealand
ASTRONOMIC STN 1952	Marcus Island	GGRS 87	Greece
AUSTRALIAN GEOD 1966	Australia, Tasmania Island	GUAM 1963	Guam Island
AUSTRALIAN GEOD 1984	Australia, Tasmania Island	GUX 1 ASTRO	Guadalcanal Island
AUSTRIA NS	Austria	HERAT NORTH	Afghanistan
BELGIUM 1950	Belgium	HJORSEY 1955	Iceland
BELLEVUE (IGN)	Efate and Erromango Islands	HONG KONG 1963	Hong Kong
BERMUDA 1957	Bermuda Islands	HU-TZU-SHAN	Taiwan
BOGOTA OBSERVATORY	Colombia	INDIAN BNGLDSH NEPAL	Bangladesh, India, Nepal
BUKIT RIMPAH	Indonesia	INDIAN MEAN VALUE	India
CAMP AREA ASTRO	Antarctica	INDIAN THAILAND VIETN	Thailand, Vietnam
CAMPO INCHAUSPE	Argentina	INDONESIA 74	Indonesia
CANTON ASTRO 1966	Phoenix Islands	IRELAND 1965	Ireland
CAPE	South Africa	ISTS 073 ASTRO 1969	Diego Garcia
CAPE CANAVERAL	Florida, Bahama Islands	JOHNSTON ISLAND 1961	Johnston Island
CARTHAGE	Tunisia	KANDAWALA	Sri Lanka
CH-1903	Switzerland	KERGUELEN ISLAND	Kerguelen Island
CHATHAM 1971	Chatham Island (New Zealand)	KERTAUI 1948	West Malaysia, Singapore
CHUA ASTRO	Paraguay	L.C. 5 ASTRO	Cayman Brac Island
CORREGO ALEGRE	Brazil	LIBERIA 1964	Liberia
DANISH GI 1934	Denmark	LUZON MEAN VALUE	Philippines
DJAKARTA (BATAVIA)	Sumatra Island (Indonesia)	LUZON MINDANAO IS	Mindanao Island

**LUZON PHILIPPINES****MAHE 1971****MARCO ASTRO****MASSAWA****MERCHICH****MIDWAY ASTRO 1961****MINNA****NAD27 ALASKA****NAD27 BAHAMAS****NAD27 CANADA****NAD27 CANAL ZONE****NAD27 CARIBBEAN****NAD27 CENTRL AMERICA****NAD27 CONUS****NAD27 CUBA****NAD27 GREENLAND****NAD27 MEXICO****NAD27 SAN SALVADR IS****NAD83****NAHRWAN MASIRAH IS****NAHRWAN SAUDI ARABIA****NAHRWAN UNITD ARAB E****NAPARIMA BWI****NETHERLAND TRIAG '21****NOU TRIAG FRANCE****NOU TRIAG LUXEMBOURG****OBSERVATORIO 1966****OLD EGYPTIAN****OLD HAWAIIAN KAUI****OLD HAWAIIAN MAUI****OLD HAWAIIAN MEAN****OLD HAWAIIAN OAHU**

Philippines

(excluding Mindanao Isl.)

Mahe Island

Salvage Islands

Eritrea (Ethiopia)

Morocco

Midway Island

Nigeria

North American 1927- Alaska

Bahamas (excluding San Salvador Island)

Canada (including Newfoundland Island)

Canal Zone

Caribbean (Barbados, Caicos Islands, Cuba, Dom. Rep., Grd. Cayman, Jamaica, Leeward and Turks Islands)

Central America (Belize, Costa Rica, El Salvador, Guatemala, Honduras, Nicaragua)

Mean Value (CONUS)

Cuba

Greenland (Hayes Peninsula)

Mexico

San Salvador Island

North American 1983- Alaska, Canada, Central America, CONUS, Mexico

Masirah Island (Oman)

Saudi Arabia

United Arab Emirates

Trinidad and Tobago

Netherlands

France

Luxembourg

Corvo and Flores Islands (Azores)

Egypt

Kauai

Maui

Mean Value

Oahu

OMAN**ORD SRV GRT BRITAIN****PICO DE LAS NIEVES****PITCAIRN ASTRO 1967****PORTUGUESE 1973****POTSDAM****PROV SO AMERICAN '56****PROV SO CHILEAN 1963****PUERTO RICO****QATAR NATIONAL****QORNOQ****REUNION****ROME 1940****RT 90****SANTO (DOS)****SAO BRAZ****SAPPER HILL 1943****SCHWARZECK****SOUTH AMERICAN 1969****SOUTH ASIA****SOUTHEAST BASE****SOUTHWEST BASE****TANANARIVE OBSV 1925****TIMBALAI 1948****TOKYO****TRISTAN ASTRO 1968****USER****VITI LEVU 1916****WAKE-ENIWETOK 1960****WGS 72****WGS 84****YACARE****ZANDERIJ**

Oman

England, Isle of Man, Scotland, Shetland Islands, Wales

Canary Islands

Pitcairn Island

Portugal

Germany

Bolivia, Chile, Colombia, Ecuador, Guyana, Peru, Venezuela

South Chile

Puerto Rico & Virgin Isl.

Qatar

South Greenland

Mascarene Island

Sardinia Island

Sweden

Espirito Santo Island

Sao Miguel, Santa Maria Islands (Azores)

East Falkland Island

Namibia

Argentina, Bolivia, Brazil, Chile, Colombia, Ecuador, Guyana, Paraguay, Peru, Venezuela, Trinidad/Tobago

Singapore

Porto Santo and Madeira Islands

Faial, Graciosa, Pico, Sao Jorge and Terceira Islands (Azores)

Madagascar

Brunei and East Malaysia (Sarawak and Sabah)

Japan, Korea, Okinawa

Tristan da Cunha

User datum

Viti Levu Island/Fiji Islands

Marshall Islands

World Geodetic System 1972

World Geodetic System 1984

Uruguay

Surinam



Appendix G

Index

A			
Abbreviations	91-93	CDI	4-6, 70
Accessory list	iii	CDI page	4-6, 9-12, 70
Activating a direct-to	5, 58-60	CDI sensitivity setting	72
Activating a route	63	Channel 2 I/O	79
Activating a route in reverse	63	Checking GPS coverage	16-17, 26
Active frequency	3, 29	Checklists	23, 24
Active to & from waypoints	58	Clear key	viii
Active route page	61, 67	Clock function	25
Adding waypoints to a route	62, 68	Closest point of approach (CPA)	64
Airport comments page	36, 37	Communication features	29-32
Airport communications page	37, 39	Communications pages	29-30, 37-39
Airport runway page	40	Communication frequencies	3, 29
Airport position page	38	Communication window	3
Airport identification page	37	Controlled airspace	38, 54-57
Airport information	34, 36	Copying routes	64
Altitude buffer	77	Creating user waypoints	45, 46
Approach information	37, 40	Cursor key	viii
Approach timer	24, 25	D	
Arrival alarm setting	73	Database	33
AutoStore™	47	Date & time	25
Auto-tune	30, 31	Deleting user waypoints	49
		Deleting routes	63
B		Deleting waypoints from routes	63, 69
Battery Pack	94	Density altitude	20
Battery saver	74	Direct-to key	vii
		Direct-to navigation	58-60
C		DOP	16
Cautions	ii	Downloading data to another GNC 250	81
		Duplicate waypoints	51

E		M	
Editing routes	62-63, 67-69	Magnetic variation	72-73
Editing user waypoints	44,46,49	Maintenance of the GNC 250	83
ENT key	viii	Map datums	78, 95-96
Entering waypoints	35,46	Measurement units	76
EPE	16	Messages	71, 86-90
Emergency channel select	32	MSG key	viii
F		N	
Foreword	i	NAVCOM page	6, 12, 13
Flying the active route	67-70	NavData cards	33, 81-82
Fuel planning	20, 21	Navigation diagram	11
G		NAV Key	vii, 9
Going to a nearest airport	53	NAV menu 1	9, 19-23
GPS planning	26	NAV menu 2	9, 24-27
Ground speed (setting)	85	Nav units	76
I		NDBs	34, 42
Inner knob	viii	NRST key	vii,7,53
Initial position reference page	84-85	Nearest airport	8,76
Installation of the GNC 250	83	Nearest SUA	54-57, 77
Intersections	34, 43	Nearest waypoints	8, 53
I/O Outputs	72	O	
K		Offset navigation	66
Key functions	vii,viii	Outer knob	viii
Knob functions	vii,viii	Operating mode	84
L		P	
Leg/time field	68	Packing list	iii
Locked waypoints	52	Parallel track	66
		Position page	4, 9, 14-15
		Power/volume knob	vii
		Power on (normal)	1
		Power on (simulator)	84
		Proximity Waypoints	33,48

**R**

RAIM prediction	26
RAIM protection	72
Radar information	38
Receiver status	16-17
Removal of the GNC 250	83
Renaming user waypoints	47,49
Restoring user data	81-82
Reversing a route	63
Route catalog page	61
Route comments	61
Route key	vii
Route navigation	58
Routes	61-70
Runway page	40
Runway surface	40, 73

S

Satellite acquisition	2
Scheduler	27
Search and rescue operations	65
Simulator mode	84
Special Use Airspace (SUA)	54-57
Specifications	94
Standby frequency	3, 29
Storing user data	81
SUA alert page	54
SUA altitude fields	55
SUA messages	56
SUA settings page	57, 77
Sunrise/sunset planning	28
Quelch	vii, 30

T

Table of contents	v-vi
Time	25
Transfer key	viii
Trip planning	19
Trip timer	25,75
Trip timer settings	75
True air speed	20
Turn anticipation	70

U

Unit settings	71-79
Updating user data	80
User comments	81
User data cards	80
User map datums	79
User waypoints	33,44,49

V

Vertical navigation (VNAV)	22,23
Volume	31
VORs	7,34,41

W

Warranty	iv
Waypoint comments page	50
Waypoint confirmation page	51
Waypoint entry	35
Waypoint identification page	35
Waypoint information	35-52
Waypoint key	vii,33
Waypoint list	49
Waypoint menu	34

SECTION
G

INDEX

Waypoint scanning	52
Waypoint sequencing	69-70
Waypoints with comments	50
Winds aloft	22



© 1995 GARMIN International
9875 Widmer, Lenexa, KS 66215, USA

GARMIN/Europe LTD
Robert House, Station Approach Romsey, Hampshire SO51 8DU UK

Part No. 190-00067-50 Rev. A