

 


Quick Reference Guide

POWER ON SEQUENCE



Status Page

DATABASE INFO
N America
City Data

Position Page




- Press and hold **POWER** key to turn the unit on.
- Status Page will appear while the unit gathers satellite information.
- Once operational, the Position Page will replace the Status Page.

POWER OFF

WELCOME TO THE
GARMIN
GPS II
PLUS
SOFTWARE 3.02
COPYRIGHT
1997-1998
GARMIN CORP


- Press and hold **POWER** key for three seconds.

CONTRAST


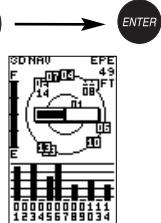


- From Satellite Status Page, press **RIGHT** or **LEFT** on the **ROCKER KEYPAD**.
- Press **ENTER** to confirm.

MAIN PAGE SEQUENCE

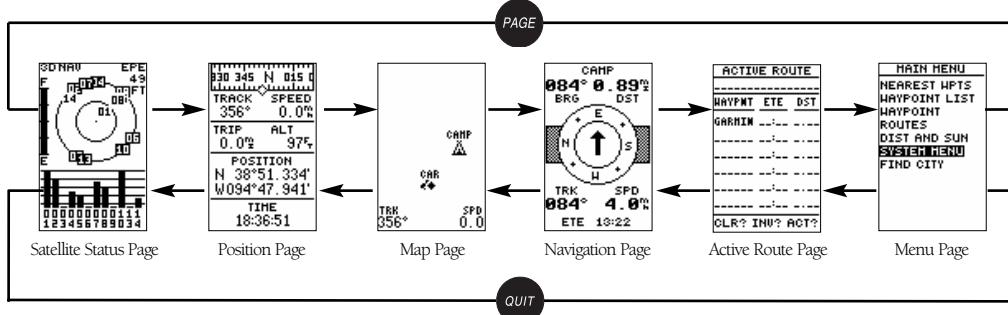

DATA ENTRY

 
 


- To start data entry, highlight the desired field using the rocker **KEYPAD**.

- Press **ENTER** to access the data field.

- Use the **ROCKER KEYPAD** to select alphanumeric characters and menu options.

  - Press **ENTER** to confirm.





- To start data entry, highlight the desired field using the rocker **KEYPAD**.

- Press **ENTER** to access the data field.

- Use the **ROCKER KEYPAD** to select alphanumeric characters and menu options.

- Press **ENTER** to confirm.

 SCREEN ORIENTATION

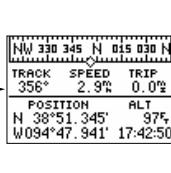


- From any page (except initial power on) press and hold the **PAGE** key.

- Repeat sequence to switch back to original display.

MARK POSITION



 
- Press **MARK** to capture present location.
- Press **ENTER** to confirm.



GO TO WAYPOINT



 
- Press the **GOTO** key.
- Select the waypoint name from the list.
- Press **ENTER** to confirm the selection.



TRACBACK NAVIGATION



 - Press the **GOTO** key.
- Select the **TRACBACK** at the bottom of the page.
- Press **ENTER** to confirm the selection.



GPS II PLUS KEYPAD USAGE

	Turns the unit on and off and controls the 3-level backlighting.
	Scrolls the main pages in sequence and returns display from a submenu. Press and hold to change screen orientation.
	Returns display to a previous page or restores a data field's previous value.
	Press to capture you present position as a waypoint.
	Displays the GOTO waypoint list, allowing you to select a destination waypoint.
	Activates highlighted data fields and confirms selections and data entry.
	Adjusts the map scale up and down.
	Controls the movement of the cursor and is used to select menu options and enter data.

OPERATION FLOWCHART

