


StreetPilot[®] c320

quick reference guide



Step 1: Configure Your c320

Press and hold the Power button  on the side of the unit to turn it on. Follow the on-screen instructions to set up your c320; you only have to do this once.


Step 2: Install Software and Load Maps

Before using your c320, you need to install software on your computer using the DVD-ROM and then load maps on your c320. Refer to the *Setup Guide* for complete instructions.

Step 3: Mount Your c320


To ensure a tight grip, clean and dry your windshield before you mount the suction cup.

1

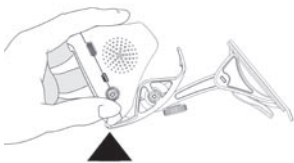


Fit the bottom of your c320 into the cradle of the suction cup mount.

2

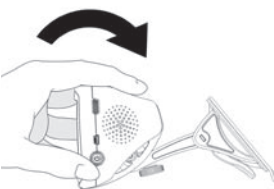

Tilt your c320 back until it snaps in place.

3

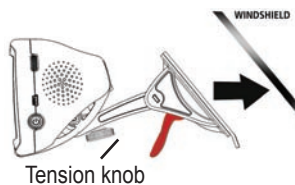


Place the suction cup on the windshield. Flip the lever back, toward the windshield.

Continued on the top of the next column....


Continued from Step 3....

Plug the cable into a receptacle in your vehicle. If necessary, use the tension knob to loosen or tighten the tension in the mount to improve your viewing angle.

Your unit will turn on automatically if you have started your vehicle. To manually turn on your c320, press and hold the Power button  on the side of the unit. Refer to the image on the back of this sheet.

Step 4: Find Your Destination

1

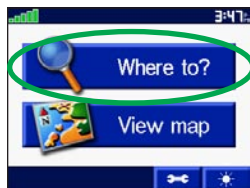

Touch **Where to?**

2



Select a category. Touch the arrows to see more categories.

3




Select a destination. Touch the arrows to see more places.

4



Touch .

5

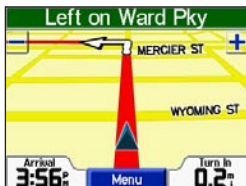


Enjoy the route!

Step 5: Follow Your Route

Follow the route to your destination using the Map page. As you travel, your c320 guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, your c320 recalculates the route and provides new route instructions.

Read the driving instructions at the top of the page.

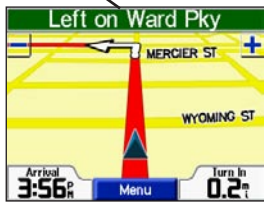

Your route is marked with a red line.



Follow the arrows as you take turns.



A checkered flag marks your destination.

WARNING: For use in vehicles, it is the sole responsibility of the owner/operator of a vehicle with the c320 installed to place and secure the device so it will not interfere with the vehicle operating controls and safety devices, obstruct the driver's view of driving conditions, or cause personal injury in the event of an accident.

NOTICE TO STATE OF CALIFORNIA DRIVERS: California Vehicle Code Section 26708 (a) (1) provides that drivers in California should not use suction mounts on their windshield or side or rear windows. Other Garmin dashboard or friction mounting options should be used. For available accessories, refer to the Garmin Web site at www.garmin.com. Also, refer to the *Owner's Manual* for instructions on using the included mounting disk with the suction cup mount.

Viewing the Map Page



View map

From the Menu page, touch **View map** to open the Map page. The position icon ▲ shows your current location. Touch buttons on the Map page to see additional information.

Touch to zoom out.

Touch **Menu** to return to the Menu page.

Touch **Arrival** or **Speed** to open the Trip Information page.

Touch the text bar to open the Current Route page.


Touch to zoom in.

Touch **Turn In** to open the Next Turn page.


Map Page while Navigating a Route



Trip Information Page

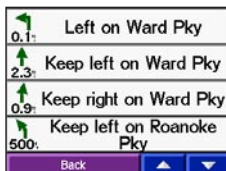

Current Route Page

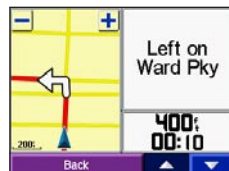

Next Turn Page

Saving Places You Find

1



After you have found a place you want to save, touch **Save**.

2



Touch **OK** in the pop-up window. The place is saved in **My Locations > Favorites**.


Finding Saved Places

1



From the Menu page, touch **Where to? > My Locations > Favorites**.

2

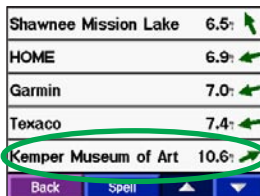

Select a place.


3



Touch **Go!**


Setting a Home Location

1

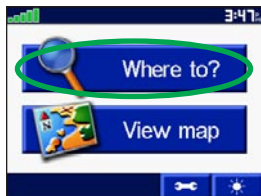

Touch **Where to?**

2

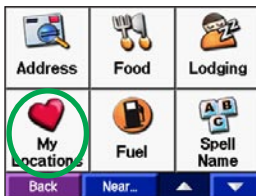

Touch **My Locations**.

3



Touch **Set Home**.

4



Select an option.


Going Home

After you have set your Home location, you can route to it at any time by touching **My Locations** and then **Go Home**.

Changing Your Home Location

Change your Home location by repeating the steps you took to set it.

Adjusting the Backlight Brightness


From the Menu page, touch the brightness button  to adjust the level of the backlight. Touch the minus (-) lightbulb to decrease the backlight brightness or the plus (+) lightbulb to increase the brightness. When you are finished, touch **OK**.



Adjusting the Volume

To adjust the volume, turn the Volume knob, located above the Power button.

Turning the c320 On and Off

Press and hold the Power button  on the side of the unit to turn it on and off.

More Information

For more information about your c320, refer to the *Owner's Manual* located at <http://www.garmin.com/products/sp320/>. Click on the **Manuals** link and then select **Download**.

