


StreetPilot® c330

quick reference guide




Step 1: Mount Your c330

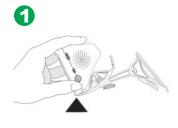


Fit the bottom of your c330 into the cradle of the suction cup mount.



Tilt your c330 back until it snaps in place.

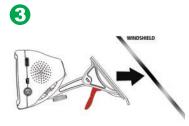

Place the suction cup on your windshield.

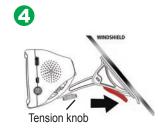

Flip the lever back, toward the windshield.

To ensure a tight grip, clean and dry your windshield before you mount the suction cup. Plug the cable into a receptacle in your vehicle. If necessary, use the tension knob to loosen or tighten the tension in the mount to improve your viewing angle. Your unit will turn on automatically if you have started your vehicle. To manually turn on your c330, press and hold the Power button on the side of the unit. Refer to the image on the back of this sheet.

Step 2: Configure Your c330

The first time you turn on the unit, follow the on-screen instructions to set up your c330. You only have to do this once.

Step 3: Find Your Destination



Touch Where to?



Select a category.
Touch the arrows to see more categories.



Select a destination. Touch the arrows to see more places.



 
Touch God

 
Enjoy the route!

WYOUING S

Step 4: Follow Your Route

Follow the route to your destination using the Map page. As you travel, your c330 guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, your c330 voice announces that you are off-route and then provides new route instructions.







Follow the arrows as you take turns.



A checkered flag marks your destination.


WARNING: For use in vehicles, it is the sole responsibility of the owner/operator of a vehicle with the c330 installed to place and secure the device so it will not interfere with the vehicle operating controls and safety devices, obstruct the driver's view of driving conditions, or cause personal injury in the event of an accident.

NOTICE TO STATE OF CALIFORNIA DRIVERS: California Vehicle Code Section 26708 (a) (1) provides that drivers in California should not use suction mounts on their windshield or side or rear windows. Other Garmin dashboard or friction mounting options should be used. For available accessories, refer to the Garmin Web site at www.garmin.com. Also, refer to the Owner's Manual for instructions on using the included mounting disk with the suction cup mount.

Viewing the Map Page

View map From the current

From the Menu page, touch **View map** to open the Map page. The position icon **\(\rightarrow\)** shows your current location. Touch buttons on the Map page to see additional information.

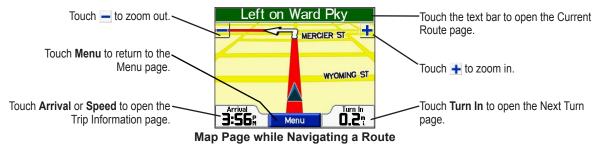



Left on Ward Pky

1.3. Keep left on Ward Pky

1.5. Keep right on Ward Pky

1.5. Keep left on Roanoke

1.5. Roanoke



Trip Information Page

Next Turn Page

 
Setting a Home Location

You can set a Home location for the place you return to most often.









Touch Where to?

Touch My Locations.

Touch Set Home.

Select an option.

Going Home

After you have set your Home location, you can route to it at any time by touching My Locations and then Go Home.

Changing Your Home Location

Change your Home location by repeating the steps you took to set it.

Saving Places You Find



After you have found a place you want to save, touch **Save**.

Kemper Museum of Art and Design Saved to My Favorite Locations Kant 64111 816-561-3737 Back Show Map Save

Touch **OK** in the pop-up window. The place is saved in **My Locations** > **Favorites**.

Finding Saved Places



From the Menu page, touch Where to? > My Locations > Favorites.



Select a place.

 


Touch Gol

Adjusting the Backlight Brightness

From the Menu page, touch the brightness button to adjust the level of the backlight. Touch the minus (-) lightbulb to decrease the backlight brightness or the plus (+) lightbulb to increase the brightness. When you are finished, touch **OK**.





Adjusting the Volume

To adjust the volume, turn the Volume knob, located above the Power button.

Turning the c330 On and Off

Press and hold the Power button on the side of the unit to turn it on and off.

More Information

For more information about your c330, refer to the *Owner's Manual* located at http://www.garmin.com/products/sp330/. Click on the **Manuals** link and then select **Download**.

© Copyright 2005 Garmin Ltd. or its subsidiaries 190-00436-01 Rev. A

Printed in Taiwan



May 2005