

Gateway Tablet PC USERS Guide













Contents

1	Checking Out Your Gateway M1300 Tablet PC	ļ
	Box contents	
	Button panel 3	
	Buttons4	ļ
	Status indicators	
	Power switch side 6	
	Ports side 7	
	Speakers side	
	Back	
	Identifying your model	
	Gateway model number and internal wireless label	
	Gateway serial number	
	Microsoft Certificate of Authenticity	
	Finding your specifications	
	Accessories)
2	Getting Started	7
	Safety instructions	3
	General tips	
	Using the battery	
	Using the AC adapter	
	Basic safety precautions	
	Connecting the AC adapter	
	Protecting from power source problems	1
	Starting your tablet PC	
	Waking up your tablet PC	
	Turning off your tablet PC	
	Restarting (rebooting) your tablet PC	
	Using the display	
	Using the pen	
	Calibration	
	Gestures	
	Pen button	
	Tips	
	Tablet Input Panel (TIP)	
	Key types	
	System key combinations	
	Status indicators	
	Otatas maisators	,

	Using the touchpad	37
	Connecting the modem	
	Connecting to a wired Ethernet network	
	Broadband Internet connections	
	Installing a printer, scanner, or other peripheral device	41
3	Getting Help	12
J		
	Using the tutorials	
	More helpful startup pages and programs	
	Help and Support Center	
	Searching for a topic	
	Do More with Gateway	
	Online help	
	Gateway Web site	
	Using eSupport	52
4	Windows Basics	53
	About Windows XP Tablet PC Edition	
	About the Windows environment	
	Using the desktop	
	Using the Start menu	
	Adding icons to the desktop	
	Identifying window items	
	Working with files and folders	
	Viewing drives	
	Creating folders	
	Copying and moving files and folders	
	Deleting files and folders	65
	Browsing for files and folders	66
	Searching for files	
	Working with documents	
	Creating a new document	
	Saving a document	
	Opening a document	
	Printing a document	
	Keyboard shortcuts	75
5	Using the Internet	77
-	Learning about the Internet	
	Setting up an Internet account	70
	Using the World Wide Web	
	Connecting to a Web site	

	Downloading files	82
	Using e-mail	83
	Sending e-mail	
	Checking your e-mail	84
6	Using Multimedia	85
	Adjusting the volume	86
	Recording and playing audio	
	Playing audio and video files with the Windows Media Player	
	Using the optional diskette drive	
	Using the optional DVD/CD-RW drive	
	Connecting the DVD/CD-RW drive	94
	Inserting a CD or DVD	
	Listening to CDs	
	Playing a DVD	
	Creating CDs	
	Using an external monitor	
	Connecting a digital camera	
	Connecting a digital video camera	. 114
7	Sending and Receiving Faxes	. 115
	Installing Fax	. 116
	Configuring Fax	. 117
	Sending a simple fax	
	Setting up your cover page template	
	Faxing from programs	
	Faxing a scanned document	
	Receiving and viewing a fax	
	Canceling a fax	
	Automatically retry sending a fax	
	Automatically cancelling a fax	. 125
8	Managing Power	. 127
	Battery basics	. 128
	Monitoring the battery charge	
	Recharging the battery	
	Changing batteries	. 131
	Extending battery life	
	Conserving battery power	
	Using alternate power sources	
	Changing power modes	
	Changing power settings	. 135

	Changing the power scheme	
	Changing alarm options	
	Changing advanced settings	
	Activating and using Hibernate mode	.140
9	Travel Tips	.143
	Packing your tablet	
	Traveling by air	
	Modem	
	Radio frequency wireless connections	
	Files	
	Security	
	Power	
	Additional tips	
10	Customizing Your Tablet PC	4.40
10	_	
	Using the display	
	Changing display orientation	
	Adjusting brightness	
	Adjusting the screen and desktop settings	
	Adjusting the screen resolution	
	Changing the colors on your Windows desktop	
	Changing the desktop background	
	Selecting a screen saver	
	Adjusting tablet and pen settings	
	Programming the buttons	
	Using the Motion Dashboard	.160
	Using speech recognition	
	Adding and modifying user accounts	.162
11	Networking Your Tablet PC	165
• •	Benefits of networking	
	Sharing a single Internet connection	
	Sharing drives	
	Sharing peripheral devices	
	Streaming audio and video files	
	Playing multi-player games	
	Selecting a network connection	
	Wired Ethernet network	
	Wireless Ethernet network	
	Using a wired Ethernet network	169

	Ethernet, Fast Ethernet, or Gigabit Ethernet	
	Example wired Ethernet network	
	Equipment you need for a wired Ethernet network	
	Using a wireless Ethernet network	
	Example access point wireless Ethernet network	
	Equipment you need for an access point wireless Ethernet network	
	Example peer-to-peer wireless Ethernet network	
	Equipment you need for a peer-to-peer wireless Ethernet network	
	For more information	
	Using your tablet PC on a network	
	Installing and configuring your tablet PC for Ethernet networking	177
	Turning your wireless Ethernet on or off	177
12	Moving from Your Old Computer	179
	Using the Files and Settings Transfer Wizard	180
	Transferring files	
	Finding your files	
	Transferring Internet settings	
	Setting up your ISP	
	Transferring your e-mail and address book	184
	Transferring your Internet shortcuts	
	Installing your old printer or scanner	
	Installing your old programs	
12	Maintaining Your Tablet PC	197
13	_	
	General Guidelines	
	Display screen	
	Pen	
	Replacing the pen point	
	Caring for your tablet PC	
	Creating an emergency startup diskette	
	Protecting your tablet PC from viruses	
	Managing hard drive space	
	Checking hard drive space	
	Using Disk Cleanup	
	Checking the hard drive for errors	
	Defragmenting the hard drive	
	Backing up files	
	Using the Scheduled Task Wizard	
	Cleaning your tablet PC	
	Cleaning the exterior	
	Cleaning the keyboard	
	Cleaning the tablet PC screen	204

Cleaning the mou	use	204
Using the Restoration Reinstalling device dr Updating device drive Reinstalling programs	are	
Adding and removing Preventing static elec	Tablet PCg a PC Card	218
Front	PC FlexDock	228
Safety guidelines First steps Troubleshooting Audio Battery Device installation Diskette drive Display DVD/CD-RW Driv Cleaning CDs or File management Hard drive Internet Interface/Ports Keyboard Memory Modem Mouse Networks	n	

	Pen	256
	Power	256
	Printer	
	Sound	260
	Video	
	Wireless Ethernet	260
	FAQs	261
	Telephone support	263
	Before calling Gateway Technical Support	263
	Telephone numbers	264
	Tutoring and training	265
	Self-help	265
	Tutoring	
	Training	266
_		
Α	Safety, Regulatory, and Legal Information	267
Ind	dex	279



Checking Out Your Gateway M1300 Tablet PC

This chapter introduces you to the basic features of your tablet PC. Read this chapter to learn:

- How to identify the features of your Gateway tablet PC
- How to locate your tablet PC's model and serial number
- How to locate the Microsoft Certificate of Authenticity
- How to locate the specifications for your tablet PC
- What accessories are available for your tablet PC

Tips & Tricks



To access the contents of this guide, tap Start, All Programs, then tap Gateway Documentation. You can also download an electronic copy from

support.gateway.com/support/manlib/.







Box contents


Your Gateway Tablet PC box includes:

- A pen, plus a spare and several replacement tips
- An AC power adapter and installed battery
- A soft cloth for cleaning the screen
- Operating system and software CDs
- An adjustable desktop stand
- A mobile USB keyboard with touchpad
- A hard top cover

Your box also contains any additional accessories you have ordered, such as a combination DVD/CD-RW drive. If you ordered a FlexDock, it will arrive in a separate box.

If any of these components appear on the packing slip but not in the box, search the packaging again and check the shipping invoice for information about back orders. If you still are unable to account for the component, contact Gateway.

Button panel

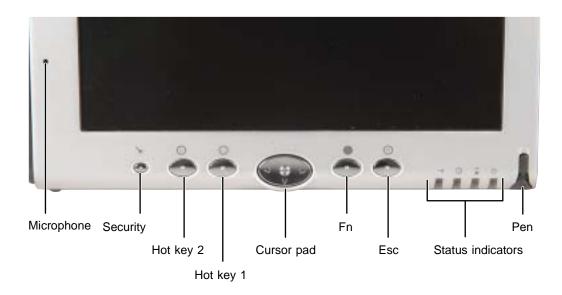

Component	Description
Microphone	Record audio through this microphone. The built-in microphone is turned off while an external microphone is connected. For the location of your microphone jack, see "Ports side" on page 7.
Buttons	See "Buttons" on page 4 for a description of each button.
Status indicators	See "Status indicators" on page 5 for a description of each status indicator.
Pen	Write, tap, and input directly on the tablet's display using the cordless pen.

Buttons


Item	Icon	Primary function	Secondary function (Fn button+button)
Security	1	Opens the Windows Task Manager. Also used for domain authentication or logon screen.	None
Hot key 2		Rotates display orientation. Also opens the BIOS utility if pressed during startup.	Opens Tablet Input Panel. Can also be reprogrammed.
Hot key 1		Opens Motion Dashboard.	Opens Windows Journal. Can also be reprogrammed.
Cursor pad		 The edges serve the same function as the arrow keys on a keyboard. The center of the cursor pad is the ENTER key. 	Left arrow: SHIFT+TAB Right arrow: TAB Up arrow: PAGE UP Down arrow: PAGE DOWN
Fn		Press the Fn (Function) button with another button to activate the button's secondary function.	None
Esc	\otimes	Equivalent to a keyboard's Esc key.	ALT+TAB.

Status indicators

The status indicators show you the current activity of system components.


Status indicator		Meaning
Wireless activity	\prec	 LED steady or blinking green - Wireless IEEE 802.11b is on LED off - Wireless IEEE 802.11b is off
Hard drive		■ LED blinking - The hard drive is being read from or written to
Battery status		 LED steady green - AC adapter plugged in and battery fully charged LED steady yellow - AC adapter plugged in and battery charging LED steady orange - Battery overheated or defective LED blinking green and orange - Battery discharging abnormally and should be replaced LED slow-blinking orange - AC unplugged and battery less than 10 percent LED fast-blinking orange - AC unplugged and battery less than 5 percent LED off - AC unplugged and battery fully discharged or removed
Power	G	 LED steady green - Tablet is turned on LED blinking green - Tablet is in Standby mode LED off - Tablet is off.

Power switch side

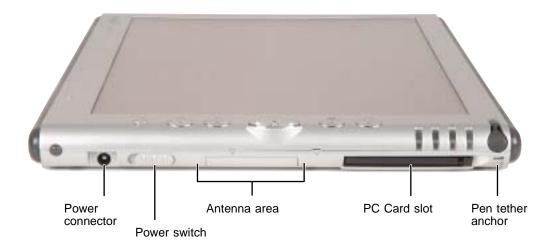

Component	Description
Power connector	Plug the AC adapter cable into this connector. Do not substitute another adapter or use this connector for any other purpose.
Power switch	 Turn on the tablet by sliding and holding the switch for about 1 second. When the Gateway Tablet PC is on, slide the switch briefly to activate Standby (or Hibernate if it is enabled through the Control Panel's <i>Power Options Properties</i> dialog box). Sliding and holding the switch for more than 4 seconds (when the tablet is turned on) will cause a forced shutdown, which is the last resort when the tablet is completely unresponsive.
Antenna zone	The wireless networking antennas are located in this area. Make sure that you keep your hands clear of this zone when using wireless connectivity in areas where reception is weak.
PC Card slot	Insert one Type II PC Card into this slot. For more information, see "Adding and removing a PC Card" on page 218. A plastic blank ships with the Gateway Tablet PC, and you can leave it in place whenever the slot is not in use.
Pen tether anchor	Use this tether anchor to tether the pen to the tablet. You must purchase the pen tether separately.

Ports side

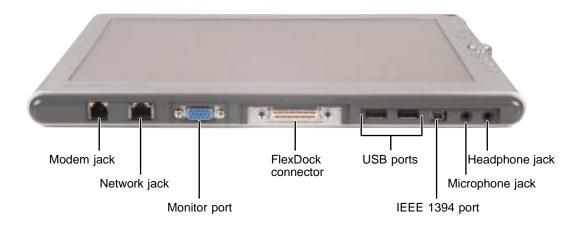

Component	Icon	Description
Modem jack	Cir	Plug a modem cable into this jack. For more information, see "Connecting the modem" on page 39.
Network jack	물	Plug a 10/100 Ethernet network cable into this jack. For more information, see "Connecting to a wired Ethernet network" on page 40 and "Networking Your Tablet PC" on page 165.
Monitor port		Plug an analog VGA monitor into this port. For more information, see "Using an external monitor" on page 111.
FlexDock connector	Ţ	Make sure that the Gateway Tablet PC sits firmly on the docking connector.
USB ports	● ~	Plug the port replicator or USB (Universal Serial Bus) devices (such as a diskette drive, Iomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into these USB 2.0 ports.
IEEE 1394 port		Plug an IEEE 1394 (also known as Firewire [®] or i.Link [®]) device (such as a digital camcorder or DVD/CD-RW drive) into this 4-pin IEEE 1394 port. For more information, see "Connecting a digital video camera" on page 114.

Component	Icon	Description
Microphone jack		Plug an external microphone into this jack. The built-in microphone is turned off when a microphone is plugged into this jack.
Headphone jack		Plug amplified speakers or headphones into this jack. The built-in speakers are turned off when speakers or headphones are plugged into this jack.

Speakers side



Component	Description
Speakers	Provide audio output when headphones or amplified speakers are not plugged in.

Back



Component	Description
Kensington lock slot	Secure your tablet PC to an object by connecting a Kensington cable lock to this slot.
Hard drive bay	The hard drive is located in this bay.
Battery bay	Insert the battery into this bay. For more information, see "Changing batteries" on page 131.

Chapter 1: Checking Out Your Gateway M1300 Tablet PC

Component	Description
Battery gauge	Push the button next to the LEDs to check the battery's charge.
Battery latch	Slide to release the battery.
Memory bay	Install as many as two memory modules into this bay. For more information, see "Adding or replacing memory" on page 222.
Antenna zone	The wireless networking antennas are located in this area.

Identifying your model


Important



The labels shown in this section are for informational purposes only. Label information varies by model, features ordered, and location.

Gateway model number and internal wireless label

The label on the back of your tablet PC contains information that identifies your tablet PC model and its features. Gateway Technical Support will need this information if you call for assistance.

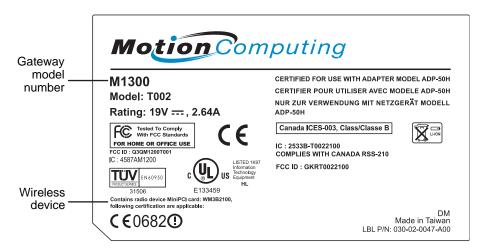

Gateway serial number

You can locate the Gateway serial number:

- Printed on a white sticker on the back of your tablet PC.
- Printed on the customer invoice that came with your tablet PC. The invoice also contains your customer ID number.

Microsoft Certificate of Authenticity

The Microsoft Certificate of Authenticity label found on the back of your tablet PC includes the product key code for your operating system.



Finding your specifications

For more information about your tablet PC, such as memory size, memory type, and hard drive size, visit Gateway's *eSupport* page at <u>support.gateway.com</u>. The *eSupport* page also has links to additional Gateway documentation and detailed specifications. For more information, see "Using eSupport" on page 52.



Accessories

Gateway and Motion offer accessories that can help you make the most of using your tablet PC. To order accessories, visit the Gateway Accessory Store at accessories.gateway.com and the Motion Web site at www.motioncomputing.com.

Batteries and automobile/airplane power adapters

If you run your tablet PC on battery power for extended periods, you may want to buy an additional battery so you can swap batteries when necessary. See "Changing batteries" on page 131 for more information about using an additional main battery in your tablet PC.

With an automobile/airplane power adapter, you can save battery power by plugging your tablet PC into an automobile cigarette lighter or an airplane in-flight power receptacle.

Carrying cases

Gateway has large-capacity carrying cases if you need additional space for accessories or supplies.

Drives

Use a diskette drive or USB flash drive for storing files or transferring files to another computer. See "Using the optional diskette drive" on page 93.

Use a combination DVD/CD-RW drive for installing programs, playing audio CDs, playing DVDs, accessing data, and recording music and data to CD-R or CD-RW discs. See "Using the optional DVD/CD-RW drive" on page 94 for more information.

Motion FlexDock



The Motion FlexDock, a desktop docking station, includes most of the tablet's peripheral device connectors.

- LAN (RJ-45)
- IEEE 1394
- USB 2.0 ports (2 rear, 1 front)
- lacktriangle Microphone jack
- Headphone jack
- VGA monitor
- AC power adapter connector

See "Using the Tablet PC FlexDock" on page 227 for more information.

Peripheral devices

You can attach devices (such as a keyboard, mouse, printer, or monitor) to your tablet PC or FlexDock.

Memory

Large programs, such as multimedia games or graphics programs, use a lot of memory. If your programs are running more slowly than you think they should, try adding more memory. See "Adding or replacing memory" on page 222 for more information.

Printers

You can attach almost any type of printer to your tablet PC. The most common types are inkjet and laser printers, which print in color or black and white. See "Installing a printer, scanner, or other peripheral device" on page 41 for more information about attaching a printer to your tablet PC.

Inkjet printers and cartridges are relatively inexpensive, but they are slower than laser printers. Using an inkjet color printer, you can print pictures, banners, and greeting cards, as well as documents.

Laser printers and cartridges are more expensive, but they print much faster than inkjet printers. Laser printers are better than inkjet printers when you are printing large documents.



2

Getting Started

This chapter provides basic information about your Gateway tablet PC. Read this chapter to find out how to:

- Use the tablet PC safely
- Connect the AC adapter
- Start and turn off your tablet PC
- Use the display
- Use the pen
- Use the keyboard
- Identify the keyboard status indicators
- Use the touchpad
- Connect the modem
- Connect to an Ethernet network
- Install peripheral devices



Safety instructions

Certain precautions should be observed to further reduce the risk of personal injury or damage to the tablet.

General tips

- When setting up the tablet for work, place it on a level surface.
- Before you clean your tablet, turn if off, unplug it from its power source, and remove the battery.
- Do not push objects into air vents or openings of your tablet. Doing so can cause fire or electric shock by shorting out interior components.
- Handle components with care. Hold a component such as a memory module by its edges, not its pins.
- When you disconnect a cable, pull on its connector, not on the cable itself. As you pull out the connector, keep it evenly aligned to avoid bending any connector pins. Also, before you connect a cable make sure both connectors are correctly oriented and aligned.
- Use of mobile phones can interfere with the sound system. The tablet operation is not impaired but we recommend that a distance of 12 inches (30 cm) be maintained between the tablet and the mobile phone.
- When you move your tablet between environments with very different humidity or temperature ranges, condensation may form on or within the tablet. To avoid damaging the tablet, allow sufficient time for the moisture to evaporate before using the tablet.
- When traveling, do not check the tablet as baggage. You can put your tablet through an X-ray security machine, but never put your tablet through a metal detector. If you have the tablet checked by hand, be sure to have a charged battery available in case you are asked to turn on the tablet.
- When traveling, do not place the tablet in overhead storage compartments where it could slide around.
- Do not drop your tablet or subject it to other physical shocks.
- To completely turn off all tablet power, turn the tablet off, remove the battery, and disconnect the AC adapter from the electrical outlet.

- The base of the tablet can become warm with use. Although the temperature will not be too hot to the touch, we recommend that you attach the hard top cover to the back of the tablet while in use.
- Do not apply heavy pressure to the tablet or subject it to strong impact. Excessive pressure or impact can cause damage to tablet components or otherwise cause malfunctions.
- Some PC Cards can become hot with prolonged use. Overheating of a PC Card can result in errors or instability in the card's operation. Be careful when you remove a PC Card that has been used for extended periods.

Using the battery

- Do not carry a battery in your pocket, purse, or other container where metal objects (such as car keys) could short-circuit the battery terminals. The resulting excessive current flow can cause extremely high temperatures and may result in heat damage.
- Protect your tablet, battery, and hard drive from environmental hazards such as dirt, dust, food, liquids, temperature extremes, and overexposure to sunlight.
- Replace only with a Gateway Tablet PC battery to avoid risk of fire or explosion.
- Dispose of used batteries according to the manufacturer's instructions. Do not dispose of batteries in a fire. They may explode.

Using the AC adapter

- Place the adapter in a ventilated area, such as a desktop or on the floor, when you use it to run the tablet or to charge the battery. Do not cover the adapter with papers or other items that will reduce cooling, and do not use the adapter while it is inside a carrying case.
- Make sure that nothing rests on your adapter's power cable and that the cable is not located where it can be tripped over or stepped on.
- Use only the adapter and power cord approved for use with this tablet. Use of another type of adapter may create a risk of fire or explosion.
- If you use an extension cable with your adapter, ensure that the total ampere rating of the products plugged in to the extension cable does not exceed the ampere rating of the extension cable.

Basic safety precautions

When using your tablet and peripheral devices, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Do not use this product near water. For example, do not use it near a bathtub or kitchen sink.
- Avoid using the wired modem or LAN during an electrical storm. There may be a remote risk of electric shock from lightning.
- The cable used with the modem should be manufactured with a minimum wire size of 26 American wire gauge (AWG) and an FCC-compliant RJ-11 modular plug.
- To help avoid the potential hazard of electric shock, do not connect or disconnect any cables or perform maintenance or reconfiguration of this product during an electrical storm.

Warning



When working with peripheral devices or replacing memory modules, always follow installation instructions closely. Except for replacing memory, do not attempt to service the tablet yourself. (See "Using eSupport" on page 52 and "Telephone support" on page 263 for service information.)

Connecting the AC adapter

Your tablet ships with a charged 6-cell lithium-ion (or an optional lightweight 3-cell) battery in its bay. You can run your tablet PC using an AC adapter or the tablet PC battery. You may own other devices that advise you to charge the battery before first use, but the Gateway Tablet PC battery does not require it. If a charge is needed, just plug in the AC adapter and let the battery charge while you are working.

Important




- A full charge will take up to two hours. Press the button next to the battery gauge. When all five LEDs glow green, the battery is fully charged. See "Back" on page 9 for the location of the battery gauge.
- Whenever the tablet is connected to AC power and the battery is in place, the tablet will automatically charge the battery until it reaches 100 percent. The Battery Status indicator glows steady yellow while the battery is charging and changes to steady green when charging is complete. See "Status indicators" on page 5 for more information.

То со

To connect the AC adapter:

1 Connect the power cord to the AC adapter.

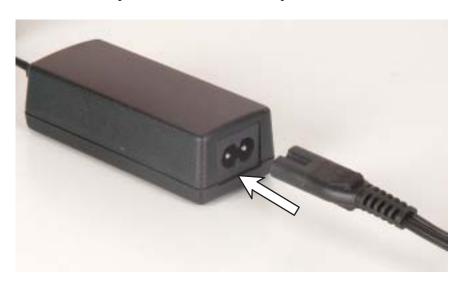

-OR- Connect the AC mini-plug to the AC adapter.



Warning



Make sure that you use the AC adapter that came with your tablet PC.

Replace the power cord if it becomes damaged. The replacement cord must be of the same type and voltage rating as the original cord or your tablet PC may be damaged.

2 Connect the AC adapter to your tablet PC's power connector.



- **3** Plug the power cord or AC mini-plug into a wall outlet.
 - The battery status indicator turns on (see "Button panel" on page 3 for the location of the battery status indicator). If the battery status indicator does not turn on, unplug the adapter from your tablet PC, then plug it back in.
- 4 When you finish using your tablet PC for the first time, turn your tablet PC off and leave your tablet PC connected to AC power for at least 2 hours. For more information about the battery charge meter on your model, see "Monitoring the battery charge" on page 128.
- 5 If the battery charge meter does not show a full charge after 4 hours, contact Gateway Technical Support at support.gateway.com, then tap Contact Us.



Warning



Do not attempt to disassemble the AC adapter. The AC adapter has no user-replaceable or user-serviceable parts inside. The AC adapter has dangerous voltages that can cause serious injury or death. Contact Gateway about returning defective AC adapters.



Protecting from power source problems

During a power surge, the voltage level of electricity coming into your tablet PC can increase to far above normal levels and cause data loss or system damage. Protect your tablet PC and peripheral devices by connecting them to a *surge protector*, which absorbs voltage surges and prevents them from reaching your tablet PC.

Warning



High voltages can enter your tablet PC through both the power cord and the modem connection. Protect your tablet PC by using a surge protector. If you have a telephone modem, use a surge protector that has a modem jack. If you have a cable modem, use a surge protector that has an antenna/cable TV jack. During an electrical storm, unplug both the surge protector and the modem.

Starting your tablet PC

- To start your tablet PC:
 - 1 If this is the first time turning on your tablet, connect the USB keyboard to a USB port.



2 Slide and hold the power switch for about 1 second. The tablet turns on.





Important



- While the tablet is on, sliding and holding the switch will activate the low-power Standby or Hibernate mode.
- While the tablet is on, sliding and holding the switch for more than four seconds will cause a forced shutdown, which should be the last resort when the tablet is completely unresponsive.
- **3** Use the keyboard to complete the Windows setup. The pen does not work during setup.
- **4** After setup is complete, remove the pen from its packing box, then tap the pen on the screen to control the pointer.



Waking up your tablet PC

When you have not used your tablet PC for several minutes, it may enter a power-saving mode called *Standby*. While in Standby mode, the power indicator flashes.

If your tablet PC is in Standby mode, "wake" it up by sliding the power switch. For more information on changing power-saving settings, see "Changing power settings" on page 135.

Turning off your tablet PC

- To turn off your tablet PC:
 - 1 Tap Start, then tap Turn Off Computer. The *Turn Off Computer* dialog box opens.
 - **2** Tap Turn Off. Windows shuts down and turns off your tablet PC.



Important



If for some reason you cannot use the Turn Off Computer option in Windows to turn off your tablet PC, slide and hold the power switch for about four seconds, then release it.

Restarting (rebooting) your tablet PC

If your tablet PC does not respond to pen or keyboard input, you may have to close programs that are not responding. If closing unresponsive programs does not restore your tablet PC to normal operation, you may have to restart (reboot) your tablet PC.



To close unresponsive programs and restart your tablet PC:

1 Press the Security button . For more information, see "Button panel" on page 3.

-OR-

On the keyboard, press CTRL+ALT+DEL.

- **2** Click **Task Manager**. A window opens that lets you close a program that is not responding.
- **3** Tap the program that is not responding.
- 4 Tap End Task.
- **5** If your tablet PC does not respond, turn it off, wait ten seconds and turn it on again.

Important



If your tablet PC does not turn off immediately, complete the following steps until the tablet PC turns off:

- 1 Slide and hold the power switch for about four seconds, then release it.
- 2 Remove AC power and the battery for more than 10 seconds.

As a part of the regular startup process, a program to check the disk status runs automatically. When the checks are finished, Windows starts.



Using the display

The tablet's screen combines the eye-soothing readability of a liquid-crystal display with the responsiveness of a pen controller. The screen provides a hard writing surface, minimizes glare, and increases readability.

- Unlike other touchscreens and PDAs, the tablet's display responds only to the tablet's pen. The tablet will not respond to a PDA pen or the touch of a fingertip.
- Steady your hand on the display surface while writing. The pressure of your hand will not affect any open programs.
- Switching from AC to battery power dims the display slightly to save power.

Using the pen

The tablet PC's pen is the only device that can write, tap, and input directly on the tablet's display.

Warning



A finger-tap or PDA stylus has no effect on the tablet's display, and ink pens and other pointed objects could damage the surface, so always use the pen that came with your tablet. You can order extra pens from Gateway.

The pen can do everything a mouse does. Just think "tap" instead of "click".

With a mouse:	With a pen:
Point and click	Point and tap
Double-click	Double-tap
Click-and-drag	Tap-and-drag
Right-click	Button-tap (press the pen button while tapping or press and hold with the pen)

Calibration

The first time you use your tablet, you should calibrate your pen for both portrait and landscape orientations. Calibration ensures the accuracy of the pen and adjusts the screen's performance for different users.

If the on-screen pointer does not seem to line up with the tip of the pen—for example, because someone else has used your tablet and adjusted it for their own use—recalibrate it to your tapping patterns.

Recalibrate if you write with the opposite hand from the previous user—right-handed writer to left-handed writer.

- To open the calibration program:
 - Open the Motion Dashboard by pressing the Hot Key 1 , then tapping the Calibrate button.
 - OR -


Double-tap (Tablet and Pen Settings) in the taskbar, then tap the Pen Options tab.



Gestures

A gesture is a shape you draw with your tablet pen to send a command to your tablet PC. In Input Panel, you can also use gestures to control the insertion point in the active program. When you use these gestures, you get the same result as pressing the corresponding key on a standard keyboard.

- Open the Tablet Input Panel by waving the pen back and forth over the screen.
- Backspace by drawing a right-to-left line on the display surface.
- In most text input programs, you can erase text by scratching it out. Windows interprets a scratchout as a *delete* command.
- To erase, draw a short, wide "Z."

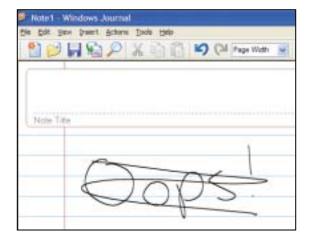

■ You will find more information about gestures and gesture symbols, as well as handwriting tips, in the Help section of the TIP's Tools menu.

Pen button

The pen button serves the same function as the right button on a mouse. Press it and tap (button-tap) to open right-click menus when they are available.

Tips

- Hold the pen the same way you hold a writing pen, and steady your writing hand by resting it on the display surface.
- Line up the pointer before you tap, in cases where the pointer and pen point are out of alignment. The screen reads the position of the pointer, not the tap.
- Store the pen in the Gateway Tablet PC's pen holder. Store extra pens in a drawer to avoid prolonged pressure on the pen tip.
- The pen has internal electronics, so keep it dry and avoid contact with liquids.
- The tablet responds to most PenabledTM EMR pens manufactured by Wacom[®].

Tablet Input Panel (TIP)

Tap (the **Keyboard** icon) near the Start button to open the Tablet Input Panel (TIP). Use the TIP to enter data by hand, soft keyboard, or voice into a word processing program or a text-entry form.

Access the TIP keyboard and writing pad by tapping the tabs near the bottom of the window.



■ To set up speech options, tap **Tools**, then tap **Speech**.

TIP tips

- Open a program for your input (for example, a word processing program or a Web form) before using the writing pad or soft keyboard.
- To adjust writing pad and keyboard settings, tap Tools, then tap Options.




■ For security and accuracy when entering masked text (such as passwords), use the Tablet PC Input Panel's soft keyboard instead of the writing pad.



Using the keyboard

Your tablet PC came with a keyboard that functions the same as a desktop computer keyboard. Many of the keys have been assigned alternate functions, including shortcut keys for Windows, function keys for specific system operations, and the Pad Lock keys for the numeric keypad.

You attach the external keyboard to the tablet PC using a USB port. You do not need to shut down the tablet PC to connect the keyboard.

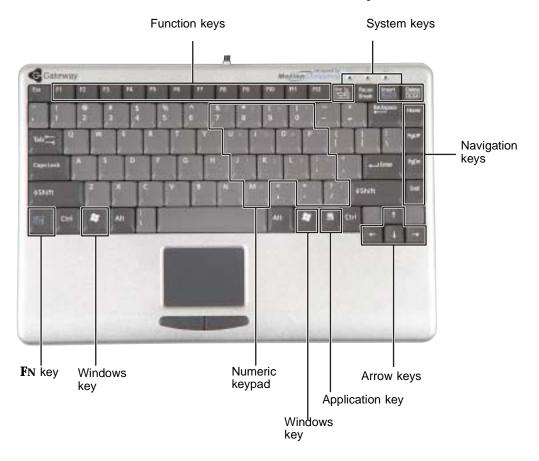

Key types

The keyboard has several different types of keys. Some keys perform specific actions when pressed alone and other actions when pressed in combination with another key.

Key type	Icon	Description
Function keys		Press these keys labeled F1 to F12 to perform actions in programs. For example, pressing F1 may open help.
		Each program uses different function keys for different purposes. See the program documentation to find out more about the function key actions.
System keys		Press these keys in combination with the ${f FN}$ key to perform specific actions.
Navigation keys		Press these keys to move the cursor to the beginning of a line, to the end of a line, up the page, down the page, to the beginning of a document, or to the end of a document.
Arrow keys		Press these keys to move the cursor up, down, right, or left.
Application key	$\overline{\Sigma}$	Press this key for quick access to shortcut menus and help assistants in Windows.
Windows keys		Press one of these keys to open the Windows Start menu. This key can also be used in combination with other keys to open utilities like F (Search utility), R (Run utility), and E (Explorer utility).
Numeric keypad		Use these keys to type numbers when the numeric keypad is turned on. Press $F_{N+NUMLK}$ to turn on the numeric keypad.
F N key		Press the F N key in combination with a system key (such as SYSRQ , NUMLK , or SCRLK) to perform a specific action.


System key combinations

When you press the FN key and a system key at the same time, your tablet PC performs the action identified by the text on the key.

Press and hold FN, then press this system key	To
Prt Sc SysRq	Perform an action specified by the software currently running. (This function is only available in some programs.)
Insert NumLk	Turn on Pad Lock so you can use the numeric keypad. Press this key combination again to turn off Pad Lock. The Pad Lock status indicator appears when this function is turned on.
Delete ScrLK	Pause the text scrolling in a DOS screen. Press this key combination again to continue scrolling. The Scroll Lock status indicator appears when this function is turned on. (This function is only available in some programs.)

Status indicators


Status indicators inform you when a button has been pressed that affects how the keyboard is used.

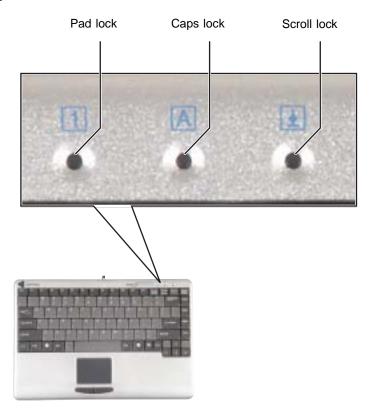

Indicator	Icon	Description	
Pad Lock	1	Numeric keypad is turned on. For more information, see "System key combinations" on page 35.	
Caps Lock	Α	Caps Lock is turned on.	
Scroll Lock	Ţ	Scroll Lock is turned on. For more information, see "System key combinations" on page 35.	

Using the touchpad

The keyboard has a touchpad and two buttons.

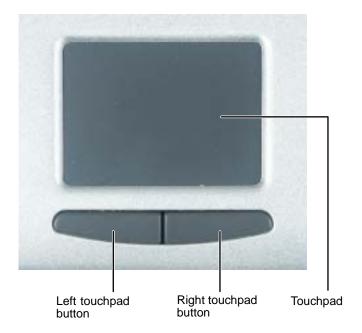


When you move your finger on the touchpad, the *pointer* (arrow) on the screen moves in the same direction.



You can use the *left* and *right buttons* below the touchpad to select objects.


To... Do this...

Move the pointer on the screen.

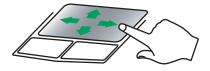


Move your finger around on the touchpad. If you run out of space and need to move the pointer farther, lift your finger, move it to the middle of the touchpad, then continue moving your finger.

Select an object on the screen.

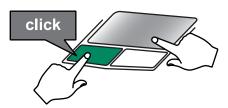

Position the pointer over the object. Quickly press and release the left button once. This action is called *clicking*.

Start a program or open a file or folder.

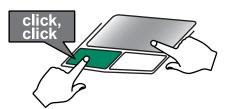


Position the pointer over the object. Press the left button twice in rapid succession. This action is called *double-clicking*.

Access a shortcut menu or find more information about an object on the screen.



Position the pointer over the object. Quickly press and release the right button once. This action is called *right-clicking*.

Move an object on the screen.

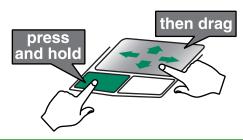

Position the pointer over the object. Press the left button and hold it down, then use the touchpad to move (drag) the object to the appropriate part of the screen. Release the button to drop the object where you want it.

Connecting the modem

Your tablet PC has a built-in 56K modem that you can use to connect to a standard telephone line.

Warning



To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.

To connect the modem:

1 Insert one end of a modem cable into the modem jack on the ports side of your tablet PC. For the location of the modem jack, see "Ports side" on page 7.



- **2** Insert the other end of the modem cable into a telephone wall jack. The modem will not work with digital or PBX telephone lines.
- **3** Start your tablet PC, then start your communications program.



Connecting to a wired Ethernet network

Your tablet PC has a network jack that you can use to connect to a 10/100 wired Ethernet network.

Important



Your tablet PC is equipped with built-in wireless Ethernet. For information about connecting to a wired or wireless Ethernet network, see "Networking Your Tablet PC" on page 165.

To connect to a wired Ethernet network:

1 Insert one end of a network cable into the network jack 点点 on the ports side of your tablet PC. For the location of the network jack, see "Ports side" on page 7 and "Back" on page 229.



2 Insert the other end of the network cable into a network jack. Ask your network administrator to help you select the correct network jack.



Broadband Internet connections

You can use your tablet PC's Ethernet jack for more than just networking. Many broadband Internet connections, such as cable modems and DSL modems, connect to your tablet PC's Ethernet jack. For more information, see "Using the Internet" on page 77 and "Networking Your Tablet PC" on page 165.

Installing a printer, scanner, or other peripheral device

Important



Before you install a printer, scanner, or other peripheral device, see the device documentation and installation instructions.

Your tablet PC and optional FlexDock has one or more of the following ports: IEEE 1394 (also known as Firewire® or i.Link®) and Universal Serial Bus (USB). You use these ports to connect peripheral devices such as drives, printers, scanners, and digital cameras to your tablet PC. For more information about port locations, see "Checking Out Your Gateway M1300 Tablet PC" on page 1 and "Using the Tablet PC FlexDock" on page 227.

IEEE 1394 and USB ports support *plug-and-play* and *hot swapping*, which means that your tablet PC will usually recognize such a device whenever you plug it into the appropriate port. When you use an IEEE 1394 or USB device for the first time, your tablet PC will prompt you to install any software the device needs. After doing this, you can disconnect and reconnect the device at any time.

Help and Support



For more information about installing peripheral devices, tap **Start**, then tap **Help and Support**.

Type the keyword **installing devices** in the Help and Support Center **Search** box Search , then tap the arrow.



Getting Help

This chapter tells you about additional information resources available to help you use your tablet PC. Read this chapter to learn how to access:

- **■** Tutorials
- Help and Support Center
- Do More with Gateway
- Online help
- Gateway Web site

3



Using the tutorials

To run the tutorials, tap the **Welcome to Tablet PC** link in the Help and Support Center.



Help and Support



To open the Help and Support Center, tap **Start**, then tap **Help and Support**.

More helpful startup pages and programs

Get Going with Tablet PC

This interactive introduction offers more hints on using your Tablet PC and helps you calibrate the pen and display. You should calibrate the pen right away.

- To open Get Going with Tablet PC:
 - Tap Start, All Programs, then tap Get Going with Tablet PC.



Take a Tour of Windows XP


- To open Take a Tour of Windows XP:
 - 1 Tap Start, then tap Help and Support Center.
 - 2 Tap What's new in Windows XP.
 - 3 Tap Taking a tour or tutorial.
 - 4 Tap Take the Windows XP tour.



Inkball

After you finish the tutorials, you can play Inkball to hone your pen skills.

- To play Inkball:
 - Tap Start, All Programs, Games, then tap Inkball.

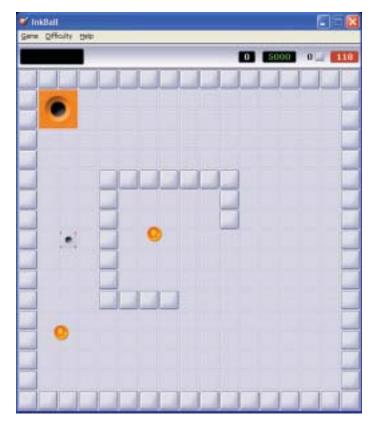



Help and Support Center

Your tablet PC includes Windows Help and Support Center, an easily accessible collection of help information, troubleshooters, instructional videos, and automated support. Use Help and Support Center to answer questions about Windows and to help you quickly discover and use the many features of your Gateway Tablet PC.

Whenever you open the Help and Support Center while the Gateway Tablet PC is online, the Did You Know section checks for updates from Microsoft and Motion, such as tablet usage hints, and notices from Motion about your Gateway Tablet PC.

To start Help and Support


■ Tap Start, then tap Help and Support. The Windows Help and Support Center opens.





Searching for a topic

To search for a topic in Help and Support Center, type a word or phrase (keyword) in the **Search** box located at the top of any Help and Support Center screen, then tap the arrow button.

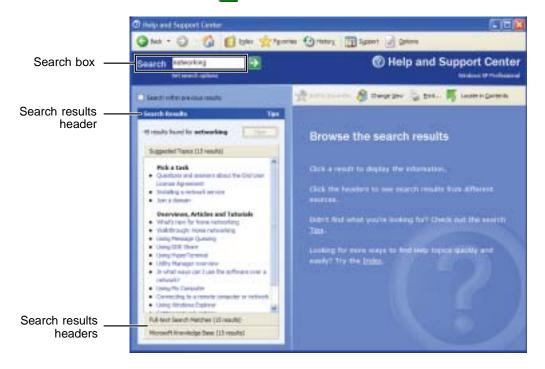

For each search, you receive the following search result types:

- Suggested Topics These topics are located in Help and Support Center and are relevant to your search topic.
- Full-text Search Matches These topics are located in Help and Support Center and contain the words you entered in the Search box.
- Microsoft Knowledge Base These topics are located on the Microsoft Web site and contain the words you entered in the Search box. You must be connected to the Internet to search for and access these topics.

To view a list of your search results, tap the results header for the type of results you want to view.

To view a topic, tap the topic name in the Search Results list.

Do More with Gateway

Your tablet PC includes *Do More with Gateway*, a tool that provides additional information about using your Gateway computer for digital music, digital photography, digital video, gaming, and other programs. To access Do More with Gateway, tap **Start**, then tap **Do More with Gateway**. Tap the topics listed on the left-side of the page to learn more about the software already installed on your tablet PC as well as partnerships and special offers available through Gateway.

Online help

Many programs provide information online so you can research a topic or learn how to perform a task while you are using the program. You can access most online help information by selecting a topic from a **Help** menu or by tapping a **Help** button.



You can search for information by viewing the help contents, checking the index, searching for a topic or keyword, or browsing through the online help.



Gateway Web site

Gateway's online support is available 24 hours per day, 7 days per week and provides the most current drivers, product specifications, tutorials, and personalized information about your system. Visit the Gateway eSupport Web site at support.gateway.com. For more information about connecting to the Internet, see "Using the Internet" on page 77.



Using eSupport

The eSupport site is divided into four major areas:

- Support Home
- Downloads
- Contact Us
- Account Info

Each of these areas is represented by a tab across the top of the Web page.

Support Home tab

To get specific information about your tablet PC, type your serial number into the *My System Information* box, then tap **GO**, or tap **Look up my serial number for me**. For more information, see "Finding your specifications" on page 12.

The *Support Information* link lets you access product documentation, specifications, and manuals. By entering your serial number, you get specific documents related to your system. You can also browse through the reference area to locate an article specific to the question you have.

The *Tutorials* link lets you access an extensive library of how-to articles and videos on topics such as making audio CDs and installing memory.

Downloads tab

The *Downloads* tab provides the latest software updates for BIOS and driver upgrades. By entering your serial number you get drivers specific to your system. Tap **All Downloads** to walk through a step-by-step wizard to locate your drivers.

Contact Us tab

The *Contact Us* tab contains links to technical support with a live technician, including chat and e-mail. Tap **Call Us** to get a list of Gateway telephone numbers for both sales and support. For more information, see "Telephone numbers" on page 264.

Account Info tab

The Account Info tab contains support for non-technical issues, like the status of your order or changing your account address.



Windows Basics

Read this chapter to learn how to:

- Use the Windows desktop
- Manage files and folders
- Work with documents
- Use shortcuts

4



About Windows XP Tablet PC Edition

The Microsoft Windows XP Tablet PC Edition operating system is a fully functioning version of Windows XP Professional with added pen-based computing features:

- *Tablet and Pen Settings* set properties for the pen, tablet buttons, and display screen
- *Tablet PC Input Panel (TIP)* use its writing pad, soft keyboard, and voice recognition for entering data
- Windows® Journal hand-write documents, then turn them into text or image files
- *Sticky Notes* make a quick note with your pen or voice and drop it into another program
- *Document annotation* insert handwritten notes into Word documents and other programs
- Enhanced speech and voice recognition say what you are thinking, and your tablet will understand
- *Inkball* practice and master pen input with this game of strategy

The **What's New** in **Windows XP** link in the Help and Support Center and the *Windows XP Start Here* booklet that shipped with your tablet can help you learn more about using Windows XP Tablet PC Edition.

About the Windows environment

After your tablet PC starts, the first screen you see is the Windows *desktop*. The desktop is like the top of a real desk. Think of the desktop as your personalized work space where you open programs and perform other tasks.

Your desktop may be different from this example, depending on how your tablet PC is set up.

Help and Support




For more information about the desktop, tap ${\bf Start}$, then tap ${\bf Help}$ and ${\bf Support}$.

Type the keyword **Windows desktop** in the Help and Support Center **Search** box Search , ther tap the arrow.



Using the desktop

The desktop contains the taskbar, the Start button, and the Recycle Bin icon.

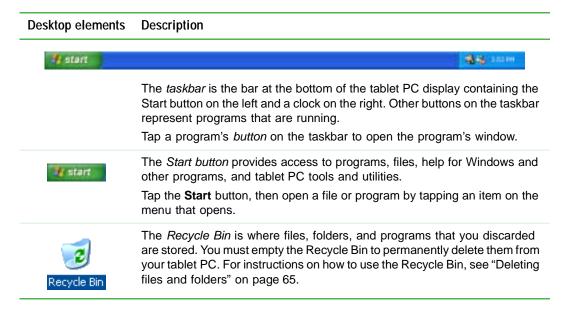

Using the Start menu

You can start programs, open files, customize your system, get help, search for files and folders, and more using the Start menu.



To use the Start menu:

- 1 Tap the Start button on the lower left of the Windows desktop. The Start menu opens showing you the first level of menu items.
- 2 Tap All Programs to see all programs and files in the Start menu. When you move the pointer over any menu item that has an arrow next to it, another menu, called a *submenu*, opens and reveals related files, programs, or commands.

3 Tap a file or program to open it.





Help and Support



For more information about the Start menu, tap **Start**, then tap **Help and Support**.

Type the keyword **Windows Start menu** in the Help and Support Center **Search** box Search tap the arrow.

Adding icons to the desktop

You may want to add an icon (shortcut) to the desktop for a program that you use frequently.

- To add icons to the desktop:
 - 1 Tap Start, then tap All Programs.
 - **2** Button-tap (press the pen button) the program that you want to add to the desktop.
 - **3** Tap **Send To**, then tap **Desktop (create shortcut)**. A shortcut icon for that program appears on the desktop.



Help and Support




For more information about desktop icons, tap **Start**, then tap **Help and Support**.

Type the keyword **desktop icons** in the Help and Support Center **Search** box Search , then tap the arrow.

Identifying window items

When you double-tap the icon for a drive, folder, file, or program, a *window* opens on the desktop. This example shows the Local Disk (C:) window, which opens after you double-tap the Local Disk (C:) icon in the *My Computer* window.

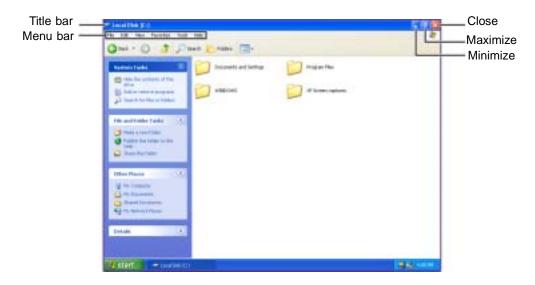

Every program window looks a little different because each has its own menus, icons, and controls. Most windows include these items:

Window item	Description
Local Disk (C:)	The <i>title bar</i> is the horizontal bar at the top of a window that shows the window title.
	Tapping the <i>minimize button</i> reduces the active window to a button on the taskbar. Tapping the program button in the taskbar opens the window again.
	Tapping the <i>maximize button</i> expands the active window to fit the entire tablet PC display. Tapping the maximize button again restores the window to its former size.
	Tapping the <i>close button</i> closes the active window or program.
File Edit View Favorites Tools Help	Tapping an item on the <i>menu bar</i> starts an action such as Print or Save.

Help and Support



For more information about windows, tap Start, then tap Help and Support.

Type the keyword **window** in the Help and Support Center **Search** box Search [], then tap the arrow.


Working with files and folders

You can organize your files and programs to suit your preferences much like you would store information in a file cabinet. You can store these files in folders and copy, move, and delete the information just as you would reorganize and throw away information in a file cabinet.

Viewing drives

Drives are like file cabinets because they hold files and folders. A tablet PC may have more than one drive. Each drive has a letter, usually Local Disk (C:) for the hard drive and $3\frac{1}{2}$ Floppy (A:) for the optional diskette drive. You may also have an optional combination DVD/CD-RW drive.

- To view the drives on your tablet PC:
 - Tap Start, then tap My Computer on the Start menu.

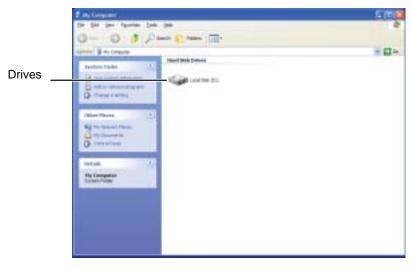





To see the files and folders on a drive:

■ Double-tap the drive icon. If you do not see the contents of a drive after you double-tap its icon, tap Show the contents of this drive.



Help and Support



For more information about files and folders, tap **Start**, then tap **Help and Support**.

Type the keyword **files and folders** in the Help and Support Center **Search** box Search the arrow.

Creating folders

Folders are much like the folders in a file cabinet. They can contain files and other folders.

Files are much like paper documents—letters, spreadsheets, and pictures—that you keep on your tablet PC. In fact, all information on a tablet PC is stored in files.



- To create a folder:
 - 1 Tap Start, then tap My Computer on the Start menu.
 - 2 Double-tap the drive where you want to put the new folder. Typically, Local Disk (C:) is your hard drive and 3½ Floppy (A:) is your optional diskette drive. If you do not see the contents of the drive, tap Show the contents of this drive.
 - 3 If you want to create a new folder inside an existing folder, double-tap the existing folder. If you do not see the contents of the folder, tap Show the contents of this drive or Show the contents of this folder.
 - 4 Tap File, New, then tap Folder. The new folder is created.
 - **5** Type a name for the folder, then press **ENTER**. The new folder name appears by the folder icon.



Help and Support



For more information about creating files and folders, tap **Start**, then tap **Help and Support**.

Type the keyword **creating files and folders** in the Help and Support Center **Search** box Search then tap the arrow.

For information about renaming folders, see "Keyboard shortcuts" on page 75.

Copying and moving files and folders

The skills you need to copy and move files are called copying, cutting, and pasting.

When you *copy and paste* a file or folder, you place a *copy* of the file or folder on the Windows *clipboard*, which temporarily stores it. Then, when you decide what folder you want the copy to go in (the *destination* folder), you *paste* it there.

When you *cut and paste* a file or folder, you remove the file or folder from its original location and place the file or folder on the Windows clipboard. When you decide where you want the file or folder to go, you paste it there.

Important



The clipboard stores whatever you cut or copy until you cut or copy again. Then the clipboard contains the new information only. Therefore, you can paste copies of a file or folder into more than one place, but as soon as you copy or cut a different file or folder, the original file or folder is deleted from the clipboard.

- To copy a file or folder to another folder:
 - 1 Locate the file or folder you want to copy. For more information, see "Viewing drives" on page 61 and "Searching for files" on page 68.
 - **2** Button-tap (press the pen button) the file or folder that you want to copy. A pop-up menu opens on the desktop.
 - **3** Tap **Copy** on the pop-up menu.
 - **4** Open the destination folder.
 - **5** With the pointer inside the destination folder, button-tap.
 - **6** Tap **Paste**. A copy of the file or folder appears in the new location.



- To move a file or folder to another folder:
 - 1 Locate the file or folder you want to move. For more information, see "Viewing drives" on page 61 and "Searching for files" on page 68.
 - **2** Button-tap (press the pen button) the file or folder that you want to move. A pop-up menu opens on the desktop.
 - 3 Tap Cut on the pop-up menu.
 - **4** Open the destination folder.
 - **5** With the pointer inside the destination folder, button-tap.
 - **6** Tap **Paste**. The file or folder you moved appears in its new location and is removed from its old location.



Help and Support



For more information about copying files and folders or moving files and folders, tap **Start**, then tap **Help and Support**.

Type the keyword **copying files and folders** or **moving files and folders** in the Help and Support Center **Search** box **search** , then tap the arrow.

Deleting files and folders

When you throw away paper files and folders, you take them from the file cabinet and put them in a trash can. Eventually the trash can is emptied.

In Windows, you throw away files and folders by first moving them to the Windows trash can, called the *Recycle Bin*, where they remain until you decide to empty the bin.

You can recover any file in the Recycle Bin as long as the bin has not been emptied.

- To delete files or folders:
 - 1 In My Computer or Windows Explorer, tap the files or folders that you want to delete. For instructions on how to select multiple files and folders, see "Keyboard shortcuts" on page 75.
 - If you cannot find the file you want to delete, see "Searching for files" on page 68.
 - 2 Tap File, then tap Delete. Windows moves the files and folders to the Recycle Bin.



Help and Support



For more information about deleting files and folders, tap **Start**, then tap **Help and Support**.

Type the keyword **deleting files and folders** in the Help and Support Center **Search** box Search then tap the arrow.

- To recover files or folders from the Recycle Bin:
 - 1 Double-tap the Recycle Bin icon. The *Recycle Bin* window opens and lists the files and folders you have thrown away since you last emptied it.
 - 2 Tap the files or folders that you want to restore. For instructions on how to select multiple files and folders, see "Keyboard shortcuts" on page 75.
 - **3** Tap File, then tap Restore. Windows returns the deleted files or folders to their original locations.



To empty the Recycle Bin:

Caution



Emptying the Recycle Bin permanently erases any files or folders in the bin. These files cannot be restored.

- 1 Double-tap the Recycle Bin icon on the desktop. The *Recycle Bin* window opens.
- 2 Tap File, then tap Empty Recycle Bin. Windows asks you if you are sure that you want to empty the bin.
- 3 Tap Yes. Windows permanently deletes all files in the Recycle Bin.



Help and Support



For more information about emptying the Recycle Bin, tap **Start**, then tap **Help and Support**.


Type the keyword **emptying Recycle Bin** in the Help and Support Center **Search** box Search tap the arrow.

Browsing for files and folders

A file or folder that you need is rarely right on top of your Windows desktop. It is usually on a drive inside a folder that may be inside yet another folder, and so on.

Windows drives, folders, and files are organized in the same way as a real file cabinet in that they may have many levels (usually many more levels than a file cabinet, in fact). So you usually will have to search through levels of folders to find the file or folder that you need. This is called *browsing*.

- To browse for a file:
 - 1 Tap Start, then tap My Computer. The My Computer window opens.
 - 2 Double-tap the drive or folder that you think contains the file or folder that you want to find. If you do not see the contents of a folder, tap Show the contents of this drive or Show the contents of this folder.

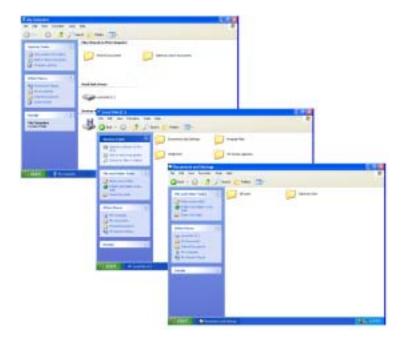

3 Continue double-tapping folders and their subfolders until you find the file or folder you want.



Help and Support



For more information about browsing for files and folders, tap **Start**, then tap **Help and Support**.

Type the keyword **files and folders** in the Help and Support Center **Search** box Search the arrow.

Searching for files

If you are looking for a particular file or folder or a set of files or folders that have characteristics in common, but you do not remember where they are stored on your hard drive, you can use the Search utility to search by:

- Name or part of a name
- Creation date
- Modification date
- File type
- Text contained in the file
- Time period in which it was created or modified

You can also combine search criteria to refine searches.

Files and folders found using this utility can be opened, copied, cut, renamed, or deleted directly from the list in the results window.


- To find files and folders using the Search utility:
 - 1 Tap Start, then tap Search. The Search Results window opens. Tap All files and folders.



- **2** If you want to search by file or folder name, type in all or part of the file or folder name in the name box in the left pane of the window.
 - If you type all of the name, Search will list all files and folders of that name.
 - If you type part of the name, Search will list all of the file and folder names containing the letters you typed.



3 Tap **Search**. When the search is completed, Windows lists the files and folders whose names contain the text that you searched for.

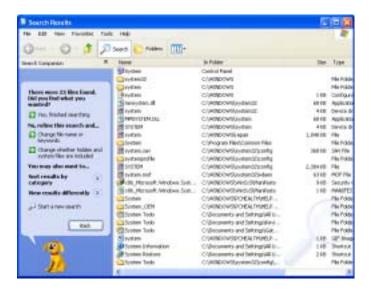

4 Open a file, folder, or program by double-tapping the name in the list.



Help and Support



For more information about searching for files and folders, tap **Start**, then tap **Help and Support**.

Type the keyword **searching** in the Help and Support Center **Search** box Search , then tap the arrow.

Using advanced search options

Search can find files meeting more criteria than file name. You can narrow your search by selecting the search options that you want. You can search by the:

- Date the file was created or modified.
- Size of the file.
- Type of file, such as a program or a text document.

Working with documents


Tablet PC documents include word processing files, spreadsheet files, or other similar files. The basic methods of creating, saving, opening, and printing a document apply to most of these types of files.

The following examples show how to create, save, open, and print a document using Microsoft® WordPad. Similar procedures apply to other programs such as Microsoft Word and Microsoft Excel.

For more information about using a program, tap Help on its menu bar.

Creating a new document

- To create a new document:
 - 1 Tap Start, All Programs, Accessories, then tap WordPad. Microsoft WordPad starts and a blank document opens.

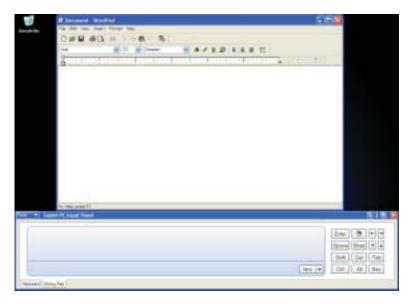


2 Begin composing your document. Use the menus and toolbar buttons at the top of the window to format the document.



Saving a document

After you create a document, you need to save it if you want to use it later.

- To save a document:
 - 1 Tap File, then tap Save. The Save As dialog box opens.

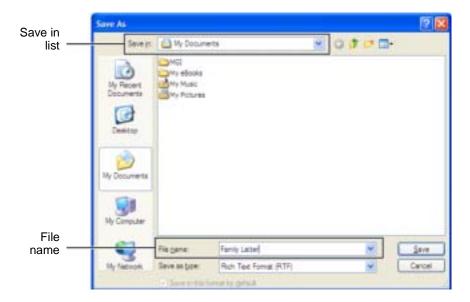

- **2** Tap the arrow button to open the **Save** in list, then tap the folder where you want to save the file. If you do not see the folder you want, browse through the folders listed below the *Save* in list.
- **3** Type a new file name in the File name box.
- 4 Tap Save.









For more information about saving documents, tap **Start**, then tap **Help and Support**.

Type the keyword **saving** in the Help and Support Center **Search** box **Search** , then tap the arrow.

Opening a document

To view, revise, or print an existing document, first you need to open it. Open the document in the program that it was created in.

- To open a document:
 - 1 Start the program.
 - 2 Tap File, then tap Open.
 - **3** Tap the arrow button to open the **Look** in list, then tap the folder you want to open. If you do not see the folder you want, browse through the folders listed below the *Look* in list.



4 Double-tap the document file name. The document opens.



Help and Support



For more information about opening documents, tap **Start**, then tap **Help and Support**.

Type the keyword **opening files** in the Help and Support Center **Search** box Search , then tap the arrow.

Printing a document

To print a document, you must have a printer connected to your tablet PC or have access to a network printer. For more information about installing or using your printer, see the printer documentation.

- To print a document:
 - 1 Make sure that the printer is turned on and loaded with paper.
 - **2** Start the program and open the document.
 - **3** Tap File, then tap Print. The *Print* dialog box opens.
 - **4** Set the print options, then tap **OK**. The document prints.



Help and Support



For more information about printing documents, tap **Start**, then tap **Help and Support**.

Type the keyword **printing** in the Help and Support Center **Search** box Search , then tap the arrow.

Keyboard shortcuts

The following table shows a few shortcuts that you can use in Windows and almost all programs that run in Windows. For more information about shortcuts, see your Windows or program documentation.

То	Do this
Copy a file, folder, text, or graphic	Click the item, then press CTRL + C.
Cut a file, folder, text, or graphic	Click the item, then press CTRL + X.
Paste a file, folder, text, or graphic	Click inside the folder or window where you want to paste the object, then press $CTRL + V$.
Select multiple items in a list or window	Click the first item, press and hold down the \pmb{CTRL} key, then click each of the remaining items.
Select multiple adjacent items in a list or window	Click the first item in the list, press and hold down the SHIFT key, then click the last item in the list.
Permanently delete a file or folder	Click the file or folder, then press SHIFT + DELETE . The file or folder is permanently deleted. The file or folder is not stored in the Recycle Bin.
Rename a file or folder	Click the file or folder, press ${\bf F2}$, type the new name, then press ${\bf ENTER}$.
Close the active window or program	Press ALT + F4.
Switch to a different file, folder, or running program	Press ALT + TAB.

Help and Support



For more information about Windows keyboard shortcuts, tap **Start**, then tap **Help and Support**.

Type the keyword **Windows keyboard shortcuts** in the Help and Support Center **Search** box

Search ________, then tap the arrow.

Chapter 4: Windows Basics



Using the Internet

5

This chapter provides information about the Internet and the World Wide Web. Read this chapter to learn how to:


- Set up and access an Internet account
- Connect to a Web site using a browser
- Download files from the Internet
- Send and receive e-mail



Learning about the Internet

The *Internet* is a worldwide network of computers linked together to provide information to people everywhere. The two most popular services on the Internet are e-mail and the World Wide Web. You can access this network by connecting your tablet PC to a telephone, DSL (Digital Subscriber Line), or cable line and signing up with an Internet service provider (ISP).

Cable and DSL modems, a connection known as broadband, use your TV cable or special telephone lines to connect to your ISP and access the Internet. Cable and DSL modems connect to your tablet PC through an Ethernet jack and provide a faster connection speed than a standard telephone modem.

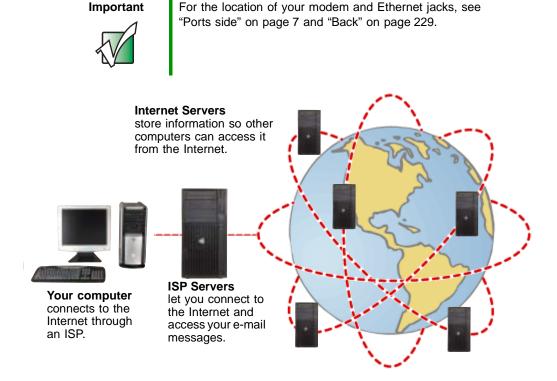

If you want to access the Internet you need:

- A **modem** a device that connects your tablet PC to other computers or servers using a telephone, DSL, or cable line.
- An **Internet service provider** a company that provides access to the Internet through an ISP server. When you connect to an ISP, the ISP server lets you access the Internet and your e-mail messages.
- A **Web browser** a program that displays information from the World Wide Web.
- An e-mail program a program that lets you create, send, and receive e-mail messages over the Internet.

Setting up an Internet account

Before you can view the information on the World Wide Web, you need to set up an Internet account with an Internet service provider (ISP). To set up an ISP service or to transfer an existing account to this tablet PC, contact the ISP directly.

Help and Support



For general information about using Internet accounts, tap **Start**, then tap **Help and Support**.

Type the keyword **ISP** in the Help and Support Center **Search** box Search , then tap the arrow.

Using the World Wide Web


The World Wide Web is a multimedia window to the Internet that gives you access to millions of information sources.

Information on the Web comes to you on *Web pages*, which are electronic documents that you view using a Web page display program called a *browser*. You can use any of the commercially available Web browsers, like Microsoft Internet Explorer (which comes installed on your new tablet PC) or Netscape Navigator.

Web pages can contain text, animations, music, and other multimedia features. A group of related Web pages is called a *Web site*. You can access Web sites to shop, track investments, read the news, download programs, and much more.

You can explore a Web site or visit other Web sites by tapping areas on a Web page called *links* or *hyperlinks*. A link may be colored or underlined text, a picture, or an animated image. You can identify a link by moving the pointer over it. If the pointer changes to a hand, the item is a link.

To learn more about using the Web browser features, tap Help in the menu bar.

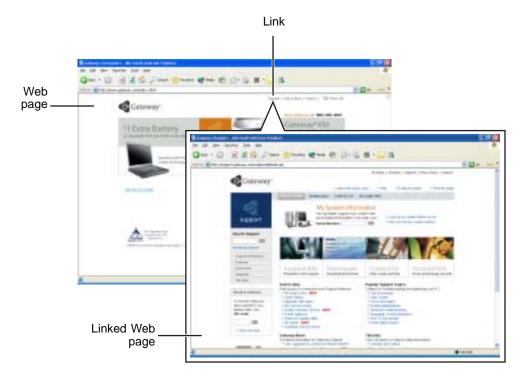

Connecting to a Web site

After you set up an account with an Internet service provider (ISP), you can access the many information sources on the World Wide Web.

- To connect to a Web site:
 - 1 Connect to your Internet account. After your tablet PC connects, a default opening page or welcome screen opens.
 - **2** To go to a different Web site, type the *address* (called a *URL* for "Universal Resource Locator") in the browser address bar (for example **www.gateway.com**), then tap **GO** on the browser address bar.



- OR -

On the current Web page, tap a link to a Web site.

The Web browser locates the server computer on the Internet, *downloads* (transfers) data to your tablet PC, and displays the page on the site that you requested.



Help and Support



For more information about connecting to a Web site, tap **Start**, then tap **Help and Support**.

Type the keyword **connecting to Web site** in the Help and Support Center **Search** box Search then tap the arrow.

Sometimes Web pages display slowly. The speed that a Web page displays on your screen depends on the complexity of the Web page and other Internet conditions. Additionally, the speed of your connection will determine how fast Web pages display.

Downloading files

Downloading is the process of transferring files from a computer on the Internet to your tablet PC.

To protect your tablet PC against viruses, make sure that you scan the files you download. For more information, see "Protecting your tablet PC from viruses" on page 193.

- To download files or programs from a Web site:
 - 1 Connect to your Internet account.
 - 2 In the address bar, type the address of the Web site that contains the file or program you want to download, then tap GO on the browser address bar.
 - OR -

Tap a link on a Web page to navigate to the Web site containing the file that you want to download.

- **3** Create or locate the folder where you want to store the file on your tablet PC. For more information, see "Working with files and folders" on page 61.
- 4 Tap the link on the Web page for the file that you want to download.
- 5 Follow the on-screen instructions for saving the file in the folder that you want. A copy of the file is downloaded to your tablet PC. The time that it takes to transfer the file to your tablet PC depends on file size and Internet conditions.
- 6 Open the folder that you created.
- **7** Install or view the downloaded file by double-tapping it. If applicable, follow the instructions provided on the Web site to run or install the program.



Help and Support



For more information about downloading files, tap **Start**, then tap **Help and Support**.


Type the keyword **downloading files** in the Help and Support Center **Search** box Search tap the arrow.

Using e-mail

E-mail (electronic mail) lets you send messages to anyone who has an Internet connection and e-mail address. E-mail is usually a free service of your Internet account.

The Internet never closes, so you can send e-mail messages at any time. Your e-mail messages arrive at most e-mail addresses in minutes.

An *e-mail address* consists of a user name, the @ symbol, and the Internet *domain name* of the Internet service provider (ISP) or company that "hosts" that user. Your e-mail address is assigned when you sign up for an account with an ISP. For example, a person with an account with America Online might have an e-mail address that is similar to this one:

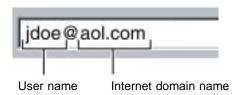

Sending e-mail

- To send e-mail using Microsoft Outlook:
 - 1 Connect to your e-mail account.
 - 2 Tap New.
 - **3** Type the e-mail address of the recipient you want to send e-mail to in the **To** box.
 - 4 Type the subject of your e-mail in the Subject box.
 - **5** Type the e-mail message.
 - **6** When finished, tap **Send**. Your e-mail is sent over the Internet to the e-mail address you specified.



Checking your e-mail

- To check your e-mail using Microsoft Outlook:
 - 1 Connect to your e-mail account.
 - **2** Tap the Inbox.
 - **3** Double-tap the message you want to read.



For more information about managing and organizing your e-mail messages, see the online help in your e-mail program.

Help and Support



For general information about using e-mail, tap **Start**, then tap **Help and Support**.

Type the keyword **e-mail** in the Help and Support Center **Search** box Search ________, then tap the arrow.



Using Multimedia

This chapter provides information on using the multimedia capabilities of your tablet PC. Read this chapter to learn how to:

- Adjust the volume
- Record and play audio files
- Use Windows Media Player
- Use a diskette or combination DVD/CD-RW drive
- Play CDs
- Play DVDs
- Create CDs
- Attach a digital camera to your tablet PC
- Attach a digital video camera to your tablet PC



Adjusting the volume

You can use the volume controls to adjust the overall volume and the volume of specific sound devices in your tablet PC.

- To adjust the overall volume level using hardware controls:
 - If you are using external speakers, turn the knob on the front of the speakers.



- To adjust the overall volume level:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Sounds, Speech, and Audio Devices.
 - **2** Tap/Double-tap the Adjust the system volume or Sounds and Audio Devices. The *Sounds and Audio Devices Properties* dialog box opens.
 - 3 Tap the Volume tab.



4 Drag the **Device Volume** slider to change the volume or tap to select the **Mute** check box, then tap **OK**.



Help and Support



For more information about adjusting volume, tap **Start**, then tap **Help and Support**.

Type the keyword **adjusting volume** in the Help and Support Center **Search** box Search the tap the arrow.


To adjust specific volume levels:

- 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Sounds, Speech, and Audio Devices.
- **2** Tap/Double-tap the Adjust the system volume or Sounds and Audio Devices. The *Sounds and Audio Devices Properties* dialog box opens.
- **3** Tap the **Volume** tab.





4 Tap Advanced in the Device volume area.

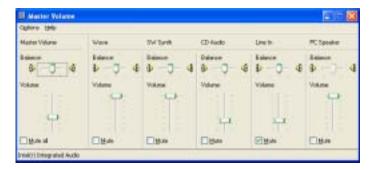

If the device you want to adjust does not appear in the window, tap **Options**, **Properties**, the check box next to the audio device you want to adjust, then tap **OK**.

- **5** Drag the volume level and balance sliders for the device you want to adjust. For more information about the volume controls, tap **Help** in the window.
- **6** Tap **X** in the top-right corner of the window to close it.



Recording and playing audio


Use the following instructions to make an audio recording by speaking into a microphone.

- To make an audio recording:
 - 1 Use the built-in microphone located on the front of the tablet PC.

-OR-

Plug a microphone into the microphone jack on your tablet PC. For the location of the microphone jack, see "Ports side" on page 7 or "Back" on page 229.

2 Tap Start, All Programs, Accessories, Entertainment, then tap Sound Recorder. The Sound Recorder opens.

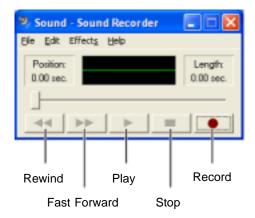

- **3** Tap (record), then speak into the microphone.
- **4** When you finish recording, tap (stop).
- **5** Tap File, then tap Save As. The Save As dialog box opens.
- **6** Name the recording, specify the location where you want to save the recording, then tap **Save**. The recording is saved.



- To play an audio recording in Sound Recorder:
 - 1 Open the Sound Recorder.
 - **2** Tap File, then tap Open. The *Open* dialog box opens.
 - 3 Tap the file you want to play, then tap Open.
 - **4** Play the file by tapping ▶ (play), then stop playing the file by tapping (stop).



Help and Support



For more information about making or playing an audio recording, tap **Start**, then tap **Help and Support**.


Type the keyword **recording audio** or **playing audio** in the Help and Support Center **Search** box

Search _______, then tap the arrow.

Playing audio and video files with the Windows Media Player

The Windows Media Player can play several types of audio and video files, including WAV, MIDI, MP3, AU, AVI, and MPEG formats. For more information about using the Windows Media Player, tap Help.

- To play a file using the Windows Media Player:
 - 1 Tap Start, All Programs, then tap Windows Media Player. The Windows Media Player opens.

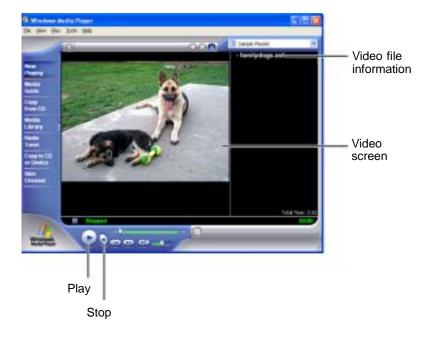



2 Tap File, then tap Open. The Open dialog box opens.

Important



If the menu bar does not appear, tap the show menu bar button.

- 3 Tap the file you want to play, then tap Open.
- **4** Play the file by tapping ▶ (play), then stop playing the file by tapping (stop).



Help and Support



For more information about playing audio and video using the Windows Media Player, tap **Start**, then tap **Help and Support**.

Type the keyword **Media Player** in the Help and Support Center **Search** box Search , then tap the arrow.

Using the optional diskette drive

The diskette drive uses 3.5-inch diskettes (sometimes called *floppy disks*). Diskettes are useful for storing files or transferring files to another computer.

Warning




Do not expose diskettes to water or magnetic fields. Exposure could damage the data on the diskette.

Important



If you need to use a diskette drive, Gateway recommends purchasing a USB diskette drive. To order a USB diskette drive, visit the Accessory Store at accessories.gateway.com.

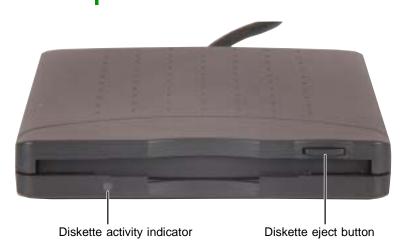

To use a diskette:

- 1 Plug the diskette drive into a USB port on the tablet PC or FlexDock. For the location of your USB ports, see "Ports side" on page 7, "Front" on page 228, and "Back" on page 229.
- **2** Insert the diskette into the diskette drive with the label facing up.



- **3** To access a file on the diskette, tap **Start**, then tap **My Computer**. Double-tap the drive letter (for example, the A: drive), then double-tap the file name.
- **4** To remove the diskette, make sure that the diskette activity indicator is off, then press the diskette eject button.



Using the optional DVD/CD-RW drive

You can use your tablet PC to enjoy a wide variety of multimedia features. Use the optional combination DVD/CD-RW drive for installing programs, playing audio CDs, playing DVDs, accessing data, and recording music and data to CD-R or CD-RW discs. You cannot use this drive to create DVDs.

Important



If you need to use a CD or DVD drive, Gateway recommends purchasing the combination DVD/CD-RW drive. To order a combination DVD/CD-RW drive, visit the Accessory Store at accessories.gateway.com.

Connecting the DVD/CD-RW drive

Everything you need to read from or write to a CD and to read from a DVD is included in this package:

- DVD/CD-RW drive with IEEE 1394 cable
- AC power adapter and power cord
- Installation card
- Software CDs:
 - Ahead Software's Nero Burning ROM™
 - CyberLink[®] PowerDVDTM

- To connect the DVD/CD-RW drive:
 - **1** Connect the AC adapter to your drive's power connector.




2 Connect the IEEE 1394 cable from the drive to the jack on the tablet PC or FlexDock.





Inserting a CD or DVD

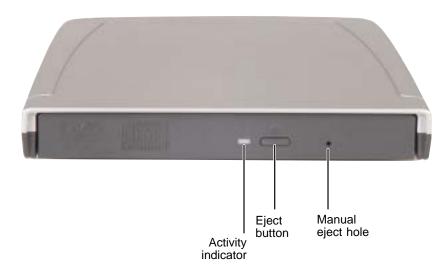

Important



Some music CDs have copy protection software. You may not be able to play these CDs on your tablet PC.

- To insert a CD or DVD:
 - 1 Press the eject button on the combination DVD/CD-RW drive. After the tray opens slightly, pull the disc tray completely open.
 - **2** Place the disc in the tray with the label facing up, then press down carefully on the disc until it snaps into place.

Important



When you place a single-sided disc in the tray, make sure that the label side is facing up. If the disc has two playable sides, place the disc so the name of the side you want to play is facing up.

3 Push the tray in until it is closed.



Listening to CDs

You can use the combination DVD/CD-RW drive on your tablet PC to listen to music CDs. Use the Windows Media Player to listen to CDs. For more information about the using the Windows Media Player, tap Help.

Important




Some music CDs have copy protection software. You may not be able to play these CDs on your tablet PC.

- To play a CD using Windows Media Player:
 - 1 Insert a CD into the combination DVD/CD-RW drive.
 - **2** If a dialog box opens with a list of CD players, tap **Windows Media Player**. The Windows Media Player opens.
 - OR -

If a dialog box does not open with a list of CD players, tap **Start**, **All Programs**, then tap **Windows Media Player**. The Windows Media Player opens.





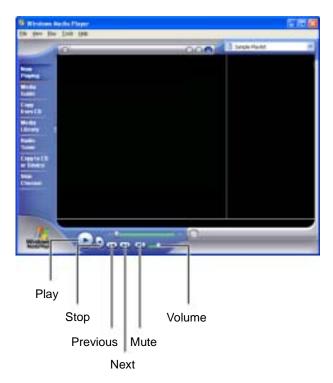

If you do not hear sound or you want to change the volume, see "Adjusting the volume" on page 86.



Help and Support



For more information about playing CDs, tap **Start**, then tap **Help and Support**.

Type the keyword **playing CDs** in the Help and Support Center **Search** box Search , then tap the arrow.

Tips & Tricks



See *Do More With Gateway* for more information about using your tablet PC to listen to music. Tap **Start**, then tap **Do More With Gateway**.

Playing a DVD

A Digital Versatile Disc (DVD) is similar to a standard CD but has greater data capacity. Because of this increased capacity, full-length movies, several albums of music, or several gigabytes of data can fit on a single disc. If your tablet PC has a combination DVD/CD-RW drive, you can play DVDs with InterVideo WinDVD. For more information about playing DVDs, tap Help in WinDVD.

Important



If InterVideo WinDVD is not on your Start menu, you will need to install it. To install InterVideo WinDVD, insert the InterVideo DVD Software disc into your DVD/CD-RW drive and follow the on-screen instructions.

To play a DVD:

- 1 Make sure that the speakers are turned on or headphones are plugged in and that the volume is turned up.
- **2** Turn off your screen saver and standby timers.
- 3 To play a DVD using InterVideo WinDVD, tap Start, All Programs, InterVideo WinDVD, then tap InterVideo WinDVD.
- 4 Insert a DVD into the DVD drive, then tap ▶ (play). The DVD plays. To specifically control the DVD or adjust the volume, use the controls in the DVD player. For more information on using the DVD player, see its online help.



Help and Support



For more information about playing DVDs, tap **Start**, then tap **Help and Support**.

Type the keyword **playing DVDs** in the Help and Support Center **Search** box Search , then tap the arrow.

Creating CDs

You can use your combination DVD/CD-RW drive to create data CDs, music CDs, or copies of CDs.

Important



If Nero Express is not on your Start menu, you will need to install the Nero Express program. To install the Nero Express program, insert the Nero Express disc into your DVD/CD-RW drive and follow the on-screen instructions.

Important



For more information about using Ahead Software's Nero Express, see the online documentation. Tap Start, All Programs, Ahead Nero, User's Guides, then tap Nero Express.

Creating data CDs

Use Nero Express to create **data** CDs. Data CDs are ideal for backing up important files such as tax records, letters, MP3s, digital movies, or photos. For information on creating **music** CDs, see "Creating music CDs" on page 104.

Important



We recommend that you do not use your tablet PC for other tasks while creating CDs.


Important



If you record copyrighted material on a CD, you need permission from the copyright owner. Otherwise, you may be violating copyright law and be subject to payment of damages and other remedies. If you are uncertain about your rights, contact your legal advisor.

- To create a data CD:
 - 1 Insert a blank, writable CD into your DVD/CD-RW drive.
 - **2** If a *CD Drive* dialog box opens, tap **Create new CD using Ahead Nero**, then tap **OK**. Nero Express starts.
 - OR -

If a dialog box does not open, tap **Start**, **All Programs**, **Ahead Nero**, then tap **Nero Express**. Nero Express starts.

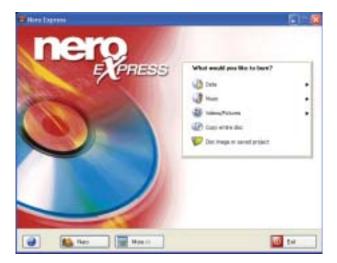





3 Tap Data, then tap Data Disc. The Disc Content screen opens.

- 4 Tap Add. The Select Files and Folders dialog box opens.
- 5 Tap the file(s) you want to record (hold down the CTRL or SHIFT key when you tap to select multiple files), then tap Add. The Select Files and Folders dialog box closes.

de feet


Q fet



6 After you have added all of your files, tap **Next**. The *Final Burn Settings* screen opens.



- 7 Type a name for the disc in the Disc Name box.
- **8** Tap Burn. The *Burning Process* screen opens.

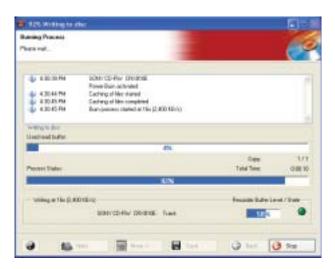

9 When you are notified that the burn has been completed successfully, tap **OK**.



Help and Support



For more information about creating CDs, tap **Start**, then tap **Help and Support**.

Type the keyword **creating CDs** in the Help and Support Center **Search** box Search , then tap the arrow.

Creating music CDs

Use Nero Express to create **music** CDs from other music CDs or MP3 files. For information on creating data CDs, see "Creating data CDs" on page 100.

Important



We recommend that you do not use your tablet PC for other tasks while creating CDs.

Important



If you record copyrighted material on a CD, you need permission from the copyright owner. Otherwise, you may be violating copyright law and be subject to payment of damages and other remedies. If you are uncertain about your rights, contact your legal advisor.

Important



Some CDs have copy protection software. You cannot create MP3 files from these CDs and you may not be able to listen to these CDs on your tablet PC.

To create music CDs:

1 Insert a blank, writable CD into your DVD/CD-RW drive.


Tips & Tricks



Most home and car stereos can read CD-R discs, but cannot read CD-RW discs. To make sure that the CD that you create will play on home and car CD players, use a CD-R disc.

- **2** If a *CD Drive* dialog box opens, tap **Create new CD using Ahead Nero**, then tap **OK**. Nero Express starts.
 - OR -

If a dialog box does not open, tap **Start**, **All Programs**, **Ahead Nero**, then tap **Nero Express**. Nero Express starts.

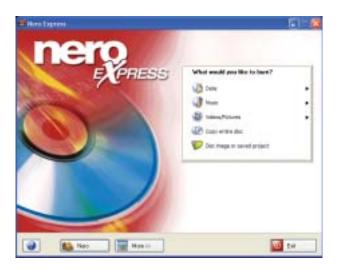

3 Tap Music, then tap the type of CD you want to create: Audio CD, MP3 Disc, or WMA Disc. The *My Audio CD* screen opens.





- 4 Tap Add. The Select Files and Folders dialog box opens.
- **5** Tap the file(s) you want to record (hold down the **CTRL** or **SHIFT** key when you tap to select multiple files), then tap **Add**. The *Select Files and Folders* dialog box closes.

Tips & Tricks



You can add any combination of music tracks or MP3 files to a music CD project. You can add up to 99 tracks and files, or up to 650 MB (74-minute CD) or 700 MB (80-minute CD) of tracks and files to a music CD project.

Tips & Tricks




To change the order of the songs on the CD, tap and drag the song to the appropriate location in the list.



6 After you have added all of your tracks and files, tap **Next**. The *Final Burn Settings* screen opens.



- 7 Type a name for the disc in the Disc Name box.
- **8** Tap Burn. The Burning Process screen opens.

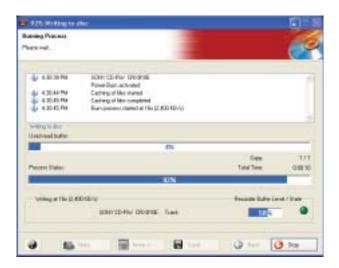

9 When you are notified that the burn has been completed successfully, tap **OK**.



Help and Support



For more information about creating CDs, tap **Start**, then tap **Help and Support**.

Type the keyword **creating CDs** in the Help and Support Center **Search** box Search , then tap the arrow.

Copying CDs

Nero Express can make backup copies of almost any type of CD.

Important



We recommend that you do not use your tablet PC for other tasks while creating a CD.


Important



If you record copyrighted material on a CD, you need permission from the copyright owner. Otherwise, you may be violating copyright law and be subject to payment of damages and other remedies. If you are uncertain about your rights, contact your legal advisor.

- To copy a CD:
 - 1 Insert the CD you want to copy into your DVD/CD-RW drive.
 - **2** If a dialog box opens, click **Take no action**.

3 Tap Start, All Programs, Ahead Nero, then tap Nero Express. Nero Express starts.

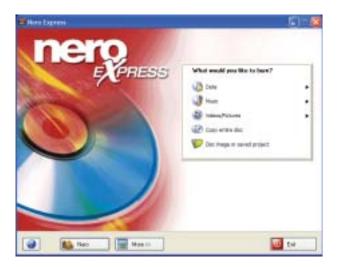


4 Tap Copy Entire Disc. The Select Source and Destination screen opens.





5 Tap Burn. The *Burning Process* screen opens.

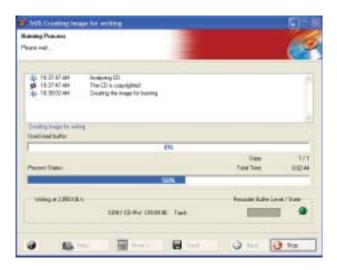

- **6** When the DVD/CD-RW drive tray opens, replace the source CD with a blank, writable CD, then close the drive tray.
- **7** When you are notified that the burn has been completed successfully, tap **oK**.



Help and Support



For more information about copying CDs and DVDs, tap **Start**, then tap **Help and Support**.

Type the keyword **copying CDs** in the Help and Support Center **Search** box Search , then tap the arrow.

Using an external monitor


- To attach an external monitor:
 - 1 Turn off the Tablet PC.
 - **2** Plug the monitor cable into the VGA port on the tablet or FlexDock. Turn on the tablet.
 - 3 Plug the monitor's power cord into an AC power source and turn it on. Windows XP recognizes the new hardware and searches for its driver. You may need to install the driver from the disc supplied by the monitor's manufacturer or download the driver from the manufacturer's Web site. If you need to install a driver from the manufacturer's CD, you must first attach the optional DVD/CD-RW drive. For more information, see "Connecting the DVD/CD-RW drive" on page 94.
 - **4** After the driver is installed, button-tap any empty space on the desktop, then tap **Properties**. The *Display Properties* dialog box opens.
 - 5 Tap the Settings tab.
 - 6 Button-tap the second monitor icon (labeled 2), then tap Attached.
 - 7 Tap Apply.
 - 8 Adjust properties such as Screen Resolution or Color Quality if necessary.
 - **9** Tap **OK**.



Connecting a digital camera

Most digital cameras connect to your tablet PC's USB port to transfer pictures.

- To connect a digital camera:
 - 1 Connect one end of the USB cable to your digital camera, and connect the other end of the cable to the USB port on the tablet PC or FlexDock. For the location of your USB ports, see "Ports side" on page 7, "Front" on page 228, and "Back" on page 229.

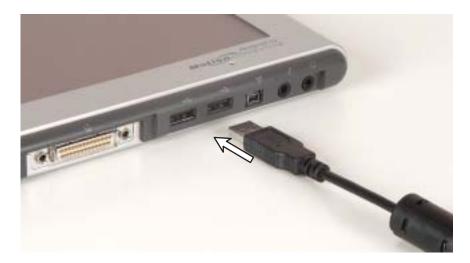

2 Use the program that came with your digital camera to transfer the pictures to your tablet PC.

-OR-

Use the Scanner and Camera Wizard to transfer the pictures to your tablet PC.

-OR-

If your digital camera appears as a drive on your tablet PC in the *My Computer* window, see "Working with files and folders" on page 61 for information about moving files to your hard drive.



Help and Support



For more information about using the Scanner and Camera Wizard, tap **Start**, then tap **Help and Support**.

Type the keyword **digital picture** in the Help and Support Center **Search** box Search , then tap the arrow.

Tips & Tricks



See *Do More With Gateway* for more information about using your tablet PC to edit, store, and print digital photos. Tap **Start**, then tap **Do More With Gateway**.

Connecting a digital video camera

Your tablet PC has an IEEE 1394 (also known as Firewire or i.Link) port that can be used to connect to a digital video camera. NeroVision Express is a video capture program that lets you capture and edit full-motion video, single images, and audio through the IEEE 1394 port.

To connect a digital video camera:

1 Connect one end of the IEEE 1394 cable to your video camera, and connect the other end of the cable to the IEEE 1394 port on the tablet PC or FlexDock. For the location of your IEEE 1394 ports, see "Ports side" on page 7, "Front" on page 228, and "Back" on page 229.



2 Tap Start, All Programs, Ahead NeroVision, then tap NeroVision Express. The program starts.



Tips & Tricks



See *Do More With Gateway* for more information about using your tablet PC to edit videos. Tap **Start**, then tap **Do More With Gateway**.



Sending and Receiving Faxes

Microsoft Fax lets you send and receive faxes using the modem. Read this chapter to learn how to:

- Install and configure Fax
- Create and send a new fax
- Set up a fax cover page template
- Fax a document you scanned or created in another program
- Receive, view, and print a fax

7







Installing Fax

Microsoft Fax lets you send and receive faxes using your modem. When Windows XP was originally installed on your tablet PC, Fax was not installed. You need to install Fax from your blue *Operating System* CD.

Important



Your modem cable must be installed before you can send and receive faxes. You cannot use your standard telephone modem to connect to the Internet while sending and receiving faxes.

Help and Support



For more information about sending and receiving faxes, tap **Start**, then tap **Help and Support**.

Type the keyword **Fax** in the Help and Support Center **Search** box Search , then tap the arrow.

To install Fax:

- **1** Insert the blue *Operating System* CD in your combination DVD/CD-RW drive. For more information, see "Using the optional DVD/CD-RW drive" on page 94.
- 2 If the *Welcome to Microsoft Windows XP* dialog box opens, tap Install optional Windows components. The Windows Components Wizard opens.

-OR-

If the *Welcome to Microsoft Windows XP* dialog box does not open, tap **Start**, then tap **Control Panel**. The *Control Panel* window opens. Tap/Double-tap **Add and Remove Programs**. The *Add or Remove Programs* dialog box opens. Tap **Add/Remove Windows Components**. The Windows Components Wizard opens.

- 3 Tap Fax Services, then tap Next.
- **4** Tap Finish to exit the Windows Components Wizard.

5 Tap Exit to close the Welcome to Microsoft Windows XP dialog box.

-OR-

Tap Close to close the Add or Remove Programs dialog box.



Configuring Fax

Before you send your first fax, you need to set up your user information. Your fax cover sheets and fax headers contain this information, some of which is required by law. The Fax Configuration Wizard opens the first time you try to send a fax.

Important




The first time you run the Fax Configuration Wizard, you may need to provide information in the *Location Information* and the *Phone and Modem Options* dialog boxes.

- To configure Microsoft Fax:
 - 1 Tap Start, All Programs, Accessories, Communications, Fax, then tap Fax Console. The Fax Configuration Wizard opens.
 - **2** On the *Welcome to Fax Configuration Wizard* screen, tap **Next**. The *Sender Information* screen opens.



- **3** Type the information about yourself that you want to appear on your fax cover page, then tap **Next**. The *Select Device for Sending or Receiving Faxes* screen opens.
- 4 Tap the arrow to open the Please select the fax device list, then tap the modem you are using to send and receive faxes.
- **5** If you want the modem to automatically answer the telephone in order to receive faxes, tap the **Enable Receive** check box.

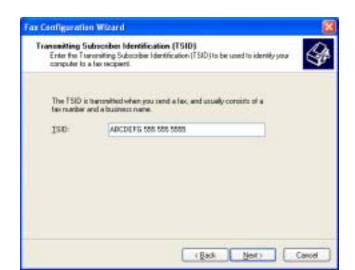

6 Tap Next. The Transmitting Subscriber Identification (TSID) screen opens.

7 Type the transmitting fax identifier information. This identifier information is required by law. You can type up to 20 characters in the text box. We suggest using eight characters for your identifier name, followed by 12 characters for your telephone number.

Important



Some fax machines cannot use special characters such as hyphens. We suggest using spaces instead of hyphens in telephone and fax numbers.

- 8 Tap Next.
- **9** If you set up your tablet PC to receive faxes, type the receiving fax identifier information, then tap **Next**. This identifier information is required by law and can be the same identifier that you typed in Step 7. The *Routing Options* screen opens.
- **10** If you set up your tablet PC to receive faxes, select a folder you want to store received faxes in, then tap **Next**. The *Configuration Summary* screen opens.
- 11 Tap Finish.



Sending a simple fax

You can use the Send Fax Wizard to send a simple one-page fax to one or more recipients.

To send a simple fax:

- 1 Tap Start, All Programs, Accessories, Communications, Fax, then tap Send a Fax. The Send Fax Wizard opens.
- 2 On the Welcome to Fax Configuration Wizard screen, tap Next. The Recipient Information screen opens.
- **3** Type the name and fax number of the recipient of your fax.
- 4 If you need to use the area code for your recipient, tap **Use dialing rules** to type the full ten-digit fax number.
- 5 If you want to send your fax to more than one recipient, tap **Add** and type the name and fax number of the next recipient.



- **6** When you have added all your recipients, tap **Next**. The *Preparing the Cover Page* screen opens.
- **7** Tap the arrow to open the **Cover page template**, then tap the cover page template you want to use.

- **8** Type the subject text in the **Subject line** area.
- **9** Type the message text in the **Note** area, then tap **Next**. The *Schedule* screen opens.
- 10 Select when you want to send the fax and a priority for the fax, then tap Next. The *Completing the Send Fax Wizard* screen opens.
- 11 Tap Finish.



Setting up your cover page template

You can create your own cover page template that you can use in place of the cover page templates that Microsoft Fax provides for you. To create a cover page template, you use the Fax Cover Page Editor. On this template, you insert information fields that automatically import values you enter in both the Send Fax Wizard and the Fax Configuration Wizard when you send your fax.

- To set up your fax cover page template:
 - 1 Tap Start, All Programs, Accessories, Communications, Fax, then tap Fax Cover Page Editor. The Cover Page-Fax Cover Page Editor opens. If the *Cover Page Editor Tips* dialog box opens, tap **OK**.
 - **2** If you want to include fields that are imported from either the Send Fax Wizard or the Fax Configuration Wizard (such as To or From), add them to the page by using the **Insert** menu, then move them to the appropriate place on your template. You can also use the Insert menu to include information that is automatically calculated (such as number of pages or date and time sent).
 - **3** If you want to include text that always appears on your cover page (such as a letterhead or address), draw a box using the text box tool, type your text inside of it, then move the box to the appropriate place on your template.



- **4** If you want to include a logo that appears on your cover page, copy it to the Windows clipboard, then paste it into the Cover Page Editor and move it to the appropriate place on your template.
- **5** To save your cover page template, tap File, then tap Save As. The Save As dialog box opens with your personal cover pages folder already in the Save in list.
- **6** Type the new cover page template name.
- 7 Tap Save.



Faxing from programs

- To fax a document directly from most programs:
 - 1 Open your document in the program it was created in.
 - **2** Tap File, then tap Print. The *Print* dialog box opens.
 - **3** Tap the arrow button to open the **Name** list, then tap the **Fax** printer.
 - 4 Tap Print or OK. The Send Fax Wizard opens.
 - **5** Complete the wizard by following the instructions in "Sending a simple fax" on page 120.



Faxing a scanned document

- To fax a document that you have scanned:
 - 1 Scan the document using the program for your scanner.
 - **2** With the scanned file open, tap File, then tap Print. The *Print* dialog box opens.
 - 3 Tap the arrow button to open the Name list, then tap the Fax printer.

- 4 Tap Print or OK. The Send Fax Wizard opens.
- **5** Complete the wizard by following the instructions in "Sending a simple fax" on page 120.



Receiving and viewing a fax

- To receive and view a fax:
 - 1 Tap Start, All Programs, Accessories, Communications, Fax, then tap Fax Console. The Fax Console opens. When the Fax Console is open, it detects incoming faxes and stores them in the Inbox.
 - **2** To view a fax, tap **Inbox**, then double-tap the fax you want to view. The fax viewer opens, where you can view and print the fax.



Canceling a fax

You can cancel a fax that you have set up to send at a time in the future.

- To cancel a fax that has not been sent:
 - 1 If Fax is not open, tap Start, All Programs, Accessories, Communications, Fax, then tap Fax Console. The Fax Console opens.
 - 2 Tap Outbox, then button-tap the fax you want to cancel.
 - 3 Tap Delete to cancel the fax.
 - 4 Tap Yes.



Automatically retry sending a fax

You can set up Fax so it continues to try sending your fax if the receiving fax machine is busy.

Important



Fax is automatically set up to retry three times at ten minute intervals.

- To automatically retry sending a fax:
 - 1 Tap Start, then tap Control Panel. The Control Panel window opens.
 - 2 If your Control Panel is in Category View, tap Printers and Other Hardware. Tap View installed printers or fax printers. The *Printers and Faxes* window opens.

-OR-

If your Control Panel is in Classic View, double-tap the **Printers and Faxes** icon. The *Printers and Faxes* window opens.

- **3** Button-tap Fax, then tap Properties. The Fax Properties dialog box opens.
- **4** Tap the **Devices** tab, then tap **Properties**. The *Modem* dialog box opens.
- **5** Specify the number of retries and the amount of time between retries.
- **6** Tap **OK**.



Automatically cancelling a fax

If your tablet PC tried to send a fax and failed to connect to a fax machine, you can automatically cancel a failed fax.

- To automatically cancel a failed fax:
 - 1 Tap Start, then tap Control Panel. The Control Panel window opens.
 - 2 If your Control Panel is in Category View, tap Printers and Other Hardware. Tap View installed printers or fax printers. The *Printers and Faxes* window opens.

-OR-

If your Control Panel is in Classic View, double-tap the **Printers and Faxes** icon. The *Printers and Faxes* window opens.

- **3** Button-tap **Fax**, then tap **Properties**. The *Fax Properties* dialog box opens.
- 4 Tap the Devices tab, then tap Properties. The *Modem* dialog box opens.
- 5 Tap the Cleanup tab.
- **6** Tap to select the **Automatically delete failed faxes after** check box and specify the number of days.
- **7** Tap **o**K.





Managing Power

While your tablet PC is running on battery power, you should manage power consumption to get the most use out of the battery. Read this chapter to learn how to:

- Check and recharge the battery
- Change batteries
- Extend the life of the battery by conserving battery power and using alternate power sources
- Change power-saving settings

8





Battery basics

A 6-cell lithium-ion prismatic battery comes installed in the Gateway Tablet PC. Fully charged, a new battery can power the tablet for several hours, depending on conditions and usage patterns.

Extra batteries are available through Motion. Use only Motion batteries in the Gateway Tablet PC.

Handle the battery with care. Do not open, puncture, short, or expose it to fire or water. Keep the battery in an ambient temperature of less than 140°F (60°C). Do not leave it in a closed car in hot weather.

Monitoring the battery charge

Closely monitor the battery charge. When the battery charge gets low, change the battery or connect to AC power immediately to prevent losing any unsaved work.

Monitor the battery charge by any of the following ways.

Power meter

Double-tapping the power cord icon \(\bar{\bar{\bar{\bar{a}}}} \) or battery icon \(\bar{\bar{\bar{\bar{a}}}} \) in the taskbar. The *Power Meter* dialog box opens.

Important



If the power cord or battery icon does not appear on the taskbar, tap the show hidden icons button. If the icon still does not appear, make sure that **Always show icon on the taskbar** is checked on the Advanced tab. See "Changing advanced settings" on page 139 for more information.

Battery status indicator

Looking at the battery status indicator. This indicator glows or flashes depending on the state of the battery:

Indicator	Meaning	
Steady green	Battery charged (AC adapter plugged in)	
Steady yellow	Battery charging (AC adapter plugged in)	
Steady orange	Battery overheated or defective	
Blinking green and orange	Battery discharging abnormally and should be replaced	
Slow-blinking orange	Battery charge less than 10% (AC unplugged)	
Fast-blinking orange	Battery charge less than 5% (AC unplugged)	
Off	Battery discharged (AC unplugged) or battery removed	


Important



This indicator lights up only when the tablet PC is connected to AC power unless the tablet PC is in a very low power state. For the location of the battery status indicator, see "Button panel" on page 3.

Battery status gauge

This gauge is on the battery on the back of the tablet, and its five lights each represent about 20 percent of available power. Read the gauge by pressing the button next to the LEDs.

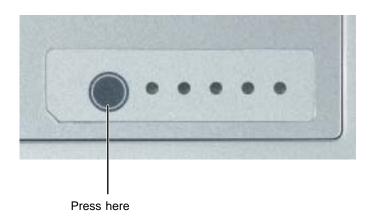

Low battery alarm

When Power Management issues a low-battery alarm (which it will do when the battery charge is 10% or less), save all work immediately and either connect to AC power or put the tablet in Standby and switch to a new battery.

Important



When the battery reaches critical low capacity, the tablet puts itself into Hibernate to preserve data in any open programs.

Recharging the battery

The battery recharges while it is installed and your tablet PC is connected to AC power. While the battery is recharging, the battery status indicator turns yellow and the battery icon in the taskbar has a lightning bolt ...

Important



If the power cord or battery icon does not appear on the taskbar, tap the show hidden icons button. If the icon still does not appear, make sure that **Always show icon on the taskbar** is checked on the Advanced tab. See "Changing advanced settings" on page 139 for more information.

Changing batteries

The battery may be changed while the tablet is turned on, even when the Gateway Tablet PC is not connected to an AC power source. Use only batteries obtained from Motion.

Warning



Danger of explosion if battery is incorrectly replaced.

Replace only with a Gateway Tablet PC or Motion Tablet PC battery. Discard used batteries according to the manufacturer's instructions.

The battery used in this device may present a fire or chemical burn hazard if mishandled. Do not disassemble, heat above 212°F (100°C), or incinerate. Dispose of used battery promptly. Keep away from children.

To change the battery:

1 If the tablet is turned on and is connected to AC power, go to Step 2.

-OR-

If the tablet is turned on and is not connected to AC power, save all active files, then place the tablet in Standby mode by tapping the **Standby** button in the Motion Dashboard. You may now switch batteries safely, but keep in mind that the tablet's internal battery can only hold the tablet in Standby for about thirty seconds when the battery is removed. Be sure to have a charged replacement battery close at hand before removing the first.



2 Push the battery release latch, then lift the battery away from the tablet.



3 Insert the new battery until it clicks into place.



After swapping batteries without connection to AC power, the internal battery needs to recharge for about three hours before it can support another battery swap.

Extending battery life

Conserving battery power

While using the battery to power your tablet PC, conserve power by:

- Modifying the power management settings for maximum power savings. For more information, see "Changing power settings" on page 135.
- Using Standby or Hibernate mode for maximum power savings while your tablet PC is not in use. For more information, see "Activating and using Hibernate mode" on page 140.
- Recharging the battery often, taking an extra battery, and fully recharging the batteries before traveling. For more information, see "Recharging the battery" on page 130 and "Changing batteries" on page 131.
- Keeping in mind that the display, processor, PC cards, wireless cards, and peripheral devices all draw on the battery, so adjust properties and disable unused devices and PC cards when operating on battery power.
- Using the optional diskette drive only when necessary. This drive uses a large amount of power.
- Before unplugging the AC adapter, adjust the power mode and display brightness to lower settings to prolong the battery's charge. We recommend operating in Max Battery mode to prolong the battery's charge—tap the taskbar's Power/Battery icon to choose your power setting. For more information, see "Changing the power scheme" on page 136.
- Turning off the IEEE 802.11b wireless networking.

Using alternate power sources

To extend battery life, use alternate power sources whenever possible.

- Use AC power whenever available to lengthen the battery's usable life. Leave the battery in place when using AC.
- Use AC power when installing software, writing to a CD and, using the DVD player.
- If traveling internationally, take electrical adapters. Save the battery for times when you cannot use a power adapter. If you plan on taking your AC power adapter, also take a single-plug surge protector.

- If you will have access to an EmPowerTM in-flight power receptacle or an automobile cigarette lighter, use an airplane/automobile power adapter or power inverter. Save the battery for times when you cannot use a power adapter.
- To find AC power outlets in airports, look for them next to support pillars, in large areas such as boarding gates, and under banks of telephones.

Changing power modes

You can use the following power modes to lengthen the life of your tablet PC's battery:

- *Standby* while your tablet PC is in Standby, it switches to a low power state where devices, such as the display and drives, turn off.
- Hibernate (also called save to disk) writes all current memory (RAM) information to the hard drive, then turns your tablet PC completely off. The next time you turn on your tablet PC, it reads the memory information from the hard drive and opens the programs and documents that were open when you activated Hibernate mode. For more information on using Hibernate mode, see "Activating and using Hibernate mode" on page 140.

Using power saving modes

Always save your work before using Standby mode. In Standby mode, your tablet PC reduces or turns off the power to most devices except memory. However, the information in memory is not saved to the hard drive. If power is interrupted, the information is lost.

When in Hibernate mode, your tablet PC saves all memory information to the hard drive, then turns the power completely off.

If your tablet PC is	and you want to	then
On	Enter Standby mode	Tap Start, Turn Off Computer, then tap Standby.
On	Enter Hibernate mode (must be activated)	Tap Start , then tap Turn Off Computer . Press and hold SHIFT , then tap Hibernate .
In Standby or Hibernate mode	Exit Standby or Hibernate mode	Slide the power switch.

Changing power settings

You can change the function of the power switch, Standby system key, and power-saving timers by changing power settings on your tablet PC.

You can customize power settings from the Windows Control Panel by selecting power schemes, setting power alarms, adjusting advanced power settings, and activating Hibernate mode.

Power schemes (groups of power settings) let you change power saving options such as when the display or hard drive is automatically turned off. You can select one of the defined power schemes or create a custom power scheme.

The processor installed in your tablet PC may use $Intel^{\otimes}$ SpeedStepTM technology to conserve battery power. A SpeedStep-equipped processor can change its operating speed according to the power source. Your tablet PC's default settings operate the processor at full speed while connected to AC power and at reduced speed (which uses less power) while using battery power. Power schemes also set the speed of an $Intel^{\otimes}$ SpeedStepTM-equipped processor.

Alarms can alert you when the battery charge is low.

Advanced power settings let you assign different power saving modes to the power switch and Standby system key.

Changing the power scheme

- To change the power scheme:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Performance and Maintenance. Tap/Double-tap the Power Options icon. The *Power Options Properties* dialog box opens.

-OR-

Button-tap the **Power/Battery** icon in the taskbar, then tap **Adjust Power Properties**. The *Power Options Properties* dialog box opens.



- **2** Tap the arrow button to open the **Power Schemes** list, then tap the power scheme you want.
 - OR -

Set the timers, then tap Save As and type a name for the scheme.

3 Tap **OK**.



Help and Support



For more information about changing the power scheme, tap **Start**, then tap **Help and Support**.

Type the keyword **power scheme** in the Help and Support Center **Search** box Search , then tap the arrow.


Changing alarm options

- To change the alarm options:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Performance and Maintenance. Tap/Double-tap the Power Options icon. The *Power Options Properties* dialog box opens.

-OR-

Button-tap the **Power/Battery** icon in the taskbar, then tap **Adjust Power Properties**. The *Power Options Properties* dialog box opens.

2 Tap the Alarms tab.

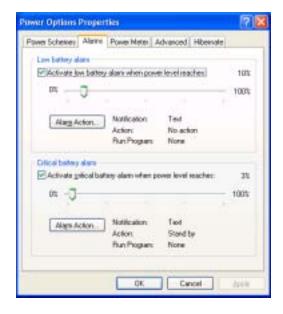



- **3** Adjust the alarm settings.
- **4** Tap **o**K.



Help and Support



For more information about changing the alarm options, tap **Start**, then tap **Help and Support**.

Type the keyword **alarm options** in the Help and Support Center **Search** box Search , then tap the arrow.

Changing advanced settings

To change advanced power management settings:

1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Performance and Maintenance. Tap/Double-tap the Power Options icon. The *Power Options Properties* dialog box opens.

-OR-

Button-tap the **Power/Battery** icon in the taskbar, then tap **Adjust Power Properties**. The *Power Options Properties* dialog box opens.

2 Tap the Advanced tab.



- **3** Tap the arrow button to open a **Power buttons** list, then tap the power setting mode you want to use.
- **4** Tap **OK**.



Help and Support



For more information about changing the power management settings, tap **Start**, then tap **Help and Support**.

Type the keyword **power management** in the Help and Support Center **Search** box Search , then tap the arrow.

Activating and using Hibernate mode




1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Performance and Maintenance. Tap/Double-tap the Power Options icon. The *Power Options Properties* dialog box opens.

-OR-

Button-tap the **Power/Battery** icon in the taskbar, then tap **Adjust Power Properties**. The *Power Options Properties* dialog box opens.

2 Tap the Hibernate tab.

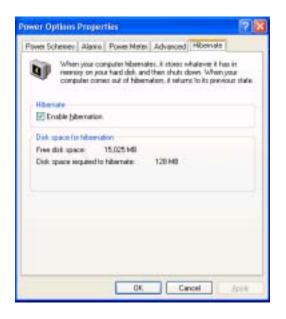

3 Tap the Enable hibernation check box, then tap Apply. *Hibernate* mode is now an option you can select on the Advanced tab in the Power Options Properties dialog box and in the *Turn Off Computer* dialog box.



To use Hibernate mode:

■ As an automatic power savings mode:

Open the *Power Options Properties* dialog box, then tap the **Power Schemes** tab. Tap the arrow button to open a **System hibernates** list, then tap the time you want to use.

- OR -

Open the *Power Options Properties* dialog box, then tap the **Advanced** tab. Hibernate is now an option in the **Power buttons** lists.

■ As a manually-selected power savings mode:

Tap Start, then tap Turn Off Computer. Press and hold SHIFT, then tap Hibernate.



Help and Support



For more information about using Hibernate mode, tap **Start**, then tap **Help and Support**.

Type the keyword **hibernate** in the Help and Support Center **Search** box Search , then tap the arrow.



9

143

Travel Tips

These tips can make traveling with your tablet PC more convenient and trouble-free. Read this chapter to learn about:

- Using the modem
- Using your radio frequency wireless connections
- Transferring files
- Protecting your tablet PC from loss and theft
- Managing your tablet PC's power efficiently

Tips & Tricks



To access the contents of this guide while you are traveling, tap **Start**, **All Programs**, then tap **Gateway Documentation**. You can also download an electronic copy from support.gateway.com/support/manlib/.



Packing your tablet

- Remove all peripheral devices and cables. Remember to pack those you will need while traveling, and do not forget to pack at least one tablet pen.
- Attach the Hard Top or slip the Gateway Tablet PC into its portfolio to protect the display.
- Protect the pen by keeping it in the tablet's pen holder during travel.
- Pack the Gateway Tablet PC securely into a briefcase or hand-carried luggage, and keep it separate from toiletries, liquids, and food. Do not pack it in checked luggage.
- Keep the tablet stable during travel. Secure it to prevent it from sliding around in overhead bins and car trunks.

Traveling by air

- Prepare for airport security by charging the battery in case Security asks you to start the tablet.
- Have it hand-inspected or sent through the X-ray scanner, but never carry it through the metal detector.
- Turn off the tablet for takeoff and landing.
- Do not check the tablet as baggage.

Modem

- Take a telephone cord to connect the modem to telephone jacks. If you are traveling internationally, take telephone jack adapters or an acoustic handset coupler.
- Take a telephone line protector.
- Take a telephone line tester to check for unsafe lines, especially if you are traveling internationally.
- Take remote access information with you so you can connect to your ISP while outside of your usual calling area. A list of country dialing codes may be especially useful if you are traveling internationally.

Radio frequency wireless connections

- Every country has different restrictions on the use of wireless devices. Check with the local radio approval authorities prior to your trip for any restrictions on the use of a wireless device in the destination country.
- See "Safety, Regulatory, and Legal Information" on page 267 for general wireless regulatory guidelines.
- Wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11a, IEEE 802.11b, and IEEE 802.11g communication devices are examples of devices which use wireless to communicate. For instructions on how to turn off your wireless device, see "Turning your wireless Ethernet on or off" on page 177.

Files

- Copy your working files from your desktop computer to your tablet PC before you travel.
- If you need to access your desktop computer files from your tablet PC while traveling, set up your desktop computer for remote access. Contact your network administrator for more information about remote access.
- Take extra diskettes or recordable CDs for transferring files between computers and backing up files.

Security

- Get a locking cable for your tablet PC so you can attach a cable lock and leave your tablet PC in your hotel room while you are away.
- Always keep your tablet PC with you while waiting in airports, train stations, or bus terminals. Be ready to claim your tablet PC as soon as it passes through the x-ray machine in security checkpoints.
- Write down your tablet PC model number and serial number (see "Identifying your model" on page 11) in case of theft or loss, and keep the information in a safe place. Also, tape your business card or an address label to your tablet PC and accessories.
- Whoever sits next to you or behind you can see your tablet PC display. Avoid working with confidential files until you can be sure of privacy.
- Use a startup password to restrict access to your tablet PC.

Important



Use a password that you can remember, but that is difficult for someone else to guess. The password feature is very secure, with no easy way to recover a forgotten password. If you forget your password, you must return your tablet PC to Gateway for service. Call Gateway Technical Support for instructions.

- To create a startup password:
 - 1 Restart your tablet PC. As soon as you see a startup screen, press Hot Key 2 . The BIOS Setup utility opens.
 - 2 Open the Security menu.
 - **3** Highlight **Set System Password**, then press **ENTER** and follow the instructions.
 - 4 Highlight Password on boot, then press ENTER.
 - 5 Highlight Enabled, then press ENTER.
 - 6 Open the Exit menu, highlight Exit Saving Changes, then press ENTER. When you start your tablet PC, you are prompted to enter the password you set.



Power

- Take your AC power adapter to recharge the battery. If you are traveling internationally, take power plug adapters. A current converter is not necessary.
- Take a portable surge protector to protect your tablet PC from power surges.
- To get the best performance from your tablet PC, avoid using the battery whenever possible, monitor the battery charge, and use the most efficient power management settings.
 - For information on conserving battery power, see "Conserving battery power" on page 133.
 - For information on using alternate power sources, see "Using alternate power sources" on page 133.
 - For information on monitoring the battery charge, see "Monitoring the battery charge" on page 128.

Additional tips

- If you plan to use several USB peripheral devices, take a portable USB hub to provide additional USB ports.
- Take a network cable if you need to connect to a network. Some hotels provide Internet connectivity only through their networks.
- If your tablet PC has been exposed to cold temperatures, allow it to warm to room temperature before turning it on.
- Carry proof of ownership or a merchandise passport when traveling internationally.
- Consult your insurance company and credit card company to learn about emergency travel assistance if your tablet is lost or damaged.
- Take the optional DVD/CD-RW drive, its cables, and its power adapter in case you need to install software. Take your *System Restoration CDs* in case you need to install an additional driver, software, or the operating system.



Customizing 10 Your Tablet PC

This chapter provides information about customizing your tablet PC by changing settings in Windows or the Dashboard. Read this chapter to learn how to:

- Change screen and display settings
- Change the background and screen saver
- Adjust the touchpad settings
- Add, change, and switch user accounts



Using the display

Changing display orientation

You can change the display orientation from the default, landscape (horizontal), to portrait (vertical) or secondary landscape (180 degrees from the default) with either Hot Key 1 or Hot Key 2.

- To change display orientation:
 - Press Hot Key 2 (to scroll through display options.
 - OR -

To use the Motion Dashboard, press Hot Key 1 \square , then tap the orientation you want in the **Display Orientation** section.



- To change orientation properties:
 - Double-tap the **Tablet and Pen Settings** icon **i** in the taskbar, then tap the **Display** tab.



Adjusting brightness

- To adjust screen brightness:
 - Press Hot Key 1 □ to open the Dashboard, then drag the **Display Brightness** slider to the level you want.
 - OR -

Double-tap the **Tablet and Pen Settings** icon in the taskbar, then tap the **Display** tab. Click the arrow button to open the **Settings for** list, then click the power scheme you are adjusting. Drag the **Brightness** slider to the level you want.



Adjusting the screen and desktop settings

Adjusting the color depth and screen area are two of the most basic display settings you may need to change. You can also adjust settings such as the screen background and screen saver.

Adjusting the color depth

Color depth is the number of colors your screen displays. Various image types require various color depths for optimum appearance. For example, simple color drawings may appear adequately in 256 colors while color photographs need millions of colors to be displayed with optimum quality.

Windows lets you choose from several color depth settings. We recommend that you use the 32-bit True Color setting at all times.

If the color in your images seems "false" or "jumpy," especially after you have played a game or run a video-intensive program, check the color depth setting and return it to 32-bit True Color, if necessary.




To change the color depth:

- 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Appearance and Themes.
- **2** Tap/Double-tap the **Display** icon. The *Display Properties* dialog box opens.



3 Tap the **Settings** tab.

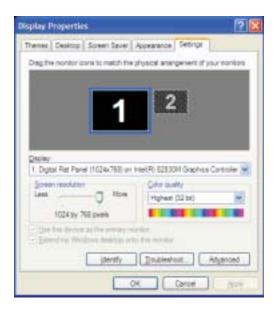

- **4** Tap the arrow button to open the **Color quality** list, then tap the color depth you want.
- **5** To save your changes, tap **OK**, then tap **Yes**.



Help and Support




For more information about adjusting display settings, tap **Start**, then tap **Help and Support**.

Type the keyword **changing display settings** in the Help and Support Center **Search** box Search then tap the arrow.

Adjusting the screen resolution

You can increase the screen resolution to fit more icons on your desktop, or you can decrease the resolution to make reading the display easier. The higher the resolution, the smaller individual components of the screen (such as icons and menu bars) appear.

- To adjust the screen resolution:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Appearance and Themes.
 - **2** Tap/Double-tap the **Display** icon. The *Display Properties* dialog box opens.
 - **3** Tap the **Settings** tab.

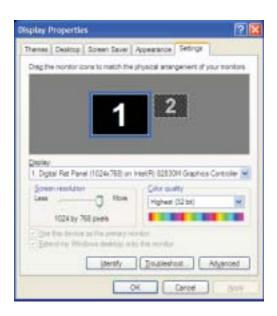

- **4** Drag the **Screen resolution** slider to the size you prefer.
- **5** To save your changes, tap **OK**, then tap **Yes**.



Help and Support



For more information about adjusting screen resolution, tap **Start**, then tap **Help and Support**.

Type the keyword **changing screen resolution** in the Help and Support Center **Search** box

Search , then tap the arrow.

Changing the colors on your Windows desktop

You can change the colors of Windows desktop items, such as the background color and dialog box title bars.

- To change desktop colors:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Appearance and Themes.
 - **2** Tap/Double-tap the **Display** icon. The *Display Properties* dialog box opens.
 - **3** Tap the **Appearance** tab.



- **4** Tap the arrow button to open the **Color scheme** list, tap the color scheme you want, then tap **OK**. The new colors appear on your desktop.
 - OR -

If you want to create a new color scheme as part of a desktop theme:

- **a** Tap Advanced. The Advanced Appearance dialog box opens.
- **b** Tap the arrow button to open the **Item** list, then tap the item you want to change.
- **C** Change the color or font settings for the item.
- d Tap OK, then tap the Themes tab.
- **e** Tap **Save As**, type a name for the new theme, then tap **OK** twice. The new colors appear on your desktop.



Changing the desktop background

You can change the Windows desktop background picture. Windows provides several backgrounds, or you can use pictures that you have created or retrieved from other sources.

- To change the desktop background:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Appearance and Themes.
 - 2 Tap/Double-tap the Display icon. The Display Properties dialog box opens.



3 Tap the **Desktop** tab.



- **4** Tap a background picture in the **Background** list.
 - OR -

Tap Browse to select a background picture from another location.

- 5 If you want the picture you chose to cover the entire screen, tap the arrow button to open the **Position** list, then tap **Stretch** or **Tile**.
- **6** If the picture you chose does not cover the entire screen and you did not choose to stretch or tile the image in Step 5, you can change the solid color behind the picture by tapping the arrow button to open the **Color** list, then tapping a color.
- **7** Tap **o**K.



Help and Support



For more information about changing the desktop background, tap **Start**, then tap **Help and Support**.

Type the keyword **changing desktop background** in the Help and Support Center **Search** box

Search _________, then tap the arrow.

Selecting a screen saver

You can use a screen saver to keep others from viewing your display while you are away from your tablet PC. Windows supplies a variety of screen savers that you can choose from, and many more are available from the Internet and as commercial products.

- To select a screen saver:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Appearance and Themes.
 - **2** Tap/Double-tap the **Display** icon. The *Display Properties* dialog box opens.
 - 3 Tap the Screen Saver tab.



- **4** Tap the arrow button to open the **Screen Saver** list, then tap the screen saver you want. Windows previews the screen saver.
- **5** If you want to customize the screen saver, tap **Settings**, then make your changes. If the Settings button is not available, you cannot customize the screen saver you selected.



- **6** If you want to display the Welcome (Login) screen whenever you exit the screen saver, tap the **On resume**, **display Welcome screen** check box.
- **7** If you want to change the time before the screen saver is activated, tap the up or down arrows next to the **Wait** box.
- **8** Tap **OK**.



Help and Support



For more information about selecting a screen saver, tap **Start**, then tap **Help and Support**.

Type the keyword **screen savers** in the Help and Support Center **Search** box Search , then tap the arrow.

Adjusting tablet and pen settings

Windows XP Tablet PC Edition includes a control panel for adjusting pen, display, and button preferences such as:

- Right-handed vs. left-handed use
- Pen calibration in portrait and landscape modes
- Screen brightness
- **■** Button functions
- Pen actions such as double-tapping
- To change tablet and pen settings:
 - 1 Double-tap the **Tablet and Pen Settings** icon **[** in the taskbar. The *Tablet and Pen Properties* dialog box opens.
 - 2 Tap the Pen Options tab.
 - **3** Change the pen options settings, then tap **OK**.



Programming the buttons

Most of the buttons on the tablet's front can be reprogrammed with new functions and secondary functions.

- To reprogram button functions:
 - 1 Double-tap the **Tablet and Pen Settings** icon **i** in the taskbar. The *Tablet and Pen Properties* dialog box opens.
 - 2 Tap the Tablet Buttons tab.
 - **3** Change the button settings, then tap **OK**.



Using the Motion Dashboard

The Motion Dashboard can act as a control panel, a status display, and a program launcher.



From Dashboard you can:

- Open the *Motion Welcome Page* for helpful information any time
- Adjust the Gateway Tablet PC's volume, power, and display options
- Check tablet status readings
- Turn on wireless operations
- Open programs
- Reprogram Hot Keys
- To open the Motion Dashboard:
 - Press Hot Key 1 □.



Properties adjust as soon as you change them.

This feature:	Does this:
Speaker Volume	Adjusts or mutes the volume of the Gateway Tablet PC's audio output: built-in speakers, external speakers, or headphones.
Display Brightness	Adjusts the display's brightness level.
Calibrate	Opens the Pen Calibration utility.
Display Rotation	Changes the display's orientation.
Graphics Properties	Adjusts the display properties for an external monitor.
Properties	Opens the Power Management Properties dialog box.
Power Scheme	Provides access to Power Schemes.
Power Button	Adjusts the function of the Power Switch.
Wireless Operation	Turns the mini-PCI wireless network feature on or off.
Battery	Displays battery status.
Wireless Status	Displays the status and strength of the optional wireless LAN's signal.
Quick Keys	Performs the keyboard equivalent of various keystrokes.
Shortcuts	Provides shortcut access to designated software programs.
Display Keyboard	Opens the on-screen Tablet Input Panel for typing, writing, and voice input.
Stand By	Puts the tablet in Standby mode for safe battery swapping or temporary suspension.

Using speech recognition

The Gateway Tablet PC is designed to accept and interpret the human voice, both for dictation (speech recognition) and for keyboard-equivalent voice commands.

- Set up speech recognition through the Tablet PC Input Panel's **Tools** menu.
- Learn more about voice commands in the **Accessibility** section of the Help and Support Center.
- Use the built-in microphone or connect an external microphone.

Adding and modifying user accounts

You can create and customize a user account for each person who uses your tablet PC. You can also *switch* (change) user accounts without turning off your tablet PC.

User account tips

- If you want to create an account for someone, but you do not want that user to have full access to your tablet PC, be sure to make that account *limited*. Remember that limited accounts may not be able to install some older programs.
- If a program or peripheral device is installed in one account, it may not be available in other accounts. If this happens, install the program or device in the accounts that need it.
- Files created in one account are not accessible from other accounts unless the files are stored in the *Shared Documents* folder. The Shared Documents folder is accessible from all accounts on that tablet PC and from other computers on the network.

- To add, delete, or modify user accounts:
 - 1 Tap Start, then tap Control Panel.
 - **2** Tap/Double-tap the **User Accounts** icon. The *User Accounts* window opens.
 - **3** Follow the on-screen instructions to add, delete, or modify a user account.



Help and Support



For more information about user accounts, tap **Start**, then tap **Help and Support**.

Type the keyword **user accounts** in the Help and Support Center **Search** box Search , then tap the arrow.

- To switch user accounts:
 - 1 Tap Start, then tap Log Off. The Log Off Windows dialog box opens.



- **2** Tap **Switch User**. The Windows *Welcome* screen opens.
- **3** Tap the user account that you want to use. When you switch between user accounts, any programs that were running for the previous user continue to run.





Networking Your Tablet PC

11

Connecting your home, small office, or home office computers lets you share drives, printers, and a single Internet connection among the connected computers.

Read this chapter to learn about:

- Benefits of using a network in your home, small office, or home office
- Types of network connections
- Purchasing additional network equipment
- Installing and configuring your tablet PC for Ethernet networking
- Turning wireless Ethernet on and off



Benefits of networking

A network lets you:

- Share a single Internet connection
- Share computer drives
- Share peripheral devices
- Stream audio and video files
- Play multi-player games

Sharing a single Internet connection

Each computer that is connected to the network can share the same broadband connection or modem and telephone line and access the Internet at the same time. This saves on the cost of installing another telephone line for your second computer and paying for a second Internet service provider (ISP) account.

Help and Support



For more information about sharing an Internet connection, tap **Start**, then tap **Help and Support**.

Type the keyword **internet sharing** in the Help and Support Center **Search** box Search tap the arrow.

Sharing drives

With a network, you can copy files from computer to computer by copying and pasting or dragging and dropping. You will no longer waste your time transferring files by using diskettes. In addition, you can *map* a drive on a networked computer to another computer, and access the files as if they were located on the hard drive of the computer you are using.

Help and Support



For more information about sharing network drives, tap **Start**, then tap **Help and Support**.

Type the keyword **sharing network drives** in the Help and Support Center **Search** box Search then tap the arrow.

Sharing peripheral devices

Each computer that is connected to the network can share the same peripheral devices, such as a printer. Select print from the computer you are currently using and your file is automatically printed on your printer no matter where it is located on your network.

Help and Support



For more information about sharing network devices, tap **Start**, then tap **Help and Support**.

Type the keyword **sharing** in the Help and Support Center **Search** box search , then tap the arrow.

Streaming audio and video files

With a network, you can store audio files (such as the popular .MP3 files) and video files on any networked computer, then play them on any of the other computers or devices connected to your network. This process is called *streaming*.

Help and Support



For more information about streaming files, tap **Start**, then tap **Help and Support**.

Type the keyword **streaming** in the Help and Support Center **Search** box Search , then tap the arrow.

Playing multi-player games

With a home network, you can play multi-player games. Load a game like *Microsoft Midtown Madness 2* on your computers, and in minutes, you and your friends can race in competing cars through the streets of San Francisco.

Help and Support



For more information about playing multi-player games, tap **Start**, then tap **Help and Support**.

Type the keyword **games** or **network games** in the Help and Support Center **Search** box Search then tap the arrow.

Selecting a network connection

The biggest decision you need to make when creating your network is what type of connection you will use. Gateway supports both wired and wireless Ethernet networks. Use the following criteria as a guide when selecting a network connection.

Wired Ethernet network

Create a wired Ethernet network if:

- You are building a new home or your existing home already has Ethernet cable installed in each room that has a device you want to connect
- You are creating a network in an office or business where network speed is more important than moving about with your computer
- Your computer has an Ethernet jack for connecting to the network

Wireless Ethernet network

Create a wireless Ethernet (IEEE 802.11a, IEEE 802.11b, or IEEE 802.11g) network if:

- You are looking for an alternative to installing cable for connectivity
- The ability to move about with your computer is as important as network speed
- Your computer has wireless Ethernet for networking

Help and Support



For more information about selecting network connections, tap **Start**, then tap **Help and Support**.

Type the keyword **networks** or **network types** in the Help and Support Center **Search** box

Search _______, then tap the arrow.

Using a wired Ethernet network

A wired Ethernet network consists of two or more computers connected together through an Ethernet cable. This connection type is commonly used in offices around the world and can be used to build computer networks in the home.

Ethernet, Fast Ethernet, or Gigabit Ethernet

Ethernet is available at three different speeds. Standard Ethernet runs at 10 Mbps, Fast Ethernet runs at 100 Mbps, and Gigabit Ethernet runs at 1000 Mbps. Most home networks are built using Standard or Fast Ethernet components. Business networks are typically built using Fast or Gigabit Ethernet components.

To create a wired Ethernet network, you or your electrician must:

■ Install special Ethernet cables in your home or office

Important



Check local code requirements before installing Ethernet cable or other wiring in your home or office. Your municipality may require you to obtain a permit and hire a licensed installer.

- Install an Ethernet card in each of your desktop computers (if your computers do not already have built-in Ethernet jacks)
- Install an Ethernet PC Card in each of your notebooks (if your notebooks do not already have built-in Ethernet jacks)
- Install an Ethernet *router*, *switch*, or *hub*

Tips & Tricks



If you are connecting just two computers, you can eliminate the router, switch, or hub and use a special *crossover* cable.

Example wired Ethernet network

The following is an example of a wired Ethernet network. The network is made up of a router, a cable or DSL modem, your computers, and cables connecting each of these components. The router is the central control point for the network. Attached to the router are all of your computers or Ethernet-ready devices. Also connected to the router is a cable or DSL modem that provides access to the Internet.



Tips & Tricks



To add the ability to access a wireless Ethernet network to your wired Ethernet network, connect an access point to the router, switch, or hub. For more information about accessing a wireless Ethernet, see "Using a wireless Ethernet network" on page 172.

Equipment you need for a wired Ethernet network

For a wired Ethernet network you need:

- An Ethernet jack on each desktop computer, notebook, and tablet PC.
 - OR -

An Ethernet card installed in each desktop computer.

- OR -

An Ethernet PC Card installed in each notebook.

- An Ethernet router. Select a router that gives you the following features:
 - A jack for connecting to a cable or DSL modem.
 - The ability to assign IP addresses to your networked computers dynamically. This prevents intruders from seeing the computers over the Internet.
 - A built-in *firewall* to protect the computers on your network from intruders trying to access your data over the Internet.
 - Built-in switching (with enough ports for all computers and devices on the network) so you will not have to purchase a hub or switch.
- If you did not purchase a router that includes built-in switching or if the router does not have enough ports to attach all your computers, an Ethernet hub or switch with enough ports for all computers and devices in the network.
- Ethernet cable going from each computer to the router, hub, or switch.

Important



For best results, all Ethernet components should be either standard Ethernet (10 Mbps), Fast Ethernet (100 Mbps or 10/100), or Gigabit Ethernet (1000 Mbps or 10/100/1000). A mixture of components rated at different speeds will result in your network running at the speed of the slowest rated component.

Using a wireless Ethernet network

A wireless Ethernet network is ideal for creating a home or office network or adding mobility to an existing wired Ethernet.

Warning



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11a, IEEE 802.11b, and IEEE 802.11g communication devices are examples of devices that provide wireless communication. For instructions to turn wireless Ethernet on and off, see "Turning your wireless Ethernet on or off" on page 177.

Important



See "Safety, Regulatory, and Legal Information" on page 267 for general wireless regulatory and safety quidelines.

Wireless Ethernet is available at two different speeds. IEEE 802.11a and IEEE 802.11g wireless Ethernet run at speeds up to 54 Mbps, or about half the speed of Fast Ethernet. 802.11b wireless Ethernet runs at speeds up to 11 Mbps, or approximately the same speed as standard wired Ethernet. This type of network allows you the freedom to move about your home or office with your tablet PC. For example, you can take your tablet PC from your home office to your patio without having an Ethernet jack available.

Important




The speed of a wireless network is related to signal strength. Signal strength is affected by the distance between your wireless network devices, by radio interference, and by interference from natural obstructions such as walls, floors, and doors.

The two most common types of wireless Ethernet networks are access point and peer-to-peer.

Example access point wireless Ethernet network

By using an *access point*, you can join a wireless Ethernet network and access a wired Ethernet network. An access point also lets you access the Internet.

The following is an example of an access point wireless Ethernet network. The network is made up of an access point, a cable or DSL modem, and your computers. The access point is the central control point for the network. Attached to the access point is the cable or DSL modem that provides access to the Internet. Each of the computers or Ethernet-ready devices communicate with the access point using radio waves. If your computer does not have built-in wireless Ethernet capabilities, you need to add a wireless PCI card (desktop), PC card (notebook), or USB adapter.

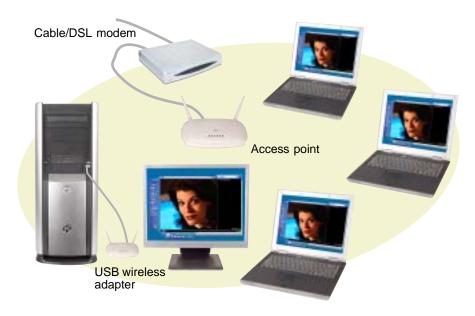

Tips & Tricks



If you want to access a wireless Ethernet network from your wired Ethernet network, connect an access point to the router, switch, or hub. For more information about accessing a wired Ethernet, see "Using a wired Ethernet network" on page 169.

Equipment you need for an access point wireless Ethernet network

For an access point wireless Ethernet network you need:

- A wireless Ethernet PCI card installed in each desktop computer
 - OR -

A wireless Ethernet USB adapter attached to each desktop computer

- OR -

A notebook or tablet PC with wireless Ethernet built-in

- OR -

A wireless Ethernet PC Card installed in each notebook that does not have wireless Ethernet built-in

 A wireless Ethernet access point to connect your wireless Ethernet network to the Internet or a wired Ethernet network

Important




IEEE 802.11b and IEEE 802.11g use the same radio frequency. IEEE 802.11a uses a different radio frequency than IEEE 802.11b and IEEE 802.11g. All wireless Ethernet components should use the same frequency. A combination of IEEE 802.11a and IEEE 802.11b or IEEE 802.11a and IEEE 802.11g components will not work. Some wireless devices can broadcast and receive signals on both frequencies.

A mixture of IEEE 802.11b and IEEE 802.11g components will result in your network running at the speed of the slower IEEE 802.11b components.

Example peer-to-peer wireless Ethernet network

Use a peer-to-peer (also known as ad hoc) wireless Ethernet network if you are setting up or joining a temporary computer-to-computer network. This type of network does not include access into a wired network or the Internet. You can create this type of network to quickly move files from one computer to another.

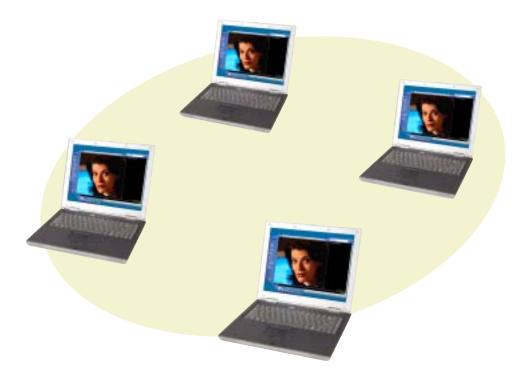

Equipment you need for a peer-to-peer wireless Ethernet network

For a peer-to-peer wireless Ethernet network you need:

- A wireless Ethernet PCI card installed in each desktop computer
 - OR -

A wireless Ethernet USB adapter attached to each desktop computer

- OR -

A notebook or tablet PC with wireless Ethernet built-in

- OR -

A wireless Ethernet PC Card installed in each notebook that does not have wireless Ethernet built-in

For more information

For more information about purchasing equipment for your home or office Ethernet network, discuss your particular needs with your Gateway store representative. In addition, several books and Internet sites are dedicated to networking. See these sources for more information about networking your home or office with wired or wireless Ethernet.

Help and Support



For more information about networking, tap Start, then tap Help and Support.

Type the keyword **networking** in the Help and Support Center **Search** box Search , then tap the arrow.

Using your tablet PC on a network

Installing and configuring your tablet PC for Ethernet networking

A guide in .PDF format has been included on your hard drive that provides instructions for installing and configuring both wired and wireless Ethernet networking on your tablet PC. To access this guide, tap Start, All Programs, then tap Gateway Documentation.

Turning your wireless Ethernet on or off

Warning



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11a, IEEE 802.11b, and IEEE 802.11g communication devices are examples of devices that provide wireless communication.

Important



When using wireless connectivity in low-reception areas, be sure to keep your hands clear of the antenna zones.

- To turn wireless Ethernet on or off using the Dashboard:
 - 1 Press Hot Key 1 (1) to open the Dashboard.
 - **2** To turn wireless Ethernet on, tap to check the Wireless Operation check box.

-OR-

To turn wireless Ethernet off, tap to clear the Wireless Operation check box.



See "Using the Motion Dashboard" on page 160 for more information.

- To turn wireless Ethernet on or off using Windows XP:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Network and Internet Connections. The *Network and Internet Connections* window opens.
 - **2** Tap/Double-tap **Network Connections**. The *Network Connections* window opens.
 - **3** Button-tap Wireless Network Connection, then tap Enable to turn on wireless Ethernet or tap Disable to turn off wireless Ethernet.





Moving from Your Old Computer

12

If your new tablet PC is replacing an old computer, you may have personal data files, Internet settings, a printer or other peripheral devices, and other unique computer settings that you want to move from your old computer to your new one. Read this chapter to learn about:

- Using the Files and Settings Transfer Wizard
- Transferring Files
- Transferring Internet Settings
- Installing your old printer or scanner
- Installing your old programs



Using the Files and Settings Transfer Wizard

You can move your data files and personal settings, such as display, Internet, and e-mail settings, from your old computer to your new one by using the Files and Settings Transfer Wizard. The wizard also moves specific files or entire folders, such as My Documents, My Pictures, and Favorites.

- To open the Files and Settings Transfer Wizard:
 - Tap Start, All Programs, Accessories, System Tools, then tap Files and Settings Transfer Wizard.



Help and Support



For more information about using the Files and Settings Transfer Wizard, tap **Start**, then tap **Help and Support**.

Type the keyword **using transfer wizard** in the Help and Support Center **Search** box Search the tap the arrow.

Transferring files

You can manually transfer your personal data files by copying them to removable media, such as a diskette, writable CD, or Zip disk, or by using a network. For more information, see "Creating CDs" on page 100 and "Networking Your Tablet PC" on page 165.

Finding your files

Many programs automatically save your personal data files in the My Documents folder. Look in your old computer's My Documents folder for personal data files. Use Windows Find or Search to locate other personal data files. For more information, see "To find files using Find or Search:" on page 182, or see "Searching for files" on page 68.

- To find files in the My Documents folder:
 - 1 In Windows XP, click **Start**, then click **My Documents**. The *My Documents* window opens and displays many of your saved personal data files. Go to Step 4.
 - OR -

In Windows 98, Windows Me, or Windows 2000, double-click the **My Computer** icon on the desktop. Go to the next step.

- **2** Double-click the **C**:\ drive icon.
- 3 Double-click the **My Documents** folder. The *My Documents* window opens and displays many of your saved personal data files.
- 4 Copy your personal data files to removable media or to another computer on your network.



You can often identify different data file types by looking at the file's *extension* (the part of the file name following the last period). For example, a document file might have a .DOC extension and a spreadsheet file might have an .XLS extension.

File type	File usually ends in
Documents	.DOC, .TXT, .RTF, .HTM, .HTML, .DOT
Spreadsheets	.XLS, .XLT, .TXT
Pictures	.JPG, .BMP, .GIF, .PDF, .PCT, .TIF, .PNG, .EPS
Movies	.MPEG, .MPG, .AVI, .GIF, .MOV
Sound and Music	.WAV, .CDA, .MP3, .MID, .MIDI, .WMA

To find files using Find or Search:

- 1 In Windows XP, click Start, then click Search. The Search Results window opens.
 - OR -

In Windows 98, Windows Me, or Windows 2000, click **Start**, **Find** or **Search**, then click **For Files or Folders**. The *Search Results* window opens.

2 Use Windows Find or Search to locate data files by file name or file type. For help on finding files, click **Help**, then click **Help and Support Center** or **Help Topics**. For more information, see "Searching for files" on page 68.



Help and Support



For more information about finding files, tap **Start**, then tap **Help and Support**.

Type the keyword **searching for files** in the Help and Support Center **Search** box Search arrow, then tap the **Full-text Search Matches** button.

Transferring Internet settings

You can use different methods to transfer your Internet account from your old computer to your new one.

Setting up your ISP

- If your current Internet service provider (ISP) software came preinstalled on your new tablet PC, run that setup program. If it asks to set up a new account or an existing one, choose to set up an existing account.
- If your current ISP software is not preinstalled on your new tablet PC, locate the original Internet setup program provided by your local ISP, or contact your ISP to see if they have an updated version of their software, and install it on your new tablet PC.
- If you use MSN as your ISP, or if you know your ISP settings, use the Windows Internet Connection Wizard.
- To use the Internet Connection Wizard:
 - 1 Tap Start, All Programs, Accessories, Communications, then tap New Connection Wizard. The New Connection wizard opens.
 - **2** Configure your Internet settings by following the on-screen instructions.



Help and Support



For more information about setting up an Internet connection, tap **Start**, then tap **Help and Support**.

Type the keyword **Internet connection** in the Help and Support Center **Search** box Search the arrow.

Transferring your e-mail and address book

See your old e-mail program's online help for information on *exporting* and *importing* e-mail messages and the address book. You can often export all of your old e-mail messages or address book to a diskette, then import them from the diskette into your new tablet PC's e-mail program. You may also want to consider printing the old information or using your old computer to send the e-mail messages to yourself, then using your new tablet PC to retrieve the e-mail messages.

Transferring your Internet shortcuts

You can export and import your old Netscape Navigator bookmarks or Microsoft Internet Explorer favorites. For more information, see your Internet browser program's online help.

Installing your old printer or scanner

Windows may have built-in support for older printers, scanners, or other peripheral devices. This means you do not need any additional software. Newer devices, however, usually require your original software installation CDs or diskettes.

If you have trouble after you install the software for your old devices, you can use System Restore to restore your tablet PC's previous settings.

Help and Support



For information about restoring your tablet PC's previous settings, tap **Start**, then tap **Help and Support**.

Type the keyword \mathbf{System} $\mathbf{Restore}$ in the Help and Support Center \mathbf{Search} box \mathbf{Search} then tap the arrow.

USB devices may have special installation instructions. See your USB device's installation guide.

Installing your old programs

You probably use some programs that did not come installed on your new tablet PC, such as personal finance software, graphics programs, or games.

Spend some time going through your old computer's Start and Programs menus, making note of any programs you want to install on your new tablet PC. Locate your original program installation CDs and installation guides. Your original CDs and guides should contain any serial numbers or product ID keys that may be required for program installation and registration. Remember to check the publisher's Web site for important program updates.

Tips & Tricks



If your new tablet PC comes with a newer version of a program, it is usually better to use the newer version than to reinstall the old one.

If you have trouble after installing your old programs, you can restore your tablet PC's previous settings using System Restore.

Help and Support



For more information about restoring your tablet PC's previous settings, tap **Start**, then tap **Help and Support**.

Type the keyword **System Restore** in the Help and Support Center **Search** box Search the arrow.

Chapter 12: Moving from Your Old Computer



Maintaining Your Tablet PC

13

This chapter provides basic information about maintaining your tablet PC hardware and software. Read this chapter to learn how to:

- Care for your tablet PC
- Create an emergency startup diskette
- Protect your tablet PC from viruses
- Manage hard drive space
- Back up files
- Clean your tablet PC



General Guidelines

- Protect the Gateway Tablet PC from exposure to extreme temperatures, shock, liquids, strong magnetic fields, and turbulent conditions.
- Operate your Tablet PC in the temperature range of 41°F to 95°F (5°C to 35°C)
- Do not block the side heat vent.
- Do not open or disassemble the tablet other than to replace memory modules.
- When storing the tablet for an extended period of time, unplug AC power and remove the battery after discharging it partway.
- Do not place heavy objects on top of the tablet.

Display screen

- Use only the tablet's pen on the display. Do not write on the surface with an ink pen or pencil.
- Nothing heavier than your writing hand should be placed on top of the display.
- Protect the display surface from unnecessary contact by using the Hard Top or a case when transporting the Gateway Tablet PC.
- Never spray or pour liquids directly on the display surface.
- Avoid prolonged exposure to direct sunlight.
- Use the included cleaning cloth or similar soft fabric to wipe away dust and fingerprints. Dampen the cloth with water but never spray anything directly on the surface. If liquid collects around the edges, wipe it up immediately.

Pen

- Always store the pen in the Gateway Tablet PC's pen holder when not in use.
- Store extra pens horizontally in a box or drawer.
- Pens should not be stored vertically on the tip because constant tip pressure can affect pen-screen interaction.
- The pen has electronics in it, so it should not be exposed to or immersed in liquids.

Replacing the pen point

Normal use wears down the pen's point, so the pen ships with extra points and a replacement tool. To use the tool, grasp the old point with the ring and pull. Insert a new point and apply slight pressure to set it in place.

Caring for your tablet PC

To extend the life of your system:

- Be careful not to bump or drop your tablet PC, and do not put any objects on top of it. The case, although strong, is not made to support extra weight.
- When transporting your tablet PC, we recommend that you put it in a carrying case.
- Keep diskettes and your tablet PC away from magnetic fields. Magnetic fields can erase data on both diskettes and hard drives.
- Never turn off your tablet PC when the hard drive light is on because data on the hard drive could be lost or corrupted.
- Avoid subjecting your tablet PC to extreme temperature changes. The case and LCD panel can become brittle and easy to break in cold temperatures and can melt or warp in high temperatures. Damage due to either extreme is not covered by your warranty. As a general rule, your tablet PC is safest at temperatures that are comfortable for you.

- Keep all liquids away from your tablet PC. When spilled onto computer components, almost any liquid can result in extremely expensive repairs that are not covered under your warranty.
- Avoid dusty or dirty work environments. Dust and dirt can clog the internal mechanisms.

Use the following table to set up a regular maintenance schedule.

Maintenance task	Immediately after purchase	Monthly	When needed	See
Create an emergency diskette	Х			page 191
Check for viruses		X	X	page 193
Manage hard drive space			Χ	page 196
Clean up hard drives		X	Χ	page 196
Scan hard drive for errors		X	X	page 198
Defragment hard drive		Х	X	page 199
Back up files		Х	Χ	page 201
Clean tablet PC case			X	page 203
Clean keyboard			X	page 203
Clean tablet PC screen			X	page 204
Clean mouse			X	page 204

Creating an emergency startup diskette

An *emergency startup diskette* is a diskette that contains critical information that you need to start your tablet PC if Windows fails to start. You should create a startup diskette as soon as you get your tablet PC.

Important




This procedure uses a diskette drive. If you do not have a diskette drive, you can purchase a drive from the Gateway Accessories Store at accessories.gateway.com.

- To create an emergency startup diskette:
 - 1 Insert a blank diskette labeled **Startup** into the diskette drive.
 - **2** Tap **Start**, then tap **My Computer**. The *My Computer* window opens.
 - **3** Button-tap **3**½ **Floppy (A:)**, then tap **Format**. The *Format* **3**½ *Floppy (A:)* dialog box opens.





- **4** Tap to select the **Create an MS-DOS startup disk** check box, then tap **Start**. A message warns you that any information on the diskette will be erased.
- **5** When you see the warning message, tap **OK**. Windows copies files to the emergency startup diskette.
- **6** When Windows finishes copying files, remove the diskette from the diskette drive.
- 7 Slide the write-protect tab up to prevent the diskette from being erased or infected by viruses.

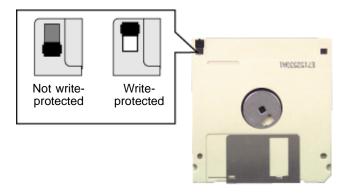

8 Store your emergency startup diskette in a safe place with your other backup software media.



Protecting your tablet PC from viruses

A *virus* is a program that attaches itself to a file on a computer, then spreads from one computer to another. Viruses can damage data or cause your tablet PC to malfunction. Some viruses go undetected for a period of time because they are activated on a certain date.

Protect your tablet PC from a virus by:

- Using the Norton[®] AntiVirus program to check files and programs that are on diskettes, attached to e-mail messages, or downloaded from the Internet.
- Checking all programs for viruses before installing them.
- Disabling macros on suspicious Microsoft Word and Excel files. These programs will warn you if a document that you are opening contains a macro that might have a virus.
- Periodically updating the Norton AntiVirus program to protect against the latest viruses.

Help and Support



For more information about protecting your tablet PC against viruses, tap **Start**, then tap **Help and Support**.

Type the keyword **viruses** in the Help and Support Center **Search** box search part in the tap the arrow.

- To scan for viruses:
 - 1 Tap Start, All Programs, Norton AntiVirus, then tap Norton AntiVirus 2003. Norton AntiVirus opens.



2 Tap Scan for Viruses.



3 Tap the type of scan you want to make in the Scan for Viruses area, then under Actions, tap **Scan**.



- To remove a virus:
 - 1 If Norton AntiVirus finds a virus, follow all on-screen instructions to remove the virus.
 - **2** Turn off your tablet PC and leave it off for at least 30 seconds.
 - **3** Turn on your tablet PC and rescan for the virus.



- To update Norton AntiVirus:
 - **1** Make sure that you are connected to the Internet.
 - **2** Tap Start, All Programs, Norton AntiVirus, then tap LiveUpdate Norton AntiVirus. The LiveUpdate wizard opens.
 - **3** Follow the on-screen instructions to update your Norton AntiVirus program with the latest virus protection files.
 - 4 When the program has finished, tap Finish.




Managing hard drive space

Windows provides several utilities you can use to manage your hard drive.

Checking hard drive space

- To check hard drive space:
 - 1 Tap Start, then tap My Computer. The My Computer window opens.
 - **2** Button-tap the drive that you want to check for available file space, then tap **Properties**. Drive space information appears.

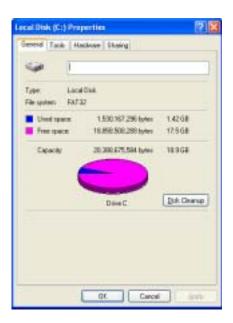



Using Disk Cleanup

Delete unnecessary files, such as temporary Windows files, to free hard drive space.

- To use the Windows Disk Cleanup program:
 - 1 Tap Start, then tap My Computer. The My Computer window opens.
 - **2** Button-tap the hard drive that you want to delete files from, for example Local Disk (C:), then tap **Properties**. The *Properties* dialog box opens at the General tab.



- 3 Tap Disk Cleanup. The Disk Cleanup dialog box opens.
- **4** Make sure that the check box beside each file type you want to delete is selected. For more information about file types you can delete, read the descriptions in the *Disk Cleanup* dialog box.
- 5 Tap OK, then tap Yes.



Help and Support



For more information about keeping the hard drive space free of unnecessary files, tap **Start**, then tap **Help and Support**.

Type the keyword **disk cleanup** in the Help and Support Center **Search** box search then tap the arrow.

Checking the hard drive for errors

The Error-checking program examines the hard drive for physical flaws and file and folder problems. This program corrects file and folder problems and marks flawed areas on the hard drive so Windows does not use them.

If you use your tablet PC several hours every day, you probably want to run Error-checking once a week. If you use your tablet PC less frequently, once a month may be adequate. Also use Error-checking if you encounter hard drive problems.

- To check the hard drive for errors:
 - 1 Tap Start, then tap My Computer. The My Computer window opens.
 - **2** Button-tap the hard drive that you want to check for errors, for example Local Disk (C:), then tap **Properties**. The *Properties* dialog box opens.
 - **3** Tap the **Tools** tab.



4 Tap Check Now.

- **5** Tap the options you want to use, then tap **Start**. For help, press **F1**. Windows checks the drive for errors. This process may take several minutes. After Windows has finished checking the drive for errors, it provides a summary of the problems that it found.
- **6** Correct any problems that are found by following the on-screen instructions.
- 7 Tap **OK**.



Help and Support



For more information about checking the hard drive for errors, tap **Start**, then tap **Help and Support**.

Type the keyword **checking for disk errors** in the Help and Support Center **Search** box Search then tap the arrow.

Defragmenting the hard drive

When working with files, sometimes Windows divides the file information into pieces and stores them in different places on the hard drive. This is called *fragmentation*, and it is normal. In order for your tablet PC to use a file, Windows must search for the pieces of the file and put them back together. This process slows the hard drive performance.

The Disk Defragmenter program organizes the data on the drive so each file is stored as one unit rather than as multiple pieces scattered across different areas of the drive. Defragmenting the information stored on the drive can improve hard drive performance.

While the Disk Defragmenter program is running, do not use your pen or keyboard because using them may continuously stop and restart the defragmenting process. Also, if you are connected to a network, log off before starting Disk Defragmenter. Network communication may stop the defragmentation process and cause it to start over.

- To defragment the hard drive:
 - 1 Tap Start, then tap My Computer. The My Computer window opens.
 - **2** Button-tap the hard drive that you want to defragment, for example Local Disk (C:), then tap **Properties**. The *Properties* dialog box opens.
 - **3** Tap the **Tools** tab.



- 4 Tap Defragment Now.
- 5 If Disk Defragmenter does not start automatically, tap Defragment or Start.

 Disk Defragmenter shows its progress on the tablet PC display. When finished, Disk Defragmenter asks if you want to quit the program.
- 6 Tap Close or Yes, then tap the X in the top-right corner to close the *Disk Defragmenter* window.



Help and Support



For more information about defragmenting the hard drive, tap **Start**, then tap **Help and Support**.

Type the keyword **defragmenting** in the Help and Support Center **Search** box Search tap the arrow.

Backing up files

Backing up files and removing them from the hard drive frees space for new files on the hard drive. It also protects you from losing important information if the hard drive fails or you accidentally delete files.

You should back up your files regularly to a writable CD (if you have a DVD/CD-RW drive) or to diskettes (if you have a diskette drive). Use a backup device, such as a DVD/CD-RW drive or Zip drive, to do a complete hard drive backup. For more information, see "Creating CDs" on page 100. If you do not have a high-capacity backup device and you want to purchase one, you can contact Gateway's Add-on Sales department or visit the Accessories Store at accessories.gateway.com.

Help and Support



For more information about backing up files, tap **Start**, then tap **Help and Support**.

Type the keyword **saving files** in the Help and Support Center **Search** box Search , then tap the arrow.

Using the Scheduled Task Wizard

The Scheduled Task Wizard lets you schedule maintenance tasks such as running Disk Defragmenter and Error-checking.

- To start the Scheduled Task Wizard:
 - 1 Tap Start, All Programs, Accessories, System Tools, then tap Scheduled Tasks. The *Scheduled Tasks* window opens.
 - **2** Double-tap the **Add Scheduled Task** icon. The Scheduled Task Wizard opens.



3 Tap **Next**, then tap the task or program you want to schedule and follow the on-screen instructions to customize the task.

Important



Your tablet PC must be on during scheduled tasks. If your tablet PC is off, scheduled tasks will not run.



Help and Support



For more information about using the Scheduled Tasks Wizard, tap **Start**, then tap **Help and Support**.

Type the keyword **Scheduled Task Wizard** in the Help and Support Center **Search** box Search then tap the arrow.

Cleaning your tablet PC

Keeping your tablet PC clean and the vents free from dust helps keep your system performing at its best. You may want to gather these items and put together a tablet PC cleaning kit:

- A soft, lint-free cloth
- An aerosol can of air that has a narrow, straw-like extension
- Isopropyl alcohol
- Cotton swabs
- A CD or DVD drive cleaning kit

Cleaning the exterior

Warning



When you shut down your tablet PC, the power turns off, but some electrical current still flows through your tablet PC. To avoid possible injury from electrical shock, unplug the power cord and modem cable from the wall outlets.

Always turn off your tablet PC and other peripheral devices, then remove the battery before cleaning any components.

Use a damp, lint-free cloth to clean your tablet PC and other parts of your system. Do not use abrasive or solvent cleaners because they can damage the finish on components.

Your tablet PC is cooled by air circulated through the vents on the case, so keep the vents free of dust. With your tablet PC turned off and unplugged, brush the dust away from the vents with a damp cloth. Be careful not to drip any water into the vents. Do not attempt to clean dust from the inside of your tablet PC.

Cleaning the keyboard

You should clean the keyboard occasionally by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.

If you spill liquid on the keyboard, unplug the keyboard and turn it upside down. Let the liquid drain, then let the keyboard dry before trying to use it again. If the keyboard does not work after it dries, you may need to replace it.

Cleaning the tablet PC screen

Use the soft cloth provided with the tablet PC to wipe the screen.

Warning



The tablet PC screen is made of specially coated glass and can be scratched or damaged by abrasive or ammonia-based glass cleaners.

Cleaning the mouse


If you have a mouse and the mouse pointer begins moving erratically across the tablet PC screen or becomes difficult to control precisely, cleaning the mouse will likely improve its accuracy.

Clean your optical mouse by wiping the bottom of the mouse with a damp lint-free cloth.

- To clean your trackball mouse:
 - 1 Turn the mouse upside down.
 - **2** Rotate the retaining ring on the bottom of the mouse counter-clockwise, then remove the retaining ring and mouse ball.



- **3** Remove any dust, lint, or dirt from the mouse ball with a soft cloth.
- **4** Clean the mouse rollers with a cotton swab dipped in isopropyl alcohol.

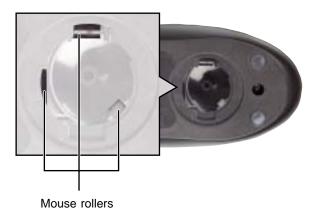

5 Replace the mouse ball and lock the retaining ring into place.





Restoring Software

14

Read this chapter to learn how to:

- Reinstall device drivers
- Update device drivers
- Reinstall programs
- Reinstall Windows

Important



The procedures in this chapter require using a CD or DVD drive. If you do not own one, Gateway recommends purchasing the combination DVD/CD-RW drive. To order a combination DVD/CD-RW drive, visit the Accessory Store at

accessories.gateway.com.







Using the Restoration CDs

Use the Gateway *Restoration CDs* to reinstall device drivers, your operating system, and other programs that were preinstalled at the factory.

Important



Before you try to fix a problem by reinstalling software from your Gateway *Restoration CDs*, make sure that you have tried these steps first:

Use the diagnostics and troubleshooting tools found in Help and Support Center. For more information about diagnostics and troubleshooting tools, tap Start, then tap Help and Support.

Type the keyword **troubleshooting** in the Help and Support Center **Search** box Search then tap the arrow.

 Run System Restore. For more information about System Restore in Windows XP, click Start, then click Help and Support.

Type the keyword **System Restore** in the Help and Support **Search** box Search , then click the arrow.

See the Troubleshooting section of this guide.

If these steps do not resolve the problem, use the Gateway *Restoration CDs* to reinstall device drivers or programs.

If reinstalling device drivers or programs does not resolve the problem, reinstall Windows.

If you are not comfortable with the procedures covered in this chapter, seek help from a more experienced computer user or a computer service technician.

Reinstalling device drivers

Device drivers are programs that control devices such as the tablet PC display, drives, and modems. Drivers translate information between computer devices and programs.

Drivers for your original tablet PC hardware are installed at Gateway. If you install a new device, you need to install the drivers provided by the device manufacturer.

You should reinstall device drivers:

- If directed to do so while troubleshooting
- If you see a message indicating that there is a problem with a device driver

If you need to reinstall device drivers because you are directed to do so while troubleshooting or if a message tells you that there is a problem with a device driver, reinstall the device drivers by completing the following task.

If you just reinstalled Windows XP, the device drivers were automatically reinstalled.

To reinstall device drivers:

- 1 Insert the red Gateway CD into the DVD/CD-RW drive. If the program starts automatically, go to Step 5.
 - OR -

If the program does not start automatically, go to Step 2.

- **2** Tap **Start**, then tap **Run**. The *Run* dialog box opens.
- **3** In the **Open** text box, type **d:\runmenu.exe** (where **d** is the drive letter of your DVD/CD-RW drive).
- **4** Tap **OK**.
- 5 If this is the first time you have inserted the red Gateway CD, accept the End User License Agreement (EULA) by tapping Yes, I accept it, then tapping Continue. The Gateway Driver and Application Recovery program starts and the Drivers and Application Recovery tab appears.



- **6** Select a single device driver to reinstall.
 - OR -

Tap Automatic Installation, then select multiple device drivers to reinstall. (Grayed out drivers are not available for Automatic Installation. To select these drivers, tap Manual Installation.)

- 7 Tap Install.
- **8** Follow any additional on-screen instructions. Depending on the device driver you are reinstalling, you may only need to restart your tablet PC to complete the installation. However, if a setup wizard opens when you restart your tablet PC, follow the on-screen instructions.



Help and Support



For more information about reinstalling device drivers, tap **Start**, then tap **Help and Support**.

Type the keyword **drivers** in the Help and Support Center **Search** box search , then tap the arrow.

Updating device drivers

The *Restoration CDs* contain a device driver update utility that works over the Internet. If you do not have an Internet service provider, the update utility works by direct-dialing the device driver update service.

Important



Your system came equipped with a wireless device. Only use the drivers approved for the country the device will be used in. See the red Gateway CD or the Gateway Technical Support Web site (support.gateway.com).

See "Safety, Regulatory, and Legal Information" on page 267 for general wireless regulatory and safety guidelines.

To update device drivers:

- 1 Insert the red Gateway CD into the DVD/CD-RW drive. If the program starts automatically, go to Step 5.
 - OR -

If the program does not start automatically, go to Step 2.

- **2** Tap **Start**, then tap **Run**. The *Run* dialog box opens.
- **3** In the **Open** text box, type **d:\runmenu.exe** (where **d** is the drive letter of the DVD/CD-RW drive).
- **4** Tap **OK**.
- 5 If this is the first time you have inserted the red Gateway CD, accept the End User License Agreement (EULA) by tapping Yes, I accept it, then tapping Continue. The Gateway Driver and Application Recovery program starts and the Drivers and Application Recovery tab appears.
- 6 Tap the Web Updates tab.
- **7** Tap Check Now. The *Connect* window opens.



8 Install available updated device drivers by following the on-screen instructions. Depending on the device driver you are updating, you may only need to restart your tablet PC to complete the installation. However, if a setup wizard opens when you restart your tablet PC, follow the on-screen instructions.



Help and Support



For more information about updating device drivers, tap **Start**, then tap **Help and Support**.

Type the keyword **updating drivers** in the Help and Support Center **Search** box Search tap the arrow.

Reinstalling programs

If you have problems running a program or if you have reinstalled your operating system, you can reinstall programs from the red Gateway CD and other program CDs. If you are reinstalling programs from other program CDs, follow the installation instructions on each CD. If you want to **reinstall** a program, uninstall the old version first.

- To reinstall programs from the Applications CD(s):
 - **1** If you just reinstalled Windows, go to Step 4. Otherwise, go to the next step.
 - 2 Tap Start, Control Panel, then tap Add or Remove Programs.
 - **3** In the *Currently Installed Programs* list, tap the program you want to uninstall, then tap **Change/Remove** and follow the on-screen instructions.

- **4** Insert the red Gateway CD into the DVD/CD-RW drive. If the program starts automatically, go to Step 8.
 - OR -

If the program does not start automatically, go to Step 5.

- 5 Tap Start, then tap Run. The Run dialog box opens.
- **6** In the **Open** text box, type **d:\runmenu.exe** (where **d** is the drive letter of your DVD/CD-RW drive).
- 7 Tap OK.
- 8 If this is the first time you have inserted the red Gateway CD, accept the End User License Agreement (EULA) by tapping Yes, I accept it, then tapping Continue. The Gateway Driver and Application Recovery program starts and the Drivers and Application Recovery tab appears.
- **9** Select a single program to reinstall.
 - OR -

Tap Automatic Installation, then select multiple programs to reinstall. (Grayed out programs are not available for Automatic Installation. To select these programs, tap Manual Installation.)

- 10 Tap Install.
- 11 Follow any additional on-screen instructions. Depending on the programs you are reinstalling, you may only need to restart your tablet PC to complete the installation. However, if a setup wizard opens when you restart your tablet PC, follow the on-screen instructions.



Help and Support



For more information about reinstalling programs, tap **Start**, then tap **Help and Support**.

Type the keyword **installing programs** in the Help and Support Center **Search** box Search tap the arrow.



To reinstall other programs from a CD:

- **1** If you just reinstalled Windows, go to Step 4. Otherwise, go to the next step.
- 2 Tap Start, Control Panel, then tap Add or Remove Programs.
- 3 In the *Currently Installed Programs* list, tap the program you want to uninstall, then tap Change/Remove and follow the on-screen instructions.
- **4** Insert the program CD into the DVD/CD-RW drive.
- **5** Complete the program reinstallation by following the instructions included with the program CD.



Reinstalling Windows

If your tablet PC is not working correctly, try the following options to correct the problem:

- Troubleshooting. For more information, see "Troubleshooting" on page 237.
- Reinstalling device drivers. For more information, see "Reinstalling device drivers" on page 209.

If the options above do not correct the problem, you can use the *Restoration CDs* to reinstall Windows and other software.

The *Restoration CDs* step you through reinstalling Windows XP. If you are reinstalling Windows XP, the *Restoration CDs* automatically reinstall the hardware device drivers and some programs as well. You can install any remaining programs by using the program CDs that came with your tablet PC. To reinstall your programs, follow the instructions in "Reinstalling programs" on page 212.

Important



If you are prompted for your Windows product key when you reinstall Windows, you can find the key on the *Microsoft Certificate of Authenticity* label located on the back of your tablet PC case. For more information, see "Microsoft Certificate of Authenticity" on page 12.

To reinstall Windows XP and the device drivers:

Caution



Back up your personal files before you use this option.

All files on your tablet PC will be deleted!

- 1 Insert the red Gateway CD into the DVD/CD-RW drive.
- **2** Restart your tablet PC.
- 3 Select 2. Boot from CD-ROM.
- 4 Select a language option.
- 5 Select 1. Delete all files (Automated Fdisk/Format).
- 6 Select 1. Continue deleting all files and restart.
- 7 When prompted, press any key to continue.
- 8 Select 2. Boot from CD-ROM.
- **9** Select a language option.
- 10 Select 2. Automated installation of Windows XP.
- 11 When prompted, remove the red Gateway CD and insert the blue *Operating System* CD into the DVD/CD-RW drive, then press any key to continue.
- **12** When prompted, accept the *License Agreement* by pressing **Y**.
- Wait while the setup program copies files to your hard drive. When your tablet PC restarts, do NOT press any key to boot from CD.
- 14 When prompted, insert the red Gateway CD, then tap **Continue**. The Gateway Application Loader automatically installs your drivers and programs. Your tablet PC restarts several times during this process. Do **not** press any keys or buttons during this process unless prompted to do so.



- **15** When the Gateway Application Loader has finished, go to the Windows desktop by tapping **OK**.
- 16 Install additional programs by following the instructions in "Reinstalling programs" on page 212.
- 17 Install other software, such as Microsoft Works Suite and gaming software, by following the instructions in "To reinstall other programs from a CD:" on page 214.





Upgrading Your Tablet PC

15

This chapter provides information about adding hardware devices to your tablet PC. Read this chapter to learn how to:

- Add and remove PC Cards
- Add and replace memory



Adding and removing a PC Card

Your tablet PC has one PC Card slot (also known as a PCMCIA card slot). This slot accepts one Type II card.

You do not need to restart your tablet PC when changing most cards because your tablet PC supports *hot-swapping*. Hot-swapping means that you can insert a PC Card while your tablet PC is running. If your PC Card does not work after hot-swapping, see the PC Card manufacturer's documentation for further information.

Important



The tablet PC ships with a spacer in the PC Card slot. Whenever the slot is not in use, leave the spacer in place.

To add a PC Card:

1 If the spacer is in the PC Card slot, release the eject button by pressing the PC Card eject button once. Eject the spacer by pressing the eject button again. Remove the spacer.



2 Push the PC Card firmly into the PC Card slot label-side facing the front of the tablet until the outer edge of the card is flush with the side of your tablet PC.







1 Tap the remove hardware sicon in the taskbar, the PC Card name, then tap Stop.

-OR-

Turn off your tablet PC.

Important



If the remove hardware icon does not appear on the taskbar, tap the show hidden icons **()** button.

- **2** Release the eject button by pressing the PC Card eject button once.
- **3** Eject the PC Card by pressing the eject button again.



4 Insert the spacer into the PC Card slot.



Preventing static electricity discharge

The components inside your tablet PC are extremely sensitive to static electricity, also known as *electrostatic discharge* (ESD).

Warning



ESD can permanently damage electrostatic discharge-sensitive components in your tablet PC. Prevent ESD damage by following ESD guidelines every time you install memory.

Warning



To avoid exposure to dangerous electrical voltages and moving parts, turn off your tablet PC and unplug the power cord and modem and network cables before opening the case.

Before installing memory, follow these guidelines:

- Turn off your tablet PC.
- Wear a grounding wrist strap (available at most electronics stores) and attach it to a bare metal part of your workbench or other grounded connection.

Warning



To prevent risk of electric shock, do not insert any object into the vent holes of the tablet PC.

- Touch a bare metal surface on your workbench or other grounded object.
- Unplug the power cord and the modem and network cables.
- Remove the battery. For more information, see "Changing batteries" on page 131.
- Disconnect all peripheral devices and remove any PC Cards.

Before working with computer components, follow these guidelines:

- Avoid static-causing surfaces such as carpeted floors, plastic, and packing foam.
- Remove components from their antistatic bags only when you are ready to use them. Do not lay components on the outside of antistatic bags because only the inside of the bags provide electrostatic protection.
- Always hold components by their edges. Avoid touching the edge connectors. Never slide components over any surface.

Adding or replacing memory

Your tablet PC uses memory modules called SO-DIMMs (Small Outline Dual Inline Memory Modules). The modules are available in various capacities and any module can be placed in any available slot. Use only memory modules designed for the Gateway Tablet PC for upgrading your memory.




- To add or replace memory modules:
 - 1 Follow the instructions under "Preventing static electricity discharge" on page 221.
 - **2** Turn off your tablet PC and disconnect the AC adapter and modem and network cables.
 - **3** Disconnect your tablet PC from the optional FlexDock (see "Using the Tablet PC FlexDock" on page 227).
 - **4** Place the hard top on the front of your tablet PC.
 - **5** Turn your tablet PC over so the back is facing up.
 - **6** Remove the battery. For more information, see "Changing batteries" on page 131.
 - **7** Remove the two memory bay cover screws.





8 Remove the memory bay cover.

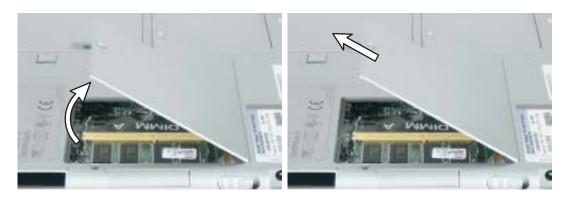

9 If you are removing a module, gently press outward on the clip at each end of the memory module until the module tilts upward.



10 If you are removing a memory module, pull the module out of the slot.



11 Hold the new or replacement module at a 30-degree angle and press it into the empty memory slot. This module is keyed so it can only be inserted in one direction. If the module does not fit, make sure that the notch in the module lines up with the tab in the memory bay.



Important



Use only memory modules designed for the Gateway Tablet PC.



- **12** Gently push the module down until it clicks in place.
- 13 Replace the memory bay cover and replace the cover screws.
- **14** Insert the battery, then turn your tablet PC over.
- **15** Reconnect the optional FlexDock.
- **16** Connect the power adapter and modem and network cables, then turn on your tablet PC.
- 17 To check that the memory module has been installed successfully, tap Start, My Computer, then tap View System Information. The General tab shows the amount of memory now installed in your tablet.

Important



If the amount of memory shown and the memory you have just installed differ, the memory module may not be seated correctly. Remove the module and repeat the procedure.





Using the Tablet PC **FlexDock**

This chapter introduces you to the basic features of your optional FlexDock. Read this chapter to learn:

- How to identify the features of your FlexDock
- How to connect your Gateway Tablet PC to the FlexDock




Front



Indicator	Icon	Description
USB port	● ≒→	Plug USB (Universal Serial Bus) devices (such as a diskette drive, USB Iomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into this port.

Back

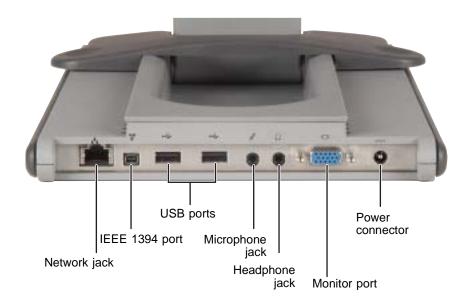

Component	Icon	Description
Network jack	뮲	Plug a 10/100 Ethernet network cable into this jack. For more information, see "Connecting to a wired Ethernet network" on page 40 and "Networking Your Tablet PC" on page 165.
IEEE 1394 port	"	Plug an IEEE 1394 (also known as Firewire [®] or i.Link [®]) device (such as a digital camcorder or DVD/CD-RW drive) into this 4-pin IEEE 1394 port. For more information, see "Connecting a digital video camera" on page 114.
USB ports	•	Plug USB (Universal Serial Bus) devices (such as a diskette drive, USB Iomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into this port.
Microphone jack		Plug an external microphone into this jack. The built-in microphone is turned off when a microphone is plugged into this jack.
Headphone jack		Plug amplified speakers or headphones into this jack. The built-in speakers are turned off when speakers or headphones are plugged into this jack.

Component	Icon	Description
Monitor port		Plug an analog VGA monitor into this port.
Power connector	===	Plug the AC adapter cable into this connector. Do not substitute another adapter or use this connector for any other purpose.

Using the FlexDock


The tablet joins the FlexDock at the docking connector in the center of the frame holder. Be sure the tablet sits firmly on the connector to access all ports.

- The silver crossbar adjusts to support the tablet at a range of angles for viewing and writing.
- In addition to the two USB ports on the back, the FlexDock includes an extra USB port on the front for convenience.
- When using the tablet's modem, plug the telephone cord into the tablet through the cutout on the front of the FlexDock.
- The FlexDock senses and automatically adjusts the tablet's display orientation when rotated between Primary Landscape and Primary Portrait modes. When you are ready to move from desktop to mobile mode, the FlexDock is completely Grab-and-Go. This means you can safely lift the tablet out of the FlexDock without shutting down, putting the tablet in *Standby* mode, or stopping any peripheral devices through Windows XP. However, you must disconnect the modem cable before removing the tablet.

The FlexDock lets you rotate the tablet from portrait to landscape and adjust the viewing angle. The FlexDock automatically changes the display orientation as you rotate the tablet. The unique design also lets you write on the tablet at any angle and stores flat for travel.





- To set up the FlexDock:
 - 1 Lift and slide the crossbar on the FlexDock forward to set the desired viewing angle.

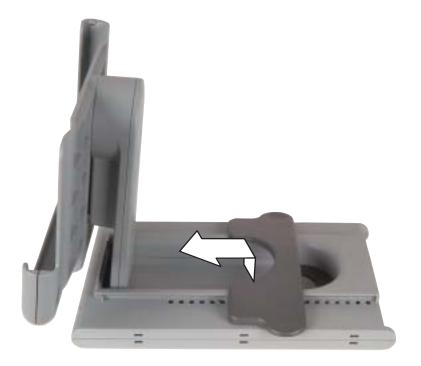



2 Install the end caps in the slots on each side of the FlexDock base, then slide them forward until they lock into the slots.

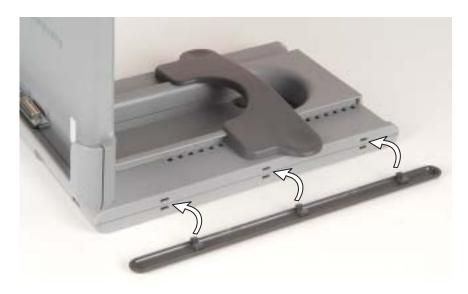

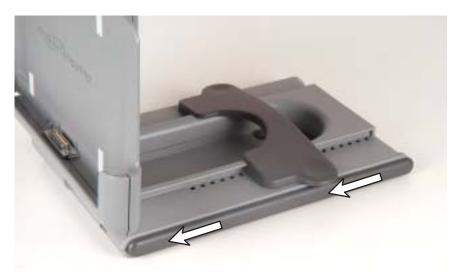

3 Verify that the FlexDock is horizontal (with the Motion logo horizontal) and the docking connector on the bottom.

4 With the docking connector pointing down, gently slide the tablet into the FlexDock until it clicks into place. (Spring tabs on each side secure it in place.)



- 5 Turn on the tablet by sliding the power switch, which is found on the right side of the tablet.
- **6** Test the screen rotation by turning the tablet in the FlexDock. The FlexDock will sense the change and automatically adjust the screen.
- 7 Install the optional equipment you have purchased. We recommend that you install one item at a time, waiting about two minutes before connecting the next accessory to ensure successful discovery and installation.





Troubleshooting

This chapter provides some solutions to common tablet PC problems. Read this chapter to learn how to:

- Troubleshoot typical hardware and software problems
- Get telephone support
- Use automated troubleshooting systems
- Get tutoring and training

If the suggestions in this chapter do not correct the problem, see "Getting Help" on page 43 for more information about how to get help.

17



Safety guidelines

While troubleshooting your tablet PC, follow these safety guidelines:

- Never remove the memory bay cover while your tablet PC is turned on, while the battery is installed, and while the modem cable, network cable, and AC power adapter are connected.
- Make sure that you are correctly grounded before accessing internal components. For more information about preventing damage from static electricity, see "Preventing static electricity discharge" on page 221.
- After you complete any maintenance tasks where you remove the memory bay, make sure that you replace the cover, reinstall any screws, then replace the battery before you start your tablet PC.

Warning



Do not try to troubleshoot your problem if power cords or plugs are damaged, if your tablet PC was dropped, or if the case was damaged. Instead, unplug your tablet PC and contact a qualified computer technician.

First steps

If you have problems with your tablet PC, try these things first:

- Make sure that the AC power adapter is connected to your tablet PC and an AC outlet and that the AC outlet is supplying power.
- If you use a power strip or surge protector, make sure that it is turned on.
- If a peripheral device (such as a keyboard or mouse) does not work, make sure that all connections are secure.
- Make sure that your hard drive is not full.
- If an error message appears on the screen, write down the exact message. The message may help Gateway Technical Support in diagnosing and fixing the problem.
- If you added or removed peripheral devices, review the installation procedures you performed and make sure that you followed each instruction.
- If an error occurs in a program, see the program's printed documentation or the online help.

Help and Support



For more information about troubleshooting, tap **Start**, then tap **Help and Support**.

Type the keyword **troubleshooting** in the Help and Support Center **Search** box Search tap the arrow.

Troubleshooting

The Gateway Tablet PC has passed a rigorous series of usage and quality-control tests, but now and then a problem may appear. If you do not see a solution among the following issues, see "Using eSupport" on page 52 and "Telephone support" on page 263.

Audio

See "Sound" on page 260.

Battery

See "Power" on page 256.

Device installation

You have computer problems after adding a new device

Sometimes a new device, such as a PC Card, can cause a system resource (IRQ) conflict. Check IRQ usage to determine if there is an IRQ conflict.



To check IRQ usage:

- 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Performance and Maintenance.
- **2** Tap/Double-tap **System**, tap the **Hardware** tab, then tap **Device Manager**. The *Device Manager* window opens.
- **3** Tap View, then tap Resources by type. Double-tap Interrupt request (IRQ). All IRQs and their hardware assignments are displayed.



Help and Support



For more information about IRQs, tap Start, then tap Help and Support.

Type the keyword **IRQs** in the Help and Support Center **Search** box _{Search}, then tap the arrow.



To free IRQ resources for the new device:

- 1 In the *Device Manager* window, check the device list for a resource conflict. A resource conflict appears as a black exclamation point in a yellow circle.
- **2** Remove the device you are trying to install, then determine which one of the existing devices or ports you can disable.
- **3** Button-tap the device or port you want to disable, then tap **Disable**. The device or port is disabled.



Diskette drive

The diskette drive is not recognized

- Shut down and restart your tablet PC.
- The USB cable may not be inserted completely into the USB port. Press the cable into the port, then try to access the diskette again.

You see an "Access Denied" or "Write protect" error message

- Move the write-protection tab in the upper-right corner of the diskette down (unprotected).
- The diskette may be full. Delete unnecessary files on the diskette and try again.
- Not all diskettes are IBM-compatible. Make sure that the diskette you are using is IBM-compatible.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.

You see a "Disk is full" error message

- Delete unnecessary files on the diskette.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.
- Run Error checking on the diskette. For more information, see "Checking the hard drive for errors" on page 198. If errors are detected and corrected, try using the diskette again.

You see a "Non-system disk", "NTLDR is missing", or "Disk error" error message

- Eject the diskette from the diskette drive, then press ENTER.
- Make sure that the diskette you are using is IBM-compatible.

The diskette drive status indicator is lit continuously

■ Remove the diskette from the drive. If the indicator stays on, try restarting your tablet PC.

Display

The screen is too dark

Adjust the brightness using the dashboard. For more information, see "Using the Motion Dashboard" on page 160.

The screen resolution is not correct

■ Change the screen resolution from the *Display Properties* dialog box. For more information, see "Adjusting the screen resolution" on page 152.

The screen is unreadable or distorted.

- Adjust the brightness using the dashboard. For more information, see "Using the Motion Dashboard" on page 160.
- Screen resolution or color quality are set incorrectly. Reset resolution to 1024 × 768 and color quality to 32-bit under the Settings tab of the Display Properties dialog box. For more information, see "Adjusting the screen and desktop settings" on page 151
- Move your tablet PC away from sources of electrical interference, such as televisions, unshielded speakers, microwaves, fluorescent lights, and metal beams or shelves.
- Display driver has become corrupted or uninstalled.
- To reinstall the display driver:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Performance and Maintenance.
 - **2** Tap/Double-tap **System**, tap the **Hardware** tab, then tap **Device Manager**. The *Device Manager* window opens.

- 3 Double-tap Monitors.
- 4 Tap Default Monitor.
- **5** Choose **Update Driver** from the pull-down menu and follow the Wizard. You may need to attach the DVD/CD-RW drive.



The display has pixels that are always dark or too bright

This condition is normal and inherent in the TFT technology used in active-matrix LCD screens. Gateway's inspection standards keep these to a minimum. If you feel these pixels are unacceptably numerous or dense on your display, contact Gateway Technical Support to identify whether a repair or replacement is justified based on the number of pixels affected.

DVD/CD-RW Drive

Your tablet PC does not recognize a disc or the drive

- The disc may not be seated correctly in the tray. When you place a disc on the tray, make sure that you press the disc firmly onto the spindle so the retainers hold the disc in place.
- Make sure that the disc label is facing up, then try again.
- Try a different disc. Occasionally discs are flawed and cannot be read by the drive.
- Some music CDs have copy protection software. You may not be able to play these CDs on your tablet PC.
- Your tablet PC may be experiencing some temporary memory problems. Shut down and restart your tablet PC.
- Clean the disc. For more information, see "Cleaning CDs or DVDs" on page 245.

An audio CD does not produce sound

- Make sure that the CD label is facing up, then try again.
- Some music CDs have copy protection software. You may not be able to play these CDs on your tablet PC.
- Make sure that the Windows volume control is turned up. For more information, see "Adjusting the volume" on page 86.

- Make sure that Mute controls are turned off. For more information about the mute setting, see "Adjusting the volume" on page 86.
- Make sure that headphones are not plugged into the headphone jack. For the location of the headphone jack, see "Ports side" on page 7 and "Back" on page 229.
- If you are using powered speakers, make sure that they are plugged in and turned on.
- Clean the CD. For more information, see "Cleaning CDs or DVDs" on page 245.
- Your tablet PC may be experiencing some temporary memory problems. Shut down and restart your tablet PC.
- Reinstall the audio device drivers. For more information, see "Reinstalling device drivers" on page 209.

A DVD movie will not play

- Make sure that the label or side you want to play is facing up, then try again.
- Shut down and restart your tablet PC.
- Clean the DVD. For more information, see "Cleaning CDs or DVDs" on page 245.
- DVD discs and drives contain *regional codes* that help control DVD title exports and help reduce illegal disc distribution. To be able to play a DVD, the disc's regional code and your DVD drive's regional code must match.
 - The regional code on your DVD drive is determined by your tablet PC's delivery address. The regional code for the United States and Canada is 1. The regional code for Mexico is 4. Your DVD drive's regional code must match the regional code of the disc. The regional code for the disc is on the disc, disc documentation, or packaging.
 - If the DVD movie does not play, the disc's regional code and your DVD drive's regional code may not match.
- Make sure that a DVD player has been installed on your tablet PC. See "Playing a DVD" on page 99 for more information.

Cleaning CDs or DVDs

Wipe from the center to the edge, not around in a circle, using a product made especially for the purpose.





File management

A file was accidentally deleted

If a file was deleted in Windows while holding down the **SHIFT** key, the file cannot be restored.



To restore deleted files:

- 1 Double-tap the Recycle Bin icon.
- **2** Button-tap the file you want to restore, then tap **Restore**. The file is restored to the place where it was originally deleted from.

If the Recycle Bin was emptied before you tried to restore a file, the file cannot be restored.



Hard drive

You see an "Insufficient disk space" error message

- Delete unnecessary files from the hard drive using Disk Cleanup. For more information, see "Using Disk Cleanup" on page 196.
- Empty the Recycle Bin by button-tapping the Recycle Bin icon, then tapping Empty Recycle Bin.

Caution



All deleted files will be lost when you empty the Recycle Bin.

■ Save your files to a diskette or another drive. If the hard drive is full, copy any files not regularly used to diskettes or other backup media, then delete them from the hard drive.

Help and Support



For more information about file management, tap **Start**, then tap **Help and Support**.

Type the keyword **file management** in the Help and Support Center **Search** box Search tap the arrow.

You see a "Data error" message

This may be the result of a defective area on the hard drive. To fix hard drive problems, run the Error checking program. For more information, see "Checking the hard drive for errors" on page 198.

The hard drive cannot be accessed, or you see a "General failure reading drive C" error message

- If a diskette is in the diskette drive, eject it and restart your tablet PC.
- If your tablet PC has been subjected to static electricity or physical shock, you may need to reinstall the operating system.

You see a "Non-system disk", "NTLDR is missing", or "disk" error message

■ Eject the diskette from the diskette drive, then press ENTER.

Internet

You cannot connect to the Internet

- Make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See "Ports side" on page 7 and "Back" on page 229 to make sure that the connection has been made correctly.
- Make sure that your tablet PC is connected to the telephone line and the telephone line has a dial tone.

- If you have the call waiting feature on your telephone line, make sure that it is disabled.
- Make sure that you are not using a digital, rollover, or PBX line. These lines do not work with your modem.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP technical support for help.
- Make sure that you do not have a problem with your modem. For more information, see "Modem" on page 250.

Help and Support



For more information about troubleshooting Internet connections, tap **Start**, then tap **Help and Support**.

Type the keyword **troubleshooting connections** in the Help and Support Center **Search** box Search , then tap the arrow.

You see an "Unable to locate host" message and are unable to browse the Internet

This problem can occur when you have typed a URL (Web address) incorrectly, you have lost your Internet connection, or your ISP is having technical difficulties.

Double-check the URL or try a different URL. If the error message still appears, disconnect from the ISP connection and close your browser, then reconnect and open the browser. If you still get the error, your ISP may be having technical difficulties.

Connecting to a Web site takes too long

Many factors can affect Internet performance:

- The condition of the telephone lines in your residence or at your local telephone service
- The condition of the Internet computers to which you connect and the number of users accessing those computers
- The complexity of graphics and multimedia on Web pages
- Having multiple Web browsers open, performing multiple downloads, and having multiple programs open on your tablet PC

People are sending you e-mail messages, but you have not received any mail

- Tap the receive button in your e-mail program.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP for technical support.

Interface/Ports

The buttons on the Gateway Tablet's front do not do what they are supposed to

■ The button functions have been changed. Reset button functions in the Buttons tab of the *Tablet and Pen Settings* dialog box. For more information, see "Programming the buttons" on page 159.

The tablet does not recognize the PC Card

■ The card is incorrectly inserted. Eject the card and re-insert it with the label side up. For more information, see "Adding and removing a PC Card" on page 218

The tablet does not recognize a USB or 1394 peripheral device

- The peripheral device is not connected to the Gateway Tablet PC correctly. Check the connection cable, and be sure it is inserted in the correct port on the tablet and the peripheral device.
- The correct driver is not built into Windows XP. Use the device's installation CD or check the manufacturer's Web site for the correct driver.

The tablet is sitting in the FlexDock but the tablet does not recognize peripheral devices

■ The Gateway Tablet PC is not fully seated in the FlexDock. Reseat the tablet in the FlexDock. For more information, see "Using the Tablet PC FlexDock" on page 227.

Keyboard

The external keyboard does not work

- Make sure that the keyboard cable is plugged in correctly.
- Remove all extension cables and switchboxes.

- Clean the keyboard by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.
- Try a keyboard that you know works to make sure that the keyboard port works.
- If you spilled liquid in the keyboard, turn off your tablet PC and unplug the keyboard. Clean the keyboard and turn it upside down to drain it. Let the keyboard dry before using it again. If the keyboard does not work after it dries, you may need to replace it.

A keyboard character keeps repeating or you see a "Keyboard stuck" or "Key failure" error message

- Make sure that nothing is resting on the keyboard.
- Make sure that a key is not stuck. Press each key to loosen a key that might be stuck, then restart your tablet PC.

Memory

You see a "Memory error" message

- Make sure that the memory modules are inserted correctly in the memory bay slots. For more information, see "Adding or replacing memory" on page 222.
- Use a third-party diagnostic program to help determine if a memory module is failing. For more information, see "Adding or replacing memory" on page 222.

You see a "Not enough memory" error message

■ Close all programs, then restart your tablet PC.

Help and	For more information about troubleshooting memory		
Support	errors, tap Start, then tap Help and Support.		
	Type the keyword memory error in the Help and Support Center Search box		
	arrow.		

Modem

Your modem does not dial or does not connect

- Make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See "Ports side" on page 7 and "Back" on page 229 to make sure that the connection has been made correctly.
- Make sure that your tablet PC is connected to the telephone line and the telephone line has a dial tone.
- Make sure that the modem cable is less than 6 feet (1.8 meters) long.
- Remove any line splitters or surge protectors from your telephone line, then check for a dial tone by plugging a working telephone into the telephone wall jack.
- If you have additional telephone services such as call waiting, call messaging, or voice mail, make sure that all messages are cleared and call waiting is disabled before using the modem. Contact your telephone service to get the correct code to temporarily disable the service. Also make sure that the modem dialing properties are set appropriately.
- To check the dialing properties:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Printers and Other Hardware.
 - 2 Tap/Double-tap the Phone and Modem Options icon, then tap the Dialing Rules tab.
 - 3 Tap the location from which you are dialing, then tap Edit.
 - **4** Make sure that all settings are correct.



Help and Support



For more information about dialing properties, tap **Start**, then tap **Help and Support**.

Type the keyword **dialing** in the Help and Support Center **Search** box Search [], then tap the arrow.

- Disconnect any answering machine, fax machine, or printer that is on the same line as the modem. Do not connect these devices to the same telephone line as the modem.
- Make sure that you are not using a digital, rollover, or PBX line. These lines do not work with your modem.
- Check for line noise (scratchy, crackling, or popping sounds). Line noise is a common problem that can cause the modem to connect at a slower rate, abort downloads, or even disconnect. The faster the modem, the less line noise it can tolerate and still work correctly.

Listen to the line using your telephone. Dial a single number (such as 1). When the dial tone stops, listen for line noise. Wiggle the modem cable to see if that makes a difference. Make sure that the connectors are free from corrosion and all screws in the wall or telephone wall jack are secure.

You can also call your telephone service and have the telephone line checked for noise or low line levels.

- Try another telephone line (either a different telephone number in your house or a telephone line at a different location). If you can connect on this line, call your telephone service.
- Try connecting with the modem at a lower connection speed. If reducing the connect speed lets you connect, call your telephone service. The telephone line may be too noisy.

You cannot connect to the Internet

- The ISP may be having technical difficulties. Contact your ISP for technical support.
- See if the modem works with a different communications program. The problem may be with just one program.

Your 56K modem does not connect at 56K

Current FCC regulations restrict actual data transfer rates over public telephone lines to 53K. Other factors, such as line noise, telephone service provider equipment, or ISP limitations, may lower the speed even further.

If your tablet PC has a v.90 modem, the speed at which you can upload (send) data is limited to 33.6K. If your tablet PC has a v.92 modem, the speed at which you can upload data is limited to 48K. Your ISP may not support 48K uploads.

You can check modem connection speeds and dial-up network (DUN) connections by accessing the *gateway.your.way dial-up server*. The server also contains drivers, patches, and updates for current Gateway hardware and software.

The server provides a secure connection and is a stand-alone server. You cannot use it to access the Internet. The server cannot be accessed Mondays from 8:00 a.m. to 12:00 p.m. CT.



To access the gateway.your.way dial-up server:

- 1 Insert the red Gateway CD into the DVD/CD-RW drive.
- 2 Tap Help, then tap Support Web Site.
- 3 To check your modem connection speed, tap the Direct Dial option. After your modem connects, move the pointer over the Dial-Up Networking icon (located next to the clock on your taskbar). Your modem connection speed appears.



Your fax communications program only sends and receives faxes at 14,400 bps when you have a 56K modem

Current fax technology only supports a maximum send and receive rate of 14,400 bps.

The modem is not recognized by your tablet PC

- Make sure that the line connected to the modem is working and plugged into the appropriate port on your tablet PC. See "Ports side" on page 7 and "Back" on page 229 to make sure that the connections have been made correctly.
- If the modem shares the telephone line with another device, make sure that the telephone line is not in use (for example, someone is on the telephone, or another modem is in use).
- Use the modem cable that came with your tablet PC. Some telephone cables do not meet required cable standards and may cause problems with the modem connection.
- Shut down and restart your tablet PC.
- Run Windows modem diagnostics.



To run modem diagnostics:

- 1 Close all open programs.
- 2 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Printers and Other Hardware.
- 3 Tap/Double-tap the Phone and Modem Options icon, then tap the Modems tab.
- **4** Tap your modem, then tap **Properties**. The *Modem Properties* dialog box opens.
- 5 Tap the Diagnostic tab, then tap Query Modem. If information about the modem appears, the modem passed diagnostics. If no modem information is available, a white screen appears with no data, or if you get an error such as *port already open* or *the modem has failed to respond*, the modem did not pass diagnostics.



Help and Support



For more information about modem troubleshooting, tap **Start**, then tap **Help and Support**.

Type the keyword **modem troubleshooting** in the Help and Support Center **Search** box Search then tap the arrow.

The modem is noisy when it dials and connects

When your modem tries to connect to another modem, it begins *handshaking*. Handshaking is a digital "getting acquainted" conversation between the two modems that establishes connection speeds and communication protocols. You may hear unusual handshaking sounds when the modems first connect. If the handshaking sounds are too loud, you can turn down the modem volume.



To turn down the modem volume:

- 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Printers and Other Hardware.
- **2** Tap/Double-tap the **Phone and Modem Options** icon, then tap the **Modems** tab.



- 3 Tap the modem you want to adjust, then tap Properties.
- 4 Tap the Modem tab, then adjust the Speaker volume control.
- **5** Tap **OK** twice to close the *Phone and Modem Options* dialog box.



Mouse

The external mouse does not work

- Make sure that the mouse cable is plugged in correctly.
- Shut down and restart your tablet PC.
- Remove all extension cables and switch boxes.
- Try a mouse you know is working to make sure that the mouse port works.

The external mouse works erratically

- Clean the mouse. For more information, see "Cleaning the mouse" on page 204.
- Some mouse pad patterns "confuse" optical mice. Try the mouse on a different surface.

Networks

You cannot connect to your company network

Every network is unique. Contact your company computer department or network administrator for help.

Data does not transfer through wired Ethernet.

■ The cable is not connected correctly. Reconnect and check for activity in green and orange lights next to the LAN port.

Help and Support



For more information about network troubleshooting, tap **Start**, then tap **Help and Support**.

Type the keyword **network troubleshooting** in the Help and Support Center **Search** box Search then tap the arrow.

Operating system

The program I am working in has stopped responding but the cursor moves and other programs work

■ The program has crashed. Press the Security button on the Gateway Tablet PC's front to open the Task Manager and close the non-responsive program.

The tablet keeps showing the wrong date and time even after resetting

■ The CMOS battery on the system board may need to be replaced. Contact Gateway technical support.

The tablet seems to be operating more slowly than usual

- The hard drive is full or nearly full. Run the Disk Cleanup utility to clear out unnecessary and temporary files, and remove unneeded programs and files. For more information, see "Using Disk Cleanup" on page 196.
- The hard drive needs defragmenting. Run Disk Defragmenter to consolidate files and folders on the hard drive. For more information, see "Defragmenting the hard drive" on page 199.
- The tablet is in Portrait or Secondary Landscape orientation. Though changing the orientation should not slow the tablet considerably, try changing back to Primary Landscape orientation.

Passwords

Your tablet PC does not accept your password

Make sure that **CAPS LOCK** and **PAD LOCK** are turned off, then retype the password.

You forgot your startup password

The password feature (which is set in the BIOS Setup utility) is very secure, with no easy way to recover a forgotten password. You must return your tablet PC for repair. Call Gateway Technical Support for instructions.

PC Cards

You installed a PC Card and now your tablet PC is having problems

- Make sure that you have correctly installed required software for the PC Card. For more information, see your PC Card's documentation.
- Make sure that the PC Card you installed is not causing a system resource conflict. For more information on resource conflicts, see "Device installation" on page 240.

Pen

The tablet does not respond to the pen

■ You are not using the correct pen. Use only Penabled digitizer pens by Wacom such as your tablet's pen. The Gateway Tablet PC does not respond to some other tablet pens or plastic pens.

The pen tip does not line up with the pointer when I tap the screen

■ The pen and display need recalibrating in both Landscape and Portrait mode. Recalibrate through the **Pen Settings** tab of the *Tablet and Pen Settings* dialog box. For more information, see "Adjusting tablet and pen settings" on page 158.

Power

Your tablet PC is not working on AC power

- Make sure that your AC power adapter is connected correctly to your tablet PC. For more information, see "Connecting the AC adapter" on page 21.
- If your tablet PC is plugged into a surge protector, make sure that the surge protector is connected securely to an electrical outlet, turned on, and working correctly. To test the outlet, plug a working device, such as a lamp, into the outlet and turn it on.
- Make sure that the AC power adapter cables are free from cuts or damage. Replace any damaged cables.

Your tablet PC is not working on battery power

■ Make sure that the battery is installed correctly. For more information, see "Changing batteries" on page 131.

■ Make sure that the battery is fully recharged. For more information, see "Recharging the battery" on page 130.

Your tablet PC lost data during battery swap

- Battery swap took too long.
 - Before swapping batteries, save all active files.
 - Make sure the replacement battery is charged.
 - Put the tablet into Standby.
 - Take no more than a minute swapping batteries—the quicker the better

The battery seems to run down very quickly

- Peripheral devices and programs that make heavy use of the hard drive drain the battery more quickly. Use AC power whenever possible, and readjust the Power Properties to Max Battery when AC power is unavailable.
- The battery is weakening or defective. All batteries run down in time, but if a new battery appears to be defective, contact Gateway about replacing it.

The tablet will not turn on

- The Power switch has not been fully engaged. Slide and hold the Power switch for at least a half-second, but no more than three seconds.
- The battery is fully discharged but AC power is not connected. Connect the AC adapter to power the tablet and charge the battery.

The tablet turns on and the hard drive status indicator flashes, but nothing appears on the display

■ Display brightness is set too low. Shut down and restart the tablet. If the problem continues, connect an external VGA monitor and adjust the brightness in Tablet and Pen Settings. For more information, see "Adjusting brightness" on page 150.

The tablet will not enter Hibernate mode

■ Hibernate mode is not activated. For more information, see "Activating and using Hibernate mode" on page 140.

The tablet will not come out of Standby or Hibernate mode when running on battery power.

■ The battery fully discharged and AC power is not connected. Connect the AC power adapter to power the tablet and charge the battery.

The display goes black while the tablet is still turned on

- Tablet has gone into Standby after sitting idle (power status indicator is blinking green). Slide and hold the Power switch for about a second to resume operations.
- Tablet has gone into low-battery Hibernate (power status indicator is blinking green). Slide and hold the Power switch for about a second to resume operations, and charge the battery.

Printer

The printer will not turn on

- Make sure that the printer is online. Many printers have an online/offline button that you may need to press.
- Make sure that the power cable is plugged into an AC power source.

The printer is on but will not print

- Check the cable between the printer and your tablet PC. Make sure that it is connected to the correct port.
- Make sure that the printer is online. Many printers have an online/offline button that you may need to press so the printer can start printing. Press the button to put the printer online.
- Check the port and cable for bent or broken pins.
- If the printer you want to print to is not the default printer, make sure that you have selected it in the printer setup.
- To set a default printer:
 - 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Printers and Other Hardware.
 - **2** Tap/Double-tap the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
 - **3** Button-tap the name of the printer you want to be the default printer, then tap **Set as Default Printer**.



■ Reinstall the printer driver. See the guide that came with your printer for instructions on installing the printer driver.

You see a "Printer queue is full" error message

■ Make sure that the printer is not set to work offline.



To make sure that the printer is not set to work offline:

- 1 Tap Start, then tap Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, tap Printers and Other Hardware.
- **2** Tap/Double-tap the **Printers and Faxes** icon. The **Printers and Faxes** window opens.
- 3 Button-tap the name of the printer you want to use. If the menu shows a check mark next to Use Printer Offline, tap Use Printer Offline to clear the check mark.



Help and Support



For more information about printer troubleshooting, tap **Start**, then tap **Help and Support**.

Type the keyword **printer troubleshooter** in the Help and Support Center **Search** box Search , then tap the arrow.

- Wait until files have been printed before sending additional files to the printer.
- If you print large files or many files at one time, you may want to add additional memory to the printer. See the printer documentation for instructions for adding additional memory.

You see a "Printer is out of paper" error message

After adding paper, make sure that the printer is online. Most printers have an online/offline button that you need to press after adding paper.

Sound

The built-in microphone does not seem to hear my voice correctly

- The built-in microphone's frequency response is too low for your purposes. Headset microphones are recommended for those using dictation frequently.
- Something is connected to the microphone jack. Unplug the device.

You are not getting sound from the built-in speakers

- Make sure that headphones are not plugged into the headphone jack. For the location of the headphone jack, see "Ports side" on page 7 and "Back" on page 229.
- Make sure that the Windows volume control is turned up. For more information, see "Adjusting the volume" on page 86.
- Make sure that mute controls are turned off. For more information about the mute setting, see "Adjusting the volume" on page 86.

Help and Support



For more information about troubleshooting sound issues, tap **Start**, then tap **Help and Support**.

Type the keyword **sound troubleshooter** in the Help and Support Center **Search** box Search the arrow.

Video

The external monitor is not working

■ Make sure that the monitor is turned on and that the video cable is connected correctly.

Wireless Ethernet

When using wireless connectivity in low-reception areas, be sure to keep your hands clear of the antenna zones.

Wireless communications keeps connecting even when I do not want it to

■ The default setting is **On**. For more information, see "Turning your wireless Ethernet on or off" on page 177.

FAQs

How long will the battery stay charged?

This can vary according to usage conditions, but a new, fully charged standard battery can last several hours.

Are there ways to make the battery charge last longer?

- Adjust the Power properties to **Max Battery** (double-tap the taskbar's **Power** icon to open the menu)
- Dim the display brightness (double-tap the taskbar's **Tablet** icon and choose the **Display** tab)
- Disconnect LAN/modem connections and disable wireless communications when not in use (uncheck the Wireless Communications check box in the Motion Dashboard)
- Turn off optional and unnecessary background programs and turn off or disconnect unused peripheral devices from USB and IEEE 1394 ports

What is the average life of the battery?

This varies widely, depending on usage patterns and conditions.

What does the tablet need for use in another country?

Just an outlet adapter, which you can find in airports and travel stores. The AC adapter will adjust automatically to different voltage when plugged into the correct location-appropriate power adapter. You should also bring a modem adapter.

What is the best way to clean the display screen?

Use the soft cloth, dry or dampened, that came with your Gateway Tablet PC. Do not use spray cleaners or spray/pour any liquid on any surface of the tablet.

Will scratches affect the display's performance?

Testing has not found appreciable loss of performance on a scratched display.

How sensitive is the screen to sunlight and the elements?

As with any computer or electronic device, the Gateway Tablet PC should be protected from liquids, dirt and sand, other contaminants, and extreme heat.

Will the tablet work with any monitor or USB peripheral keyboard, mouse, or drive?

Any device will work as long as the device's driver is available either in Windows XP or from the manufacturer, and it carries the Windows XP logo or certification. See www.microsoft.com/hcl for more information.

Why does the tablet and FlexDock not have parallel, serial, or PS2 ports?

Microsoft Tablet PC certification requires the tablet to be completely Grab-and-Go—that is, to be able to dock with and undock from all peripheral devices without putting the tablet into suspend or shutting it down. Connection through legacy ports (serial, parallel, PS2) often requires suspending or restarting the tablet, which prevents you from moving between desktop mode and mobile mode seamlessly in one docking/undocking step.

How do I adjust the tablet for left-handed use?

Through the **Settings** tab of the *Tablet and Pen Settings* dialog box. Access it by double-tapping on the **Tablet and Pen Settings** icon in the taskbar.

How can I improve the wireless signal?

Make sure that the antenna zone is not covered up by hands, cases, or other objects.

Telephone support

Before calling Gateway Technical Support

If you have a technical problem with your tablet PC, follow these recommendations before contacting Gateway Technical Support:

- Make sure that your tablet PC is connected correctly to a grounded AC outlet that is supplying power. If you use a surge protector, make sure that it is turned on.
- If a peripheral device, such as a keyboard or mouse, does not appear to work, make sure that all cables are plugged in securely.
- If you have recently installed hardware or software, make sure that you have installed it according to the instructions provided with it. If you did not purchase the hardware or software from Gateway, see the manufacturer's documentation and technical support resources.
- If you have "how to" questions about using a program, see:
 - Online Help
 - Printed documentation
 - The Microsoft Windows documentation
 - The software publisher's Web site
- See the troubleshooting section of this chapter.

Warning



To avoid bodily injury, do not attempt to troubleshoot your tablet PC problem if:

- Power cords or plugs are damaged
- Liquid has been spilled into your tablet PC
- Your tablet PC was dropped
- The case was damaged

Instead, unplug your tablet PC and contact a qualified computer technician.

- Have your customer ID, serial number, and order number available, along with a detailed description of your problem, including the exact text of any error messages, and the steps you have taken.
- Make sure that your tablet PC is nearby at the time of your call. The technician may have you follow troubleshooting steps.

Telephone numbers

Gateway offers a wide range of customer service, technical support, and information services.

Automated troubleshooting system

Service description	How to reach
Use an automated menu system and your telephone keypad to find answers to common problems.	800-846-2118 (US) 877-709-2945 (Canada)

Telephone numbers

You can access the following services through your telephone to get answers to your questions:

Resource	Service description	How to reach
Fax on demand support	Order a catalog of documents on common problems, then order documents by document numbers. The documents will be faxed to you.	800-846-4526 (US) 877-709-2951 (Canada)
Gateway's fee-based software tutorial service	Get tutorial assistance for software issues billed by the minute.	800-229-1103 (charged to your credit card) 900-555-4695 (charged to your telephone bill)
Gateway Technical Support	Talk to a Gateway Technical Support representative about a non-tutorial technical support question. (See "Before calling Gateway Technical Support" on page 263 before calling.) TDD Technical Support (for hearing impaired)	800-846-2301 (US) 800-846-3609 (Canada and Puerto Rico) 605-232-2191 (all other countries) 800-846-1778 (TDD)
	is available: Weekdays 6:00 a.m 8:00 p.m. Central Time	000-040-1770 (100)
	Weekends 6:00 a.m 5:00 p.m. Central Time	
Sales, accounting, and warranty	Get information about available systems, pricing, orders, billing statements, warranty service, or other non-technical issues.	800-846-2000 (US) 888-888-2037 (Canada)

Tutoring and training

Gateway's Technical Support professionals cannot provide hardware and software training or tutorial services. Instead, Gateway recommends the following tutoring and training resources.

Self-help

If you have *how-to* questions about using your Gateway-supplied hardware or software, see the following resources:

- The printed or online documentation that came with your hardware or software. In many cases, additional product information and online documentation for Gateway-supplied hardware can be found in our Web site's Documentation Library.
- This user's guide.
- The software publisher's Web site.

Help and Support



For more how-to information about Windows XP, tap **Start**, then tap **Help and Support**.

Type the keyword **practice** in the Help and Support Center **Search** box Search , then tap the arrow.

Tutoring

For help on using hardware or software that came with your Gateway tablet PC, contact Gateway's fee-based tutorial hotline:

- 800-229-1103 (rate charged per minute; charged to a major credit card)
- 900-555-4695 (rate charged per minute; charged to your telephone bill)

Training

Gateway provides the following in-person and computerized training:

Resource	Service description	For more information
In-Store Training at Gateway stores	Our friendly and knowledgeable software trainers can teach you how to use the Internet and the most popular software programs, including Microsoft Word, Excel, and PowerPoint.	www.gateway.com/store
Gateway Learning Libraries	A variety of courses and tutorials are available on CD. Select from several easy-to-use learning libraries.	www.gateway.com/training
Online Training from Learn@Gateway	More than 450 online courses are available from Learn@Gateway. All you have to do is go online and log in. You select the subject matter, and the learning format (self-paced tutorials or virtual classrooms), all from the comfort of your tablet PC.	www.learnatgateway.com/



Safety, Regulatory, and Legal Information



Important safety information

Your Gateway system is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that the safety instructions marked on the product and in the documentation are followed.

Warning



Always follow these instructions to help guard against personal injury and damage to your Gateway system.







Setting up your system

- Read and follow all instructions marked on the product and in the documentation before you
 operate your system. Retain all safety and operating instructions for future use.
- Do not use this product near water or a heat source such as a radiator.
- The product should be operated only from the type of power source indicated on the rating label.
- Openings in the computer case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space, at least 6 inches (15 cm), around the system for ventilation when you set up your work area. Never insert objects of any kind into the computer ventilation openings.
- If you use an extension cord with this system, make sure that the total ampere rating on the products plugged into the extension cord does not exceed the extension cord ampere rating.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill anything on the system. The best way to avoid spills is to avoid eating and drinking near your system.
- When the computer is turned off, a small amount of electrical current still flows through the computer. To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before cleaning the system.
- Unplug the system from the wall outlet and refer servicing to qualified personnel if:
 - The power cord or plug is damaged.
 - Liquid has been spilled into the system.
 - The system does not operate properly when the operating instructions are followed.
 - The system was dropped or the cabinet is damaged.
 - The system performance changes.

Replacement parts and accessories

Use only replacement parts and accessories recommended by Gateway.

Important



Do not use Gateway products in areas classified as hazardous locations. Such areas include patient care areas of medical and dental facilities, oxygen-laden environments, or industrial facilities.

Warning



To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.

Regulatory compliance statements

Wireless Guidance

Low power, Radio transmitting type devices (radio frequency (RF) wireless communication devices), may be present (embedded) in your notebook system. These devices may operate in the 2.4 GHz (i.e. 802.11B/G LAN & Bluetooth), 5.2 GHz (i.e. 802.11A LAN), and traditional cellular or PCS cellular bands (i.e. Cellular data modem). The following section is a general overview of considerations while operating a wireless device.

Additional limitations, cautions, and concerns for specific countries are listed in the specific country sections (or country group sections). The wireless devices in your system are only qualified for use in the countries identified by the Radio Approval Marks on the system rating label. If the country you will be using the wireless device in, is not listed, please contact your local Radio Approval agency for requirements. Wireless devices are closely regulated and use may not be allowed.

The power output of the wireless device or devices that may be embedded in your notebook is well below the RF exposure limits as known at this time. Because the wireless devices (which may be embedded into your notebook) emit less energy than is allowed in radio frequency safety standards and recommendations, Gateway believes these devices are safe for use. Regardless of the power levels, care should be taken to minimize human contact during normal operation.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Some circumstances require restrictions on wireless devices. Examples of common restrictions are listed below:

Warning



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. 802.11B (also known as wireless Ethernet or Wifi) and Bluetooth communication devices are examples of devices that provide wireless communication.

Warning



In environments where the risk of interference to other devices or services is harmful or perceived as harmful, the option to use a wireless device may be restricted or eliminated. Airports, Hospitals, and Oxygen or flammable gas laden atmospheres are limited examples where use of wireless devices may be restricted or eliminated. When in environments where you are uncertain of the sanction to use wireless devices, ask the applicable authority for authorization prior to use or turning on the wireless device.

Warning



Every country has different restrictions on the use of wireless devices. Since your system is equipped with a wireless device, when traveling between countries with your system, check with the local Radio Approval authorities prior to any move or trip for any restrictions on the use of a wireless device in the destination country.

Warning



If your system came equipped with an internal embedded wireless device, do not operate the wireless device unless all covers and shields are in place and the system is fully assembled.

Warning



Wireless devices are not user serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Please contact Gateway for service.

Warning



Only use drivers approved for the country in which the device will be used. See the Gateway System Restoration Kit, or contact Gateway Technical Support for additional information.

Warning



In order to comply with FCC requirements this transmitter must not be operated (or co-located) in conjunction with any other transmitter or antenna installed in the notebook.

United States of America

Federal Communications Commission (FCC) Intentional emitter per FCC Part 15

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the $2.4~\mathrm{GHz}$ band and/or $5.15-5.35~\mathrm{GHz}$ band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in the United States of America if an FCC ID number is on the system label.

This equipment complies with FCC radio frequency electromagnetic signal (RF) exposure limits set forth for an uncontrolled environment of a portable transmitting device.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Warning



Wireless devices are not user serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.

Unintentional emitter per FCC Part 15

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Compliance Accessories: The accessories associated with this equipment are: shielded video cable when an external monitor is connected. These accessories are required to be used in order to ensure compliance with FCC rules.

FCC declaration of conformity

Responsible party:

Gateway Companies, Inc. 610 Gateway Drive, North Sioux City, SD 57049 (605) 232-2000 Fax: (605) 232-2023

Product:

■ Gateway Tablet PC M1300

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution



Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the product.

Telecommunications per FCC part 68 (applicable to products fitted with USA modems)

Your modem complies with Part 68 of the Federal Communications Commission (FCC) rules. On the computer or modem card is a label that contains the FCC registration number and Ringer Equivalence Number (REN) for this device. If requested, this information must be provided to the telephone company.

An FCC-compliant telephone line cord with a modular plug is required for use with this device. The modem is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68-compliant. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices which may be connected to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If this device causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. The telephone company may request that you disconnect the equipment until the problem is resolved.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

This equipment cannot be used on telephone company-provided coin service. Connection to party line service is subject to state tariffs. Contact the state public utility commission or public service commission for information.

When programming or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in the off-peak hours such as early morning or late evenings.

The United States Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent, an identification of the business, other entity, or other individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual. Refer to your fax communication software documentation for details on how to comply with the fax-branding requirement.

Canada

Industry Canada (IC) Intentional emitter per RSS 210

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the $2.4\,$ GHz band and/or 5.15 – $5.35\,$ GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in Canada if an Industry Canada ID number is on the system label.

This equipment complies with Industry Canada radio frequency electromagnetic signal (RF) exposure limits.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Warning



To prevent radio interference to licensed service or co-channel Mobile Satellite systems, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Warning



Wireless devices are not user serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.

Warning



The transmitting device embedded in this system may not be used with any antenna other than provide with the system.

Warning



The 802.11A radio LAN your system may have been equipped with operates in the same frequency range as high power radar, which has priority use, and may damage the radio LAN if both are present and being used in the same area.

Unintentional emitter per ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

Telecommunications per Industry Canada CS-03 (for products fitted with an IC-compliant modem)

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation, and safety requirements. The Department does not guarantee the equipment will operate to the users' satisfaction.

Before installing this equipment, users should make sure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the inside wiring associated with a single-line individual service may be extended by means of a certified connector assembly. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should make sure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Warning



To avoid electrical shock or equipment malfunction do not attempt to make electrical ground connections by yourself. Contact the appropriate inspection authority or an electrician, as appropriate.

The **Ringer Equivalence Number** (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Mexico

Intentional emitter

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in Mexico if a COFETEL or SCT ID is on the system label.

This equipment complies with radio frequency electromagnetic signal (RF) exposure limits.

Unintentional emitter

At this time there are no mandatory requirements for Unintentional Emitters. However, this device does comply with multiple requirements for other countries and regions as listed on the system label and in the user's manual.

Laser safety statement

All Gateway systems equipped with CD and DVD drives comply with the appropriate safety standards, including IEC 825. The laser devices in these components are classified as "Class 1 Laser Products" under a US Department of Health and Human Services (DHHS) Radiation Performance Standard. Should the unit ever need servicing, contact an authorized service location.

Warning



Use of controls or adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure. To prevent exposure to laser beams, do not try to open the enclosure of a CD or DVD drive.

California Proposition 65 Warning

Warning



This product contains chemicals, including lead, known to the State of California to cause cancer and/or birth defects or reproductive harm.

Notices

Copyright © 2003 Gateway, Inc. All Rights Reserved 14303 Gateway Place Poway, CA 92064 USA

All Rights Reserved

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Gateway.

The information in this manual has been carefully checked and is believed to be accurate. However, changes are made periodically. These changes are incorporated in newer publication editions. Gateway may improve and/or change products described in this publication at any time. Due to continuing system improvements, Gateway is not responsible for inaccurate information which may appear in this manual. For the latest product updates, consult the Gateway Web site at www.gateway.com. In no event will Gateway be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages.

In the interest of continued product development, Gateway reserves the right to make improvements in this manual and the products it describes at any time, without notices or obligation.

Trademark Acknowledgments

1-800-GATEWAY, ActiveCPR, ALR, AnyKey, black-and-white spot design, CrystalScan, Destination, DestiVu, EZ Pad, EZ Point, Field Mouse, Gateway 2000, Gateway Country, gateway.net, Gateway stylized logo, Perfect Scholar, Solo, TelePath, Vivitron, stylized "G" design, and "You've got a friend in the business" slogan are registered trademarks and black-and-white spotted box logo, GATEWAY, Gateway Astro, Gateway@Work, Gateway Connected touch pad, Gateway Connected music player, Gateway Cyber:)Ware, Gateway Education:)Ware, Gateway Flex Case, Gateway Gaming:)Ware, Gateway GoBack, Gateway Gold, Gateway Learning:)Ware, Gateway Magazine, Gateway Micro Server, Gateway Money:)Ware, Gateway Music:)Ware, Gateway Networking Solutions, Gateway Online Network (O.N.) solution, Gateway Photo:)Ware, Gateway Professional PCs, Gateway Frofile, Gateway Solo, green stylized GATEWAY, green stylized Gateway Igoo, Gateway Teacher:)Ware, Gateway Video:)Ware, HelpSpot, InforManager, Just click it!, Learn@Gateway, Kids BackPack, SERVE-TO-ORDER, Server Watchdog, the Spotted G Gateway Logo and the Spotted G Logo, SpotShop, Spotshop.com, and Your:)Ware are trademarks of Gateway, Inc. Intel, Intel Inside logo, and Pentium are registered trademarks and MMX is a trademark of Intel Corporation. Microsoft, MS, MS-DOS, and Windows are trademarks or registered trademarks of their respective companies.

Macrovision statement

If your computer has a DVD drive and an analog TV Out port, the following paragraph applies:

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Index

Α	troubleshooting 260
AC adapter	audio CD
connecting 21	See CD
connector 6, 230	audio file
conserving battery power 133	streaming 167
damaged 23	automobile power adapter 13, 133, 134
defective 24	AVI file 91
FAQ 261	
foreign use 261	В
international adapters 133	background 155
outlet 14	backing up files 201
troubleshooting 257	battery
access point network 173	alarm options 135, 137
accessories 13	alternate power sources 133
safety precautions 268	bay 9, 131
accounts	changing 131
ISP 79	charge status 128
user 162	charging 21, 130
acoustic handset coupler 144	conserving power 133
ad hoc networking 175, 176	FAQ 261
adding	gauge 10, 129
icons to desktop 58	icons 128
user accounts 162	installing 131
See also installing	latch 10
address	managing power 133
e-mail 83	meter 129
Web 81	monitoring charge 128
airplane power adapter 13, 134	purchasing 13
alarms 135, 137	recharging 21, 130
antenna zone 6, 10	release latch 10
application key 34	replacing 131
arrow keys 34	safety guidelines 19
AU file 91	status indicator 5, 23, 129
audio	storing 188
headphone jack 8, 229	troubleshooting 256
microphone jack 8, 229	bays
muting 86	battery 9, 131
playing 89, 91	memory 10, 222
recording 89	BIOS Setup utility 146
streaming 167	brightness

adjusting 150, 161	creating music 104
broadband Internet connection 41, 78,	inserting 96
166	playing music 97
browser	troubleshooting 243
Web 79, 80	CD drive
browsing for files and folders 66	See DVD/CD-RW drive
buttons 3	CD-RW
Esc 4	See CD
Fn 4	CD-RW drive
Hot Key 4	See DVD/CD-RW drive
programming 159	Certificate of Authenticity 12
security 4, 255	cleaning
setting functions 248	audio CD 245
button-tapping 28	case 203
	CD 245
C	DVD 245
cable lock	keyboard 203
tablet PC 9	LCD panel 204
using while traveling 146	mouse 204
cable modem 41, 78, 170, 173	screen 204
calibrating 29, 161, 256	tablet PC exterior 203
camera	tablet PC screen 204
See digital camera	clicking 28, 38
See digital video camera	clipboard 63
Caps Lock indicator 36	close button 60
capturing video 114	closing
cards	program 60, 75
adding PC Card 218	unresponsive program 27
eject button 218, 220	window 60, 75
inserting PC Card 218	color
installing PC Card 218	changing depth 151
PC Card eject button 218, 220	changing desktop 155
PC Card slot 6, 218	changing desktop 100 changing number of 151
reinstalling PC Card 218	changing scheme 154
removing PC Card 218	connecting
replacing PC Card 218	AC adapter 21
troubleshooting PC Card 256	camera 112, 114
care and maintenance 147, 188	digital camera 112
carrying case 13	digital video camera 114 diskette drive 93
	DVD/CD-RW drive 94
cleaning 245	
copying 108	external keyboard 33
creating data 100	external monitor 111

keyboard 33	copyright notice 277
modem 39	creating
printer 41, 184	data CD 100
scanner 41, 184	data DVD 100
surge protector 24	desktop icons 58
to Ethernet 40	desktop shortcuts 58
to Internet 41	documents 71
to network 40	folders 62
to Web site 81	movies 114
video camera 114	music CD 104
connections	startup diskette 191
AC adapter 6, 14, 230	cursor pad 4
audio 8, 229	Customer Service
digital camera 7, 228, 229	Accounting 264
digital video camera 41, 114, 229	Sales 264
diskette drive 7, 228, 229	Warranty 264
Ethernet 7, 40, 229	customizing 149
external speakers 8, 229	cutting
Firewire 7, 41, 114, 229	files and folders 63, 75
FlexDock 7	text and graphics 75
headphone 8, 14, 229	
i.Link 7, 41, 114, 229	D
IEEE 1394 7, 14, 41, 114, 229	Dashboard 4, 131, 160
keyboard 7, 228, 229	Standby button 131
LAN 7, 14, 40, 229	wireless operations 177
microphone 8, 14, 229	default printer 258
modem 7, 39	defragmenting hard drive 199
monitor (VGA) 7, 14, 111, 230	deleting files and folders 56, 65, 66, 75,
mouse 7, 228, 229	196
network 7, 40, 229	desktop 55
power 6, 21, 230	adding icons 58
printer 7, 228, 229	adding shortcuts 58
scanner 7, 228, 229	adjusting settings 151
speaker 8, 229	changing background 155
troubleshooting 248	changing color depth 151
USB 7, 14, 41, 228, 229	changing color scheme 154
VGA 7, 14, 111, 230	changing number of colors 151
video camera 7, 114, 229	selecting screen saver 157
Zip drive 7, 228, 229	using 56
copying	using Start menu 56
CD 108	device drivers
files and folders 63, 75	See drivers
text and graphics 75	dialing codes 144

digital camera	online help 50
connecting 112	documents
USB port 7, 228, 229	creating 71
digital photography	opening 73
connecting a digital camera 112	printing 74
digital video camera	saving 72
connecting 114	double-clicking 28, 38
IEEE 1394 port 7, 229	double-tapping 28
directional keys 34	downloading files 82
Disk Cleanup 196	dragging 38
Disk Defragmenter 199	drivers 209
diskette	reinstalling 209
creating startup 191	updating 52 , 211
inserting 93	drives 133
troubleshooting 241	backing up files 201
write-protecting 192	checking for errors 198
diskette drive 93	checking for free space 196
activity indicator 93	defragmenting 199
eject button 93	deleting files 196
troubleshooting 241	diskette 93
using 93	DVD/CD-RW 94, 100
display	sharing 166
adjusting brightness 150	troubleshooting 241, 243, 245
brightness 150	viewing contents 61
changing orientation 150	viewing files and folders 61
changing resolution 152	DSL modem 41, 78, 170, 173
cleaning 261	DVD
conserving battery power 133	cleaning 245
maintaining 188	creating data 100
orientation 150, 255	inserting 96
performance 261	playing 99
properties 111	troubleshooting 243
settings 151	DVD drive
troubleshooting 242, 243, 258	See DVD/CD-RW drive
using 28	DVD/CD-RW drive
using screen saver 157	activity indicator 96
Do More With Gateway 49	eject button 96
docking connector 7, 231, 235	manual eject hole 96
documentation	troubleshooting 243
eSupport 51	using 94, 100
Gateway Web site 51	_
help 47	E
HelpSpot 47	eject button

diskette drive 93	files
DVD/CD-RW drive 96	backing up 201
electrostatic discharge (ESD) 221	copying 63, 75
e-mail 79, 83	cutting 63, 75
address 83	deleting 56, 65, 75, 196
checking for messages 84	downloading 82
sending 83	finding 66, 68
transferring settings from old	moving 63
computer 184	opening 38, 56
emergency startup diskette 191	pasting 63, 75
EmPower power adapter 133	recovering 65
Error-checking 198	renaming 75
escape button 3, 4	searching for 66, 68, 181
eSupport 12	transferring 145, 181
using 52	troubleshooting 245
Ethernet	types 181
connecting 40	viewing list 61
jack 7, 40, 229	Files and Settings Transfer Wizard 180
troubleshooting 254	finding
turning wireless Ethernet on or off	files and folders 66, 68, 181
177	HelpSpot topics 48
wired network 168, 169	specifications 12
wireless network 168, 172	Firewire port 7, 41, 114, 229
external monitor 230	FlexDock
EZ Pad touchpad	docking connector 7
See touchpad	purchasing 14
_	setting up 233
F	troubleshooting 248
FAQs 261	floppy disk
Fast Ethernet 169	See diskette
faxes 115	Fn button 3, 4
automatically canceling 125	Fn key 34, 35
canceling 123	folders
configuring Fax 117	copying 63, 75
failed transmission 125	creating 62
installing Fax 116	cutting 63, 75
receiving and viewing 123	deleting 56, 65, 75
retrying 124	finding 66, 68
sending 120	moving 63
sending from program 122	opening 38, 61
sending scanned image 122	pasting 63, 75
setting up cover page template 121	recovering 65
troubleshooting 252	renaming 75

searching for 66, 68	Hot Key 2 3, 4, 150
viewing list 61	hot-swapping 41, 218
fragmentation 199	hyperlinks 80
Frequently Asked Questions (FAQs) 261	· -
function keys 34	I
v	i.Link port 7, 41, 114, 229
G	IEEE 1394 port 7, 41, 114, 229
game	IEEE 802.11 168, 172
multi-player 167	using while traveling 145
Gateway	indicators
eSupport 12	See status indicators
model number 11	Inkball 46, 54
serial number 11, 12	inkjet printer 15
Web address 51	installing
Web site 51	battery 131
gateway.your.way dial-up server 251	camera 112
Get Going with Tablet PC 45	cards 218
gigabit Ethernet 169	device drivers 209
	devices 41, 240
Н	digital camera 41, 112
hard drive	digital video camera 41
backing up files 201	drivers 209
bay 9	Fax 116
checking for errors 198	InterVideo DVD player 99
checking for free space 196	memory 222
defragmenting 199	Microsoft Fax 116
deleting files and folders 196	Nero Express 100
scanning for errors 198	PC Card 218
status indicator 5	peripheral devices 41, 184
troubleshooting 245, 255	printer 41, 184
hard top 188	programs 185, 212
headphone	scanner 41, 184
jack 8, 14, 229	Windows 214
help	Internal wireless label 11
online 50	Internet 78
using 47	account 79
Help and Support Center 44, 47, 54	broadband connection 41
searching 48	connecting to 81
starting 47	downloading files 82
Hibernate mode 6, 26, 134, 140	requirements to access 79
troubleshooting 258	sharing access 166
home office network 165	transferring settings from old
Hot Key 1 3, 4, 160	computer 183

troubleshooting 246	L
Internet connection	label
sharing 166	internal wireless 11
troubleshooting 246, 251	Microsoft Certificate of Authenticity
Internet service provider (ISP) 78, 79	12
setting up account 79	model number 11
transferring settings from old	serial number 11
computer 183	wireless networking 11
IRQ conflicts 240	laser printer 15
ISP	latch
See Internet service provider	battery 10
•	LCD panel
J	changing resolution 152
jacks	cleaning 204
See connections	troubleshooting 242
	using screen saver 157
K	line protector 144
Kensington cable lock 146	line tester 144
lock slot 9	links 80
key combinations 35	lock
keyboard	Kensington cable 9, 146
buttons 33	8
cleaning 203	M
connecting 33	maintenance 187
features 33	backing up files 201
icon 31	checking for drive errors 198
shortcuts 75	checking hard drive space 196
troubleshooting 248	cleaning case 203
USB port 7, 228, 229	cleaning component exteriors 203
keys	cleaning computer display 204
application 34	cleaning keyboard 203
arrow 34	cleaning mouse 204
directional 34	creating startup diskette 191
Fn 34, 35	defragmenting 199
function 34	deleting files 196
navigation 34	display screen 188
numeric keypad 34	general guidelines 188, 189
Pad Lock 35	pen 189
Scroll Lock 35	suggested schedule 190
system 34	using Scheduled Task Wizard 201
system key combinations 35	virus protection 193
Windows 34	Max Battery power setting 133, 257,
	261

maximize button 60	screen resolution 111
Media Player 91, 97	using screen saver 157
memory	VGA port 7, 230
adding 222	mouse
bay 10	cleaning 204
installing 222	troubleshooting 254
purchasing 15	USB port 7, 228, 229
removing 222	moving
replacing 222	files 63
troubleshooting 249	files from old computer 179, 181
upgrading 222	folders 63
menu bar 60	Internet settings from old computer
messages	183
checking e-mail 84	pointer 38
sending e-mail 83	screen objects 38
microphone	settings from old computer 179
built-in 3	MP3 file 91
jack 8, 14, 229	playing 91
troubleshooting 260	streaming 167
Microsoft	MPEG file
Certificate of Authenticity 12	See MP3 file
Fax 115	multimedia
Wordpad 71	adjusting volume 86
MIDI file 91	playing audio CD 97
minimize button 60	playing DVD 99
model number 11, 146	recording audio 89
modem	using CD drive 94
cable 41, 78	using diskette drive 93
connecting 39	using DVD drive 94
connecting to Internet 79	using Windows Media Player 91, 97,
connection speed 251	99
DSL 41, 78	multi-player game
international adapter 144	playing 167
jack 7, 39	music
protecting from power surge 24	See audio
troubleshooting 250	muting sound 86
monitor	o .
adding an external 111	N
changing resolution 152	navigation keys 34
color quality 111	Nero Express 100, 104, 108
controls 151	NeroVision Express 114
display properties 111	network
port 7, 230	jack 7, 40, 229

troubleshooting 254	changing 150
network equipment shopping list 171,	
174, 176	P
networking	Pad Lock
access point 173, 174	status indicator 35, 36
ad hoc 175, 176	system key 35
computers 165	password 146, 255
data transfer speed 169, 172	pasting
Ethernet 168, 169	files and folders 63, 75
games 167	text and graphics 75
internal wireless label 11	PC Card
peer-to-peer 175, 176	See cards
selecting connection type 168	PCMCIA card
sharing devices 167	See cards
sharing drives 166	peer-to-peer networking 175, 176
sharing Internet connections 166	pen 3, 28
sharing printers 167	button 30
signal strength 172	calibrating 29, 256
streaming audio 167	care 189
streaming video 167	gestures 30
turning off wireless Ethernet 177	replacing point 189
turning on wireless Ethernet 177	tether anchor 6
wired connections 168, 169	tips 31
wireless connections 168, 172	troubleshooting 256
non-technical support	peripheral devices
Accounting 264	FlexDock 14, 227
Sales 264	installing 41
Warranty 264	purchasing 15
Norton Antivirus 193, 194	troubleshooting 257
numeric keypad 34	photography
status indicator 35, 36	See digital photography
	playing
0	audio CD 97
online help 47, 50	audio file 89, 91
opening	DVD 99
documents 73	Media Player file 91
files 38, 56	multimedia files 91
folders 38, 61	multi-player games 167
programs 38, 56	music CD 97
shortcut menu 38	Windows Media Player file 91
operating system	Plug and Play devices
troubleshooting 255	IEEE 1394 support for 41
orientation	USB support for 41

pointer 37	installing 41, 184
moving 38	laser 15
ports	sharing 167
See connections	troubleshooting 258
power	USB port 7, 228, 229
AC adapter 21, 133	printing documents 74
advanced settings 135, 139	programs
alarms 135, 137	closing 75
automobile/airplane adapter 133,	closing unresponsive 27
134	Dashboard 160
battery 27, 128, 130, 131, 133	installing 185, 212
changing modes 134	opening 38, 56
changing schemes 136	reinstalling 185, 212
changing settings 135	
connector 6, 21, 230	R
conserving battery power 133	radio approval authorities 145
damaged cord 23, 24	radio frequency wireless connections
EmPower adapter 133	145
extending battery life 133	RAM
Hibernate mode 134, 140	See memory
indicator 26	rebooting tablet PC 27
international adapter 147	recharging battery 130
management 127, 133	recordable drive
schemes 135, 136	activity indicator 96
source problems 24	eject button 96
SpeedStep settings 135	manual eject hole 96
Standby mode 26, 134	troubleshooting 243
status indicator 5	using 94, 100
surge protector 24	recording
switch 6, 25, 135	audio file 89
troubleshooting 256, 257	data CD 100
turning off tablet PC 26	data DVD 100
turning on tablet PC 25	music CD 104
power adapter	recovering files and folders 65
airplane 13	Recycle Bin 56
automobile 13	deleting files and folders 65
power management	emptying 66
Max Battery setting 133	recovering files and folders 65
Power Options Properties 6	re-dialing telephone 124
Power/Battery icon 133	reinstalling
printer	drivers 209
default 258	peripheral devices 184
inkjet 15	printer 184

programs 185, 212	saver 157
scanner 184	troubleshooting 242, 260
software 185, 212	screen objects
Windows 214	getting information 38
removing files and folders 56, 65, 66,	moving 38
75, 196	selecting 38
renaming files and folders 75	Scroll Lock
replacing	status indicator 35, 36
See installing	system key 35
resetting tablet PC 27	Search utility 68
resolution	searching
changing 152	for files and folders 66, 68, 181
restarting tablet PC 27	in Help and Support Center 48
Restoration CDs 208	security button 3, 4
restoring files and folders 65	security features
right-clicking 28, 38	Kensington cable lock 9
rotating	security while travelling 146
display orientation 161	serial number 11, 12, 146
tablet in FlexDock 232	setting up
router 170, 171	safety precautions 268
	sharing
S	devices 167
safety	drives 166
caring for computer 189	Internet connection 166
general precautions 18, 20, 267	printer 167
guidelines for troubleshooting 238	See also networking
static electricity 221	shortcut menus
saving documents 72	accessing 38
ScanDisk	shortcuts
See Error-checking	adding to desktop 58
scanner	closing programs 75
installing 41, 184	closing windows 75
USB port 7, 228, 229	copying 75
scanning drive	cutting 75
for errors 198	deleting files and folders 75
for viruses 193	keyboard 75
Scheduled Tasks Wizard 201	opening menu 38
screen	pasting 75
adjusting settings 151	renaming files and folders 75
changing color depth 151	selecting adjacent items in list 75
changing number of colors 151	selecting items in list 75
changing resolution 152	switching between files, folders, or
resolution 111	programs 75

shutting down tablet PC 26, 27	support
small office network 166	Help and Support Center 44, 54
SO-DIMM 222	surge protector 24
software	system identification label 11
See programs	system keys 34
sound	combinations 35
adjusting 86	System Properties 242
controls 86	•
muting 86	Т
troubleshooting 260	Tablet and Pen Settings 54, 158, 262
Sound Recorder	Tablet PC Input Panel 4, 31, 54
making audio recordings 89	Take a Tour of Windows XP 45
playing file 89	tapping 28
speakers	Task Manager 4
built-in 8	taskbar 56
jack 8, 229	Technical Support 264
specifications 12	technical support
speech recognition 31, 54, 162	automated troubleshooting 264
SpeedStep technology 135	eSupport 12
Standby 6, 26, 131, 231	FaxBack support 264
troubleshooting 258	resources 263
Standby mode 26, 134	Technical Support 264
Start button 56	tips before contacting 263
Start menu 56	tutorial service 264
starting	telephone
programs 38, 56	acoustic handset coupler 144
tablet PC 25	automatically canceling fax 125
startup	canceling fax 123
diskette 191	configuring Fax 117
password 146	installing Fax 116
static electricity 221	line protector 144
status indicators	line tester 144
battery status 5, 129	receiving and viewing faxes 123
Caps Lock 36	retrying fax 124
hard drive 5	sending fax 120
location 3	sending faxes from program 122
numeric keypad 35, 36	sending scanned image fax 122
Pad Lock 35, 36	setting up fax cover page template
power 5	121
Scroll Lock 35, 36	using Fax 115
wireless Ethernet activity 5	telephone support 263
Sticky Notes 54	tips
streaming audio and video 167	pen 31

title bar 60	general guidelines 239
touchpad	hard drive 245
buttons 37	Internet connection 246, 251
clicking 38	IRQ conflict 240
double-clicking 38	keyboard 248
dragging screen objects 38	LCD panel 242
moving pointer 37, 38	memory 249
moving screen objects 38	modem 250
opening files, folders, and programs	mouse 254
38	network 254
opening shortcut menu 38	passwords 255
right-clicking 38	PC Cards 256
selecting screen objects 38	power 256
training	printer 258
CD 266	reinstalling drivers 209
classroom 266	safety guidelines 238
Gateway Learning Libraries 266	screen 242, 260
Learn@Gateway 266	screen area 242
transferring	screen resolution 242
files from Internet 82	sound 260
files from old computer 179, 181	technical support 263
Internet settings from old computer	telephone support 263
183	video 260
settings from old computer 179	Web site connection speed 247
travel 261	turning off
international 147	tablet PC 26, 27
travel tips 143	wireless Ethernet 177
wireless on airplanes 145	turning on
troubleshooting 240	tablet PC 25
audio 260	wireless Ethernet 177
automated system 264	tutorial 44
cleaning CD 245	tutoring
cleaning DVD 245	fee-based 265
device installation 240	
diskette drive 241	U
display 242	updating
DVD/CD-RW drive 243	device drivers 52, 211
Error-checking 198	Norton Antivirus 193
faxed answers 264	upgrading 217
faxes 252	USB flash drive 13
files 245	USB port 7, 41, 228, 229
FlexDock 248	user accounts
gateway.your.way dial-up server 251	adding 162

switching 162	desktop 55		
	Files and Settings Transfer Wizard		
V	180		
VGA port 111	installing 214		
video	Product Key Code 12		
capture 114	reinstalling 214		
playing 91, 99	reinstalling drivers 209		
streaming 167	Search utility 68		
troubleshooting 260	updating drivers 211		
video camera	Windows Journal 4, 54		
connecting 114	Windows key 34		
video file	Windows Media Player 91, 97, 99		
streaming 167	Windows Movie Maker 114		
virus	Windows XP Tablet PC Edition 54		
protecting against 193	wired Ethernet network 168, 169		
removing with Norton AntiVirus	equipment list 171		
193	example 170		
voice recognition 54	wireless Ethernet		
volume	antenna zone 6, 10		
adjusting 86, 161	conserving battery power 133		
adjusting modem 253	FAQ 261		
controls 86	label 11		
muting 86	status indicator 5		
troubleshooting 260	troubleshooting 260		
	using while traveling 145		
W	wireless Ethernet network 168, 172		
waking up tablet PC 26	access point equipment list 174		
WAV file 91	access point example 173		
Web browser 79, 80	ad hoc equipment list 176		
Web page 80	ad hoc example 175		
Web site 80	peer-to-peer equipment list 176		
connecting to 81	peer-to-peer example 175		
downloading files 82	turning off 177		
Gateway 51	turning on 177		
window 59	Wordpad 71		
close button 60	World Wide Web (WWW) 80		
closing 60, 75	downloading files 82		
maximize button 60	write-protection for diskettes 192		
menu bar 60	writing 28, 31		
minimize button 60	7		
title bar 60	Z		
Windows	Zip drive 201		
clipboard 63	USB port 7, 228, 229		

MAN US TABLET PC USR GDE R2 5/03

