
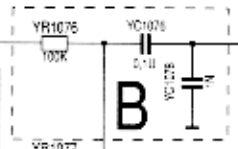


FUNKTION	PINS 3 / 10	CONTROL Pin 9	CONTROL Pin 10
AV-AUFNAHME-RECORD	1 / 12	0	0
HF-AUFNAHME-RECORD	5 / 14	0	1
WIEDERGABE-PLAYBACK	2 / 15	1	0
CV-AUFNAHME-RECORD	4 / 11	1	1

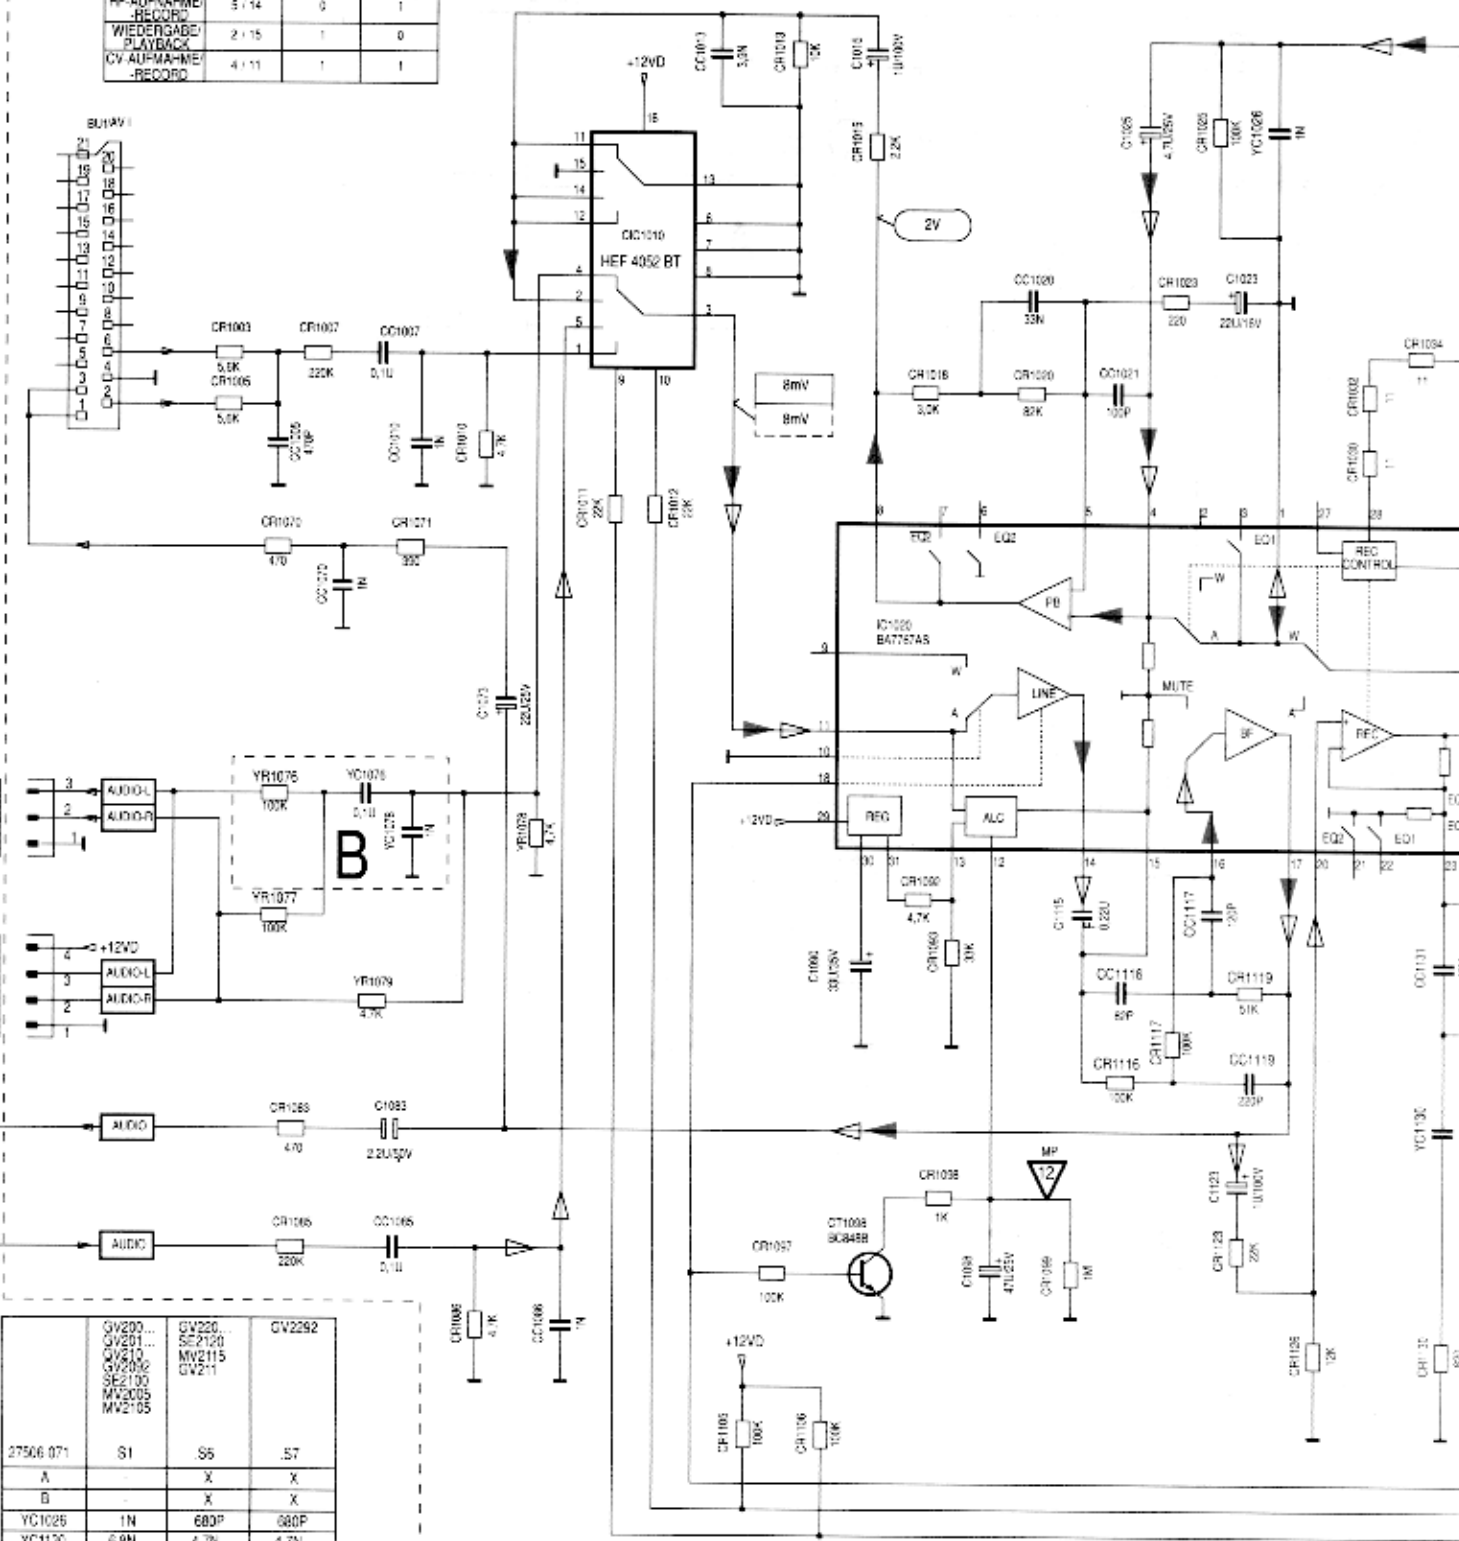

	GV200... GV201... GV210... GV202... SE2100 MV2005 MV2105	GV220... SE2120 MV2115 GV211	GV2292
27506 071	S1	S6	S7
A		X	X
B		X	X
YC1026	1N	680P	680P
YC1130	6.8N	4.7N	4.7N
YR1077	-	X	-
YR1078	X	X	-
YR1079	-	-	X
CY1149	10N	5.6N 2%	5.6N 2%
CY1153	-	X	X
CY1158	X	-	-
STÜCKER 300 4F	-	-	-
BE03	-	X	-
BE05	-	-	X

- SIGNAL PEGEL BEI AUFNAHME F=315Hz/S
- SIGNAL PEGEL BEI WIEDERGABE F=315Hz
- GLEICHSPG. BEI AUFNAHME OHNE SIGNAL  
DC VOLTAGE ON RECORDING WITHOUT SIGNAL
- GLEICHSPG. BEI WIEDERGABE MIT TEST CD  
DC VOLTAGE ON PLAYBACK WITH TEST CD