
Index

A

- ac, Glossary-2
- ac power outlet, 6-3
- accessories, 11-34
- accuracy, 1-3
 - calibration, 7-6
- accuracy calibration, Glossary-2
- acoustics, 2-3
- action keys, 3-10, 3-11
- addressable dpi, Glossary-2
- adjustments, 7-2
- align cartridges, 8-55
- ammonia, causing belt damage, 8-55
- Apple LocalTalk, 1-3
- application notes, part number, 11-35
- applications of plotter, 1-2
- area fill PQ plot, service test, 8-35
- ASIC, Glossary-2
- ASIC (Application Specific Integrated Circuit)
 - Carriage, 5-4
 - Pen Interface, 5-4
 - Data, 5-5
 - Print Control, 5-9
 - Data, 5-9
 - Processor Support, 5-4
- assembly instructions, 3-2
 - legs and bin, 3-6

B

- bail, removing, 6-45
- bail sensor, 5-7
- bail stepper, service test, 8-49
- bail stepper motor, removing, 6-46

- Banding, 9-20
- baud rate, Glossary-2
- belt
 - premature wearing, 8-55
 - removing main drive, 6-34
 - swelling, 4-2
- staguard assembly, 6-40
- Bi-Tronics, Glossary-2
- bidirectional, error, 9-14
- Bi-Tronics, interface, 2-2
 - cables, 11-37
- Bleeding , 9-19
- bushings, friction, 9-14
- button, service test, 8-53
- buttons, front panel, 3-10, 3-11

C

- cables, interface, 2-2
 - part numbers, 11-37
- CAD, Glossary-2
- CAD Color Diagnostic plot, 9-15
- calibrations, 7-1
 - accuracy, 7-6
 - drop detect, 7-4
 - entering, 7-3
 - line sensor, 7-5
 - menu path, 7-3
 - when required, 7-2
- CAM, Glossary-2
- carriage, 9-14
 - noise, 4-2, 8-55
 - removing, 6-34
 - service test, 8-27
- carriage (Y-axis) motor, removing, 6-24
- carriage LED, Glossary-2
- carriage PCA, description, 5-8

- carriage-axis mechanism, 5-5
- cartridge, Glossary-2
 - part number, 11-36
- cartridge carriage, removing, 6-34
- cartridges, 9-14
 - fail frequently, 8-55
- caution symbols, x
- cautions, 6-3
- center cover, removing, 6-14
- Centronics, Glossary-2
- centronics interface cables, 11-37
- Channel, Serial, 5-5
- character sets, 1-2
- cleaning
 - carriage bushing, 8-55
 - drive roller, 4-3
 - plotter, 4-2
- Coalescence, 9-18
- cockle, 9-18
- code, firmware revision, 10-3
- color PQ plot, service test, 8-34
- Configuration Plot, Description, 8-56
- configuring the plotter, 3-12
- consumption, power, 2-2
- controller, DRAM, 5-4
- copiers, diazo, wearing belt, 8-55
- current, electrical, 2-2
- Cutter, removing, 6-33
- cutter, service test, 8-48

D

- D/A1-size plotters, Glossary-2
- damage, inspecting the plotter for, 3-5
- Data, Conversion, 5-5

- dc, Glossary-2
- demonstration plot, 3-12
- depth, plotter, 2-3
- Description
 - Configuration Plot, 8-56
 - PCA, Overview, 5-7
- description
 - carriage PCA, 5-8
 - line sensor, 5-9
 - main PCA, 5-8
 - power supply PCA, 5-10
- description of plotter, 1-2
- Diagnostics – self test, introduction, 8-2
- diazo copiers, wearing belt, 8-55
- dimensions, plotter, 2-3
- dip, Glossary-2
- dirt on, carriage bushing, 4-2
- dirty
 - carriage bushing, 8-55
 - encoder strip, 9-14
- display, vacuum-fluorescent, 5-10
- display data, Glossary-2
- documentaion, 11-35
- dots per inch, 1-4
- DRAM, 5-8, Glossary-2
 - controller, 5-4
- DRAM SIMM, 11-36
- Drive Belt, 6-34
- drive belt, premature wearing, 8-55
- drive roller, Glossary-3
- Driver, motor, Y–axis, 5-4
- driver, Glossary-3
- Drivers, Pen, 5-5
- drivers, software, 1-2

drop detect
 calibration, 7-4
 service test, 8-37

Drop sensor, 5-7

duty cycle, 8-55

E

E/A0-size plotters, Glossary-3

earth, 6-3

edge detect, service test, 8-39

edge of media not found, 8-55

EEROM, Glossary-3

 map, 8-58

 service test, 8-21

 text block, 8-57

EEROM clear counters, service test, 8-22

EEROM model type, service test, 8-23

electrical, specifications, 2-2

electronics-enclosure cover, removing, 6-5

electrostatic discharge, 6-3

Encoder, Linear, 5-4

encoder strip

 damaged, 8-55

 dirty, 9-14

 installing, 6-29

 removing, 6-27

entry platen problems, service note, 10-10

EPROM, Glossary-3

ESD, Glossary-3

ESD precautions, 6-3

Ethertalk, 1-3

F

fan, 5-6

 removing, 6-12

fan problems, service note, 10-22

Feathering, 9-19

film, polyester, 8-55

Fire pulse, waveform, 5-5

firmware history, 10-5

firmware revision code, 10-3

Initialization Flow Chart, 8-3

frequency, 2-2

friction, 9-14

front panel

 action keys, 3-10, 3-11

 overlay, part numbers, 11-35

 plotting mode keys, 3-10, 3-11

 status lights, 3-10, 3-11

front panels, 3-10, 3-11

front-panel assembly, removing, 6-18

functional overview, 5-1

G

graphic languages, 1-2

ground, electrical, 6-3

H

Halo, 9-20

height, plotter, 2-3

HP external controller, 1-3
HP JetDirect EX, 1-3
HP-GL, 1-2
HP-GL/2, 1-2, Glossary-3
HP-RTL, 1-2, Glossary-3
humidity, 2-3

I

IC, Glossary-3
IEEE, Glossary-3
Indicators, LED, 5-10
Initialization Sequences, 8-2
ink
 off axis, 3-11
 on roller, 8-55
 separator, 8-55
 spilling, 8-55
 third party, 3-11
 third-party, 8-55
installation and configuration, 3-1
installing
 encoder strip, 6-29
 memory module, 6-8
installing the plotter, 3-10
Interface, types, 1-3
interfaces, cables, 2-2
 part numbers, 11-37

K

Kanji, Glossary-3
Key Pad, 5-10
keys
 action, 3-10, 3-11
 front panel, 3-10, 3-11
 plotting mode, 3-10, 3-11

L

LAN manager, 1-3
languages
 device control, 1-2
 graphic, 1-2
LED, Glossary-4
LED indicators, 5-10
LEDs, front panel, 3-10, 3-11
left endcover, removing, 6-16
legs and bin, assembly instructions, 3-6
length, plotter, 2-3
lights, front panel, 3-10, 3-11
line sensor, 5-5, Glossary-4
 calibration, 7-5
 description, 5-9
Linear Encoder, 5-4
liquids, 6-3

M

main drive belt, removing, 6-34
main PCA
 description, 5-8
 removing, 6-9
 service test, 8-25
main-carriage com, service test, 8-26
mains, 6-3
maintenance
 preventive, 4-1
 scheduled, 4-4
margins, 1-5
mark encoder, service note, 10-18
mark position, service test, 8-44
mechanical overview, 5-5

media
 edge not found, 8-55
 margins, 1-5
 types, 1-4
media axis, Glossary-4
media motor, removing (X-Axis), 6-25
media sensor, 5-7
 removing, 6-22
 service test, 8-50
media sizes, 1-5
media-axis mechanism, 5-6
media-length calibration, Glossary-4
media-sensor calibration, Glossary-4
memory, 1-3
 main PCA ROM, information, 5-8
memory module
 installing, 6-8
 removing, 6-7
messages, error, 8-5
Migration (Black), 9-19
MIO, service test, 8-24
moisture, on plotter, 4-2
mono PQ plot, service test, 8-33
Motor Driver, X-axis, 5-4

N

network connections, 1-3
noise, carriage bushing, 4-2
noisy carriage, 8-55
Novell Netware, 1-3
nozzle print test, service test, 8-32
nozzles, 9-14
number format, serial, 10-2

O

off-axis ink system, 3-11, 8-55
operation, verifying plotter, 3-12
optical sensor, 8-55
ortho wiper, service test, 8-41
overdrive roller, removing, 6-48

P

P/N, Glossary-5
PAL, Glossary-4
palette, Glossary-4
paper advance errors, service note, 10-12
paper axis, Glossary-4
parallel, interface, 2-2
 cables, 11-37
parity, Glossary-4
parts and diagrams, 11-1
PC, Glossary-4
PCA, Glossary-4
 Overview, Description, 5-7
 power supply, description, 5-10
PCA (Printed Circuit Assembly)
 carriage, description, 5-8
 Main, 5-4
 Overview, Description, 5-7
PCA, identifying a, 10-3
PC-based diagnostics, 8-54
pen, Glossary-4
pen alignment, service test, 8-40
pen alignment problems, service note, 10-20
pen continuity, service test, 8-30

- Pen ID, service test, 8-31
- pen nozzle detect, service test, 8-36
- Pen to Pen Alignment, verification, 9-15
- Pens
 - Firing, 5-5
 - Nozzles, 5-5
- pinch-arm sensor, 5-6
 - removing, 6-21
- pinch-arm lever, Glossary-4
- pinchwheel sensor, service test, 8-52
- PJL, 1-2, Glossary-5
- platen roller, Glossary-5
- Plot
 - Configuration
 - Description, 8-56
 - Steps, 8-56
 - Transfer, 5-2
- plot, conversion, 5-8
- Plots
 - area fill diagnosis, 9-17
 - CAD 2-D Monochrome, 9-13
 - CAD color diagnostic , 9-15
- Plotter
 - Languages, 5-2
 - HP/GL2, 5-2
 - RTL, 5-2
 - Sensors, 5-4
- plotting mode keys, 3-10, 3-11
- PML, 1-2
 - Glossary, Glossary-5
- power
 - requirements, 2-2
 - supply, 2-2
- power-supply PCA, removing, 6-11
- power-supply
 - autoranging, 5-10
 - PCA, description, 5-10
 - primary, 5-10
 - secondary, 5-10
- preventive maintenance, 4-1

- primer
 - removing, 6-41
 - service test, 8-42
- print modes, 9-5
- print quality, 1-4, 9-1
 - problems, 9-18
 - troubleshooting checklist, 9-2
 - vertical line straightness, 9-14
- printed circuit assembly, identifying a, 10-3
- print-mode, characteristics, 9-5
- problems, print quality, 9-18
- Processor
 - Carriage, 5-9
 - Main, 5-4
 - Servo, 5-4
- product history, 10-1
- Product Information, 1-1
- protective earth terminal, 6-3
- PWM, Glossary-5

R

- RAM, Glossary-5
- raster, Glossary-5
- reassembly, 6-3
- Registers, 5-4
 - Processor Support ASIC, 5-4
- relative humidity, 4-2
- Remote Sense, Circuitry, 5-9
- removal and replacement, 6-1
- removing
 - bail, 6-45
 - bail stepper motor, 6-46
 - cable assembly, 6-47
 - carriage (Y-axis) motor, 6-24
 - cartridge carriage, 6-34
 - center cover, 6-14
 - cutter, 6-33
 - cutter enclosure assembly, 6-55

- drive roller, 6-49
- electronics-enclosure cover, 6-5
- encoder strip, 6-27
- entry platen, 6-53
- fan, 6-12
- front-panel assembly, 6-18
- left endcover, 6-16
- main drive belt, 6-34
- main PCA, 6-9
- media diverter, 6-56
- media motor (X-Axis), 6-25
- media sensor, 6-22
- memory module (DRAM SIMM), 6-7
- overdrive roller, 6-48
- pinch arm assemblies, 6-57
- pinch-arm sensor, 6-21
- power-supply PCA, 6-11
- primer, 6-41
- right endcover, 6-17
- rollfeed cover assy, 6-51
- rollfeed module assemblies, 6-52
- service station, 6-42
- spittoon, 6-44
- starguard, 6-40
- trailing cable, 6-36, 6-39
- window, 6-13
- window sensor, 6-20
- Y-tensioner and housing, 6-31, 6-32
- Y-axis motor, 6-32
- repackaging kit, 11-34
- repacking the plotter, 3-5
- resolution, 1-4, Glossary-5
- revision code of firmware, 10-3
- right endcover, removing, 6-17
- rms, Glossary-5
- ROM, Glossary-5
 - main PCA, information, 5-8
- RS-232-C, Glossary-5
- RS-232-C, interface, 2-2
 - cables, 11-37
- RTL, 1-2, Glossary-5

S

- safety, warnings, 6-3
- safety precautions, 6-3
- safety symbols, x
- scheduled maintenance, 4-4
- sensor
 - does not find media edge, 8-55
 - line, 5-5
- Sensors, Status Conditions, 5-4
- serial, interface, cables, 11-37
- serial interface, 2-2
- serial-number format, 10-2
- service notes, 10-1
- Service Tests, 8-17
 - area fill PQ plot, 8-35
 - bail stepper, 8-49
 - button test, 8-53
 - carriage, 8-27
 - color PQ plot, 8-34
 - cutter, 8-48
 - drop detector, 8-37
 - edge detector, 8-39
 - EEROM, 8-21
 - EEROM clear counters, 8-22
 - EEROM model type, 8-23
 - entering, 7-3, 8-20
 - Main PCA, 8-25
 - main-carriage communication, 8-26
 - mark position, 8-44
 - media sensor, 8-50
 - MIO, 8-24
 - mono PQ plot, 8-33
 - nozzle print test, 8-32
 - ortho wiper, 8-41
 - pen alignment, 8-40
 - pen continuity, 8-30
 - pen ID, 8-31
 - pen nozzle detect, 8-36
 - pinchwheel sensor, 8-52

- primer test, 8-42
- thermal control, 8-28
- TTOE, 8-29
- window sensor, 8-51
- X motion control, 8-43
- Y static friction, 8-46
- Y-axis encoder, 8-47
- Y-axis friction, 8-45
- servo shutdown error, service note, 10-14
- setting up the plotter, 3-10
- setup sheet, example of, 3-13
- SIMM, Glossary-5
- site planing and requirements, 2-1
- sizes, media, 1-5
- slider rod, 9-14
- software, drivers, 1-2
- sound power, 2-3
- sound pressure, 2-3
- specifications
 - electrical, 2-2
 - environmental, 2-3
 - moisture, 4-2
 - resolution, 1-4
- spittoon, 8-55
- stable legs, service note, 10-16
- status lights, 3-10, 3-11
- stepper motor, 5-6
- storage environment, 2-3
- supplies source, part number, 11-35
- support services, 12-1
 - Asia-Pacific, 12-8
 - Europe, 12-4
 - USA, 12-2
- swelling of belt, 4-2
- switch-on - normal behavior, list of characteristics, 8-2
- symbols, safety, x
- system error codes, 8-9

T

- tape on cartridges, 8-55
- TCP/ICP host, 1-3
- temperature, operating, 2-3
- thermal control, service test, 8-28
- theta-Z error, 9-14
- third-party ink, 3-11, 8-55
- Token Ring, 1-3
- tools, 6-4
- trailing cable
 - reinstaling, 6-39
 - removing, 6-36
- training, for customer engineers, ii
- troubleshooting, 8-1
 - tips, 8-55
- troubleshooting checklist, print quality, 9-2
- troublesome plotters, 8-55
- TTOE, service test, 8-29
- types, media, 1-4

U

- UART, Glossary-6
- unpacking instructions, 3-2
- Upgrading, Pages, 1-6
- usage, level of, 4-4
- user documentation, part numbers, 11-34
- using, this manual, ii
- using the plotter, 3-10

V

- vertical line straightness, 9-14
- voltage, 2-2

W

warning symbols, x
water, warning, 6-3
weight, plotter, 2-3
window, removing, 6-13
window sensor, 5-6
 removing, 6-20
 service test, 8-51
wipers blades, worn, 8-55
worded error messages, 8-5
world wide web, information, 10-4

X

X motion control, service test, 8-43
X-axis, Glossary-6
X-axis calibration, Glossary-6

Y

Y-axis, Glossary-6
y-tensioner and housing, removing, 6-31,
 6-32
Y-axis encoder, service test, 8-47
Y-axis friction, service test, 8-45
Y-static friction, service test, 8-46