

# Keysight U3606B Multimeter|DC Power Supply

NOTICE: This document contains references to Agilent Technologies. Agilent's former Test and Measurement business has become Keysight Technologies. For more information, go to [www.keysight.com](http://www.keysight.com).



# Notices

© Keysight Technologies 2012, 2014

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

## Manual Part Number

U3606-90068

## Edition

Edition 3, November 28, 2014

Keysight Technologies  
1400 Fountaingrove Parkway  
Santa Rosa, CA 95403

## Warranty

**The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Keysight disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Keysight shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Keysight and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.**

## Technology Licenses

The hardware and or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Restricted Rights Legend

U.S. Government Restricted Rights. Software and technical data rights granted to the federal government include only those rights customarily provided to end user customers. Keysight provides this customary commercial license in Software and technical data pursuant to FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for the Department of Defense, DFARS 252.227-7015 (Technical Data - Commercial Items) and DFARS 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation).

## Safety Notices

### CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

---

### WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

---

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

# Table of Contents

## 1 Introduction to SCPI

Introduction to the SCPI Language	2
SCPI Conventions and Data Formats	3
Command separators	4
Syntax conventions	8
Data types and formats	9
Input message terminators	10
Using device clear	11
SCPI Status System	12
Standard Event register	14
Status Byte register	15
Operation Status register	16
Questionable Status register	17

## 2 CALCulate Subsystem

CALCulate:FUNCTion	20
CALCulate[:STATe]	24
CALCulate:AVERAge:AVERAge?	26
CALCulate:AVERAge:COUNT?	27
CALCulate:AVERAge:MAXimum?	28
CALCulate:AVERAge:MINimum?	29
CALCulate:AVERAge:PRESEnt?	30
CALCulate:DB:REFerence	31
CALCulate:DBM:REFerence	33
CALCulate:HOLD:VARiation	35
CALCulate:HOLD:THReshold	37

CALCulate:LIMit:LOWer	39
CALCulate:LIMit:UPPer	41
CALCulate:NULL:OFFSet	43

### **3 CALibration Subsystem**

CALibration[:ALL]?	48
CALibration:COUNt?	49
CALibration:SECure:CODE	50
CALibration:SECure:STATe	52
CALibration:STRing	54
CALibration:VALue	56
CALibration:LEVel	58
Remote Calibration Procedures	59
Zero offset adjustments	61
Gain adjustments	63
Output adjustments	79

### **4 CONFigure Subsystem**

CONFigure?	86
CONFigure[:VOLTage][:DC]	87
CONFigure[:VOLTage]:AC	90
CONFigure[:VOLTage]:ACDC DCAC	94
CONFigure:CURREnt[:DC]	98
CONFigure:CURREnt:AC	101
CONFigure:CURREnt:ACDC DCAC	104
CONFigure:RESistance	107
CONFigure:CONTInuity	110

CONFigure:LRESistance 112  
CONFigure:CAPacitance 115  
CONFigure:DIODE 118  
CONFigure:FREQuency 120  
CONFigure:PWIDth 123  
CONFigure:DCYClE 125

## **5 INITiate Subsystem**

INITiate[:IMMediate] 130  
INITiate:CONTInuous 132

## **6 LOG Subsystem**

LOG[:STATe] 136  
LOG:DATA:DELeTe 138  
LOG:LOAD {DATA} 139  
LOG:DATA? 140

## **7 MEASure Subsystem**

MEASure[:VOLTage][:DC]? 142  
MEASure[:VOLTage]:AC? 145  
MEASure[:VOLTage]:ACDC|DCAC? 148  
MEASure:CURREnt[:DC]? 151  
MEASure:CURREnt:AC? 154  
MEASure:CURREnt:ACDC|DCAC? 157  
MEASure:RESistance? 160  
MEASure:CONTInuity? 163  
MEASure:LRESistance? 165

MEASure:CAPacitance? 168  
MEASure:DIODE? 171  
MEASure:FREQuency? 172  
MEASure:PWIDth? 174  
MEASure:DCYClE? 176

## **8 MEMory Subsystem**

MEMory:STATe:RECall:AUTO 180

## **9 OUTPut Subsystem**

OUTPut[:STATe] 184

## **10 SENSE Subsystem**

[SENSe:]FUNctIon[:ON] 187  
[SENSe:]VOLTage[:DC]:RANGe[:UPPer] 189  
[SENSe:]VOLTage[:DC]:RANGe:AUTO 191  
[SENSe:]VOLTage[:DC]:RESolution 193  
[SENSe:]VOLTage:AC:RANGe[:UPPer] 195  
[SENSe:]VOLTage:AC:RANGe:AUTO 197  
[SENSe:]VOLTage:AC:RESolution 199  
[SENSe:]VOLTage:ACDC|DCAC:RANGe[:UPPer] 201  
[SENSe:]VOLTage:ACDC|DCAC:RANGe:AUTO 203  
[SENSe:]VOLTage:ACDC|DCAC:RESolution 205  
[SENSe:]CURRent[:DC]:RANGe[:UPPer] 207  
[SENSe:]CURRent[:DC]:RANGe:AUTO 209  
[SENSe:]CURRent[:DC]:RESolution 211  
[SENSe:]CURRent:AC:RANGe[:UPPer] 213



[SENSe:]CURRent:AC:RANGe:AUTO	215
[SENSe:]CURRent:AC:RESolution	217
[SENSe:]CURRent:ACDC DCAC:RANGe[:UPPer]	219
[SENSe:]CURRent:ACDC DCAC:RANGe:AUTO	221
[SENSe:]CURRent:ACDC DCAC:RESolution	223
[SENSe:]RESistance:RANGe[:UPPer]	225
[SENSe:]RESistance:RANGe:AUTO	227
[SENSe:]RESistance:RESolution	229
[SENSe:]CONTInuity:RANGe[:UPPer]	231
[SENSe:]CONTInuity:RANGe:AUTO	233
[SENSe:]LRESistance:RANGe[:UPPer]	235
[SENSe:]LRESistance:RANGe:AUTO	237
[SENSe:]LRESistance:RESolution	239
[SENSe:]LRESistance:COMPensation	241
[SENSe:]CAPacitance:RANGe[:UPPer]	242
[SENSe:]CAPacitance:RANGe:AUTO	244
[SENSe:]FREQuency:VOLTage:RANGe[:UPPer]	246
[SENSe:]FREQuency:VOLTage:RANGe:AUTO	248
[SENSe:]PWIDth:VOLTage:RANGe[:UPPer]	250
[SENSe:]PWIDth:VOLTage:RANGe:AUTO	252
[SENSe:]DCYClE:VOLTage:RANGe[:UPPer]	254
[SENSe:]DCYClE:VOLTage:RANGe:AUTO	256
[SENSe:]FREQuency:CURRent:RANGe[:UPPer]	258
[SENSe:]FREQuency:CURRent:RANGe:AUTO	260
[SENSe:]PWIDth:CURRent:RANGe[:UPPer]	262

[SENSe:]PWIDth:CURRent:RANGe:AUTO 264  
[SENSe:]DCYClE:CURRent:RANGe[:UPPer] 266  
[SENSe:]DCYClE:CURRent:RANGe:AUTO 268

## 11 **SOURce Subsystem**

[SOURce:]SENSe 273  
[SOURce:]SENSe:VOLTagE[:LEVel]? 274  
[SOURce:]SENSe:CURRent[:LEVel]? 275  
SOURce:VOLTagE:RANGe 276  
SOURce:CURRent:RANGe 278  
SOURce:SQUare:RANGe 280  
[SOURce:]VOLTagE:LIMit 281  
[SOURce:]CURRent:LIMit 283  
[SOURce:]VOLTagE:PROTection 285  
[SOURce:]CURRent:PROTection 287  
[SOURce:]VOLTagE[:LEVel][[:IMMediate]][:AMPLitude] 289  
[SOURce:]CURRent[:LEVel][[:IMMediate]][:AMPLitude] 290  
[SOURce:]VOLTagE[:LEVel]:RAMP[:AMPLitude] 291  
[SOURce:]CURRent[:LEVel]:RAMP[:AMPLitude] 293  
[SOURce:]VOLTagE[:LEVel]:RAMP:STEP 295  
[SOURce:]CURRent[:LEVel]:RAMP:STEP 296  
[SOURce:]VOLTagE[:LEVel]:SCAN[:AMPLitude] 297  
[SOURce:]CURRent[:LEVel]:SCAN[:AMPLitude] 299  
[SOURce:]VOLTagE[:LEVel]:SCAN:STEP 301  
[SOURce:]CURRent[:LEVel]:SCAN:STEP 302

[SOURCE:]VOLTage[:LEVel]:SCAN:DWELLing 303  
 [SOURCE:]CURRent[:LEVel]:SCAN:DWELLing 304  
 [SOURCE:]SQUare[:LEVel][:IMMediate]:AMPLitude 305  
 [SOURCE:]SQUare[:LEVel][:IMMediate]:FREQuency 306  
 [SOURCE:]SQUare[:LEVel][:IMMediate]:DCYCLE 307  
 [SOURCE:]SQUare[:LEVel][:IMMediate]:PWIDth 309  
 [SOURCE:]PROTection[:STATe] 312  
 [SOURCE:]SStart:STEP 314

## **12 STATUS Subsystem**

STATus:OPERation:CONDition? 318  
 STATus:OPERation:ENABle 319  
 STATus:OPERation[:EVENT]? 322  
 STATus:PRESet 323  
 STATus:QUEStionable:CONDition? 324  
 STATus:QUEStionable:ENABle 326  
 STATus:QUEStionable[:EVENT]? 328

## **13 SYSTEM Subsystem**

SYSTem:BEEPer[:IMMediate] 332  
 SYSTem:BEEPer:STATe 333  
 SYSTem:DATA:INTerval 335  
 SYSTem:DATA:LOOP 336  
 SYSTem:DEFault 337  
 SYSTem:ERRor? 338  
 SYSTem:LOCAl 340

SYSTem:PRESet 341  
SYSTem:RWLock 342  
SYSTem:SMOoth[:STATe] 343  
SYSTem:SMOoth:FLUCtuation 345  
SYSTem:SMOoth:POINts 347  
SYSTem:VERSion? 349

## **14 TRIGger Subsystem**

TRIGger:SOURce 352

## **15 Root Commands**

ABORt 356  
FETCh? 357  
READ? 359

## **16 IEEE-488.2 Common Commands**

\*CLS 362  
\*ESE 363  
\*ESR? 365  
\*IDN? 366  
\*OPC 367  
\*PSC 368  
\*RCL 369  
\*RST 371  
\*SAV 375  
\*SRE 377  
\*STB? 380

\*TRG 381

\*TST? 382

\*WAI 383

## **17 List of Error Messages**

Error Messages 386

Command errors 387

Execution errors 388

Internal errors 389

Query errors 389

Device specific errors 389

Self-test errors 390

Calibration errors 391

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

# 1

## **Introduction to SCPI**

Introduction to the SCPI Language	2
SCPI Conventions and Data Formats	3
Command separators	4
Syntax conventions	8
Data types and formats	9
Input message terminators	10
Using device clear	11
SCPI Status System	12
Standard Event register	14
Status Byte register	15
Operation Status register	16
Questionable Status register	17

This chapter introduces the remote programming basics of the U3606B. The SCPI programming commands provide the means to control this instrument remotely via a PC.

### **NOTE**

During remote programming, various SCPI commands are stringed together in a single programming module. As the programming module executes each SCPI command sequentially, a 1 millisecond interval between each subsequent SCPI command is recommended to allow the U3606B Multimeter | DC Power Supply sufficient command processing time.

## Introduction to the SCPI Language

SCPI, also known as the Standard Commands for Programmable Instruments, is an ASCII-based instrument command language designed for test and measurement instruments. SCPI commands defines how you communicate with an instrument from a bus controller.

They are based on a hierarchical structure, similar to the file systems used by many bus controllers. This hierarchical structure is also known as a tree system. In this system, associated commands are grouped together under a common node or root, thus forming subsystems. You must specify the complete path to execute the individual lower-level commands. A portion of the `SOURce` subsystem is shown below to illustrate the tree system.

```
SOURce
  :VOLTage
    :LIMit <value>
    :LIMit?
SOURce
  :CURRent
    :RANGe <value>
```

`SOURce` is the root keyword of the command, `VOLTage` and `CURRent` are second-level keywords, and `LIMit` and `RANGe` are third-level keywords. A colon (:) separates a command keyword from a lower-level keyword.

### Mnemonic forms

Each keyword has both a long and a short form. A standard notation is used to differentiate the short form keyword from the long form keyword. The long form of the keyword is shown, with the short form portion shown in uppercase characters, and the rest of the keyword shown in lowercase characters. For example, the short form of `SOURce` is `SOUR`.

For shorter program lines, you can send the abbreviated form. For better program readability, you can send the long form. For example, in the above syntax statement, `SOURce` and `SOUR` are both acceptable forms. You can use a mixture of upper-case and lower-case letters. Therefore, `SOURCE`, `sour`, and `Sour` are all acceptable forms. Other forms, such as `SOU` and `sourc`, are not valid and will generate an error.



## SCPI Conventions and Data Formats

Throughout this document, the following conventions and formats are used in the SCPI command examples. The examples are presented in the following manner:

### Example

This programming snippet illustrates how several commands are used together to instruct the U3606B to make a single DC voltage measurement.

→ CONF 10, 0.0001

*A right directional arrow (→) indicates a command that is sent to the instrument.*

*The abbreviated form of the command is favoured over the long form for shorter program lines. See “Mnemonic forms” on page 2 for more information.*

*Optional keywords are omitted in the command syntax. See “Square brackets” on page 8 for more information.*

→ TRIG:SOUR BUS

→ INIT

*The particular command or query in question is highlighted in the programming snippet.*

*This example illustrates how the “INIT” command is used within a larger programming module.*

→ \*TRG

*Commands beginning with an “\*” indicates a IEEE-488.2 common command. See “Using “\*” commands” on page 7 for more information.*

→ FETC?

*A command ending with a “?” indicates a query that is sent to the instrument. See “Using “?” commands” on page 6 for more information.*

← 9.985308E+00

*A left directional arrow (←) indicates a return message from the instrument.*

## Command separators

### Using a colon

A colon ( : ) is used to separate a command keyword from a lower-level keyword. When a colon is inserted between two command mnemonics, the colon moves the path down one level in the present path (for the specified root-level command) of the command tree. You must separate command mnemonics from each other using a colon as shown below:

```
→ MEM:STAT:REC:AUTO ON
```

An error is generated if you do not use the colon in your command string.

```
→ MEM STAT REC AUTO ON
```

```
→ SYST:ERR?
```

Typical response:

```
← -113, "Undefined header"
```

When a colon is the first character of a command keyword, it indicates that the next command mnemonic is a root-level command.

```
→ :CALC:FUNC NULL
```

This indicates that the CALC command mnemonic is a root-level command. However, you can omit the leading colon if the command is the first of a new program line.

```
→ CALC:FUNC NULL
```

### Using a semicolon

Use a semicolon ( ; ) to separate two commands within the same command string. For example, sending the following command string:

```
→ :SOUR:VOLT:RANG 5;:SOUR:VOLT:LIM 8
```

is the same as sending the following two commands.

```
→ SOUR:VOLT:RANG 5
```

```
→ SOUR:VOLT:LIM 8
```

The semicolon does not change the present path specified. For example, the following two statements are equivalent.

```
→ :SOUR:VOLT:RANG 5;:SOUR:VOLT:LIM 8
```

```
→ :SOUR:VOLT:RANG 5;LIM 8
```

Note that in the first statement, the first colon is optional but the fourth is compulsory.

### Using a comma

If a command requires more than one parameter, you must separate adjacent parameters using a comma ( , ).

```
CONFigure[:VOLTage]:AC  
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

The angle brackets are not sent with the command string. See “Syntax conventions” on page 8 for more information.

```
→ CONF:AC 10, 0.001
```

## 1 Introduction to SCPI

### SCPI Conventions and Data Formats

#### Using whitespace

You must use whitespace characters, [tab], or [space] to separate a parameter from a command keyword. Whitespace characters are generally ignored only in parameter lists. You may omit the whitespace characters only in parameter lists.

For example, sending the following command:

```
→ CONF:AC 10,0.01
```

is the same as sending this command:

```
→ CONF:AC 10, 0.01
```

However, an error is generated if you do not use a whitespace character to separate a parameter from a command keyword in your command string.

```
→ CONF:AC10,0.01
```

```
→ SYST:ERR?
```

Typical response:

```
← -113, "Undefined header"
```

#### Using “?” commands

The bus controller may send commands at any time, but a SCPI-equipped instrument may only send responses when specifically instructed to do so. Only query commands (commands that end with a “?”) will instruct the instrument to send a response message. Queries return either measured values or internal instrument settings.

For example, the following command sets the U3606B to measure AC current within a range of 100 mA.

```
→ CONF:CURR:AC 0.1
```

You can then query the present measurement configuration by sending:

```
→ CONF?
```

Typical response:

```
← CURR:AC +1.000000E-01,+1000000E-05
```

**NOTE**

If you send two query commands without reading the response from the first, then attempt to read the second response, you may receive some data from the first response followed by the complete second response. To avoid this, do not send a query command without reading the response. When you cannot avoid this situation, send a device clear before sending the second query command. See “Using device clear” on page 11 for more information.

---

**Using “\*” commands**

Commands starting with a “\*” are called common commands. They are required to perform the identical function for all instruments that are compliant with the IEEE-488.2 interface standard. Common commands always begin with an asterisk (\*), are three characters in length, and may include one or more parameters. The “\*” commands are used to control reset, self-test, and status operations in the U3606B.

→ \*RST; \*CLS

See [Chapter 16, “IEEE-488.2 Common Commands,”](#) starting on page 361 for a complete list of all common commands supported.

## Syntax conventions

The following SCPI conventions are used throughout this document.

### Braces

Braces “{ }” enclose the parameter choices for a given command string. For example, the syntax statement below shows that you have to choose a function (either NULL, DB, DBM, AVERAGE, LIMIT, or HOLD) for the calculate operation.

```
CALCulate:FUNCTION {NULL|DB|DBM|AVERAGE|LIMIT|HOLD}
```

The braces are not sent with the command string. A vertical bar “|” separates multiple parameter choices for a given command string.

```
→ CALC:FUNC AVER
```

### Triangle brackets

Triangle brackets “< >” indicate that you must specify a value for the enclosed parameter. For example, the syntax statement below shows the <value> parameter enclosed in triangle brackets:

```
[SOURCE:]VOLTage[:LEVEL][:IMMEDIATE][:AMPLITUDE] <value>
```

The brackets are not sent with the command string. You must specify a value for the parameter:

```
→ VOLT 10
```

### Square brackets

Some commands and parameters are enclosed in square brackets “[ ]”. This indicates that the command or parameter is optional and can be omitted. For example, the syntax statement below shows that the STATE second-level keyword is optional and can be omitted.

```
OUTPut[:STATE] {0|1|OFF|ON}
```

The brackets are not sent with the command string.

```
→ OUTP ON
```

For parameters enclosed in square brackets, if you do not specify a value for the optional parameter, the instrument chooses a default value.

## Data types and formats

The SCPI language defines different data formats for use in program messages and response messages. Instruments are flexible listeners and can accept commands and parameters in various formats. However, SCPI-equipped instruments are precise talkers. This means that SCPI-equipped instruments always respond to a particular query in a predefined, rigid format.

### Numeric

Parameters that accepts all commonly used decimal representations of numbers including optional signs, and decimal points, scientific notations ( $3e2 = 3 \times 10^2$ ,  $5.43e-3 = 5.43 \times 10^{-3}$ , or  $10e6 = 10 \times 10^6$ ), and engineering notations (M, k, m,  $\mu$ , n) Special values for numeric parameters such as AUTO, MIN, MAX, and DEF are also accepted. If only specific numeric values are accepted, the instrument will automatically round the input numeric parameters. As an example, the following command requires a numeric parameter for the amplitude value:

```
[SOURCE:]VOLTage[:LEVEL][:IMMEDIATE][:AMPLITUDE] <value>
```

### Discrete

Parameters (used in program settings) that have a limited number of values such as IMMEDIATE and BUS. Some of these parameters have a short form and a long form just like command keywords. You can mix upper-case and lower-case letters. Query responses will always return the abbreviated form in all upper-case letters. As an example, the following command require a discrete parameter for the trigger source.

```
TRIGger:SOURce {IMMEDIATE|BUS}
```

### Boolean

Parameters that represent a single binary condition that is either true or false. For a false condition, the U3606B will accept OFF or 0. For a true condition, the U3606B will accept ON or 1. When you query a boolean setting, the U3606B will always return 0 or 1. As an example, the following command require a boolean parameter for the instrument output state:

```
OUTPut[:STATe] {0|OFF|1|ON}
```

## 1 Introduction to SCPI

### SCPI Conventions and Data Formats

#### String

Parameters that contain virtually any set of ASCII characters. A string must begin and end with matching quotes; either with a single quote or a double quote. You can include the quote delimiter as part of the string by typing it twice without any characters in between.

```
CALibration:STRing "<string>"
```

#### Input message terminators

Program messages sent to a SCPI-equipped instrument must terminate with a <newline> character. The IEEE.488 EOI (end or identify) signal is interpreted as a <newline> character and may also be used to terminate a message in place of the <newline> character. A <carriage return> followed by a <newline> is also accepted. Many programming languages allow you to specify a message terminator character or EOI state to be automatically sent with each bus transaction. Message termination always sets the current path back to the root-level.



## Using device clear

Device clear is an IEEE-488 low-level bus message that you can use to return the instrument to a responsive state (for example, during a lengthy query).

Different programming languages and IEEE-488 interface cards provide access to this capability through their own unique commands. The status registers, the error queue, and all configuration states are left unchanged when a device clear message is received.

Device clear performs the following actions:

- 1 If a measurement is running, it is aborted.
- 2 The instrument returns to the trigger “idle” state.
- 3 The instrument's input and output buffers are cleared.
- 4 The instrument is prepared to accept a new command string.

An overlapped command, if any, will be terminated with no “Operation Complete” indication.

### NOTE

It is recommended that you allow for a two-second wait following a device clear to enable the instrument to process the clear operation.

---

## SCPI Status System

The status system records various instrument conditions and states in several register groups. Each register group is made up of several low-level registers called the Condition register, Event register, and Enable register which control the action of specific bits within the register group.

- A Condition register continuously monitors the state of the instrument. The bits in the condition register are updated in real-time and the bits are not latched or buffered. This is a read-only register and the bits are not cleared when you read the register.
- An Event register latches the various events from the changes in the condition register. There is no buffering in this register; while an event bit is set, subsequent events corresponding to that bit are ignored. This is a read-only register. Once a bit is set, it remains set until cleared by a query or clear status (\*CLS) command.
- An Enable register defines which bits in the event register will be reported to the Status Byte register group. You can write to or read from an enable register.

The relationship between various registers in the U3606B SCPI status system is shown in Figure 1-1.

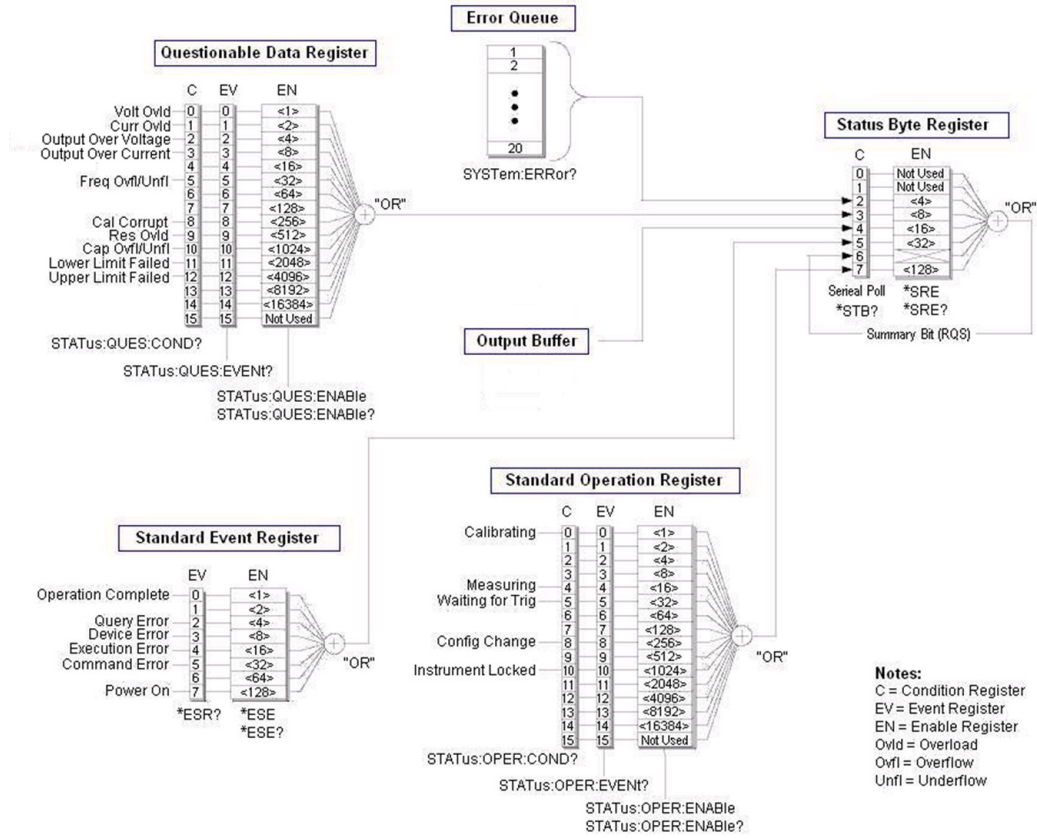


Figure 1-1 Status system diagram

## Standard Event register

The Standard Event register group reports the following types of instrument events: power-on detected, command syntax errors, command execution errors, device errors (self-test or calibration), or query errors. All of these conditions can be reported in the Standard Event summary bit through the enable register. To set the enable register mask, key in a decimal value to the register using the event status enable (\*ESE) command.

### Bit definitions: Standard Event register

Bit number	Decimal value	Definition
0 Operation complete	1	All commands prior to and including *OPC have been executed.
1 Not used	Not used	"0" is returned.
2 Query error	4	A query error occurred (an error in the -400 range has been generated).
3 Device error	8	A self-test, calibration, or other device-specific error has occurred (an error in the -300 range or any positive error has been generated).
4 Execution error	16	An execution error occurred.
5 Command error	32	A command syntax error occurred.
6 Not used	Not used	"0" is returned.
7 Power-on	128	Power has been turned off and on since the last time the event register was read or cleared.

The event register in the Standard Event is cleared when:

- you execute the clear status (\*CLS) command, or
- you read the event register using the event status register (\*ESR?) command.

The Standard Event enable register is cleared when you send the \*ESE 0 command.

#### NOTE

When a command, execution, device, or query error have occurred, a related error message will be generated. For a complete listing of all error messages, refer to Chapter 17, "List of Error Messages," starting on page 385.

## Status Byte register

The Status Byte register group reports the conditions from the other status registers. Clearing an event register from one of the other registers will clear the corresponding bits in the Status Byte condition register. Data that is waiting in the U3606B output buffer is immediately reported on the “Message Available” bit (bit 4).

### Bit definitions: Status Byte register

Bit number	Decimal value	Definition
0 Not used	Not used	“0” is returned.
1 Not used	Not used	“0” is returned.
2 Error queue	4	One or more errors have been stored in the Error Queue. Use the <code>SYSTEM:ERROR?</code> query to read and delete errors.
3 Questionable Data summary	8	One or more bits are set in the Questionable Data register. Bits must be enabled using the <code>STATUS:QUESTIONABLE:ENABLE</code> command.
4 Message available	16	Data is available in the instrument output buffer.
5 Standard Event summary	32	One or more bits are set in the Standard Event register. Bits must be enabled using the <code>*ESE</code> command.
6 Master Status summary	64	One or more bits are set in the Status Byte Register and may generate a Request for Service (RQS). Bits must be enabled using the <code>*SRE</code> command.
7 Not used	Not used	“0” is returned.

The Status Byte condition register will be cleared when:

- you execute the clear status (`*CLS`) command, or
- you read the event register from one of the other register groups. (Only the corresponding bits are cleared in the condition register.)

The Status Byte enable register is cleared when you execute the `*SRE 0` command.

#### NOTE

Refer to [Chapter 16, “IEEE-488.2 Common Commands,”](#) starting on page 361 for more details of the common commands mentioned above.

## Operation Status register

The operation status group monitors conditions which are a part of the operation of the U3606B as a whole.

### Bit definitions: Standard Operation register

Bit number	Decimal value	Definition
0 Calibration in progress	1	Instrument is performing a calibration.
1 Not used	Not used	"0" is returned.
2 Not used	Not used	"0" is returned.
3 Not used	Not used	"0" is returned.
4 Measuring	16	Instrument is initiated, and is making, or about to make a measurement.
5 Waiting for trigger	32	Instrument is waiting for a trigger.
6 Not used	Not used	"0" is returned.
7 Not used	Not used	"0" is returned.
8 Configuration change	256	Instrument configuration has been changed, either from the front panel or from the remote interface.
9 Not used	Not used	"0" is returned.
10 Instrument locked	1024	If a remote interface has a lock, this bit will be set. When a remote interface releases the lock, this bit will be cleared.
11 Not used	Not used	"0" is returned.
12 Not used	Not used	"0" is returned.
13 Not used	Not used	"0" is returned.
14 Not used	Not used	"0" is returned.
15 Not used	Not used	"0" is returned.

#### NOTE

Refer to [Chapter 12, "STATus Subsystem," starting on page 317](#) for more details of the Operation Status register.

## Questionable Status register

The questionable status register provides information about the quality of the U3606B measurement results. Any or all of these conditions can be reported in the questionable data summary bit through the enable register. You must write a value using the `STATus:QUESTionable:ENABle` command to set the enable register mask.

### Bit definitions: Questionable Data register

Bit number	Decimal value	Definition
0 Voltage overload	1	Range overload on DC or AC voltage.
1 Current overload	2	Range overload on DC or AC current.
2 Output over voltage	4	Voltage output over protection limit.
3 Output over current	8	Current output over protection limit.
4 Not used	Not used	Instrument is initiated, and is making, or about to make a measurement.
5 Frequency overload/underflow	32	Range overload or underflow on frequency.
6 Not used	Not used	"0" is returned.
7 Not used	Not used	"0" is returned.
8 Calibration corrupt	256	At least one calibration constant is corrupt.
9 Resistance overload	512	Range overload on resistance.
10 Capacitance overload/underflow	1024	Range overload or underflow on capacitance.
11 Lower limit failed	2048	Reading is less than lower limit in limit test.
12 Upper limit failed	4096	Reading is greater than upper limit in limit test.
13 Not used	Not used	"0" is returned.
14 Not used	Not used	"0" is returned.
15 Not used	Not used	"0" is returned.

#### NOTE

Refer to [Chapter 12, "STATus Subsystem," starting on page 317](#) for more details of the Questionable Status register.

**1 Introduction to SCPI**  
SCPI Status System

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**



## **2 CALCulate Subsystem**

CALCulate:FUNction	20
CALCulate[:STATe]	23
CALCulate:AVERage:AVERage?	25
CALCulate:AVERage:COUNT?	26
CALCulate:AVERage:MAXimum?	27
CALCulate:AVERage:MINimum?	28
CALCulate:AVERage:PRESent?	29
CALCulate:DB:REFerence	30
CALCulate:DBM:REFerence	32
CALCulate:HOLD:VARiation	34
CALCulate:HOLD:THReshold	36
CALCulate:LIMit:LOWer	38
CALCulate:LIMit:UPPer	40
CALCulate:NULL:OFFSet	42

This chapter describes the CALCulate commands used to program the U3606B over a remote interface. The U3606B is capable of performing several mathematical, statistical, and limit calculation functions using the CALCulate commands.

## CALCulate:FUNction

### Syntax

CALCulate:FUNction {AVERAge|DB|DBM|HOLD|LIMit|NULL}

This command selects the calculation function to be used.

- **AVERAge:** Returns the mathematical average of all readings taken since averaging was enabled. Use CALCulate:AVERAge:AVERAge?, CALCulate:AVERAge:MAXimum?, CALCulate:AVERAge:MINimum?, CALCulate:AVERAge:COUNT? and CALCulate:AVERAge:PRESent? to return the average, maximum, minimum, count, and last reading taken respectively, since averaging was enabled.
- **DB:** When enabled, the dB operation computes the dBm value for the next reading, stores the dBm result into the dB Ref register and immediately produces the following calculation. The first computed reading is always precisely 00.000 dB.

$$\text{Result} = 10 \times \text{Log}_{10} [\text{Reading}^2 / R_{\text{REF}} / 0.001 \text{ W}] - \text{dB Ref}$$

Set a reference value in the dB reference register of the instrument with the CALCulate:DB:REFerence command.

- **DBM equation:**  $\text{Result} = 10 \times \text{Log}_{10} [\text{Reading}^2 / R_{\text{REF}} / 0.001 \text{ W}]$   
Set the reference resistance ( $R_{\text{REF}}$ ) with the CALCulate:DBM:REFerence command.
- **HOLD:** The reading hold feature allows you to capture and hold a stable reading (refer to the *U3606B Service Guide* for details).  
Set the variation and threshold values with the CALCulate:HOLD:VARIation and CALCulate:HOLD:THReshold commands.
- **LIMit:** Compares each reading against upper and lower limits. Limit failures are posted in the Questionable Status register.  
Set the upper and lower limits with CALCulate:LIMit:UPPer and CALCulate:LIMit:LOWer, respectively. Check for limit failures with the STATUS:QUEStionable[:EVENT]? command.
- **NULL equation:**  $\text{Result} = \text{Reading} - \text{Offset}$   
Set the Offset using the CALCulate:NULL:OFFSet command

CALCulate:FUNCTion?

This query returns a string value that represents the currently selected calculation function: AVER, DB, DBM, HOLD, LIM, or NULL

**Parameter**

Item	Type	Description	Default value
function	Discrete	AVERage DB DBM HOLD LIMit NULL	NULL

**Remarks**

- The CALCulate subsystem must be enabled using the CALCulate:STATe command.
- All calculation functions are not allowed for diode and continuity tests.
- All calculation functions can be combined with each other with the exception of the following restrictions:
  - If DB and DBM are selected, all previously set calculation functions will be disabled.
  - If LIMit is selected, previously set AVERage and HOLD functions will be disabled.
  - If AVERage is selected, previously set LIMit and HOLD functions will be disabled.
  - If HOLD is selected, previously set LIMit and AVERage functions will be disabled.
  - If NULL is selected, previously set DBM and DB functions will be disabled.
- The instrument clears the calculation function selection, reverting to the default after a Factory Reset (\*RST command) or an Instrument Preset (SYSTEM:PRESet command).

## 2 CALCulate Subsystem

### CALCulate:FUNction

#### Example

→ CALC:STAT ON

*This command sets the calculation state to ON.*

→ CALC:FUNC DBM

*This command sets the function to be calculated to DBM.*

→ CALC:DBM:REF 300

*This command sets the dBm reference resistance to 300 ohms.*

→ CALC:FUNC?

*This query returns the currently selected calculation function.*

← DBM

#### See also

[“CALCulate\[:STATe\]” on page 23](#)

[“STATus:QUESTIONable\[:EVENT\]?” on page 328](#)

[“SYSTEM:PRESet” on page 341](#)

[“\\*RST” on page 371](#)

## CALCulate[:STATe]

### Syntax

CALCulate[:STATe] {0|1|OFF|ON}

This command turns the CALCulate subsystem, and thus the selected calculation function, on or off.

CALCulate[:STATe]?

This query returns a boolean value that represents the current calculation state: 0 or 1

### Parameter

Item	Type	Range of values	Default value
state	Boolean	0 1 OFF ON	0

### Remarks

- This is an adjunct command to the CALCulate:FUNCTION command. The calculation function to be used is selected using the CALCulate:FUNCTION command.
- The CALCulate:STATe is set to OFF when the measurement function is changed.
- When the CALCulate:STATe ON command is sent, the math registers for null, averaging, and dB reference value are cleared. This also occurs when the CALCulate:FUNCTION command is sent with the CALCulate:STATe previously set to ON. The dBm reference resistance value is not cleared in either case.
- The instrument resets the calculation state to off after a Factory Reset (\*RST command), an Instrument Preset (SYSTEM:PRESet command), or a function change.

## 2 CALCulate Subsystem

CALCulate[:STATe]

### Example

→ CALC ON

*This command sets the calculation state to ON.*

→ CALC?

*This query returns the current calculation state.*

← 1

### See also

[“CALCulate:FUNCTion” on page 20](#)

[“SYSTEM:PRESet” on page 341](#)

[“\\*RST” on page 371](#)

## CALCulate:AVERage:AVERage?

### Syntax

CALCulate:AVERage:AVERage?

This query returns a numeric value that represents the mathematical average (mean) of all readings taken since averaging was enabled.

### Remarks

- This command returns the average of the readings taken, or “0” if there is no data is available.
- The instrument clears the stored average data when averaging is enabled, when the CALCulate:FUNCTION command is sent while CALCulate:STATe is set to ON, after a power-on cycle, after a Factory Reset (\*RST command), an Instrument Preset (SYSTEM:PRESet command), or after a function change.

### Example

```
→ CALC:AVER:AVER?
```

*This query returns the average of the readings taken.*

```
← +1.007850E+01
```

### See also

“CALCulate:FUNCTION” on page 20

“CALCulate[:STATe]” on page 23

“SYSTEM:PRESet” on page 341

“SYSTEM:SMOoth[:STATe]” on page 343

“\*RST” on page 371

## CALCulate:AVERage:COUNT?

### Syntax

CALCulate:AVERage:COUNT?

This query returns a numeric value that represent the number of readings taken since averaging was enabled.

### Remarks

- This command returns the count since averaging was enabled, or “0” if there is no data is available.
- The instrument clears the stored average data when averaging is enabled, when the CALCulate:FUNctIon command is sent while CALCulate:STATe is set to ON, after a power-on cycle, after a Factory Reset (\*RST command), an Instrument Preset (SYSTem:PRESet command), or after a function change.

### Example

```
→ CALC:AVER:COUN?
```

*This query returns the number of readings taken since averaging was enabled.*

```
← +1.345000E+03
```

### See also

“CALCulate:FUNctIon” on page 20

“CALCulate[:STATe]” on page 23

“SYSTem:PRESet” on page 341

“\*RST” on page 371



## CALCulate:AVERage:MAXimum?

### Syntax

CALCulate:AVERage:MAXimum?

This query returns a numeric value that represents the highest value recorded since averaging was enabled.

### Remarks

- This command returns the maximum value found, or “0” if there is no data is available.
- The instrument clears the stored average data when averaging is enabled, when the CALCulate:FUNCTION command is sent while CALCulate:STATe is set to ON, after a power-on cycle, after a Factory Reset (\*RST command), an Instrument Preset (SYSTEM:PRESet command), or after a function change.

### Example

```
→ CALC:AVER:MAX?
```

*This query returns the maximum value found.*

```
← +1.007900E+01
```

### See also

“CALCulate:FUNCTION” on page 20

“CALCulate[:STATe]” on page 23

“SYSTEM:PRESet” on page 341

“\*RST” on page 371

## CALCulate:AVERage:MINimum?

### Syntax

CALCulate:AVERage:MINimum?

This query returns a numeric value that represents the lowest value recorded since averaging was enabled.

### Remarks

- This command returns the minimum value found, or “0” if there is no data is available.
- The instrument clears the stored average data when averaging is enabled, when the CALCulate:FUNCTION command is sent while CALCulate:STATe is set to ON, after a power-on cycle, after a Factory Reset (\*RST command), an Instrument Preset (SYSTEM:PRESet command), or after a function change.

### Example

```
→ CALC:AVER:MIN?
```

*This query returns the minimum value found.*

```
← +1.007150E+01
```

### See also

“CALCulate:FUNCTION” on page 20

“CALCulate[:STATe]” on page 23

“SYSTEM:PRESet” on page 341

“\*RST” on page 371

## CALCulate:AVERage:PRESent?

### Syntax

CALCulate:AVERage:PRESent?

This query returns a numeric value that represents the last value recorded since averaging was enabled.

### Remarks

- This command returns the present reading taken, or “0” if there is no data is available.
- The instrument clears the stored average data when averaging is enabled, when the CALCulate:FUNCTION command is sent while CALCulate:STATe is set to ON, after a power-on cycle, after a Factory Reset (\*RST command), an Instrument Preset (SYSTEM:PRESet command), or after a function change.

### Example

```
→ CALC:AVER:PRES?
```

*This query returns the last recorded value.*

```
← +1.007870E+01
```

### See also

“CALCulate:FUNCTION” on page 20

“CALCulate[:STATe]” on page 23

“SYSTEM:PRESet” on page 341

“\*RST” on page 371

## CALCulate:DB:REFerence

### Syntax

CALCulate:DB:REFerence <value>

This command stores a reference value in the dB reference register of the instrument, which is used for the dB function in the CALCulate:FUNCTion command.

### NOTE

You must select the dB math function (CALCulate:FUNCTion DB) and turn on math operations (CALCulate:STATe ON) before writing to the dB reference register.

CALCulate:DB:REFerence?

This query returns a numeric value that represents the dB reference value.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	-120 dBm to 120 dBm	0 dBm

### Remarks

The instrument clears the dB reference value to the default after a Factory Reset (\*RST command), an Instrument Preset (SYSTem:PRESet command), or after a math or measurement function change.

### Example

```
→ CALC:DB:REF -10.0
```

*This command sets the dB reference value to -10.0 dBm.*

```
→ CALC:DB:REF?
```

*This query returns the dB reference value.*

```
← -1.000000E+01
```

### See also

[“CALCulate:FUNCTION” on page 20](#)

[“CALCulate\[:STATe\]” on page 23](#)

[“SYSTEM:PRESet” on page 341](#)

[“\\*RST” on page 371](#)

## CALCulate:DBM:REference

### Syntax

CALCulate:DBM:REference <value>

This command selects the dBm reference resistance. This reference value affects both the dBm and dB functions in the CALCulate:FUNCTION command.

CALCulate:DBM:REference?

This query returns a numeric value that represents the dBm reference resistance.

### Parameter

Item	Type	Range of values	Default value
value	Numeric <sup>[1]</sup>	1 ohm to 9999 ohms	600 ohms

<sup>[1]</sup> Integers only. All decimal parts are truncated. For example, 60.7 ohms is truncated to 60 ohms.

### Remarks

- The dBm reference resistance does not reset when calculation functions are enabled by the CALCulate[:STATe] command, nor when the CALCulate:FUNCTION command is sent with CALCulate:STATe set to ON.
- The dBm reference resistance value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

→ CALC:DBM:REF 300

*This command sets the dBm reference resistance to 300 ohms.*

→ CALC:DBM:REF?

*This query returns the dBm reference resistance.*

← +3.000000E+02

### See also

[“CALCulate:FUNCTION” on page 20](#)

[“CALCulate\[:STATe\]” on page 23](#)

[“SYSTEM:PRESet” on page 341](#)

[“\\*RST” on page 371](#)

## CALCulate:HOLD:VARiation

### Syntax

CALCulate:HOLD:VARiation <value>

This command sets the variation of the hold function. When the variation is set to 0, data hold is enabled. Otherwise, refresh hold is enabled.

CALCulate:HOLD:VARiation?

This command returns a numeric value that represents the variation of the hold function.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	0% to 100%	10%

### Remarks

- The hold variation does not reset when calculation functions are enabled by the CALCulate[:STATe] command, nor when the CALCulate:FUNCTion command is sent with CALCulate:STATe set to ON.
- The hold variation value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

```
→ CALC:HOLD:VAR 5 This command sets the hold variation to 5%.
→ CALC:HOLD:VAR? This query returns the hold variation.
← +5.000000E+00
```



**See also**

“CALCulate:FUNction” on page 20

“CALCulate[:STATe]” on page 23

“CALCulate:HOLD:THReshold” on page 36

“SYSTem:PRESet” on page 341

“\*RST” on page 371

## CALCulate:HOLD:THReshold

### Syntax

CALCulate:HOLD:THReshold <value>

This command sets the threshold of the hold function.

CALCulate:HOLD:THReshold?

This query returns a numeric value that represents the threshold of the hold function.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	0.0% to 9.9%	0.5%

### Remarks

- The hold threshold does not reset when calculation functions are enabled by the CALCulate[:STATe] command, nor when the CALCulate:FUNCTion command is sent with CALCulate:STATe set to ON.
- The hold threshold value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTem:PRESet command), or function change.

### Example

```
→ CALC:HOLD:THR 1 This command sets the hold threshold to 1%.
→ CALC:HOLD:THR? This query returns the hold threshold.
← +1.000000E+00
```

**See also**

“CALCulate:FUNction” on page 20

“CALCulate[:STATe]” on page 23

“CALCulate:HOLD:VARiation” on page 34

“SYSTem:PRESet” on page 341

“\*RST” on page 371

## CALCulate:LIMit:LOWer

### Syntax

CALCulate:LIMit:LOWer <value>

This command sets the lower limit for the present measurement function (used in limit testing).

CALCulate:LIMit:LOWer?

This query returns a numeric value that represents the lower limit.

### NOTE

You must select the limit math function (CALCulate:FUNCTION LIMIT) and turn on math operations (CALCulate:STATE ON) before you set a limit value.

### Parameter

Item	Type	Range of values			Default value
value	Numeric	<b>Function selected</b>	<b>Min</b>	<b>Max</b>	0
		VOLT:DC AC ACDC DCAC	-1200 V	1200 V	
		CURR:DC AC ACDC DCAC	-12 A	12 A	
		RES	-120e6 ohms	120e6 ohms	
		LRES	-1200 ohm	1200 ohms	
		CAP	-12e-3 F	12e-3 F	
		FREQ	-1.99999e6 Hz	1.99999e6 Hz	
		PWID	-1999.99e-3 s	1999.99e-3 s	
		DCYC	-100%	100%	

## Remarks

- You can assign a lower limit, an upper limit, or both. The lower limit must always be less than or equal to the upper limit, even if you are using only one of the limits.
- Limit crossing: If a reading is less than the specified lower limit, bit 11 (Lower limit failed) is set in the Questionable Data register, which results in an SRQ if enabled. You can use the `STATus:QUESTionable[:EVENT]?` command to read the event register. See [Chapter 12, “STATus Subsystem,” starting on page 317](#) for further information.
- Every measuring function has its own lower/upper limit registers. The values are stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (`*RST` command), Instrument Preset (`SYSTem:PRESet` command), or function change.

## Example

```
→ CALC:LIM:LOW -0.25           This command sets the lower limit to -0.25.
→ CALC:LIM:LOW?               This query returns the lower limit setting.
← -2.500000E-01
```

## See also

[“CALCulate:FUNCTION” on page 20](#)

[“CALCulate\[:STATe\]” on page 23](#)

[“CALCulate:LIMit:UPPer” on page 40](#)

[“STATus:QUESTionable\[:EVENT\]?” on page 328](#)

[“SYSTem:PRESet” on page 341](#)

[“\\*RST” on page 371](#)

## CALCulate:LIMit:UPPer

### Syntax

CALCulate:LIMit:UPPer <value>

This command sets the upper limit for the present measurement function (used in limit testing).

CALCulate:LIMit:UPPer?

This query returns a numeric value that represents the upper limit.

### NOTE

You must select the limit math function (CALCulate:FUNCTION LIMIT) and turn on math operations (CALCulate:STATE ON) before you set a limit value.

### Parameter

Item	Type	Range of values			Default value
value	Numeric	<b>Function selected</b>	<b>Min</b>	<b>Max</b>	0
		VOLT:DC AC ACDC DCAC	-1200 V	1200 V	
		CURR:DC AC ACDC DCAC	-12 A	12 A	
		RES	-120e6 ohms	120e6 ohms	
		LRES	-1200 ohm	1200 ohms	
		CAP	-12e-3 F	12e-3 F	
		FREQ	-1.99999e6 Hz	1.99999e6 Hz	
		PWID	-1999.99e-3 s	1999.99e-3 s	
		DCYC	-100%	100%	

## Remarks

- You can assign a lower limit, an upper limit, or both. The lower limit must always be less than or equal to the upper limit, even if you are using only one of the limits.
- Limit crossing: If a reading is less than the specified lower limit, bit 12 (Upper limit failed) is set in the Questionable Data register, which results in an SRQ if enabled. You can use the `STATus:QUESTionable[:EVENT]?` command to read the event register. See [Chapter 12, “STATus Subsystem,” starting on page 317](#) for further information.
- Every measuring function has its own lower/upper limit registers. The values are stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (`*RST` command), Instrument Preset (`SYSTem:PRESet` command), or function change.

## Example

```
→ CALC:LIM:LOW 10.25           This command sets the upper limit to 10.25.
→ CALC:LIM:LOW?               This query returns the upper limit setting.
← -2.500000E-01
```

## See also

- “CALCulate:FUNCTION” on page 20
- “CALCulate[:STATe]” on page 23
- “CALCulate:LIMit:LOWer” on page 38
- “STATus:QUESTionable[:EVENT]?” on page 328
- “SYSTem:PRESet” on page 341
- “\*RST” on page 371

## CALCulate:NULL:OFFSet

### Syntax

CALCulate:NULL:OFFSet <value>

This command stores an offset value in the Null register of the instrument.

CALCulate:NULL:OFFSet?

This query returns a numeric value that represents the offset value of the Null calculation.

### NOTE

You must select the null math function (CALCulate:FUNCTION NULL) and turn on math operations (CALCulate:STATE ON) before you set an offset value.

### Parameter

Item	Type	Range of values			Default value
value	Numeric	<b>Function selected</b>	<b>Min</b>	<b>Max</b>	0
		VOLT:DC AC ACDC DCAC	-1200 V	1200 V	
		CURR:DC AC ACDC DCAC	-12 A	12 A	
		RES	-120e6 ohms	120e6 ohms	
		LRES	-1200 ohm	1200 ohms	
		CAP	-12e-3 F	12e-3 F	
		FREQ	-1.99999e6 Hz	1.99999e6 Hz	
		PWID	-1999.99e-3 s	1999.99e-3 s	
DCYC	-100%	100%			



## Remarks

The null offset value will reset after a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

## Example

→ CALC:NULL:OFFS 2.25 *This command sets the null value to 2.25.*

→ CALC:NULL:OFFS? *This query returns the null value.*

← 2.250000E+00

## See also

[“CALCulate:FUNCTION” on page 20](#)

[“CALCulate\[:STATe\]” on page 23](#)

[“SYSTEM:PRESet” on page 341](#)

[“\\*RST” on page 371](#)

**2   CALCulate Subsystem**  
CALCulate:NULL:OFFSet

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

## **3 CALibration Subsystem**

CALibration[:ALL]? 48
CALibration:COUNT? 49
CALibration:SECure:CODE 50
CALibration:SECure:STATe 51
CALibration:STRing 53
CALibration:VALue 55
CALibration:LEVel 56
Remote Calibration Procedures 57
Zero offset adjustments 58
Gain adjustments 60
Output adjustments 76

This chapter describes the CALibration commands used to program the U3606B over a remote interface. The CALibration commands are used to calibrate the U3606B.

### **CAUTION**

For a more detailed discussion of the calibration procedures, see the U3606B User's and Service Guide. Please refer to the U3606B User's and Service Guide before attempting to calibrate the instrument. Improper use of the CALibration commands can adversely affect the accuracy and reliability of the instrument. A recommended sequence of calibration commands is described in "Remote Calibration Procedures" on page 57.

---

## CALibration[:ALL]?

### Syntax

```
CALibration[:ALL]?
```

This query performs a calibration of the multimeter using the specified calibration value (CALibration:VALue command) and returns a boolean value that represents the calibration status: “+0” (calibration passed) or “+1” (calibration failed).

### NOTE

Before you can calibrate the instrument, you must unsecure it by entering the correct security code. See “CALibration:SECure:CODE” on page 50 for more information on unsecuring the instrument for calibration.

### Remarks

- If a calibration fails, “+1” is returned and an error is stored in the error queue. For a complete listing of the error messages related to calibration failures, see Chapter 17, “List of Error Messages,” starting on page 385.
- This command increments the calibration count on the U3606B (see CALibration:COUNt? command).

### Example

```
→ CAL?
```

*This command performs a calibration and returns a pass/fail indication.*

```
← +0
```

### See also

“CALibration:SECure:CODE” on page 50

“CALibration:VALue” on page 55

## CALibration:COUNT?

### Syntax

```
CALibration:COUNT?
```

This query returns a numeric value that represents the calibration count indicating how many calibrations have been performed in the instrument. Note that your instrument was calibrated before it left the factory. When you receive your instrument, be sure to read the count to determine the initial values.

### Remarks

- The calibration counts increment up to a maximum of 32767 after which they roll over to “0”. Since the value increments by one for each calibration point, a complete calibration may increase the value by many counts.
- The calibration count is incremented by the `CALibration[:ALL]?` command. You can read the calibration count whether the instrument is secured or unsecured.
- The calibration count is stored in nonvolatile memory, and does not change when power has been off or after a Factory Reset (`*RST` command).

### Example

```
→ CAL:COUNT?
```

*This command returns the calibration count.*

```
← +739
```

### See also

“`CALibration[:ALL]?`” on page 48

“`CALibration:SECure:CODE`” on page 50

## CALibration:SECure:CODE

### Syntax

```
CALibration:SECure:CODE <new_code>
```

This command allows you to enter a new security code to prevent accidental or unauthorized calibrations. The specified code is used to unsecure calibration memory. To change the security code, you must first unsecure calibration memory using the old security code, and then enter a new code.

### Parameter

Item	Type	Range of values	Default value
new_code	String	A string of up to 12 characters. <sup>[1]</sup>	ATU3606B

<sup>[1]</sup> You do not have to use all 12 characters but the first character must always be a letter (A to Z). The remaining 11 characters can be letters (A to Z) or numbers (0 to 9). Blank spaces are not allowed.

### Remarks

- The security code is set to ATU3606B when the instrument is shipped from the factory.
- If you forget your security code, you can override the security feature. See the *U3606B Service Guide* for more information.
- See the *U3606B Service Guide* for more information on how to unlock the instrument from the front panel.
- The security code is stored in nonvolatile memory, and does not change when power has been off or after a Factory Reset (\*RST command).

### Example

```
→ CAL:SEC:CODE ABC1234
```

*This command sets a new calibration security code (the calibration memory must be unsecured first).*

### See also

“CALibration:SECure:STATE” on page 51

## CALibration:SECure:STATe

### Syntax

CALibration:SECure:STATe <mode>, <code>

This command unsecures or secures the instrument for calibration. To unsecure the instrument, you must provide a security code to prevent accidental or unauthorized calibrations of the instrument. Before you can calibrate the instrument, you must unsecure it by entering the correct security code.

CALibration:SECure:STATe?

This query returns a boolean value that represents the current calibration security setting: 0 or 1

### Parameters

Item	Type	Range of values	Default value
mode	Boolean	0 1 OFF ON	0
code	String	A string of up to 12 characters. <sup>[1]</sup> This parameter is required to disable security, but is optional to enable security (but must be correct if provided).	ATU3606B

<sup>[1]</sup> You do not have to use all 12 characters but the first character must always be a letter (A to Z). The remaining 11 characters can be letters, numbers (0 to 9), or the underscore character (“\_”). Blank spaces are not allowed.

### Remarks

- When you first receive your instrument, it is secured. The security code is set to ATU3606B when the instrument is shipped from the factory.
- Once you enter a security code, that code must be used for both front-panel and remote-interface calibration. For example, if you secure the instrument from the front panel, you must use that same code to unsecure it from the remote interface.
- Unsecuring the instrument using this command enables the instrument to be calibrated. To calibrate the U3606B, use the CALibration:VALue and CALibration[:ALL]? commands.

### 3 CALibration Subsystem

#### CALibration:SECure:STATe

- The calibration security setting is stored in nonvolatile memory, and does not change when power has been off or after a Factory Reset (\*RST command).

#### Example

```
→ CAL:SEC:STAT OFF,  
   ATU3606B
```

*This command unsecures the instrument using the factory default security code.*

```
→ CAL:SEC:STAT?
```

*This query returns the current calibration security setting.*

```
← 0
```

#### See also

“CALibration:SECure:CODE” on page 50



## CALibration:STRing

### Syntax

CALibration:STRing "<string>"

This command allows you to store one message in calibration memory. For example, you can store such information as the date when the last calibration was performed, the date when the next calibration is due, the instrument's serial number, or even the name and phone number of the person to contact for a new calibration.

CALibration:STRing?

This query returns an ASCII string value enclosed in double quotes. If no calibration message has been specified, an empty quoted string (" ") is returned.

### Parameter

Item	Type	Range of values	Default value
string	String	A string of up to 40 characters enclosed in quotes <sup>[1]</sup>	-

<sup>[1]</sup> You can use letters (A to Z), numbers (0 to 9), and special characters like "@", "%", "\*", and so on.

### Remarks

- You can record a calibration message only from the remote interface and only when the instrument is unsecured (CALibration:SECure:STATe OFF command). You can read the message from the remote interface only. You can read the calibration message whether the instrument is secured or unsecured.
- Storing a calibration message will overwrite any message previously stored in memory.
- The calibration message is stored in nonvolatile calibration memory, and does not change when power has been off or after a Factory Reset (\*RST command).

### 3 CALibration Subsystem

CALibration:STRing

#### Example

```
→ CAL:STR "CAL: 27 Nov  
2009"
```

*This command stores a message in the calibration memory.*

```
→ CAL:STR?
```

*This query returns the message currently stored in calibration memory (the quotes are also returned).*

```
← "CAL: 27 Nov 2009"
```

#### See also

“CALibration:SECure:CODE” on [page 50](#)

## CALibration:VALue

### Syntax

CALibration:VALue <value>

This command specifies the value of the known calibration signal as outlined in the calibration procedures in the *U3606B Service Guide*.

CALibration:VALue?

This query returns a numeric value that represents the calibration value.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	Desired calibration signal in the units specified by the present measurement function.	-

### Remarks

Refer to the *U3606B Service Guide* for detailed procedures, including how to connect a calibration source, recommended equipment, the specified calibration points, and so forth.

### Example

→ CONF:VOLT:DC

*This command configures the instrument for DC voltage measurements.*

→ CAL:VAL 10

*This command sets calibration value to +10 volts for DC voltage measurements.*

→ CAL:VAL?

*This query returns the present calibration value.*

← +1.000000E+01

### See also

“CALibration[:ALL]?” on page 48

## CALibration:LEVel

CALibration:LEVel  
{MINimum|MAXimum|LOAD1|LOAD2|LOAD3|LOAD4}

This command selects the minimum or maximum calibration point as outlined in the calibration procedures in the *U3606B Service Guide*.

### Parameter

Item	Type	Range of values	Default value
level	Discrete	MINimum MAXimum LOAD1 LOAD2 LOAD3 LOAD4	-

### Remarks

Refer to the *U3606B Service Guide* for detailed procedures, including how to set up the output calibration connections, the specified calibration points, how to initiate the calibration of the output voltage or current, and so forth.

### Example

→ SOUR:VOLT:RANG 8

*This command sets the current output range to S2 (8 V/3 A).*

→ CAL:LEV MAX

*This command sets calibration point to 8 V.*

## Remote Calibration Procedures

The CALibration commands are used to calibrate the U3606B. Please note that the use of these commands requires a detailed knowledge of the appropriate calibration procedures, which are described in the *U3606B Service Guide*. Please refer to that guide before attempting to calibrate the instrument. Improper use of the CALibration commands can adversely affect the accuracy and reliability of the instrument.

During calibration the following instrument behavior is expected:

- The display “CALib” in the lower secondary display starts flashing to indicate that the calibration is in progress.
- Successful completion of the adjustment is indicated by a short beep and the primary display briefly showing “PASS”.
- An adjustment failure is indicated by a long beep, the primary display showing “FAiL” and a calibration error number appearing in the upper secondary display. Correct the problem and repeat this procedure.

The adjustment data is stored only when all the calibration items for the measurement selected is completed. For example, to store the adjustment data for DC voltage measurements, you will need to complete the following calibration items: Short, 100 mV, 1 V, -1 V, 10 V, 100 V, and 1000 V.

Before performing and adjustments, first you will need to unsecure the instrument for calibration.

Calibration steps	Remote commands
<b>1</b> Enter the calibration mode.	→ CAL:SEC:STAT OFF, ATU3606B
<b>2</b> Optional step: Change the default security code after unsecuring the instrument for calibration (be sure to write down the new code).	→ CAL:SEC:CODE <new code>
<b>3</b> Perform the zero and gain adjustments for the front input terminals. See page 58.	
<b>4</b> Perform the output adjustments for the front and rear output terminals. See page 76.	

## Zero offset adjustments

Each time you perform a zero offset adjustment, the instrument stores a new set of offset correction constants for measurement functions and ranges. The instrument will sequence through all required functions and ranges automatically and store new zero offset calibration constants.

### CAUTION

Never turn off the instrument during zero offset adjustment. This may cause ALL calibration memory to be lost.

Be sure to allow the instrument to warm up and stabilize for 2 hours before performing the adjustments. Follow the steps outlined below. Review the “Test Considerations” described in the *U3606B Service Guide* before beginning this test.

Calibration steps	Remote commands
<b>Zero offset adjustment — DC voltage (short)</b>	
1 Select the DC voltage measurement. Connect a shorting plug between the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF :VOLT :DC
2 Calibrate the zero point for DC voltage measurements.	→ CAL :VAL 0
3 Start the calibration.	→ CAL ?
<b>Zero offset adjustment — 2-wire resistance (short)</b>	
4 Select the 2-wire resistance measurement. Leave the shorting plug between the $\Omega$ (red) and <b>LO</b> (black) input terminals connected.	→ CONF :RES
5 Calibrate the zero point for 2-wire resistance measurements.	→ CAL :VAL 0
6 Start the calibration.	→ CAL ?

Calibration steps	Remote commands
<b>Zero offset adjustment — 2-wire resistance (open)</b>	
<b>7</b> Remove the shorting plug from the input terminals (all terminals open). Select the 2-wire resistance measurement, 100 M $\Omega$ range.	→ CONF:RES 100M
<b>8</b> Calibrate the open point for 2-wire resistance measurements.	→ CAL:VAL 9.9E+37
<b>9</b> Start the calibration.	→ CAL?
<b>Zero offset adjustment — DC current (open)</b>	
<b>10</b> Select the DC current measurement. Leave the input terminals open.	→ CONF:CURR
<b>11</b> Calibrate the open point for DC current measurements.	→ CAL:VAL 9.9E+37
<b>12</b> Start the calibration.	→ CAL?
<b>Zero offset adjustment — Capacitance (open)</b>	
<b>13</b> Select the capacitance measurement. Leave the input terminals open.	→ CONF:CAP
<b>14</b> Calibrate the open point for capacitance measurements.	→ CAL:VAL 9.9E+37
<b>15</b> Start the calibration.	→ CAL?

## Gain adjustments

The instrument calculates and stores gain corrections for each input value. The gain constant is computed from the calibration value entered for the calibration command and from measurements made automatically during the adjustment procedure.

Most measuring functions and ranges have gain adjustment procedures. The 100 M $\Omega$  range does not have gain calibration procedures.

Adjustments for each function should be performed **ONLY** in the order shown.

### Gain adjustment considerations

- The zero offset adjustment procedure must have been recently performed prior to beginning any gain adjustment procedures.
- Be sure to allow the instrument to warm up and stabilize for 2 hours before performing the adjustments.
- Consider the thermal effects as you are connecting test leads to the calibrator and instrument. It is recommended to wait 1 minute before starting the calibration after connecting the test leads.

#### **CAUTION**

Never turn off the instrument during a gain adjustment. This may cause the calibration memory for the present function to be lost.

---



### DC voltage gain adjustment procedure

Follow the steps outlined below. Review the “Test Considerations” described in the *U3606B Service Guide* and the “Gain adjustment considerations” on page 60 before beginning this test.

Calibration steps	Remote commands
<b>DC voltage gain adjustment — Short</b>	
1 Select the DC voltage measurement. Connect a shorting plug between the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF : VOLT : DC
2 Calibrate the zero point for DC voltage measurements.	→ CAL : VAL 0
3 Start the calibration.	→ CAL ?
<b>NOTE</b>	If the zero offset adjustment procedure has been recently performed prior to the DC voltage gain calibration procedure, the adjustment item “Short” can be omitted.
<b>DC voltage gain adjustment — 100 mV</b>	
4 Select the 100 mV range. Remove the shorting plug from the input terminals. Input 100 mV DC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF : VOLT : DC 0.1
5 Calibrate the 100 mV point for DC voltage measurements.	→ CAL : VAL 0.1
6 Start the calibration.	→ CAL ?
<b>DC voltage gain adjustment — ±1 V</b>	
7 Select the 1 V range. Input 1 V DC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF : VOLT : DC 1
8 Calibrate the 1 V point for DC voltage measurements.	→ CAL : VAL 1
9 Start the calibration.	→ CAL ?

### 3 CALibration Subsystem

#### Remote Calibration Procedures

Calibration steps	Remote commands
<b>10</b> Calibrate the -1 V point for DC voltage measurements.	→ CAL:VAL -1
<b>11</b> Start the calibration.	→ CAL?
<b>DC voltage gain adjustment — 10 V</b>	
<b>12</b> Select the 10 V range. Input 10 V DC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:VOLT:DC 10
<b>13</b> Calibrate the 10 V point for DC voltage measurements.	→ CAL:VAL 10
<b>14</b> Start the calibration.	→ CAL?
<b>DC voltage gain adjustment — 100 V</b>	
<b>15</b> Select the 100 V range. Input 100 V DC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:VOLT:DC 100
<b>16</b> Calibrate the 100 V point for DC voltage measurements.	→ CAL:VAL 100
<b>17</b> Start the calibration.	→ CAL?
<b>DC voltage gain adjustment — 1000 V</b>	
<b>18</b> Select the 1000 V range. Input 1000 V DC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:VOLT:DC 1000
<b>19</b> Calibrate the 1000 V point for DC voltage measurements.	→ CAL:VAL 1000
<b>20</b> Start the calibration.	→ CAL?

### AC voltage gain adjustment procedure

Follow the steps outlined below. Review the “Test Considerations” described in the *U3606B Service Guide* and the “Gain adjustment considerations” on page 60 before beginning this test.

Calibration steps	Remote commands
<b>AC voltage gain adjustment — 10 mV</b>	
<b>1</b> Select the AC voltage measurement, 10 mV range. Input 10 mV, 1 kHz AC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:VOLT:AC 0.01
<b>2</b> Calibrate the 10 mV point for AC voltage measurements.	→ CAL:VAL 0.01
<b>3</b> Start the calibration.	→ CAL?
<b>AC voltage gain adjustment — 100 mV</b>	
<b>4</b> Select the 100 mV range. Input 100 mV, 1 kHz AC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:VOLT:AC 0.1
<b>5</b> Calibrate the 100 mV point for AC voltage measurements.	→ CAL:VAL 0.1
<b>6</b> Start the calibration.	→ CAL?
<b>AC voltage gain adjustment — 1 V</b>	
<b>7</b> Select the 1 V range. Input 1 V, 1 kHz AC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:VOLT:AC 1
<b>8</b> Calibrate the 1 V point for AC voltage measurements.	→ CAL:VAL 1
<b>9</b> Start the calibration.	→ CAL?

### 3 CALibration Subsystem

#### Remote Calibration Procedures

Calibration steps	Remote commands
<b>AC voltage gain adjustment — 10 V</b>	
<b>10</b> Select the 10 V range. Input 10 V, 1 kHz AC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:VOLT:AC 10
<b>11</b> Calibrate the 10 V point for AC voltage measurements.	→ CAL:VAL 10
<b>12</b> Start the calibration.	→ CAL?
<b>AC voltage gain adjustment — 100 V</b>	
<b>13</b> Select the 100 V range. Input 100 V, 1 kHz AC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:VOLT:AC 100
<b>14</b> Calibrate the 100 V point for AC voltage measurements.	→ CAL:VAL 100
<b>15</b> Start the calibration.	→ CAL?
<b>AC voltage gain adjustment — 750 V</b>	
<b>16</b> Select the 750 V range. Input 750 V, 1 kHz AC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:VOLT:AC 750
<b>17</b> Calibrate the 750 V point for AC voltage measurements.	→ CAL:VAL 750
<b>18</b> Start the calibration.	→ CAL?

### Frequency gain adjustment procedure

Follow the steps outlined below. Review the “Test Considerations” described in the *U3606B Service Guide* and the “Gain adjustment considerations” on page 60 before beginning this test.

Calibration steps	Remote commands
<b>Frequency gain adjustment — 1 kHz</b>	
<b>1</b> Select the AC voltage measurement, 1 V range.	→ CONF : VOLT : AC 1
<b>2</b> Select the frequency measurement. Input 1 V, 1 kHz AC voltage to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	→ CONF : FREQ
<b>3</b> Calibrate the 1 kHz point for frequency measurements.	→ CAL : VAL 1000
<b>4</b> Start the calibration.	→ CAL ?

### 3 CALibration Subsystem

Remote Calibration Procedures

#### Resistance gain adjustment procedures

Follow the steps outlined below. Review the “Test Considerations” described in the *U3606B Service Guide* and the “Gain adjustment considerations” on page 60 before beginning this test.

Calibration steps	Remote commands
<b>Resistance gain adjustment — Short</b>	
1 Select the 2-wire resistance measurement. Connect a shorting plug between the $\Omega$ (red) and <b>LO</b> (black) input terminals.	→ CONF:RES
2 Calibrate the zero point for 2-wire resistance measurements.	→ CAL:VAL 0
3 Start the calibration.	→ CAL?
<b>Resistance gain adjustment — Open</b>	
4 Remove the shorting plug from the input terminals (all terminals open). Select the 100 M $\Omega$ range.	→ CONF:RES 100M
5 Calibrate the open point for 2-wire resistance measurements.	→ CAL:VAL 9.9E+37
6 Start the calibration.	→ CAL?
<b>NOTE</b>	If the zero offset adjustment procedure has been recently performed prior to the resistance gain calibration procedure, the adjustment item “Short” and “Open” can be omitted.
<b>Resistance gain adjustment — 10 M<math>\Omega</math></b>	
7 Select the 10 M $\Omega$ range. Input 10 M $\Omega$ resistance to the $\Omega$ (red) and <b>LO</b> (black) input terminals.	→ CONF:RES 10M
8 Calibrate the 10 M $\Omega$ point for 2-wire resistance measurements.	→ CAL:VAL 10M
9 Start the calibration.	→ CAL?

Calibration steps	Remote commands
<b>Resistance gain adjustment — 1 M<math>\Omega</math></b>	
<b>10</b> Select the 1 M $\Omega$ range. Input 1 M $\Omega$ resistance to the $\Omega$ (red) and <b>LO</b> (black) input terminals.	→ CONF:RES 1M
<b>11</b> Calibrate the 1 M $\Omega$ point for 2-wire resistance measurements.	→ CAL:VAL 1M
<b>12</b> Start the calibration.	→ CAL?
<b>Resistance gain adjustment — 100 k<math>\Omega</math></b>	
<b>13</b> Select the 100 k $\Omega$ range. Input 100 k $\Omega$ resistance to the $\Omega$ (red) and <b>LO</b> (black) input terminals.	→ CONF:RES 100k
<b>14</b> Calibrate the 100 k $\Omega$ point for 2-wire resistance measurements.	→ CAL:VAL 100k
<b>15</b> Start the calibration.	→ CAL?
<b>Resistance gain adjustment — 10 k<math>\Omega</math></b>	
<b>16</b> Select the 10 k $\Omega$ range. Input 10 k $\Omega$ resistance to the $\Omega$ (red) and <b>LO</b> (black) input terminals.	→ CONF:RES 10k
<b>17</b> Calibrate the 10 k $\Omega$ point for 2-wire resistance measurements.	→ CAL:VAL 10k
<b>18</b> Start the calibration.	→ CAL?
<b>Resistance gain adjustment — 1000 <math>\Omega</math></b>	
<b>19</b> Select the 1000 $\Omega$ range. Input 1000 $\Omega$ resistance to the $\Omega$ (red) and <b>LO</b> (black) input terminals.	→ CONF:RES 1000
<b>20</b> Calibrate the 1000 $\Omega$ point for 2-wire resistance measurements.	→ CAL:VAL 1000
<b>21</b> Start the calibration.	→ CAL?

### 3 CALibration Subsystem

Remote Calibration Procedures

Calibration steps	Remote commands
<b>Resistance gain adjustment — 100 <math>\Omega</math></b>	
<b>22</b> Select the 100 $\Omega$ range. Input 100 $\Omega$ resistance to the $\Omega$ (red) and <b>LO</b> (black) input terminals.	→ CONF:RES 100
<b>23</b> Calibrate the 100 $\Omega$ point for 2-wire resistance measurements.	→ CAL:VAL 100
<b>24</b> Start the calibration.	→ CAL?



### DC current gain adjustment procedure

Follow the steps outlined below. Review the “Test Considerations” described in the *U3606B Service Guide* and the “Gain adjustment considerations” on page 60 before beginning this test.

Calibration steps	Remote commands
<b>DC current gain adjustment — Open</b>	
<b>1</b> Remove all connections from the input terminals (all terminals open). Select the DC current measurement.	→ CONF : CURR : DC
<b>2</b> Calibrate the open point for DC current measurements.	→ CAL : VAL 9 . 9E+37
<b>3</b> Start the calibration.	→ CAL ?
<b>NOTE</b>	If the zero offset adjustment procedure has been recently performed prior to the current gain calibration procedure, the adjustment item “Open” can be omitted.
<b>DC current gain adjustment — 10 mA</b>	
<b>4</b> Select the 10 mA range. Input 10 mA DC current to the <b>I</b> (red) and <b>LO</b> (black) input terminals.	→ CONF : CURR : DC 0 . 01
<b>5</b> Calibrate the 10 mA point for DC current measurements.	→ CAL : VAL 0 . 01
<b>6</b> Start the calibration.	→ CAL ?
<b>DC current gain adjustment — 100 mA</b>	
<b>7</b> Select the 100 mA range. Input 100 mA DC current to the <b>I</b> (red) and <b>LO</b> (black) input terminals.	→ CONF : CURR : DC 0 . 1
<b>8</b> Calibrate the 100 mA point for DC current measurements.	→ CAL : VAL 0 . 1
<b>9</b> Start the calibration.	→ CAL ?

### 3 CALibration Subsystem

Remote Calibration Procedures

Calibration steps	Remote commands
<b>DC current gain adjustment — 1 A</b>	
<b>10</b> Select the 1 A range. Input 1 A DC current to the <b>I</b> (red) and <b>LO</b> (black) input terminals.	→ CONF : CURR : DC 1
<b>11</b> Calibrate the 1 A point for DC current measurements.	→ CAL : VAL 1
<b>12</b> Start the calibration.	→ CAL?

### AC current gain adjustment procedure

Follow the steps outlined below. Review the “Test Considerations” described in the *U3606B Service Guide* and the “Gain adjustment considerations” on page 60 before beginning this test.

Calibration steps	Remote commands
<b>AC current gain adjustment — 1 mA</b>	
<b>1</b> Select the AC current measurement, 1 mA range. Input 1 mA, 1 kHz AC current to the <b>I</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:CURR:AC 0.001
<b>2</b> Calibrate the 1 mA point for AC current measurements.	→ CAL:VAL 0.001
<b>3</b> Start the calibration.	→ CAL?
<b>AC current gain adjustment — 10 mA</b>	
<b>4</b> Select the 10 mA range. Input 10 mA, 1 kHz AC current to the <b>I</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:CURR:AC 0.01
<b>5</b> Calibrate the 10 mA point for AC current measurements.	→ CAL:VAL 0.01
<b>6</b> Start the calibration.	→ CAL?
<b>AC current gain adjustment — 100 mA</b>	
<b>7</b> Select the 100 mA range. Input 100 mA, 1 kHz AC current to the <b>I</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:CURR:AC 0.1
<b>8</b> Calibrate the 100 mA point for AC current measurements.	→ CAL:VAL 0.1
<b>9</b> Start the calibration.	→ CAL?

### 3 CALibration Subsystem

Remote Calibration Procedures

Calibration steps	Remote commands
<b>AC current gain adjustment — 1 A</b>	
<b>10</b> Select the 1 A range. Input 1 A, 1 kHz AC current to the <b>I</b> (red) and <b>LO</b> (black) input terminals.	→ CONF:CURR:AC 1
<b>11</b> Calibrate the 1 A point for AC current measurements.	→ CAL:VAL 1
<b>12</b> Start the calibration.	→ CAL?

### Capacitance gain adjustment procedure

Follow the steps outlined below. Review the “Test Considerations” described in the *U3606B Service Guide* and the “Gain adjustment considerations” on page 60 before beginning this test.

Calibration steps	Remote commands
<b>Capacitance gain adjustment — Open</b>	
1 Remove all connections from the input terminals (all terminals open). Select the capacitance measurement.	→ CONF : CAP
2 Calibrate the open point for capacitance measurements.	→ CAL : VAL 9.9E+37
3 Start the calibration.	→ CAL?
<b>NOTE</b>	If the zero offset adjustment procedure has been recently performed prior to the capacitance gain calibration procedure, the adjustment item “Open” can be omitted.
<b>Capacitance gain adjustment — 0.4 nF</b>	
4 Select the 1 nF range. Input 0.4 nF to the $\text{--}\text{C}$ (red) and <b>LO</b> (black) input terminals.	→ CONF : CAP 1n
5 Calibrate the 0.4 nF point for capacitance measurements.	→ CONF : VAL 0.4E-9
6 Start the calibration.	→ CAL?
<b>Capacitance gain adjustment — 1 nF</b>	
7 Input 1 nF to the $\text{--}\text{C}$ (red) and <b>LO</b> (black) input terminals.	
8 Calibrate the 1nF point for capacitance measurements.	→ CONF : VAL 1E-9
9 Start the calibration.	→ CAL?

### 3 CALibration Subsystem

#### Remote Calibration Procedures

Calibration steps	Remote commands
<b>Capacitance gain adjustment — 10 nF</b>	
<b>10</b> Select the 10 nF range. Input 10 nF to the $\nabla$ (red) and <b>LO</b> (black) input terminals.	→ CONF :CAP 10n
<b>11</b> Calibrate the 10 nF point for capacitance measurements.	→ CONF :VAL 1E-8
<b>12</b> Start the calibration.	→ CAL?
<b>Capacitance gain adjustment — 100 nF</b>	
<b>13</b> Select the 100 nF range. Input 100 nF to the $\nabla$ (red) and <b>LO</b> (black) input terminals.	→ CONF :CAP 100n
<b>14</b> Calibrate the 100 nF point for capacitance measurements.	→ CONF :VAL 1E-7
<b>15</b> Start the calibration.	→ CAL?
<b>Capacitance gain adjustment — 1 <math>\mu</math>F</b>	
<b>16</b> Select the 1 $\mu$ F range. Input 1 $\mu$ F to the $\nabla$ (red) and <b>LO</b> (black) input terminals.	→ CONF :CAP 1u
<b>17</b> Calibrate the 1 $\mu$ F point for capacitance measurements.	→ CONF :VAL 1E-6
<b>18</b> Start the calibration.	→ CAL?
<b>Capacitance gain adjustment — 10 <math>\mu</math>F</b>	
<b>19</b> Select the 10 $\mu$ F range. Input 10 $\mu$ F to the $\nabla$ (red) and <b>LO</b> (black) input terminals.	→ CONF :CAP 10u
<b>20</b> Calibrate the 10 $\mu$ F point for capacitance measurements.	→ CONF :VAL 1E-5
<b>21</b> Start the calibration.	→ CAL?
<b>Capacitance gain adjustment — 100 <math>\mu</math>F</b>	
<b>22</b> Select the 100 $\mu$ F range. Input 100 $\mu$ F to the $\nabla$ (red) and <b>LO</b> (black) input terminals.	→ CONF :CAP 100u
<b>23</b> Calibrate the 100 $\mu$ F point for capacitance measurements.	→ CONF :VAL 1E-4
<b>24</b> Start the calibration.	→ CAL?

Calibration steps	Remote commands
<b>Capacitance gain adjustment — 1 mF</b>	
<b>25</b> Select the 1 mF range. Input 1 mF to the $\pm$ (red) and <b>LO</b> (black) input terminals.	→ CONF : CAP 1m
<b>26</b> Calibrate the 1 mF point for capacitance measurements.	→ CONF : VAL 1E-3
<b>27</b> Start the calibration.	→ CAL?
<b>Capacitance gain adjustment — 10 mF</b>	
<b>28</b> Select the 10 mF range. Input 10 mF to the $\pm$ (red) and <b>LO</b> (black) input terminals.	→ CONF : CAP 10m
<b>29</b> Calibrate the 10 mF point for capacitance measurements.	→ CONF : VAL 1E-2
<b>30</b> Start the calibration.	→ CAL?

## Output adjustments

The instrument calculates and stores output corrections for each output level. The U3606B implements a closed loop output calibration procedure to its inherent dual function ability as a digital multimeter and a DC power supply. The output constant is computed from the calibration level set for the calibration command and from measurements made automatically during the adjustment procedure.

Calibration steps	Remote commands
<b>1</b> Place the instrument in the free-run mode. Measurements are made continuously and the readings are stored in the instrument memory.	→ INIT:CONT ON
<b>2</b> Set the signal source to read the sense signal inputs from the front output terminals of the instrument. The U3606B needs to be calibrated twice: once for the internal sense source and again for the external sense source.	→ SOUR:SENS INT
<b>3</b> Perform the current and voltage output adjustments for the front output terminals. See page 77.	
<b>4</b> Set the signal source to read the sense signal inputs from the rear output terminals of the instrument. When you have completed the voltage and current output adjustments for the internal sense source, repeat the entire adjustment procedure again for the external sense source.	→ SOUR:SENS EXT
<b>5</b> Perform current and voltage output adjustments for the rear output terminals. See page 77.	
<b>6</b> Remove all connections from the instrument. Reset the calibration message and record the new calibration count.	→ CAL:STR "<new_message>" → CAL:COUN?



Adjustments for each function should be performed **ONLY** in the order shown.

Follow the steps outlined below. Review the “Test Considerations” described in the *U3606B Service Guide* before beginning this test.

Calibration steps	Remote commands
<b>Current output adjustment</b>	
<b>1</b> Connect the <b>+</b> (red) and <b>-</b> (black) output terminals to the <b>I</b> (red) and <b>LO</b> (black) input terminals.	
<b>2</b> Select the CC output, 1 A range.	→ SOUR:CURR:RANG 1
<b>3</b> Calibrate the lower point for CC output.	→ CAL:LEV MIN
<b>4</b> Calibrate the upper point for CC output.	→ CAL:LEV MAX
<b>5</b> Connect a 300 $\Omega$ , 30 V load across the <b>+</b> (red) output terminal and the <b>I</b> (red) terminal. Leave the <b>-</b> (black) terminal and <b>LO</b> (black) terminal connected.	
<b>6</b> Calibrate the S1m load point for CC output.	→ CAL:LEV LOAD1
<b>7</b> Connect a 1000 $\Omega$ , 6 V load across the <b>+</b> (red) output terminal and the <b>I</b> (red) terminal. Leave the <b>-</b> (black) terminal and <b>LO</b> (black) terminal connected.	
<b>8</b> Calibrate the LO RES load point for CC output.	→ CAL:LEV LOAD2
<b>9</b> Connect a 300 $\Omega$ , 30 V load across the <b>+</b> (red) output terminal and the <b>I</b> (red) terminal. Leave the <b>-</b> (black) terminal and <b>LO</b> (black) terminal connected.	
<b>10</b> Calibrate the S1 load point for CC output.	→ CAL:LEV LOAD3
<b>11</b> Connect a 2.67 $\Omega$ , 8 V load across the <b>+</b> (red) output terminal and the <b>I</b> (red) terminal. Leave the <b>-</b> (black) terminal and <b>LO</b> (black) terminal connected.	
<b>12</b> Calibrate the S2 load point for CC output.	→ CAL:LEV LOAD4

### 3 CALibration Subsystem

#### Remote Calibration Procedures

Calibration steps	Remote commands
<b>Voltage output adjustment — S2 (8 V/3 A) range</b>	
<b>13</b> Connect the <b>+</b> (red) and <b>-</b> (black) output terminals to the <b>V</b> (red) and <b>LO</b> (black) input terminals.	
<b>14</b> Select the CV output, 30 V range.	→ SOUR:VOLT:RANG 30
<b>15</b> Calibrate the lower point for CV output.	→ CAL:LEV MIN
<b>16</b> Calibrate the upper point for CV output.	→ CAL:LEV MAX
<b>17</b> Connect an additional 30 $\Omega$ , 1 A load across the <b>+</b> (red) and <b>-</b> (black) output terminal. Leave the connections from the output terminals to the input terminals intact.	
<b>18</b> Calibrate the S1 load point for CV output.	→ CAL:LEV LOAD1
<b>19</b> Connect an additional 2.67 $\Omega$ , 3 A load across the <b>+</b> (red) and <b>-</b> (black) output terminal. Leave the connections from the output terminals to the input terminals intact.	
<b>20</b> Calibrate the S2 load point for CV output.	→ CAL:LEV LOAD2
<b>21</b> Connect an additional 300 $\Omega$ , 0.03 A load across the <b>+</b> (red) and <b>-</b> (black) output terminal. Leave the connections from the output terminals to the input terminals intact.	
<b>22</b> Calibrate the S2 load point for CV output with a lighter load.	→ CAL:LEV LOAD3
<b>23</b> Connect an additional 0.33 $\Omega$ , 3 A load across the <b>+</b> (red) and <b>-</b> (black) output terminal. Leave the connections from the output terminals to the input terminals intact.	
<b>24</b> Calibrate the S2m load point for CV output.	→ CAL:LEV LOAD4

Repeat the voltage output adjustment procedures again for the rear output terminals (send the SOUR:SENS EXT command). See the *U3606B User's Guide* for more information on how to connect the load leads to the rear terminal block.

**NOTE**

- If you would like to know if the calibration has finished, you should poll the \*STB? or STATus:OPERation:CONDition? to check the calibration's progress.
- **For current output calibration:** Apply 300  $\Omega$  (3 W), 1000  $\Omega$  (1/6 W), 30  $\Omega$  (30 W), and 2.67  $\Omega$  (24 W) fixed resistors to calibrate the load effect. Or, use the Keysight 6063B - CR 300  $\Omega$ , CV 6 V, CV 30 V, and CV 8 V to calibrate the load.
- The current output calibration has to be done before voltage output calibration.
- **For voltage output calibration:** Apply 30  $\Omega$  (30 W), 2.67  $\Omega$  (24 W), 300  $\Omega$  (3 W), and 0.33  $\Omega$  (3 W) fixed resistors to calibrate the load effect. Or, use the Keysight 6063B - CC 1 A, CC 3 A, CC 0.03 A, and CC 3 A to calibrate the load.

	CC		CV	
	Resistor	E-load	Resistor	E-load
<b>Load 1</b>	300 $\Omega$	CR 300 $\Omega$	30 $\Omega$	CC 1 A
<b>Load 2</b>	1000 $\Omega$	CV 6 V	2.67 $\Omega$	CC 3 A
<b>Load 3</b>	30 $\Omega$	CV 30 V	300 $\Omega$	CC 0.03 A
<b>Load 4</b>	2.67 $\Omega$	CV 8 V	0.33 $\Omega$	CC 3 A

**3 CALibration Subsystem**  
Remote Calibration Procedures

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

## 4 CONFigure Subsystem

CONFigure?	86
CONFigure[:VOLTage][:DC]	87
CONFigure[:VOLTage]:AC	90
CONFigure[:VOLTage]:ACDC DCAC	93
CONFigure:CURREnt[:DC]	96
CONFigure:CURREnt:AC	99
CONFigure:CURREnt:ACDC DCAC	102
CONFigure:RESistance	105
CONFigure:CONTinuity	108
CONFigure:LRESistance	110
CONFigure:CAPacitance	113
CONFigure:DIODE	116
CONFigure:FREQuency	118
CONFigure:PWIDth	120
CONFigure:DCYCLE	122

This chapter describes the CONFigure commands used to program the U3606B over a remote interface. Use the CONFigure commands to set the measurement function, range, and resolution without actually making a measurement.

### NOTE

- Use the INITiate[:IMMEDIATE] or READ? command to initiate the measurement.
- Some measurements may result in a delayed response time in the U3606B Multimeter | DC Power Supply. It is recommended that you increase the SCPI query timeout to 15000 milliseconds or longer to avoid SCPI query timeout errors.

## CONFigure?

### Syntax

CONFigure?

This query returns a series of comma-separated fields indicating the present measurement function, range, and resolution of the instrument. The short form of the function name is always returned (for example, CURR:AC, FREQ:VOLT, and so on).

### Remarks

A Factory Reset (\*RST command) or an Instrument Preset (SYSTEM:PRESet command) will set all measurement parameters to their default factory settings, clear the reading memory, and clear all stored statistical data.

### Example

```
→ CONF?
```

*This query returns the present measurement configuration of the instrument.*

```
← VOLT +1.000000E+01,  
+1.000000E-06
```

### See also

[“\\*RST” on page 371](#)

[“SYSTEM:PRESet” on page 341](#)

## CONFigure[:VOLTage][:DC]

### Syntax

```
CONFigure[:VOLTage][:DC]
    [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all DC voltage measurement parameters and trigger parameters to their default values. Then, it configures the instrument for DC voltage measurements but does not initiate the measurement.

### NOTE

The CONFigure[:VOLTage][:DC] command does not place the instrument in the “wait-for-trigger” state. Use the INITiate[:IMMediate] or READ? command in conjunction with the CONFigure[:VOLTage][:DC] to place the instrument in the “wait-for-trigger” state.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 20 mV MIN</li> <li>• 100 mV</li> <li>• 1 V</li> <li>• 10 V</li> <li>• 100 V</li> <li>• 1000 V MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> <li>• 100 mV</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 0.1 uV</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> </ul>

## 4 CONFigure Subsystem

CONFigure[:VOLTage][:DC]

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the `<range>` parameter is omitted. The resolution is set 5½ digits (MIN) when the `<resolution>` parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.



### Example 1

→ CONF

*This command configures the instrument for DC voltage measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +9.983721E+00

### Example 2

→ CONF 10, 0.001

*This command configures the instrument for DC voltage measurements. The 10 V range is selected with 1 mV resolution.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +9.985308E+00

### See also

“INITiate[:IMMediate]” [on page 130](#)

“FETCh?” [on page 357](#)

“READ?” [on page 359](#)

## CONFigure[:VOLTage]:AC

### Syntax

```
CONFigure[:VOLTage]:AC  
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all AC voltage measurement parameters and trigger parameters to their default values. Then, it configures the instrument for AC voltage measurements but does not initiate the measurement.

### CAUTION

- The maximum range parameter is  $750 V_{\text{rms}}$ , which is set by MAX. The rms voltage is waveform dependent. A sine wave is limited to  $750 V_{\text{ac}}$  (rms), but a  $1000 V_{\text{pk}}$  square wave is safe. Connections to AC MAINS are further limited to CAT II (300V).
- See the “Safety Information” section in the *U3606B User's and Service Guide* for a complete discussion of the safety features, and the procedures for safe operation of this instrument.

### NOTE

The CONFigure[:VOLTage]:AC command does not place the instrument in the “wait-for-trigger” state. Use the INITiate[:IMMEDIATE] or READ? command in conjunction with the CONFigure[:VOLTage]:AC to place the instrument in the “wait-for-trigger” state.

## Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 mV   MIN</li> <li>• 1 V</li> <li>• 10 V</li> <li>• 100 V</li> <li>• 750 V   MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> <li>• 100 mV</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> </ul>

## Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.

## 4 CONFigure Subsystem

### CONFigure[:VOLTage]:AC

- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

#### Example 1

→ CONF:AC

*This command configures the instrument for AC voltage measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +3.769443E-03

#### Example 2

→ CONF:AC 1

*This command configures the instrument for AC voltage measurements. The 1 V range is selected.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +1.516957E-03

#### See also

“CONFigure?” on page 86

“INITiate[:IMMEDIATE]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure[:VOLTage]:ACDC | DCAC

### Syntax

```
CONFigure[:VOLTage]:ACDC|DCAC
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all AC+DC voltage measurement parameters and trigger parameters to their default values. Then, it configures the instrument for AC+DC voltage measurements but does not initiate the measurement.

### CAUTION

- The maximum range parameter is 750 V<sub>rms</sub>, which is set by MAX. The rms voltage is waveform dependent. A sine wave is limited to 750 V<sub>ac</sub> (rms), but a 1000 V<sub>pk</sub> square wave is safe. Connections to AC MAINS are further limited to CAT II (300V).
- See the “Safety Information” section in the *U3606B User's and Service Guide* for a complete discussion of the safety features, and the procedures for safe operation of this instrument.

### NOTE

The CONFigure[:VOLTage]:ACDC|DCAC command does not place the instrument in the “wait-for-trigger” state. Use the INITiate[:IMMEDIATE] or READ? command in conjunction with the CONFigure[:VOLTage]:ACDC|DCAC to place the instrument in the “wait-for-trigger” state.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 mV   MIN</li> <li>• 1 V</li> <li>• 10 V</li> <li>• 100 V</li> <li>• 750 V   MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> <li>• 100 mV</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> </ul>

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.

- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example 1

→ CONF:ACDC

*This command configures the instrument for AC+DC voltage measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +9.984319E+00

### Example 2

→ CONF:ACDC 10, 0.001

*This command configures the instrument for AC+DC voltage measurements. The 10 V range is selected with 1 mV resolution.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +9.9839877E+00

### See also

“CONFigure?” on page 86

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure:CURRent[:DC]

### Syntax

```
CONFigure:CURRent[:DC]  
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all DC current measurement parameters and trigger parameters to their default values. Then, it configures the instrument for DC current measurements but does not initiate the measurement.

### NOTE

The `CONFigure:CURRent[:DC]` command does not place the instrument in the “wait-for-trigger” state. Use the `INITiate[:IMMediate]` or `READ?` command in conjunction with the `CONFigure:CURRent[:DC]` to place the instrument in the “wait-for-trigger” state.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"><li>• 10 mA MIN</li><li>• 100 mA</li><li>• 1000 mA</li><li>• 3 A MAX</li><li>• AUTO</li></ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"><li>• MAX (4½ digit)</li><li>• 1 µA</li><li>• 10 µA</li><li>• 100 µA</li><li>• 1 mA</li></ul>	<ul style="list-style-type: none"><li>• MIN (5½ digit)</li><li>• 0.1 µA</li><li>• 1 µA</li><li>• 10 µA</li><li>• 100 µA</li></ul> MIN



## Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

## 4 CONFigure Subsystem

CONFigure:CURRent[:DC]

### Example 1

→ CONF:CURR

*This command configures the instrument for DC current measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +0.203200E+00

### Example 2

→ CONF:CURR 1, 0.0001

*This command configures the instrument for DC current measurements. The 1 A range is selected with 100 µA resolution.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +0.223407E+00

### See also

“CONFigure?” on page 86

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure:CURRent:AC

### Syntax

```
CONFigure:CURRent:AC
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all AC current measurement parameters and trigger parameters to their default values. Then, it configures the instrument for AC current measurements but does not initiate the measurement.

### NOTE

The `CONFigure:CURRent:AC` command does not place the instrument in the “wait-for-trigger” state. Use the `INITiate[:IMMediate]` or `READ?` command in conjunction with the `CONFigure:CURRent:AC` to place the instrument in the “wait-for-trigger” state.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 10 mA MIN</li> <li>• 100 mA</li> <li>• 1000 mA</li> <li>• 3 A MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 1 µA</li> <li>• 10 µA</li> <li>• 100 µA</li> <li>• 1 mA</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 0.1 µA</li> <li>• 1 µA</li> <li>• 10 µA</li> <li>• 100 µA</li> </ul>

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example 1

→ CONF:CURR:AC

*This command configures the instrument for AC current measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +8.545300E-02

### Example 2

→ CONF:CURR:AC 1, 0.0001

*This command configures the instrument for AC current measurements. The 1 A range is selected with 100 µA resolution.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +8.632510E-02

### See also

“CONFigure?” on page 86

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure:CURRent:ACDC | DCAC

### Syntax

```
CONFigure:CURRent:ACDC|DCAC  
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all AC+DC current measurement parameters and trigger parameters to their default values. Then, it configures the instrument for AC+DC current measurements but does not initiate the measurement.

### NOTE

The `CONFigure:CURRent:ACDC|DCAC` command does not place the instrument in the “wait-for-trigger” state. Use the `INITiate[:IMMediate]` or `READ?` command in conjunction with the `CONFigure:CURRent:ACDC|DCAC` to place the instrument in the “wait-for-trigger” state.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"><li>• 10 mA MIN</li><li>• 100 mA</li><li>• 1000 mA</li><li>• 3 A MAX</li><li>• AUTO</li></ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"><li>• MAX (4½ digit)</li><li>• 1 uA</li><li>• 10 uA</li><li>• 100 uA</li><li>• 1 mA</li></ul>	<ul style="list-style-type: none"><li>• MIN (5½ digit)</li><li>• 0.1 uA</li><li>• 1 uA</li><li>• 10 uA</li><li>• 100 uA</li></ul> MIN

## Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

## 4 CONFigure Subsystem

CONFigure:CURRent:ACDC|DCAC

### Example 1

→ CONF:CURR:ACDC

*This command configures the instrument for AC+DC current measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +9.535700E-02

### Example 2

→ CONF:CURR:ACDC 1, 0.0001

*This command configures the instrument for AC current measurements. The 1 A range is selected with 100 µA resolution.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +9.832310E-02

### See also

“CONFigure?” on page 86

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359



## CONFigure:RESistance

### Syntax

```
CONFigure:RESistance
    [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all resistance measurement parameters and trigger parameters to their default values. Then, it configures the instrument for 2-wire resistance measurements but does not initiate the measurement.

### NOTE

The CONFigure:RESistance command does not place the instrument in the “wait-for-trigger” state. Use the INITiate[:IMMediate] or READ? command in conjunction with the CONFigure:RESistance to place the instrument in the “wait-for-trigger” state.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 Ω MIN</li> <li>• 1 kΩ</li> <li>• 10 kΩ</li> <li>• 100 kΩ</li> <li>• 1 MΩ</li> <li>• 10 MΩ</li> <li>• 100 MΩ MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 mΩ</li> <li>• 100 mΩ</li> <li>• 1 Ω</li> <li>• 10 Ω</li> <li>• 100 Ω</li> <li>• 1 kΩ</li> <li>• 10 kΩ</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 1 mΩ</li> <li>• 10 mΩ</li> <li>• 100 mΩ</li> <li>• 1 Ω</li> <li>• 10 Ω</li> <li>• 100 Ω</li> <li>• 1 kΩ</li> </ul>

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the `<range>` parameter is omitted. The resolution is set 5½ digits (MIN) when the `<resolution>` parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example 1

→ CONF:RES

*This command configures the instrument for 2-wire resistance measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +1.321300E+04

### Example 2

→ CONF:RES 1000, 0.1

*This command configures the instrument for 2-wire resistance measurements. The 1000 Ω range is selected with 0.1 Ω resolution.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +4.271500E+02

### See also

“CONFigure?” on page 86

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure:CONTInuity

### Syntax

```
CONFigure:CONTInuity  
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all continuity test parameters and trigger parameters to their default values. Then, it configures the instrument for continuity tests but does not initiate the test. Continuity is a special type of fixed-range 2-wire resistance measurement.

### NOTE

The `CONFigure:CONTInuity` command does not place the instrument in the “wait-for-trigger” state. Use the `INITiate[:IMMediate]` or `READ?` command in conjunction with the `CONFigure:CONTInuity` to place the instrument in the “wait-for-trigger” state.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"><li>• 100 <math>\Omega</math>   MIN</li><li>• 1 k<math>\Omega</math></li><li>• 10 k<math>\Omega</math></li><li>• 100 k<math>\Omega</math></li><li>• 1 M<math>\Omega</math></li><li>• 10 M<math>\Omega</math></li><li>• 100 M<math>\Omega</math>   MAX</li><li>• AUTO</li></ul>	1 k $\Omega$
resolution	Numeric	<ul style="list-style-type: none"><li>• MAX   MIN (4½ digit)</li><li>• 10 m<math>\Omega</math></li><li>• 100 m<math>\Omega</math></li><li>• 1 <math>\Omega</math></li><li>• 10 <math>\Omega</math></li><li>• 100 <math>\Omega</math></li><li>• 1 k<math>\Omega</math></li><li>• 10 k<math>\Omega</math></li></ul>	MAX   MIN

## Remarks

- The range is set to 1 k $\Omega$  (1 k $\Omega$ ) when the <range> parameter is omitted.
- The resolution is set 4½ digits (MAX|MIN) when the <resolution> parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation operations.
- From 10  $\Omega$  to 1.2 k $\Omega$  the actual resistance reading is displayed on the front pane. If the reading exceeds 1.2 k $\Omega$ , “OPEn” is displayed on the front panel.
- The FETCh?, READ?, and MEASure:CONTInuity? commands returns the measured resistance, regardless of its value.

## Example

→ CONF:CONT

*This command configures the instrument for continuity tests. The default range (1 k $\Omega$ ) and resolution (4½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +1.721500E-02

## See also

“CONFigure?” on page 86

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure:LRESistance

### Syntax

```
CONFigure:LRESistance  
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all low-resistance measurement parameters and trigger parameters to their default values. Then, it configures the instrument for 4-wire low-resistance measurements but does not initiate the measurement.

### NOTE

The `CONFigure:LRESistance` command does not place the instrument in the “wait-for-trigger” state. Use the `INITiate[:IMMediate]` or `READ?` command in conjunction with the `CONFigure:LRESistance` to place the instrument in the “wait-for-trigger” state.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"><li>• 100 m<math>\Omega</math> MIN</li><li>• 1000 m<math>\Omega</math></li><li>• 10 <math>\Omega</math></li><li>• 100 <math>\Omega</math></li><li>• 1000 <math>\Omega</math> MAX</li><li>• AUTO DEF</li></ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"><li>• MAX (4½ digit)</li><li>• 10 <math>\mu\Omega</math></li><li>• 100 <math>\mu\Omega</math></li><li>• 1 m<math>\Omega</math></li><li>• 10 m<math>\Omega</math></li><li>• 100 m<math>\Omega</math></li></ul>	<ul style="list-style-type: none"><li>• MIN (5½ digit)</li><li>• 1 <math>\mu\Omega</math></li><li>• 10 <math>\mu\Omega</math></li><li>• 100 <math>\mu\Omega</math></li><li>• 1 m<math>\Omega</math></li><li>• 10 m<math>\Omega</math></li></ul> MIN

## Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- For measuring low-resistance, a delayed response should be expected from the front panel display. For remote interface operation, increase the SCPI query timeout value. (Typically 15000 ms.)

## 4 CONFigure Subsystem

CONFigure:LRESistance

### Example 1

→ CONF:LRES

*This command configures the instrument for 4-wire low-resistance measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +2.931830E-03

### Example 2

→ CONF:LRES 1, 0.00001

*This command configures the instrument for 4-wire low-resistance measurements. The 1000 mΩ range is selected with 10 uΩ resolution.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +4.154700E-02

### See also

“CONFigure?” on page 86

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359



# CONFigure:CAPacitance

## Syntax

```
CONFigure:CAPacitance
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all capacitance measurement parameters and trigger parameters to their default values. Then, it configures the instrument for capacitance measurements but does not initiate the measurement.

### NOTE

The CONFigure:CAPacitance command does not place the instrument in the “wait-for-trigger” state. Use the INITiate[:IMMediate] or READ? command in conjunction with the CONFigure:CAPacitance to place the instrument in the “wait-for-trigger” state.

## Parameters

Item	Type	Range of values	Default value
range	Discrete	<ul style="list-style-type: none"> <li>• 1 nF MIN</li> <li>• 10 nF</li> <li>• 100 nF</li> <li>• 1 uF</li> <li>• 10 uF</li> <li>• 100 uF</li> <li>• 1 mF</li> <li>• 10 mF MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Discrete	<ul style="list-style-type: none"> <li>• MIN MAX (3½ digit)</li> <li>• 1 pF</li> <li>• 10 pF</li> <li>• 100 pF</li> <li>• 1 nF</li> <li>• 10 nF</li> <li>• 100 nF</li> <li>• 1 uF</li> <li>• 1 uF (4½ digit)</li> </ul>	MIN MAX

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 3½ digits (MIN|MAX) when the <resolution> parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- For measuring capacitance values greater than 1 mF, a delayed response should be expected from the front panel display. For remote interface operation, increase the SCPI query timeout value. (Typically > 10000 ms.)

### Example 1

→ CONF:CAP

*This command configures the instrument for capacitance measurements. The default range (autorange) and resolution (3½ digits) are used.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +4.545300E-11

### Example 2

→ CONF:CAP 100n, 100p

*This command configures the instrument for capacitance measurements. The 100 nF range is selected with 100 pF resolution.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +4.288699E-11

### See also

“CONFigure?” on page 86

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure:DIODE

### Syntax

CONFigure:DIODE

This command first resets all diode test parameters and trigger parameters to their default values. Then, it configures the instrument for diode tests but does not initiate the test.

### NOTE

The `CONFigure:DIODE` command does not place the instrument in the “wait-for-trigger” state. Use the `INITiate[:IMMEDIATE]` or `READ?` command in conjunction with the `CONFigure:DIODE` to place the instrument in the “wait-for-trigger” state.

### Remarks

- The range and resolution are fixed for diode tests. The range is 1 VDC (with a 1 mA or 0.83 mA current source output) and the resolution is set to 4½ digits.
- The voltage is displayed on the front panel if it is in the 0 V to 1.2 V range. The meter beeps when the signal transitions to the 0.3 V to 0.8 V threshold (unless beep is disabled). If the signal is greater than 1.2 V, “OPEN” is displayed on the front panel.
- The `FETCh?`, `READ?`, and `MEASure:DIODE?` commands all returns the measured voltage, regardless of its value.
- This command also sets the trigger source to “immediate” and clears all calculation functions.

### Example

→ CONF:DIOD

*This command configures the instrument for diode tests.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +1.321300E-01

### See also

“CONFigure?” on page 86

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure:FREQuency

### Syntax

```
CONFigure:FREQuency
```

This command first resets all frequency measurement parameters and trigger parameters to their default values. Then, it configures the instrument for frequency measurements but does not initiate the measurement.

There are two measuring paths for the frequency measurement – voltage or current. Therefore, before setting the frequency measurement, you have to configure the voltage (see “CONFigure[:VOLTage]:AC” on page 90) or current (see “CONFigure:CURRent:AC” on page 99) measurements first.

### NOTE

- The range and resolution of the frequency measurement follows the configuration of the AC voltage or the AC current function.
- The `CONFigure:FREQuency` command does not place the instrument in the “wait-for-trigger” state. Use the `INITiate[:IMMediate]` or `READ?` command in conjunction with the `CONFigure:FREQuency` to place the instrument in the “wait-for-trigger” state.

### CAUTION

If the frequency signal measured is below 20 Hz, you must manually set the range of the AC voltage or AC current measurement to acquire a stable reading.

### Remarks

- This command also sets the trigger source to “immediate” and clears all calculation functions.
- When no signal is applied, “0” is returned.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range

- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example

→ CONF:CURR:AC

*This command configures the instrument for AC current measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ CONF:FREQ

*This command configures the instrument for frequency measurements via the current path. The range and resolution follows the configuration of the AC current function.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +1.012300E+02

### See also

“CONFigure?” on page 86

“CONFigure[:VOLTage]:AC” on page 90

“CONFigure:CURRent:AC” on page 99

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure:PWIDth

### Syntax

```
CONFigure:PWIDth
```

This command first resets all pulse width measurement parameters and trigger parameters to their default values. Then, it configures the instrument for pulse width measurements but does not initiate the measurement.

There are two measuring paths for the pulse width measurement – voltage or current. Therefore, before setting the frequency measurement, you have to configure the voltage (see “CONFigure[:VOLTage]:AC” on page 90) or current (see “CONFigure:CURRent:AC” on page 99) measurements first.

### NOTE

- The range and resolution of the pulse width measurement follows the configuration of the AC voltage or the AC current function.
- The `CONFigure:PWIDth` command does not place the instrument in the “wait-for-trigger” state. Use the `INITiate[:IMMEDIATE]` or `READ?` command in conjunction with the `CONFigure:PWIDth` to place the instrument in the “wait-for-trigger” state.

### CAUTION

If the frequency signal measured is below 20 Hz, you must manually set the range of the AC voltage or AC current measurement to acquire a stable reading.

### Remarks

- This command also sets the trigger source to “immediate” and clears all calculation functions.
- When no signal is applied, “0” is returned.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range



- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example

→ CONF:AC

*This command configures the instrument for AC voltage measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ CONF:PWID

*This command configures the instrument for pulse width measurements via the voltage path. The range and resolution follows the configuration of the AC voltage function.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +2.403553E-05

### See also

“CONFigure?” on page 86

“CONFigure[:VOLTage]:AC” on page 90

“CONFigure:CURRENT:AC” on page 99

“INITiate[:IMMEDIATE]” on page 130

“FETCh?” on page 357

“READ?” on page 359

## CONFigure:DCYCLE

### Syntax

```
CONFigure:DCYCLE
```

This command first resets all duty cycle measurement parameters and trigger parameters to their default values. Then, it configures the instrument for duty cycle measurements but does not initiate the measurement.

There are two measuring paths for the duty cycle measurement – voltage or current. Therefore, before setting the frequency measurement, you have to configure the voltage (see “CONFigure[:VOLTage]:AC” on page 90) or current (see “CONFigure:CURRent:AC” on page 99) measurements first.

### NOTE

- The range and resolution of the duty cycle measurement follows the configuration of the AC voltage or the AC current function.
- The `CONFigure:DCYCLE` command does not place the instrument in the “wait-for-trigger” state. Use the `INITiate[:IMMEDIATE]` or `READ?` command in conjunction with the `CONFigure:DCYCLE` to place the instrument in the “wait-for-trigger” state.

### CAUTION

If the frequency signal measured is below 20 Hz, you must manually set the range of the AC voltage or AC current measurement to acquire a stable reading.

### Remarks

- This command also sets the trigger source to “immediate” and clears all calculation functions.
- When no signal is applied, “0” is returned.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range

- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example

→ CONF:AC

*This command configures the instrument for AC voltage measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ CONF:DCYC

*This command configures the instrument for duty cycle measurements via the voltage path. The range and resolution follows the configuration of the AC voltage function.*

→ READ?

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +4.982930E+01

### See also

“CONFigure?” on page 86

“CONFigure[:VOLTage]:AC” on page 90

“CONFigure:CURRent:AC” on page 99

“INITiate[:IMMediate]” on page 130

“FETCh?” on page 357

“READ?” on page 359

**4 CONFigure Subsystem**  
CONFigure:DCYClc

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

# **5**

## **INITiate Subsystem**

INITiate[:IMMEDIATE] 130

INITiate:CONTinuous 132

This chapter describes the INITiate commands used to program the U3606B over a remote interface. Use the INITiate commands to change the state of the triggering system in the U3606B.

## 5 INITiate Subsystem

INITiate[:IMMediate]

# INITiate[:IMMediate]

### Syntax

```
INITiate[:IMMediate]
```

This command changes the state of the triggering system from the “idle” state to the “wait-for-trigger” state. Measurements will begin when the specified trigger conditions are satisfied following the receipt of the `INITiate[:IMMediate]` command.

### NOTE

The `INITiate[:IMMediate]` command also clears the previous reading from memory.

---

### Remarks

- Storing readings in the memory using the `INITiate[:IMMediate]` command is faster than sending readings to the output buffer using the `READ?` command.
- To retrieve the readings from memory, use the `FETCh?` command. The `ABORt` command may be used to return to idle.

### Example

→ CONF 10, 0.0001

*This command configures the instrument for DC voltage measurements. The 10 V range is selected with 0.1 mV resolution.*

→ TRIG:SOUR BUS

*This command selects the bus (software) trigger source.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ \*TRG

*This command triggers the instrument.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +4.271500E-03

### See also

“FETCh?” on page 357

“READ?” on page 359

“ABORt” on page 356

“TRIGger:SOURce” on page 352

“\*TRG” on page 381

## INITiate:CONTInuous

### Syntax

```
INITiate:CONTInuous {0|1|OFF|ON}
```

This command sets the state of the initiate continuous mode. If the state is set to ON, the measurements will be in free run (continuous) mode and you can just use the FETCh? command to acquire readings without triggering the source multimeter.

- 0|OFF: Initiates triggering mode
- 1|ON: Initiates continuous mode

### NOTE

Sending the INITiate[:IMMEDIATE] and the READ? command will set the state of the initiate continuous mode to OFF.

```
INITiate:CONTInuous?
```

This query returns a boolean value that represents the initiate continuous mode.

### Parameter

Item	Type	Range of values	Default value
continuous	Boolean	0 1 OFF ON	1



### Example

→ CONF 10, 0.0001

*This command configures the instrument for DC voltage measurements. The 10 V range is selected with 0.1 mV resolution.*

→ INIT:CONT ON

*This command places the instrument in the free-run mode. Measurements are made continuously and the readings are stored in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +4.271500E-03

### See also

“INITiate[:IMMediate]” [on page 130](#)

“FETCh?” [on page 357](#)

“READ?” [on page 359](#)

**5 INITiate Subsystem**  
INITiate:CONTInuous

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

## **6 LOG Subsystem**

LOG[:STATe] 136  
LOG:DATA:DELeTe 138  
LOG:LOAD {DATA} 139  
LOG:DATA? 140

This chapter describes the the LOG commands used to control the data logging operations in the U3606B.

## LOG[:STATe]

### Syntax

LOG[:STATe] {0|1|OFF|ON}

This command starts or stops the U3606B data logging operation. Select 1 or ON to start the data logging operation, and select 0 or OFF to stop the data logging operation. If 1 or ON is selected, the U3606B will immediately begin the data logging operation.

### NOTE

The LOG annunciator on the U3606B display turns on for the entire duration of the data logging operation.

LOG[:STATe]?

This query returns a boolean value that represents the data logging status.

### Parameter

Item	Type	Range of values	Default value
state	Boolean	0 1 OFF ON	0

### Remarks

The data logging operation will be stopped automatically for the following cases:

- 1 The data logging operation is completed, or
- 2 The U3606B's memory is full.

If there is data stored in the U3606B, the new data will be appended to the old data. When the U3606B is recording, it will not accept any setting commands.

### Example

→ LOG ON

*This command starts the data logging operation.*

→ LOG?

*This query returns the status of the data logging operation.*

← 1

### See also

“LOG:DATA:DELeTe” [on page 138](#)

## LOG:DATA:DELeTe

### Syntax

```
LOG:DATA:DELeTe
```

This command deletes all the previously stored logging data in the U3606B's memory.

### Remarks

To perform memory sanitization and to clear all the logging data in the U3606B, you will have to send the `SYSTEM:DEFault` command.

### Example

```
→ LOG:DATA:DEL
```

*This command deletes all previously stored logging data.*

### See also

[“LOG\[:STATe\]” on page 136](#)

[“SYSTEM:DEFault” on page 337](#)

## LOG:LOAD {DATA}

### Syntax

```
LOG:LOAD {DATA}
```

This command sets the logging data's load index to the start point.

### Example

```
→ LOG:LOAD
```

*This command sets the logging data's load index to the start point.*

### See also

“LOG:DATA?” [on page 140](#)

## LOG:DATA?

### Syntax

LOG:DATA?

This query return the previously stored logging data according to the load index.

### Remarks

- Apply the LOG:LOAD DATA command to reset the load index to the start point.
- You will have to send the LOG:DATA? command multiple times to obtain all the logging data until the END response is received on your application. The data index could be changed if you send another command between the LOG:DATA? commands.

### Example

```
→ LOG:DATA?
```

*This query returns a previously stored logging data.*

```
← -1.200000E+02
```

```
→ LOG:DATA?
```

```
← END
```

### See also

“LOG:LOAD {DATA}” on page 139



## **7**

# **MEASure Subsystem**

MEASure[:VOLTage][:DC]? 142
MEASure[:VOLTage]:AC? 144
MEASure[:VOLTage]:ACDC DCAC? 147
MEASure:CURREnt[:DC]? 150
MEASure:CURREnt:AC? 152
MEASure:CURREnt:ACDC DCAC? 154
MEASure:RESistance? 156
MEASure:CONTinuity? 159
MEASure:LRESistance? 161
MEASure:CAPacitance? 163
MEASure:DIODE? 166
MEASure:FREQuency? 167
MEASure:PWIDth? 169
MEASure:DCYCLE? 171

This chapter describes the MEASure commands used to program the U3606B over a remote interface. The MEASure? command provides the easiest way to program the U3606B for measurements. When you execute this command, the U3606B immediately performs the measurement. The reading is sent directly to the U3606B output buffer.

### **NOTE**

Some measurements may result in a delayed response time in the U3606B Multimeter|DC Power Supply. It is recommended that you increase the SCPI query timeout to 15000 milliseconds or longer to avoid SCPI query timeout errors.

## MEASure[:VOLTage][:DC]?

### Syntax

```
MEASure[:VOLTage] [:DC]?
    [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all DC voltage measurement parameters and trigger parameters to their default values. Then, it configures the instrument for DC voltage measurements and immediately triggers a measurement. A single reading is returned.

### Parameters

Item	Type	Range of values		Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 20 mV MIN</li> <li>• 100 mV</li> <li>• 1 V</li> <li>• 10 V</li> <li>• 100 V</li> <li>• 1000 V MAX</li> <li>• AUTO</li> </ul>		AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> <li>• 100 mV</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 0.1 uV</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> </ul>	MIN

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).

- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example

→ MEAS?

*This command configures the instrument for DC voltage measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (autorange) and resolution (5½ digits) are used.*

← +9.983721E+00

### Example 2

→ MEAS? 1, 0.00001

*This command configures the instrument for DC voltage measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The 1 V range is selected with 10 µV resolution.*

← +4.271508E-03

## MEASure[:VOLTage]:AC?

### Syntax

```
MEASure[:VOLTage]:AC?
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all AC voltage measurement parameters and trigger parameters to their default values. Then, it configures the instrument for AC voltage measurements and immediately triggers a measurement. A single reading is returned.

### CAUTION

- The maximum range parameter is 750 V<sub>rms</sub>, which is set by MAX. The rms voltage is waveform dependent. A sine wave is limited to 750 V<sub>ac</sub> (rms), but a 1000 V<sub>pk</sub> square wave is safe. Connections to AC MAINS are further limited to CAT II (300V).
- See the “Safety Information” section in the *U3606B User's and Service Guide* for a complete discussion of the safety features, and the procedures for safe operation of this instrument.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 mV   MIN</li> <li>• 1 V</li> <li>• 10 V</li> <li>• 100 V</li> <li>• 750 V   MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> <li>• 100 mV</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> </ul>

## Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

## 7 MEASure Subsystem

MEASure[:VOLTage]:AC?

### Example 1

→ MEAS:AC?

*This command configures the instrument for AC voltage measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (autorange) and resolution (5½ digits) are used.*

← +3.769443E-03

### Example 2

→ MEAS:AC? 1

*This command configures the instrument for AC voltage measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The 1 V range is selected.*

← +1.516957E-03

## MEASure[:VOLTage]:ACDC | DCAC?

### Syntax

```
MEASure[:VOLTage]:ACDC | DCAC?
  [<range> | AUTO | MAX | MIN | DEF [, {<resolution> | MAX | MIN | DEF}]]
```

This command first resets all AC+DC voltage measurement parameters and trigger parameters to their default values. Then, it configures the instrument for AC+DC voltage measurements and immediately triggers a measurement. A single reading is returned.

### CAUTION

- The maximum range parameter is 750 V<sub>rms</sub>, which is set by MAX. The rms voltage is waveform dependent. A sine wave is limited to 750 V<sub>ac</sub> (rms), but a 1000 V<sub>pk</sub> square wave is safe. Connections to AC MAINS are further limited to CAT II (300V).
- See the “Safety Information” section in the *U3606B User's and Service Guide* for a complete discussion of the safety features, and the procedures for safe operation of this instrument.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 mV   MIN</li> <li>• 1 V</li> <li>• 10 V</li> <li>• 100 V</li> <li>• 750 V   MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> <li>• 100 mV</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> </ul>

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.



### Example 1

→ MEAS:ACDC?

*This command configures the instrument for AC+DC voltage measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (autorange) and resolution (5½ digits) are used.*

← +9.984319E+00

### Example 2

→ MEAS:ACDC? 10, 0.001

*This command configures the instrument for AC+DC voltage measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The 10 V range is selected with 1 mV resolution.*

← +9.9839877E+00

## MEASure:CURRent[:DC]?

### Syntax

```
MEASure:CURRent[:DC]?  
    [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all DC current measurement parameters and trigger parameters to their default values. Then, it configures the instrument for DC current measurements and immediately triggers a measurement. A single reading is returned.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"><li>• 10 mA   MIN</li><li>• 100 mA</li><li>• 1000 mA</li><li>• 3 A   MAX</li><li>• AUTO</li></ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"><li>• MAX (4½ digit)</li><li>• 1 uA</li><li>• 10 uA</li><li>• 100 uA</li><li>• 1 mA</li></ul>	<ul style="list-style-type: none"><li>• MIN (5½ digit)</li><li>• 0.1 uA</li><li>• 1 uA</li><li>• 10 uA</li><li>• 100 uA</li></ul> MIN

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.

- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- This command also sets the trigger source to “immediate” and clears all calculation functions.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example 1

→ MEAS:CURR?

*This command configures the instrument for DC current measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (autorange) and resolution (5½ digits) are used.*

← +0.203200E+00

### Example 2

→ MEAS:CURR? 1, 0.0001

*This command configures the instrument for DC current measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The 1 A range is selected with 100 µA resolution.*

← +0.223407E+00

## MEASure:CURRent:AC?

### Syntax

```
MEASure:CURRent:AC?  
    [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all AC current measurement parameters and trigger parameters to their default values. Then, it configures the instrument for AC current measurements and immediately triggers a measurement. A single reading is returned.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"><li>• 10 mA   MIN</li><li>• 100 mA</li><li>• 1000 mA</li><li>• 3 A   MAX</li><li>• AUTO</li></ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"><li>• MAX (4½ digit)</li><li>• 1 uA</li><li>• 10 uA</li><li>• 100 uA</li><li>• 1 mA</li></ul>	<ul style="list-style-type: none"><li>• MIN (5½ digit)</li><li>• 0.1 uA</li><li>• 1 uA</li><li>• 10 uA</li><li>• 100 uA</li></ul> MIN

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.

- Autorange thresholds:  
     Down range at: <10% of range  
     Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example 1

→ MEAS:CURR:AC?

*This command configures the instrument for AC current measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (autorange) and resolution (5½ digits) are used.*

← +8.545300E-02

### Example 2

→ MEAS:CURR:AC? 1, 0.0001

*This command configures the instrument for AC current measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The 1 A range is selected with 100 µA resolution.*

← +8.632510E-02

## MEASure:CURRent:ACDC | DCAC?

### Syntax

```
MEASure:CURRent:ACDC|DCAC?
  [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all AC+DC current measurement parameters and trigger parameters to their default values. Then, it configures the instrument for AC+DC current measurements and immediately triggers a measurement. A single reading is returned.

### Parameters

Item	Type	Range of values	Default value	
range	Numeric	<ul style="list-style-type: none"> <li>• 10 mA   MIN</li> <li>• 100 mA</li> <li>• 1000 mA</li> <li>• 3 A   MAX</li> <li>• AUTO</li> </ul>	AUTO	
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 1 uA</li> <li>• 10 uA</li> <li>• 100 uA</li> <li>• 1 mA</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 0.1 uA</li> <li>• 1 uA</li> <li>• 10 uA</li> <li>• 100 uA</li> </ul>	MIN

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

### Example 1

→ MEAS:CURR:ACDC?

*This command configures the instrument for AC+DC current measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (autorange) and resolution (5½ digits) are used.*

← +9.535700E-02

### Example 2

→ MEAS:CURR:ACDC? 1, 0.0001

*This command configures the instrument for AC+DC current measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The 1 A range is selected with 100 µA resolution.*

← +9.832310E-02

## MEASure:RESistance?

### Syntax

```
MEASure:RESistance?
    [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all resistance measurement parameters and trigger parameters to their default values. Then, it configures the instrument for 2-wire resistance measurements and immediately triggers a measurement. A single reading is returned.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 Ω MIN</li> <li>• 1 kΩ</li> <li>• 10 kΩ</li> <li>• 100 kΩ</li> <li>• 1 MΩ</li> <li>• 10 MΩ</li> <li>• 100 MΩ MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 mΩ</li> <li>• 100 mΩ</li> <li>• 1 Ω</li> <li>• 10 Ω</li> <li>• 100 Ω</li> <li>• 1 kΩ</li> <li>• 10 kΩ</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 1 mΩ</li> <li>• 10 mΩ</li> <li>• 100 mΩ</li> <li>• 1 Ω</li> <li>• 10 Ω</li> <li>• 100 Ω</li> <li>• 1 kΩ</li> </ul>



## Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

## 7 MEASure Subsystem

MEASure:RESistance?

### Example 1

→ MEAS:RES?

*This command configures the instrument for 2-wire resistance measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (autorange) and resolution (5½ digits) are used.*

← +1.321300E+04

### Example 2

→ MEAS:RES? 1000, 0.1

*This command configures the instrument for 2-wire resistance measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The 1000Ω range is selected with 0.1 Ω resolution.*

← +4.271500E+02

## MEASure:CONTInuity?

### Syntax

```
MEASure:CONTInuity?
    [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all continuity test parameters and trigger parameters to their default values. Then, it configures the instrument for continuity tests and immediately triggers the test. Continuity is a special type of fixed-range 2-wire resistance measurement. A single reading is returned.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 Ω MIN</li> <li>• 1 kΩ</li> <li>• 10 kΩ</li> <li>• 100 kΩ</li> <li>• 1 MΩ</li> <li>• 10 MΩ</li> <li>• 100 MΩ MAX</li> <li>• AUTO</li> </ul>	1 kΩ
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX MIN (4½ digit)</li> <li>• 10 mΩ</li> <li>• 100 mΩ</li> <li>• 1 Ω</li> <li>• 10 Ω</li> <li>• 100 Ω</li> <li>• 1 kΩ</li> <li>• 10 kΩ</li> </ul>	MAX MIN

### Remarks

- The range is set to 1 kΩ (1 kΩ) when the <range> parameter is omitted.
- The resolution is set 4½ digits (MAX|MIN) when the <resolution> parameter is omitted.

## 7 MEASure Subsystem

### MEASure:CONTInuity?

- From 10  $\Omega$  to 1.2 k $\Omega$  the actual resistance reading is displayed on the front pane. If the reading exceeds 1.2 k $\Omega$ , “OPEn” is displayed on the front panel.
- The MEASure:CONTInuity? command returns the measured resistance, regardless of its value.

### Example

```
→ MEAS:CONT?
```

*This command configures the instrument for continuity measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (1 k $\Omega$ ) and resolution (4½ digits) are used.*

```
← +1.721500E-02
```

## MEASure:LRESistance?

### Syntax

```
MEASure:LRESistance?
    [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all low-resistance measurement parameters and trigger parameters to their default values. Then, it configures the instrument for 4-wire low-resistance measurements and immediately triggers a measurement. A single reading is returned.

### Parameters

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 mΩ MIN</li> <li>• 1000 mΩ</li> <li>• 10 Ω</li> <li>• 100 Ω</li> <li>• 1000 Ω MAX</li> <li>• AUTO DEF</li> </ul>	AUTO
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 uΩ</li> <li>• 100 uΩ</li> <li>• 1 mΩ</li> <li>• 10 mΩ</li> <li>• 100 mΩ</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit)</li> <li>• 1 uΩ</li> <li>• 10 uΩ</li> <li>• 100 uΩ</li> <li>• 1 mΩ</li> <li>• 10 mΩ</li> </ul>

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 5½ digits (MIN) when the <resolution> parameter is omitted.

## 7 MEASure Subsystem

MEASure:LRESistance?

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- For measuring low-resistance a delayed response should be expected from the front panel display. For remote interface operation, increase the SCPI query timeout value. (Typically 15000 ms.)

### Example 1

```
→ MEAS:LRES?
```

*This command configures the instrument for 4-wire low-resistance measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (autorange) and resolution (5½ digits) are used.*

```
← +2.931830E-03
```

### Example 2

```
→ MEAS:LRES? 1, 0.00001
```

*This command configures the instrument for 4-wire low-resistance measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The 1000 mΩ range is selected with 10 uΩ resolution.*

```
← +4.154700E-02
```

## MEASure:CAPacitance?

### Syntax

```
MEASure:CAPacitance?
    [<range>|AUTO|MAX|MIN|DEF[, {<resolution>|MAX|MIN|DEF}]]
```

This command first resets all capacitance measurement parameters and trigger parameters to their default values. Then, it configures the instrument for capacitance measurements and immediately triggers a measurement. A single reading is returned.

### Parameters

Item	Type	Range of values	Default value
range	Discrete	<ul style="list-style-type: none"> <li>• 1 nF MIN</li> <li>• 10 nF</li> <li>• 100 nF</li> <li>• 1 uF</li> <li>• 10 uF</li> <li>• 100 uF</li> <li>• 1 mF</li> <li>• 10 mF MAX</li> <li>• AUTO</li> </ul>	AUTO
resolution	Discrete	<ul style="list-style-type: none"> <li>• MIN MAX (3½ digit)</li> <li>• 1 pF</li> <li>• 10 pF</li> <li>• 100 pF</li> <li>• 1 nF</li> <li>• 10 nF</li> <li>• 100 nF</li> <li>• 1 uF</li> <li>• 1 uF (4½ digit)</li> </ul>	MIN MAX

### Remarks

- You can allow the instrument to automatically select the measurement range using autoranging or you can select a fixed range using manual ranging. Autoranging is convenient because the instrument decides which range to use for each measurement based on the input signal. For faster measurements, use manual ranging on each measurement (some additional time is required for autoranging since the instrument has to make a range selection).
- The range is set to autoranging (AUTO) when the <range> parameter is omitted. The resolution is set 3½ digits (MIN|MAX) when the <resolution> parameter is omitted.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- For measuring capacitance values greater than 1 mF, a delayed response should be expected from the front panel display. For remote interface operation, increase the SCPI query timeout value. (Typically > 10000 ms.)



### Example 1

→ MEAS:CAP?

*This command configures the instrument for capacitance measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The default range (autorange) and resolution (3½ digits) are used.*

← +4.545300E-11

### Example 2

→ MEAS:CAP? 100n, 100p

*This command configures the instrument for capacitance measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The 100 nF range is selected with 100 pF resolution.*

← +4.288699E-11

## MEASure:DIODe?

### Syntax

```
MEASure:DIODe?
```

This command first resets all diode test parameters and trigger parameters to their default values. Then, it configures the instrument for diode tests and immediately triggers the test. A single reading is returned.

### Remarks

- The range and resolution are fixed for diode tests. The range is 1 VDC (with a 1 mA current source output) and the resolution is set to 4½ digits.
- The voltage is displayed on the front panel if it is in the 0 V to 1.2 V range. The meter beeps when the signal transitions to the 0.3 V to 0.8 V threshold (unless beep is disabled). If the signal is greater than 1.2 V, “OPEN” is displayed on the front panel.
- The MEASure:DIODe? command returns the measured voltage, regardless of its value.

### Example

```
→ MEAS:DIOD?
```

*This command configures the instrument for continuity measurements, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer.*

```
← +1.321300E-01
```

## MEASure:FREQuency?

### Syntax

MEASure:FREQuency?

This command first resets all frequency measurement parameters and trigger parameters to their default values. Then, it configures the instrument for frequency measurements and immediately triggers a measurement. A single reading is returned.

There are two measuring paths for the frequency measurement – voltage or current. Therefore, before setting the frequency measurement, you have to configure the voltage (see “MEASure[:VOLTage]:AC?” on page 144) or current (see “MEASure:CURRent:AC?” on page 152) measurements first.

### NOTE

The range and resolution of the frequency measurement follows the configuration of the AC voltage or the AC current function.

### CAUTION

If the frequency signal measured is below 20 Hz, you must manually set the range of the AC voltage or AC current measurement to acquire a stable reading.

### Remarks

- When no signal is applied, “0” is returned.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

## 7 MEASure Subsystem

MEASure:FREQuency?

### Example

→ CONF:CURR:AC

*This command configures the instrument for AC current measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ MEAS:FREQ?

*This command configures the instrument for continuity measurements via the current path, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The range and resolution follows the configuration of the AC current function.*

← +1.012300E+02

### See also

“MEASure[:VOLTage][:DC]?” on page 142

“MEASure[:VOLTage]:AC?” on page 144

“MEASure:CURRent:AC?” on page 152

## MEASure:PWIDth?

### Syntax

MEASure:PWIDth?

This command first resets all pulse width measurement parameters and trigger parameters to their default values. Then, it configures the instrument for pulse width measurements and immediately triggers a measurement. A single reading is returned.

There are two measuring paths for the pulse width measurement – voltage or current. Therefore, before setting the frequency measurement, you have to configure the voltage (see “MEASure[:VOLTage]:AC?” on page 144) or current (see “MEASure:CURRent:AC?” on page 152) measurements first.

### NOTE

The range and resolution of the pulse width measurement follows the configuration of the AC voltage or the AC current function.

### CAUTION

If the frequency signal measured is below 20 Hz, you must manually set the range of the AC voltage or AC current measurement to acquire a stable reading.

### Remarks

- When no signal is applied, “0” is returned.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

## 7 MEASure Subsystem

MEASure:PWIDth?

### Example

→ CONF:AC

*This command configures the instrument for AC voltage measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ MEAS:PWID?

*This command configures the instrument for pulse width measurements via the current path, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The range and resolution follows the configuration of the AC current function.*

← +2.403553E-05

### See also

“MEASure[:VOLTage][:DC]?” on page 142

“MEASure[:VOLTage]:AC?” on page 144

“MEASure:CURRENT:AC?” on page 152

## MEASure:DCYClE?

### Syntax

MEASure:DCYClE?

This command first resets all duty cycle measurement parameters and trigger parameters to their default values. Then, it configures the instrument for duty cycle measurements and immediately triggers a measurement. A single reading is returned.

There are two measuring paths for the duty cycle measurement – voltage or current. Therefore, before setting the frequency measurement, you have to configure the voltage (see “MEASure[:VOLTage]:AC?” on page 144) or current (see “MEASure:CURRent:AC?” on page 152) measurements first.

### NOTE

The range and resolution of the duty cycle measurement follows the configuration of the AC voltage or the AC current function.

### CAUTION

If the frequency signal measured is below 20 Hz, you must manually set the range of the AC voltage or AC current measurement to acquire a stable reading.

### Remarks

- When no signal is applied, “0” is returned.
- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.

## 7 MEASure Subsystem

MEASure:DCYCl?

### Example

→ CONF:AC

*This command configures the instrument for AC voltage measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ MEAS:DCYC?

*This command configures the instrument for duty cycle measurements via the voltage path, triggers the instrument to take a reading, and then transfers the reading to the instrument output buffer. The range and resolution follows the configuration of the AC voltage function.*

← +4.982930E+01

### See also

“MEASure[:VOLTage][:DC]?” on page 142

“MEASure[:VOLTage]:AC?” on page 144

“MEASure:CURREnt:AC?” on page 152



# **8**

## **MEMory Subsystem**

MEMory:STATe:RECall:AUTO 180

This chapter describes the MEMory commands used to program the U3606B over a remote interface. Use the `MEMory:STATe:RECall:AUTO` command to enable or disable the automatic recall of the last power-off state when the power is cycled in the instrument.

## MEMory:STATe:RECall:AUTO

### Syntax

MEMory:STATe:RECall:AUTO {0|1|OFF|ON}

This command disables or enables the automatic recall of the last power-down instrument state when power is turned on.

The valid options are:

- 1|ON: Automatically recalls the last power-off state (storage location 0) when the power is cycled.
- 0|OFF: A factory reset is issued when the power is cycled.

MEMory:STATe:RECall:AUTO?

This query returns a boolean value that represents the automatic recall status of the source multimeter.

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- With the \*SAV command, you can use location 0 as an extra instrument state. However, keep in mind that location is automatically overwritten with the power-down state when power is cycled.
- When shipped from the factory, storage locations 1 through 16 are empty and the instrument is configured such that a Factory Reset (\*RST command) is issued when power is cycled.
- A Factory Reset (\*RST command) does not affect the mode set.

### Example

```
→ MEM:STAT:REC:AUTO OFF
```

*This command disables the automatic recall of the last power-down state.*

```
→ MEM:STAT:REC:AUTO?
```

*This query returns the automatic recall setting.*

```
← 0
```

### See also

[“\\*RCL” on page 369](#)

[“\\*RST” on page 371](#)

[“\\*SAV” on page 375](#)

**8 MEMory Subsystem**  
MEMory:STATe:RECall:AUTO

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

# **9**

## **OUTPut Subsystem**

OUTPut[:STATe] 184

This chapter describes the OUTPut commands used to program the U3606B over a remote interface. Use the `OUTPut[:STATe]` command to enable or disable (standby mode) the output of the instrument.

## OUTPut[:STATe]

### Syntax

```
OUTPut[:STATe] {0|1|OFF|ON}
```

This command enables or disables (output on standby) the source output of the source multimeter.

The valid options are:

- 0|OFF: Output is on standby (the SBY annunciator turns on).
- 1|ON: Output is active (the OUT annunciator turns on).

### NOTE

The ramp and scan output will be restarted when output is enabled.

```
OUTPut[:STATe]?
```

This query returns a boolean value that represents the instrument output state. A returned value of “1” indicates that the output is currently active. A returned value of “0” indicates that the output is currently on standby.

### Parameter

Item	Type	Range of values	Default value
state	Boolean	0 1 OFF ON	0

### Example

```
→ OUTP ON
```

*This command enables the instrument output.*

```
→ OUTP?
```

*This query returns the output status of the instrument.*

```
← 1
```

# 10

## SENSe Subsystem

[SENSe:]FUNctIon[:ON]	187
[SENSe:]VOLTage[:DC]:RANGe[:UPPer]	189
[SENSe:]VOLTage[:DC]:RANGe:AUTO	191
[SENSe:]VOLTage[:DC]:RESolution	193
[SENSe:]VOLTage:AC:RANGe[:UPPer]	195
[SENSe:]VOLTage:AC:RANGe:AUTO	197
[SENSe:]VOLTage:AC:RESolution	199
[SENSe:]VOLTage:ACDC DCAC:RANGe[:UPPer]	201
[SENSe:]VOLTage:ACDC DCAC:RANGe:AUTO	203
[SENSe:]VOLTage:ACDC DCAC:RESolution	205
[SENSe:]CURRent[:DC]:RANGe[:UPPer]	207
[SENSe:]CURRent[:DC]:RANGe:AUTO	209
[SENSe:]CURRent[:DC]:RESolution	211
[SENSe:]CURRent:AC:RANGe[:UPPer]	213
[SENSe:]CURRent:AC:RANGe:AUTO	215
[SENSe:]CURRent:AC:RESolution	217
[SENSe:]CURRent:ACDC DCAC:RANGe[:UPPer]	219
[SENSe:]CURRent:ACDC DCAC:RANGe:AUTO	221
[SENSe:]CURRent:ACDC DCAC:RESolution	223
[SENSe:]RESistance:RANGe[:UPPer]	225
[SENSe:]RESistance:RANGe:AUTO	227
[SENSe:]RESistance:RESolution	229
[SENSe:]CONTInuity:RANGe[:UPPer]	231
[SENSe:]CONTInuity:RANGe:AUTO	233
[SENSe:]LRESistance:RANGe[:UPPer]	235
[SENSe:]LRESistance:RANGe:AUTO	237
[SENSe:]LRESistance:RESolution	239
[SENSe:]LRESistance:COMPensation	241

[SENSE:]CAPacitance:RANGe[:UPPer]	242
[SENSE:]CAPacitance:RANGe:AUTO	244
[SENSE:]FREQuency:VOLTage:RANGe[:UPPer]	246
[SENSE:]FREQuency:VOLTage:RANGe:AUTO	248
[SENSE:]PWIDth:VOLTage:RANGe[:UPPer]	250
[SENSE:]PWIDth:VOLTage:RANGe:AUTO	252
[SENSE:]DCYClE:VOLTage:RANGe[:UPPer]	254
[SENSE:]DCYClE:VOLTage:RANGe:AUTO	256
[SENSE:]FREQuency:CURRent:RANGe[:UPPer]	258
[SENSE:]FREQuency:CURRent:RANGe:AUTO	260
[SENSE:]PWIDth:CURRent:RANGe[:UPPer]	262
[SENSE:]PWIDth:CURRent:RANGe:AUTO	264
[SENSE:]DCYClE:CURRent:RANGe[:UPPer]	266
[SENSE:]DCYClE:CURRent:RANGe:AUTO	268

This chapter describes the SENSE commands used to program the U3606B over a remote interface. Use the SENSE commands to select a the range, and resolution settings for each measurement function.



## [SENSe:]FUNCTion[:ON]

### Syntax

[SENSe:]FUNCTion[:ON] "<function>"

This command selects the measurement function (all function-related measurement attributes are retained).

[SENSe:]FUNCTion[:ON] ?

This query returns a string value that represents the present measurement function. The short form of the function name is always returned (for example, CURR:AC, FREQ:VOLT, and so on).

### Parameter

Item	Type	Range of values	Default value
function	Discrete	Desired function enclosed in quotes: <ul style="list-style-type: none"> <li>• CAPacitance</li> <li>• CONTInuity</li> <li>• CURRent:AC</li> <li>• CURRent:ACDC</li> <li>• CURRent:DCAC</li> <li>• CURRent[:DC]</li> <li>• DIODE</li> <li>• FREQuency</li> <li>• PWIDth</li> <li>• DCYClE</li> <li>• RESistance</li> <li>• LRESistance</li> <li>• VOLTage:AC</li> <li>• VOLTage:ACDC</li> <li>• VOLTage:DCAC</li> <li>• VOLTage[:DC]</li> </ul>	-

## 10 SENSE Subsystem

[SENSe:]FUNcTion[:ON]

### Remarks

- If you change the measurement function, all measurement attributes of the previous function (range, resolution, and so on) are remembered. If you return to the original function, all previously-defined measurement attributes will be restored.
- This command has no default value. However, the instrument defaults to DC voltage measurement after a Factory Reset (\*RST command).

### Example

```
→ FUNC "VOLT:AC"
```

*This command selects the AC voltage function (double or single quotes are allowed).*

```
→ FUNC?
```

*This query returns the function selected.*

```
← VOLT:AC
```

### See also

“CONFigure Subsystem” [on page 85](#)

## [SENSe:]VOLTage[:DC]:RANGe[:UPPer]

### Syntax

[SENSe:]VOLTage[:DC]:RANGe[:UPPer] {<range>|MIN|MAX|DEF}

This command selects the measurement range for DC voltage measurements.

[SENSe:]VOLTage[:DC]:RANGe[:UPPer]? [ {MIN|MAX} ]

This query returns a numeric value that represents the DC voltage measurement range.

### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 20 mV MIN</li> <li>• 100 mV</li> <li>• 1 V</li> <li>• 10 V</li> <li>• 100 V</li> <li>• 1000 V MAX</li> <li>• DEF (AUTO)</li> </ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 100 mV, with autoranging enabled, after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]VOLTage[:DC]:RANGe[:UPPer]

### Example

```
→ VOLT:RANG 10
```

*This command selects the 10 V range.*

```
→ VOLT:RANG?
```

*This query returns the range selected.*

```
← +1.000000E+01
```

### See also

“CONFigure[:VOLTage][:DC]” on page 87

“[SENSe:]VOLTage[:DC]:RANGe:AUTO” on page 191

## [SENSe:]VOLTage[:DC]:RANGe:AUTO

### Syntax

```
[SENSe:]VOLTage[:DC]:RANGe:AUTO <mode>
```

This command disables or enables autoranging for DC voltage measurements. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]VOLTage[:DC]:RANGe:AUTO?
```

This query returns a boolean value that represents the DC voltage autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]VOLTage[:DC]:RANGe[:UPPer]” on page 189) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]VOLTage[:DC]:RANGe:AUTO

### Example

```
→ VOLT:RANG:AUTO OFF
```

*This command disables autoranging.*

```
→ VOLT:RANG:AUTO?
```

*This query returns the autoranging setting.*

```
← 0
```

### See also

“CONFigure[:VOLTage][:DC]” on page 87

“[SENSe:]VOLTage[:DC]:RANGe[:UPPer]” on page 189

## [SENSe:]VOLTage[:DC]:RESolution

### Syntax

```
[SENSe:]VOLTage[:DC]:RESolution {<resolution>|MIN|MAX|DEF}
```

This command selects the measurement resolution for DC voltage measurements. Specify the resolution in the same units as the selected measurement function, not in number of digits.

```
[SENSe:]VOLTage[:DC]:RESolution? [{MIN|MAX}]
```

The query returns a numeric value that represents the DC voltage resolution.

### Parameter

Item	Type	Range of values	Default value
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> <li>• 100 mV</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit) DEF</li> <li>• 0.1 uV</li> <li>• 1 uV</li> <li>• 10 uV</li> <li>• 100 uV</li> <li>• 1 mV</li> <li>• 10 mV</li> </ul>

### Remarks

- For the <resolution> parameter, you can substitute MIN or MAX for a numeric value. MIN selects the smallest value accepted, which gives the highest resolution; MAX selects the largest value accepted, which gives the least resolution.
- The instrument sets the resolution to 5½ digits after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]VOLTage[:DC]:RESolution

### Example

```
→ VOLT:RES 1E-03
```

*This command sets the measurement resolution to 1 mV.*

```
→ VOLT:RES?
```

*This query returns the resolution selected.*

```
← +1.000000E-03
```

### See also

“CONFigure[:VOLTage][:DC]” on [page 87](#)



## [SENSe:]VOLTage:AC:RANGe[:UPPer]

### Syntax

[SENSe:]VOLTage:AC:RANGe[:UPPer] {<range>|MIN|MAX|DEF}

This command selects the measurement range for AC voltage measurements.

[SENSe:]VOLTage:AC:RANGe[:UPPer]? [ {MIN|MAX} ]

This query returns a numeric value that represents the AC voltage measurement range.

### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 mV MIN</li> <li>• 1 V</li> <li>• 10 V</li> <li>• 100 V</li> <li>• 1000 V MAX</li> <li>• DEF (AUTO)</li> </ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 100 mV, with autoranging enabled, after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]VOLTage:AC:RANGe[:UPPer]

### Example

```
→ VOLT:AC:RANG 10
```

*This command selects the 10 V range.*

```
→ VOLT:AC:RANG?
```

*This query returns the range selected.*

```
← +1.000000E+01
```

### See also

“CONFigure[:VOLTage]:AC” on page 90

“[SENSe:]VOLTage:AC:RANGe:AUTO” on page 197

## [SENSE:]VOLTage:AC:RANGe:AUTO

### Syntax

```
[SENSE:]VOLTage:AC:RANGe:AUTO <mode>
```

This command disables or enables autoranging for AC voltage measurements. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSE:]VOLTage:AC:RANGe:AUTO?
```

This query returns a boolean value that represents the AC voltage autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSE:]VOLTage:AC:RANGe[:UPPer]” on page 195) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]VOLTage:AC:RANGe:AUTO

### Example

```
→ VOLT:RANG:AC:AUTO OFF           This command disables autoranging.  
→ VOLT:RANG:AC:AUTO?             This query returns the autoranging setting.  
← 0
```

### See also

“CONFigure[:VOLTage]:AC” [on page 90](#)

“[SENSe:]VOLTage:AC:RANGe[:UPPer]” [on page 195](#)

## [SENSe:]VOLTage:AC:RESolution

### Syntax

[SENSe:]VOLTage:AC:RESolution {<resolution>|MIN|MAX|DEF}

This command selects the measurement resolution for AC voltage measurements. Specify the resolution in the same units as the selected measurement function, not in number of digits.

[SENSe:]VOLTage:AC:RESolution? [{MIN|MAX}]

The query returns a numeric value that represents the AC voltage resolution.

### Parameter

Item	Type	Range of values	Default value	
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 µV</li> <li>• 100 µV</li> <li>• 1 mV</li> <li>• 10 mV</li> <li>• 100 mV</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit) DEF</li> <li>• 1 µV</li> <li>• 10 µV</li> <li>• 100 µV</li> <li>• 1 mV</li> <li>• 10 mV</li> </ul>	MIN

### Remarks

- For the <resolution> parameter, you can substitute MIN or MAX for a numeric value. MIN selects the smallest value accepted, which gives the highest resolution; MAX selects the largest value accepted, which gives the least resolution.
- The instrument sets the resolution to 5½ digits after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]VOLTage:AC:RESolution

### Example

```
→ VOLT:AC:RES 1E-03
```

*This command sets the measurement resolution to 1 mV.*

```
→ VOLT:AC:RES?
```

*This query returns the resolution selected.*

```
← +1.000000E-03
```

### See also

“CONFigure[:VOLTage]:AC” on [page 90](#)

## [SENSe:]VOLTage:ACDC | DCAC:RANGe[:UPPer]

### Syntax

```
[SENSe:]VOLTage:ACDC|DCAC:RANGe[:UPPer]
  {<range>|MIN|MAX|DEF}
```

This command selects the measurement range for AC+DC voltage measurements.

```
[SENSe:]VOLTage:ACDC|DCAC:RANGe[:UPPer]? [{MIN|MAX}]
```

This query returns a numeric value that represents the AC+DC voltage measurement range.

### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 mV MIN</li> <li>• 1 V</li> <li>• 10 V</li> <li>• 100 V</li> <li>• 1000 V MAX</li> <li>• DEF (AUTO)</li> </ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 100 mV, with autoranging enabled, after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]VOLTage:ACDC|DCAC:RANGe[:UPPer]

### Example

→ VOLT:ACDC:RANG 10 *This command selects the 10 V range.*

→ VOLT:ACDC:RANG? *This query returns the range selected.*

← +1.000000E+01

### See also

“CONFigure[:VOLTage]:ACDC|DCAC” on page 93

“[SENSe:]VOLTage:ACDC|DCAC:RANGe:AUTO” on page 203



## [SENSe:]VOLTage:ACDC | DCAC:RANGe:AUTO

### Syntax

```
[SENSe:]VOLTage:ACDC|DCAC:RANGe:AUTO <mode>
```

This command disables or enables autoranging for AC+DC voltage measurements. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]VOLTage:ACDC|DCAC:RANGe:AUTO?
```

This query returns a boolean value that represents the AC+DC voltage autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]VOLTage:ACDC|DCAC:RANGe[:UPPer]” on page 201) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]VOLTage:ACDC|DCAC:RANGe:AUTO

### Example

```
→ VOLT:RANG:ACDC:AUTO OFF      This command disables autoranging.
→ VOLT:RANG:ACDC:AUTO?        This query returns the autoranging setting.
← 0
```

### See also

“CONFigure[:VOLTage]:ACDC|DCAC” [on page 93](#)

“[SENSe:]VOLTage:ACDC|DCAC:RANGe[:UPPer]” [on page 201](#)

## [SENSe:]VOLTage:ACDC | DCAC:RESolution

### Syntax

```
[SENSe:]VOLTage:ACDC|DCAC:RESolution
  {<resolution>|MIN|MAX|DEF}
```

This command selects the measurement resolution for AC+DC voltage measurements. Specify the resolution in the same units as the selected measurement function, not in number of digits.

```
[SENSe:]VOLTage:ACDC|DCAC:RESolution? [{MIN|MAX}]
```

The query returns a numeric value that represents the AC+DC voltage resolution.

### Parameter

Item	Type	Range of values	Default value	
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 <math>\mu</math>V</li> <li>• 100 <math>\mu</math>V</li> <li>• 1 mV</li> <li>• 10 mV</li> <li>• 100 mV</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit) DEF</li> <li>• 1 <math>\mu</math>V</li> <li>• 10 <math>\mu</math>V</li> <li>• 100 <math>\mu</math>V</li> <li>• 1 mV</li> <li>• 10 mV</li> </ul>	MIN

### Remarks

- For the <resolution> parameter, you can substitute MIN or MAX for a numeric value. MIN selects the smallest value accepted, which gives the highest resolution; MAX selects the largest value accepted, which gives the least resolution.
- The instrument sets the resolution to 5½ digits after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]VOLTage:ACDC|DCAC:RESolution

### Example

```
→ VOLT:ACDC:RES 1E-03
```

*This command sets the measurement resolution to 1 mV.*

```
→ VOLT:ACDC:RES?
```

*This query returns the resolution selected.*

```
← +1.000000E-03
```

### See also

“CONFigure[:VOLTage]:ACDC|DCAC” [on page 93](#)

## [SENSe:]CURRent[:DC]:RANGe[:UPPer]

### Syntax

[SENSe:]CURRent[:DC]:RANGe[:UPPer] {<range>|MIN|MAX|DEF}

This command selects the measurement range for DC current measurements.

[SENSe:]CURRent[:DC]:RANGe[:UPPer]? [{MIN|MAX}]

This query returns a numeric value that represents the DC current measurement range.

### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 10 mA MIN</li> <li>• 100 mA</li> <li>• 1000 mA</li> <li>• 3 A MAX</li> <li>• DEF (AUTO)</li> </ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 10 mA, with autoranging enabled, after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CURRent[:DC]:RANGe[:UPPer]

### Example

```
→ CURR:RANG 0.1
```

*This command selects the 100 mA range.*

```
→ CURR:RANG?
```

*This query returns the range selected.*

```
← +1.000000E-01
```

### See also

“CONFigure:CURRent[:DC]” [on page 96](#)

“[SENSe:]CURRent[:DC]:RANGe:AUTO” [on page 209](#)

## [SENSE:]CURRENT[:DC]:RANGE:AUTO

### Syntax

```
[SENSE:]CURRENT[:DC]:RANGE:AUTO <mode>
```

This command disables or enables autoranging for DC current measurements. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSE:]CURRENT[:DC]:RANGE:AUTO?
```

This query returns a boolean value that represents the DC current autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSE:]CURRENT[:DC]:RANGE[:UPPER]” on page 207) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CURRent[:DC]:RANGe:AUTO

### Example

```
→ CURR : RANG : AUTO OFF
```

*This command disables autoranging.*

```
→ CURR : RANG : AUTO?
```

*This query returns the autoranging setting.*

```
← 0
```

### See also

“CONFigure:CURRent[:DC]” [on page 96](#)

“[SENSe:]CURRent[:DC]:RANGe[:UPPer]” [on page 207](#)



## [SENSe:]CURRent[:DC]:RESolution

### Syntax

```
[SENSe:]CURRent[:DC]:RESolution {<resolution>|MIN|MAX|DEF}
```

This command selects the measurement resolution for DC current measurements. Specify the resolution in the same units as the selected measurement function, not in number of digits.

```
[SENSe:]CURRent[:DC]:RESolution? [{MIN|MAX}]
```

The query returns a numeric value that represents the DC current resolution.

### Parameter

Item	Type	Range of values	Default value
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 1 µA</li> <li>• 10 µA</li> <li>• 100 µA</li> <li>• 1 mA</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit) DEF</li> <li>• 0.1 µA</li> <li>• 1 µA</li> <li>• 10 µA</li> <li>• 100 µA</li> </ul>
			MIN

### Remarks

- For the <resolution> parameter, you can substitute MIN or MAX for a numeric value. MIN selects the smallest value accepted, which gives the highest resolution; MAX selects the largest value accepted, which gives the least resolution.
- The instrument sets the resolution to 5½ digits after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CURRent[:DC]:RESolution

### Example

```
→ CURR:RES 1E-03
```

*This command sets the measurement resolution to 1 mA.*

```
→ CURR:RES?
```

*This query returns the resolution selected.*

```
← +1.000000E-03
```

### See also

“CONFigure:CURRent[:DC]” [on page 96](#)

## [SENSe:]CURRent:AC:RANGe[:UPPer]

### Syntax

```
[SENSe:]CURRent:AC:RANGe[:UPPer] {<range>|MIN|MAX|DEF}
```

This command selects the measurement range for AC current measurements.

```
[SENSe:]CURRent:AC:RANGe[:UPPer]? [ {MIN|MAX} ]
```

This query returns a numeric value that represents the AC current measurement range.

### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 10 mA MIN</li> <li>• 100 mA</li> <li>• 1000 mA</li> <li>• 3 A MAX</li> <li>• DEF (AUTO)</li> </ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 10 mA, with autoranging enabled, after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CURRent:AC:RANGe[:UPPer]

### Example

```
→ CURR:AC:RANG 0.1
```

*This command selects the 100 mA range.*

```
→ CURR:AC:RANG?
```

*This query returns the range selected.*

```
← +1.000000E-01
```

### See also

“CONFigure:CURRent:AC” on page 99

“[SENSe:]CURRent:AC:RANGe:AUTO” on page 215

## [SENSe:]CURRent:AC:RANGe:AUTO

### Syntax

```
[SENSe:]CURRent:AC:RANGe:AUTO <mode>
```

This command disables or enables autoranging for AC current measurements. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]CURRent:AC:RANGe:AUTO?
```

This query returns a boolean value that represents the AC current autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]CURRent:AC:RANGe[:UPPer]” on page 213) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CURRent:AC:RANGe:AUTO

### Example

```
→ CURR : AC : RANG : AUTO OFF      This command disables autoranging.
→ CURR : AC : RANG : AUTO?         This query returns the autoranging setting.
← 0
```

### See also

“CONFigure:CURRent:AC” [on page 99](#)

“[SENSe:]CURRent:AC:RANGe[:UPPer]” [on page 213](#)

## [SENSe:]CURRent:AC:RESolution

### Syntax

[SENSe:]CURRent:AC:RESolution {<resolution>|MIN|MAX|DEF}

This command selects the measurement resolution for AC current measurements. Specify the resolution in the same units as the selected measurement function, not in number of digits.

[SENSe:]CURRent:AC:RESolution? [{MIN|MAX}]

The query returns a numeric value that represents the AC current resolution.

### Parameter

Item	Type	Range of values	Default value
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 1 uA</li> <li>• 10 uA</li> <li>• 100 uA</li> <li>• 1 mA</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit) DEF</li> <li>• 0.1 uA</li> <li>• 1 uA</li> <li>• 10 uA</li> <li>• 100 uA</li> </ul>

### Remarks

- For the <resolution> parameter, you can substitute MIN or MAX for a numeric value. MIN selects the smallest value accepted, which gives the highest resolution; MAX selects the largest value accepted, which gives the least resolution.
- The instrument sets the resolution to 5½ digits after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CURRent:AC:RESolution

### Example

```
→ CURR:AC:RES 1E-03
```

*This command sets the measurement resolution to 1 mA.*

```
→ CURR:AC:RES?
```

*This query returns the resolution selected.*

```
← +1.000000E-03
```

### See also

“CONFigure:CURRent:AC” on page 99



## [SENSe:]CURRENT:ACDC | DCAC:RANGe[:UPPer]

### Syntax

```
[SENSe:]CURRENT:ACDC|DCAC:RANGe[:UPPer]
    {<range>|MIN|MAX|DEF}
```

This command selects the measurement range for AC+DC current measurements.

```
[SENSe:]CURRENT:ACDC|DCAC:RANGe[:UPPer]? [{MIN|MAX}]
```

This query returns a numeric value that represents the AC+DC current measurement range.

### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 10 mA MIN</li> <li>• 100 mA</li> <li>• 1000 mA</li> <li>• 3 A MAX</li> <li>• DEF (AUTO)</li> </ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 10 mA, with autoranging enabled, after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CURRent:ACDC|DCAC:RANGe[:UPPer]

### Example

→ CURR:ACDC:RANG 0.1 *This command selects the 100 mA range.*

→ CURR:ACDC:RANG? *This query returns the range selected.*

← +1.000000E-01

### See also

“CONFigure:CURRent:ACDC|DCAC” on page 102

“[SENSe:]CURRent:ACDC|DCAC:RANGe:AUTO” on page 221

## [SENSe:]CURRent:ACDC | DCAC:RANGe:AUTO

### Syntax

[SENSe:]CURRent:ACDC|DCAC:RANGe:AUTO <mode>

This command disables or enables autoranging for AC+DC current measurements. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

[SENSe:]CURRent:ACDC|DCAC:RANGe:AUTO?

This query returns a boolean value that represents the AC+DC current autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]CURRent:ACDC|DCAC:RANGe[:UPPer]” on page 219) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CURRent:ACDC|DCAC:RANGe:AUTO

### Example

```
→ CURR : ACDC : RANG : AUTO OFF      This command disables autoranging.  
→ CURR : ACDC : RANG : AUTO?        This query returns the autoranging setting.  
← 0
```

### See also

“CONFigure:CURRent:ACDC|DCAC” [on page 102](#)

“[SENSe:]CURRent:ACDC|DCAC:RANGe[:UPPer]” [on page 219](#)

## [SENSe:]CURRent:ACDC | DCAC:RESolution

### Syntax

```
[SENSe:]CURRent:ACDC|DCAC:RESolution
  {<resolution>|MIN|MAX|DEF}
```

This command selects the measurement resolution for AC+DC current measurements. Specify the resolution in the same units as the selected measurement function, not in number of digits.

```
[SENSe:]CURRent:ACDC|DCAC:RESolution? [{MIN|MAX}]
```

The query returns a numeric value that represents the AC+DC current resolution.

### Parameter

Item	Type	Range of values	Default value
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 1 uA</li> <li>• 10 uA</li> <li>• 100 uA</li> <li>• 1 mA</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit) DEF</li> <li>• 0.1 uA</li> <li>• 1 uA</li> <li>• 10 uA</li> <li>• 100 uA</li> </ul>
			MIN

### Remarks

- For the <resolution> parameter, you can substitute MIN or MAX for a numeric value. MIN selects the smallest value accepted, which gives the highest resolution; MAX selects the largest value accepted, which gives the least resolution.
- The instrument sets the resolution to 5½ digits after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CURRent:ACDC|DCAC:RESolution

### Example

→ CURR:ACDC:RES 1E-03 *This command sets the measurement resolution to 1 mA.*

→ CURR:ACDC:RES? *This query returns the resolution selected.*

← +1.000000E-03

### See also

“CONFigure:CURRent:ACDC|DCAC” on [page 102](#)

## [SENSe:]RESistance:RANGe[:UPPer]

### Syntax

[SENSe:]RESistance:RANGe[:UPPer] {<range>|MIN|MAX|DEF}

This command selects the measurement range for 2-wire resistance measurements.

[SENSe:]RESistance:RANGe[:UPPer]? [{MIN|MAX}]

This query returns a numeric value that represents the 2-wire resistance measurement range.

### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 <math>\Omega</math> MIN</li> <li>• 1 k<math>\Omega</math></li> <li>• 10 k<math>\Omega</math></li> <li>• 100 k<math>\Omega</math></li> <li>• 1 M<math>\Omega</math></li> <li>• 10 M<math>\Omega</math></li> <li>• 100 M<math>\Omega</math> MAX</li> <li>• DEF (AUTO)</li> </ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 100  $\Omega$ , with autoranging enabled, after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]RESistance:RANGe[:UPPer]

### Example

```
→ RES:RANG 10E+3
```

*This command selects the 10 k $\Omega$  range.*

```
→ RES:RANG?
```

*This query returns the range selected.*

```
← +1.000000E+04
```

### See also

“CONFigure:RESistance” on page 105

“[SENSe:]RESistance:RANGe:AUTO” on page 227



## [SENSe:]RESistance:RANGe:AUTO

### Syntax

```
[SENSe:]RESistance:RANGe:AUTO <mode>
```

This command disables or enables autoranging for 2-wire resistance measurements. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]RESistance:RANGe:AUTO?
```

This query returns a boolean value that represents the 2-wire resistance autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]RESistance:RANGe[:UPPer]” on page 225) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]RESistance:RANGe:AUTO

### Example

```
→ RES:RANG:AUTO OFF
```

*This command disables autoranging.*

```
→ RES:RANG:AUTO?
```

*This query returns the autoranging setting.*

```
← 0
```

### See also

“CONFigure:RESistance” [on page 105](#)

“[SENSe:]RESistance:RANGe[:UPPer]” [on page 225](#)

## [SENSe:]RESistance:RESolution

### Syntax

```
[SENSe:]RESistance:RESolution {<resolution>|MIN|MAX|DEF}
```

This command selects the measurement resolution for 2-wire resistance measurements. Specify the resolution in the same units as the selected measurement function, not in number of digits.

```
[SENSe:]RESistance:RESolution? [{MIN|MAX}]
```

The query returns a numeric value that represents the 2-wire resistance resolution.

### Parameter

Item	Type	Range of values	Default value	
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 mΩ</li> <li>• 100 mΩ</li> <li>• 1 Ω</li> <li>• 10 Ω</li> <li>• 100 Ω</li> <li>• 1 kΩ</li> <li>• 10 kΩ</li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit) DEF</li> <li>• 1 mΩ</li> <li>• 10 mΩ</li> <li>• 100 mΩ</li> <li>• 1 Ω</li> <li>• 10 Ω</li> <li>• 100 Ω</li> <li>• 1 kΩ</li> </ul>	MIN

### Remarks

- For the <resolution> parameter, you can substitute MIN or MAX for a numeric value. MIN selects the smallest value accepted, which gives the highest resolution; MAX selects the largest value accepted, which gives the least resolution.
- The instrument sets the resolution to 5½ digits after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]RESistance:RESolution

### Example

```
→ RES:RES 100
```

*This command sets the measurement resolution to 100  $\Omega$*

```
→ RES:RES?
```

*This query returns the resolution selected.*

```
← +1.000000E+02
```

### See also

“CONFigure:RESistance” on [page 105](#)

## [SENSe:]CONTInuity:RANGe[:UPPer]

### Syntax

[SENSe:]CONTInuity:RANGe[:UPPer] {<range>|MIN|MAX|DEF}

This command selects the measurement range for continuity tests. Continuity is a special type of fixed-range 2-wire resistance measurement.

[SENSe:]CONTInuity:RANGe[:UPPer]? [{MIN|MAX}]

This query returns a numeric value that represents the continuity test range.

### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 <math>\Omega</math> MIN</li> <li>• 1 k<math>\Omega</math> DEF</li> <li>• 10 k<math>\Omega</math></li> <li>• 100 k<math>\Omega</math></li> <li>• 1 M<math>\Omega</math></li> <li>• 10 M<math>\Omega</math></li> <li>• 100 M<math>\Omega</math> MAX</li> </ul>	1 k $\Omega$

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 1 k $\Omega$ , with autoranging disabled, after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CONTInuity:RANGe[:UPPer]

### Example

```
→ CONT:RANG 10E+3
```

*This command selects the 10 k $\Omega$  range.*

```
→ CONT:RANG?
```

*This query returns the range selected.*

```
← +1.000000E+04
```

### See also

“CONFigure:CONTInuity” on page 108

“[SENSe:]CONTInuity:RANGe:AUTO” on page 233

## [SENSe:]CONTInuity:RANGe:AUTO

### Syntax

```
[SENSe:]CONTInuity:RANGe:AUTO <mode>
```

This command disables or enables autoranging for continuity tests. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]CONTInuity:RANGe:AUTO?
```

This query returns a boolean value that represents the continuity autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]CONTInuity:RANGe[:UPPer]” on page 231) will disable autoranging.
- The instrument disables autoranging after a Factory Reset (\*RST command).

## 10 SENSE Subsystem

[SENSe:]CONTInuity:RANGe:AUTO

### Example

```
→ CONT:RANG:AUTO OFF
```

*This command disables autoranging.*

```
→ CONT:RANG:AUTO?
```

*This query returns the autoranging setting.*

```
← 0
```

### See also

“CONFigure:CONTInuity” on page 108

“[SENSe:]CONTInuity:RANGe[:UPPer]” on page 231



## [SENSe:]LRESistance:RANGe[:UPPer]

### Syntax

```
[SENSe:]LRESistance:RANGe[:UPPer] {<range>|MIN|MAX|DEF}
```

This command selects the measurement range for 4-wire low-resistance measurements.

```
[SENSe:]LRESistance:RANGe[:UPPer]? [{MIN|MAX}]
```

This query returns a numeric value that represents the 4-wire low-resistance measurement range.

### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"> <li>• 100 m<math>\Omega</math> MIN</li> <li>• 1000 m<math>\Omega</math></li> <li>• 10 <math>\Omega</math></li> <li>• 100 <math>\Omega</math></li> <li>• 1000 <math>\Omega</math> MAX</li> <li>• DEF (AUTO)</li> </ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 100 m $\Omega$ , with autoranging enabled, after a Factory Reset (\*RST command).
- For measuring low-resistance a delayed response should be expected from the front panel display. For remote interface operation, increase the SCPI query timeout value. (Typically 15000 ms.)

## 10 SENSE Subsystem

[SENSe:]LRESistance:RANGe[:UPPer]

### Example

→ LRES:RANG 10 *This command selects the 10  $\Omega$  range.*

→ LRES:RANG? *This query returns the range selected.*

← +1.000000E+01

### See also

“CONFigure:LRESistance” [on page 110](#)

“[SENSe:]LRESistance:RANGe:AUTO” [on page 237](#)

“[SENSe:]LRESistance:COMPensation” [on page 241](#)

## [SENSe:]LRESistance:RANGe:AUTO

### Syntax

[SENSe:]LRESistance:RANGe:AUTO <mode>

This command disables or enables autoranging for 4-wire low-resistance measurements. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

[SENSe:]LRESistance:RANGe:AUTO?

This query returns a boolean value that represents the 4-wire low-resistance autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]LRESistance:RANGe[:UPPer]” on page 235) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).
- For measuring low-resistance a delayed response should be expected from the front panel display. For remote interface operation, increase the SCPI query timeout value. (Typically 15000 ms.)

## 10 SENSE Subsystem

[SENSe:]LRESistance:RANGe:AUTO

### Example

```
→ LRES:RANG:AUTO OFF
```

*This command disables autoranging.*

```
→ LRES:RANG:AUTO?
```

*This query returns the autoranging setting.*

```
← 0
```

### See also

“CONFigure:LRESistance” [on page 110](#)

“[SENSe:]LRESistance:RANGe[:UPPer]” [on page 235](#)

“[SENSe:]LRESistance:COMPensation” [on page 241](#)

## [SENSe:]LRESistance:RESolution

### Syntax

[SENSe:]LRESistance:RESolution {<resolution>|MIN|MAX|DEF}

This command selects the measurement resolution for 4-wire low-resistance measurements. Specify the resolution in the same units as the selected measurement function, not in number of digits.

[SENSe:]LRESistance:RESolution? [{MIN|MAX}]

The query returns a numeric value that represents the 4-wire low-resistance resolution.

### Parameter

Item	Type	Range of values	Default value
resolution	Numeric	<ul style="list-style-type: none"> <li>• MAX (4½ digit)</li> <li>• 10 <math>\mu\Omega</math></li> <li>• 100 <math>\mu\Omega</math></li> <li>• 1 m<math>\Omega</math></li> <li>• 10 m<math>\Omega</math></li> <li>• 100 m<math>\Omega</math></li> </ul>	<ul style="list-style-type: none"> <li>• MIN (5½ digit) DEF</li> <li>• 1 <math>\mu\Omega</math></li> <li>• 10 <math>\mu\Omega</math></li> <li>• 100 <math>\mu\Omega</math></li> <li>• 1 m<math>\Omega</math></li> <li>• 10 m<math>\Omega</math></li> </ul>

### Remarks

- For the <resolution> parameter, you can substitute MIN or MAX for a numeric value. MIN selects the smallest value accepted, which gives the highest resolution; MAX selects the largest value accepted, which gives the least resolution.
- The instrument sets the resolution to 5½ digits after a Factory Reset (\*RST command).
- For measuring low-resistance, a delayed response should be expected from the front panel display. For remote interface operation, increase the SCPI query timeout value. (Typically 15000 ms.)

## 10 SENSE Subsystem

[SENSe:]LRESistance:RESolution

### Example

```
→ LRES:RES 0.0001
```

*This command sets the measurement resolution to 100  $\mu\Omega$*

```
→ LRES:RES?
```

*This query returns the resolution selected.*

```
← +1.000000E-04
```

### See also

“CONFigure:LRESistance” on page 110

“[SENSe:]LRESistance:COMPensation” on page 241

## [SENSe:]LRESistance:COMPensation

### Syntax

```
[SENSe:]LRESistance:COMPensation
```

This command runs the environment (temperature and/or humidity change) compensation of 4-wire low-resistance measurements.

### Remarks

When switching from any other function to the RESistance function, it is recommended that you always perform the LRESistance:COMPensation once first.

### Example

→ \*RST

*This command resets the instrument to its factory default state.*

→ CONF:LRES

*This command configures the instrument for 4-wire low-resistance measurements.*

→ FETCH?

*This command transfers the reading from the instrument memory to the output buffer.*

→ LRES:COMP

*This command runs the environment compensation.*

### See also

“CONFigure:LRESistance” on page 110

## 10 SENSE Subsystem

[SENSe:]CAPacitance:RANGe[:UPPer]

### [SENSe:]CAPacitance:RANGe[:UPPer]

#### Syntax

[SENSe:]CAPacitance:RANGe[:UPPer] {<range>|MIN|MAX|DEF}

This command selects the measurement range for capacitance measurements.

[SENSe:]CAPacitance:RANGe[:UPPer]? [{MIN|MAX}]

This query returns a numeric value that represents the capacitance measurement range.

#### Parameter

Item	Type	Range of values	Default value
range	Numeric	<ul style="list-style-type: none"><li>• 1 nF MIN</li><li>• 10 nF</li><li>• 100 nF</li><li>• 1 uF</li><li>• 10 uF</li><li>• 100 uF</li><li>• 1 mF</li><li>• 10 mF MAX</li><li>• DEF (AUTO)</li></ul>	MIN

#### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.
- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 1 nF, with autoranging enabled, after a Factory Reset (\*RST command).



- For measuring capacitance values greater than 1 mF, a delayed response should be expected from the front panel display. For remote interface operation, increase the SCPI query timeout value. (Typically > 10000 ms.)

### Example

```
→ CAP:RANG 10 This command selects the 10 nF range.
→ CAP:RANG? This query returns the range selected.
← +1.000000E+01
```

### See also

“CONFigure:CAPacitance” on page 113

“[SENSE:]CAPacitance:RANGe:AUTO” on page 244

## 10 SENSE Subsystem

[SENSe:]CAPacitance:RANGe:AUTO

# [SENSe:]CAPacitance:RANGe:AUTO

### Syntax

```
[SENSe:]CAPacitance:RANGe:AUTO <mode>
```

This command disables or enables autoranging for capacitance measurements. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]CAPacitance:RANGe:AUTO?
```

This query returns a boolean value that represents the capacitance autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]CAPacitance:RANGe[:UPPer]” on page 242) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).
- For measuring capacitance values greater than 1 mF, a delayed response should be expected from the front panel display. For remote interface operation, increase the SCPI query timeout value. (Typically > 10000 ms.)

### Example

→ CAP:RANG:AUTO OFF	<i>This command disables autoranging.</i>
→ CAP:RANG:AUTO?	<i>This query returns the autoranging setting.</i>
← 0	

### See also

“CONFigure:CAPacitance” [on page 113](#)

“[SENSe:]CAPacitance:RANGe[:UPPer]” [on page 242](#)

## 10 SENSE Subsystem

[SENSe:]FREQuency:VOLTage:RANGe[:UPPer]

# [SENSe:]FREQuency:VOLTage:RANGe[:UPPer]

### Syntax

```
[SENSe:]FREQuency:VOLTage:RANGe[:UPPer]
  {<voltage_range>|MIN|MAX|DEF}
```

This command selects the measurement range for frequency measurements via the voltage path.

```
[SENSe:]FREQuency:VOLTage:RANGe[:UPPer]? [{MIN|MAX}]
```

This query returns a numeric value that represents the frequency measurement range via the voltage path.

### NOTE

The [SENSe:]FREQuency:VOLTage:RANGe[:UPPer]? query is not applicable when autoranging is enabled. It is recommended to manually select the voltage range for frequency, pulse width, and duty cycle measurements.

### Parameter

Item	Type	Range of values	Default value
voltage_range	Numeric	<ul style="list-style-type: none"><li>• 100 mV MIN</li><li>• 1 V</li><li>• 10 V</li><li>• 100 V</li><li>• 750 V MAX</li><li>• DEF (AUTO)</li></ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.

- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 100 mV, with autoranging enabled, after a Factory Reset (\*RST command).

### Example

```
→ FREQ:VOLT:RANG 10 This command selects the 10 V range.
```

```
→ FREQ:VOLT:RANG? This query returns the range selected.
```

```
← +1.000000E+01
```

### See also

“CONFigure:FREQuency” on page 118

“[SENSe:]FREQuency:VOLTage:RANGe:AUTO” on page 248

## 10 SENSE Subsystem

[SENSe:]FREQuency:VOLTage:RANGe:AUTO

# [SENSe:]FREQuency:VOLTage:RANGe:AUTO

### Syntax

```
[SENSe:]FREQuency:VOLTage:RANGe:AUTO <mode>
```

This command disables or enables autoranging for frequency measurements via the voltage path. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]FREQuency:VOLTage:RANGe:AUTO?
```

This query returns a boolean value that represents the frequency autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]FREQuency:VOLTage:RANGe[:UPPer]” on page 246) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

### Example

```
→ FREQ:VOLT:RANG:AUTO OFF      This command disables autoranging.  
→ FREQ:VOLT:RANG:AUTO?      This query returns the autoranging setting.  
← 0
```

### See also

“CONFigure:FREQUENCY” on page 118

“[SENSE:]FREQUENCY:VOLTAGE:RANGE[:UPPER]” on page 246

## 10 SENSE Subsystem

[SENSe:]PWIDth:VOLTage:RANGe[:UPPer]

# [SENSe:]PWIDth:VOLTage:RANGe[:UPPer]

### Syntax

```
[SENSe:]PWIDth:VOLTage:RANGe[:UPPer]
  {<voltage_range>|MIN|MAX|DEF}
```

This command selects the measurement range for pulse width measurements via the voltage path.

```
[SENSe:]PWIDth:VOLTage:RANGe[:UPPer]? [{MIN|MAX}]
```

This query returns a numeric value that represents the pulse width measurement range via the voltage path.

### NOTE

The [SENSe:]PWIDth:VOLTage:RANGe[:UPPer]? query is not applicable when autoranging is enabled. It is recommended to manually select the voltage range for frequency, pulse width, and duty cycle measurements.

### Parameter

Item	Type	Range of values	Default value
voltage_range	Numeric	<ul style="list-style-type: none"><li>• 100 mV MIN</li><li>• 1 V</li><li>• 10 V</li><li>• 100 V</li><li>• 750 V MAX</li><li>• DEF (AUTO)</li></ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.



- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 100 mV, with autoranging enabled, after a Factory Reset (\*RST command).

### Example

```
→ PWID:VOLT:RANG 10 This command selects the 10 V range.
```

```
→ PWID:VOLT:RANG? This query returns the range selected.
```

```
← +1.000000E+01
```

### See also

“CONFigure:PWIDth” on page 120

“[SENSe:]DCYClE:VOLTage:RANGe:AUTO” on page 256

## 10 SENSE Subsystem

[SENSe:]PWIDth:VOLTage:RANGe:AUTO

# [SENSe:]PWIDth:VOLTage:RANGe:AUTO

### Syntax

```
[SENSe:]PWIDth:VOLTage:RANGe:AUTO <mode>
```

This command disables or enables autoranging for pulse width measurements via the voltage path. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]PWIDth:VOLTage:RANGe:AUTO?
```

This query returns a boolean value that represents the duty cycle autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]PWIDth:VOLTage:RANGe[:UPPer]” on page 250) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

### Example

```
→ PWID:VOLT:RANG:AUTO OFF      This command disables autoranging.
→ PWID:VOLT:RANG:AUTO?        This query returns the autoranging setting.
← 0
```

### See also

“CONFigure:PWIDth” on page 120

“[SENSe:]PWIDth:VOLTage:RANGe[:UPPer]” on page 250

## 10 SENSE Subsystem

[SENSe:]DCYClE:VOLTage:RANGe[:UPPer]

# [SENSe:]DCYClE:VOLTage:RANGe[:UPPer]

### Syntax

```
[SENSe:]DCYClE:VOLTage:RANGe[:UPPer]
  {<voltage_range>|MIN|MAX|DEF}
```

This command selects the measurement range for duty cycle measurements via the voltage path.

```
[SENSe:]DCYClE:VOLTage:RANGe[:UPPer]? [{MIN|MAX}]
```

This query returns a numeric value that represents the duty cycle measurement range via the voltage path.

### NOTE

The [SENSe:]DCYClE:VOLTage:RANGe[:UPPer]? query is not applicable when autoranging is enabled. It is recommended to manually select the voltage range for frequency, pulse width, and duty cycle measurements.

### Parameter

Item	Type	Range of values	Default value
voltage_range	Numeric	<ul style="list-style-type: none"><li>• 100 mV MIN</li><li>• 1 V</li><li>• 10 V</li><li>• 100 V</li><li>• 750 V MAX</li><li>• DEF (AUTO)</li></ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.

- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 100 mV, with autoranging enabled, after a Factory Reset (\*RST command).

### Example

```
→ DCYC:VOLT:RANG 10 This command selects the 10 V range.
```

```
→ DCYC:VOLT:RANG? This query returns the range selected.
```

```
← +1.000000E+01
```

### See also

“CONFigure:DCYClE” [on page 122](#)

“[SENSe:]DCYClE:VOLTage:RANGe:AUTO” [on page 256](#)

## 10 SENSE Subsystem

[SENSe:]DCYClE:VOLTage:RANGe:AUTO

# [SENSe:]DCYClE:VOLTage:RANGe:AUTO

### Syntax

```
[SENSe:]DCYClE:VOLTage:RANGe:AUTO <mode>
```

This command disables or enables autoranging for duty cycle measurements via the voltage path. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]DCYClE:VOLTage:RANGe:AUTO?
```

This query returns a boolean value that represents the duty cycle autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]DCYClE:VOLTage:RANGe[:UPPer]” on page 254) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

### Example

```
→ DCYC:VOLT:RANG:AUTO OFF This command disables autoranging.  
→ DCYC:VOLT:RANG:AUTO? This query returns the autoranging setting.  
← 0
```

### See also

“CONFigure:DCYClE” [on page 122](#)

“[SENSe:]DCYClE:VOLTage:RANGe[:UPPer]” [on page 254](#)

## 10 SENSE Subsystem

[SENSe:]FREQuency:CURRent:RANGe[:UPPer]

# [SENSe:]FREQuency:CURRent:RANGe[:UPPer]

### Syntax

```
[SENSe:]FREQuency:CURRent:RANGe[:UPPer]
  {<current_range>|MIN|MAX|DEF}
```

This command selects the measurement range for frequency measurements via the current path.

```
[SENSe:]FREQuency:CURRent:RANGe[:UPPer]? [{MIN|MAX}]
```

This query returns a numeric value that represents the frequency measurement range via the current path.

### NOTE

The [SENSe:]FREQuency:CURRent:RANGe[:UPPer]? query is not applicable when autoranging is enabled. It is recommended to manually select the current range for frequency, pulse width, and duty cycle measurements.

### Parameter

Item	Type	Range of values	Default value
current_range	Numeric	<ul style="list-style-type: none"><li>10 mA MIN</li><li>100 mA</li><li>1000 mA</li><li>3 A MAX</li><li>DEF (AUTO)</li></ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.



- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 10 mA, with autoranging enabled, after a Factory Reset (\*RST command).

### Example

```
→ FREQ:CURR:RANG 0.1           This command selects the 100 mA range.
→ FREQ:CURR:RANG?             This query returns the range selected.
← +1.000000E-01
```

### See also

“CONFigure:FREQuency” on page 118

“[SENSe:]FREQuency:CURRent:RANGe:AUTO” on page 260

## 10 SENSE Subsystem

[SENSe:]FREQuency:CURRent:RANGe:AUTO

# [SENSe:]FREQuency:CURRent:RANGe:AUTO

### Syntax

[SENSe:]FREQuency:CURRent:RANGe:AUTO <mode>

This command disables or enables autoranging for frequency measurements via the current path. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

[SENSe:]FREQuency:CURRent:RANGe:AUTO?

This query returns a boolean value that represents the frequency autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]FREQuency:CURRent:RANGe[:UPPer]” on page 258) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

### Example

```
→ FREQ:CURR:RANG:AUTO OFF This command disables autoranging.  
→ FREQ:CURR:RANG:AUTO? This query returns the autoranging setting.  
← 0
```

### See also

“CONFigure:FREQUENCY” on page 118

“[SENSE:]FREQUENCY:CURRENT:RANGE[:UPPer]” on page 258

## 10 SENSE Subsystem

[SENSe:]PWIDth:CURRent:RANGe[:UPPer]

# [SENSe:]PWIDth:CURRent:RANGe[:UPPer]

### Syntax

```
[SENSe:]PWIDth:CURRent:RANGe[:UPPer]
    {<current_range>|MIN|MAX|DEF}
```

This command selects the measurement range for pulse width measurements via the current path.

```
[SENSe:]PWIDth:CURRent:RANGe[:UPPer]? [{MIN|MAX}]
```

This query returns a numeric value that represents the pulse width measurement range via the current path.

### NOTE

The [SENSe:]PWIDth:CURRent:RANGe[:UPPer]? query is not applicable when autoranging is enabled. It is recommended to manually select the current range for frequency, pulse width, and duty cycle measurements.

### Parameter

Item	Type	Range of values	Default value
current_range	Numeric	<ul style="list-style-type: none"><li>• 10 mA MIN</li><li>• 100 mA</li><li>• 1000 mA</li><li>• 3 A MAX</li><li>• DEF (AUTO)</li></ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.

- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 10 mA, with autoranging enabled, after a Factory Reset (\*RST command).

### Example

```
→ PWID:CURR:RANG 0.1           This command selects the 100 mA range.
→ PWID:CURR:RANG?             This query returns the range selected.
← +1.000000E-01
```

### See also

“CONFigure:PWIDth” on page 120

“[SENSe:]PWIDth:CURRent:RANGe:AUTO” on page 264

## 10 SENSE Subsystem

[SENSe:]PWIDth:CURRent:RANGe:AUTO

# [SENSe:]PWIDth:CURRent:RANGe:AUTO

### Syntax

```
[SENSe:]PWIDth:CURRent:RANGe:AUTO <mode>
```

This command disables or enables autoranging for pulse width measurements via the current path. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]PWIDth:CURRent:RANGe:AUTO?
```

This query returns a boolean value that represents the duty cycle autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]PWIDth:CURRent:RANGe[:UPPer]” on page 262) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

### Example

```
→ PWID:CURR:RANG:AUTO OFF This command disables autoranging.
→ PWID:CURR:RANG:AUTO? This query returns the autoranging setting.
← 0
```

### See also

“CONFigure:PWIDth” on page 120

“[SENSe:]PWIDth:CURRent:RANGe[:UPPer]” on page 262

## 10 SENSE Subsystem

[SENSe:]DCYClE:CURRent:RANGe[:UPPer]

# [SENSe:]DCYClE:CURRent:RANGe[:UPPer]

### Syntax

```
[SENSe:]DCYClE:CURRent:RANGe[:UPPer]
  {<current_range>|MIN|MAX|DEF}
```

This command selects the measurement range for duty cycle measurements via the current path.

```
[SENSe:]DCYClE:CURRent:RANGe[:UPPer]? [{MIN|MAX}]
```

This query returns a numeric value that represents the duty cycle measurement range via the current path.

### NOTE

The [SENSe:]DCYClE:CURRent:RANGe[:UPPer]? query is not applicable when autoranging is enabled. It is recommended to manually select the current range for frequency, pulse width, and duty cycle measurements.

### Parameter

Item	Type	Range of values	Default value
current_range	Numeric	<ul style="list-style-type: none"><li>• 10 mA MIN</li><li>• 100 mA</li><li>• 1000 mA</li><li>• 3 A MAX</li><li>• DEF (AUTO)</li></ul>	MIN

### Remarks

- Selecting a discrete range will disable autoranging.
- If the input signal is greater than can be measured on the selected range (manual ranging), the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.



- If a range change is in progress (due to the autoranging setting) when you query the instrument, the value “+9.910000E+37” will be returned. Wait for the instrument to select an appropriate range before querying the instrument again.
- The instrument is set to 10 mA, with autoranging enabled, after a Factory Reset (\*RST command).

### Example

```

→ DCYC:CURR:RANG 0.1           This command selects the 100 mA range.
→ DCYC:CURR:RANG?             This query returns the range selected.
← +1.000000E-01

```

### See also

“CONFigure:DCYClE” [on page 122](#)

“[SENSe:]DCYClE:CURRent:RANGe:AUTO” [on page 268](#)

## 10 SENSE Subsystem

[SENSe:]DCYClE:CURRent:RANGe:AUTO

# [SENSe:]DCYClE:CURRent:RANGe:AUTO

### Syntax

```
[SENSe:]DCYClE:CURRent:RANGe:AUTO <mode>
```

This command disables or enables autoranging for duty cycle measurements via the current path. Autoranging is convenient because the instrument automatically selects the range for each measurement based on the input signal detected.

```
[SENSe:]DCYClE:CURRent:RANGe:AUTO?
```

This query returns a boolean value that represents the duty cycle autoranging setting: 0 or 1

### Parameter

Item	Type	Range of values	Default value
auto	Boolean	0 1 OFF ON	1

### Remarks

- Autorange thresholds:
  - Down range at: <10% of range
  - Up range at: >120% of range
- With autoranging enabled, the instrument selects the appropriate range based on the input signal detected.
- Selecting a discrete range (see “[SENSe:]DCYClE:CURRent:RANGe[:UPPer]” on page 266) will disable autoranging.
- The instrument enables autoranging after a Factory Reset (\*RST command).

### Example

```
→ DCYC : CURR : RANG : AUTO OFF      This command disables autoranging.
→ DCYC : CURR : RANG : AUTO?         This query returns the autoranging setting.
← 0
```

### See also

“CONFIgure:DCYClE” on page 122

“[SENSe:]DCYClE:CURRent:RANGe[:UPPer]” on page 266

## **10 SENSE Subsystem**

[SENSe:]DCYClE:CURRent:RANGe:AUTO

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

# 11

## **SOURce Subsystem**

[SOURce:]SENSe	273
[SOURce:]SENSe:VOLTage[:LEVel]?	274
[SOURce:]SENSe:CURRent[:LEVel]?	275
SOURce:VOLTage:RANGe	276
SOURce:CURRent:RANGe	277
SOURce:SQUare:RANGe	278
[SOURce:]VOLTage:LIMit	279
[SOURce:]CURRent:LIMit	281
[SOURce:]VOLTage:PROTection	283
[SOURce:]CURRent:PROTection	285
[SOURce:]VOLTage[:LEVel][:IMMEDIATE][:AMPLitude]	287
[SOURce:]CURRent[:LEVel][:IMMEDIATE][:AMPLitude]	288
[SOURce:]VOLTage[:LEVel]:RAMP[:AMPLitude]	289
[SOURce:]CURRent[:LEVel]:RAMP[:AMPLitude]	290
[SOURce:]VOLTage[:LEVel]:RAMP:STEP	292
[SOURce:]CURRent[:LEVel]:RAMP:STEP	293
[SOURce:]VOLTage[:LEVel]:SCAN[:AMPLitude]	294
[SOURce:]CURRent[:LEVel]:SCAN[:AMPLitude]	295
[SOURce:]VOLTage[:LEVel]:SCAN:STEP	296
[SOURce:]CURRent[:LEVel]:SCAN:STEP	297
[SOURce:]VOLTage[:LEVel]:SCAN:DWELLing	298
[SOURce:]CURRent[:LEVel]:SCAN:DWELLing	299
[SOURce:]SQUare[:LEVel][:IMMEDIATE]:AMPLitude	300
[SOURce:]SQUare[:LEVel][:IMMEDIATE]:FREQuency	301
[SOURce:]SQUare[:LEVel][:IMMEDIATE]:DCYCLE	302
[SOURce:]SQUare[:LEVel][:IMMEDIATE]:PWIDth	304

## 11 SOURCE Subsystem

[SOURCE:]PROTECTION[:STATE] 307

[SOURCE:]SSTART:STEP 309

This chapter describes the SOURCE commands used to program the U3606B over a remote interface. Use the SOURCE commands to configure the output voltage and current of the instrument.

## [SOURce:]SENSe

### Syntax

```
[SOURce:]SENSe {EXTernal|INTernal}
```

This command selects the sense signal source. To read the sense signal inputs from the rear output terminals of the instrument, select `EXTernal` sense.

The valid options are:

- `EXTernal`: Enables external sense.
- `INTernal`: Disables external sense.

### NOTE

The rear output SENSE terminals (S+ and S-) are internally shorted to the output terminals at the front panel.

```
[SOURce:]SENSe?
```

This query returns a string value that represents the sense signal source of the instrument.

### Parameter

Item	Type	Range of values	Default value
sense	Discrete	EXTernal INTernal	INTernal

### Example

```
→ SENS EXT
```

*This command sets the signal source to read the sense signal inputs from the rear output terminals of the instrument.*

```
→ SENS?
```

*This query returns the selected sense signal source.*

```
← EXT
```

## 11 SOURce Subsystem

[SOURce:]SENSe:VOLTage[:LEVel]?

### [SOURce:]SENSe:VOLTage[:LEVel]?

#### Syntax

```
[SOURce:]SENSe:VOLTage[:LEVel]?
```

This query returns a numeric value that represents the amplitude of the sensing voltage at the output.

#### Remarks

See “Remote Sensing” in the *U3606B Service Guide* for more information on how to connect the load leads to the rear terminal block for remote sensing connections.

#### Example

```
→ SENS:VOLT?
```

*This query returns the amplitude of the sensing voltage at the output.*

```
← +1.000170E+00
```



## [SOURCE:]SENSE:CURRENT[:LEVEL]?

### Syntax

[SOURCE:]SENSE:CURRENT[:LEVEL]?

This query returns a numeric value that represents the amplitude of the sensing current at the output.

### Remarks

See “Remote Sensing” in the *U3606B Service Guide* for more information on how to connect the load leads to the rear terminal block for remote sensing connections.

### Example

```
→ SENS:CURR?
```

*This query returns the amplitude of the sensing current at the output.*

```
← -8.624790E-02
```

## SOURce:VOLTage:RANGe

### Syntax

```
SOURce:VOLTage:RANGe  
    {30 V|8 V|1 V|AUTO|MAX|MIN|DEF}
```

This command sets the range for the voltage output. You can select to either operate the U3606B in the S1 (30 V/1 A) range, the S2 (8 V/3 A) range, S2m (1000 mV/3 A) range, or the S1S2 auto-range (30 V/1 A, 8 V/3 A). The range selected is applied for all output operations (CV mode, CC mode, square-wave output, and sweep functions).

### Parameter

Item	Type	Range of values	Default value
value	Numeric	<ul style="list-style-type: none"><li>30 V MAX DEF</li><li>8 V</li><li>1 V MIN</li><li>AUTO</li></ul>	30 V

### Remarks

- You cannot change the range when the output is enabled (OUTPut[:STATe] ON command). The output should always be in standby state (OUTPut[:STATe] OFF command) before the range or output function is changed.
- The over-current limit will always be set to the maximum value with respect to the range selected.

### Example

```
→ SOUR:VOLT:RANG 8
```

*This command sets the voltage output range to S2 (8 V/3 A).*

### See also

“SOURce:CURRent:RANGe” on page 277

“SOURce:SQUare:RANGe” on page 278

## SOURce:CURRent:RANGe

### Syntax

```
SOURce:CURRent:RANGe
    {3 A|1 A|100 mA|AUTO|MAX|MIN|DEF}
```

This command sets the range for the current output. You can select to either operate the U3606B in the S1 (30 V/1 A) range, the S1m (30 V/100 mA) range, the S2 (8 V/3 A) range, or the S1S2 auto-range (30 V/1 A, 8 V/3 A). The range selected is applied for all output operations (CV mode, CC mode, square-wave output, and sweep functions).

### Parameter

Item	Type	Range of values	Default value
value	Discrete	<ul style="list-style-type: none"> <li>• 3 A MAX</li> <li>• 1 A DEF</li> <li>• 100 mA MIN</li> <li>• AUTO</li> </ul>	1 A

### Remarks

- You cannot change the range when the output is enabled (OUTPut[:STATe] ON command). The output should always be in standby state (OUTPut[:STATe] OFF command) before the range or output function is changed.
- The over-voltage limit will always be set to the maximum value with respect to the range selected by default.

### Example

```
→ SOUR:CURR:RANG MAX
```

*This command sets the current output range to S2 (8 V/3 A).*

### See also

“SOURce:VOLTage:RANGe” on page 276

“SOURce:SQUare:RANGe” on page 278

## SOURce:SQUare:RANGe

### Syntax

SOURce:SQUare:RANGe {30 V|8 V|AUTO|MAX|MIN|DEF}

This command sets the range for the square-wave output. You can select to either operate the U3606B in the S1 (30 V/1 A) range, the S2 (8 V/3 A) range, or the S1S2 auto-range (30 V/1 A with 10 Hz to 4800 Hz). The range selected is applied for all output operations (CV mode, CC mode, square-wave output, and sweep functions).

### Parameter

Item	Type	Range of values	Default value
value	Numeric	<ul style="list-style-type: none"><li>30 V MAX DEF</li><li>8 V MIN</li><li>AUTO</li></ul>	30 V

### Remarks

You cannot change the range when the output is enabled (OUTPut[:STATe] ON command). The output should always be in standby state (OUTPut[:STATe] OFF command) before the range or output function is changed.

### Example

```
→ SOUR:SQU:RANG 7.5
```

*This command sets the voltage output range to S2 (8 V/3 A).*

### See also

“SOURce:VOLTage:RANGe” on page 276

“SOURce:CURRent:RANGe” on page 277

## [SOURce:]VOLTage:LIMit

### Syntax

[SOURce:]VOLTage:LIMit <value>[, <save>]

This command sets the over-voltage limit for the constant current output. If the load effect exceeds the over-voltage limit setting, the instrument output will be dropped down to meet the over-voltage limit setting.

[SOURce:]VOLTage:LIMit?

This query returns a numeric value that represents the over-voltage limit value of the constant current output.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 V	31.5 V	30 V
		S1m	0 V	31.5 V	30 V
		S2	0 V	8.4 V	8 V
save	Boolean	0 1 OFF ON <sup>[1]</sup>			0

<sup>[1]</sup> If the <save> value is omitted, the [SOURce:]VOLTage:LIMit command will not store the limit value to the U3606B's nonvolatile memory.

### Remarks

- If the over-voltage limit value is set to zero, the instrument output will be dropped down to zero for limiting.
- If the over-voltage limit value is set to a greater value than the over-voltage protection value, the over-voltage protection value will be adjusted to equal the over-voltage limit value.
- The [SOURce:]VOLTage:LIMit command is not applicable for square-wave output, range S1S2 (autoranging), 4-wire resistance measurements (Lo Ω).
- If the <save> value is set to “1” or “ON”, the limit value set will be stored to the U3606B's nonvolatile memory.

## 11 SOURCE Subsystem

[SOURCE:]VOLTage:LIMit

### Example

```
→ VOLT:LIM 30
```

*This command sets the over-voltage limit to 30 V for the constant current output.*

```
→ VOLT:LIM?
```

*This query returns the over-voltage limit value.*

```
← +3.000000E+01
```

## [SOURce:]CURRent:LIMit

### Syntax

[SOURce:]CURRent:LIMit <value>[, <save>]

This command sets the over-current limit for the constant voltage output. If the load effect exceeds the over-current limit setting, the instrument output will be dropped down to meet the over-current limit setting.

[SOURce:]CURRent:LIMit?

This query returns a numeric value that represents the over-current limit value of the constant voltage output.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 A	1.05 A	1 A
		S2	0 A	3.15 A	3 A
		S2m	0 A	3.15 A	3 A
save	Boolean	0 1 OFF ON <sup>[1]</sup>			0

<sup>[1]</sup> If the <save> value is omitted, the [SOURce:]CURRent:LIMit command will not store the limit value to the U3606B's nonvolatile memory.

### Remarks

- If the over-current limit value is set to zero, the instrument output will be dropped down to zero for limiting.
- If the over-current limit value is set to a greater value than the over-current protection value, the over-current protection value will be adjusted to equal the over-current limit value.
- The [SOURce:]CURRent:LIMit command is not applicable for square-wave output, range S1S2 (autoranging), and 4-wire resistance measurements (Lo Ω).
- If the <save> value is set to “1” or “ON”, the limit value set will be stored to the U3606B's nonvolatile memory.

## 11 SOURce Subsystem

[SOURce:]CURRent:LIMit

### Example

```
→ CURR:LIM 3
```

*This command sets the over-current limit to 3 A for the constant voltage output.*

```
→ CURR:LIM?
```

*This query returns the over-current limit value.*

```
← +3.000000E+00
```



## [SOURce:]VOLTage:PROTection

### Syntax

[SOURce:]VOLTage:PROTection <value>[, <save>]

This command sets the over-voltage protection for the constant current output. If the load effect exceeds the over-voltage protection setting, the instrument output will be disabled.

[SOURce:]VOLTage:PROTection?

This query returns a numeric value that represents the over-voltage protection value of the constant current output.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 V	33 V	Max
		S1m	0 V	33 V	
		S2	0 V	8.8 V	
save	Boolean	0 1 OFF ON <sup>[1]</sup>			0

<sup>[1]</sup> If the <save> value is omitted, the [SOURce:]VOLTage:PROTection command will not store the protection value to the U3606B's nonvolatile memory.

### Remarks

- If the over-voltage protection value is set to a lesser value than the over-voltage limit value, the over-voltage limit value will be adjusted to equal the over-voltage protection value.
- The [SOURce:]VOLTage:PROTection command is not applicable for square-wave output, S1S2 (autoranging), and 4-wire resistance measurements (Lo Ω).
- The instrument output will be disabled to protect the instrument when the voltage change exceeds the over-voltage programmed limit.
- If the <save> value is set to "1" or "ON", the protection value set will be stored to the U3606B's nonvolatile memory.

## 11 SOURCE Subsystem

[SOURCE:]VOLTage:PROTection

### Example

```
→ VOLT:PROT 30 V
```

*This command sets the over-voltage protection to 30 V for the constant current output.*

```
→ VOLT:PROT?
```

*This query returns the over-voltage protection value.*

```
← +3.000000E+01
```

## [SOURce:]CURRent:PROTection

### Syntax

[SOURce:]CURRent:PROTection <value>[, <save>]

This command sets the over-current protection for the constant voltage output. If the load effect exceeds the over-current protection setting, the instrument output will be disabled.

[SOURce:]CURRent:PROTection?

This query returns a numeric value that represents the over-current protection value of the constant voltage output.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 A	1.1 A	Max
		S2	0 A	3.3 A	
		S2m	0 A	3.3 A	
save	Boolean	0 1 OFF ON <sup>[1]</sup>			0

<sup>[1]</sup> If the <save> value is omitted, the [SOURce:]CURRent:PROTection command will not store the protection value to the U3606B's nonvolatile memory.

### Remarks

- If the over-current protection value is set to a lesser value than the over-current limit value, the over-current limit value will be adjusted to equal the over-current protection value.
- The [SOURce:]CURRent:PROTection command is not applicable for square-wave output, range S1S2 (autoranging), and 4-wire resistance measurements (Lo Ω).
- The instrument output will be disabled to protect the instrument when the current drawn exceeds the over-current programmed limit.
- If the <save> value is set to “1” or “ON”, the protection value set will be stored to the U3606B's nonvolatile memory.

## 11 SOURce Subsystem

[SOURce:]CURRent:PROTection

### Example

→ CURR:PROT 3 A

*This command sets the over-current protection to 3 A for the constant voltage output.*

→ CURR:PROT?

*This query returns the over-current protection value.*

← +3.000000E+00

## [SOURCE:]VOLTage[:LEVel][:IMMediate][:AMPLitude]

### Syntax

[SOURCE:]VOLTage[:LEVel][:IMMediate][:AMPLitude] <value>

This command sets the amplitude for the constant voltage output.

[SOURCE:]VOLTage[:LEVel][:IMMediate][:AMPLitude]?

This query returns a numeric value that represents the amplitude of the constant voltage output.

### NOTE

This command cannot change the range of the output. You should use the SOURCE:VOLTage:RANGe command to change range of the output.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 V	31.5 V	Min
		S2	0 V	8.4 V	
		S2m	0 V	1.05 V	
		S1S2 (AUTO)	0 V	31.5 V	

### Example

→ VOLT 10.0

*This command sets the immediate output voltage level to 10 V.*

→ VOLT?

*This query returns the output voltage level.*

← +1.000000E+01

## 11 SOURCE Subsystem

[SOURCE:]CURRENT[:LEVEL][:IMMEDIATE][:AMPLITUDE]

# [SOURCE:]CURRENT[:LEVEL][:IMMEDIATE][:AMPLITUDE]

### Syntax

[SOURCE:]CURRENT[:LEVEL][:IMMEDIATE][:AMPLITUDE] <value>

This command sets the amplitude for the constant current output.

[SOURCE:]CURRENT[:LEVEL][:IMMEDIATE][:AMPLITUDE]?

This query returns a numeric value that represents the amplitude of the constant current output.

### NOTE

This command cannot change the range of the output. You should use the SOURCE:CURRENT:RANGE command to change range of the output.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 A	1.05 A	Min
		S1m	0 A	105 mA	
		S2	0 A	3.15 A	
		S1S2 (AUTO)	0 A	3.15 A	

### Example

→ CURR 0.5

*This command sets the immediate output current level to 0.5 A.*

→ CURR?

*This query returns the output current level.*

← +5.000000E-01

## [SOURCE:]VOLTage[:LEVel]:RAMP[:AMPLitude]

### Syntax

[SOURCE:]VOLTage[:LEVel]:RAMP[:AMPLitude] <value>

This command sets the amplitude end position for the voltage ramp signal.

[SOURCE:]VOLTage[:LEVel]:RAMP[:AMPLitude]?

This query returns a numeric value that represents the amplitude end position of the voltage ramp signal.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 V	31.5 V	30 V
		S2	0 V	8.4 V	8 V
		S2m	0 V	1.05 V	1 V

### Remarks

- When the output range is changed (SOURCE:VOLTage:RANGE or SOURCE:CURRENT:RANGE command), the ramp amplitude end position will always be set to the default value (if unchanged) or set to the last stored value.
- The ramp amplitude end position value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

→ VOLT:RAMP 8

*This command sets the amplitude end position of the voltage ramp signal to 8 V.*

→ VOLT:RAMP?

*This query returns the amplitude end position of the voltage ramp signal.*

← +8.000000E+00

## 11 SOURCE Subsystem

[SOURCE:]CURRENT[:LEVEL]:RAMP[:AMPLITUDE]

### [SOURCE:]CURRENT[:LEVEL]:RAMP[:AMPLITUDE]

#### Syntax

[SOURCE:]CURRENT[:LEVEL]:RAMP[:AMPLITUDE] <value>

This command sets the amplitude end position for the current ramp signal.

[SOURCE:]CURRENT[:LEVEL]:RAMP[:AMPLITUDE]?

This query returns a numeric value that represents the amplitude end position of the current ramp signal.

#### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 A	1.05 A	1 A
		S1m	0 A	105 mA	100 mA
		S2	0 A	3.15 A	3 A

#### Remarks

- When the output range is changed (SOURCE:VOLTage:RANGE or SOURCE:CURRENT:RANGE command), the ramp amplitude end position will always be set to the default value (if unchanged) or set to the last stored value.
- The ramp amplitude end position value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.



**Example**

→ CURR:RAMP 1

*This command sets the amplitude end position of the current ramp signal to 1 A.*

→ CURR:RAMP?

*This query returns the amplitude end position of the current ramp signal .*

← +1.000000E+00

## 11 SOURCE Subsystem

[SOURCE:]VOLTage[:LEVel]:RAMP:STEP

# [SOURCE:]VOLTage[:LEVel]:RAMP:STEP

### Syntax

```
[SOURCE:]VOLTage[:LEVel]:RAMP:STEP <value>
```

This command sets the number of steps for the voltage ramp signal.

```
[SOURCE:]VOLTage[:LEVel]:RAMP:STEP
```

This query returns a numeric value that represents the number of steps in the voltage ramp signal.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	1 to 10000 (steps)	100 (steps)

### Remarks

- When the output range is changed (SOURCE:VOLTage:RANGE or SOURCE:CURRENT:RANGE command), the ramp step will remain unchanged.
- The ramp step value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

```
→ VOLT:RAMP:STEP 10
```

*This command sets the number of steps in the voltage ramp signal to 10.*

```
→ VOLT:RAMP:STEP?
```

*This query returns the number of steps in the voltage ramp signal.*

```
← +1.000000E+01
```

## [SOURCE:]CURRENT[:LEVEL]:RAMP:STEP

### Syntax

[SOURCE:]CURRENT[:LEVEL]:RAMP:STEP <value>

This command sets the number of steps for the current ramp signal.

[SOURCE:]CURRENT[:LEVEL]:RAMP:STEP

This query returns a numeric value that represents the number of steps in the current ramp signal.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	1 to 10000 (steps)	100 (steps)

### Remarks

- When the output range is changed (SOURCE:VOLTage:RANGE or SOURCE:CURRENT:RANGE command), the ramp step will remain unchanged.
- The ramp step value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

→ CURR:RAMP:STEP 10

*This command sets the number of steps in the current ramp signal to 10.*

→ CURR:RAMP:STEP?

*This query returns the number of steps in the current ramp signal.*

← +1.000000E+01

## 11 SOURce Subsystem

[SOURce:]VOLTage[:LEVel]:SCAN[:AMPLitude]

# [SOURce:]VOLTage[:LEVel]:SCAN[:AMPLitude]

### Syntax

[SOURce:]VOLTage[:LEVel]:SCAN[:AMPLitude] <value>

This command sets the amplitude end position for the voltage scan signal.

[SOURce:]VOLTage[:LEVel]:SCAN[:AMPLitude]?

This query returns a numeric value that represents the amplitude end position of the voltage scan signal.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 V	31.5 V	30 V
		S2	0 V	8.4 V	8 V
		S2m	0 V	1.05 V	1 V

### Remarks

- When the output range is changed (SOURce:VOLTage:RANGE or SOURce:CURREnt:RANGE command), the scan amplitude end position will always be set to the default value (if unchanged) or set to the last stored value.
- The scan amplitude end position value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTem:PRESet command), or function change.

### Example

→ VOLT:SCAN 8

*This command sets the amplitude end position of the voltage scan signal to 8 V.*

→ VOLT:SCAN?

*This query returns the amplitude end position of the voltage scan signal.*

← +8.000000E+00

## [SOURCE:]CURRENT[:LEVEL]:SCAN[:AMPLITUDE]

### Syntax

[SOURCE:]CURRENT[:LEVEL]:SCAN[:AMPLITUDE] <value>

This command sets the amplitude end position for the current scan signal.

[SOURCE:]CURRENT[:LEVEL]:SCAN[:AMPLITUDE]?

This query returns a numeric value that represents the amplitude end position of the current scan signal.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 A	1.05 A	1 A
		S1m	0 A	105 mA	100 mA
		S2	0 A	3.15 A	3 A

### Remarks

- When the output range is changed (SOURCE:VOLTage:RANGE or SOURCE:CURRENT:RANGE command), the scan amplitude end position will always be set to the default value (if unchanged) or set to the last stored value.
- The scan amplitude end position value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

→ CURR:SCAN 1

*This command sets the amplitude end position of the current scan signal to 1 A.*

→ CURR:SCAN?

*This query returns the amplitude end position of the current scan signal.*

← +1.000000E+00

## 11 SOURCE Subsystem

[SOURCE:]VOLTage[:LEVel]:SCAN:STEP

# [SOURCE:]VOLTage[:LEVel]:SCAN:STEP

### Syntax

```
[SOURCE:]VOLTage[:LEVel]:SCAN:STEP <value>
```

This command sets the number of steps for the voltage scan signal.

```
[SOURCE:]VOLTage[:LEVel]:SCAN:STEP
```

This query returns a numeric value that represents the number of steps in the voltage scan signal.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	1 to 100 (steps)	10 (steps)

### Remarks

- When the output range is changed (SOURCE:VOLTage:RANGE or SOURCE:CURRENT:RANGE command), the scan step will remain unchanged.
- The scan step value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

```
→ VOLT:SCAN:STEP 20
```

*This command sets the number of steps in the voltage scan signal to 20.*

```
→ VOLT:SCAN:STEP?
```

*This query returns the number of steps in the voltage scan signal.*

```
← +2.000000E+01
```

## [SOURCE:]CURRENT[:LEVEL]:SCAN:STEP

### Syntax

[SOURCE:]CURRENT[:LEVEL]:SCAN:STEP <value>

This command sets the number of steps for the current scan signal.

[SOURCE:]CURRENT[:LEVEL]:SCAN:STEP

This query returns a numeric value that represents the number of steps in the current scan signal.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	1 to 100 (steps)	100 (steps)

### Remarks

- When the output range is changed (SOURCE:VOLTage:RANGE or SOURCE:CURRENT:RANGE command), the scan step will remain unchanged.
- The scan step value is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

→ CURR:SCAN:STEP 20

*This command sets the number of steps in the current scan signal to 20.*

→ CURR:SCAN:STEP?

*This query returns the number of steps in the current scan signal.*

← +2.000000E+01

## 11 SOURCE Subsystem

[SOURCE:]VOLTage[:LEVel]:SCAN:DWELLing

# [SOURCE:]VOLTage[:LEVel]:SCAN:DWELLing

### Syntax

[SOURCE:]VOLTage[:LEVel]:SCAN:DWELLing <value>

This command sets the dwelling time for the voltage scan signal.

[SOURCE:]VOLTage[:LEVel]:SCAN:DWELLing?

This query returns a numeric value that represents the dwelling time in the voltage scan signal.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	1 s to 99 s	2 s

### Remarks

- When the output range is changed (SOURCE:VOLTage:RANGE or SOURCE:CURRENT:RANGE command), the scan dwelling time will remain unchanged.
- The scan dwelling time is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

→ VOLT:SCAN:DWEL 1

*This command sets the dwelling time in the voltage scan signal to 1 s.*

→ VOLT:SCAN:DWEL?

*This query returns the dwelling time in the voltage scan signal.*

← +1.000000E+00



## [SOURCE:]CURRENT[:LEVEL]:SCAN:DWELLing

### Syntax

[SOURCE:]CURRENT[:LEVEL]:SCAN:DWELLing <value>

This command sets the dwelling time for the current scan signal.

[SOURCE:]CURRENT[:LEVEL]:SCAN:DWELLing?

This query returns a numeric value that represents the dwelling time in the current scan signal.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	1 s to 99 s	2 s

### Remarks

- When the output range is changed (SOURCE:VOLTage:RANGE or SOURCE:CURRENT:RANGE command), the scan dwelling time will remain unchanged.
- The scan dwelling time is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

### Example

→ CURR:SCAN:DWEL 1

*This command sets the dwelling time in the current scan signal to 1 s.*

→ CURR:SCAN:DWEL?

*This query returns the dwelling time in the current scan signal.*

← +1.000000E+00

## 11 SOURce Subsystem

[SOURce:]SQUare[:LEVel][:IMMediate]:AMPLitude

# [SOURce:]SQUare[:LEVel][:IMMediate]:AMPLitude

### Syntax

[SOURce:]SQUare[:LEVel][:IMMediate]:AMPLitude <value>

This command sets the amplitude for the square-wave output.

[SOURce:]SQUare[:LEVel][:IMMediate]:AMPLitude?

This query returns a numeric value that represents the amplitude of the square-wave output.

### NOTE

This command cannot change the range of the output. You should use the `SOURce:VOLTagE:RANge` command to change range of the output.

### Parameter

Item	Type	Range of values			Default value
		Range	Min	Max	
value	Numeric	S1	0 V	30 V	Min
		S2	0 V	8 V	
		S1S2 (AUTO)	0 V	30 V	

### Example

→ SQU:AMPL 10.0

*This command sets the immediate square-wave output voltage to 10.0 V.*

→ SQU:AMPL?

*This query returns the square-wave output voltage.*

← +1.000000E+01

## [SOURCE:]SQUARE[:LEVEL][:IMMEDIATE]:FREQUENCY

### Syntax

[SOURCE:]SQUARE[:LEVEL][:IMMEDIATE]:FREQUENCY <value>

This command sets the frequency for the square-wave output.

[SOURCE:]SQUARE[:LEVEL][:IMMEDIATE]:FREQUENCY?

This query returns a numeric value that represents the frequency of the square-wave output.

### Parameter

Range	Item	Type	Range of values	Default value
S1 or S2	value	Discrete	0.5, 2, 5, 6, 10, 15, 25, 30, 40, 50, 60, 75, 80, 100, 120, 150, 200, 240, 300, 400, 480, 600, 800, 1200, 1600, 2400, 4800 (Hz) <sup>[1]</sup>	600 (Hz)
S1S2 (autoranging)	value	Discrete	10 ~ 4800 (Hz)	600 (Hz)

<sup>[1]</sup> If you choose to enter a numeric value of your own choice, the U3606B automatically selects the nearest predefined setting that is equal or greater than the numeric value. For example, sending the `SQU:FREQ 49` command will result in the predefined setting of 50 Hz being selected.

### Example

→ SQU:FREQ 800

*This command sets the square-wave output frequency to 800 Hz.*

→ SQU:FREQ?

*This query returns the square-wave output frequency.*

← +8.000000E+02

## 11 SOURCE Subsystem

[SOURCE:]SQUare[:LEVel][:IMMediate]:DCYClE

# [SOURCE:]SQUare[:LEVel][:IMMediate]:DCYClE

### Syntax

[SOURCE:]SQUare[:LEVel][:IMMediate]:DCYClE <value>

This command sets the duty cycle for the square-wave output.

[SOURCE:]SQUare[:LEVel][:IMMediate]:DCYClE?

This query returns a numeric value that represents the duty cycle of the square-wave output.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	0 (%) to 100 (%)	50 (%)

### Remarks

The duty cycle can be stepped through 256 steps, with each step equivalent to 0.390625%. The U3606B will adjust the input value to the nearest step, calculated by the following equation:

$$\text{Nearest step} = \frac{\left(\frac{\text{Input value} \times 256}{100}\right)^*}{256} \times 100$$

\* All decimal parts are truncated. For example, 51.2 is truncated to 51.

As an example, when you send the command SQU:DCYC 20, the duty cycle is adjusted to 19.92%. If you send the command SQU:DCYC 0, the nearest duty cycle step, 0.39% will be selected.

The SQUare:DCYClE command will return error -200, "Execution error" if range S1S2 (autoranging) is selected.

**Example**

→ SQU:DCYC 20

*This command sets the square-wave output duty cycle to approximately 20%.*

→ SQU:DCYC?

*This query returns the square-wave output duty cycle.*

← +1.992180E+01

## 11 SOURCE Subsystem

[SOURCE:]SQUare[:LEVel][:IMMediate]:PWIDth

# [SOURCE:]SQUare[:LEVel][:IMMediate]:PWIDth

### Syntax

[SOURCE:]SQUare[:LEVel][:IMMediate]:PWIDth <second>

This command sets the pulse width for the square-wave output.

[SOURCE:]SQUare[:LEVel][:IMMediate]:PWIDth?

This query returns a numeric value that represents the pulse width of the square-wave output.

### Parameter

Item	Type	Range of values	Default value
second	Numeric	0 (ms) to MAX <sup>[1]</sup> (ms)	0.8333 (ms)

[1] The maximum time (MAX) is dependent on the frequency value of the square wave output. Default frequency value is 600 Hz.

### Remarks

The pulse width can be stepped through 256 steps, with each step equivalent to  $1/(256 \times \text{frequency})$ . The input value is always calculated to the duty cycle first.

$$\text{Duty cycle (\%)} = \text{Pulse width (s)} \times \text{Frequency (Hz)} \times 100 (\%)$$

The duty cycle value calculated in the equation above will be used to calculate the nearest duty cycle step available in the U3606B.

$$\text{Nearest step (Duty cycle)} = \frac{\left(\frac{\text{Duty cycle} \times 256}{100}\right)^*}{256} \times 100$$

\* All decimal parts are truncated. For example, 184.32 is truncated to 184.

The U3606B will then adjust the input value to the nearest pulse width step, calculated by the following equation:

$$\text{Nearest step (Pulse width)} = \frac{\text{Duty cycle}}{\text{Frequency} \times 100}$$

The SQUare:PWIDth command will return error -200, "Execution error" if range S1S2 (autoranging) is selected.

**Example**

→ SQU:PWID 0.0012

*This command sets the square-wave output pulse width to approximately 1.2 ms.*

→ SQU:PWID?

*This query returns the square-wave output duty cycle.*

← +1.197910E-03

**Calculation example**

The pulse width can be stepped through 256 steps, with each step equivalent to 1/(256 × frequency). The input value is always calculated to the duty cycle first.

$$Duty\ cycle\ (\%) = Pulse\ width\ (s) \times Frequency\ (Hz) \times 100\ (\%)$$

$$Duty\ cycle\ (\%) = 0.0012\ (s) \times 600\ (Hz) \times 100\ (\%) = 72\ (\%)$$

The duty cycle value calculated in the equation above will be used to calculate the nearest duty cycle step available in the U3606B.

$$Nearest\ step\ (Duty\ cycle) = \frac{\left(\frac{Duty\ cycle \times 256}{100}\right)^*}{256} \times 100$$

$$Nearest\ step\ (Duty\ cycle) = \frac{\left(\frac{72 \times 256}{100}\right)^*}{256} \times 100 = 71.875\ (\%)$$

\*All decimal parts are truncated, for example 184.32 is truncated to 184.

## 11 SOURCE Subsystem

[SOURCE:]SQUARE[:LEVEL][:IMMEDIATE]:PWIDth

The U3606B will then adjust the input value to the nearest pulse width step, calculated by the following equation:

$$\text{Nearest step (Pulse width)} = \frac{\text{Duty cycle}}{\text{Frequency} \times 100}$$

$$\text{Nearest step (Pulse width)} = \frac{71.875}{600 \times 100} = 1.19791 \text{ (ms)}$$



## [SOURCE:]PROTECTION[:STATE]

### Syntax

[SOURCE:]PROTECTION[:STATE] {0|1|OFF|ON}

This command sets the output protection state.

[SOURCE:]PROTECTION[:STATE]?

This query returns a boolean value that represents the output protection state.

### Parameter

Item	Type	Range of values	Default value
state	Boolean	<ul style="list-style-type: none"> <li>• 0 OFF: Disable circuit trip</li> <li>• 1 ON: Enable circuit trip</li> </ul>	1

### CAUTION

Disabling the output protection state may result in equipment damage if an overvoltage or overcurrent condition occurs.

### Remarks

- The output protection state is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTEM:PRESet command), or function change.

## 11 SOURCE Subsystem

[SOURCE:]PROTECTION[:STATe]

- In the event that there is a large current over the system protection values (see below), the U3606B will trip to protect itself even if the output protection state is set to “0 | OFF”.

Range	System protection (approx.)
S1 (30 V/1 A)	1.3 A
S1m (30 V/100 mA)	230 mA
S2 (8 V/3 A)	3.5 A
S2m (1000 mV/3 A)	3.5 A
S1S2 (autoranging)	3.5 A

### Example

```
→ PROT:STAT OFF
```

*This command disables the output circuit trip.*

```
→ PROT:STAT?
```

*This query returns the output protection state.*

```
← 0
```

## [SOURCE:]SSTart:STEP

### Syntax

[SOURCE:]SSTart:STEP <value>

This command sets the soft start step for constant voltage or constant current output.

[SOURCE:]SSTart:STEP?

This query returns a numeric value that represents the soft start step setting for constant voltage or constant current output.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	1 to 10000	1

### Remarks

- This command stores the value set in the nonvolatile memory.

### Example

→ SST:STEP 10	<i>This command sets the output soft start step to 10.</i>
→ SST:STEP?	<i>This query returns the output soft start step.</i>
← +1.000000E+01	

**11 SOURce Subsystem**  
[SOURce:]SStart:STEP

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

# **12**

## **STATus Subsystem**

STATus:OPERation:CONDition?	318
STATus:OPERation:ENABle	319
STATus:OPERation[:EVENT]?	321
STATus:PRESet	322
STATus:QUEStionable:CONDition?	323
STATus:QUEStionable:ENABle	324
STATus:QUEStionable[:EVENT]?	326

This chapter describes the STATus commands used to program the U3606B over a remote interface. Use the STATus commands to determine the operating condition of the U3606B at any time.

## 12 STATus Subsystem

STATus:OPERation:CONDition?

# STATus:OPERation:CONDition?

### Syntax

STATus:OPERation:CONDition?

This query reads the condition register for the Standard Operation register group and returns a decimal value which corresponds to the binary-weighted sum of all bits set in the condition register (Table 12-1 on page 319). For example, if bit 5 (decimal value = 32) and bit 9 (decimal value = 512) are set, this command will return the decimal value “+544”.

### NOTE

This is a read-only register and the bits are not cleared when you read the register. For more information on the bit definitions of the Standard Operation register and the SCPI status diagram see the “SCPI Status System” on page 12.

### Remarks

- A condition register continuously monitors the state of the instrument. The bits in the condition register are updated in real time and the bits are not latched or buffered.
- The condition register bits reflect the current condition of the instrument. If a condition goes away, the corresponding bit is cleared in the condition register.

### Example

→ STAT:OPER:COND?

*This command reads the condition register (bit 5 is set).*

← +32

### See also

“STATus:OPERation:ENABLE” on page 319

“STATus:OPERation[:EVENT]?” on page 321

## STATus:OPERation:ENABle

### Syntax

STATus:OPERation:ENABle <enable\_value>

This command enables bits in the enable register for the Standard Operation register group. The selected bits are then reported to the Status Byte register.

**Table 12-1** Standard Operation register mapping

Bit number	Decimal value	Meaning
0	1	Calibration in progress
1 to 3	Not used	Not used
4	16	Measuring
5	32	Waiting for trigger
6 to 7	Not used	Not used
8	256	Configuration change
9	Not used	Not used
10	1024	Instrument locked
11 to 15	Not used	Not used

STATus:OPERation:ENABle?

This query reads the enable register and returns a decimal value that corresponds to the binary-weighted sum of all bits set in the register. For example, if bit 8 (decimal value = 256) and bit 10 (decimal value = 1024) are enabled, the query command will return “+1280”.

**NOTE**

For more information on the bit definitions of the Standard Operation register and the SCPI status diagram, see “SCPI Status System” on page 12.

## 12 STATus Subsystem

STATus:OPERation:ENABLE

### Parameter

Item	Type	Range of values	Default value
enable_ value	Numeric	0 to 65535 <sup>[1]</sup>	0

<sup>[1]</sup> Refer to Table 12-1 for the list of bit definitions for the Standard Operation register. To enable more than one bit at a time, use the binary-weighted sum of the intended bits. For example, to set bit 4 and 5, use 48 (16 + 32) as your value.

### Remarks

- An enable register defines which bits in the event register will be reported to the Status Byte register group. You can write to or read from an enable register.
- The \*CLS (clear status) command will not clear the enable register but it does clear all bits in the event register.
- The STATus:PRESet command will clear all bits in the enable register.
- The \*RST and SYSTem:PRESet commands have no effect on this register.
- The \*PSC command affects whether this register is cleared at power on.

### Example

```
→ STAT:OPER:ENAB 32
```

*This command enables bit 5 (decimal value = 32) in the enable register.*

```
→ STAT:OPER:ENAB?
```

*This query returns which bits are enabled in the register.*

```
← 32
```

### See also

“STATus:PRESet” on page 322

“SYSTem:PRESet” on page 341

“\*PSC” on page 368



## STATus:OPERation[:EVENT]?

### Syntax

STATus:OPERation[:EVENT]?

This query reads the event register for the Standard Operation register group and returns a decimal value which corresponds to the binary-weighted sum of all bits set in the event register (Table 12-1 on page 319). For example, if bit 0 (decimal value = 1) and bit 4 (decimal value = 16) are set (and the corresponding bits are enabled), this command will return the decimal value “+17”.

### NOTE

This is a read-only register and the bits are cleared when you read the register. For more information on the bit definitions of the Standard Operation register and the SCPI status diagram, see “SCPI Status System” on page 12.

### Remarks

- Once a bit is set, it remains set until cleared by reading the event register.
- The \*RST, SYSTem:PRESet, STATus:PRESet, and \*PSC commands have no effect on this register.

### Example

→ STAT:OPER?

*This command reads the event register (bit 9 is set).*

← +512

### See also

“STATus:PRESet” on page 322

“SYSTem:PRESet” on page 341

“\*PSC” on page 368

## 12 STATus Subsystem

STATus:PRESet

# STATus:PRESet

### Syntax

STATus:PRESet

This command clears all bits in the Status Questionable enable register and the Status Operation enable register.

### Remarks

An enable register defines which bits in the event register will be reported to the Status Byte register group. You can write to or read from an enable register.

### Example

→ STAT:PRESet

*This command clears the enable register bits.*

## STATus:QUEStionable:CONDition?

### Syntax

STATus:QUEStionable:CONDition?

This command queries the condition register for the Questionable Data register group and returns a decimal value which corresponds to the binary-weighted sum of all bits set in the condition register (Table 12-2 on page 324). For example, if bit 0 (decimal value = 1) and bit 2 (decimal value = 4) are set, this command will return the decimal value “+5”.

### NOTE

This is a read-only register and the bits are not cleared when you read the register. For more information on the bit definitions of the Questionable Data register and the SCPI status diagram see the “SCPI Status System” on page 12.

### Remarks

- A condition register continuously monitors the state of the instrument. The bits in the condition register are updated in real time and the bits are not latched or buffered.
- The condition register bits reflect the current condition of the instrument. If a condition goes away, the corresponding bit is cleared in the condition register. A Factory Reset (\*RST command) will clear all bits in the condition register.

### Example

→ STAT:QUES:COND?

*This command reads the condition register (bit 12 is set).*

← +4096

### See also

“STATus:QUEStionable:ENABLE” on page 324

“STATus:QUEStionable[:EVENT]?” on page 326

## 12 STATus Subsystem

STATus:QUEStionable:ENABle

# STATus:QUEStionable:ENABle

### Syntax

```
STATus:QUEStionable:ENABle <enable_value>
```

This command enables bits in the enable register for the Questionable Data register group. The selected bits are then reported to the Status Byte.

**Table 12-2** Questionable Data register mapping

Bit number	Decimal value	Meaning
0	1	Voltage overload
1	2	Current overload
2	4	Output over voltage
3	8	Output over current
4	Not used	Not used
5	32	Frequency overload/underflow
6 to 7	Not used	Not used
8	256	Calibration corrupt
9	512	Resistance overload
10	1024	Capacitance overload/underflow
11	2048	Lower limit failed
12	4096	Upper limit failed
13 to 15	Not used	Not used

```
STATus:QUEStionable:ENABle?
```

This query reads the enable register and returns a decimal value that corresponds to the binary-weighted sum of all bits set in the register. For example, if bit 8 (decimal value = 256) and bit 10 (decimal value = 1024) are enabled, the query command will return "+1280".

**NOTE**

For more information on the bit definitions of the Questionable Data register and the SCPI status diagram, see “SCPI Status System” on page 12.

**Parameter**

Item	Type	Range of values	Default value
enable_ value	Numeric	0 to 65535 <sup>[1]</sup>	0

[1] Refer to Table 12-2 for the list of bit definitions for the Questionable Data register. To enable more than one bit at a time, use the binary-weighted sum of the intended bits. For example, to set bit 3 and 5, use 40 (8 + 32) as your value.

**Remarks**

- An enable register defines which bits in the event register will be reported to the Status Byte register group. You can write to or read from an enable register.
- The \*CLS (clear status) command will not clear the enable register but it does clear all bits in the event register.
- The STATus:PRESet command will clear all bits in the enable register.
- The \*RST and SYSTem:PRESet commands have no effect on this register.
- The \*PSC command affects whether this register is cleared at power on.

**Example**

→ STAT:QUES:ENAB 512

*This command enables bit 9 (decimal value = 512) in the enable register.*

→ STAT:QUES:ENAB?

*This query returns which bits are enabled in the register.*

← +512

## 12 STATus Subsystem

STATus:QUEStionable[:EVENT]?

# STATus:QUEStionable[:EVENT]?

### Syntax

STATus:QUEStionable[:EVENT]?

This command queries the event register for the Questionable Data register group and returns a decimal value which corresponds to the binary-weighted sum of all bits set in the condition register. For example, if bit 1 (decimal value = 2) and bit 9 (decimal value = 512) are set, this command will return the decimal value "+514".

### NOTE

This is a read-only register and the bits are cleared when you read the register. For more information on the bit definitions of the Questionable Data register and the SCPI status diagram see the "SCPI Status System" on page 12.

### Remarks

- An event register latches the various events from the condition register. There is no buffering in this register; while an event bit is set, subsequent events corresponding to that bit are ignored.
- Once a bit is set, it remains set until cleared by reading the event register.
- The STATus:PRESet, SYSTem:PRESet, \*RST, and \*PSC commands have no effect on this register.

### Example

```
→ STAT:QUES?
```

*This command reads the event register for the Questionable Data register group.*

```
← +2568
```

### See also

"STATus:PRESet" on page 322

"SYSTem:PRESet" on page 341

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

## 12 **STATus Subsystem**

STATus:QUEStionable[:EVENT]?



# **13**

## **SYSTem Subsystem**

SYSTem:BEEPer[:IMMEDIATE]	332
SYSTem:BEEPer:STATe	333
SYSTem:DATA:INTerval	335
SYSTem:DATA:LOOP	336
SYSTem:DEFault	337
SYSTem:ERRor?	338
SYSTem:LOCAl	340
SYSTem:PRESet	341
SYSTem:RWLock	342
SYSTem:SMOoth[:STATe]	343
SYSTem:SMOoth:FLUCtuation	345
SYSTem:SMOoth:POINts	347
SYSTem:VERSion?	348

This chapter describes the SYSTem commands used to program the U3606B over a remote interface. Use the SYSTem commands to enable or disable the beeper tone, to lock or unlock the front panel keys, or to return the error numbers and messages from the error queue.

**13 SYSTem Subsystem**  
SYSTem:BEEPer[:IMMEDIATE]

## SYSTem:BEEPer[:IMMEDIATE]

### Syntax

```
SYSTem:BEEPer[:IMMEDIATE]
```

This command issues a single beep immediately from the instrument. This may be useful for program development and troubleshooting.

### Remarks

This command does not override the current beeper state (SYSTem:BEEPer:STATE command). You must enable the beeper (SYSTem:BEEPer:STATE ON) before using this command.

### Example

```
→ SYST:BEEP
```

*This command issues a single beep from the instrument.*

### See also

“SYSTem:BEEPer[:IMMEDIATE]” [on page 332](#)

## SYSTem:BEEPer:STATe

### Syntax

SYSTem:BEEPer:STATe {0|1|OFF|ON}

This command enables or disables the beeper tone.

The valid options are:

- 0|OFF: Disables the beeper tone
- 1|ON: Enables the beeper tone

SYSTem:BEEPer:STATe?

This query returns a boolean value that represents the beeper state of the instrument.

### Parameter

Item	Type	Range of values	Default value
state	Boolean	0 1 OFF ON	1

### Remarks

- A beep tone is emitted only if the beep state is ON in the following cases:
  - An error is generated.
  - A set low or high limit is exceeded in a limit test.
  - A stable reading is captured in the reading hold mode.
  - A forward-biased diode is measured in the diode test function.
- The beeper setting is stored in nonvolatile memory, and does not change when power has been off, after a Factory Reset (\*RST command), or after an Instrument Preset (SYSTem:PRESet command).

## 13 SYSTem Subsystem

SYSTem:BEEPer:STATe

### Example

```
→ SYST:BEEP:STAT OFF
```

*This command disables the beeper tone in the instrument.*

```
→ SYST:BEEP:STAT
```

*This query returns the beeper state of the instrument.*

```
← 0
```

### See also

[“SYSTem:BEEPer\[:IMMediate\]” on page 332](#)

[“SYSTem:PRESet” on page 341](#)

[“\\*RST” on page 371](#)

## SYSTem:DATA:INTerval

### Syntax

SYSTem:DATA:INTerval <second>

This command sets the interval time for the data logging loop.

SYSTem:DATA:INTerval?

This command queries the interval time for the data logging loop.

### Parameter

Item	Type	Range of values	Default value
second	Numeric	1 to 99999 seconds	1 second

### Remarks

The SYSTem:DATA:INTerval command stores the interval time in the nonvolatile memory.

### Example

→ SYST:DATA:INT 10

*This command sets the interval time for the data logging loop to approximately 10 s.*

→ SYST:DATA:INT?

*This query returns the interval time for the data logging loop.*

← +1.000000E+01

## SYSTem:DATA:LOOP

### Syntax

SYSTem:DATA:LOOP <number>

This command sets the loop number for data logging.

SYSTem:DATA:LOOP?

This command queries the loop number for data logging.

### Parameter

Item	Type	Range of values	Default value
number	Numeric	1 to 29000	3600

### Remarks

The SYSTem:DATA:LOOP command stores the interval time in the nonvolatile memory.

### Example

→ SYST:DATA:LOOP 30

*This command sets the loop number for data logging.*

→ SYST:DATA:LOOP?

*This query returns the loop number for data logging.*

← +3.000000E+01

## SYSTem:DEFault

### Syntax

```
SYSTem:DEFault
```

This command set the default factory settings without the calibrated data to the nonvolatile memory. The instrument will reset after the command is completed.

### Remarks

The SYSTem:DEFault command also performs memory sanitization and clears all the logging data.

### Example

```
→ SYST:DEF
```

*This command resets the instrument to its factory default state.*

### See also

**\*\*RST** on page 371

## SYSTem:ERRor?

### Syntax

SYSTem:ERRor?

This command reads and clears one error from the instrument's error queue. A record of up to 20 errors can be stored in the U3606B error queue.

For SCPI command errors, this command returns the following format string: <Number, "Error String">

The error string may contain up to 255 characters and consists of an error number and an error string enclosed in double quotes.

For example: -113, "Undefined header"

Errors are retrieved in a first-in-first-out (FIFO) order. The first error returned is the first error that was stored. Reading this error will clear this error allowing the next error to be read (if there are other errors stored).

### Remarks

- The U3606B beeps once each time a command syntax or hardware error occurs.
- If more than 20 errors have occurred, the last error stored in the queue (the most recent error) is replaced with error number -350, "Error queue overflow". No additional errors are stored until you remove errors from the queue.
- If no errors have occurred when you read the error queue, the instrument responds with +0, "No error".
- Error conditions are also summarized in the Status Byte register.
- The error queue is cleared by the clear status (\*CLS) command (for I/O session), and when power is cycled (for all errors). However, the error queue will not be cleared by a factory reset (\*RST) command.



### Example

→ SYST:ERR?	<i>This query reads and clears one error.</i>
← +0, "No error"	<i>There are no errors recorded.</i>
→ SORU:CURR:RANG 3	<i>A command syntax error is generated when this command is sent.</i>
→ SYST:ERR?	
← -113, "Undefined header"	<i>An invalid command was specified.</i>

### See also

["\\*CLS" on page 362](#)

["\\*RST" on page 371](#)

## SYSTem:LOCa1

### Syntax

SYSTem:LOCa1

### Description

This command places the instrument in the local state. All keys on the front panel are now fully functional.

### Example

```
-> SYST:LOC
```

*This command places the instrument in the local state.*

### See also

“SYSTem:RWLock” [on page 342](#)

## **SYSTem:PRESet**

### **Syntax**

SYSTem:PRESet

This command resets the instrument to its factory default state, which is the state when the U3606B is powered-on for the first time. This command is included for compatibility with other products and performs the same actions as the \*RST command.

### **Example**

→ SYST:PRES

*This command resets the instrument to its factory default state.*

### **See also**

**\*\*RST** on page 371


## SYSTem:RWLock

### Syntax

SYSTem:RWLock

This command places the instrument in the remote state. All keys on the front panel are now disabled.

### NOTE

This command locks all keys in the front panel including the  key.

### Example

```
→ SYST:RWL
```

*This command places the instrument in the remote state.*

### See also

“SYSTem:LOCal” on page 340

## SYSTem:SMOoth[:STATe]

SYSTem:SMOoth[:STATe] {0|1|OFF|ON}

This command disables or enables the smooth function.

SYSTem:SMOoth[:STATe]?

This command queries the state of the smooth function and returns a boolean value that represent the state.

### Parameter

Item	Type	Range of values	Default value
state	Boolean	<ul style="list-style-type: none"> <li>• 0 OFF: Disable smooth function</li> <li>• 1 ON: Enable smooth function</li> </ul>	0

### Remarks

- If the instrument encounters a signal that is out of range, the instrument gives an overload indication.
  - Positive overload: “+9.900000E+37” or “OL” from the front panel.
  - Negative overload: “-9.900000E+37” or “-OL” from the front panel.

The smooth function calculations will restart once the signals are back in range.
- If the trigger mode is enabled while the smooth function is ON, the smooth function will be disabled automatically. The smooth function will reactivate once the trigger mode is exited.
- The smooth function state is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTem:PRESet command), or function change.

## 13 SYSTem Subsystem

SYSTem:SMOoth[:STATe]

### Example

```
→ SYST:SMO:STAT OFF
```

*This command disables the smooth function of the instrument.*

```
→ SYST:SMO:STAT?
```

*This query returns the smooth function state.*

```
← 0
```

### See also

[“SYSTem:PRESet” on page 341](#)

[“SYSTem:SMOoth:FLUCtuation” on page 345](#)

[“SYSTem:SMOoth:POINts” on page 347](#)

[“\\*RST” on page 371](#)

## SYSTem:SMOoth:FLUCtuation

### Syntax

SYSTem:SMOoth:FLUCtuation <value>

This command sets the fluctuation count of the smooth function.

SYSTem:SMOoth:FLUCtuation?

This command queries the fluctuation count setting of the smooth function and returns the numeric fluctuation count value.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	0.0% to 9.9%	1.0%

### Remarks

- When the value of the fluctuation count is set to 0.0%, the fluctuation function of the smooth function is disabled.
- The smooth function state is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTem:PRESet command), or function change.

### NOTE

Input signal readings that are more than or less than the fluctuation count of the previous signal will reset the smooth function. It is recommended that the fluctuation count is enabled.

## 13 SYSTem Subsystem

SYSTem:SMOoth:FLUCtuation

### Example

```
→ SYST:SMO:FLUC 0.5
```

*This command sets the value of the fluctuation count to 0.5%.*

```
→ SYST:SMO:FLUC?
```

*This query returns the value of the fluctuation count.*

```
← 0.5
```

### See also

[“SYSTem:PRESet” on page 341](#)

[“SYSTem:SMOoth\[:STATe\]” on page 343](#)

[“SYSTem:SMOoth:POINTs” on page 347](#)

[“\\*RST” on page 371](#)



## SYSTem:SMOoth:POINts

### Syntax

SYSTem:SMOoth:POINts <value>

This command sets the number of points for the smooth function.

SYSTem:SMOoth:POINts?

This command queries the number of points of the smooth function and returns the numeric number of points value.

### Parameter

Item	Type	Range of values	Default value
value	Numeric	2 to 1999	10

### Remarks

- The smooth function state is stored in the nonvolatile memory. It is not affected by a power-on cycle, Factory Reset (\*RST command), Instrument Preset (SYSTem:PRESet command), or function change.

### Example

→ SYST:SMO:POIN 100

*This command sets the number of points to 100.*

→ SYST:SMO:POIN?

*This query returns the number of points value of points.*

← 100

### See also

“SYSTem:PRESet” on page 341

“SYSTem:SMOoth[:STATe]” on page 343

“SYSTem:SMOoth:FLUCtuation” on page 345

“\*RST” on page 371

## SYSTem:VERSion?

### Syntax

SYSTem:VERSion?

This query returns a numeric value that represents the version of the SCPI (Standard Commands for Programmable Instruments) standard with which the instrument is in compliance. This instrument complies with the rules and conventions of the indicated version of the SCPI standard.

### NOTE

You cannot query the SCPI version from the front panel.

---

The command returns a string in the form “YYYY.V”, where “YYYY” represents the year of the version and “V” represents a version for that year.

**Example**

→ SYST:VERS?

*This query returns the SCPI standard version of the instrument.*

← 1999.0

**13 SYSTEM Subsystem**  
SYSTEM:VERSion?

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

# **14**

## **TRIGger Subsystem**

TRIGger:SOURce 352

This chapter describes the TRIGger command used to program the U3606B over a remote interface. Use the TRIGger:SOURce command to select a trigger source for measurements in the instrument.

## TRIGger:SOURce

### Syntax

```
TRIGger:SOURce {IMMEDIATE|BUS}
```

This command selects the trigger source for measurements. The U3606B will accept a software (bus) command or an immediate (continuous) trigger.

The valid options are:

- IMMEDIATE: For the IMMEDIATE (continuous) source, the trigger signal is always present. When you place the instrument in the “wait-for-trigger” state, the trigger is issued immediately.
- BUS: For the BUS (software) source, the instrument is triggered by the \*TRG command received over the remote interface. The \*TRG command will not be accepted unless the instrument is in the “wait-for-trigger” state.

```
TRIGger:SOURce?
```

This query returns a string value that represents the trigger source selected in the U3606B.

### Parameter

Item	Type	Range of values	Default value
source	Discrete	IMMEDIATE BUS	IMMEDIATE

## Remarks

- After selecting the trigger source, you must place the instrument in the “wait-for-trigger” state by using the `INITiate[:IMMediate]` command or `READ?` query. A trigger will not be accepted from the selected trigger source until the instrument is in the “wait-for-trigger” state.

### NOTE

The `INITiate[:IMMediate]` command only initiates the measurement and needs a trigger (`BUS` or `IMMediate`) to make the actual measurement.

- 
- The `CONFIgure` commands and `MEASure?` queries automatically sets the trigger source to `IMMediate`.
  - For the `IMMediate` (continuous) source, the trigger signal is always present. When you place the instrument in the “wait-for-trigger” state, the trigger is issued immediately.
  - For the `BUS` (software) source, the instrument is triggered by the `*TRG` command received over the remote interface. The `*TRG` command will not be accepted unless the internal instrument is in the “wait-for-trigger” state.
  - The instrument selects the `IMMediate` trigger source after a Factory Reset (`*RST` command) or an Instrument Preset (`SYSTem:PRESet` command).
  - If the selected trigger source is invalid due to a settings conflict, the source reverts automatically to `IMMediate`. A settings conflict error message is also generated.

## 14 TRIGger Subsystem

TRIGger:SOURce

### Example

→ CONF	<i>This command configures the instrument for DC voltage measurements. The default range (autorange) and resolution (5½ digits) are used.</i>
→ TRIG:SOUR BUS	<i>This command selects the bus (software) trigger source.</i>
→ INIT	<i>This command places the instrument in the "wait-for-trigger" state.</i>
→ *TRG	<i>This command triggers the instrument.</i>
→ FETC?	<i>This command transfers the reading from the instrument memory to the output buffer.</i>
← +9.985308E+00	

### See also

Chapter 4, “CONFIgure Subsystem,” starting on page 85

“INITiate[:IMMediate]” on page 130

Chapter 7, “MEASure Subsystem,” starting on page 141

“SYSTem:PRESet” on page 341

“FETCh?” on page 357

“READ?” on page 359

“\*RST” on page 371

“\*TRG” on page 381



# **15**

## **Root Commands**

ABORt 356

FETCh? 357

READ? 359

This chapter describes the root commands used to program the U3606B U3606B over a remote interface. Use the ABORt command to abort a measurement in progress, and the FETCh? and READ? commands to retrieve a reading from the instrument output buffer.

## ABORt

### Syntax

ABORt

This command aborts a measurement in progress.

### Remarks

- This command may be useful to abort a measurement when the instrument is waiting for a trigger, for a long measurement, or for a long series of timed measurements.
- The command will abort a measurement in progress and stop, returning the instrument to the trigger idle state.
- The Factory Reset (\*RST) and Instrument Preset (SYSTem:PRESet) command will abort a measurement and set all measurement parameters to their factory settings.

### Example

```
→ ABOR
```

*This command aborts the measurement in progress.*

### See also

[“SYSTem:PRESet” on page 341](#)

[“\\*RST” on page 371](#)

## FETCh?

### Syntax

FETCh?

This command transfers readings to the instrument output buffer where you can read them into your PC. The readings are not erased from the instrument memory when you read them. You can send this command multiple times to retrieve the same data in the instrument memory.

### Remarks

- The FETCh? command will wait until the measurement is complete to terminate.
- The FETCh? command obtains the primary display value on all conditions. If you would like to obtain raw data, please do not enable the CALCulate functions.
- The instrument clears all readings from volatile memory after a Factory Reset (\*RST command), after an Instrument Preset (SYSTem:PRESet command), when power is cycled, when the measurement configuration is changed (see Chapter 4, “CONFigure Subsystem,” starting on page 85), or on an INITiate[:IMMEDIATE] command.

## 15 Root Commands

### FETCh?

#### Example

→ CONF:RES

*This command configures the instrument for 2-wire resistance measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state, triggers a measurement, and stores the reading in the instrument memory.*

→ FETC?

*This command transfers the reading from the instrument memory to the output buffer.*

← +9.999632E+06

#### See also

Chapter 4, “CONFigure Subsystem,” starting on page 85

“INITiate[:IMMediate]” on page 130

# READ?

## Syntax

READ?

This command changes the instrument triggering system from the “idle state” to the “wait-for-trigger” state. Measurements will begin when the specified trigger conditions are satisfied following the receipt of the READ? command. Readings are then sent immediately to the volatile memory and the output buffer of the instrument.

### NOTE

The command sends readings directly to reading memory and the output buffer of the instrument.

## Remarks

- Normally, the READ? command obtains the primary display value. However, if the CALCulate:AVERage functions are enabled, the READ? command will return raw data.
- When the trigger source is set to IMMEDIATE, sending the READ? command is similar to sending the INITiate[:IMMEDIATE] command followed immediately by the FETCh? command.
- When the trigger source is set to BUS, sending the READ? command causes an error.
- The instrument clears all readings from volatile memory after a Factory Reset (\*RST command), after an Instrument Preset (SYSTEM:PRESet command), when power is cycled, when the measurement configuration is changed (see Chapter 4, “CONFigure Subsystem,” starting on page 85), or on an INITiate[:IMMEDIATE] command.

## 15 Root Commands

### READ?

#### Example

→ CONF:RES

*This command configures the instrument for 2-wire resistance measurements. The default range (autorange) and resolution (5½ digits) are used.*

→ TRIG:SOUR IMM

*This command selects the immediate (continuous) trigger source.*

→ READ?

*This command places the instrument in the "wait-for-trigger" state, triggers a measurement, and sends the reading to the instrument memory and output buffer.*

← +1.999632E+07

# **16**

## **IEEE-488.2 Common Commands**

*CLS	362
*ESE	363
*ESR?	365
*IDN?	366
*OPC	367
*PSC	368
*RCL	369
*RST	370
*SAV	374
*SRE	375
*STB?	377
*TRG	378
*TST?	379
*WAI	380

This chapter gives an introduction to the IEEE-488.2 common commands. It defines a set of common commands that perform functions such as reset, self-test, and status operations.

\*CLS

## \*CLS

### Syntax

\*CLS

The \*CLS (Clear Status) is used to clear the event registers in all register groups. This command also clears the error queue.

### Remarks

This commands also clears overvoltage protection and overcurrent protection condition.

### Example

→ \*CLS

*This command clears the event register bits and the error queue.*

### See also

“\*ESR?” on page 365



## \*ESE

### Syntax

\*ESE <enable\_value>

The \*ESE (Event Status Enable) enables bits in the enable register for the Standard Event register group. The selected bits are then reported to bit 5 of the Status Byte register.

**Table 16-1** Standard Event register mapping

Bit number	Decimal value	Meaning
0	1	Operation complete
1	Not used	Not used
2	4	Query error
3	8	Device-specific error
4	16	Execution error
5	32	Command error
6	Not used	Not used
7	128	Power-on

\*ESE?

This query reads the enable register and returns a decimal value that corresponds to the binary-weighted sum of all bits set in the register. For example, if bit 3 (decimal value = 8) and bit 7 (decimal value = 128) are enabled, this query returns “+136”.

### NOTE

For more information on the bit definitions of the Standard Event register and the SCPI status diagram, see “SCPI Status System” on page 12.

**Parameter**

Item	Type	Range of values	Default value
enable_ value	Numeric	0 to 255 <sup>[1]</sup>	0

<sup>[1]</sup> Refer to Table 16-1 for the list of bit definitions for the Standard Event register. To enable more than one bit at a time, use the binary-weighted sum of the intended bits. For example, to set bit 2, 3, and 4, use 28 (4 + 8 + 16) as your value.

**Remarks**

- An enable register defines which bits in the event register is reported to the Status Byte register group. You can write to or read from an enable register.
- The \*CLS (clear status) command will not clear the enable register but it will clear all bits in the event register.
- You can use the \*PSC command to control whether the Standard Event enable register is cleared on power-on.
- Refer to Figure 1-1 on page 13 for the status system diagram.

**Example**

```
→ *ESE 16
```

*This command enables bit 4 (decimal value = 16) in the enable register. If an execution error occurs, this condition will be reported to the Status Byte register (bit 5 will be set to high).*

```
→ *ESE?
```

*This query returns which bits are enabled in the register.*

```
← +16
```

**See also**

“\*CLS” on page 362

“\*ESR?” on page 365

“\*PSC” on page 368

## \*ESR?

### Syntax

\*ESR?

The \*ESR? (Event Status Register) query reads the event register for the Standard Event register group and returns a decimal value which corresponds to the binary-weighted sum of all bits set in the event register (Table 16-1 on page 363). For example, if bit 0 (decimal value = 1) and bit 4 (decimal value = 16) are set (and the corresponding bits are enabled), this query returns the decimal value "+17".

### NOTE

This is a read-only register and the bits are cleared when you read the register. For more information on the bit definitions of the Standard Event register and the SCPI status diagram, see "SCPI Status System" on page 12.

### Remarks

- An event register latches the various events from the condition register. There is no buffering in this register; while an event bit is set, subsequent events corresponding to that bit are ignored. This is a read-only register.
- The \*CLS (clear status) command will clear all bits in the event register.
- Refer to Figure 1-1 on page 13 for the status system diagram.

### Example

→ \*ESR?

*This command reads the event register (bits 3 and 4 are set).*

← +24

## \*IDN?

### Syntax

\*IDN?

The \*IDN? (IDeNtify) query returns the instrument's identification string which contains four comma-separated fields. The first field returned is the manufacturer's name, followed by the instrument model number, serial number, and firmware revision code.

```
<Manufacturer>, <Model_no>, <Serial_no>,  
  <ii.ii-mm.mm-ss.ss>
```

Where, *ii.ii* represents the interface board firmware revision number, *mm.mm* represents the measurement board firmware revision number, and *ss.ss* represents the source board firmware revision number.

### Example

```
→ *IDN?
```

*This query returns the instrument's identification string.*

```
← Keysight Technologies,  
  U3606B,KS08080027,  
  00.12-00.42-00.20
```

## \*OPC

### Syntax

\*OPC

The \*OPC (Operation Complete) command sets the “Operation complete” bit (bit 0) in the Standard Event register at the completion of the current operation.

\*OPC?

This query returns the value “+1” to the output buffer at the completion of the current operation.

### NOTE

For more information on the bit definitions of the Standard Event register and the SCPI status diagram, see “SCPI Status System” on page 12.

### Remarks

- The purpose of this command is to synchronize your application with the instrument.
- Note the difference between the \*OPC command and the \*OPC? query. The latter returns “1” to the output buffer at the completion of the current operation.

### Example

→ \*OPC?

*This query returns the value “+1” to the output buffer at the completion of the current operation.*

← 1

## \*PSC

### Syntax

```
*PSC {0|1}
```

The \*PSC (Power-on Status Clear) command enables or disables the clearing of certain enable registers at power-on. With \*PSC 0 specified, these registers are not cleared at power-on. All enable registers are affected.

### NOTE

The \*PSC command does not affect the clearing of the condition or event registers, just the enable registers.

```
*PSC?
```

This query returns “0” (do not clear at power on) or “1” (clear at power on).

### Parameter

Item	Type	Range of values	Default value
setting	Boolean	0 1	1

### Example

```
→ *PSC 0
```

*This command disables the power-on clearing of the affected registers.*

```
→ *PSC?
```

*This query returns the power-on status clear setting.*

```
← 0
```

## \*RCL

### Syntax

```
*RCL {0|1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16}
```

This \*RCL (ReCaLI) command recalls the instrument state stored in the specified storage location. If you recall the instrument state from a storage location that is empty, the U3606B always sets to the factory default settings. When shipped from the factory, storage locations 1 through 16 are empty. (Location 0 holds the power-on state.)

Use the \*SAV command to store the current instrument state.

### Parameter

Item	Type	Range of values	Default value
state	Discrete	0 to 16	-

### Remarks

- The instrument has sixteen storage locations in nonvolatile memory to store instrument states. The instrument uses location 0 to automatically hold the state of the instrument at power down. You can only recall a state from a location that contains a previously stored state.
- A Factory Reset (\*RST command) or SYSTem:PRESet command does not affect the configurations stored in memory. Once a state is stored, it remains until it is overwritten.

### Example

```
→ *RCL 1
```

*This command recalls the instrument state previously stored in location 1.*

### See also

“\*SAV” on page 374

**\*RST****Syntax**

\*RST

The \*RST (ReSeT) command resets the instrument to its factory default state, which is the state when the U3606B is powered-on for the first time.

**Remarks**

- The \*RST command does not clear the event registers and the error queue. To clear the event registers and the error queue, send the \*CLS command.
- This command does not affect any previously stored instrument states. For more information on saving and recalling previously stored instrument states, see “\*SAV” on page 374 and “\*RCL” on page 369.

Parameter	Factory setting	Power-on state	Reset state
<b>Measurement configuration</b>			
Function	DCV	User setting	DCV
Range	AUTO	User setting	AUTO
Resolution	5-½ digits	User setting	5-½ digits
Low-resistance current	<ul style="list-style-type: none"> <li>• 100 mΩ - 1 A</li> <li>• 1000 mΩ - 0.1 A</li> <li>• 10 Ω - 50 mA</li> <li>• 100 Ω - 10 mA</li> <li>• 1000 Ω - 6 mA</li> </ul>	User setting	User setting
<b>Source configuration</b>			
Function	<ul style="list-style-type: none"> <li>• CV S1</li> <li>• CV 0 V, CC 0 A</li> <li>• SQU 0 V, 600 Hz, 50%</li> </ul>	User setting	<ul style="list-style-type: none"> <li>• CV S1</li> <li>• CV 0 V, CC 0 A</li> <li>• SQU 0 V, 600 Hz, 50%</li> </ul>
Sense source	Internal	User setting	Internal



Parameter	Factory setting	Power-on state	Reset state
Limitation	<ul style="list-style-type: none"> <li>• CV S1 - 1 A</li> <li>• CV S2 - 3 A</li> <li>• CV S2m - 3 A</li> <li>• CC S1 - 30 V</li> <li>• CC S2 - 8 V</li> <li>• CC S1m - 30 V</li> </ul>	User setting	User setting
Protection	<ul style="list-style-type: none"> <li>• CV S1 - 1.1 A</li> <li>• CV S2 - 3.3 A</li> <li>• CV S2m - 3.3 A</li> <li>• CC S1 - 33 V</li> <li>• CC S2 - 8.8 V</li> <li>• CC S1m - 33 V</li> </ul>	User setting	User setting
Protection (triP SBY)	Yes	User setting	User setting
Mode (SCAN, RAMP)	None	User setting	None
SCAN	<ul style="list-style-type: none"> <li>• 10 steps, 2 seconds</li> <li>• CV S1 - 30 V</li> <li>• CV S2 - 8 V</li> <li>• CV S2 - 1000 mV</li> <li>• CC S1 - 1 A</li> <li>• CC S2 - 3 A</li> <li>• CC S1 - 100 mA</li> </ul>	User setting	User setting
RAMP	<ul style="list-style-type: none"> <li>• 100 steps</li> <li>• CV S1 - 30 V</li> <li>• CV S2 - 8 V</li> <li>• CV S2 - 1000 mV</li> <li>• CC S1 - 1 A</li> <li>• CC S2 - 3 A</li> <li>• CC S1 - 100 mA</li> </ul>	User setting	User setting
<b>Math configuration</b>			
<ul style="list-style-type: none"> <li>• State</li> <li>• Function</li> </ul>	<ul style="list-style-type: none"> <li>• OFF</li> <li>• NULL</li> </ul>	<ul style="list-style-type: none"> <li>• OFF</li> <li>• NULL</li> </ul>	<ul style="list-style-type: none"> <li>• OFF</li> <li>• NULL</li> </ul>
High/Low limit	0	User setting	User setting
<ul style="list-style-type: none"> <li>• Hold variation</li> <li>• Threshold</li> </ul>	<ul style="list-style-type: none"> <li>• 10%</li> <li>• 0.5%</li> </ul>	User setting	User setting

## 16 IEEE-488.2 Common Commands

\*RST

Parameter	Factory setting	Power-on state	Reset state
dBm reference resistance	600 ohms	User setting	User setting
Smooth	<ul style="list-style-type: none"> <li>• OFF</li> <li>• N=10</li> <li>• FC 1%</li> </ul>	User setting	User setting
Other registers	Cleared	Cleared	Cleared
<b>Trigger configuration</b>			
Source	IMM	IMM	IMM
<b>Utility menu</b>			
Interface	USB-TMC	User setting	User setting
Beeper	ON	User setting	User setting
Power-on recall	LAST	User setting	User setting
Logging	<ul style="list-style-type: none"> <li>• OFF</li> <li>• Interval - 1</li> <li>• Loop - 3600</li> </ul>	User setting	User setting
Error queue	Cleared	Cleared	Not cleared
Status enable registers	Cleared	Dependent on *PSC	Dependent on *PSC
Step of soft start	1	User setting	User setting

### NOTE

The term “User setting” means that the setting values are recalled from the U3606B’s nonvolatile memory.

**Example**

→ \*RST

*This command resets the instrument to its factory default state.*

**See also**

[“\\*CLS” on page 362](#)

[“\\*RCL” on page 369](#)

[“\\*SAV” on page 374](#)

## \*SAV

### Syntax

```
*SAV {0|1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16}
```

The \*SAV (SAVe) command stores (saves) the current instrument state in the designated storage location. Any state previously stored in the same location is overwritten (with no error generated).

Use the \*RCL command to recall a stored instrument state.

### Parameter

Item	Type	Range of values	Default value
state	Discrete	0 to 16	-

### Remarks

- The instrument has sixteen storage locations in nonvolatile memory to store instrument states. The instrument uses location 0 to automatically hold the state of the instrument at power down. You can only recall a state from a location that contains a previously stored state.
- When shipped from the factory, storage locations 1 through 16 are empty and the instrument is configured to automatically recall the power-down state (location 0) when power is restored. You can change the factory configuration such that a Factory Reset (\*RST command) is issued when power is restored.
- A Factory Reset (\*RST command) or SYSTem:PRESet command does not affect the configurations stored in memory. Once a state is stored, it remains until it is overwritten.

### Example

```
→ *SAV 1
```

*This command stores the current instrument state in location 1.*

### See also

“\*RCL” on page 369

## \*SRE

### Syntax

\*SRE <value>

The \*SRE (Service Request Enable) command enables bits in the enable register for the Status Byte register group. Once enabled, the corresponding bits may generate a Request for Service (RQS) in the Status Byte. This RQS event may generate a “call back” to your application as a type of asynchronous interrupt.

**Table 16-2** Status Byte register mapping

Bit number	Decimal value	Definition
0	Not used	Not used
1	Not used	Not used
2	4	Error queue
3	8	Questionable Data summary
4	16	Message available
5	32	Standard Event summary
6	Not used	Not used
7	128	Standard Operation summary

\*SRE?

This command reads the enable register and returns a decimal value which corresponds to the binary-weighted sum of all bits set in the register. For example, if bit 2 (decimal value = 4) and bit 4 (decimal value = 16) are enabled, the query returns “+20”.

### NOTE

For more information on the bit definitions of the Status Byte register and the SCPI status diagram, see “SCPI Status System” on page 12.

**Parameter**

Item	Type	Range of values	Default value
value	Numeric	0 to 255 <sup>[1]</sup>	0

<sup>[1]</sup> Refer to Table 16-2 for the list of bit definitions for the Status Byte register. To enable more than one bit at a time, use the binary-weighted sum of the intended bits. For example, to set bit 2, 4, and 5, use 52 (4 + 16 + 32) as your value.

**Remarks**

- An enable register defines which bits in the event register is reported to the Status Byte register group. You can write to or read from an enable register.
- The \*CLS (clear status) command will not clear the enable register but it does clear all bits in the event register.
- The \*PSC (power-on status clear) command determines whether or not the Status Byte enable register is cleared at power on, or not cleared.
- A STATus:PRESet, SYSTem:PRESet, \*CLS, or \*RST command does not clear the bits in the Status Byte enable register.
- Refer to Figure 1-1 on page 13 for the status system diagram.

**Example**

```
→ *SRE 16
```

*This command enables bit 4 (decimal value = 16) in the enable register.*

```
→ *SRE?
```

*This query returns which bits are enabled in the register.*

```
← 16
```

**See also**

“STATus:PRESet” on page 322

“SYSTem:PRESet” on page 341

“\*PSC” on page 368

“\*STB?” on page 377

## \*STB?

### Syntax

\*STB?

The \*STB? (STatus Byte) query returns the condition register for the Status Byte register group. This command is similar to a Serial Poll but it is processed like any other instrument command.

### NOTE

This is a read-only register and the bits are not cleared when you read the register. For more information on the bit definitions of the Status Byte register and the SCPI status diagram, see “SCPI Status System” on page 12.

### Remarks

- A condition register continuously monitors the state of the instrument. The bits in the condition register are updated in real time and the bits are not latched or buffered.
- A Factory Reset (\*RST command) or power-on cycle clears all bits in the condition register.
- Refer to Figure 1-1 on page 13 for the status system diagram.

### Example

→ \*STB?

*This command reads the condition register (bits 3 and 5 are set).*

← +40

### See also

“\*SRE” on page 375

“\*RST” on page 370

## \*TRG

### Syntax

\*TRG

The \*TRG (TRiGger) is used in conjunction with the TRIGger:SOURce command to trigger the instrument from the remote interface.

### Remarks

- Use the TRIGger:SOURce command to select the BUS (software) trigger source.
- After setting the trigger source, you must place the multimeter in the “wait-for-trigger” state using the INITiate[:IMMediate] command. The \*TRG command will not be accepted unless the multimeter is in the “wait-for-trigger” state.

### Example

→ TRIG:SOUR BUS

*This command selects the bus (software) trigger source.*

→ INIT

*This command places the instrument in the “wait-for-trigger” state.*

→ \*TRG

*This command triggers the instrument.*

### See also

“INITiate[:IMMediate]” [on page 130](#)

“TRIGger:SOURce” [on page 352](#)



## \*TST?

### Syntax

\*TST?

The \*TST? (TeST) query performs a self-test of the instrument and returns a pass/fail indication. The self-test runs a series of tests and will take a few seconds to complete. If all tests pass, you can have a high confidence that the instrument is operational. The command returns “+0” (all tests passed) or “+1” (one or more tests failed).

### Remarks

- If one or more tests fail, “+1” is returned and an error is stored in the error queue. For a complete listing of the error messages related to self-test failures, see Chapter 17, “List of Error Messages,” starting on page 385.
- If one or more tests fail, see the *U3606B Service Guide* for instructions on obtaining service.
- Following the \*TST? query, the instrument issues a Factory Reset (\*RST command).

### Example

→ \*TST?

*This command begins the self-test process and returns a pass/fail indication.*

← +0

*The returned value “+0” indicates that the instrument has passed all tests performed.*

## 16 IEEE-488.2 Common Commands

\*WAI

### \*WAI

#### Syntax

\*WAI

The \*WAI (WAI) command configures the instrument's output buffer to wait until all pending operations are complete, before executing any subsequent commands or queries.

**Example**

→ \*WAI

*This command waits until all pending operations complete.*

**16 IEEE-488.2 Common Commands**

\*WAI

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**

# **17**

## **List of Error Messages**

Error Messages	386
Command errors	387
Execution errors	388
Internal errors	389
Query errors	389
Device specific errors	389
Self-test errors	390
Calibration errors	391

The U3606B error messages are summarized in this chapter.

## **Error Messages**

Error messages are created once an erroneous condition is detected.

Errors are retrieved in first-in-first-out (FIFO) order using the `SYSTEM:ERROR?` query or read from the front panel (see “Reading error messages” in the *U3606B Service Guide*).

The first error returned is the first error that was stored. Reading this error will clear this error allowing the next stored error to be read (if there are other errors stored). Once you have read all of the interface-specific errors, the errors in the global error queue will be retrieved.

If more than 20 errors have occurred, the last error stored in the queue (the most recent error) is replaced with error number: -350, "Queue overflow". No additional errors are stored until you remove the previously stored errors from the queue.

If no errors have occurred when you read the error queue, the instrument responds with the message: +0, "No error" or “nonE” if read from the front panel.

The interface-specific and global error queues are cleared by the clear status (\*CLS) command and when the instrument power is cycled. The error queue will not be cleared by a Factory Reset (\*RST command) or an Instrument Preset (SYSTEM:PRESet command).

## Command errors

The following table shows the list of command errors. These errors set the Standard Event Status register bit 5.

Error code	Error message
+0	No error
-100	Command error
-101	Invalid character
-102	Syntax error
-103	Invalid separator
-104	Data type error
-108	Parameter not allowed
-109	Missing parameter
-112	Program mnemonic too long
-113	Undefined header
-120	Numeric data error
-121	Invalid character in number
-123	Exponent too large
-128	Numeric data not allowed
-130	Suffix error
-131	Invalid suffix
-134	Suffix too long
-138	Suffix not allowed
-141	Invalid character data
-144	Character data too long
-148	Character data not allowed
-150	String data error

## 17 List of Error Messages

### Error Messages

Error code	Error message
-151	Invalid string data
-158	String data not allowed

## Execution errors

The following table shows the list of execution errors. These errors set the Standard Event Status register bit 4.

Error code	Error message
-200	Execution error
-211	Trigger ignored
-213	Init ignored
-214	Trigger deadlock
-220	Parameter error
-221	Settings conflict
-222	Data out of range
-223	Too much data
-230	Data corrupt or stale



## Internal errors

The following table shows the list of internal errors.

Error code	Error message
-350	Queue overflow

## Query errors

The following table shows the list of query errors. These errors set the Standard Event Status register bit 2.

Error code	Error message
-410	Queue INTERRUPTED
-420	Query UNTERMINATED

## Device specific errors

The following table shows the list of device specific errors. These errors set the Standard Event Status register bit 3.

Error code	Error message
510	Voltage output over protection
511	Current output over protection
512	Voltage output over limit setting
513	Current output over limit setting
521	Input buffer overflow
532	Cannot achieve requested resolution
540	Cannot use overload as math reference

## 17 List of Error Messages

### Error Messages

### Self-test errors

The following errors indicate failures that may occur during a self-test.

Error code	Error message
630	EEPROM read failure
631	Program ROM Checksum failed
632	Program RAM failed
633	Display board failed
634	ADC failed
635	Interface board failed
636	Source board failed
637	I/O Processor Failed Self-Test
638	Source Processor Failed Self-Test
639	DC Path error
640	AC Path attenuated error
641	AC Path attenuated 10 error
642	AC Path attenuated 100 or amplified 10 error
643	Frequency measurement path failed
644	Constant Current 0.2V/1kohm error
645	Constant Current 0.2V/10kohm or amplified 11 error
646	Constant Current 0.8V/100kohm or amplified 11 error
647	Constant Current 0.8V/1.1Mohm or amplified 11 error

## Calibration errors

The following errors indicate failures that may occur during a calibration.

<b>Error code</b>	<b>Error message</b>
701	Cal security pads short
702	Cal secured
703	Invalid secure code
704	Secure code too long
705	Cal aborted
706	Cal value out of range
707	Cal signal measurement out of range
708	Cal signal frequency out of range
709	Cal source unfinished
710	EEPROM write failure
720	Cal DCV offset out of range
721	Cal DCI offset out of range
722	Cal RES offset out of range
723	Cal CAP offset out of range
726	Cal RES open out of range
742	Cal checksum failed, DCV corrections
743	Cal checksum failed, DCI corrections
744	Cal checksum failed, RES corrections
745	Cal checksum failed, ACV corrections
746	Cal checksum failed, ACI corrections
747	Cal checksum failed, FREQ correction
748	Cal checksum failed, CAP corrections

## 17 List of Error Messages

### Error Messages

<b>Error code</b>	<b>Error message</b>
750	Source board failed on reading
751	Source board failed on sense

## Command Quick Reference

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page	
CALCulate	:FUNction				See page 20	
	:FUNction?				See page 21	
	[:STATe]				See page 23	
	[:STATe]?				See page 23	
	:AVERage		:AVERage?			See page 25
			COUNT?			See page 26
			MAXimum?			See page 27
			MINimum?			See page 28
			PRESent?			See page 29
	:DB		:REFerence			See page 30
			:REFerence?			See page 30
	:DBM		:REFerence			See page 32
			:REFerence?			See page 32
	:HOLD		:VARiation			See page 34
			:VARiation?			See page 34
			:THReshold			See page 36
			:THReshold?			See page 36
	:LIMit		:LOWer			See page 38
			:LOWer?			See page 38
			:UPPer			See page 40
:UPPer?					See page 40	
:NULL		:OFFSet			See page 42	
		:OFFSet?			See page 42	

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page	
CALibration	[:ALL]?				See page 48	
	:COUNT?				See page 49	
	:SECure		:CODE			See page 50
			:STATe			See page 51
			:STATe?			See page 51
	:STRing				See page 53	
	:STRing?				See page 53	
	:VALue				See page 55	
	:VALue?				See page 55	
:LEVel				See page 56		
CONFigure?					See page 86	
CONFigure	[:VOLTage]	[:DC]			See page 87	
			:AC		See page 90	
			:ACDC   DCAC		See page 93	
	:CURRent	[:DC]			See page 96	
			:AC		See page 99	
			:ACDC   DCAC		See page 102	
	:RESistance				See page 105	
	:CONTinuity				See page 108	
	:LRESistance				See page 110	
	:CAPacitance				See page 113	
	:DIODE				See page 116	
	:FREQuency				See page 118	
	:PWIDth				See page 120	
:DCYCLE				See page 122		

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page
INITiate	[:IMMEDIATE]				See page 130
	:CONTinuous				See page 132
	:CONTinuous?				See page 132
LOG	[:STATe]				See page 136
	[:STATe]?				See page 136
	:DATA	:DELeTe			See page 138
	:LOAD	{DATA}			See page 139
	:DATA?				See page 140
MEASure	[:VOLTage]	[:DC]?			See page 142
		:AC?			See page 144
		:ACDC   DCAC?			See page 147
	:CURRent	[:DC]?			See page 150
		:AC?			See page 152
		:ACDC   DCAC?			See page 154
	:RESistance?				See page 156
	:CONTinuity?				See page 159
	:LRESistance?				See page 161
	:CAPacitance?				See page 163
	:DIODE?				See page 166
	:FREQuency?				See page 167
	:PWIDth?				See page 169
:DCYClE?				See page 171	
MEMory	:STATe	:RECall	:AUTO		See page 180
			:AUTO?		See page 180
OUTPut	[:STATe]				See page 184
	[:STATe]?				See page 184

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page		
[SENSe:]	FUNction	[:ON]			See page 187		
		[:ON]?			See page 187		
	VOLtAge	[:DC]	:RANGe	[:UPPer]	See page 189		
				[:UPPer]?	See page 189		
				:AUTO	See page 191		
				:AUTO?	See page 191		
				:RESolution	See page 193		
				:RESolution?	See page 193		
			:AC	:RANGe	[:UPPer]	See page 195	
					[:UPPer]?	See page 195	
					:AUTO	See page 197	
					:AUTO?	See page 197	
				:RESolution	See page 199		
				:RESolution?	See page 199		
				:ACDC DCAC	:RANGe	[:UPPer]	See page 201
						[:UPPer]?	See page 201
	:AUTO	See page 203					
	:AUTO?	See page 203					
	:RESolution	See page 205					
	:RESolution?	See page 205					
CURRent	[:DC]	:RANGe	[:UPPer]	See page 207			
			[:UPPer]?	See page 207			
			:AUTO	See page 209			
			:AUTO?	See page 209			
			:RESolution	See page 211			
			:RESolution?	See page 211			



Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page
[SENSe:]	CURRent	:AC	:RANGe	[:UPPer]	See page 213
				[:UPPer]?	See page 213
				:AUTO	See page 215
				:AUTO?	See page 215
				:RESolution	See page 217
				:RESolution?	See page 217
		:ACDC DCAC	:RANGe	[:UPPer]	See page 219
				[:UPPer]?	See page 219
				:AUTO	See page 221
				:AUTO?	See page 221
				:RESolution	See page 223
				:RESolution?	See page 223
	RESistance	:RANGe	[:UPPer]	See page 225	
			[:UPPer]?	See page 225	
			:AUTO	See page 227	
			:AUTO?	See page 227	
			:RESolution	See page 229	
			:RESolution?	See page 229	
	CONTInuity	:RANGe	[:UPPer]	See page 231	
			[:UPPer]?	See page 231	
:AUTO			See page 233		
:AUTO?			See page 233		

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page	
[SENSe:]	LRESistance	:RANGe	[:UPPer]		See page 235	
			[:UPPer]?		See page 235	
			:AUTO		See page 237	
			:AUTO?		See page 237	
			:RESolution		See page 239	
			:RESolution?		See page 239	
	:COMPensation		See page 241			
	CAPacitance	:RANGe	[:UPPer]		See page 242	
			[:UPPer]?		See page 242	
			:AUTO		See page 244	
			:AUTO?		See page 244	
	FREQuency	:VOLTage	:RANGe	[:UPPer]		See page 246
				[:UPPer]?		See page 246
				:AUTO		See page 248
				:AUTO?		See page 248
	PWIDth	:VOLTage	:RANGe	[:UPPer]		See page 250
[:UPPer]?					See page 250	
:AUTO					See page 252	
:AUTO?					See page 252	
DCYCLe	:VOLTage	:RANGe	[:UPPer]		See page 254	
			[:UPPer]?		See page 254	
			:AUTO		See page 256	
			:AUTO?		See page 256	

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page
[SENSe:]	FREQuency	:CURRent	:RANGe	[:UPPer]	See page 258
				[:UPPer]?	See page 258
				:AUTO	See page 260
				:AUTO?	See page 260
	PWIDth	:CURRent	:RANGe	[:UPPer]	See page 262
				[:UPPer]?	See page 262
				:AUTO	See page 264
				:AUTO?	See page 264
	DCYClE	:CURRent	:RANGe	[:UPPer]	See page 266
				[:UPPer]?	See page 266
				:AUTO	See page 268
				:AUTO?	See page 268
SOURce	:VOLTage	:RANGe		See page 274	
	:CURRent	:RANGe		See page 276	
	:SQUare	:RANGe		See page 277	
[SOURce:]	SENSe			See page 273	
		:VOLTage	[:LEVel]?	See page 274	
		:CURRent	[:LEVel]?	See page 275	
	SENSe?			See page 273	
	VOLTage	:LIMit			See page 279
		:LIMit?			See page 279
		:PROTection			See page 283
		:PROTection?			See page 283
		[:LEVel]	[:IMMediate]	[:AMPLitude]	See page 287
				[:AMPLitude]?	See page 287
		RAMP	[:AMPLitude]	See page 289	

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page
[SOURce:]	VOLTage	[:LEVel]	RAMP	[:AMPLitude]?	See page 289
				:STEP	See page 292
				:STEP?	See page 292
			SCAN	[:AMPLitude]	See page 294
				[:AMPLitude]?	See page 294
				:STEP	See page 296
				:STEP?	See page 296
				DWELLing	See page 298
				DWELLing?	See page 298
				CURRent	:LIMit
	:LIMit?	See page 281			
	:PROTection	See page 285			
	:PROTection?	See page 285			
	[:LEVel]	[:IMMediate]	[:AMPLitude]		See page 288
			[:AMPLitude]?		See page 288
	RAMP	[:AMPLitude]	See page 290		
		[:AMPLitude]?	See page 290		
		:STEP	See page 293		
		:STEP?	See page 293		
	SCAN	[:AMPLitude]	See page 295		
[:AMPLitude]?		See page 295			
:STEP		See page 297			
:STEP?		See page 297			
DWELLing		See page 299			
DWELLing?	See page 299				

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page			
[SOURce:]	SQUare	[:LEVel]	[:IMMediate]	:AMPLitude	See page 300			
				:AMPLitude?	See page 300			
				:FREQuency	See page 301			
				:FREQuency?	See page 301			
				:DCYClE	See page 302			
				:DCYClE?	See page 302			
				:PWIDth	See page 304			
				:PWIDth?	See page 304			
				PROTection	[:STATe]			See page 307
								See page 307
SStart	:STEP	See page 309						
SStart	:STEP?	See page 309						
STATus	:OPERation	:CONDition?		See page 318				
			:ENABle	See page 319				
			:ENABle?	See page 319				
			[:EVENTt]?	See page 321				
		:PRESet		See page 322				
		:QUEStionable	:CONDition?		See page 323			
				:ENABle	See page 324			
				:ENABle?	See page 324			
				[:EVENTt]?	See page 326			
		SYSTem	:BEEPer	[:IMMediate]		See page 332		
:STATe	See page 333							
:STATe?	See page 333							
:DATA	:INTerval			See page 335				
				See page 335				
				See page 335				

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page	
SYSTem	:DATA	LOOP			See page 336	
		LOOP?			See page 336	
	:DEFault				See page 337	
	:ERRor?				See page 338	
	:LOCAl				See page 340	
	:PRESet				See page 341	
	:RWLock				See page 342	
	:SMOoth		[:STATe]			See page 343
			[:STATe]?			See page 343
			:FLUCtuation			See page 345
			:FLUCtuation?			See page 345
			:POINts			See page 347
			:POINts?			See page 347
:VERSion?				See page 348		
TRIGger	:SOURce				See page 352	
	:SOURce?				See page 352	
ABORt				See page 356		
FETCh?				See page 357		
READ?				See page 359		
*CLS				See page 362		
*ESE				See page 363		
*ESE?				See page 363		
*ESR?				See page 365		
*IDN?				See page 366		
*OPC				See page 367		
*OPC?				See page 367		

Root keyword	Second-level	Third-level	Fourth-level	Fifth-level	Page
*PSC					See page 368
*PSC?					See page 368
*RCL					See page 369
*RST					See page 370
*SAV					See page 374
*SRE					See page 375
*SRE?					See page 375
*STB?					See page 377
*TRG					See page 378
*TST					See page 379
*WAI					See page 380

**THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.**



[www.keysight.com](http://www.keysight.com)

**Contact us**

To obtain service, warranty, or technical assistance, contact us at the following phone or fax numbers:

United States:

(tel) 800 829 4444 (fax) 800 829 4433

Canada:

(tel) 877 894 4414 (fax) 800 746 4866

China:

(tel) 800 810 0189 (fax) 800 820 2816

Europe:

(tel) 31 20 547 2111

Japan:

(tel) (81) 426 56 7832 (fax) (81) 426 56 7840

Korea:

(tel) (080) 769 0800 (fax) (080) 769 0900

Latin America:

(tel) (305) 269 7500

Taiwan:

(tel) 0800 047 866 (fax) 0800 286 331

Other Asia Pacific Countries:

(tel) (65) 6375 8100 (fax) (65) 6755 0042

Or visit Keysight World Wide Web at:

[www.keysight.com/find/assist](http://www.keysight.com/find/assist)

Product specifications and descriptions in this document are subject to change without notice. Always refer to the Keysight website for the latest revision.

This information is subject to change without notice.

© Keysight Technologies 2012, 2014

Edition 3, November 28, 2014



U3606-90068  
[www.keysight.com](http://www.keysight.com)