

Keysight E8257D/67D PSG Signal Generators and E8663B Analog Signal Generator

Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz)
Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and
E8663BK-UNW

NOTE: For the latest revision of this installation note, go to the
website for your instrument:

<http://www.keysight.com/find/psg> or <http://keysight.com/find/e8663b>

Notices

© Copyright 2004-2015 Keysight Technologies, Inc.

The information contained in this document is subject to change without notice.

Keysight Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Keysight Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Manual Part Number

E8251-90381

Edition

Edition 1, August 2015

Printed in USA/Malaysia

Published by:

Keysight Technologies, Inc.
1400 Fountaingrove Parkway
Santa Rosa, CA 95403

Add Option UNW (Narrow Pulse Modulation 10 MHz–3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Add Option UNW (Narrow Pulse Modulation 10 MHz–3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Product Affected:	E8257D/67D and E8663B
Serial Numbers:	Prefix US/MY/SG4928 and lower
Options:	
To Be Performed By:	(X) Keysight Technologies Service Center (X) Personnel Qualified by Keysight Technologies (X) Customer
Estimated Installation Time:	2.0 hours
Estimated Verification Time:	2.0 hours

Introduction

This upgrade kit adds Option UNW (Narrow Pulse Modulation) to the E8257D (Analog), E8267D (Vector) PSG Signal Generators and the E8663B Analog Signal Generator.

Installation includes the following major steps, starting on **page 5**:

- 1. Check signal generator functionality.**
- 2. Remove the outer and inner signal generator covers.**
- 3. Install A12 Pulse Modulator.**
- 4. Activate Option UNW.**
- 5. Verify proper installation of Option UNW.**
- 6. Re-assemble the signal generator.**
- 7. Verify signal generator calibration.**

Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Installation Kit Parts List

Item	Quantity	Description	Part Number
1	1	Installation Note	E8251-90381
2	2	Screw M3x0.5 8mm-LG	0515-0372
3	1	W120 Semi-Rigid Cable	E8251-20342
4	1	W76 Semi-Rigid Cable	E8251-20590
5	1	A12 Pulse Modulator	E8251-60112
6	1	Cable Retainer Base	E8251-40001
7	1	Cable Retainer Top	E8251-40007
8	1	Entitlement Certificate	5964-5143
9	1	Entitlement Certificate Envelope	5967-7169

Tools Required

- TORX T-10 driver
- TORX T-15 driver
- TORX T-20 driver
- 5/16” open-ended wrench
- Needle-nose pliers

Add Option UNW (Narrow Pulse Modulation 10 MHz–3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Safety Considerations

WARNING

Before you disassemble the signal generator, turn the power switch off and unplug the power cord. Failure to unplug the signal generator can result in personal injury.

CAUTION

Electrostatic discharge (ESD) can damage or destroy electronic components. All work on electronic assemblies should be performed at a static-safe workstation.

Check Signal Generator Functionality

Use the following procedure to confirm that the signal generator powers up and the internal check identifies no errors. The internal check evaluates the operation of the signal generator and returns an error message if it detects a problem.

NOTE

When the signal generator is first connected to ac line power, the error message `ERROR 514, Reference Oven Cold` occurs which causes both the `OVEN COLD` annunciator and the `ERR` annunciator to turn on.

After approximately five minutes, the `OVEN COLD` annunciator automatically clears, but the `ERR` annunciator remains on until all errors are cleared from the error queue.

1. Turn on the signal generator and let it warm up for at least five minutes.
2. Run the signal generator self-test by pressing **Utility > Instrument Info/Help Mode > Self Test > Run Complete Self Test**. Upon completion a summary of the self-test will be displayed. Use the E8257D/67D PSG Service Guide or E8663B Analog Service Guide to troubleshoot any failures detected by the test.

NOTE

Some circuits may require up to 50 minutes to warm up before passing the self-test. If self-tests continue to fail after 50 minutes of warm up, troubleshoot the instrument.

3. Check to see if the `ERR` annunciator is on.
 - If the `ERR` annunciator is on, review the error messages in the error queue by pressing **Utility > Error Info**. The first page of error messages in the error queue appears in the display text area. (Refer to the signal generator error messages document for information about each error message.)

After resolving all problems causing errors, press **Clear Error Queue(s)**.
 - If the `ERR` annunciator is off, the signal generator functionality check has passed.

Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Remove the Outer and Inner Signal Generator Covers


Remove the Outer Cover

Refer to **Figure 1**.

1. Disconnect the power cord.
2. Using a T-20 driver, loosen the two screws (1) and remove the strap handle (2).
3. Using a T-15 driver, remove the center screws (3) on the four rear-panel feet (4).
4. Remove the four bottom feet (5) from the cover by lifting the tab and sliding the foot toward the tab.
5. Place the signal generator on its side.
6. Tilt the signal generator forward and slide the outer cover (6) back to remove it from the frame.

Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Figure 1 Outer Cover Removal

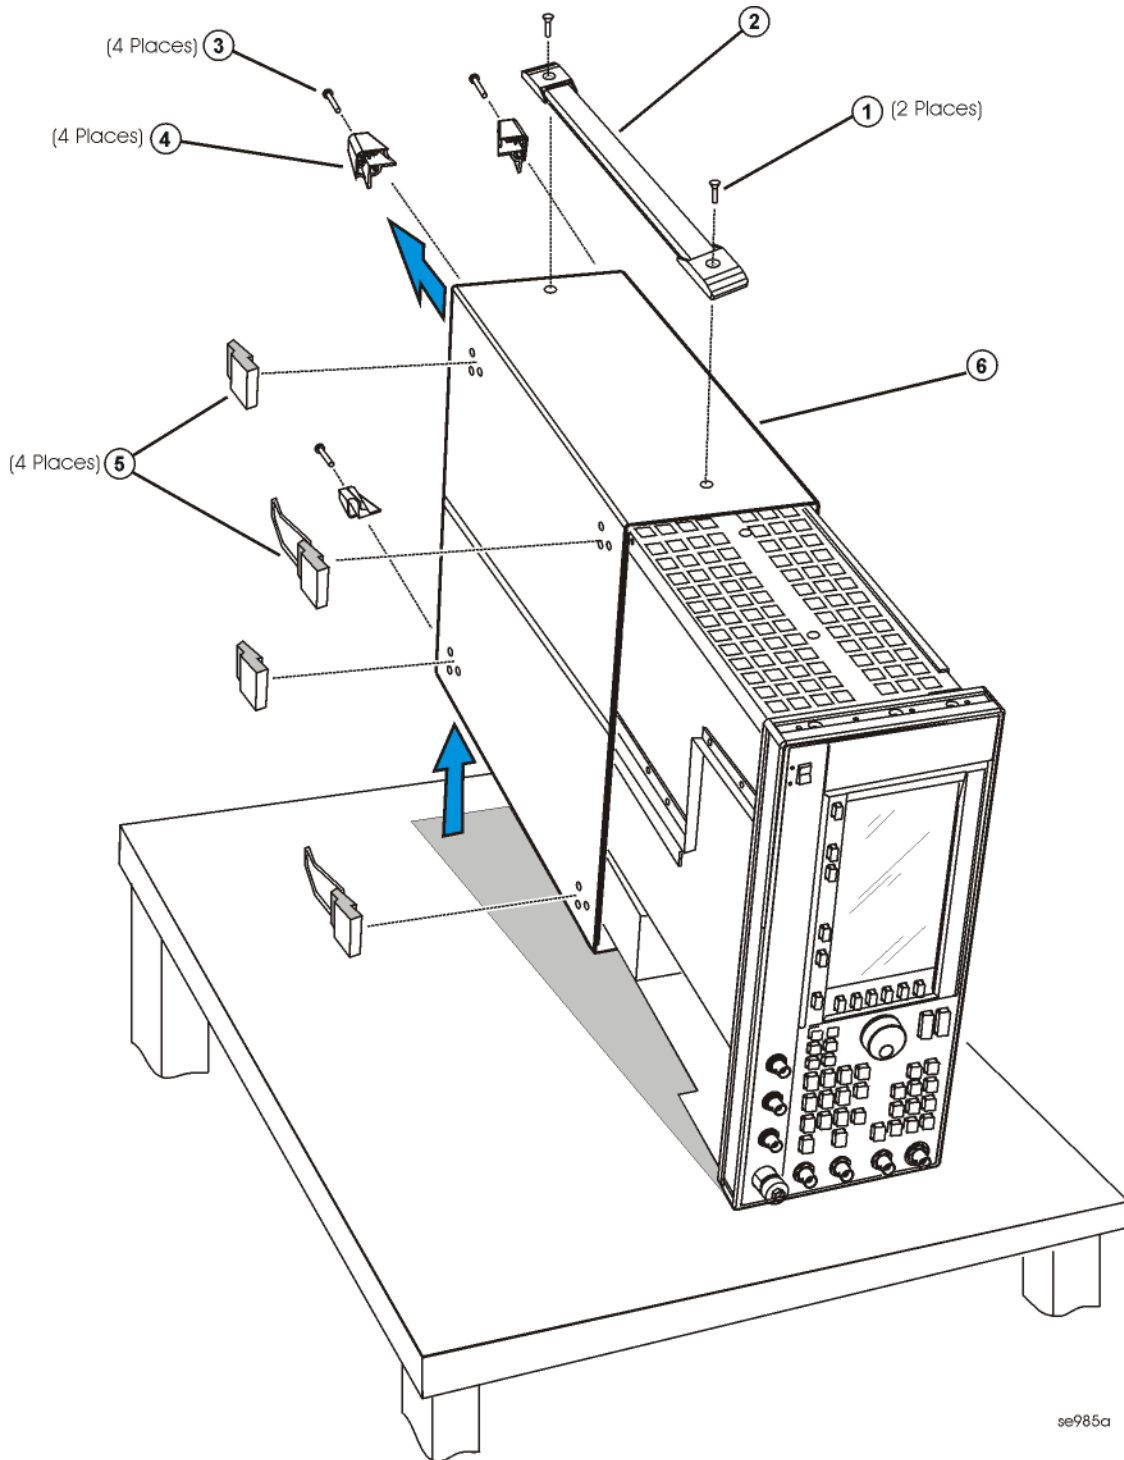


Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Remove the Inner Top Cover

Refer to **Figure 2**.

1. Using a T-10 driver, remove the screws (1) from the inner-top cover (2). There are twelve screws for the E8257D & E8663B and eleven screws for the E8267D.
2. Remove the inner-top cover.

Figure 2 Inner Top Cover Removal

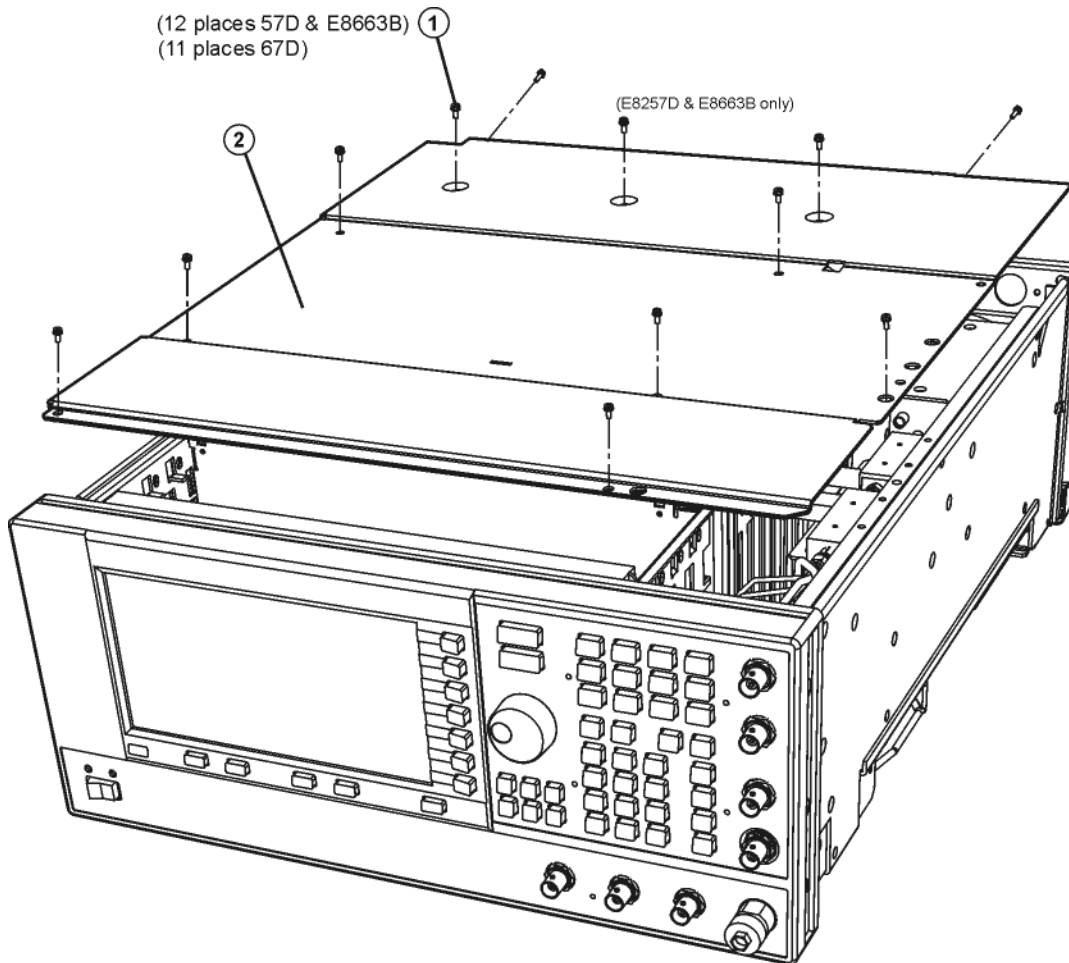

Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Install the A12 Pulse Modulator Assembly (For instruments with Option 1EH)

Refer to **Figure 3**.

1. Remove the A38 Lowband Switch Filter assembly.
2. Using needle-nose pliers, remove the cable retainer base for W119 (E8251-20333, not shown).
3. With the A31 Motherboard facing you, using a 5/16" open-ended wrench, remove the other end of semi-rigid cable W119.


NOTE

W119 is connected to the A38 Lowband Switch Filter (OUT) and the A23 Lowband Coupler/Detector (IN).

4. Using the T-10 driver, insert two screws (1) through the A12 Pulse Modulator bracket and into the main chassis. Torque to 9 in-lbs.
5. Attach the loose end of the W69 ribbon cable (comes with the A12 Pulse Modulator assembly) to the A26 MID board, J14.
6. Install W76 (E8251-20590) from the A31 Motherboard (LB Output) to the A12 Pulse Modulator. Torque to 8 in-lbs.
7. Install semi-rigid cable W75 (E8251-20033) from the A23 Lowband Coupler/Detector to the A12 Pulse Modulator. Torque to 8 in-lbs.
8. Attach the loose end of flexible cable W16 (comes attached with the A12 Pulse Modulator assembly) to A11J204.

Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Figure 3 A12 Pulse Modulator Board

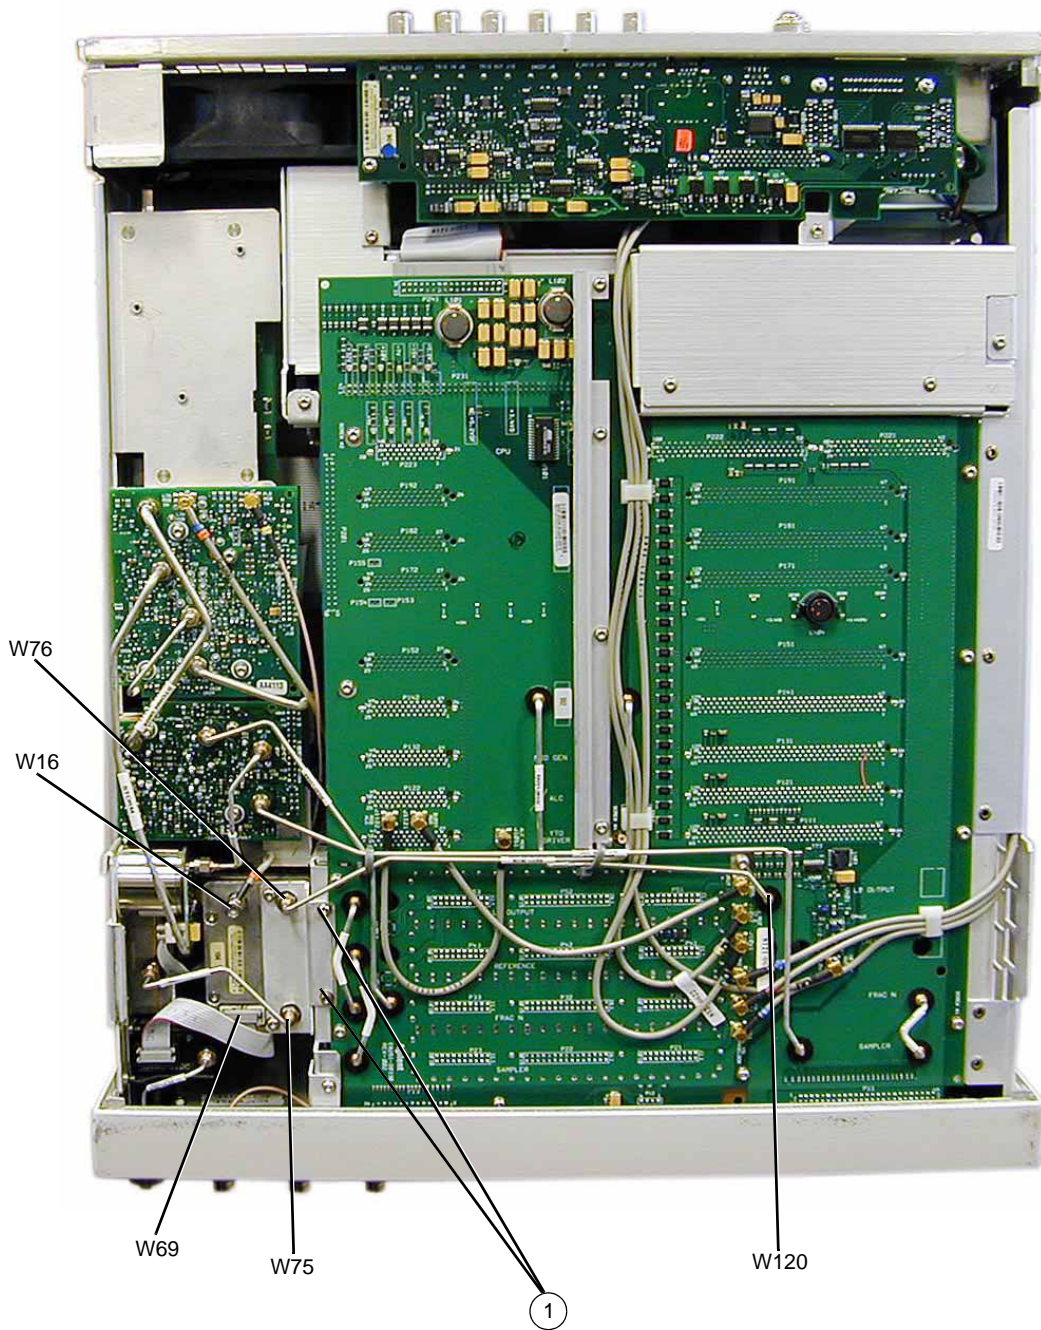

Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Install the A12 Pulse Modulator Assembly (For instruments without Option 1EH)

Refer to **Figure 4**.

1. Remove A6 thru A8.
2. Using needle-nose pliers remove the cable retainer base for W37 (E8251-20225, not shown).
3. With the A31 Motherboard facing you, using a 5/16" open-ended wrench, remove the other end of semi-rigid cable W37.


NOTE

W37 is connected to the A31 Motherboard (LB Output) and the A23 Lowband Coupler/Detector (IN).

4. Using the T-10 driver, insert two screws (1) through the A12 Pulse Modulator bracket and into the main chassis. Torque to 9 in-lbs.
5. Attach the loose end of the W69 ribbon cable (comes with the A12 Pulse Modulator assembly) to the A26 MID board, J14.
6. Install semi-rigid cable W120 (E8251-20342) from the A31 Motherboard (LB Output) to the A23 Lowband Coupler Detector. Torque to 8 in-lbs.
7. Install semi-rigid cable W75 (E8251-20033) from the A23 Lowband Coupler/Detector to the A12 Pulse Modulator. Torque to 8 in-lbs.
8. Attach the loose end of flexible cable W16 (comes attached with the A12 Pulse Modulator assembly) to A11J204.

Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Figure 4 A12 Pulse Modulator Board

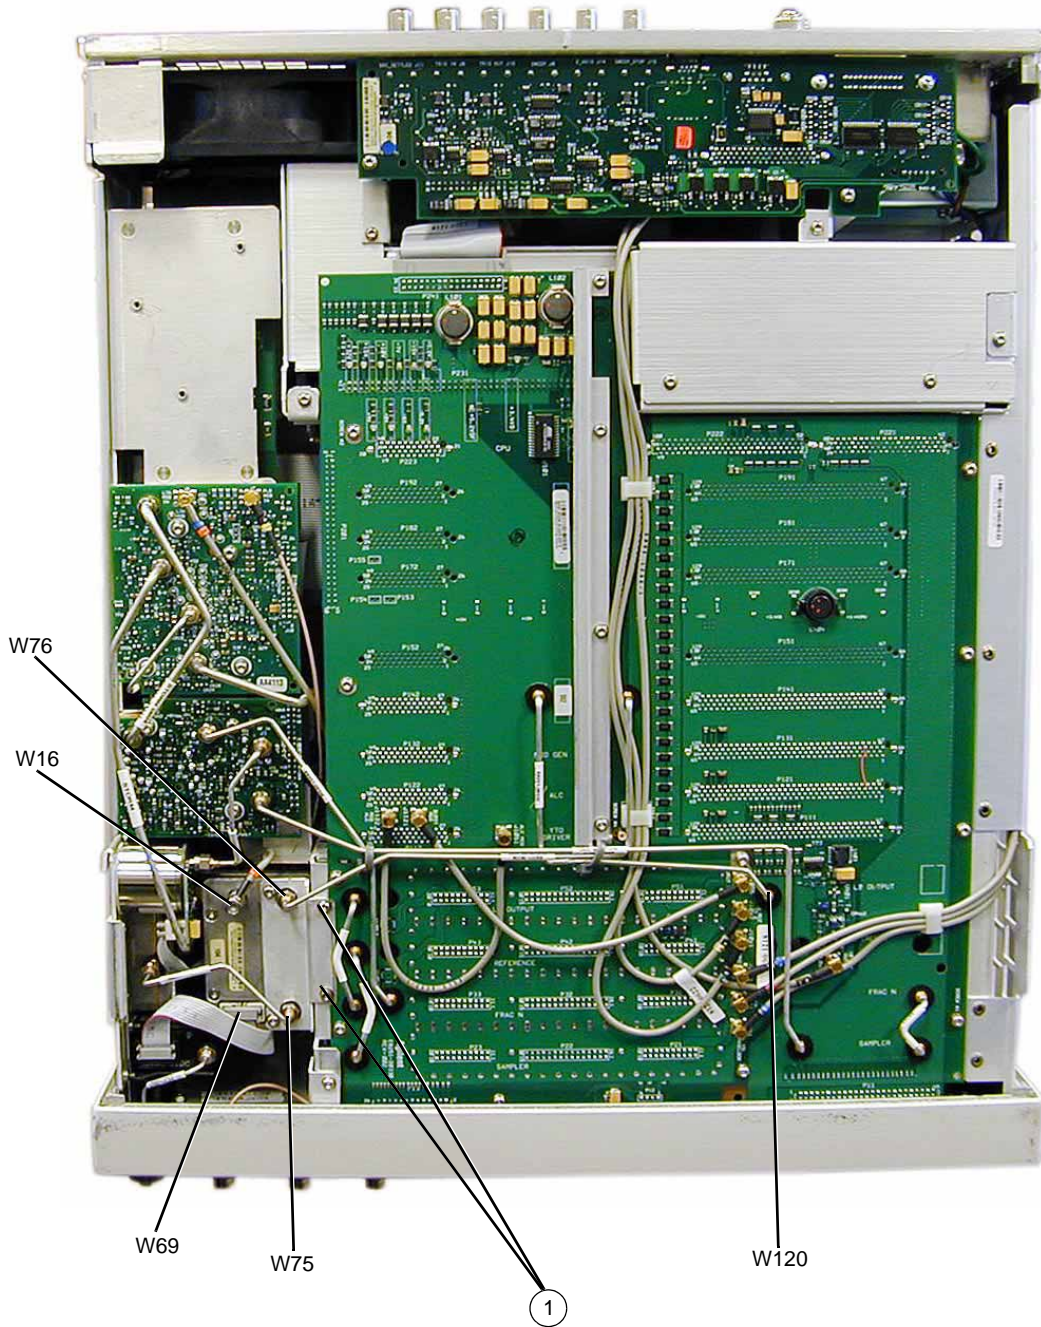

Add Option UNW (Narrow Pulse Modulation 10 MHz–3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

Activate Option UNW

1. Turn the signal generator on and allow it to warm up for 5 minutes.
2. Connect the instrument to the LAN, using the instructions in the Keysight Signal Generator Programming Guide.
3. Load the IP address into the instrument, by pressing **Utility > GPIB/RS-232/LAN > LAN Setup > IP Address**. Enter the IP address.
4. Using the web browser on your PC enter the following URL, replacing <ip-address> with the actual IP address you entered into the instrument in step 3: <http://<ip-address>/update>.
5. Scroll to “Update optional PULSE MODULATOR”, select “add:E8251-60064”, enter the modulators serial number and click Execute.
6. Check Firmware Version and Update if <C.04.71
 - a. Press **Utility > Instrument Info/Help Mode > Diagnostic Info**.
 - b. If the firmware is <C.04.71, upgrade the firmware.
7. Update the Arrays
 - a. Connect the instrument to the LAN and write down the IP address.
 - b. Load the IP address into the instrument, by pressing: **Utility > GPIB/RS-232/LAN > LAN Setup > IP Address**.
 - c. Open a web browser on your PC.
 - d. Enter the following URL, replacing <ip-address> with the actual IP address of your instrument, <http://<ip-address>/update>.
 - e. Type in or, if using the web to view this installation note, copy the script from below and paste it into the text area on the update page.

```
cd "ALC FED PULSE DELAY", 0, 9
cd "ALC FED PULSE DELAY", 1, 9
cd "ALC FED PULSE DELAY", 2, 9
cd "ALC FED PULSE DELAY", 3, 9
cc "ALC FED PULSE DELAY"
cd "ALC RED PULSE DELAY", 0, 245
cd "ALC RED PULSE DELAY", 1, 180
cd "ALC RED PULSE DELAY", 2, 180
cd "ALC RED PULSE DELAY", 3, 180
cd "ALC RED PULSE DELAY", 4, 230
cd "ALC RED PULSE DELAY", 5, 190
cd "ALC RED PULSE DELAY", 6, 170
cd "ALC RED PULSE DELAY", 7, 170
cd "ALC RED PULSE DELAY", 8, 230
cd "ALC RED PULSE DELAY", 9, 190
cd "ALC RED PULSE DELAY", 10, 180
cd "ALC RED PULSE DELAY", 11, 180
cd "ALC RED PULSE DELAY", 12, 195
```

Add Option UNW (Narrow Pulse Modulation 10 MHz-3.2 GHz) Kit Part Numbers: E8257DK-UNW, E8267DK-UNW, and E8663BK-UNW

cd "ALC RED PULSE DELAY", 13, 180
cd "ALC RED PULSE DELAY", 14, 180
cd "ALC RED PULSE DELAY", 15, 180
cc "ALC RED PULSE DELAY"
ky 42718

- f. Press Execute, to update the arrays.
 - g. Cycle the instrument power.
8. Follow the instructions on the Entitlement Certificate.

Verify Proper Installation of Option UNW

1. Press: **Utility > Instrument Info > Help Info > Options Info.**
2. Make sure Option UNW is listed.

NOTE

If you enable an option that does not have the required hardware installed, the menus for that option will be activated but the option cannot operate.

Re-Assemble the Signal Generator

Refer to [Figure 1](#) and [Figure 2](#).

1. Reinstall the inner and outer instrument covers by reversing the order for removal.
2. Torque all T-10 screws to 9 in-lbs.
3. Torque all T-15 and T-20 screws to 21 in-lbs.

Verify Signal Generator Calibration

1. Turn the signal generator on and allow it to warm up for 30 minutes.
2. Perform the following adjustment and performance tests to verify signal generator calibration. Refer to the PSG Family Signal Generators Service Software or the E8663B Analog Signal Generator Service Software:
 - ADC Calibration
 - ALC Dynamic Calibration
 - Power Flatness Calibration
 - Pulse Width Calibration
 - Self Tests
 - Internal Pulse Modulation Level Accuracy
 - Internal Pulse Modulation Rise/Fall Time
 - External Pulse Modulation ON/OFF Ratio



This information is subject to change without notice.

© Keysight Technologies 2004-2015

Edition 1, August 2015

E8251-90381

www.keysight.com