

Start Here

Keysight J-BERT M8020A High-Performance BERT

Welcome to Keysight J-BERT M8020A High-Performance BERT

Refer to the following documents before operating the instrument:

- If you have ordered J-BERT M8020A as a pre-installed bundle of AXIe chassis and modules (M8020A-BU1 or M8020A-BU2), then start with the *M8020A Getting Started Guide* for the basic setup.
- If you have ordered J-BERT M8020A modules and AXIe chassis separately then start with the *M8020A Installation Guide*, which is available in the CD, shipped along with the order.
- For safety and ESD instructions, refer to *Tips for Preventing Damage to J-BERT M8020A High-Performance BERT*.
- For information on M8070A GUI features and measurements, refer to the *M8020A User Guide* and *Online Help*.

Locate M8020A documentation

- On installing the M8070A software, you will find the M8020A documentation by clicking **Start** > **Keysight** > **M8070A** > **Documentation**.
- You can also visit www.keysight.com/find/m8020a to find the latest versions of various manuals and the data sheet for each M8020A module.

Contact Keysight Technologies

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: www.keysight.com/find/contactus

This information is subject to change without notice.

© Keysight Technologies 2015

Edition 3.0, July 2015

Printed in Malaysia



M8000-91020

www.keysight.com