#### Errata

Title & Document Type: 10811A/B Quartz Crystal Oscillator Operating and

**Service Manual** 

Manual Part Number: 10811-90002

**Revision Date: August 1980** 

#### **About this Manual**

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

#### **HP References in this Manual**

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

# **Support for Your Product**

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

#### www.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.



# **OPERATING & SERVICE MANUAL**

# 10811A/B Quartz Crystal Oscillator

General Information Installation Operation Performance Tests Adjustments Replaceable Parts Manual Changes Service





# 10811A/B QUARTZ CRYSTAL OSCILLATOR

# **OPERATING AND SERVICE MANUAL**

**SERIAL PREFIX: 2028** 

This manual applies to Hewlett-Packard Model 10811A/B Oscillators with serial prefix number 2028.

Also covers oscillators with HP Part Numbers 10811-60101 and 10811-60105.

#### **OTHER SERIAL PREFIXES**

For serial prefixes above 2028, a "Manual Change" sheet is included with this manual.

First Edition — August 1980

©Copyright 1980 by HEWLETT-PACKARD COMPANY 5301 Stevens Creek Blvd. Santa Clara, CA 95050

All Rights Reserved

MANUAL PART NUMBER 10811-90002 Microfiche Part Number 10811-90003



# **TABLE OF CONTENTS**

Section	Title		Page
ı	GENE	RAL INFORMATION	1-1
	1-1.	Introduction	1-1
	1-4.	Specifications	1-1
	1-6.	Safety Considerations	1-1
	1-8.	Instruments Covered by this Manual	1-1
	<b>1-13</b> .	Description	1-3
	1-19.	HP Part Number 10811-60101 and 10811-60105	1-3
	1-22.	Recommended Test Equipment	1-3
11	INSTA	ALLATION	2-1
	2-1.	Introduction	2-1
	2-3.	Initial Inspection	2-1
	2-5.	Preparation for Use	2-1
	2-6.	Power Requirements	2-1
	2-10.	Single Source Regulated Power Supply	2-2
	2-10. 2 <b>-1</b> 2.	Electronic Frequency Control (EFC)	2-2
	2-12. 2-16.	10 MHz Frequency Output Signal	2-2
	2-16. 2-18.		2-2
		Oven Monitor Output	
	2-20.	Mating Connectors and Mounting	2-3
	2-23.	Installation Instructions	2-4
	2-25.	Installation Instructions (HP Instrument)	2-5
	2-28.	Operating Environment	2-5
	2-34.	Storage and Shipment	2-6
	2-35.	Environment	2-6
	2-37.	Packaging	2-6
	2-38.	Original Packaging	2-6
	2-40.	Other Packaging	2-6
Ш	OPER	ATION	3-1
	3-1.	Introduction	3-1
	<b>3-3</b> .	Basic Power-Up Description	3-1
	3-7.	Frequency Adjustment	3-1
	3-9.	Frequency Adjustment Procedure	3-1
	3-10.	Accuracy vs Adjustment Interval	3-2
IV	OPER	RATIONAL VERIFICATION	4-1
	4-1.	Introduction	4-1
	4-3.	Operational Verification	4-1
	4-5.	Equipment Required	4-1
	4-7.	Test Record	4-1
	4-13.	Optional Controllers and Counters	4-6
	4-14.	Optional Controllers	4-6
	4-16.	Optional Counters	4-7
V	ADJU	JSTMENTS	5-1
	5-1.	Introduction	5-1
	5~3.	Equipment Required	5-1
	5-5.	Factory Selected Components	5-1
	5-7.	Adjustment Location	5-1
	5-9.	Safety Considerations	5-1
	5-11.	Oscillator Frequency Adjustment	5-1
	5-14.		5-2
		•	

# TABLE OF CONTENTS (Continued)

F2-8	Troubleshooting Information noisemach gnitoohselduorT	.26-8	
8-20	stniH lutqləH	.re-8	
8-20	Oscillator Troubleshooting Techniques	:88-8	
8-20	Normal Operation Oscillator Troubleshooting Techniques	.98-8	
8-20	Oscillator Troubleshooting	.48-8	
8r-8	996m6U x911	.28-8	
8F-8	Troubleshooting Cautions	.08-8	
8F-8	Troubleshooting arms	.97-8	
8F-8	Normal Operation	.₽7-8	
∠L-8	Genetral	.07-8	
∠L-8	Oven Controller Troubleshooting	.69-8	
SL-8	Special Parts Replacement Considerations	.79-8	
2L-8	Special Cable for the 1081BB	.29-8	
<b>⊅</b> L-8	Special Test Connector for 10811A	.19-8	
£r-8	Disassembly for Troubleshooting and Repair	.72-8	
21-8	Troubleshooting	.02-8	
FF-8	Replacing Integrated Circuits	.74-8	
FF-8	Printed Circuit Component Replacement	.24-8	
FF-8	Repair	.44-8	
FF-8	Inspection	.24-8	
11-8	Repair and Troubleshooting	.r4-8	
01-8	Heater Transistor Balance	.65-8	
6-8	Oven Controller Turn-On Current Limiting	.7£-8	
6-8	Precision Voltage Reference	.25-8	
8-8	Oven Heater and Controller Theory	.72-8	
Z-8	Voltage References (5.7V and 6.4V)	.22-8	
<b>Z-8</b>	RF Output Impedance Matching and Output Buffer	8-23.	
9-8	Automatic Gain Control (DDA) lorino Disability and Automatic Gain Control (DDA)	.02-8	
2-8	Electronic Frequency Control (EPC)	.81-8	
<b>≯-8</b>	Main Oscillator Theory of Operation	.£F-8	
r-8	Overall Block Diagram Theory	.8-8	
r-8	Theory of Operation Theory of Upperation	.8-6.	
r-8	Reference Designators	.2-8	
F-8	Schematic Diagram Symbols and Reference Designators	.£-8	
r-8	Introduction	.r-8	
r-8	· ·	SERVI	ША
- 0	10	1/1025	11171
L-Z	Newer Instruments	.e-7	
L-Z	Manual Changes	.ξ-7	
1-2	Introduction	.r-7	
1-2	NAL CHANGES		ПΛ
-	33344113 1411		11/1
£-9	Replaceable Parts List Layout	.02-9	
£-9	Factory Selected Parts	.4r-8	
£-9	Specific Instrument Parts	.2r-8	
£-9	Leneral Usage Parts	.01-8	
7-9	Component Parts and Materials	.7-9	
1-9	The Part Number Organization nonizarion	·S-9	
L-9	Ordering Information	.£-9	
1-9	Introduction	.1-6	
1-9	CEABLE PARTS		I۸
		- 1444	• / •
r 4ge		anu	uonsa

# LIST OF TABLES

Table	Title	Page
1-1. 1-2.	Specifications	1-2 1-4
2-1.	Input Voltages/Voltage Coefficients	2-1
3-1.	Accuracy vs Adjustment	3-3
4-1. 4-2. 4-3. 4-4.	Operational Verification Descriptions Operation Verification Procedure 5316A Program Codes Operational Verification Record	4-2 4-3 4-7 4-9
6-1. 6-2.	Replaceable Parts	6-4 6-9
8-1. 8-2. 8-3. 8-4.	Temperature Set Resistor List Oven Controller Troubleshooting Tree Oven Circuit Voltages Oscillator Section Normal Voltages	8-16 8-19 8-24 8-24

# LIST OF FIGURES

Figure	Title	Page
2-1.	Single Source Regulated Power Supply	2-2
2-2.	Oven Monitor LED Circuit	2-3
2-3.	10811A Supply and Output Connections	2-3
2-4.	10811B Supply and Output Connections	2-4
2-5.	Mechanical Mounting Dimensions	2-5
3-1.	Oscillator Adjustment Set-Up	3-2
4-1.	BASIC Program	4-6
4-2.	HPL Program	4-6
4-3.	5316A Program Codes	4-7
4-4.	Operational Verification Record	4-9
5-1.	Oscillator Adjustment Set-up	5-2
5-2.	10811A Amplitude Adjustment Set-up	5-4
5-3.	10811B Amplitude Adjustment Set-up	5-4
6-1.	Mechanical Parts	6-7
8-1.	Schematic Diagram Notes	8-2
8-2.	10811A/B Overall Block Diagram	8-3
8-3A.	Basic Colpitts-Type Oscillator	8-4
8-3B.	Main Oscillator Schematic Design	8-4
8-4.	Mode Suppression	8-5
8-5.	Frequency Tuning Circuit	8-5
8-6.	EFC	8-6
8-7.	Automatic Gain Control (AGC)	8-6
8-8.	Output Amplifiers	8-7
8-9.	Voltage References	8-8
8-10.	Oven Control Circuits	8-9
8-11.	Turn-on Current Limit Circuit	8-10
8-12.	Heater Transistor Balance Circuit	8-10
8-13.	10811A/B Special Test Connector	8-14
8-14.	Oven Controller Block Diagram	8-17
8-15.	Oven Controller Schematic Diagram	8-25

### **PREFACE**

This manual is designed to present the information required by the user to effectively operate and maintain the 10811A/B Quartz Crystal Oscillator.


In limiting the depth of coverage of this manual, a certain amount of previous knowledge on the part of the reader must be assumed. A variety of additional related documentation is available. These materials address the specific areas of interest, and should be used whenever necessary to supplement this manual. Users unfamiliar with precision time keeping and frequency standards, for example, may wish to refer to the 10811A/B Documentation Map for further information.

The following references can provide additional information about the theory and use of precision frequency sources and quartz oscillators.

- a. Application Note 52-1 Hewlett-Packard Fundamentals of Time and Frequency Standards.
- b. Application Note 52-2 Hewlett-Packard Time Keeping and Frequency Calibration.
- c. Application Note 200-2 Hewlett-Packard Fundamentals of Quartz Oscillators.
- d. U.S. National Bureau of Standards, Monograph 140, Time and Frequency Theory and Fundamentals available from:

Superintendent of Documents U. S. Government Printing Office Washington, D.C. 20402

The 10811A/B Quartz Crystal Oscillator has two manuals available. The Operating Instruction Manual is supplied with the oscillator and is intended for the user that desires only operating information. The Operating and Service Manual is a complete document containing both operating and servicing information. The Operating and Service Manual is not supplied with the oscillator, but is available by ordering HP Part No. 10811-90002. The Operating Instructions Manual is a duplication of Sections I, II, and III of the Operating and Service Manual. Any references in the Operating Instructions Manual to Sections IV, V, VI, VII, and VIII should be considered references to the Operating and Service Manual.

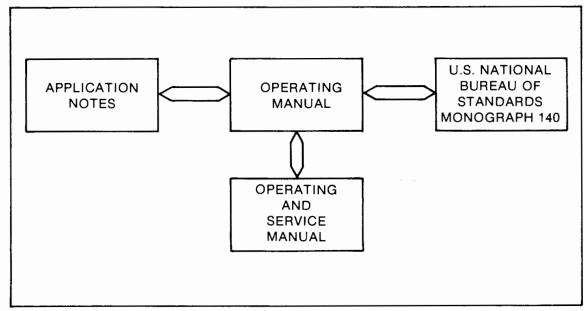

10811A/B Documentation Map



Figure 1-1. 10811A and 10811B Oscillators

# SECTION I GENERAL INFORMATION

#### 1-1. INTRODUCTION

- 1-2. This manual provides information pertaining to the installation, operation, testing, adjustment, and maintenance of the HP Model 10811A/B Quartz Crystal Oscillator. *Figure 1-1* shows the 10811A and 10811B.
- 1-3. This manual is divided into eight sections, each covering a particular topic. The topics by section number are shown below. Sections I, II, III appear in the Operating Instructions Manual. Sections I through VIII appear in the Operating and Service Manual.

Section	Topic	
1	General Information	
11	Installation	
Ш	Operation	
IV	Performance Tests	
V	Adjustments	
VI	Replaceable Parts	
VII	Manual Changes	
VIII	Service	

#### 1-4. SPECIFICATIONS

1-5. Specifications are listed in *Table 1-1*. These specifications are the performance standards or limits against which the oscillator may be tested.


#### 1-6. SAFETY CONSIDERATIONS

1-7. The Model 10811A/B Component Oscillator is a Safety Class III product and must be powered from a source which is electrically isolated from the mains (line circuits). Safety information pertinent to the operation and servicing of this instrument is included in the appropriate sections of this manual.


#### 1-8. INSTRUMENTS COVERED BY THIS MANUAL

- 1-9. Attached to the instrument is a serial number plate. The serial number is in the form 0000A00000. It is in two parts; the first four digits and the letter are the serial prefix and the last five are the suffix. The prefix is the same for all identical instruments; it changes only when a change is made to the instrument. The suffix, however, is assigned sequentially and is different for each instrument. The contents of this manual apply to instruments with the serial number prefix(es) listed under Serial Prefix on the title page.
- 1-10. An instrument manufactured after the printing of this manual may have a serial number prefix that is not listed on the title page. This unlisted serial number prefix indicates the instrument is different than those described in this manual. The manual for this new instrument is accompanied by a yellow Manual Changes supplement. This supplement contains "change information" that explains how to adapt the manual to the newer instrument.
- 1-11. In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is identified with the manual print date and part number, both of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard.

Table 1-1. Specifications

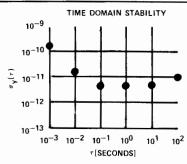

Averaging Time	Stability
au   seconds	$\sigma_{y}(\tau)$
10 <sup>-3</sup>	$1.5 \times 10^{-10}$
10 <sup>-2</sup>	$1.5 \times 10^{-11}$
10 <sup>-1</sup>	5 × 10 <sup>-12</sup>
10 <sup>0</sup>	$5 \times 10^{-12}$
10 <sup>1</sup>	$5 \times 10^{-12}$
10 <sup>2</sup>	1 × 10 <sup>-11</sup>

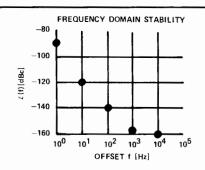

Offset from Signal	Phase Noise Ratio
f [Hz]	£(f) [dBc]
10 <sup>0</sup> 10 <sup>1</sup> 10 <sup>2</sup> 10 <sup>3</sup> 10 <sup>4</sup>	-90 -120 -140 -157 -160

Frequency Stability: (See Definition of Terms)

**Long Term (Aging Rate):**  $<5 \times 10^{-10}/$  day after 24-hour warm-up. See Note 1.

 $<1 \times 10^{-7}$ /year for continuous operation. **Short Term**: Refer to tables and figures

**Environmental Sensitivity:** 

**Temperature:**  $<4.5 \times 10^{-9}$  over a  $-55^{\circ}$ C to 71°C range.  $<2.5 \times 10^{-9}$  over a 0°C to 71°C range.

Operating: -55°C to +71°C. Storage: -55°C to ×85°C.

**Load:**  $<5 \times 10^{-10}$  for a  $\pm 10\%$  change in 50 ohm load.  $<5 \times 10^{-10}$  for a  $\pm 25\%$  change in  $1K\Omega$  load.

Power Supplies:

**Oscillator Supply:**  $<2 \times 10^{-10}$  for 1% change.  $<100\,\mu\text{v}$  ripple and noise required. **Oven Supply:**  $<1 \times 10^{-10}$  for 10% change. <30 mv ripple and noise required.

**Gravitational Field:** <4 × 10<sup>-9</sup> for 2g static shift (turn-over).

Magnetic Field: <-90 dBc sidebands due to 0.1 millitesla (1 Gauss) rms at 100 Hz.

Humidity (typical):  $1 \times 10^{-9}$  for 95% RH at  $40^{\circ}$ C.

Shock (survival): 30 g, 11 ms,  $\frac{1}{2}$  sinewave. Altitude (typical):  $2 \times 10^{-9}$  for 0 to 50,000 ft.

#### Warmup

10 min. after turn-on within  $5 \times 10^{-9}$  of final value, at 25°C and 20 Vdc. See Notes 1 & 2.

#### Adjustment

Coarse Frequency Range:  $>\pm 1 \times 10^{-6} (\pm 10)$ Hz) with 18 turn control.

Elec. Frequency Control (EFC):  $\geq 1 \times 10^{-7}$  (1 Hz) total, control range -5 Vdc to +5 Vdc.

#### Output

Frequency: 10 MHz

Voltage:  $0.55 \pm 0.05$  V rms into 50 ohm. 1V rms  $\pm 20\%$ , into 1K ohm.

Harmonic Distortion: Down more than 25 dB from output.

Spurious Phase Modulation: Down more than 100 dB from output (discrete sidebands 10 Hz to 25 kHz).

#### Power Requirements

Oscillator Circuit: 11.0 to 13.5 Vdc. 30 mA typical. 40 mA max.

Oven Circuit: 20 to 30 Vdc; turn on load is 42 ohm minimum. Steady-state power drops to a typical value of 2.0W at 25°C in still air with 20 Vdc applied.

#### Connectors

10811A: Mates with CINCH 250-15-30-210 (HP 1251-0160) or equivalent (not supplied). 10811B: Solder terminals and SMB Snap-on connectors. Mates with Cablewave Systems, Inc. #700156 or equivalent (not supplied).

#### Accessories Available:

Service Manual: HP 19811-90002: (not supplied).

#### Size:

72 mm  $\times$  52 mm  $\times$  62 mm, (see Figure 1). (2-13/16"  $\times$  , 2-1/32"  $\times$  2-7/16", 14 cu. in.).

Weight: 0.31 kg (11 oz.)

#### **Definition of Terms**

**Long-Term Frequency Stability** is defined as the absolute value (magnitude) of the fractional frequency change with time. An observation time sufficiently long to reduce the effects of random noise to an insignificant value is implied. Frequency changes due to environmental effects must be considered separately.

**Time Domain Stability**  $\sigma_y(\tau)$  is defined as the two-sample deviation of fractional frequency fluctuations due to random noise in the oscillator. The measurement bandwidth is 100~kHz.

**Frequency Domain Stability** is defined as the single sideband phase noise-to-signal ratio per Hertz of bandwidth (a power spectral density). This ratio is analogous to a spectrum analyzer display of the carrier versus either phase modulation sideband.

See "NBS-Monograph 140" for measurement details.

#### Notes:

- 1. For oscillator off-time less than 24 hours.
- Final value is defined as frequency 24 hours after turn-on.

<sup>\*</sup>Specifications describe the instrument's warranted performance. Supplemental characteristics are intended to provide information useful in applying the instrument by giving TYPICAL or NOMINAL, but nonwarranted performance parameters. Definition of terms is provided at the end of the specification section.

1-12. For information concerning a serial prefix that is not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

#### 1-13. DESCRIPTION

- 1-14. The HP Model 10811A/B Quartz Crystal Oscillator is an extremely stable, compact, low-power source of 10 MHz. The 10811A/B has a very fast warm-up time, exhibits excellent temperature characteristics and has low phase noise and power consumption.
- 1-15. The 10811A/B has the ability to be adjusted over a range of 20 Hz ( $2 \times 10^{-6}$ ), yet the control is sensitive enough to allow adjustment to better than 0.1 Hz ( $1 \times 10^{-8}$ ). The frequency can also be controlled electronically over a 1 Hz ( $1 \times 10^{-7}$ ) range with an externally applied voltage to the EFC.
- 1-16. The 10811A/B is field repairable, thus allowing the oscillator to be quickly placed back into service.
- 1-17. The 10811A/B requires two external power supplies. The power supply requirements are listed in Section II.
- 1-18. The 10811A and 10811B are identical, except for the connections. The 10811A uses a standard 15 pin printed circuit connector. The 10811B uses filtered-feedthrough terminals for power and oven monitor, and SMB subminiature rf snap-on connections for the 10 MHz output and EFC.

#### 1-19. HP Part Number 10811-60101 and 10811-60105

- 1-20. The 10811-60101 is a 10811A in which phase noise, magnetic field and 2g turn-over are not specified. The 10811-60101 is physically identical to the 10811A.
- 1-21. The 10811-60105 is a 10811-60101 with specifications of  $<1.5\times10^{-9}$  for aging and  $<1\times10^{-11}$  for short-term stability for a 1-second averaging time. The 10811-60105 is physically identical to the 10811A.

### 1-22. RECOMMENDED TEST EQUIPMENT

1-23. The test equipment required to maintain the Model 10811A/B is listed in Table 1-2. Other equipment may be substituted if it meets or exceeds the critical specifications listed in the table.

Table 1-2. Recommended Test Equipment

INSTRUMENT	REQUIRED CHARACTERISTICS	MODEL NO.
1. Frequency Analyzer*	Phase noise measurement at 10 MHz 5390 cannot measure 10811 specs above 10 Hz	5390A*
2. Frequency Counter**	10 MHz range, HP-IB programmable, 2 ns resolution	5345A**
3. Computing Controller**	HP-IB compatible	9835A or 9825A**
4. Frequency Reference	Short term stability $\leq 5 \times 10^{-12}$ /second Long term stability $<5 \times 10^{-10}$ /day	5065A, 5061A (Option 004), or 105A/B***
5. Sampling Voltmeter	±3% accuracy at 10 MHz	3406A
6. General Purpose Oscilloscope	Bandwidth ≥ 10 MHz	1740A
7. Frequency Doubler	Operates at 10 MHz	10515A
8. Mixer Amplifier**	10 MHz Mixer/50 dB gain	K79-59992A**
9. Spectrum Analyzer	10 MHz/70 dB range	8552B/8553B
10. Power Supply	480 mA @ 20V (2 required)	6215A
11. DC Voltmeter	Any HP type digital or analog	_
12. Torque Screwdriver	2-30 inch-lb. (0.2 to 3.4 newton meters)	8730-0012
13. Feedthru Termination	50 ohms	11048B
14. BNC to Miniature Coax Adapter	Use for 10811B Only	05060-6116
15. Test Connector	For testing 10811A	See para. 8-61

<sup>\*</sup>Not needed if items 2, 3, 4 are available.

\*\*Not needed if HP 5390A Frequency Stability Analyzer is available.

\*\*\*If a 105A/B is used, its performance must be verified.

# SECTION II INSTALLATION

#### 2-1. INTRODUCTION

2-2. This section contains installation instructions for the 10811A/B Quartz Crystal Oscillator. Also included is information about initial inspection and damage claims, preparation for using the oscillator, and packaging, storage and shipment.

#### 2-3. INITIAL INSPECTION

2-4. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the oscillator has been checked mechanically and electrically. The contents of the shipment should be as shown in *Figure 1-1*; procedures for checking electrical performance are given in Section IV. If the contents are incomplete or if there is mechanical damage or defect, or if the oscillator does not pass the Performance Tests, notify the nearest Hewlett-Packard office. If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Keep the shipping materials for the carrier's inspection. The HP office will arrange for repair or replacement at HP option without waiting for the claim settlement.

#### 2-5. PREPARATION FOR USE

#### 2-6. Power Requirements

2-7. The 10811A/B requires two power sources. One supplies power to the oscillator circuitry and the other supplies power to the oven heaters. *Table 2-1* lists the required supply voltages, and the effect of a change in these voltages on the output frequency.

	Required		Voltage Coefficients	
Input Circuit .	Voltage	Required Current/Power	Voltage Change	Frequency Change
Oscillator/ Amplifier	11.0—13.5V dc Noise <100 μV	30 mA typical, 40 mA max.	1%	<2 × 10-10
Oven Controller 20—30V dc		Turn on load is 43 ohms minimum Power drops to steady state value (≈2W) within 10 min. at 25°C with 20V dc applied.	10%	<1 × 10-10

Table 2-1. Input Voltages/Voltage Coefficients

- 2-8. Both the 10811A and 10811B have separate ground return paths for each section (oscillator and oven circuits). Both grounds may be tied together or operated at any reasonable difference in potential. Note the oscillator supply ground and 10 MHz output have a common ground return. The outer housing for both oscillators is tied to this ground point. The 10811B filtered feedthrough grounds are also tied to the outer housing.
- 2-9. In order to maintain the high spectral purity of the 10811A/B output signal, the supply voltages must be relatively clean. The supply ripple and noise on the 12-volt line (oscillator supply) must be kept below 100  $\mu$ V rms and the 20-volt line (oven supply) ripple and noise must be kept below 30 mV rms with both measured in the 10 Hz to 25 kHz range. A 1% change of the 12-volt supply (oscillator) will cause  $\leq 2 \times 10^{-10}$  change in output frequency. A 10% change in the 20-volt line (oven) will cause a  $\leq 1 \times 10^{-10}$  change in output frequency.

#### 2-10. Single Source Regulated Power Supply

2-11. A single source of +20 to +30V dc with 10% regulation may be used to power both the oven and oscillator amplifier circuits if a simple IC regulator is used. A suggested circuit is shown in Figure 2-1. The resistor and capacitor connected to terminals 3 and 4 of the IC minimize ripple and noise in the regulated output.

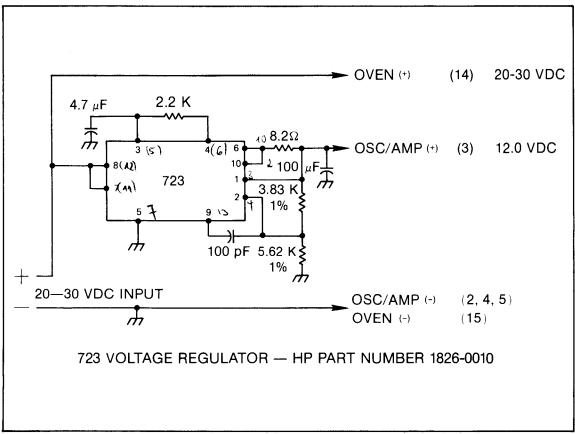


Figure 2-1. Single Source Regulated Power Supply

# 2-12. ELECTRONIC FREQUENCY CONTROL (EFC)

- 2-13. The EFC allows the oscillator to be tuned over a 1 Hz range  $(1 \times 10^{-7})$  by applying -5 to +5 volts to the EFC input. As the EFC voltage goes positive the output frequency will go lower. Conversely, as the EFC voltage goes negative, the output frequency will go higher.
- 2-14. Since noise on the EFC line affects the oscillator's stability (noise appears as FM on the output), care must be taken to ensure that a relatively noise free EFC voltage source is used. The noise level must be kept below 100  $\mu$ V to maintain good stability performance.
- 2-15. The EFC input should be connected to oscillator circuit ground if not used. A shorting plug (1250-0911) is supplied with 10811B for this purpose. The EFC input on the 10811A should be grounded at the printed circuit connector by wiring pins 5 and 6 together.

#### 2-16. 10 MHz FREQUENCY OUTPUT SIGNAL

2-17. The 10 MHz output is ac coupled from a source impedance of approximately 50 ohms. The signal level is .55  $\pm$ .05 into a 50 ohms load or 1-volt  $\pm$ 20% into a 1K ohm load.

#### 2-18. OVEN MONITOR OUTPUT

2-19. The OVEN MONITOR OUTPUT is an indicator of oven warm-up. At initial turn-on (warm-up) the oven monitor will go to approximately 1.5 volts BELOW the oven power supply voltage. After the oven cuts back, the output will drop to approximately 3.5 volts (at 25°C). The output impedance of this circuit is 10,000 ohms. Figure 2-2 shows an oven monitor LED indicator circuit.

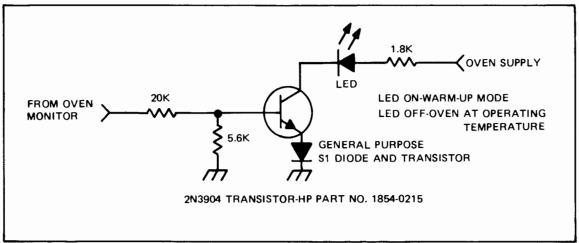


Figure 2-2. Oven Monitor LED Circuit

#### 2-20. MATING CONNECTORS AND MOUNTING

2-21. The 10811A Oscillator requires a 15-pin printed circuit connector. The recommended connector is the CINCH 250-15-30-210 (HP 1251-0160). The 10811A can be secured with two 6-32 screws, 1/4-inch long. Figure 2-3 shows the power supply connection for the 10811A. Figure 2-5 shows the mechanical mounting dimension for the 10811A and 10811B.

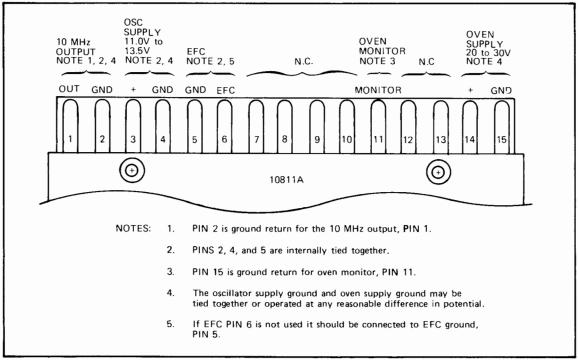


Figure 2-3. 10811A Supply and Output Connections

2-22. The 10811B Oscillator uses solder terminals with filtered feedthrough capacitors for power and oven monitor outputs and SMB subminiature rf snap-on connectors for the 10 MHz output and EFC. The 10811B also has one internally threaded mounting stud on the bottom cover and two located on the top. The three studs are threaded for 4-40 screws, 1/4-inch deep. These mounting studs may be used with vibration isolators such as the LORD #J2924-2-1 (HP Part No. 1520-0094). However, for ease of testing and interfacing, a 6-pin Amphenol connector is attached. If you wish to use this connector, the following parts are required to build its mate.

Description	Quantity	HP Part No.	Amphenol Part No.
Receptacle	1	1251-4297	221-1508
Pin-Female	5	1251-4734	220-883-03
Guide-Pin	2	1251-0597	221-590

If you do not wish to use the Amphenol connector, it may be easily removed. The SMB connectors mate to Cablewave Systems, Inc. #700156 or equivalent HP Part No. 1250-0885 (not supplied). Figure 2-4 shows the connections for the 10811B Oscillator.

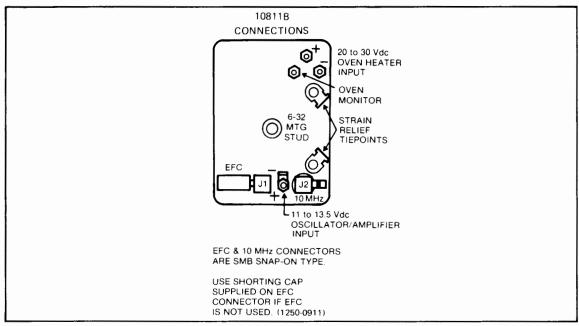


Figure 2-4. 10811B Supply and Output Connections

# 2-23. INSTALLATION INSTRUCTIONS

- 2-24. Figure 2-5 shows the mechanical mounting dimensions of the 10811A/B Oscillators for use in custom installation. Since all quartz oscillators are sensitive to shock, vibration, radiation fields, and ambient temperature changes, to obtain the best performance from your 10811A/B, these factors should be taken into consideration. To optimize performance therefore:
  - 1. The 10811A/B should be mounted in an area that has a minimum amount of vibration or shock accelerations. In addition, the 10811A/B should be mounted so that the vibrational forces act along the "minimum G sensitivity" axis shown in Figure 2-5.
  - 2. The 10811A/B should be mounted as far as possible from transformers or fan motors that radiate electromagnetic fields.
  - 3. The 10811A/B should be mounted away from the main system airflow in order to isolate it as much as possible from ambient temperature changes.

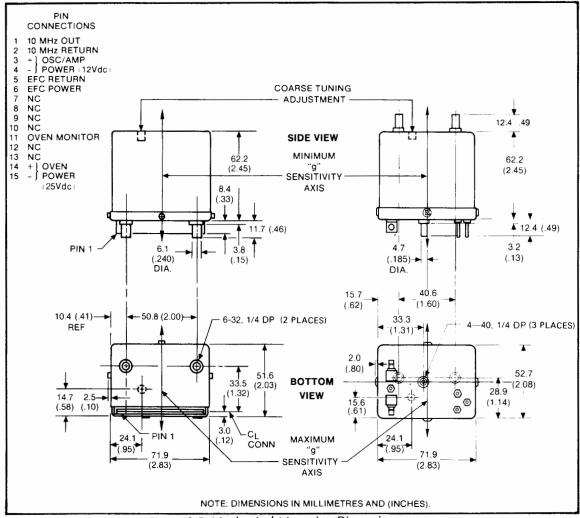


Figure 2-5. Mechanical Mounting Dimensions

### 2-25. INSTALLATION INSTRUCTIONS (HP INSTRUMENT)

- 2-26. The 10811A may be installed in most Hewlett-Packard instruments that already have a 10544A or 10544B oscillator or has provisions for it. The 10811A may be exchanged directly without any circuit change or modification.
- 2-27. If the instrument does not have a 10544A oscillator installed, but is available as an option, then the service manual for that instrument should be consulted to see if an oscillator support board (power supplies) is required. Once the support board is installed, the 10811A can be installed in place of the 10544A. Consult your nearest sales and service office for more details.

# 2-28. OPERATING ENVIRONMENT

- 2-29. TEMPERATURE. The 10811A/B may be operated in temperatures from -55°C to +71°C.
- 2-30. MAGNETIC FIELDS. Sidebands due to 0.1 milliTelsa (1 Gauss) rms at 100 Hz will be down more than 90 dB from carrier.
- 2-32. ALTITUDE. The frequency change will be typically  $2 \times 10^{-9}$  for altitudes up to 15.2 km (50,000 ft.).
- 2-33. SHOCK. The 10811A/B can withstand a shock up to 30 Gs for 11 ms, 1/2 sine wave.

#### 2-34. STORAGE AND SHIPMENT

#### 2-35. Environment

2-36. The 10811A/B may be stored or shipped in environments with the following limits:

Temperature	 55°C to +85°C
Altitude	 15.2 Km (50,000 feet)

#### 2-37. PACKAGING

#### 2-38. Original Packaging

2-39. Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also, mark the container FRAGILE to ensure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

#### 2-40. Other Packaging

- 2-41. The following general instructions should be used for repacking with commercially available materials.
  - a. Wrap instrument in heavy paper or plastic. (If shipping to Hewlett-Packard office or service center, attach tag indicating type of service required, return address, model number, and full serial number.)
  - b. Use strong shipping container. A double-wall carton made of 350-pound test material is adequate.
  - c. Use a layer of shock-absorbing material 70 to 100 mm (3- to 4-inch) thick around all sides of the instrument to provide firm cushioning and prevent movement inside container. Protect control panel with cardboard.
  - d. Seal shipping container securely.
  - e. Mark shipping container FRAGILE to insure careful handling.
  - f. In any correspondence, refer to instrument by model number and full serial number.

# SECTION III OPERATION

#### 3-1. INTRODUCTION

3-2. This section contains operating information including operating characteristics and operating procedure.

#### 3-3. BASIC POWER-UP DESCRIPTION

- 3-4. The following paragraph is a basic description of the actions occurring when power is applied to the oscillator. This description assumes the oscillator is at room temperature (25°C).
- 3-5. When power is applied to the oscillator, 10 MHz will appear at the output. The oven controller circuit will go into its full warm-up mode. In this mode the maximum heating power is applied to the oven mass. The oven mass is a metal casting surrounding the oscillator circuits and crystal. The OVEN MONITOR output will be approximately 1.5 volts below the oven power supply voltage. In about 10 minutes, the oven will have heated to the proper temperature. The oven controller will begin to regulate at this temperature, and the OVEN MONITOR will drop to approximately 3.5 volts. It is normal for the oven current to drop momentarily to a low value when the oven temperature first reaches maximum. This lasts less than second and is a typical circuit action.
- 3-6. After the first 10 minutes have passed, the oscillator may be initially adjusted using the following procedure. The oscillator should be readjusted after 24 hours for maximum accuracy. Periodic adjustment schedule can be determined by the procedure described in paragraph 3-15.

#### 3-7. FREQUENCY ADJUSTMENT

3-8. The frequency adjustment is the only periodic adjustment required. This may be initially adjusted after 10 minutes of warm-up, then readjusted after 24 hours.

### 3-9. FREQUENCY ADJUSTMENT PROCEDURE

- a. Connect reference frequency standard (multiple or submultiple of 10 MHz) to the EXTERNAL SYNC INPUT of the oscilloscope.
- b. Connect oscillator output (10811A/B) to Channel A. Set the sweep speed to .1 µs/div.
- c. Set the oscilloscope to EXTERNAL TRIGGER and adjust the oscilloscope so that its sweep is synchronized to the reference frequency. The pattern will appear to move.
- d. Using an insulated tuning tool, adjust oscillator frequency adjustment (FREQ ADJUST on the 10811A/B) for minimum sideways movement of the oscilloscope pattern.
- e. By timing the sideways movement (divisions per second on the oscilloscope), the approximate offset can be determined based on the oscilloscope sweep speed shown in Figure 3-1.


f. For example, if the trace moves 1 division in 10 seconds and the sweep speed is 0.01  $\mu$ s/div., the oscillator's frequency is 1  $\times$  10-9 different from that of the reference frequency, as can be seen from the calibration, *Table 3-1*. The calculation can also be made by the following formula:

$$\frac{\Delta \text{ FREQUENCY}}{\text{FREQUENCY}} = \frac{\Delta \text{ TIME}}{\text{TIME}}$$

$$OR \qquad \frac{\Delta f}{f} = \frac{\Delta t}{t}$$

where  $\Delta f/f$  = offset of the oscillator with respect to the reference standard  $\Delta t$  = the movement of the oscilloscope pattern (1 div.  $\times$  .01  $\mu s/div.$ ) = .01,  $\mu s$  t = time required for  $\Delta t$  to occur.

$$\frac{\Delta f}{f} = \frac{1 \text{ div} \times 0.01 \text{ } \mu\text{s/div.}}{10 \text{ s}} = 1 \times 10^{-9}$$

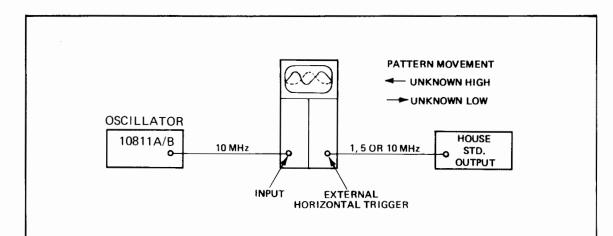

		SWEEP SPEED		
MOVEMENT	1 μs/cm	<b>0.1</b> μs/cm	0.01 μs/cm	NOTES
1 cm/s 1 cm/10s 1 cm/100 s	1 × 10-6 1 × 10-7 1 × 10-8	1 × 10-7 1 × 10-8 1 × 10-9		Time scope trace movement with second hand of watch or clock.

Sweep movement versus calibration accuracy.

Figure 3-1. Oscillator Adjustment Set-Up

# 3-10. ACCURACY VS ADJUSTMENT INTERVAL


3-11. Table 3-1 shows the required adjustment interval to maintain a required accuracy. If the aging rate is known to be  $3 \times 10^{-10}$ /day, then a more precise adjustment interval can be determined. (The specification for aging is <5  $\times 10^{-10}$ /day, but aging is typically less than this.) The aging rate can be expected to gradually decrease, and typically will reach  $1 \times 10^{-10}$ /day within 1-year.

#### Example:

- 3-12. Find the line on *Table 3-1* corresponding to the oscillator's aging rate. Then find the maximum allowable error (accuracy) on the horizontal axis. Follow the maximum allowable error vertically until it crosses the oscillator's known aging rate. Move horizontally to the left and read the minimum calibration interval in days.
- 3-13. From Table 3-1, the oscillator should be adjusted approximately every 17 days.
- 3-14. The minimum calibration interval may also be determined from the following formula:

$$\frac{\text{maximum allowable error}}{\text{known aging rate (per day)}} = \text{calibration interval in days}$$
 Example: 
$$\frac{5 \times 10^{-9} \text{ (maximum allowable error)}}{3 \times 10^{-10} \text{/day (known aging rate)}} = 16.67 \text{ days ($\sim$17 days)}$$

Table 3-1. Accuracy vs Adjustment

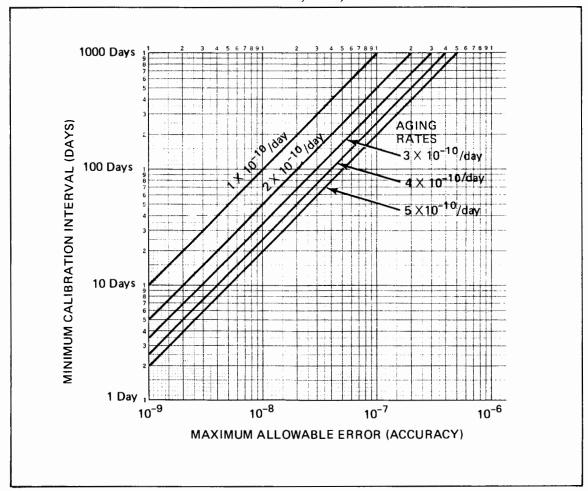

# SECTION IV OPERATIONAL VERIFICATION

#### 4-1. INTRODUCTION

4-2. The tables in this section test the instrument's performance using the specifications of Table 1-1 as the performance standards. All tests can be performed without access to the interior of the instrument.

#### 4-3. OPERATIONAL VERIFICATION

4-4. The Operational Verification, Table 4-2, can be performed to give a high degree of confidence that the 10811A/B is operating properly without performing the complete performance tests. The operational verification should be useful for incoming QA, routine maintenance, and after instrument repair.

### 4-5. EQUIPMENT REQUIRED

4-6. Equipment required for the operational verification is listed in the recommended test equipment in Section I, Table 1-4, and in Table 4-1. Any equipment that satisfies the critical specifications given in the table may be substituted for the recommended model(s).

#### 4-7. TEST RECORD

- 4-8. Results of the Operational Verification, *Table 4-2*, may be tabulated on the Operational Verification Record, *Table 4-4*.
- 4-9. If the 10811A/B Oscillator is to be tested outside its normal installation, a special test connector may be used for applying power to the oscillator. The connector also has a BNC connector for the 10 MHz output signal. A photo, parts list, and construction information is located in Section VIII. The connector should be used under the following circumstances:
  - If the 10 MHz output is not easily accessible.
  - b. If there is a buffer amplifier between the 10811A/B output and the oscillator output jack on the rear panel of the instrument.
  - c. Troubleshooting.
  - d. If testing of the oscillator in its normal installation causes erroneous measurements (e.g., fan noise, vibrations, noisy circuits, etc.). If in doubt, use the special test connector.
- 4-10. Table 4-1 lists the five sections of the operational verification and their descriptions.

Table 4-1. Operational Verification Descriptions

- 1. Amplitude (0.55 volts ( $\pm 0.05$  volts/50 $\Omega$ , 1 volt  $\pm 0.2$  volt/1 k $\Omega$ ).
  - A. Equipment required:

BNC-to-BNC Cable  $50\Omega$  and 1  $K\Omega$  Loads 3406A AC Voltmeter

- 2. Harmonic Distortion (-25 dB below 10 MHz output signal).
  - A. Equipment required:

141T Display Section 8553B Spectrum Analyzer — RF Section 8552B Spectrum Analyzer — IF Section BNC-to-BNC Cable

3. Spurious Signals — Signals unrelated to the 10 MHz output signal (-100 dB below the 10 MHz output signal).

#### NOTE

Due to the complexity of measuring signal 100 dB below a reference, this procedure will verify that no spurious signals exist greater than 65 dB below the normal 10 MHz output signal.

A. Equipment required:

141T Display Section 8553B Spectrum Analyzer — RF Section 8552B Spectrum Analyzer — IF Section BNC-to-BNC Cable

- 4. Short Term Stability (5  $\times$  10<sup>-12</sup> for 1-second averaging; 1  $\times$  10<sup>-11</sup> for 10811-60105).
  - A. Equipment required:

5065A Rubidium Vapor Frequency Standard 5061A Option 004, or 105A/B, See *Table 1-2* 

HP Model 5390A may be used in place of the following: 10830 A Mixer 5345A Electronic Frequency Counter with Option 011 9825A Calculator with 98210A and 98213A or 98214A or 98216A 98034A HP-IB Interface

10515A Doubler 6-Plug AC Power Strip 3 BNC-to-BNC Cables

- 5. Long Term Stability  $< 5 \times 10^{-10}$  over 24 hours;  $1.5 \times 10^{-9}/24$  hours for 10811-60105.
  - A. Equipment required:

HP 1740A 100 MHz Oscilloscope, 105A/B Quartz Crystal Oscillator, 5065A Rubidium Frequency Standard, or 5061A Cesium Beam Frequency Standard. See *Table 1-2*.

4-11. In the following tests, the power suply voltages to the oscillator are not shown. They are assumed to be:

4-12. Any supply voltages within the specified limits listed in *Table 1-1* may be used and will not affect the operational verification. The voltages are only reference points and are used throughout this manual.

#### 1. Amplitude Test

#### Procedure:

- a. Set the 3406A Voltmeter to the 1-volt range.
- b. Insert the 3406A Voltmeter probe into the 1-volt jack on the front panel.
- c. With the CAL button out, set the 3406A to zero by adjusting the ZERO control on the front panel.
- d. Press the CAL button and adjust the 3406A to read 1V by adjusting the CALI-BRATE control on the front panel.
- e. Remove the probe from the 1-volt jack and connect to the 10811A/B output through a 50 ohm termination.
- f. Verify an amplitude of 0.55 volts  $\pm 0.05$  volts. Mark the test card.
- g. Remove the  $50\Omega$  termination and replace with a 1 k $\Omega$  termination.
- h. Verify an amplitude of 1-volt  $\pm 0.2$ -volt.

#### 2. Harmonic Distortion

a. Set 141T Spectrum Analyzer controls to:

TUNING STABILIZER OFF
BANDWIDTH 30 kHz
SCAN WIDTH per Division 5 MHz/div.
INPUT ATTENUATION 50 dB
VIDEO FILTER OFF
SCAN TIME 10 ms/div.
SCAN MODE INT
CCAN TRICCER
SCAN TRIGGER AUTO
LOG REF LEVEL

- b. Connect the output of the 10811A/B to the spectrum analyzer input.
- c. Apply power to the oscillator and spectrum analyzer. Allow 10 minutes for oscillator to stabilize.
- d. Adjust Spectrum Analyzer FREQUENCY control so that 10 MHz signal is at left-edge of display (center frequency, approximately 35 MHz).
- e. Adjust LOG REF LEVEL vernier control (right hand knob) so that 10 MHz signal is at top of display graticule. Verify that all harmonics of the 10 MHz signal are more than 25 dB down. Leave spectrum analyzer connected for next test.

#### 3. Spurious Output Signals

- a. Use the test setup as described in Test 2.
- b. Set the Spectrum Analyzer controls to:

- c. Adjust FREQUENCY so 10 MHz signal is at center of display. Adjust LOG REF LEVEL so signal is at top of graticule.
- d. Set TUNING STABILIZER switch "on" (up) and reset Spectrum Analyzer controls as follows:

BANDWIDTH	.03 kHz (30 Hz)
SCAN WIDTH	5 kHz
SCAN TIME	10 s/div.

Table 4-2. Operational Verification Procedure (Continued)

- e. Set INTENSITY and PERSISTENCE controls for an easily readable display at the 10 s scan time.
- f. Verify that there are no repeating signals above a level 65 dB below the 10 MHz signal (i.e., no signals between -64 dB and 0 dB). Allow the analyzer to sweep through several times to verify that no signals repeat on successive sweeps. Signals greater than -65 dB indicate possible spurious signals on 10811A/B output. Be sure there is no other equipment nearby that could be radiating signals into the measurement. Be sure power supplies meet noise specifications as described in *Table 1-1*.
- 4. Short-Term Stability


#### NOTE

If the model 5390A frequency stability analyzer is available it should be used in place of the text described below. Follow instructions in the 5390A operating manual to make measurement.

a. Connect the equipment as follows:

#### NOTE

Arrange the instruments as shown. Keep all signal leads away from power cords and HP-IB cable. DO NOT FORGET THE 10515A DOUBLER ON THE 5065A OUTPUT. Connect all ac power to the same strip so that all ground paths are as short as possible. DO NOT STACK THE INSTRUMENTS. Use coax for all signal leads.

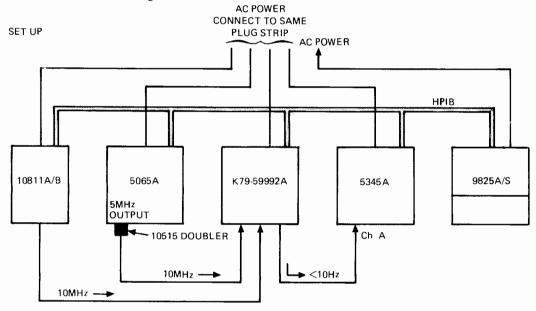

b. Set the 5345A address to 18:

- c. Allow 1-hour warmup to stabilize the test equipment and the 10811A/B.
- d. Set the 5345A front panel controls as follows:

FUNCTION FREQ	Α
GATE TIME 1	S
SAMPLE RATE max (ccv	
GATE CONTROL INPUT (REAR PANEL) INTERNA	١L
A LEVEL PRESE	Τ
B LEVEL PRESE	Τ
A IMPEDANCE 50 ohr	m
B IMPEDANCE 50 ohi	m
A ATTENUATOR X	1
B ATTENUATOR X	1

#### Table 4-2. Operational Verification Procedure (Continued)

A COUPLING	DC
B COUPLING	DC
A SLOPE	+
B SLOPE	+
CHECK/COM/SEP	SEP

e. Adjust the 10811A/B to read ≈9.5 Hz (reading must be less than 10 Hz).

#### NOTE

The display on the 5345A should be changing only in the .001 Hz or .0001 Hz digits. This represents frequency deviations of parts in 1011 and 1012, respectively.

- f. Type the program from Figure 4-1 into the 9835A calculator. (See paragraph 4-13 for use of other controllers and counters.)
- g. Press "RUN". When the program asks for the number of samples, enter "100" and press CONTINUE.
- h. Allow 2 to 3 minutes for the program to finish. Verify a short-term stability of less than  $5\times 10^{-12}$ .

#### NOTE

Measurement of short-term stability is somewhat difficult and exacting. If the 10811A/B fails this test, be sure no signal sources other than the test reference are operating near the measurement system, as these can cause interference with the measurement. Other sources of error are vibration, nearby electrical equipment, poor shielding, or motors that can radiate signals into the 10811A/B. The failure to connect the EFC input (to ground) can cause poor frequency stability as can a noisy voltage being used for the EFC control. If another oscillator is available (known to be good), verify the accuracy of the measurement system. This could save considerable troubleshooting time.

Two other possibilities external to the oscillator are the oven and oscillator power supplies. These must be stable in order for the circuits to function properly. See *Table 1-1*, Specifications, and paragraph 2-6 for power supply noise requirements.

5. Long-Term Stability

#### NOTE

The 10811A/B will typically take 24 to 48 hours to reach its specified aging rate after storage or shipment. In some cases, if extreme environmental conditions were encountered during storage, the 10811A/B could take up to 1-week to achieve its specified aging rate.

- a. Connect reference frequency standard (multiple or submultiple of 10 MHz) to the EXTERNAL SYNC INPUT of the oscilloscope.
- b. Connect the output of the 10811A/B to CHANNEL A INPUT. Adjust sweep speed to  $0.1~\mu s/div$ .
- c. Set oscilloscope to EXTERNAL TRIGGER and adjust it so that its sweep is synchronized with the reference frequency. The oscilloscope pattern will probably be moving.
- d. Carefully adjust oscillator frequency control so that pattern on oscilloscope stops. Use a higher sweep speed on oscilloscope for better resolution.
- e. When the oscillator is adjusted as close as possible to frequency, measure the frequency as described in paragraph 5-13.
- f. Allow the oscillator to remain undisturbed for 48 hours, then again measure the frequency. The difference between the frequency measured in step e and that measured in this step is the aging rate per 48 hours and should be less than  $1 \times 10^{-9}$ . The measurement is allowed to run for 48 hours so that the frequency offset measured will be well in excess of the system resolution. In many cases the daily aging rate of  $<5 \times 10^{-10}$  per day can be verified in 24 hours.

```
j. (i
     ! Short term stability test 10811A/B
20
     INPUT "Enter number of samples", Samples
30
     t,oop≈0-
     OUTPUT 7.18; "12E1<:812" !5345A Codes
40
50
     ENTER 7.18;A !Empty dummy buffer
     ENTER 7,18:A
60
                     *First measurement
70
     Count=0
80
     FOR Loop=1 TO Samples
90
     ENTER 7,18,8 !Successive measurements
100
     Count≔Count+(A-B)^2
1.10
     A=B
120
     FIXED 0
130
     DISP Loop
140
     NEXT Loop
     PRINTER IS 0
150
160
     FLOAT 1
     PRINT "STS=";SQR(Count/(2*Loop))/1E7
120
     GOTO 50
180
190
     STOP
```

Figure 4-1. BASIC Program

#### 4-13. OPTIONAL CONTROLLERS AND COUNTERS

#### 4-14. Optional Controllers

4-15. Figure 4-2 lists the program for the 9825A Calculator.

```
i: "Short term stability test 10811A/B":
2: "100 Samples is standard value":ent "Enter number of samples", S
4: "5345A Codes": wrt 718, "I2E1<:812"
5: "Emoty dummy buffer":red 718,A
6: "First measurement": red 718,A
7:030
8: for L=1 to S
9: "Successive measurements":red 718,B
10: C+(A-B)^23C
11: B)A
12: fxd 0
13: dsp L
14: next L
15:
16: flt 1
17: "Short term stability formula":prt "STS=",SQR(C/(2*L))/1e7
18: ato 5
19: stp
```

Figure 4-2. HPL Program

# 4-16. Optional Counters

4-17. Table 4-3 shows the program codes set required when using the 5316A counter. Replace line 4 (HPL) or line 40 (BASIC) with the appropriate codes. Be sure the optional counter address is set to "18".

5316A (gate time must be set manually to 1 s on the front panel)
Table 4-3. 5316A Program Codes
INTRIATOGANWAIRE

Table 4-4. Operational Verification Record

10811A 🗆 10811B 🗆	Date		
Serial Number			
TEST	VALUE	PASS	FAIL
1. Output Amplitude			
2. Harmonic Distortion			
3. Spurious Signals			
4. Short-Term Stability @ $ au$ =1-second			
5. Long-Term Stability			<del></del>
Name			

# SECTION V ADJUSTMENTS

#### 5-1. INTRODUCTION

5-2. This section describes the adjustments required to maintain the 10811A/B operating characteristics within specifications. Adjustments should be made when required, such as after a performance test failure or when components are replaced that may affect an adjustment.

# 5-3. EQUIPMENT REQUIRED

5-4. The test equipment required for the adjustment procedure is listed in *Table 1-2*, Recommended Test Equipment. Substitute instruments may be used if they meet the critical specifications.

#### 5-5. FACTORY SELECTED COMPONENTS

5-6. Some of the values in the parts lists are selected during manufacturing to meet circuit requirements. These parts are marked with an asterisk (\*) in the parts list and schematic diagrams, with average value shown.

# 5-7. ADJUSTMENT LOCATION

5-8. Adjustment locations are identified in this section and in the component locators in Section VIII, Schematic Diagrams.

#### 5-9. SAFETY CONSIDERATIONS

5-10. This section contains warnings and cautions that must be followed for your protection and to avoid damage to the equipment.

# WARNING

MAINTENANCE DESCRIBED HEREIN IS PERFORMED WITH POWER SUPPLIED TO THE INSTRUMENT, AND PROTECTIVE COVERS REMOVED. SUCH MAINTENANCE SHOULD BE PERFORMED ONLY BY SERVICE-TRAINED PERSONNEL WHO ARE AWARE OF THE HAZARDS INVOLVED (FOR EXAMPLE, FIRE AND ELECTRICAL SHOCK). WHERE MAINTENANCE CAN BE PERFORMED WITHOUT POWER APPLIED, THE POWER SHOULD BE REMOVED.

BEFORE ANY REPAIR IS COMPLETED, ENSURE THAT ALL SAFETY FEATURES ARE INTACT AND FUNCTIONING, AND THAT ALL NECESSARY PARTS ARE CONNECTED TO THEIR PROTECTIVE GROUNDING MEANS.

# 5-11. OSCILLATOR FREQUENCY ADJUSTMENT

- 5-12. The following frequency adjustment procedure is the same for both the 10811A and 10811B. Allow the oscillator to warm up for 24 hours before making this adjustment. See Figure 5-1.
  - a. Connect reference frequency standard (multiple or submultiple of 10 MHz) to the EXTERNAL SYNC INPUT of the oscilloscope. Adjust oscilloscope so that sweep is synchronized with reference frequency.

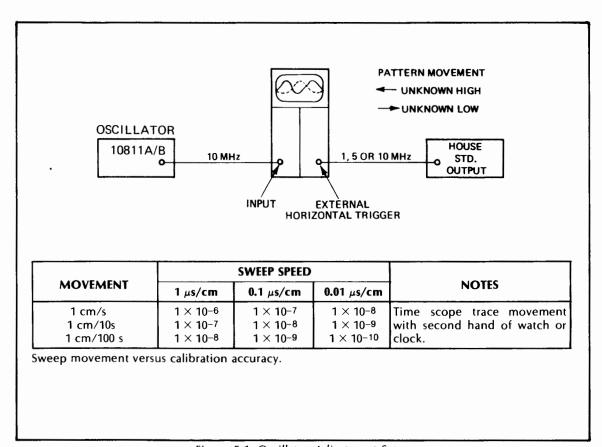


Figure 5-1. Oscillator Adjustment Setup

- b. Connect oscillator output to Channel A of the oscilloscope. Adjust sweep speed so pattern movement can be seen.
- c. Adjust oscillator frequency adjustment (FREQ ADJ on 10811A/B Crystal Oscillator unit) for minimum sideways movement of the 10 MHz displayed signal. Increase oscilloscope sweep speed for greater resolution.

#### 5-13. Offset Calculation:

- a. By timing the sideways movement (divisions per second on the oscilloscope), the approximate offset can be determined based on the oscilloscope sweep speed as shown below.
- b. For example, if the trace moves 5 divisions in 10 seconds and the sweep speed is 0.01  $\mu$ s/div., the oscillators signal is within 5  $\times$  10-9 of the reference frequency. The calculation can also be made as follows:

$$\frac{\Delta f}{f} = \frac{\Delta t}{t}$$

$$\frac{\Delta f}{f} = \frac{5 \times 0.01 \ \mu \text{s/div.}}{10 \ \text{s}} = 5 \times 10^{-9}$$

Where:

 $\frac{\Delta f}{f}$  is the normalized frequency difference between the 10811A/B and the reference signal  $\Delta t$  is the change observed in the oscilloscope t is the time required for  $\Delta t$  to occur.

### 5-14. OUTPUT AMPLITUDE ADJUSTMENT

5-15. The output amplitude is adjusted by the setting of the variable resistor R6 which is in the feedback of the AGC circuitry. It is not accessible from the outside of the oscillator.

5-16. The following procedure should be used to adjust the output amplitude only if the output level falls outside the specified level, or repairs have been made to the main oscillator or AGC circuitry.

1. Remove oscillator from instrument.

# WARNING

THE OSCILLATOR'S INTERNAL OVEN MASS TEMPERATURE MAY BE AS HIGH AS 85°C (185°F). TO AVOID SERIOUS BURNS DO NOT REMOVE OSCILLATOR CIRCUITS AND/OR OVEN MASS ASSEMBLY FROM THE OUTER HOUSING UNTIL THE OSCILLATOR HAS SUFFICIENTLY COOLED (APPROXIMATELY 1 HOUR WITH BOTTOM COVER AND FOAM INSULATOR REMOVED). THE OUTER HOUSING TEMPERATURE IS NOT A RELIABLE INDICATION OF THE INTERNAL TEMPERATURE.

- Remove bottom cover and allow oscillator to cool (if previously operated). To remove cover:
  - a. For the 10811A, remove the three screws securing the bottom cover. Remove the two screws securing the P.C. edge connector to the outer can. Remove the top foam insulator to expose the oscillator circuits.

# CAUTION

DO NOT pull the oscillator out of the outer housing by pulling on the P.C. edge connector or flex circuit!!

- b. For the 10811B remove the four screws securing the bottom cover. Disconnect the bottom cover flex circuit from the seven pin connector.
- Once the oscillator is cool enough to handle, remove the oscillator assembly by pushing on the tuning capacitor (top of oscillator) with a long, small diameter tool until the oscillator assembly can be removed freely.

#### NOTE

Under no circumstances should the oven circuit be operated with the oven mass removed from the outer housing. To do so will cause damage to components inside the oven mass.

 Obtain HP Model 6215A Power Supply or equivalent. Preset power supply to 12V dc. Turn off power supply before proceeding to next step.

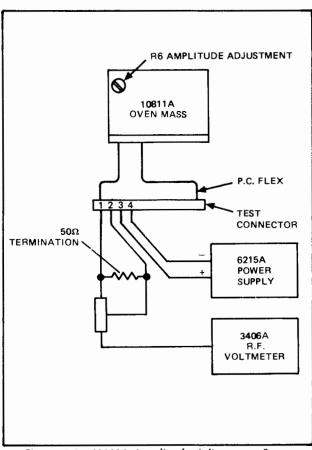


Figure 5-2. 10811A Amplitude Adjustment Set-up

- 5. For the 10811A, connect Model 6215A Power Supply to pins 2 (-) and 3 (+) of a 15 pin printed circuit connector.
  - a. Insert the 10811A P.C. edge connector into the 15 pin P.C. connector. (See Section VIII for a special 10811A test connector.)
  - b. Connect pin 1 of the 15 pin pc connector through a 50Ω termination (use pin 2 as ground) to a 3406A Sampling Voltmeter. See Figure 5-2. Do not apply power to the oven circuits.
- For the 10811B, reconnect the flex circuit attached to the bottom cover and connect the 6215A as shown in Figure 5-3. DO NOT APPLY POWER TO THE OVEN CIRCUITS.
   A Micon to BNC adaptor is available for the 10 MHz output (HP Part Number 05060-6116).
- 7. For both 10811A and B, turn on the 6215A power supply and adjust R6 AGC control for .55V rms ±50 mV as read on the 3406A Sampling Voltmeter. R6 is accessible through the small hole in the side of the oven mass.
- 8. Turn off the 6215A power supply and reassemble the oscillator.

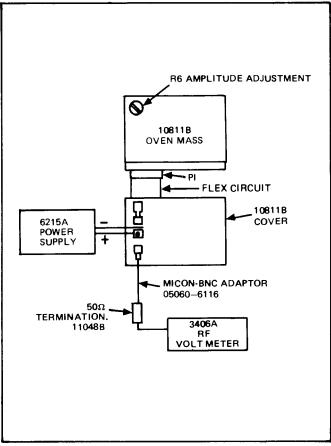


Figure 5-3. 10811B Amplitude Adjustment Set-up

# SECTION VI REPLACEABLE PARTS

#### 6-1. INTRODUCTION

- 6-2. This section contains information for ordering replacement parts. *Table 6-1* lists parts in alphanumerical order of their reference designators and indicates the description and HP Part Number of each part, together with any applicable notes. The table includes the following information.
  - a. Description of part (see abbreviations below).
  - b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in *Table* 6-2.
  - c. Manufacturer's part number.
  - d. Total quantity used in the instrument (Qty column).

#### 6-3. ORDERING INFORMATION

- 6-4. To obtain replacement parts, address order of inquiry to your local Hewlett-Packard Sales and Service Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard part numbers.
  - a. Instrument model number.
  - b. Instrument serial number.
  - c. Description of the part.
  - d. Function and location of the part.
  - e. Check digit.
  - f. Quantity required.

#### 6-5. HP PART NUMBER ORGANIZATION

6-6. The following is a general description of the HP part number system.

# 6-7. Component Parts and Materials

6-8. Generally, the prefix of HP part numbers identifies the type of device. Eight-digit part numbers are used, where the four-digit prefix identifies the type of component, part, or material and the four-digit suffix indicates the specific type. Following is a list of some of the more commonly used prefixes for component parts. The list includes HP manufactured parts and purchased parts.

Prefix	Component/Part/Material
0121-	Capacitors, Variable (mechanical)
0122-	Capacitors, Voltage Variable (semiconductor)
0140-	Capacitors, Fixed
0150-	Capacitors, Fixed, Non-Electrolytic
0160-	Capacitors, Fixed
0180-	Capacitors, Fixed Electrolytic
0330-	Insulating Materials
0340-	Insulators, Formed
0370-	Knobs, Control
0380-	Crystals
0470-	Adhesives
0490-	Relays
0510-	Fasteners
0674- through 0778-	Resistors, Fixed (non wire wound)
0811- through 0831-	Resistors (wire wound)
1200-	Sockets for components
1205-	Heat Sinks
1250-	Connectors (RF and related parts)
1251-	Connectors (non RF and related parts)
1410-	Bearings and Bushings
1420-	Batteries
1820-	Monolithic Digital Integrated Circuits
1826-	Monolithic Linear Integrated Circuits
1850-	Transistors, Germanium PNP
1851-	Transistors, Germanium NPN
1853-	Transistors, Silicon PNP
1854-	Transistors, Silicon NPN
1855-	Field-Effect-Transistors
1900- through 1912-	Diodes
1920- through 1952-	Vacuum Tubes
1990-	Semiconductor Photosensitive and Light-emitting Diodes
3100- through 3106-	Switches
8120-	Cables
9100-	Transformers, Coils, Chokes, Inductors, and Filters

6-9. For example, 1854-0037, 1854-0221 and 1851-0192 are all NPN transistors. The first two are silicon and the last is germanium.

# 6-10. GENERAL USAGE PARTS

6-11. The following list gives the prefixes for HP manufactured parts used in several instruments, e.g., side frames, feet, top and bottom covers, etc. These are eight-digit part numbers with the four-digit prefix identifying the type of parts as shown below:

Type of Part	Prefix
Sheet Metal	5000- to 5019-
Machined	5020- to 5039-
Molded	5040- to 5059-
Assemblies	5060- to 5079-
Components	5080- to 5099-

# 6-12. Specific Instrument Parts

6-13. These are HP manufactured parts for use in individual instruments or series of instruments. For these parts, the prefix indicates the instrument and the suffix indicates the type of part. For example, 05328-60001 is an assembly used in the 5328A. Following is a list of suffixes commonly used.

Type of Part	P/N Suffix
Sheet Metal	-00000 to -00499
Machined	-20000 to -20499
Molded	-40000 to -40499
Assembly	-60000 to -60499
Component	-80000 to -80299
Documentation	-90000 to -90249

## 6-14. Factory Selected Parts

- 6-15. Some of the values in the parts lists are selected during manufacture to meet circuit requirements. These parts are marked with an asterisk (\*) in the parts list and schematic diagrams, with average values shown.
- 6-16. The 10811A/B Oscillator contains only one factory selected part which is R20 OVEN TEMPERATURE SET resistor. This resistor is supplied with the crystal, should the crystal require replacement. *Table 8-1* lists the various resistors and their corresponding part numbers.

## 6-20. REPLACEABLE PARTS LIST LAYOUT

- 6-21. The 10811A and 10811B Oscillators are identical internally, except that the 10811B has had the 15-pin pc edge connector removed and a 7-pin connector (J1) placed on the board for the 10811B bottom cover flex circuit (see Figure 8-15). The only other difference is the outer housings. Thus the parts lists for the circuit boards are identical. The parts lists are set up in the following manner:
  - 1. 10811A and 10811B Circuit Board Components and Miscellaneous Parts.
  - 10811A and 10811B Transistor Mounting Hardware.
  - 10811A and 10811B Oven Mass Assembly and covers.
  - 4. 10811A Mechanical Parts (Housing).
  - 5. 10811B Mechanical Parts (Housing).

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
	10811-60001	3	1	CIRCUIT BOARD COMPONENTS 10811A/B	28480	10811-60001
C1 C2 C3 C4 C5	0121-0511 0160-0576 0160-5109 0160-0576 0160-0576	65055	! 11 1	TUNING CAPACITOR  CAPACITOR-FXD .1UF +-20% 50VDC CER  CAPACITOR-FXD 15PF +-5% 50VDC CER 0+-30  CAPACITOR-FXD .1UF +-20% 50VDC CER  CAPACITOR-FXD .1UF +-20% 50VDC CER	28480 28480 28480 28480	0121-0511 0160-0576 0160-5109 0160-0576 0160-0576
C6 C7 C8 C9 C10	0160-4935 0160-0576 0160-5110 0160-0576 0160-3874	8 5 3 5 2	1 1 2	CAPACITOR-FXD 510PF +-1% 100VDC CER CAPACITOR-FXD .1UF +-20% 50VDC CER CAPACITOR-FXD .2PF +-1% 50VDC CER CAPACITOR-FXD .1UF +-20% 50VDC CER CAPACITOR-FXD 10PF +5PF 200VDC CER	72982 28480 28480 28480 28480	8121=100-C0G0=511F 0160-0576 0160-5110 0160-0576 0160-3874
C11 C12 C13 C14 C15	0160-0576 0160-4512 0160-3879 0160-0576 0180-2617	5 7 7 5 1	2 3	CAPACITOR-FXD .1UF +-20x 50VDC CER CAPACITOR-FXD 120PF +-5x 200VDC CER CAPACITOR-FXD .01UF +-20x 100VDC CER CAPACITOR-FXD .1UF +-20x 50VDC CER CAPACITOR-FXD 6.8UF+-10x 35VDC TA	28480 51642 28480 28480 25088	0160-0576 200-200-NP0-121J 0160-3879 0160-0576 D6R86818355K
C16 C17 C18 C19 C20	0160-0576 0160-3874 0160-4947 0160-3879 0160-3879	5 2 7 7	1	CAPACITOR-FXD .1UF +=20% 50VOC CER CAPACITOR-FXD 10PF +=.5PF 200VOC CER CAPACITOR-FXD .01UF +=20% 100VDC CER CAPACITOP-FXD .01UF +=20% 100VDC CER	28480 28480 28480 28480	0160-0576 0160-3874 0160-4947 0160-3879 0160-3879
C21 C22 C23 C24	0160-0576 0160-0576 0160-4512 0160-0576	5 7 5		CAPACITOR=FXD .1UF +-20% 50VDC CER CAPACITOR-FXD .1UF +-20% 50VDC CER CAPACITOR-FXD 120PF +-5% 200VDC CER CAPACITOR-FXD .1UF +-20% 50VDC CER	28480 28480 51642 28480	0160-0576 0160-0576 200-200-NP0-121J 0160-0576
CR1 CR2 CR3 CR4 CR5	0122-0244 1901-0869 1902-0984 1901-0535	42499	1 1 1 3	DIODE-VVC 100PF 5% C4/C25-MIN=2 BVR=30V DIODE-CUP RGLTR 1N5297 DO-7 DIODE-XNR 6,4V 2% DD-7 PD=,4W TC=+,002% DIODE-SCHOTTKY	28480 04713 28480 28480 28480	0122-0244 1N5297 1902-0984 1901-0535 1901-0535
CR6 E1 F1	1901-0535 9170-0029 2110-0617	6	1 1	DIODE-SCHOTTKY FERRITE BEAD (FOR Q1) FUSE-THERMAL	28480 28480 28480	1901-0535 9170-0029 2110-0617
L1 L2 L3 L4	9100-2280 9140-0352 9140-0353 9100-2276 9100-2280	5 2 3 9 5	5 1 1	INDUCTORRE-CH-MLD 220UH 10% .1050%.26LG INDUCTORPE-CH-MLD 330HH 1% .1050%.26LG INDUCTORPE-CH-MLD 430HM 1% .1050%.26LG INDUCTORPE-CH-MLD 100UH 10% .1050%.26LG INDUCTORRE-CH-MLD 220UH 10% .1050%.26LG	26480 28460 28460 28480 28480	9100=2280 9140=0352 9140=0353 9100=2276 9100=2280
L6 L7 L8	9100-2280 9100-2280 9100-2280	5 5 5		INDUCTORRF-CH-MLD 220UH 10% .105DX.26LG INDUCTORRF-CH-MLD 220UH 10% .105DX.26LG INDUCTORRF-CH-MLD 220UH 10% .105DX.26LG	28480 28480 28480	9100-2280 9100-2280 9100-2280
01 02 03 04 05	1854-0853 1854-0853 1854-0853 1854-0831 1854-0831	3 3 7 7	3	TRANSISTOR, SPL 2N5179 TRANSISTOR, SPL 2N5179 TRANSISTOR, SPL 2N5179 TRANSISTOR NPN 2N64294 TO=92 PD=625MW TRANSISTOR NPN 2N64294 TO=92 PD=625MW	28480 28480 28480 04713 04713	1854-0853 1854-0853 1854-0853 2N64294 2N64294
96 97 98 99	1854-0023 10811-80001 10811-80001 1854-0833	9 0 0 9	1 2 1	TRANSISTOR NPN SI TO-18 PD=360MH TRANSISTOR NPN SI DARL TO-220AP PD=70M TRANSISTOR NPN SI DARL TO-220AB PD=70M TRANSISTOR NPN PD=600MM FT=600MMZ	28480 04713 04713 28480	1854=0023 10811-80001 10811-80001 1854=0833
R1 R2 R3 R4 R5	0698-7284 0698-7284 0699-0073 0699-0073 0698-7263	5 5 8 8 0	5 2 1	RESISTOR 100K 1% .05W F TC=0+-100 RESISTOR 100K 1% .05W F TC=0+-100 RESISTOR 10M 1% .125W F TC=0+-100 RESISTOR 10M 1% .125W F TC=0+-100 RESISTOR 13.3K 1% .05W F TC=0+-100	24546 24546 28480 28480 24546	C3-1/8-T0-1003-G C3-1/8-T0-1003-G 0699-0073 0699-0073 C3-1/8-T0-1332-G
R6 R7 R8 R9 R10	2100-2489 0698-7272 0698-7232 0698-7256 0698-7256	9 1 3 1	1 1 2	RESISTOR=TRMR 5K 10% C SIDE=ADJ 1=TRN RESISTOR 31.6K 1% .05W F TC=0+=100 RESISTOR 681 1% .05W F TC=0+=100 RESISTOR 6.81K 1% .05W F TC=0+=100 RESISTOR 6.81K 1% .05W F TC=0+=100	30983 24546 24546 24546 24546	ET50x502 C3-1/8-T0-3102-G C3-1/8-T0-068R-G C3-1/8-T0-0611-G C3-1/8-T0-0611-G
R11 R12 R13 R14 R15	0698=7244 0698=7261 0698=7224 0698=7280 0698=7284	7 8 3 1 5	1 1	RESISTOR 2.15K 1% .05W F TC=0+=100 RESISTOR 11K 1% .05W F TC=0+=100 RESISTOR 316 1% .05W F TC=0+=100 RESISTOR 68.1K 1% .05W F TC=0+=100 RESISTOR 100K 1% .05W F TC=0+=100	24546 24546 24546 24546 24546	C3-1/8-T0-2151-G C3-1/8-T0-1102-G C3-1/8-T0-10316R-G C3-1/8-T0-6012-G C3-1/8-T0-1003-G
R16 R17 R18 R19 R20* R20*	0698-7235 0698-7260 0698-3903 0698-3903 0698-3096 0698-3495 0698-3512	6 7 7 7 3 2	2 5 1 1	RESISTOR 909 1% .05W F TC=0+-100 RESISTOR 10K 1% .05W F TC=0+-100 RESISTOR 8.6K .1% .05W F TC=0+-10 RESISTOR 8.6K .1% .05W F TC=0+-10 RESISTOR 966 1% .125W F TC=0+-100 RESISTOR 866 1% .125W F TC=0+-100 RESISTOR 1.18K 1% .125W F TC=0+-100	24546 24546 28480 03888 24546 24546	C3-1/8-T0-909R-G C3-1/8-T0-1002-G 0698-3903 0698-3903 PME55-1/8-T0-9680-F C4-1/8-T0-866R-F C4-1/8-T0-1181-F

Table 6-1. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C	Qty	Description	Mfr Code	Mfr Part Number
R 20 * R	0.698-3700 0.698-4014 0.698-4196 0.698-4465 0.698-4465 0.698-4465 0.698-6970 0.698-6971 0.698-6971 0.698-7207 0.698-7217 0.698-7217 0.698-7217 0.698-7217 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7220 0.698-7231 0.698-7231 0.698-7233 0.698-7235 0.698-7235	23238294776291469123456781234567	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	RESISTOR 715 1% .125W F TC=0+-100 RESISTOR 787 1% .125W F TC=0+-100 RESISTOR 1.07K 1% .125W F TC=0+-100 RESISTOR 649 1% .125W F TC=0+-100 RESISTOR 931 1% .125W F TC=0+-100 RESISTOR 931 1% .125W F TC=0+-100 RESISTOR 1.5K 1% .125W F TC=0+-100 RESISTOR 1.5K 1% .125W F TC=0+-100 RESISTOR 1.04K .5% .125W F TC=0+-50 RESISTOR 1.24K .5% .125W F TC=0+-50 RESISTOR 1.25K .5% .125W F TC=0+-50 RESISTOR 10.2 1% .05W F TC=0+-100 RESISTOR 10.1 1% .05W F TC=0+-100 RESISTOR 10.1 1% .05W F TC=0+-100 RESISTOR 10.1 1% .05W F TC=0+-100 RESISTOR 121 1% .05W F TC=0+-100 RESISTOR 121 1% .05W F TC=0+-100 RESISTOR 261 1% .05W F TC=0+-100 RESISTOR 363 1% .05W F TC=0+-100 RESISTOR 361 1% .05W F TC=0+-100 RESISTOR 363 1% .05W F TC=0+-100 RESISTOR 365 1% .05W F TC=0+-100 RESISTOR 367 1% .05W F TC=0+-100	24546 24546	C4-1/8-T0-715R-F C4-1/8-T0-787R-F C4-1/8-T0-1071-F C4-1/8-T0-1071-F C4-1/8-T0-949R-F C4-1/8-T0-91151-F C4-1/8-T0-1151-F C4-1/8-T0-1151-F C4-1/8-T0-1151-F C4-1/8-T0-108-F 0698-6973 0798-698-6 C3-1/8-T0-18-18-6 C3-1/8-T0-215R-6 C3-1/8-T0-316R-6 C3-1/8-T0-316R-6 C3-1/8-T0-316R-6 C3-1/8-T0-316R-6 C3-1/8-T0-316R-6 C3-1/8-T0-442R-6 C3-1/8-T0-442R-6 C3-1/8-T0-511R-6 C3-1/8-T0-511R-6 C3-1/8-T0-511R-6 C3-1/8-T0-562R-6 C3-1/8-T0-563R-6 C3-1/8-T0-681R-6 C3-1/8-T0-681R-6 C3-1/8-T0-581R-6 C3-1/8-T0-681R-6 C3-1/8-T0-681R-6 C3-1/8-T0-681R-6 C3-1/8-T0-681R-6 C3-1/8-T0-8825R-6 C3-1/8-T0-825R-6 C3-1/8-T0-825R-6 C3-1/8-T0-825R-6 C3-1/8-T0-909R-6 C3-1/8-T0-909R-6 C3-1/8-T0-909R-6 C3-1/8-T0-909R-6 C3-1/8-T0-909R-6 C3-1/8-T0-909R-6 C3-1/8-T0-1001-6
R20* R20* R20* R20* R20* R22 R23 R23	0698-7237 0698-7238 0698-7239 0757-1100 0698-3903 0698-8827 0698-8827 0699-007	8908 74462	2	RESISTOR 1.1K 1x .05W F TC=0+-100 RESISTOR 1.21K 1x .05W F TC=0+-100 RESISTOR 1.31K 1x .05W F TC=0+-100 RESISTOR 600 1x .125W F TC=0+-100 RESISTOR 606 1x .05W F TC=0+-100 RESISTOR 1M 1x .125W F TC=0+-100 RESISTOR 1M 1x .125W F TC=0+-100 RESISTOR 4.64M 1x .125W F TC=0+-100 RESISTOR 34.64M 1x .125W F TC=0+-100 RESISTOR 34.64M 1x .05W F TC=0+-100 RESISTOR 34.64M 1x .05W F TC=0+-100	24546 24546 24546 24546 26480 26480 26480 26480 28480	C3-1/8-T0-1101-G C3-1/8-T0-1211-G C3-1/8-T0-1331-G C4-1/8-T0-601-F 0698-3903 0698-8827 0698-8827 0698-8827 0698-8827 0698-8827
R26 R27 R28 R29 R30	0698-3903 0698-3903 0698-7265 0698-7260 0698-7267	7 7 2 7 4	1 1	RESISTOR 8.6K .1% .05W F TC=0+=10 RESISTOR 8.6K .1% .05W F TC=0+=10 RESISTOR 10.2K 1% .05W F TC=0+=100 RESISTOR 10K 1% .05W F TC=0+=100 RESISTOR 19.6K 1% .05W F TC=0+=100	28480 28480 24546 24546 24546	0698-3903 0698-3903 C3-1/8-T0-1622-G C3-1/8-T0-1002-G C3-1/8-T0-1962-G
R31 R32 R33 R34 R35	0698-7220 0698-7250 0698-7284 0698-7247 0698-7250	9 5 5 0 5	<b>2</b> 1	RESISTOR 215 1% 05W F TC=0+-100 RESISTOR 3.83K 1% 05W F TC=0+-100 RESISTOR 100K 1% 05W F TC=0+-100 RESISTOR 2.87K 1% 05W F TC=0+-100 RESISTOR 3.83K 1% 05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-215R-G C3-1/8-T0-3831-G C3-1/8-T0-1003-G C3-1/8-T0-2871-G C3-1/8-T0-3831-G
R36 R37 R38 R39 R40	0698-7284 0698-7232 0698-8812 0698-8812 0698-7229	5 7 7 8	2	RESISTOR 100K 1X .05W F TC=0+-100 RESISTOR 661 1X .05W F TC=0+-100 RESISTOR 1 1X .125W F TC=0+-100 RESISTOR 1 1X .125W F TC=0+-100 RESISTOR 511 1X .05W F TC=0+-100	24546 24546 28480 28480 24546	C3-1/8-T0-1003-G C3-1/8-T0-681R-G 0698-8812 0698-8812 C3-1/8-T0-511R-G
R41 R42	0698-7215 0698-7232	3	1	RESISTOR 133 1% .05W F TC=0+-100 RESISTOR 681 1% .05W F TC=0+-100	24546	C3-1/8-T0-133R-G C3-1/8-T0-681R-G
T1   U1	9100-0423	2	1	TRANSFORMER RF; WIND OT PRI & 3T SEC	28480 27014	9100-0423 LM2904N
N3 N5	1826-0316 1826-0072	9	ì	V REF TO-5 IC OP AMP LOW-BIA8-H-IMPD TO-99	27014 07263	LH0070=1H UA208H
XF1 Y1	1251-1556 10811-60108	7 7	1	CONNECTOR-SGL CONT SKT .018-IN-8SC-SZ  CRYSTAL-10MHZ W/R20 TEMP SET (REPAIR ONLY)	28480 28480	1251-1556
	2200-0009	3	ţ	NUT-HEX-W/LKWR 4-40-THD .094-IN-THK	00000	ORDER BY DESCRIPTION

Table 6-1. Replaceable Parts (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
	1200-0868 0360-1244 3050-0588 0360-1682 10811-40002	5 0 9 0 4	1 3 1 2 1	10811A/B CIRCUIT BOARD MISCELLANEOUS PARTS SOCKET-STRP 7-CONT DIP-SLDR TERMINAL-SPCL FEEDTHRU WASHER-FL NM NO. 6. 145-IN-ID. 23-IN-OD TERMINAL-STUD SGL-TUR PRESS-MTG FOAM SHEET-(BELOW OVEN CONTROLLER ASSY)	28480 28480 28480 28480 28480	1200-0868 0360-1244 3050-0588 0360-1682 10811-40002
	2200-0103 2190-0004 3050-0756 0340-0864	2 2 2 2		10811A/B TRANSISTOR MOUNTING HARDWARE SCREW 4-40 .250 WASHER, FLAT NYLON INSULATOR TRANSISTOR INSULATOR	28480 28480 28480 28480 28480	2200-0103 2190-0004 3050-0756 0340-0864
MP1 MP2 MP3	10811-60106 10811-20202 10811-20203 0520-0166	1 1 1 8		10811A/B MASS ASSEMBLY AND COVERS  OVEN MASS ASS. W/THERMISTOR MASS COVER W/XISTOR CUT-OUTS MASS COVER W/TUNING CAP HOLE SCREW	28480 28480 28480 28480	10811-60106 10811-20202 10811-20203 0520-0166
MP4 MP5 MP6	10811-20206 10811-20211 10811-40001	1 1 1		10811A MECHANICAL PARTS OUTER HOUSING (FOAMED) BOTTOM COVER FOAM COOKIE UNDER BOT COV	28480 28480 28480	10811-20212 10811-20211 10811-40001
	3030-0827 2200-0101 7120-7912 7120-0331	2 3 1 1		10811A MISCELLANEOUS PARTS SCREWS FOR P.C. CONNECTOR SCREWS FOR BOTTOM COVER INFO LABEL 10811A INFO LABEL 10811-60101	28480 28480 28480 28480	3030-0827 2200-0101 7120-7912 7121-0331
MP7 MP8 MP9	10811-20205 10811-60107 1250-0911	1 1 1		10811B MECHANICAL PARTS OUTER HOUSING (FOAMED) BOTTOM COVER COMPLETE EFC SHORTING CONNECTOR	28480 28480 28480	10811-20213 10811-60107 1250-0911
	2200-0164 7120-7911 7120-6299 05060-6116	4 1 1 1		10811B MISCELLANEOUS PARTS SCREW 4-40 .188 TOP INFO LABEL "FREQ ADJ." INFO LABEL HOUSING ADAPTOR MICON-BNC* "MICON TO BNC ADAPTOR NOT SUPPLIED. PART NUMBER FOR REFERENCE ONLY.	28480 28480 28480 28480 28480	2200-0164 7120-7911 7120-6299 05060-6116

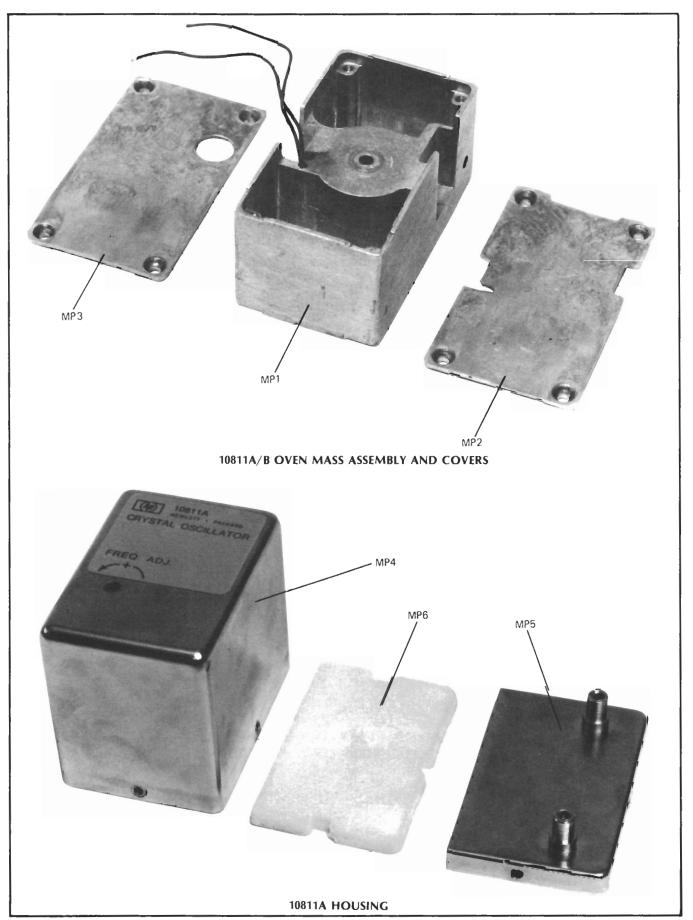


figure 6-1. Mechanical Parts

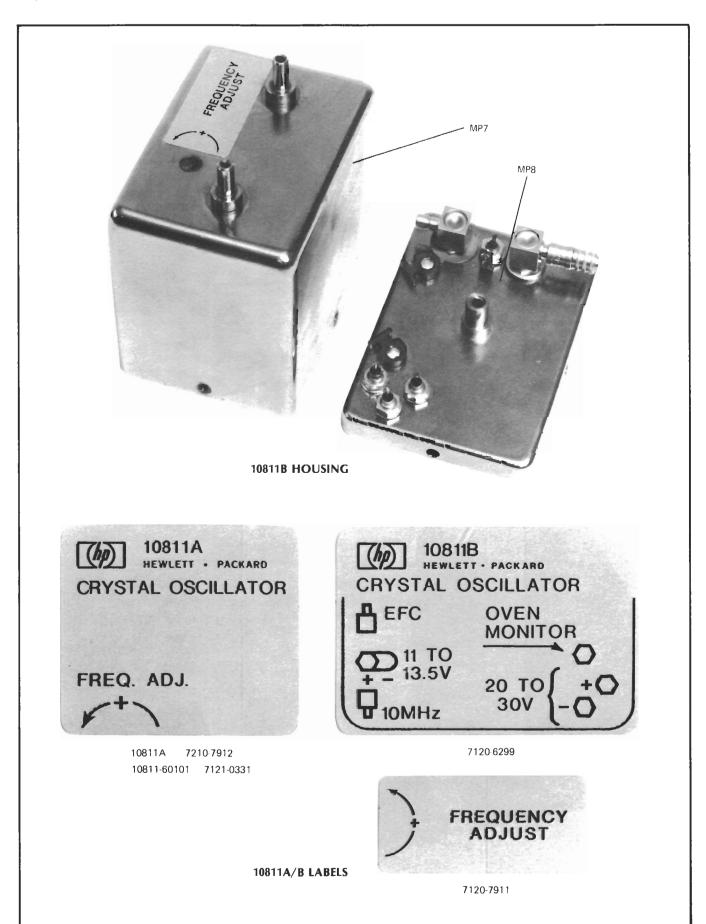


Figure 6-1. Mechanical Parts (Continued)

Table 6-2. Manufacturers Code List

MFR. NO.	MANUFACTURER NAME	ADDRESS	ZIP CODE
00000	ANY SATISFACTORY SUPPLIER		
03888	kdi pyrofilm corp	WHIPPANY, NJ	07981
04713	motorola semiconductor products	PHOENIX, AZ	85062
07263	FAIRCHILD SEMICONDUCTOR DIV	MOUNTAIN VIEW, CA	94042
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD, PA	16701
25088	SIEMENS CORP	ISELIN, NJ	08830
27014	NATIONAL SEMICONDUCTOR CORP	SANTA CLARA, CA	95051
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO, CA	94304
30983	MEPCO/ELECTRA CORP	SAN DIEGO, CA	92121
51642	CENTRE ENGINEERING INC	STATE COLLEGE, PA	16801
72982	ERIE TECHNOLOGICAL PRODUCTS INC	ERIE, PA	16512

# SECTION VII MANUAL CHANGES

## 7-1. INTRODUCTION

7-2. This section contains information necessary to adapt this manual to apply to older instruments.

## 7-3. MANUAL CHANGES

7-4. This manual applies directly to Model 10811A/B Quartz Crystal Oscillators with serial prefix number 2028.

## 7-5. NEWER INSTRUMENTS

- 7-6. As engineering changes are made, newer instruments may have serial prefix numbers higher than those listed on the title page of this manual. The manuals for these instruments will be supplied with "Manual Changes" pages containing the required information to update the manual. Replace affected pages or modify existing manual information as described in the "Manual Changes" pages. See Section VI of this manual for a description of board identification. If the series number etched or stamped on any circuit board or circuit board assembly is higher than the above serial prefix number, "Manual Changes" pages should accompany the manual.
- 7-7. If the "Manual Change" pages are missing from any HP manual, the information can be supplied by any Hewlett-Packard Sales and Service Office listed at the back of this manual.

# SECTION VIII SERVICE

## 8-1. INTRODUCTION

8-2. This section contains theory of operation, a detailed troubleshooting procedure, and a schematic diagram.

## 8-3. SCHEMATIC DIAGRAM SYMBOLS AND REFERENCE DESIGNATORS

8-4. Figure 8-1 shows the symbols used in the schematic diagram. At the bottom of Figure 8-1, the system for reference designators, assemblies, and subassemblies is shown.

## 8-5. REFERENCE DESIGNATORS

# 8-6. Theory of Operation

8-7. The overall theory of operation for the 10811A/B starts with paragraph 8-9. The detailed theory of operation starts with paragraph 8-13.

# 8-8. OVERALL BLOCK DIAGRAM THEORY

- 8-9. The 10811A/B Quartz Crystal Oscillator is an extremely stable, compact, low-power source of 10 MHz. The crystal, along with the oscillator, circuit buffer amplifier, and oven control circuits are all mounted inside a thermally insulated housing.
- 8-10. A detailed block diagram of the 10811A/B oscillator is shown in Figure 8-2.
- 8-11. The 10811A/B oscillator is divided into three sections with each section connected by a .010-inch thick flexible circuit. Three small circuit boards are bonded to the flexible circuit to provide support in the areas where components are located. The arrangement allows the unit to be easily disassembled and operated in the disassembled state on the service bench.
- 8-12. The three sections can be divided into the following subsections (Figure 8-2):
  - 1. Main Oscillator
  - 2. Automatic Gain Control

Voltage Reference (+5.7V and +6.4V) Output Impedance Matching Buffer

3. Output Buffer Amplifier

Oven Controller

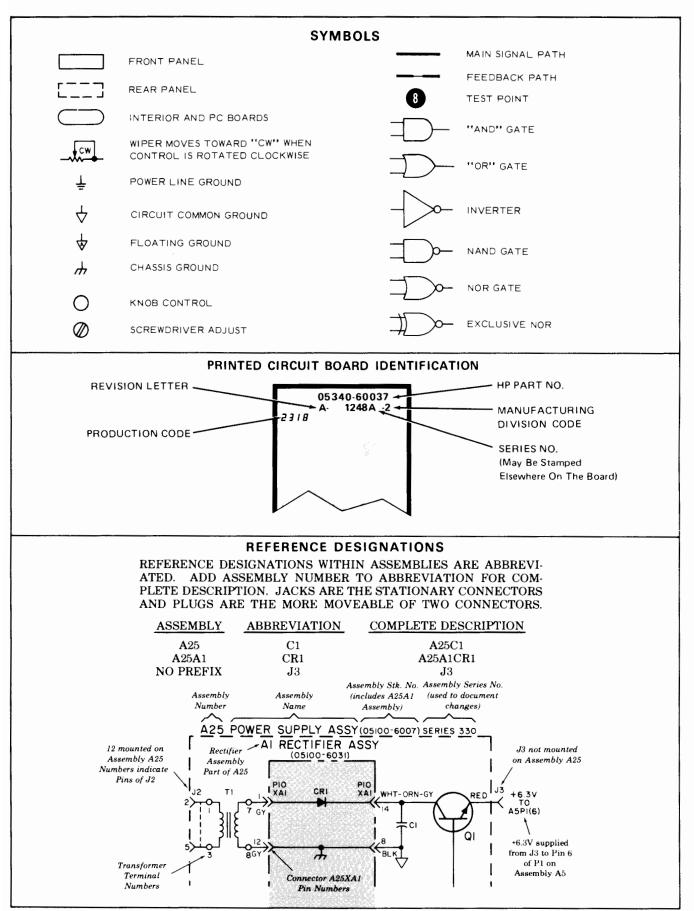


Figure 8-1. Schematic Diagram Notes


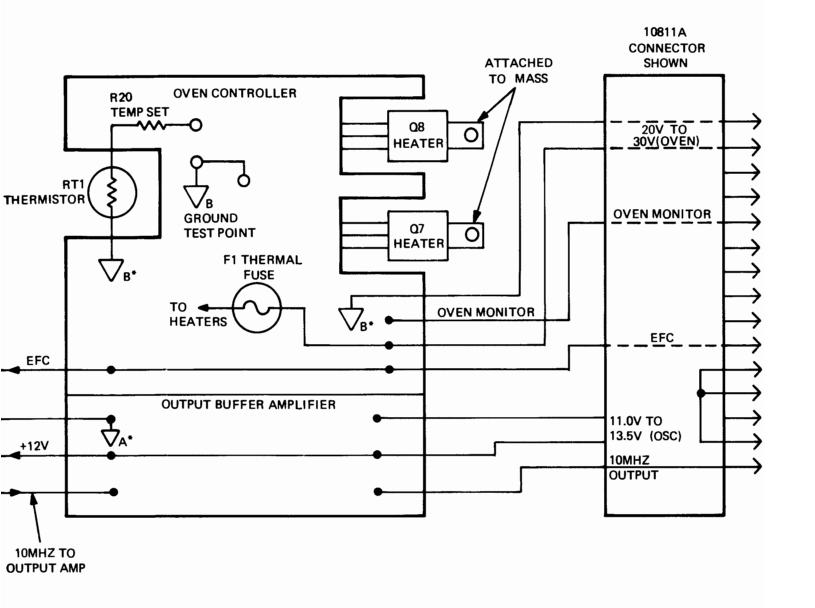


Figure 8-2. 10811A/B Overall Block Diagram

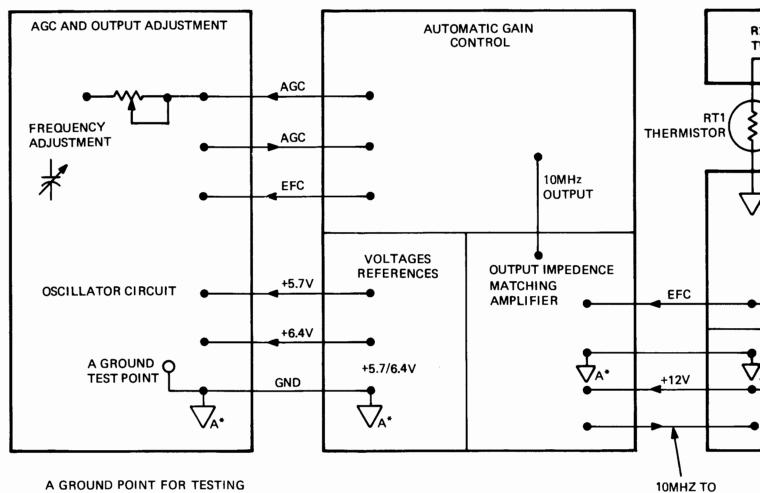

**OUTPUT AMP** 

A GROUND POINT FOR TESTING OSCILLATOR. AGC,OUTPUT AMPLIFIER AND VOLTAGE REFERENCE

B GROUND POINT FOR TESTING OVEN CONTROLLER

B GROUND POINT FOR TESTING OVEN CONTROLLER

\* A AND B GROUNDS MAY BE TIED TOGETHER OR FLOATED AT DIFFERENT POTENTIALS EXTERNAL TO THE OSCILLATOR.

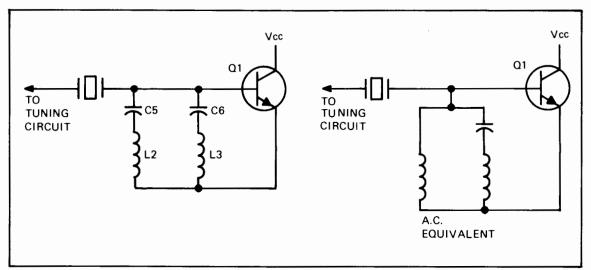


Figure 8-4. Mode Suppression

8-16. Figure 8-5 show the equivalent crystal circuits with the tuning capacitor C1.

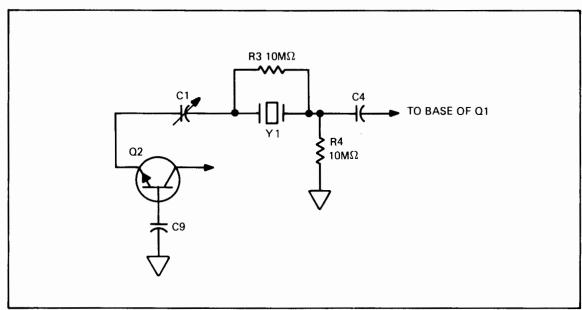


Figure 8-5. Frequency Tuning Circuit

8-17. C1 tuning capacitor is available from the top of the oscillator outer housing. The change in reactance of C1 allows the oscillator's frequency to be varied over a 20 Hz ( $2 \times 10^{-6}$ ) range. C9 and C4 are dc blocking capacitors.

# 8-18. ELECTRONIC FREQUENCY CONTROL (EFC)

8-19. To allow for a fine tuning control, a varactor (CR1) is added in parallel with C1 tuning capacitor. See *Figure 8-6*. The varactor's capacitance depends on the dc voltage applied to it (reverse bias). The EFC voltage range is +5 volts to -5 volts, giving a fine tuning range of  $\approx 1$  Hz (1×10–7). Since one side of the varactor is tied to a reference (6.4V), a full +5 volts applied to the EFC input will still keep CR1 reverse biased. C2 and C3 are again dc blocking capacitors to keep the EFC current from flowing in to the crystal circuit. Note: if the EFC input is not used, it must be connected to ground to keep any noise from modulating the EFC line and causing frequency changes.

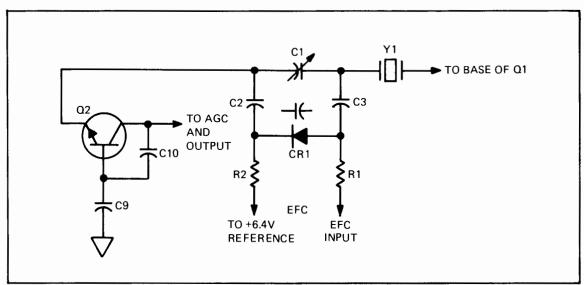


Figure 8-6. EFC

# 8-20. AUTOMATIC GAIN CONTROL (AGC)

8-21. The output for the AGC (and output amplifiers, discussed later) is taken across capacitor C10, and is applied to Q3. Since C10 is effectively in series with the crystal, the current passing through the crystal also passes through C10. The voltage across C10 is therefore proportional to the current through the crystal. As the output of the oscillator changes, the output of the peak detector circuit changes. This change in the AGC voltage changes the voltage applied to the base of Q1 and stops the impending output voltage change. A peak detector circuit formed by C12, C13, CR4 and CR5 is used to develop a dc voltage to control the crystal current. This negative control voltage forms the lower half of a voltage divider for the base of Q1 (R6 and R7). Controlling the bias current and the gain of Q1. Thus AGC action controls the output signal level. (See Figure 8-7).

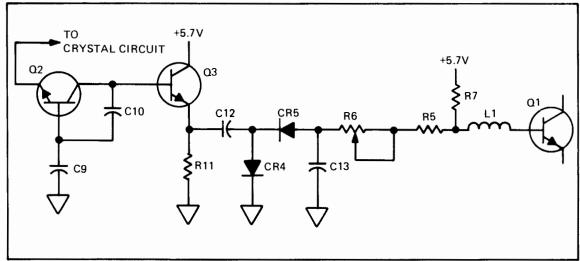


Figure 8-7. Automatic Gain Control (AGC)

8-22. By adjusting the AGC voltage with R6 the amplitude for the output (at the base of Q3) can be set. R5 sets the AGC limit when R6 is at its minimum resistance.

# 8-23. RF OUTPUT IMPEDANCE MATCHING AND OUTPUT BUFFER

8-24. The signal for the output amplifiers is taken from the same point as the AGC (across C10). The voltage is buffered by Q5 which is an impedance matching stage. Resistors R14 and R15 set the dc bias level while C14 allows the ac to bypass R14. The signal is then applied to the output buffer stage of Q9. Resistor R40 provides a  $50\Omega$  source impedance when transformed by T1. Typical gain from Q9 base to collector is approximately 2. See Figure 8-8.

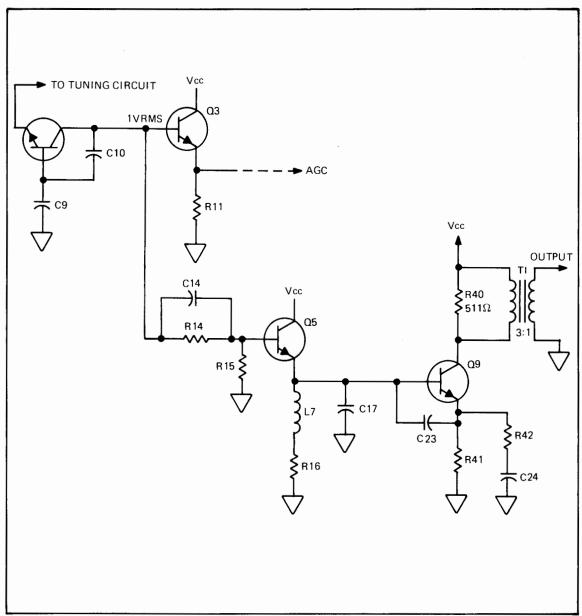


Figure 8-8. Output Amplifiers

# 8-25. VOLTAGE REFERENCES (5.7V AND 6.4V)

8-26. Constant current diode CR2 feeds 1 mA to zener diode CR3 providing 6.4V dc for the EFC varactor reference. R12 and C15 form a filter to attenuate noise from the zener diode. R13 provides current limiting for Q5 if the 5.7V line is shorted. See Figure 8-9.

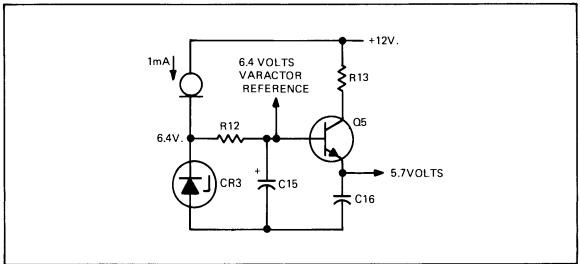


Figure 8-9. Voltage References

## 8-27. OVEN HEATER AND CONTROLLER THEORY

## **NOTE**

In the following theory of operation the term OVEN MASS will be used to describe the cast aluminum block in which the crystal and crystal electronics are located. The exploded view of the oscillator shows the oven mass.

- 8-28. The purpose of the oven is to shield the oscillator crystal and electronics from normal ambient temperature changes. The oven controller does this by maintaining a constant oven temperature which is higher than the highest expected ambient temperature.
- 8-29. Three main blocks make up the oven circuits. See Figure 8-10.
  - 1. Thermistor
  - 2. Amplifier (controller)
  - 3. Heaters
- 8-30. In the 10811A/B oven, a thermistor (RT1) is secured with epoxy into a hole in the oven mass. U3 is the amplifier and Q7 (not shown) and Q8 are the heaters. It is the thermistor that senses the oven mass temperature. Since it is in one leg of the bridge circuit, when the mass temperature changes slightly, a voltage change occurs across the bridge (RT1, R18, R19, R20, R21). Amplifier U3 boosts this voltage change and then uses it to control the current through Q7 and Q8. The current flowing through transistors Q7 and Q8 causes a power dissipation in the form of heat, and it is this heat that warms the oven mass. Therefore, when the mass temperature starts to change, the heaters are told to adjust their power to cancel the impending temperature change.
- 8-31. WARM-UP: GENERAL OPERATION. If the oscillator has been off for several hours, the mass and thermistor will be at the ambient temperature. Assuming this is below the normal oven operating temperature (80 to 84°C) the resistance at the thermistor RT1 is higher than that of R18+ R20 and therefore  $V_1 > V_2$ . This causes the output of U3 to be  $\approx (V_{CC} 1.5V)$  and supply base current to Q8 through Q6. A separate circuit limits the collector current of Q8 and is described later. As the oven mass warms up, the thermistor's resistance gets lower causing both  $V_2$  and  $V_1$  to lower ( $V_2$  lowers because  $V_0$  lowers due to RT1 getting smaller).  $V_1$  decreases at a faster rate than  $V_2$  and eventually  $V_1 = V_2$  when RT1 = R20 + R18. At this time, the oven controller "cuts back" and begins to operate in a linear mode, adjusting the collector current in Q8 (and therefore the power dissipated in Q7 and Q8) to keep the oven precisely at its set temperature.

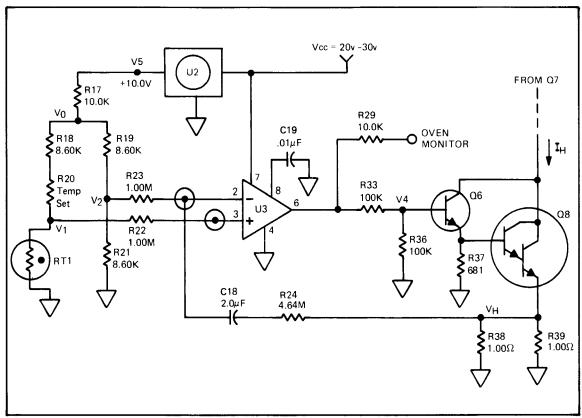


Figure 8-10. Oven Control Circuits

- 8-32. The purpose of R17 is mainly to reduce the power dissipated in the thermistor which causes it to self-heat above the oven operating temperature.
- 8-33. R38 and R39 in parallel provide a means of sensing the heater current, IH. During warm-up, the voltage across them, VH, is used in the current limit circuit (described later). During normal, linear operation, VH is essentially the feedback point for the oven controller loop.
- 8-34. Q6 is necessary primarily for the condition when the oscillator has been stored at -55°C. Since U3 (at -55°C) cannot supply enough base current for Q8, Q6 gives the added current gain required.

# 8-35. PRECISION VOLTAGE REFERENCE

8-36. U2 is a 10.0V voltage reference. It provides a stable voltage source for the bridge and U1. A change in the bridge reference voltage changes the voltage across the thermistor and hence, the power it dissipates. See *Figure 8-10*.

# 8-37. OVEN CONTROLLER TURN-ON CURRENT LIMITING

8-38. Figure 8-11 shows the turn-on current limiting circuit. From an initial turn-on condition the thermistor senses the oven temperature to be low. To correct this situation the amplifier attempts to drive heavy amounts of current through Q7 and Q8 heaters. If allowed to continue this way, excessive current will flow; much more than is practical or necessary for warm-up. Amplifier U1 and associated components limit the current during warm-up to a practical value. When  $V_{CC}$  is applied to the oven, U1B forces  $V_{H}$  to equal  $V_{3}$  by sinking the base current from Q6. By sensing  $V_{CC}$ , the circuit transforms the heater transistors into what appears to be a fixed heater resistance of  $47\Omega$  typical.

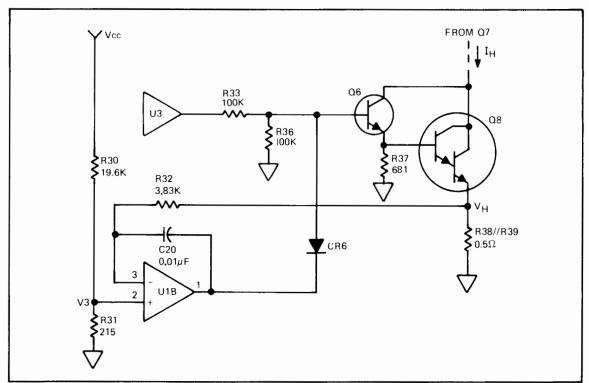


Figure 8-11. Turn-on Current Limit Circuit

# 8-39. HEATER TRANSISTOR BALANCE

8-40. Because heater transistors Q7 and Q8 are not equally spaced from the crystal, it is necessary to offset the power dissipation between the two transistors. Figure 8-12 shows a simplified schematic of this circuit. Amplifier U1A references a voltage divider across  $V_{cc}$  (R25, R26) and a divider referenced to the mid-point between the heater transistors. From this U1A controls the base current of Q7 to insure the voltage at the mid-point between the heater transistors is a constant percentage of  $V_{cc}$  (V4  $\approx$  0.57  $V_{cc} \pm 2\%$ ).

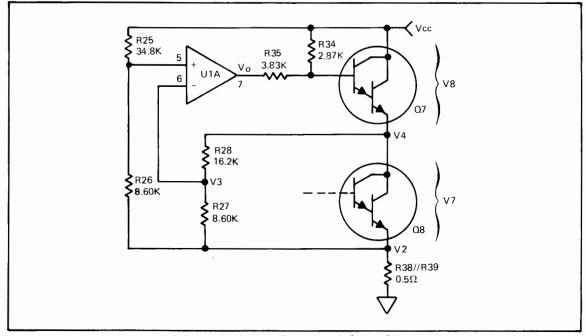


Figure 8-12. Heater Transistor Balance Circuit

## 8-41. REPAIR AND TROUBLESHOOTING

# 8-42. Inspection

8-43. The 10811A/B should be inspected for indications of mechanical and electrical defects. Electronic components that show signs of overheating, leakage, frayed insulation, and other signs of deterioration should be checked and a thorough investigation of the associated circuitry should be made to verify proper operation. Mechanical parts should be inspected for excessive wear, looseness, misalignment, corrosion, and other signs of deterioration.

# **CAUTION**

Proper static handling techniques must be employed when servicing semiconductor products. The voltage susceptibility of all I.C. and transistor families are well below levels commonly found in service environments. Exercise care and observe standard static precautions.

## 8-44. REPAIR

## 8-45. Printed Circuit Component Replacement

8-46. To prevent damage to the plating and the replacement component, apply heat sparingly, and work carefully. See CAUTION below.

## 8-47. Replacing Integrated Circuits

- 8-48. Following are two recommended methods of replacing integrated circuits:
  - a. SOLDER GOBBLER. This is the best method. Solder is removed from board by a soldering iron with a hollow tip connected to a vacuum source.
  - b. CLIP-OUT. Clip the leads as close to the component as possible. With a soldering iron and longnose pliers, carefully remove the leads from each hole. Then clean the holes.

# **CAUTION**

The flex circuitry used in the 10811A/B oscillator requires special attention to soldering iron tip temperature and the length of time heat is applied. A low wattage (≈25W) iron with a temperature control should be used. The tip temperature should be held below 500°C. Care should be taken to be sure that the iron is not held on the circuit longer than necessary. Components should be removed by clipping the leads and then gently removing them. Do not use force when removing components. Following these precautions will insure that repairs can be easily made without damaging the flex circuit. Also, components should not be arbitrarily removed for troubleshooting or replacement unless there is reasonable confidence in the component's failure.

# WARNING

THE OSCILLATOR'S INTERNAL OVEN MASS TEMPERATURE MAY BE AS HIGH AS 85°C (185°F). TO AVOID SERIOUS BURNS DO NOT REMOVE OSCILLATOR CIRCUITS AND/OR OVEN MASS ASSEMBLY FROM THE OUTER CAN UNTIL THE OSCILLATOR HAS SUFFICIENTLY COOLED (APPROXIMATELY ONE HOUR WITH BOTTOM COVER AND FOAM INSULATOR REMOVED). THE OUTER HOUSING TEMPERATURE IS NOT A RELIABLE INDICATION OF THE INTERNAL TEMPERATURE.

8-49. The troubleshooting is arranged to allow the technician to quickly find the defective component(s) without unnecessary removal of components.

# 8-50. TROUBLESHOOTING

- 8-51. Failures in the 10811A/B can be divided into two sections:
  - Failure of the oscillator's circuits.
  - 2. Failure in the oven controller circuits.
- 8-52. Failures in the oscillator circuits can be divided into the following problems:
  - 1. No output.
  - 2. Output amplitude is too low or high.
  - 3. Output is distorted (contains excessive harmonics).
  - 4. Output is off frequency (high or low).
  - 5. Output has excessive noise or frequency stability does not meet specifications.
- 8-53. Poor frequency stability can be difficult to troubleshoot, and many times the oscillator is not at fault. Environmental conditions can affect stability and should be ruled out first.
- 8-54. Failures in the oven circuitry can be divided into the following problems:
  - 1. No oven current (heat).
  - 2. Excessive oven current (>600 mA).
  - 3. Oven does not cut back after warm-up (this will open the thermal fuse if allowed to continue).
  - Oven does not regulate at the proper temperature. (This can be the cause for poor frequency stability).
- 8-55. Since the main oscillator and oven control power supply inputs are separate from each other, the defective circuit can be operated without applying power to the complete oscillator.
- 8-56. Determine which section is defective (oven or oscillator circuit), then proceed as described in the following troubleshooting section. The two circuits can be investigated separately.
  - Remove top cover and insulator described in:
    - a. 10811A paragraphs 8-59.
    - b. 10811B paragraphs 8-59, step 4.

# CAUTION

With the cover and foam insulator removed to thermal fuse cannot protect the oven circuit from thermal runaway. Caution should be used at all times.

# 8-57. DISASSEMBLY FOR TROUBLESHOOTING AND REPAIR

8-58. Perform steps 1 through 3 for the 10811A oscillator and steps 4 and 5 for the 10811B oscillator. Once these steps are completed, follow steps 6 through 10 for both oscillators.

## 8-59. For the 10811A Oscillator:

- Step 1. Remove the three screws securing the bottom cover to the outer housing, and remove bottom cover.
- Step 2. Remove the two screws securing the pc edge connector to the outer housing.
- Step 3. Remove the foam sheet to expose the oven controller circuit board.

If troubleshooting the oven controller, stop here and go to paragraph 8-69. Go to Step 6 only if the trouble is in the oscillator circuit.

For the 10811B oscillator:

- Step 4. Remove the four screws securing the cover to the outer housing.
- Step 5. Disconnect the flexible circuit attached to the cover from the 7-pin connector mounted to the oven controller circuit board.

If troubleshooting the oven controller, stop here and go to paragraph 8-69. Continue only if the trouble is in the oscillator circuit.

The following steps will be performed for both oscillators.

Step 6. Using a long, small diameter tool, remove the complete oscillator assembly by inserting the tool into the tuning capacitor access hole (labeled FREQ. ADJUST) and pushing on the capacitor until the circuit can be grasped and removed freely.

# CAUTION

(10811A only)

Do not remove the circuits by pulling on the edge connector or flexible circuit. Damage to the flexible circuit may occur.

Step 7. Using a posidrive screwdriver, remove the two screws securing the heater transistors to the oven mass. Remove the washers and transistor insulators.

#### NOTE

When reassembling the oven mass the heater transistor screws must be tightened to a torque of 44 newton metres (5 in.-lbs.)

- Step 8. Tilt the oven controller assembly back and remove the foam insulator between the oven controller assembly and the oven mass. Be careful not to break the two black thermistor wires attached to the oven controller assembly.
- Step 9. Remove the eight screws (four each side) securing the covers to the oven mass assembly.
- Step 10. Use two of the screws from each cover (removed in Step 9) to secure the boards to the mass for troubleshooting.

8-60. Go to paragraph 8-84, Oscillator Troubleshooting. When reassembling unit, reverse the above procedure.

# 8-61. SPECIAL TEST CONNECTOR FOR 10811A

- 8-62. The following paragraphs describe a special 15-pin connector for use in troubleshooting, alignment and testing of the 10811A. The connector provides the following (See *Figure 8-13*):
  - a. Two separate input leads for the oscillator circuits power and the oven heaters and controller circuits.
  - b. 10 MHz output through a female BNC.
  - c. Oven monitor output for connection to a voltmeter.
  - d. EFC input connection to ground.

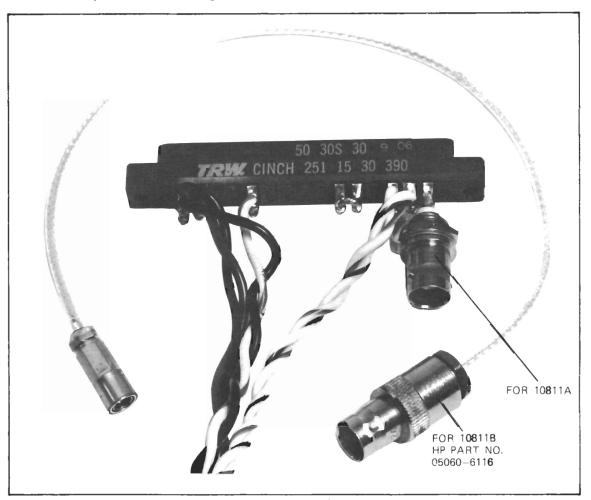


Figure 8-13. 10811A/B Special Test Connector

- 8-63. The following parts are required to construct the special test connector:
  - a. 15-pin pc board connector (HP part number 1251-0494).
  - b. 6 banana plugs (HP part number 1251-0124).
  - c. BNC female connector with ground lug and nut.

BNC connector	1250-0083
Ground lug	0360-0024
Lock washer	2190-0016
Nut	2950-0001

- d. Approximately 6-feet of 24-gauge wire.
- e. Labels for banana plugs.

## 8-64. To construct the connector:

- a. Solder the center pin of the BNC connector to pin 1(A) of the printed circuit connector; this is the 10MHz output signal.
- b. Bend the BNC ground lug to align with pin 2(B) of the printed circuit connector.
- c. Solder one end of a 2-foot length of wire to pin 2(B) of the printed circuit connector. Also solder the BNC ground lug to pin 2(B). This is the oscillator circuit common.
- d. Solder one end of a 2-foot length of wire to pin 3(C) of the printed circuit connector. This is the oscillator (+) supply.
- e. Connect a jumper wire between pins 5(E) and 6(F). This terminates the EFC input.
- f. Solder one end of a 2-foot length of wire to pin 11(M). This is oven monitor output.
- g. Solder one end of a 2-foot length of wire to pin 14(R) of the printed circuit connector. This is the oven (+) supply.
- h. Solder one end of two 2-foot lengths of wire to pin 15(S) of the printed circuit connector. This is the oven common.
- i. Twist together one of the two wires connected to pin 15(S) and the wire connected to pin 14(R). These are the oven controller power supply inputs.
- j. Twist together the remaining wire connected to 15(S) and the wire connected to pin 11(M). This is the oven monitor output.
- k. Twist together the two wires connected to pins 2(B) and 3(C). These are the oscillator supply input.
- I. Connect one banana plug to the free end of each wire.
- m. Label each banana plug as follows:

Wire connected to:	Label as:
pin 2(B)	oscillator supply (-)
pin 3(C)	oscillator supply (+)
pin 11(M)	oven monitor (+)
pin 14(R)	oven supply (+)
pin 15(S) two wire	oven supply (-)
	oven monitor (-)

n. Inspect the connector for poor solder joints, bent or damaged pins. Double check the labelling of the banana plugs to be sure the polarity markings are correct. If the voltages are connected the wrong way, damage to the 10811A may occur.

## 8-65. SPECIAL CABLE FOR THE 10811B.

8-66. A micon to BNC adaptor cable is available for the 10MHz output signal. Order HP Part Number 05060-6116 (see Figure 8-13).

## 8-67. SPECIAL PARTS REPLACEMENT CONSIDERATIONS

8-68. Several mechanical parts and components must be replaced as a pair or require special consideration. They are:

a. Oven mass assembly and thermistor: If the thermistor (RT1) is found to be defective, the thermistor and oven mass assembly must be replaced as one item, HP Part Number 10811-60106. Do not attempt to replace the thermistor alone.

- b. Crystal and Temperature Set Resistor: The replacement crystal for Y1 will be accompanied by the **required temperature set resistor (R20)** for the oven. This resistor must be installed with the new crystal. The crystal and R20 can be ordered using HP Part Number 10811-60108. If the temperature set resistor is found to be defective only, it must be replaced with the same value and tolerance. If the temperature set resistor (R20) is unreadable, the value required can be determined by finding the oven temperature value marked on the crystal (Y1). The required resistor can then be determined from *Table 8-1*. When Y1 is replaced, the nut which secures it to the oven mass should be tightened to a torque of 44 newton-metres (5 in.-lbs.). This will insure maximum heat transfer without overstressing the crystal package.
- c. 10811B Bottom cover: If any part of the 10811B bottom cover is found to be defective, the complete bottom cover must be replaced (HP Part Number 10811-60107). Once the insulating foam is attached to the bottom cover, feedthroughs and terminals cannot

Table 8-1. Temperature Set Resistor List.

OVEN TEMP °C	RESISTOR VALUE	PART NUMBER
80.0	1.33K	0698-7239
80.1	1.29K	0698-6981
80.2 80.3	1.25K	0698-6973
I .	1.21K	0698-7238
80.4	1.18K	0698-3512
80.5	1.15K	0698-4469
80.6	1.10K	0698-7237
80.7	1.07K	0698-4196
80.8	1.04K	0698-6970
80.9	1.00K	0698-7236
81.0	968	0698-0096
81.1	931	0698-4465
81.2	909	0698-7235
81.3	866	0698-3495
81.4	825	0698-7234
81.5	787	0698-4014
81.6	750	0698-7233
81.7	715	0698-3700
81.8	681	0698-7232
81.9	649	0698-4460
82.0	619	0698-7231
82.1	600	0757-1100
82.2	562	0698-7230
82.3	511	0698-7229
82.4	500	0698-5852
82.5	464	0698-7228
82.6	422	0698-7227
82.7	383	0698-7226
82.8	348	0698-7225
82.9	316	0698-7224
83.0	287	0698-7223
83.1	261	0698-7222
83.2	215	0698-7220
83.3	196	0698-7219
83.4	162	0698-7217
83.5	121	0698-7214
83.6	100	0698-7212
83.7	61.9	0698-7207
83.8	34.8	0698-7201
83.9	0	jumper
84.0	0	jumper

- be replaced without impairing the heat insulating abilities of the bottom cover. Do not attempt to repair the cover or replace the flex circuit.
- d. Oven heater transistors Q7 and Q8: The replacement transistor for Q7 and Q8 have formed leads for easy installation (Part Number 10811-80001). Holding screws for Q7 and Q8 must also be torqued to a specific force of 44 newton-metres (5 in.-lbs.). There are several available posidrive torquing screwdrivers.

# 8-69. OVEN CONTROLLER TROUBLESHOOTING

## 8-70. General

- 8-71. The oven controller section consists of three major circuits and a 10V voltage reference for increased stability of sensitive circuits. *Figure 8-14* shows the major circuits and active components involved in their operation.
- 8-72. The temperature sense circuit monitors the temperature of the oven mass and reduces the power drawn by the oven heater transistors when the oven mass has reached operating temperature. After power cut-back, this circuit monitors the oven mass temperature and controls the power in the heaters to maintain the constant temperature. The thermistor (RT1) has a negative temperature coefficient. At room temperature the thermistor resistance is approximately 100K ohms, while at operating temperature (~82°C) the resistance is approximately 9K ohms. Shorting the thermistor to oven common makes the oven mass appear too hot to the temperature sense circuit. This in turn causes the temperature sense circuit to shut off power to the oven heaters. This technique is used in the troubleshooting procedure.
- 8-73. The warm-up current limit circuit controls the maximum current the oven may draw during warm-up (380 to 490 mA with 20V dc oven input). This circuit is only active during the warm-up phase of the oven circuit operation.

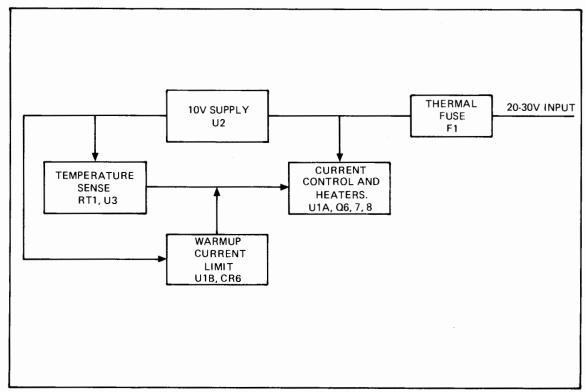


Figure 8-14. Oven Controller Block Diagram

## 8-74. Normal Operation

8-75. When the oven is tested under normal conditions (~25°C ambient temperature) it will initially draw 380 to 490 mA. After 5 to 10 minutes the oven current will start to drop. Over the next 10 to 15 minutes the oven current will fall to the 60 to 150 mA range where it will stabilize. The oven circuit should not oscillate.

#### WARNING

DO NOT OPERATE THE OVEN CIRCUITS WHEN THE OVEN MASS IS OUTSIDE OF THE OSCILLATOR INSULATED HOUSING. DOING SO WILL OVERHEAT THE OSCILLATOR CIRCUITS INSIDE THE OVEN MASS AND CAUSE PERMANENT DAMAGE. ALL OVEN TEST POINTS ARE AVAILABLE WITH THE OVEN MASS AND OVEN CONTROLLER CIRCUIT INSIDE THE HOUSING.

WHEN OSCILLATOR COVER AND INSULATOR ARE REMOVED THERMAL FUSE WILL NOT PROTECT CIRCUIT FROM OVER-HEATING. APPLY OVEN POWER ONLY WHEN ACTUALLY MAKING MEASUREMENTS FOR TROUBLESHOOTING OR AS DIRECTED IN TROUBLESHOOTING TREE, TABLE 8-2.

## 8-76. TROUBLESHOOTING

- 8-77. Table 8-2 is a troubleshooting tree for the oven circuits. The troubleshooting procedure separates the different functional circuits by monitoring the oven supply current during different operating conditions. For example, if the warm-up current is excessive, this indicates a trouble in the warm-up current limit circuit, or the current control and heater circuit. If shorting the thermistor reduces the current being drawn from the power supply, this indicates the current control circuit is operating and the problem is most likely in the warm-up current limit circuit.
- 8-78. As with most troubleshooting trees this is intended to be a guide to the trouble area. It is not a substitute for technical skill in isolating the faulty components.
- 8-79. Table 8-3 (next to schematic diagram) gives normal circuit voltages during warm-up, operation, and when thermister RT1 is shorted to ground. Use this table during troubleshooting.

## 8-80. Troubleshooting Cautions

8-81. When oven current is excessive, turn on the power supply only long enough to make the necessary measurements. Do not leave power on if the oven is drawing excessive current. With the housing cover and foam insulator removed, the thermal fuse (F1) cannot protect the circuits in the oven mass from overheating and damage.

#### 8-82. Flex Damage

8-83. If a tear in the flex circuit occurs, the tear can continue until a trace is broken. To stop a tear, use a pair of scissors and cut around the tear. DO NOT CUT A SHARP CORNER as this will cause a stress concentration allowing the tear to start again. A hole punch may also be used. Punch a hole in the flex so as to remove the forward end of the tear.


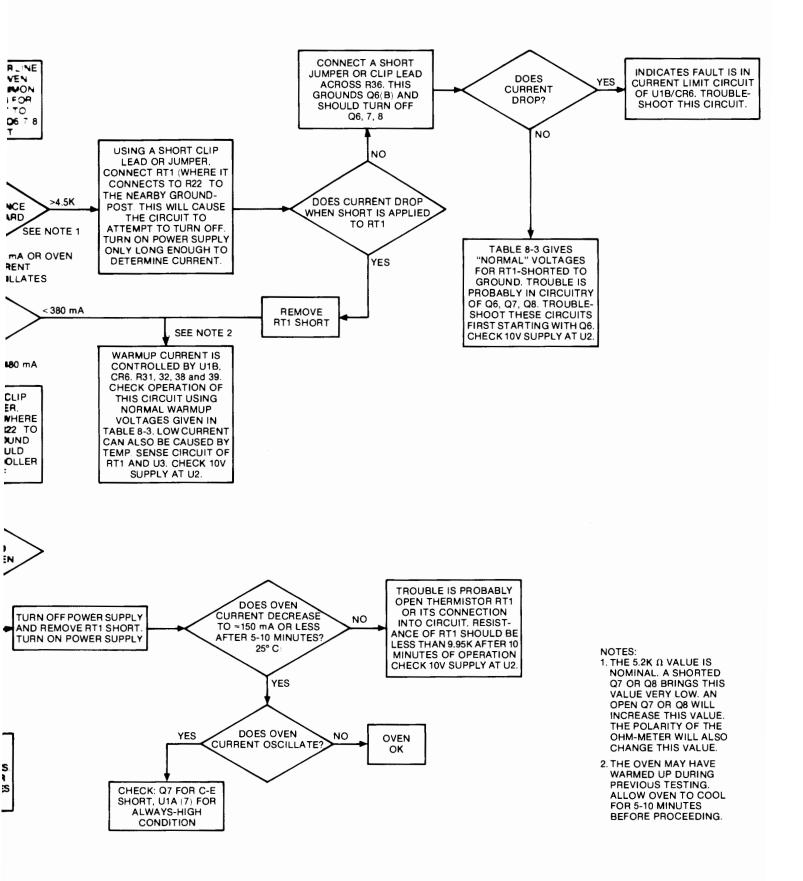


Table 8-2. Oven Controller Troubleshooting Tree

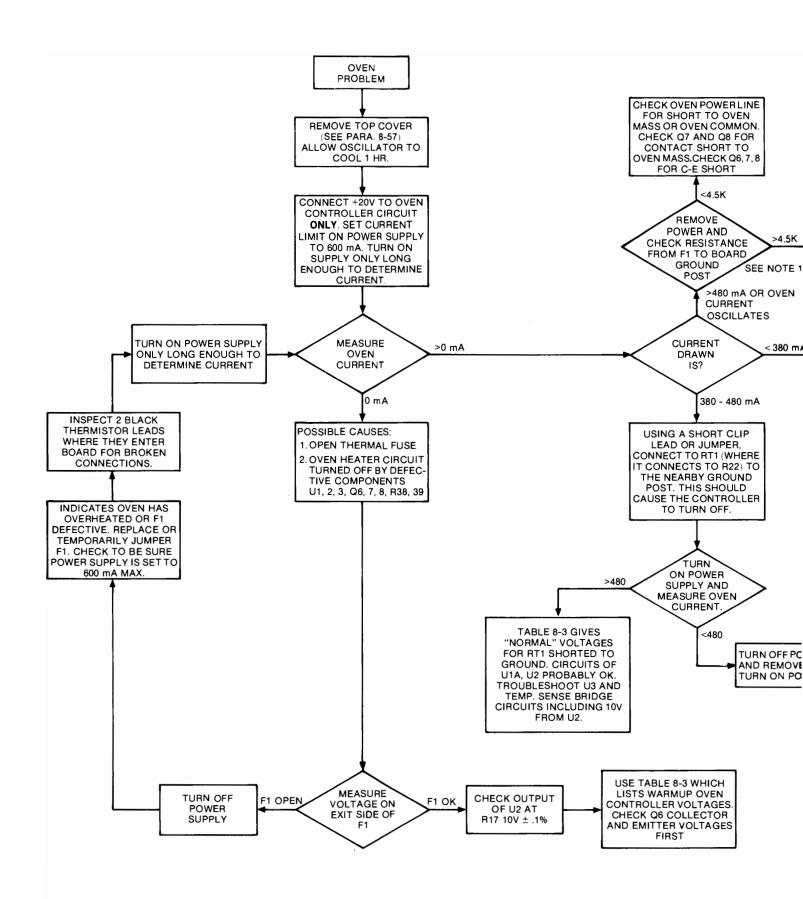

# 8-84. OSCILLATOR TROUBLESHOOTING

8-85. The oscillator circuits are relatively simple and straightforward. The following paragraphs will briefly describe the major circuit areas, a troubleshooting outline, and some helpful suggestions to make the troubleshooting process easier. The oscillator consists of four sections. They are:

- 1. Oscillator Q1, Q2, and associated circuitry.
- 2. AGC Q3, CR4, CR5, and R6.
- 3. Output circuit Q5, Q9.
- 5.7V power supply CR2, CR3, and Q4.

The oscillator is the signal source. Its output level is controlled by the AGC. The 5.7V power supply provides an extra-stable clean voltage source for the oscillator circuits. The output circuits provide a high level signal capable of driving a 50 to 1K ohm load.

# 8-86. NORMAL OPERATION

8-87. The output of the oscillator circuit at Q2(C) is a 10 MHz undistorted sine wave with an amplitude of approximately 2.8V p-p. The AGC voltage (measured at CR5-C13 junction) is approximately -1.5V. The 10 MHz signal passes through Q5 to Q9(B) at about the same level. The voltage gain of amplifier Q5 (base to collector) is approximately 2 with a 50-ohm load on the output. The output of transformer T1 is approximately 1.5V p-p. All 10 MHz signals found in the 10811A/B will be undistorted sine waves unless otherwise noted in *Table 8-4* (next to the schematic diagram).

# 8-88. OSCILLATOR TROUBLESHOOTING TECHNIQUES

8-89. When troubleshooting the oscillator section, remove the oven mass from the housing and the covers from the oven mass as described in paragraph 8-59. Connect 12V to the oscillator section; use special connector described in paragraph 8-61 for 10811A, connect power to T1(1) and oscillator circuit common in 10811B. Set the power supply current limit to 60 mA. **Do not apply power to the oven circuits!** 

8-90. Initial troubleshooting and probing should be done on the backside of the boards (trace side) while they are secured to the oven mass (see paragraph 8-58, step 10). This way the circuits are more easily handled. When the fault is isolated to a few components, the unit may then be disassembled for final troubleshooting and repair.

## 8-91. Helpful Hints

- 1. Most points in the oscillator circuits cannot be measured with a dc voltmeter. The reactance of the voltmeter probe and leads will load the circuit and give false readings. Instead, use an oscilloscope with a high input impedance probe for these measurements. Table 8-4 (oscillator section normal voltages) indicates when a dc voltmeter can be used.
- 2. Before reinstalling the oven mass into the housing, adjust the output amplitude (with R6) to 0.53V into a 50-ohm load. Although this value is slightly below normal, the output will increase slightly when the unit is reassembled and is at normal operating temperatures.
- 3. If a tear in the flex circuit occurs, go to paragraph 8-82 for repair instructions.

# 8-92. TROUBLESHOOTING INFORMATION

- 8-93. Symptoms of failures in the oscillator sections will generally fall into one of the following categories:
  - 1. No output.
  - 2. Output amplitude is low or high.
  - Output is distorted (contain excessive harmonics).
  - 4. Excessive drift of output frequency.
  - Time domain frequency stability (short-term stability) does not meet specifications.
- 8-94. Troubleshooting of these faults will be discussed in the following paragraphs.
- 8-95. NO OUTPUT. This is usually easy to repair by simple signal tracing. Localized fault finding (to actual defective component) can be somewhat more difficult if the problem is in the main oscillator circuit (Q1, Q2, and AGC). If the fault appears to be in the oscillator section and does not yield to normal troubleshooting techniques, measure the AGC voltage at the junction of CR5-C13 (see Note 7 on Table 8-4, Oscillator Normal Voltages). If this voltage appears normal, the problem may be a defective quartz crystal (Y1). To verify this possibility, obtain a 10  $\mu$ H (HP Part No. 9100-2265) and a 12  $\mu$ H inductor (9100-2242). Use the HP numbered parts as these have been tested in the circuit. On the oscillator board, remove the red and blue wires connecting the crystal to the board. Place the 12  $\mu$ H inductor in place of these wires. With 12V applied to the circuit, adjust the FREQ ADJUST (C1), and amplitude control (R6) for a good sine wave signal.

#### NOTE

At some settings of C1 and/or R6, intermittent oscillations may appear. Some minor adjustment of C1 and/or R6 should clear this. If this fails, replace the 12  $\mu$ H inductor with the 10  $\mu$ H inductor and repeat the C1/R6 adjustment.

If replacing the crystal with an inductor produces oscillation, this is a very good indication of a defective crystal. When replacing crystal Y1, read paragraph 8-68(b), Special Parts Considerations. If the circuit will still not oscillate, the problem is most likely one of the oscillator circuit elements.

- 8-96. OUTPUT AMPLITUDE HIGH OR LOW. Many times this can be cured by the adjustment of R6 as described in paragraph 5-14. If the correct amplitude cannot be obtained with this adjustment, monitor the signal at Q6(C) with an oscilloscope and set R6 to obtain an amplitude of 2.8V p-p. Then check Q5 and Q9 stages. If the R6 adjustment isn't effective, you should suspect the AGC circuitry (Q3, CR4, CR5, C5, C6, R5, R6, R7, or Q1).
- 8-97. OUTPUT DISTORTION. Check the distortion with a spectrum analyzer (see *Table 4-2* step 2. for procedure). If the distortion products are harmonically related to 10 MHz, trace the signal to the distorting stage. If the distortion is not harmonically related to the 10 MHz output:
  - 1. Check the mode suppression components of L2/C5 and/or L3/C6. These components suppress oscillations at all frequencies other than 10 MHz.
  - Check for spurious oscillations from the amplifier stages and oscillator transistors.
- 8-98. EXCESSIVE DRIFT OF OUTPUT FREQUENCY. When a quartz crystal oscillator has not been operated for a long period of time, or if it has been subjected to severe thermal or mechanical shock, the oscillator may take some time to stabilize. In most cases, the crystal will

drift and then stabilize at or below the specified rate within a few days after being turned on. In isolated cases, depending on the amount of time the oscillator has been off and the environmental conditions it has experienced, the 10811A/B may take up to 1 week to reach the specified aging rate. This should be taken into consideration if the drift rate of the unit is out of specifications. If the unit has had sufficient time to stabilize but is still out of specification, the most likely cause of excessive drift is a defective crystal (Y1). If Y1 is to be replaced, read paragraph 8-68(b). Other possible causes are unstable C3 and/or C8.

8-99. TIME DOMAIN STABILITY (SHORT-TERM STABILITY) OUT OF SPECIFICATION. Measurement of time domain stability is somewhat difficult and exacting. If the 10811A/B fails this test, be sure no signal sources other than the test reference are operating near the measurement system, as these can cause interference with the measurement. Other sources of error are vibration, nearby electrical equipment, poor shielding, or motors that can radiate signals into the 10811A/B. The failure to connect the EFC input (to ground) can cause poor frequency stability as can a noisy voltage being used for the EFC control. If another oscillator is available (known to be good), verify the accuracy of the measurement system. This could save considerable troubleshooting time.

8-100. Two other possibilities external to the oscillator are the oven and oscillator power supplies. These must be stable in order for the circuits to function properly. See *Table 1-1*, Specifications, and paragraph 2-6 for power supply noise requirements.

8-101. When troubleshooting this condition, carefully monitor the output waveform. Check for distortion or intermittent distortion, small amplitude variations (there should be none), or spurious oscillations on the output signal. Use a spectrum analyzer for this test (see *Table 4-3*, step 3). These symptoms can be more readily traced than small frequency fluctuations.

8-102. Almost any of the circuits can cause poor short-term stability. However, the most probable cause is crystal Y1. Other possible causes are the oven controller circuit (keeps changing temperature) or defective frequency determining components (CR1, C1, C3, C8, or instability in the 5.7V supply). Q1 and Q2 are also good suspects. Instability can also be caused by the AGC circuit, but this is usually visable as output amplitude variations or instability on the output waveform.

8-103. To check oven stability, allow the 10811A/B to operate normally away from drafts or sudden temperature changes. Allow the unit to warm up for at least 1-hour then connect a sensitive recorder or digital voltmeter to the OVEN MONITOR OUTPUT. Once the oven has stabilized, the monitor voltage should not vary more than 100-200  $\mu$ V when measured over 3- to 4-minute periods. Causes of oven instability are temperature sensing elements RT1, U2, U3, and associated components.

Table 8-3. Oven Circuit Voltages\*

VOLTAGE POINT	OVEN AT OPERATING TEMP.	OVEN COLD (JUST AFTER TURN-ON)	RT1 GROUNDED				
Q6B	1.6	2.	.25				
Q6C	11.4	11.4	11.4				
Q6E	1.	1.3	0				
Q7B	12.5	12.7	11.9				
Q7C	20.	20.	20.				
Q7E	11.4	11.4	11.4				
Q8B	1.	1.3	0				
Q8C	11.4	11.4	11.4				
Q8E	.07	.23	0				
U1 Pin 1	8.9	1.8	8.9				
U1 Pin 2	.07	.23	0				
U1 Pin 3	.2	.23	.2				
U1 Pin 5	4.	4.1	3.8				
U1 Pin 6	4.	4.1	3.8				
U1 Pin 7	3.3	4.8	1.5				
U2 Pin 2	10.	10.	10.				
U3 Pin 6	3.5	19.0	.5				


<sup>\*</sup>Voltage readings taken with oven supply voltage of 20V dc and insulating foam and cover removed. Voltages are approximate and will vary slightly from unit-to-unit.

Table 8-4. Oscillator Section Normal Voltages (see Notes 1, 2, 3)

VOLTAGE POINT	NORMAL	VOLTAGES	REMARKS
	AC (p-p)	DC	HE.VI/MING
C3/R3	1 to 4	_	Note 8
CR5/C13	_	-1.5	Notes 4 and 7
CR3(C)	0	6.3	Note 4
Q1(B)	1	.75	Note 8
Q1(C)	0	5.5	Note 4
Q1(E)	.9	.03	Note 8
Q2(B)	0	2.7	Note 4
Q2(C)	2.7	5.6	Note 8
Q2(E)	.06	2	Notes 4 and 5
Q3(B)	2.7	5.6	Note 8
Q3(C)	0	11.8	Note 4
Q3(E)	2.4	4.9	Notes 4 and 6
Q4(B)	0	6.3	Note 4
Q4(C)	0	10.3	Note 4
Q4(E)	0	5.6	Note 4
Q5(B)	2.7	3.1	Note 8
Q5(C)	0	11.8	Notes 8 and 9
Q5(E)	2.8	2.6	Note 8
Q9(B)	2.8	2.8	Note 8, 9
Q9(C)	5.1	11.8	Note 8, 9
Q9(E)	2.5	1.9	Note 8

#### NOTES:

- 1. All voltages taken with 12V oscillator supply.
- 2. Voltages are approximate and will vary slightly from unit-to-unit.
- 3. All ac voltages are sine waves except Q2(E) and Q3(E).
- 4. This dc voltage may be measured with a standard dc voltmeter. All other voltages should be measured with an oscilloscope and high impedance probe to minimize circuit loading.
- 5. Waveform is .06V.
- 6. Waveform is slightly flattened on the bottom.
- 7. This is the AGC voltage. Value shown is nominal with oscillator operating. If the oscillator is not oscillating, the AGC voltage will be ~+2.5V.
- 8. Measure both ac and dc voltages with an oscilloscope and a high impedance probe to minimize circuit loading.
- 9. AC voltage at Q9(C) measured with 50-ohm load on the output.

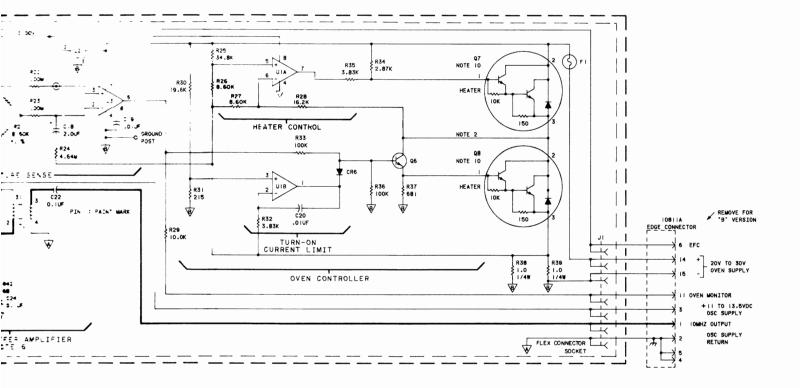

## NOTES:

- I. WHEN RECONNECTING THE THERMISTOR LEADS:

  A. REMOVE ALL SOLDER FROM THE HOLES.

  B. INSERT THE THERMISTOR LEADS SO THE WIRE GOES ALL THE WAY THROUGH THE HOLES IN THE FLEX CIRCUIT. THE INSULATION SHOULD SEAT AGAINST THE FLEX CIRCUIT BOARD AS SHOWN BELOW.



- 2. THE VOLTAGE AT Q6(COLLECTOR) SHOULD BE .57% OVEN SUPPLY VOLTAGE ±10%. SEE NOTE 9.
- 3. SEE PARAGRAPH 8-68(B) <u>BEFORE</u> REPLACING THE CRYSTAL, YI. WHEN REINSTALLING THE CRYSTAL INTO THE OVEN MASS, TIGHTEN MOUNTING NUT TO A TORQUE OF 5 IN-LBS (44 NEWTON-METERS).
- 4. THERMISTOR ROOM TEMPERATURE RESISTANCE IS APPROXIMATELY 100K THERMISTOR IS PART OF OVEN MASS (MP 1) AND CANNOT BE REPLACED SPARATELY. RESISTANCE BETWEEN THERMISTOR AND OVEN MASS SHOULD BE GREATER THAN 100 MEG OMMS
- 5. THIS AREA OF THE CIRCUIT BOARD IS HIGH IMPEDENCE. THE AREA MUST REMAIN CLEAN.
- 6. THE VOLTAGE GAIN FROM Q9(BASE) TO Q9 (COLLECTOR) IS APPROXIMATELY 2 WITH A 50 OHM LOAD ON THE OUTPUT.
- R20 IS SELECTED TO MATCH CRYSTAL YI. IF YI IS REPLACED, THE SUPPLIED R20 MUST BE USED. SEE PARAGRAPH 8-68(B).
- 8. ALL VALUES OF CAPACITANCE IN PICOFARADS AND INDUCTANCE IN MICROHENRIES UNLESS OTHERWISE SPECIFIED.
- 9. ALL VOLTAGES MEASURED WITH 12Y TO THE OSCILLATOR CIRCUITS AND 20Y TO THE OVEN CIRCUITS.
- IO. WHEN REINSTALLING Q7 AND Q8 INTO THE OVEN MASS, TIGHTEN THE MOUNTING SCREWS TO 5 IN-LBS (44 NEWTON-METERS). IF Q7 AND/OR Q8 IS TO BE REPLACED, SEE PARAGRAPH 8-18(D).



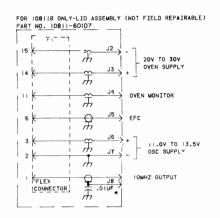


Figure 8-15. 10811A/B Oscillator Schematic Diagram

 




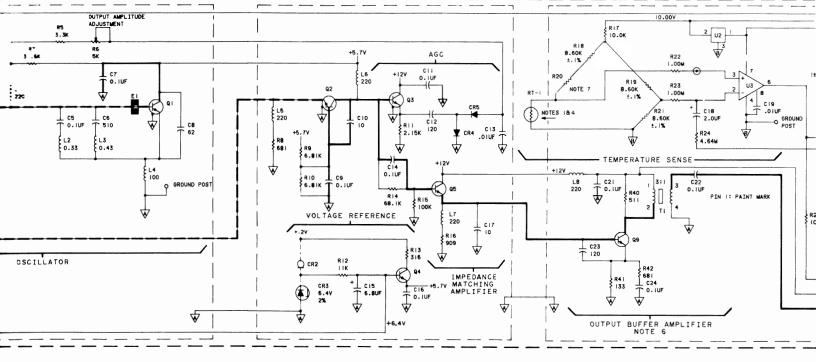



I. WHEN RECONNECTING TO A. REMOVE ALL SOLD B. INSERT THE THER THROUGH THE HOL SHOULD SEAT AGA BELOW.


Q2(C) Q2(B) Q2(E)
Q3(E) Q3(B) Q3(C)
Q4(C) Q4(E) Q4(B)
Q5(C)
Q5(B)
Q5(E)/Q9(B)
Q5(C)
Q5(B)
Q5(C)
Q5(B)
Q5(C)
Q5(B)
Q5(C)

- 2. THE VOLTAGE AT Q6(CC VOLTAGE ±10%. SEE
- 3. SEE PARAGRAPH 8-68() WHEN REINSTALLING TO MOUNTING NUT TO A TO
- 4. THERMISTOR ROOM TEM 100K THERMISTO CANNOT BE REPLACED THERMISTOR AND OVEN
- THIS AREA OF THE CI MUST REMAIN CLEAN.
- 6. THE VOLTAGE GAIN FR APPROXIMATELY 2 WIT
- 7. R20 IS SELECTED TO THE SUPPLIED R20 MU
- 8. ALL VALUES OF CAPAC MICROHENRIES UNLESS
- 9. ALL VOLTAGES MEASUR AND 20V TO THE OVEN
- 10. WHEN REINSTALLING Q THE MOUNTING SCREWS AND/OR Q8 IS TO BE

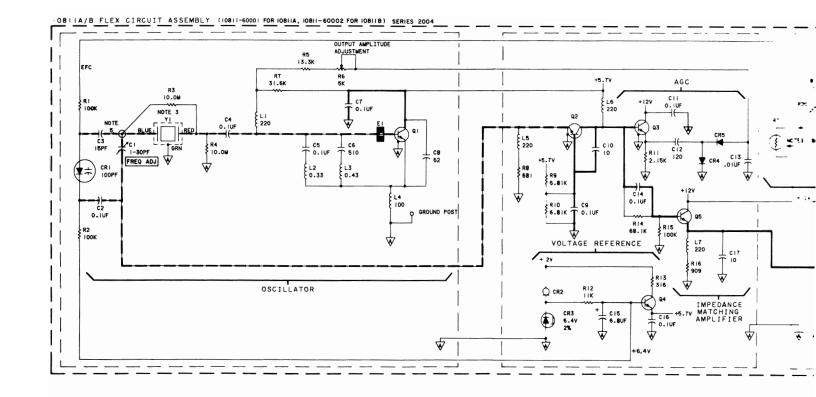

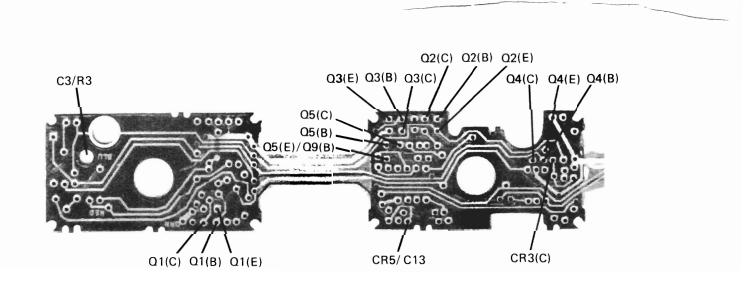

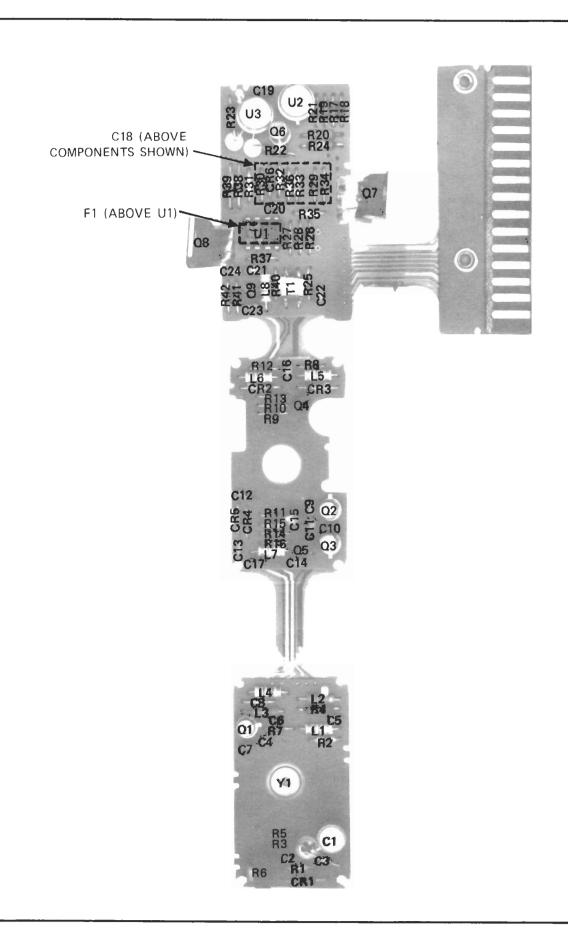

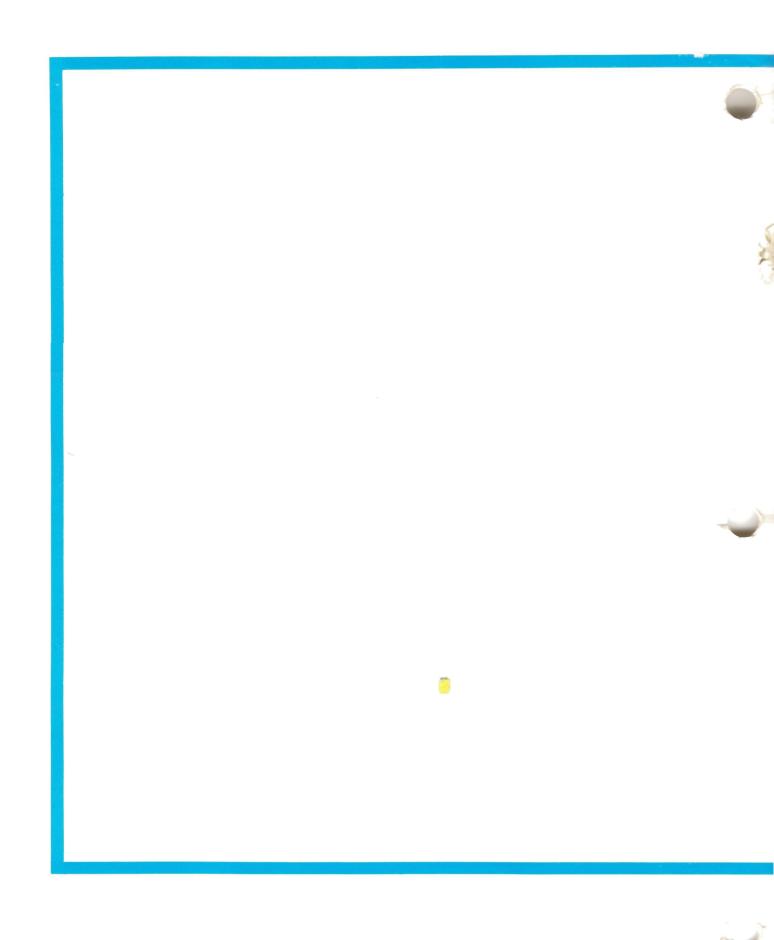





Printed in U.S.A.

CHANGE DATE: April 26, 1990

\* \* \* \* MANUAL IDENTIFICATION \* \* \* \* \* \* \* \* MANUAL UPDATING COVERAGE\* \* \* \* \* Instrument: Model 10811A/B Quartz Crystal \* \* Oscillator \* This supplement adapts your manual \* to instruments with serial numbers \* Operating & Service \* \* prefixed through 3010A. Manual \* \* \* Manual Part No: 10811-90002 \* \* Manual Microfiche: 10811-90003 \* \* Manual Print Date: August 1980 \* \* \* \* \* \* \* \* \* \* \* \* \* \* \* \* \* \* \*

#### ABOUT THIS SUPPLEMENT

The information in this supplement is provided to correct manual errors and to adapt the manual to instruments containing changes after the manual print date.

Change and correction information in this supplement is itemized by page numbers corresponding to the original manual pages. The pages in this supplement are organized in numerical order by manual page number.

# HOW TO USE THIS SUPPLEMENT

Insert this title page in front of the title page in your manual.

Perform all changes specified for "All Serials", and all changes through the Series Prefix of your instrument or board.

Insert any complete replacement pages provided into your manual in the proper location.

If your manual has been updated according to the last edition of this supplement, you need only perform those changes pertaining to the new series prefix. See List of Effective Pages on the reverse side of this page. New information affecting "All Serials" will be indicated by a "#" in front of the page number.

# LIST OF EFFECTIVE PAGES

***	**********	**************************************
*	SERIAL PREFIX OR SERIAL NUMBER	PAGES *
***	*********	************
	All Serials	1-2, 1-3, 1-19, 1-20, 1-21, 2-3, 2-4, 2-6 3-2, 4-4, 4-5, 5-6, 4-7, 5-2, 5-3, 5-4, 6-4, 6-6, 8-3, 8-15, 8-16, 8-17, 8-21, 8-25
	2048A	6-4, 8-25
	2132A	6-4, 8-25
	2216A	1-2, 6-6
	2244A (10811B only)	1-3, 6-4, 8-25, 5, 6-4, 6-5, 6-6, 8-17, 8-25
	2332A (10811A only)	1-3, 6-4, 8-25, 5, 6-4, 6-5, 6-6, 8-17, 8-25
	2850A	6-4, 8-17, 8-25
	3010A	6-4

# PLEASE NOTE

This instrument incorporates a new method for tracking changes to its circuit boards. Starting July 1, 1988, all circuit boards will be labeled with a unique serial number. The SERIAL number will replace the previously used SERIES number, even though there may have been no change to the circuit board. Thus, if changes were made after July 1, 1988, they will be documented in this change sheet using the new circuit board SERIAL number. Changes made before that time are documented with the SERIES number.

Therefore, Circuit changes described in this change sheet may reference either the older SERIES number or the new SERIAL number. Using both numbers enables this change sheet to support both older and newer products. To determine which changes apply to your instrument, find the instrument's serial number prefix located on the rear panel, and make the manual changes indicated in this change sheet for that serial number prefix. For example, if the serial number is 2804A12345, make changes to the manual indicated for serial prefix 2804.



CHANGES

#### INSIDE FRONT COVER - WARRANTY:

All Serials >Add the following:

#### NOTE

The Oscillators in the Replacement Kits with the following part numbers are covered by Hewlett-Packard's standard 90-day parts warranty: 00105-6112 10544-60041 05061-6170

05065-6097

10544-60040 05245-60038

# PAGE 1-2. TABLE 1-1. SPECIFICATIONS:

All Serials

>Add asterisks (\*\*) next to the title, "PHASE NOISE RATIO" (table in upper right corner).

Frequency Stability:

>Add asterisks (\*\*) next to the following titles:

"LONG TERM (AGING RATE)"

"SHORT TERM"

"TEMPERATURE"

"GRAVITATIONAL FIELD"

"MAGNETIC FIELD"

#### Frequency Stability:

>Change Long Term (Aging Rate) to read as follows:

- A. <5 X 10-10 per day after 24-hour warm-up when:
  - 1. oscillator off-time was less than 24 hours
  - 2. oscillator aging rate was <5 X 10-10 per day prior to turn-off.
- B.  $\langle 5 \text{ X } 10^{-10} \text{ per day in less than } 30 \text{ days of continu-}$ ous operation for off-time greater than 24 hours.
- C. <1 X 10-7 per year for continuous operation.

>Change the Warmup spec to read as follows: Within  $5 \times 10-9$  of final value (see below) 10 min after turn-on when:

- 1. oscillator is operated in a 25-degree C environment with 20-Vdc Oven Supply voltage applied.
- 2. oscillator off-time was less than 24 hours.
- 3. oscillator aging rate was <5 X 10-10 per day prior to turn-off.

Final value is defined as oscillator frequency 24 hours after turn-on.

CHANGES

# PAGE 1-2, TABLE 1-1. SPECIFICATIONS (Cont'd):

>Delete Notes 1 and 2.

>Add the following note to the bottom of the table:

\*\*Various versions of the oscillator may have specifications different from those shown in Table 1-1, Specifications. See Paragraph 1-19 for more details.

Accessories Available:

>Change Service Manual part number from "19811-90002" to "10811-90002".

2216A

Temperature:

>Change <4.5X10-9 to, <1.5X10-8. >Change <2.5X10-9 to, <7X10-9.

#### Page 1-3. General Information:

All Serials

>Add the following to paragraph 1-16:

#### MOTE

Certain 10811-6XXXX oscillators are not field repairable. See NOTE in Section VIII, page 8-1.

>Replace paragraphs 1-19 through 1-21 with the following:

1-19. SPECIFICATIONS FOR OTHER 10811A/B OSCILLATORS

1-20. There are several versions of the 10811A/B Oscillator. These versions may have specifications that are different from those shown in Table 1-1. These oscillators are labeled with a part number in the form of 10811-6XXXX.

1-21. Table 1-1a lists the oscillators and the specifications which are different from the standard 10811A or 10811B.

# **CHANGES**

# PAGE 1-3. GENERAL INFORMATION (Cont'd):

# All Serials

Table 1-1a. Specifications for Other Versions of the 10811A/B

HP Part Number	Frequency Domain	Long Term   (Aging Rate)	Gravitational Field	Magnetic   Field	Time Domain	Temperature
10811-60101	PDS	PDS	PDS	PDS	PDS	Frequency change less than 7 X 10-9 for temperature change of 0 to 71 deg C.
10811-60102	PDS	PDS	PDS	PDS	PDS	Frequency change less than 7 X 10-9 for temperature change of 0 to 71 deg C.
10811-60105	MS	1.5 % 10-9/day	NS	NS	1 X 10-11 at 1 second only	Frequency change less than 7 X 10-9 for temperature change of 0 to 71 deg C.
10811-60109	-95 dBc at 1 Hz All other points PDS	PDS	PDS	NS	2.5 % 10-12 at 1 second. All otner points PDS	Frequency change less than 7x10-9 for temperature change of 0 to 71 deg C.
10811-60111 (	PDS	PDS	MS	NS	1 X 10-11 at is second only	Frequency change less than 7x10-9 for temperature change of 0 to 71 deg C
10811–60116*   	-155 dBc at 1 KHz only	1.5 X 10-9/day	MS		1 X 10-11 at 1 second only	Frequency change less than 1 % 10-7 for temperature change of 0 to 71 deg C.
10811-60209   	Hz dBc 1 -103 10 -133 100 -153 1K -162 10K -162	PDS	MS ;	MS	1 X 10-11 ; 1 second only ;	Frequency change less than 7X10-9 for temperature change of 0 to 71 deg C.
10811-60211	MS	7.0 X 10-10/week	MS :		1 X 10-11 at ; 1 second only ;	Frequency change less than 7 X 10-9 for temperature change of 0 to 71 deg C.

Other 10811-60116 apecifications which differ from standard 10811B are:

Oscillator Supply Sensitivity: <= 1E-8 for a 1% change

Oven Supply Sensitivity: <= 1E-9 for a 10% change

Coarse Fraquency Range: >= +-8E-7 (+-8 Hz)

EFC Range: Not Specified

Voltage Output: 0.5 Vrms Nominal (into 50 orms)

NOTES: NS= Not Specified PDS= Per Data Sheet

CHANGES

# Page 2-3. INSTALLATION

All Serials

Oven Monitor LED Circuit:

>Change the diode and transistor description to "GENERAL PURPOSE SI DIODE AND TRANSISTOR".

Figure 2-3. 10811A Supply and Oven Connections: >Add to Note 2: "...and the outer housing".

### Page 2-4. Installation:

All Serials

Figure 2-4. 10811B Supply and Oven Connections: >Change mounting stud screw size from 6-32 to 4-40, in center of the drawing.

>Add note to table in paragraph 2-22, "For 10811B Only".

>Add the following table of parts for cable part number 10811-60151 for use with the 10811-60102.

Description	Qty	HP Part No.	Berg Part No.
Connector-Shell	1	1251-4492	65039-031
Connector-Sgl Cont	5	1251-4182	47565
Keying Plug-Post Conn	5	1251-3808	65307-001

#### Page 2-6. Installation:

All Serials

Paragraph 2-36. Environment, Altitude specification: >Change the K in Km to lower-case k.

CHANGES

#### Page 3-2 Operation:

All Serials

Paragraph 3-9f, FREQUENCY ADJUSTMENT PROCEDURE: >Add a minus sign(-) to the front of the formula as shown:

$$-\frac{\Delta \text{ FREQUENCY}}{\text{FREQUENCY}} = \frac{\Delta \text{ TIME}}{\text{TIME}}$$
OR
$$-\frac{\Delta F}{f} = \frac{\Delta t}{t}$$

>Add a minus sign (-) to the front of the example
formula as shown:

$$-\frac{\Delta f}{f} = \frac{1 \text{ div} \times 0.01 \ \mu \text{s/div.}}{10 \text{ s}} = -1 \times 10^{-9}$$

### Page 4-4. Operational Verification:

All Serials

Table 4-2. Operational Verification Procedure (Cont'd)
Step 4, Short Term Stability:
>Delete the HP-IB bus line connected to 10811A/B, 5065A
and K79-59992A. The HP-IB bus line in the setup figure

and K79-59992A. The HP-IB bus line in the setup figure should connect to the 9825A Calculator and the 5345A Electronic Counter ONLY.

#### Page 4-5. Operational Verification:

All Serials

Table 4-2. Operational Verification Procedure (Cont'd) Step f, Short-Term Stability:

>Change step "f" to read: "Type the program from Figure 5-1 into the 9825A calculator. (See paragraph 4-13 for use of other controllers and counters)".

CHANGES

# Page 4-6. Operational Verification:

All Serials

OPTIONAL CONTROLLERS AND COUNTERS:

>Replace Figures 4-1 and 4-2 with figures 4-1 and 4-2 in these Manual Changes. Figure 4-1 should be the HPL program for the 9825A, and Figure 4-2 should be the Basic program for the 9835A. The figures are reversed in the manual.

>Change paragraph 4-15 to read: "Figure 4-2 lists the program for the 9835A Calculator".

#### Page 4-7. Operational Verification:

All Serials

Table 4-3. 5316A Program Codes: >Replace the table with the following:

INTRIATOGAOWAIRE

# Page 5-2. Adjustments:

All Serials

Paragraph 5-13. Offset Calculation: >Add a minus sign to the front of the formulas as shown:

$$-\frac{\Delta f}{f} = \frac{\Delta t}{t}$$

$$-\frac{\Delta f}{f} = \frac{-5 \times 0.01 \,\mu\text{s/div.}}{10 \,\text{s}} = -5 \times 10^{-9}$$

# Page 4-6, Figures 4-1, 4-2:

```
0:
 1: "Short term stability test 10811A/B":
 2: "100 Samples is standard value":ent "Enter number of samples",S
 3: Ø→L
 4: "5345A Codes":wrt 718,"[2E1<:8"
 5: "Empty dummy buffer":red 718,A
 6: "First measurement":red 718,A
 7: Ø→C
 8: for L=1 to S
 9: "Successive measurements":red 718,8
10: C+(A-B)12→C
11: B→A
12: fxd Ø
13: dsp L
14: next L
15:
16: flt 1
17: "Short term stability formula":prt "STS=",√(C/(2*L))/1e7
18: gto 5
19: stp
```

Figure 4-1. HPL Program


```
10: ! Short term stability test 10811A/B
 20: INPUT "Enter number of samples", Samples
                                                  1100 Samples is standard value
 30: Loop=Ø
 40: OUTPUT 7,18;"12E1<:8"
                                15345A Codes
 50: ENTER 7,18;A
                      !Empty dummy buffer
 60: ENTER 7,18; A
                      !First measurement
 70: Count=Ø
 80: FOR Loop=1 TO Samples
90: ENTER 7,18;B !Succe
100: Count=Count+(A-B)12
                     Successive measurements
110: A=B
120: FIXED Ø
130: DISP Loop
140: NEXT Loop
150: PRINTER IS Ø
160: FLOAT 1
170: PRINT "STS=";SQR(Count/(2*Loop))/1E7
                                                IShort term stability formula
180: GOTO 50
190: STOP
```

Figure 4-2. BASIC Program

CHANGES

# Page 5-3. Adjustments:

 All Serials Figure 5-2. 10811A Amplitude Adjustment Set-up: >Change the figure to match the following figure:



# Page 5-4 Adjustments:

All Serials

Step 6, Fifth line:

>Change the word "Micon" to "SMB".

Figure 5-3. 10811B Amplitude Adjustment Set-up: >Change the adapter description from "Micon-BNC" to "SMB-BNC".


#### Page 6-1. Replaceable Parts:

All Serials

>Add the following Note before paragraph 6-1:

OTE

Certain 10811-6XXXX oscillators are not field repairable. See NOTE in Section VIII, page 8-1.

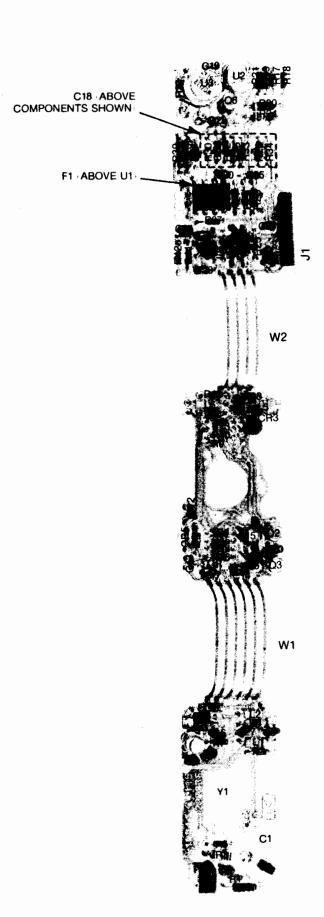

Part of Figure 8-15 10811A/B Component Locator SERIES 2244 (10811B) SERIES 2332 (10811A)

#### CHANGES

Page 6-4	Table 6-1	108114/R	(10811-60001)	Penlaceable	Parte:
FARE U-4.	. IADIE D-I	. TOOTIWAD	I TOOTT - DOODT 1	Kentaceante	PAILS:

All Serials >Add 10811-60002 to HP part number 10811-60001. The 10811-60001 is used in the "A" model and the 10811-60002 is used in the "B" model. >Change R6 from 2100-2489, 5K to 2100-2522, 10K R VAR. 2048A >Change C9 and C11 from 0160-0576 .1UF to 0160-4019, CAPACITOR-FXD .01UF, 50V. 2132A >Add C25 0160-3277 CAPACITOR-FXD .01UF +-20% 50VDC CER (150-050-X7R-103M). 2244A (10811B) >Change the HP part number for the 10811B board to 10811-60115 for 10811A/B, Series 2244. 2332A (10811A) >Add C26 0160-3879 CAPACITOR-FXD .01UF +-20% 100VDC CER. >Add C27 0160-3872 CAPACITOR-FXD 2.2PF +-.25PF 200VDC CER. >Add for B only Q7 and Q8 1854-0701 TRANSISTOR NPN SI DARL TO-220AB PD=70W. >Change 10811-60001 to 10811-60115 for 10811A/B. >Add reference designator Al to 10811-60115 circuit board. >Change Q7, Q8 from 10811-80001 to 1854-0701 TRANSISTOR-NPN SI DARL TO-220AB PD-70W. 2850A Oscillator Board Assembly Date Code 88471.

>Change part number 10811-60115 to 10811-60004.

>Change Fl from 2110-0617 to 2110-0801 FUSE-THERMAL 109 DEG C AX UL CSA.

C AX UL CSA

3010A >Change F1 from 2110-0801 to 10811-80008, FUSE-THERMAL 115 115-DEG C.

#### Page 6-4, Table 6-1. 10811A/B (10811-60001) Replaceable Parts:

All Series >Oscillator Replacement Kit 10811-60117 replaces 10811-60001, 10811-60002, and 10811-60115 for service replacement.

# Page 6-5, Table 6-1. 10811A/B Replaceable Parts:

2244A (10811B) >Add W1 8120-4013 FLAT RIBBON ASSY, 6-COND.
2332A (10811A) >Add W2 8120-4014 FLAT RIBBON ASSY, 4-COND.
>Add W3 8120-3817 FLAT RIBBON ASSY, 7-COND. (10811A only)
>Add note to Y1 "Not part of replacement A1 board".

Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
					20,400	10811-60004
A1	10811-60004		1	OSCILLATOR ASSEMBLY (DATE CODE 88471)	28480	
C1 C2	0121-0511 0160-0576	6	9	CAPACITOR, TUNING CAPACITOR-FXD .1UF +-20% 50VDC CER	28480 28480	0121-0511 0160-0576
C3	0160-4789 0160-0576	0	1	CAPACITOR-FXD 15PF +-5% 100VDC CER 0+-30 CAPACITOR-FXD .1UF +-20% 50VDC CER	28480 28480	0160-4789 0160-0576
C4 C5	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
C6	0160-4935	8	1	CAPACITOR-FXD 510PF +-1% 100VDC CER	72982	8121-100-C0G0-511F
C7	0160-0576 0160-5110	3	,	CAPACITOR-FXD .1UF +-20% 50VDC CER CAPACITOR-FXD 62PF +-1% 50VDC CER 0+-30	28480 28480	0160-0576 0160-0576
C8 C9	0160-4019	9	2	CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-4019
C10	0160-3874	2	2	CAPACITOR-FXD 10PF +SPF 200VDC CER	28480	0160-3874
C11	0160-4019	9		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-4019
C12 C13	0160-4512 0160-3879	7	2 5	CAPACITOR-FXD 120PF +-5% 200VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER	51642 28480	200-200-NP0-121J 0160-3879
C14	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
C15	0180-3066	6	1	CAPACITOR-FXD 6.8UF +-10% 35VDC TA	28480	0180-3066
C16	0160-0576 0160-3874	5 2		CAPACITOR-FXD .1UF +-20% 50VDC CER CAPACITOR-FXD 10PF +5PF 200VDC CER	28480 28480	0160-0576 0160-3874
C17 C18	0160-3874	2	1	CAPACITOR-FXD 10FF +-20% 50VDC MET POLYE	20400	0160-4947
C19 C20	0160-3879 0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER	28480 28480	0160-3879 0160-3879
	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
C21 C22	0160-0576	5		CAPACITOR-FXD .1UF +-20% SOVDC CER	28480	0160-0576
C23	0160-4512	?		CAPACITOR-FXD 120PF +-5% 200VDC CER CAPACITOR-FXD .1UF +-20% 50VDC CER	51642 28480	200-200-NP0-121J 0160-0576
C24 C25	0160-0576 0160-3879	7		CAPACITOR-FAD .10F +-20% 100VDC CER	28480	0160-0576
C26 C27	- 0160-3879 0160-3872	7	1	CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD 2.2PF +2SPF 200VDC CER	28480 28480	0160-0576 0160-3872
CR1	0122-0244	4	1	DIODE-VVC 100PF 5% C4/25-MIN=2 BVR=30	28480	0122-0244
CR2	1901-0869	2	1	DIODE-CUR RGLTR 1N5297 DO=7	04713	1N5297
CR3 CR4	1902-0984 1901-0535	9	1 3	DIODE-ZNR 6.4V 2% DO=7 PD=.4W TC=+.002% DIODE-SCHOTTKY	28480 28480	1902-0984 1901-0535
CR5	1901-0535	9	ı °	DIODE-SCHOTTKY	28480	1901-0535
CR6	1901-0535	9		DIODE-SCHOTTKY	28480	1901-0535
E1	9170-0029	١.	!	FERRITE BEAD (FOR Q1)	28480 28480	9170-0029 2110-0801
F1 J1	2110-0801 1200-0868	6 5	;	FUSE, THERMAL 109-DEG C AX UL CSA SOCKET, STRIP 7-CONT SIP DIP-SLDR	28480	1200-0868
L1	9100-2280	5	5	INDUCTOR-CH-MLD 220UH 10% .105DX.26LG	28480	9100-2280
L2	9140-0352	2	1 1	INDUCTOR-RF-CH-MLD 330NH 1% .105DX .26 LG INDUCTOR-RF-CH-MLD 430NH 1% .105DX .26 LG	28480 28480	9140-0352 9140-0353
L3 L4	9140-0353 9100-2276	9	1	INDUCTOR-RF-CH-MLD 100UH 10% .1050X .26LG	28480	9100-2276
L5	9100-2280	5		INDUCTOR-RF-CH-MLD 220UH 10% .105DX .26LG	28480	9100-2280
L6		5		INDUCTOR-RF-CH-MLD 220UH 10% .105DX .26LG INDUCTOR-RF-CH-MLD 220UH 10% .105DX .26LG	28480 28480	9100-2280 9100-2280
L7 L8	9100-2280 9100-2280	5 5		INDUCTOR-RF-CH-HLD 220UH 10% .105DX .26LG INDUCTOR-RF-CH-HLD 220UH 10% .105DX .26LG	28480	9100-2280
Q1	1854-0853	3	3	TRANSISTOR, SPL 2N5179	28480	1854-0853
02 03	1854-0853 1854-0853	3		TRANSISTOR, SPL 2N5179 TRANSISTOR, SPL 2N5179	28480 28480	1854-0853 1854-0853
Q4	1854-0831	7	2	TRANSISTOR NPN 2N6429A TO-92 PD=625MJ	04713	2N6429A
<b>Q5</b>	1854-0831	7		TRANSISTOR NPN 2N6429A TO-92 PD=625MU	04713	2N6429A
Q6 07	1854-0023 10811-80001	9	1 2	TRANSISTOR NPN SI TO-18 PD=360MW TRANSISTOR NPN SI DARL TO-220AB PD=70W	28480 28480	1854-0023 10811-80001
Q7 Q8	10811-80001	0	_	TRANSISTOR NPN SI DARL TO-220AB PD=70W	28480	10811-80001
Q9	1854-0833	9	1	TRANSISTOR NPN PD=600MW FT=600 MHZ	28480	1854-0833
R1	0698-7284	5	5	RESISTOR 100K 1% .05W F TC=0+-100 RESISTOR 100K 1% .05W F TC=0+-100	24546 24546	0698-7284 0698-7284
R2 R3	0698-7284	5 8		RESISTOR 100K 1% .05M F 1C=0+-100 RESISTOR 10M 1% .125W F TC=0+-100	28480	0699-0073
R4 R5	0699-0073 0698-7263	8		RESISTOR 10M 1% .125W F TC=0+-100 RESISTOR 13.3K 1% .05W F TC=0+-100	28480 24546	0699-0073 C3-1/8-T0-1332-G
	1	۱			5.0	
R6 R7	2100-2522 0698-7272	ı	;	RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN RESISTOR 31.6K 1% .05W F TC+0+-100	24546	C3-1/8-T0-3162-G
R8	0698-7232 0698-7256	3	2 2	RESISTOR 681 1% .05W F TC=0+-100 RESISTOR 6.81K 1% .05W F TC=0+-100	24546 24546	C3-1/8-T0-681R-G C3-1/8-T0-6811-G
R9 R10	0698-7256	H	<b>'</b>	RESISTOR 6.81K 1% .05W F TC=0+-100	24546	C3-1/8PTO-6811-G-
•						
					1	

Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
R11 R12 R13 R14 R15	0698-7244 0698-7261 0698-7224 0698-7280 0698-7284	7 8 3 1 5	1 1 1	RESISTOR 2.15K 1% .05W F TC=0+-100 RESISTOR 11K 1% .05W F TC=0+-100 RESISTOR 316 1% .05W F TC=0+-100 RESISTOR 68.1K 1% .05W F TC=0+-100 RESISTOR 100K 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-2151-G C3-1/8-T0-1102-G C3-1/8-T0-6812-G C3-1/8-T0-1003-G C3-1/8-T0-1003-G
R16 R17 R18 R19 R20*	0698-7235 0698-7260 0698-3903 0698-3903 0698-0096	6 7 7 7 3	1 2 5	RESISTOR 909 1% .05W F TC=0+-100 RESISTOR 10K 1% .05W F TC=0+-100 RESISTOR 8.6K .1% .05W F TC=0+-10 RESISTOR 8.6K .1% .05W F TC=0+-10 RESISTOR 968 1% .125W F TC=0+-100	24546 24546 28480 28480 03888	C3-1/8-TO-909R-G C3-1/8-TO-909R-G 0698-3903 0698-3903 PME55-1/8-TO-9680-F
R20* R20* R20* R20*	0698 - 3495 0698 - 3512 0698 - 3700 0698 - 4014	2 4 2 3	1 1 1	RESISTOR 866 1% .125W F TC=0+-100 RESISTOR 1.18K 1% .125W F TC=0+-100 RESISTOR 715 1% .125W F TC=0+-100 RESISTOR 787 1% .125W F TC=0+-100	24546 24546 24546 24546	C4-1/8-TO-866R-F C4-1/8-TO-1181-F C4-1/8-TO-715R-F C4-1/8-TO-787R-F
R20* R20* R20* R20* R20*	0698-4196 0698-4460 0698-4465 0698-4469 0698-5852	2 3 8 2 9	1 1 1 1	RESISTOR 1.07K 1% .125W F TC=0+-100 RESISTOR 649 1% .125W F TC=0+-100 RESISTOR 931 1% .125W F TC=0+-100 RESISTOR 1.15K 1% .125W F TC=0+-100 RESISTOR 500 1% .125W R TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1071-F C4-1/8-T0-649R-F CR-1/8-T0-931R-F C4-1/8-T0-1151-F C4-1/8-T0-500R-F
R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup>	0698-6970 0698-6973 0698-6981 0698-7201 0698-7207	4 7 7 6 2	1 1 1 1	RESISTOR 1.04K .5% .125W F TC=0+-50 RESISTOR 1.25K .25% .125W F TC=0+-25 RESISTOR 1.29K .5% .125W F TC=0+-50 RESISTOR 34.8 1% .05W F TC=0+-100 RESISTOR 61.9 1% .05W F TC=0+-100	28480 28480 28480 24546 24546	0698-6970 0698-6973 0698-6981 C3-1/8-T00-34R8-G C3-1/8-T00-619R-G
R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup>	0698-7212 0698-7214 0698-7217 0698-7219 0698-7220	9 1 4 6 9	1 1 1 1 2	RESISTOR 100 1% .05W F TC=0+-100 RESISTOR 121 1% .05W F TC=0+-100 RESISTOR 162 1% .05W F TC=0+-100 RESISTOR 196 1% .05W F TC=0+-100 RESISTOR 215 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-100R-G C3-1/8-T0-121R-G C3-1/8-0-182R-G C3-1/8-T0-196R-G C3-1/8-T0-215R-G
R20* R20* R20* R20* R20*	0698-7222 0698-7223 0698-7224 0698-7225 0698-7226	1 2 3 4 5	1 1 2 1	RESISTOR 261 1% .05W F TC=0+-100 RESISTOR 287 1% .05W F TC=0+-100 RESISTOR 316 1% .05W F TC=0+-100 RESISTOR 348 1% .05W F TC=0+-100 RESISTOR 383 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-261R-G C3-1/8-T0-287R-G C3-1/8-T0-316R-G C3-1/8-T0-348R-G C3-1/8-T0-383R-G
R20* R20* R20* R20* R20*	0698-7227 0698-7228 0698-7229 0698-7230 0698-7231	6 7 8 1 2	1 1 2 1	RESISTOR 422 1% .05W F TC=0+-100 RESISTOR 464 1% .05W F TC=0+-100 RESISTOR 511 1% .05W F TC=0+-100 RESISTOR 562 1% .05W F TC=0+-100 RESISTOR 619 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-422R-G C3-1/8-T0-464R-G C3-1/8-T0-511R-G C3-1/8-T0-562R-G C3-1/8-T0-619R-G
R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup>	0698-7232 0698-7233 0698-7234 0698-7235 0698-7236	3 4 5 6 7	4 1 1 2	RESISTOR 681 1% .05W F TC=0+-100 RESISTOR 750 1% .05W F TC=0+-100 RESISTOR 825 1% .05W F TC=0+-100 RESISTOR 909 1% .05W F TC=0+-100 RESISTOR 1K 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-681R-G C3-1/8-T0-750R-G C3-1/8-T0-825R-G C3-1/8-T0-909R-G C3-1/8-T0-1001-G
R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup> R20 <sup>th</sup> R21	0698-7237 0698-7238 0698-7239 0757-1100 0698-3903	8 9 0 8 7	1 1 1	RESISTOR 1.1K 1% .05W F TC=0+-100 RESISTOR 1.21K 1% .05W F TC=0+-100 RESISTOR 1.33K 1% .05W F TC=0+-100 RESISTOR 600 1% .125W F TC=0+-100 RESISTOR 8.6K .1% .05W F TC=0+-10	24546 24546 24546 24546 28480	C3-1/8-T0-1101-G C3-1/8-T0-1211-G C3-1/8-T0-1331-G C3-1/8-T0-801-F 0698-3903
R22 R23 R24 R25	0698-8827 0698-8827 0699-0071 0698-7273	4 4 6 2	1 1	RESISTOR 1M 1% .125W F TC=0+-100 RESISTOR 1M 1% .125W F TC=0+-100 RESISTOR 4.64M 1% .125W F TC=0+-100 RESISTOR 34.8K 1% .05W F TC=0+-100	28480 28480 28480 24546	0698-8827 0698-8827 0699-0071 CE-1/8-T0-3482-6
R26 R27 R28 R29 R30	0698-3903 0698-3903 0698-7260 0698-7267	77771		RESISTOR 8.6K .1% .05W F TC=0+-10 RESISTOR 8.6K 1% .05W F TC=0+-10 RESISTOR 10K 1% .05W F TC=0+-100 RESISTOR 10K 1% .05W F TC=0+-100 RESISTOR 19.6K 1% .05W F TC=0+-100	28480 28480 24546 24546 24548	0698-3903 0698-3903 C3-1/8-T0-1962-G C3-1/8-T0-1002-G C3-1/8-T0-1962-G
R31 R32 R33 R34 R35	0698-7220 0698-7250 0698-7284 0698-7247 0698-7250	9 5 5 0 5	1 2	RESISTOR 215 1% .05W F TC=0+-100 RESISTOR 3.8K 1% .05W F TC=0+-100 RESISTOR 100K 1% .05W F TC=0+-100 RESISTOR 2.87K 1% .05W F TC=0+-100 RESISTOR 3.83K 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-215R-G C3-1/8-T0-3831-G C3-1/8-T0-1003-G CE-1/8-T0-3831-G C3-1/8-T0-3831-G
R36 R37 R38 R39 R40	0698-7284 0698-7232 0698-8812 0698-8812 0698-7229	5 3 7 7 8	2 1 1	RESISTOR 100K 1% .05W F TC-0+-100 RESISTOR 681 1% .05W F TC-0+-100 RESISTOR 1 1% .125W F TC-0+-100 RESISTOR 1 1% .125W F TC-0+-100 RESISTOR 511 1% .05W F TC-0+-100	24546 24546 28480 28480 24546	CE-1/8-TO-1003-G C3-1/8-TO-681R-G 0698-8812 0698-8812

Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
R41 R42	0698-7215 0698-7232	2 3	1	RESISTOR 133 1% .05W F TC=0+-100 RESISTOR 681 1% .05W F TC=0+-100	24546 24546	C3-1/8-T0-133R-G CE-1/8-T0-681R-G
T1 U1 U2 U3	9100-0423 1826-0611 1826-0316 1826-0072	2 4 9	1 1 1	TRANSFORMER RF WIND 9T PRI & 3T SEC  IC OP AMP GP DUAL 8-DIP-P V REF TO-5 IC OP AMP LOW-BIAS-H-IMPD TO-99	28480 27014 27014 07263	9100-0423 LM2904N LM0070-1H UA208H
⊌1 ⊌2 XF1	8120-4013 8120-4014 1251-2501	7 8 5	1 1 2	CABLE, UNSHIELDED 6-COND CABLE, UNSHIELDED 4-COND CONNECTOR-SGL CONT .022-IN-BSC-SC	28480 28480 28480	8120-4013 8120-4014 1251-2501
YI	10811-60108 3050-0588	7 9	1	CRYSTAL-10MHZ W/R20 TEMP SET (REPAIR ONLY) WASHER-FLAT #6 NM .145 IN-ID-IN-ID	28480 28480	10811-60108 3050-0588
·						
				·		

#### CHANGES

#### Page 6-6, Table 6-1. Replaceable Parts (Cont'd)

All Serials

10811A Miscellaneous Parts:

>Change Mfr Part Number for NYLON INSULATOR to 3050-0791.

>Change the INFO LABEL 10811-60101 part number from 7120-0331 to 7121-0331 and shift the MFR CODE and

MFR PART NUMBER down one space.

>Add 3050-0756, Qty 1, WASHER-INSULATED.

10811B Miscellaneous Parts:

>Change the 05060-6116 to "ADAPTER SMB-BNC" in the description column and in the note following the description.

>Add 3050-0756, Qty 1, WASHER-INSULATED.

2216A

10811A/B Transistor Mounting Hardward:

>Change NYLON INSULATOR TO 3050-1021; WASHER SHLDR.

2244A (10811B) 10811A/B Circuit Board Miscellaneous Parts:

2332A (10811A) >Add reference designator J1 to 1200-0868.

>Add A2, 10811-60003 EDGE CONNECTOR.

2850A

>Add the following transistor mounting hardware:

0340-0765 TRANSISTOR INSULATOR

2200-0139 SCREW 4-40 X .250

WASHER, FLAT 3050-0229

3050-1021 WASHER, SHOULDER

3050-1301 WASHER, BELLEVILLE SPRING

## Page 8-1. Service:

All Serials

>Add the following Note above paragraph 8-1:

REPAIR OF 10811-6XXXX OSCILLATORS:

Should a failure occur in the 10811 High Stability Time Base Oscillator assembly, this assembly should be replaced with a restored unit or a new unit. Repairs to the oscillator are strongly discouraged because of the difficulty in reconfirming the oscillator's specifications after repair.

10811 Oscillator parts list and schematic included in this manual are for reference only.

SERIAL PREFIX OR

SERIES NUMBER

#### **CHANGES**

# Page 8-3. Figure 8-2. 10811A/B OVERALL BLOCK DIAGRAM:

All Serials >

>Change the second from the top AGC connection from

"AGC" to "10 MHz".

>Change the 44 Newton metres to .452 Newton metres in NOTE.

#### Page 8-6. Service:

All Serials

Figure 8-7. Automatic Gain Control (AGC)

>Change "+5.7V" to "+12V" at Q3.

# Page 8-7. Service:

All Serials

>Change "Q5" to "Q4" in last line of paragraph 8-26.

# Page 8-8. Service:

All Serials

Figure 8-9. Voltage References:

>Change "Q5" to "Q4"

#### Page 8-13. Service

All Serials

>Change "removed to thermal fuse" to "removed the thermal

fuse" in caution at top of page.

>Add the following Note before paragraph 8-57:

NOTE

Certain 10811-6XXXX oscillators are not field repairable. See NOTE in Section VIII, page 8-1.

>Change the 44 Newton metres to .452 Newton metres in NOTE.

#### Page 8-15. Service:

All Serials

>Change the beginning of the sentence to read "A SMB to BNC...".

# Page 8-16. Service:

All Serials

Paragraph 8-68, part b:

>Change "44 Newton-meters" in second from last line to

".452 Newton-meters".

2332A

Table 8-1. Temperature Set Resistor List:

>Change last two entries from "jumper" to 8159-0005 RESISTOR

ZERO OHMS 22 AWG LEAD DIA.

**CHANGES** 

# Page 8-17. Service:

All Serials

Paragraph 8-68, part d:

>Change "44 Newton-meters" in second from last line to ".452

Newton-meters".

2244A (10811B)

Special Replacement Considerations, step d:

2332A (10811A) > Change part number 10811-80001 to 1854-0701.

>Delete "have formed leads for easy installation". Sentence

should now read "The replacement transistor for Q7 and

Q8 is 1854-0701."

2850A

>Change "44 Newton-metres (5 in.-lbs.)" to

".452 Newton-metres (4 lbf-in.)" in step d.

>Change paragraph "d" to paragraph "e".

>Add paragraph d:

d. Thermistor Lead Routing. When assembling oven controller board into oven mass, thermistor leads should be routed between oven mass and foam wafer as shown in figure 8-13a, section A-A.

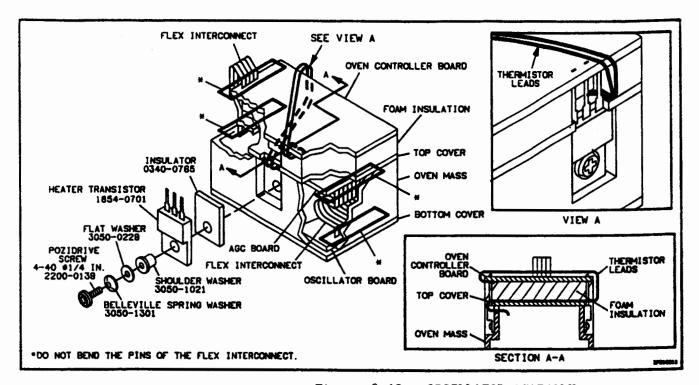


Figure 8-13a. OSCILLATOR ASSEMBLY

This placement of thermistor leads improves frequencyversus-temperature stability. When oven controller

CHA NGES

#### Page 8-17. Service (Continued):

2850A

Paragraph d (continued):

board, foam wafer, and oven mass are assembled they should appear as in view A of figure 8-13a.

>Replace paragraph 8-68e with the following:

e. Oven heater transistors Q7 and Q8: Install each transistor as shown in Figure 8-13a. Torque to 4 lbf.in (.452 N.m.) using hand torque screwdriver.

Transistors must be centered in slots to insure that leads will line up with oven board holes later. Pay careful attention to the direction you install the belleville spring washer; it must be installed with curvature as shown.

#### Page 8-20. Service:

All Serials Change "paragraph 8-58" to "paragraph 8-59" in paragraph 8-90.

#### Page 8-21. Service:

All Serials Paragraph 8-96, third line: >Change Q6(C) to Q2(C).

#### Page 8-22. Service:

All Serials Change "Table 4-3" to "Table 4-2" in paragraph 8-101.

2850A

#### CHANGES

# Page 8-25. Figure 8-15. 10811A/B OSCILLATOR COMPONENT LOCATOR/SCHEMATIC DIAGRAM:

>Change the Series number of the diagram to 2028.
>Complete the connections between U3(7) and U2(1).
>Complete the connection between R30 and the junction of R25 and U2(1).
>Add a circle to signify a teflon standoff at the junction of R23, C18, and U3 pin 2.
>Change 2nd line of note 10 from "(44 NEWTON-METERS)" to (.6 NEWTON-METERS).
>Change "SEE PARAGRAPH 8-18(D)" to "SEE PARAGRAPH 8-68(d)" in the last line of Note 10.

>Change the value of both C9 and C11 to .01U.

2132A >Change the series number at the top of the diagram to 2132. >Add C25, .01UF CAPACITOR, between pins 6 and 7 of U1A.

2244A (10811B) >Add the attached component locator.
2332A (10811A) >Add C26 next to F1 in the upper right-h

>Add C26 next to F1 in the upper right-hand corner of the schematic. Connect one side of C26 to the line that goes to PIN6 of the EDGE CONNECTOR and the other side to ground A.

>Add C27 (2.2 pF) in parallel to L1.

>Change 10811-60001 for 10811A to 10811-60115, series 2244. >Add Pin 1 callout to edge connector photo. Pin 1 is end pin nearest W3.


>Add A2 reference designator to Edge Connector board in photograph.

>Add W1 reference designator to 6-COND Flat Ribbon Assy between Oscillator and AGC.

>Add W2 reference designator to 4-COND Flat Ribbon Assy between AGC and Oven Controller.

>Add W3 reference designator to 7-COND Flat Ribbon Assy between Oven Controller and Edge Connector.


>Replace 10811-60015 (Series 2244) component locator/schematic diagram with new 10811-60004 (Date Code 88471) component locator and schematic diagram supplied in these manual changes.

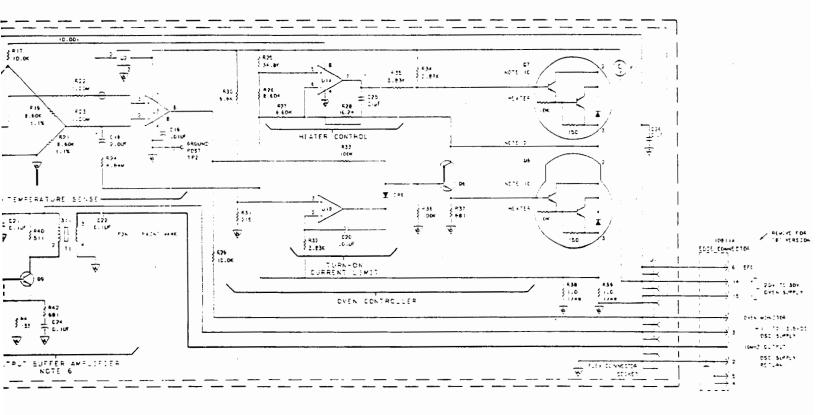

reconnecting the thermistor leads: Inspect bare wire at end of insulation for nicks or other damage.

If camaged, clip off and carefully strip a new end.

Insert thermistor leads into holes in poboard as shown in figure below. Both wire and insulation should be inserted into hole where leads are to be soldered. Bend wires so they will stay in place. Solder from top side of board. Clip leads as close to solder joint as possible.

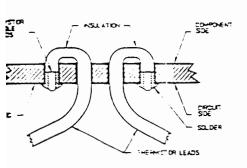

e vohage at O6 (collector) should be .57X in supply voltage ±10%. See Note 9. E paragraph 8-68 (B) before replacing the stal Y1. When reinstalling the crystal into oven mass, tighten mounting nut to a pue of 5 lbf.in (.565 NM).

- Thermistor room temperature resistance is approximately 100K. Thermistor is part of oven mass (MP1) and cannot be replaced separately. Resistance between thermistor and oven mass should be greater than 100 MΩ.
- This area of the circuit board is <u>high</u> impedance. The area must remain clean.
- The vottage gain from Q9 (base) to Q9 (collector) is approximately 2 with a 50Ω load on the output.
- R20 is selected to match crystal Y1. If Y1 is replaced, the supplied R20 must be used.
   See paragraph 8-68(B).
- All values of capacitance in picofarads and inductance in microhenries unless otherwise specified.
- All voltages measured with 12V to the oscillator circuits and 20V to the oven circuits.
- When reinstalling Q7 and Q8 into the oven mass, tighten the mounting screws to 4 lbf.in (.452 NM). If Q7 and/or Q8 is to be replaced, see paragraph 8-68D.



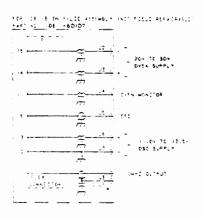



Figure 8-27. Oven Oscillator Circuit Assembly (10811-60004, Date Code 88471)

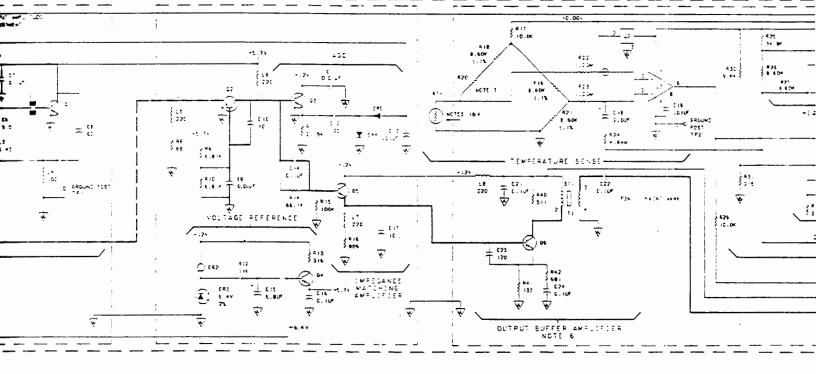

#### NOTES:

- 1. When reconnecting the thermistor leads:
  - A. Inspect bare wire at end of insulation for nicks or other damage.
  - If damaged, clip off and carefully strip a new end.
  - Insert thermistor leads into holes in poboard as shown in figure below.
  - D. Both wire and insulation should be inserted into hole where leads are to be soldered. Bend wires so they will stay in place. Solder from top side of board. Clip leads as close to solder joint as possible.

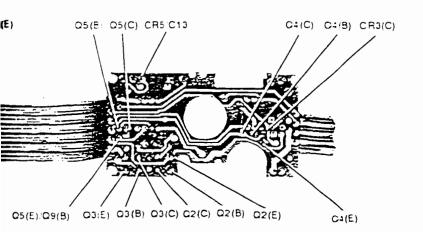

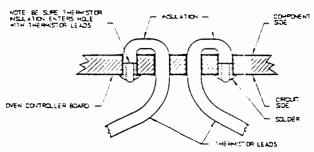

- The voltage at Q6 (∞llector) should be .57X oven supply voltage ±10%. See Note 9.
- See paragraph 6-68 (B) <u>before</u> replacing the crystal Y1. When reinstalling the crystal into the oven mass, tighten mounting nut to a torque of 5 lbf.in (.565 NM).


4.


5. 6.


7


8.

••

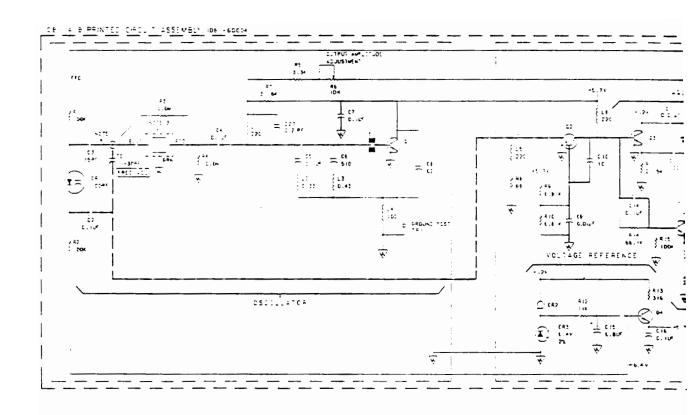

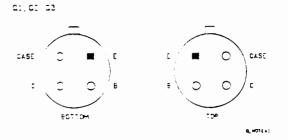

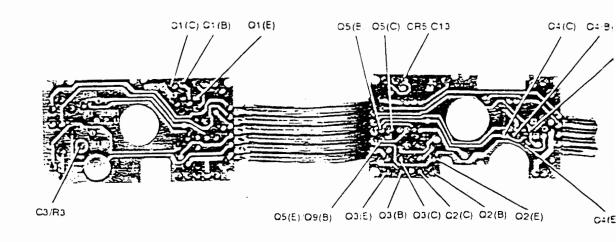

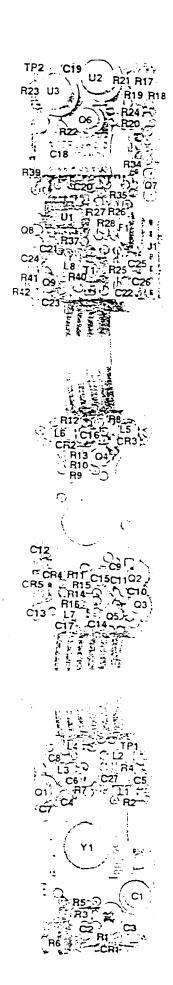

H30 H30 CH6 H32 H33 H39

THESE COMPONENTS UNDER C18