Agilent E5052A Firmware Update

This manual describes how to update the E5052A firmware. When you want to update the E5052A firmware, refer to this manual.

Firmware Update

Required Equipment

- E5052A (with keyboard and mouse).
- Four blank floppy disks (DOS format).

How to make E5052A Firmware Installation Disk

The following is the procedure to make the E5052A Firmware Installation Disk.

- **Step 1.** Copy the following files from Agilent Technologies web site to the four floppy disks using your computer's FDD.
 - disk1 (1 of 4) -- E5052.msi, Setup.vbs
 - disk2 (2 of 4) -- E50521.cab
 - disk3 (3 of 4) -- E50522.cab
 - disk4 (4 of 4) -- E50523.cab

How to update the E5052A firmware

It is possible to update the E5052A firmware, but not the following software by this procedure.

- OS (Operating System)
- VBA (Visual Basic for Application)
- Calibration Constant Data

The following is the procedure to update the E5052A firmware.

- Step 1. Prepare the E5052A firmware installation disks (four disks).
- Step 2. Connect the mouse and the keyboard to the E5052A rear panel. Then turn the E5052A on.
- Step 3. Exit from the E5052A Measurement Display.
 - 1. Press System key.
 - 2. Press **Service Menu Administrator Menu** on the menu bar, and the Password dialog box will appear.
 - 3. Enter the password **E5052** into the Password box.
 - 4. Press Exit E5052A OK on the menu bar.
- Step 4. Double-click the "My Computer" icon on the Windows desktop.
- Step 5. Insert the E5052A firmware installation disk1 (1 of 4) into the FDD of the E5052A.
- Step 6. Double-Click the "3 1/2 Floppy [A:]" icon.

- Step 7. Remove the old version of the firmware using the following procedure.
 - 1. Double-Click "**Setup.vbs**" icon. The E5052A Setup Wizard (uninstall) will start automatically as shown in Figure 1.
 - 2. Click on the **OK** button as shown in Figure 1.

Figure 1 E5052A Setup Wizard (uninstall)

E5052 Installer Se	cup	<u>^</u>
Remove the currer	nt installed ver	sion.
OK	Cancel	
5052ase082		0000

3. Please wait until "Uninstall Wizard" (Figure 2) disappears.

Figure 2 E5052A Uninstall Wizard

@ Agilent E5052 Signal Source An	alyzer		_ 🗆 X
Removing Agilent E50	52 Signal Sour	ce Analyzer	
Agilent E5052 Signal Source Analyz	er is being removed.		
Please wait			
	Cancel	< <u>B</u> ack	<u>N</u> ext>
5050 0.40			


e5052ase043

Step 8. Install the new version of the firmware using the following procedure.

- 1. After the disk1 installation is finished, insert the firmware installation disk2 "E50521.cab" into the FDD of the E5052A, then click **OK**.
- 2. After the disk2 installation is finished, insert the firmware installation disk3 "E50522.cab" into the FDD of the E5052A, then click **OK**.
- 3. After the disk3 installation is finished, insert the firmware installation disk4 "E50523.cab" into the FDD of the E5052A, then click **OK**.
- 4. The E5052A Setup Wizard will start automatically as shown in Figure 3.

Agilent E5052A Firmware Update **Firmware Update**

Figure 3 E5052A Setup Wizard (install)

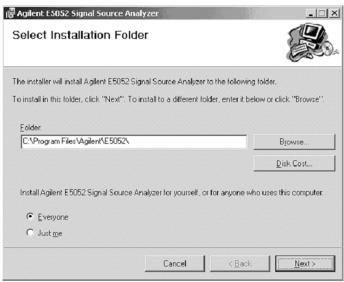

e5052ase044

- 5. Click on the "**Next**" to continue the firmware installation on the E5052A Setup Wizard as shown in Figure 3.
- 6. Please wait until "Install Wizard" (Figure 4) disappears.


Figure 4 E5052A Install Wizard

🕞 Agilent E5052 Signal Source A	nalyzer		
Installing Agilent E50 Analyzer	52 Signal Source		
Agilent E5052 Signal Source Analyze	er is being installed.		
Please wait			
	•		
	Cancel	< <u>B</u> ack	<u>N</u> ext >

e5052ase045

7. Since Figure 5 is displayed after installation is completed, please push the "**Close**" button.

Figure 5 E5052A Setup Wizard (Completed)

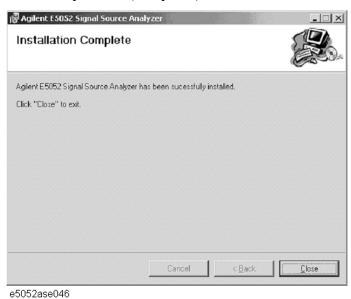

- Step 9. Double-click "E5052A" icon on the Windows desktop, and the measurement screen will appear.
- **Step 10.** Press System **Product Information**. Confirm the firmware revision you have just installed.