

Agilent E5052BU Option 028 Hard Disk Drive Kit User's Guide

E5052BU Option 028 refers to Spare HDD for the E5052B which serial-number prefix is MY472 or above.

Installation requirement

- ✓ 5188-4426 Key for Hard Disk Carrier
- ✓ USB Pen Drive (Over 512MB)
- ✓ E5052B which serial-number prefix is MY472 or above
- ✓ E5052BU-028 Spare-HDD with SATA interface.

Procedure

If you swap your Spare HDD (Hard Disk Drive) with the mounted HDD in the E5052B, you need to update Syscal data and Limit files.

For details, follow the procedure in E5052B Online Help.
(<http://ssa.tm.agilent.com/e5052b/manuals/webhelp/eng>)

Home > Product Information > Maintenance > Removing/Mounting Removable Hard Disk


Step 1. Saving system calibration data from removable hard disk to USB pen drive

Step 2. Removing Removable Hard Disk

Step 3. Mounting Removable Hard Disk

Note: Since this is the first time boot up for the Spare Removable Hard Disk, the Initial Registration is required. For details, follow the procedure in E5052B Installation Guide (<http://www.agilent.com/find/e5052b-manual>)

Step 4. Recalling System Calibration Data from USB Pen drive to Removable Hard Disk

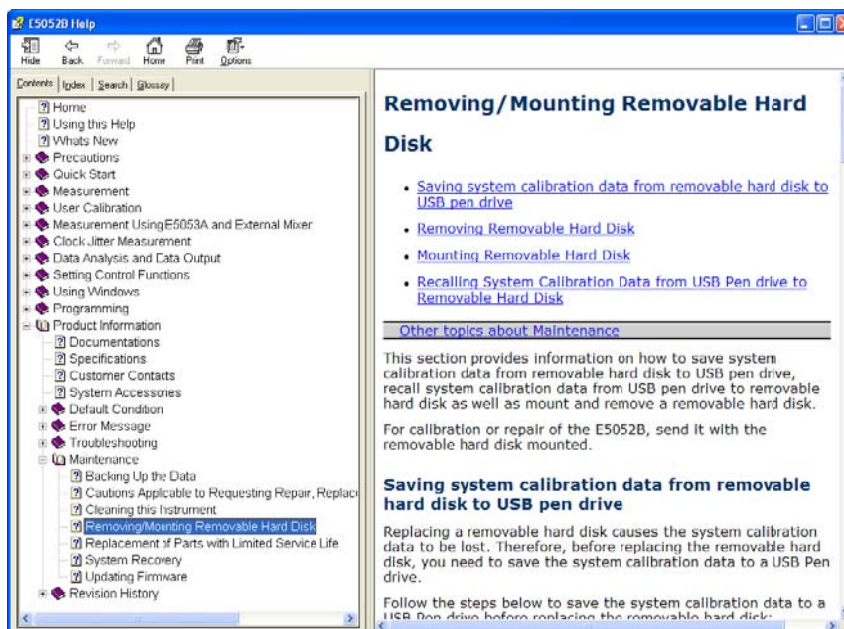

Note

There are two HDD interface types depending on the serial number, use the corresponding Spare HDD kit. Different Interface type Spare HDD cannot be inserted into the E5052B.

E5052B Serial Number	HDD Interface Type	Spare-HDD Kit
MY471xxxxx	Parallel ATA (PATA)	E5052BU-018 (PATA)
MY472xxxxx	Serial ATA (SATA)	E5052BU-028 (SATA)

Pictures of Spare-HDD computer bus interface

Spare-HDD E5052BU-018 (PATA)	Spare-HDD E5052BU-028 (SATA)
	