EPM-P Power Meter Firmware Upgrade Process Agilent Technologies

Firmware Upgrade

Hardware/Software Requirements

- The current hardware requirements for this procedure are:
 (a) A PC running Windows 2000[®] or Windows XP[®].
 (b) A GPIB interface.
- The current software requirements for this procedure are:
 - (a) A VISA library (e.g. Agilent IO Libraries).
 - (b) The EPM Firmware Files for your instrument.
 - (c) The EPM Firmware Upgrade Utility installer (setupload.exe).

Note: This procedure has not been tested on other versions of Windows.



Technologies

Step 3 : Firmware Upgrade (Cont')

Obtaining The Software

The latest version of the Agilent IO Libraries can be obtained from the following link:

Agilent IO Libraries

The EPM Firmware and its Firmware Upgrade Utility can be obtained from the following link:

EPM-P firmware upgrade

- Save the file to PC hard drive
- Note: This is a WinZip[®] executable file that must be unpacked before use.



<u>Step 1:</u>

Run the 'setupload.exe' and install the Firmware Upgrade Utility.

<u>Step 2:</u>

When the installation completed, execute 'Agilent EPM and EPM-P Dload' by clicking Start -> All Programs -> Agilent EPM and EPM-P Dload

<u> Step 3:</u>

Select the firmware file by clicking 'Browse' button next to 'Download file'. After that, click on the drop-down arrow next to 'Instrument addr', and select the unit to be upgraded.

Note: The power meter's GPIB address must be set to 13, and the programming language must be set to SCPI.

🗱 Agilent EPM and EPM-P Dload		
🔆 Agi	lent	
Download <u>f</u> ile		<u>B</u> rowse
Instrument <u>a</u> ddr	GPIB0::13::INSTR	
<u>T</u> emporary file	C:\info.tmp	Bro <u>w</u> se
	Becover from previously failed upgrade	
<u>D</u> ownlo	ad D <u>e</u> faults <u>H</u> elp	Close
Ready		



<u>Step 4:</u>

Click on the 'Download' button.

Click 'OK' on the warning pop-up when asked about instrument's condition.

Firmware download will start.


Note: Do not interrupt the firmware upgrade by disconnecting/power cycle/power off the power meter.

🗱 Agilent EPM and EPM-P Dload		
🔆 Agil	lent	
Download <u>f</u> ile	1\%.279.01 (Gandalf)\E4416_X1_279_01.dload	<u>B</u> rowse
Instrument <u>a</u> ddr	GPIB0::13::INSTR (E4416A,MY12343306)	
<u>T</u> emporary file	C:\info.tmp	Bro <u>w</u> se
	<u>R</u> ecover from previously failed upgrade	
Downloa	ad D <u>e</u> faults <u>H</u> elp	
Ready		



<u>Step 5:</u>


Restart the power meter by pressing the 'Power' button on the front panel of the power meter. Click 'OK' when the power meter finish booting up.

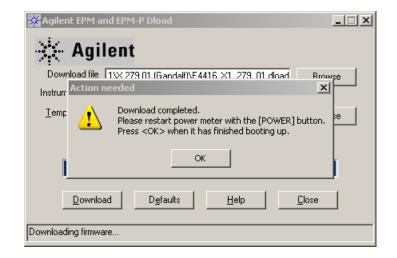



<u>Step 6:</u>

Restart the power meter again by pressing the 'Power' button on the front panel of the power meter. Click 'OK' when the power meter finish booting up.

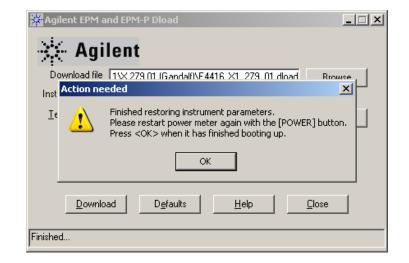



<u>Step 7:</u>

Click 'OK' on the message pop-up. Firmware upgrade is now completed.

Agilent EPM and EPM-P Dload
🔆 Agilent
Download file 1\%.279.01 (Gandalf)\E4416_X1_279_01.dload Browse
Inst Success
I ← Congratulations; your new firmware is now installed. You should perform a Zero and Cal before making any measurements.
Download Defaults Help Close

You have successfully upgrade the new firmware!

