



# **Agilent X-Series Signal Analyzer**

**This manual provides documentation for the  
for the following analyzers:**

**PXA Signal Analyzer N9030A  
MXA Signal Analyzer N9020A  
EXA Signal Analyzer N9010A**

**N9073A-1FP W-CDMA &  
N9073A-2FP HSPA  
Measurement Applications:  
User's and Programmer's  
Reference**

# Notices

© Agilent Technologies, Inc. 2010

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

## Trademark

### Acknowledgements

Microsoft® is a U.S. registered trademark of Microsoft Corporation. Windows® and MS Windows® are U.S. registered trademarks of Microsoft Corporation. Adobe Reader® is a U.S. registered trademark of Adobe System Incorporated. Java™ is a U.S. trademark of Sun Microsystems, Inc. MATLAB® is a U.S. registered trademark of Math Works, Inc. Norton Ghost™ is a U.S. trademark of Symantec Corporation.

## Manual Part Number

N9073-90016

## Print Date

March 2010

Printed in USA

Agilent Technologies, Inc.  
1400 Fountaingrove Parkway  
Santa Rosa, CA 95403

## Warranty

**The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.**

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and

licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

## Safety Notices

### CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

### WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

## Warranty

This Agilent technologies instrument product is warranted against defects in material and workmanship for a period of one year from the date of shipment. during the warranty period, Agilent Technologies will, at its option, either repair or replace products that prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Agilent Technologies. Buyer shall prepay shipping charges to Agilent Technologies shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to Agilent Technologies from another country.

## Where to Find the Latest Information

Documentation is updated periodically. For the latest information about this analyzer, including firmware upgrades, application information, and product information, see the following URLs:

<http://www.agilent.com/find/mxa>

<http://www.agilent.com/find/exa>

To receive the latest updates by email, subscribe to Agilent Email Updates:

<http://www.agilent.com/find/emailupdates>

Information on preventing analyzer damage can be found at:

<http://www.agilent.com/find/tips>

## Is your product software up-to-date?

Periodically, Agilent releases software updates to fix known defects and incorporate product enhancements. To search for software updates for your product, go to the Agilent Technical Support website at [www.agilent.com/find/techsupport](http://www.agilent.com/find/techsupport).





---

# Contents

## 1. Using Help

Locating Other Help Resources . . . . .	118
Viewing Help on a separate Computer . . . . .	119
Copying the HTML Help (CHM) Files . . . . .	119
Copying the Acrobat (PDF) Files . . . . .	120
How Help is Organized . . . . .	122
Help Contents Listing . . . . .	122
System Functions . . . . .	122
Key Descriptions for Each Measurement . . . . .	123
Key Information for Softkeys . . . . .	123
Common Measurement Functions . . . . .	124
Front Panel Keys used by the Help System . . . . .	125
Navigating Windows HTML Help (CHM) Files . . . . .	126
HTML Help Window Components . . . . .	126
Basic Help Window Operations . . . . .	127
Navigating the Help Window . . . . .	128
Navigating Acrobat (PDF) Files . . . . .	134
Adobe Reader Window . . . . .	134
Printing Acrobat Files . . . . .	135
Terms Used in This Documentation . . . . .	137
Terms used in Key Parameter Tables . . . . .	137
Context Sensitive Help not Available . . . . .	139
Finding a Topic without a Mouse and Keyboard . . . . .	139
Selecting a Hyperlink without a Mouse . . . . .	140

## 2. About the Analyzer

Installing Application Software . . . . .	142
Viewing a License Key . . . . .	142
Obtaining and Installing a License Key . . . . .	142
Missing and Old Measurement Application Software . . . . .	143
X-Series Options and Accessories . . . . .	144
Front-Panel Features . . . . .	148
Overview of key types . . . . .	151
Display Annotations . . . . .	154
Rear-Panel Features . . . . .	156
Window Control Keys . . . . .	159
Multi-Window . . . . .	159
Zoom . . . . .	159
Next Window . . . . .	160
Mouse and Keyboard Control . . . . .	161
Right-Click . . . . .	161
PC Keyboard . . . . .	162
Instrument Security & Memory Volatility . . . . .	166

## 3. About the W-CDMA Measurement Application

What Does the W-CDMA Application Do? . . . . .	168
--	-----

## 4. Programming the Analyzer

---

# Contents

What Programming Information is Available? .....	172
IEEE Common GPIB Commands .....	173
Calibration Query .....	173
Clear Status .....	173
Standard Event Status Enable .....	173
Standard Event Status Register Query .....	174
Identification Query .....	174
Instrument Model Number .....	175
Operation Complete .....	175
Query Instrument Options .....	175
Recall Instrument State .....	176
Save Instrument State .....	176
Service Request Enable .....	177
Status Byte Query .....	177
Trigger .....	177
Self Test Query .....	178
Wait-to-Continue .....	178

## 5. System Functions

File .....	180
File Explorer .....	180
Page Setup .....	181
Print .....	182
Exit .....	182
Preset .....	183
Mode Preset .....	183
Restore Mode Defaults .....	184
*RST (Remote Command Only) .....	185
Print .....	186
Quick Save .....	187
Recall .....	189
State .....	189
Trace (+State) .....	193
Data (Import) .....	196
Open... .....	200
File Open Dialog and Menu .....	200
Save .....	205
State .....	205
Trace (+State) .....	208
Data (Export) .....	212
Screen Image .....	216
Save As .....	220
Mass Storage Catalog (Remote Command Only) .....	223
Mass Storage Change Directory (Remote Command Only) .....	223
Mass Storage Copy (Remote Command Only) .....	223
Mass Storage Delete (Remote Command Only) .....	224
Mass Storage Data (Remote Command Only) .....	224
Mass Storage Make Directory (Remote Command Only) .....	225
Mass Storage Move (Remote Command Only) .....	225

---

# Contents

Mass Storage Remove Directory (Remote Command Only) . . . . .	225
System. . . . .	226
Show. . . . .	226
Power On . . . . .	234
Alignments . . . . .	243
I/O Config . . . . .	267
Restore Defaults . . . . .	310
Control Panel. . . . .	314
Licensing. . . . .	315
Security . . . . .	318
Diagnostics . . . . .	319
Service . . . . .	322
System Remote Commands (Remote Commands Only) . . . . .	322
User Preset . . . . .	325
User Preset . . . . .	325
User Preset All Modes . . . . .	326
Save User Preset . . . . .	327

## 6. Channel Power Measurement

AMPTD Y Scale . . . . .	334
Ref Value . . . . .	334
Attenuation . . . . .	335
Scale/Div . . . . .	335
Presel Center. . . . .	336
Presel Adjust . . . . .	336
Y Axis Unit . . . . .	336
Reference Level Offset . . . . .	336
$\mu$ W Path Control . . . . .	337
Internal Preamp . . . . .	337
Ref Position . . . . .	337
Auto Scaling . . . . .	338
Auto Couple . . . . .	339
BW. . . . .	340
Res BW . . . . .	340
Video BW . . . . .	341
Filter Type . . . . .	343
Cont. . . . .	344
FREQ Channel . . . . .	345
Input/Output. . . . .	346
Marker . . . . .	347
Select Marker . . . . .	347
Marker Type . . . . .	347
Marker X Axis Value (Remote Command only) . . . . .	348
Marker X Axis Position (Remote Command only) . . . . .	348
Marker Y Axis Value (Remote Command only) . . . . .	349
Properties . . . . .	349
Couple Markers. . . . .	351
All Markers Off . . . . .	352
Backward Compatibility SCPI Commands . . . . .	352

---

# Contents

Marker Function	354
Marker To	355
Meas	356
Meas Setup	357
Avg/Hold Num	357
Avg Mode	358
Integ BW	359
PhNoise Opt	360
IF Gain	361
RRC Filter	363
Filter BW	363
Filter Alpha	364
PSD Unit	365
Meas Preset	366
Shoulder Offset Start (Only for DVB-T/H and ISDB-T mode)	366
Shoulder Offset Stop (Only for DVB-T/H and ISDB-T mode)	366
Shoulder Offset (Only for DTMB and CMMB mode)	367
Mode	369
Mode Setup	370
Peak Search	371
Recall	372
Restart	373
Save	374
Single	375
Source	376
Span X Scale	377
Span	377
Full Span	378
Last Span	379
Sweep/Control	380
Sweep Time	380
Sweep Setup	382
Pause	382
Gate	383
Points	383
Trace/Detector	385
Trace Type	385
Detector	386
Trigger	389
View/Display	390
Display	392
Bar Graph	392
RF Spectrum (Only for DVB-T/H, DTMB, ISDB-T and CMMB)	393
Shoulder Attenuation (Only for DVB-T/H, DTMB, ISDB-T and CMMB)	395
Spectrum Mask(DTMB, DVB-T/H only)	398
<b>7. ACP Measurement</b>	
AMPTD Y Scale	414
Ref Value	414

---

# Contents

Attenuation . . . . .	415
Scale/Div . . . . .	415
Presel Center . . . . .	416
Presel Adjust . . . . .	416
Y Axis Unit . . . . .	416
Reference Level Offset . . . . .	416
$\mu$ W Path Control . . . . .	416
Internal Preamp . . . . .	417
Ref Position . . . . .	417
Auto Scaling . . . . .	417
Auto Couple . . . . .	419
BW . . . . .	420
Res BW . . . . .	420
Video BW . . . . .	421
RBW Control . . . . .	423
Cont. . . . .	425
FREQ Channel . . . . .	426
Input/Output . . . . .	427
Marker . . . . .	428
Select Marker . . . . .	428
Marker Type . . . . .	428
Marker X Axis Value (Remote Command only) . . . . .	429
Marker X Axis Position (Remote Command only) . . . . .	430
Marker Y Axis Value (Remote Command only) . . . . .	431
Properties . . . . .	431
Couple Markers . . . . .	433
Marker All Off . . . . .	434
Backward Compatibility SCPI Commands . . . . .	434
Marker Function . . . . .	435
Marker To . . . . .	436
Meas . . . . .	437
Meas Setup . . . . .	438
Average/Hold Number . . . . .	438
Avg Mode . . . . .	439
Carrier Setup . . . . .	439
Offset/Limits . . . . .	452
Carrier Result . . . . .	472
PhNoise Opt . . . . .	473
Meas Method . . . . .	474
Meas Type . . . . .	476
Limit Test . . . . .	477
Noise Correction . . . . .	478
Meas Preset . . . . .	479
Offset RRC Weighting (Backward Compatibility SCPI) . . . . .	480
Offset Filter Alpha (Backward Compatibility SCPI) . . . . .	481
Method for Carrier (Backward Compatibility SCPI) . . . . .	481
Mode . . . . .	483
Mode Setup . . . . .	484
Peak Search . . . . .	485

---

# Contents

Peak Search . . . . .	485
Next Peak . . . . .	485
Next Pk Right . . . . .	485
Next Pk Left . . . . .	486
Marker Delta . . . . .	486
Pk-Pk Search . . . . .	486
Min Search . . . . .	487
Recall . . . . .	488
Restart . . . . .	489
Save . . . . .	490
Single . . . . .	491
Source . . . . .	492
SPAN X Scale . . . . .	493
Span . . . . .	493
Full Span . . . . .	494
Last Span . . . . .	495
Sweep/Control . . . . .	496
Sweep Time . . . . .	496
Sweep Setup . . . . .	498
Pause . . . . .	498
Gate . . . . .	499
Points . . . . .	499
Trace/Detector . . . . .	501
Select Trace (frontpanel only) . . . . .	501
Trace Type . . . . .	501
View / Blank . . . . .	503
Detector . . . . .	504
Trigger . . . . .	507
View/Display . . . . .	508
Display . . . . .	512
Bar Graph . . . . .	512

## 8. Spectrum Emission Mask Measurement

AMPTD Y Scale . . . . .	526
Ref Value . . . . .	526
Attenuation . . . . .	527
Scale/Div . . . . .	527
Presel Center . . . . .	528
Presel Adjust . . . . .	528
Y Axis Unit . . . . .	528
Reference Level Offset . . . . .	528
$\mu$ W Path Control . . . . .	528
Internal Preamp . . . . .	529
Ref Position . . . . .	529
Auto Scaling . . . . .	529
Auto Couple . . . . .	531
BW . . . . .	532
Filter Type . . . . .	532
Cont . . . . .	533

---

# Contents

FREQ Channel	534
Input/Output	535
Marker	536
Select Marker	536
Marker Type	536
Marker X Axis Value (Remote Command only)	537
Marker X Axis Position (Remote Command only)	538
Marker Y Axis Value (Remote Command only)	538
Couple Markers	539
All Markers Off	539
Marker Function	541
Marker To	542
Meas	543
Meas Setup	544
Avg/Hold Num	544
Meas Type	545
Ref Channel	545
Power Ref	553
Offsets/Limit	555
Method	577
Filter Alpha	578
Meas Preset	579
Limits State(Only for TD-SCDMA)	579
Limits Type (Only for DVB-T/H)	580
Limits Type (Only for ISDB-T)	582
Offset Frequency Define	584
Mode	587
Mode Setup	588
Peak Search	589
Recall	590
Restart	591
Save	592
Single	593
Source	594
Span X Scale	595
Sweep/Control	596
Pause	596
Gate	596
Trace/Detector	597
Trace Type	597
Chan Detector	597
Offset Detector	599
Trigger	602
View/Display	603
Display	604
Abs Pwr Freq	605
Rel Pwr Freq	609
Integrated Power	614
Limit Lines	618

## 9. Spurious Emissions Measurement

AMPTD Y Scale	.623
Ref Value	.623
Attenuation	.624
Scale/Div	.624
Presel Center	.625
Presel Adjust	.625
Y Axis Unit	.625
Ref Lvl Offset	.625
$\mu$ W Path Control	.625
Internal Preamp	.625
Auto Scaling	.626
Auto Couple	.627
BW	.628
Cont	.629
Frequency/Channel	.630
Input/Output	.631
Marker	.632
Select Marker	.632
Marker Type	.632
Marker X Axis Value (Remote Command only)	.633
Marker X Axis Position (Remote Command only)	.634
Marker Y Axis Value (Remote Command only)	.634
Properties	.635
Couple Markers	.636
All Markers Off	.637
Marker Function	.638
Marker To	.639
Meas	.640
Meas Setup	.641
Avg/Hold Num	.641
Avg Mode	.642
Range Table	.642
Meas Type	.664
Spur	.665
Spurious Report Mode	.666
Meas Preset	.667
Range Preset (TD-SCDMA only)	.667
CH Mean Power (DVB-T/H only)	.674
Mode	.676
Mode Setup	.677
Peak Search	.678
Next Peak	.678
Next Pk Right	.678
Next Pk Left	.679
Marker Delta	.679
Pk-Pk Search	.679
Min Search	.680
Recall	.681



---

# Contents

Restart	682
Save	683
Single	684
Source	685
Span X Scale	686
Sweep/Control	687
Sweep Setup	687
Pause	688
Gate	688
Trace/Detector	689
Trigger	690
View/Display	691
Standard Result Screen	691
Display	692

## 10. Occupied Bandwidth Measurement

AMPTD Y Scale (Amplitude/Y Scale)	695
Ref Value	695
Attenuation	696
Scale/Div	696
Presel Center	696
Presel Adjust	697
Y Axis Unit	697
Reference Level Offset	697
$\mu$ W Path Control	697
Internal Preamp	698
Ref Position	698
Auto Scaling	698
Auto Couple	700
BW	701
Res BW	701
Video BW	702
Filter Type	704
Cont (Continuous)	705
FREQ/Channel (Frequency or Channel)	706
Input/Output	707
Marker	708
Select Marker	708
Marker X Axis Value (Remote Command only)	708
Marker X Axis Position (Remote Command only)	709
Marker Y Axis Value (Remote Command only)	709
Marker Type	710
Properties	710
All Markers Off	711
Backward Compatibility SCPI Commands	712
Marker Function	713
Marker To	714
Meas	715
Meas Setup	716

---

# Contents

Avg/Hold Num	.716
Avg Mode	.717
Max Hold (Remote Command Only)	.717
Occ BW % Pwr	.718
x dB	.719
IF Gain	.719
Limit	.721
Meas Preset	.722
Mode	.723
Mode Setup	.724
Peak Search	.725
Recall	.726
Restart	.727
Save	.728
Single	.729
Source	.730
Span X Scale	.731
Span	.731
Full Span	.732
Last Span	.732
Sweep/Control	.734
Sweep Time	.734
Sweep Setup	.735
Pause	.736
Gate	.736
Points	.736
Trace/Detector	.738
Trace Type	.738
Detector	.739
Trigger	.742
View/Display	.743
Display	.745

## 11. Power Stat CCDF Measurement

AMPTD Y Scale	.750
Attenuation	.750
Range	.750
Presel Center	.750
Presel Adjust	.751
Y Axis Unit	.751
Reference Level Offset	.751
$\mu$ W Path Control	.751
Internal Preamp	.752
Auto Couple	.753
BW	.754
Info BW	.754
Cont	.756
FREQ Channel	.757
Input/Output	.758

---

# Contents

Marker	759
Select Marker	759
Marker Type	759
Marker X Axis Value (Remote Command only)	760
Marker Y Axis Value (Remote Command only)	761
Properties	761
Couple Markers	763
All Markers Off	763
Marker To	764
Marker Function	765
Meas	766
Meas Setup	767
Counts	767
Meas Cycles	767
Meas Interval (When the application is NOT CDMA1xEVDO)	768
Meas Interval (CDMA1xEVDO Only)	769
Meas Offset (CDMA1xEVDO Only)	770
IF Gain	770
Meas Preset	772
Mode	773
Mode Setup	774
Peak Search	775
Recall	776
Restart	777
Save	778
Single	779
Source	780
Span X Scale	781
Scale/Div	781
Sweep/Control	782
Pause/Resume	782
Trace/Detector	783
Store Ref Trace	783
Ref Trace	783
Gaussian Line	784
Trigger	785
View/Display	786
Display	789
Slot View (TD-SCDMA only)	789

## 12. Code Domain Measurement

AMPTD Y Scale (Amplitude / Y Scale)	814
Y Ref Value	814
Attenuation	820
Range	821
Y Scale/Div	821
Presel Center	827
Presel Adjust	828
Internal Preamp	828

---

# Contents

Ref Position . . . . .	828
Auto Scaling . . . . .	831
Auto Couple . . . . .	835
BW . . . . .	836
Cont (Continuous Measurement/Sweep) . . . . .	837
FREQ Channel. . . . .	838
Input/Output . . . . .	839
Marker . . . . .	840
Marker Symbol Value (Remote Command only). . . . .	840
Marker X Axis Value (Remote Command only) . . . . .	841
Marker X Axis Position (Remote Command only) . . . . .	841
Marker Y Axis Value (Remote Command only) . . . . .	842
Select Marker . . . . .	842
Marker Type . . . . .	842
Properties . . . . .	843
Couple Markers . . . . .	845
All Markers Off. . . . .	845
Marker Function . . . . .	846
Marker To. . . . .	847
Mkr -> Despread. . . . .	847
Meas . . . . .	848
Meas Setup. . . . .	849
Meas Type. . . . .	849
Symbol Rate . . . . .	849
Code Number . . . . .	850
Mod Scheme (BTS Only) . . . . .	851
I/Q Branch (MS only) . . . . .	852
Meas Interval . . . . .	853
Meas Offset. . . . .	853
Sync Type . . . . .	854
Primary Scramble Code (BTS only) . . . . .	858
Slot Format (MS only) . . . . .	858
Preamble Signature (MS only) . . . . .	859
Scramble Code Offset (BTS only) . . . . .	859
Scramble Code (MS only). . . . .	860
Scramble Code Type (BTS only) . . . . .	860
DPCH/E-DPCH Configuration (MS only) . . . . .	861
Symbol Boundary (BTS only) . . . . .	862
Symbol Boundary (MS only) . . . . .	887
Capture Interval. . . . .	899
Symbol Analysis . . . . .	900
Sync Start Slot . . . . .	903
Spectrum . . . . .	904
Meas Preset . . . . .	904
Advanced. . . . .	905
Packed Mode (Remote Command Only) . . . . .	913
Mode . . . . .	915
Mode Setup . . . . .	916
Peak Search . . . . .	917

---

# Contents

Next Peak . . . . .	917
Next Pk Right . . . . .	917
Next Pk Left . . . . .	917
Marker Delta . . . . .	918
Pk-Pk Search . . . . .	918
Min Search . . . . .	918
Recall . . . . .	920
Restart . . . . .	921
Save . . . . .	922
Single (Single Measurement/Sweep) . . . . .	923
Source . . . . .	924
SPAN X Scale . . . . .	925
Start Code Number . . . . .	925
Stop Code Number . . . . .	926
Expand . . . . .	926
X Ref Value . . . . .	927
X Scale/Div . . . . .	930
Ref Position . . . . .	934
Auto Scaling . . . . .	937
Sweep/Control . . . . .	942
Pause/Resume . . . . .	942
Trace/Detector . . . . .	943
Trigger . . . . .	944
View/Display . . . . .	945
Display . . . . .	945
View (Remote Command only) . . . . .	945
Power Bar Graph & Metrics . . . . .	947
CDP Graph and CDE Graph . . . . .	954
I/Q Error (Quad View) . . . . .	957
Code Domain (Quad View) . . . . .	963
Demod Bits . . . . .	968

## 13. Modulation Accuracy (Composite EVM) Measurement

AMPTD Y Scale . . . . .	991
Ref Value . . . . .	991
Attenuation . . . . .	995
Range . . . . .	996
Scale/Div . . . . .	996
Presel Center . . . . .	1000
Presel Adjust . . . . .	1000
Internal Preamp . . . . .	1000
Ref Position . . . . .	1001
Auto Scaling . . . . .	1003
Auto Couple . . . . .	1008
BW . . . . .	1009
Cont (Continuous Measurement/Sweep) . . . . .	1010
FREQ Channel . . . . .	1011
Input/Output . . . . .	1012
Marker . . . . .	1013

---

# Contents

Select Marker . . . . .	1013
Marker Type . . . . .	1013
Marker Chip Value (Remote Command only) . . . . .	1014
Marker X Axis Value (Remote Command only) . . . . .	1015
Marker X Axis Position (Remote Command only) . . . . .	1015
Marker Y Axis Value (Remote Command only) . . . . .	1016
Properties . . . . .	1017
Couple Markers . . . . .	1018
All Markers Off. . . . .	1019
Marker Function . . . . .	1020
Marker To. . . . .	1021
Meas . . . . .	1022
Meas Setup. . . . .	1023
Avg Number . . . . .	1023
Avg Mode. . . . .	1023
Meas Offset. . . . .	1025
Limits . . . . .	1026
Sync Type . . . . .	1029
P Scramble Code [BTS only] . . . . .	1033
Slot Format [MS only] . . . . .	1034
Preamble Signature [MS only] . . . . .	1034
Scramble Code Offset [BTS only] . . . . .	1035
Scramble Code [MS only]. . . . .	1036
Scramble Code Type [BTS only] . . . . .	1036
Symbol Boundary [BTS only] . . . . .	1037
Symbol Boundary [MS only] . . . . .	1064
Sync Start Slot [BTS only]. . . . .	1076
Transient Period Exclude [MS only] . . . . .	1077
Spectrum. . . . .	1077
Advanced. . . . .	1078
Meas Preset . . . . .	1086
Peak Search . . . . .	1087
Next Peak . . . . .	1087
Next Pk Right. . . . .	1087
Next Pk Left . . . . .	1087
Marker Delta . . . . .	1088
Pk-Pk Search . . . . .	1088
Min Search . . . . .	1088
SPAN X Scale. . . . .	1090
Ref Value. . . . .	1090
Scale/Div . . . . .	1092
Ref Position. . . . .	1094
Auto Scaling . . . . .	1095
Sweep/Control . . . . .	1100
Pause/Resume. . . . .	1100
Trace/Detector . . . . .	1101
Trigger . . . . .	1102
View/Display . . . . .	1103
View Selection (Remote Command only) . . . . .	1103

---

# Contents

Display	1105
I/Q Measured Polar Graph	1105
I/Q Error	1113
Code Domain Power	1117
Peak/Avg Metrics	1122
Capture Time Summary	1128
Slot CDE/EVM	1132
<b>14. Power Control Measurement</b>	
AMPTD (Amplitude) Y Scale	1145
Ref Value	1145
Range	1146
Attenuation	1147
Scale/Div	1147
Presel Center	1148
Presel Adjust	1149
$\mu$ W Path Control	1149
Internal Preamp	1149
Ref Position	1149
Auto Scaling	1150
BW	1152
Info BW	1152
InfoBW Control	1152
Cont	1154
FREQ Channel	1155
Center Freq	1155
CF Step	1155
Input/Output	1156
Marker	1157
Select Marker	1157
Marker Type	1157
Marker X Axis Value (Remote Command only)	1158
Marker X Axis Position (Remote Command only)	1158
Marker Y Axis Value (Remote Command only)	1159
Marker Properties	1160
Couple Markers	1161
All Markers Off	1162
Marker Fctn (Function)	1163
Marker > (Marker To)	1164
Meas	1165
Meas Setup	1166
Meas Type	1166
Slot Power Meas	1167
PRACH Power Meas	1170
Slot Phase Meas	1175
Meas Method	1186
RRC Filter	1187
Capture Interval	1188
Scramble Code	1189

---

# Contents

IF Gain . . . . .	1190
Meas Preset . . . . .	1191
Advanced . . . . .	1191
Mode . . . . .	1193
Mode Setup . . . . .	1194
Peak Search . . . . .	1195
Recall . . . . .	1196
Restart . . . . .	1197
Save . . . . .	1198
Single . . . . .	1199
Source . . . . .	1200
SPAN X Scale . . . . .	1201
Ref Value . . . . .	1201
Scale/Div . . . . .	1201
Ref Position . . . . .	1202
Auto Scaling . . . . .	1203
Sweep/Control . . . . .	1204
Pause/Resume . . . . .	1204
Trace/Detector . . . . .	1205
View/Display . . . . .	1206
Display . . . . .	1207
Power Graph & Metrics . . . . .	1207
Phase Graph & Metrics . . . . .	1212
Slot Number . . . . .	1215
Chip Phase Trace . . . . .	1215
Scroll . . . . .	1216

## 15. QPSK EVM Measurement

AMPTD Y Scale . . . . .	1222
Ref Value . . . . .	1222
Attenuation . . . . .	1224
Range . . . . .	1224
Scale/Div . . . . .	1224
Presel Center . . . . .	1226
Presel Adjust . . . . .	1226
$\mu$ W Path Control . . . . .	1227
Internal Preamp . . . . .	1227
Ref Position . . . . .	1227
Auto Scaling . . . . .	1228
Auto Couple . . . . .	1229
BW . . . . .	1230
Info BW . . . . .	1230
Info BW Control . . . . .	1231
Filter Type . . . . .	1231
Cont . . . . .	1232
FREQ Channel . . . . .	1233
Input/Output . . . . .	1234
Marker . . . . .	1235
Select Marker . . . . .	1235



---

# Contents

Marker Type . . . . .	1235
Marker X Axis Value (Remote Command only) . . . . .	1236
Marker Chip Value (Remote Command only) . . . . .	1237
Marker X Axis Position (Remote Command only) . . . . .	1238
Marker Y Axis Value (Query Only) . . . . .	1239
Marker Properties . . . . .	1239
Marker Trace . . . . .	1240
Couple Marker . . . . .	1241
All Markers Off . . . . .	1242
Marker Function . . . . .	1243
Marker To . . . . .	1244
Meas . . . . .	1245
Meas Setup . . . . .	1246
Avg/Hold Number . . . . .	1246
Avg Mode . . . . .	1246
Meas Interval . . . . .	1247
Limits . . . . .	1248
Meas Offset & Interval . . . . .	1249
Spectrum . . . . .	1250
Advanced . . . . .	1251
Meas Preset . . . . .	1254
Mode . . . . .	1255
Mode Setup . . . . .	1256
Peak Search . . . . .	1257
Next Peak . . . . .	1257
Next Pk Right . . . . .	1257
Next Pk Left . . . . .	1258
Marker Delta . . . . .	1258
Pk-Pk Search . . . . .	1258
Min Search . . . . .	1259
Recall . . . . .	1260
Restart . . . . .	1261
Save . . . . .	1262
Single . . . . .	1263
Source . . . . .	1264
SPAN X Scale . . . . .	1265
X Ref Value . . . . .	1265
X Scale/Div . . . . .	1267
X Ref Position . . . . .	1269
X Auto Scaling . . . . .	1271
Sweep/Control . . . . .	1274
Pause . . . . .	1274
Trace/Detector . . . . .	1275
View/Display . . . . .	1276
Display . . . . .	1277
I/Q Measured Polar Graph . . . . .	1277
I/Q Error View . . . . .	1284

## 16. Monitor Spectrum

---

# Contents

AMPTD Y Scale . . . . .	1288
Ref Value . . . . .	1288
Attenuation . . . . .	1288
Scale/Div . . . . .	1289
Presel Center . . . . .	1289
Presel Adjust . . . . .	1289
Internal Preamp . . . . .	1289
Ref Position . . . . .	1290
Auto Scaling . . . . .	1290
Auto Couple . . . . .	1292
BW . . . . .	1293
Res BW . . . . .	1293
Video BW . . . . .	1295
VBW:3dB RBW . . . . .	1296
Span:3dB RBW . . . . .	1297
Cont . . . . .	1299
FREQ Channel . . . . .	1300
Input/Output . . . . .	1301
Marker . . . . .	1302
Select Marker . . . . .	1302
Marker Type . . . . .	1302
Properties . . . . .	1304
Select Marker . . . . .	1304
Couple Markers . . . . .	1306
All Markers Off . . . . .	1306
Marker Function . . . . .	1307
Select Marker . . . . .	1307
Marker Function Type . . . . .	1307
Band Adjust . . . . .	1307
Marker To . . . . .	1310
Meas . . . . .	1311
Meas Setup . . . . .	1312
Avg/Hold Num . . . . .	1312
Avg Mode . . . . .	1312
Meas Preset . . . . .	1313
Mode . . . . .	1314
Mode Setup . . . . .	1315
Peak Search . . . . .	1316
Recall . . . . .	1317
Restart . . . . .	1318
Save . . . . .	1319
Single . . . . .	1320
Source . . . . .	1321
Span X Scale . . . . .	1322
Span . . . . .	1322
Full Span . . . . .	1323
Last Span . . . . .	1323
Sweep/Control . . . . .	1325
Sweep Time . . . . .	1325

---

# Contents

Pause	1325
Gate	1326
Points	1326
Trace/Detector	1327
Select Trace	1327
Trace Type	1327
Update	1328
Display	1328
Detector	1329
Clear Trace	1331
Clear All Traces	1331
Trigger	1332
View/Display	1333
Display	1334

## 17. Waveform Measurement

AMPTD Y Scale	1337
Ref Value	1337
Attenuation	1338
Range	1339
Scale/Div	1339
Presel Center	1340
Presel Adjust	1341
Internal Preamp	1341
Ref Position	1341
Auto Scaling	1342
Auto Couple	1344
BW	1345
Digital IF Filter Parameters	1345
Cont	1358
FREQ Channel	1359
Input/Output	1360
Marker	1361
Select Marker	1361
Marker Type	1361
Marker X Axis Value (Remote Command Only)	1362
Marker X Axis Position (Remote Command Only)	1363
Marker Y Axis Value (Remote Command Only)	1364
Properties	1364
Couple Markers	1366
All Markers Off	1366
Backward Compatibility SCPI Commands	1367
Marker Function	1368
Select Marker	1368
Marker Function Type	1368
Band Adjust	1369
Marker To	1372
Meas	1373
Meas Setup	1374

---

# Contents

Average/Hold Num	1374
Avg Mode	1374
Avg Type	1375
Fast Hardware Averaging (Time Avg)	1376
Time Avg Num	1377
Sample Rate	1377
Sample Period (Aperture) Setting (Remote Command Only)	1378
Meas Time	1378
Meas Preset	1379
Advanced	1379
Mode	1384
Mode Setup	1385
Peak Search	1386
Next Peak	1386
Min Search	1386
Recall	1388
Restart	1389
Save	1390
Single	1391
Source	1392
Span X Scale	1393
Ref Value	1393
Scale/Div	1394
Ref Position	1394
Auto Scaling	1395
Sweep/Control	1396
Pause and Resume	1396
Trace/Detector	1397
Trigger	1398
View/Display	1399
Display	1400
RF Envelope	1400
I/Q Waveform	1401

## 18. Common Measurement Functions

AMPTD Y Scale	1405
Reference Level	1405
Attenuation	1406
Range	1415
Scale / Div	1420
Scale Type	1420
Presel Center	1421
Preselector Adjust	1422
Y Axis Unit	1424
Reference Level Offset	1429
$\mu$ W Path Control	1430
Internal Preamp	1435
Auto Couple	1437
BW	1439

---

# Contents

Res BW	1439
Video BW	1441
VBW:3dB RBW	1442
Span:3dB RBW	1444
RBW Control	1445
Cont (Continuous Measurement/Sweep)	1451
FREQ/Channel	1453
Center Frequency	1453
CF Step	1456
Input/Output	1459
RF Input	1460
I/Q	1462
RF Calibrator	1477
External Gain	1479
Restore Input/Output Defaults	1484
Data Source	1484
Corrections	1489
Freq Ref In	1500
Output Config	1506
I/Q Guided Calibration	1518
Marker	1531
Select Marker	1534
Normal	1534
Delta	1535
Fixed	1535
Off	1536
Properties	1537
Marker Table	1544
Marker Count	1544
Couple Markers	1548
All Markers Off	1549
Marker Function	1551
Select Marker	1552
Marker Noise	1552
Band/Interval Power	1554
Band/Interval Density	1554
Off	1556
Band Adjust.	1556
Measure at Marker	1560
Marker To	1571
Mkr->CF	1571
Mkr->CF Step	1572
Mkr->Start.	1572
Mkr->Stop	1573
Mkr $\Delta$ ->Span	1573
Mkr $\Delta$ ->CF	1574
Mkr->Ref Lvl	1574
Meas	1575
Remote Measurement Functions	1575

---

# Contents

Meas Setup . . . . .	1589
Average/Hold Number . . . . .	1589
Average Type . . . . .	1590
Limits . . . . .	1594
N dB Points . . . . .	1613
PhNoise Opt . . . . .	1617
ADC Dither . . . . .	1620
Swept IF Gain . . . . .	1622
FFT IF Gain . . . . .	1624
Analog Demod Tune & Listen . . . . .	1626
Noise Source . . . . .	1632
Meas Preset . . . . .	1634
Mode . . . . .	1635
Application Mode Number Selection (Remote Command Only) . . . . .	1637
Application Mode Catalog Query (Remote Command Only) . . . . .	1638
Application Identification (Remote Commands Only) . . . . .	1638
Application Identification Catalog (Remote Commands Only) . . . . .	1640
Detailed List of Modes . . . . .	1641
Global Settings . . . . .	1649
Global Center Freq. . . . .	1649
Restore Defaults . . . . .	1650
Mode Setup . . . . .	1651
Radio . . . . .	1651
Demod . . . . .	1651
Restore Mode Defaults . . . . .	1652
Peak Search . . . . .	1653
Next Peak . . . . .	1653
Next Pk Right . . . . .	1654
Next Pk Left . . . . .	1654
Marker Delta . . . . .	1655
Mkr->CF . . . . .	1655
Mkr->Ref Lvl . . . . .	1655
Peak Criteria . . . . .	1655
Peak Table . . . . .	1660
Continuous Peak Search On/Off . . . . .	1664
Pk-Pk Search . . . . .	1665
Min Search . . . . .	1666
Peak Data Query (RemoteCommand Only) . . . . .	1666
Recall . . . . .	1667
Trace . . . . .	1667
Amplitude Correction . . . . .	1668
Capture Buffer . . . . .	1669
Restart . . . . .	1671
Save . . . . .	1673
Data . . . . .	1673
Single (Single Measurement/Sweep) . . . . .	1677
Source . . . . .	1679
SPAN X Scale . . . . .	1681
Span . . . . .	1681

---

# Contents

Full Span .....	1683
Zero Span .....	1683
Last Span .....	1684
Signal Track (Span Zoom) .....	1685
Sweep/Control .....	1687
Sweep Time .....	1687
Sweep Setup .....	1689
Pause/Resume .....	1698
Gate .....	1699
Points .....	1711
Abort (Remote Command Only) .....	1712
Trace/Detector .....	1715
Select Trace .....	1717
Clear Write .....	1718
Trace Average .....	1718
Max Hold .....	1719
Min Hold .....	1720
View/Blank .....	1721
Detector .....	1724
Preset Detectors .....	1734
Clear Trace .....	1735
Clear All Traces .....	1735
Math .....	1736
Copy/Exchange .....	1747
Send/Query Trace Data ( Remote Command Only) .....	1748
Format Data: Numeric Data ( Remote Command Only) .....	1750
Format Data: Byte Order ( Remote Command Only) .....	1750
Smooth Trace Data (Remote Command Only) .....	1750
Number of Points for Smoothing (Remote Command Only) .....	1751
Mean Trace Data (Remote Command Only) .....	1751
Calculate/Compress Trace Data Query (Remote Command Only) .....	1751
Calculate Data Query (Remote Command Only) .....	1752
Trigger .....	1753
Free Run .....	1761
Video (IF Envelope) .....	1761
Line .....	1765
External 1 .....	1767
External 2 .....	1769
RF Burst .....	1772
Periodic Timer (Frame Trigger) .....	1776
LXI Trigger .....	1784
Baseband I/Q .....	1799
Auto/Holdoff .....	1809
Trigger Offset (Remote Command Only) .....	1812
View/Display .....	1813
Display .....	1813
Full Screen .....	1821
Display Enable (Remote Command Only) .....	1822





---

## List of Commands

*CAL?	251
*CLS	173
*ESE <integer>	173
*ESE?	173
*ESR?	174
*IDN?	175
*OPC?	175
*OPC	175
*OPT?	176
*RCL <register #>	176
*RST	185
*SAV <register #>	176
*SRE <integer>	177
*SRE?	177
*STB?	177
*TRG	177
*TST?	178
*WAI	178
:ABORt	1712
:CALCulate:ACPower:LIMit:STATe OFF   ON   0   1	477
:CALCulate:ACPower:LIMit:STATe?	477
:CALCulate:ACPower:MARKer:AOff	434
:CALCulate:ACPower:MARKer:COUPle[:STATe] ON   OFF   1   0	433
:CALCulate:ACPower:MARKer:COUPle[:STATe]?	433
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum	485
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:LEFT	486
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:NEXT	485
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:RIGHT	486
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MINimum	487
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTA   OFF	428

---

## List of Commands

:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE?	428
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:PTPeak	487
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer>	432
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence?	432
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:STATe OFF   ON   0   1	434
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:STATe?	434
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe 1   2   3	432
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe?	432
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <freq>	429
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition <real>	430
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition?	430
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X?	429
:CALCulate:ACPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y?	431
:CALCulate:ACPower:OFFSet:LIST:LIMit:NEGative[:UPPer]:DATA <real>, <real>, <real>, <real>, <real>, <real>	465
:CALCulate:ACPower:OFFSet:LIST:LIMit:NEGative[:UPPer]:DATA?	465
:CALCulate:ACPower:OFFSet:LIST:LIMit:POSitive[:UPPer]:DATA <real>, <real>, <real>, <real>, <real>, <real>	464
:CALCulate:ACPower:OFFSet:LIST:LIMit:POSitive[:UPPer]:DATA?	464
:CALCulate:BWIDth   BANDwidth:NDB <rel_ampl>	1614
:CALCulate:BWIDth   BANDwidth:NDB?	1614
:CALCulate:BWIDth   BANDwidth:RESult?	1614
:CALCulate:BWIDth   BANDwidth[:STATe] OFF   ON   0   1	1614
:CALCulate:BWIDth   BANDwidth[:STATe]?	1614
:CALCulate:CDPower:ASET:THReshold <real>	905
:CALCulate:CDPower:ASET:THReshold:AUTO OFF   ON   0   1	905
:CALCulate:CDPower:ASET:THReshold:AUTO?	905
:CALCulate:CDPower:ASET:THReshold?	905
:CALCulate:CDPower:AXIS[:MS] IPH   QPH   IQCombined	852
:CALCulate:CDPower:AXIS[:MS]?	852
:CALCulate:CDPower:DPCH:MS:CONFIgure C1   C2WDpdch   C2WODpdch   C3	861
:CALCulate:CDPower:DPCH:MS:CONFIgure?	861

---

## List of Commands

:CALCulate:CDPower:DTXBurst 0   1   OFF   ON .....	902
:CALCulate:CDPower:DTXBurst? .....	902
:CALCulate:CDPower:IQPHase:ROtation <real> .....	902
:CALCulate:CDPower:IQPHase:ROtation? .....	902
:CALCulate:CDPower:MARKer:AOff .....	845
:CALCulate:CDPower:MARKer:COUple[:STATe] ON   OFF   1   0 .....	845
:CALCulate:CDPower:MARKer:COUple[:STATe]? .....	845
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum .....	917
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:LEFT .....	918
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:NEXT .....	917
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:RIGHT .....	917
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MINimum .....	918
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTA   OFF . 843	
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE? .....	843
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:PTPeak .....	918
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer> .....	844
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence? .....	844
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:SYMBol <real> .....	840
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:SYMBol? .....	840
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe CDPower   EVM   MER- Ror   PERRor   SPOWer   CPOWer   CDError   POLar .....	844
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe? .....	844
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <real> .....	841
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition <real> .....	841
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition? .....	841
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X? .....	841
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y? .....	842
:CALCulate:CDPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12[:SET]:DESPread .....	847
:CALCulate:CDPower:MTYPe AUTO   QPSK   QAM16   QAM64 .....	851
:CALCulate:CDPower:MTYPe? .....	851
:CALCulate:CDPower:PACKed OFF   PKM1 .....	914

---

## List of Commands

:CALCulate:CDPower:PACKed?	.914
:CALCulate:CDPower:SBOundary:COMPOSITE OFF   ON   0   1	.953
:CALCulate:CDPower:SBOundary:COMPOSITE?	.953
:CALCulate:CDPower:SBOundary:SRATE <integer>	.954
:CALCulate:CDPower:SBOundary:SRATE?	.954
:CALCulate:CDPower:SEVM:FCOMpen ON   OFF   1   0	.911
:CALCulate:CDPower:SEVM:FCOMpen?	.911
:CALCulate:CDPower:SEVM:PCOMpen ON   OFF   1   0	.911
:CALCulate:CDPower:SEVM:PCOMpen?	.911
:CALCulate:CDPower:SPRead <integer>	.850
:CALCulate:CDPower:SPRead?	.850
:CALCulate:CDPower:SRATE <integer>	.849
:CALCulate:CDPower:SRATE?	.849
:CALCulate:CDPower:SSUPpress[:STATE] ?	.913
:CALCulate:CDPower:SSUPpress[:STATE] ON   OFF   1   0	.913
:CALCulate:CDPower:SWEep:OFFSet <integer>	.853
:CALCulate:CDPower:SWEep:OFFSet?	.853
:CALCulate:CDPower:SWEep:TIME <integer>	.853
:CALCulate:CDPower:SWEep:TIME?	.853
:CALCulate:CDPower:TDPCh <integer>	.900
:CALCulate:CDPower:TDPCh:AUTO OFF   ON   0   1	.900
:CALCulate:CDPower:TDPCh:AUTO?	.900
:CALCulate:CDPower:TDPCh?	.900
:CALCulate:CDPower:THSDpcch <integer>	.901
:CALCulate:CDPower:THSDpcch?	.901
:CALCulate:CDPower:TYPE RELative   ABSolute	.849
:CALCulate:CDPower:TYPE?	.849
:CALCulate:CHPower:MARKer:AOFF	.352
:CALCulate:CHPower:MARKer:COUPle[:STATE] ON   OFF   1   0	.352
:CALCulate:CHPower:MARKer:COUPle[:STATE]?	.352
:CALCulate:CHPower:MARKer[1   2   3   4   5   6   7   8   9   10   11   12]:MAXimum	.371

---

## List of Commands

:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTa   OFF .	
347	
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE? . . . . .	347
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer> . . . . .	350
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence? . . . . .	350
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:STATe OFF   ON   0   1 . . . . .	352
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:STATe? . . . . .	352
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe RFSPectrum   LSHoul- der   RSHoulder   MASK . . . . .	351
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe RFSPectrum   LSHoul- der   RSHoulder . . . . .	351
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe? . . . . .	351
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe? . . . . .	351
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <real> . . . . .	348
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition <real> . . . . .	349
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition? . . . . .	349
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X? . . . . .	348
:CALCulate:CHPower:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y? . . . . .	349
:CALCulate:CLIMits:FAIL? . . . . .	1579
:CALCulate:DATA<n>:COMPRESS? BLOCk   CFIT   MAXimum   MINi- mum   MEAN   DMEan   RMS   RMSCubed   SAMPlE   SDEViation   PPHase [,<soff- set>[,<length>[,<roffset>[,<rlimit>]]]] . . . . .	1580
:CALCulate:DATA[1]   2   3   4   5   6:PEAKs? <threshold>,<excursion>[,AMPLitude   FREQuen- cy   TIME[,ALL   GTDLine   LTDLine]] . . . . .	1585
:CALCulate:DATA[1]   2   3   4   5   6:PEAKs? <threshold>,<excursion>[,AMPLitude   FREQuen- cy   TIME]. . . . .	1585
:CALCulate:DATA[n]? . . . . .	1579
:CALCulate:EVMQpsk:IQOffset:INCLude OFF   ON   0   1 . . . . .	1251
:CALCulate:EVMQpsk:IQOffset:INCLude? . . . . .	1251
:CALCulate:EVMQpsk:LIMit:FERRor <freq> . . . . .	1249
:CALCulate:EVMQpsk:LIMit:FERRor? . . . . .	1249
:CALCulate:EVMQpsk:LIMit:RMS <real> . . . . .	1248
:CALCulate:EVMQpsk:LIMit:RMS? . . . . .	1248
:CALCulate:EVMQpsk:MARKer:AOFF . . . . .	1242

---

## List of Commands

:CALCulate:EVMQpsk:MARKer:COUPlE[:STATe] ON   OFF   1   0 . . . . .	1241
:CALCulate:EVMQpsk:MARKer:COUPlE[:STATe]? . . . . .	1241
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:CHIP <real> . . . . .	1237
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:CHIP? . . . . .	1237
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum . . . . .	1257
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:LEFT . . . . .	1258
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:NEXT . . . . .	1257
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:RIGHT . . . . .	1257
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MINimum . . . . .	1259
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTa   OFF . 1235	
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE? . . . . .	1235
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:PTPeak . . . . .	1258
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer> . . . .	1240
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence? . . . . .	1240
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe POLar   EVM   PER- Ror   MERRor . . . . .	1241
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe? . . . . .	1241
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <real> . . . . .	1236
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition <real> . . . . .	1238
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition? . . . . .	1238
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X? . . . . .	1236
:CALCulate:EVMQpsk:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y? . . . . .	1239
:CALCulate:LIMit[1]   2   3   4   5   6:CLear . . . . .	1612
:CALCulate:LIMit[1]   2   3   4   5   6:CONTrol:POINts? . . . . .	1610
:CALCulate:LIMit[1]   2   3   4   5   6:CONTrol[:DATA] <x>, <x>, . . . . .	1610
:CALCulate:LIMit[1]   2   3   4   5   6:CONTrol[:DATA]? . . . . .	1610
:CALCulate:LIMit[1]   2   3   4   5   6:FAIL? . . . . .	1612
:CALCulate:LIMit[1]   2   3   4   5   6:LOWer:POINts? . . . . .	1611
:CALCulate:LIMit[1]   2   3   4   5   6:LOWer[:DATA] <ampl>, . . . . .	1611
:CALCulate:LIMit[1]   2   3   4   5   6:LOWer[:DATA]? . . . . .	1611
:CALCulate:LIMit[1]   2   3   4   5   6:STATe ON   OFF   0   1 . . . . .	1609

---

## List of Commands

:CALCulate:LIMit[1]   2   3   4   5   6:STATe?	1609
:CALCulate:LIMit[1]   2   3   4   5   6:UPPer:POINts?	1611
:CALCulate:LIMit[1]   2   3   4   5   6:UPPer[:DATA] <ampl>, <ampl>, ...	1611
:CALCulate:LIMit[1]   2   3   4   5   6:UPPer[:DATA]?	1611
:CALCulate:LLINe:ALL:DELeTe	1608
:CALCulate:LLINe:CMODE FIXed   RELative	1612
:CALCulate:LLINe:CMODE?	1612
:CALCulate:LLINe:CONTRol:DOMain FREQuency   TIME	1608
:CALCulate:LLINe:CONTRol:DOMain?	1608
:CALCulate:LLINe:TEST OFF   ON   0   1	1607
:CALCulate:LLINe:TEST?	1607
:CALCulate:LLINe[1]   2   3   4   5   6:AMPLitude:CMODE:RELative ON   OFF   1   0	1600
:CALCulate:LLINe[1]   2   3   4   5   6:AMPLitude:CMODE:RELative?	1600
:CALCulate:LLINe[1]   2   3   4   5   6:AMPLitude:INTerpolate:TYPE LOGarithmic   LINear	1598
:CALCulate:LLINe[1]   2   3   4   5   6:AMPLitude:INTerpolate:TYPE?	1598
:CALCulate:LLINe[1]   2   3   4   5   6:BUILD TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6	1604
:CALCulate:LLINe[1]   2   3   4   5   6:COMMeNt "text"	1600
:CALCulate:LLINe[1]   2   3   4   5   6:COMMeNt?	1600
:CALCulate:LLINe[1]   2   3   4   5   6:CONTRol:INTerpolate:TYPE LOGarithmic   LINear	1598
:CALCulate:LLINe[1]   2   3   4   5   6:CONTRol:INTerpolate:TYPE?	1598
:CALCulate:LLINe[1]   2   3   4   5   6:COpy LLINE1   LLINE2   LLINE3   LLINE4   LLINE5   LLINE6 1603	
:CALCulate:LLINe[1]   2   3   4   5   6:DATA <x>, <ampl>, <connect>	1609
:CALCulate:LLINe[1]   2   3   4   5   6:DATA:MERGe <x-axis>, <ampl>, <connected>	1613
:CALCulate:LLINe[1]   2   3   4   5   6:DATA?	1609
:CALCulate:LLINe[1]   2   3   4   5   6:DELeTe	1606
:CALCulate:LLINe[1]   2   3   4   5   6:DESCRiption "Description"	1600
:CALCulate:LLINe[1]   2   3   4   5   6:DESCRiption?	1600
:CALCulate:LLINe[1]   2   3   4   5   6:DISPlay OFF   ON   0   1	1595
:CALCulate:LLINe[1]   2   3   4   5   6:DISPlay?	1595
:CALCulate:LLINe[1]   2   3   4   5   6:FAIL?	1609

---

## List of Commands

:CALCulate:LLINe[1]   2   3   4   5   6:FREQuency:CMODE:RELative ON   OFF   1   0	1599
:CALCulate:LLINe[1]   2   3   4   5   6:FREQuency:CMODE:RELative?	1599
:CALCulate:LLINe[1]   2   3   4   5   6:MARGin <rel_ampl>	1601
:CALCulate:LLINe[1]   2   3   4   5   6:MARGin:STATe OFF   ON   0   1	1601
:CALCulate:LLINe[1]   2   3   4   5   6:MARGin:STATe?	1601
:CALCulate:LLINe[1]   2   3   4   5   6:MARGin?	1601
:CALCulate:LLINe[1]   2   3   4   5   6:OFFSet:UPDate	1605
:CALCulate:LLINe[1]   2   3   4   5   6:OFFSet:X <value>	1604
:CALCulate:LLINe[1]   2   3   4   5   6:OFFSet:X?	1604
:CALCulate:LLINe[1]   2   3   4   5   6:OFFSet:Y <rel_ampl>	1605
:CALCulate:LLINe[1]   2   3   4   5   6:OFFSet:Y?	1605
:CALCulate:LLINe[1]   2   3   4   5   6:TRACe 1   2   3   4   5   6	1596
:CALCulate:LLINe[1]   2   3   4   5   6:TRACe?	1596
:CALCulate:LLINe[1]   2   3   4   5   6:TYPE UPPer   LOWer	1596
:CALCulate:LLINe[1]   2   3   4   5   6:TYPE?	1596
:CALCulate:MAMarker:COUPling ON   OFF   1   0	1569
:CALCulate:MAMarker:COUPling?	1569
:CALCulate:MAMarker:DETEctor[1]   2   3 OFF   NORMAl   AVERAge   POSitive   SAMPlE   NEGa- tive   QPEak   EAVERage   RAVERage	1565
:CALCulate:MAMarker:DETEctor[1]   2   3:DWELl <dwel time>	1565
:CALCulate:MAMarker:DETEctor[1]   2   3:DWELl?	1565
:CALCulate:MAMarker:DETEctor[1]   2   3?	1565
:CALCulate:MAMarker:PCENter ON   OFF   1   0	1569
:CALCulate:MAMarker:PCENter?	1569
:CALCulate:MARKer:AOFF	1549
:CALCulate:MARKer:COUPl[:STATe] OFF   ON   0   1	1548
:CALCulate:MARKer:COUPl[:STATe]?	1548
:CALCulate:MARKer:PEAK:EXCURsion <rel_ampl>	1657
:CALCulate:MARKer:PEAK:EXCURsion:STATe OFF   ON   0   1	1657
:CALCulate:MARKer:PEAK:EXCURsion:STATe?	1657
:CALCulate:MARKer:PEAK:EXCURsion?	1657



---

## List of Commands

:CALCulate:MARKer:PEAK:SEARch:MODE MAXimum   PARAmeter	1656
:CALCulate:MARKer:PEAK:SEARch:MODE?	1656
:CALCulate:MARKer:PEAK:SORT FREQuency   AMPLitude	1661
:CALCulate:MARKer:PEAK:SORT?	1661
:CALCulate:MARKer:PEAK:TABLE:READout ALL   GTDLine   LTDLine	1662
:CALCulate:MARKer:PEAK:TABLE:READout?	1662
:CALCulate:MARKer:PEAK:TABLE:STATe OFF   ON   0   1	1661
:CALCulate:MARKer:PEAK:TABLE:STATe?	1661
:CALCulate:MARKer:PEAK:THReshold <ampl>	1659
:CALCulate:MARKer:PEAK:THReshold:STATe OFF   ON   0   1	1659
:CALCulate:MARKer:PEAK:THReshold:STATe?	1659
:CALCulate:MARKer:PEAK:THReshold?	1659
:CALCulate:MARKer:TABLE[:STATe] OFF   ON   0   1	1544
:CALCulate:MARKer:TABLE[:STATe]?	1544
:CALCulate:MARKer:TRCKing[:STATe] OFF   ON   0   1	1685
:CALCulate:MARKer:TRCKing[:STATe]?	1685
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:CPSearch[:STATe] ON   OFF   1   0	1664
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:CPSearch[:STATe]?	1664
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FCOunt:GATetime <time>	1548
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FCOunt:GATetime:AUTO OFF   ON   0   1	1548
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FCOunt:GATetime:AUTO?	1548
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FCOunt:GATetime?	1548
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FCOunt:X?	1546
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FCOunt[:STATe] OFF   ON   0   1	1545
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FCOunt[:STATe]?	1545
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNcTION NOISe   BPOWer   BDENsi- ty   OFF	1551
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNcTION: BAND:LEFT <freq>	1558
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNcTION: BAND:LEFT?	1558
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNcTION: BAND:RIGHT <freq>	1559
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNcTION: BAND:RIGHT?	1559

---

## List of Commands

:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNction:BAND:SPAN <freq> . . . . .	1556
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNction:BAND:SPAN? . . . . .	1556
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNction:MAMarker? . . . . .	1560
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNction? . . . . .	1551
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:LINEs[:STATe] OFF   ON   0   1 . . . . .	1543
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:LINEs[:STATe]? . . . . .	1543
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum . . . . .	1653
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:LEFT . . . . .	1654
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:NEXT . . . . .	1654
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:RIGHT . . . . .	1654
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MINimum . . . . .	1666
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTa   FIXed   OFF . . . . .	1531
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE? . . . . .	1531
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:PTPeak . . . . .	1665
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer> . . . . .	1537
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence? . . . . .	1537
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe 1   2   3   4   5   6 . . . . .	1541
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe:AUTO OFF   ON   0   1 . . . . .	1543
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe:AUTO? . . . . .	1543
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe? . . . . .	1541
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <freq> . . . . .	1532
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition <real> . . . . .	1533
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition? . . . . .	1533
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:READout FREQuen- cy   TIME   ITIME   PERiod . . . . .	1538
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:READout:AUTO ON   OFF   1   0 . . . . .	1538
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:READout:AUTO? . . . . .	1538
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:READout? . . . . .	1538
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X? . . . . .	1532
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y <real> . . . . .	1534
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y? . . . . .	1534

---

## List of Commands

:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12[:SET]:CENTer	1571
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12[:SET]:DELTA:CENTer	1574
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12[:SET]:DELTA:SPAN	1573
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12[:SET]:RLEVel	1574
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12[:SET]:START	1572
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12[:SET]:STEP	1572
:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12[:SET]:STOP	1573
:CALCulate:MATH TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, PDIFfer- ence   PSUM   LOFFset   LDIFference   OFF, TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, <real>, <real>	1736
:CALCulate:MATH? TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6	1736
:CALCulate:MONitor:MARKer:AOFF	1306
:CALCulate:MONitor:MARKer:COUple[:STATe] ON   OFF   1   0	1306
:CALCulate:MONitor:MARKer:COUple[:STATe]?	1306
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNCTion NOISe   BPOW- er   BDENsity   OFF	1307
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNCTion: BAND:LEFT <freq>	1308
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNCTion: BAND:LEFT? . . .	1308
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNCTion: BAND:RIGHT <freq>	1309
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNCTion: BAND:RIGHT? . .	1309
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNCTion: BAND:SPAN <freq>	1308
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNCTion: BAND:SPAN? . . .	1308
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:FUNCTion?	1307
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTA   OFF . .	1302
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE?	1302
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer>	1305
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence? . . . . .	1305
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe <integer>	1305
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe? . . . . .	1305

---

## List of Commands

:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <freq> . . . . .	1303
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition <real> . . . . .	1303
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition? . . . . .	1303
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X? . . . . .	1303
:CALCulate:MONitor:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y? . . . . .	1304
:CALCulate:NTData[:STATe] OFF   ON   0   1 . . . . .	1743
:CALCulate:NTData[:STATe]? . . . . .	1743
:CALCulate:OBWidth:LIMit:FBLimit <freq> . . . . .	721
:CALCulate:OBWidth:LIMit:FBLimit? . . . . .	721
:CALCulate:OBWidth:LIMit[:TEST] ON   OFF   1   0 . . . . .	721
:CALCulate:OBWidth:LIMit[:TEST]? . . . . .	721
:CALCulate:OBWidth:MARKer:AOFF . . . . .	711
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum . . . . .	725
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTa   OFF . .	710
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE? . . . . .	710
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer> . . . . .	711
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence? . . . . .	711
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:STATe OFF   ON   0   1 . . . . .	712
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:STATe? . . . . .	712
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <real> . . . . .	708
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition <real> . . . . .	709
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition? . . . . .	709
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X? . . . . .	708
:CALCulate:OBWidth:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y? . . . . .	709
:CALCulate:PCONtrol:MARKer:COUPle[:STATe] ON   OFF   1   0 . . . . .	1161
:CALCulate:PCONtrol:MARKer:COUPle[:STATe]? . . . . .	1161
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum . . . . .	1195
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTa   OFF . .	1157
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE? . . . . .	1157
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer> . . . . .	1160

---

## List of Commands

:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence? . . . . .	1160
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe RFENvelope   SPOW- er   CPHase   APHase   DPHase . . . . .	1161
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe? . . . . .	1161
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <real> . . . . .	1158
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition <integer> . . . . .	1159
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition? . . . . .	1159
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X?. . . . .	1158
:CALCulate:PCONtrol:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y?. . . . .	1159
:CALCulate:PCONtrol:PRACH:INTerval <real> . . . . .	1174
:CALCulate:PCONtrol:PRACH:INTerval? . . . . .	1174
:CALCulate:PCONtrol:PRACH:MLENght <time> . . . . .	1173
:CALCulate:PCONtrol:PRACH:MLENght? . . . . .	1173
:CALCulate:PCONtrol:PRACH:OFFSet <real> . . . . .	1174
:CALCulate:PCONtrol:PRACH:OFFSet? . . . . .	1174
:CALCulate:PCONtrol:PRACH:PLENght <real> . . . . .	1173
:CALCulate:PCONtrol:PRACH:PLENght? . . . . .	1173
:CALCulate:PCONtrol:SLOT:DELay <real> . . . . .	1169
:CALCulate:PCONtrol:SLOT:DELay? . . . . .	1169
:CALCulate:PCONtrol:SLOT:INTerval <real> . . . . .	1169
:CALCulate:PCONtrol:SLOT:INTerval? . . . . .	1169
:CALCulate:PCONtrol:SLOT:LENGth <real> . . . . .	1170
:CALCulate:PCONtrol:SLOT:LENGth? . . . . .	1170
:CALCulate:PCONtrol:SLOT:OFFSet <real> . . . . .	1168
:CALCulate:PCONtrol:SLOT:OFFSet? . . . . .	1168
:CALCulate:PStatistic:MARKer:AOFF . . . . .	763
:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTa   OFF. 759	
:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE? . . . . .	759
:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer> . . . . .	762
:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence? . . . . .	762
:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe MEASured   GAUSs-	

---

## List of Commands

ian   REference . . . . .	762
:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACe? . . . . .	762
:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <rel_ampl> . . . . .	760
:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X? . . . . .	760
:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y? . . . . .	761
:CALCulate:PStatistic:STORE:REference . . . . .	783
:CALCulate:RHO:ASET:THReshold <rel_ampl> . . . . .	1079
:CALCulate:RHO:ASET:THReshold? . . . . .	1079
:CALCulate:RHO:DTXBurst 0   1   OFF   ON . . . . .	1081
:CALCulate:RHO:DTXBurst? . . . . .	1081
:CALCulate:RHO:IQOffset:INCLude OFF   ON   0   1 . . . . .	1078
:CALCulate:RHO:IQOffset:INCLude? . . . . .	1078
:CALCulate:RHO:LIMit:CDError <real> . . . . .	1027
:CALCulate:RHO:LIMit:CDError? . . . . .	1027
:CALCulate:RHO:LIMit:CPICH[:BTS] <real> . . . . .	1029
:CALCulate:RHO:LIMit:CPICH[:BTS]:POWer <real> . . . . .	1028
:CALCulate:RHO:LIMit:CPICH[:BTS]:POWer? . . . . .	1028
:CALCulate:RHO:LIMit:CPICH[:BTS]? . . . . .	1029
:CALCulate:RHO:LIMit:FERRor <freq> . . . . .	1028
:CALCulate:RHO:LIMit:FERRor? . . . . .	1028
:CALCulate:RHO:LIMit:PEAK <real> . . . . .	1026
:CALCulate:RHO:LIMit:PEAK? . . . . .	1026
:CALCulate:RHO:LIMit:RHO <real> . . . . .	1027
:CALCulate:RHO:LIMit:RHO? . . . . .	1027
:CALCulate:RHO:LIMit:RMS <real> . . . . .	1026
:CALCulate:RHO:LIMit:RMS? . . . . .	1026
:CALCulate:RHO:MARKer:AOFF . . . . .	1019
:CALCulate:RHO:MARKer:COUPle[:STATe] ON   OFF   1   0 . . . . .	1018
:CALCulate:RHO:MARKer:COUPle[:STATe]? . . . . .	1018
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:CHIP <real> . . . . .	1014
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:CHIP? . . . . .	1014

---

## List of Commands

:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum	1087
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:LEFT	1088
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:NEXT	1087
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:RIGHT	1087
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MINimum	1088
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSITION   DELTA   OFF	1013
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE?	1013
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:PTPeak	1088
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFERENCE <integer>	1017
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFERENCE?	1017
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACE CDPower   EVM   MER- Ror   PERRor   FERRor   EVMSlot   PCDE   POLar	1018
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:TRACE?	1018
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <real>	1015
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSITION <real>	1016
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSITION?	1016
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X?	1015
:CALCulate:RHO:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y?	1016
:CALCulate:SEMask:LLINE:STATE ON   OFF   1   0	618
:CALCulate:SEMask:LLINE:STATE?	618
:CALCulate:SEMask:MARKer:AOFF	539
:CALCulate:SEMask:MARKer:COUPLE[:STATE] ON   OFF   1   0	539
:CALCulate:SEMask:MARKer:COUPLE[:STATE]?	539
:CALCulate:SEMask:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSITION   OFF	536
:CALCulate:SEMask:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE?	536
:CALCulate:SEMask:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <freq>	537
:CALCulate:SEMask:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSITION <real>	538
:CALCulate:SEMask:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSITION?	538
:CALCulate:SEMask:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X?	537
:CALCulate:SEMask:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y?	538
:CALCulate:SPURious:MARKer:AOFF	637

---

## List of Commands

:CALCulate:SPURious:MARKer:COUple[:STATe] ON   OFF   1   0 . . . . .	636
:CALCulate:SPURious:MARKer:COUple[:STATe]? . . . . .	636
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum . . . . .	678
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:LEFT . . . . .	679
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:NEXT . . . . .	678
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum:RIGHT . . . . .	678
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MINimum . . . . .	680
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE POSition   DELTA   OFF . . . . .	632
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:MODE? . . . . .	632
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:PTPeak . . . . .	679
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence <integer> . . . . .	635
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:REFerence? . . . . .	635
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X <freq> . . . . .	633
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition <integer> . . . . .	634
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X:POSition? . . . . .	634
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:X? . . . . .	633
:CALCulate:SPURious:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12:Y? . . . . .	635
:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl> . . . . .	654
:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP:AUTO OFF   ON   0   1, OFF   ON   0   1 . . . . .	654
:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP:AUTO? . . . . .	654
:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP? . . . . .	654
:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA[:START] <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl> . . . . .	653
:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA[:START]? . . . . .	653
:CALCulate:TRACe[1]   2   3   4   5   6:FAIL? . . . . .	1612
:CALCulate:WAVeform:MARKer:AOFF . . . . .	1366



---

## List of Commands

:CALCulate:WAVeform:MARKer:COUPl[e[:STATe] ON OFF 1 0	1366
:CALCulate:WAVeform:MARKer:COUPl[e[:STATe]?	1366
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion BPOWer BDENsity OFF	1368
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion:BAND:LEFT <time>	1370
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion:BAND:LEFT?	1370
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion:BAND:RIGHT <time>	1370
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion:BAND:RIGHT?	1370
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion:BAND:SPAN <time>	1369
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion:BAND:SPAN?	1369
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion?	1368
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum	1386
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT	1386
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum	1386
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF.	1361
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?	1361
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>.	1365
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?	1365
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe OFF ON 0 1	1367
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe?	1367
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe RFENvelope IQ..	1365
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?	1365
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <time>	1362
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real>	1363
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?	1363
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?	1362
:CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?	1364
:CALibration:AUTO ON PARTial OFF	243
:CALibration:AUTO:ALERt TTEMPerature DAY WEEK NONE	246

---

## List of Commands

:CALibration:AUTO:ALERT?	.246
:CALibration:AUTO:MODE ALL   NRF	.246
:CALibration:AUTO:MODE?	.246
:CALibration:AUTO:TIME:OFF?	.256
:CALibration:AUTO?	.243
:CALibration:DATA:BACKup <filename>	.264
:CALibration:DATA:DEFault	.258
:CALibration:DATA:REStore <filename>	.264
:CALibration:FREQuency:REFerence:COARse <integer>	.267
:CALibration:FREQuency:REFerence:COARse?	.267
:CALibration:FREQuency:REFerence:FINE <integer>	.267
:CALibration:FREQuency:REFerence:FINE?	.267
:CALibration:FREQuency:REFerence:MODE CALibrated   USER	.266
:CALibration:FREQuency:REFerence:MODE?	.266
:CALibration:IQ:FLATness:I	.1520
:CALibration:IQ:FLATness:I   IBAR   Q   QBAR:TIME?	.1524
:CALibration:IQ:FLATness:IBAR	.1521
:CALibration:IQ:FLATness:Q	.1522
:CALibration:IQ:FLATness:QBAR	.1523
:CALibration:IQ:ISOLation	.1518
:CALibration:IQ:ISOLation:TIME?	.1519
:CALibration:IQ:PROBe:I	.1526
:CALibration:IQ:PROBe:I   IBAR   Q   QBAR:TIME?	.1530
:CALibration:IQ:PROBe:I   Q:CLEar	.1476
:CALibration:IQ:PROBe:IBar	.1527
:CALibration:IQ:PROBe:Q	.1528
:CALibration:IQ:PROBe:QBar	.1529
:CALibration:NRF	.251
:CALibration:NRF?	.251
:CALibration:RF	.253
:CALibration:RF?	.253

---

## List of Commands

:CALibration:TEMPerature:CURRent?	254
:CALibration:TEMPerature:LALL?	255
:CALibration:TEMPerature:LPReselector?	256
:CALibration:TEMPerature:LRF?	256
:CALibration:TIME:LALL?	255
:CALibration:TIME:LPReselector?	256
:CALibration:TIME:LRF?	255
:CALibration:YTF	265
:CALibration:YTF?	265
:CALibration[:ALL]	250
:CALibration[:ALL]?	250
:CONFigure:ACP:NDEFault	403
:CONFigure:ACPower	479
:CONFigure:ACP	403
:CONFigure:CDPower	904
:CONFigure:CDPower:NDEFault	791
:CONFigure:CDPower	791
:CONFigure:CHPower	366
:CONFigure:CHPower:NDEFault	329
:CONFigure:CHPower	329
:CONFigure:EVMQpsk	1254
:CONFigure:EVMQpsk:NDEFault	1219
:CONFigure:EVMQpsk	1219
:CONFigure:MONitor	1313
:CONFigure:MONitor:NDEFault	1287
:CONFigure:MONitor	1287
:CONFigure:OBWidth	722
:CONFigure:OBWidth:NDEFault	693
:CONFigure:OBWidth	693
:CONFigure:PCONtrol	1191
:CONFigure:PCONtrol:NDEFault	1139

---

## List of Commands

:CONFigure:PCONtrol . . . . .	1139
:CONFigure:PStatistic . . . . .	772
:CONFigure:PStatistic:NDEFault . . . . .	747
:CONFigure:PStatistic . . . . .	747
:CONFigure:RHO . . . . .	1086
:CONFigure:RHO:NDEFault . . . . .	979
:CONFigure:RHO . . . . .	979
:CONFigure:SEMask . . . . .	579
:CONFigure:SEMask:NDEFault . . . . .	515
:CONFigure:SEMask . . . . .	515
:CONFigure:SPURious . . . . .	667
:CONFigure:SPURious:NDEFault . . . . .	621
:CONFigure:SPURious . . . . .	621
:CONFigure:WAVeform . . . . .	1379
:CONFigure:WAVeform:NDEFault . . . . .	1335
:CONFigure:WAVeform . . . . .	1335
:CONFigure?. . . . .	1578
:COUPle ALL   NONE . . . . .	1437
:DISPlay:<measurement>:ANNotation:TITLe:DATA <string> . . . . .	1817
:DISPlay:<measurement>:ANNotation:TITLe:DATA? . . . . .	1817
:DISPlay:ACPower:VIEW[1]:WINDow[1]:BGRaph OFF   ON   0   1 . . . . .	512
:DISPlay:ACPower:VIEW[1]:WINDow[1]:BGRaph? . . . . .	512
:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON . . . . .	418
:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle? . . . . .	418
:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp> . . . . .	415
:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	415
:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	414
:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	414
:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSitioN TOP   CENTer   BOTTom . . . . .	417
:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSitioN? . . . . .	417

---

## List of Commands

:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0	1816
:DISPlay:ACTivefunc[:STATe]?	1816
:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1	1814
:DISPlay:ANNotation:MBAR[:STATe]?	1814
:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1	1815
:DISPlay:ANNotation:SCReen[:STATe]?	1815
:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0	1815
:DISPlay:ANNotation:TRACe[:STATe]?	1815
:DISPlay:BACKlight ON   OFF	1820
:DISPlay:BACKlight:INTensity <integer>	1821
:DISPlay:BACKlight:INTensity?	1821
:DISPlay:BACKlight?	1820
:DISPlay:CDPower:CDOMain:SPAN:STARt <integer>	925
:DISPlay:CDPower:CDOMain:SPAN:STARt?	925
:DISPlay:CDPower:CDOMain:SPAN:STOP <integer>	926
:DISPlay:CDPower:CDOMain:SPAN:STOP?	926
:DISPlay:CDPower:CPOWer[:STATe] 0   1   OFF   ON	963
:DISPlay:CDPower:CPOWer[:STATe]?	963
:DISPlay:CDPower:VIEW:NSElect <integer>	947
:DISPlay:CDPower:VIEW:NSElect?	947
:DISPlay:CDPower:VIEW[:SElect] PGRaph   CDE   SEVM   QUAD   DBITs   LDEMod	946
:DISPlay:CDPower:VIEW[:SElect]?	946
:DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real>	821
:DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	821
:DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	814
:DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	814
:DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real>	822
:DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	822
:DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	815
:DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	815
:DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision <real>	822

---

## List of Commands

:DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision? . . . . .	822
:DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	815
:DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel? . . . . .	815
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:COUPlE 0   1   OFF   ON . . . . .	938
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:COUPlE? . . . . .	938
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:PDIVision <real> . . . . .	931
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:PDIVision? . . . . .	931
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real> . . . . .	927
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RLEVel? . . . . .	927
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHt. . . . .	935
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RPOSition? . . . . .	935
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON . . . . .	831
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:COUPlE? . . . . .	831
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	823
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	823
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	816
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	816
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom. . . . .	828
:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? . . . . .	828
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:COUPlE 0   1   OFF   ON . . . . .	938
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:COUPlE? . . . . .	938
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:PDIVision <real> . . . . .	931
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:PDIVision? . . . . .	931
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RLEVel <real> . . . . .	928
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RLEVel? . . . . .	928
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHt. . . . .	935
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RPOSition? . . . . .	935
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON . . . . .	832
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:COUPlE? . . . . .	832
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	823
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:PDIVision? . . . . .	823

---

## List of Commands

:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	816
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RLEVel? . . . . .	816
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom . . . . .	829
:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RPOSition? . . . . .	829
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:COUPlE 0   1   OFF   ON . . . . .	939
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:COUPlE? . . . . .	939
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:PDIVision <real> . . . . .	932
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:PDIVision? . . . . .	932
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RLEVel <real> . . . . .	928
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RLEVel? . . . . .	928
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHT . . . . .	936
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RPOSition? . . . . .	936
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON . . . . .	832
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:COUPlE? . . . . .	832
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	824
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:PDIVision? . . . . .	824
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	817
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RLEVel? . . . . .	817
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom . . . . .	829
:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RPOSition? . . . . .	829
:DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	825
:DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	825
:DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	818
:DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	818
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:COUPlE 0   1   OFF   ON . . . . .	939
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:COUPlE? . . . . .	939
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:PDIVision <real> . . . . .	932
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:PDIVision? . . . . .	932
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RLEVel <real> . . . . .	929
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RLEVel? . . . . .	929
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHT . . . . .	936

---

## List of Commands

:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RPOSition?	.936
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:PDIVision <real>	.825
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:PDIVision?	.825
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RLEVel <real>	.818
:DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RLEVel?	.818
:DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real>	.826
:DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	.826
:DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	.819
:DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	.819
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:COUPlE 0   1   OFF   ON	.940
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:COUPlE?	.940
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:PDIVision <real>	.933
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:PDIVision?	.933
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RLEVel <real>	.929
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RLEVel?	.929
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHt	.937
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RPOSition?	.937
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON	.833
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:COUPlE?	.833
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:PDIVision <real>	.826
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:PDIVision?	.826
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:RLEVel <real>	.819
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:RLEVel?	.819
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom	.830
:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:RPOSition?	.830
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:COUPlE 0   1   OFF   ON	.941
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:COUPlE?	.941
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:PDIVision <real>	.934
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:PDIVision?	.934
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real>	.930
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:RLEVel?	.930



---

## List of Commands

:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHT .	937
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:RPOSition?	937
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON .	834
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:COUPlE?	834
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real>	827
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	827
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> .	820
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	820
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom	830
:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?	830
:DISPlay:CHPower:VIEW:MASK[:SELEct] LSNI   GPNI   IPNI   GPA2   KSKP .	400
:DISPlay:CHPower:VIEW:MASK[:SELEct]?	400
:DISPlay:CHPower:VIEW[:SELEct] RFSPectrum   SHOULder   MASK .	391
:DISPlay:CHPower:VIEW[:SELEct] RFSPectrum   SHOULder .	392
:DISPlay:CHPower:VIEW[:SELEct]?	391
:DISPlay:CHPower:VIEW[:SELEct]?	392
:DISPlay:CHPower:VIEW[1]:WINDow[1]:BGRaph ON   OFF   1   0 .	393
:DISPlay:CHPower:VIEW[1]:WINDow[1]:BGRaph?	393
:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON .	338
:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE?	338
:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp>	335
:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	335
:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	334
:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	334
:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom . .	337
:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?	337
:DISPlay:ENABLE OFF   ON   0   1 .	1822
:DISPlay:ENABLE?	1822
:DISPlay:EVMQpsk:VIEW:NSELEct <integer>	1276
:DISPlay:EVMQpsk:VIEW:NSELEct?	1276

---

## List of Commands

:DISPlay:EVMQpsk:VIEW[:SElect] POLar   ERror . . . . .	1276
:DISPlay:EVMQpsk:VIEW[:SElect]? . . . . .	1276
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:COFFset <integer> . . . . .	1282
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:COFFset? . . . . .	1282
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:FVECTor[:STATe] OFF   ON   0   1 . . . . .	1284
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:FVECTor[:STATe]? . . . . .	1284
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe] OFF   ON   0   1 . . . . .	1283
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe]? . . . . .	1283
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:IQCHips <integer> . . . . .	1282
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:IQCHips? . . . . .	1282
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:POLar VC   VECTor   CONSTln . . . . .	1281
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:POLar? . . . . .	1281
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATe] OFF   ON   0   1 . . . . .	1283
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATe]? . . . . .	1283
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUple ON   OFF   0   1 . . . . .	1271
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUple? . . . . .	1271
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision <real> . . . . .	1267
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision? . . . . .	1267
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real> . . . . .	1265
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel? . . . . .	1265
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHt . . . . .	1269
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition? . . . . .	1269
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	1224
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	1224
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	1222
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	1222
:DISPlay:EVMQpsk:VIEW2:WINDow[1]   2   3:TRACe:Y[:SCALe]:COUple ON   OFF   1   0 . . . . .	1228
:DISPlay:EVMQpsk:VIEW2:WINDow[1]   2   3:TRACe:Y[:SCALe]:COUple? . . . . .	1228
:DISPlay:EVMQpsk:VIEW2:WINDow[1]   2   3:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOT-Tom . . . . .	1227
:DISPlay:EVMQpsk:VIEW2:WINDow[1]   2   3:TRACe:Y[:SCALe]:RPOSition? . . . . .	1227

---

## List of Commands

:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPle ON   OFF   0   1	1272
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPle?	1272
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVision <real>	1268
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVision?	1268
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel <real>	1266
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel?	1266
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOStion LEFT   CENTer   RIGHt	1270
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOStion?	1270
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision <real>	1225
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision?	1225
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real>	1223
:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel?	1223
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPle ON   OFF   0   1	1272
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPle?	1272
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVision <real>	1268
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVision?	1268
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel <real>	1266
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel?	1266
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOStion LEFT   CENTer   RIGHt	1270
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOStion?	1270
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision <real>	1226
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision?	1226
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel <real>	1223
:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel?	1223
:DISPlay:FSCReen[:STATe] OFF   ON   0   1	1822
:DISPlay:FSCReen[:STATe]?	1822
:DISPlay:MONitor:VIEW:WINDow:TRACe[1]   2   3:CLEar	1331
:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON	1290
:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle?	1290
:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl>	1289
:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	1289

---

## List of Commands

:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	1288
:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	1288
:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOStion TOP   CENTer   BOTTom . . . . .	1290
:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOStion? . . . . .	1290
:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON . . . . .	699
:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle? . . . . .	699
:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl> . . . . .	696
:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	696
:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	695
:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	695
:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOStion TOP   CENTer   BOTTom . . . . .	698
:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOStion? . . . . .	698
:DISPlay:PCONtrol:VIEW:NSElect <integer> . . . . .	1206
:DISPlay:PCONtrol:VIEW:NSElect? . . . . .	1206
:DISPlay:PCONtrol:VIEW[:SElect] Power   PHASe . . . . .	1206
:DISPlay:PCONtrol:VIEW[:SElect]? . . . . .	1206
:DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:CPHase[:STATe] ON   OFF   1   0 . . . . .	1215
:DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:CPHase[:STATe]? . . . . .	1215
:DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl> . . . . .	1147
:DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	1147
:DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	1145
:DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	1145
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:COUPle 0   1   OFF   ON . . . . .	1203
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:COUPle? . . . . .	1203
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:PDIVision <time> . . . . .	1202
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:PDIVision? . . . . .	1202
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <time> . . . . .	1201
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RLEVel? . . . . .	1201
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RPOStion LEFT   CENTer   RIGHT . . . . .	1202

---

## List of Commands

:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RPOSition?	1202
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON	1150
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE?	1150
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom	1150
:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?	1150
:DISPlay:PCONtrol:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real>	1148
:DISPlay:PCONtrol:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	1148
:DISPlay:PCONtrol:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	1146
:DISPlay:PCONtrol:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	1146
:DISPlay:PCONtrol:WINDow:TEXT:SNUMber RELative   ABSolute	1215
:DISPlay:PCONtrol:WINDow:TEXT:SNUMber?	1215
:DISPlay:PStatistic:GAUSSian[:STATe] OFF   ON   0   1	784
:DISPlay:PStatistic:GAUSSian[:STATe]?	784
:DISPlay:PStatistic:RTRace[:STATe] OFF   ON   0   1	783
:DISPlay:PStatistic:RTRace[:STATe]?	783
:DISPlay:PStatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDIVision <rel_ampl>	781
:DISPlay:PStatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDIVision?	781
:DISPlay:RHO:CDOMain:SPAN:STARt <integer>	1098
:DISPlay:RHO:CDOMain:SPAN:STARt?	1098
:DISPlay:RHO:CDOMain:SPAN:STOP <integer>	1098
:DISPlay:RHO:CDOMain:SPAN:STOP?	1098
:DISPlay:RHO:VIEW:NSElect <integer>	1104
:DISPlay:RHO:VIEW:NSElect?.	1104
:DISPlay:RHO:VIEW[:SElect] POLar   ERRor   PGRaph   TABLe   SUMMary   CDError	1104
:DISPlay:RHO:VIEW[:SElect]?	1104
:DISPlay:RHO:VIEW[1]:WINDow[1]:TEXT:TFUNit CHIP   SECond	1113
:DISPlay:RHO:VIEW[1]:WINDow[1]:TEXT:TFUNit?	1113
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:COFFset <integer>	1110
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:COFFset?	1110
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:FVECTor[:STATe] 0   1   OFF   ON	1112

---

## List of Commands

:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:FVECTor[:STATe]?	1112
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe] 0   1   OFF   ON	1111
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe]?	1111
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:IQCHips <integer>	1111
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:IQCHips?	1111
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:POLar VC   VECTor   CONSTln	1110
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:POLar?	1110
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATe] 0   1   OFF   ON	1112
:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATe]?	1112
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPlE 0   1   OFF   ON	1096
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPlE?	1096
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision <real>	1092
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision?	1092
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real>	1090
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel?	1090
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHT	1094
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition?	1094
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON	1004
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE?	1004
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real>	996
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	996
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	991
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	991
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom	1001
:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?	1001
:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPlE 0   1   OFF   ON	1096
:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPlE?	1096
:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVision <real>	1093
:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVision?	1093
:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel <real>	1091
:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel?	1091

---

## List of Commands

:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHt . . . . .	1095
:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOSition? . . . . .	1095
:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON . . . . .	1004
:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:COUPle? . . . . .	1004
:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	997
:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision? . . . . .	997
:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	992
:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel?. . . . .	992
:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom . . . . .	1001
:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RPOSition? . . . . .	1001
:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPle 0   1   OFF   ON . . . . .	1097
:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPle? . . . . .	1097
:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVision <real> . . . . .	1093
:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVision? . . . . .	1093
:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel <real> . . . . .	1091
:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel?. . . . .	1091
:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOSition LEFT   CENTer   RIGHt . . . . .	1095
:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOSition? . . . . .	1095
:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON . . . . .	1005
:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:COUPle? . . . . .	1005
:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	997
:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision? . . . . .	997
:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	992
:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel?. . . . .	992
:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom . . . . .	1002
:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RPOSition? . . . . .	1002
:DISPlay:RHO:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	1000
:DISPlay:RHO:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	1000
:DISPlay:RHO:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	995
:DISPlay:RHO:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	995
:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON . . . . .	1006



---

## List of Commands

:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:COUPle? . . . . .	1006
:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	998
:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	998
:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	993
:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	993
:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom . . .	1002
:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? . . . . .	1002
:DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON . . . . .	1006
:DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:COUPle? . . . . .	1006
:DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> . . . . .	998
:DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:PDIVision? . . . . .	998
:DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	994
:DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:RLEVel? . . . . .	994
:DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom . . .	1003
:DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:RPOSition? . . . . .	1003
:DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON . . . . .	1007
:DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:COUPle? . . . . .	1007
:DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:PDIVision <freq> . . . . .	999
:DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:PDIVision? . . . . .	999
:DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:RLEVel <freq> . . . . .	994
:DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:RLEVel? . . . . .	994
:DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom . . .	1003
:DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:RPOSition? . . . . .	1003
:DISPlay:SEMask:VIEW:NSElect <integer> . . . . .	604
:DISPlay:SEMask:VIEW:NSElect? . . . . .	604
:DISPlay:SEMask:VIEW[:SElect] APFReq   RPFReq   IPOWer . . . . .	603
:DISPlay:SEMask:VIEW[:SElect]? . . . . .	603
:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0   1   ON   OFF . . . . .	530
:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle? . . . . .	530
:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl> . . . . .	527
:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	527



---

## List of Commands

:DISPlay:SEMAsk:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> . . . . .	526
:DISPlay:SEMAsk:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	526
:DISPlay:SEMAsk:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOStion TOP   CENTer   BOTTom	529
:DISPlay:SEMAsk:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOStion? . . . . .	529
:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON . . . . .	626
:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle? . . . . .	626
:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl> . . . . .	624
:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	624
:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel < real> . . . . .	623
:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	623
:DISPlay:THEMe TDColor   TDMonochrome   FCOLor   FMONochrome . . . . .	1820
:DISPlay:THEMe? . . . . .	1820
:DISPlay:WAVeform:VIEW:NSElect <integer> . . . . .	1399
:DISPlay:WAVeform:VIEW:NSElect? . . . . .	1399
:DISPlay:WAVeform:VIEW[:SElect] RFENvelope   IQ. . . . .	1399
:DISPlay:WAVeform:VIEW[:SElect]? . . . . .	1399
:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl> . . . . .	1339
:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	1339
:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <ampl> . . . . .	1337
:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?. . . . .	1337
:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOStion TOP   CENTer   BOTTom .	1341
:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOStion? . . . . .	1341
:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:COUPle 0   1   OFF   ON . . . . .	1395
:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:COUPle? . . . . .	1395
:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:PDIVision <time>. . . . .	1394
:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:PDIVision? . . . . .	1394
:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <time>. . . . .	1393
:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RLEVel? . . . . .	1393
:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RPOStion LEFT   CENTer   RIGHT	1394
:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RPOStion? . . . . .	1394

---

## List of Commands

:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON . . . . .	1343
:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE? . . . . .	1343
:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <voltage> . . . . .	1340
:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	1340
:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <voltage> . . . . .	1338
:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? . . . . .	1338
:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom . . . . .	1342
:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? . . . . .	1342
:DISPlay:WINDow:FORMat:TILE . . . . .	159
:DISPlay:WINDow:FORMat:ZOOM . . . . .	159
:DISPlay:WINDow:MAMarker:POSition LEFT   RIGHT . . . . .	1564
:DISPlay:WINDow:MAMarker:POSition? . . . . .	1564
:DISPlay:WINDow:MAMarker[:STATe] ON   OFF   1   0 . . . . .	1564
:DISPlay:WINDow:MAMarker[:STATe]? . . . . .	1564
:DISPlay:WINDow[:SElect] <number> . . . . .	160
:DISPlay:WINDow[:SElect]? . . . . .	160
:DISPlay:WINDow[1]:ANNotation[:ALL] OFF   ON   0   1 . . . . .	1819
:DISPlay:WINDow[1]:ANNotation[:ALL]? . . . . .	1819
:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1 . . . . .	1818
:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]? . . . . .	1818
:DISPlay:WINDow[1]:TRACe:Y:DLINe <ampl> . . . . .	1819
:DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe OFF   ON   0   1 . . . . .	1819
:DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe? . . . . .	1819
:DISPlay:WINDow[1]:TRACe:Y:DLINe? . . . . .	1819
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRLevel <rel_ampl> . . . . .	1746
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRLevel? . . . . .	1746
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRPosition <integer> . . . . .	1747
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRPosition? . . . . .	1747
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl> . . . . .	1420
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? . . . . .	1420

---

## List of Commands

:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> .....	1405
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel:OFFSet <rel_ampl> .....	1429
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel:OFFSet? .....	1429
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? .....	1405
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:SPACing LINear   LOGarithmic .....	1421
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:SPACing? .....	1421
:FETCh:ACP[n]? .....	403
:FETCh:CDPower[n]? .....	791
:FETCh:CHPower:CHPower? .....	329
:FETCh:CHPower:DENSity? .....	329
:FETCh:CHPower[n]? .....	329
:FETCh:EVMQpsk[n]? .....	1219
:FETCh:MONitor[n]? .....	1287
:FETCh:OBWidth [n]? .....	693
:FETCh:OBWidth:FERRor? .....	693
:FETCh:OBWidth:OBWidth? .....	693
:FETCh:OBWidth:XDB? .....	693
:FETCh:PCONtrol[n]? .....	1139
:FETCh:PStatistic[n]? .....	747
:FETCh:RHO[n]? .....	979
:FETCh:SEMask[n]? .....	515
:FETCh:SPURious[n]? .....	621
:FETCh:WAVeform[n] .....	1335
:FORMat:BORDer NORMal   SWAPped .....	1588
:FORMat:BORDer? .....	1588
:FORMat[:TRACe][:DATA] ASCii   INTeger,32   REAL,32   REAL,64 .....	1586
:FORMat[:TRACe][:DATA]? .....	1586
:GLOBal:FREQuency:CENTer[:STATe] 1   0   ON   OFF .....	1650
:GLOBal:FREQuency:CENTer[:STATe]? .....	1650
:HCOPy:ABORt. ....	186
:HCOPy[:IMMediate] .....	186

---

## List of Commands

:INITiate:ACP	.403
:INITiate:CDPower	.791
:INITiate:CHPower	.329
:INITiate:CONTinuous OFF   ON   0   1	.1451
:INITiate:CONTinuous?	.1451
:INITiate:MONitor	.1287
:INITiate:OBWidth	.693
:INITiate:PAUse	.1698
:INITiate:PCONtrol	.1139
:INITiate:PStatistic	.747
:INITiate:REStart	.1671
:INITiate:RESume	.1698
:INITiate:RHO	.979
:INITiate:SEMAsk	.515
:INITiate:SPURious	.621
:INITiate:WAVeform	.1335
:INITiate[:IMMediate]	.1671
:INPut:COUPling AC   DC	.1461
:INPut:COUPling:I   Q DC   LFR1   LFR2	.1474
:INPut:COUPling:I   Q?	.1474
:INPut:COUPling?	.1461
:INPut:IMPedance:IQ U50   B50   U1M   B1M	.1469
:INPut:IMPedance:IQ?	.1469
:INPut:IMPedance:REFerence <integer>	.1476
:INPut:IMPedance:REFerence?	.1476
:INPut:IQ:MIRRored OFF   ON   0   1	.1470
:INPut:IQ:MIRRored?	.1470
:INPut:IQ:Q:DIFFerential OFF   ON   0   1	.1470
:INPut:IQ:Q:DIFFerential?	.1470
:INPut:IQ[:I]:DIFFerential OFF   ON   0   1	.1466
:INPut:IQ[:I]:DIFFerential?	.1466

---

## List of Commands

:INPut:OFFSet:I   Q <voltage> . . . . .	1474
:INPut:OFFSet:I   Q? . . . . .	1474
:INPut[1]:IQ:BALEnc[[:STATE] OFF   ON   0   1. . . . .	1467
:INPut[1]:IQ:BALEnc[[:STATE]? . . . . .	1467
:INPut[1]:IQ:Q:IMPedance LOW   HIGH. . . . .	1471
:INPut[1]:IQ:Q:IMPedance? . . . . .	1471
:INPut[1]:IQ:TYPE IQ   I   Q . . . . .	1465
:INPut[1]:IQ:TYPE? . . . . .	1465
:INPut[1]:IQ[:I]:IMPedance LOW   HIGH . . . . .	1467
:INPut[1]:IQ[:I]:IMPedance? . . . . .	1467
:INSTRument:CATalog? . . . . .	1638
:INSTRument:COUple:DEFault. . . . .	1650
:INSTRument:COUple:FREQuency:CENTer ALL   NONE. . . . .	1650
:INSTRument:COUple:FREQuency:CENTer? . . . . .	1650
:INSTRument:DEFault . . . . .	185
:INSTRument:NSElect <integer> . . . . .	1638
:INSTRument:NSElect? . . . . .	1638
:INSTRument[:SElect] SA   BASIC   WCDMA   CDMA2K   EDGE GSM   PNOISE   CDMA1XEV   CW- LAN   WIMAXOFDMA   CWIMAXOFDM   VSA   VSA89601   LTE   IDEN   WIMAXFIXED   LTETDD   TDSCDMA   NFIGURE   ADEMOD   DVB   DTMB   ISDBT   CMMB   RLC . . . . .	1635
:INSTRument[:SElect]? . . . . .	1635
:LXI:CLOCK:PTP:ACCuracy NS25   NS100   NS250   NS1000   NS2500   US10   US25   US100   US250   US1000   US2500   MS10   M S25   MS100   MS1000   S10   GT10S   UNKNown. . . . .	288
:LXI:CLOCK:PTP:ACCuracy? . . . . .	288
:LXI:CLOCK:PTP:ANNounce:INTerval <interval>. . . . .	288
:LXI:CLOCK:PTP:ANNounce:INTerval? . . . . .	288
:LXI:CLOCK:PTP:ANNounce:RTOut <numberOfIntervals> . . . . .	289
:LXI:CLOCK:PTP:ANNounce:RTOut? . . . . .	289
:LXI:CLOCK:PTP:CCLass? . . . . .	289
:LXI:CLOCK:PTP:DEVIation? . . . . .	289
:LXI:CLOCK:PTP:DOMain <domainNumber> . . . . .	290

---

## List of Commands

:LXI:CLOCK:PTP:DOMain?	290
:LXI:CLOCK:PTP:DRINterval <seconds>	292
:LXI:CLOCK:PTP:DRINterval?	293
:LXI:CLOCK:PTP:GMASter:ACCuracy?	293
:LXI:CLOCK:PTP:GMASter:MADDress?	293
:LXI:CLOCK:PTP:GMASter:TRACeability?	294
:LXI:CLOCK:PTP:MASter:MADDress?	294
:LXI:CLOCK:PTP:OFFSet?	290
:LXI:CLOCK:PTP:PRIority:FIRSt <priority>	290
:LXI:CLOCK:PTP:PRIority:FIRSt?	290
:LXI:CLOCK:PTP:PRIority:SECond <priority>	291
:LXI:CLOCK:PTP:PRIority:SECond?	291
:LXI:CLOCK:PTP:SINterval <seconds>	292
:LXI:CLOCK:PTP:SINterval?	292
:LXI:CLOCK:PTP:STATe?	291
:LXI:CLOCK:PTP:TRACeability?	291
:LXI:CLOCK:PTP:VARiance?	292
:LXI:CLOCK:SALGorithm:LOG:ALL?	297
:LXI:CLOCK:SALGorithm:LOG:CIRCular:FBENtry	295
:LXI:CLOCK:SALGorithm:LOG:CIRCular[:ENABled] ON   OFF   0   1	295
:LXI:CLOCK:SALGorithm:LOG:CIRCular[:ENABled]?	295
:LXI:CLOCK:SALGorithm:LOG:CLEar	295
:LXI:CLOCK:SALGorithm:LOG:COUNt?	296
:LXI:CLOCK:SALGorithm:LOG:ENABled ON   OFF   0   1	296
:LXI:CLOCK:SALGorithm:LOG:ENABled?	296
:LXI:CLOCK:SALGorithm:LOG:ENTRy? <intIndex>	297
:LXI:CLOCK:SALGorithm:LOG:SIZE <maxLogEntries>	296
:LXI:CLOCK:SALGorithm:LOG:SIZE?	296
:LXI:CLOCK:SALGorithm:LOG:STATistics:CLEar	297
:LXI:CLOCK:SALGorithm:LOG:STATistics[:DATA]?	297
:LXI:CLOCK:SALGorithm:LOG[:NEXT]?	295

---

## List of Commands

:LXI:CLOCK:SALGorithm[:SET]:ASYMmetry <seconds> . . . . .	298
:LXI:CLOCK:SALGorithm[:SET]:ASYMmetry? . . . . .	298
:LXI:CLOCK:SALGorithm[:SET]:CFTHreshold <secondsSquared> . . . . .	298
:LXI:CLOCK:SALGorithm[:SET]:CFTHreshold? . . . . .	298
:LXI:CLOCK:SALGorithm[:SET]:CIConstant <servoConstant> . . . . .	299
:LXI:CLOCK:SALGorithm[:SET]:CIConstant? . . . . .	299
:LXI:CLOCK:SALGorithm[:SET]:CONFigure <asymmetry>, <coarse fine threshold>, <cpc>, <cic>, <fpc>, <fic>, <maximum outlier discard>, <outlier threshold>, <set/steer threshold> . . . . .	302
:LXI:CLOCK:SALGorithm[:SET]:CPConstant <servoConstant>. . . . .	299
:LXI:CLOCK:SALGorithm[:SET]:CPConstant?. . . . .	299
:LXI:CLOCK:SALGorithm[:SET]:FIConstant <servoConstant> . . . . .	300
:LXI:CLOCK:SALGorithm[:SET]:FIConstant? . . . . .	300
:LXI:CLOCK:SALGorithm[:SET]:FPConstant <servoConstant>. . . . .	300
:LXI:CLOCK:SALGorithm[:SET]:FPConstant?. . . . .	300
:LXI:CLOCK:SALGorithm[:SET]:OMAXimum <consecutiveSamples>. . . . .	300
:LXI:CLOCK:SALGorithm[:SET]:OMAXimum? . . . . .	300
:LXI:CLOCK:SALGorithm[:SET]:OTENable ON   OFF   1   0 . . . . .	301
:LXI:CLOCK:SALGorithm[:SET]:OTENable? . . . . .	301
:LXI:CLOCK:SALGorithm[:SET]:OTHReshold <standardDeviations>. . . . .	301
:LXI:CLOCK:SALGorithm[:SET]:OTHReshold? . . . . .	301
:LXI:CLOCK:SALGorithm[:SET]:STHReshold <seconds> . . . . .	302
:LXI:CLOCK:SALGorithm[:SET]:STHReshold? . . . . .	302
:LXI:CLOCK:SYNC:LOCAl:ENABled ON   OFF   0   1 . . . . .	303
:LXI:CLOCK:SYNC:LOCAl:ENABled? . . . . .	303
:LXI:CLOCK:SYNC:LOCAl:INTerval . . . . .	303
:LXI:CLOCK:SYNC:LOCAl:INTerval? . . . . .	303
:LXI:CLOCK:SYNC:MASTer? . . . . .	302
:LXI:CLOCK[:TIME]:DLSavings? . . . . .	285
:LXI:CLOCK[:TIME]:FRACtion <fraction> . . . . .	284
:LXI:CLOCK[:TIME]:FRACtion? . . . . .	284
:LXI:CLOCK[:TIME]:LOCAl? . . . . .	284

---

## List of Commands

:LXI:CLOCK[:TIME]:LSOFFset <integer> .....	284
:LXI:CLOCK[:TIME]:LSOFFset? .....	284
:LXI:CLOCK[:TIME]:MARKer[1]   2   3   4   5   6   7   8   9:CLEAr .....	286
:LXI:CLOCK[:TIME]:MARKer[1]   2   3   4   5   6   7   8   9:DELTA? .....	287
:LXI:CLOCK[:TIME]:MARKer[1]   2   3   4   5   6   7   8   9[:SET] .....	286
:LXI:CLOCK[:TIME]:MEASure:CLEAr .....	287
:LXI:CLOCK[:TIME]:MEASure[:DELTA]? .....	287
:LXI:CLOCK[:TIME]:SECOnds <seconds> .....	283
:LXI:CLOCK[:TIME]:SECOnds? .....	283
:LXI:CLOCK[:TIME]:TAI? .....	285
:LXI:CLOCK[:TIME]:TZONe? .....	285
:LXI:CLOCK[:TIME]:UTC? .....	285
:LXI:CLOCK[:TIME][:VALue] <seconds>,<fractionalSeconds> .....	282
:LXI:CLOCK[:TIME][:VALue]? .....	283
:LXI:EVENT:DOMain <intDomain> .....	274
:LXI:EVENT:DOMain? .....	274
:LXI:EVENT:INPut:LAN:ADD “LANEVENT” .....	305
:LXI:EVENT:INPut:LAN:COUNt? .....	309
:LXI:EVENT:INPut:LAN:DISable:ALL .....	305
:LXI:EVENT:INPut:LAN:FILTer “LANEVENT”, “filterString” .....	307
:LXI:EVENT:INPut:LAN:FILTer? .....	307
:LXI:EVENT:INPut:LAN:IDENtifier “LANEVENT”, “identifier” .....	307
:LXI:EVENT:INPut:LAN:IDENtifier? “LANEVENT” .....	307
:LXI:EVENT:INPut:LAN:LIST? .....	309
:LXI:EVENT:INPut:LAN:LOCation “LANEVENT”, “path” .....	305
:LXI:EVENT:INPut:LAN:LOCation? “LANEVENT” .....	305
:LXI:EVENT:INPut:LAN:REMOve:ALL .....	306
:LXI:EVENT:INPut:LAN:REMOve[:EVENT] “LANEVENT” .....	306
:LXI:EVENT:INPut:LAN[:SET]:CONFigure “lanEvent” , <enab>, <detection>, <filter>, <identifier> 310	
:LXI:EVENT:INPut:LAN[:SET]:DETEction “LANEVENT”, HIGH   LOW   RISE   FALL .....	308



---

## List of Commands

:LXI:EVENT:INPut:LAN[:SET]:DETection? "LANEVENT" . . . . .	308
:LXI:EVENT:INPut:LAN[:SET]:ENABled "LANEVENT",ON   OFF   1   0 . . . . .	309
:LXI:EVENT:INPut:LAN[:SET]:ENABled? "LANEVENT" . . . . .	309
:LXI:EVENT:LOG:ALL? . . . . .	233
:LXI:EVENT:LOG:CIRCUlar:FBENtry . . . . .	234
:LXI:EVENT:LOG:CIRCUlar[:ENABle] ON   OFF   1   0 . . . . .	232
:LXI:EVENT:LOG:CIRCUlar[:ENABle]? . . . . .	232
:LXI:EVENT:LOG:CLEar . . . . .	232
:LXI:EVENT:LOG:COUNt? . . . . .	233
:LXI:EVENT:LOG:ENABle ON   OFF   1   0 . . . . .	233
:LXI:EVENT:LOG:ENABle? . . . . .	233
:LXI:EVENT:LOG:ENTRy? <intIndex> . . . . .	234
:LXI:EVENT:LOG:SIZE <size> . . . . .	232
:LXI:EVENT:LOG:SIZE? . . . . .	232
:LXI:EVENT:LOG[:NEXT]? . . . . .	233
:LXI:EVENT:STATus[:ENABled] "STATUSEVENT",ON   OFF   1   0 . . . . .	304
:LXI:EVENT:STATus[:ENABled]? "STATUSEVENT" . . . . .	304
:LXI:EVENT[:OUTPut]:LAN:ADD "LANEVENT" . . . . .	276
:LXI:EVENT[:OUTPut]:LAN:COUNt? . . . . .	281
:LXI:EVENT[:OUTPut]:LAN:DISAbLe:ALL . . . . .	275
:LXI:EVENT[:OUTPut]:LAN:LIST? . . . . .	275
:LXI:EVENT[:OUTPut]:LAN:REMOve:ALL . . . . .	277
:LXI:EVENT[:OUTPut]:LAN:REMOve[:EVENT] "LANEVENT" . . . . .	276
:LXI:EVENT[:OUTPut]:LAN:SEND "LANEVENT", RISE   FALL . . . . .	282
:LXI:EVENT[:OUTPut]:LAN[:SET]:CONFIgure "lanEvent",<en- abled>,<source>,<slope>,<drive>,<destination> . . . . .	281
:LXI:EVENT[:OUTPut]:LAN[:SET]:DESTination "LANEVENT",<destinationExpression> . . . . .	278
:LXI:EVENT[:OUTPut]:LAN[:SET]:DESTination? "LANEVENT" . . . . .	278
:LXI:EVENT[:OUTPut]:LAN[:SET]:DRIVE "LANEVENT", OFF   NORMal   WOR . . . . .	279
:LXI:EVENT[:OUTPut]:LAN[:SET]:DRIVE? "LANEVENT" . . . . .	279
:LXI:EVENT[:OUTPut]:LAN[:SET]:ENABled "LANEVENT",ON   OFF   1   0 . . . . .	281

---

## List of Commands

:LXI:EVENT[:OUTPut]:LAN[:SET]:ENABLEd? "LANEVENT" .....	281
:LXI:EVENT[:OUTPut]:LAN[:SET]:IDENtifier "LANEVENT", "identifier" .....	282
:LXI:EVENT[:OUTPut]:LAN[:SET]:IDENtifier? "LANEVENT" .....	282
:LXI:EVENT[:OUTPut]:LAN[:SET]:SLOPe "LANEVENT", POSitive   NEGative .....	280
:LXI:EVENT[:OUTPut]:LAN[:SET]:SLOPe? "LANEVENT" .....	280
:LXI:EVENT[:OUTPut]:LAN[:SET]:SOURce "LANEVENT", "SourceEvent" .....	278
:LXI:EVENT[:OUTPut]:LAN[:SET]:SOURce? "LANEVENT" .....	278
:LXI:EVENT[:OUTPut]:LAN[:SET]:TSDelta "LANEVENT", <seconds> .....	280
:LXI:EVENT[:OUTPut]:LAN[:SET]:TSDelta? "LANEVENT" .....	280
:MEASure:ACP[n]? .....	403
:MEASure:CDPower[n]? .....	791
:MEASure:CHPower:CHPower? .....	329
:MEASure:CHPower:DENSity? .....	329
:MEASure:CHPower[n]? .....	329
:MEASure:EVMQpsk[n]? .....	1219
:MEASure:MONitor[n]? .....	1287
:MEASure:OBWidth [n]? .....	693
:MEASure:OBWidth:FERRor? .....	693
:MEASure:OBWidth:OBWidth? .....	693
:MEASure:OBWidth:XDB? .....	693
:MEASure:PCONtrol[n]? .....	1139
:MEASure:RHO[n]? .....	979
:MEASure:SEMask[n]? .....	515
:MEASure:SPURious[n]? .....	621
:MEASure:WAVEform[n] .....	1335
:MEMMory:RDIREctory <directory_name> .....	225
:MEMMory:CATalog? [<directory_name>] .....	223
:MEMMory:CDIREctory [<directory_name>] .....	223
:MEMMory:CDIREctory? .....	223
:MEMMory:COpy <string>, <string>[, <string>, <string>] .....	223
:MEMMory:DATA <file_name>, <data> .....	224

---

## List of Commands

:MMEMory:DATA? <file_name> .....	224
:MMEMory:DELeTe <file_name>[,<directory_name>] .....	224
:MMEMory:LOAD:CORRection 1   2   3   4, <filename> .....	1668
:MMEMory:LOAD:STATe <filename> .....	192
:MMEMory:LOAD:TRACe TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6,<filename> 195	
:MMEMory:LOAD:TRACe:DATA TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6,<file- name> .....	1667
:MMEMory:LOAD:TRACe:DATA TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6,<file- name> .....	197
:MMEMory:LOAD:TRACe:REGister TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6,<integer> .....	195
:MMEMory:MDIRectory <directory_name> .....	225
:MMEMory:MOVE <string>,<string>[,<string>,<string>] .....	225
:MMEMory:STORe:CORRection 1   2   3   4, <filename> .....	1673
:MMEMory:STORe:SCReen <filename> .....	220
:MMEMory:STORe:SCReen:THEME TDColor   TDMonochrome   FCOLor   FMONochrome .....	218
:MMEMory:STORe:SCReen:THEMe? .....	218
:MMEMory:STORe:STATe <filename> .....	208
:MMEMory:STORe:TRACe TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6   ALL,<file- name> .....	211
:MMEMory:STORe:TRACe:DATA TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6   ALL,<filename> .....	212
:MMEMory:STORe:TRACe:REGister TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6   ALL,<integer> .....	211
:OUTPut:ANALog OFF   SVIDeo   LOGVidEo   LINVidEo   DAUDio .....	1509
:OUTPut:ANALog:AUTO OFF   ON   0   1 .....	1510
:OUTPut:ANALog:AUTO? .....	1510
:OUTPut:ANALog? .....	1509
:OUTPut:AUX SIF   AIF   LOGVidEo   OFF .....	1516
:OUTPut:AUX:AIF <value> .....	1517
:OUTPut:AUX:AIF? .....	1517
:OUTPut:AUX? .....	1516
:OUTPut:DBUS[1][:STATe] ON   OFF   1   0 .....	1515

---

## List of Commands

:OUTPut:DBUS[1][:STATe]?	1515
:OUTPut:IQ:OUTPut IQ1   IQ250   OFF	1514
:OUTPut:IQ:OUTPut?	1514
:READ:ACP[n]?	403
:READ:CDPower[n]?	791
:READ:CHPower:CHPower?	329
:READ:CHPower:DENSity	329
:READ:CHPower[n]?	329
:READ:EVMQpsk[n]?	1219
:READ:MONitor[n]?	1287
:READ:OBWidth [n]?	693
:READ:OBWidth:FERRor?	693
:READ:OBWidth:OBWidth?	693
:READ:OBWidth:XDB?	693
:READ:PCONtrol[n]?	1139
:READ:PSTatistic[n]?	747
:READ:RHO[n]?	979
:READ:SEMask[n]?	515
:READ:SPURious[n]?	621
:READ:WAVeform[n]	1335
:SOURce:NOISe:SNS:ATTached?	1633
:SOURce:NOISe:TYPE NORMal   SNS	1632
:SOURce:NOISe:TYPE?	1632
:SOURce:NOISe[:STATe] ON   OFF   1   0	1633
:SOURce:NOISe[:STATe]?	1633
:SYSTem:APPLication:CATalog:OPTion? <model>	1641
:SYSTem:APPLication:CATalog:REVision? <model>	1640
:SYSTem:APPLication:CATalog[:NAME]:COUNT?	1640
:SYSTem:APPLication:CATalog[:NAME]?	1640
:SYSTem:APPLication[:CURRent]:OPTion?	1639
:SYSTem:APPLication[:CURRent]:REVision?	1639

---

## List of Commands

:SYSTem:APPLication[:CURRent][:NAME]? .....	1638
:SYSTem:COMMunicate:GPIB[1][:SELF]:ADDRess <integer>.....	268
:SYSTem:COMMunicate:GPIB[1][:SELF]:ADDRess? .....	268
:SYSTem:COMMunicate:GPIB[1][:SELF]:CONTroller[:ENABLE] ON   OFF   0   1 .....	269
:SYSTem:COMMunicate:GPIB[1][:SELF]:CONTroller[:ENABLE]? .....	269
:SYSTem:COMMunicate:LAN:SCPI:SICL:ENABLE OFF   ON   0   1.....	271
:SYSTem:COMMunicate:LAN:SCPI:SICL:ENABLE? .....	271
:SYSTem:COMMunicate:LAN:SCPI:SOCKet:CONTrol? .....	271
:SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABLE OFF   ON   0   1 .....	270
:SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABLE? .....	270
:SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABLE OFF   ON   0   1 .....	270
:SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABLE? .....	270
:SYSTem:COMMunicate:USB:CONNecTion? .....	272
:SYSTem:COMMunicate:USB:PACKets? .....	273
:SYSTem:COMMunicate:USB:STATus? .....	273
:SYSTem:DATE “<year>,<month>,<day>” .....	324
:SYSTem:DATE? .....	324
:SYSTem:DEFault [ALL]   ALIGn   INPut   MISC   MODes   PON.....	310
:SYSTem:ERRor:VERBoSe OFF   ON   0   1 .....	228
:SYSTem:ERRor:VERBoSe? .....	228
:SYSTem:ERRor[:NEXT]? .....	227
:SYSTem:HELP:HEADers? .....	323
:SYSTem:HID? .....	317
:SYSTem:KLOCK OFF   ON   0   1 .....	323
:SYSTem:KLOCK? .....	323
:SYSTem:LKEY <”OptionInfo”>, <”LicenseInfo”> .....	315
:SYSTem:LKEY:DELeTe <”OptionInfo”>,<”LicenseInfo”> .....	316
:SYSTem:LKEY:LIST? .....	316
:SYSTem:LKEY? <”OptionInfo”>.....	317
:SYSTem:MRELay:COUNt?.....	320
:SYSTem:OPTions? .....	322

---

## List of Commands

:SYSTem:PON:APPLication:LLISt <string of INSTRument:SElect names> . . . . .	241
:SYSTem:PON:APPLication:LLISt? . . . . .	241
:SYSTem:PON:APPLication:VMEMory:TOTal? . . . . .	241
:SYSTem:PON:APPLication:VMEMory:USED:NAME? <INSTRument:SElect name> . . . . .	242
:SYSTem:PON:APPLication:VMEMory:USED? . . . . .	242
:SYSTem:PON:APPLication:VMEMory[:AVAIlable]? . . . . .	241
:SYSTem:PON:ETIME? . . . . .	321
:SYSTem:PON:MODE SA   BASIC   ADEMOD   NFIGURE   PNOISE   CDMA2K   TDSCD- MA   VSA   VSA89601   WCDMA   WIMAXOFDMA . . . . .	236
:SYSTem:PON:MODE? . . . . .	236
:SYSTem:PON:TIME? . . . . .	254
:SYSTem:PON:TYPE MODE   USER   LAST   PRESet . . . . .	234
:SYSTem:PON:TYPE? . . . . .	234
:SYSTem:PRESet . . . . .	183
:SYSTem:PRESet:USER . . . . .	325
:SYSTem:PRESet:USER:ALL . . . . .	326
:SYSTem:PRESet:USER:SAVE . . . . .	327
:SYSTem:PRINt:THEME TDColor   TDMonochrome   FCOLor   FMONochrome . . . . .	181
:SYSTem:PRINt:THEMe? . . . . .	181
:SYSTem:PUP:PROcEss . . . . .	239
:SYSTem:SECurity:USB:WPRotect[:ENABle] ON   OFF   0   1 . . . . .	318
:SYSTem:SECurity:USB:WPRotect[:ENABle]? . . . . .	318
:SYSTem:SHOW OFF   ERRor   SYSTem   HARDware   LXI   HWStAtistics   ALIGNment   SOFTware 226 . . . . .	226
:SYSTem:SHOW? . . . . .	226
:SYSTem:TEMPerature:HEXTreme? . . . . .	321
:SYSTem:TEMPerature:LEXTreme? . . . . .	320
:SYSTem:TIME “<hour>,<minute>,<second>” . . . . .	324
:SYSTem:TIME? . . . . .	324
:SYSTem:VERSion? . . . . .	323
:TRACe:CHPower:TYPE WRITe   AVERAge   MAXHold   MINHold . . . . .	385
:TRACe:CHPower:TYPE? . . . . .	385

---

## List of Commands

:TRACe:CLear TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 .....	1735
:TRACe:CLear:ALL .....	1736
:TRACe:COpy TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 .....	1747
:TRACe:COpy? .....	1747
:TRACe:EXCHange TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 .....	1747
:TRACe:EXCHange? .....	1747
:TRACe:MATH:MEAN? TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 .....	1751
:TRACe:MATH:SMOoth TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 .....	1751
:TRACe:MATH:SMOoth:POINts <integer> .....	1751
:TRACe:MATH:SMOoth:POINts? .....	1751
:TRACe:MONitor:CLear [TRACE1]   TRACE2   TRACE3 .....	1331
:TRACe:MONitor:CLear:ALL .....	1331
:TRACe:OBWidth:TYPE WRITe   AVERAge   MAXHold   MINHold .....	738
:TRACe:OBWidth:TYPE? .....	738
:TRACe:SEMask:TYPE WRITe   AVERAge   MAXHold   MINHold .....	597
:TRACe:SEMask:TYPE? .....	597
:TRACe[:DATA] TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, <data> ..	1749
:TRACe[:DATA]? TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 .....	1749
:TRACe[1]   2   3:ACPower:DISPlay[:STATe] ON   OFF   0   1 .....	504
:TRACe[1]   2   3:ACPower:DISPlay[:STATe]? .....	504
:TRACe[1]   2   3:ACPower:TYPE WRITe   AVERAge   MAXHold   MINHold .....	501
:TRACe[1]   2   3:ACPower:TYPE? .....	501
:TRACe[1]   2   3:ACPower:UPDate[:STATe] ON   OFF   0   1 .....	503
:TRACe[1]   2   3:ACPower:UPDate[:STATe]? .....	503
:TRACe[1]   2   3:MONitor:DISPlay[:STATe] ON   OFF   0   1 .....	1328
:TRACe[1]   2   3:MONitor:DISPlay[:STATe]? .....	1328
:TRACe[1]   2   3:MONitor:TYPE WRITe   AVERAge   MAXHold   MINHold .....	1327
:TRACe[1]   2   3:MONitor:TYPE? .....	1327
:TRACe[1]   2   3:MONitor:UPDate[:STATe] ON   OFF   0   1 .....	1328
:TRACe[1]   2   3:MONitor:UPDate[:STATe]? .....	1328

---

## List of Commands

:TRACe[1]   2   3   4   5   6:DISPlay[:STATe] ON   OFF   0   1 .....	1723
:TRACe[1]   2   3   4   5   6:DISPlay[:STATe]? .....	1723
:TRACe[1]   2   3   4   5   6:TYPE WRITe   AVERAge   MAXHold   MINHold .....	1715
:TRACe[1]   2   3   4   5   6:TYPE? .....	1715
:TRACe[1]   2   3   4   5   6:UPDate[:STATe] ON   OFF   0   1 .....	1723
:TRACe[1]   2   3   4   5   6:UPDate[:STATe]? .....	1723
:TRIGger:<measurement>[:SEQuence]:IQ:SOURce EXTernal1   EXTernal2   IMMEDIATE   IQMag   IDEMod   QDEMod   IINPut   QINPut   AIQMag .....	1759
:TRIGger:<measurement>[:SEQuence]:IQ:SOURce? .....	1759
:TRIGger:<measurement>[:SEQuence]:RF:SOURce EXTernal1   EXTernal2   IMMEDIATE   LINE   FRAMe   RFBurst   VIDEo   IF   ALARm   LAN .....	1757
:TRIGger:<measurement>[:SEQuence]:RF:SOURce? .....	1757
:TRIGger:<measurement>[:SEQuence]:SOURce EXTernal1   EXTernal2   IMMEDIATE   LINE   FRAMe   RFBurst   VIDEo   IF   ALARm   LAN   IQMag   IDEMod   QDEMod   IINPut   QINPut   AIQMag .....	1753
:TRIGger:<measurement>[:SEQuence]:SOURce? .....	1753
:TRIGger[:SEQuence]:AIQMag:BANDwidth <freq> .....	1809
:TRIGger[:SEQuence]:AIQMag:BANDwidth? .....	1809
:TRIGger[:SEQuence]:AIQMag:CENTer <freq> .....	1808
:TRIGger[:SEQuence]:AIQMag:CENTer? .....	1808
:TRIGger[:SEQuence]:AIQMag:DELay <time> .....	1808
:TRIGger[:SEQuence]:AIQMag:DELay:STATe OFF   ON   0   1 .....	1808
:TRIGger[:SEQuence]:AIQMag:DELay:STATe? .....	1808
:TRIGger[:SEQuence]:AIQMag:DELay? .....	1808
:TRIGger[:SEQuence]:AIQMag:LEVel <ampl > .....	1807
:TRIGger[:SEQuence]:AIQMag:LEVel? .....	1807
:TRIGger[:SEQuence]:AIQMag:SLOPe POSitive   NEGative .....	1808
:TRIGger[:SEQuence]:AIQMag:SLOPe? .....	1808
:TRIGger[:SEQuence]:ATRigger <time> .....	1810
:TRIGger[:SEQuence]:ATRigger:STATe OFF   ON   0   1 .....	1810
:TRIGger[:SEQuence]:ATRigger:STATe? .....	1810
:TRIGger[:SEQuence]:ATRigger? .....	1810



---

## List of Commands

:TRIGger[:SEQuence]:EXTErnal1:DELay <time> .....	1768
:TRIGger[:SEQuence]:EXTErnal1:DELay:STATe OFF   ON   0   1 .....	1768
:TRIGger[:SEQuence]:EXTErnal1:DELay:STATe? .....	1768
:TRIGger[:SEQuence]:EXTErnal1:DELay? .....	1768
:TRIGger[:SEQuence]:EXTErnal1:LEVel <level> .....	1767
:TRIGger[:SEQuence]:EXTErnal1:LEVel? .....	1767
:TRIGger[:SEQuence]:EXTErnal1:SLOPe POSitive   NEGative .....	1768
:TRIGger[:SEQuence]:EXTErnal1:SLOPe? .....	1768
:TRIGger[:SEQuence]:EXTErnal2:DELay <time> .....	1771
:TRIGger[:SEQuence]:EXTErnal2:DELay:STATe OFF   ON   0   1 .....	1771
:TRIGger[:SEQuence]:EXTErnal2:DELay:STATe? .....	1771
:TRIGger[:SEQuence]:EXTErnal2:DELay? .....	1771
:TRIGger[:SEQuence]:EXTErnal2:LEVel .....	1770
:TRIGger[:SEQuence]:EXTErnal2:LEVel? .....	1770
:TRIGger[:SEQuence]:EXTErnal2:SLOPe POSitive   NEGative .....	1770
:TRIGger[:SEQuence]:EXTErnal2:SLOPe? .....	1770
:TRIGger[:SEQuence]:FRAMe:ADJust <time> .....	1779
:TRIGger[:SEQuence]:FRAMe:DELay <time> .....	1783
:TRIGger[:SEQuence]:FRAMe:DELay:STATe OFF   ON   0   1 .....	1783
:TRIGger[:SEQuence]:FRAMe:DELay:STATe? .....	1783
:TRIGger[:SEQuence]:FRAMe:DELay? .....	1783
:TRIGger[:SEQuence]:FRAMe:OFFSet <time> .....	1778
:TRIGger[:SEQuence]:FRAMe:OFFSet:DISPlay:RESet .....	1780
:TRIGger[:SEQuence]:FRAMe:OFFSet? .....	1778
:TRIGger[:SEQuence]:FRAMe:PERiod <time> .....	1777
:TRIGger[:SEQuence]:FRAMe:PERiod? .....	1777
:TRIGger[:SEQuence]:FRAMe:SYNC EXTErnal1   EXTErnal2   RFBurst   OFF .....	1781
:TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff <time> .....	1783
:TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff:STATe OFF   ON   0   1 .....	1783
:TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff:STATe? .....	1783
:TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff? .....	1783

---

## List of Commands

:TRIGger[:SEquence]:FRAMe:SYNC?	1781
:TRIGger[:SEquence]:HOLDoff <time>	1811
:TRIGger[:SEquence]:HOLDoff:STATe OFF   ON   0   1	1811
:TRIGger[:SEquence]:HOLDoff:STATe?	1811
:TRIGger[:SEquence]:HOLDoff:TYPE NORMAl   ABOVe   BELow	1812
:TRIGger[:SEquence]:HOLDoff:TYPE?	1812
:TRIGger[:SEquence]:HOLDoff?	1811
:TRIGger[:SEquence]:IDEMod:DELay <time>	1802
:TRIGger[:SEquence]:IDEMod:DELay:STATe OFF   ON   0   1	1802
:TRIGger[:SEquence]:IDEMod:DELay:STATe?	1802
:TRIGger[:SEquence]:IDEMod:DELay?	1802
:TRIGger[:SEquence]:IDEMod:LEVel <voltage>	1801
:TRIGger[:SEquence]:IDEMod:LEVel?	1801
:TRIGger[:SEquence]:IDEMod:SLOPe POSitive   NEGative	1802
:TRIGger[:SEquence]:IDEMod:SLOPe?	1802
:TRIGger[:SEquence]:IINPut:DELay <time>	1805
:TRIGger[:SEquence]:IINPut:DELay:STATe OFF   ON   0   1	1805
:TRIGger[:SEquence]:IINPut:DELay:STATe?	1805
:TRIGger[:SEquence]:IINPut:DELay?	1805
:TRIGger[:SEquence]:IINPut:LEVel <voltage>	1804
:TRIGger[:SEquence]:IINPut:LEVel?	1804
:TRIGger[:SEquence]:IINPut:SLOPe POSitive   NEGative	1805
:TRIGger[:SEquence]:IINPut:SLOPe?	1805
:TRIGger[:SEquence]:IQMag:DELay <time>	1801
:TRIGger[:SEquence]:IQMag:DELay:STATe OFF   ON   0   1	1801
:TRIGger[:SEquence]:IQMag:DELay:STATe?	1801
:TRIGger[:SEquence]:IQMag:DELay?	1801
:TRIGger[:SEquence]:IQMag:LEVel <ampl >	1800
:TRIGger[:SEquence]:IQMag:LEVel?	1800
:TRIGger[:SEquence]:IQMag:SLOPe POSitive   NEGative	1800
:TRIGger[:SEquence]:IQMag:SLOPe?	1800

---

## List of Commands

:TRIGger[:SEQuence]:LINE:DELAy <time> . . . . .	1766
:TRIGger[:SEQuence]:LINE:DELAy:STATe OFF   ON   0   1 . . . . .	1766
:TRIGger[:SEQuence]:LINE:DELAy:STATe? . . . . .	1766
:TRIGger[:SEQuence]:LINE:DELAy? . . . . .	1766
:TRIGger[:SEQuence]:LINE:SLOPe POSitive   NEGative . . . . .	1766
:TRIGger[:SEQuence]:LINE:SLOPe? . . . . .	1766
:TRIGger[:SEQuence]:LXI:ALARm:DISAbLe:ALL . . . . .	1791
:TRIGger[:SEQuence]:LXI:ALARm:LIST? . . . . .	1791
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:CONFIgure "alarmEvent", <enable>, <epochSeconds>, <epochFraction>, <period>, <repeat> . . . . .	1799
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:ENABLeD "alarmEvent",ON   OFF   1   0 . . . . .	1798
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:ENABLeD? "alarmEvent" . . . . .	1798
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:PERIoD "alarmEvent",<seconds> . . . . .	1797
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:PERIoD? "alarmEvent" . . . . .	1797
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:REPeat "alarmEvent",<repetitions> . . . . .	1797
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:REPeat? "alarmEvent" . . . . .	1798
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME:SECOnds "alarmEvent",<seconds> . . . . .	1795
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME:SECOnds? "alarmEvent" . . . . .	1795
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue] "alarmEvent",<seconds>, <fractionalSeconds> . . . . .	1794
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:ABSolute "alarmEvent","date","time" . . . . .	1792
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:ABSolute? "alarmEvent" . . . . .	1792
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:FRACtion "alarmEvent",<fractionalSeconds> . . . . .	1796
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:FRACtion? "alarmEvent" . . . . .	1796
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:RELative "alarmEvent",<seconds> . . . . .	1796
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:RELative? "alarmEvent" . . . . .	1797
:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]? . . . . .	1795
:TRIGger[:SEQuence]:LXI:LAN:ADD "LANEVENT" . . . . .	1788
:TRIGger[:SEQuence]:LXI:LAN:COUNT? . . . . .	1790
:TRIGger[:SEQuence]:LXI:LAN:DISAbLe:ALL . . . . .	1785
:TRIGger[:SEQuence]:LXI:LAN:LIST? . . . . .	1785

---

## List of Commands

:TRIGger[:SEQuence]:LXI:LAN:REMOve:ALL	1789
:TRIGger[:SEQuence]:LXI:LAN:REMOve[:EVENT] "LANEVENT"	1788
:TRIGger[:SEQuence]:LXI:LAN[:SET]:CONFIgure "lanEvent", <enable>, <detection>, <delay>,<filter>,<identifier>	1790
:TRIGger[:SEQuence]:LXI:LAN[:SET]:DELAy "LANEVENT",<time>	1786
:TRIGger[:SEQuence]:LXI:LAN[:SET]:DELAy? "lanEvent"	1787
:TRIGger[:SEQuence]:LXI:LAN[:SET]:DETEction "LANEVENT", HIGH   LOW   RISE   FALL	1786
:TRIGger[:SEQuence]:LXI:LAN[:SET]:DETEction? "LANEVENT"	1786
:TRIGger[:SEQuence]:LXI:LAN[:SET]:ENABled "LANEVENT",ON   OFF   1   0	1787
:TRIGger[:SEQuence]:LXI:LAN[:SET]:ENABled? "LANEVENT"	1787
:TRIGger[:SEQuence]:LXI:LAN[:SET]:FILTer "LANEVENT", "filterString"	1789
:TRIGger[:SEQuence]:LXI:LAN[:SET]:FILTer?	1789
:TRIGger[:SEQuence]:LXI:LAN[:SET]:IDENtifier "LANEVENT", "identifier"	1790
:TRIGger[:SEQuence]:LXI:LAN[:SET]:IDENtifier? "LANEVENT"	1790
:TRIGger[:SEQuence]:OFFSet <time>	1812
:TRIGger[:SEQuence]:OFFSet:STATe OFF   ON   0   1	1812
:TRIGger[:SEQuence]:OFFSet:STATe?	1812
:TRIGger[:SEQuence]:OFFSet?	1812
:TRIGger[:SEQuence]:QDEMod:DELAy <time>	1804
:TRIGger[:SEQuence]:QDEMod:DELAy:STATe OFF   ON   0   1	1804
:TRIGger[:SEQuence]:QDEMod:DELAy:STATe?	1804
:TRIGger[:SEQuence]:QDEMod:DELAy?	1804
:TRIGger[:SEQuence]:QDEMod:LEVel <voltage>	1803
:TRIGger[:SEQuence]:QDEMod:LEVel?	1803
:TRIGger[:SEQuence]:QDEMod:SLOPe POSitive   NEGative	1803
:TRIGger[:SEQuence]:QDEMod:SLOPe?	1803
:TRIGger[:SEQuence]:QINPut:DELAy <time>	1807
:TRIGger[:SEQuence]:QINPut:DELAy:STATe OFF   ON   0   1	1807
:TRIGger[:SEQuence]:QINPut:DELAy:STATe?	1807
:TRIGger[:SEQuence]:QINPut:DELAy?	1807
:TRIGger[:SEQuence]:QINPut:LEVel <voltage>	1806

---

## List of Commands

:TRIGger[:SEQuence]:QINPut:LEVel? .....	1806
:TRIGger[:SEQuence]:QINPut:SLOPe POSitive   NEGative .....	1806
:TRIGger[:SEQuence]:QINPut:SLOPe? .....	1806
:TRIGger[:SEQuence]:RFBurst:DELay <time> .....	1775
:TRIGger[:SEQuence]:RFBurst:DELay:STATe OFF   ON   0   1 .....	1775
:TRIGger[:SEQuence]:RFBurst:DELay:STATe? .....	1775
:TRIGger[:SEQuence]:RFBurst:DELay? .....	1775
:TRIGger[:SEQuence]:RFBurst:LEVel:ABSolute <ampl> .....	1772
:TRIGger[:SEQuence]:RFBurst:LEVel:ABSolute? .....	1772
:TRIGger[:SEQuence]:RFBurst:LEVel:RELative <rel_ampl> .....	1774
:TRIGger[:SEQuence]:RFBurst:LEVel:RELative? .....	1774
:TRIGger[:SEQuence]:RFBurst:LEVel:TYPE ABSolute   RELative. ....	1773
:TRIGger[:SEQuence]:RFBurst:LEVel:TYPE? .....	1773
:TRIGger[:SEQuence]:RFBurst:SLOPe POSitive   NEGative. ....	1775
:TRIGger[:SEQuence]:RFBurst:SLOPe? .....	1775
:TRIGger[:SEQuence]:VIDeo:DELay <time> .....	1764
:TRIGger[:SEQuence]:VIDeo:DELay:STATe OFF   ON   0   1 .....	1764
:TRIGger[:SEQuence]:VIDeo:DELay:STATe? .....	1764
:TRIGger[:SEQuence]:VIDeo:DELay? .....	1764
:TRIGger[:SEQuence]:VIDeo:LEVel <ampl>. ....	1762
:TRIGger[:SEQuence]:VIDeo:LEVel? .....	1762
:TRIGger[:SEQuence]:VIDeo:SLOPe POSitive   NEGative .....	1763
:TRIGger[:SEQuence]:VIDeo:SLOPe? .....	1763
:TRIGger   TRIGger1   TRIGger2[:SEQuence]:OUTPut HSWP   MEASuring   MAIN   GATE   GTRig- ger   OEVen   SSWeep   SSETtled   S1Marker   S2Marker   S3Marker   S4Marker   OFF. ....	1506
:TRIGger   TRIGger1   TRIGger2[:SEQuence]:OUTPut:POLarity POSitive   NEGative .....	1507
:TRIGger   TRIGger1   TRIGger2[:SEQuence]:OUTPut:POLarity? .....	1507
:TRIGger   TRIGger1   TRIGger2[:SEQuence]:OUTPut? .....	1506
:TRIGger1   TRIGger[:SEQuence]:LXI:ALARm:COUNT? .....	1799
:UNIT:ACPower:POWER:PSD DBMHZ   DBMMHZ .....	477
:UNIT:ACPower:POWER:PSD? .....	477

---

## List of Commands

:UNIT:CHPower:POWer:PSD DBMHZ   DBMMHZ . . . . .	365
:UNIT:CHPower:POWer:PSD? . . . . .	365
:UNIT:POWer DBM   DBMV   DBMA   V   W   A   DBUV   DBUA   DBUVM   DBUAM   DBPT   DBG . . . . .	1424
:UNIT:POWer? . . . . .	1424
[:SENSe]:ACPower:AVERAge:COUNT <integer> . . . . .	438
[:SENSe]:ACPower:AVERAge:COUNT? . . . . .	438
[:SENSe]:ACPower:AVERAge:TCONtrol EXPonential   REPeat . . . . .	439
[:SENSe]:ACPower:AVERAge:TCONtrol? . . . . .	439
[:SENSe]:ACPower:AVERAge[:STATe] OFF   ON   0   1 . . . . .	438
[:SENSe]:ACPower:AVERAge[:STATe]? . . . . .	438
[:SENSe]:ACPower:BANDwidth:SHAPe GAUSSian   FLATtop . . . . .	423
[:SENSe]:ACPower:BANDwidth:SHAPe? . . . . .	423
[:SENSe]:ACPower:BANDwidth:TYPE DB3   DB6 . . . . .	423
[:SENSe]:ACPower:BANDwidth:TYPE? . . . . .	423
[:SENSe]:ACPower:BANDwidth:VIDeo <freq> . . . . .	421
[:SENSe]:ACPower:BANDwidth:VIDeo:AUTO OFF   ON   0   1 . . . . .	421
[:SENSe]:ACPower:BANDwidth:VIDeo:AUTO? . . . . .	421
[:SENSe]:ACPower:BANDwidth:VIDeo? . . . . .	421
[:SENSe]:ACPower:BANDwidth[:RESolution] <bandwidth> . . . . .	420
[:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO ON   OFF   1   0 . . . . .	420
[:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO? . . . . .	420
[:SENSe]:ACPower:BANDwidth[:RESolution]? . . . . .	420
[:SENSe]:ACPower:CARRier[1]   2:AUTO[:STATe] OFF   ON   0   1 . . . . .	443
[:SENSe]:ACPower:CARRier[1]   2:AUTO[:STATe]? . . . . .	443
[:SENSe]:ACPower:CARRier[1]   2:COUNT <integer> . . . . .	440
[:SENSe]:ACPower:CARRier[1]   2:COUNT? . . . . .	440
[:SENSe]:ACPower:CARRier[1]   2:CPSD <real> . . . . .	444
[:SENSe]:ACPower:CARRier[1]   2:CPSD? . . . . .	444
[:SENSe]:ACPower:CARRier[1]   2:LIST:BANDwidth[:INTEgration] <freq>, ... . . . .	449
[:SENSe]:ACPower:CARRier[1]   2:LIST:BANDwidth[:INTEgration]? . . . . .	449

---

## List of Commands

[[:SENSe]:ACPower:CARRier[1]   2:LIST:COUPle OFF   ON   0   1, .....	446
[[:SENSe]:ACPower:CARRier[1]   2:LIST:COUPle? .....	446
[[:SENSe]:ACPower:CARRier[1]   2:LIST:FILTer:ALPHa <real>, .....	451
[[:SENSe]:ACPower:CARRier[1]   2:LIST:FILTer:ALPHa? .....	451
[[:SENSe]:ACPower:CARRier[1]   2:LIST:FILTer[:RRC][:STATe] ON   OFF   1   0, .....	450
[[:SENSe]:ACPower:CARRier[1]   2:LIST:FILTer[:RRC][:STATe]? .....	450
[[:SENSe]:ACPower:CARRier[1]   2:LIST:METHod IBW   RRC, .....	482
[[:SENSe]:ACPower:CARRier[1]   2:LIST:METHod? .....	482
[[:SENSe]:ACPower:CARRier[1]   2:LIST:PPResent YES   NO, .....	447
[[:SENSe]:ACPower:CARRier[1]   2:LIST:PPResent? .....	447
[[:SENSe]:ACPower:CARRier[1]   2:LIST:WIDTh <bandwidth>, .....	448
[[:SENSe]:ACPower:CARRier[1]   2:LIST:WIDTh? .....	448
[[:SENSe]:ACPower:CARRier[1]   2:RCARrier <integer> .....	441
[[:SENSe]:ACPower:CARRier[1]   2:RCARrier:AUTO OFF   ON   0   1 .....	441
[[:SENSe]:ACPower:CARRier[1]   2:RCARrier:AUTO? .....	441
[[:SENSe]:ACPower:CARRier[1]   2:RCARrier? .....	441
[[:SENSe]:ACPower:CARRier[1]   2:RCFRequency <freq> .....	442
[[:SENSe]:ACPower:CARRier[1]   2:RCFRequency:AUTO OFF   ON   0   1 .....	442
[[:SENSe]:ACPower:CARRier[1]   2:RCFRequency:AUTO? .....	442
[[:SENSe]:ACPower:CARRier[1]   2:RCFRequency? .....	442
[[:SENSe]:ACPower:CARRier[1]   2[:POWER] <real> .....	443
[[:SENSe]:ACPower:CARRier[1]   2[:POWER]? .....	443
[[:SENSe]:ACPower:CORRection:NOISe[:AUTO] OFF   ON   0   1 .....	479
[[:SENSe]:ACPower:CORRection:NOISe[:AUTO]? .....	479
[[:SENSe]:ACPower:DETEctor:AUTO ON   OFF   1   0 .....	505
[[:SENSe]:ACPower:DETEctor:AUTO? .....	505
[[:SENSe]:ACPower:DETEctor[:FUNction] AVERage   NEGative   NORMal   POSitive   SAMple ..	505
[[:SENSe]:ACPower:DETEctor[:FUNction]? .....	505
[[:SENSe]:ACPower:FILTer[:RRC]:ALPHa <real> .....	481
[[:SENSe]:ACPower:FILTer[:RRC]:ALPHa? .....	481
[[:SENSe]:ACPower:FILTer[:RRC][:STATe] OFF   ON   0   1 .....	480

---

## List of Commands

[:SENSe]:ACPower:FILTer[:RRC][:STATe]?	480
[:SENSe]:ACPower:FREQuency:SPAN <freq>	493
[:SENSe]:ACPower:FREQuency:SPAN:FULL	494
[:SENSe]:ACPower:FREQuency:SPAN:PREVious	495
[:SENSe]:ACPower:FREQuency:SPAN?	493
[:SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe] OFF   ON   0   1	473
[:SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe]?	473
[:SENSe]:ACPower:FREQuency:SYNThesis[:STATe] 1   2   3	474
[:SENSe]:ACPower:FREQuency:SYNThesis[:STATe]?	474
[:SENSe]:ACPower:METHod IBW   IBWRange   FAST   RBW	475
[:SENSe]:ACPower:METHod?	475
[:SENSe]:ACPower:OFFSet[1]   2:LIST:ABSolute <real>, <real>, <real>, <real>, <real>, <real>	462
[:SENSe]:ACPower:OFFSet[1]   2:LIST:ABSolute?	462
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:RESolution <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>	457
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:RESolution:AUTO ON   OFF   1   0, ON   OFF   1   0, ON   OFF   1   0, ON   OFF   1   0, ON   OFF   1   0, ON   OFF   1   0	457
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:RESolution:AUTO?	457
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:RESolution?	457
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:SHAPE GAUSSian   FLATtop, GAUSSian   FLATtop, GAUSSian   FLATtop, GAUSSian   FLATtop, GAUSSian   FLATtop, GAUSSian   FLATtop	460
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:SHAPE?	460
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:TYPE DB3   DB6, DB3   DB6, DB3   DB6, DB3   DB6, DB3   DB6, DB3   DB6	461
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:TYPE?	461
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:VIDeo <freq>, <freq>, <freq>, <freq>, <freq>, <freq>	459
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:VIDeo:AUTO OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1	459
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:VIDeo:AUTO?	459
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth:VIDeo?	459
[:SENSe]:ACPower:OFFSet[1]   2:LIST:BANDwidth[:INTEgration] <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>	455



---

## List of Commands

[[:SENSE]:ACPower:OFFSet[1]   2:LIST:BANDwidth[:INTegration]?)	455
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:FILTer:ALPHa <real>,.....	471
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:FILTer:ALPHa?	471
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:FILTer[:RRC][:STATe] ON   OFF   1   0,...	470
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:FILTer[:RRC][:STATe]?	470
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:RCARrier <real>, <real>, <real>, <real>, <real>, <real>	463
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:RCARrier?	463
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:RPSDensity <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>	466
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:RPSDensity?	466
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:SIDE NEGative   BOTH   POSitive,NEGative   BOTH   POSitive,NEGative   BOTH   POSitive,NEGative   BOTH   POSitive,NEGative   BOTH   POSitive,NEGative   BOTH   POSitive,NEGative   BOTH   POSitive	469
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:SIDE?	469
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:STATe OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1	453
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:STATe?	453
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:TEST ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative	468
[[:SENSE]:ACPower:OFFSet[1]   2:LIST:TEST?	468
[[:SENSE]:ACPower:OFFSet[1]   2:LIST[:FREQuency] <freq>, <freq>, <freq>, <freq>, <freq>, <freq>	453
[[:SENSE]:ACPower:OFFSet[1]   2:LIST[:FREQuency]?	453
[[:SENSE]:ACPower:OFFSet[1]   2:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge	472
[[:SENSE]:ACPower:OFFSet[1]   2:TYPE?	472
[[:SENSE]:ACPower:SWEep:POINts <integer>	499
[[:SENSE]:ACPower:SWEep:POINts?	499
[[:SENSE]:ACPower:SWEep:TIME <time>.	496
[[:SENSE]:ACPower:SWEep:TIME:AUTO OFF   ON   0   1.	496
[[:SENSE]:ACPower:SWEep:TIME:AUTO:RULEs NORMal   ACCuracy	498
[[:SENSE]:ACPower:SWEep:TIME:AUTO:RULEs?	498
[[:SENSE]:ACPower:SWEep:TIME:AUTO?	496
[[:SENSE]:ACPower:SWEep:TIME?	496

---

## List of Commands

[:SENSe]:ACPower:TYPE TPreF PSDRef . . . . .	.476
[:SENSe]:ACPower:TYPE? . . . . .	.476
[:SENSe]:ADC:DITHer:AUTO[:STATe] OFF   ON   0   1 . . . . .	.1621
[:SENSe]:ADC:DITHer:AUTO[:STATe]? . . . . .	.1621
[:SENSe]:ADC:DITHer[:STATe] OFF   ON   HIGH . . . . .	.1620
[:SENSe]:ADC:DITHer[:STATe]? . . . . .	.1620
[:SENSe]:AVERage:CLEar . . . . .	.1590
[:SENSe]:AVERage:COUNt <integer> . . . . .	.1589
[:SENSe]:AVERage:COUNt? . . . . .	.1589
[:SENSe]:AVERage:TYPE RMS   LOG   SCALar [:SENSe]:AVERage:TYPE? . . . . .	.1591
[:SENSe]:AVERage:TYPE:AUTO OFF   ON   0   1 . . . . .	.1590
[:SENSe]:AVERage:TYPE:AUTO? . . . . .	.1590
[:SENSe]:BANDwidth   BWIDth:SHAPE GAUSSian   FLATtop . . . . .	.1445
[:SENSe]:BANDwidth   BWIDth:SHAPE? . . . . .	.1445
[:SENSe]:BANDwidth   BWIDth:TYPE DB3   DB6   IMPulse   NOISe . . . . .	.1447
[:SENSe]:BANDwidth   BWIDth:TYPE? . . . . .	.1447
[:SENSe]:BANDwidth   BWIDth:VIDeo <freq> . . . . .	.1441
[:SENSe]:BANDwidth   BWIDth:VIDeo:AUTO OFF   ON   0   1 . . . . .	.1441
[:SENSe]:BANDwidth   BWIDth:VIDeo:AUTO? . . . . .	.1441
[:SENSe]:BANDwidth   BWIDth:VIDeo:RATio <real> . . . . .	.1442
[:SENSe]:BANDwidth   BWIDth:VIDeo:RATio:AUTO OFF   ON   0   1 . . . . .	.1442
[:SENSe]:BANDwidth   BWIDth:VIDeo:RATio:AUTO? . . . . .	.1442
[:SENSe]:BANDwidth   BWIDth:VIDeo:RATio? . . . . .	.1442
[:SENSe]:BANDwidth   BWIDth:VIDeo? . . . . .	.1441
[:SENSe]:BANDwidth   BWIDth[:RESolution] <freq> . . . . .	.1439
[:SENSe]:BANDwidth   BWIDth[:RESolution]:AUTO OFF   ON   0   1 . . . . .	.1439
[:SENSe]:BANDwidth   BWIDth[:RESolution]:AUTO? . . . . .	.1439
[:SENSe]:BANDwidth   BWIDth[:RESolution]? . . . . .	.1439
[:SENSe]:CDPower:CAPTure:TIME[:FRAMe] <real> . . . . .	.899
[:SENSe]:CDPower:CAPTure:TIME[:FRAMe]? . . . . .	.899
[:SENSe]:CDPower:CRATe <freq> . . . . .	.906

---

## List of Commands

[:SENSe]:CDPower:CRATe? . . . . .	906
[:SENSe]:CDPower:FERRor:TRANge WIDE   NORMAl . . . . .	910
[:SENSe]:CDPower:FERRor:TRANge? . . . . .	910
[:SENSe]:CDPower:FILTer:ALPHa <real> . . . . .	906
[:SENSe]:CDPower:FILTer:ALPHa? . . . . .	906
[:SENSe]:CDPower:FILTer[:RRC][:STATe] OFF   ON   0   1 . . . . .	906
[:SENSe]:CDPower:FILTer[:RRC][:STATe]? . . . . .	906
[:SENSe]:CDPower:IF:GAIN:AUTO[:STATe] OFF   ON   0   1 . . . . .	907
[:SENSe]:CDPower:IF:GAIN:AUTO[:STATe]? . . . . .	907
[:SENSe]:CDPower:IF:GAIN[:STATe] ON   OFF   1   0 . . . . .	908
[:SENSe]:CDPower:IF:GAIN[:STATe]? . . . . .	908
[:SENSe]:CDPower:MCEStimator OFF   ON   0   1 . . . . .	909
[:SENSe]:CDPower:MCEStimator:TIMing CHANnel   GLOBal . . . . .	909
[:SENSe]:CDPower:MCEStimator:TIMing? . . . . .	909
[:SENSe]:CDPower:MCEStimator? . . . . .	909
[:SENSe]:CDPower:MICH:SPRead <integer>. . . . .	912
[:SENSe]:CDPower:MICH:SPRead? . . . . .	912
[:SENSe]:CDPower:MICH:STATe OFF   ON   0   1 . . . . .	912
[:SENSe]:CDPower:MICH:STATe? . . . . .	912
[:SENSe]:CDPower:PICH:SPRead <integer> . . . . .	911
[:SENSe]:CDPower:PICH:SPRead? . . . . .	911
[:SENSe]:CDPower:PRACH:SIGNature <integer> . . . . .	859
[:SENSe]:CDPower:PRACH:SIGNature:AUTO OFF   ON   0   1 . . . . .	859
[:SENSe]:CDPower:PRACH:SIGNature:AUTO? . . . . .	859
[:SENSe]:CDPower:PRACH:SIGNature? . . . . .	859
[:SENSe]:CDPower:SBOundary:LIST:MS:APPend <symbol_rate>, <code_num>, IPH   QPH . . .	891
[:SENSe]:CDPower:SBOundary:LIST:MS:CHANnel? <entry_id>. . . . .	897
[:SENSe]:CDPower:SBOundary:LIST:MS:INIT <symbol_rate>, <code_num>, IPH   QPH . . . . .	889
[:SENSe]:CDPower:SBOundary:LIST:MS:NCHannels? . . . . .	898
[:SENSe]:CDPower:SBOundary:LIST:MS:REPLace <entry_id>,<symbol_rate>, <code_num>, IPH   QPH . . . . .	894

---

## List of Commands

[:SENSe]:CDPower:SBOundary:LIST[:BTS]:APPend <symbol_rate>, <code_num>, QPSK   QAM16   QAM64 .....	.879
[:SENSe]:CDPower:SBOundary:LIST[:BTS]:CHANnel? <entry_id> .....	.884
[:SENSe]:CDPower:SBOundary:LIST[:BTS]:INIT <symbol_rate>, <code_num>, QPSK   QAM16   QAM64 .....	.875
[:SENSe]:CDPower:SBOundary:LIST[:BTS]:NCHannels? .....	.886
[:SENSe]:CDPower:SBOundary:LIST[:BTS]:PRESet TM1D16   TM1D32   TM1D64   TM1D16SC   TM1D32SC   TM1D64SC   TM2   TM2SC   TM3D16   TM3D32   TM3D16SC   TM3D32SC   TM4   TM4CP   TM5H2   TM5H4   TM5H8   TM6H8 .....	.887
[:SENSe]:CDPower:SBOundary:LIST[:BTS]:REPLace <entry_id>, <symbol_rate>, <code_num>, QPSK   QAM16   QAM64 .....	.882
[:SENSe]:CDPower:SBOundary:MS AUTO   CUSTom .....	.888
[:SENSe]:CDPower:SBOundary:MS? .....	.888
[:SENSe]:CDPower:SBOundary[:BTS] AU- TO   TM1D16   TM1D32   TM1D64   TM1D16SC   TM1D32SC   TM1D64SC   TM2   TM2SC   TM3D16   TM3D32   TM3D16SC   TM3D32SC   TM4   TM4CP   TM5H2   TM5H4   TM5H8   TM6H8   CUSTom .....	.863
[:SENSe]:CDPower:SBOundary[:BTS]? .....	.863
[:SENSe]:CDPower:SFORmat:MS SF0   SF1   SF2   SF3   SF4   SF5   AUTO .....	.858
[:SENSe]:CDPower:SFORmat:MS? .....	.858
[:SENSe]:CDPower:SPECtrum INVert   NORMal .....	.904
[:SENSe]:CDPower:SPECtrum? .....	.904
[:SENSe]:CDPower:SSLot:NUMBer <integer> .....	.903
[:SENSe]:CDPower:SSLot:NUMBer? .....	.903
[:SENSe]:CDPower:SSLot[:STATe] OFF   ON   0   1 .....	.903
[:SENSe]:CDPower:SSLot[:STATe]? .....	.903
[:SENSe]:CDPower:SYNC:CPICH:ESTimator OFF   ON   0   1 .....	.855
[:SENSe]:CDPower:SYNC:CPICH:ESTimator? .....	.855
[:SENSe]:CDPower:SYNC:MS DPCCh   PMESsage .....	.857
[:SENSe]:CDPower:SYNC:MS? .....	.857
[:SENSe]:CDPower:SYNC:SCRamble:MS <integer> .....	.860
[:SENSe]:CDPower:SYNC:SCRamble:MS? .....	.860
[:SENSe]:CDPower:SYNC:SCRamble[:BTS] <integer> .....	.858

---

## List of Commands

[:SENSe]:CDPower:SYNC:SCRamble[:BTS]:OFFSet <integer> . . . . .	859
[:SENSe]:CDPower:SYNC:SCRamble[:BTS]:OFFSet? . . . . .	859
[:SENSe]:CDPower:SYNC:SCRamble[:BTS]:TYPE LEFT   RIGHT   STANdard . . . . .	861
[:SENSe]:CDPower:SYNC:SCRamble[:BTS]:TYPE? . . . . .	861
[:SENSe]:CDPower:SYNC:SCRamble[:BTS]? . . . . .	858
[:SENSe]:CDPower:SYNC:SYMBol:SPRead <integer> . . . . .	856
[:SENSe]:CDPower:SYNC:SYMBol:SPRead? . . . . .	856
[:SENSe]:CDPower:SYNC:SYMBol:SRATe <integer> . . . . .	856
[:SENSe]:CDPower:SYNC:SYMBol:SRATe? . . . . .	856
[:SENSe]:CDPower:SYNC[:BTS] CPICH   SCH   SYMBol   A2CPich   A1Sch   A2Sch . . . . .	855
[:SENSe]:CDPower:SYNC[:BTS]? . . . . .	855
[:SENSe]:CHPower:AVERAge:COUNT <integer> . . . . .	357
[:SENSe]:CHPower:AVERAge:COUNT? . . . . .	357
[:SENSe]:CHPower:AVERAge:TCONtrol EXPonential   REPeat . . . . .	358
[:SENSe]:CHPower:AVERAge:TCONtrol? . . . . .	358
[:SENSe]:CHPower:AVERAge[:STATe] ON   OFF   1   0 . . . . .	357
[:SENSe]:CHPower:AVERAge[:STATe]? . . . . .	357
[:SENSe]:CHPower:BANDwidth:INTegration <bandwidth> . . . . .	359
[:SENSe]:CHPower:BANDwidth:INTegration? . . . . .	359
[:SENSe]:CHPower:BANDwidth:SHApe GAUSSian   FLATtop . . . . .	343
[:SENSe]:CHPower:BANDwidth:SHApe? . . . . .	343
[:SENSe]:CHPower:BANDwidth:VIDeo <bandwidth> . . . . .	341
[:SENSe]:CHPower:BANDwidth:VIDeo:AUTO ON   OFF   1   0 . . . . .	341
[:SENSe]:CHPower:BANDwidth:VIDeo:AUTO? . . . . .	341
[:SENSe]:CHPower:BANDwidth:VIDeo? . . . . .	341
[:SENSe]:CHPower:BANDwidth[:RESolution] <bandwidth> . . . . .	340
[:SENSe]:CHPower:BANDwidth[:RESolution]:AUTO ON   OFF   1   0 . . . . .	340
[:SENSe]:CHPower:BANDwidth[:RESolution]:AUTO? . . . . .	340
[:SENSe]:CHPower:BANDwidth[:RESolution]? . . . . .	340
[:SENSe]:CHPower:DETEctor:AUTO ON   OFF   1   0 . . . . .	387
[:SENSe]:CHPower:DETEctor:AUTO? . . . . .	387

---

## List of Commands

[:SENSe]:CHPower:DETEctor[:FUNction] NORMal   AVERAge   POSitive   SAMPlE   NEGative . . .	386
[:SENSe]:CHPower:DETEctor[:FUNction]? . . . . .	386
[:SENSe]:CHPower:FILTer[:RRC]:ALPHa <real> . . . . .	364
[:SENSe]:CHPower:FILTer[:RRC]:ALPHa? . . . . .	364
[:SENSe]:CHPower:FILTer[:RRC]:BANDwidth <real> . . . . .	364
[:SENSe]:CHPower:FILTer[:RRC]:BANDwidth? . . . . .	364
[:SENSe]:CHPower:FILTer[:RRC][:STATe] OFF   ON   0   1 . . . . .	363
[:SENSe]:CHPower:FILTer[:RRC][:STATe]? . . . . .	363
[:SENSe]:CHPower:FREQuency:SPAN <freq> . . . . .	377
[:SENSe]:CHPower:FREQuency:SPAN:FULL . . . . .	378
[:SENSe]:CHPower:FREQuency:SPAN:PREVious . . . . .	379
[:SENSe]:CHPower:FREQuency:SPAN? . . . . .	377
[:SENSe]:CHPower:FREQuency:SYNThesis:AUTO[:STATe] OFF   ON   0   1 . . . . .	361
[:SENSe]:CHPower:FREQuency:SYNThesis:AUTO[:STATe]? . . . . .	361
[:SENSe]:CHPower:FREQuency:SYNThesis[:STATe] 1   2   3 . . . . .	361
[:SENSe]:CHPower:FREQuency:SYNThesis[:STATe]? . . . . .	361
[:SENSe]:CHPower:IF:GAIN:AUTO[:STATe] ON   OFF   1   0 . . . . .	362
[:SENSe]:CHPower:IF:GAIN:AUTO[:STATe]? . . . . .	362
[:SENSe]:CHPower:IF:GAIN[:STATe] ON   OFF   1   0 . . . . .	362
[:SENSe]:CHPower:IF:GAIN[:STATe]? . . . . .	362
[:SENSe]:CHPower:SHOUlder:OFFSet:FREQuency <freq> . . . . .	367
[:SENSe]:CHPower:SHOUlder:OFFSet:FREQuency:STARt <freq> . . . . .	366
[:SENSe]:CHPower:SHOUlder:OFFSet:FREQuency:STARt? . . . . .	366
[:SENSe]:CHPower:SHOUlder:OFFSet:FREQuency:STOP <freq> . . . . .	367
[:SENSe]:CHPower:SHOUlder:OFFSet:FREQuency:STOP? . . . . .	367
[:SENSe]:CHPower:SHOUlder:OFFSet:FREQuency? . . . . .	367
[:SENSe]:CHPower:SWEep:POINts <integer> . . . . .	383
[:SENSe]:CHPower:SWEep:POINts? . . . . .	383
[:SENSe]:CHPower:SWEep:TIME <time> . . . . .	380
[:SENSe]:CHPower:SWEep:TIME:AUTO OFF   ON   0   1 . . . . .	380
[:SENSe]:CHPower:SWEep:TIME:AUTO:RULEs NORMal   ACCuracy . . . . .	382

---

## List of Commands

[:SENSe]:CHPower:SWEep:TIME:AUTO:RULEs? .....	382
[:SENSe]:CHPower:SWEep:TIME:AUTO? .....	380
[:SENSe]:CHPower:SWEep:TIME? .....	380
[:SENSe]:CORRection:BTS[:RF]:GAIN <rel_ampl> .....	1481
[:SENSe]:CORRection:BTS[:RF]:GAIN? .....	1481
[:SENSe]:CORRection:CSET:ALL:DELeTe .....	1499
[:SENSe]:CORRection:CSET:ALL[:STATe] ON   OFF   1   0 .....	1499
[:SENSe]:CORRection:CSET:ALL[:STATe]? .....	1499
[:SENSe]:CORRection:CSET[1]   2   3   4:ANTenna[:UNIT] GAUSs   PTESla   UVM   UAM   NOCon- version .....	1491
[:SENSe]:CORRection:CSET[1]   2   3   4:ANTenna[:UNIT]? .....	1491
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:COMMeNt "text" .....	1495
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:COMMeNt? .....	1495
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:DATA <freq>, <ampl>, .....	1499
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:DATA:MERGe <freq>, <ampl>, .....	1500
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:DATA? .....	1499
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:DELeTe .....	1498
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:DESCRiption "text" .....	1495
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:DESCRiption? .....	1495
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:X:SPACing LINear   LOGarithmic .....	1493
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6:X:SPACing? .....	1493
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6[:STATe] ON   OFF   1   0 .....	1490
[:SENSe]:CORRection:CSET[1]   2   3   4   5   6[:STATe]? .....	1490
[:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude] 50   75 .....	1460
[:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude]? .....	1460
[:SENSe]:CORRection:IQ:I:GAIN <rel_ampl> .....	1482
[:SENSe]:CORRection:IQ:I:GAIN? .....	1482
[:SENSe]:CORRection:IQ:I   Q:ATTenuation <rel_ampl> .....	1473
[:SENSe]:CORRection:IQ:I   Q:ATTenuation:RATio <real> .....	1473
[:SENSe]:CORRection:IQ:I   Q:ATTenuation:RATio? .....	1473
[:SENSe]:CORRection:IQ:I   Q:ATTenuation? .....	1473

---

## List of Commands

[:SENSe]:CORRection:IQ:Q:GAIN <rel_ampl> .....	1483
[:SENSe]:CORRection:IQ:Q:GAIN? .....	1483
[:SENSe]:CORRection:IQ:Q:SKEW <seconds> .....	1472
[:SENSe]:CORRection:IQ:Q:SKEW? .....	1472
[:SENSe]:CORRection:IQ[:I]:SKEW <seconds> .....	1468
[:SENSe]:CORRection:IQ[:I]:SKEW? .....	1468
[:SENSe]:CORRection:MS[:RF]:GAIN <rel_ampl> .....	1480
[:SENSe]:CORRection:MS[:RF]:GAIN? .....	1480
[:SENSe]:CORRection:SA[:RF]:GAIN <rel_ampl> .....	1480
[:SENSe]:CORRection:SA[:RF]:GAIN? .....	1480
[:SENSe]:DEMod AM   FM   PM   OFF .....	1626
[:SENSe]:DEMod:AM:BANDwidth:CHANnel <freq> .....	1627
[:SENSe]:DEMod:AM:BANDwidth:CHANnel? .....	1627
[:SENSe]:DEMod:FM:BANDwidth:CHANnel <freq> .....	1628
[:SENSe]:DEMod:FM:BANDwidth:CHANnel? .....	1628
[:SENSe]:DEMod:FM:DEEMphasis OFF   US25   US50   US75   US750 .....	1628
[:SENSe]:DEMod:FM:DEEMphasis? .....	1628
[:SENSe]:DEMod:PM:BANDwidth:CHANnel <freq> .....	1630
[:SENSe]:DEMod:PM:BANDwidth:CHANnel? .....	1630
[:SENSe]:DEMod:STATe OFF   ON   0   1 .....	1631
[:SENSe]:DEMod:STATe? .....	1631
[:SENSe]:DEMod:TIME <time> .....	1631
[:SENSe]:DEMod:TIME? .....	1631
[:SENSe]:DEMod? .....	1626
[:SENSe]:DETEctor:AUTO ON   OFF   1   0 .....	1728
[:SENSe]:DETEctor:AUTO? .....	1728
[:SENSe]:DETEctor:TRACe[1]   2   3   4   5   6 AVERage   NEGative   NORMal   POSitive   SAM- Ple   QPEak   EAverage   RAverage .....	1724
[:SENSe]:DETEctor:TRACe[1]   2   3   4   5   6:AUTO ON   OFF   1   0 .....	1727
[:SENSe]:DETEctor:TRACe[1]   2   3   4   5   6:AUTO? .....	1727
[:SENSe]:DETEctor:TRACe[1]   2   3   4   5   6? .....	1724



---

## List of Commands

[:SENSe]:DETEctor[:FUNction] NORMal   AVERage   POSitive   SAMPlE   NEGative   QPEak   EAV- erage   EPOSitive   MPOSitive   RMS . . . . .	1725
[:SENSe]:DETEctor[:FUNction]? . . . . .	1725
[:SENSe]:EVMQpsk:AVERage:COUNT <integer> . . . . .	1246
[:SENSe]:EVMQpsk:AVERage:COUNT? . . . . .	1246
[:SENSe]:EVMQpsk:AVERage:TCONtrol EXPonential   REPEAT . . . . .	1247
[:SENSe]:EVMQpsk:AVERage:TCONtrol? . . . . .	1247
[:SENSe]:EVMQpsk:AVERage[:STATe] OFF   ON   0   1 . . . . .	1246
[:SENSe]:EVMQpsk:AVERage[:STATe]? . . . . .	1246
[:SENSe]:EVMQpsk:BANDwidth:SHAPE GAUSSian   FLATtop . . . . .	1231
[:SENSe]:EVMQpsk:BANDwidth:SHAPE? . . . . .	1231
[:SENSe]:EVMQpsk:BANDwidth[:RESolution] <freq> . . . . .	1230
[:SENSe]:EVMQpsk:BANDwidth[:RESolution]? . . . . .	1230
[:SENSe]:EVMQpsk:CRATe <freq> . . . . .	1252
[:SENSe]:EVMQpsk:CRATe? . . . . .	1252
[:SENSe]:EVMQpsk:FILTer:ALPHa <real> . . . . .	1252
[:SENSe]:EVMQpsk:FILTer:ALPHa? . . . . .	1252
[:SENSe]:EVMQpsk:FILTer[:RRC][:STATe] OFF   ON   0   1 . . . . .	1251
[:SENSe]:EVMQpsk:FILTer[:RRC][:STATe]? . . . . .	1251
[:SENSe]:EVMQpsk:IF:GAIN:AUTO[:STATe] ON   OFF   1   0 . . . . .	1253
[:SENSe]:EVMQpsk:IF:GAIN:AUTO[:STATe]? . . . . .	1253
[:SENSe]:EVMQpsk:IF:GAIN[:STATe] ON   OFF   1   0 . . . . .	1254
[:SENSe]:EVMQpsk:IF:GAIN[:STATe]? . . . . .	1254
[:SENSe]:EVMQpsk:MEAS:LENGth < integer > . . . . .	1250
[:SENSe]:EVMQpsk:MEAS:LENGth? . . . . .	1250
[:SENSe]:EVMQpsk:MEAS:OFFSet <integer> . . . . .	1249
[:SENSe]:EVMQpsk:MEAS:OFFSet? . . . . .	1249
[:SENSe]:EVMQpsk:SPECTrum NORMal   INVert . . . . .	1250
[:SENSe]:EVMQpsk:SPECTrum? . . . . .	1250
[:SENSe]:EVMQpsk:SWEep:POINts <integer> . . . . .	1247
[:SENSe]:EVMQpsk:SWEep:POINts? . . . . .	1247

---

## List of Commands

[:SENSe]:FEED RF   AIQ   IQ   IONLy   QONLy   INDependent   AREFERENCE .....	1459
[:SENSe]:FEED:AREFERENCE REF50   REF4800   OFF .....	1477
[:SENSe]:FEED:AREFERENCE? .....	1477
[:SENSe]:FEED:DATA INPut   STORed   RECorded .....	1484
[:SENSe]:FEED:DATA:STORe .....	1486
[:SENSe]:FEED:DATA? .....	1484
[:SENSe]:FEED:IQ:TYPE IQ   IONLy   QONLy   INDependent .....	1464
[:SENSe]:FEED:IQ:TYPE? .....	1464
[:SENSe]:FEED? .....	1459
[:SENSe]:FREQuency:CENTer <freq> .....	1453
[:SENSe]:FREQuency:CENTer:STEP:AUTO OFF   ON   0   1 .....	1456
[:SENSe]:FREQuency:CENTer:STEP:AUTO? .....	1456
[:SENSe]:FREQuency:CENTer:STEP[:INCRement] <freq> .....	1456
[:SENSe]:FREQuency:CENTer:STEP[:INCRement]? .....	1456
[:SENSe]:FREQuency:CENTer? .....	1453
[:SENSe]:FREQuency:IQ:CENTer <freq> .....	1456
[:SENSe]:FREQuency:IQ:CENTer? .....	1456
[:SENSe]:FREQuency:RF:CENTer <freq> .....	1455
[:SENSe]:FREQuency:RF:CENTer? .....	1455
[:SENSe]:FREQuency:SPAN <freq> .....	1681
[:SENSe]:FREQuency:SPAN:BANDwidth[:RESolution]:RATio <integer> .....	1444
[:SENSe]:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO OFF   ON   0   1 .....	1444
[:SENSe]:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO? .....	1444
[:SENSe]:FREQuency:SPAN:BANDwidth[:RESolution]:RATio? .....	1444
[:SENSe]:FREQuency:SPAN:FULL .....	1683
[:SENSe]:FREQuency:SPAN:PREVious .....	1684
[:SENSe]:FREQuency:SPAN? .....	1681
[:SENSe]:FREQuency:SYNThesis:AUTO[:STATe] OFF   ON   0   1 .....	1618
[:SENSe]:FREQuency:SYNThesis:AUTO[:STATe]? .....	1618
[:SENSe]:FREQuency:SYNThesis[:STATe] 1   2   3 .....	1617
[:SENSe]:FREQuency:SYNThesis[:STATe]? .....	1617

---

## List of Commands

[:SENSe]:IF:GAIN:FFT:AUTO[:STATe] OFF   ON   0   1 .....	1625
[:SENSe]:IF:GAIN:FFT:AUTO[:STATe]? .....	1625
[:SENSe]:IF:GAIN:FFT[:STATe] AUTOrange   LOW   HIGH .....	1624
[:SENSe]:IF:GAIN:FFT[:STATe]? .....	1624
[:SENSe]:IF:GAIN:SWEpt:AUTO[:STATe] OFF   ON   0   1 .....	1623
[:SENSe]:IF:GAIN:SWEpt:AUTO[:STATe]? .....	1623
[:SENSe]:IF:GAIN:SWEpt[:STATe] OFF   ON   0   1 .....	1622
[:SENSe]:IF:GAIN:SWEpt[:STATe]? .....	1622
[:SENSe]:MONitor:AVERage:COUNT <integer> .....	1312
[:SENSe]:MONitor:AVERage:COUNT? .....	1312
[:SENSe]:MONitor:AVERage:TCONtrol EXPonential   REPEAT .....	1313
[:SENSe]:MONitor:AVERage:TCONtrol? .....	1313
[:SENSe]:MONitor:AVERage[:STATe] OFF   ON   0   1 .....	1312
[:SENSe]:MONitor:AVERage[:STATe]? .....	1312
[:SENSe]:MONitor:BANDwidth:VIDeo <bandwidth> .....	1295
[:SENSe]:MONitor:BANDwidth:VIDeo:AUTO ON   OFF   1   0 .....	1295
[:SENSe]:MONitor:BANDwidth:VIDeo:AUTO? .....	1295
[:SENSe]:MONitor:BANDwidth:VIDeo:RATio <real>	
[:SENSe]:MONitor:BANDwidth:VIDeo:RATio? .....	1297
[:SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO OFF   ON   0   1 .....	1297
[:SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO? .....	1297
[:SENSe]:MONitor:BANDwidth:VIDeo? .....	1295
[:SENSe]:MONitor:BANDwidth[:RESolution] <freq> .....	1293
[:SENSe]:MONitor:BANDwidth[:RESolution]:AUTO OFF   ON   0   1 .....	1293
[:SENSe]:MONitor:BANDwidth[:RESolution]:AUTO? .....	1293
[:SENSe]:MONitor:BANDwidth[:RESolution]? .....	1293
[:SENSe]:MONitor:DETEctor:AUTO ON   OFF   1   0 .....	1330
[:SENSe]:MONitor:DETEctor:AUTO? .....	1330
[:SENSe]:MONitor:DETEctor:TRACe AVERage   NEGative   NORMal   POSitive   SAMple .....	1329
[:SENSe]:MONitor:DETEctor:TRACe? .....	1329
[:SENSe]:MONitor:FREQUency:SPAN <freq> .....	1322

---

## List of Commands

[:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio <integer> . . . . .	1297
[:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO OFF   ON   0   1 .	1297
[:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO? . . . . .	1297
[:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio? . . . . .	1297
[:SENSe]:MONitor:FREQuency:SPAN:FULL . . . . .	1323
[:SENSe]:MONitor:FREQuency:SPAN:PREVious . . . . .	1323
[:SENSe]:MONitor:FREQuency:SPAN? . . . . .	1322
[:SENSe]:MONitor:SWEep:POINts <integer> . . . . .	1326
[:SENSe]:MONitor:SWEep:POINts? . . . . .	1326
[:SENSe]:MONitor:SWEep:TIME <time> . . . . .	1325
[:SENSe]:MONitor:SWEep:TIME:AUTO OFF   ON   0   1 . . . . .	1325
[:SENSe]:MONitor:SWEep:TIME:AUTO? . . . . .	1325
[:SENSe]:MONitor:SWEep:TIME? . . . . .	1325
[:SENSe]:OBWidth:AVERage:COUNt <integer> . . . . .	716
[:SENSe]:OBWidth:AVERage:COUNt? . . . . .	716
[:SENSe]:OBWidth:AVERage:TCONtrol EXPonential   REPeat . . . . .	717
[:SENSe]:OBWidth:AVERage:TCONtrol? . . . . .	717
[:SENSe]:OBWidth:AVERage[:STATe] ON   OFF   1   0 . . . . .	716
[:SENSe]:OBWidth:AVERage[:STATe]? . . . . .	716
[:SENSe]:OBWidth:BANDwidth:SHApe GAUSSian   FLATtop . . . . .	704
[:SENSe]:OBWidth:BANDwidth:SHApe? . . . . .	704
[:SENSe]:OBWidth:BANDwidth:VIDeo <bandwidth> . . . . .	702
[:SENSe]:OBWidth:BANDwidth:VIDeo:AUTO ON   OFF   1   0 . . . . .	702
[:SENSe]:OBWidth:BANDwidth:VIDeo:AUTO? . . . . .	702
[:SENSe]:OBWidth:BANDwidth:VIDeo? . . . . .	702
[:SENSe]:OBWidth:BANDwidth[:RESolution] <bandwidth> . . . . .	701
[:SENSe]:OBWidth:BANDwidth[:RESolution]:AUTO ON   OFF   1   0 . . . . .	701
[:SENSe]:OBWidth:BANDwidth[:RESolution]:AUTO? . . . . .	701
[:SENSe]:OBWidth:BANDwidth[:RESolution]? . . . . .	701
[:SENSe]:OBWidth:DETEctor:AUTO ON   OFF   1   0 . . . . .	740
[:SENSe]:OBWidth:DETEctor:AUTO? . . . . .	740

---

## List of Commands

[:SENSe]:OBWidth:DETEctor[:FUNction] NORMal   AVERage   POSitive   SAMPlE   NEGative .	739
[:SENSe]:OBWidth:DETEctor[:FUNction]? . . . . .	739
[:SENSe]:OBWidth:FREQuency:SPAN <freq> . . . . .	731
[:SENSe]:OBWidth:FREQuency:SPAN:FULL . . . . .	732
[:SENSe]:OBWidth:FREQuency:SPAN:PREVious . . . . .	732
[:SENSe]:OBWidth:FREQuency:SPAN? . . . . .	731
[:SENSe]:OBWidth:IF:GAIN:AUTO[:STATe] ON   OFF   1   0 . . . . .	720
[:SENSe]:OBWidth:IF:GAIN:AUTO[:STATe]? . . . . .	720
[:SENSe]:OBWidth:IF:GAIN[:STATe] ON   OFF   1   0 . . . . .	720
[:SENSe]:OBWidth:IF:GAIN[:STATe]? . . . . .	720
[:SENSe]:OBWidth:MAXHold ON   OFF   1   0 . . . . .	718
[:SENSe]:OBWidth:MAXHold? . . . . .	718
[:SENSe]:OBWidth:PERCent <real> . . . . .	718
[:SENSe]:OBWidth:PERCent? . . . . .	718
[:SENSe]:OBWidth:SWEep:POINts <integer> . . . . .	736
[:SENSe]:OBWidth:SWEep:POINts? . . . . .	736
[:SENSe]:OBWidth:SWEep:TIME <time> . . . . .	734
[:SENSe]:OBWidth:SWEep:TIME:AUTO OFF   ON   0   1 . . . . .	734
[:SENSe]:OBWidth:SWEep:TIME:AUTO:RULes NORMal   ACCuracy . . . . .	735
[:SENSe]:OBWidth:SWEep:TIME:AUTO:RULes? . . . . .	735
[:SENSe]:OBWidth:SWEep:TIME:AUTO? . . . . .	734
[:SENSe]:OBWidth:SWEep:TIME? . . . . .	734
[:SENSe]:OBWidth:XDB <rel_ampl> . . . . .	719
[:SENSe]:OBWidth:XDB? . . . . .	719
[:SENSe]:PCONtrol:BANdwidth[:RESolution] <freq> . . . . .	1152
[:SENSe]:PCONtrol:BANdwidth[:RESolution]:TYPE FLATtop   GAUSSian . . . . .	1153
[:SENSe]:PCONtrol:BANdwidth[:RESolution]:TYPE? . . . . .	1153
[:SENSe]:PCONtrol:BANdwidth[:RESolution]? . . . . .	1152
[:SENSe]:PCONtrol:CAPTure:TIME <real> . . . . .	1189
[:SENSe]:PCONtrol:CAPTure:TIME? . . . . .	1189
[:SENSe]:PCONtrol:CRATe <freq> . . . . .	1192

---

## List of Commands

[:SENSe]:PCONtrol:CRATe? .....	1192
[:SENSe]:PCONtrol:FILTer[:RRC]:ALPHa <real> .....	1192
[:SENSe]:PCONtrol:FILTer[:RRC]:ALPHa? .....	1192
[:SENSe]:PCONtrol:FILTer[:RRC]:AUTO OFF   ON   0   1 .....	1187
[:SENSe]:PCONtrol:FILTer[:RRC]:AUTO? .....	1187
[:SENSe]:PCONtrol:FILTer[:RRC][:STATe] 0   1   OFF   ON .....	1188
[:SENSe]:PCONtrol:FILTer[:RRC][:STATe]? .....	1188
[:SENSe]:PCONtrol:IF:GAIN:AUTO[:STATe] OFF   ON   0   1 .....	1190
[:SENSe]:PCONtrol:IF:GAIN:AUTO[:STATe]? .....	1190
[:SENSe]:PCONtrol:IF:GAIN[:STATe] ON   OFF   1   0 .....	1190
[:SENSe]:PCONtrol:IF:GAIN[:STATe]? .....	1190
[:SENSe]:PCONtrol:METHod WAVeform   CPOWer .....	1186
[:SENSe]:PCONtrol:METHod? .....	1186
[:SENSe]:PCONtrol:PRACH:NFLoor <real> .....	1172
[:SENSe]:PCONtrol:PRACH:NFLoor? .....	1172
[:SENSe]:PCONtrol:PRACH:SIGNature <integer> .....	1171
[:SENSe]:PCONtrol:PRACH:SIGNature:AUTO 0   1   OFF   ON .....	1171
[:SENSe]:PCONtrol:PRACH:SIGNature:AUTO? .....	1171
[:SENSe]:PCONtrol:PRACH:SIGNature? .....	1171
[:SENSe]:PCONtrol:PRACH:THReshold? .....	1172
[:SENSe]:PCONtrol:SBOundary:LIST:MS:APPend <symbol_rate>, <code_num>, IPH   QPH ..	1178
[:SENSe]:PCONtrol:SBOundary:LIST:MS:CHANnel? <entry_id> .....	1184
[:SENSe]:PCONtrol:SBOundary:LIST:MS:INIT <symbol_rate>, <code_num>, IPH   QPH ..	1176
[:SENSe]:PCONtrol:SBOundary:LIST:MS:NCHannels? .....	1186
[:SENSe]:PCONtrol:SBOundary:LIST:MS:REPLace <entry_id>, <symbol_rate>, <code_num>, IPH   QPH .....	1181
[:SENSe]:PCONtrol:SBOundary:MS AUTO   CUSTom .....	1175
[:SENSe]:PCONtrol:SBOundary:MS? .....	1175
[:SENSe]:PCONtrol:SLOT:FORMat AUTO   SF0   SF1   SF2   SF3   SF4   SF5 .....	1167
[:SENSe]:PCONtrol:SLOT:FORMat? .....	1167
[:SENSe]:PCONtrol:SSLot:NUMBer <integer> .....	1168

---

## List of Commands

[:SENSe]:PCONtrol:SSLot:NUMBer? .....	1168
[:SENSe]:PCONtrol:SSLot[:STATe] OFF   ON   0   1 .....	1168
[:SENSe]:PCONtrol:SSLot[:STATe]? .....	1168
[:SENSe]:PCONtrol:SYNC:SCRamble <integer> .....	1189
[:SENSe]:PCONtrol:SYNC:SCRamble? .....	1189
[:SENSe]:PCONtrol:TYPE SPOWer   PRACH   SPHase .....	1166
[:SENSe]:PCONtrol:TYPE? .....	1166
[:SENSe]:POWer:IQ:Q:RANGe[:UPPer] <ampl> .....	1419
[:SENSe]:POWer:IQ:Q:RANGe[:UPPer]? .....	1419
[:SENSe]:POWer:IQ:RANGe:AUTO OFF   ON   0   1 .....	1416
[:SENSe]:POWer:IQ:RANGe:AUTO? .....	1416
[:SENSe]:POWer:IQ[:I]:RANGe[:UPPer] <ampl> .....	1417
[:SENSe]:POWer:IQ[:I]:RANGe[:UPPer]? .....	1417
[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl> .....	1408
[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1 .....	1408
[:SENSe]:POWer[:RF]:ATTenuation:AUTO? .....	1408
[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRe ment] 10 dB   2 dB .....	1414
[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRe ment]? .....	1414
[:SENSe]:POWer[:RF]:ATTenuation? .....	1408
[:SENSe]:POWer[:RF]:EATTenuation <rel_ampl> .....	1412
[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF   ON   0   1 .....	1410
[:SENSe]:POWer[:RF]:EATTenuation:STATe? .....	1410
[:SENSe]:POWer[:RF]:EATTenuation? .....	1412
[:SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL .....	1435
[:SENSe]:POWer[:RF]:GAIN:BAND? .....	1435
[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1 .....	1435
[:SENSe]:POWer[:RF]:GAIN[:STATe]? .....	1435
[:SENSe]:POWer[:RF]:MIXer:RANGe[:UPPer] <real> .....	1414
[:SENSe]:POWer[:RF]:MIXer:RANGe[:UPPer]? .....	1414
[:SENSe]:POWer[:RF]:MW:PATH STD   LNPath   MPBypass .....	1431
[:SENSe]:POWer[:RF]:MW:PATH? .....	1431

---

## List of Commands

<code>[:SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code>	.1423
<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE   MMWave   EXTERNAL</code>	.1423
<code>[:SENSe]:POWer[:RF]:PADJust:PRESelector?</code>	.1423
<code>[:SENSe]:POWer[:RF]:PADJust?</code>	.1423
<code>[:SENSe]:POWer[:RF]:PCENter</code>	.1421
<code>[:SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0</code>	.1413
<code>[:SENSe]:POWer[:RF]:RANGe:AUTO?</code>	.1413
<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>	.1413
<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ELEctrical   COMBined</code>	.1413
<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>	.1413
<code>[:SENSe]:PStatistic:SLTView[:STATe]?</code>	.789
<code>[:SENSe]:PStatistic:BANDwidth &lt;freq&gt;</code>	.754
<code>[:SENSe]:PStatistic:BANDwidth?</code>	.754
<code>[:SENSe]:PStatistic:COUNts &lt;integer&gt;</code>	.767
<code>[:SENSe]:PStatistic:COUNts?</code>	.767
<code>[:SENSe]:PStatistic:IF:GAIN:AUTO[:STATe] ON   OFF   1   0</code>	.771
<code>[:SENSe]:PStatistic:IF:GAIN:AUTO[:STATe]?</code>	.771
<code>[:SENSe]:PStatistic:IF:GAIN[:STATe] ON   OFF   1   0</code>	.771
<code>[:SENSe]:PStatistic:IF:GAIN[:STATe]?</code>	.771
<code>[:SENSe]:PStatistic:SLTView[:STATe] OFF   ON   0   1</code>	.789
<code>[:SENSe]:PStatistic:SWEep:CYCLes &lt;integer&gt;</code>	.768
<code>[:SENSe]:PStatistic:SWEep:CYCLes?</code>	.768
<code>[:SENSe]:PStatistic:SWEep:OFFSet &lt;time&gt;</code>	.770
<code>[:SENSe]:PStatistic:SWEep:OFFSet?</code>	.770
<code>[:SENSe]:PStatistic:SWEep:TIME &lt;time&gt;</code>	.768
<code>[:SENSe]:PStatistic:SWEep:TIME &lt;time&gt;</code>	.769
<code>[:SENSe]:PStatistic:SWEep:TIME?</code>	.768
<code>[:SENSe]:PStatistic:SWEep:TIME?</code>	.769
<code>[:SENSe]:RADio:CONFigure:EHSPa[:STATe] OFF   ON   0   1</code>	.1652
<code>[:SENSe]:RADio:CONFigure:EHSPa[:STATe]?</code>	.1652
<code>[:SENSe]:RADio:CONFigure:HSDPa[:STATe] 0   1   OFF   ON</code>	.1652



---

## List of Commands

[:SENSe]:RADio:CONFigure:HSDPa[:STATe]? .....	1652
[:SENSe]:RADio:STANdard:DEVIce BTS   MS .....	1651
[:SENSe]:RADio:STANdard:DEVIce? .....	1651
[:SENSe]:RECOrding:ABORT .....	1487
[:SENSe]:RECOrding:INITiate[:IMMediate] .....	1487
[:SENSe]:RECOrding:LENGth <real>,SECOnds   RECOrds   POINts .....	1488
[:SENSe]:RECOrding:LENGth:STATe MAX   MANual .....	1488
[:SENSe]:RECOrding:LENGth:STATe? .....	1488
[:SENSe]:RECOrding:LENGth:UNIT? .....	1488
[:SENSe]:RECOrding:LENGth:VALue? .....	1488
[:SENSe]:RHO:AVERage:COUNt <integer> .....	1023
[:SENSe]:RHO:AVERage:COUNt? .....	1023
[:SENSe]:RHO:AVERage:TCONtrol EXPonential   REPeat .....	1024
[:SENSe]:RHO:AVERage:TCONtrol? .....	1024
[:SENSe]:RHO:AVERage[:STATe] OFF   ON   0   1 .....	1023
[:SENSe]:RHO:AVERage[:STATe]? .....	1023
[:SENSe]:RHO:CAPTure:TIME[:FRAMe] <real> .....	1024
[:SENSe]:RHO:CAPTure:TIME[:FRAMe]? .....	1024
[:SENSe]:RHO:CRATe <freq> .....	1080
[:SENSe]:RHO:CRATe? .....	1080
[:SENSe]:RHO:FERRor:TRANge WIDE   NORMal .....	1082
[:SENSe]:RHO:FERRor:TRANge? .....	1082
[:SENSe]:RHO:FILTer[:RRC]:ALPHa <real> .....	1080
[:SENSe]:RHO:FILTer[:RRC]:ALPHa? .....	1080
[:SENSe]:RHO:FILTer[:RRC][:STATe] OFF   ON   0   1 .....	1079
[:SENSe]:RHO:FILTer[:RRC][:STATe]? .....	1079
[:SENSe]:RHO:IF:GAIN:AUTO[:STATe] OFF   ON   0   1 .....	1083
[:SENSe]:RHO:IF:GAIN:AUTO[:STATe]? .....	1083
[:SENSe]:RHO:IF:GAIN[:STATe] ON   OFF   1   0 .....	1084
[:SENSe]:RHO:IF:GAIN[:STATe]? .....	1084
[:SENSe]:RHO:MCEStimator OFF   ON   0   1 .....	1081

---

## List of Commands

[:SENSe]:RHO:MCEStimator:TIMing CHANnel   GLOBal	1082
[:SENSe]:RHO:MCEStimator:TIMing?	1082
[:SENSe]:RHO:MCEStimator?	1081
[:SENSe]:RHO:MICH:SPRead <integer>	1085
[:SENSe]:RHO:MICH:SPRead?	1085
[:SENSe]:RHO:MICH:STATe OFF   ON   0   1	1085
[:SENSe]:RHO:MICH:STATe?	1085
[:SENSe]:RHO:PICH:SPRead <integer>	1084
[:SENSe]:RHO:PICH:SPRead?	1084
[:SENSe]:RHO:PRACH:SIGNature <integer>	1035
[:SENSe]:RHO:PRACH:SIGNature:AUTO OFF   ON   0   1	1035
[:SENSe]:RHO:PRACH:SIGNature:AUTO?	1035
[:SENSe]:RHO:PRACH:SIGNature?	1035
[:SENSe]:RHO:SBOundary:LIST:MS:APPend <symbol_rate>, <code_num>, IPH   QPH	1068
[:SENSe]:RHO:SBOundary:LIST:MS:CHANnel? <entry_id>	1074
[:SENSe]:RHO:SBOundary:LIST:MS:INIT <symbol_rate>, <code_num>, IPH   QPH	1066
[:SENSe]:RHO:SBOundary:LIST:MS:NCHannels?	1075
[:SENSe]:RHO:SBOundary:LIST:MS:REPLace <entry_id>, <symbol_rate>, <code_num>, IPH   QPH	1071
[:SENSe]:RHO:SBOundary:LIST[:BTS]:APPend <symbol_rate>, <code_num>, QPSK   QAM16   QAM64	1054
[:SENSe]:RHO:SBOundary:LIST[:BTS]:CHANnel? <entry_id>	1060
[:SENSe]:RHO:SBOundary:LIST[:BTS]:INIT <symbol_rate>, <code_num>, QPSK   QAM16   QAM64	1051
[:SENSe]:RHO:SBOundary:LIST[:BTS]:NCHannels?	1063
[:SENSe]:RHO:SBOundary:LIST[:BTS]:PRESet TM1D16   TM1D32   TM1D64   TM1D16SC   TM1D32SC   TM1D64SC   TM2   TM2SC   TM3D16   TM3D32   TM3D16SC   TM3D32SC   TM4   TM4CP   TM5H2   TM5H4   TM5H8   TM6H8	1063
[:SENSe]:RHO:SBOundary:LIST[:BTS]:REPLace <entry_id>, <symbol_rate>, <code_num>, QPSK   QAM16   QAM64	1058
[:SENSe]:RHO:SBOundary:MS AUTO   CUSTom	1064
[:SENSe]:RHO:SBOundary:MS?	1064
[:SENSe]:RHO:SBOundary[:BTS] AU-	

---

## List of Commands

TO   TM1D16   TM1D32   TM1D64   TM1D16SC   TM1D32SC   TM1D64SC   TM2   TM2SC   TM3D16   TM3D32   TM3D16SC   TM3D32SC   TM4   TM4CP   TM5H2   TM5H4   TM5H8   TM6H8   CUSTom . . .	1038
[[:SENSe]:RHO:SBOundary[:BTS]? . . . . .	1038
[[:SENSe]:RHO:SFORmat:MS SF0   SF1   SF2   SF3   SF4   SF5 . . . . .	1034
[[:SENSe]:RHO:SFORmat:MS?. . . . .	1034
[[:SENSe]:RHO:SPECtrum INVert   NORMal . . . . .	1077
[[:SENSe]:RHO:SPECtrum? . . . . .	1077
[[:SENSe]:RHO:SSLot:NUMBer <integer> . . . . .	1076
[[:SENSe]:RHO:SSLot:NUMBer? . . . . .	1076
[[:SENSe]:RHO:SSLot[:STATe] OFF   ON   0   1 . . . . .	1076
[[:SENSe]:RHO:SSLot[:STATe]? . . . . .	1076
[[:SENSe]:RHO:SWEep:TIME:TRANsient INCLude   EXCLude . . . . .	1077
[[:SENSe]:RHO:SWEep:TIME:TRANsient? . . . . .	1077
[[:SENSe]:RHO:SYNC:CPICH:ESTimator OFF   ON   0   1 . . . . .	1030
[[:SENSe]:RHO:SYNC:CPICH:ESTimator? . . . . .	1030
[[:SENSe]:RHO:SYNC:MS DPCCh   PMESsage . . . . .	1032
[[:SENSe]:RHO:SYNC:MS?. . . . .	1032
[[:SENSe]:RHO:SYNC:SCRamble:MS <integer> . . . . .	1036
[[:SENSe]:RHO:SYNC:SCRamble:MS?. . . . .	1036
[[:SENSe]:RHO:SYNC:SCRamble[:BTS] <integer> . . . . .	1033
[[:SENSe]:RHO:SYNC:SCRamble[:BTS]:OFFSet <integer> . . . . .	1036
[[:SENSe]:RHO:SYNC:SCRamble[:BTS]:OFFSet? . . . . .	1036
[[:SENSe]:RHO:SYNC:SCRamble[:BTS]:TYPE LEFT   RIGHt   STANdard . . . . .	1037
[[:SENSe]:RHO:SYNC:SCRamble[:BTS]:TYPE? . . . . .	1037
[[:SENSe]:RHO:SYNC:SCRamble[:BTS]? . . . . .	1033
[[:SENSe]:RHO:SYNC:SYMBOL:SPRead <integer> . . . . .	1031
[[:SENSe]:RHO:SYNC:SYMBOL:SPRead? . . . . .	1031
[[:SENSe]:RHO:SYNC:SYMBOL:SRATe <integer> . . . . .	1031
[[:SENSe]:RHO:SYNC:SYMBOL:SRATe? . . . . .	1031
[[:SENSe]:RHO:SYNC[:BTS] CPICH   SCH   SYMBol   STTD   A2CPich   A1Sch   A2Sch . . . . .	1030
[[:SENSe]:RHO:SYNC[:BTS]? . . . . .	1030

---

## List of Commands

[:SENSe]:ROSCillator:BA NDwidth WIDE   NARRow	1504
[:SENSe]:ROSCillator:BA NDwidth?	1504
[:SENSe]:ROSCillator:COUPling NORMAl   NACQuisition	1505
[:SENSe]:ROSCillator:COUPling?	1505
[:SENSe]:ROSCillator:EXTErnal:FREQuency <freq>	1503
[:SENSe]:ROSCillator:EXTErnal:FREQuency?	1503
[:SENSe]:ROSCillator:SOURce INTernal   EXTErnal	1502
[:SENSe]:ROSCillator:SOURce:TYPE INTernal   EXTErnal   SENSe	1501
[:SENSe]:ROSCillator:SOURce:TYPE?	1501
[:SENSe]:ROSCillator:SOURce?	1501
[:SENSe]:SEMAsk:AVERAge:COUNT <integer>	544
[:SENSe]:SEMAsk:AVERAge:COUNT?	544
[:SENSe]:SEMAsk:AVERAge[:STATe] ON   OFF   1   0	544
[:SENSe]:SEMAsk:AVERAge[:STATe]?	544
[:SENSe]:SEMAsk:BA NDwidth:SHAPE ASENse   GAUSSian   FLATtop	532
[:SENSe]:SEMAsk:BA NDwidth:SHAPE?	532
[:SENSe]:SEMAsk:BA NDwidth[1]   2:INTegration <bandwidth>	546
[:SENSe]:SEMAsk:BA NDwidth[1]   2:INTegration?	546
[:SENSe]:SEMAsk:BA NDwidth[1]   2:VIDeo <bandwidth>	550
[:SENSe]:SEMAsk:BA NDwidth[1]   2:VIDeo:AUTO OFF   ON   1   0	550
[:SENSe]:SEMAsk:BA NDwidth[1]   2:VIDeo:AUTO?	550
[:SENSe]:SEMAsk:BA NDwidth[1]   2:VIDeo:RATio <real>	552
[:SENSe]:SEMAsk:BA NDwidth[1]   2:VIDeo:RATio:AUTO OFF   ON   1   0	552
[:SENSe]:SEMAsk:BA NDwidth[1]   2:VIDeo:RATio:AUTO?	552
[:SENSe]:SEMAsk:BA NDwidth[1]   2:VIDeo:RATio	552
[:SENSe]:SEMAsk:BA NDwidth[1]   2:VIDeo?	550
[:SENSe]:SEMAsk:BA NDwidth[1]   2[:RESolution] <bandwidth>	549
[:SENSe]:SEMAsk:BA NDwidth[1]   2[:RESolution]:AUTO OFF   ON   1   0	549
[:SENSe]:SEMAsk:BA NDwidth[1]   2[:RESolution]:AUTO?	549
[:SENSe]:SEMAsk:BA NDwidth[1]   2[:RESolution]?	549
[:SENSe]:SEMAsk:CARRier:AUTO[:STATe] OFF   ON   1   0	553

---

## List of Commands

[:SENSe]:SEMAsk:CARRier:AUTO[:STATe]?	553
[:SENSe]:SEMAsk:CARRier:CPSD <real>	554
[:SENSe]:SEMAsk:CARRier:CPSD?	554
[:SENSe]:SEMAsk:CARRier:PEAK[:POWer] <real>	555
[:SENSe]:SEMAsk:CARRier:PEAK[:POWer]?	555
[:SENSe]:SEMAsk:CARRier[:POWer] <real>	553
[:SENSe]:SEMAsk:CARRier[:POWer]?	553
[:SENSe]:SEMAsk:DETEctor:CARRier:AUTO ON   OFF   1   0	599
[:SENSe]:SEMAsk:DETEctor:CARRier:AUTO?	599
[:SENSe]:SEMAsk:DETEctor:CARRier[:FUNCTioN] AVERAge   NEGAtive   NORMAl   POSitive   SAM- Ple	598
[:SENSe]:SEMAsk:DETEctor:CARRier[:FUNCTioN]?	598
[:SENSe]:SEMAsk:DETEctor:OFFSet:AUTO ON   OFF   1   0	601
[:SENSe]:SEMAsk:DETEctor:OFFSet:AUTO?	601
[:SENSe]:SEMAsk:DETEctor:OFFSet[:FUNCTioN] AVERAge   NEGAtive   NORMAl   POSitive   SAM- Ple	600
[:SENSe]:SEMAsk:DETEctor:OFFSet[:FUNCTioN]?	600
[:SENSe]:SEMAsk:FILTer[:RRC]:ALPHa <real>	578
[:SENSe]:SEMAsk:FILTer[:RRC]:ALPHa?	578
[:SENSe]:SEMAsk:FILTer[:RRC][:STATe] OFF   ON   0   1	577
[:SENSe]:SEMAsk:FILTer[:RRC][:STATe]?	577
[:SENSe]:SEMAsk:FREQuency[1]   2:SPAN <freq>	547
[:SENSe]:SEMAsk:FREQuency[1]   2:SPAN?	547
[:SENSe]:SEMAsk:LIMits STD   MAN	579
[:SENSe]:SEMAsk:LIMits:TYPE MANual   JEITa   ANONcriticalASUBeritical   ACRitical   TSB	582
[:SENSe]:SEMAsk:LIMits:TYPE MANual   NONCritical   CRITical	580
[:SENSe]:SEMAsk:LIMits:TYPE?	580
[:SENSe]:SEMAsk:LIMits:TYPE?	582
[:SENSe]:SEMAsk:LIMits?	579
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:IMULti <integer>,<integer>,<integer>,<inte- ger>,<integer>,<integer>	565
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:IMULti?	565

---

## List of Commands

[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:VIDeo <freq>,<freq>,<freq>,<freq>,<freq>,<freq> . . . . .	566
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:VIDeo:AUTO OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1 . . . . .	566
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:VIDeo:AUTO? . . . . .	566
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:VIDeo:RATio <real>,<real>,<real>,<real>,<real>,<real> . . . . .	567
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:VIDeo:RATio:AUTO OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1 . . . . .	567
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:VIDeo:RATio:AUTO? . . . . .	567
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:VIDeo:RATio? . . . . .	567
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth:VIDeo? . . . . .	566
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth[:RESolution] <bandwidth>,<bandwidth>,<bandwidth>,<bandwidth>,<bandwidth> . . . . .	563
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth[:RESolution]:AUTO OFF   ON   1   0,OFF   ON   1   0,OFF   ON   1   0,OFF   ON   1   0,OFF   ON   1   0,OFF   ON   1   0 . . . . .	563
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth[:RESolution]:AUTO? . . . . .	563
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:BANDwidth[:RESolution]? . . . . .	563
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:FREQuency:STARt <freq>,<freq>,<freq>,<freq>,<freq>,<freq> . . . . .	556
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:FREQuency:STARt? . . . . .	556
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:FREQuency:STOP <freq>,<freq>,<freq>,<freq>,<freq>,<freq> . . . . .	559
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:FREQuency:STOP? . . . . .	559
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:SIDE BOTH   NEGative   POSitive,BOTH   NEGative   POSitive,BOTH   NEGative   POSitive,BOTH   NEGative   POSitive,BOTH   NEGative   POSitive,BOTH   NEGative   POSitive . . . . .	562
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:SIDE? . . . . .	562
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STARt:ABSolute <real>,<real>,<real>,<real>,<real>,<real> . . . . .	568
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STARt:ABSolute? . . . . .	568
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STARt:RCARrier <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl> . . . . .	572
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STARt:RCARrier? . . . . .	572
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STATe ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0 . . . . .	556

---

## List of Commands

[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STATe? . . . . .	556
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STOP:ABSolute <real>,<real>,<real>,<real>,<real>,<real> .	570
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STOP:ABSolute:COUPle ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0 . . . . .	570
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STOP:ABSolute:COUPle? . . . . .	570
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STOP:ABSolute? . . . . .	570
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STOP:RCARrier <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl> . . . . .	574
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STOP:RCARrier:COUPle ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0 . . . . .	574
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STOP:RCARrier:COUPle? . . . . .	574
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:STOP:RCARrier? . . . . .	574
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:SWEep:TIME <time>,<time>,<time>,<time>,<time>,<time>	561
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:SWEep:TIME:AUTO ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0,ON   OFF   1   0 . . . . .	561
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:SWEep:TIME:AUTO? . . . . .	561
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:SWEep:TIME? . . . . .	561
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:TEST ABSolute   AND   OR   RELative,ABSolute   AND   OR   RELative,ABSolute   AND   OR   RELative,ABSolute   AND   OR   RELative . . . . .	576
[:SENSe]:SEMAsk:OFFSet[1]   2:LIST:TEST? . . . . .	576
[:SENSe]:SEMAsk:OFFSet[1]   2:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge . . . . .	586
[:SENSe]:SEMAsk:OFFSet[1]   2:TYPE? . . . . .	586
[:SENSe]:SEMAsk:SWEep[1]   2:TIME <time> . . . . .	548
[:SENSe]:SEMAsk:SWEep[1]   2:TIME:AUTO OFF   0   ON   1 . . . . .	548
[:SENSe]:SEMAsk:SWEep[1]   2:TIME:AUTO? . . . . .	548
[:SENSe]:SEMAsk:SWEep[1]   2:TIME? . . . . .	548
[:SENSe]:SEMAsk:TYPE ? . . . . .	545
[:SENSe]:SEMAsk:TYPE PSDRef   TPreF   SPRef . . . . .	545
[:SENSe]:SPURious:AVERage:COUNT <integer> . . . . .	641
[:SENSe]:SPURious:AVERage:COUNT? . . . . .	641
[:SENSe]:SPURious:AVERage:TCONtrol EXPonential   REPeat . . . . .	642

---

## List of Commands

[:SENSe]:SPURious:AVErAge:TCONtrol?	.642
[:SENSe]:SPURious:AVErAge[:STATe] ON   OFF   1   0	.641
[:SENSe]:SPURious:AVErAge[:STATe]?	.641
[:SENSe]:SPURious:CARRier:FREQuency:MS <freq>	.673
[:SENSe]:SPURious:CARRier:FREQuency:MS?	.673
[:SENSe]:SPURious:CARRier:FREQuency:STARt <freq>	.671
[:SENSe]:SPURious:CARRier:FREQuency:STARt?	.671
[:SENSe]:SPURious:CARRier:FREQuency:STOP <freq>	.671
[:SENSe]:SPURious:CARRier:FREQuency:STOP?	.671
[:SENSe]:SPURious:CARRier:POWer <real>	.675
[:SENSe]:SPURious:CARRier:POWer?	.675
[:SENSe]:SPURious:CATegory:A	.668
[:SENSe]:SPURious:CATegory:B	.669
[:SENSe]:SPURious:CATegory:MS	.670
[:SENSe]:SPURious:FSMeas ON   OFF   1   0	.667
[:SENSe]:SPURious:FSMeas?	.667
[:SENSe]:SPURious:IF:GAIN:AUTO[:STATe] OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1,	.663
[:SENSe]:SPURious:IF:GAIN:AUTO[:STATe]?	.663
[:SENSe]:SPURious:IF:GAIN[:STATe] OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1,	.664
[:SENSe]:SPURious:IF:GAIN[:STATe]?	.664
[:SENSe]:SPURious:REPT:MODE ALL   LIMTest	.666
[:SENSe]:SPURious:REPT:MODE?	.666
[:SENSe]:SPURious:SPUR <integer>	.665
[:SENSe]:SPURious:SPUR?	.665
[:SENSe]:SPURious:SWEep:TIME:AUTO:RULEs NORMal   ACCuracy	.687
[:SENSe]:SPURious:SWEep:TIME:AUTO:RULEs?	.687
[:SENSe]:SPURious:TDD:FREQuency:STARt <freq>	.672









---

## List of Commands

[:SENSe]:SWEep:EGATe:HOLDOff:AUTO? .....	1708
[:SENSe]:SWEep:EGATe:HOLDOff? .....	1708
[:SENSe]:SWEep:EGATe:LENGth <time> .....	1704
[:SENSe]:SWEep:EGATe:LENGth? .....	1704
[:SENSe]:SWEep:EGATe:METHod LO   VIDEo   FFT .....	1705
[:SENSe]:SWEep:EGATe:METHod? .....	1705
[:SENSe]:SWEep:EGATe:MINFast? .....	1711
[:SENSe]:SWEep:EGATe:SOURce EXTernal1   EXTernal2   LINE   FRAMe   RFBurst .....	1707
[:SENSe]:SWEep:EGATe:SOURce? .....	1707
[:SENSe]:SWEep:EGATe:TIME <time> .....	1703
[:SENSe]:SWEep:EGATe:TIME? .....	1703
[:SENSe]:SWEep:EGATe:VIEW ON   OFF   1   0 .....	1700
[:SENSe]:SWEep:EGATe:VIEW? .....	1700
[:SENSe]:SWEep:EGATe[:STATe] OFF   ON   0   1 .....	1699
[:SENSe]:SWEep:EGATe[:STATe]? .....	1699
[:SENSe]:SWEep:FFT:WIDTh <real> .....	1695
[:SENSe]:SWEep:FFT:WIDTh:AUTO OFF   ON   0   1 .....	1696
[:SENSe]:SWEep:FFT:WIDTh:AUTO? .....	1696
[:SENSe]:SWEep:FFT:WIDTh? .....	1695
[:SENSe]:SWEep:POINts <integer> .....	1711
[:SENSe]:SWEep:POINts? .....	1711
[:SENSe]:SWEep:TIME <time> .....	1688
[:SENSe]:SWEep:TIME:AUTO OFF   ON   0   1 .....	1688
[:SENSe]:SWEep:TIME:AUTO:RULEs NORMAl   ACCuracy   SRESponse .....	1689
[:SENSe]:SWEep:TIME:AUTO:RULEs:AUTO[:STATe] ON   OFF   1   0 .....	1690
[:SENSe]:SWEep:TIME:AUTO:RULEs:AUTO[:STATe]? .....	1690
[:SENSe]:SWEep:TIME:AUTO:RULEs? .....	1689
[:SENSe]:SWEep:TIME:AUTO? .....	1688
[:SENSe]:SWEep:TIME? .....	1688
[:SENSe]:SWEep:TYPE FFT   SWEep .....	1692
[:SENSe]:SWEep:TYPE:AUTO OFF   ON   0   1 .....	1692

---

## List of Commands

[:SENSe]:SWEep:TYPE:AUTO:RULes SPEed   DRANge	1694
[:SENSe]:SWEep:TYPE:AUTO:RULes:AUTO[:STATe] OFF   ON   0   1	1694
[:SENSe]:SWEep:TYPE:AUTO:RULes:AUTO[:STATe]?	1694
[:SENSe]:SWEep:TYPE:AUTO:RULes?	1694
[:SENSe]:SWEep:TYPE:AUTO?	1692
[:SENSe]:SWEep:TYPE?	1692
[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] <voltage>	1418
[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?	1418
[:SENSe]:VOLTage:IQ:RANGe:AUTO OFF   ON   0   1	1416
[:SENSe]:VOLTage:IQ:RANGe:AUTO?	1416
[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer] <voltage>	1417
[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]?	1417
[:SENSe]:VOLTage   POWER:IQ:MIRRored OFF   ON   0   1	1418
[:SENSe]:VOLTage   POWER:IQ:MIRRored?	1418
[:SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe] OFF   ON   0   1	1380
[:SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe]?	1380
[:SENSe]:WAVeform:ADC:DITHer[:STATe] OFF   ON   0   1	1380
[:SENSe]:WAVeform:ADC:DITHer[:STATe]?	1380
[:SENSe]:WAVeform:APERture?	1378
[:SENSe]:WAVeform:AVERage:COUNt <integer>	1374
[:SENSe]:WAVeform:AVERage:COUNt?	1374
[:SENSe]:WAVeform:AVERage:TACount <integer>	1377
[:SENSe]:WAVeform:AVERage:TACount?	1377
[:SENSe]:WAVeform:AVERage:TCONtrol EXPonential   REPeat	1375
[:SENSe]:WAVeform:AVERage:TCONtrol?	1375
[:SENSe]:WAVeform:AVERage:TYPE LOG   MAXimum   MINimum   RMS   SCALar	1375
[:SENSe]:WAVeform:AVERage:TYPE?	1375
[:SENSe]:WAVeform:AVERage[:STATe] OFF   ON   0   1	1374
[:SENSe]:WAVeform:AVERage[:STATe]?	1374
[:SENSe]:WAVeform:BANDwidth[:RESolution]	1346
[:SENSe]:WAVeform:DIF:BANDwidth <freq>	1345

---

## List of Commands

[:SENSe]:WAVeform:DIF:BANDwidth?	1345
[:SENSe]:WAVeform:DIF:FILTer:ALPHa <real>	1356
[:SENSe]:WAVeform:DIF:FILTer:ALPHa?	1356
[:SENSe]:WAVeform:DIF:FILTer:BANDwidth <freq>	1355
[:SENSe]:WAVeform:DIF:FILTer:BANDwidth:AUTO ON   OFF   1   0	1355
[:SENSe]:WAVeform:DIF:FILTer:BANDwidth:AUTO?	1355
[:SENSe]:WAVeform:DIF:FILTer:BANDwidth?	1355
[:SENSe]:WAVeform:DIF:FILTer:TYPE GAUSsian   FLAT- top   SNYQuist   RSNYquist   RCOSine   RRCosine	1346
[:SENSe]:WAVeform:DIF:FILTer:TYPE GAUSsian   FLATtop	1346
[:SENSe]:WAVeform:DIF:FILTer:TYPE?	1346
[:SENSe]:WAVeform:DIF:FILTer:TYPE?	1346
[:SENSe]:WAVeform:IF:GAIN:AUTO[:STATe] ON   OFF   1   0	1381
[:SENSe]:WAVeform:IF:GAIN:AUTO[:STATe]?	1381
[:SENSe]:WAVeform:IF:GAIN:OFFSet <rel_ampl >	1383
[:SENSe]:WAVeform:IF:GAIN:OFFSet?	1383
[:SENSe]:WAVeform:IF:GAIN[:STATe] AUTOOrange   LOW   HIGH	1382
[:SENSe]:WAVeform:IF:GAIN[:STATe]?	1382
[:SENSe]:WAVeform:SRATe <freq>	1377
[:SENSe]:WAVeform:SRATe?	1377
[:SENSe]:WAVeform:SWEep:TIME <time>	1378
[:SENSe]:WAVeform:SWEep:TIME?	1378
[:SENSe]:WAVeform:WBIF:FILTer:BANDwidth <real>	1356
[:SENSe]:WAVeform:WBIF:FILTer:BANDwidth?	1356
[:SENSe]:WAVeform:WBIF:FILTer[:TYPE]?	1347
[:SENSe]:WAVeform:WBIF:FILTer[:TYPE]GAUSsian   NONE   NYQuist   RNYQuist   RCOSine   RR Cosine	1347
CALCulate:PCONtrol:MARKer:AOFF	1162
CALCulate:RHO:ASET:THReshold:AUTO OFF   ON   0   1	1079
CALCulate:RHO:ASET:THReshold:AUTO?	1079
CALCulate:RHO:SWEep:OFFSet <integer>	1025
CALCulate:RHO:SWEep:OFFSet?	1025

---

## List of Commands

DISPlay:CDPower:TEXT:BFOrmat BINary   HEX .....	978
DISPlay:CDPower:TEXT:BFOrmat? .....	978
.....	643





---

# 1 Using Help

Welcome to the X-Series Signal Analyzer Help system!

The online Help system is "context-sensitive". This means that the information displayed when you invoke the Help system depends on the selected Analyzer Mode, Measurement and key.

---

**TIP** To view help for any front-panel key or menu key, press that key with this Help Window open.

To scroll any page vertically (to see the whole of a long topic), press the **Down Arrow** key on the front panel to scroll down (or the **Up Arrow** key to scroll up). To locate these keys, see [“Front Panel Keys used by the Help System” on page 125](#).

---

See [“Navigating the Help Window Without a Mouse” on page 130](#) for complete information about **Using Help without an attached Mouse and Keyboard**. For specific details of how to navigate to topics, see [“Finding a Topic without a Mouse and Keyboard” on page 139](#).

See [“Navigating the Help Window with a Mouse” on page 128](#) to learn about **Using Help with an attached Mouse and Keyboard**.

You can view Help on the Analyzer itself, or you can **View Help on Another Computer**, by copying the Help files and viewing Help there. For details, see the Section [“Viewing Help on a separate Computer” on page 119](#).

To locate **Other Available Help Resources**, see [“Locating Other Help Resources” on page 118](#).

Key Path	Help
----------	------

## **Locating Other Help Resources**

All available documentation is present on the Analyzer's hard disk, either as HTML Help or Acrobat PDF files.

In addition to the interactive Windows (HTML) Help system, the Analyzer's hard disk contains Application Notes, tutorial documents, etc.

This same documentation is also included on the Documentation CD shipped with your Analyzer.

Many of the supporting documents use the Adobe Acrobat (PDF) file format. You can view PDF files using the pre-installed Adobe Reader software.

The Adobe Reader user interface differs from the Windows Help interface. For full details on how to navigate within Acrobat documents using Adobe Reader, see [“Navigating Acrobat \(PDF\) Files” on page 134](#).

---

## Viewing Help on a separate Computer

You may want to view the help pages **without** having them appear on top of the Analyzer's screen.

There are two separate Help files for each Analyzer Mode, which contain all the same help pages in different formats:

1. A file in HTML Help (CHM) format,
2. A file in Acrobat (PDF) format.

You can copy any of the Help files to another computer, then open and view the help pages in the file on that computer.

Your choice of which file to copy and view may depend on what you want to do with the file (for example, whether you want to print it and read the paper copy, or view it on the computer). The table below compares the relative advantages of the two formats:

Format Type	HTML Help Format (CHM Files)	Acrobat Format (PDF Files)
File Extension	CHM	PDF
Software Required to view file	Microsoft Windows operating system only, with Microsoft Internet Explorer installed.	Free Adobe Reader software can be downloaded for many operating systems, including: Microsoft Windows, Macintosh, Linux, Solaris.
Full Text Search?	Yes	Yes
Printable?	Yes, but with limited control.	Yes. Full print control.
Printable Table of Contents?	No	Yes
Navigable without a Mouse and Keyboard?	Yes, but with some loss of functionality.	No
Has Page Numbers?	No	Yes
Context-Sensitive Display?	Yes, when viewed using the X-Series Analyzer application window.	No
Indexed?	Yes	No
Active Hyperlinks?	Yes	Yes


### Copying the HTML Help (CHM) Files

You can copy the HTML Help file(s) you need to a separate computer running Microsoft Windows. Each HTML Help file has a .chm extension.

You can find the HTML Help (.chm) files:

- **Either**, on the documentation CD that came with the Analyzer,

- **Or**, in a special directory on the Analyzer's hard disk. The directory path is:  
C:\Program Files\Agilent\SignalAnalysis\Infrastructure\Help  
The illustration below shows an example listing of the HTML Help files in this directory, viewed using Windows Explorer.  
Depending on which Analyzer software licenses you purchased, the content of the directory on your machine may vary.

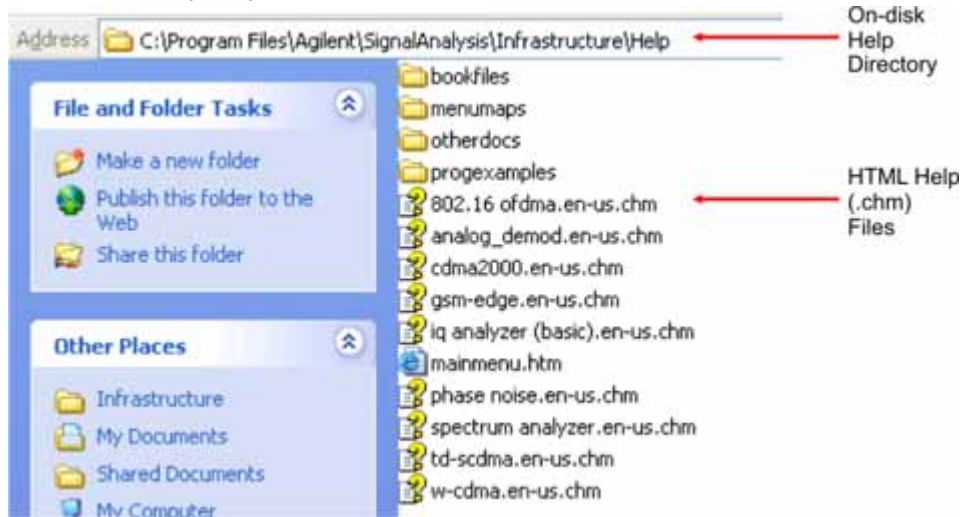

---

**NOTE** You can open and view the HTML Help files only on a PC that has Microsoft Windows and Microsoft Internet Explorer installed.


---

## Copying the Acrobat (PDF) Files

You can copy the Acrobat file(s) you need to a separate computer running any of several different operating systems. Each Acrobat file has a .pdf extension.

You can find the Acrobat (.pdf) files:

- **Either**, on the documentation CD that came with the Analyzer,
- **Or**, in a special directory on the Analyzer's hard disk. The directory path is:  
C:\Program Files\Agilent\SignalAnalysis\Infrastructure\Help\bookfiles
  - The illustration below shows an example listing of the Acrobat files in this directory, viewed using Windows Explorer.
  - The PDF versions of the help files are named <mode>\_ref.pdf, where <mode> is the name of the Analyzer Mode. For example, the name of the PDF file for GSM/EDGE Mode is gsmedge\_ref.pdf. (Note that the directory also contains other PDF documents.)
  - When you open any <mode>\_ref.pdf document, the title page displays "<Mode> User's and Programmer's Reference", where <Mode> is the name of the Analyzer Mode described by the document.
  - Depending on which Analyzer software licenses you purchased, the content of the directory on your machine may vary.

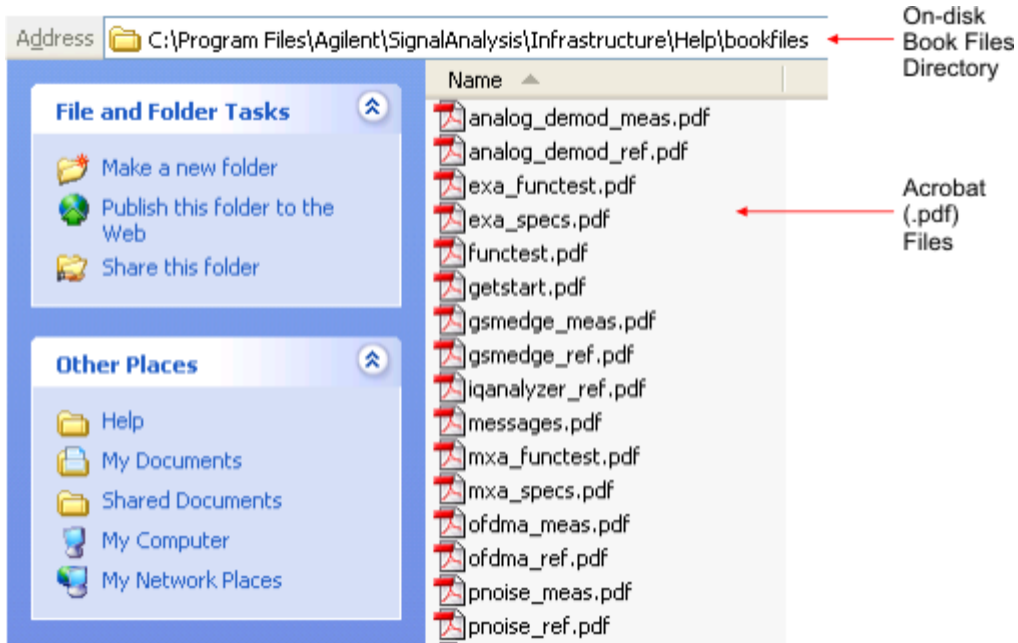

---

## How Help is Organized

This topic contains the following sections:

“Help Contents Listing” on page 122

“System Functions” on page 122

“Key Descriptions for Each Measurement” on page 123


“Key Information for Softkeys” on page 123

“Common Measurement Functions” on page 124

### Help Contents Listing

The listing under the Contents tab in the Help Window includes a topic for each Front-panel key and each softkey, for each available measurement.

The Contents listing is split into several major sections, as shown below for the HTML Help version of the document. The structure of the PDF version is similar.

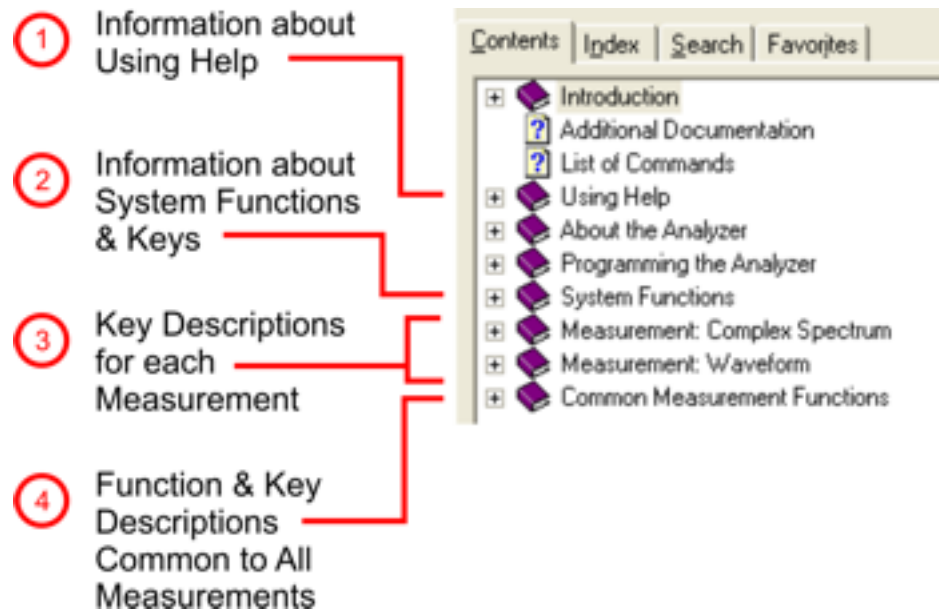

Help information is split between these sections as follows:

1. Using Help: this section.
2. System Functions. See “[System Functions](#)” on page 122 below.
3. Measurement Functions. See “[Key Descriptions for Each Measurement](#)” on page 123 below.
4. Common Measurement Functions. See “[Common Measurement Functions](#)” on page 124 below.

### System Functions

This section contains information for the following keys, which are listed in alphabetical order: **File**,


### Preset, Print, Quick Save, Recall, Save, System, User Preset.

The functions of these keys do not vary between measurements: they operate the same way, irrespective of which Analyzer measurement you have selected.

The sections for **Recall** and **Save** contain only cross-references to the respective sections in “[Common Measurement Functions](#)” on page 124, and are included here for convenience.

### Key Descriptions for Each Measurement

The Contents section for each Measurement is sub-divided into topics for each Front-panel key, in alphabetical order, as shown below.

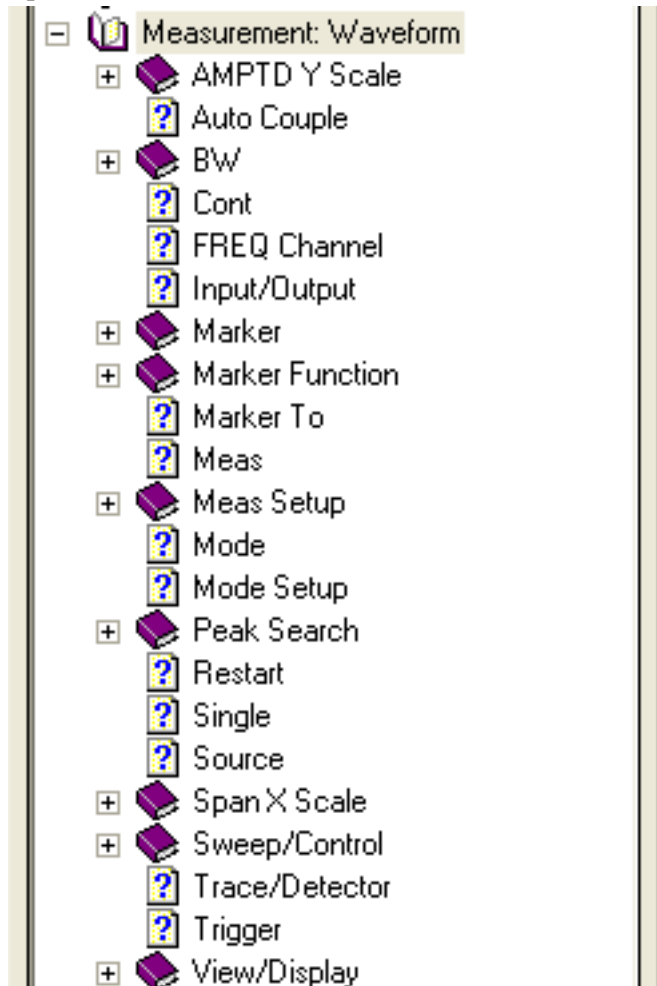


If you don't see a topic for a Front-panel key in the Measurement-specific section, then it is located in the section “[System Functions](#)” on page 122.

### Key Information for Softkeys

Information for each softkey that appears when you press a Front-panel key (or a softkey with a submenu) is listed under the entry for that key in the Help Contents. The example below shows the submenu under the **SPAN X Scale** Front-panel key in the "Waveform" Measurement, alongside the

Using Help  
How Help is Organized

actual softkeys for that menu.

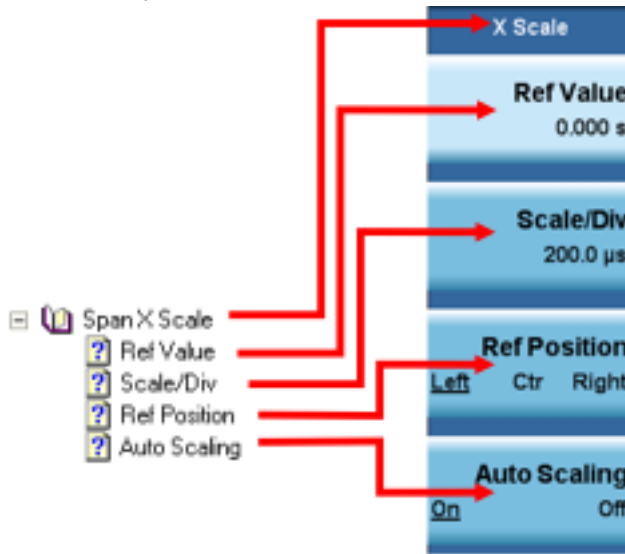

In these subsections, all softkeys are listed in the order they appear in their menu (that is, **not** in alphabetical order).

### Common Measurement Functions


This section groups together function and key information that is shared between measurements. However, there is a listing for every Front-panel key and subkey in the section for each measurement, so you will generally not need to refer to this section.

The key subsections are listed alphabetically.



## Front Panel Keys used by the Help System

The interactive Help system uses the Front-panel keys shown below.

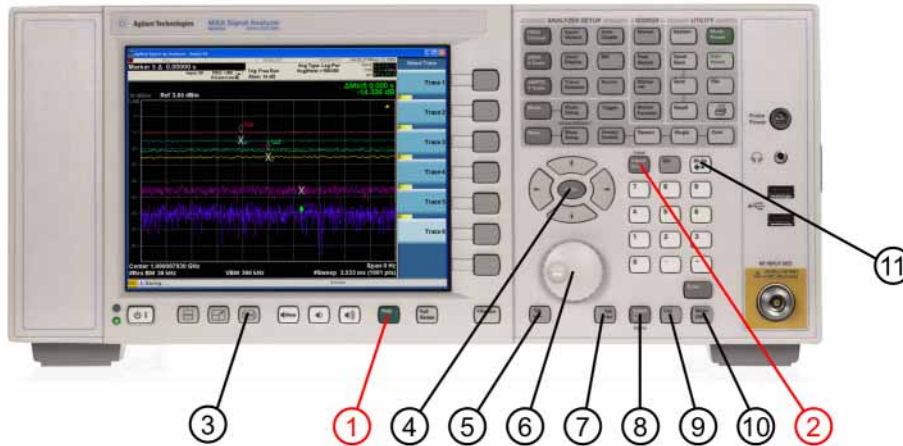


#	Item Name	Description
1	Help Key	Opens Help (displaying the topic for the last key pressed).
2	Cancel (Esc) Key	Exits Help.
3	Next Window Key	Changes the current window pane selection.
4	Arrow / Enter Keys	A central <b>Enter</b> key, surrounded by four directional arrow keys. Navigates within the Help system.
5	Backward Tab Key	Moves between controls in the Help display.
6	Knob	For future use.
7	Forward Tab Key	Moves between controls in the Help display.
8	Select / Space Key	Navigates within the Help system, in conjunction with other keys.
9	Ctrl Key	Navigates within the Help system, in conjunction with other keys. See <a href="#">“Navigating Windows HTML Help (CHM) Files”</a> on page 126.
10	Alt Key	Navigates within the Help system, in conjunction with other keys. See <a href="#">“Navigating Windows HTML Help (CHM) Files”</a> on page 126.
11	Bk Sp (Backspace) Key	Acts as a "Back" key when navigating the pages of the Help system.

## Navigating Windows HTML Help (CHM) Files

### HTML Help Window Components

When the interactive Help Window is open, the Analyzer's display appears as below.

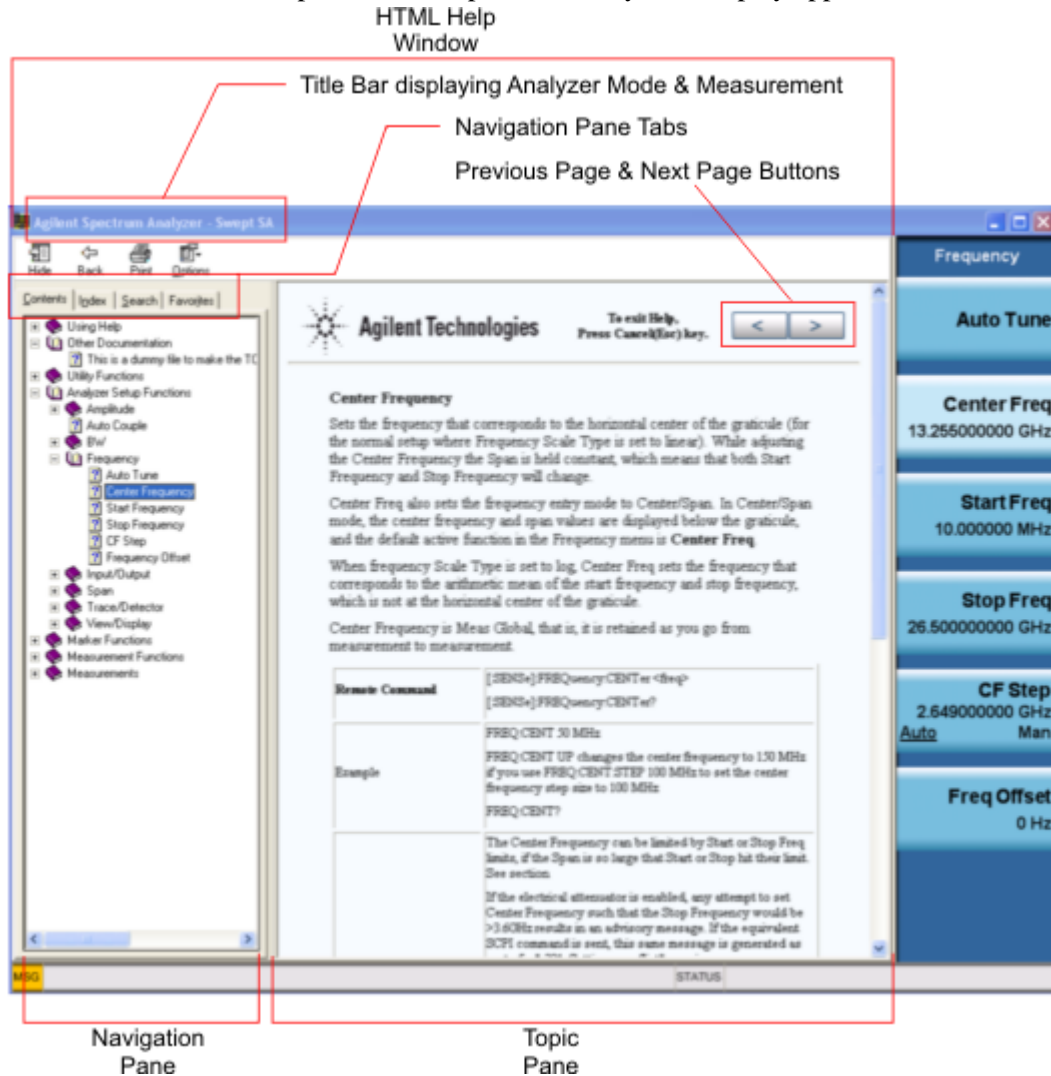

The HTML Help Window appears on top of, and to the left of, the measurement display. You can still see and use the current softkey menu when the HTML Help Window is open. However, pressing a softkey when the Help window is open displays Help for that softkey, but does **not** execute the softkey's function.

When the Help Window is open, the Analyzer retains its current Mode and Measurement, as shown in the Title Bar.

The HTML Help Window itself consists of two panes, as shown in the diagram above.

On the left is the Navigation Pane, and on the right is the Topic Pane.

## The Help Window Navigation Pane

The Navigation Pane is further divided into four tabs: Contents, Index, Search and Favorites, as shown below.



For details of how to switch between these tabs, if you don't have a mouse attached to the Analyzer, see the Section [“To Switch the Active Tab within the Navigation Pane” on page 130](#).

## The Help Window Topic Pane

This pane displays the text for the topic that you have selected. It also contains clickable **Previous Page** and **Next Page** buttons (as shown below), which can be used to move to the previous or next page in the Help file.



## Basic Help Window Operations

This topic contains the following sections:

[“Opening Help” on page 127](#)

[“Getting Help for a Specific Key” on page 127](#)

[“Closing the Help Window” on page 128](#)

[“Viewing Help on How to Use Help” on page 128](#)

[“Exiting Help on How to Use Help” on page 128](#)

To locate the keys mentioned in this section, see [“Front Panel Keys used by the Help System” on page 125](#).

## Opening Help

To access the Help system, press the green **Help** key below the front panel display (shown below) while an Agilent application is running.



Note that the softkeys remain visible when the Help window is open.

## Getting Help for a Specific Key

1. If the Help window **is** already open, press the desired key. The relevant Help topic appears.

Note that the function normally invoked by the key is **not** executed when the key is pressed with the Help window open. If you want to execute the key's function, first close Help by pressing the **Cancel (Esc)** key (as described in [“Closing the Help Window” on page 128](#)), then press the key, before opening Help again (if required).

2. If the Help window is **not** already open, press the desired key (which executes the key's function), then press the **Help** key to display the relevant Help page. Help is available for all softkeys, and for

## Using Help

### Navigating Windows HTML Help (CHM) Files

all the Front-panel keys listed under the "System Functions" and "Measurement" sections.

For details of how to navigate within the panes of the Help window, see “[Navigating Windows HTML Help \(CHM\) Files](#)” on page 126.

### Closing the Help Window

To close the Help window, and return to the measurement application, press the **Cancel (Esc)** key (depicted below).



### Viewing Help on How to Use Help

With the Help window open, press the green **Help** key again.

The "Using Help" page appears, as shown below.



### Exiting Help on How to Use Help

See the Section “[To Go Back or Forward: display the Previously-viewed or Next-viewed Topic in the Topic Pane](#)” on page 132 for details of several methods to accomplish this.

### Navigating the Help Window

The way you navigate around the HTML Help Window depends on whether you have a mouse and keyboard attached to your Analyzer:


- If you have a mouse and keyboard attached, see the Section “[Navigating the Help Window with a Mouse](#)” on page 128.
- If you don't have a mouse and keyboard attached, see the Section “[Navigating the Help Window Without a Mouse](#)” on page 130.

### Navigating the Help Window with a Mouse

When the HTML Help window is open, you can point-and-click to navigate, as you would when using Help for any Microsoft Windows computer application. The basic navigational features the Help systems of all X-Series Analyzers are as follows:

- If necessary, press the green **Help** key on the Front Panel, as described in “[Opening Help](#)” on page 127, to open the HTML Help window.

- Choose the desired topic from the list under the Contents Tab of the HTML Help Window's Navigation Pane, then click on the topic title to display the first page of the topic.
- To expand the listing of a topic, click on the + icon to the left of the topic's book icon, as shown below. A list of subtopics and pages appears.

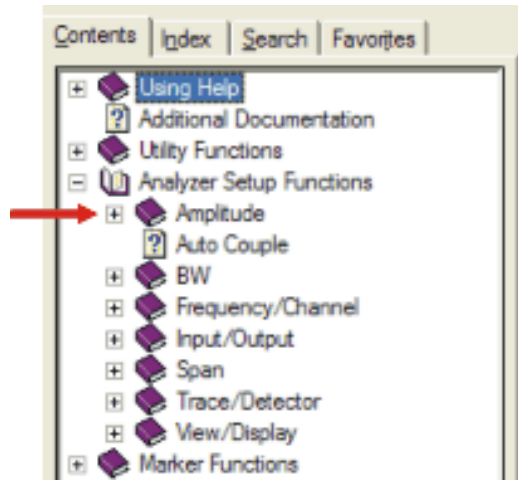


- To move to the Next or Previous Page within the Topic Pane, click the **Next Page** or **Previous Page** Keys (at the top right of the **Topic** Pane), as shown below.



**Searching for a Help Topic** If you also have a keyboard attached to the Analyzer, you can use the Help system's full-text search feature to locate help for any topic, by typing in a key name, a topic name, or any other desired text.

Select the "Search" tab of the Help window's Navigation Pane, then use the following procedure:

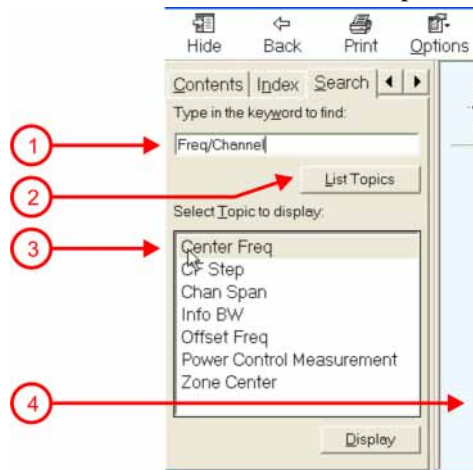

1. Type the desired topic name into the Search window as shown in the diagram above. Note that the text search is **not** case-sensitive.
2. Click on the **List Topics** button.
3. **Either:**
  - Double-click on the desired topic in the list,

**Or:**

Click on the desired topic to select it, then click the **Display** button beneath the list.

4. The topic is then displayed in the Topic Pane (right-hand side of display).

### **Navigating the Help Window Without a Mouse**

Most features of the Help system can be accessed and navigated without the necessity to attach a mouse or keyboard to the Analyzer. There are, however, a few exceptions to this rule, which are noted in the Section [“Functions that cannot be used without a Mouse and Keyboard” on page 133](#).

For information about how to perform common tasks in the Help system, click on one of the following links:

[“To Toggle the Focus between the Navigation Pane and the Topic Pane” on page 130](#)

[“To Switch the Active Tab within the Navigation Pane” on page 130](#)

[“To Scroll up or down the list of Topics within the Contents or Index Tabs of the Navigation Pane” on page 131](#)

[“To Expand or Collapse a selected topic within the Contents Tab of the Navigation Pane” on page 131](#)

[“To Display a selected Help topic in the Topic Pane from the Contents Tab of the Navigation Pane” on page 131](#)

[“To Display a Help topic in the Topic Pane from the Index Tab of the Navigation Pane” on page 131](#)

[“To Scroll up or down within a topic in the Topic Pane” on page 131](#)

[“To Go to the Next or Previous Page in the Topic Pane” on page 132](#)

[“To Go Back or Forward: display the Previously-viewed or Next-viewed Topic in the Topic Pane” on page 132](#)

[“To Scroll horizontally or vertically within the Contents Tab of the Navigation Pane” on page 133](#)

[“To Print the topic currently displayed” on page 133](#)

To locate all the keys mentioned in this section, see [“Front Panel Keys used by the Help System” on page 125](#).

**To Toggle the Focus between the Navigation Pane and the Topic Pane** Press the **Next Window** key.



**To Switch the Active Tab within the Navigation Pane** Perform this procedure to display either the Contents, Index, Search or Favorites tab of the Help window’s Navigation Pane.

Hold down the **Ctrl** key, then press either the **Forward Tab** key, or the **Backward Tab** key.



**To Scroll up or down the list of Topics within the Contents or Index Tabs of the Navigation Pane**

With the focus in the Navigation Pane, press the **Up Arrow** or **Down Arrow** keys.



**To Expand or Collapse a selected topic within the Contents Tab of the Navigation Pane** With the focus in the Navigation Pane, press the **Right Arrow** key to **expand** the selected topic:



Or press the **Left Arrow** key to **collapse** the selected topic.



**To Display a selected Help topic in the Topic Pane from the Contents Tab of the Navigation Pane**

With the focus in the Contents Tab of the Navigation Pane, press the **Enter** key. If the selected topic was not already expanded, it expands in the Navigation Pane.




**To Display a Help topic in the Topic Pane from the Index Tab of the Navigation Pane** With the focus in the Index Tab of the Navigation Pane, press the **Enter** key.



**To Scroll up or down within a topic in the Topic Pane** With the focus in the Topic Pane, press either

Using Help  
Navigating Windows HTML Help (CHM) Files

the **Up Arrow** key or **Down Arrow** key.

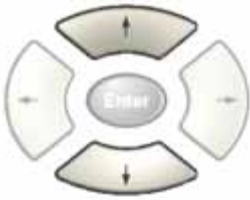

**To Go to the Next or Previous Page in the Topic Pane** With the focus in the Topic Pane, press either **Forward Tab** or **Backward Tab** keys



to select the **> (Next Page)** key at the top right of the Pane, if you want to go to the **next** page,



or select the **< (Previous Page)** key at the top right of the Pane, if you want to go to the **previous** page.




Press **Enter**.



**To Go Back or Forward: display the Previously-viewed or Next-viewed Topic in the Topic Pane**

To go **back**, either:

Hold down the **Alt** key, then press the **Left Arrow** key.

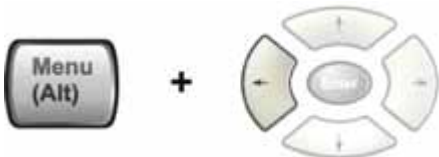


**Or:**

Press the **Bk Sp** key.




To go **forward**, hold down the **Alt** key, then press the **Right Arrow** key.

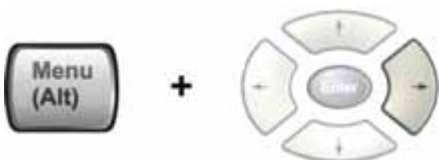




(The "Go Forward" operation has no effect unless there have been previous "Go Back" operations)

**To Scroll horizontally or vertically within the Contents Tab of the Navigation Pane** To scroll **horizontally**: with the focus in the Contents Tab of the Navigation Pane, hold down the **Ctrl** key, then press either the **Left Arrow** or **Right Arrow** keys.

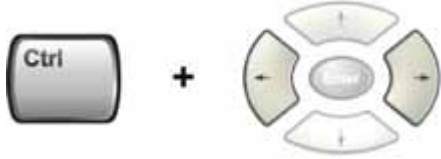

To scroll **vertically**: with the focus in the Contents Tab of the Navigation Pane, hold down the **Ctrl** key, then press either the **Up Arrow** or **Down Arrow** keys.

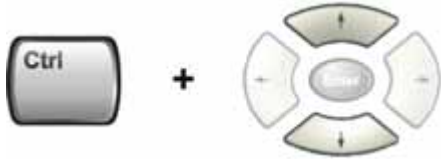

**To Print the topic currently displayed** Press the Front-panel **Print** key



**Functions that cannot be used without a Mouse and Keyboard** The following parts of the HTML Help System **cannot** easily be used without attaching a mouse and keyboard to the Analyzer.

- The menu options at the top of the Help Window, consisting of: **Hide, Back, Print** and **Options**.
- The functionality of the Search Tab of the Navigation Pane.
- The functionality of the Favorites Tab of the Navigation Pane.

---

## Navigating Acrobat (PDF) Files

---

**IMPORTANT** To navigate PDF files effectively, you must attach a mouse and keyboard to the Analyzer.


If it is not possible to attach a mouse and keyboard to the Analyzer, you should copy the PDF file to a separate computer, then open it on that computer. Every PDF file that is present on the Analyzer's hard disk can also be found on the Documentation CD shipped with the Analyzer. For details, see ["Copying the Acrobat \(PDF\) Files" on page 120.](#)

---

### Adobe Reader Window

When an Adobe Acrobat (PDF) file is open and being viewed, the Analyzer's display appears as below.

Note that, unlike the HTML Help Window, the Acrobat Reader Window is **not** embedded in the Analyzer's Application window. It is a separate window, which can be resized, moved and closed independently of the Application window.

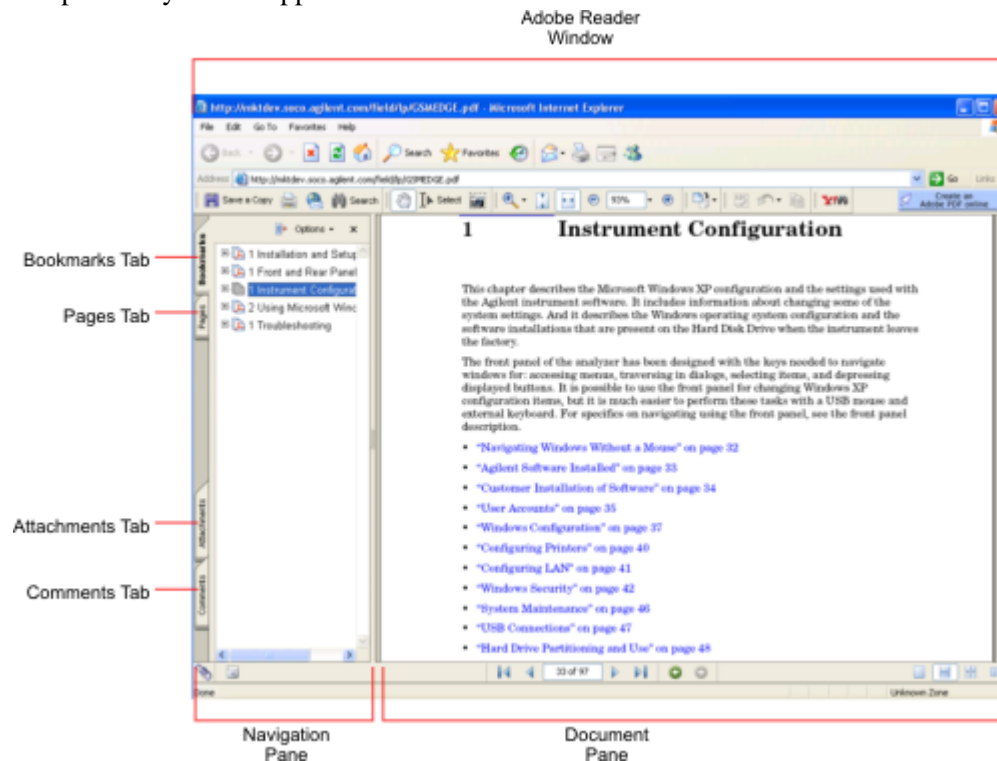

The Adobe Reader Window itself consists of two panes, as shown in the diagram above.

On the left is the Navigation Pane (which may be hidden), and on the right is the Document Pane.

The Navigation Pane is further subdivided into four tabs: Bookmarks, Pages, Attachments and Comments. Typically, PDF files supplied with the Agilent X-Series Analyzers contain useful content only under the Bookmarks and Pages Tabs: the Attachments and Comments Tabs are not used.


## Navigating the Acrobat Reader Window

The online Help for Adobe Reader provides detailed information on how to use the Reader. To access the online Help, do the following:

- With the Adobe Reader window open, click **Help, Adobe Reader Help** in the menu at the top of the screen. This opens the Help window on top of the document window.
- To close the Help window, **either** click the Red **X** at the top right of the window, **or** right-click



anywhere in the title bar, then select **Close** from the popup menu.

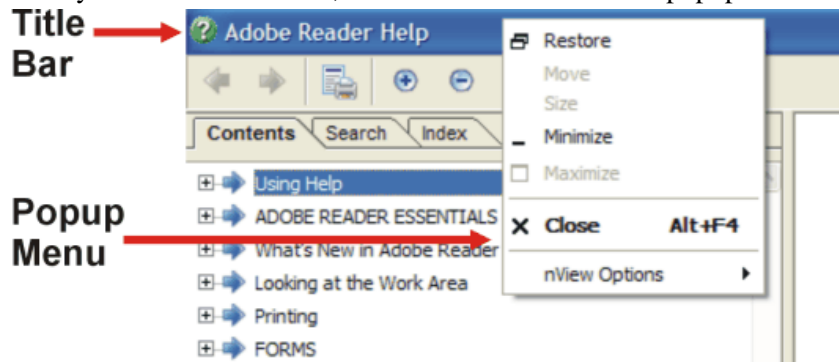

## Printing Acrobat Files

---

**NOTE** The driver for the appropriate printer must be installed on the Analyzer's hard disk before any file can be printed.

---

To print all or part of an open Acrobat file, do the following.

1. **Either**,
  - a. click on the **Print** icon in the Acrobat Reader toolbar,



- b. **or**, select **File > Print** from the menu.



---

## Terms Used in This Documentation

Many special terms are used throughout this documentation. Please refer to the "Getting Started Guide" for detailed explanations of all these terms.

The Section below provides a brief description of special terms used in the Key parameter tables.

### Terms used in Key Parameter Tables

The following terms are used in the parameter tables for each front-panel key or softkey. However, a particular key description may not use all the terms listed.

<b>Term</b>	<b>Meaning</b>
Default Unit	The default measurement unit of the setting.
Default Terminator	Indicates the units that will be attached to the numeric value that you have entered. This default will be used from the front panel, when you terminate your entry by pressing the <b>Enter</b> key, rather than selecting a units key. This default will be used remotely when you send the command without specifying any units after your value(s).
Dependencies/ Couplings	Some commands may be unavailable when other parameters are set in certain ways. If applicable, any such limitations are described here.
Example	Provides command examples using the indicated remote command syntax.
Factory Preset	Describes the function settings after a <b>Factory Preset</b> .
Key Path	The sequence of Front-panel keys that accesses the function or setting.
Knob Increment/Decrement	The numeric value of the minimum increment or decrement that is applied when turning the thumb wheel knob.
Max	The Maximum numerical value that the setting can take.
Min	The Minimum numerical value that the setting can take.
Meas Global	The functionality described is the same in all measurements.
Meas Local	The functionality described is only true for the measurement selected.
Mode Global	The functionality described is the same for all modes.
Preset	In some cases, a Preset operation changes the status of a parameter. If the operation of the key specified is modified by a Preset operation, the effect is described here.
Range	Describes the range of the smallest to largest values to which the function can be set. If you try to set a value below the minimum value, the analyzer defaults to the minimum value. If you try to set a value above the maximum value, the analyzer defaults to the maximum value.
Remote Command	Shows the syntax requirements for each SCPI command.

<b>Term</b>	<b>Meaning</b>
Remote Command Notes	Additional notes regarding Remote Commands.
Resolution	Specifies the smallest change that can be made to the numeric value of a parameter.
SCPI Status Bits/OPC Dependencies	Pressing certain keys may affect one or more status bits. If applicable, details are given here.
State Saved	Indicates what happens to a particular function when the Analyzer state is saved (either to an external memory device or the internal D: drive). It also indicates whether the current settings of the function are maintained if the Analyzer is powered on or preset using <b>Power On Last State</b> or <b>User Preset</b> .

## Context Sensitive Help not Available

You have been directed to this page because interactive help for the key you selected is not available.




The following information may help you to find related topics of interest:

- If your Analyzer has an attached Mouse and Keyboard, see the Section [“Searching for a Help Topic” on page 129](#).
- If your Analyzer does **not** have an attached Mouse and Keyboard, see the Section [“Finding a Topic without a Mouse and Keyboard” on page 139](#) below.
- If you want to learn how to select on-page links **without** a Mouse attached to your Analyzer, see the Section [“Selecting a Hyperlink without a Mouse” on page 140](#) below.

**TIP** If you want to understand the organization of Help, see the Section [“How Help is Organized” on page 122](#).





### Finding a Topic without a Mouse and Keyboard

Follow this procedure when you want to display a different Help topic by selecting it from the Contents tab of the Help window’s Navigation Pane, but you do not have a mouse attached to the Analyzer.

Perform this action:	Using these keys:
<p>1. If necessary, toggle the focus between the Contents tab of the Navigation Pane (left side of display) and the Topic Pane (right side of display) by pressing the <b>Next Window</b> key.</p> <p>Ensure that the focus is in the <b>Contents tab of the Navigation Pane</b>.</p>	
<p>2. Move up or down the Contents list, by pressing the <b>Up Arrow</b> or <b>Down Arrow</b> keys. Topics become highlighted upon selection.</p>	
<p>3. Display the selected topic, by pressing the <b>Enter</b> key.</p>	

## Selecting a Hyperlink without a Mouse

Follow this procedure when you want to select and follow a hyperlink on a Help page, but you do not have a mouse attached to the Analyzer.

Perform this action:	Using these keys:
<p>1. If necessary, toggle the focus between the Contents tab of the Navigation Pane (left side of display) and the Topic Pane (right side of display) by pressing the <b>Next Window</b> key.</p> <p>Ensure that the focus is in the <b>Topic Pane</b>.</p>	
<p>2. Move from link to link in the Topic Pane (right side of display) by pressing the <b>Forward Tab</b> and <b>Backward Tab</b> keys. Links become highlighted upon selection.</p> <p>NOTE: When a Help page is first displayed, no link is selected. Clicking the <b>Forward Tab</b> key once selects the <b>Previous Page</b> key. Clicking the <b>Forward Tab</b> key a second time selects the <b>Next Page</b> key. Clicking the <b>Forward Tab</b> key for a third time selects the first hyperlink on the page.</p> <p>It is sometimes difficult to see the highlighting of the <b>Previous</b> and <b>Next Page</b> keys.</p>	<p>Use the <b>Forward</b> and <b>Backward Tab</b> keys</p>  <p>to select the <b>Previous</b> and <b>Next Page</b> keys</p> 
<p>3. When you have selected the desired link, activate it by pressing the <b>Enter</b> key.</p>	



The X-Series signal analyzer measures and monitors complex RF and microwave signals. Analog baseband analysis is available on MXA. The analyzer integrates traditional spectrum measurements with advanced vector signal analysis to optimize speed, accuracy, and dynamic range. The analyzer has Windows XP Pro<sup>®</sup> built in as an operating system, which expands the usability of the analyzer.

With a broad set of applications and demodulation capabilities, an intuitive user interface, outstanding connectivity and powerful one-button measurements, the analyzer is ideal for both R&D and manufacturing engineers working on cellular, emerging wireless communications, general purpose, aerospace and defense applications.

## Installing Application Software

When you want to install a measurement application after your initial hardware purchase, you actually only need to license it. All of the available applications are loaded in your analyzer at the time of purchase.

So when you purchase an application, you will receive an entitlement certificate that is used to obtain a license key for that particular measurement application. Enter the license key that you obtain into the Signal Analyzer to activate the new measurement application. See below for more information.

For the latest information on Agilent Signal Analyzer measurement applications and upgrade kits, visit the following internet URL.

[http://www.agilent.com/find/sa\\_upgrades](http://www.agilent.com/find/sa_upgrades)

### Viewing a License Key

Measurement personalities purchased with your instrument have been installed and activated at the factory before shipment. The instrument requires a unique **License Key** for every measurement application purchased. The license key is a hexadecimal string that is specific to your measurement application, instrument model number and serial number. It enables you to install, or reactivate that particular application.

Press **System, Show, System** to display which measurement applications are currently licensed in your analyzer.

Go to the following location to view the license keys for the installed measurement applications:

C:\Programing Files\Agilent\Licensing

---

<b>NOTE</b>	You may want to keep a copy of your license key in a secure location. You can print out a copy of the display showing the license numbers to do this. If you should lose your license key, call your nearest Agilent Technologies service or sales office for assistance.
-------------	---

---

### Obtaining and Installing a License Key

If you purchase an additional application that requires installation, you will receive an “Entitlement Certificate” which may be redeemed for a license key for one instrument. Follow the instructions that accompany the certificate to obtain your license key.

Installing a license key for the selected application can be done automatically using a USB memory device. To do this, you would put the license file on the USB memory device at the root level. Follow the instructions that come with your software installation kit.

Installing a license key can also be done manually using the license management application in the instrument. It is found through the instrument front panel keys at **System, Licensing. . .**, or internally at C:\Programming Files\Agilent\Licensing.

---

**NOTE** You can also use these procedures to reinstall a license key that has been accidentally deleted, or lost due to a memory failure.

---

## Missing and Old Measurement Application Software

All the software applications were loaded at the time of original instrument manufacture. It is a good idea to regularly update your software with the latest available version. This assures that you get any improvements and expanded functionality that is available.

Because the software was loaded at the initial purchase, there may be additional measurement applications that are now available. If the application you are interested in licensing is not available, you will need to do a software update. (Press **System, Show, System.**)

Check the Agilent internet website for the latest software versions available for downloading:

[http://www.agilent.com/find/pxa\\_software](http://www.agilent.com/find/pxa_software)  
[http://www.agilent.com/find/mxa\\_software](http://www.agilent.com/find/mxa_software)  
[http://www.agilent.com/find/exa\\_software](http://www.agilent.com/find/exa_software)

You must load the updated software package into the analyzer from a USB drive, or directly from the internet. An automatic loading program is included with the files.

## X-Series Options and Accessories

“MXA Instrument Options” on page 144

“MXA Accessories” on page 145

“EXA Instrument Options” on page 145

“EXA Accessories” on page 146

“Advanced Measurement Application Software” on page 146

### MXA Instrument Options

Product	Description
N9020A	MXA Signal Analyzer
N9020A-503	Frequency range from 20 Hz to 3.6 GHz
N9020A-508	Frequency range from 20 Hz to 8.4 GHz
N9020A-513	Frequency range from 20 Hz to 13.6 GHz
N9020A-526	Frequency range from 20 Hz to 26.5 GHz
N9020A-B25	Analysis bandwidth, 25 MHz
N9020A-BBA	Analog baseband IQ inputs
N9020AK-SU1	Baseband bandwidth from 25 to 40 MHz (upgrade)
N9020AK-PC2	Dual-Core CPU Processor with Removable Hard Drive (upgrade)
N9020AK-ALL	Amplitude Corrections and Limit Lines Features (upgrade)
N9020A-SSD	Removable Solid State Drive Substitution
N9020A-HDD	Additional Removable Hard Drive (160 GB)
N9020A-PFR	Precision frequency reference
N9020A-PRC	Portable configuration
N9020A-EA3	Electric attenuator, 3.6 GHz
N9020A-EMC	Precompliance EMI Measurement
N9020A-S40	Baseband analysis bandwidth, 40 MHz/channel
N9020A-P03	Preamplifier, 3.6 GHz
N9020A-P08	Preamplifier, 8.4 GHz
N9020A-P13	Preamplifier, 13.6 GHz
N9020A-P26	Preamplifier, 26.5 GHz

### MXA Accessories

Product	Description
N9020A-MLP	75 ohm minimum loss pad
N9020A-EFM	USB flash drive
N9020A-DVR	DVD-ROM drive
N9020A-MSE	Mouse, USB interface
N9020A-KYB	Keyboard, USB interface
N9020A-HTC	Hard transit case
N9020A-1CP	Rackmount kit with handles
N9020A-1CN	Front handle kit
N9020A-1CM	Rackmount kit
N9020A-1CR	Rack slide kit
N9020A-UK6	Commercial Calibration Certificate with Test Data
N9020A-1A7	ISO 17025 Compliant Calibration
N9020A-A6J	ANSI Z540 Compliant Calibration

### EXA Instrument Options

Product	Description
N9010A	EXA Signal Analyzer (3.6, 7.0, 13.6, and 26.5 GHz)
N9010A-503	Frequency range from 9 kHz to 3.6 GHz
N9010A-507	Frequency range from 9 kHz to 7.0 GHz
N9010A-513	Frequency range from 9 kHz to 13.6 GHz
N9010A-526	Frequency range from 9 kHz to 26.5 GHz
N9010A-B25	Analysis bandwidth, 25 MHz
N9010A-FSA	Fine step attenuator
N9010A-ALL	Amplitude Corrections and Limit Lines Features (upgrade)
N9010A-SSD	Removable Solid State Drive Substitution
N9010A-PC2	Dual-Core Processor with Removable Hard Drive
N9010A-HDD	Additional Removable Hard Drive (160 GB)
N9010A-CPU	Instrument Security, Additional CPU & HDD
N9010A-PFR	Precision frequency reference
N9010A-EA3	Electric attenuator, 3.6 GHz

Product	Description
N9010A-EMC	Precompliance EMI Measurement
N9010A-P03	Preamplifier, 3.6 GHz

**EXA Accessories**

Product	Description
N9010A-PRC	Portable Configuration
N9010A-MLP	Minimum loss pad, 50 to 75 ohms
N9010A-EFM	USB flash drive
N9010A-DVR	DVD-ROM/CD-R/RW drive
N9010A-MSE	Mouse, USB interface
N9010A-KYB	Keyboard, USB interface
N9010A-HTC	Hard transit case
N9010A-1CP	Rackmount kit with handles
N9010A-1CN	Front handle kit
N9010A-1CM	Rackmount kit
N9010A-1CR	Rack slide kit
N9010A-UK6	Commercial Calibration Certificate with Test Data
N9010A-1A7	ISO 17025 Compliant Calibration
N9010A-A6J	ANSI Z540 Compliant Calibration

**Advanced Measurement Application Software**

For a current list of application software, go to the following URLs.

**For PXA,**

<http://www.agilent.com/find/pxa/options>

Select the **PXA N9030A, Options and Measurement Applications** link on the top of the page.

**For MXA,**

<http://www.agilent.com/find/mxa/options>


Select the **MXA N9020A, Options and Measurement Applications** link on the top of the page.

**For EXA,**

<http://www.agilent.com/find/exa/options>

Select the **EXA N9010A, Options and Measurement Applications** link on the top of the page.

## Front-Panel Features

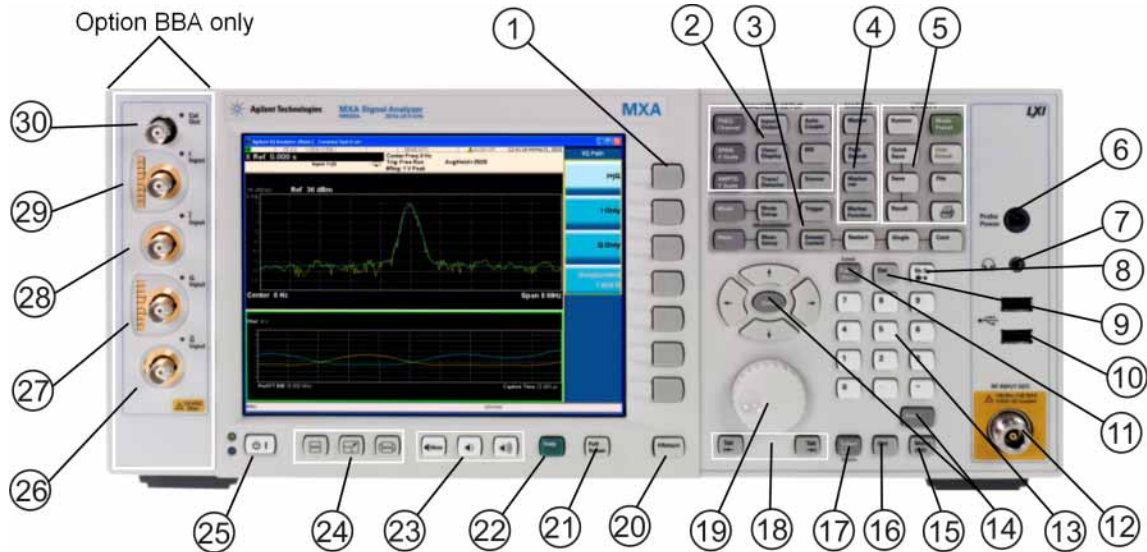

Item		Description
#	Name	
1	Menu Keys	Key labels appear to the left of the menu keys to identify the current function of each key. The displayed functions are dependent on the currently selected Mode and Measurement, and are directly related to the most recent key press.
2	Analyzer Setup Keys	These keys set the parameters used for making measurements in the current Mode and Measurement.
3	Measurement Keys	These keys select the Mode, and the Measurement within the mode. They also control the initiation and rate of recurrence of measurements.
4	Marker Keys	Markers are often available for a measurement, to measure a very specific point/segment of data within the range of the current measurement data.
5	Utility Keys	These keys control system-wide functionality such as: <ul style="list-style-type: none"> <li>• instrument configuration information and I/O setup,</li> <li>• printer setup and printing,</li> <li>• file management, save and recall,</li> <li>• instrument presets.</li> </ul>
6	Probe Power	Supplies power for external high frequency probes and accessories.
7	Headphones Output	Headphones can be used to hear any available audio output.
8	Back Space Key	Press this key to delete the previous character when entering alphanumeric information. It also works as the Back key in Help and Explorer windows.

About the Analyzer  
**Front-Panel Features**

Item		Description
#	Name	
9	Delete Key	Press this key to delete files, or to perform other deletion tasks.
10	USB Connectors	Standard USB 2.0 ports, Type A. Connect to external peripherals such as a mouse, keyboard, DVD drive, or hard drive.
11	Local/Cancel/(Esc) Key	<p>If you are in remote operation, Local:</p> <ul style="list-style-type: none"> <li>• returns instrument control from remote back to local (the front panel).</li> <li>• turns the display on (if it was turned off for remote operation).</li> <li>• can be used to clear errors. (Press the key once to return to local control, and a second time to clear error message line.)</li> </ul> <p>If you have not already pressed the units or Enter key, Cancel exits the currently selected function without changing its value.</p> <p>Esc works the same as it does on a PC keyboard. It:</p> <ul style="list-style-type: none"> <li>• exits Windows dialogs</li> <li>• clears errors</li> <li>• aborts printing</li> <li>• cancels operations.</li> </ul>
12	RF Input	Connector for inputting an external signal. Make sure that the total power of all signals at the analyzer input does <b>not</b> exceed +30 dBm (1 watt).
13	Numeric Keypad	Enters a specific numeric value for the current function. Entries appear on the upper left of the display, in the measurement information area.
14	Enter and Arrow Keys	<p>The Enter key terminates data entry when either no unit of measure is needed, or you want to use the default unit.</p> <p>The arrow keys:</p> <ul style="list-style-type: none"> <li>• Increment and decrement the value of the current measurement selection.</li> <li>• Navigate help topics.</li> <li>• Navigate, or make selections, within Windows dialogs.</li> <li>• Navigate within forms used for setting up measurements.</li> <li>• Navigate within tables.</li> </ul> <p><b>NOTE</b> The arrow keys cannot be used to move a mouse pointer around on the display.</p>
15	Menu/ (Alt) Key	Alt works the same as a PC keyboard. Use it to change control focus in Windows pull-down menus.
16	Ctrl Key	Ctrl works the same as a PC keyboard. Use it to navigate in Windows applications, or to select multiple items in lists.
17	Select / Space Key	Select is also the Space key and it has typical PC functionality. For example, in Windows dialogs, it selects files, checks and unchecks check boxes, and picks radio button choices. It opens a highlighted Help topic.
18	Tab Keys	Use these keys to move between fields in Windows dialogs.
19	Knob	Increments and decrements the value of the current active function.
20	Return Key	Exits the current menu and returns to the previous menu. Has typical PC functionality.



Item		Description
#	Name	
21	Full Screen Key	Pressing this key turns off the softkeys to maximize the graticule display area. Press the key again to restore the normal display.
22	Help Key	Initiates a context-sensitive Help display for the current Mode. Once Help is accessed, pressing a front panel key brings up the help topic for that key function.
23	Speaker Control Keys	Enables you to increase or decrease the speaker volume, or mute it.
24	Window Control Keys	These keys select between single or multiple window displays. They zoom the current window to fill the data display, or change the currently selected window. They can be used to switch between the Help window navigation pane and the topic pane.
25	Power Standby/ On	<p>Turns the analyzer on. A green light indicates power on. A yellow light indicates standby mode.</p> <p><b>NOTE</b> The front-panel switch is a standby switch, <b>not</b> a LINE switch (disconnecting device). The analyzer continues to draw power even when the line switch is in standby.</p> <p>The main power cord can be used as the system disconnecting device. It disconnects the mains circuits from the mains supply.</p>
26	$\bar{Q}$ Input	Input port for the $\bar{Q}$ channel when in differential mode. <sup>a</sup>
27	Q Input	Input port for the Q channel for either single or differential mode. <sup>a</sup>
28	$\bar{I}$ Input	Input port for the $\bar{I}$ channel when in differential mode. <sup>a</sup>
29	I Input	Input port for the I channel for either single or differential mode. <sup>a</sup>
30	Cal Out	Output port for calibrating the I, $\bar{I}$ , Q and $\bar{Q}$ inputs and probes used with these inputs. <sup>a</sup>

- a. Status of the LED indicates whether the current state of the port is active (green) or is not in use (dark).

## Overview of key types


The keys labeled **FREQ Channel**, **System**, and **Marker Function** are all examples of front-panel keys.



Most of the dark or light gray keys access menus of functions that are displayed along the right side of the display. These displayed key labels are next to a column of keys called menu keys.


Menu keys list functions based on which front-panel key was pressed last. These functions are also dependant on the current selection of measurement application (**Mode**) and measurement (**Meas**).

If the numeric value of a menu key function can be changed, it is called an active function. The function label of the active function is highlighted after that key has been selected. For example, press **AMPTD Y Scale**. This calls up the menu of related amplitude functions. The function labeled **Ref Level** (the default selected key in the Amplitude menu) is highlighted. **Ref Level** also appears in the upper left of the display in the measurement information area. The displayed value indicates that the function is selected and its value can now be changed using any of the data entry controls.

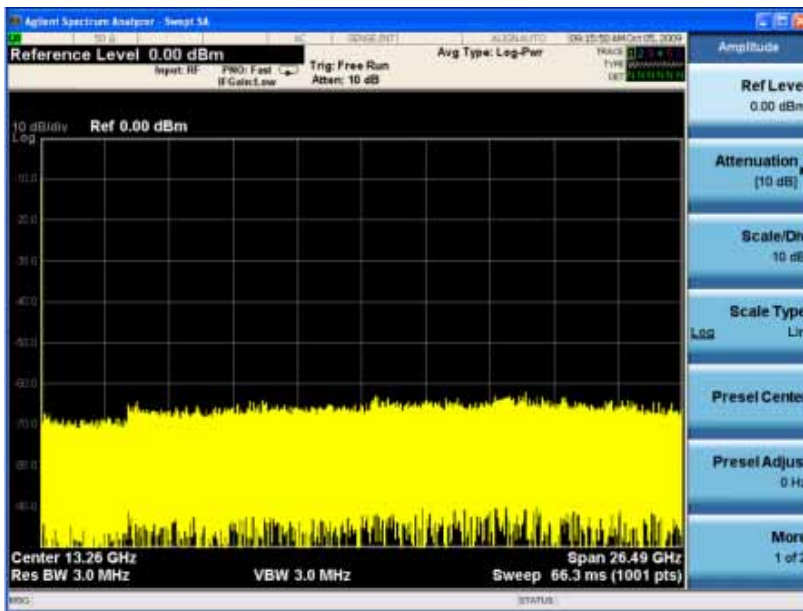


Some menu keys have multiple choices on their label, such as **On/Off**, **Auto/Man**, or **Log/Lin** (as shown above). The different choices are selected by pressing the key multiple times. For example, the Auto/Man type of key. To select the function, press the menu key and notice that Auto is underlined and the key becomes highlighted. To change the function to manual, press the key again so that Man is underlined. If there are more than two settings on the key, keep pressing it until the desired selection is underlined.

When a menu first appears, one key label is highlighted to show which key is the default selection. If you press **Marker Function**, the **Marker Function Off** key is the menu default key, and is highlighted.

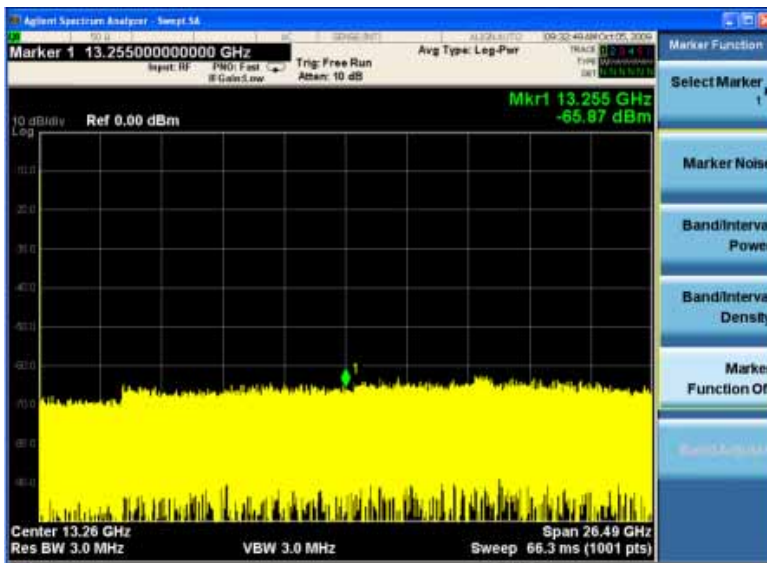




Some of the menu keys are grouped together by a yellow bar running behind the keys near the left side or by a yellow border around the group of keys. When you press a key within the yellow region, such as **Marker Noise**, the highlight moves to that key to show it has been selected. The keys that are linked are related functions, and only one of them can be selected at any one time. For example, a marker can only have one marker function active on it. So if you select a different function it turns off the previous selection. If the current menu is two pages long, the yellow bar or border could include keys on the second page of keys.

In some key menus, a key label is highlighted to show which key has been selected from multiple available choices. And the menu is immediately exited when you press one of the other keys. For example, when you press the **Select Trace** key (in the **Trace/Detector** menu), it brings up its own menu of keys. The **Trace 1** key is highlighted. When you press the **Trace 2** key, the highlight moves to that key and the screen returns to the **Trace/Detector** menu.

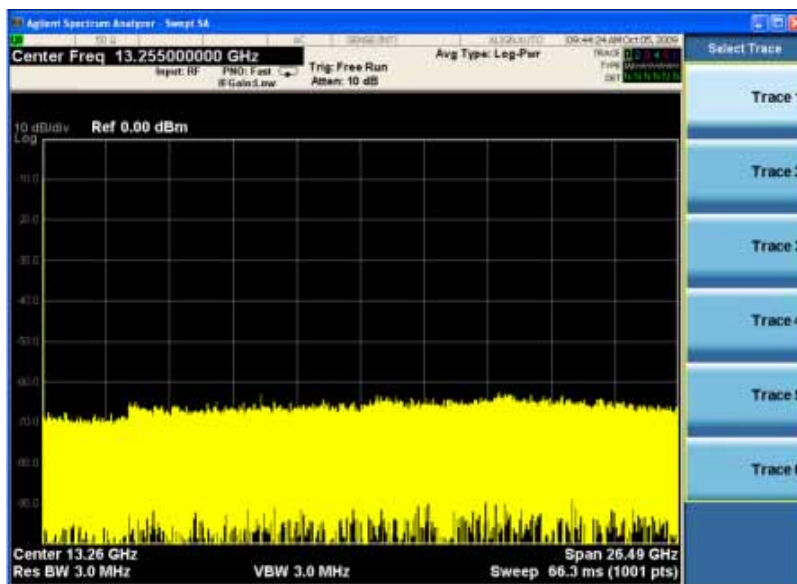


## About the Analyzer Front-Panel Features

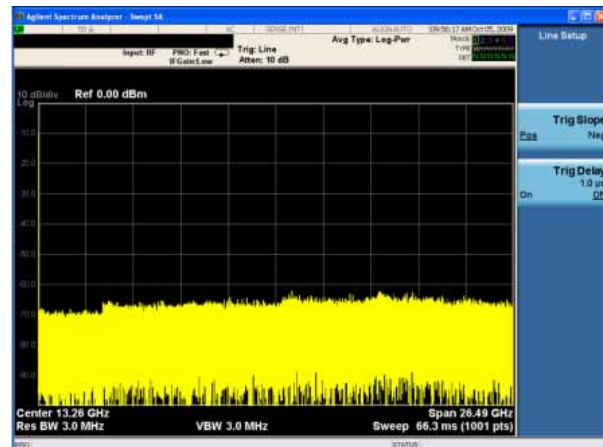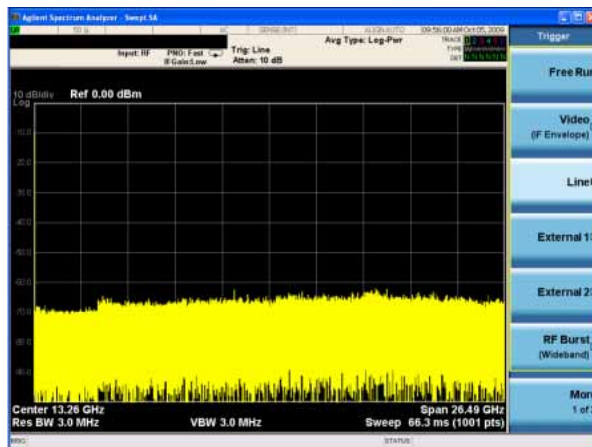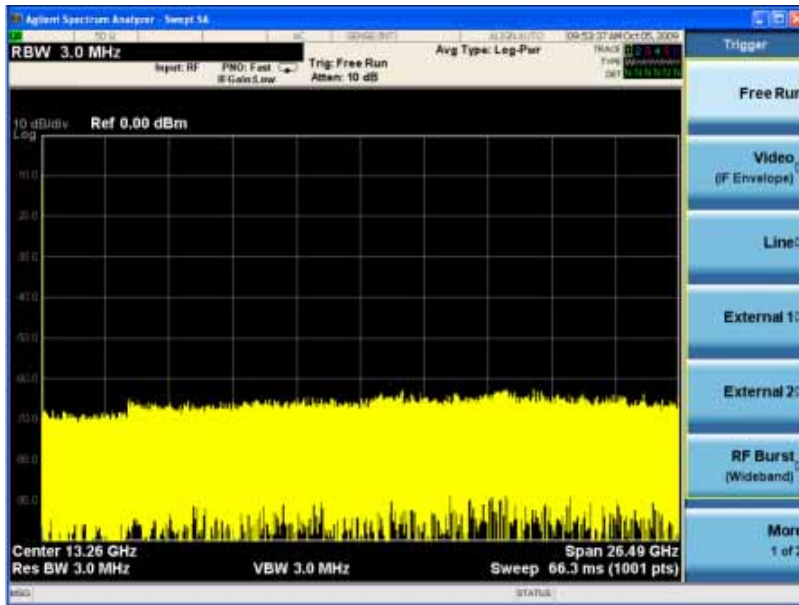

If a displayed key label shows a small solid-black arrow tip pointing to the right, it indicates that additional key menus are available. If the arrow tip is not filled in solid then pressing the key the first time selects that function. Now the arrow is solid and pressing it again brings up an additional menu of settings.



## Display Annotations

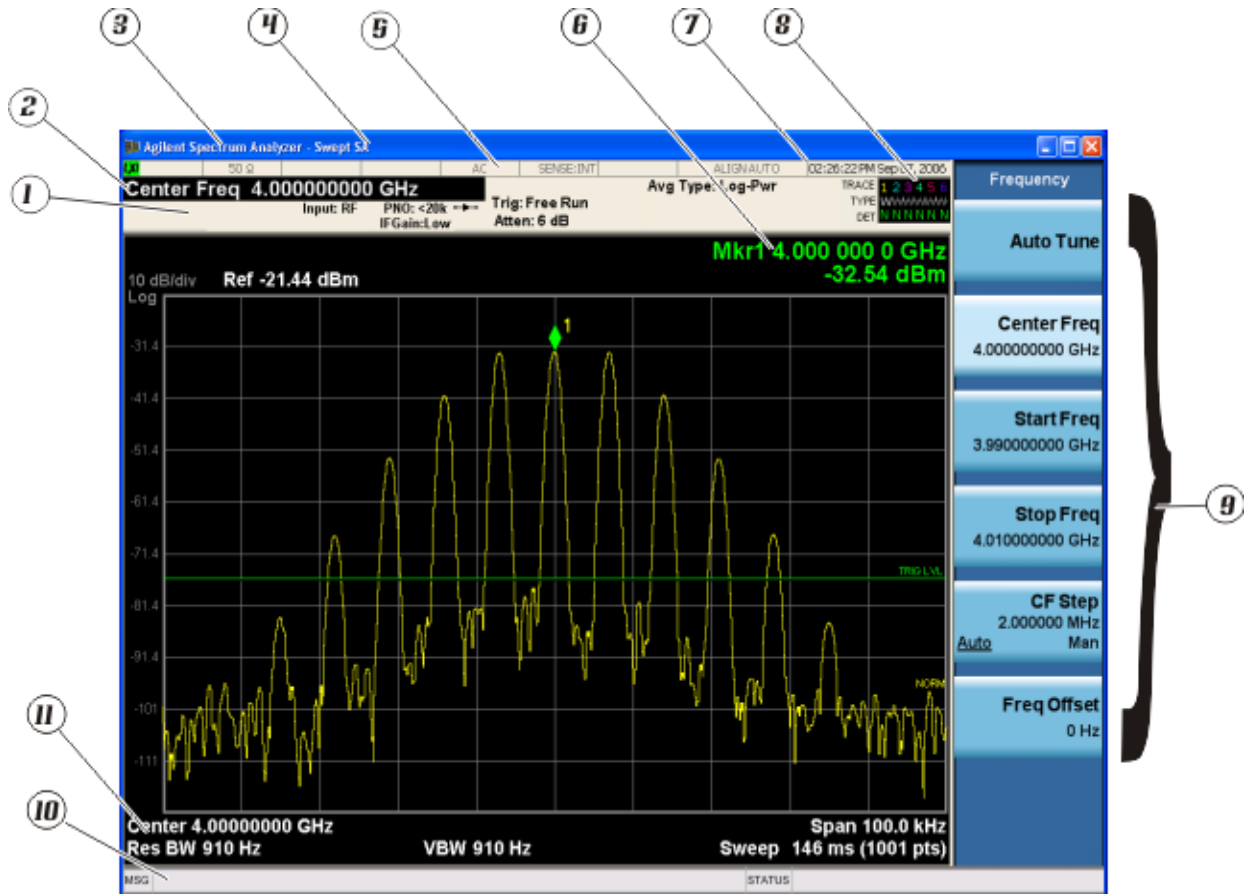This section describes the display annotation as it is on the Spectrum Analyzer Measurement Application display. Other measurement application modes have some annotation differences.



Item	Description	Function Keys
1	Measurement bar - Shows general measurement settings and information.   Indicates single/continuous measurement. Some measurements include limits that the data is tested against. A Pass/Fail indication may be shown in the lower left of the measurement bar.	All the keys in the Analyzer Setup part of the front panel.
2	Active Function (measurement bar) - when the current active function has a settable numeric value, it is shown here.	Currently selected front panel key.
3	Banner - shows the name of the selected application that is currently running.	<b>Mode</b>
4	Measurement title - shows title information for the current measurement, or a title that you created for the measurement.	<b>Meas</b> <b>View/Display, Display, Title</b>

About the Analyzer  
**Display Annotations**

Item	Description	Function Keys
5	Settings panel - displays system information that is not specific to any one application. <ul style="list-style-type: none"> <li>• Input/Output status - green LXI indicates the LAN is connected. RLTS indicate Remote, Listen, Talk, SRQ</li> <li>• Input impedance and coupling</li> <li>• Selection of external frequency reference</li> <li>• Setting of automatic internal alignment routine</li> </ul>	<b>Local and System, I/O Config</b>  <b>Input/Output, Amplitude, System</b> and others
6	Active marker frequency, amplitude or function value	<b>Marker</b>
7	Settings panel - time and date display.	<b>System, Control Panel</b>
8	Trace and detector information	<b>Trace/Detector, Clear Write (W) Trace Average (A) Max Hold (M) Min Hold (m)</b>  <b>Trace/Detector, More, Detector, Average (A) Normal (N) Peak (P) Sample (S) Negative Peak (p)</b>
9	Key labels that change based on the most recent key press.	Softkeys
10	Displays information, warning and error messages. Message area - single events, Status area - conditions	
11	Measurement settings for the data currently being displayed in the graticule area. In the example above: center frequency, resolution bandwidth, video bandwidth, frequency span, sweep time and number of sweep points.	Keys in the Analyzer Setup part of the front panel.

## Rear-Panel Features

### PXA, MXA and EXA with Option PC2



### EXA



Item		Description
#	Name	
1	EXT REF IN	Input for an external frequency reference signal:  For PXA – 1 to 50 MHz For MXA – 1 to 50 MHz For EXA – 10 MHz.
2	GPIB	A General Purpose Interface Bus (GPIB, IEEE 488.1) connection that can be used for remote analyzer operation.



About the Analyzer  
Rear-Panel Features


Item		Description
#	Name	
3	USB Connector	USB 2.0 port, Type B. USB TMC (test and measurement class) connects to an external pc controller to control the instrument and for data transfers over a 480 Mbps link.
4	USB Connectors	Standard USB 2.0 ports, Type A. Connect to external peripherals such as a mouse, keyboard, printer, DVD drive, or hard drive.
5	MONITOR	Allows connection of an external VGA monitor.
6	LAN	A TCP/IP Interface that is used for remote analyzer operation.
7	Line power input	The AC power connection. See the product specifications for more details.
8	Removable Disk Drive	Standard on PXA and MXA. Optional on EXA.
9	Digital Bus	Reserved for future use.
10	Analog Out	For PXA option YAV:  Screen Video Log Video Linear Video  For PXA option EMC:  Demod Audio
11	TRIGGER 2 OUT	A trigger output used to synchronize other test equipment with the analyzer. Configurable from the Input/Output keys.
12	TRIGGER 1 OUT	A trigger output used to synchronize other test equipment with the analyzer. Configurable from the Input/Output keys.
13	Sync	Reserved for future use.
14	TRIGGER 2 IN	Allows external triggering of measurements.
15	TRIGGER 1 IN	Allows external triggering of measurements.
16	Noise Source Drive +28 V (Pulsed)	For use with Agilent 346A, 346B, and 346C Noise Sources.
17	SNS Series Noise Source	For use with Agilent N4000A, N4001A, N4002A Smart Noise Sources (SNS).
18	10 MHz OUT	An output of the analyzer internal 10 MHz frequency reference signal. It is used to lock the frequency reference of other test equipment to the analyzer.
19	Preselector Tune Out	Reserved for future use.



Item		Description
#	Name	
20	Aux IF Out	For PXA options:  CR3 Second IF Out CRP Arbitrary IF Out ALV Log Video

## Window Control Keys

The instrument provides three front-panel keys for controlling windows. They are **Multi Window**, **Zoom**, and **Next Window**. These are all “immediate action” keys.

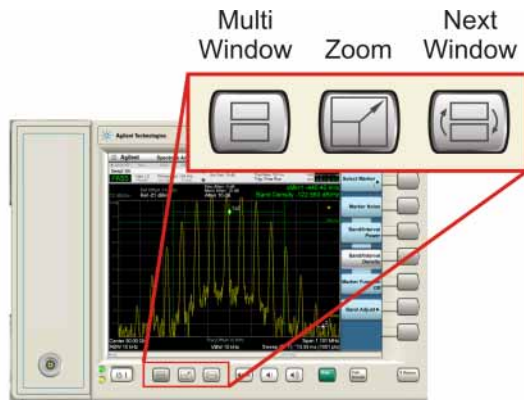

### Multi-Window

The **Multi Window** front-panel key is not used at this time. It is there to support future functionality.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Zoom

Zoom is a toggle function. Pressing once Zooms the selected window; pressing again un-zooms.

When Zoom is on for a window, that window will get the entire primary display area. The zoomed window, since it is the selected window, is outlined in green.

Zoom is local to each Measurement. Each Measurement remembers its Zoom state. The Zoom state of each Measurement is part of the Mode’s state.

---

**NOTE** Data acquisition and processing for the other windows continues while a window is zoomed, as does all SCPI communication with the other windows.

---

<b>Remote Command:</b>	:DISPlay:WINDow:FORMat:ZOOM
<b>Remote Command:</b>	:DISPlay:WINDow:FORMat:TILE
Example:	:DISP:WIND:FORM:ZOOM sets zoomed :DISP:WIND:FORM:TILE sets un-zoomed
Preset:	TILE

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

## Next Window

Selects the next window of the current view.

When this key is selected in Help Mode, it toggles focus between the table of contents window and the topic pane window.

<b>Remote Command:</b>	:DISPlay:WINDow[:SElect] <number> :DISPlay:WINDow[:SElect]?
Example:	:DISP:WIND 1
Preset:	1
Min:	1
Max:	If <number> is greater than the number of windows, limit to <number of windows>
Initial S/W Revision:	Prior to A.02.00

## Selected Window

One and only one window is always selected. The selected window has the focus and all key presses are going to that window.

The selected window has a green boundary. If a window is not selected, its boundary is gray.

If a window in a multi-window display is zoomed it is still outlined in green. If there is only one window, the green outline is not used. This allows the user to distinguish between a zoomed window and a display with only one window.

The selected window is local to each Measurement. Each Measurement remembers which window is selected. The selected window for each Measurement is remembered in Mode state.

## Navigating Windows

When the Next Window key is pressed, the next window in the order of precedence becomes selected. If the selected window was zoomed, the next window will also be zoomed.


The window navigation does NOT use the arrow and select keys. Those are reserved for navigation within a window.

## Mouse and Keyboard Control


If you do not have access to the instrument front-panel, there are several ways that a mouse and PC Keyboard can give you access to functions normally accessed using the front-panel keys.

### Right-Click

If you plug in a mouse and right-click on the analyzer screen, a menu will appear as below:

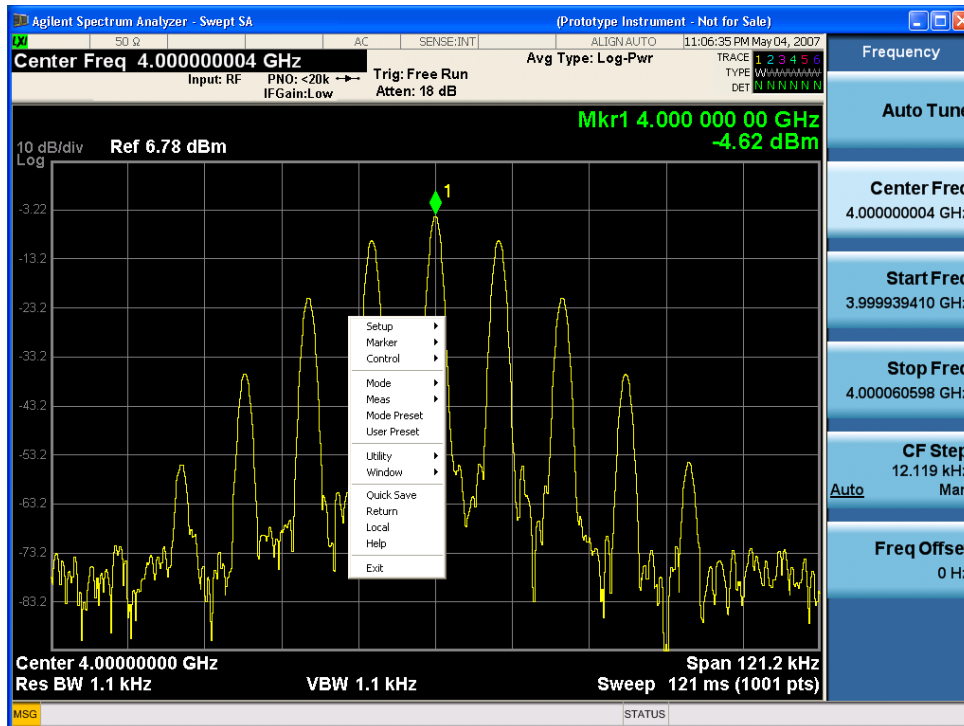


Placing the mouse on one of the rows marked with a right arrow symbol will cause that row to expand, as for example below where the mouse is hovered over the “Utility” row:

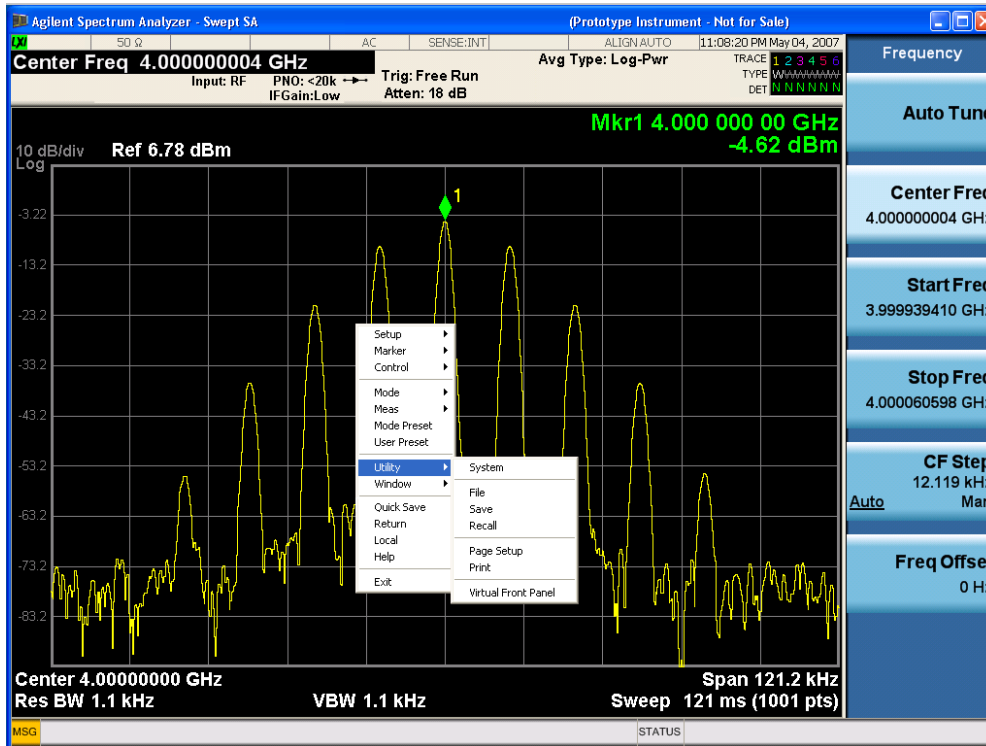

This method can be used to access any of the front-panel keys by using a mouse; as for example if you are accessing the instrument through Remote Desktop.

The array of keys thus available is shown below:

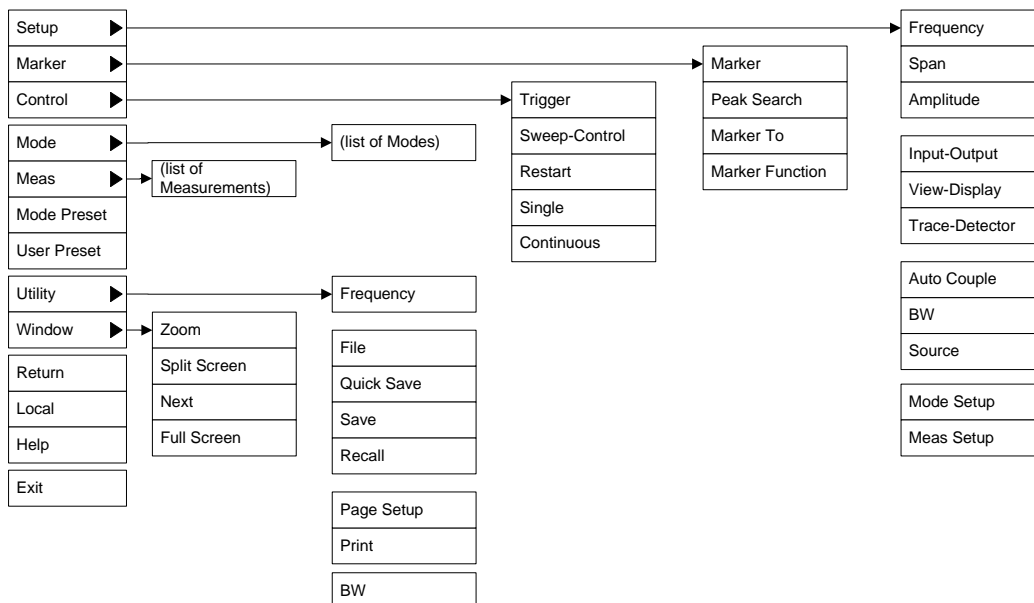

## PC Keyboard

If you have a PC keyboard plugged in (or via Remote Desktop), certain key codes on the PC keyboard

About the Analyzer  
**Mouse and Keyboard Control**

map to front-panel keys on the GPSA front panel. These key codes are shown below:


<b>Front-panel key</b>	<b>Key code</b>
Frequency	CTRL+SHIFT+F
Span	CTRL+SHIFT+S
Amplitude	CTRL+SHIFT+A
Input/Output	CTRL+SHIFT+O
View/Display	CTRL+SHIFT+V
Trace/Detector	CTRL+ALT+T
Auto Couple	CTRL+SHIFT+C
Bandwidth	CTRL+ALT+B
Source	CTRL+SHIFT+E
Marker	CTRL+ALT+K
Peak Search	CTRL+ALT+P
Marker To	CTRL+ALT+N
Marker Function	CTRL+ALT+F
System	CTRL+SHIFT+Y
Quick Save	CTRL+Q
Save	CTRL+S
Recall	CTRL+R
Mode Preset	CTRL+M
User Preset	CTRL+U
Print	CTRL+P
File	CTRL+SHIFT+L
Mode	CTRL+SHIFT+M
Measure	CTRL+ALT+M
Mode Setup	CTRL+SHIFT+E
Meas Setup	CTRL+ALT+E
Trigger	CTRL+SHIFT+T
Sweep/Control	CTRL+SHIFT+W
Restart	CTRL+ALT+R
Single	CTRL+ALT+S

<b>Front-panel key</b>	<b>Key code</b>
Cont	CTRL+ALT+C
Zoom	CTRL+SHIFT+Z
Next Window	CTRL+SHIFT+N
Split Screen	CTRL+L
Full Screen	CTRL+SHIFT+B
Return	CTRL+SHIFT+R
Mute	Mute
Inc Audio	Volume Up
Dec Audio	Volume Down
Help	F1
Control	CTRL
Alt	ALT
Enter	Return
Cancel	Esc
Del	Delete
Backspace	Backspace
Select	Space
Up Arrow	Up
Down Arrow	Down
Left Arrow	Left
Right Arrow	Right
Menu key 1	CTRL+SHIFT+F1
Menu key 2	CTRL+SHIFT+F2
Menu key 3	CTRL+SHIFT+F3
Menu key 4	CTRL+SHIFT+F4
Menu key 5	CTRL+SHIFT+F5
Menu key 6	CTRL+SHIFT+F6
Menu key 7	CTRL+SHIFT+F7
Backspace	BACKSPACE
Enter	ENTER

About the Analyzer  
**Mouse and Keyboard Control**

Front-panel key	Key code
Tab	Tab
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Here is a pictorial view of the table:

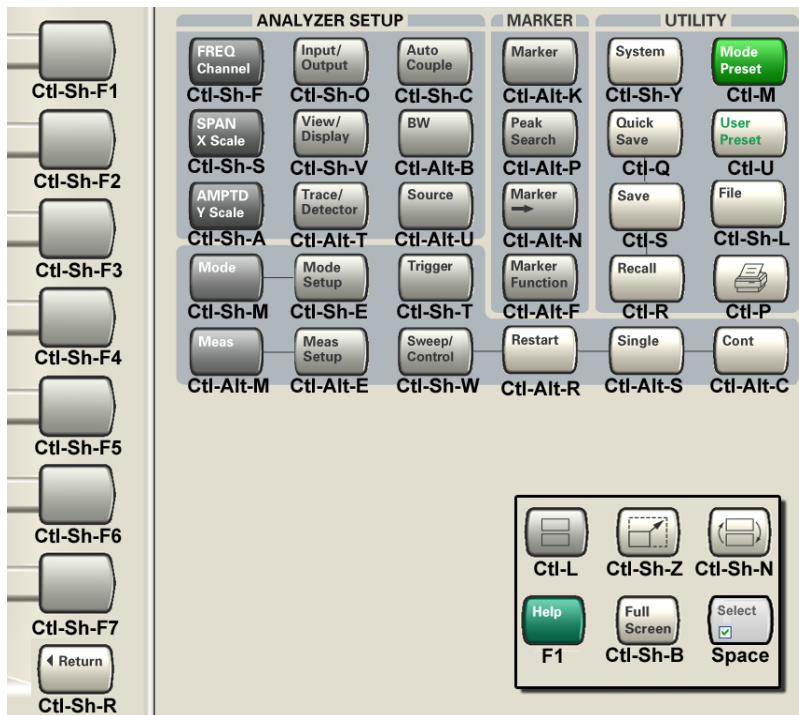



## Instrument Security & Memory Volatility

If you are using the instrument in a secure environment, you may need details of how to clear or sanitize its memory, in compliance with published security standards of the United States Department of Defense, or other similar authorities.

For the X Series analyzers, this information is contained in the document "Security Features and Volatility". This document is **not** included in the Documentation CD, or the instrument's on-disk library, but it may be downloaded from Agilent's web site.

To obtain a copy of the document, click on or browse to the following URL:

<http://www.agilent.com/find/security>

To locate and download the document, select Model Number "N9020A", then click "Submit". Then, follow the on-screen instructions to download the file.



# **About the W-CDMA Measurement Application**

This chapter provides overall information on W-CDMA, HSDPA and HSUPA communications systems, and describes W-CDMA (3GPP) measurements made by the analyzer.

## **What Does the W-CDMA Application Do?**

This analyzer can be used for testing a W-CDMA transmitter, including measuring HSDPA/HSUPA signals, manufactured according to the following standards documents:

- 3GPP TS 25.141 Base Station (BS) conformance testing (FDD) V6.10.0 (2005-06)
- 3GPP TS 25.211 Physical channels and mapping of transport channels onto physical channels (FDD) V6.5.0 (2005-06)
- 3GPP TS 25.212 Multiplexing and channel coding (FDD) V6.5.0 (2005-06)
- 3GPP TS 25.213 Spreading and modulation (FDD) V6.3.0 (2005-06)
- 3GPP TS 25.214 Physical layer procedure (FDD) V6.6.0 (2005-06)
- 3GPP TS 34.121 Terminal conformance specification; Radio transmission and reception (FDD) V6.1.0 (2005-06)

These documents define complex, multi-part measurements used to create and maintain an interference-free environment. For example, the documents include standardized test methods for the measurement of power in a carrier, a spectrum emission mask, and other critical measurements.

The instrument automatically makes these measurements using the measurement methods and limits defined in the documents. The detailed results displayed by the measurements enable you to analyze W-CDMA system performance. You may alter the measurement parameters for specialized analysis. For infrastructure test, the analyzer will test transmitters of base stations in a non-interfering manner using a coupler or power splitter.

This analyzer makes the following measurements of W-CDMA (3GPP) and HSDPA/HSUPA signals:

- Channel Power
- Adjacent Channel Power (ACP or ACLR)
- Spectrum Emission Mask
- Spurious Emissions
- Occupied BW
- Power Stat CCDF
- Code Domain
- Modulation Accuracy (Composite EVM)
- Power Control (Up Link)
- QPSK EVM
- Monitor Spectrum
- IQ Waveform (Time Domain)

About the W-CDMA Measurement Application  
**What Does the W-CDMA Application Do?**

This chapter provides introductory information about the programming documentation included with your product.

---

## What Programming Information is Available?

The X-Series Documentation can be accessed through the Additional Documentation page in the instrument Help system and is included on the Documentation CD shipped with the instrument. It can also be found in the instrument at: C:\ProgramsFiles\Agilent\SignalAnalysis\Infrastructure\Help\otherdocs, or online at: [http://www.agilent.com/find/mxa\\_manuals](http://www.agilent.com/find/mxa_manuals).

The following resources are available to help you create programs for automating your X-Series measurements:

Resource	Description
<b>X-Series Programmer's Guide</b>	<p>Provides general SCPI programming information on the following topics:</p> <ul style="list-style-type: none"> <li>• Programming the X-Series Applications</li> <li>• Programming fundamentals</li> <li>• Programming examples</li> </ul> <p>Note that SCPI command descriptions for measurement applications are NOT in this book, but are in the User's and Programmer's Reference.</p>
<b>User's and Programmer's Reference manuals</b>	<p>Describes all front-panel keys and softkeys, including SCPI commands for a measurement application. Note that:</p> <ul style="list-style-type: none"> <li>• Each measurement application has its own User's and Programmer's Reference.</li> <li>• The content in this manual is duplicated in the analyzer's Help (the Help that you see for a key is identical to what you see in this manual).</li> </ul>
<b>Embedded Help in your instrument</b>	<p>Describes all front-panel keys and softkeys, including SCPI commands, for a measurement application.</p> <p>Note that the content that you see in Help when you press a key is identical to what you see in the User's and Programmer's Reference.</p>
<b>X-Series Getting Started Guide</b>	<p>Provides valuable sections related to programming including:</p> <ul style="list-style-type: none"> <li>• Licensing New Measurement Application Software - After Initial Purchase</li> <li>• Configuring instrument LAN Hostname, IP Address, and Gateway Address</li> <li>• Using the Windows XP Remote Desktop to connect to the instrument remotely</li> <li>• Using the Embedded Web Server Telnet connection to communicate SCPI</li> </ul> <p>This printed document is shipped with the instrument.</p>
<b>Agilent Application Notes</b>	Printable PDF versions of pertinent application notes.
<b>Agilent VISA User's Guide</b>	Describes the Agilent Virtual Instrument Software Architecture (VISA) library and shows how to use it to develop I/O applications and instrument drivers on Windows PCs.



## IEEE Common GPIB Commands

Numeric values for bit patterns can be entered using decimal or hexi-decimal representations. (that is,. 0 to 32767 is equivalent to #H0 to #H7FFF).

### Calibration Query

\*CAL? Performs a full alignment and returns a number indicating the success of the alignment. A zero is returned if the alignment is successful. A one is returned if any part of the alignment fails. The equivalent SCPI command is CALibrate[:ALL]?

See “Alignments” on page 243 for details of \*CAL?.

### Clear Status

Clears the status byte register. It does this by emptying the error queue and clearing all bits in all of the event registers. The status byte register summarizes the states of the other registers. It is also responsible for generating service requests.

Key Path	<b>No equivalent key. Related key System, Show Errors, Clear Error Queue</b>
<b>Remote Command</b>	*CLS
Example	*CLS Clears the error queue and the Status Byte Register.
Notes	For related commands, see the SYSTem:ERRor[:NEXT]? command. See also the STATus:PRESet command and all commands in the STATus subsystem.
Status Bits/OPC dependencies	Resets all bits in all event registers to 0, which resets all the status byte register bits to 0 also.
Initial S/W Revision	Prior to A.02.00

### Standard Event Status Enable

Selects the desired bits from the standard event status enable register. This register monitors I/O errors and synchronization conditions such as operation complete, request control, query error, device dependent error, status execution error, command error, and power on. The selected bits are OR'd to become a summary bit (bit 5) in the byte register which can be queried.

The query returns the state of the standard event status enable register.

Key Path	<b>No equivalent key. Related key System, Show Errors, Clear Error Queue</b>
<b>Remote Command</b>	*ESE <integer> *ESE?

Example	*ESE 36 Enables the Standard Event Status Register to monitor query and command errors (bits 2 and 5).  *ESE? Returns a 36 indicating that the query and command status bits are enabled.
Notes	For related commands, see the STATus subsystem and SYSTem:ERRor[:NEXT]? commands.
Preset	255
State Saved	Not saved in state.
Min	0
Max	255
Status Bits/OPC dependencies	Event Enable Register of the Standard Event Status Register.
Initial S/W Revision	Prior to A.02.00

### Standard Event Status Register Query

Queries and clears the standard event status event register. (This is a destructive read.) The value returned is a hexadecimal number that reflects the current state (0/1) of all the bits in the register.

<b>Remote Command:</b>	*ESR?
Example:	*ESR? Returns a 1 if there is either a query or command error, otherwise it returns a zero.
Notes:	For related commands, see the STATus subsystem commands.
Preset:	0
Min:	0
Max:	255
Status Bits/OPC dependencies:	Standard Event Status Register (bits 0 – 7).
Initial S/W Revision:	Prior to A.02.00

### Identification Query

Returns a string of instrument identification information. The string will contain the model number, serial number, and firmware revision.

The response is organized into four fields separated by commas. The field definitions are as follows:

- Manufacturer
- Model
- Serial number

- Firmware version

Key Path	<b>No equivalent key. See related key System, Show System.</b>
<b>Remote Command</b>	*IDN?
Example	*IDN? Returns instrument identification information, such as: Agilent Technologies,N9020A,US01020004,A.01.02
Initial S/W Revision	Prior to A.02.00

## Instrument Model Number

ID? - Returns a string of the instrument identification. The string will contain the model number.

When in Remote Language compatibility mode the query will return the model number of the emulated instrument, when in any other mode the returned model number will be that of the actual hardware.

## Operation Complete

The \*OPC command sets bit 0 in the standard event status register (SER) to “1” when pending operations have finished, that is when all overlapped commands are complete. It does not hold off subsequent operations. You can determine when the overlapped commands have completed either by polling the OPC bit in SER, or by setting up the status system such that a service request (SRQ) is asserted when the OPC bit is set.

The \*OPC? query returns a “1” after all the current overlapped commands are complete. So it holds off subsequent commands until the "1" is returned, then the program continues. This query can be used to synchronize events of other instruments on the external bus.

<b>Remote Command:</b>	*OPC *OPC?
Example:	INIT:CONT 0 Selects single sweeping. INIT:IMM Initiates a sweep. *OPC? Holds off any further commands until the sweep is complete.
Status Bits/OPC dependencies:	Not global to all remote ports or front panel. *OPC only considers operation that was initiated on the same port as the *OPC command was issued from. *OPC is an overlapped command, but *OPC? is sequential.
Initial S/W Revision:	Prior to A.02.00

## Query Instrument Options

Returns a string of all the installed instrument options. It is a comma separated list with quotes, such as: “503,P03,PFR”.

To be IEEE compliant, this command should return an arbitrary ascii variable that would not begin and end with quotes. But the quotes are needed to be backward compatible with previous SA products and

software. So, the actual implementation will use arbitrary ascii. But quotes will be sent as the first and last ascii characters that are sent with the comma-separated option list.

<b>Remote Command:</b>	*OPT?
Initial S/W Revision:	Prior to A.02.00

## Recall Instrument State

This command recalls the instrument state from the specified instrument memory register.

- If the state being loaded has a newer firmware revision than the revision of the instrument, no state is recalled and an error is reported.
- If the state being loaded has an equal firmware revision than the revision of the instrument, the state will be loaded.
- If the state being loaded has an older firmware revision than the revision of the instrument, the instrument will only load the parts of the state that apply to the older revision.

<b>Remote Command:</b>	*RCL <register #>
Example:	*RCL 7 Recalls the instrument state that is currently stored in register 7.
Notes:	Registers 0 through 6 are accessible from the front panel in menu keys for Recall Registers.
Min:	0
Max:	127
Status Bits/OPC dependencies:	The command is sequential.
Initial S/W Revision:	Prior to A.02.00

## Save Instrument State

This command saves the current instrument state and mode to the specified instrument memory register.

<b>Remote Command:</b>	*SAV <register #>
Example:	*SAV 9 Saves the instrument state in register 9.
Notes:	Registers 0 through 6 are accessible from the front panel in menu keys for Save Registers.
Min:	0
Max:	127
Status Bits/OPC dependencies:	The command is sequential.
Initial S/W Revision:	Prior to A.02.00

## Service Request Enable

This command enables the desired bits of the service request enable register.

The query returns the value of the register, indicating which bits are currently enabled.

<b>Remote Command:</b>	*SRE <integer> *SRE?
Example:	*SRE 22 Enables bits 1, 2, and 4 in the service request enable register.
Notes:	For related commands, see the STATus subsystem and SYSTem:ERRor[:NEXT]? commands.
Preset:	0
Min:	0
Max:	255
Status Bits/OPC dependencies:	Service Request Enable Register (all bits, 0 – 7).
Initial S/W Revision:	Prior to A.02.00

## Status Byte Query

Returns the value of the status byte register without erasing its contents.

<b>Remote Command:</b>	*STB?
Example:	*STB? Returns a decimal value for the bits in the status byte register. For example, if a 16 is returned, it indicates that bit 5 is set and one of the conditions monitored in the standard event status register is set.
Notes:	See related command *CLS.
Status Bits/OPC dependencies:	Status Byte Register (all bits, 0 – 7).
Initial S/W Revision:	Prior to A.02.00

## Trigger

This command triggers the instrument. Use the :TRIGger[:SEQuence]:SOURce command to select the trigger source.

Key Path	<b>No equivalent key. See related keys Single and Restart.</b>
<b>Remote Command</b>	*TRG
Example	*TRG Triggers the instrument to take a sweep or start a measurement, depending on the current instrument settings.
Notes	See related command :INITiate:IMMEDIATE.
Initial S/W Revision	Prior to A.02.00

## Self Test Query

This query performs the internal self-test routines and returns a number indicating the success of the testing. A zero is returned if the test is successful, 1 if it fails.

<b>Remote Command:</b>	*TST?
Example:	*TST? Runs the self-test routines and returns 0=passed, 1=some part failed.
Initial S/W Revision:	Prior to A.02.00

## Wait-to-Continue

This command causes the instrument to wait until all overlapped commands are completed before executing any additional commands. There is no query form for the command.

<b>Remote Command:</b>	*WAI
Example:	INIT:CONT OFF; INIT;*WAI Sets the instrument to single sweep. Starts a sweep and waits for its completion.
Status Bits/OPC dependencies:	Not global to all remote ports or front panel. *OPC only considers operation that was initiated on the same port as the *OPC command was issued from.
Initial S/W Revision:	Prior to A.02.00



## File

Opens a menu that enables you to access various standard and custom Windows functions. Press any other front-panel key to exit


Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00


## File Explorer

Opens the standard Windows File Explorer. The File Explorer opens in the My Documents directory for the current user.

The File Explorer is a separate Windows application, so to return to the analyzer once you are in the File Explorer, you may either:

Exit the File Explorer by clicking on the red X in the upper right hand corner, with a mouse

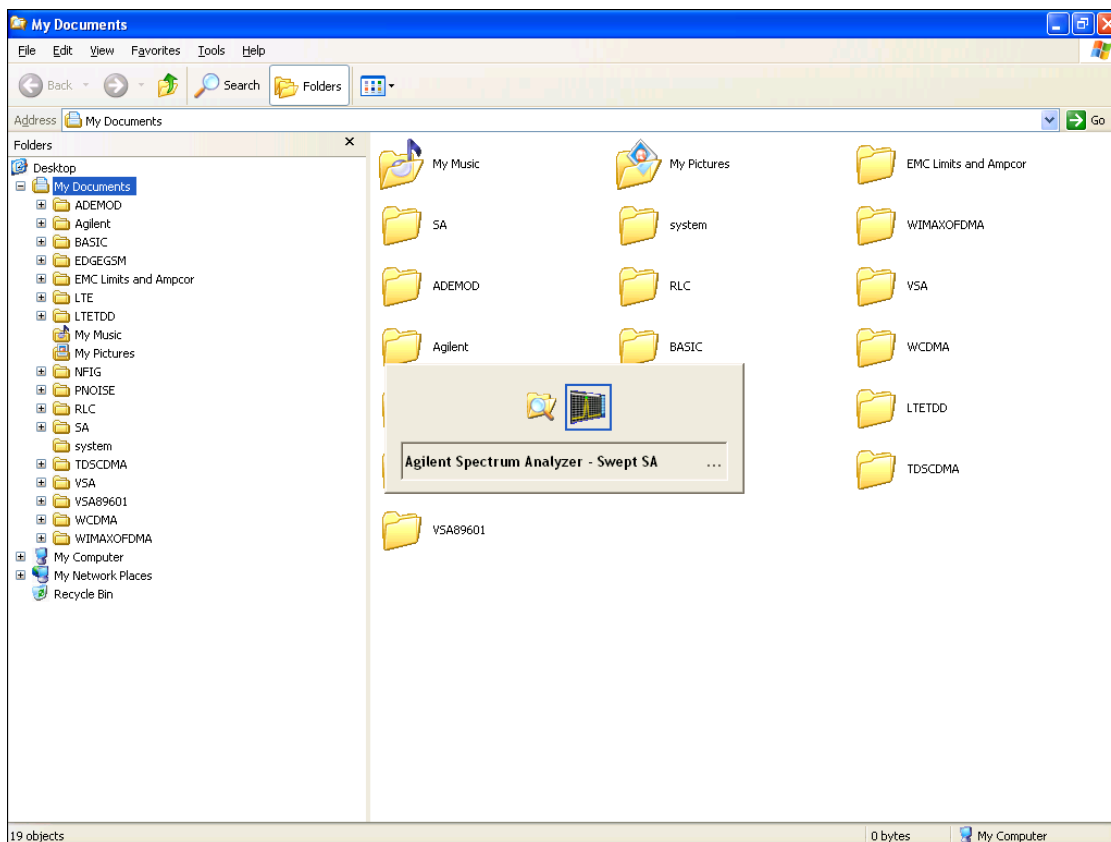

Or use Alt-Tab: press and hold the Alt  key and press and release the Tab key until the Analyzer



logo is showing in the window in the center of the screen, as above, then release the Alt key.


Key Path	<b>File</b>
Initial S/W Revision	Prior to A.02.00

## Page Setup

The Page Setup key brings up a Windows Page Setup dialog that allows you to control aspects of the pages sent to the printer when the PRINT hardkey is pressed.

Key Path	<b>File</b>
Initial S/W Revision	Prior to A.02.00

Paper size, the printer paper source, the page orientation and the margins are all settable. Just like any standard Windows dialog, you may navigate the dialog using front-panel keys, or a mouse. There are no SCPI commands for controlling these parameters.

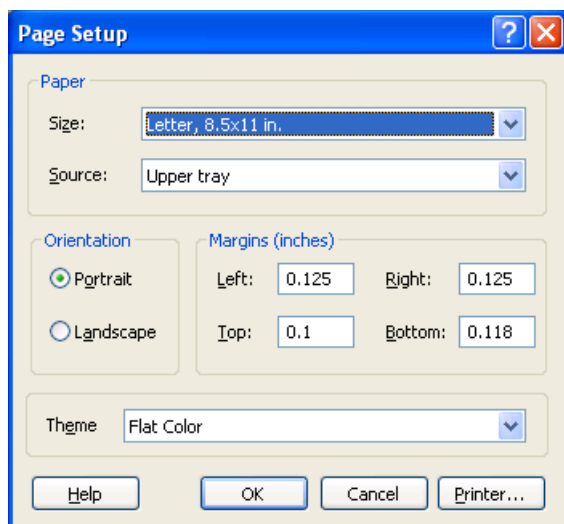

Also contained in this dialog is a drop-down control that lets you select the Theme to use when printing. For more on Themes, see information under View/Display, Display, System Display Settings, Theme. The Theme control has a corresponding SCPI command:

Parameter Name	Print Themes
Parameter Type	Enum
Mode	All
<b>Remote Command</b>	:SYSTem:PRINT:THEME TDCOLOR   TDMONochrome   FCOLOR   FMONochrome :SYSTem:PRINT:THEME?
Example	:SYST:PRIN:THEM FCOL

## System Functions

### File


Setup	:SYSTem:DEFault MISC
Preset	FCOL; not part of Preset, but is reset by Restore Misc Defaults or Restore System Defaults All and survives subsequent running of the modes.
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Print

Refer to your Microsoft Windows Operating System manual.

### Exit

This key, when pressed, will exit the Instrument Application. A dialog box is used to confirm that you intended to exit the application:

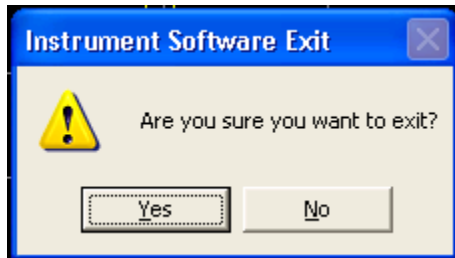

Key Path	<b>File</b>
Mode	All
Notes	The Instrument Application will close. No further SCPI commands can be sent. Use with caution!
Initial S/W Revision	Prior to A.02.00

## Preset

### Mode Preset

Returns the active mode to a known state.

**Mode Preset** does the following for the currently active mode:

- Aborts the currently running measurement.
- Brings up the default menu for the mode, with no active function.
- Sets measurement settings to their preset values for the active mode only.
- Activates the default measurement.
- Brings up the default menu for the mode.
- Clears the input and output buffers.
- Sets Status Byte to 0.

Mode Preset does not:

Cause a mode switch

Affect mode persistent settings

Affect system settings

Key Path	Front-panel key
<b>Remote Command</b>	:SYSTem:PRESet
Example	:SYST:PRES
Notes	*RST is preferred over :SYST:PRES for remote operation. *RST does a Mode Preset, as done by the :SYST:PRES command, and sets the measurement mode to Single measurement rather than Continuous for optimal remote control throughput.  Clears all pending OPC bits. The Status Byte is set to 0.
Couplings	A Mode Preset aborts the currently running measurement, activates the default measurement, and gets the mode to a consistent state with all of the default couplings set.
Initial S/W Revision	Prior to A.02.00

### How-To Preset

The table below shows all possible presets, their corresponding SCPI commands and front-panel access (key paths). Instrument settings depend on the current measurement context. Some settings are local to the current measurement, some are global (common) across all the measurements in the current mode, and some are global to all the available modes. In a similar way, restoring the settings to their preset state can be done within the different contexts.

## System Functions

### Preset

**Auto Couple** - is a measurement local key. It sets all Auto/Man parameter couplings in the measurement to Auto. Any Auto/Man selection that is local to other measurements in the mode will not be affected.

**Meas Preset** - is a measurement local key. Meas Preset resets all the variables local to the current measurement except the persistent ones.

**Mode Preset** - resets all the current mode's measurement local and measurement global variables except the persistent ones.

**Restore Mode Defaults** - resets ALL the Mode variables (and all the Meas global and Meas local variables), including the persistent ones.

Type Of Preset	SCPI Command	Front Panel Access
Auto Couple	:COUPLe ALL	Auto Couple front-panel key
Meas Preset	:CONFIgure:<Measurement>	Meas Setup Menu
Mode Preset	:SYSTem:PRESet	Mode Preset (green key)
Restore Mode Defaults	:INSTrument:DEFault	Mode Setup Menu
Restore All Mode Defaults	:SYSTem:DEFault MODEs	System Menu; Restore System Default Menu
*RST	*RST	not possible (Mode Preset with Single)
Restore Input/Output Defaults	:SYSTem:DEFault INPut	System Menu; Restore System Default Menu
Restore Power On Defaults	:SYSTem:DEFault PON	System Menu; Restore System Default Menu
Restore Alignment Defaults	:SYSTem:DEFault ALIGN	System Menu; Restore System Default Menu
Restore Miscellaneous Defaults	:SYSTem:DEFault MISC	System Menu; Restore System Default Menu
Restore All System Defaults	:SYSTem:DEFault [ALL] :SYSTem:PRESet:PERsistent	System Menu; Restore System Default Menu
User Preset	:SYSTem:PRESet:USER	User Preset Menu
User Preset All Modes	:SYSTem:PRESet:USER:ALL	User Preset Menu
Power On Mode Preset	:SYSTem:PON:TYPE MODE	System Menu
Power On User Preset	:SYSTem:PON:TYPE USER	System Menu
Power On Last State	:SYSTem:PON:TYPE LAST	System Menu

### Restore Mode Defaults

Resets the state for the currently active mode by resetting the mode persistent settings to their factory

default values, clearing mode data and by performing a Mode Preset. This function will never cause a mode switch. This function performs a full preset for the currently active mode; whereas, Mode Preset performs a partial preset. Restore Mode Defaults does not affect any system settings. System settings are reset by the Restore System Defaults function. This function does reset mode data; as well as settings.

Key Path	<b>Mode Setup</b>
<b>Remote Command</b>	:INSTrument:DEFault
Example	:INST:DEF
Notes	Clears all pending OPC bits. The Status Byte is set to 0. A message comes up saying: "If you are sure, press key again".
Couplings	A Restore Mode Defaults will cause the currently running measurement to be aborted and causes the default measurement to be active. It gets the mode to a consistent state with all of the default couplings set.
Initial S/W Revision	Prior to A.02.00

### **\*RST (Remote Command Only)**

\*RST is equivalent to :SYST:PRES;:INIT:CONT OFF which is a Mode Preset in the Single measurement state. This remote command is preferred over Mode Preset remote command - :SYST:PRES, as optimal remote programming occurs with the instrument in the single measurement state.

<b>Remote Command:</b>	*RST
Example:	*RST
Notes:	Sequential Clears all pending OPC bits and the Status Byte is set to 0.
Couplings:	A *RST will cause the currently running measurement to be aborted and cause the default measurement to be active. *RST gets the mode to a consistent state with all of the default couplings set.
Initial S/W Revision:	Prior to A.02.00

## Print

This front-panel key is equivalent to performing a File, Print, OK. It immediately performs the currently configured Print to the Default printer.

The :HCOPY command is equivalent to pressing the PRINT key. The HCOPY:ABORT command can be used to abort a print which is already in progress. Sending HCOPY:ABORT will cause the analyzer to stop sending data to the printer, although the printer may continue or even complete the print, depending on how much data was sent to the printer before the user sent the ABORT command.

Key Path	<b>Front-panel key</b>
<b>Remote Command</b>	:HCOPY[:IMMEDIATE]
Initial S/W Revision	Prior to A.02.00

Key Path	<b>SCPI command only</b>
<b>Remote Command</b>	:HCOPY:ABORT
Initial S/W Revision	Prior to A.02.00

## Quick Save

The Quick Save front-panel key repeats the most recent save that was performed from the Save menu, with the following exceptions: :

Register saves are not remembered as Saves for the purpose of the Quick Save function

If the current measurement does not support the last non-register save that was performed, an informational message is generated, “File type not supported for this measurement”

Quick Save repeats the last type of qualified save (that is, a save qualified by the above criteria) in the last save directory by creating a unique filename using the Auto File Naming algorithm described below.

If Quick Save is pressed after startup and before any qualified Save has been performed, the Quick Save performs a Screen Image save using the current settings for Screen Image saves (current theme, current directory), which then becomes the “last save” for the purpose of subsequent Quick Saves.

The Auto File Naming feature automatically generates a file name for use when saving a file. The filename consists of a prefix and suffix separated by a dot, as is standard for the Windows® file system. A default prefix exists for each of the available file types:

Type	Default Prefix	Menu
State	State_	(Save/Recall)
Trace + State	State_	(Save/Recall)
Screen	Screen_	(Save/Recall)
Amplitude Corrections	Ampcor_	(Import/Export)
Traces	Trace_	(Import/Export)
Limit Lines	LLine_	(Import/Export)
Measurement Result	MeasR_	(Import/Export)
Capture Buffer	CapBuf_	(Import/Export)

A four digit number is appended to the prefix to create a unique file name. The numbering sequence starts at 0000 within each Mode for each file type and works its way up to 9999, then wraps to 0000 again. It remembers where it was through a Mode Preset and when leaving and returning to the Mode. It is reset by Restore Misc Defaults and Restore System Defaults and subsequent running of the instrument application. So, for example, the first auto file name generated for State files is State\_0000.state. The next is State\_0001, and so forth.

One of the key features of Auto File Name is that we guarantee that the Auto File Name will never conflict with an existing file. The algorithm looks for the next available number. If it gets to 9999, then it looks for holes. If it find no holes, that is no more numbers are available, it gives an error.

For example, if when we get to State\_0010.state there is already a State\_0010.state file in the current directory, it advances the counter to State\_0011.state to ensure that no conflict will exist (and then it verifies that State\_0011.state also does not exist in the current directory and advances again if it does, and so forth).

## System Functions

### Quick Save

If you enter a file name for a given file type, then the prefix becomes the filename you entered instead of the default prefix, followed by an underscore. The last four letters (the suffix) are the 4-digit number.

For example, if you save a measurement results file as “fred.csv”, then the next auto file name chosen for a measurement results save will be fred\_0000.csv.

---

**NOTE** Although 0000 is used in the example above, the number that is used is actually the current number in the Meas Results sequence, that is, the number that would have been used if you had not entered your own file name.

---

---

**NOTE** If the filename you entered ends with \_dddd, where d=any number, making it look just like an auto file name, then the next auto file name picks up where you left off with the suffix being dddd + 1.

---

Key Path	<b>Front-panel key</b>
Notes	No remote command for this key specifically.
Initial S/W Revision	Prior to A.02.00



## Recall

Accesses a menu that enables you to select the information that you want to recall.

The options are State, Trace and Data. (screen images can be saved, but not recalled.) The default paths for Recall are data type dependent and are the same as for the Save key.

Key Path	Front-panel key
Notes	No remote command directly controls the Recall Type that this key controls. The Recall type is a node in the :MMEM:LOAD command. An example is :MMEM:LOAD:STATe <filename>.
Initial S/W Revision	Prior to A.02.00

## State

Accesses a menu that enables you to recall a State that has previously been saved. Recalling a saved state returns the analyzer as close as possible to the mode context and may cause a mode switch if the file selected is not for the current active mode. A State file can be recalled from either a register or a file. Once you select the source of the recall in the State menu, the recall will occur.

Key Path	Recall
Mode	All
Example	MMEM:LOAD:STAT "MyStateFile.state" This loads the state file data (on the default file directory path) into the instrument state.
Notes	See <a href="#">“Open” on page 191</a> .
Initial S/W Revision	Prior to A.02.00

In measurements that support saving Traces, for example, Swept SA, the Trace data is saved along with the State in the State file. When recalling the State, the Trace data is recalled as well. Traces are recalled exactly as they were stored, including the writing mode and update and display modes. If a Trace was updating and visible when the State was saved, it will come back updating and visible, and its data will be rewritten right away. When you use State to save and recall traces, any trace whose data must be preserved should be placed in View or Blank mode before saving.

The following table describes the Trace Save and Recall possibilities:

You want to recall state and one trace's data, leaving other traces unaffected.	Save Trace+State from 1 trace. Make sure that no other traces are updating (they should all be in View or Blank mode) when the save is performed.	On Recall, specify the trace you want to load the one trace's data into. This trace will load in View. All other traces' data will be unaffected, although their trace mode will be as it was when the state save was performed.
---	---	--

## System Functions

### Recall

You want to recall all traces	Save Trace+State from ALL traces.	On Recall, all traces will come back in View (or Blank if they were in Blank or Background when saved)
You want all traces to load exactly as they were when saved.	Save State	On recall, all traces' mode and data will be exactly as they were when saved. Any traces that were updating will have their data immediately overwritten.

### Register 1 thru Register 6

Selecting any one of these register keys causes the State of the mode from the specified Register to be recalled. Each of the register keys annotates whether it is empty or at what date and time it was last modified.

Registers are shared by all modes, so recalling from any one of the 6 registers may cause a mode switch to the mode that was active when the save to the Register occurred.

After the recall completes, the message "Register <register number> recalled" appears in the message bar.

Key Path	<b>Recall, State</b>
Example	*RCL 1
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Recall, State</b>
Example	*RCL 2
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Recall, State</b>
Example	*RCL 3
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Recall, State</b>
Example	*RCL 4

Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Recall, State</b>
Example	*RCL 5
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Recall, State</b>
Example	*RCL 6
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

### From File\ File Open

Brings up the standard Windows® File Open dialog and its corresponding key menu.

When you first enter this dialog, the State File default path is in the Look In: box in this File Open dialog. The File Open dialog is loaded with the file information related to the State Save Type. The first \*.state file is highlighted. The only files that are visible are the \*.state files and the Files of type is \*.state, since .state is the file suffix for the State save type. For more details, refer to [“Open” on page 201](#).

Key Path	<b>Recall, State</b>
Notes	Brings up the Open dialog for recalling a State Save Type
Initial S/W Revision	Prior to A.02.00

### Open

The recalling State function must first verify the file is recallable in the current instrument by checking the software version and model number of the instrument. If everything matches, a full recall proceeds by aborting the currently running measurement, and then loading the State from the saved state file to as close as possible to the context in which the save occurred. You can open state files from any mode, so recalling a State file switches to the mode that was active when the save occurred. After switching to the mode of the saved state file, mode settings and data (if any for the mode) are loaded with values from the saved file. The saved measurement of the mode becomes the newly active measurement and the data relevant to the measurement (if there is any) is recalled.

If there is a mismatch between file version or model number or instrument version or model number, the recall function tries to recall as much as possible and it returns a warning message of what it did.

---

**NOTE** No Trace data is loaded when recalling a State File. Measurements that support

System Functions  
**Recall**

loading of trace data will include a Trace key in the Recall menu and will load State + Trace data from .trace files under that key.

---

Key Path	<b>Recall, State, From File...</b>
<b>Remote Command</b>	:MMEMory:LOAD:STATe <filename>
Example	:MMEM:LOAD:STAT "myState.state" recalls the file myState.state on the default path
Notes	Auto return to the State menu and the Open dialog goes away. Advisory Event "Recalled File <file name>" after recall is complete.
Notes	If the file specified is empty an error is generated. If the specified file does not exist, another error is generated. If there is a mismatch between the file and the proper file type, an error is generated. If there is a mismatch between file version or model number or instrument version or model number, a warning is displayed. Then it returns to the State menu and File Open dialog goes away. Although the trace data is included in the .state file it is not recalled. Recalling trace data is left for .trace files only for measurements that support recalling of trace data. Errors are generated if the specified file is empty or does not exist, or there is a file type mismatch.
Initial S/W Revision	Prior to A.02.00

The state of a mode includes all of the variables affected by doing a full preset. It not only recalls Mode Preset settings, but it also recalls all of the mode persistent settings and data if the mode has either. Each mode determines whether data is part of mode state and if the mode has any persistent settings. **Recall State** also recalls all of the **Input/Output** system settings, since they are saved with each State File for each mode.

The Recall State function does the following:

Verifies that the file is recallable on this instrument using the version number and model number.

Aborts the currently running measurement.

Clears any pending operations.

Switches to the mode of the selected Save State file.

Sets mode State and Input/Output system settings to the values in the selected Saved State file.

Limits settings that differ based on model number, licensing or version number.

Makes the saved measurement for the mode the active measurement.

Clears the input and output buffers.

Status Byte is set to 0.

Executes a \*CLS

## Trace (+State)

Select Trace as the data type to be recalled. Trace files include the state of the mode they were saved from as well as the trace data, with internal flags to indicate which trace the user was trying to save, which may include ALL traces. They are otherwise identical to State files. Recalling **trace data** may cause a mode switch if the file selected is not for the currently active mode.

Not all modes support saving of trace data with the state, and for modes that do, not all measurements do. The Trace key is grayed out for measurements that do not support trace recall. It is blanked for modes that do not support trace recall.

This key will not actually cause the recall, since the recall feature still needs to know from which file to recall the trace and which trace to recall it into. Pressing this key will bring up the Recall Trace menu that provides you with the options of where to retrieve the trace.

For quick recalls, the Trace menu lists 5 registers to recall from or you can select a file to recall from.

Key Path	<b>Recall</b>
Mode	SA
Example	MMEM:LOAD:TRAC TRACE2,"MyTraceFile.trace"  This loads the trace file data (on the default file directory path) into the specified trace.  :MMEM:LOAD:TRAC:REG TRACE1,2  restores the trace data in register 2 to Trace 1
Initial S/W Revision	Prior to A.02.00

## Register 1 thru Register 5

Selecting any one of these register keys causes the Traces and State from the specified Register to be recalled. Each of the register keys annotates whether it is empty or at what date and time it was last modified.

Trace registers are shared by all modes, so recalling from any one of the 5 registers may cause a mode switch to the mode that was active when the save to the Register occurred.

After the recall completes, the message "Trace Register <register number> recalled" appears in the message bar.

Key Path	<b>Recall, Trace</b>
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Recall, Trace</b>
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.

System Functions  
**Recall**

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

Key Path	<b>Recall, Trace</b>
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Recall, Trace</b>
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Recall, Trace</b>
Readback	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

**To Trace**

These menu selections let you pick which Trace to recall the saved trace into. Not all modes have the full 6 traces available. The default is the currently selected trace, selected in this menu or in the Trace/Detector, Export Data, Import Data, or Save Trace menus, except if you have chosen All, then it remains chosen until you specifically change it to a single trace.

If the .trace file is an "all trace" file, "**To Trace**" is ignored and the traces each go back to the trace they were saved from.

Once selected, the key returns back to the Recall Trace menu and the selected Trace number is annotated on the key. Now you have selected exactly where the trace needs to be recalled. To trigger a recall of the selected Trace, you must select the **Open** key in the Recall Trace menu.

Key Path	<b>Save, Data, Trace</b>
Mode	SA
Initial S/W Revision	Prior to A.02.00

**Open...**

Accesses the standard Windows File Open dialog and its corresponding File Open menu. When you navigate to this selection, you have already determined you are recalling Trace and now you want to specify from which file to do the recall.

When you first enter this dialog, the State File default path is in the Look In: box. The **File Open** dialog is loaded with the file information related to the State Save Type. The first \*.trace file is highlighted. Also, the only files that are visible are the \*.trace files and the Files of type is \*.trace, since .trace is the

file suffix for the Trace save type. For more details, refer to [“File Open Dialog and Menu” on page 200](#).

Key Path	<b>Recall, Trace</b>
Mode	SA
Notes	Brings up Open dialog for recalling a Trace Save Type
Initial S/W Revision	Prior to A.02.00

### Open

The recalling Trace function must first verify the file is recallable in this instrument by checking instrument software version and model number, since it includes State. If everything matches, a full recall proceeds by aborting the currently running measurement, and loading the state from the saved state file to as close as possible to the context in which the save occurred. You can open .trace files from any mode that supports them, so recalling a Trace file switches to the mode that was active when the save occurred. After switching to the mode of the saved state file, mode settings and data (if any for the mode) are loaded with values from the saved file and the saved measurement of the mode becomes the newly active measurement, and the data relevant to the measurement (if there is any) is recalled.

Once the state is loaded, the trace data must be loaded. The internal flags are consulted to see which trace to load and the "To Trace" setting to see where to load it. Trace data is always loaded with the specified trace set to View, so that the data is visible and not updating(so as not to erase the recalled data). If the file is an "all trace" file, all traces are loaded with the saved data(to the original trace the data was saved from) and set to View. Traces whose data is not loaded are restored to the update state that existed when they were saved.

In every other way a Trace load is identical to a State load. See section [“File Open Dialog and Menu” on page 200](#) for details.

Key Path	<b>Recall, Trace, Open...</b>
<b>Remote Command</b>	:MMEMory:LOAD:TRACe TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 , <filename>  :MMEMory:LOAD:TRACe:REGister TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 , <integer>
Example	:MMEM:LOAD:TRAC TRACE2, "myState.trace" recalls the file myState.trace on the default path; if it is a "single trace" save file, that trace is loaded to trace 2, and is set to be not updating.  :MMEM:LOAD:TRAC:REG TRACE1,2 restores the trace data in register 2 to Trace 1

Notes	<p>Auto return to the Trace menu and the Open dialog goes away.</p> <p>Advisory Event "Recalled File &lt;file name&gt;" after recall is complete.</p> <p>Some modes and measurements do not have available all 6 traces. Phase Noise mode command, for example, is: MMEMoRY:LOAD:TRACe TRACE1 TRACE2 TRACE3,&lt;filename&gt;</p> <p>The load trace command actually performs a load state, which in the Swept SA measurement includes the trace data. However it looks in the recalled state file to see how it was flagged at save time. The possibilities are:</p> <p>If the trace file was saved using one of the TRACE# enums, it is flagged as a single trace save file. The trace that was flagged as the one that was saved, is loaded to the trace specified. The trace is loaded with update off and display on, and none of the other traces are loaded.</p> <p>If the trace file was saved using one the ALL enum, it is flagged as an "all traces" file. And all traces will be loaded. All of the traces are loaded with Update=Off to keep them from updating, regardless of the setting of "Recall State w/Trace Update".</p>
Initial S/W Revision	Prior to A.02.00

### Data (Import)

Importing a data file loads data that was previously saved from the current measurement or from other measurements and/or modes that produce the same type of data. The Import Menu only contains Data Types that are supported by the current measurement.

Since the commonly exported data files are in .csv format, the data can be edited by the user prior to importing. This allows you to export a data file, manipulate the data in Excel (the most common PC Application for manipulating .csv files) and then import it.

Importing Data loads measurement data from the specified file into the specified or default destination, depending on the data type selected. Selecting an Import Data menu key will not actually cause the importing to occur, since the analyzer still needs to know from where to get the data. Pressing the Open key in this menu brings up the Open dialog and Open menu that provides you with the options from where to recall the data. Once a filename has been selected or entered in the Open menu, the recall occurs as soon as the Open key is pressed.

Key Path	Recall
Mode	All
Notes	<p>The menu is built from whatever data types are available for the mode. Some keys will be missing completely, so the key locations in the sub-menu will vary.</p> <p>No SCPI command directly controls the Data Type that this key controls. The Data Type is included in the MMEMoRY:LOAD commands.</p>
Dependencies	If a file type is not used by a certain measurement, it is grayed out for that measurement. The key for a file type will not show at all if there are no measurements in the Mode that support it.



Preset	Is not affected by Preset or shutdown, but is reset during Restore Mode Defaults
Readback	The data type that is currently selected
Initial S/W Revision	Prior to A.02.00

**Trace**

This key selects Trace as the data type to be imported. When pressed a second time, it brings up the Trace Menu, which lets you select the Trace into which the data will be imported.

This key is grayed out when measurements are running that do not support trace importing.

For Vector Signal Analyzer Mode:

The trace data is loaded into the selected data register. Trace data registers are temporary storage places for trace data. They allow you to view past results next to current measurement results, and are also used in some functions like user defined filters. They are measurement global, so you can import data into a register while in the Digital Demod measurement and view it later while in the Vector measurement. Data registers are cleared when the measurement application is terminated, but not when you change Modes and return.

If the recalled file was saved with header information, the trace will initially be displayed with the same formatting and scaling as it had when it was saved. If headers are not saved, the scaling and format are set to defaults when the trace is recalled.

The following trace data formats may be imported:

- Text and comma-separated variable (CSV)
- Text
- SDF.

Option 200 also allows import of these additional formats:

- Matlab 4
- Matlab 5
- Matlab HDF5
- N5110A compatible binary

<b>Remote Command</b>	:MMEMory:LOAD:TRACe:DATA TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 , <filename>
Example	:MMEM:LOAD:TRAC DATA TRACE2,"myTrace2.csv" imports the 2nd trace from the file myTrace2.csv in the current path. The default path is My Documents\SA\data\traces
Key Path	<b>Recall, Data</b>

System Functions  
Recall

Notes	<p>For VSA Mode: The Open...dialog box has the following filter options when you are recalling trace data:</p> <ul style="list-style-type: none"> <li>• CSV (Comma delimited) (*.csv)</li> <li>• SDF (Fast) (*.sdf;*.dat)</li> <li>• Text (Tab delimited) (*.txt)</li> <li>• MAT-File (*.mat)</li> <li>• MAT-File (Version 4) (*.mat)</li> <li>• MAT-File (HDF5) (*.mat;*.hdf;*.h5)</li> <li>• N5110A Waveform (*.bin)</li> </ul> <p>The file format recalled depends on selection.</p>
Dependencies	<p>Trace data is not available from all Measurements. When unavailable, the key will be grayed out. The key will not show if no measurements in the Mode support it.</p> <p>If any error occurs while trying to load a file manually (as opposed to during remote operation), the analyzer returns to the Import Data menu and the File Open dialog goes away.</p>
Couplings	<p>When a trace is imported, <b>Trace Update</b> is always turned OFF for that trace and <b>Trace Display</b> is always turned ON.</p>
Readback	<p>Other than VSA: 1 2 3 4 5 6</p> <p>VSA: Data 1 Data 2 Data 3 Data 4 Data 5 Data 6</p>
Initial S/W Revision	Prior to A.02.00

### Trace 1, 2, 3, 4, 5, 6

Enables you to select which Trace to import the data into either 1, 2, 3, 4, 5 or 6. The default is the currently selected trace, which was selected in this menu or in the Trace/Det, Export Data, Recall Trace, or Save Trace menus. The exception is, if you have chosen All then it remains chosen until you specifically change it to a single trace.

Once selected, the key returns back to the Import Data menu and the selected Trace number is annotated on the key. Now you have selected exactly what needs to be imported. To trigger an import of the selected trace, you must select the Open key in the Import Data menu.

An example of using this menu is: If you select 4 and continue to the File Open dialog, then import Trace 4 from the file selected or entered in File Name option in the File Open dialog.

Key Path	<b>Recall, Data, Trace</b>
Initial S/W Revision	Prior to A.02.00

### Display in Selected Trace

In Vector Signal Analyzer Mode, data registers are used as temporary storage places for trace data.

A register may be displayed in any trace. If the Display in Selected Trace key is set to "Yes" then the data

register into which the file is recalled is then assigned to the currently selected trace.

Example	MMEM:LOAD:TRAC:DATA D1,"TRC1.TXT",TXT This command explicitly puts the data in the specified trace.
Key Path	<b>Recall, Data (Import), Trace (to)</b>
Mode	VSA
Initial S/W Revision	Prior to A.02.00

### Capture Buffer

Capture Buffer functionality is not available for all measurements. The captured data is raw data (unprocessed).

Example	MMEM:LOAD:CAPT "MyCaptureData.bin" This loads the file of capture data (on the default file directory path) into the instrument.
Key Path	<b>Recall, Data</b>
Mode	WCDMA
Dependencies	Capture buffer data is not available from all Measurements. When unavailable, the key will be grayed out. The key will not show if no measurements in the Mode support it.
Initial S/W Revision	Prior to A.02.00

### Zone map

A map file contains zone definitions that help simplify making measurements of frequently used signals. The OFDMA frame structure can contain multiple-zone definitions for the uplink and downlink subframes and multiple data burst allocations. You can recall map files in which you have saved complicated OFDMA frame analysis zone definitions. This can save you time and ensure the accuracy of repeat measurements. Map files are also useful for recreating measurement settings so they can be used by other users.

Example	MMEM:LOAD:ZMAP "MyZonemapFile.omf" This loads the file of zone map data (on the default file directory path) into the custom map.
Key Path	<b>Recall, Data</b>
Mode	OFDMA WIMAX
Dependencies	Zone map data is not available from all Measurements. When unavailable, the key will be grayed out. The key will not show if no measurements in the Mode support it.
Initial S/W Revision	Prior to A.02.00

**Recorded Data**

This allows you to recall previously saved, recorded data for analysis.

This feature is only available with 89601X VSA Option 200 and Option G01.

Example	MMEM:LOAD:REC "MyRecording.sdf"
Key Path	<b>Recall, Data (Import)</b>
Mode	VSA
Notes	<p>Available file types are:</p> <ul style="list-style-type: none"> <li>• CSV (Comma delimited) (*.csv)</li> <li>• MAT-File (*.mat)</li> <li>• MAT-File (Version 4) (*.mat)</li> <li>• MAT-File (HDF5) (*.mat;*.hdf;*.h5)</li> <li>• N5110A Waveform (*.bin)</li> <li>• SDF (Fast) (*.sdf;*.dat)</li> <li>• SDF (Export) (*.sdf;*.dat)</li> <li>• Text (Tab delimited) (*.txt)</li> </ul>
Initial S/W Revision	Prior to A.02.00

**Open...**

Accesses the standard Windows File Open dialog and the File Open key menu. When you navigate to this selection, you have already determined you are recalling a specific Data Type and now you want to specify which file to open.

When you first enter this dialog, the path in the Look In: field depends on which import data type you selected.

The only files that are visible are those specific to the file type being recalled.

Key Path	<b>Recall, Data</b>
Notes	<p>The key location is mode-dependent and will vary.</p> <p>Brings up Open dialog for recalling a &lt;mode specific&gt; Save Type</p>
Initial S/W Revision	Prior to A.02.00

**Open**

The import starts by checking for errors. Then the import can start. For all data types, the actual import starts by aborting the currently running measurement. Then the import does data type specific behavior:

**File Open Dialog and Menu**

The **File Open** is a standard Windows dialog and has a **File Open** key menu. Each key in this menu

corresponds to the selectable items in the **File Open** dialog box. The menu keys can be used for easy navigation between the selections within the dialog or the standard **Tab** and **Arrow** keys can be used for dialog navigation. When you navigate to this selection, you have already limited the file recall type and now you want to specify which file to open.

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

### Open

This selection and the **Enter** key, when a filename has been selected or specified, cause the load to occur. **Open** loads the specified or selected file to the previously selected recall type of either **State** or a specific import data type.

Notes	Advisory Event "File <file name> recalled" after recall is complete.
Initial S/W Revision	Prior to A.02.00

### File/Folder List

This menu key navigates to the center of the dialog that contains the list of files and folders. Once here you can get information about the file.

Key Path	<b>Recall, &lt;various&gt;, Open...</b>
Notes	Pressing this key navigates you to the files and folders list in the center of the dialog.
Initial S/W Revision	Prior to A.02.00

### Sort

Accesses a menu that enables you to sort the files within the File Open dialog. Only one sorting type can be selected at a time and the sorting happens immediately.

Key Path	<b>Recall, &lt;various&gt;, Open...</b>
Notes	No SCPI command directly controls the sorting.
Initial S/W Revision	Prior to A.02.00

### By Date

Accesses a menu that enables you to sort the list of files within the scope of the File Open dialog in ascending or descending data order. The date is the last data modified.

Key Path	<b>Recall, &lt;various&gt;, Open..., Sort</b>
Notes	Files in the File Open dialog are sorted immediately in the selected order
Initial S/W Revision	Prior to A.02.00

**Recall****By Name**

Accesses a menu that enables you to sort the list of files within the scope of the File Open dialog in ascending or descending order based on the filename.

Key Path	<b>Recall, &lt;various&gt;, Open..., Sort</b>
Notes	Files in the File Open dialog are sorted immediately in the selected order
Initial S/W Revision	Prior to A.02.00

**By Extension**

Accesses a menu that enables you to sort the list of files within the scope of the File Open dialog in ascending or descending order based on the file extension for each file.

Key Path	<b>Recall, &lt;various&gt;, Open..., Sort</b>
Notes	Files in the File Open dialog are sorted immediately in the selected order
Initial S/W Revision	Prior to A.02.00

**By Size**

Accesses a menu that enables you to sort the list of files within the scope of the File Open dialog in ascending or descending order based on file size.

Key Path	<b>Recall, &lt;various&gt;, Open..., Sort</b>
Notes	Files in File Open dialog are sorted immediately in the selected order
Initial S/W Revision	Prior to A.02.00

**Ascending**

This causes the display of the file list to be sorted, according to the sort criteria, in ascending order.

Key Path	<b>Recall, &lt;various&gt;, Open..., Sort</b>
Notes	Files in File Open dialog are sorted immediately in the selected order
Initial S/W Revision	Prior to A.02.00

**Descending**

This causes the display of the file list to be sorted, according to the sort criteria, in descending order.

Key Path	<b>Recall, &lt;various&gt;, Open..., Sort</b>
Notes	Files in File Open dialog are sorted immediately in the selected order
Initial S/W Revision	Prior to A.02.00

## Files Of Type

This menu key corresponds to the Files Of Type selection in the dialog. It follows the standard Windows supported Files Of Type behavior. It shows the current file suffix that corresponds to the type of file the user has selected to save. If you navigated here from recalling State, "State File (\*.state)" is in the dialog selection and is the only type available in the pull down menu. If you navigated here from recalling Trace, "Trace+State File (\*.trace)" is in the dialog selection and is the only type available under the pull down menu.

If you navigated here from importing a data file, the data types available will be dependent on the current measurement and the selection you made under "Import Data". For example:

Amplitude Corrections: pull down menu shows

Amplitude Corrections (\*.csv)

Legacy Cable Corrections (\*.cbl)

Legacy User Corrections (\*.amp)

Legacy Other Corrections (\*.oth)

Legacy Antenna Corrections (\*.ant)

Limit: pull down menu shows

Limit Data (\*.csv)

Legacy Limit Data (\*.lim)

Trace: pull down menu shows

Trace Data (\*.csv)

Key Path	<b>Recall, &lt;various&gt;, Open...</b>
Notes	Pressing this key causes the pull down menu to list all possible file types available in this context.
Initial S/W Revision	Prior to A.02.00

## Up One Level

This menu key corresponds to the icon of a folder with the up arrow that is in the tool bar of the dialog. It follows the standard Windows supported Up One Level behavior. When pressed, it directs the file and folder list to navigate up one level in the directory structure.

Key Path	<b>Recall, &lt;various&gt;, Open...</b>
Notes	When pressed, the file and folder list is directed up one level of folders and the new list of files and folders is displayed.
Initial S/W Revision	Prior to A.02.00

## System Functions

### Recall

#### Cancel

Cancels the current File Open request. It follows the standard Windows supported Cancel behavior.

Key Path	<b>Recall, &lt;various&gt;, Open...</b>
Notes	Pressing this key causes the Open dialog to go away and auto return.
Initial S/W Revision	Prior to A.02.00



---

## Save

Accesses a menu that provides the save type options. The **Save Type** options are **State**, **Trace**, **Data**, or a **Screen Image** depending on the active mode.

Key Path	<b>Save</b>
Mode	All
Notes	No remote command for this key specifically.
Initial S/W Revision	Prior to A.02.00

### State

Selects **State** as the save type and accesses a menu that provides the options of where to save. You can save either to a register or a file. This menu key will not actually cause the save until the location is chosen.

Saving the state is the only way to save this exact measurement context for the current active mode. The entire state of the active mode is saved in a way that when a recall is requested, the mode will return to as close as possible the context in which the save occurred. This includes all settings and data for only the current active mode.

It should be noted that the Input/Output settings will be saved when saving State, since these settings plus the state of the mode best characterize the current context of the mode, but the mode independent System settings will not be saved.

For rapid saving, the State menu lists registers to save to, or you can select a file to save to. Once they select the destination of the save in the State menu, the save will occur.

Key Path	<b>Save</b>
Mode	All
Example	MMEM:STOR:STATe "MyStateFile.state"  This stores the current instrument state data in the file MyStateFile.state in the default directory.
Notes	See <a href="#">“Save” on page 211</a> .
Initial S/W Revision	Prior to A.02.00

### Register 1 thru Register 6

Selecting any one of these register menu keys causes the State of the currently active mode to be saved to the specified Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified.

These 6 registers are all that is available from the front panel for all modes in the instrument. There are not 6 registers available for each mode. From remote, 127 Registers are available. Registers are files that

System Functions  
**Save**

are visible to the user in the My Documents\System folder.

Key Path	<b>Save, State</b>
Mode	All
Example	*SAV 1
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Save, State</b>
Mode	All
Example	*SAV 2
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Save, State</b>
Mode	All
Example	*SAV 3
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Save, State</b>
Mode	All
Example	*SAV 4
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Save, State</b>
Mode	All
Example	*SAV 5
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Save, State</b>
Mode	All
Example	*SAV 6
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

### To File . . .

Accesses a menu that enables you to select the location for saving the State. This menu is similar to a standard Windows® **Save As** dialog.

The default path for all State Files is:

My Documents\<<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer). This path is the **Save In:** path in the **Save As** dialog for all State Files when they first enter this dialog.

Key Path	<b>Save, State</b>
Mode	All
Notes	Brings up Save As dialog for saving a State Save Type
Initial S/W Revision	Prior to A.02.00

### Save As . . .

Accesses a menu that enables you to select the location where you can save the State. This menu is a standard Windows® dialog with Save As menu keys. The "File Name" field in the Save As dialog is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name softkey. See the Quick Save key documentation for more on the automatic file naming algorithm.

The default path for all State Files is:

My Documents\<<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

When you first enter this dialog, the path in the **Save In:** field depends on the data type. The only files that are visible are the \*.state files and the Save As type is \*.state, since .state is the file suffix for the State Save Type.

Key Path	<b>Save, State</b>
Mode	All

System Functions  
**Save**

Notes	Brings up Save As dialog for saving a State Save Type
Initial S/W Revision	Prior to A.02.00

**Save**

Saves all of the State of the currently active mode plus the system level Input/Output settings to the specified file.

While the save is being performed, the floppy icon shows up in the settings bar near the Continuous/Single sweep icon. After the save completes, the Advisory Event "File <register number> saved" is displayed.

Key Path	<b>Save, State, To File...</b>
Mode	All
<b>Remote Command</b>	:MMEMory:STORe:STATe <filename>
Example	:MMEM:STOR:STAT "myState.state" saves the file myState.state on the default path
Notes	If the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote.  Auto return to the State menu and the Save As dialog goes away.
Backwards Compatibility SCPI	For a backwards compatibility only, the following parameters syntax is supported:  :MMEMory:STORe:STATe 1,<filename>  The "1" is just ignored.  The command is sequential.
Initial S/W Revision	Prior to A.02.00

**Trace (+State)**

Selects a state file which includes trace data for recalling as the save type and accesses a menu that enables you to select which trace to save. You can save to either a register or a file. Not all modes support saving trace data with the state, and for modes that do, not all measurements do. This key is grayed out for measurements that do not support trace saves. It is blanked for modes that do not support trace saves. Saving **Trace** is identical to saving State except a .trace extension is used on the file instead of .state, and internal flags are set in the file indicating which trace was saved. You may also select to save ALL traces.

This key will not actually cause the save, since the save feature still needs to know which trace to save and where to save it. Pressing this key accesses the Save Trace menu that provides the user with these options.

For rapid saving, the Trace menu lists registers to save to, or you can select a file to save to. Once you

pick the destination of the save in the Trace menu, the save will occur.

Key Path	<b>Save</b>
Mode	SA
Example	MMEM:STOR:STATe TRACE2,"MyTraceFile.trace" This stores trace 2 data in the file MyTraceFile.trace in the default directory. :MMEM:STOR:TRAC:REG TRACE1,2 stores trace 1 data in trace register 2 :MMEM:STOR:TRAC:REG ALL,3 saves the data for all 6 traces in trace register 3
Notes	See <a href="#">"Save" on page 211</a> .
Initial S/W Revision	Prior to A.02.00

### Register 1 thru Register 5

Selecting any one of these register menu keys causes the Trace(s) specified under From Trace, along with the state of the currently active mode, to be saved to the specified Trace Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified.

These 5 trace registers are all that is available for all modes in the instrument. At present, only the Swept SA measurement of the Spectrum Analyzer mode supports saving to Trace+State files. Registers are files that are visible to the user in the My Documents\System folder.

Key Path	<b>Save, Trace</b>
Mode	SA
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Save, Trace</b>
Mode	SA
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Save, Trace</b>
Mode	SA
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

Key Path	<b>Save, Trace</b>
Mode	SA
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Save, Trace</b>
Mode	SA
Readback	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision	Prior to A.02.00

### From Trace

Accesses a menu that enables you to select the trace to be saved. Once a trace is selected, the key returns to the Save Trace menu and the selected trace number is annotated on the key. The default is the currently selected trace, selected in this menu or in the Trace/Det, Export Data, Import Data or Recall Trace menus, except if you have chosen All then it remains chosen until you specifically change it to a single trace. To save the Trace you must select **Save As**.

These keys let you pick which trace to save. Now you have selected exactly what needs to be saved. To trigger a save of the selected **Trace**, you must select the **Save As** key in the Save Trace menu.

Key Path	<b>Save, Trace + State</b>
Mode	SA
Initial S/W Revision	Prior to A.02.00

### Save As . . .

This menu lets you select the location where you can save the Trace. It is a standard Windows® dialog with Save As menu keys.

The "File Name" field in the Save As dialog is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name softkey. See the Quick Save key documentation for more on the automatic file naming algorithm.

The default path for all State Files including .trace files is:

My Documents\<<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

When you first enter this dialog, the path in the Save In: field depends on the data type. The only files

that are visible are the \*.trace files and the Save As type is \*.trace, since .trace is the file suffix for the Trace Save Type.

Key Path	<b>Save, Trace (+State)</b>
Mode	SA
Notes	Brings up the Save As dialog for saving a Trace Save Type
Initial S/W Revision	Prior to A.02.00

## Save

This key initiates the save of the .trace file. All of the State of the currently active mode plus the system level Input/Output settings are saved to the specified file as well as all of the trace data, including internal flags set in the file indicating which trace is to be saved.

While the save is being performed, the floppy icon shows up in the settings bar near the Continuous/Single sweep icon. After the save completes, the Advisory Event "File <register number> saved" is displayed.

Key Path	<b>Save, Trace, Save As...</b>
Mode	SA
<b>Remote Command</b>	<pre>:MMEMory:STORe:TRACe TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6   ALL, &lt;filename&gt; &gt;  :MMEMory:STORe:TRACe:REGister TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6   ALL, &lt;integer&gt;</pre>
Example	<pre>:MMEM:STOR:TRAC TRACE1, "myState.trace" saves the file myState.trace on the default path and flags it as a "single trace" file with Trace 1 as the single trace (even though all of the traces are in fact stored).  :MMEM:STOR:TRAC ALL, "myState.trace" saves the file myState.trace on the default path and flags it as an "all traces" file  :MMEM:STOR:TRAC:REG TRACE1,2 stores trace 1 data in trace register 2</pre>
Notes	<p>Some modes and measurements do not have available all 6 traces. The Phase Noise mode command, for example, is: MMEMory:STORe:TRACe TRACE1 TRACE2 TRACE3 ALL,&lt;filename&gt;</p> <p>This command actually performs a save state, which in the Swept SA measurement includes the trace data. However it flags it (in the file) as a "save trace" file of the specified trace (or all traces).</p> <p>The range for the register parameter is 1–5</p> <p>If the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during a instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote.</p> <p>Auto return to the State menu and the Save As dialog goes away.</p>

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Data (Export)

Exporting a data file stores data from the current measurement to mass storage files. The Export Menu only contains data types that are supported by the current measurement.

Since the commonly exported data files are in .csv format, the data can be edited by you prior to importing. This allows you to export a data file, manipulate the data in Excel (the most common PC Application for manipulating .csv files) and then import it.

Selecting an Export Data menu key will not actually cause the exporting to occur, since the analyzer still needs to know where you wish to save the data. Pressing the Save As key in this menu brings up the Save As dialog and Save As menu that allows you to specify the destination file and directory. Once a filename has been selected or entered in the Open menu, the export will occur as soon as the Save key is pressed.

Key Path	<b>Save</b>
Mode	All
Notes	The menu is built from whatever data types are available for the mode. So the key locations in the sub menu will vary.  No SCPI command directly controls the Data Type that this key controls. The Data Type is included in the MMEM:STORe commands.
Dependencies	If a file type is not used by a certain measurement, that type is grayed out for that measurement. The key for a file type will not show at all if there are no measurements in the Mode that support it.
Preset	Is not affected by a Preset or shutdown, but is reset during Restore Mode Defaults
Readback	The data type that is currently selected
Initial S/W Revision	Prior to A.02.00

## Trace

Enables you to select Traces as the data type to be exported. Pressing this key when it is already selected brings up the Trace menu, which allows you to select which Trace to save.

The trace file contains “meta” data, which describes the current state of the analyzer.

Key Path	<b>Save, Data</b>
<b>Remote Command</b>	:MMEMory:STORe:TRACe:DATA TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6   ALL, <filename >



Example	:MMEM:STOR:TRAC:DATA TRACE2,"myTrace2.csv" exports the 2nd trace to the file myTrace2.csv in the current path. The default path is My Documents\SA\data\traces  VSA Example: MMEM:STOR:TRAC:DATA TRACE1,"Trc1.txt",TXT,ON
Notes	If the save is initiated via SCPI, and the file already exists, the file will be overwritten.  Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade.  Both single and double quotes are supported for any filename parameter over SCPI.
Dependencies	Trace data is not available from all Measurements. When unavailable, the key will be grayed out. The key will not show if no measurements in the Mode support it.
Readback	Swept SA: 1 2 3 4 5 6 ALL  Analog Demod Mode: RF Spectrum Demod Demod Ave Demod Max Demod Min AF Spectrum  Vector Signal Analyzer: Trace 1 Trace 2 with header Trace 2 Trace 2 with header Trace 3 Trace 3 with header Trace 4 Trace 4 with header Trace 5 Trace 5 with header Trace 6 Trace 6 with header
Initial S/W Revision	Prior to A.02.00

### Trace selection

Enables you to select which Trace to save. The traces may have names, or they may be labeled 1, 2, 3, 4, 5, or 6, depending on the current mode. Once selected, the key returns back to the Export Data menu and the selected trace name/number is annotated on the key. The default is the currently selected trace, selected in this menu or in the Trace/Det, Import Data, Recall Trace or Save Trace menus. The exception is, if you have chosen All then it remains chosen until you specifically change it to a single trace.

To trigger a save of the selected trace, you must select the Save As key in the Export Data menu.

Some measurements have an "ALL" selection. This saves all six traces in one .csv file with the x-axis data in the first column and the individual trace data in succeeding columns. The header data and x-axis data in this file reflect the current settings of the measurement. Note that any traces which are in View or Blank may have different x-axis data than the current measurement settings, but this data will not be output to the file.

Key Path	<b>Save, Data, Trace</b>
Mode	SA Analog Demod VSA
Preset	The first trace key shown.
Initial S/W Revision	Prior to A.02.00

### Include Header

The trace header information includes enough state information to display the trace data with the same

System Functions  
**Save**

formatting and scaling when it is recalled. However, no other instrument state information is saved. If headers are not saved, the scaling and format are set to defaults when the trace is recalled.

Example	MMEM:STOR:TRAC:DATA TRACE1,"Trc1.txt",TXT,ON  The On/Off setting is the last variable passed in the MMEMory:STORe:TRACe:DATA command.
Key Path	<b>Save, Data, Trace</b>
Mode	VSA
Preset	On
Initial S/W Revision	Prior to A.02.00

**Measurement Results**

Different types of results are available for each particular measurement. The results that are available are documented under the individual measurements. These measurement results are the same as the results that are returned when using the MEASure:<measurement> command (usually for sub-opcode 1).

Measurement results may not be available for all measurements.

Example	MMEM:STOR:RES "MyResultsFile.xml"  This stores the measurement results data in the file MyResultsFile.xml in the default directory.
Key Path	<b>Save, Data</b>
Mode	SA ADEMOD BASIC(IQ Analyzer) CDMA2K GSMEDGE PNOISE WCDMA WIMAXOFDMA TDS CDMA
Notes	The key will not show if no measurements in the Mode support it.
Initial S/W Revision	Prior to A.02.00

**Capture Buffer**

Capture Buffer functionality is not available for all measurements. The captured data is raw data (unprocessed).

Example	MMEM:STOR:CAPT "MyCaptureData.bin"  This stores the capture data in the file MyCaptureData.bin in the default directory.
Key Path	<b>Save, Data</b>
Mode	WCDMA
Notes	The key will not show if no measurements in the Mode support it.
Initial S/W Revision	Prior to A.02.00

## Zone map

A map file contains zone definitions that will help simplify making measurements of frequently used signals. The OFDMA frame structure can contain multiple-zone definitions for the uplink and downlink subframes and multiple data burst allocations. You can store map files in which you have saved complicated OFDMA frame analysis zone definitions. This can save you time and ensure the accuracy of repeated measurements. map files are also useful for recreating measurement settings so they can be used by other users.

Example	MMEM:STOR:ZMAP "MyZonemapFile.omf" This stores the zone map data in the file MyZonemapFile.omf in the default directory.
Key Path	<b>Save, Data</b>
Mode	OFDMA WiMAX
Notes	The key will not show if no measurements in the Mode support it.
Initial S/W Revision	Prior to A.02.00

## Recorded Data

Saving recorded data is not available for all measurements. Recorded data, and the optional header info, may be recalled later (or transferred to another instrument) for analysis.

This function is available in 89601X VSA Option 200, but not in Option 205.

Example	MMEM:STOR:REC "MyRecording.sdf",SDF,ON,ON,OFF
Key Path	<b>Save, Data (Export)</b>
Mode	VSA
Notes	Grayed out unless there is recorded data in the buffer.
Initial S/W Revision	Prior to A.02.00

## Save As . . .

This menu lets you select the location where you can save Data Type files. It is a standard Windows® dialog with Save As menu keys. The "File Name" field in the Save As dialog is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name key. See the Quick Save key documentation for more on the automatic file naming algorithm.

When you first enter this dialog, the path in the Save In: field depends on the data type. The only files that are visible are the files with the corresponding data type suffix, and the **Save As** type lists the same suffix.

For example, if the Data Type is **Amplitude Corrections**, the file suffix is .csv and the \*.csv files are the only visible files in the **Save As** dialog and .csv is the Save As Type.

The default path for saving files is:

## System Functions

### Save

For all of the Trace Data Files:

My Documents\<<mode name>\data\traces

For all of the Limit Data Files:

My Documents\<<mode name>\data\limits

For all of the Measurement Results Data Files:

My Documents\<<mode name>\data\<<measurement name>\results

For all of the Capture Buffer Data Files:

My Documents\<<mode name>\data\captureBuffer

Key Path	Save, Data
Mode	All
Notes	The key location is mode-dependent and will vary. Brings up the Save As dialog for saving a <mode specific> Save Type
Initial S/W Revision	Prior to A.02.00

### Save

Saves the specified Data Type. This section describes any specific save behavior relevant to Data that is common to all modes.

When a Save of a specific Data File is requested, the specified data is saved to the specified or selected file. The save is performed immediately and does not wait until the measurement is complete.

If the file already exists, a dialog will appear that allows you to replace the existing file by selecting **OK** or you can **Cancel** the request.

While the save is being performed, the floppy icon will show up in the settings bar near the Continuous/Single icon. After a register save completes, the corresponding register softkey annotation is updated with the date the time and an advisory message that the file was saved appears in the message bar.

Key Path	Save, Data, Save As...
Notes	If the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during a instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote.
Initial S/W Revision	Prior to A.02.00

### Screen Image


Accesses a menu of functions that enable you to specify a format and location for the saved screen image.

Pressing Screen Image brings up a menu that allows you to specify the color scheme of the Screen Image

(Themes) or navigate to the Save As dialog to perform the actual save.

Screen Image files contain an exact representation of the analyzer display. They cannot be loaded back onto the analyzer, but they can be loaded into your PC for use in many popular applications.

The image to be saved is actually captured when the **Save** front panel key is pressed, and kept in temporary storage to be used if the user asks for a Screen Image save. When the Screen Image softkey is pressed, a "thumbnail" of the captured image is displayed, as shown below:

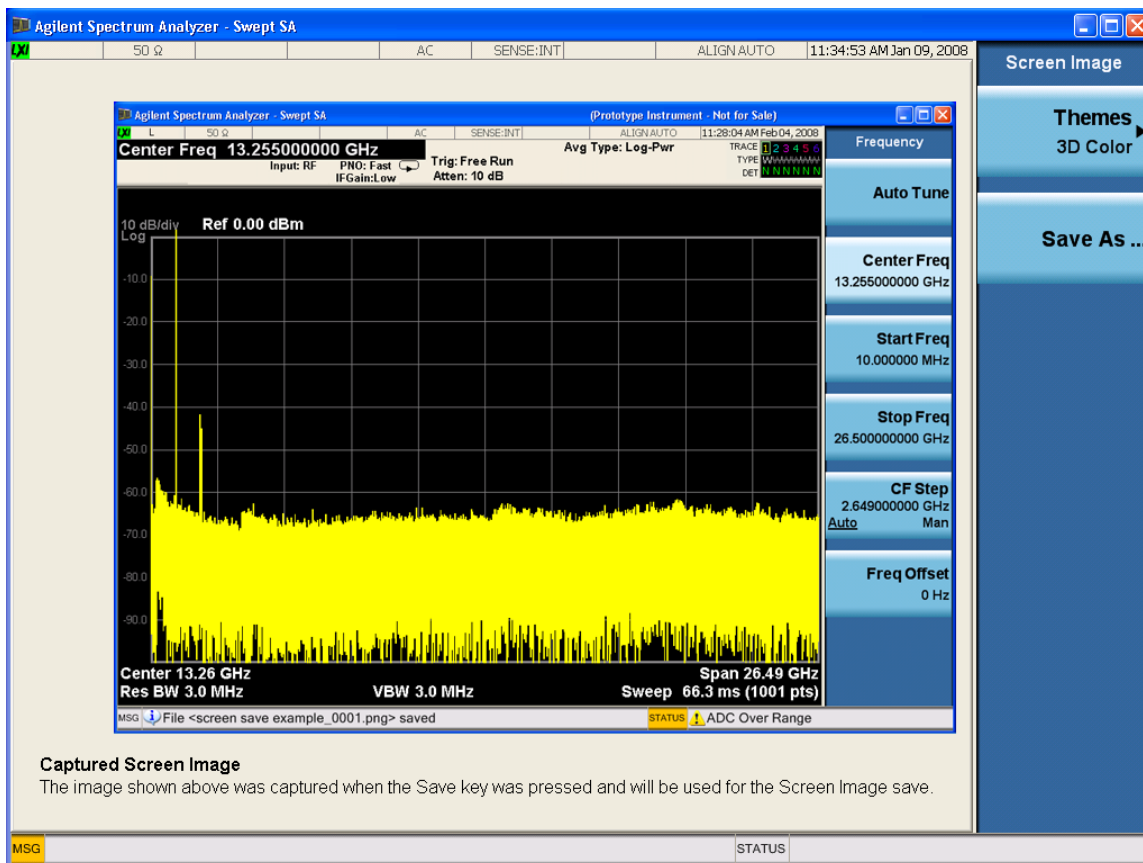

When you continue on into the **Save As** menu and complete the Screen Image save, the image depicted in the thumbnail is the one that gets saved, showing the menus that were on the screen before going into the **Save** menus.

After you have completed the save, the **Quick Save** front-panel key lets you quickly repeat the last save performed, using an auto-named file, with the current screen data.

---

**NOTE** For versions previous to A.01.55, if you initiate a screen image save by navigating through the Save menus, the image that is saved will contain the Save menu softkeys, not the menus and the active function that were on the screen when you first pressed the Save front panel key.

---

Key Path	Save
----------	------

## System Functions

### Save

Mode	All
Example	MMEM:STOR:SCR "MyScreenFile.png" This stores the current screen image in the file MyScreenFile.png in the default directory.
Notes	See
Initial S/W Revision	Prior to A.02.00

### Themes

Accesses a menu of functions that enable you to choose the theme to be used when saving the screen image.

The **Themes** option is the same as the **Themes** option under the **Display** and **Page Setup** dialogs. It allows you to choose between themes to be used when saving the screen image.

Key Path	<b>Save, Screen Image</b>
Remote Command	:MMEMory:STORe:SCReen:THEME TDCOLOR   TDMonochrome   FCOLOR   FMONochrome :MMEMory:STORe:SCReen:THEME?
Example	:MMEM:STOR:SCR:THEM TDM
Preset	3D Color; Is not part of Preset, but is reset by Restore Misc Defaults or Restore System Defaults All and survives subsequent running of the modes.
Readback	3D Color   3D Mono   Flat Color   Flat Mono
Initial S/W Revision	Prior to A.02.00

### 3D Color

Selects a standard color theme with each object filled, shaded and colored as designed.

Key Path	<b>Save, Screen Image, Themes</b>
Example	MMEM:STOR:SCR:THEM TDC
Readback	3D Color
Initial S/W Revision	Prior to A.02.00

### 3D Monochrome

Selects a format that is like 3D color but shades of gray are used instead of colors.

Key Path	<b>Save, Screen Image, Themes</b>
Example	MMEM:STOR:SCR:THEM TDM
Readback	3D Mono

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Flat Color

Selects a format that is best when the screen is to be printed on an ink printer.

Key Path	<b>Save, Screen Image, Themes</b>
Example	MMEM:STOR:SCR:THEM FCOL
Readback	Flat Color
Initial S/W Revision	Prior to A.02.00

### Flat Monochrome

Selects a format that is like Flat Color. But only black is used (no colors, not even gray), and no fill.

Key Path	<b>Save, Screen Image, Themes</b>
Example	MMEM:STOR:SCR:THEM FMON
Readback	Flat Mono
Initial S/W Revision	Prior to A.02.00

### Save As...

Accesses a menu that enables you to select the location where you can save the Screen Image. This menu is a standard Windows® dialog with Save As menu keys. The **Save As** dialog is loaded with the file information related to the Screen Image Type. The filename is filled in using the auto file naming algorithm for the Screen Image Type and is highlighted. The only files that are visible are the \*.png files and the Save As Type is \*.png, since .png is the file suffix for the Screen Image Type.

The default path for Screen Images is

My Documents\<<mode name>\screen.

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

This path is the **Save In:** path in the **Save As** dialog for all Screen Files when you first enter this dialog.

Key Path	<b>Save, Screen Image</b>
Notes	Brings up Save As dialog for saving a Screen Image Save Type
Initial S/W Revision	Prior to A.02.00

### Save

Saves the screen image to the specified file using the selected theme. The image that is saved is the measurement display prior to when the **Save As** dialog appeared. The save is performed immediately

System Functions  
**Save**

and does not wait until the measurement is complete.

Key Path	<b>Save, Screen Image, Save As...</b>
<b>Remote Command</b>	:MMEMory:STORe:SCReen <filename>
Example	:MMEM:STOR:SCR "myScreen.png"
Notes	<p>If the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during a instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote.</p> <p>Auto return to the Screen Image menu and the Save As dialog goes away.</p> <p>Advisory Event "File &lt;file name&gt; saved" after save is complete.</p>
Initial S/W Revision	Prior to A.02.00

**Save As . . .**

Accesses a standard Windows dialog with the **Save As** key menu. The "File Name" field in the Save As dialog is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name key. See the Quick Save key documentation for more on the automatic file naming algorithm.

The **Save As** dialog has the last path loaded in **Save In:** for this particular file type. User specified paths are remembered and persist through subsequent runs of the mode. These remembered paths are mode specific and are reset back to the default using **Restore Mode Defaults**.

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

**Save**

Performs the actual save to the specified file of the selected type. The act of saving does not affect the currently running measurement and does not require you to be in single measurement mode to request a save. It performs the save as soon as the currently running measurement is in the idle state; when the measurement completes. This ensures the State or Data that is saved includes complete data for the current settings. The save only waits for the measurement to complete when the state or data that depends on the measurement setup is being saved. The save happens immediately when exporting corrections or when saving a screen image.

If the file already exists, a dialog appears with corresponding menu keys that allow you to replace the existing file with an **OK** or to **Cancel** the request.

While the save is being performed, the floppy icon shows up in the settings bar near the Continuous/Single icon. After the save completes, the corresponding register menu key annotation is



updated with the date the time and the message "File <file name> saved" appears in the message bar.

Notes	If the file already exists, the File Exist dialog appears and allows you to replace it or not by selecting the Yes or No menu keys that appear with the dialog. Then the key causes an auto return and Save As dialog goes away.  Advisory Event "File <file name> saved" after save is complete.
Initial S/W Revision	Prior to A.02.00

### File/Folder List

Enables you to navigate to the center of the dialog that contains the list of files and folders. Once here you can get information about the file.

Key Path	<b>Save, &lt;various&gt;, Save As...</b>
Notes	Pressing this key enables you to navigate to the files and folders list in the center of the dialog.
Initial S/W Revision	Prior to A.02.00

### File Name

Accesses the Alpha Editor. Use the knob to choose the letter to add and the Enter front-panel key to add the letter to the file name. In addition to the list of alpha characters, this editor includes a **Space** key and a **Done** key. The **Done** key completes the filename, removes the Alpha Editor and returns back to the **File Open** dialog and menu, but does not cause the save to occur. You can also use **Enter** to complete the file name entry and this will cause the save to occur.

Key Path	<b>Save, &lt;various&gt;, Save As...</b>
Notes	Brings up the Alpha Editor. Editor created file name is loaded in the File name field of the Save As dialog.
Initial S/W Revision	Prior to A.02.00

### Save As Type

This key corresponds to the **Save As Type** selection in the dialog. It follows the standard Windows® supported **Save As Type** behavior. It shows the current file suffix that corresponds to the type of file you have selected to save. If you navigated here from saving State, "State File (\*.state)" is in the dialog selection and is the only type available under the pull down menu. If you navigated here from saving Trace, "Trace+State File (\*.trace)" is in the dialog selection and is the only type available under the pull down menu. If you navigated here from exporting a data file, "Data File (\*.csv)" is in the dialog and is available in the pull down menu. Modes can have other data file types and they would also be listed in the pull down menu.

Key Path	<b>Save, &lt;various&gt;, Save As...</b>
Notes	Pressing this key causes the pull down menu to list all possible file types available in this context. All types available are loaded in a 1-of-N menu key for easy navigation.

## System Functions

### Save

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

#### Up One Level

This key corresponds to the icon of a folder with the up arrow that is in the tool bar of the dialog. It follows the standard Windows® supported **Up One Level** behavior. When pressed, it causes the file and folder list to navigate up one level in the directory structure.

Key Path	<b>Save, &lt;various&gt;, Save As...</b>
Notes	When pressed, the file and folder list is directed up one level of folders and the new list of files and folders is displayed
Initial S/W Revision	Prior to A.02.00

#### Create New Folder

This key corresponds to the icon of a folder with the "\*" that is in the tool bar of the dialog. It follows the standard Windows® supported **Create New Folder** behavior. When pressed, a new folder is created in the current directory with the name **New Folder** and allows you to enter a new folder name using the Alpha Editor.

Key Path	<b>Save, &lt;various&gt;, Save As...</b>
Notes	Creates a new folder in the current folder and lets the user fill in the folder name using the Alpha Editor.
Initial S/W Revision	Prior to A.02.00

#### Cancel

This key corresponds to the **Cancel** selection in the dialog. It follows the standard Windows supported **Cancel** behavior. It causes the current **Save As** request to be cancelled.

Key Path	<b>Save, &lt;various&gt;, Save As...</b>
Notes	Pressing this key causes the Save As dialog to go away and auto return.
Initial S/W Revision	Prior to A.02.00

## Mass Storage Catalog (Remote Command Only)

<b>Remote Command:</b>	:MMEMory:CATalog? [<directory_name>]
Notes:	<p>The string must be a valid logical path.</p> <p>Query disk usage information (drive capacity, free space available) and obtain a list of files and directories in a specified directory in the following format:</p> <p>&lt;numeric_value&gt;,&lt;numeric_value&gt;,{&lt;file_entry&gt;}</p> <p>It shall return two numeric parameters and as many strings as there are files and directories. The first parameter shall indicate the total amount of storage currently used in bytes. The second parameter shall indicate the total amount of storage available, also in bytes. The &lt;file_entry&gt; is a string. Each &lt;file_entry&gt; shall indicate the name, type, and size of one file in the directory list:</p> <p>&lt;file_name&gt;,&lt;file_type&gt;,&lt;file_size&gt;</p> <p>As windows file system has an extension that indicates file type, &lt;file_type&gt; is always empty. &lt;file_size&gt; provides the size of the file in bytes. In case of directories, &lt;file_entry&gt; is surrounded by square brackets and both &lt;file_type&gt; and &lt;file_size&gt; are empty.</p>
Initial S/W Revision:	Prior to A.02.00

## Mass Storage Change Directory (Remote Command Only)

<b>Remote Command:</b>	:MMEMory:CDIRectory [<directory_name>] :MMEMory:CDIRectory?
Notes:	<p>The string must be a valid logical path.</p> <p>Changes the default directory for a mass memory file system. The &lt;directory_name&gt; parameter is a string. If no parameter is specified, the directory is set to the *RST value.</p> <p>At *RST, this value is set to the default user data storage area, that is defined as System.Environment.SpecialFolder.Personal.</p> <p>Query returns full path of the default directory.</p>
Initial S/W Revision:	Prior to A.02.00

## Mass Storage Copy (Remote Command Only)

<b>Remote Command:</b>	:MMEMory:COPY <string>,<string>[,<string>,<string>]
------------------------	---

Notes:	<p>The string must be a valid logical path.</p> <p>Copies an existing file to a new file or an existing directory to a new directory.</p> <p>Two forms of parameters are allowed. The first form has two parameters. In this form, the first parameter specifies the source, and the second parameter specifies the destination.</p> <p>The second form has four parameters. In this form, the first and third parameters specify the source. The second and fourth parameters specify the directories. The first pair of parameters specifies the source. The second pair specifies the destination. An error is generated if the source doesn't exist or the destination file already exists.</p>
--------	---

### Mass Storage Delete (Remote Command Only)

<b>Remote Command:</b>	:MMEMory:DElete <file_name>[,<directory_name>]
Notes:	<p>The string must be a valid logical path.</p> <p>Removes a file from the specified directory. The &lt;file_name&gt; parameter specifies the file name to be removed.</p>
Initial S/W Revision:	Prior to A.02.00

### Mass Storage Data (Remote Command Only)

Creates a file containing the specified data OR queries the data from an existing file.

<b>Remote Command:</b>	<p>:MMEMory:DATA &lt;file_name&gt;, &lt;data&gt;</p> <p>:MMEMory:DATA? &lt;file_name&gt;</p>
Notes:	<p>The string must be a valid logical path.</p> <p>The command form is MMEMory:DATA &lt;file_name&gt;,&lt;data&gt;. It loads &lt;data&gt; into the file &lt;file_name&gt;. &lt;data&gt; is in 488.2 block format. &lt;file_name&gt; is string data.</p> <p>The query form is MMEMory:DATA? &lt;file_name&gt; with the response being the associated &lt;data&gt; in block format.</p>
Initial S/W Revision:	Prior to A.02.00

### Mass Storage Make Directory (Remote Command Only)

<b>Remote Command:</b>	:MMEMory:MDIRectory <directory_name>
Notes:	The string must be a valid logical path.  Creates a new directory. The <directory_name> parameter specifies the name to be created.
Initial S/W Revision:	Prior to A.02.00

### Mass Storage Move (Remote Command Only)

<b>Remote Command:</b>	:MMEMory:MOVE <string>, <string> [, <string>, <string>]
Notes:	The string must be a valid logical path.  Moves an existing file to a new file or an existing directory to a new directory.  Two forms of parameters are allowed. The first form has two parameters. In this form, the first parameter specifies the source, and the second parameter specifies the destination.  The second form has four parameters. In this form, the first and third parameters specify the source. The second and fourth parameters specify the directories. The first pair of parameters specifies the source. The second pair specifies the destination. An error is generated if the source doesn't exist or the destination file already exists.
Initial S/W Revision:	Prior to A.02.00

### Mass Storage Remove Directory (Remote Command Only)

<b>Remote Command:</b>	:MEMMory:RDIRectory <directory_name>
Notes:	The string must be a valid logical path.  Removes a directory. The <directory_name> parameter specifies the directory name to be removed. All files and directories under the specified directory shall also be removed.
Initial S/W Revision:	Prior to A.02.00

## System

Opens a menu of keys that access various configuration menus and dialogs.

Key Path	<b>Front-panel key</b>
Notes	No remote command for this key specifically.
Initial S/W Revision	Prior to A.02.00

## Show

Accesses a menu of choices that enable you to select the information window you want to view.

Key Path	<b>System</b>
Mode	All
<b>Remote Command</b>	:SYSTem:SHOW OFF ERRor SYSTem HARDware LXI HWSTatistics ALIGNment SOFTware :SYSTem:SHOW?
Example	:SYST:SHOW SYST
Notes	This command displays (or exits) the various System information screens.
Preset	OFF
State Saved	No
Range	OFF ERRor SYSTem HARDware LXI HWSTatistics ALIGNment SOFTware
Initial S/W Revision	Prior to A.02.00

## Errors

There are two modes for the Errors selection, History and Status.

The list of errors displayed in the Errors screen does not automatically refresh. You must press the Refresh key or leave the screen and return to it to refresh it.

History brings up a screen displaying the event log in chronological order, with the newest event at the top. The history queue can hold up to 100 messages (if a message has a repeat count greater than 1 it only counts once against this number of 100). Note that this count bears no relation to the size of the SCPI queue. If the queue extends onto a second page, a scroll bar appears to allow scrolling with a mouse. Time is displayed to the second.

Status brings up a screen summarizing the status conditions currently in effect. Note that the time is displayed to the second.

The fields on the Errors display are:

Type (unlabelled) - Displays the icon identifying the event or condition as an error or warning.

ID - Displays the error number.

Message - Displays the message text.

Repeat (RPT) - This field shows the number of consecutive instances of the event, uninterrupted by other events. In other words, if an event occurs 5 times with no other intervening event, the value of repeat will be 5.

If the value of Repeat is 1 the field does not display. If the value of Repeat is >1, the time and date shown are those of the most recent occurrence. If the value of repeat reaches 999,999 it stops there.

Time - Shows the most recent time (including the date) at which the event occurred.

Key Path	<b>System, Show</b>
Mode	All
<b>Remote Command</b>	:SYSTem:ERRor[:NEXT]?
Example	:SYST:ERR?
Notes	The return string has the format: “<Error Number>,<Error>” Where <Error Number> and <Error> are defined in the Master Error Messages document.
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Next Page

Next Page and Previous Page menu keys move you between pages of the log, if it fills more than one page. These keys are grayed out in some cases:

If on the last page of the log, the Next Page key is grayed out

If on the first page of the log, the Previous Page key is grayed out.

If there is only one page, both keys are grayed out.

Key Path	<b>System, Show, Errors</b>
Initial S/W Revision	Prior to A.02.00

### Previous Page

See “Next Page” on page 227.

Key Path	<b>System, Show, Errors</b>
Initial S/W Revision	Prior to A.02.00

### History

The History and Status keys select the Errors view. The Status key has a second line which shows a number in [square brackets]. This is the number of currently open status items.

Key Path	<b>System, Show, Errors</b>
Initial S/W Revision	Prior to A.02.00

### Status

See [“History” on page 228](#)

### Verbose SCPI On/Off

This is a capability that will allow the SCPI data stream to be displayed when a SCPI error is detected, showing the characters which stimulated the error and several of the characters preceding the error.

Key Path	<b>System, Show, Errors</b>
Mode	All
<b>Remote Command</b>	:SYSTem:ERRor:VERBoSe OFF ON 0 1 :SYSTem:ERRor:VERBoSe?
Example	:SYST:ERR:VERB ON
Preset	This is unaffected by Preset but is set to OFF on a “Restore System Defaults->Misc”
Preset	OFF
State Saved	No
Range	On   Off
Initial S/W Revision	Prior to A.02.00

### Refresh

When pressed, refreshes the Show Errors display.

Key Path	<b>System, Show, Errors</b>
Initial S/W Revision	Prior to A.02.00

### Clear Error Queue

This clears all errors in all error queues.

Note the following:

**Clear Error Queue** does not affect the current status conditions.

**Mode Preset** does not clear the error queue.

Restore System Defaults will clear all error queues.



\*CLS only clears the queue if it is sent remotely and \*RST does not affect any error queue.

Switching modes does not affect any error queues.

Key Path	<b>System, Show, Errors</b>
Initial S/W Revision	Prior to A.02.00

## System

The System screen is formatted into three groupings: product descriptive information, options tied to the hardware, and software products:

<Product Name> <Product Description>		
Product Number: N9020A		
Serial Number: US46220924		
Firmware Revision: A.01.01		
Computer Name: <hostname>		
Host ID: N9020A,US44220924		
N9020A-503	Frequency Range to 3.6 GHz	
N9020A-PFR	Precision Frequency Reference	
N9020A-P03	Preamp 3.6 GHz	
N9060A-2FP	Spectrum Analysis Measurement Suite	1.0.0.0
N9073A-1FP	WCDMA	1.0.0.0
N9073A-2FP	WCDMA with HSDPA	1.0.0.0

The Previous Page is grayed-out if the first page of information is presently displayed. The Next Page menu key is grayed-out if the last page is information is presently displayed.

Key Path	<b>System, Show</b>
Mode	All
Example	SYST:SHOW SYST
Initial S/W Revision	Prior to A.02.00

## Hardware

The show hardware screen is used to view details of the installed hardware. This information can be used to determine versions of hardware assemblies and field programmable devices, in the advent of future upgrades or potential repair needs.

The screen is formatted into two groupings: product descriptive information and hardware information. The hardware information is listed in a table format:



activity is noted in the Event Log with an IEEE 1588 timestamp. When the event log is selected, the current contents of the event log are displayed in the system information screen.

The fields recorded in the Event Log are:

- The date the event occurred (GMT)
- The time the event occurred (GMT)
- The type of event: LAN Input, LAN Output, Status, Alarm, Trigger Alarm, Trigger LAN
- The name of the event
- The edge associated with the event
- The event's identifier: This is the string that appears on the LAN.
- The source event: This is only valid for LAN Output, Trigger LAN, and Trigger Alarm event types.
- The source address: This is only valid for LAN Input event types. It is the address from which the message originated.
- The destination address: This is only valid for LAN Output event types. It is the address (or addresses) that the message will be sent to. For UDP messages, this field reads "ALL."

Key Path	<b>System, Show, LXI</b>
Initial S/W Revision	Prior to A.02.00

**Next Page**

See ["Next Page" on page 227](#).

Key Path	<b>System, Show, Errors</b>
Initial S/W Revision	Prior to A.02.00

**Previous Page**

See ["Next Page" on page 227](#)

Key Path	<b>System, Show, Errors</b>
Initial S/W Revision	Prior to A.02.00

**Circular**

Sets the behavior for entries that occur while the LXI Event Log is full.

- If Circular is set to 1, incoming events overwrite the oldest events in the log.
- If Circular is set to 0, incoming events are discarded.

Key Path	<b>System, Show, LXI, LXI Event Log</b>
----------	---

System Functions  
System

<b>Remote Command</b>	:LXI:EVENT:LOG:CIRCular[:ENABle] ON OFF 1 0 :LXI:EVENT:LOG:CIRCular[:ENABle]?
Example	:LXI:EVEN:LOG:CIRC 1
Preset	ON
Preset	Not affected by a Preset. The default value of "ON" can be restored by pressing <b>System, Restore Defaults, Misc.</b>
State Saved	Saved in instrument state.
Range	OFF ON 0 1
Initial S/W Revision	Prior to A.02.00

**Clear**

Clears the event log of all entries.

Key Path	<b>System, Show, LXI, LXI Event Log</b>
<b>Remote Command</b>	:LXI:EVENT:LOG:CLEar
Example	:LXI:EVEN:LOG:CLE
Initial S/W Revision	Prior to A.02.00

**Size**

Sets the maximum number of entries the LXI Event Log can hold.

Key Path	<b>System, Show, LXI, LXI Event Log</b>
<b>Remote Command</b>	:LXI:EVENT:LOG:SIZE <size> :LXI:EVENT:LOG:SIZE?
Example	:LXI:EVEN:LOG:SIZE 256
Preset	64
Preset	Not affected by a Preset. The default value of "64" can be restored by pressing <b>System, Restore Defaults, Misc.</b>
State Saved	Saved in instrument state.
Range	>= 0
Initial S/W Revision	Prior to A.02.00

**Enabled**

Enables and disables the logging of LXI Events.

Key Path	<b>System, Show, LXI, LXI Event Log</b>
----------	---

<b>Remote Command</b>	:LXI:EVENT:LOG:ENABle ON OFF 1 0 :LXI:EVENT:LOG:ENABle?
Example	:LXI:EVEN:LOG:ENAB ON
Preset	ON
Preset	Not affected by a Preset. The default value of "ON" can be restored by pressing <b>System, Restore Defaults, Misc.</b>
State Saved	Saved in instrument state.
Range	ON OFF 0 1
Initial S/W Revision	Prior to A.02.00

### Count (Remote Command Only)

Returns the number of entries currently in the LXI Event Log.

<b>Remote Command:</b>	:LXI:EVENT:LOG:COUNT?
Example:	:LXI:EVEN:LOG:COUN?
Range:	0 – Size
Initial S/W Revision:	Prior to A.02.00

### Next Entry (Remote Command Only)

Returns the oldest entry from the LXI Event Log and removes it from the log. If the log is empty, an empty string is returned.

<b>Remote Command:</b>	:LXI:EVENT:LOG[:NEXT]?
Example:	:LXI:EVEN:LOG?
Initial S/W Revision:	Prior to A.02.00

### All (Remote Command Only)

Non-destructively retrieves the entire contents of the event log. Entries are returned as separate strings, surrounded by double quote marks, and separated by a comma. Fields within each entry are also comma delimited.

<b>Remote Command:</b>	:LXI:EVENT:LOG:ALL?
Example:	:LXI:EVEN:LOG:ALL? !Returns the entire event log contents.  An example may look like the following:  "11/12/2007,18:14:10.770385,Error,LogOverwrite,Rise,,,,","11/12/2007,18:14:10.592105,Status,Measuring,Rise,,,,","11/12/2007,18:14:10.597758,Status,Measuring,Fall,,,,","11/12/2007,18:14:10.597786,Status,Sweeping,Fall,,,,","11/12/2007,18:14:10.599030,Status,WaitingForTrigger,Rise,,,,"  The contents of the Event Log vary, based on the operation of the instrument.

## System Functions

### System

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

#### Specific Entry (Remote Command Only)

Non-destructively retrieves a specifically indexed entry from the event log. Fields within an entry are comma delimited.

<b>Remote Command:</b>	:LXI:EVENT:LOG:ENTRy? <intIndex>
Example:	:LXI:EVENT:LOG:ENTR? 0 !Returns the first entry in the event log. An example may look like the following: "11/12/2007,18:14:10.770385,Error,LogOverwrite,Rise,,," The contents of the Event Log vary, based on the operation of the instrument.
Initial S/W Revision:	Prior to A.02.00

#### Beginning Entry (Remote Command Only)

Sets or freezes the beginning entry of the log when in circular mode to the most recently added entry at the time of the command. This is so that the :LXI:EVENT:LOG:ENTRy? command has a reference entry for indexing individual entries in the log.

<b>Remote Command:</b>	:LXI:EVENT:LOG:CIRCular:FBENTry
Example:	:LXI:EVENT:LOG:CIRC:FBEN
Initial S/W Revision:	Prior to A.02.00

## Power On

Enables you to select how the instrument should power on. The options are: Mode and Input/Output Defaults, User Preset and Last State.

Key Path	System
Mode	All
<b>Remote Command</b>	:SYSTem: PON: TYPE MODE   USER   LAST   PRESet :SYSTem: PON: TYPE?
Example	:SYST:PON:TYPE MODE
Preset	MODE
Preset	This is unaffected by a Preset but is set to Mode on a "Restore System Defaults->All"
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Mode and Input/Output Defaults

When the analyzer is powered on in Mode and Input/Output Defaults, it will perform a Restore Mode Defaults to all modes in the instrument and a Restore Input/Output Defaults as well.

Key Path	<b>System, Power On</b>
Mode	All
Example	SYST:PON:TYPE MODE
Readback Text	Defaults
Initial S/W Revision	Prior to A.02.00

### User Preset

Sets **Power On** to **User Preset**. When the analyzer is powered on in User Preset, it will User Preset each mode and switch to the power-on mode. Power On User Preset will not affect any settings beyond what a normal User Preset affects.

---

**NOTE** An instrument could never power up for the first time in User Preset.

---

Key Path	<b>System, Power On</b>
Mode	All
Example	SYST:PON:TYPE USER
Readback Text	User Preset
Initial S/W Revision	Prior to A.02.00

### Last State

Sets **Power On** to **Last**. When the analyzer is powered on, it will put all modes in the last state they were in prior to when the analyzer was put into Power Standby and it will wake up in the mode it was last in prior to powering off the instrument. The saving of the active mode prior to shutdown happens behind the scenes when a controlled shutdown is requested by using the front panel power **Standby** key or by using the remote command SYSTem:PDOWn. The non-active modes are saved as they are deactivated and recalled by Power On Last State.

---

**NOTE** An instrument could never power up for the first time in Last.

If line power to the analyzer is interrupted, for example by pulling the line cord plug or by switching off power to a test rack, Power On Last State will not work properly.

---

Key Path	<b>System, Power On</b>
Mode	All
Example	SYST:PON:TYPE LAST
Notes	Power on Last State only works if the user has done a controlled shutdown prior to powering on in Last. If a controlled shutdown is not done when in Power On Last State, the instrument will power up in the last active mode, but it may not power up in the active mode's last state. If an invalid mode state is detected, a Mode Preset will occur. To control the shutdown under remote control use the :SYSTem:PDOWn command.
Readback Text	Last State
Initial S/W Revision	Prior to A.02.00

### Power On Application

Accesses a menu that lists the available Modes and lets you select which Mode is to be the power-on application.

This application is used for Power On Type “Mode and Input/Output Defaults” and Restore System Defaults All.

Key Path	<b>System, Power On</b>
Mode	All
<b>Remote Command</b>	:SYSTem: PON:MODE SA   BASIC   ADEMOD   NFIGURE   PNOISE   CDMA2K   TDSCDMA   VSA   VSA89 601   WCDMA   WIMAXOFDMA  :SYSTem: PON:MODE?
Example	SYST:PON:MODE SA
Notes	The list of possible modes (and remote parameters) to choose from is dependent on which modes are installed in the instrument.
Preset	SA
Preset	This is unaffected by a Preset but is set on a “Restore System Defaults->All” to SA.
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Configure Applications

The Configure Applications utility lets you do two things:

1. specify a subset of the available applications (Modes) to preload into memory at startup time
2. specify the order in which the Modes appear in the Mode menu



There are several reasons you might want to specify a subset of the available applications (Modes) to preload:

- During runtime, if a Mode which is not preloaded is selected by the user, there will be a pause while the Application is loaded. Configure Applications lets you decide whether you want that delay at startup of the analyzer program or the first time you select the Mode.
- In addition, there are more applications available for the X-Series than can fit into Windows Virtual Memory. The Configure Application utility allows you to choose which licensed applications to load into memory, if you have more licensed than can fit.

The Configure Applications utility can be used to select applications for preload and/or to determine how many applications can fit in memory at one time. This utility consists of a window with instructions, a set of “Select Application” checkboxes, a “fuel bar” style memory gauge, and softkeys that help you set up your configuration.

For more information see:

[“Preloading Applications” on page 237](#)

[“Virtual memory usage” on page 237](#)

[“Access to Configure Applications utility” on page 238](#)

## Preloading Applications

During operation of the analyzer, you select applications from the Mode menu. After startup of the analyzer program, the first time you select a particular application that application must be loaded into memory. Once loaded, the application stays loaded, so the next time you select it during a session, there is no delay. During runtime, if an application which is not yet loaded into memory is selected using the Mode menu or sending SCPI commands, there will be a pause while the Application is loaded. During this pause a message which says “Loading application, please wait ...” is displayed.

You can use the Configure Applications utility to choose applications to “preload” at startup, to eliminate the runtime delay; if you do this, the delay will instead increase the time it takes to start up the analyzer program, but for many users this is preferable to having to wait the first time they select an application. Asking for an application to be preloaded will cause it to be loaded into the analyzer’s memory when the analyzer program starts up. Once it is loaded into memory, it cannot be unloaded without exiting and restarting the analyzer program.

## Virtual memory usage

There are more applications available for the X-Series than can fit into memory at any one time, so the Configure Applications utility includes a memory tracker that serves two purposes:

It will not let you preload more applications than will fit into memory at once.

You can determine how many of your favorite applications can reside in memory at one time.

The utility provides a graphical representation of the amount of memory (note that the memory in question here is Virtual memory and is a limitation imposed by the operating system, not by the amount of physical memory you have in your analyzer). You select applications to preload by checking the boxes on the left. Checked applications preload at startup. The colored fuel bar indicates the total memory required when all the checked applications are loaded (either preloaded or selected during runtime).

Here is what the fuel bar colors mean:

## System Functions

### System

**RED:** the applications you have selected cannot all fit into the analyzer's memory. You must deselect applications until the fuel bar turns yellow.

**YELLOW:** the applications you have selected can all fit into the analyzer's memory, but there is less than 10% of the memory left, probably not enough to load any other applications, either via preload or by selecting a Mode while the analyzer is running..

**GREEN:** The indicator is green when <90% of the memory limit is consumed. This means the applications you have selected can all fit into the analyzer's memory with room to spare. You will likely be able to load one or more other applications without running out of memory.

### Access to Configure Applications utility

You may, at any time, manually call up the Configure Applications utility by pressing **System, Power On, Configure Applications**, to find a configuration that works best for you, and then restart the analyzer program.

The utility may also be called if, during operation of the analyzer, you attempt to load more applications than can fit in memory at once.

A version of the utility also runs the first time you power up the analyzer after purchasing it from Agilent. In this case the utility automatically configures preloads so that as many licensed applications as possible are preloaded while keeping the total estimated virtual memory usage below the limit. This auto-configuration only takes place at the very first run, and after analyzer software upgrades.

Key Path	<b>System, Power On</b>
Initial S/W Revision	A.02.00

### Select All

Marks all applications in the selection list. This allows you to enable all applications licensed on the instrument for pre-loading, or is a convenience for selecting all applications in one operation and then letting you deselect individual applications.

Key Path	<b>System, Power On, Configure Applications</b>
Initial S/W Revision	A.02.00

### Deselect All

Clears the marks from all applications in the selection list, with the exception of the Power On application. The Power On application cannot be eliminated from the pre-load list.

Key Path	<b>System, Power On, Configure Applications</b>
Initial S/W Revision	A.02.00

### Move Up

The application list is the order in which applications appear in the Mode Menu. This key enables you to shift the selected application up in the list, thus moving the selected application earlier in the Mode

Menu.

Key Path	<b>System, Power On, Configure Applications</b>
Initial S/W Revision	A.02.00

### Move Down

The application list is the order in which applications appear in the Mode Menu. This key enables you to shift the selected application down in the list, thus moving the selected application later in the Mode Menu.

Key Path	<b>System, Power On, Configure Applications</b>
Initial S/W Revision	A.02.00

### Select/Deselect


Toggles the currently highlighted application in the list.

Key Path	<b>System, Power On, Configure Applications</b>
Initial S/W Revision	A.02.00

### Save Changes and Exit

Applies the configuration of the applications list. The marked applications will be pre-loaded in memory the next time the instrument application is started, and the order of the applications in the list will be the order of the applications in the Mode Menu.

After saving your changes, the analyzer asks you if you would like it to restart so that your changes can take effect (see dialog box, below). If you choose not to restart, no memory will be released until the next time you shut down and restart the analyzer.

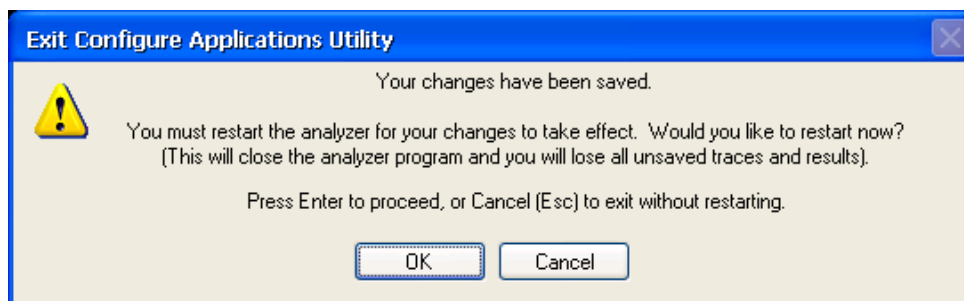

Key Path	<b>System, Power On, Configure Applications</b>
Notes	The softkey will be grayed-out when the virtual memory of the selected applications exceeds 100% of the limit.
Remote Command	:SYSTem:PUP:PROcess
Example	:SYST:PUP:PROC ! This is the SCPI command for restarting the analyzer. You must Wait after this command for the instrument application to restart

Notes	You cannot use *WAI or *OPC? to synchronize operation after a restart. This command stops and restarts the instrument application, thus the SCPI operation is terminated and restarted. A remote program must use fixed wait time to resume sending commands to the instrument. The wait time will be dependent upon which applications are pre-loaded.
Initial S/W Revision	A.02.00
Modified at S/W Revision	A.04.00

### Exit Without Saving

Pressing this key will exit the Configure Applications utility without saving your changes.

 
Key Path	<b>System, Power On, Configure Applications</b>
Initial S/W Revision	A.02.00
Modified at S/W Revision	A.04.00

### Configure Applications - Instrument boot-up

At start-up of the analyzer program a dialog box similar to the one under the **System, Power On, Configure Applications** key will be displayed allowing you to choose which licensed applications are to be loaded. This dialog will only be displayed if the memory required to pre-load all of the licensed applications exceeds the Virtual Memory available.

### Configure Applications - Windows desktop

The Configure Applications Utility may be run from the Windows Desktop. The utility is launched by



double-clicking the icon on the desktop, which brings-up a dialog box similar to the one under the **System, Power On, Configure Applications** key, allowing you to choose which licensed applications are to be loaded when the analyzer program starts up. This dialog box has mouse buttons on it which do the job that the softkeys normally do in the **System, Power On, Configure Applications** menu.

### Configure Applications - Remote Commands

The following topics provide details on the using remote commands to configure the list of applications want to load into the instrument memory or query the Virtual Memory utilization for your applications.

- [“Configuration list \(Remote Command Only\)” on page 241](#)
- [“Configuration Memory Available \(Remote Command Only\)” on page 241](#)
- [“Configuration Memory Total \(Remote command Only\)” on page 241](#)
- [“Configuration Memory Used \(Remote Command Only\)” on page 241](#)
- [“Configuration Application Memory \(Remote Command Only\)” on page 242](#)

### Configuration list (Remote Command Only)

This remote command is used to set or query the list of applications to be loaded in-memory.

<b>Remote Command:</b>	:SYSTem:PON:APPLication:LLISt <string of INSTRument:SElect names>  :SYSTem:PON:APPLication:LLISt?
Example:	:SYST:PON:APPL:LLIS "SA,BASIC,WCDMA"
Notes:	<string of INSTRument:SElect names> are from the enums of the :INSTRument:SElect command.  The order of the <INSTRument:SElect names> is the order in which the applications are loaded into memory, and the order in which they appear in the Mode Menu.  Error -225 "Out of Memory" is reported when more applications are listed than can reside in Virtual Memory. When this occurs, the existing applications load list is unchanged.
Preset:	Not affected by Preset
State Saved:	Not saved in state
Initial S/W Revision:	A.02.00

### Configuration Memory Available (Remote Command Only)

This remote command is used to query the amount of Virtual Memory remaining.

<b>Remote Command:</b>	:SYSTem:PON:APPLication:VMEMory[:AVAILable]?
Example:	:SYST:PON:APPL:VMEM?
Preset:	Not affected by Preset
Initial S/W Revision:	A.02.00

### Configuration Memory Total (Remote command Only)

This remote command is used to query the limit of Virtual Memory allowed for applications.

<b>Remote Command:</b>	:SYSTem:PON:APPLication:VMEMory:TOTal?
Example:	:SYST:PON:APPL:VMEM:TOT?
Preset:	Not affected by Preset
Initial S/W Revision:	A.02.00

### Configuration Memory Used (Remote Command Only)

This remote command is a query of the amount of Virtual Memory used by all measurement

applications.

<b>Remote Command:</b>	:SYSTem:PON:APPLication:VMEMory:USED?
Example:	:SYST:PON:APPL:VMEM:USED?
Preset:	Not affected by Preset
Initial S/W Revision:	A.02.00


### Configuration Application Memory (Remote Command Only)

This remote command is used to query the amount of Virtual Memory a particular application consumes.

<b>Remote Command:</b>	:SYSTem:PON:APPLication:VMEMory:USED:NAME? <INSTRument:SELEct name>
Example:	:SYST:PON:APPL:VMEM:USED:NAME? CDMA2K
Notes:	<INSTRument:SELEct name> is from the enums of the :INSTRument:SELEct command in Meas Common section 13.3 Value returned will be 0 (zero) if the name provided is invalid.
Preset:	Not affected by Preset
Initial S/W Revision:	A.01.70 or later

### Restore Power On Defaults

This selection causes the Power On Type and Power On Application settings to be a reset to their default values. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. The Power On key, under the Restore System Defaults menu, causes the same action.

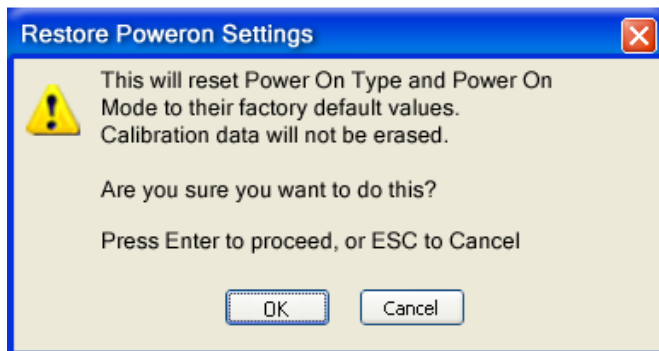

If you press any key other than OK or Enter, it is construed as a Cancel, because the only path that will actually cause the reset to be executed is through OK or Enter.

Key Path	<b>System, Power On</b>
Example	:SYST:DEF PON

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Alignments

The Alignments Menu controls and displays the automatic alignment of the instrument, and provides the ability to restore the default alignment values.

The current setting of the alignment system is displayed in the system Settings Panel along the top of the display, including a warning icon for conditions that may cause specifications to be impacted.



Key Path	<b>System</b>
Initial S/W Revision	Prior to A.02.00

## Auto Align

Configures the method for which the automatic background alignment is run.

Automatic background alignments are run periodically between measurement acquisitions. The instrument's software determines when alignments are to be performed to maintain warranted operation. The recommended setting for Auto Align is Normal.

An Auto Align execution cannot be aborted with the Cancel (ESC) key. To interrupt an Auto Align execution, select **Auto Align Off**.

Key Path	<b>System, Alignments</b>
Mode	All
<b>Remote Command</b>	:CALibration:AUTO ON PARTial OFF :CALibration:AUTO?
Example	:CAL:AUTO ON
Notes	While Auto Align is executing, bit 0 of Status Operation register is set.
Couplings	Auto Align is set to Off if Restore Align Data is invoked.
Preset	ON
Preset	This is unaffected by Preset but is set to ON upon a "Restore System Defaults->Align".
State Saved	No
Status Bits/OPC dependencies	When Auto Align is executing, bit 0 in the Status Operational register is set.
Initial S/W Revision	Prior to A.02.00

## Normal

**Auto Align, Normal** turns on the automatic alignment of all measurement systems. The Auto Align, Normal selection maintains the instrument in warranted operation across varying temperature and over

time.

If the condition “Align Now, All required” is set, transition to Auto Align, Normal will perform the required alignments and clear the “Align Now, All required” condition and then continue with further alignments as required to maintain the instrument adequately aligned for warranted operation.

When **Auto Align, Normal** is selected the Auto Align Off time is set to zero.

When **Auto Align, Normal** is selected the Settings Panel indicates ALIGN AUTO.

Key Path	<b>System, Alignments, Auto Align</b>
Mode	All
Example	:CAL:AUTO ON
Notes	Alignment processing as a result of the transition to Normal will be executed sequentially. Thus, *OPC? or *WAI following CAL:AUTO ON will return when the alignment processing is complete.  The presence of an external signal may interfere with the RF portion of the alignment. If so, the Error Condition “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference” is reported, and bit 11 is set in the Status Questionable Calibration register. After the interfering signal is removed, subsequent alignment of the RF will clear the condition, and clear bit 11 in the Status Questionable Calibration register.
Readback Text	Normal
Status Bits/OPC dependencies	An interfering user signal may prevent automatic alignment of the RF subsystem. If this occurs, the Error Condition “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference” is reported, the Status Questionable Calibration bit 11 is set, and the alignment proceeds. When a subsequent alignment of the RF subsystem succeeds, either by the next cycle of automatic alignment or from an <b>Align Now, RF</b> , the Error Condition and Status Questionable Calibration bit 11 are cleared.
Initial S/W Revision	Prior to A.02.00

### Partial

**Auto Align, Partial** disables the full automatic alignment and the maintenance of warranted operation for the benefit of improved measurement throughput. Accuracy is retained for the Resolution Bandwidth filters and the IF Passband which is critical to FFT accuracy, demodulation, and many measurement applications. With Auto Align set to **Partial**, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The **Auto Align, Alert** mechanism will notify you when alignments have expired. One solution to expired alignments is to perform the **Align All, Now** operation. Another is to return the **Auto Align** selection to **Normal**.

**Auto Align, Partial** is recommended for measurements where the throughput is so important that a few percent of improvement is more valued than an increase in the accuracy errors of a few tenths of a decibel. One good application of **Auto Align, Partial** would be an automated environment where the alignments can be called during overhead time when the device-under-test is exchanged.

When **Auto Align, Partial** is selected the elapsed time counter begins for Auto Align Off time.



When **Auto Align, Partial** is selected the Settings Panel indicates ALIGN PARTIAL with a warning icon. The warning icon is to inform the operator that they are responsible for maintaining the warranted operation of the instrument

Key Path	<b>System, Alignments, Auto Align</b>
Mode	All
Example	:CAL:AUTO PART
Notes	Auto Align Partial begins the elapsed time counter for Auto Align Off time.
Readback Text	Partial
Initial S/W Revision	Prior to A.02.00

### Off

**Auto Align, Off** disables automatic alignment and the maintenance of warranted operation, for the benefit of maximum measurement throughput. With Auto Align set to **Off**, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The **Auto Align, Alert** mechanism will notify you when alignments have expired. One solution to expired alignments is to perform the **Align All, Now** operation. Another is to return the **Auto Align** selection to **Normal**.

The **Auto Align, Off** setting is rarely the best choice, because **Partial** gives almost the same improvement in throughput while maintaining the warranted performance for a much longer time. The **Off** choice is intended for unusual circumstances such as the measurement of radar pulses where you might like the revisit time to be as consistent as possible.

When **Auto Align, Off** is selected the Auto Align Off time is initialized and the elapsed time counter begins.

When **Auto Align, Off** is selected the Settings Panel indicates ALIGN OFF with a warning icon. The warning icon is to inform the operator that they are responsible for maintaining the warranted operation of the instrument:

Key Path	<b>System, Alignments, Auto Align</b>
Mode	All
Example	:CAL:AUTO OFF
Notes	Auto Align Off begins the elapsed time counter for Auto Align Off time.
Couplings	Auto Align is set to Off if Restore Align Data is invoked.
Readback Text	Off
Initial S/W Revision	Prior to A.02.00

### All but RF

**Auto Align, All but RF**, configures automatic alignment to include or exclude the RF subsystem. (Eliminating the automatic alignment of the RF subsystem prevents the input impedance from changing. The normal input impedance of 50 ohms can change to an open circuit when alignments are being used. Some devices under test do not behave acceptably under such circumstances, for example by showing

## System Functions

### System

instability.) When **Auto Align, All but RF ON** is selected, the operator is responsible for performing an **Align Now, RF** when RF-related alignments expire. The **Auto Align, Alert** mechanism will notify the operator to perform an **Align Now, All** when the combination of time and temperature variation is exceeded.

When **Auto Align, All but RF ON** is selected the Settings Panel indicates ALIGN AUTO/NO RF with a warning icon (warning icon is intended to inform the operator they are responsible for the maintaining the RF alignment of the instrument):

Key Path	<b>System, Alignments, Auto Align</b>
Mode	All
<b>Remote Command</b>	:CALibration:AUTO:MODE ALL NRF :CALibration:AUTO:MODE?
Example	:CAL:AUTO:MODE NRF
Preset	ALL
Preset	This is unaffected by Preset but is set to ALL on a “Restore System Defaults->Align”.
State Saved	No
Readback Text	RF or NRF
Initial S/W Revision	Prior to A.02.00

### Alert

The instrument will signal an Alert when conditions exist such that you will need to perform a full alignment (for example, **Align Now, All**). The Alert can be configured in one of four settings; **Time & Temperature, 24 hours, 7 days**, or **None**. A confirmation is required when a selection other than **Time & Temperature** is chosen. This prevents accidental deactivation of alerts.

With **Auto Align** set to **Normal**, the configuration of **Alert** is not relevant because the instrument’s software maintains the instrument in warranted operation.

Key Path	<b>System, Alignments, Auto Align</b>
Mode	All
<b>Remote Command</b>	:CALibration:AUTO:ALERT TTEMPerature DAY WEEK NONE :CALibration:AUTO:ALERT?
Example	:CAL:AUTO:ALERT TTEM
Notes	The alert that alignment is needed is the setting of bit 14 in the Status Questionable Calibration register.
Preset	TTEMPerature
Preset	This is unaffected by Preset but is set to TTEMPerature on a “Restore System Defaults->Align”.

State Saved	No
Status Bits/OPC dependencies	The alert is the Error Condition “Align Now, All required” and bit 14 is set in the Status Questionable Calibration register.
Initial S/W Revision	Prior to A.02.00

### Time & Temperature


With Auto Align Alert set to **Time & Temperature** the instrument will signal an alert when alignments expire due to the combination of the passage of time and changes in temperature. The alert is the Error Condition “Align Now, All required”. If this choice for Alert is selected, the absence of an alert means that the analyzer alignment is sufficiently up-to-date to maintain warranted accuracy.

Key Path	<b>System, Alignments, Auto Align, Alert</b>
Mode	All
Example	:CAL:AUTO:ALER TTEM
Readback Text	Time & Temp
Status Bits/OPC dependencies	Bit 14 is set in the Status Questionable Calibration register.
Initial S/W Revision	Prior to A.02.00

### 24 hours

With Auto Align Alert set to **24 Hours** the instrument will signal an alert after a time span of 24 hours since the last successful full alignment (for example, **Align Now, All** or completion of a full Auto Align). You may choose this selection in an environment where the temperature is stable on a daily basis at a small risk of accuracy errors in excess of the warranted specifications. The alert is the Error Condition “Align Now, All required”.

For front-panel operation , confirmation is required to transition into this setting of Alert. The confirmation dialog is:

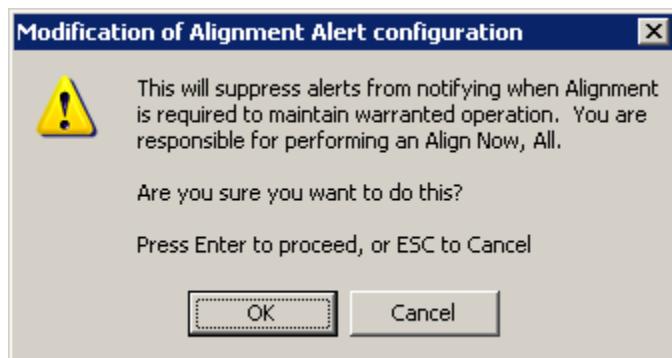

No confirmation is required when Alert is configured through a remote command.

Key Path	<b>System, Alignments, Auto Align, Alert</b>
Mode	All
Example	:CAL:AUTO:ALER DAY


System Functions  
System

Readback Text	24 hours
Status Bits/OPC dependencies	Bit 14 is set in the Status Questionable Calibration register.
Initial S/W Revision	Prior to A.02.00

**7 days**

With Auto Align Alert is set to **7 days** the instrument will signal an alert after a time span of 168 hours since the last successful full alignment (for example, **Align Now, All** or completion of a full Auto Align). You may choose this selection in an environment where the temperature is stable on a weekly basis, at a modest risk of accuracy degradations in excess of warranted performance. The alert is the Error Condition “Align Now, All required”.

For front panel operation, confirmation is required for the customer to transition into this setting of Alert. The confirmation dialog is:

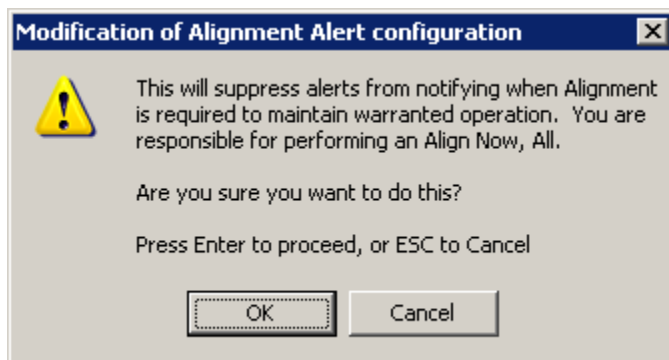


No confirmation is required when Alert is configured through a remote command.

Key Path	<b>System, Alignments, Auto Align, Alert</b>
Mode	All
Example	:CAL:AUTO:ALER WEEK
Readback Text	7 days
Status Bits/OPC dependencies	Bit 14 is set in the Status Questionable Calibration register.
Initial S/W Revision	Prior to A.02.00

**None**

With Auto Align Alert set to **None** the instrument will not signal an alert. This is provided for rare occasions where you are making a long measurement which cannot tolerate Auto Align interruptions, and must have the ability to capture a screen image at the end of the measurement without an alert posted to the display. Agilent does not recommend using this selection in any other circumstances, because of the risk of accuracy performance drifting well beyond expected levels without the operator being informed.

For front panel operation, confirmation is required to transition into this setting of Alert. The confirmation dialog is:

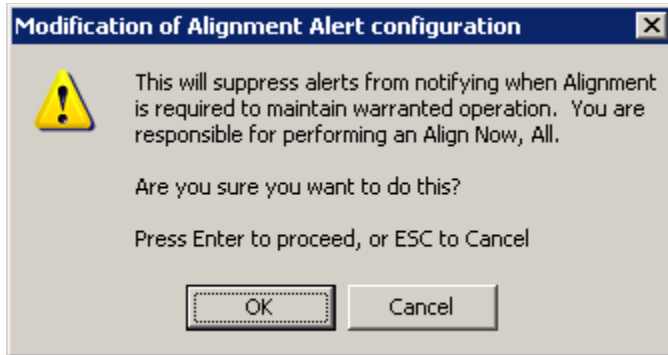

No confirmation is required when Alert is configured through a remote command.

Key Path	<b>System, Alignments, Auto Align, Alert</b>
Mode	All
Example	:CAL:AUTO:ALER NONE
Initial S/W Revision	Prior to A.02.00

### Align Now

Accesses alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

Key Path	<b>System, Alignments</b>
Initial S/W Revision	Prior to A.02.00

### All

Immediately executes an alignment of all subsystems. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

If an interfering user signal is present at the RF Input, the alignment is performed on all subsystems except the RF. After completion, the Error Condition “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference” is set. In addition the Error Condition “Align Now, RF required” is set, and bits 11 and 12 are set in the Status Questionable Calibration register.

The query form of the remote commands (:CALibration[:ALL]? or \*CAL?) invokes the alignment of all subsystems and returns a success or failure value. An interfering user signal is not grounds for failure; if the alignment was able to succeed on all portions but unable to align the RF because of an interfering signal, the resultant will be the success value.

Successful completion of **Align Now, All** will clear the “Align Now, All required” Error Condition, and clear bit 14 in the Status Questionable Calibration register. It will also begin the elapsed time counter for Last Align Now, All Time, and capture the Last Align Now, All Temperature.

If the Align RF subsystem succeeded in aligning (no interfering signal present), the elapsed time counter begins for Last Align Now, RF Time, and the temperature is captured for the Last Align Now, RF

System Functions  
System

Temperature. In addition the Error Conditions “Align skipped: 50 MHz interference” and “Align skipped: 4.8 GHz interference” are cleared, the Error Condition “Align Now, RF required” is cleared, and bits 11 and 12 are cleared in the Status Questionable Calibration register

**Align Now, All** can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs the Error Condition “Align Now, All required” is set, and bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

In many cases, you might find it more convenient to change alignments to **Normal**, instead of executing **Align Now, All**. When the Auto Align process transitions to **Normal**, the analyzer will immediately start to update only the alignments that have expired, thus efficiently restoring the alignment process.

Key Path	System, Alignments, Align Now
Mode	All
Remote Command	:CALibration[:ALL] :CALibration[:ALL]?
Example	:CAL
Notes	:CALibration[:ALL]? returns 0 if successful :CALibration[:ALL]? returns 1 if failed :CALibration[:ALL]? is the same as *CAL?  While Align Now, All is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.  This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command.  Successful completion will clear bit 14 in the Status Questionable Calibration register.  An interfering user signal is not grounds for failure of Align Now, All. However, bits 11 and 12 are set in the Status Questionable Calibration register to indicate Align Now, RF is required.  An interfering user supplied signal will result in the instrument requiring an Align Now, RF with the interfering signal removed.
Couplings	Initializes the time for the Last Align Now, All Time.  Records the temperature for the Last Align Now, All Temperature.  If Align RF component succeeded, initializes the time for the Last Align Now, RF Time.  If Align RF component succeeded, records the temperature for the Last Align Now, RF Temperature.
Status Bits/OPC dependencies	Bits 11, 12, or 14 may be set in the Status Questionable Calibration register.

Initial S/W Revision	Prior to A.02.00
Mode	All
<b>Remote Command</b>	*CAL?
Example	*CAL?
Notes	<p>*CAL? returns 0 if successful</p> <p>*CAL? returns 1 if failed</p> <p>:CALibration[:ALL]? is the same as *CAL?</p> <p>See additional remarks described with :CALibration[:ALL]?</p> <p>Everything about :CALibration[:ALL]? is synonymous with *CAL? including all conditions, status register bits, and couplings</p>
Initial S/W Revision	Prior to A.02.00

### All but RF

Immediately executes an alignment of all subsystems except the RF subsystem. The instrument will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key). This can be used to align portions of the instrument that are not impacted by an interfering user input signal.

This operation might be chosen instead of **All** if you do not want the device under test to experience a large change in input impedance, such as a temporary open circuit at the analyzer input.

The query form of the remote commands (:CALibration:NRF?) will invoke the alignment and return a success or failure value.

Successful completion of **Align Now, All but RF** will clear the “Align Now, All required” Error Condition, and clear bit 14 in the Status Questionable Calibration register. If “Align Now, All required” was in effect prior to executing the All but RF, the Error Condition “Align Now, RF required” is asserted and bit 12 in the Status Questionable Calibration register is set. It will also begin the elapsed time counter for Last Align Now, All Time, and capture the Last Align Now, All Temperature.

**Align Now, All but RF** can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs the Error Condition “Align Now, All required” is set, and bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be used for an individual subsystem, but not a full new set of data for all subsystems.

Key Path	<b>System, Alignments, Align Now</b>
Mode	All
<b>Remote Command</b>	:CALibration:NRF :CALibration:NRF?
Example	:CAL:NRF

Notes	<p>:CALibration:NRF? returns 0 if successful</p> <p>:CALibration:NRF? returns 1 if failed</p> <p>While Align Now, All but RF is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command.</p> <p>Successful completion will clear bit 14 in the Status Questionable Calibration register and set bit 12 if invoked with “Align Now, All required”.</p>
Couplings	<p>Initializes the time for the Last Align Now, All Time.</p> <p>Records the temperature for the Last Align Now, All Temperature.</p>
Status Bits/OPC dependencies	Bits 12 or 14 may be set in the Status Questionable Calibration register.
Initial S/W Revision	Prior to A.02.00

## RF

Immediately executes an alignment of the RF subsystem. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

This operation might be desirable if the alignments had been set to not include RF alignments, or if previous RF alignments could not complete because of interference which has since been removed.

If an interfering user signal is present at the RF Input, the alignment will terminate and raise the Error Condition “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference”, and Error Condition “Align Now, RF required”. In addition, bits 11 and 12 will be set in the Status Questionable Calibration register.

The query form of the remote commands (:CALibration:RF?) will invoke the alignment of the RF subsystem and return a success or failure value. An interfering user signal is grounds for failure.

A failure encountered during alignment will set the Error Condition “Align RF failed” and set bit 3 in the Status Questionable Calibration register.

Successful completion of **Align Now, RF** clears the Error Conditions “Align skipped: 50 MHz interference” and “Align skipped: 4800 MHz interference” and the Error Conditions “Align RF failed” and “Align Now, RF required”, and clears bits 3, 11, and 12 in the Status Questionable Calibration register. It will also begin the elapsed time counter for Last Align Now, RF Time, and capture the Last Align Now, RF Temperature.

**Align Now, RF** can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs, the Error Condition “Align Now, RF required” is set, and bit 12 is set in the Status Questionable Condition register. None of the new alignment data is used.

Key Path	<b>System, Alignments, Align Now</b>
Mode	All



<b>Remote Command</b>	:CALibration:RF :CALibration:RF?
Example	:CAL:RF
Notes	<p>:CALibration:RF? returns 0 if successful</p> <p>:CALibration:RF? returns 1 if failed (including interfering user signal)</p> <p>While Align Now, RF is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command.</p> <p>Successful completion will clear bits 3, 11, and 12 in the Status Questionable Calibration register.</p> <p>A failure encountered during alignment will set the Error Condition “Align RF failed” and set bit 3 in the Status Questionable Calibration register.</p> <p>An interfering user signal will result in bits 11 and 12 to be set in the Status Questionable Calibration register to indicate Align Now, RF is required.</p> <p>An interfering user supplied signal will result in the instrument requiring an Align Now, RF with the interfering signal removed.</p>
Couplings	<p>Initializes the time for the Last Align Now, RF Time.</p> <p>Records the temperature for the Last Align Now, RF Temperature.</p>
Status Bits/OPC dependencies	Bits 11, 12, or 14 may be set in the Status Questionable Calibration register.
Initial S/W Revision	Prior to A.02.00

### Show Alignment Statistics

Shows alignment information you can use to ensure that the instrument is operating in a specific manner. The Show Alignment Statistics screen is where you can view time and temperature information.

Values which are displayed are only updated when the Show Alignment Statistics screen is invoked, they are not updated while the Show Alignment Statistics screen is being displayed. The remote commands which access this information obtain current values.

An example of the Show Alignment Statistics screen would be similar to:

## System Functions

### System

Std Header	Product Number: N9020A Serial Number: US46340924 Firmware Revision: A.01.01	
Instrument Info	Time since start-up: 300 hrs Current Temperature: +28 degC	
Auto Align Info	Time while Auto Align off: 90 min	
Std Align Now	Time since last Align Now All: 12.5 hrs Temperature since last Align Now All: -1.3 degC Time since last Align Now RF: 5 min Temperature since last Align Now RF: +0.1 degC	Times & Temperature delta. Shown as "---" if none since start-up.
If TG Option (Not Zorro1)	Time since last Align TG: 2.5 hrs Temperature since last Align TG: +0.2 degC	
Opts 508,513 526	Last Characterize Preselector: Jun 1, 2006 15:00:00 Last Characterize Preselector Temperature: +32.1 degC	Time & Temperature 'stamp'

A successful Align Now, RF will set the Last Align RF temperature to the current temperature, and reset the Last Align RF time. A successful Align Now, All or Align Now, All but RF will set the Last Align Now All temperature to the current temperature, and reset the Last Align Now All time. A successful Align Now, All will also reset the Last Align RF items if the RF portion of the Align Now succeeded.

Key Path	System, Alignments
Mode	All
Notes	The values displayed on the screen are only updated upon entry to the screen and not updated while the screen is being displayed.
Initial S/W Revision	Prior to A.02.00

Key Path	Visual annotation in the Show Alignment Statistics screen
Mode	All
Remote Command	:SYSTem:PON:TIME?
Example	:SYST:PON:TIME?
Notes	Value is the time since the most recent start-up in seconds.
State Saved	No
Initial S/W Revision	Prior to A.02.00

Key Path	Visual annotation in the Show Alignment Statistics screen
Mode	All
Remote Command	:CALibration:TEMPerature:CURRENT?

Example	:CAL:TEMP:CURR?
Notes	Value is in degrees Centigrade. Value is invalid if using default alignment data (Align Now, All required)
State Saved	No
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Visual annotation in the Show Alignment Statistics screen</b>
Mode	All
<b>Remote Command</b>	:CALibration:TIME:LALL?
Example	:CAL:TIME:LALL?
Notes	Value is the elapsed time, in seconds, since the last successful Align Now, All or Align Now, All but RF was executed.
State Saved	No
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Visual annotation in the Show Alignment Statistics screen</b>
Mode	All
<b>Remote Command</b>	:CALibration:TEMPerature:LALL?
Example	:CAL:TEMP:LALL?
Notes	Value is in degrees Centigrade at which the last successful Align Now, All or Align Now, All but RF was executed.
State Saved	No
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Visual annotation in the Show Alignment Statistics screen</b>
Mode	All
<b>Remote Command</b>	:CALibration:TIME:LRF?
Example	:CAL:TIME:LRF?
Notes	Value is the elapsed time, in seconds, since the last successful Align Now, RF was executed, either individually or as a component of Align Now, All.
State Saved	No
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Visual annotation in the Show Alignment Statistics screen</b>
----------	--

System Functions  
System

Mode	All
<b>Remote Command</b>	:CALibration:TEMPerature:LRF?
Example	:CAL:TEMP:LRF?
Notes	Value is in degrees Centigrade at which the last successful Align Now, RF was executed, either individually or as a component of Align Now, All.
State Saved	No
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Visual annotation in the Show Alignment Statistics screen</b>
Mode	All
<b>Remote Command</b>	:CALibration:TIME:LPreselector?
Example	:CAL:TIME:LPR?
Notes	Value is date and time the last successful Characterize Preselector was executed. The date is separated from the time by a space character. Returns "" if no Characterize Preselector has ever been performed on the instrument.
Dependencies	In models that do not include preselectors, this command is not enabled and any attempt to set or query will yield an error.
State Saved	No
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Visual annotation in the Show Alignment Statistics screen</b>
Mode	All
<b>Remote Command</b>	:CALibration:TEMPerature:LPreselector?
Example	:CAL:TEMP:LPR?
Notes	Value is in degrees Centigrade at which the last successful Characterize Preselector was executed.
Dependencies	In models that do not include preselectors, this command is not enabled and any attempt to set or query will yield an error.
State Saved	No
Initial S/W Revision	Prior to A.02.00


Key Path	<b>Visual annotation in the Show Alignment Statistics screen</b>
Mode	All
<b>Remote Command</b>	:CALibration:AUTO:TIME:OFF?
Example	:CAL:AUTO:TIME:OFF?

Notes	Value is the elapsed time, in seconds, since Auto Align has been set to Off or Off with Alert. The value is 0 if Auto Align is ALL or NORF.
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Restore Align Defaults

Initializes the alignment user interface settings, not alignment data, to the factory default values. Align Now, All must be executed if the value of the Timebase DAC results in a change.

For front panel operation, you are prompted to confirm action before setting the alignment parameters to factory defaults:

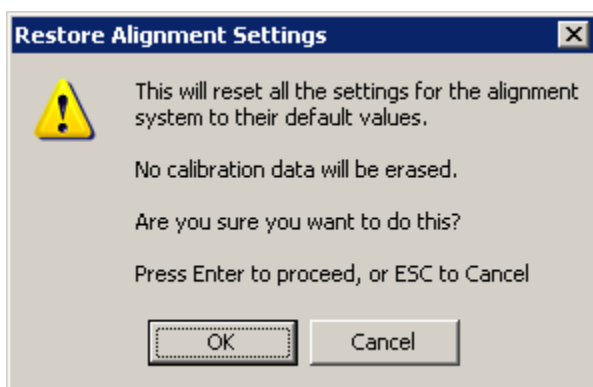

The parameters affected are:

Parameter	Setting
Timebase DAC	Calibrated
Timebase DAC setting	Calibrated value
Auto Align State	Normal (if the instrument is not operating with default alignment data, Off otherwise)
Auto Align All but RF	Off
Auto Align Alert	Time & Temperature

Key Path	System, Alignments
Mode	All
Example	:SYST:DEF ALIG
Notes	Alignment processing that results as the transition to Auto Alignment Normal will be executed sequentially; thus *OPC? or *WAI will wait until the alignment processing is complete.
Initial S/W Revision	Prior to A.02.00

### Backup and Restore Alignment Data

Alignment data for the instrument resides on the hard drive in a database. Agilent uses high quality hard drives; however it is highly recommended the alignment data be backed-up to storage outside of the instrument. Additionally, for customers who use multiple CPU Assemblies or multiple disk drives, the alignment that pertains to the instrument must be transferred to the resident hard drive after a CPU or hard drive is replaced. This utility facilitates backing-up and restoring the alignment data.

---

**NOTE** This utility allows the operator to navigate to any location of the Windows file system. It is intended that the operator use a USB memory device or Mapped Network Drive to backup the alignment data to storage outside of the instrument.

---

### Backup or Restore Align Data...

Opens the utility for backing-up or restoring the alignment data.



Key Path	<b>System, Alignments</b>
Initial S/W Revision	A.02.00

Key Path	<b>System, Alignments</b>
Mode	All
<b>Remote Command</b>	:CALibration:DATA:DEFault
Example	:CAL:DATA:DEF
Couplings	Sets Auto Align to Off. Sets bit 14 in the Status Questionable Calibration register. The Error Condition "Align Now, All required" is set.
Initial S/W Revision	Prior to A.02.00

### Alignment Data Wizard

The Backup or Restore Alignment Data wizard will guide you through the operation of backing-up or restoring the alignment data.

The following dialogue boxes operate without a mouse or external keyboard when you use the default file names.

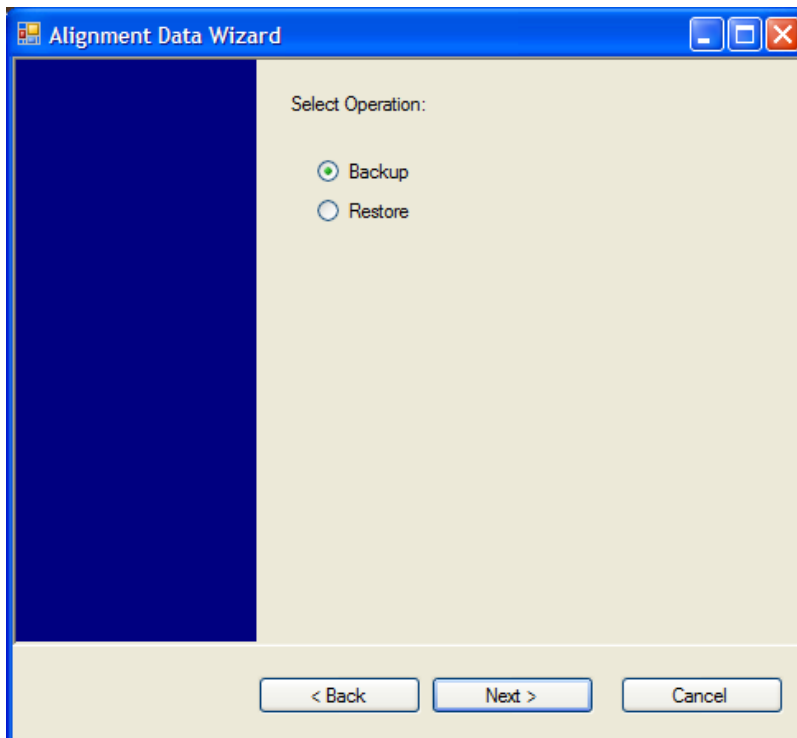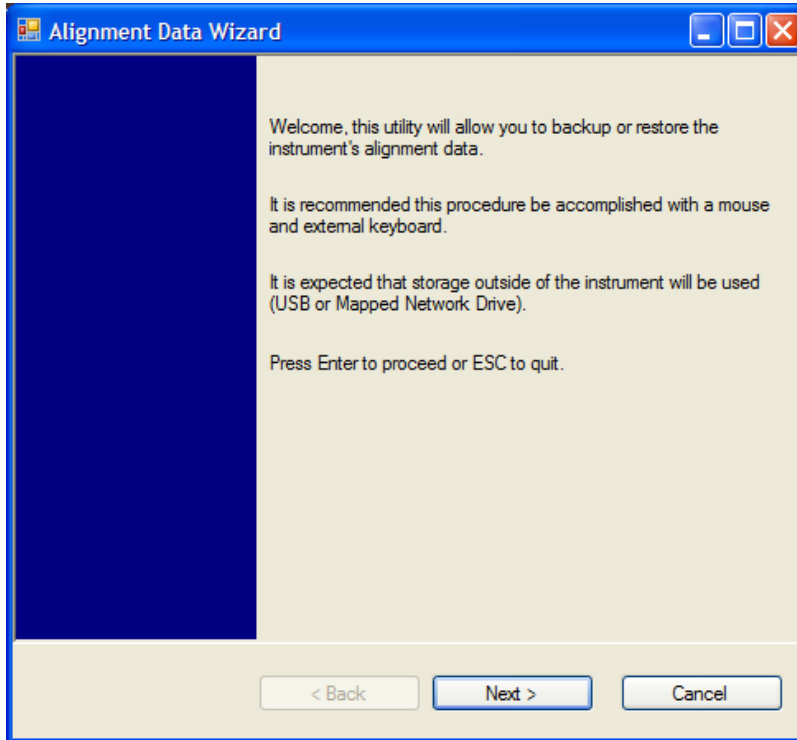

The backup screen will indicate the approximate amount of space required to contain the backup file.


The default file name will be AlignDataBackup\_<model number>\_<serial number>\_<date in YYYYMMDDHHMMSS>.bak.

For the N9030A the default backup location will be the internal F: drive which is a solid-state memory device

## System Functions



### System

located internally on the instrument.

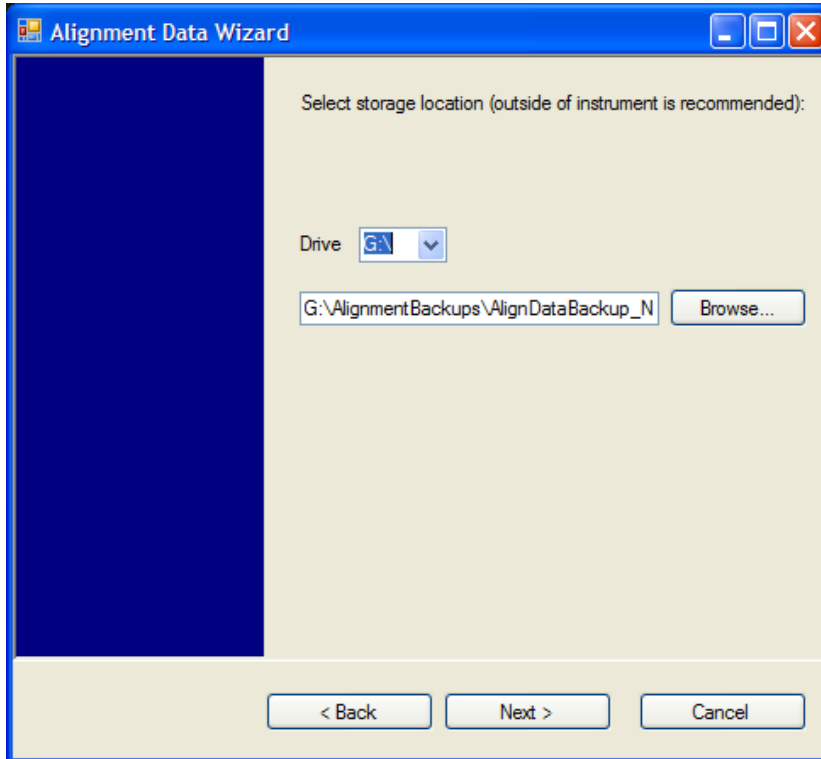

Changing the drive letter will also modify the path displayed in the box below. When this step is first loaded, the drive drop-down is populated with connected drives which provide the user with write access. If there are many unreachable network drives connected to the instrument, this step can take a few seconds. If a USB drive is present, it will be selected by default. The path defaults to the AlignmentBackups folder, and a filename will be automatically created in the form of AlignDataBackup\_<model>\_<serial number>\_<date><time>. When the "Next >" button is pressed, the user will be prompted to create a new folder if the chosen path does not yet exist.



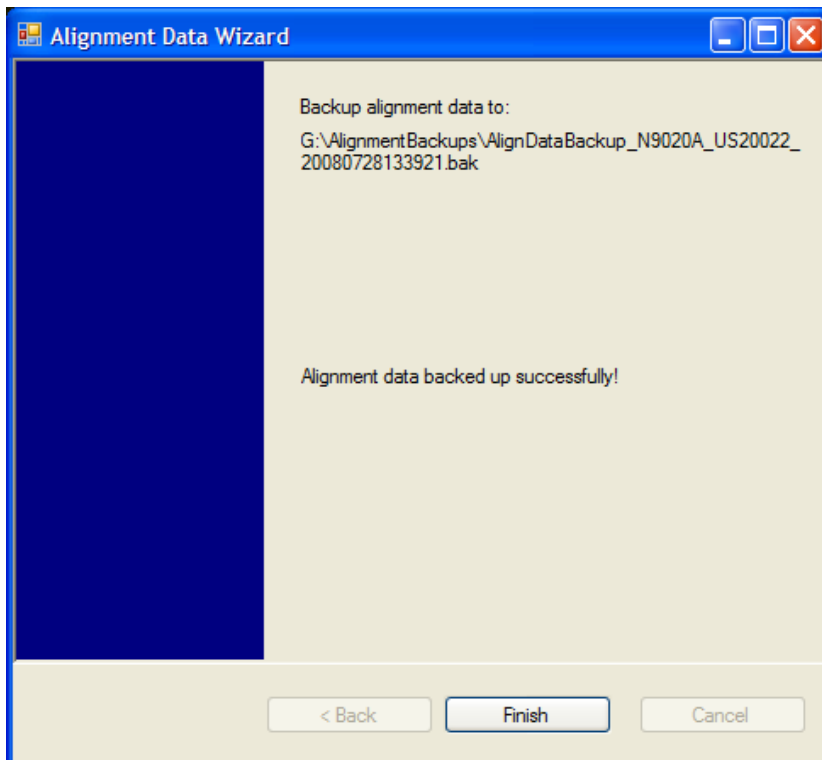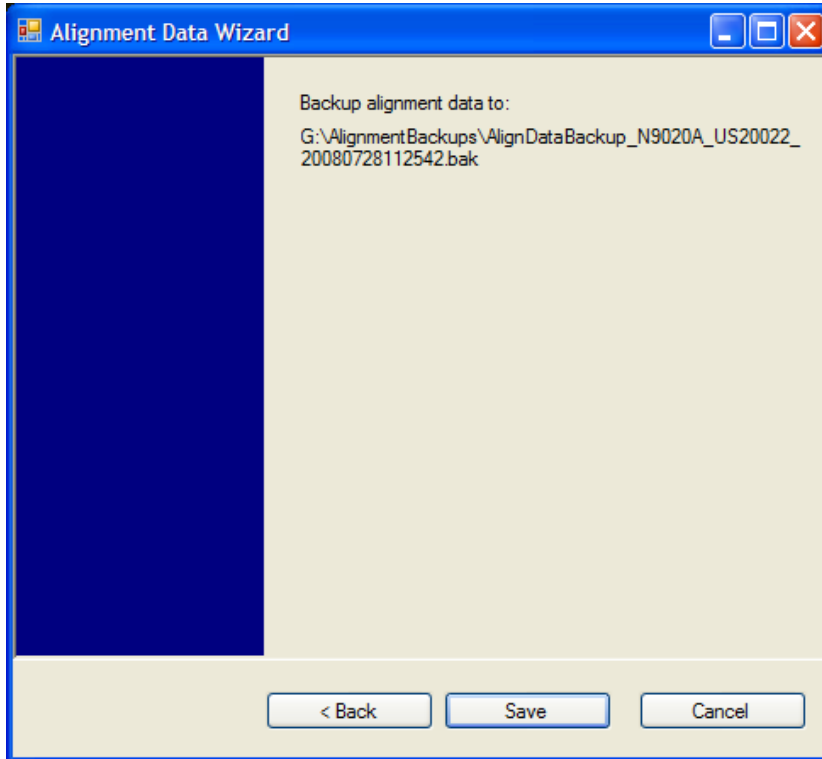


The restore operation will check the validity of the restore file using the database's built-in file validation. If the restore file is corrupt, the existing alignment data will remain in use.

For the N9030A, the default restore location will be the internal F: drive which is a solid-state memory device



## System Functions

### System

located internally on the instrument. The default restore file will be the most recent file that matches the default backup file name format: AlignDataBackup\_N9030A\_<serial number>\_<date>.bak

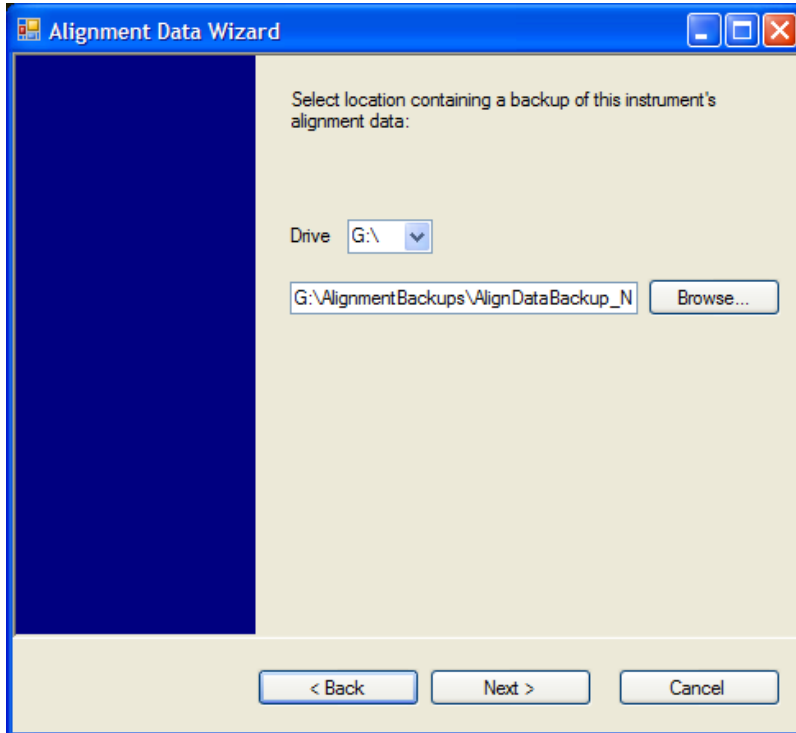

Changing the drive letter will also modify the path displayed in the box below. When this step is first loaded, the drive drop-down is populated with connected drives which provide the user with read access. The path defaults to the AlignBackups folder. The most recent \*.bak file in the folder will also be selected by default.

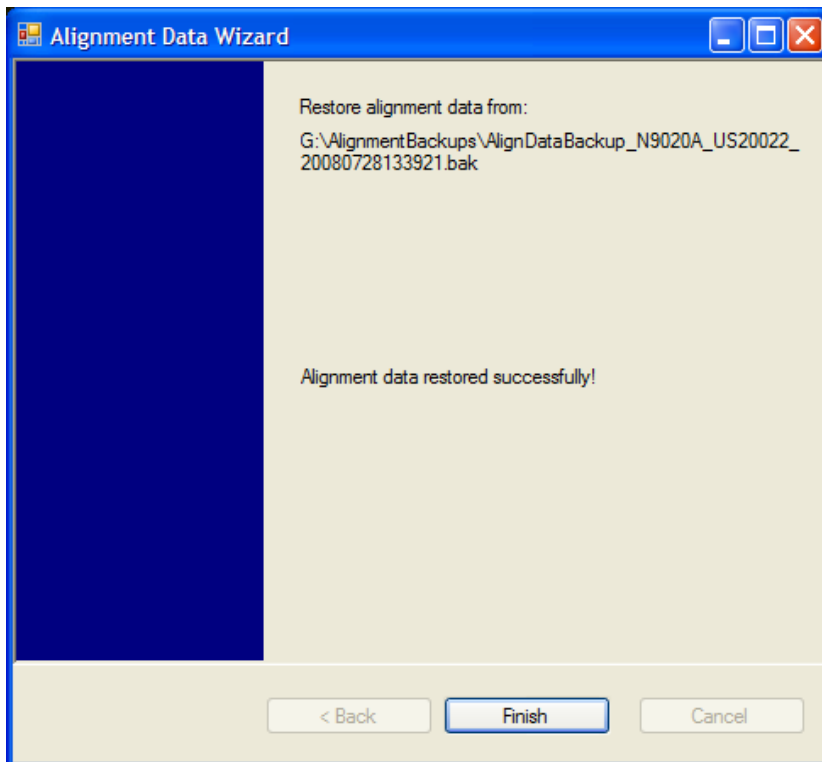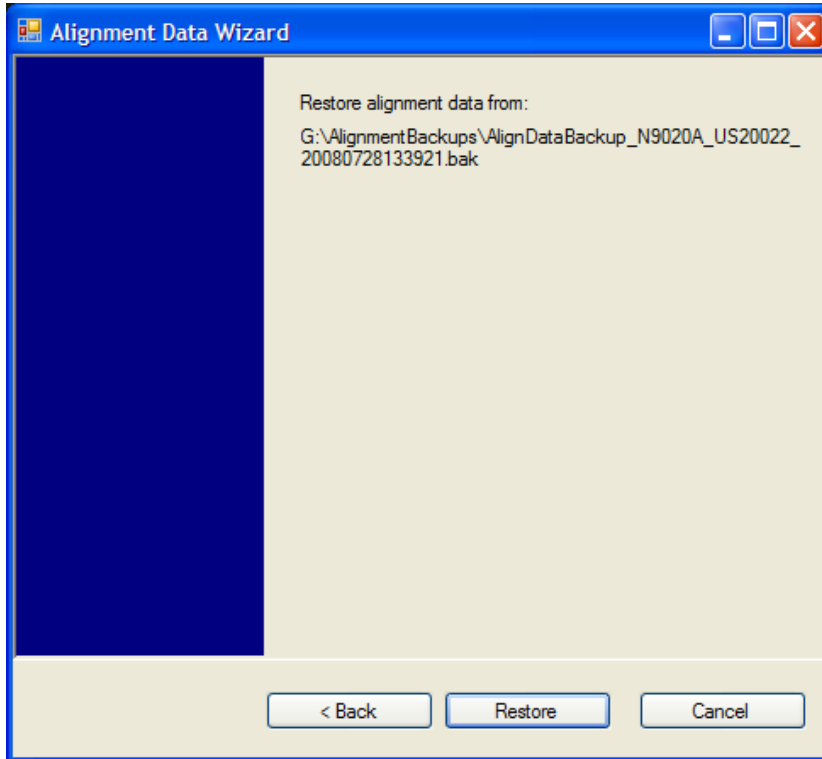

**Perform Backup (Remote Command Only)**

Invokes an alignment data backup operation to the provided Folder.

---

**NOTE** It is recommended that the Folder provided is outside of the instrument (USB or Mapped Network Drive).

---

<b>Remote Command:</b>	:CALibration:DATA:BACKup <filename>
Example:	:CAL:DATA:BACK "F:\AlignDataBackup_N9020A_US00000001_2008140100.bak"
Initial S/W Revision:	A.02.00

#### Perform Restore (Remote Command Only)

Invokes an alignment data restore operation from the provided filename.

<b>Remote Command:</b>	:CALibration:DATA:RESTore <filename>
Example:	:CAL:DATA:REST "F:\ AlignDataBackup_N9020A_US00000001_2008140100.bak "
Initial S/W Revision:	A.02.00

#### Advanced

Accesses alignment processes that are immediate action operations that perform operations that run until complete. Advanced alignments are performed on an irregular basis, or require additional operator interaction

Key Path	<b>System, Alignments</b>
Initial S/W Revision	Prior to A.02.00

#### Characterize Preselector (Only with Option 507, 508, 513, or 526)

The Preselector tuning curve drifts over temperature and time. Recognize that the **Amplitude, Presel Center** function adjusts the preselector for accurate amplitude measurements at an individual frequency. **Characterize Preselector** improves the amplitude accuracy by ensuring the Preselector is approximately centered at all frequencies without the use of the **Amplitude, Presel Center** function. **Characterize Preselector** can be useful in situations where absolute amplitude accuracy is not of utmost importance, and the throughput savings or convenience of not performing a **Presel Center** is desired. **Presel Center** is required prior to any measurement for best (and warranted) amplitude accuracy.

Agilent recommends that the **Characterize Preselector** operation be performed yearly as part of any calibration, but performing this operation every three months can be worthwhile.

**Characterize Preselector** immediately executes a characterization of the Preselector, which is a YIG-tuned filter (YTF). The instrument stops any measurement currently underway, performs the characterization, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

The query form of the remote commands (:CALibration:YTF?) will invoke the alignment of the YTF

subsystem and return a success or failure value.

A failure encountered during alignment will set the Error Condition “Characterize YTF failed” and set bit 9 in the Status Questionable Calibration register.

Successful completion of **Advanced, Characterize Preselector** will clear the Error Condition “Characterize YTF failed”, and clear bit 9 in the Status Questionable Calibration register. It will also begin the elapsed time counter for Last Characterize Preselector Time, and capture the Last Characterize Preselector Temperature.

The last Characterize Preselector Time and Temperature must survive across the power cycle as this operation is performed infrequently.

**Advanced, Characterize Preselector** can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. None of the new characterization data is then used.

<b>Remote Command</b>	:CALibration:YTF :CALibration:YTF?
Example	:CAL:YTF
Initial S/W Revision	Prior to A.02.00
Key Path	<b>System, Alignments, Advanced</b>
Mode	All
Notes	:CALibration:YTF? returns 0 if successful :CALibration:YTF? returns 1 if failed (including interfering user signal) While Advanced, Characterize Preselector is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register. This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command. Successful completion will clear bit 9 in the Status Questionable Calibration register. A failure encountered during alignment will set the Error Condition “Characterize Preselector failed” and set bit 9 in the Status Questionable Calibration register. For Option 507, 508, 513, and 526 only.
Dependencies	This key does not appear in models that do not contain preselectors. In these models the SCPI command is accepted without error but no action is taken.
Couplings	Initializes the time for the Last Characterize Preselector Time. Records the temperature for the Last Characterize Preselector Temperature.

### Timebase DAC

Allows control of the internal 10 MHz reference oscillator timebase. This may be used to adjust for

**System Functions**  
**System**

minor frequency alignment between the signal and the internal frequency reference. This adjustment has no effect if the instrument is operating with an External Frequency Reference.

If the value of the Timebase DAC changes (by switching to Calibrated from User with User set to a different value, or in User with a new value entered) an alignment may be necessary. The alignment system will take appropriate action; which will either invoke an alignment or cause an Alert.

Key Path	<b>System, Alignments</b>
Mode	All
<b>Remote Command</b>	:CALibration:FREQuency:REFerence:MODE CALibrated USER :CALibration:FREQuency:REFerence:MODE?
Example	:CAL:FREQ:REF:MODE CAL
Notes	If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due.  If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due.
Preset	CAL
Preset	This is unaffected by Preset but is set to CALibrated on a “Restore System Defaults->Align”.
State Saved	No
Initial S/W Revision	Prior to A.02.00

**Calibrated**

Sets the Timebase DAC to the value established during factory or field calibration. The value displayed on the menu key is the calibrated value.

Key Path	<b>System, Alignments, Timebase DAC</b>
Mode	All
Example	:CAL:FREQ:REF:MODE CAL
Readback Text	[xxx] < where xxx is the calibrated value
Initial S/W Revision	Prior to A.02.00

**User**

Allows setting the Timebase DAC to a value other than the value established during the factory or field calibration. The value displayed on the menu key is the calibrated value.

Key Path	<b>System, Alignments, Timebase DAC</b>
Mode	All
Example	:CAL:FREQ:REF:MODE USER

Readback Text	xxx < where xxx is the Timebase DAC setting
Initial S/W Revision	Prior to A.02.00

Key Path	<b>System, Alignments, Timebase DAC</b>
Mode	All
<b>Remote Command</b>	:CALibration:FREQuency:REFeRence:FINE <integer> :CALibration:FREQuency:REFeRence:FINE?
Example	:CAL:FREQ:REF:FINE 8191
Notes	If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due.
Couplings	Setting :CAL:FREQ:REF:FINE sets :CAL:FREQ:REF:MODE USER
Preset	This is unaffected by Preset but is set to the factory setting on a “Restore System Defaults->Align”.
State Saved	No
Min	0
Max	16383
Initial S/W Revision	Prior to A.02.00

<b>Remote Command:</b>	:CALibration:FREQuency:REFeRence:COARse <integer> :CALibration:FREQuency:REFeRence:COARse?
Example:	:CAL:FREQ:REF:COAR 8191
Notes:	This is an alias for CAL:FREQ:REF:FINE any change to COARse is reflected in FINE and vice-versa. See CAL:FREQ:REF:FINE for description of functionality.
Couplings:	Setting :CAL:FREQ:REF:COAR sets :CAL:FREQ:REF:MODE USER
Initial S/W Revision:	Prior to A.02.00

## I/O Config

Activates a menu for identifying and changing the I/O configuration for remote control.

Key Path	<b>System</b>
Initial S/W Revision	Prior to A.02.00

## GPIB

Activates a menu for configuring the GPIB I/O port.

Key Path	<b>System, I/O Config</b>
Initial S/W Revision	A.02.00

## GPIB Address

Select the GPIB remote address.

Key Path	<b>System, I/O Config, GPIB</b>
Mode	All
<b>Remote Command</b>	:SYSTem:COMMunicate:GPIB[1] [:SELF]:ADDRess <integer> :SYSTem:COMMunicate:GPIB[1] [:SELF]:ADDRess?
Example	:SYST:COMM:GPIB:ADDR 17
Notes	Changing the Address on the GPIB port requires all further communication to use the new address.
Preset	18
Preset	This is unaffected by Preset but is set to 18 on a “Restore System Defaults->Misc”
State Saved	No
Range	0 to 30
Initial S/W Revision	Prior to A.02.00

## GPIB Controller

Sets the GPIB port into controller or device mode. In the normal state, GPIB controller is disabled, which allows the analyzer to be controlled by a remote computer. When GPIB Controller is enabled, the instrument can run software applications that use the instrument's computer as a GPIB controller; controlling devices connected to the instrument's GPIB port.

---

**NOTE** When GPIB Controller is enabled, the analyzer application itself cannot be controlled over GPIB. In this case it can easily be controlled via LAN or USB. The GPIB port cannot be a controller and device at the same time. Only one controller can be active on the GPIB bus at any given time. If the analyzer is the controller, an external PC cannot be a controller.

---

To control the instrument from the software that is performing GPIB controller operation, you can use an internal TCP/IP connection to the analyzer application. Use the address TCPIP0::localhost::inst0::INSTR to send SCPI commands to the analyzer application.

Key Path	<b>System, I/O Config, GPIB</b>
----------	---------------------------------



Mode	All
Scope	Mode Global
<b>Remote Command</b>	:SYSTem:COMMunicate:GPIB[1] [:SELF] :CONTroller[:ENABle] ON OFF 0 1 :SYSTem:COMMunicate:GPIB[1] [:SELF] :CONTroller[:ENABle]?
Example	:SYST:COMM:GPIB:CONT ON ! Will set GPIB port to Controller
Notes	When the instrument becomes the Controller bit 0 in the Standard Event Status Register is set (and when the instrument relinquishes Controller capability bit 0 is cleared in the Standard Event Status Register).
Preset	OFF
Preset	This is unaffected by Preset but is set to OFF on a “Restore System Defaults->Misc”
State Saved	No
Range	Disabled Enabled
Initial S/W Revision	A.02.00

### Disabled

Disables the GPIB Controller capability, this is the default (or normal) setting.

Key Path	<b>System, I/O Config, GPIB, GPIB Controller</b>
Example	:SYST:COMM:GPIB:CONT OFF ! Will set GPIB port to Device
Initial S/W Revision	A.02.00

### Enabled

Enables the GPIB Controller capability.

Key Path	<b>System, I/O Config, GPIB, GPIB Controller</b>
Example	:SYST:COMM:GPIB:CONT ON ! Will set GPIB port to Controller
Initial S/W Revision	A.02.00

### SCPI LAN

Activates a menu for identifying and changing the SCPI over a LAN configuration. There are a number of different ways to send SCPI remote commands to the instrument over LAN. It can be a problem to have multiple users simultaneously accessing the instrument over the LAN. These keys limit that somewhat by disabling the telnet, socket, and/or SICL capability.

Key Path	<b>System, I/O Config</b>
Initial S/W Revision	Prior to A.02.00

### SCPI Telnet

Turns the SCPI LAN telnet capability On or Off allowing you to limit SCPI access over LAN through telnet.

Key Path	<b>System, I/O Config, SCPI LAN</b>
Mode	All
<b>Remote Command</b>	:SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle?
Example	:SYST:COMM:LAN:SCPI:TELN:ENAB OFF
Preset	ON
Preset	This is unaffected by Preset but is set to ON with a “Restore System Defaults->Misc”
State Saved	No
Range	On   Off
Initial S/W Revision	Prior to A.02.00

### SCPI Socket

Turns the capability of establishing Socket LAN sessions On or Off. This allows you to limit SCPI access over LAN through socket sessions.

Key Path	<b>System, I/O Config, SCPI LAN</b>
Mode	All
<b>Remote Command</b>	:SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle?
Example	:SYST:COMM:LAN:SCPI:SOCK:ENAB OFF
Preset	ON
Preset	This is unaffected by a Preset but is set to ON with a “Restore System Defaults->Misc”
State Saved	No
Range	On   Off
Initial S/W Revision	Prior to A.02.00

### SCPI Socket Control Port (Remote Command Only)

Returns the TCP/IP port number of the control socket associated with the SCPI socket session. This query enables you to obtain the unique port number to open when a device clear is to be sent to the instrument. Every time a connection is made to the SCPI socket, the instrument creates a peer control socket. The port number for this socket is random. The user must use this command to obtain the port number of the control socket. To force a device clear on this socket, open the port and send the string

“DCL ” to the instrument.

If this SCPI command is sent to a non SCPI Socket interface, then 0 is returned.

Mode	All
<b>Remote Command</b>	:SYSTem:COMMunicate:LAN:SCPI:SOCKet:CONTRol?
Example	:SYST:COMM:LAN:SCPI:SOCK:CONT?
Preset	This is unaffected by Preset or “Restore System Defaults->Misc”.
State Saved	No
Range	0 to 65534
Initial S/W Revision	Prior to A.02.00

### SICL Server

Turns the SICL server capability On or Off, enabling you to limit SCPI access over LAN through the SICL server. (SICL IEEE 488.2 protocol.)

Parameter	Description	Setting
Maximum Connections	The maximum number of connections that can be accessed simultaneously	5
Instrument Name	The name (same as the remote SICL address) of your analyzer	inst0
Instrument Logical Unit	The unique integer assigned to your analyzer when using SICL LAN	8
Emulated GPIB Name	The name (same as the remote SICL address) of the device used when communicating with your analyzer	gpib7
Emulated GPIB Logical Unit	The unique integer assigned to your device when it is being controlled using SICL LAN	8
Emulated GPIB Address	The emulated GPIB address assigned to your transmitter tester when it is a SICL server (the same as your GPIB address)	18

Key Path	System, I/O Config, SCPI LAN
Mode	All
<b>Remote Command</b>	:SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle?
Example	:SYST:COMM:LAN:SCPI:SICL:ENAB OFF
Preset	ON
Preset	This is unaffected by Preset, but is set to ON with a “Restore System Defaults->Misc”


System Functions  
System

State Saved	No
Range	On   Off
Initial S/W Revision	Prior to A.02.00

**Reset Web Password**

The embedded web server contains certain capability which are password protected; modifying the LAN configuration of the instrument, and access to web pages that can change the settings of the instrument. The default password from the factory is 'agilent' (without the quotes). The control provided here is the means to set the web password as the user desires, or to reset the password to the factory default.

Selecting Reset web password brings up a control for resetting the password as the user desires, or to the factory default. A keyboard is required to change the password from the factory default of 'agilent' or to set a new password that contains alphabetic characters. The control is:

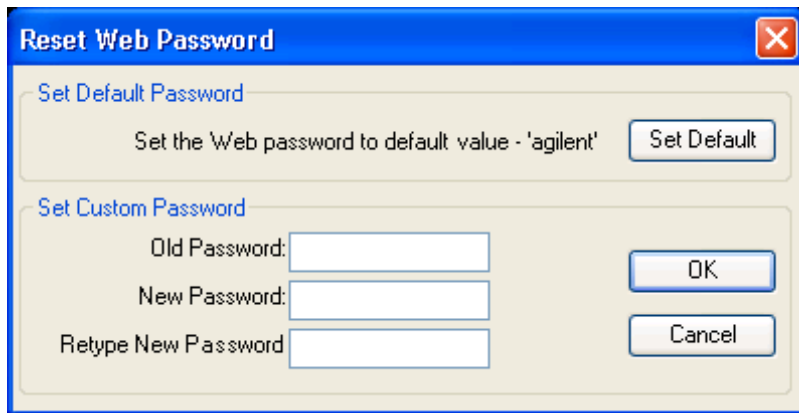

If this control is entered without an external keyboard or mouse connected, you can cancel the control by pressing the Cancel (ESC) front-panel key.

Key Path	<b>System, I/O Config</b>
Mode	All
Initial S/W Revision	Prior to A.02.00

**Query USB Connection (Remote Command Only)**

Enables you to determine the speed of the USB connection.

Mode	All
<b>Remote Command</b>	:SYSTem:COMMunicate:USB:CONNectioN?
Example	:SYST:COMM:USB:CONN?

Notes	<p>NONE – Indicates no USB connection has been made.</p> <p>LSpeed – Indicates a USB low speed connection (1.5 Mbps). Note: this is reserved for future use, the T+M488 protocol is not supported on low speed connections.</p> <p>HSPeed – Indicates that a USB high speed connection (480 Mbps) has been negotiated.</p> <p>FSPeed – Indicates that a USB full speed connection (12 Mbps) has been negotiated.</p>
State Saved	No
Range	NONE LSpeed HSPeed FSPeed
Initial S/W Revision	Prior to A.02.00

### USB Connection Status (Remote Command Only)

Enables you to determine the current status of the USB connection.

Mode	All
<b>Remote Command</b>	:SYSTem:COMMunicate:USB:STATus?
Example	:SYST:COMM:USB:STAT?
Notes	<p>SUSPended – Indicates that the USB bus is currently in its suspended state. The bus is in the suspended state when:</p> <ul style="list-style-type: none"> <li>The bus is not connected to any controller</li> <li>The controller is currently powered off</li> <li>The controller has explicitly placed the USB device into the suspended state.</li> </ul> <p>When in the suspended state, no USB activity, including start of frame packets are received.</p> <p>ACTive – Indicates that the USB device is in the active state. When the device is in the active state, it is receiving periodic start of frames but it isn't necessarily receiving or transmitting data.</p>
State Saved	No
Range	SUSPended ACTive
Initial S/W Revision	Prior to A.02.00

### USB Packet Count (Remote Command Only)

Enables you to determine the number of packets received and transmitted on the USB bus.

Mode	All
<b>Remote Command</b>	:SYSTem:COMMunicate:USB:PACKets?
Example	:SYST:COMM:USB:PACK?

System Functions  
System

Notes	Two integers are returned. The first is the number of packets received since application invocation, the second is the number of packets transmitted since application invocation. If no packets have been received or transmitted the response is 0,0.  The packet count is initialized to 0,0 when the instrument application is started.
State Saved	No
Initial S/W Revision	Prior to A.02.00

### LXI

Opens a menu that allows you to access the various LXI configuration properties.

Key Path	<b>System, I/O Config</b>
Initial S/W Revision	<b>Prior to A.02.00</b>

### LAN Reset

Resets the LAN connection.

Key Path	<b>System, I/O Config, LXI</b>
Initial S/W Revision	Prior to A.02.00

### LXI Domain

The instrument only receives LXI LAN Events sent by members of the same LXI Domain. Conversely, LXI Output LAN Events sent by the instrument can only be received by members of the same LXI Domain. This is not the same as the IEEE 1588 domain (see [“Domain \(Remote Command Only\)” on page 290](#)).

Key Path	<b>System, I/O Config, LXI</b>
<b>Remote Command</b>	:LXI:EVENT:DOMain <intDomain> :LXI:EVENT:DOMain?
Example	:LXI:EVENT:DOM 128 :LXI:EVENT:DOM?
Preset	0
Preset	Not affected by a Preset. The default value of "0" can be restored by pressing Restore Defs, Input/Output Settings
State Saved	Saved in instrument state.
Range	0–255
Initial S/W Revision	Prior to A.02.00

## LXI Output LAN Events

The device can be configured to send LXI LAN Events as the instrument's state changes. Specifically, it can notify other devices as the status signals WaitingForTrigger, Sweeping, Measuring, OperationComplete, and Recalling transition. Additionally, Output LAN Events can be sent in response to the receipt of any of the Input LAN Events.

This is the entry point for the LXI Output LAN Event system. This key branches to a list of events that can be sent out on the LAN in response to instrument events.

Key Path	<b>System, I/O Config, LXI</b>
Initial S/W Revision	Prior to A.02.00

## Disable All

This command causes the Enable property of all members of the LXI Output LAN Event List to be set to OFF.

Key Path	<b>System, I/O Config, LXI, LXI Output LAN Events</b>
<b>Remote Command</b>	:LXI:EVENT[:OUTPut]:LAN:DISable:ALL
Example	:LXI:EVEN:LAN:DIS:ALL
Initial S/W Revision	Prior to A.02.00

## Output LAN Event List

This is the list of LXI Output LAN events that can be sent in response to an instrument event such as sweeping or waiting for a trigger. Each member of this list has a key in the LXI Output LAN Events panel. The list can grow and shrink in response to Add and Remove commands respectively. New pages must be added and removed automatically as the list size changes. Only the first 14 characters of an LXI Output LAN Event name are displayed on the key.

Key Path	<b>System, I/O Config, LXI, LXI Output LAN Events</b>
<b>Remote Command</b>	:LXI:EVENT[:OUTPut]:LAN:LIST?
Example	:LXI:EVEN:LAN:LIST?  Returns the complete list of Output LAN Events which is, at minimum: "LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7", "WaitingForTrigger", "Measuring", "Sweeping", "OperationComplete", "Recalling"
Preset	"LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7", "WaitingForTrigger", "Measuring", "Sweeping", "OperationComplete", "Recalling"
Preset	Not affected by a Preset. The default values can be restored by pressing Restore Defs, Input/Output Settings.  Preset/Default values: "LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7", "WaitingForTrigger", "Measuring", "Sweeping", "OperationComplete", "Recalling"

State Saved	Saved in instrument state.
Readback Text	Displays the value of the LXI Output LAN Event Enabled parameter (Enabled   Disabled). Also displays the value of the LXI Output LAN Event Source parameter (WaitingForTrig   Sweeping   Measuring   OpComplete   Recalling)
Initial S/W Revision	Prior to A.02.00

**Add (Remote Command Only)**

Adds the provided string to the list of possible LAN events to output as a response to instrument events. As new LAN events are added, keys are generated in the LXI Output LAN Events menu. New key panels are generated as the number of possible LAN events increases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Output LAN Events menu.

<b>Remote Command:</b>	:LXI:EVENT[:OUTPut]:LAN:ADD "LANEVENT"
Example:	:LXI:EVEN:LAN:ADD "LANEVENT"
Notes:	The maximum length of the string is 16 characters. Longer strings are concatenated and added to the LXI Output LAN Event list. No event is added if the LAN Event already exists.
State Saved:	No
Range:	Uppercase, Lowercase, Numeric, Symbol except for comma or semicolon
Initial S/W Revision:	Prior to A.02.00

**Remove (Remote Command Only)**

Removes the provided string from the list of possible LAN events to output as a response to instrument events. As new LAN events are removed, keys are removed from the LXI Output LAN Events menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Output LAN Events menu. Events from the default list cannot be removed.

<b>Remote Command:</b>	:LXI:EVENT[:OUTPut]:LAN:REMOve[:EVENT] "LANEVENT"
Example:	:LXI:EVEN:LAN:REM "LANEVENT"
Notes:	The maximum length of the string is 16 characters. Longer strings are concatenated and the resulting LAN Event is removed from the LXI Output LAN Event list. Nothing happens if the LAN event was not introduced using the Add command.
State Saved:	No
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00



### Remove All (Remote Command Only)

Clears the list of custom LAN events (those introduced using the Add command) that are available to output as a response to instrument events. As new LAN events are removed, keys are removed from the LXI Output LAN Events menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Output LAN Events menu.

<b>Remote Command:</b>	:LXI:EVENT[:OUTPut]:LAN:REMOve:ALL
Example:	:LXI:EVEN:LAN:REM:ALL
Notes:	Only LAN Events added with the Add command are removed. Default events cannot be removed.
Initial S/W Revision:	Prior to A.02.00

### Source

Sets the instrument event that this LXI Output LAN event is tied to.

The possible instrument events are “WaitingForTrigger”, “Sweeping”, “Measuring”, “OperationComplete”, and “Recalling”.

The key is labeled with the value of the selected source.

For the instrument event specific LXI Output LAN Events “WaitingForTrigger,” “Sweeping,” “Measuring,” “OperationComplete,” and “Recalling,” this parameter is set to the corresponding source value and cannot be changed. For these events, the Source key does not appear.

WaitingForTrigger, Measuring, and Sweeping correspond to the standard trigger state machine activities for which they are named.

OperationComplete is low when a measurement operation is underway. For example, OperationComplete is low throughout a list sweep measurement, even though Sweeping, Measuring, and WaitingForTrigger will undergo a number of transitions. In this case, OperationComplete goes high when the entire list sweep is finished.

Recalling is high while the instrument is actively recalling a state.

Additionally, the Source parameter can be set to the name of any Input LAN Event. This causes the Output LAN Event to be sent upon receipt of the named Input LAN Event. There is no front panel support for these events.

The default list of available Input LAN Events is:

- “LAN0”
- “LAN1”
- “LAN2”
- “LAN3”
- “LAN4”
- “LAN5”
- “LAN6”
- “LAN7”

Key Path	System, I/O Config, LXI, LXI Output LAN Events, LAN[n]
----------	--

<b>Remote Command</b>	:LXI:EVENT[:OUTPut]:LAN[:SET]:SOURCE "LANEVENT", "SourceEvent"  :LXI:EVENT[:OUTPut]:LAN[:SET]:SOURCE? "LANEVENT"
Example	:LXI:EVEN:LAN:SOUR "LANEVENT","WaitingForTrigger"
Notes	The maximum length of the string is 45 characters.
Preset	"Sweeping" (The Output LAN Events "WaitingForTrigger", "Sweeping", "Measuring", "OperationComplete", and "Recalling" all have default source parameters that match their names)
Preset	Not affected by a Preset. The default values can be restored by pressing Restore Defs, Input/Output Settings.  Preset/Default values: "Sweeping" (The Output LAN Events "WaitingForTrigger", "Sweeping", "Measuring", "OperationComplete", and "Recalling" all have default source parameters that match their names)
State Saved	Saved in instrument state.
Range	"WaitingForTrigger" "Sweeping" "Measuring" "OperationComplete" "Recalling" "LAN0" "LAN1" "LAN2" "LAN3" "LAN4" "LAN5" "LAN6" "LAN7"  any user-added Input LAN Event
Initial S/W Revision	Prior to A.02.00

#### Destination (Remote Command Only)

Outgoing LAN events are sent to the hosts enumerated in the destination expression. This expression takes the form of "host1:port1, host2:port2, ..." where port numbers are optional, and default to the IANA assigned TCP port (5044). To designate a UDP broadcast at the default port, set the destination string to "" or "ALL". To designate a UDP broadcast at a specific port, set the destination string to ":port" or "ALL:port".

Examples:

- "192.168.0.1:23"
- "agilent.com, soco.agilent.com"
- "agilent.com:80, 192.168.0.1"

<b>Remote Command:</b>	:LXI:EVENT[:OUTPut]:LAN[:SET]:DESTINATION "LANEVENT", "destinationExpression"  :LXI:EVENT[:OUTPut]:LAN[:SET]:DESTINATION? "LANEVENT"
Example:	:LXI:EVEN:LAN:DEST "LANEVENT","host1, 192.168.0.1:80"
Notes:	The maximum length of the string is 45 characters.
Preset:	"ALL"
Preset:	Not affected by a Preset. The default value of "ALL" can be restored by using the command:  :SYSTEM:DEFAULT INPUT
State Saved:	Saved in instrument state.

Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

### Drive

Determines the behavior of an output event.

- Normal designates typical operation, where both edges of the instrument event are transmitted,
- Off disables the LAN event.
- Wired-OR causes only one edge to be transmitted.

Key Path	<b>System, I/O Config, LXI, LXI Output LAN Events, LAN[n]</b>
<b>Remote Command</b>	:LXI:EVENT[:OUTPut]:LAN[:SET]:DRIVE "LANEVENT", OFF NORMal WOR  :LXI:EVENT[:OUTPut]:LAN[:SET]:DRIVE? "LANEVENT"
Example	:LXI:EVEN:LAN:DRIV "LANEVENT",WOR
Preset	NORMal
Preset	Not affected by a Preset. The default value of "NORMal" can be restored by using the command:  :SYSTem:DEFault INPut
State Saved	Saved in instrument state.
Range	OFF NORMal WOR
Initial S/W Revision	Prior to A.02.00

### Slope

Determines which instrument event transition results in a LAN packet being sent and whether or not that edge is inverted.

When the Drive parameter is set to Normal, a Slope of Negative causes both edges to be inverted before they are transmitted. A Positive Slope transmits the edges unaltered.

When the Drive parameter is set to WOR, only Positive edges are transmitted. When the Slope is Negative, a falling edge is inverted and sent as a rising edge. When the Slope is Positive, a rising edge is sent normally.

The following table illustrates the effects of the Slope and Drive parameters.

Instrument Event Edge	Slope Parameter	Drive Parameter	Action
0	Negative	Off	Not sent
0	Positive	Off	Not sent
1	Negative	Off	Not sent
1	Positive	Off	Not sent

System Functions  
System

0	Negative	Normal	1
0	Positive	Normal	0
1	Negative	Normal	0
1	Positive	Normal	1
0	Negative	Wired OR	1
0	Positive	Wired OR	Not sent
1	Negative	Wired OR	Not sent
1	Positive	Wired OR	0

Key Path	<b>System, I/O Config, LXI, LXI Output LAN Events, LAN[n]</b>
Remote Command	:LXI:EVENT[:OUTPut]:LAN[:SET]:SLOPe "LANEVENT", POSitive NEGative :LXI:EVENT[:OUTPut]:LAN[:SET]:SLOPe? "LANEVENT"
Example	:LXI:EVEN:LAN:SLOP "LANEVENT",POS
Preset	POSitive
Preset	Not affected by a Preset. The default value of "Positive" can be restored by using the command: :SYSTem:DEFault INPut
State Saved	Saved in instrument state.
Range	POSitive NEGative
Initial S/W Revision	Prior to A.02.00

### Timestamp Delta

This parameter represents a time in seconds to add to the timestamp of the Output LAN Event. This timestamp delta allows the receiving instrument to delay its response until the time specified in the timestamp.

Key Path	<b>System, I/O Config, LXI, LXI Output LAN Events, LAN[n]</b>
Remote Command	:LXI:EVENT[:OUTPut]:LAN[:SET]:TSDelta "LANEVENT", <seconds> :LXI:EVENT[:OUTPut]:LAN[:SET]:TSDelta? "LANEVENT"
Example	:LXI:EVEN:LAN:TSD "LANEVENT",10.5 s
Preset	0.0 s
Preset	Not affected by a Preset. The default value of "0.0 s" can be restored by using the command: :SYSTem:DEFault INPut
State Saved	Saved in instrument state.

Range	0.0 – 1.7976931348623157 x 10308 s(Max Double)
Initial S/W Revision	Prior to A.02.00

### Enabled

If this parameter is set to ON, this LAN Event is sent when the selected Source instrument event occurs.

Otherwise, this LAN Event is never output.

Key Path	<b>System, I/O Config, LXI, LXI Output LAN Events, LAN[n]</b>
<b>Remote Command</b>	:LXI:EVENT[:OUTPut]:LAN[:SET]:ENABled "LANEVENT", ON OFF 1 0 :LXI:EVENT[:OUTPut]:LAN[:SET]:ENABled? "LANEVENT"
Example	:LXI:EVEN:LAN:ENAB "LAN0",ON
Preset	OFF
Preset	Not affected by a Preset. The default value of "OFF" can be restored by using the command: :SYSTem:DEFault INPut
State Saved	Saved in instrument state.
Range	OFF ON 0 1
Initial S/W Revision	Prior to A.02.00

### Count (Remote Command Only)

Returns the number of items in the LXI Output LAN Event List.

<b>Remote Command:</b>	:LXI:EVENT[:OUTPut]:LAN:COUNT?
Example:	:LXI:EVEN:LAN:COUN?
Initial S/W Revision:	Prior to A.02.00

### Configure (Remote Command Only)

Allows the configuration of some parameters from a single SCPI command.

<b>Remote Command:</b>	:LXI:EVENT[:OUTPut]:LAN[:SET]:CONFigure "lanEvent", <enabled>, <source>, <slope>, <drive>, <destination>
Example:	:LXI:EVEN:LAN:CONF "LAN0",1,"WaitingForTrigger",POS,NORM,"ALL"
Initial S/W Revision:	Prior to A.02.00

### Send (Remote Command Only)

Forces the instrument to send the requested LAN Event. The LAN Event must be enabled, otherwise this command

is ignored.

<b>Remote Command:</b>	:LXI:EVENT[:OUTPut]:LAN:SEND "LANEVENT" , RISE FALL
Example:	:LXI:EVEN:LAN:SEND "LANEVENT", FALL
Initial S/W Revision:	Prior to A.02.00

#### Identifier (Remote Command Only)

Sets the string that will be placed in the peer-to-peer packet when the Output LAN Event is transmitted. The Identifier is variable to allow for easier system debugging. The Identifier must be unique, for example the "LAN0" and "LAN1" output events cannot have identical identifiers.

<b>Remote Command:</b>	:LXI:EVENT[:OUTPut]:LAN[:SET]:IDENTifier "LANEVENT" , "identifier" :LXI:EVENT[:OUTPut]:LAN[:SET]:IDENTifier? "LANEVENT"
Example:	:LXI:EVEN:LAN:IDEN"LAN0","debugstring"
Notes:	The maximum length of the string is 16 characters. Nothing happens if the LAN event does not exist. The default value is that the identifier is equivalent to the name of the LAN Event.
State Saved:	Saved in instrument state.
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

#### IEEE 1588 Time (Remote Command Only)

##### Epoch Time (Remote Command Only)

If the device is selected as the IEEE 1588 master clock, this sets the clock using the number of seconds elapsed since January, 1 1970 at 00:00:00 in International Atomic Time (TAI). Epoch time is time zone invariant. Otherwise, this allows the user to query the epoch time.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME][:VALue] <seconds>,<fractionalSeconds>
Example:	:LXI:CLOC 10020304.0 s,0.123456 s
Notes:	The seconds argument must only contain values representing whole seconds. For example 1243.0 s is acceptable, but 1243.01 results in an error. Ignored when the device is not selected as the IEEE 1588 master clock. The fractional portion is only accurate to the microseconds position. Error generated if the seconds argument contains a fractional portion.
Preset:	System time

Preset:	Not affected by a Preset. The default value of "System Time" can be restored by using the command: :SYSTem:DEFault INPut
State Saved:	No
Range:	Seconds: 0.0 – 1.7976931348623157 x 10308 s (Max Double) Fraction: 0.0 s – 0.999999 s
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:LXI:CLOCK[:TIME][:VALUE]?
Example:	:LXI:CLOC?
Notes:	The seconds argument must only contain values representing whole seconds. For example 1243.0 s is acceptable, but 1243.01 results in an error. Ignored when the device is not selected as the IEEE 1588 master clock. The fractional portion is only accurate to the microseconds position. Error generated if the seconds argument contains a fractional portion.
Preset:	System time
State Saved:	No
Range:	Seconds: 0.0 – 1.7976931348623157 x 10308 s (Max Double) Fraction: 0.0 s – 0.999999 s
Initial S/W Revision:	Prior to A.02.00

### Seconds (Remote Command Only)

If the device is selected as the IEEE 1588 master clock, this sets the seconds portion of the clock. Otherwise, this allows the user to query the seconds portion of the epoch time. Valid values are in discrete increments of whole seconds.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:SECONDS <seconds> :LXI:CLOCK[:TIME]:SECONDS?
Example:	:LXI:CLOC:SEC 10020304.0
Notes:	Ignored when the device is not selected as the IEEE 1588 master clock. Error generated if the argument contains a fractional portion. For example 1243.0 s is acceptable, but 1243.01 results in an error.
Preset:	System time
Preset:	Not affected by a Preset. The default value of "System Time" can be restored by using the command: :SYSTem:DEFault INPut

State Saved:	No
Range:	0.0 – 1.7976931348623157 x 10308 s (Max Double)
Initial S/W Revision:	Prior to A.02.00

### Fraction (Remote Command Only)

If the device is selected as the IEEE 1588 master clock, this sets the sub-second value of the clock. Otherwise, this allows the user to query the sub-second value of the epoch time.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:FRAction <fraction> :LXI:CLOCK[:TIME]:FRAction?
Example:	:LXI:CLOC:FRAC 10 ms
Notes:	Ignored when the device is not selected as the IEEE 1588 master clock. Only accurate to the microseconds position.
Preset:	Sub-second value of system time
State Saved:	No
Range:	[0.0,1.0)
Initial S/W Revision:	Prior to A.02.00

### Local Time (Remote Command Only)

Returns the current local time formatted as a date time string.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:LOCAL?
Example:	:LXI:CLOC:LOC? ! Returns “5/15/2007 6:23:34.123456”
Notes:	LXI:CLOCK[:TIME]:LOCAL? Returns Any string constituting a valid date and time
Initial S/W Revision:	Prior to A.02.00

### Leap Second Offset (Remote Command Only)

Enables you to set the leap second offset between the UTC and TAI time standards.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:LSOffset <integer> :LXI:CLOCK[:TIME]:LSOffset?
Example:	:LXI:CLOC:LSOF 55
Range:	0 – 2147483647 (Max Integer)
Initial S/W Revision:	Prior to A.02.00



### International Atomic Time (Remote Command Only)

Retrieves the current time using the TAI format.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:TAI?
Example:	:LXI:CLOC:TAI? !"5/15/2007 6:23:34.123456"
Notes:	:LXI:CLOCK[:TIME]:TAI? Returns Any string constituting a valid date and time
Initial S/W Revision:	Prior to A.02.00

### Time Zone (Remote Command Only)

Retrieves the current local time zone as an offset in hours, minutes, and seconds from Greenwich Mean Time.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:TZONe?
Example:	:LXI:CLOC:TZON?
Notes:	:LXI:CLOC:TZON? returns "01:00:00" if the current local time zone is 1 hour ahead from Greenwich Mean Time
Initial S/W Revision:	Prior to A.02.00

### Daylight Savings (Remote Command Only)

Retrieves the current status of the Windows System setting for Daylight Savings Time. Whether or not daylight savings time is in effect influences the time zone parameter.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:DLSavings?
Example:	:LXI:CLOC:DLS?
Notes:	:LXI:CLOC:DLS? Returns 1 when Daylight Savings Time is On and 0 if the when Daylight Savings Time is Off
Preset:	The Windows system Daylight Savings setting.
Initial S/W Revision:	Prior to A.02.00

### Coordinated Universal Time (Remote Command Only)

Retrieves the current time using the UTC format.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:UTC?
Example:	:LXI:CLOC:UTC? !"5/15/2007 6:23:34.123456"
Notes:	:LXI:CLOC:UTC? Returns Any string constituting a valid date and time
Initial S/W Revision:	Prior to A.02.00

### Time Marker (Remote Command Only)

Records the PTP time as a marker that can later be measured against the current PTP time. Typical use is to time the length of a sequence of instrument operations. There are 9 available markers with indices 1 – 9.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:MARKer[1] 2 3 4 5 6 7 8 9[:SET]
Example:	:LXI:CLOC:MARK1 :LXI:CLOC:MARK2 :LXI:CLOC:MARK3 :LXI:CLOC:MARK4 :LXI:CLOC:MARK5 :LXI:CLOC:MARK6 :LXI:CLOC:MARK7 :LXI:CLOC:MARK8 :LXI:CLOC:MARK9 :LXI:CLOC:MARK
Initial S/W Revision:	Prior to A.02.00

### Time Marker Clear (Remote Command Only)

Clears the recorded PTP time marker used to measure against the current PTP time. There are 9 available markers with indices 1 – 9.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:MARKer[1] 2 3 4 5 6 7 8 9:CLEAR
Example:	:LXI:CLOC:MARK1:CLEA :LXI:CLOC:MARK2:CLEA :LXI:CLOC:MARK3:CLEA :LXI:CLOC:MARK4:CLEA :LXI:CLOC:MARK5:CLEA :LXI:CLOC:MARK6:CLEA :LXI:CLOC:MARK7:CLEA :LXI:CLOC:MARK8:CLEA :LXI:CLOC:MARK9:CLEA :LXI:CLOC:MARK:CLEA
Initial S/W Revision:	Prior to A.02.00

### Time Marker Delta (Remote Command Only)

Calculates and returns the delta time from the marker to the present PTP time. Also returns the seconds

and sub-seconds portions of the start and end times. There are 9 available markers with indices 1 – 9.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:MARKer[1] 2 3 4 5 6 7 8 9:DELTA?
Example:	:LXI:CLOC:MARK1:DELT? ! returns <deltaTime>,<startSeconds>,<startFractionalSeconds>,<endSeconds>,<endFractionalSeconds>  :LXI:CLOC:MARK2:DELT? :LXI:CLOC:MARK3:DELT? :LXI:CLOC:MARK4:DELT? :LXI:CLOC:MARK5:DELT? :LXI:CLOC:MARK6:DELT? :LXI:CLOC:MARK7:DELT? :LXI:CLOC:MARK8:DELT? :LXI:CLOC:MARK9:DELT? :LXI:CLOC:MARK:DELT?
Notes:	:LXI:CLOCK[:TIME]:MARKer[1] 2 3 4 5 6 7 8 9:DELTA? Returns a value between 0.0 – 1.7976931348623157 x 10308 s (Max Double)
Range:	0.0 – 1.7976931348623157 x 10308 s (Max Double)
Initial S/W Revision:	Prior to A.02.00

### Measurement Data Timestamp (Remote Command Only)

Returns the beginning and ending times of the last measurement cycle. This command also returns the duration of the measurement cycle. These values correspond to the last rising and falling transition of the Measuring instrument event.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:MEASure[:DELTA]?
Example:	:LXI:CLOC:MEAS? !Returns 2.0,1145902.0,0.123456, ,1145904.0,0.123456
Notes:	:LXI:CLOCK[:TIME]:MARKer[1] 2 3 4 5 6 7 8 9:DELTA? Returns a value between 0.0 – 1.7976931348623157 x 10308 s (Max Double)
Initial S/W Revision:	Prior to A.02.00

### Clear Measurement Data Timestamp (Remote Command Only)

Forces the return values of the Measurement Data Timestamp to zero until the next measurement cycle occurs. This command need not be issued for the Measurement Data Timestamp to be refreshed.

<b>Remote Command:</b>	:LXI:CLOCK[:TIME]:MEASure:CLEAr
Example:	:LXI:CLOC:MEAS:CLE
Initial S/W Revision:	Prior to A.02.00

### Precision Time Protocol

Precision Time Protocol, as defined by IEEE 1588, is a method for synchronizing the time across a network. Instruments participating in the PTP network can coordinate activities using this common time base.

#### Accuracy (Remote Command Only)

Sets the typical offset from the correct time that a user can expect from the instrument PTP clock. This parameter is used when the instrument is selected as the Master clock. It should be set along with the time when configuring a master clock.

The value should be chosen by judging how precisely the clock can be set to the exact TAI time and the accuracy and drift of the clock's underlying oscillator.

This is an input to the IEEE 1588 Best Master Clock algorithm.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:ACCuracy NS25 NS100 NS250 NS1000 NS2500 US10 US25 US100 US250 US 1000 US2500 MS10 MS25 MS100 MS1000 S10 GT10S UNKNown :LXI:CLOCK:PTP:ACCuracy?
Example:	:LXI:CLOC:PTP:ACC US25
Preset:	GT10S
Preset:	Not affected by a Preset. The default value of "GT10S" can be restored by using the command: SYSTEM:DEFAULT INPUT
Range:	NS25 NS100 NS250 NS1000 NS2500 US10 US25 US100 US250 US1000 US 2500 MS10 MS25 MS100 MS1000 S10 GT10S UNKNown
Initial S/W Revision:	Prior to A.02.00

#### Announce Interval (Remote Command Only)

Sets the time in seconds between PTP announce packets. A shorter interval makes the system more responsive to changes in the master clock at the cost of network bandwidth and packet processing time. The announce interval should be constant across all the instruments in the network. The announce interval will be rounded to the nearest non-negative integer power of two, with a maximum value of 16.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:ANNounce:INTerval <interval> :LXI:CLOCK:PTP:ANNounce:INTerval?
Example:	:LXI:CLOC:PTP:ANN:INT 1
Preset:	2
Preset:	Not affected by a Preset. The default value of "4" can be restored by using the command: SYSTEM:DEFAULT INPUT
Range:	1 2 4 8 16

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

#### Announce Receipt Time Out (Remote Command Only)

Sets the number of announce intervals that the instrument waits to receive an announce packet while in the Slave or Listening. After this number of announce intervals, the instrument will transition to the Master state.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:ANNOUNCE:RTOout <numberOfIntervals> :LXI:CLOCK:PTP:ANNOUNCE:RTOout?
Example:	:LXI:CLOC:PTP:ANN:RTO 5
Preset:	3
Preset:	Not affected by a Preset. The default value of "3" can be restored by using the command: SYSTEM:DEFAULT INPUT
Min:	2
Max:	10
Initial S/W Revision:	Prior to A.02.00

#### Clock Class (Remote Command Only)

Returns a ranking of the master clock suitability relative to other clocks on the network. A lower value represents a more suitable clock.

Suitability is defined by the IEEE 1588 standard section 7.6.2.4

<b>Remote Command:</b>	:LXI:CLOCK:PTP:CCLASS?
Example:	:LXI:CLOC:PTP:CCL?
Preset:	248
Preset:	Not affected by a Preset. The default value of "248" can be restored by using the command: SYSTEM:DEFAULT INPUT
Min:	6
Max:	248
Initial S/W Revision:	Prior to A.02.00

#### Deviation (Remote Command Only)

Returns the standard deviation of the instrument's PTP time from the Grandmaster's PTP time.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:DEVIATION?
Example:	:LXI:CLOC:PTP:DEV?

System Functions  
System

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

**Domain (Remote Command Only)**

The instrument synchronizes its clock only with other clocks in the same domain.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:DOMain <domainNumber> :LXI:CLOCK:PTP:DOMain?
Example:	:LXI:CLOC:PTP:DOM 0
Preset:	0
Preset:	Not affected by a Preset. The default value of "0" can be restored by using the command: SYSTem:DEFault INPut
Min:	0
Max:	127
Initial S/W Revision:	Prior to A.02.00

**Offset (Remote Command Only)**

Returns the difference between the instrument clock PTP time and the Master clock PTP time.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:OFFSet?
Example:	:LXI:CLOC:PTP:OFFS?
Range:	0.0 to - 1.7976931348623157 x 10308 s (Min Double)
Initial S/W Revision:	Prior to A.02.00

**First Priority (Remote Command Only)**

Setting this parameter overrides the IEEE 1588 Best Master Clock algorithm. If an instrument's First Priority parameter is smaller than all other clocks in its domain, it is chosen as the Master clock.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:PRIority:FIRSt <priority> :LXI:CLOCK:PTP:PRIority:FIRSt?
Example:	:LXI:CLOC:PTP:PRI:FIRS 50
Preset:	128
Preset:	Not affected by a Preset. The default value of "128" can be restored by using the command: SYSTem:DEFault INPut
Min:	0
Max:	255

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

### Second Priority (Remote Command Only)

When two or more clocks are determined to be equally good by the Best Master Clock algorithm, the clock with the lowest Second Priority value is chosen to be the Master Clock.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:PRIOriTY:SECOnd <priority> :LXI:CLOCK:PTP:PRIOriTY:SECOnd?
Example:	:LXI:CLOC:PTP:PRI:SEC 50
Preset:	128
Preset:	Not affected by a Preset. The default value of "128" can be restored by using the command: SYSTem:DEFault INPut
Min:	0
Max:	255
Initial S/W Revision:	Prior to A.02.00

### State (Remote Command Only)

Returns the current state of the instrument's PTP clock as defined in the IEEE 1588 standard.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:STATe?
Example:	:LXI:CLOC:PTP:STAT?
Range:	INITializing FAULty DISabled LISTening PREMaster  MASTer PASSive UNCalibrated SLAVe
Initial S/W Revision:	Prior to A.02.00

### Traceability (Remote Command Only)

Returns the quality of the instrument's PTP clock source of time when chosen as the Grand Master clock.

This parameter is used by the Best Master Clock algorithm.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:TRACeability?
Example:	:LXI:CLOC:PTP:TRAC?
Range:	ATOMic GPS RADio PTP NTP HANDset OTHer OSCillator
Initial S/W Revision:	Prior to A.02.00

**Variance (Remote Command Only)**

Returns the variance of the instrument's PTP clock time relative to the Master's PTP clock time.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:VARIance?
Example:	:LXI:CLOC:PTP:VAR?
Range:	0.0 – 1.7976931348623157 x 10308 (Max Double)
Initial S/W Revision:	Prior to A.02.00

**Sync Interval (Remote Command Only)**

Sets the rate at which PTP sync packets are transmitted when this instrument is acting as a Master PTP clock. The values must be integer powers of 2.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:SINTerval <seconds>
Example:	:LXI:CLOC:PTP:SINT 0.25s
Preset:	1
Preset:	Not affected by a Preset. The default value of "1" can be restored by using the command: SYSTem:DEFault INPut
Range:	0.0625s 0.125s 0.25s 0.5s 1s 2s
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:LXI:CLOCK:PTP:SINTerval?
Example:	:LXI:CLOC:PTP:SINT?
Preset:	1
Range:	0.0625s 0.125s 0.25s 0.5s 1s 2s
Initial S/W Revision:	Prior to A.02.00

**Delay Request Interval (Remote Command Only)**

This property is used by the master clock to specify the interval between delay request packets sent from the slave to the master clock. Slaves use a randomly-chosen interval, with mean equal to this property.

The value for this parameter must be an integer power of two.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:DRINterval <seconds>
Example:	:LXI:CLOC:PTP:DRIN 15 ms
Preset:	8 s



Preset:	Not affected by a Preset. The default value of "8 s" can be restored by using the command: SYSTem:DEFault INPut
Range:	1 s   2 s   4 s   8 s   16 s   32 s
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:LXI:CLOCK:PTP:DRINterval?
Example:	:LXI:CLOC:PTP:DRIN 15 ms
Preset:	8 s
Min:	0.0 s
Max:	2 <sup>32</sup> = 4294967296 s
Initial S/W Revision:	Prior to A.02.00

### Grand Master

In the IEEE 1588 the best clock in the system, as determined by the Best Master Clock algorithm, is chosen as the Grand Master clock. The Grand Master clock is the ultimate source of time which all other clocks attempt to synchronize to. If the network is limited to a single subnet, the Master clock and the Grand Master clock are synonymous.

If a network spans multiple subnets, boundary clocks must be utilized to segment the network. Each subnet then selects a Master Clock using the Best Master Clock algorithm. From this population of Master Clocks, the best clock is selected to be the Grand Master clock.

### Accuracy (Remote Command Only)

Returns the relative accuracy of the Grand Master clock.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:GMASter:ACCuracy?
Example:	:LXI:CLOC:PTP:GMAS:ACC? !For example, this might return GT10S.
Range:	25NS 100NS 250NS 1US 2.5US 10US 25US 100US 250US 1MS 2.5MS 10MS 25MS 100MS 1S 10S GT10S UNKNown
Initial S/W Revision:	Prior to A.02.00

### MAC Address (Remote Command Only)

Returns the Grand Master's MAC Address.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:GMASter:MADdress?
Example:	:LXI:CLOC:PTP:GMAS:MADD? !For example, this might return "00-00-50-1e-ca-ad".
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

**Traceability (Remote Command Only)**

Describes the quality of the Grand Master PTP clock's source of time.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:GMASter:TRACeability?
Example:	:LXI:CLOC:PTP:GMAS:TRAC? !For example, this might return OSC.
Range:	ATOMic GPS RADio PTP NTP HANDset OTHer OSCillator
Initial S/W Revision:	Prior to A.02.00

**Master**

Instruments on the same subnet use the Best Master Clock algorithm to select a Master clock. The Master clock is used as the basis for synchronization.

**MAC Address (Remote Command Only)**

Returns the Master's MAC Address.

<b>Remote Command:</b>	:LXI:CLOCK:PTP:MASter:MADdress?
Example:	:LXI:CLOC:PTP:MAST:MADD?
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

**Servo Algorithm (Remote Command Only)**

The Servo Algorithm parameters are considered advanced settings for tweaking IEEE 1588 performance.

**Log (Remote Command Only)**

The Servo Log records measurements of the offset between the instrument's PTP clock and the Master's PTP clock. It also records the packet travel time for Master-to-Slave and Slave-to-Master transactions.

**Next (Remote Command Only)**

Retrieves and removes the oldest entry from the Servo Log. The format for a servo log entry is as follows

Sample Index:	integer representing entry order
Time Seconds:	seconds portion of the entry timestamp
Time Fraction:	sub-second portion of the entry timestamp
Offset Seconds:	offset between the instrument's PTP clock and the Master's PTP clock
Average Delay Seconds:	the average measured transmission delay
Master Delay Seconds:	Master-to-Slave packet travel time
Slave Delay Seconds:	Slave-to-Master packet travel time

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM:LOG[:NEXT]?
Example:	:LXI:CLOC:SALG:LOG?
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

#### Circular (Remote Command Only)

Sets the behavior for entries occurring while the Servo Log is full.

- If Circular is set to 1, incoming events overwrite the oldest events in the log.
- If Circular is set to 0, incoming events are discarded.

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM:LOG:CIRCULAR[:ENABLED] ON OFF 0 1 :LXI:CLOCK:SALGORITHM:LOG:CIRCULAR[:ENABLED]?
Example:	:LXI:CLOC:SALG:LOG:CIRC 1
Preset:	1
Preset:	Not affected by a Preset. The default value of "1" can be restored by using the command: SYSTEM:DEFAULT INPUT
Range:	ON OFF 0 1
Initial S/W Revision:	Prior to A.02.00

#### Beginning Entry (Remote Command Only)

Sets or freezes the beginning entry of the log when in circular mode to the most recently added entry at the time of the command. This is so that the :LXI:EVENT:LOG:ENTRY? command has a reference entry for indexing individual entries in the log.

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM:LOG:CIRCULAR:FBENTRY
Example:	LXI:CLOCK:SALG:LOG:CIRC:FBEN
Initial S/W Revision:	Prior to A.02.00

#### Clear (Remote Command Only)

Clears all entries from the Servo Log.

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM:LOG:CLEAR
Example:	:LXI:CLOC:SALG:LOG:CLE
Initial S/W Revision:	Prior to A.02.00

### Count (Remote Command Only)

Returns the number of unread entries in the Servo Log.

<b>Remote Command:</b>	:LXI:CLOCK:SALGorithm:LOG:COUNT?
Example:	:LXI:CLOC:SALG:LOG:COUN?
Range:	0 - IEEE 1588 Servo Log Size
Initial S/W Revision:	Prior to A.02.00

### Enabled (Remote Command Only)

- When the Servo Log is disabled, no events are recorded.
- When it is enabled, the Servo Log is active.

<b>Remote Command:</b>	:LXI:CLOCK:SALGorithm:LOG:ENABLEd ON OFF 0 1 :LXI:CLOCK:SALGorithm:LOG:ENABLEd?
Example:	:LXI:CLOC:SALG:LOG:ENAB 1
Preset:	0
Preset:	Not affected by a Preset. The default value of "0" can be restored by using the command: SYSTem:DEFault INPut
Range:	ON OFF 0 1
Initial S/W Revision:	Prior to A.02.00

### Size (Remote Command Only)

Sets the maximum number of entries to store in the Servo Log.

<b>Remote Command:</b>	:LXI:CLOCK:SALGorithm:LOG:SIZE <maxLogEntries> :LXI:CLOCK:SALGorithm:LOG:SIZE?
Example:	:LXI:CLOC:SALG:LOG:SIZE 100
Preset:	256
Preset:	Not affected by a Preset. The default value of "256" can be restored by using the command: SYSTem:DEFault INPut
Min:	0
Max:	1024
Initial S/W Revision:	Prior to A.02.00

### All (Remote Command Only)

Non-destructively returns the entire contents of the Servo Log.

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM:LOG:ALL?
Example:	:LXI:CLOC:SALG:LOG?
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

### Specific Entry (Remote Command Only)

Non-destructively returns a specifically indexed entry from within the Servo Log.

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM:LOG:ENTRY? <intIndex>
Example:	:LXI:CLOC:SALG:LOG? 0 !Returns the oldest entry in the Servo Log. Example of result : "1,1208978798,139644871,0.000000000,3.393600e+038,0.000000000,0.000000000,0.000000000"
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

### Statistics (Remote Command Only)

Returns the long-term statistics of the servo log that characterizes the performance of the instrument PTP clock's offset from the master PTP clock. The statistics include the following values:

- Number of samples (an integer)
- Mean offset (a double)
- Standard deviation of the offset (a double)
- Maximum offset (a double)
- Minimum offset (a double)

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM:LOG:STATISTICS[:DATA]?
Example:	:LXI:CLOC:SALG:LOG:STAT? ! Example of result : "3643,0.000000000,0.000000000,0.000000000,0.000000000"
Initial S/W Revision:	Prior to A.02.00

### Clear Statistics (Remote Command Only)

Resets the long-term servo performance statistics.

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM:LOG:STATISTICS:CLEAR
Example:	:LXI:CLOC:SALG:LOG:STAT? ! Example of result : "3643,0.000000000,0.000000000,0.000000000,0.000000000"

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

#### Asymmetry (Remote Command Only)

Sets the difference in seconds between the Master-to-Slave packet travel time and the Slave-to-Master packet travel time.

<b>Remote Command:</b>	:LXI:CLOCK:SALgorithm[:SET]:ASYMmetry <seconds> :LXI:CLOCK:SALgorithm[:SET]:ASYMmetry?
Example:	:LXI:CLOC:SALG:ASYM 15 ns
Preset:	0.0 s
Preset:	Not affected by a Preset. The default value of "0.0 s " can be restored by using the command: SYSTem:DEFault INPut
Min:	-1
Max:	1
Initial S/W Revision:	Prior to A.02.00

#### Coarse/Fine Threshold (Remote Command Only)

Determines when the PTP clock Servo algorithm uses the 'Fine' or 'Coarse' parameters for adjusting the instrument's PTP clock time. The threshold is measured against a running estimate of the servo variance.

Coarse mode causes a slave clock to converge with the master clock more quickly, but it is more sensitive to noise, while Fine mode filters out noise more effectively, but takes longer to converge.

<b>Remote Command:</b>	:LXI:CLOCK:SALgorithm[:SET]:CFTHreshold <secondsSquared> :LXI:CLOCK:SALgorithm[:SET]:CFTHreshold?
Example:	:LXI:CLOC:SALG:CFTH 0.25
Preset:	1.0e-11
Preset:	Not affected by a Preset. The default value of "1.0e-11 " can be restored by using the command: SYSTem:DEFault INPut
Min:	0
Max:	1
Initial S/W Revision:	Prior to A.02.00

#### Coarse Proportional Constant (Remote Command Only)

This constant is used by the servo when above the Coarse/Fine Threshold variance. Decreasing this constant causes the servo to become less responsive to both noise in the system and changes in the Master Clock's rate. Conversely, increasing this constant causes the servo to respond more energetically to both system noise and changes in the

Master Clock's rate.

The ratio between the Proportional and Integral constants should remain roughly constant.

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM[:SET]:CPCONSTANT <servoConstant> :LXI:CLOCK:SALGORITHM[:SET]:CPCONSTANT?
Example:	:LXI:CLOC:SALG:CPC 0.5
Preset:	0.4
Preset:	Not affected by a Preset. The default value of "0.4 " can be restored by using the command: SYSTEM:DEFAULT INPUT
Min:	0
Max:	1
Initial S/W Revision:	Prior to A.02.00

#### Coarse Integral Constant (Remote Command Only)

This constant is used by the servo when above the Coarse/Fine Threshold variance. Decreasing this constant causes the servo to become less responsive to both noise in the system and changes in the Master Clock's rate. Conversely, increasing this constant causes the servo to respond more energetically to both system noise and changes in the Master Clock's rate.

The ratio between the Proportional and Integral constants should remain roughly constant.

<b>Remote Command:</b>	:LXI:CLOCK:SALGORITHM[:SET]:CICONSTANT <servoConstant> :LXI:CLOCK:SALGORITHM[:SET]:CICONSTANT?
Example:	:LXI:CLOC:SALG:CIC 0.5
Preset:	0.2
Preset:	Not affected by a Preset. The default value of "0.2 " can be restored by using the command: SYSTEM:DEFAULT INPUT
Min:	0
Max:	1
Initial S/W Revision:	Prior to A.02.00

#### Fine Proportional Constant (Remote Command Only)

This constant is used by the servo when below the Coarse/Fine Threshold variance. Decreasing this constant causes the servo to become less responsive to both noise in the system and changes in the Master Clock's rate. Conversely, increasing this constant causes the servo to respond more energetically to both system noise and changes in the Master Clock's rate.

## System Functions

### System

The ratio between the Proportional and Integral constants should remain roughly constant.

<b>Remote Command:</b>	:LXI:CLOCK:SALGorithm[:SET]:FPConstant <servoConstant> :LXI:CLOCK:SALGorithm[:SET]:FPConstant?
Example:	:LXI:CLOC:SALG:FPC 1
Preset:	0.35
Preset:	Not affected by a Preset. The default value of "0.35 " can be restored by using the command: SYSTem:DEFault INPut
Min:	0
Max:	1
Initial S/W Revision:	Prior to A.02.00

#### Fine Integral Constant (Remote Command Only)

This constant is used by the servo when below the Coarse/Fine Threshold variance. Decreasing this constant causes the servo to become less responsive to both noise in the system and changes in the Master Clock's rate. Conversely, increasing this constant causes the servo to respond more energetically to both system noise and changes in the Master Clock's rate.

The ratio between the Proportional and Integral constants should remain roughly constant.

<b>Remote Command:</b>	:LXI:CLOCK:SALGorithm[:SET]:FIConstant <servoConstant> :LXI:CLOCK:SALGorithm[:SET]:FIConstant?
Example:	:LXI:CLOC:SALG:FIC 0.6
Preset:	0.05
Preset:	Not affected by a Preset. The default value of "0.05" can be restored by using the command: SYSTem:DEFault INPut
Min:	0
Max:	1
Initial S/W Revision:	Prior to A.02.00

#### Maximum Outlier Discard Count (Remote Command Only)

Sets the maximum number of outlier packets to ignore. After this maximum is exceeded, the next packet is accepted, regardless of whether or not it is flagged as an outlier.

<b>Remote Command:</b>	:LXI:CLOCK:SALGorithm[:SET]:OMAXimum <consecutiveSamples> :LXI:CLOCK:SALGorithm[:SET]:OMAXimum?
------------------------	---



Example:	:LXI:CLOC:SALG:OMAX 3
Preset:	5
Preset:	Not affected by a Preset. The default value of "5" can be restored by using the command: SYSTem:DEFault INPut
Min:	0
Max:	25
Initial S/W Revision:	Prior to A.02.00

### Outlier Threshold (Remote Command Only)

Defines the threshold for determining whether a packet is considered a statistical outlier. If a sync or delay request is held up in a switch for a significant amount of time, the quality of synchronization will be perturbed. The servo ignores anything outside the outlier threshold. This parameter is expressed as a number of standard deviations from the currently measured average packet latency. Note that the value can be set to fractional standard deviations.

<b>Remote Command:</b>	:LXI:CLOCK:SALGorithm[:SET]:OTHReshold <standardDeviations> :LXI:CLOCK:SALGorithm[:SET]:OTHReshold?
Example:	:LXI:CLOC:SALG:OTHR 1.0
Preset:	5.0
Preset:	Not affected by a Preset. The default value of "5.0" can be restored by using the command: SYSTem:DEFault INPut
Min:	0.25
Max:	6.0
Initial S/W Revision:	Prior to A.02.00

### Outlier Threshold Enable (Remote Command Only)

Enables the outlier threshold to determine whether or not outliers are discarded.

<b>Remote Command:</b>	:LXI:CLOCK:SALGorithm[:SET]:OTENable ON OFF 1 0 :LXI:CLOCK:SALGorithm[:SET]:OTENable?
Example:	:LXI:CLOC:SALG:OTEN OFF
Preset:	OFF
Preset:	Not affected by a Preset. The default value of "OFF" can be restored by using the command: SYSTem:DEFault INPut
Initial S/W Revision:	Prior to A.02.00

**Set/Steer Threshold (Remote Command Only)**

If the instrument's clock deviates from the master by an amount equal to or greater than this threshold, it is reset to match the master rather than being gradually steered toward it.

<b>Remote Command:</b>	:LXI:CLOCK:SALgorithm[:SET]:STHReshold <seconds> :LXI:CLOCK:SALgorithm[:SET]:STHReshold?
Example:	:LXI:CLOCK:SALG:STHR 15 ms
Preset:	0.1 s
Preset:	Not affected by a Preset. The default value of "0.1 s " can be restored by using the command: SYSTem:DEFault INPut
Min:	0.0001
Max:	10.0
Initial S/W Revision:	Prior to A.02.00

**Configure (Remote Command Only)**

Allows the configuration of some of the above parameters from a single SCPI command.

<b>Remote Command:</b>	:LXI:CLOCK:SALgorithm[:SET]:CONFigure <asymmetry>, <coarse fine threshold>, <cpc>, <cic>, <fpc>, <fic>, <maximum outlier discard>, <outlier threshold>, <set/steer threshold>
Example:	:LXI:CLOCK:SALG:CONF 0.0, 2.0E-13, 0.4, 0.2, 0.35, 0.05, 5, 2.0E-4, 0.1s
Initial S/W Revision:	Prior to A.02.00

**Synchronization (Remote Command Only)**

Synchronization parameters are used to control the behavior of the LAN communication used to achieve converging times across the system.

**Master (Remote Command Only)**

Reports whether or not the device has been selected as the PTP master clock.

<b>Remote Command:</b>	:LXI:CLOCK:SYNC:MASTer?
Example:	:LXI:CLOCK:SYNC:MAST?
Range:	ON OFF 0 1
Initial S/W Revision:	Prior to A.02.00

### Local Enabled (Remote Command Only)

Enable steering of the local clock with the PTP IEEE 1588 clock.

<b>Remote Command:</b>	:LXI:CLOCK:SYNC:LOCAL:ENABLED ON OFF 0 1 :LXI:CLOCK:SYNC:LOCAL:ENABLED?
Example:	:LXI:CLOC:SYNC:LOC:ENAB ON
Preset:	OFF
Preset:	Not affected by a Preset. The default value of "ON" can be restored by using the command: SYSTEM:DEFAULT INPUT
Range:	ON OFF 0 1
Initial S/W Revision:	Prior to A.02.00

### Local Interval (Remote Command Only)

The local clock is updated after the time set in the Local Interval elapses.

<b>Remote Command:</b>	:LXI:CLOCK:SYNC:LOCAL:INTERVAL :LXI:CLOCK:SYNC:LOCAL:INTERVAL?
Example:	:LXI:CLOC:SYNC:LOC:INT 60
Preset:	60
Preset:	Not affected by a Preset. The default value of "60 " can be restored by using the command: SYSTEM:DEFAULT INPUT
Min:	0
Max:	3600
Initial S/W Revision:	Prior to A.02.00

### Instrument Status Events

Instrument status events represent internal state changes that are important for synchronization. The recognized Status Events are:

WaitingForTrigger:	Transitions high when the measurement is awaiting a trigger event. Transitions low when the trigger event occurs or the measurement is aborted.
Sweeping:	Transitions high when the instrument begins sweeping. Transitions low when the sweep is completed.
Measuring:	Transitions high when measurement data is being recorded. Transitions low when measurement data is no longer being recorded.

OperationComplete:	Transitions low when a measurement operation is in progress. In some cases (for example, ListSweep), multiple sweeps are taken during a single measurement operation. Transitions high when the measurement operation is finished or aborted.
Recalling:	Transitions high while the instrument is recalling a previous state. Transitions low when a recall is not in progress.

### Enable (Remote Command Only)

Setting the enabled parameter to ON enables the selected instrument event to be used as a source for Output LAN Events. Enabling an Instrument Status Event also causes the event to appear in the Event Log.

<b>Remote Command:</b>	:LXI:EVENT:STATus[:ENABled] "STATUSEVENT",ON OFF 1 0
Example:	:LXI:EVEN:STAT "WaitingForTrigger",1
Preset:	ON
Preset:	Not affected by a Preset. The default value of "1" can be restored by using the command, :SYSTem:DEFault INPut.
State Saved:	Saved in instrument state.
Range:	1 0 ON OFF
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:LXI:EVENT:STATus[:ENABled]? "STATUSEVENT"
Example:	:LXI:EVEN:STAT? "WaitingForTrigger" Returns 1 if previously enabled. Otherwise, returns 0.
Preset:	ON
State Saved:	Saved in instrument state.
Range:	1 0 ON OFF
Initial S/W Revision:	Prior to A.02.00

### LXI State Recall

The LXI Event system can be used to recall states upon receipt of LXI Input LAN Events.

### Location (Remote Command Only)

This parameter is used to store the file paths of the state files to be recalled when each Input LAN Event is received. Since each LAN Event has its own Location entry, a given state is capable of branching to at least 8 different states. If custom Input events are added, an even greater branching factor is possible.

When setting up state transitions, it is important to set the location of the next state before saving. This

way, when the saved state is recalled, the next state locations are also automatically recalled.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:LOCation "LANEVENT", "path"
Example:	:LXI:EVEN:INP:LAN:LOC "LANEVENT";c:\states\state01.state"
Notes:	The maximum length of the string is 512 characters.
State Saved:	Saved in instrument state.
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:LOCation? "LANEVENT"
Example:	:LXI:EVEN:INP:LAN:LOC? "LANEVENT" Returns "c:\states\state01.state" if that value was previously entered
Notes:	The maximum length of the string is 512 characters.
State Saved:	Saved in instrument state.
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

### Disable All (Remote Command Only)

Causes all LXI Input LAN Events to go into the disabled state (Enabled = OFF).

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:DISable:ALL
Example:	:LXI:EVEN:INP:LAN:DIS:ALL
Initial S/W Revision:	Prior to A.02.00

### Add (Remote Command Only)

Adds the provided string to the list of possible LAN events to Input as a response to instrument events. As new LAN events are added, keys are generated in the LXI Input LAN Events menu. New key panels are generated as the number of possible LAN events increases past a multiple of six, and the "More" keys are updated to reflect the new number of key panels in the LXI Input LAN Events menu.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:ADD "LANEVENT"
Example:	:LXI:EVEN:INP:LAN:ADD "LANEVENT"
Notes:	The maximum length of the string is 16 characters. Longer strings are concatenated and added to the LXI Input LAN Event list. No event is added if the LAN Event already exists.
State Saved:	No
Range:	Uppercase, Lowercase, Numeric, Symbol except for comma or semicolon

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

### Remove (Remote Command Only)

Removes the provided string from the list of LXI Input LAN Events. As new LAN events are removed, keys are removed from the LXI Input LAN Events menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Input LAN Events menu. Events from the default list cannot be removed.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:REMove[:EVENT] "LANEVENT"
Example:	:LXI:EVEN:INP:LAN:REM "LANEVENT"
Notes:	The maximum length of the string is 16 characters. Longer strings are concatenated and the resulting LAN Event is removed from the LXI Input LAN Event list. Nothing happens if the LAN event was not introduced using the Add command.
State Saved:	No
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

### Remove All (Remote Command Only)

Clears the list of custom LAN events (those introduced using the Add command). As new LAN events are removed, keys are removed from the LXI Input LAN Events menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Input LAN Events menu.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:REMove:ALL
Example:	:LXI:EVEN:INP:LAN:REM:ALL
Notes:	Only LAN Events added with the Add command are removed. Default events cannot be removed.
Initial S/W Revision:	Prior to A.02.00

### Filter (Remote Command Only)

Only LXI Input LAN Events coming from hosts matching the filter string are processed. There is no Key Path to this command

The syntax for specifying a filter is as follows:

Filter == ( [host[:port]] | [ALL[:port]] ) [,Filter]

Specifying an empty string means that LXI trigger packets are accepted as an Input from any port on any host on the network via either TCP or UDP.

Specifying only the port means that any host communicating over that port can send events.

Specifying ALL indicates that UDP multicast packets are accepted if they are directed to the IANA assigned multicast address on the IANA assigned default port, or the designated port if specified.

Examples:

- “192.168.0.1:23”
- “agilent.com, soco.agilent.com”
- “agilent.com:80, 192.168.0.1”
- The LXI:EVENT:INPut:LAN:FILTer command applies only to state events and will have no effect on trigger events, even when both are tied to the same event name (like "LAN0"). Similarly, the TRIGger:LXI:LAN:FILTer command applies only to trigger events and will have no effect on state events.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:FILTer "LANEVENT", "filterString" :LXI:EVENT:INPut:LAN:FILTer?
Example:	:LXI:EVEN:INP:LAN:FILT "LAN0", "agilent.com" :LXI:EVEN:INP:LAN:FILT?
Notes:	The maximum length of the string is 45 characters. Nothing happens if the LAN event does not exist.
State Saved:	Saved in instrument state.
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

### Identifier (Remote Command Only)

Sets the string that is expected to arrive over the LAN for a given Input LAN Event to occur. The Identifier is variable to allow for easier system debugging.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:IDENtifier "LANEVENT", "identifier" :LXI:EVENT:INPut:LAN:IDENtifier? "LANEVENT"
Example:	:LXI:EVEN:INP:LAN:IDEN "LAN0", "debugstring"
Notes:	The maximum length of the string is 16 characters. Nothing happens if the LAN event does not exist. The default value is that the identifier is equivalent to the name of the LAN Event.
State Saved:	Saved in instrument state.
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

### Detection (Remote Command Only)

Selects the triggering option..

- Selecting “Rise” causes the instrument to trigger on the receipt of a signal low LAN Event followed by a signal high LAN Event.
- Selecting “Fall” causes the instrument to trigger on the receipt of a signal high LAN Event followed by a signal low LAN Event.
- Selecting “High” causes the instrument to trigger on every signal high LAN Event.
- Selecting “Low” causes the instrument to trigger on every signal low LAN Event.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN[:SET]:DETection "LANEVENT", HIGH LOW RISE FALL
Example:	:LXI:EVENT:INP:LAN:DET "LANEVENT",HIGH
Notes:	If a non existent LAN event is passed in the lanEvent argument, the command is ignored
Preset:	HIGH
Preset:	Not affected by a Preset. The default value of "HIGH" can be restored by using the remote command: :SYSTem:DEFault INPut
State Saved:	Saved in instrument state.
Range:	HIGH   LOW   RISE   FALL
Readback Text:	Currently selected detection type
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN[:SET]:DETection? "LANEVENT"
Example:	:LXI:EVENT:INP:LAN:DET? "LANEVENT"
Notes:	If a non existent LAN event is passed in the lanEvent argument, the command is ignored
Preset:	HIGH
State Saved:	Saved in instrument state.
Range:	HIGH   LOW   RISE   FALL
Readback Text:	Currently selected detection type
Initial S/W Revision:	Prior to A.02.00

### Enabled (Remote Command Only)

When the Enabled parameter is set to ON, receiving the given LAN Event causes the instrument to transition to the state held in the Next State Slot.



When the Enabled parameter is OFF, the Input LAN Event is ignored.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN[:SET]:ENABled "LANEVENT", ON OFF 1 0
Example:	:LXI:EVEN:INP:LAN:ENAB "LAN0",1
Preset:	OFF
Preset:	Not affected by a Preset. The default value of "OFF" can be restored by using the remote command: :SYSTem:DEFault INPut
State Saved:	Saved in instrument state.
Range:	1 0
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN[:SET]:ENABled? "LANEVENT"
Example:	:LXI:EVEN:INP:LAN:ENAB? "LAN0"
Preset:	OFF
State Saved:	Saved in instrument state.
Range:	1 0
Initial S/W Revision:	Prior to A.02.00

### Count (Remote Command Only)

Returns the number of items in the LXI Input LAN Event List.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:COUNT?
Example:	:LXI:EVEN:INP:LAN:COUN?
Initial S/W Revision:	Prior to A.02.00

### List (Remote Command Only)

Returns a list of all of the valid LXI Input LAN Event names.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN:LIST?
Example:	:LXI:EVEN:INP:LAN:LIST? Returns "LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7"
Preset:	"LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7"
State Saved:	Saved in instrument state.
Initial S/W Revision:	Prior to A.02.00

### Configure (Remote Command Only)

Allows the configuration of some of the above parameters from a single SCPI command.

<b>Remote Command:</b>	:LXI:EVENT:INPut:LAN[:SET]:CONFigure "lanEvent" , <enab>, <detection>, <filter>, <identifier>
Example:	:LXI:EVEN:INP:LAN:CONF "LAN0",1,FALL,"FILTER","DEBUG"
Initial S/W Revision:	Prior to A.02.00

### Restore Defaults


Provides incremental initialization of the system setting groups along with supporting a comprehensive reset of the entire instrument back to a factory default state. The menu selections are the groups of system settings and when one is selected, that particular group of system settings is reset back to their default values.

Key Path	<b>System</b>
Mode	All
<b>Remote Command</b>	:SYSTem:DEFault [ALL]   ALIGn   INPut   MISC   MODes   PON
Example	SYST:DEF
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Restore Input/Output Defaults

Causes the group of settings and data associated with Input/Output front-panel key to be a reset to their default values. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. .

Confirmation is required to restore the Input/Output setting. The confirmation dialog is:

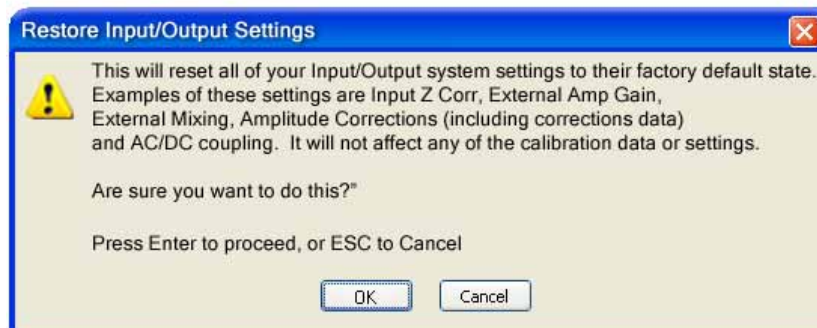


Key Path	<b>System, Restore System Defaults</b>
----------	--

Example	:SYST:DEF INP
Initial S/W Revision	Prior to A.02.00

### Restore Power On Defaults

This selection causes the Power On settings to be a reset to their default value. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. The Power On settings and their default values are Power On Type reset to Mode and Input/Output Defaults and Power On Application reset to whatever the factory set as its default value.

Confirmation is required to restore the factory default values. The confirmation dialog is:

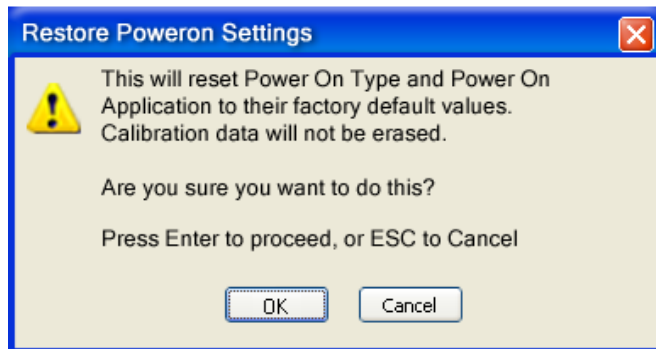


Key Path	<b>System, Restore System Defaults</b>
Example	:SYST:DEF PON
Initial S/W Revision	Prior to A.02.00

### Restore Align Defaults

This selection causes the Alignment system settings to be a reset to their default values. This does not affect any Alignment data stored in the system. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch.

After performing this function, it may impact the auto-alignment time of the instrument until a new alignment baseline has been established.

Confirmation is required to restore the factory default values. The confirmation dialog is:

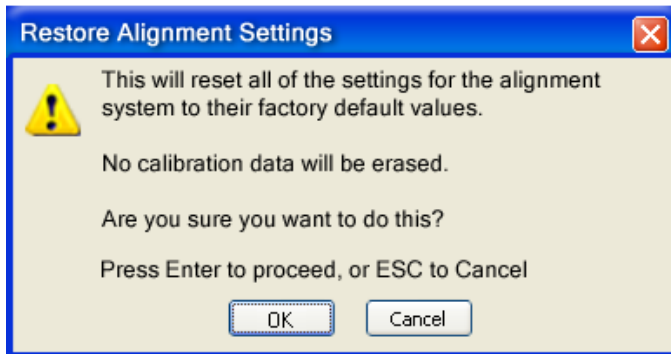

Key Path	<b>System, Restore System Defaults</b>
Example	:SYST:DEF ALIG
Initial S/W Revision	Prior to A.02.00


### Restore Misc Defaults

This selection causes miscellaneous system settings to be reset to their default values. With this reset, you lose the GPIB address and it is reset to 18, so this should be used with caution. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. This miscellaneous group contains the rest of the settings that have not been part of the other Restore System Defaults groups. The following table is a complete list of settings associated with this group:

Miscellaneous Setting	Default Value
Verbose SCPI	Off
GPIB Address	18
Auto File Name Number	000
Save Type	State
State Save To	Register 1
Screen Save To	SCREEN000.png
DISP:ENABle	ON
Full Screen	Off
SCPI Telnet	ON
SCPI Socket	ON
SICL Server	ON
Display Intensity	100
Display Backlight	ON
Display Theme	TDColor

System Annotation	ON
The SYST:PRES:TYPE	MODE

Confirmation is required to restore the factory default values. The confirmation dialog is:

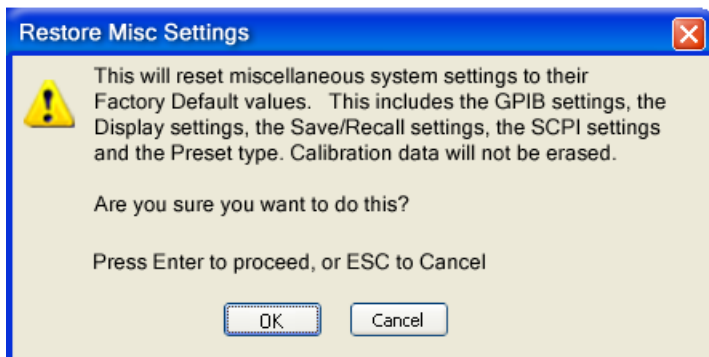


Key Path	<b>System, Restore System Defaults</b>
Example	:SYST:DEF MISC
Initial S/W Revision	Prior to A.02.00

### Restore Mode Defaults (All Modes)

This selection resets all of the modes in the instrument back to their default state just as a Restore Mode Defaults does and it switches the instrument to the power-on mode and causes the default measurement for the power-on mode to be active. This level of Restore System Defaults does not affect any system settings, but it does affect the state of all modes and does cause a mode switch unless the instrument was already in the power-on mode.

Confirmation is required to restore the factory default values. The confirmation dialog is:

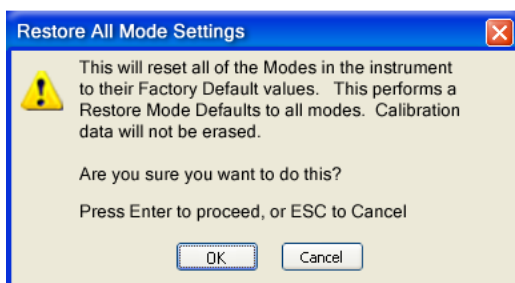

Key Path	<b>System, Restore System Defaults</b>
Example	:SYST:DEF MOD


System Functions  
System

Couplings	An All Mode will cause the currently running measurement to be aborted, mode switch to the power-on mode and activate the default measurement for the power-on mode.. It gets the mode to a consistent state with all of the default couplings set.
Initial S/W Revision	Prior to A.02.00

**All**

This is the catastrophic function that does a comprehensive reset of ALL analyzer settings to their factory default values. It resets all of the system setting groups, causes a Restore Mode Defaults for all modes in the instrument, and switches back to the power-on mode. It does not affect the User Preset file or any user saved files.

Confirmation is required to restore the factory default values. The confirmation dialog is:

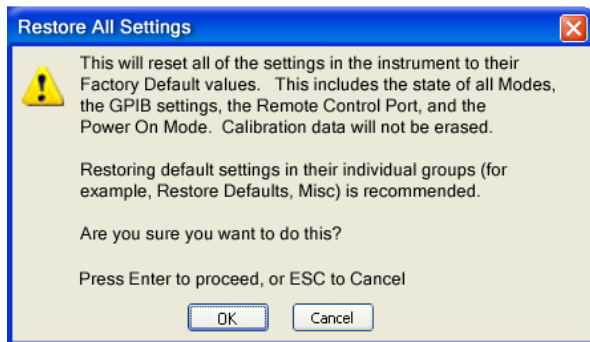


Key Path	<b>System, Restore System Defaults</b>
Example	:SYST:DEF ALL
Couplings	An All will cause the currently running measurement to be aborted and get all modes to a consistent state, so it is unnecessary to couple any settings.
Initial S/W Revision	Prior to A.02.00

**Control Panel...**

Opens the Windows Control Panel. The Control Panel is used to configure certain elements of Windows that are not configured through the hardkey/softkey System menus.

The Control Panel is a separate Windows application, so to return to the analyzer once you are in the Control Panel, you may either:

Exit the Control Panel by clicking on the red X in the upper right hand corner, with a mouse

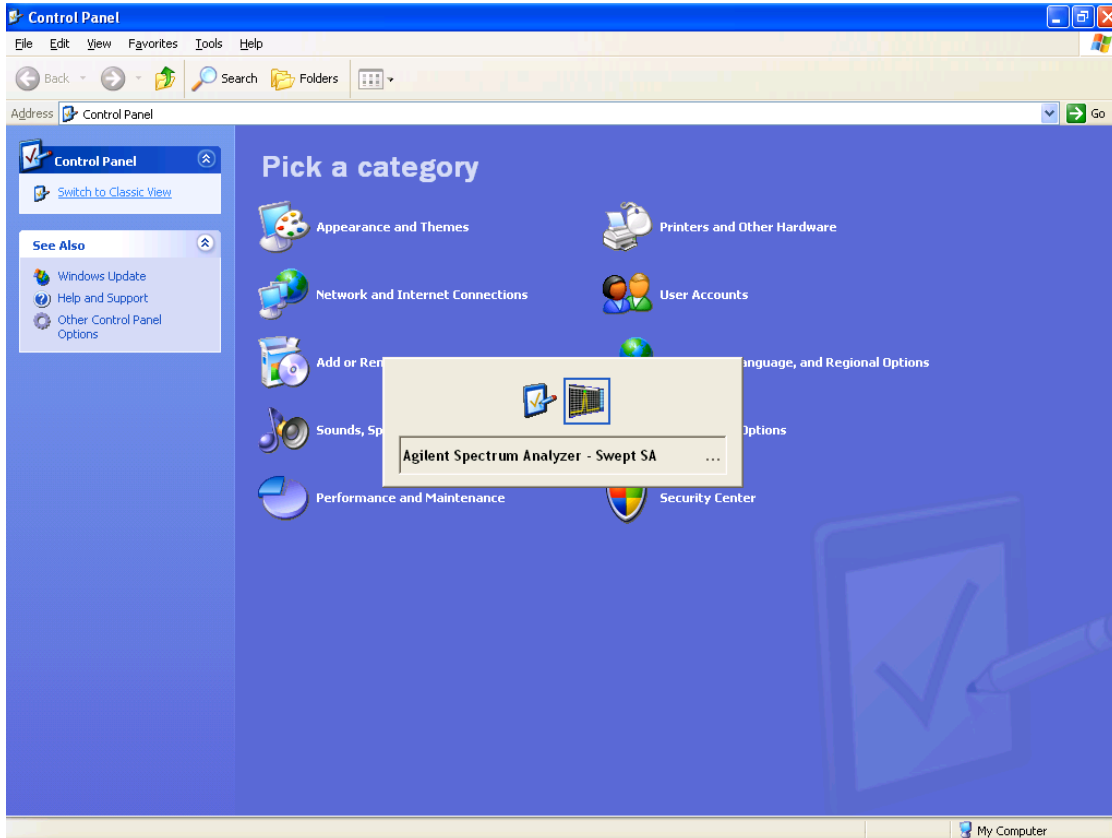

Or use Alt-Tab: press and hold the Alt key and press and release the Tab key until the Analyzer logo is showing in the window in the center of the screen, as above, then release the Alt key.

Key Path	<b>System</b>
Notes	No remote command for this key.
Initial S/W Revision	Prior to A.02.00

### Licensing...

Opens the license explorer.

For Help on this key, select Help in the menu bar at the top of the license explorer window.

Key Path	<b>System</b>
Notes	No equivalent remote command for this key.
Initial S/W Revision	Prior to A.02.00

<b>Remote Command:</b>	:SYSTem:LKEY <"OptionInfo">, <"LicenseInfo">
------------------------	--

System Functions  
System

Example:	SYST:LKEY "N9073A-1FP","027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1017638211AC9F60D9C639FE539735909C551DE0A91"
Notes:	The <"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, since the system knows which version is supported for each feature.  The <"LicenseInfo"> contains the signature, the expiration date, and serial number for transport if transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the serial number, the system regards it as non-transportable. As a result, this supports backward compatibility.
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:SYSTem:LKEY:DELeTe <"OptionInfo">,<"LicenseInfo">
Example:	SYST:LKEY:DEL "N9073A-1FP","027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1017638211AC9F60D9C639FE539735909C551DE0A91"
Notes:	The <"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, if more than one version is installed.  The <"LicenseInfo"> contains the signature, the expiration date, and whether or not be transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the transportability, the system regards it as non-transportable. As a result, this supports backward compatibility.
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:SYSTem:LKEY:LIST?
------------------------	--------------------



Notes:	<p><b>Return Value:</b></p> <p>An &lt;arbitrary block data&gt; of all the installed instrument licenses.</p> <p>The format of each license is as follows.</p> <p>&lt;Feature&gt;,&lt;Version&gt;,&lt;Signature&gt;,&lt;Expiration Date&gt;,&lt;Serial Number for Transport&gt;</p> <p><b>Return Value Example:</b></p> <p>#3136</p> <p>N9073A-1FP,1.000,B043920A51CA</p> <p>N9060A-2FP,1.000,4D1D1164BE64</p> <p>N9020A-508,1.000,389BC042F920</p> <p>N9073A-1F1,1.000,5D71E9BA814C,13-aug-2005</p> <p>&lt;arbitrary block data&gt; is:</p> <p>#NMMM&lt;data&gt;</p> <p><b>Where:</b></p> <p>N is the number of digits that describes the number of MMM characters. For example if the data was 55 bytes, N would be 2.</p> <p>MMM would be the ASCII representation of the number of bytes. In the previous example, N would be 55.</p> <p>&lt;data&gt; ASCII contents of the data</p>
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:SYSTem:LKEY? <"OptionInfo">
Example:	SYST:LKEY? "N9073A-1FP"
Notes:	<p>The &lt;"OptionInfo"&gt; contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one.</p> <p><b>Return Value:</b></p> <p>&lt;"LicenseInfo"&gt; if the license is valid, null otherwise.</p> <p>&lt;"LicenseInfo"&gt; contains the signature, the expiration date, and serial number if transportable.</p> <p><b>Return Value Example:</b></p> <p>"B043920A51CA"</p>
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:SYSTem:HID?
Notes:	Return value is the host ID as a string
Initial S/W Revision:	Prior to A.02.00

## Security

Accesses capabilities for operating the instrument in a security controlled environment.

Key Path	<b>System</b>
Initial S/W Revision	PXA.01.01

## USB

The Windows operating system can be configured to disable write access to the USB ports for users who are in a secure environment where transferring data from the instrument is prohibited. This user interface is a convenient way for the customer to disable write access to USB.

Key Path	<b>System, Security</b>
Mode	All
Scope	Mode Global
<b>Remote Command</b>	:SYSTem:SECurity:USB:WPRotect[:ENABLE] ON OFF 0 1 :SYSTem:SECurity:USB:WPRotect[:ENABLE]?
Example	:SYST:SEC:USB:WPR ON ! Will set USB ports to Read-only
Notes	When the USB ports are in Read-only mode then no data can be stored to USB, including the internal USB memory used for a back-up location for the calibration data.
Dependencies	This key is grayed-out unless the current user has administrator privileges.
Preset	This is unaffected by Preset or any Restore System Defaults. An Agilent Recovery will set the USB to write protect OFF
State Saved	No
Range	Read-Write Read only
Key Path	3664
Initial S/W Revision	PXA.01.01

## Read-Write

Selection for allowing full read-write access to the USB ports.

Key Path	<b>System, Security, USB</b>
Example	:SYST:SEC:USB:WPR OFF ! Will set USB ports to Read-Write
Initial S/W Revision	PXA.01.01

### Read only

Selection for disabling write access to the USB ports.

Key Path	<b>System, Security, USB</b>
Example	:SYST:SEC:USB:WPR ON ! Will set USB ports to Read only
Initial S/W Revision	PXA.01.01

### Diagnostics

The Diagnostics key in the System menu gives you access to basic diagnostic capabilities of the instrument.

Key Path	<b>System</b>
Initial S/W Revision	Prior to A.02.00

### Show Hardware Statistics


Provides a display of various hardware statistics. The statistics include the following:

Mechanical relay cycles

High and Low temperature extremes

Elapsed time that the instrument has been powered-on (odometer)

The display should appear listing the statistics, product number, serial number, and firmware revision.

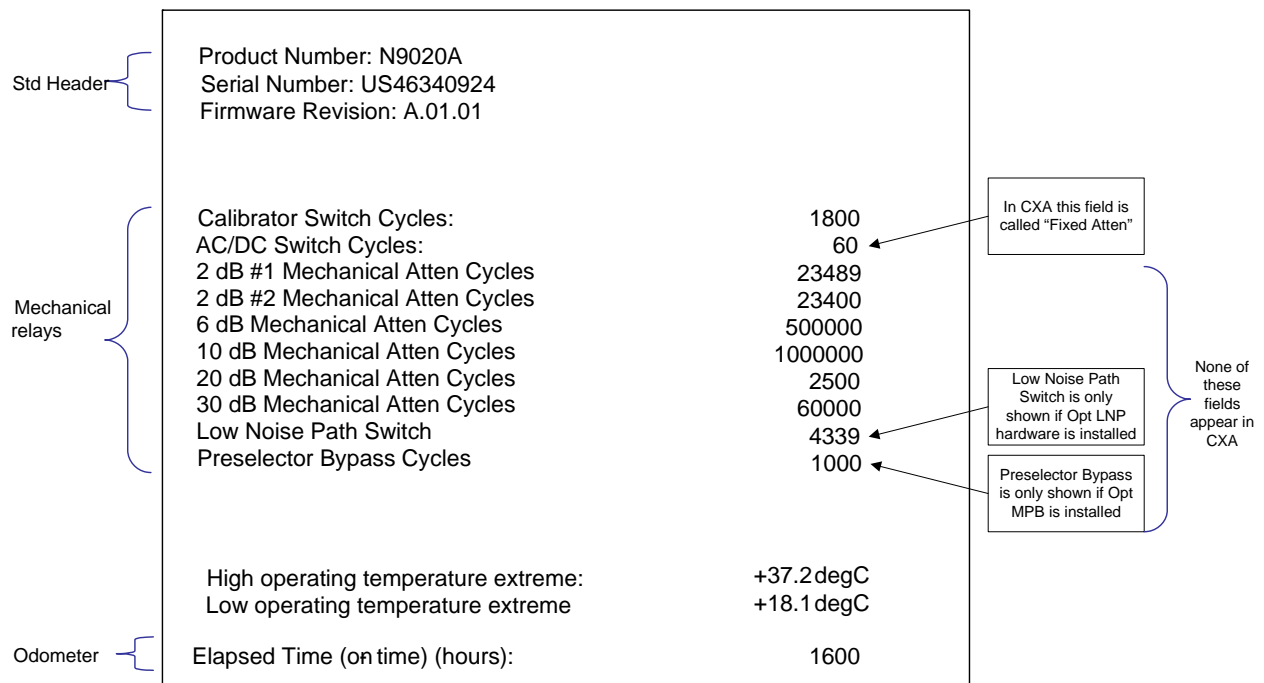

The data will be updated only when the Show Hardware Statistics menu key is pressed, it will not be

System Functions  
System

updated while the screen is displayed.

The tabular data should be directly printable.

Key Path	<b>System, Diagnostics</b>
Mode	All
Notes	The values displayed on the screen are only updated upon entry to the screen and not updated while the screen is being displayed.
Initial S/W Revision	Prior to A.02.00

**SCPI for Show Hardware Statistics ( Remote Commands Only)**

Each of the hardware statistic items can be queried via SCPI.

- “Query the Mechanical Relay Cycle Count” on page 320
- “Query the Operating Temperature Extremes” on page 320
- “Query the Elapsed Time since 1st power on” on page 321

**Query the Mechanical Relay Cycle Count**

Returns the count of mechanical relay cycles.

<b>Remote Command:</b>	:SYSTem:MRELAy:COUNT?
Example:	:SYST:MREL:COUN?
Notes:	<p>Query Only</p> <p>The return value is a comma separated list of the individual counts for each mechanical relay.</p> <p>The position of the relays in the list is:</p> <p>“&lt;Cal Signal&gt;,&lt;AC/DC&gt;,&lt;2dB #1 Atten&gt;,&lt;2dB #2 Atten&gt;,&lt;6dB Atten&gt;,&lt;10dB Atten&gt;,&lt;20dB Atten&gt;,&lt;30dB Atten&gt;,&lt;Fixed Atten&gt;,&lt;Low Noise Path Switch&gt;,&lt;Presel Bypass&gt;”</p> <p>Items in the list not pertaining to your particular hardware configuration will return as -999 for those items.</p>
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00, A.04.00

**Query the Operating Temperature Extremes**

Returns the low operating temperature extreme value. The value survives a power-cycle and is the temperature extreme encountered since the value was reset by the factory or service center.

Mode	All
<b>Remote Command</b>	:SYSTem:TEMPerature:LEXTreme?
Example	:SYST:TEMP:LEXT?

Notes	Value is in degrees Celsius at which the lowest operating temperature has been recorded since 1st power-up.
State Saved	No
Initial S/W Revision	Prior to A.02.00

Mode	All
<b>Remote Command</b>	:SYSTem:TEMPerature:HEXTreme?
Example	:SYST:TEMP:HEXT?
Notes	Value is in degrees Celsius at which the highest operating temperature has been recorded since 1st power-up.
State Saved	No
Initial S/W Revision	Prior to A.02.00


### Query the Elapsed Time since 1st power on

Returns the elapsed on-time in minutes since 1st power-on.

<b>Remote Command:</b>	:SYSTem: PON: ETIMe?
Example:	:SYST:PON:ETIM?
Notes:	Query Only
Initial S/W Revision:	Prior to A.02.00

### Advanced

Accesses advanced diagnostic capabilities performed in the factory or under instructions from repair procedures. This menu key is only visible when the logged-in user is “saservice”. The first access to the Advanced Diagnostic Menu after invoking the instrument application will require an authentication, which is to enter the Service Code. Subsequent accesses to the Advanced Diagnostic Menu are unimpeded. The Authentication dialog looks like:

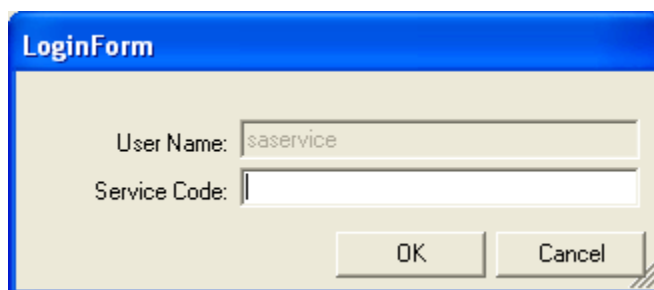

“OK” is the default key thus the Enter key is used to complete the entry. If invalid Service Code is entered authentication is not granted and you are provided the following dialog:

System Functions  
System



Key Path	<b>System, Diagnostics</b>
Notes	<b>Password is required to access this menu.</b>
Initial S/W Revision	<b>Prior to A.02.00</b>

### Service

Accesses capabilities performed in the factory or under instructions from repair procedures. This menu key is only visible when the logged-in user is “advanceduser” or “saservice”. The first access to the Service Menu after invoking the instrument application will require an authentication Service Code.

Key Path	<b>System</b>
Initial S/W Revision	Prior to A.02.00

### System Remote Commands (Remote Commands Only)

The commands in this section have no front panel key equivalent

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

### List installed Options (Remote Command Only)

Lists the installed options that pertain to the instrument (signal analyzer). .

Mode	All
<b>Remote Command</b>	:SYSTem:OPTions?
Example	:SYST:OPT?
Notes	The return string is a comma separated list of the installed options. For example: “503,P03,PFR” :SYSTem:OPTions? and *OPT? are the same.
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Lock the Front-panel keys (Remote Command Only)

Disables the instrument keyboard to prevent local input when the instrument is controlled remotely. Annunciation showing a “K” for ‘Klock’ (keyboard lock) alerts the local user that the keyboard is locked. Klock is similar to the GPIB Local Lockout function; namely that no front-panel keys are active with the exception of the Power Standby key. (The instrument is allowed to be turned-off if Klock is ON.) The Klock command is used in remote control situations where Local Lockout cannot be used.

Although primary intent of Klock is to lock-out the front panel, it will lock-out externally connected keyboards through USB. Klock has no effect on externally connected pointing devices (mice).

The front panel ‘Local’ key (Cancel/Esc) has no effect if Klock is ON.

Mode	All
<b>Remote Command</b>	:SYSTem:KLOCK OFF ON 0 1 :SYSTem:KLOCK?
Example	:SYST:KLOC ON
Notes	Keyboard lock remains in effect until turned-off or the instrument is power-cycled
Preset	Initialized to OFF at startup, unaffected by Preset
State Saved	No
Initial S/W Revision	Prior to A.02.00

### List SCPI Commands (Remote Command Only)

Outputs a list of the valid SCPI commands for the currently selected Mode.

<b>Remote Command:</b>	:SYSTem:HELP:HEADers?
Example:	:SYST:HELP:HEAD?
Notes:	The output is an IEEE Block format with each command separated with the New-Line character (hex 0x0A)
Initial S/W Revision:	Prior to A.02.00

### SCPI Version Query (Remote Command Only)

Returns the SCPI version number with which the instrument complies. The SCPI industry standard changes regularly. This command indicates the version used when the instrument SCPI commands were defined.

<b>Remote Command:</b>	:SYSTem:VERSion?
Example:	:SYST:VERS?
Initial S/W Revision:	Prior to A.02.00

### Date (Remote Command Only)

The recommended access to the Date, Time, and Time zone of the instrument is through the Windows native control (Control Panel or accessing the Task Bar). You may also access this information remotely, as shown in this command and Time (below).

Sets or queries the date in the instrument.

Mode	All
<b>Remote Command</b>	:SYSTem:DATE "<year>, <month>, <day>" :SYSTem:DATE?
Example	:SYST:DATE "2006,05,26"
Notes	<year> is the four digit representation of year. (for example, 2006) <month> is the two digit representation of year. (for example. 01 to 12) <day> is the two digit representation of day. (for example, 01 to 28, 29, 30, or 31) depending on the month and year
Initial S/W Revision	Prior to A.02.00

### Time (Remote Command Only)

Sets or queries the time in the instrument.

Mode	All
<b>Remote Command</b>	:SYSTem:TIME "<hour>, <minute>, <second>" :SYSTem:TIME?
Example	:SYST:TIME "13,05,26"
Notes	<hour> is the two digit representation of the hour in 24 hour format <minute> is the two digit representation of minute <second> is the two digit representation of second
Initial S/W Revision	Prior to A.02.00



## User Preset

Accesses a menu that gives you the following three choices:

**User Preset** – recalls a state previously saved using the **Save User Preset** function.

**User Preset All Modes** – presets all of the modes in the analyzer

**Save User Preset** – saves the current state for the current mode

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### User Preset

**User Preset** sets the state of the currently active mode back to the state that was previously saved for this mode using the **Save User Preset** menu key or the SCPI command, SYST:PRES:USER:SAV. It not only recalls the Mode Preset settings, but it also recalls all of the mode persistent settings, and the Input/Output system setting that existed at the time **Save User Preset** was executed.

If a **Save User Preset** has not been done at any time, **User Preset** recalls the default user preset file for the currently active mode. The default user preset files are created if, at power-on, a mode detects there is no user preset file. There will never be a scenario when there is no user preset file to restore. For each mode, the default user preset state is the same state that would be saved if a **Save User Preset** is performed in each mode right after doing a Restore Mode Default and after a Restore Input/Output Defaults.

The User Preset function does the following:

- Aborts the currently running measurement.
- Sets the mode State to the values defined by **Save User Preset**.
- Makes the saved measurement for the currently running mode the active measurement.
- Brings up the saved menu for the power-on mode.
- Clears the input and output buffers.
- Sets the Status Byte to 0.

Key Path	<b>User Preset</b>
<b>Remote Command</b>	:SYSTem:PRESet:USER
Example	:SYST:PRES:USER:SAVE :SYST:PRES:USER

Notes	<p>:SYST:PRES:USER:SAVE is used to save the current state as the user preset state.</p> <p>Clears all pending OPC bits. The Status Byte is set to 0.</p> <p>Pressing the User Preset front-panel key while already in the User Preset menu will cause the User Preset to get executed</p>
Couplings	<p>A user preset will cause the currently running measurement to be aborted and cause the saved measurement to be active. Recalling a User Preset file has the same issues that recalling a Save State file has. Some settings may need to be limited and therefore re-coupled, since the capabilities of the mode may have changes when the User Preset file was last saved.</p>
Initial S/W Revision	Prior to A.02.00

### User Preset All Modes

Recalls all of the User Preset files for each mode, switches to the power-on mode, and activates the saved measurement from the power-on mode User Preset file.

---

**NOTE** When the instrument is secured, all of the user preset files are converted back to their default user preset files.

---

The User Preset function does the following:

- Aborts the currently running measurement.
- Switches the Mode to the power-on mode.
- Restores the User Preset files for each mode.
- Makes the saved measurement for the power-on mode the active measurement.
- Brings up the saved menu for the power-on mode.
- Clears the input and output buffers.
- Sets the Status Byte to 0.

Key Path	<b>User Preset</b>
<b>Remote Command</b>	:SYSTem:PRESet:USER:ALL
Example	:SYST:PRES:USER:SAVE :SYST:PRES:USER:ALL
Notes	<p>Clears all pending OPC bits. The Status Byte is set to 0.</p> <p>:SYST:PRES:USER:SAVE is used to save the current state as the user preset state.</p>

Couplings	A user preset will cause the currently running measurement to be aborted, cause a mode switch to the power-on mode, and cause the saved measurement to be active in the power-on mode. Recalling a User Preset file has the same issues that recalling a Save State file has. Some settings may need to be limited and therefore re-coupled, since the capabilities of the mode may have changes when the User Preset file was last saved.
Initial S/W Revision	Prior to A.02.00

### Save User Preset

Saves the currently active mode and its State. You can recall this User Preset file by pressing the User Preset menu key or sending the SYST:PRES:USER remote command. This same state is also saved by the Save State function.

Key Path	<b>User Preset</b>
<b>Remote Command</b>	:SYSTem:PRESet:USER:SAVE
Example	:SYST:PRES:USER:SAVE
Notes	:SYST:PRES:SAVE creates the same file as if the user requested a *SAV or a MMEM:STOR:STAT, except User Preset Save does not allow the user to specify the filename or the location of the file.
Initial S/W Revision	Prior to A.02.00



The Channel Power measurement is used to find the total power present in a specified bandwidth. The power spectral density (the power in the signal normalized to 1 Hz) is also reported. For measurement results and views, see [“View/Display” on page 390](#).

This topic contains the following sections:

[“Measurement Commands for Channel Power” on page 329](#)

[“Remote CommandResults for Channel Power Measurement” on page 329](#)

## Measurement Commands for Channel Power

These commands are used to measure the total rms power in a specified integration bandwidth.

Use :INSTrument:SElect to set the mode.

```
:CONFigure:CHPower
:CONFigure:CHPower:NDEFault
:INITiate:CHPower
:FETCh:CHPower [n] ?
:MEASure:CHPower [n] ?
:READ:CHPower [n] ?
:FETCh:CHPower:CHPower?
:MEASure:CHPower:CHPower?
:READ:CHPower:CHPower?
:FETCh:CHPower:DENSity?
:MEASure:CHPower:DENSity?
:READ:CHPower:DENSity
```

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1575](#).

## Remote CommandResults for Channel Power Measurement

For DVB-T/H and DTMB mode, see [“DVB-T/H and DTMB Mode Remote Command Results” on page 330](#) Mode Remote Command Results.

For ISDB-T and CMMB mode, see [“ISDB-T and CMMB mode Remote Command Results” on page 332](#).

Command	Return Value
FETCh:CHPower[n]? MEASure:CHPower[n]? READ:CHPower[n]?	Refer to the table below.
FETCh:CHPower:CHPower? MEASure:CHPower:CHPower? READ:CHPower:CHPower?	Returns the Channel Power (dBm) (BW compatibility functionality)
FETCh:CHPower:DENSity? MEASure:CHPower:DENSity? READ:CHPower:DENSity?	Returns the Power Spectral Density (dBm/Hz) (BW compatibility functionality)

n	Results Returned
n=1 (or not specified)	Returns scalar results: 1. Channel Power is a floating point number representing the total channel power in the specified integration bandwidth. 2. PSD (Power Spectral Density) is the power in the specified unit bandwidth. The unit bandwidth is selected by the PSD Unit parameter in either dBm/Hz or dBm/MHz.
2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal. The frequency span of the captured trace data is specified by the Span key.

### DVB-T/H and DTMB Mode Remote Command Results

The following commands are available only for DVB-T/H and DTMB mode.

Condition	n	Results Returned
	n=1 (or not specified)	Returns scalar results: 1. Channel Power is a floating point number representing the total channel power in the specified integration bandwidth. 2. PSD (Power Spectral Density) is the power in the specified unit bandwidth. The unit bandwidth is selected by the PSD Unit parameter in either dBm/Hz or dBm/MHz.
	2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal. The frequency span of the captured trace data is specified by the Span key.

Condition	n	Results Returned
Mode = DVB-T/H or Mode = DTMB	3	Returns 7 comma-separated scalar results, in the following order. <ol style="list-style-type: none"> <li>1. The shoulder attenuation result (dB)</li> <li>2. Lower shoulder attenuation result (dB)</li> <li>3. Upper shoulder attenuation result (dB)</li> <li>4. Lower Offset - MAX shoulder point power (dBm)</li> <li>5. Lower Offset - MAX shoulder point frequency (MHz)</li> <li>6. Upper Offset - MAX shoulder point power (dBm)</li> <li>7. Upper Offset - MAX shoulder point frequency (MHz)</li> </ol> If the results are not available, -999.0 is returned. For example, if current view is RF spectrum or spectrum mask, -999.0 is returned.
Mode = DVB-T/H or Mode = DTMB	4	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal in the left graph of the shoulder attenuation view. If the results are not available, -999.0 is returned. For example, if current view is RF spectrum or spectrum mask, -999.0 is returned.
Mode = DVB-T/H or Mode = DTMB	5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal in the right graph of the shoulder attenuation view. If the results are not available, -999.0 is returned. For example, if current view is RF spectrum or spectrum mask, -999.0 is returned.
Mode = DVB-T/H or Mode = DTMB	6	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the mask in the spectrum mask view. If the results are not available, -999.0 is returned. For example, if current view is RF spectrum or shoulder attenuation, -999.0 is returned.

Condition	n	Results Returned
Mode = DVB-T/H  or Mode = DTMB	7	<p>Returns the failed point information in the following order:</p> <ol style="list-style-type: none"> <li>1. the 1st failed point frequency (MHz)</li> <li>2. the 1st failed point absolute power (dBm)</li> <li>3. the 1st failed point relative power (dB)</li> <li>4. the 2nd failed point frequency (MHz)</li> <li>5. the 2nd failed point absolute power (dBm)</li> <li>6. the 2nd failed point relative power (dB)</li> <li>...</li> <li>3*N-2. the (3*N-2)th failed point frequency (MHz)</li> <li>3*N-1. the (3*N-1)th failed point absolute power (dBm)</li> <li>3*N. the (3*N)th failed point relative power (dB)</li> </ol> <p>If the number of failed points is less than 20, it will show all of them (frequency, power and relative power), N&lt;20;</p> <p>If the number of failed points is great than 20, the first ten failed points and the last ten failed points will be show, N=20.</p> <p>If the results are not available, -999.0 is returned.</p> <p>For example, if current view is RF spectrum or shoulder attenuation, -999.0 is returned.</p>

### ISDB-T and CMMB mode Remote Command Results

The following commands are available only for ISDB-T and CMMB mode.

Condition	n	Results Returned
	n=1 (or not specified)	<p>Returns scalar results:</p> <ol style="list-style-type: none"> <li>1. Channel Power is a floating point number representing the total channel power in the specified integration bandwidth.</li> <li>2. PSD (Power Spectral Density) is the power in the specified unit bandwidth. The unit bandwidth is selected by the PSD Unit parameter in either dBm/Hz or dBm/MHz.</li> </ol>
	2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal. The frequency span of the captured trace data is specified by the Span key.



Condition	n	Results Returned
Mode = ISDB-T or Mode = CMMB	3	Returns 7 comma-separated scalar results, in the following order. 1. The shoulder attenuation result (dB) 2. Lower shoulder attenuation result (dB) 3. Upper shoulder attenuation result (dB) 4. Lower Offset - MAX shoulder point power (dBm) 5. Lower Offset - MAX shoulder point frequency (MHz) 6. Upper Offset - MAX shoulder point power (dBm) 7. Upper Offset - MAX shoulder point frequency (MHz) If the results are not available, -999.0 is returned. For example, if current view is RF spectrum or spectrum mask, -999.0 is returned.
Mode = ISDB-T or Mode = CMMB	4	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal in the left window of the shoulder attenuation view. If the results are not available, -999.0 is returned. For example, if current view is RF spectrum or spectrum mask, -999.0 is returned.
Mode = ISDB-T or Mode = CMMB	5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal in the right window of the shoulder attenuation view. If the results are not available, -999.0 is returned. For example, if current view is RF spectrum or spectrum mask, -999.0 is returned.

Key Path	Meas
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. The parameter values are measurement independent, except all Attenuation values and the Internal Preamp selection, which are the same across all measurements.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value

Sets the value for the absolute power reference. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el <real>  :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el?
Example	DISP:CHP:VIEW:WIND:TRAC:Y:RLEV 10 dBm DISP:CHP:VIEW:WIND:TRAC:Y:RLEV?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTD mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	All except CDMA1xEVDO:10.00 dBm CDMA1xEVDO: -10.00dBm
State Saved	Saved in instrument state.
Min	-250.00 dBm
Max	250.00 dBm
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back text that describes the total attenuator value.

See AMPTD Y Scale, “Attenuation” on page 1406 in the “Common Measurement Functions” section for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Scale/Div

Sets the units per division of the vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl>  :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?
Example	DISP:CHP:VIEW:WIND:TRAC:Y:PDIV 2 DISP:CHP:VIEW:WIND:TRAC:Y:PDIV?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dB
State Saved	Saved in instrument state.
Min	0.10 dB
Max	20.00 dB
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See [“Presel Center” on page 1421](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See [“Preselector Adjust” on page 1422](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Y Axis Unit

Allows you to change the vertical (Y) axis amplitude unit.

See [“Y Axis Unit” on page 1424](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00

## Reference Level Offset

Adds an offset value to the displayed reference level. The reference level is the absolute amplitude represented by the top graticule line on the display.

See [“Reference Level Offset” on page 1429](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD/Y Scale</b>
----------	----------------------

Initial S/W Revision	A.04.00
----------------------	---------

## μW Path Control

The **μW Path Control** functions include the **μW Preselector Bypass** (Option MPB) and **Low Noise Path** (Option LNP) controls in the High Band path circuits.

See [“μW Path Control” on page 1430](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00

## Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, [“Internal Preamp” on page 1435](#) in the “Common Measurement Functions” section for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSITION TOP CENTer BOTTom  :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSITION?
Example	DISP:CHP:VIEW:WIND:TRAC:Y:RPOS CENT DISP:CHP:VIEW:WIND:TRAC:Y:RPOS?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Preset	TOP
State Saved	Saved in instrument state.

Channel Power Measurement  
**AMPTD Y Scale**

Range	Top Ctr Bot
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Auto Scaling

Toggles the Auto Scaling function between On and Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUPl e 0 1 OFF ON :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUPl e?
Example	DISP:CHP:VIEW:WIND:TRAC:Y:COUP OFF DISP:CHP:VIEW:WIND:TRAC:Y:COUP?
Couplings	When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	1
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Auto Couple**

See “[Auto Couple](#)” on page 1437 in the section "Common Measurement Functions" for more information.

## BW

Accesses a menu of functions that enable you to specify and control the video and resolution bandwidths. You can also select the type of filter for the measurement and set the filter bandwidth.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Res BW

Sets the value of the resolution bandwidth (RBW). If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[:SENSe]:CHPower:BANDwidth[:RESolution] <bandwidth> [:SENSe]:CHPower:BANDwidth[:RESolution]? [:SENSe]:CHPower:BANDwidth[:RESolution]:AUTO ON OFF 1 0 [:SENSe]:CHPower:BANDwidth[:RESolution]:AUTO?
Example	CHP:BAND 5 MHz CHP:BAND? CHP:BAND:AUTO ON CHP:BAND:AUTO?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	Sweep time is coupled to the RBW. As the RBW changes, the sweep time (if set to Auto) is changed to maintain amplitude calibration. Video bandwidth (VBW) is coupled to the RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1). When the Res BW is set to Auto, the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man, and the bandwidths are entered manually, these bandwidths are used regardless of other analyzer settings.



Preset	SA: Auto WCDMA: 240 kHz C2K: 24 kHz WIMAX OFDMA: 100kHz 1xEVDO: 30kHz DVB-T/H: 3.9kHz DTMB: 3.9kHz ISDB-T: 30kHz CMMB: 3.9kHz LTE: Auto LTETDD: Auto WCDMA, C2K, 1xEVDO , WIMAX OFDMA, DVB-T/H, DTMB, ISDB-T, CMMB:: OFF SA, LTE, LTETDD: ON
State Saved	Saved in instrument state.
Min	1 Hz
Max	8 MHz
Backwards Compatibility SCPI	[ :SENSe ] :CHPower :BWIDth [ :RESolution ]
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Video BW

Changes the analyzer post-detection filter (VBW).

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :CHPower :BANDwidth :VIDeo <bandwidth> [ :SENSe ] :CHPower :BANDwidth :VIDeo? [ :SENSe ] :CHPower :BANDwidth :VIDeo :AUTO ON OFF 1 0 [ :SENSe ] :CHPower :BANDwidth :VIDeo :AUTO?

Channel Power Measurement  
**BW**

Example	CHP:BAND:VID 2.4 MHz CHP:BAND:VID? CHP:BAND:VID:AUTO OFF CHP:BAND:VID:AUTO?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode.
Dependencies	See Couplings
Couplings	<p>Video bandwidth (VBW) is coupled to the RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio set by VBW/RBW.</p> <p>Sweep Time is coupled to the Video Bandwidth (VBW). As the VBW is changed, the sweep time (when set to Auto) is changed to maintain amplitude calibration. This occurs because of common hardware between the two circuits, even though the Video BW filter is not actually “in-circuit” when the detector is set to Average. Because the purpose of the average detector and the VBW filter are the same, either can be used to reduce the variance of the result.</p> <p>Although the VBW filter is not “in-circuit” when using the average detector, the Video BW key can have an effect on (Auto) sweep time, and is not disabled. In this case, reducing the VBW setting increases the sweep time, which increases the averaging time, producing a lower-variance trace.</p> <p>When using the average detector with either Sweep Time set to Man, or in zero span, the VBW setting has no effect and is disabled (grayed out).</p> <p>When the video bandwidth is AUTO coupled, the video bandwidth value is set to:</p> <p>Resolution Bandwidth * Video Bandwidth to Resolution Bandwidth Ratio</p>
Preset	SA: Auto WCDMA: 2.4MHz C2K: 240 kHz WIMAX OFDMA: Auto 1xEVDO: 300 kHz DVB-T/H: 39kHz DTMB: 39kHz ISDB-T: 300kHz CMMB: 39kHz LTE: Auto LTETDD: Auto ON

State Saved	Saved in instrument state.
Min	1 Hz
Max	50 MHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Filter Type

Selects the type of bandwidth filter that is used. The choices are Gaussian or Flat top.

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE ] :CHPower :BANDwidth :SHAPE GAUSSian   FLATtop [ :SENSE ] :CHPower :BANDwidth :SHAPE?
Example	CHP:BAND:SHAP GAUS CHP:BAND:SHAP?
Preset	GAUSSian
State Saved	Saved in instrument state.
Range	Gaussian Flattop
Backwards Compatibility SCPI	[ :SENSe ] :CHPower :BWIDth :SHAPE
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Cont**

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451 in the section "Common Measurement Functions" for more information.

## **FREQ Channel**

See [“FREQ/Channel” on page 1453](#) in the section "Common Measurement Functions" for more information.

## **Input/Output**

See “[Input/Output](#)” on page 1459 in the section "Common Measurement Functions" for more information.

## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Type

Sets the marker control mode to **Normal**, **Delta**, **Fixed** or **Off**. All interactions and dependencies detailed under the key description are enforced when the remote command is sent. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is Off, there is no active function and the active function is turned off.

Key Path	<b>Marker</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSITION DELTA OFF :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?
Example	CALC:CHP:MARK3:MODE POS CALC:CHP:MARK3:MODE?
Notes	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.  Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.  Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision.
Preset	OFF

Channel Power Measurement  
Marker

State Saved	Saved in instrument state.
Range	Normal Delta Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal**, **Delta**, or **Fixed**.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real> :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X ?
Example	CALC:CHP:MARK3:X 0 CALC:CHP:MARK3:X?
Notes	The query returns the marker's absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker's reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> .
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Position (Remote Command only)

Sets the marker X Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta**. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
------	---



<b>Remote Command</b>	:CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition <real>  :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition?
Example	CALC:CHP:MARK10:X:POS 0  CALC:CHP:MARK10:X:POS?
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> .
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NaN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y ?
Example	CALC:CHP:MARK11:Y?
Preset	Result dependent on Markers setup and signal source.
State Saved	No
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Properties

Accesses the marker properties menu.

Key Path	<b>Marker</b>
----------	---------------

Channel Power Measurement  
**Marker**

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**Select Marker**

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

**Relative To**

Selects the desired marker. The selected marker is relative to its reference marker.

Key Path	<b>Marker, Properties</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:CHPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :R Eference <integer>  :CALCulate:CHPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :R Eference?
Example	CALC:CHP:MARK:REF 5 CALC:CHP:MARK:REF?
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."  When queried, a single value is returned (the specified marker numbers relative marker).  You must be in the Spectrum Analysis or WCDMA mode to use this command. Use :INSTrument:SELEct to set the mode.
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Marker Trace (DVB-T/H and DTMB only)**

Accesses a menu that allows you to assign a specified marker to the designated trace. This function is

only valid for DVB-T/H and DTMB mode.

Key Path	Marker, Properties
Mode	DVB-T/H, DTMB
<b>Remote Command</b>	:CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe RFSPectrum LShouLder RShouLder MASK :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?
Example	CALC:CHP:MARK:TRAC RFSP CALC:CHP:MARK:TRAC?
Preset	RFSPectrum
State Saved	Saved in instrument state.
Range	RF Spectrum   Left Shoulder   Right Shoulder   Spectrum Mask
Initial S/W Revision	A.02.00

### Marker Trace(ISDB-T and CMMB only)

Accesses a menu that allows you to assign a specified marker to the designated trace. This function is only valid for ISDB-T and CMMB mode.

Key Path	Marker, Properties
Mode	ISDB-T, CMMB
<b>Remote Command</b>	:CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe RFSPectrum LShouLder RShouLder :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?
Example	CALC:CHP:MARK:TRAC RFSP CALC:CHP:MARK:TRAC?
Preset	RFSPectrum
State Saved	Saved in instrument state.
Range	RF Spectrum   Left Shoulder   Right Shoulder
Modified at S/W Revision	A.03.00
Initial S/W Revision	A.02.00

### Couple Markers

When this function is active, moving any marker causes an “equal X Axis movement” of every other marker that is not set to **Off**. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and

Channel Power Measurement  
**Marker**

the X Axis value of the marker being moved (in the same fundamental x-axis units).  
 This may result in markers going off screen.

Key Path	Marker
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:CHPower:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:CHPower:MARKer:COUPle[:STATe]?
Example	CALC:CHPower:MARK:COUP ON
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	A.02.00

**All Markers Off**

Turns off all markers.

Key Path	Marker
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB,ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:CHPower:MARKer:AOff
Example	CALC:CHP:MARK:AOff
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Backward Compatibility SCPI Commands**

Sets or queries the state of a marker. Setting a marker which is OFF to state ON or 1 puts it in Normal mode and places it at the center of the screen.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB,ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe OFF ON 0 1 :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe?

Example	CALC:CHP:MARK3:STAT ON CALC:CHP:MARK3:STAT?
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Marker Function

There are no 'Marker Functions' supported in Channel Power, so this front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

---

## Marker To

There is no 'Marker To' functionality supported in Channel Power, so this front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## **Meas**

See “[Meas](#)” on page 1575 in the section "Common Measurement Functions" for more information.



## Meas Setup

Displays the setup menu for the currently selected measurement. The parameters included in the measurement setup include the following:

Averaging

IF Gain

Channel Power Span

Integrated Bandwidth

Filter Bandwidth

Root Raised Cosine (RRC) Filter

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### Avg/Hold Num

Specifies the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep. After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :CHPower :AVERage :COUNT <integer> [ :SENSe ] :CHPower :AVERage :COUNT? [ :SENSe ] :CHPower :AVERage [ :STATe ] ON   OFF   1   0 [ :SENSe ] :CHPower :AVERage [ :STATe ] ?
Example	CHP:AVER:COUN 15 CHP:AVER:COUN? CHP:AVER ON CHP:AVER?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.

Channel Power Measurement  
**Meas Setup**

Preset	SA: 10 WCDMA: 200 WIMAX OFDMA, LTE, LTETDD: 200 CDMA2K: 20 1xEVDO: 20 DVB-T/H: 20 DTMB: 20 ISDB-T: 10 CMMB: 10 ON
State Saved	Saved in instrument state.
Min	1
Max	10000
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Avg Mode

Allows you to select the type of termination control used for the averaging function. This determines the averaging action after the specified number of data acquisitions (average count) is reached.

When set to Exponential (Exp) the measurement averaging continues using the specified number of averages to compute each exponentially-weighted averaged value. The average is displayed at the end of each sweep.

When set to Repeat, the measurement resets the average counter each time the specified number of averages is reached.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE ] :CHPower:AVERage:TCONtrol EXPonential REPeat [ :SENSE ] :CHPower:AVERage:TCONtrol?
Example	CHP:AVER:TCON EXP CHP:AVER:TCON?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.

Preset	EXP
State Saved	Saved in instrument state.
Range	Exp Repeat
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Integ BW

Specifies the range of integration used in calculating the power in the channel. The integration bandwidth (IBW) is displayed on the trace as two markers connected by an arrow.

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:CHPower:BANDwidth:INTEgration <bandwidth> [ :SENSE]:CHPower:BANDwidth:INTEgration?
Example	CHP:BAND:INT 10MHz CHP:BAND:INT?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode.
Couplings	The minimum value of the span is coupled with the integration bandwidth.
Preset	SA: 2 MHz WCDMA: 5 MHz C2K: 1.23 MHz WIMAX OFDMA: 10 MHz 1xEVDO: 1.23 MHz DVB-T/H: 7.61MHz DTMB: 8MHz ISDB-T: 5.6MHz CMMB: 8MHz LTE: 5 MHz LTETDD: 5 MHz
State Saved	Saved in instrument state.
Min	100 Hz

Channel Power Measurement  
**Meas Setup**

Max	1 GHz
Max	RF Input: 1 GHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**PhNoise Opt**

Selects the LO (local oscillator) phase noise behaviour for various operating conditions.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	A.04.20

**PhNoise Opt Auto**

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions.

The X-Series has two grades of LO; a high performance LO that gives the best phase noise performance; and a medium-performance LO that gives excellent performance.

In models with the high performance LO, Auto will choose:

Fast Tuning whenever Span > 44.44 MHz or RBW > 1.9 MHz

otherwise, if center frequency is < 195 kHz OR ALL of the following are true:

CF 1 MHz AND Span 1.3 MHz AND RBW 75 kHz

then Best Close in Phase Noise;

otherwise, Best Wide-offset Phase Noise

In models with the medium-performance LO, Auto will choose:

**Fast Tuning** whenever Span > 12.34 MHz or RBW > 250 kHz

otherwise, if center frequency is < 25 kHz OR ALL of the following are true:

CF >= 1 MHz AND Span <= 141.4 kHz AND RBW <= 5 kHz

then **Best Close in Phase Noise**;

otherwise, **Best Wide-offset Phase Noise**

In units whose hardware does not provide for an extra-fast tuning option, the settings for Fast Tuning are the same as Best Close-in, so in those models you will see no difference between these settings.

These rules apply whether in swept spans, zero span, or FFT spans.

Key Path	<b>Meas Setup</b>
----------	-------------------

<b>Remote Command</b>	[ :SENSe] :CHPower:FREQuency:SYNThesis:AUTO[:STATe] OFF ON 0 1  [:SENSe] :CHPower:FREQuency:SYNThesis:AUTO[:STATe] ?
Example	CHP:FREQ:SYNT:AUTO 1 CHP:FREQ:SYNT:AUTO?
Preset	OFF
State Saved	Saved in instrument state.
Range	Auto Man
Readback Text	“Auto” is underlined when Auto is selected, otherwise Man is underlined.
Initial S/W Revision	A.04.20

### PhNoise Opt State

Selects the LO (local oscillator) phase noise behavior for various operating conditions.

Key Path	<b>Meas Setup</b>
<b>Remote Command</b>	[ :SENSe] :CHPower:FREQuency:SYNThesis[:STATe] 1 2 3 [:SENSe] :CHPower:FREQuency:SYNThesis[:STATe] ?
Example	CHP:FREQ:SYNT 1 CHP:FREQ:SYNT?
Notes	Parameter key: 1 - optimizes phase noise for close-in from the carrier. 2 - optimizes phase noise for wide-offset from the carrier. 3 - optimizes LO for tuning speed.
Preset	3
State Saved	Saved in instrument state.
Range	Hardware Dependent: PXA: Best Close-in Noise [offset < 140 kHz]   Best Wide-offset Noise [offset > 160 kHz]   Fast Tuning MXA: Best Close-in Noise [offset < 20 kHz]   Best Wide-offset Noise [offset > 30 kHz]   Fast Tuning
Readback Text	Close-in Wide-offset Fast Tuning, also the Man must be underlined.
Initial S/W Revision	A.04.20

### IF Gain

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF

## Channel Power Measurement

### Meas Setup

overloads.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

#### IF Gain Auto

Activates the auto rules for IF Gain. When Auto is active, the IF Gain is set to High Gain under any of the following conditions:

- The input attenuator is set to 0 dB
- The preamp is turned On and the frequency range is under 3.6 GHz

For other settings, Auto sets the IF Gain to Low Gain.

Key Path	<b>Meas Setup, IF Gain</b>
<b>Remote Command</b>	[ :SENSe] :CHPower : IF : GAIN : AUTO [ : STATE] ON   OFF   1   0 [ :SENSe] :CHPower : IF : GAIN : AUTO [ : STATE] ?
Example	CHP:IF:GAIN:AUTO ON CHP:IF:GAIN:AUTO?
Couplings	When the auto attenuation exists (for example, with an electrical attenuator), the IF Gain setting is changed using the following rule. Auto sets IF Gain to High Gain under any of the following conditions: the input attenuator is set to 0 dB, or the preamp is turned on and the frequency range is under 3.6 GHz. For other settings, Auto sets IF Gain to Low Gain.
Preset	OFF
State Saved	Saved in instrument state.
Range	Off   On
Initial S/W Revision	Prior to A.02.00

#### IF Gain State

Selects the range of the IF Gain.

Key Path	<b>Meas Setup, IF Gain</b>
<b>Remote Command</b>	[ :SENSe] :CHPower : IF : GAIN [ : STATE] ON   OFF   1   0 [ :SENSe] :CHPower : IF : GAIN [ : STATE] ?
Example	CHP: IF : GAIN ON CHP: IF : GAIN?
Notes	ON = high gain OFF = low gain

Couplings	When the auto attenuation exists (for example, with an electrical attenuator), the IF Gain setting is changed as following rule. Auto sets IF Gain to High Gain under any of the following conditions: the input attenuator is set to 0 dB, or the preamp is turned on and the frequency range is under 3.6 GHz. For other settings, Auto sets IF Gain to Low Gain.
Preset	OFF
State Saved	Saved in instrument state.
Range	Low Gain High Gain
Initial S/W Revision	Prior to A.02.00

### RRC Filter

Turns the Root Raised Cosine (RRC) filter On or Off. The  $\alpha$  value (roll off) for the filter is set to the value of the Filter Alpha parameter, and the RRC filter bandwidth is set to the Filter BW parameter.

Key Path	Meas Setup
Mode	SA, WCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE ] :CHPower :FILTer [ :RRC ] [ :STATe ] OFF   ON   0   1 [ :SENSE ] :CHPower :FILTer [ :RRC ] [ :STATe ] ?
Example	CHP:FILT OFF CHP:FILT?
Notes	This parameter is normally used when TETRA is selected as the Radio Std. You must be in the Spectrum Analysis mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, or W-CDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Dependencies	For CDMA2K mode, this key is blank. For 1xEVDO mode, this key is blank.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Filter BW

Inputs the Root Raised Cosine (RRC) filter bandwidth. Normally, the filter bandwidth is the same as the

Channel Power Measurement  
**Meas Setup**

symbol rate of the signal.

Key Path	Meas Setup
Mode	SA, WCDMA, WIMAX OFDMA, DVB-T/H, DTMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:CHPower:FILTer[:RRC]:BANDwidth <real> [ :SENSE]:CHPower:FILTer[:RRC]:BANDwidth?
Example	CHP:FILT:BAND 10MHz CHP:FILT:BAND?
Notes	This parameter is normally used when TETRA is selected as the Radio Std. You must be in the Spectrum Analysis mode, DVB-T/H mode, DTMB mode ISDB-T mode, CMMA mode, LTE mode, LTE TDD mode, or W-CDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Dependencies	For CDMA2K mode, this key is blank. For 1xEVDO mode, this key is blank.
Preset	SA, LTE, LTETDD: 3.84MHz WCDMA: 3.84MHz WIMAX OFDMA: 10MHz DVB-T/H: 8MHz DTMB: 7.56MHz ISDB-T: 5.6MHz CMMA: 7.512MHz
State Saved	Saved in instrument state.
Min	100 Hz
Max	100 MHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Filter Alpha

Inputs the alpha value for the Root Raised Cosine (RRC) filter.

Key Path	Meas Setup
Mode	SA, WCDMA, DVB-T/H, DTMB, ISDB-T, CMMA, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:CHPower:FILTer[:RRC]:ALPHA <real> [ :SENSE]:CHPower:FILTer[:RRC]:ALPHA?



Example	CHP:FILT:ALPH 0.5 CHP:FILT:ALPH?
Notes	This parameter is normally used when TETRA is selected as the Radio Std. You must be in the Spectrum Analysis mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, or W-CDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Dependencies	For CDMA2K mode, this key is blank.
Preset	SA, WCDMA, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD: 0.22 DTMB: 0.05
State Saved	Saved in instrument state.
Min	0.01
Max	1.00
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## PSD Unit

Sets the unit bandwidth for Power Spectral Density. The available units are dBm/Hz and dBm/MHz.

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB LTE, LTETDD
<b>Remote Command</b>	:UNIT:CHPower:POWer:PSD DBMHZ   DBMMHZ :UNIT:CHPower:POWer:PSD?
Example	UNIT:CHP:POW:PSD DBMMHZ UNIT:CHP:POW:PSD?
Couplings	When the PSD unit is changed, the PSD result of the "MEAS READ FETCH:CHP1?" is also changed by the PSD unit basis (in either dBm/Hz or dBm/MHz).
Preset	DBMHZ
State Saved	Saved in instrument state.
Range	dBm/Hz dBm/MHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Meas Preset

Restores all the measurement parameters to their default values.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CONFIgure:CHPower
Example	CONF:CHP
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Shoulder Offset Start (Only for DVB-T/H and ISDB-T mode)

Specifies the start offset frequency from the center frequency used in calculating the shoulder attenuation results.

Key Path	Meas Setup
Mode	DVB-T/H, ISDB-T
<b>Remote Command</b>	[ :SENSE ] :CHPower :SHOUldeR :OFFSet :FREQuency :STARt <freq> [ :SENSE ] :CHPower :SHOUldeR :OFFSet :FREQuency :STARt?
Example	CHP:SHOU:OFFS:FREQ:STAR 3.3MHz CHP:SHOU:OFFS:FREQ:STAR?
Notes	You must be in the ISDB-T mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	The minimum value of the shoulder offset start frequency is coupled with integration bandwidth, the maximum value of the shoulder offset start frequency is coupled with shoulder offset stop frequency.
Preset	DVB-T/H: 4.105MHz ISDB-T: 3.3MHz
State Saved	Saved in instrument state.
Min	100 Hz
Max	1.0 GHz
Initial S/W Revision	A.03.00

## Shoulder Offset Stop (Only for DVB-T/H and ISDB-T mode)

Specifies the stop offset frequency from the center frequency used in calculating the shoulder attenuation

results.

Key Path	Meas Setup
Mode	DVB-T/H, ISDB-T
<b>Remote Command</b>	[ :SENSe] :CHPower :SHOUlder :OFFSet :FREQuency :STOP <freq> [ :SENSe] :CHPower :SHOUlder :OFFSet :FREQuency :STOP?
Example	CHP:SHOU:OFFS:FREQ:STOP 3.5MHz CHP:SHOU:OFFS:FREQ:STOP?
Notes	You must be in the ISDB-T mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	The minimum value of the shoulder offset stop frequency is coupled with shoulder offset start frequency, the maximum value of the shoulder offset stop frequency is coupled with span.
Preset	DVB-T/H: 5.505MHz ISDB-T: 3.5MHz
State Saved	Saved in instrument state.
Min	100 Hz
Max	1.0 GHz
Initial S/W Revision	A.03.00

### Shoulder Offset (Only for DTMB and CMMB mode)

Specifies the offset frequency from the center frequency used in calculating the shoulder attenuation results.

Key Path	Meas Setup
Mode	DTMB, CMMB
<b>Remote Command</b>	[ :SENSe] :CHPower :SHOUlder :OFFSet :FREQuency <freq> [ :SENSe] :CHPower :SHOUlder :OFFSet :FREQuency?
Example	CHP:SHOU:OFFS:FREQ 4.2MHz CHP:SHOU:OFFS:FREQ?
Notes	You must be in the CMMB mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	The minimum value of the shoulder offset frequency is coupled with integration bandwidth, the maximum value of the shoulder offset frequency is coupled with span.
Preset	4.2MHz

Channel Power Measurement  
**Meas Setup**

State Saved	Saved in instrument state.
Min	100 Hz
Max	1.0 GHz
Initial S/W Revision	A.03.00

---

## **Mode**

See [“Mode” on page 1635](#) in the section "Common Measurement Functions" for more information.

## **Mode Setup**

See “[Mode Setup](#)” on page 1651 in the section "Common Measurement Functions" for more information.

## Peak Search

Places the selected marker on the trace point with the maximum y-axis value. Pressing Peak Search with the selected marker Off causes the selected marker to be set to Normal, then a peak search is immediately performed.

Key Path	Front panel key
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example	CALC:CHP:MARK2:MAX
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Recall**

See “[Recall](#)” on page 189 in the section "Common Measurement Functions" for more information.



---

## **Restart**

See [“Restart” on page 1671](#) in the section "Common Measurement Functions" for more information.

## **Save**

See “[Save](#)” on page 205 in the section "Common Measurement Functions" for more information.

---

## **Single**

See “[Single \(Single Measurement/Sweep\)](#)” on page 1677 in the section "Common Measurement Functions" for more information.

## **Source**

See [“Source” on page 1679](#) in the section "Common Measurement Functions" for more information.

## Span X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### Span

Changes the frequency range symmetrically about the center frequency.

The default (and minimum) Span is calculated using the number of carriers and the carrier width where;

$$\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$$

The span is increased by a factor of 1 + Filter Alpha if the RRC Filter is on.

Key Path	Span X Scale
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :CHPower:FREQuency:SPAN <freq> [ :SENSe ] :CHPower:FREQuency:SPAN?
Example	CHP:FREQ:SPAN 10 MHz CHP:FREQ:SPAN?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	When Res BW is set to Auto, the resolution bandwidth is auto-coupled to span. The ratio of span /RBW is approximately 106:1. When the Res BW is set to Man, bandwidths are entered by the user, and these bandwidths are used regardless of other analyzer settings.  Since Span is coupled to Integ BW in the factory default condition, if you change the integration bandwidth setting, the span setting changes by a proportional amount until a limit value is reached. However, the span can be individually set. The minimum value of the span is coupled with the integration bandwidth.

Channel Power Measurement  
Span X Scale

Preset	SA: 3 MHz WCDMA: 7.5 MHz C2K: 1.845 MHz WIMAX OFDMA: 20 MHz 1xEVDO: 2.0MHz DVB-T/H: 10MHz DTMB: 10MHz ISDB-T: 10MHz CMMB: 10MHz LTE: 7.5 MHz LTETDD: 7.5 MHz
State Saved	Saved in instrument state.
Min	100 Hz
Max	1 GHz
Max	RF Input: 1 GHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Full Span

Changes the span to show the full frequency range of the spectrum analyzer.

Key Path	Span X Scale
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE ] :CHPower:FREQuency:SPAN:FULL
Example	CHP:FREQ:SPAN:FULL
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	Selecting full span changes the measurement span value.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Last Span

Changes the span to the previous span setting. If no previous span value exists, then the span remains unchanged.

Key Path	Span X Scale
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :CHPower :FREQuency :SPAN :PREVious
Example	CHP:FREQ:SPAN:PREV
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	Selecting last span changes the measurement span value.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Sweep/Control

Accesses a menu of functions that enable you to set up and control the sweep time and source for the current measurement. See “Sweep/Control” on page 1687 in the “Common Measurement Functions” section for more information.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### Sweep Time

Selects the length of time that the spectrum analyzer sweeps the displayed frequency span. Additional overhead time, which impacts the sweep rate, is not calculated as part of the sweep time. In fact:

sweep rate = span/sweep time

update rate = 1/(sweep time + overhead)

sweep cycle time = sweep time + overhead

Sweep time is coupled to RBW and VBW, and is impacted by the number of sweep points, so changing those parameters may change the sweep time.

Key Path	Sweep/Control
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :CHPower :SWEep :TIME <time> [ :SENSe ] :CHPower :SWEep :TIME? [ :SENSe ] :CHPower :SWEep :TIME :AUTO OFF   ON   0   1 [ :SENSe ] :CHPower :SWEep :TIME :AUTO?
Example	CHP:SWE:TIME 25ms CHP:SWE:TIME? CHP:SWE:TIME:AUTO OFF CHP:SWE:TIME:AUTO?



Preset	<p>SA, WIMAX OFDMA: Automatically Calculated</p> <p>WCDMA: 1.0 ms</p> <p>CDMA2K: 9.4ms</p> <p>1xEVDO: 2.66ms</p> <p>DVB-T/H: Automatically Calculated</p> <p>DTMB: Automatically Calculated</p> <p>ISDB-T: Automatically Calculated</p> <p>CMMB: Automatically Calculated</p> <p>LTE: Automatically Calculated</p> <p>LTETDD: Automatically Calculated</p> <p>SA, WIMAX OFDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD: ON</p> <p>WCDMA: OFF</p>
Preset	<p>SA, WIMAX OFDMA: Automatically Calculated</p> <p>WCDMA: 1.0 ms</p> <p>CDMA2K: 9.4ms</p> <p>1xEVDO: 2.66ms</p> <p>DVB-T/H: Automatically Calculated</p> <p>DTMB: Automatically Calculated</p> <p>ISDB-T: Automatically Calculated</p> <p>CMMB: Automatically Calculated</p> <p>LTE: Automatically Calculated</p> <p>LTETDD: Automatically Calculated</p> <p>SA, WIMAX OFDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD: ON</p> <p>WCDMA: OFF</p>
State Saved	Saved in instrument state.
Min	1 ms
Max	4000 s
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Sweep Setup

Accesses a menu that enables you to set the sweep state for the current measurement.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

### Auto Sweep Time Rules

Switches the analyzer between normal and accuracy sweep states.

Setting **Auto Sweep Time** to **Accy** results in slower sweep times, usually about three times as long, but yields better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **Accy**.

Additional amplitude errors which occur when **Auto Sweep Time** is set to **Norm** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **Norm** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **Norm** on a **Preset** or **Auto Couple**. This means that in the Preset or Auto Coupled state, instrument amplitude accuracy specifications do not apply.

Key Path	<b>Sweep/Control, Sweep Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :CHPower :SWEep :TIME :AUTO :RULes NORMal  ACCuracy [ :SENSe ] :CHPower :SWEep :TIME :AUTO :RULes ?
Example	CHP:SWE:TIME:AUTO:RUL NORM CHP:SWE:TIME:AUTO:RUL ?
Notes	In Zero Span, this key is irrelevant and inaccessible (because the whole Sweep Setup menu is grayed out in Zero Span), however its settings can be changed remotely with no error indication.  Set to Norm when Auto Couple is pressed or sent remotely
Preset	NORMal
State Saved	Saved in instrument state.
Range	Norm Accy
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Pause

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when

paused. See [“Pause/Resume” on page 1698](#) in “Common Measurement Functions” section for more details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Gate

Accesses a menu that enables you to control the gating function. See [“Gate ” on page 1699](#) in "Common Measurement Functions" section for more details.

The Gate functionality is used to view signals best viewed by qualifying them with other events.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Points

Sets the number of points per sweep. The resolution of setting the sweep time depends on the number of points selected. If Preset is selected, the number of points per sweep defaults to 1001. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display.

Changing the number of points has several effects on the analyzer. Since markers are read at the point location, the marker reading may change. All trace data is cleared.

Key Path	<b>Sweep/Control</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :CHPower :SWEep :POINTs <integer> [ :SENSe] :CHPower :SWEep :POINTs?
Example	CHP:SWE:POIN 501 CHP:SWE:POIN?
Notes	Whenever the number of sweep points change: All trace data is erased Any traces with Update Off also go to Display Off (like going from View to Blank in the older analyzers) Sweep time is re-quantized Any limit lines that are on are updated If averaging/hold is on, averaging/hold starts over
Couplings	Whenever the number of sweep points change, the sweep time is re-quantized.

Channel Power Measurement  
Sweep/Control

Preset	DVB-T/H: 2001 DTMB: 2001 Other: 1001 ISDB-T: 2001 CMMB: 2001
State Saved	Saved in instrument state.
Min	101
Max	20001
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Trace/Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Trace Type

Allows you to select the type of trace you want to use for the current measurement. The first page of this menu contains a 1-of-N selection of the trace type (**Clear Write, Average, Max Hold, Min Hold**) for the selected trace.

Key Path	<b>Trace/Detector</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:TRACe:CHPower:TYPE WRITe   AVERAge   MAXHold   MINHold :TRACe:CHPower:TYPE?
Example	TRAC:CHP:TYPE WRIT TRAC:CHP:TYPE?
Notes	WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold
Couplings	When Detector setting is “Auto” (:SENSe]:CHPower:DETEctor:AUTO?), Detector (:SENSe]:CHPower:DETEctor[:FUNCTion]?) switches aligning with the switch of this parameter: “NORMal” with WRITe (Clear Write), “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold.
Preset	AVERAge
State Saved	Saved in instrument state.
Range	ClearWrite   Average   MaxHold   MinHold
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement. The following choices are available:

- Auto- the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.
- Normal-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average-the detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales).
- Peak-the detector determines the maximum of the signal within the sweep points.
- Sample-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak-the detector determines the minimum of the signal within the sweep points.

Key Path	<b>Detector</b>
Initial S/W Revision	Prior to A.02.00

## Detector Selection

Selects a detector to be used by the analyzer for the current measurement.

Key Path	<b>Trace/Detector</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe]:CHPower:DETEctor[:FUNction] NORMal   AVERage   POSitive   SAMPlE   NEGative [ :SENSe]:CHPower:DETEctor[:FUNction]?
Example	CHP:DET NORM CHP:DET?

Notes	<p>When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings.</p> <p>The Normal detector determines the peak of CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This method of detection is also referred to as Rosenfell detection.</p> <p>The Average detector determines the average of the signal within the sweep points. The averaging method is Power Average (RMS).</p> <p>The Peak detector determines the maximum of the signal within the sweep points.</p> <p>The Sample detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.</p> <p>The Negative Peak detector determines the minimum of the signal within the sweep points.</p>
Couplings	When Detector setting is “Auto” ([:SENSe]:CHPower:DETECTOR:AUTO?), Detector ([:SENSe]:CHPower:DETECTOR[:FUNCTION]?) switches aligning with the switch of this parameter: “NORMAl” with Clear Write, “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold.
Preset	AVERAge
State Saved	Saved in instrument state.
Range	Normal Average Peak Sample Negative Peak
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Auto

Sets the detector for the currently selected trace to Auto.

Key Path	<b>Trace/Detector</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[:SENSe]:CHPower:DETECTOR:AUTO ON OFF 1 0 [:SENSe]:CHPower:DETECTOR:AUTO?
Example	CHP:DET:AUTO ON CHP:DET:AUTO?
Couplings	When Detector setting is “Auto” ([:SENSe]:CHPower:DETECTOR:AUTO?), Detector ([:SENSe]:CHPower:DETECTOR[:FUNCTION]?) switches aligning with the switch of this parameter: “NORMAl” with Clear Write, “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold.

Channel Power Measurement  
Trace/Detector

Preset	Others: ON DVB-T/H, DTMB, ISDB-T, CMMB: OFF
State Saved	Saved in instrument state.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00



---

## Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement.

See [“Trigger” on page 1753](#) in the "Common Measurement Functions" section for more information.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00


## View/Display

Accesses a menu of functions that enable you to control the instrument display as well as turn the bar graph On and Off.

If current mode is NOT DVB-T/H, DTMB, ISDB-T or CMMB mode, the front panel views contain one view: Spectrum View. It can be displayed as a single spectrum trace view or displayed with a Bar Graph trace on the spectrum trace


The results of the measurement can be displayed as a single spectrum trace view or displayed with a Bar Graph trace on the spectrum trace.

### Spectrum View with Bar Graph off

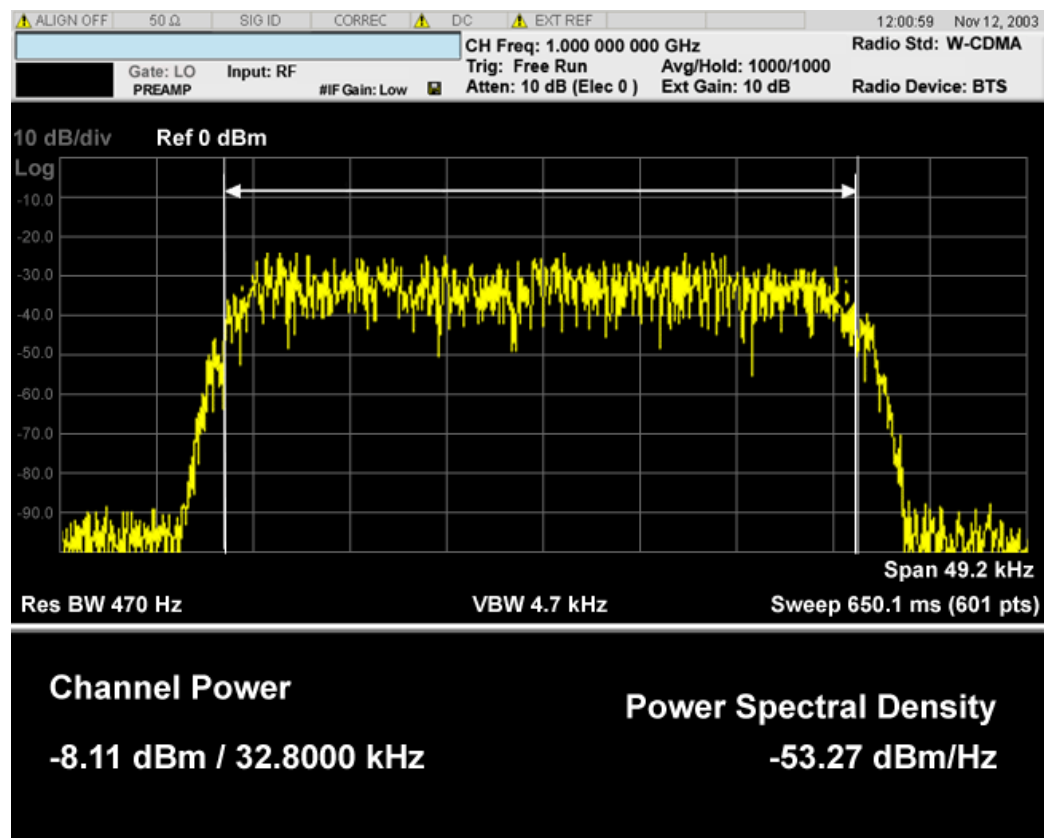

### Spectrum View with Bar Graph on

This View is the same as the 'Spectrum' view, but has a blue bar between the markers that indicates the measured output power level. The bar graph is activated when the "Bar Graph" Soft Key is set to ON under the View/Display menu. The actual measured output power level is displayed on the display at the bottom of the bar.

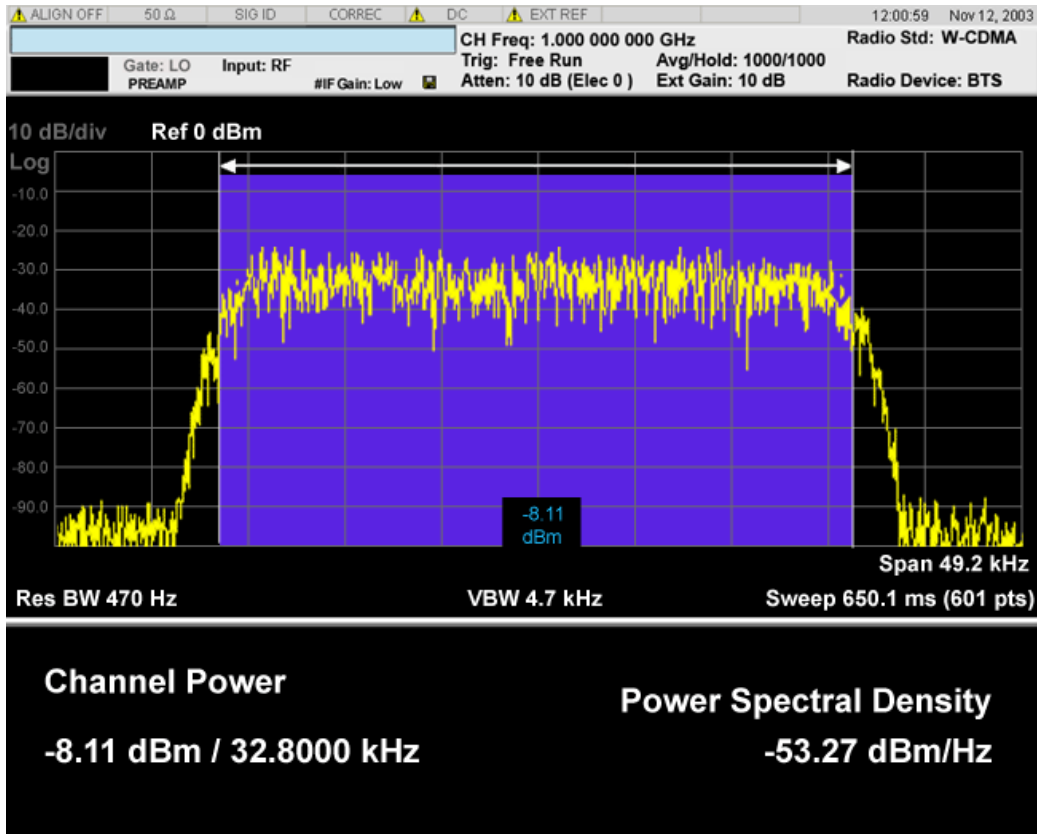

If current mode is DVB-T/H or DTMB, the front panel views contain three views: RF Spectrum View, Shoulder Attenuation View and Spectrum Mask View.

If current mode is ISDB-T or CMMB, the front panel views contain two views: RF Spectrum View and Shoulder Attenuation View.

The RF Spectrum View is the common view, the same as the Spectrum view, and the Shoulder Attenuation View and Spectrum Mask View are special view for DVB-T/H, DTMB, ISDB-T and CMMB.

**View selection by name (DTMB, DVB-T/H only)**

Selects the results view. The following SCPI command allows you to select the desired measurement view by enumeration.

Key Path	View/Display
Mode	DVB-T/H, DTMB
Remote Command	:DISPlay:CHPower:VIEW[:SElect] RFSPectrum SHOUlder MASK :DISPlay:CHPower:VIEW[:SElect]?
Example	DISP:CHP:VIEW RFSP DISP:CHP:VIEW?
Preset	RFSPectrum

## Channel Power Measurement

### View/Display

State Saved	Saved in instrument state.
Range	RF Spectrum   Shoulder Attenuation   Spectrum Mask
Initial S/W Revision	A.02.00

### View selection by name (ISDB-T, CMMB only)

Selects the results view. The following SCPI command allows you to select the desired measurement view by enumeration.

Key Path	<b>View/Display</b>
Mode	ISDB-T, CMMB
<b>Remote Command</b>	:DISPlay:CHPower:VIEW[:SElect] RFSPectrum SHOUlder :DISPlay:CHPower:VIEW[:SElect]?
Example	DISP:CHP:VIEW RFSP DISP:CHP:VIEW?
Preset	RFSPectrum
State Saved	Saved in instrument state.
Range	RF Spectrum   Shoulder Attenuation
Initial S/W Revision	A.03.00

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Display

Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1813](#) in the "Common Measurement Functions" section for more information.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### Bar Graph

Turns the Bar Graph On and Off.

Key Path	<b>DVB-T/H, DTMB, ISDB-T, CMMB: View/Display, RF Spectrum</b> <b>Others: View/Display</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD

<b>Remote Command</b>	:DISP:CHPower:VIEW[1]:WINDow[1]:BGRaph ON OFF 1 0 :DISP:CHPower:VIEW[1]:WINDow[1]:BGRaph?
Example	DISP:CHP:VIEW:WIND:BGR ON DISP:CHP:VIEW:WIND:BGR?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## RF Spectrum (Only for DVB-T/H, DTMB, ISDB-T and CMMB)

---

**NOTE** This view is the same as the Spectrum View above.

---


Selects the RF Spectrum view. This view consists of the following two windows:

“Traces Window” on page 394

“Results Window” on page 394

The measurement results are shown in a graph window and in a text window. The text window shows the absolute power and its mean power spectral density values over the specified bandwidth. This view also supports bar graph functionality. The bar graph is activated when the “Bar Graph” Soft Key is set to ON under the RF Spectrum menu. The actual measured output power level is displayed on the display at the bottom of the bar.

Channel Power Measurement  
View/Display

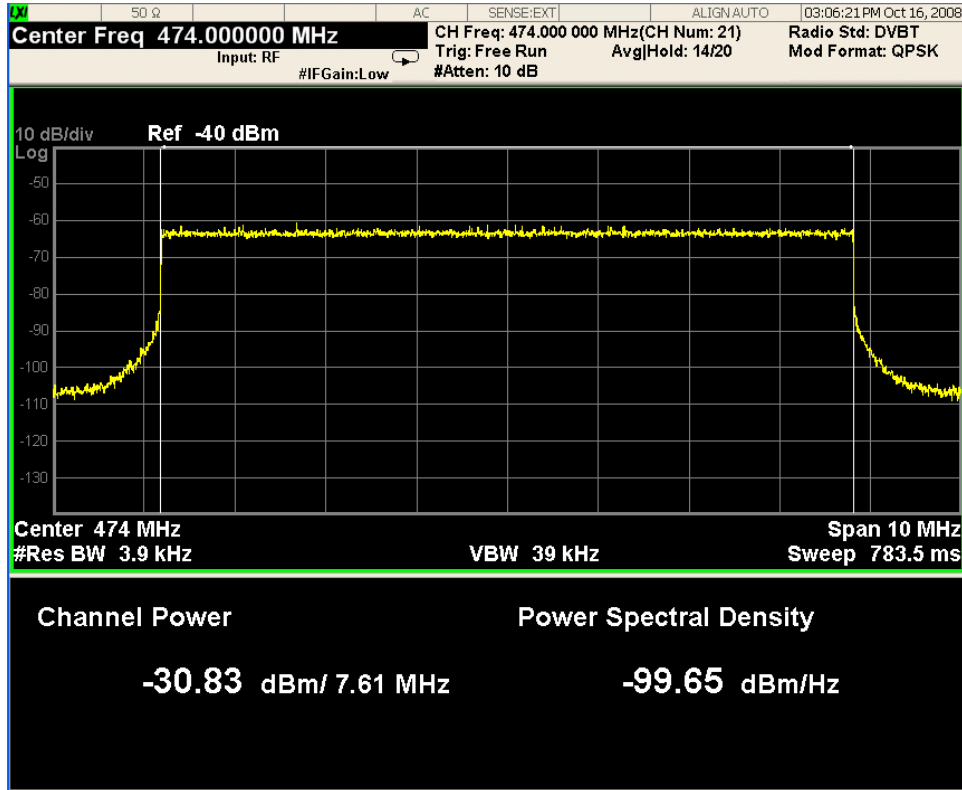

Traces Window

Corresponding Trace	yellow - spectrum trace;
---------------------	--------------------------

Results Window

Name	Corresponding Results
Channel Power	n=1, 1st element Total channel power in the specified integration bandwidth
	Channel Integration Bandwidth
Power Spectral Density	n=1, 2nd element The power in the specified unit bandwidth

Key Path	View/Display
Example	DISP:CHP:VIEW RFSP DISP:CHP:VIEW?
Initial S/W Revision	A.02.00

## Shoulder Attenuation (Only for DVB-T/H, DTMB, ISDB-T and CMMB)

Selects the Shoulder Attenuation view. This view is only available in DVB-T/H, DTMB, ISDB-T and CMMB mode:

“Shoulder Attenuation view for DVB-T/H and ISDB-T mode” on page 395

“Shoulder Attenuation view for DTMB and CMMB mode” on page 396


This view consists of the following three windows:

“Lower Shoulder Trace Window” on page 397


“Upper Shoulder Trace Window” on page 397

“Results Window” on page 397

### Shoulder Attenuation view for DVB-T/H and ISDB-T mode

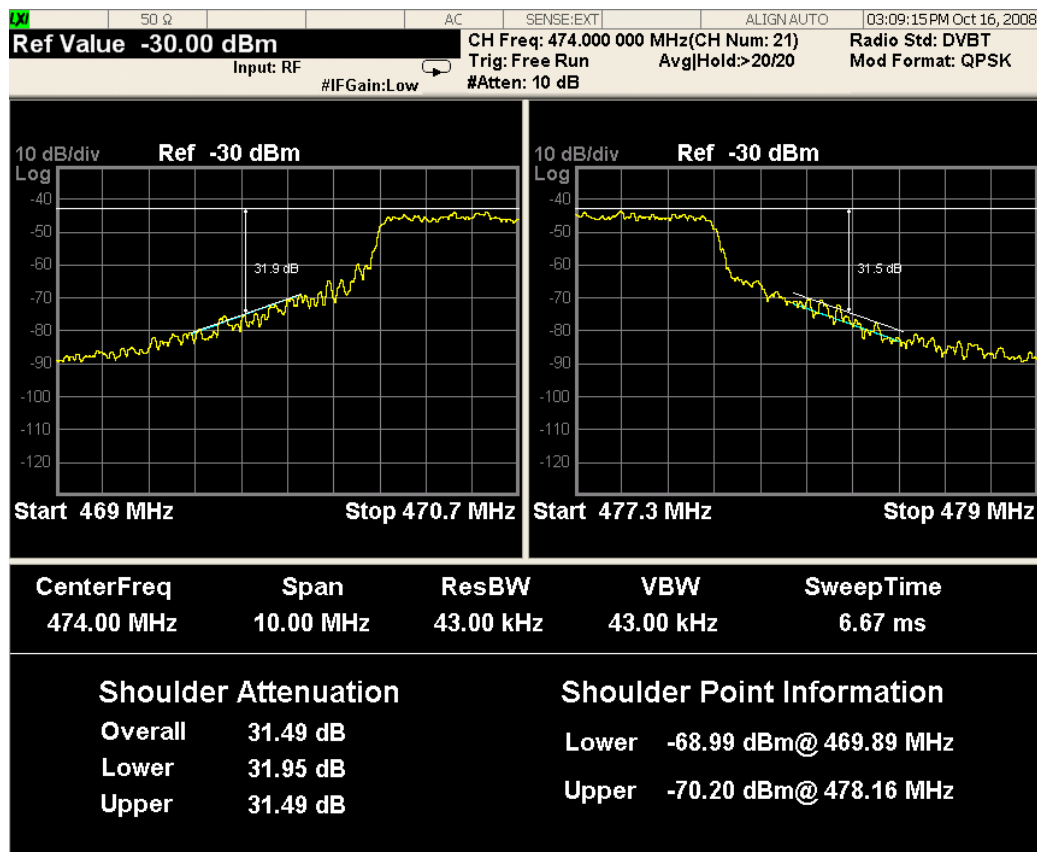

Shoulder Attenuation view for DTMB and CMMB mode

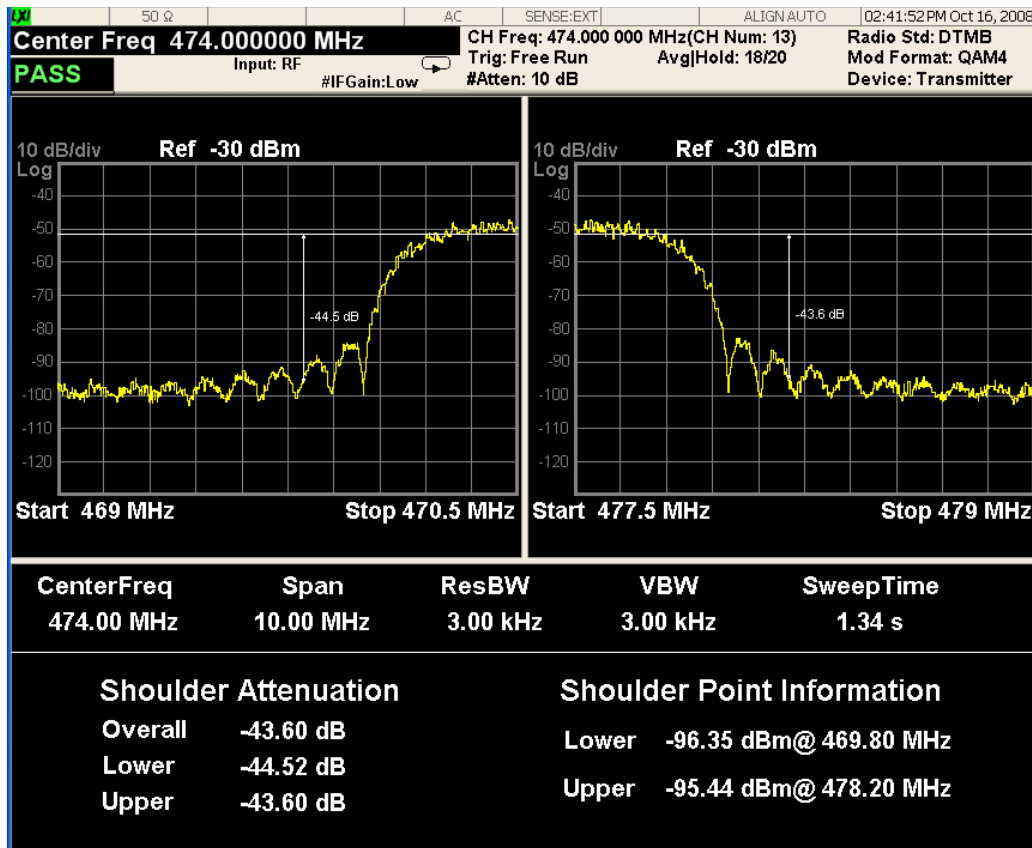

NOTE

The pass/fail function is valid only in DTMB and CMMB mode:

In DTMB mode, when the device type (under mode setup panel) is Transmitter, the pass/fail limit is -36 dBc, and for the other type - Exciter, the pass/fail limit is -48 dBc.

In CMMB mode, when the device type (under mode setup panel) is Transmitter, the pass/fail limit is -35dBc, and for the other type - Exciter, the pass/fail limit is -50dBc.



### Lower Shoulder Trace Window

Corresponding Trace *	<p>yellow - lower edge of the spectrum trace;</p> <p>white - assistant lines to indicate the lower shoulder attenuation;</p> <p><b>(Only for DVB-T/H)</b> cyan – assistant beeline from shoulder range begin point to the range end point;</p>
-----------------------	--

### Upper Shoulder Trace Window

Corresponding Trace *	<p>yellow - upper edge of the spectrum trace;</p> <p>white - assistant lines to indicate the upper shoulder attenuation;</p> <p><b>(Only for DVB-T/H)</b> cyan – assistant beeline from shoulder range begin point to the range end point;</p>
-----------------------	--

### Results Window

Name	Corresponding Results
CenterFreq (MHz)	The center frequency of the measurement
Span (MHz)	The span of the measurement
ResBW (kHz)	The resolution bandwidth of the measurement
VBW (kHz)	The video bandwidth of the measurement
SweepTime (ms)	The sweep time of the measurement
Overall Shoulder Attenuation (dB)	n=3, 1st element Shoulder attenuation result
Lower Shoulder Attenuation (dB)	n=3, 2nd element Lower shoulder attenuation result
Upper Shoulder Attenuation (dB)	n=3, 3rd element Upper shoulder attenuation result
Lower Shoulder Point Power (dBm) **	n=3, 4th element The power value of the point with maximum power level in the lower edge of the spectrum
Lower Shoulder Point Frequency (MHz) **	n=3, 5th element The frequency of the point with maximum power level in the lower edge of the spectrum
Upper Shoulder Point Power (dBm) **	n=3, 6th element The power value of the point with maximum power level in the upper edge of the spectrum

**Channel Power Measurement**  
**View/Display**

Upper Shoulder Point Frequency (MHz) **	n=3, 7th element The frequency of the point with maximum power level in the upper edge of the spectrum
---	---

\*: For DVB-T/H mode: All three traces are valid. The cyan line is connecting the measurement points 300kHz and 700kHz from each of the upper and lower edges of the spectrum (yellow trace).

For DTMB, ISDB-T, and CMMB mode: There are only two traces: yellow trace and white trace.

\*\* : For DVB-T/H mode: Shoulder Point Information shows the information of the maximum power level point between the points at 300 kHz and 700 kHz from each of the upper and lower edges of the spectrum trace. It contains two parts: the frequency and the power level.

For DTMB mode: Shoulder Point Information shows the power level of the fixed point, which is  $\pm 4.2$  MHz away from center frequency for 8 MHz radio bandwidth and  $\pm 3.2$  MHz away from center frequency for 6 MHz radio bandwidth.

For ISDB-T mode: Shoulder Point Information shows the information of the maximum power level point between the frequency range of  $-3.3$  MHz to  $-3.5$  MHz away from center frequency of the lower channel and of  $+3.3$  MHz to  $+3.5$  MHz away from the center frequency of the upper channel. It contains two parts: the frequency and the power level.

For CMMB mode: Shoulder Point Information shows the power level of the fixed point, which is  $\pm 4.2$  MHz away from center frequency for 8 MHz radio bandwidth. It contains the frequency and the power level of the point.

Key Path	View/Display
Example	DISP:CHP:VIEW SHOU DISP:CHP:VIEW?
Initial S/W Revision	A.02.00

**Spectrum Mask(DTMB, DVB-T/H only)**

Selects the Spectrum Mask view. This view consists of the following two windows:

“Trace Window” on page 400

“Results Window” on page 400



---

**NOTE** If the current radio bandwidth is not 8MHz, the limit line (Mask) is not available and the failed points list shows “---”. The STATUS message “No Result; No mask for X MHz” appears. (X may be 5, 6 and 7 for DVB-T/H mode and 6 for DTMB mode.)

---

### Trace Window

Corresponding Trace	yellow - spectrum trace; cyan - limit line trace;
---------------------	--

### Results Window

Name	Corresponding Results
Channel Power	n=1, 1st element Total channel power in the specified integration bandwidth
	Channel Integration Bandwidth
Power Spectral Density	n=1, 2nd element The power in the specified unit bandwidth
Failed Points List *	n=7 The failed point's information: frequency, absolute power and relative power

\*: If the number of the failed points is less than twenty, all of them (frequency, power and relative power) will be shown in the failed points list; and if the number of the failed points is more than twenty, only the first ten and the last ten failed points will be shown.

Key Path	View/Display
Example	DISP:CHP:VIEW MASK DISP:CHP:VIEW?
Initial S/W Revision	A.02.00

### Mask - selection by Enum (Only for DVB-T/H mode)

Selects the mask line in the spectrum mask view. The following SCPI command allows you to select the desired mask by enumeration. It includes six kinds of limit line: L/SECAM/NICAM, G/PAL/NICAM, I/PAL/NICAM, G/PAL/A2, K/SECAM and K/PAL.

Key Path	View/Display, Spectrum Mask
Mode	DVB-T/H
Remote Command	:DISPlay:CHPower:VIEW:MASK[:SElect] LSNI GPNI IPNI GPA2 KSKP :DISPlay:CHPower:VIEW:MASK[:SElect]?
Example	DISP:CHP:VIEW:MASK LSNI DISP:CHP:VIEW:MASK?

Dependencies	If current Radio BW is not 8 MHz, the STATUS message “No result” will be displayed. But the keys under the Spectrum Mask are still displayed.
Preset	LSNI
State Saved	Saved in instrument state.
Range	LSecam_Nicam   GPal_Nicam   IPal_Nicam   GPal_A2   KSecam_KPal
Initial S/W Revision	A.02.00

### Scroll

Accesses the Scroll menu, which contains features that enable you to navigate the display.

Key Path	<b>View/Display</b>
Mode	DVB-T/H, DTMB
Initial S/W Revision	A.02.00

### Prev Page

Moves the display one page back to the previous page of the result metrics window in Spectrum Mask view.

Key Path	<b>View/Display, Spectrum Mask, Scroll</b>
Mode	DVB-T/H, DTMB
Initial S/W Revision	A.02.00

### Next Page

Moves the display one page forward to the next page of the result metrics window in Spectrum Mask view.

Key Path	<b>View/Display, Spectrum Mask, Scroll</b>
Mode	DVB-T/H, DTMB
Initial S/W Revision	A.02.00

### Scroll Up

Moves one line upward from the current line of the result metrics window in Spectrum Mask view.

Pressing the up arrow hard key has the same effect as this function, if no active function is shown. If an active function is shown, the up arrow hard key controls the active function, but has no effect on line movement.

Key Path	<b>View/Display, Spectrum Mask, Scroll</b>
Mode	DVB-T/H, DTMB

Channel Power Measurement  
View/Display

Initial S/W Revision	A.02.00
----------------------	---------

**Scroll Down**

Moves one line downward from the current line of the result metrics window in Spectrum Mask view.

Pressing the down arrow hard key has the same effect as this function, if no active function is shown. If an active function is shown, the up arrow hard key controls the active function, but has no effect on line movement, as the Scroll Down function does.

Key Path	<b>View/Display, Spectrum Mask, Scroll</b>
Mode	DVB-T/H, DTMB
Initial S/W Revision	A.02.00

**First Page**

Moves the display to the first page of the result metrics window in Spectrum Mask view.

Key Path	<b>View/Display, Spectrum Mask, Scroll</b>
Mode	DVB-T/H, DTMB
Initial S/W Revision	A.02.00

**Last Page**

Moves the display to the last page of the result metrics window in Spectrum Mask view.

Key Path	<b>View/Display, Spectrum Mask, Scroll</b>
Mode	DVB-T/H, DTMB
Initial S/W Revision	A.02.00

ACP is a measurement of the amount of interference, or power, in an adjacent frequency channel. The results are displayed as a bar graph or as spectrum data, with measurement data at specified offsets. For measurement results and views, see [“View/Display” on page 508](#).

This topic contains the following sections:

[“Measurement Commands for ACP” on page 403](#)

[“Remote Command Results for ACP Measurement” on page 403](#)

### Measurement Commands for ACP

The following commands are used to retrieve the measurement results:

:CONFigure:ACP

:CONFigure:ACP:NDEFault

:INITiate:ACP

:FETCh:ACP[n] ?

:READ:ACP[n] ?

:MEASure:ACP[n] ?

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1575](#).

### Remote Command Results for ACP Measurement

Condition	N	Results Returned
Mode = SA mode, Radio Std = None, Number of carriers = 1 and only offset A is on	Not specified or n=1	Returns 3 comma-separated values that correspond to: Reference carrier power, lower-adjacent channel power (dBc), and upper-adjacent channel power (dBc).

<p>Mode = DTMB or CMMB, Radio BW = 8MHz, Number of carriers = 1 and Meas Type = Total power reference</p>	<p>Not specified or n=1</p>	<p>Returns 32 comma-separated scalar results, in the following order.</p> <ol style="list-style-type: none"> <li>1. 0.0</li> <li>2. Total carrier power (dBm)</li> <li>3. 0.0</li> <li>4. Reference carrier power (dBm)</li> <li>5. Lower offset A - relative power (dB)</li> <li>6. Lower offset A - absolute power (dBm)</li> <li>7. Upper offset A - relative power (dB)</li> <li>8. Upper offset A - absolute power (dBm)</li> <li>9. Lower offset B - relative power (dB)</li> <li>10. Lower offset B - absolute power (dBm)</li> <li>11. Upper offset B - relative power (dB)</li> <li>12. Upper offset B - absolute power (dBm)</li> <li>...</li> <li>25. Lower offset F - relative power (dB)</li> <li>26. Lower offset F - absolute power (dBm)</li> <li>27. Upper offset F - relative power (dB)</li> <li>28. Upper offset F - absolute power (dBm)</li> <li>29. Inside Adjacent Channel - relative power (dB)</li> <li>30. Inside Adjacent Channel - absolute power (dBm)</li> <li>31. Outside Adjacent Channel - relative power (dB)</li> <li>32. Outside Adjacent Channel - absolute power (dBm)</li> </ol> <p>If Radio Device = Exciter, the last four (29, 30, 31 and 32) results returned -999.0.</p> <p>If the results are not available, -999.0 is returned.</p> <p>Note:</p> <ul style="list-style-type: none"> <li>* Inside Adjacent Channel - absolute power: the maximum of the Lower offset A - absolute power and the Upper offset A - absolute power;</li> <li>** Inside Adjacent Channel - relative power: the result of Reference carrier power subtracted from Inside Adjacent Channel - absolute power;</li> <li>*** Outside Adjacent Channel - absolute power: the root mean square of the absolute power of the offset B upper/lower, the offset C upper/lower and the offset D upper/lower;</li> <li>**** Outside Adjacent Channel - relative power: the result of Reference carrier power subtracted from Outside Adjacent Channel - absolute power;</li> </ul>
---	---------------------------------	--



<p>Mode = DTMB or CMMB, Radio BW = 8MHz, Number of carriers = 1 and Meas Type = Power spectral density reference</p>	<p>not specified or n=1</p>	<p>Returns 32 comma-separated scalar results, in the following order.</p> <ol style="list-style-type: none"> <li>1. 0.0</li> <li>2. Total carrier power (dBm/Hz or dBm/MHz)</li> <li>3. 0.0</li> <li>4. Reference carrier power (dBm/Hz or dBm/MHz)</li> <li>5. Lower offset A - relative power (dB)</li> <li>6. Lower offset A - absolute power (dBm/Hz or dBm/MHz)</li> <li>7. Upper offset A - relative power (dB)</li> <li>8. Upper offset A - absolute power (dBm/Hz or dBm/MHz)</li> <li>9. Lower offset B - relative power (dB)</li> <li>10. Lower offset B - absolute power (dBm/Hz or dBm/MHz)</li> <li>11. Upper offset B - relative power (dB)</li> <li>12. Upper offset B - absolute power (dBm/Hz or dBm/MHz)</li> <li>...</li> <li>25. Lower offset F - relative power (dB)</li> <li>26. Lower offset F - absolute power (dBm/Hz or dBm/MHz)</li> <li>27. Upper offset F - relative power (dB)</li> <li>28. Upper offset F - absolute power (dBm/Hz or dBm/MHz)</li> <li>29. -999.0</li> <li>30. -999.0</li> <li>31. -999.0</li> <li>32. -999.0</li> </ol> <p>The last four (29, 30, 31 and 32) results always returned -999.0. If the results are not available, -999.0 is returned.</p>
--	---------------------------------	---

<p>Meas Type = Total power reference</p>	<p>Not specified or n=1</p>	<p>Returns 28 comma-separated scalar results, in the following order.</p> <ol style="list-style-type: none"> <li>1. 0.0</li> <li>2. Total carrier power (dBm)</li> <li>3. 0.0</li> <li>4. Reference carrier power (dBm)</li> <li>5. Lower offset A - relative power (dB)</li> <li>6. Lower offset A - absolute power (dBm)</li> <li>7. Upper offset A - relative power (dB)</li> <li>8. Upper offset A - absolute power (dBm)</li> <li>9. Lower offset B - relative power (dB)</li> <li>10. Lower offset B - absolute power (dBm)</li> <li>11. Upper offset B - relative power (dB)</li> <li>12. Upper offset B - absolute power (dBm)</li> <li>...</li> <li>25. Lower offset F - relative power (dB)</li> <li>26. Lower offset F - absolute power (dBm)</li> <li>27. Upper offset F - relative power (dB)</li> <li>28. Upper offset F - absolute power (dBm)</li> </ol> <p>If the results are not available, -999.0 is returned.</p>
--	---------------------------------	---

Meas Type = Power spectral density reference	not specified or n=1	<p>Returns 28 comma-separated scalar results, in the following order.</p> <ol style="list-style-type: none"> <li>1. 0.0</li> <li>2. Total carrier power (dBm/Hz or dBm/MHz)</li> <li>3. 0.0</li> <li>4. Reference carrier power (dBm/Hz or dBm/MHz)</li> <li>5. Lower offset A - relative power (dB)</li> <li>6. Lower offset A - absolute power (dBm/Hz or dBm/MHz)</li> <li>7. Upper offset A - relative power (dB)</li> <li>8. Upper offset A - absolute power (dBm/Hz or dBm/MHz)</li> <li>9. Lower offset B - relative power (dB)</li> <li>10. Lower offset B - absolute power (dBm/Hz or dBm/MHz)</li> <li>11. Upper offset B - relative power (dB)</li> <li>12. Upper offset B - absolute power (dBm/Hz or dBm/MHz)</li> <li>...</li> <li>25. Lower offset F - relative power (dB)</li> <li>26. Lower offset F - absolute power (dBm/Hz or dBm/MHz)</li> <li>27. Upper offset F - relative power (dB)</li> <li>28. Upper offset F - absolute power (dBm/Hz or dBm/MHz)</li> </ol> <p>If the results are not available, -999.0 is returned.</p>
Meas Method = FAST	not specified or n=1	<p>Returns 5 comma-separated results, in the following order:</p> <ol style="list-style-type: none"> <li>1. Reference carrier - absolute power (dBm)</li> <li>2. Lower offset A - absolute power (dBm)</li> <li>3. Upper offset A - absolute power (dBm)</li> <li>4. Lower offset B - absolute power (dBm)</li> <li>5. Upper offset B - absolute power (dBm)</li> </ol>

<p>Meas Type = Total power reference</p>	<p>2</p>	<p>Returns 48 scalar results, in the following order:</p> <ol style="list-style-type: none"> <li>1. Channel (1) - relative power (dB)</li> <li>2. Channel (1) - absolute power (dBm)</li> <li>3. Channel (2) - relative power (dB)</li> <li>4. Channel (2) - absolute power (dBm)</li> <li>...</li> <li>23. Channel (12) - relative power (dB)</li> <li>24. Channel (12) - absolute power (dBm)</li> <li>25. Lower offset A - relative power (dB)</li> <li>26. Lower offset A - absolute power (dBm)</li> <li>27. Upper offset A - relative power (dB)</li> <li>28. Upper offset A - absolute power (dBm)</li> <li>29. Lower offset B - relative power (dB)</li> <li>30. Lower offset B - absolute power (dBm)</li> <li>31. Upper offset B - relative power (dB)</li> <li>32. Upper offset B - absolute power (dBm)</li> <li>...</li> <li>45. Lower offset F - relative power (dB)</li> <li>46. Lower offset F - absolute power (dBm)</li> <li>47. Upper offset F - relative power (dB)</li> <li>48. Upper offset F - absolute power (dBm)</li> </ol> <p>If the results are not available, -999.0 is returned.</p>
--	----------	--

Meas Type = Power spectral density reference	2	<p>Returns 48 scalar results, in the following order:</p> <ol style="list-style-type: none"> <li>1. Channel (1) - relative power (dB)</li> <li>2. Channel (1) - absolute power (dBm/Hz or dBm/MHz)</li> <li>3. Channel (2) - relative power (dB)</li> <li>4. Channel (2) - absolute power (dBm/Hz or dBm/MHz)</li> <li>...</li> <li>23. Channel (12) - relative power (dB)</li> <li>24. Channel (12) - absolute power (dBm/Hz or dBm/MHz)</li> <li>25. Lower offset A - relative power (dB)</li> <li>26. Lower offset A - absolute power (dBm/Hz or dBm/MHz)</li> <li>27. Upper offset A - relative power (dB)</li> <li>28. Upper offset A - absolute power (dBm/Hz or dBm/MHz)</li> <li>29. Lower offset B - relative power (dB)</li> <li>30. Lower offset B - absolute power (dBm/Hz or dBm/MHz)</li> <li>31. Upper offset B - relative power (dB)</li> <li>32. Upper offset B - absolute power (dBm/Hz or dBm/MHz)</li> <li>...</li> <li>45. Lower offset F - relative power (dB)</li> <li>46. Lower offset F - absolute power (dBm/Hz or dBm/MHz)</li> <li>47. Upper offset F - relative power (dB)</li> <li>48. Upper offset F - absolute power (dBm/Hz or dBm/MHz)</li> </ol> <p>If the results are not available, -999.0 is returned.</p>
---	---	--

<p>Mode = DTMB or CMMB, Radio BW = 8MHz and Meas Type = Total power reference</p>	<p>3</p>	<p>Returns 28 scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing the relative to the reference carrier and by testing the absolute power limit of the offset frequencies (measured as total power in dB):</p> <ol style="list-style-type: none"> <li>1. Lower offset A - relative limit result</li> <li>2. Lower offset A - absolute limit result</li> <li>3. Upper offset A - relative limit result</li> <li>4. Upper offset A - absolute limit result</li> <li>5. Lower offset B - relative limit result</li> <li>6. Lower offset B - absolute limit result</li> <li>7. Upper offset B - relative limit result</li> <li>8. Upper offset B - absolute limit result</li> <li>...</li> <li>21. Lower offset F - relative limit result</li> <li>22. Lower offset F - absolute limit result</li> <li>23. Upper offset F - relative limit result</li> <li>24. Upper offset F - absolute limit result</li> <li>25. Inside Adjacent Channel - relative limit result</li> <li>26. Inside Adjacent Channel - absolute limit result</li> <li>27. Outside Adjacent Channel - relative limit result</li> <li>28. Outside Adjacent Channel - absolute limit result</li> </ol> <p>If Radio Device = Exciter, the last four (25, 26, 27 and 28) results returned -999.0.</p>
---	----------	--

Mode = DTMB or CMMB, Radio BW = 8MHz and Meas Type = Power spectral density reference	3	Returns 28 scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing the relative to the reference carrier and by testing the absolute power limit of the offset frequencies (measured as power spectral density in dB):  1. Lower offset A - relative limit result 2. Lower offset A - absolute limit result 3. Upper offset A - relative limit result 4. Upper offset A - absolute limit result 5. Lower offset B - relative limit result 6. Lower offset B - absolute limit result 7. Upper offset B - relative limit result 8. Upper offset B - absolute limit result ... 21. Lower offset F - relative limit result 22. Lower offset F - absolute limit result 23. Upper offset F - relative limit result 24. Upper offset F - absolute limit result 25. -999.0 26. -999.0 27. -999.0 28. -999.0  The last four results always returned -999.0.
---	---	---

<p>Meas Type = Total power reference</p>	<p>3</p>	<p>Returns 24 scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing the relative to the reference carrier and by testing the absolute power limit of the offset frequencies (measured as total power in dB):</p> <ol style="list-style-type: none"> <li>1. Lower offset A - relative limit result</li> <li>2. Lower offset A - absolute limit result</li> <li>3. Upper offset A - relative limit result</li> <li>4. Upper offset A - absolute limit result</li> <li>5. Lower offset B - relative limit result</li> <li>6. Lower offset B - absolute limit result</li> <li>7. Upper offset B - relative limit result</li> <li>8. Upper offset B - absolute limit result</li> <li>...</li> <li>21 Lower offset F - relative limit result</li> <li>22 Lower offset F - absolute limit result</li> <li>23 Upper offset F - relative limit result</li> <li>24 Upper offset F - absolute limit result</li> </ol>
<p>Meas Type = Power spectral density reference</p>	<p>3</p>	<p>Returns 24 scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing the relative to the reference carrier and by testing the absolute power limit of the offset frequencies (measured as power spectral density in dB):</p> <ol style="list-style-type: none"> <li>1. Lower offset A - relative limit result</li> <li>2. Lower offset A - absolute limit result</li> <li>3. Upper offset A - relative limit result</li> <li>4. Upper offset A - absolute limit result</li> <li>5. Lower offset B - relative limit result</li> <li>6. Lower offset B - absolute limit result</li> <li>7. Upper offset B - relative limit result</li> <li>8. Upper offset B - absolute limit result</li> <li>...</li> <li>21 Lower offset F - relative limit result</li> <li>22 Lower offset F - absolute limit result</li> <li>23 Upper offset F - relative limit result</li> <li>24 Upper offset F - absolute limit result</li> </ol>
	<p>4</p>	<p>Returns &lt;Num Pts&gt; comma-separated scalar values representing the Y values in Trace 1</p>



	5	Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 2
	6	Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 3

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. The parameter values are measurement independent, except all Attenuation values and the Internal Preamp selections, which are the same across all measurements.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value

Sets the value for the absolute power reference. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el <real>  :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el?
Example	DISP:ACP:VIEW:WIND:TRAC:Y:RLEV 100 DISP:ACP:VIEW:WIND:TRAC:Y:RLEV?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	All Except CDMA1xEVDO:10.00 dBm CDMA1xEVDO: -10dBm
State Saved	Saved in instrument state.
Min	-250.00 dBm
Max	250.00 dBm
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Attenuation

Accesses a menu of functions that enable you to change attenuation settings. This key has read-back text that describes the total attenuator value.

See AMPTD Y Scale, “Attenuation” on page 1406 in the “Common Measurement Functions” section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Scale/Div

Sets the units-per-division of the vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision <rel_ampl>  :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision?
Example	DISP:ACP:VIEW:WIND:TRAC:Y:PDIV 5 DISP:ACP:VIEW:WIND:TRAC:Y:PDIV?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dB
State Saved	Saved in instrument state.
Min	0.10 dB
Max	20.00 dB
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See AMPTD Y Scale, “[Presel Center](#)” on page 1421 in the “Common Measurement Functions” section for more information.

## Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest.

See AMPTD Y Scale, “[Preselector Adjust](#)” on page 1422 in the “Common Measurement Functions” section for more information.

## Y Axis Unit

Allows you to change the vertical (Y) axis amplitude unit.

See “[Y Axis Unit](#)” on page 1424 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Parameter Name	Y Axis Unit
Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00

## Reference Level Offset

Adds an offset value to the displayed reference level. The reference level is the absolute amplitude represented by the top graticule line on the display.

See “[Reference Level Offset](#)” on page 1429 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Parameter Name	Reference Level Offset
Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00

## $\mu$ W Path Control

The  **$\mu$ W Path Control** functions include the  **$\mu$ W Preselector Bypass** (Option MPB) and **Low Noise Path** (Option LNP) controls in the High Band path circuits.

See  $\mu$ “ [\$\mu\$ W Path Control](#)” on page 1430 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Parameter Name	$\mu$ W Path Control
----------------	----------------------

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00

## Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, “[Internal Preamp](#)” on page 1435 in the “Common Measurement Functions” section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Ref Position

Positions the reference level at the top, center, or bottom of the Y- scale display. Changing the reference position does not change the reference level value.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOS ition TOP CENTer BOTTom  :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOS ition?
Example	DISP:ACP:VIEW:WIND:TRAC:Y:RPOS CENT DISP:ACP:VIEW:WIND:TRAC:Y:RPOS?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Preset	TOP
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Auto Scaling

Toggles the Auto Scaling function between On and Off.

Key Path	<b>AMPTD Y Scale</b>
----------	----------------------

ACP Measurement  
**AMPTD Y Scale**

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISP:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUPlE 0 1 OFF ON :DISP:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUPlE?
Example	DISP:ACP:VIEW:WIND:TRAC:Y:COUP ON DISP:ACP:VIEW:WIND:TRAC:Y:COUP?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SELEct to set the mode.
Couplings	When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Auto Couple**

See “[Auto Couple](#)” on page 1437 in the section "Common Measurement Functions" for more information.

## BW

Accesses a menu of functions that enable you to specify and control the video and resolution bandwidths. You can also select the type of filter for the measurement and set the filter bandwidth.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Res BW

Sets the value of the resolution bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[:SENSe]:ACPpower:BANDwidth[:RESolution] <bandwidth> [:SENSe]:ACPpower:BANDwidth[:RESolution]? [:SENSe]:ACPpower:BANDwidth[:RESolution]:AUTO ON OFF 1 0 [:SENSe]:ACPpower:BANDwidth[:RESolution]:AUTO?
Example	ACP:BAND 25kHz ACP:BAND? ACP:BAND:AUTO ON ACP:BAND:AUTO?
Notes	This key is available only in IBW mode. This parameter is preset by the Meas Method selection. Preset values are as follows: IBW: 100 kHz IBWR: 27 kHz FAST (WCDMA): 390 kHz You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	The resolution bandwidth is coupled to the video bandwidth based on the video to resolution bandwidth ratio setting if AUTO is selected.



Preset	SA: 220 kHz WCDMA: 100 kHz WIMAX OFDMA: 100 kHz C2K: Method RBW: grayed out(1.2MHz) Method IBW: 15kHz TD-SCDMA: 30 kHz 1xEVDO: 30 kHz DVB-T/H: 39kHz DTMB: 39kHz ISDB-T: 39kHz CMMB: 39kHz LTE: 100 kHz LTETDD: 100 kHz 0
State Saved	Saved in instrument state.
Min	1 Hz
Max	8 MHz
Backwards Compatibility SCPI	[[:SENSe]:ACPower:BWIDth[:RESolution] [:SENSe]:ACP:SWEep:BA NDwidth BWIDth[:RESolution] (PSA W-CDMA, PSA cdma2000 )
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Video BW

Changes the analyzer post-detection filter (VBW).

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :ACPower:BA NDwidth:VIDeo <freq> [ :SENSe ] :ACPower:BA NDwidth:VIDeo? [ :SENSe ] :ACPower:BA NDwidth:VIDeo:AUTO OFF ON 0 1 [ :SENSe ] :ACPower:BA NDwidth:VIDeo:AUTO?

ACP Measurement  
BW

Example	ACP:BAND:VID 1kHz ACP:BAND:VID? ACP:BWID:VID:AUTO ON ACP:BWID:VID:AUTO?
Notes	The values shown in this table reflect the conditions after a Mode Preset.
Preset	SA: 22 kHz WCDMA, WIMAX OFDMA: 1MHz C2K: Method RBW: grayed out(1.2MHz) Method IBW: 150 kHz TD-SCDMA: 300 kHz 1xEVDO: 300kHz DVB-T/H: 390kHz DTMB: 390kHz ISDB-T: 390kHz CMMB: 390kHz LTE: 1MHz LTETDD: 1MHz SA: ON WCDMA:OFF WIMAX OFDMA: OFF TD-SCDMA: OFF DVB-T/H: OFF DTMB: OFF CDMA1xEVDO: OFF ISDB-T: OFF CMMB: OFF LTE: ON LTETDD: ON
State Saved	Saved in instrument state.
Min	1 Hz
Max	50 MHz
Backwards Compatibility SCPI	[:SENSe]:ACPower:BWIDth:VIDeo
Modified at S/W Revision	A.02.00

Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## RBW Control

Accesses a menu that enables you to select the filter bandwidth and type.

Key Path	<b>BW</b>
Initial S/W Revision	Prior to A.02.00

## Filter Type

Selects the type of bandwidth filter that is used. The choices are Gaussian or Flat top.

Key Path	<b>BW, RBW Control</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPower:BAWdwidth:SHAPE GAUSSian FLATtop [ :SENSe] :ACPower:BAWdwidth:SHAPE?
Example	ACP:BAWd:SHAP GAUS ACP:BAWd:SHAP?
Preset	GAUSSian
State Saved	Saved in instrument state.
Range	Gaussian (Normal) Flattop
Backwards Compatibility SCPI	[ :SENSe] :ACPower:BAWdth:SHAPE
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Key Path	<b>BW, RBW Control</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPower:BAWdwidth:TYPE DB3 DB6 [ :SENSe] :ACPower:BAWdwidth:TYPE?

ACP Measurement  
BW

Example	ACP:BAND:TYPE DB3 ACP:BAND:TYPE?
Dependencies	Grayed out when Meas Method is RBW.
Preset	DB3
State Saved	Saved in instrument state.
Range	-3 dB (Normal) -6 dB
Backwards Compatibility SCPI	[:SENSe]:ACPower:BWIDth:TYPE
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

---

## **Cont**

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451 in the section "Common Measurement Functions" for more information.

## **FREQ Channel**

See “[FREQ/Channel](#)” on page 1453 in the section "Common Measurement Functions" for more information.

---

## **Input/Output**

See [“Input/Output” on page 1459](#) in the section "Common Measurement Functions" for more information.

## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Type

Sets the marker control mode to **Normal**, **Delta**, **Fixed** or **Off**. All interactions and dependencies detailed under the key description are enforced when the remote command is sent. If the selected marker is **Off**, pressing **Marker** sets it to **Normal** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **Off**, there is no active function and the active function is turned off.

Key Path	<b>Marker</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?
Example	CALC:ACP:MARK2:MODE DELT CALC:ACP:MARK2:MODE?



Notes	<p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.</p>
Preset	OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Value (Remote Command only)

Sets the marker X axis value in the current marker X Axis Scale unit. This value has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal**, **Delta** or **Fixed**.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <freq> :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X ?
Example	CALC:ACP:MARK3:X 0 CALC:ACP:MARK3:X?
Notes	The query returns the marker's absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker's reference marker if the control mode is <b>Delta</b> . If the marker is <b>Off</b> the response is not a number.
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37

Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00
MIN/MAX/DEF Support	Yes

### Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal**, **Delta** or **Fixed**. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real>  :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?
Example	CALC:ACP:MARK10:X:POS 0 CALC:ACP:MARK10:X:POS?
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points (see "Fractional Trace Points"). If the marker is <b>Off</b> the response is not a number.  When a Marker is turned on, it is placed center of the screen on the trace. Therefore the default value depends on instrument condition, although the Preset/Default is defined as 500 (this value might be expected value when all offset is on).
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00
MIN/MAX/DEF Support	Yes

## Marker Y Axis Value (Remote Command only)

Returns the marker Y axis value in the current marker Y axis unit.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:ACP:MARK11:Y?
Notes	Since the result value is always calculated from acquisition data, the default value is arbitrary. Although the Preset/Default values are defined.
Preset	Result dependent on markers setup and signal source.
State Saved	No
Backwards Compatibility SCPI	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:RESult?
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Properties

Accesses the marker properties menu.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

## Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

## Relative To

Selects the desired marker. The selected marker will be relative to its reference marker.

Key Path	<b>Marker, Properties</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD

ACP Measurement  
Marker

<b>Remote Command</b>	:CALCulate:ACPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :R EFerence <integer>  :CALCulate:ACPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :R EFerence?
Example	CALC:ACP:MARK2:REF 6  CALC:ACP:MARK2:REF?
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."  When queried a single value will be returned (the specified marker numbers relative marker).  You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker Trace

Selects the trace that you want your marker to be placed on. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X Axis Scale of the marker. All markers have an associated trace, even **Fixed** markers; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal or Delta markers.

Key Path	<b>Marker, Properties</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :T RACe 1   2   3  :CALCulate:ACPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :T RACe?
Example	CALC:ACP:MARK2:TRAC 2  CALC:ACP:MARK2:TRAC?

Notes	<p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision.</p>
Couplings	<p>This is not affected by Auto Coupling.</p> <p>Sending the remote command causes the addressed marker to become selected.</p>
Preset	All Markers Off
State Saved	Saved in instrument state.
Range	1 2 3
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Couple Markers

When this function is On, moving any marker causes an equal X axis movement of every other marker which is not **Off**. By “equal X axis movement” we mean that we preserve the difference between each marker's X axis value (in the fundamental x-axis units of the trace that marker is on) and the X axis value of the marker being moved (in the same fundamental x-axis units).

Key Path	<b>Marker</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:ACPower:MARKer:COUPle[:STATe]?
Example	CALC:ACP:MARK:COUP ON
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Marker All Off

Turns all active markers off.

Key Path	<b>Marker</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer:AOff
Example	CALC:ACP:MARK:AOff
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Backward Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker which is off to the on state or 1 puts it in Normal mode and places it at the center of the screen.

Mode	SA, WCDMA, WIMAX OFDMA, C2K, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :S TATe OFF   ON   0   1  :CALCulate:ACPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :S TATe?
Example	CALC:ACP:MARK2:STAT ON CALC:ACP:MARK2:STAT?
Notes	This parameter is also accessed from Marker, Properties, 1 You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELect to set the mode.
Preset	OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

---

## Marker Function

There are no 'Marker Functions' supported in ACP. The front-panel key will display a blank menu key when pressed.

Key Path	Front Panel
Initial S/W Revision	Prior to A.02.00

## Marker To

There is no 'Marker To' functionality supported in ACP. The front-panel key will display a blank menu key when pressed.

Key Path	Front Panel
Initial S/W Revision	Prior to A.02.00



---

## **Meas**

See [“Meas” on page 1575](#) in the section "Common Measurement Functions" for more information.

## Meas Setup

Displays the setup menu for the currently selected measurement. The functions included in the measurement setup menu include setting the parameters for the carriers, offsets, bandwidths, measurement methods and types. This menu also allows you to turn noise correction on and off.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Average/Hold Number

Specifies the number of measurement averages used to calculate the measurement result. The average will be displayed at the end of each sweep. After the specified number of average counts, the average mode (termination control) setting determines the average action.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :ACPower:AVERage:COUNT <integer> [ :SENSe ] :ACPower:AVERage:COUNT? [ :SENSe ] :ACPower:AVERage [ :STATe ] OFF   ON   0   1 [ :SENSe ] :ACPower:AVERage [ :STATe ] ?
Example	ACP:AVER:COUN 250 ACP:AVER:COUN? ACP:AVER OFF ACP:AVER?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Preset	10 ON
State Saved	Saved in instrument state.
Min	1
Max	1000
Backwards Compatibility SCPI	[ :SENSe ] :ACPR:AVERage:COUNT [ :SENSe ] :MCPower:AVERage:COUNT (PSA Power Suite, PSA W-CDMA, PSA cdma2000 )
Modified at S/W Revision	A.02.00

Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Avg Mode

Enables you to set the averaging mode. This determines the averaging action after the specified number of data acquisitions (average count) is reached.

When set to Exponential (Exp) the measurement averaging continues using the specified number of averages to compute each averaged value. The average will be displayed at the end of each sweep.

When set to Repeat, the measurement resets the average counter each time the specified number of averages is reached.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE ] :ACPower:AVERage:TCONtrol EXPonential   REPEAT [ :SENSE ] :ACPower:AVERage:TCONtrol?
Example	ACP:AVER:TCON EXP ACP:AVER:TCON?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Preset	EXponential
State Saved	Saved in instrument state.
Range	Exp Repeat
Backwards Compatibility SCPI	[ :SENSe ] :ACPR:AVERage:TCONtrol
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Carrier Setup

Accesses a menu that contains Carriers, Ref Carrier, Ref Car Freq, Ref Car Pwr and Configure Carriers.

Key Path	Meas Setup
Initial S/W Revision	Prior to A.02.00

## Carriers

Specifies the number of carriers to be measured.

Key Path	<b>Meas Setup, Carrier Setup, Configure Carriers</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :ACPowEr:CARRier[1]   2:COUNT <integer> [ :SENSe ] :ACPowEr:CARRier[1]   2:COUNT?
Example	ACP:CARR:COUN 1 ACP:CARR:COUN?
Notes	Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. Note that Carrier sub op code 2 is supported only in Non-SA modes. In the SA mode, Carrier sub op code 1 is used for both BTS and MS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Dependencies	When Number of Carriers is 1, Ref Carrier is grayed out.
Couplings	Changing this parameter might affect to the Span. .
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	12
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Ref Carrier

Sets the reference carrier. Relative power measurements are made from the reference carrier.

If set to Auto, the measurement selects the carrier with the highest power as the reference carrier and the Ref Carrier parameter is updated. If a value is entered when Ref Carrier Mode is set to Auto, the mode changes to Man.

If set to Man, the value that you enter for the Ref Carrier is used as the reference carrier.

Key Path	<b>Meas Setup, Carrier Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD

<b>Remote Command</b>	<pre>[ :SENSe]:ACPower:CARRier[1]  2:RCARrier &lt;integer&gt; [ :SENSe]:ACPower:CARRier[1]  2:RCARrier? [ :SENSe]:ACPower:CARRier[1]  2:RCARrier:AUTO OFF ON 0 1 [ :SENSe]:ACPower:CARRier[1]  2:RCARrier:AUTO?</pre>
Example	<pre>ACP:CARR:RCAR 1 ACP:CARR:RCAR? ACP:CARR:RCAR:AUTO OFF ACP:CARR:RCAR:AUTO?</pre>
Notes	<p>Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>Note that Carrier sub op code 2 is supported only in Non-SA modes.</p> <p>In the SA mode, Carrier sub op code 1 is used for both BTS and MS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.</p>
Dependencies	If there is only one carrier, this key will be grayed out.
Couplings	<p>If you enter a carrier value that is currently configured as having no power present, that carrier will be changed to having power present.</p> <p>If you enter a ref carrier this parameter will be set to manual.</p>
Preset	Auto determined
State Saved	Saved in instrument state.
Min	1
Max	Number of available carriers
Backwards Compatibility SCPI	[ :SENSe]:MCPower:RCARrier[1] 2 (PSA Power Suite)
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Ref Car Freq

Sets the reference carrier frequency.

Key Path	<b>Meas Setup, Carrier Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD

ACP Measurement  
Meas Setup

<b>Remote Command</b>	<pre>[ :SENSe]:ACPower:CARRier[1] 2:RCFRequency &lt;freq&gt; [ :SENSe]:ACPower:CARRier[1] 2:RCFRequency? [ :SENSe]:ACPower:CARRier[1] 2:RCFRequency:AUTO OFF ON 0 1 [ :SENSe]:ACPower:CARRier[1] 2:RCFRequency:AUTO?</pre>
<b>Example</b>	<pre>ACP:CARR:RCFR 250 MHz ACP:CARR:RCFR? ACP:CARR:RCFR:AUTO OFF ACP:CARR:RCFR:AUTO?</pre>
<b>Notes</b>	<p>Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>Note that Carrier sub op code 2 is supported only in Non-SA modes.</p> <p>In the SA mode, Carrier sub op code 1 is used for both BTS and MS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.</p>
<b>Couplings</b>	<p>Coupled to the Center Frequency.</p> <p>If the center frequency changes, the Ref Carrier Frequency is calculated using the following three steps;</p> $\text{Ref Freq1} = \text{Ctr Freq} - (\text{Total of all Carrier Widths} / 2)$ $\text{Ref Freq2} = \text{Ref Freq1} + (\text{Total of all Carrier Widths up to Ref Carrier})$ $\text{Ref Freq} = \text{Ref Freq2} + (0.5 * \text{Carrier Width of Ref Carrier})$ <p>If reference carrier frequency changes the Center Frequency is calculated using the following three steps;</p> $\text{Ctr Freq1} = \text{Ref Freq} - (0.5 * \text{Carrier Width of Ref Carrier})$ $\text{Ctr Freq2} = \text{Ctr Freq1} - (\text{Total of all Carrier Widths up to Ref Carrier})$ $\text{Ctr Freq} = \text{Ctr Freq2} + (\text{Total of all Carrier Widths} / 2)$ <p>This ensures that the carriers are always centered on the screen.</p> <p>If there is only one carrier present the Reference Carrier Frequency will be the same as the Center Frequency.</p>
<b>Preset</b>	<p>Calculated based on the current Center Frequency</p>
<b>State Saved</b>	<p>Saved in instrument state.</p>
<b>Min</b>	<p>-79.999995 MHz</p>
<b>Max</b>	<p>Hardware Dependent:</p> <p>Option 503 = 3.699999995 GHz</p> <p>Option 508 = 8.499999995 GHz</p> <p>Option 513 = 13.799999995 GHz</p> <p>Option 526 = 26.999999995 GHz</p>

Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Power Ref

Sets the power reference in the carrier that will be used to compute the relative values for the offsets.

Key Path	<b>Meas Setup, Carrier Setup</b>
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

### Total Power

Sets the multi-carrier power reference.

When set to Auto, the carrier power result reflects the measured power value in the selected reference carrier .

When set to Man, the result is referenced to the last measured value, or you may specify the reference for the multi-carrier power measurement. Relative values are displayed, referenced to the “Power Reference” value.

Key Path	<b>Meas Setup, Carrier Setup, Power Ref</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[:SENSe]:ACPower:CARRier[1] 2[:POWER] <real> [:SENSe]:ACPower:CARRier[1] 2[:POWER]? [:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATe] OFF ON 0 1 [:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATe]?
Example	ACP:CARR 10 ACP:CARR? ACP:CARR:AUTO OFF ACP:CARR:AUTO?

ACP Measurement  
Meas Setup

Notes	<p>Although the default value is defined, the value is recalculated by the measurement result just after measurement.</p> <p>Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>Note that Carrier sub op code 2 is supported only in Non-SA modes.</p> <p>In the SA mode, Carrier sub op code 1 is used for both BTS and MS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SELEct to set the mode.</p>
Dependencies	<p>This key is available only when the Meas Type is TPRef.</p> <p>If the Meas Type is not TPRef, this key is grayed out.</p>
Preset	<p>0.0</p> <p>ON</p>
State Saved	Saved in instrument state.
Min	-200 dBm
Max	200 dBm
Backwards Compatibility SCPI	[:SENSE]:MCPower:CARRier[1]2[:POWER]
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

**PSD**

Sets the power spectral density in the carrier (main channel) that is used to compute the relative power spectral density values for the offsets when Meas Type is set to PSD Ref. When the PSD Ref state is set to Auto, this will be set to the measured carrier power spectral density.

Key Path	<b>Meas Setup, Carrier Setup, Power Ref</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	<pre>[:SENSE]:ACPower:CARRier[1] 2:CPSD &lt;real&gt; [:SENSE]:ACPower:CARRier[1] 2:CPSD?</pre>
Example	<pre>ACP:CARR:CPSD 25 ACP:CARR:CPSD?</pre>



Notes	<p>Although the default value is defined, the value is recalculated by the measurement result just after measurement.</p> <p>Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>Note that Carrier sub op code 2 is supported only in Non-SA modes.</p> <p>In the SA mode, Carrier sub op code 1 is used for both BTS and MS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.</p>
Dependencies	This key is available only when the Meas Type is PSDRef. If the Meas Type is not PSDRef, this key is grayed out.
Couplings	The value of PSD is automatically converted when PSD Unit is changed.
Preset	0.0
State Saved	Saved in instrument state.
Min	-999
Max	999
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

### Configure Carriers

Accesses a menu that contains Carrier, Carrier Pwr Present, Carrier Width and Carrier Integ BW parameters.

Key Path	<b>Meas Setup, Carrier Setup</b>
Initial S/W Revision	Prior to A.02.00

### Carrier

Selects the carrier to configure for the current measurement.

Key Path	<b>Meas Setup, Carrier Setup, Configure Carriers</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Couplings	Max value is the number of available carriers, so this value might change when the number of carriers is changed.
Preset	1
State Saved	No
Min	1

ACP Measurement  
Meas Setup

Max	Number of available carriers
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Carrier Coupling**

Couples carrier settings to carrier #1. The coupled parameters are Carrier Power Present, Carrier Spacing, Measurement Noise Bandwidth, Method and Filter Alpha.

Key Path	<b>Meas Setup, Carrier Setup, Configure Carriers</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:ACPpower:CARRier[1]   2:LIST:COUPle OFF ON 0 1, ... [ :SENSE]:ACPpower:CARRier[1]   2:LIST:COUPle?
Example	ACP:CARR:LIST:COUP OFF ACP:CARR:LIST:COUP?
Notes	Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. Note that Carrier sub op code 2 is supported only in Non-SA modes. In the SA mode, Carrier sub op code 1 is used for both BTS and MS. You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SElect to set the mode.
Couplings	When Couple is selected, the carrier settings are coupled to carrier #1. Coupled parameters are Carrier Power Present, Carrier Spacing, Measurement Noise Bandwidth, Method and Filter Alpha. When a setting is changed, the couple is set to Man automatically. Carrier #1 is always set to couple and cannot be changed. Couple/Man selection on the Carrier key is not displayed when selected carrier number is #1.
Preset	ON
State Saved	Saved in instrument state.
Range	Couple Man
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Carrier Pwr Present**

Configures the carriers for this measurement. It allows spaces to be inserted between carriers. Carriers

with the power present parameter set to Yes are carriers, and those with the power present parameter set to No are spaces. Each carrier power present is set to Yes or No. The individual carriers can be set by selecting the desired carrier on the carrier menu key using the up down arrows, the knob, or numeric keypad, then toggling the carrier power present using the carrier power present menu key.

The query for this parameter returns the current values for all of the carriers. If a carrier is defined as having no power present, the power displayed will be relative to the reference carrier, otherwise the absolute power will be displayed.

If you change the carrier power present to no and that carrier is currently configured as the reference carrier, the next carrier to the left (or the right if there are no carriers to the left) will be assigned as the reference carrier. This also applies to the scenario where there are only two carriers configured as having power present and you configure only one carrier to have no power present.

Key Path	<b>Meas Setup, Carrier Setup, Configure Carriers</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :ACPpower:CARRier [ 1 ]   2 :LIST:PPResent YES NO, ... [ :SENSe ] :ACPpower:CARRier [ 1 ]   2 :LIST:PPResent?
Example	ACP:CARR2:LIST:PPR YES ACP:CARR2:LIST:PPR?
Notes	Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. Note that Carrier sub op code 2 is supported only in Non-SA modes. In the SA mode, Carrier sub op code 1 is used for both BTS and MS. When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, therefore if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored.
Dependencies	If there is only one carrier, this key will be grayed out.
Couplings	Coupled to the number of carriers. When the SCPI command is sent, the number of carriers will be set to the number of entries in the parameter list.
Preset	YES
State Saved	Saved in instrument state.
Range	Yes No
Backwards Compatibility SCPI	[ :SENSe ] :MCPower:CARRier [ 1 ]   2 :LIST:PPResent (PSA Power Suite)
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Carrier Spacing

Sets the width of the carrier spacing. This will be the value applied to all the current slots, whether they are carriers or spaces.

Enter each carrier spacing value individually by selecting the desired carrier on the carrier menu key using the up down arrows, the knob, or the numeric keypad, then enter the carrier width using the carrier spacing menu key.

Key Path	<b>Meas Setup, Carrier Setup, Configure Carriers</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSe]:ACPower:CARRier[1]   2:LIST:WIDTh <bandwidth>, ... [ :SENSe]:ACPower:CARRier[1]   2:LIST:WIDTh?
Example	ACP:CARR2:LIST:WIDT 25kHz ACP:CARR2:LIST:WIDT?
Notes	Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. Note that Carrier sub op code 2 is supported only in Non-SA modes. In the SA mode, Carrier sub op code 1 is used for both BTS and MS. When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, therefore if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELect to set the mode.
Couplings	Coupled to the number of carriers. When the SCPI command is sent, the number of carriers will be set to the number of entries in the parameter list. Changing Carrier Spacing might affect the Span.
Preset	SA, WCDMA: 5 MHz WIMAX OFDMA: 10MHz C2K: 1.25MHz 1xEVDO: 1.25MHz TD-SCDMA: 1.6MHz DVB-T/H: 8MHz DTMB: 8MHz ISDB-T: 6MHz CMMB: 8MHz LTE: 5 MHz LTETDD: 5 MHz

State Saved	Saved in instrument state.
Min	0 Hz
Max	1 GHz
Backwards Compatibility SCPI	[[:SENSe]:MCPower:CARRier[1]]2:LIST:WIDTh (PSA Power Suite)
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Measurement Noise Bandwidth

Specifies the Measurement Noise Bandwidth used to calculate the power in the carriers.

Each Measurement Noise Bandwidth value is entered individually by selecting the desired carrier on the carrier menu key using the up down arrows, the knob, or the numeric keypad. Then enter the measurement noise bandwidth using the measurement noise bandwidth softkey.

Key Path	<b>Meas Setup, Carrier Setup, Configure Carriers</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[[:SENSe]:ACPower:CARRier[1] 2:LIST:BANDwidth[:INTEgrati on] <freq>, ... [:SENSe]:ACPower:CARRier[1] 2:LIST:BANDwidth[:INTEgrati on]?
Example	ACP:CARR2:LIST:BAND 25kHz ACP:CARR2:LIST:BAND?
Notes	In the WCDMA mode, the preset/default value is defined as 3.84 MHz. But internally, 4.6848 MHz is used as the default value. Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. Note that Carrier sub op code 2 is supported only in Non-SA modes. In the SA mode, Carrier sub op code 1 is used for both BTS and MS. When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, therefore if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELect to set the mode.
Couplings	Coupled to the number of carriers. When the SCPI command is sent, the number of carriers is set to the number of entries in the parameter list.

ACP Measurement  
Meas Setup

Preset	SA: 2 MHz WCDMA: 3.84 MHz WIMAX OFDMA: 10MHz C2K: 1.23MHz TD-SCDMA: 1.28MHz 1xEVDO: 1.23MHz DVB-T/H: 7.61MHz DTMB: 7.56MHz ISDB-T: 5.6MHz CMMB: 7.512MHz LTE, LTETDD: 4.515 MHz 4.5MHz
State Saved	Saved in instrument state.
Min	10 Hz
Max	1 GHz
Backwards Compatibility SCPI	[ :SENSe]:ACPower:BANDwidth:INTegration [ :SENSe]:ACPower:BWIDth:INTegration [ :SENSe]:ACPower:CARRier[1] 2:LIST:BWIDth[:INTegration] [ :SENSe]:MCPower:CARRier[1] 2:LIST:BANDwidth[:INTegration] (PSA Power Suite) [ :SENSe]:MCPower:CARRier[1] 2:LIST:BWIDth[:INTegration] (PSA Power Suite)
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Method for Carrier**

Accesses the carrier configuration method settings.

Key Path	<b>Meas Setup, Carrier Setup, Configure Carriers</b>
Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSe]:ACPower:CARRier[1] 2:LIST:FILTer[:RRC][ :STATe] ON OFF 1 0, ... [ :SENSe]:ACPower:CARRier[1] 2:LIST:FILTer[:RRC][ :STATe] ?

Example	ACP:CARR:LIST:FILT 0,0,0,0 ACP:CARR:LIST:FILT?
Notes	The binary values translate as follows: 1 ON = RRC Weighted 0 OFF = Integ BW Maximum of Array length depends on the number of carriers. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Preset	SA, LTE, LTETDD: OFF WCDMA: ON WIMAX OFDMA: OFF TD-SCDMA: ON DVB-T/H: OFF DTMB: ON ISDB-T, CMMB: OFF
State Saved	Saved in instrument state.
Range	IntegBW RRC Weight
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Filter Alpha for Carrier

Inputs the alpha value for the filter used in the current carrier configuration.

Key Path	<b>Meas Setup, Carrier Setup, Configure Carriers, Method, RRC Weighted</b>
Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :ACPpower:CARRier[1]  2:LIST:FILTer:ALPHa <real>, ... [ :SENSE] :ACPpower:CARRier[1]  2:LIST:FILTer:ALPHa?
Example	ACP:CARR2:LIST:FILT:ALPH 0.5 ACP:CARR2:LIST:FILT:ALPH?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.

ACP Measurement  
**Meas Setup**

Preset	0.22 C2K: No DTMB: 0.05
State Saved	Saved in instrument state.
Min	0.01
Max	1.0
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Offset/Limits**

Accesses a menu of functions that contains Offset, Offset Freq/Offset To Edge, Offset Integ BW, Upper Offset Limit and Lower Offset parameters.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

**Select Offset**

Selects the offset to configure.

Key Path	<b>Meas Setup, Offset/Limits, Limits</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Preset	A
State Saved	Saved in instrument state.
Range	Offset A Offset B Offset C Offset D Offset E Offset F
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Offset Freq**

This parameter determines the frequency difference between the center of the main channel and the center of the carrier.

Each Offset Freq state value is entered individually by selecting the desired carrier on the carrier menu key using the up down arrows, RPG or numeric keypad. Then enter the Offset Freq State using the Offset Frequency softkey.



The list contains up to six (6) entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with the [:SENSe]:ACP:OFFSet:LIST:STATe command

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz and will cause it to be removed from the results screen.

Key Path	Meas Setup, Offset/Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	<pre>[:SENSe]:ACP:Power:OFFSet [1]   2:LIST[:FREQuency] &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;  [:SENSe]:ACP:Power:OFFSet [1]   2:LIST[:FREQuency]?  [:SENSe]:ACP:Power:OFFSet [1]   2:LIST:STATe OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1  [:SENSe]:ACP:Power:OFFSet [1]   2:LIST:STATe?</pre>
Example	<pre>ACP:OFFS1:LIST 0,0,0,0,0,0 ACP:OFFS1:LIST? ACP:OFFS2:LIST:STAT 1,1,0,0,0,0 ACP:OFFS2:LIST:STAT?</pre>
Notes	<p>The label for this menu key will change depending on the currently selected radio standard or mode. For cdma2000 the label for the menu key will be Offset to Edge. For all other supported standards the label will be Offset Freq.</p> <p>When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored.</p> <p>Offset sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>Note that Offset sub op code 2 is supported only in Non-SA modes.</p> <p>In the SA mode, Offset sub op code 1 is used for both BTS and MS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.</p>
Couplings	Changing Offset Frequency might affect the Span. See the Span key section for details.

ACP Measurement  
Meas Setup

Preset	<p>SA: 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</p> <p>WCDMA: 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</p> <p>WIMAX OFDMA: 10MHz, 20MHz, 0Hz, 0Hz, 0Hz, 0Hz  10MHz, 20MHz, 0Hz, 0Hz, 0Hz, 0Hz</p> <p>C2K:750KHz, 1.980MHz, 0Hz, 0Hz, 0Hz, 0Hz  885KHz, 1.980MHz, 0Hz, 0Hz, 0Hz, 0Hz</p> <p>TD-SCDMA: 1.6 MHz, 3.2 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 1.6 MHz, 3.2 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</p> <p>1xEVDO: 765KHz, 1.995MHz, 3.125MHz, 4.000MHz, 7.500MHz, 7.500MHz 765KHz, 1.995MHz, 3.125MHz, 4.000MHz, 7.500MHz, 7.500MHz</p> <p>DVB-T/H: 8MHz, 16MHz, 0Hz, 0Hz, 0Hz, 0Hz  8MHz, 16MHz, 0Hz, 0Hz, 0Hz, 0Hz</p> <p>DTMB: 8MHz, 16MHz, 24MHz, 32MHz, 0Hz, 0Hz  8MHz, 16MHz, 24MHz, 32MHz, 0Hz, 0Hz</p> <p>ISDB-T: 6MHz, 12MHz, 0Hz, 0Hz, 0Hz, 0Hz  6MHz, 12MHz, 0Hz, 0Hz, 0Hz, 0Hz</p> <p>CMMB: 8MHz, 16MHz, 24MHz, 32MHz, 0Hz, 0Hz  8MHz, 16MHz, 24MHz, 32MHz, 0Hz, 0Hz</p> <p>LTE, LTETDD: 5 MHz,10MHz,0,0,0,0 5 MHz,10MHz,0,0,0,0</p> <p>SA: ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</p> <p>WCDMA: ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>WIMAX OFDMA: ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>TD-SCDMA: ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>DVB-T/H: ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>DTMB: ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>CDMA1xEVDO: ON,ON,OFF,OFF,OFF,OFF  ON,ON,OFF,OFF,OFF,OFF</p> <p>ISDB-T: ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>CMMB: ON, ON, ON, ON, OFF, OFF ON, ON, ON, ON, OFF, OFF</p> <p>LTE, LTETDD: ON, ON, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</p>
State Saved	Saved in instrument state.
Min	0 Hz
Max	500 MHz
Backwards Compatibility SCPI	[[:SENSe]:MCPower:OFFSet[1]]2:LIST[:FREQuency] (PSA Power Suite)
Modified at S/W Revision	A.02.00

Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Integ BW

Sets the Integration Bandwidth for the offsets. If there is more than one bandwidth, the list must contain six (6) entries. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by [:SENSe]:ACP:OFFSet[n]:LIST[:FREQUency].

Enter each value individually by selecting the desired offset on the offset menu key using the up down arrows, the knob, or the numeric keypad, then enter the Offset Integration Bandwidth using the Offset Integration Bandwidth menu key.

You can turn off (not use) specific offsets with the [:SENSe]:ACP:OFFSet[n]:LIST:STATe command."

Key Path	Meas Setup, Offset/Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[:SENSe]:ACP:OFFSet[1] 2:LIST:BANDwidth[:INTEgratio n] <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>  [:SENSe]:ACP:OFFSet[1] 2:LIST:BANDwidth[:INTEgratio n]?
Example	ACP:OFFS2:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz ACP:OFFS2:LIST:BAND?
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted i.e. if you want to change values 2 you must send all values up to 2. Subsequent values will remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored.  Offset sub op code. 1 for BTS, 2 for MS. Default is BTS.  Note that Offset sub op code 2 is supported only in Non-SA modes.  In the SA mode, Offset sub op code 1 is used for both BTS and MS.  You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Couplings	Changing Integ BW might affect to the Span. See Span section for details.

ACP Measurement  
Meas Setup

Preset	<p>SA: 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz</p> <p>WCDMA: 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz</p> <p>WIMAX OFDMA: 10MHz, 10MHz, 10MHz, 10MHz, 10MHz, 10MHz 10MHz, 10MHz, 10MHz, 10MHz, 10MHz, 10MHz</p> <p>C2K: 30KHz, 30KHz, 30KHz, 30KHz, 30KHz, 30KHz 30KHz, 30KHz, 30KHz, 30KHz, 30KHz, 30KHz</p> <p>TD-SCDMA: 1.28 MHz, 1.28 MHz, 1.28 MHz, 1.28 MHz, 1.28 MHz, 1.28 MHz</p> <p>1xEVDO: C2K: 30KHz, 30KHz, 30KHz, 30KHz, 30KHz, 30KHz 30KHz, 30KHz, 30KHz, 30KHz, 30KHz, 30KHz</p> <p>DVB-T/H: 7.61MHz, 7.61MHz, 7.61MHz, 7.61MHz, 7.61MHz, 7.61MHz 7.61MHz, 7.61MHz, 7.61MHz, 7.61MHz, 7.61MHz, 7.61MHz</p> <p>DTMB: 7.56MHz, 7.56MHz, 7.56MHz, 7.56MHz, 7.56MHz, 7.56MHz 7.56MHz, 7.56MHz, 7.56MHz, 7.56MHz, 7.56MHz, 7.56MHz</p> <p>ISDB-T: 5.6MHz, 5.6MHz, 5.6MHz, 5.6MHz, 5.6MHz, 5.6MHz 5.6MHz, 5.6MHz, 5.6MHz, 5.6MHz, 5.6MHz</p> <p>CMMB: 7.512MHz, 7.512MHz, 7.512MHz, 7.512MHz, 7.512MHz, 7.512MHz 7.512MHz, 7.512MHz, 7.512MHz, 7.512MHz, 7.512MHz, 7.512MHz</p> <p>LTE, LTETDD: 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz</p>
State Saved	Saved in instrument state.
Min	10 Hz
Max	1 GHz
Backwards Compatibility SCPI	<p>[[:SENSe]:ACPower:OFFSet[1]]2:LIST:BWIDth[:INTegration]</p> <p>[[:SENSe]:ACPR:OFFSet[1]]2:LIST:BANDwidth</p> <p>[[:SENSe]:ACPR:OFFSet[1]]2:LIST:BWIDth</p> <p>[[:SENSe]:MCPower:OFFSet[1]]2:LIST:BANDwidth[:INTegration] (PSA Power Suite)</p> <p>[[:SENSe]:MCPower:OFFSet[1]]2:LIST:BWIDth[:INTegration] (PSA Power Suite)</p>
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Offset BW

Accesses the offset bandwidth menu.

Key Path	<b>Meas Setup, Offset/Limits</b>
Initial S/W Revision	Prior to A.02.00

### Res BW

Sets the resolution bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Key Path	Meas Setup, Offset/Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	<pre>[ :SENSe] :ACPower:OFFSet [1]   2 :LIST: BANDwidth: RESolution &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;  [ :SENSe] :ACPower:OFFSet [1]   2 :LIST: BANDwidth: RESolution?  [ :SENSe] :ACPower:OFFSet [1]   2 :LIST: BANDwidth: RESolution: AUTO ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0  [ :SENSe] :ACPower:OFFSet [1]   2 :LIST: BANDwidth: RESolution: AUTO?</pre>
Example	<pre>ACP:OFFS2:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz  ACP:OFFS2:LIST:BAND:RES?  ACP:OFFS2:LIST:BAND:RES:AUTO 1,1,1,1,1,1  ACP:OFFS2:LIST:BAND:RES:AUTO?</pre>
Notes	<p>This key is available only in the IBW mode.</p> <p>Offset sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>Note that Offset sub op code 2 is supported only in Non-SA modes.</p> <p>In the SA mode, Offset sub op code 1 is used for both BTS and MS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.</p>
Couplings	When Res BW Mode is AUTO, this value is exactly same as Res BW under BW key. And when this value is changed by user, Res BW Mode is also changed to Man.

ACP Measurement  
Meas Setup

Preset	SA: 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz WCDMA: 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz WIMAX OFDMA: 100KHz, 100KHz, 100KHz, 100KHz, 100KHz, 100KHz C2K: Method:RBW 30K Method: IBW C2K: 15KHz, 15KHz, 15KHz, 15KHz,15KHz, 15KHz 15KHz, 15KHz, 15KHz, 15KHz,15KHz, 15KHz TD-SCDMA: 30 kHz, 30 kHz, 30 kHz, 30 kHz, 30 kHz, 30 kHz 1xEVDO: 3KHz, 30KHz, 30KHz, 30KHz,30KHz, 30KHz  3KHz, 30KHz, 30KHz, 30KHz,30KHz, 30KHz DVB-T/H: 39KHz, 39KHz, 39KHz, 39KHz,39KHz, 39KHz 39KHz, 39KHz, 39KHz, 39KHz, 39KHz, 39KHz DTMB: 39KHz, 39KHz, 39KHz, 39KHz,39KHz, 39KHz 39KHz, 39KHz, 39KHz, 39KHz, 39KHz, 39KHz ISDB-T: 39KHz, 39KHz, 39KHz, 39KHz,39KHz, 39KHz 39KHz, 39KHz, 39KHz, 39KHz, 39KHz, 39KHz CMMB: 39KHz, 39KHz, 39KHz, 39KHz,39KHz, 39KHz 39KHz, 39KHz, 39KHz, 39KHz, 39KHz, 39KHz LTE, LTETDD: 100kHz,100kHz,100kHz,100kHz,100kHz,100kHz 100kHz,100kHz,100kHz,1 00kHz,100kHz,100kHz 1, 1, 1, 1, 1, 1
State Saved	Saved in instrument state.
Min	1 Hz
Max	8 MHz
Backwards Compatibility SCPI	[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:RESolution
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Video BW**

Enables you to change the analyzer post-detection filter (VBW).

Key Path	<b>Meas Setup, Offset/Limits, Offset BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD

<b>Remote Command</b>	<pre>[ :SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:VIDeo &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;  [:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:VIDeo?  [:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1  [:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:VIDeo:AUTO?</pre>
<b>Example</b>	<pre>ACP:OFFS2:LIST:BAND:VID 5MHz,5MHz,5MHz,5MHz,5MHz,5MHz ACP:OFFS2:LIST:BAND:VID? ACP:OFFS2:LIST:BAND:VID:AUTO 0,0,0,0,1,1 ACP:OFFS2:LIST:BAND:VID:AUTO?</pre>
<b>Notes</b>	<p>The values shown in this table reflect the conditions after a Mode Preset.</p> <p>Offset sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>Note that Offset sub op code 2 is supported only in Non-SA modes.</p> <p>In the SA mode, Offset sub op code 1 is used for both BTS and MS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.</p>
<b>Preset</b>	<pre>SA: 22kHz, 22kHz, 22kHz, 22kHz, 22kHz, 22kHz WCDMA, WIMAX OFDMA: 1MHz, 1MHz, 1MHz, 1MHz, 1MHz, 1MHz C2K: 150KHz, 150KHz, 150KHz, 150KHz, 150KHz, 150KHz  150KHz, 150KHz, 150KHz, 150KHz, 150KHz TD-SCDMA: 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz 1xEVDO: 30KHz, 300KHz, 300KHz, 300KHz, 300KHz, 300KHz   30KHz, 300KHz, 300KHz, 300KHz, 300KHz DVB-T/H: 390KHz, 390KHz, 390KHz, 390KHz,390KHz, 390KHz 390KHz, 390KHz, 390KHz, 390KHz, 390KHz DTMB: 390KHz, 390KHz, 390KHz, 390KHz,390KHz, 390KHz 390KHz, 390KHz, 390KHz, 390KHz, 390KHz ISDB-T: 390KHz, 390KHz, 390KHz, 390KHz,390KHz, 390KHz 390KHz, 390KHz, 390KHz, 390KHz, 390KHz CMMB: 390KHz, 390KHz, 390KHz, 390KHz,390KHz, 390KHz 390KHz, 390KHz, 390KHz, 390KHz, 390KHz LTE, LTETDD: 1MHz,1MHz,1MHz,1MHz,1MHz,1MHz ON, ON, ON, ON, ON, ON</pre>
<b>State Saved</b>	Saved in instrument state.
<b>Min</b>	1 Hz
<b>Max</b>	50 MHz
<b>Backwards Compatibility SCPI</b>	[:SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:VIDeo

ACP Measurement  
Meas Setup

Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**RBW Control**

Accesses the resolution bandwidth control menu.

Key Path	<b>Meas Setup, Offset/Limits, Offset BW</b>
Initial S/W Revision	Prior to A.02.00

**Filter Type**

Selects the type of bandwidth filter that is used.

Key Path	<b>Meas Setup, Offset/Limits, Offset BW, RBW Control</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :ACPower:OFFSet [ 1 ]   2 :LIST:BAWdwidth:SHAPE GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop [ :SENSe ] :ACPower:OFFSet [ 1 ]   2 :LIST:BAWdwidth:SHAPE?
Example	ACP:OFFS2:LIST:BAWd:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS ACP:OFFS2:LIST:BAWd:SHAP?
Notes	Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. Note that Offset sub op code 2 is supported only in Non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	See the description above
Preset	GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian
State Saved	Saved in instrument state.
Range	GAUSSian FLATtop
Backwards Compatibility SCPI	[ :SENSe ] :ACPower:OFFSet [ 1 ]   2 :LIST:BAWIDth:SHAPE
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00



### Filter BW

Selects a Gaussian filter based on its -3 dB (Normal) bandwidth or its -6 dB bandwidth.

Key Path	<b>Meas Setup, Offset/Limits, Offset BW, RBW Control</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPpower:OFFSet [1]   2 :LIST:BAWdwidth:TYPE DB3  DB6, DB3  DB6, DB3  DB6, DB3  DB6, DB3  DB6, DB3  DB6 [ :SENSe] :ACPpower:OFFSet [1]   2 :LIST:BAWdwidth:TYPE?
Example	ACP:OFFS2:LIST:BAWd:TYPE DB3,DB3,DB3,DB3,DB3,DB3 ACP:OFFS2:LIST:BAWd:TYPE?
Notes	Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. Note that Offset sub op code 2 is supported only in Non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Dependencies	Grayed out unless the Gaussian filter type is selected
Preset	DB3, DB3, DB3, DB3, DB3, DB3
State Saved	Saved in instrument state.
Range	-3 dB (Normal)  -6 dB
Backwards Compatibility SCPI	[ :SENSe]:ACPpower:OFFSet[1] 2:LIST:BAWdth:TYPE
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Limits

Limits key accesses a menu of functions that contains Select Offset, Abs Limit, Rel Limit and Fail Mask parameters.

Key Path	<b>Meas Setup, Offset/Limits</b>
Initial S/W Revision	A.03.00

### Abs Limit

Enters an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain six (6) entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. [:SENSe]:ACP:OFFSet[n]:LIST:TEST selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the [:SENSe]:ACP:OFFSet[n]:LIST:STATe command.

ACP Measurement  
Meas Setup

The query returns the six (6) sets of real numbers that are the current absolute amplitude test limits.

Key Path	Meas Setup, Offset/Limits, Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSE]:ACPower:OFFSet [1]   2:LIST:ABSolute <real>, <real>, <real>, <real>, <real> [ :SENSE]:ACPower:OFFSet [1]   2:LIST:ABSolute?
Example	ACP:OFFS2:LIST:ABS -10,-10,-10,-10,-10,-10 ACP:OFFS2:LIST:ABS?
Notes	Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. Note that Offset sub op code 2 is supported only in Non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	None If current mode is DTMB or CMMB and current device type is Transmitter, the value from position 2 to position 4 are coupled, changing any one will change the others.
Preset	SA: 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm WCDMA: 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm C2K: 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm WIMAX OFDMA: 50,50,50,50,50,50 TD-SCDMA: 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 1xEVDO: -27dBm, -27dBm, -13dBm, -13dBm, -13dBm, -13dBm -27dBm, -27dBm, -13dBm, -13dBm, -13dBm, -13dBm DVB-T/H: 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm DTMB: 11.14 dBm, 11.14dBm, 11.14 dBm, 11.14 dBm, 50 dBm, 50 dBm 11.14 dBm, 11.14 dBm, 11.14 dBm, 11.14 dBm, 50 dBm, 50 dBm ISDB-T: 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm CMMB: 11.14 dBm, 11.14dBm, 11.14 dBm, 11.14 dBm, 50 dBm, 50 dBm 11.14 dBm, 11.14 dBm, 11.14 dBm, 11.14 dBm, 50 dBm, 50 dBm LTE, LTETDD: -8.45,-8.45,-8.45,-8.45,-8.45,-8.45 -50.0,-50.0,-50.0,-50.0,-50.0,-50.0

State Saved	Saved in instrument state.
Min	-200.0 dBm
Max	50.0 dBm
Backwards Compatibility SCPI	[[:SENSe]:ACPR:OFFSet[1] 2:LIST:ABSolute (PSA W-CDMA, PSA cdma2000 )  [:SENSe]:MCPower:OFFSet[1] 2:LIST:ABSolute (PSA W-CDMA)
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Rel Lim (Car)

Enters a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains six (6) entries. The offset closest to the carrier channel is the first one in the list.

[[:SENSe]:ACP:OFFSet:LIST:TEST selects the type of testing to be done at each offset.

[[:SENSe]:ACP:OFFSet[n]:LIST[n]:TEST selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the [[:SENSe]:ACP:OFFSet[n]:LIST[n]:STATe command.

The query returns the six (6) sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n=1 is base station and 2 is mobiles. The default is base station (1).

Key Path	<b>Meas Setup, Offset/Limits, Limits,</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[[:SENSe]:ACPower:OFFSet[1] 2:LIST:RCARrier <real>, <real>, <real>, <real>, <real>  [:SENSe]:ACPower:OFFSet[1] 2:LIST:RCARrier?
Example	ACP:OFFS2:LIST:RCAR 0,0,0,0,0 ACP:OFFS2:LIST:RCAR?
Notes	Offset sub op code. 1 for BTS, 2 for MS. Default is BTS.  Note that Offset sub op code 2 is supported only in Non-SA modes.  In the SA mode, Offset sub op code 1 is used for both BTS and MS.  You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.

ACP Measurement  
Meas Setup

Couplings	None If current mode is DTMB or CMMB and current device type is Transmitter, the value from position 2 to position 4 are coupled, changing any one will change the others.
Preset	SA: -45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0 WCDMA: -44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2 C2K: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0 WIMAX OFDMA: -50,-60,0,0,0,0 TD-SCDMA: -40, -45, -45, -45, -45, -45 -33, -43, -43, -43, -43, -43 1xEVDO: -45, -55, -55, -55, -55, -55 -45, -55, -55, -55, -55, -55 DVB-T/H: -60, -60, 0, 0, 0, 0 -60, -60, 0, 0, 0, 0 DTMB: -45, -60, -60, -60, 50, 50 -45, -60, -60, -60, 50, 50 ISDB-T: -60, -60, 0, 0, 0, 0 -60, -60, 0, 0, 0, 0 CMMB: -45, -60, -60, -60, 50, 50 -45, -60, -60, -60, 50, 50 LTE, LTETDD: -44.2,-44.2,-44.2,-44.2,-44.2,-44.2 -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
State Saved	Saved in instrument state.
Min	-150
Max	50.0
Backwards Compatibility SCPI	[[:SENSe]:MCPower:OFFSet[1]]2:LIST:RCARrier (PSA WCDMA)
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

**Positive Offset Limit**

Enables you to set the upper limit for the upper segment of the specified offset pair.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, LTE, LTETDD
Remote Command	:CALCulate:ACPpower:OFFSet:LIST:LIMit:POSitive[:UPPer]:DATA <real>, <real>, <real>, <real>, <real>, <real> :CALCulate:ACPpower:OFFSet:LIST:LIMit:POSitive[:UPPer]:DATA?
Example	CALC:ACP:OFFS:LIST:LIM:POS:DATA 0,0,0,0,0,0 CALC:ACP:OFFS:LIST:LIM:POS:DATA?

Notes	SCPI only command
Preset	SA: -45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0 WCDMA: -44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2 C2K: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0 WIMAX OFDMA: -50, -60, 0, 0, 0, 0 TD-SCDMA: -40, -45, -45, -45, -45, -45 -33, -43, -43, -43, -43, -43 1xEVDO: -45, -55, -55, -55, -55, -55 -45, -55, -55, -55, -55, -55 DVB-T/H: -60, -60, 0, 0, 0, 0 -60, -60, 0, 0, 0, 0 DTMB: -45, -60, -60, -60, 0, 0 -45, -60, -60, -60, 0, 0
State Saved	Saved in instrument state.
Min	-150.0
Max	50.0
Backwards Compatibility SCPI	:CALCulate:MCPower:OFFSet:LIST:LIMit:POSitive[:UPPer]:DATA (PSA Power Suite)
Initial S/W Revision	A.04.00

### Negative Offset Limit

Enables you to set the upper limit for the lower segment of the specified offset pair.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:OFFSet:LIST:LIMit:NEGative[:UPPer]:DATA <real>, <real>, <real>, <real>, <real>, <real> :CALCulate:ACPower:OFFSet:LIST:LIMit:NEGative[:UPPer]:DATA?
Example	CALC:ACP:OFFS:LIST:LIM:NEG:DATA 0,0,0,0,0,0 CALC:ACP:OFFS:LIST:LIM:NEG:DATA?
Notes	SCPI only command

ACP Measurement  
Meas Setup

Preset	SA: -45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0 WCDMA: -44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2 C2K: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0 WIMAX OFDMA: -50, -60, 0, 0, 0, 0 TD-SCDMA: -40, -45, -45, -45, -45, -45 -33, -43, -43, -43, -43, -43 1xEVDO: -45, -55, -55, -55, -55, -55 -45, -55, -55, -55, -55, -55 DVB-T/H: -60, -60, 0, 0, 0, 0 -60, -60, 0, 0, 0, 0 DTMB: -45, -60, -60, -60, 0, 0 -45, -60, -60, -60, 0, 0
State Saved	Saved in instrument state.
Min	-150.0
Max	50.0
Backwards Compatibility SCPI	:CALCulate:MCPower:OFFSet:LIST:LIMit:NEGative[:UPPer]:DATA (PSA Power Suite)
Initial S/W Revision	A.04.00

**Rel Lim (PSD)**

Enters a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains six (6) entries. The offset closest to the carrier channel is the first one in the list.

[ :SENSe]:ACP:OFFSet[n]:LIST[n]:TEST selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the [ :SENSe]:ACP:OFFSet[n]:LIST:STATe command.

The query returns the six (6) sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n=1 is base station and 2 is mobiles. The default is base station (1).

Key Path	Meas Setup, Offset/Limits, Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe]:ACP:OFFSet[1] 2:LIST:RPSDensity <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> [ :SENSe]:ACP:OFFSet[1] 2:LIST:RPSDensity?
Example	ACP:OFFS2:LIST:RPSD 10,10,10,10,10,10 ACP:OFFS2:LIST:RPSD?

Notes	<p>Offset sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>Note that Offset sub op code 2 is supported only in Non-SA modes.</p> <p>In the SA mode, Offset sub op code 1 is used for both BTS and MS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SElect to set the mode.</p>
Preset	<p>SA: -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB</p> <p>WCDMA: -44.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB -32.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB</p> <p>C2K: 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB</p> <p>WIMAX OFDMA: -25,-35,0,0,0,0</p> <p>TD-SCDMA: -40 dB, -45 dB, -45 dB, -45 dB, -45 dB, -45 dB -33 dB, -43 dB, -43 dB, -43 dB, -43 dB</p> <p>1xEVDO: -45, -55, -55, -55, -55, -55 -45, -55, -55, -55, -55, -55</p> <p>DVB-T/H: -60dB, -60dB, 0 dB, 0 dB, 0 dB, 0 dB -60dB, -60dB, 0 dB, 0 dB, 0 dB, 0 dB</p> <p>DTMB: 50dB, 50dB, 50dB, 50dB, 50dB, 50dB 50dB, 50dB, 50 dB, 50 dB, 50 dB, 50 dB</p> <p>ISDB-T: -60dB, -60dB, 0 dB, 0 dB, 0 dB, 0 dB -60dB, -60dB, 0 dB, 0 dB, 0 dB, 0 dB</p> <p>CMMB: 50dB, 50dB, 50dB, 50dB, 50dB, 50dB 50dB, 50dB, 50 dB, 50 dB, 50 dB, 50 dB</p> <p>LTE, LTETDD: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0</p>
State Saved	Saved in instrument state.
Min	-150.0 dB
Max	50.0 dB
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Fail Mask

Accesses a menu that enables you to select one of the logic keys for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with [:SENSe]:ACP:OFFSet[n]:LIST:ABSolute, or the relative values defined with [:SENSe]:ACP:OFFSet:LIST:RPSDensity and [:SENSe]:ACP:OFFSet:LIST:RCARrier.

You can turn off (not use) specific offsets with the [:SENS]:ACP:OFFSet:LIST:STATE command.

- Absolute – Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit.

ACP Measurement  
Meas Setup

- Relative – Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD).
- Abs AND Rel – Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit AND one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD).
- Abs OR Rel– Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit OR one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD).

Key Path	Meas Setup, Offset/Limits, Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSe] :ACPower:OFFSet [1]   2 :LIST:TEST ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative  [ :SENSe] :ACPower:OFFSet [1]   2 :LIST:TEST?
Example	ACP:OFFS2:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS ACP:OFFS2:LIST:TEST?
Notes	Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. Note that Offset sub op code 2 is supported only in Non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Couplings	None If current mode is DTMB or CMMB and current device type is Transmitter, the value from position 2 to position 4 are coupled, changing any one will change the others.
Preset	SA, WCDMA, C2K, TD-SCDMA: REL, REL, REL, REL, REL, REL REL, REL, REL, REL, REL, REL WIMAX OFDMA: REL, REL, REL, REL, REL, REL DVB-T/H: REL, REL, REL, REL, REL, REL DTMB: OR,AND, AND,AND, REL, REL CDMA1xEVDO: REL, REL, ABS, REL, REL, REL REL, REL, ABS, REL, REL, REL ISDB-T : REL, REL, REL, REL, REL, REL CMMB : OR,AND, AND,AND, REL, REL LTE, LTETDD: AND, AND, AND, AND, AND, AND AND, AND, AND, AND, AND, AND



State Saved	Saved in instrument state.
Range	Absolute Relative Abs AND Rel (fail if both fail) Abs OR Rel (fail if either fails)
Backwards Compatibility SCPI	[[:SENSE]:MCPower:OFFSet[1]] 2:LIST:TEST
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

### Offset Side

You can turn off (not use) specific offsets with [[:SENSE]:ACPpower:OFFSet[1]]|2:LIST:SIDE.

- NEGative - negative (lower) sideband only
- BOTH - both of the negative (lower) and positive (upper) sidebands
- POSitive - positive (upper) sideband only

Key Path	<b>Meas Setup, Offset/Limits</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	[[:SENSE]:ACPpower:OFFSet[1]] 2:LIST:SIDE NEGative BOTH POSitive,NEGative BOTH POSitive,NEGative  BOTH POSitive,NEGative BOTH POSitive,NEGative BOTH POSitive,NEGative BOTH POSitive [[:SENSE]:ACPpower:OFFSet[1]] 2:LIST:SIDE?
Example	ACP:OFFS:LIST:SIDE BOTH ACP:OFFS:LIST:SIDE?
Notes	OFFSet1 is for BTS, 2 for MS. Default is BTS.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, 1xEVDO mode, WIMAX OFDMA mode, LTE mode or LTETDD mode to use this command. Use :INSTrument:SElect to set the mode.  If you set POS or NEG in an offset, result of the inactive side will return -999.
Preset	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
State Saved	Saved in instrument state.
Range	Neg Both Pos
Initial S/W Revision	A.03.00

ACP Measurement  
Meas Setup

**Method for Offset**

This key allows you to turn RRC filtering of each offset on or off. The value (roll off) for the filter will be set to the value of the Filter Alpha parameter.

Key Path	<b>Meas Setup, Offset/Limits</b>
Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSe] :ACPpower:OFFSet [1]   2:LIST:FILTer [ :RRC] [ :STATe] ON OFF 1 0, ... [ :SENSe] :ACPpower:OFFSet [1]   2:LIST:FILTer [ :RRC] [ :STATe] ?
Example	ACP:OFFS:LIST:FILT 1,0,0 ACP:OFFS:LIST:FILT?
Notes	1 ON = RRC Weighted, 0 OFF = Integ BW This parameter is not available for cdma2000 and 1xEVDO. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Preset	SA: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0 WCDMA: 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 C2K: NO WIMAX OFDMA: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0 TD-SCDMA: 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 DVB-T/H: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0 DTMB: 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 ISDB-T: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0 CMMB: 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 LTE: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0 LTETDD: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state.
Range	Integ BW RRC Weighted
Initial S/W Revision	A.03.00

**Filter Alpha for Offset**

Sets the alpha value for the RRC Filter for each offset.

Key Path	<b>Meas Setup, Offset/Limits, Method, RRC Weighted</b>
Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD

<b>Remote Command</b>	[ :SENSE] :ACPpower:OFFSet [1]   2:LIST:FILTer:ALPHa <real>, ... [ :SENSE] :ACPpower:OFFSet [1]   2:LIST:FILTer:ALPHa?
Example	ACP:OFFS:LIST:FILT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5 ACP:OFFS:LIST:FILT:ALPH?
Notes	This parameter is not available for cdma2000 and 1xEVDO. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Preset	SA: 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22 WCDMA: 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22 WIMAX OFDMA: 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22 C2K: NO TD-SCDMA: 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22 DVB-T/H: 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22 DTMB: 0.05,0.05,0.05,0.05,0.05,0.05 0.05,0.05,0.05,0.05,0.05,0.05 ISDB-T : 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22 CMMB : 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22 LTE: 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22 LTETDD: 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state.
Min	0.01
Max	1.00
Initial S/W Revision	A.03.00

### Offset Frequency Define

This key allows you to select “Offset” definition. Each standard defines each “Offset” from Carrier.

3GPP2 requires the “From Carrier Center to MeasBW Closer Edge” definition. And LTE conformance test requires “From Carrier Edge to MeasBW Center” and/or “From Carrier Edge to MeasBW Closer Edge” definition.

- CTOCenter – From the center of the carrier closest to the adjacent channel to the center of the adjacent channel's Offset Integ BW
- CTOEdge - From the center of the carrier closest to the adjacent channel to the edge of the closest adjacent channel's Offset Integ BW
- ETOCenter – From Center Frequency - Carrier Spacing / 2 (for lower offset), Center Frequency + Carrier Spacing / 2 (for upper offset) of the carrier closest to the adjacent channel's to the center of the adjacent channel's Offset Integ BW
- ETOEdge - From Center Frequency - Carrier Spacing / 2 (for lower offset), Center Frequency +

ACP Measurement  
Meas Setup

Carrier Spacing / 2 (for upper offset) of the carrier closest to the adjacent channel's to the edge of the closest adjacent channel's Offset Integ BW

Key Path	Meas Setup, Offset/Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSE ] :ACPpower:OFFSet [ 1 ]   2 :TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge [ :SENSE ] :ACPpower:OFFSet [ 1 ]   2 :TYPE?
Example	ACP:OFFS:TYPE ETOC ACP:OFFS:TYPE?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Preset	CTOCenter
State Saved	Saved in instrument state.
Range	Carrier Center To Meas BW Center Carrier Center To Meas BW Edge Carrier Edge To Meas BW Center Carrier Edge To Meas BW Edge
Initial S/W Revision	A.03.00

## Carrier Result

Allows you to view and scroll through the carrier power results.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Couplings	This key will be grayed out if there is only one carrier.
Preset	1
State Saved	No
Min	1
Max	Number of carriers.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## PhNoise Opt

Selects the LO (local oscillator) phase noise behavior for various operating conditions.

Key Path	Meas Setup
Initial S/W Revision	Prior to A.02.00

## PhNoise Opt Auto

Selects the best LO (local oscillator) phase noise behaviour for ACP measurement.

Auto works as follows:

look at all the offsets that are "on."

Find the largest and the smallest of the Freq Offset parameters for those offsets.

Take the mean.

Compare that mean with the crossover frequency for the LO in use (see below).

If the mean is below the crossover frequency, use "best close-in," otherwise use "best wide-offset."

Crossover frequency for PXA is 195 kHz, for MXA, 25 kHz.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPower:FREQuency:SYNTHeSis:AUTO[:STATe] OFF ON 0 1  [:SENSe]:ACPower:FREQuency:SYNTHeSis:AUTO[:STATe]?
Example	ACP:FREQ:SYNT:AUTO 1 ACP:FREQ:SYNT:AUTO?
Preset	ON
State Saved	Saved in instrument state.
Range	Auto Man
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

## PhNoise Opt State

Selects the LO (local oscillator) phase noise behavior for various operating conditions.

Key Path	Meas Setup
----------	------------

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSe]:ACPower:FREQuency:SYNTHeSis[:STATe] 1 2 3 [:SENSe]:ACPower:FREQuency:SYNTHeSis[:STATe]?
Example	ACP:FREQ:SYNT 1 ACP:FREQ:SYNT?
Notes	Parameter key: 1 - optimizes phase noise for close-in from the carrier. 2 - optimizes phase noise for wide-offset from the carrier. 3 - optimizes LO for tuning speed.
Preset	Because this function is in Auto after preset, the state of this function after Preset will be automatically calculated.
State Saved	Saved in instrument state.
Range	Hardware Dependent: PXA: Best Close-in Noise [offset < 140 kHz]   Best Wide-offset Noise [offset > 160 kHz]   Fast Tuning MXA: Best Close-in Noise [offset < 20 kHz]   Best Wide-offset Noise [offset > 30 kHz]   Fast Tuning
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

## Meas Method

Sets the desired method to measure ACP.

Integration BW — one sweep of the trace is taken, and the band power for each offset is computed. Depending on the status of the Meas Type parameter (Total Power Reference or PSD Reference), results are displayed relative to the total power or the power spectral density. The display reflects either the current trace or a bar graph view.

Filtered IBW (max dynamic range) — ACP Path is used to compute ACP when an ACP path is available. This method increases dynamic range, but increases measurement time as it limits the resolution bandwidth. This method is useful for improving dynamic range on W-CDMA signal because of a sharp cutoff band pass filter is used. The accuracy of the adjacent channel power ratio is not degraded by this method, but the absolute accuracy of both adjacent channel power and carrier power are degraded by up to about 0.5 dB.

RBW — the algorithm uses zero-span and an appropriate RBW setting to capture all of the power in the carrier channel and the offsets. The zero-span algorithm (RBW method) is slower than the IBW method, but greatly improves repeatability.

Fast (in WCDMA mode or SA mode with 3GPP WCDMA radio standard selected) — this provides the same method as the Integration BW method, but with optimized for speed to measure W-CDMA signal.

Fast (in CDMA2K mode or SA mode with CDMA2K radio standard selected) – This provides faster measurement using FFT method with the limited parameter flexibility. When this is selected, CDMA2K preset offsets are given and control of follows are grayed out.

BW menu, Sweep/Control menu except Pause/Resume, Trace/Detector menu, Carrier Setup, Offset Limit, RRC Weighting, Filter Alpha and Noise Correction softkeys in MeasSetup menu

In the TD-SCDMA mode, only the Integration BW method is available. Therefore, the Meas Method key is not displayed in the TD-SCDMA mode.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSE] :ACPower :METHod IBW   IBWRange   FAST   RBW [ :SENSe] :ACPower :METHod?
Example	ACP:METH IBW ACP:METH?
Notes	In the TDSCDMA mode, only the IBW method is available to use. Therefore, the measure method key is not displayed in the TD-SCDMA mode.  CDMA1xEVDO mode only supports RBW and Integration BW method.  C2K mode only supports RBW, Integration BW and FAST method.  FAST mode is only supported for WCDMA and C2K signal. You must be in the WCDMA or C2K mode or SA mode with 3GPP WCDMA or CDMA2K radio standard. Otherwise a setting conflict error message will be reported.  Supporting FAST mode in C2K is available with the instrument version A.02.00 or later  LTETDD mode only supports Integration BW and Filtered IBW method.  You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Couplings	IBW (Range) restricts the Res BW available for making this measurement to 30kHz. When selected the Res Bw will be clipped to this value if required and an error number displayed.

ACP Measurement  
Meas Setup

Preset	SA, LTE, LTETDD: IBW WCDMA: IBW C2K: RBW WIMAX OFDMA: IBW 1xEVDO: IBW DVB-T/H: IBW DTMB: IBW ISDB-T: IBW CMMB: IBW
State Saved	Saved in instrument state.
Range	Integration BW Filtered IBW (max dynamic range) RBW Fast
Readback Text	IBW Filtered IBW RBW Fast
Backwards Compatibility SCPI	[:SENSe]:ACPR:SWep:TYPE [:SENSe]:MCPower:METhod (PSA Power Suite)
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Meas Type

Changes the reference used for the measurement. This allows you to make absolute and relative power measurements of either total power or the power normalized to the measurement bandwidth.

Total Pwr Ref (TPR) sets the reference to the total carrier power. PSD Ref (PSDR) sets the reference to the power spectral density of the carrier.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :ACPower :TYPE TPref   PSDRef [ :SENSe ] :ACPower :TYPE?
Example	ACP:TYPE PSDR ACP:TYPE?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SElect to set the mode.
Preset	TPref



State Saved	Saved in instrument state.
Range	Total Power Ref PSD Ref
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### PSD Ref

Sets the unit bandwidth for Power Spectral Density. The available units are dBm/Hz and dBm/MHz.

Key Path	Meas Setup
Mode	A, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:UNIT:ACPower:POWer:PSD DBMHZ DBMMHZ :UNIT:ACPower:POWer:PSD?
Example	UNIT:ACP:POW:PSD DBMMHZ UNIT:ACP:POW:PSD?
Couplings	When the PSD unit is changed, the PSD reference result of the “MEAS READ FETCH:ACP[n]?” is also changed by the PSD unit basis (in either dBm/Hz or dBm/MHz).
Preset	DBMHZ
State Saved	Saved in instrument state.
Range	dBm/Hz dBm/MHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Limit Test

Turns limit checking for each offset On or Off. The limits may be specified within the Offset menu, for each offset, both sides of the carrier. For results that fail the limit, a red F is appended. In the Combined view, the bar turns red.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:LIMit:STATe OFF ON 0 1 :CALCulate:ACPower:LIMit:STATe?

Example	CALC:ACP:LIM:STAT OFF CALC:ACP:LIM:STAT?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Preset	SA: OFF WCDMA: ON C2K: ON WIMAX OFDMA: OFF TD-SCDMA: ON 1xEVDO: ON DVB-T/H: OFF DTMB: ON ISDB-T: OFF CMMB: ON LTE, LTETDD: ON
State Saved	Saved in instrument state.
Range	On Off
Backwards Compatibility SCPI	[:SENSe]:MCPower:LIMit[:STATe] [:SENSe]:ACPower:LIMit[:STATe]
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Noise Correction

Sets the measurement noise floor correction function to On or Off. On enables measurement noise correction when the measured power in the reference channel or any offset is close to the noise floor of the analyzer. Off turns these corrections off.

In analyzers with the noise floor extensions option (option NFE) enabled, there are two ways to compensate for the analyzer noise floor: through the NFE and through this noise corrections key. The techniques are results are similar but not identical. NFE uses a model of the analyzer noise floor, adapted to the current conditions such as center frequency, RBW and ambient temperature. The parameters of this model are measured in the factory or field calibration in a highly averaged measurement. So they are consistent. However, because the model is imperfect, the corrections are imperfect. Using NFE is very convenient; the user need not wait for the ACP noise corrections calibration to occur. The ACP NC calibration, though, has advantages of being measured very recently, at the current ambient, and the exact center frequency, with no requirement that the model be perfect. So it will often (but not always) have slightly better dynamic range. If both ACP NC is turned on and NFE is turned on, the analyzer uses only the ACP NC. When ACP NC is turned off but NFE is on, NFE is used and performance should still

be excellent.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe]:ACPower:CORRection:NOISe[:AUTO] OFF ON 0 1 [:SENSe]:ACPower:CORRection:NOISe[:AUTO]?
Example	ACP:CORR:NOIS OFF ACP:CORR:NOIS?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Preset	0
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

## Meas Preset

Restores all the measurement parameters to their default values.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CONFIgure:ACPower
Example	CONF:ACP
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	Selecting Meas Preset will restore all measurement parameters to their default values.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Offset RRC Weighting (Backward Compatibility SCPI)

Key Path	<b>SCPI Only</b>
Mode	SA, WCDMA, TD-SCDMA, WIMAX OFDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPower:FILTer [:RRC] [:STATe] OFF ON 0 1 [ :SENSe] :ACPower:FILTer [:RRC] [:STATe] ?
Example	ACP:FILT OFF ACP:FILT?
Notes	This parameter is not available for cdma2000 and 1xEVDO  The backwards Compatibility SCPI command, [ :SENSe]:ACPR:FILTer[:RRC][:STATe], is provided to support same functionality as [ :SENSe]:ACPr:FILTer[:RRC][:STATe] (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to ACPr node conflicts with ACPower node.  You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	This command is an alias to [ :SENSe]:ACPower:OFFSet[1] 2:LIST:FILTer[:RRC][:STATe]  Sending the commands to set values of all offsets for BS and MS, however, sending the query always return a value of BS Offset A.
Preset	SA, WIMAX OFDMA, LTE, LTETDD: OFF WCDMA: ON C2K: NO TD-SCDMA: ON DVB-T/H: OFF DTMB:ON ISDB-T: OFF CMMB: OFF
State Saved	Saved in instrument state.
Backwards Compatibility SCPI	[ :SENSe]:ACPR:FILTer[:RRC][:STATe] [ :SENSe]:MCPower:FILTer[:RRC][:STATe]
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Offset Filter Alpha (Backward Compatibility SCPI)

Key Path	<b>SCPI Only</b>
Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPower :FILTer [ :RRC] :ALPHa <real> [ :SENSe] :ACPower :FILTer [ :RRC] :ALPHa?
Example	ACP:FILT:ALPH 0.5 ACP:FILT:ALPH?
Notes	This parameter is not available for cdma2000 and 1xEVDO  The backwards Compatibility SCPI command, [ :SENSe]:ACPR:FILTer[:RRC]:ALPHa, is provided to support same functionality as [ :SENSe]:ACPr:FILTer[:RRC]:ALPHa (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to ACPr node conflicts with ACPower node.  You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Couplings	This command is an alias to [ :SENSe]:ACPower:OFFSet[1]2:LIST:FILTer:ALPHa  Sending the commands to set values of all offsets for BS and MS, however, sending the query always return a value of BS Offset A.
Preset	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD: 0.22  C2K: NO  DTMB: 0.05
State Saved	Saved in instrument state.
Min	0.01
Max	1.00
Backwards Compatibility SCPI	[ :SENSe]:ACPR:FILTer[:RRC]:ALPHa [ :SENSe]:MCPower:FILTer[:RRC]:ALPHa
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Method for Carrier (Backward Compatibility SCPI)

Key Path	<b>SCPI Only</b>
----------	------------------

ACP Measurement  
Meas Setup

Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :ACPower:CARRier [1]   2:LIST:METhod IBW   RRC, ... [ :SENSe ] :ACPower:CARRier [1]   2:LIST:METhod?
Example	ACP:CARR2:LIST:METh RRC ACP:CARR2:LIST:METh?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode. Maximum of Array length depends on the number of carriers.
Couplings	This command is an alias to [:SENSe]:ACPower:CARRier[1] 2:LIST:FILTer[:RRC][:STATe] The enum value translates as follows: RRC Weighted = 1 ON Integ BW = 0 OFF Maximum of Array length depends on the number of carriers.
Preset	SA: IBW WCDMA: RRC WIMAX OFDMA: IBW TD-SCDMA: RRC DVB-T/H: IBW DTMB: RRC ISDB-T: IBW CMMB: IBW LTE: IBW LTETDD: IBW
State Saved	Saved in instrument state.
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

---

## **Mode**

See [“Mode” on page 1635](#) in the section "Common Measurement Functions" for more information.

## **Mode Setup**

See “[Mode Setup](#)” on page 1651 in the section "Common Measurement Functions" for more information.



## Peak Search

Accesses a menu that enables you to control the peak search function.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Peak Search

Places the selected marker on the trace point with the maximum y-axis value.

Key Path	<b>Peak Search</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example	CALC:ACP:MARK2:MAX
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Next Peak

Moves the selected marker to the peak that has the next highest amplitude.

Key Path	<b>Peak Search</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT
Example	CALC:ACP:MARK2:MAX:NEXT
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Next Pk Right

Moves the selected marker to the nearest peak to the right of the current marker that meets all enabled

ACP Measurement  
Peak Search

peak criteria.

Key Path	Peak Search
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT
Example	CALC:ACP:MARK2:MAX:RIGH
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Next Pk Left

Moves the selected marker to the nearest peak to the left of the current marker that meets all enabled peak criteria.

Key Path	Peak Search
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT
Example	CALC:ACP:MARK2:MAX:LEFT
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker Delta

Sets the control mode for the selected marker to Delta mode.

See Marker Delta in the "Marker Functions" section for more information.

Key Path	Peak Search
Initial S/W Revision	Prior to A.02.00

### Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest

and lowest y-axis value.

Key Path	Peak Search
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak
Example	CALC:ACP:MARK:PTP
Notes	Turns on the Marker $\Delta$ active function.
Couplings	This key is not available (key is grayed out) when <b>Coupled Markers</b> is on.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

Key Path	Peak Search
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum
Example	CALC:ACP:MARK:MIN
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Recall**

See [“Recall” on page 189](#) in the section "Common Measurement Functions" for more information.

---

## **Restart**

See [“Restart” on page 1671](#) in the section "Common Measurement Functions" for more information.

## **Save**

See “[Save](#)” on page 205 in the section "Common Measurement Functions" for more information.

---

## **Single**

See “[Single \(Single Measurement/Sweep\)](#)” on page 1677 in the section "Common Measurement Functions" for more information.

## **Source**

See “[Source](#)” on page 1679 in the section "Common Measurement Functions" for more information.



## SPAN X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Span

Changes the frequency range symmetrically about the center frequency.

The default (and minimum) span is calculated using the number of carriers and the carrier width where;

$$\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$$

The span is increased by a factor of 1 + Filter Alpha if the RRC Filter is on.

Key Path	<b>Span X Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :ACPower:FREQuency:SPAN <freq> [ :SENSe ] :ACPower:FREQuency:SPAN?
Example	ACP:FREQ:SPAN 25MHz ACP:FREQ:SPAN?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SElect to set the mode.
Couplings	The span value is clipped when the carrier settings and/or the offset settings are changed. The value is changed to satisfy following formula:  Span = (Upper Carrier Freq + (max offset IBW * (1 + alpha)) / 2) - (Lower Carrier Freq - (max offset IBW * (1 + alpha)) / 2)

ACP Measurement  
**SPAN X Scale**

Preset	SA: 8 MHz WCDMA: 24.6848 MHz WIMAX OFDMA: 50MHz C2K: 4.5 MHz TD-SCDMA: 8MHz 1xEVDO: 4.05 MHz DVB-T/H: 40MHz DTMB: 72MHz ISDB-T: 30MHz CMMB: 72MHz LTE, LTETDD: 15MHz
State Saved	Saved in instrument state.
Min	10 Hz
Max	Hardware Dependent: Option 503 = 3.7 GHz Option 507 = 7.1 GHz Option 508 = 8.5 GHz Option 513 = 13.8 GHz Option 526 = 27.0 GHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Full Span**

Changes the span to show the full frequency range of the spectrum analyzer.

Key Path	<b>Span X Scale</b>
Mode	SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :ACPower :FREQuency :SPAN :FULL
Example	ACP:FREQ:SPAN:FULL
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Last Span

Changes the span to the previous span setting. If no previous span value exists, then the span will remain unchanged.

Key Path	Span X Scale
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPpower :FREQuency :SPAN :PREVious
Example	ACP:FREQ:SPAN:PREV
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELect to set the mode.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Sweep/Control

Accesses a menu of functions that enable you to set up and control the sweep time, and source.

See “Sweep/Control” on page 1687 in the "Common Measurement Functions" section for more information.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### Sweep Time

Selects the length of time in which the spectrum analyzer sweeps the displayed frequency span. In swept spans, the sweep time varies from 1 millisecond to 2000 seconds. Additional overhead time, which impacts the sweep rate, is not calculated as part of the sweep time. In fact:

sweep rate = span/sweep time

update rate = 1/(sweep time + overhead)

sweep cycle time = sweep time + overhead

Sweep time is coupled to RBW and VBW, and is impacted by the number of sweep points, so changing those parameters may change the sweep time.

If you increase the sweep time, you increase the length of the time data captured and the number of points measured. You might need to specify a specific sweep speed to accommodate a specific condition in your transmitter. For example, you may have a burst signal and need to measure an exact portion of the burst.

Selecting a specific sweep time may result in a long measurement time since the resulting number of data points may not be the optimum 2n. Use [:SENSe]:ACP:OFFSet:LIST:SWEep:TIME to set the number of points used for measuring the offset channels for Basic and cdmaOne.

For cdma2000 and W-CDMA, this command sets the sweep time when using the sweep mode. See [:SENSe]:ACP:SWEep:TYPE

Key Path	Sweep/Control
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	<pre>[:SENSe]:ACP:Power:SWEep:TIME &lt;time&gt; [:SENSe]:ACP:Power:SWEep:TIME? [:SENSe]:ACP:Power:SWEep:TIME:AUTO OFF ON 0 1 [:SENSe]:ACP:Power:SWEep:TIME:AUTO?</pre>

Example	ACP:SWE:TIME 50ms ACP:SWE:TIME? ACP:SWE:TIME:AUTO OFF ACP:SWE:TIME:AUTO?
Notes	This parameter is preset by Meas Method selection. Preset values are as follows: IBW: 29 ms IBWR: 108 ms FAST (WCDMA): 7.5 ms
Couplings	When you manually change the Sweep Time, this state automatically goes to 'Man'.
Preset	SA, LTE, LTETDD: Automatically calculated WCDMA: 29 ms WIMAX OFDMA: Automatically calculated C2K: Automatically calculated TD-SCDMA: Automatically calculated 1xEVDO: Automatically calculated DVB-T/H: Automatically calculated DTMB: Automatically calculated ISDB-T: Automatically calculated CMMB: Automatically calculated SA, LTE, LTETDD: ON WCDMA: OFF C2K: OFF(mehtod IBW) WIMAX OFDMA: ON TD-SCDMA: ON DVB-T/H: ON DTMB: ON ISDB-T: ON CMMB: ON
State Saved	Saved in instrument state.
Min	1 ms
Max	4000 s
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Sweep Setup

Accesses the sweep setup menu.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Auto Sweep Time Rules

Switches the analyzer between normal and accuracy sweep states.

Key Path	<b>Sweep/Control, Sweep Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :ACPower :SWEep :TIME :AUTO :RULes NORMal   ACCuracy [ :SENSe ] :ACPower :SWEep :TIME :AUTO :RULes ?
Example	ACP:SWE:TIME:AUTO:RUL NORM ACP:SWE:TIME:AUTO:RUL ?
Notes	Set to Norm when Auto Couple is pressed or sent remotely.
Preset	SA, WCDMA, C2K, TD-SCDMA, 1xEVDO, DTMB, LTE, LTETDD: ACCuracy WIMAX OFDMA, DVB-T/H: NORMal ISDB-T, CMMB: NORMal
State Saved	Saved in instrument state.
Range	Norm Accy
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Pause

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when paused. See [“Pause/Resume” on page 1698](#) in “Common Measurement Functions” for more details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Gate

Accesses a menu that enables you to control the gating function. The Gate functionality is used to view signals best viewed by qualifying them with other events.

Gate Method that lets you choose one of the three different types of gating is not available in this measurement.

See “Gate ” on page 1699 in “common Measurement Functions” for more details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Points

Sets the number of points per sweep, from 1 to 20001. The sweep time resolution setting will depend on the number of points selected.

Key Path	<b>Sweep/Control</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPower :SWEep :POINts <integer> [ :SENSe] :ACPower :SWEep :POINts?
Example	ACP:SWE:POIN 500 ACP:SWE:POIN?
Notes	Whenever the number of sweep points changes: <ul style="list-style-type: none"> <li>• All trace data is erased</li> <li>• Any traces with Update Off will also go to Display Off (like going from View to Blank in the older analyzers)</li> <li>• Sweep time is re-quantized</li> <li>• Any limit lines that are on will be updated</li> <li>• If averaging/hold is on, averaging/hold starts over</li> </ul>
Couplings	Whenever the number of sweep points changes, the sweep time is re-quantized.
Preset	Others: 1001 DVB-T/H:2001 DTMB: 2001 ISDB-T: 2001 CMMB: 2001

ACP Measurement  
Sweep/Control

State Saved	Saved in instrument state.
Min	1
Max	20001
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00



## Trace/Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Select Trace (frontpanel only)

This key selects which trace the other parameters under the Trace/Detector menu will apply to.

Key Path	<b>Trace/Detector</b>
Notes	No SCPI. Front panel only.
Couplings	When MeasMethod is RBW or FAST, Select Trace is disabled.
Preset	1
State Saved	Saved in instrument state.
Range	1   2   3
Initial S/W Revision	Prior to A.02.00

### Trace Type

Allows you to select the type of trace for the current measurement. The first page of this menu contains a selection of the trace type (Clear Write, Trace Average, Max Hold, Min Hold) for the selected trace.

Key Path	<b>Trace/Detector</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:TRACe [1]   2   3 :ACPpower :TYPE WRITe   AVERAge   MAXHold   MINHold :TRACe [1]   2   3 :ACPpower :TYPE?
Example	TRAC:ACP:TYPE MINH TRAC:ACP:TYPE?
Notes	WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold

ACP Measurement  
Trace/Detector

Couplings	<p>When Detector setting is “Auto” ([:SENSe]:ACPower:DETECTOR:AUTO?), Detector is set to what the Radio Standard defaults states (see detector section below) for all conditions of Trace Type and for all traces. When set to Manual, all Traces use the same detector type. When Average State = Off then Trace Types AVERage, MaxHold and MinHold will not function, since Averaging is required to be ‘on’ for them to operate.</p> <p>When MeasMethod is RBW or FAST, Trace Type is disabled.</p>
Preset	AVERage
State Saved	Saved in instrument state.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## View / Blank

Key Path	Trace/Detector
Mode	SA,WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	No SCPI. Front panel only.
Couplings	<p>The four states of this 1-of-N actually set two variables, Update and Display, to their four possible combinations. Trace On: Update and Display both On</p> <p>View: Update Off and Display On (Not implemented)</p> <p>Blank: Update Off and Display Off</p> <p>Background: Update On, Display Off (Not implemented)</p> <p>See tables below for detail on the SCPI to control these two variables.</p> <p>Selecting a trace type (Clear Write, Trace Average, Max Hold, Min Hold) for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in 'Trace On' state (<b>Update On and Display On</b>), even if that trace type was already selected.</p> <p>When MeasMethod is RBW or FAST, this key is grayed out.</p>
Preset	Trace On
State Saved	Saved in instrument state.
Range	Trace On Blank
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

Key Path	Trace/Detector
Mode	WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:TRACe[1] 2 3:ACPpower:UPDate[:STATE] ON OFF 0 1 :TRACe[1] 2 3:ACPpower:UPDate[:STATE]?
Example	TRAC:ACP:UPD ON TRAC:ACP:UPD?
Couplings	<p>Whenever you set <b>Update</b> to <b>On</b> for any trace, the <b>Display</b> is set to <b>On</b> for that trace.</p> <p>When MeasMethod is RBW or FAST, Trace Update is disabled.</p>
Preset	1 0 0 (On for Trace 1; Off for 2 &3)
State Saved	Saved in instrument state.
Range	0 1

Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Trace/Detector</b>
Mode	WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:TRACe [1]   2   3 :ACPpower :DISPlay [ :STATe] ON   OFF   0   1 :TRACe [1]   2   3 :ACPpower :DISPlay [ :STATe] ?
Example	TRAC :ACP :DISP ON TRAC :ACP :DISP ?
Couplings	Whenever you set <b>Update</b> to <b>On</b> for any trace, the <b>Display</b> is set to <b>On</b> for that trace. When MeasMethod is RBW or FAST, Trace Display is disabled.
Preset	1 0 0 (On for Trace 1; Off for 2 &3)
State Saved	Saved in instrument state.
Range	0 1
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Detector

Accesses a menu of functions that enables you to control the detectors for the current measurement. Extended in MXA6 to allow up to 3 traces, but each use the same detector type choice here. The following choices are available:

- **Auto**- the detector selected is set to **AVERage**, unless the Radio Standard defaults state otherwise e.g. it is set to **Peak** for Radio Standard = **PDC** when Device = both **MS** and **BTS**, and when Radio Standard = **NADC** and Device = **MS**.
- **Normal**-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as **Rosenfell** detection.
- **Average**-the detector determines the average of the signal within the sweep points. The averaging method is **Power (RMS)**.
- **Peak**-the detector determines the maximum of the signal within the sweep points.
- **Sample**-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- **Negative Peak**-the detector determines the minimum of the signal within the sweep points.

In swept analysis, the time interval of the data collection for the display sweep points also represents a frequency interval. In FFT analysis, the sweep points represents just a frequency interval. The detector determines the relationship between the spectrum computed by the FFT and the single data point

displayed for the sweep points.

Key Path	<b>Detector</b>
Initial S/W Revision	Prior to A.02.00

### Auto

Sets the detector for the currently selected trace to auto.

Key Path	Trace/Detector
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPoweR:DETEctor:AUTO ON OFF 1 0 [ :SENSe] :ACPoweR:DETEctor:AUTO?
Example	ACP:DET:AUTO 1 ACP:DET?
Couplings	When Detector setting is “Auto” ([ :SENSe]:ACPoweR:DETEctor:AUTO?), Detector is set to what the Radio Standard defaults states (see detector section) for all conditions of Trace Type and for all traces. When set to Manual, all Traces use the same detector type. When Average State = Off then Trace Types AVERage, MaxHold and MinHold will not function, since Averaging is required to be ‘on’ for them to operate.
Preset	ON
State Saved	Saved in instrument state.
Range	ON OFF
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Detector Selection

Selects a detector to be used by the analyzer for the current measurement. All traces will use the same detector type, similar to Monitor Spectrum measurement

Key Path	Trace/Detector
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :ACPoweR:DETEctor[:FUNctioN] AVERage NEGative NORMal POSitive SAMPle [ :SENSe] :ACPoweR:DETEctor[:FUNctioN]?

Example	ACP:DET NORM ACP:DET?
Notes	<p>When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings.</p> <p>The detector choices are:</p> <ul style="list-style-type: none"> <li>• The Normal detector determines the peak of CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.</li> <li>• The Average detector determines the average of the signal within the data range. The averaging method method is Power (RMS).</li> <li>• The Peak detector determines the maximum of the signal within the data range.</li> <li>• The Sample detector indicates the instantaneous level of the signal at the center of the data represented by each display point.</li> <li>• The Negative Peak detector determines the minimum of the signal within the data range.</li> </ul> <p>Because they may not find a spectral component's true peak, neither average nor sample detectors measure amplitudes of CW signals as accurately as peak or normal, but they do measure noise without the biases of peak detection.</p> <p>When a detector selection is made, the menu returns to the previous menu.</p>
Couplings	<p>When Detector setting is “Auto” ([:SENSe]:ACPower:DETECTOR:AUTO?), Detector is set to what the Radio Standard defaults states (see detector section) for all conditions of Trace Type and for all traces. When set to Manual, all Traces use the same detector type. When Average State = Off then Trace Types AVERAge, MaxHold and MinHold will not function, since Averaging is required to be ‘on’ for them to operate.</p> <p>Only one detector type for all 3 traces is allowed.</p> <p>When MeasMethod is RBW or FAST, Detector is disabled.</p>
Preset	AVERAge
State Saved	Saved in instrument state.
Range	Normal Average Peak Sample Negative Peak
Backwards Compatibility SCPI	[:SENSe]:ACPR:SWEep:DETECTOR[:FUNCTION]
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

---

## Trigger

Accesses a menu functions that enable you to select and control the trigger source for the current measurement. See [“Trigger” on page 1753](#) in the "Common Measurement Functions" section for more information.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00


## View/Display

Accesses a menu of functions that enable you to control the instrument display as well as turn the bar graph On and Off.

The view consists of the following two windows:


“Spectrum Window” on page 510

“Results Window” on page 510

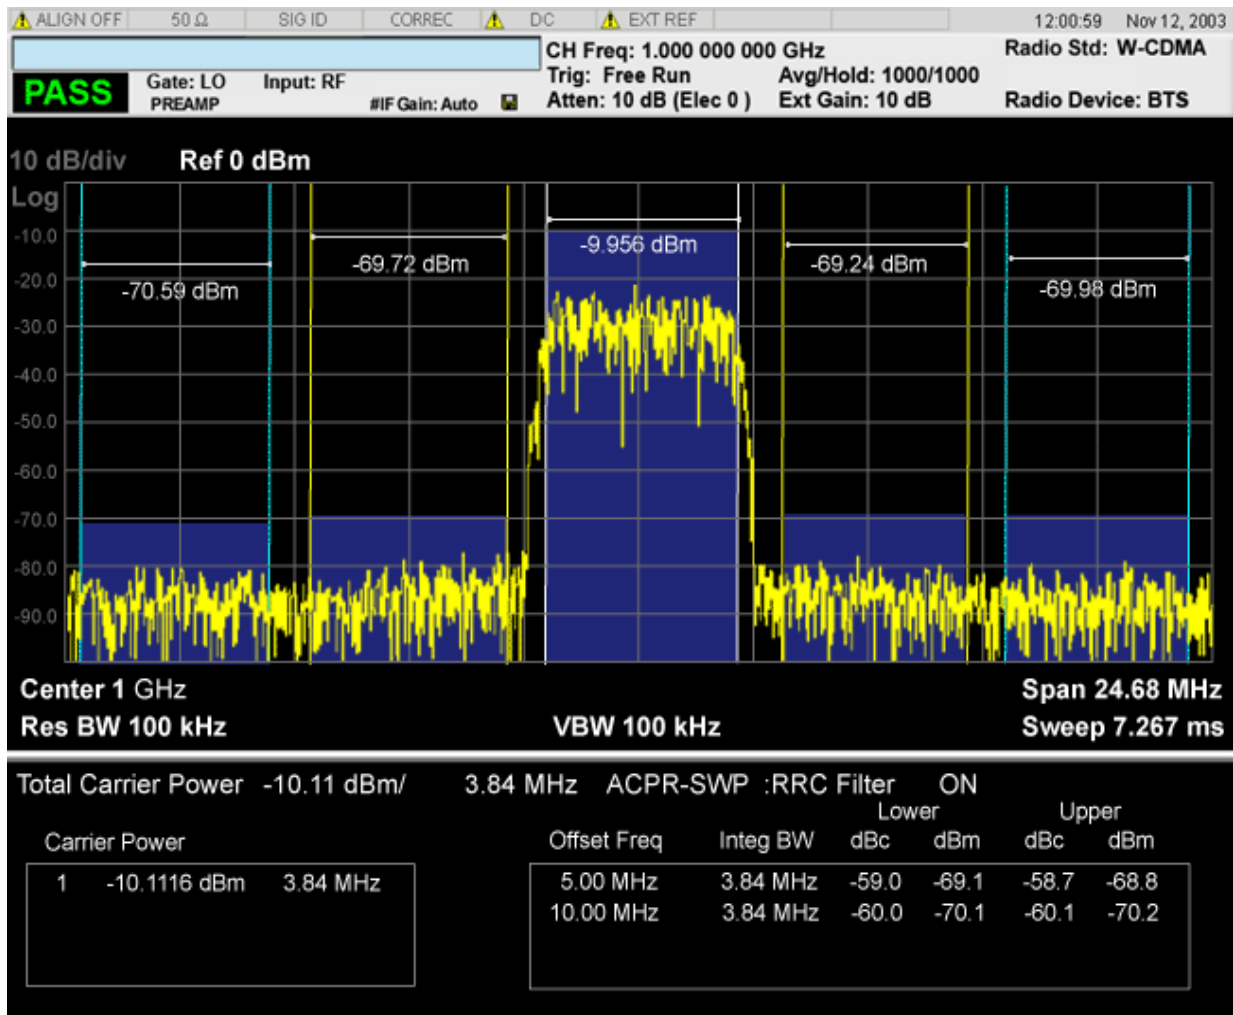


The following two views is only for DTMB and CMMB:DTMB and CMMB Transmitter:



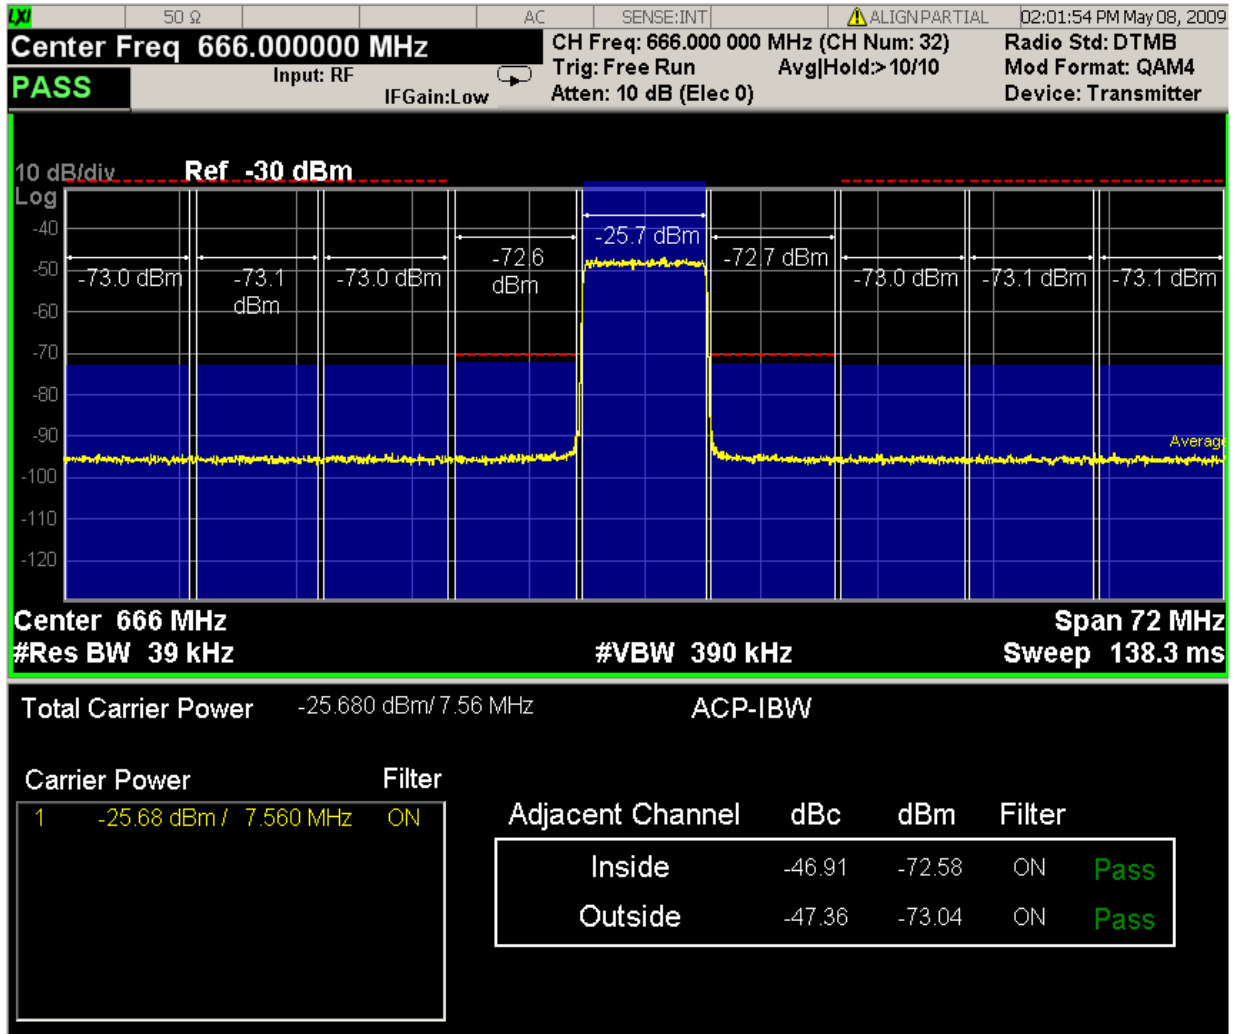

DTMB and CMMB Exciter:

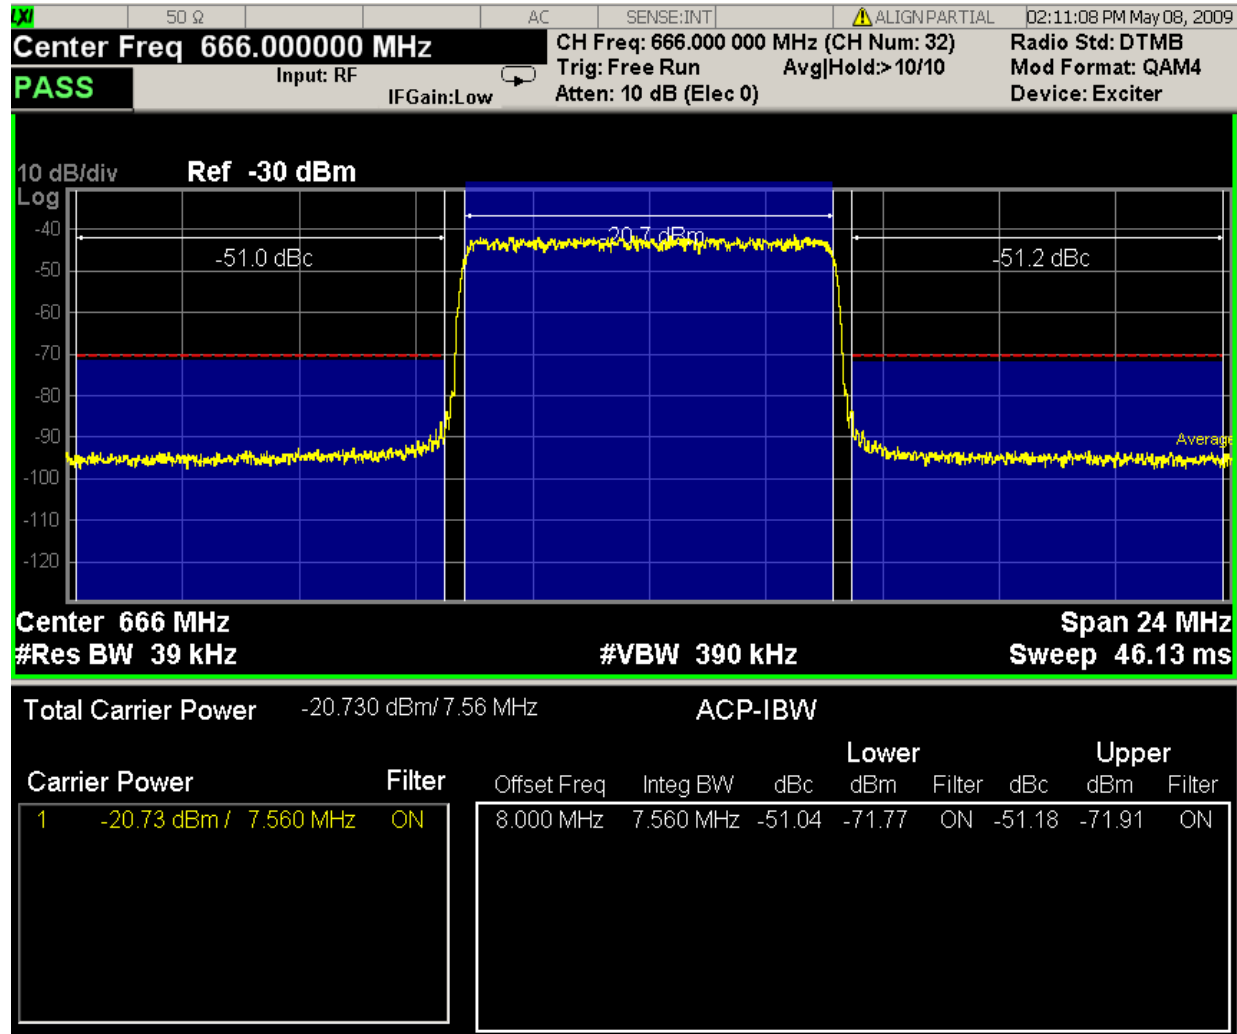

### Spectrum Window

When the Bar Graph is On and Limit Test is On, the color of each bar graph reflects the limit test result. When the limit test fails, the bar color is red, and when limit test passes, the bar color is blue.

When RBW is selected as the measurement method, the spectrum trace is not displayed, only the bar graph is displayed. In addition, the Bar Graph key (under the View/Display front panel key) is set to ON and is grayed out.

The RRC Filter display item is only displayed when RRC filter is on.

### Results Window

The text window displays the following results:

#### Total Carrier Power

This is the total power of all the carriers with carrier power present set to yes. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for each carrier and then

totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is  $(1 + \alpha)/T$  where  $T = 1/(\text{Carrier Integ Bw})$  multiplied by the number of carriers with carrier power present set to yes.

### **Ref Carrier Power**

This is the power in the reference carrier. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for that carrier. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for that carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is  $(1 + \alpha)/T$  where  $T = 1/(\text{Carrier Integ Bw})$ .

### **Carrier Power**

This is the power in all the currently defined carriers. If the carrier has carrier power present, the power will be absolute. If the carrier is defined as not having power present, the power will be relative to the reference carrier. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for the carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is  $(1 + \alpha)/T$  where  $T = 1/(\text{Carrier Integ Bw})$ .

As there are potentially more results than can be easily viewed on the display, a scrollable list is used to display all results. The Carrier Results menu key is used to index the carrier amplitude results. This key is grayed out unless the measurement is in single mode (as in continual measurement mode). The display is continuously updating and will not need to be accessed. The currently selected Carrier Result is displayed on the last line of the carrier power result list unless:

- The selected Carrier Result is 4 or less in normal multi carrier power results view. In this case the first 4 carrier power results will be displayed.
- The selected Carrier Result is 9 or greater in normal multi carrier power results view. In this case the last 4 carrier power results will be displayed.
- The zoom mode is selected. In this case all carrier power ranges can be displayed.

### **Offset Relative Power**

This is the power in the offsets relative to the reference carrier. The power is calculated by integrating across the bandwidth declared by the Offset Integ Bw parameter. The offset integration bandwidth is shown as part of the result. This is the value on the Offset Integ Bw menu key unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is  $(1 + \alpha)/T$  where  $T = 1/(\text{Offset Integ Bw})$ .

### **Offset Absolute Power**

This is the absolute power in the offsets. The power is calculated by integrating across the bandwidth declared by the Offset Integ Bw parameter. The offset integration bandwidth is shown as part of the result. This is the value on the Offset Integ Bw menu key unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is  $(1 + \alpha)/T$  where  $T = 1/(\text{Offset Integ Bw})$ .

### **Inside Adjacent Channel Power (DTMB and CMMA only)**

This result is only valid for DTMB transmitter and CMMA transmitter. It contains two parts: Relative Power and Absolute Power. The power is calculated by integrating across the bandwidth (Integ Bw) at

ACP Measurement  
View/Display

the frequency Offset A.

Inside Absolute Power = MAX (P<sub>Lower Offset A</sub>, P<sub>Upper Offset A</sub>);

Inside Relative Power = Inside Absolute Power – Carrier Power;

**Outside Adjacent Channel Absolute Power** (DTMB and CMMB only)

This result is only valid for DTMB transmitter and CMMB transmitter. It contains two parts: Relative Power and Absolute Power. The power is the Root-Mean-Square of the power calculated by integrating across the bandwidth (Integ Bw) at frequency Offset B, C and D.

$$\text{Outside Absolute Power} = \sqrt{\frac{P_{\text{Lower Offset B}}^2 + P_{\text{Upper Offset B}}^2 + P_{\text{Lower Offset C}}^2 + P_{\text{Upper Offset C}}^2 + P_{\text{Lower Offset D}}^2 + P_{\text{Upper Offset D}}^2}{6}}$$

Outside Relative Power = Outside Absolute Power – Carrier Power;

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

**Display**

Accesses a menu of functions that enable you to set the display parameters.

See “[Display](#)” on page 1813 in the "Common Measurement Functions" section for more information.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

**Bar Graph**

Turns the Bar Graph On and Off.

Key Path	<b>View/Display</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:ACPower:VIEW[1]:WINDow[1]:BGRaph OFF ON 0 1 :DISPlay:ACPower:VIEW[1]:WINDow[1]:BGRaph?
Example	DISP:ACP:VIEW:WIND:BGR OFF DISP:ACP:VIEW:WIND:BGR?
Notes	You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SElect to set the mode.
Dependencies	When the method is RBW, this key is always set to On and grayed out.

Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00



The spectrum emission mask measures spurious signal levels in up to six pairs of offset frequencies and relates them to the carrier power. For measurement results and views, see [“View/Display” on page 603](#).

This topic contains the following sections:

[“Measurement Commands for Spectrum Emission Mask” on page 515](#)

[“Remote Command Results for Spectrum Emission Mask Measurement” on page 516](#)

## Measurement Commands for Spectrum Emission Mask

Offsets that are turned off (inactive) will return  $-999.0$  when their results are queried over SCPI.

`:CONFigure:SEMask`

`:CONFigure:SEMask:NDEFault`

`:INITiate:SEMask`

`:FETCh:SEMask[n]?`

`:MEASure:SEMask[n]?`

`:READ:SEMask[n]?`

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1575](#).

## Remote Command Results for Spectrum Emission Mask Measurement

Command		Return Value
FETCh:SEMask[n]? MEASure:SEMask[n]? READ:SEMask[n]?	N=1	In case the Meas Type is: Total Power Reference Returns 82 comma-separated scalar results, in the following order: 1. Reserved for the future use, returns –999.0 2. Absolute power at the center frequency (reference) area (dBm) 3. Reserved for the future use, returns –999.0 4. Reserved for the future use, returns –999.0 5. Peak frequency in the center frequency (reference) area (Hz) 6. Reserved for the future use, returns –999.0 7. Reserved for the future use, returns –999.0 8. Reserved for the future use, returns –999.0 9. Reserved for the future use, returns –999.0 10. Reserved for the future use, returns –999.0 11. Relative integrated power on the negative offset A (dBc) 12. Absolute integrated power on the negative offset A (dBm) 13. Relative peak power on the negative offset A (dBc) 14. Absolute peak power on the negative offset A (dBm) 15. Peak power offset frequency from the center or carrier edge frequency in the negative offset A, depending on Offset Frequency Define settings (Hz) 16. Relative integrated power on the positive offset A (dBc) 17. Absolute integrated power on the positive offset A (dBm) 18. Relative peak power on the positive offset A (dBc) 19. Absolute peak power on the positive offset A (dBm) 20. Peak power offset frequency from the center or carrier edge frequency in the positive offset A, depending on Offset Frequency Define settings (Hz) 21. Relative integrated power on the negative offset B (dBc) ... 69. Absolute peak power on the positive offset F (dBm) 70. Peak power offset frequency from the center or carrier edge frequency in the positive offset F, depending on Offset Frequency Define settings (Hz)



Command		Return Value
	N=1	71. Minimum margin from limit line on the negative offset A (dB) 72. Minimum margin from limit line on the positive offset A (dB) 73. Minimum margin from limit line on the negative offset B (dB) 74. Minimum margin from limit line on the positive offset B (dB) 75. Minimum margin from limit line on the negative offset C (dB) 76. Minimum margin from limit line on the positive offset C (dB) 77. Minimum margin from limit line on the negative offset D (dB) 78. Minimum margin from limit line on the positive offset D (dB) 79. Minimum margin from limit line on the negative offset E (dB) 80. Minimum margin from limit line on the positive offset E (dB) 81. Minimum margin from limit line on the negative offset F (dB) 82. Minimum margin from limit line on the positive offset F (dB)

Command		Return Value
	N=1	<p>In case the Meas Type is: Power Spectral Density Reference</p> <p>Returns 82 comma-separated scalar results, in the following order:</p> <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Absolute power at the center frequency (reference) area (dBm/Hz)</li> <li>3. Reserved for the future use, returns -999.0</li> <li>4. Reserved for the future use, returns -999.0</li> <li>5. Peak frequency in the center frequency (reference) area (Hz)</li> <li>6. Reserved for the future use, returns -999.0</li> <li>7. Reserved for the future use, returns -999.0</li> <li>8. Reserved for the future use, returns -999.0</li> <li>9. Reserved for the future use, returns -999.0</li> <li>10. Reserved for the future use, returns -999.0</li> <li>11. Relative integrated power on the negative offset A (dB).</li> <li>12. Absolute integrated power on the negative offset A (dBm/Hz).</li> <li>13. Relative peak power on the negative offset A (dB)</li> <li>14. Absolute peak power on the negative offset A (dBm/Hz)</li> <li>15. Peak power offset frequency from the center or carrier edge frequency in the negative offset A, depending on Offset Frequency Define settings (Hz)</li> <li>16. Relative integrated power on the positive offset A (dB).</li> <li>17. Absolute integrated power on the positive offset A (dBm/Hz).</li> <li>18. Relative peak power on the positive offset A (dB)</li> <li>19. Absolute peak power on the positive offset A (dBm/Hz)</li> <li>20. Peak power offset frequency from the center or carrier edge frequency in the positive offset A, depending on Offset Frequency Define settings (Hz)</li> <li>21. Relative integrated power on the negative offset B (dB).</li> <li>...</li> <li>69. Absolute peak power on the positive offset F (dBm/Hz)</li> <li>70. Peak power offset frequency from the center or carrier edge frequency in the positive offset F, depending on Offset Frequency Define settings (Hz)</li> </ol>

Command		Return Value
	N=1	71. Minimum margin from limit line on the negative offset A (dB) 72. Minimum margin from limit line on the positive offset A (dB) 73. Minimum margin from limit line on the negative offset B (dB) 74. Minimum margin from limit line on the positive offset B (dB) 75. Minimum margin from limit line on the negative offset C (dB) 76. Minimum margin from limit line on the positive offset C (dB) 77. Minimum margin from limit line on the negative offset D (dB) 78. Minimum margin from limit line on the positive offset D (dB) 79. Minimum margin from limit line on the negative offset E (dB) 80. Minimum margin from limit line on the positive offset E (dB) 81. Minimum margin from limit line on the negative offset F (dB) 82. Minimum margin from limit line on the positive offset F (dB)

Command		Return Value
	N=1	<p>In case the Meas Type is: Spectrum Peak Reference</p> <p>Returns 82 comma-separated scalar results, in the following order:</p> <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Peak power at the center frequency (reference) area (dBm)</li> <li>3. Reserved for the future use, returns -999.0</li> <li>4. Reserved for the future use, returns -999.0</li> <li>5. Peak frequency in the center frequency (reference) area (Hz)</li> <li>6. Reserved for the future use, returns -999.0</li> <li>7. Reserved for the future use, returns -999.0</li> <li>8. Reserved for the future use, returns -999.0</li> <li>9. Reserved for the future use, returns -999.0</li> <li>10. Reserved for the future use, returns -999.0</li> <li>11. Reserved for the future use, returns -999.0</li> <li>12. Reserved for the future use, returns -999.0</li> <li>13. Relative peak power on the negative offset A (dB)</li> <li>14. Absolute peak power on the negative offset A (dBm)</li> <li>15. Peak power offset frequency from the center or carrier edge frequency in the negative offset A, depending on Offset Frequency Define settings (Hz)</li> <li>16. Reserved for the future use, returns -999.0</li> <li>17. Reserved for the future use, returns -999.0</li> <li>18. Relative peak power on the positive offset A (dB)</li> <li>19. Absolute peak power on the positive offset A (dBm)</li> <li>20. Peak power offset frequency from the center or carrier edge frequency in the positive offset A, depending on Offset Frequency Define settings (Hz)</li> <li>21. Reserved for the future use, returns -999.0</li> <li>...</li> <li>69. Absolute peak power on the positive offset F (dBm)</li> <li>70. Peak power offset frequency from the center or carrier edge frequency in the positive offset F, depending on Offset Frequency Define settings (Hz)</li> </ol>

Command		Return Value
	N=1	71. Minimum margin from limit line on the negative offset A (dB) 72. Minimum margin from limit line on the positive offset A (dB) 73. Minimum margin from limit line on the negative offset B (dB) 74. Minimum margin from limit line on the positive offset B (dB) 75. Minimum margin from limit line on the negative offset C (dB) 76. Minimum margin from limit line on the positive offset C (dB) 77. Minimum margin from limit line on the negative offset D (dB) 78. Minimum margin from limit line on the positive offset D (dB) 79. Minimum margin from limit line on the negative offset E (dB) 80. Minimum margin from limit line on the positive offset E (dB) 81. Minimum margin from limit line on the negative offset F (dB) 82. Minimum margin from limit line on the positive offset F (dB)
	N=2	Returns the displayed frequency domain spectrum trace data separated by comma. The number of data is 2001.
	N=3	Returns the displayed frequency domain absolute limit trace data separated by comma. The number of data is determined 2001.
	N=4	Returns the displayed frequency domain relative limit trace data separated by comma. The number of data is 2001.
	N=5	In case the Meas Type is: Total Power Reference Returns 14 comma-separated scalar values (in dBm) of the absolute integrated power of the segment frequencies: 1. Total power reference (dBm) 2. Reserved for the future use, returns -999.0 3. Absolute integrated power at negative offset frequency (A) 4. Absolute integrated power at positive offset frequency (A) ... 13. Absolute integrated power at negative offset frequency (F) 14. Absolute integrated power at positive offset frequency (F)

Command		Return Value
	N=5	<p>In case the Meas Type is: Power Spectral Density Reference</p> <p>Returns 14 comma-separated scalar values (in dBm/Hz) of the absolute integrated power of the segment frequencies. Returns -999.0 for the offsets if in WLAN:</p> <ol style="list-style-type: none"> <li>1. Power spectral density reference (dBm/Hz)</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. Absolute integrated power at negative offset frequency (A)</li> <li>4. Absolute integrated power at positive offset frequency (A)</li> <li>...</li> <li>13. Absolute integrated power at negative offset frequency (F)</li> <li>14. Absolute integrated power at positive offset frequency (F)</li> </ol>
	N=5	<p>In case the Meas Type is: Spectrum Peak Reference</p> <p>Returns 14 comma-separated scalar values (in dBm) of the absolute peak power of the segment frequencies.</p> <ol style="list-style-type: none"> <li>1. Spectrum Peak Power reference (dBm)</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. Absolute peak power at negative offset frequency (A)</li> <li>4. Absolute peak power at positive offset frequency (A)</li> <li>...</li> <li>13. Absolute peak power at negative offset frequency (F)</li> <li>14. Absolute peak power at positive offset frequency (F)</li> </ol>
	N=6	<p>In case the Meas Type is: Total Power Reference</p> <p>Returns 14 comma-separated scalar values (in dBc) of the integrated power relative to the carrier at the segment frequencies:</p> <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. Relative integrated power at negative offset frequency (A)</li> <li>4. Relative integrated power at positive offset frequency (A)</li> <li>...</li> <li>13. Relative integrated power at negative offset frequency (F)</li> <li>14. Relative integrated power at positive offset frequency (F)</li> </ol>

Command		Return Value
	N=6	<p>In case the Meas Type is: Power Spectral Density Reference</p> <p>Returns 14 comma-separated scalar values (in dBc/Hz) of the integrated power relative to the carrier at the segment frequencies. Returns -999.0 for the offsets if in WLAN:</p> <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. Relative integrated power at negative offset frequency (A)</li> <li>4. Relative integrated power at positive offset frequency (A)</li> <li>...</li> <li>13. Relative integrated power at negative offset frequency (F)</li> <li>14. Relative integrated power at positive offset frequency (F)</li> </ol>
	N=6	<p>In case the Meas Type is: Spectrum Peak Reference</p> <p>Returns 14 comma-separated scalar values (in dB) of the integrated power relative to the carrier at the segment frequencies.</p> <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. Relative peak power at negative offset frequency (A)</li> <li>4. Relative peak power at positive offset frequency (A)</li> <li>...</li> <li>13. Relative peak power at negative offset frequency (F)</li> <li>14. Relative peak power at positive offset frequency (F)</li> </ol>
	N=7	<p>Returns 14 comma-separated pass/fail test results (0=passed, or 1=failed) determined by testing the minimum margin point from the limit line that is determined each offset's Limits setting.</p> <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. At negative offset frequency (A)</li> <li>4. At positive offset frequency (A)</li> <li>...</li> <li>13. At negative offset frequency (F)</li> <li>14. At positive offset frequency (F)</li> </ol>

Command		Return Value
	N=8	<p>Returns 14 comma-separated pass/fail test results (0=passed, or 1=failed) determined by testing the minimum margin point from the limit line that is determined each offset's Limits setting.</p> <p>Note: This results (N=8) are the same as N=7 result.</p> <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. At negative offset frequency (A)</li> <li>4. At positive offset frequency (A)</li> <li>...</li> <li>13. At negative offset frequency (F)</li> <li>14. At positive offset frequency (F)</li> </ol>
	N=9	<p>Returns 14 comma-separated scalar values of frequency (in Hz) that have peak power from center or carrier edge frequency in each offset, depending on Offset Frequency Define settings.</p> <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. Negative offset frequency (A)</li> <li>4. Positive offset frequency (A)</li> <li>...</li> <li>13. Negative offset frequency (F)</li> <li>14. Positive offset frequency (F)</li> </ol>
	N=10	<p>Returns 14 comma-separated scalar values (in dBm) of the absolute peak power of the segment frequencies:</p> <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. At negative offset frequency (A)</li> <li>4. At positive offset frequency (A)</li> <li>...</li> <li>13. At negative offset frequency (F)</li> <li>14. At positive offset frequency (F)</li> </ol>



Command		Return Value
	N=11	Returns 14 comma-separated scalar values in dBc (dB if MeasType = PSD) of the peak power relative to the carrier at the segment frequencies: <ol style="list-style-type: none"> <li>1. Reserved for the future use, returns -999.0</li> <li>2. Reserved for the future use, returns -999.0</li> <li>3. At negative offset frequency (A)</li> <li>4. At positive offset frequency (A)</li> <li>...</li> <li>13. At negative offset frequency (F)</li> <li>14. At positive offset frequency (F)</li> </ol>
	N=12	Returns the power result (the peak power of the signal in the ref channel) when Meas Type is Spectrum Peak reference. Otherwise, the value returned will be -999.0

Key Path	<b>Meas</b>
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. The parameter values are measurement independent except all Attenuation values and Internal Preamp selections that are measurement global.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value

Sets the value for the absolute power reference. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVe 1 <real>  :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVe 1?
Example	DISP:SEM:VIEW:WIND:TRAC:Y:RLEV 100 DISP:SEM:VIEW:WIND:TRAC:Y:RLEV?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changed to Off.
Preset	All except CDMA1xEVDO:10.0 dBm CDMA1xEVDO: -10.0dBm
State Saved	Saved in instrument state.
Min	-250 dBm
Max	250 dBm
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Attenuation

Accesses a menu of functions that enable you to change attenuation settings. This key has read-back text that describes the total attenuator value.

See AMPTD Y Scale, “Attenuation” on page 1406 in the “Common Measurement Functions” section for more information.

## Scale/Div

Sets the units-per-division of the vertical scale in the logarithmic display. When Auto Scaling is On, the scale per division value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	AMPTD Y Scale
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIvI sion <rel_ampl>  :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIvI sion?
Example	DISP:SEM:VIEW:WIND:TRAC:Y:PDIV 15dB DISP:SEM:VIEW:WIND:TRAC:Y:PDIV?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10 dB
State Saved	Saved in instrument state.
Min	0.10 dB
Max	20.00 dB
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Presel Center

See AMPTD Y Scale, “[Presel Center](#)” on page 1421 in the “Common Measurement Functions” section for more information.

## Presel Adjust

See AMPTD Y Scale, “[Preselector Adjust](#)” on page 1422 in the “Common Measurement Functions” section for more information.

## Y Axis Unit

Allows you to change the vertical (Y) axis amplitude unit.

See “[Y Axis Unit](#)” on page 1424 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Parameter Name	Y Axis Unit
Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	A.04.00

## Reference Level Offset

Adds an offset value to the displayed reference level. The reference level is the absolute amplitude represented by the top graticule line on the display.

See “[Reference Level Offset](#)” on page 1429 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Parameter Name	Reference Level Offset
Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	A.04.00

## $\mu$ W Path Control

The  $\mu$ W Path Control functions include the  $\mu$ W Preselector Bypass (Option MPB) and Low Noise Path (Option LNP) controls in the High Band path circuits.

See  $\mu$ “ [\$\mu\$ W Path Control](#)” on page 1430 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Parameter Name	$\mu$ W Path Control
Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	A.04.00

## Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, “[Internal Preamp](#)” on page 1435 in the “Common Measurement Functions” section for more information.

## Ref Position

Positions the reference level at the top, center or bottom of the Y scale display. Changing the reference position does not affect the reference level value.

Key Path	AMPTD Y Scale
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSi tion TOP CENTer BOTTom  :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSi tion?
Example	DISP:SEM:VIEW:WIND:TRAC:Y:RPOS BOTT  DISP:SEM:VIEW:WIND:TRAC:Y:RPOS?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	TOP
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Auto Scaling

Toggles the Auto Scaling function between On and Off.

When Auto Scaling is On and the Restart front-panel key is pressed, the analyzer automatically determines the scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.

Key Path	AMPTD Y Scale
----------	---------------

Spectrum Emission Mask Measurement  
**AMPTD Y Scale**

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPly:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPl e 0 1 ON OFF  :DISPly:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPl e?
Example	DISP:SEM:VIEW:WIND:TRAC:Y:COUP OFF  DISP:SEM:VIEW:WIND:TRAC:Y:COUP?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically determines the scale per division and reference values based on the measurement results.  When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Auto Couple**

See “[Auto Couple](#)” on page 1437 in the section "Common Measurement Functions" for more information.

## BW

Accesses a menu of functions that enable you to select the type of filter for the measurement.

Key Path	<b>Front-panel key</b>
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Filter Type

Selects the type of bandwidth filter that is used in Carrier and Offsets.

When Gaussian or Flattop is selected, selected filter is applied to carriers and all offsets.

When Auto Sense is selected, filter type is automatically selected for each carriers and offsets, so that measurement speed and accuracy is optimized.

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :SEMAsk:BA NDwidth:SHAPE ASENSe GAUSSian FLATtop [ :SENSE] :SEMAsk:BA NDwidth:SHAPE?
Example	SEM:BA ND:SHAPE GAUS SEM:BA ND:SHAPE?
Couplings	See the description above
Preset	ASENSE
State Saved	Saved in instrument state.
Range	Auto Sense (each offset and carrier) Gaussian (all offsets and carriers) Flattop (all offsets and carriers)
Initial S/W Revision	A.03.00



---

## **Cont**

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451 in the section "Common Measurement Functions" for more information.

## **FREQ Channel**

See “[FREQ/Channel](#)” on page 1453 in the section "Common Measurement Functions" for more information.

## **Input/Output**

See “[Input/Output](#)” on page 1459 in the section "Common Measurement Functions" for more information.

## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. You can turn on and control up to 12 markers.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Type

Sets the marker control mode to Normal and Off. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area. The marker X axis value entered in the active function area will display the marker value to its full entered precision. If the current control mode for the measurement is Off, there is no active function and the active function is turned off.

Key Path	<b>Marker</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SEMAsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSITION OFF :CALCulate:SEMAsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?
Example	CALC:SEM:MARK:MODE POS CALC:SEM:MARK:MODE?
Notes	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. Note that if the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision.

Preset	OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
State Saved	Saved in instrument state.
Range	Normal Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is Off, but is the SCPI equivalent of entering an X value if the control mode is **Normal**.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <freq> :CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?
Example	CALC:SEM:MARK3:X 1.0 GHz CALC:SEM:MARK3:X?
Notes	If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” will be generated.  The query returns the marker’s absolute X Axis value if the control mode is <b>Normal</b> . The query is returned in the fundamental units for the current marker X Axis scale. If the marker is <b>Off</b> the response is not a number.  When a Marker is turned on, it is placed center of the screen on the trace. Therefore the default value depends on instrument condition, although the Preset/Default is defined as 1.5 GHz.
Preset	After a preset, all Markers are turned OFF, so a Marker X Axis Value query will return a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal**, except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
Remote Command	:CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real>  :CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?
Example	CALC:SEM:MARK10:X:POS 1001  CALC:SEM:MARK10:X:POS?
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points . If the marker is <b>Off</b> the response is not a number.  When a Marker is turned on, it is placed center of the screen on the trace. Therefore the default value depends on he instrument condition although the Preset/Default is defined as 6507 (this value might be the expected value when all the offsets are on).
Preset	After a preset, all Markers are turned OFF, so a Marker X Axis Value query will return a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
Remote Command	:CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:SEM:MARK11:Y 10 dBm  CALC:SEM:MARK11:Y?

Notes	Since the result value is always calculated from acquisition data, the default value is arbitrary, although the Preset/Default values is defined.
Preset	Result dependent on markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	:CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:RESult?
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Couple Markers

When this function is true, moving any marker causes an equal X Axis movement of every other marker which is not **Off**. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

Key Path	Marker
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SEMask:MARKer:COUple[:STATe] ON OFF 1 0 :CALCulate:SEMask:MARKer:COUple[:STATe]?
Example	CALC:SEM:MARK:COUP ON CALC:SEM:MARK:COUP?
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### All Markers Off

Turns all active markers off in all views.

Key Path	Marker
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SEMask:MARKer:AOff

Spectrum Emission Mask Measurement  
Marker

Example	CALC:SEM:MARK:AOFF
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00



---

## **Marker Function**

There are no 'Marker Functions' supported in Spectrum Emission Mask so this front-panel key will display a blank key menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## Marker To

There is no 'Marker To' functionality supported in Spectrum Emission Mask so this front-panel key will display a blank key menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

---

## **Meas**

See [“Meas” on page 1575](#) in the section "Common Measurement Functions" for more information.

## Meas Setup

Displays the setup menu for the currently selected measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Avg/Hold Num

Toggles averaging On or Off in addition to enabling you to set the number of measurement averages used to calculate the measurement result. The average will be displayed at the end of each sweep. After the specified number of average counts, the average mode (termination control) setting determines the average action.

In the remote mode, use the Average State command to turn averaging on or off.

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[:SENSe]:SEMAsk:AVERAge:COUNT <integer> [:SENSe]:SEMAsk:AVERAge:COUNT? [:SENSe]:SEMAsk:AVERAge[:STATe] ON OFF 1 0 [:SENSe]:SEMAsk:AVERAge[:STATe]?
Example	SEM:AVER:COUN 100 SEM:AVER:COUN? SEM:AVER ON SEM:AVER?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode.
Preset	10 OFF
State Saved	Saved in instrument state.
Min	1
Max	10000
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Meas Type

Accesses a menu that enables you to select one of the following measurement reference types:

**Total Pwr Ref** – Sets the reference to the total carrier power and the measured data is shown in dBc and dBm.

**PSD Ref** – Sets the reference to the mean power spectral density of the carrier and the measured data is shown in dB and dBm/Hz.

**Spectrum Peak Ref** – Sets the reference to the spectrum peak power of the carrier and the measured data is shown in dB and dBm.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :SEMAsk:TYPE PSDRef   TPreRef   SPRef [ :SENSe] :SEMAsk:TYPE ?
Example	SEM:TYPE PSDR SEM:TYPE?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Preset	SA, WCDMA, C2K, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD: TPreRef WIMAX OFDMA: SPRef
State Saved	Saved in instrument state.
Range	Total Pwr Ref PSD Ref Spectrum Peak Ref
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Ref Channel

Accesses a menu that enables you to set up the measurement parameters used to calculate the power in the reference channel.

Key Path	Meas Setup
----------	------------

Spectrum Emission Mask Measurement  
**Meas Setup**

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**Integ BW**

Specifies the integration bandwidth used to calculate the power in the reference channel.

Key Path	<b>Meas Setup, Ref Channel</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :SEMAsk:BA NDwidth[1]   2:INTEgration <bandwidth> [ :SENSE] :SEMAsk:BA NDwidth[1]   2:INTEgration?
Example	SEM:BA ND:INT 10 MHz SEM:BA ND:INT?
Notes	10% . 100% of Channel Span Parameter Value Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode or cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	Cannot be higher than the channel Span. If lower than 1/10 of channel Span, then the channel Span is reduced to be 10 times the Integ BW.
Preset	SA: 3.84 MHz WCDMA: 3.84 MHz 3.84 MHz C2K: 1.23 MHz 1.23 MHz WIMAX OFDMA: 10 MHz 10 MHz TD-SCDMA: 1.28 MHz 1.28 MHz 1xEVDO: 1.23MHz DTMB: 7.56MHz DVB-T/H: 7.61MHz ISDB-T: 5.6MHz CMMB: 7.512MHz LTE: 4.515MHz 4.5MHz LTETDD: 4.515MHz 4.5MHz
State Saved	Saved in instrument state.
Min	1 kHz
Max	50 MHz
Modified at S/W Revision	A.02.00

Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Span

Specifies the span used to calculate the power in the reference channel.

Key Path	Meas Setup, Ref Channel
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, LTE, LTETDD, CMMB
Remote Command	[ :SENSE] :SEMAsk:FREQuency[1]   2:SPAN <freq> [ :SENSE] :SEMAsk:FREQuency[1]   2:SPAN?
Example	SEM:FREQ:SPAN 3MHz SEM:FREQ:SPAN?
Notes	Frequency sub op code, 1 is for BTS, 2 for MS. Default is BTS.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	Range 1 kHz to 50 MHz (although restricted by Integ BW). If you set the channel Span lower than channel Integ BW, they will both track each other. As you increase the channel Span, the Integ BW will also increase if it is less than 1/10 of the channel Span.
Preset	SA: 5.0 MHz WCDMA: 5.0 MHz 5.0 MHz C2K: 1.25 MHz 1.25 MHz WIMAX OFDMA: 10 MHz  10 MHz TD-SCDMA: 1.6 MHz 1.6 MHz 1xEVDO: 1.25MHz DTMB: 10MHz DVB-T/H: 10MHz ISDB-T: 8MHz CMMB: 10MHz LTE: 5 MHz LTETDD: 5 MHz
State Saved	Saved in instrument state.
Min	1 kHz

Spectrum Emission Mask Measurement  
**Meas Setup**

Max	50 MHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Sweep Time**

Sets the sweep time used to calculate the power in the reference channel. Sweep Time can be set manually or put in auto mode.

Key Path	<b>Meas Setup, Ref Channel</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[:SENSe]:SEMAsk:SWEep[1] 2:TIME <time> [:SENSe]:SEMAsk:SWEep[1] 2:TIME? [:SENSe]:SEMAsk:SWEep[1] 2:TIME:AUTO OFF 0 ON 1 [:SENSe]:SEMAsk:SWEep[1] 2:TIME:AUTO?
Example	SEM:SWE:TIME 9ms SEM:SWE:TIME? SEM:SWE:TIME:AUTO OFF SEM:SWE:TIME:AUTO?
Notes	Sweep Time sub op code, 1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	When the Sweep Time is set manually, Auto is set to OFF. Value is coupled with Channel Detector selection, Channel Resolution BW, Channel Video BW if the state is Auto. When set to Auto, the Sweep Time is automatically calculated
Preset	Automatically calculated ON
State Saved	Saved in instrument state.
Min	1 ms
Max	4000 s
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00



Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Res BW

Sets the resolution bandwidth used to calculate the power in the reference channel. The Channel Resolution BW can be set manually or put in to auto mode.

Key Path	Meas Setup, Ref Channel
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	<pre>[ :SENSe] :SEMask:BA NDwidth[1]   2 [ :RESolution] &lt;bandwidth&gt; [ :SENSe] :SEMask:BA NDwidth[1]   2 [ :RESolution] ? [ :SENSe] :SEMask:BA NDwidth[1]   2 [ :RESolution] :AUTO OFF   ON   1   0 [ :SENSe] :SEMask:BA NDwidth[1]   2 [ :RESolution] :AUTO?</pre>
Example	<pre>SEM:BA ND 100 kHz SEM:BA ND? SEM:BA ND:AUTO ON SEM:BA ND:AUTO?</pre>
Notes	<p>Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.</p>
Couplings	<p>When Res BW is set manually, Channel Resolution BW Mode is set to MANual.</p> <p>Value is coupled with Channel Detector selection, Channel Sweep Time, Channel Video BW.</p> <p>When set to Auto, the resolution bandwidth is automatically calculated.</p>

Spectrum Emission Mask Measurement  
**Meas Setup**

Preset	SA: 100 kHz WCDMA: 75 kHz C2K: 24 kHz WIMAX OFDMA: 100 kHz TD-SCDMA: 30 kHz 1xEVDO: 30.0KHz DTMB: 3.9kHz DVB-T/H: 3.9kHz ISDB-T: 10kHz CMMB: 3.9kHz LTE, LTETDD:Auto (47 kHz) ON
State Saved	Saved in instrument state.
Min	1 Hz
Max	8 MHz
Backwards Compatibility SCPI	[[:SENSe]:SEMAsk:BWIDth[1]]2[:RESolution]
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Video BW**

Sets the video bandwidth used to calculate the power in the reference channel. The Channel Video BW can be set manually or put in to auto mode.

Key Path	Meas Setup, Ref Channel
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[[:SENSe]:SEMAsk:Bandwidth[1] 2:VIDeo <bandwidth> [[:SENSe]:SEMAsk:Bandwidth[1] 2:VIDeo? [[:SENSe]:SEMAsk:Bandwidth[1] 2:VIDeo:AUTO OFF ON 1 0 [[:SENSe]:SEMAsk:Bandwidth[1] 2:VIDeo:AUTO?
Example	SEM:BAND:VID 100 kHz SEM:BAND:VID? SEM:BAND:VID:AUTO ON SEM:BAND:VID:AUTO?

Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	When Video BW is set manually, Channel Video BW Mode is set to MANUAL  Value is coupled with Channel Detector selection, Channel Sweep Time, Channel Resolution BW.  When set to Auto, the video bandwidth is automatically calculated.
Preset	SA: 100 kHz WCDMA: 75 kHz C2K: 24 kHz WIMAX OFDMA: 30 kHz TD-SCDMA: 300 kHz 1xEVDO: 300.0kHz DTMB: 39kHz DVB-T/H: 39kHz ISDB-T: 1kHz CMMB: 39kHz LTE: Auto LTETDD: Auto ON
State Saved	Saved in instrument state.
Min	1 Hz
Max	50 MHz
Backwards Compatibility SCPI	[:SENSe]:SEMAsk:BWIDth[1]2:VIDeo
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### VBW/RBW

Sets the Video BW/Resolution BW Ratio to calculate the Channel Resolution BW and Channel Video BW. The VBW/RBW Ratio can be set manually or put in to auto mode.

Key Path	<b>Meas Setup, Ref Channel</b>
----------	--------------------------------

Spectrum Emission Mask Measurement  
Meas Setup

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA mode, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSE ] :SEMAsk:BA NDwidth[1]   2:VIDeo:RATio <real> [ :SENSE ] :SEMAsk:BA NDwidth[1]   2:VIDeo:RATio [ :SENSE ] :SEMAsk:BA NDwidth[1]   2:VIDeo:RATio:AUTO OFF   ON   1   0 [ :SENSE ] :SEMAsk:BA NDwidth[1]   2:VIDeo:RATio:AUTO?
Example	SEM:BA ND:VID:RAT 0.1 SEM:BA ND:VID:RAT? SEM:BA ND:VID:RAT:AUTO ON SEM:BA ND:VID:RATIO:AUTO?
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	When Res BW is set manually, Mode coupling is set to MANual When set to Auto, the VBW/RBW Ratio is automatically calculated.
Preset	SA, WCDMA, C2K: 1.0 WIMAX OFDMA: 0.3 TD-SCDMA: 10 1xEVDO: 10.0 DTMB: 10 DVB-T/H: 10 ISDB-T: 0.1 CMMB: 10 LTE: Auto LTETDD: Auto ON
State Saved	Saved in instrument state.
Min	0.00001
Max	3000000
Backwards Compatibility SCPI	[ :SENSE ] :SEMAsk:BWIDth[1] 2:VIDeo:RATio
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Power Ref

Sets the power reference in the carrier that will be used to compute the relative values for the offsets.

Key Path	<b>Meas Setup, Ref Channel</b>
Initial S/W Revision	Prior to A.02.00

## Total Power

Sets the power in the carrier (ref channel) that will be used to compute the relative power values for the offsets. When the state is set to auto, this value is set to the measured carrier reference power. When set to manual, the result takes on the last measured value, or can be manually entered.

Key Path	<b>Meas Setup, Ref Channel, Power Ref</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :SEMAsk:CARRier[:POWER] <real> [ :SENSe] :SEMAsk:CARRier[:POWER]? [ :SENSe] :SEMAsk:CARRier:AUTO[:STATe] OFF ON 1 0 [ :SENSe] :SEMAsk:CARRier:AUTO[:STATe]?
Example	SEM:CARR 100dBm SEM:CARR? SEM:CARR:AUTO OFF SEM:CARR:AUTO?
Notes	The min and max values given are for Meas Type = Total Pwr Ref.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.  This BAF SCPI command is available in all the Meas Type case.
Dependencies	This "Total Power Ref" parameter is coupled with the "Meas Type" parameter. The softkey would be active if the Meas Type is set to Total Power Ref. Otherwise, it is grayed out.
Preset	Measured carrier reference power
State Saved	Saved in instrument state.
Min	-200 dBm
Max	200 dBm

## Spectrum Emission Mask Measurement

### Meas Setup

Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### PSD

Sets the power spectral density in the carrier that is used to compute the relative power spectral density values for the offsets when Meas Type is set to PSD Ref. When the state is set to auto, this will be set to the measured carrier power spectral density.

Key Path	<b>Meas Setup, Ref Chan, Power Ref</b>
Mode	SA, WCDMA, C2K , WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :SEMAsk:CARRier:CPSD <real> [ :SENSe] :SEMAsk:CARRier:CPSD?
Example	SEM:CARR:CPSD -80 SEM:CARR:CPSD?
Notes	Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement.  Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Dependencies	See Couplings
Couplings	This "PSD" parameter is coupled with the "Meas Type" parameter. The key will be active if the Meas Type is set to PSD. Otherwise, it is grayed out.
Preset	Measured carrier PSD reference power
State Saved	Saved in instrument state.
Min	-200
Max	200
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Spectrum Peak

Sets the spectrum peak power in the carrier that is used to compute the relative power spectral density values for the offsets when Meas Type is set to Spectrum Peak. When the state is set to auto, this will be

set to the measured carrier spectrum peak power. When set to manual, the result takes on the last measured value, or can be manually entered

Key Path	<b>Meas Setup, Ref Channel, Power Ref</b>
Mode	SA, WCDMA, C2K , WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :SEMAsk:CARRier:PEAK[:POWer] <real> [ :SENSe] :SEMAsk:CARRier:PEAK[:POWer]?
Example	SEM:CARR:PEAK -80 SEM:CARR:PEAK:POWER?
Notes	Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement.  Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Dependencies	See Couplings
Couplings	This "Spectrum Peak Ref" parameter is coupled with the "Meas Type" parameter. This softkey would be active if the "Meas Type" is set to "Spectrum Peak Ref". Otherwise, grayout.
Preset	Measured carrier Spectrum Peak reference power
State Saved	Saved in instrument state.
Min	-200
Max	200
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Offsets/Limit

Accesses a menu that enables you to set up the measurement parameters for the offset pairs. For example, you can assign the start and stop frequencies, select the resolution bandwidth, and set the sweep time.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

Spectrum Emission Mask Measurement  
**Meas Setup**

**Select Offset**

Selects the offset pairs (upper and lower) that affect the menu keys, and displays the memory selection menu from A to F. The memory selection menu allows you to store up to 5 sets of parameter values for the offset pairs, such as Start Freq, Stop Freq, Sweep Time, Res BW, Meas BW, Abs Start, and Abs Stop. Press Offset until the letter of the desired offset (A, B, C, D, E, or F) is underlined. Only one selection at a time is shown on this menu key label.

Key Path	Meas Setup, Offsets/Limit
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
Preset	A
Range	A B C D E F
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Start Freq**

Specifies the start frequency for the currently selected offset and enables you to toggle this function On or Off for each offset.

Key Path	Meas Setup, Offset/Limit
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	<pre>[ :SENSe]:SEMask:OFFSet [1]   2:LIST:FREQuency:STARt &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;  [:SENSe]:SEMask:OFFSet [1]   2:LIST:FREQuency:STARt?  [:SENSe]:SEMask:OFFSet [1]   2:LIST:STATe ON OFF   1   0, ON OFF   1   0, ON OFF   1   0, ON OFF   1   0, ON OFF   1   0, ON OFF   1   0  [:SENSe]:SEMask:OFFSet [1]   2:LIST:STATe?</pre>
Example	<pre>SEM:OFFS2:LIST:FREQ:STAR 100 kHz SEM:OFFS2:LIST:FREQ:STAR? SEM:OFFS:LIST:STAT ON SEM:OFFS:LIST:STAT?</pre>



Notes	<p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.</p>
Couplings	<p>Coupled to Stop Freq. Start cannot go above the stop freq less 100Hz. Similarly Stop freq cannot go below Start Freq plus 100Hz.</p> <p>If the current mode is DVB-T/H, this value will be modified automatically according to the limit type and the output power of the transmitter which is less or more than 25W.</p> <p>If the current mode is ISDB-T, this value will be modified automatically according to the limit type.</p>

Spectrum Emission Mask Measurement  
**Meas Setup**

Preset	<p>SA: 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz</p> <p>WCDMA: 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz</p> <p>C2K: 750.0 kHz, 780.0 kHz, 1.980 MHz, 3.25 MHz, 7.0 MHz, 7.0 MHz 885 kHz, 1.980 MHz, 2.250 MHz, 8.0 MHz, 12.0 MHz, 12.0 MHz</p> <p>WIMAX OFDMA:  4.75MHz,5.45MHz,9.75MHz,14.75MHz,19.75MHz,24.75MHz 4.75MHz,5.45MHz,9.75MHz,14.75MHz,19.75MHz,24.75MHz</p> <p>TD-SCDMA:  815kHz,1015kHz,1815kHz,2.3MHz, ,2.3MHz,,2.3MHz   815kHz,1815kHz,2.9MHz, 2.9MHz,2.9MHz,2.9MHz</p> <p>1xEVDO: 765.0kHz, 795.0kHz, 1.995MHz, 3.253125MHz, 7.5MHz, 7.5MHz 900.0kHz, 1.995MHz, 1.995MHz, 1.995MHz, 1.995MHz, 1.995MHz, 1.995MHz</p> <p>DTMB: 3.8MHz, 4.2MHz, 6MHz, 12MHz, 12MHz, 12MHz</p> <p>DVB-T/H: 3.81MHz, 4.2MHz, 6MHz, 12MHz, 12MHz, 12MHz</p> <p>ISDB-T: 2.79MHz, 2.86MHz, 3.0MHz, 4.36MHz, 15.0MHz, 15.0MHz</p> <p>CMMB: 3.8MHz, 4.2MHz, 8.0MHz, 12.0MHz,12.0MHz, 12.0MHz</p> <p>LTE, LTETDD: 50kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz 15.00 kHz,1.5 MHz,5.5 MHz,6.5 MHz,10 MHz,20MHz</p> <p>SA: ON, ON, ON, ON, ON, OFF</p> <p>WCDMA: ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, OFF, OFF</p> <p>C2K: ON, ON, ON, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>WIMAX OFDMA: ON, ON, ON, OFF, OFF, OFF ON, ON, ON, OFF, OFF, OFF</p> <p>TD-SCDMA: ON, ON, ON, ON, OFF, OFF ON, ON, ON, OFF, OFF, OFF</p> <p>1xEVDO: ON, ON, ON, OFF, OFF, OFF  ON, ON, OFF, OFF, OFF, OFF</p> <p>DTMB: ON, ON, ON, OFF, OFF, OFF</p> <p>DVB-T/H: ON, ON, ON, OFF, OFF, OFF</p> <p>ISDB-T: ON, ON, ON, ON, OFF, OFF</p> <p>CMMB: ON, ON, ON, OFF, OFF, OFF</p> <p>LTE, LTETDD: ON, ON, ON, OFF, OFF, OFF ON,ON,ON,ON,OFF,OFF</p>
State Saved	Saved in instrument state.
Min	0 Hz
Max	Stop Freq minus (-) 100 Hz (for that offset)
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Stop Freq

Specifies the stop frequency for the currently selected offset.

Key Path	<b>Meas Setup, Offset/Limit</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :SEMAsk:OFFSet [1]   2 :LIST:FREQuency:STOP <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [ :SENSE] :SEMAsk:OFFSet [1]   2 :LIST:FREQuency:STOP?
Example	SEM:OFFS:LIST:FREQ:STOP 100 kHz SEM:OFFS:LIST:FREQ:STOP?
Notes	Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	Coupled to Start Freq. Start cannot go above the stop freq less 100Hz. Similarly Stop freq cannot go below Start Freq plus 100Hz.  If the current mode is DVB-T/H, this value will be modified automatically according to the limit type and the output power of the transmitter which is less or more than 25W.  If the current mode is ISDB-T, this value will be modified automatically according to the limit type.

Spectrum Emission Mask Measurement  
**Meas Setup**

Preset	SA: 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz WCDMA:2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz C2K: 780.0kHz, 1.980 MHz, 4.0 MHz, 4.0 MHz, 12.0 MHz, 12.0 MHz 1.980 MHz 4.0MHz, 4.0 MHz, 11.5 MHz, 14.5 MHz, 14.5 MHz WIMAX OFDMA: 5.45MHz,9.75MHz,14.75MHz,19.75MHz,24.75MHz,29.75MHz  5.45MHz,9.75MHz,14.75MHz,19.75MHz,24.75MHz,29.75MHz TD-SCDMA: 1015kHz,1815kHz,2.3MHz,4MHz, 4MHz,4MHz  1785kHz,2385kHz,3.5MHz, 3.5MHz ,3.5MHz ,3.5MHz 1xEVDO: 795.0kHz, 1.995MHz, 4.015MHz, 4.003125MHz, 12.5MHz, 12.5MHz 1.995MHz, 4.015MHz, 4.015MHz, 4.015MHz, 4.015MHz, 4.015MHz DTMB: 4.2MHz, 6MHz, 12MHz, 12MHz, 12MHz, 12MHz DVB-T/H: 4.2MHz, 6MHz, 12MHz, 12MHz, 12MHz, 12MHz ISDB-T: 2.86MHz, 3.0MHz, 4.36MHz, 15.0MHz, 15.0MHz, 15.0MHz CMMB: 4.2MHz, 8.0MHz, 12.0MHz,12.0MHz, 12.0MHz, 12.0MHz LTE, LTETDD: 5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz 985.0 kHz, 4.50 MHz,5.5001 MHz,9.50 MHz,20 MHz,40MHz
State Saved	Saved in instrument state.
Min	Start Freq plus (+) 100 Hz (for that offset)
Max	500 MHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Sweep Time**

Specifies the sweep time for the currently selected offset and enables you to toggle this function On or Off for each offset.

Key Path	Meas Setup, Offset/Limit
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD

<b>Remote Command</b>	<pre>[ :SENSE]:SEMAsk:OFFSet[1] 2:LIST:SWEep:TIME &lt;time&gt;,&lt;time&gt;,&lt;time&gt;,&lt;time&gt;,&lt;time&gt;,&lt;time&gt;  [ :SENSE]:SEMAsk:OFFSet[1] 2:LIST:SWEep:TIME?  [ :SENSE]:SEMAsk:OFFSet[1] 2:LIST:SWEep:TIME:AUTO ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0, ON OFF 1 0  [ :SENSE]:SEMAsk:OFFSet[1] 2:LIST:SWEep:TIME:AUTO?</pre>
<b>Example</b>	<pre>SEM:OFFS2:LIST:SWE:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms  SEM:OFFS2:LIST:SWE:TIME?  SEM:OFFS2:LIST:SWE:TIME:AUTO ON, ON, ON, ON, OFF, OFF  SEM:OFFS2:LIST:SWE:TIME:AUTO?</pre>
<b>Notes</b>	<p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.</p>
<b>Couplings</b>	<p>When the sweep time is set manually, Mode coupling is set to MANUAL</p> <p>If the current mode is DVB-T/H, this value will be modified automatically according to the output power of the transmitter which is less or more than 25W.</p> <p>If the current mode is ISDB-T, this value will be modified automatically according to the limit type.</p>
<b>Preset</b>	<p>Automatically calculated</p> <p>ON,ON,ON,ON,ON,ON</p>
<b>State Saved</b>	<p>Saved in instrument state.</p>
<b>Min</b>	<p>1 ms</p>
<b>Max</b>	<p>10 s</p>
<b>Backwards Compatibility SCPI</b>	<pre>[ :SENSE]:SEMAsk:OFFSet[1] 2:LIST:SWEep[:TIME]</pre>
<b>Modified at S/W Revision</b>	<p>A.02.00</p>
<b>Modified at S/W Revision</b>	<p>A.03.00</p>
<b>Initial S/W Revision</b>	<p>Prior to A.02.00</p>

### Offset Side

Specifies which offset side to measure.

You can turn off (not use) specific offsets with [:SENSE]:SEMAsk:OFFSet[n]:LIST:STATe.

Spectrum Emission Mask Measurement  
**Meas Setup**

BOTH - both of the negative (lower) and positive (upper) sidebands

NEGative - negative (lower) sideband only

POSitive - positive (upper) sideband only

Key Path	Meas Setup, Offset/Limit
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:SIDE BOTH   NEGative   POSitive, BOTH   NEGative   POSitive, BOTH   NEGa tive   POSitive, BOTH   NEGative   POSitive, BOTH   NEGative   POSi tive, BOTH   NEGative   POSitive  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:SIDE?
Example	SEM:OFFS:LIST:SIDE BOTH SEM:OFFS:LIST:SIDE?
Notes	OFFSet1 is for BTS, 2 for MS. Default is BTS.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Preset	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
State Saved	Saved in instrument state.
Range	Neg Both Pos
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Res BW**

Specifies which Resolution BW filter to use when measuring the currently selected offset.

Offset Res BW Mode allows the instrument to determine the optimum Resolution BW filter to use when measuring the currently selected offset.. When changing the Meas BW parameter, if the Res BW needs to be changed to adhere to the rule

$$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset}),$$

where N is the multiplier, this setting will automatically be changed to manual.

Key Path	Meas Setup, Offset/Limit
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO modeDTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD

<p><b>Remote Command</b></p>	<pre>[ :SENSe] :SEMAsk:OFFSet[1]   2:LIST:BANDwidth[:RESolution] &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;  [ :SENSe] :SEMAsk:OFFSet[1]   2:LIST:BANDwidth[:RESolution] ?  [ :SENSe] :SEMAsk:OFFSet[1]   2:LIST:BANDwidth[:RESolution] :AUTO OFF ON 1 0, OFF ON 1 0, OFF ON 1 0, OFF ON 1 0, OFF ON 1 0, OFF ON 1 0  [ :SENSe] :SEMAsk:OFFSet[1]   2:LIST:BANDwidth[:RESolution] :AUTO?</pre>
<p><b>Example</b></p>	<pre>SEM:OFFS2:LIST:BAND 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz  SEM:OFFS2:LIST:BAND?  SEM:OFFS:LIST:BAND:AUTO 1,1,1,1,1,1  SEM:OFFS:LIST:BAND:AUTO?</pre>
<p><b>Notes</b></p>	<p>Comma separated list of 6 values. Sub op code OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.</p>
<p><b>Couplings</b></p>	<p>Coupled to Start and Stop offset and Meas BW multiplier. This parameter must adhere to the rule <math>(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})</math>, where N is the multiplier. If the multiplier is changed, the Res BW will be changed to ensure this. When set manually, Res BW Coupling is set to manual.</p>

Spectrum Emission Mask Measurement  
**Meas Setup**

Preset	SA: 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz WCDMA: 30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz C2K: 3.00 kHz, 30.00 kHz, 30.00 kHz, 6.2 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 30.00 kHz, 6.2 kHz, 1.000 MHz, 1.000 MHz, 1.00 MHz WIMAX OFDMA: 100 KHz, 100 KHz, 100 KHz, 100 KHz, 100 KHz, 100 KHz  100 KHz, 100 KHz, 100 KHz, 100 KHz, 100 KHz, 100 KHz TD-SCDMA: 30 kHz, 30 kHz, 30 kHz, 50 kHz, 1 MHz, 1 MHz  30 kHz, 30 kHz, 50 kHz, 1 MHz, 1 MHz, 1 MHz 1xEVDO: 30.00 kHz, 30.00 kHz, 30.00 kHz, 6.2 kHz, 1.000 MHz, 1.000 MHz 30.00 kHz, 30.00 kHz, 30.00 kHz, 30.00 kHz, 30.00 MHz, 30.00 MHz DTMB: 3.9kHz, 3.9kHz, 3.9kHz, 3.9kHz, 3.9kHz, 3.9kHz DVB-T/H: 3.9kHz, 3.9kHz, 3.9kHz, 3.9kHz, 3.9kHz, 3.9kHz ISDB-T: 10.0kHz, 10.0kHz, 10.0kHz, 10.0kHz, 10.0kHz, 10.0kHz CMMB: 3.9kHz, 3.9kHz, 3.9kHz, 3.9kHz, 3.9kHz, 3.9kHz LTE, LTETDD: 51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz 15.0kHz, 510kHz,1.0MHz,1.0MHz,1.0MHz,1.0MHz OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF
State Saved	Saved in instrument state.
Min	1 Hz
Max	8 MHz
Backwards Compatibility SCPI	[:SENSe]:SEMask:OFFSet[1] 2:LIST:BWIDth[:RESolution]
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Meas BW**

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

Meas BW is multiplier integer number. It shows a ratio between Integration BW and Resolution BW of the measurement result.

$$\text{Integ BW} = \text{Meas BW} * \text{Resolution BW}$$

Integration BW is desired resolution bandwidth and Resolution BW is actual bandwidth for sweep. Measurement sweeps with Resolution BW and Meas BW compensates sweep resolution bandwidth to Integration BW.

If you set this parameter greater than 1, you can set Resolution BW narrower to avoid carrier power leakage effect to the offset power integration.

Key Path	<b>Meas Setup, Offset/Limit</b>
----------	---------------------------------



Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/HISDB-T, CMMB, LTE, LTETDD
Remote Command	[ :SENSE ] :SEMAsk:OFFSet [1]   2 :LIST:BA NDwidth:IMULti <integer>, <integer>, <integer>, <integer>, <integer>, <inte ger> [ :SENSE ] :SEMAsk:OFFSet [1]   2 :LIST:BA NDwidth:IMULti?
Example	SEM:OFFS2:LIST:BA ND:IMUL 1,1,1,1,1,1 SEM:OFFS2:LIST:BA ND:IMUL?
Notes	Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INST Rument:SELect to set the mode.
Couplings	This parameter must adhere to the rule (N x Res BW) <= (Stop freq of the offset - Start freq of the offset), where N is the multiplier. If the Res Bw is changed, the multiplier will be changed to ensure this.
Preset	SA: 1, 1, 1, 1, 1, 1 WCDMA: 1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1 C2K: 10, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 WIMAX OFDMA: 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 TD-SCDMA:1, 1, 1, 20, 1, 1 1, 1, 20, 1, 1, 1 1xEVDO: 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 DTMB: 1, 1, 1, 1, 1, 1 DVB-T/H: 1, 1, 1, 1, 1, 1 ISDB-T: 1, 1, 1, 1, 1, 1 CMMB: 1, 1, 1, 1, 1, 1 LTE: 2, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1 LTETDD: 2, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1
State Saved	Saved in instrument state.
Min	1
Max	1000
Backwards Compatibility SCPI	[ :SENSe ] :SEMAsk:OFFSet [1]   2 :LIST:BWIDth:IMULti
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

Spectrum Emission Mask Measurement  
**Meas Setup**

**Video BW**

Changes the analyzer post-detection filter.

Key Path	Meas Setup, Offset/Limit
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/HISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	<pre>[ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:BAWdwidth:VIDeo &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:BAWdwidth:VIDeo?  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:BAWdwidth:VIDeo:AUTO OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:BAWdwidth:VIDeo:AUTO?</pre>
Example	<pre>SEM:OFFS2:LIST:BAWd:VID 3.00 kHz, 3.00 kHz, 3.00 kHz, 100.0 kHz,100.0 kHz, 100.0 kHz  SEM:OFFS2:LIST:BAWd:VID?  SEM:OFFS2:LIST:BAWd:VID:AUTO ON, ON, ON, ON, ON, ON  SEM:OFFS2:LIST:BAWd:VID:AUTO?</pre>
Notes	<p>Comma separated list of 6 values. Sub op code OFFSet1is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.</p>
Preset	<pre>ISDB-T: 1.0kHz, 1.0kHz, 1.0kHz, 1.0kHz, 1.0kHz, 1.0kHz  Other than ISDB-T: Automatically Calculated  ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON  ISDB-T: OFF, OFF, OFF, OFF, OFF, OFF  OFF, OFF, OFF, OFF, OFF, OFF</pre>
State Saved	Saved in instrument state.
Min	1 Hz
Max	50 MHz
Backwards Compatibility SCPI	[ :SENSe]:SEMAsk:OFFSet[1] 2:LIST:BAWIDth:VIDeo
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## VBW/RBW

Selects the ratio between the video and resolution bandwidths.

Key Path	Meas Setup, Offset/Limit
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
Remote Command	<pre>[ :SENSE] :SEMask:OFFSet [1]   2 :LIST: BANDwidth:VIDeo:RATio &lt;real&gt;, &lt;real&gt;, &lt;real&gt;, &lt;real&gt;, &lt;real&gt;, &lt;real&gt;  [ :SENSE] :SEMask:OFFSet [1]   2 :LIST: BANDwidth:VIDeo:RATio?  [ :SENSE] :SEMask:OFFSet [1]   2 :LIST: BANDwidth:VIDeo:RATio: AUTO OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1, OFF   ON   0   1  [ :SENSE] :SEMask:OFFSet [1]   2 :LIST: BANDwidth:VIDeo:RATio: AUTO?</pre>
Example	<pre>SEM:OFFS2:LIST:BAND:VID:RAT 0.1, 0.1, 0.1, 0.1, 0.1, 0.1 SEM:OFFS2:LIST:BAND:VID:RAT? SEM:OFFS2:LIST:BAND:VID:RAT:AUTO ON, ON, ON, ON, ON, ON SEM:OFFS2:LIST:BAND:VID:RAT:AUTO?</pre>
Notes	<p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.</p>
Preset	<pre>SA, WCDMA, C2K, LTE, LTETDD: 0.01, 0.01, 0.01, 0.01, 0.01, 0.01 0.01, 0.01, 0.01, 0.01, 0.01, 0.01 WIMAX OFDMA: 0.3, 0.3, 0.3, 0.3, 0.3, 0.3 TD-SCDMA: 10, 10, 10, 10, 1, 1  10, 10, 10, 1, 1, 1 1xEVDO: 10, 10, 10, 10, 10, 10 10, 10, 10, 10, 10, 10 DTMB: 10, 10, 10, 10, 10, 10 DVB-T/H: 10, 10, 10, 10, 10, 10 ISDB-T: 0.1, 0.1, 0.1, 0.1, 0.1, 0.1 CMMB: 10, 10, 10, 10, 10, 10 OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF</pre>
State Saved	Saved in instrument state.
Min	0.00001
Max	3000000

Spectrum Emission Mask Measurement  
**Meas Setup**

Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Limits**

Accesses a menu that enables you to set the power limits for start and stop frequencies of the selected offsets.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

**Abs Start**

Sets the absolute power level limit at the start frequency for the selected offset. The absolute power level limit ranges from -200 to +50 dBm.

The fail condition for each offset channel is set remotely by [:SENSE]:SEMask:OFFSet[n]:LIST:TEST.

You can turn off (not use) specific offset channels remotely with [:SENSE]:SEMask:OFFSet[n]:LIST:STATE.

The SCPI query returns the five (5) sets of real values currently set to the absolute power test limits.

Key Path	<b>Meas Setup, Offset/Limit, Limits</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[:SENSE]:SEMask:OFFSet[1] 2:LIST:STARt:ABSolute <real>, <real>, <real>, <real>, <real>, <real> [:SENSE]:SEMask:OFFSet[1] 2:LIST:STARt:ABSolute?
Example	SEM:OFFS2:LIST:STAR:ABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm SEM:OFFS2:LIST:STAR:ABS?
Notes	Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SELEct to set the mode.

Couplings	<p>Coupled to Abs Stop if coupling set to “Couple”, that is, the Start value is equal to the Stop value.</p> <p>If the current mode is DVB-T/H, this value will be modified automatically according to the limit type and the output power of the transmitter which is less or more than 25W.</p> <p>If the current mode is ISDB-T, this value will be modified automatically according to the limit type.</p>
Preset	<p>SA, WIMAX OFDMA: -14.00 dBm , -14.00 dBm , -26.00 dBm , -13.00 dBm , -13.00 dBm, -13.00 dBm</p> <p>WCDMA: -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm</p> <p>C2K: -27.00 dBm, -27.00 dBm, -27.00 dBm, -46.00 dBm, -13.00 dBm, -13.00 dBm -70.13 dBm, -70.13 dBm, -35.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm</p> <p>TD-SCDMA: -28 dBm, -28 dBm, -36 dBm, -21 dBm, -21 dBm, -21 dBm -71.3 dBm, -71.3 dBm, -56.07 dBm, -56.07 dBm, -56.07 dBm, -56.07 dBm</p> <p>1xEVDO: -27.0dBm, -27.00 dBm, -27.00 dBm, -46.00 dBm, -13.00 dBm, -13.00 dBm -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm</p> <p>DTMB: -14.0dBm, -14.0dBm, -26.0dBm, -13.0dBm, -13.0dBm, -13.0dBm</p> <p>DVB-T/H: 11.2dBm, -29dBm, -41dBm, -66dBm, -82dBm, -82dBm</p> <p>ISDB-T: 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm</p> <p>CMMB: 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm</p> <p>LTE, LTETDD: -5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5dBm, -8.5dBm, -11.5dBm, -23.5dBm, -23.5dBm, -23.5dBm</p>
State Saved	Saved in instrument state.
Min	-200 dBm
Max	50 dBm
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Abs Stop

Sets the absolute power level limit at the stop frequency for the selected offset. The absolute power level limit ranges from -200 to +50 dBm. You can also toggle this function between couple and manual. If set to Couple, the **Abs Stop** power level limit is coupled to **Abs Start** to result in a flat limit line. If set to Man, Abs Start and Abs Stop take different values to result in a sloped limit line.

The SCPI query returns the five (5) sets of real values currently set to the offset stop absolute power

Spectrum Emission Mask Measurement  
**Meas Setup**

limits.

Key Path	Meas Setup, Offset/Limit, Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	<pre>[ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:STOP:ABSolute &lt;real&gt;, &lt;real&gt;, &lt;real&gt;, &lt;real&gt;, &lt;real&gt;, &lt;real&gt;  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:STOP:ABSolute?  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:STOP:ABSolute:COUPle ON   OFF   1   0, ON   OFF   1   0, ON   OFF   1   0, ON   OFF   1   0, ON   OFF   1   0, ON   OFF   1   0  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:STOP:ABSolute:COUPle?</pre>
Example	<pre>SEM:OFFS:LIST:STOP:ABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm  SEM:OFFS1:LIST:STOP:ABS?  SEM:OFFS:LIST:STOP:ABS:COUP ON, OFF, ON, ON, ON, ON  SEM:OFFS:LIST:STOP:ABS:COUP?</pre>
Notes	<p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SELEct to set the mode.</p>
Couplings	<p>Coupled to Abs Start if coupling set to “Couple”, that is, the Stop value is equal to the Start value.</p> <p>If the current mode is DVB-T/H, this value will be modified automatically according to the limit type and the output power of the transmitter which is less or more than 25W.</p> <p>If the current mode is ISDB-T, this value will be modified automatically according to the limit type.</p>

Preset	<p>SA, WIMAX OFDMA: -14.00 dBm, -26.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm</p> <p>WCDMA: -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm</p> <p>C2K: -27.00 dBm, -27.00 dBm, -27.00 dBm, -46.00 dBm, -13.00 dBm, -13.00 dBm -70.13 dBm, -70.13 dBm, -35.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm</p> <p>TD-SCDMA: -28 dBm, -36 dBm, -36 dBm, -21 dBm, -21 dBm, -21 dBm -71.3 dBm, -71.3 dBm, -56.07 dBm, -56.07 dBm, -56.07 dBm, -56.07 dBm</p> <p>1xEVDO: -27dBm, -27.00 dBm, -27.00 dBm, -46.00 dBm, -13.00 dBm, -13.00 dBm -70.13 dBm, -70.13 dBm,  -70.13 dBm, -70.13 dBm,  -70.13 dBm, -70.13 dBm</p> <p>DTMB: -14.0dBm, -26.0dBm, -26.0dBm, -13.0dBm, -13.0dBm, -13.0dBm</p> <p>DVB-T/H: -29dBm, -41dBm, -66dBm, -82dBm, -82dBm, -82dBm</p> <p>ISDB-T: 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm</p> <p>CMMB: 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm, 50.0dBm</p> <p>LTE, LTETDD:-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</p> <p>SA,WIMAX OFDMA: ON, OFF, ON, ON, ON, ON, ON</p> <p>WCDMA: ON, OFF, ON, ON, ON, ON ON, ON, ON, ON, ON, ON</p> <p>C2K: ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, ON, OFF</p> <p>TD-SCDMA: ON, OFF, ON, ON, ON, ON ON, ON, ON, ON, ON, ON</p> <p>1xEVDO: ON, ON, ON, ON, ON, OFF  ON, ON, ON, ON, ON, OFF</p> <p>DTMB: ON, OFF, ON, ON, ON, ON</p> <p>DVB-T/H: OFF, OFF, OFF, OFF, OFF, OFF</p> <p>ISDB-T: OFF, OFF, OFF, OFF, OFF, OFF</p> <p>CMMB: OFF, OFF, OFF, OFF, OFF, OFF</p> <p>LTE, LTETDD: OFF, ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON</p>
State Saved	Saved in instrument state.
Min	-200 dBm
Max	50 dBm
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

Spectrum Emission Mask Measurement  
**Meas Setup**

**Rel Start**

Sets a relative power level limit at the start frequency for the selected offset. The relative power level limit ranges from -200 to +50 dBc.

The fail condition is set remotely by [:SENSE]:SEMAsk:OFFSet[n]:LIST:TEST for each offset channel test.

You can turn off (not use) specific offset channels remotely with [:SENSE]:SEMAsk:OFFSet[n]:LIST:STATe.

The SCPI query returns the five (5) sets of real values currently set to the relative power test limits.

Key Path	Meas Setup, Offset/Limit, Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[:SENSE]:SEMAsk:OFFSet[1] 2:LIST:STARt:RCARrier <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> [:SENSE]:SEMAsk:OFFSet[1] 2:LIST:STARt:RCARrier?
Example	SEM:OFFS:LIST:STAR:RCAR -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB SEM:OFFS:LIST:STAR:RCAR?
Notes	See the following table for the default values for each Radio Standard. Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	Coupled to Rel Stop is coupling set to “Couple”, that is, Start is made the same as Stop. If the current mode is DVB-T/H, this value will be modified automatically according to the limit type the output power of the transmitter which is less or more than 25W. If the current mode is ISDB-T, this value will be modified automatically according to the limit type.



Preset	SA: -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB WCDMA: -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB C2K: -45.00 dB, -45.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -42.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB WIMAX OFDMA: 0 dB, -25 dB, -32 dB, -50 dB, -50 dB, -50 dB TD-SCDMA: -54.00 dB, -54.00 dB, -62.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -35.00 dB, -49.00 dB, -49.00 dB, -49.00 dB, -49.00 dB, -49.00 dB 1xEVDO: -45dBc, -45.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -42dBc, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB DTMB: -32.8dB, -83dB, -95dB, -120dB, -120dB, -120dB DVB-T/H: -30dB, -30dB, -30dB, -30dB, -30dB, -30dB ISDB-T: -27.4dB, -47.4dB, -54.4dB, XXX, 50dB, 50dB; XXX is coupled with the total power reference, it is -57.4dB when $P \leq 0.025W$ , -67.4dB when $P = 0.25W$ , $-(73.4 + 10\log P)$ dB when $0.25W < P \leq 2.5W$ or $0.025W < P < 0.25W$ , -77.4dB when $P > 2.5W$ . CMMB: -37dB, -72dB, -84dB, -90dB, -90dB, -90dB LTE, LTETDD: 0dB, 0dB, 0dB, 0dB, 0dB, 0dB, 0dB, 0dB, 0dB, 0dB, 0dB, 0dB
State Saved	Saved in instrument state.
Min	-200 dB
Max	50 dB
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Rel Stop**

Sets a relative power level limit at the stop frequency for the selected offset. The relative power level limit ranges from -200 to +50 dBc.

The fail condition is set remotely by [:SENSe]:SEMAsk:OFFSet[n]:LIST:TEST for each offset channel.

You can turn off (not use) specific offset channels remotely with [:SENSe]:SEMAsk:OFFSet[n]:LIST:STATE.

The SCPI query returns the five (5) sets of real values currently set to the offset stop relative power limits.

Key Path	<b>Meas Setup, Offset/Limit, Limits</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD

Spectrum Emission Mask Measurement  
**Meas Setup**

<p><b>Remote Command</b></p>	<pre>[ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:STOP:RCARrier &lt;rel_ampl&gt;, &lt;rel_ampl&gt;, &lt;rel_ampl&gt;, &lt;rel_ampl&gt;, &lt;rel_ampl&gt;, &lt;rel_ampl&gt;  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:STOP:RCARrier?  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:STOP:RCARrier:COUPle ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0  [ :SENSe] :SEMAsk:OFFSet [1]   2 :LIST:STOP:RCARrier:COUPle?</pre>
<p>Example</p>	<pre>SEM:OFFS:LIST:STOP:RCAR -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB  SEM:OFFS:LIST:STOP:RCAR?  SEM:OFFS:LIST:STOP:RCAR:COUP ON, ON, ON, ON, ON, ON  SEM:OFFS:LIST:STOP:RCAR:COUP?</pre>
<p>Notes</p>	<p>See the following table for the default values for each Radio Standard.</p> <p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode.</p>
<p>Couplings</p>	<p>Coupled to Rel Start if coupling set to “Couple”, that is, Start is made the same as Stop.</p> <p>If the current mode is DVB-T/H, this value will be modified automatically according to the limit type and the output power of the transmitter which is less or more than 25W.</p> <p>If the current mode is ISDB-T, this value will be modified automatically according to the limit type.</p>

Preset	<p>SA: -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB</p> <p>WCDMA: -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB</p> <p>C2K: -45.00 dB, -45.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB -42.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB</p> <p>WIMAX OFDMA: -25 dB, -32 dB, -50 dB, -50 dB, -50 dB, -50 dB</p> <p>TD-SCDMA: -54.00 dB, -62.00 dB, -62.00 dB, -47.00 dB, -47.00 dB, -47.00 dB -49.00 dB, -64.00 dB, -49.00 dB, -49.00 dB, -49.00 dB, -49.00 dB</p> <p>1xEVDO: -45dB, -45.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB -42dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB</p> <p>DTMB: -83dB, -95dB, -120dB, -120dB, -120dB, -120dB</p> <p>DVB-T/H: -73dB, -85dB, -110dB, -126dB, -126dB, -126dB</p> <p>ISDB-T: -47.4dB, -54.4dB, XXX, 50dB, 50dB, 50dB; XXX is coupled with the total power reference P, it is -57.4dB when <math>P \leq 0.025W</math>, -67.4dB when <math>P = 0.25W</math>, <math>-(73.4 + 10\log P)</math>dB when <math>0.25W &lt; P \leq 2.5W</math> or <math>0.025W &lt; P &lt; 0.25W</math>, -77.4dB when <math>P &gt; 2.5W</math>.</p> <p>CMMB: -72dB, -84dB, -90dB, -90dB, -90dB, -90dB</p> <p>LTE, LTETDD: -0dB, -0dB, -0dB, -0dB, -0dB, -0dB</p> <p>SA: ON, ON, ON, ON, ON, ON</p> <p>WCDMA: ON, ON, ON, ON, ON, ON OFF, OFF, OFF, ON, ON, ON</p> <p>C2K: ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, ON, OFF</p> <p>WIMAX OFDMA: OFF, OFF, OFF, ON, ON, ON  OFF, OFF, OFF, ON, ON, ON</p> <p>TD-SCDMA: ON, OFF, ON, ON, ON, ON OFF, OFF, ON, ON, ON, ON</p> <p>1xEVDO: ON, ON, ON, ON, ON, OFF  ON, ON, ON, ON, ON, OFF</p> <p>DTMB: OFF, OFF, OFF, OFF, OFF, OFF</p> <p>DVB-T/H: ON, ON, ON, ON, ON, ON</p> <p>ISDB-T: OFF, OFF, OFF, OFF, OFF, OFF</p> <p>CMMB: OFF, OFF, OFF, OFF, OFF, OFF</p> <p>LTE, LTETDD: ON, ON, ON, ON, ON, ON</p>
State Saved	Saved in instrument state.
Min	-200 dB
Max	50 dB
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Fail Mask**

Selects one of the logic keys for fail conditions between the measurement results and the test limits:

**Absolute** and **Relative** both check the results against the respective limit.

**OR** checks against both limits, failing if either of the limits is broken.

**AND** will only display a fail if both of the limits are broken.

The absolute or relative power limit value for each offset channel can be set remotely with  
[:SENSe]:SEMask:OFFSet[n]:LIST:ABSolute or [:SENSe]:SEMask:OFFSet[n]:LIST:RCARrier.

You can turn off (not use) specific offset channels remotely with  
[:SENSe]:SEMask:OFFSet[n]:LIST:STATe.

Key Path	Meas Setup, Offset/Limit, Limits
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :SEMask:OFFSet [ 1 ]   2 :LIST:TEST ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative, ABSolute   AND   OR   RELative [ :SENSe ] :SEMask:OFFSet [ 1 ]   2 :LIST:TEST?
Example	SEM:OFFS:LIST:TEST ABS, ABS, ABS, ABS, ABS, ABS SEM:OFFS:LIST:TEST?
Notes	See the following table for the default values for each Radio Standard. Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	None If the current mode is DVB-T/H, this value will be modified automatically according to the limit type and the output power of the transmitter which is less or more than 25W.

Preset	SA: ABS, ABS, ABS, ABS, ABS, ABS WCDMA: ABS, ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND C2K: REL, REL, REL, ABS, REL, REL AND, AND, ABS, REL, REL, REL WIMAX OFDMA: REL, REL, REL, REL, REL, REL REL, REL, REL, REL, REL, REL TD-SCDMA: ABS, ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND 1xEVDO: REL, REL, REL, ABS, REL, REL AND, AND, AND, OR, AND, AND DTMB: REL, REL, REL, REL, REL, REL DVB-T/H: ABS, ABS, ABS, ABS, ABS, ABS ISDB-T: REL, REL, REL, REL, REL, REL CMMB: REL, REL, REL, REL, REL, REL, LTE: ABS, ABS, ABS, ABS, ABS, ABS LTETDD: ABS, ABS, ABS, ABS, ABS, ABS
State Saved	Saved in instrument state.
Range	Absolute Relative Abs AND Rel Abs OR Rel
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Method

Sets the measurement method

Integ BW-enables you to set the channel integration bandwidth.

RRC Weight-selects Root Raised Cosine (RRC) filtering of the carriers and all adjacent channels. The  $\alpha$  value (rolloff) for the filter is set to the value of the Filter Alpha parameter.

Key Path	Meas Setup
Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :SEMAsk:FILTer [ :RRC] [ :STATe] OFF ON 0 1 [ :SENSe] :SEMAsk:FILTer [ :RRC] [ :STATe] ?
Example	SEM:FILT ON SEM:FILT?

Spectrum Emission Mask Measurement  
**Meas Setup**

Notes	For the CDMA2K and CDMA1xEVDO mode, this key is not available. 1 ON = RRC Weight, 0 OFF = IntegBW You must be in the Spectrum Analysis mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode W-CDMA mode or TD-SCDMA mode to use this command. Use :INSTRument:SElect to set the mode.
Preset	SA, WIMAX OFDMA, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD: OFF WCDMA, TD-SCDMA, DTMB: ON
State Saved	Saved in instrument state.
Range	RRCWeight IntegBW
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Filter Alpha

Sets the alpha value for the RRC Filter.

Key Path	Meas Setup
Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :SEMAsk:FILTer [ :RRC] :ALPHa <real> [ :SENSe] :SEMAsk:FILTer [ :RRC] :ALPHa?
Example	SEM:FILT:ALPH 0.3 SEM:FILT:ALPH?
Notes	For the CDMA2K and CDMA1xEVDO mode, this key is not available. You must be in the Spectrum Analysis mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, W-CDMA mode or TD-SCDMA mode to use this command. Use :INSTRument:SElect to set the mode.
Preset	0.22 DTMB: 0.05
State Saved	Saved in instrument state.
Min	0.01
Max	1.0
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Meas Preset

Restores all the measurement parameters to their default values.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CONFIgure:SEMAsk
Example	CONF:SEM
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	Selecting Meas Preset will restore all measurement parameters to their default values.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Limits State(Only for TD-SCDMA)

The key “Limits State” is only displayed in the TD-SCDMA mode. The mask lines could be drawn in two different ways, according to the 3GPP standard for the base station when the key’s value is “Std”; or by the user-defined specifications listed in the Offset/Limits menu.

Key Path	Meas Setup
Mode	TD-SCDMA
<b>Remote Command</b>	[ :SENSE ] :SEMAsk:LIMits STD MAN [ :SENSE ] :SEMAsk:LIMits?
Example	SEM:LIM STD SEM:LIM?
Notes	You must be in the TD-SCDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Dependencies	See Couplings

Couplings	<p>When the value of the “Limits” key is Std, the parameters displayed on the Offset/Limits panel will be modified depending on the carrier power, which corresponds to the measurement standard of the base station. All the keys except “Offset”, “Relative Atten”, “Offset Side” and “Limits” displayed on the “Offset/Limits” panel will be grayed out. All the keys displayed on the “Limits” panel will be grayed out as well.</p> <p>When the value of the “Limits” key is Man, all of the previous manual specifications will be restored, and the keys that were previously grayed out will be enabled again.</p>
Preset	MAN
State Saved	Saved in instrument state.
Range	STD   MAN
Initial S/W Revision	Prior to A.02.00

### Limits Type (Only for DVB-T/H)

The key “Limits Type” is only displayed in the DVB-T/H mode. The mask lines could be drawn in three different ways:

1. according to the non-critical case standard in ETSI 302–296 when the key’s value is “Non-Critical”
2. according to the critical case standard in ETSI 302–296 when the key’s value is “Critical”
3. specifications listed in the Offset/Limits menu or by the user-defined when the key’s value is “Manual”.

Key Path	<b>Meas Setup</b>
Mode	DVB-T/H
<b>Remote Command</b>	[:SENSe]:SEMask:LIMits:TYPE MANual NONCritical CRITical [:SENSe]:SEMask:LIMits:TYPE?
Example	SEM:LIM:TYPE NONC SEM:LIM:TYPE?
Notes	You must be in the DVB-T/H mode to use this command. Use :INSTRument:SElect to set the mode.



Couplings	<ol style="list-style-type: none"> <li>1. When current radio bandwidth is 5MHz or 6MHz, this key only has one option: Manual. The “Non-Critical” and “Critical” keys will be grayed out. So the default value is Manual after measurement preset.</li> <li>2. When current radio bandwidth is 7MHz or 8MHz, this key has three options: Manual, Non-Critical and Critical. The default value is Non-Critical after measurement preset.             <ol style="list-style-type: none"> <li>a. When the value of the “Limit Type” key is Non-Critical, the parameters displayed on the Offset/Limits panel will be modified automatically depending on the carrier power, according to the Non-critical case limits definition in ETSI 302–296, and the keys under the Offset/Limit except “Offset”, “Offset Side” and “Limits” will be grayed out. Meanwhile all the keys displayed on the “Limits” panel will be grayed out as well.</li> <li>b. When the value of the “Limit Type” key is Critical, the parameters displayed on the Offset/Limits panel will be modified automatically depending on the carrier power, according to the critical case limits definition in ETSI 302–296, and the keys under the Offset/Limit except “Offset”, “Offset Side” and “Limits” will be grayed out. Meanwhile all the keys displayed on the “Limits” panel will be grayed out as well.</li> <li>c. When the value of the “Limit Type” key is Manual, all of the previous manual specifications will be restored, and the keys that were previously grayed out will be enabled again.</li> </ol> </li> </ol>
Preset	NONCritical (if current radio bandwidth is 7MHz or 8MHz) Manual (if current radio bandwidth is 5MHz or 6MHz)
State Saved	Saved in instrument state.
Range	Manual Non-Critical Critical
Initial S/W Revision	A.02.00

### Limits Type (Only for ISDB-T)

The key “Limits Type” is only displayed in the ISDB-T mode. The mask lines could be drawn in six different ways according the following cases:

1. Limit Masks defined in “Transmission System For Digital Terrestrial Television Broadcasting”, ARIB-STD B31 Version 1.7
2. Non-critical case defined in Brazil ABNT NBR15601
3. Sub-critical case defined in Brazil ABNT NBR15601
4. Critical case defined in Brazil ABNT NBR15601
5. ISDB-Tsb case defined in “Transmission System for Digital Terrestrial Sound Broadcasting”, ARIB Standard, ARIB STD-B29
6. User-defined

Key Path	Meas Setup
Mode	ISDB-T
<b>Remote Command</b>	[ :SENSe] :SEMAsk:LIMits:TYPE MANual   JEITa   ANONcriticalASUBcritical   ACritical   TSB [ :SENSe] :SEMAsk:LIMits:TYPE?
Example	SEM:LIM:TYPE JEIT SEM:LIM:TYPE?
Notes	You must be in the ISDB-T mode to use this command. Use :INSTrument:SElect to set the mode.

Couplings	<ol style="list-style-type: none"> <li>1. When current radio standard is <b>ISDB-T</b>, this key has five options: “Manual”, “JEITA”, “ABNT Non-Critical”, “ABNT Sub-Critical” and “ABNT Critical”. The “ISDB-Tsb” key will be grayed out. The default value is “JEITA” after measurement preset             <ol style="list-style-type: none"> <li>a. When the value of the “Limit Type” key is “JEITA”, the parameters displayed on the Offset/Limits panel will be modified automatically depending on the total reference power, according to the spectrum mask definition in “Transmission System For Digital Terrestrial Television Broadcasting”, ARIB-STD B31, Version 1.7, and the keys under the Offset/Limit except “Offset”, “Offset Side” and “Limits” will be grayed out. Meanwhile all the keys displayed on the “Limits” panel will be grayed out as well.</li> <li>b. When the value of the “Limit Type” key is “ABNT Non-Critical”, the parameters displayed on the Offset/Limits panel will be modified automatically according to the Non-critical mask definition in Brazil “ABNT NBR 15601: Digital terrestrial television – Transmission System”, and the keys under the Offset/Limit except “Offset”, “Offset Side” and “Limits” will be grayed out. Meanwhile all the keys displayed on the “Limits” panel will be grayed out as well.</li> <li>c. When the value of the “Limit Type” key is “ABNT Sub-Critical”, the parameters displayed on the Offset/Limits panel will be modified automatically according to the Sub-critical mask definition in Brazil “ABNT NBR 15601: Digital terrestrial television – Transmission System”, and the keys under the Offset/Limit except “Offset”, “Offset Side” and “Limits” will be grayed out. Meanwhile all the keys displayed on the “Limits” panel will be grayed out as well.</li> <li>d. When the value of the “Limit Type” key is “ABNT Critical”, the parameters displayed on the Offset/Limits panel will be modified automatically according to the Critical mask definition in Brazil “ABNT NBR 15601: Digital terrestrial television – Transmission System”, and the keys under the Offset/Limit except “Offset”, “Offset Side” and “Limits” will be grayed out. Meanwhile all the keys displayed on the “Limits” panel will be grayed out as well.</li> <li>e. When the value of the “Limit Type” key is “Manual”, the parameters displayed on the Offset/Limits panel can be modified manually. When changing the “Limit Type” key from “Manual” to others, the current settings will be stored.</li> <li>f. If an adjacent channel is used for standard television broadcasting (excluding digital broadcasting and restricted to the effective radiation power that is less than ten times the own effective radiation power) within the own broadcasting area, the <math>-77.4\text{dB}</math> at <math>\pm 4.36\text{MHz}</math> (attenuation relative to average power P is <math>-77.4\text{ dB}/10\text{ kHz}</math> at the frequencies of <math>\pm 4.36\text{ MHz}</math> from the center frequency) should be applied regardless of the value of P." In this case, please change the Limit Type to Manual to do the SEM test.</li> </ol> </li> </ol>
-----------	--

Couplings (Cont.)	<p>2. When current radio standard is <b>ISDB-Tsb</b>, this key has only two options: “Manual” and “ISDB-Tsb”. The default value is “ISDB-Tsb” after measurement preset.</p> <p>a. When the value of the “Limit Type” key is “ISDB-Tsb”, the parameters displayed on the Offset/Limits panel will be modified automatically depending on the output signal power and the value of “Segment Number” which is under “Mode Setup” panel, according to the spectrum mask definition in “Transmission System for Digital Terrestrial Sound Broadcasting”, ARIB Standard, ARIB STD-B29, and the keys under the Offset/Limit except “Offset”, “Offset Side” and “Limits” will be grayed out. Meanwhile all the keys displayed on the “Limits” panel will be grayed out as well.</p> <p>b. When the value of the “Limit Type” key is “Manual”, the parameters displayed on the Offset/Limits panel can be modified manually. When changing the “Limit Type” key from “Manual” to others, the current settings will be stored.</p>
Preset	<p>JEITa (if current radio standard is ISDB-T)</p> <p>TSB (if current radio standard is ISDB-Tsb)</p>
State Saved	Saved in instrument state.
Range	Manual   ABNT Non-Critical   ABNT Sub-Critical   ABNT Critical   I SDB-Tsb
Initial S/W Revision	A.03.00



### Offset Frequency Define

This key allows you to select “Offset” definition. Each standard defines each “Offset” from Carrier.

- MeasBW Edge means the edge of resolution band width that is represented by Meas BW and Res BW settings. Actual center frequency of MeasBW and the limit line have ½ MeasBW offset when the MeasBW Edge is selected.

3GPP2 requires the “Carrier Center to MeasBW Edge” definition. And LTE conformance test requires “Carrier Edge to MeasBW Center” and/or “Carrier Edge to MeasBW Edge” definition

- CTOCenter – From carrier center to the center of offset measuring filter\*
- CTOEdge - From carrier center to the nominal –3dB point of the offset measuring filter\* closer to the carrier
- ETOCenter – From Center Frequency - Span of Ref Channel / 2 (for lower offset), Center Frequency + Span of Ref Channel / 2 (for upper offset) of the carrier closest to each offset to the center of offset measuring filter\*
- ETOEdge - From Center Frequency - Span of Ref Channel / 2 (for lower offset), Center Frequency + Span of Ref Channel / 2 (for upper offset) of the carrier closest to each offset to the nominal –3dB point of the offset measuring filter\* closer to the carrier
- \*Measuring filter = Meas BW (N x Res BW)

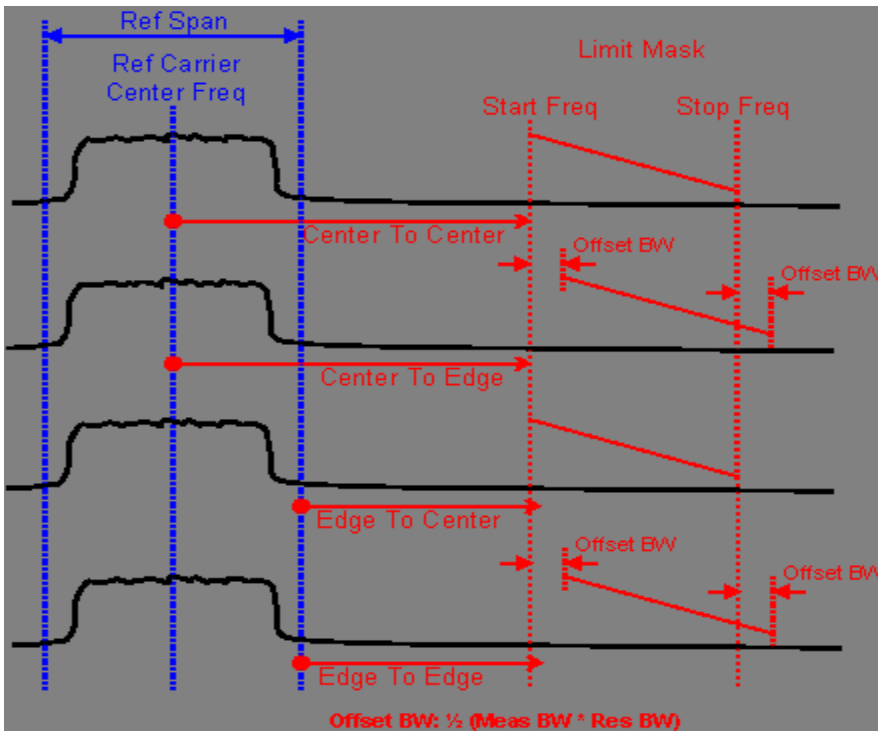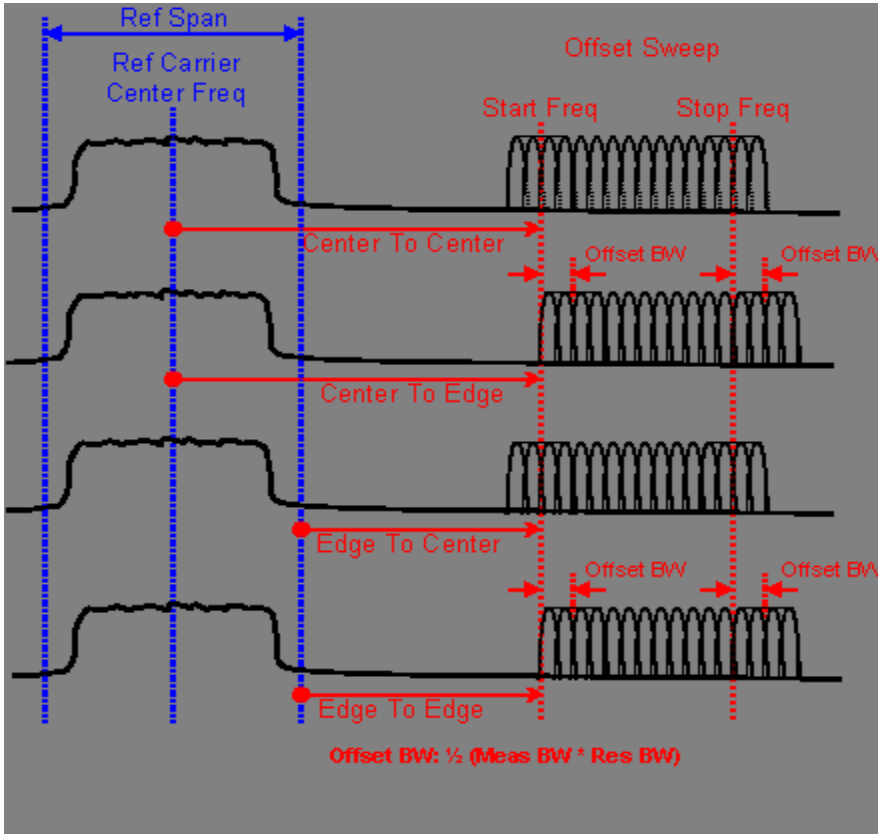

Key Path	Meas Setup, Offset/Limits
----------	---------------------------

Spectrum Emission Mask Measurement  
**Meas Setup**

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :SEMAsk:OFFSet [ 1 ]   2 :TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge [ :SENSe ] :SEMAsk:OFFSet [ 1 ]   2 :TYPE?
Example	SEM:OFFS:TYPE ETOC SEM:OFFS:TYPE?
Notes	You must be in the mode that includes SEM measurements to use this command. Use :INSTrument:SELEct to set the mode.
Preset	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, ISDB-T, CMMB: CTOC C2K: CTOE LTE: ETOC LTETDD: ETOC
State Saved	Saved in instrument state.
Range	Carrier Center To Meas BW Center Carrier Center To Meas BW Edge Carrier Edge To Meas BW Center Carrier Edge To Meas BW Edge
Initial S/W Revision	A.03.00

---

## **Mode**

See [“Mode” on page 1635](#) in the section "Common Measurement Functions" for more information.

## **Mode Setup**

See “[Mode Setup](#)” on page 1651 in the section "Common Measurement Functions" for more information.



---

## Peak Search

There is no 'Peak Search' supported in Spectrum Emission Mask so this front-panel key will display a blank key menu when pressed.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## **Recall**

See “[Recall](#)” on page 189 in the section "Common Measurement Functions" for more information.

---

## **Restart**

See [“Restart” on page 1671](#) in the section "Common Measurement Functions" for more information.

## **Save**

See “[Save](#)” on page 205 in the section "Common Measurement Functions" for more information.

---

## **Single**

See “[Single \(Single Measurement/Sweep\)](#)” on page 1677 in the section "Common Measurement Functions" for more information.

## **Source**

See “[Source](#)” on page 1679 in the section "Common Measurement Functions" for more information.

---

## Span X Scale

Span X Scale functionality is not supported in Spectrum Emission Mask, so this front-panel key will display a blank key menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## Sweep/Control

Displays a menu that enables you to set up and control the sweep time, gate method, and source of the current measurement. See [“Sweep/Control” on page 1687](#) in the "Common Measurement Functions" section for more information.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Pause

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when paused. See [“Pause/Resume” on page 1698](#) in “Common Measurement Functions” for more details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Gate

Accesses a menu that enables you to control the gating function .

The Gate functionality is used to view signals best viewed by qualifying them with other events. See [“Gate ” on page 1699](#) in “Common Measurement Functions” for more details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00



## Trace/Detector

Accesses a menu of functions that enable you to control trace and detector for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Trace Type

Allows you to select the type of trace for the current measurement. The menu contains a 1-of-N selection of the trace type (Clear Write, Average, Max Hold, Min Hold).

Key Path	Trace/Detector
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:TRACe:SEMask:TYPE WRITe AVERAge MAXHold MINHold :TRACe:SEMask:TYPE?
Example	TRAC:SEM:TYPE MINH TRAC:SEM:TYPE?
Notes	WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold
Couplings	When Detector setting is “Auto” ([:SENSe]:SEMask:DETECTOR:AUTO?), Detector ([:SENSe]:SEMask:DETECTOR[:FUNCTION]?) switches aligning with the switch of this parameter: “NORMAl” with WRITe (Clear Write), “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold.
Preset	AVERAge
State Saved	Saved in instrument state.
Range	WRITe AVERAge MAXHold MINHold
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Chan Detector

Accesses a menu of functions that enable you to control the detectors for reference channel. The

## Spectrum Emission Mask Measurement

### Trace/Detector

following choices are available:

- Auto- the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.
- Normal-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average-the detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales).
- Peak-the detector determines the maximum of the signal within the sweep points.
- Sample-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak-the detector determines the minimum of the signal within the sweep points.

Key Path	<b>Trace/Detector</b>
Initial S/W Revision	Prior to A.02.00

### Chan Detector Selection

Selects the detector mode for the reference channel.

Key Path	<b>Trace/Detector</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :SEMAsk:DETector:CARRier[ :FUNctIon] AVERAge NEGAtive NORMAl POSitive SAMPlE [ :SENSe ] :SEMAsk:DETector:CARRier[ :FUNctIon]?
Example	SEM:DET:CARR NEG SEM:DET:CARR?
Notes	When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings.  Note: This detector setting affects the reference channel. There is not a per trace detector.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.
Couplings	See Couplings in the Trace Type section.
Preset	AVERAge
State Saved	Saved in instrument state.

Range	Normal Average Peak Sample Negative Peak
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Chan Detector Auto

Sets the detector to the default detection mode for the reference channel. This mode is dependent upon the current reference channel conditions.

Key Path	Trace/Detector
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :SEMAsk:DETEctor:CARRier:AUTO ON OFF 1 0 [ :SENSe] :SEMAsk:DETEctor:CARRier:AUTO?
Example	SEM:DET:CARR:AUTO OFF SEM:DET:CARR:AUTO?
Notes	See Couplings in the Trace Type section.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Offset Detector

Accesses a menu of functions that enable you to control the detector for offsets. The following choices are available.

- Auto- the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.
- Normal-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average-the detector determines the average of the signal within the sweep points. The averaging

## Spectrum Emission Mask Measurement Trace/Detector

method depends upon the Average Type selection (voltage, power or log scales).

- Peak-the detector determines the maximum of the signal within the sweep points.
- Sample-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak-the detector determines the minimum of the signal within the sweep points.

Key Path	<b>Trace/Detector</b>
Initial S/W Revision	Prior to A.02.00

### Offset Detector Selection

Selects the detector mode for the offsets.

Key Path	<b>Trace/Detector</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :SEMAsk:DETEctor:OFFSet [ :FUNctIon ] AVERAge   NEGAtive   NORMAl   POSitive   SAMPlE [ :SENSe ] :SEMAsk:DETEctor:OFFSet [ :FUNctIon ] ?
Example	SEM:DET:OFFS AVER SEM:DET:OFFS?
Notes	When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings.  Note: This detector setting has effects all offsets. There is not a per trace detector.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	See Couplings in the Trace Type section.
Preset	SA, WCDMA, C2K, 1xEVDO, DTMB, DVB-T/H, LTE, LTETDD: POSitive WIMAX OFDMA, TD-SCDMA ISDB-T, CMMB: POSitive
State Saved	Saved in instrument state.
Range	Normal Average Peak Sample Negative Peak
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Offset Detector Auto

Sets the detector to the default detection mode for the offsets. This mode is dependent upon the current signal conditions of the offsets.

Key Path	Trace/Detector
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :SEMAsk:DETEctor:OFFSet:AUTO ON OFF 1 0 [ :SENSE] :SEMAsk:DETEctor:OFFSet:AUTO?
Example	SEM:DET:OFFS:AUTO OFF SEM:DET:OFFS:AUTO?
Notes	See Couplings in the Trace Type section.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Trigger**

Accesses a menu that enables you to select and control the trigger source for the current measurement. See [“Trigger” on page 1753](#) in the "Common Measurement Functions" section for more information.

## View/Display

Accesses a menu of functions that enable you to control the instrument display.

The following keys select how the results are displayed:

Abs Pwr Freq-displays the absolute power levels in dBm and the corresponding frequencies in the text window.

Rel Pwr Freq-displays the relative power levels in dBc and the corresponding frequencies in the text window.

Integrated Power-displays the absolute and relative power levels integrated throughout the bandwidths between the start and stop frequencies in the text window.

[“View Selection by Name \(Remote Command only\)” on page 603](#)

[“Views Selection by Number \(Remote Command only\)” on page 604](#)

### View Selection by Name (Remote Command only)

Key Path	View/Display
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:SEMask:VIEW[:SElect] APFReq RPFReq IPOWer :DISPlay:SEMask:VIEW[:SElect]?
Example	DISP:SEM:VIEW IPOW DISP:SEM:VIEW?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Dependencies	In the SA mode, when "Radio Standard" is set to WLAN, IPOWer is not available and the key is grayed out.
Preset	SA, WCDMA, C2K, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD: APFReq WIMAX OFDMA: RPFReq
State Saved	Saved in instrument state.
Range	Abs Pwr & Freq  Rel Pwr & Freq Integrated Power
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Views Selection by Number (Remote Command only)

The following numerical selections select how the results are displayed:

1. displays the absolute power levels in dBm and the corresponding frequencies in the text window.
2. displays the relative power levels in dBc and the corresponding frequencies in the text window.
3. displays the absolute and relative power levels integrated throughout the bandwidths between the start and stop frequencies in the text window.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:SEMask:VIEW:NSElect <integer> :DISPlay:SEMask:VIEW:NSElect?
Example	DISP:SEM:VIEW:NSEL 2 DISP:SEM:VIEW:NSEL?
Notes	In the SA mode, when "Radio Standard" is set to WLAN, 3 is not available.  You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Preset	SA, WCDMA, C2K, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD: 1  WIMAX OFDMA: 2
State Saved	Saved in instrument state.
Min	1
Max	3
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Display

Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1813](#) in the "Common Measurement Functions" section for more information.

Key Path	<b>View/Display</b>
----------	---------------------



Initial S/W Revision	Prior to A.02.00
----------------------	------------------


## Abs Pwr Freq

### Abs Peak Pwr & Freq (Total Pwr Ref)

This view consists of the following two windows:

“Trace Window” on page 605

“Results Window” on page 605

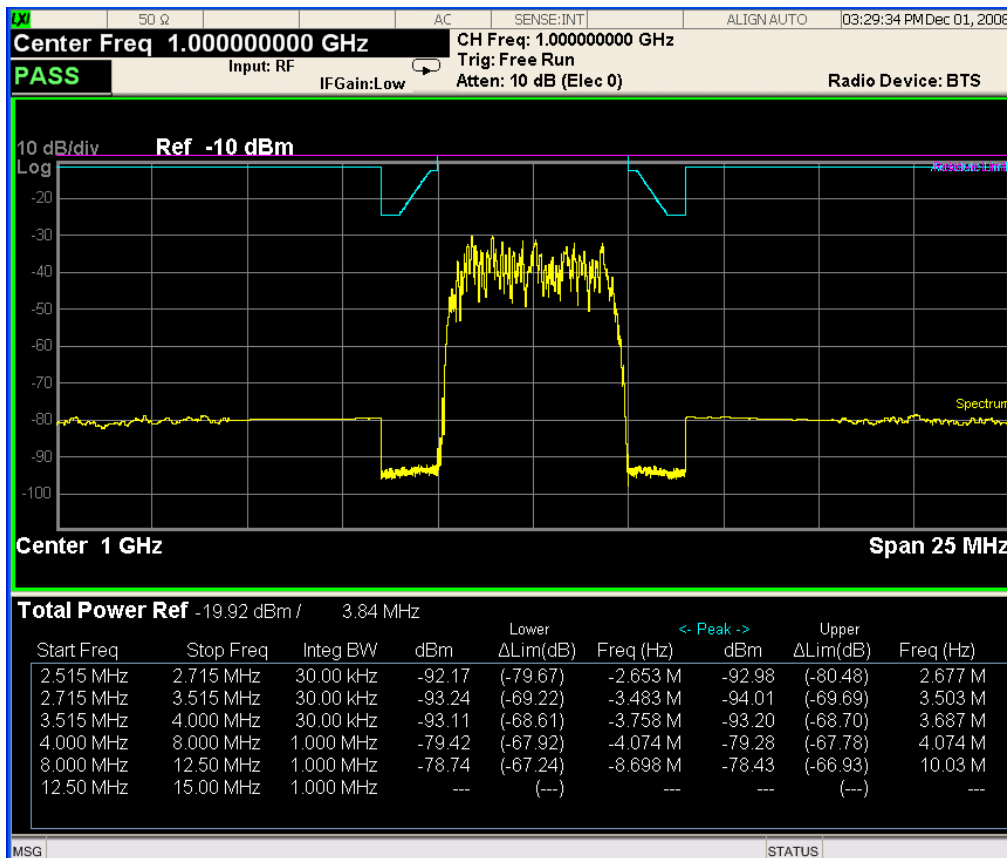

### Trace Window

Corresponding Trace	yellow - Combined trace from carrier and each offset
---------------------	--

### Results Window

Name	Corresponding Results
Total Pwr Ref	n=1 2nd element Absolute power at the reference area.

Spectrum Emission Mask Measurement  
View/Display


Name	Corresponding Results
	Channel Integration Bandwidth
Start(Hz)	Start frequency for offset
Stop(Hz)	Stop frequency for offset
Meas BW(Hz)	Measurement bandwidth for offset
Lower Peak(dBm)	Absolute peak power on minimum margin point of the negative offset
Lower Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Freq(Hz)	Frequency on minimum margin point of the negative offset
Upper Peak(dBm)	Absolute peak power on minimum margin point of the positive offset
Upper Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq(Hz)	Frequency on minimum margin point of the positive offset

**Abs Peak Pwr & Freq (PSD Ref)**

This view consists of the following two windows:

“Trace Window” on page 607

“Results Window” on page 607

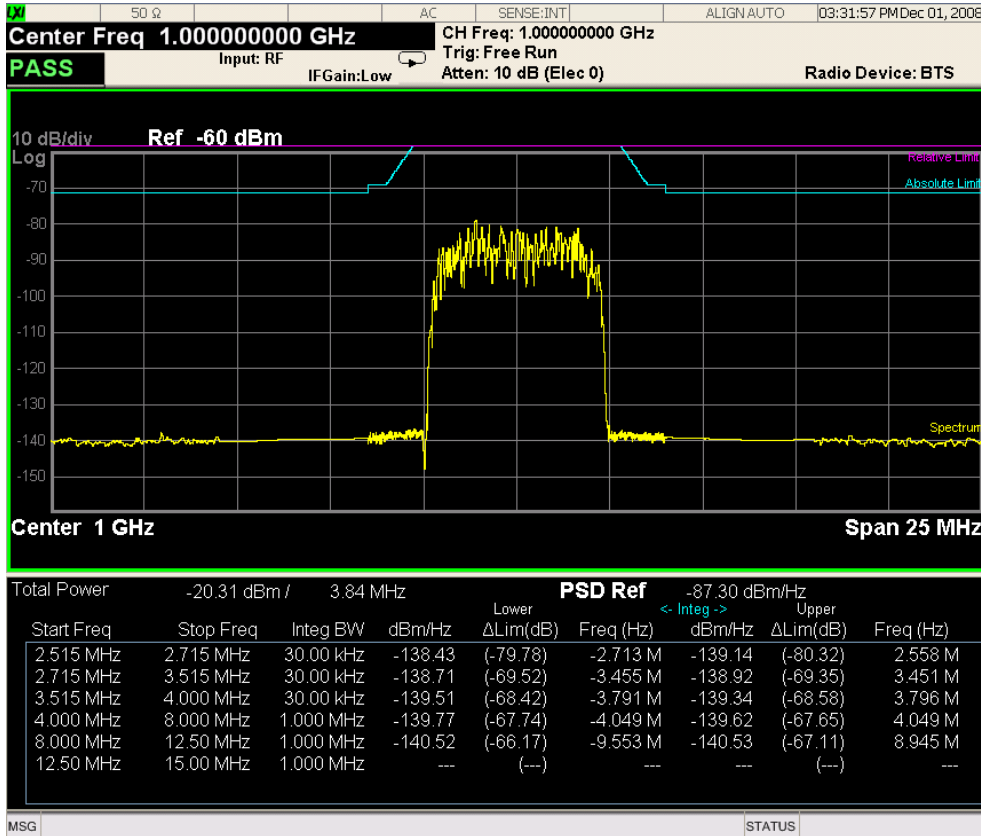

### Trace Window

Corresponding Trace	yellow - Combined trace from carrier and each offset
---------------------	--

### Results Window

Name	Corresponding Results
Total Pwr	n=1 2nd element Absolute power at the reference area.
	Channel Integration Bandwidth
PSD Ref	n=5 1st element Power spectral density reference at the reference area
Start(Hz)	Start frequency for offset
Stop(Hz)	Stop frequency for offset
Meas BW(Hz)	Measurement bandwidth for offset
Lower(dBm/Hz)	Absolute power spectrum density of the negative offset

Spectrum Emission Mask Measurement  
View/Display


Name	Corresponding Results
Lower Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Freq(Hz)	Frequency on minimum margin point of the negative offset
Upper(dBm/Hz)	Absolute power spectrum density of the positive offset
Upper Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq(Hz)	Frequency on minimum margin point of the positive offset

**Abs Peak Pwr & Freq (Spectrum Pk Ref)**

This view consists of the following two windows:

“Trace Window” on page 607

“Results Window” on page 607

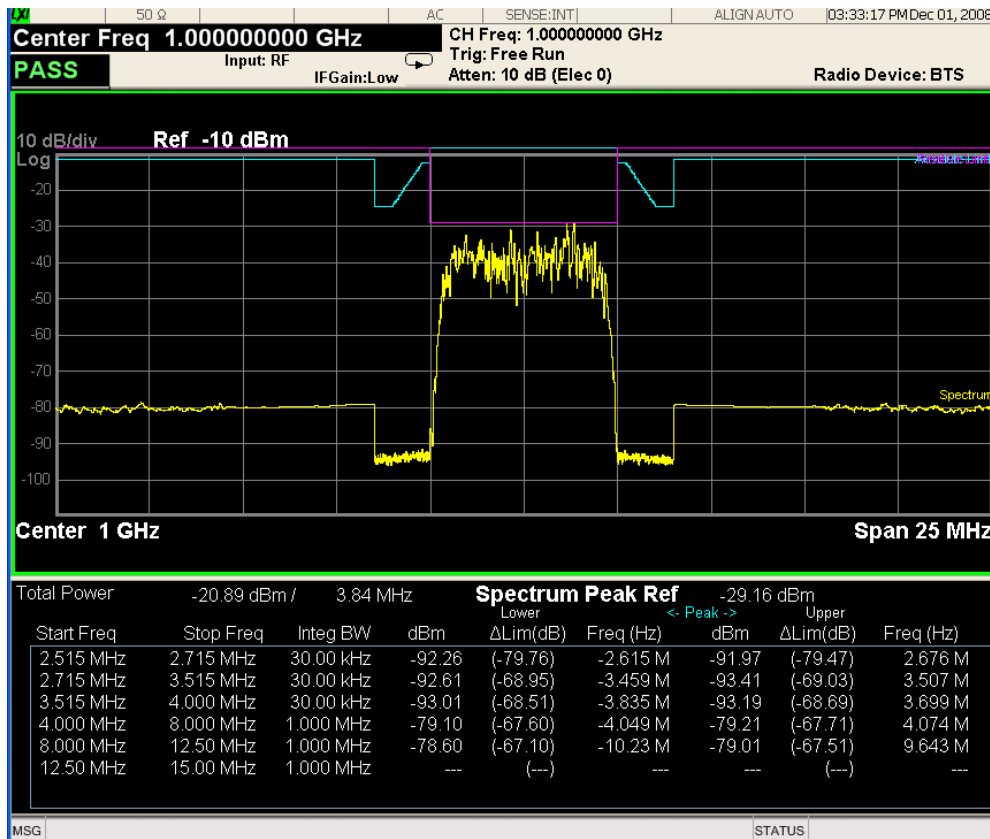

**Trace Window**

Corresponding Trace	yellow - Combined trace from carrier and each offset
---------------------	--

## Results Window

Name	Corresponding Results
Total Pwr	Absolute power at the reference area.
	Channel Integration Bandwidth
Spectrum Peak Ref	n=5 1st element Spectrum peak power reference at the reference area
Start(Hz)	Start frequency for offset
Stop(Hz)	Stop frequency for offset
Meas BW(Hz)	Measurement bandwidth for offset
Lower(dBm)	Absolute peak power on minimum margin point of the negative offset
Lower Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Freq(Hz)	Frequency on minimum margin point of the negative offset
Upper(dBm)	Absolute peak power on minimum margin point of the positive offset
Upper Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq(Hz)	Frequency on minimum margin point of the positive offset

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

## Rel Pwr Freq


### Rel Peak Pwr & Freq (Total Pwr Ref)

This view consists of the following two windows:

“Trace Window” on page 610

“Results Window” on page 610

## Spectrum Emission Mask Measurement View/Display

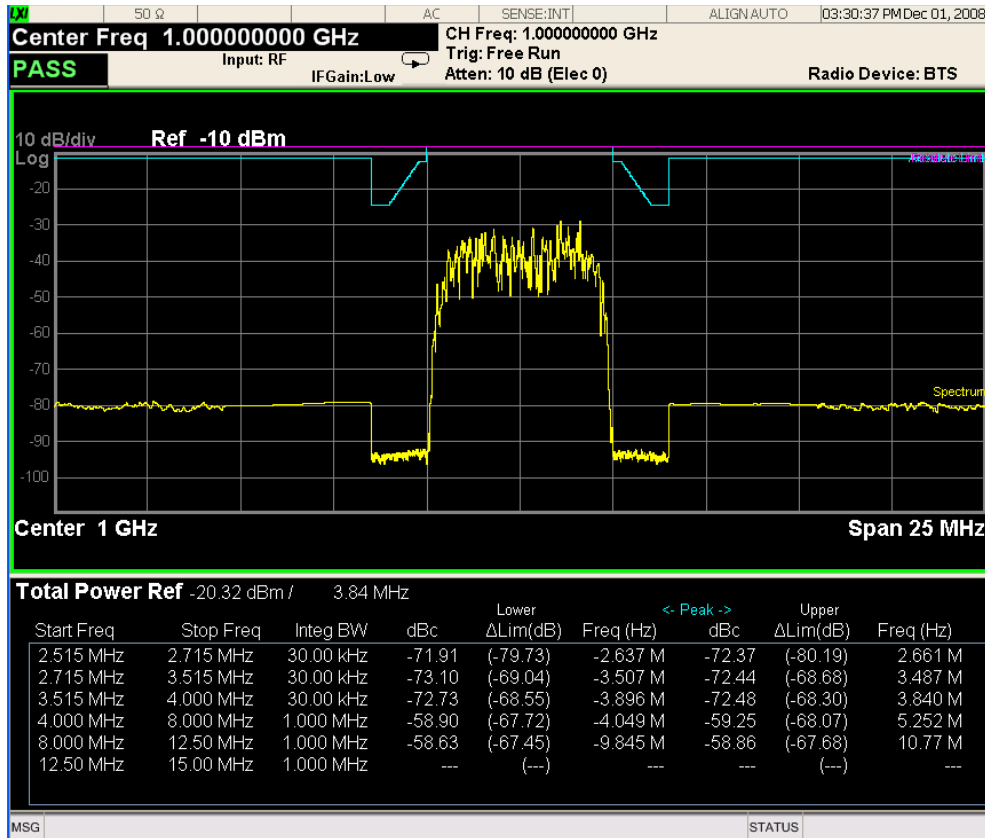

### Trace Window

Corresponding Trace	yellow - Combined trace from carrier and each offset
---------------------	--

### Results Window

Name	Corresponding Results
Total Pwr Ref	n=1 2nd element Absolute power at the reference area.
	Channel Integration Bandwidth
Start(Hz)	Start frequency for offset
Stop(Hz)	Stop frequency for offset
Meas BW(Hz)	Measurement bandwidth for offset
Lower Peak(dBc)	Relative peak power on minimum margin point of the negative offset
Lower Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Freq(Hz)	Frequency on minimum margin point of the negative offset


Name	Corresponding Results
Upper Peak(dBc)	Relative peak power on minimum margin point of the positive offset
Upper Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq(Hz)	Frequency on minimum margin point of the positive offset

### Rel Peak Pwr & Freq (PSD Ref)

This view consists of the following two windows:

“Trace Window” on page 611

“Results Window” on page 612

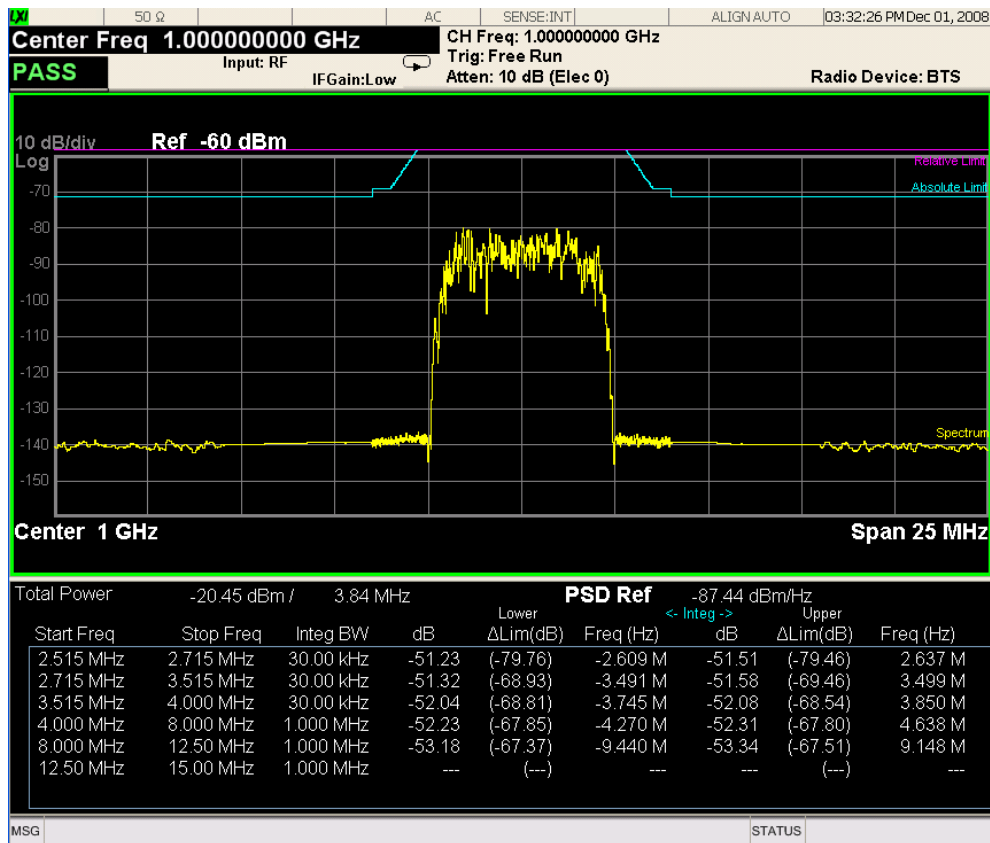

### Trace Window

Corresponding Trace	yellow - Combined trace from carrier and each offset
---------------------	--

**Results Window**

Name	Corresponding Results
Total Pwr	n=1 2nd element Absolute power at the reference area.
	Channel Integration Bandwidth
PSD Ref	n=5 1st element Power spectral density reference at the reference area
Start(Hz)	Start frequency for offset
Stop(Hz)	Stop frequency for offset
Meas BW(Hz)	Measurement bandwidth for offset
Lower(dB)	Relative power spectrum density of the negative offset
Lower Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Freq(Hz)	Frequency on minimum margin point of the negative offset
Upper(dB)	Relative power spectrum density of the positive offset
Upper Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq(Hz)	Frequency on minimum margin point of the positive offset


**Rel Peak Pwr & Freq (Spectrum Pk Ref)**

This view consists of the following two windows:

“Trace Window” on page 610

“Results Window” on page 610



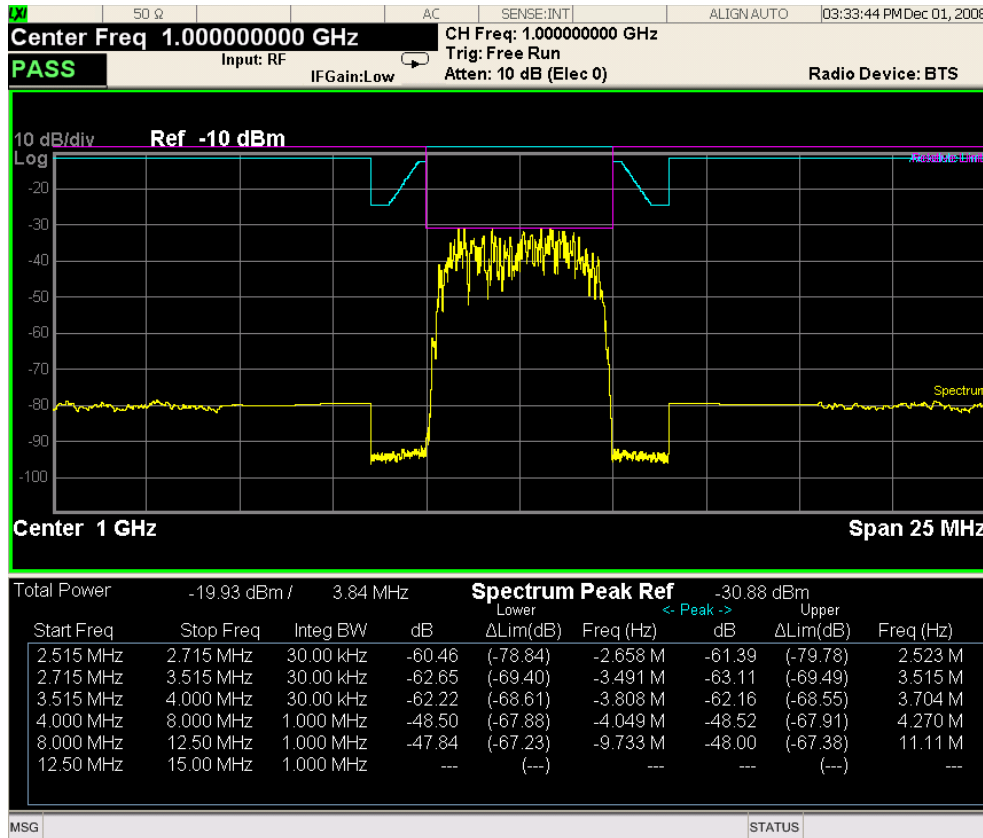

### Trace Window

Corresponding Trace	yellow - Combined trace from carrier and each offset
---------------------	--

### Results Window

Name	Corresponding Results
Total Pwr	Absolute power at the reference area.
	Channel Integration Bandwidth
Spectrum Peak Ref	n=5 1st element Spectrum peak power reference at the reference area
Start(Hz)	Start frequency for offset
Stop(Hz)	Stop frequency for offset
Meas BW(Hz)	Measurement bandwidth for offset
Lower Peak(dB)	Relative peak power on minimum margin point of the negative offset
Lower Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset

Spectrum Emission Mask Measurement  
View/Display

Name	Corresponding Results
Lower Freq(Hz)	Frequency on minimum margin point of the negative offset
Upper Peak(dB)	Relative peak power on minimum margin point of the positive offset
Upper Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq(Hz)	Frequency on minimum margin point of the positive offset


Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

## Integrated Power

### Integrated Power (Total Pwr Ref)

“Trace Window” on page 615

“Results Window” on page 615

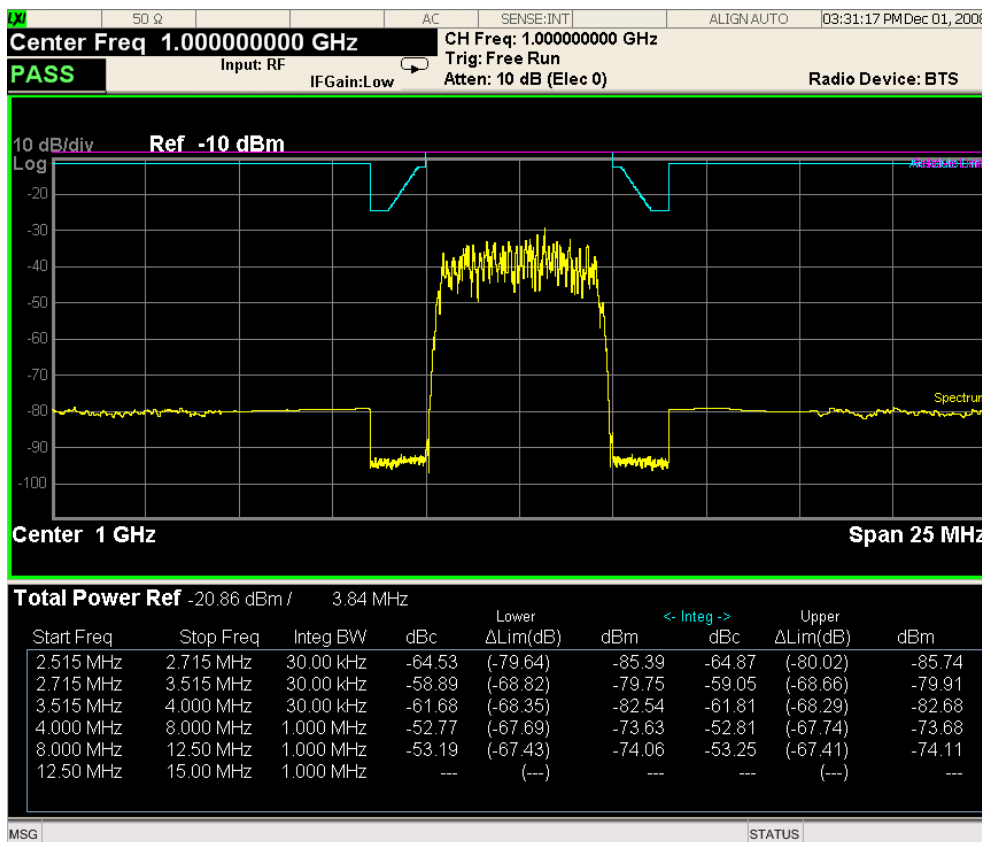

**Trace Window**

Corresponding Trace	yellow - Combined trace from carrier and each offset
---------------------	--

**Results Window**


Name	Corresponding Results
Total Pwr Ref	n=1 2nd element Absolute power at the reference area.
	Channel Integration Bandwidth
Start(Hz)	Start frequency for offset
Stop(Hz)	Stop frequency for offset
Meas BW(Hz)	Measurement bandwidth for offset
Lower Integ(dBc)	Relative integrated power on the negative offset
Lower Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Integ(dBm)	Absolute integrated power on the negative offset
Upper Integ(dBc)	Relative integrated power on the positive offset
Upper Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Integ(dBm)	Absolute integrated power on the positive offset

**Integrated Power (PSD Ref)**

“Trace Window” on page 616

“Results Window” on page 616

## Spectrum Emission Mask Measurement View/Display

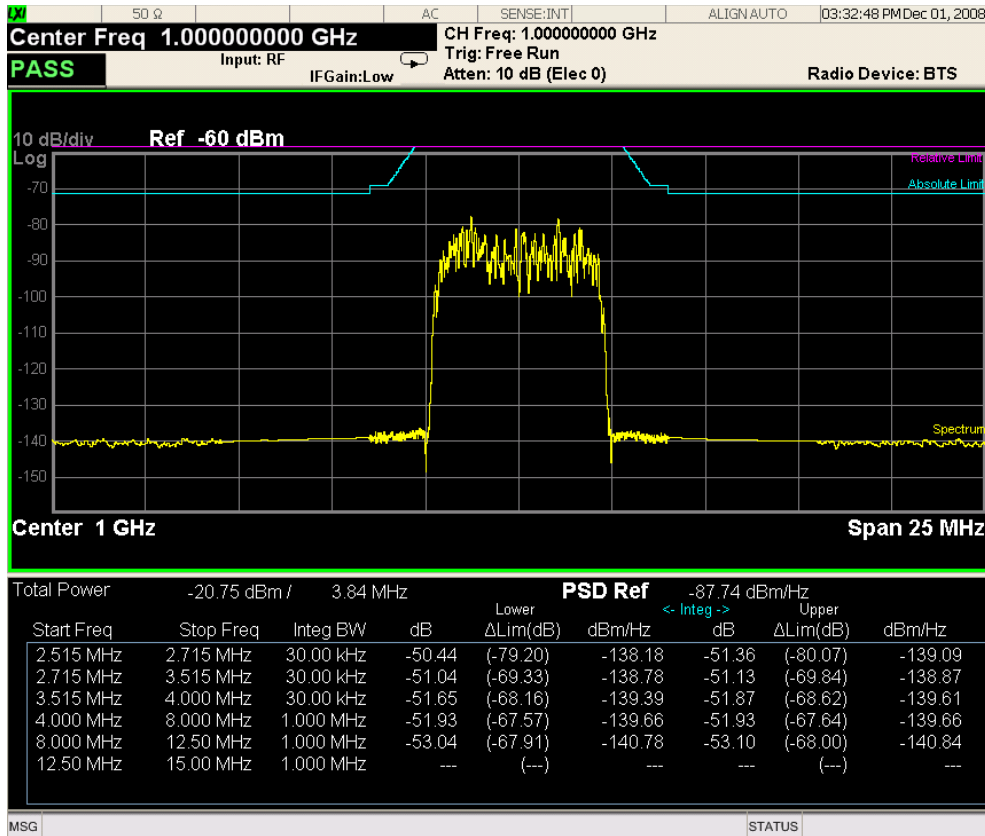

### Trace Window

Corresponding Trace	yellow - Combined trace from carrier and each offset
---------------------	--

### Results Window


Name	Corresponding Results
Total Pwr	n=1 2nd element Absolute power at the reference area.
	Channel Integration Bandwidth
PSD Ref	n=5 1st element Power spectral density reference at the reference area
Start(Hz)	Start frequency for offset
Stop(Hz)	Stop frequency for offset
Meas BW(Hz)	Measurement bandwidth for offset
Lower(dB)	Relative power spectrum density of the negative offset

Name	Corresponding Results
Lower Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower(dBm/Hz)	Absolute power spectrum density of the negative offset
Upper(dB)	Relative power spectrum density of the positive offset
Upper Lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper(dBm/Hz)	Absolute power spectrum density of the negative offset

### Integrated Power (Spectrum Pk Ref)

“Trace Window” on page 615

“Results Window” on page 615

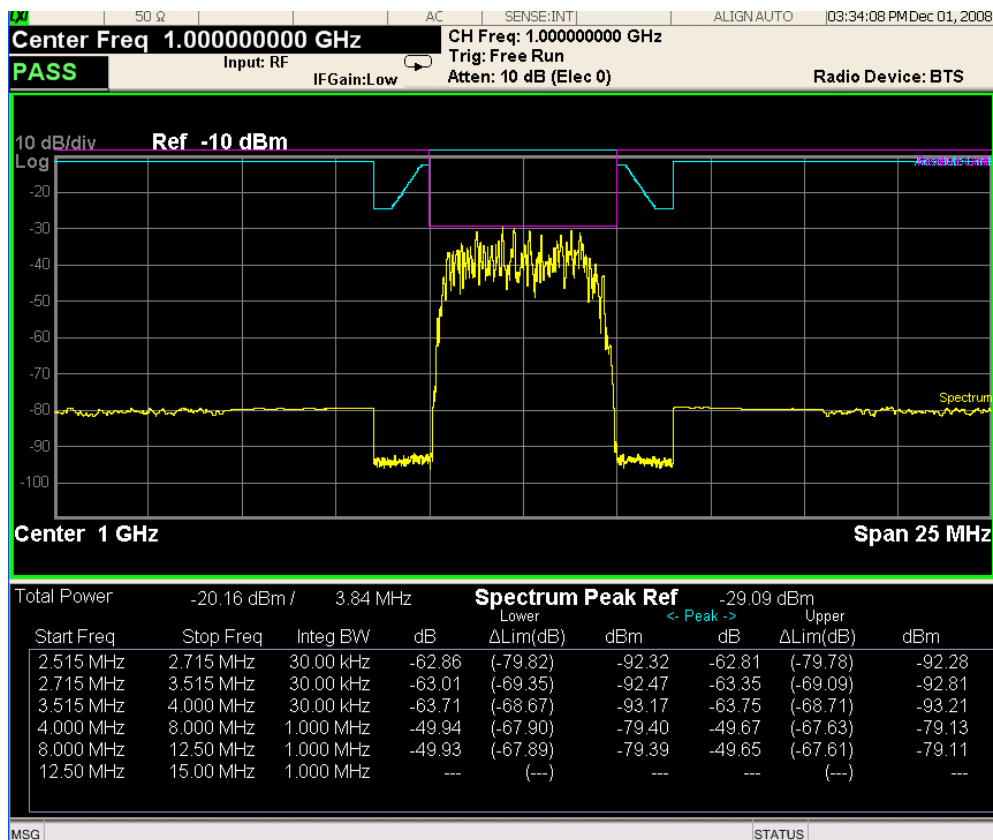

### Trace Window

Corresponding Trace	yellow - Combined trace from carrier and each offset
---------------------	--

## Results Window

Name	Corresponding Results
Total Pwr	Absolute power at the reference area.
	Channel Integration Bandwidth
Spectrum Peak Ref	n=5 1st element Peak power at the reference area
Start(Hz)	Start frequency for offset
Stop(Hz)	Stop frequency for offset
Meas BW(Hz)	Measurement bandwidth for offset
Lower Peak(dB)	Relative peak power on minimum margin point of the negative offset
Lower lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Peak(dBm)	Absolute peak power on minimum margin point of the negative offset
Upper Peak(dB)	Relative peak power on minimum margin point of the positive offset
Upper lim(dB)	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Peak(dBm)	Absolute peak power on minimum margin point of the positive offset

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

## Limit Lines

Toggles the limit lines display function for the spectrum emission mask measurements On and Off.

Key Path	<b>View/Display</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DTMB, DVB-T/H, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SEMask:LLINe:STATe ON OFF 1 0 :CALCulate:SEMask:LLINe:STATe?
Example	CALC:SEM:LLIN:STAT OFF CALC:SEM:LLIN:STAT?

Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DTMB mode, DVB-T/H mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00





The Spurious Emissions measurement identifies and determines the power level of spurious emissions in certain frequency bands. For measurement results and views, see [“View/Display” on page 691](#).

This topic contains the following sections:

[“Measurement Commands for Spurious Emissions” on page 621](#)

[“Remote Command Results for Spurious Emissions Measurement” on page 621](#)

## Measurement Commands for Spurious Emissions

The following commands can be used to retrieve the measurement results:

:CONFigure:SPURious

:CONFigure:SPURious:NDEFault

:INITiate:SPURious

:FETCh:SPURious [n] ?

:READ:SPURious [n] ?

:MEASure:SPURious [n] ?

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1575](#).

## Remote Command Results for Spurious Emissions Measurement

Command	Return Value
CONFigure:SPURious INITiate:SPURious	N/A
FETCh:SPURious [n]? MEASure:SPURious [n]? READ:SPURious [n]?  (Note – these commands are not available when viewing the Range Table)	n = 1 (or not supplied)  Returns a variable-length (1+6*Spurs – up to 1201 entries) comma separated list containing detailed information in the following format:  Number of spurs in following list (Integer)  [ Repeat the following for each spur]  Spur #  Range # Spur was located (Integer)  Frequency of Spur (Hz, Float64)  Amplitude of Spur (dBm, Float32)  Absolute Limit (dBm, Float32)  Pass or Fail (1 0, Boolean)

## Spurious Emissions Measurement

Command	Return Value
	n = 2 – 21 Returns a comma separated list of the trace data for the selected range (where range number = n – 1) using Detector 1. If selected range is not active SCPI_NAN is returned for each trace data element where SCPI_NAN = 9.91E37.
	n = 22 Returns the number of spurs found.
	n = 23 – 42 Returns a comma separated list of the trace data for the selected range (where range number = n – 22) using Detector 2. If selected range is not active or Detector 2 selection is off, SCPI_NAN is returned for each trace data element where SCPI_NAN = 9.91E37.

Key Path	Meas
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale

AMPTD Y Scale opens a menu of functions that enable you to modify the Amplitude parameters.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value

Sets the value for the absolute power reference. When Auto Scaling for the Y-axis is off, the measurement uses the current reference level settings. When Auto Scaling for the Y-axis is on, the analyzer will set the reference level such that the absolute limit will be positioned two divisions down from the top of the display.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, C2k, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel < real>  :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel?
Example	DISP:SPUR:VIEW:WIND:TRAC:Y:RLEV -50 dBm DISP:SPUR:VIEW:WIND:TRAC:Y:RLEV?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, TD-SCDMA mode, LTE mode, LTETDD mode, or WiMAX mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Y Auto Scaling is off, the measurement uses the current reference level settings. When the Y Auto Scaling is on, the analyzer automatically sets the reference level such that the absolute limit is positioned two divisions down from the top of the display. This is the most useful setting when searching for spurs. The algorithm used for determining the ref level is Ref Level = Absolute Limit + (2 * Scale/Div). All other reference level settings are left as the current base instrument settings.
Preset	0.00 dBm
State Saved	Saved in instrument state.
Min	-250.0 dBm
Max	250.0 dBm
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Attenuation

This menu controls both the electrical and mechanical attenuators and their interactions. The value read back on the key in square brackets is the current Total (Elec + Mech) attenuation. When in Pre-Adjust for Min Clip mode, this value can change at the start of every measurement.

See “Attenuation” on page 1406 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Scale/Div

Sets the units per division of the vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDI Vision <rel_ampl>  :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDI Vision?
Example	DISP:SPUR:VIEW:WIND:TRAC:Y:PDIV 10 dB  DISP:SPUR:VIEW:WIND:TRAC:Y:PDIV?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, TD-SCDMA, LTE mode, LTE TDD mode, or WiMAX mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Scale Coupling is On, this value is automatically determined by the measurement result.  When you set a value manually, Scale Coupling automatically changes to Off.
Preset	10.00 dB
State Saved	Saved in instrument state.
Range	0.10 dB to 20.00 dB
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Presel Center

See AMPTD Y Scale, [“Presel Center” on page 1421](#) in the “Common Measurement Functions” section for more information.

## Presel Adjust

See AMPTD Y Scale, [“Preselector Adjust” on page 1422](#) in the “Common Measurement Functions” section for more information.

## Y Axis Unit

Allows you to change the vertical (Y) axis amplitude unit.

See [“Y Axis Unit” on page 1424](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00

## Ref Lvl Offset

Adds an offset value to the displayed reference level. The reference level is the absolute amplitude represented by the top graticule line on the display.

See [“Reference Level Offset” on page 1429](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	A.04.00

## μW Path Control

The **μW Path Control** functions include the **μW Preselector Bypass** (Option MPB) and **Low Noise Path** (Option LNP) controls in the High Band path circuits.

See [μ“μW Path Control” on page 1430](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	A.04.00

## Internal Preamp

Accesses a menu that enables you to control the internal preamplifiers. Turning Internal Preamp on gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your particular measurement.

Spurious Emissions Measurement  
**AMPTD Y Scale**

See “[Internal Preamp](#)” on page 1435 under AMPTD Y Scale in the “Common Measurement Functions” section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Auto Scaling

Toggles the Auto Scaling function between On and Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COU Ple 0 1 OFF ON  :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COU Ple?
Example	DISP:SPUR:VIEW:WIND:TRAC:Y:COUP OFF  DISP:SPUR:VIEW:WIND:TRAC:Y:COUP?
Couplings	When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.  When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.  When the Y Auto Scaling is off, the measurement uses the current reference level settings. When the Y Auto Scaling is on, the analyzer automatically sets the reference level such that the absolute limit is positioned two divisions down from the top of the display. This is the most useful setting when searching for spurs. The algorithm used for determining the ref level is Ref Level = Absolute Limit + (2 * Scale/Div). All other reference level settings are left as the current base instrument settings.
Preset	1
State Saved	Saved in instrument state.
Range	On Off
Backwards Compatibility SCPI	[:SENSe]:SPURious:POWer[:RF]:RANGe:AUTO
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Auto Couple**

See “[Auto Couple](#)” on page 1437 in the section "Common Measurement Functions" for more information.

## **BW**

BW is unavailable in the Spurious Emissions measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00



---

## **Cont**

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451 in the section "Common Measurement Functions" for more information.

## Frequency/Channel

The key accesses a menu allowing you to set Frequency parameters for the Gate functions.

See “[FREQ/Channel](#)” on page 1453 in the section "Common Measurement Functions" for more information.

## **Input/Output**

See “[Input/Output](#)” on page 1459 in the section "Common Measurement Functions" for more information.

## Marker

Displays the menu keys that enable you to select, set up and control the markers for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

## Marker Type

Sets the marker control mode to **Normal**, **Delta** and **Off**. Normal enables you to activate the selected marker to read the power level and time. Delta enables you to read the differences in the power levels and time scales between the selected marker and the next marker. Off enables you to turn off the selected marker.

All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

Key Path	<b>Marker</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: MODE POSition DELTA OFF  :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: MODE?
Example	CALC:SPUR:MARK:MODE POS CALC:SPUR:MARK:MODE?

Notes	<p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision.</p> <p>You must be in the cdma2000 mode, 1xEV-DO mode, TD-SCDMA mode, W-CDMA mode, DVB-T/H mode, GSM/EDGE mode, LTE mode, LTE TDD mode, or WiMAX mode to use this command. Use INSTRument:SElect to set the mode.</p>
Couplings	No
Preset	=OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Value (Remote Command only)

Sets the Marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	<pre>:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X &lt;freq&gt;  :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X?</pre>
Example	<pre>CALC:SPUR:MARK2:X 25 kHz CALC:SPUR:MARK3:X?</pre>
Notes	<p>If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" will be generated.</p> <p>The query returns the absolute X Axis marker value if the control mode is Normal, or the offset from the reference marker if the control mode is Delta. The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time. If the marker is Off, the response is not a number.</p>
Preset	1 GHz

Spurious Emissions Measurement  
**Marker**

State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Marker X Axis Position (Remote Command only)**

Sets the Marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X:POSition <integer>  :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X:POSition?
Example	CALC:SPUR:MARK10:X:POS 300 CALC:SPUR:MARK10:X:POS?
Notes	The query returns the absolute X Axis marker value in trace points if the control mode is <b>Normal</b> , or the offset from the reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points . If the marker is <b>Off</b> the response is not a number.
Preset	300
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Marker Y Axis Value (Remote Command only)**

Returns the marker Y Axis value in the current marker Y Axis unit.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
------	--

<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:SPUR:MARK11:Y?
Notes	If no suffix is sent, it will use the current Y Axis unit. If a suffix is sent that does not have units of absolute amplitude, an error "Invalid suffix" will be generated.
Preset	Depends on Y axis range of selected Trace.
State Saved	No
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Properties

Accesses the Properties menu to set certain properties of the selected marker.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Relative To

Selects the marker the selected marker will be relative to (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "reference marker" for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Key Path	<b>Marker, Properties</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REfERENCE <integer>  :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REfERENCE?

Spurious Emissions Measurement  
Marker

Example	CALC:SPUR:MARK3:REF 5 CALC:SPUR:MARK:REF?
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error –221: “Settings conflict; marker cannot be relative to itself.”  When queried a single value will be returned (the specified marker numbers relative marker).  You must be in the Spectrum Analysis mode, GSM mode, LTE mode, LTE TDD mode, or WiMAX mode or TD-SCDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Couple Markers

When this function is true, moving any marker causes an equal X Axis movement of every other marker which is not **Off**. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

Key Path	<b>Marker</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:SPURious:MARKer:COUPle[:STATe] ?
Example	CALC:SPUR:MARK:COUP ON CALC:SPUR:MARK:COUP?
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00



## All Markers Off

Turns off all markers.

Key Path	Marker
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer:AOFF
Example	CALC:SPUR:MARK:AOFF
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Marker Function

There are no 'Marker Functions' supported in Spurious Emissions so this front-panel key will display a blank key menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

---

## Marker To

There is no 'Marker To' functionality supported in Spurious Emissions so this front-panel key will display a blank key menu when pressed.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## **Meas**

See “[Meas](#)” on page 1575 in the section "Common Measurement Functions" for more information.

## Meas Setup

Displays the measurement setup menu for the currently selected measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Avg/Hold Num

Specifies the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep.

Average State allows you to turn averaging On or Off.

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, CDMA1xEVDO, TD-SCDMA, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] : SPURious : AVERage : COUNT <integer> [ :SENSe ] : SPURious : AVERage : COUNT? [ :SENSe ] : SPURious : AVERage [ :STATe ] ON   OFF   1   0 [ :SENSe ] : SPURious : AVERage [ :STATe ] ?
Example	SPUR:AVER:COUN 2500 SPUR:AVER:COUN? SPUR:AVER ON SPUR:AVER?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, DVB-T/H mode, TD-SCDMA mode, LTE mode, LTE TDD mode, or WiMAX mode to use this command. Use INSTRument:SElect to set the mode.
Preset	10 OFF
State Saved	Saved in instrument state.
Min	1
Max	10000
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Avg Mode

Enables you to set the averaging mode.

When set to Exponential (Exp) the measurement averaging continues using the specified number of averages to compute each averaged value. The average will be displayed at the end of each sweep.

When set to Repeat, the measurement resets the average counter each time the specified number of averages is reached.

Key Path	Meas Setup
Mode	SA, WCDMA, WIMAX OFDMA, TD-SCDMA, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:SPURious:AVERage:TCONtrol EXPonential REPeat [ :SENSE]:SPURious:AVERage:TCONtrol?
Example	SPUR:AVER:TCON REP SPUR:AVER:TCON?
Notes	You must be in the cdma2000 mode, TD-SCDMA mode, W-CDMA mode, DVB-T/H mode, GSM/EDGE mode, LTE mode, LTE TDD mode, or WiMAX mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	EXPonential
State Saved	Saved in instrument state.
Range	Exp Repeat
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Range Table

The range table is used to enter the settings for up to twenty ranges.

Upon entering the range table (front panel only) the measurement is stopped and the analyzer is set to a constantly sweeping idle state. The analyzer will be set to the current values of range 1, regardless if it is on or off. If a range is outside the values in the current range table for that range, "---" will appear to indicate this range is currently inactive.

To change a parameter, select the appropriate menu key and enter the value using the numeric keypad, or the knob. The analyzer settings will be updated with the new parameter values. Although no measurements are being made, this allows you to preview the range they will be measuring.

If the range is changed, the analyzer will change its settings to reflect the currently selected range. The selected range will be displayed on the last line of the range table view unless; the selected range is 5 or less in the normal range table view. In this case, the first 5 entries of the range table will be displayed and the zoom mode is selected. In the zoom mode all 20 ranges can be displayed.

Key Path	Meas Setup
----------	------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Range

Changing the range will update the values on the other menu keys so that they reflect the settings for the selected range. If Range is turned on, it will be used as part of the measurement. If it is off, it will be excluded. A range is made up of the next eleven parameters. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with. Missing values are not permitted. In other words, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Key Path	Meas Setup, Range Table
Mode	SA, WCDMA, C2K, 1xEV-DO, WIMAX OFDMA, TD-SCDMA, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	<pre>[ :SENSe] :SPURious [ :RANGe] [ :LIST] :STATe ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0</pre> <pre>[ :SENSe] :SPURious [ :RANGe] [ :LIST] :STATe?</pre>
Example	<pre>SPUR:STAT ON SPUR:STAT?</pre>
Notes	You must be in cdma2000 mode, TD-SCDMA mode, W-CDMA mode, DVB-T/H mode, GSM/EDGE mode, LTE mode, LTE TDD mode, or WiMAX mode to use this command. Use INSTRument:SElect to set the mode.







Spurious Emissions Measurement  
**Meas Setup**

**Stop Freq**

Sets the stop frequency of the analyzer. This parameter can send up to 20 values.

The location of where the stop frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

Missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Key Path	Meas Setup, Range Table
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO,DVB-T/H
<b>Remote Command</b>	[ :SENSe] :SPURious [ :RANGe] [ :LIST] :FREQuency:STOP <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>  [ :SENSe] :SPURious [ :RANGe] [ :LIST] :FREQuency:STOP?
Example	SPUR:FREQ:STOP 150kHz,30MHz,1GHz,2.1GHz,2.1GHz,2.1774GHz,2.18GHz,12.75GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz  SPUR:FREQ:STOP?
Notes	You must be in cdma2000 mode, TD-SCDMA mode, W-CDMA mode, DVB-T/H, GSM/EDGE mode, LTE mode, LTE TDD mode, or WiMAX mode to use this command. Use INSTRument:SElect to set the mode.



Spurious Emissions Measurement  
**Meas Setup**

values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Key Path	Meas Setup, Range Table
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	<pre>[ :SENSe ] :SPURious [ :RANGe ] [ :LIST ] :BANDwidth [ :RESolution ] &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;  [ :SENSe ] :SPURious [ :RANGe ] [ :LIST ] :BANDwidth [ :RESolution ] ?  [ :SENSe ] :SPURious [ :RANGe ] [ :LIST ] :BANDwidth [ :RESolution ] :AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1  [ :SENSe ] :SPURious [ :RANGe ] [ :LIST ] :BANDwidth [ :RESolution ] :AUTO?</pre>
Example	<pre>SPUR:BAND 1kHz,10kHz,100kHz,1MHz,1MHz,1MHz,1MHz, 3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz, 3MHz,3MHz  SPUR:BAND?  SPUR:BWID:AUTO ON, ON, ON, OFF, OFF, OFF, OFF, OFF, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, ON, ON  SPUR:BWID:AUTO?</pre>
Notes	<p>You must be in cdma2000 mode, TD-SCDMA mode, W-CDMA mode, DVB-T/H, GSM/EDGE mode, LTE mode, LTE TDD mode, or WiMAX mode to use this command. Use INSTRument:SElect to set the mode.</p>



Spurious Emissions Measurement  
**Meas Setup**

Backwards Compatibility SCPI	[ :SENSE]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution]
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Video BW**

Sets the Video BW mode of the analyzer. This can be Auto, where the analyzer determines the optimum setting, or Manual, where you determine the setting. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with. Missing values are not permitted, in other words, if you want to change values 2 and 6 you must sent all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Key Path	Meas Setup, Range Table
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
Remote Command	<pre>[ :SENSE]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;, &lt;freq&gt;  [ :SENSE]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo?  [ :SENSE]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1  [ :SENSE]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO?</pre>
Example	<pre>SPUR:BAND:VID 1kHz,10kHz,100kHz,1MHz,1MHz,1MHz,1MHz, 3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz, 3MHz,3MHz  SPUR:BAND:VID?  SPUR:BAND:VID:AUTO ON, ON, OFF, OFF, OFF, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, ON, ON, ON, ON, ON  SPUR:BAND:VID:AUTO?</pre>
Notes	You must be in the cdma2000 mode, 1xEV-DO mode, TD-SCDMA mode, W-CDMA mode, DVB-TH mode, GSM/EDGE mode, LTE mode, LTE TDD mode, or WiMAX mode to use this command. Use INSTRUMENT:SELect to set the mode.

Preset	<p>SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H: Automatically calculated</p> <p>LTE: 4.7kHz,47kHz,470kHz,5MHz,470kHz,5MHz,5MHz,300kHz,300kHz,300kHz, 300kHz,300kHz,300kHz,300kHz,300kHz,300kHz,300kHz,300kHz,300kHz, 300kHz</p> <p>LTETDD: 4.7kHz,47kHz,470kHz,5MHz,470kHz,5MHz,5MHz,300kHz,300kHz,300kHz, 300kHz,300kHz,300kHz,300kHz,300kHz,300kHz,300kHz,300kHz,300kHz, 300kHz</p> <p>ON, ON</p> <p>DVB-T/H: OFF,OFF,OFF,OFF,OFF,OFF,OFF,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON, ON,ON,ON</p> <p>LTE: OFF,OFF,OFF,OFF,OFF,OFF,OFF,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON, ON,ON,ON</p> <p>LTETDD: OFF,OFF,OFF,OFF,OFF,OFF,OFF,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON, ON,ON,ON</p>
State Saved	Saved in instrument state.
Min	1 Hz
Max	50 MHz
Backwards Compatibility SCPI	[:SENSe]:SPURious[:RANGe][:LIST]:BWIDth:VIDeo
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Filter Type**

Besides the Gaussian filter shape, there are certain special filter types, such as Flat Top, that are desirable under certain conditions. The **Filter Type** menu gives you control over these parameters.

Key Path	<b>Meas Setup, Range Table</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD

Spurious Emissions Measurement  
**Meas Setup**

<b>Remote Command</b>	[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:SHAPE GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop, GAUSSsian FLATtop  [:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:SHAPE?
Example	SPUR:BAND:SHAP GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, FLAT, FLAT, FLAT, FLAT, FLAT, GAUS, GAUS, GAUS, GAUS, GAUS, FLAT, FLAT, GAUS, GAUS  SPUR:BAND:SHAP?
Preset	GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS
State Saved	Saved in instrument state.
Range	Gaussian (Normal) Flattop
Backwards Compatibility SCPI	[:SENSe]:SPURious[:RANGe][:LIST]:BWIDth:SHAPE
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Abs Start Limit**

Determines the limit above which spurs will report a failing. If Abs Stop Limit Mode is set to Auto, this is coupled to Abs Stop Limit to make a flat limit line. If set to Man, Abs Start Limit and Abs Stop Limit can take different values to make a sloped limit line.

If the Limit Line Test parameter is off then any spurs which are found to be above the current ‘Peak Excursion’ will be added to the results table. From these spurs, the amplitude will be checked using the abs limit start and abs limit stop parameters and then calculate the limit. An ‘F’ will be appended to the amplitude value of the spur if the measured amplitude is above the limit. If the Limit Line Test is on, only the spurs whose amplitudes exceed the limit will be reported.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must sent all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Key Path	Meas Setup, Range Table
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD





Spurious Emissions Measurement  
**Meas Setup**

Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Abs Stop Limit**

Abs Stop Limit is used to determine the limit above which spurs will report a failing. If Abs Stop Limit Mode is set to Auto, this is coupled to Abs Start Limit to make a flat limit line. If set to Man, Abs Start Limit and Abs Stop Limit can take different values to make a sloped limit line.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must sent all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Abs Stop Limit Mode, when set to Couple, couples Abs Start Limit and Abs Stop Limit to make a flat limit line. If set to Man, Abs Start and Abs Stop can take different values to make a sloped limit line.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted, in other words, if you want to change values 2 and 6 you must sent all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Key Path	Meas Setup, Range Table
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	<pre> :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPe r]:DATA:STOP &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;  :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPe r]:DATA:STOP?  :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPe r]:DATA:STOP:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1  :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPe r]:DATA:STOP:AUTO? </pre>



Spurious Emissions Measurement  
**Meas Setup**

Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Peak Excursion**

Sets the minimum amplitude variation of signals that can be identified as peaks. If a value of 6 dB is selected, peaks that rise and fall more than 6 dB above the peak threshold value are identified. This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Key Path	<b>Meas Setup, Range Table</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
Remote Command	[ :SENSE] :SPURious[:RANGE] [:LIST] :PEAK:EXCursion <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> [ :SENSE] :SPURious[:RANGE] [:LIST] :PEAK:EXCursion?
Example	SPUR:PEAK:EXC 20,20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20 SPUR:PEAK:EXC?
Preset	+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000
State Saved	Saved in instrument state.
Min	0.0 dB
Max	100.0 dB
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Pk Threshold**

Sets the minimum amplitude of signals that can be identified as peaks. For example, if a value of -90 dBm is selected, only peaks that rise and fall more than the peak excursion value which are above -90 dBm are identified. This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this

parameter always returns 20 values.

Key Path	Meas Setup, Range Table
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
Remote Command	[ :SENSe] :SPURious[:RANGE] [:LIST] :PEAK:THReshold <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>  [:SENSe] :SPURious[:RANGE] [:LIST] :PEAK:THReshold?
Example	SPUR:PEAK:THR 0,0,0 SPUR:PEAK:THR?
Preset	-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001,-9.00000000E+001
State Saved	Saved in instrument state.
Min	-100
Max	0
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Attenuation**

Defines attenuation value for each range. When Auto state is ON, attenuation value under AMPTD Y Scale is used. When Auto state is OFF, this value is used as mechanical attenuation value without electric attenuation.

Key Path	Meas Setup, Range Table
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD









Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
Remote Command	<pre>[ :SENSE ] :SPURious [ :RANGe ] [ :LIST ] :SWEep:TIME &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, &lt;time&gt;  [ :SENSE ] :SPURious [ :RANGe ] [ :LIST ] :SWEep:TIME?  [ :SENSE ] :SPURious [ :RANGe ] [ :LIST ] :SWEep:TIME:AUTO OFF   ON   0   1, OFF   ON   0   1  [ :SENSE ] :SPURious [ :RANGe ] [ :LIST ] :SWEep:TIME:AUTO?</pre>
Example	<pre>SPUR:SWE:TIME 10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10  SPUR:SWE:TIME?  SPUR:SWE:TIME:AUTO ON,ON  SPUR:SWE:TIME:AUTO?</pre>
Notes	You must be in cdma2000 mode, TD-SCDMA mode, W-CDMA mode, DVB-T/H, SA mode, LTE mode, LTE TDD mode, or WiMAX mode to use this command. Use INSTRUMENT:SELEct to set the mode.
Preset	Automatically calculated
State Saved	Saved in instrument state.
Min	1.0E-3
Max	2.0E+3
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Points**

Sets the number of points per sweep for the measurement. This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

The Points mode can be manual, where you determine the setting or auto, where the analyzer determines the number of trace points to ensure the sweep points resolution equals RBW/2. This is calculated using the following algorithm:

$$\text{Points} = (\text{Stop Freq} - \text{Start Freq}) / (\text{ResBW} / 2), \text{ with the computed values being clipped to a minimum of 601 and a maximum of 20001.}$$



Min	601
Max	20001
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### IF Gain

Sets the IF Gain function to Auto, On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads. A switched IF amplifier with approximately 10 dB of gain is available. This amplifier takes full advantage of the RF dynamic range of the analyzer. When it can be turned on without an overload, the dynamic range is always better with the amplifier on than off.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

### IF Gain Auto

Activates the rules for auto IF Gain.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :SPURious:IF:GAIN:AUTO[:STATE] OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1  [:SENSE] :SPURious:IF:GAIN:AUTO[:STATE] ?
Example	SPUR : IF : GAIN : AUTO ON, ON SPUR : IF : GAIN : AUTO ?
Couplings	When the sweep type is Swept, 'Auto' sets IF Gain to High Gain under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings using the swept sweep type, auto sets IF Gain to Low Gain.
Preset	OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF
State Saved	Saved in instrument state.
Range	Auto Man
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### IF Gain State

Selects the range of IF Gain.

<b>Remote Command</b>	[ :SENSE]:SPURious:IF:GAIN[:STATe] OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1  [:SENSE]:SPURious:IF:GAIN[:STATe]?
Example	SPUR:IF:GAIN ON,ON  SPUR:IF:GAIN?
Preset	OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF
State Saved	Saved in instrument state.
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)
Initial S/W Revision	Prior to A.02.00

### Meas Type

Selects either Examine or Full measurement type. This parameter is coupled to the average mode. Therefore, if the examine measurement type is selected, the measurement sets the average mode to exponential. If the full measurement type is selected, the measurement sets the average mode to repeat. The behavior of each measurement type is described in the table below. When averaging is on, trace averaging is used as each active range is measured. Averaging is not used at any other time.

	<b>Single</b>		<b>Continuous</b>	
	<b>No Spurs Found</b>	<b>Spurs Found</b>	<b>No Spurs Found</b>	<b>Spurs Found</b>
Examine	All active ranges are measured. On completion the measurement is set to the idle state and the 'No Spurs' happening is displayed.	All active ranges are measured and the spurs found reported. On completion the measurement is set to the idle state and the trace containing the worst spur restored. The spur menu key is enabled. A marker is also added which is set to the frequency of the worst spur.	All active ranges are measured. On completion the SA remains set to last range checked with an active trace and the 'No Spurs' happening is displayed.	All active ranges are measured and the spurs found reported. On completion the SA is set to the range containing the worst spur found and continually sweeps this range. The spur menu key is enabled. A marker is also added which is set to the frequency of the worst spur.

	Single		Continuous	
Full	All active ranges are measured. On completion measurement is set to idle state and the 'No Spurs' happening is displayed.	All active ranges are measured and spurs found reported. On completion the measurement is set to the idle state, displaying the trace of the last active range.	Measurement continually cycles through all active ranges.	All active ranges are measured and spurs found reported. On each cycle of the active ranges the spurs found are reset. This ensures any remote queries retrieve the trace data that matches the currently displayed results.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :SPURious:TYPE EXAMine FULL [ :SENSe] :SPURious:TYPE?
Example	SPUR:TYPE FULL SPUR:TYPE?
Preset	EXAMine
State Saved	Saved in instrument state.
Range	Examine Full
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Spur

Displays any spurs found. It is only enabled when the measurement type is set to examine and will turn on upon completion of a measurement. Once the Spur menu key has been enabled, you can view any spur. The measurement sets the analyzer to the range in which the currently selected spur was found. The range settings only changes if the spur selected is in a range which is different from the current range settings. A marker is used to identify the currently selected spur on the trace.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, CDMA1xEVDO, TD-SCDMA, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :SPURious:SPUR <integer> [ :SENSe] :SPURious:SPUR?

Spurious Emissions Measurement  
**Meas Setup**

Example	SPUR:SPUR 55 SPUR:SPUR?
Preset	1
State Saved	No
Min	1
Max	200
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Spurious Report Mode

Sets the spurious report mode to either Limit Line Test Only or All.

Select the Limit Line Test (LIMTest) option to report only spurs above the limit line. Any spurs reported will cause the measurement to fail. See Abs Start Limit for more information.

Select All (ALL) to report all spurs detected by Peak Threshold and Peak Excursion.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :SPURious:REPT:MODE ALL   LIMTest [ :SENSE] :SPURious:REPT:MODE?
Example	SPUR:REPT:MODE LIMIT SPUR:REPT:MODE?
Preset	ALL
State Saved	Saved in instrument state.
Range	All Limit Test
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Fast Spurious Meas (Remote Command only)

This command is provided as the backward compatibility SCPI command of the Fast Spurious Measurement. Since this command is another representation of Spurious Report Mode, this command is coupled with the command.

When set to ON, only spurs above the limit line will be reported. This is the same as Spurious Report Mode "LIMTest" When set to OFF, all detected spurs will be reported. This is the same as Spurious

Report Mode “ALL.”

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H
<b>Remote Command</b>	[ :SENSe ] :SPURious:FSMeas ON   OFF   1   0 [ :SENSe ] :SPURious:FSMeas?
Example	SPUR:FSM ON SPUR:FSM?
Couplings	If SPUR:REPT:MODE is ALL, this parameter is OFF. If SPUR:REPT:MODE is LIMTest, this parameter is ON.
Preset	OFF
State Saved	Saved in instrument state.
Initial S/W Revision	A.04.00

### Meas Preset

Restores all measurement parameters to their default values.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CONFigure:SPURious
Example	CONF:SPUR
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Range Preset (TD-SCDMA only)

Sets the specific range parameters to meet the requirement of the BS mandatory limits (Category A), the BS mandatory limits (Category B) and the MS mandatory and optional limits in the TD-SCDMA mode. This key only shows up in the TD-SCDMA mode.

Key Path	Meas Setup
Initial S/W Revision	Prior to A.02.00

### Category A (TD-SCDMA only)

Sets the range parameters to meet the requirement of the BS mandatory spurious emissions limits (Category A).

Spurious Emissions Measurement  
Meas Setup

BS Mandatory spurious emissions limits, Category A

Band	Maximum level	Measurement bandwidth	Note
9 kHz – 150 kHz	-13 dBm	1 kHz	Bandwidth as in ITU-R SM.329-9, s4.1
150 kHz – 30 MHz		10 kHz	Bandwidth as in ITU-R SM.329-9, s4.1
30 MHz – 1 GHz		100 kHz	Bandwidth as in ITU-R SM.329-9, s4.1
1 GHz – 12,75 GHz		1 MHz	Upper frequency as in ITU-R SM.329-9, s2.5 table 1

(The requirement applies at frequencies within the specified frequency ranges which are more than 4 MHz under the first carrier frequency used or more than 4 MHz above the last carrier frequency used.)

Key Path	<b>Meas Setup, Range Preset</b>
Mode	TD-SCDMA
<b>Remote Command</b>	[ :SENSE] :SPURious:CATegory:A
Example	SPUR:CAT:A
Dependencies	This key is grayed-out when the radio device is MS.
Initial S/W Revision	Prior to A.02.00

**Category B (TD-SCDMA only)**

Sets the range parameters to meet the requirement of the BS mandatory spurious emissions limits (Category B).

BS Mandatory spurious emissions limits, Category B

Band	Maximum Level	Measurement Bandwidth	Note
9kHz – 150kHz	-36 dBm	1 kHz	Bandwidth as in ITU SM.329-9, s4.1
150kHz – 30MHz	- 36 dBm	10 kHz	Bandwidth as in ITU SM.329-9, s4.1
30MHz – 1GHz	-36 dBm	100 kHz	Bandwidth as in ITU SM.329-9, s4.1
1GHz / Fc1-19,2 MHz or F1-10 MHz whichever is the higher	-30 dBm	1 MHz	Bandwidth as in ITU SM.329-9, s4.1



Band	Maximum Level	Measurement Bandwidth	Note
Fc1 – 19,2 MHz or Fl –10 MHz whichever is the higher / Fc1 – 16 MHz or Fl –10 MHz whichever is the higher	–25 dBm	1 MHz	Specification in accordance with ITU-R SM.329–9, s4.1
Fc1 – 16 MHz or Fl –10 MHz whichever is the higher / Fc2 + 16 MHz or Fu +10 MHz whichever is the lower	–15 dBm	1 MHz	Specification in accordance with ITU-R SM.329–9, s4.1
Fc2 + 16 MHz or Fu + 10 MHz whichever is the lower / Fc2 +19,2 MHz or Fu + 10 MHz whichever is the lower	–25 dBm	1 MHz	Specification in accordance with ITU-R SM.329–9, s4.1
Fc2 + 19,2 MHz or Fu +10 MHz whichever is the lower / 12,75 GHz	–30 dBm	1 MHz	Bandwidth as in ITU-R SM.329–9, s4.1. Upper frequency as in ITU-R SM.329–9, s2.5 table 1

(The requirement applies at frequencies within the specified frequency ranges which are more than 4 MHz under the first carrier frequency used or more than 4 MHz above the last carrier frequency used.)

Key Path	Meas Setup, Range Preset
Mode	TD-SCDMA
<b>Remote Command</b>	[ :SENSe] :SPURious:CATegory:B
Example	SPUR:CAT:B
Dependencies	This key is grayed out when the radio device is MS.
Initial S/W Revision	Prior to A.02.00

## Spurious Emissions Measurement Meas Setup

### Mobile (TD-SCDMA only)

Sets the range parameters to meet the requirement of both the MS general and additional spurious emissions limits.

General Spurious emissions requirements

Frequency Bandwidth	Resolution Bandwidth	Minimum requirement
$9 \text{ kHz} \leq f < 150 \text{ kHz}$	1 kHz	-36 dBm
$150 \text{ kHz} \leq f < 30 \text{ MHz}$	10 kHz	-36 dBm
$30 \text{ MHz} \leq f < 1000 \text{ MHz}$	100 kHz	-36 dBm
$1 \text{ GHz} \leq f < 12.75 \text{ GHz}$	1 MHz	-30 dBm

Additional Spurious emissions requirements

Frequency Bandwidth	Resolution Bandwidth	Minimum requirement
$925 \text{ MHz} \leq f \leq 935 \text{ MHz}$	100 KHz	-67 dBm*
$935 \text{ MHz} < f \leq 960 \text{ MHz}$	100 KHz	-79 dBm*
$1805 \text{ MHz} \leq f \leq 1880 \text{ MHz}$	100 KHz	-71 dBm*

\* The measurements are made on frequencies which are integer multiples of 200 kHz.

(These requirements are only applicable for frequencies which are greater than 4 MHz away from the UE center carrier frequency.)

Key Path	Meas Setup, Range Preset
Mode	TD-SCDMA
Remote Command	[ :SENSe]:SPURious:CATegory:MS
Example	SPUR:CAT:MS
Notes	The former command “[:SENSe]:SPURious:CATegory:MOBile” is still supported.
Dependencies	This key is grayed out when the radio device is BTS.
Initial S/W Revision	Prior to A.02.00

### Frequency Setup (TD-SCDMA only)

Sets the required frequency parameters for the calculation of the start/stop frequency of the spurious emissions limits in TD-SCDMA mode.

The measurement does not restart when changing the values of the setup parameters. These parameters are used for calculating the range start and stop frequency in the measurement only. If you are going to

perform a measurement with the newly-input values,, one of the soft key in the “Range Preset” menu should also be pressed afterwards.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

### Center Frequency of the First Carrier (Fc1) (TD-SCDMA only)

Sets the center frequency of emission of the first carrier transmitted by the base station. This parameter is used for calculating the start/stop frequency of the range for base station when the softkey “Category A” or “Category B” under the range preset menu pressed.

Key Path	<b>Meas Setup, Freq Setup</b>
Mode	TD-SCDMA
<b>Remote Command</b>	[ :SENSE] :SPURious:CARRier:FREQuency:STARt <freq> [ :SENSE] :SPURious:CARRier:FREQuency:STARt?
Example	SPUR:CARR:FREQ:STAR 2GHz SPUR:CARR:FREQ:STAR?
Notes	You must be in the TD-SCDMA mode. Use INSTRument:SELEct to set the mode.
Couplings	Coupled with Fc2 and Fl. The value of Fc1 is always not greater than the value of Fc2, and greater than the value of Fl. The following inequation for Fl, Fc1, Fc2 and Fu is satisfied: $Fl + 0.8MHz \leq Fc1 \leq Fc2 \leq Fu - 0.8 MHz$ ; This key is grayed-out when the radio device is MS.
Preset	2.0156 GHz
State Saved	Saved in instrument state.
Min	See Coupling
Max	See Coupling
Initial S/W Revision	Prior to A.02.00

### Center Frequency of the Last Carrier (Fc2) (TD-SCDMA only)

Sets the center frequency of emission of the last carrier transmitted by the base station. This parameter is used for calculating the start/stop frequency of the range for base station when the softkey “Category A” or “Category B” under the range preset menu pressed.

Key Path	<b>Meas Setup, Freq Setup</b>
Mode	TD-SCDMA
<b>Remote Command</b>	[ :SENSE] :SPURious:CARRier:FREQuency:STOP <freq> [ :SENSE] :SPURious:CARRier:FREQuency:STOP?

Spurious Emissions Measurement  
**Meas Setup**

Example	SPUR:CARR:FREQ:STOP 10GHz SPUR:CARR:FREQ:STOP?
Notes	You must be in the TD-SCDMA mode. Use INSTRument:SElect to set the mode.
Dependencies	This key is grayed out when the radio device is MS.
Couplings	Coupled with Fc1 and Fu. The value of Fc2 is always not less than the value of Fc1, and less than the value of Fu. The following inequation for Fl, Fc1, Fc2 and Fu is satisfied: $F_l + 0.8\text{MHz} \leq F_{c1} \leq F_{c2} \leq F_u - 0.8\text{MHz}$ ;
Preset	2.0236 GHz
State Saved	Saved in instrument state.
Min	See Coupling
Max	See Coupling
Initial S/W Revision	Prior to A.02.00

**TDD Lower Frequency (Fl) (TD-SCDMA only)**

Sets the lower frequency of the band in which TDD operates. This parameter is used for calculating the start/stop frequency of the range for base station when the softkey “Category B” under the range preset menu pressed.

Key Path	<b>Meas Setup, Freq Setup</b>
Mode	TD-SCDMA
<b>Remote Command</b>	[ :SENSe]:SPURious:TDD:FREQuency:STARt <freq> [ :SENSe]:SPURious:TDD:FREQuency:STARt?
Example	SPUR:TDD:FREQ:STAR 1GHz SPUR:TDD:FREQ:STAR?
Notes	You must be in the TD-SCDMA mode. Use INSTRument:SElect to set the mode.
Dependencies	This key is grayed out when the radio device is MS.
Couplings	Coupled with Fc1. The value of Fl is always less than the value of Fc1. The following inequation for Fl, Fc1, Fc2 and Fu is satisfied: $F_l + 0.8\text{MHz} \leq F_{c1} \leq F_{c2} \leq F_u - 0.8\text{MHz}$ ;
Preset	2.010 GHz
State Saved	Saved in instrument state.
Min	1.011 GHz
Max	See Coupling
Initial S/W Revision	Prior to A.02.00

### TDD Upper Frequency (Fu) (TD-SCDMA only)

Sets the upper frequency of the band in which TDD operates. This parameter is used for calculating the start/stop frequency of the range for base station when the softkey “Category B” under the range preset menu pressed.

Key Path	Meas Setup, Freq Setup
Mode	TD-SCDMA
<b>Remote Command</b>	[ :SENSE] :SPURious:TDD:FREQuency:STOP <freq> [ :SENSE] :SPURious:TDD:FREQuency:STOP?
Example	SPUR:TDD:FREQ:STOP 1GHz SPUR:TDD:FREQ:STOP?
Notes	You must be in the TD-SCDMA mode. Use INSTRument:SELEct to set the mode.
Dependencies	This key is grayed out when the radio device is MS.
Couplings	Coupled with Fc2. The value of Fu is always greater than the value of Fc2. The following inequation for Fl, Fc1, Fc2 and Fu is satisfied: $F_l + 0.8\text{MHz} \leq F_{c1} \leq F_{c2} \leq F_u - 0.8\text{MHz}$ ;
Preset	2.025 GHz
State Saved	Saved in instrument state.
Min	See Coupling
Max	3.689 GHz
Initial S/W Revision	Prior to A.02.00

### Center Frequency for Mobile (TD-SCDMA only)

Sets the center frequency of the mobile. This parameter is used for calculating the start/stop frequency of the range for mobile after the softkey “Mobile” under the range preset menu pressed.

Key Path	Meas Setup, Freq Setup
Mode	TD-SCDMA
<b>Remote Command</b>	[ :SENSE] :SPURious:CARRier:FREQuency:MS <freq> [ :SENSE] :SPURious:CARRier:FREQuency:MS?
Example	SPUR:CARR:FREQ:MS 2GHz SPUR:CARR:FREQ:MS?
Notes	You must be in the TD-SCDMA mode. Use INSTRument:SELEct to set the mode.  The former SCPI commands “[:SENSE]:SPURious:CARRier:FREQuency:MOBil <freq>” and “[:SENSE]:SPURious:CARRier:FREQuency:MOBil?” are still supported.

Spurious Emissions Measurement  
**Meas Setup**

Dependencies	This key is grayed out when the radio device is BTS.
Preset	2.0204 GHz
State Saved	Saved in instrument state.
Min	1.005 GHz
Max	3.695 GHz
Initial S/W Revision	Prior to A.02.00

**CH Mean Power (DVB-T/H only)**

Set the mean power of the signal channel. The enter value is used to calculate the limit parameter which is different according as the different mean power of the transmitter. This key only shows up in the DVB-T/H.

Category A (mean power < 25W)

Freq Range	Limit	RBW	Note
9kHz~174MHz	-36dBm	100kHz	Required by EN302-296 Chapter 4.2.1 for DVB-T transmitter.
174MHz~400MHz	-82dBm	4kHz	
400MHz~790MHz	-36dBm	100kHz	
790MHz~862MHz	-76dBm	4kHz	
862MHz~1GHz	-36dBm	100kHz	
> 1GHz	-30dBm	100kHz	

Category B (25W<mean power<=1000W)

Freq Range	Limit	RBW	Note
9kHz~174MHz	-36dBm	100kHz	Required by EN302-296 Chapter 4.2.1 for DVB-T transmitter.
174MHz~400MHz	-126dBc	4kHz	
400MHz~790MHz	-36dBm	100kHz	
790MHz~862MHz	-120dBc	4kHz	
862MHz~1GHz	-36dBm	100kHz	
> 1GHz	-30dBm	100kHz	

Category C (mean power > 1000W)

Freq Range	Limit	RBW	Note
9kHz~174MHz	-36dBm	100kHz	Required by EN302-296 Chapter 4.2.1 for DVB-T transmitter.
174MHz~400MHz	-66dBm	4kHz	
400MHz~790MHz	-36dBm	100kHz	
790MHz~862MHz	-60dBm	4kHz	
862MHz~1GHz	-36dBm	100kHz	
> 1GHz	-30dBm	100kHz	

Key Path	Meas Setup
Mode	DVB-T/H
Remote Command	[ :SENSe] :SPURious:CARRier:POWer <real> [ :SENSe] :SPURious:CARRier:POWer?
Example	SPUR:CARR:POW -30.00 dBm SPUR:CARR:POW?
Couplings	When the mean power of the signal channel is between 25 watt and 1000 watt, the measurement uses the current enter value as the reference to calculate the limit parameters.
Preset	-30.00 dBm
State Saved	Saved in instrument state.
Min	-250.0 dBm
Max	250.0 dBm
Initial S/W Revision	A.02.00

## **Mode**

See “[Mode](#)” on page 1635 in the section "Common Measurement Functions" for more information.



---

## **Mode Setup**

See “[Mode Setup](#)” on page 1651 in the section "Common Measurement Functions" for more information.

## Peak Search

Places the selected marker on the trace point with the maximum y-axis value for that marker's trace.

Key Path	<b>Front-panel key</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example	CALC:SPUR:MARK2:MAX
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Next Peak

Moves the selected marker to the peak that has the next highest amplitude less than the current marker value.

Key Path	<b>Peak Search</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT
Example	CALC:SPUR:MARK2:MAX:NEXT
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Next Pk Right

Moves the selected marker to the nearest peak to the right of the current marker which meets all enabled peak criteria.

Key Path	<b>Peak Search</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT
Example	CALC:SPUR:MARK2:MAX:RIGH
Modified at S/W Revision	A.03.00

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Next Pk Left

Moves the selected marker to the nearest peak to the left of the current marker which meets all enabled peak criteria.

Key Path	Peak Search
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT
Example	CALC:SPUR:MARK2:MAX:LEFT
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker Delta

Performs the same function as the Delta 1-of-N selection key in the Marker menu. This sets the control mode for the selected marker to Delta mode. See the Marker section for the complete description of this function. The key is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and change the control of the Marker mode to Delta without having to access two separate menus.

Key Path	Peak Search
Initial S/W Revision	Prior to A.02.00

### Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest y-axis value.

Key Path	Peak Search
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak
Example	CALC:SPUR:MARK:PTP
Notes	Turns on the Marker $\Delta$
Dependencies	This key is not available (key is grayed-out) when <b>Coupled Markers</b> is on.
Modified at S/W Revision	A.03.00

Spurious Emissions Measurement  
**Peak Search**

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

Key Path	<b>Peak Search</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum
Example	CALC:SPUR:MARK:MIN
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

---

## **Recall**

See [“Recall” on page 189](#) in the section "Common Measurement Functions" for more information.

## **Restart**

See “[Restart](#)” on page 1671 in the section "Common Measurement Functions" for more information.

---

## **Save**

See [“Save” on page 205](#) in the section "Common Measurement Functions" for more information.

## **Single**

See “[Single \(Single Measurement/Sweep\)](#)” on page 1677 in the section "Common Measurement Functions" for more information.



---

## **Source**

See [“Source” on page 1679](#) in the section "Common Measurement Functions" for more information.

## **Span X Scale**

Span X Scale is unavailable in the Spurious Emissions measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Sweep/Control

Accesses the Sweep/Control menu keys used to set up and control the sweep time and source.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Sweep Setup

Sets the sweep functions that control the sweep state and time.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

### Auto Sweep Time Rules

Switches the analyzer between normal and accuracy sweep states. Setting **Auto Sweep Time** to **Accy** will result in slower sweep times, usually about three times as long, but better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **Accy**.

Additional amplitude errors which occur when **Auto Sweep Time** is set to **Norm** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **Norm** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **Norm** on a **Preset** or **Auto Couple**. This means that in the Preset or Auto Coupled state, instrument amplitude accuracy specifications do not apply.

Key Path	<b>Sweep/Control, Sweep Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE ] :SPURious:SWEep:TIME:AUTO:RULEs NORMal   ACCuracy [ :SENSE ] :SPURious:SWEep:TIME:AUTO:RULEs?
Example	SPUR:SWE:TIME:AUTO:RUL ACC SPUR:SWE:TIME:AUTO:RUL?
Notes	In Zero Span, this key is irrelevant and inaccessible (because the whole Sweep Setup menu is grayed out), however, Sweep Setup settings can be changed remotely with no error indication.
Preset	NORMal
State Saved	Saved in instrument state.
Range	Norm Accy
Modified at S/W Revision	A.03.00

## Spurious Emissions Measurement Sweep/Control

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Pause

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the key changes to Resume. Pressing the Resume resumes the measurement at the point it was at when paused.

See [“Pause/Resume” on page 1698](#) in the "Common Measurement Functions" section for more information.

Key Path	Sweep/Control
Initial S/W Revision	Prior to A.02.00

### Gate

Accesses a menu that enables you to control the gating function .See Measurement Functions for more details.

The Gate functionality is used to view signals best viewed by qualifying them with other events. See [“Gate ” on page 1699](#) in “common Measurement Functions” for more details.

Key Path	Sweep/Control
Initial S/W Revision	A.03.00

---

## Trace/Detector

Trace/Detector is unavailable in the Spurious Emissions measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## **Trigger**


Accesses the Trigger menu which contains keys to control the 1-of-N selection of the Trigger source.

The trigger functions let you select the trigger settings for a sweep or measurement.

See [“Trigger” on page 1753](#) in the "Common Measurement Functions" section for more information.

## View/Display

### Standard Result Screen

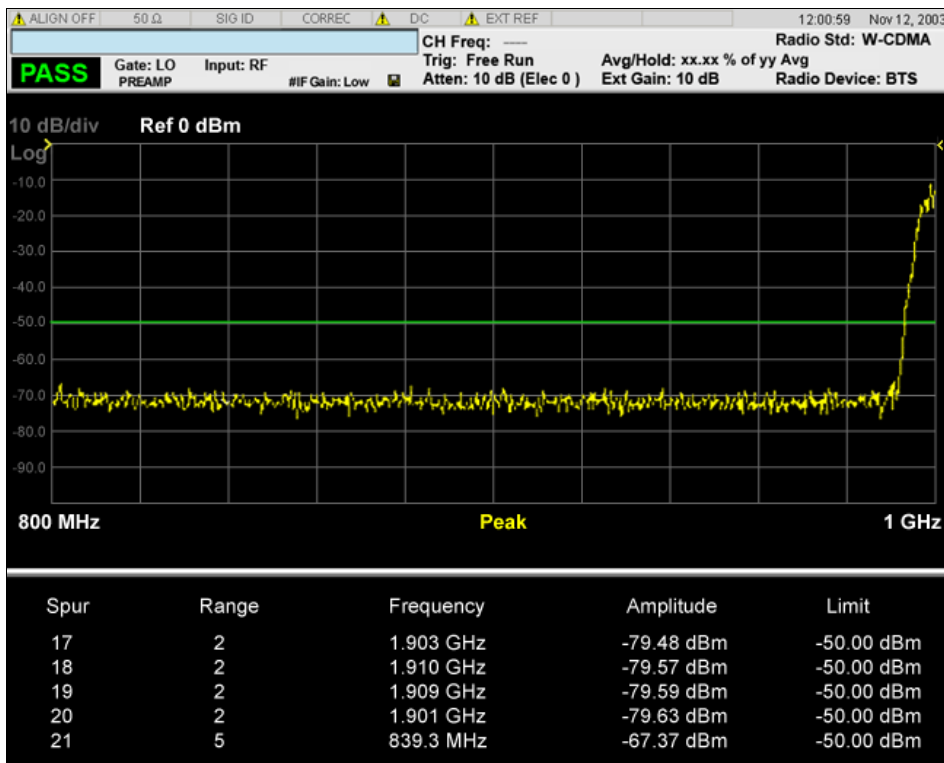

Result	Units	Min	Max
Spur	N/A	0	200
Range	N/A	1	20
Frequency	Hz	Analyzer Min	Analyzer Max
Amplitude	dBm	-150	50
Limit	dBm	-150	50
Initial S/W Revision	Prior to A.02.00		

The spurs listed are within the current value of the Marker Peak Excursion setting of the absolute limit. All of the spurs listed passed. Any spur that has failed the absolute limit will have an 'F' beside it.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## **Display**

Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1813](#) in the "Common Measurement Functions" section for more information.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00



The Occupied Bandwidth measurement computes and displays the bandwidth occupied by a given percentage of the total mean power of a signal. For measurement results and views, see [“View/Display” on page 743](#).

This topic contains the following sections:

[“Remote Commands for Occupied Bandwidth ” on page 693](#)

[“Remote Command Results for Occupied Bandwidth Measurement” on page 693](#)

### Remote Commands for Occupied Bandwidth

```
:CONFigure:OBWidth
:CONFigure:OBWidth:NDEFault
:INITiate:OBWidth
:FETCh:OBWidth [n]?
:MEASure:OBWidth [n]?
:READ:OBWidth [n]?
:FETCh:OBWidth:OBWidth?
:MEASure:OBWidth:OBWidth?
:READ:OBWidth:OBWidth?
:FETCh:OBWidth:FERRor?
:MEASure:OBWidth:FERRor?
:READ:OBWidth:FERRor?
:FETCh:OBWidth:XDB?
:MEASure:OBWidth:XDB?
:READ:OBWidth:XDB?
```

See also the section, [“Remote Measurement Functions” on page 1575](#).

### Remote Command Results for Occupied Bandwidth Measurement

n	Results Returned
---	------------------

## Occupied Bandwidth Measurement

n=1 (or not specified)	Returns 6 scalar results, in the following order: <ol style="list-style-type: none"><li>1. Occupied bandwidth – Hz</li><li>2. Total Power – dBm (Total Power will be obsolete in TD-SCDMA mode, this place will be replaced by NaN)</li><li>3. Span - Hz</li><li>4. Spectrum Trace Points - points</li><li>5. Res BW – Hz</li><li>6. Transmit Frequency Error Hz</li><li>7. x DB Bandwidth - Hz</li></ol>
2	Returns the frequency-domain spectrum trace (data array) for the entire frequency range being measured.

Key Path	Meas
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale (Amplitude/Y Scale)

Activates the Reference Value function and displays the Amplitude menu keys. These functions control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis

See “AMPTD Y Scale” on page 1405 for more information.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value

Sets the absolute power reference value. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEV e1 <real>  :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEV e1?
Example	DISP:OBW:VIEW:WIND:TRAC:Y:RLEV 125  DISP:OBW:VIEW:WIND:TRAC:Y:RLEV?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dBm
State Saved	Saved in instrument state.
Min	-250.00 dBm
Max	250.00 dBm
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back text that describes the total attenuator value.

See “Attenuation” on page 1406 for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Scale/Div

Sets the logarithmic units per vertical graticule division on the display. When the Auto Scaling is On, the Scale/Div is automatically determined by the measurement result. When you set a value manually, Auto Scaling is automatically toggled to Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision <rel_ampl>  :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision?
Example	DISP:OBW:VIEW:WIND:TRAC:Y:PDIV 5 DISP:OBW:VIEW:WIND:TRAC:Y:PDIV?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTRument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dB
State Saved	Saved in instrument state.
Min	0.10 dB
Max	20.00 dB
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude

accuracy at the frequency of the selected marker.

See [“Presel Center” on page 1421](#) for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See [“Preselector Adjust” on page 1422](#) for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Y Axis Unit

Allows you to change the vertical (Y) axis amplitude unit.

See [“Y Axis Unit” on page 1424](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00

### Reference Level Offset

Adds an offset value to the displayed reference level. The reference level is the absolute amplitude represented by the top graticule line on the display.

See [“Reference Level Offset” on page 1429](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00

### μW Path Control

The **μW Path Control** functions include the **μW Preselector Bypass** (Option MPB) and **Low Noise Path** (Option LNP) controls in the High Band path circuits.

See [“μW Path Control” on page 1430](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD/Y Scale</b>
----------	----------------------

Occupied Bandwidth Measurement  
**AMPTD Y Scale (Amplitude/Y Scale)**

Initial S/W Revision	A.04.00
----------------------	---------

### Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See “[Internal Preamp](#)” on page 1435 for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Ref Position

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Key Path	<b>AMPTD Y Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOS ition TOP CENTer BOTTom  :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOS ition?
Example	DISP:OBW:VIEW:WIND:TRAC:Y:RPOS BOTT DISP:OBW:VIEW:WIND:TRAC:Y:RPOS?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.
Preset	TOP
State Saved	Saved in instrument state.
Range	Top   Ctr   Bot
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Auto Scaling

Allows you to toggle the Auto Scaling function between On and Off.

Key Path	<b>AMPTD Y Scale</b>
----------	----------------------

Occupied Bandwidth Measurement  
**AMPTD Y Scale (Amplitude/Y Scale)**

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISP:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON :DISP:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle?
Example	DISP:OBW:VIEW:WIND:TRAC:Y:COUP ON DISP:OBW:VIEW:WIND:TRAC:Y:COUP?
Couplings	When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically sets the scale per division to 10 dB and determines reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	1
State Saved	Saved in instrument state.
Range	On   Off
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Auto Couple**

The Auto Couple function is not supported in this measurement.



## BW

Accesses a menu of functions that enable you to specify and control the video and resolution bandwidths. You can also select the type of filter for the measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Res BW

Sets the resolution bandwidth for the current measurement. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :OBwidth: BANDwidth[:RESolution] <bandwidth> [ :SENSE] :OBwidth: BANDwidth[:RESolution]? [ :SENSE] :OBwidth: BANDwidth[:RESolution] :AUTO ON OFF 1 0 [ :SENSE] :OBwidth: BANDwidth[:RESolution] :AUTO?
Example	OBW:BAND 250000 OBW:BAND? OBW:BAND:AUTO OFF OBW:BAND:AUTO?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.
Couplings	Sweep time is coupled to RBW. As the RBW changes, the sweep time (if set to Auto) is changed to maintain amplitude calibration. Video bandwidth (VBW) is coupled to RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1). When Res BW is set to Auto, the resolution bandwidth is auto-coupled to span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man, bandwidths are entered manually, and these bandwidths are used regardless of other analyzer settings.

Occupied Bandwidth Measurement  
**BW**

Preset	SA: Auto WCDMA: 30 kHz CDMA2K: 12 kHz WIMAX OFDMA: 100kHz TD-SCDMA: 30kHz 1xEVDO: 30kHz ISDB-T: 10kHz CMMB: 3kHz LTE: 30 kHz LTETDD: 30 kHz SA: ON WCDMA, C2K, TD-SCDMA, WIMAX OFDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD: OFF
State Saved	Saved in instrument state.
Min	1 Hz
Max	8 MHz
Backwards Compatibility SCPI	[[:SENSe]:OBWidth:BWIDth[:RESolution]]
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Video BW**

Changes the analyzer post-detection filter.

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[[:SENSe]:OBWidth:BA <b>N</b> Dwidth:VIDeo <bandwidth> [:SENSe]:OBWidth:BA <b>N</b> Dwidth:VIDeo? [:SENSe]:OBWidth:BA <b>N</b> Dwidth:VIDeo:AUTO ON OFF 1 0 [:SENSe]:OBWidth:BA <b>N</b> Dwidth:VIDeo:AUTO?
Example	OBW:BA <b>N</b> D:VID 5 MHz OBW:BA <b>N</b> D:VID? OBW:BA <b>N</b> D:VID:AUTO ON OBW:BA <b>N</b> D:VID:AUTO?

Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.
Dependencies	When using the average detector with either Sweep Time set to Man, or in zero span, the VBW setting has no effect and is disabled (grayed out).
Couplings	<p>Video bandwidth (VBW) is coupled to RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio set by VBW/RBW.</p> <p>Sweep Time is coupled to Video Bandwidth (VBW). As the VBW is changed, the sweep time (when set to Auto) is changed to maintain amplitude calibration. This occurs because of common hardware between the two circuits, even though the Video BW filter is not actually “in-circuit” when the detector is set to Average. Because the purpose of the average detector and the VBW filter are the same, either can be used to reduce the variance of the result.</p> <p>Although the VBW filter is not “in-circuit” when using the average detector, the Video BW key can have an effect on (Auto) sweep time, and is not disabled. In this case, reducing the VBW setting increases the sweep time, which increases the averaging time, producing a lower-variance trace.</p> <p>When the video bandwidth is AUTO coupled, the video bandwidth value is set to:  Resolution Bandwidth * Video Bandwidth to Resolution Bandwidth Ratio</p>
Preset	SA, LTE, LTETDD: Auto WCDMA: 300 kHz CDMA2K:120 kHz WIMAX OFDMA: 1MHz TD-SCDMA: 300kHz 1xEVDO: 300kHz ISDB-T: 300Hz CMMB: 3kHz ON ISDB-T, CMMB: OFF
State Saved	Saved in instrument state.
Min	1 Hz
Max	50 MHz
Backwards Compatibility SCPI	[:SENSe]:OBWidth:BWIDth:VIDeo
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Filter Type

Allows you to select the type of filter to be used for the current measurement. Besides the Gaussian filter shape, there are certain special filter types, such as Flat Top, that are desirable under certain conditions.

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe]:OBWidth:BANDwidth:SHAPE GAUSSian FLATtop [ :SENSe]:OBWidth:BANDwidth:SHAPE?
Example	OBW:BAND:SHAP GAUS OBW:BAND:SHAP?
Preset	GAUSSian
State Saved	Saved in instrument state.
Range	Gaussian Flattop
Backwards Compatibility SCPI	[ :SENSe]:OBWidth:BWIDth:SHAPE
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

---

## **Cont (Continuous)**

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451 in the section "Common Measurement Functions" for more information.

## **FREQ/Channel (Frequency or Channel)**

See “[FREQ/Channel](#)” on page 1453 in the section "Common Measurement Functions" for more information.

---

## **Input/Output**

See [“Input/Output” on page 1459](#) in the section "Common Measurement Functions" for more information.

## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

For more information, see “[Marker](#)” on page 1531.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Select Marker

Displays the menu keys that enable you to select, set up and control the markers for the current measurement

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

## Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:OBWidth:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :X <real>  :CALCulate:OBWidth:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :X ?
Example	CALC:OBW:MARK3:X 0 CALC:OBW:MARK3:X?
Notes	The query returns the marker’s absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker’s reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> .
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.03.00



Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition <real>  :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition?
Example	CALC:OBW:MARK10:X:POS 0 CALC:OBW:MARK10:X:POS?
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> .
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y ?
Example	CALC:OBW:MARK11:Y?
Preset	Result dependent on Markers setup and signal source.
State Saved	No
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Marker Type

Sets the marker control mode to **Normal**, **Delta** or **Off**. If the selected marker is Off, pressing Marker sets it to Normal and places a single marker at the center of the display. At the same time, **Marker X Axis Value** appears on the Active Function area.

Key Path	Marker
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
Remote Command	:CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?
Example	CALC:OBW:MARK:MODE POS CALC:OBW:MARK:MODE?
Notes	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.  Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.  Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision.
Preset	OFF
State Saved	Saved in instrument state.
Range	Normal   Delta   Off
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Properties

Accesses the marker properties menu.

Key Path	Marker
Initial S/W Revision	Prior to A.02.00

## Select Marker

Displays 12 markers available for selection.

Key Path	Marker, Properties
----------	--------------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Relative To

Selects the desired marker. The selected marker will be relative to its reference marker.

Key Path	<b>Marker, Properties</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>  :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?
Example	CALC:OBW:MARK:REF 2  CALC:OBW:MARK:REF?
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."  When queried a single value is returned (the specified marker numbers relative marker).  You must be in the Spectrum Analysis mode, WCDMA mode, TD-SCDMA mode, 1xEVDO mode, WIMAX OFDMA mode ISDB-T mode, CMMB mode, LTE mode, or LTETDD mode to use this command. Use:INSTrument:SElect to set the mode.
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### All Markers Off

Turns off all markers.

Key Path	<b>Marker</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:OBWidth:MARKer:AOff
Example	CALC:OBW:MARK:AOff

Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Backward Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker which is OFF to state ON or 1 puts it in Normal mode and places it at the center of the screen.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe OFF ON 0 1 :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe?
Example	CALC:OBW:MARK3:STAT ON CALC:OBW:MARK3:STAT?
Preset	OFF
State Saved	Saved in instrument state.
Range	On   Off
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

---

## **Marker Function**

There are no 'Marker Functions' supported in this measurement.

Key Path	<b>Front panel key</b>
Initial S/W Revision	Prior to A.02.00

## Marker To

There is no 'Marker To' functionality supported in this measurement.

Key Path	<b>Front panel key</b>
Initial S/W Revision	Prior to A.02.00

---

## **Meas**

See [“Meas” on page 1575](#) in the section "Common Measurement Functions" for more information.

## Meas Setup

Displays the setup menu for the current measurement. The measurement setup parameters include the number of measurement averages used to calculate the measurement result and the averaging mode. The setup menu also includes the option to reset the measurement settings to their factory defaults.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Avg/Hold Num

Specifies the number of measurement averages used when calculating the measurement result. The average is displayed at the end of each sweep.

Initiates an averaging routine that averages the sweep points in a number of successive sweeps, resulting in trace smoothing.

After the specified number of average counts, the average mode (termination control) setting determines the average action.

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe]:OBWidth:AVERage:COUNT <integer> [ :SENSe]:OBWidth:AVERage:COUNT? [ :SENSe]:OBWidth:AVERage[:STATe] ON OFF 1 0 [ :SENSe]:OBWidth:AVERage[:STATe]?
Example	OBW:AVER:COUN 1500 OBW:AVER:COUN? OBW:AVER ON OBW:AVER?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTRument:SELEct to set the mode.
Couplings	None Averaging state is coupled to Max Hold. If Max Hold is changed from Off to On, Averaging state is automatically set to On.
Preset	10 ON



State Saved	Saved in instrument state.
Min	1
Max	10000
Backwards Compatibility SCPI	[:SENSe]:EBWidth:AVERage:COUNT
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Avg Mode

Enables you to set the averaging mode.

When set to Exponential (Exp) the measurement averaging continues using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep.

When set to Repeat, the measurement resets the average counter each time the specified number of averages is reached.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA , 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[:SENSe]:OBWidth:AVERage:TCONtrol EXPonential REPeat [:SENSe]:OBWidth:AVERage:TCONtrol?
Example	OBW:AVER:TCON REP OBW:AVER:TCON?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.
Preset	EXP
State Saved	Saved in instrument state.
Range	Exp   Repeat
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Max Hold (Remote Command Only)

When On, Max Hold displays and holds the maximum responses of the current measurement. Turn Max

Occupied Bandwidth Measurement  
**Meas Setup**

Hold to Off to disable the maximum hold feature.

Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :OBWidth:MAXHold ON OFF 1 0 [ :SENSE] :OBWidth:MAXHold?
Example	OBW:MAXH ON OBW:MAXH?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.
Couplings	Max Hold is coupled to Average/Hold state. The Max Hold function is activated only if Average state is On. If Max Hold is changed to On when Average state is Off, Average state is automatically set to On.
Preset	OFF
State Saved	Saved in instrument state.
Range	On   Off
Backwards Compatibility SCPI	[ :SENSE]:EBWidth:MAXHold
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Occ BW % Pwr**

Assigns the percentage of the total power that is measured within the Occupied Bandwidth for the current measurement. The resulting Occupied Bandwidth limits are displayed by markers placed on the frequencies of the specified percentage.

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :OBWidth:PERCent <real> [ :SENSE] :OBWidth:PERCent?
Example	OBW:PERC 75 OBW:PERC?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.

Preset	99.00
State Saved	Saved in instrument state.
Min	10
Max	99.99
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### x dB

Sets the x dB value used for the "x dB bandwidth" result that measures the bandwidth between two points on the signal which is x dB down from the highest signal point within the OBW Span.

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:OBWidth:XDB <rel_ampl> [ :SENSE]:OBWidth:XDB?
Example	OBW:XDB -20 OBW:XDB?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.
Preset	-26.0 dB
State Saved	Saved in instrument state.
Min	-100.0 dB
Max	-0.1 dB
Backwards Compatibility SCPI	[ :SENSe]:EBWidth:XDB
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### IF Gain

The **IF Gain** key can be used to set the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

Key Path	<b>Meas Setup, IF Gain</b>
----------	----------------------------

Occupied Bandwidth Measurement  
**Meas Setup**

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**IF Gain Auto**

Activates the Auto Rules for IF Gain. When Auto is active, the IF Gain is set to High Gain under and of the following conditions:

- the input attenuator is set to 0 dB
- the preamp is turned On and the frequency range is under 3.6 GHz

For other settings, Auto sets the IF Gain to Low Gain.

Key Path	Meas Setup, IF Gain
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:OBWidth:IF:GAIN:AUTO[:STATE] ON OFF 1 0 [ :SENSE]:OBWidth:IF:GAIN:AUTO[:STATE]?
Example	OBW:IF:GAIN:AUTO OFF OBW:IF:GAIN:AUTO?
Couplings	When the auto attenuation exists (for example, with electrical attenuator), the IF Gain setting is changed as following rule.  Auto sets IF Gain to High Gain under any of the following conditions: the input attenuator is set to 0 dB, or the preamp is turned on and the frequency range is less than 3.6 GHz. For other settings, Auto sets IF Gain to Low Gain.
Preset	OFF
State Saved	Saved in instrument state.
Range	Off On
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**IF Gain State**

Selects the range of the IF Gain.

Key Path	Meas Setup, IF Gain
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:OBWidth:IF:GAIN[:STATE] ON OFF 1 0 [ :SENSE]:OBWidth:IF:GAIN[:STATE]?
Example	OBW:IF:GAIN ON OBW:IF:GAIN?

Notes	Where ON = high gain OFF = low gain
Couplings	When the auto attenuation exists (for example, with electrical attenuator), the IF Gain setting is changed as following rule. Auto sets IF Gain to High Gain under any of the following conditions: the input attenuator is set to 0 dB, or the preamp is turned on and the frequency range is less than 3.6 GHz. For other settings, Auto sets IF Gain to Low Gain.
Preset	OFF
State Saved	Saved in instrument state.
Range	Low Gain   High Gain
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Limit

Enables you to turn on or off limit checking at the specified frequency. For results that fail the limit test, a red FAIL appears in the measure bar.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:OBwidth:LIMit:FBLimit <freq> :CALCulate:OBwidth:LIMit:FBLimit? :CALCulate:OBwidth:LIMit[:TEST] ON OFF 1 0 :CALCulate:OBwidth:LIMit[:TEST]?
Example	CALC:OBW:LIM:FBL 50 kHz CALC:OBW:LIM:FBL? CALC:OBW:LIM OFF CALC:OBW:LIM?
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SELect to set the mode.

Occupied Bandwidth Measurement  
**Meas Setup**

Preset	SA, WCDMA: 5 MHz C2K: 1.48 MHz WIMAX OFDMA: 10MHz TD-SCDMA: 1.6MHz 1xEVDO: 1.48MHz ISDB-T: 5.7MHz CMMB: 7.512MHz LTE, LTETDD: 5 MHz SA: OFF WCDMA, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD: ON
State Saved	Saved in instrument state.
Min	1 kHz
Max	Hardware Dependent: Option 503 = 3.7 GHz Option 507 = 7.1 GHz Option 508 = 8.5 GHz Option 513 = 13.8 GHz Option 526 = 27.0 GHz
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Meas Preset**

Restores all measurement parameters to their default values.

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CONFigure:OBWidth
Example	CONF:OBW
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

---

## **Mode**

See [“Mode” on page 1635](#) in the section "Common Measurement Functions" for more information.

## **Mode Setup**

See “[Mode Setup](#)” on page 1651 in the section "Common Measurement Functions" for more information.



## Peak Search

Places the selected marker on the trace point with the maximum y-axis value for that marker's trace. Pressing Peak Search with the selected marker off causes the selected marker to be set to Normal, then a peak search is immediately performed.

Key Path	Front panel key
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example	CALC:OBW:MARK2:MAX
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Recall**

See “[Recall](#)” on page 189 in the section "Common Measurement Functions" for more information.

---

## **Restart**

See [“Restart” on page 1671](#) in the section "Common Measurement Functions" for more information.

## **Save**

See “[Save](#)” on page 205 in the section "Common Measurement Functions" for more information.

---

## **Single**

See “[Single \(Single Measurement/Sweep\)](#)” on page 1677 in the section "Common Measurement Functions" for more information.

## **Source**

See [“Source” on page 1679](#) in the section "Common Measurement Functions" for more information.

## Span X Scale

Activates the Span function and displays the menu of span functions. The parameter values are measurement independent.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Span

Set the frequency of the occupied bandwidth span for the current measurement.

Key Path	<b>Span X Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe ] :OBWidth:FREQuency:SPAN <freq> [ :SENSe ] :OBWidth:FREQuency:SPAN?
Example	OBW:FREQ:SPAN 2.4 MHz OBW:FREQ:SPAN?
Couplings	When changing the Occupied Bandwidth Span, the Resolution Bandwidth and Video Bandwidth are set to AUTO to prevent the span from clipping.
Preset	SA: 3 MHz WCDMA: 10 MHz WIMAX OFDMA: 20MHz CDMA2K:2MHz TD-SCDMA: 4.8MHz 1xEVDO: 3.75MHz ISDB-T: 20MHz CMMB: 10MHz LTE, LTETDD: 20 MHz
State Saved	Saved in instrument state.
Min	100 Hz

Occupied Bandwidth Measurement  
**Span X Scale**

Max	Hardware Dependent: Option 503 = 3.7 GHz Option 507 = 7.1 GHz Option 508 = 8.5 GHz Option 513 = 13.8 GHz Option 526 = 27.0 GHz
Backwards Compatibility SCPI	[:SENSe]:EBWidth:FREQuency:SPAN
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Full Span

Changes the Occupied Bandwidth Span to show the full frequency range of the analyzer. When using external mixing, it changes the displayed frequency span to the frequency range specified for the selected external mixing band.

Key Path	<b>Span X Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :OBWidth:FREQuency:SPAN:FULL
Example	OBW:FREQ:SPAN:FULL
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, cdma2000 mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.
Couplings	Selecting full span changes the measurement span value.
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Last Span

Changes the measurement frequency span to previous measurement span setting. If there is no existing previous span value then the span remains unchanged.

Key Path	<b>Span X Scale</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe] :OBWidth:FREQuency:SPAN:PREVious
Example	OBW:FREQ:SPAN:PREV



Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, ISDB-T mode, CMMB mode, LTE mode, LTE TDD mode, cdma2000 mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode.
Couplings	Selecting last span changes the measurement span value.
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Sweep/Control

Displays a menu of functions that enable you to set up and control the sweep time and source for the current measurement.

For details about this key, see “Sweep/Control” on page 1687.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### Sweep Time

Selects the length of time in which the spectrum analyzer sweeps the displayed frequency span. Additional overhead time, which impacts the sweep rate, is not calculated as part of the sweep time. In fact:

sweep rate = span/sweep time

update rate = 1/(sweep time + overhead)

sweep cycle time = sweep time + overhead

Sweep time is coupled to RBW and VBW, and is impacted by the number of sweep points, so changing those parameters may change the sweep time.

This is not available when the selected input is I/Q.

Key Path	Sweep/Control
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:OBWidth:SWEep:TIME <time> [ :SENSE]:OBWidth:SWEep:TIME? [ :SENSE]:OBWidth:SWEep:TIME:AUTO OFF ON 0 1 [ :SENSE]:OBWidth:SWEep:TIME:AUTO?
Example	OBW:SWE:TIME 50 ms OBW:SWE:TIME? OBW:SWE:TIME:AUTO ON OBW:SWE:TIME:AUTO?
Couplings	When you manually change the Sweep Time, this state automatically goes to ‘Man’.

Preset	SA,WIMAX OFDMA, C2K, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD: Automatically Calculated  WCDMA: 32.6 ms  SA, WIMAX OFDMA, C2K, TD-SCDMA, 1xEVDOISDB-T, CMMB, LTE, LTETDD: ON  WCDMA: OFF
State Saved	Saved in instrument state.
Min	1 ms
Max	4000 s
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Sweep Setup

Accesses the sweep setup settings for the current measurement.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Auto Sweep Time Rules

Switches the analyzer between normal and accuracy sweep states.

Setting Auto Sweep Time to Accy results in slower sweep times, usually about three times as long, but better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when Auto Sweep Time is set to Accy.

Additional amplitude errors which occur when Auto Sweep Time is set to Norm are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, Norm is the preferred setting of Auto Sweep Time. Auto Sweep Time is set to Norm on a Preset or Auto Couple. This means that in the Preset or Auto Coupled state, instrument amplitude accuracy specifications do not apply.

Key Path	<b>Sweep/Control, Sweep Setup</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :OBWidth:SWEEP:TIME:AUTO:RULES NORMal   ACCuracy [ :SENSE] :OBWidth:SWEEP:TIME:AUTO:RULES?
Example	OBW:SWEEP:TIME:AUTO:RUL NORM OBW:SWEEP:TIME:AUTO:RUL?
Notes	Set to Norm when Auto Couple is pressed or sent remotely.

Occupied Bandwidth Measurement  
Sweep/Control

Preset	NORMal
State Saved	Saved in instrument state.
Range	Norm   Accy
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Pause

Pauses the measurement after the current data acquisition is complete.

When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point where it had been paused.

See “[Pause/Resume](#)” on page 1698 for more information.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Gate

Accesses a menu that enables you to control the gating function .

The Gate functionality is used to view signals best viewed by qualifying them with other events.

This function is not available when the selected input is I/Q.

See “[Gate](#) ” on page 1699 for more information.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Points

Sets the number of points per sweep. The resolution of setting the sweep time depends on the number of points selected. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display.

Key Path	<b>Sweep/Control</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE] :OBWidth:SWEEp:POINTs <integer> [ :SENSE] :OBWidth:SWEEp:POINTs?
Example	OBW:SWE:POIN 1500 OBW:SWE:POIN?

Notes	<p>This function is not available when signal identification is set to On (external mixing).</p> <p>Affected by:</p> <p>log sweep, segmented sweep</p> <p>Grayed out in measurements that don't support swept</p> <p>Blanked in modes that do not support swept.</p> <p>Whenever the number of sweep points change:</p> <ul style="list-style-type: none"> <li>- All trace data is erased</li> <li>- Any traces with Update Off also go to Display Off (like going from View to Blank in the older analyzers)</li> <li>- Sweep time is re-quantized</li> <li>- Any limit lines that are on are updated</li> <li>- If averaging/hold is on, averaging/hold starts over</li> </ul>
Couplings	Whenever the number of sweep points change, the sweep time is re-quantized.
Preset	1001
State Saved	Saved in instrument state.
Min	101
Max	20001
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Trace/Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Trace Type

Allows you to select the type of trace you want to you use for the current measurement.

The first page of this menu contains a 1-of-N selection of the trace type (Clear Write, Average, Max Hold, Min Hold) for the selected trace.

LP Note: The keys Clear Write, Average, Maxhold and Minhold use Trace Type information and the same help map id.

Key Path	<b>Trace/Detector</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:TRACe:OBWidth:TYPE WRITe AVERAge MAXHold MINHold :TRACe:OBWidth:TYPE?
Example	TRAC:OBW:TYPE MINH TRAC:OBW:TYPE?
Notes	WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold
Couplings	When Detector setting is “Auto” ([:SENSe]:OBWidth:DETEctor:AUTO?), Detector ([:SENSe]:OBWidth:DETEctor[:FUNCTion]?) switches aligning with the switch of this parameter: “NORMal” with WRITe (Clear Write), “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold.
Preset	AVERAge
State Saved	Saved in instrument state.
Range	WRITe AVERAge MAXHold MINHold
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Detector

Accesses a menu of functions that enables you to control the detectors for the current measurement. The following choices are available:

- Auto- the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.
- Normal-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average-the detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales).
- Peak (Positive)-the detector determines the maximum of the signal within the sweep points.
- Sample-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak-the detector determines the minimum of the signal within the sweep points.

Key Path	<b>Detector</b>
Initial S/W Revision	Prior to A.02.00

## Detector Selection

Allows you to select a specific detector for the current measurement. When the detector choice is Auto, the analyzer selects the detector. The selected detector depends on marker functions, trace functions, and trace averaging functions for the current measurement.

Key Path	<b>Trace/Detector</b>
Mode	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE ] :OBWidth:DETECTOR [ :FUNCTION ] NORMAL   AVERAGE   POSITIVE   SAMPLE   NEGATIVE [ :SENSE ] :OBWidth:DETECTOR [ :FUNCTION ] ?
Example	OBW:DET NORM OBW:DET?

Notes	<p>When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings.</p> <p>The detector choices are:</p> <p>The Normal detector determines the peak of CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.</p> <p>The Average detector determines the average of the signal within the sweep points. The averaging method is Power Average (RMS).</p> <p>The Peak detector determines the maximum of the signal within the sweep points.</p> <p>The Sample detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.</p> <p>The Negative Peak detector determines the minimum of the signal within the sweep points.</p>
Couplings	When Detector setting is “Auto” ([[:SENSe]:OBWidth:DETECTOR:AUTO?]), Detector ([[:SENSe]:OBWidth:DETECTOR:FUNCTION?]) switches aligning with the switch of this parameter: “NORMAl” with Clear Write, “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold.
Preset	AVERAge ISDB-T: Peak
State Saved	Saved in instrument state.
Range	Normal   Average   Peak   Sample   Negative Peak
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Auto

When the detector choice is Auto, the analyzer selects the detector. The selected detector depends on marker functions, trace functions, and trace averaging functions for the current measurement.

Key Path	<b>Trace/Detector</b>
Remote Command	[[:SENSe]:OBWidth:DETECTOR:AUTO ON OFF 1 0 [:SENSe]:OBWidth:DETECTOR:AUTO?
Example	OBW:DET:AUTO ON OBW:DET:AUTO?
Couplings	When Detector setting is “Auto” ([[:SENSe]:OBWidth:DETECTOR:AUTO?]), Detector ([[:SENSe]:OBWidth:DETECTOR:FUNCTION?]) switches aligning with the switch of this parameter: “NORMAl” with Clear Write, “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold.



Preset	ON ISDB-T: OFF
State Saved	Saved in instrument state.
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## **Trigger**

See [“Trigger” on page 1753](#) in the section "Common Measurement Functions" for information about all keys in this menu.

---

## View/Display

Accesses a menu of functions that enable you to set the view and display parameters for the current measurement.

The following result descriptions are available:

### Occupied Bandwidth

The occupied bandwidth result is  $f_2 - f_1$ , where  $f_1$  and  $f_2$  are calculated .

### Total Power

The total power is the power integrated in the specified span setting.

### Transmit Freq Error

The transmit freq error (transmit frequency error) result is calculated as the difference between  $(f_2+f_1)/2$  and the tuned center frequency of the signal, where  $f_1$  and  $f_2$  are calculated.

### x dB Bandwidth

The x dB result is a bandwidth measured between two points on the signal which are a certain number of dBs down from the highest signal point within the OBW Span. For example, If the 'x dB' parameter is set to -26dB, and the 'Occupied BW Span' is set to 10 MHz, then the maximum signal power level is first determined from the 10MHz wide trace sweep. Next, the two furthest frequencies below (xdb\_f1) and above (xdb\_f2) the frequency of the maximum level occurrence are found where the signal level is 26dB below the peak level. This calculation also uses linear interpolation to find the lower and upper carrier boundary point within the width of a sweep point (the span divided by the number of sweep points).

The x dB bandwidth is calculated to be  $xdb\_f2 - xdb\_f1$ .

### View

There is a single results view available for this measurement.

### Spectrum View


---

**NOTE** An asterisk next to the x dB bandwidth value indicates the results may not have been determined with optimal analyzer settings. If this result (emission bandwidth) is your primary interest, select Meas Setup, Max Hold, On. Then change the detector mode to peak. Acquiring peak data ensures accuracy of the result.


---

For SA, WCDMA, C2K, 1xEVDO, WIMAX OFDMA mode:

Occupied Bandwidth Measurement  
View/Display

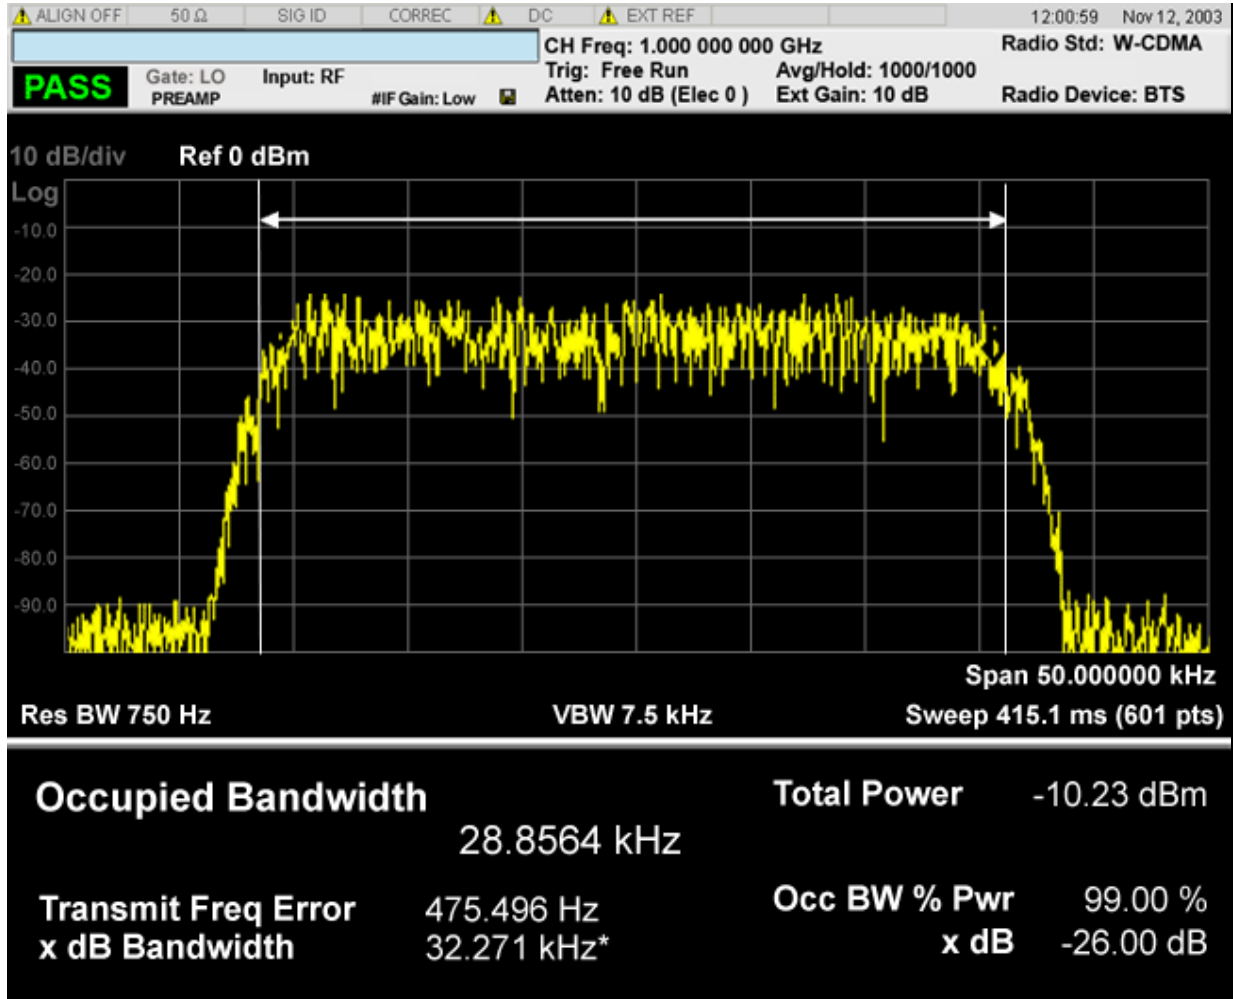

For TD-SCDMA mode only:

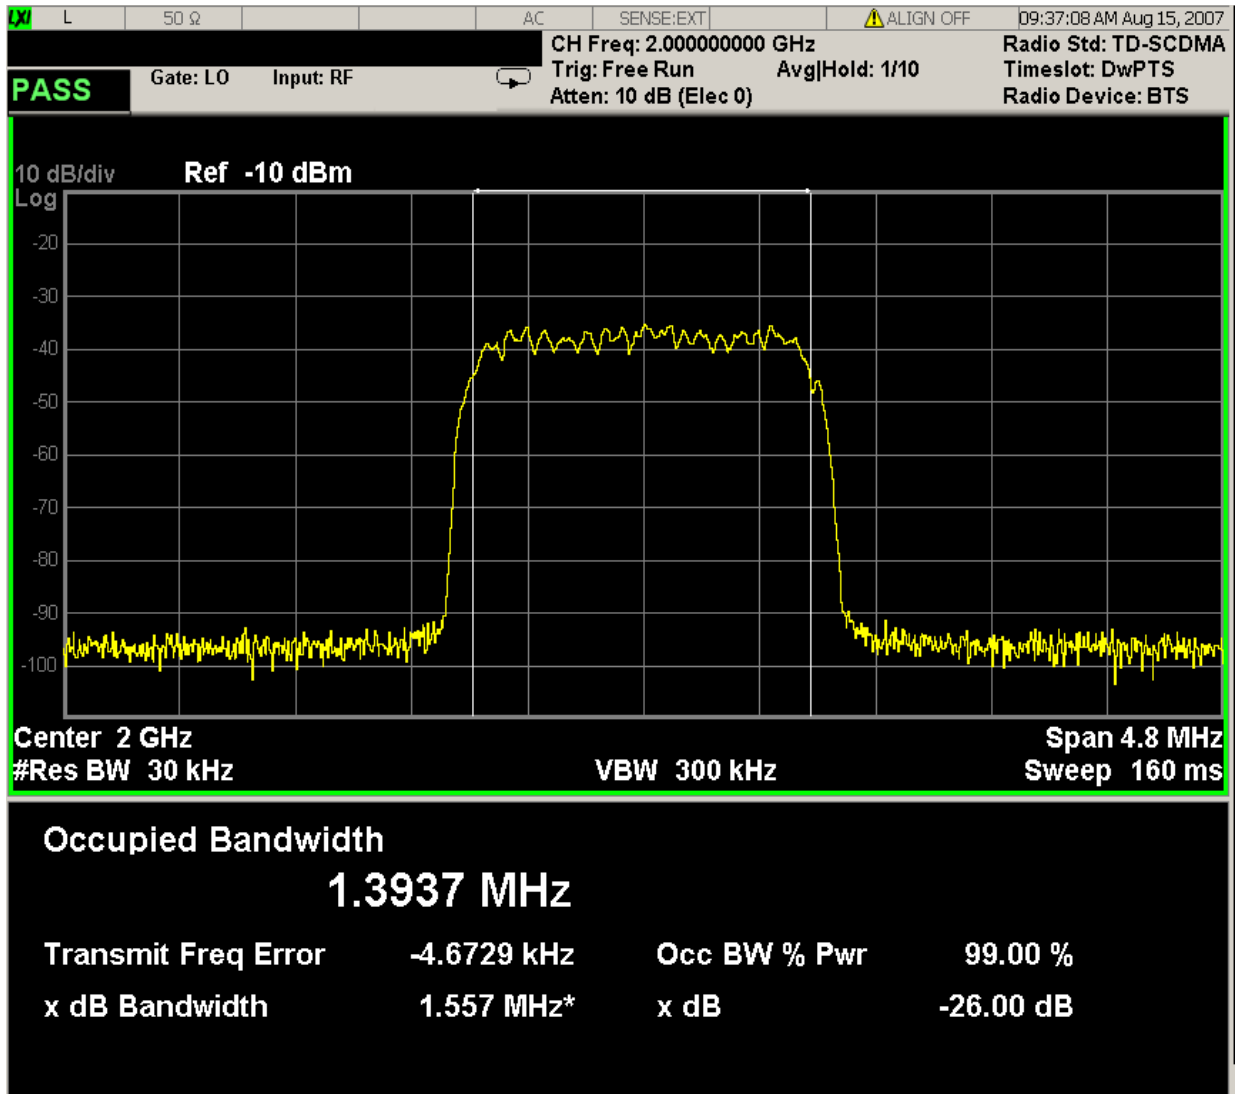

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## Display

Accesses a menu of functions that enable you to set the display parameters.

See “[Display](#)” on page 1813 in the section “Common Measurement Functions” for more information.

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00



Many of the digitally modulated signals now look noise-like in the time and frequency domain. This means that statistical measurements of the signals can be a useful characterization. Power Complementary Cumulative Distribution Function (CCDF) curves characterize the higher level power statistics of a digitally modulated signal. The curves can be useful in determining design parameters for digital communications systems. For more information, see [“Power Stat CCDF Measurement Description” on page 749](#). For measurement results and views, see [“View/Display” on page 786](#).

This topic contains the following sections:

[“Measurement Commands for Power Stat CCDF” on page 747](#)

[“Remote Command Results for Power Stat CCDF” on page 748](#)

### **Measurement Commands for Power Stat CCDF**

The general functionality of CONFigure, FETCh, MEASure, and READ are described at the beginning of this section. See the SENSE:PStat commands for more measurement related commands.

```
:CONFigure:PStatistic  
:CONFigure:PStatistic:NDEFault  
:INITiate:PStatistic  
:FETCh:PStatistic[n]?  
:READ:PStatistic[n]?  
:MEASure:PStatistic[n]?
```

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1575](#).

## Remote Command Results for Power Stat CCDF

n	Results Returned
0	Returns unprocessed I/Q trace data, as a series of trace point values, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values,
not specified or 1	Returns 10 scalar results: <ol style="list-style-type: none"> <li>1. Average input power (in dBm)</li> <li>2. Probability at the average input power level (in %)</li> <li>3. Power level that has 10% of the power</li> <li>4. Power level that has 1% of the power</li> <li>5. Power level that has 0.1% of the power</li> <li>6. Power level that has 0.01% of the power</li> <li>7. Power level that has 0.001% of the power</li> <li>8. Power level that has 0.0001% of the power</li> <li>9. Peak power (in dB)</li> <li>10.Count</li> </ol>
2	Returns a series of 5001 floating the current measured power stat trace. This is the probability at particular power levels (average power), in the following order: <ol style="list-style-type: none"> <li>1. Probability at 0.0 dB power</li> <li>2. Probability at 0.01 dB power</li> <li>3. Probability at 0.02 dB power</li> <li>...</li> <li>1. Probability at 49.9 dB power</li> <li>2. Probability at 50.0 dB power</li> </ol>
3	Returns a series of 5001 floating point numbers (in percent) that represent the Gaussian trace. This is the probability at particular power levels (average power), in the following order: <ol style="list-style-type: none"> <li>1. Probability at 0.0 dB power</li> <li>2. Probability at 0.01 dB power</li> <li>3. Probability at 0.02 dB power</li> <li>...</li> <li>1. Probability at 49.9 dB power</li> <li>2. Probability at 50.0 dB power</li> </ol>



n	Results Returned
4	Returns a series of 5001 floating point numbers (in percent) that represent the user-definable reference trace. This is the probability at particular power levels (average power), in the following order: <ol style="list-style-type: none"> <li>1. Probability at 0.0 dB power</li> <li>2. Probability at 0.01 dB power</li> <li>3. Probability at 0.02 dB power</li> <li>...</li> <li>1. Probability at 49.9 dB power</li> <li>2. Probability at 50.0 dB power</li> </ol>

**Power Stat CCDF Measurement Description**

The power statistics CCDF measurement can be affected by many factors. For example, modulation filtering, modulation format, combining the multiple signals at different frequencies, number of active codes, and correlation between symbols on different codes with spread spectrum systems will all affect measurement results. These factors are all related to modulation and signal parameters. External factors such as signal compression and expansion by nonlinear components, group delay distortion from filtering, and power control within the observation interval also affect the measurement.

The power measured in power statistics CCDF curves is actually instantaneous envelope power defined by the equation:

$$P = (I^2 + Q^2) / Z_0$$

(Where I&Q are the quadrature voltage components of the waveform and Z<sub>0</sub> is the characteristic impedance).

A CCDF curve is defined by how much time the waveform spends at or above a given power level. The percent of time the signal spends at or above the level defines the probability for that particular power level. For capturing a lower probability down to 0.0001%, this measurement is made in the single mode by pressing Single. To make the power statistics CCDF measurement, the instrument uses digital signal processing (DSP) to sample the input signal in the channel bandwidth. The Gaussian distribution line as the band-limited Gaussian noise CCDF reference line, the user-definable reference trace, and the currently measured trace can be displayed on a semi-log graph. If the currently measured trace is above the user reference trace, it means that the higher peak power levels against the average power are included in the input signal.

Key Path	Meas
----------	------

---

## AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. The parameter values are measurement independent except all Attenuation values, and the Internal Preamp selection, which are the same across all measurements.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back text that describes the total attenuator value.

See AMPTD Y Scale, “Attenuation” on page 1406 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value. Refer to “Range” on page 1415 in the “Common Measurement Functions” for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See AMPTD Y Scale, “Presel Center” on page 1421 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See AMPTD Y Scale, “[Preselector Adjust](#)” on page 1422 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Y Axis Unit

Allows you to change the vertical (Y) axis amplitude unit.

See “[Y Axis Unit](#)” on page 1424 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	A.04.00

### Reference Level Offset

Adds an offset value to the displayed reference level. The reference level is the absolute amplitude represented by the top graticule line on the display.

See “[Reference Level Offset](#)” on page 1429 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	A.04.00

### $\mu$ W Path Control

The  $\mu$ W Path Control functions include the  $\mu$ W Preselector Bypass (Option MPB) and Low Noise Path (Option LNP) controls in the High Band path circuits.

See  $\mu$ “ [\$\mu\$ W Path Control](#)” on page 1430 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	A.04.00

## **Internal Preamp**

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, “[Internal Preamp](#)” on page 1435 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

---

## **Auto Couple**

See “[Auto Couple](#)” on page 1437 in the section "Common Measurement Functions" for more information.

## BW

Opens the BW menu, which contains keys to control the information bandwidth functions of the instrument.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Info BW

Allows you to enter a frequency value to set the channel bandwidth that will be used for data acquisition.

Key Path	<b>BW</b>
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:PStatistic:BANDwidth <freq> [ :SENSE]:PStatistic:BANDwidth?
Example	PST:BAND 8 MHz PST:BAND?
Couplings	WiMAX OFDMA: The default value depends on the Radio Standard selection..
Preset	SA, WCDM: 5 MHz C2K:1.5 MHz 1xEV-DO:1.3 MHz WiMAX OFDMA: Hardware Dependent No Option = 10 MHz WB (25 MHz or wider) = 25 MHz TD-SCDMA: 1.3 MHz DVB-T/H, DTMB: 8 MHz ISDB-T: 6 MHz CMMB: 8 MHz LTE, LTETDD: 6 MHz
State Saved	Saved in instrument state.
Min	10.0 kHz

Max	<p>Hardware Dependent:</p> <p>RF Input:</p> <p>No Option = 10 MHz</p> <p>WB (25MHz or wider) = Hardware Option Limit</p> <p>I/Q Input (for I+jQ):</p> <p>No Option = 20 MHz</p> <p>Option B25 = 50 MHz</p>
Backwards Compatibility SCPI	[:SENSe]:PStatistic:BWIDth
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.06.00
Initial S/W Revision	Prior to A.02.00

## **Cont**

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451 in the section "Common Measurement Functions" for more information.



---

## **FREQ Channel**

See [“FREQ/Channel” on page 1453](#) in the section "Common Measurement Functions" for more information.

## **Input/Output**

See “[Input/Output](#)” on page 1459 in the section "Common Measurement Functions" for more information.

## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Accesses a menu that allows you to select one of 12 markers for control and function

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Type

Sets the marker control mode to **Normal**, **Delta**, **Fixed** or **Off**.

If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The Active function for the selected marker's current control mode is the default active function. If the current control mode is Off, there is no active function and the active function is turned off. The active function display is the marker X axis value entered in the active function area will display the marker value to its full entered precision.

All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

Key Path	<b>Marker</b>
Mode	SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12 :MODE POSITION DELta OFF :CALCulate:PStatistic:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12 :MODE?
Example	CALC:PST:MARK:MODE POS CALC:PST:MARK:MODE?

Notes	<p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision.</p>
Preset	OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. This function has no effect if the control mode is **Off**, but is the remote command equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Remote Command	<pre>:CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X &lt;rel_ampl&gt;</pre> <pre>:CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?</pre>
Example	<pre>CALC:PST:MARK3:X 0</pre> <pre>CALC:PST:MARK3:X?</pre>
Notes	<p>If no suffix is sent, it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" will be generated. If the specified marker is Fixed and a Marker Function is on, error -221 "Settings conflict; cannot adjust Fixed marker while Marker Function is on" is generated.</p> <p>The query returns the marker's absolute X Axis value if the control mode is <b>Normal</b>, or the offset from the marker's reference marker if the control mode is <b>Delta</b>. The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b>, seconds for <b>Period</b> and <b>Time</b>. If the marker is <b>Off</b> the response is not a number.</p>
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN).

State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker Y Axis Value (Remote Command only)

Queries the marker Y Axis value in the current marker Y Axis unit.

Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:PSTatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:PST:MARK11:Y?
Notes	The query returns the marker Y-axis result, if the control mode is <b>Normal</b> , or <b>Delta</b> . If the marker is <b>Off</b> the response is not a number.
Preset	0
State Saved	No
Backwards Compatibility SCPI	:CALCulate:PSTatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:RESul t?
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Properties

Accesses the marker properties menu.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Accesses a menu that allows you to select one of 12 markers for control and function

Key Path	<b>Marker, Properties</b>
Initial S/W Revision	Prior to A.02.00

### Relative To

Sets the reference marker that the selected marker will be relative to.

Key Path	Marker, Properties
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>  :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?
Example	CALC:PST:MARK:REF 3  CALC:PST:MARK:REF?
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."  When queried a single value will be returned (the specified marker numbers relative marker).
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Marker Trace

Assigns the specified marker to the designated trace. The trace choices are: Measured, Gaussian, or Reference.

Key Path	Marker
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe MEASured GAUSSian REFerence  :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?
Example	CALC:PST:MARK3:TRAC MEAS  CALC:PST:MARK:TRACE?

Preset	MEASured
State Saved	Saved in instrument state.
Range	Measured Gaussian Reference
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Couple Markers

When this function is true, moving any marker causes an equal X axis movement of every other marker which is not **Off**. By “equal X axis movement” we mean that we preserve the difference between each marker’s X axis value (in the fundamental x-axis units of the trace that marker is on) and the X axis value of the marker being moved (in the same fundamental x-axis units).

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### All Markers Off

Turns off all markers.

Key Path	<b>Marker, More</b>
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:PStatistic:MARKer:AOff
Example	CALC:PST:MARK:AOff
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Marker To

There is no 'Marker To' functionality supported in Power Stat CCDF. The front-panel key will display a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00



---

## Marker Function

There are no 'Marker Function' supported in Power Stat CCDF. The front-panel key will display a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## **Meas**

See “[Meas](#)” on page 1575 in the section "Common Measurement Functions" for more information.

## Meas Setup

Accesses the functions that allow you to change the settings for your measurement requirements.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Counts

Sets the accumulated number of sampling points for data acquisition. The range is 1.000 kpt (k point) to 2.00000 Gpt (G point) with 1 kpt resolution. Counts couples to Meas Cycles. When the value for counts is changed, the Meas Cycles value will be  $(\text{Counts} / \text{SamplingFrequency} * \text{MeasInterval})$ .

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE ] :PStatistic:COUNTs <integer> [ :SENSE ] :PStatistic:COUNTs?
Example	PST:COUN 5001 PST:COUN?
Couplings	This value is coupled to Meas Cycles. When Counts is changed, the MeasCycles value will be $(\text{Counts} / \text{SamplingFrequency} * \text{MeasInterval})$ .  TD-SCDMA: When Counts is changed, the MeasCycles value will be $(\text{Counts} / (\text{Sampling Frequency} * \text{Time duration of measured time slots} / 5 \text{ msec}))$ , Time duration of measured time slots is determined by Analysis Time Slot and Measure Interval.
Preset	10000000
State Saved	Saved in instrument state.
Min	1000
Max	2000000000
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00
Default Unit	Kpt

## Meas Cycles

Set the number of measurement cycles to calculate power statistic data. This number couples to Counts. The Counts value is  $(\text{MeasCycles} * \text{Sampling Frequency} * \text{MeasInterval})$ .

Power Stat CCDF Measurement  
**Meas Setup**

When the counts value cannot be divided by (Sampling Frequency \* MeasInterval), this value is displayed as a decimal fraction.

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:PStatistic:SWEep:CYCLes <integer> [ :SENSE]:PStatistic:SWEep:CYCLes?
Example	PST:SWE:CYCL 1001 PST:SWE:CYCL?
Notes	.
Couplings	The Counts value will be (MeasCycles * Sampling Frequency * MeasInterval). TD-SCDMA: The Counts value will be (MeasCycles * Sampling Frequency * Time duration of measured time slots / 5 msec), Time duration of measured time slots is determined by Analysis Time Slot and Measure Interval.
Preset	Depends on the sampling frequency.
Min	1
Max	Depends on the sampling frequency.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Meas Interval (When the application is NOT CDMA1xEVDO)**

Sets the number of data points to be used as the measurement interval. This value couples to Counts. The Counts value is (MeasCycles \* Sampling Frequency \* MeasInterval).

Key Path	Meas Setup
Mode	SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSE]:PStatistic:SWEep:TIME <time> [ :SENSE]:PStatistic:SWEep:TIME?
Example	PST:SWE:TIME 2 ms PST:SWE:TIME?

Couplings	The Counts value will be (MeasCycles * Sampling Frequency * MeasInterval).  WiMAX OFDMA: The default value depends on Radio Device status.  TD-SCDMA: The Counts value will be (MeasCycles * Sampling Frequency * Time duration of measured time slots / 5 msec), Time duration of measured time slots is determined by Analysis Time Slot and Measure Interval.  When TriggerSource is RFBurst, this button is grayed.
Preset	Others: 1.0 ms TD-SCDMA: 1 slot
Min	Others: 50.0 us TD-SCDMA: 1 slot
Max	Others: 10.0 ms TD-SCDMA: 9 slot
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Meas Interval (CDMA1xEVDO Only)

Sets the value of time to be used as the measurement interval. This value couples to Counts. The Counts value is (MeasCycles \* Sampling Frequency \* MeasInterval).

Key Path	Meas Setup
Mode	1xEV-DO
<b>Remote Command</b>	[ :SENSE ] :PStatistic:SWEep:TIME <time> [ :SENSE ] :PStatistic:SWEep:TIME?
Example	PST:SWE:TIME 2 ms PST:SWE:TIME?
Couplings	The Counts value will be (MeasCycles * Sampling Frequency * MeasInterval).
Preset	182.29 us
State Saved	Saved in instrument state.
Min	1.0 us
Max	10.0 ms
Initial S/W Revision	Prior to A.02.00

### Meas Offset (CDMA1xEVDO Only)

Sets the value of time to be used as the measurement interval start.

Key Path	Meas Setup
Mode	CDMA1xEVDO
<b>Remote Command</b>	[ :SENSe]:PStatistic:SWEep:OFFSet <time> [ :SENSe]:PStatistic:SWEep:OFFSet?
Example	PST:SWE:OFFS 2 ms PST:SWE:OFFS?
Preset	325.52 us
State Saved	Saved in instrument state.
Min	1.0 us
Max	10.0 ms
Initial S/W Revision	Prior to A.02.00

### IF Gain

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

Key Path	Meas Setup
Initial S/W Revision	Prior to A.02.00

### IF Gain Auto

Activates the Auto Rules for IF Gain When Auto is active, the IF Gain is set to High Gain under any of the following conditions:

- the input attenuator is set to 0 dB
- the preamp is turned On
- the Max Mixer Level is -20 dBm or lower

For other settings, Auto sets IF Gain to Off.

Key Path	Meas Setup, IF Gain
Mode	SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD

<b>Remote Command</b>	[ :SENSE]:PStatistic:IF:GAIN:AUTO[:STATE] ON OFF 1 0 [:SENSE]:PStatistic:IF:GAIN:AUTO[:STATE]?
Example	PST:IF:GAIN:AUTO ON PST:IF:GAIN:AUTO?
Notes	IF Gain only applies to the RF input. It does not apply to baseband I/Q input.
Couplings	When either the auto attenuation is active (for example, with electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed using the following rule.  The Auto selection sets IF Gain On under any of the following conditions: <ul style="list-style-type: none"> <li>• the input attenuator is set to 0 dB</li> <li>• the preamp is turned on,</li> <li>• the Max Mixer Level is -20 dBm or lower.</li> </ul> For other settings, Auto sets IF Gain to Off.
Preset	OFF
State Saved	Saved in instrument state.
Range	Auto Man
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### IF Gain State

Selects the range of IF gain. On sets the high gain option, which allows for better noise level measurements and Off sets low gain when measuring large signals.

Key Path	Meas Setup, IF Gain
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	[ :SENSe]:PStatistic:IF:GAIN[:STATE] ON OFF 1 0 [:SENSe]:PStatistic:IF:GAIN[:STATE]?
Example	PST:IF:GAIN ON PST:IF:GAIN?
Notes	IF Gain only applies to the RF input. It does not apply to baseband I/Q input.  where ON = high gain OFF = low gain
Preset	OFF

Power Stat CCDF Measurement  
**Meas Setup**

State Saved	Saved in instrument state.
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)
Readback Text	Low Gain High Gain
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

**Meas Preset**

Restores all measurement settings to their default values.

Key Path	<b>Meas Setup</b>
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CONFigure:PStatistic
Example	CONF:PST
Notes	You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, DVB-T/H mode, DTMB mode, ISDB-T mode, CMMB mode or WIMAXOFDMA mode to use this command. Use :INSTrument:SElect to set the mode.
Couplings	Selecting Meas Preset will restore all measurement parameters to their default values.
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00



---

## **Mode**

See [“Mode” on page 1635](#) in the section "Common Measurement Functions" for more information.

## **Mode Setup**

See “[Mode Setup](#)” on page 1651 in the section "Common Measurement Functions" for more information.

---

## Peak Search

There is no 'Peak Search' functionality supported in Power Stat CCDF. The front-panel key will display a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## **Recall**

See “[Recall](#)” on page 189 in the section "Common Measurement Functions" for more information.

---

## **Restart**

See [“Restart” on page 1671](#) in the section "Common Measurement Functions" for more information.

## **Save**

See “[Save](#)” on page 205 in the section "Common Measurement Functions" for more information.

---

## Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1677 in the section "Common Measurement Functions" for more information.

## **Source**

See “[Source](#)” on page 1679 in the section "Common Measurement Functions" for more information.



## Span X Scale

The SPAN X Scale key accesses the menu to set the desired horizontal scale.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Scale/Div

Enables you to enter a time value to change the horizontal scale.

Key Path	Span X Scale
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:PSTatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDI Vision <rel_ampl>  :DISPlay:PSTatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDI Vision?
Example	DISP:PST:VIEW:WIND2:TRAC:X:PDIV 10 DISP:PST:VIEW:WIND2:TRAC:X:PDIV?
Notes	CCDF measurement has the trace display only at Window 2.
Couplings	See Notes
Preset	2.00
State Saved	Saved in instrument state.
Min	0.1
Max	20
Backwards Compatibility SCPI	:DISPlay:PSTatistic:XSCale
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

## Sweep/Control

Enables you to pause the power statistics CCDF measurement after the current data acquisition is complete. When Paused, the label on the menu key changes to Resume. Press the Resume key to resume the measurement where it was when it was paused.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Pause/Resume

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Press the Resume key to resume the measurement where it was when it was paused. See [“Pause/Resume” on page 1698](#) in the “Common Measurement Functions” section for details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Trace/Detector

Accesses a menu of functions that enable you to control the storage and manipulation of the reference trace, as well as controls the display of the trace data.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Store Ref Trace

Copies the currently measured curve as the user-definable reference trace. The captured data remains until the other mode is chosen. Pressing this key also refreshes the reference trace.

No query command is available.

Key Path	Trace/Detector
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:CALCulate:PSTatistic:STORe:REFerence
Example	CALC:PST:STOR:REF
Backwards Compatibility SCPI	[:SENSe]:PSTatistic:SRTRace
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Initial S/W Revision	Prior to A.02.00

### Ref Trace

Toggles the reference trace display between On and Off.

Key Path	Trace/Detector
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:PSTatistic:RTRace[:STATe] OFF ON 0 1 :DISPlay:PSTatistic:RTRace[:STATe]?
Example	DISP:PST:RTR OFF DISP:PST:RTR?
Preset	OFF
State Saved	Saved in instrument state.

Power Stat CCDF Measurement  
Trace/Detector

Range	On Off
Backwards Compatibility SCPI	[:SENSe]:PStatistic:RTRace[:STATe]
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

## Gaussian Line

Toggles the Gaussian trace display between On and Off.

Key Path	Trace/Detector
Mode	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMBISDB-T, CMMB, LTE, LTETDD
<b>Remote Command</b>	:DISPlay:PStatistic:GAUSSian[:STATe] OFF ON 0 1 :DISPlay:PStatistic:GAUSSian[:STATe]?
Example	DISP:PST:GAUS OFF DISP:PST:GAUS?
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Backwards Compatibility SCPI	[:SENSe]:PStatistic:GAUSSian[:STATe]
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Modified at S/W Revision	A.04.00
Initial S/W Revision	Prior to A.02.00

## Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement. See [“Trigger” on page 1753](#) in the "Common Measurement Functions" section for more information.

## View/Display


Accesses a menu of functions that enable you to control the instrument display as well as turn the bar graph On and Off.


The Power Stat CCDF measurement consists of single view. This is common for both Uplink (MS) and Downlink (BTS). The view consists of the following windows: Metrics (left) and graph display (right).

“Metrics window” on page 788

“Graph window” on page 788

“Wave window (TD-SCDMA and LTETDD only)” on page 788

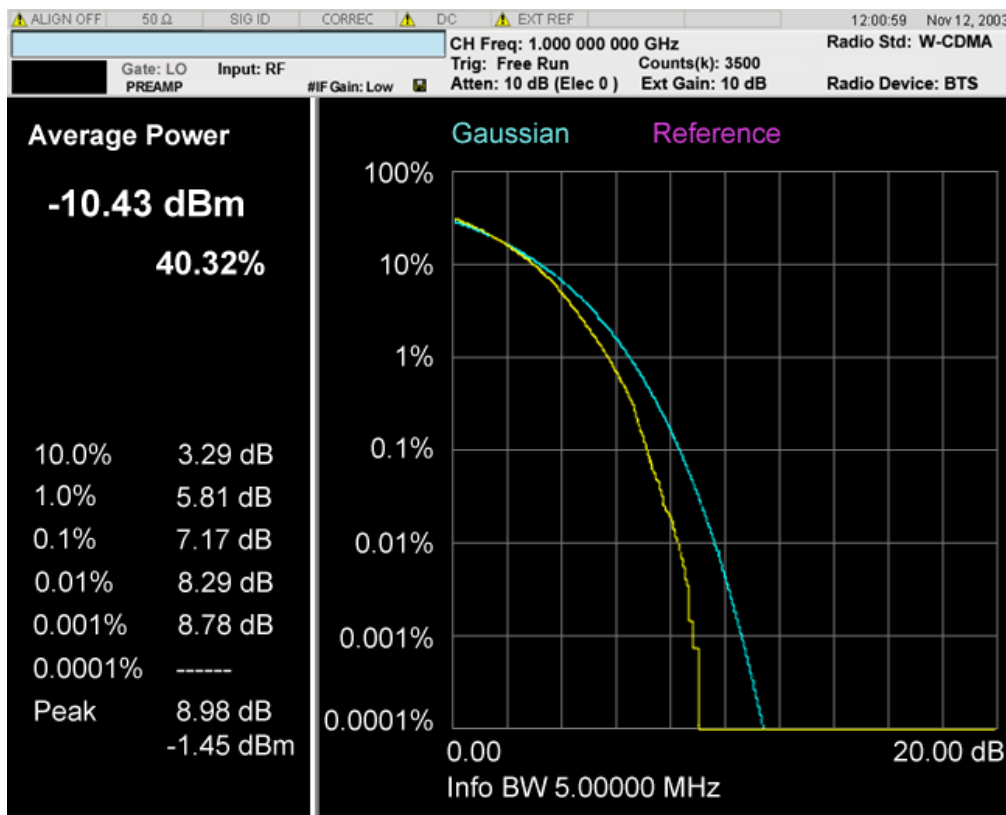

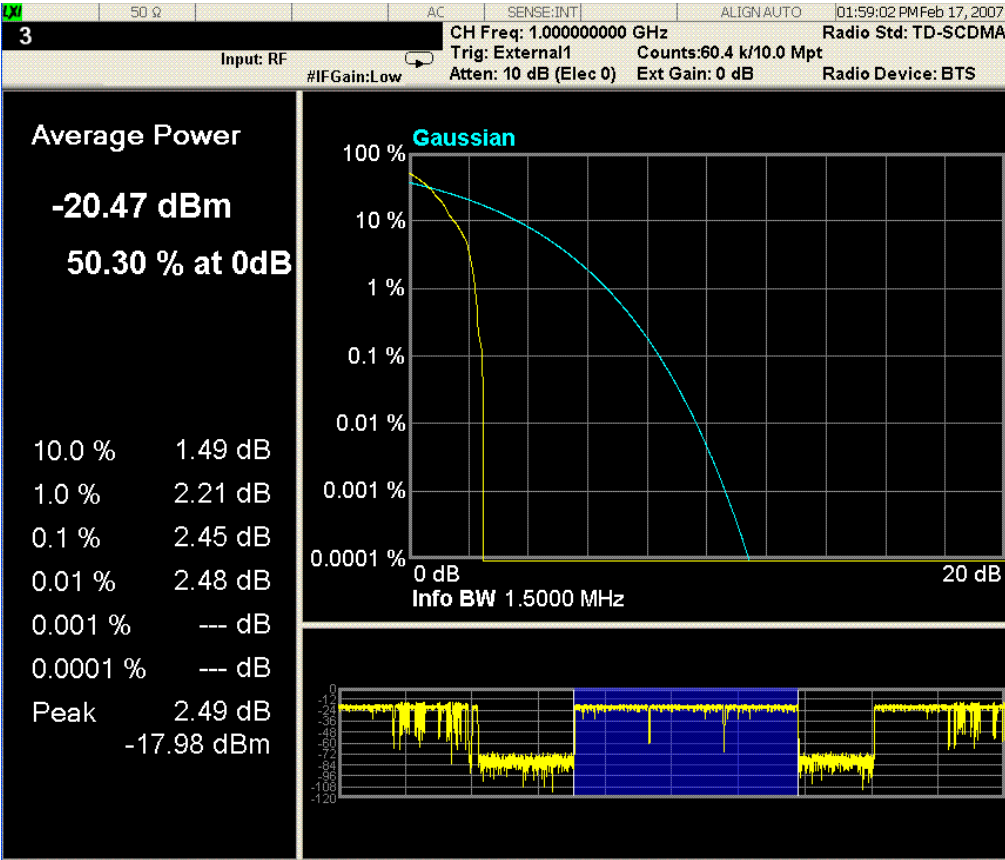

**Metrics window**

Name	Corresponding Results	Explanation
Average Power [dBm]	n=1 1st Average input power	99.99 dBm
Average Power [%]	n=1 2nd Probability at the average input power level	99.99 %
10.0% [dB]	n=1 3rd Power level that has 10% of the power	99.99 dB
1.0% [dB]	n=1 4th Power level that has 1% of the power	99.99 dB
0.1% [dB]	n=1 5th Power level that has 0.1% of the power	99.99 dB
0.01% [dB]	n=1 6th Power level that has 0.01% of the power	99.99 dB
0.001% [dB]	n=1 7th Power level that has 0.001% of the power	99.99 dB
0.0001% [dB]	n=1 8th Power level that has 0.0001% of the power	99.99 dB
Peak [dB]	n=1 9th Peak power	99.99 dB
Peak[dBm]	This is not available using remote commands.	99.99 dBm

**Graph window**

Marker Operation	Yes
Corresponding Trace	<p>Yellow: Series of 5001 floating the current measured power stat trace. (n=2) Initially all markers refer this trace.</p> <p>Light Blue: Series of 5001 floating point numbers (in percent) that represent the Gaussian trace. (n=3)</p> <p>Violet: series of 5001 floating point numbers (in percent) that represent the user-definable reference trace. (n=4)</p> <p>The Gaussian and Reference trace/line can be removed using the features under the Trace/Detector key</p>

**Wave window (TD-SCDMA and LTETDD only)**

This window is only available under TD-SCDMA mode and LTETDD mode, and by default this window



is closed, it could be turn of/off by soft key "SlotView", refer to section "Slot View (TD-SCDMA only)" on page 789.

Marker Operation	No
Corresponding Trace	Yellow: For TD-SCDMA, Wave form of entire TD-SCDMA frame. If measurement range specified by Analysis Time Slot and Measured Time Slot is out of the first frame, the display range will extend to two TD-SCDMA frames. For LTETDD, Waveform of 2 continuous LTE type2 frames.  Blue: Indicate current measurement range

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Display

Accesses a menu of functions that enable you to set the display parameters...

See "Display" on page 1813 in the "Common Measurement Functions" section for more information.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

## Slot View (TD-SCDMA only)

Switch between normal CCDF view and Slot view with additional wave window, this is available only under TD-SCDMA mode.

Key Path	<b>View/Display</b>
Mode	TD-SCDMA
<b>Remote Command</b>	[ :SENSe]:PStatistic:SLTView[:STate] OFF ON 0 1 [:SENSe]:PStatistic: SLTView[:STate]?
Example	PST:SLTV OFF PST:SLTV?
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00



The Code Domain Measurement provides code domain analysis functions. It is an analysis-oriented measurement rather than a conformance test. Therefore, it does not provide pass/fail type of results. For more details, see [“Code Domain Measurement Description” on page 813](#) below.

This topic contains the following sections:

[“Measurement Commands for Code Domain” on page 791](#)

[“Remote Command Results for Code Domain” on page 791](#)

### Measurement Commands for Code Domain

The following commands are used to retrieve the measurement results:

```
:CONFigure:CDPower
```

```
:CONFigure:CDPower:NDEFault
```

```
:INITiate:CDPower
```

```
:FETCh:CDPower [n] ?
```

```
:READ:CDPower [n] ?
```

```
:MEASure:CDPower [n] ?
```

For more measurement related commands, see the section [“Remote Measurement Functions” on page 1575](#).

### Remote Command Results for Code Domain

In the following SCPI results, some results are limited by an option license, as follows:

- When both W-CDMA HSPA and HSPA+ option licenses are operative, 64QAM, 16QAM, QPSK, 4PAM, BPSK are correctly returned.
- When W-CDMA HSPA option license is operative, but HSPA+ option is not operative, 16QAM, QPSK, BPSK are returned. 64QAM, 4PAM are **not** returned.

Therefore 64QAM channel is measured and returned as either 16QAM or QPSK, and 4PAM channel is measured and returned as BPSK.

- When W-CDMA HSPA option license is not operative, QPSK, BPSK are returned. 64QAM, 16QAM, 4PAM are **not** returned.

Therefore either 64QAM or 16QAM channel is measured and returned as QPSK, and 4PAM channel is measured and returned as BPSK.

Index: n <Mnemonic>	Results Returned
0	Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values.

Index: n <Mnemonic>	Results Returned
not specified or n = 1	<p>Returns the following 44 comma-separated scalar results. The descriptions below are formatted as follows:</p> <p><b>#. Result Name: (type of number) [unit] &lt;explanation&gt;</b></p> <ol style="list-style-type: none"> <li>1. RMS Symbol EVM: (floating) [percent] <p>The despreading (Symbol) RMS EVM of the selected code (OVSF level and number) over the selected measurement period by Meas Offset, Meas Interval and tDPCH [BTS] / tHS-DPCCH[MS].</p> </li> <li>2. Peak Symbol EVM: (floating) [percent] <p>The despreading (Symbol) peak EVM of the selected code over the selected measurement period by Meas Offset, Meas Interval and tDPCH [BTS] / tHS-DPCCH[MS].</p> </li> <li>3. RMS Symbol Magnitude Error: (floating) [percent] <p>The RMS-averaged magnitude error of Symbol I/Q Polar Vector of the selected code over the selected measurement period by Meas Offset, Meas Interval and tDPCH [BTS] / tHS-DPCCH[MS].</p> </li> <li>4. RMS Symbol Phase Error: (floating) [degrees] <p>The RMS-averaged phase error of Symbol I/Q Polar Vector of the selected code over the selected measurement period by Meas Offset, Meas Interval and tDPCH [BTS] / tHS-DPCCH[MS].</p> </li> <li>5. Total Power: (floating) [dBm] <p>The total RF power over the selected measurement period by Meas Offset, Meas Interval and tDPCH[BTS] / tHS-DPCCH[MS].</p> <p>(See item 8. for Total Power over one slot specified by Meas Offset.)</p> </li> <li>6. Channel Power: (floating) [dBc or dBm] <p>The absolute or relative (relative to Total Power) power of the selected code over the measurement period selected by Meas Offset, Meas Interval and tDPCH[BTS] / tHS-DPCCH[MS].</p> </li> </ol>

<b>Index: n</b> <b>&lt;Mnemonic&gt;</b>	<b>Results Returned</b>
not specified or n = 1  (continued)	<p>7. tDPCH, tHS-DPCCH: (floating) [x256 chips]</p> <p>- BTS mode</p> <p>In tDPCH auto-detection mode, the offset delay time for the selected code (DPCH) from the reference (CPICH slot #0 start point) is returned for valid DPCH. It returns 0 for other channels.</p> <p>In tDPCH manual setting mode, the returned value is the same as “tDPCH” parameter setting.</p> <p>- MS mode</p> <p>There is no tHS-DPCCH auto-detection function. It returns the given “tHS-DPCCH” parameter setting.</p> <p>8. Total Power: (floating) [dBm]</p> <p>Total RF power over one slot specified by Meas Offset. SCH period is included in its calculation.</p> <p>(See item 5. for Total Power over the measurement period selected by Meas Offset and Meas Interval.)</p> <p>9. Total Active Power: (floating) [dBc or dBm]</p> <p>The sum of the active code channel powers over one slot specified by Meas Offset. SCH period is included in its calculation.</p> <p>10. Common Pilot (CPICH) Power: (floating) [dBc or dBm]</p> <p>The average power of the CPICH code (absolute or relative to the Total Power) over one slot specified by Meas Offset. SCH period is included in its calculation.</p> <p>In MS mode, the value returned is -999.0.</p> <p>11. Maximum Active Code Power: (floating) [dBc or dBm]</p> <p>The maximum average power of active code channels (absolute or relative to the Total Power) over one slot specified by Meas Offset. SCH period is included in its calculation.</p> <p>If no active code is detected, the value returned is -999.0.</p> <p>In MS mode, the value returned is -999.0.</p> <p>12. Average Active Code Power: (floating) [dBc or dBm]</p> <p>The average power of active code channels (absolute or relative to the Total Power) over one slot specified by Meas Offset. SCH period is included in its calculation.</p> <p>If no active code is detected the value returned is -999.0.</p> <p>In MS mode, the value returned is -999.0.</p> <p>13. Maximum Inactive Code Power: (floating) [dBc or dBm]</p> <p>The maximum average power of inactive code channels (absolute or relative to the Total Power) over one slot specified by Meas Offset. SCH period is included in its calculation.</p> <p>In MS mode, the value returned is -999.0.</p>

Index: n <Mnemonic>	Results Returned
not specified or n = 1 (continued)	<p>14. Average Inactive Code Power: (floating) [dBc or dBm]</p> <p>The average power of inactive code channels (absolute or relative to the Total Power) over one slot specified by Meas Offset. SCH period is included in its calculation.</p> <p>In MS mode, the value returned is -999.0.</p> <p>15. Number of active channel: (floating) [no unit]</p> <p>The number of active channel for one slot specified by Meas Offset.</p> <p>16. P-SCH (Primary SCH) Power: (floating) [dBm]</p> <p>The P-SCH power over one slot specified by Meas Offset.</p> <p>In MS mode, the value returned is -999.0.</p> <p>17. S-SCH (Secondary SCH) Power: (floating) [dBm]</p> <p>The S-SCH power over one slot specified by Meas Offset.</p> <p>In MS mode, the value returned is -999.0.</p> <p>18. DPCCH Power, PRACH Message Control Part Power: (floating) [dBc or dBm]</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, dedicated physical control channel (DPCCH) power over one slot specified by Meas Offset.</li> <li>- If Sync Type is PRACH Message, PRACH message control part power over one slot specified by Meas Offset.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>19. DPCCH Beta Nominal, PRACH Message Control Part Beta Nominal: (floating) [no unit]</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the nominal value of DPCCH beta factor over one slot specified by Meas Offset.</li> <li>- If Sync Type is PRACH Message, PRACH message control part beta nominal over one slot specified by Meas Offset.</li> </ul> <p>(The value is one of 0.0, 0.067 (=1/15), 0.133 (=2/15), ... or 1.0 (=15/15))</p> <ul style="list-style-type: none"> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>20. DPCCH Beta Measured: (floating) [no unit]</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the measured value of DPCCH beta factor over one slot specified by Meas Offset.</li> <li>- If Sync Type is PRACH Message, the measured value of PRACH message control part beta factor over one slot specified by Meas Offset.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul>

Index: n <Mnemonic>	Results Returned
not specified or n = 1 (continued)	<p>21. DPDCH 1 Beta Nominal: (floating [no unit])</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the nominal value of DPDCH #1 beta factor over one slot specified by Meas Offset.</li> <li>- If Sync Type is PRACH Message, the nominal value of PRACH message data part beta factor over one slot specified by Meas Offset.</li> </ul> <p>(The value is one of 0.0, 0.067 (=1/15), 0.133 (=2/15), ... or 1.0 (=15/15))</p> <ul style="list-style-type: none"> <li>- If DPCH/E-DPCH is Config 2 w/o DPDCH or Config 3, the value returned is -999.0</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>22. DPDCH 1 Beta Measured: (floating) [no unit]</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the measured value of the DPDCH #1 beta factor over one slot specified by Meas Offset.</li> <li>- If Sync Type is PRACH Message, the measured value of PRACH message data part beta factor over one slot specified by Meas Offset.</li> <li>- If DPCH/E-DPCH is Config 2 w/o DPDCH or Config 3, the value returned is -999.0</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>23. DPDCH 2 Beta Measured: (floating) [no unit]</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the measured value of the DPDCH #2 beta factor over one slot specified by Meas Offset.</li> <li>- If DPCH/E-DPCH not Config 1, the value returned is -999.0</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>24. DPDCH 3 Beta Measured: (floating) [no unit]</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the measured value of the DPDCH #3 beta factor over one slot specified by Meas Offset.</li> <li>- If DPCH/E-DPCH not Config 1, the value returned is -999.0</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>25. DPDCH 4 Beta Measured: (floating) [no unit]</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the measured value of the DPDCH #4 beta factor over one slot specified by Meas Offset.</li> <li>- If DPCH/E-DPCH not Config 1, the value returned is -999.0</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul>

Index: n <Mnemonic>	Results Returned
not specified or n = 1  (continued)	<p>26. DPDCH 5 Beta Measured: (floating) [no unit]</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the measured value of the DPDCH #5 beta factor over one slot specified by Meas Offset.</li> <li>- If DPCH/E-DPCH not Config 1, the value returned is -999.0</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>27. DPDCH 6 Beta Measured: (floating) [no unit]</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the measured value of the DPDCH #6 beta factor over one slot specified by Meas Offset.</li> <li>- If DPCH/E-DPCH not Config 1, the value returned is -999.0</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>28. I Channel Average Active Power: (floating) [dBc or dBm]</p> <p>The average power of active I channels over one slot specified by Meas Offset.</p> <p>In BTS mode, the value returned is -999.0.</p> <p>29. I Channel Maximum Inactive Power: (floating) [dBc or dBm]</p> <p>The maximum average power of inactive I channels over one slot specified by Meas Offset.</p> <p>In the BS mode, the value returned is -999.0.</p> <p>30. Q Channel Average Active Power: (floating) [dBc or dBm]</p> <p>The average power of active Q channels over one slot specified by Meas Offset.</p> <p>In BTS mode, the value returned is -999.0.</p> <p>31. Q Channel Maximum Inactive Power: (floating) [dBc or dBm]</p> <p>The maximum average power of inactive Q channels over one slot specified by Meas Offset.</p> <p>In BTS mode, the value returned is -999.0.</p> <p>32. Nominal Ratio Between HS-DPCCH And DPCCH: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, amplitude ratio of the nominal value based on the measured value of HS-DPCCH beta factor and the DPCCH beta factor.</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul>



<b>Index: n</b> <b>&lt;Mnemonic&gt;</b>	<b>Results Returned</b>
not specified or n = 1 (continued)	<p>33. HS-DPCCH Beta Measured: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH, the measured value of HS-DPCCH beta factor.</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>34. Modulation scheme: (floating)</p> <p>Modulation scheme for the specified code channel.</p> <p>0.0: QPSK +2.0: 16QAM +4.0: 64QAM</p> <p>10.0 = BPSK (Binary Phase Shift Keying) on I branch only 11.0 = BPSK (Binary Phase Shift Keying) on Q branch only 12.0 = 4PAM(Pulse Amplitude Modulation) on I branch only 13.0 = 4PAM(Pulse Amplitude Modulation) on Q branch only 14.0 = BPSK on I branch and BPSK on Q branch 15.0 = 4PAM on I branch and BPSK on Q branch 16.0 = BPSK on I branch and 4PAM on Q branch 17.0 = 4PAM on I branch and 4PAM on Q branch</p> <p>(+1 and other values are reserved for different modulation types.)</p> <ul style="list-style-type: none"> <li>- If Mod Scheme is Auto, the modulation scheme is detected based on the measurement time period specified by Meas Offset, Meas Interval and tDPCH[BTS] / tHS-DPCCH[MS].</li> <li>- If Mod Scheme is either QPSK or 16QAM, the given setting is returned.</li> </ul> <p>This result has meaning only for downlink SF16 (240ksps) channels.</p> <p>35. First Slot Number: (floating)</p> <p>The first slot number of the specified channel by Symbol Rate and Code Number in Capture Interval.</p> <p>36. Channel CDE: (floating) [dBc or dBm]</p> <p>The absolute or relative (relative to Total Power) CDE of the selected code over one slot specified by Meas Offset.</p> <p>SCH period is included in its calculation [BTS].</p>

Index: n <Mnemonic>	Results Returned
not specified or n = 1 (continued)	<p>37. DPCCH Slot Format: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH , the DPCCH slot format value used for synchronization is returned.</li> <li>0.0: Slot Format 0</li> <li>1.0: Slot Format 1</li> <li>2.0: Slot Format 2</li> <li>3.0: Slot Format 3</li> <li>4.0: Slot Format 4</li> <li>5.0: Slot Format 5</li> <li>- If Sync Type is PRACH, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>38. Preamble Signature: (floating)</p> <ul style="list-style-type: none"> <li>- BTS mode</li> <li>Always the returned value is -999.0.</li> <li>- MS mode</li> <li>In Preamble Signature auto-detection mode, the detected signature code number(from 0.0 to 15.0) is returned when Sync Type is PRACH Message.</li> <li>In Preamble Signature manual setting mode, the returned value is the same as the parameter setting. When Sync Type is not PRACH Message, the returned value is -999.0.</li> </ul> <p>39. E-DPCCH Beta Nominal: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH and DPCH/E-DPCH Config is one of Config 2 w/ DPCH, Config 2 w/o DPCH and Config 3, the nominal value of E-DPCCH beta factor.</li> <li>(The value is one of 0.333 (=5/15), 0.4 (=6/15), 0.533 (=8/15), ... or 2.0 (=30/15))</li> <li>- If DPCH/E-DPCH Config is Config 1, the value returned is -999.0.</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>40. E-DPCCH Beta Measured: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH and DPCH/E-DPCH Config is one of Config 2 w/ DPCH, Config 2 w/o DPCH and Config 3, the measured value of E-DPCCH beta factor.</li> <li>- If DPCH/E-DPCH Config is Config 1, the value returned is -999.0.</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul>

<b>Index: n</b> <b>&lt;Mnemonic&gt;</b>	<b>Results Returned</b>
not specified or n = 1 (continued)	<p>41. E-DPDCH 1st on I-axis Beta Measured: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH and DPCH/E-DPCH Config is either Config 2 w/o DPCH or Config 3, the measured value of E-DPDCH on I-axis (C8(64), C7(32), C6(16), C5(8), C4(4), C3(2) or C2(1)) beta factor.</li> <li>- If DPCH/E-DPCH Config is either Config 1 or Config 2 w/ DPCH, the value returned is -999.0.</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>42. E-DPDCH 1st on Q-axis Beta Measured: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH and DPCH/E-DPCH Config is either Config 2 w/o DPCH or Config 3, the measured value of E-DPDCH on Q-axis (C8(64), C7(32), C6(16), C5(8), C4(4), C3(2) or C2(1)) beta factor.</li> <li>- If DPCH/E-DPCH Config is either Config 1 or Config 2 w/ DPCH, the value returned is -999.0.</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>43. E-DPDCH 2nd on I-axis Beta Measured: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH and DPCH/E-DPCH Config is one of Config 2 w/ DPCH, Config 2 w/o DPCH and Config 3, the measured value of E-DPDCH on I-axis (C8(128), C7(64), C6(32), C5(16), C4(8), C3(4), C2(2) or C1(1)) beta factor.</li> <li>- If DPCH/E-DPCH Config is Config 1, the value returned is -999.0.</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>44. E-DPDCH 2nd on Q-axis Beta Measured: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH and DPCH/E-DPCH Config is one of Config 2 w/ DPCH, Config 2 w/o DPCH and Config 3, the measured value of E-DPDCH on Q-axis (C8(128), C7(64), C6(32), C5(16), C4(8), C3(4), C2(2) or C1(1)) beta factor.</li> <li>- If DPCH/E-DPCH Config is Config 1, the value returned is -999.0.</li> <li>- If Sync Type is PRACH Message, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul>

Index: n <Mnemonic>	Results Returned
2 <CDPower>	<p>Code Domain Power:</p> <p>Returns a series of floating point numbers (in either dB or dBm, depending on Meas Type) that represents all the code domain powers.</p> <p>In BTS mode, there are 512 numbers. If the active channel occupies more than the max spreading factor (7.5 ksps) the power is duplicated (active symbol rate / 7.5 ksps) times. (N=512)</p> <p>1st number = 1st code power over one slot specified by Meas Offset including SCH period.  2nd number = 2nd code power over one slot specified by Meas Offset including SCH period.  ...  Nth number = Nth code power over one slot specified by Meas Offset including SCH period.</p> <p>In MS mode, there are 256 I/Q pairs. If the active channel occupies more than the max spreading factor (15 ksps) the power is duplicated (active symbol rate / 15 ksps) times. (N=256)</p> <p>1st number = 1st in-phase code power over one slot specified by Meas Offset  2nd number = 1st quad-phase code power over one slot specified by Meas Offset  ...  (2N – 1)th number = N th in-phase code power over one slot specified by Meas Offset  (2N)th number = N th quad-phase code power over one slot specified by Meas Offset</p>

Index: n <Mnemonic>	Results Returned
3	<p>Symbol Rate:</p> <p>Returns a series of floating point numbers (in sps) that represents all the code domain symbol rate.</p> <p>In BTS mode, there are 512 numbers. If the active channel occupies more than the max spreading factor (7.5 ksps) the symbol rate is duplicated (active symbol rate / 7.5 ksps) times. (N=512)</p> <p>1st number = 1st code symbol rate over one slot specified by Meas Offset including SCH period</p> <p>2nd number = 2nd code symbol rate over one slot specified by Meas Offset including SCH period</p> <p>...</p> <p>N th number = N th code symbol rate over one slot specified by Meas Offset including SCH period</p> <p>In MS mode, there are 256 I/Q pairs. If the active channel occupies more than the max spreading factor (15 ksps) the symbol rate is duplicated (active symbol rate / 15 ksps) times. (N=256)</p> <p>1st number = 1st in-phase code symbol rate over one slot specified by Meas Offset including SCH period</p> <p>2nd number = 1st quad-phase code symbol rate over one slot specified by Meas Offset including SCH period</p> <p>...</p> <p>(2N – 1)th number = Nth in-phase code symbol rate over one slot specified by Meas Offset including SCH period</p> <p>(2N)th number = Nth quad-phase code symbol rate over one slot specified by Meas Offset including SCH period</p>

Index: n <Mnemonic>	Results Returned
4	<p>Active Status:</p> <p>Returns series of floating point numbers that show either active or inactive of each code returned in n=2 and 3. When the code is inactive, the result is 0.0, otherwise more than 0.0.</p> <p>In BTS mode, there are 512 numbers. (N=512)</p> <p>1st number = Active or inactive flag of the 1st code</p> <p>2nd number = Active or inactive flag of the 2nd code.</p> <p>...</p> <p>Nth number = Active or inactive flag of the N th code</p> <p>In MS mode, there are 256 I/Q pairs. (N=256)</p> <p>1st number = 1st In Phase code active flag</p> <p>2nd number = 1st Quad Phase code active flag</p> <p>...</p> <p>(2N – 1)th number = Nth In Phase code active flag</p> <p>(2N)th number = Nth Quad Phase code active flag</p>
5 <EVM>	<p>Symbol EVM:</p> <p>Returns series of floating point numbers (in percent) that represent EVM of symbols of the selected code channel.</p> <p>The length of the trace depends on the measurement period specified by Meas Offset, Meas Interval and tDPCH[BTS] / tHS-DPCCH[MS].</p>
6 <MERRor>	<p>Symbol Magnitude Error:</p> <p>Returns series of floating point numbers (in percent) that represent magnitude error of symbols of the selected code channel.</p> <p>The length of the trace depends on the measurement period specified by Meas Offset, Meas Interval and tDPCH[BTS] / tHS-DPCCH[MS].</p>
7 <PERRor>	<p>Symbol Phase Error:</p> <p>Returns series of floating point numbers (in degrees) that represent phase error of symbols of the selected code channel.</p> <p>The length of the trace depends on the measurement period specified by Meas Offset, Meas Interval and tDPCH[BTS] / tHS-DPCCH[MS].</p>

Index: n <Mnemonic>	Results Returned
8	<p>I/Q Corrected Measured Trace:</p> <p>Returns series of floating point numbers that alternately represent I and Q pairs of the corrected measured trace of the selected code channel.</p> <p>The magnitude of each I and Q pair is normalized to 1.0.</p> <p>The length of the trace depends on the measurement period specified by Meas Offset, Meas Interval and <math>tDPCH[BTS] / tHS-DPCCH[MS]</math>.</p> <p>1st number = I of the 1st symbol decision point  2nd number = Q of the 1st symbol decision point  3rd number = I of the 2nd symbol decision point  4th number = Q of the 2nd symbol decision point  ...  (2N – 1)th number = I of the Nth symbol decision point  (2N)th number = Q of the Nth symbol decision point</p> <p>IQ Corrected Measured Trace is scaled as follows.</p> <p>[QPSK]</p> <p>The values of "I" and "Q" in the measured trace are normalized by the maximum value of the magnitude (<math>= \text{SQRT}(I^2 + Q^2)</math>) of the reference trace, which is scaled to <math>\text{SQRT}(2.0)</math>.</p> <p>[16QAM]</p> <p>The values of "I" and "Q" in the measured trace are normalized as the maximum value of the magnitude (<math>= \text{SQRT}(I^2 + Q^2)</math>) of the reference trace, which is scaled to <math>\text{SQRT}(1.3416^2 + 1.3416^2)</math>.</p> <p>In the 3GPP standard "TS 25.213 v6.4.0 (2005–09)", symbol values for each modulation format (QPSK, 16QAM) and DTX in the section "5.1.1 Modulation mapper" are specified.</p>
9 <SPOWer>	<p>Symbol Power vs Time:</p> <p>Returns series of floating point numbers (in dBm) that represent the entire trace data of Symbol Power vs. Time of the selected code channel.</p>
10 <CPOWer>	<p>Chip Power vs Time:</p> <p>Returns series of floating point numbers (in dBm) that represent the entire trace data of Chip Power vs. Time</p>

Index: n <Mnemonic>	Results Returned
11	<p>Demod Bits:</p> <p>Returns series of floating point numbers of symbol values for the selected code channel for the entire capture length.</p> <p>If :CALCulate:CDPower:DBITs[:FORMat] is set to BINary, each value in the trace is either 0.0 or 1.0.</p> <p>If :CALCulate:CDPower:DBITs[:FORMat] is set to TRIState, each value in the trace is one of 0.0, 1.0 and -1.0</p> <p>where “-1.0” represents DTX (Discontinuous Transmission) bit or burst-off bit.</p> <p>If a channel’s spreading has been done on only I or Q branch, queried data represents the sequence of corresponding I or Q data.</p> <p>If a channel’s spreading has been done on both I and Q branch and its modulation scheme is QPSK, queried data represents alternating I and Q sequences as follows:</p> <p>1st number = in-phase bit of the 1st I/Q pair  2nd number = quad-phase bit of the 1st I/Q pair  3rd number = in-phase bit of the 2nd I/Q pair  4th number = quad-phase bit of the 2nd I/Q pair  ...  (2N - 1)th number = in-phase bit of the Nth I/Q pair  (2N)th number = quad-phase bit of the Nth I/Q pair</p> <p>where N is the number of the symbols in the entire capture length.</p> <p>If a channel’s modulation scheme is 16QAM, queried data represents alternating i1, q1, i2 and q2 sequences as follows:</p> <p>1st number = i1 bit of the 1st symbol  2nd number = q1 bit of the 1st symbol  3rd number = i2 bit of the 1st symbol  4th number = q2 bit of the 1st symbol  5th number = i1 bit of the 2nd symbol  6th number = q1 bit of the 2nd symbol  7th number = i2 bit of the 2nd symbol  8th number = q2 bit of the 2nd symbol  ...  (4N - 3)th number = i1 bit of the Nth symbol  (4N - 2)th number = q1 bit of the Nth symbol  (4N - 1)th number = i2 bit of the Nth symbol  (4N)th number = q2 bit of the Nth symbol</p>



<b>Index: n</b> <b>&lt;Mnemonic&gt;</b>	<b>Results Returned</b>
11 (continued)	<p>If a channel's modulation scheme is 64QAM, queried data represents alternating <math>i_1</math>, <math>q_1</math>, <math>i_2</math>, <math>q_2</math>, <math>i_3</math> and <math>q_3</math> sequences as follows:</p> <p>1st number = <math>i_1</math> bit of the 1st symbol  2nd number = <math>q_1</math> bit of the 1st symbol  3rd number = <math>i_2</math> bit of the 1st symbol  4th number = <math>q_2</math> bit of the 1st symbol  5th number = <math>i_3</math> bit of the 1st symbol  6th number = <math>q_3</math> bit of the 1st symbol  .....  <math>(6N-5)</math> th number = <math>i_1</math> bit of the Nth symbol  <math>(6N-4)</math> th number = <math>q_1</math> bit of the Nth symbol  <math>(6N-3)</math> th number = <math>i_2</math> bit of the Nth symbol  <math>(6N-2)</math> th number = <math>q_2</math> bit of the Nth symbol  <math>(6N-1)</math> th number = <math>i_3</math> bit of the Nth symbol  <math>(6N)</math> th number = <math>q_3</math> bit of the Nth symbol</p> <p>If a channel's modulation scheme is 4PAM for only either I or Q branch, queried data represents alternating <math>x_1</math> and <math>x_2</math> sequences as follows:</p> <p>1st number = <math>x_1</math> bit of the 1st symbol  2nd number = <math>x_2</math> bit of the 1st symbol  3rd number = <math>x_1</math> bit of the 2nd symbol  4th number = <math>x_2</math> bit of the 2nd symbol  ...  <math>(2N - 1)</math>th number = <math>x_1</math> bit of the Nth symbol  <math>(2N)</math>th number = <math>x_2</math> bit of the Nth symbol</p> <p>Where,  <math>x_1</math>: Either <math>i_1</math> or <math>q_1</math>  <math>x_2</math>: Either <math>i_2</math> or <math>q_2</math></p>

Index: n <Mnemonic>	Results Returned
11 (continued)	<p>If a channel's modulation scheme is 4PAM for I branch and BPSK for Q branch, queried data represents alternating i1,i2 and q(quad-phase bit) sequences as follows:</p> <p>1st number = i1 bit of the 1st symbol for 4PAM on I branch  2nd number = i2 bit of the 1st symbol for 4PAM on I branch  3rd number = q bit of the 1st symbol for BPSK on Q branch  4th number = i1 bit of the 2nd symbol for 4PAM on I branch  5th number = i2 bit of the 2nd symbol for 4PAM on I branch  6th number = q bit of the 2nd symbol for BPSK on Q branch  ...  (3N – 2)th number = i1 bit of the Nth symbol for 4PAM on I branch  (3N – 1)th number = i2 bit of the Nth symbol for 4PAM on I branch  (3N )th number = q bit of the Nth symbol for BPSK on Q branch</p> <p>If a channel's modulation scheme is BPSK for I branch and 4PAM for Q branch, queried data represents alternating i(in-phase bit) and q1,q2 sequences as follows:</p> <p>1st number = i bit of the 1st symbol for BPSK on I branch  2nd number = q1 bit of the 1st symbol for 4PAM on Q branch  3rd number = q2 bit of the 1st symbol for 4PAM on Q branch  4th number = i bit of the 2nd symbol for BPSK on I branch  5th number = q1 bit of the 2nd symbol for 4PAM on Q branch  6th number = q2 bit of the 2nd symbol for 4PAM on Q branch  ...  (3N – 2)th number = i bit of the Nth symbol for BPSK on I branch  (3N – 1)th number = q1 bit of the Nth symbol for 4PAM on Q branch  (3N )th number = q2 bit of the Nth symbol for 4PAM on Q branch</p>

<b>Index: n</b> <b>&lt;Mnemonic&gt;</b>	<b>Results Returned</b>
11 (continued)	<p>If a channel's modulation scheme is 4PAM for both I and Q branches, queried data represents alternating i1, i2 and q1, q2 sequences as follows:</p> <p>1st number = i1 bit of the 1st symbol for 4PAM on I branch</p> <p>2nd number = i2 bit of the 1st symbol for 4PAM on I branch</p> <p>3rd number = q1 bit of the 1st symbol for 4PAM on Q branch</p> <p>4th number = q2 bit of the 1st symbol for 4PAM on Q branch</p> <p>5th number = i1 bit of the 2nd symbol for 4PAM on I branch</p> <p>6th number = i2 bit of the 2nd symbol for 4PAM on I branch</p> <p>7th number = q1 bit of the 2nd symbol for 4PAM on Q branch</p> <p>8th number = q2 bit of the 2nd symbol for 4PAM on Q branch</p> <p>...</p> <p>(4N – 3)th number = i1 bit of the Nth symbol for 4PAM on I branch</p> <p>(4N – 2)th number = i2 bit of the Nth symbol for 4PAM on I branch</p> <p>(4N – 1)th number = q1 bit of the Nth symbol for 4PAM on Q branch</p> <p>(4N)th number = q2 bit of the Nth symbol for 4PAM on Q branch</p> <p>where N is the number of the symbols in the entire capture length.</p>

Index: n <Mnemonic>	Results Returned
12	<p>Demod Bits For Selected Measurement Period:</p> <p>Returns series of floating point numbers of symbol values for the selected code channel for the measurement period selected by Meas Offset, Meas Interval and <math>tDPCH[BTS] / tHS-DPCCH[MS]</math>.</p> <p>If :CALCulate:CDPower:DBITs[:FORMat] is set to BINary and CALCulate:CDPower:PCKM is set to OFF, each value in the trace is either 0.0 or 1.0.</p> <p>If :CALCulate:CDPower:DBITs[:FORMat] is set to TRIState and CALCulate:CDPower:PCKM is set to OFF, each value in the trace is one of 0.0, 1.0 and -1.0 where “-1.0” represents DTX (Discontinuous Transmission) bit or burst-off bit.</p> <p>If a channel’s spreading has been done on only I or Q branch, queried data represents the sequence of corresponding I or Q data.</p> <p>If a channel’s spreading has been done on both I and Q branch and its modulation scheme is QPSK, queried data represents alternating I and Q sequences as follows:</p> <p>1st number = in-phase bit of the 1st I/Q pair  2nd number = quad-phase bit of the 1st I/Q pair  3rd number = in-phase bit of the 2nd I/Q pair  4th number = quad-phase bit of the 2nd I/Q pair  ...  (2N -1)th number = in-phase bit of the Nth I/Q pair  (2N)th number = quad-phase bit of the Nth I/Q pair</p> <p>where N is the number of the symbols in the measurement period selected by Meas Offset, Meas Interval and <math>tDPCH[BTS] / tHS-DPCCH[MS]</math>.</p> <p>If a channel’s modulation scheme is 16QAM, queried data represents alternating i1, q1, i2 and q2 sequences as follows:</p> <p>1st number = i1 bit of the 1st symbol  2nd number = q1 bit of the 1st symbol  3rd number = i2 bit of the 1st symbol  4th number = q2 bit of the 1st symbol  5th number = i1 bit of the 2nd symbol  6th number = q1 bit of the 2nd symbol  7th number = i2 bit of the 2nd symbol  8th number = q2 bit of the 2nd symbol  ... </p>

<b>Index: n</b> <b>&lt;Mnemonic&gt;</b>	<b>Results Returned</b>
12 (continued)	<p>(<math>4N - 3</math>)th number = i1 bit of the Nth symbol</p> <p>(<math>4N - 2</math>)th number = q1 bit of the Nth symbol</p> <p>(<math>4N - 1</math>)th number = i2 bit of the Nth symbol</p> <p>(<math>4N</math>)th number = q2 bit of the Nth symbol</p> <p>If a channel's modulation scheme is 64QAM, queried data represents alternating i1, q1, i2, q2, i3 and q3 sequences as follows:</p> <p>1st number = i1 bit of the 1st symbol</p> <p>2nd number = q1 bit of the 1st symbol</p> <p>3rd number = i2 bit of the 1st symbol</p> <p>4th number = q2 bit of the 1st symbol</p> <p>5th number = i3 bit of the 1st symbol</p> <p>6th number = q3 bit of the 1st symbol</p> <p>.....</p> <p>(<math>6N-5</math>) th number = i1 bit of the Nth symbol</p> <p>(<math>6N-4</math>) th number = q1 bit of the Nth symbol</p> <p>(<math>6N-3</math>) th number = i2 bit of the Nth symbol</p> <p>(<math>6N-2</math>) th number = q2 bit of the Nth symbol</p> <p>(<math>6N-1</math>) th number = i3 bit of the Nth symbol</p> <p>(<math>6N</math>) th number = q3 bit of the Nth symbol</p> <p>If a channel's modulation scheme is 4PAM for only either I or Q branch, queried data represents alternating x1 and x2 sequences as follows:</p> <p>1st number = x1 bit of the 1st symbol</p> <p>2nd number = x2 bit of the 1st symbol</p> <p>3rd number = x1 bit of the 2nd symbol</p> <p>4th number = x2 bit of the 2nd symbol</p> <p>...</p> <p>(<math>2N - 1</math>)th number = x1 bit of the Nth symbol</p> <p>(<math>2N</math>)th number = x2 bit of the Nth symbol</p> <p>Where,</p> <p>x1: Either i1 or q1</p> <p>x2: Either i2 or q2</p>

Index: n <Mnemonic>	Results Returned
12 (continued)	<p>If a channel's modulation scheme is 4PAM for I branch and BPSK for Q branch, queried data represents alternating i1,i2 and q(quad-phase bit) sequences as follows:</p> <p>1st number = i1 bit of the 1st symbol for 4PAM on I branch  2nd number = i2 bit of the 1st symbol for 4PAM on I branch  3rd number = q bit of the 1st symbol for BPSK on Q branch  4th number = i1 bit of the 2nd symbol for 4PAM on I branch  5th number = i2 bit of the 2nd symbol for 4PAM on I branch  6th number = q bit of the 2nd symbol for BPSK on Q branch  ...  (3N – 2)th number = i1 bit of the Nth symbol for 4PAM on I branch  (3N – 1)th number = i2 bit of the Nth symbol for 4PAM on I branch  (3N )th number = q bit of the Nth symbol for BPSK on Q branch</p> <p>If a channel's modulation scheme is BPSK for I branch and 4PAM for Q branch, queried data represents alternating i(in-phase bit) and q1,q2 sequences as follows:</p> <p>1st number = i bit of the 1st symbol for BPSK on I branch  2nd number = q1 bit of the 1st symbol for 4PAM on Q branch  3rd number = q2 bit of the 1st symbol for 4PAM on Q branch  4th number = i bit of the 2nd symbol for BPSK on I branch  5th number = q1 bit of the 2nd symbol for 4PAM on Q branch  6th number = q2 bit of the 2nd symbol for 4PAM on Q branch  ...  (3N – 2)th number = i bit of the Nth symbol for BPSK on I branch  (3N – 1)th number = q1 bit of the Nth symbol for 4PAM on Q branch  (3N )th number = q2 bit of the Nth symbol for 4PAM on Q branch</p>

<b>Index: n</b> <b>&lt;Mnemonic&gt;</b>	<b>Results Returned</b>
12 (continued)	<p>If a channel's modulation scheme is 4PAM for both I and Q branches, queried data represents alternating i1, i2 and q1, q2 sequences as follows:</p> <p>1st number = i1 bit of the 1st symbol for 4PAM on I branch  2nd number = i2 bit of the 1st symbol for 4PAM on I branch  3rd number = q1 bit of the 1st symbol for 4PAM on Q branch  4th number = q2 bit of the 1st symbol for 4PAM on Q branch  5th number = i1 bit of the 2nd symbol for 4PAM on I branch  6th number = i2 bit of the 2nd symbol for 4PAM on I branch  7th number = q1 bit of the 2nd symbol for 4PAM on Q branch  8th number = q2 bit of the 2nd symbol for 4PAM on Q branch  ...  (4N – 3)th number = i1 bit of the Nth symbol for 4PAM on I branch  (4N – 2)th number = i2 bit of the Nth symbol for 4PAM on I branch  (4N – 1)th number = q1 bit of the Nth symbol for 4PAM on Q branch  (4N)th number = q2 bit of the Nth symbol for 4PAM on Q branch</p> <p>where N is the number of the symbols in the measurement period selected by Meas Offset, Meas Interval and tDPCH[BTS] / tHS-DPCCH[MS].</p> <p>If CALCulate:CDPower:PCKM is set to PKM1(=Mode1), demod bits per symbol are packed into one float value in bit-slice manner as follows.</p> <p>- For 64QAM channels:  64QAM (No DTX):Float value 00.....0X5X4X3X2X1X0  where X5:I1, X4:Q1, X3:I2, X2:Q2, X1:I3, X0:Q3</p> <p>- For 16QAM channels:  16QAM (No DTX):Float value 00.....0X3X2X1X0  where X3:I1, X2:Q1, X1:I2, X0:Q2</p> <p>- For QPSK channels:  QPSK (With DTX): Float value 00.....0M1M0B1B0  where M1:Mask for B1 (1:DTX, 0:Normal)  M0:Mask for B0 (1:DTX, 0:Normal)  B1:I, B0:Q</p> <p>- For 4PAM channels:  4PAM (No DTX):Float value 00.....0 I1 I2 Q1 Q2</p> <p>- For 4PAM on I branch channels and BPSK on Q branch channels:  4PAM (No DTX):Float value 00.....0 I1 I2 0 Q</p>

Index: n <Mnemonic>	Results Returned
12 (continued)	<p>- For BPSK on I branch channels and 4PAM on Q branch channels:</p> <p>4PAM (No DTX):Float value 00.....0 0 I Q1 Q2</p> <p>The returned data is a sequence of float number as follows:</p> <p>1st number = Packed Demod bits of 1st symbol</p> <p>2nd number = Packed Demod bits of 2nd symbol</p> <p>3rd number = Packed Demod bits of 3rd symbol</p> <p>...</p> <p>Nth number = Packed Demod bits of Nth symbol</p> <p>where N is the number of the symbols in the measurement period selected by Meas Offset, Meas Interval and tDPCH[BTS] / tHS-DPCCH[MS].</p> <p>To identify whether the Demod bits of each symbol is of either QPSK or 16QAM, query the Modulation Scheme returned by 14th trace (Modulation Scheme).</p>
13 <CDError>	<p>Code Domain Error:</p> <p>Returns a series of floating point numbers (in dB or dBm) that represents all the code domain errors.</p> <p>In BTS mode, there are 512 numbers. If the active channel occupies more than the max spreading factor (7.5 ksps) the error is duplicated (active symbol rate / 7.5 ksps) times. (N=512)</p> <p>1st number = 1st code domain error over one slot specified by Meas Offset including SCH period.</p> <p>2nd number = 2nd code domain error over one slot specified by Meas Offset including SCH period.</p> <p>...</p> <p>Nth number = Nth code domain error over one slot specified by Meas Offset including SCH period.</p> <p>In MS mode, there are 256 I/Q pairs. If the active channel occupies more than the max spreading factor (15 ksps) the power is duplicated (active symbol rate / 15 ksps) times. (N=256)</p> <p>1st number = 1st in-phase code domain error over one slot specified by Meas Offset including SCH period.</p> <p>2nd number = 1st quad-phase code domain error over one slot specified by Meas Offset including SCH period.</p> <p>...</p> <p>(2N - 1)th number = Nth in-phase code domain error over one slot specified by Meas Offset including SCH period.</p> <p>(2N)th number = Nth quad-phase code domain error over one slot specified by Meas Offset including SCH period.</p>



<b>Index: n</b> <b>&lt;Mnemonic&gt;</b>	<b>Results Returned</b>
14 Modulation Scheme	<p>Modulation Scheme:</p> <p>Returns a series of floating point numbers that represents the modulation scheme slot-by-slot for measurement period selected by Meas Offset, Meas Interval and <math>tDPCH[BTS] / tHS-DPCCH[MS]</math>.</p> <p>The meaning of the number is :</p> <p>0.0 = QPSK (Quadrature Phase Shift Keying)</p> <p>2.0 = 16QAM (16Quadrature Amplified Modulation)</p> <p>4.0 = 64QAM (64Quadrature Amplified Modulation)</p> <p>10.0 = BPSK (Binary Phase Shift Keying) on I branch only</p> <p>11.0 = BPSK (Binary Phase Shift Keying) on Q branch only</p> <p>12.0 = 4PAM(Pulse Amplitude Modulation) on I branch only</p> <p>13.0 = 4PAM(Pulse Amplitude Modulation) on Q branch only</p> <p>14.0 = BPSK on I branch and BPSK on Q branch</p> <p>15.0 = 4PAM on I branch and BPSK on Q branch</p> <p>16.0 = BPSK on I branch and 4PAM on Q branch</p> <p>17.0 = 4PAM on I branch and 4PAM on Q branch</p> <p>1st number = Modulation Scheme of the slot specified by Meas Offset</p> <p>2nd number = Modulation Scheme of the slot specified by Meas Offset + 1</p> <p>3rd number = Modulation Scheme of the slot specified by Meas Offset + 2</p> <p>...</p> <p>Nth number = Modulation Scheme of the slot specified by Meas Offset + N where N is Meas Interval.</p>

### Code Domain Measurement Description

The modulation schemes for downlink and uplink are quite different. Even though some key parameters and mnemonics are shared by downlink and uplink, the measurement functions are context sensitive depending on the Radio Device selection.

Key Path	<b>Meas</b>
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale (Amplitude / Y Scale)

Accesses a menu of functions that enable you to set the desired vertical scale parameters for the current measurement.

Numbers and default numbers are independent for each window.

The Metrics, I/Q Symbol Polar Vector, and Demod Bits windows do not support the functions in this menu. A blank menu is displayed when these windows are selected.

The AMPTD Y Scale functions for the Power Bar Graph and CDE Graph are coupled to each other.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### Y Ref Value

Set the value for the absolute power reference. However, since the Auto Scaling defaults to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Power Graph & Metrics View CDP Window Y Ref Value

Sets the absolute power reference value in the Power Graph & Metrics window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV e1 <real>  :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV e1?
Example	DISP:CDP:VIEW:WIND:TRAC:Y:RLEV -10.0 DISP:CDP:VIEW:WIND:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Unit depends on <a href="#">Meas Type</a> as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode.
Preset	0.00
State Saved	Saved in instrument state.

Min	-250.0
Max	250.0
Initial S/W Revision	Prior to A.02.00

**CDP Graph & CDE Graph View CDP Window Y Ref Value**

Sets the absolute power reference value for Code Domain Power and Code Domain Error graph views in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RLEVel <real>  :DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RLEVel ?
Example	DISP:CDP:VIEW2:WIND:TRAC:Y:RLEV -10.0 DISP:CDP:VIEW2:WIND:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Unit depends on <a href="#">Meas Type</a> as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode.
Preset	0.00
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Initial S/W Revision	Prior to A.02.00

**CDP Graph & CDE Graph View CDE Window Y Ref Value**

Sets the absolute power reference value for the Code Domain Power and Code Domain Error graph views in the CDE window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALE]:RLEVel <real>  :DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALE]:RLEVel?
Example	DISP:CDP:VIEW2:WIND2:TRAC:Y:RLEV -10.0 DISP:CDP:VIEW2:WIND2:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA

Code Domain Measurement  
**AMPTD Y Scale (Amplitude / Y Scale)**

Notes	Unit depends on <b>Meas Type</b> as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode.
Preset	0.00
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Initial S/W Revision	Prior to A.02.00

**I/Q Error View Mag Error Window Y Ref Value**

Sets the absolute power reference value for the magnitude error view in the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALE]:RLEVel <real> :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALE]:RLEVel ?
Example	DISP:CDP:VIEW3:WIND:TRAC:Y:RLEV 0.0 DISP:CDP:VIEW3:WIND:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.00
State Saved	Saved in instrument state.
Min	-100
Max	100
Initial S/W Revision	Prior to A.02.00

**I/Q Error View Phase Error Window Y Ref Value**

Sets the absolute power reference value for the phase error view in the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALE]:RLEVel <real> :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALE]:RLEVel?
-----------------------	---

Example	DISP:CDP:VIEW3:WIND2:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW3:WIND2:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.00
State Saved	Saved in instrument state.
Min	-360
Max	360
Initial S/W Revision	Prior to A.02.00

#### **I/Q Error View EVM Window Y Ref Value**

Sets the absolute power reference value for the EVM view in the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RLEVe1 <real> :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RLEVe1?
Example	DISP:CDP:VIEW3:WIND3:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW3:WIND3:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.00
State Saved	Saved in instrument state.
Min	-100
Max	100
Initial S/W Revision	Prior to A.02.00

**Code Domain View CDP Window Y Ref Value**

Sets the absolute power reference value for the code domain power view in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALE]:RLEVel <real>  :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALE]:RLEVel ?
Example	DISP:CDP:VIEW4:WIND:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW4:WIND:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Unit depends on <a href="#">Meas Type</a> as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode.
Preset	0.00
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Initial S/W Revision	Prior to A.02.00

**Code Domain View Symb Power Window Y Ref Value**

Sets the absolute power reference value for the symbol power view in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALE]:RLEVel <real>  :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALE]:RLEVel?
Example	DISP:CDP:VIEW4:WIND2:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW4:WIND2:TRAC:Y:RLEV?
MIN/MAX/DEF Support	Yes
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.

Preset	0.00
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Initial S/W Revision	Prior to A.02.00

### Demod Bits View CDP Window Y Ref Value

Sets the absolute power reference value for the Demod Bits function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALE]:RLEVel <real>  :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALE]:RLEVel ?
Example	DISP:CDP:VIEW5:WIND:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW5:WIND:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Unit depends on <a href="#">Meas Type</a> as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode.
Preset	0.00
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Initial S/W Revision	Prior to A.02.00

### Demod Bits View Symb Power Window Y Ref Value

Sets the absolute power reference value for the symbol power view of the Demod Bits function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:RLEVel <real>  :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:RLEVel?
Example	DISP:CDP:VIEW5:WIND2:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW5:WIND2:TRAC:Y:RLEV?

Code Domain Measurement  
**AMPTD Y Scale (Amplitude / Y Scale)**

Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.00
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Initial S/W Revision	Prior to A.02.00

**Long Demod View Symb Power Window Y Ref Value**

Sets the absolute power reference value for the code domain power view of the Demod Bits (Long mode) function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALE]:RLEVel <real>  :DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALE]:RLEVel ?
Example	DISP:CDP:VIEW6:WIND:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW6:WIND:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.00
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Initial S/W Revision	Prior to A.02.00

**Attenuation**

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back



text that describes the total attenuator value.

See AMPTD Y Scale, “Attenuation” on page 1406 for more information.

This key is available only when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value.

For more information, see “Range” on page 1415.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	A.03.00

## Y Scale/Div

Sets the units per division of vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Power Graph & Metrics View CDP Window Y Scale/Div

Sets the vertical display sensitivity measurement result in the Power Graph & Metrics view of the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision <real>  :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision?
Example	DISP:CDP:VIEW:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW:WIND:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	10.00
State Saved	Saved in instrument state.

Code Domain Measurement  
**AMPTD Y Scale (Amplitude / Y Scale)**

Min	0.10
Max	20.00
Initial S/W Revision	Prior to A.02.00

**CDP Graph & CDE Graph View CDP Window Y Scale/Div**

Sets the vertical display sensitivity measurement result for Code Domain Power and Code Domain Error graph views in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion <real>  :DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion?
Example	DISP:CDP:VIEW2:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW2:WIND:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	10.00
State Saved	Saved in instrument state.
Min	0.10
Max	20.00
Initial S/W Revision	Prior to A.02.00

**CDP Graph & CDE Graph View CDE Window Y Scale/Div**

Sets the vertical display sensitivity measurement result for Code Domain Power and Code Domain Error graph views in the CDE window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVisio n <real>  :DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVisio n?
Example	DISP:CDP:VIEW2:WIND2:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW2:WIND2:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	10.00

State Saved	Saved in instrument state.
Min	0.10
Max	20.00
Initial S/W Revision	Prior to A.02.00

### I/Q Error View Mag Error Window Y Scale/Div

Sets the sensitivity measurement result for the magnitude error view in the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion <real>  :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion?
Example	DISP:CDP:VIEW3:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW3:WIND:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.2
State Saved	Saved in instrument state.
Min	0.100
Max	50.0
Initial S/W Revision	Prior to A.02.00

### I/Q Error View Phase Error Window Y Scale/Div

Sets the sensitivity measurement result for the phase error view in the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:PDIVisio n <real>  :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:PDIVisio n?
Example	DISP:CDP:VIEW3:WIND2:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW3:WIND2:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA

Code Domain Measurement  
**AMPTD Y Scale (Amplitude / Y Scale)**

Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.1
State Saved	Saved in instrument state.
Min	0.01
Max	360
Initial S/W Revision	Prior to A.02.00

**I/Q Error View Evm Window Y Scale/Div**

Sets the sensitivity measurement result for the EVM view in the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:PDIVisio n <real>  :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:PDIVisio n?
Example	DISP:CDP:VIEW3:WIND3:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW3:WIND3:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.1
State Saved	Saved in instrument state.
Min	0.100
Max	50.0
Initial S/W Revision	Prior to A.02.00

**Code Domain View CDP Window Y Scale/Div**

Sets the sensitivity measurement result for the code domain power view in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion <real>  :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion?
Example	DISP:CDP:VIEW4:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW4:WIND:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	10.00
State Saved	Saved in instrument state.
Min	0.10
Max	20.00
Initial S/W Revision	Prior to A.02.00

**Code Domain View Symbol Power Window Y Scale/Div**

Sets the sensitivity measurement result for the symbol power view in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:PDIVisio n <real>  :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:PDIVisio n?
Example	DISP:CDP:VIEW4:WIND2:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW4:WIND2:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	5
State Saved	Saved in instrument state.
Min	0.10

Code Domain Measurement  
**AMPTD Y Scale (Amplitude / Y Scale)**

Max	20.00
Initial S/W Revision	Prior to A.02.00

**Demod Bits View CDP Window Y Scale/Div**

Sets the sensitivity measurement result for the Demod Bits function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALE]:PDIVis ion <real>  :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALE]:PDIVis ion?
Example	DISP:CDP:VIEW5:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW5:WIND:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	10.00
State Saved	Saved in instrument state.
Min	0.10
Max	20.00
Initial S/W Revision	Prior to A.02.00

**Demod Bits View Symbol Power Window Y Scale/Div**

Sets the sensitivity measurement result for the symbol power view of the Demod Bits function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:PDIVisio n <real>  :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:PDIVisio n?
Example	DISP:CDP:VIEW5:WIND2:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW5:WIND2:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.

Preset	5
State Saved	Saved in instrument state.
Min	0.10
Max	20.00
Initial S/W Revision	Prior to A.02.00

### Long Demod View Symbol Power Window Y Scale/Div

Sets the sensitivity measurement result for the code domain power view of the Demod Bits (Long mode) function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion <real>  :DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion?
Example	DISP:CDP:VIEW6:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW6:WIND:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	5
State Saved	Saved in instrument state.
Min	0.10
Max	20.00
Initial S/W Revision	Prior to A.02.00

### Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See “[Presel Center](#)” on page 1421 under AMPTD Y Scale for more information.

This key is available only when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

Modified at S/W Revision	A.03.00
--------------------------	---------

## Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See “[Preselector Adjust](#)” on page 1422 under AMPTD Y Scale for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

## Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, “[Internal Preamp](#)” on page 1435 for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

## Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display. Changing the reference position does not change the reference level value.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## I/Q Error View Mag Error Window Y Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display in the magnitude error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALE]:RPOSit ion TOP CENTer BOTTom  :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALE]:RPOSit ion?
-----------------------	---



Example	DISP:CDP:VIEW3:WIND:TRAC:Y:RPOS CENT DISP:CDP:VIEW3:WIND:TRAC:Y:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	CENTer
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Initial S/W Revision	Prior to A.02.00

### I/Q Error View Phase Error Window Y Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display in the phase error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALE]:RPOSITio n TOP CENTer BOTTom  :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALE]:RPOSITio n?
Example	DISP:CDP:VIEW3:WIND2:TRAC:Y:RPOS CENT DISP:CDP:VIEW3:WIND2:TRAC:Y:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	CENTer
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Initial S/W Revision	Prior to A.02.00

### I/Q Error View Evm Window Y Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display in the EVM view of the I/Q Error window

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:RPOSITio n TOP CENTer BOTTom  :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:RPOSITio n?
-----------------------	---

Code Domain Measurement  
**AMPTD Y Scale (Amplitude / Y Scale)**

Example	DISP:CDP:VIEW3:WIND3:TRAC:Y:RPOS CENT DISP:CDP:VIEW3:WIND3:TRAC:Y:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	BOTTom
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Initial S/W Revision	Prior to A.02.00

**Demod Bits View Symbol Power Window Y Ref Position**

Positions the Y-axis scale reference level at the top, center or bottom of the display in the symbol power view of the Demod Bits function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:RPOSitio n TOP CENTer BOTTom  :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:RPOSitio n?
Example	DISP:CDP:VIEW5:WIND2:TRAC:Y:RPOS CENT DISP:CDP:VIEW5:WIND2:TRAC:Y:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	CENTer
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Initial S/W Revision	Prior to A.02.00

**Long Demod View Symbol Power Window Y Ref Position**

Positions the Y-axis scale reference level at the top, center or bottom of the display in the in the symbol power view of the Demod Bits (Long mode) function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALE]:RPOSit ion TOP CENTer BOTTom  :DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALE]:RPOSit ion?
-----------------------	---

Example	DISP:CDP:VIEW6:WIND:TRAC:Y:RPOS CENT DISP:CDP:VIEW6:WIND:TRAC:Y:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Preset	CENTer
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Initial S/W Revision	Prior to A.02.00

### Auto Scaling

Toggles the Auto Scaling function between On and Off. When the **Restart** front panel key or **Restart** menu key under the **Meas Control** menu is pressed, this function automatically determines the scale per division and reference values based on the measurement results.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### I/Q Error View Mag Error Window Y Auto Scaling

Toggles the Auto Scaling function between On and Off for the magnitude error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON : :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:COUPlE ?
Example	DISP:CDP:VIEW3:WIND:TRAC:Y:COUP ON DISP:CDP:VIEW3:WIND:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	Upon pressing the <b>Restart</b> front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON

Code Domain Measurement  
**AMPTD Y Scale (Amplitude / Y Scale)**

State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

**I/Q Error View Phase Error Window Y Auto Scaling**

Toggles the Auto Scaling function between On and Off in the phase error view of the I/Q Error window.

<b>Remote Command</b>	:DISP:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALE]:COUPle 0 1 OFF ON  :DISP:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALE]:COUPle?
Example	DISP:CDP:VIEW3:WIND2:TRAC:Y:COUP ON DISP:CDP:VIEW3:WIND2:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	Upon pressing the <b>Restart</b> front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

**I/Q Error View Evm Window Y Auto Scaling**

Toggles the Auto Scaling function between On and Off in the EVM view of the I/Q Error window

<b>Remote Command</b>	:DISP:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:COUPle 0 1 OFF ON  :DISP:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:COUPle?
Example	DISP:CDP:VIEW3:WIND3:TRAC:Y:COUP ON DISP:CDP:VIEW3:WIND3:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.

Couplings	Upon pressing the <b>Restart</b> front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

### Demod Bits View Symbol Power Window Y Auto Scaling

Toggles the Auto Scaling function between On and Off in the symbol power view of the Demod Bits function in the CDP window.

<b>Remote Command</b>	:DISP:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:COUPlE 0 1 OFF ON  :DISP:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:COUPlE?
Example	DISP:CDP:VIEW5:WIND2:TRAC:Y:COUP ON DISP:CDP:VIEW5:WIND2:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	Upon pressing the <b>Restart</b> front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

### Long Demod View Symbol Power Window Y Auto Scaling

Toggles the Auto Scaling function between On and Off in the symbol power view of the Demod Bits

Code Domain Measurement  
**AMPTD Y Scale (Amplitude / Y Scale)**

(Long mode) function in the CDP window.

<b>Remote Command</b>	:DISP:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON  :DISP:CDPower:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:COUPle ?
Example	DISP:CDP:VIEW6:WIND:TRAC:Y:COUP ON  DISP:CDP:VIEW6:WIND:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	Upon pressing the <b>Restart</b> front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

---

## **Auto Couple**

Operation of this key is identical across several measurements. For details about this key, see [“Auto Couple” on page 1437](#).

## **BW**

There is no BW functionality supported in the Code Domain measurement. The front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00



## **Cont (Continuous Measurement/Sweep)**

Operation of this key is identical across several measurements. For details about this key, see “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451.

## **FREQ Channel**

Operation of this key is identical across all measurements in this application. For details, see “FREQ/Channel” on page 1453.

---

## **Input/Output**

Operation of this key is identical across several measurements. For details about this key, see [“Input/Output” on page 1459](#).

## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

See “[Marker](#)” on page 1531 for more information

Key Path	Front Panel Key
Initial S/W Revision	Prior to A.02.00

### Marker Symbol Value (Remote Command only)

Sets the marker symbol value in the current marker for the trace of I/Q symbol polar vector. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal**.

This command is only valid when Marker Trace is ‘POLar’(I/Q symbol polar vector). For other Marker Traces, it is ignored.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :SYMBOL <real>  :CALCulate:CDPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :SYMBOL?
Example	CALC:CDP:MARK:SYMB 1.0 CALC:CDP:MARK:SYMB?
Mode	WCDMA
Notes	If no suffix is sent, uses ‘symbols’. If the suffix is not ‘symbols’, an error “Invalid suffix” is generated.  The query returns the marker’s ‘symbol’ value in the trace if the control mode is <b>Normal</b> . The query is returned in ‘ <b>symbols</b> ’. If the marker is <b>Off</b> the response is not a number.  This parameter has different meaning between the cases where the marker trace is set to Symbol I/Q Polar Vector and others. In the Symbol I/Q Polar Vector Graph, X Axis Value is also the measured value, so this parameter is meaningful only when the control mode is set to Normal.
Preset	Start point of the trace on the display window
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

**Marker X Axis Value (Remote Command only)**

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

This command is not valid when Marker Trace is 'POLar' (I/Q symbol polar vector) and ignored. For Marker Trace 'POLar' (I/Q symbol polar vector), Marker Symbol Value is supported instead.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real>  :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X ?
Example	CALC:CDP:MARK3:X 0.0 CALC:CDP:MARK3:X?
Mode	WCDMA
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated.  The query returns the marker's absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker's reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b> , seconds for <b>Period</b> and <b>Time</b> . If the marker is <b>Off</b> the response is not a number.
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query returns a Not A Number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

**Marker X Axis Position (Remote Command only)**

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition <real>  :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition?
Example	CALC:CDP:MARK10:X:POS 0.0 CALC:CDP:MARK10:X:POS?

Mode	WCDMA
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points. If the marker is <b>Off</b> the response is Not A Number (NAN).
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query returns a Not A Number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

### Marker Y Axis Value (Remote Command only)

Queries the marker Y Axis value in the current marker Y Axis unit.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:CDP:MARK11:Y?
Mode	WCDMA
Preset	Result dependent on markers setup and signal source
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Type

Sets the marker control mode. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, reference value of the selected marker appears on the Active Function area.

Active Function Display:

Marker symbol value at I/Q Symbol Polar Vector graph

Marker X-axis value at other graphs

Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.

The marker X axis value entered in the active function area displays the marker value to its full entered precision.

When Marker Trace is 'POLar' (I/Q Polar), 'Delta' is not supported.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE Position DELTA OFF :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?
Example	CALC:CDP:MARK:MODE POS CALC:CDP:MARK:MODE?
Key Path	<b>Marker</b>
Mode	WCDMA
Notes	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.  Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.  Active Function Display: Marker symbol value at I/Q Symbol Polar Vector graph Marker X-axis value at other graphs  The marker X axis value entered in the active function area displays the marker value to its full entered precision.
Preset	OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Initial S/W Revision	Prior to A.02.00

## Properties

Accesses a menu that enables you to select a relative marker and marker trace

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Select

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Relative To

Selects the marker the selected marker will be relative to (its reference marker).

<b>Remote Command</b>	:CALCulate:CDPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :R EFeRence <integer>  :CALCulate:CDPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :R EFeRence?
Example	CALC:CDP:MARK:REF 4 CALC:CDP:MARK:REF?
Key Path	<b>Marker, Properties</b>
Mode	WCDMA
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." When queried a single value is returned (the specified marker numbers relative marker).
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Initial S/W Revision	Prior to A.02.00

### Marker Trace

Assigns the specified marker to the designated trace.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :T RACe CDPower   EVM   MERRor   PERRor   SPOWer   CPOWer   CDError   POLar  :CALCulate:CDPower:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :T RACe?
Example	CALC:CDP:MARK:TRACE POL CALC:CDP:MARK:TRACE?
Key Path	<b>Marker, Properties</b>



Mode	WCDMA
Preset	CDPower
State Saved	Saved in instrument state.
Range	Code Domain Power Code Domain Error Symbol Power Chip Power EVM Phase Error Mag Error Polar
Initial S/W Revision	Prior to A.02.00

## Couple Markers

Toggles the state of the markers to be coupled On or Off. When this function is true (On), moving any marker causes an equal X-axis movement of every other marker except those located to the polar trace, and Chip value of the marker located to the polar trace, which is not **Off**, including **Fixed** markers. “Equal X Axis movement” refers to the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units). This may result in markers going offscreen

<b>Remote Command</b>	:CALCulate:CDPower:MARKer:COUple[:STATE] ON OFF 1 0 :CALCulate:CDPower:MARKer:COUple[:STATE]?
Example	CALC:CDP:MARK:COUP ON CALC:CDP:MARK:COUP?
Key Path	<b>Marker</b>
Mode	WCDMA
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

## All Markers Off

Turns off all markers.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer:AOFF
Example	CALC:CDP:MARK:AOFF
Key Path	<b>Marker</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## **Marker Function**

There are no Marker Function operations supported in the Code Domain measurement. The front-panel key displays a blank menu when pressed.

Key Path	Front panel key
Initial S/W Revision	Prior to A.02.00

---

## Marker To

Accesses menu keys that can copy the current marker value into other instrument parameter, for example Despread. If the currently selected marker is not on when the front panel key is pressed, it is turned on at the center of the screen as a normal type marker.

Key Path	Front panel key
Initial S/W Revision	Prior to A.02.00

## Mkr -> Despread

Executes post process for selected marker.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:DESPread
Example	CALC:CDP:MARK4:SET:DESP
Key Path	<b>Marker -&gt;, Mkr-&gt;Despread</b>
Mode	WCDMA
Dependencies	This function is available only when the marker trace is either 'CDPower' or 'CDError'.
Initial S/W Revision	Prior to A.02.00

## **Meas**

Operation of this key is identical across several measurements. For details about this key, see [“Meas” on page 1575](#).

---

## Meas Setup

Displays the setup menu for the currently selected measurement either BTS or MS.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## Meas Type

Sets the code domain power computation type to either the absolute power or the relative value to the mean power.

ABSolute – Code domain power is computed as the absolute power.

RELative – Code domain power is computed relative to the mean power.

<b>Remote Command</b>	:CALCulate:CDPower:TYPE RELative ABSolute :CALCulate:CDPower:TYPE?
Example	CALC:CDP:TYPE REL CALC:CDP:TYPE?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Preset	RELative
State Saved	Saved in instrument state.
Range	Abs Rel
Initial S/W Revision	Prior to A.02.00

## Symbol Rate

Sets a symbol rate.

<b>Remote Command</b>	:CALCulate:CDPower:SRATe <integer> :CALCulate:CDPower:SRATe?
Example	CALC:CDP:SRAT 30000 CALC:CDP:SRAT?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Dependencies	1920000 choice for MS is available only if HSPA is enabled

Code Domain Measurement  
**Meas Setup**

Preset	15000
State Saved	Saved in instrument state.
Range	7500 15000 30000 60000 120000 240000 480000 960000 for BTS 15000 30000 60000 120000 240000 480000 960000 1920000 for MS
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Code Number**

Sets a spread code.

<b>Remote Command</b>	:CALCulate:CDPower:SPRead <integer> :CALCulate:CDPower:SPRead?
Example	CALC:CDP:SPR 1 CALC:CDP:SPR?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	MAX depends on the symbol Rate as follows: 511, when CALCulate:CDPower:SRATe=7500 255, when CALCulate:CDPower:SRATe=15000 127, when CALCulate:CDPower:SRATe=30000 63, when CALCulate:CDPower:SRATe=60000 31, when CALCulate:CDPower:SRATe=120000 15, when CALCulate:CDPower:SRATe=240000 7, when CALCulate:CDPower:SRATe=480000 3, when CALCulate:CDPower:SRATe=960000 1, when CALCulate:CDPower:SRATe=1920000
Couplings	Coupled with <a href="#">“Symbol Rate” on page 849.</a>
Preset	0
State Saved	Saved in instrument state.

Range	0 to 511, when CALCulate:CDPower:SRATe=7500 0 to 255, when CALCulate:CDPower:SRATe=15000 0 to 127, when CALCulate:CDPower:SRATe=30000 0 to 63, when CALCulate:CDPower:SRATe=60000 0 to 31, when CALCulate:CDPower:SRATe=120000 0 to 15, when CALCulate:CDPower:SRATe=240000 0 to 7, when CALCulate:CDPower:SRATe=480000 0 to 3, when CALCulate:CDPower:SRATe=960000 0 to 1, when CALCulate:CDPower:SRATe=1920000
Initial S/W Revision	Prior to A.02.00

### Mod Scheme (BTS Only)

If the Radio Device is BTS **and** the Symbol Rate is 240 ksps, the Mod Scheme menu key is displayed and active.

If the Radio Device is BTS **and** the Symbol Rate is **not** 240 ksps, the Mod Scheme menu key is displayed but inactive (grayed out). In this case, the last setting (Auto/QPSK/16QAM/64QAM) is displayed on the menu key even though the “QPSK” setting is always used.

If the Radio Device is MS, the Mod Scheme menu key is not displayed. Instead, the I/Q Branch menu key is displayed and active.

- Auto: The specified channel by Symbol Rate and Code Number is considered to be modulated by auto-detected scheme.
- QPSK: The specified channel by Symbol Rate and Code Number is considered to be modulated by QPSK.
- 16QAM: The specified channel by Symbol Rate and Code Number is considered to be modulated by 16QAM.
- 64QAM: The specified channel by Symbol Rate and Code Number is considered to be modulated by 64QAM.

<b>Remote Command</b>	:CALCulate:CDPower:MTYPE AUTO QPSK QAM16 QAM64 :CALCulate:CDPower:MTYPE?
Example	CALC:CDP:MTYP QAM16 CALC:CDP:MTYP?
Key Path	<b>Meas Setup</b>
Mode	WCDMA

Notes	<p>W-CDMA HSPA option license is necessary to make this parameter available. In addition, you need to enable W-CDMA HSPA option functionality.</p> <p>Otherwise, this parameter is not available. The Modulation Scheme menu key is inactive (grayed out) and SCPI commands for Modulation Scheme have no effect.</p> <p>To select “QAM64”, you need to enable W-CDMA HSPA+ option functionality with the license. Otherwise the softkey for 64QAM is grayed out and SCPI command to select “QAM64” is not valid.</p> <p>You must be in W-CDMA mode to use this command. Use :INSTrument:SElect to set the mode.</p>
Dependencies	<p>The menu key is active if Radio Device selection is “BTS” <b>and</b> Symbol Rate is 240 ksp/s.</p> <p>This menu key is inactive (grayed out) if Radio Device selection is “BTS” <b>and</b> Symbol Rate is <b>not</b> 240 ksp/s. In this case, the last setting is displayed on the menu key even though “QPSK” is always used.</p> <p>This menu key is not displayed if Radio Device selection is “MS”.</p>
Preset	AUTO
State Saved	Saved in instrument state.
Range	Auto QPSK 16QAM 64QAM
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### I/Q Branch (MS only)

Select the I phase or Q phase for the demodulation axis.

<b>Remote Command</b>	:CALCulate:CDPower:AXIS[:MS] IPH QPH IQCombined :CALCulate:CDPower:AXIS[:MS]?
Example	CALC:CDP:AXIS IPH CALC:CDP:AXIS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	IPH – I Phase QPH – Q Phase IQC – Combined I and Q Phase
Dependencies	This command is effective when [:SENSe]:RADio:DEvice is set to MS. (This menu label is grayed out when [:SENSe]:RADio:DEvice is set to BTS.)
Preset	QPH



State Saved	Saved in instrument state.
Range	I Q IQ Combined
Initial S/W Revision	Prior to A.02.00

## Meas Interval

Sets the length of the measurement interval in slots (1 slot = 666.6us).

The sum of CALCulate:CDPower:SWEep:TIME and CALCulate:CDPower:SWEep:OFFSet must be equal to or less than SENSE:CDPower:CAPTure:TIME \* 15. If the sum exceeds this value, CALCulate:CDPower:SWEep:OFFSet is adjusted automatically.

<b>Remote Command</b>	:CALCulate:CDPower:SWEep:TIME <integer> :CALCulate:CDPower:SWEep:TIME?
Example	CALC:CDP:SWE:TIME 2 CALC:CDP:SWE:TIME?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	The sum of <a href="#">Meas Offset</a> and Meas Interval must be equal to or less than Capture Interval in slot.  If the sum is larger than the limit value, Meas Interval and/or <a href="#">Meas Offset</a> is adjusted automatically.
Couplings	See Notes
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	Capture Interval in slot
Initial S/W Revision	Prior to A.02.00

## Meas Offset

Sets the timing offset of measurement interval in slots. (1 slot = 666.6 us)

The sum of CALCulate:CDPower:SWEep:TIME and CALCulate:CDPower:SWEep:OFFSet must be equal to or less than SENSE:CDPower:CAPTure:TIME \* 15. If the sum exceeds this value, CALCulate:CDPower:SWEep:OFFSet is adjusted automatically.

<b>Remote Command</b>	:CALCulate:CDPower:SWEep:OFFSet <integer> :CALCulate:CDPower:SWEep:OFFSet?
-----------------------	---

Code Domain Measurement  
**Meas Setup**

Example	CALC:CDP:SWE:OFFS 2 CALC:CDP:SWE:OFFS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	The sum of Meas Offset and <b>Meas Interval</b> must be equal to or less than Capture Interval. If the sum becomes more than the value, the <b>Meas Interval</b> is adjusted automatically to Capture Interval – Meas Offset.
Couplings	See Notes
Preset	0
State Saved	Saved in instrument state.
Min	0
Max	Capture Interval in slot – 1
Initial S/W Revision	Prior to A.02.00

### Sync Type

Opens a menu that enables you to set the channel type to be used for synchronization.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

### Sync Type (BTS)

Displays a menu that allows you to select the Sync Type. The selections are:

- CPICH - Synchronizes with the CPICH channel.
- SCH - Synchronizes with the SCH channel.
- Symbol Based (See Note below) - Accesses the menu for the code symbol to synchronize with. This submenu provides the following selections:
  - Symbol Rate - Sets the symbol rate ranging from 7.5 to 960 ksps. The parameter automatically sets the maximum value for Code Number when appropriate.
  - Code Number - Sets the code number. The range is 0 to 511 depending on the Symbol Rate setting.
- Antenna–2 CPICH - Synchronizes with the STTD Antenna–2 common pilot channel.
- Antenna–1 TSTD SCH – Synchronizes with the TSTD SCH Antenna–1
- Antenna–2 TSTD SCH – Synchronizes with the TSTD SCH Antenna–2

---

**NOTE** When Sync Type is ‘Symbol Based’, the selected symbol is assumed to be QPSK.

Therefore, for cases other than QPSK, it cannot be synchronized correctly. For example, 16QAM HS-PDSCH symbol cannot be used to synchronize.

<b>Remote Command</b>	[ :SENSe ] :CDPower :SYNC [ :BTS ] CPICH   SCH   SYMBol   A2CPich   A1Sch   A2Sch  [ :SENSe ] :CDPower :SYNC [ :BTS ] ?
Example	CDP:SYNC SCH CDP:SYNC?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Dependencies	This command is effective when [:SENSe]:RADio:DEvIce is set to BTS.
Couplings	SYMBol: synchronize to the code symbol specified by [:SENSe]:CDPower:SYNC:SYMBol:SRATe and the [:SENSe]:CDPower:SYNC:SYMBol:SPRead commands.
Preset	CPICH
State Saved	Saved in instrument state.
Range	CPICH SCH Symbol Based Antenna-2 CPICH Antenna-1 TSTD SCH Antenna-2 TSTD SCH
Initial S/W Revision	Prior to A.02.00

### Pilot-aided Timing Estimator (BTS only)

Enables additional symbol timing estimation to each detected code channel through the demod calculation process by referring to the pilot channel (i.e., CPICH or Ant2 CPICH, accordingly) timing correlation. It should improve symbol reference vector estimation robustness for some specific impairment conditions: for example, the signal under test is assumed to have asymmetric filter response. Note that this function would not always be effective for any signal conditions; on the contrary, turning the key “on” may decrease the estimation robustness and measurement speed for some cases. For example, this function may be helpful if you find that the peak symbol EVM result is unexpectedly high compared to the RMS symbol EVM result.

<b>Remote Command</b>	[ :SENSe ] :CDPower :SYNC :CPICH :ESTimator OFF   ON   0   1 [ :SENSe ] :CDPower :SYNC :CPICH :ESTimator?
Example	CDP:SYNC:CPIC:EST 0 CDP:SYNC:CPIC:EST?
Key Path	<b>Meas Setup, Sync Type, CPICH</b> <b>Meas Setup, Sync Type, Antenna-2 CPICH</b>
Mode	WCDMA

Code Domain Measurement  
**Meas Setup**

Dependencies	This command is effective when [:SENSe]:RADio:DEvice is set to BTS and [:SENSe]:CDPower:SYNC[:BTS] is set to CPICH or A2CPich..
Preset	Off
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	A.03.00

**Synchronization Symbol Rate (BTS only)**

Sets the symbol rate of the code symbol to synchronize with. This command is effective when the [:SENSe]:CDPower:SYNC[:BTS] command is set to SYMBol.

Sets the symbol rate ranging from 7.5 to 960 kps. The parameter automatically sets the maximum value for Code Number when appropriate.

<b>Remote Command</b>	[:SENSe]:CDPower:SYNC:SYMBol:SRATe <integer> [:SENSe]:CDPower:SYNC:SYMBol:SRATe?
Example	CDP:SYNC:SYMB:SRAT 30000 CDP:SYNC:SYMB:SRAT?
Key Path	<b>Meas Setup, Sync Type, Symbol Based</b>
Mode	WCDMA
Dependencies	This command is effective when [:SENSe]:RADio:DEvice is set to BTS, and [:SENSe]:CDPower:SYNC[:BTS] is set to SYMBol.
Preset	7500
State Saved	Saved in instrument state.
Range	7500 15000 30000 60000 120000 240000 480000 960000
Initial S/W Revision	Prior to A.02.00

**Synchronization Code Number (BTS only)**

Sets the spread code number of the code symbol to synchronize with. The range depends on the Symbol Rate setting.

<b>Remote Command</b>	[:SENSe]:CDPower:SYNC:SYMBol:SPRead <integer> [:SENSe]:CDPower:SYNC:SYMBol:SPRead?
Example	CDP:SYNC:SYMB:SPR 255 CDP:SYNC:SYMB:SPR?
Key Path	<b>Meas Setup, Sync Type, Symbol Based</b>
Mode	WCDMA

Dependencies	This command is effective when [:SENSe]:RADio:DEVIce is set to BTS, and [:SENSe]:CDPower:SYNC[:BTS] is set to SYMBol. [:SENSe]:CDPower:SYNC:SYMBol:SRATe
Preset	1
State Saved	Saved in instrument state.
Range	0 to 511, when [:SENSe]:CDPower:SYNC:SYMBol:SRATe=7500 0 to 255, when [:SENSe]:CDPower:SYNC:SYMBol:SRATe =15000 0 to 127, when [:SENSe]:CDPower:SYNC:SYMBol:SRATe =30000 0 to 63, when [:SENSe]:CDPower:SYNC:SYMBol:SRATe =60000 0 to 31, when [:SENSe]:CDPower:SYNC:SYMBol:SRATe =120000 0 to 15, when [:SENSe]:CDPower:SYNC:SYMBol:SRATe =240000 0 to 7, when [:SENSe]:CDPower:SYNC:SYMBol:SRATe =480000 0 to 3, when [:SENSe]:CDPower:SYNC:SYMBol:SRATe =960000
Initial S/W Revision	Prior to A.02.00

### Sync Type (MS)

Select DPCCCh or PMESsage for synchronization to uplink signal.

DPCCCh	Synchronizes to DPCCCH and Slot Format, which is specified by [:SENSe]:CDPower:SFORmat:MS
PMESsage	Synchronizes to PRACH Message and Slot Format, which is specified by [:SENSe]:CDPower:PRACH:SIGNature and [:SENSe]:CDPower:SFORmat:MS.

<b>Remote Command</b>	[ :SENSe ] :CDPower :SYNC :MS DPCCCh   PMESsage [ :SENSe ] :CDPower :SYNC :MS?
Example	CDP:SYNC:MS DPCC CDP:SYNC:MS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Dependencies	This command is effective when [:SENSe]:RADio:DEVIce is set to MS.
Preset	DPCCCh
State Saved	Saved in instrument state.
Range	DPCCCH PRACH Message
Initial S/W Revision	Prior to A.02.00

### Primary Scramble Code (BTS only)

Sets the BTS primary scramble code for synchronization. The BTS scramble code number (Down Link) is determined by “Primary Scramble Code”, “Scramble Code Offset” and “Scramble Code Type”.

<b>Remote Command</b>	[ :SENSe ] :CDPower:SYNC:SCRamble[:BTS] <integer> [ :SENSe ] :CDPower:SYNC:SCRamble[:BTS] ?
Example	CDP:SYNC:SCR 1 CDP:SYNC:SCR?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Dependencies	This command is effective when [:SENSe]:RADio:DEvice is set to BTS.
Preset	0
State Saved	Saved in instrument state.
Min	0
Max	511
Initial S/W Revision	Prior to A.02.00

### Slot Format (MS only)

Selects Slot Format for synchronization to the uplink signal. This command is effective when the [:SENSe]:CDPower:SYNC:MS command is set to DPCCh.

<b>Remote Command</b>	[ :SENSe ] :CDPower:SFORmat:MS SF0   SF1   SF2   SF3   SF4   SF5   AUTO [ :SENSe ] :CDPower:SFORmat:MS?
Example	CDP:SFOR:MS SF2 CDP:SFOR:MS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Dependencies	This command is effective when [:SENSe]:RADio:DEvice is set to MS, and [:SENSe]:CDPower:SYNC:MS is set to DPCCh.
Preset	SF0
State Saved	Saved in instrument state.
Range	SF0 SF1 SF2 SF3 SF4 SF5 Auto
Initial S/W Revision	Prior to A.02.00

## Preamble Signature (MS only)

Sets the Preamble Signature number for PRACH Message detection. Based on this value, the code allocation of the PRACH message control part is calculated. This command is effective when the [:SENSe]:CDPower:SYNC:MS command is set to PMESsage (PRACH Message).

<b>Remote Command</b>	[:SENSe]:CDPower:PRACH:SIGNature <integer> [:SENSe]:CDPower:PRACH:SIGNature? [:SENSe]:CDPower:PRACH:SIGNature:AUTO OFF ON 0 1 [:SENSe]:CDPower:PRACH:SIGNature:AUTO?
Example	CDP:PRAC:SIGN 2 CDP:PRAC:SIGN? CDP:PRAC:SIGN:AUTO ON CDP:PRAC:SIGN:AUTO?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	Sets Signature Auto mode ON for PRACH Preamble detection.
Dependencies	This command is effective when [:SENSe]:RADio:DEvice is set to MS, and [:SENSe]:CDPower:SYNC:MS is set to PMESsage.
Couplings	See Notes
Preset	0 ON
State Saved	Saved in instrument state.
Min	0
Max	15
Initial S/W Revision	Prior to A.02.00

## Scramble Code Offset (BTS only)

Sets the number of the scramble code offset used in the measurement. This key is not available if the Device is set to MS.

<b>Remote Command</b>	[:SENSe]:CDPower:SYNC:SCRamble[:BTS]:OFFSet <integer> [:SENSe]:CDPower:SYNC:SCRamble[:BTS]:OFFSet?
Example	CDP:SYNC:SCR:OFFS 1 CDP:SYNC:SCR:OFFS?
Key Path	<b>Meas Setup</b>

Mode	WCDMA
Dependencies	This command is effective when [:SENSe]:RADio:DEvice is set to BTS.
Preset	0
State Saved	Saved in instrument state.
Range	0 to 15 (0 for the primary scramble code; 1 to 15 for the secondary scramble code)
Initial S/W Revision	Prior to A.02.00

### Scramble Code (MS only)

Sets the MS scramble code for synchronization. When this key is selected, the “Hex Input” menu appears.

<b>Remote Command</b>	<code>[:SENSe]:CDPower:SYNC:SCRamble:MS &lt;integer&gt;</code> <code>[:SENSe]:CDPower:SYNC:SCRamble:MS?</code>
Example	<code>CDP:SYNC:SCR:MS 0</code> <code>CDP:SYNC:SCR:MS?</code>
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Dependencies	This command is effective when [:SENSe]:RADio:DEvice is set to MS.
Preset	0 (0x0; 24 bits)
State Saved	Saved in instrument state.
Min	0 (0x0; 24 bits)
Max	16777215 (0xFFFFF; 24 bits)
Initial S/W Revision	Prior to A.02.00

### Scramble Code Type (BTS only)

Sets the BTS primary scramble code type for synchronization.

Sets the scramble code type to Std (standard), Left, or Right to make the measurement. This key is not available if Device is set to MS.

- LEFT – the left alternative scrambling code whose number is the primary scramble code number + 8192 is used.
- RIGHT – the right alternative scrambling code whose number is the primary scrambling code number + 16384 is used.
- STANdard – the standard scrambling code whose number is the primary scrambling code number is



used.

<b>Remote Command</b>	[ :SENSe ] :CDPower :SYNC :SCRamble [ :BTS ] :TYPE LEFT   RIGHT   STANdard  [ :SENSe ] :CDPower :SYNC :SCRamble [ :BTS ] :TYPE?
Example	CDP:SYNC:SCR:TYPE LEFT CDP:SYNC:SCR:TYPE?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Dependencies	This command is effective when [:SENSe]:RADio:DEVice is set to BTS.
Preset	STANdard
State Saved	Saved in instrument state.
Range	Std Left Right
Initial S/W Revision	Prior to A.02.00

### DPCH/E-DPCH Configuration (MS only)

This parameter configures how DPDCH, HS-DPCCH, E-DPCCH and E-DPDCH are recognized.

This is a front-panel selection only, there is no SCPI command.

Key Path	<b>Meas Setup</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

<b>Remote Command</b>	:CALCulate:CDPower:DPCH:MS:CONFigure C1   C2WDpdch   C2WODpdch   C3  :CALCulate:CDPower:DPCH:MS:CONFigure?
Example	CALC:CDP:DPCH:MS:CONF C3 CALC:CDP:DPCH:MS:CONF?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Dependencies	This parameter is valid if HSPA mode is enabled and radio device is MS and Sync Type is DPCCH.
Preset	C1
State Saved	Saved in instrument state.
Range	Config 1 (no E-DPCH) Config 2 w/ DPDCH   Config 2 w/o DPDCH Config 3 (no DPDCH)

Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Symbol Boundary (BTS only)

Opens a menu that enables you to specify the symbol boundary detection mode on downlink.

The range of selections is as follows:

- Auto Detect [SCPI Enum: AUTO] - Select this to set the symbol boundary detection to the automatic mode. Various code channels are measured and the most appropriate code channel is selected as the reference channel.
- Test Model 1 - Press this key to access a menu to allow further selections of Test Model 1 with 16, 32 or 64 DPCH channels, and with S-CCPCH.
  - Test Model 1 w/16 DPCH w/ S-CCPCH [SCPI Enum: TM1D16] - Select this to set the Code Domain Power measurement to the Test Model 1 with 16 DPCH channels and 1 S-CCPCH channel.
  - Test Model 1 w/32 DPCH w/ S-CCPCH [SCPI Enum: TM1D32] - Select this to set the Code Domain Power measurement to Test Model 1 with 32 DPCH channels and 1 S-CCPCH channel.
  - Test Model 1 w/64 DPCH w/ S-CCPCH [SCPI Enum: TM1D64] - Select this to set the Code Domain Power measurement to Test Model 1 with 64 DPCH channels and 1 S-CCPCH channel.
- Test Model 2 - Press this key to access a menu to allow selections of Test Model 2 with S-CCPCH.
  - Test Model 2 w/S-CCPCH [SCPI Enum: TM2SC] - Select this to set the Code Domain Power measurement to Test Model 2 with 1 S-CCPCH channel.
- Test Model 3 - Press this key to access a menu to allow further selections from Test Model 3 with 16 or 32 DPCH channels, and with S-CCPCH.
  - Test Model 3 w/16 DPCH w/ S-CCPCH [SCPI Enum: TM3D16SC] - Select this to set the Code Domain Power measurement to Test Model 3 with 16 DPCH channels and 1 S-CCPCH channel.
  - Test Model 3 w/32 DPCH w/ S-CCPCH [SCPI Enum: TM3D32SC] - Select this to set the Code Domain Power measurement to Test Model 3 with 32 DPCH channels and 1 S-CCPCH channel.
- Test Model 4 - Press this key to access a menu to allow further selections of Test Model 4.
  - Test Model 4 w/P-CPICH [SCPI Enum: TM4CP] - Select this to set the Code Domain Power measurement to Test Model 4 with 1 CPICH channel.
  - Test Model 4 [SCPI Enum: TM4] - Select this to set the Code Domain Power measurement to Test Model 4 (no CPICH channel).
- Test Model 5 - Press this key to access a menu to allow further selections of Test Model 5.
  - Test Model 5 w/2 HS-PDSCH w/6 DPCH [SCPI Enum: TM5H2] - Select this to set the Code Domain Power measurement to Test Model 5 with 2 HS-PDSCH channels and 6 DPCH channels.
  - Test Model 5 w/4 HS-PDSCH w/14 DPCH [SCPI Enum: TM5H4] - Select this to set the Code Domain Power measurement to Test Model 5 with 4 HS-PDSCH channels and 14 DPCH

channels.

- Test Model 5 w/8 HS-PDSCH w/30 DPCH [SCPI Enum: TM5H8] - Select this to set the Code Domain Power measurement to Test Model 5 with 8 HS-PDSCH channels and 30 DPCH channels.
- Test Model 6 - Press this key to access a menu to allow further selections of Test Model 6. This is operative only when both ‘HSPA’ functionality and ‘HSPA+’ functionality are operative. Otherwise it is grayed out.
  - Test Model 6 w/8 HS-PDSCH w/30 DPCH [SCPI Enum: TM6H8] - Select this to set the Code Domain Power measurement to Test Model 6 with 8 HS-PDSCH channels and 30 DPCH channels.
- Custom [SCPI Enum: CUSTom] – This selection provides a flexible way to specify predefined active channels. By choosing it, you can specify a customized list of active channels using the following remote command: Initialize List, Append List and Replace List.

<b>Remote Command</b>	[ :SENSe] :CDPower :SBOundary [ :BTS] AUTO   TM1D16   TM1D32   TM1D64   TM1D16SC   TM1D32SC   TM1D64SC   TM2   TM2SC   TM3D16   TM3D32   TM3D16SC   TM3D32SC   TM4   TM4CP   TM5H2   TM5H4   TM5H8   TM6H8   CUSTom [ :SENSe] :CDPower :SBOundary [ :BTS] ?
Example	CDP:SBO:BTS TM1D16 CDP:SBO:BTS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	According to the 3GPP standard change for the test model, S-CCPCH needs to be supported in each test model. Therefore, for backward compatibility, the command of the test model is aliased as follows: TM1D16 -> TM1D16SC TM1D32 -> TM1D32SC TM1D64 -> TM1D64SC TM2 -> TM2SC TM3D16 -> TM3D16SC TM3D32 -> TM3D32SC
Dependencies	This command is effective when [:SENSe]:RADio:DEVIce is set to BTS. This menu key is active if “Radio Device” selection is “BTS” <b>and</b> “Capture Intvl” is one of “1 slot”, “3 slot”, “1 frame”, “2 frame” and “3 frame”. This menu key is inactive (grayed out) if “Radio Device” selection is “BTS” <b>and</b> “Capture Intvl” is either “4 frame” or “8 frame” or “16 frame”. This menu key is inactive (grayed out) if “Radio Device” selection is “MS”.
Preset	AUTO

Code Domain Measurement  
**Meas Setup**

State Saved	Saved in instrument state.
Range	Auto Detect  Test Model 1 w/ 16 DPCH w/ S_CCPCCH  Test Model 1 w/ 32 DPCH w/ S_CCPCCH  Test Model 1 w/ 64 DPCH w/ S_CCPCCH  Test Model 2 w/ S_CCPCCH  Test Model 3 w/ 16 DPCH w/ S_CCPCCH  Test Model 3 w/ 32 DPCH w/ S_CCPCCH  Test Model 4 w/ P-CPICH  Test Model 4  Test Model 5 w/ 2 HS-PDSCH w/ 6 DPCH  Test Model 5 w/ 4 HS-PDSCH w/ 14 DPCH  Test Model 5 w/ 8 HS-PDSCH w/ 30 DPCH  Test Model 6 w/ 8 HS-PDSCH w/ 30 DPCH  Custom
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Test Model 1 (BTS only)**

Press this key to access a menu allowing further selections of Test Model 1 with 16, 32 or 64 DPCH channels, and with S-CCPCH.

3GPP TS25.141, Table 6.1: Test Model 1 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	1.6	-18	16	120
S-CCPCH containing PCH (SF=256)	1	1.6	-18	3	0
DPCH (SF=128)	16/32/64	76.8 in total	See 3GPP TS25.141, Table 6.2	See 3GPP TS25.141, Table 6.2	See 3GPP TS25.141, Table 6.2

This is a front-panel selection only. The SCPI command is given in the section “Symbol Boundary (BTS

only)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

**Test Model 1 w/16 DPCH w/S-CCPCH (BTS only)**

Selects standard Test Model 1 w/16 DPCH w/S-CCPCH.

3GPP TS25.141, Table 6.1: Test Model 1 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	–10	1	0
Primary CPICH	1	10	–10	0	0
PICH	1	1.6	–18	16	120
S-CCPCH containing PCH (SF=256)	1	1.6	–18	3	0
DPCH (SF=128)	16/32/64	76.8 in total	See 3GPP TS25.141, Table 6.2	See 3GPP TS25.141, Table 6.2	See 3GPP TS25.141, Table 6.2

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 1</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 1 w/32 DPCH w/S-CCPCH (BTS only)**

Selects standard Test Model 1 w/32 DPCH w/S-CCPCH.

3GPP TS25.141 Table 6.1: Test Model 1 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	–10	1	0
Primary CPICH	1	10	–10	0	0
PICH	1	1.6	–18	16	120
S-CCPCH containing PCH (SF=256)	1	1.6	–18	3	0

Code Domain Measurement  
**Meas Setup**

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
DPCH (SF=128)	16/32/64	76.8 in total	See 3GPP TS25.141, Table 6.2	See 3GPP TS25.141, Table 6.2	See 3GPP TS25.141, Table 6.2

This is a front-panel selection only. The SCPI command is given in the section [“Symbol Boundary \(BTS only\)” on page 862](#).

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 1</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 1 w/64 DPCH w/S-CCPCH (BTS only)**

Selects standard Test Model 1 Selects standard Test Model 1 w/64 DPCH w/S-CCPCH.

3GPP TS25.141 Table 6.1: Test Model 1 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	–10	1	0
Primary CPICH	1	10	–10	0	0
PICH	1	1.6	–18	16	120
S-CCPCH containing PCH (SF=256)	1	1.6	–18	3	0
DPCH (SF=128)	16/32/64	76.8 in total	See 3GPP TS25.141, Table 6.2	See 3GPP TS25.141, Table 6.2	See 3GPP TS25.141, Table 6.2

This is a front-panel selection only. The SCPI command is given in the section [“Symbol Boundary \(BTS only\)” on page 862](#).

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 1</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 2 (BTS only)**

Press this key to access a menu to allow selections of Test Model 2 with S-CCPCH.

3GPP TS25.141, Table 6.3: Test Model 2 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	5	-13	16	120
S-CCPCH containing PCH (SF=256)	1	5	-13	3	0
DPCH (SF=128)	3	2 x 10, 1 x 50	2 x -10, 1 x -3	24, 72, 120	1, 7, 2

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

#### Test Model 2 w/S-CCPCH (BTS only)

Selects standard Test Model 2 w/S-CCPCH.

3GPP TS25.141 Table 6.3: Test Model 2 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	5	-13	16	120
S-CCPCH containing PCH (SF=256)	1	5	-13	3	0
DPCH (SF=128)	3	2 x 10, 1 x 50	2 x -10, 1 x -3	24, 72, 120	1, 7, 2

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 2</b>
----------	--

Code Domain Measurement  
Meas Setup

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**Test Model 3 (BTS only)**

Press this key to access a menu to allow further selections from Test Model 3 with 16 or 32 DPCH channels, and with S-CCPCH.

3GPP TS25.141, Table 6.4: Test Model 3 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%) 16/32	Level settings (dB) 16/32	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	12,6/7,9	-9 / -11	1	0
Primary CPICH	1	12,6/7,9	-9 / -11	0	0
PICH	1	5/1.6	-13/-18	16	120
S-CCPCH containing PCH (SF=256)	1	5/1.6	-13/-18	3	0
DPCH (SF=256)	16/32	63,7/80,4 in total	See 3GPP TS25.141, Table 6.5	See 3GPP TS25.141, Table 6.5	See 3GPP TS25.141, Table 6.5

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

**Test Model 3 w/16 DPCH w/S-CCPCH (BTS only)**

Selects standard Test Model 3 w/16 DPCH w/S-CCPCH (BTS only).

3GPP TS25.141, Table 6.4: Test Model 3 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%) 16/32	Level settings (dB) 16/32	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	12,6/7,9	-9 / -11	1	0
Primary CPICH	1	12,6/7,9	-9 / -11	0	0
PICH	1	5/1.6	-13/-18	16	120
S-CCPCH containing PCH (SF=256)	1	5/1.6	-13/-18	3	0



Type	Number of Channels	Fraction of Power (%) 16/32	Level settings (dB) 16/32	Channelization Code	Timing offset (x256Tchip)
DPCH (SF=256)	16/32	63,7/80,4 in total	See 3GPP TS25.141, Table 6.5	See 3GPP TS25.141, Table 6.5	See 3GPP TS25.141, Table 6.5

This is a front-panel selection only. The SCPI command is given in the section [“Symbol Boundary \(BTS only\)”](#) on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 3</b>
Initial S/W Revision	Prior to A.02.00

#### Test Model 3 w/32 DPCH w/S-CCPCH (BTS only)

Selects standard Test Model 3 w/32 DPCH w/S-CCPCH.

3GPP TS25.141, Table 6.4: Test Model 3 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%) 16/32	Level settings (dB) 16/32	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	12,6/7,9	-9 / -11	1	0
Primary CPICH	1	12,6/7,9	-9 / -11	0	0
PICH	1	5/1.6	-13/-18	16	120
S-CCPCH containing PCH (SF=256)	1	5/1.6	-13/-18	3	0
DPCH (SF=256)	16/32	63,7/80,4 in total	See 3GPP TS25.141, Table 6.5	See 3GPP TS25.141, Table 6.5	See 3GPP TS25.141, Table 6.5

This is a front-panel selection only. The SCPI command is given in the section [“Symbol Boundary \(BTS only\)”](#) on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 3</b>
Initial S/W Revision	Prior to A.02.00

#### Test Model 4 (BTS only)

Press this key to access a menu to allow further selections of Test Model 4.

Code Domain Measurement  
**Meas Setup**

3GPP TS25.141, Table 6.6: Test Model 4 Active Channels

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset
PCCPCH+SCH	1	50 to 1.6	-3 to -18	1	0
Primary CPICH1	1	10	-10	0	0

Table Note 1: The CPICH channel is optional.

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

**Test Model 4 w/CPICH (BTS only)**

Selects standard Test Model 4 w/CPICH

3GPP TS25.141, Table 6.6: Test Model 4 Active Channels

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset
PCCPCH+SCH	1	50 to 1.6	-3 to -18	1	0
Primary CPICH1	1	10	-10	0	0

Table Note 1: The CPICH channel is optional.

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 4</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 4 w/ no CPICH (BTS only)**

Selects standard Test Model 4 w/ no CPICH.

3GPP TS25.141, Table 6.6: Test Model 4 Active Channels

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset
PCCPCH+SCH	1	50 to 1.6	-3 to -18	1	0
Primary CPICH1	1	10	-10	0	0

Table Note 1: The CPICH channel is optional.

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 4</b>
Initial S/W Revision	Prior to A.02.00

### Test Model 5 (BTS only)

Press this key to access a menu to allow further selections of Test Model 5.

3GPP TS25.141, Table 6.6A: Test Model 5 Active Channels (2000–12 version)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=128)	30/14/6(*)	14/14.2/14.4 in total	See 3GPP TS25.141, Table 6.6B	See 3GPP TS25.141, Table 6.6B	See 3GPP TS25.141, Table 6.6B
HS-SCCH	2	4 in total	See 3GPP TS25.141, Table 6.6C	See 3GPP TS25.141, Table 6.6C	See 3GPP TS25.141, Table 6.6C
HS-PDSCH (16QAM)	8/4/2(*)	63.6/63.4/63.2 in total	See 3GPP TS25.141, Table 6.6D	See 3GPP TS25.141, Table 6.6D	See 3GPP TS25.141, Table 6.6D

Table Note \*: 2 HS-PDSCH shall be taken together with 6 DPCH, 4 HS-PDSCH shall be taken with 14 DPCH, and 8 HS-PDSCH shall be taken together with 30 DPCH.

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS](#)

Code Domain Measurement  
**Meas Setup**

only)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

**Test Model 5 w/2 HS-PDSCH, w/6 DPCH (BTS only)**

Allows you to select standard Test Model 5 w/2 HS-PDSCH, w/6 DPCH.

3GPP TS25.141, Table 6.6A: Test Model 5 Active Channels (2000–12 version)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=128)	30/14/6(*)	14/14.2/14.4 in total	See 3GPP TS25.141, Table 6.6B	See 3GPP TS25.141, Table 6.6B	See 3GPP TS25.141, Table 6.6B
HS-SCCH	2	4 in total	See 3GPP TS25.141, Table 6.6C	See 3GPP TS25.141, Table 6.6C	See 3GPP TS25.141, Table 6.6C
HS-PDSCH (16QAM)	8/4/2(*)	63.6/63.4/63.2 in total	See 3GPP TS25.141, Table 6.6D	See 3GPP TS25.141, Table 6.6D	See 3GPP TS25.141, Table 6.6D

Table Note \*: 2 HS-PDSCH shall be taken together with 6 DPCH, 4 HS-PDSCH shall be taken with 14 DPCH, and 8 HS-PDSCH shall be taken together with 30 DPCH.

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 5</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 5 w/ 4 HS-PDSCH, w/14 DPCH (BTS only)**

Allows you to select standard Test Model 5 w/4 HS-PDSCH, w/14 DPCH.

3GPP TS25.141, Table 6.6A: Test Model 5 Active Channels (2000–12 version)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=128)	30/14/6(*)	14/14.2/14.4 in total	See 3GPP TS25.141, Table 6.6B	See 3GPP TS25.141, Table 6.6B	See 3GPP TS25.141, Table 6.6B
HS-SCCH	2	4 in total	See 3GPP TS25.141, Table 6.6C	See 3GPP TS25.141, Table 6.6C	See 3GPP TS25.141, Table 6.6C
HS-PDSCH (16QAM)	8/4/2(*)	63.6/63.4/63.2 in total	See 3GPP TS25.141, Table 6.6D	See 3GPP TS25.141, Table 6.6D	See 3GPP TS25.141, Table 6.6D

Table Note \*: 2 HS-PDSCH shall be taken together with 6 DPCH, 4 HS-PDSCH shall be taken with 14 DPCH, and 8 HS-PDSCH shall be taken together with 30 DPCH.

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 5</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 5 w/ 8 HS-PDSCH, w/30 DPCH (BTS only)**

Allows you to select standard Test Model 5 w/8 HS-PDSCH, w/30 DPCH.

3GPP TS25.141, Table 6.6A: Test Model 5 Active Channels (2000–12 version)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120

Code Domain Measurement  
Meas Setup

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=128)	30/14/6(*)	14/14.2/14.4 in total	See 3GPP TS25.141, Table 6.6B	See 3GPP TS25.141, Table 6.6B	See 3GPP TS25.141, Table 6.6B
HS-SCCH	2	4 in total	See 3GPP TS25.141, Table 6.6C	See 3GPP TS25.141, Table 6.6C	See 3GPP TS25.141, Table 6.6C
HS-PDSCH (16QAM)	8/4/2(*)	63.6/63.4/63.2 in total	See 3GPP TS25.141, Table 6.6D	See 3GPP TS25.141, Table 6.6D	See 3GPP TS25.141, Table 6.6D

Table Note \*: 2 HS-PDSCH shall be taken together with 6 DPCH, 4 HS-PDSCH shall be taken with 14 DPCH, and 8 HS-PDSCH shall be taken together with 30 DPCH.

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 5</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 6 (BTS Only)**

3GPP TS25.141, Table 6.6E: Test Model 6 Active Channels

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=128)	30/14/6(*)	27.1 in total	See 3GPP TS25.141, Table 6.6F	See 3GPP TS25.141, Table 6.6F	See 3GPP TS25.141, Table 6.6F
HS-SCCH	2	4 in total	See 3GPP TS25.141, Table 6.6G	See 3GPP TS25.141, Table 6.6G	See 3GPP TS25.141, Table 6.6G

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
HS-PDSCH (64QAM)	8	50.5 in total	See 3GPP TS25.141, Table 6.6H	See 3GPP TS25.141, Table 6.6H	See 3GPP TS25.141, Table 6.6H

This is a front-panel selection only. The SCPI command is given in the section “[Symbol Boundary \(BTS only\)](#)” on page 862.

Key Path	<b>Meas Setup, Symbol Boundary, Test Model 6</b>
Initial S/W Revision	A.03.00

### Custom Active Channel List for BTS (Remote Command Only)

#### Initialize List (Remote Command Only)

Initializes the current custom active channel list. This creates a new entry with the given parameter.

1st parameter:

<symbol\_rate> Specifies symbol rate of the channel.

2nd parameter:

<code\_num> Specifies code number of the channel.

3rd parameter:

QPSK Specifies the channel’s modulation scheme is QPSK.

QAM16 Specifies the channel’s modulation scheme is QAM16.

This choice is available only for channels with symbol rate 240000.

Only when ‘HSPA’ functionality is operative, ‘QAM16’ parameter is allowed.

QAM64 Specifies the channel’s modulation scheme is QAM64.

This choice is available only for channels with symbol rate 240000.

Only when both ‘HSPA’ functionality and ‘HSPA+’ functionality are operative, ‘QAM64’ parameter is allowed.

<b>Remote Command</b>	[ :SENSE] :CDPower :SBOoundary :LIST [ :BTS ] :INIT <symbol_rate>, <code_num>, QPSK QAM16 QAM64
-----------------------	--

Code Domain Measurement  
**Meas Setup**

<p>Example</p>	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- CPICH (C8(0))</li> <li>- P-CCPCH (C8(1))</li> <li>- S-CCPCH(C8(3))</li> <li>- PICH(C8(16))</li> <li>- HS-DPCCH (C4(15)) 16QAM modulated</li> </ul> <p>CDP:SBO:LIST:INIT 15000,0, QPSK  CDP:SBO:LIST:APP 15000,1, QPSK  CDP:SBO:LIST:APP 15000,3, QPSK  CDP:SBO:LIST:APP 15000,16, QPSK  CDP:SBO:LIST:APP 240000,15, QAM16  CDP:SBO:LIST:NCH?  5  CDP:SBO:LIST:CHAN? 1  15000,0, QPSK  CDP:SBO:LIST:CHAN? 2  15000,1, QPSK  CDP:SBO:LIST:CHAN? 3  15000,3, QPSK  CDP:SBO:LIST:CHAN? 4  15000,16, QPSK  CDP:SBO:LIST:CHAN? 5  240000,15, QAM16</p>
<p>Mode</p>	<p>WCDMA</p>



Notes	<p>Error messages associated with this parameter.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 3.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:INIT, 15000, 0</pre> <p>The 3rd parameter is missing.</p> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid. For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:INIT, 15000, ON, QPSK</pre> <p>The 2nd parameter must be integer.</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:INIT 15001, 8, QPSK</pre> <p>1st parameter value (Symbol Rate) is not allowed.</p> <p>Only the values given in Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:INIT 15000, 256, QPSK</pre> <p>The 2nd parameter is out of range.</p> <p>"Setting Conflict"</p> <p>This error is reported if the given code channel overlaps other code channel on code domain.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0) overlaps C8(0).</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:INIT 15000, 0, QPSK</pre> <p>The example above is OK</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:APPend 30000, 0, QPSK</pre> <p>C7(0) overlaps C8(0)</p>
-------	--

Dependencies	(1) This command is effective when [:SENSe]:RADio:DEvice is set to BTS and [:SENSe]:CDPower:SBOundary[:BTS] is set to CUSTom.  (2) QAM16 for the 3rd parameter is available only if HSPA Enable is On. QAM64 for the 3rd parameter is available only if both HSPA Enable and HSPA+ Enable are on.
State Saved	Saved in instrument state.
Range	symbol_rate = 7500 15000 30000 60000 120000 240000 480000 960000 0<= code_num <= 511 if symbol_rate = 7500 0<= code_num <= 255 if symbol_rate = 15000 0<= code_num <= 127 if symbol_rate = 30000 0<= code_num <= 63 if symbol_rate = 60000 0<= code_num <= 31 if symbol_rate = 120000 0<= code_num <= 15 if symbol_rate = 240000 0<= code_num <= 7 if symbol_rate = 480000 0<= code_num <= 3 if symbol_rate = 960000  QAM16 and QAM64 for the 3rd parameter available only for channels with symbol rate 240000. For other channels, specify QPSK.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Append List (Remote Command Only)

Appends the entry on the list of custom active channel list for BTS.

1st parameter:

<symbol\_rate> Specifies symbol rate of the channel.

2nd parameter:

<code\_num> Specifies code number of the channel.

3rd parameter:

QPSK Specifies the channel's modulation scheme is QPSK.

QAM16 Specifies the channel's modulation scheme is QAM16.

This choice is available only for channels with symbol rate 240000.

Only when 'HSPA' functionality is operative, 'QAM16' parameter is allowed.

QAM64 Specifies the channel's modulation scheme is QAM64.

This choice is available only for channels with symbol rate 240000. Only when both 'HSPA' functionality and 'HSPA+' functionality are operative, 'QAM64' is valid to select.

<b>Remote Command</b>	[:SENSE]:CDPower:SBOundary:LIST[:BTS]:APPend <symbol_rate>, <code_num>, QPSK QAM16 QAM64
Example	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- CPICH (C8(0))</li> <li>- P-CCPCH (C8(1))</li> <li>- S-CCPCH(C8(3))</li> <li>- PICH(C8(16))</li> <li>- HS-DPCCH (C4(15)) 16QAM modulated</li> </ul> <pre> CDP:SBO:LIST:INIT 15000,0, QPSK CDP:SBO:LIST:APP 15000,1, QPSK CDP:SBO:LIST:APP 15000,3, QPSK CDP:SBO:LIST:APP 15000,16, QPSK CDP:SBO:LIST:APP 240000,15, QAM16 CDP:SBO:LIST:NCH? 5 CDP:SBO:LIST:CHAN? 1 15000,0, QPSK CDP:SBO:LIST:CHAN? 2 15000,1, QPSK CDP:SBO:LIST:CHAN? 3 15000,3, QPSK CDP:SBO:LIST:CHAN? 4 15000,16, QPSK CDP:SBO:LIST:CHAN? 5 240000,15, QAM16 </pre>
Mode	WCDMA

Notes	<p>The maximum number of entries is 512.</p> <p>Error messages associated with this parameter.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 4.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:APPend, 15000, 0</pre> <p>The 3rd parameter is missing.</p> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:APPend 15000, ON, QPSK</pre> <p>The 2nd parameter must be an integer.</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:APPend, 15001, 8, QPSK</pre> <p>The 1st parameter value (Symbol Rate) is not allowed.</p> <p>Only the values given in Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:APPend 15000, 256, QPSK</pre> <p>The 2nd parameter is out of range.</p> <p>"Setting Conflict"</p> <p>This error is reported if the given code channel overlaps other code channel on code domain.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0) overlaps C8(0).</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:INIT, 15000, 0, QPSK</pre> <p>The example above is OK</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:APPend 30000, 0, QPSK</pre> <p>C7(0) overlaps C8(0)</p>
-------	--

Dependencies	This command is effective when [:SENSe]:RADio:DEVIce is set to BTS and [:SENSe]:CDPower:SBOundary[:BTS] is set to CUSTom.  QAM16 for the 3rd parameter is available only if HSPA Enable is On.  QAM64 for the 3rd parameter is available only if both HSPA Enable and HSPA+ Enable are on.
State Saved	Saved in instrument state.
Range	symbol_rate = 7500 15000 30000 60000 120000 240000 480000 960000 0<= code_num <= 511 if symbol_rate = 7500 0<= code_num <= 255 if symbol_rate = 15000 0<= code_num <= 127 if symbol_rate = 30000 0<= code_num <= 63 if symbol_rate = 60000 0<= code_num <= 31 if symbol_rate = 120000 0<= code_num <= 15 if symbol_rate = 240000 0<= code_num <= 7 if symbol_rate = 480000 0<= code_num <= 3 if symbol_rate = 960000  QAM16 and QAM64 for the 3rd parameter available only for channels with symbol rate 240000. For other channels, specify QPSK.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Replace List (Remote Command Only)

Replaces the entry of the custom active channel list for BTS.

1st parameter:

<entry\_id> Specifies entry ID of the channel to replace.

2nd parameter:

<symbol\_rate> Specifies symbol rate of the channel.

3rd parameter:

<code\_num> Specifies code number of the channel.

4th parameter:

QPSK Specifies the channel's modulation scheme is QPSK.

Code Domain Measurement  
Meas Setup

- QAM16** Specifies the channel's modulation scheme is QAM16.  
This choice is available only for channels with symbol rate 240000.  
Only when 'HSPA' functionality is operative, 'QAM16' parameter is allowed.
- QAM64** Specifies the channel's modulation scheme is QAM64.  
This choice is available only for channels with symbol rate 240000.  
Only when both 'HSPA' functionality and 'HSPA+' functionality are operative, 'QAM64' is valid to select.

<b>Remote Command</b>	[ :SENSE ] :CDPower :SBOundary :LIST [ :BTS ] :REPLace <entry_id>, <symbol_rate>, <code_num>, QPSK QAM16 QAM64
Example	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- CPICH (C8(0))</li> <li>- P-CCPCH (C8(1))</li> <li>- S-CCPCH(C8(3))</li> <li>- PICH(C8(16))</li> <li>- HS-DPCCH (C4(15)) 16QAM modulated</li> </ul> <p>CDP:SBO:LIST:INIT 15000,0, QPSK  CDP:SBO:LIST:APP 15000,1, QPSK  CDP:SBO:LIST:APP 15000,3, QPSK  CDP:SBO:LIST:APP 15000,16, QPSK  CDP:SBO:LIST:APP 240000,15, QAM1</p> <p>And, P-CCPCH(C8(3)) is replaced as following.  CDP:SBO:LIST:REPLA 3,15000,5,QPSK  CDP:SBO:LIST:NCH?  5  CDP:SBO:LIST:CHAN? 1  15000,0, QPSK  CDP:SBO:LIST:CHAN? 2  15000,1, QPSK  CDP:SBO:LIST:CHAN? 3  15000,5, QPSK  CDP:SBO:LIST:CHAN? 4  15000,16, QPSK  CDP:SBO:LIST:CHAN? 5  240000,15, QAM16</p>
Mode	WCDMA

Notes	<p>The maximum number of entries is 512.</p> <p>Error messages associated with this parameter.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 4.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:REPLace 1,15000, 0</pre> <p>The 4th parameter is missing.</p> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:REPLace 1,15000, ON, QPSK</pre> <p>The 3rd parameter must be an integer.</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:REPLace 1,15001, 8, QPSK</pre> <p>The 2nd parameter value (Symbol Rate) is not allowed.</p> <p>Only the values given in Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>"Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:REPLace 1,15000, 256, QPSK</pre> <p>The 3rd parameter is out of range.</p> <p>"Setting Conflict"</p> <p>This error is reported if the given code channel overlaps other code channel on code domain.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0) overlaps C8(0).</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:INIT 15000, 0, QPSK</pre> <p>The example above is OK</p> <pre>:SENSe:CDPower:SBOundary:LIST:BTS:REPLace 1,30000, 0, QPSK</pre> <p>C7(0) overlaps C8(0)</p>
-------	--

Code Domain Measurement  
Meas Setup

Dependencies	<p>This command is effective when [:SENSE]:RADio:DEVice is set to BTS and [:SENSE]:CDPower:SBOundary[:BTS] is set to CUSTom.</p> <p>QAM16 for the 4th parameter is available only if HSPA Enable is On.</p> <p>QAM64 for the 4th parameter is available only if both HSPA Enable and HSPA+ Enable are on.</p>
State Saved	Saved in instrument state.
Range	<p>The entry ID must be:</p> <p>1 &lt;= entry_id &lt;= The number of entries that have been defined. (See REF _Ref197313456 \h -)</p> <p>symbol_rate = 7500 15000 30000 60000 120000 240000 480000 960000</p> <p>0&lt;= code_num &lt;= 511 if symbol_rate = 7500</p> <p>0&lt;= code_num &lt;= 255 if symbol_rate = 15000</p> <p>0&lt;= code_num &lt;= 127 if symbol_rate = 30000</p> <p>0&lt;= code_num &lt;= 63 if symbol_rate = 60000</p> <p>0&lt;= code_num &lt;= 31 if symbol_rate = 120000</p> <p>0&lt;= code_num &lt;= 15 if symbol_rate = 240000</p> <p>0&lt;= code_num &lt;= 7 if symbol_rate = 480000</p> <p>0&lt;= code_num &lt;= 3 if symbol_rate = 960000</p> <p>QAM16and QAM64 for the 4th parameter available only for channels with symbol rate 240000. For other channels, specify QPSK.</p>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Query List (Remote Command Only)**

Returns the entry of the custom active channel list for BTS.

1st parameter:

<entry\_id>            Specifies entry ID of the channel to query.

<b>Remote Command</b>	[:SENSE]:CDPower:SBOundary:LIST[:BTS]:CHANnel?<entry_id>
-----------------------	--



<p>Example</p>	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- CPICH (C8(0))</li> <li>- P-CCPCH (C8(1))</li> <li>- S-CCPCH(C8(3))</li> <li>- PICH(C8(16))</li> <li>- HS-DPCCH (C4(15)) 16QAM modulated</li> </ul> <p>CDP:SBO:LIST:INIT 15000,0, QPSK  CDP:SBO:LIST:APP 15000,1, QPSK  CDP:SBO:LIST:APP 15000,3, QPSK  CDP:SBO:LIST:APP 15000,16, QPSK  CDP:SBO:LIST:APP 240000,15, QAM16  CDP:SBO:LIST:NCH?  5  CDP:SBO:LIST:CHAN? 1  15000,0, QPSK  CDP:SBO:LIST:CHAN? 2  15000,1, QPSK  CDP:SBO:LIST:CHAN? 3  15000,5, QPSK  CDP:SBO:LIST:CHAN? 4  15000,16, QPSK  CDP:SBO:LIST:CHAN? 5  240000,15, QAM16</p>
<p>Mode</p>	<p>WCDMA</p>

Notes	<p>The maximum number of entries is 512.</p> <p>Default value of the parameter</p> <p>By default, there is one channel defined. (CPICH C8(0))</p> <p>In order to query the default entry, specify 1 for &lt;entry_id&gt;: :SENSe:CDPower:SBOundary:LIST:BTS:CHANnel? 1</p> <p>The instrument returns an array of three values: 15000, 0, QPSK</p> <p>Query command needs &lt;entry_id&gt; parameter &lt;entry_id&gt; parameter is always required for query command.</p> <p>The range of the parameter is from 1 to the total number of channels you have defined. For example, if you have defined two channels, you can query them as follows: :SENSe:CDPower:SBOundary:LIST:BTS:CHANnel? 1 :SENSe:CDPower:SBOundary:LIST:BTS:CHANnel? 2</p> <p>If you want to know the number of channels you have defined, send the following query command: :SENSe:CDPower:SBOundary:LIST:BTS:NCHannels?</p>
Dependencies	<p>This command is effective when [:SENSe]:RADio:DEvIce is set to BTS and [:SENSe]:CDPower:SBOundary[:BTS] is set to CUSTom.</p> <p>QAM16 for the 4th parameter is available only if HSPA Enable is On.</p> <p>QAM64 for the 4th parameter is available only if both HSPA Enable and HSPA+ Enable are on.</p>
Preset	15000, 0, QPSK
State Saved	Saved in instrument state.
Range	<p>The entry ID must be:</p> <p>1 &lt;= entry_id &lt;= The number of entries that have been defined. (See REF _Ref197313625 \h -)</p>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Symbol Boundary Custom Active Channel List – The Number Of Entries BTS (Remote Command Only)**

Returns the number of entries in the custom predefined active channel list for BTS.

<b>Remote Command</b>	[:SENSe]:CDPower:SBOundary:LIST[:BTS]:NCHannels?
Example	SENS:CDP:SBO:LIST:BTS:NCH?
Mode	WCDMA

Notes	This command is a query-only command.
Dependencies	This command is effective when [:SENSe]:RADio:DEVice is set to BTS and [:SENSe]:CDPower:SBOundary[:BTS] is set to CUSTom.
Preset	1
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Symbol Boundary Custom Active Channel List – Load Preset Setting BTS (Remote Command Only)

Loads preset setting to the custom active channel list for BTS.

<b>Remote Command</b>	[ :SENSe] :CDPower :SBOundary :LIST [ :BTS] :PRESet TM1D16   TM1D32   TM1D64   TM1D16SC   TM1D32SC   TM1D64SC   TM2   TM2SC   TM3D16   TM3D32   TM3D16SC   TM3D32SC   TM4   TM4CP   TM5H2   TM5H4   TM5H8   TM6H8
Example	SENS:CDP:SBO:LIST:BTS:PRES TM1D64
Mode	WCDMA
Notes	This command is a query-only command.
Dependencies	(1) This command is effective when [:SENSe]:RADio:DEVice is set to BTS and and [:SENSe]:CDPower:SBOundary[:BTS] is set to CUSTom.  (2) TM5H2, TM5H4, TM5H8 parameters are allowed if HSPA Enable is On.  (3)TM6H8 parameter is allowed if HSPA+ Enable is On.
State Saved	No
Range	TM1D16 TM1D32 TM1D64 TM1D16SC TM1D32SC TM1D64SC  TM2 TM2SC TM3D16 TM3D32 TM3D16SC TM3D32SC TM4 TM4CP  TM5H2 TM5H4 TM5H8 TM6H8
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Symbol Boundary (MS only)

Selects the symbol boundary detection mode for MS. Accesses the selection menu for the symbol boundary detection modes to specify active channel detection scheme on uplink.

Auto [SCPI Enum: AUTO] – Sets the symbol boundary detection to the automatic mode. Various code channels are measured and the most appropriate code channel is selected as the reference channel.

Custom [SCPI Enum: CUSTom] –Provides a flexible way to specify predefined active channels. By choosing it, you can specify a customized list of active channels using the following remote commands:

Initialize List, Append List and Replace List.

<b>Remote Command</b>	[ :SENSe] :CDPower :SBOundary :MS AUTO   CUSTom [ :SENSe] :CDPower :SBOundary :MS?
Example	CDP:SBO:MS CUST CDP:SBO:MS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Dependencies	This parameter is effective when [:SENSe]:RADio:DEVIce is set to MS. This menu key is active if “Radio Device” selection is “MS” <b>and</b> “Capture Intvl” is one of “1 slot”, “3 slot”, “1 frame”, “2 frame” and “3 frame”. This menu key is inactive (grayed out) if “Radio Device” selection is “MS” <b>and</b> “Capture Intvl” is either “4 frame” or “8 frame” or “16 frame”. If “Radio Device” selection is “BTS”, different menu key (Symbol Boundary BTS) appears instead of this menu key.
Preset	AUTO
State Saved	Saved in instrument state.
Range	Auto Custom
Initial S/W Revision	Prior to A.02.00

**Symbol Boundary Custom Active Channel List (MS only)**

The following commands handle the list of custom predefined channels for MS.

**Custom Active Channel List for MS (Remote Command Only)**

**Initialize List (Remote Command Only)**

Initializes the current custom active channel list. This creates a new entry with the given parameter.

1st parameter:

<symbol\_rate>      Specifies symbol rate of the channel.

2nd parameter:

<code\_num>          Specifies spreading code of the channel.

3rd parameter:

IPH                    Specifies the channel is on I-axis.

QPH                    Specifies the channel is on Q-axis.

<b>Remote Command</b>	[:SENSE]:CDPower:SBOundary:LIST:MS:INIT <symbol_rate>, <code_num>, IPH QPH
Example	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- DPCCH (C8(0):Q)</li> <li>- DPDCH (C6(16):I)</li> </ul> <p>CDP:SBO:LIST:MS:INIT 15000, 0, QPH  CDP:SBO:LIST:MS:APP 60000, 16, IPH  CDP:SBO:LIST:MS:NCH?  2  CDP:SBO:LIST:MS:CHAN? 1  15000, 0, QPH  CDP:SBO:LIST:MS:CHAN? 2  60000, 16, IPH</p>
Mode	WCDMA

Notes	<p>The maximum number of entries is 512.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 3.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:INIT 15000, 0</pre> <p>The 3rd parameter is missing.</p> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:INIT 15000, ON, QPH</pre> <p>The 2nd parameter must be an integer.</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:INIT 15001, 0, QPH</pre> <p>The 1st parameter value (Symbol Rate) is not allowed.</p> <p>Only the values given in Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:INIT 15000, 256, QPH</pre> <p>The 2nd parameter is out of range.</p> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps other code channel on code domain.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0):Q overlaps C8(0):Q.</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:INIT 15000, 0, QPH</pre> <p>The example above is OK</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:APPend 30000, 0, QPH</pre> <p>C7(0):Q overlaps C8(0):Q</p>
Dependencies	<p>This command is effective if [:SENSe]:RADio:DEVIce is set to MS and [:SENSe]:CDPower:SBOundary:MS is set to CUSTom.</p> <p>Symbol_rate = 1920000 is available if HSPA Enable is On.</p>

State Saved	Saved in instrument state.
Range	symbol_rate = 15000 30000 60000 120000 240000 480000 960000 1920000 0<= code_num <= 255 if symbol_rate = 15000 0<= code_num <= 127 if symbol_rate = 30000 0<= code_num <= 63 if symbol_rate = 60000 0<= code_num <= 31 if symbol_rate = 120000 0<= code_num <= 15 if symbol_rate = 240000 0<= code_num <= 7 if symbol_rate = 480000 0<= code_num <= 3 if symbol_rate = 960000 0<= code_num <= 1 if symbol_rate = 1920000
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Append List (Remote Command Only)**

Appends the entry of the custom active channel list.

1st parameter:

<symbol\_rate>      Specifies symbol rate of the channel.

2nd parameter:

<code\_num>          Specifies spreading code of the channel.

3rd parameter:

IPH                    Specifies the channel is on I-axis.

QPH                    Specifies the channel is on Q-axis.

<b>Remote Command</b>	[ :SENSe] :CDPower:SBoundary:LIST:MS:APPend <symbol_rate>, <code_num>, IPH QPH
-----------------------	---

Code Domain Measurement  
Meas Setup

Example	In order to predefine the following channels: - DPCCH (C8(0):Q) - DPDCH (C6(16):I) CDP:SBO:LIST:MS:INIT 15000, 0, QPH CDP:SBO:LIST:MS:APP 60000, 16, IPH CDP:SBO:LIST:MS:NCH? 2 CDP:SBO:LIST:MS:CHAN? 1 15000, 0, QPH CDP:SBO:LIST:MS:CHAN? 2 60000, 16, IPH
Mode	WCDMA



Notes	<p>The maximum number of entries is 512.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 3.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:APPend 15000, 0</pre> <p>The 3rd parameter is missing.</p> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:APPend 15000, ON, QPH</pre> <p>The 2nd parameter must be an integer.</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:APPend 15001, 0, QPH</pre> <p>The 1st parameter value (Symbol Rate) is not allowed.</p> <p>Only the values given in Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:APPend 15000, 256, QPH</pre> <p>The 2nd parameter is out of range.</p> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps other code channel on code domain.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0):Q overlaps C8(0):Q.</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:INIT 15000, 0, QPH</pre> <p>The example above is OK</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:APPend 30000, 0, QPH</pre> <p>C7(0):Q overlaps C8(0):Q</p>
Dependencies	<p>This command is effective if [:SENSe]:RADio:DEVice is set to MS and [:SENSe]:CDPower:SBOundary:MS is set to CUSTom.</p> <p>Symbol_rate = 1920000 is available if HSPA Enable is On.</p>

Code Domain Measurement  
Meas Setup

State Saved	Saved in instrument state.
Range	symbol_rate = 15000 30000 60000 120000 240000 480000 960000 1920000 0<= code_num <= 255 if symbol_rate = 15000 0<= code_num <= 127 if symbol_rate = 30000 0<= code_num <= 63 if symbol_rate = 60000 0<= code_num <= 31 if symbol_rate = 120000 0<= code_num <= 15 if symbol_rate = 240000 0<= code_num <= 7 if symbol_rate = 480000 0<= code_num <= 3 if symbol_rate = 960000 0<= code_num <= 1 if symbol_rate = 1920000
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Replace List (Remote Command Only)**

Replaces the entry of the custom active channel list.

1st parameter:

<entry\_id>            Specifies entry ID of the channel to replace.

2nd parameter:

<symbol\_rate>        Specifies symbol rate of the channel.

3rd parameter:

<code\_num>            Specifies spreading code of the channel.

4th parameter:

IPH                    Specifies the channel is on I-axis.

QPH                    Specifies the channel is on Q-axis.

<b>Remote Command</b>	[ :SENSe] :CDPower :SBOundary :LIST :MS :REPLace <entry_id>, <symbol_rate>, <code_num>, IPH QPH
-----------------------	--

Example	In order to predefine the following channels: - DPCCH (C8(0):Q) - DPDCH (C6(16):I) CDP:SBO:LIST:MS:INIT 15000, 0, QPH CDP:SBO:LIST:MS:APP 60000, 16, IPH CDP:SBO:LIST:MS:NCH? 2 And, replace 2nd entry. CDP:SBO:LIST:MS:REPL 2, 60000,17,QPH CDP:SBO:LIST:MS:CHAN? 1 15000, 0, QPH CDP:SBO:LIST:MS:CHAN? 2 60000, 17, IPH
Mode	WCDMA

Notes	<p>The maximum number of entries is 512.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 4.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:REPLace 1,15000, 0</pre> <p>The 4th parameter is missing.</p> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS: REPLace 1,15000, ON, QPH</pre> <p>The 3rd parameter must be an integer.</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:REPLace 1,15001, 0, QPH</pre> <p>The 2nd parameter value (Symbol Rate) is not allowed.</p> <p>Only the values given in Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:APPend 15000, 256, QPH</pre> <p>The 3rd parameter is out of range.</p> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps other code channel on code domain.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0):Q overlaps C8(0):Q.</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS:INIT 15000, 0, QPH</pre> <p>The example above is OK</p> <pre>:SENSe:CDPower:SBOundary:LIST:MS: REPLace 1,30000, 0, QPH</pre> <p>C7(0):Q overlaps C8(0):Q</p>
Dependencies	<p>This command is effective if [:SENSe]:RADio:DEVIce is set to MS and [:SENSe]:CDPower:SBOundary:MS is set to CUSTom.</p> <p>Symbol_rate = 1920000 is available if HSPA Enable is On.</p>

State Saved	Saved in instrument state.
Range	<p>The entry ID must be:</p> <p>1 &lt;= entry_id &lt;= The number of entries that have been defined. (See REF _Ref197313705 \h -)</p> <p>symbol_rate = 15000 30000 60000 120000 240000 480000 960000 1920000</p> <p>0&lt;= code_num &lt;= 255 if symbol_rate = 15000</p> <p>0&lt;= code_num &lt;= 127 if symbol_rate = 30000</p> <p>0&lt;= code_num &lt;= 63 if symbol_rate = 60000</p> <p>0&lt;= code_num &lt;= 31 if symbol_rate = 120000</p> <p>0&lt;= code_num &lt;= 15 if symbol_rate = 240000</p> <p>0&lt;= code_num &lt;= 7 if symbol_rate = 480000</p> <p>0&lt;= code_num &lt;= 3 if symbol_rate = 960000</p> <p>0&lt;= code_num &lt;= 1 if symbol_rate = 1920000</p>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

#### Query List (Remote Command Only)

Returns the entry of the custom active channel list.

1st parameter:

<entry\_id>            Specifies entry ID of the channel to query

<b>Remote Command</b>	[ :SENSe] :CDPower:SBOundary:LIST:MS:CHANnel? <entry_id>
Example	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- DPCCH (C8(0):Q)</li> <li>- DPDCH (C6(16):I)</li> </ul> <p>CDP:SBO:LIST:MS:INIT 15000, 0, QPH</p> <p>CDP:SBO:LIST:MS:APP 60000, 16, IPH</p> <p>CDP:SBO:LIST:MS:NCH?</p> <p>2</p> <p>CDP:SBO:LIST:MS:CHAN? 1</p> <p>15000, 0, QPH</p> <p>CDP:SBO:LIST:MS:CHAN? 2</p> <p>60000, 16, IPH</p>
Mode	WCDMA

Notes	<p>The maximum number of entries is 512.</p> <p>Default value of the parameter</p> <p>By default, there is one channel defined. (DPCCH C8(0):Q)</p> <p>In order to query the default entry, specify 1 for &lt;entry_id&gt;: :SENSe:CDPower:SBOundary:LIST:MS:CHANnel? 1</p> <p>The instrument returns an array of three values: 15000, 0, QPH</p> <p>Query command needs &lt;entry_id&gt; parameter</p> <p>&lt;entry_id&gt; parameter is always required for query command.</p> <p>The range of the parameter is from 1 to the total number of channels you have defined. For example, if you have defined two channels, you can query them as follows: :SENSe:CDPower:SBOundary:LIST:MS:CHANnel? 1 :SENSe:CDPower:SBOundary:LIST:MS:CHANnel? 2</p> <p>If you want to know the number of channels you have defined, send the following query command: :SENSe:CDPower:SBOundary:LIST:NCHannels:MS?</p>
Dependencies	<p>This command is effective if [:SENSe]:RADio:DEvIce is set to MS and [:SENSe]:CDPower:SBOundary:MS is set to CUSTom.</p> <p>Symbol_rate = 1920000 is available if HSPA Enable is On.</p>
Preset	15000, 0, QPH
State Saved	Saved in instrument state.
Range	<p>The entry ID must be:</p> <p>1 &lt;= entry_id &lt;= The number of entries that have been defined. (See <a href="#">“Custom Active Channel List for MS (Remote Command Only)”</a> on page 888)</p>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Symbol Boundary Custom Active Channel List – The Number of Entries (MS only)

Returns the number of entries in the custom predefined active channel list MS.

<b>Remote Command</b>	[ :SENSe ] :CDPower :SBOundary :LIST :MS :NCHannels?
Example	SENS:CDP:SBO:LIST:MS:NCH?
Mode	WCDMA
Notes	This command is a query-only command.
Dependencies	This command is effective when [:SENSe]:RADio:DEvIce is set to MS and [:SENSe]:CDPower:SBOundary:MS is set to CUSTom.

Preset	1
State Saved	No
Initial S/W Revision	Prior to A.02.00

## Capture Interval

Accesses the Capture Interval menu that enables you to set the signal capture length for a code domain power measurement.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

<b>Remote Command</b>	[ :SENSE] :CDPower :CAPture :TIME [ :FRAME] <real> [ :SENSE] :CDPower :CAPture :TIME [ :FRAME] ?
Example	CDP:CAPT:TIME 1 CDP:CAPT:TIME?
Mode	WCDMA
Preset	1
State Saved	Saved in instrument state.
Range	0.067 (any value below 1 is rounded to the nearest multiple of 0.067), 1.0, 2.0, 3.0, 4.0 and 8.0 and 16.0 frames (0.67 to 80 ms; 1/15 frame equals 1 slot). Other numeric values between 1 and 16 are rounded to the nearest integer; entries between integers are rounded up, excepting for entries above 16, which are rounded down to 16.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Meas Setup, Capture Interval</b>
Mode	WCDMA
Couplings	Changing this parameter forces a change 1 slot: 0.067 3 slots: 0.2 1 frame: 1.0 2 frames: 2.0 3 frames: 3.0 4 frames: 4.0 8 frames: 8.0 16 frames: 16.0

Code Domain Measurement  
**Meas Setup**

Preset	1 frame
State Saved	Saved in instrument state.
Range	1 slot 3 slots 1 frame 2 frames 3 frames 4 frames 8 frames 16 frames
Readback Text	1 slot   3 slots   1 frame   2 frames   3 frames   4 frames (Long Mode)   8 frames (Long Mode)   16 frames (Long Mode)
Initial S/W Revision	Prior to A.02.00

### Symbol Analysis

Accesses the Symbol Analysis Menus.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

### tDPCH (BTS Only)

Toggles between Auto and Man mode. When manual is selected, tDPCH value can be set. When AUTO is selected, tDPCH value is shown as "---". tDPCH specifies chip offset (1 unit = 256 chips) of DPCH slot #0 start point from CPICH slot #0 start position. tDPCH value affects the measurement results such as Symbol EVM (RMS, Peak), Symbol Magnitude Error, Symbol Phase Error, and Channel Power (Average Power). In this case, only (tDPCH mod 10) is concerned. This is the offset from CPICH slot boundary to DPCH slot boundary.

When input manually, this value is not checked by verifying the pilot pattern.

This value is set at its auto number and “---“ is replaced with the detected number, if Time Offset detection Auto mode is set to ON and tDPCH is detected successfully. Otherwise the value is not changed.

<b>Remote Command</b>	:CALCulate:CDPower:TDPCh <integer> :CALCulate:CDPower:TDPCh? :CALCulate:CDPower:TDPCh:AUTO OFF ON 0 1 :CALCulate:CDPower:TDPCh:AUTO?
-----------------------	---



Example	CALC:CDP:TDPC 10 CALC:CDP:TDPC? CALC:CDP:TDPC:AUTO ON CALC:CDP:TDPC:AUTO?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Notes	Sets tDPCH value manually, when :CALCulate:CDPower:TDPCh:AUTO is OFF. This value is set at its auto number if Time Offset detection Auto mode is set to ON.  OFF – tDPCH can manually be set by :CALCulate:CDPower:TDPCh.  ON – tDPCH is given automatically as a result of measurement for the specified Code Channel.
Preset	0 ON
State Saved	Saved in instrument state.
Min	0
Max	149
Initial S/W Revision	Prior to A.02.00

### tHS-DPCCH (MS only)

Uplink HS-DPCCH's slots are not aligned with DPCCH slots. Therefore, to analyze its Symbol EVM and Demod Bits correctly, you need to manually specify the slot offset of the HS-DPCCH.

Only manual setting is possible. The Auto-detection function is not supported.

<b>Remote Command</b>	:CALCulate:CDPower:THSDpcch <integer> :CALCulate:CDPower:THSDpcch?
Example	CALC:CDP:THSD 35 CALC:CDP:THSD?
Key Path	<b>Meas Setup, Symbol Analysis</b>
Mode	WCDMA
Notes	Auto detection of the tHS-DPCCH is not supported.
Preset	0
State Saved	Saved in instrument state.
Min	0
Max	250

Code Domain Measurement  
**Meas Setup**

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**DTX/Burst Detect**

For downlink signals, enables you to detect the power burst, for either “CM” (Compressed Mode) or “DTX”. In Compressed Mode, both I and Q symbol power is off. In DTX, one of the I or Q symbol power (or both) can be off.

For uplink signals, allows you to detect the HS-DPCCH burst, which the sub-frame does not align with the DPCCH slot boundary.

<b>Remote Command</b>	:CALCulate:CDPower:DTXBurst 0 1 OFF ON :CALCulate:CDPower:DTXBurst?
Example	CALC:CDP:DTXB ON CALC:CDP:DTXB?
Key Path	<b>Meas Setup, Symbol Analysis</b>
Mode	WCDMA
Notes	If HSPA option is enabled, this parameter is active and effective for both uplink and downlink. If HSPA option is disabled, this parameter is active and effective only for downlink.
Preset	OFF
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Tx Diversity I/Q Axis Rotation**

Sets the rotation of the I/Q Axis.

<b>Remote Command</b>	:CALCulate:CDPower:IQPHase:ROTation <real> :CALCulate:CDPower:IQPHase:ROTation?
Example	CALC:CDP:IQPH:ROT 0.0 CALC:CDP:IQPH:ROT?
Key Path	<b>Meas Setup, Symbol Analysis</b>
Mode	WCDMA
Notes	Input value is as follows. -135.0 =< Input-Value =< +180.0 The input value is rounded to the nearest value in the following. 0 +45 +90 +135 +180 +225(= -135) +270(= -90) +315(= -45)

Preset	0.0
State Saved	Saved in instrument state.
Min	-135.0
Max	180.0
Initial S/W Revision	Prior to A.02.00

## Sync Start Slot

Toggles the Sync Start Slot state On or Off. Turning the Sync Start Slot parameter On and specifying the slot number to measure as the first slot, you can use any trigger (even “Free Run”) to get the measurement result beginning with the specified slot number.

### Example 1:

Trigger Source: Free Run (Immediate)

Sync Start Slot state : On

Sync Start Slot number : 0

Capture Interval : 1 frame

The synchronization always starts from slot number 0.0 to 15.0 regardless of the trigger type.

### Example 2

If the Sync Start Slot state is set to Off, the measurement performs synchronization at any slot found right after the trigger timing.

<b>Remote Command</b>	<pre>[ :SENSe] :CDPower :SSLot :NUMBer &lt;integer&gt; [ :SENSe] :CDPower :SSLot :NUMBer? [ :SENSe] :CDPower :SSLot [ :STATe] OFF   ON   0   1 [ :SENSe] :CDPower :SSLot [ :STATe] ?</pre>
Example	<pre>SENS:CDP:SSL:NUMB 5 SENS:CDP:SSL:NUMB? SENS:CDP:SSL:STAT ON SENS:CDP:SSL:STAT?</pre>
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	Turn first slot number detection mode on or off.
Dependencies	The menu key is grayed out if device is MS and Sync Type is PRACH Message.

Code Domain Measurement  
**Meas Setup**

Preset	0 OFF
State Saved	Saved in instrument state.
Range	0 to 14
Initial S/W Revision	Prior to A.02.00

## Spectrum

Toggles the spectrum function between Normal and Invert.

Invert: This function conjugates the spectrum, which is equivalent to taking the negative of the quadrature component in demodulation.

The correct setting (Normal or Invert) depends on whether the signal at the input of the instrument has a high or low side mix.

<b>Remote Command</b>	[ :SENSE]:CDPower:SPECTrum INVert NORMal [ :SENSE]:CDPower:SPECTrum?
Example	CDP:SPEC INV CDP:SPEC?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Preset	NORMal
State Saved	Saved in instrument state.
Range	Normal Invert
Initial S/W Revision	Prior to A.02.00

## Meas Preset

Restores all the measurement parameters to their default values.

<b>Remote Command</b>	:CONFIgure:CDPower
Example	CONF:CDP
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Couplings	Selecting Restore Measurement Defaults restores all measurement parameters to their default values.
Initial S/W Revision	Prior to A.02.00

## Advanced

Accesses a menu of functions that enable you to set up more specific parameters for the measurement.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

### Active Set Threshold

Toggles the active channel identification function between Auto and Man. If set to Auto, the active channels are determined automatically by the internal algorithm. If set to Man, the active channel identification is determined by a user definable threshold ranging from 0.00 to –100.00 dB.

<b>Remote Command</b>	:CALCulate:CDPower:ASET:THReshold <real> :CALCulate:CDPower:ASET:THReshold? :CALCulate:CDPower:ASET:THReshold:AUTO OFF ON 0 1 :CALCulate:CDPower:ASET:THReshold:AUTO?
Example	CALC:CDP:ASET:THR –50.0 CALC:CDP:ASET:THR? CALC:CDP:ASET:THR:AUTO ON CALC:CDP:ASET:THR:AUTO?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	Turn the automatic mode On or Off, for the active channel identification function.  OFF – The active channel identification for each code channel is determined by a value set by CALCulate:CDPower:ASET:THReshold. ON – The internal algorithm determines the active channels automatically.
Dependencies	BTS: This command is effective when “ <a href="#">Symbol Boundary (BTS only)</a> ” on <a href="#">page 862</a> is set to AUTO. MS: This command is always effective.
Preset	0.0 ON
State Saved	Saved in instrument state.
Min	–100.0
Max	0.0
Initial S/W Revision	Prior to A.02.00

### RRC Filter Control

Allows you to change the status (ON/OFF) of the Root Raised Cosine (RRC) filter. This ON/OFF state change requires a measurement restart.

<b>Remote Command</b>	[ :SENSe] :CDPower:FILTer [:RRC] [:STATe] OFF ON 0 1 [ :SENSe] :CDPower:FILTer [:RRC] [:STATe] ?
Example	CDP:FILT ON CDP:FILT?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Filter Alpha

Specifies the alpha value of the Root Raised Cosine (RRC) filter.

<b>Remote Command</b>	[ :SENSe] :CDPower:FILTer:ALPHa <real> [ :SENSe] :CDPower:FILTer:ALPHa?
Example	CDP:FILT:ALPH 0.3 CDP:FILT:ALPH?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	0.22
State Saved	Saved in instrument state.
Min	0.01
Max	0.50
Initial S/W Revision	Prior to A.02.00

### Chip Rate

Changes the chip rate.

<b>Remote Command</b>	[ :SENSe] :CDPower:CRATe <freq> [ :SENSe] :CDPower:CRATe?
-----------------------	--

Example	CDP:CRAT 4000000 CDP:CRAT?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	3.84 MHz
State Saved	Saved in instrument state.
Min	3.456 MHz
Max	4.224 MHz
Initial S/W Revision	Prior to A.02.00

### IF Gain

Enables you to control an internally switched IF amplifier with approximately 10 dB of gain. When it can be turned on without an overload, the dynamic range is always better with the amplifier on than off. The **IF Gain** key can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

Key Path	<b>Meas Setup, Advanced</b>
Initial S/W Revision	Prior to A.02.00

### IF Gain Auto

Activates the auto rules for IF Gain.

<b>Remote Command</b>	[ :SENSE ] :CDPower : IF : GAIN : AUTO [ : STATE ] OFF   ON   0   1 [ :SENSE ] :CDPower : IF : GAIN : AUTO [ : STATE ] ?
Example	CDP:IF:GAIN:AUTO ON CDP:IF:GAIN:AUTO?
Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Mode	WCDMA
Notes	This only applies to the RF input. It does not apply to baseband I/Q input.

Couplings	When either Auto Attenuation is active (for example, with electrical attenuator), or the Optimize Mechanical Attenuator range is requested, the IF Gain setting is changed according to the following rules.  'auto' sets IF Gain to 'High Gain' under any of the following conditions: The input attenuator is set to 0 dB, <b>or</b> , The preamp is turned on, <b>or</b> , The Max Mixer Level is 20 dBm or lower. For other settings, 'auto' sets IF Gain to 'Low Gain'.
Preset	OFF
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### IF Gain State

Selects the range of IF gain.

<b>Remote Command</b>	[ :SENSE]:CDPower:IF:GAIN[:STATE] ON OFF 1 0 [ :SENSE]:CDPower:IF:GAIN[:STATE]?
Example	CDP:IF:GAIN ON CDP:IF:GAIN?
Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Mode	WCDMA
Notes	This only applies to the RF input. It does not apply to baseband I/Q input.
Couplings	When either Auto Attenuation is active (for example, with electrical attenuator), or the Optimize Mechanical Attenuator range is requested, the IF Gain setting is changed according to the following rules.  'auto' sets IF Gain 'High Gain' under any of the following conditions: The input attenuator is set to 0 dB, <b>or</b> , The preamp is turned on, <b>or</b> , The Max Mixer Level is 20 dBm or lower. For other settings, auto sets IF Gain to 'Low Gain'. (ON = high gain, OFF = low gain)
Preset	OFF
State Saved	Saved in instrument state.
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)



Readback Text	Low Gain High Gain
Initial S/W Revision	Prior to A.02.00

### Multi Channel Estimator

Toggles the multi channel estimator function by MMSE between On and Off.

- On: The individual code channels are aligned to the pilot channel to improve the phase error (whether each code phase is aligned or not). This takes a longer time.
- Off: The phase information is computed from one coded signal only. (The phase of each code channel needs to be aligned to the pilot channel.)

<b>Remote Command</b>	[ :SENSE ] :CDPower:MCEstimator OFF ON 0 1 [ :SENSE ] :CDPower:MCEstimator?
Example	CDP:MCES ON CDP:MCES?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Timing Estimation

Selects timing estimation function by MMSE between channel-by-channel and global.

- Channel-by-Channel - The code channels are estimated using individual channel timing. This takes a longer time.
- Global: The individual code channels are estimated using global timing.

<b>Remote Command</b>	[ :SENSE ] :CDPower:MCEstimator:TIMing CHANnel GLOBal [ :SENSE ] :CDPower:MCEstimator:TIMing?
Example	CDP:MCES:TIM GLOB CDP:MCES:TIM?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Dependencies	Only when Multi Channel Estimator is ON, this parameter is valid. When Multi Channel Estimator is OFF, it forces to change to GLOBAL and MUI(Menu key) is grayed out

Preset	GLOBal
State Saved	Saved in instrument state.
Range	Ch-by-Ch Global
Initial S/W Revision	Prior to A.02.00

### Frequency Error Tolerance Range

Specifies the frequency error tolerance range. You can select one of the following ranges:

- Normal
- Wide

**Wide** provides the wide range of the frequency error tolerance. To correctly demodulate signals of higher complexity, a reduced frequency tolerance is required. For example, composite number of channels is modulated on the test signal, the modulation is complex, and frequency error is very critical to demodulate correctly. Therefore, in such a case, to demodulate a complex signal, set this parameter to **Normal**.

This parameter is valid only when the device type is MS (Uplink). When BTS (Downlink), front panel key is disabled (grayed out).

<b>Remote Command</b>	[ :SENSE] :CDPower:FERRor:TRANge WIDE NORMal [ :SENSE] :CDPower:FERRor:TRANge?
Example	CDP:FERR:TRAN WIDE CDP:FERR:TRAN?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Dependencies	This parameter is valid only when the device type is MS (Uplink). When BTS (Downlink), front panel key is disabled (grayed out).
Preset	NORMal
State Saved	Saved in instrument state.
Range	Normal Wide
Initial S/W Revision	Prior to A.02.00

### Symbol EVM Compensation

Enables you to select a parameter to optimize the Symbol EVM measurement results.

Key Path	<b>Meas Setup, Advanced</b>
Initial S/W Revision	Prior to A.02.00

**Frequency Compensation**

Toggles the setting of the frequency compensation to calculate the symbol EVM.

<b>Remote Command</b>	:CALCulate:CDPower:SEVM:FCOMpen ON OFF 1 0 :CALCulate:CDPower:SEVM:FCOMpen?
Example	CALC:CDP:SEVM:FCOM ON CALC:CDP:SEVM:FCOM?
Key Path	<b>Meas Setup, Advanced, Symbol EVM Compensation</b>
Mode	WCDMA
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

**Phase Compensation**

Toggles the setting of the phase compensation to calculate the symbol EVM.

<b>Remote Command</b>	:CALCulate:CDPower:SEVM:PCOMpen ON OFF 1 0 :CALCulate:CDPower:SEVM:PCOMpen?
Example	CALC:CDP:SEVM:PCOM ON CALC:CDP:SEVM:PCOM?
Key Path	<b>Meas Setup, Advanced, Symbol EVM Compensation</b>
Mode	WCDMA
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

**PICH Code Number**

Specifies the code number of PICH (Paging Indicator Channel), which has the DTX (no transmission) part. PICH has 300 bits in 1 radio frame, but last 12 bits are not transmitted. Therefore, PICH needs the special handling to measure the code domain power. PICH Code Number specifies which code channel should be considered as PICH.

<b>Remote Command</b>	[ :SENSE ] :CDPower:PICH:SPRead <integer> [ :SENSE ] :CDPower:PICH:SPRead?
-----------------------	---

Code Domain Measurement  
**Meas Setup**

Example	CDP:PICH:SPR 5 CDP:PICH:SPR?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Notes	If PICH Code Number and MICH Code Number are the same, the channel is considered as PICH.  This parameter is meaningful only if Symbol Boundary setting is Auto.
Dependencies	This parameter is active for BTS. It is grayed out for MS.
Preset	16
State Saved	Saved in instrument state.
Min	2
Max	255
Initial S/W Revision	Prior to A.02.00

**MICH Code Number**

Specifies the code number of MICH (MBMS Indicator channel), which has the DTX (no transmission) part. MICH has 300 bits in 1 radio frame, but last 6 symbols (12 bits) are not transmitted. Therefore, MICH needs the special handling to measure the code domain power. MICH Code Number specifies which code channel should be considered as MICH.

Since MICH is optional channel, the parameter has BAF setting (On|Off).

<b>Remote Command</b>	[ :SENSe ] :CDPower:MICH:SPRead <integer> [ :SENSe ] :CDPower:MICH:SPRead? [ :SENSe ] :CDPower:MICH:STATe OFF ON 0 1 [ :SENSe ] :CDPower:MICH:STATe?
Example	SENS:CDP:MICH:SPR 4 SENS:CDP:MICH:SPR? SENS:CDP:MICH:STAT ON SENS:CDP:MICH:STAT?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Notes	If PICH Code Number and MICH Code Number are the same, the channel is considered as PICH.  This parameter is meaningful only if Symbol Boundary setting is Auto.  This parameter enables or disables MICH code number setting.
Dependencies	This parameter is active for BTS. It is grayed out for MS.

Preset	2 OFF
State Saved	Saved in instrument state.
Range	2 to 255
Initial S/W Revision	Prior to A.02.00

### SCH Suppression

Subtracts the primary and secondary SCH power leakage from other code channels during the demodulation process in the instrument. This improves symbol EVM, magnitude error and phase error measurement accuracy. Downlink channels with low coding gain can suffer interference of primary and secondary SCH, because they are not orthogonal with other code channels. To correct this, the P-SCH and S-SCH power are calculated in the estimation (“Best Fitting”) using MMSE, then they are subtracted from incoming signal before any other channels are demodulated.

<b>Remote Command</b>	:CALCulate:CDPower:SSUPpress[:STATe] ON OFF 1 0 :CALCulate:CDPower:SSUPpress[:STATe] ?
Example	CALC:CDP:SSUP ON CALC:CDP:SSUP?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Packed Mode (Remote Command Only)

Selects the packed mode for Demod bits in SCPI result (of READ:CDP12).

OFF: Demod Bits are not packed. (1.0:“1”, 0.0:“0”, -1.0:“X”)

PKM1: Demod Bits per symbol is packed into 1 float value in bit-slice manner as follows:

64QAM(No DTX)	Float value 0.....X5X4X3X2X1X0 (X5:I1, X4:Q1, X3:I2, X2:Q2, X1:I3, X0:Q3)
16QAM(No DTX)	Float value 0.....0X3X2X1X0 (X3:I1, X2:Q1, X1:I2, X0:Q2)
QPSK(With DTX)	Float value 0.....0M1M0B1B01
4PAM (No DTX)	Float value 0.....0 I1 I2 Q1 Q2

Code Domain Measurement  
**Meas Setup**

4PAM on I branch and BPSK on Q branch (No DTX)	Float value 0.....0 I1 I2 0 Q
BPSK on I branch and 4PAM on Q branch (No DTX)	Float value 0.....0 0 I Q1 Q2

Table Note 1: The meaning of each bit is

- M1:Mask for B1 (1:DTX, 0:Normal)
- M0:Mask for B0, and B1:I, B0:Q)

---

**NOTE** Packed Mode is only available via the SCPI command, and changing Packed Mode does not bring any change on the results of Front panel display. It only controls the result format of READ(MEAS/FETCH/CONF):CDP12.

---

<b>Remote Command</b>	:CALCulate:CDPower:PACKed OFF   PKM1 :CALCulate:CDPower:PACKed?
Example	CALC:CDP:PACK OFF CALC:CDP:PACK?
Mode	WCDMA
Preset	OFF
State Saved	Saved in instrument state.
Range	OFF PKM1
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

---

## **Mode**

Operation of this key is identical across all measurements in this application. For details about this key, see [“Mode” on page 1635](#).

## **Mode Setup**

Operation of this key is identical across all measurements in this application. For details, see [“Mode Setup” on page 1651](#).



---

## Peak Search

Accesses a menu that enables you to control the peak search function and places a marker on the trace point with highest peak.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example	CALC:CDP:MARK2:MAX
Key Path	Front panel key
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## Next Peak

Moves the selected marker to the peak that has the next highest amplitude less than the marker's current value.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT
Example	CALC:CDP:MARK2:MAX:NEXT
Key Path	<b>Peak Search</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## Next Pk Right

Moves the selected marker to the nearest peak right of the current marker that meets all enabled peak criteria.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT
Example	CALC:CDP:MARK2:MAX:RIGH
Key Path	<b>Peak Search</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## Next Pk Left

Moves the selected marker to the nearest peak left of the current marker that meets all enabled peak

criteria.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT
Example	CALC:CDP:MARK2:MAX:LEFT
Key Path	<b>Peak Search</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## Marker Delta

Sets the control mode for the selected marker to **Delta** mode.

Key Path	<b>Peak Search</b>
Initial S/W Revision	Prior to A.02.00

## Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest y-axis value.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak
Example	CALC:CDP:MARK:PTP
Key Path	<b>Peak Search</b>
Mode	WCDMA
Notes	Turns on the Marker active function.
Dependencies	This key is not available (grayed out) when <a href="#">Couple Markers</a> is on.
Initial S/W Revision	Prior to A.02.00

## Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

<b>Remote Command</b>	:CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum
Example	CALC:CDP:MARK:MIN
Key Path	<b>Peak Search</b>
Mode	WCDMA

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## **Recall**

Operation of this key is identical across all measurements. For details about this key, see [“Recall” on page 189](#).

---

## **Restart**

Operation of this key is identical across all measurements. For details about this key, see [“Restart” on page 1671](#).

## **Save**

Operation of this key is identical across all measurements. For details about this key, see [“Save” on page 205](#).

## **Single (Single Measurement/Sweep)**

Operation of this key is identical across all measurements. For details about this key, see [“Single \(Single Measurement/Sweep\)”](#) on page 1677.

## **Source**

Operation of this key is identical across all measurements. For details about this key, see [“Source” on page 1679](#).



## SPAN X Scale

Accesses a menu of functions that enable you to set the desired horizontal scale parameters.

This menu is not available when the Metrics window or I/Q Symbol Polar Vector window is selected, and appears blank. The SPAN X Scale for Power Bar Graph and CDE Graph functions are coupled to each other.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## Start Code Number

Sets the start value of the code range for the code domain power graph (CDP).

<b>Remote Command</b>	:DISPlay:CDPower:CDOMain:SPAN:STARt <integer> :DISPlay:CDPower:CDOMain:SPAN:STARt?
Example	DISP:CDP:CDOM:SPAN:STAR 5 DISP:CDP:CDOM:SPAN:STAR?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Default value is device sensitive: BTS: 448 MS: 192
Couplings	“Start Code Number” on page 925 and “Stop Code Number” on page 926 are coupled to each other, according to: (A) Stop Code Number > Start Code Number and (B) Stop Code Number – Start Code Number >= 63 When changing the start code number, if it does not satisfy the above conditions, the stop code number is changed to satisfy (A) and (C). (C) Stop Code Number – Start Code Number = 63.
Preset	0
State Saved	Saved in instrument state.
Min	0
Max	448
Initial S/W Revision	Prior to A.02.00

## Stop Code Number

Sets the stop value of the code range for the code domain power graph (CDP).

<b>Remote Command</b>	:DISPlay:CDPower:CDOMain:SPAN:STOP <integer> :DISPlay:CDPower:CDOMain:SPAN:STOP?
Example	DISP:CDP:CDOMain:SPAN:STOP 256 DISP:CDP:CDOMain:SPAN:STOP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Default value is device sensitive: BTS: 511 MS: 255
Couplings	“ <a href="#">Start Code Number</a> ” on page 925 and Stop Code Number are coupled to each other, according to:  (A) Stop Code Number > Start Code Number and (B) Stop Code Number – Start Code Number >= 63  When changing the stop code number, if it does not satisfy the above, the start code number is changed to satisfy (A) and (C).  (C) Stop Code Number – Start Code Number = 63.
Preset	511
State Saved	Saved in instrument state.
Min	63
Max	511
Initial S/W Revision	Prior to A.02.00

## Expand

Toggles the expanding function of the code domain power graph between On and Off. If set to On, the CDP graph is expanded horizontally to show 64 spread codes centered at the scale or the marker position. If toggled back to Off, the spread code range returns to the previous setting.

Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Valid only for CDP (Power Bar) and CDE Graph window. No SCPI
Preset	Off

State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

## X Ref Value

Controls the reference value of the X scale of the current measurement in the I/Q Error window.

Key Path	<b>Span X Scale</b>
Initial S/W Revision	Prior to A.02.00

## I/Q Error View Mag Error Window X Ref Value

Sets the symbol reference value on the horizontal axis in the magnitude error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RLEVel ?
Example	DISP:CDP:VIEW3:WIND:TRAC:X:RLEV 10.0 DISP:CDP:VIEW3:WIND:TRAC:X:RLEV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.000
State Saved	Saved in instrument state.
Min	0
Max	5000000.0
Initial S/W Revision	Prior to A.02.00

**I/Q Error View Phase Error Window X Ref Value**

Sets the symbol reference value on the horizontal axis in the phase error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALE]:RLEVel <real>  :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALE]:RLEVel?
Example	DISP:CDP:VIEW3:WIND2:TRAC:X:RLEV 10.0 DISP:CDP:VIEW3:WIND2:TRAC:X:RLEV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Dependencies	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.000
State Saved	Saved in instrument state.
Min	0
Max	5000000.0
Initial S/W Revision	Prior to A.02.00

**I/Q Error View Evm Window X Ref Value**

Sets the symbol reference value on the horizontal axis in the EVM view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:RLEVel <real>  :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:RLEVel?
Example	DISP:CDP:VIEW3:WIND3:TRAC:X:RLEV 10.0 DISP:CDP:VIEW3:WIND3:TRAC:X:RLEV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.000
State Saved	Saved in instrument state.

Min	0
Max	5000000.0
Initial S/W Revision	Prior to A.02.00

### Code Domain View Symb Power Window X Ref Value

Sets the symbol reference value on the horizontal axis of the symbol power view in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RLEVel?
Example	DISP:CDP:VIEW4:WIND2:TRAC:X:RLEV 10.0 DISP:CDP:VIEW4:WIND2:TRAC:X:RLEV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.000
State Saved	Saved in instrument state.
Min	0
Max	5000000.0
Initial S/W Revision	Prior to A.02.00

### Demod Bits View Symb Power Window X Ref Value

Sets the symbol reference value on the horizontal axis for the symbol power view using the Demod Bits function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RLEVel?
Example	DISP:CDP:VIEW5:WIND2:TRAC:X:RLEV 10.0 DISP:CDP:VIEW5:WIND2:TRAC:X:RLEV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.

Code Domain Measurement  
**SPAN X Scale**

Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.000
State Saved	Saved in instrument state.
Min	0
Max	5000000.0
Initial S/W Revision	Prior to A.02.00

**Long Demod View Symb Power Window X Ref Value**

Sets the symbol reference value on the horizontal axis for the symbol power view using the Demod Bits function (Long Mode) in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real>  :DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:RLEVel ?
Example	DISP:CDP:VIEW6:WIND:TRAC:X:RLEV 10.0 DISP:CDP:VIEW6:WIND:TRAC:X:RLEV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.000
State Saved	Saved in instrument state.
Min	0
Max	5000000.0
Initial S/W Revision	Prior to A.02.00

**X Scale/Div**

Sets the horizontal scale by changing a value per division.

Key Path	<b>Span X Scale</b>
Initial S/W Revision	Prior to A.02.00

**I/Q Error View Mag Error Window X Scale/Div**

Sets the horizontal scale by changing a symbol value per division in the magnitude error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:PDIVis ion <real>  :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:PDIVis ion?
Example	DISP:CDP:VIEW3:WIND:TRAC:X:PDIV 1.0 DISP:CDP:VIEW3:WIND:TRAC:X:PDIV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.9
State Saved	Saved in instrument state.
Min	0.1
Max	500000.0
Initial S/W Revision	Prior to A.02.00

**I/Q Error View Phase Error Window X Scale/Div**

Sets the horizontal scale by changing a symbol value per division in the phase error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:PDIVisio n <real>  :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:PDIVisio n?
Example	DISP:CDP:VIEW3:WIND2:TRAC:X:PDIV 1.0 DISP:CDP:VIEW3:WIND2:TRAC:X:PDIV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.

Code Domain Measurement  
**SPAN X Scale**

Preset	0.9
State Saved	Saved in instrument state.
Min	0.1
Max	500000.0
Initial S/W Revision	Prior to A.02.00

**I/Q Error View EVM Window X Scale/Div**

Sets the horizontal scale by changing a symbol value per division in the EVM view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:PDIVisio n <real>  :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:PDIVisio n?
Example	DISP:CDP:VIEW3:WIND3:TRAC:X:PDIV 1.0 DISP:CDP:VIEW3:WIND2:TRAC:X:PDIV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.9
State Saved	Saved in instrument state.
Min	0.1
Max	500000.0
Initial S/W Revision	Prior to A.02.00

**Code Domain View Symb Power Window X Scale/Div**

Sets the horizontal scale by changing a symbol value per division in the symbol power view of the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:PDIVisio n <real>  :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:PDIVisio n?
-----------------------	--



Example	DISP:CDP:VIEW4:WIND2:TRAC:X:PDIV 1.0 DISP:CDP:VIEW4:WIND2:TRAC:X:PDIV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Default value is Device-sensitive, as follows: BTS: 512 MS: 256 Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	15.9
State Saved	Saved in instrument state.
Min	0.1
Max	500000.0
Initial S/W Revision	Prior to A.02.00

### Demod Bits View Symb Power Window X Scale/Div

Sets the horizontal scale by changing a symbol value per division for the symbol power view using the Demod Bits function in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:PDIVisio n <real> :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:PDIVisio n?
Example	DISP:CDP:VIEW5:WIND2:TRAC:X:PDIV 1.0 DISP:CDP:VIEW5:WIND2:TRAC:X:PDIV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Default value is Device-sensitive, as follows: BTS: 512 MS: 256 Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.

Code Domain Measurement  
**SPAN X Scale**

Preset	15.9
State Saved	Saved in instrument state.
Min	0.1
Max	500000.0
Initial S/W Revision	Prior to A.02.00

**Long Demod View Symb Power Window X Scale/Div**

Sets the horizontal scale by changing a symbol value per division for the Demod Bits function (Long Mode) in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALE]:PDIVis ion <real>  :DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALE]:PDIVis ion?
Example	DISP:CDP:VIEW6:WIND:TRAC:X:PDIV 1.0 DISP:CDP:VIEW6:WIND:TRAC:X:PDIV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Default value is Device-sensitive, as follows:  BTS: 512 MS: 256  Target window to control depends on the SubOpCode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	15.9
State Saved	Saved in instrument state.
Min	0.1
Max	500000.0
Initial S/W Revision	Prior to A.02.00

**Ref Position**

Sets the reference position of the X axis on the display. The reference position can be set to Left, Ctr (center) or Right.

Key Path	<b>Span X Scale</b>
----------	---------------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### I/Q Error View Mag Error Window Ref Position

Sets the reference position of the X axis in the magnitude error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RPOSit ion LEFT CENTer RIGHT  :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RPOSit ion?
Example	DISP:CDP:VIEW3:WIND:TRAC:X:RPOS LEFT DISP:CDP:VIEW3:WIND:TRAC:X:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00

### I/Q Error View Phase Error Window Ref Position

Sets the reference position of the X axis in the phase error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RPOSitio n LEFT CENTer RIGHT  :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RPOSitio n?
Example	DISP:CDP:VIEW3:WIND2:TRAC:X:RPOS LEFT DISP:CDP:VIEW3:WIND2:TRAC:X:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00

### I/Q Error View Evm Window Ref Position

Sets the X axis reference position in the EVM view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RPOSitio n LEFT CENTer RIGHT  :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RPOSitio n?
Example	DISP:CDP:VIEW3:WIND3:TRAC:X:RPOS LEFT DISP:CDP:VIEW3:WIND3:TRAC:X:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00

### Code Domain View Symb Power Window Ref Position

Sets the X axis reference position in the symbol power view of the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RPOSitio n LEFT CENTer RIGHT  :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RPOSitio n?
Example	DISP:CDP:VIEW4:WIND2:TRAC:X:RPOS LEFT DISP:CDP:VIEW4:WIND2:TRAC:X:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00

### Demod Bits View Symb Power Window Ref Position

Sets the X axis reference position for the symbol power view using the Demod Bits function in the CDP

window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:RPOSITio n LEFT CENTer RIGHT  :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:RPOSITio n?
Example	DISP:CDP:VIEW5:WIND2:TRAC:X:RPOS LEFT DISP:CDP:VIEW5:WIND2:TRAC:X:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00

### Long Demod View Symb Power Window Ref Position

Sets the X axis reference position for the symbol power view using the Demod Bits function (Long Mode) in the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALE]:RPOSIT ion LEFT CENTer RIGHT  :DISPlay:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALE]:RPOSIT ion?
Example	DISP:CDP:VIEW6:WIND:TRAC:X:RPOS LEFT DISP:CDP:VIEW6:WIND:TRAC:X:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00

### Auto Scaling

Determines the scale per division and reference value for the X axis based on the current measurement results.

Key Path	<b>Span X Scale</b>
----------	---------------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### I/Q Error View Mag Error Window Auto Scaling

When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results in the magnitude error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON  :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:COUPle ?
Example	DISP:CDP:VIEW3:WIND:TRAC:X:COUP ON DISP:CDP:VIEW3:WIND:TRAC:X:COUP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Couplings	Upon pressing the Restart front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

### I/Q Error View Phase Error Window Auto Scaling

When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results in the phase error view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:COUPle 0 1 OFF ON  :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:COUPle?
Example	DISP:CDP:VIEW3:WIND2:TRAC:X:COUP ON DISP:CDP:VIEW3:WIND2:TRAC:X:COUP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA

Couplings	Upon pressing the Restart front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

### I/Q Error View Evm Window Auto Scaling

When Auto Scaling is On, and the **Restart** front-panel key is pressed, this function automatically displays the scale per division and reference value results in the EVM view of the I/Q Error window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:COUPlE0 1 OFF ON  :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:COUPlE?
Example	DISP:CDP:VIEW3:WIND3:TRAC:X:COUP ON DISP:CDP:VIEW3:WIND3:TRAC:X:COUP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Couplings	Upon pressing the <b>Restart</b> front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

### Code Domain View Symb Power Window Auto Scaling

When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results in the symbol power view of the CDP window.

<b>Remote Command</b>	:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:COUPlE0 1 OFF ON  :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:COUPlE?
-----------------------	---

Example	DISP:CDP:VIEW4:WIND2:TRAC:X:COUP ON DISP:CDP:VIEW4:WIND2:TRAC:X:COUP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Couplings	Upon pressing the <b>Restart</b> front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

### Demod Bits View Symb Power Window Auto Scaling

When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results for the symbol power view using the Demod Bits function in the CDP window.

<b>Remote Command</b>	:DISP:CDP:VIEW5:WIND2:TRAC:X[:SCALE]:COUPLE 0 1 OFF ON :DISP:CDP:VIEW5:WIND2:TRAC:X[:SCALE]:COUPLE?
Example	DISP:CDP:VIEW5:WIND2:TRAC:X:COUP ON DISP:CDP:VIEW5:WIND2:TRAC:X:COUP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Couplings	Upon pressing the <b>Restart</b> front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

### Long Demod View Symb Power Window Auto Scaling

When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays



the scale per division and reference value results for the symbol power view using the Demod Bits function (Long Mode) in the CDP window.

<b>Remote Command</b>	:DISP:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:COUPl 0 1 OFF ON  :DISP:CDPower:VIEW6:WINDow[1]:TRACe:X[:SCALe]:COUPl ?
Example	DISP:CDP:VIEW6:WIND:TRAC:X:COUP ON DISP:CDP:VIEW6:WIND:TRAC:X:COUP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Couplings	Upon pressing the <b>Restart</b> front-panel key, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	Off On
Initial S/W Revision	Prior to A.02.00

## **Sweep/Control**

Accesses a menu that enables you to pause and restart the measurement.

Key Path	Front Panel Key
Initial S/W Revision	Prior to A.02.00

## **Pause/Resume**

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when paused. See [“Pause/Resume” on page 1698](#) for details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

---

## Trace/Detector

There is no Trace/Detector functionality supported in the Code Domain measurement. The front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## **Trigger**

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement.

See [“Trigger” on page 1753](#) for more information.

---

## View/Display

Accesses a menu of functions that enable you to control the instrument display.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### Display

Accesses a menu of functions that enable you to set the display parameters.

See the Section “[Display](#)” on page 1813 for more information.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### Annotation

Turns the screen annotation on or off for all windows, however, menu key annotation remains on the display. See “[Annotation](#)” on page 1813 for details.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### Graticule

Turns display graticule on and off. See “[Graticule](#)” on page 1818 for details.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### View (Remote Command only)

Selects the desired measurement view from the following selections:

In the following table:

- The Enumerated ID is used with the SCPI Command :DISP:CDP:VIEW[:SEL].

Code Domain Measurement  
View/Display

- The Numeric ID is used with the SCPI Command :DISP:CDP:VIEW:NSEL.

Enumerated ID	Numeric ID	View Name & Details
PGRaph	1	<p>Power Graph &amp; Metrics</p> <p>Provides a combination view of the code domain power graph and the summary data.</p> <p>Not available if the [:SENSe]:CDPower:CAPTure:TIME (Capture Interval) is 4.0 or 8.0 (Long Mode).</p>
CDE	2	<p>Power Graph &amp; CDE Graph</p> <p>Provides a combination view of the code domain power graph and the code domain error.</p> <p>Not available if the [:SENSe]:CDPower:CAPTure:TIME (Capture Interval) is 4.0 or 8.0 or 16.0 (Long Mode).</p>
SEVM	3	<p>I/Q Error (Quad View)</p> <p>Symbol EVM provides a combination view of magnitude error, phase error, Symbol EVM, and the summary data.</p> <p>Not available if the [:SENSe]:CDPower:CAPTure:TIME (Capture Interval) is set to 4.0 or 8.0 (Long Mode).</p>
QUAD	4	<p>Code Domain (Quad View)</p> <p>Provides a combination view for the code domain power symbol power, I/Q symbol polar vector and the summary data.</p> <p>Not available if the [:SENSe]:CDPower:CAPTure:TIME (Capture Interval) is set to 4.0 or 8.0 (Long Mode).</p>
DBITs	5	<p>Demod Bits</p> <p>Provides a combination view of the graphs for the code domain power and symbol power, and the I/Q demodulated bit stream data for the symbol power slots selected by the measurement interval and measurement offset.</p>
LDEMod	6	<p>Long Demodulation</p> <p>Provides a combination view of the symbol power and demodulation bits stream data for the symbol power slots selected by the measurement interval and measurement offset though long capture(capture interval &gt; 3 frames)</p>

<b>Remote Command</b>	<pre>:DISPlay:CDPower:VIEW[:SElect] PGRaph CDE SEVM QUAD DBITs LDEMod :DISPlay:CDPower:VIEW[:SElect]?</pre>
Example	<pre>DISP:CDP:VIEW PGR DISP:CDP:VIEW?</pre>
Mode	WCDMA

Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	PGRaph
State Saved	Saved in instrument state.
Range	Power Graph & Metrics CDP Graph & CDE Graph  I/Q Error (Quad View) Code Domain (Quad View) Demod Bits Long Demod
Initial S/W Revision	Prior to A.02.00

### View Selection by number ( Remote Command only)

Displays the numeric values of the measurement results.

For a complete list of Numeric ID values for use with this command, see [“View \(Remote Command only\)” on page 945](#)

<b>Remote Command</b>	:DISPlay:CDPower:VIEW:NSElect <integer> :DISPlay:CDPower:VIEW:NSElect?
Example	DISP:CDP:VIEW:NSEL 2 DISP:CDP:VIEW:NSEL?
Mode	WCDMA
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	6
Initial S/W Revision	Prior to A.02.00

### Power Bar Graph & Metrics

Provides a combination view of the code domain power graph and the summary data, using the following 2 windows:

- Power Bar Graph window (upper)
- Metrics window (lower)

The parameters displayed in these windows depend on the setting of Radio Device, in the Mode Setup menu (see [“Radio” on page 1651](#)). For details of each window in the view for each of these settings, see:

[“Radio Device: BTS” on page 948](#)

[“Radio Device: MS” on page 950](#)

If the parameter Capture Interval is set to Long Mode (4, 8 or 16 Frame), this view is not available, and

Code Domain Measurement  
View/Display

only the “Demod Bits” on page 968 view is available.


Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

**Radio Device: BTS**

The figure below shows an example of the two windows of this view. For descriptions of each window, see:

“CDP (Code Domain Power) Graph window” on page 949

“Metrics window” on page 949

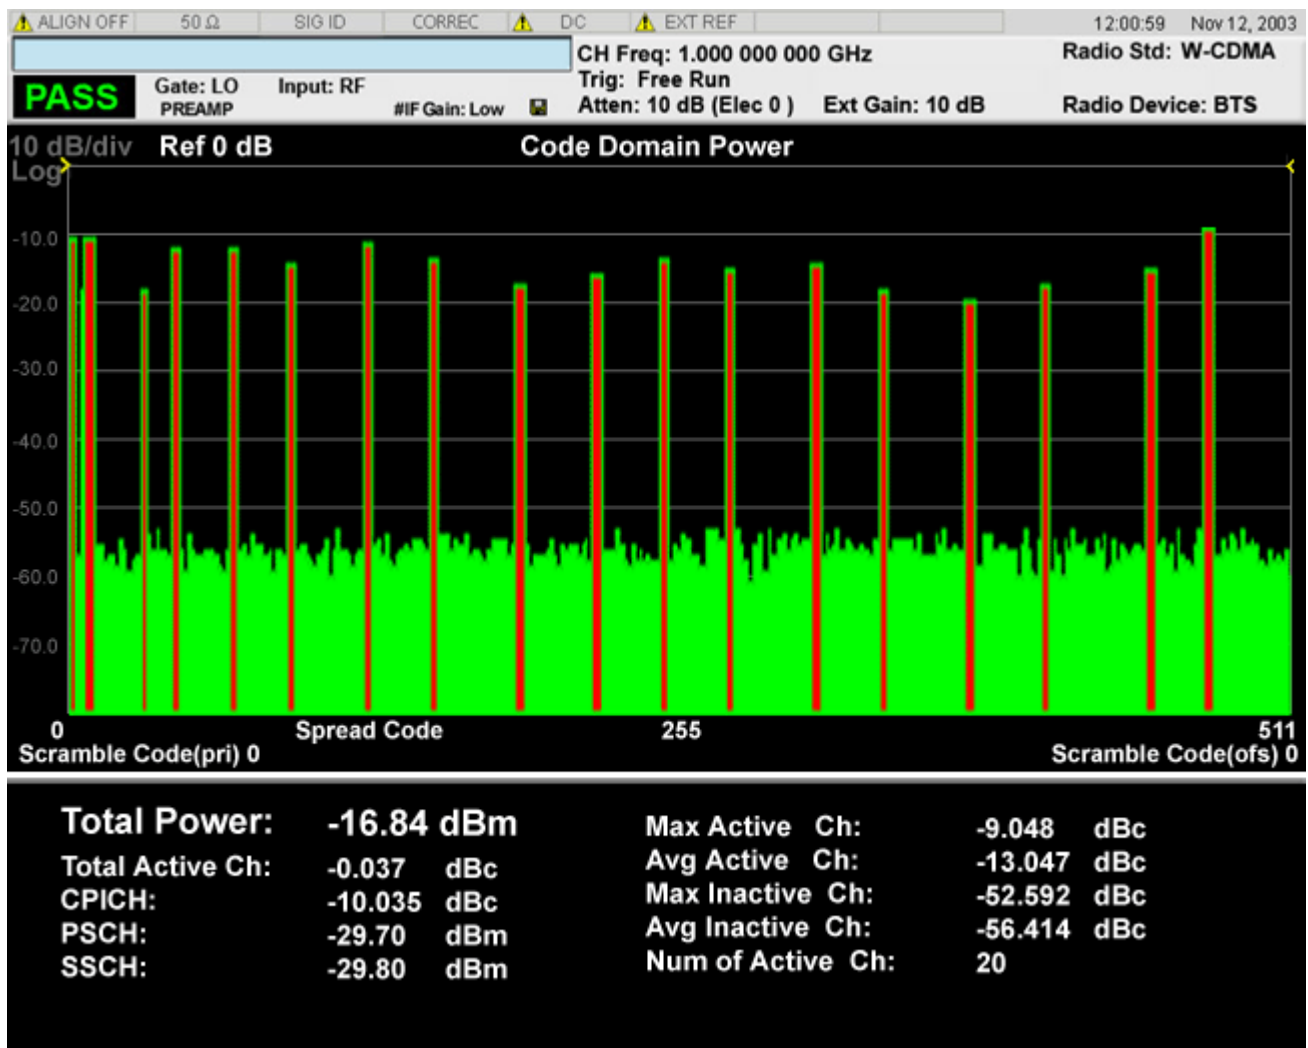



**CDP (Code Domain Power) Graph window**

Marker Operation	Yes
Corresponding Trace	CDPower (n=2)

These traces and scalar results are of the slot specified by the measOffset. (Not averaged through measInterval.)

**Metrics window**

Name	Corresponding Results	Explanation
Total Power	n=1 8th Total Power (Note 1)	-nn.nn dBm
Total Active Ch	n=1 9th Total active power (Note 1)	-nnn.nnn dBc
CPICH	n=1 10th Common Pilot (CPICH) power (Note 1)	-nn.nnn dBc
PSCH	n=1 16th P-SCH (Primary SCH) Power (Note 1, 2)	-nnn.nn dBm
SSCH	n=1 17th S-SCH (Secondary SCH) Power (Note 1, 2)	-nnn.nn dBm
Max Active Ch	n=1 11th Maximum active code power (Note 1)	-nnn.nnn dBc
Avg Active Ch	n=1 12th Average active code power (Note 1)	-nnn.nnn dBc
Max Inactive Ch	n=1 13th Maximum inactive code power (Note 1)	-nn.nnn dBc
Avg Inactive Ch	n=1 14th Average inactive code power (Note 1)	-nn.nnn dBc
Num of Active Ch	n=1 15th Number of active channels (Note 1)	nnn

Note 1: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.) SCH burst period (the first 10% of each slot) is included in the measurement. SCH's interference is suppressed if "SCH Suppress" setting is "On".

Note 2: Primary and Secondary SCH power is estimated by MMSE algorithm.


Code Domain Measurement  
View/Display

**Radio Device: MS**

The figure below shows an example of the two windows of this view. For descriptions of each window, see:

“CDP (Code Domain Power) Graph window” on page 951

“Metrics window” on page 951

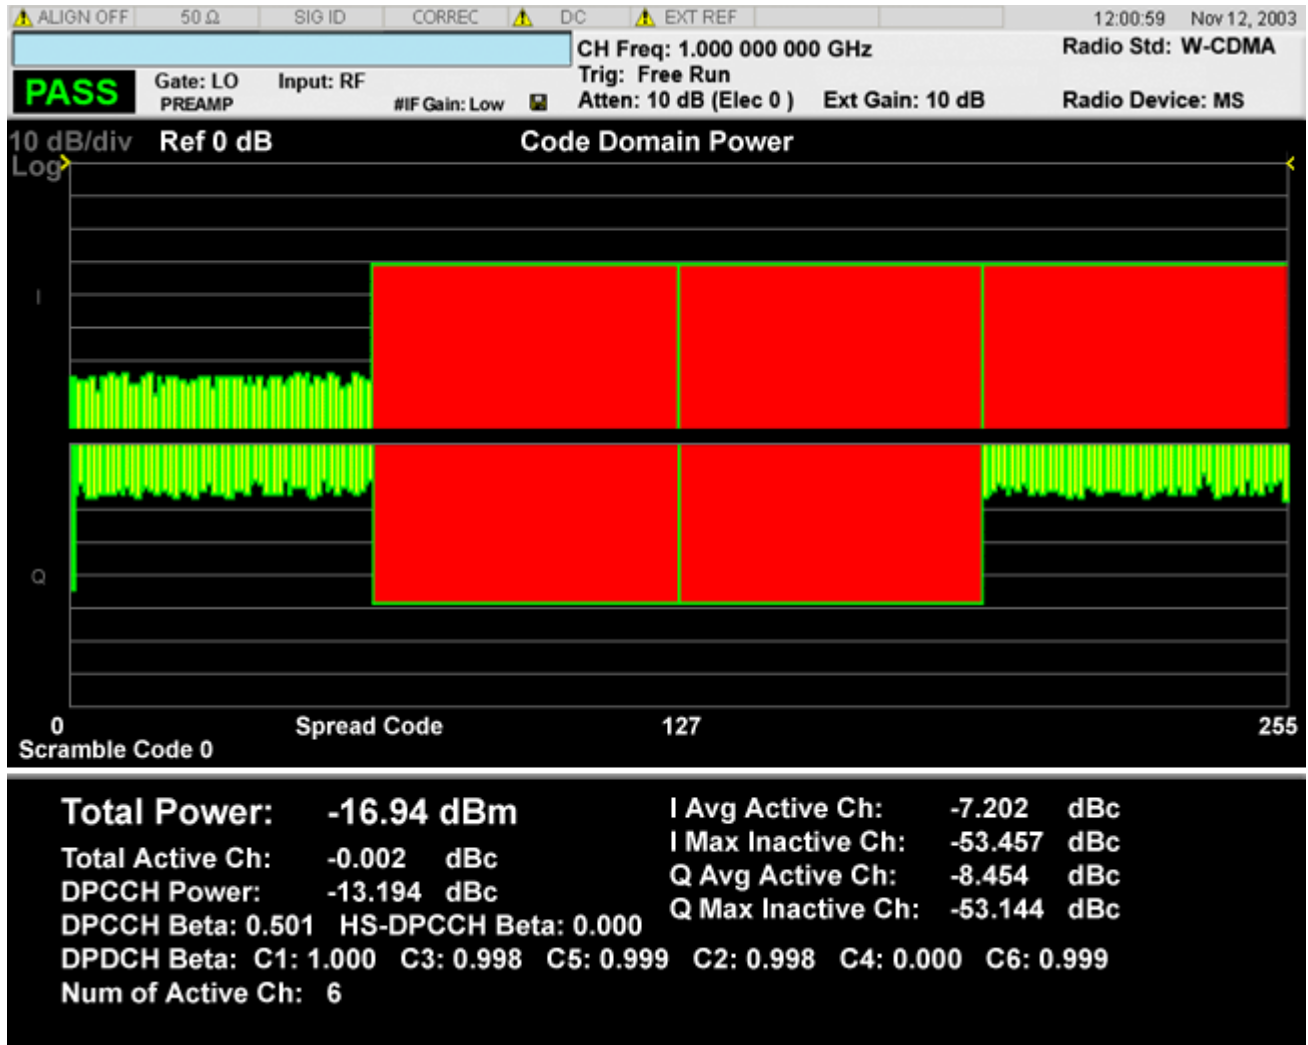

### CDP (Code Domain Power) Graph window

Marker Operation	Yes
Corresponding Trace	CDPower (n=2)

### Metrics window

Name	Corresponding Results	Explanation
Total Power	n=1 8th Total Power	-nn.nn dBm
Total Active Ch	n=1 9th Total active power (Note 1)	-nnn.nnn dBc
DPCCH Power	n=1 18th DPCCH power, PRACH Message Control Power (Note 1)	-nn.nnn dBc
DPCCH Beta	n=1 20th DPCCH Beta Measured, PRACH Message Control Part Beta Measured (Note 1)	n.nnn
HS-DPCCH Beta	n=1 33rd HS-DPCCH Beta Measured (Note 1)	n.nnn
E-DPCCH Beta	n=1 38th E-DPCCH Beta Measured (Note 1)	n.nnn
DPDCH Beta #1:	n=1 22nd DPDCH 1 Beta Measured, PRACH Message Data Part Beta Measured (Note 1)	n.nnn
DPDCH Beta #2:	n=1 23rd DPDCH 2 Beta Measured (Note 1)	n.nnn
DPDCH Beta #3:	n=1 24th DPDCH 3 Beta Measured (Note 1)	n.nnn
DPDCH Beta #4:	n=1 25th DPDCH 4 Beta Measured (Note 1)	n.nnn

Name	Corresponding Results	Explanation
DPDCH Beta #5:	n=1 26th DPDCH 5 Beta Measured (Note 1)	n.nnn
DPDCH Beta #6:	n=1 27th DPDCH 6 Beta Measured (Note 1)	n.nnn
E-DPDCH Beta 1st on I	n=1 39th E-DPDCH 1st on I-axis Beta Measured (Note 1)	n.nnn
E-DPDCH Beta 1st on Q	n=1 40th E-DPDCH 1st on Q-axis Beta Measured (Note 1)	n.nnn
E-DPDCH Beta 2nd on I	n=1 41st E-DPDCH 2nd on I-axis Beta Measured  This result is used only if there are two E-DPDCHs on I-axis. In this case, beta for E-DPDCH at C1(1):I is returned. (Note 1)	n.nnn
E-DPDCH Beta 2nd on Q	n=1 42nd E-DPDCH 2nd on Q-axis Beta Measured  This result is used only if there are two E-DPDCHs on Q-axis. In this case, beta for E-DPDCH at C1(1):Q is returned. (Note 1)	n.nnn
Control Part Power	n=1 18th DPCCH power, PRACH Message Control Power (Note 1, 2)	
Control Part Beta	n=1 20th DPCCH Beta Measured, PRACH Message Control Part Beta Measured (Note 1, 2)	
Data Part Beta	n=1 22nd DPDCH 1 Beta Measured, PRACH Message Data Part Beta Measured (Note 1, 2)	
I Avg Active Ch	n=1 28th I channel average active power (Note 1)	-nnn.nnn dBc
I Max Inactive Ch	n=1 29th I channel maximum inactive power (Note 1)	-nnn.nnn dBc

Name	Corresponding Results	Explanation
Q Avg Active Ch	n=1 30th Q channel average active power (Note 1)	-nnn.nnn dBc
Q Max Inactive Ch	n=1 31st Q channel maximum inactive power (Note 1)	-nnn.nnn dBc
Num of Active Ch	n=1 15th Number of active channels (Note 1)	nnn

Note 1: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

### Composite

Turns the composite code channel display function on or off.

The Composite Symbol Boundary for Power Bar Graph and CDE Graph functions are coupled to each other.

<b>Remote Command</b>	:CALCulate:CDPower:SBOundary:COMPOSITE OFF ON 0 1 :CALCulate:CDPower:SBOundary:COMPOSITE?
Example	CALC:CDP:SBO:COMP ON CALC:CDP:SBO:COMP?
Key Path	<b>View/Display, Power Graph &amp; Metrics</b>
Mode	WCDMA
Notes	Only valid for CDPower Bar Graph window and CDE Graph window. Toggle on the soft key 'On Off'.
Dependencies	This command is effective only when the [:SENSe]:CDPOwer:CAPTure:TIME(Capture Interval) is set to 0.067, 1.0, 2.0 and 3.0.
Couplings	Setting this parameter Off activates the Symbol Rate key.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Symbol Rate

Sets the display symbol rate to read the total power level of the combined code channels defined by the :CALCulate:CDPower:SRATE command.

The functions of Display Symbol Rate for Power Bar Graph and CDE Graph are coupled to each other.

<b>Remote Command</b>	:CALCulate:CDPower:SBOundary:SRATe <integer> :CALCulate:CDPower:SBOundary:SRATe?
Example	CALC:CDP:SBO:SRAT 30000 CALC:CDP:SBO:SRAT?
Key Path	<b>View/Display, Power Graph &amp; Metrics</b>
Mode	WCDMA
Notes	Only valid for CDP Bar Graph window and CDE Graph window. 192000 choice for MS is available only if HSPA is enabled
Dependencies	This soft key is grayed out if Composite is On.
Couplings	The functions of Display Symbol Rate for Power Bar Graph and CDE Graph are coupled to each other.
Preset	15000
State Saved	Saved in instrument state.
Range	7500 15000 30000 60000 120000 240000 480000 960000 for BTS 15000 30000 60000 120000 240000 480000 960000 1920000 for MS
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

## CDP Graph and CDE Graph

Provides a combination view of the code domain power graph and the code domain error, using the following 2 windows:

- Power Bar Graph window (upper)
- CDE Graph window (lower)

The two windows of Power Bar Graph and CDE graph are coupled in terms of: X/Y Scaling, Composite Symbol Boundary, and Display Symbol Rate.

If the parameter Capture Interval is set to Long Mode (4, 8 or 16 Frame), this view is not available, and only the “Demod Bits” on page 968 view is available.

The parameters displayed in these windows depend on the setting of Radio Device, in the Mode Setup menu (see “Radio” on page 1651). For details of each window in the view for each of these settings, see:

“Radio Device: BTS” on page 955

“Radio Device: MS” on page 956

Key Path	<b>View/Display</b>
----------	---------------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**Radio Device: BTS**

The figure below shows an example of the two windows of this view. For descriptions of each window, see:

“CDP (Code Domain Power) Graph window” on page 955

“CDE (Code Domain Error) Graph window” on page 956



**CDP (Code Domain Power) Graph window**

Marker Operation	Yes
Corresponding Trace	CDPower (n=2)

Note 1: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

**CDE (Code Domain Error) Graph window**

Marker Operation	Yes
Corresponding Trace	CDError (n=13)


Note 1: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

**Radio Device: MS**

The figure below shows an example of the two windows of this view. For descriptions of each window, see:

“CDP (Code Domain Power) Graph window” on page 957

“CDE (Code Domain Error) Graph window” on page 957

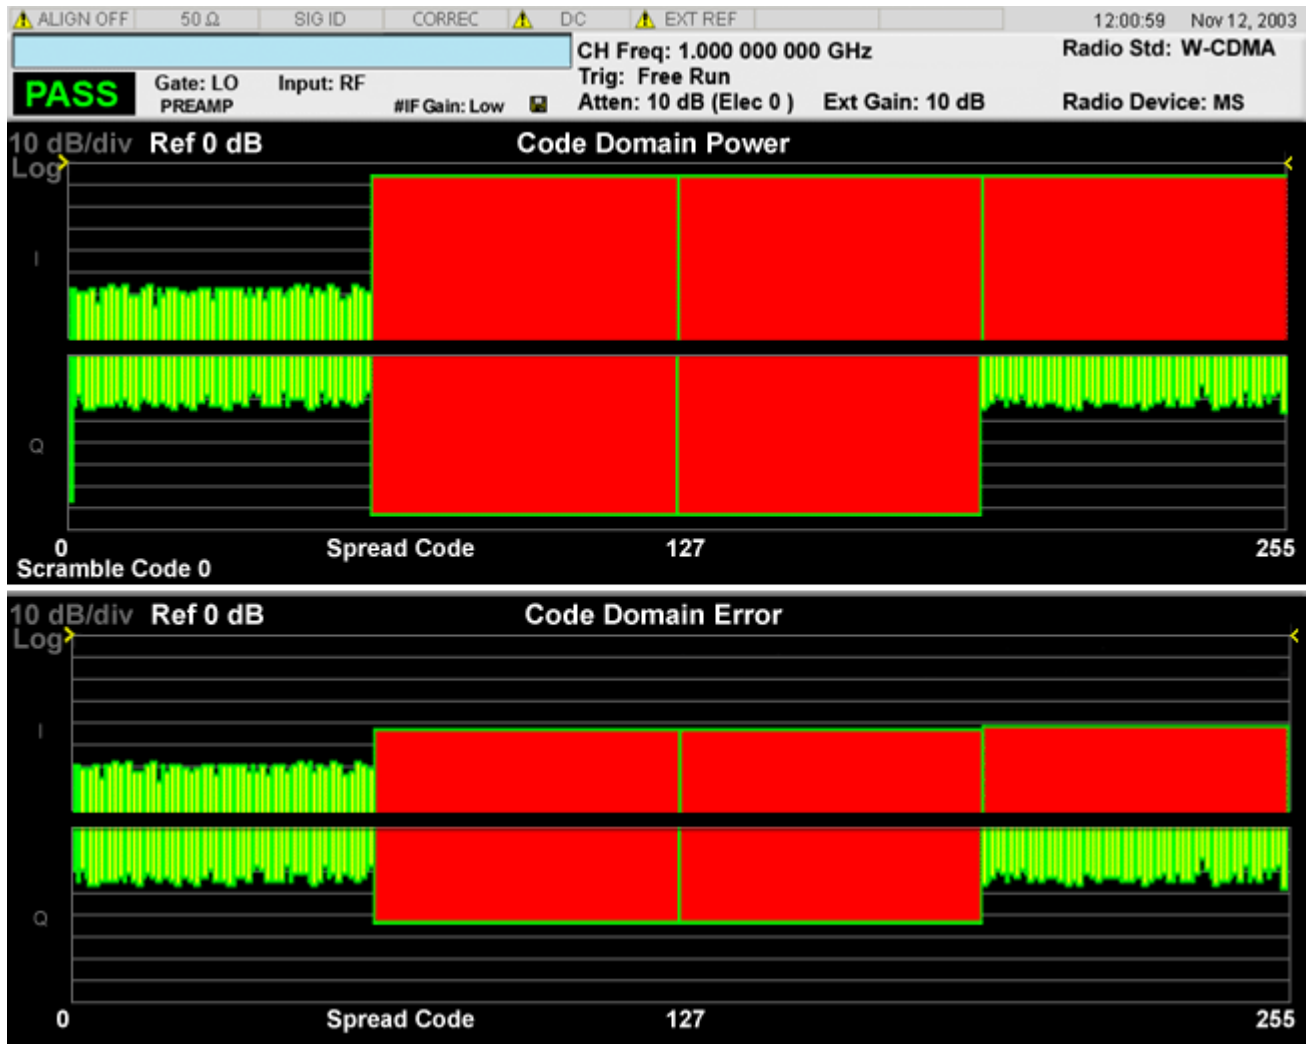



**CDP (Code Domain Power) Graph window**

Marker Operation	Yes
Corresponding Trace	CDPower (n=2)

Note 1: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

**CDE (Code Domain Error) Graph window**

Marker Operation	Yes
Corresponding Trace	CDError (n=13)

Note 1: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

**I/Q Error (Quad View)**

Provides a combination view of magnitude error, phase error, Symbol EVM, and the summary data, using the following 4 windows:

- Magnitude Error window (upper left)
- Phase Error window (upper right)
- Symbol EVM window (lower left)
- Metrics window (lower right)

If the parameter Capture Interval is set to Long Mode (4, 8 or 16 Frame), this view is not available, and only [“Demod Bits” on page 968](#) is available.

The parameters displayed in these windows depend on the setting of Radio Device, in the Mode Setup menu (see [“Radio” on page 1651](#)). For details of each window in the view for each of these settings, see:

[“Radio Device: BTS” on page 957](#)

[“Radio Device: MS” on page 960](#)

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

**Radio Device: BTS**


The figure below shows an example of the four windows of this view. For details of each window, see:

[“Magnitude Error window” on page 959](#)

[“Phase Error window” on page 959](#)

[“EVM window” on page 959](#)

“Metrics window” on page 959

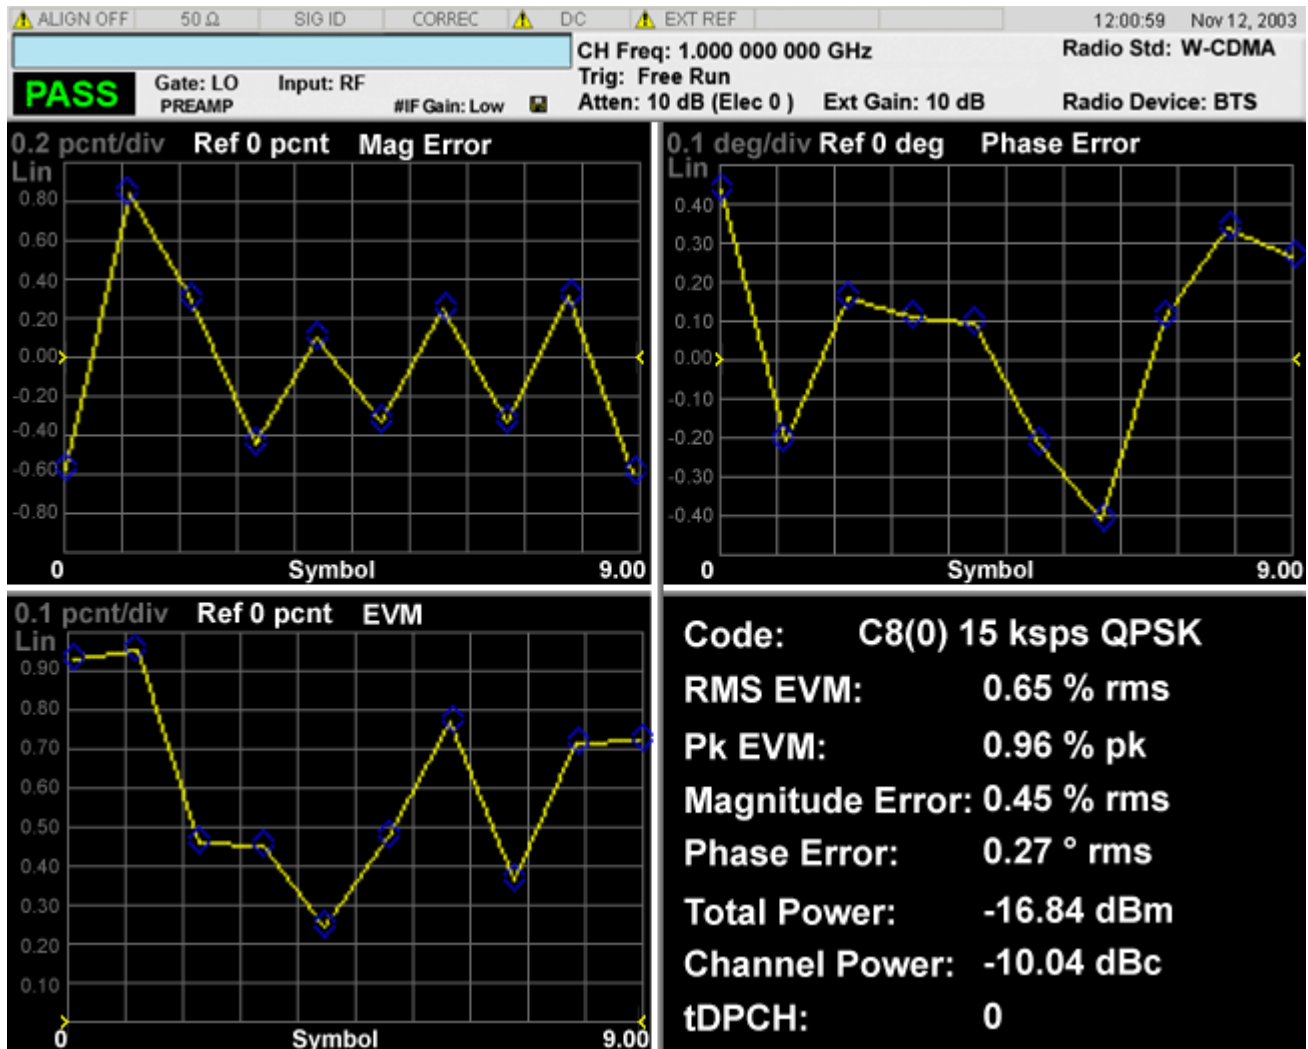

### Magnitude Error window

Marker Operation	Yes
Corresponding Trace	MERRor (n=6)

### Phase Error window

Marker Operation	Yes
Corresponding Trace	PERRor (n=7)

### EVM window

Marker Operation	Yes
Corresponding Trace	EVM (n=5)

### Metrics window

The Metrics window is exactly the same as the corresponding window in the view “Code Domain (Quad View)” on page 963.

Name	Corresponding Results	Explanation
Code Number	NA	CX(Y) N ksps X: OVFSF level (2 ... 9) 2: 960ksps ... 9:7.5ksps Y: OVFSF code number (0 ... 2x-1) N: 7.5, 15, 30 ..., 960 ksps
RMS EVM	n=1 1st RMS symbol EVM	nn.nn % rms
Pk EVM	n=1 2nd Peak symbol EVM	nn.nn % pk
Magnitude Error	n=1 3rd Symbol magnitude error	nn.nn % rms
Phase Error	n=1 4th Symbol phase error	nn.nn - rms
Total Power	n=1 5th Total power	-nn.nn dBm
Channel Power	n=1 6th Channel Power	-nn.nn dBc

Code Domain Measurement  
[View/Display](#)

Name	Corresponding Results	Explanation
tDPCH	n=1 7th tDPCH	nnn

Note 1: The result metrics window indicates the modulation scheme (“QPSK” or “16QAM”) that was used in the measurement. If modulation scheme setting is “Auto”, the result is auto-detected one. If the setting is manual, either “QPSK” or “16QAM”, the result is the same as the specified one.

**Radio Device: MS**


The figure below shows an example of the four windows of this view. For details of each window, see:

[“Magnitude Error window” on page 961](#)

[“Phase Error window” on page 961](#)

[“EVM window ” on page 962](#)

[“Metrics window” on page 962](#)

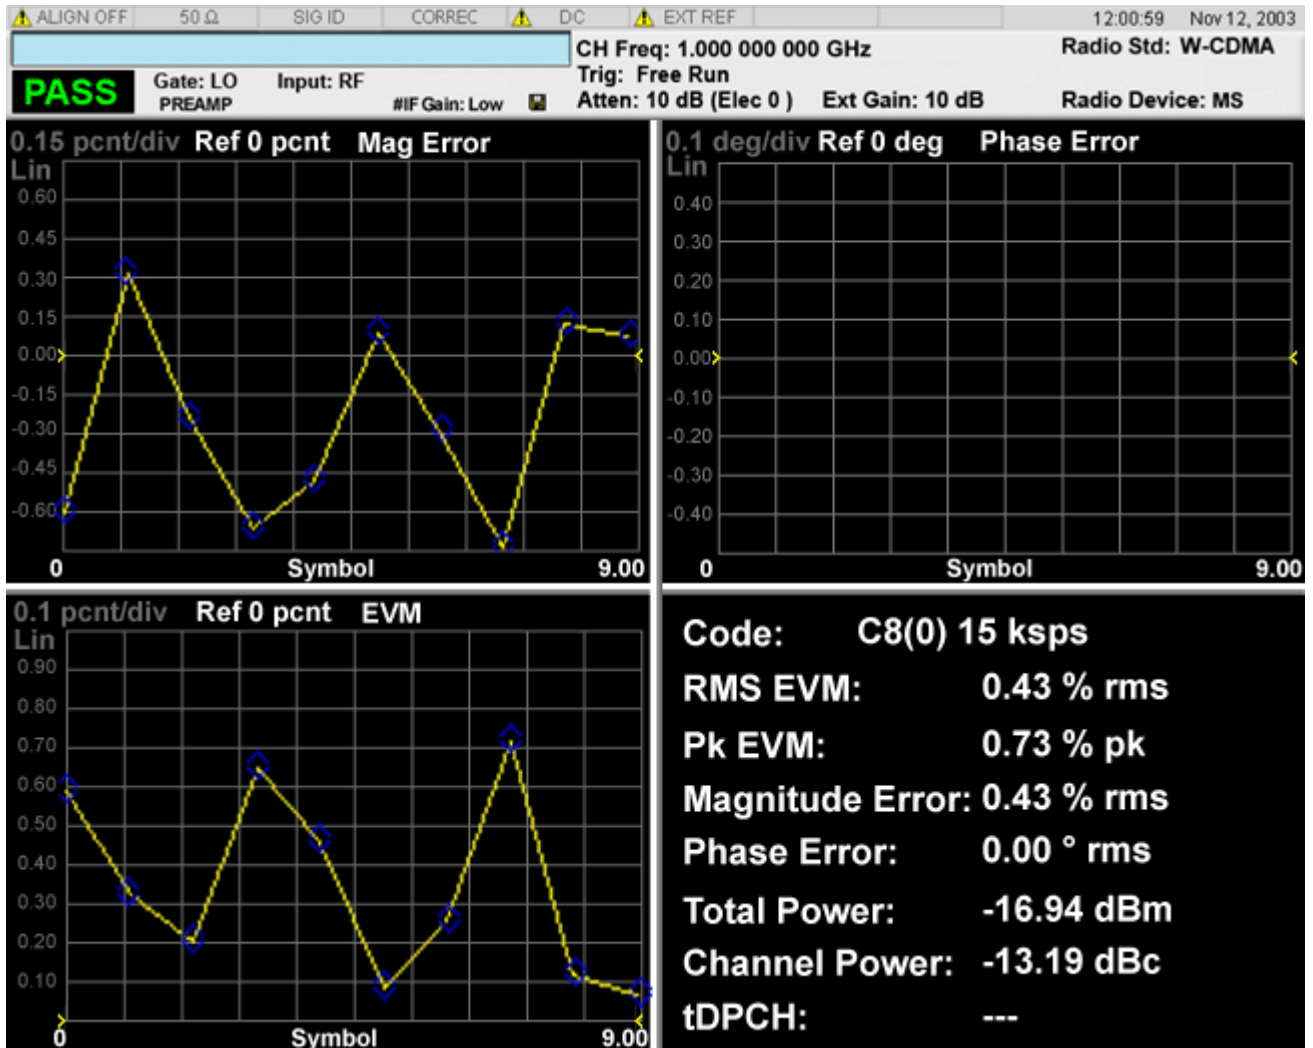

### Magnitude Error window

(See Note 1 below)

Marker Operation	Yes
Corresponding Trace	MERRor (n=6)

### Phase Error window

(See Note 1, 2 below)

Marker Operation	Yes
Corresponding Trace	PERRor(n=7)

### EVM window

(See Note 1 below)

Marker Operation	Yes
Corresponding Trace	EVM (n=5)

### Metrics window

The Metrics window is exactly the same as the corresponding window in the view “Code Domain (Quad View)” on page 963.

Name	Corresponding Results	Explanation
Code Number	NA	CX(Y) N ksps X: OVSF level (2 ... 8) 2: 960ksps ... 8:15ksps Y: OVSF code number (0 ... 2x-1) N: 15, 30 ..., 960 ksps
RMS EVM	n=1 1st RMS symbol EVM (Note 1)	nn.nn % rms
Pk EVM	n=1 2nd Peak symbol EVM (Note 1)	nn.nn % pk
Magnitude Error	n=1 3rd Symbol magnitude error (Note 1)	nn.nn % rms
Phase Error	n=1 4th Symbol phase error (Note 2)	nn.nn ° rms
Total Power	n=1 5th Total power	-nn.nn dBm
Channel Power	n=1 6th Channel Power	-nn.nn dBc
tHS-DPCCH	n=1 7th tHS-DPCCH	nnn

Note 1:	When I/Q Branch is either I(-BPSK) or Q(-BPSK): EVM of single code Channel is calculated independently between I and Q each other. When I/Q Branch is IQC(-Combined): EVM is calculated based on combined symbol vector of I and Q decision point.
---------	---

Note 2:	When I/Q Branch is either I(-BPSK) or Q(-BPSK): IQ Phase error has no meaning. When I/Q Branch is IQ(-Combined): IQ Phase error is calculated based on combined symbol vector of I and Q decision point.
---------	---

### Composite Chip Power

Toggles the composite chip power display function between On and Off.

<b>Remote Command</b>	:DISPlay:CDPower:CPOWer [:STATE] 0 1 OFF ON :DISPlay:CDPower:CPOWer [:STATE] ?
Example	DISP:CDP:CPOW ON DISP:CDP:CPOW?
Key Path	<b>View/Display, Code Domain (Quad View)</b>
Mode	WCDMA
Notes	Only valid for Symbol/Chip Power vs. Time window.
Dependencies	This soft key is grayed out if Capture Intvl is set to Long Mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Code Domain (Quad View)

Provides a combination view for the code domain power symbol power, I/Q symbol polar vector and the summary data, using the following 4 windows:

- Power Bar Graph window (upper left)
- Symbol/Chip Power vs. Time window (upper right)
- I/Q Symbol Polar graph window (lower left)
- Metrics window (lower right)

If the parameter Capture Interval is set to Long Mode (4, 8 or 16 Frame), this view is not available, and only the view [“Demod Bits” on page 968](#) is available.

The parameters displayed in these windows depend on the setting of Radio Device, in the Mode Setup menu (see [“Radio” on page 1651](#)). For details of each window in the view for each of these settings, see: [“Radio Device: BTS” on page 964](#)

“Radio Device: MS” on page 966

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

**Radio Device: BTS**


The figure below shows an example of the four windows of this view. For descriptions of each window, see:

“Power Bar Graph window” on page 965

“Symbol Power vs Time window” on page 965

“I/Q Symbol Polar Vector window” on page 966

“Metrics window” on page 966

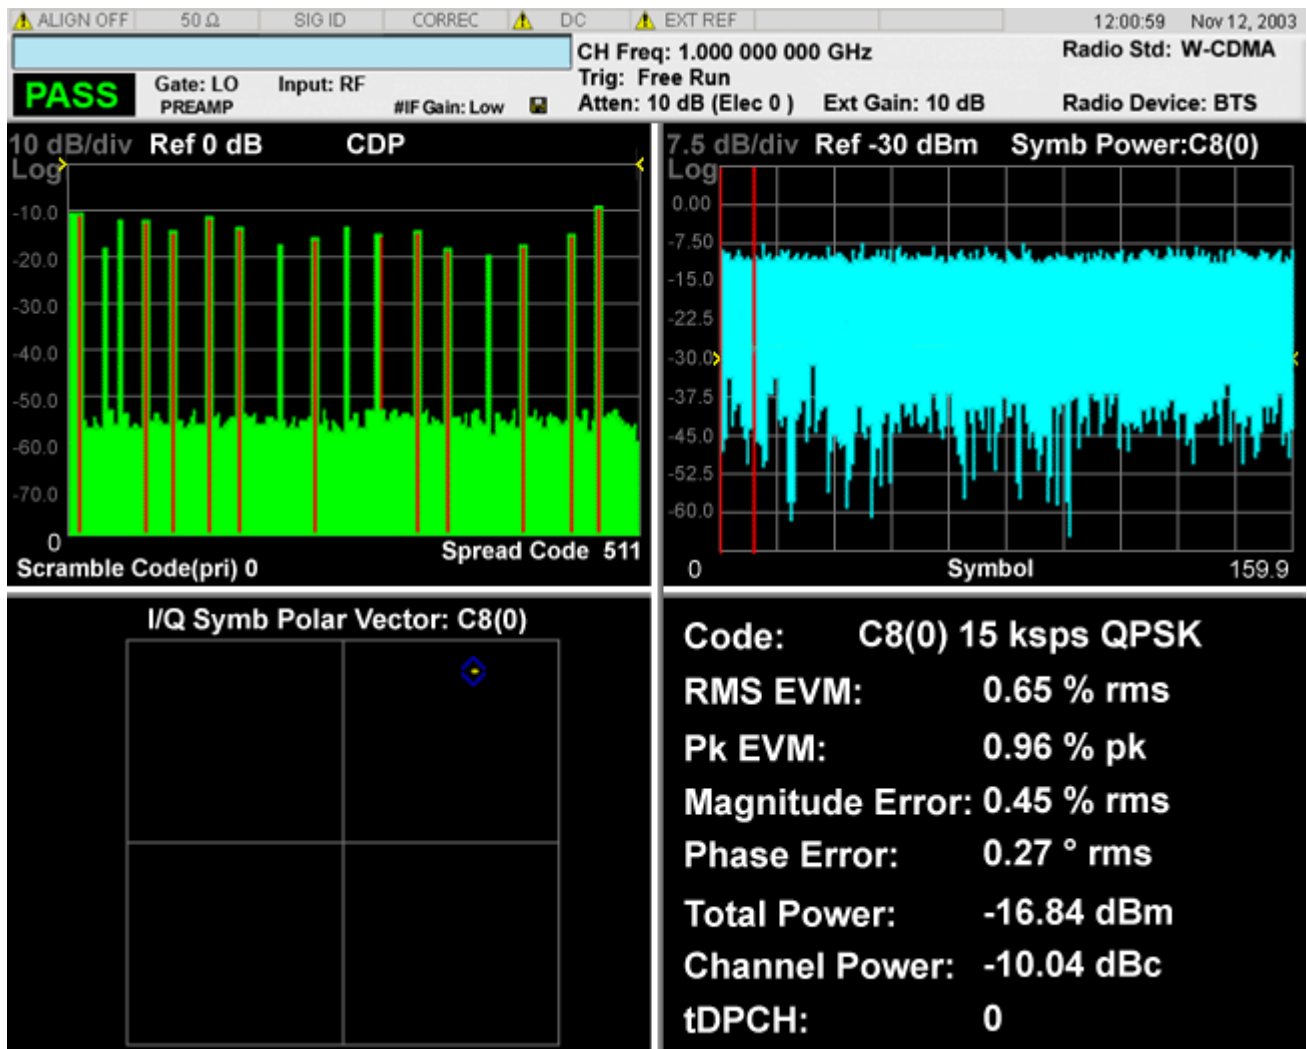



### Power Bar Graph window

This window is identical to the Power Bar Graph window in the view “Demod Bits” on page 968.

Marker Operation	Yes
Corresponding Trace	CDPower (n=2)

Note 1: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

### Symbol Power vs Time window

This window is identical to the Symbol Power vs. Time window in the view “Demod Bits” on page 968.

Marker Operation	Yes
Corresponding Trace	SPOWer (n=9), CPOWer (n=10)

### I/Q Symbol Polar Vector window

Marker Operation	No
Corresponding Trace	(n=8)

### Metrics window

Name	Corresponding Results	Display Format
Code Number	NA	CX(Y) N ksps X: OVVSF level (2 ... 9) 2: 960ksps ... 9:7.5ksps Y: OVVSF code number (0 ... 2x-1) N: 7.5, 15, 30 ..., 960 ksps
RMS EVM	n=1 1st RMS symbol EVM	nn.nn % rms
Pk EVM	n=1 2nd Peak symbol EVM	nn.nn % pk
Magnitude Error	n=1 3rd Symbol magnitude error	nn.nn % rms
Phase Error	n=1 4th Symbol phase error	nn.nn ° rms
Total Power	n=1 5th Total power	-nn.nn dBm
Channel Power	n=1 6th Channel Power	-nn.nn dBc

Note 1: Result metrics window indicates the modulation scheme (“QPSK” or “16QAM”) that was used in the measurement. If modulation scheme setting is “Auto”, the result is auto-detected one. If the setting is manual, either “QPSK” or “16QAM”, the result is the same as the specified one.

### Radio Device: MS


The figure below shows an example of the four windows of this view. For descriptions of each window, see:

[“Power Bar Graph window” on page 967](#)

[“Symbol Power vs Time window” on page 967](#)

[“I/Q Symbol Polar Vector window” on page 968](#)

[“Metrics window” on page 968](#)

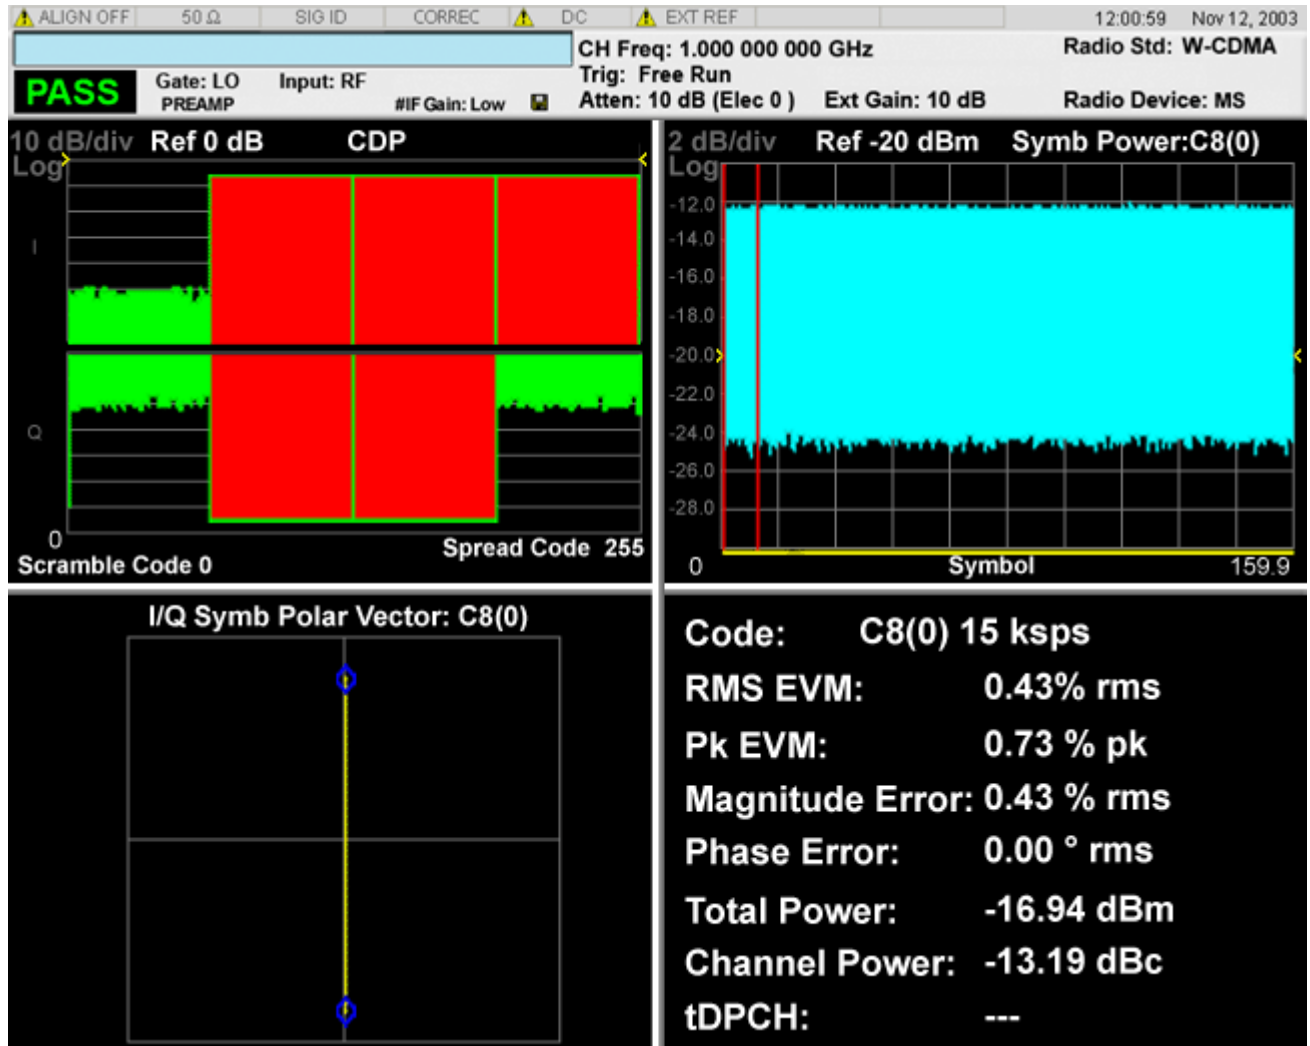

### Power Bar Graph window

This window is identical to the Power Bar Graph window in the view “Demod Bits” on page 968.

Marker Operation	Yes
Corresponding Trace	CDPower (n=2)

Note 1: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

### Symbol Power vs Time window

This window is identical to the Symbol Power vs. Time window in the view “Demod Bits” on page 968.

Marker Operation	Yes
Corresponding Trace	SPOWer (n=9), CPOWer (n=10)

### I/Q Symbol Polar Vector window

Marker Operation	No
Corresponding Trace	IQ Corrected Measured Trace (n=8) Note 1

Note 1:	<p>When I/Q Branch is either I(-BPSK) or Q(-BPSK): Symbol Vector is independent between I and Q each other.</p> <p>When I/Q Branch is IQC(-Combined): Symbol vector is combined between I and Q.</p>
---------	--

### Metrics window

Name	Corresponding Results	Explanation
Code Number	NA	CX(Y) N ksps X: OVSF level (2 ... 9) 2: 960ksps ... 9:7.5ksps Y: OVSF code number (0 ... $2^x-1$ ) N: 7.5, 15, 30 ..., 960 ksps
RMS EVM	n=1 1st RMS symbol EVM	nn.nn % rms
Pk EVM	n=1 2nd Peak symbol EVM	nn.nn % pk
Magnitude Error	n=1 3rd Symbol magnitude error	nn.nn % rms
Phase Error	n=1 4th Symbol phase error	nn.nn - rms
Total Power	n=1 5th Total power	-nn.nn dBm
Channel Power	n=1 6th Channel Power	-nn.nn dBc
tHS-DPCCH	n=1 7th tHS-DPCCH	nnn

### Demod Bits

In this view, the number of windows that are displayed depends on the parameter setting of “[Capture Interval](#)” on page 899.

The parameters displayed in each window depend on the setting of Radio Device, in the Mode Setup

menu (see [“Radio” on page 1651](#)). For details of each window in the view for each Capture Interval and each Radio Device setting, see the following table.

Capture Interval Setting	Number & Type of Windows	Radio Device Settings
1 to 14 slots	Three windows: Power Bar Graph window (upper left) Symbol/Chip Power vs. Time window (upper right) Demod Bits text window (lower)	See <a href="#">“Radio Device: BTS (Except Long Mode)” on page 969</a> or <a href="#">(“Radio Device: MS (Except Long Mode)” on page 971</a>
1 to 3 frames	Three windows: Power Bar Graph window (upper left) Symbol/Chip Power vs. Time window (upper right) Demod Bits text window (lower)	See <a href="#">“Radio Device: BTS (Except Long Mode)” on page 969</a> or <a href="#">(“Radio Device: MS (Except Long Mode)” on page 971</a>
Long Mode (4, 8, 16 frames)	Two windows: Symbol/Chip Power vs. Time window (upper) Demod Bits text window (lower)	See <a href="#">“Radio Device: BTS (Long Mode)” on page 973</a> or <a href="#">“Radio Device: MS (Long Mode)” on page 974</a>

If the Demod Bits window is active in the Demod Bits view (window), the View/Display key accesses the menu to allow the following controls to read the bit stream measurement results:

- [“Prev Page” on page 976](#) - Returns one page back to the previous page of the measurement results.
- [“Next Page” on page 976](#) - Moves one page forward to the next page of the measurement results.
- [“Scroll Up” on page 976](#) - Moves one line upward from the current page of the measurement results by each pressing.
- [“Scroll Down” on page 976](#) - Moves one line downward from the current page of the measurement results by each pressing.
- [“First Page” on page 977](#) - Moves from the current page to the first page of the measurement results.
- [“Last Page” on page 977](#) - Moves from the current page to the last page of the measurement results.

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00


### Radio Device: BTS (Except Long Mode)

The figure below shows an example of the three windows of this view. For descriptions of each window, see:

[“CDP \(Code Domain Power\) Graph window” on page 970](#)

[“Symbol Power vs Time window” on page 971](#)

“Demod Bits window” on page 971

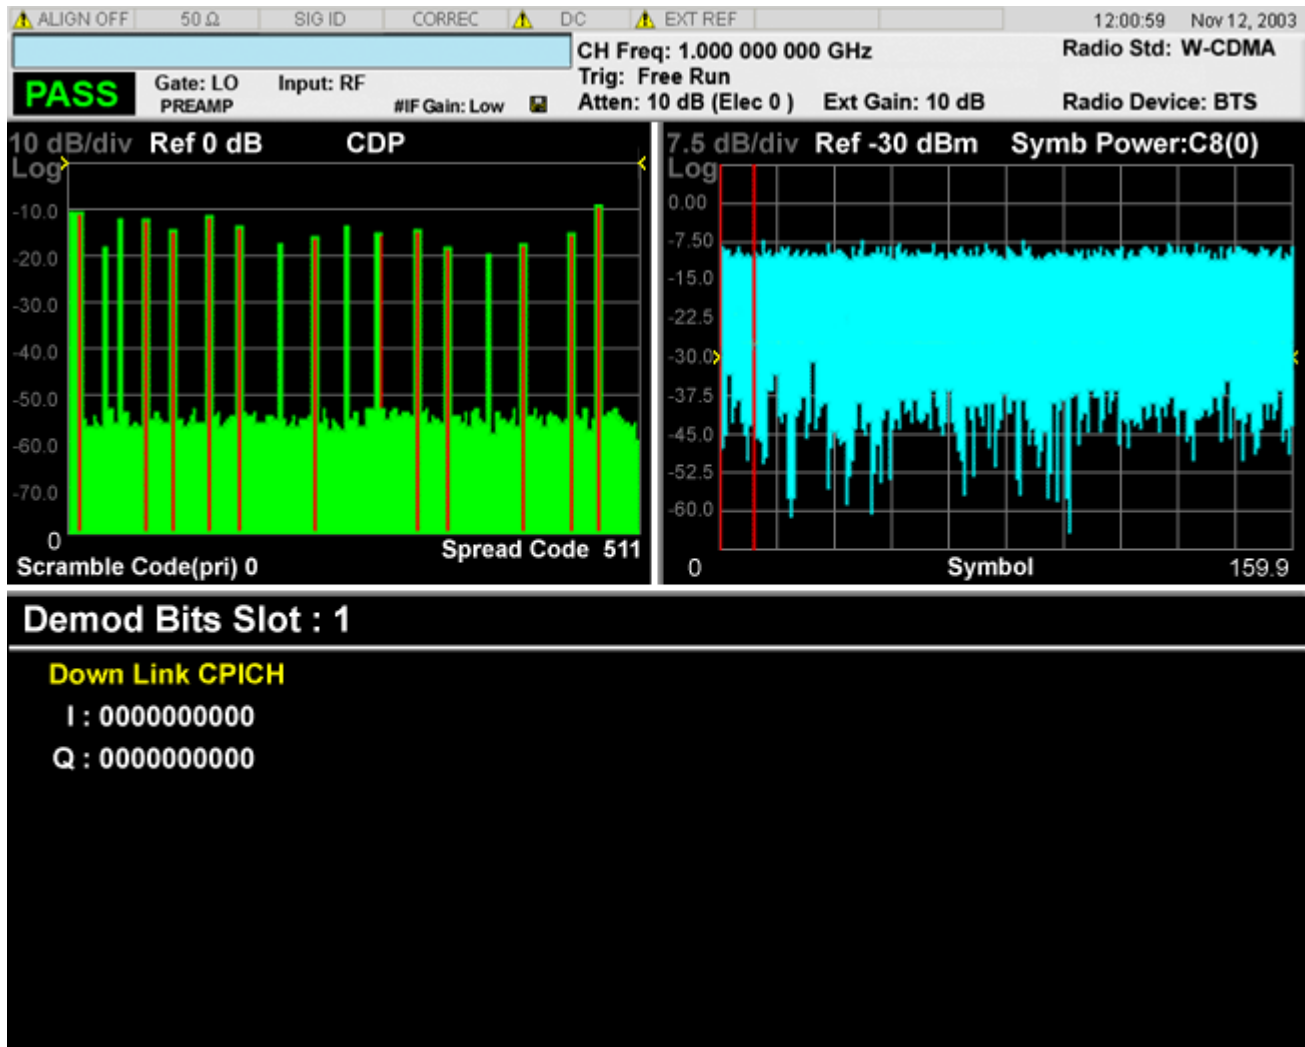

**CDP (Code Domain Power) Graph window**

Marker Operation	Yes
Corresponding Trace	CDPower (n=2)

Note 1: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

**Symbol Power vs Time window**

Marker Operation	Yes
Corresponding Trace	SPOWer (n=9), CPOWer (n=10)

**Demod Bits window**

Marker Operation	No
Corresponding Trace	Selected Demod Bits by Meas Offset and Meas Interval (n=12)

Note 1: When Capture Interval is less than 1 frame, the channel type is not shown as the physical channel name. It is simply shown by Code Level and Index:

$Cx(y)$  : x = Code Level, y = Code Index

**Radio Device: MS (Except Long Mode)**


The figure below shows an example of the three windows of this view. For descriptions of each window, see:

[“CDP \(Code Domain Power\) Graph window” on page 973](#)

[“Symbol Power vs Time window” on page 973](#)

[“Demod Bits window” on page 973](#)

Code Domain Measurement  
View/Display

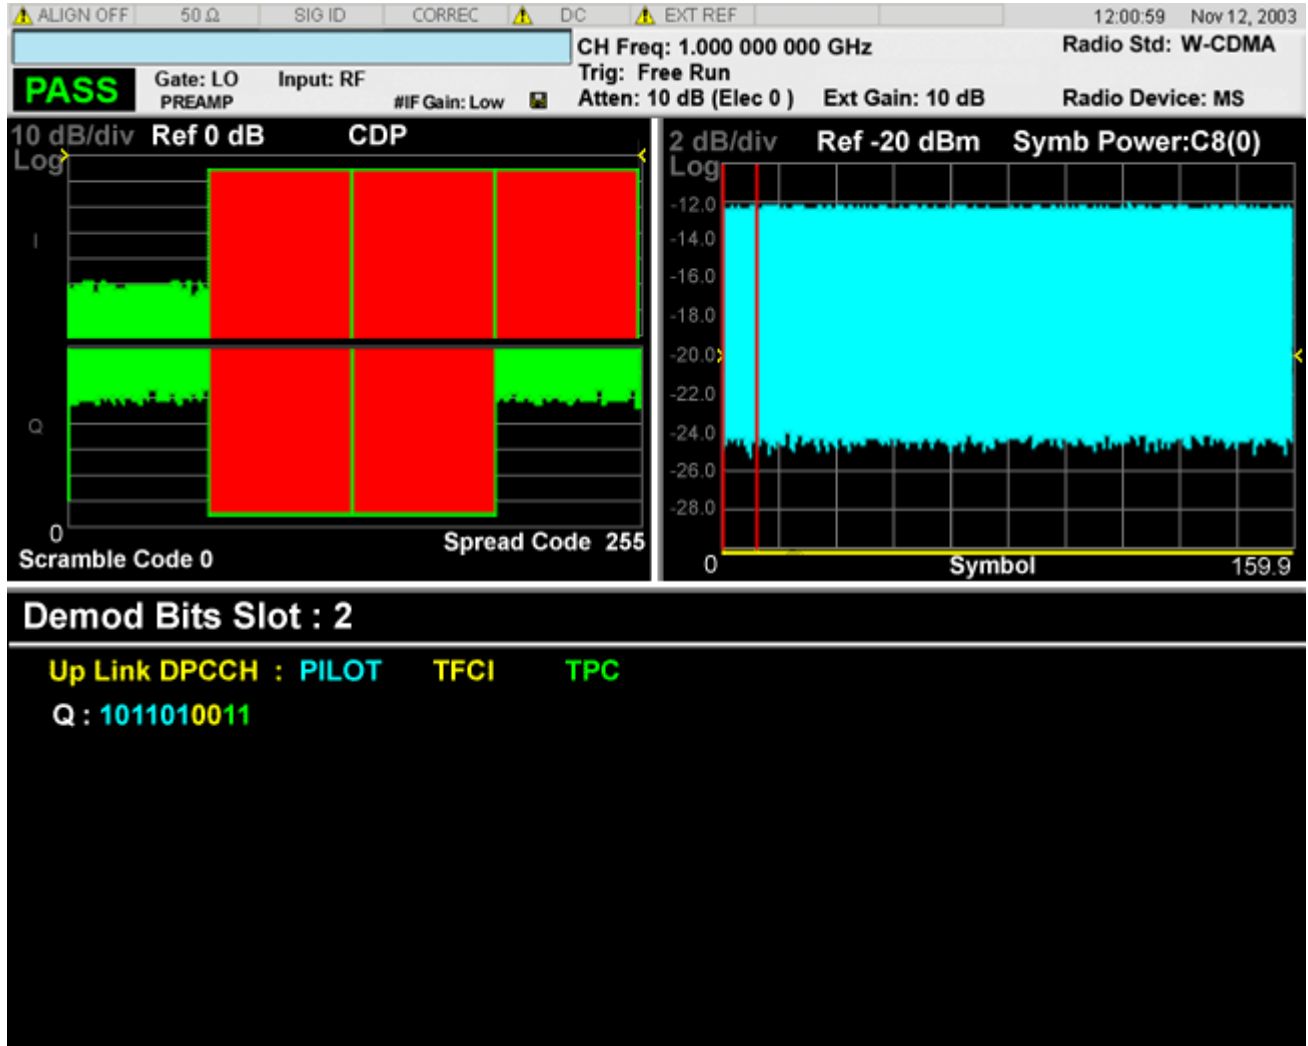



**CDP (Code Domain Power) Graph window**

Marker Operation	Yes
Corresponding Trace	CDPower (n=2)

**Symbol Power vs Time window**

Marker Operation	Yes
Corresponding Trace	SPOWer (n=9), CPOWer (n=10)

**Demod Bits window**

Marker Operation	No
Corresponding Trace	Selected Demod Bits by Meas Offset and Meas Interval (n=12)

Note 1 : When Capture Interval is less than 1 frame, the channel type is not shown as the physical channel name. It's simply shown by Code Level and Index:


Cx(y) : x = Code Level, y = Code Index

**Radio Device: BTS (Long Mode)**

The figure below shows an example of the two windows of this view. For descriptions of each window, see:

[“Symbol Power vs Time window” on page 974](#)

[“Demod Bits window” on page 974](#)

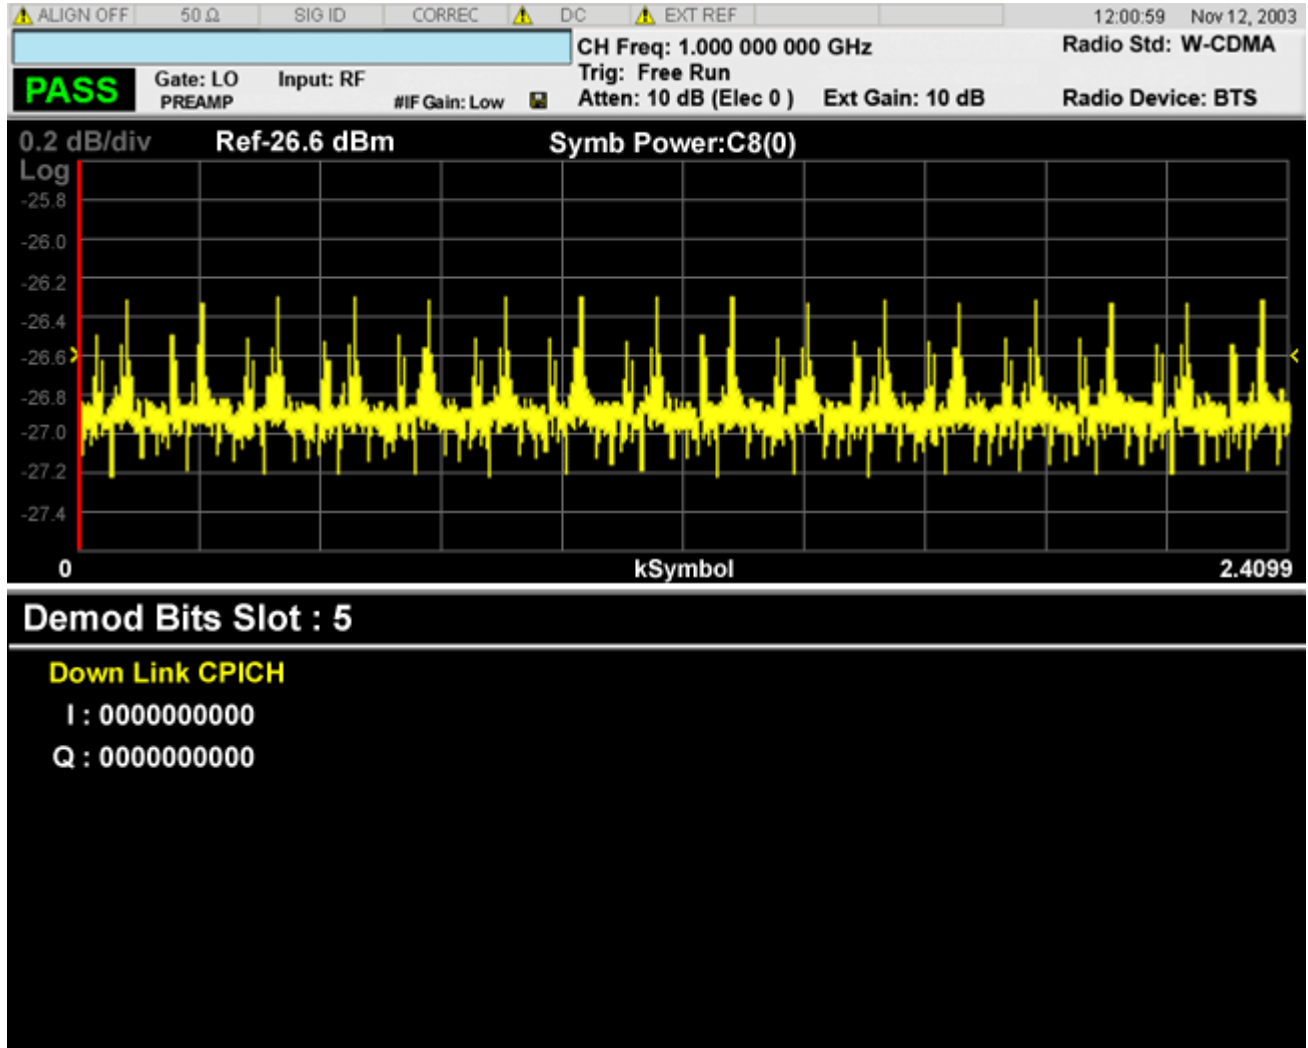

### Symbol Power vs Time window

Marker Operation	Yes
Corresponding Trace	SPOWer (n=9)

### Demod Bits window

Marker Operation	No
Corresponding Trace	Selected Demod Bits by Meas Offset and Meas Interval (n=12)

### Radio Device: MS (Long Mode)

The figure below shows an example of the two windows of this view. For descriptions of each window, see:

[“Symbol Power vs Time window” on page 976](#)

“Demod Bits window” on page 976



### Symbol Power vs Time window

Marker Operation	Yes
Corresponding Trace	SPOWer (n=9)

### Demod Bits window

Marker Operation	No
Corresponding Trace	Selected Demod Bits by Meas Offset and Meas Interval (n=12)

### Prev Page

Returns the current page back to the previous page of the measurement results.

Key Path	<b>View/Display, Demod Bits</b>
Mode	WCDMA
Notes	The Demod Bits window must be the focused window. No SCPI
Initial S/W Revision	Prior to A.02.00

### Next Page

Moves the current page forward to the next page of the measurement results.

Key Path	<b>View/Display, Demod Bits</b>
Mode	WCDMA
Notes	The Demod Bits window must be the focused window. No SCPI
Initial S/W Revision	Prior to A.02.00

### Scroll Up

On each key press, moves one line upward from the current page of the measurement results.

Key Path	<b>View/Display, Demod Bits</b>
Mode	WCDMA
Notes	The Demod Bits window must be the focused window. No SCPI
Initial S/W Revision	Prior to A.02.00

### Scroll Down

On each key press, moves one line downward from the current page of the measurement results.

Key Path	<b>View/Display, Demod Bits</b>
----------	---------------------------------

Mode	WCDMA
Notes	The Demod Bits window must be the focused window. No SCPI
Initial S/W Revision	Prior to A.02.00

### First Page

Moves from the current page to the first page of the measurement results.

Key Path	<b>View/Display, Demod Bits</b>
Mode	WCDMA
Notes	The Demod Bits window must be the focused window. No SCPI
Initial S/W Revision	Prior to A.02.00

### Last Page

Moves from the current page to the last page of the measurement results.

Key Path	<b>View/Display, Demod Bits</b>
Mode	WCDMA
Notes	The Demod Bits window must be the focused window. No SCPI
Initial S/W Revision	Prior to A.02.00

### Demod Bit Format (BTS only)

This menu key is displayed and active if Radio Device is BTS and Demod Bits window is selected.

- Binary: Demodulated bits are displayed in binary format.
- Hex: Demodulated bits are displayed in hexadecimal format.

The Demod Bits view changes as the above settings change.

This functionality works only if all the following conditions are met:

1. Radio Device is BTS
2. the Symbol Rate is 240 ksps
3. the modulation scheme on the result metrics window is 16QAM.

For QPSK channels, this setting has no effect and the channels are always displayed in binary format.

#### (1) Binary format

In this format, each symbol appears in a column consisting of 4 index bits:

Sample:

Downlink HS-PDSCH: tDPCH(unknown:0)
-------------------------------------

Code Domain Measurement  
View/Display

I1:	1	1	0	0	1	1	0	0	1	1
Q1:	0	0	0	0	0	0	0	0	1	1
I2:	1	0	0	1	1	0	0	1	1	0
Q2:	1	1	1	1	0	0	0	0	0	0

**(2) Hexadecimal format**

In this format, each symbol is shown as a hexadecimal digit.

Sample (using the same data as for the above binary format case):

Downlink HS-PDSCH : tDPCH(unknown:0)										
0x:	B	9	1	3	A	8	0	2	E	C

<b>Remote Command</b>	DISPlay:CDPower:TEXT:BFORmat BINary HEX DISPlay:CDPower:TEXT:BFORmat?
Example	DISP:CDP:TEXT:BFOR BIN DISP:CDP:TEXT:BFOR?
Key Path	<b>View/Display, Demod Bits</b>
Mode	WCDMA
Preset	BINary
State Saved	Saved in instrument state.
Range	Binary Hex
Initial S/W Revision	Prior to A.02.00

In addition to the QPSK EVM and symbol EVM measurements, the composite EVM measurement is made to qualify a transmitter. For more details, see [“Modulation Accuracy Measurement Description”](#) on page 990 below.

This topic contains the following sections:

[“Measurement Commands for Modulation Accuracy”](#) on page 979

[“Remote Command Results for Modulation Accuracy”](#) on page 980

## Measurement Commands for Modulation Accuracy

:CONFigure:RHO

:CONFigure:RHO:NDEFault

:INITiate:RHO

:FETCh:RHO[n]?

:READ:RHO[n]?

:MEASure:RHO[n]?

For more measurement related commands, see the section [“Remote Measurement Functions”](#) on page 1575.

**Remote Command Results for Modulation Accuracy**

Index: n <Mnemonic>	Results Returned
0	Returns unprocessed I/Q trace data of Capture Interval, as a series of trace point values. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values.
1 (or not specified)	<p>Returns the following 14 comma-separated scalar results:</p> <p>#.Result Name (average mode) &lt;explanations&gt;</p> <p>average mode is:</p> <p style="padding-left: 40px;">Average : Averaged value in average cycle</p> <p style="padding-left: 40px;">Peak Hold : Detected Peak/Maximum value in average cycle</p> <ol style="list-style-type: none"> <li>1. RMS EVM (Average) is a floating point number (in percent) of EVM over the entire measurement area</li> <li>2. Peak EVM (Peak Hold ) is a floating point number (in percent) of the peak EVM in the measurement area</li> <li>3. Magnitude error (Average) is a floating point number (in percent) of the average magnitude error over the entire measurement area</li> <li>4. Phase error (Average) is a floating point number (in degree) of the average phase error over the entire measurement area</li> <li>5. I/Q origin offset (Average) is a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin</li> <li>6. Frequency error (Average) is a floating point number (in Hz) of the frequency error in the measured signal</li> <li>7. Rho (Average) is a floating point number of Rho</li> <li>8. Peak Code Domain Error (Peak Hold ) is a floating point number (in dB) of the Peak Code Domain Error relative to the mean power</li> <li>9. Peak Code Domain Error Channel Number (Peak Hold) is the channel number in which the peak code domain error is detected.</li> <li>10. Number of active channels. (Average)</li> </ol>



Index: n <Mnemonic>	Results Returned
<p>1 (or not specified) Continued</p>	<p>11. Time offset (Average) is a floating point number (in chips) of the pilot phase timing from the acquisition trigger point.</p> <p>12. CPICH power over a slot (Average) is a floating point number (in dB) of the CPICH power over a measurement slot. In the MS mode, the value returned is -999.</p> <p>13. Total power over a slot (Average) is a floating point number (in dBm) of the total RF power over a measurement slot.</p> <p>14. First Slot Number is an integer number of the first slot in Capture Interval. This is not averaged even if the averaging function is On. It is always the last cycle of the measurement.</p> <p>15. DPCCH Slot Format: (floating) If Sync Type is DPCCH, the DPCCH slot format value used for synchronization is returned.</p> <p>0.0: Slot Format 0 1.0: Slot Format 1 2.0: Slot Format 2 3.0: Slot Format 3 4.0: Slot Format 4 5.0: Slot Format 5</p> <p>- If Sync Type is PRACH, the value returned is -999.0. - In BTS mode, the value returned is -999.0.</p> <p>16. Preamble Signature: (floating)</p> <p>- BTS mode The returned value is always -999.0. - MS mode</p> <p>In Preamble Signature auto-detection mode, the detected signature code number (from 0.0 to 15.0) is returned when the Sync Type is PRACH Message.</p> <p>In Preamble Signature manual setting mode, the returned value is the same as the parameter setting. When the Sync Type is not PRACH Message, the returned value is -999.0.</p>
<p>2</p>	<p>Chip EVM:</p> <p>EVM trace returns a series of floating point numbers (in percent) that represent each sample in the EVM trace of Capture Interval. The first number is the symbol 0 decision point. There are X points per symbol (X = points/chip). Therefore, the decision points are at 0, 1 X, 2 *X, 3 *X . . .</p>
<p>3</p>	<p>Chip Magnitude Error:</p> <p>Magnitude error trace returns a series of floating point numbers (in percent) that represent each sample in the magnitude error trace of Capture Interval. The first number is the symbol 0 decision point. There are X points per symbol (X = points/chip). Therefore, the decision points are at 0, 1 *X, 2 *X, 3 *X . . .</p>

Index: n <Mnemonic>	Results Returned
4	<p>Chip Phase Error:</p> <p>Phase error trace returns a series of floating point numbers (in degrees) that represent each sample in the phase error trace of Capture Interval. There are X points per symbol (X = points/ chip). Therefore, the decision points are at 0, 1 *X, 2 *X, 3 *X . . .</p>
5	<p>Corrected Measured Trace:</p> <p>Corrected measured trace of Single Slot specified by Meas Offset returns a series of floating point numbers that alternately represent I and Q pairs of the corrected measured trace. The magnitude of each I and Q pair are normalized to 1.0. The first number is the in-phase (I) sample of the symbol 0 decision point and the second is the quadrature-phase (Q) sample of the symbol 0 decision point. There are X points per symbol (X = points/chip), so the series of numbers is:</p> <p>1st number = I of the symbol 0 decision point                  2nd number = Q of the symbol 0 decision point                  ..                  (2 *X) 1, number = I of the symbol 1 decision point                  (2 *X) 2, number = Q of the symbol 1 decision point                  ..                  (2 *X) *Nth + 1 number = I of the symbol N decision point                  (2 *X) *Nth + 2 number = Q of the symbol N decision point</p>
6	<p>PASS/FAIL:</p> <p>Returns 6 comma-separated scalar values of the pass/fail (0.0 = passed, or 1.0 = failed) results determined by testing the following items. The pass/fail is for the peak-hold value, because the test on the peak-hold value should be severer than the average value. Regarding the case that it passes on peak-hold but fails on the average, it definitely does not happen.</p> <ol style="list-style-type: none"> <li>1. Test result of EVM</li> <li>2. Test result of Peak EVM</li> <li>3. Test result of Rho</li> <li>4. Test result of Peak Code Domain Error</li> <li>5. Test result of Frequency Error</li> <li>6. Test result of CPICH over a slot (If MS is selected, this always returns 0.0.)</li> </ol>

Index: n <Mnemonic>	Results Returned
7	<p>Active Channel List:</p> <p>With a device of BTS, it returns a series of floating point numbers: symbol rate (ex. 7.5 ksp/s), OVFSF code number, a dummy value, power level and code domain error for the active channels for Single Slot specified by Meas Offset.</p> <p>With a device of MS, it returns a series of floating point numbers: symbol rate (ex. 15 ksp/s), OVFSF code number, 1.0 (I) or 1.0 (Q), power level and code domain error for the active channels for Single Slot specified by Meas Offset. The results would look like the following:</p> <p>1st number = Symbol Rate for 1st Active Channel                  2nd number = OVFSF Code number for 1st Active Channel                  3rd number = (in BTS) 999, or (in MS) either +1 (I) or 1 (Q) for 1st Active Channel                  4th number = Power Level (in dB) for 1st Active Channel                  5th number = Code Domain Error for 1st Active Channel                  ...                  (N-1)*5+1 number = Symbol Rate for Nth Active Channel                  (N-1)*5+2 number = OVFSF Code number for Nth Active Channel                  (N-1)*5+3 number = 999 (in BTS), or either +1 (I) or 1 (Q) (in MS) for Nth Active Channel                  (N-1)*5+4 number = Power Level (in dB) for Nth Active Channel                  N*5 number = Code Domain Error for Nth Active Channel                  Number of active channel is given by 10th parameter of :MEASure:RHO[1].</p>

Index: n <Mnemonic>	Results Returned
8	<p>Code Domain Power:</p> <p>Returns a series of floating point numbers (in dB) that represents all the code domain powers of Single Slot specified by Meas Offset.</p> <p>With a device of BTS, there are 512 numbers. If the active channel occupies more than the max spreading factor (7.5 ksps) the power is duplicated (active symbol rate/7.5 ksps) times.</p> <p>1st number = 1st code power over the slot                  2nd number = 2nd code power over the slot                  ...                  Nth number = Nth code power over the slot</p> <p>With a device of MS, there are 256 I/Q pairs. If the active channel occupies more than the max spreading factor (15 ksps) the power is duplicated (active symbol rate / 15 ksps) times.</p> <p>1st number = 1st in-phase code power over the slot                  2nd number = 1st quad-phase code power over the slot                  ...                  (2*N-1) number = Nth in-phase code power over the slot                  (2 *N) number = Nth quad-phase code power over a slot</p> <p>N = the number of codes detected. The total number of codes varies because of the different symbol rates of each code.</p>
9	<p>Slot RMS EVM:</p> <p>Slot RMS EVM trace returns series of floating point numbers (in percent) that represent each slot RMS EVM trace of Capture Interval. The first number is of the first slot in Capture Interval. Total length of trace is equivalent to Capture Interval in slot.</p>

Index: n <Mnemonic>	Results Returned
10	<p>Peak CDE:</p> <p>Peak CDE trace of Capture Interval, returns series of floating point numbers that represent the Peak CDE as following:</p> <p>1st number = Peak CDE Symbol Rate of 1st slot in Capture Interval</p> <p>2nd number = Peak CDE Code Index of 1st slot in Capture Interval</p> <p>3rd number = I/Q Phase of Peak CDE</p> <p style="padding-left: 40px;">I-Phase = 1.0 (for MS)</p> <p style="padding-left: 40px;">Q-Phase = 1.0 (for MS)</p> <p style="padding-left: 40px;">IQ = 999.0 (for BTS)</p> <p>4th number = Peak CDE Value of 1st slot in Capture Interval</p> <p>...</p> <p>(4*N+1) number = Peak CDE Code Level of Nth slot in Capture Interval.</p> <p>(4*N+2) number = Peak CDE Code Index of Nth slot in Capture Interval.</p> <p>(4*N+3) number = I/Q Phase of Peak CDE</p> <p style="padding-left: 40px;">I-Phase = 1.0 (for MS)</p> <p style="padding-left: 40px;">Q-Phase = 1.0 (for MS)</p> <p style="padding-left: 40px;">IQ = 999.0 (for BTS)</p> <p>(4*N+4) Number = Peak CDE value of Nth slot in Capture Interval.</p> <p>N is equivalent to Capture Interval in slot, and total trace length <math>3*N + 3</math></p>
11	<p>Slot Frequency Error:</p> <p>Slot Frequency Error trace returns series of floating point numbers (in Hz) that represents each slot frequency error. Total length of trace is equivalent to Capture Interval in slot.</p>
12	<p>Slot CPICH Power:</p> <p>When Radio device is BTS,</p> <p>Slot CPICH Power trace returns the series of floating point numbers (in dB) of the code domain power of CPICH.</p> <p>When Radio device is MS, dummy data (= -999.0) is returned.</p> <p>Total length of trace is equivalent to Capture Interval in slot.</p>
13	<p>Slot Average Total Power:</p> <p>Slot Average Total Power trace returns the series of floating point numbers (in dBm) of the total power. Total length of trace is equivalent to Capture Interval in slot.</p>

Index: n <Mnemonic>	Results Returned
14	<p>Average Results:</p> <p>Average scalar results trace returns 13 comma-separated scalar results:</p> <ol style="list-style-type: none"> <li>1. RMS EVM is a floating point number (in percent) of EVM over the entire measurement area</li> <li>2. Peak EVM is a floating point number (in percent) of peak EVM in the measurement area</li> <li>3. Magnitude error is a floating point number (in percent) of average magnitude error over the entire measurement area</li> <li>4. Phase error is a floating point number (in degree) holding the result with absolute maximum value of average phase error over the entire measurement area</li> <li>5. I/Q origin offset is a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin</li> <li>6. Frequency error is a floating point number (in Hz) holding the result with absolute maximum value of the frequency error in the measured signal</li> <li>7. Rho is a floating point number holding the minimum result of Rho</li> <li>8. Peak Code Domain Error is a floating point number (in dB) of the Peak Code Domain Error relative to the mean power</li> <li>9. Peak Code Domain Error Channel Number is the channel number in which the peak code domain error is detected at the max spreading factor.</li> <li>10. Number of active channels</li> <li>11. Time offset is a floating point number (in chip) of the pilot phase timing from the acquisition trigger point.</li> <li>12. CPICH power over a slot is a floating point number in dB of CPICH power over a measurement slot. In the MS mode the value returned is -999.</li> <li>13. Total power over a slot is a floating point number in dBm of total RF power over a measurement slot.</li> </ol>

Index: n <Mnemonic>	Results Returned
15	<p>Peak Hold Results:</p> <p>Peak Hold scalar results trace returns 13 comma-separated scalar results:</p> <ol style="list-style-type: none"> <li>1. RMS EVM is a floating point number (in percent) of EVM over the entire measurement area.</li> <li>2. Peak EVM is a floating point number (in percent) of peak EVM in the measurement area.</li> <li>3. Magnitude error is a floating point number (in percent) of average magnitude error over the entire measurement area.</li> <li>4. Phase error is a floating point number (in degree) holding the result with absolute maximum value of average phase error over the entire measurement area.</li> <li>5. I/Q origin offset is a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin.</li> <li>6. Frequency error is a floating point number (in Hz) holding the result with absolute maximum value of the frequency error in the measured signal.</li> <li>7. Rho is a floating point number holding the minimum result of Rho.</li> <li>8. Peak Code Domain Error is a floating point number (in dB) of the Peak Code Domain Error relative to the mean power.</li> <li>9. Peak Code Domain Error Channel Number is the channel number in which the peak code domain error is detected at the max spreading factor.</li> <li>10. Number of active channels.</li> <li>11. Time offset is a floating point number (in chip) of the pilot phase timing from the acquisition trigger point.</li> <li>12. CPICH power over a slot is a floating point number in dB of CPICH power over a measurement slot. In the MS mode the value returned is -999.</li> <li>13. Total power over a slot is a floating point number in dBm of total RF power over a measurement slot.</li> </ol>

Index: n <Mnemonic>	Results Returned
16	<p>Active RCDE Channel List:</p> <p>In BTS mode, it returns a series of floating point numbers: symbol rate (ex. 7.5 ksps), OVSF code number, a dummy value and relative code domain power for the active channels for Single Slot specified by Meas Offset.</p> <p>In MS mode, it returns a series of floating point numbers: symbol rate (ex. 15 ksps), OVSF code number, 1.0 (I) or -1.0 (Q) and relative code domain power for the active channels for Single Slot specified by Meas Offset. The results look like the following:</p> <p>1st number = Symbol Rate for 1st Active Channel</p> <p>2nd number = OVSF Code number for 1st Active Channel</p> <p>3rd number = (in BTS) 999, or (in MS) either +1 (I) or -1 (Q) for 1st Active Channel</p> <p>4th number = Relative Code Domain Error for 1st Active Channel</p> <p>5th number = -999 (Reserved for Mod Format for 1st Active Channel)</p> <p>...</p> <p>(N-1)5+1 number = Symbol Rate for Nth Active Channel</p> <p>(N-1)5+2 number = OVSF Code number for Nth Active Channel</p> <p>(N-1)5+3 number = 999 (in BTS), or either +1 (I) or -1 (Q) (in MS) for Nth Active Channel</p> <p>(N-1)5+4 number = Relative Code Domain Error for Nth Active Channel</p> <p>N5 number = -999 (Reserved for Mod Format for Nth Active Channel)</p> <p>Number of active channel is given by 10th parameter of :MEASure:RHO[1]..</p>



Index: n <Mnemonic>	Results Returned
17	<p>Average Results 2:</p> <p>This trace returns 10 comma-separated scalar results:</p> <ol style="list-style-type: none"> <li>1. Averaged 64QAM RCDE is a floating point number (in dB) of the Relative Code Domain Error averaged over 64QAM channels in capture interval. In the MS mode the value returned is -999.</li> <li>2. Peak Relative Code Domain Error is a floating point number (in dB) of the Peak Relative Code Domain Error relative to the mean power. In BTS mode, the value returned is -999.</li> <li>3. (Reserved) The value returned is -999.</li> <li>4.(Reserved) The value returned is -999.</li> <li>5. (Reserved) The value returned is -999.</li> <li>6. (Reserved) The value returned is -999.</li> <li>7. (Reserved) The value returned is -999.</li> <li>8. (Reserved) The value returned is -999.</li> <li>9. (Reserved) The value returned is -999.</li> <li>10. (Reserved) The value returned is -999.</li> </ol>
18	<p>Peak Hold Results2:</p> <p>This trace returns 10 comma-separated scalar results:</p> <ol style="list-style-type: none"> <li>1. Averaged 64QAM RCDE is a floating point number (in dB) of the Relative Code Domain Error averaged over 64QAM channels in capture interval. In the MS mode the value returned is -999.</li> <li>2. Peak Relative Code Domain Error is a floating point number (in dB) of the Peak Relative Code Domain Error relative to the mean power. In BTS mode, the value returned is -999.</li> <li>3. Peak Relative Code Domain Error Channel Symbol Rate is a floating point number (in Symbol Per Second) holding Symbol Rate of Peak Relative Code Domain Error channel. In BTS mode, the value returned is -999.</li> <li>4. Peak Relative Code Domain Error Channel Code Number is a floating point number holding OVSF Code Number of Peak Relative Code Domain Error channel. In BTS mode, the value returned is -999.</li> <li>5. Peak Relative Code Domain Error Channel I or Q is a floating point number which specifies whether the Peak Relative Code Domain Error channel is on I (+1) or Q (-1). In the BTS mode the value returned is -999.</li> <li>6. (Reserved) The value returned is -999.</li> <li>7. (Reserved) The value returned is -999.</li> <li>8. (Reserved) The value returned is -999.</li> <li>9. (Reserved) The value returned is -999.</li> <li>10. (Reserved) The value returned is -999.</li> </ol>

### Modulation Accuracy Measurement Description

QPSK EVM is for single channel analysis and does not take into account spreading and scrambling. Symbol EVM is for measuring a single coded channel. The composite EVM measurement is the modulation accuracy against the multi coded reference chip power through the spreading and scrambling circuits.

Rho is one of the key modulation quality metrics, along with EVM and Modulation Accuracy (Rho) power. Rho is the ratio of the correlated power in a multi coded channel to the total signal power. This measurement takes into account all possible error mechanisms in the entire transmission chain including: baseband filtering, I/Q modulation anomalies, filter amplitude and phase non-linearities, and power amplifier distortions.

This provides an overall indication of the performance level of the transmitter of the unit under test (UUT).

Key Path	Meas
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale

Accesses the AMPTD Y Scale menu that allows you to set the desired vertical scale and associated settings. This menu is available when the selected view is “[I/Q Error](#)” on page 1113 or “[Code Domain Power](#)” on page 1117. It is **not** available when in the following views:

“[Peak/Avg Metrics](#)” on page 1122

“[I/Q Measured Polar Graph](#)” on page 1105

“[Capture Time Summary](#)” on page 1128

“[Slot CDE/EVM](#)” on page 1132

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### Ref Value

Sets the absolute power reference value ranging from –500.00 to 500.00 dBm with 0.01 dB resolution. However, since Auto Scaling defaults to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### I/Q Error View - EVM Window

Sets the absolute power reference value in the EVM window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>  :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:RHO:VIEW2:WIND:TRAC:Y:RLEV 0.0 DISP:RHO:VIEW2:WIND:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  WINDow[1]: Evm window on I/Q Error view
Couplings	See Notes
Preset	0.00

Modulation Accuracy (Composite EVM) Measurement  
**AMPTD Y Scale**

State Saved	Saved in instrument state.
Min	-500.0
Max	500.0
Initial S/W Revision	Prior to A.02.00

**I/Q Error View – Mag Error Window**

Sets the absolute power reference value in the magnitude error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:RHO:VIEW2:WIND2:TRAC:Y:RLEV 0.0 DISP:RHO:VIEW2:WIND2:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  WINDow[2]: Mag Error window on I/Q Error view
Couplings	See Notes
Preset	0.00
State Saved	Saved in instrument state.
Min	-500.0
Max	500.0
Initial S/W Revision	Prior to A.02.00

**I/Q Error View – Phase Error Window**

Sets the absolute power reference value in the phase error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:RHO:VIEW2:WIND3:TRAC:Y:RLEV 0.0 DISP:RHO:VIEW2:WIND3:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA

Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  WINDow3: Phase Error window on I/Q Error view
Couplings	See Notes
Preset	0.00
State Saved	Saved in instrument state.
Min	-36000.0
Max	36000.0
Initial S/W Revision	Prior to A.02.00

### Slot CDE/EVM View – Evm Window

Sets the absolute power reference value for the slot-by-slot results in the EVM graph window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>  :DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:RHO:VIEW6:WIND:TRAC:Y:RLEV 0.0 DISP:RHO:VIEW6:WIND:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  WINDow[1]: Evm window on Slot CDE/EVM view
Couplings	See Notes
Preset	0.00
State Saved	Saved in instrument state.
Min	-500.0
Max	500.0
Initial S/W Revision	Prior to A.02.00

Modulation Accuracy (Composite EVM) Measurement  
**AMPTD Y Scale**

**Slot CDE/EVM View – Peak CDE Window**

Sets the absolute power reference value of the slot-by-slot results in the peak code domain error window.

<b>Remote Command</b>	:DISP:play:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:RLEVel <real>  :DISP:play:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:RHO:VIEW6:WIND2:TRAC:Y:RLEV 0.0 DISP:RHO:VIEW6:WIND2:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  For the Modulation Accuracy measurement, Y-scale in Hz is added to the “Peak CDE” window in the “Slot CDE/EVM” view, and the window number is ‘2’ (‘WINDow2’ in SCPI Command).
Couplings	See Notes
Preset	0.0
State Saved	Saved in instrument state.
Min	-250 dB
Max	250 dB
Initial S/W Revision	Prior to A.02.00

**Slot CDE/EVM View – Freq Error Window**

Sets the absolute power reference value of the slot-by-slot results in the frequency error window.

<b>Remote Command</b>	:DISP:play:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:RLEVel <freq>  :DISP:play:RHO:VIEW6:WINDow3:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:RHO:VIEW6:WIND3:TRAC:Y:RLEV 0.0 DISP:RHO:VIEW6:WIND3:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA

Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  For the Modulation Accuracy measurement, Y-scale in Hz is added to the “Freq Error” window in the “Slot CDE/EVM” view, and the window number is ‘3’ (‘WINDow3’ in SCPI Command).
Couplings	See Notes
Preset	0
State Saved	Saved in instrument state.
Min	–4.3214 GHz
Max	4.3214 GHz
Initial S/W Revision	Prior to A.02.00

### Code Domain Power View – Power Bar Graph Window

Sets the reference value for code domain power measurement results in the code domain power graph window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW3:WINDow[1]:TRACe:Y[:SCALE]:RLEVel <real>  :DISPlay:RHO:VIEW3:WINDow[1]:TRACe:Y[:SCALE]:RLEVel?
Example	DISP:RHO:VIEW3:WIND:TRAC:Y:RLEV 0.0 DISP:RHO:VIEW3:WIND:TRAC:Y:RLEV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.
Couplings	See Notes
Preset	0.00
State Saved	Saved in instrument state.
Min	–250.
Max	250.0
Initial S/W Revision	Prior to A.02.00

### Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back text that describes the total attenuator value.

Modulation Accuracy (Composite EVM) Measurement  
**AMPTD Y Scale**

See “Attenuation” on page 1406 under “AMPTD Y Scale” for more information.

This function is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

**Range**

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value.

For more information, see “Range” on page 1415.

This function is available only when the selected input is IQ.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W revision	A.03.00

**Scale/Div**

Sets the sensitivity for the vertical axis. The range is 0.10 to 50.00 dB with 0.01 dB resolution. However, since Auto Scaling defaults to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

**I/Q Error View - EVM Window**

Sets the sensitivity measurement result in the EVM window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVision <real> :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVision?
Example	DISP:RHO:VIEW2:WIND:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW2:WIND:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.
Couplings	See Notes
Preset	0.5



State Saved	Saved in instrument state.
Min	0.100
Max	50.0
Initial S/W Revision	Prior to A.02.00

### I/Q Error View – Mag Error Window

Sets the sensitivity measurement result in the magnitude error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision?
Example	DISP:RHO:VIEW2:WIND2:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW2:WIND2:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.
Couplings	See Notes
Preset	1.0
State Saved	Saved in instrument state.
Min	0.100
Max	50.0
Initial S/W Revision	Prior to A.02.00

### I/Q Error View – Phase Error Window

Sets the sensitivity measurement result in the phase error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision <real> :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision?
Example	DISP:RHO:VIEW2:WIND3:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW2:WIND3:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA

Modulation Accuracy (Composite EVM) Measurement  
**AMPTD Y Scale**

Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.
Couplings	See Notes
Preset	0.5
State Saved	Saved in instrument state.
Min	0.0100
Max	360.0
Initial S/W Revision	Prior to A.02.00

**Slot CDE/EVM View – Evm Window**

Sets the sensitivity for the slot-by-slot results in the EVM graph window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> :DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?
Example	DISP:RHO:VIEW6:WIND:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW6:WIND:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.
Couplings	See Notes
Preset	0.5
State Saved	Saved in instrument state.
Min	0.100
Max	50.0
Initial S/W Revision	Prior to A.02.00

**Slot CDE/EVM View – Peak CDE Window**

Sets the sensitivity for the slot-by-slot results in the peak code domain error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> :DISPlay:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:PDIVision?
-----------------------	---

Example	DISP:RHO:VIEW6:WIND2:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW6:WIND2:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.
Couplings	See Notes
Preset	0.1
State Saved	Saved in instrument state.
Min	0.100
Max	20.0
Initial S/W Revision	Prior to A.02.00

#### Slot CDE/EVM View – Freq Error Window

Sets the sensitivity for the slot-by-slot results in the frequency error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALE]:PDIVision <freq> :DISPlay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALE]:PDIVision?
Example	DISP:RHO:VIEW6:WIND3:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW6:WIND3:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.
Couplings	See Notes
Preset	1.0
State Saved	Saved in instrument state.
Min	1 Hz
Max	1 GHz
Initial S/W Revision	Prior to A.02.00

#### Code Domain Power View – Power Bar Graph Window

Sets the sensitivity result for the code domain power measurement in the code domain power graph

Modulation Accuracy (Composite EVM) Measurement  
**AMPTD Y Scale**

window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> :DISPlay:RHO:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?
Example	DISP:RHO:VIEW3:WIND:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW3:WIND:TRAC:Y:PDIV?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Couplings	No
Preset	10.00
State Saved	Saved in instrument state.
Min	0.10
Max	20.00
Initial S/W Revision	Prior to A.02.00

### Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See “[Presel Center](#)” on page 1421 under “AMPTD Y Scale” for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See “[Preselector Adjust](#)” on page 1422 under “AMPTD Y Scale” for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See “[Internal Preamp](#)” on page 1435 under “AMPTD Y Scale” for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display. Changing the reference position does not change the reference level value.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### I/Q Error View - EVM Window

Sets the reference position of the vertical axis in the EVM window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RPOSition TOP CENTer BOTTom :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RPOSition?
Example	DISP:RHO:VIEW2:WIND:TRAC:Y:RPOS TOP DISP:RHO:VIEW2:WIND:TRAC:Y:RPOS?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Preset	BOTTom
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

### I/Q Error View – Mag Error Window

Sets the reference position of the vertical axis in the magnitude error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALE]:RPOSition TOP CENTer BOTTom :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALE]:RPOSition?
Example	DISP:RHO:VIEW2:WIND2:TRAC:Y:RPOS TOP DISP:RHO:VIEW2:WIND2:TRAC:Y:RPOS?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA

Modulation Accuracy (Composite EVM) Measurement  
**AMPTD Y Scale**

Preset	CENTer
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

**I/Q Error View – Phase Error Window**

Sets the reference position of the vertical axis in the phase error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RPOStion TOP CENTer BOTTom  :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RPOStion?
Example	DISP:RHO:VIEW2:WIND3:TRAC:Y:RPOS TOP DISP:RHO:VIEW2:WIND3:TRAC:Y:RPOS?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Preset	CENTer
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

**Slot CDE/EVM View – Evm Window**

Sets the reference position of the vertical axis for the slot-by-slot results in the EVM graph window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RPOStion TOP CENTer BOTTom  :DISPlay:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:RPOStion?
Example	DISP:RHO:VIEW6:WIND:TRAC:Y:RPOS TOP DISP:RHO:VIEW6:WIND:TRAC:Y:RPOS?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Preset	BOTTom
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

**Slot CDE/EVM View – Peak CDE Window**

Sets the reference position of the vertical axis for the slot-by-slot results in the peak code domain error

window.

<b>Remote Command</b>	:DISP:RHO:VIEW6:WINDow2:TRACe:Y[:SCALE]:RPOSition TOP CENTer BOTTom  :DISP:RHO:VIEW6:WINDow2:TRACe:Y[:SCALE]:RPOSition?
Example	DISP:RHO:VIEW6:WIND2:TRAC:Y:RPOS TOP DISP:RHO:VIEW6:WIND2:TRAC:Y:RPOS?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Preset	TOP
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

### Slot CDE/EVM View – Freq Error Window

Sets the reference position of the vertical axis for the slot-by-slot results in the frequency error window.

<b>Remote Command</b>	:DISP:RHO:VIEW6:WINDow3:TRACe:Y[:SCALE]:RPOSition TOP CENTer BOTTom  :DISP:RHO:VIEW6:WINDow3:TRACe:Y[:SCALE]:RPOSition?
Example	DISP:RHO:VIEW6:WIND3:TRAC:Y:RPOS TOP DISP:RHO:VIEW6:WIND3:TRAC:Y:RPOS?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Preset	CENTer
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

### Auto Scaling

Toggles the Auto Scaling function between On and Off. When Auto Scaling is On, pressing the Restart front-panel key results in automatically determining scale per division and reference values based on the measurement results.

When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

**I/Q Error View - EVM Window**

When Auto Scaling is On, pressing the Restart front-panel key automatically displays the scale per division and reference value results for the vertical axis in the EVM window.

<b>Remote Command</b>	:DISP:lay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:COUple 0 1 OFF ON  :DISP:lay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:COUple?
Example	DISP:RHO:VIEW2:WIND:TRAC:Y:COUP ON DISP:RHO:VIEW2:WIND:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off.  WINDow[1]: EVM window on I/Q Error view
Couplings	See Notes
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

**I/Q Error View – Mag Error Window**

When Auto Scaling is On, pressing the Restart front-panel key automatically displays the scale per division and reference value results for the vertical axis in the magnitude error window.

<b>Remote Command</b>	:DISP:lay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALE]:COUple 0 1 OFF ON  :DISP:lay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALE]:COUple?
Example	DISP:RHO:VIEW2:WIND2:TRAC:Y:COUP ON DISP:RHO:VIEW2:WIND2:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA



Notes	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off.  WINDow[2]: Mag Error window on I/Q Error view
Couplings	See Notes
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### I/Q Error View – Phase Error Window

When Auto Scaling is On, pressing the Restart front-panel key automatically displays the scale per division and reference value results for the vertical axis in the phase error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALE]:COUPlE 0 1 OFF ON  :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALE]:COUPlE?
Example	DISP:RHO:VIEW2:WIND3:TRAC:Y:COUP ON DISP:RHO:VIEW2:WIND3:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off.  WINDow3: Phase Error window on I/Q Error view
Couplings	See Notes
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Slot CDE/EVM View – Evm Window

When Auto Scaling is On, pressing the Restart front-panel key automatically displays the scale per

Modulation Accuracy (Composite EVM) Measurement  
**AMPTD Y Scale**

division and reference value results for the slot-by-slot results in the EVM graph window.

<b>Remote Command</b>	:DISP:play:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON  :DISP:play:RHO:VIEW6:WINDow[1]:TRACe:Y[:SCALe]:COUPle?
Example	DISP:RHO:VIEW6:WIND:TRAC:Y:COUP ON DISP:RHO:VIEW6:WIND:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off.  WINDow1: Evm window on Slot CDE/EVM view
Couplings	See Notes
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

**Slot CDE/EVM View – Peak CDE Window**

When Auto Scaling is On, pressing the Restart front-panel key automatically displays the scale per division and reference value results for the slot-by-slot results in the peak code domain error window.

<b>Remote Command</b>	:DISP:play:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON  :DISP:play:RHO:VIEW6:WINDow2:TRACe:Y[:SCALe]:COUPle?
Example	DISP:RHO:VIEW6:WIND2:TRAC:Y:COUP ON DISP:RHO:VIEW6:WIND2:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off.  WINDow[2]: Evm window on Slot CDE/EVM view

Couplings	See Notes
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Slot CDE/EVM View – Freq Error Window

When Auto Scaling is On, pressing the Restart front-panel key automatically displays the scale per division and reference value results for the slot-by-slot results in the frequency error window.

<b>Remote Command</b>	:DISP:lay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALE]:COUPle 0 1 OFF ON  :DISP:lay:RHO:VIEW6:WINDow3:TRACe:Y[:SCALE]:COUPle?
Example	DISP:RHO:VIEW6:WIND3:TRAC:Y:COUP ON DISP:RHO:VIEW6:WIND3:TRAC:Y:COUP?
Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
Notes	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off.  WINDow3: Evm window on Slot CDE/EVM view
Couplings	See Notes
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

## **Auto Couple**

Operation of this key is identical across all measurements. For details about this key, see [“Auto Couple”](#) on page 1437.

---

## **BW**

There is no BW functionality supported in the Modulation Accuracy measurement. The front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## **Cont (Continuous Measurement/Sweep)**

Operation of this key is identical across several measurements. For details about this key, see “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451.

## **FREQ Channel**

Operation of this key is identical across all measurements in this application. For details, see [“FREQ/Channel” on page 1453](#).

## **Input/Output**

Operation of this key is identical across several measurements. For details about this key, see “Input/Output” on page 1459.



## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

See “[Marker](#)” on page 1531 for more information

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Select Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Marker Type

Sets the marker control mode. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, reference value of the selected marker appears on the Active Function area.

Active Function Display:

Marker symbol value at I/Q Symbol Polar Vector graph

Marker X-axis value at other graphs

Default Active Function: the active function for the selected marker’s current control mode. If the current control mode is Off, there is no active function and the active function is turned off.

The marker X axis value entered in the active function area displays the marker value to its full entered precision.

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSITION DELTA OFF  :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?
Example	CALC:RHO:MARK:MODE POS CALC:RHO:MARK:MODE?
Key Path	<b>Marker</b>
Mode	WCDMA

Notes	<p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.</p> <p>Default Active Function:</p> <p>The active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display:</p> <ul style="list-style-type: none"> <li>- the marker Chip value for the IQ Measured Polar graph</li> <li>- the marker X axis value for any other graph</li> </ul> <p>The value entered in the active function area displays the marker value to its full entered precision.</p>
Preset	OFF
State Saved	Saved in instrument state.
Range	Normal   Delta   Off
Initial S/W Revision	Prior to A.02.00

### Marker Chip Value (Remote Command only)

Sets the marker Chip value in the current marker for the I/Q Polar trace. It has no effect if the control mode is **Off**, but if the control mode is Normal, this is the SCPI equivalent of entering a Chip value.

This command is valid only when Marker Trace 'POLar'(I/Q Polar)is active. For any other Marker Trace, the command is ignored.

<b>Remote Command</b>	<pre>:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CHIP &lt;real&gt; :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CHIP?</pre>
Example	<pre>CALC:RHO:MARK:CHIP 0 CALC:RHO:MARK:CHIP?</pre>
Mode	WCDMA
Notes	<p>If no suffix is sent, 'chips' is used. If a suffix is sent that does not match 'chips', an error "Invalid suffix" is generated.</p> <p>The query returns the marker's 'chips' value in the trace if the control mode is <b>Normal</b> The query is returned in 'chips'. If the marker is <b>Off</b> the response is not a number (NAN).</p> <p>This parameter has different meanings when the marker trace is set to I/Q Polar and other cases. In the case of the I/Q Polar Graph, the X Axis Value is also the measured value, so this parameter is meaningful only when the control mode is set to Normal.</p>
Preset	Start point of the trace in the display window

State Saved	No
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

This command is not valid when Marker Trace is 'POLar' (I/Q Polar). The Marker Chip Value is supported instead.

<b>Remote Command</b>	:CALCulate:RHO:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :X <real>  :CALCulate:RHO:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :X?
Example	CALC:RHO:MARK3:X 0.0 CALC:RHO:MARK3:X?
Mode	WCDMA
Notes	If no suffix is sent, the fundamental units for the current marker X Axis Scale is used. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated.  The query returns the marker's absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker's reference marker, if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b> , seconds for <b>Period</b> and <b>Time</b> . If the marker is <b>Off</b> the response is not a number (NAN).
Preset	After a preset, all Markers are turned OFF, so a Marker X Axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37.
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for

Modulation Accuracy (Composite EVM) Measurement  
**Marker**

setting the value of the marker.

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSITION <real>  :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSITION?
Example	CALC:RHO:MARK10:X:POS 0.0  CALC:RHO:MARK10:X:POS?
Mode	WCDMA
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points, if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points. If the marker is <b>Off</b> the response is not a number (NAN).  This command is not available when Marker Trace of the selected marker (:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?) is set to POLar. In this case, this command is ignored.
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

**Marker Y Axis Value (Remote Command only)**

Queries the marker Y Axis value in the current unit for the marker Y Axis.

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:RHO:MARK11:Y?
Mode	WCDMA
Notes	If no suffix is sent, the current Y Axis unit is used. If a suffix is sent that is not expressed in units of absolute amplitude, an "Invalid suffix" error is generated.  The query returns the marker Y-axis result if the control mode is <b>Normal</b> or <b>Delta</b> . If the marker is <b>Off</b> the response is not a number (NAN).
Preset	Result dependent on Markers setup and signal source
State Saved	No
Initial S/W Revision	Prior to A.02.00

## Properties

Accesses a menu that enables you to select a reference marker and marker trace.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

## Select Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

Key Path	<b>Marker, Properties</b>
Initial S/W Revision	Prior to A.02.00

## Relative To

Selects the marker that the selected marker is relative to (its reference marker).

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer> :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?
Example	CALC:RHO:MARK:REF 3 CALC:RHO:MARK:REF?
Key Path	<b>Marker, Properties</b>
Mode	WCDMA
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error –221: “Settings conflict; marker cannot be relative to itself.” When queried, a single value is returned (the specified marker number’s relative marker). You must be in the Spectrum Analysis mode or GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Initial S/W Revision	Prior to A.02.00

### Marker Trace

Assigns the specified marker to the designated trace.

<b>Remote Command</b>	:CALCulate:RHO:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :TRACe CDPower   EVM   MERRor   PERRor   FERRor   EVMSlot   PCDE   POLar  :CALCulate:RHO:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :TRACe ?
Example	CALC:RHO:MARK2:TRAC EVM CALC:RHO:MARK:TRACE?
Key Path	<b>Marker</b>
Mode	WCDMA
Preset	EVM
State Saved	Saved in instrument state.
Range	CDP   EVM   Mag Err   Phase Err   Freq Err   Slot EVM   Peak CDE   IQ Polar
Initial S/W Revision	Prior to A.02.00

### Couple Markers

Toggles the state of the markers to be coupled On or Off. When this function is true (On), moving any marker causes an “equal X Axis movement” of every other marker which is active. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going offscreen.

<b>Remote Command</b>	:CALCulate:RHO:MARKer:COUple[:STATE] ON OFF 1 0 :CALCulate:RHO:MARKer:COUple[:STATE]?
Example	CALC:RHO:MARK:COUP ON CALC:RHO:MARK:COUP?
Key Path	<b>Marker</b>
Mode	WCDMA
Notes	When the marker is assigned to the IQ Measured Polar graph, a Chip value is coupled instead of an X Axis value.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

## All Markers Off

Turns off all markers.

<b>Remote Command</b>	:CALCulate:RHO:MARKer:AOff
Example	CALC:RHO:MARK:AOff
Key Path	<b>Marker</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## **Marker Function**

There are no 'Marker Functions' supported in Modulation Accuracy. The front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00



---

## Marker To

There is no 'Marker To' functionality supported in Modulation Accuracy. The front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## **Meas**

Operation of this key is identical across all measurements. For details about this key, see [“Meas” on page 1575](#).

## Meas Setup

Displays the measurement setup menu for the currently selected measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Avg Number

Sets the number of data acquisitions that are averaged. After the specified number of average counts is reached, the averaging mode (termination control) setting determines the averaging action.

<b>Remote Command</b>	[ :SENSE] :RHO:AVErAge:COUnT <integer> [ :SENSe] :RHO:AVErAge:COUnT? [ :SENSe] :RHO:AVErAge[ :STATe] OFF ON 0 1 [ :SENSe] :RHO:AVErAge[ :STATe] ?
Example	RHO:AVER:COUN 100 RHO:AVER:COUN? RHO:AVER OFF RHO:AVER?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	10 ON
State Saved	Saved in instrument state.
Min	1
Max	10000
Initial S/W Revision	Prior to A.02.00

### Avg Mode

Selects the type of termination control used for the averaging function. This determines the averaging action after the specified number of data acquisitions (average count) is reached. You can select between the **Exp** (exponential) and **Repeat** averaging modes. This selection only affects the averaging result after

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

the number of N averages is reached. You can use the **Avg Number** key to set N.

KEY: Exponential averaging SCPI: EXPonential	When Measure is set at Cont, data acquisitions continue indefinitely. After N averages, exponential averaging is used with a weighting factor of N (the displayed average count stops at N). Exponential averaging weights new data more than old data, which allows tracking of slow-changing signals.
KEY: Repeat averaging SCPI: REPEAT	When Measure is set at Cont, data acquisitions continue indefinitely. After N averages is reached, all previous result data is cleared and the average count is set back to 1. This is equivalent to being in Measure Single and pressing the Restart key when the Single measurement finishes.

<b>Remote Command</b>	[ :SENSE]:RHO:AVERAge:TCONtrol EXPonential REPEAT [ :SENSE]:RHO:AVERAge:TCONtrol?
Example	RHO:AVER:TCON EXP RHO:AVER:TCON?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Preset	REPEAT
State Saved	Saved in instrument state.
Range	Exp Repeat
Initial S/W Revision	Prior to A.02.00

**Frame Capture Interval (Remote Command only)**

Sets the frame capture interval time.

<b>Remote Command</b>	[ :SENSE]:RHO:CAPTure:TIME[:FRAME] <real> [ :SENSE]:RHO:CAPTure:TIME[:FRAME]?
Example	RHO:CAPT:TIME 1.0 RHO:CAPT:TIME?
Mode	WCDMA
Preset	1.0
State Saved	Saved in instrument state.
Range	0.067, 0.2, 1.0 frame (0.67 to 80 ms; 1/15 frame equals 1 slot).
Initial S/W Revision	Prior to A.02.00

### Capture Interval

Sets the data capture length in frames to be used in the acquisition. Please note that 1 frame equals 10 ms.

Key Path	<b>Meas Setup</b>
Mode	WCDMA
Couplings	Changing this parameter forces a change to RHO:CAPT:TIME 1 slot: 0.067 3 slots: 0.2 1 frame: 1.0
Preset	1 frame
State Saved	Saved in instrument state.
Range	1 slot   3 slots   1 frame
Readback Text	1 slot   3 slots   1 frame
Initial S/W Revision	Prior to A.02.00

### Meas Offset

Sets the timing offset of the capture interval in slots, where 1 slot = 666.6 us. If the Capture Interval is set to 1 slot (Fast Mode), the Meas Offset is fixed at “0”.

<b>Remote Command</b>	CALCulate:RHO:SWEep:OFFSet <integer> CALCulate:RHO:SWEep:OFFSet?
Example	CALC:RHO:SWE:OFFS 0 CALC:RHO:SWE:OFFS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Couplings	Max value is limited by Capture Interval in slot.
Preset	0
State Saved	Saved in instrument state.
Min	0
Max	Capture Interval in Slot – 1
Initial S/W Revision	Prior to A.02.00

## Limits

Accesses a menu that allows you to set the following limits:

RMS EVM (Composite)

Peak EVM (Composite)

Rho (Composite)

Peak Code Domain

Frequency Error

CPICH Reference

CPICH Tolerance

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

## RMS EVM (Composite)

Sets the limit for the composite RMS EVM measurement pass/fail test.

<b>Remote Command</b>	:CALCulate:RHO:LIMit:RMS <real> :CALCulate:RHO:LIMit:RMS?
Example	CALC:RHO:LIM:RMS 10.0 CALC:RHO:LIM:RMS?
Key Path	<b>Meas Setup, Limits</b>
Mode	WCDMA
Preset	17.5
State Saved	Saved in instrument state.
Min	0.00
Max	100.00
Initial S/W Revision	Prior to A.02.00

## Peak EVM (Composite)

Sets the limit for the composite peak EVM measurement pass/fail test.

<b>Remote Command</b>	:CALCulate:RHO:LIMit:PEAK <real> :CALCulate:RHO:LIMit:PEAK?
Example	CALC:RHO:LIM:PEAK 50.0 CALC:RHO:LIM:PEAK?

Key Path	<b>Meas Setup, Limits</b>
Mode	WCDMA
Preset	200.0
State Saved	Saved in instrument state.
Min	0.0
Max	200.0
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	Prior to A.03.00

### Rho (Composite)

Sets the limit for the composite Rho measurement pass/fail test.

<b>Remote Command</b>	:CALCulate:RHO:LIMit:RHO <real> :CALCulate:RHO:LIMit:RHO?
Example	CALC:RHO:LIM:RHO 0.9 CALC:RHO:LIM:RHO?
Key Path	<b>Meas Setup, Limits</b>
Mode	WCDMA
Preset	0.50000
State Saved	Saved in instrument state.
Min	0
Max	1
Initial S/W Revision	Prior to A.02.00

### Peak Code Domain Error

Sets the limit in dB for the composite Peak Code Domain Error measurement pass/fail test.

<b>Remote Command</b>	:CALCulate:RHO:LIMit:CDERror <real> :CALCulate:RHO:LIMit:CDERror?
Example	CALC:RHO:LIM:CDER -50.0 CALC:RHO:LIM:CDER?
Key Path	<b>Meas Setup, Limits</b>
Mode	WCDMA
Preset	-32.0

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

State Saved	Saved in instrument state.
Min	-100
Max	0
Initial S/W Revision	Prior to A.02.00

**Frequency Error**

Sets the limit for the frequency error measurement pass/fail test.

<b>Remote Command</b>	:CALCulate:RHO:LIMit:FERRor <freq> :CALCulate:RHO:LIMit:FERRor?
Example	CALC:RHO:LIM:FERR 200 CALC:RHO:LIM:FERR?
Key Path	<b>Meas Setup, Limits</b>
Mode	WCDMA
Preset	100.0 Hz
State Saved	Saved in instrument state.
Min	0 Hz
Max	500 Hz
Initial S/W Revision	Prior to A.02.00

**CPICH Reference**

Sets the limit for CPICH Reference Power (relative power to total carrier power) in dB. The limit value set by this command is used only when [:SENSE]:RADio:DEVIce is set to BTS.

<b>Remote Command</b>	:CALCulate:RHO:LIMit:CPICH[:BTS]:POWer <real> :CALCulate:RHO:LIMit:CPICH[:BTS]:POWer?
Example	CALC:RHO:LIM:CPIC:POW -30.0 CALC:RHO:LIM:CPIC:POW?
Key Path	<b>Meas Setup, Limits</b>
Mode	WCDMA
Preset	-10.0
State Saved	Saved in instrument state.
Min	-100
Max	0
Initial S/W Revision	Prior to A.02.00



### CPICH Tolerance

Sets the limit, in dB, for the CPICH Tolerance measurement pass/fail test.

<b>Remote Command</b>	:CALCulate:RHO:LIMit:CPICH[:BTS] <real> :CALCulate:RHO:LIMit:CPICH[:BTS] ?
Example	CALC:RHO:LIM:CPIC 30.0 CALC:RHO:LIM:CPIC?
Key Path	<b>Meas Setup, Limits</b>
Mode	WCDMA
Preset	100.0
State Saved	Saved in instrument state.
Range	0.0 to 100.0
Initial S/W Revision	Prior to A.02.00

### Sync Type

Accesses a menu that enables you to select the channel to synchronize with.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

### Sync Type BTS

Accesses the menu that enables you to select the channel to synchronize with, and to set features, such as Symbol Rate, that may affect synchronization. You can select from the following types of channels and features listed in the menu:

CPICH - Synchronize with the common pilot channel (CPICH).

SCH - Synchronize with the synchronization channel (SCH).

Symbol Based - Allows you to access the menu that allows you to select the code symbol to synchronize with.

Symbol Rate - Allows you to set the symbol rate, ranging from 7.5 to 960 kbps. The parameter automatically sets the maximum value for Code Number when appropriate.

Code Number - Allows you to set the code number. The range is 0 to 511, depending on the Symbol Rate setting.

Antenna-2 CPICH - Allows you to synchronize with the STTD Antenna-2 common pilot channel.

STTD Diff - Allows you to synchronize to the common pilot channel at STTD antenna-1 and antenna-2 to make Diversity Time Error measurements.

TSTD SCH Antenna1 - Allows you to synchronize the antenna1 of TSTD SCH.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

TSTD SCH Antenna2 – Allows you to synchronize the antenna2 of TSTD SCH.

<b>Remote Command</b>	[ :SENSE] :RHO:SYNC [ :BTS] CPICH   SCH   SYMBol   STTD   A2CPich   A1Sch   A2Sch [ :SENSE] :RHO:SYNC [ :BTS] ?
Example	RHO:SYNC SCH RHO:SYNC?
Key Path	<b>Meas Setup, Sync Type</b>
Mode	WCDMA
Notes	This command is effective when [:SENSE]:RADio:DEvice is set to BTS.
Dependencies	See Notes
Couplings	SYMBOL: synchronize to the code symbol specified by [:SENSE]:RHO:SYNC:SYMBOL:SRATE and the [:SENSE]:RHO:SYNC:SYMBOL:SPREAD commands.
Preset	CPICH
State Saved	Saved in instrument state.
Range	CPICH   SCH   Symbol Based   STTD Diff   Antenna–2 CPICH   Antenna–1 TSTD SCH   Antenna–2 TSTD SCH
Initial S/W Revision	Prior to A.02.00

**Pilot-aided Timing Estimator (BTS only)**

Enables additional symbol timing estimation to each detected code channel through the demod calculation process by referring to the pilot channel (i.e., CPICH or Ant2 CPICH, accordingly) timing correlation. It should improve symbol reference vector estimation robustness for some specific impairment conditions. For example, the signal under test is assumed to have asymmetric filter response. Note that this function would not always be effective for any signal conditions; on the contrary, turning the function “on” may decrease the estimation robustness and measurement speed for certain cases. For example, this function may be helpful if you find that the peak EVM result is unexpectedly high compared to the RMS EVM result.

<b>Remote Command</b>	[ :SENSE] :RHO:SYNC:CPICH:ESTimator OFF   ON   0   1 [ :SENSE] :RHO:SYNC:CPICH:ESTimator?
Example	RHO:SYNC:CPICH:EST 0 RHO:SYNC:CPICH:EST?
Key Path	<b>Meas Setup, Sync Type, CPICH</b> <b>Meas Setup, Sync Type, Antenna–2 CPICH</b>
Mode	WCDMA
Dependencies	This command is effective when [:SENSE]:RADio:DEvice is set to BTS and [:SENSE]:RHO:SYNC[:BTS] is set to CPICH or A2CPich.

Preset	Off
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	A.03.00

### Synchronization Symbol Rate [BTS only]

Sets the symbol rate of the code symbol to synchronize with. The parameter automatically sets the maximum value for the Code Number when appropriate. This command is currently available only for BTS.

<b>Remote Command</b>	<code>[ :SENSe ] :RHO :SYNC :SYMBol :SRATe &lt;integer&gt;</code> <code>[ :SENSe ] :RHO :SYNC :SYMBol :SRATe ?</code>
Example	<code>RHO:SYNC:SYMB:SRAT 15000</code> <code>RHO:SYNC:SYMB:SRAT?</code>
Key Path	<b>Meas Setup, Sync Type, Symbol Based</b>
Mode	WCDMA
Notes	This command is effective when <code>[ :SENSe ] :RADio :DEVIce</code> is set to BTS, and <code>[ :SENSe ] :RHO :SYNC [ :BTS ]</code> is set to SYMBol.
Dependencies	See Notes
Preset	7500
State Saved	Saved in instrument state.
Range	7500 15000 30000 60000 120000 240000 480000 960000
Initial S/W Revision	Prior to A.02.00

### Synchronization Code Number [BTS only]

Sets the spread code number of the code symbol to synchronize with. The range depends on the Symbol Rate setting. This command is available only for BTS.

<b>Remote Command</b>	<code>[ :SENSe ] :RHO :SYNC :SYMBol :SPReAd &lt;integer&gt;</code> <code>[ :SENSe ] :RHO :SYNC :SYMBol :SPReAd ?</code>
Example	<code>RHO:SYNC:SYMB:SPR 3</code> <code>RHO:SYNC:SYMB:SPR ?</code>
Key Path	<b>Meas Setup, Sync Type, Symbol Based</b>
Mode	WCDMA
Notes	This command is effective when <code>[ :SENSe ] :RADio :DEVIce</code> is set to BTS, and <code>[ :SENSe ] :RHO :SYNC [ :BTS ]</code> is set to SYMBol.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Dependencies	See Notes
Preset	1
State Saved	Saved in instrument state.
Min	0
Max	511, when [:SENSe]:RHO:SYNC:SYMBOL:SRATe =7500 255, when [:SENSe]:RHO:SYNC:SYMBOL:SRATe =15000 127, when [:SENSe]:RHO:SYNC:SYMBOL:SRATe =30000 63, when [:SENSe]:RHO:SYNC:SYMBOL:SRATe =60000 31, when [:SENSe]:RHO:SYNC:SYMBOL:SRATe =120000 15, when [:SENSe]:RHO:SYNC:SYMBOL:SRATe =240000 7, when [:SENSe]:RHO:SYNC:SYMBOL:SRATe =480000 3, when [:SENSe]:RHO:SYNC:SYMBOL:SRATe =960000
Initial S/W Revision	Prior to A.02.00

**Sync Type MS**

Accesses a menu that enables you to select the channel to synchronize with. You can select from the following types listed in the menu:

DPCCh - Synchronize to DPCCH and the Slot Format which is specified by [:SENSe]:RHO:SFORmat:MS

PMESsage - Synchronize to PRACH Message and the Slot Format which is specified by [:SENSe]:RHO:PRACH:SIGNature and [:SENSe]:RHO:SFORmat:MS.

<b>Remote Command</b>	[ :SENSe ] :RHO:SYNC:MS DPCCh   PMESsage [ :SENSe ] :RHO:SYNC:MS?
Example	RHO:SYNC:MS DPCC RHO:SYNC:MS?
Key Path	<b>Meas Setup, Sync Type</b>
Mode	WCDMA
Notes	This command is effective when [:SENSe]:RADio:DEVice is set to MS.
Dependencies	See Notes
Preset	DPCCh
State Saved	Saved in instrument state.
Range	DPCCH   PRACH Message
Initial S/W Revision	Prior to A.02.00

## P Scramble Code [BTS only]

Sets the BTS primary scramble code for synchronization. The BTS scramble code number (Down Link) is determined by the “Primary Scramble Code”, “Scramble Code Offset” and “Scramble Code Type”.

The following information is an excerpt from TS25.213 Section 5.2.2 Scramble Code.

A total of  $218-1 = 262,143$  scrambling codes, numbered  $0 \dots 262,142$  can be generated. However, not all the scrambling codes are used. The scrambling codes are divided into 512 sets, each consisting of a primary scrambling code and 15 secondary scrambling codes.

The primary scrambling codes consist of scrambling codes  $n=16*i$  where  $i=0 \dots 511$ . The  $i$ :th set of secondary scrambling codes consists of scrambling codes  $16*i+k$ , where  $k=1 \dots 15$ .

There is a one-to-one mapping between each primary scrambling code and the 15 secondary scrambling codes in a set such that  $i$ :th primary scrambling code corresponds to  $i$ :th set of secondary scrambling codes.

Hence, according to the above, scrambling codes  $k = 0, 1, \dots, 8191$  are used. Each of these codes is associated with a left alternative scrambling code and a right alternative scrambling code that may be used for compressed frames. The left alternative scrambling code corresponding to scrambling code  $k$  is scrambling code number  $k + 8192$ , while the right alternative scrambling code corresponding to scrambling code  $k$  is scrambling code number  $k + 16384$ . The alternative scrambling codes can be used for compressed frames. In this case, the left alternative scrambling code is used if  $n < SF/2$ , and the right alternative scrambling code is used if  $n \geq SF/2$ , where  $cch, SF, n$  is the channelization code used for non-compressed frames. The usage of an alternative scrambling code for compressed frames is signalled by higher layers for each physical channel respectively.

The Primary Scramble Code corresponds to  $i$  ( $i=0 \dots 511$ ), the Scramble Code Offset corresponds to  $k$  ( $k= 1 \dots 15$ : Secondary Scramble Code,  $0$ : Primary Scramble Code) and the Scramble Code Type Left and Right correspond to  $+8192$  and  $+16384$  offsets respectively.

If the Device is set to BTS, allows you to enter a numeric value for the primary scramble code. The range is 0 to 511.

If the Device is set to MS, this label changes to Slot Format to define the DPCCCH pilot pattern to synchronize with. It allows you to enter either 0 or 2 slot formats.

<b>Remote Command</b>	<code>[ :SENSE] :RHO:SYNC:SCRamble[ :BTS] &lt;integer&gt;</code> <code>[ :SENSe] :RHO:SYNC:SCRamble[ :BTS] ?</code>
Example	<code>RHO:SYNC:SCR 100</code> <code>RHO:SYNC:SCR?</code>
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	This command is effective when <code>[ :SENSe]:RADio:DEVICE</code> is set to BTS.
Dependencies	See Notes
Preset	0
State Saved	Saved in instrument state.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Min	0
Max	511
Initial S/W Revision	Prior to A.02.00

**Slot Format [MS only]**

Defines the uplink DPCCH pilot pattern to synchronize with. This key is available when **DPCCH** is selected under **Sync Type**. The command is effective when the [:SENSe]:RHO:SYNC:MS command is set to DPCCh.

(0A, 0B, 2A, 2B, 5A and 5B are not supported, because the compressed mode is not supported.)

<b>Remote Command</b>	[ :SENSe ] :RHO :SFORmat :MS SF0   SF1   SF2   SF3   SF4   SF5 [ :SENSe ] :RHO :SFORmat :MS?
Example	RHO:SFOR:MS SF0 RHO:SFOR:MS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	This command is effective when [:SENSe]:RADio:DEvice is set to MS, and [:SENSe]:RHO:SYNC:MS is set to DPCCh.
Dependencies	See Notes
Preset	SF0
State Saved	Saved in instrument state.
Range	SF0 SF1 SF2 SF3 SF4 SF5
Initial S/W Revision	Prior to A.02.00

**Preamble Signature [MS only]**

Sets the PRACH Preamble Signature number for PRACH Message detection. Based on this value, the code allocation of the PRACH message control part is calculated. This command is effective when the [:SENSe]:RHO:SYNC:MS command is set to PMESsage (PRACH Message).

PRACH message (Control) has only Slot Format #0. The field lengths are defined in the table below. Demod attribute information is colored according to the given Slot Format parameter. Using input parameter Slot Format #i, bit data is colored accordingly (for example, Npilot and NTFCI).

PRACH message Control field Information (TS25.211 V.3.9.0)

Slot Format #i	Channel Bit Rate (kbps)	Channel Symbol Rate (ksps)	SF	Bits/ Frame	Bits/ Slot	Npilot	NTFCI
0	15	15	256	150	10	8	2

Select Auto or Man (Manual). Auto corresponds to “ON” for the [:SENSe]:RHO:PRACH:SIGNature:AUTO command. When Auto is selected, it searches and synchronizes the PRACH Message control part automatically. The code for the control part is assigned according to the PRACH Preamble Signature number. It can find the code number for the control part from 16 possible cases. But it takes more time than manual setting. “---“ is shown initially. When Man is selected, it synchronizes with the code specified by the Preamble Signature.

The value is set at its auto number and “---“ is replaced with the detected number, if PRACH Search is set to Auto and PRACH Message sync is done (PRACH Message control part is detected) successfully. Otherwise the value is not changed.

This function does not check the Preamble Signature itself. Instead, using this information, it identifies the code location for the PRACH Message control part. The relationship between “Preamble Signature” and “code location for PRACH Message control part” is a one-to-one correspondence.

<b>Remote Command</b>	[:SENSe]:RHO:PRACH:SIGNature <integer> [:SENSe]:RHO:PRACH:SIGNature? [:SENSe]:RHO:PRACH:SIGNature:AUTO OFF ON 0 1 [:SENSe]:RHO:PRACH:SIGNature:AUTO?
Example	RHO:PRAC:SIGN 3 RHO:PRAC:SIGN? RHO:PRAC:SIGN:AUTO OFF RHO:PRAC:SIGN:AUTO?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	This command is effective when [:SENSe]:RADio:DEVICE is set to MS, and [:SENSe]:RHO:SYNC:MS is set to PMESsage. Set Signature Auto mode ON for PRACH Preamble detection.
Dependencies	See Notes
Preset	0 ON
State Saved	Saved in instrument state.
Min	0
Max	15
Initial S/W Revision	Prior to A.02.00

### Scramble Code Offset [BTS only]

Sets the number of scramble code offsets needed to make the modulation accuracy measurement. This

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

key is not available if Device is set to MS.

<b>Remote Command</b>	[ :SENSe ] :RHO:SYNC:SCRamble[ :BTS ] :OFFSet <integer> [ :SENSe ] :RHO:SYNC:SCRamble[ :BTS ] :OFFSet?
Example	RHO:SYNC:SCR:OFFS 5 RHO:SYNC:SCR:OFFS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	This command is effective when [:SENSe]:RADio:DEvice is set to BTS.
Dependencies	See Notes
Preset	0
State Saved	Saved in instrument state.
Range	0 to 15 (0 for the primary scramble code; 1 to 15 for the secondary scramble code)
Initial S/W Revision	Prior to A.02.00

**Scramble Code [MS only]**

Set the MS scramble code for synchronization. When this key is selected, the “Hex Input” menu appears.

<b>Remote Command</b>	[ :SENSe ] :RHO:SYNC:SCRamble:MS <integer> [ :SENSe ] :RHO:SYNC:SCRamble:MS?
Example	RHO:SYNC:SCR:MS 10000000 RHO:SYNC:SCR:MS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	This command is effective when [:SENSe]:RADio:DEvice is set to MS.
Dependencies	See Notes
Preset	0 (0x0)
State Saved	Saved in instrument state.
Range	0 to 16777215 (0x0 to 0xFFFFF; 24 bits)
Initial S/W Revision	Prior to A.02.00

**Scramble Code Type [BTS only]**

Sets the BTS primary scramble code type for synchronization.



Enables you to set the scramble code type to Std (standard), Left, or Right to make the modulation accuracy measurement. This key is not available if Device is set to MS.

LEFT – the left alternative scrambling code whose number is the primary scramble code number + 8192 is used.

RIGHT – the right alternative scrambling code whose number is the primary scrambling code number + 16384 is used.

STANdard – the standard scrambling code whose number is the primary scrambling code number is used.

<b>Remote Command</b>	[ :SENSE ] :RHO :SYNC :SCRamble [ :BTS ] :TYPE LEFT   RIGHT   STANdard [ :SENSE ] :RHO :SYNC :SCRamble [ :BTS ] :TYPE?
Example	RHO:SYNC:SCR:TYPE LEFT RHO:SYNC:SCR:TYPE?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	This command is effective when [:SENSE]:RADio:DEvice is set to BTS.
Dependencies	See Notes
Preset	STANdard
State Saved	Saved in instrument state.
Range	Std Left Right
Initial S/W Revision	Prior to A.02.00

### Symbol Boundary [BTS only]

Accesses the menu for the symbol boundary detection modes that are used to make the modulation accuracy measurement.

**Auto** [SCPI Enum: AUTO] - Sets symbol boundary detection to the automatic mode. Various code channels are measured and the most appropriate code channel is selected as the reference channel.

Lower level menus enable further selection of various numbers of DPCH channels to make the Modulation Accuracy Measurement.

**Test Model 1** - Accesses a menu with further selections of Test Model 1 with 16, 32 or 64 DPCH channels and with S-CCPCH.

**Test Model 1 w/16 DPCH w/ S-CCPCH** [SCPI Enum: TM1D16] - Select this to set the Modulation Accuracy Measurement to the Test Model 1 with 16 DPCH channels and 1 S-CCPCH channel.

**Test Model 1 w/32 DPCH w/ S-CCPCH** [SCPI Enum: TM1D32] - Select this to set the Modulation Accuracy Measurement to Test Model 1 with 32 DPCH channels and 1 S-CCPCH channel.

**Test Model 1 w/64 DPCH w/ S-CCPCH** [SCPI Enum: TM1D64] - Select this to set the Modulation

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Accuracy Measurement to Test Model 1 with 64 DPCH channels and 1 S-CCPCH channel.

**Test Model 2** - Accesses a menu with selections of Test Model 2 with S-CCPCH.

**Test Model 2 w/S-CCPCH** [SCPI Enum: TM2SC] - Select this to set the Modulation Accuracy Measurement to Test Model 2 with 1 S-CCPCH channel.

**Test Model 3** - Accesses a menu with further selections from Test Model 3 with 16 or 32 DPCH channels and with S-CCPCH.

**Test Model 3 w/16 DPCH w/ S-CCPCH** [SCPI Enum: TM3D16SC] - Select this to set the Modulation Accuracy Measurement to Test Model 3 with 16 DPCH channels and 1 S-CCPCH channel.

**Test Model 3 w/32 DPCH w/ S-CCPCH** [SCPI Enum: TM3D32SC] - Select this to set the Modulation Accuracy Measurement to Test Model 3 with 32 DPCH channels and 1 S-CCPCH channel.

**Test Model 4** - Accesses a menu with further selections of Test Model 4.

**Test Model 4 w/P-CPICH** [SCPI Enum: TM4CP] - Select this to set the Modulation Accuracy Measurement to Test Model 4 with 1 CPICH channel.

**Test Model 4** [SCPI Enum: TM4] - Select this to set the Modulation Accuracy Measurement to Test Model 4 (no CPICH channel).

**Test Model 5** - Accesses a menu with further selections of Test Model 5. This feature is grayed out if ‘HSPA Enable’ is ‘Off’.

**Test Model 5 w/2 HS-PDSCH w/6 DPCH** [SCPI Enum: TM5H2] - Select this to set the Modulation Accuracy Measurement to Test Model 5 with 2 HS-PDSCH channels and 6 DPCH channels.

**Test Model 5 w/4 HS-PDSCH w/14 DPCH** [SCPI Enum: TM5H4] - Select this to set the Modulation Accuracy Measurement to Test Model 5 with 4 HS-PDSCH channels and 14 DPCH channels.

**Test Model 5 w/8 HS-PDSCH w/30 DPCH** [SCPI Enum: TM5H8] - Select this to set the Modulation Accuracy Measurement to Test Model 5 with 8 HS-PDSCH channels and 30 DPCH channels.

**Test Model 6** - Press this key to access a menu to allow further selections of Test Model 6. Should be grayed out if the ‘HSPA Enable’ is ‘Off’.

**Test Model 6 w/8 HS-PDSCH w/30 DPCH** [SCPI Enum: TM6H8] - Select this to set the Code Domain Power measurement to Test Model 6 with 8 HS-PDSCH channels and 30 DPCH channels.

**Custom** [SCPI Enum: CUSTom] – “Custom” choice provides a flexible way to specify predefined active channels. By choosing it, you can specify a customized list of active channels using the following remote command: Initialize List, Append List and Replace List.

<b>Remote Command</b>	[ :SENSe] :RHO:SBOundary [ :BTS] AUTO   TM1D16   TM1D32   TM1D64   TM1D16SC   TM1D32SC   TM1D64SC   TM 2   TM2SC   TM3D16   TM3D32   TM3D16SC   TM3D32SC   TM4   TM4CP   TM5H2   TM5H4   TM5H8   TM6H8   CUSTom  [ :SENSe] :RHO:SBOundary [ :BTS] ?
Example	RHO:SBO:BTS TM1D16 RHO:SBO:BTS?
Key Path	<b>Meas Setup</b>

Mode	WCDMA
Notes	This command is effective when [:SENSe]:RADio:DEVice is set to BTS.
Dependencies	See Notes
Couplings	If the “Radio Device” selection is “MS”, a different softkey (Symbol Boundary MS) appears instead of this softkey.
Preset	AUTO
State Saved	Saved in instrument state.
Range	Auto Detect  Test Model 1 w/ 16 DPCH w/ S_CCPCH   Test Model 1 w/ 32 DPCH w/ S_CCPCH   Test Model 1 w/ 64 DPCH w/ S_CCPCH   Test Model 1 w/ 16 DPCH   Test Model 1 w/ 32 DPCH   Test Model 1 w/ 64 DPCH   Test Model 2 w/ S_CCPCH   Test Model 2   Test Model 3 w/ 16 DPCH w/ S_CCPCH   Test Model 3 w/ 32 DPCH w/ S_CCPCH   Test Model 3 w/ 16 DPCH   Test Model 3 w/ 32 DPCH   Test Model 4 w/ P-CPICH   Test Model 4   Test Model 5 w/ 2 HS-PDSCH w/ 6 DPCH   Test Model 5 w/ 4 HS-PDSCH w/ 14 DPCH   Test Model 5 w/ 8 HS-PDSCH w/ 30 DPCH   Test Model 6 w/ 8 HS-PDSCH w/ 30 DPCH   Custom
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Test Model 1 [BTS only]**

Allows you to select from a variety of configurations using Test Model 1.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

3GPP TS25.141 Table 6.1: Test Model 1 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	1.6	-18	16	120
S-CCPCH containing PCH (SF=256)	1	1.6	-18	3	0
DPCH (SF=128)	16/32/64	76.8 in total	See 3GPP TS25.141 Table 6.2	See 3GPP TS25.141 Table 6.2	See 3GPP TS25.141 Table 6.2

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 1 w/16 DPCH w/S-CCPCH [BTS only]**

Selects standard Test Model 1 w/16 DPCH w/S-CCPCH.

3GPP TS25.141 Table 6.1: Test Model 1 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	1.6	-18	16	120
S-CCPCH containing PCH (SF=256)	1	1.6	-18	3	0
DPCH (SF=128)	16/32/64	76.8 in total	See 3GPP TS25.141 Table 6.2	See 3GPP TS25.141 Table 6.2	See 3GPP TS25.141 Table 6.2

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 1</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 1 w/32 DPCH w/S-CCPCH [BTS only]**

Selects standard Test Model 1 w/32 DPCH w/S-CCPCH.

3GPP TS25.141 Table 6.1: Test Model 1 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	1.6	-18	16	120
S-CCPCH containing PCH (SF=256)	1	1.6	-18	3	0
DPCH (SF=128)	16/32/64	76.8 in total	See 3GPP TS25.141 Table 6.2	See 3GPP TS25.141 Table 6.2	See 3GPP TS25.141 Table 6.2

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 1</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 1 w/64 DPCH w/S-CCPCH [BTS only]**

Selects standard Test Model 1 Selects standard Test Model 1 w/64 DPCH w/S-CCPCH.

3GPP TS25.141 Table 6.1: Test Model 1 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	1.6	-18	16	120
S-CCPCH containing PCH (SF=256)	1	1.6	-18	3	0
DPCH (SF=128)	16/32/64	76.8 in total	See 3GPP TS25.141 Table 6.2	See 3GPP TS25.141 Table 6.2	See 3GPP TS25.141 Table 6.2

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 1</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 2 [BTS only]**

Allows you to select from a variety of configurations using Test Model 2.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

3GPP TS25.141 Table 6.3: Test Model 2 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	5	-13	16	120
S-CCPCH containing PCH (SF=256)	1	5	-13	3	0
DPCH (SF=128)	3	2 x 10, 1 x 50	2 x -10, 1 x -3	24, 72, 120	1, 7, 2

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models,</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 2 w/S-CCPCH [BTS only]**

Selects standard Test Model 2 w/S-CCPCH.

3GPP TS25.141 Table 6.3: Test Model 2 (2002–09 version) (S-CCPCH included)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	5	-13	16	120
S-CCPCH containing PCH (SF=256)	1	5	-13	3	0
DPCH (SF=128)	3	2 x 10, 1 x 50	2 x -10, 1 x -3	24, 72, 120	1, 7, 2

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 2</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 3 [BTS only]**

Allows you to select from a variety of configurations using Test Model 3.

3GPP TS25.141 Table 6.4: Test Model 3 (2002–09 version)

Type	Number of Channels	Fraction of Power (%) 16/32	Level settings (dB) 16/32	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	12,6/7,9	-9 / -11	1	0
Primary CPICH	1	12,6/7,9	-9 / -11	0	0
PICH	1	5/1.6	-13/-18	16	120
S-CCPCH containing PCH (SF=256)	1	5/1.6	-13/-18	3	0
DPCH (SF=256)	16/32	63,7/80,4 in total	See 3GPP TS25.141 Table 6.5	See 3GPP TS25.141 Table 6.5	See 3GPP TS25.141 Table 6.5

Key Path	<b>Meas Setup, Symbol Boundary</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 3 w/16 DPCH w/S-CCPCH [BTS only]**

Selects standard Test Model 3 w/16 DPCH w/S-CCPCH [BTS].

3GPP TS25.141 Table 6.4: Test Model 3 (2002–09 version)

Type	Number of Channels	Fraction of Power (%) 16/32	Level settings (dB) 16/32	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	12,6/7,9	-9 / -11	1	0
Primary CPICH	1	12,6/7,9	-9 / -11	0	0
PICH	1	5/1.6	-13/-18	16	120
S-CCPCH containing PCH (SF=256)	1	5/1.6	-13/-18	3	0
DPCH (SF=256)	16/32	63,7/80,4 in total	See 3GPP TS25.141 Table 6.5	See 3GPP TS25.141 Table 6.5	See 3GPP TS25.141 Table 6.5

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 3</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 3 w/32 DPCH w/S-CCPCH [BTS only]**

Selects standard Test Model 3 w/32 DPCH w/S-CCPCH.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

3GPP TS25.141 Table 6.4: Test Model 3 (2002–09 version)

Type	Number of Channels	Fraction of Power (%) 16/32	Level settings (dB) 16/32	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	12,6/7,9	-9 / -11	1	0
Primary CPICH	1	12,6/7,9	-9 / -11	0	0
PICH	1	5/1.6	-13/-18	16	120
S-CCPCH containing PCH (SF=256)	1	5/1.6	-13/-18	3	0
DPCH (SF=256)	16/32	63,7/80,4 in total	See 3GPP TS25.141 Table 6.5	See 3GPP TS25.141 Table 6.5	See 3GPP TS25.141 Table 6.5

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 3</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 4 [BTS only]**

Allows you to select from a variety of configurations using Test Model 4.

3GPP TS25.141 Table 6.6: Test Model 4 Active Channels

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset
PCCPCH+SCH	1	50 to 1.6	-3 to -18	1	0
Primary CPICH1	1	10	-10	0	0

Table Note 1: The CPICH channel is optional.

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 4 w/CPICH [BTS only]**

Selects standard Test Model 4 w/CPICH

3GPP TS25.141 Table 6.6: Test Model 4 Active Channels

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset
PCCPCH+SCH	1	50 to 1.6	-3 to -18	1	0



Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset
Primary CPICH1	1	10	-10	0	0

Table Note 1: The CPICH channel is optional.

Key Path:	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 4</b>
Initial S/W Revision:	Prior to A.02.00

#### Test Model 4

Selects standard Test Model 4 w/ no CPICH.

3GPP TS25.141 Table 6.6: Test Model 4 Active Channels

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset
PCCPCH+SCH	1	50 to 1.6	-3 to -18	1	0
Primary CPICH1	1	10	-10	0	0

Table Note 1: The CPICH channel is optional.

Key Path:	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 4</b>
Initial S/W Revision:	Prior to A.02.00

#### Test Model 5 [BTS only]

Allows you to select from a variety of configurations using Test Model 5.

3GPP TS25.141 Table 6.6A: Test Model 5 Active Channels (2000-12 version)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=128)	30/14/6(*)	14/14.2/14.4 in total	See 3GPP TS25.141 Table 6.6B	See 3GPP TS25.141 Table 6.6B	See 3GPP TS25.141 Table 6.6B

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
HS-SCCH	2	4 in total	See 3GPP TS25.141 Table 6.6C	See 3GPP TS25.141 Table 6.6C	See 3GPP TS25.141 Table 6.6C
HS-PDSCH (16QAM)	8/4/2(*)	63.6/63.4/63.2 in total	See 3GPP TS25.141 Table 6.6D	See 3GPP TS25.141 Table 6.6D	See 3GPP TS25.141 Table 6.6D

Table Note \*: 2 HS-PDSCH shall be taken together with 6 DPCH, 4 HS-PDSCH shall be taken with 14 DPCH, and 8 HS-PDSCH shall be taken together with 30 DPCH.

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 5 w/2 HS-PDSCH, w/6 DPCH [BTS only]**

Allows you to select standard Test Model 5 w/2 HS-PDSCH, w/6 DPCH.

3GPP TS25.141 Table 6.6A: Test Model 5 Active Channels (2000–12 version)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=128)	30/14/6(*)	14/14.2/14.4 in total	See 3GPP TS25.141 Table 6.6B	See 3GPP TS25.141 Table 6.6B	See 3GPP TS25.141 Table 6.6B
HS-SCCH	2	4 in total	See 3GPP TS25.141 Table 6.6C	See 3GPP TS25.141 Table 6.6C	See 3GPP TS25.141 Table 6.6C
HS-PDSCH (16QAM)	8/4/2(*)	63.6/63.4/63.2 in total	See 3GPP TS25.141 Table 6.6D	See 3GPP TS25.141 Table 6.6D	See 3GPP TS25.141 Table 6.6D

Table Note \*: 2 HS-PDSCH shall be taken together with 6 DPCH, 4 HS-PDSCH shall be taken with 14 DPCH, and 8 HS-PDSCH shall be taken together with 30 DPCH.

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 5</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 5 w/ 4 HS-PDSCH, w/14 DPCH [BTS only]**

Allows you to select standard Test Model 5 w/4 HS-PDSCH, w/14 DPCH.

3GPP TS25.141 Table 6.6A: Test Model 5 Active Channels (2000–12 version)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=128)	30/14/6(*)	14/14.2/14.4 in total	See 3GPP TS25.141 Table 6.6B	See 3GPP TS25.141 Table 6.6B	See 3GPP TS25.141 Table 6.6B
HS-SCCH	2	4 in total	See 3GPP TS25.141 Table 6.6C	See 3GPP TS25.141 Table 6.6C	See 3GPP TS25.141 Table 6.6C
HS-PDSCH (16QAM)	8/4/2(*)	63.6/63.4/63.2 in total	See 3GPP TS25.141 Table 6.6D	See 3GPP TS25.141 Table 6.6D	See 3GPP TS25.141 Table 6.6D

Table Note \*: 2 HS-PDSCH shall be taken together with 6 DPCH, 4 HS-PDSCH shall be taken with 14 DPCH, and 8 HS-PDSCH shall be taken together with 30 DPCH.

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 5</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 5 w/ 8 HS-PDSCH, w/30 DPCH [BTS only]**

Allows you to select standard Test Model 5 w/8 HS-PDSCH, w/30 DPCH.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

3GPP TS25.141 Table 6.6A: Test Model 5 Active Channels (2000–12 version)

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=128)	30/14/6(*)	14/14.2/14.4 in total	See 3GPP TS25.141 Table 6.6B	See 3GPP TS25.141 Table 6.6B	See 3GPP TS25.141 Table 6.6B
HS-SCCH	2	4 in total	See 3GPP TS25.141 Table 6.6C	See 3GPP TS25.141 Table 6.6C	See 3GPP TS25.141 Table 6.6C
HS-PDSCH (16QAM)	8/4/2(*)	63.6/63.4/63.2 in total	See 3GPP TS25.141 Table 6.6D	See 3GPP TS25.141 Table 6.6D	See 3GPP TS25.141 Table 6.6D

Table Note \*: 2 HS-PDSCH shall be taken together with 6 DPCH, 4 HS-PDSCH shall be taken with 14 DPCH, and 8 HS-PDSCH shall be taken together with 30 DPCH.

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 5</b>
Initial S/W Revision	Prior to A.02.00

**Test Model 6 [BTS only]**

3GPP TS25.141 Table 6.6E: Test Model 6 Active Channels


Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
P-CCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
S-CCPCH containing PCH (SF=256)	1	1.3	-19	3	0

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Type	Number of Channels	Fraction of Power (%)	Level setting (dB)	Channelization Code	Timing offset (x256Tchip)
DPCH (SF=128)	30/14/6(*)	27.1 in total	See 3GPP TS25.141 Table 6.6F	See 3GPP TS25.141 Table 6.6F	See 3GPP TS25.141 Table 6.6F
HS-SCCH	2	4 in total	See 3GPP TS25.141 Table 6.6G	See 3GPP TS25.141 Table 6.6G	See 3GPP TS25.141 Table 6.6G
HS-PDSCH (64QAM)	8	50.5 in total	See 3GPP TS25.141 Table 6.6H	See 3GPP TS25.141 Table 6.6H	See 3GPP TS25.141 Table 6.6H

Key Path	<b>Meas Setup, Symbol Boundary, Predefined Test Models, Test Model 6</b>
Initial S/W Revision	A.03.00

**Custom Active Channel List for BTS (Remote Command Only)**

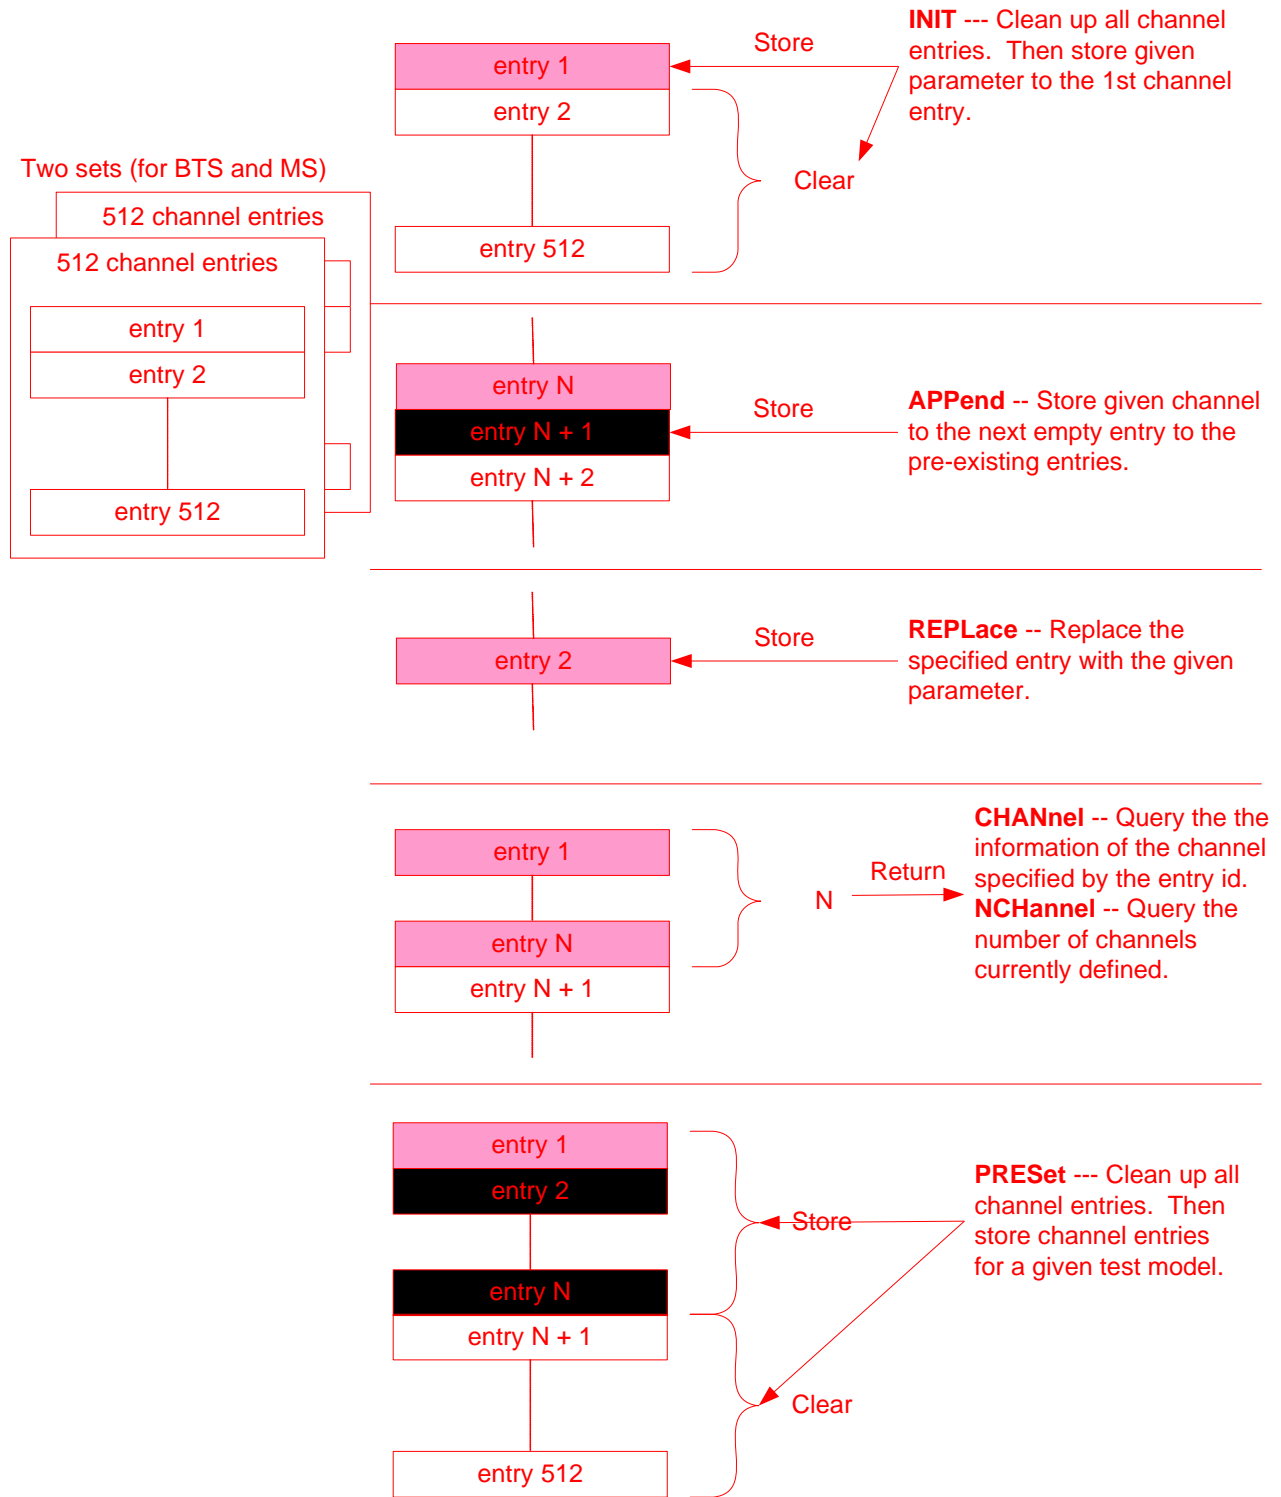

**Initialize List (Remote Command only)**

Initializes the current custom active channel list. This creates a new entry with the specified parameters.

1st parameter:

<symbol\_rate>      Specifies symbol rate of the channel.

2nd parameter:

<code\_num>          Specifies code number of the channel.

3rd parameter:

QPSK                  Specifies the channel's modulation scheme is QPSK.

QAM16                Specifies the channel's modulation scheme is QAM16.

This choice is available only for channels with a symbol rate of 240000.

Only when 'HSPA' functionality is operative, 'QAM16' parameter is allowed.

QAM64                Specifies the channel's modulation scheme is QAM64.

This choice is available only for channels with symbol rate 240000.

Only when both 'HSPA' functionality and 'HSPA+' functionality are operative, 'QAM64' parameter is allowed.

<b>Remote Command</b>	[:SENSE]:RHO:SBOundary:LIST[:BTS]:INIT <symbol_rate>, <code_num>, QPSK QAM16 QAM64
-----------------------	--

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

<p>Example</p>	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- CPICH (C8(0))</li> <li>- P-CCPCH (C8(1))</li> <li>- S-CCPCH(C8(3))</li> <li>- PICH(C8(16))</li> <li>- HS-DPCCH (C4(15)) 16QAM modulated</li> </ul> <p>RHO:SBO:LIST:INIT 15000,0, QPSK  RHO:SBO:LIST:APP 15000,1, QPSK  RHO:SBO:LIST:APP 15000,3, QPSK  RHO:SBO:LIST:APP 15000,16, QPSK  RHO:SBO:LIST:APP 240000,15, QAM16  RHO:SBO:LIST:BTS:NCH?  5  RHO:SBO:LIST:CHAN? 1  15000,0, QPSK  RHO:SBO:LIST:CHAN? 2  15000,1, QPSK  RHO:SBO:LIST:CHAN? 3  15000,3, QPSK  RHO:SBO:LIST:CHAN? 4  415000,16, QPSK  RHO:SBO:LIST:CHAN? 5  240000,15, QAM16</p>
<p>Mode</p>	<p>WCDMA</p>



Notes	<p>(1) This command is effective when [:SENSe]:RADio:DEVice is set to BTS and [:SENSe]:RHO:SBOundary[:BTS] is set to CUSTom.</p> <p>(2) QAM16 for the 3rd parameter is available only if HSPA Enable is On. QAM64 for the 3rd parameter is available only if both HSPA Enable and HSPA+ Enable are on.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 3.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:INIT, 15000, 0</pre> <p>3rd parameter is missing.</p> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:INIT, 15000, ON, QPSK</pre> <p>2nd parameter must be integer.</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:INIT 15001, 8, QPSK</pre> <p>1st parameter value (Symbol Rate) is not allowed.</p> <p>Only the values given in the Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:INIT 15000, 256, QPSK</pre> <p>2nd parameter is out of range.</p> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps another code channel in modulation accuracy.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0) overlaps C8(0).</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:INIT 15000, 0, QPSK</pre> <p>OK</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:APPend 30000, 0, QPSK</pre> <p>C7(0) overlaps C8(0)</p>
Dependencies	See Notes

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

State Saved	Saved in instrument state.
Range	symbol_rate = 7500   15000   30000   60000   120000   240000   480000   960000 0<= code_num <= 511 if symbol_rate = 7500 0<= code_num <= 255 if symbol_rate = 15000 0<= code_num <= 127 if symbol_rate = 30000 0<= code_num <= 63 if symbol_rate = 60000 0<= code_num <= 31 if symbol_rate = 120000 0<= code_num <= 15 if symbol_rate = 240000 0<= code_num <= 7 if symbol_rate = 480000 0<= code_num <= 3 if symbol_rate = 960000 QAM16 and QAM64 for the 3rd parameter available only for channels with a symbol rate of 240000. For other channels, specify QPSK.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Append List (Remote Command only)**

Appends the entry on the list of custom active channel list for BTS.

1st parameter:

<symbol\_rate> Specifies symbol rate of the channel.

2nd parameter:

<code\_num> Specifies code number of the channel.

3rd parameter:

QPSK Specifies the channel's modulation scheme is QPSK.

QAM16 Specifies the channel's modulation scheme is QAM16.

This choice is available only for channels with a symbol rate of 240000.

Only when 'HSPA' functionality is operative, 'QAM16' parameter is allowed.

QAM64 Specifies the channel's modulation scheme is QAM64.

This choice is available only for channels with symbol rate 240000. Only when both 'HSPA' functionality and 'HSPA+' functionality are operative, 'QAM64' is valid to select.

<b>Remote Command</b>	[ :SENSE] :RHO:SBoundary:LIST[:BTS]:APPend <symbol_rate>, <code_num>, QPSK QAM16 QAM64
-----------------------	--

<p>Example</p>	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- CPICH (C8(0))</li> <li>P-CCPCH (C8(1))</li> <li>- S-CCPCH(C8(3))</li> <li>- PICH(C8(16))</li> <li>- HS-DPCCH (C4(15)) 16QAM modulated</li> </ul> <p>RHO:SBO:LIST:INIT 15000,0, QPSK  RHO:SBO:LIST:APP 15000,1, QPSK  RHO:SBO:LIST:APP 15000,3, QPSK  RHO:SBO:LIST:APP 15000,16, QPSK  RHO:SBO:LIST:APP 240000,15, QAM16  RHO:SBO:LIST:BTS:NCH?  5  RHO:SBO:LIST:BTS:CHAN? 1  15000,0, QPSK  RHO:SBO:LIST:BTS:CHAN? 2  15000,1, QPSK  RHO:SBO:LIST:BTS:CHAN? 3  15000,3, QPSK  RHO:SBO:LIST:BTS:CHAN? 4  15000,16, QPSK  RHO:SBO:LIST:BTS:CHAN? 5  240000,15, QAM16</p>
<p>Mode</p>	<p>WCDMA</p>

Notes	<p>(1) This command is effective when [:SENSe]:RADio:DEvice is set to BTS and [:SENSe]:RHO:SBOundary[:BTS] is set to CUSTom.</p> <p>(2) QAM16 for the 3rd parameter is available only if HSPA Enable is On. QAM64 for the 3rd parameter is available only if both HSPA Enable and HSPA+ Enable are on.</p> <p>(3) The maximum number of entries is 512.</p> <p>Error messages associated with this parameter:</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 4.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:APPend, 15000, 0</pre> 3rd parameter is missing. <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:APPend 15000, ON, QPSK</pre> 2nd parameter must be integer. <pre>:SENSe:RHO:SBOundary:LIST:BTS:APPend, 15001, 8, QPSK</pre> 1st parameter value (Symbol Rate) is not allowed. <p>Only the values given in the Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:APPend 15000, 256, QPSK</pre> 2nd parameter is out of range. <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps another code channel in Modulation Accuracy (Rho).</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0) overlaps C8(0).</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:INIT, 15000, 0, QPSK</pre> OK <pre>:SENSe:RHO:SBOundary:LIST:BTS:APPend 30000, 0, QPSK</pre> C7(0) overlaps C8(0)
-------	---

Dependencies	See Notes
State Saved	Saved in instrument state.
Range	<p>symbol_rate = 7500   15000   30000   60000   120000   240000   480000   960000</p> <p>0&lt;= code_num &lt;= 511 if symbol_rate = 7500</p> <p>0&lt;= code_num &lt;= 255 if symbol_rate = 15000</p> <p>0&lt;= code_num &lt;= 127 if symbol_rate = 30000</p> <p>0&lt;= code_num &lt;= 63 if symbol_rate = 60000</p> <p>0&lt;= code_num &lt;= 31 if symbol_rate = 120000</p> <p>0&lt;= code_num &lt;= 15 if symbol_rate = 240000</p> <p>0&lt;= code_num &lt;= 7 if symbol_rate = 480000</p> <p>0&lt;= code_num &lt;= 3 if symbol_rate = 960000</p> <p>QAM16 and QAM64 for the 3rd parameter available only for channels with a symbol rate of 240000. For other channels, specify QPSK.</p>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Replace List (Remote Command only)

Replaces the entry of the custom active channel list for BTS.

1st parameter:

<entry\_id>            Specifies entry ID of the channel to replace.

2nd parameter:

<symbol\_rate>        Specifies symbol rate of the channel.

3rd parameter:

<code\_num>            Specifies code number of the channel.

4th parameter:

QPSK                    Specifies the channel's modulation scheme is QPSK.

QAM16                   Specifies the channel's modulation scheme is QAM16.

This choice is available only for channels with a symbol rate of 240000.

Only when 'HSPA' functionality is operative, 'QAM16' parameter is allowed.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

**QAM64** Specifies the channel's modulation scheme is QAM64.  
 This choice is available only for channels with symbol rate 240000.  
 Only when both 'HSPA' functionality and 'HSPA+' functionality are operative, 'QAM64' is valid to select.

<b>Remote Command</b>	<code>[ :SENSe ] :RHO:SBOundary:LIST[:BTS]:REPLace &lt;entry_id&gt;, &lt;symbol_rate&gt;, &lt;code_num&gt;, QPSK QAM16 QAM64</code>
Example	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- CPICH (C8(0))</li> <li>- P-CCPCH (C8(1))</li> <li>- S-CCPCH(C8(3))</li> <li>- PICH(C8(16))</li> <li>- HS-DPCCH (C4(15)) 16QAM modulated</li> </ul> <p>RHO:SBO:LIST:INIT 15000,0, QPSK  RHO:SBO:LIST:APP 15000,1, QPSK  RHO:SBO:LIST:APP 15000,3, QPSK  RHO:SBO:LIST:APP 15000,16, QPSK  RHO:SBO:LIST:APP 240000,15, QAM16</p> <p>And, P-CCPCH(C8(3)) is replaced as follows:  RHO:SBO:LIST:REPL 3,15000,5,QPSK  RHO:SBO:LIST:BTS:NCH?  5  RHO:SBO:LIST:CHAN? 1  15000,0, QPSK  RHO:SBO:LIST:CHAN? 2  15000,1, QPSK  RHO:SBO:LIST:CHAN? 3  15000,5, QPSK  RHO:SBO:LIST:CHAN? 4  15000,16, QPSK  RHO:SBO:LIST:CHAN? 5  240000,15, QAM16</p>
Mode	WCDMA

Notes	<p>This command is effective when [:SENSe]:RADio:DEvIce is set to BTS and [:SENSe]:RHO:SBOundary[:BTS] is set to CUSTom.</p> <p>QAM16 for the 4th parameter is available only if HSPA Enable is On.          QAM64 for the 4th parameter is available only if both HSPA Enable and HSPA+ Enable are on.</p> <p>The maximum number of entries is 512.</p> <p><b>Error messages associated with this parameter</b></p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <ol style="list-style-type: none"> <li>1. "Missing Parameter"              This error is reported if the number of parameters is less than 4.              For example,              :SENSe:RHO:SBOundary:LIST:BTS:REPLace 1,15000, 0 4th parameter is missing.</li> <li>2. "Illegal parameter value"              This error is reported if parameter type is invalid or if enum value is invalid.              For example,              :SENSe:RHO:SBOundary:LIST:BTS:REPLace 1,15000, ON, QPSK 3rd parameter must be integer.              :SENSe:RHO:SBOundary:LIST:BTS:REPLace 1,15001, 8, QPSK 2nd parameter value (Symbol Rate) is not allowed.              Only the values given in the Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</li> <li>3. "Data out of range"              This error is reported if parameter value is out of range.              For example,              :SENSe:RHO:SBOundary:LIST:BTS:REPLace 1,15000, 256, QPSK 3rd parameter is out of range.</li> </ol>
-------	---

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Notes (continued)	<p>4. “Setting Conflict”</p> <p>This error is reported if the given code channel overlaps another code channel in Modulation Accuracy (Rho).</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0) overlaps C8(0).</p> <pre>:SENSe:RHO:SBOundary:LIST:BTS:INIT 15000, 0, QPSK [ OK :SENSe:RHO:SBOundary:LIST:BTS:REPLace 1,30000, 0, QPSK [ C7(0) overlaps C8(0)</pre> <p>5. The entry ID out of range:</p> <p>1 &lt;= entry_id &lt;= The number of entries that are currently appended.</p>
Dependencies	See Notes
State Saved	Saved in instrument state.
Range	<p>The entry ID must be:</p> <p>1 &lt;= entry_id &lt;= The number of entries which is currently appended.</p> <p>symbol_rate = 7500   15000   30000   60000   120000   240000   480000   960000</p> <p>0 &lt;= code_num &lt;= 511 if symbol_rate = 7500  0 &lt;= code_num &lt;= 255 if symbol_rate = 15000  0 &lt;= code_num &lt;= 127 if symbol_rate = 30000  0 &lt;= code_num &lt;= 63 if symbol_rate = 60000  0 &lt;= code_num &lt;= 31 if symbol_rate = 120000  0 &lt;= code_num &lt;= 15 if symbol_rate = 240000  0 &lt;= code_num &lt;= 7 if symbol_rate = 480000  0 &lt;= code_num &lt;= 3 if symbol_rate = 960000</p> <p>QAM16 and QAM64 for the 4th parameter available only for channels with a symbol rate of 240000. For other channels, specify QPSK.</p>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Query List (Remote Command only)**

This command returns the entry of the custom active channel list for BTS.

1st parameter:

<entry\_id>                    Specifies entry ID of the channel to query.

<b>Remote Command</b>	[ :SENSe ] :RHO :SBOundary :LIST [ :BTS ] :CHANnel? <entry_id>
-----------------------	--



<p>Example</p>	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"> <li>- CPICH (C8(0))</li> <li>- P-CCPCH (C8(1))</li> <li>- S-CCPCH(C8(3))</li> <li>- PICH(C8(16))</li> <li>- HS-DPCCH (C4(15)) 16QAM modulated</li> </ul> <p>RHO:SBO:LIST:INIT 15000,0, QPSK  RHO:SBO:LIST:APP 15000,1, QPSK  RHO:SBO:LIST:APP 15000,3, QPSK  RHO:SBO:LIST:APP 15000,16, QPSK  RHO:SBO:LIST:APP 240000,15, QAM16  RHO:SBO:LIST:BTS:NCH?  5  RHO:SBO:LIST:CHAN? 1  15000,0, QPSK  RHO:SBO:LIST:CHAN? 2  15000,1, QPSK  RHO:SBO:LIST:CHAN? 3  15000,3, QPSK  RHO:SBO:LIST:CHAN? 4  15000,16, QPSK  RHO:SBO:LIST:CHAN? 5  240000,15, QAM16</p>
<p>Mode</p>	<p>WCDMA</p>

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Notes	<p>(1) This command is effective when [:SENSe]:RADio:DEVIce is set to BTS and  [:SENSe]:RHO:SBOundary[:BTS] is set to CUSTom.</p> <p>(2) QAM16 for the 4th parameter is available only if HSPA Enable is On. QAM64 for the 4th parameter is available only if both HSPA Enable and HSPA+ Enable are on.</p> <p>(3) The maximum number of entries is 512.</p> <p>Default value of the parameter  By default, one channel is defined. (CPICH C8(0))  In order to query the default entry, specify 1 for &lt;entry_id&gt;:  :SENSe:RHO:SBOundary:LIST:BTS:CHANnel? 1</p> <p>The instrument returns an array of three values:  15000, 0, QPSK</p> <p>Query command needs &lt;entry_id&gt; parameter  The &lt;entry_id&gt; parameter is always required for a query command.  The range of the parameter is from 1 to the total number of channels you have defined.  For example, if you have defined two channels, you can query them as follows:  :SENSe:RHO:SBOundary:LIST:BTS:CHANnel? 1  :SENSe:RHO:SBOundary:LIST:BTS:CHANnel? 2</p> <p>If you want to know the number of channels you have defined, send the following query command:  :SENSe:RHO:SBOundary:LIST:BTS:NCHannels?</p> <p>Error messages associated with this parameter:  The following error message is logged if the given parameter is invalid.  If an error is reported, the SCPI command is rejected and the instrument's settings do not change.  &lt;entry_id&gt; out of range  The entry ID must be:  1 &lt;= entry_id &lt;= The number of entries which is currently appended.</p>
Dependencies	See Notes
Preset	15000, 0, QPSK
State Saved	Saved in instrument state.
Range	1 <= entry_id <= the number of channels defined <= 512 (<entry_id> is an integer ranging from 1 to 512.)
Initial S/W Revision	Prior to A.02.00

Modified at S/W Revision	A.03.00
--------------------------	---------

<b>Remote Command</b>	[ :SENSE ] :RHO :SBOundary :LIST [ :BTS ] :NCHannels?
Example	:SENS:RHO:SBO:LIST:BTS:NCH?
Mode	WCDMA
Notes	This command is effective when [:SENSe]:RADio:DEVice is set to BTS and [:SENSe]:RHO:SBOundary[:BTS] is set to CUSTom. This command is a query-only command.
Dependencies	See Notes
Preset	1
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Symbol Boundary Custom Active Channel List – Load Preset Setting BTS (Remote Command Only) [BTS only]

Loads preset setting to the custom active channel list BTS. This is a command-only command; it does not support a query.

<b>Remote Command</b>	[ :SENSE ] :RHO :SBOundary :LIST [ :BTS ] :PRESet TM1D16   TM1D32   TM1D64   TM1D16SC   TM1D32SC   TM1D64SC   TM2   TM2SC   TM3D16   TM3D32   TM3D16SC   TM3D32SC   TM4   TM4CP   TM5H2   TM5H4   TM5H8   TM6H8
Example	SENSe:RHO:SBOundary:LIST:BTS:PRESet TM1D64
Mode	WCDMA
Notes	(1) This command is effective when [:SENSe]:RADio:DEVice is set to BTS and [:SENSe]:RHO:SBOundary[:BTS] is set to CUSTom. (2) TM5H2, TM5H4, TM5H8 parameters are allowed if HSPA Enable is On. This is a command-only command; it does not support a query. (3) TM6H8 parameter is allowed if HSPA+Enable is On.
Dependencies	See Notes
State Saved	No
Range	TM1D16 TM1D32 TM1D64 TM1D16SC TM1D32SC TM1D64SC  TM2 TM2SC TM3D16 TM3D32 TM3D16SC TM3D32SC TM4 TM4CP  TM5H2 TM5H4 TM5H8 TM6H8.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

## Symbol Boundary [MS only]

Selects the symbol boundary detection mode for MS and allows you to access the selection menu for the symbol boundary detection modes that allow you to specify the active channel detection scheme for the uplink.

Auto [SCPI Enum: AUTO] – Select this feature to set the symbol boundary detection to the automatic mode. Various code channels are measured and the most appropriate code channel is selected as the reference channel.

Custom [SCPI Enum: CUSTom] – Select this feature to specify a customized list of active channels using remote commands. All specified channels are considered as active. No softkey specifies the custom active channel list.

<b>Remote Command</b>	[ :SENSe ] :RHO :SBOundary :MS AUTO   CUSTom [ :SENSe ] :RHO :SBOundary :MS?
Example	SENS:RHO:SBO:MS CUST SENS:RHO:SBO:MS?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	This parameter is effective when [:SENSe]:RADio:DEvice is set to MS.
Dependencies	See Couplings
Couplings	This softkey is active if the “Radio Device” selection is “MS” and “Capture Intvl” is set to one of the following: “1 slot”, “3 slot”, “1 frame”, “2 frame” or “3 frame”.  This softkey is inactive, and therefore grayed out, if the “Radio Device” selection is “MS” and “Capture Intvl” is “4 frame”, “8 frame”, or “16 frame”.  If the “Radio Device” selection is “BTS”, a different softkey (Symbol Boundary BTS) appears instead of this softkey.
Preset	AUTO
State Saved	Saved in instrument state.
Range	Auto   Custom
Initial S/W Revision	Prior to A.02.00

### Custom Active Channel List for MS (Remote Command only)

The following commands handle the list of custom predefined channels for MS.


INIT – Cleans up all channel entries. Then stores given parameter to the 1st channel entry.

APPend – Stores given channel to the next empty entry to the pre-existing entries.

REPLace - Replaces the specified entry with the given parameter.

CHANnel – Queries the information of the channel specified by the entry id.

NCHannel - Queries the number of channels currently defined.

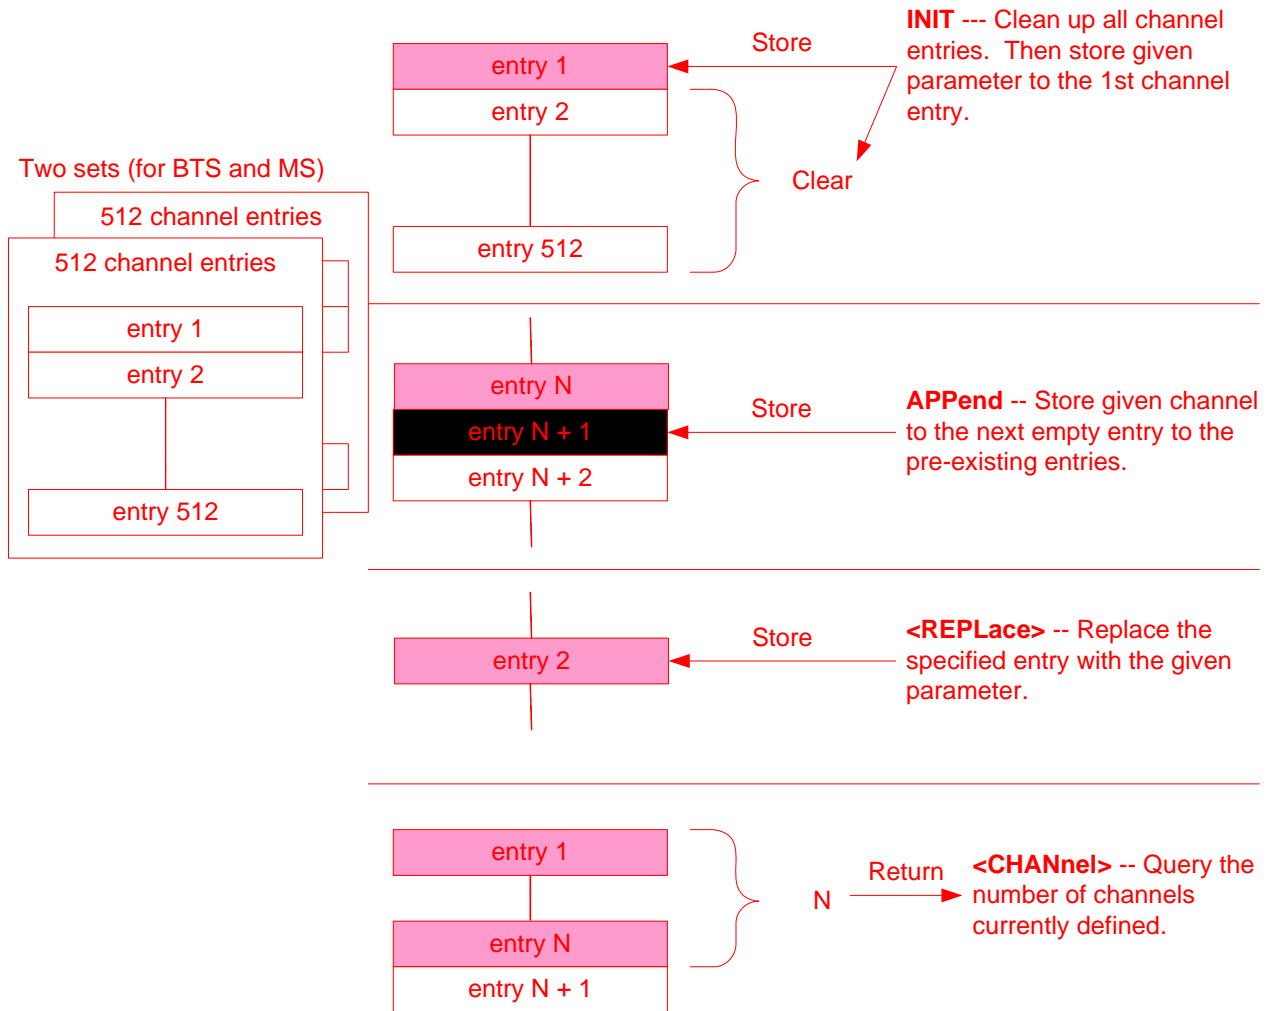

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

**Initialize List (Remote Command only)**

Initializes the current custom active channel list. This creates a new entry with the given parameter.

1st parameter:

<symbol\_rate>      Specifies symbol rate of the channel.

2nd parameter:

<code\_num>          Specifies spreading code of the channel.

3rd parameter:

IPH                    Specifies the channel is on the I-axis.

QPH                    Specifies the channel is on the Q-axis.

<b>Remote Command</b>	[ :SENSe] :RHO:SBOundary:LIST:MS:INIT <symbol_rate>, <code_num>, IPH QPH
Example	In order to predefine the following channels: - DPCCH (C8(0):Q) - DPDCH (C6(16):I) RHO:SBO:LIST:MS:INIT 15000, 0, QPH RHO:SBO:LIST:MS:APP 60000, 16, IPH RHO:SBO:LIST:MS:NCH? 2 RHO:SBO:LIST:MS:CHAN? 1 15000, 0, QPH RHO:SBO:LIST:MS:CHAN? 2 60000, 16, IPH
Mode	WCDMA

Notes	<p>(1) This command is effective if [:SENSe]:RADio:DEVIce is set to MS and [:SENSe]:RHO:SBOundary:MS is set to CUSTom.</p> <p>(2) symbol_rate = 1920000 is available if HSPA Enable is On.</p> <p>(3) The maximum number of entries is 512.</p> <p>One of the following error messages is logged if the given parameter is invalid:</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 3.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:INIT 15000, 0 3rd parameter is missing.</pre> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:INIT 15000, ON, QPH 2nd parameter must be integer.</pre> <pre>:SENSe:RHO:SBOundary:LIST:MS:INIT 15001, 0, QPH 1st parameter value (Symbol Rate) is not allowed.</pre> <p>Only the values given in the Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:INIT 15000, 256, QPH 2nd parameter is out of range.</pre> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps another code channel in modulation Accuracy.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0):Q overlaps C8(0):Q.</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:INIT 15000, 0, QPH OK</pre> <pre>:SENSe:RHO:SBOundary:LIST:MS:APPend 30000, 0, QPH C7(0):Q overlaps C8(0):Q</pre>
State Saved	Saved in instrument state.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Range	symbol_rate = 15000   30000   60000   120000   240000   480000   960000   1920000  0<= code_num <= 255 if symbol_rate = 15000 0<= code_num <= 127 if symbol_rate = 30000 0<= code_num <= 63 if symbol_rate = 60000 0<= code_num <= 31 if symbol_rate = 120000 0<= code_num <= 15 if symbol_rate = 240000 0<= code_num <= 7 if symbol_rate = 480000 0<= code_num <= 3 if symbol_rate = 960000 0<= code_num <= 1 if symbol_rate = 1920000
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Append List (Remote Command only)**

Appends the entry to the custom active channel list.

1st parameter:

<symbol\_rate>      Specifies symbol rate of the channel.

2nd parameter:

<code\_num>          Specifies spreading code of the channel.

3rd parameter:

IPH                    Specifies the channel is on the I-axis.

QPH                    Specifies the channel is on the Q-axis.

<b>Remote Command</b>	[ :SENSe] :RHO:SBoundary:LIST:MS:APPend <symbol_rate>, <code_num>, IPH QPH
-----------------------	--



Example	In order to predefine the following channels: - DPCCH (C8(0):Q) - DPDCH (C6(16):I) RHO:SBO:LIST:MS:INIT 15000, 0, QPH RHO:SBO:LIST:MS:APP 60000, 16, IPH RHO:SBO:LIST:MS:NCH? 2 RHO:SBO:LIST:MS:CHAN? 1 15000, 0, QPH RHO:SBO:LIST:MS:CHAN? 2 60000, 16, IPH
Mode	WCDMA

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Notes	<p>(1) This command is effective if [:SENSe]:RADio:DEVice is set to MS and [:SENSe]:RHO:SBOundary:MS is set to CUSTom.</p> <p>(2) symbol_rate = 1920000 is available if HSPA Enable is On.</p> <p>(3) The maximum number of entries is 512.</p> <p>One of the following error messages is logged if the given parameter is invalid:</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 3.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:APPend 15000, 0</pre> <p>3rd parameter is missing.</p> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:APPend 15000, ON, QPH</pre> <p>2nd parameter must be integer.</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:APPend 15001, 0, QPH</pre> <p>1st parameter value (Symbol Rate) is not allowed.</p> <p>Only the values given in the Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:APPend 15000, 256, QPH</pre> <p>2nd parameter is out of range.</p> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps another code channel in modulation accuracy.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0):Q overlaps C8(0):Q.</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:INIT 15000, 0, QPH</pre> <p>OK</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:APPend 30000, 0, QPH</pre> <p>C7(0):Q overlaps C8(0):Q</p>
Dependencies	See Notes
State Saved	Saved in instrument state.

Range	symbol_rate = 15000   30000   60000   120000   240000   480000   960000   19200000  0<= code_num <= 255 if symbol_rate = 15000 0<= code_num <= 127 if symbol_rate = 30000 0<= code_num <= 63 if symbol_rate = 60000 0<= code_num <= 31 if symbol_rate = 120000 0<= code_num <= 15 if symbol_rate = 240000 0<= code_num <= 7 if symbol_rate = 480000 0<= code_num <= 3 if symbol_rate = 960000 0<= code_num <= 1 if symbol_rate = 1920000
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Replace List (Remote Command only)**

Replaces an entry in the custom active channel list.

1st parameter:

<entry\_id>            Specifies entry ID of the channel to replace.

2nd parameter:

<symbol\_rate>        Specifies symbol rate of the channel.

3rd parameter:

<code\_num>            Specifies spreading code of the channel.

4th parameter:

IPH                    Specifies the channel is on the I-axis.

QPH                    Specifies the channel is on the Q-axis.

<b>Remote Command</b>	[:SENSe]:RHO:SBOundary:LIST:MS:REPLace <entry_id>, <symbol_rate>, <code_num>, IPH QPH
-----------------------	--

Modulation Accuracy (Composite EVM) Measurement  
Meas Setup

Example	In order to predefine the following channels: - DPCCH (C8(0):Q) - DPDCH (C6(16):I) RHO:SBO:LIST:MS:INIT 15000, 0, QPH RHO:SBO:LIST:MS:APP 60000, 16, IPH RHO:SBO:LIST:MS:NCH? 2 And, replace 2nd entry. RHO:SBO:LIST:MS:REPL 2, 60000,17,QPH RHO:SBO:LIST:MS:CHAN? 1 15000, 0, QPH RHO:SBO:LIST:MS:CHAN? 2 60000, 17, IPH
Mode	WCDMA

Notes	<p>(1) This command is effective if [:SENSe]:RADio:DEVIce is set to MS and [:SENSe]:RHO:SBOundary:MS is set to CUSTom.</p> <p>(2) symbol_rate = 1920000 is available if HSPA Enable is On.</p> <p>(3) The maximum number of entries is 512.</p> <p>One of the following error messages is logged if the given parameter is invalid:</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 4.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:REPLace 1,15000, 0 4th parameter is missing.</pre> <p>(2) "Illegal parameter value"</p> <p>This error is reported if parameter type is invalid or if enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:MS: REPLace 1,15000, ON, QPH 3rd parameter must be integer.</pre> <pre>:SENSe:RHO:SBOundary:LIST:MS:REPLace 1,15001, 0, QPH 2nd parameter value (Symbol Rate) is not allowed.</pre> <p>Only the values given in the Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and the error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:APPend 15000, 256, QPH 3rd parameter is out of range.</pre> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps another code channel in modulation accuracy.</p> <p>For example, if a user sends the following two commands, the second command causes the error message because C7(0):Q overlaps C8(0):Q.</p> <pre>:SENSe:RHO:SBOundary:LIST:MS:INIT 15000, 0, QPH OK</pre> <pre>:SENSe:RHO:SBOundary:LIST:MS: REPLace 1,30000, 0, QPH C7(0):Q overlaps C8(0):Q</pre> <p>(5) The entry ID out of range</p> <p>1 &lt;= entry_id &lt;= The number of entries which is currently appended.</p>
State Saved	Saved in instrument state.

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Range	<p>The entry ID must be:</p> <p>1 &lt;= entry_id &lt;= The number of entries which is currently appended.</p> <p>symbol_rate = 15000   30000   60000   120000   240000   480000   960000   1920000</p> <p>0&lt;= code_num &lt;= 255 if symbol_rate = 15000</p> <p>0&lt;= code_num &lt;= 127 if symbol_rate = 30000</p> <p>0&lt;= code_num &lt;= 63 if symbol_rate = 60000</p> <p>0&lt;= code_num &lt;= 31 if symbol_rate = 120000</p> <p>0&lt;= code_num &lt;= 15 if symbol_rate = 240000</p> <p>0&lt;= code_num &lt;= 7 if symbol_rate = 480000</p> <p>0&lt;= code_num &lt;= 3 if symbol_rate = 960000</p> <p>0&lt;= code_num &lt;= 1 if symbol_rate = 1920000</p>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Query List (Remote Command only)**

This command returns the entry of the custom active channel list.

1st parameter:

<entry\_id>            Specifies entry ID of the channel to query

<b>Remote Command</b>	[ :SENSe] :RHO:SBOundary:LIST:MS:CHANnel? <entry_id>
Example	<p>In order to predefine the following channels:</p> <p>- DPCCH (C8(0):Q)</p> <p>- DPDCH (C6(16):I)</p> <p>RHO:SBO:LIST:MS:INIT 15000, 0, QPH</p> <p>RHO:SBO:LIST:MS:APP 60000, 16, IPH</p> <p>RHO:SBO:LIST:MS:NCH?</p> <p>2</p> <p>RHO:SBO:LIST:MS:CHAN? 1</p> <p>15000, 0, QPH</p> <p>RHO:SBO:LIST:MS:CHAN? 2</p> <p>60000, 16, IPH</p>
Mode	WCDMA

Notes	<p>(1) This command is effective if [:SENSE]:RADIO:DEVICE is set to MS and [:SENSE]:RHO:SBOUNDARY:MS is set to CUSTOM.</p> <p>(2) symbol_rate = 1920000 is available if HSPA Enable is On.</p> <p>(3) The maximum number of entries is 512.</p> <p>Default value of the parameter</p> <p>By default, one channel is defined. (DPCCH C8(0):Q)</p> <p>In order to query the default entry, specify 1 for &lt;entry_id&gt;:</p> <pre>:SENSE:RHO:SBOUNDARY:LIST:MS:CHANNEL? 1</pre> <p>The instrument returns an array of three values:</p> <p>15000, 0, QPH</p> <p>Query command needs &lt;entry_id&gt; parameter</p> <p>The &lt;entry_id&gt; parameter is always required for the query command.</p> <p>The range of the parameter is from 1 to the total number of channels you have defined. For example, if you have defined two channels, you can query them as follows:</p> <pre>:SENSE:RHO:SBOUNDARY:LIST:MS:CHANNEL? 1</pre> <pre>:SENSE:RHO:SBOUNDARY:LIST:MS:CHANNEL? 2</pre> <p>If you want to know the number of channels you have defined, send the following query command:</p> <pre>:SENSE:RHO:SBOUNDARY:LIST:NCHANNELS:MS?</pre> <p>The following error message is logged if the given parameter is invalid:</p> <p>If an error is reported, the SCPI command is rejected and the instrument's settings do not change.</p> <p>&lt;entry_id&gt; out of range</p> <p>The entry ID must be:</p> <p>1 &lt;= entry_id &lt;= The number of entries which is currently appended.</p>
Dependencies	See Notes
Preset	15000, 0, QPH
State Saved	Saved in instrument state.
Range	The entry ID must be: 1 <= entry_id <= The number of entries which is currently appended.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00
<b>Remote Command</b>	<code>[ :SENSE ] :RHO :SBOUNDARY :LIST :MS :NCHANNELS ?</code>
Example	<code>RHO:SBO:LIST:MS:NCH?</code>

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Mode	WCDMA
Notes	This command is effective when [:SENSe]:RADio:DEvice is set to MS and [:SENSe]:RHO:SBOundary:MS is set to CUSTom.  This command is a query-only command.
Dependencies	See Notes
Preset	1
State Saved	No
Initial S/W Revision	Prior to A.02.00

### Sync Start Slot [BTS only]

Specifies the slot number to measure as the first slot. You can then use any trigger, even **Free Run** to get the measurement result beginning with the specified slot number. For example, if the Sync Start Slot state is set to On and the start slot number is 0, then the synchronization always starts from slot number 0 regardless of the trigger type and its delay.

If Sync Start Slot state is set to Off, the measurement performs synchronization at any slot found immediately after the trigger timing.

<b>Remote Command</b>	[:SENSe]:RHO:SSLot:NUMBer <integer> [:SENSe]:RHO:SSLot:NUMBer? [:SENSe]:RHO:SSLot[:STATe] OFF ON 0 1 [:SENSe]:RHO:SSLot[:STATe]?
Example	RHO:SSL:NUMB 5 RHO:SSL:NUMB? RHO:SSL:STAT ON RHO:SSL:STAT?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	Turn first slot number detection mode on or off.
Dependencies	Grayed out if device is MS and Sync Type is PRACH Message.
Preset	0 OFF
State Saved	Saved in instrument state.
Range	0 to 14
Initial S/W Revision	Prior to A.02.00



## Transient Period Exclude [MS only]

Selects either to include or to exclude the transient period. The transient period is specified in the 3GPP standard TS 34.121, as 25 us before each slot boundary and 25 us after each slot boundary. The 3GPP standard requires that the transient period is not included for the power measurement.

This command is available only when the device is MS.

<b>Remote Command</b>	[ :SENSE ] :RHO :SWEep :TIME :TRANSient INCLude   EXCLude [ :SENSE ] :RHO :SWEep :TIME :TRANSient ?
Example	RHO:SWE:TIME:TRAN INCL RHO:SWE:TIME:TRAN?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	This command is available only when the device is MS.
Preset	INCLude
State Saved	Saved in instrument state.
Range	INCLude EXCLude
Initial S/W Revision	Prior to A.02.00

## Spectrum

Sets a spectrum to either normal or inverted for demodulation related measurements. If set to INVert, the upper and lower spectrums are swapped.

The Invert function conjugates the spectrum, which is equivalent to taking the negative of the quadrature component in demodulation. The correct setting (Normal or Invert) depends on whether the signal at the input of the instrument has a high or low side mix.

<b>Remote Command</b>	[ :SENSe ] :RHO :SPECtrum INVert   NORMAl [ :SENSe ] :RHO :SPECtrum ?
Example	RHO:SPEC INV RHO:SPEC?
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Preset	NORMAl
State Saved	Saved in instrument state.
Range	Normal Invert
Initial S/W Revision	Prior to A.02.00

## Advanced

Accesses the menu that allows you to set the I/Q origin offset function, active channel identification function, alpha value of the Root Raised Cosine (RRC) filter, and chip rate.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

### EVM Result I/Q Offset

Toggles the I/Q origin offset function between Std (standard) and Exclude.

- Std: The measurement results for EVM, Rho, and Modulation Accuracy (Rho) error take into account the I/Q origin offset.
- Exclude: The measurement results for EVM, Rho, and Modulation Accuracy (Rho) error do not take into account the I/Q origin offset, and the message “EVM excludes I/Q Offset” is displayed in the lower right-hand graph display area.

Turns the automatic mode On or Off, for the I/Q origin offset function.

- Exclude: OFF – The measurement results for EVM and Rho do not take into account the I/Q origin offset.
- Standard: ON – The measurement results for EVM and Rho take into account the I/Q origin offset.

<b>Remote Command</b>	:CALCulate:RHO:IQOFfset:INCLude OFF ON 0 1 :CALCulate:RHO:IQOFfset:INCLude?
Example	CALC:RHO:IQOF:INCL ON CALC:RHO:IQOF:INCL?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	ON
State Saved	Saved in instrument state.
Range	Std Exclude
Initial S/W Revision	Prior to A.02.00

### Active Set Threshold

Toggles the active channel identification function between Auto and Man. If set to Auto, the active channels are determined automatically by the internal algorithm. If set to Man, the active channel

identification is determined by a user definable threshold ranging from 0.00 to –100.00 dB.

<b>Remote Command</b>	:CALCulate:RHO:ASET:THReshold <rel_ampl> :CALCulate:RHO:ASET:THReshold? CALCulate:RHO:ASET:THReshold:AUTO OFF ON 0 1 CALCulate:RHO:ASET:THReshold:AUTO?
Example	CALC:RHO:ASET:THR –20.0 CALC:RHO:ASET:THR? CALC:RHO:ASET:THR:AUTO ON CALC:RHO:ASET:THR:AUTO?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Notes	This command is effective when [:SENSe]:RHO:SBOundary[:BTS] is set to AUTO. (For MS, this command is always effective.)  Turn the automatic mode On or Off, for the active channel identification function.  <ul style="list-style-type: none"> <li>• OFF – The active channel identification for each code channel is determined by a value set by CALCulate:RHO:ASET:THReshold.</li> <li>• ON – The active channels are determined automatically by the internal algorithm.</li> </ul>
Dependencies	See Notes
Preset	0.0 ON
State Saved	Saved in instrument state.
Min	–100.0
Max	0.0
Initial S/W Revision	Prior to A.02.00

### RRC Filter Control

Allows you to change the status (ON/OFF) of the Root Raised Cosine (RRC) filter. This ON/OFF state change involves measurement restart.

<b>Remote Command</b>	[:SENSe]:RHO:FILTer[:RRC][:STATe] OFF ON 0 1 [:SENSe]:RHO:FILTer[:RRC][:STATe]?
Example	RHO:FILT ON RHO:FILT?
Key Path	<b>Meas Setup, Advanced</b>

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Mode	WCDMA
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

**Filter Alpha**

Specifies the alpha value of the Root Raised Cosine (RRC) filter.

<b>Remote Command</b>	[ :SENSE] :RHO:FILTer [:RRC]:ALPHa <real> [ :SENSE] :RHO:FILTer [:RRC]:ALPHa?
Example	RHO:FILT:ALPH 0.3 RHO:FILT:ALPH?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	0.22
State Saved	Saved in instrument state.
Min	0.01
Max	0.50
Initial S/W Revision	Prior to A.02.00

**Chip Rate**

Sets the chip rate.

<b>Remote Command</b>	[ :SENSE] :RHO:CRATe <freq> [ :SENSE] :RHO:CRATe?
Example	RHO:CRAT 3900000 RHO:CRAT?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	3.84 MHz
State Saved	Saved in instrument state.
Min	3.456 MHz
Max	4.224 MHz

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### DTX/Burst Detect

For downlink signals, detects the power burst for either “CM” (Compressed Mode) or “DTX”. In the case of “Compressed Mode”, both I and Q symbol power are set to Off. In the case of “DTX”, either I or Q symbol power, or both, can be set to Off.

For uplink signals, this function detects the HS-DPCCH burst, the subframe of which does not align with the DPCCH slot boundary.

<b>Remote Command</b>	:CALCulate:RHO:DTXBurst 0 1 OFF ON :CALCulate:RHO:DTXBurst?
Example	CALC:RHO:DTXB ON CALC:RHO:DTXB?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Notes	If the HSPA option is enabled, this parameter is active and effective for both uplink and downlink. If the HSPA option is disabled, this parameter is active and effective only for downlink.
Preset	OFF
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Multi Channel Estimator

Allows you to toggle the multi channel estimator function for MMSE between On and Off.

- On: The individual code channels are aligned to the pilot channel to improve the phase error (whether each code phase is aligned or not). This takes a longer time.
- Off: The phase information is computed from one coded signal only. (The phase of each code channel needs to be aligned to the pilot channel.) This operation is briefer.

<b>Remote Command</b>	[:SENSe]:RHO:MCEstimator OFF ON 0 1 [:SENSe]:RHO:MCEstimator?
Example	RHO:MCES ON RHO:MCES?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	OFF

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

**Timing Estimation**

Selects between channel-by-channel and global timing estimation functions for MMSE.

- Channel-by-Channel: The code channels are estimated using individual timing. This function takes longer.
- Global: The individual code channels are estimated using global timing. This function takes less time.

<b>Remote Command</b>	[ :SENSE]:RHO:MCEStimator:TIMing CHANnel GLOBal [ :SENSE]:RHO:MCEStimator:TIMing?
Example	RHO:MCES:TIM CHAN RHO:MCES:TIM?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Preset	GLOBal
State Saved	Saved in instrument state.
Range	Ch-by-Ch Global
Initial S/W Revision	Prior to A.02.00

**Frequency Error Tolerance Range**

Specifies the frequency error tolerance range as one of the following:

- Normal provides a more stringent range of frequency tolerance, which is useful when you want to accurately demodulate signals of higher complexity. For example, when composite channels are modulated on the same signal, the modulation is complex, and frequency error is critical to correct demodulate. In the case of demodulating complex signals, set to 'Normal'
- Wide provides a wider, and less stringent range of frequency error tolerance.

This parameter is valid only when the device type is MS (Uplink). When the device is BTS (Downlink), the menu softkey is disabled (grayed out).

<b>Remote Command</b>	[ :SENSE]:RHO:FERRor:TRANge WIDE NORMal [ :SENSE]:RHO:FERRor:TRANge?
Example	RHO:FERR:TRAN WIDE RHO:FERR:TRAN?

Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Couplings	No
Preset	NORMal
State Saved	Saved in instrument state.
Range	Normal Wide
Initial S/W Revision	Prior to A.02.00

### IF Gain

Enables you to control an internally switched IF amplifier with approximately 10 dB of gain. This amplifier takes full advantage of the RF dynamic range of the analyzer. When it can be turned on without an overload, the dynamic range is always better when the amplifier is set to On, than when it is set to Off. The **IF Gain** key can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

Key Path	<b>Meas Setup, Advanced</b>
Initial S/W Revision	Prior to A.02.00

### IF Gain Auto

Activates the auto rules for IF Gain.

<b>Remote Command</b>	[ :SENSe] :RHO :IF :GAIN :AUTO [ :STATe] OFF   ON   0   1 [ :SENSe] :RHO :IF :GAIN :AUTO [ :STATe] ?
Example	RHO : IF : GAIN : AUTO OFF RHO : IF : GAIN : AUTO ?
Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Notes	This only applies to the RF input. It does not apply to baseband I/Q input.
Couplings	When either the auto attenuation works (for example, with the electrical attenuator) or optimize mechanical attenuator range is requested, the IF Gain setting is changed according to the following rule.  'Auto' sets IF Gain to 'High Gain' under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings, 'Auto' sets IF Gain to 'Low Gain'.
Preset	OFF
State Saved	Saved in instrument state.
Range	Off   On

Modulation Accuracy (Composite EVM) Measurement  
**Meas Setup**

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**IF Gain State**

Selects the range of IF gain.

<b>Remote Command</b>	[ :SENSe] :RHO:IF:GAIN[:STATe] ON OFF 1 0 [ :SENSe] :RHO:IF:GAIN[:STATe] ?
Example	RHO:IF:GAIN OFF RHO:IF:GAIN?
Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Notes	Where ON = high gain OFF = low gain This only applies to the RF input. It does not apply to baseband I/Q input.
Couplings	When either the auto attenuation works (for example, with the electrical attenuator) or optimize mechanical attenuator range is requested, the IF Gain setting is changed according to the following rule.  'Auto' sets IF Gain to 'High Gain' under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings, 'Auto' sets IF Gain to 'Low Gain'.
Preset	OFF
State Saved	Saved in instrument state.
Range	Low Gain (Best for Large Signals)   High Gain (Best Noise Level)
Readback Text	Low Gain   High Gain
Initial S/W Revision	Prior to A.02.00

**PICH Code Number**

Specifies the code number for PICH, which contains the DTX (no transmission) part. PICH has 300 bits in 1 radio frame, but the last 12 bits are not transmitted. Then, PICH needs special handling to measure code domain power. The PICH Code Number enables you to specify which code channel should be set as PICH.

<b>Remote Command</b>	[ :SENSe] :RHO:PICH:SPRead <integer> [ :SENSe] :RHO:PICH:SPRead?
Example	RHO:PICH:SPR 16 RHO:PICH:SPR?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA



Notes	(1) If PICH Code Number and MICH Code Number are the same, the channel is considered as PICH. (2) This parameter is active for BTS. It is grayed out for MS. (3) This parameter is meaningful only if the Symbol Boundary setting is Auto.
Dependencies	See Notes
Preset	16
State Saved	Saved in instrument state.
Min	0
Max	255
Initial S/W Revision	Prior to A.02.00

### MICH Code Number [BTS only]

Specifies the code number for MICH (MBMS Indicator channel), which contains the DTX (no transmission) part. MICH has 300 bits in 1 radio frame, but the last 6 symbols (12 bits) are not transmitted. Therefore, MICH needs special handling to measure code domain power. The MICH Code Number specifies which code channel should be considered as MICH.

Since MICH is an optional channel, the parameter has a BAF setting (On|Off).

Active ID auto-detection is performed. However, the result can be 7.5ksp channels if MICH's two consecutive demod bits are the same. If this occurs, these 7.5ksp channels are automatically set to be 15ksp channels.

<b>Remote Command</b>	[ :SENSe] :RHO:MICH:SPRead <integer> [ :SENSe] :RHO:MICH:SPRead? [ :SENSe] :RHO:MICH:STATe OFF ON 0 1 [ :SENSe] :RHO:MICH:STATe?
Example	RHO:MICH:SPR 4 RHO:MICH:SPR? RHO:MICH:STAT ON RHO:MICH:STAT?
Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
Notes	(1) If the PICH Code Number and MICH Code Number are the same, the channel is considered as PICH. (2) This parameter is active for BTS. It is grayed out for MS. (3) This parameter is meaningful only if Symbol Boundary setting is Auto. This parameter enables or disables MICH code number setting.

## Modulation Accuracy (Composite EVM) Measurement

### Meas Setup

Dependencies	See Notes
Preset	2 OFF
State Saved	Saved in instrument state.
Min	2
Max	255
Initial S/W Revision	Prior to A.02.00

### Meas Preset

Restores all measurement parameters to their default values.

<b>Remote Command</b>	:CONFigure:RHO
Example	CONF:RHO
Key Path	<b>Meas Setup</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## Peak Search

Accesses a menu that enables you to control the peak search function and places a marker on the trace point with highest peak.

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example	CALC:RHO:MARK2:MAX
Key Path	<b>Front-panel key</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## Next Peak

Moves the selected marker to the peak that has the next highest amplitude that is less than the marker's current value.

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT
Example	CALC:RHO:MARK2:MAX:NEXT
Key Path	<b>Peak Search</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## Next Pk Right

Moves the selected marker to the nearest peak to the right of the current marker that meets all enabled peak criteria.

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT
Example	CALC:RHO:MARK2:MAX:RIGH
Key Path	<b>Peak Search</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

## Next Pk Left

Moves the selected marker to the nearest peak to the left of the current marker that meets all enabled

Modulation Accuracy (Composite EVM) Measurement  
**Peak Search**

peak criteria.

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT
Example	CALC:RHO:MARK2:MAX:LEFT
Key Path	<b>Peak Search</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00

### Marker Delta

Sets the control mode for the selected marker to **Delta** mode.

Key Path	<b>Peak Search</b>
Initial S/W Revision	Prior to A.02.00

### Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest y-axis value.

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak
Example	CALC:RHO:MARK:PTP
Key Path	<b>Peak Search</b>
Mode	WCDMA
Notes	Turns on the Marker active function.
Dependencies	Grayed out when <b>Coupled Markers</b> is on.
Initial S/W Revision	Prior to A.02.00

### Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

<b>Remote Command</b>	:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum
Example	CALC:RHO:MARK:MIN
Key Path	<b>Peak Search</b>
Mode	WCDMA

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## SPAN X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

This menu is available when the selected view is “I/Q Error” on page 1113 or “Code Domain Power” on page 1117. It is **not** available when in the following views:

“Peak/Avg Metrics” on page 1122 “I/Q Measured Polar Graph” on page 1105

“Capture Time Summary” on page 1128

“Slot CDE/EVM” on page 1132

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value

Sets the chip reference value on the horizontal axis. The default setting is 0.000 chips. When Auto Scaling is set to On, the displayed graphs use a Scale/Div value determined by the analyzer, based on the measurement result.

Key Path	<b>Span X Scale</b>
Initial S/W Revision	Prior to A.02.00

### I/Q Error View - EVM Window

Sets the chip reference value on the horizontal axis in the EVM window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALE]:RLEVel <real> :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALE]:RLEVel?
Example	DISP:RHO:VIEW2:WIND:TRAC:X:RLEV 0.0 DISP:RHO:VIEW2:WIND:TRAC:X:RLEV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  WINDow1: Evm Error window on I/Q Error view
Couplings	See Notes
Preset	0.0

State Saved	Saved in instrument state.
Min	0.0
Max	5000000.0
Initial S/W Revision	Prior to A.02.00

### I/Q Error View - Mag Error Window

Sets the chip reference value on the horizontal axis in the magnitude error window.

<b>Remote Command</b>	:DISP:lay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:RLEVel <real> :DISP:lay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:RLEVel?
Example	DISP:RHO:VIEW2:WIND2:TRAC:X:RLEV 0.0 DISP:RHO:VIEW2:WIND2:TRAC:X:RLEV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  WINDow2: Mag Error window on I/Q Error view
Couplings	See Notes
Preset	0.0
State Saved	Saved in instrument state.
Min	0.0
Max	5000000.0
Initial S/W Revision	Prior to A.02.00

### I/Q Error View - Phase Error Window

Sets the chip reference value on the horizontal axis in the phase error window.

<b>Remote Command</b>	:DISP:lay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:RLEVel <real> :DISP:lay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:RLEVel?
Example	DISP:RHO:VIEW2:WIND3:TRAC:X:RLEV 0.0 DISP:RHO:VIEW2:WIND3:TRAC:X:RLEV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA

Modulation Accuracy (Composite EVM) Measurement  
**SPAN X Scale**

Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  WINDow3: Phase window on I/Q Error view
Couplings	See Notes
Preset	0.0
State Saved	Saved in instrument state.
Min	0.0
Max	5000000.0
Initial S/W Revision	Prior to A.02.00

**Scale/Div**

Sets the horizontal scale by changing a chip value per division. When the Scale Coupling default setting On is active, the displayed plots use a Scale/Div value determined by the analyzer, which is based on the measurement result.

Key Path	<b>Span X Scale</b>
Initial S/W Revision	Prior to A.02.00

**I/Q Error View - EVM Window**

Sets the horizontal scale by changing a chip value per division in the EVM window.

<b>Remote Command</b>	:DISP:play:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALE]:PDIVision <real>  :DISP:play:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALE]:PDIVision?
Example	DISP:RHO:VIEW2:WIND:TRAC:X:PDIV 100.0 DISP:RHO:VIEW2:WIND:TRAC:X:PDIV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off..  WINDow1: EVM window on I/Q Error view
Couplings	See Notes
Preset	3840.0
State Saved	Saved in instrument state.
Min	64



Max	38400.0
Initial S/W Revision	Prior to A.02.00

### I/Q Error View - Mag Error Window

Sets the horizontal scale by changing a chip value per division in the magnitude error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:PDIVision <real>  :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:PDIVision?
Example	DISP:RHO:VIEW2:WIND2:TRAC:X:PDIV 100.0 DISP:RHO:VIEW2:WIND2:TRAC:X:PDIV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  WINDow2: Mag Error window on I/Q Error view
Couplings	See Notes
Preset	3840.0
State Saved	Saved in instrument state.
Min	64
Max	38400.0
Initial S/W Revision	Prior to A.02.00

### I/Q Error View - Phase Error Window

Sets the horizontal scale by changing a chip value per division in the phase error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:PDIVision <real>  :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:PDIVision?
Example	DISP:RHO:VIEW2:WIND3:TRAC:X:PDIV 100.0 DISP:RHO:VIEW2:WIND3:TRAC:X:PDIV?
Key Path	<b>Span X Scale</b>
Mode	WCDMA

Modulation Accuracy (Composite EVM) Measurement  
**SPAN X Scale**

Notes	If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.  WINDow3: Phase Error window on I/Q Error view
Couplings	See Notes
Preset	3840.0
State Saved	Saved in instrument state.
Min	64
Max	38400.0
Initial S/W Revision	Prior to A.02.00

**Ref Position**

Sets the reference position for the X axis to the left, center, or right of the display.

Key Path	<b>Span X Scale</b>
Initial S/W Revision	Prior to A.02.00

**I/Q Error View - EVM Window**

Sets the X axis reference position in the EVM window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHT  :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition?
Example	DISP:RHO:VIEW2:WIND:TRAC:X:RPOS LEFT DISP:RHO:VIEW2:WIND:TRAC:X:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Any value smaller than 0 is clipped to 0. Any value larger than 10 is clipped to 10.
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00

### I/Q Error View - Mag Error Window

Sets the X axis reference position in the magnitude error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:RPOStion LEFT CENTer RIGHT  :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:RPOStion?
Example	DISP:RHO:VIEW2:WIND2:TRAC:X:RPOS LEFT DISP:RHO:VIEW2:WIND2:TRAC:X:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00

### I/Q Error View - Phase Error Window

Sets the X axis reference position in the phase error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:RPOStion LEFT CENTer RIGHT  :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:RPOStion?
Example	DISP:RHO:VIEW2:WIND3:TRAC:X:RPOS LEFT DISP:RHO:VIEW2:WIND3:TRAC:X:RPOS?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00

### Auto Scaling

Toggles the Auto Scaling function between On and Off. When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.

When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to

Modulation Accuracy (Composite EVM) Measurement  
**SPAN X Scale**

Off.

Key Path	<b>Span X Scale</b>
Initial S/W Revision	Prior to A.02.00

**I/Q Error View - EVM Window**

When Auto Scaling is On and the Restart front-panel key is pressed, automatically displays the scale per division and reference value results in the EVM window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON  :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPle?
Example	DISP:RHO:VIEW2:WIND:TRAC:X:COUP ON DISP:RHO:VIEW2:WIND:TRAC:X:COUP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off.  WINDow[1]: Evm Error window on I/Q Error view
Couplings	See Notes
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

**I/Q Error View – Mag Error Window**

When Auto Scaling is On and the Restart front-panel key is pressed, automatically displays the scale per division and reference value results in the magnitude error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPle 0 1 OFF ON  :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPle?
Example	DISP:RHO:VIEW2:WIND2:TRAC:X:COUP ON DISP:RHO:VIEW2:WIND2:TRAC:X:COUP?
Key Path	<b>Span X Scale</b>

Mode	WCDMA
Notes	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off.  WINDow2: Mag Error window on I/Q Error view
Couplings	See Notes
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### I/Q Error View – Phase Error Window

When Auto Scaling is On and the Restart front-panel key is pressed, automatically displays the scale per division and reference value results in the phase error window.

<b>Remote Command</b>	:DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:COUPle 0 1 OFF ON  :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:COUPle?
Example	DISP:RHO:VIEW2:WIND3:TRAC:X:COUP ON DISP:RHO:VIEW2:WIND3:TRAC:X:COUP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	When this parameter is set to On, pressing the front-panel Restart key activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off.  WINDow[3]: Phase window on I/Q Error view
Couplings	See Notes
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Start Code Number

Sets the start value of the code range for the code domain power graph (CDP).

<b>Remote Command</b>	:DISPlay:RHO:CDOMain:SPAN:STARt <integer> :DISPlay:RHO:CDOMain:SPAN:STARt?
Example	DISP:RHO:CDOM:SPAN:STAR 10 DISP:RHO:CDOM:SPAN:STAR?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Couplings	The Start Code Number and Stop Code Number are coupled to each other, according to the following conditions:  (A) Stop Code Number > Start Code Number and (B) Stop Code Number – Start Code Number >= 63  If the Changing Start Code Number does not satisfy conditions (A) and (B), the Stop Code Number is changed to satisfy conditions (A), and (C) below. (C) Stop Code Number – Start Code Number = 63;
Preset	0
State Saved	Saved in instrument state.
Min	0
Max	448
Initial S/W Revision	Prior to A.02.00

### Stop Code Number

Sets the stop value of the code range for the code domain power graph (CDP).

<b>Remote Command</b>	:DISPlay:RHO:CDOMain:SPAN:STOP <integer> :DISPlay:RHO:CDOMain:SPAN:STOP?
Example	DISP:RHO:CDOM:SPAN:STOP 200 DISP:RHO:CDOM:SPAN:STOP?
Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Default value is Device sensitive as follows:  BTS: 511 MS: 255

Couplings	The Start Code Number and Stop Code Number are coupled to each other, according to the following conditions:  (A) Stop Code Number > Start Code Number  and  (B) Stop Code Number – Start Code Number >= 63  If the Changing Start Code Number does not satisfy conditions (A) and (B), the Stop Code Number is changed to satisfy conditions (A), and (C) below.  (C) Stop Code Number – Start Code Number = 63;
Preset	511
State Saved	Saved in instrument state.
Min	63
Max	511
Initial S/W Revision	Prior to A.02.00

**Expand**

Toggles the expanding function of the code domain power graph between On and Off. If set to On, the CDP graph is expanded horizontally to show 64 spread codes centered at (max scale)/2 of the marker position. When toggled back to Off, the spread code range returns to the previous setting.

Key Path	<b>Span X Scale</b>
Mode	WCDMA
Notes	Valid only for Power Bar Graph Window
Preset	Off
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

## **Sweep/Control**

Accesses a menu that enables you to pause and restart the measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## **Pause/Resume**

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing Resume un-pauses the measurement. See [“Pause/Resume” on page 1698](#) under “Sweep/Control” for details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00



---

## Trace/Detector

There is no Trace/Detector functionality supported in the Modulation Accuracy measurement. The front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## **Trigger**

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement.

See [“Trigger” on page 1753](#) for more information.

## View/Display

Accesses a menu that allows you to select the Measurement View, and also control various Display functions.

There are six alternative views for this measurement. Some views display multiple windows. For more information about a specific view, see the following:

[“I/Q Measured Polar Graph” on page 1105](#)

[“I/Q Error” on page 1113](#)

[“Code Domain Power” on page 1117](#)

[“Peak/Avg Metrics” on page 1122](#)

[“Capture Time Summary” on page 1128](#)

[“Slot CDE/EVM” on page 1132](#)

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### View Selection (Remote Command only)

Allows you to select the desired measurement view from the following selections.

In the following table:

- The Enumerated ID is used with the SCPI Command :DISP:RHO:VIEW[:SEL].
- The Numeric ID is used with the SCPI Command :DISP:RHO:VIEW:NSEL.

Enumerated ID	Numeric ID	View Name & Details
POLar	1	I/Q Measured Polar Graph - Provides a combination view of an I/Q measured polar vector graph and the summary data.
ERRor	2	I/Q Error (Tri View) - Provides a combination view of the EVM, magnitude error, and phase error graphs.
PGRaph	3	Code Domain Power - Provides a graph of Modulation Accuracy (Rho) channels individual power in dB. A table of summary data for the Modulation Accuracy (Rho) channels is provided in the text window.
TABLE	4	Peak/Average Metrics - Provides a table of magnitude error, phase error, EVM, and the modulation accuracy summary data such as rho, peak and rms EVM, peak Modulation Accuracy (Rho) error, magnitude error, phase error, in a text window, in terms of averaged and detected peak/maximum value in the average cycle.

Modulation Accuracy (Composite EVM) Measurement  
View/Display

Enumerated ID	Numeric ID	View Name & Details
SUMMARY	5	Capture Time Summary – Provides a table that summarizes measurement results through the Capture Interval. Highlights the peak/worst result through the Capture Interval slot-by-slot.
CDError	6	Slot CDE/EVM(Tri View) – Provides a combination view of Frequency Error, Peak CDE, and EVM graphs.

<b>Remote Command</b>	:DISPlay:RHO:VIEW[:SElect] POLar   ERRor   PGRaph   TABLE   SUMMARY   CDError :DISPlay:RHO:VIEW[:SElect]?
Example	DISP:RHO:VIEW:SEL CDE DISP:RHO:VIEW:SEL?
Mode	WCDMA
Preset	POLar
State Saved	Saved in instrument state.
Range	I/Q Measured Polar Graph   I/Q Error   Code Domain Power   Peak/Avg Metrics   Capture Time Summary   Slot CDE/EVM
Initial S/W Revision	Prior to A.02.00

**View Selection by number (Remote Command only)**

Displays the numeric values of the measurement results.

<b>Remote Command</b>	:DISPlay:RHO:VIEW:NSElect <integer> :DISPlay:RHO:VIEW:NSElect?
Example	DISP:RHO:VIEW:NSEL 1 DISP:RHO:VIEW:NSEL?
Mode	WCDMA
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	6
Initial S/W Revision	Prior to A.02.00

## Display

Accesses a menu of functions that enable you to set the display parameters. All measurements have the same Display menu and same functionality for each key in the Display menu.

See [“Display” on page 1813](#) for more information.

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

## I/Q Measured Polar Graph

This view has two windows:

Metrics (left)

I/Q Measured Polar Vector graph display (right)

The traces and results of this view are only for the slot specified by the measurement offset. The traces are not averaged, even if the average is on.

The parameters displayed in these windows depend on the setting of Radio Device, in the Mode Setup menu (see [“Radio” on page 1651](#)). For details of each window in the view for each of these settings, see:

[“I/Q Measured Polar Graph View \(BTS\)” on page 1105](#)

[“I/Q Measured Polar Graph View \(MS\)” on page 1107](#)

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

## I/Q Measured Polar Graph View (BTS)


The figure below shows an example of the two windows of this view. For descriptions of each window, see:

[“I/Q Measured Polar Vector window” on page 1106](#)

[“Metrics window” on page 1106](#)

This topic describes this view as displayed when Radio Device is set to BTS. For an overview, see [“I/Q Measured Polar Graph” on page 1105](#).

Modulation Accuracy (Composite EVM) Measurement  
View/Display

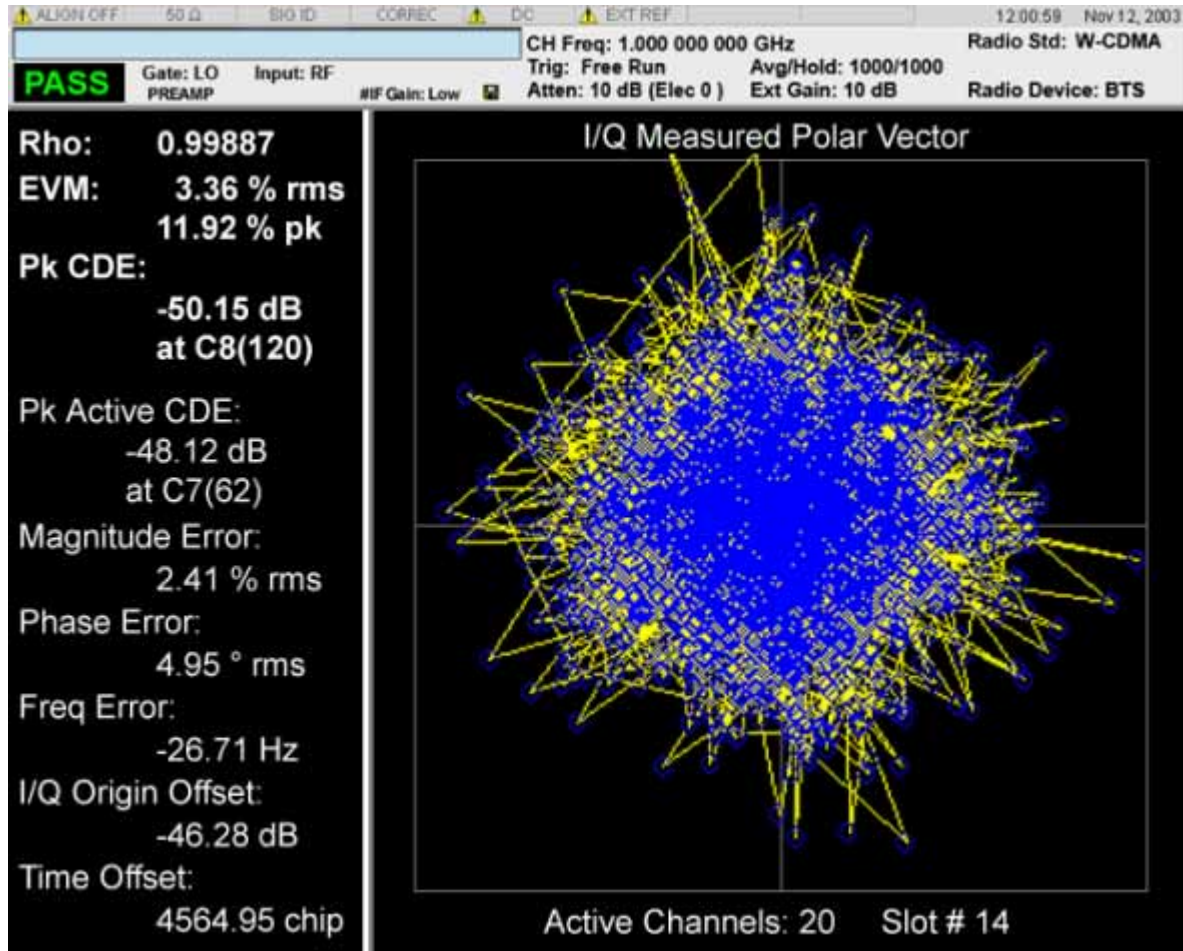

**I/Q Measured Polar Vector window**

These traces and scalar results are of the slot specified by Meas Offset.

Marker Operation	None
Corresponding Trace	Corrected measured trace (n=5)
Active Channels	n=1 10th a Number of Active Channels.
Slot Number	NA

**Metrics window**

These traces and scalar results are of the slot specified by Meas Offset.

Name	Corresponding Results	Display Format
Rho	n=1 7th rho	9.99999

Name	Corresponding Results	Display Format
EVM (rms)	n=1 1st EVM over the entire measurement area	99.99 % rms
EVM (pk)	n=1 2nd peak EVM in the measurement area	99.99 % pk
Pk CDE (dB)	n=1 8th Peak Code Domain Error relative to the mean power	-99.99 dB
Pk CDE (Ch No.)	n=1 9th Channel number in which the peak code domain error is detected at the max spreading factor.	CX(Y) x=8 for downlink Y: OVVSF code number (0 ... 255)
Pk Active CDE (dB)	None	-99.99 dB
Pk Active CDE (Ch No.)	None	CX(Y) X: OVVSF level (2 ... 9) 2: 960ksps ... 9:7.5ksps Y: OVVSF code number (0 ... 2 <sup>x-1</sup> )
Magnitude Error	n=1 3rd Average magnitude error over the entire measurement area	99.99 % rms
Phase Error	n=1 4th Average phase error over the entire measurement area	99.99 - rms
Freq Error	n=1 6th Frequency error in the measured signal	99.99 Hz
I/Q Origin Offset	n=1 5th I and Q error (magnitude squared) offset from the origin.	-99.99 dB
Time Offset	N=1 11th Pilot phase timing from the acquisition trigger point.	9999.99 chip

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

### I/Q Measured Polar Graph View (MS)

The figure below shows an example of the two windows of this view. For descriptions of each window,


Modulation Accuracy (Composite EVM) Measurement  
View/Display

see:

“I/Q Measured Polar Vector window” on page 1108

“Metrics window” on page 1109

This topic describes this view as displayed when Radio Device is set to MS. For an overview, see “I/Q Measured Polar Graph” on page 1105.

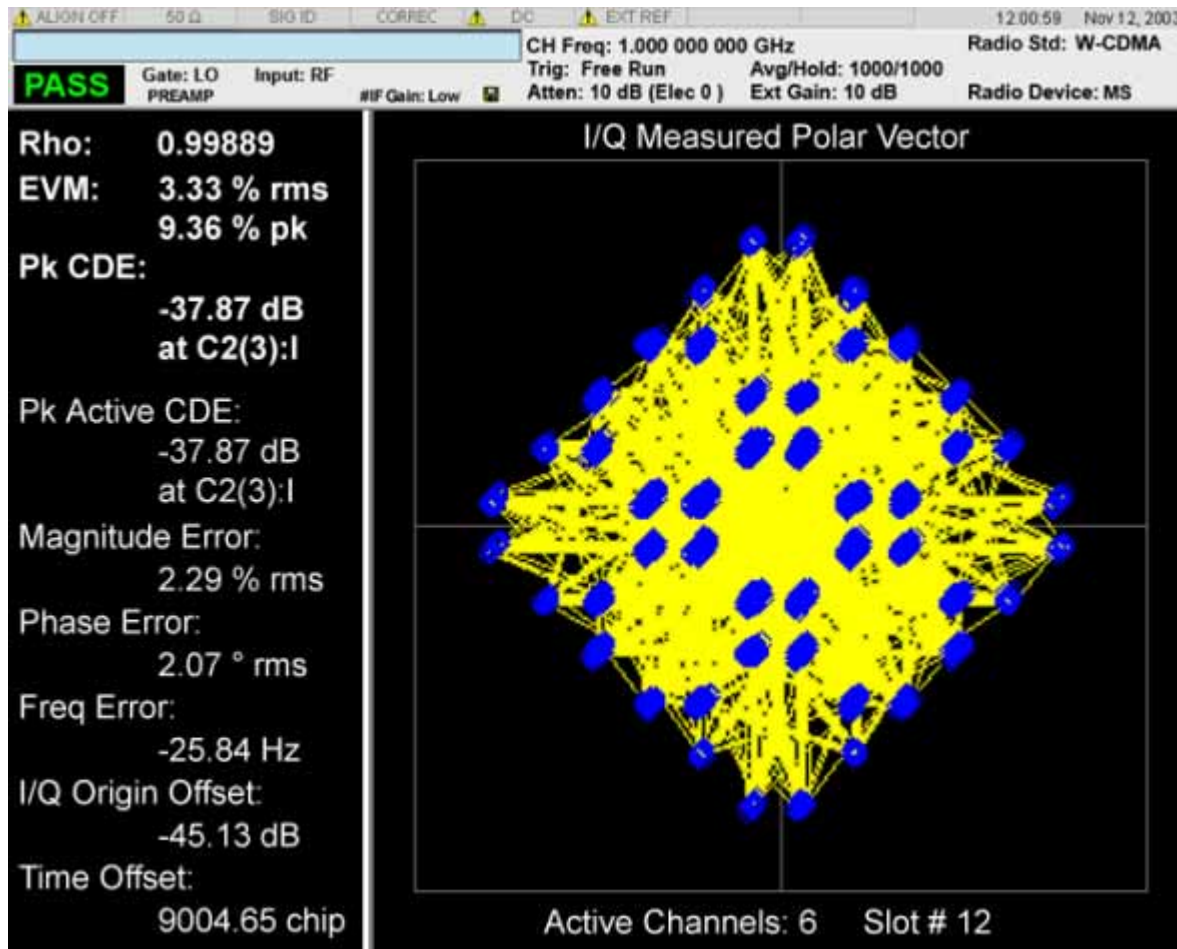

**I/Q Measured Polar Vector window**

These traces and scalar results are of the slot specified by Meas Offset.

Marker Operation	No
Corresponding Trace	Corrected measured trace (n=5)
Active Channels	n=1 10th a Number of Active Channels.
Slot Number	NA



### Metrics window

These traces and scalar results are of the slot specified by Meas Offset.

Name	Corresponding Results	Display Format
Rho	n=1 7th rho	9.99999
EVM (rms)	n=1 1st EVM over the entire measurement area	99.99 % rms
EVM (pk)	n=1 2nd peak EVM in the measurement area	99.99 % pk
Pk CDE (dB)	n=1 8th Peak Code Domain Error relative to the mean power	-99.99 dB
Pk CDE (Ch No.)	n=1 9th Channel number in which the peak code domain error is detected at the max spreading factor.	CX(Y) X=2 for uplink Y: OVSF code number (0 ... 3)
Pk Active CDE (dB)	None	-99.99 dB
Pk Active CDE (Ch No.)	None	CX(Y) X: OVSF level (1 ... 8) 1: 1920ksps ... 8:15ksps Y: OVSF code number (0 ... 2 <sup>x-1</sup> )
Magnitude Error	n=1 3rd Average magnitude error over the entire measurement area	99.99 % rms
Phase Error	n=1 4th Average phase error over the entire measurement area	99.99 - rms
Freq Error	n=1 6th Frequency error in the measured signal	99.99 Hz
I/Q Origin Offset	n=1 5th I and Q error (magnitude squared) offset from the origin.	-99.99 dB
Time Offset	N=1 11th Pilot phase timing from the acquisition trigger point.	9999.99 chip

Modulation Accuracy (Composite EVM) Measurement  
View/Display

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### I/Q Polar Vec/ConstIn

Specifies the format of the Polar Vector graph display. You can select one of the following formats:

Vec ConstIn (Vector and Constellation)

Vector (Vector only)

Constellation (Constellation only)

<b>Remote Command</b>	:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:POLar VC VECTor CONSTln  :DISPlay:RHO:VIEW[1]:WINDow2:TRACe:POLar?
Example	DISP:RHO:VIEW:WIND2:TRAC:POL CONS DISP:RHO:VIEW:WIND2:TRAC:POL?
Key Path	<b>View/Display, I/Q Measured Polar Graph</b>
Mode	WCDMA
Preset	VC
State Saved	Saved in instrument state.
Range	Vec & ConstIn   Vector   Constellation
Initial S/W Revision	Prior to A.02.00

### Chip Offset

Specifies the number of chips offset from the first chip in a captured slot.

<b>Remote Command</b>	:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:COFFset <integer> :DISPlay:RHO:VIEW[1]:WINDow2:TRACe:COFFset?
Example	DISP:RHO:VIEW:WIND2:TRAC:COFF 100 DISP:RHO:VIEW:WIND2:TRAC:COFF?
Key Path	<b>View/Display, I/Q Measured Polar Graph</b>
Mode	WCDMA
Preset	0
State Saved	Saved in instrument state.
Min	0
Max	2560 – I/Q chips
Initial S/W Revision	Prior to A.02.00

## I/Q Chips

Specifies the number of I/Q chips displayed for the I/Q waveforms.

<b>Remote Command</b>	:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:IQCHips <integer> :DISPlay:RHO:VIEW[1]:WINDow2:TRACe:IQCHips?
Example	DISP:RHO:VIEW:WIND2:TRAC:IQCH 10 DISP:RHO:VIEW:WIND2:TRAC:IQCH?
Key Path	<b>View/Display, I/Q Measured Polar Graph</b>
Mode	WCDMA
Preset	2560
State Saved	Saved in instrument state.
Min	1
Max	2560
Initial S/W Revision	Prior to A.02.00

## Interpolation

Toggles the interpolation function between On and Off. If set to On, the solid lines between chip dots are converted to smoothed curves by the interpolation function.

<b>Remote Command</b>	:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe] 0 1 OFF ON :DISPlay:RHO:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe]?
Example	DISP:RHO:VIEW:WIND2:TRAC:INTP ON DISP:RHO:VIEW:WIND2:TRAC:INTP?
Key Path	<b>View/Display, I/Q Measured Polar Graph</b>
Mode	WCDMA
Dependencies	Grayed out if the selected view is I/Q Measured Polar Graph and selected I/Q Polar Vec/Constln is Constellation.
Preset	OFF
State Saved	Saved in instrument state.
Range	On   Off
Initial S/W Revision	Prior to A.02.00

## +45° Rotation

Toggles the display rotation function between On and Off. If set to On, the I/Q polar vector or I/Q polar

Modulation Accuracy (Composite EVM) Measurement  
View/Display

constellation graph is rotated by +45 degrees to provide a rectangular display.

<b>Remote Command</b>	:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATE] 0 1 OFF ON :DISPlay:RHO:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATE]?
Example	DISP:RHO:VIEW:WIND2:TRAC:ROTQ ON DISP:RHO:VIEW:WIND2:TRAC:ROTQ?
Key Path	<b>View/Display, I/Q Measured Polar Graph</b>
Mode	WCDMA
Preset	OFF
State Saved	Saved in instrument state.
Range	On   Off
Initial S/W Revision	Prior to A.02.00

**Full Vector**

Toggles the full vector display function between On and Off. If set to On, the full vector traces, that are shown in gray, are displayed in the background of the polar vector solid traces, which are shown in yellow. Both traces can be interpolated by using the Interpolation key.

<b>Remote Command</b>	:DISPlay:RHO:VIEW[1]:WINDow2:TRACe:FVEctor[:STATE] 0 1 OFF ON :DISPlay:RHO:VIEW[1]:WINDow2:TRACe:FVEctor[:STATE]?
Example	DISP:RHO:VIEW:WIND2:TRAC:FVEC ON DISP:RHO:VIEW:WIND2:TRAC:FVEC?
Key Path	<b>View/Display, I/Q Measured Polar Graph</b>
Mode	WCDMA
Dependencies	Grayed out if the selected view is I/Q Measured Polar Graph and the selected I/Q Polar Vec/Constln is Constellation.
Preset	OFF
State Saved	Saved in instrument state.
Range	On   Off
Initial S/W Revision	Prior to A.02.00

### Time Offset Unit

Toggles the unit of Time Offset result between Chip and Second.

<b>Remote Command</b>	:DISPlay:RHO:VIEW[1]:WINDow[1]:TEXT:TFUNit CHIP SECond :DISPlay:RHO:VIEW[1]:WINDow[1]:TEXT:TFUNit?
Example	DISP:RHO:VIEW:WIND:TEXT:TFUN SEC DISP:RHO:VIEW:WIND:TEXT:TFUN?
Key Path	<b>View/Display, I/Q Measured Polar Graph</b>
Mode	WCDMA
Notes	This command only affects the display result. Results returned by remote commands are always expressed in units of "CHIPS".
Preset	CHIP
State Saved	Saved in instrument state.
Range	Chip   Second
Initial S/W Revision	Prior to A.02.00

### I/Q Error

This view has three windows:

Magnitude Error window (upper)

Phase Error window (middle)

EVM window (lower)

The traces of this view are not averaged, even if the average function is on.

The parameters displayed in these windows depend on the setting of Radio Device, in the Mode Setup menu (see [“Radio” on page 1651](#)). For details of each window in the view for each of these settings, see:

[“I/Q Error View \(BTS\)” on page 1113](#)

[“I/Q Error View \(MS\)” on page 1115](#)

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### I/Q Error View (BTS)

The figure below shows an example of the three windows of this view. For descriptions of each window, see:


[“EVM window” on page 1115](#)

[“Magnitude Error window” on page 1115](#)

Modulation Accuracy (Composite EVM) Measurement  
View/Display

“Phase Error window” on page 1115

This topic describes this view as displayed when Radio Device is set to BTS. For an overview, see “I/Q Error” on page 1113.

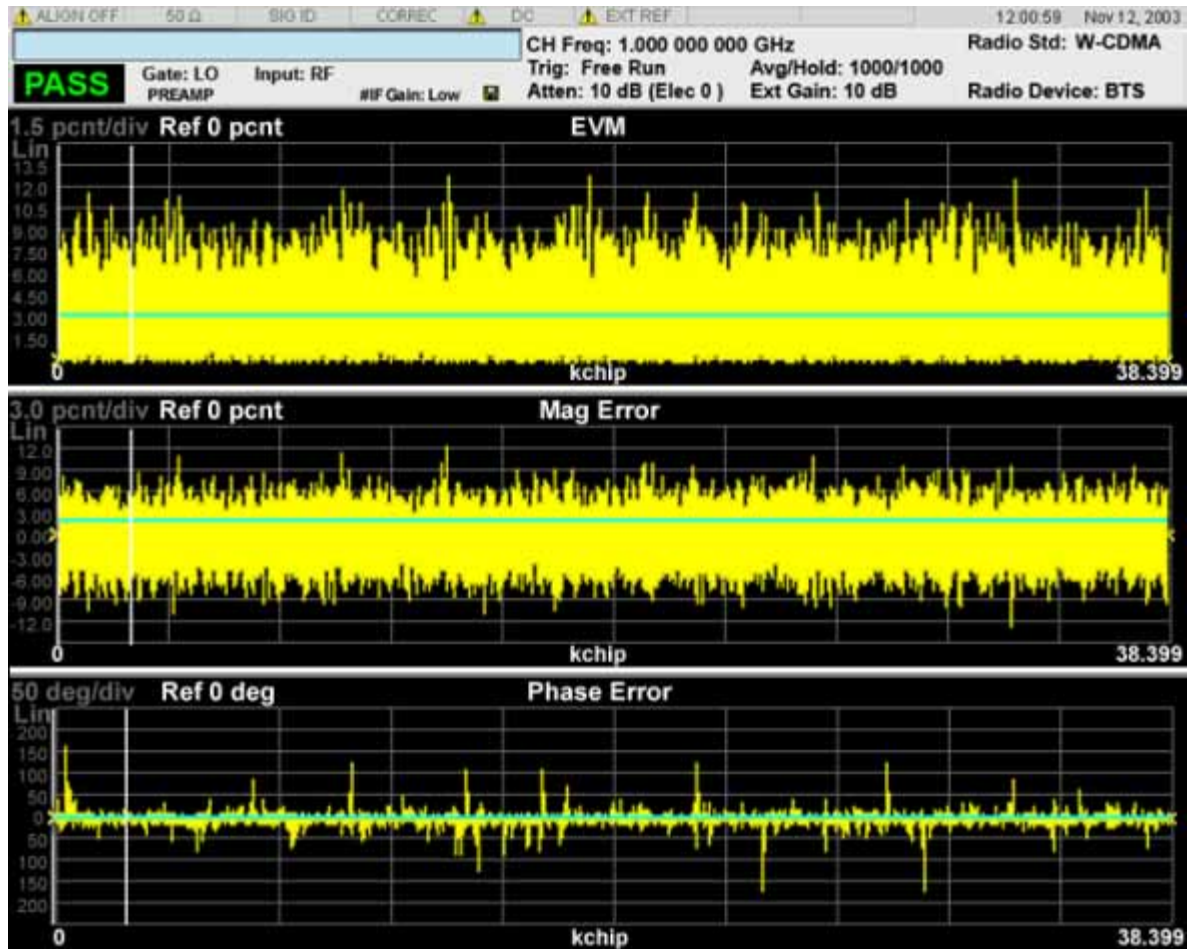

**EVM window**

Marker Operation	Yes
Corresponding Trace	EVM trace (n=2)

**Magnitude Error window**

Marker Operation	Yes
Corresponding Trace	Magnitude error trace (n=3)

**Phase Error window**

Marker Operation	Yes
Corresponding Trace	Phase error trace (n=4)

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

**I/Q Error View (MS)**

The figure below shows an example of the three windows of this view. For descriptions of each window, see:


[“EVM window” on page 1117](#)

[“Magnitude Error window” on page 1117](#)

[“Phase Error window” on page 1117](#)

This topic describes this view as displayed when Radio Device is set to MS. For an overview, see [“I/Q Error” on page 1113](#).

Modulation Accuracy (Composite EVM) Measurement  
View/Display

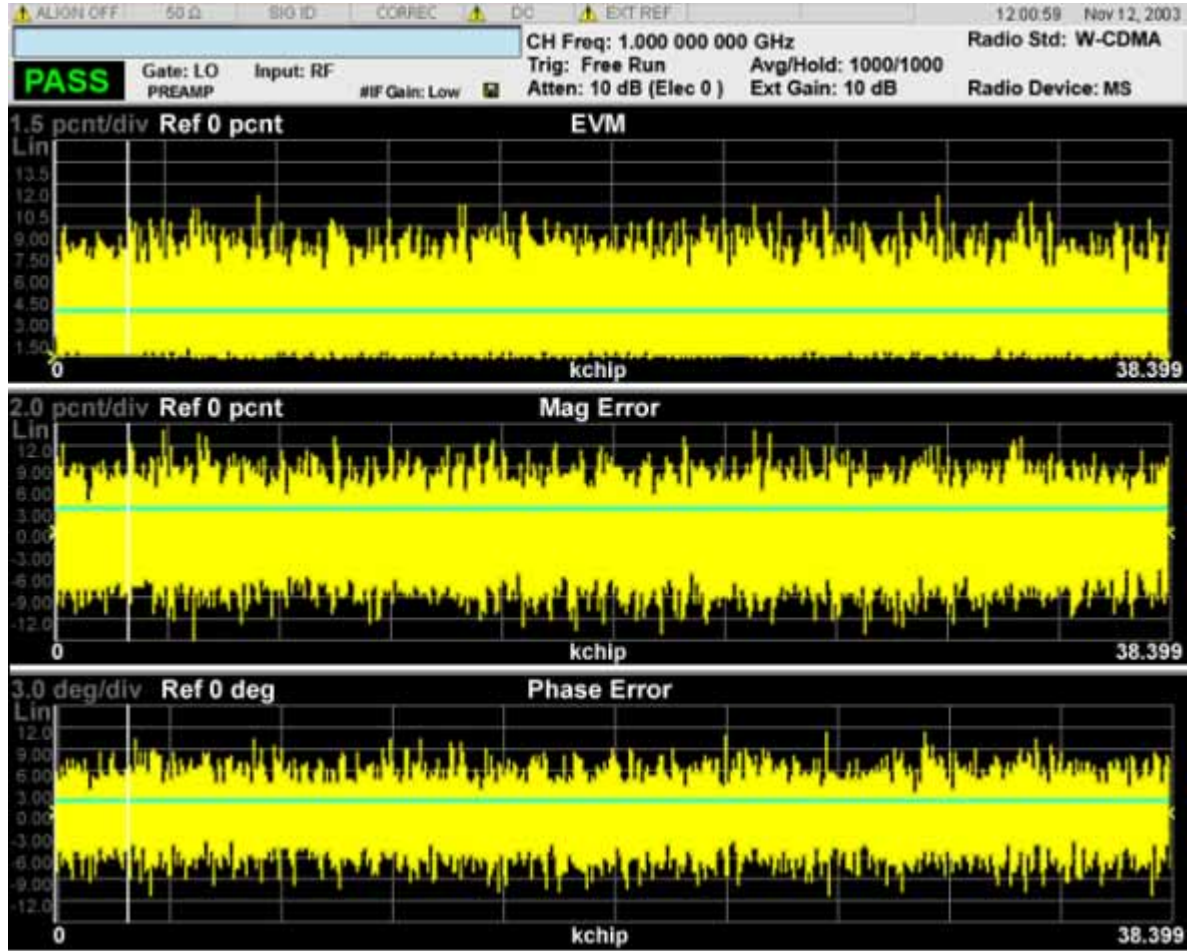



### EVM window

Marker Operation	Yes
Corresponding Trace	EVM trace (n=2)

### Magnitude Error window

Marker Operation	Yes
Corresponding Trace	Magnitude error trace (n=3)

### Phase Error window

Marker Operation	Yes
Corresponding Trace	Phase error trace (n=4)

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

## Code Domain Power

This view has two windows:

Power Bar Graph window (upper)

Metrics (lower)

The traces and results of this view are only for the slot specified by the measurement offset. The results are not averaged, even if the average function is on.

The parameters displayed in these windows depend on the setting of Radio Device, in the Mode Setup menu (see [“Radio” on page 1651](#)). For details of each window in the view for each of these settings, see:

[“Code Domain Power View \(BTS\)” on page 1117](#)

[“Code Domain Power View \(MS\)” on page 1119](#)

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### Code Domain Power View (BTS)

The figure below shows an example of the two windows of this view. For descriptions of each window, see:


[“Power Bar Graph window” on page 1118](#)

[“Metrics window” on page 1118](#)

This topic describes this view as displayed when Radio Device is set to BTS. For an overview, see [“Code](#)

Modulation Accuracy (Composite EVM) Measurement  
View/Display

Domain Power” on page 1117.

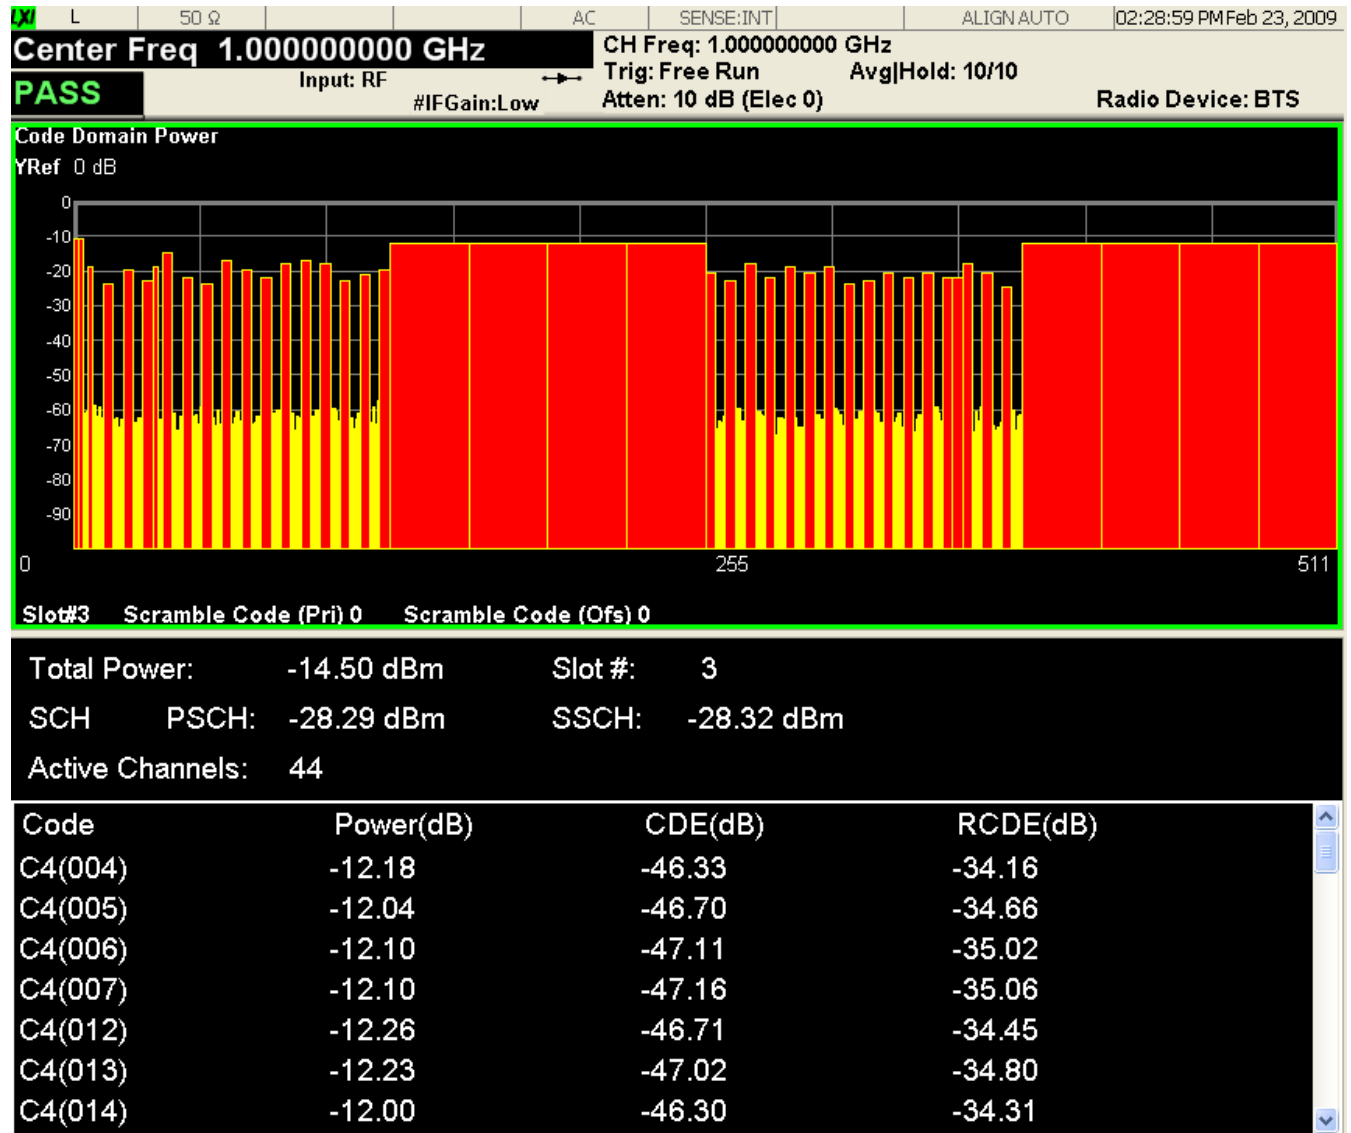

**Power Bar Graph window**

These traces and scalar results are of the slot specified by the Meas Offset.

Marker Operation	Yes
Corresponding Trace	CDP (n=8)

**Metrics window**

For this window, the View/Display key accesses a submenu that provides the following controls for the active channel list:

Prev Page - Returns one page back to the previous page of measurement results.

Next Page - Moves one page forward to the next page of measurement results.

Scroll Up - Moves one line upward from the current page of measurement results each time the key is pressed.

Scroll Down - Moves one line downward from the current page of measurement results each time the key is pressed.

First Page - Moves from the current page to the first page of measurement results.

Last Page - Moves from the current page to the last page of measurement results.

These traces and scalar results are of the slot specified by Meas Offset.

Name	Corresponding Results	Display Format
Total Power	None Absolute Total Power.	99.99 dBm
PSCH	None	99.99 dBm
SSCH	None	99.99 dBm
Active Channels	n=1 10th Number of Active Channels.	99
Code	n=7 (N-1)*5+2 number OVSF Code number for N th Active Channel	CX(Y) X: OVFSF level (2 ... 9) 2:960ksps ... 9:7.5ksps Y: OVFSF code number (0 ... 2 <sup>x-1</sup> )
Power (dB)	n=7 (N-1)*5+4 number Power Level (in dB) for N th Active Channel	99.99
CDE (dB)	n=7 N*5 number Code Domain Error for N th Active Channel	99.99
RCDE (dB) (Note 1)	n=16 (N-1)*5+4 number Power Level (in dB) for N th Active Channel	99.99

Note 1: This column is displayed only when W-CDMA HSPA and HSPA+ option licenses are installed and enabled. Otherwise it is not displayed.

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

### Code Domain Power View (MS)

The figure below shows an example of the two windows of this view. For descriptions of each window,


Modulation Accuracy (Composite EVM) Measurement  
View/Display

see:

“Power Bar Graph window” on page 1120

“Metrics window” on page 1121

This topic describes this view as displayed when Radio Device is set to MS. For an overview, see “Code Domain Power” on page 1117.

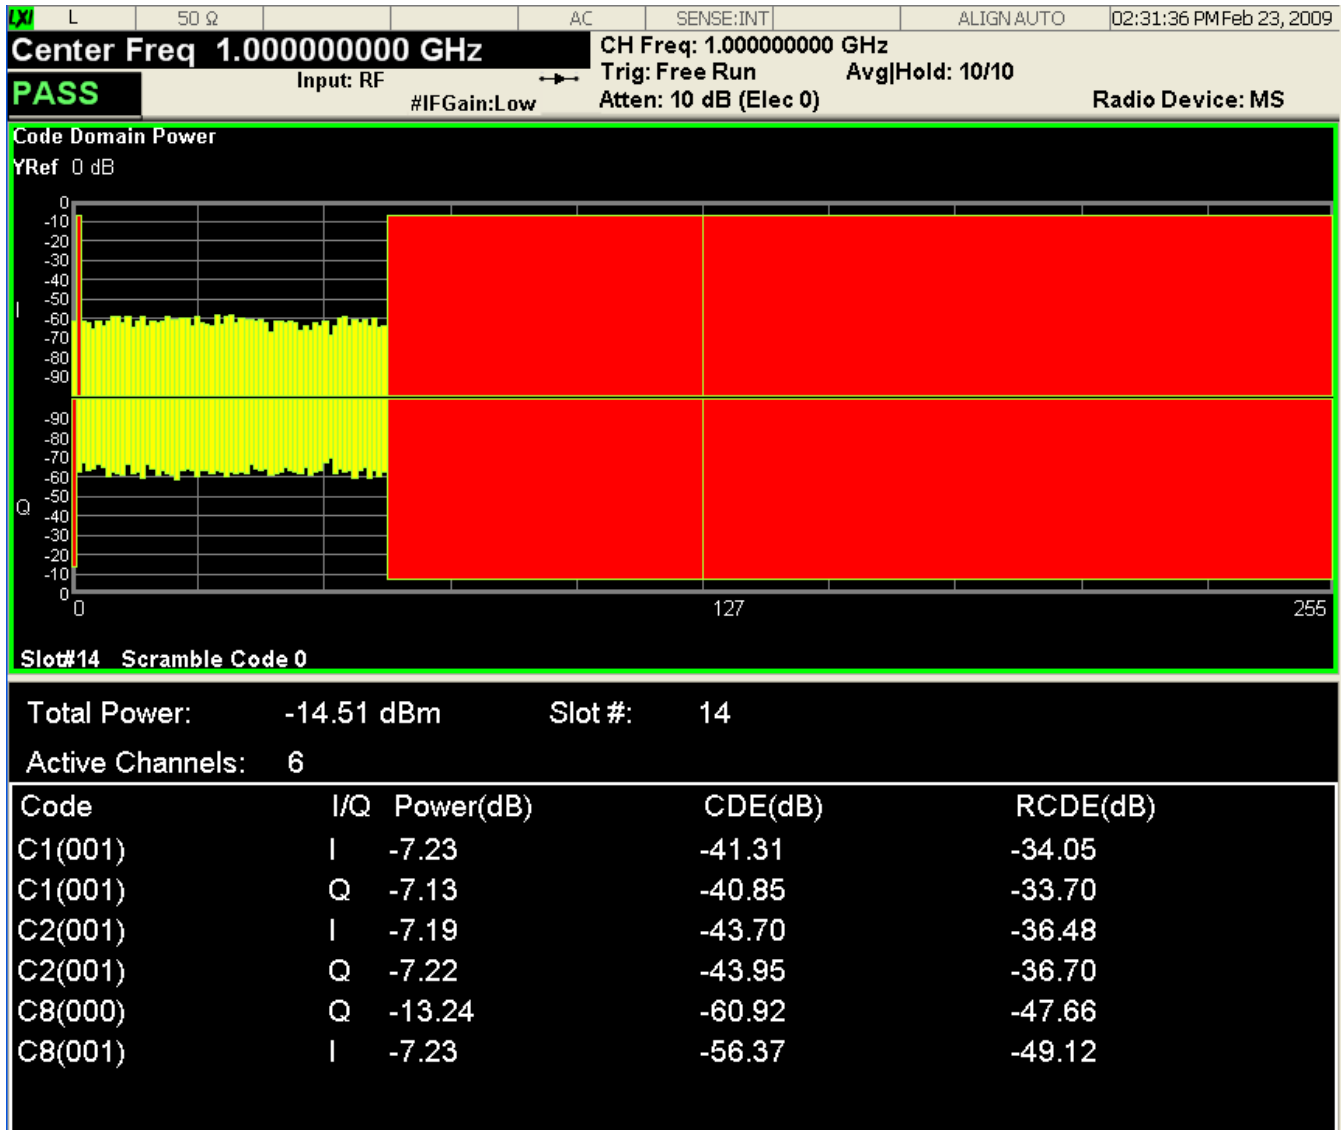

**Power Bar Graph window**

These traces and scalar results are of the slot specified by Meas Offset.

Marker Operation	Yes
Corresponding Trace	CDP (n=8)

### Metrics window

For this window, the View/Display key accesses a submenu that provides the following controls for the active channel list:

Prev Page - Returns one page back to the previous page of measurement results.

Next Page - Moves one page forward to the next page of measurement results.

Scroll Up - Moves one line upward from the current page of measurement results each time the key is pressed.

Scroll Down - Moves one line downward from the current page of measurement results each time the key is pressed.

First Page - Moves from the current page to the first page of measurement results.

Last Page - Moves from the current page to the last page of measurement results.

These traces and scalar results are of the slot specified by Meas Offset.

Name	Corresponding Results	Display Format
Total Power	None Absolute Total Power	99.99 dBm
Active Channels	n=1 10th Number of Active Channels	99
Code	n=7 (N-1)*5+2 number OVSF Code number for N th Active Channel	CX(Y) X: OVSF level (1 ... 8) 1: 1920ksps ... 8:15ksps Y: OVSF code number (0 ... 2 <sup>x-1</sup> )
I/Q	N=7 (N-1)*5+3 number Either +1 (I) or -1 (Q) for N th Active Channel	I or Q
Power (dB)	n=7 (N-1)*5+4 number Power Level (in dB) for N th Active Channel	99.99
CDE (dB)	n=7 N*5 number Code Domain Error for N th Active Channel	99.99
RCDE (dB) Note 1	n=16 (N-1)*5+4 number Power Level (in dB) for N th Active Channel	99.99

Note 1: This column is displayed only when W-CDMA HSPA and HSPA+ option licenses are installed

and enabled. Otherwise it's not displayed.

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

## Peak/Avg Metrics

This view has one window, the Peak/Average Metrics window, which displays two sets of data, as follows:

Average	The value averaged in average-cycle
Peak Hold	The value detected and held as the Peak/Maximum in the average cycle

---

**NOTE** The average cycle is updated when restarted, and is equal to the average count. In each average cycle, though the capture interval, the data is also averaged and detects the peak/worst values. Therefore, the metrics of this view are actually averaged by the data, which is the value of:

$$\text{Average Count} \times \text{Capture Interval}$$

---

The parameters displayed in these windows depend on the setting of Radio Device, in the Mode Setup menu (see [“Radio” on page 1651](#)). For details of each window in the view for each of these settings, see:

[“Peak/Avg Metrics View \(BTS\)” on page 1122](#)

[“Peak/Avg Metrics View \(MS\)” on page 1125](#)

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

### Peak/Avg Metrics View (BTS)

The figure below shows an example of this view's sole window. For a detailed description of the window, see [“Peak/Average Metrics window” on page 1124](#).

This topic describes this view as displayed when Radio Device is set to BTS. For an overview, see [“Peak/Avg Metrics” on page 1122](#).

Center Freq 1.000000000 GHz		CH Freq: 1.000000000 GHz
<b>PASS</b>	Input: RF	Trig: Free Run Avg Hold: 10/10
#IFGain:Low	Atten: 10 dB (Elec 0)	Radio Device: BTS
Peak/Average Metrics		
	Average	Peak Hold
Rho:	0.99966	0.99964
RMS EVM:	1.85 %	1.89 %
Peak EVM:	5.23 %	5.84 %
Pk CDE:	-55.48 dB	-55.00 dB at C8(168)
Pk Active CDE:	-46.25 dB	-45.80 dB at C4(5)
RMS Mag Error:	1.30 %	1.34 %
RMS Phase Error:	2.61 °	3.84 °
Freq Error:	-9.12 Hz	-9.55 Hz
I/Q Origin Offset:	-69.19 dB	-61.57 dB
Time Offset:	-6347.432 chips	-6347.432 chips
CPICH Power:	-10.79 dB	-10.74 dB
Total Power:	-14.55 dBm	-14.50 dBm
64QAM RCDE:	-34.51 dB	-34.28 dB
Peak RCDE:	---	---

**Peak/Average Metrics window**

Name	Corresponding Results	Display Format
Rho	N=1 7th (Average) n=1 21st (Peak Hold) rho	9.99999
EVM (rms)	N=1 1st (Average) n=1 15th (Peak Hold) EVM over the entire measurement area	99.99 % rms
EVM (pk)	N=1 2nd (Average) n=1 16th (Peak Hold) Peak EVM in the measurement area	99.99 % pk
Pk CDE (dB)	N=1 8th (Average) n=1 22nd (Peak Hold) Peak Code Domain Error relative to the mean power	99.99 dB
Pk CDE (Ch No.)	N=1 9th (Average) n=1 23rd (Peak Hold) The channel number in which the peak code domain error is detected at the max spreading factor.	CX(Y) x=8 for downlink Y: OVFSF code number (0 ... 255)
Pk Active CDE (dB)	None	99.99 dB
Pk Active CDE (Ch No.)	None	CX(Y) X: OVFSF level (2 ... 9) 2:960ksps ... 9:7.5ksps Y: OVFSF code number (0 ... 2 <sup>x-1</sup> )
Magnitude Error	N=1 3rd (Average) n=1 17th (Peak Hold) Magnitude error over the entire measurement area	99.99 % rms
Phase Error	n=1 4th (Average) n=1 18th (Peak Hold) Average phase error over the entire measurement area	99.99 - rms



Name	Corresponding Results	Display Format
Freq Error	n=1 6th (Average) n=1 20th (Peak Hold) Frequency error in the measured signal	99.99 Hz
I/Q Origin Offset	n=1 5th (Average) n=1 19th (Peak Hold) I and Q error (magnitude squared) offset from the origin	99.99 dB
Time Offset	n=1 11th (Average) n=1 25th (Peak Hold) Pilot phase timing from the acquisition trigger point.	9999.99 chip
CPICH Power	n=1 12th (Average) n=1 26th (Peak Hold) CPICH power over a slot.	99.99 dB
Total Power	n=1 13th (Average) n=1 27th (Peak Hold) Total power over a slot.	99.99 dBm
64QAM RCDE Note 1	n=17 1st (Average) n=18 1st (Peak Hold) Average 64QAM RCDE in a slot	99.99 dB
Pk RCDE (dB)	Not valid for BTS.	“---“ as invalid value
Pk RCDE (Ch. NO.)	Not valid for BTS.	“---“ as invalid value

Note 1: This row is displayed only when W-CDMA HSPA and HSPA+ option licenses are installed and enabled. Otherwise it is not displayed.

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

### Peak/Avg Metrics View (MS)

The figure below shows an example of this view’s sole window. For a detailed description of the window, see [“Peak/Average Metrics window” on page 1127](#).

This topic describes this view as displayed when Radio Device is set to MS. For an overview, see [“Peak/Avg Metrics” on page 1122](#).

Modulation Accuracy (Composite EVM) Measurement  
View/Display

Center Freq 1.00000000 GHz		CH Freq: 1.00000000 GHz
<b>PASS</b>	Input: RF	Trig: Free Run Avg Hold: 10/10
#IFGain:Low	Atten: 10 dB (Elec 0)	Radio Device: MS
Peak/Average Metrics		
	Average	Peak Hold
Rho:	0.99964	0.99944
RMS EVM:	1.90 %	2.37 %
Peak EVM:	4.94 %	6.62 %
Pk CDE:	-41.64 dB	-36.16 dB at C2(1):I
Pk Active CDE:	-40.20 dB	-36.16 dB at C2(1):I
RMS Mag Error:	1.30 %	1.65 %
RMS Phase Error:	1.50 °	1.66 °
Freq Error:	-9.40 Hz	-9.92 Hz
I/Q Origin Offset:	-72.65 dB	-67.76 dB
Time Offset:	3625.508 chips	3625.508 chips
CPICH Power:	---	---
Total Power:	-14.53 dBm	-14.47 dBm
64QAM RCDE:	---	---
Peak RCDE:	-32.99 dB	-29.15 dB at C2(1):I

**Peak/Average Metrics window**

Name	Corresponding Results	Display Format
Rho	N=1 7th (Average) n=1 21st (Peak Hold) rho	9.99999
EVM (rms)	N=1 1st (Average) n=1 15th (Peak Hold) EVM over the entire measurement area	99.99 % rms
EVM (pk)	N=1 2nd (Average) n=1 16th (Peak Hold) Peak EVM in the measurement area	99.99 % pk
Pk CDE (dB)	N=1 8th (Average) n=1 22nd (Peak Hold) Peak Code Domain Error relative to the mean power	99.99 dB
Pk CDE (Ch No.)	N=1 9th (Average) n=1 23rd (Peak Hold) The channel number in which the peak code domain error is detected at the max spreading factor.	CX(Y) X=2 for uplink Y: OVFSF code number (0 ... 3)
Pk Active CDE (dB)	None	99.99 dB
Pk Active CDE (Ch No.)	None	CX(Y) X: OVFSF level (1 ... 8) 1: 1920ksps ... 8:15ksps Y: OVFSF code number (0 ... 2 <sup>x-1</sup> )
Magnitude Error	N=1 3rd (Average) n=1 17th (Peak Hold) Magnitude error over the entire measurement area	99.99 % rms
Phase Error	n=1 4th (Average) n=1 18th (Peak Hold) Average phase error over the entire measurement area	99.99 - rms

Name	Corresponding Results	Display Format
Freq Error	n=1 6th (Average) n=1 20th (Peak Hold) Frequency error in the measured signal	99.99 Hz
I/Q Origin Offset	n=1 5th (Average) n=1 19th (Peak Hold) I and Q error (magnitude squared) offset from the origin	99.99 dB
Time Offset	n=1 11th (Average) n=1 25th (Peak Hold) Pilot phase timing from the acquisition trigger point.	9999.99 chip
CPICH Power	Not valid for MS.	“---“ as invalid value
Total Power	n=1 13th (Average) n=1 27th (Peak Hold) Total power over a slot.	99.99 dBm
64QAM RCDE	Not valid for MS.	“---“ as invalid value
Pk RCDE (dB)	n=17 2nd (Average) n=18 2nd (Peak Hold) Peak RCDE in a slot	99.99 dB
Pk RCDE (Ch. NO.)	n=18 4th(Peak Hold)	CX(Y) X=2 for uplink Y: OVFSF code number (0 .. 3)

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

## Capture Time Summary

The summary table displays the measurement results for multiple slots (for example 15 slots). It shows data sets slot-by-slot through the Capture Interval, and highlights the peak (or worst) slot value, and average value through the Capture Interval at the bottom of the table.

The results in this view are not averaged when restarted, even if the average is on.

The parameters displayed in the view's sole window depend on the setting of Radio Device, in the Mode Setup menu (see [“Radio” on page 1651](#)). For details of each window in the view for each of these settings, see:

[“Capture Time Summary View \(BTS\)” on page 1129](#)

“Capture Time Summary View (MS)” on page 1131

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

### Capture Time Summary View (BTS)

The figure below shows an example of this view’s sole window. For a detailed description of the window, see “Capture Time Summary Window” on page 1130.

This topic describes this view as displayed when Radio Device is set to BTS. For an overview, see “Capture Time Summary” on page 1128.

The screenshot shows the following window configuration:

- ALIGN OFF, 50 Ω, SIG ID, CORREC, DC, EXT REF, 12:00:59 Nov 12, 2003
- CH Freq: 1.000 000 000 GHz, Radio Std: W-CDMA
- Trig: Free Run, Avg/Hold: 1000/1000
- Atten: 10 dB (Elec 0), Ext Gain: 10 dB, Radio Device: BTS
- Gate: LO, Input: RF, #IF Gain: Low
- PASS

Slot #	EVM (%)	PkCDE (dB)	at	Freq Err (Hz)	CPICH (dB)	Total Pwr (dBm)
14	3.361	-50.15	C8(120)	-26.713	-10.01	-16.98
0	3.401	-49.80	C8(183)	-25.251	-10.03	-16.96
1	3.471	-49.74	C8(134)	-26.082	-10.04	-16.96
2	3.391	-49.82	C8(236)	-25.580	-9.98	-16.98
3	3.442	-49.97	C8(222)	-26.492	-10.00	-17.00
4	3.434	-49.39	C8(179)	-26.294	-9.99	-17.00
5	3.439	-50.18	C8(183)	-25.661	-10.01	-16.99
6	3.450	-49.55	C8(177)	-24.950	-9.99	-16.99
7	3.423	-49.84	C8( 54)	-25.956	-10.02	-16.98
8	3.415	-50.30	C8( 40)	-25.118	-9.99	-17.01
9	3.433	-50.44	C8( 61)	-24.547	-10.01	-16.98
10	3.409	-50.30	C8( 94)	-25.636	-10.01	-16.98
11	3.398	-50.32	C8( 18)	-25.611	-9.93	-17.05
12	3.356	-50.94	C8( 70)	-25.420	-9.98	-16.99
13	3.374	-50.32	C8(135)	-25.891	-10.02	-16.96
Avg	3.413	-50.07		-25.680	-10.00	-16.99

### Capture Time Summary Window

Name	Corresponding Results	Display Format
Slot Number	NA	0 ... 14 (CPICH Slot)
Slot RMS EVM	n=9 Slot RMS EVM	9.99999 % rms
Slot PkCDE (dB)	n=10 (3*N+3)th Peak Code Domain Error relative to the mean power Note 1	-99.99 dB
Slot PkCDE Channel Index	n=10 (3*N+2)th Channel index in which the peak code domain error is detected at the max spreading factor. Note 1	CX(Y) x=8 for downlink Y: OVFSF code number (0 ... 255)
Slot Freq Error	n=11 Frequency error in slot	99.99 Hz
Slot Code Domain Power of P-CPICH	n=12 Slot code domain power of P-CPICH	-99.99 dB
Slot Total Power	n=13 Slot averaged total power	dBm

Note 1: N = Sequential slot number through the Capture Interval (for example, 0... 14)

Note 2: Through the Capture Interval, for example on the above display, Slot#0 – Slot#14, the peak/worst value is highlighted in color. Refer to the following rule table.

Name	Peak/Worst/Maximum rule
Slot RMS EVM	Maximum value in %
Slot PkCDE	Maximum value in dB
Slot PkCDE Channel Index	Peak/Worst is not highlighted.
Slot Freq Error	Maximum absolute value in Hz
Slot Code Domain Power of P-CPICH	Maximum value in dB
Slot Average Total Power	Maximum value in dBm

Note 3: When a result value fails the limit test, an 'F' is shown on the right-side of the result value.

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

**Capture Time Summary View (MS)**

The figure below shows an example of this view's sole window. For a detailed description of the window, see "Capture Time Summary Window" on page 1132.

This topic describes this view as displayed when Radio Device is set to MS. For an overview, see "Capture Time Summary" on page 1128.

Slot #	EVM (%)	PkCDE (dB)	at	Freq Err (Hz)	Total Pwr (dBm)
12	3.327	-37.87	C2( 3) : I	-25.842	-16.96
13	3.461	-37.87	C2( 3) : I	-25.861	-16.96
14	3.458	-37.58	C2( 3) : I	-25.689	-16.96
0	3.367	-37.93	C2( 3) : I	-25.679	-16.96
1	3.464	-37.39	C2( 3) : I	-25.861	-16.96
2	3.411	-37.67	C2( 3) : I	-25.838	-16.97
3	3.393	-38.12	C2( 3) : I	-24.693	-16.96
4	3.432	-37.86	C2( 2) : I	-26.378	-16.96
5	3.488	-37.67	C2( 2) : I	-25.584	-16.96
6	3.409	-37.86	C2( 3) : I	-25.251	-16.97
7	3.455	-37.51	C2( 3) : I	-24.991	-16.96
8	3.474	-37.43	C2( 3) : I	-24.440	-16.97
9	3.374	-38.12	C2( 3) : I	-25.315	-16.97
10	3.488	-37.78	C2( 3) : I	-26.363	-16.96
11	3.332	-38.20	C2( 3) : I	-24.656	-16.96
Avg	3.422	-37.79		-25.496	-16.96

### Capture Time Summary Window

Name	Corresponding Results	Display Format
Slot Number	CPICH slot number	0 ... 15 (CPICH Slot)
Slot RMS EVM	n=9 Slot RMS EVM	9.99999 % rms
Slot PkCDE (dB)	n=10 (3*N+3)th Peak Code Domain Error relative to the mean power	-99.99 dB
Slot PkCDE Channel Index	n=10 (3*N+2)th Channel index in which the peak code domain error is detected at the max spreading factor.	CX(Y) X=2 for uplink Y: OVSF code number (0 ... 3)
Slot Freq Error	n=11 Frequency error in slot	99.99 Hz
Slot Average Total Power	n=13 Slot averaged total power	dBm

Note 1: N = Sequence number through the Capture Interval (Unit = slot)

Note 2: Through the Capture Interval, for example on the above display, Slot#0 – Slot#14, the peak/worst value is highlighted in color. Refer to the following rule table.

Name	Peak/Worst rule
Slot RMS EVM	Maximum value in %
Slot PkCDE	Maximum value in dB
Slot PkCDE Channel Index	Peak/Worst is not highlighted.
Slot Freq Error	Maximum absolute value in Hz
Slot Average Total Power	Maximum value in dB

Note 3: When a result value shown in the above fails the limit test, an 'F' is shown the right-side of the result value.

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

### Slot CDE/EVM

This view has three windows:



Frequency Error window (upper)

Peak CDE window (middle)

EVM window (lower)

The trace of this view is not averaged when restarted, even if the average function is on.

The parameters displayed in the view's windows depend on the setting of Radio Device, in the Mode Setup menu (see ["Radio" on page 1651](#)). For details of each window in the view for each of these settings, see:

["Slot CDE/EVM View \(BTS\)" on page 1133](#)

["Slot CDE/EVM View \(MS\)" on page 1135](#)

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

### Slot CDE/EVM View (BTS)

The figure below shows an example of this view's three windows. For detailed descriptions of each window, see:

["EVM window" on page 1135](#)

["Pk CDE window" on page 1135](#)

["Frequency Error window" on page 1135](#)


This topic describes this view as displayed when Radio Device is set to BTS. For an overview, see ["Slot CDE/EVM" on page 1132](#).

In the figure below:

Yellow lines are the slot-by-slot results.

Blue (Cyan) lines are the test limits.

Modulation Accuracy (Composite EVM) Measurement  
View/Display

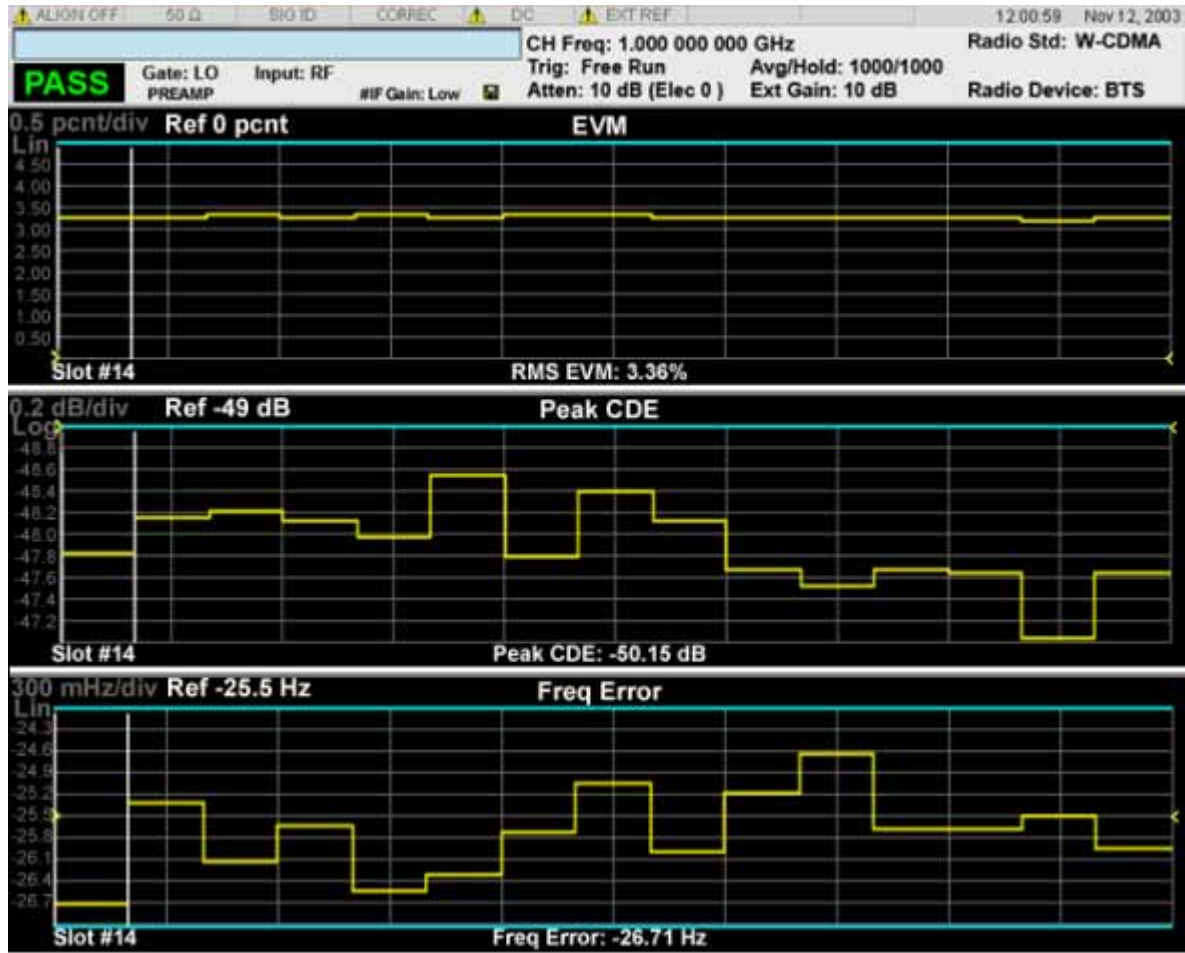

**EVM window**

Marker Operation	Yes
Corresponding Trace	Slot RMS EVM trace (n=9)

**Pk CDE window**

Marker Operation	Yes
Corresponding Trace	Slot Peak CDE trace (n=10)

**Frequency Error window**

Marker Operation	Yes
Corresponding Trace	Slot Frequency error trace (n=11)

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

**Slot CDE/EVM View (MS)**

The figure below shows an example of this view’s three windows. For detailed descriptions of each window, see:

[“EVM window” on page 1136](#)

[“Pk CDE window” on page 1136](#)

[“Frequency Error window” on page 1136](#)

This topic describes this view as displayed when Radio Device is set to MS. For an overview, see [“Slot CDE/EVM” on page 1132](#).

In the figure below:

Yellow lines are the slot-by-slot results.

Blue (Cyan) lines are the test limits.

Modulation Accuracy (Composite EVM) Measurement  
View/Display



**EVM window**

Marker Operation	Yes
Corresponding Trace	Slot RMS EVM trace (n=9)

**Pk CDE window**

Marker Operation	Yes
Corresponding Trace	Slot Peak CDE trace (n=10)

**Frequency Error window**

Marker Operation	Yes
Corresponding Trace	Slot Frequency error trace (n=11)

Key Path	View/Display
----------	--------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------



The Power Control Measurement capability is one of the major functions of a W-CDMA (3GPP) digital radio system. For downlink signals, code domain power analysis and power versus time measurements based on symbols may be used to analyze the power control function, as individual code channel powers are controlled. However, for uplink signals, the entire signal is controlled by the power control function, so code domain power analysis or power versus time measurement techniques do not provide relevant information. This Power Control measurement provides a solution for 3GPP uplink conformance tests, and can be used to accurately design, characterize, evaluate, and verify 3GPP transmitters, components, and devices for mobile stations. For more details, see [“Power Control Measurement Description” on page 1143](#).

This topic contains the following sections:

[“Measurement Commands for Power Control” on page 1139](#)

[“Remote Command Results for Power Control” on page 1140](#)

### **Measurement Commands for Power Control**

The following commands are used to retrieve the measurement results:

`:CONFigure:PCONtrol`

`:CONFigure:PCONtrol:NDEFault`

`:INITiate:PCONtrol`

`:FETCh:PCONtrol [n] ?`

`:READ:PCONtrol [n] ?`

`:MEASure:PCONtrol [n] ?`

For more measurement related commands, see the section [“Remote Measurement Functions” on page 1575](#).

## Remote Command Results for Power Control

Index: n<Mnemonic >	Results Returned
0	Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values.
1 (or not specified)	<p>Returns the following 4 comma-separated scalar results in the following order:</p> <p>Number of slots is an integer number of the number of slots found in the captured data. (In case of PRACH Power measurement, it always returns 0).</p> <p>Number of PRACH preamble is an integer number to give the number of PRACH preamble burst found in captured data. (In case of Slot measurement, it always returns 0).</p> <p>Number of PRACH Message is an integer number to give the number of PRACH Message found in captured data. (In case of Slot measurement, it always returns 0) This number must be 1 or 0, because once PRACH Message is found, no more PRACH burst search is performed after PRACH Message burst.</p> <p>First Slot Number is an integer number presenting the first slot number in the captured data. The returned value is valid in the following cases. In other cases, the returned value is 0.</p> <ul style="list-style-type: none"> <li>• - Meas Type is Slot Power and Meas Method is Chip Power.</li> <li>• - Meas Type is Slot Phase</li> </ul> <p>DPCCH Slot Format: (floating)</p> <ul style="list-style-type: none"> <li>- If Sync Type is DPCCH , the DPCCH slot format value used for synchronization is returned.</li> <li>0.0: Slot Format 0</li> <li>1.0: Slot Format 1</li> <li>2.0: Slot Format 2</li> <li>3.0: Slot Format 3</li> <li>4.0: Slot Format 4</li> <li>5.0: Slot Format 5</li> <li>- If Sync Type is PRACH, the value returned is -999.0.</li> <li>- In BTS mode, the value returned is -999.0.</li> </ul> <p>Preamble Signature: (floating)</p> <ul style="list-style-type: none"> <li>- BTS mode</li> <li>Always the returned value is -999.0.</li> <li>- MS mode</li> </ul> <p>In Preamble Signature auto-detection mode, the detected signature code number(from 0.0 to 15.0) is returned when Sync Type is PRACH Message.</p> <p>In Preamble Signature manual setting mode, the returned value is the same as the parameter setting. When Sync Type is not PRACH Message, the returned value is -999.0.</p>
2	<p>Waveform/ChipPower trace data.</p> <p>Returns comma-separated waveform or chip power trace data (in dBm).</p>



Index: n<Mnemonic >	Results Returned
3	<p>Slot Power Measurement trace (Absolute Power Measurement)</p> <p>Returns comma-separated post-processed data trace for measured data. With "Slot Power Measurement" selected, the slot averaged data trace (in dBm) is returned. (This data trace corresponds to the 'Result' column in the Result window.) Number of slot is given as 1st parameter in :MEASure:PCONTrol?.</p>
4	<p>PRACH Power result – returns comma-separated post-processed data Npreamble: Number of PRACH Preamble</p> <p>1st number: Pre-Burst Off Pwr (float, in dBm) of 1st PRACH preamble</p> <p>2nd number: Burst On Pwr (float, in dBm) of 1st PRACH preamble</p> <p>3rd number: Burst On Pwr relative to the previous data (float, in dB) of 1st PRACH (This returns always 0.0)</p> <p>4th number: Post-Burst Off Pwr (float, in dBm) of 1st PRACH preamble</p> <p>5th number: Time Offset (float, in chip) of 1st PRACH preamble This returns always 0.0)</p> <p>...</p> <p>(N-1)*5+1: Pre-Burst Off Pwr (float, in dBm) of Nth PRACH preamble</p> <p>(N-1)*5+2: Burst On Pwr (float, in dBm) of Nth PRACH preamble</p> <p>(N-1)*5+3: Burst On Pwr relative to the previous data (float, in dB) of Nth PRACH preamble</p> <p>(N-1)*5+4: Post-Burst Off Pwr (float, in dBm) of Nth PRACH preamble</p> <p>N*5: Time Offset (float, in chip) of Nth PRACH preamble</p> <p>...</p> <p>(Npreamble -1)*5+1: Pre-Burst Off Pwr (float, in dBm) of Npreambleth PRACH preamble</p> <p>(Npreamble -1)*5+2: Burst On Pwr (float, in dBm) of Npreambleth PRACH preamble</p> <p>(Npreamble -1)*5+3: Burst On Pwr relative to the previous data (float, in dB) of Npreambleth PRACH preamble</p> <p>(Npreamble -1)*5+4: Post-Burst Off Pwr (float, in dBm) of Npreambleth PRACH preamble</p> <p>Npreamble*5: Time Offset (float, in chip) of Npreambleth PRACH preamble</p> <p>Npreamble*5+1: Pre-Burst Off Pwr (float, in dBm) of PRACH Message (if available)</p> <p>Npreamble*5+2: Burst On Pwr (float, in dBm) of PRACH Message (if available)</p> <p>Npreamble*5+3: Burst On Pwr relative to the previous data (float, in dB) PRACH Message (if available)</p> <p>Npreamble*5+4: Post-Burst Off Pwr (float, in dBm) of PRACH Message (if available)</p> <p>Npreamble*5+5: Time Offset (float, in chip) of PRACH Message (if available)</p>

Index: n<Mnemonic >	Results Returned
5	<p>Slot Power Measurement trace (Relative Power measurement –1)</p> <p>Returns comma-separated post-processed data trace for measured data. With "Slot Power Measurement" selected, the relative power with the previous slot data trace (in dB) is returned. (This data trace corresponds to the 'Delta Adj Pwr' column in the Result window.) The first data returns always '0.0'.</p> <p>The number of slot is given as 1st parameter in :MEASure:PCONTrol?.</p>
6	<p>Slot Power Measurement trace (Relative Power Measurement – 2)</p> <p>Returns comma-separated post-processed data trace for measured data. With "Slot Power Measurement" selected, the relative power level with the first slot (in dB) is returned. (This data trace corresponds to the 'Rel Pwr' column in the Results window.) The first data returns always '0.0'.</p> <p>The number of slots is the first parameter from :MEASure:PCONTrol?.</p>
7	<p>Chip by chip phase error trace.</p> <p>Returns a series of floating point numbers (in degrees) that represents chip by chip phase error.</p> <p>The number of values returned is equal to the number of chips in the capture interval.</p>
8	<p>Chip phase error best-fit line.</p> <p>Returns a series of floating point numbers (in degrees) that represents best-fit phase line of chips to minimize the EVM of the slot.</p> <p>The number of values returned is equal to the number of chips in the capture interval.</p>
9	<p>Slot Phase Discontinuity.</p> <p>Returns a series of floating point numbers (in degrees) that represents phase difference between the end of the previous slot and the beginning of the slot.</p> <p>The number of values returned is equal to the number of slots in the capture interval.</p>
10	<p>Slot phase error from the reference phase at the beginning of the slot.</p> <p>Returns a series of floating point numbers (in degrees) that represents absolute phase error at the beginning of each slot.</p> <p>The number of values returned is equal to the number of slots in the capture interval.</p>
11	<p>RMS EVM of slots based on the best-fit line.</p> <p>Returns a series of floating point numbers (in degrees) that represents RMS EVM of each slot excluding 25us at the beginning and tail of the slot.</p> <p>The number of values returned is equal to the number of slots in the capture interval.</p>
12	<p>RMS Magnitude error of slots.</p> <p>Returns a series of floating point numbers (in degrees) that represents RMS Magnitude error of each slot excluding 25us at the beginning and end of the slot.</p> <p>The number of values returned is equal to the number of slots in the capture interval.</p>

Index: n<Mnemonic >	Results Returned
13	<p>RMS Phase error of slot.</p> <p>Returns a series of floating point numbers (in degrees) that represents frequency error of each slot, which is an element of the RMS EVM.</p> <p>The number of values returned is equal to the number of slots in the capture interval.</p>
14	<p>IQ Offset of slots.</p> <p>Returns a series of floating point numbers (in dB) that represents IQ Origin Offset of each slot, which is an element of the RMS EVM.</p> <p>The number of values returned is equal to the number of slots in the capture interval.</p>
15	<p>Frequency error of the best-fit line for slots.</p> <p>Returns a series of floating point numbers (in Hz) that represents frequency error of each slot, which is equivalent to the amount of the slope of the best-fit line and frequency error of the reference frequency that measurement algorithm determines for synchronization, and an element of the RMS EVM</p> <p>The number of values returned is equal to the number of slots in the capture interval.</p>

### Power Control Measurement Description

The Power Control Measurement is also called a Power Step Measurement.

The Power Control measurement includes three types of measurements:

- Slot Power-measures uplink slot power level.
- PRACH Power-measures uplink PRACH preamble power level and message power level.
- Slot Phase-measures phase error, frequency error and EVM of uplink slots in addition to their slot power.

The Slot Power and PRACH Power Measurement can be done using two methods:

- Waveform Method- is asynchronous. It provides results using a specified information bandwidth and a specified filter type for the number of frames, 1 through 8, specified by the capture interval.
- Chip Power Method- is synchronized to chip timing. It re-samples the power measurement results based on the chip clock timing of the radio system.

The Slot Phase Measurement is always made based on synchronized chip timing.

---

#### NOTE

The current Power Control Measurement can only measure uplink signals. Therefore, the Pwr Control key is only active if the Radio Device selection is MS. The menu key is grayed out if BTS is chosen.

---

## Power Control Measurement

Key Path	<b>Meas</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00
Help Map ID	16000

## AMPTD (Amplitude) Y Scale

Accesses a menu that enables you to set the desired vertical scale and associated settings for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16067

### Ref Value

Allows you to set the reference value. However, RF Envelope window and Phase Error window have different Y Ref Value parameters. Since the Auto Scaling is defaulted to On, those values are automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16068

### RF Envelope

Sets the absolute power reference.

Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>  :DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:PCON:VIEW1:WIND:TRAC:Y:SCAL:RLEV 10.0 DISP:PCON:VIEW1:WIND:TRAC:Y:SCAL:RLEV?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When the user sets a value manually, Auto Scaling automatically changes to Off.
Preset	10.0 dBm
State Saved	Saved in instrument state.

Power Control Measurement  
**AMPTD (Amplitude) Y Scale**

Min	-250.0 dBm
Max	250.0 dBm
Initial S/W Revision	Prior to A.02.00
Help Map ID	16005

**Phase Error**

Sets the absolute power reference.

Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVe l <real>  :DISPlay:PCONtrol:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVe l?
Example	DISP:PCON:VIEW2:WIND:TRAC:Y:SCAL:RLEV 0.0 DISP:PCON:VIEW2:WIND:TRAC:Y:SCAL:RLEV?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When the user sets a value manually, Auto Scaling automatically changes to Off.
Preset	0.0
State Saved	Saved in instrument state.
Min	-36000.0
Max	36000
Initial S/W Revision	Prior to A.02.00
Help Map ID	16006

**Range**

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value. Refer to [“Range” on page 1415](#) for more information.[Proc\_iFrame:29880@]

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	TBD
Help Map ID	16093

## Attenuation

This menu controls both the electrical and mechanical attenuators and their interactions. The value read back on the key in square brackets is the current Total (Elec + Mech) attenuation. When in Pre-Adjust for Min Clip mode, this value can change at the start of every measurement. See AMPTD Y Scale, “Attenuation” on page 1406 for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16069

## Scale/Div

Sets the units per division of vertical scale in the logarithmic display. The RF Envelope window and Phase Error window have different Y Scale/Div parameters.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16070

## RF Envelope

Enables you to enter a numeric value to change the vertical display sensitivity.

Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDI Vision <rel_ampl>  :DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDI Vision?
Example	DISP:PCON:VIEW1:WIND:TRAC:Y:SCAL:PDIV 10.0 DISP:PCON:VIEW1:WIND:TRAC:Y:SCAL:PDIV?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When the user sets a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dB
State Saved	Saved in instrument state.

Power Control Measurement  
**AMPTD (Amplitude) Y Scale**

Min	0.1 dB
Max	20 dB
Initial S/W Revision	Prior to A.02.00
Help Map ID	16007

**Phase Error**

Enables you to enter a numeric value to change the vertical display sensitivity.

Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVi sion <real>  :DISPlay:PCONtrol:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVi sion?
Example	DISP:PCON:VIEW2:WIND:TRAC:Y:SCAL:PDIV 50.0 DISP:PCON:VIEW2:WIND:TRAC:Y:SCAL:PDIV?
Notes	You must be in the W-CDMA mode to use this command. Use INSTrument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When the user sets a value manually, Auto Scaling automatically changes to Off.
Preset	50.0 degrees
State Saved	Saved in instrument state.
Min	0.01 degrees
Max	3600.0 degrees
Initial S/W Revision	Prior to A.02.00
Help Map ID	16008

**Presel Center**

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See AMPTD Y Scale, “[Presel Center](#)” on page 1421 for more information.[Proc\_iFrame:3017@]

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
----------	----------------------



Initial S/W Revision	Prior to A.02.00
Help Map ID	0

### Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See AMPTD Y Scale, [“Preselector Adjust” on page 1422](#) for more information.[Proc\_iFrame:3020@]

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

### μW Path Control

The **μW Path Control** functions include the **μW Preselector Bypass** (Option MPB) and **Low Noise Path** (Option LNP) controls in the High Band path circuits.

See [“μW Path Control” on page 1430](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.[Proc\_iFrame:4027@]

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00
Help Map ID	0

### Internal Preamp

This menu controls the internal preamplifier. Turning Internal Preamp on gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your particular measurement. See AMPTD Y Scale, [“Internal Preamp” on page 1435](#) for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16071

### Ref Position

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference

Power Control Measurement  
**AMPTD (Amplitude) Y Scale**

position does not change the reference level value.

Key Path	AMPTD Y Scale
Mode	WCDMA
Remote Command	:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:R POSItion TOP CENTer BOTTom  :DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:R POSItion?
Example	DISP:PCON:VIEW:WIND:TRAC:Y:RPOS TOP DISP:PCON:VIEW:WIND:TRAC:Y:RPOS?
Notes	You must be in the W-CDMA mode to use this command. Use INSTrument:SElect to set the mode.
Preset	TOP CENTer
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Initial S/W Revision	Prior to A.02.00
Help Map ID	16009

### Auto Scaling

Toggles the Auto Scaling function between On and Off.

Key Path	AMPTD Y Scale
Mode	WCDMA
Remote Command	:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:C OUPle 0 1 OFF ON  :DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:Y[:SCALe]:C OUPle?
Example	DISP:PCON:VIEW:WIND:TRAC:Y:SCAL:COUP ON DISP:PCON:VIEW:WIND:TRAC:Y:SCAL:COUP?
Notes	You must be in the W-CDMA mode to use this command. Use INSTrument:SElect to set the mode.
Couplings	When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.  When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON ON

Power Control Measurement  
**AMPTD (Amplitude) Y Scale**

State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	16010

## BW

Accesses a menu of functions that enable you to specify and control the Info BW.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16076

## Info BW

Enables you to specify the resolution bandwidth for the Power Control measurements. This is used to set the hardware filter of the ADC.

Key Path	<b>BW</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSE] :PCONtrol :BANDwidth [:RESolution] <freq> [ :SENSE] :PCONtrol :BANDwidth [:RESolution] ?
Example	PCON:BAND:RES 8.0e6 PCON:BAND:RES?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	6 MHz
State Saved	Saved in instrument state.
Min	100000
Max	8 MHz
Backwards Compatibility SCPI	[ :SENSE] :PCONtrol :BWIDth [:RESolution]
Initial S/W Revision	Prior to A.02.00
Help Map ID	16021

## InfoBW Control

### Filter Type

Toggles the filter shapes between Gaussian and Flat (flattop).

Key Path	<b>BW, InfoBW Control</b>
Mode	WCDMA

<b>Remote Command</b>	[ :SENSe]:PCONtrol:BANDwidth[:RESolution]:TYPE FLATtop GAUSSian [:SENSe]:PCONtrol:BANDwidth[:RESolution]:TYPE?
Example	SENS:PCON:BAND:RES:TYPE FLATtop SENS:PCON:BAND:RES:TYPE?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	FLATtop
State Saved	Saved in instrument state.
Range	Gaussian Flattop
Backwards Compatibility SCPI	[:SENSe]:PCONtrol:BWIDth[:RESolution]:TYPE
Initial S/W Revision	Prior to A.02.00
Help Map ID	16022

## **Cont**

Operation of this key is identical across several measurements. For details of this key, see “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451.[Proc\_iFrame:3309@]

## **FREQ Channel**

Operation of this key is identical across several measurements. For details of this key, see [“FREQ/Channel” on page 1453.](#)[Proc\_iFrame:4564@]

### **Center Freq**

Operation of this key is identical across several measurements. For details of this key, see [“Center Frequency” on page 1453.](#)[Proc\_iFrame:3059@]

### **CF Step**

Operation of this key is identical across several measurements. For details of this key, see [“CF Step” on page 1456.](#)[Proc\_iFrame:3062@]

## **Input/Output**

Operation of this key is identical across several measurements. For details about this key, see [“Input/Output” on page 1459](#).[Proc\_iFrame:3065@]



## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

See “[Marker](#)” on page 1531 for more information

Key Path	<b>Front Panel</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16087

## Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16088

## Marker Type

Sets the Marker control mode. If the selected marker is Off, pressing the Marker key sets it to Normal mode and places the marker at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

Key Path	<b>Marker</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: MODE POSITION DELTA OFF  :CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: MODE?
Example	CALC:PCON:MARK12:MODE NORM CALC:PCON:MARK3:MODE?
Notes	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.  Default Active Function: the active function for the selected marker’s current control mode. If the current control mode is Off, there is no active function and the active function is turned off.  Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision.

Preset	OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	16056

### Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is Normal or **Delta**.

Mode	WCDMA
Remote Command	:CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X <real>  :CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X?
Example	CALC:PCON:MARK12:X 1000000000 CALC:PCON:MARK3:X?
Notes	If no suffix is sent it uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” is generated.  The query returns the marker’s absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker’s reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale. If the marker is <b>Off</b> the response is Not A Number.
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query returns a Not A Number (NAN).
State Saved	No
Min	ñ9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00
Help Map ID	16057

### Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for

setting the value of the marker.

Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X:POSition <integer>  :CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X:POSition?
Example	CALC:PCON:MARK8:X:POS 500 CALC:PCON:MARK10:X:POS?
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points (see "Fractional Trace Points", above). If the marker is <b>Off</b> the response is Not A Number.
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query returns a Not A Number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00
Help Map ID	16058

### Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: Y?
Example	CALC:PCON:MARK11:Y?
Preset	Result dependant on markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	:CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCtion:RESul t?
Initial S/W Revision	Prior to A.02.00
Help Map ID	16059

## Marker Properties

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16089

## Select Marker

Accesses a menu of functions that enable you to specify and control the markers.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16090

## Relative To

Selects the marker the selected marker is relative to (its reference marker).

Key Path	<b>Marker, Properties</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>  :CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?
Example	CALC:PCON:MARK12:REF 4 CALC:PCON:MARK12:REF?
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."  When queried a single value is returned (the specified marker numbers relative marker).  You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Initial S/W Revision	Prior to A.02.00

Help Map ID	16060
-------------	-------

### Marker Trace

Assigns the specified marker to the designated trace.

Key Path	<b>Marker, Properties</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: TRACe RFENvelope SPOWer CPHase APHase DPHase  :CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: TRACe?
Example	CALC:PCON:MARK1:TRAC RFEN CALC:PCON:MARK1:TRAC?
Preset	RFENvelope RFENvelope RFENvelope RFENvelope RFENvelope RFENvel ope RFENvelope RFENvelope RFENvelope RFENvelope RFENvelope RFE Nvelope
State Saved	Saved in instrument state.
Range	RF Envelope Slot Power Chip Phase Average Chip Phase Phase Discontinuity
Initial S/W Revision	Prior to A.02.00
Help Map ID	16061

### Couple Markers

Toggles the state of the markers to be coupled On or Off. When this function is true (On), moving any marker causes an equal X-axis movement of every other marker except those located to the polar trace, and Chip value of the marker located to the polar trace, which is not **Off**, including **Fixed** markers. “Equal X Axis movement” refers to the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units). This may result in markers going offscreen.

Key Path	<b>Marker</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:PCONtrol:MARKer:COUPle[:STATe]?
Example	CALC:PCON:MARK:COUP ON CALC:PCON:MARK:COUP?
Preset	OFF
State Saved	Saved in instrument state.

Power Control Measurement  
**Marker**

Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	16062

**All Markers Off**

Turns all active markers off in all views.

Key Path	<b>Marker</b>
Mode	WCDMA
<b>Remote Command</b>	CALCulate:PCONtrol:MARKer:AOFF
Example	CALC:PCON:MARK:AOFF
Initial S/W Revision	Prior to A.02.00
Help Map ID	16063

---

## **Marker Fctn (Function)**

There are no Marker Functions supported in Power Control. The front-panel key displays a blank menu when pressed.

<b>Key Path</b>	<b>Front Panel Key</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16086

## Marker > (Marker To)

There is no 'Marker To' functionality supported in Power Control. The front-panel key displays a blank menu when pressed.

Key Path	Front Panel Key
Initial S/W Revision	Prior to A.02.00
Help Map ID	16085



---

## **Meas**

Operation of this key is identical across several measurements. For details of this key, see [“Meas” on page 1575](#).[Proc\_iFrame:4008@]

## Meas Setup

Displays the setup menu for the currently selected measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16077

## Meas Type

Toggles the measurement types among Slot Power, PRACH Power and Slot Phase. The sync type is automatically set either to DPCCH (for slot power and slot phase measurements) or to PRACH preamble (for PRACH power measurement) if Meas Method is set to Chip Power.

- SPOWer – Slot power measurement is performed.
- PRACH – PRACH power measurement is performed.
- SPHase – Slot phase measurement is performed.

Key Path	<b>Meas Setup</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSE]:PCONtrol:TYPE SPOWer PRACH SPHase [ :SENSE]:PCONtrol:TYPE?
Example	PCON:TYPE SPOW PCON:TYPE?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	This parameter is coupled with Capture Interval. If MeasType is SlotPhase, Capture Interval 8 frames cannot be set.
Preset	SPOWer
State Saved	Saved in instrument state.
Range	Slot Power PRACH Power Slot Phase
Initial S/W Revision	Prior to A.02.00
Help Map ID	16023

## Slot Power Meas

Accesses a menu of functions that enable you to specify and control the Slot Power measurement.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16092

### Slot Format

Enables you to access the Slot Format Menu to specify the slot format to be used for synchronization with the DPCCH Pilot channel. This format is used in the following two cases:

1. Meas Type is Slot Power AND Meas Method is Chip Power.
2. Meas Type is Slot Phase.

Key Path	<b>Meas Setup, Slot Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSE ] : PCONtrol : SLOt : FORMat AUTO   SF0   SF1   SF2   SF3   SF4   SF5 [ :SENSE ] : PCONtrol : SLOt : FORMat ?
Example	PCON:SLOT:FORM SF0 PCON:SLOT:FORM?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	SF0
State Saved	Saved in instrument state.
Range	Auto SF0 SF1 SF2 SF3 SF4 SF5
Initial S/W Revision	Prior to A.02.00
Help Map ID	16024

### Sync Start Slot

Specifies the first slot to measure.

When the Sync Start Slot parameter is set to On and the slot number to be used as the first slot to measure is specified, any trigger (even Free Run) initiates a measurement starting with the specified slot number.

For example:

- Trigger Source: Free Run (Immediate)
- Sync Start Slot state : On
- Sync Start Slot number : 0

Power Control Measurement  
Meas Setup

- Capture Interval : 1 frame

The synchronization always starts from slot number 0.0 to 15.0 regardless of the trigger type.

If Sync Start Slot state is set to Off, the measurement performs synchronization at trigger timing.

Key Path	<b>Meas Setup, Slot Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSe] :PCONtrol:SSLot:NUMBer <integer> [ :SENSe] :PCONtrol:SSLot:NUMBer? [ :SENSe] :PCONtrol:SSLot[:STATe] OFF ON 0 1 [ :SENSe] :PCONtrol:SSLot[:STATe] ?
Example	PCON:SSL:NUMB 5 PCON:SSL:NUMB? PCON:SSL ON PCON:SSL?
Notes	Turn first slot number detection mode on or off.
Dependencies	The menu key is grayed out if device is MS and Sync Type is PRACH Message.
Preset	0 OFF
State Saved	Saved in instrument state.
Range	0 to 14
Initial S/W Revision	Prior to A.02.00
Help Map ID	16025

### Slot Offset

Specifies the number of chips to be offset from the first acquisition data to the slot boundary.

Key Path	<b>Meas Setup, Slot Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:SLOT:OFFSet <real> :CALCulate:PCONtrol:SLOT:OFFSet?
Example	CALC:PCON:SLOT:OFFS 0.0 CALC:PCON:SLOT:OFFS?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.

Preset	0.0
State Saved	Saved in instrument state.
Min	0.0
Max	5120.0
Initial S/W Revision	Prior to A.02.00
Help Map ID	16026

### Meas Delay

Specifies the number of chips to be delayed from the slot boundary to the start point of the power measurement. The range is 0.0 chips to (PCG Length - Meas Intvl) chips. The default is 96.0 chips which is equivalent to 25  $\mu$ s at the 3.840 MHz chip rate.

Key Path	<b>Meas Setup, Slot Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:SLOT:DElay <real> :CALCulate:PCONtrol:SLOT:DElay?
Example	CALC:PCON:SLOT:DEL 96.0 CALC:PCON:SLOT:DEL?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	96.0
State Saved	Saved in instrument state.
Min	0.0
Max	CALCulate:PCONtrol:SLOT:LENGth -:CALCulate:PCONtrol:SLOT:INTerval
Initial S/W Revision	Prior to A.02.00
Help Map ID	16027

### Meas Intvl

Specifies the number of chips to be used as the measuring interval for the averaged RMS power measurement.

Key Path	<b>Meas Setup, Slot Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:SLOT:INTerval <real> :CALCulate:PCONtrol:SLOT:INTerval?

Power Control Measurement  
**Meas Setup**

Example	CALC:PCON:SLOT:INT 1088.0 CALC:PCON:SLOT:INT?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	2368.0
State Saved	Saved in instrument state.
Min	1.0
Max	:CALCulate:PCONtrol:SLOT:LENGth -:CALCulate:PCONtrol:SLOT:OFFSet
Initial S/W Revision	Prior to A.02.00
Help Map ID	16028

**PCG Length**

Specifies the number of chips to be used as the integration time for the slot power measurement.

Key Path	<b>Meas Setup, Slot Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:SLOT:LENGth <real> :CALCulate:PCONtrol:SLOT:LENGth?
Example	CALC:PCON:SLOT:LENG 2560.0 CALC:PCON:SLOT:LENG?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	2560.0
State Saved	Saved in instrument state.
Min	:CALCulate:PCONtrol:SLOT:DELay + :CALCulate:PCONtrol:SLOT:INTerval or 768.0 (larger one)
Max	25600.0
Initial S/W Revision	Prior to A.02.00
Help Map ID	16082

**PRACH Power Meas**

Accesses a menu that enables you to set various parameters associated with the PRACH Power Measurement.

Key Path	<b>Meas Setup</b>
----------	-------------------

Initial S/W Revision	Prior to A.02.00
Help Map ID	16084

### Preamble Sig

Sets the PRACH Preamble signature pattern to use for synchronization when the Meas Method is set to Chip Power. There are two modes:

- Auto - Automatically synchronizes with one of the PRACH Preamble signature patterns, 0 to 15.
- Man - Specifies one of the PRACH Preamble signature patterns to which the synchronization is made.

This value is set to its auto number if the PRACH Preamble Signature Auto mode is set to ON.

Key Path	Meas Setup, PRACH Power Meas
Mode	WCDMA
<b>Remote Command</b>	[ :SENSE ] : PCONtrol : PRACH : SIGNature <integer> [ :SENSE ] : PCONtrol : PRACH : SIGNature? [ :SENSE ] : PCONtrol : PRACH : SIGNature : AUTO 0   1   OFF   ON [ :SENSE ] : PCONtrol : PRACH : SIGNature : AUTO?
Example	PCON:PRAC:SIGN 0 PCON:PRAC:SIGN? PCON:PRAC:SIGN:AUTO ON PCON:PRAC:SIGN:AUTO?
Notes	When in Auto, the detected PRACH Preamble signature should be displayed. If synchronization fails, "---" should be displayed.  You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.  Set Signature Auto mode ON for PRACH Preamble detection.
Preset	0 1
State Saved	Saved in instrument state.
Min	0
Max	15
Initial S/W Revision	Prior to A.02.00
Help Map ID	16030

### PRACH Threshold (Remote Command only)

This number is calculated by the noise floor level and peak level of the captured trace. The threshold

Power Control Measurement  
Meas Setup

level is displayed with the signal as a white horizontal line. The burst search algorithm recognizes the burst that crosses this level.

Mode	WCDMA
<b>Remote Command</b>	[ :SENSE] :PCONtrol:PRACH:THReshold?
Example	PCON:PRAC:THR?
Notes	Query only. You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	Automatically calculated
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	16031

**PRACH Noise Floor**

Enables you to specify the PRACH noise floor. You can determine the signal noise floor level of the PRACH burst signal (since the system cannot recognize the noise floor level of the burst signal). The burst search algorithm needs a burst search threshold level. The level is calculated using this noise floor level and the peak level of the captured trace.

Key Path	<b>Meas Setup, PRACH Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSE] :PCONtrol:PRACH:NFLoor <real> [ :SENSE] :PCONtrol:PRACH:NFLoor?
Example	PCON:PRAC:NFL -70.0 PCON:PRAC:NFL?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	Grayed out when the Meas Type is not PRACH Power.
Preset	-69
State Saved	Saved in instrument state.
Min	-156
Max	-36
Initial S/W Revision	Prior to A.02.00
Help Map ID	16053



### Preamble Length

Specifies the number of chips to be used as the length for PRACH preamble power-on period.

Key Path	<b>Meas Setup, PRACH Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:PRACH:PLENgtH <real> :CALCulate:PCONtrol:PRACH:PLENgtH?
Example	CALC:PCON:PRAC:PLEN 4096.0 CALC:PCON:PRAC:PLEN?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	4096.0
State Saved	Saved in instrument state.
Min	4000.0
Max	4200.0
Initial S/W Revision	Prior to A.02.00
Help Map ID	16032

### Message Length

Specifies the time value, in seconds, to be used as the length for the PRACH message burst-on period.

Key Path	<b>Meas Setup, PRACH Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:PRACH:MLENgtH <time> :CALCulate:PCONtrol:PRACH:MLENgtH?
Example	CALC:PCON:PRAC:MLEN 20.0 CALC:PCON:PRAC:MLEN?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	20.0 ms
State Saved	Saved in instrument state.
Min	10.0 ms
Max	20.0 ms
Initial S/W Revision	Prior to A.02.00
Help Map ID	16033

Power Control Measurement  
**Meas Setup**

**Meas Offset**

Sets the measurement offset (excluding the period before and after the reference point due to a transient) for the PRACH Power Measurement.

Key Path	<b>Meas Setup, PRACH Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:PRACH:OFFSet <real> :CALCulate:PCONtrol:PRACH:OFFSet?
Example	CALC:PCON:PRAC:OFFS 96.0 CALC:PCON:PRAC:OFFS?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	96.0
State Saved	Saved in instrument state.
Min	0.0
Max	200.0
Initial S/W Revision	Prior to A.02.00
Help Map ID	16034

**Off Power Intvl**

Specifies the number of chips to be used as the length for the power-off measurement interval.

Key Path	<b>Meas Setup, PRACH Power Meas</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:PRACH:INTerval <real> :CALCulate:PCONtrol:PRACH:INTerval?
Example	CALC:PCON:PRAC:INT 2368.0 CALC:PCON:PRAC:INT?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	2368.0
State Saved	Saved in instrument state.
Min	1.0
Max	12800.0
Initial S/W Revision	Prior to A.02.00

Help Map ID	16035
-------------	-------

## Slot Phase Meas

Accesses a menu of functions that enable you to specify and control the Slot Phase measurement.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16029

### Symbol Boundary (MS only)

Selects the symbol boundary detection mode for the MS.

Auto—sets the symbol boundary detection to the automatic mode. Various code channels are measured and the most appropriate code channel is selected as the reference channel.

Custom—provides a flexible way to specify predefined active channels. By choosing it, you can specify a customized list of active channels using the following command::

```
[[:SENSe]:PCONtrol:SBOundary:LIST:MS INIT|APPend|<entry_id>, <symbol_rate>, <code_num>, IPH|QPH
```

All the specified channels are considered as active.

There is no front panel menu key to specify the custom active channel list.

---

<b>NOTE</b>	<p>The Custom choice is selectable even if you have not sent the following command:</p> <p>“[:SENSe]:PCONtrol:SBOundary:LIST:MS”</p> <p>because the default custom list contains DPCCH (15000, 0, QPH) as a predefined active channel. Choosing the Custom setting makes one channel (C8(0):Q) active, and all other channels inactive.</p>
-------------	---

---

Key Path	<b>Meas Setup, Slot Phase Meas</b>
Mode	WCDMA
<b>Remote Command</b>	[:SENSe]:PCONtrol:SBOundary:MS AUTO CUSTom [:SENSe]:PCONtrol:SBOundary:MS?
Example	PCON:SBO:MS CUST PCON:SBO:MS?
Notes	This parameter is effective when [:SENSe]:RADio:DEVIce is set to MS.
Dependencies	This menu key is active if the Radio Device selection is MS.

Preset	AUTO
State Saved	Saved in instrument state.
Range	Auto Custom
Initial S/W Revision	Prior to A.02.00
Help Map ID	16043

**Symbol Boundary Custom Active Channel List (MS only)**

The following commands are used to configure the list of custom predefined channels for the MS.

**Initialize List**

Initializes the current custom active channel list. This creates a new entry with the given parameter.

1st parameter:

<symbol\_rate> This parameter specifies the symbol rate of the channel.

2nd parameter:

<code\_num> This parameter specifies the spreading code of the channel.

3rd parameter:

IPH Specifies the channel is on the I-axis.

QPH Specifies the channel is on the Q-axis.

Mode	WCDMA
<b>Remote Command</b>	[ :SENSE] :PCONtrol :SBOundary :LIST :MS :INIT <symbol_rate>, <code_num>, IPH QPH
Example	In order to predefine the following channels: - DPCCH (C8(0):Q) - DPDCH (C6(16):I) PCON:SBO:LIST:MS:INIT 15000, 0, QPH PCON:SBO:LIST:MS:APP 60000, 16, IPH PCON:SBO:LIST:NCH:MS? 2 PCON:SBO:LIST:MS:CHAN? 1 15000, 0, QPH PCON:SBO:LIST:MS:CHAN? 2 60000, 16, IPH

Notes	<p>(1) This command is effective if [:SENSE]:RADio:DEVIce is set to MS and [:SENSE]:PCONtrol:SBOundary:MS is set to CUSTom.</p> <p>(2) symbol_rate = 1920000 is available if HSDPA/HSUPA Enable is On.</p> <p>(3) The maximum number of entries is 512.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and instrument's settings do not change.</p> <p>(1) "Missing Parameter" (PSA: -109, E4406A VSA: -109)</p> <p>This error is reported if the number of parameters is less than 3.</p> <p>For example,</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:INIT 15000, 0 3rd parameter is missing.</pre> <p>(2) "Illegal parameter value"</p> <p>This error is reported if the parameter type is invalid or if the enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:INIT 15000, ON, QPH 2nd parameter must be an integer.</pre> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:INIT 15001, 0, QPH 1st parameter value (Symbol Rate) is not allowed.</pre> <p>Only the values given in the Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and an error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if the parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:INIT 15000, 256, QPH 2nd parameter is out of range.</pre> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps another code channel on Power Control.</p> <p>For example, if you send the following two commands, the second command causes the error message because C7(0):Q overlaps C8(0):Q.</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:INIT 15000, 0, QPH OK</pre> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:APPend 30000, 0, QPH C7(0):Q overlaps C8(0):Q</pre>
State Saved	Saved in instrument state.

Power Control Measurement  
**Meas Setup**

Range	symbol_rate = 15000 30000 60000 120000 240000 480000 960000 1920000 0<= code_num <= 255 if symbol_rate = 15000 0<= code_num <= 127 if symbol_rate = 30000 0<= code_num <= 63 if symbol_rate = 60000 0<= code_num <= 31 if symbol_rate = 120000 0<= code_num <= 15 if symbol_rate = 240000 0<= code_num <= 7 if symbol_rate = 480000 0<= code_num <= 3 if symbol_rate = 960000 0<= code_num <= 1 if symbol_rate = 1920000
Initial S/W Revision	Prior to A.02.00
Help Map ID	16044

**Append List**

Appends the entry of the custom active channel list.

1st parameter:

<symbol\_rate> This parameter specifies the symbol rate of the channel.

2nd parameter:

<code\_num> This parameter specifies the spreading code of the channel.

3rd parameter:

IPH Specifies the channel is on the I-axis.

QPH Specifies the channel is on the Q-axis.

Mode	WCDMA
<b>Remote Command</b>	[:SENSe]:PCONtrol:SBOundary:LIST:MS:APPend <symbol_rate>, <code_num>, IPH QPH

Example	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"><li>- DPCCH (C8(0):Q)</li><li>- DPDCH (C6(16):I)</li></ul> <p>PCON:SBO:LIST:MS:INIT 15000, 0, QPH PCON:SBO:LIST:MS:APP 60000, 16, IPH PCON:SBO:LIST:NCH:MS? 2 PCON:SBO:LIST:MS:CHAN? 1 15000, 0, QPH PCON:SBO:LIST:MS:CHAN? 2 60000, 16, IPH</p>
---------	---

Notes	<p>(1) This command is effective if [:SENSe]:RADio:DEVice is set to MS and [:SENSe]:PCONtrol:SBOundary:MS is set to CUSTom.</p> <p>(2) symbol_rate = 1920000 is available if HSDPA/HSUPA Enable is On.</p> <p>(3) The maximum number of entries is 512.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 3.</p> <p>For example,</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:APPend 15000, 0</pre> <p>3rd parameter is missing.</p> <p>(2) "Illegal parameter value"</p> <p>This error is reported if the parameter type is invalid or if the enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:APPend 15000, ON, QPH</pre> <p>2nd parameter must be integer.</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:APPend 15001, 0, QPH</pre> <p>1st parameter value (Symbol Rate) is not allowed.</p> <p>Only the values given in the Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and an error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if the parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:APPend 15000, 256, QPH</pre> <p>2nd parameter is out of range.</p> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps another code channel on Power Control.</p> <p>For example, if you send the following two commands, the second command causes an error message because C7(0):Q overlaps C8(0):Q.</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:INIT 15000, 0, QPH</pre> <p>OK</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:APPend 30000, 0, QPH</pre> <p>C7(0):Q overlaps C8(0):Q</p>
State Saved	Saved in instrument state.



Range	<p>symbol_rate = 15000 30000 60000 120000 240000 480000 960000 1920000</p> <p>0&lt;= code_num &lt;= 255 if symbol_rate = 15000</p> <p>0&lt;= code_num &lt;= 127 if symbol_rate = 30000</p> <p>0&lt;= code_num &lt;= 63 if symbol_rate = 60000</p> <p>0&lt;= code_num &lt;= 31 if symbol_rate = 120000</p> <p>0&lt;= code_num &lt;= 15 if symbol_rate = 240000</p> <p>0&lt;= code_num &lt;= 7 if symbol_rate = 480000</p> <p>0&lt;= code_num &lt;= 3 if symbol_rate = 960000</p> <p>0&lt;= code_num &lt;= 1 if symbol_rate = 1920000</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16045

### Replace List

Replaces the entry of the custom active channel list.

1st parameter:

<entry\_id> This parameter specifies the entry ID of the channel to replace.

2nd parameter:

<symbol\_rate> This parameter specifies the symbol rate of the channel.

3rd parameter:

<code\_num> This parameter specifies the spreading code of the channel.

4th parameter:

IPH Specifies the channel is on the I-axis.

QPH Specifies the channel is on the Q-axis.

Mode	WCDMA
<b>Remote Command</b>	[ :SENSe] :PCONTrol :SBOundary :LIST :MS :REPLace <entry_id>, <symbol_rate>, <code_num>, IPH QPH

Power Control Measurement  
Meas Setup

Example	<p>In order to predefine the following channels:</p> <ul style="list-style-type: none"><li>- DPCCH (C8(0):Q)</li><li>- DPDCH (C6(16):I)</li></ul> <p>PCON:SBO:LIST:MS:INIT 15000, 0, QPH PCON:SBO:LIST:MS:APP 60000, 16, IPH PCON:SBO:LIST:NCH:MS? 2</p> <p>And, replace 2nd entry.</p> <p>PCON:SBO:LIST:MS:REPL 2, 60000,17,QPH PCON:SBO:LIST:MS:CHAN? 1 15000, 0, QPH PCON:SBO:LIST:MS:CHAN? 2 60000, 17, IPH</p>
---------	---

Notes	<p>(1) This command is effective if [:SENSE]:RADio:DEVIce is set to MS and [:SENSE]:PCONtrol:SBOundary:MS is set to CUSTom.</p> <p>(2) symbol_rate = 1920000 is available if HSDPA/HSUPA Enable is On.</p> <p>(3) The maximum number of entries is 512.</p> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and instrument's settings do not change.</p> <p>(1) "Missing Parameter"</p> <p>This error is reported if the number of parameters is less than 4.</p> <p>For example,</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:REPLace 1,15000, 0 4th parameter is missing.</pre> <p>(2) "Illegal parameter value"</p> <p>This error is reported if the parameter type is invalid or if the enum value is invalid.</p> <p>For example,</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS: REPLace 1,15000, ON, QPH 3rd parameter must be integer.</pre> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:REPLace 1,15001, 0, QPH 2nd parameter value (Symbol Rate) is not allowed.</pre> <p>Only the values given in the Range field are valid for the Symbol Rate. You may specify these in numeric form, but they are interpreted as an enumeration and an error results if the value does not translate to one in the list.</p> <p>(3) "Data out of range"</p> <p>This error is reported if the parameter value is out of range.</p> <p>For example,</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:APPend 15000, 256, QPH 3rd parameter is out of range.</pre> <p>(4) "Setting Conflict"</p> <p>This error is reported if the given code channel overlaps another code channel on Power Control.</p> <p>For example, if you send the following two commands, the second command causes an error message because C7(0):Q overlaps C8(0):Q.</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:INIT 15000, 0, QPH OK :SENSe:PCONtrol:SBOundary:LIST:MS: REPLace 1,30000, 0, QPH C7(0):Q overlaps C8(0):Q</pre> <p>(5) The entry ID is out of range</p> <p>1 &lt;= entry_id &lt;= The number of entries which is currently appended.</p>
-------	---

Power Control Measurement  
Meas Setup

State Saved	Saved in instrument state.
Range	<p>The entry ID must be:</p> <p>1 &lt;= entry_id &lt;= The number of entries which is currently appended.</p> <p>symbol_rate = 15000 30000 60000 120000 240000 480000 960000 1920000</p> <p>0&lt;= code_num &lt;= 255 if symbol_rate = 15000</p> <p>0&lt;= code_num &lt;= 127 if symbol_rate = 30000</p> <p>0&lt;= code_num &lt;= 63 if symbol_rate = 60000</p> <p>0&lt;= code_num &lt;= 31 if symbol_rate = 120000</p> <p>0&lt;= code_num &lt;= 15 if symbol_rate = 240000</p> <p>0&lt;= code_num &lt;= 7 if symbol_rate = 480000</p> <p>0&lt;= code_num &lt;= 3 if symbol_rate = 960000</p> <p>0&lt;= code_num &lt;= 1 if symbol_rate = 1920000</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16046

### Query List

Returns the entry of the custom active channel list.

1st parameter:

<entry\_id>            This parameter specifies entry ID of the channel to query

Mode	WCDMA
Remote Command	[ :SENSE] :PCONtrol :SBOundary :LIST :MS :CHANnel? <entry_id>
Example	<p>In order to predefine the following channels:</p> <p>- DPCCH (C8(0):Q)</p> <p>- DPDCH (C6(16):I)</p> <p>PCON:SBO:LIST:MS:INIT 15000, 0, QPH</p> <p>PCON:SBO:LIST:MS:APP 60000, 16, IPH</p> <p>PCON:SBO:LIST:NCH:MS?</p> <p>2</p> <p>PCON:SBO:LIST:MS:CHAN? 1</p> <p>15000, 0, QPH</p> <p>PCON:SBO:LIST:MS:CHAN? 2</p> <p>60000, 16, IPH</p>

Notes	<p>(1) This command is effective if [:SENSe]:RADio:DEVIce is set to MS and [:SENSe]:PCONtrol:SBOundary:MS is set to CUSTom.</p> <p>(2) symbol_rate = 1920000 is available if HSDPA/HSUPA Enable is On.</p> <p>(3) The maximum number of entries is 512.</p> <p>Default value of the parameter</p> <p>By default, there is one channel defined. (DPCCH C8(0):Q)</p> <p>In order to query the default entry, specify 1 for &lt;entry_id&gt;:</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:CHANnel? 1</pre> <p>The instrument returns an array of three values:</p> <pre>15000, 0, QPH</pre> <p>Query commands need an &lt;entry_id&gt; parameter</p> <p>The &lt;entry_id&gt; parameter is always required for query commands.</p> <p>The range of the parameter is from 1 to the total number of channels you have defined. For example, if you have defined two channels, you can query them as follows:</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:CHANnel? 1</pre> <pre>:SENSe:PCONtrol:SBOundary:LIST:MS:CHANnel? 2</pre> <p>If you want to know the number of channels you have defined, send the following query command:</p> <pre>:SENSe:PCONtrol:SBOundary:LIST:NCHannels:MS?</pre> <p>One of the following error messages is logged if the given parameter is invalid.</p> <p>If an error is reported, the SCPI command is rejected and instrument's settings do not change.</p> <pre>&lt;entry_id&gt; out of range</pre> <p>The entry ID must be:</p> <pre>1 &lt;= entry_id &lt;= The number of entries which is currently appended.</pre>
Preset	15000, 0, QPH
State Saved	Saved in instrument state.
Range	<p>The entry ID must be:</p> <pre>1 &lt;= entry_id &lt;= The number of entries which is currently appended.</pre>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16047

### Symbol Boundary Custom Active Channel List – The Number Of Entries (MS only)

Returns the number of entries in the custom predefined active channel list MS.

Mode	WCDMA
<b>Remote Command</b>	[ :SENSe ] :PCONtrol :SBOundary :LIST :MS :NCHannels?
Example	SENS:PCON:SBO:LIST:MS:NCH?
Notes	This command is effective when [:SENSe]:RADio:DEVice is set to MS and [:SENSe]:PCONtrol:SBOundary:MS is set to CUSTom. This command is a query-only command.
Preset	1
State Saved	No
Initial S/W Revision	Prior to A.02.00
Help Map ID	16048

### Meas Method

Enables you to access the Meas Method Menu to select the data acquisition method, Waveform or Chip Power.

- WAVEform-Measures and performs a power calculation based on the waveform (raw data of A/D). This means a raw measurement under the specific BW, filter type and Capture Interval.
- CPOWer-Measures and performs a power calculation based on the chip power (resample on chip clock). This means a re-sampled power measurement based on the chip clock timing for W-CDMA.

The Meas Method is available only for the Slot Power and PRACH Power measurement types.

In the Slot Phase measurement type, resampling on the chip clock is always performed.

Key Path	<b>Meas Setup</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSe ] :PCONtrol :METHod WAVEform CPOWer [ :SENSe ] :PCONtrol :METHod?
Example	PCON:METH WAV PCON:METH?
Notes	You must be in the W-CDMA mode to use this command. Use INSTrument:SElect to set the mode.
Dependencies	This parameter is available if the Meas Type is Slot Power or PRACH Power and grayed out if the Meas Type is Slot Phase.
Preset	WAVEform

State Saved	Saved in instrument state.
Range	Chip Power Waveform
Initial S/W Revision	Prior to A.02.00
Help Map ID	16036

## RRC Filter

Accesses a menu of functions that enable you to turn the root-raised cosine filter On, Off, or set it to Auto.

Key Path	<b>Meas Setup</b>
Mode	WCDMA
Couplings	When set to Auto, the RRC filter state is set to On. when the Meas Method is changed to Chip Power and the RRC filter state is set to Off when the Meas Method is changed to Waveform.
State Saved	Saved in instrument state.
Range	Auto On Off
Readback Text	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	16037

## RRC Filter Auto

Toggles the root-raised cosine (RRC) Filter Auto mode On and Off.

Mode	WCDMA
<b>Remote Command</b>	[ :SENSE] :PCONtrol :FILTer [ :RRC ] :AUTO OFF   ON   0   1 [ :SENSE] :PCONtrol :FILTer [ :RRC ] :AUTO?
Example	PCON : FILT : AUTO OFF PCON : FILT : AUTO?
Couplings	When the RRC Filter Auto is On, the RRC filter state is set to On. when the Meas Method is changed to Chip Power and the RRC filter state is set to Off when the Meas Method is changed to Waveform.
Preset	ON
State Saved	Saved in instrument state.
Range	OFF ON 0 1
Initial S/W Revision	Prior to A.02.00
Help Map ID	16038

### RRC Filter State

Toggles the root-raised cosine filter function between On and Off.

Mode	WCDMA
Remote Command	[ :SENSE]:PCONtrol:FILTer[:RRC][:STATE] 0 1 OFF ON [:SENSE]:PCONtrol:FILTer[:RRC][:STATE]?
Example	PCON:FILT OFF PCON:FILT?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the RRC Filter Auto is ON, the RRC Filter State is set to ON when the Meas Method is changed to Chip Power and the RRC Filter State is set to OFF when the Meas Method is changed to Waveform.
Preset	0
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	16039

### Capture Interval

Accesses a menu that enables you to select the number of frames for data acquisition.

Key Path	<b>Meas Setup</b>
Mode	WCDMA
Notes	For consistency, this parameter must be controlled with a float numeric from remote commands, but the front panel interface uses Enum for easier operation.
Dependencies	This Parameter is coupled with MeasType. 8 Frames can not be set (menu key is grayed out) if MeasType is SlotPhase.
Couplings	See Dependencies
Preset	4 Frames
State Saved	Saved in instrument state.
Range	1 Frame 2 Frames 4 Frames 8 Frames
Initial S/W Revision	Prior to A.02.00
Help Map ID	16040



### Capture Interval (Remote Command only)

Enables you to specify the capture interval in frame units.

Mode	WCDMA
<b>Remote Command</b>	[ :SENSe] :PCONtrol :CAPture :TIME <real> [ :SENSe] :PCONtrol :CAPture :TIME?
Example	PCON:CAPT:TIME 4.0 PCON:CAPT:TIME?
Notes	For consistency, this parameter must be controlled with a float numeric from , but the front panel interface uses Enum for easier operation.  You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	This Parameter is coupled with MeasType. 8 Frames can not be set (menu key is grayed out) if MeasType is SlotPhase.
Couplings	See Dependencies
Preset	4.0
State Saved	Saved in instrument state.
Range	1.0 2.0 4.0 8.0
Initial S/W Revision	Prior to A.02.00
Help Map ID	16041

### Scramble Code

Sets the mobile station (MS) scramble code for synchronization. When this key is selected, a Hexadecimal Input menu appears.

Key Path	<b>Meas Setup</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSe] :PCONtrol :SYNC :SCRamble <integer> [ :SENSe] :PCONtrol :SYNC :SCRamble?
Example	PCON:SYNC:SCR 0 PCON:SYNC:SCR?
Preset	0 (0x0)
State Saved	Saved in instrument state.
Min	0 (0x0; 24 bits)
Max	16777215 (0xFFFFF; 24 bits)

Power Control Measurement  
**Meas Setup**

Initial S/W Revision	Prior to A.02.00
Help Map ID	16042

**IF Gain**

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

Key Path	<b>Meas Setup, Advanced</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16078

**IF Gain Auto**

Activates the auto rules for IF Gain

Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSe]:PCONtrol:IF:GAIN:AUTO[:STATe] OFF ON 0 1 [ :SENSe]:PCONtrol:IF:GAIN:AUTO[:STATe]?
Example	PCON:IF:GAIN:AUTO OFF
Dependencies	This only applies to the RF input. It does not apply to baseband I/Q input.
Preset	OFF
State Saved	Saved in instrument state.
Range	Auto Man
Initial S/W Revision	Prior to A.02.00
Help Map ID	16049

**IF Gain State**

Selects the range of the IF gain.

Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSe]:PCONtrol:IF:GAIN[:STATe] ON OFF 1 0 [ :SENSe]:PCONtrol:IF:GAIN[:STATe]?
Example	PCON:IF:GAIN LOW PCON:IF:GAIN?

Notes	Where On = high gain OFF = low gain
Dependencies	This only applies to the RF input. It does not apply to baseband I/Q input.
Preset	OFF
State Saved	Saved in instrument state.
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)
Readback Text	Low Gain High Gain
Initial S/W Revision	Prior to A.02.00
Help Map ID	16050

## Meas Preset

Restores all the measurement parameters to their default values.

Key Path	<b>Meas Setup</b>
Mode	WCDMA
<b>Remote Command</b>	:CONFigure:PCONtrol
Example	CONF:PCON
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	Selecting meas preset restores all measurement parameters to their default values.
Initial S/W Revision	Prior to A.02.00
Help Map ID	16054

## Advanced

Accesses a menu that enables you to set the alpha value for the RRC filter and change the chip rate for the measurement.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16080

## Filter Alpha

Sets the alpha value of the root raised cosine (RRC) filter.

Key Path	<b>Meas Setup, Advanced</b>
----------	-----------------------------

Power Control Measurement  
**Meas Setup**

Mode	WCDMA
<b>Remote Command</b>	[ :SENSE] :PCONtrol:FILTer [:RRC]:ALPHA <real> [ :SENSE] :PCONtrol:FILTer [:RRC]:ALPHA?
Example	PCON:FILT:ALPH 0.22 PCON:FILT:ALPH?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.220
State Saved	Saved in instrument state.
Min	0.01
Max	0.50
Initial S/W Revision	Prior to A.02.00
Help Map ID	16051

**Chip Rate**

Changes the chip rate for the measurement.

Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSE] :PCONtrol:CRATe <freq> [ :SENSE] :PCONtrol:CRATe?
Example	PCON:CRAT 3.84e6 PCON:CRAT?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	3.84 MHz
State Saved	Saved in instrument state.
Min	3.456 MHz
Max	4.224 MHz
Initial S/W Revision	Prior to A.02.00
Help Map ID	16052

---

## **Mode**

Operation of this key is identical across several measurements. For details of this key, see “[Mode](#)” on [page 1635](#).[Proc\_iFrame:2670@]

## **Mode Setup**

Operation of this key is identical across all measurements. For details of this key, see [“Mode Setup” on page 1651](#).[Proc\_iFrame:4536@]

---

## Peak Search

Places the selected marker on the trace point with the maximum Y-axis value for that marker's trace.

Key Path	<b>Front panel key</b>
Mode	WCDMA
<b>Remote Command</b>	:CALCulate:PCONtrol:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: MAXimum
Example	CALC:PCON:MARK2:MAX
Initial S/W Revision	Prior to A.02.00
Help Map ID	16065

## **Recall**

Operation of this key is identical across several measurements. For details of this key, see [“Recall” on page 189](#)[Proc\_iFrame:2637@]



---

## **Restart**

Operation of this key is identical across several measurements. For details of this key, see “[Restart](#)” on [page 1671](#).[Proc\_iFrame:3307@]

## **Save**

Operation of this key is identical across several measurements. For details of this key, see [“Save” on page 205](#)[Proc\_iFrame:2600@]

---

## Single

Operation of this key is identical across several measurements. For details of this key, see “[Single \(Single Measurement/Sweep\)](#)” on page 1677.[Proc\_iFrame:3515@]

## **Source**

Operation of this key is identical across several measurements. For details of this key, see [“Source” on page 1679](#).[Proc\_iFrame:3551@]

## SPAN X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16066

### Ref Value

Sets the display reference value for the current measurement.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:R LEVel <time>  :DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:R LEVel?
Example	DISP:PCON:VIEW:WIND:TRAC:X:RLEV 0.0 DISP:PCON:VIEW:WIND:TRAC:X:RLEV?
Notes	You must be in the W-CDMA mode to use this command. Use INSTrument:SElect to set the mode.
Couplings	If the Scale Coupling is On, this value is automatically determined by the measurement result. When you set a value manually, Scale Coupling automatically changes to Off.
Preset	0.0 s
State Saved	Saved in instrument state.
Min	-1.0 s
Max	10.0 s
Initial S/W Revision	Prior to A.02.00
Help Map ID	16001

### Scale/Div

Enables you to enter a time value to change the horizontal scale.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA

Power Control Measurement  
**SPAN X Scale**

<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:P DIVIision <time>  :DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:P DIVIision?
Example	DISP:PCON:VIEW:WIND:TRAC:X:PDIV 4.0e-3  DISP:PCON:VIEW:WIND:TRAC:X:PDIV?
Notes	You must be in the W-CDMA mode to use this command. Use INSTrument:SELEct to set the mode.
Couplings	If the Scale Coupling is On, this value is automatically determined by the measurement result. When you set a value manually, Scale Coupling automatically changes to Off.
Preset	4.000 ms
State Saved	Saved in instrument state.
Min	1.0 ns
Max	1.0 s
Initial S/W Revision	Prior to A.02.00
Help Map ID	16002

## Ref Position

Sets the display reference position to Left, Ctr (center), or Right.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:R POSItion LEFT CENTER RIGHT  :DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:R POSItion?
Example	DISP:PCON:VIEW:WIND:TRAC:X:RPOS LEFT  DISP:PCON:VIEW:WIND:TRAC:X:RPOS?
Notes	You must be in the W-CDMA mode to use this command. Use INSTrument:SELEct to set the mode.
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00
Help Map ID	16003

## Auto Scaling

Toggles the scale coupling function between On and Off.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON :DISPlay:PCONtrol:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:COUPle?
Example	DISP:PCON:VIEW:WIND:TRAC:X:COUP ON DISP:PCON:VIEW:WIND:TRAC:X:COUP?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	Upon pressing the Restart front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Scale Coupling automatically changes to Off.
Preset	1
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	16004

## Sweep/Control

Accesses a menu that enables you to pause and restart the measurement.

Key Path	<b>Front Panel Key</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16081

## Pause/Resume

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point at which it was paused. See the section [“Pause/Resume” on page 1698](#) for details.[Proc\_iFrame:3290@]

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16079



---

## Trace/Detector

There is no Trace/Detector functionality supported in Power Control. This front panel key displays a blank menu when pressed.

Key Path	Front Panel Key
Initial S/W Revision	Prior to A.02.00
Help Map ID	16083

## View/Display

Accesses a menu of functions that enable you to set up and control the display parameters for the current measurement.

### View/Display Remote SCPI Command

Selects either Power Graph & Metrics or Phase Graph & Metrics as the results view.

Key Path	<b>View/Display</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW[:SElect] POWER PHASe :DISPlay:PCONtrol:VIEW[:SElect]?
Example	DISP:PCON:VIEW POW DISP:PCON:VIEW?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	<b>Phase Graph &amp; Metrics</b> is grayed out when Meas Type is Slot Phase.
Couplings	When Meas Type is set to Slot Phase, this value automatically goes to PHASe to make it easy to access Phase Error view of Slot Phase measurement.
Preset	POWER
State Saved	Saved in instrument state.
Range	Power Graph & Metrics Phase Graph & Metrics
Initial S/W Revision	Prior to A.02.00
Help Map ID	16072

Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW:NSElect <integer> :DISPlay:PCONtrol:VIEW:NSElect?
Example	DISP:PCON:VIEW:NSEL 1 DISP:PCON:VIEW:NSEL?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	1
State Saved	Saved in instrument state.
Min	1

Max	2
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

## Display

Accesses a menu of functions that enable you to set the display parameters.

The Display menu functionality is common across all measurements in this mode. See the section [“Display” on page 1813](#) for more details.[Proc\_iFrame:3440@]

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16073

## Power Graph & Metrics


For the Remote Command, see [“View/Display” on page 1206](#).

### Slot Power Measurement

There are two windows, RF Envelope window (upper) and Metrics (lower) window.

In the RF Envelope window, the yellow trace shows captured trace, and the light blue trace shows slot-averaged trace.

Power Control Measurement  
View/Display

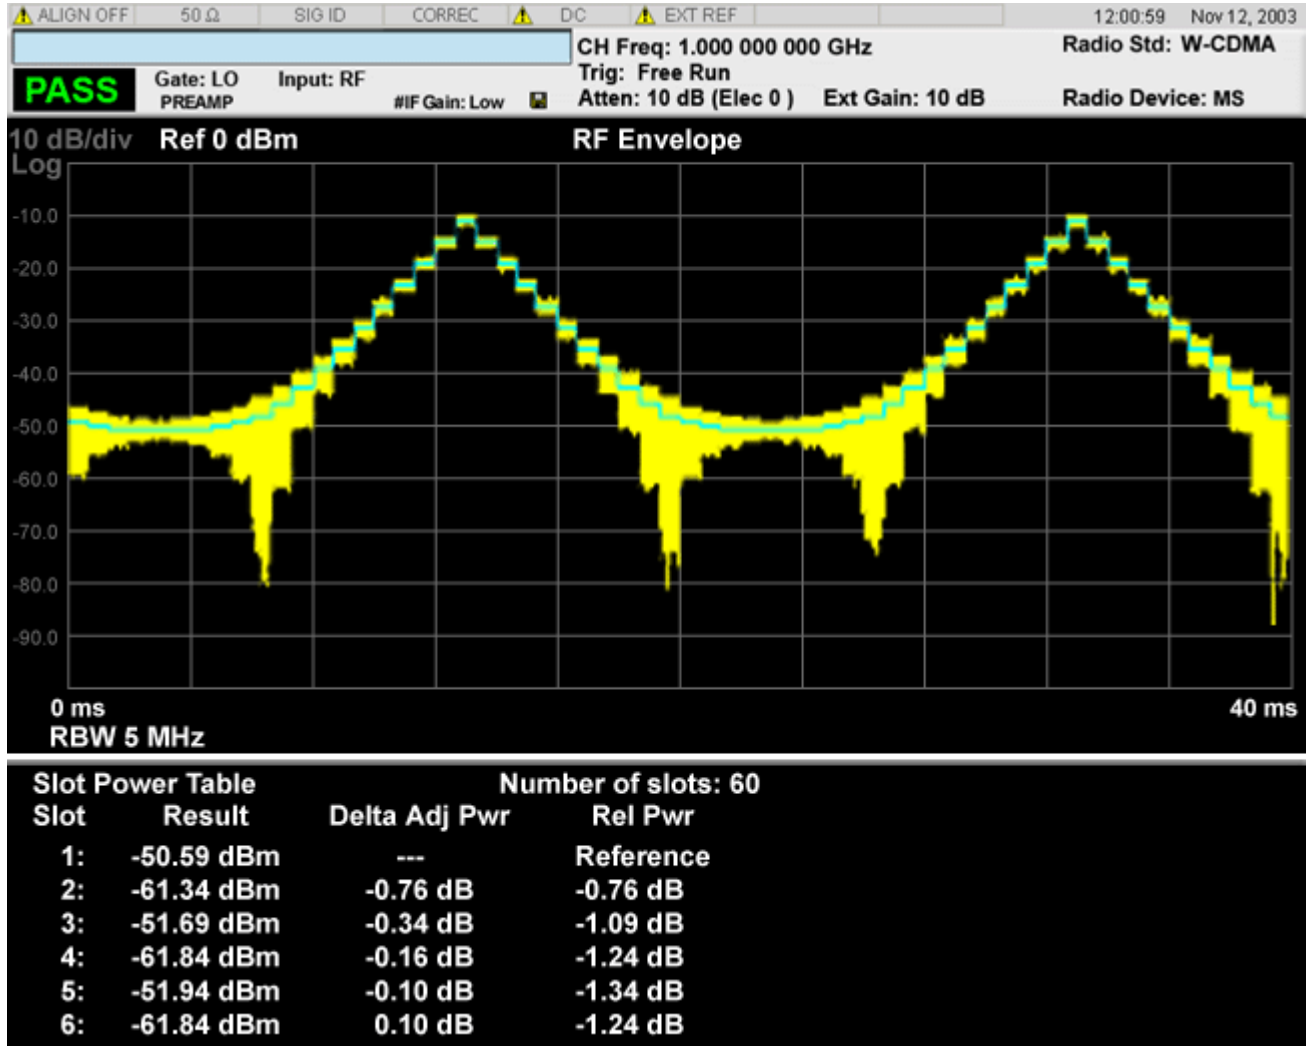

- RF Envelope window

Marker Operation	Yes for both traces
Corresponding Trace	<ul style="list-style-type: none"> <li>• yellow - Waveform/Chip Power trace (n=2).</li> <li>• light blue – Averaged absolute power level of each slot (n=3), which is also displayed in the “Result” column in the Metrics window.</li> </ul>

- Metrics window


Name	Corresponding Results	Resolution
Number of slots	n=1 1st element Number of slots found in the captured data. (In case of PRACH Power measurement, it always returns 0.)	nnn

Name	Corresponding Results	Resolution
Slot	<p>(1) If Meas Method is Waveform, it counts up from 1 to the number of slots.</p> <p>(2) If Meas Method is Chip Power, there are two ways to show the slot number:</p> <ul style="list-style-type: none"> <li>- If the Slot Number menu key on the Display menu is Rel, the result counts up from 1 to the number of slots.</li> <li>- If the Slot Number menu key on Display menu is Abs, the result shows the absolute slot number determined by the scrambling code.</li> </ul> <p>In case (1), no corresponding information is returned via SCPI.</p> <p>In case (2), the first slot number is always returned via SCPI (n=1 4th element).</p>	nnn:
Result	<p>n=3</p> <p>Averaged absolute power level of each slot, which is also displayed as a light blue trace in RF Envelope window.</p>	nn.nn dBm
Delta Adj Pwr	<p>n=5</p> <p>Relative power level to the previous slot</p>	nn.nn dB
Rel Pwr	<p>n=6</p> <p>Relative power level to the first slot</p>	nn.nn dB

### PRACH Power Measurement

There are two windows, the RF Envelope window (upper) and the Metrics window (lower).

Power Control Measurement  
View/Display

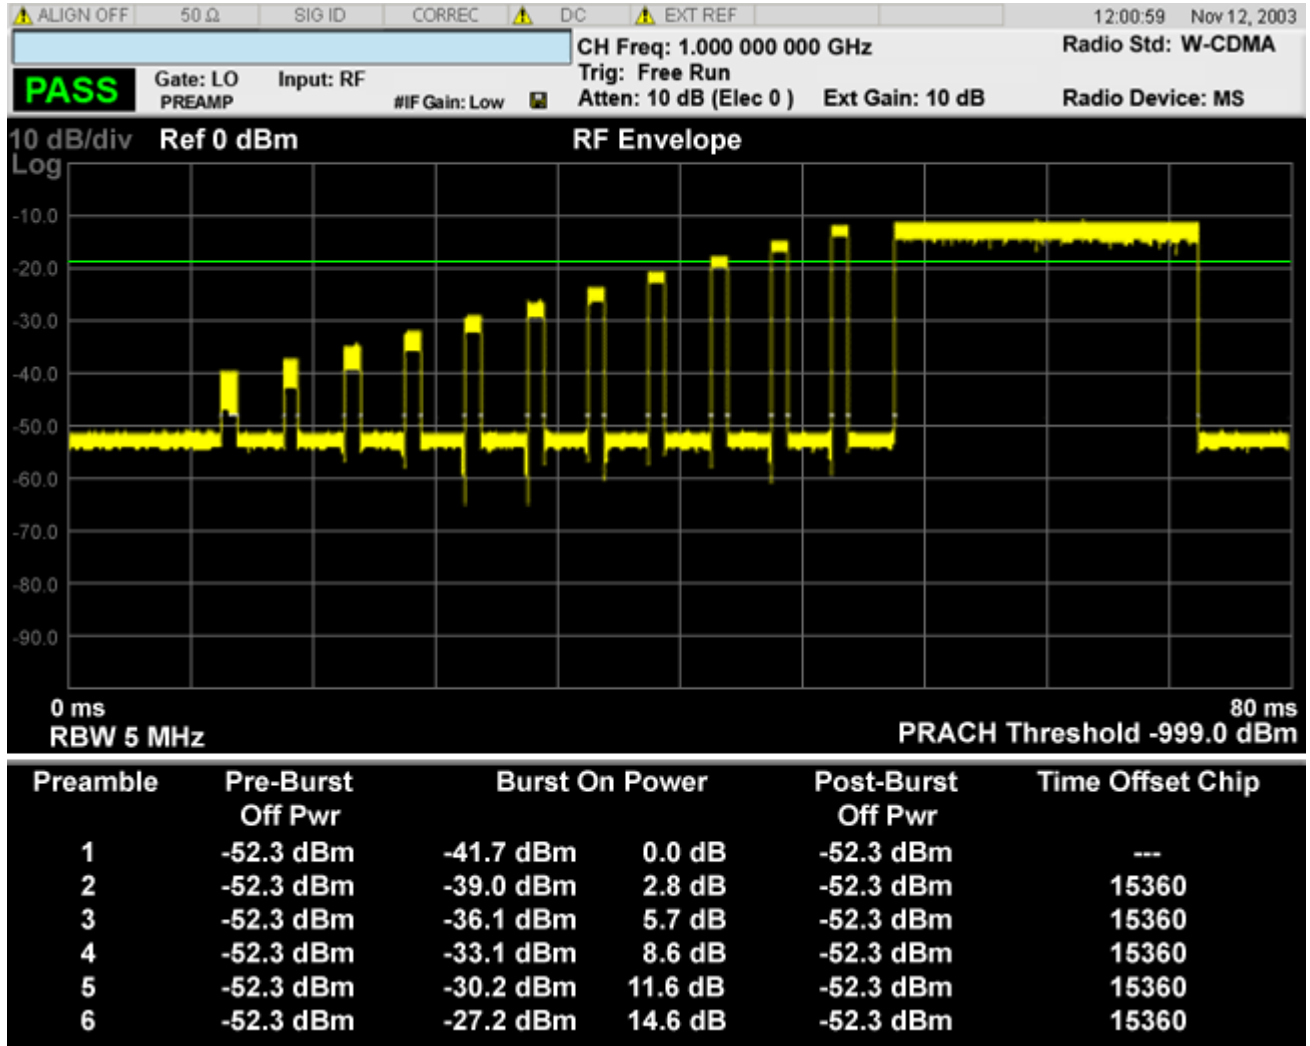

RF Envelope window

Marker Operation	Yes
Corresponding Trace	Waveform/Chip Power trace (n=2)

Metrics window


Name	Corresponding Results	Resolution
Preamble	n=1 2nd and 3rd elements  The preamble number counts of 1 to the number of PRACH preambles found in the captured data.  It indicates "Message" for the PRACH message burst.	
Pre-Burst Off Pwr	n=4 (Npreamble - 1) * 5 + 1 th element  Pre-Burst Off Power of Nth burst	nn.nn dBm

Name	Corresponding Results	Resolution
Bst On Pwr	n=4 (Npreamble – 1) *5 + 2 th element Burst On Power of Nth burst	nn.nn dBm
Bst On Pwr	n=4 (Npreamble – 1) *5 + 3 th element Burst On Power relative to the previous burst	nn.nn dB
Post-Burst Off Pwr	n=4 (Npreamble – 1) *5 + 4 th element Post-Burst Off Power of N th burst	nn.nn dBm
Time Offset Chip	n=4 (Npreamble – 1) *5 + 5 th element Time Offset relative to the previous burst	--- for first PRACH burst. nnnnn for others

### Slot Phase Measurement

There are two windows, the RF Envelope window (upper) and the Metrics window (lower). The RF Envelope & Metrics is the same as what the Slot Power Measurement returns in the Chip Power Method.

Power Control Measurement  
View/Display

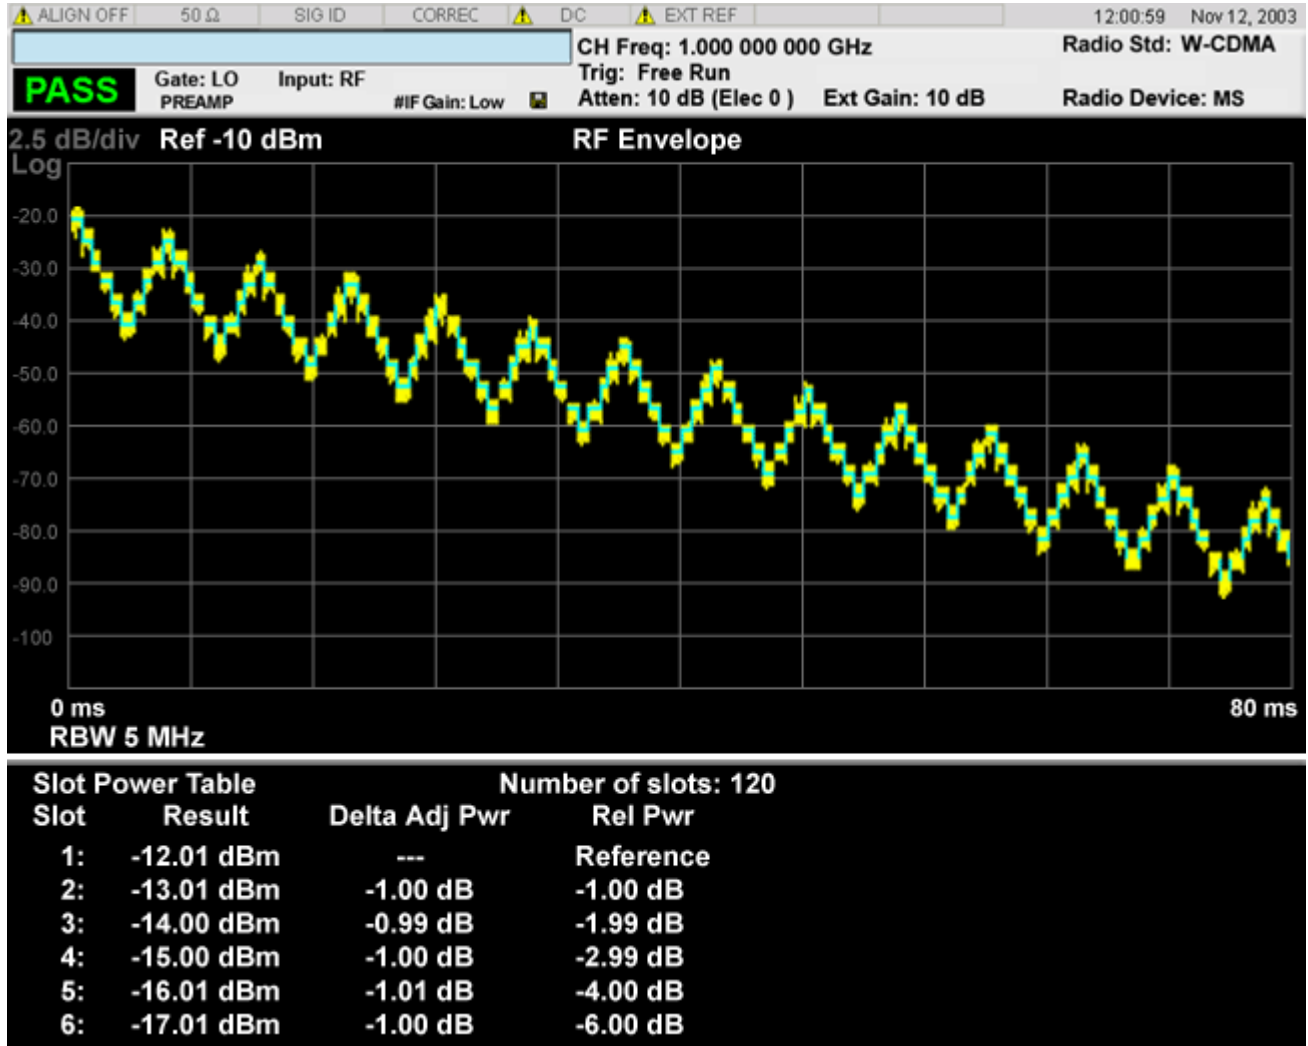

Key Path	View/Display
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00
Help Map ID	16094

### Phase Graph & Metrics

For the Remote Command, see [“View/Display” on page 1206](#).

### Slot Phase Measurement

There are two windows, the Phase Error window (upper) and the Metrics window (lower).





Phase Error window

Marker Operation	Yes for all traces
Corresponding Trace	yellow – Chip phase error trace from the reference phase (n=7) light blue – Chip phase error best-fit line (n=8) violet – Phase Discontinuity line

Metrics window

Name	Corresponding Results	Resolution
Number of slots	n=1 1st Number of slots found in the captured data. (In case of PRACH Power measurement, it always returns 0.)	nnn

Power Control Measurement  
View/Display

Name	Corresponding Results	Resolution
Slot	None Count up from 1 to Number of slots.	nnn:
Phase Disc	n=9 Slot phase discontinuity from the previous slot. (Phase difference between the end of the previous slot and the beginning of the current slot.)	nnn.nn degrees
Phase	n=10 Slot phase discontinuity from the previous slot. (Phase difference between the end of the previous slot and the beginning of the current slot.)	nnn.nn degrees
RMS EVM	n=11 RMS EVM of slots based on the best-fit line excluding 25us at the beginning and the end of the slot.	nn.nn %
RMS Magnitude Error	n=12 RMS magnitude Error of the slot. It is an element of RMS EVM of the slot.	nnn.nn degrees
RMS Phase Error	n=13 RMS Phase Error of the slot. It is an element of RMS EVM of the slot.	nnn.nn degrees
IQ Origin Offset	n=14 IQ Origin offset of the slot. It is an element of RMS EVM of the slot.	nnn.nn dB
Frequency Error	n=15 Frequency Error of the best-fit line for slots excluding 25 us at the beginning and the end of the slot.  It also includes the frequency error of the reference frequency that the measurement algorithm determines for synchronization.	nnnn.nn Hz

Key Path	<b>View/Display</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00
Help Map ID	16095

## Slot Number

Chooses how the measurement results are shown. The following choices are available:

Rel	The Slot column of the measurement results shows relative slot number to the beginning of the captured data. In this case, the slot number always begins with 1.
Abs	The Slot column shows absolute slot number determined by scrambling code. In this case, the range of slot number is 0 to 14.

The Slot Number menu key is only active when Meas Type is Slot Phase. Otherwise, the menu key is grayed out.

Key Path	<b>View/Display, Display</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:WINDow:TEXT:SNUMber RELative ABSolute :DISPlay:PCONtrol:WINDow:TEXT:SNUMber?
Example	DISP:PCON:WIND:TEXT:SNUM REL DISP:PCON:WIND:TEXT:SNUM?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	The Slot Number menu key is active when Meas Type is Slot Phase. Otherwise, the menu key is grayed out.
Preset	REL
State Saved	Saved in instrument state.
Range	Rel Abs
Initial S/W Revision	Prior to A.02.00
Help Map ID	16013

## Chip Phase Trace

Toggles the chip-by-chip phase trace (yellow trace) On and Off.

Key Path	<b>View/Display, Display</b>
Mode	WCDMA
<b>Remote Command</b>	:DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:CPHase[:STATe] ] ON OFF 1 0 :DISPlay:PCONtrol:VIEW[1]:WINDow[1]:TRACe:CPHase[:STATe] ]?

Power Control Measurement  
View/Display

Example	DISP:PCON:VIEW:WIND:TRAC:CPH ON DISP:PCON:VIEW:WIND:TRAC:CPH?
Notes	You must be in the W-CDMA mode to use this command. Use INSTRUMENT:SElect to set the mode.
Dependencies	This key is grayed out when selected Measurement type is not Slot Phase.
Preset	OFF
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	16014

### Scroll

Accesses a menu of functions that enable you to navigate through the measurement results table.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00
Help Map ID	16075

### Prev Page

Moves one page back to the previous page of the measurement results.

Key Path	<b>View/Display, Display, Scroll</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00
Help Map ID	16015

### Next Page

Moves one page forward to the next page of the measurement results.

Key Path	<b>View/Display, Display, Scroll</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00
Help Map ID	16016

### Scroll Up

Moves one line up from the current line of the measurement results each time the key is pressed.

Key Path	<b>View/Display, Display, Scroll</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00
Help Map ID	16017

### Scroll Down

Moves one line down from the current line of the measurement results each time the key is pressed.

Key Path	<b>View/Display, Display, Scroll</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00
Help Map ID	16018

### First Page

Moves from the current page to the first page of the measurement results.

Key Path	<b>View/Display, Display, Scroll</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00
Help Map ID	16019

### Last Page

Moves from the current page to the last page of the measurement results.

Key Path	<b>View/Display, Display, Scroll</b>
Mode	WCDMA
Initial S/W Revision	Prior to A.02.00
Help Map ID	16020



The quadrature phase shift keying (QPSK) error vector magnitude (EVM) measurement is a measure of phase and amplitude modulation quality that relates the performance of the actual signal compared to an ideal signal as a percentage, as calculated over the course of the ideal constellation. These phase and frequency errors are measures of modulation quality for the W-CDMA (3GPP) system, and can be quantified through QPSK EVM measurements. For measurement results and views, see [“View/Display” on page 1276](#).

This topic contains the following sections:

[“Measurement Commands for QPSK EVM” on page 1219](#)

[“Remote Command Results for QPSK EVM Measurement” on page 1219](#)

## Measurement Commands for QPSK EVM

The general functionality of CONFigure, FETCh, MEASure, and READ are described at the beginning of this section. See the SENSE:EVMQpsk commands for more measurement related commands.

```
:CONFigure:EVMQpsk
```

```
:CONFigure:EVMQpsk:NDEFault
```

```
:FETCh:EVMQpsk[n]?
```

```
:READ:EVMQpsk[n]?
```

```
:MEASure:EVMQpsk[n]?
```

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1575](#).

## Remote Command Results for QPSK EVM Measurement

n	Results Returned
0	Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts.

<p>not specified or n = 1</p>	<p>Returns the following 11 scalar results:</p> <p>RMS EVM is a floating point number (in percent) of EVM over the entire measurement area.</p> <p>RMS EVM maximum is the maximum RMS EVM over the average counts.</p> <p>Peak EVM is a floating point number (in percent) of peak EVM in the measurement area.</p> <p>Peak EVM maximum is the maximum peak EVM over the average counts.</p> <p>Magnitude Error is a floating point number (in percent) of averaged magnitude error over the entire measurement area.</p> <p>Magnitude Error maximum is a floating point number over the average counts.</p> <p>Phase Error is a floating point number (in degrees) of the averaged phase error over the entire measurement area.</p> <p>Phase Error maximum is the maximum phase error over the average counts.</p> <p>Frequency Error is a floating point number (in Hz) of the frequency error in the measured signal.</p> <p>Frequency Error maximum is the maximum frequency error over the average counts.</p> <p>I/Q Origin Offset is a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin.</p>
<p>2</p>	<p>EVM trace – returns a series of floating point numbers (in percent) that represent each sample in the EVM trace. The first number is the symbol 0 decision point. There are X points per symbol (<math>X = \text{points/chip}</math>). Therefore, the decision points are at 0, <math>1 * X</math>, <math>2 * X</math>, and so on.</p>
<p>3</p>	<p>Magnitude error trace – returns a series of floating point numbers (in percent) that represent each sample in the magnitude error trace. The first number is the symbol 0 decision point. There are X points per symbol (<math>X = \text{points/chip}</math>). Therefore, the decision points are at 0, <math>1 * X</math>, <math>2 * X</math>, ...</p>
<p>4</p>	<p>Phase error trace – returns a series of floating point numbers (in percent) that represent each sample in the phase error trace. The first number is the symbol 0 decision point. There are X points per symbol (<math>X = \text{points/chip}</math>). Therefore, the decision points are at 0, <math>1 * X</math>, <math>2 * X</math>, ...</p>
<p>5</p>	<p>Corrected measured trace – returns a series of floating point numbers that alternately represent I and Q pairs of the corrected measured trace. The magnitude of each I and Q pair are normalized to 1.0. The first number is the I sample of symbol 0 decision point and the second number is the Q sample of symbol 0 decision point. There are X points per symbol (<math>X = \text{points/chip}</math>). Therefore, the series of numbers is:</p> <p>1st number = I of the symbol 0 decision point</p> <p>2nd number = Q of the symbol 0 decision point</p> <p>...</p> <p><math>(2 * X) + 1</math> number = I of the symbol 1 decision point</p> <p><math>(2 * X) + 2</math> number = Q of the symbol 1 decision point</p> <p>...</p> <p><math>(2 * X) * N + 1</math> th number = I of the symbol N decision point</p> <p><math>(2 * X) * N + 2</math> th number = Q of the symbol N decision point</p>



Key Path	<b>Meas</b>
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale

Accesses the AMPTD Y Scale menu that allows you to set the desired vertical scale and associated settings for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value

Enables you to set the absolute power reference value. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value (Magnitude Error Window)

Sets the absolute power reference value in the magnitude error window.

Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel ?
Example	DISP:EVMQ:VIEW2:WIND:TRAC:Y:RLEV 90 DISP:EVMQ:VIEW2:WIND:TRAC:Y:RLEV?
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result. When the value is set manually, Auto Scaling automatically changes to Off.
Preset	0.0
State Saved	Saved in instrument state.
Min	-500
Max	500
Initial S/W Revision	Prior to A.02.00

**Ref Value (Phase Error Window)**

Sets the absolute power reference value in the phase error window.

Key Path	AMPTD Y Scale
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISP:ay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALE]:RLEVel <real>  :DISP:ay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALE]:RLEVel?
Example	DISP:EVMQ:VIEW2:WIND2:TRAC:Y:RLEV 90 DISP:EVMQ:VIEW2:WIND2:TRAC:Y:RLEV?
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When the value is set manually, Auto Scaling automatically changes to Off.
Preset	0.0
State Saved	Saved in instrument state.
Min	-36000
Max	36000
Initial S/W Revision	Prior to A.02.00

**Ref Value (EVM Window)**

Sets the absolute power reference value in the EVM window.

Key Path	AMPTD Y Scale
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISP:ay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALE]:RLEVel <real>  :DISP:ay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALE]:RLEVel?
Example	DISP:EVMQ:VIEW2:WIND3:TRAC:Y:RLEV 120 DISP:EVMQ:VIEW2:WIND3:TRAC:Y:RLEV?
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When the value is set manually, Auto Scaling automatically changes to Off.
Preset	0.0
State Saved	Saved in instrument state.
Min	-500
Max	500

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back text that describes the total attenuator value.

See “Attenuation” on page 1406 under the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value. Refer to “Range” on page 1415 in the “Common Measurement Functions” section for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.03.00

### Scale/Div

Sets the units per division of vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Scale/Div (Magnitude Error Window)

Sets the sensitivity measurement result in the magnitude error window.

Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVis ion <real>  :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVis ion?

Example	DISP:EVMQ:VIEW2:WIND:TRAC:Y:PDIV 25 DISP:EVMQ:VIEW2:WIND:TRAC:Y:PDIV?
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When the user sets a value manually, Auto Scaling automatically changes to Off.
Preset	1
State Saved	Saved in instrument state.
Min	0.1
Max	50
Initial S/W Revision	Prior to A.02.00

**Scale/Div (Phase Error Window)**

Sets the sensitivity measurement result in the phase error window.

Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALE]:PDIVisio n <real>  :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALE]:PDIVisio n?
Example	DISP:EVMQ:VIEW2:WIND2:TRAC:Y:PDIV 25.5 DISP:EVMQ:VIEW2:WIND2:TRAC:Y:PDIV?
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When the user sets a value manually, Auto Scaling automatically changes to Off.
Preset	0.5
State Saved	Saved in instrument state.
Min	0.1
Max	360
Initial S/W Revision	Prior to A.02.00

**Scale/Div (Evm Window)**

Sets the sensitivity measurement result in the EVM window.

Key Path	<b>AMPTD Y Scale</b>
----------	----------------------

Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVisio n <real>  :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVisio n?
Example	DISP:EVMQ:VIEW2:WIND3:TRAC:Y:PDIV 20 DISP:EVMQ:VIEW2:WIND3:TRAC:Y:PDIV?
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When the user sets a value manually, Auto Scaling automatically changes to Off.
Preset	0.5
State Saved	Saved in instrument state.
Min	0.1
Max	50
Initial S/W Revision	Prior to A.02.00

### Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See AMPTD Y Scale, “[Presel Center](#)” on page 1421 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

### Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See AMPTD Y Scale, “[Preselector Adjust](#)” on page 1422 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## μW Path Control

The **μW Path Control** functions include the **μW Preselector Bypass** (Option MPB) and **Low Noise Path** (Option LNP) controls in the High Band path circuits.

See [“μW Path Control” on page 1430](#) under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	A.04.00

## Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, [“Internal Preamp” on page 1435](#) in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display. Changing the reference position does not change the reference level value. This function can be used for all three QPSK EVM measurement results graphs.

Key Path	<b>AMPTD Y Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow[1]   2   3:TRACe:Y[:SCALE]:RPOStion TOP CENTer BOTTom  :DISPlay:EVMQpsk:VIEW2:WINDow[1]   2   3:TRACe:Y[:SCALE]:RPOStion?
Example	DISP:EVMQ:VIEW2:WIND3:TRAC:Y:RPOS TOP DISP:EVMQ:VIEW2:WIND3:TRAC:Y:RPOS?
Notes	Subop codes denote: 1: Mag error graph 2: Phase error graph 3: EVM error graph
Couplings	When Auto Scaling is On and this parameter is changed, Ref Value changes to adjust the trace to one that is most suitable for the window.

QPSK EVM Measurement  
**AMPTD Y Scale**

Preset	CENTer CENTer BOTTom
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Initial S/W Revision	Prior to A.02.00

### Auto Scaling

Toggles the Auto Scaling function between On and Off. Upon pressing the **Restart** front-panel key, this function automatically determines the scale per division and reference values based on the measurement results.

Key Path	AMPTD Y Scale
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow[1]   2   3 :TRACe:Y[:SCALE]:COUPlE ON OFF 1 0 :DISPlay:EVMQpsk:VIEW2:WINDow[1]   2   3 :TRACe:Y[:SCALE]:COUPlE?
Example	DISP:EVMQ:VIEW2:WIND:TRAC:Y:COUP ON DISP:EVMQ:VIEW2:WIND:TRAC:Y:COUP?
Couplings	When Auto Scaling is On and the <b>Restart</b> front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00



## **Auto Couple**

See “[Auto Couple](#)” on page 1437 in the section "Common Measurement Functions" for more information.

## BW

Accesses a menu of functions that enable you to specify and control the Info BW.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Info BW

Activates the **Info BW** function, which enables you to manually set the information bandwidth of the analyzer. This is used to set the hardware filter of the ADC.

Key Path	<b>BW</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	[ :SENSe]:EVMQpsk:BANDwidth[:RESolution] <freq> [ :SENSe]:EVMQpsk:BANDwidth[:RESolution]?
Example	EVMQ:BAND 1 kHz EVMQ:BAND?
Notes	The values shown in this table reflect the conditions after a Mode Preset.
Preset	WCDMA, C2K: 6 MHz CDMA1xEVDO: 1.5MHz
State Saved	Saved in instrument state.
Min	1kHz
Max	Hardware Dependent: RF Input: No Option = 10 MHz WB (25 MHz or wider) = Hardware Option Limit I/Q Input (for I+jQ) No Option = 20 MHz OptionB25 = 50 MHz
Backwards Compatibility SCPI	[:SENSe]:EVMQpsk:BWIDth[:RESolution]
Modified at S/W Revision	A.06.00
Initial S/W Revision	Prior to A.02.00

## Info BW Control

Accesses a menu that enables you to select either A Gaussian or Flat Top filter.

Key Path	<b>BW</b>
Initial S/W Revision	Prior to A.02.00

## Filter Type

Selects the type of bandwidth filter that is used. The choices are Gaussian or Flat top.

Key Path	<b>BW, RBW Control</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	[ :SENSe ] :EVMQpsk :BANDwidth :SHAPE GAUSSian   FLATtop [ :SENSe ] :EVMQpsk :BANDwidth :SHAPE?
Example	EVMQ:BAND:SHAP GAUS EVMQ:BAND:SHAP?
Preset	FLATtop
State Saved	Saved in instrument state.
Range	Gaussian FlatTop
Backwards Compatibility SCPI	[ :SENSe ] :EVMQpsk :BWIDth :SHAPE
Initial S/W Revision	Prior to A.02.00

## **Cont**

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451 in the section "Common Measurement Functions" for more information.

---

## **FREQ Channel**

See [“FREQ/Channel” on page 1453](#) in the section "Common Measurement Functions" for more information.

## **Input/Output**

See “[Input/Output](#)” on page 1459 in the section “Common Measurement Functions” for more information.

## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. See “[Marker](#)” on page 1531 in “Common Measurement Functions” for more information.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Type

Sets the marker control mode. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, reference value of the selected marker appears on the Active Function area. It is:

**Marker Chip Value**, at I/Q Polar

**Marker X Axis Value**, at EVM, Phase Error and Mag Error

Default Active Function: the active function for the selected marker’s current control mode. If the current control mode is Off, there is no active function and the active function is turned off.

Key Path	<b>Marker</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:M ODE POSITION DELTA OFF  :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:M ODE?
Example	CALC:EVMQ:MARK:MODE POS CALC:EVMQ:MARK:MODE?

Notes	<p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, reference value of the selected marker appears on the Active Function area. It is:</p> <p><b>Marker Chip Value</b>, at I/Q Polar</p> <p><b>Marker X Axis Value</b>, at EVM, Phase Error and Mag Error</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>If the selected marker's trace is I/Q Polar, Delta is not supported. If DELTA is selected on the marker of the I/Q Polar, the command is ignored.</p>
Preset	OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

This parameter has different meaning between the cases where the marker trace is set to I/Q Polar and others. In the I/Q Polar Graph, X Axis Value is also the measured value and this command is query only.

Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	<pre>:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X &lt;real&gt; :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X ?</pre>
Example	<pre>CALC:EVMQ:MARK3:X 1280 CALC:EVMQ:MARK3:X?</pre>



Notes	<p>If no suffix is sent, it uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” is generated. If the specified marker is Fixed and a Marker Function is on, error –221 “Settings conflict; cannot adjust Fixed marker while Marker Function is on” is generated.</p> <p>The query returns the marker’s absolute X Axis value if the control mode is <b>Normal</b>, or the offset from the marker’s reference marker if the control mode is <b>Delta</b>. The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b>, seconds for <b>Period</b> and <b>Time</b>. If the marker is <b>Off</b> the response is not a number.</p> <p>This parameter has different meaning between the cases where the marker trace is set to I/Q Polar and others. In the I/Q Polar Graph, X Axis Value is also the measured value and the command is query only.</p>
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query returns a Not A Number (NAN).
State Saved	No
Min	–9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

### Marker Chip Value (Remote Command only)

Sets the marker Chip value in the current marker for the trace of I/Q Polar. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a Chip value if the control mode is **Normal** or **Delta**.

In other traces than I/Q Polar, this command is meaningless and ignored.

Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	<pre>:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:C HIP &lt;real&gt;</pre> <pre>:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:C HIP?</pre>
Example	<pre>CALC:EVMQ:MARK3:X 0</pre> <pre>CALC:EVMQ:MARK3:X?</pre>

Notes	<p>If no suffix is sent it uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” is generated. If the specified marker is Fixed and a Marker Function is on, error –221 “Settings conflict; cannot adjust Fixed marker while Marker Function is on” is generated.</p> <p>The query returns the marker’s absolute X Axis value if the control mode is <b>Normal</b>, or the offset from the marker’s reference marker if the control mode is <b>Delta</b>. The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b>, seconds for <b>Period</b> and <b>Time</b>. If the marker is <b>Off</b> the response is Not A Number.</p> <p>This parameter is only available in the case where the marker trace is set to I/Q Polar.</p>
Preset	0
State Saved	No
Min	–9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

If the Marker Trace is set to I/Q Polar (POLar), this command provides no effects.

Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	<pre>:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition &lt;real&gt;</pre> <pre>:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition?</pre>
Example	<pre>CALC:EVMQ:MARK:X:POS 0.0</pre> <pre>CALC:EVMQpsk:MARK10:X:POS?</pre>

Notes	<p>If the specified marker is Fixed and a Marker Function is on, error –221 “Settings conflict; cannot adjust Fixed marker while Marker Function is on” is generated.</p> <p>The query returns the marker’s absolute X Axis value in trace points if the control mode is <b>Normal</b>, or the offset from the marker’s reference marker in trace points if the control mode is <b>Delta</b>. The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points (see “Fractional Trace Points”, above). If the marker is <b>Off</b> the response is not a number.</p> <p>This command is not available when Marker Trace of the selected marker (:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?) is set to POLar. In this case, this command is ignored.</p>
Preset	After a preset, all Markers are turned OFF, so Marker X Axis Value query returns a Not A Number (NAN).
State Saved	No
Min	–9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

### Marker Y Axis Value (Query Only)

Returns the Marker Y Axis value, in the current marker Y Axis unit.

Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:EVMQ:MARK11:Y?
Notes	The query returns the marker Y-axis result, if the control mode is <b>Normal</b> or <b>Delta</b> . If the marker is <b>Off</b> , the response is not a number.
Preset	Result dependant on markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCtion:RESuIt?
Initial S/W Revision	Prior to A.02.00

### Marker Properties

Accesses a menu of functions that enable you to specify and control markers for the current measurement.

Key Path	<b>Marker</b>
----------	---------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker, Properties</b>
Initial S/W Revision	Prior to A.02.00

### Relative To

Selects the marker the selected marker will be relative to (its reference marker).

Key Path	<b>Marker, Properties</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :R EFerence <integer>  :CALCulate:EVMQpsk:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :R EFerence?
Example	CALC:EVMQ:MARK:REF 4 CALC:EVMQ:MARK:REF?
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."  When queried, a single value is returned (the specified marker numbers relative marker).
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Initial S/W Revision	Prior to A.02.00

### Marker Trace

Assigns the specified marker to the designated trace.

Key Path	<b>Marker</b>
Mode	WCDMA, C2K, 1xEVDO

<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe POLar EVM PERRor MERRor :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?
Example	CALC:EVMQ:MARK:TRAC MERR CALC:EVMQ:MARK:TRAC?
Notes	Assigns the specified marker to the designated trace.
Preset	EVM
State Saved	Saved in instrument state.
Range	I/Q Polar EVM Phase Error Mag Error
Initial S/W Revision	Prior to A.02.00

## Couple Marker

Toggles the state of the markers to be coupled On or Off. When this function is true (On), moving any marker causes an equal X-axis movement of every other marker except those located to the polar trace, and Chip value of the marker located to the polar trace, which is not **Off**, including **Fixed** markers. "Equal X Axis movement" refers to the difference between each marker's X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units). This may result in markers going off screen

See Couple Marker in the "Marker" section for more information.

<b>Key Path</b>	<b>Marker</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer:COUPlE[:STATe] ON OFF 1 0 :CALCulate:EVMQpsk:MARKer:COUPlE[:STATe]?
Example	CALC:EVMQ:MARK:COUP ON CALC:EVMQ:MARK:COUP?
Notes	In QPSK EVM, this marker behaves specially. Coupled values are "Chips" of the markers located to the polar trace, and "X" of the markers located to the other traces than the polar trace.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

## All Markers Off

Turns off all markers.

Key Path	<b>Marker</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer:AOFF
Example	CALC:EVMQ:MARK:AOFF
Initial S/W Revision	Prior to A.02.00

---

## Marker Function

There is no Marker Function functionality supported in QPSK EVM. This front panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## Marker To

There is no Marker To functionality supported in QPSK EVM. This front panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00



---

## **Meas**

See [“Meas” on page 1575](#) in the section "Common Measurement Functions" for more information.

## Meas Setup

Displays the setup menu for the currently selected measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Avg/Hold Number

Specifies the number of N averages that will be used for the measurement. After the specified number (average counts) have been averaged, the averaging mode (termination control) setting determines the averaging action.

Key Path	Meas Setup
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	[ :SENSe] :EVMQpsk:AVERage:COUNT <integer> [ :SENSe] :EVMQpsk:AVERage:COUNT? [ :SENSe] :EVMQpsk:AVERage [ :STATe] OFF ON 0 1 [ :SENSe] :EVMQpsk:AVERage [ :STATe] ?
Example	EVMQ:AVER:COUN 1001 EVMQ:AVER:COUN? EVMQ:AVER OFF EVMQ:AVER?
Preset	10 ON
State Saved	Saved in instrument state.
Min	1
Max	10000
Initial S/W Revision	Prior to A.02.00

### Avg Mode

Toggles the averaging mode between Exp (exponential) and Repeat. This selection only affects the averaging result after the number of N averages is reached. The N is set using the Avg/Hold Number key.

Exponential	Each successive data acquisition after the average count is reached, is exponentially weighted and then combined with the existing average.
-------------	---

Repeat	After reaching the average count, the averaging is reset and a new average is started.
--------	--

Key Path	Meas Setup
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	[ :SENSE] :EVMQpsk:AVERage:TCONtrol EXPonential   REPEAT [ :SENSE] :EVMQpsk:AVERage:TCONtrol?
Example	EVMQ:AVER:TCON REP EVMQ:AVER:TCON?
Notes	Selects the type of termination control used for averaging. This determines the averaging action after the specified number of frames (average count) is reached.  Exponential - Each successive data acquisition after the average count is reached, is exponentially weighted and combined with the existing average.  Repeat - After reaching the average count, the averaging is reset and a new average is started.
Preset	REPEAT
State Saved	Saved in instrument state.
Range	Exp Repeat
Initial S/W Revision	Prior to A.02.00

## Meas Interval

Sets the length of the measurement interval (number of data points) that are used.

Key Path	Meas Setup
Mode	WCDMA, C2K
<b>Remote Command</b>	[ :SENSE] :EVMQpsk:SWEep:POINts <integer> [ :SENSE] :EVMQpsk:SWEep:POINts?
Example	EVMQ:SWE:POIN 1001 EVMQ:SWE:POIN?
Preset	WCDMA: 2560 C2K: 512
State Saved	Saved in instrument state.
Min	128
Max	WCDMA: 5120 C2K: 1536

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Limits

Accesses a menu that enables you to change the RMS EVM and Frequency Error limits settings.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

## RMS EVM

Sets the limit for the RMS EVM measurement. This value is used to judge whether the measurement passes or fails the RMS EVM limit.

Key Path	<b>Meas Setup, Limits</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:LIMit:RMS <real> :CALCulate:EVMQpsk:LIMit:RMS?
Example	CALC:EVMQ:LIM:RMS 50 CALC:EVMQ:LIM:RMS?
Notes	Sets the limits of RMS EVM which is used to judge the result of RMS EVM passes or fails.  If a measured RMS EVM value is not larger than the limit value, the result is PASS.  Otherwise, the result is FAIL.  You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode.
Preset	WCDMA: 17.5 C2K: 100.0 1xEVDO: 100.0
Min	0.0
Max	100.0
Initial S/W Revision	Prior to A.02.00

## Freq Error

Sets the limit, in Hz, for the frequency error measurement. This value is used to judge whether the measurement passes or fails the Frequency Error limit.

Key Path	<b>Meas Setup, Limits</b>
----------	---------------------------

Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:LIMit:FERRor <freq> :CALCulate:EVMQpsk:LIMit:FERRor?
Example	CALC:EVMQ:LIM:FERR 100 CALC:EVMQ:LIM:FERR?
Notes	Sets the limits of the Frequency Error, which is used to judge the result of the Frequency Error, whether it passes or fails.  If the measured Frequency Error value is not larger than the limit value, the result is PASS. Otherwise, the result is FAIL.
Preset	100.0
State Saved	Saved in instrument state.
Min	0.0
Max	300000
Initial S/W Revision	Prior to A.02.00

### Meas Offset & Interval

This key is active only in 1xEVDO mode.

Allows you to measure the signal occupying different time domain respectively, such as the pilot in first half slot.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

### Meas Offset

Specifies how long after the data capture the signal is observed.

Key Path	<b>Meas Setup, Meas Offset &amp; Interval</b>
Mode	1xEVDO
<b>Remote Command</b>	[ :SENSe ] :EVMQpsk:MEAS:OFFSet <integer> [ :SENSe ] :EVMQpsk:MEAS:OFFSet?
Example	EVMQ:MEAS:OFFS 464 EVMQ:MEAS:OFFS?
Couplings	Coupled with Pre-Defined Ofs/Intvl. Changes according to the selected type. Meas Offset + Meas Interval <=2048
Preset	400 chips
State Saved	Saved in instrument state.

QPSK EVM Measurement  
**Meas Setup**

Min	0 chips
Max	2047 chips
Initial S/W Revision	Prior to A.02.00

**Meas Interval**

Specifies how long the signal is observed.

Key Path	Meas Setup, Meas Offset & Interval
Mode	1xEVDO
<b>Remote Command</b>	[ :SENSe] :EVMQpsk:MEAS:LENGth < integer > [ :SENSe] :EVMQpsk:MEAS:LENGth?
Example	EVMQ:MEAS:LENG 96 EVMQ:MEAS:LENG?
Couplings	Coupled with Pre-Defined Ofs/Intvl. Changes according to the selected type. Meas Offset + Meas Interval <=2048
Preset	224 chips
State Saved	Saved in instrument state.
Min	1 chips
Max	2048 chips
Initial S/W Revision	Prior to A.02.00

**Spectrum**

Toggles the spectrum function between Normal and Invert. If set to Invert, this function conjugates the spectrum. It is equivalent to taking the negative of the quadrature component in demodulation.

Key Path	Meas Setup
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	[ :SENSe] :EVMQpsk:SPECTrum NORMal   INVert [ :SENSe] :EVMQpsk:SPECTrum?
Example	EVMQ:SPEC NORM EVMQ:SPEC?
Preset	NORMal
State Saved	Saved in instrument state.
Range	Normal Invert
Initial S/W Revision	Prior to A.02.00

## Advanced

Accesses a menu of functions that enable you to set up more specific parameters for the measurement. These parameters include:

- EVM Result I/Q Offset
- IF Gain
- RRC Filter Control
- Filter Alpha
- Chip Rate

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

### EVM Result I/Q Offset

Toggles the I/Q Offset to be included or excluded in the measurement result. When it is set as "Standard" (ON), EVM is calculated without any compensation of I/Q offset. When it is set as "Exclude" (OFF), I/Q offset is compensated.

Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:IQOffset:INCLude OFF ON 0 1 :CALCulate:EVMQpsk:IQOffset:INCLude?
Example	CALC:EVMQ:IQOF:INCL OFF CALC:EVMQ:IQOF:INCL?
Preset	ON
State Saved	Saved in instrument state.
Range	Std Exclude
Initial S/W Revision	Prior to A.02.00

### RRC Filter Control

Allows you to change the status (ON/OFF) of the Root Raised Cosine (RRC) filter. This ON/OFF state change involve measurement restart.

Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA
<b>Remote Command</b>	[ :SENSe] :EVMQpsk:FILTer [:RRC] [:STATe] OFF ON 0 1 [ :SENSe] :EVMQpsk:FILTer [:RRC] [:STATe] ?

QPSK EVM Measurement  
**Meas Setup**

Example	EVMQ:FILT ON EVMQ:FILT?
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

**Filter Alpha**

Sets the alpha value for the root raised cosine (RRC) filter. This key is available only in WCDMA mode and while employing an RRC filter.

Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	[ :SENSE ] :EVMQpsk:FILTer:ALPHa <real> [ :SENSE ] :EVMQpsk:FILTer:ALPHa?
Example	EVMQ:FILT:ALPH 0.5 EVMQ:FILT:ALPH?
Notes	This parameter is available only in the WCDMA mode. In other modes, this key is invisible.
Preset	0.22
State Saved	Saved in instrument state.
Min	0.01
Max	0.5
Backwards Compatibility SCPI	[ :SENSE ] :EVMQpsk:ALPHa
Initial S/W Revision	Prior to A.02.00

**Chip Rate**

Changes the chip rate for the measurement.

Key Path	<b>Meas Setup, Advanced</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	[ :SENSE ] :EVMQpsk:CRATe <freq> [ :SENSE ] :EVMQpsk:CRATe?
Example	EVMQ:CRAT 2.5 MHz EVMQ:CRAT?



Notes	Enter a frequency value to set the chip rate.
Preset	WCDMA: 3.84 MHz C2K: 1.2288 MHz 1xEVDO: 1.2288 MHz
State Saved	Saved in instrument state.
Min	100 kHz
Max	20 MHz
Initial S/W Revision	Prior to A.02.00

### IF Gain

In order to take full advantage of the RF dynamic range of the analyzer, we will offer a switched IF amplifier with approximately 10 dB of gain. When it can be turned on without an overload, the dynamic range is always better with it on than off. The IF Gain key can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

Key Path	<b>Meas Setup, Advanced</b>
Initial S/W Revision	Prior to A.02.00

### IF Gain Auto

Activates the auto rules for IF Gain

Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	[ :SENSe] :EVMQpsk :IF :GAIN :AUTO [ :STATe] ON OFF 1 0 [ :SENSe] :EVMQpsk :IF :GAIN :AUTO [ :STATe] ?
Example	EVMQ : IF : GAIN : AUTO OFF EVMQ : IF : GAIN : AUTO ?
Notes	This only applies to the RF input. It does not apply to baseband I/Q input.
Couplings	'When either the auto attenuation works (for example, with electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed as following rule.  Auto sets IF Gain to On under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is -20 dBm or lower. For other settings, Auto sets IF Gain to Off.

QPSK EVM Measurement  
**Meas Setup**

Preset	ON
State Saved	Saved in instrument state.
Range	Auto Man
Initial S/W Revision	Prior to A.02.00

**IF Gain State**

Selects the range of IF gain.

Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	[ :SENSe] :EVMQpsk :IF :GAIN [ :STATe] ON   OFF   1   0 [ :SENSe] :EVMQpsk :IF :GAIN [ :STATe] ?
Example	EVMQ:IF:GAIN ON EVMQ:IF:GAIN?
Notes	This only applies to the RF input. It does not apply to baseband I/Q input. where ON = high gain OFF = low gain
Preset	OFF
State Saved	Saved in instrument state.
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)
Readback Text	Low Gain High Gain
Initial S/W Revision	Prior to A.02.00

**Meas Preset**

Restores all the measurement parameters to their default values.

Key Path	<b>Meas Setup</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CONFIgure:EVMQpsk
Example	CONF:EVMQ
Notes	Restore all defaults of parameters.
Initial S/W Revision	Prior to A.02.00

---

## **Mode**

See [“Mode” on page 1635](#) in the section "Common Measurement Functions" for more information.

## **Mode Setup**

See “[Mode Setup](#)” on page 1651 in the section "Common Measurement Functions" for more information.

## Peak Search

Accesses a menu that enables you to control the peak search function and places a marker on the trace point with highest peak.

Key Path	<b>Front panel key</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example	CALC:EVMQ:MARK2:MAX
Notes	This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored.
Initial S/W Revision	Prior to A.02.00

## Next Peak

Moves the selected marker to the peak that has the next highest amplitude that is less than the marker's current value.

Key Path	<b>Peak Search</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT
Example	CALC:EVMQ:MARK2:MAX:NEXT
Notes	This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored.
Initial S/W Revision	Prior to A.02.00

## Next Pk Right

Moves the selected marker to the nearest peak to the right of the current marker that meets all enabled peak criteria.

Key Path	<b>Peak Search</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT
Example	CALC:EVMQ:MARK2:MAX:RIGHT

Notes	This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored.
Initial S/W Revision	Prior to A.02.00

### Next Pk Left

Moves the selected marker to the nearest peak to the left of the current marker that meets all enabled peak criteria.

Key Path	<b>Peak Search</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :M AXimum:LEFT
Example	CALC:EVMQ:MARK2:MAX:LEFT
Notes	This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored.
Initial S/W Revision	Prior to A.02.00

### Marker Delta

Sets the control mode for the selected marker to **Delta** mode. This menu key performs the same function as the Delta 1-of-N selection key in the Marker menu. It is duplicated in the Peak Search Menu to allow you the convenience to simultaneously perform a peak search and change the marker control mode to Delta without having to access two separate menus.

Key Path	<b>Peak Search</b>
Initial S/W Revision	Prior to A.02.00

### Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest value on the y-axis.

Key Path	<b>Peak Search</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :P TPeak
Example	CALC:EVMQ:MARK:PTP
Notes	This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored.
Couplings	This key is not available (key is grayed out) when <b>Coupled Markers</b> is on.

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Min Search

Moves the selected marker to the minimum value on the y-axis of the current trace.

Key Path	<b>Peak Search</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum
Example	CALC:EVMQ:MARK:MIN
Notes	This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored.
Initial S/W Revision	Prior to A.02.00

## **Recall**

See [“Recall” on page 189](#) in the section "Common Measurement Functions" for more information.



---

## **Restart**

See [“Restart” on page 1671](#) in the section "Common Measurement Functions" for more information.

## **Save**

See “[Save](#)” on page 205 in the section "Common Measurement Functions" for more information.

---

## Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1677 in the section "Common Measurement Functions" for more information.

## **Source**

See “[Source](#)” on page 1679 in the section "Common Measurement Functions" for more information.



Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**Ref Value (X Scale, Phase Error Window)**

Sets the chip reference value on the horizontal axis in the phase error window.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel <real>  :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel?
Example	DISP:EVMQ:VIEW2:WIND2:TRAC:X:RLEV 1001 DISP:EVMQ:VIEW2:WIND2:TRAC:X:RLEV?
Notes	This key is for control of the reference value of the X scale of the focused window of the selected view.
Couplings	When this parameter has been set, XScaleAutoMag turns off.
Preset	0
State Saved	Saved in instrument state.
Min	-5000000
Max	5000000
Initial S/W Revision	Prior to A.02.00

**Ref Value (X Scale, EVM Window)**

Sets the chip reference value on the horizontal axis in the EVM window.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel <real>  :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel?
Example	DISP:EVMQ:VIEW2:WIND3:TRAC:X:RLEV 1001 DISP:EVMQ:VIEW2:WIND3:TRAC:X:RLEV?
Notes	This key is for control of the reference value of the X scale of the focused window of the selected view.  The mode must be in W-CDMA, 1xEVDO or cdma2000 to use this function. Use INSTRument:SElect to set this mode.
Couplings	When this parameter has been set, XScaleAutoEvm turns off.

Preset	0
State Saved	Saved in instrument state.
Min	-5000000
Max	5000000
Initial S/W Revision	Prior to A.02.00

### **X Scale/Div**

Sets the horizontal scale by changing a value per division.

Key Path	<b>SPAN X Scale</b>
Initial S/W Revision	Prior to A.02.00

### **Scale/Div (X Scale, Magnitude Error Window)**

Sets the horizontal scale by changing a chip value per division in the magnitude error window.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVis ion <real>  :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVis ion?
Example	DISP:EVMQ:VIEW2:WIND:TRAC:X:PDIV 1001 DISP:EVMQ:VIEW2:WIND:TRAC:X:PDIV?
Notes	This key is for Scale/Div control.
Couplings	When this parameter has been set, XScaleAutoMag turns off.
Preset	WCDMA : 256 C2K : 51.2 1xEVDO : 25.6
State Saved	Saved in instrument state.
Min	1
Max	500000
Initial S/W Revision	Prior to A.02.00

**Scale/Div (X Scale, Phase Error Window)**

Sets the horizontal scale by changing a chip value per division in the phase error window.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVisio n <real>  :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVisio n?
Example	DISP:EVMQ:VIEW2:WIND2:TRAC:X:PDIV 1001  DISP:EVMQ:VIEW2:WIND2:TRAC:X:PDIV?
Notes	This key is for Scale/Div control.
Couplings	When this parameter has been set, XScaleAutoPhase turns off.
Preset	WCDMA : 256  C2K : 51.2  1xEVDO : 25.6
State Saved	Saved in instrument state.
Min	1
Max	500000
Initial S/W Revision	Prior to A.02.00

**Scale/Div (X Scale, EVM Window)**

Sets the horizontal scale by changing a chip value per division in the EVM window.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVisio n <real>  :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVisio n?
Example	DISP:EVMQ:VIEW2:WIND3:TRAC:X:PDIV 1001  DISP:EVMQ:VIEW2:WIND3:TRAC:X:PDIV?
Notes	This key is for Scale/Div control.
Couplings	When this parameter has been set, XScaleAutoEvm turns off.



Preset	WCDMA : 256 C2K : 51.2 1xEVDO : 25.6
State Saved	Saved in instrument state.
Min	1
Max	500000
Initial S/W Revision	Prior to A.02.00

### X Ref Position

Sets the reference position of the X axis on the display. The reference position can be set to Left, Ctr (center) or Right.

Key Path	<b>SPAN X Scale</b>
Initial S/W Revision	Prior to A.02.00

### Ref Position (X Scale, Magnitude Error Window)

Sets the reference position of the X axis for the magnitude error result on the display.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSit ion LEFT CENTer RIGHT  :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSit ion?
Example	DISP:EVMQ:VIEW2:WIND:TRAC:X:RPOS CENT DISP:EVMQ:VIEW2:WIND:TRAC:X:RPOS?
Couplings	If X Scale Auto Mag is On and the parameter is changed, X Scale Ref Mag changes to automatically adjust the trace to one that is most suitable for the window.
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Center Right
Initial S/W Revision	Prior to A.02.00

### Ref Position (X Scale, Phase Error Window)

Sets the reference position of the X axis for the phase error result on the display.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
Remote Command	:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALE]:RPOSitio n LEFT CENTer RIGHT  :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALE]:RPOSitio n?
Example	DISP:EVMQ:VIEW2:WIND2:TRAC:X:RPOS RIGH  DISP:EVMQ:VIEW2:WIND2:TRAC:X:RPOS?
Couplings	If X Scale Auto Phase is On and the parameter is changed, X Scale Ref Phase changes to automatically adjust the trace to one that is most suitable for the window.
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Center Right
Initial S/W Revision	Prior to A.02.00

### Ref Position (X Scale, EVM Window)

Sets the X axis reference position in the EVM window.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
Remote Command	:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALE]:RPOSitio n LEFT CENTer RIGHT  :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALE]:RPOSitio n?
Example	DISP:EVMQ:VIEW2:WIND3:TRAC:X:RPOS RIGH  DISP:EVMQ:VIEW2:WIND3:TRAC:X:RPOS?
Couplings	If X Scale Auto EVM is On and the parameter is changed, X Scale Ref EVM changes to automatically adjust the trace to one that is most suitable for the window.
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Center Right
Initial S/W Revision	Prior to A.02.00

## X Auto Scaling

Determines the scale per division and reference value for the X axis based on the current measurement results.

Key Path	<b>SPAN X Scale</b>
Initial S/W Revision	Prior to A.02.00

### Auto Scaling (X Scale, Magnitude Error Window)

When Auto Scaling is On and the **Restart** front-panel key is pressed, this function automatically displays the scale per division and reference value results in the magnitude error window.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISP:lay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPlE ON OFF 0 1 :DISP:lay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPlE ?
Example	DISP:EVMQ:VIEW2:WIND:TRAC:X:COUP ON DISP:EVMQ:VIEW2:WIND:TRAC:X:COUP?
Notes	When On, the Scale/Div, Ref Value, and Ref Position are reset to the default values.  The mode must be W-CDMA, 1xEVDO or cdma2000 to use this function. Use :INSTrument:SELEctto set this mode.
Couplings	Upon pressing the <b>Restart</b> front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Scale Coupling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Auto Scaling (X Scale, Phase Error Window)

When Auto Scaling is On, upon pressing the **Restart** front-panel key, this function automatically displays the scale per division and reference value results in the phase error window.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO

QPSK EVM Measurement  
SPAN X Scale

<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPle ON OFF 0 1  :DISPPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPle?
Example	DISP:EVMQ:VIEW2:WIND2:TRAC:X:COUP OFF DISP:EVMQ:VIEW2:WIND2:TRAC:X:COUP?
Notes	When ON, the Scale/Div, Ref Value, and Ref Position are turned back to the default values.  The mode must be in W-CDMA, 1xEVDO or cdma2000 to use this function. Use :INSTRument:SElectto set this mode.
Couplings	Upon pressing the <b>Restart</b> front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Scale Coupling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

**Auto Scaling (X Scale, Evm Window)**

When Auto Scaling is On and the **Restart** front-panel key is pressed, this function automatically displays the scale per division and reference value results in the EVM window.

Key Path	<b>SPAN X Scale</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPle ON OFF 0 1  :DISPPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPle?
Example	DISP:EVMQ:VIEW2:WIND3:TRAC:X:COUP ON DISP:EVMQ:VIEW2:WIND3:TRAC:X:COUP?
Notes	When ON, the Scale/Div, Ref Value, and Ref Position are reset to the default values.  The mode must be in W-CDMA, 1xEVDO or cdma2000 to use this function. Use :INSTRument:SElectto set this mode.
Couplings	Upon pressing the <b>Restart</b> front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Scale Coupling automatically changes to Off.

Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

## Sweep/Control

Accesses a menu that enables you to pause and restart the measurement.

Key Path	<b>Front panel key</b>
Initial S/W Revision	Prior to A.02.00

## Pause

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to **Resume**. Pressing the **Resume** key resumes the measurement from the point it was at when paused. See [“Pause/Resume” on page 1698](#) in “Common Measurement Functions” section for more details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

---

## Trace/Detector

There is no Trace/Detector functionality supported in QPSK EVM. This front panel key displays a blank menu when pressed.

Key Path	Front Panel Key
Initial S/W Revision	Prior to A.02.00

---

## View/Display

Accesses a menu of functions that enable you to set up and control the display parameters for the current measurement.

Two views are available in this measurement, as described in the sections:

[“I/Q Measured Polar Graph” on page 1277](#)

[“I/Q Error View” on page 1284](#)

This topic contains the following sections:

[“View Selection by name \(Remote Command Only\)” on page 1276](#)

[“View Selection by number \(Remote Command only\)” on page 1276](#)

### View Selection by name (Remote Command Only)

Selects the format for the measurement results view.

Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW[:SElect] POLar ERRor :DISPlay:EVMQpsk:VIEW[:SElect]?
Example	DISP:EVMQ:VIEW ERR DISP:EVMQ:VIEW?
Couplings	Changing parameter of "ViewNum" (:DISPlay:EVMQpsk:VIEW:NSElect) also changes this parameter.
Preset	POLar
State Saved	Saved in instrument state.
Range	I/Q Measured Polar Vector I/Q Error
Initial S/W Revision	Prior to A.02.00

### View Selection by number (Remote Command only)

Displays the numeric values of the measurement results.

Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW:NSElect <integer> :DISPlay:EVMQpsk:VIEW:NSElect?
Example	DISP:EVMQ:VIEW:NSEL 2 DISP:EVMQ:VIEW:NSEL?



Couplings	Changing parameter of "View" (:DISPlay:EVMQpsk:VIEW[:SElect]) also changes this parameter.
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	2
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Display

Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1813](#) in the "Common Measurement Functions" section for more information.


Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00


## I/Q Measured Polar Graph

Provides a combination view of the I/Q demodulated signals using vector lines to connect the chip dots. IQ Measured Polar Graph accesses a menu that enables you to select more advanced settings.


- The view consists of the following windows:
- [“Polar Graph Window” on page 1280](#)
- [“Numeric Results Window” on page 1280](#)

QPSK EVM Measurement  
View/Display

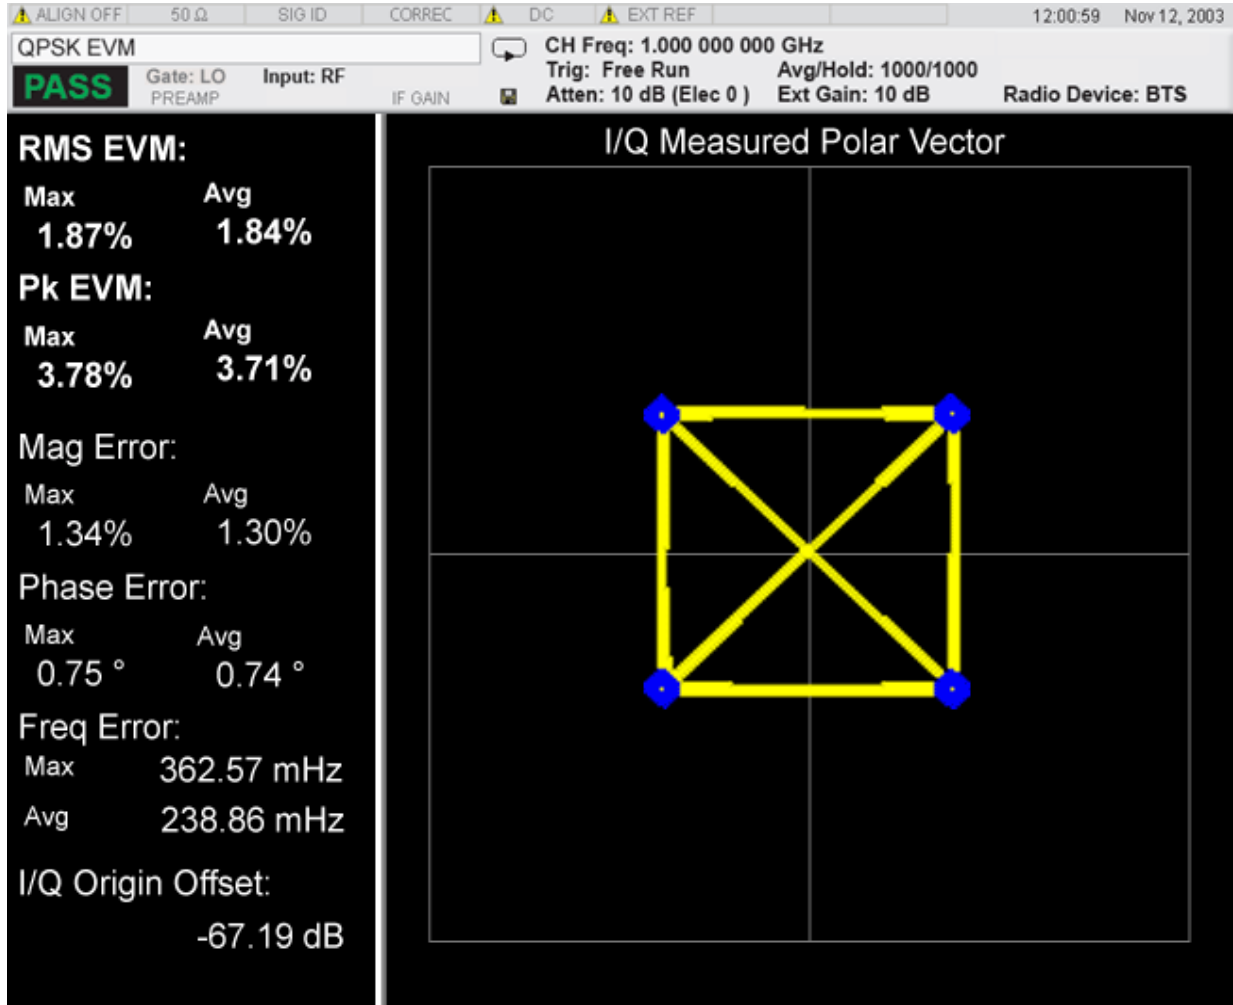

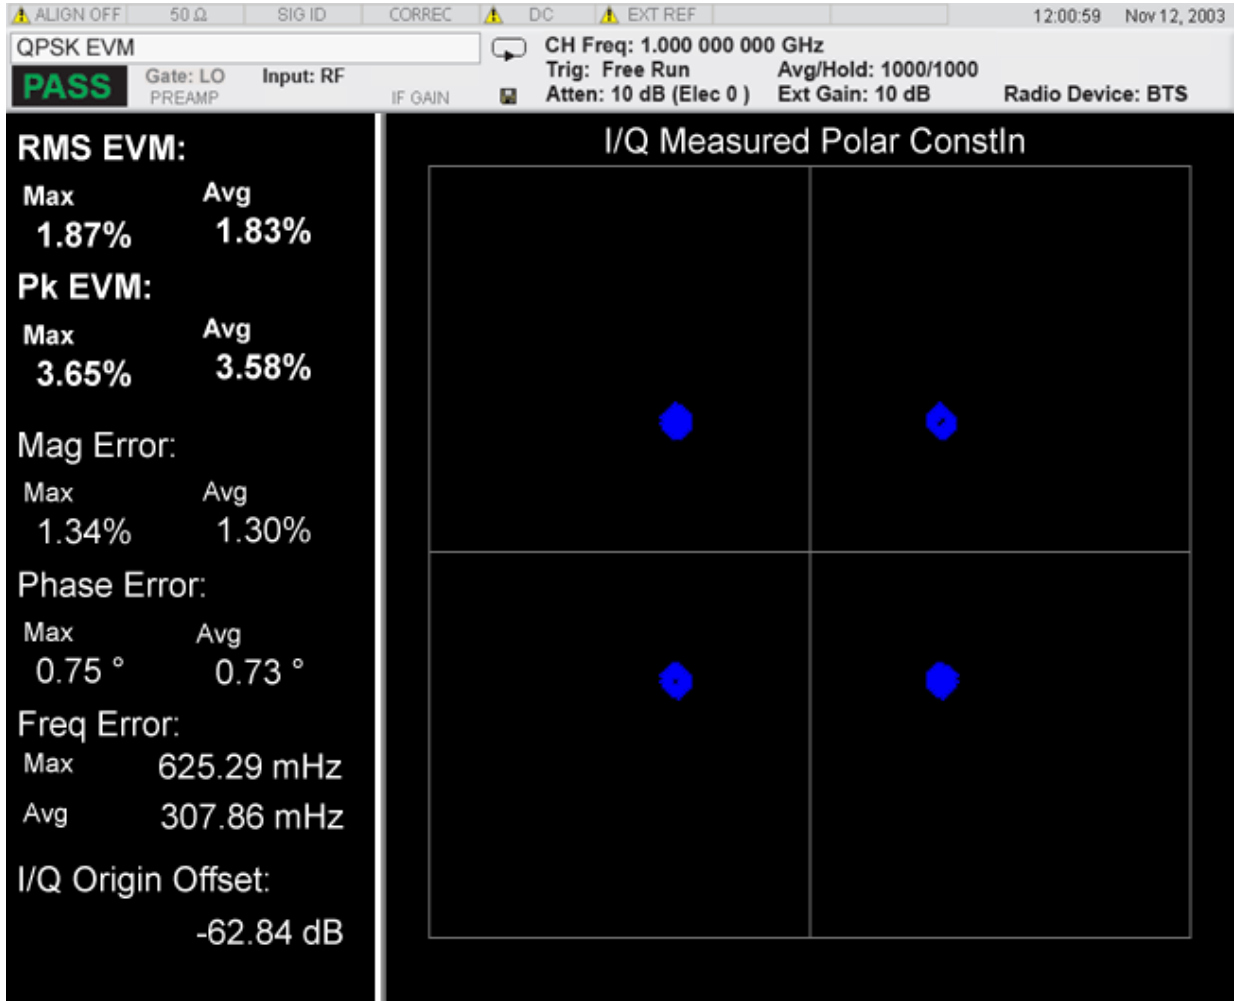

QPSK EVM Measurement  
View/Display

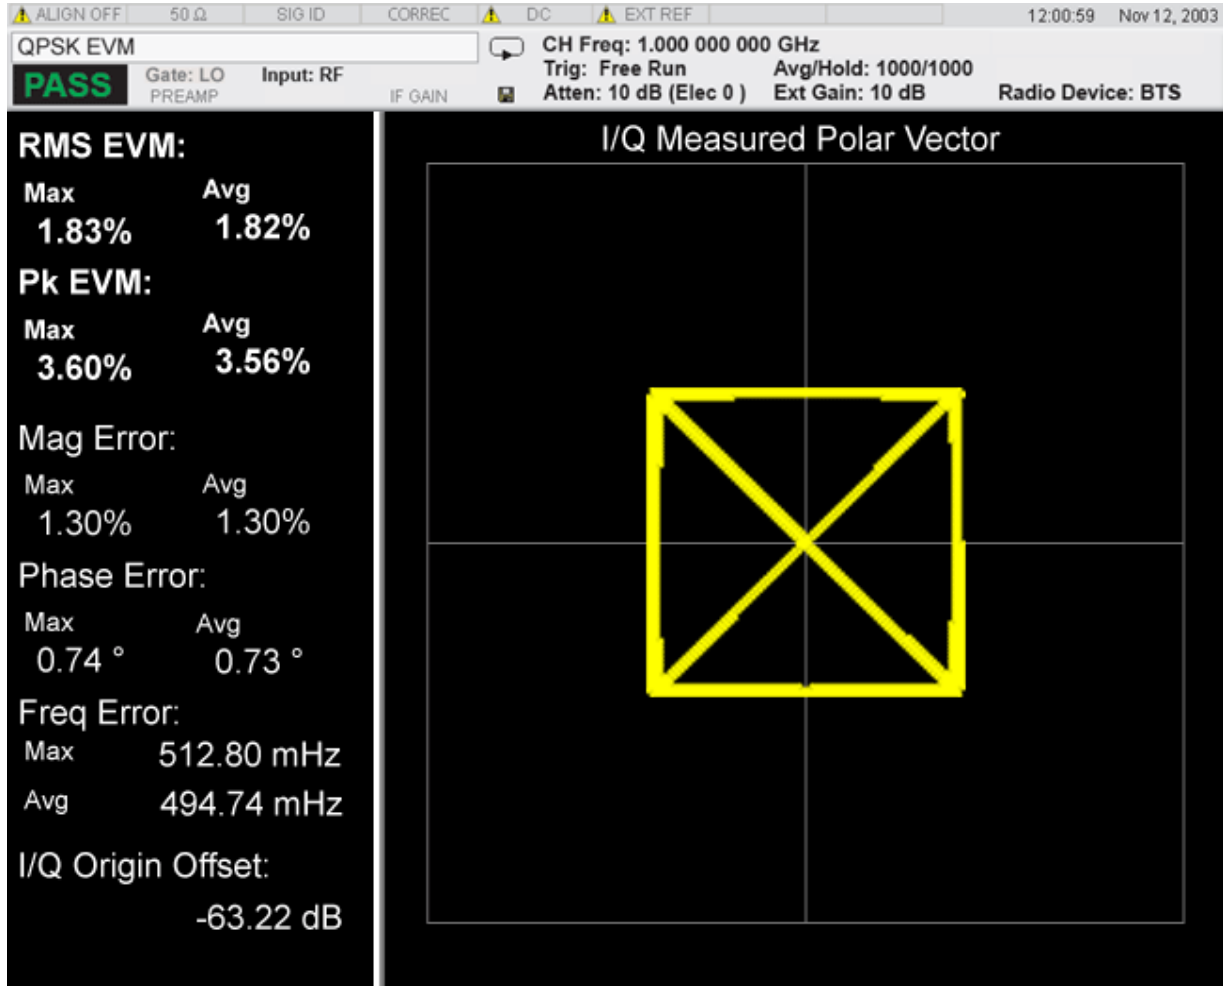

**Polar Graph Window**

Polar Graph consists of Constellation points and Vector line.

Marker Trace	Yes
Corresponding Trace	Display I/Q trace (n=5)

**Numeric Results Window**

Shows numeric results of the I/Q polar graph.

Name	Type	Description	Unit	Format
RMS EVM	float64	EVM over the entire measurement area	percent	XX.XX %
Peak EVM	float64	peak EVM in the measurement area.	percent	XX.XX %

Mag Error	Avg	float64	averaged magnitude error over the entire measurement area	percent	XX.XX %
	Max	float64	maximum magnitude error over the entire measurement area	percent	XX.XX %
Phase Error	Avg	float64	averaged phase error over the entire measurement area	°	XX.XX °
	Max	float64	maximum phase error over the entire measurement area	°	XX.XX °
Freq Error	Avg	float64	averaged frequency error in the measured signal.	Hz	XX.XX Hz
	Max	float64	maximum frequency error in the measured signal	Hz	XX.XX Hz
I/Q Origin Offset		float64	the I and Q error (magnitude squared) offset from the origin.	dB	XX.XX dB

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### I/Q Polar Vec/Constln

Specifies the format of the polar vector graph display. The following display options are available:

Vector and Constellation

Vector Only

Constellation Only

Key Path	<b>View/Display</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:POLar VC VECTor CONSTln :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:POLar?
Example	DISP:EVMQ:VIEW:WIND2:TRAC:POL VECT DISP:EVMQ:VIEW:WIND2:TRAC:POL?
Notes	Allows to specify the format of the polar vector graph display by:  Vector and Constellation  Vector Only  Constellation Only
Preset	VC

QPSK EVM Measurement  
View/Display

State Saved	Saved in instrument state.
Range	Vec & ConstIn Vector Constellation
Readback Text	Vec & ConstIn Vector ConstIn
Initial S/W Revision	Prior to A.02.00

### Chip Offset

Sets the chip offset number from the first chip in a measured signal.

Key Path	<b>View/Display, Display</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:COFFset <integer> :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:COFFset?
Example	DISP:EVMQ:VIEW:WIND2:TRAC:COFF 1001 DISP:EVMQ:VIEW:WIND2:TRAC:COFF?
Notes	The number of chip offset from the first chip in a measured signal.
Preset	0
State Saved	Saved in instrument state.
Min	0
Max	Meas Interval – I/Q Chips
Initial S/W Revision	Prior to A.02.00

### I/Q Chips

Specifies the number of I/Q chips used to display the I/Q waveforms.

Key Path	<b>View/Display, Display</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:IQCHips <integer> :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:IQCHips?
Example	DISP:EVMQ:VIEW:WIND2:TRAC:IQCH 1001 DISP:EVMQ:VIEW:WIND2:TRAC:IQCH?
Couplings	This parameter is dependent on Meas Interval and cannot be set to a value greater than Meas Interval.

Preset	C2K: 512 WCDMA: 2560 1xEVDO: 2560
State Saved	Saved in instrument state.
Min	1
Max	WCDMA: 5120 C2K:1536
Initial S/W Revision	Prior to A.02.00

### Interpolation

Toggles the interpolation function from On to Off. If set to On, the vector lines between chip dots are converted into smooth curves by the interpolation function.

Key Path	<b>View/Display, Display</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe] OFF ON 0 1 :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe]?
Example	DISP:EVMQ:VIEW:WIND2:TRAC:INTP ON DISP:EVMQ:VIEW:WIND2:TRAC:INTP?
Notes	If set to ON, the vector lines between chip dots are converted into smoothed curves by the interpolation function.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### +45° Rotation

Toggles the state of the rotation of the I/Q polar trace. If set to On, the I/Q polar trace is rotated by 45 degrees to provide a rectangular display.

Key Path	<b>View/Display, Display</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATe] OFF ON 0 1 :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATe]?

Example	DISP:EVMQ:VIEW:WIND2:TRAC:ROTQ ON DISP:EVMQ:VIEW:WIND2:TRAC:ROTQ?
Notes	Enables you to toggle whether the I/Q polar trace is rotated by 45 degrees to provide a rectangular display.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### Full Vector

Toggles the gray background from On to Off when displaying the full measured trace or the selected vector on the display.

Key Path	<b>View/Display, Display</b>
Mode	WCDMA, C2K, 1xEVDO
<b>Remote Command</b>	:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:FVEctor[:STATE] OFF ON 0 1 :DISPPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:FVEctor[:STATE]?
Example	DISP:EVMQ:VIEW:WIND2:TRAC:FVEC ON DISP:EVMQ:VIEW:WIND2:TRAC:FVEC?
Notes	This is useful when you want to observe the full vector and the selected vector set by I/Q Chips and Chip Offset simultaneously.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

### I/Q Error View

Provides a combination view. This view consists of four windows:


[“Mag Error vs. Symbol Window” on page 1285](#)

[“Phase Error vs. Symbol Window” on page 1285](#)

[“EVM vs. Symbol Window” on page 1286](#)

[“Numeric Results Window” on page 1286](#)



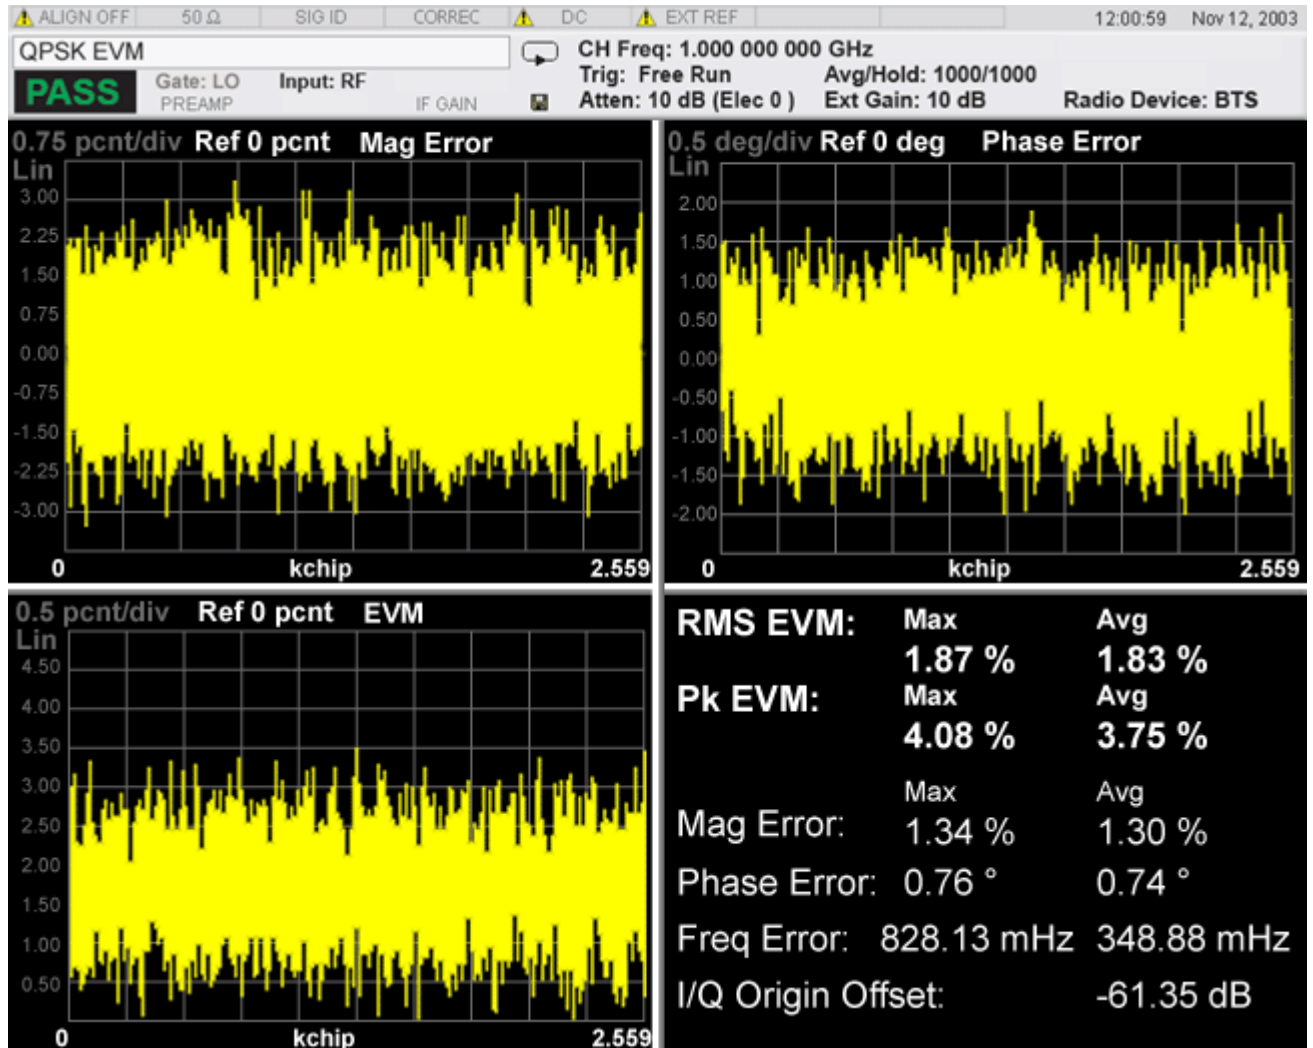

### Mag Error vs. Symbol Window

Provides Magnitude Error vs. Symbol results.

Marker Trace	Yes
Corresponding Trace	Magnitude Error trace (n=3)

### Phase Error vs. Symbol Window

Provides Magnitude Error vs. Symbol results.

Marker Trace	Yes
Corresponding Trace	Phase Error trace (n=4)

### EVM vs. Symbol Window

Provides EVM vs. Symbol results.

Marker Trace	Yes
Corresponding Trace	EVM trace (n=2)

### Numeric Results Window

Shows numeric results as the same as the numeric results of the I/Q polar graph.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

The monitor spectrum measurement is used as a quick, convenient means of looking at the entire spectrum. While the look and feel are similar to the Spectrum Analyzer mode, the functionality is greatly reduced for easy operation. The main purpose of the measurement is to show the spectrum. The default span should cover an appropriate frequency range of the application. For measurement results and views, see [“View/Display” on page 1333](#).

This topic contains the following sections:

[“Measurement Commands for Monitor Spectrum” on page 1287](#)

[“Remote Command Results for Monitor Spectrum Measurement” on page 1287](#)

### Measurement Commands for Monitor Spectrum

The following commands can be used to retrieve the measurement results:

```
:CONFigure:MONitor
```

```
:CONFigure:MONitor:NDEFault
```

```
:INITiate:MONitor
```

```
:FETCh:MONitor[n]?
```

```
:READ:MONitor[n]?
```

```
:MEASure:MONitor[n]?
```

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1575](#).

### Remote Command Results for Monitor Spectrum Measurement

n	Results Returned
n=1 (or not specified)	Returns trace1 data with comma separated floating numbers
n=2	Returns trace2 data with comma separated floating numbers
n=3	Returns trace3 data with comma separated floating numbers

Key Path	Meas
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. These functions control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value

Sets the absolute power reference value. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el <real>  :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el?
Example	DISP:MON:VIEW:WIND:TRAC:Y:RLEV 2.0 DISP:MON:VIEW:WIND:TRAC:Y:RLEV?
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dBm
State Saved	Saved in instrument state.
Min	-250.00 dBm
Max	250.00 dBm
Initial S/W Revision	Prior to A.02.00

### Attenuation

Accesses a menu of functions that enable you to change the attenuation settings.

See AMPTD Y Scale, “Attenuation” on page 1406 in the “Common Measurement Functions” section for more information.

Key Path	<b>AMPTD Y Scale</b>
----------	----------------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Scale/Div

Sets the logarithmic units per vertical graticule division on the display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Key Path	AMPTD Y Scale
Mode	All except SA and BASIC
<b>Remote Command</b>	:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision <rel_ampl>  :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision?
Example	DISP:MON:VIEW:WIND:TRAC:Y:PDIV 5.0 dB DISP:MON:VIEW:WIND:TRAC:Y:PDIV?
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dB
State Saved	Saved in instrument state.
Min	0.10 dB
Max	20.00 dB
Initial S/W Revision	Prior to A.02.00

## Presel Center

See AMPTD Y Scale, [“Presel Center” on page 1421](#) in the “Common Measurement Functions” section for more information.

## Presel Adjust

See AMPTD Y Scale, [“Preselector Adjust” on page 1422](#) in the “Common Measurement Functions” section for more information.

## Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, [“Internal Preamp” on page 1435](#) in the “Common Measurement Functions”

section for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Ref Position

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Key Path	<b>AMPTD Y Scale</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOS ition TOP CENTer BOTTom  :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOS ition?
Example	DISP:MON:VIEW:WIND:TRAC:Y:RPOS CENT  DISP:MON:VIEW:WIND:TRAC:Y:RPOS?
Preset	TOP
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Initial S/W Revision	Prior to A.02.00

## Auto Scaling

Toggles the Auto Scaling function between On and Off.

Key Path	<b>AMPTD Y Scale</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUP le 0 1 OFF ON  :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUP le?
Example	DISP:MON:VIEW:WIND:TRAC:Y:COUP ON  DISP:MON:VIEW:WIND:TRAC:Y:COUP?
Couplings	When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.  When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.

Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

## **Auto Couple**

See “[Auto Couple](#)” on page 1437 in the section "Common Measurement Functions" for more information.



## BW

Accesses a menu that enables you to specify the resolution bandwidth functions that control the bandwidth and filter selection.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Res BW

Sets the resolution bandwidth for the current measurement. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

<b>Remote Command</b>	<pre>[ :SENSE]:MONitor:BANDwidth[:RESolution] &lt;freq&gt; [:SENSE]:MONitor:BANDwidth[:RESolution]? [:SENSE]:MONitor:BANDwidth[:RESolution]:AUTO OFF ON 0 1 [:SENSE]:MONitor:BANDwidth[:RESolution]:AUTO?</pre>
Example	<pre>MON:BAND 2.4 MHz MON:BAND? MON:BAND:AUTO ON MON:BAND:AUTO?</pre>
Initial S/W Revision	Prior to A.02.00
Key Path	<b>BW</b>
Mode	All except SA and BASIC

Monitor Spectrum  
**BW**

Preset	<p>WCDMA: Automatically calculated  WIMAX OFDMA: 100kHz  C2K: Automatically calculated  PN: Automatically calculated  GSM/EDGE: Automatically calculated  TD-SCDMA: Automatically calculated  1xEVDO: 30kHz  DVB-T/H: 3.9kHz  DTMB: 3.9kHz  ISDB-T: 3.9kHz  CMMB: 3.9kHz  LTE: 100 kHz  LTETDD: 100 kHz  WCDMA: ON  WIMAX: OFF  C2K: ON  PN: ON  GSM/EDGE: ON  TD-SCDMA: ON  1xEVDO: ON  DVB-T/H: OFF  DTMB: OFF  ISDB-T: OFF  CMMB: OFF  LTE:OFF  LTETDD: OFF</p>
State Saved	Saved in instrument state.
Min	1.0 Hz
Max	8.0 MHz
Backwards Compatibility SCPI	[:SENSe]:MONitor:BWIDth[:RESolution]
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

## Video BW

Changes the analyzer post-detection filter.

<b>Remote Command</b>	<pre>[ :SENSe]:MONitor:BANDwidth:VIDeo &lt;bandwidth&gt; [ :SENSe]:MONitor:BANDwidth:VIDeo? [ :SENSe]:MONitor:BANDwidth:VIDeo:AUTO ON OFF 1 0 [ :SENSe]:MONitor:BANDwidth:VIDeo:AUTO?</pre>
Example	<pre>MON:BAND:VID 10 MHz MON:BAND:VID? MON:BAND:VID:AUTO OFF MON:BAND:VID:AUTO?</pre>
Initial S/W Revision	Prior to A.02.00
Key Path	<b>BW</b>
Mode	All except SA and BASIC

Monitor Spectrum  
**BW**

Preset	WCDMA: Automatically calculated WIMAX OFDMA: 1MHz C2K: Automatically calculated PN: Automatically calculated GSM/EDGE: Automatically calculated TD-SCDMA: Automatically calculated 1xEVDO: 300kHz DVB-T/H: 39kHz DTMB: 39kHz ISDB-T: 39kHz CMMB: 39kHz LTE: 1 MHz LTETDD: 1 MHz WCDMA: ON WIMAX: OFF C2K: ON PN: ON GSM/EDGE: ON TD-SCDMA: ON 1xEVDO: ON DVB-T/H: OFF DTMB: OFF ISDB-T: OFF CMMB: OFF LTE:OFF LTETDD:OFF
State Saved	Saved in instrument state.
Min	1 Hz
Max	50 MHz
Backwards Compatibility SCPI	[:SENSe]:MONitor:BWIDth:VIDeo
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

**VBW:3dB RBW**

Selects the ratio between the video bandwidth and the equivalent 3 dB resolution bandwidth to be used

for setting the VBW when VBW is in Auto.

Key Path	BW
Mode	All except SA and BASIC
<b>Remote Command</b>	[ :SENSe]:MONitor:BANDwidth:VIDeo:RATio <real> [ :SENSe]:MONitor:BANDwidth:VIDeo:RATio? [ :SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO OFF ON 0 1 [ :SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO?
Example	MON:BAND:VID:RAT 2 MON:BAND:VID:RAT? MON:BAND:VID:RAT:AUTO 0 MON:BAND:VID:RAT:AUTO?
Preset	1 ON
State Saved	Saved in instrument state.
Min	0.00001
Max	3000000
Backwards Compatibility SCPI	[ :SENSe]:MONitor:BWIDth:VIDeo:RATio
Initial S/W Revision	Prior to A.02.00

### Span:3dB RBW

Selects the ratio between span and resolution bandwidth.

The default setting is Auto with a Span:3 dB RBW ratio of 106:1. You can manually change this ratio by pressing the key, entering a new value, and pressing Enter.

<b>Remote Command</b>	[ :SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]: RATio <integer> [ :SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]: RATio? [ :SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]: RATio:AUTO OFF ON 0 1 [ :SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]: RATio:AUTO?
-----------------------	---

Monitor Spectrum  
**BW**

Example	MON:FREQ:SPAN:BAND:RAT 200 MON:FREQ:SPAN:BAND:RAT? MON:FREQ:SPAN:BAND:RAT:AUTO ON MON:FREQ:SPAN:BAND:RAT:AUTO?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>BW</b>
Mode	All except SA and BASIC
Preset	106 ON
State Saved	Saved in instrument state.
Min	2
Max	10000
Backwards Compatibility SCPI	[:SENSe]:MONitor:FREQuency:SPAN:BWIDth[:RESolution]:RATio
Modified at S/W Revision	A.04.00

---

## **Cont**

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451 in the section "Common Measurement Functions" for more information.

## **FREQ Channel**

See “[FREQ/Channel](#)” on page 1453 in the section "Common Measurement Functions" for more information.



---

## **Input/Output**

See [“Input/Output” on page 1459](#) in the section "Common Measurement Functions" for more information.

## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

See the "Marker Functions" section for more information

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Type

Sets the marker control mode to **Normal**, **Delta** or **Off**. If the selected marker is Off, pressing Marker sets it to Normal and places a single marker at the center of the display. At the same time, **Marker X Axis Value** appears on the Active Function area.

Key Path	<b>Marker</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELta OFF :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?
Example	CALC:MON:MARK:MODE POS CALC:MON:MARK:MODE?
Notes	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.  Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.  Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision.
Preset	OFF
State Saved	Saved in instrument state.

Range	Normal Delta Off
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <freq>  :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X ?
Example	CALC:MON:MARK3:X 0 CALC:MON:MARK3:X?
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” is generated. The query returns the marker’s absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker’s reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b> , seconds for <b>Period</b> and <b>Time</b> . If the marker is <b>Off</b> the response is not a number.
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

### Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** – except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition <real>  :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X :POSition?

Example	CALC:MON:MARK:X:POS 0 CALC:MON:MARK:X:POS?
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points. If the marker is <b>Off</b> the response is not a number.
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

### Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker.

Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:MON:MARK11:Y?
Preset	Result dependant on markers setup and signal source
Backwards Compatibility SCPI	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:RESult?
Initial S/W Revision	Prior to A.02.00

### Properties

Accesses a menu that enables you to select the active marker, the reference marker and the trace for the current measurement.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

## Relative To

Selects the desired marker. The selected marker is relative to its reference marker

Key Path	Marker, Properties
Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>  :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?
Example	CALC:MON:MARK:REF 1  CALC:MON:MARK:REF?
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."  When queried a single value is returned (the specified marker number's relative marker).
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Initial S/W Revision	Prior to A.02.00

## Marker Trace

Assigns the specified marker to the designated trace.

Key Path	Marker, Properties
Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe <integer>  :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?
Example	CALC:MON:MARK:TRAC 1  CALC:MON:MARK:TRAC?
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	3

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Couple Markers

When this function is true, moving any marker causes an equal X Axis movement of every other marker which is not **Off**. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x–axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x–axis units).

Key Path	Marker
Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:MONitor:MARKer:COUPle[:STATe]?
Example	CALC:MON:MARK:COUP ON CALC:MON:MARK:COUP?
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00

## All Markers Off

Turns off all markers on the current measurement.

Key Path	Marker
Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer:AOFF
Example	CALC:MON:MARK:AOFF
Initial S/W Revision	Prior to A.02.00

## Marker Function

Accesses special marker functions such as marker noise, and power in a specified bandwidth or time interval.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Select Marker

Selects one of the 12 available markers.

Key Path	<b>Marker Function</b>
Initial S/W Revision	Prior to A.02.00

## Marker Function Type

Sets the marker control function type to, Marker Noise, Band/Interval Power, Band Interval Density, or Marker Function Off.

Key Path	<b>Marker Function</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:F UNCTION NOISe BPOWer BDENSity OFF  :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:F UNCTION?
Example	CALC:MON:MARK:FUNC NOIS  CALC:MON:MARK:FUNC?
Preset	OFF
State Saved	Saved in instrument state.
Range	Marker Noise Band/Interval Power Band Interval Density Marker Function Off
Initial S/W Revision	Prior to A.02.00

## Band Adjust

Accesses a menu that enables you to set the frequency span width and the left and right edge, or time values, for the band or interval of the selected marker.

Key Path	<b>Marker Function</b>
----------	------------------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Band/Interval Span for Frequency Domain

Sets the width of the frequency span for the selected marker.

Key Path	Marker Function
Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:F UNction:BAND:SPAN <freq>  :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:F UNction:BAND:SPAN?
Example	CALC:MON:MARK12:FUNC:BAND:SPAN 20 MHz CALC:MON:MARK12:FUNC:BAND:SPAN?
Couplings	Changing the Band/Interval Span necessarily changes the Band/Interval Left and Band/Interval Right values.
Preset	Depends on X axis range of selected Trace.
State Saved	Saved in instrument state.
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

### Band/Interval Left for Frequency Domain

Sets the left edge frequency or time value for the band of the selected marker.

Key Path	Marker Function
Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:F UNction:BAND:LEFT <freq>  :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:F UNction:BAND:LEFT?
Example	CALC:MON:MARK12:FUNC:BAND:LEFT 20 GHz CALC:MON:MARK12:FUNC:BAND:LEFT?
Couplings	Changing the Band/Interval Left necessarily changes the Band/Interval Span and Band/Interval Right values.
Preset	Depends on X axis range of selected Trace.
State Saved	Saved in instrument state.
Min	-9.9E+37



Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

### Band/Interval Right for Frequency Domain

Sets the right edge frequency or time value for the band of the selected marker.

Key Path	Marker Function
Mode	All except SA and BASIC
<b>Remote Command</b>	:CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:F UNction:BAND:RIGHT <freq>  :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:F UNction:BAND:RIGHT?
Example	CALC:MON:MARK12:FUNC:BAND:RIGH 20 GHz CALC:MON:MARK12:FUNC:BAND:RIGH?
Couplings	Changing the Band/Interval Right necessarily changes the Band/Interval Left and Band/Interval Span values
Preset	Depends on X axis range of selected Trace.
State Saved	Saved in instrument state.
Min	-9.9E+37
Max	9.9E+37
Initial S/W Revision	Prior to A.02.00

## Marker To

There is no 'Marker To' functionality supported in Monitor Spectrum. The front-panel key displays a blank menu key when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

---

## **Meas**

See [“Meas” on page 1575](#) in the section "Common Measurement Functions" for more information.

## Meas Setup

Displays the setup menu for the current measurement. The measurement setup parameters include the number of measurement averages used to calculate the measurement result and the averaging mode. The setup menu also includes the option to reset the measurement settings to their factory defaults.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Avg/Hold Num

Specifies the number of measurement averages used when calculating the measurement result. The average is displayed at the end of each sweep.

After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

Key Path	Meas Setup
Mode	All except SA and BASIC
<b>Remote Command</b>	[ :SENSE]:MONitor:AVERage:COUNT <integer> [ :SENSe]:MONitor:AVERage:COUNT? [ :SENSE]:MONitor:AVERage[:STATe] OFF ON 0 1 [ :SENSe]:MONitor:AVERage[:STATe]?
Example	MON:AVER:COUN 25 MON:AVER:COUN? MON:AVER ON MON:AVER?
Preset	10 OFF
State Saved	Saved in instrument state.
Min	1
Max	1000
Initial S/W Revision	Prior to A.02.00

### Avg Mode

Toggles the average mode between exponential (Exp) and Repeat.

Exp- continues measurement averaging, using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep.

Repeat- causes the measurement to reset the average counter each time the specified number of averages is reached.

Key Path	Meas Setup
Mode	All except SA and BASIC
<b>Remote Command</b>	[ :SENSe] :MONitor:AVERage:TCONtrol EXPonential   REPEAT [ :SENSe] :MONitor:AVERage:TCONtrol?
Example	MON:AVER:TCON EXP MON:AVER:TCON?
Preset	EXPonential
State Saved	Saved in instrument state.
Range	ExpRepeat
Initial S/W Revision	Prior to A.02.00

## Meas Preset

Restores all the measurement parameters to their default values.

Key Path	Meas Setup
Mode	All except SA and BASIC
<b>Remote Command</b>	:CONFigure:MONitor
Example	CONF:MON
Initial S/W Revision	Prior to A.02.00

## **Mode**

See “[Mode](#)” on page 1635 in the section "Common Measurement Functions" for more information.

---

## **Mode Setup**

See “[Mode Setup](#)” on page 1651 in the section "Common Measurement Functions" for more information.

## Peak Search

There is no 'Peak Search' functionality supported in Monitor Spectrum. The front-panel key displays a blank menu key when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00



---

## **Recall**

See [“Recall” on page 189](#) in the section "Common Measurement Functions" for more information.

## **Restart**

See “[Restart](#)” on page 1671 in the section "Common Measurement Functions" for more information.

---

## Save

See [“Save” on page 205](#) in the section "Common Measurement Functions" for more information.

## **Single**

See “[Single \(Single Measurement/Sweep\)](#)” on page 1677 in the section "Common Measurement Functions" for more information.

---

## **Source**

See “[Source](#)” on page 1679 in the section "Common Measurement Functions" for more information.

## Span X Scale

Accesses a menu of functions that enable you to set the horizontal scale parameters.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Span

Changes the frequency range symmetrically about the center frequency.

<b>Remote Command</b>	[ :SENSe]:MONitor:FREQuency:SPAN <freq> [ :SENSe]:MONitor:FREQuency:SPAN?
Example	MON:FREQ:SPAN 1 MHz MON:FREQ:SPAN?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Span X Scale</b>
Mode	All except SA, BASIC
Couplings	Changing the span causes the resolution bandwidth to change automatically, and affects data acquisition time.
Preset	WCDMA: 10.0 MHz WIMAX OFDMA: 50.0 MHz C2K: 2.5MHz PN: 1.0 MHz GSM/EDGE: 1.0 MHz TD-SCDMA: 3.2 MHz 1xEVDO: 2.0MHz DVB-T/H: 10.0MHz DTMB: 10.0MHz ISDB-T: 10.0MHz CMMB: 10.0MHz LTE: 50 MHz LTETDD: 50 MHz IDEN: See the table below
State Saved	Saved in instrument state.
Min	10 Hz

Max	Hardware Dependent: Option 503 = 3.7 GHz Option 507 = 7.1GHz Option 508 = 8.5 GHz Option 513 = 13.8 GHz Option 526 = 27.0 GHz
Modified at S/W Revision	A.02.00
Modified at S/W Revision	A.03.00

### IDEN Mode Span Preset for Monitor Spectrum

iDEN Slot Format	WiDEN Slot Format 25kHz	WiDEN Slot Format 50kHz	WiDEN Slot Format 75kHz	WiDEN Slot Format 100kHz	WiDEN Slot Format 50kHz Out
60kHz	60kHz	85kHz	110kHz	135kHz	135kHz

## Full Span

Changes the Span to show the full frequency range of the analyzer.

Key Path	Span X Scale
Mode	All except SA and BASIC
<b>Remote Command</b>	[ :SENSE] :MONitor :FREQuency :SPAN :FULL
Example	MON:FREQ:SPAN:FULL
Couplings	Sets the span to the full frequency range, and adjusts the center frequency accordingly.
Initial S/W Revision	Prior to A.02.00

## Last Span

Changes the measurement span to the span setting of the previous measurement. If there is no existing previous span value, then the span remains unchanged.

Key Path	Span X Scale
Mode	All except SA and BASIC
<b>Remote Command</b>	[ :SENSE] :MONitor :FREQuency :SPAN :PREVious
Example	MON:FREQ:SPAN:PREV
Couplings	Selecting last span changes the measurement span value.

Monitor Spectrum  
**Span X Scale**

Initial S/W Revision	Prior to A.02.00
----------------------	------------------



## Sweep/Control

Access a menu of functions that enable you to set up and control the sweep time for the current measurement

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Sweep Time

Selects the length of time in which the spectrum analyzer sweeps the displayed frequency span. Additional overhead time is required by the analyzer. It impacts the sweep rate, but is not calculated as part of the sweep time. Reducing the sweep time increases the rate of sweeps.

Key Path	<b>Sweep/Control</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	[ :SENSe]:MONitor:SWEep:TIME <time> [ :SENSe]:MONitor:SWEep:TIME? [ :SENSe]:MONitor:SWEep:TIME:AUTO OFF ON 0 1 [ :SENSe]:MONitor:SWEep:TIME:AUTO?
Example	MON:SWE:TIME 100 ms MON:SWE:TIME? MON:SWE:TIME:AUTO ON MON:SWE:TIME:AUTO?
Couplings	When the user manually changes the Sweep Time, this set automatically goes to 'Man'.
Preset	Automatically Calculated
State Saved	Saved in instrument state.
MIN/MAX/DEF Support	Yes
Min	1 ms
Max	4000 s
Initial S/W Revision	Prior to A.02.00

### Pause

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing Resume continues the measurement at the point where it had been paused.

See “Pause/Resume” on page 1698 under Sweep/Control in the "Common Measurement Functions" section for more information.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Gate

Accesses a menu that enables you to control the gating function .

The Gate functionality is used to view signals best viewed by qualifying them with other events.

See “Gate ” on page 1699 in “common Measurement Functions” for more details.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00

## Points

Sets the number of points per sweep. The resolution of setting the sweep time depends on the number of points selected. If Preset is selected, the number of points per sweep defaults to 1001. The current value of points is displayed parenthetically, next to the sweep time in the lower right corner of the display.

Key Path	<b>Sweep/Control</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	[ :SENSE]:MONitor:SWEep:POINts <integer> [ :SENSE]:MONitor:SWEep:POINts?
Example	:MON:SWE:POIN 1000 :MON:SWE:POIN?
Couplings	Whenever the number of sweep points changes, the sweep time is re-quantized.
Preset	1001
State Saved	Saved in instrument state.
Range	1 to 20001
Initial S/W Revision	Prior to A.02.00

## Trace/Detector

Accesses a menu that enables you to control the display, storage, detection and manipulation of trace data. Each trace is comprised of a series of data points in which X and Y axis information is stored. The analyzer updates the information for the active trace with each sweep of the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Select Trace

Allows you to select which trace you want to use for the current measurement. You can select one of three traces. Monitor Spectrum supports 3 traces, numbered 1 through 3.

Key Path	<b>Trace/Detector</b>
Mode	All except SA and BASIC
Preset	Trace 1
State Saved	The number of the selected trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00

## Trace Type

Allows you to select the type of trace you want to you use for the current measurement. You can assign a trace type to one of the three available traces.

The first page of this menu contains a 1-of-N selection of the trace type (**Clear Write, Average, Max Hold, Min Hold**) for the selected trace.

Key Path	<b>Trace/Detector</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	:TRACe[1]   2   3:MONitor:TYPE WRITe   AVERAge   MAXHold   MINHold :TRACe[1]   2   3:MONitor:TYPE?
Example	TRAC:MON:TYPE WRIT TRAC:MON:TYPE?
Notes	WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold

Preset	WRITE
State Saved	Saved in instrument state.
Range	WRITE AVERage MAXHold MINHold for traces 1 through 3
Backwards Compatibility SCPI	:DISPlay:MONitor:VIEW:WINDow:TRACe[1] 2 3:TYPE
Initial S/W Revision	Prior to A.02.00

## Update

Toggles a trace state between Update and Off. The Off selection makes the trace inactive (or a stored trace). This does not affect whether the trace is visible or not. Use the Display Show/Blank function to change the trace visibility.

Key Path	Trace/Detector
Mode	All except SA and BASIC
<b>Remote Command</b>	:TRACe[1] 2 3:MONitor:UPDate[:STATE] ON OFF 0 1 :TRACe[1] 2 3:MONitor:UPDate[:STATE]?
Example	TRAC3:MON:UPD OFF TRAC3:MON:UPD?
Preset	ON
State Saved	Saved in instrument state.
Range	On Off (View)
Initial S/W Revision	Prior to A.02.00

## Display

Controls the visibility of a trace. In **Blank**, traces do not display nor appear on printouts but are otherwise unaffected. They may be queried and markers may be placed on them

Key Path	Trace/Detector
Mode	All except SA and BASIC
<b>Remote Command</b>	:TRACe[1] 2 3:MONitor:DISPlay[:STATE] ON OFF 0 1 :TRACe[1] 2 3:MONitor:DISPlay[:STATE]?
Example	TRAC:MON:DISP ON TRAC:MON:DISP?
Preset	ON OFF OFF
State Saved	Saved in instrument state.
Range	Show Blank

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement. The following choices are available:

Auto — the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.

- Normal — the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average — the detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales).
- Peak — the detector determines the maximum of the signal within the sweep points.
- Sample — the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak — the detector determines the minimum of the signal within the sweep points.

In swept analysis, the time interval of the data collection for the display sweep points also represents a frequency interval. In FFT analysis, the sweep points represent just a frequency interval. The detector determines the relationship between the spectrum computed by the FFT and the single data point displayed for the sweep points.

Key Path	Trace/Detector
Mode	All except SA and BASIC
<b>Remote Command</b>	[ :SENSE ] :MONitor:DETEctor:TRACe AVERAge   NEGAtive   NORMAl   POSitive   SAMPlE  [ :SENSE ] :MONitor:DETEctor:TRACe?
Example	MON:DET:TRAC NORM  MON:DET:TRAC?

Notes	The query returns a name that corresponds to the detector type as shown below.  String Returned Definition NORM Normal AVER Average POS Peak SAMP Sample NEG Negative Peak
Couplings	When the Detector choice is Auto, the detector selected depends on average type.
Preset	NORMAl
State Saved	Saved in instrument state.
Range	Normal Average(RMS) Peak Sample Negative Peak
Backwards Compatibility SCPI	[[:SENSe]:MONitor:DETEctor[:FUNction]
Initial S/W Revision	Prior to A.02.00

### Auto

Sets the detector for the currently selected trace to Auto. When the detector choice is Auto, the analyzer selects the detector. The selected detector depends on marker functions, trace functions, and trace averaging functions for the current measurement.

Key Path	<b>Trace/Detector</b> <b>Trace/Detector, Detector</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	[[:SENSe]:MONitor:DETEctor:AUTO ON OFF 1 0 [:SENSe]:MONitor:DETEctor:AUTO?
Example	MON:DET:AUTO OFF MON:DET:AUTO?
Couplings	When the Detector choice is Auto, the detector selected depends on average state and trace type.

Preset	ON
State Saved	Saved in instrument state.
Range	Auto Man
Initial S/W Revision	Prior to A.02.00

## Clear Trace

Clears the selected trace from the display.

Key Path	<b>Trace/Detector</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	:TRACe:MONitor:CLEar [TRACE1]   TRACE2   TRACE3
Example	TRAC:MON:CLE
Initial S/W Revision	Prior to A.02.00

Mode	All except SA and BASIC
<b>Remote Command</b>	:DISPlay:MONitor:VIEW:WINDow:TRACe [1]   2   3 :CLEar
Example	DISP:MON:VIEW:WIND:TRAC:CLE
Initial S/W Revision	Prior to A.02.00

## Clear All Traces

Clears all traces from the display.

Key Path	<b>Trace/Detector</b>
Mode	All except SA and BASIC
<b>Remote Command</b>	:TRACe:MONitor:CLEar:ALL
Example	TRAC:MON:CLE:ALL
Backwards Compatibility SCPI	:DISPlay:MONitor:VIEW:WINDow:TRACe:CLEar:ALL
Initial S/W Revision	Prior to A.02.00

## **Trigger**

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement.


See [“Trigger” on page 1753](#) in the "Common Measurement Functions" section for more information.



## View/Display


Accesses a menu of functions that enable you to control certain functions related to the display of the analyzer.

There is a single trace view for this measurement.

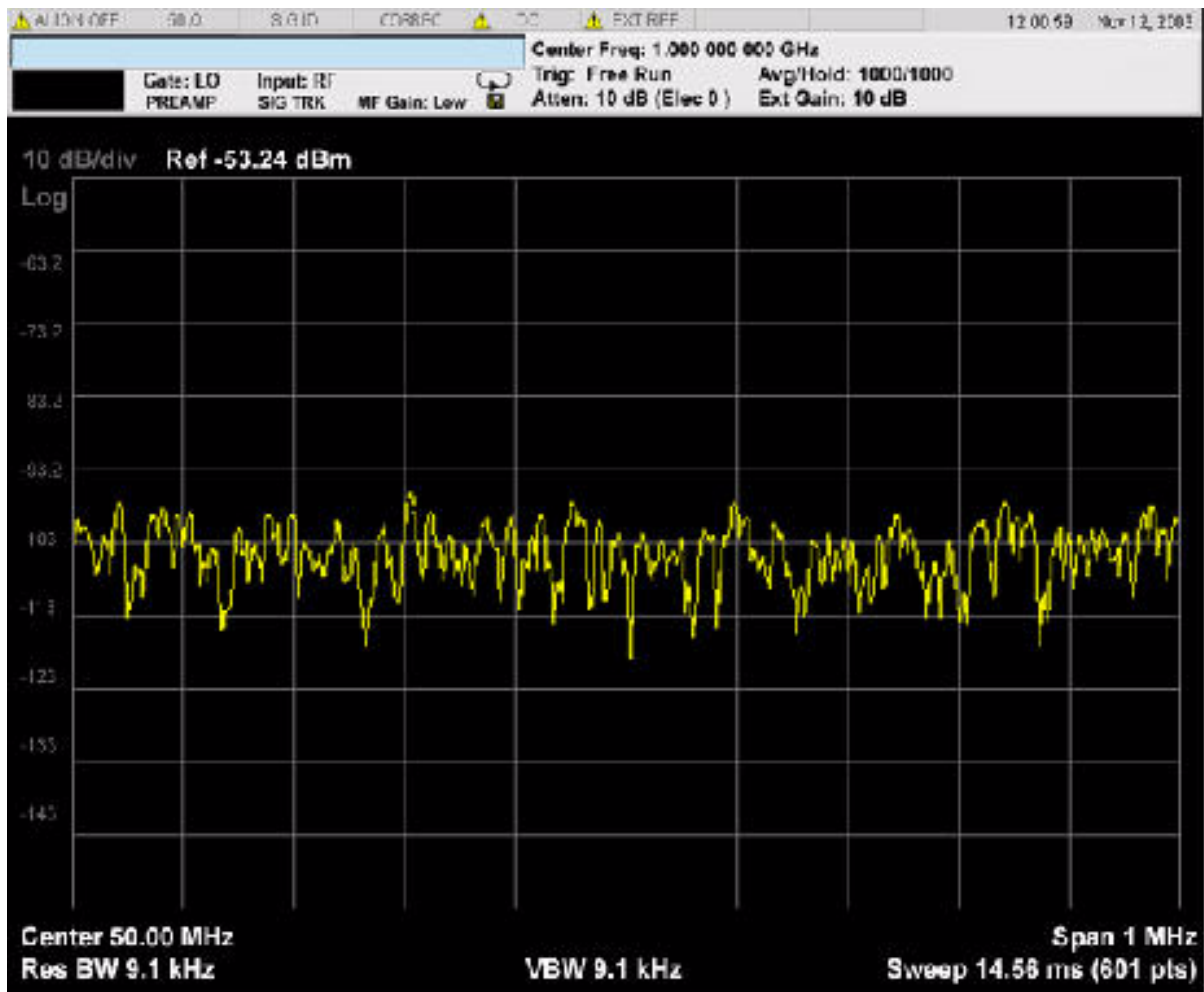

When the mode is CDMA1xEVDO, the view will be like

Monitor Spectrum  
View/Display

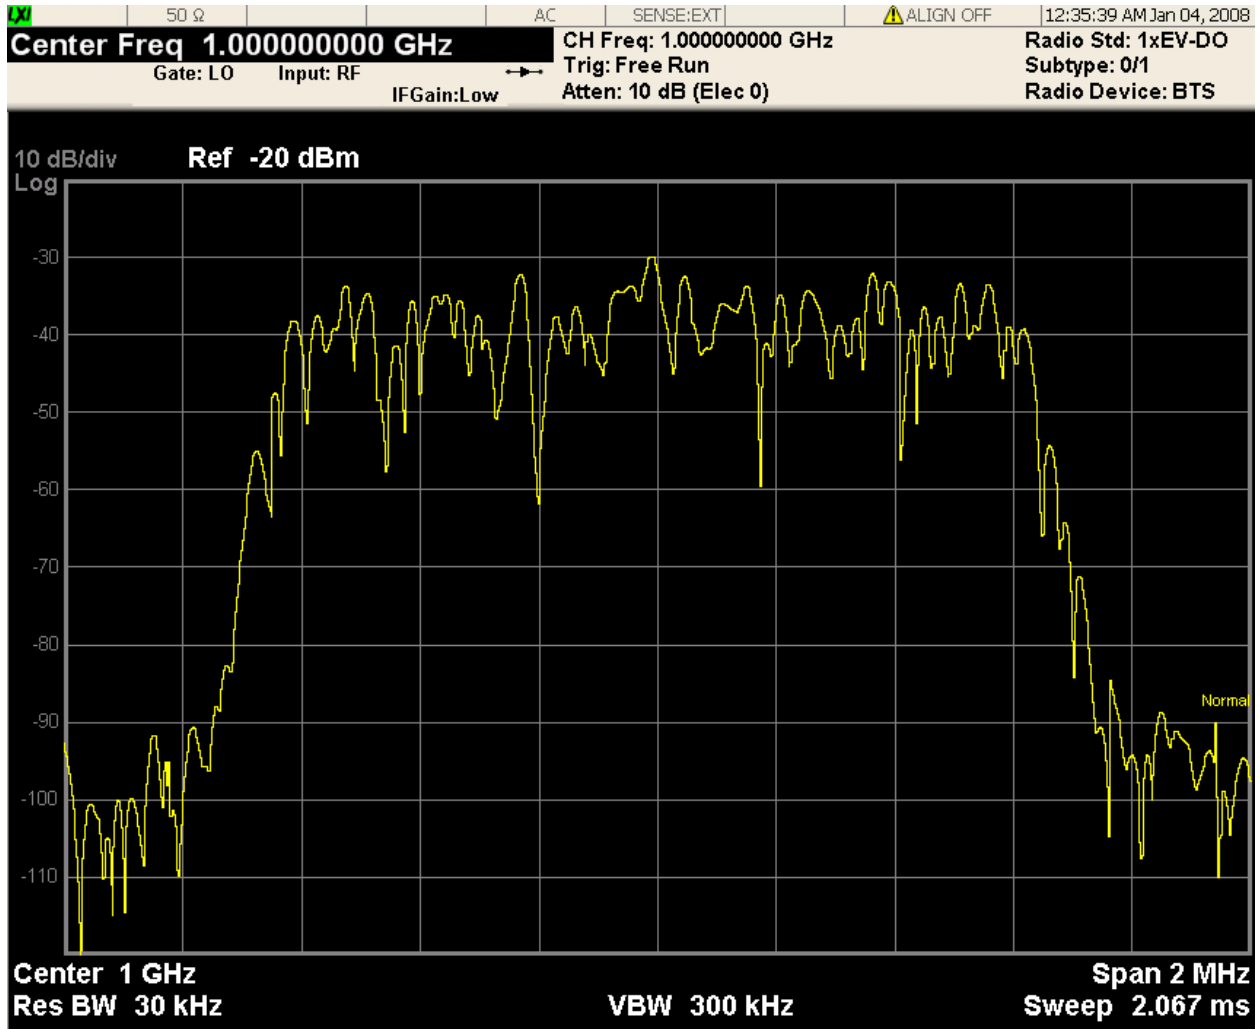

The measurement has no results, but has a number of features that make it flexible and simple to use.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

**Display**

Accesses a menu of functions that enable you to set the display parameters.

See “[Display](#)” on page 1813 in the "Common Measurement Functions" section for more information.

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

The waveform measurement is a generic measurement for viewing the input signal waveforms in the time domain. This measurement represents how the instrument performs the zero span functionality found in traditional spectrum analyzers. For more details, see [“Waveform Measurement Description” on page 1336](#) below.

This topic contains the following sections:

[“Measurement Commands for Waveform” on page 1335](#)

[“Remote Command Results for Waveform Measurement” on page 1335](#)

### Measurement Commands for Waveform

The general functionality of CONFigure, INITiate, FETCh, MEASure, and READ are described at this section.

:CONFigure:WAVEform

:CONFigure:WAVEform:NDEFAULT

:INITiate:WAVEform

:FETCh:WAVEform[n]

:MEASure:WAVEform[n]

:READ:WAVEform[n]

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1575](#).

### Remote Command Results for Waveform Measurement

The following table denotes the returned results from the FETCh|MEASure|READ commands:

n	Results Returned
0	Returns unprocessed I/Q trace data, as a series of trace point values, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values.

1	<p>Returns the following scalar results:</p> <ol style="list-style-type: none"> <li>1. Sample Time is a floating point number representing the time between samples when using the trace queries (n=0, 2, and so forth).</li> <li>2. Mean Power is the mean power (in dBm). This is the power across the entire trace. If averaging is on, the power is for the latest acquisition.</li> <li>3. Mean Power Averaged is the power (in dBm) for N averages, if averaging is on. This is the power across the entire trace. If averaging is on, the power is for the latest acquisition. If averaging is off, the value of the mean power averaged is the same as the value of the mean power.</li> <li>4. Number of samples is the number of data points in the captured signal. This number is useful when performing a query on the signal (i.e. when n=0,2,etc.).</li> <li>5. Peak-to-mean ratio has units of dB. This is the ratio of the maximum signal level to the mean power. Valid values are only obtained with averaging turned off. If averaging is on, the peak-to-mean ratio is calculated using the highest peak value, rather than the displayed average peak value.</li> <li>6. Maximum value is the maximum of the most recently acquired data (in dBm).</li> <li>7. Minimum value is the minimum of the most recently acquired data (in dBm).</li> </ol>
2	<p>Returns trace point values of the entire captured signal envelope trace data. These data points are floating point numbers representing the power of the signal (in dBm). There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.</p>

### Waveform Measurement Description

Also available under basic Waveform measurement is an I/Q window, which shows the I and Q signal waveforms in parameters of voltage versus time to disclose the voltages which comprise the complex modulated waveform of a digital signal.

The waveform measurement can also be used to perform general purpose power measurements to a high degree of accuracy.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Ref Value

Sets the absolute power reference value. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

### Ref Value (RF Envelope View)

Sets the Y Scale reference value (in dBm) when the RF Envelope View is active. By default, the measurement determines the reference value with Auto Scaling. Entering a reference value manually turns Auto Scaling off.

<b>Remote Command</b>	:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <ampl>  :DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:WAV:VIEW:WIND:TRAC:Y:RLEV -50 dBm DISP:WAV:VIEW:WIND:TRAC:Y:RLEV?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dBm
State Saved	Saved in instrument state.
Range	-250.00 dBm to 250.00 dBm
Modified at S/W Revision	A.03.00

**Ref Value (I/Q Waveform View)**

Sets the Y Scale reference value (in volts) when the I/Q Waveform View is active. By default, the measurement determines the reference value with Auto Scaling. Entering a reference value manually turns Auto Scaling off.

<b>Remote Command</b>	:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVe l <voltage>  :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVe l?
Example	DISP:WAV:VIEW2:WIND:TRAC:Y:RLEV 25 V DISP:WAV:VIEW2:WIND:TRAC:Y:RLEV?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	0 V
State Saved	Saved in instrument state.
Min	-250 V
Max	250 V
Modified at S/W Revision	A.03.00

**Attenuation**

Accesses a menu of functions that enable you to change the attenuation settings. This key has a readback text that describes total attenuator value

This is only available when the selected input is RF.

See AMPTD Y Scale, “Attenuation” on page 1406 in the section “Common Measurement Functions” for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Range

Accesses a menu that enables you to change the baseband I/Q gain settings. This key has a readback text that describes gain range value. Refer to “AMPTD Y Scale” on page 1405 in the section “Common Measurement Functions” for more information.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Scale/Div

Sets the units per division of vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

### Scale/Div (RF Envelope View)

Sets the scale per division for the RF Envelope result waveform (time domain) measurements in the graph window.

<b>Remote Command</b>	:DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDI Vision <rel_ampl>  :DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDI Vision?
Example	DISP:WAV:VIEW:WIND:TRAC:Y:PDIV 5 DISP:WAV:VIEW:WIND:TRAC:Y:PDIV?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dB
State Saved	Saved in instrument state.
Range	0.10 dB to 20.00 dB
Modified at S/W Revision	A.03.00

**Scale/Div (I/Q Waveform View)**

Sets the scale per division for the I/Q signal waveform graph.

<b>Remote Command</b>	:DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVi sion <voltage>  :DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVi sion?
Example	DISP:WAV:VIEW2:WIND:TRAC:Y:PDIV 25mV DISP:WAV:VIEW2:WIND:TRAC:Y:PDIV?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Auto Scaling is On, this value is automatically determined by the measurement result.  When you set a value manually, Auto Scaling automatically changes to Off.
Preset	100.0 mV
State Saved	Saved in instrument state.
Min	1.0 nV
Max	20 V
Modified at S/W Revision	A.03.00

**Presel Center**

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the center frequency. This key does not appear in model numbers which do not contain an internal preselector (such as option 503 or all versions of the N9000A). Attempts to set via SCPI will be accepted without error. Queries will always return 0.

See “[Presel Center](#)” on page 1421 in the section "Common Measurement Functions" for more information.

This is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00



## Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

This key does not appear in model numbers which do not contain an internal preselector (such as option 503 or all versions of the N9000A). Attempts to set via SCPI will be accepted without error. Queries will always return 0.

See [“Preselector Adjust” on page 1422](#) in the section "Common Measurement Functions" for more information.

This key is only available when the selected input is RF.

Key Path	<b>AMPTD/Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Internal Preamp

Accesses keys that control the internal preamps. Turning on the preamp gives a better noise figure, but a reduced TOI to noise floor dynamic range. You can optimize this setting for your particular measurement. The LowBand selection needs to show "(3.0 GHz)" for all versions of N9000A and "(3.6 GHz)" for the other models.

See [“Internal Preamp” on page 1435](#) in the section "Common Measurement Functions" for more information.

This key is only available when the selected input is RF.

Key Path	<b>AMPTD Y Scale</b>
Initial S/W Revision	Prior to A.02.00

## Ref Position

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

### Ref Position (RF Envelope View)

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

<b>Remote Command</b>	:DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPO Sition TOP CENTer BOTTom  :DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPO Sition?
-----------------------	---

Waveform Measurement  
**AMPTD Y Scale**

Example	DISP:WAV:VIEW:WIND:TRAC:Y:RPOS CENT DISP:WAV:VIEW:WIND:TRAC:Y:RPOS?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	TOP
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Modified at S/W Revision	A.03.00

**Ref Position (I/Q Waveform View)**

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

<b>Remote Command</b>	:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSi tion TOP CENTer BOTTom  :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSi tion?
Example	DISP:WAV:VIEW2:WIND:TRAC:Y:RPOS CENT DISP:WAV:VIEW2:WIND:TRAC:Y:RPOS?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	CENT
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Modified at S/W Revision	A.03.00

**Auto Scaling**

Toggles the Auto Scaling function between On and Off. When the **Restart** front-panel key is pressed, this function automatically determines the scale per division and reference values based on the

measurement results.

<b>Remote Command</b>	:DISP:WAVEform:VIEW[1] 2:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON  :DISP:WAVEform:VIEW[1] 2:WINDow[1]:TRACe:Y[:SCALe]:COUPle?
Example	DISP:WAV:VIEW:WIND:TRAC:Y:COUP OFF DISP:WAV:VIEW:WIND:TRAC:Y:COUP?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically switches the scale per division and reference values into the defaults.  When the user sets a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.03.00

## **Auto Couple**

See “[Auto Couple](#)” on page 1437 in the section "Common Measurement Functions" for more information.

---

## BW

Accesses a menu that enables you to control the information bandwidth functions of the instrument. You can also select the filter type for the measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Digital IF Filter Parameters

#### Digital IF BW

Enables you to set the Digital IF (formerly Info BW) bandwidth of the instrument.

<b>Remote Command</b>	[ :SENSE ] :WAVEform:DIF:BA NDwidth <freq> [ :SENSE ] :WAVEform:DIF:BA NDwidth?
Remote Command Notes	You must be in a mode that includes the Waveform measurements to use this command. Use INSTRument:SElect to set the mode.
Example	WAV:DIF:BA ND 1kHz WAV:DIF:BA ND?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>BW</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	Max value depends on the IF Path Selection
Dependencies	For applications that have the IF Path Selection menu such as the BASIC mode, if IF Path Auto is OFF, the maximum value depends on which IF Path is currently selected. If 10 MHz, 25 MHz, 40 MHz, or 140 MHz paths are selected, the maximum value of this parameter will be 10, 25, 40 or 140 MHz, respectively. If IF Path Auto is ON, the maximum value will be the maximum Digital IF BW available in the instrument regardless of the current IF Path Selection. For example, say that the instrument had the options B25, B40 and B1X installed. The maximum available Digital IF BW of the instrument is 140 MHz. Thus, if IF Path Auto is ON and IF Path Selection is 25 MHz, the maximum Digital IF BW is not limited to 25 MHz but is 140 MHz.

Preset	All except the following list: 100 kHz Basic: 1 MHz GSM/EDGE: 510kHz TDSCDMA: 1.3MHZ 1xEVDO: 1.3MHz DVB-T/H: 8.0MHz DTMB: 8.0MHz ISDB-T: 6.0MHz CMMB: 8.0MHz
State Saved	Saved in instrument state.
Min	10 Hz
Max	Hardware Dependent: RF Input: No Option = 10 MHz Option B25 = 25 MHz Option B40 = 40 MHz Option B1X = 140 MHz I/Q Input: No Option = 10 MHz per channel (20 MHz for I+jQ) Option B25 = 25 MHz per channel (50 MHz for I+jQ) Option S40 = 40 MHz per channel (80 MHz for I+jQ)
Backwards Compatibility SCPI	[ :SENSe]:WAVEform:BANDwidth[:RESolution] [:SENSe]:WAVEform:BWIDth[:RESolution]
Modified at S/W Revision	A.03.00

**Filter Type**

Selects the type of bandwidth filter that is used.

Besides the Gaussian filter shape, a variety of other filter types are available with variable alpha settings for maximum control over the filter shape.

<b>Remote Command</b>	[ :SENSe]:WAVEform:DIF:FILTer:TYPE GAUSSian FLATtop [ :SENSe]:WAVEform:DIF:FILTer:TYPE? (With DIF40 and/or WBDIF) [ :SENSe]:WAVEform:DIF:FILTer:TYPE GAUSSian FLATtop SNYquist RSNYquist RCOSine RRCosine [ :SENSe]:WAVEform:DIF:FILTer:TYPE?
-----------------------	--

Remote Command Notes	You must be in a mode that includes the Waveform measurements to use this command. Use INSTRUMENT:SElect to set the mode.
Example	WAV:DIF:FILT:TYPE GAUS WAV:DIF:FILT:TYPE?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>BW</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Dependencies	Gaussian and Flattop are available in all DIF configurations. For the other filter types, the filters are only available with PXA or when Option B40 is installed.
Preset	BASIC with B40 or B1X: FLATtop All other apps: GAUSSian
State Saved	Saved in instrument state.
Range	Gaussian FlatTop (With Digital IF and/or Option B40 or B1X) Gaussian Flattop Short nyquist Root Short Nquist Raised Cosine Root RaisedCosine
Backwards Compatibility SCPI	[:SENSe]:WAVeform:BANDwidth:SHApe [:SENSe]:WAVeform:BWIDth:SHApe [:SENSe]:WAVeform:BANDwidth BWIDth[:RESolution]:TYPE
Modified at S/W Revision	A.03.00

### Filter Type Bwcc

This parameter is strictly for Bwcc purposes.

<b>Remote Command:</b>	[:SENSe]:WAVeform:WBIF:FILTer[:TYPE]GAUSSian NONE NYQuist RNYQuist RCOSine RRCosine [:SENSe]:WAVeform:WBIF:FILTer[:TYPE]?
Preset:	BASIC with B40 or B1X: FLATtop All other apps: GAUSSian

### Gaussian

With a PXA or Option B40, the capability for arbitrary Digital IF bandwidths is available. However, for instruments without the Digital IF or the Option B40 or B1X board, the selectable Gaussian filter bandwidths are predetermined in the following list. There are 160 Info BWs (RBWs). They are arranged in a 24-per-decade sequence from 1 Hz through 3 MHz, plus the 4, 5, 6 and 8 MHz settings.

The table in the section [“Gaussian filters” on page 1348](#) lists all 160 Gaussian filter types.

Gaussian filters

Normal (-3 dB)	-6 dB	Noise	Impulse
1.0 Hz	1.41 Hz	1.06 Hz	1.49 Hz
1.1 Hz	1.55 Hz	1.16 Hz	1.63 Hz
1.2 Hz	1.69 Hz	1.27 Hz	1.77 Hz
1.3 Hz	1.83 Hz	1.37 Hz	1.92 Hz
1.5 Hz	2.11 Hz	1.59 Hz	2.22 Hz
1.6 Hz	2.25 Hz	1.69 Hz	2.37 Hz
1.8 Hz	2.53 Hz	1.90 Hz	2.66 Hz
2.0 Hz	2.81 Hz	2.12 Hz	2.96 Hz
2.2 Hz	3.09 Hz	2.33 Hz	3.25 Hz
2.4 Hz	3.38 Hz	2.54 Hz	3.55 Hz
2.7 Hz	3.80 Hz	2.86 Hz	3.99 Hz
3.0 Hz	4.22 Hz	3.17 Hz	4.44 Hz
3.3 Hz	4.64 Hz	3.49 Hz	4.88 Hz
3.6 Hz	5.06 Hz	3.81 Hz	5.32 Hz
3.9 Hz	5.49 Hz	4.12 Hz	5.77 Hz
4.3 Hz	6.05 Hz	4.55 Hz	6.36 Hz
4.7 Hz	6.61 Hz	4.97 Hz	6.95 Hz
5.1 Hz	7.17 Hz	5.39 Hz	7.54 Hz
5.6 Hz	7.87 Hz	5.92 Hz	8.27 Hz
6.2 Hz	8.72 Hz	6.56 Hz	9.17 Hz
6.8 Hz	9.55 Hz	7.18 Hz	10.0 Hz
7.5 Hz	10.5 Hz	7.93 Hz	11.1 Hz
8.2 Hz	11.5 Hz	8.66 Hz	12.1 Hz
9.1 Hz	12.8 Hz	9.64 Hz	13.5 Hz
10 Hz	14.0 Hz	10.6 Hz	14.8 Hz
11 Hz	15.4 Hz	11.6 Hz	16.2 Hz
12 Hz	16.9 Hz	12.7 Hz	17.7 Hz
13 Hz	18.3 Hz	13.7 Hz	19.2 Hz
15 Hz	21.1 Hz	15.9 Hz	22.2 Hz



<b>Normal (-3 dB)</b>	<b>-6 dB</b>	<b>Noise</b>	<b>Impulse</b>
16 Hz	22.5 Hz	16.9 Hz	23.7 Hz
18 Hz	25.3 Hz	19.1 Hz	26.6 Hz
20 Hz	28.1 Hz	21.1 Hz	29.5 Hz
22 Hz	30.9 Hz	23.2 Hz	32.5 Hz
24 Hz	33.8 Hz	25.4 Hz	35.5 Hz
27 Hz	38.0 Hz	28.6 Hz	40.0 Hz
30 Hz	42.3 Hz	31.8 Hz	44.5 Hz
33 Hz	46.3 Hz	34.8 Hz	48.7 Hz
36 Hz	50.7 Hz	38.1 Hz	53.3 Hz
39 Hz	54.9 Hz	41.3 Hz	57.7 Hz
43 Hz	60.5 Hz	45.5 Hz	63.6 Hz
47 Hz	66.1 Hz	49.7 Hz	69.5 Hz
51 Hz	71.7 Hz	53.9 Hz	75.3 Hz
56 Hz	78.9 Hz	59.3 Hz	83.0 Hz
62 Hz	87.3 Hz	65.6 Hz	91.7 Hz
68 Hz	95.5 Hz	71.8 Hz	100 Hz
75 Hz	106 Hz	79.4 Hz	111 Hz
82 Hz	115 Hz	86.8 Hz	121 Hz
91 Hz	128 Hz	96.4 Hz	135 Hz
100 Hz	141 Hz	106 Hz	148 Hz
110 Hz	154 Hz	116 Hz	162 Hz
120 Hz	169 Hz	127 Hz	178 Hz
130 Hz	183 Hz	137 Hz	192 Hz
150 Hz	211 Hz	159 Hz	222 Hz
160 Hz	225 Hz	169 Hz	237 Hz
180 Hz	253 Hz	190 Hz	266 Hz
200 Hz	281 Hz	211 Hz	295 Hz
220 Hz	309 Hz	232 Hz	325 Hz
240 Hz	337 Hz	254 Hz	355 Hz
270 Hz	380 Hz	286 Hz	400 Hz

Normal (-3 dB)	-6 dB	Noise	Impulse
300 Hz	422 Hz	317 Hz	444 Hz
330 Hz	463 Hz	348 Hz	487 Hz
360 Hz	507 Hz	381 Hz	533 Hz
390 Hz	550 Hz	413 Hz	578 Hz
430 Hz	605 Hz	455 Hz	636 Hz
470 Hz	662 Hz	498 Hz	696 Hz
510 Hz	718 Hz	540 Hz	755 Hz
560 Hz	789 Hz	593 Hz	829 Hz
620 Hz	872 Hz	655 Hz	916 Hz
680 Hz	958 Hz	720 Hz	1.01 kHz
750 Hz	1.06 kHz	794 Hz	1.11 kHz
820 Hz	1.15 kHz	866 Hz	1.21 kHz
910 Hz	1.28 kHz	964 Hz	1.35 kHz
1.0 kHz	1.41 kHz	1.06 kHz	1.48 kHz
1.1 kHz	1.55 kHz	1.17 kHz	1.63 kHz
1.2 kHz	1.69 kHz	1.27 kHz	1.78 kHz
1.3 kHz	1.83 kHz	1.38 kHz	1.93 kHz
1.5 kHz	2.11 kHz	1.59 kHz	2.22 kHz
1.6 kHz	2.26 kHz	1.70 kHz	2.37 kHz
1.8 kHz	2.54 kHz	1.91 kHz	2.67 kHz
2.0 kHz	2.82 kHz	2.12 kHz	2.96 kHz
2.2 kHz	3.10 kHz	2.33 kHz	3.26 kHz
2.4 kHz	3.38 kHz	2.54 kHz	3.56 kHz
2.7 kHz	3.80 kHz	2.86 kHz	4.00 kHz
3.0 kHz	4.23 kHz	3.18 kHz	4.44 kHz
3.3 kHz	4.65 kHz	3.49 kHz	4.89 kHz
3.6 kHz	5.06 kHz	3.81 kHz	5.32 kHz
3.9 kHz	5.48 kHz	4.12 kHz	5.76 kHz
4.3 kHz	6.07 kHz	4.56 kHz	6.38 kHz
4.7 kHz	6.62 kHz	4.98 kHz	6.96 kHz

<b>Normal (-3 dB)</b>	<b>-6 dB</b>	<b>Noise</b>	<b>Impulse</b>
5.1 kHz	7.16 kHz	5.38 kHz	7.53 kHz
5.6 kHz	7.87 kHz	5.92 kHz	8.27 kHz
6.2 kHz	8.74 kHz	6.57 kHz	9.18 kHz
6.8 kHz	9.58 kHz	7.20 kHz	10.1 kHz
7.5 kHz	10.5 kHz	7.92 kHz	11.1 kHz
8.2 kHz	11.5 kHz	8.66 kHz	12.1 kHz
9.1 kHz	12.8 kHz	9.64 kHz	13.5 kHz
10 kHz	14.1 kHz	10.6 kHz	14.8 kHz
11 kHz	15.4 kHz	11.6 kHz	16.2 kHz
12 kHz	16.9 kHz	12.7 kHz	17.8 kHz
13 kHz	18.3 kHz	13.7 kHz	19.2 kHz
15 kHz	21.2 kHz	15.9 kHz	22.3 kHz
16 kHz	22.4 kHz	16.8 kHz	23.5 kHz
18 kHz	25.2 kHz	19.0 kHz	26.5 kHz
20 kHz	28.4 kHz	21.3 kHz	29.8 kHz
22 kHz	31.2 kHz	23.4 kHz	32.8 kHz
24 kHz	33.8 kHz	25.4 kHz	35.6 kHz
27 kHz	38.1 kHz	28.7 kHz	40.1 kHz
30 kHz	42.1 kHz	31.7 kHz	44.3 kHz
33 kHz	46.8 kHz	35.2 kHz	49.2 kHz
36 kHz	50.1 kHz	37.7 kHz	52.7 kHz
39 kHz	54.8 kHz	41.2 kHz	57.6 kHz
43 kHz	61.1 kHz	46.0 kHz	64.3 kHz
47 kHz	66.2 kHz	49.8 kHz	69.6 kHz
51 kHz	72.3 kHz	54.3 kHz	76.0 kHz
56 kHz	79.5 kHz	59.8 kHz	83.6 kHz
62 kHz	86.3 kHz	64.9 kHz	90.8 kHz
68 kHz	96.5 kHz	72.6 kHz	101 kHz
75 kHz	106 kHz	79.7 kHz	111 kHz
82 kHz	114 kHz	86.0 kHz	120 kHz

## Waveform Measurement

### BW

Normal (-3 dB)	-6 dB	Noise	Impulse
91 kHz	129 kHz	97.3 kHz	136 kHz
100 kHz	140 kHz	105 kHz	147 kHz
110 kHz	154 kHz	116 kHz	162 kHz
120 kHz	169 kHz	127 kHz	178 kHz
130 kHz	182 kHz	137 kHz	192 kHz
150 kHz	210 kHz	158 kHz	221 kHz
160 kHz	223 kHz	168 kHz	235 kHz
180 kHz	253 kHz	190 kHz	266 kHz
200 kHz	280 kHz	211 kHz	295 kHz
220 kHz	308 kHz	232 kHz	324 kHz
240 kHz	336 kHz	253 kHz	353 kHz
270 kHz	380 kHz	286 kHz	400 kHz
300 kHz	420 kHz	316 kHz	441 kHz
330 kHz	467 kHz	352 kHz	491 kHz
360 kHz	506 kHz	380 kHz	532 kHz
390 kHz	550 kHz	414 kHz	578 kHz
430 kHz	599 kHz	451 kHz	629 kHz
470 kHz	660 kHz	497 kHz	693 kHz
510 kHz	715 kHz	538 kHz	750 kHz
560 kHz	786 kHz	592 kHz	826 kHz
620 kHz	867 kHz	653 kHz	912 kHz
680 kHz	952 kHz	717 kHz	1.00 MHz
750 kHz	1.05 MHz	791 kHz	1.10 MHz
820 kHz	1.14 MHz	859 kHz	1.19 MHz
910 kHz	1.27 MHz	960 kHz	1.34 MHz
1.0 MHz	1.40 MHz	1.06 MHz	1.47 MHz
1.1 MHz	1.53 MHz	1.15 MHz	1.61 MHz

<b>Normal (-3 dB)</b>	<b>-6 dB</b>	<b>Noise</b>	<b>Impulse</b>
1.2 MHz	1.66 MHz	1.26 MHz	1.75 MHz
1.3 MHz	1.80 MHz	1.36 MHz	1.89 MHz
1.5 MHz	2.06 MHz	1.56 MHz	2.17 MHz
1.6 MHz	2.19 MHz	1.66 MHz	2.29 MHz
1.8 MHz	2.51 MHz	1.91 MHz	2.63 MHz
2.0 MHz	2.75 MHz	2.10 MHz	2.88 MHz
2.2 MHz	3.00 MHz	2.30 MHz	3.14 MHz
2.4 MHz	3.30 MHz	2.54 MHz	3.45 MHz
2.7 MHz	3.63 MHz	2.81 MHz	3.78 MHz
3.0 MHz	4.09 MHz	3.18 MHz	4.22 MHz
4 MHz	5.30 MHz	4.23 MHz	5.30 MHz
5 MHz	5.78 MHz	4.81 MHz	5.41 MHz
6 MHz	6.31 MHz	5.50 MHz	5.82 MHz
8 MHz	8.07 MHz	7.21 MHz	6.90 MHz

### **Flattop**

With a PXA or Option B40, the capability for arbitrary Digital IF bandwidths is available. However, for instruments without the Digital IF or the Option B40 or B1X board, the selectable Flattop filter bandwidths are predefined in the following table. There are 134 Digital IF BWs (RBWs).

The table in the section [“Flattop Filters” on page 1354](#) lists all 134 Flattop filter types.

**Flattop Filters**

3.0 Hz	3.3 Hz	3.6 Hz	3.9 Hz
4.3 Hz	4.7 Hz	5.1 Hz	5.6 Hz
6.2 Hz	6.8 Hz	7.5 Hz	8.2 Hz
9.1 Hz	10 Hz	11 Hz	12 Hz
13 Hz	15 Hz	16 Hz	18 Hz
20 Hz	22 Hz	24 Hz	27 Hz
30 Hz	33 Hz	36 Hz	39 Hz
43 Hz	47 Hz	51 Hz	56 Hz
62 Hz	68 Hz	75 Hz	82 Hz
91 Hz	100 Hz	110 Hz	120 Hz
130 Hz	150 Hz	160 Hz	180 Hz
200 Hz	220 Hz	240 Hz	270 Hz
300 Hz	330 Hz	360 Hz	390 Hz
430 Hz	470 Hz	510 Hz	560 Hz
620 Hz	680 Hz	750 Hz	820 Hz
910 Hz	1.0 kHz	1.1 kHz	1.2 kHz
1.3 kHz	1.5 kHz	1.6 kHz	1.8 kHz
2.0 kHz	2.2 kHz	2.4 kHz	2.7 kHz
3.0 kHz	3.3 kHz	3.6 kHz	3.9 kHz
4.3 kHz	4.7 kHz	5.1 kHz	5.6 kHz
6.2 kHz	6.8 kHz	7.5 kHz	8.2 kHz
9.1 kHz	10 kHz	11 kHz	12 kHz
13 kHz	15 kHz	16 kHz	18 kHz
20 kHz	22 kHz	24 kHz	27 kHz
30 kHz	33 kHz	36 kHz	39 kHz
43 kHz	47 kHz	51 kHz	56 kHz
62 kHz	68 kHz	75 kHz	82 kHz
91 kHz	100 kHz	110 kHz	120 kHz
130 kHz	150 kHz	160 kHz	180 kHz
200 kHz	220 kHz	240 kHz	270 kHz

300 kHz	330 kHz	390 kHz	430 kHz
510 kHz	620 kHz	750 kHz	1.0 MHz
1.5 MHz	3.0 MHz	4 MHz	5 MHz
6 MHz	8 MHz		

**Filter BW**

This feature is only available with the PXA or when Option B40 is installed.

Key Path	<b>BW</b>
Mode	BASIC
<b>Remote Command</b>	[ :SENSE]:WAVeform:DIF:FILTer:BANDwidth <freq> [ :SENSE]:WAVeform:DIF:FILTer:BANDwidth? [ :SENSE]:WAVeform:DIF:FILTer:BANDwidth:AUTO ON OFF 1 0 [ :SENSE]:WAVeform:DIF:FILTer:BANDwidth:AUTO?
Example	WAV:DIF:FILT:BAND 1MHz WAV:DIF:FILT:BAND? WAV:DIF:FILT:BAND:AUTO 0 WAV:DIF:FILT:BAND:AUTO?
Notes	You must be in the IQ Analyzer (Basic) mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	This feature is only available with the PXA or when Option B40 is installed.
Couplings	Sets the same value as the current Digital IF BW value upon a preset or when Channel Filter Bandwidth Auto is ON.
Preset	Same value as Digital IF BW ON
State Saved	Saved in instrument state.
Min	10 Hz
Max	Clipped to the current Digital IF BW value.
Initial S/W Revision	A.04.00

**Channel Filter Bandwidth Bwcc (Remote Command Only)**

This is the backward compatibility command for Channel Filter Bandwidth.

Mode	BASIC
------	-------

<b>Remote Command</b>	[ :SENSE]:WAVEform:WBIF:FILTer:BANDwidth <real> [ :SENSE]:WAVEform:WBIF:FILTer:BANDwidth?
Example	WAV:WBIF:FILT:BAND 0.3 WAV:WBIF:FILT:BAND?
Notes	You must be in the IQ Analyzer (Basic) mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	This feature is only available with the PXA or when Option B40 is installed.
Couplings	The value is determined by the following equation.  ChannelFilterBwBwcc = (ChannelFilterBw/(DigitalIFBw*OverSampleRatio))
Preset	0.8
State Saved	Saved in instrument state.
Min	0.01
Max	1.0
Initial S/W Revision	A.04.00

### Filter Alpha

Sets the filter alpha for the DIF filter. This feature is only available with the PXA or when Option B40 is installed.

Key Path	<b>BW</b>
Mode	BASIC
<b>Remote Command</b>	[ :SENSE]:WAVEform:DIF:FILTer:ALPHa <real> [ :SENSE]:WAVEform:DIF:FILTer:ALPHa?
Example	WAV:DIF:FILT:ALPH 0.5 WAV:DIF:FILT:ALPH?
Notes	You must be in the IQ Analyzer (Basic) mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	This feature is only available with the PXA or when Option B40 is installed.
Preset	0.2
State Saved	Saved in instrument state.
Min	0.01
Max	1.00



Backwards Compatibility SCPI	[[:SENSE]:WAVEform:WBIF:FILTer:ALPHa
------------------------------	--------------------------------------

## **Cont**

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1451 in the section "Common Measurement Functions" for more information.

---

## **FREQ Channel**

See [“FREQ/Channel” on page 1453](#) in the section "Common Measurement Functions" for more information.

## **Input/Output**

See “[Input/Output](#)” on page 1459 in the section "Common Measurement Functions" for more information.

## Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

See “Marker” on page 1531 in the section "Common Measurement Functions" for more information

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Type

Sets the marker control mode to **Normal**, **Delta**, **Fixed** or **Off**. All interactions and dependencies detailed under the key description are enforced when the remote command is sent. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, the Marker X Axis Value appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is Off, there is no active function and the active function is turned off.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: MODE POSITION DELTA OFF  :CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: MODE?
Example	CALC:WAV:MARK:MODE OFF CALC:WAV:MARK:MODE?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Marker</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD

Notes	<p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the <b>Marker Trace</b> rules. At the same time, <b>Marker X Axis Value</b> appears on the Active Function area.</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision.</p> <p>You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	=OFF
Preset	OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Modified at S/W Revision	A.03.00

### Marker X Axis Value (Remote Command Only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

<b>Remote Command</b>	<pre>:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X &lt;time&gt;</pre> <pre>:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X?</pre>
Example	<pre>CALC:WAV:MARK:X 50 ms</pre> <pre>CALC:WAV:MARK:X?</pre>
Initial S/W Revision	Prior to A.02.00
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	<p>If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated. If the specified marker is Fixed and a Marker Function is on, error -221 "Settings conflict; cannot adjust Fixed marker while Marker Function is on" is generated.</p> <p>The query returns the marker's absolute X Axis value if the control mode is <b>Normal</b>, or the offset from the marker's reference marker if the control mode is <b>Delta</b>. The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b>, seconds for <b>Period</b> and <b>Time</b>. If the marker is <b>Off</b> the response is not a number.</p> <p>You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode.</p>

Preset	0
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.03.00

### Marker X Axis Position (Remote Command Only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta**. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X:POSition <real>  :CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X:POSition?
Example	CALC:WAV:MARK:X:POS 500 CALC:WAV:MARK:X:POS?
Initial S/W Revision	Prior to A.02.00
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points.  You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	0
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Modified at S/W Revision	A.03.00

## Marker Y Axis Value (Remote Command Only)

Queries the marker Y Axis value in the current marker Y Axis unit.

Remote Command	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:WAV:MARK11:Y?
Initial S/W Revision	Prior to A.02.00
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTE-TDD
Notes	<p>When the marker is on, IQ waveform returns I and Q values.</p> <p>Case #1 - Trace RF: returns a single double value.</p> <pre>&gt;:CALC:WAV:MARK1:Y? -2.402406506109E+001</pre> <p>Case #2 - Trace IQ: returns a double array of two values, the first is X, and the second is Y.</p> <pre>&gt;:CALC:WAV:MARK1:Y? -3.006944493834E-003,+9.9870666467354E-004</pre> <p>You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	Result dependant on the marker setup and signal source.
State Saved	No
Backwards Compatibility SCPI	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:RESuIt?
Modified at S/W Revision	A.03.00

## Properties

Accesses the marker properties menu.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

## Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00



## Relative To

Selects the marker that the selected marker is relative to (its reference marker).

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>  :CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?
Example	CALC:WAV:MARK:REF 8 CALC:WAV:MARK:REF?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Marker, Properties</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."  When queried a single value is returned (the specified marker numbers relative marker).  You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Modified at S/W Revision	A.03.00

## Marker Trace

Assigns the specified marker to the designated trace.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe RFENvelope IQ  :CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?
Example	CALC:WAV:MARK:TRAC RFEN CALC:WAV:MARK:TRAC?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Marker</b>

Waveform Measurement  
Marker

Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	Assigns the specified marker to the designated trace.  You must be in a mode that includes the Waveform measurement to use this command. Use INSTRUMENT:SELEct to set the mode.
Preset	RFEN
State Saved	Saved in instrument state.
Range	RF Envelope IQ Waveform
Modified at S/W Revision	A.03.00

### Couple Markers

Toggles the state of the markers to be coupled On or Off. When this function is true (On), moving any marker causes an equal X-axis movement of every other marker which is not **Off**. “Equal X-axis movement” refers to the difference between each marker’s X-Axis value (in the fundamental x-axis units of the trace that marker is on) and the X-Axis value of the marker being moved (in the same fundamental x-axis units) are preserved.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer:COUple[:STATe] ON OFF 1 0 :CALCulate:WAVEform:MARKer:COUple[:STATe]?
Example	CALC:WAV:MARK:COUP ON CALC:WAV:MARK:COUP ON
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Marker</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRUMENT:SELEct to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.03.00

### All Markers Off

Turns off all markers.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer:AOFF
Example	CALC:WAV:MARK:AOFF

Initial S/W Revision	Prior to A.02.00
Key Path	<b>Marker</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Modified at S/W Revision	A.03.00

### Backward Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker which is OFF to state ON or 1 puts it in Normal mode and places it at the center of the screen.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATE OFF ON 0 1  :CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATE?
Example	CALC:WAV:MARK:STAT ON CALC:WAV:MARK:STAT?
Initial S/W Revision	Prior to A.02.00
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.03.00

## Marker Function

Accesses a menu of marker functions that perform post-processing operations on markers based on the measurement specifications. Marker functions are distinct from Measurement functions, which automatically perform complex sequences of setup, data acquisition, and display operations in order to measure specified signal characteristics. Marker Functions are specified for each individual marker and may be turned on individually for each marker.

The **Marker Function** menu controls which marker functions are turned on and allows you to adjust the setup parameters for each function. These parameters include the following, but only one parameter can be assigned to a given marker:

- **Marker Noise**
- **Band/Interval Power**
- **Band/Interval Density**
- **Marker Function Off**

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Select Marker

Displays 12 markers available for selection.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

### Marker Function Type

Sets the marker control function type to, Marker Noise, Band/Interval Power, Band Interval Density, or Marker Function Off

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: FUNction BPOwer BDENsity OFF  :CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: FUNction?
Example	CALC:WAV:MARK:FUNC BPOW CALC:WAV:MARK:FUNC?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Marker Function</b>

Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	=OFF
Preset	OFF
State Saved	Saved in instrument state.
Range	Band/Interval Power Band Interval Density Marker Function Off
Modified at S/W Revision	A.03.00

## Band Adjust

Accesses a menu that enables you to set the frequency span width and the left and right edge, or time values, for the band or interval of the selected marker.

Key Path	<b>Marker Function</b>
Initial S/W Revision	Prior to A.02.00

## Band/Interval Span for Time Domain

Sets the width of the frequency span for the selected marker.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:BAND:SPAN <time>  :CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:BAND:SPAN?
Example	CALC:WAV:MARK:FUNC:BAND:SPAN 20 ms CALC:WAV:MARK:FUNC:BAND:SPAN?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Marker Function</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode.
Couplings	Changing the Band/Interval Span necessarily changes the Band/Interval Left and Band/Interval Right values
Preset	0
Preset	10% of Meas Time
State Saved	Saved in instrument state.

Waveform Measurement  
**Marker Function**

Min	0
Max	100s
Backwards Compatibility SCPI	:CALCulate:WAVEform:MARKer[1] 2 3 4:X:SPAN
Modified at S/W Revision	A.03.00

**Band/Interval Left for Time Domain**

Sets the left edge frequency or time value for the band of the selected marker.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:BAND:LEFT <time>  :CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:BAND:LEFT?
Example	CALC:WAV:MARK12:FUNC:BAND:LEFT 1 s CALC:WAV:MARK12:FUNC:BAND:LEFT?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Marker Function</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	Changing the Band/Interval Left necessarily changes the Band/Interval Span and Band/Interval Right values
Preset	0
Preset	5% of Meas Time
State Saved	Saved in instrument state.
Min	0
Max	100s
Modified at S/W Revision	A.03.00

**Band/Interval Right for Time Domain**

Sets the right edge frequency or time value for the band of the selected marker.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:BAND:RIGHT <time>  :CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:BAND:RIGHT?
-----------------------	--

Example	CALC:WAV:MARK12:FUNC:BAND:RIGH 1 s CALC:WAV:MARK12:FUNC:BAND:RIGH?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Marker Function</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	Changing the Band/Interval Left necessarily changes the Band/Interval Span and Band/Interval Right values
Preset	0
Preset	5% of Meas Time
State Saved	Saved in instrument state.
Min	0
Max	100s
Modified at S/W Revision	A.03.00

## Marker To

There is no 'Marker To' functionality supported in Waveform measurements. The front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00



---

## **Meas**

See [“Meas” on page 1575](#) in the section "Common Measurement Functions" for more information.

## Meas Setup

Displays the setup menu keys that enable you to control the parameters for the current measurement.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Average/Hold Num

Sets the number of sweeps (average counts) that are averaged. After the specified number of sweeps, the averaging mode (terminal control) setting determines the averaging action.

<b>Remote Command</b>	[ :SENSe]:WAVeform:AVERAge:COUNT <integer> [ :SENSe]:WAVeform:AVERAge:COUNT? [ :SENSe]:WAVeform:AVERAge[:STATe] OFF ON 0 1 [ :SENSe]:WAVeform:AVERAge[:STATe]?
Example	WAV:AVER:COUN 1001 WAV:AVER:COUN? WAV:AVER ON WAV:AVER?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Meas Setup</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	10 OFF
State Saved	Saved in instrument state.
Min	1
Max	20001
Modified at S/W Revision	A.03.00

### Avg Mode

Enables you to set the averaging mode.

When set to Exponential (Exp) the measurement averaging continues using the specified number of

averages to compute each averaged value. The average is displayed at the end of each sweep.

When set to Repeat, the measurement resets the average counter each time the specified number of averages is reached.

<b>Remote Command</b>	[ :SENSE] :WAVEform:AVERage:TCONtrol EXPonential   REPEAT [ :SENSE] :WAVEform:AVERage:TCONtrol?
Example	WAV:AVER:TCON REP WAV:AVER:TCON?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Meas Setup</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	EXPonential
State Saved	Saved in instrument state.
Range	Exp Repeat
Modified at S/W Revision	A.03.00

## Avg Type

Selects the type of averaging.

<b>Remote Command</b>	[ :SENSE] :WAVEform:AVERage:TYPE LOG   MAXimum   MINimum   RMS   SCALar [ :SENSE] :WAVEform:AVERage:TYPE?
Example	WAV:AVER:TYPE MAX WAV:AVER:TYPE?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Meas Setup</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	The SCPI selection of MAX and MIN are kept for BWCC, but they are removed from the front panel access because they are not an Average function.  You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	RMS

State Saved	Saved in instrument state.
Range	Pwr Avg(RMS) Log-Pwr Avg(Video) Voltage Avg
Modified at S/W Revision	A.03.00

### Fast Hardware Averaging (Time Avg)

The PXA wide bandwidth digital IF paths have hardware designed to average time traces as they are acquired. This capability can be used with the precision periodic times (frame trigger) described in “[Periodic Timer \(Frame Trigger\)](#)” on page 1776. Together they do complex time domain averaging that can reduce the noise on your signal up to 30 dB.

In order to perform the averaging, the input signal has to be repetitive and the phase must be fixed. This means that the signal source itself has to be repetitive and locked to a common 10 MHz reference with the analyzer. Any up or down converters in the signal path must also be locked to the common 10 MHz reference.

In addition, the signal repetition rate has to be known and it has to be an integer number of output samples. (See “[Periodic Timer \(Frame Trigger\)](#)” on page 1776.) If you are using the waveform measurement, you can adjust the sample rate to match the signal period. Sometimes the signal period is not an integer number of microseconds (for example, a repetition rate of 27 1/3 kHz). In that case, try using a frame rate that is an integer number of repetitions of the signal rate.

---

**NOTE** The hardware averaging can only be used with the periodic timer (frame trigger).

---

Enter the number of time averages by selecting **Meas Setup, Time Avg Num**. When the hardware averager is used it adds only a few microseconds of overhead. In most cases, the acquisition time will be determined by the frame period. For example, to take 100 averages at a 100 microsecond frame rate will take very close to  $100 \times 100 \times 10^{-6} = 10$  ms.

When time averaging is enabled, each trace update represents N fresh data acquisitions averaged together, where N is the number of averages. Individual time (trace) data is not accessible. In the spectrum measurement, time averaging is done prior to the standard software averaging done with the application. The yellow trace in this measurement shows the result of the time averaging. The blue trace show the result of trace-to-trace averaging, if enabled under **Meas Setup, Avg/Hold Num**.

---

**NOTE** If the signal magnitude drops when time averaging is turned on, the frame trigger is not set to the correct period or phase reverences are not locked. Turn time averaging off by setting **Time Avg Num** to 1. Then, adjust the frame timer period and/or the sample rate to get the correct period. Note that the frame triggering must be operating properly. The time and frequency traces will appear to freeze with a small amount of noise visible if the trigger period is right.

---

## Time Avg Num

Sets the number of HW averages to be executed per each data acquisition.

<b>Remote Command</b>	[ :SENSe] :WAVeform:AVERage:TACount <integer> [ :SENSe] :WAVeform:AVERage:TACount?
Example	WAV:AVER:TAC 10 WAV:AVER:TAC?
Default Unit	Enter
Key Path	<b>Meas Setup</b>
Mode	BASIC
Notes	This feature is only available with the PXA or when Option B40 is installed.
Preset	1
State Saved	Saved in instrument state.
State Saved	Saved in state
Min	1
Max	65535

## Sample Rate

The user is able to set an arbitrary sample rate for the acquired data to be processed.

Key Path	<b>Meas Setup</b>
Mode	BASIC
<b>Remote Command</b>	[ :SENSe] :WAVeform:SRATe <freq> [ :SENSe] :WAVeform:SRATe?
Example	WAV:SRAT 1.3636 MHz
Restriction and Notes	Command and query available with PXA or when Option B40 is installed. For other configurations, only the query is available.
Couplings	The coupling between Sample Rate and IF BW depends on Physics implementation.
Preset	125.0 kHz
Min	12.5 Hz

Max	Option B25 10 MHz path: 15 MHz Option B25 25MHz path: 45 MHz Digital IF 10 MHz path: 12.5 MHz Digital IF 25 MHz path: 31.25 MHz Digital IF0 40 MHz path: 50 MHz Option B40 or B1X 140 MHz path: 175 MHz
-----	--

### Sample Period (Aperture) Setting (Remote Command Only)

Returns the time between samples (sample period or aperture).

This value is RUI only and query only and coupled to the sample rate.

Mode	BASIC
<b>Remote Command</b>	[ :SENSE] :WAVeform:APERture?
Example	WAV:APER?
Notes	SCPI only. Query only.
Couplings	Coupled to Sample Rate by the following equation. Sample Period = 1/(Sample Rate)
Preset	1/(Sample Rate Default)
Min	1/(Max Sample Rate)
Max	1/(Min Sample Rate)

### Meas Time

Sets how long the measurement is performed. X Scale only changes the representation of the display.

<b>Remote Command</b>	[ :SENSE] :WAVeform:SWEep:TIME <time> [ :SENSE] :WAVeform:SWEep:TIME?
Example	WAV:SWE:TIME 50 ms WAV:SWE:TIME?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Meas Setup</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD

Notes	Specifies and returns how long the measurement is performed. It is the time record length of the measurement waveform. The Max time may be reduced when the sample frequency is high due to the memory limitation.  You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	2.000000 ms
State Saved	Saved in instrument state.
Range	1.000 (s to 100.00 s)
Modified at S/W Revision	A.03.00

## Meas Preset

Restores all the measurement parameters to their default values.

<b>Remote Command</b>	:CONFigure:WAVEform
Example	CONF:WAV
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Meas Setup</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	Restore default values of all parameters.  You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Modified at S/W Revision	A.03.00

## Advanced

Accesses a menu of “advanced” functions that are used for specific applications. These settings should not be changed for most measurements.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

## ADC Dither

Accesses the ADC Dither control menu.

Key Path	<b>Meas Setup, Advanced</b>
Initial S/W Revision	Prior to A.02.00

### ADC Dither Auto

Sets ADC dithering to automatically select whether dithering is needed.

<b>Remote Command</b>	[ :SENSE] :WAVeform:ADC:DITHer:AUTO[:STATe] OFF ON 0 1 [ :SENSE] :WAVeform:ADC:DITHer:AUTO[:STATe] ?
Example	WAV:ADC:DITH:AUTO ON WAV:ADC:DITH:AUTO?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Meas Setup, Advanced, ADC Dither</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	The dither function improves linearity for low level signals, at the expense of a higher noise floor.  You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SELEct to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.03.00

### ADC Dither

Toggles the dither function On and Off. The dither function improves linearity for low level signals, at the expense of a higher noise floor.

The reduced clipping-to-noise ratio results in higher noise, because the clipping level of the ADC relative to the front terminals remains unchanged with the introduction of dither. The enhanced linearity is mostly improved scale fidelity.

With dither on, the third-order distortions are usually invisible for mixer levels below  $-35$  dBm. With dither off, these distortions can be visible, with typical power levels of  $-110$  dBm referred to the mixer. Detection nonlinearity can reach 1 dB for dither off at mixer levels around  $-70$  dBm and lower, while the specified nonlinearity is many times smaller with dither on.

<b>Remote Command</b>	[ :SENSE] :WAVeform:ADC:DITHer[:STATe] OFF ON 0 1 [ :SENSE] :WAVeform:ADC:DITHer[:STATe] ?
Example	WAV:ADC:DITH ON WAV:ADC:DITH?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Meas Setup, Advanced, ADC Dither</b>



Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	The dither function improves linearity for low level signals, at the expense of a higher noise floor.  You must be in a mode that includes the Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	Auto Man
Backwards Compatibility SCPI	[ :SENSe ] :WAVeform :WBIF :ADC :DITHer [ :SENSe ] :WAVeform :PDITHer
Modified at S/W Revision	A.03.00

### IF Gain

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

Key Path	<b>Meas Setup, Advanced</b>
Initial S/W Revision	Prior to A.02.00

### IF Gain Auto

Activates the auto rules for IF Gain.

<b>Remote Command</b>	[ :SENSe ] :WAVeform :IF :GAIN :AUTO [ :STATe ] ON   OFF   1   0 [ :SENSe ] :WAVeform :IF :GAIN :AUTO [ :STATe ] ?
Example	WAV:IF:GAIN:AUTO ON WAV:IF:GAIN:AUTO?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	This only applies to the RF input. It does not apply to baseband I/Q input.  You must be in a mode that includes the Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.

Range	On Off
Modified at S/W Revision	A.03.00

### IF Gain State

Selects the range of IF gain.

<b>Remote Command</b>	[ :SENSe] :WAVeform:IF:GAIN[ :STATe] AUTOrange LOW HIGH [ :SENSe] :WAVeform:IF:GAIN[ :STATe] ?
Example	WAV:IF:GAIN HIGH WAV:IF:GAIN?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Meas Setup, Advanced, IF Gain</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	This only applies to the RF input and does not apply to baseband I/Q input. You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	AUTO
State Saved	Saved in instrument state.
Range	Autorange (Slower Follows Signals) Low (Best for Large Signals) High (Best Noise Level)
Readback Text	Autorange Low High
Modified at S/W Revision	A.03.00

### IF Gain Offset

Sets the IF Gain offset for the 40MHz, 140MHz IF Paths in 2 dB step from -6 dB to +6 dB. Increasing the gain can increase the amplitude of small signals as long as you don't overdrive the hardware. Wideband gain should usually be adjusted after setting the input attenuation.

The IF Gain key is enabled for all IF Path selection but the IF Gain Offset is not activated when IF Path Selection is Narrow and IF Path Selection Narrow is either 10MHz or 25MHz.

Internally, the IF Gain value will change based on the current configuration of the HW. If the user chooses to offset this value, they may do so with this parameter. Hence the value specified is not an absolute value but relative to the current internal IF Gain setting.

For example:

IF Gain Low + IF Gain Offset +4dB = Total IF Gain of +4dB (0 + 4 = 4)

IF Gain High + IF Gain Offset +4 dB = Total IF Gain of +14dB (10 + 4 = 14)

IF Gain Low + IF Gain Offset -6dB = Total IF Gain of -6dB (0 - 6 = -6)

IF Gain High + IF Gain Offset  $-6\text{dB}$  = Total IF Gain of  $+6\text{dB}$  ( $10 - 6 = 4$ )

Thus the total IF Gain range when IF Gain Offset is available is a minimum of  $0 - 6 = -6\text{dB}$  and a maximum of  $10 + 6 = 16\text{dB}$ . The available IF Gain depends on the IF Path and center frequency. The maximum IF Gain may not be achievable at all times depending on the configuration.

<b>Remote Command:</b>	[ :SENSe ] :WAVeform:IF:GAIN:OFFSet <rel_amp1 > [ :SENSe ] :WAVeform:IF:GAIN:OFFSet?
Example:	WAV:IF:GAIN:OFFS 2 Sets the IF Gain offset to 2
Preset:	0
Min:	$-6$
Max:	$+6$
Default Unit:	dB
Couplings:	If the IF Path Selection is 10 MHz or 25 MHz, then this feature is not available and is grayed out.
State Saved:	Saved in state
Key Path:	<b>Meas Setup, Advanced, More 1 of 2</b>

## **Mode**

See “[Mode](#)” on page 1635 in the section "Common Measurement Functions" for more information.

---

## **Mode Setup**

See [“Mode Setup” on page 1651](#) in the section "Common Measurement Functions" for more information.

## Peak Search

Places the selected marker on the trace point with the maximum y-axis value for that marker's trace and accesses a menu that enables you to select to do a minimum peak search.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example	CALC:WAV:MARK2:MAX
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Front-panel key</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Modified at S/W Revision	A.03.00

## Next Peak

Moves the selected marker to the next highest local maximum with a value less than the current marker's.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT
Example	CALC:WAV:MARK:MAX:NEXT
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Peak Search</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Modified at S/W Revision	A.03.00

## Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

<b>Remote Command</b>	:CALCulate:WAVEform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum
Example	CALC:WAV:MARK:MIN
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Peak Search</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Modified at S/W Revision	A.03.00

## **Recall**

See [“Recall” on page 189](#) in the section "Common Measurement Functions" for more information.



---

## **Restart**

See [“Restart” on page 1671](#) in the section "Common Measurement Functions" for more information.

---

## **Save**

See [“Save” on page 205](#) in the section "Common Measurement Functions" for more information.

---

## Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1677 in the section "Common Measurement Functions" for more information.

## **Source**

See [“Source” on page 1679](#) in the section "Common Measurement Functions" for more information.

## Span X Scale

Accesses a menu of functions that enable you to set the horizontal scale parameters.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Ref Value

Sets the reference value for time on the horizontal axis. When Auto Scaling is set to On, the displayed plots use a Scale/Div value determined by the analyzer, based on the measurement result.

<b>Remote Command</b>	:DISPlay:WAVEform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <time>  :DISPlay:WAVEform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:RLEVel?
Example	DISP:WAV:VIEW:WIND:TRAC:X:RLEV 10 ms DISP:WAV:VIEW:WIND:TRAC:X:RLEV?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>SPAN X Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	0.00 s
State Saved	Saved in instrument state.
Min	-1.000 s
Max	10.00 s
Modified at S/W Revision	A.03.00

## Scale/Div

Sets the horizontal scale by changing a time value per division.

<b>Remote Command</b>	:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:P DIVision <time>  :DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:P DIVision?
Example	DISP:WAV:VIEW:WIND:TRAC:X:PDIV 500 us  DISP:WAV:VIEW:WIND:TRAC:X:PDIV?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>SPAN X Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.
Preset	200.0 us
State Saved	Saved in instrument state.
Min	1.000 ns
Max	1.000 s
Modified at S/W Revision	A.03.00

## Ref Position

Sets the reference position for the X axis to Left, Center or Right.

<b>Remote Command</b>	:DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:R POSition LEFT CENTer RIGHT  :DISPlay:WAVeform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALe]:R POSition?
Example	DISP:WAV:VIEW:WIND:TRAC:X:RPOS LEFT  DISP:WAV:VIEW:WIND:TRAC:X:RPOS?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>SPAN X Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD

Notes	Allows you to set the reference position to Left, Ctr (center) or Right. You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Modified at S/W Revision	A.03.00

## Auto Scaling

Toggles the scale coupling function between On and Off.

<b>Remote Command</b>	:DISPlay:WAVEform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALE]:COUPle 0 1 OFF ON  :DISPlay:WAVEform:VIEW[1]   2:WINDow[1]:TRACe:X[:SCALE]:COUPle?
Example	DISP:WAV:VIEW:WIND:TRAC:X:COUP ON DISP:WAV:VIEW:WIND:TRAC:X:COUP?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>SPAN X Scale</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Couplings	When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.  When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
Preset	1
State Saved	Saved in instrument state.
Range	On Off
Modified at S/W Revision	A.03.00

## Sweep/Control

Accesses the Sweep menu that allows you to pause and restart the measurement.

See [“Sweep/Control” on page 1687](#) in the section "Common Measurement Functions" for more information.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Pause and Resume

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when paused.

See [“Pause/Resume” on page 1698](#) in the section "Common Measurement Functions" for more information.

Key Path	<b>Sweep/Control</b>
Initial S/W Revision	Prior to A.02.00



---

## Trace/Detector

There is no 'Trace/Detector' functionality supported in the Waveform measurement. The front-panel key displays a blank menu when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement

See [“Trigger” on page 1753](#) in the section "Common Measurement Functions" for information about all keys in this menu.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

## View/Display

Accesses a menu of functions that enable you to set up and control the display parameters for the current measurement.

This topic contains the following sections:

[“View Selection by name \(Remote Command Only\)” on page 1399](#)

[“View Selection by number \(Remote Command Only\)” on page 1399](#)

### View Selection by name (Remote Command Only)

Selects the results view.

<b>Remote Command</b>	:DISPlay:WAVEform:VIEW[:SElect] RFENvelope IQ :DISPlay:WAVEform:VIEW[:SElect]?
Example	DISP:WAV:VIEW RFEN DISP:WAV:VIEW?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>View/Display</b>
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD
Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	RFENvelope
State Saved	Saved in instrument state.
Range	RF Envelope IQ Waveform
Modified at S/W Revision	A.03.00

### View Selection by number (Remote Command Only)

Displays the numeric values of the measurement results.

<b>Remote Command</b>	:DISPlay:WAVEform:VIEW:NSElect <integer> :DISPlay:WAVEform:VIEW:NSElect?
Example	DISP:WAV:VIEW:NSEL 1 DISP:WAV:VIEW:NSEL?
Initial S/W Revision	Prior to A.02.00
Mode	BASIC, PN, WCDMA, C2K, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, ISDB-T, CMMB, LTE, LTETDD

## Waveform Measurement

### View/Display

Notes	You must be in a mode that includes the Waveform measurement to use this command. Use INSTRument:SElect to set the mode.
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	2
Modified at S/W Revision	A.03.00

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Display


Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1813](#) in the section "Common Measurement Functions" for more information.

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### RF Envelope

This view shows an example of the RF Envelope result for the waveform (time domain) measurements in the graph window. The measured values for the mean power and peak-to-mean power are shown in the text window.

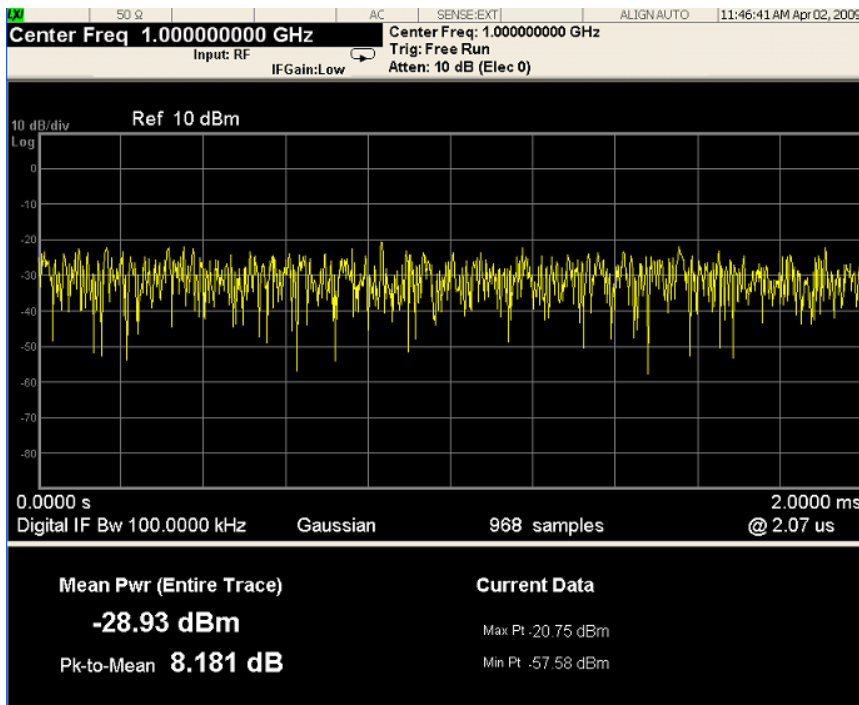

### Numeric Results


Name	Type	Description	Unit	Format
Mean Pwr	Float64	The mean power (dBm). This is either the power across the entire trace, or the power between markers if the markers are enabled.	dBm	XX.XX dBm
Pk-to-Mean	Float64	This is the ratio of the maximum signal level to the mean power.	dB	XX.XX dB
Max Pt	Float64	The maximum of the most recently acquired data.	dBm	XX.XX dBm
Min Pt	Float64	The minimum of the most recently acquired data.	dBm	XX.XX dBm

Key Path	<b>View/Display</b>
Initial S/W Revision	Prior to A.02.00

### I/Q Waveform

This view shows the I and Q signal waveforms in parameters of voltage versus time.

Waveform Measurement  
View/Display

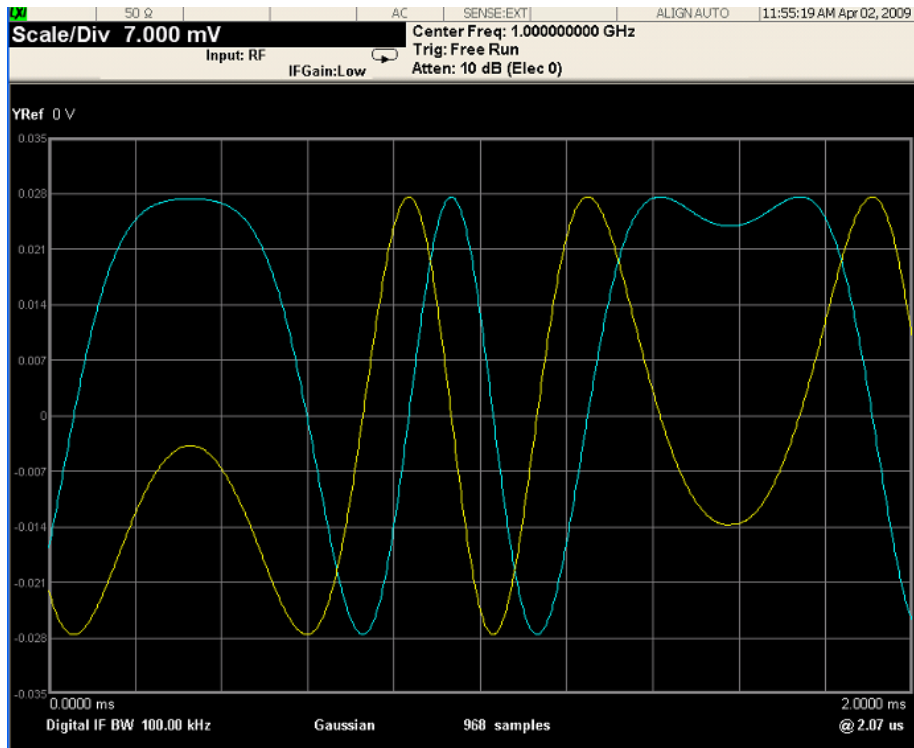

Key Path	View/Display
Initial S/W Revision	Prior to A.02.00

The key and command descriptions in this section describe functions that operate the same in multiple measurements and/or modes. This section is a library of functions that is referenced by many measurements and modes

To find the exact description and parameters for functions in a specific measurement, always look in the measurement section of this documentation. Pressing the front-panel key or softkey and then pressing the green Help key also provides the correct information.

---

**NOTE**

If you want to print the documentation, be sure to select this section and the measurement of interest to ensure having all the information you need. See [“Printing Acrobat Files” on page 135](#) for further instructions about printing.

---





## AMPTD Y Scale

The Amplitude front-panel key activates the Amplitude menu and selects Reference Level or Reference Value (depending on the measurement) as the active function.

Some features in the Amplitude menu apply to multiple measurements; others apply only to specific measurements. Keys that only apply to some measurements are blanked or grayed out in measurements in which they are not supported.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Reference Level

The Reference Level specifies the amplitude represented by the topmost graticule line.

Changing the reference level does not restart a measurement, because it is a display function only; instead it vertically ‘pans’ all displayed traces and markers to the new value. If a change to the reference level changes the attenuation value (eg through an auto coupling), then the measurement will be restarted.


Key Path	<b>AMPTD Y Scale</b>
<b>Remote Command</b>	:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:WIND:TRAC:Y:RLEV 20 dBm Sets the reference level to 20 dBm, which displays in the current Y axis unit. For example, if the Y axis unit is dBμV, then 126.99 dBμV will be displayed.
Couplings	If you reduce the attenuation, the analyzer may have to lower the reference level to keep it below its allowed maximum. This allowed maximum level is specified in the “Max” row, below, along with other variables which affect it. When you increase attenuation, the reference level does not change.
Preset	0 dBm
State Saved	Saved in instrument state
Min	RefLevelMin = -170 dBm + RefLevelOffset - ExtGain.

Common Measurement Functions  
**AMPTD Y Scale**

Max	The maximum Ref Level is typically: +30 dBm + RL Offset – External Gain (for MXA and PXA) +23 dBm + RL Offset – External Gain (for EXA)  This maximum value is determined by the maximum power that can be safely applied to the input circuitry. The actual maximum value at any given time may be even less than this, depending on other values including Mech Atten, Int Preamp Gain, Swept IF Gain, FFT IF Gain, Max Mixer Level, and the total attenuation currently available.
Default Unit	Depends on the current selected Y axis unit
Initial S/W Revision	Prior to A.02.00

**Amplitude Representations**

The following is an illustration of the reference level and Y Axis scales under various conditions:

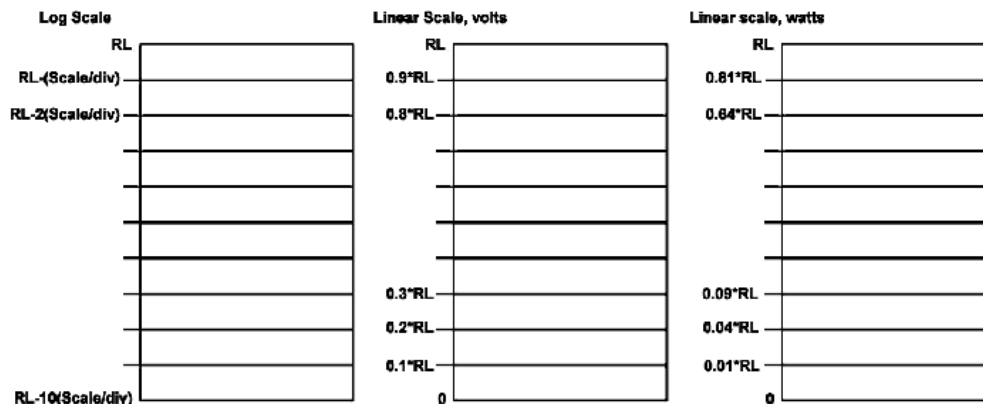

**Attenuation**

This menu controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a dual attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.


See “Dual Attenuator Configuration:” on page 1407.

See “Single Attenuator Configuration:” on page 1407.


Key Path	<b>AMPTD Y Scale</b>
Scope	Meas Global
Dependencies	In measurements which support the I/Q inputs, this key is unavailable when I/Q is the selected input, and is replaced by the Range key in that case.

Readback Line	Contains a summary in [ ] brackets of the current total attenuation. See the descriptions of the “(Mech) Atten ” on page 1408, “Enable Elec Atten” on page 1409, and “Elec Atten” on page 1412 keys for more detail on the contributors to the total attenuation.  Note that when "Pre-Adjust for Min Clip" is on, this value can change at the start of every measurement.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00


**Dual Attenuator Configuration:**

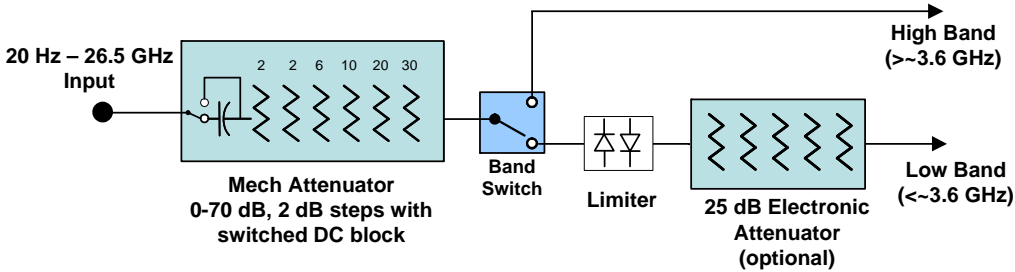


**Single Attenuator Configuration:**

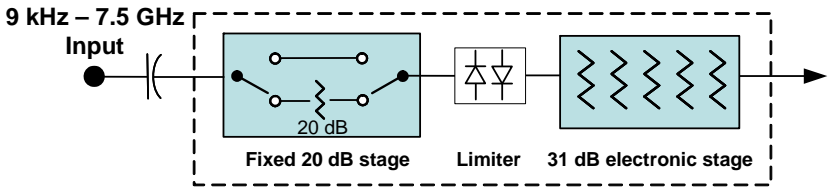

You can tell which attenuator configuration you have by pressing the Attenuation key, which (in most Modes) opens up the Attenuation menu. If the first key in the Attenuation menu says **Mech Atten** you have the dual attenuator configuration. If the first key says **Atten** you have the single attenuator configuration.

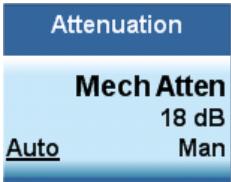

Dual Attenuator

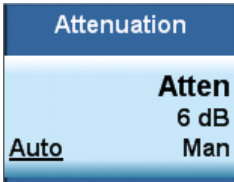

Single Attenuator

In the single attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the dual attenuator configuration, both stages have significant range so you are given separate control of the mechanical and electronic attenuator stages.

When you have the dual attenuator configuration, you may still have only a single attenuator, because unless you purchase the Electronic Attenuator option you will only have the mechanical attenuator.

Most Attenuation settings are the same for all measurements – they do not change as you change measurements.

**(Mech) Atten**

This key is labeled **Mech Atten** in dual attenuator models and **Atten** in single attenuator models. In the dual attenuator configuration, this key only affects the mechanical attenuator.

This key lets you modify the attenuation applied to the RF input signal path. This value is normally auto coupled to the Ref Level, the Internal Preamp Gain, any External Gain that is entered, and the Max Mixer Level, as described in the table below.

See “Attenuator Configurations and Auto/Man” on page 1409.

 
 
 
 
Key Path	AMPTD Y Scale, Attenuation
Remote Command	<pre>[ :SENSe]:POWer[:RF]:ATTenuation &lt;rel_ampl&gt;</pre> <pre>[ :SENSe]:POWer[:RF]:ATTenuation?</pre> <pre>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1</pre> <pre>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO?</pre>
Example	<p>POW:ATT 20</p> <p>Dual attenuator configuration: sets the mechanical attenuator to 20 dB</p> <p>Single attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation).</p> <p>If the attenuator was in Auto, it sets it to Manual.</p>
Dependencies	<p>Some measurements do not support the Auto setting of <b>(Mech) Atten</b>. In these measurements, the Auto/Man selection is not available, and the Auto/Man line on the key disappears.</p> <p>In dual attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting and the Auto/Man line on the key disappears. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in the “<b>Enable Elec Atten</b>” on page 1409 key description.</p> <p>See “Attenuator Configurations and Auto/Man” on page 1409 for more information on the Auto/Man functionality of Attenuation.</p>
Couplings	<p>When <b>(Mech) Atten</b> is in Auto, it uses the following algorithm to determine a value:</p> $\text{Atten} = \text{ReferenceLevel} + \text{PreAmpGain} + \text{ExternalGain} - \text{RefLevelOffset} - \text{MaxMixerLevel} + \text{IF Gain}.$ <p>Limit this value to be between 6 dB and the Max value. No value below 6 dB can ever be chosen by Auto.</p> <p>The resulting value is rounded up to the largest value possible given the attenuation step setting. That is, 50.01 dB would change to 60 dB (for a 10 dB attenuation step).</p> <p>The “IF Gain” term in the equation above is either 0 dB or +10 dB, depending on the settings of FFT IF Gain, Swept IF Gain, max Ref Level and the Auto/Man setting of Mech Atten.</p>
Preset	Auto

State Saved	Saved in instrument state
Min	0 dB  The attenuation set by this key cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it has to be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased.
Max	EXA: 60 dB  MXA and PXA: 70 dB  In the single attenuator configuration, the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Attenuator Configurations and Auto/Man**

As described in the Attenuation key description, there are two distinct attenuator configurations available in the X-Series, the single attenuator and dual attenuator configurations. In dual attenuator configurations, we have the mechanical attenuation and the electronic attenuation, and the current total attenuation is the sum of the electronic + mechanical attenuation. In single attenuator configurations, we refer to the attenuation set using the **(Mech) Atten** key (or POW:ATT SCPI) as the “main” attenuation; and the attenuation that is set by the SCPI command POW:EATT as the “soft” attenuation (the POW:EATT command is honored even in the single attenuator configuration, for compatibility purposes). Then the current total attenuation is the sum of the main + soft attenuation. See the **Elec Atten** key description for more on “soft” attenuation.

In the dual attenuator configuration, when the electronic attenuator is enabled, there is no Auto/Man functionality for the mechanical attenuator, and the third line of the key label (the Auto/Man line) disappears:



vsd05

**Enable Elec Atten**

Enables the Electronic Attenuator in dual attenuator configurations. This key does not appear in single attenuator configurations, as in the single attenuator configuration there is no “electronic attenuator” there is only a single integrated attenuator (which has both a mechanical and electronic stage).

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible

Common Measurement Functions  
**AMPTD Y Scale**

for front panel use. See [“Using the Electronic Attenuator: Pros and Cons”](#) on page 1411 for a detailed discussion of the pros and cons of using the electronic attenuator.

For the single attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the dual attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See [“Attenuator Configurations and Auto/Man”](#) on page 1409

See [“More Information”](#) on page 1410

<b>Remote Command</b>	[ :SENSe] :POWER[:RF]:EATTenuation:STATe OFF ON 0 1 [ :SENSe] :POWER[:RF]:EATTenuation:STATe?
Example	POW:EATT:STAT ON
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale, Attenuation</b>
Dependencies	<p>This key only appears in the dual attenuator configuration. However, in the single attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments and set a “soft” attenuation as described in <a href="#">“Attenuator Configurations and Auto/Man”</a> on page 1409</p> <p>The electronic attenuator (and the “soft” attenuation function provided in single attenuator configurations) is unavailable above 3.6 GHz. Therefore, if the Stop Frequency of the analyzer is &gt; 3.6 GHz then the <b>Enable Elec Atten</b> key will be OFF and grayed out.</p> <p>If the Internal Preamp is on, meaning it is set to Low Band or Full, the electronic attenuator (and the “soft” attenuation function provided in single attenuator configurations) is unavailable. In this case the <b>Enable Elec Atten</b> key will be OFF and grayed out.</p> <p>If either of the above is true, if the SCPI command is sent, an error indicating that the electronic attenuator is unavailable will be sent.</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the analyzer is limited to 3.6 GHz and the Internal Preamp is unavailable.</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in dual attenuator configurations). This is described in more detail below this table.
Preset	OFF for Swept SA measurement; ON for all other measurements that support the electronic attenuator
State Saved	Saved in instrument state
Modified at S/W Revision	A.03.00

**More Information**

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state in which it has no Auto function. Here are the rules for transitioning the Mechanical Attenuator:

### When the Electronic Attenuation is enabled:

- In the dual attenuator configuration, the Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man line on the (Mech) Atten key disappears and the auto rules are disabled
- In the dual attenuator configuration, the Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation.

### Examples in the dual attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled.
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled.
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled.

### When the Electronic Attenuation is disabled:

- In the dual attenuator configuration, the Elec Atten key is grayed out (it never displays in the single attenuator configuration)
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB.)

### Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the analyzer dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI and compression threshold levels increase dB-for-dB with increasing attenuation,

Common Measurement Functions  
**AMPTD Y Scale**

and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the analyzer calibration

**Elec Atten**

Controls the Electronic Attenuator in dual attenuator configurations. This key does not appear in single attenuator configurations, as the control of both the mechanical and electronic stages of the single attenuator is integrated into the single **Atten** key.

Key Path	<b>AMPTD Y Scale, Attenuation</b>
<b>Remote Command</b>	[ :SENSe]:POWer[:RF]:EATTenuation <rel_amp> [ :SENSe]:POWer[:RF]:EATTenuation?
Notes	Electronic Attenuation's spec is defined only when Mechanical Attenuation is 6 dB.
Dependencies	This key only appears in the dual attenuator configuration. However, in the single attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments and set a "soft" attenuation as described in <b>"Attenuator Configurations and Auto/Man" on page 1409</b> . The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Atten softkey or the POW:ATT SCPI command and affects the total attenuation displayed on the Attenuation key and the Meas Bar.  When <b>Enable Elec Atten</b> is off, the <b>Elec Atten</b> key is grayed out.
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual attenuator configuration: 24 dB  Single attenuator configuration: the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Adjust Atten for Min Clip**

Sets the combination of mechanical and electronic attenuation based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key is grayed out in measurements that do not support this functionality. The spectrum analyzer



measurement, Swept SA, does not support this functionality.

Key Path	<b>AMPTD Y Scale, Attenuation</b>
<b>Remote Command</b>	[ :SENSE ] :POWER [ :RF ] :RANGE:OPTimize IMMEDIATE
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Pre-Adjust for Min Clip

If this function is on, it does the adjustment described under [“Adjust Atten for Min Clip” on page 1412](#) each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In dual attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

This key is grayed out in measurements that do not support this functionality. The spectrum analyzer measurement, Swept SA, does not support this functionality.

<b>Remote Command</b>	[ :SENSE ] :POWER [ :RF ] :RANGE:OPTimize:ATTenuation OFF   ELEctrical   COMBined  [ :SENSE ] :POWER [ :RF ] :RANGE:OPTimize:ATTenuation?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale, Attenuation</b>
Notes	The SCPI parameter ELEctrical sets this function to On in single attenuator models. The SCPI parameter COMBined is mapped to ELEctrical in single attenuator models; if you send COMBined, it sets the function to On and returns ELEC to a query.
Preset	OFF for Swept SA measurement; ON for all other measurements that support <b>Pre-Adjust for Min Clip</b>
State Saved	Saved in instrument state
Range	Dual attenuator models: Off   Elec Atten Only   Mech + Elec Atten  Single attenuator models: Off   On
Modified at S/W Revision	A.03.00

<b>Remote Command:</b>	[ :SENSE ] :POWER [ :RF ] :RANGE:AUTO ON   OFF   1   0  [ :SENSE ] :POWER [ :RF ] :RANGE:AUTO?
------------------------	--

Common Measurement Functions  
**AMPTD Y Scale**

Notes:	ON aliases to "Elec Atten Only" OFF aliases to "Off" The query returns true if not "Off"
Initial S/W Revision:	Prior to A.02.00

**(Mech) Atten Step**

This controls the step size used when making adjustments to the input attenuation.

This key is labeled **Mech Atten Step** in dual attenuator models and **Atten Step** in single attenuator models. In the dual attenuator configuration, this key only affects the step size of the mechanical attenuator.

Key Path	<b>AMPTD Y Scale, Attenuation</b>
<b>Remote Command</b>	[ :SENSe ] :POWer [ :RF ] :ATTenuation:STEP [ :INCRement ] 10 dB   2 dB [ :SENSe ] :POWer [ :RF ] :ATTenuation:STEP [ :INCRement ] ?
Example	POW:ATT:STEP 2
Notes	Note this feature works like a 1-N choice from the front panel, but it takes a specific value (in dB) when used remotely. The only valid values are 2 and 10.
Dependencies	Blanked in EXA if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI will yield an "Option not present" error.
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	PXA and MXA: 2 dB EXA: 10 dB (2 dB with option FSA)
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

**Max Mixer Level**

Controls the limitation on the Ref Level for a given attenuation setting, and therefore also interacts with the Auto rules for selecting the attenuation as a coupling from the reference level.

Key Path	<b>AMPTD Y Scale, Attenuation</b>
<b>Remote Command</b>	[ :SENSe ] :POWer [ :RF ] :MIXer:RANGe [ :UPPer ] <real> [ :SENSe ] :POWer [ :RF ] :MIXer:RANGe [ :UPPer ] ?
Example	POW:MIX:RANG -15 dBm

Preset	-10 dBm
State Saved	Saved in instrument state
Min	-50 dBm
Max	-10 dBm
Default Unit	Depends on the current selected Y axis unit, see Swept SA discussion of Y Axis Unit
Initial S/W Revision	Prior to A.02.00

## Range

This key is only available when I/Q is the selected input. It replaces the Attenuation key in that case.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a couple of millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50Ω)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak

Key Path	<b>AMPTD Y Scale</b>
Notes	Visible only when the selected input is I/Q.
State Saved	No
Readback Text	When Range is Auto, "[Auto]" When Range is Man and I & Q are the same, "[<range value>]" When Range is Man and I & Q are different: "[I: <I range value> Q: <Q range value>]" See I Range and Q Range for the <range value> enumeration definition.
Initial S/W Revision	Prior to A.02.00

## Range Auto/Man

The Auto setting for Range causes the range to be set based on the Y Scale settings. When Range is “Auto”, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Common Measurement Functions  
**AMPTD Y Scale**

Not all measurements support Range Auto/Man. If Auto is not supported in the current measurement, this key is grayed out and shows “Man” and MAN is returned to a SCPI query; but this does NOT change the Auto/Man setting for Range. When you go to a measurement that supports Auto, it goes back to Auto if it was previously in Auto mode.

Key Path	<b>AMPTD Y Scale, Range</b>
Scope	Meas Global
<b>Remote Command</b>	[ :SENSE] :VOLTage: IQ:RANGe:AUTO OFF   ON   0   1 [ :SENSE] :VOLTage: IQ:RANGe:AUTO?
Example	Put the I Range and Q Range in manual. VOLT:IQ:RANG:AUTO OFF
Dependencies	If Auto is not supported, sending the SCPI command will generate an error.
Couplings	When in Auto, both I Range and Q Range are set to the same value, computed as follows:  Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: YMax = max(abs(top), abs(bottom)).  The I Range and Q Range are then set to YMax.
Preset	ON
State Saved	Saved in instrument state
Range	Auto   Man
Initial S/W Revision	Prior to A.02.00

<b>Remote Command:</b>	[ :SENSE] :POWER: IQ:RANGe:AUTO OFF   ON   0   1 [ :SENSE] :POWER: IQ:RANGe:AUTO?
Example:	Put the I Range and Q Range in manual. POW:IQ:RANG:AUTO OFF
Notes:	The POW:IQ:RANG:AUTO is an alternate form of the VOLT:IQ:RANG:AUTO command. This is to maintain consistency with I Range and Q Range, which support both the POWER and VOLTage forms of the command.
Preset:	ON
Range:	Auto   Man
Initial S/W Revision:	Prior to A.02.00

**I Range**

This is the internal gain range for the I channel when Input Path is I Only or Ind I/Q, and it is used for

both the I and Q channels when the Input Path is I+jQ. See “I/Q Gain Ranges” on page 1419.

Key Path	<b>AMPTD Y Scale, Range</b>
<b>Remote Command</b>	[ :SENSE] :VOLTage:IQ[:I]:RANGE[:UPPer] <voltage> [ :SENSE] :VOLTage:IQ[:I]:RANGE[:UPPer] ?
Example	Set the I Range to 0.5 V Peak VOLT:IQ:RANG 0.5 V
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V.
Couplings	When Q Same as I is On, the I Range value will be copied to the Q Range. Changing the value will also set Range = Man.
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak   0.5 V Peak   0.25 V Peak   0.125 V Peak
Initial S/W Revision	Prior to A.02.00

<b>Remote Command:</b>	[ :SENSE] :POWer:IQ[:I]:RANGE[:UPPer] <amp;lt;math>ampl</math>> [ :SENSE] :POWer:IQ[:I]:RANGE[:UPPer] ?
Example:	Set the I Range to 0.5 V Peak when Reference Z is 50 $\Omega$ , and to 1.0 V Peak when Reference Z is 75 $\Omega$ . POW:IQ:RANG 4 dBm
Notes:	The POWER form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command.  The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:  50 $\Omega$ : 10, 4, -2, -8 75 $\Omega$ : 8.2, 2.2, -3.8, -9.8 600 $\Omega$ : -0.8, -6.8, -12.8, -18.9
Preset:	10.0 dBm
Range:	-20 dBm to 10 dBm
Min:	-20 dBm
Max:	10 dBm
Initial S/W Revision:	Prior to A.02.00

**Q Range**

Accesses the Q Range menu.

Key Path	<b>AMPTD Y Scale, Range</b>
Readback Text	Q Same as I   1 V Peak   0.5 V Peak   0.25 V Peak   0.125 V Peak When Q Same as I is On, the readback is "Q Same as I", otherwise it is the Q Range value.
Initial S/W Revision	Prior to A.02.00

**Q Same as I** Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, the Q Same as I will cause the Q channel range to be mirrored from the I channel. That way you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time Q Same as I is Off, the I and Q channel setups will be identical.

Key Path	<b>AMPTD Y Scale, Range, Q Range</b>
<b>Remote Command</b>	[ :SENSe] :VOLTagE   POWer : IQ : MIRROred OFF   ON   0   1 [ :SENSe] :VOLTagE   POWer : IQ : MIRROred?
Example	Turn off the mirroring of I Range to Q Range. VOLT:IQ:MIRR OFF POW:IQ:MIRR OFF
Couplings	When On, the I Range value is mirrored (copied) to the Q Range.
Preset	On
State Saved	Saved in instrument state.
Range	On   Off
Readback Text	"Q Same as I" when On, otherwise none.
Initial S/W Revision	Prior to A.02.00

**Q Range Value** This is the internal gain range for the Q channel. See “I/Q Gain Ranges” on page 1419. The Q Range only applies to Input Path Q Only and Ind I/Q. For input I+jQ the I Range determines both I and Q channel range settings.

Key Path	<b>AMPTD Y Scale, Range</b>
<b>Remote Command</b>	[ :SENSe] :VOLTagE : IQ : Q : RANGe [ :UPPer] <voltage> [ :SENSe] :VOLTagE : IQ : Q : RANGe [ :UPPer] ?
Example	Set the Q Range to 0.5 V Peak VOLT:IQ:Q:RANG 0.5 V

Notes	<p>The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V.</p> <p>The Q Range is only used for Input Path Q Only and Ind I/Q. For input I+jQ the I Range determines both I and Q channel range settings.</p>
Couplings	<p>When Q Same as I is On, the I Range value will be copied to the Q Range and the range value keys are disabled.</p> <p>Changing the value will also set Range = Man.</p>
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak   0.5 V Peak   0.25 V Peak   0.125 V Peak
Initial S/W Revision	Prior to A.02.00

<b>Remote Command:</b>	<pre>[ :SENSE] :POWER:IQ:Q:RANGE[:UPPER] &lt;ampl&gt;</pre> <pre>[ :SENSE] :POWER:IQ:Q:RANGE[:UPPER] ?</pre>
Example:	<p>Will set the Q Range to 0.5 V Peak when Reference Z is 50Ω, and to 1.0 V Peak when Reference Z is 75Ω</p> <p>POW:IQ:Q:RANG 4 dBm</p>
Notes:	<p>The POWER form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command.</p> <p>The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:</p> <p>50Ω: 10, 4, -2, -8</p> <p>75Ω: 8.2, 2.2, -3.8, -9.8</p> <p>600Ω: -0.8, -6.8, -12.8, -18.9</p>
Preset:	10.0 dBm
Range:	-20 dBm to 10 dBm
Min:	-20 dBm
Max:	10 dBm
Initial S/W Revision:	Prior to A.02.00

### I/Q Gain Ranges

**1 V Peak** Set the channel gain state to 1 Volt Peak.

Key Path	<b>AMPTD Y Scale, I Range   Q Range</b>
----------	---

Common Measurement Functions  
**AMPTD Y Scale**

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**0.5 V Peak** Set the channel gain state to 0.5 Volt Peak.

Key Path	<b>AMPTD Y Scale, I Range   Q Range</b>
Initial S/W Revision	Prior to A.02.00

**0.25 V Peak** Set the channel gain state to 0.25 Volt Peak.

Key Path	<b>AMPTD Y Scale, I Range   Q Range</b>
Initial S/W Revision	Prior to A.02.00

**0.125 V Peak** Set the channel gain state to 0.125 Volt Peak.

Key Path	<b>AMPTD Y Scale, I Range   Q Range</b>
Initial S/W Revision	Prior to A.02.00

## Scale / Div

Sets the units per vertical graticule division on the display. This function is only available when Scale Type (Log) is selected and the vertical scale is power. When Scale Type (Lin) is selected, Scale/Div is grayed out.

Key Path	<b>AMPTD Y Scale</b>
<b>Remote Command</b>	:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp1> :DISPlay:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?
Example	DISP:WIND:TRAC:Y:PDIV 5 DB
Dependencies	Scale/Div is grayed out in linear Y scale. Sending the equivalent SCPI command does change the Scale/Div, though it has no affect while in Lin.
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Initial S/W Revision	Prior to A.02.00

## Scale Type

Chooses a linear or logarithmic vertical scale for the display and for remote data readout.

When Scale Type (Log) is selected, the vertical graticule divisions are scaled in logarithmic units. The top line of the graticule is the Reference Level and uses the scaling per division Scale/Div to assign



values to the other locations on the graticule.

When Scale Type (Lin) is selected, the vertical graticule divisions are linearly scaled with the reference level value at the top of the display and zero volts at the bottom. Each vertical division of the graticule represents one-tenth of the Reference Level.

---

**NOTE** The Y Axis Unit used for each type of display is set by pressing Y Axis Unit. The analyzer remembers separate Y Axis Unit settings for both Log and Lin.

---

Key Path	AMPTD Y Scale
<b>Remote Command</b>	:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:SPACing LINear LOGarithmic :DISPlay:WINDow[1]:TRACe:Y[:SCALe]:SPACing?
Example	DISP:WIND:TRAC:Y:SPAC LOG DISP:WIND:TRAC:Y:SPAC?
Dependencies	If Normalize is on, Scale Type forced to Log and is grayed out.
Couplings	Changing the Scale Type always sets the Y Axis unit to the last unit specified for the current amplitude scale. In other words, we restore the Y Axis unit setting appropriate per log/lin.
Preset	LOG
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

## Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when Presel Center is pressed, the analyzer will turn on the selected marker, perform a peak search, and then perform centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the analyzer, the analyzer performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between Start Freq and Stop Freq, the analyzer will first perform a peak search, and then perform centering on the marker's center frequency.

The value displayed on the **Presel Adjust** key will change to reflect the new preselector tuning (see **Presel Adjust**).

A number of considerations should be observed to ensure proper operation. See [“Proper Preselector Operation” on page 1422](#).

Key Path	AMPTD Y Scale
<b>Remote Command</b>	[:SENSe]:POWer[:RF]:PCENter

Example	POW:PCEN
Notes	Note that the rules outlined above under the key description apply for the remote command as well as the key. The result of the command is dependent on marker position, and so forth. Any message shown by the key press is also shown in response to the remote command.
Dependencies	<ul style="list-style-type: none"> <li>• Grayed out if the microwave preselector is off. )</li> <li>• If the selected marker's frequency is below Band 1, advisory 0.5001 is generated and no action is taken.</li> <li>• Grayed out if entirely in Band 0.</li> <li>• Blank in models that do not include a preselector, such as option 503. If the SCPI is sent in these instruments, it is accepted without error, and the query always returns 0.</li> </ul>
Couplings	The active marker position determines where the centering will be attempted. If the analyzer is in a measurement such as averaging when centering is initiated, the act of centering the preselector will restart averaging but the first average trace will not be taken until the centering is completed.
Status Bits/OPC dependencies	<p>When centering the preselector, *OPC will not return true until the process is complete and a subsequent measurement has completed, nor will results be returned to a READ or MEASure command.</p> <p>The Measuring bit should remain set while this command is operating and should not go false until the subsequent sweep/measurement has completed.</p>
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Proper Preselector Operation

A number of considerations should be observed to ensure proper operation:

If the selected marker is off, the analyzer will turn on a marker, perform a peak search, and adjust the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on screen in a preselected range for the peak search to find.

If the selected marker is already on, the analyzer will attempt the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, therefore if the marker is on a signal below 3.6 GHz, no centering will be attempted and an advisory message generated

In some models, the preselector can be bypassed. If it is bypassed, no centering will be attempted in that range.

### Preselector Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when "Presel Center" on page 1421 is available.

For general purpose signal analysis, using Presel Center is recommended. Centering the filter minimizes the impact of long-term preselector drift. Presel Adjust can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

Key Path	<b>AMPTD Y Scale</b>
Scope	Meas Global
<b>Remote Command</b>	[ :SENSe ] :POWer [ :RF ] :PADJust <freq> [ :SENSe ] :POWer [ :RF ] :PADJust?
Example	POW:PADJ 100KHz POW:PADJ?
Notes	The value on the key reads out to 0.1 MHz resolution.
Dependencies	<ul style="list-style-type: none"> <li>• Grayed out if microwave preselector is off. )</li> <li>• Grayed out if entirely in Band 0.</li> <li>• Blank in models that do not include a preselector, such as option 503. If the SCPI is sent in these instruments, it is accepted without error, and the query always returns 0.</li> </ul>
Preset	0 MHz
State Saved	The <b>Presel Adjust</b> value set by <b>Presel Center</b> , or by manually adjusting <b>Presel Adjust</b> , is not saved in Instrument State, and does not survive a Preset or power cycle.
Min	-500 MHz
Max	500 MHz
Default Unit	Hz
Backwards Compatibility SCPI	[ :SENSe ] :POWer [ :RF ] :MW :PADJust [ :SENSe ] :POWer [ :RF ] :MMW :PADJust (These were undocumented commands for PSA which X-Series will accept)
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00
<b>Remote Command:</b>	[ :SENSe ] :POWer [ :RF ] :PADJust :PRESelector MWAVE   MMWave   EXTERNAL [ :SENSe ] :POWer [ :RF ] :PADJust :PRESelector?

Notes:	<pre>[[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVe MMWave EXTernal</pre> <p>where: MWAV = 3–26 GHz  MMWave = 26–50 GHz  EXTernal = External</p> <p>Preselector Selection - PSA had multiple preselectors, and you could select which preselector to center. Since the X-Series will have only one preselector, the preselector selection softkey will no longer be available. However, in order to provide backward compatibility, we will support the remote command.</p> <p>The command form is a NOP  The query will return MWAVE</p>
Initial S/W Revision:	Prior to A.02.00

## Y Axis Unit

Displays the menu keys that enable you to change the vertical (Y) axis amplitude unit. The analyzer retains the entered Y Axis Unit separately for both Log and Lin amplitude scale types. For example, if Scale Type has been set to Log, and you set Y Axis Unit to dBm, pressing Scale Type (Log) sets the Y Axis Unit to dBm. If Scale Type has been set to Lin and you set Y Axis Unit to V, pressing Scale Type (Lin) sets the Y Axis Unit to V. Pressing Scale Type (Log) again sets the Y axis unit back to dBm.

---

**NOTE**                    The units of current (A, dBmA, dBuA) are calculated based on 50 ohms input impedance.

                              All four of the EMI units (dB $\mu$ A/m, dB $\mu$ V/m, dBG, dBpT) are treated by the instrument exactly as though they were dBuV. The user must load an appropriate correction factor using Amplitude Corrections for accurate and meaningful results.

                              If a SCPI command is sent to the analyzer which uses one of the EMI units as a terminator, the analyzer treats it as though DBUV had been sent as the terminator.

---

<b>Remote Command</b>	<pre>:UNIT:POWer  DBM DBMV DBMA V W A DBUV DBUA DBUVM DBUAM DBPT DBG  :UNIT:POWer?</pre>
Example	<pre>UNIT:POW dBmV  UNIT:POW?</pre>
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale</b>
Scope	Meas Global

Notes	<p>The Y axis unit has either logarithmic or linear characteristics. The set of units that is logarithmic consists of dBm, dBmV, dBmA, dB<math>\mu</math>V, dB<math>\mu</math>A, dB<math>\mu</math>V/m, dB<math>\mu</math>A/m, dBpT, and dBG. The set of units that is linear consists of V, W, and A. The chosen unit will determine how the reference level and all the amplitude-related outputs like trace data, marker data, etc. read out.</p>
Notes	<p>The settings of Y Axis Unit and Scale Type, affect how the data is read over the remote interface. When using the remote interface no unit is returned, so you must know what the Y axis unit is to interpret the results:</p> <p>Example 1, set the following:</p> <p>Scale Type (Log)  Y Axis Unit, dBm  Scale/Div, 1 dB  Ref Level, 10 dBm</p> <p>This sets the top line to 10 dBm with each vertical division representing 1 dB. Thus, if a point on trace 1 is on the fifth graticule line from the top, it represents 5 dBm and will read out remotely as 5.</p> <p>Example 2, set the following:</p> <p>Scale Type (Lin)  Y Axis Unit, Volts  Ref Level, 100 mV (10 mV/div)</p> <p>This sets the top line to 100 mV and the bottom line to 0 V, so each vertical division represents 10 mV. Thus, if a point on trace 1 is on the fifth graticule line from the top, it represents 50 mV and will read out remotely as 50.</p>
Dependencies	<p>If an amplitude correction with an Antenna Unit other than <b>None</b> is applied and enabled, then that antenna unit is forced and the key with that unit is the only Y Axis Unit available. All other Y Axis Unit keys are grayed out.</p> <p>If an amplitude correction with an Antenna Unit other than <b>None</b> is applied and enabled, and you then turn off that correction or set <b>Apply Corrections</b> to <b>No</b>, the Y Axis Unit that existed before the Antenna Unit was applied is restored.</p>
Couplings	<p>The analyzer retains the entered Y Axis Unit separately for both Log and Lin amplitude scale types</p>
Preset	<p>dBm for log scale, V for linear. The true 'preset' value is dBm, since at preset the Y Scale type is set to logarithmic.</p>
State Saved	<p>Saved in instrument state</p>
Readback line	<p>1-of-N selection</p>
Modified at S/W Revision	<p>A.02.00, A.04.00</p>

Common Measurement Functions  
**AMPTD Y Scale**

**dBm**

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBm.

Key Path	AMPTD Y Scale, Y Axis Unit
Example	UNIT:POW DBM
Dependencies	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback	dBm
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**dBmV**

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBmV.

Key Path	AMPTD Y Scale, Y Axis Unit
Example	UNIT:POW DBMV
Dependencies	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback	dBmV
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**dBmA**

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBmA.

Key Path	AMPTD Y Scale, Y Axis Unit
Example	UNIT:POW DBMA
Dependencies	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback	dBmA
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**W**

Sets the amplitude unit for the selected amplitude scale (log/lin) to watt.

Key Path	AMPTD Y Scale, Y Axis Unit
Example	UNIT:POW W
Dependencies	Grayed out if an Amplitude Correction with an Antenna Unit is ON.

Readback	W
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**V**

Sets the amplitude unit for the selected amplitude scale (log/lin) to volt.

Key Path	<b>AMPTD Y Scale, Y Axis Unit</b>
Example	UNIT:POW V
Dependencies	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback	V
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**A**

Sets the amplitude unit for the selected amplitude scale (log/lin) to Ampere.

Key Path	<b>AMPTD Y Scale, Y Axis Unit</b>
Example	UNIT:POW A
Dependencies	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback	A
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**dB $\mu$ V**

Sets the amplitude unit for the selected amplitude scale (log/lin) to dB $\mu$ V.

Key Path	<b>AMPTD Y Scale, Y Axis Unit</b>
Example	UNIT:POW DBUV
Dependencies	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback	dB $\mu$ V
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

Common Measurement Functions  
**AMPTD Y Scale**

**dB $\mu$ A**

Sets the amplitude unit for the selected amplitude scale (log/lin) to dB $\mu$ A.

Key Path	AMPTD Y Scale, Y Axis Unit
Example	UNIT:POW DBUA
Dependencies	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback	dB $\mu$ A
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**dB $\mu$ V/m**

Sets the amplitude unit for the selected amplitude scale (log/lin) to dB $\mu$ V/m. This is an antenna unit, and this key is grayed out unless a Correction with this Antenna Unit selected is ON. If this is the case, all of the other Antenna Units are grayed out.

Key Path	AMPTD Y Scale, Y Axis Unit
Example	UNIT:POW DBUVM
Dependencies	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback	dB $\mu$ V/m
Initial S/W Revision	A.02.00

**dB $\mu$ A/m**

Sets the amplitude unit for the selected amplitude scale (log/lin) to dB $\mu$ A/m. This is an antenna unit, and this key is grayed out unless a Correction with this Antenna Unit selected is ON. If this is the case, all of the other Antenna Units are grayed out.

Key Path	AMPTD Y Scale, Y Axis Unit
Example	UNIT:POW DBUAM
Dependencies	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback	dB $\mu$ A/m
Initial S/W Revision	A.02.00

**dBpT**

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBpT. This is an antenna unit, and this key is grayed out unless a Correction with this Antenna Unit selected is ON. If this is the case, all of the other Antenna Units are grayed out.

Key Path	AMPTD Y Scale, Y Axis Unit
----------	----------------------------



Example	UNIT:POW DBPT
Dependencies	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback	dBpT
Initial S/W Revision	A.02.00

**dBG**

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBG. This is an antenna unit, and this key is grayed out unless a Correction with this Antenna Unit selected is ON. If this is the case, all of the other Antenna Units are grayed out.

Key Path	<b>AMPTD Y Scale, Y Axis Unit</b>
Example	UNIT:POW DBG
Dependencies	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback	dBG
Initial S/W Revision	A.02.00

**Reference Level Offset**

Adds an offset value to the displayed reference level. The reference level is the absolute amplitude represented by the top graticule line on the display.

See [“More Information” on page 1430](#)

<b>Remote Command</b>	:DISPlay:WINDow[1]:TRACe:Y[:SCALE]:RLEVel:OFFSet <rel_ampl>  :DISPlay:WINDow[1]:TRACe:Y[:SCALE]:RLEVel:OFFSet?
Example	DISP:WIND:TRAC:Y:RLEV:OFFS 12.7  Sets the Ref Level Offset to 12.7 dB. The only valid suffix is dB. If no suffix is sent, dB will be assumed.
Initial S/W Revision	Prior to A.02.00
Key Path	<b>AMPTD Y Scale</b>
Scope	Meas Global
Preset	0 dBm
State Saved	Saved in instrument state
Min	The range for Ref Lvl Offset is variable. It is limited to values that keep the reference level within the range of -327.6 dB to 327.6 dB.
Max	327.6 dB
Modified at S/W Revision	A.04.00

## More Information

Offsets are used when gain or loss occurs between a device under test and the analyzer input. Thus, the signal level measured by the analyzer may be thought of as the level at the input of an external amplitude conversion device. Entering an offset does not affect the trace position or attenuation value, just the value of the top line of the display and the values represented by the trace data. Thus, the values of exported trace data, queried trace data, marker amplitudes, trace data used in calculations such as N dB points, trace math, peak threshold, and so forth, are all affected by Ref Level Offset.

---

<b>NOTE</b>	Changing the offset causes the analyzer to immediately stop the current sweep and prepare to begin a new sweep, but the data will not change until the trace data updates, because the offset is applied to the data as it is taken. If a trace is exported with a nonzero Ref Level Offset, the exported data will contain the trace data with the offset applied.
-------------	---

---

The maximum reference level available is dependent on the reference level offset. That is, Ref Level - Ref Level Offset must be in the range  $-170$  to  $+30$  dBm. For example, the reference level value range can be initially set to values from  $-170$  dBm to  $30$  dBm with no reference level offset. If the reference level is first set to  $-20$  dBm, then the reference level offset can be set to values of  $-150$  to  $+50$  dB.

If the reference level offset is first set to  $-30$  dB, then the reference level can be set to values of  $-200$  dBm to  $0$  dBm. In this case, the reference level is “clamped” at  $0$  dBm because the maximum limit of  $+30$  dBm is reached with a reference level setting of  $0$  dBm with an offset of  $-30$  dB. If instead, the reference level offset is first set to  $30$  dB, then the reference level can be set to values of  $-140$  to  $+60$  dBm.

## $\mu$ W Path Control

The  **$\mu$ W Path Control** functions include the  **$\mu$ W Preselector Bypass** (Option MPB) and **Low Noise Path** (Option LNP) controls in the High Band path circuits.

When the  $\mu$ W Preselector is bypassed, the user has better flatness, but will be subject to spurs from out of band interfering signals. When the Low Noise Path is enabled, the analyzer automatically switches around certain circuitry in the high frequency bands which can contribute to noise, when it is appropriate based on other analyzer settings.

For most applications, the preset state is Standard Path, which gives the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wearout in the hardware switches. For applications that utilize the wideband IF paths, the preset state is the  $\mu$ W Preselector Bypass path, if option MPB is present. This is because, when using a wideband IF such as the  $140$  MHz IF, the  $\mu$ W Preselector’s bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

Users may choose Low Noise Path Enable. It gives a lower noise floor, especially in the  $21$ – $26.5$  GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does the Low Noise Path, however its compression threshold and third-order intercept are much poorer than that of the non-preamp Low Noise Path. There are some applications, typically for signals around  $30$  dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with  $0$  dB input attenuation. When the third-order dynamic range of the preamp path is too

little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range.

Key Path	<b>Amplitude</b>
Mode	SA, BASIC, PNOISE, VSA
Scope	Meas Global
<b>Remote Command</b>	[ :SENSE] :POWer [ :RF] :MW:PATH STD LNPath MPBypass [ :SENSE] :POWer [ :RF] :MW:PATH?
Example	:POW:MW:PATH LNP ! Enables the Low Noise path
Notes	If a Presel Center is performed, the analyzer will momentarily switch to the Standard Path, regardless of the setting of <b>μW Path Control</b>  The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> . In the case where the DC Block is switched in the analyzer is now AC coupled. However, if the user has selected DC coupling, the UI will still behave as though it were DC coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the analyzer could switch out the low noise path at any time and hence go back to being DC coupled.  Alignment switching ignores the settings in this menu, and restores them when finished.
Dependencies	Blanked in BBIQ
Preset	All modes other than IQ Analyzer and VXA modes: STD IQ Analyzer and VXA mode: MPB option present and licensed: MPB MPB option not present and licensed: STD
State Saved	Save in State
Readback	Value selected in the submenu
Initial S/W Revision	A.04.00

### Standard Path

This path gives the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession.

In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

Key Path	<b>Amplitude, μW Path Control</b>
----------	-----------------------------------

Example	:POW:MW:PATH STD
Readback Text	Standard Path
Initial S/W Revision	A.04.00

### Low Noise Path Enable

You may choose Low Noise Path Enable, which gives a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever all of the following are true:

- The analyzer is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or (if installed) is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

See “[More Information](#)” on page 1433

Key Path	<b>Amplitude, <math>\mu</math>W Path Control</b>
Measurement	Swept SA
Example	:POW:MW:PATH LNP
Notes	For measurements that use IQ acquisition, the low noise path is used when the Center Frequency is in High Band (> 3.6 GHz) and no preamp is in use.  In other words, the rules above are modified to use only the center frequency to qualify which path to switch in.  This is not the case for FFT’s in the Swept SA measurement; they use the same rules as swept measurements.
Dependencies	Key is blanked if current mode does not support it.  Key is grayed out if mode supports it but current measurement does not support it.  Unless Option LNP is present and licensed, key is blank and if SCPI command sent, error –241, "Hardware missing; Option not installed" is generated.
Readback Text	Low Noise Path Enable
Initial S/W Revision	A.04.00


**More Information**

The user should understand that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

The user should also understand that the bypass switch is a mechanical switch and has finite life; so if the **Low Noise Path** is enabled, it is possible to cause frequent cycling of this switch by frequently changing analyzer settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the analyzer performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path. There are some applications, typically for signals around 30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an analyzer at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both analyzer noise and analyzer TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

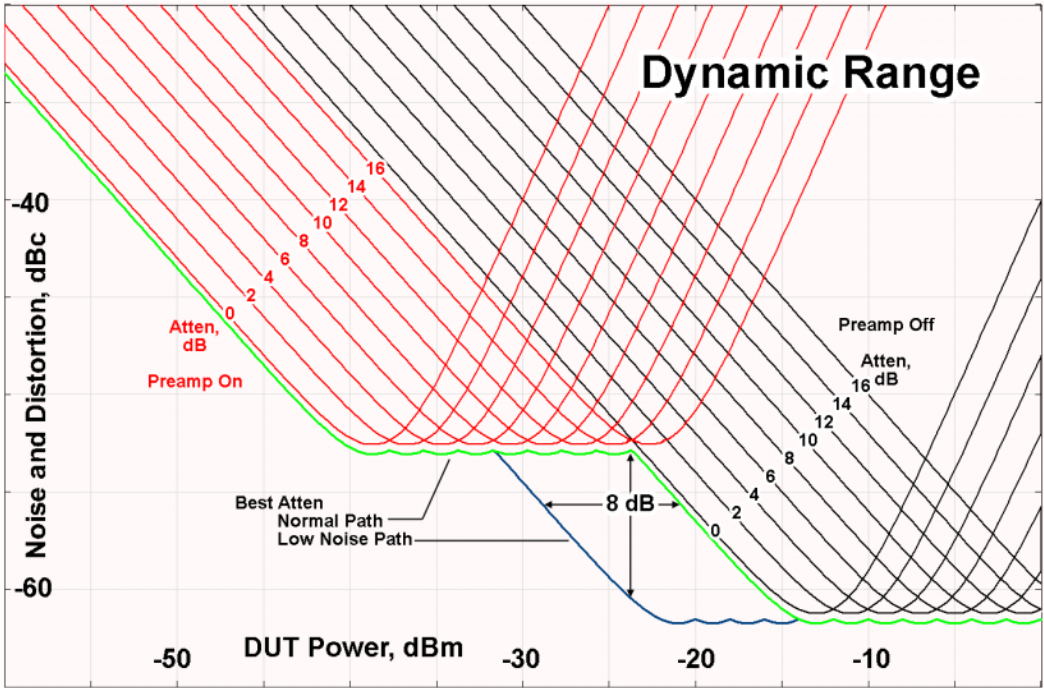

Common Measurement Functions  
**AMPTD Y Scale**

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the analyzer input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

**μW Preselector Bypass**

This key toggles the preselector bypass switch for band 1 and higher. When the microwave preselect is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the analyzer.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Key Path	<b>Amplitude, μW Path Control</b>
Example	:POW:MW:PATH MPB
Dependencies	Key is blanked if current mode does not support it. Key is grayed out if mode supports it but current measurement does not support it. Key is blank unless Option MPB is present and licensed. If SCPI command sent when MPB not present, error -241, "Hardware missing; Option not installed" is generated.
Readback Text	μW Preselector Bypass
Initial S/W Revision	A.04.00

Example	:POW:MW:PRES OFF Bypasses the microwave preselector
Preset	ON
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1 [:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?
Backwards Compatibility Notes	The ON parameter sets the STD path. The OFF parameter sets Path MPB.

## Internal Preamp

Accesses a menu of keys that control the internal preamps. Turning on the preamp gives a better noise figure, but a poorer TOI to noise floor dynamic range. You can optimize this setting for your particular measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp the instrument will also account for that. The displayed result will always reflect the correct gain.

Key Path	<b>AMPTD Y Scale</b>
Scope	Meas Global
<b>Remote Command</b>	[ :SENSE] :POWer [ :RF] :GAIN [ :STATe] OFF   ON   0   1 [ :SENSE] :POWer [ :RF] :GAIN [ :STATe] ?
Dependencies	Preamp is not available on all hardware platforms. If the preamp is not present or is unlicensed, the key is not shown.  The preamp is not available when the electronic/soft attenuator is enabled.
Preset	OFF
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

Key Path	<b>AMPTD Y Scale, Internal Preamp</b>
Scope	Meas Global
<b>Remote Command</b>	[ :SENSE] :POWer [ :RF] :GAIN :BAND LOW   FULL [ :SENSE] :POWer [ :RF] :GAIN :BAND ?
Dependencies	Preamp is not available on all hardware platforms. If the preamp is not present or is unlicensed, the key is not shown.  If a POW:GAIN:BAND FULL command is sent when a low band preamp is available, the preamp band parameter is to LOW instead of FULL, and an "Option not installed" message is generated.
Preset	LOW
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

## Off

Turns the internal preamp off

Key Path	<b>AMPTD Y Scale, Internal Preamp</b>
Example	:POW:GAIN OFF

Common Measurement Functions  
**AMPTD Y Scale**

Readback	Off
Initial S/W Revision	Prior to A.02.00

**Low Band**

Sets the internal preamp to use only the low band.

The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the **Low Band** key label.

Key Path	<b>AMPTD Y Scale, Internal Preamp</b>
Example	:POW:GAIN ON :POW:GAIN:BAND LOW
Readback	Low Band
Initial S/W Revision	Prior to A.02.00

**Full Range**

Sets the internal preamp to use its full range. The low band (0–3.6 GHz or 0–3GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp.

The frequency range of the installed (optional) preamp is displayed in square brackets on the **Full Range** key label. If the high band option is not installed the Full Range key does not appear.

Key Path	<b>AMPTD Y Scale, Internal Preamp</b>
Example	:POW:GAIN ON :POW:GAIN:BAND FULL
Readback	Full Range
Initial S/W Revision	Prior to A.02.00



## Auto Couple

The Auto Couple feature provides a quick and convenient way to automatically couple multiple instrument settings. This helps ensure accurate measurements and optimum dynamic range. When the Auto Couple feature is activated, either from the front panel or remotely, all parameters of the current measurement which have an Auto/Manual mode are set to Auto mode and all measurement settings dependent on (or coupled to) the Auto/Man parameters are automatically adjusted for optimal performance.

However, the Auto Couple key actions are confined to the current measurement only. It does not affect other measurements in the mode, and it does not affect markers, marker functions, or trace or display More Information attributes.

See [“More Information” on page 1437](#)

 
Key Path	<b>Front-panel key</b>
<b>Remote Command</b>	:COUPle ALL NONE
Example	:COUP ALL
Notes	:COUPle ALL puts all Auto/Man parameters in Auto mode (equivalent to pressing the <b>Auto Couple</b> key).  :COUPLE NONE puts all Auto/Man parameters in manual mode. It decouples all the coupled instrument parameters and is not recommended for making measurements.
Initial S/W Revision	Prior to A.02.00

### More Information

There are two types of functions that have Auto/Manual modes.

#### Auto/Man Active Function keys

An Auto/Man toggle key controls the binary state associated with an instrument parameter by toggling between "Auto" (where the parameter is automatically coupled to the other parameters it is dependent upon) and "Man" (where the parameter is controlled independent of the other parameters), as well as making the parameter the active function. The current mode is indicated on the softkey with either "Auto" or "Man" underlined as illustrated below.




vsd07

#### Auto/Man 1-of-N keys

An Auto/Man 1-of-N key allows you to manually pick from a list of parameter values, or place the function in "Auto" in which case the value is automatically selected (and indicated) as shown below. If in Auto, Auto is underlined on the calling key. If in manual operation, manual is indicated on the calling key. But the calling key does not actually toggle the function, it simply opens the menu.

Common Measurement Functions

Auto Couple

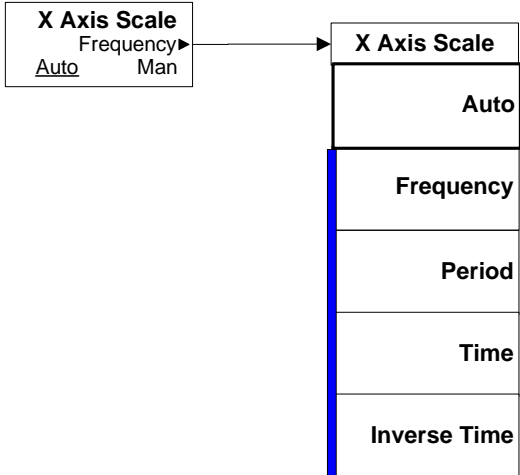

vsd08

## BW

The BW key opens the bandwidth menu, which contains keys to control the Resolution Bandwidth and Video Bandwidth functions of the instrument.

The Res BW functions control filter bandwidth and filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

**NOTE** The AVERAGE functions, which appeared in the BW menu in earlier analyzers, can now be found in the Trace menu and the Meas Setup menu. In the Trace menu, you may turn Trace Averaging on or off for the desired traces (rather than globally as in the past); and in the Meas Setup menu you may configure Averaging, by setting the Average Number and the Average Type.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Res BW

Activates the **Res BW** active function, which allows you to manually set the resolution bandwidth (RBW) of the analyzer. Normally, **Res BW** (Auto) selects automatic coupling of the Res BW to **Span** using the ratio set by the Span:3 dB RBW key. To decouple the resolution bandwidth, press Res BW until Man is underlined, or simply enter a different value for **Res BW**.

See [“More Information” on page 1440](#)

Key Path	<b>BW</b>
<b>Remote Command</b>	<pre>[ :SENSE ] :BANDwidth BWIDth[:RESolution] &lt;freq&gt; [ :SENSE ] :BANDwidth BWIDth[:RESolution]? [ :SENSE ] :BANDwidth BWIDth[:RESolution]:AUTO OFF ON 0 1 [ :SENSE ] :BANDwidth BWIDth[:RESolution]:AUTO?</pre>
Example	<pre>BAND 1 KHZ BAND? BWID:AUTO ON BWID:AUTO?</pre>
Notes	For numeric entries, all RBW Types choose the nearest (arithmetically, on a linear scale, rounding up) available RBW to the value entered.
Notes	The setting and querying of values depends on the current bandwidth type.

Dependencies	When in Zero Span with no EMI Standard selected, there is no Auto setting for Res BW. The Auto/Man line on the Res BW softkey disappears in this case, and if the SCPI command [:SENSe]:BWID[:RESolution]:AUTO ON is sent, it generates an error.
Couplings	Res BW is normally coupled to Span; if Res BW is set to Auto, as the Span decreases, so will the Res BW. Normally, in Zero Span, this coupling is turned off and Res BW has no Auto setting.  When a CISPR or MIL EMI Standard is in use, the Res BW is coupled to Center Frequency and not to Span, and this is true even in Zero Span.  Sweep time is coupled to RBW when in a non-zero span. If <b>Sweep Time</b> is set to Auto, then the sweep time is changed as the RBW changes, to maintain amplitude calibration.  Video bandwidth (VBW) is normally coupled to RBW. If <b>VBW</b> is set to Auto, then the VBW is changed as the RBW changes, to maintain the ratio set by VBW:3 dB RBW. See the ““ <a href="#">VBW:3dB RBW</a> ” on page 1442” key description.
Preset	3 MHz  ON
State Saved	Saved in Instrument State
Min	1 Hz
Max	8 MHz is the max equivalent –3 dB RBW, which means that the named RBW (the one shown on the key etc) can actually exceed 8 MHz if using a filter other than –3 dB Gaussian
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00

### More Information

When the **Res BW** is manually selected, it may be returned to the coupled state by pressing the **Res BW** key until **Auto** is underlined. This may also be done by pressing Auto Couple or by performing a **Preset**.

When **Res BW** is set to **Auto**, the bandwidth selected depends on the Filter Type (see “Filter Type” below).

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on the **Filter Type** or the **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

The zero-span case deserves some mention, because RBW is coupled to Span when in a swept (non-zero) span and in zero span there is normally no meaningful RBW coupling in Zero Span. However, when a MIL or CISPR EMC Standard is selected, there IS a meaningful coupling for RBW in Zero Span – in fact, it is coupled to Center Frequency, in order to make measurements according to the EMI specifications.

The annotation under RBW in the bottom left of the screen shows the type of filter or bandwidth that is being used. The following examples illustrate this:

-3 dB (Normal) filter BW: Res BW 300 Hz  
 -6 dB filter BW: Res BW (-6 dB) 422 Hz  
 Noise filter BW: Res BW (Noise) 317 Hz  
 Impulse filter BW: Res BW (Impulse) 444 Hz  
 CISPR filter BW :Res BW (CISPR) 200 Hz  
 MIL filter BW:Res BW (MIL) 1 kHz  
 Flattop filter type:Res BW (Flattop) 300 Hz

## Video BW

Lets you change the analyzer post-detection filter (VBW) from 1 Hz to 8 MHz in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz.

Normally, Video BW (Auto) selects automatic coupling of the Video BW filter to the resolution bandwidth filter using the ratio set by the VBW:3 dB RBW key. To decouple the video bandwidth, press Video BW until Man is underlined, or simply enter a new value.

When the **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Video BW** key until **Auto** is underlined. This may also be done by pressing Auto Couple or by performing a **Preset**.

Key Path	BW
<b>Remote Command</b>	<pre>[ :SENSe] :BANDwidth BWIDth:VIDeo &lt;freq&gt; [ :SENSe] :BANDwidth BWIDth:VIDeo? [ :SENSe] :BANDwidth BWIDth:VIDeo:AUTO OFF ON 0 1 [ :SENSe] :BANDwidth BWIDth:VIDeo:AUTO?</pre>
Example	<pre>BAND:VID 1 KHZ BAND:VID? BWID:VID:AUTO ON BWID:VID:AUTO?</pre>
Notes	For numeric entries, the analyzer chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean “wide open”.
Notes	The values shown in this table reflect the conditions after a Mode Preset.

Dependencies	<p>Sometimes the displayed Video BW is not actually used to process the trace data:</p> <ul style="list-style-type: none"> <li>When the Average Detector is selected and Sweep Type is set to <b>Swept</b>, the video bandwidth filter cannot be used, because it uses the same hardware as the Average Detector.</li> <li>When the Quasi-Peak, EMI Average or RMS Average detector is selected the VBW is implemented by the digital IF as part of the detector</li> </ul> <p>When this is the case, the VBW still acts to change the Sweep Time, if Sweep Time is in Auto, and still affects the data on other traces for which this is not the case.</p>
Preset	3 MHz ON
State Saved	Saved in Instrument State
Min	1 Hz
Max	50 MHz
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

### VBW:3dB RBW

Selects the ratio between the video bandwidth and the equivalent 3 dB resolution bandwidth to be used for setting VBW when VBW is in Auto.

Normally, VBW:3dB RBW (Auto) selects automatic coupling of the VBW:3 dB RBW ratio to **Detector**. See “[Coupling Auto Rules:](#)” on page 1443 for more information. To decouple the ratio, press VBW:3 dB RBW until Man is underlined, or simply enter a new value.

When the VBW:3dB RBW is manually selected, it may be returned to the coupled state by pressing the VBW:3 dB RBW key until **Auto** is underlined. This may also be done by pressing Auto Couple or by performing a **Preset**.

Key Path	BW
<b>Remote Command</b>	<pre>[ :SENSe] :BANDwidth BWIDth:VIDeo:RATio &lt;real&gt; [ :SENSe] :BANDwidth BWIDth:VIDeo:RATio? [ :SENSe] :BANDwidth BWIDth:VIDeo:RATio:AUTO OFF ON 0 1 [ :SENSe] :BANDwidth BWIDth:VIDeo:RATio:AUTO?</pre>

Example	BAND:VID:RAT 2 BAND:VID:RAT? BAND:VID:RAT:AUTO 0 BAND:VID:RAT:AUTO?
Notes	The values shown in this table reflect the conditions after a Mode Preset.
Couplings	See “Coupling Auto Rules”
Preset	1 ON
State Saved	Saved in Instrument State
Min	0.00001
Max	3000000
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**Coupling Auto Rules:**

The Auto Rules for the **VBW:3dB RBW** function follow.

First, we go through the following list and find the lowest numbered detector being used on any active traces (traces for which Update is On):

- Peak
- Normal
- Average
- Sample
- Negative Peak
- EMI Average
- Quasi Peak
- RMS Average

Use that detector to pick the ratio based on the following criteria:

1. If the detector is Peak and the EMC Standard is set to either CISPR or MIL, use 10.0 (we use wide VBWs to capture peak levels accurately).
2. Otherwise, if the detector is **Negative Peak**, use 1.0 (in the Negative Peak case, there are no known significant use models so we use a medium ratio).
3. Otherwise, if the detector is **Normal**, use 1.0.
4. Otherwise, if the detector is **Average**, and the span is nonzero, use 0.1. The use of a small ratio in Average detection is desirable because of its effect on the sweep time equations. The VBW filter is not

**BW**

actually in-circuit when the average detector is on. If the detector is Average, and the span is zero, use 10.0, which gives optimal behavior for Interval Markers in zero span.

5. Otherwise, if the detector is EMI Average, Quasi Peak or CISPR RMS, use 1.0. In fact this is a “don’t care” since no VBW is used for these detectors, as noted under “Dependencies” for the VBW key.

6. Otherwise, the detector is simply **Peak** or **Sample**. These two detectors can use the same rules. In these cases, if any active trace is in max hold or min hold, use 10.0, because Max and Min Hold operations will usually be intended to capture peaks and pits without smoothing from the VBW filter; otherwise, use 1.0 as a compromise, because you have not set the analyzer in a way that implies that you are measuring noise, pulsed-RF or CW signals, and for backward compatibility with earlier analyzers.

Note that because the above couplings depend on which traces are active, they are re-examined whenever any trace goes active or inactive, except when this leaves no traces active. Transitioning to the state where no traces are active should not affect the couplings; in that way, the annotation will always reflect the state of the last trace which was active.

**Span:3dB RBW**

Selects the ratio between span and resolution bandwidth.

Normally, Span:3dB RBW (Auto) selects a Span:3 dB RBW ratio of 106:1. If you manually enter the ratio, Man will become underlined, which enables you to manually select ratios more suitable for certain measurements.

When the Span:3dB RBW is manually selected, it may be returned to the coupled state by pressing the Span:3dB RBW key until **Auto** is underlined. This may also be done by pressing Auto Couple or by performing a **Preset**.

Key Path	BW
<b>Remote Command</b>	<pre>[ :SENSe ] :FREQUency:SPAN:BANDwidth[ :RESolution ] :RATio &lt;integer&gt;  [ :SENSe ] :FREQUency:SPAN:BANDwidth[ :RESolution ] :RATio?  [ :SENSe ] :FREQUency:SPAN:BANDwidth[ :RESolution ] :RATio:AUTO OFF ON 0 1  [ :SENSe ] :FREQUency:SPAN:BANDwidth[ :RESolution ] :RATio:AUTO?</pre>
Example	<pre>FREQ:SPAN:BAND:RAT 200 sets a ratio of 200:1, and turns off the auto coupling.  FREQ:SPAN:BAND:RAT:AUTO ON  FREQ:SPAN:BAND:RAT?</pre>
Notes	The values shown in this table reflect the conditions after a Mode Preset.
Dependencies	<p>Grayed out when the EMC Standard is set to CISPR or MIL, since RBW is coupled to Center Frequency rather than Span in this case.</p> <p>If the grayed out key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, the command is acted upon, but it doesn’t affect the current measurement.</p>



Preset	106 ON
State Saved	Saved in Instrument State
Min	2
Max	10000
Initial S/W Revision	Prior to A.02.00

## RBW Control

Selects the type/shape for the resolution bandwidth filters. Historically, the Res BW filters in Agilent spectrum analyzers were Gaussian filters, specified using the –3 dB bandwidth of the filter. That is, a 10 MHz Res BW filter was a Gaussian shape with its –3 dB points 10 MHz apart. In the X-Series you can, using the **Filter BW** key, specify bandwidths other than the –3 dB bandwidth (–6 dB, Noise, Impulse) for the width of the Gaussian filters. Furthermore, the **Filter BW** menu lets you choose between a Gaussian and Flat Top filter shape, for varying measurement conditions.

Key Path	<b>BW</b>
Dependencies	]The <b>RBW Control</b> key is grayed out if the <b>EMC Standard</b> is set to <b>CISPR</b> or <b>MIL</b> . In this case the <b>Filter Type</b> is always Gaussian; the <b>Filter BW</b> is chosen as appropriate for the filter and the standard.
Readback line	[<filter type>] or, if Filter Type is Gaussian, [Gaussian,<filter BW>]
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

## Filter Type

Besides the familiar Gaussian filter shape, there are certain special filter types, such as Flat Top, that are desirable under certain conditions. The **Filter Type** menu gives you control over these types.

See [“More Information” on page 1446](#)

Key Path	<b>BW, RBW Control</b>
<b>Remote Command</b>	[ :SENSE]:BANDwidth BWIDth:SHAPE GAUSSian FLATtop [ :SENSE]:BANDwidth BWIDth:SHAPE?
Example	BAND:SHAP GAUS
Notes	GAUSSian= Gaussian FLATtop = Flattop
Dependencies	When <b>EMC Standard</b> is set to <b>CISPR</b> or <b>MIL</b> , the <b>Filter Type</b> is always Gaussian
Preset	Auto Couple chooses the preset value

**BW**

State Saved	Saved in State
Readback line	1-of-N selection
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**More Information**

## Gaussian filters

When the Gaussian filter type is chosen, a set of 160 RBW filters are available whose shape is approximately Gaussian. The actual bandwidths used to realize the X-Series's Gaussian filters are chosen to come as close as possible to a 24 step per decade series, within the limitations of the digital IF.

For Gaussian filters, the annotation at the bottom of the screen shows the filter bandwidth type (unless it is Normal). This will be shown parenthetically between the words "Res BW" and the value, for example

Res BW 10.0 Hz (Normal bandwidth)

Res BW (Impulse) 14.8 Hz (Impulse bandwidth)

## Flattop filters

When the Flattop filter type is chosen, a new set of 134 RBW hardware settings are available. These settings realize filters that are approximately rectangular in shape. When this shape is chosen the filter bandwidth options are irrelevant and therefore unavailable.

The annotation at the bottom of the screen will show that the Flattop shape is being used, for example:

Res BW (Flattop) 10 Hz

**Gaussian** Selects the Gaussian filter type. There are 160 of these RBWs. They are arranged in a 24-per-decade sequence from 1 Hz through 3 MHz, plus the 4, 5, 6 and 8 MHz settings.

Key Path	<b>BW, RBW Control, Filter Type</b>
Example	BAND:SHAP GAUS
Notes	Parameter is GAUSSian. See remote command in section " <a href="#">Filter Type</a> " on <a href="#">page 1445</a> .
Readback	Gaussian
Initial S/W Revision	Prior to A.02.00

**Flattop** Selects the flat top filter type

Key Path	<b>BW, RBW Control, Filter Type</b>
Example	BAND:SHAP FLAT
Readback	Flattop
Initial S/W Revision	Prior to A.02.00

## Filter BW

When using the Gaussian filters for certain types of applications it can be useful to be able to specify the filter width using points other than the –3 dB points. The Filter BW function allows you to pick the filter based on its –3 dB (Normal) bandwidth, its –6 dB bandwidth, its Noise bandwidth, or its Impulse bandwidth. Note that in all four cases the –3 dB bandwidth is the same. The filter does not change, but the way you specify it changes.

See “[More Information](#)” on page 1447

Key Path	BW, RBW Control
<b>Remote Command</b>	[ :SENSe] :BANDwidth BWIDth:TYPE DB3 DB6 IMPulse NOISe [ :SENSe] :BANDwidth BWIDth:TYPE?
Example	BAND:TYPE NOIS
Notes	DB3 = –3 dB (Normal) DB6 = –6 dB IMPulse = Impulse NOISe = Noise
Dependencies	Grayed out if the Flattop filter type is selected. When <b>EMC Standard</b> is set to <b>CISPR</b> or <b>MIL</b> , the <b>Filter BW</b> is chosen as appropriate for the filter and the standard.
Preset	Auto Couple chooses the preset value
State Saved	Saved in State
Readback line	1-of-N selection
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

## More Information

The analyzer provides four ways of specifying the bandwidth of a Gaussian filter:

The –3 dB bandwidth of the filter


The –6 dB bandwidth of the filter

The equivalent Noise bandwidth of the filter, which is defined as the bandwidth of a rectangular filter with the same peak gain which would pass the same power for noise signals.

The equivalent Impulse bandwidth of the filter, which is defined as the bandwidth of a rectangular filter with the same peak gain which would pass the same power for impulsive (narrow pulsed) signals.

The figure below shows the relationships of the various filter bandwidths for filters with the X-Series’ shape factor (shape factor is defined as the ratio of the –60 dB bandwidth to the – 3 dB bandwidth):

Common Measurement Functions  
**BW**

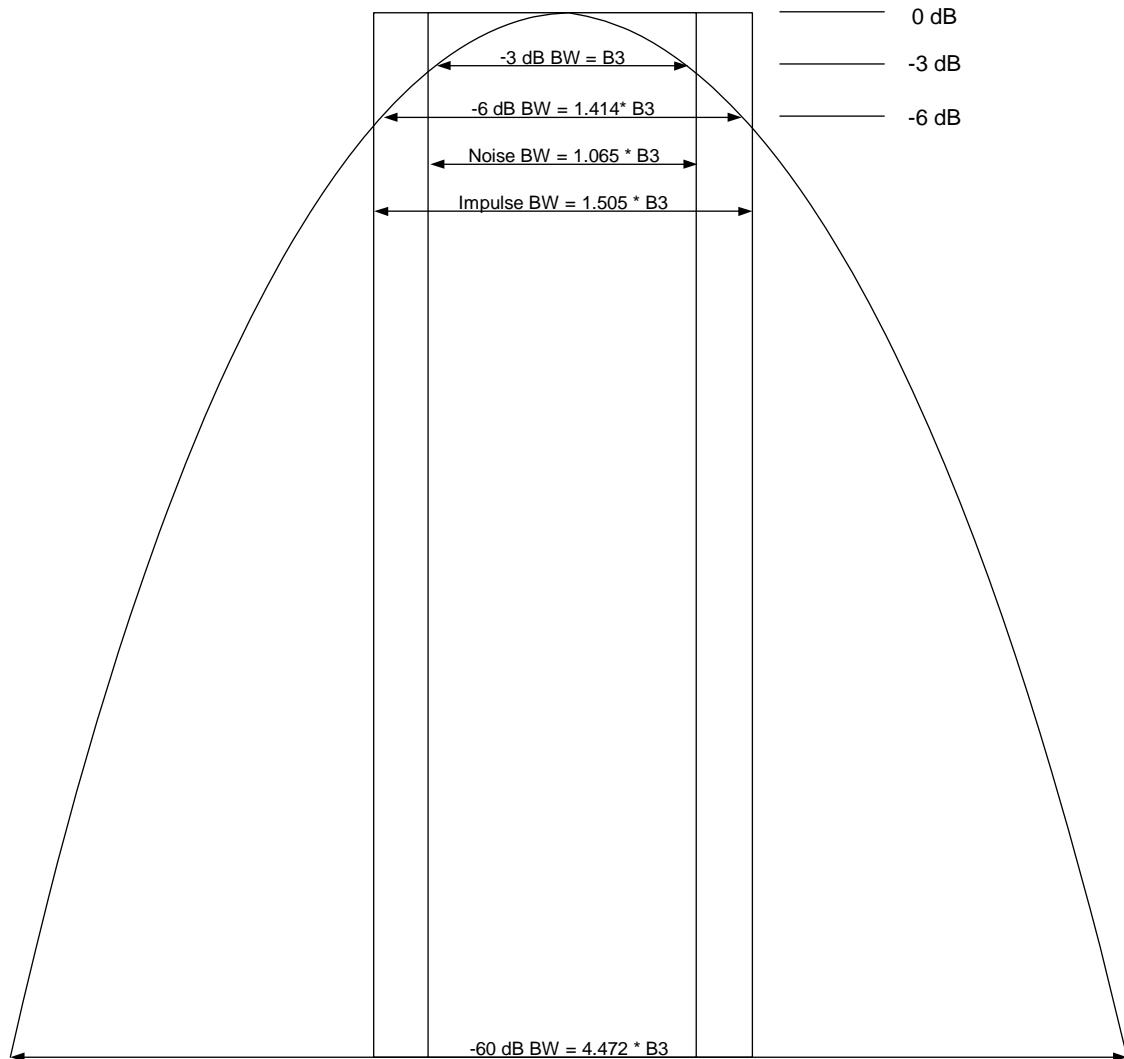

**The Filter Type** menu lets you choose the filter bandwidth (–3 dB, –6 dB, Noise or Impulse) that will be used when specifying the width of the filter. Note that for a given Gaussian filter, changing the filter bandwidth specification does not affect the filter width at all but only the means of specifying it. For example, the filter whose –3 dB bandwidth is 1.0 kHz is the same as the filter whose –6 dB bandwidth is 1.41 kHz, whose Noise bandwidth is 1.06 kHz, and whose Impulse bandwidth is 1.48 kHz. As you cycle through these various filter bandwidths the filter does not change, but the way the filter is annotated and the value which appears in the active function area and on the softkey does.

**–3 dB (Normal)** Selects the normal gaussian-shaped bandwidths that are defined by their –3 dB bandwidths.

Key Path	BW, RBW Control, Filter BW
Example	BAND:TYPE DB3
Readback	–3 dB
Initial S/W Revision	Prior to A.02.00

**-6 dB** Selects the filter bandwidths where the bandwidth is defined at the -6 dB points. This uses the normal RBW filters, but the value displayed on the key, active function line and screen annotation changes to reflect the -6 dB bandwidth instead of the -3 dB bandwidth.

Key Path	<b>BW, RBW Control, Filter BW</b>
Example	BAND:TYPE DB6
Readback	-6 dB
Initial S/W Revision	Prior to A.02.00

**Noise** Selects the noise filter bandwidths. This uses the normal RBW filters, but the value displayed on the key, active function line and screen annotation changes to reflect the equivalent noise bandwidth, instead of the -3 dB bandwidth.

Key Path	<b>BW, RBW Control, Filter BW</b>
Example	BAND:TYPE NOIS
Readback	Noise
Initial S/W Revision	Prior to A.02.00

**Impulse** Selects the impulse bandwidths. This uses the normal RBW filters, but the value displayed on the key, active function line and screen annotation changes to reflect the equivalent impulse bandwidth instead of the -3 dB bandwidth.

Key Path	<b>BW, RBW Control, Filter BW</b>
Example	BAND:TYPE IMP
Readback	Impulse
Initial S/W Revision	Prior to A.02.00



## Cont (Continuous Measurement/Sweep)

Sets the analyzer for Continuous measurement operation. The single/continuous state is Meas Global so the setting will affect all measurements. If you are Paused, pressing **Cont** does a Resume.

<b>Remote Command:</b>	:INITiate:CONTinuous OFF ON 0 1 :INITiate:CONTinuous?
Example:	:INIT:CONT 0 puts analyzer in Single measurement operation. :INIT:CONT 1 puts analyzer in Continuous measurement operation
Preset:	ON (Note that SYST:PRESet sets INIT:CONT to ON but *RST sets INIT:CONT to OFF)
State Saved:	Saved in Instrument State
Key Path:	<b>Front-panel key</b>
Initial S/W Revision:	Prior to A.02.00

In Swept SA Measurement (Spectrum Analysis Mode):

The analyzer takes repetitive sweeps, averages, measurements, etc, when in Continuous mode. When the average count reaches the **Average/Hold Number** the count stops incrementing, but the analyzer keeps sweeping. See the Trace/Detector section for the averaging formula used both before and after the **Average/Hold Number** is reached. The trigger condition must be met prior to each sweep. The type of trace processing for multiple sweeps, is set under the Trace/Detector key, with choices of **Trace Average, Max Hold, or Min Hold**.

In Other Measurements/Modes:

With **Avg Number** (in the **Meas Setup** menu) set to **Off** or set to **On** with a value of 1, a sweep is taken after the trigger condition is met; and the analyzer continues to take new sweeps after the current sweep has completed and the trigger condition is again met. However, with **Avg Number** set to On with a value >1, multiple sweeps (data acquisitions) are taken for the measurement. The trigger condition must be met prior to each sweep. The sweep is not stopped when the average count k equals the number N set for Avg Number is reached, but the number k stops incrementing. A measurement average usually applies to all traces, marker results, and numeric results. But sometimes it only applies to the numeric results.

If the analyzer is in Single measurement, pressing the **Continuous** key does not change k and does not cause the sweep to be reset; the only action is to put the analyzer into Continuous measurement operation.

If it is already in continuous sweep:

- the INIT:CONT 1 command has no effect
- the INIT:CONT 0 command will place the analyzer in Single Sweep but will have no effect on the current sequence until k = N, at which point the current sequence will stop and the instrument will go

Common Measurement Functions  
**Cont (Continuous Measurement/Sweep)**

to the idle state.



## FREQ/Channel

The key accesses a menu allowing you to set Frequency parameters for the current measurement. All measurements in W-CDMA mode have the same menu structure.

Key Path	Front-panel key
----------	-----------------

### Center Frequency

Sets the frequency that corresponds to the horizontal center of the graticule (for the normal setup where Frequency Scale Type is set to linear). While adjusting the Center Frequency the Span is held constant, which means that both Start Frequency and Stop Frequency will change.

Center Freq also sets the frequency entry mode to Center/Span. In Center/Span mode, the center frequency and span values are displayed below the graticule, and the default active function in the Frequency menu is **Center Freq**.

The **Center Frequency** setting is the same for all measurements within a **Mode**. Some modes are also able to share a global **Center Frequency** value; if this is the case, the **Mode** will have a **Global Settings** key in its **Mode Setup** menu.

If your analyzer has multiple inputs, the Center Freq function sets (and queries) the Center Frequency for the currently selected input. If you select another input, the Center Freq changes to the value for that input. SCPI commands are available to directly set the Center Freq for a specific input.

See [“RF Center Freq” on page 1455](#).

See [“I/Q Center Freq” on page 1455](#).

See [“Center Frequency Presets” on page 1455](#).

<b>Remote Command</b>	[ :SENSE ] :FREQuency:CENTer <freq> [ :SENSe ] :FREQuency:CENTer?
Default Unit	Hz
Dependencies/Couplings	<p>When operating in “swept span”, any value of the Center Frequency or Span that is within the frequency range of the analyzer is allowed when the value is being set through the front panel numeric key pad or the SCPI command. The other parameter is forced to a different value if needed, to keep the Start and the Stop Frequencies within the analyzer’s frequency range</p> <p>The Center Frequency can be limited by Start or Stop Freq limits, if the Span is so large that Start or Stop hit their limit.</p> <p>If the electrical attenuator is enabled, any attempt to set Center Frequency such that the Stop Frequency would be &gt;3.6 GHz results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.</p>

## FREQ/Channel

Example	<p>FREQ:CENT 50 MHz</p> <p>FREQ:CENT UP changes the center frequency to 150 MHz if you use FREQ:CENT:STEP 100 MHz to set the center frequency step size to 100 MHz</p> <p>Initial S/W</p> <p>FREQ:CENT?</p>
Initial S/W Revision	Prior to A.02.00
Key Path	<b>FREQUENCY, Center Freq</b>
Mode	BASIC, GSM, WIMAX, OFDMA, WCDMA
Scope	Meas Global
Notes	<p>This command sets either the RF or I/Q Center Frequency depending on the selected input.</p> <p>For RF input it is equivalent to FREQ:RF:CENT</p> <p>For I/Q input it is equivalent to FREQ:IQ:CENT</p> <p>Preset and Max values are dependant on Hardware Options (503, 508, 513, 526)</p>
Preset	<p>Depends on instrument maximum frequency, mode, measurement, and selected input.</p> <p>See <a href="#">“Center Frequency Presets” on page 1455</a>, <a href="#">“RF Center Freq” on page 1455</a> and <a href="#">“I/Q Center Freq” on page 1455</a>.</p>
State Saved	Saved in State
Min	<p>Depends on instrument maximum frequency, mode, measurement, and selected input.</p> <p>See <a href="#">“Center Frequency Presets” on page 1455</a>, <a href="#">“RF Center Freq” on page 1455</a> and <a href="#">“I/Q Center Freq” on page 1455</a>.</p>
Max	<p>Depends on instrument maximum frequency, mode, measurement, and selected input.</p> <p>See <a href="#">“Center Frequency Presets” on page 1455</a>, <a href="#">“RF Center Freq” on page 1455</a> and <a href="#">“I/Q Center Freq” on page 1455</a>.</p>
Test MIN/MAX/DEF	Yes
Status Bits/OPC Dependencies	non-overlapped
Initial S/W Revision	Prior to A.02.00

## Center Frequency Presets

The following table provides the Center Frequency Presets for the various modes.

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
503	1.805 GHz	3.6 GHz	3.7 GHz
507	3.505 GHz	7.0 GHz	7.1 GHz
508	4.205 GHz	8.4 GHz	8.5 GHz
513	6.805 GHz	13.6 GHz	13.8 GHz
526	13.255 GHz	26.5 GHz	27.0 GHz

## RF Center Freq

SCPI command for specifying the RF Center Frequency. This will always access the RF value, even when the selected input is not RF. The front panel always uses the Freq Center (Selected Input).

<b>Remote Command</b>	[ :SENSe ] :FREQuency:RF:CENTer <freq> [ :SENSe ] :FREQuency:RF:CENTer?
Example	FREQ:RF:CENT 30 MHz
Initial S/W Revision	Prior to A.02.00
Mode	All
Scope	Meas Global
Notes	This command is the same in all modes, but the parameter is Measurement Global. So the value is independent in each mode and common across all the measurements in the mode.
Preset	See table above
State Saved	Saved in instrument state.
Min	-79.999995 MHz
Max	See table above. Basically instrument maximum frequency – 10 Hz minimum span. If the knob or step keys are being used, depends on the value of the other three interdependent parameters
Test MIN/MAX/DEF	Yes

## I/Q Center Freq

SCPI command for specifying the I/Q Center Frequency. This will always access the I/Q value, even

## FREQ/Channel

when the selected input is not I/Q. The front panel always uses the Freq Center (Selected Input).

<b>Remote Command</b>	[ :SENSe] :FREQuency:IQ:CENTer <freq> [ :SENSe] :FREQuency:IQ:CENTer?
Example	FREQ:IQ:CENT: 30 MHz
Initial S/W Revision	Prior to A.02.00
Mode	BASIC, GSM, WIMAX OFDMA, WCDMA
Scope	Meas Global
Notes	This command is the same in all modes, but the parameter is Measurement Global. So the value is independent in each mode and common across all the measurements in the mode.
Preset	0 Hz
State Saved	Saved in instrument state.
Min	-39.999995 MHz
Max	39.999995 MHz
Test MIN/MAX/DEF	Yes

## CF Step

CF Step changes the step size for the center frequency and start/stop frequency functions. Once a step size has been selected and the center frequency function is active, the step keys (and the UP|DOWN parameters for Center Frequency from remote commands) change center frequency by the step-size value. The step size function is useful for finding harmonics and sidebands beyond the current frequency span of the analyzer.

Note that the Start and Stop frequencies also step by CF Step. It could be called Freq Step, but since Start and Stop are rarely stepped, the legacy name “CF Step” best describes the key’s main use.

<b>Remote Command</b>	[ :SENSe] :FREQuency:CENTer:STEP[ :INCRement] <freq> [ :SENSe] :FREQuency:CENTer:STEP[ :INCRement] ? [ :SENSe] :FREQuency:CENTer:STEP:AUTO OFF ON 0 1 [ :SENSe] :FREQuency:CENTer:STEP:AUTO?
Default Unit	Hz

Dependencies/Couplings	<p>When auto-coupled in a non-zero span, the center frequency step size is set to 10% of the span. When auto-coupled in zero span, the center frequency step size is set to the equivalent <math>-3</math> dB RBW value.</p> <p>Span, RBW, Center frequency</p> <p>If the electrical attenuator is enabled, any attempt to change the value of the center frequency <math>&gt;3.6</math> GHz by pressing the Up-arrow key, results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.</p>
Example	<p>FREQ:CENT:STEP:AUTO ON</p> <p>FREQ:CENT:STEP 500 MHz</p> <p>FREQ:CENT UP increases the current center frequency value by 500 MHz</p> <p>FREQ:CENT:STEP?</p> <p>FREQ:CENT:STEP:AUTO?</p>
SCPI Status Bits/OPC Dependencies	non-overlapped
Initial S/W Revision	Prior to A.02.00
Key Path	<b>FREQUENCY, CF Step</b>
Mode	SA, TDSCDMA, ADEMOD, VSA, WCDMA
Notes	Preset and Max values are dependant on Hardware Options (503, 508, 513, 526)
Preset	<p>Auto</p> <p>ADEMOD: 1 MHz</p> <p>ON</p>
State Saved	Saved in State
Min	– (the maximum frequency of the instrument). (i.e. 27 GHz max freq instrument has a CF step range of $\pm 27$ GHz)
Max	the maximum frequency of the instrument. (i.e. 27 GHz max freq instrument has a CF step range of $\pm 27$ GHz)
Test MIN/MAX/DEF	<b>Yes</b>
Initial S/W Revision	Prior to A.02.00

FREQ/Channel

## Input/Output

The Input/Output features are common across multiple Modes and Measurements. These common features are described in this section. See the Measurement description for information on features that are unique.

The Input/Output key accesses the softkeys that control the Input/Output parameters of the instrument. In general, these are functions associated with external connections to the analyzer, either to the inputs or the outputs. Since these connections tend to be fairly stable within a given setup, in general the input/output settings do not change when you Preset the analyzer.

Other functions related to the input/output connections, but which tend to change on a measurement by measurement basis, can be found under **Trigger** and **AMPTD Y Scale**. In addition, some of the digital I/O bus configurations can be found under **System**.

**NOTE** The functions in the Input/Output menu are "global" (common) to all Modes (applications). But individual Input/Output functions only appear in a Mode if they apply to that Mode. Functions that apply to a Mode but not to all measurements in the Mode may be grayed-out in some measurements.

See [“Input/Output variables - Preset behavior” on page 1459](#)

The Input Port selection is the first menu under **Input/Output**:

<b>Remote Command:</b>	[ :SENSe ] :FEED RF   AIQ   IQ   IONLy   QONLy   INDependent   AREFERENCE  [ :SENSe ] :FEED?
Backwards Compatibility SCPI:	The legacy parameter [:SENSe]:FEED AREFERENCE is aliased to the new command [:SENSe]:FEED:AREF REF50 for backwards compatibility. This causes the input to be switched to the 50 MHz calibrator.
Preset:	This setting is unaffected by a Preset or power cycle. It survives a Mode Preset and mode changes.  It is set to RF on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state
Key Path:	<b>Front-panel key</b>
Initial S/W Revision:	Prior to A.02.00

### Input/Output variables - Preset behavior

Virtually all the input/output settings are NOT a part of mode preset. They can be set to their default value by one of the three ways - by using the Restore Input/Output Defaults key on the first page of the input/output menu, by using the System->Restore System Defaults->Input/Output Settings or by using the System -> Restore System Defaults->All. Also, they survive Preset and Power cycle.

Common Measurement Functions  
**Input/Output**

A very few of the Input/Output settings do respond to a Mode Preset; for example, if the Calibrator is on it turns off on a Preset, and if DC coupling is in effect it switches to AC on a Preset. These exceptions are made in the interest of reliability and usability, which overrides the need for absolute consistency. Exceptions are noted in the SCPI table for the excepted functions.

**RF Input**

Selects the front-panel RF input port to be the analyzer signal input. If RF is already selected, pressing this key accesses the RF input setup functions.

Example:	[ :SENSe]:FEED RF
Key Path:	<b>Input/Output</b>
Readback:	The current input impedance settings are Readback to this key i.e. "XX, ZZ" where XX is AC or DC and ZZ is 50 or 75
Initial S/W Revision:	Prior to A.02.00

**Input Z Correction**

Sets the input impedance for unit conversions. This affects the results when the y-axis unit is voltage or current units (dBmV, dBμV, dBμA, V, A), but not when it is power units (dBm, W). The impedance you select is for computational purposes only, since the actual impedance is set by internal hardware to 50 ohms. Setting the computational input impedance to 75 ohms is useful when using a 75 ohm to 50 ohm adapter to measure a 75 ohm device on an analyzer with a 50 ohm input impedance.

There are a variety ways to make 50 to 75 ohm transitions, such as impedance transformers or minimum loss pads. The choice of the solution that is best for your measurement situation requires balancing the amount of loss that you can tolerate with the amount of measurement frequency range that you need. If you are using one of these pads/adaptors with the **Input Z Corr** function, you might also want to use the **Ext Gain** key. This function is used to set a correction value to compensate for the gain (loss) through your pad. This correction factor is applied to the displayed measurement values.

<b>Remote Command:</b>	[ :SENSe]:CORRection:IMPedance[:INPut] [:MAGNitude] 50 75 [ :SENSe]:CORRection:IMPedance[:INPut] [:MAGNitude]?
Example:	CORR:IMP 75 sets the input impedance correction to 75 ohms. CORR:IMP?
Preset:	This is unaffected by a Preset but is set to 50 ohms on a "Restore Input/Output Defaults" or "Restore System Defaults->All" Some instruments/options may have 75 ohms available.
State Saved:	Saved in instrument state
Key Path:	<b>Input/Output, RF Input</b>



Readback:	50 $\Omega$ or 75 $\Omega$ . Current setting reads back to the RF key.
Initial S/W Revision:	Prior to A.02.00

### RF Coupling

Specifies alternating current (AC) or direct current (DC) coupling at the analyzer RF input port. Selecting AC coupling switches in a blocking capacitor that blocks any DC voltage present at the analyzer input. This decreases the input frequency range of the analyzer, but prevents damage to the input circuitry of the analyzer if there is a DC voltage present at the RF input.

In AC coupling mode, you can view signals below the corner frequency of the DC block, but below a certain frequency the amplitude accuracy is not specified. The frequency below which specifications do not apply is:

X-Series Model	Lowest Freq for meeting specs when AC coupled	Lowest Freq for meeting specs when DC coupled
N9000A	100 kHz	n/a
N9010A	10 MHz	9 kHz
N9020A	10 MHz	3 Hz
N9030A	10 MHz	3 Hz

Some amplitude specifications apply only when coupling is set to DC. Refer to the appropriate amplitude specifications and characteristics for your analyzer.

When operating in DC coupled mode, ensure protection of the analyzer input circuitry by limiting the DC part of the input level to within 200 mV of 0 Vdc. In AC or DC coupling, limit the input RF power to +30 dBm (1 Watt).

<b>Remote Command:</b>	:INPut:COUPling AC DC :INPut:COUPling?
Example:	INP:COUP DC
Dependencies:	This key does not appear in models that are always AC coupled. When the SCPI command to set DC coupling is sent to these models, it results in the error "Illegal parameter value;This model is always AC coupled" In these models, the SCPI query INP:COUP? always returns AC.
Preset:	AC
State Saved:	Saved in instrument state.
Key Path:	<b>Input/Output, RF Input</b>
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00

## I/Q

This feature is not available unless the “[Baseband I/Q \(Option BBA\)](#)” on page 1462 is installed.

Selects the front-panel I/Q input ports to be the analyzer signal input. If I/Q is already selected, pressing this key accesses the I/Q setup menu.

Example	FEED AIQ
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output</b>
Mode	BASIC, CDMA2K, EDGE GSM, TDSCDMA, VSA89601, WIMAX OFDMA
Notes	Not all measurements support the use of the I/Q signal input. When I/Q is selected in a measurement that does not support it, the "Meas invalid with I/Q inputs" error condition occurs.
Notes	<p>The parameters IQ IONLY QONLY are only supported for backwards compatibility. The E44406 SCPI has the following that corresponds to FEED:IQ:TYPE for X-Series.</p> <pre>[::SENSe]:FEED IQ IONLY QONLY [::SENSe]:FEED?</pre> <p>[::SENSe]:FEED IQ will set the I/Q path to IQ  [::SENSe]:FEED IONLY will set the I/Q path to I Only  [::SENSe]:FEED QONLY will set the I/Q path to Q Only</p> <p>Note [::SENSe]:FEED? will not be backward compatible.  The query [::SENSe]:FEED? will always return AIQ whatever the type of legacy parameters IQ IONLY QONLY has been used.</p>

### Baseband I/Q (Option BBA)

The Baseband I/Q functionality is a hardware option. It is option BBA. If the option is not installed, none of the I/Q functionality is enabled.

The Baseband I/Q has four input ports and one output port. The input ports are I, I-bar, Q, and Q-bar. The I and I-bar together compose the I channel and the Q and Q-bar together compose the Q channel. Each channel has two modes of operation, Single-Ended (also called "unbalanced") and Differential Input (also called "balanced"). When in Single-Ended operation, only the main port (I or Q) is used and the complementary port (I-bar or Q-bar) is ignored. When in Differential Input mode, both main and complementary ports are used.

The input settings (range, attenuation, skew, impedance, external gain) apply to the channels, not the individual ports.

The system supports a variety of 1 MΩ input passive probes as well as the Agilent 113x Series active differential probes using the Infinimax probe interface.

The Agilent 113x Series active probes can be used for both single ended and differential measurements.

In either case a single connection is made for each channel (on either the I or Q input). The input is automatically configured to 50  $\Omega$  single ended and the probe power is supplied through the Infinimax interface. The probe can be configured for a variety of input coupling and low frequency rejection modes. In addition, a wide range of offset voltages and probe attenuation accessories are supported at the probe interface. The active probe has the advantage that it does not significantly load the circuit under test, even with unity gain probing.

With passive 1 M $\Omega$  probes, the probe will introduce a capacitive load on the circuit, unless higher attenuation is used at the probe interface. Higher attenuation reduces the signal level and degrades the signal-to-noise-ratio of the measurement. Passive probes are available with a variety of attenuation values for a moderate cost. Most Agilent passive probes can be automatically identified by the system, setting the input impedance setting required as well as the nominal attenuation. For single ended measurements a single probe is used for each channel. Other passive probes can be used, with the attenuation and impedance settings configured manually.

For full differential measurements, the system supports probes on each of the four inputs. The attenuation of the probes should be the same for good common mode rejection and channel match.

Both active and passive probes in single ended and differential configurations can be calibrated. This calibration uses the Cal Out BNC connection and a probe connection accessory. The calibration achieves excellent absolute gain flatness in a probed measurement. It matches both the gain and frequency response of the I and Q channels as well as any delay skew, resulting in high accuracy in derived measurements such as Error Vector Magnitude (EVM).

When a probe is connected a status message will be displayed. The message will indicate if calibration data is available or not. Calibration data is saved for each type of probe (including "none") for each port and will be reapplied whenever that type of probe is re-connected to the same port. For probes with EEPROM identification, the calibration data will be stored based on the unique probe identifier and will reapply data for that particular probe if it is available. The data will not follow a probe from one port to another. For probes without EEPROM identification, the instrument cannot distinguish between different probes of the same type and it will use the data from the last calibration for that probe type on that port.

When in differential mode, both the main and complementary probes are expected to be of the same type.

In some situations, the I and Q channels should be configured identically. In other situations it is convenient to control them independently. Some menus have a "Q Same as I" setting that will cause the Q channel configuration to mirror the I channel configuration, avoiding the overhead of double data entry when the channels should be the same.

The output port is for calibrating the I/Q input ports, although it can also be manually controlled.

There are two types of calibrations available: cable calibration and probe calibration. The cable calibration will guide the user through connecting each input port in turn. All ports must be calibrated together. The probe calibration is done for a specific channel (I or Q). If in Single-Ended mode, only the main port is calibrated. When in Differential Input mode, the user is guided through calibrating both main and complementary ports.

The front panel I/Q port LEDs indicate the current state of that port. On (green) indicates it is active, and off (dark) indicates it is not in use. For example, the Cal Out port LED is on if and only if there is signal coming out of that port.

The input is a context and some parameters have separate values for each context. The SCPI for these parameters has an optional "[:RF|IQ]" node. If the specific context is omitted, the command acts on the

## Common Measurement Functions

### Input/Output

current input context's value. Here are the parameters that are input context sensitive:

- Center Frequency
- Trigger Source

It is important to distinguish between the I and Q input ports and the displayed I and Q data values. The I and Q input ports feed into a digital receiver that does digital tuning and filtering. The I and Q data seen by the user (either on the display or through SCPI) corresponds to the real ("I") and the imaginary ("Q") output from the digital receiver. When the input path is I+jQ or I Only and the center frequency is 0 Hz the I input ends up in as the real output from the receiver and appears as "I" data. Likewise, when the input path is I+jQ and the center frequency is 0 Hz, the Q input ends up as the imaginary output from the receiver and appears as "Q" data. However, when the input path is Q Only, the Q input is sent to the receiver as Q+j0, so the receiver output has the Q input coming out on the real output, and so in Q Only, the signal from the Q input port appears as the "I" data. Another situation where the I and Q data do not necessarily correspond directly to the I and Q inputs is when the center frequency is non-zero. The digital processing involved in the tuning is a complex operation. This will result in I Only data appearing as both "I" and "Q" data, the same as that signal would appear if seen through the RF input port.

#### I/Q Path

Selects which I/Q input channels are active. The LED next to each I/Q input port will be on when that port is active.

The analysis bandwidth for each channel is the same as that of the instrument. So, for example, the base N9020A has a bandwidth of 10 MHz. With I/Q input the I and Q channels would each have an analysis bandwidth of 10 MHz, giving 20 MHz of bandwidth when the I/Q Path is I+jQ. With option B25, the available bandwidth becomes 25 MHz, giving 25 MHz each to I and Q and 50 MHz to I+jQ.

I/Q voltage to power conversion processing is dependent on the I/Q Path selected.

- With I+jQ input we know that the input signal may not be symmetrical about 0 Hz, because it has a complex component. Therefore, above 0 Hz only the positive frequency information is displayed, and below 0 Hz only the negative frequency information is displayed.
- With all other Input Path selections, the input signal has no complex component and therefore is always symmetrical about 0 Hz. In this case, by convention, the power conversion shows the combined voltage for both the positive and negative frequencies. The information displayed below 0 Hz is the mirror of the information displayed above 0 Hz. This results in a power reading 6.02 dB higher (for both) than would be seen with only the positive frequency voltage. Note also that, in this case the real signal may have complex modulation embedded in it, but that must be recovered by further signal processing.

<b>Remote Command</b>	[ :SENSE] :FEED:IQ:TYPE IQ   IONLY   QONLY   INDEPENDENT [ :SENSE] :FEED:IQ:TYPE?
Example	Set the input to be both the I and Q channels, combined as I + j * Q. FEED:IQ:TYPE IQ
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q</b>

Notes	The Independent I and Q selection is only available in GPVSA
Preset	IQ
State Saved	Yes This is unaffected by a Preset but is set to the default value on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Range	I+jQ   I Only   Q Only   Independent I and Q
Readback Text	I+jQ   I Only   Q Only   Ind I/Q

<b>Remote Command:</b>	: INPut [1] : IQ:TYPE IQ   I   Q : INPut [1] : IQ:TYPE?
Preset:	IQ
Initial S/W Revision:	Prior to A.02.00

### I+jQ

Sets the signal input to be both the I and Q channels. The I and Q channel data will be combined as  $I + j * Q$ .

Key Path	<b>Input/Output, I/Q, I/Q Path</b>
Example	Set the input to be both the I and Q channels, combined as $I + j * Q$ . FEED:IQ:TYPE IQ
Initial S/W Revision	Prior to A.02.00

### I Only

Sets the signal input to be only the I channel. The Q channel will be ignored. The data collected is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant.

Key Path	<b>Input/Output, I/Q, I/Q Path</b>
Example	Set the input to be only the I channel. FEED:IQ:TYPE IONL
Initial S/W Revision	Prior to A.02.00

### Q Only

Sets the signal input to be only the Q channel. The I channel will be ignored. The Q channel will be sent to the digital receiver block as  $Q+j0$ . The receiver's output is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant. Note that since the receiver's real output is displayed as the "I" data, when the

Common Measurement Functions  
**Input/Output**

center frequency is 0, the Q Only input appears as the "I" data.

Key Path	<b>Input/Output, I/Q, I/Q Path</b>
Example	Set the input to be only the Q channel. FEED:IQ:TYPE QONL
Initial S/W Revision	Prior to A.02.00

**Independent I and Q**

Sets the signal input to be both the I and Q channels, but as independent inputs. It is equivalent to treating I as channel 1 and Q as channel 2 in an oscilloscope. Each channel's data is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant.

This selection is only available in VXA.

Example	Turn on both I and Q channels and treat I as channel 1 and Q as channel 2. FEED:IQ:TYPE IND
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I/Q Path</b>
Notes	The Independent I and Q selection is only available in GPVSA
Readback Text	Ind I/Q

**I Setup**

Access the channel setup parameters for the I channel.

Key Path	<b>Input/Output, I/Q</b>
Initial S/W Revision	Prior to A.02.00

**I Differential Input**

Selects differential input on or off for the I channel. For differential input (also called balanced input), the analyzer uses both main and complementary ports. When differential input is off (also called single-ended or unbalanced input), the analyzer uses only the main port.

<b>Remote Command</b>	:INPut:IQ[:I]:DIFFerential OFF ON 0 1 :INPut:IQ[:I]:DIFFerential?
Example	Put the I channel in Differential Input mode INP:IQ:DIFF ON
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I Setup</b>

Notes	When Differential Input = On, the analyzer will check for attenuation mismatches between the I and I-bar ports. If the difference in attenuation values exceeds 0.5 dB an error condition will be set.
Couplings	Some active probes include built-in differential capability. When one of these probes is sensed, this key is disabled. Since the differential capability is handled in the probe, the Analyzer will use only the main port and the key will show that the Analyzer's Differential Input mode is Off (indicating that the complementary port not in use).  When Q Same as I is On, the value set for I will also be copied to Q.
Preset	Off
State Saved	Yes  This is unaffected by a Preset but is set to the default value on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Range	Off   On

<b>Remote Command:</b>	:INPut [1] :IQ:BALanced[:STATE] OFF ON 0 1 :INPut [1] :IQ:BALanced[:STATE] ?
Preset:	OFF
Notes:	This backwards compatibility SCPI command was for an instrument without independent settings for the I and Q channels. Therefore, it is tied only to the I channel and does not provide an equivalent for the Q channel. For proper operation of the backwards compatibility command Q Same as I should be set to On.
Initial S/W Revision:	Prior to A.02.00

### I Input Z

Selects the input impedance for the I channel. The impedance applies to both the I and I-bar ports.

The input impedance controls the hardware signal path impedance match. It is not used for converting voltage to power. The voltage to power conversion always uses the Reference Z parameter. The Reference Z parameter applies to both I and Q channels.

<b>Remote Command</b>	:INPut [1] :IQ[:I] :IMPedance LOW HIGH :INPut [1] :IQ[:I] :IMPedance?
Example	Set the I channel input impedance to 1 MΩ INP:IQ:IMP HIGH
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I Setup</b>
Notes	LOW = 50 Ω, HIGH = 1 MΩ

Common Measurement Functions  
**Input/Output**

Couplings	Input impedance is a built-in characteristic of a probe. Therefore, whenever a probe is sensed, this key is disabled and the value is set to match the probe.  When no probe is sensed on Q and Q Same as I is On, the value set for I will also be copied to Q.
Preset	LOW
State Saved	Yes  This is unaffected by a Preset but is set to the default value on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Range	50 $\Omega$   1 M $\Omega$

**I Skew**

Sets the skew factor for the I channel. The skew will shift the channel's data in time. Use this to compensate for differences in the electrical lengths of the input paths due to cabling.

Key Path	<b>Input/Output, I/Q, I Setup</b>
<b>Remote Command</b>	[ :SENSE ] :CORRection:IQ[ :I ] :SKEW <seconds> [ :SENSE ] :CORRection:IQ[ :I ] :SKEW?
Preset	0
State Saved	Yes  This is unaffected by Preset but is set to the default value on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Range	0 s to 100 ns
Example	Delay the data for the I channel by 10 ns.  CORR:IQ:SKEW 10 ns
Initial S/W Revision	Prior to A.02.00

**I Probe**

Access the probe setup parameters for the I channel. See [“I/Q Probe Setup” on page 1472](#).

Key Path	<b>Input/Output, I/Q, I Setup</b>
State Saved	No
Readback Text	[<I port probe id>]  This is reporting the type of probe sensed on the I port. There is no parameter for overriding what is sensed.
Initial S/W Revision	Prior to A.02.00

**Combined Differential/Input Z (Remote Command Only)**

This is Remote Command only (no front panel) and is for backwards compatibility only. It combines the



Differential Input and Input Z selections into a single SCPI command.

<b>Remote Command:</b>	:INPut:IMPedance:IQ U50 B50 U1M B1M :INPut:IMPedance:IQ?
Preset:	U50
Notes:	<p>The enum values translate as follows:</p> <p>U50: Differential Input = Off, Input Z = 50Ω</p> <p>B50: Differential Input = On, Input Z = 50Ω</p> <p>U1M: Differential Input = Off, Input Z = 1 MΩ</p> <p>B1M: Differential Input = On, Input Z = 1 MΩ</p> <p>This command is for backwards compatibility. It combines the Input Z (50Ω or 1 MΩ) parameter with the Differential Input (Off = "Unbalanced", On = "Balanced") parameter into a single enumeration.</p> <p>This backwards compatibility SCPI command was for an instrument without independent settings for the I and Q channels. Therefore, it is tied only to the I channel and does not provide an equivalent for the Q channel. For proper operation of the backwards compatibility command Q Same as I should be set to On.</p> <p>Also, note the subtle difference between this SCPI command and the backwards compatibility command for Input Z. The Input Z SCPI has "IQ" before "IMP" while this command has that order reversed.</p>
Couplings:	This command does not have an independent parameter, but instead is tied to the Differential Input and Input Z parameters. The coupling for those parameters apply to this command too.
Example:	:INPut:IMPedance:IQ U50  This is equivalent to the following two SCPI commands: :INP:IQ:DIFF OFF :INP:IQ:IMP 50
Initial S/W Revision:	Prior to A.02.00

### Q Setup

Access the channel setup parameters for the Q channel.

Key Path	<b>Input/Output, I/Q</b>
Readback Text	When Q Same as I is On the readback is "Q Same as I".
Initial S/W Revision	Prior to A.02.00

### Q Same as I

Many, but not all, usages require the I and Q channels have an identical setup. To simplify channel setup, the Q Same as I will cause the Q channel parameters to be mirrored from the I channel. That way your

Common Measurement Functions  
**Input/Output**

only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time Q Same as I is turned off the I and Q channel setups will be identical. This does not apply to Probe settings or to parameters that determined by the probe.

<b>Remote Command</b>	:INPut:IQ:MIRRored OFF ON 0 1 :INPut:IQ:MIRRored?
Example	Turn off the mirroring of parameters from I to Q. INP:IQ:MIRR OFF
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, Q Setup</b>
Couplings	Only displayed for the Q channel. When Yes, the I channel values for some parameters are mirrored (copied) to the Q channel. However, when a parameter is determined by the type of probe and a probe is sensed, the probe setting is always used and the I channel setting is ignored. The following parameters are mirrored:  Differential Input (when not determined by probe) Input Z (when not determined by probe)
Preset	This is unaffected by a Preset but is set to the default value (Q Same as I set to "On") on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved	Saved in instrument state.
Range	On   Off
Readback Text	"Q Same as I" when On, otherwise none.

**Q Differential Input**

Selects differential input on or off for the Q channel. For differential input (also called balanced input), the analyzer uses both the Q and Q-bar ports. When differential input is off (also called single-ended or unbalanced input), the analyzer uses only the Q port.

<b>Remote Command</b>	:INPut:IQ:Q:DIFFerential OFF ON 0 1 :INPut:IQ:Q:DIFFerential?
Example	Put the Q channel in Differential Input mode INP:IQ:Q:DIFF ON
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, Q Setup</b>
Notes	When Differential Input = On, the analyzer will check for attenuation mismatches between the Q and Q-bar ports. If the difference in attenuation values exceeds 0.5 dB an error condition will be set.

Couplings	Some active probes include built-in differential capability. When one of these probes is sensed, this key is disabled. Since the differential capability is handled in the probe, the Analyzer will use only the main port and the key will show that the Analyzer's Differential Input mode is Off (indicating that the complementary port not in use).  When a differential probe is not sensed and Q Same as I is On, the value set for I will be copied to Q. This key is disabled when Q Same as I is On.
Preset	Off
State Saved	On  This is unaffected by a Preset but is set to the default value on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Range	Off   On

### Q Input Z

Selects the input impedance for the Q channel. The impedance applies to both the Q and Q-bar ports.

The input impedance controls the hardware signal path impedance match. It is not used for converting voltage to power. The voltage to power conversion always uses the Reference Z parameter. The Reference Z parameter applies to both I and Q channels.

<b>Remote Command</b>	: INPut [1] : IQ:Q: IMPedance LOW HIGH : INPut [1] : IQ:Q: IMPedance?
Example	Set the Q channel input impedance to 1 MΩ INP:IQ:Q:IMP HIGH
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, Q Setup</b>
Notes	LOW = 50 Ω, HIGH = 1 MΩ
Couplings	Input impedance is a built-in characteristic of a probe. Therefore, whenever a probe is sensed, this key is disabled and the value is set to match the probe.  When no probe is sensed and Q Same as I is On, the value set for I will also be copied to Q. This key is disabled when Q Same as I is On.
Preset	LOW
State Saved	On  This is unaffected by Preset but is set to the default value on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Range	50 Ω   1 MΩ

### Q Skew

Sets the skew factor for the Q channel. The skew will shift the channel's data in time. Use this to

## Common Measurement Functions

### Input/Output

compensate for differences in the electrical lengths of the input paths due to cabling and probes.

Key Path	Input/Output, I/Q, Q Setup
<b>Remote Command</b>	[ :SENSe] :CORRection:IQ:Q:SKEW <seconds> [ :SENSe] :CORRection:IQ:Q:SKEW?
Preset	0
State Saved	Yes  This is unaffected by a Preset but is set to the default value on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Range	0 s to 100 ns
Example	Delay the data for the Q channel by 10 ns. CORR:IQ:Q:SKEW 10 ns
Initial S/W Revision	Prior to A.02.00

### Q Probe

Accesses the probe setup parameters for the Q channel. See ["I/Q Probe Setup"](#) on page 1472.

Key Path	Input/Output, I/Q, Q Setup
State Saved	No
Readback Text	[<Q port probe id>  This is reporting the type of probe sensed on the Q port. There is no parameter for overriding what is sensed.
Initial S/W Revision	Prior to A.02.00

### I/Q Probe Setup

The set of I/Q probe setup parameters will change based on the type of probe that is sensed. All probe types have the Attenuation parameter, and all probe types can be calibrated. The remaining parameters are only available for some probe types and will not be shown when not available. The probe type is determined by and reported for only for the I and Q ports, never the I-bar or Q-bar ports. The menu title will be "<ch>: <probe id>", where "<ch>" is either "I" or "Q" and "<probe id>" is the type of probe. For example, for the I Probe setup with an Agilent 1130A probe connected to the I port, the title will be "I: 1130A".

Probe calibration data is stored for each probe type for each channel. When no probe is sensed, the probe type "Unknown" is used, and this is also treated like a probe type with its own calibration data. When a probe is changed, the calibration data for that probe type for that port is restored. An advisory message will be displayed showing the new probe type and the calibration status. The calibration data is stored permanently (survives a power cycle) and is not affected by a Preset or any of the Restore commands. When the probe has EEPROM identification (most newer Agilent probes have this), the calibration data is stored by probe serial number and port, so if you have two probes of the same type, the correct calibration data will be used for each. For probes that do not have EEPROM identification, the

calibration data is stored by probe type and port and the instrument cannot distinguish between different probes of the same type. In all cases (with or without EEPROM identification), the calibration data is port specific, so it will not follow a specific probe from port to port if the probe is moved.

The "Unknown" probe type is used whenever no probe is sensed. When no calibration data exists for "Unknown" the latest cable calibration data is used (see Section [“I/Q Guided Calibration” on page 1518](#)).

### Attenuation

The attenuation is part of the calibration data stored with the probe type and is initially the value that was returned by the last calibration. You can modify this value and any changes will be stored with the calibration data and will survive power cycles and presets. When a probe calibration is performed the attenuation value will be overwritten by the calibration.

<b>Remote Command</b>	<code>[ :SENSE]:CORRection:IQ:I Q:ATTenuation:RATio &lt;real&gt;</code> <code>[ :SENSe]:CORRection:IQ:I Q:ATTenuation:RATio?</code>
Example	Set the attenuation for the current I probe to 100.00:1. <code>CORR:IQ:I:ATT:RAT 100</code>
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I Setup   Q Setup, I Probe   Q Probe</b>
Notes	Each probe type has its own attenuation setting. As probes are changed the attenuation value will reflect the new probe's setting. Changing the attenuation affects only the current probe type's setting and leaves all others unchanged.
Preset	Each probe type has its own default. The default for the "Unknown" probe type is 1:1.
State Saved	Saved with probe calibration data. It survives a power cycle and is not affected by a Preset or Restore.
Range	0.001 to 10000

<b>Remote Command:</b>	<code>[ :SENSE]:CORRection:IQ:I Q:ATTenuation &lt;rel_ampl&gt;</code> <code>[ :SENSe]:CORRection:IQ:I Q:ATTenuation?</code>
Range:	-60 dB to +80 dB
Example:	Set the attenuation for the current I probe type to 100.00:1. <code>CORR:IQ:I:ATT 20 dB</code>
Initial S/W Revision:	Prior to A.02.00

### Offset

Some active probes have DC offset capability. When one of these probes is connected this control will be visible. The signal is adjusted for the DC offset before entering the analyzer's port. This allows for removal of a DC offset before hitting the analyzer's input port voltage limits. For example, a signal that varies 1 V peak-to-peak with a DC offset equal to the analyzer's max input voltage would exceed the

## Common Measurement Functions

### Input/Output

input limits of the analyzer for half its cycle. Removing the DC offset allows the analyzer to correctly process the entire signal.

<b>Remote Command</b>	:INPut:OFFSet:I Q <voltage> :INPut:OFFSet:I Q?
Example	Remove a DC offset of -0.5 V from the I channel input. INP:OFF:I -0.5
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I Setup   Q Setup, I Probe   Q Probe</b>
Notes	Only some probe types support Offset. For those that do, each probe type has its own Offset setting. As probes are changed the Offset value will reflect the new probe's setting. Changing the Offset affects only the current probe type's setting and leaves all others unchanged.
Preset	0 V
State Saved	Saved with probe calibration data. It survives power cycle and is not affected by Preset or Restore.
Range	-18 V to +18 V

### Coupling

Some probe types allow coupling to reject low frequencies. This will filter out the DC component of a signal that is composed of a DC bias plus some AC signal. This control is visible only for probe types that have this capability.

<b>Remote Command</b>	:INPut:COUPling:I Q DC LFR1 LFR2 :INPut:COUPling:I Q?
Example	Set the probe to low frequency rejection below 1.7 Hz. INP:COUP:I LFR1
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I Setup   Q Setup, I Probe   Q Probe</b>
Notes	Only some probe types support Coupling. For those that do, each probe type has its own Coupling setting. As probes are changed the Coupling value will reflect the new probe's setting. Changing the Coupling affects only the current probe type's setting and leaves all others unchanged.
Preset	DC
State Saved	Saved with probe calibration data. It survives a power cycle and is not affected by a Preset or Restore.
Range	DC   AC 1.7 Hz LFR1   AC 0.14 Hz LFR2
Readback Text	DC   LFR1   LFR2

**DC**

Turns off low frequency rejection, allowing signals down to DC.

Key Path	<b>Input/Output, I/Q, I Setup   Q Setup, I Probe   Q Probe, Coupling</b>
Example	Turn off low frequency rejection on the I channel INP:COUP:I DC
Initial S/W Revision	Prior to A.02.00

**LFR1**

Turns on low frequency rejection, rejecting signal component lower than 1.7 Hz.

Key Path	<b>Input/Output, I/Q, I Setup   Q Setup, I Probe   Q Probe, Coupling</b>
Example	Turn on low frequency rejection on the I channel for frequencies lower than 1.7 Hz INP:COUP:I LFR1
Initial S/W Revision	Prior to A.02.00

**LFR2**

Turns on low frequency rejection, rejecting signal component lower than 0.14 Hz.

Key Path	<b>Input/Output, I/Q, I Setup   Q Setup, I Probe   Q Probe, Coupling</b>
Example	Turn on low frequency rejection on the I channel for frequencies lower than 0.14 Hz INP:COUP:I LFR2
Initial S/W Revision	Prior to A.02.00

**Calibrate**

Invokes the guided probe calibration. The guided probe calibration is context sensitive and depends on the channel (I or Q) and the Differential Input state. The calibration is only performed on the selected channel. When Differential Input is on, both the probe attached to the main port and the probe attached to the complementary port are calibrated. When Differential Input is off, only the probe attached to the main port is calibrated. See [“I/Q Guided Calibration” on page 1518](#).

Key Path	<b>Input/Output, I/Q, I Setup   Q Setup, I Probe   Q Probe, Coupling</b>
----------	--

Common Measurement Functions  
**Input/Output**

Readback Text	The last calibration date, or if no calibration exists, "(empty)". Last: <cal date> <cal time> Example: Last: 8/22/2007 1:02:49 PM
Initial S/W Revision	Prior to A.02.00

**Clear Calibration**

Clears the calibration data for the current port and probe. It does not clear the data for other probe types or other ports. If the sensed probe has EEPROM identification, only the data for that specific probe is cleared. After this command has completed, the probe calibration state will be the same as if no probe calibration had ever been performed for the specified channel and probe. The probe attenuation will be the default value for that probe type and the Cable Calibration frequency response corrections will be used. This command is dependent on the Differential Input state. When Differential Input is on, both the data for the probe attached to the main port and the data for the probe attached to the complementary port are cleared. When Differential Input is off, only data for the probe attached to the main port is cleared.

Key Path	<b>Input/Output, I/Q, I Setup   Q Setup, I Probe   Q Probe</b>
<b>Remote Command</b>	:CALibration:IQ:PROBe:I Q:CLEar
Example	Clear the calibration data for the I channel and the current probe (with EEPROM identification) or probe type (without EEPROM identification). :CAL:IQ:PROBe:I:CLE
Initial S/W Revision	Prior to A.02.00

**Reference Z**

Sets the value of the impedance to be used in converting voltage to power for the I and Q channels. This does not change the hardware's path impedance (see "I Input Z" on page 1467 ).

Key Path	<b>Input/Output, I/Q</b>
<b>Remote Command</b>	:INPut:IMPedance:REFerence <integer> :INPut:IMPedance:REFerence?
Preset	50 $\Omega$
State Saved	Yes This is unaffected by a Preset but is set to the default value on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Range	1 $\Omega$ to 1 M $\Omega$



Example	Set the I/Q reference impedance to 50 $\Omega$ INP:IMP:REF 50
Initial S/W Revision	Prior to A.02.00

**I/Q Cable Calibrate...**

Invokes the guided cable calibration. The guided cable calibration steps the user through a calibration of all ports (I, I-bar, Q, and Q-bar) using just a cable (no probe attached). See [“I/Q Guided Calibration” on page 1518](#).

Key Path	<b>Input/Output, I/Q</b>
Initial S/W Revision	Prior to A.02.00

**RF Calibrator**

Lets you choose a calibrator signal to look at or turns the calibrator "off" (switches back to the selected input). When one of the calibrator signals is selected, the analyzer routes that signal (an internal amplitude reference) to the analyzer, while leaving the main input selection (RF or I/Q) unchanged.

This function presets to OFF on a Mode Preset, which causes the internal circuitry to switch back to the selected input (RF or I/Q).

<b>Remote Command:</b>	[ :SENSe ] :FEED:AREFERENCE REF50   REF4800   OFF [ :SENSe ] :FEED:AREFERENCE?
Example:	FEED:AREF REF50 !selects the 50 MHz amplitude reference as the signal input. FEED:AREF REF4800 !selects the 4.8 GHz amplitude reference as the signal input FEED:AREF OFF !turns the calibrator "off" (switches back to the selected input – RF or I/Q)
Dependencies:	Selecting an input (RF or I/Q) turns the Calibrator OFF. This is true whether the input is selected by the keys or with the [ :SENSe ]:FEED command.  The 4.8 GHz internal reference is only available in some models and frequency range options. If the 4.8 GHz reference is not present, the <b>4.8 GHz</b> softkey will be blanked, and if the REF4800 parameter is sent, the analyzer will generate an error.
Preset:	OFF
State Saved:	Saved in State
Key Path:	<b>Input/Output</b>
Readback:	Off, 50 MHz, 4.8 GHz

Common Measurement Functions  
**Input/Output**

Backwards Compatibility SCPI:	<p>For ESA backwards compatibility, the legacy SCPI command CALibration:SOURce:STATe &lt;boolean&gt; (ESA's Amptd Ref Out SCPI) will still be supported and mapped as follows:</p> <p>When CALibration:SOURce:STATe ON is received [SENSe]:FEED:AREF REF50 will execute</p> <p>When CALibration:SOURce:STATe OFF is received [SENSe]:FEED:AREF OFF will execute</p> <p>When CALibration:SOURce:STATe? is received, 1 will be returned if any of the references is selected and 0 if the Calibrator is "Off"</p>
Initial S/W Revision:	Prior to A.02.00

**50 MHz**

Selects the 50 MHz internal reference as the input signal.

Example:	:FEED:AREF REF50
Key Path:	<b>Input/Output, RF Calibrator</b>
Readback:	50 MHz
Initial S/W Revision:	Prior to A.02.00

**4.8 GHz**

Selects the 4.8 GHz internal reference as the input signal.

Example:	:FEED:AREF REF4800
Key Path:	<b>Input/Output, RF Calibrator</b>
Readback:	4.8 GHz
Dependencies:	The 4.8 GHz internal reference is only available in some models and frequency range options. If the 4.8 GHz reference is not present, the <b>4.8 GHz</b> softkey will be blanked, and if the REF4800 parameter is sent, the analyzer will generate an error.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00

**Off**

Switches the input back to the selected input (RF or I/Q)

Example:	:FEED:AREF OFF
Key Path:	<b>Input/Output, RF Calibrator</b>
Readback:	Off

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

## External Gain

Compensates for gain or loss in the measurement system outside the spectrum analyzer. The External Gain is subtracted from the amplitude readout (or the loss is added to the amplitude readout). So, the displayed signal level represents the signal level at the output of the device-under-test, which can be the input of an external device that provides gain or loss.

Entering an External Gain value does not affect the Reference Level, therefore the trace position on screen changes, as do all of values represented by the trace data. Thus, the values of exported trace data, queried trace data, marker amplitudes, trace data used in calculations such as N dB points, trace math, peak threshold, etc., are all affected by External Gain. Changing the External Gain, even on a trace which is not updating, will immediately change all of the above, without new data needing to be taken.

---

**NOTE** Changing the External Gain causes the analyzer to immediately stop the current sweep and prepare to begin a new sweep, but the data will not change until the trace data updates, because the offset is applied to the data as it is taken. If a trace is exported with a nonzero External Gain, the exported data will contain the trace data with the offset applied.

---

In the Spectrum Analyzer mode, a Preamp is the common external device providing gain or loss. In a measurement application mode like GSM or W-CDMA, the gain or loss could be from a BTS (Base Transceiver Station) or an MS (Mobile Station). So in the Spectrum Analyzer mode MS and BTS would be grayed out and the only choice would be Ext Preamp. Similarly in some of the digital communications applications, Ext Preamp will be grayed out and you would have a choice of MS or BTS.

Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output</b>
Couplings	The Ext Preamp, MS, and BS keys may be grayed out depending on which measurement is currently selected. If any of the grayed out keys are pressed, or the equivalent SCPI command is sent, an advisory message is generated.
Readback	1-of-N selection   [variable]

## Ext Preamp

This function is similar to the reference level offset function. Both affect the displayed signal level. Ref Lvl Offset is a mathematical offset only, no analyzer configuration is affected. Ext Preamp gain is used when determining the auto-coupled value of the Attenuator. The External Gain value and the Maximum Mixer Level settings are both part of the automatic setting equation for the RF attenuation setting. (10 dB of Attenuation is added for every 10 dB of External Gain.)

Note that the Ref Lvl Offset and Maximum Mixer Level are described in the Amplitude section. They are reset by the instrument Preset. The External Preamp Gain is reset by the "Restore Input/Output Defaults" or "Restore System Defaults->All functions. . The External Gain is subtracted from the

Common Measurement Functions  
**Input/Output**

amplitude readout so that the displayed signal level represents the signal level at the output of the device-under-test, which is the input of the external device that is providing gain or loss.

<b>Remote Command:</b>	<code>[ :SENSe]:CORRection:SA[:RF]:GAIN &lt;rel_amp1&gt;</code> <code>[ :SENSe]:CORRection:SA[:RF]:GAIN?</code>
Example:	<code>CORR:SA:GAIN 10</code> !sets the Ext Gain value to 10 dB <code>CORR:SA:GAIN -10</code> !sets the Ext Gain value to -10 dB (that is, an attenuation of 10 dB)
Notes:	Does not auto return.
Dependencies:	The reference level limits are determined in part by the External Gain/Atten, Max Mixer Level, and RF Atten.  This key is grayed out in Modes that do not support External Gain
Preset:	This is unaffected by Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state
Min:	-81.90 dB
Max:	81.90 dB
Key Path:	<b>Input/Output, External Gain</b>
Readback:	Preamp Gain, <Ext Gain value> dB
Backwards Compatibility SCPI:	<code>[ :SENSe]:CORRection:OFFSet[:MAGNitude]</code>
Initial S/W Revision:	Prior to A.02.00

**MS**

Sets an external gain/attenuation value for MS (Mobile Station) tests.

<b>Remote Command:</b>	<code>[ :SENSe]:CORRection:MS[:RF]:GAIN &lt;rel_amp1&gt;</code> <code>[ :SENSe]:CORRection:MS[:RF]:GAIN?</code>
Example:	<code>CORR:MS:GAIN 10</code> !sets the Ext Gain value to 10 dB <code>CORR:MS:GAIN -10</code> !sets the Ext Gain value to -10 dB (that is, a loss of 10 dB.)
Notes:	Does not auto return.
Dependencies:	The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten  This key is grayed out in modes that do not support MS.

Preset:	This is unaffected by a Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state.
Min:	-100 dB
Max:	100 dB
Key Path:	<b>Input/Output, External Gain</b>
Readback:	MS, <Ext Gain value> dB
Backwards Compatibility SCPI:	[ :SENSe ] :CORRection :MS [ :RF ] :LOSS
Backwards Compatibility SCPI:	[ :SENSe ] :CORRection :MS [ :RF ] :LOSS <rel_ampl> [ :SENSe ] :CORRection :MS [ :RF ] :LOSS? Important notes regarding the alias commands: A positive value of <rel_ampl> in the above command means a loss and a negative value indicates a gain. So, for example, sending the command a) CORR:MS:LOSS 10 dB will set the value on the softkey and the active function to -10 dB since the softkey and the active function always show the Gain. The query CORR:MS:LOSS? returns 10 dB The query CORR:MS:GAIN? returns -10 dB b) CORR:MS:LOSS -10 dB will set the value on the softkey and the active function to 10 dB since the softkey and the active function always show the Gain The query CORR:MS:LOSS? returns -10 dB The query CORR:MS:GAIN? returns 10 dB
Initial S/W Revision:	Prior to A.02.00

**BTS**

Sets an external attenuation value for BTS (Base Transceiver Station) tests.

<b>Remote Command:</b>	[ :SENSe ] :CORRection :BTS [ :RF ] :GAIN <rel_ampl> [ :SENSe ] :CORRection :BTS [ :RF ] :GAIN?
Example:	CORR:BTS:GAIN 10 !sets the Ext Gain value to 10 dB CORR:BTS:GAIN -10 !sets the Ext Gain value to -10 dB (that is, a loss of 10 dB.)
Notes:	Does not auto return.

Common Measurement Functions  
**Input/Output**

Dependencies:	The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten  This key is grayed out in modes that do not support BTS.
Preset:	This is unaffected by a Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state.
Min:	-100 dB
Max:	100 dB
Key Path:	<b>Input/Output, External Gain</b>
Readback:	BTS, <Ext Gain value> dB
Backwards Compatibility SCPI:	[:SENSe]:CORRection:BTS[:RF]:LOSS
Backwards Compatibility SCPI:	[:SENSe]:CORRection:BTS[:RF]:LOSS <rel_ampl> [:SENSe]:CORRection:BTS[:RF]:LOSS?  Important notes regarding the alias commands:  A positive value of <rel_ampl> in the above command means a loss and a negative value indicates a gain. So, for example, sending the command  a) CORR:BTS:LOSS 10 dB will set the value on the softkey and the active function to -10 dB since the softkey and the active function always show the Gain.  The query CORR:BTS:LOSS? returns 10 dB The query CORR:BTS:GAIN? returns -10 dB  b) CORR:BTS:LOSS -10 dB will set the value on the softkey and the active function to 10 dB since the softkey and the active function always show the Gain  The query CORR:BTS:LOSS? returns -10 dB The query CORR:BTS:GAIN? returns 10 dB
Initial S/W Revision:	Prior to A.02.00

**I Ext Gain**

This function affects only the I channel input, except when the Input Path is I+jQ. In I+jQ this setting is applied to both I and Q channel inputs. It is not available unless the Baseband I/Q option (BBA) is installed.

<b>Remote Command</b>	[:SENSe]:CORRection:IQ:I:GAIN <rel_ampl> [:SENSe]:CORRection:IQ:I:GAIN?
-----------------------	--

Example	Set the I Ext Gain to 10 dB CORR:IQ:I:GAIN 10 Set the I Ext Gain to -10 dB (that is, a loss of 10 dB.) CORR:IQ:I:GAIN -10
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, External Gain</b>
Notes	Not available unless option BBA is installed
Preset	0 dB This is unaffected by a Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved	Saved in instrument state.
Min	-100 dB
Max	100 dB
Readback Text	I Gain, <I Ext Gain> dB

### Q Ext Gain

This function affects only the Q channel input and only when the Input Path is not I+jQ. It is not available unless the Baseband I/Q option (BBA) is installed.

<b>Remote Command</b>	[ :SENSE]:CORRection:IQ:Q:GAIN <rel_ampl> [ :SENSE]:CORRection:IQ:Q:GAIN?
Example	Set the Q Ext Gain to 10 dB CORR:IQ:Q:GAIN 10 Set the Q Ext Gain to -10 dB (that is, a loss of 10 dB.) CORR:IQ:Q:GAIN -10
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, External Gain</b>
Notes	Not available unless option BBA is installed.
Preset	0 dB This is unaffected by a Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved	Saved in instrument state.
Min	-100 dB
Max	100 dB
Readback Text	Q Gain, <I Ext Gain> dB

## Restore Input/Output Defaults

This selection causes the group of settings and data associated with the **Input/Output** key to be a reset to their default values. This level of Restore System Defaults does not affect any other system settings or mode settings and does not cause a mode switch. All the features described in this section are reset using this key, including Input Corrections and Data (described in the Corrections section).

Example:	:SYST:DEF INP !presets all the Input/Output variables to their factory default values.
Notes:	Please refer to the Utility Functions for information about Restore System Defaults and the complete description of the :SYSTem:DEfault INPut: command.
Key Path:	<b>Input/Output</b>
Initial S/W Revision:	Prior to A.02.00

## Data Source

Gives you the choice of either using a hardware input signal as the input or raw data stored in a data storage buffer from an earlier acquisition. You can also share raw data across certain measurements that support this feature. The measurements must be capable of storing raw data. There are three choices under this menu. You can select "Inputs" which is the same as selecting one of the inputs from the input port, for example RF, AREF, I/Q, or IFALign. Selecting "Capture Buffer" allows you to use data that has been stored earlier in the same measurement or from a previous measurement using the "Current Meas -> Capture Buffer" feature. Selecting "Recorded Data" allows you to playback long data capture records stored in the record buffer.

When you make a recording (see [“Record Data Now” on page 1486](#)) or when you recall a recording (see the Recall section) the data source is automatically set to Recorded Data. You can toggle the data source between Inputs and the current Recording (if there is one). That is, the recording remains in memory until it is replaced by a new recording, or the application is closed.

<b>Remote Command:</b>	[ :SENSe ] :FEED:DATA INPut   STORed   RECorded [ :SENSe ] :FEED:DATA?
Example:	FEED:DATA REC FEED:DATA?
Dependencies:	Not all inputs are available in all modes. Unavailable keys are grayed out.



Notes:	INPutS = Inputs STORed = Capture Buffer RECorded = Record Data Buffer
Preset:	This is unaffected by Preset but is set to INPut on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in state
Key Path:	<b>Input/Output</b>
Readback:	Variable
Backwards Compatibility SCPI:	[[:SENSe]:FEED:SOURce INPut STORed [[:SENSe]:FEED:SOURce?
Initial S/W Revision:	Prior to A.02.00

### Inputs

Sets the measurement to use the input selections (RF, AREF, I/Q)

Example:	FEED:DATA INP !causes the measurement to look at the input selection
Notes:	Does not auto return.
Key Path:	<b>Input/Output, Data Source</b>
Readback:	Inputs
Initial S/W Revision:	Prior to A.02.00

### Capture Buffer

Some WCDMA and demod measurements support this feature. This allows sharing of the raw data across certain measurements. If you want to make another measurement on the same signal, you would store that raw data using the "Current Meas -> Capture Buffer" key. Then the data is available for the next measurement to use. You must have raw data stored in the instrument memory before the Capture Buffer choice is available for use.

If you switch to a measurement that does not support this feature, then the instrument switches to use "Inputs" and grays out this key. If the grayed out key is pressed, it generates a message.

Example:	FEED:DATA STOR !causes stored measurement data to be used with a different measurement that supports this.
Notes:	Does not auto return. This key is grayed out when you switch to a measurement that does not support this feature.
Dependencies:	Grayed out in the SA measurement.
Key Path:	<b>Input/Output, Data Source</b>

Common Measurement Functions  
**Input/Output**

Readback:	Stored Data
Initial S/W Revision:	Prior to A.02.00

**Recorded Data**

Directs the instrument to get data from the record data buffer in the measurement, rather than from the RF Input Signal.

Example:	FEED:DATA REC !causes the measurement to extract data from the record data buffer.
Notes:	Does not auto return.
Dependencies:	Grayed out in the SA measurement.
Key Path:	<b>Input/Output, Data Source</b>
Readback:	Recorded Data
Initial S/W Revision:	Prior to A.02.00

**Current Meas -> Capture Buffer**

Pressing this key stores the raw data of one measurement in the internal memory of the instrument where it can then be used by a different measurement by pressing "Stored Data". When raw data is stored, then the data source selection switch automatically changes to "Stored Data". Stored raw data cannot be directly accessed by a user. There is no save/recall function to save the raw data in an external media. However if you want to get the stored raw data, you must first perform a measurement using the stored raw data. Now you can access the used raw data, which is the same as stored raw data, using the FETCh or READ commands.



<b>Remote Command:</b>	[ :SENSE ] :FEED:DATA:STORE
Example:	FEED:DATA:STOR !stores recorded data
Dependencies:	Grayed out in the SA measurement.
Notes:	This is command only, there is no query
Key Path:	<b>Input/Output, Data Source</b>
Backwards Compatibility SCPI:	[:SENSE]:FEED:SOURce:STORE
Initial S/W Revision:	Prior to A.02.00

**Record Data Now**

This causes the data source to change to Inputs (if it is not already set) and a recording is made with the current instrument setup. The length of the recording must be specified in advance.

This key changes to **Abort Recording** once the recording process has started. It changes back when the recording is complete.

The following dialogs show the progress of the recording:

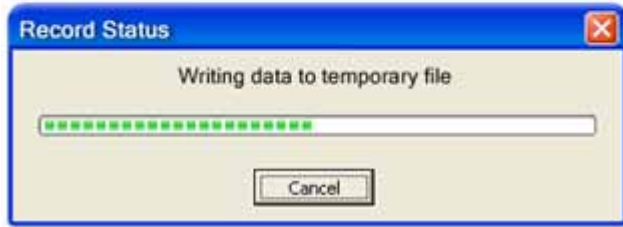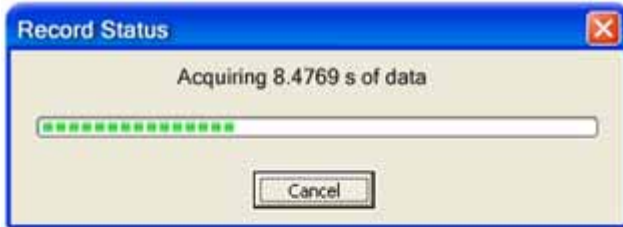

This key is also available in the Sweep/Control menu.

<b>Remote Command</b>	[ :SENSe ] :RECOrding :INITiate [ :IMMediate ]
Example	REC:INIT
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, Data Source</b>
Mode	VSA
Notes	This is command only, there is no query. See the Recall functionality to access previously saved data.
Dependencies	Grayed out in the SA measurement.
Couplings	Changes Data source to Recorded Data.

<b>Remote Command:</b>	[ :SENSe ] :RECOrding :ABORt
Example:	REC:ABOR
Key Path:	<b>Input/Output, Data Source</b>
Notes:	This is command only, there is no query. The command does nothing if it is sent when there is no recording in progress.
Initial S/W Revision:	Prior to A.02.00

### Record Length

This specifies the length of the next recording. (You cannot use this to modify the length of the current recording.) The length defaults to seconds, but you can also specify it in points at the current sample rate,

Common Measurement Functions  
**Input/Output**

or in time records at the current time record length.

<b>Remote Command</b>	[ :SENSe]:RECOrding:LENGth <real>, SECOnds RECOrds POINts [ :SENSe]:RECOrding:LENGth:STATe MAX MANual [ :SENSe]:RECOrding:LENGth:STATe?
Example	REC:LENG 20,REC REC:LENG 4.1E-4,SEC REC:LENG:STAT MAX REC:LENG:STAT?
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, Data Source</b>
Mode	VSA
Notes	There is no default unit. The unit must be specified. The length command does not have a query form. Length information is queried using the two commands following this table. If set to MAX, all of the available "recording memory" us used.
Preset	50 Records, Manual
State Saved	No
Min	0
Max	Depends on memory available.
Readback	<value><Seconds Points Records>

<b>Remote Command</b>	[ :SENSe]:RECOrding:LENGth:VALue?
Example	REC:LENG:VAL?
Initial S/W Revision	Prior to A.02.00
Mode	VSA
Notes	Query Only Returns the first (numeric) parameter of the most recent [ :SENSe]:RECOrding:LENGth command.
Preset	50 Records

<b>Remote Command</b>	[ :SENSe]:RECOrding:LENGth:UNIT?
Example	REC:LENG:UNIT?
Initial S/W Revision	Prior to A.02.00

Mode	VSA
Notes	Query Only  Returns the second parameter of the most recent [:SENSe]:RECORDing:LENGth command. Possible values are SEC REC POIN. If no second parameter was sent, then the return value is SEC.
Preset	RECORDs

## Corrections

This key accesses the Amplitude Corrections menu.

Amplitude Corrections arrays can be entered, sent over SCPI, or loaded from a file. They allow you to correct the response of the analyzer for various use cases. The X-series supports four separate Corrections arrays, each of which can contain up to 2000 points. They can be turned on and off individually and any or all can be on at the same time.

Trace data is in absolute units and corrections data is in relative units, but we want to be able to display trace data at the same time as corrections data. Therefore we establish a reference line to be used while building or editing a Corrections table. The reference line is halfway up the display and represents 0 dB of correction. It is labeled “0 dB CORREC”. It is drawn in blue.

Corrections data is always in dB. Whatever dB value appears in the correction table represents the correction to be applied to that trace at that frequency. So if a table entry shows 30 dB that means we ADD 30 dB to each trace to correct it before displaying it.

In zero span, where the frequency is always the center frequency of the analyzer, we apply the (interpolated) correction for the center frequency to all points in the trace. In the event where there are two correction amplitudes at the center frequency, we apply the first one in the table.

Note that the corrections are applied as the data is taken; therefore, a trace in **View** (Update Off) will not be affected by changes made to the corrections table after the trace is put in **View**.

Initial S/W Revision	A.02.00
Key Path	<b>Input/Output, Corrections</b>
Mode	SA, DVB-T/H, DTMB, SEQAN
Dependencies	This key will only appear if you have the proper option installed in your instrument.  Amplitude correction may not be available in all modes; if a mode does not support amplitude correction, the Corrections key should be blanked while in that mode. If an application supports corrections but the current measurement does not, then the key should be grayed out in that measurement
Preset	Corrections arrays are reset (deleted) by Restore Input/Output Defaults. They survive shutdown and restarting of the analyzer application, which means they will survive a power cycle.

**Select Correction**

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

Initial S/W Revision	A.02.00
Key Path	<b>Input/Output, Corrections</b>
Mode	SA
Notes	The selected correction is remembered even when not in the correction menu.
Preset	Set to Correction 1 by Restore Input/Output Defaults
Readback	Correction 1 Correction 2 Correction 3 Correction 4 Correction 5 Correction 6

**Correction On/Off**

Turning the Selected Correction on allows the values in it to be applied to the data. This also automatically turns on "Apply Corrections" (sets it to ON), otherwise the correction would not take effect.

A new sweep is initiated if an amplitude correction is switched on or off. Note that changing, sending or loading corrections data does NOT directly initiate a sweep, however in general these operations will turn corrections on, which DOES initiate a sweep.

<b>Remote Command:</b>	[ :SENSE]:CORRection:CSET[1]   2   3   4   5   6 [ :STATe] ON   OFF   1   0  [ :SENSE]:CORRection:CSET[1]   2   3   4   5   6 [ :STATe] ?
Example:	SENS:CORR:CSET1 ON
Dependencies:	Turning this on automatically turns on "Apply Corrections"  Only the first correction array (Correction 1) supports antenna units. When this array is turned on, and it contains an Antenna Unit other than "None", the Y Axis Unit of the analyzer is forced to that Antenna Unit. All other Y Axis Unit choices are grayed out.  Note that this means that a correction file with an Antenna Unit can only be loaded into the Corrections 1 register. Consequently only for Correction 1 does the dropdown in the Recall dialog include.ant, and if an attempt is made to load a correction file into any other Correction register which DOES contain an antenna unit, a Mass Storage error is generated.  This command will generate an "Option not available" error unless you have the proper option installed in your instrument.
Preset:	Not affected by a Preset. Set to OFF by <b>Restore Input/Output Defaults</b>
State Saved:	Saved in instrument state.
Key Path:	<b>Input/Output, Corrections</b>

Initial S/W Revision:	A.02.00
-----------------------	---------

### Properties

Accesses a menu that lets you set the properties of the selected correction.

Key Path	<b>Input/Output, Corrections</b>
Initial S/W Revision	A.02.00

### Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

Initial S/W Revision	A.02.00
Key Path	<b>Input/Output, Corrections, Properties</b>
Notes	The selected correction is remembered even when not in the correction menu.
Preset	Set to Correction 1 by Restore Input/Output Defaults.
Readback	Correction 1 Correction 2 Correction 3 Correction 4 Correction 5 Correction 6

### Antenna Unit

For devices (like antennae) which make measurements of field strength or flux density, the correction array should contain within its values the appropriate conversion factors such that, when the data on the analyzer is presented in dB $\mu$ V, the display is calibrated in the appropriate units. The "Antenna Unit" used for the conversion is contained within the corrections array database. It may be specified by the user or loaded in from an external file or SCPI.

When an array with an Antenna Unit other than "None" is turned on, the Y Axis Unit of the analyzer is forced to that unit. When this array is turned on, and it contains an Antenna Unit other than "None", the Y Axis Unit of the analyzer is forced to that Antenna Unit., and all other Y Axis Unit choices are grayed out.

Antenna Unit does not appear in all Modes that support Corrections. Only the modes listed in the Mode row of the table below support Antenna Units.

<b>Remote Command</b>	[ :SENSE] :CORRection:CSET[1]   2   3   4 :ANTenna [ :UNIT] GAUSs   PTESla   UVM   UAM   NOConversion [ :SENSE] :CORRection:CSET[1]   2   3   4 :ANTenna [ :UNIT] ?
Example	CORR:CSET:ANT GAUS
Initial S/W Revision	A.02.00
Key Path	<b>Input/Output, Corrections, Properties</b>
Mode	SA

Common Measurement Functions  
**Input/Output**

Dependencies	Only the first correction array (Correction 1) supports antenna units.  Note that this means that a correction file with an Antenna Unit can only be loaded into the Corrections 1 register. Consequently only for Correction 1 does the dropdown in the Recall dialog include .ant, and if an attempt is made to load a correction file into any other Correction register which DOES contain an antenna unit, a Mass Storage error is generated.
Preset	Unaffected by Preset. Set to NOC by Restore Input/Output Defaults
State Saved	Saved in State

**dB $\mu$ V/m**

Sets the antenna unit to dB $\mu$ V/m. If this correction is turned on, and Apply Corrections is on, the Y Axis Unit will then be forced to dB $\mu$ V/m and all other Y Axis Unit selections will be grayed out.

Example:	:CORR:CSET2:ANT UVM
Key Path:	<b>Input/Output, Corrections, Properties, Antenna Unit</b>
Readback:	"dB $\mu$ V/m"
Initial S/W Revision:	A.02.00

**dB $\mu$ A/m**

Sets the antenna unit to dB $\mu$ A/m. If this correction is turned on, and Apply Corrections is on, the Y Axis Unit will then be forced to dB $\mu$ A/m and all other Y Axis Unit selections will be grayed out.

Example:	:CORR:CSET2:ANT UVA
Key Path:	<b>Input/Output, Corrections, Properties, Antenna Unit</b>
Readback:	" dB $\mu$ A/m"
Initial S/W Revision:	A.02.00

**dBpT**

Sets the antenna unit to dBpT. If this correction is turned on, and Apply Corrections is on, the Y Axis Unit will then be forced to dBpT and all other Y Axis Unit selections will be grayed out.

Example:	:CORR:CSET3:ANT PTES
Key Path:	<b>Input/Output, Corrections, Properties, Antenna Unit</b>
Readback:	"dBpT"
Initial S/W Revision:	A.02.00



**dBG**

Sets the antenna unit to dBG. If this correction is turned on, and Apply Corrections is on, the Y Axis Unit will then be forced to dBG and all other Y Axis Unit selections will be grayed out.

Example:	:CORR:CSET:ANT GAUS
Key Path:	<b>Input/Output, Corrections, Properties, Antenna Unit</b>
Readback:	" dBG"
Initial S/W Revision:	A.02.00

**None**

Selects no antenna unit for this Correction set. Thus no Y Axis unit will be forced.

Example:	:CORR:CSET4:ANT NOC
Key Path:	<b>Input/Output, Corrections, Properties, Antenna Unit</b>
Readback:	"None"
Initial S/W Revision:	A.02.00

**Frequency Interpolation**

This setting controls how the correction values per-bucket are calculated. We interpolate between frequencies in either the logarithmic or linear scale.

This setting is handled and stored individually per correction set.

See [“Interpolation” on page 1493](#)

<b>Remote Command:</b>	[ :SENSE]:CORRection:CSET[1]   2   3   4   5   6:X:SPACing LINear   LOGarithmic [ :SENSE]:CORRection:CSET[1]   2   3   4   5   6:X:SPACing?
Example:	CORR:CSET:X:SPAC LIN
Preset:	Unaffected by a Preset. Set to Linear by Restore Input/Output Defaults.
State Saved:	Saved in instrument state.
Key Path:	<b>Input/Output, Corrections, Properties</b>
Initial S/W Revision:	A.02.00

**Interpolation**

For each bucket processed by the application, all of the correction factors at the frequency of interest (center frequency of each bucket) are summed and added to the amplitude. All trace operations and post processing treat this post-summation value as the true signal to use.


## Common Measurement Functions

### Input/Output

To effect this correction, the goal, for any particular start and stop frequency, is to build a correction trace, whose number of points matches the current Sweep Points setting of the instrument, which will be used to apply corrections on a bucket by bucket basis to the data traces.

For amplitudes that lie between two user specified frequency points, we interpolate to determine the amplitude value. You may select either linear or logarithmic interpolation between the frequencies.


If we interpolate on a log scale, we assume that the line between the two points is a straight line on the log scale. For example, let's say the two points are (2,4) and (20,1). A straight line between them on a log scale looks like:

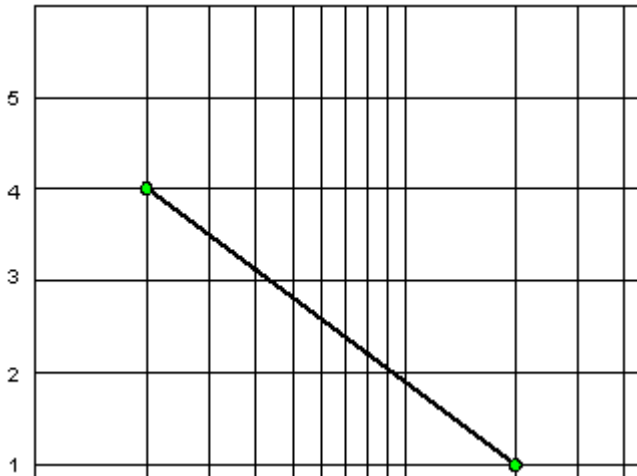

On a linear scale (like that of the spectrum analyzer), this translates to:



On the other hand, if we interpolate on a linear scale, we assume that the two points are connected by a straight line on the linear scale, as below:

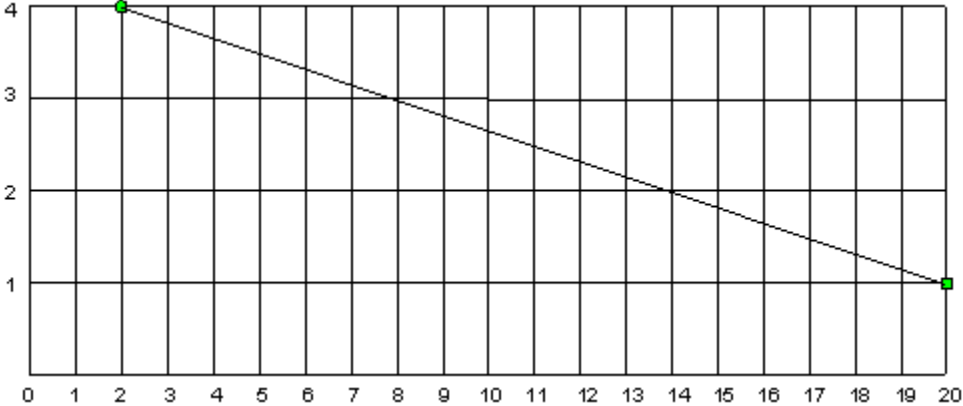

The correction to be used for each bucket is taken from the interpolated correction curve at the center of the bucket.

**Description**

Sets an ASCII description field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump.

<b>Remote Command:</b>	[ :SENSe]:CORRection:CSET[1]   2   3   4   5   6:DESCription "text"  [ :SENSe]:CORRection:CSET[1]   2   3   4   5   6:DESCription?
Example:	:CORR:CSET1:DESC "11941A Antenna correction"
Notes:	45 chars max; may not fit on display if max chars used
Preset:	Unaffected by a Preset. Set to empty by <b>Restore Input/Output Defaults</b>
State Saved:	Saved in instrument state.
Key Path:	<b>Input/Output, Corrections, Properties</b>
Initial S/W Revision:	A.02.00

**Comment**

Sets an ASCII comment field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump.

<b>Remote Command:</b>	[ :SENSe]:CORRection:CSET[1]   2   3   4   5   6:COMMeNT "text"  [ :SENSe]:CORRection:CSET[1]   2   3   4   5   6:COMMeNT?
Example:	:CORR:CSET1:COMM "this is a comment"
Notes:	45 chars max; may not fit on display if max chars used

Preset:	Unaffected by Preset. Set to empty by <b>Restore Input/Output Defaults</b>
State Saved:	Saved in State
Key Path:	<b>Input/Output, Corrections, Properties</b>
Initial S/W Revision:	A.02.00

### Edit

Invokes the integrated editing facility for this correction set.

When entering the menu, the editor window turns on, the selected correction is turned **On**, **Apply Corrections** is set to **On**, the amplitude scale is set to **Log**, and the Amplitude Correction (“Ampcor”) trace is displayed. The actual, interpolated correction trace is shown in green for the selected correction. Note that since the actual interpolated correction is shown, the correction trace may have some curvature to it. This trace represents only the correction currently being edited, rather than the total, accumulated amplitude correction for all amplitude corrections which are currently on, although the total, accumulated correction for all corrections which are turned on is still applied to the data traces.

Because corrections data is always in dB, but the Y-axis of the analyzer is in absolute units, it is necessary to establish a reference line for display of the Corrections data. The reference line is halfway up the display and represents 0 dB of correction. It is labeled “0 dB CORREC”. It is drawn in blue.

Corrections data is always in dB. Whatever dB value appears in the correction table represents the correction to be applied to that trace at that frequency. So if a table entry shows 30 dB that means we ADD 30 dB to each trace to correct it before displaying it. By definition all points are connected. If a gap is desired for corrections data, enter 0 dB.

Note that a well-designed Corrections array should start at 0 dB and end at 0 dB. This is because whatever the high end point is will be extended to the top frequency of the instrument, and whatever the low end point is will be extended down to 0 Hz. So for a Corrections array to have no effect outside its range, you should start and end the array at 0 dB.

---

**NOTE**                      The table editor will only operate properly if the analyzer is sweeping, because its updates are tied to the sweep system. Thus, you should not try to use the editor in single sweep, and it will be sluggish during compute-intensive operations like narrow-span FFT sweeps.

---

When exiting the edit menu (by using the **Return** key or by pressing an instrument front-panel key), the editor window turns off and the Ampcor trace is no longer displayed; however, **Apply Corrections** remains **On**, any correction that was on while in the editor remains on, and the amplitude scale returns to its previous setting.

Corrections arrays are not affected by a Preset, because they are in the Input/Output system. They also survive shutdown and restarting of the analyzer application, which means they will survive a power cycle.

Key Path	<b>Input/Output, Corrections</b>
----------	----------------------------------

Initial S/W Revision	A.02.00
----------------------	---------

**Navigate**

Lets you move through the table to edit the desired point.

Initial S/W Revision	A.02.00
Key Path	<b>Input/Output, Corrections, Edit</b>
Notes	There is no value readback on the key
Min	1
Max	2000

**Frequency**

Lets you edit the frequency of the current row.

Initial S/W Revision	A.02.00
Key Path	<b>Input/Output, Corrections, Edit</b>
Notes	There is no value readback on the key.
Min	0
Max	1 THz

**Amplitude**

Lets you edit the Amplitude of the current row.

Initial S/W Revision	A.02.00
Key Path	<b>Input/Output, Corrections, Edit</b>
Notes	There is no value readback on the key.
Min	-1000 dB
Max	1000 dB

**Insert Point Below**

Inserts a point below the current point. The new point is a copy of the current point and becomes the current point. The new point is not yet entered into the underlying table, and the data in the row is displayed in light gray.

Key Path	<b>Input/Output, Corrections, Edit</b>
Initial S/W Revision	A.02.00

**Delete Point**

Deletes the currently-selected point, whether or not that point is being edited, and selects the Navigate functionality. The point following the currently-selected point (or the point preceding if there is none) will be selected.

Key Path	<b>Input/Output, Corrections, Edit</b>
Initial S/W Revision	A.02.00

**Scale X Axis**

Matches the X Axis to the selected Correction, as well as possible. Sets the Start and Stop Frequency to contain the minimum and maximum Frequency of the selected Correction. The range between Start Frequency and Stop Frequency is 12.5% above the range between the minimum and maximum Frequency, so that span exceeds this range by one graticule division on either side. If in zero-span, or there is no data in the Ampcor table, or the frequency range represented by the table is zero, no action is taken. Standard clipping rules apply if the value in the table is outside the allowable range for the X axis.

Key Path	<b>Input/Output, Corrections, Edit</b>
Initial S/W Revision	A.02.00

**Delete Correction**

Deletes the correction values for this set. When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete correction. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter; if so, after the deletion, the informational message “Correction deleted” appears in the MSG line.

<b>Remote Command:</b>	[ :SENSE]:CORRection:CSET[1]   2   3   4   5   6:DELete
Example:	CORR:CSET:DEL CORR:CSET1:DEL CORR:CSET4:DEL
Notes:	Pressing this key when no corrections are present is accepted without error.
Key Path:	<b>Input/Output, Corrections</b>
Initial S/W Revision:	A.02.00

**Apply Corrections**

Applies amplitude corrections which are marked as ON to the measured data. If this is set to OFF, then no amplitude correction sets will be used, regardless of their individual on/off settings. If set to ON, the

corrections that are marked as ON (see “Correction On/Off” on page 1490) are used.

<b>Remote Command:</b>	[ :SENSE ] :CORRection:CSET:ALL [ :STATe ] ON   OFF   1   0 [ :SENSE ] :CORRection:CSET:ALL [ :STATe ] ?
Example:	SENS:CORR:CSET:ALL OFF  This command makes sure that no amplitude corrections are applied, regardless of their individual on/off settings.
Preset:	Not affected by Preset. Set to OFF by Restore Input/Output Defaults
State Saved:	Saved in instrument state.
Key Path:	<b>Input/Output, Corrections</b>
Initial S/W Revision:	A.02.00

### Delete All Corrections

Erases all correction values for all 4 Amplitude Correction sets.

When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete all corrections. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter; if so, after the deletion, the informational message “All Corrections deleted” appears in the MSG line.

<b>Remote Command:</b>	[ :SENSE ] :CORRection:CSET:ALL:DELeTe
Example:	CORR:CSET:ALL:DEL
Key Path:	<b>Input/Output, Corrections</b>
Initial S/W Revision:	A.02.00

### Remote Correction Data Set Commands

#### Set (Replace) Data (Remote Command Only)

The command takes an ASCII series of alternating frequency and amplitude points, each value separated by commas.

The values sent in the command will totally replace all existing correction points in the specified set.

An Ampcor array can contain 2000 points maximum.

<b>Remote Command:</b>	[ :SENSe ] :CORRection:CSET [ 1 ]   2   3   4   5   6 :DATA <freq> , <ampl> , . . . [ :SENSe ] :CORRection:CSET [ 1 ]   2   3   4   5   6 :DATA ?
Example:	CORR:CSET1:DATA 10000000,-1.0,20000000,1.0  This defines two correction points at (10 MHz, -1.0 dB) and (20 MHz, 1.0 dB) for correction set 1.

Common Measurement Functions  
**Input/Output**

Preset:	Empty after Restore Input/Output Defaults. Survives a shutdown or restart of analyzer application (including a power cycle).
State Saved:	Saved in instrument state.
Min:	Freq: 0 Hz Amptd: -1000 dBm
Max:	Freq: 1 THz Amptd: +1000 dBm
Initial S/W Revision:	A.02.00

**Merge Correction Data (Remote Command Only)**

The command takes an ASCII series of alternating frequency and amplitude points, each value separated by commas. The difference between this command and Set Data is that this merges new correction points into an existing set.

Any new point with the same frequency as an existing correction point will replace the existing point's amplitude with that of the new point.

An Ampcor array can contain 2000 total points, maximum.

<b>Remote Command:</b>	<code>[ :SENSe]:CORREction:CSET[1] 2 3 4 5 6:DATA:MERGe &lt;freq&gt;, &lt;ampl&gt;, ...</code>
Example:	<code>CORR:CSET1:DATA:MERGE 15000000,-5.0,25000000,5.0</code> This adds two correction points at (15 MHz, -5.0 dB) and (25 MHz, 5.0 dB) to whatever values already exist in correction set 1.
Preset:	Empty after Restore Input/Output Defaults. Survives shutdown/restart of analyzer application (including power cycle)
Min:	Freq: 0 Hz Amptd: -1000 dBm
Max:	Freq: 1 THz Amptd: +1000 dBm
Initial S/W Revision:	A.02.00

**Freq Ref In**

Specifies the frequency reference as being the internal reference, external reference or sensing the presence of an external reference.

When the frequency reference is set to internal, the internal 10 MHz reference is used even if an external reference is connected.

When the frequency reference is set to external, the instrument will use the external reference. However, if there is no external signal present, or it is not within the proper amplitude range, an error condition detected message is generated. When the external signal becomes valid, the error is cleared.



If Sense is selected, the instrument checks whether a signal is present at the external reference connector and will automatically switch to the external reference when a signal is detected. When no signal is present, it automatically switches to the internal reference. No message is generated as the reference switches between external and internal. The monitoring of the external reference occurs approximately on 1 millisecond intervals, and never occurs in the middle of a measurement acquisition, only at the end of the measurement (end of the request).

If for any reason the instrument's frequency reference is not able to obtain lock, Status bit 2 in the Questionable Frequency register will be true and an error condition detected message is generated. When lock is regained, Status bit 2 in the Questionable Frequency register will be cleared and an error message is cleared will be sent.

If an external frequency reference is being used, you must enter the frequency of the external reference if it is not exactly 10 MHz. The External Ref Freq key is provided for this purpose.

<b>Remote Command:</b>	[ :SENSe] :ROSCillator :SOURce :TYPE INTernal   EXTernal   SENSe  [ :SENSe] :ROSCillator :SOURce :TYPE?
Preset:	This is unaffected by a Preset but is set to SENSe on a "Restore Input/Output Defaults" or "Restore System Defaults->All".
State Saved:	Saved in instrument state.
Key Path:	<b>Input/Output</b>
Status Bits/OPC dependencies:	STATus:QUEStionable:FREQuency bit 2 set if unlocked.
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	[ :SENSe] :ROSCillator :SOURce?
Notes:	The query [SENSe]:ROSCillator:SOURce? returns the current switch setting. This means: <ol style="list-style-type: none"> <li>1. If it was set to SENSe but there is no external reference so the instrument is actually using the internal reference, then this query returns INTernal and not SENSe.</li> <li>2. If it was set to SENSe and there is an external reference present, the query returns EXTernal and not SENSe.</li> <li>3. If it was set to EXTernal, then the query returns "EXTernal"</li> <li>4. If it was set to INTernal, then the query returns INTernal</li> </ol>
Preset:	SENSe

Common Measurement Functions  
**Input/Output**

Backwards Compatibility SCPI:	The query [:SENSE]:ROSCillator:SOURce? was a query-only command in ESA which always returned whichever reference the instrument was using. The instrument automatically switched to the ext ref if it was present.  In PSA (which had no sensing) the command [:SENSE]:ROSCillator:SOURce set the reference (INT or EXT), so again its query returned the actual routing.  Thus the query form of this command is 100% backwards compatible with both instruments.
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	[[:SENSE]:ROSCillator:SOURce INTernal EXTernal
Notes:	([:SENSE]:ROSCillator:SOURce:TYPE INTernal EXTernal and directly sets the routing to either internal or external.)
Initial S/W Revision:	Prior to A.02.00

**Sense**

The external reference is used if a valid signal is sensed at the Ext Ref input. Otherwise the internal reference is used.

Example:	:ROSC:SOUR:TYPE SENS
Key Path:	<b>Input/Output, Freq Ref In</b>
Readback:	Sense
Initial S/W Revision:	Prior to A.02.00

**Internal**

The internal reference is used.

Example:	:ROSC:SOUR:TYPE INT
Key Path:	<b>Input/Output, Freq Ref In</b>
Readback:	Internal
Initial S/W Revision:	Prior to A.02.00

**External**

The external reference is used.

Example:	:ROSC:SOUR:TYPE EXT
----------	---------------------

Key Path:	<b>Input/Output, Freq Ref In</b>
Readback:	External
Initial S/W Revision:	Prior to A.02.00

### Ext Ref Freq

This key tells the analyzer the frequency of the external reference. When the external reference is in use (either because the reference has been switched to External or because the Reference has been switched to Sense and there is a valid external reference present) this information is used by the analyzer to determine the internal settings needed to lock to that particular external reference signal.

For the instrument to stay locked, the value entered must be within 5 ppm of the actual external reference frequency. So it is important to get it close, or you risk an unlock condition.

Note that this value only affects the instrument's ability to lock. It does not affect any calculations or measurement results. See "Freq Offset" in the Frequency section for information on how to offset frequency values.

<b>Remote Command:</b>	[ :SENSE]:ROSCillator:EXTernal:FREQuency <freq> [ :SENSE]:ROSCillator:EXTernal:FREQuency?
Example:	ROSC:EXT:FREQ 20 MHz !sets the external reference frequency to 20 MHz, but does not select the external reference. ROSC:SOUR:TYPE EXT !selects the external reference.
Notes:	Still available with Internal selected, to allow setup for when External is in use.
Preset:	This is unaffected by a Preset but is set to 10 MHz on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Min:	EXA: 10 MHz MXA: 1 MHz PXA: 1 MHz
Max:	EXA: 10 MHz MXA: 50 MHz PXA: 50 MHz
Key Path:	<b>Input/Output, Freq Ref In</b>
Default Unit:	Hz
Initial S/W Revision:	Prior to A.02.00

### External Reference Lock BW

This control lets you adjust the External Reference phase lock bandwidth. This control is available in some models of the X-Series.

The PXA variable reference loop bandwidth allows an external reference to be used and have the

Input/Output

analyzer close-in phase noise improved to match that of the reference. This could result in an improvement of tens of decibels. The choice of “Wide” or “Narrow” affects the phase noise at low offset frequencies, especially 4 to 400 Hz offset. When using an external reference with superior phase noise, we recommend setting the external reference phase-locked-loop bandwidth to wide (60 Hz), to take advantage of that superior performance. When using an external reference with inferior phase noise performance, we recommend setting that bandwidth to narrow (15 Hz). In these relationships, inferior and superior phase noise are with respect to –134 dBc/Hz at 30 Hz offset from a 10 MHz reference. Because most reference sources have phase noise behavior that falls off at a rate of 30 dB/decade, this is usually equivalent to –120 dBc/Hz at 10 Hz offset.

<b>Remote Command</b>	[ :SENSe ] :ROSCillator :BANDwidth WIDE   NARRow [ :SENSe ] :ROSCillator :BANDwidth?
Example	ROSC:BAND WIDE
Initial S/W Revision	A.04.00
Key Path	<b>Input/Output, Freq Ref In</b>
Scope	Mode Global
Dependencies	This key only appears in analyzers equipped with the required hardware.
Preset	This is unaffected by a Preset but is set to Narrow on a "Restore Input/Output Defaults" or "Restore System Defaults -> All"
State Saved	Saved in Input/Output state.

**External Ref Coupling**

Only appears with option ERC installed and licensed.

This function lets you couple the sweep system of the analyzer to the state of the External Reference. If **Normal** is selected, data acquisition proceeds regardless of the state of the External Reference. When you select **Ext Ref Out Of Range Stops Acquisition**, the data acquisition (sweep or measurement) stops when either the "521, External ref out of range" or the "503, Frequency Reference unlocked" error is asserted. Note that this will only take place if the **Freq Ref In** selection is **External**.

With the acquisition stopped, the data display will stop updating (even if this occurs in the middle of a sweep or measurement) and no data will be returned to a READ? or MEASure? query; that is, these queries will not complete because the analyzer will not respond to them. Furthermore, no response will be generated to a \*WAI? or \*OPC? query.

Proper SCPI sequences are shown below, which will always fail to return if the acquisition stops during the requested sweep or measurement. Note that, for predictable operation of this function, it is best to operate the analyzer in single measurement mode (INIT:CONT OFF), because if operating in continuous mode, the analyzer may respond to the above queries even after the acquisition stops, with data left over from the previous acquisition.


:INIT:CONT OFF

:INIT:IMM;\*OPC?

--

```
:INIT:CONT OFF
:INIT:IMM;*WAI?
--
:INIT:CONT OFF
:READ?
--
:INIT:CONT OFF
:MEASure?
```

When the acquisition ceases, in addition to the error condition(s) described above, an error message will be generated informing you that the acquisition has ceased due to an invalid external reference. This message will stay on the screen while the acquisition is suspended.

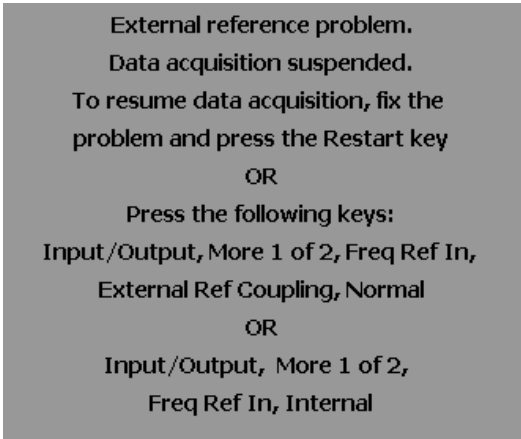

If you press the Restart key this message will be taken off the screen and a new acquisition will be attempted; if the External Reference problem persists the message will go right back up. You can also take the message down by changing back to the **Normal** setting of Sweep/Ext Ref Coupling, or by pressing **Freq Ref In, Internal**, or **Freq Ref In, Sense**, or **Restore Input/Output Defaults**.

The setting of **External Ref Coupling** is persistent across power-cycling and is not reset with a Preset. It is reset to the default state (**Normal**) when **Restore Input/Output Defaults** is invoked, which will also restart normal data acquisition.

The detection of invalid external reference is under interrupt processing. If the external reference becomes invalid then returns to valid in too short a time, no error condition will be detected or reported and therefore the acquisition will not be stopped.

<b>Remote Command</b>	[ :SENSe]:ROSCillator:COUPling NORMAl NACquisition [ :SENSe]:ROSCillator:COUPling?
Initial S/W Revision	A.02.00
Key Path	<b>Input/Output, Freq Ref In</b>
Mode	All

Common Measurement Functions  
**Input/Output**

Preset	This setting is persistent: it survives power-cycling or a Preset and is reset with Restore Input/Output defaults.
State Saved	Not saved in State
Readback	Normal Stop Acq

### Output Config

Accesses keys that configure various output settings, like the frequency reference output, trigger output and analog output.

Key Path	<b>Input/Output</b>
Initial S/W Revision	Prior to A.02.00

### Trig Out (1 and 2)

Select the type of output signal that will be output from the rear panel Trig 1 Out or Trig 2 Out connectors.

<b>Remote Command:</b>	:TRIGger TRIGger1 TRIGger2[:SEquence]:OUTPut HSWP MEASuring MAIN GATE GTRigger OEVen SSweep SSETtled  S1Marker S2Marker S3Marker S4Marker OFF :TRIGger TRIGger1 TRIGger2[:SEquence]:OUTPut?
Example:	TRIG:OUTP HSWP TRIG2:OUTP GATE
Dependencies:	The second Trigger output (Trig 2 Out) does not appear in all models; in models that do not support it, the Trig 2 Out key is blanked, and sending the SCPI command for this output generates an error, "Hardware missing; Not available for this model number" In models that do not support the Trigger 2 output, this error is returned if trying to set Trig 2 Out and a query of Trig 2 Out returns OFF.
Preset:	Trigger 1: Sweeping (HSWP) Trigger 2: Gate This is unaffected by a Preset but is preset to the above values on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state
Key Path:	<b>Input/Output, Output Config</b>
Initial S/W Revision:	Prior to A.02.00

### Polarity

Sets the output to the Trig 1 Out or Trig 2 Out connector to trigger on either the positive or negative

polarity.

<b>Remote Command:</b>	:TRIGger   TRIGger1   TRIGger2 [ :SEquence ] :OUTPut :POLarity POSitive   NEGative :TRIGger   TRIGger1   TRIGger2 [ :SEquence ] :OUTPut :POLarity?
Example:	TRIG1:OUTP:POL POS
Preset:	This is unaffected by a Preset but is set to POSitive on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state
Key Path:	<b>Input/Output, Output Config, Trig 1/2 Output</b>
Initial S/W Revision:	Prior to A.02.00

### Sweeping (HSWP)

Selects the Sweeping Trigger signal to be output to the Trig 1 Out or Trig 2 Out connector when a measurement is made. This signal has historically been known as "HSWP" (High = Sweeping), and is 5 V TTL level with 50 ohm output impedance."

Example:	TRIG1:OUTP HSWP
Key Path:	<b>Input/Output, Output Config, Trig 1/2 Output</b>
Readback:	Sweeping
Initial S/W Revision:	Prior to A.02.00

### Measuring

Selects the Measuring trigger signal to be output to the Trig 1 Out or Trig 2 Out connector. This signal is true while the Measuring status bit is true.

Example:	TRIG1:OUTP MEAS
Key Path:	<b>Input/Output, Output Config, Trig 1/2 Output</b>
Readback:	Measuring
Initial S/W Revision:	Prior to A.02.00

### Main Trigger

Selects the current instrument trigger signal to be output to the Trig 1 Out or Trig 2 Out connector.

Example:	TRIG1:OUTP MAIN
Key Path:	<b>Input/Output, Output Config, Trig 1/2 Output</b>
Readback:	Main Trigger

## Common Measurement Functions

### Input/Output

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

#### Gate Trigger

Selects the gate trigger signal to be output to the Trig 1 Out or Trig 2 Out connector. This is the source of the gate timing, not the actual gate signal.

Example:	TRIG1:OUTP GTR
Key Path:	<b>Input/Output, Output Config, Trig 1/2 Output</b>
Readback:	Gate Trigger
Initial S/W Revision:	Prior to A.02.00

#### Gate

Selects the gate signal to be output to the Trig 1 Out or Trig 2 Out connector. The gate signal has been delayed and its length determined by delay and length settings. When the polarity is positive, a high on the Trig 1 Out or Trig 2 Out represents the time the gate is configured to pass the signal.

Example:	TRIG1:OUTP GATE
Key Path:	<b>Input/Output, Output Config, Trig 1/2 Output</b>
Readback:	Gate
Initial S/W Revision:	Prior to A.02.00

#### Odd/Even Trace Point

Selects either the odd or even trace points as the signal to be output to the Trig 1 Out or Trig 2 Out connector when performing swept spectrum analysis. When the polarity is positive, this output goes high during the time the analyzer is sweeping past the first point (Point 0) and every other following trace point. The opposite is true if the polarity is negative.

Example:	TRIG1:OUTP OEV
Key Path:	<b>Input/Output, Output Config, Trig 1/2 Output</b>
Readback:	Odd/Even
Initial S/W Revision:	Prior to A.02.00

#### Off

Selects no signal to be output to the Trig 1 Out or Trig 2 Out connector.

Example:	TRIG1:OUTP OFF
Key Path:	<b>Input/Output, Output Config, Trig 1/2 Output</b>
Readback:	Off
Initial S/W Revision:	Prior to A.02.00



## Analog Out

This menu lets you control which signal is fed to the “Analog Out” connector on the analyzer rear panel. See also [“More Information” on page 1509](#).

<b>Remote Command:</b>	:OUTPut:ANALog OFF SVIDeo LOGVideO LINVideO DAUDio :OUTPut:ANALog?
Example:	OUTP:ANAL SVIDeo ! causes the analog output type to be Screen Video
Preset:	OFF
Preset:	This is unaffected by Preset but is set to DAUDio on a "Restore Input/Output Defaults" or "Restore System Defaults->All
Backwards Compatibility Notes:	Prior to A.04.00, OFF was the default functionality except when in the Analog Demod application or with Tune and Listen, in which case it was DAUDio, and there was no selection menu. So for backwards compatibility, Auto (:OUTP:ANAL:AUTO ON) will duplicate the prior behavior.  The DNWB and SANalyzer parameters, which were legal in PSA but perform no function in the X-Series, are accepted without error.
State Saved:	Saved in Input/Output State
Key Path:	<b>Input/Output, Output Config</b>
Readback line:	1-of-N selection [variable]
Initial S/W Revision:	A.04.00

## More Information

The table below gives the range for each output.

Analog Out	Nominal Range exc. (10% overrange)		
		Scale Factor	Notes
Off	0 V		
Screen Video	0 to 1 V open circuit	10%/division	8566 compatible
Log Video	0 to 1 V terminated	1/(192.66 dB/V)	dB referenced to mixer level, 1 V out for -10 dBm at the mixer.
Linear Video	0 to 1 V terminated	100%/V	Linear referenced to Ref Level, 1 V out for RF envelope at the Ref Level.
Demod Audio	(varies with analyzer setting)		

## Common Measurement Functions

### Input/Output

#### Auto

Selects the Auto state for the Analog Output menu. In this state, the Analog Output will automatically be set to the most sensible setting for the current mode or measurement.

If you make a selection manually from the Analog Out menu, this selection will remain in force until you change it (or re-select Auto), even if you go to a mode or measurement for which the selected output does not apply.

<b>Remote Command:</b>	:OUTPut:ANALog:AUTO OFF ON 0 1 :OUTPut:ANALog:AUTO?
Example:	OUTP:ANAL:AUTO ON
Preset:	ON
State Saved:	Saved in Input/Output State
Key Path:	<b>Input/Output, Output Config, Analog Out</b>
Initial S/W Revision:	A.04.00

#### Off

Turns off the analog output.

Example:	OUTP:ANAL OFF ! causes the analog output to be off
Key Path:	<b>Input/Output, Output Config, Analog Out</b>
Readback Text:	Off
Initial S/W Revision:	A.04.00

#### Screen Video

Selects the analog output to be the screen video signal. In this mode, the pre-detector data is output to the Analog Out connector. The output looks very much like the trace displayed on the analyzer's screen, and depends on the Log/Lin display Scale, Reference Level, and dB per division, but is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging).

Note that this mode is similar to the Analog Output of the HP 8566 family and the Video Out (opt 124) capability of the Agilent PSA analyzer (E444x), although there are differences in the behavior.

See "[Backwards Compatibility:](#)" on page 1511.

Example:	OUTP:ANAL SVID
----------	----------------

Dependencies:	<p>Because the Screen Video output uses one of the two IF processing channels, only one detector is available while Screen Video is selected. All active traces will change to use the same detector as the selected trace when Screen Video is activated.</p> <p>Screen Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing channels. Consequently, if the user chooses an EMI Detector, there will be no Screen Video output.</p> <p>The output holds at its last value during an alignment and during a marker count and during retrace (after a sweep and before the next sweep starts).</p> <p>This function depends on optional capability; the key will be blanked and the command will generate an “Option not available” error unless you have Option YAV or YAS licensed in your instrument.</p>
Couplings:	Screen Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Screen Video output will look different than it does in swept mode.
Key Path:	<b>Input/Output, Output Config, Analog Out</b>
Readback Text:	Screen Video
Initial S/W Revision:	A.04.00

**Backwards Compatibility:**

The Screen Video function is intended to be very similar to the 8566 Video Output and the PSA Option 124. However, unlike the PSA, it is not always on; it must be switched on by the Screen Video key. Also, unlike the PSA, there are certain dependencies (detailed above) – for example, the Quasi Peak Detector is unavailable when Screen Video is on.

Futhermore, the PSA Option 124 hardware was unipolar and its large range was padded to be exactly right for use as a Screen Video output. In the X-Series, the hardware is bipolar and has a wider range to accommodate the other output choices. Therefore, the outputs won’t match up exactly and users may have to modify their setup when applying the X-Series in a PSA application.

**Log Video**

Selects the analog output to be the log of the video signal. In this mode, the pre-detector data is output to the Analog Out connector with a Log scaling. The output does not depend on display settings like Reference Level or dB per division, and it is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging), but does change with input attenuation.

The output is designed so that full scale (1 V) corresponds to –10 dBm at the mixer. The full range (0–1 V) covers 192.66 dB ; thus, 0 V corresponds to –202.66 dBm at the mixer.

Example:	OUTP:ANAL LOGV
----------	----------------

Common Measurement Functions  
**Input/Output**

Dependencies:	<p>Because the Log Video output uses one of the two IF processing channels, only one detector is available while Screen Video is selected. All active traces will change to use the same detector as the selected trace when Log Video is activated.</p> <p>Log Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing channels. Consequently, if the user chooses an EMI Detector, there will be no Log Video output.</p> <p>The output holds at its last value during an alignment, during a marker count, and during retrace (after a sweep and before the next sweep starts).</p> <p>This function depends on optional capability. The key will be blanked and the command will generate an “Option not available” error unless you have Option YAV licensed in your instrument.</p>
Couplings:	Log Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Log Video output will look different than it does in swept mode.
Key Path:	<b>Input/Output, Output Config, Analog Out</b>
Readback Text:	Log Video
Initial S/W Revision:	A.04.00

**Linear Video**

Selects the analog output to be the envelope signal on a linear (voltage) scale. In this mode, the pre-detector data is output to the Analog Out connector with a Linear scaling. The output is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging).

The scaling is set so that 1 V output occurs with an instantaneous video level equal to the reference level, and 0 V occurs at the bottom of the graticule. This scaling gives you the ability to control the gain without having another setup control for the key. But it requires you to control the look of the display (the reference level) in order to control the analog output.

This mode is ideal for looking at Amplitude Modulated signals, as the linear envelope effectively demodulates the signal.

Example:	OUTP:ANAL LINV
----------	----------------

Dependencies:	<p>Because the Linear Video output uses one of the two IF processing channels, only one detector is available while Linear Video is selected. All active traces will change to use the same detector as the selected trace when Log Video is activated.</p> <p>Linear Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing channels. Consequently, if the user chooses an EMI Detector, there will be no Linear Video output.</p> <p>The output holds at its last value during an alignment and during a marker count and during retrace (after a sweep and before the next sweep starts).</p> <p>This function depends on optional capability; the key will be blanked and the command will generate an “Option not available” error unless you have Option YAV licensed in your instrument.</p>
Couplings:	Linear Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Linear Video output will look different than it does in swept mode.
Key Path:	<b>Input/Output, Output Config, Analog Out</b>
Readback Text:	Linear Video
Initial S/W Revision:	A.04.00

### Demod Audio

Selects the analog output to be the demodulation of the video signal.

When Demod Audio is selected, the demodulated audio signal appears at this output whenever the Analog Demod application is demodulating a signal or when **Analog Demod Tune and Listen** is operating in the Swept SA measurement.

When Analog Out is in the Auto state, this output is auto-selected when in the Analog Demod mode or when **Analog Demod Tune and Listen** is operating in the Swept SA measurement.

If any other Analog Output is manually selected when in the Analog Demod mode or when **Analog Demod Tune and Listen** is operating in the Swept SA measurement, a warning message appears in the status message bar.

Example:	OUTP:ANAL DAUD
Dependencies:	<p>This key only appears if the Analog Demod application (N9063A) or Option EMC is installed and licensed, otherwise the key will be blanked and the command will generate an “Option not available” error.</p> <p>The output holds at its last value during an alignment and during a marker count. It is not held between sweeps, in order for Tune and Listen to work properly.</p> <p>When Demod Audio is the selected Analog Output:</p> <ul style="list-style-type: none"> <li>• all active traces are forced to use the same detector.</li> <li>• CISPR detectors (QPD, EMI Avg, RMS Avg) are unavailable</li> </ul>

Common Measurement Functions  
**Input/Output**

Key Path:	<b>Input/Output, Output Config, Analog Out</b>
Readback Text:	Demod Audio
Initial S/W Revision:	Prior to A.02.00 (this was the default functionality, and there was no selection)
Modified at S/W Revision:	A.04.00

**I/Q Cal Out**

The Baseband I/Q "Cal Out" port can be turned on with either a 1 kHz or a 250 kHz square wave. This can be turned on independent of the input selection. A Preset will reset this to Off.

<b>Remote Command</b>	:OUTPut:IQ:OUTPut IQ1 IQ250 OFF :OUTPut:IQ:OUTPut?
Example	OUTP:IQ:OUTP IQ1
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, Output Config</b>
Couplings	An I/Q Cable Calibration or an I/Q Probe Calibration will change the state of the Cal Out port as needed by the calibration routine. When the calibration is finished the I/Q Cal Out is restored to the pre-calibration state.
Preset	Off
State Saved	Saved in instrument state.
Range	1 kHz Square Wave 250 kHz Square Wave Off
Readback Text	1 kHz 250 kHz Off

**1 kHz Square Wave**

Turns on the 1 kHz square wave signal at the Cal Out port. This choice is only available with option BBA.

Key Path	<b>Input/Output, Output Config, I/Q Cal Out</b>
Readback	I/Q 1kHz
Initial S/W Revision	Prior to A.02.00

**250 kHz Square Wave**

Turns on the 250 kHz square wave signal at the Cal Out port. This choice is only available with option BBA.

Key Path	<b>Input/Output, Output Config, I/Q Cal Out</b>
Readback	I/Q 250kHz
Initial S/W Revision	Prior to A.02.00

**Off**

Turns off the signal at the Cal Out port. This choice is only available with option BBA.

Key Path	<b>Input/Output, Output Config, I/Q Cal Out</b>
Readback	Off
Initial S/W Revision	Prior to A.02.00

**Digital Out**

Opens a menu that allows you to select options for configuring the digital output(s) of the analyzer.

Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, Output Config</b>
Modified at S/W Revision	A.04.00

**Digital Bus (Narrowband)**

This menu allows you to configure the LVDS connector located on the rear panel of the instrument. It is a unidirectional link of real time data at a 90 MSa/s rate. The ADC is sampling a 22.5 MHz IF.

The data that appears on this port is raw, uncorrected ADC samples, unless you have option RTL. With option RTL, you get fully corrected I/Q data.

This connector will only be active when the Narrowband IF Path is currently in use.

Key Path	<b>Input/Output, Output Config, Digital Out</b>
Initial S/W Revision	A.04.00

**Bus Out On/Off**

When Bus Out is on, all acquisitions are streamed to the output port including acquisitions for internal purposes such as Alignment; internal processing and routing of acquisitions continues as usual and is unaffected by the state of Bus Out.

When Bus Out is off, no signal appears on the LVDS port.

<b>Remote Command</b>	:OUTPut:DBUS[1][:STATe] ON OFF 1 0 :OUTPut:DBUS[1][:STATe]?
Example	OUTP:DBUS ON
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, Output Config, Digital Out, Digital Bus</b>
Scope	Mode Global
Preset	This is unaffected by a Preset but is set to Off on a "Restore Input/Output Defaults" or "Restore System Defaults -> All"

Common Measurement Functions  
**Input/Output**

State Saved	Saved in Input/Output State
Modified at S/W Revision	A.04.00

**Aux IF Out**

This menu controls the signals that appear on the SMA output on the rear panel labeled “AUX IF OUT”:

<b>Remote Command:</b>	:OUTPut:AUX SIF AIF LOGVideo OFF :OUTPut:AUX?
Preset:	This is unaffected by a Preset but is set to OFF on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in Input/Output state
Key Path:	<b>Input/Output, Output Config</b>
Readback line:	1-of-N selection [variable]
Backwards Compatibility Notes:	In the PSA, the IF output has functionality equivalent to the "Second IF" function in the X-Series' Aux IF Out menu. In the X-Series, it is necessary to switch the Aux IF Out to “Second IF” to get this functionality, whereas in PSA it is always on, since there are no other choices. Hence a command to switch this function to “Second IF” will have to be added by customers migrating from PSA who use the IF Output in PSA.
Initial S/W Revision:	A.04.00

**Second IF**

In this mode the 2nd IF output is routed to the rear panel connector. The annotation on the key shows the current 2nd IF frequency in use in the analyzer.

The frequency of the 2nd IF depends on the current IF signal path as shown in the table below:

IF Path Selected	Frequency of “Second IF” Output
10 MHz	322.5 MHz
25 MHz	322.5 MHz
40 MHz	250 MHz
140 MHz	300 MHz

The signal quality, such as signal to noise ratio and phase noise, are excellent in this mode.

Example:	OUTP:AUX SIF causes the aux output type to be Second IF
Key Path:	<b>Input/Output, Output Config, Aux IF Out</b>
Readback Text:	Second IF



Initial S/W Revision:	A.04.00
-----------------------	---------

### Arbitrary IF

In this mode the 2nd IF output is mixed with a local oscillator and mixer to produce an arbitrary IF output between 10 MHz and 75 MHz with 500 kHz resolution. The phase noise in this mode will not be as good as in **Second IF** mode.

The IF output frequency is adjustable, through an active function which appears on the Arbitrary IF selection key, from 10 MHz to 75 MHz with 500 kHz resolution.

The bandwidth of this IF output varies with band and center frequency, but is about 40 MHz at the -3 dB width. When the output is centered at lower frequencies in its range, signal frequencies at the bottom of the bandwidth will “fold”. For example, with a 40 MHz bandwidth (20 MHz half-bandwidth), and a 15 MHz IF center, a signal -20 MHz relative to the spectrum analyzer center frequency will have a relative response of about -3 dB with a frequency 20 MHz below the 15 MHz IF center. This -5 MHz frequency will fold to become a +5 MHz signal at the IF output. Therefore, lower IF output frequencies are only useful with known band-limited signals.

Example:	OUTP:AUX AIF causes the aux output type to be the Arbitrary IF
Key Path:	<b>Input/Output, Output Config, Aux IF Out</b>
Readback Text:	Arbitrary IF
Initial S/W Revision:	A.04.00

Key Path	<b>Input/Output, Output Config, Aux IF Out</b>
Scope	Mode Global
<b>Remote Command</b>	:OUTPut:AUX:AIF <value> :OUTPut:AUX:AIF?
Example	:OUTP:AUX:AIF 50 MHZ
Preset	This is unaffected by a Preset but is set to 70 MHz on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved	Saved in Input/Output State
Min	10 MHz
Max	75 MHz
Default Unit	Hz
Initial S/W Revision	A.04.00

### Fast Log Video

In this mode the 2nd IF output is passed through a log amp and the log envelope of the IF signal is sent to the rear panel. The open circuit output level varies by about 25 mV per dB, with a top-of-screen signal producing about 1.6 Volts. The output impedance is nominally 50 ohms.

## Common Measurement Functions

### Input/Output

This mode is intended to meet the same needs as Option E4440A-H7L Fast Rise Time Video Output on the Agilent E4440A PSA Series, allowing you to characterize pulses with fast rise times using standard measurement suites on modern digital scopes.

Example:	OUTP:AUX LOGVideo causes the aux output type to be Fast Log Video
Dependencies:	The output is off during an alignment but not during a marker count, and is not blanked during retrace (after a sweep and before the next sweep starts).
Key Path:	<b>Input/Output, Output Config, Aux IF Out</b>
Readback Text:	Fast Log Video
Initial S/W Revision:	A.04.00

### Off

In this mode nothing comes out of the “AUX IF OUT” connector on the rear panel. The connector appears as an open-circuit (that is, it is not terminated in any way).

Example:	OUTP:AUX OFF causes the aux output type to be off
Key Path:	<b>Input/Output, Output Config, Aux IF Out</b>
Readback Text:	Off
Initial S/W Revision:	A.04.00

## I/Q Guided Calibration

Calibrating the Baseband I/Q ports requires several steps and manual connections. The Guided Calibration will interactively step a user through the required steps, displaying diagrams to help with the connections. The steps will vary depending on the setup.

In the Guided Calibration windows, the date and time of the last calibration are displayed. If any of the items listed are displayed in yellow, this indicates that the calibration for that item is inconsistent with the latest calibration, and you should complete the entire calibration process before you exit the calibration.

### I/Q Isolation Calibration

The I/Q Isolation Calibration must be run before calibrating any port with either the I/Q Cable Calibration or I/Q Probe Calibration. This calibration is performed with nothing connected to any of the front panel I/Q ports. This is the first step in both the I/Q Cable Calibration and the I/Q Probe Calibration.

### Next

Perform the I/Q Isolation calibration.

<b>Remote Command</b>	:CALibration:IQ:ISOLation
-----------------------	---------------------------

Example	CAL:IQ:ISOL
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I/Q Cable Calibration</b>
Notes	All front panel I/Q ports must not be connected to anything.
Notes	All cables and probes should be disconnected from the I/Q ports before issuing the SCPI command.
State Saved	No.

### Exit

Exits the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path	<b>Input/Output, I/Q, I/Q Cable Calibration</b>
Notes	Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.  When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see <a href="#">“Exit Confirmation” on page 1530</a> ).
Initial S/W Revision	Prior to A.02.00

### I/Q Isolation Calibration Time (Remote Command Only)

Returns the last date and time that the I/Q Isolation Calibration was performed. This is a remote query command only.

<b>Remote Command:</b>	:CALibration:IQ:ISOLation:TIME?
Example:	:CAL:IQ:ISOL:TIME?
Notes:	This returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values will be 0.
Initial S/W Revision:	A.02.00

### I/Q Cable Calibrate...

The I/Q cable calibration creates correction data for each of the front panel I/Q ports. This calibration data is used whenever no probe specific calibration data is available. It is important that all ports are calibrated using the same short BNC cable so that the data is comparable from port to port.

The guided calibration (front panel only) will show connection diagrams and guide the user through the isolation calibration and calibrating each port. The calibration data for each port is stored separately, so as soon as a port is calibrated that data is saved and will be used. If a user presses "Exit" to exit the calibration process, the data for the ports already completed will still be used. It is recommended that a calibration be completed once started, or if exited, that it be properly done before the next use of the I/Q ports. The "Next" button will perform the calibration for the current port and then proceed to the next

## Common Measurement Functions

### Input/Output

step in the calibration procedure. The "Back" button will return to the prior port in the procedure. Both softkeys and dialog buttons are supplied for ease of use. The dialog buttons are for mouse use and the softkeys for front panel use.

The calibration can also be done via SCPI, but no connection diagrams will be shown. The user will have to make the correct connections before issuing each port calibration command. Again, it is recommended that all ports be calibrated at the same time.

The instrument state remains as it was prior to entering the calibration procedure except while a port is actually being calibrated. Once a port is calibrated it returns to the prior state. A port calibration is in process only from the time the "Next" button is pressed until the next screen is shown. For SCPI, this corresponds to the time from issuing the CAL:IQ:FLAT:I|IB|Q|QB command until the operation is complete.

For example, if the prior instrument state is Cal Out = Off, Input = I+jQ, and Differential = Off, then up until the time the "Next" button is pressed the I Input and Q Input LEDs are on and the Cal Out, I-bar Input and Q-bar Input LEDs are off. Once the "Next" button is pressed for the I port calibration, only the Cal Out and I Input LEDs will be on and the others will be off. When the screen progresses to the next step ("Next" button again enabled), the prior state is restored and only the I Input and Q Input LEDs are on (Cal Out is off again).

The last calibration date and time for each port will be displayed. Any calibrations that are more than a day older than the most recent calibration will be displayed with the color amber.

Key Path	<b>Input/Output, I/Q</b>
Initial S/W Revision	Prior to A.02.00

### I Port

The I port calibration is performed with the front panel's I port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

### Back

Return to the prior step in the calibration procedure.

Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Initial S/W Revision	Prior to A.02.00

### Next

Perform the I port calibration.

<b>Remote Command</b>	:CALibration:IQ:FLATness:I
Example	CAL:IQ:FLAT:I
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>

Notes	The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure.  The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands.
Notes	The I port must be connected to the Cal Out port before issuing the SCPI command.
State Saved	No.

**Exit**

Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>
Notes	Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.  When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see <a href="#">“Exit Confirmation” on page 1530</a> ).
Initial S/W Revision	Prior to A.02.00

**I-bar Port**

The I-bar port calibration is performed with the front panel's I-bar port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

**Back**

Return to the prior step in the calibration procedure.

Key Path	<b>Input/Output, I/Q, I/Q Cable Calibration</b>
Notes	Using the Back button will not restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows the user to go back to a prior step to redo that calibration step.
Initial S/W Revision	Prior to A.02.00

**Next**

Perform the I-bar port calibration.

<b>Remote Command</b>	:CALibration:IQ:FLATness:IBAR
Example	CAL:IQ:FLAT:IBAR
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>

Common Measurement Functions  
**Input/Output**

Notes	The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure.  The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands.
Notes	The I-bar port must be connected to the Cal Out port before issuing the SCPI command.
State Saved	No

**Exit**

Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>
Notes	Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.  When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see <a href="#">“Exit Confirmation” on page 1530</a> ).
Initial S/W Revision	Prior to A.02.00

**Q Port**

The Q port calibration is performed with the front panel's Q port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

**Back**

Return to the prior step in the calibration procedure.

Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>
Notes	Using the Back button will not restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows the user to go back to a prior step to redo that calibration step.
Initial S/W Revision	Prior to A.02.00

**Next**

Perform the Q port calibration.

<b>Remote Command</b>	:CALibration:IQ:FLATness:Q
Example	CAL:IQ:FLAT:Q
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>

Notes	The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure.  The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands.
Notes	The Q port must be connected to the Cal Out port before issuing the SCPI command.
State Saved	No

**Exit**

Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>
Notes	Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.  When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see <a href="#">“Exit Confirmation” on page 1530</a> ).
Initial S/W Revision	Prior to A.02.00

**Q-bar Port**

The Q-bar port calibration is performed with the front panel's Q-bar port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

**Back**

Return to the prior step in the calibration procedure.

Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>
Notes	Using the Back button will not restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows the user to go back to a prior step to redo that calibration step.
Initial S/W Revision	Prior to A.02.00

**Next**

Perform the Q-bar port calibration.

<b>Remote Command</b>	:CALibration:IQ:FLATness:QBAR
Example	CAL:IQ:FLAT:QBAR
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>

## Common Measurement Functions

### Input/Output

Notes	The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure.  The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands.
Notes	The Q-bar port must be connected to the Cal Out port before issuing the SCPI command.
State Saved	No

#### Exit

Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path	<b>Input/Output, I/Q, I/Q Cable Calibrate...</b>
Notes	Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.  When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see <a href="#">“Exit Confirmation” on page 1530</a> ).
Initial S/W Revision	Prior to A.02.00

#### I/Q Cable Calibration Time (Remote Command Only)

Returns the last date and time that the I/Q Cable Calibration was performed for a specific port. This is a remote query command only.

<b>Remote Command:</b>	:CALibration:IQ:FLATness:I   IBAR   Q   QBAR:TIME?
Example:	:CAL:IQ:FLAT:I:TIME?
Notes:	This returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values will be 0.
Initial S/W Revision:	A.02.00

#### I/Q Probe Calibration

The I/Q probe calibration creates correction data for one of the front panel I/Q channels. When the probe has EEPROM identification, the data is unique to that specific probe. When the probe does not have EEPROM identification, the data will be used for all probes of the same type. The data is also unique to the channel, so calibration data for the I channel will not be used for the Q channel and vice versa.

The guided calibration (front panel only) will show connection diagrams and guide the user through the I/Q Isolation Calibration and through calibrating each port. The calibration data for each port is stored separately, so as soon as a port is calibrated that data is saved and will be used. If a user presses "Exit" to exit the calibration process, the data for the port already completed will still be used. It is recommended that a calibration be completed once started, or if exited, that it be properly done before the next use of the probe. The "Next" button will perform the calibration for the current port and then proceed to the next step in the calibration procedure. The "Back" button will return to the prior port in the procedure.



Both softkeys and dialog buttons are supplied for ease of use. The dialog buttons are for mouse use and the softkeys for front panel use.

The calibration can also be done via SCPI, but no connection diagrams will be shown. The user will have to make the correct connections before issuing each port calibration command. Again, it is recommended that all ports be calibrated at the same time.

For Active probes or when Differential is Off, only the main port is calibrated, otherwise both the main and complementary ports are calibrated.

The instrument state remains as it was prior to entering the calibration procedure except while a port is actually being calibrated. Once a port is calibrated it returns to the prior state. A port calibration is in process only from the time the "Next" button is pressed until the next screen is shown. For SCPI, this corresponds to the time from issuing the CAL:IQ:PROB:I|IB|Q|QB command until the operation is complete.

For example, if the prior instrument state is Cal Out = Off, Input = I+jQ, and Differential = Off, then up until the time the "Next" button is pressed the I Input and Q Input LEDs are on and the Cal Out, I-bar Input and Q-bar Input LEDs are off. Once the "Next" button is pressed for the I port calibration, only the Cal Out and I Input LEDs will be on and the others will be off. When the screen progresses to the next step ("Next" button again enabled), the prior state is restored and only the I Input and Q Input LEDs are on (Cal Out is off again).

The last calibration date and time for each relevant port will be displayed. For passive probes with Differential On, any calibration that is more than a day older than the most recent calibration will be displayed with the color amber.

**I Port**

The I port calibration is performed with the probe body attached to the front panel's I port and the probe tip connected via an adapter to the Cal Out port. The guided calibration will show a diagram of the required connections.

**Show Adapter**

Show a connection diagram and instructions for the probe and adapter. See ["Show Adapter Screen" on page 1530](#).

Key Path	<b>Input/Output, I/Q, I Setup, I Probe, Calibrate</b>
Notes	Either a passive or an active probe adapter diagram will be shown, depending on the type of probe attached.
Initial S/W Revision	Prior to A.02.00

**Back**

Return to the prior step in the calibration procedure.

Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Initial S/W Revision	Prior to A.02.00

## Common Measurement Functions

### Input/Output

#### Next

Perform the I port calibration.

<b>Remote Command</b>	:CALibration:IQ:PROBe:I
Example	CAL:IQ:PROB:I
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I Setup, I Probe, Calibrate</b>
Notes	The I port must be connected to the Cal Out port before issuing the SCPI command.  The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands.
State Saved	No

#### Exit

Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path	<b>Input/Output, I/Q, I Setup, I Probe, Calibrate</b>
Notes	Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.  When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see <a href="#">“Exit Confirmation” on page 1530</a> ).
Initial S/W Revision	Prior to A.02.00

#### I-bar Port

The I-bar port calibration is performed with the probe body attached to the front panel's I-bar port and the probe tip connected via an adapter to the Cal Out port. The I-bar probe calibration is only available for passive probes with Differential On. The guided calibration will show a diagram of the required connections.

#### Show Adapter

Show a connection diagram and instructions for the probe and adapter. See [“Show Adapter Screen” on page 1530](#).

Key Path	<b>Input/Output, I/Q, I Setup, I Probe, Calibrate</b>
Notes	Either a passive or an active probe adapter diagram will be shown, depending on the type of probe attached.
Initial S/W Revision	Prior to A.02.00

**Back**

Return to the prior step in the calibration procedure.

Key Path	<b>Input/Output, I/Q, I Setup, I Probe, Calibrate</b>
Notes	Using the Back button will not restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows the user to go back to a prior step to redo that calibration step.
Initial S/W Revision	Prior to A.02.00

**Next**

Perform the I-bar port calibration.

<b>Remote Command</b>	:CALibration:IQ:PROBe:IBar
Example	CAL:IQ:PROB:IB
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, I Setup, I Probe, Calibrate</b>
Notes	The I-bar port must be connected to the Cal Out port before issuing the SCPI command.  The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands.
State Saved	No

**Exit**

Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path	<b>Input/Output, I/Q, I Setup, I Probe, Calibrate</b>
Notes	Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.  When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see <a href="#">“Exit Confirmation” on page 1530</a> ).
Initial S/W Revision	Prior to A.02.00

**Q Port**

The Q port calibration is performed with the probe body attached to the front panel's Q port and the probe tip connected via an adapter to the Cal Out port. The guided calibration will show a diagram of the required connections.

Common Measurement Functions  
**Input/Output**

**Show Adapter**

Show a connection diagram and instructions for the probe and adapter. See [“Show Adapter Screen” on page 1530](#).

Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Notes	Either a passive or an active probe adapter diagram will be shown, depending on the type of probe attached.
Initial S/W Revision	Prior to A.02.00

**Back**

Return to the prior step in the calibration procedure.

Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Initial S/W Revision	Prior to A.02.00

**Next**

Perform the Q port calibration.

<b>Remote Command</b>	:CALibration:IQ:PROBe:Q
Example	CAL:IQ:PROB:Q
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Notes	The Q port must be connected to the Cal Out port before issuing the SCPI command.  The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands.
State Saved	No

**Exit**

Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Notes	Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.  When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see <a href="#">“Exit Confirmation” on page 1530</a> ).
Initial S/W Revision	Prior to A.02.00

### Q-bar Port

The Q-bar port calibration is performed with the probe body attached to the front panel's Q-bar port and the probe tip connected via an adapter to the Cal Out port. The Q-bar probe calibration is only available for passive probes with Differential On. The guided calibration will show a diagram of the required connections.

#### Show Adapter

Show a connection diagram and instructions for the probe and adapter. See [“Show Adapter Screen” on page 1530](#).

Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Notes	Either a passive or an active probe adapter diagram will be shown, depending on the type of probe attached.
Initial S/W Revision	Prior to A.02.00

#### Back

Return to the prior step in the calibration procedure.

Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Notes	Using the Back button will not restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows the user to go back to a prior step to redo that calibration step.
Initial S/W Revision	Prior to A.02.00

#### Next

Perform the Q-bar port calibration.

<b>Remote Command</b>	:CALibration:IQ:PROBe:QBar
Example	CAL:IQ:PROB:QB
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Notes	The Q-bar port must be connected to the Cal Out port before issuing the SCPI command.  The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands.
State Saved	No

#### Exit

Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration

Common Measurement Functions  
**Input/Output**

data.

Key Path	<b>Input/Output, I/Q, Q Setup, Q Probe, Calibrate</b>
Notes	Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.  When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see <a href="#">“Exit Confirmation” on page 1530</a> ).
Initial S/W Revision	Prior to A.02.00

**Show Adapter Screen**

When one of the Probe Calibration Show Adapter buttons is pressed, a diagram of the probe with its adapter will be shown. Depending on the type of probe attached, either the Passive Probe Adapter or the Active Probe Adapter diagram will be shown.

**I/Q Probe Calibration Time (Remote Command Only)**

Return the last date and time that the I/Q Probe Calibration was performed for a specific port. This is a remote query command only.

<b>Remote Command:</b>	:CALibration:IQ:PROBE:I   IBAR   Q   QBAR:TIME?
Example:	:CAL:IQ:PROB:I:TIME?
Notes:	This returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values will be 0. The value is specific to both the port and probe, so the value will change as probes are connected or disconnected.
Initial S/W Revision:	A.02.00

**Exit Confirmation**

When Exit is pressed during one of the calibration routines, the calibration may be in an inconsistent state with some of the ports having newly measured calibration data and others with old data. If this is the case, a dialog box will appear to confirm that the user really wants to exit. A "Yes" answer will exit the calibration procedure, leaving potentially inconsistent calibration data in place. A "No" answer will return to the calibration procedure.

---

## Marker

See “Marker Control Mode” on page 1531.

See “Setting the Marker X Axis Value” on page 1532.

See “Setting the Marker X Position in Trace Points” on page 1532.

See “Setting the Marker Y Axis Value” on page 1534.

The Marker key accesses the Marker menu. A marker can be placed on a trace to allow the value of the trace at the marker point to be determined precisely. The functions in this menu include a 1-of-N selection of the control mode Normal, Delta, Fixed, or Off for the selected marker. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules.

Markers may also be used in pairs to read the difference (or delta) between two data points. They can be used in Marker Functions to do advanced data processing, or to specify operating points in functions like Signal Track and N dB Points.

The SCPI command in the table below selects the marker and sets the marker control mode as described under **Normal**, **Delta**, **Fixed** and **Off**, below. All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

<b>Remote Command:</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSITION DELTA FIXed OFF  :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?
Preset:	OFF (all markers)
State Saved:	The marker control mode is saved in instrument state
Backwards Compatibility SCPI:	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE SPAN BAND  These parameters are aliased to POSITION if sent.  A query does not reflect them.
Initial S/W Revision:	Prior to A.02.00

### Marker Control Mode

There are four control modes for markers:

**Normal (POSITION)** - A marker that can be moved to any point on the X Axis by specifying its X Axis value, and whose absolute Y Axis value (see section 8.1.4.7) is then the value of the trace point at that X Axis value.

**Delta (DELTA)** - A marker that can be moved to any point on the X Axis by specifying its X Axis offset from a reference marker, and whose absolute Y Axis value (see section 8.1.4.7) is then the value of the trace point at that X Axis value.

**Fixed (FIXed)** - A marker whose X Axis and Y Axis values may be directly or indirectly specified by you, but whose Y Axis value remains fixed, once specified, and does not follow the trace. Fixed markers

## Marker

are useful as reference markers for Delta markers, as operands in a Peak Search operation, and as arbitrary reference points settable by you. These markers are represented on the display by an "X" rather than a diamond.

**Off (OFF)** - A marker which is not in use.

In the Swept SA measurement, the Preset control mode is Off for all markers.

### Setting the Marker X Axis Value

The command below sets the marker X Axis value in the current marker X Axis Scale unit. In each case the marker that is addressed becomes the selected marker. It has no effect (other than to cause the marker to become selected) if the control mode is **Off**, but it is the SCPI equivalent of entering an X value if the control mode is **Normal**, **Delta**, or **Fixed**.

<b>Remote Command:</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <freq> :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?
Notes:	<p>If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an invalid suffix error will be generated.</p> <p>If the specified marker is Fixed and a Marker Function is on, a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.</p> <p>The query returns the marker’s absolute X Axis value if the control mode is <b>Normal</b> or <b>Fixed</b>. It returns the offset from the marker’s reference marker if the control mode is <b>Delta</b>. The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b>, seconds for <b>Period</b> and <b>Time</b>. If the marker is <b>Off</b> the response is not a number.</p>
Preset:	After a preset, if X is queried with no value sent first, the center of screen value will be returned. This will depend on the frequency range of the instrument. 13.255 GHz is correct for the 26 GHz instruments only (Option 526).
Min:	- ∞ (minus infinity)
Max:	+ ∞ (plus infinity). Unlike legacy analyzers, where the markers were forced to be on screen, X-Series marker values are not limited and do not clip
Default Unit:	determined by X Axis Scale
Backwards Compatibility SCPI:	:CALCulate:MARKer[1] 2 3 4:X:CENTer
Initial S/W Revision:	Prior to A.02.00

### Setting the Marker X Position in Trace Points

The command below sets the marker X position in trace points. It has no effect if the marker control mode is **Off**. But it is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** or **Fixed** – except the setting is in trace points rather than X Axis Scale units.



---

**NOTE** The entered value in Trace Points is immediately translated into the current X Axis Scale units for setting the value of the marker. The marker's value in X Axis Scale Units, NOT trace points, will be preserved if a change is made to the X Axis scale settings. Thus, if you use this command to place a marker on bucket 500, which happens at that time to correspond to 13 GHz, and then you change the Start Frequency so that bucket 500 is no longer 13 GHz, the marker will stay at 13 GHz, NOT at bucket 500! This is important to realize as it differs from the behavior of past Agilent analyzers.

---

<b>Remote Command:</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real>  :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?
<b>Notes:</b>	If the specified marker is Fixed and a Marker Function is on, a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.  The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> or <b>Fixed</b> . It returns the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points
<b>Preset:</b>	After a preset, if X is queried with no value sent first, the center of screen value will be returned. So if per default, the number of Trace points is 1001, the center value will be 500.
<b>Min:</b>	0
<b>Max:</b>	Number of trace points – 1
<b>Default Unit:</b>	unitless
<b>Backwards Compatibility SCPI:</b>	:CALCulate:MARKer[1] 2 3 4:X:POSition:CENTer
<b>Backwards Compatibility SCPI:</b>	The legacy command, :CALCulate:MARKer[n]:X:POSition:CENTer <param>  was used to control the centerpoint between the Delta and Reference marker in trace points (buckets) in Span Pair mode. In the new system, this is equivalent to simply setting the marker position in trace points. So this command is aliased to the command :CALCulate:MARKer[n]:X:POSition <param>  <hr/> <b>NOTE</b> The UP/DOWN parameters will increment/decrement by one bucket. This will require a conversion to buckets and back. <hr/>

## Marker

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

### Setting the Marker Y Axis Value

The command below selects the marker and sets the marker Y Axis value; the default unit is the current Y Axis unit. It has no effect (other than selecting the marker) unless the marker control mode is **Fixed**.

<b>Remote Command:</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y <real> :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example:	CALC:MARK2:MODE POS turns on marker 2 as a normal marker. CALC:MARK2:X 20 GHZ moves marker 2 to 20 GHz if X Axis Scale is Frequency. If X Axis Scale is Time, the -131 invalid suffix error is generated.
Preset:	Trace value at center of screen. There is no way to predict what this will be after a preset.
Min:	-∞ (minus infinity)
Max:	+∞ (plus infinity)
Initial S/W Revision:	Prior to A.02.00

### Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected by the functions.

Key Path	<b>Marker</b>
Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak.
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state.
Initial S/W Revision	Prior to A.02.00

### Normal

Sets the control mode for the selected marker to **Normal** and turns on the active function for setting its value. If the selected marker was **Off**, it is placed at the center of the screen on the trace specified by the marker's Trace attribute.

**A Normal mode** (POSition type) marker can be moved to any point on the X Axis by specifying its X Axis value. Its absolute Y Axis value is then the value of the trace point at that X Axis value.

Key Path	<b>Marker</b>
Example	:CALC:MARK:MODE POS sets Marker 1 to Normal.

Notes	See the description under the “ Marker” key, above.
Couplings	<ul style="list-style-type: none"> <li>The marker addressed by this command becomes the selected marker on the front panel.</li> </ul>
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X Axis value are saved in instrument state.
Initial S/W Revision	Prior to A.02.00

## Delta

Sets the control mode for the selected marker to Delta and turns on the active function for setting its delta value. If the selected marker was **Off**, it is placed at the center of the screen on the trace specified by the marker’s Trace attribute.

In Delta mode the marker result shows the relative result between the selected (Delta) marker and its reference marker. A delta marker can be moved to any point on the X Axis by specifying its X Axis offset from a reference marker. Its absolute Y Axis value is then the value of the trace point at that X Axis value.

Key Path	Marker
Example	:CALC:MARK:MODE DELT sets marker 1 to Delta.
Notes	See the description under the “ Marker” key, above.
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X Axis value are saved in instrument state
Initial S/W Revision	Prior to A.02.00

## Fixed

See [“Fixed Marker X Axis Value”](#) on page 1536.

See [“Fixed Marker Y Axis Value”](#) on page 1536.

Sets the control mode for the selected marker to Fixed. A fixed marker is fixed in the sense that it stays where you place it. It can be directly moved in both X and Y. It can be moved with a Peak Search. It can also be indirectly moved by re-zeroing the delta if it is a relative marker. If it is moved, it again becomes fixed at the X Axis point it moved to and it has a Y-axis result that it took on when it moved there. If a Normal or Delta marker is changed to Fixed it becomes fixed at the X Axis point it was at, and with the Y-axis result it had when it was set to Fixed.

In Fixed mode the marker result shows:

- If no Marker Function is on, the absolute X Axis and Y axis value of the marker
- If a Marker Function is on, the X Axis value and the Y-axis function result the marker had when it became fixed.

## Marker

### Fixed Marker X Axis Value

Key Path	<b>Marker, Fixed</b>
Example	:CALC:MARK:MODE FIX sets Marker 1 to Fixed.
Notes	See the description under the “ Marker” key, above.
Dependencies	<p>You cannot directly set the X or Y value of a Fixed marker which has a marker function turned on. If an attempt is made to actually adjust it while a Marker Function is on, a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “–221, Settings conflict” warning.</p> <p>you cannot directly set the Y value of a Fixed marker while Normalize is turned on. If an attempt is made to do so while Normalize is on, a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “–221, Settings conflict” warning.</p>
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X and Y Axis values are saved in instrument state
Initial S/W Revision	Prior to A.02.00

### Fixed Marker Y Axis Value

Key Path	<b>Marker, Fixed</b>
Example	:CALC:MARK:MODE FIX sets Marker 1 to Fixed.
Notes	See the description under the <b>Marker</b> key, above.
Dependencies	you cannot directly set the X or Y value of a Fixed marker which has a marker function turned on. If an attempt is made to actually adjust it while a Marker Function is on, , a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “–221, Settings conflict” warning.
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X and Y Axis values are saved in instrument state
Default Unit	depends on the current selected Y axis unit
Initial S/W Revision	Prior to A.02.00

## Off

Turns off the selected marker and its marker function setting, if any. However, Off does not affect which marker is selected.

Key Path	<b>Marker</b>
Example	:CALC:MARK:MODE OFF sets Marker 1 to Off.

Notes	See the description under the “ Marker” key, above.
State Saved	The marker control mode (Normal, Delta, Fixed, Off) is saved in instrument state
Initial S/W Revision	Prior to A.02.00

## Properties

Opens a menu used to set certain properties of the selected marker.

Key Path	<b>Marker</b>
Initial S/W Revision	Prior to A.02.00

## Select Marker

Duplicate of the **Select Marker** key under **Marker**. Selecting a marker here causes the same marker to be selected under **Marker**. (That is, there is only one “selected marker”.)

## Relative To

Selects the marker that the selected marker will be relative to (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Key Path	<b>Marker, Properties</b>
<b>Remote Command</b>	:CALCulate:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :REFerence <integer> :CALCulate:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :REFerence ?
Example	CALC:MARK1:REF 2 sets the marker 1 reference marker to 2 and turns marker 1 on as a delta marker.
Notes	A marker cannot be relative to itself so that choice is grayed out. If the grayed out key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “–221, Settings conflict” warning. See error –221.2200 in Master Error Messages: X-Series document for exact error text.
Notes	This command causes the marker specified with the subopcode to become selected. Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped.

## Marker

Couplings	The act of specifying the selected marker's reference marker makes the selected marker a Delta marker. If the reference marker is off it is turned on in <b>Fixed</b> mode at the delta marker location.
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it's default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1.  Set to the defaults by using <b>Restore Mode Defaults</b> . This is not reset by <b>Marker Off</b> , <b>All Markers Off</b> , or <b>Preset</b> .
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle.
Min	1
Max	12
Status Bits/OPC dependencies	none  Default (selected when <b>Restore Mode Defaults</b> is pressed): next higher numbered marker or 1 if marker 12.
Initial S/W Revision	Prior to A.02.00

### X Axis Scale (formerly Readout)

Accesses a menu that enables you to affect how the X Axis information for the selected marker is displayed in the marker area (top-right of display) and the active function area of the display, and how the marker is controlled. The available settings for the X Axis Scale are Frequency, Period, Time, and Inverse Time.

See "[More Information](#)" on page 1539.

Key Path	Marker, Properties
<b>Remote Command</b>	:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12 :X:READout FREQuency   TIME   ITIME   PERiod  :CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12 :X:READout ?  :CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12 :X:READout :AUTO ON   OFF   1   0  :CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12 :X:READout :AUTO?
Example	CALC:MARK3:X:READ TIME sets the marker 3 X Axis Scale to Time.
Notes	This command causes the specified marker to become selected.
Notes	This command causes the specified marker to become selected.

Preset	AUTO Marker Preset (selected when a marker is turned <b>Off</b> ): <b>Auto</b> (see below). In most measurements the Auto settings results in Frequency being the preset readout.
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

### More Information

The **X Axis Scale** of a marker is the scale of its X Axis value. This affects the units displayed in the Marker Result block and used to specify the marker's X Axis location. The X Axis Scale is specified using the **Marker, Properties, X Axis Scale** key.

All markers in swept spans have both a time and frequency value. Which of these is used for the result display, and for positioning the marker, depends on the **X Axis Scale** setting. The **X Axis Scale** setting can be **Frequency** or **Time**, as well as the reciprocal of either (**Period** or **Inverse Time**). There is also an **Auto** setting - when in **Auto**, a marker's **X Axis Scale** changes whenever the domain of the trace, upon which it set, changes. All choices for **X Axis Scale** are allowed. Note that this behavior differs from the behavior in previous instruments: previously the instrument remembered a different **X Axis Scale** (formerly called **Readout**) for each domain, and the choices of **X Axis Scale** were restricted. These restrictions were based on the current domain of the instrument.

### Auto

When in Auto, the X-Axis Scale is **Frequency** if the Marker Trace is a frequency domain trace, **Time** if the Marker Trace is a time domain trace. When in Auto, if the marker changes traces, or the domain of the trace the marker is on changes, the auto result is re-evaluated. If the X Axis Scale is chosen manually, that Scale is used regardless of the domain of the trace.

Key Path	<b>Marker, Properties, X Axis Scale</b>
Example	CALC:MARK2:X:READ:AUTO ON sets the marker 2 X-axis scaling to automatically select the most appropriate units.
Initial S/W Revision	Prior to A.02.00

### Frequency

Sets the marker X Axis scale to Frequency, displaying the absolute frequency of a normal marker or the frequency of the delta marker relative to the reference marker. Frequency is the auto setting for frequency domain traces.

If Frequency is selected for a time domain trace, all of the points in the trace will show the same value. Attempting to use the knob or step keys to adjust the X Axis value of the marker or entering an X Axis value from the numeric keypad or remotely will have no effect but will generate no error.

Key Path	<b>Marker, Properties, X Axis Scale</b>
Example	CALC:MARK2:X:READ:FREQ !sets the marker 2 X Axis scale to Frequency.

## Marker

Notes	1-of-N readback is <b>Frequency</b>
State Saved	The X Axis Scale setting is saved in instrument state.
Initial S/W Revision	Prior to A.02.00

## Period

Sets the marker X Axis scale to Period, displaying the reciprocal of the frequency of the marker, or the reciprocal of the frequency separation of the two markers in a delta-marker mode. The units are those of time (sec, msec, etc). If the markers are at the same frequency in a delta marker mode, the result will be the reciprocal of 0, which is infinitely large. The display will show “---” and a SCPI query will return infinity.

If Period is selected for a time domain trace, all of the points in the trace will show the same value. Attempting to use the knob or step keys to adjust the X Axis value of the marker or entering an X Axis value from the numeric keypad or remotely will have no effect but will generate no error.

Key Path	<b>Marker, Properties, X Axis Scale</b>
Example	CALC:MARK2:X:READ PER sets the marker 2 X Axis scale to Period.
Notes	1-of-N readback is <b>Period</b>
State Saved	The X Axis Scale setting is saved in instrument state.
Initial S/W Revision	Prior to A.02.00

## Time

Sets the marker X Axis scale to Time, displaying the time interval between a normal marker and the start of a sweep or the time of the delta marker relative to the reference marker. Time is the auto setting for time domain traces. In a delta-marker mode it is the (sweep) time interval between the two markers.

Key Path	<b>Marker, Properties, X Axis Scale</b>
Example	CALC:MARK2:X:READ TIME sets the marker 2 X Axis Scale to Time..
Notes	1-of-N readback is <b>Time</b>
Couplings	Frequency domain traces taken in FFT mode have no valid time data. Therefore when Time is selected for markers on such traces, the X Axis value is taken as the appropriate percentage of the displayed sweep time, which is a calculated estimate.
State Saved	The X Axis Scale setting is saved in instrument state
Initial S/W Revision	Prior to A.02.00

## Inverse Time

Sets the marker X Axis scale to Inverse Time, displaying the reciprocal time. It is useful in a delta mode to show the reciprocal of (sweep) time between two markers. This function is only meaningful when on a time domain trace and in the **Delta** control mode. If the markers are at the same X Axis value, the time between them is 0, so the reciprocal of sweep time is infinitely large. The display will show “---” and a



SCPI query will return infinity.

Key Path	<b>Marker, Properties, X Axis Scale</b>
Example	:CALC:MARK2:X:READ ITIM sets the marker 2 X Axis scale to Inverse Time.
Notes	1-of-N readback is <b>Inverse Time</b>
Couplings	Frequency domain traces taken in FFT mode have no valid time data. Therefore when Inverse Time is selected for markers on such traces, the X Axis value is undefined, shows as “--” and returns not a number to a query.
State Saved	The X Axis Scale setting is saved in instrument state
Initial S/W Revision	Prior to A.02.00

### Marker Trace

Selects the trace that you want your marker to be placed on. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X Axis Scale of the marker. All markers have an associated trace, even **Fixed** markers; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal or Delta markers.

See [“Auto Init On” on page 1542.](#)

See [“Auto Init Rules Flowchart” on page 1542.](#)

See [“Auto Init OFF” on page 1543.](#)

Key Path	<b>Marker, Properties</b>
<b>Remote Command</b>	:CALCulate:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :TRACe 1   2   3   4   5   6 :CALCulate:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :TRACe?
Example	CALC:MARK1:TRAC 2 places marker 1 on trace 2.
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating.  An application may register a trace name to be displayed on the key instead of a trace number.
Couplings	The state of Marker Trace is not affected by the Auto Couple key.  If a Marker Trace is chosen manually, Auto Init goes to Off for that marker.  Sending the remote command causes the addressed marker to become selected.
Preset	Presets on Preset or All Markers Off
State Saved	The Marker Trace and state of <b>Auto Init</b> for each marker is saved in instrument state.
Min	1

## Marker

Max	6
Readback line	[TraceN, Auto Init] or [TraceN, Manual] where N is the trace number to which the marker is currently assigned.
Initial S/W Revision	Prior to A.02.00

### Auto Init On

When **Auto Init** is true, the marker's trace attribute is re-determined automatically by the analyzer whenever the marker turns on (Normal, Delta or Fixed) from an Off state. (The trace attribute is also determined for all markers that are on, whenever **Auto Init** is turned on).


When the marker moves between traces the marker's X position in trace points is retained as it moves. For moving between active traces this generally means the x-axis value of the marker will not change. But for moving to or from an inactive trace, the x-axis value will take on that of the new trace at the bucket the marker was on the old trace (and is still on, on the new trace, since the bucket doesn't change).

Note this is true even if the marker is off screen. Thus, a marker that is at the center of the screen on the old trace stays at the center of the screen on the new trace. A marker that is off screen one whole screen to the left on the old trace remains off screen one whole screen to the left on the new trace – even if this means it will be at negative time!

Marker Trace is set to 1, and Auto Init is set to On, on a Preset or All Markers Off.

### Auto Init Rules Flowchart

The following flowchart depicts the Auto Init rules:

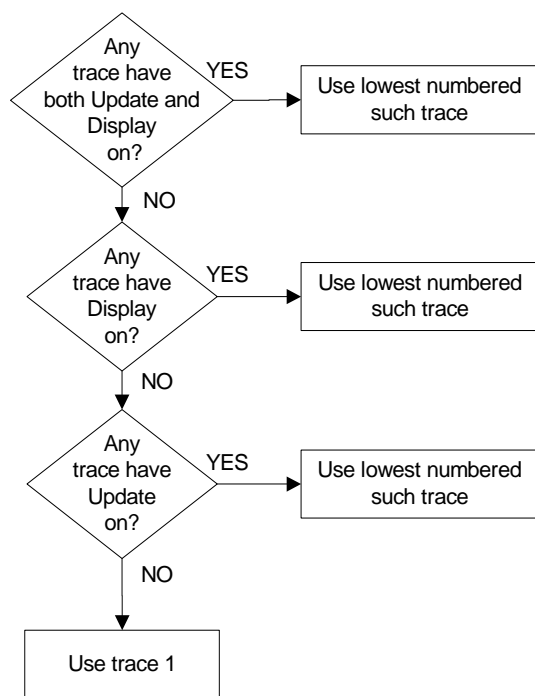

This flowchart makes it clear that putting all lower-numbered traces in View is the simplest way to specify which trace you want the markers to go to when they turn on. For example, if you want all

Markers to go to trace 2 when they turn on, put trace 1 in View.

### Auto Init OFF

This command associates the marker with the specified trace and turns Marker Trace, Auto Init OFF for that marker. If the marker is not **Off** it moves the marker from the trace it was on to the new trace. If the marker is **Off** it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed, even if that marker is in Auto mode.

<b>Remote Command:</b>	:CALCulate:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :TRACe:AUTO OFF   ON   0   1  :CALCulate:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :TRACe:AUTO?
Notes:	Turning Marker Trace Auto Init off has no effect on the trace on which the marker is currently placed.  The response to the query will be 0 if OFF, 1 if ON.
Couplings:	The state of Auto Init is not affected by the Auto Couple key.  Auto Init is set to True on a Preset or All Markers Off.  If Auto Init is set to On for a marker and that marker is on, that marker's Marker Trace is immediately set according to the above flowchart.  Sending the remote command causes the addressed marker to become selected.
Preset:	ON
Initial S/W Revision:	Prior to A.02.00

### Lines

When on, displays a vertical line of graticule height and a horizontal line of graticule width, intersecting at the indicator point of the marker (that is, the center of the X or the bottom tip of the diamond. The lines are blue in color.

If the marker is off screen the lines should be extended from the marker so that they go thru the screen area if possible. This is really useful for off screen Fixed markers as it lets you see their amplitude even though they are off the X Axis.

Key Path	<b>Marker, Properties</b>
<b>Remote Command</b>	:CALCulate:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :LINES [: STATE] OFF   ON   0   1  :CALCulate:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12 :LINES [: STATE] ?
Example	:CALC:MARK2:LIN:ON turns Lines on for marker 2.

## Marker

Couplings	Sending the remote command causes the addressed marker to become selected.
Preset	OFF
State Saved	Saved in State
Initial S/W Revision	Prior to A.02.00

## Marker Table

When set to On the display is split into a measurement window and a marker data display window. For each marker which is on, information is displayed in the data display window, which includes the marker number, control mode, trace number, X axis scale, X axis value, and the Y-axis result. Additional information is shown for markers which have marker functions turned on.

Turning the Marker Table on turns the Peak Table off and vice versa.

Key Path	<b>Marker</b>
<b>Remote Command</b>	:CALCulate:MARKer:TABLE[:STATe] OFF ON 0 1 :CALCulate:MARKer:TABLE[:STATe]?
Example	CALC:MARK:TABL ON turns on the marker table.
Preset	OFF
State Saved	Whether the marker table is on is saved in instrument state
Initial S/W Revision	Prior to A.02.00

## Marker Count

Accesses the marker count menu.

Key Path	<b>Marker</b>
Readback line	[On] if count on for the selected marker, [Off] if it is off.
Initial S/W Revision	Prior to A.02.00

## Counter On/Off

Turns the marker frequency counter on and off. The selected marker is counted, and if the selected marker is a delta marker and its reference marker is not fixed, the reference marker is counted as well.

See [“Understanding the Marker Counter”](#) on page 1546.

See [“Query Count Value”](#) on page 1545.

Key Path	<b>Marker Fctn, Marker Count</b>
----------	----------------------------------

<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOUNT[:STATE] OFF ON 0 1  :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOUNT[:STATE]?
<b>Example</b>	CALC:MARK2:FCO ON selects marker 2, turns it on, and turns on the counter  CALC:MARK2:FCO:X? returns the counted frequency.
<b>Notes</b>	Fixed markers are not counted, but a Fixed marker will have a count stored in it if it is selected or is the reference marker for the selected marker. The count already in the marker is stored when the marker becomes fixed and if there is none or the marker moves (for example, Pk Search) it is counted and stored after the next sweep.  If a Fixed marker has a count stored in it, that count will be displayed when the marker is selected, and used as the reference count when that marker is a reference marker.  If a Fixed marker has a count stored in it, that count will be deleted if the marker X is adjusted.  If a Fixed marker has a count stored in it, and a Search function is performed using the Fixed marker, while the counter is on, the count stored in the marker will be updated.  If a Fixed marker has a count stored in it, and is a reference marker, and the reference is moved to a valid trace point by re-zeroing the delta (by pressing Delta again or sending the DELTA SCPI command), while the counter is on, the count stored in the marker will be updated.
<b>Notes</b>	This command causes the specified marker to become selected.
<b>Dependencies</b>	Marker Count is unavailable (grayed out and Off) if the Gate function is on.
<b>Couplings</b>	If the selected marker is <b>Off</b> when the counter is turned on, the selected marker is set to Normal and placed at center of screen on the trace determined by the Marker Trace rules.  If a marker which is OFF is selected while the counter is on, the counter remains on, but since the marker is off, the count is undefined. In this case the analyzer will return not a number to a SCPI count query.  The counter is turned OFF when the selected marker is turned OFF.
<b>Preset</b>	OFF
<b>State Saved</b>	The state of the counter (on/off) is saved in instrument state. In the case of Fixed markers, the count stored in the marker is saved in instrument state.
<b>Initial S/W Revision</b>	Prior to A.02.00

### Query Count Value

Queries the frequency count. The query returns the absolute count unless the specified marker is in Delta mode, then it returns the relative count. If the marker is off, or the marker is on but the counter is off, the analyzer will return not a number to a SCPI count query. A marker with no stored count, or a non-**Fixed**

## Marker

marker on a stored trace, will also return not a number to a SCPI count query. Note this result may simply mean that the first sweep after the counter turned on has not yet completed.

<b>Remote Command:</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:X?
Notes:	This query does NOT cause the specified marker to become selected.
Initial S/W Revision:	Prior to A.02.00

### Understanding the Marker Counter

See [“Counting Off-screen Markers”](#) on page 1546.

See [“Delta Marker”](#) on page 1546.

See [“Fixed Markers”](#) on page 1547.

See [“More Information on "Counter"”](#) on page 1547.

Using the internal counter we can count the frequency of a marker, but we cannot count while we are actually sweeping. So, once we are done with a sweep, we move to the selected marker frequency and count that frequency. Then, if the marker is a Delta marker, the count is also taken for its reference marker. The count is actually performed by moving the LO to the frequency (or frequencies in the case of a delta marker) we wish to count. The count is executed on a marker by marker basis and no further count is taken until after the next sweep (even if the marker moves before another sweep has completed).

The Marker Count is taken by tuning the instrument to the frequency of the marker and counting the IF, with the instrument not sweeping. The count is adjusted for display by adding or subtracting it (as appropriate) from the LO frequency, so that you see a count that represents the signal frequency. This is true even if External Mixing is on. Since all this happens between sweeps, you never see the instrument retuning to do the counts.

If you wish to see the entered frequency of a counted marker it will appear in the active function area when that marker is selected (for Fixed markers, you have to press the Marker, Fixed key to select Fixed markers and then press it a second time to view or adjust the x or y marker values).

### Counting Off-screen Markers

If the selected marker is off the X-axis the instrument can still be tuned to the marker (unless it is outside the range of the instrument), so the count can still be displayed. This means you can see a count for an off-screen marker even though there may be no valid Y-value for the marker. If the marker frequency is outside the range of the instrument, the display will show three dashes in the count block (---), and not a number is returned to a SCPI count query.

### Delta Marker

When a Delta Marker is selected while Marker Count is on:

If the reference marker is not a fixed marker, the display shows the difference between the count of the selected marker and the count of the reference marker

If the reference marker is a fixed marker and there is a count stored in the marker (because Marker Count was on when the marker became a fixed marker), the display shows the difference between the count at the marker and the count stored in the reference marker.

Marker Count works in zero span as well as in Swept SA. The instrument tunes to the frequency of the selected marker, which, for active zero span traces, is simply the center frequency of the analyzer.

### Fixed Markers

Fixed markers have a count stored in them that is generally kept fixed and not updated. If a fixed marker is selected, or used as a reference, the signal at the marker frequency is not counted; rather the stored count is seen or used as the reference. The count is stored, if Count is on, when the marker becomes fixed or when, while fixed, the marker is moved by re-zeroing the reference (if it is the reference marker) or via a peak search (since both of these, by definition, use valid trace data). The count stored in a Fixed marker is lost if the counter is turned off, if the marker is moved to an inactive trace, or if the marker is moved by adjusting its x-value.

### More Information on "Counter"

When the counter is on, the count (or the delta count) for the selected marker is displayed.

The invalid data indicator (\*) will turn on until the completion of the first count.

Marker Count frequency readings are corrected using the **Freq Offset** function (in some previous analyzers, they were not). Note however that Marker Delta readings are not corrected, as any offset would be applied to both.

In zero span on active traces the counter continues to function, counting any signal near the center frequency of the analyzer.

---

**NOTE** No signal farther from the marker frequency than the Res BW will be seen by the counter.

---

The above command turns on or off the frequency counter. If the specified marker number in the command is not the selected marker, it becomes the selected marker. If the specified marker number is not on, FCount ON sets it to Normal and places it at center of screen on the trace determined by the Marker Trace rules. Once the marker count is on, it is on for any selected marker, not just for the one used in the command. A 1 is returned to the state query only if marker count is on and the specified number is the selected marker. The invalid data indicator (\*) will turn on until the completion of the first count but this does not keep a value from being returned.

### Gate Time Auto/Man

Controls the length of time during which the frequency counter measures the signal frequency. Longer gate times allow for greater averaging of signals whose frequency is “noisy”, though the measurement takes longer. If the gate time is an integer multiple of the length of a power-line cycle (20 ms for 50 Hz power, 16.67 ms for 60 Hz power), the counter rejects incidental modulation at the power line rate. The shortest gate time that rejects both 50 and 60 Hz modulation is 100 ms, which is the value chosen in Auto, or on Preset or when Auto Couple is pressed.

The start time of the Gate Time of the counter must be controlled by the same trigger parameters as controls the sweep. Thus, if the Trigger is not in Free Run, the counter gate must not start until after the trigger is received and delayed.

Key Path	Marker Function, Marker Count
----------	-------------------------------

## Marker

<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:GATetime <time> :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:GATetime? :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:GATetime:AUTO OFF ON 0 1 :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:GATetime:AUTO?
Example	:CALC:MARK2:FCO:GAT 1e-2 sets the gate time for Marker 2 to $10^{(-2)}$ s = 10 ms.
Notes	When Auto Couple is pressed, Gate Time is set to 100 ms.
Notes	This command causes the specified marker to become selected.
Preset	100 ms ON
State Saved	Saved in instrument state.
Min	1 us
Max	500 ms
Initial S/W Revision	Prior to A.02.00

## Couple Markers

When this function is true, moving any marker causes an equal X Axis movement of every other marker which is not Fixed or Off. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

Note that Fixed markers do not couple. They stay where they were while all the other markers move. Of course, if a Fixed marker is being moved, all the non-fixed markers do move with it.

This may result in markers going off screen.

Key Path	Marker
<b>Remote Command</b>	:CALCulate:MARKer:COUPle[:STATe] OFF ON 0 1 :CALCulate:MARKer:COUPle[:STATe]?
Example	:CALC:MARK:COUP ON sets Couple Markers on.
Preset	Off, presets on Mode Preset and All Markers Off
State Saved	Saved in State
Initial S/W Revision	Prior to A.02.00



## All Markers Off

Turns off all markers. See Marker, “Off” on page 1536.

Key Path	<b>Marker</b>
<b>Remote Command</b>	:CALCulate:MARKer:AOff
Example	CALC:MARK:AOff turns off all markers.
Couplings	sets the selected marker to 1.
Preset	n/a.
Initial S/W Revision	Prior to A.02.00

Marker

## Marker Function

The Marker Function key opens up a menu of softkeys that allow you to control the Marker Functions of the instrument. Marker Functions perform post-processing operations on marker data. Band Functions are Marker Functions that allow you to define a band of frequencies around the marker. The band defines the region of data used for the numerical calculations. These marker functions also allow you to perform mathematical calculations on trace and marker data and report the results of these calculations in place of the normal marker result.

---

**NOTE** Unlike regular markers, marker function markers are not placed directly on the trace. They are placed at a location which is relative to the result of the function calculation.

---

See [“More Information” on page 1551.](#)

See [“Fixed marker functions” on page 1552.](#)

See [“Interval Markers” on page 1552.](#)

<b>Remote Command:</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion NOISe BPOWer BDENsity OFF  :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion?
Notes:	Sending this command selects the subopcoded marker  The marker function result is queried in the same fashion as the Marker Result, as outlined in the Marker section, with the CALC:MARK:Y? command.
Dependencies:	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker.  If a marker function was already on when the marker became Fixed then the selected Band Function is shown but cannot be changed. Therefore, you cannot directly set the X or Y value of a Fixed marker which has a marker function turned on. To turn off the function, turn off the marker.
Preset:	OFF
State Saved:	The band function for each marker is saved in Instrument State
Initial S/W Revision:	Prior to A.02.00

### More Information

The units to be used for displaying Marker Function results in Delta mode vary depending on what is the reference marker and what it is referenced to.

Marker Functions are different from Measurements, which automatically perform complex sequences of setup, data acquisition, and display operations in order to measure specified signal characteristics. Marker Functions are specified for each individual marker and may be turned on individually for each

### Marker Function

marker.

The **Marker Fctn** menu controls which marker functions are turned on and allows you to adjust setup parameters for each function. The Marker Functions are **Marker Noise**, **Band/Interval Power**, and **Band/Interval Density**, only one of which can be on for a given marker.

If the selected marker is off, pressing Marker Fctn sets it to Normal and places it at the center of the display on the trace determined by the Marker Trace rules. However, if the selected marker was **Off**, **Marker Function Off** had to be the selected function, and it remains so even after the marker is thus turned on, although you may then change it.

### Fixed marker functions

In the case of a fixed marker, it is not possible to turn on or change a band function. This is because a Fixed marker holds the value it had when it became fixed; the trace it was on may keep on changing, so the function value, which depends on trace data, could not be calculated on an ongoing basis.

It is possible to have a Marker Function on for a Fixed marker, in the case where a function was already on when the marker became Fixed. In this case the function value will be retained in the marker. It is also possible to have a Marker Function on for a Fixed marker in the case when the marker was off and was turned on as **Fixed** because **Delta** was pressed to create a reference marker - in which case the marker function, marker function width, Y Axis value and marker function result that the **Delta** marker had when **Delta** was pressed are copied into the Fixed marker. If **Delta** is pressed again, causing the fixed reference marker to move to the delta marker's position, the marker function, marker function width, Y Axis value and marker function result that the **Delta** marker had when **Delta** was pressed are again copied into the fixed reference marker.

If a Marker Function is on for a Fixed marker, the marker's reported value is derived by the function. Therefore you cannot directly set the X or Y value of a Fixed marker which has a marker function turned on. Indirect setting as detailed above or when a Peak Search is performed is allowed, as the Fixed marker is always placed on a trace and can derive its function value from the trace at the moment when it is placed.

### Interval Markers

What is an interval marker? The band power marker computes the total power within a span in a nonzero span. The results computation must include the RBW. The interval power marker measures the average power across some time interval in zero span.

Interval Density is defined to be Interval Power divided by Bn. Bn is the noise bandwidth of the RBW filter, as noted and used within the Band Power computation.

### Select Marker

See [“Select Marker” on page 1534](#).

### Marker Noise

Turns on the Marker Noise function for the selected marker, making it a noise marker. If the selected marker is off, it is turned on in **Normal** mode and located at the center of the screen.

When **Marker Noise** is selected while in the **Marker Function Off** state, the **Band Span** or **Interval Span** is initialized to 5% of the screen width.

When **Marker Noise** is on, the marker's Y Axis Result is the average noise level, normalized to a 1 Hz noise power bandwidth, in the band specified under the **Band Adjust** key.

See [“More Information” on page 1553](#).

See [“Off-trace Markers” on page 1553](#).

Key Path	Marker Fctn
Example	<p>CALC:MARK:FUNC NOIS turns on marker 1 as a noise marker.</p> <p>CALC:MARK:FUNC? returns the current marker function for the marker specified. In this case it returns the string: NOIS.</p> <p>CALC:MARK:Y? returns the y-axis value of the Marker Noise function for marker 1 (if Marker Noise is ON for marker 1). Note that the delta value when the Y axis unit is Watt is the square of the delta value when the Y axis unit is Volt. For example, when the percent ratio with Y axis unit in Volt is 0.2, the percent ratio with Y axis unit in Watt will be <math>0.2^2 = 0.04</math>. When you read the value out remotely you have to know whether your Y Axis Unit is log (dB), linear (V or A), or power (W).</p>
Notes	See the description under the <a href="#">““Marker Function” on page 1551”</a> key, above.
Dependencies	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker.
Couplings	<p>Average detector and Power Averaging auto selected when Marker Noise on</p> <p>If the selected (specified) marker is off, selecting Marker Noise via front panel or SCPI will turn the marker on.</p>
Initial S/W Revision	Prior to A.02.00

### More Information

To guarantee accurate data for noise-like signals, a correction for equivalent noise bandwidth is made by the analyzer. The **Marker Noise** function accuracy is best when the detector is set to Average or Sample, because neither of these detectors will peak-bias the noise. The trade off between sweep time and variance of the result is best when Average Type is set to Power Averaging. Therefore, Auto coupling chooses the Average detector and Power Averaging when Marker Noise is on. Though the Marker Noise function works with all settings of detector and Average Type, using the positive or negative peak detector gives less accurate measurement results.

### Off-trace Markers

If a **Normal** or **Delta** noise marker is so near to the left or right edge of the trace that some of the band is off the trace, then it uses only that subset of the Band Width that is on-trace. If the marker itself is off-trace, its value becomes undefined.

Neither band/interval power nor band/interval density markers are defined if any part of the band is off-trace (unless they are Fixed with a stored function value in them), except that when the edges of the bandwidth are trivially off-screen, due to mathematical limitations in the analyzer or in the controlling computer, the result will still be considered valid.

## Band/Interval Power

Turns on the Band/Interval Power function for the selected marker. If the selected marker is off it is turned on in **Normal** marker and located at the center of the screen.

When **Band/Interval Power** is selected while in the **Marker Function Off** state, the **Band Span** or **Interval Span** is initialized to 5% of the screen width.

If the detector mode for the detector on the marker's trace is set to Auto, the average detector is selected. If the Average type is set to Auto, Power Averaging is selected. Other choices for the detector or Average type will usually cause measurement inaccuracy.

Key Path	Marker Fctn
Example	<p>CALC:MARK:FUNC BPOW turns on marker 1 as a band power marker.</p> <p>CALC:MARK2:FUNC? returns the current setting of marker function for marker 2. In this case it returns the string: BPOW.</p> <p>CALC:MARK:Y? returns the y-axis value of the Band Power function for marker 1. Note that the delta value when the Y axis unit is Watt is the square of the delta value when the Y axis unit is Volt. For example, when the percent ratio with Y axis unit in Volt is 0.2, the percent ratio with Y axis unit in Watt will be <math>0.2^2 = 0.04</math>. When you read the value out remotely you have to know whether your Y Axis Unit is log (dB), linear (V or A), or power (W).</p>
Notes	See the description under the <a href="#">“Marker Function” on page 1551</a> key, above.
Dependencies	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker.
Couplings	<p>If the detector mode for the detector on the marker's trace is set to Auto, the average detector is selected. If the Average type is set to Auto, Power Averaging is selected.</p> <p>If the selected (specified) marker is off, selecting Band Power via front panel or SCPI will turn the marker on.</p>
Initial S/W Revision	Prior to A.02.00

## Band/Interval Density

Turns on the Band/Interval Density function for the selected marker. If the selected marker is off it is turned on in **Normal** marker mode and located at the center of the screen.

When **Band/Interval Density** is selected while in the **Marker Function Off** state, the **Band Span** or **Interval Span** is initialized to 5% of the screen width.

See [“More Information” on page 1555](#).

See [“What is band/interval density?” on page 1555](#)

Key Path	Marker Fctn

Example	<p>CALC:MARK:FUNC BDEN turns on marker 1 as a band density marker.</p> <p>CALC:MARK:FUNC? returns the current setting of band function for the marker specified. In this case it returns the string: BDEN.</p> <p>CALC:MARK:Y? returns the y-axis value of the Band Density function for marker 1. Note that the delta value when the Y axis unit is Watt is the square of the delta value when the Y axis unit is Volt. For example, when the percent ratio with Y axis unit in Volt is 0.2, the percent ratio with Y axis unit in Watt will be <math>0.2^2 = 0.04</math>. When you read the value out remotely you have to know whether your Y Axis Unit is log (dB), linear (V or A), or power (W).</p>
Notes	<p>The zero-width case is treated as one bucket wide although it shows a width of 0.</p> <p>When the trace the marker is on crosses domains, the width crosses domains as well, to remain the same percentage of the trace</p>
Notes	See the description under the <a href="#">““Marker Function” on page 1551”</a> key, above.
Dependencies	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker.
Couplings	<p>If the detector mode for the detector on the marker’s trace is set to Auto, the average detector is selected. If the Average type is set to Auto, Power Averaging is selected.</p> <p>If the selected (specified) marker is off, selecting Band Density via front panel or SCPI will turn the marker on.</p>
State Saved	n/a.
Initial S/W Revision	Prior to A.02.00

**More Information**

It may seem like the band density marker function is exactly like a function of a noise marker with variable width. But they are somewhat different. The Noise markers assume that the signal to be measured is noise-like. Based on this assumption, we can actually make reasonable measurements under very nonideal conditions: any detector may be used, any averaging type, any VBW. In contrast, the Band Power and Band Density markers make no assumption about the statistics of the signal.

If the detector mode for the detector on the marker’s trace is set to Auto, the average detector is selected. If the Average type is set to Auto, Power Averaging is selected. Other choices for the detector or Average type will usually cause measurement inaccuracy.

**What is band/interval density?**

On frequency domain traces, the average density across a band is the total band power divided by the bandwidth over which it is measured.

On time domain traces, interval density is the average power in the interval divided by the noise bandwidth of the RBW of the trace.

## Off

Turns off band functions for the selected marker.

Key Path	<b>Marker, Marker Fctn</b>
Example	:CALC:MARK:FUNC OFF turns off marker functions for marker 1
Notes	See the description under the “ <a href="#">Marker</a> ” on page 1531 key.
Dependencies	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker, including Off
Couplings	Turning off the marker function has no effect on the band span nor does it turn the marker off.
Initial S/W Revision	Prior to A.02.00

## Band Adjust

Opens a menu that lets you set the width or left or right edges of the band.

It is legal to change the width of the band even if there is no marker function on. Generally this can only happen by sending the SCPI command since access to the menu is restricted if no marker function is on.

Key Path	<b>Marker Function</b>
Dependencies	If the marker is Fixed, Band Adjust is grayed out. If the marker function is Off, Band Adjust is grayed out.
Couplings	If any of the Band Adjust functions are the active function, the wings and arms of the selected marker display in green; otherwise they display in white.
Initial S/W Revision	Prior to A.02.00

## Band/Interval Span

Sets the width of the span for the selected marker.

It is legal to change the width of the band even if there is no marker function on. Generally this can only happen by sending the SCPI command since access to the menu is restricted if no marker function is on.

In the table below,  $\text{sweep\_width} = \max(1, \text{sweep\_points} - 1)$  and  $\text{sweep\_points}$  is the number of sweep points, set in the **Sweep** menu.

Key Path	<b>Marker Fctn, Band Adjust</b>
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION: BAND:SPAN <freq>  :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION: BAND:SPAN?



Example	:CALC:MARK12:FUNC:BAND:SPAN 20 MHz sets the band span of marker 12 to 20 MHz  :CALC:MARK:FUNC:BAND:SPAN? queries the band span of Marker 1
Notes	Units are those of the trace's domain, Hz for frequency domain, s for time domain.
Notes	<p>Sending this command selects the subopcoded marker</p> <p>The unit of the parameter must match the current domain of the trace the selected marker is on, or an invalid suffix error will be generated. If no unit is sent the fundamental unit for the trace domain will be used (Hz for freq domain traces, s for time domain traces).</p> <p>Note that all the values provided in this table are only valid for frequency domain traces. If the current domain of the trace is time domain, values and unit will be different. In frequency domain, the Preset value is dependant on the frequency range of the instrument. The default value 1.3245 GHz is appropriate only if the instrument is a 26.5 GHz instrument (Option 526). In a 26.5 GHz Instrument, the default span is 26.49 GHz, so 5% of the span corresponds to 1.3245 GHz.</p>
Couplings	<p>Changing the Band/Interval Span necessarily changes the Band/Interval Left and Band/Interval Right values</p> <p>Band/Interval Span is set to 0 when the marker is turned off</p> <p>Band/Interval Span is set to 5% of span when any marker function is turned on if and only if it is zero at that time</p>
Preset	If 0, set to 5% of span, when a marker function is turned on
State Saved	Saved in Instrument State
Min	0 Hz
Max	Infinity. Unlike legacy analyzers, where the markers were forced to be on screen, X-Series marker values are not limited and do not clip
Backwards Compatibility SCPI	:CALCulate:MARKer[1] 2 3 4:X:SPAN
Initial S/W Revision	Prior to A.02.00

**Band/Interval Left**

Sets the left edge frequency or time for the band of the selected marker. The right edge is unaffected.

It is legal to change the width of the band even if there is no marker function on. Generally this can only happen by sending the SCPI command since access to the menu is restricted if no marker function is on.

In the table below,  $\text{sweep\_width} = \max(1, \text{sweep\_points} - 1)$  and  $\text{sweep\_points}$  is the number of sweep points, set in the **Sweep** menu.

Key Path	<b>Marker Fctn, Band Adjust</b>
----------	---------------------------------

Common Measurement Functions  
**Marker Function**

<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION: BAND:LEFT <freq>  :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION: BAND:LEFT?
Example	:CALC:MARK12:FUNC:BAND:LEFT 20 GHz sets the left edge of the band span of marker 12 to 20 GHz  :CALC:MARK:FUNC:BAND:LEFT? queries the band span of Marker 1
Notes	Units are those of the trace's domain, Hz for frequency domain, s for time domain. When the left edge is moved, the right edge stays anchored; thus, the marker's frequency will change.
Notes	Sending this command selects the subopcoded marker  The unit of the parameter must match the current domain of the trace the selected marker is on, or an invalid suffix error will be generated. If no unit is sent the fundamental unit for the trace domain will be used (Hz for freq domain traces, s for time domain traces).  Note that all the values provided in this table are only valid for frequency domain traces. If the current domain of the trace is time domain, values and unit will be different. In frequency domain, the Preset value is dependant on the frequency range of the instrument. The default value 1.3245 GHz is appropriate only if the instrument is a 26.5 GHz instrument (Option 526). In a 26.5 GHz Instrument, the default span is 26.49 GHz, so 5% of the span corresponds to 1.3245 GHz.
Couplings	Changing the Band/Interval Left necessarily changes the Band/Interval Span and Band/Interval Center values  Band/Interval Span is set to 0 when the marker is turned off so that means Band/Interval Left is set to the center value at this time  Band/Interval Span is set to 5% of span when any marker function is turned on if and only if it is zero at that time
Preset	If 0, Band/Interval Span is set to 5% of span, when a marker function is turned on, which affects Band/Interval Left
State Saved	Saved in Instrument State
Min	0 Hz
Max	Infinity. Unlike legacy analyzers, where the markers were forced to be on screen, X-Series marker values are not limited and do not clip
Backwards Compatibility SCPI	:CALCulate:MARKer[1] 2 3 4:X:STARt  (This legacy command was used to control the Reference marker in Delta Pair/Band Pair mode, and is aliased to the new command.)
Initial S/W Revision	Prior to A.02.00

**Band/Interval Right**

Sets the right edge frequency or time for the band of the selected marker. The left edge is unaffected

In the table below,  $\text{sweep\_width} = \max(1, \text{sweep\_points} - 1)$  and  $\text{sweep\_points}$  is the number of sweep points, set in the **Sweep** menu.

It is legal to change the width of the band even if there is no marker function on. Generally this can only happen by sending the SCPI command since access to the menu is restricted if no marker function is on.

Key Path	Marker Fctn, Band Adjust
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION: BAND:RIGHT <freq>  :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION: BAND:RIGHT?
Example	:CALC:MARK12:FUNC:BAND:RIGHT 20 GHz sets the right edge of the band span of marker 12 to 20 GHz  :CALC:MARK:FUNC:BAND:RIGHT? queries the band span of Marker 1
Notes	Units are those of the trace's domain, Hz for frequency domain, s for time domain. When the right edge is moved, the left edge stays anchored; thus, the marker's frequency will change.
Notes	Sending this command selects the subcoded marker  The unit of the parameter must match the current domain of the trace the selected marker is on, or an invalid suffix error will be generated. If no unit is sent the fundamental unit for the trace domain will be used (Hz for freq domain traces, s for time domain traces).  Note that all the values provided in this table are only valid for frequency domain traces. If the current domain of the trace is time domain, values and unit will be different. In frequency domain, the Preset value is dependant on the frequency range of the instrument. The default value 1.3245 GHz is appropriate only if the instrument is a 26.5 GHz instrument (Option 526). In a 26.5 GHz Instrument, the default span is 26.49 GHz, so 5% of the span corresponds to 1.3245 GHz.
Couplings	Changing the Band/Interval Right necessarily changes the Band/Interval Span and Band/Interval Center values  Band/Interval Span is set to 5% of span when any marker function is turned on if and only if it is zero at that time
Preset	If 0, Band/Interval Span is set to 5% of span, when a marker function is turned on, which affects Band/Interval Right
State Saved	Saved in Instrument State
Min	0 Hz
Max	Infinity. Unlike legacy analyzers, where the markers were forced to be on screen, X-Series marker values are not limited and do not clip

**Marker Function**

Backwards Compatibility SCPI	:CALCulate:MARKer[1] 2 3 4:X:STOP  (This legacy command was used to control the Delta marker in Delta Pair/Band Pair mode, and is aliased to the new command. For compatibility. Note that if you were using the old command for Band Power measurements it will work just fine.)
Initial S/W Revision	Prior to A.02.00

**Measure at Marker**

This key and all the keys in this menu only appear with Option EMC installed and licensed.

This key opens up a menu which contains the Measure at Marker functions. This key only appears with option EMC installed.

Key Path	<b>Marker Function</b>
Initial S/W Revision	A.02.00

**Measure at Marker**

When this key is pressed, the analyzer executes one Measure at Marker function and then returns. Measure at Marker goes to the frequency of the selected marker and takes a reading with each of the three detectors selected in the Detectors menu, using the dwell times specified there, then displays the readings in a window on the display, using the current Y-Axis Unit.

When the Measure at Marker is complete, the analyzer restores all settings to their pre-Measure-at-Marker values and normal sweeps resume.


Key Path	<b>Marker Function, Measure at Marker</b>
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNction:MAMarker?
Example	:CALC:MARK2:FUNC:MAM?  Performs a Measure at Marker function at Marker 2's current frequency and, when completed, returns the results of the measure at marker window in a query

Notes	<p>This query command returns comma separated values for the 3 specified detectors and the frequency value of the marker. If a Detector is off or if no measurement has yet completed, -999.0 will be returned. This can happen, for example, if you are operating with too large a value of (span/sweep points) and the Measure at Marker function does not execute but instead puts up the advisory message, “Span per point too large, narrow span or increase RBW or number of points” (see below).</p> <p>The size of the return data array is fixed at 4. The elements are:</p> <ol style="list-style-type: none"> <li>1. Detector 1 value ( if off, -999.0 for backwards compatibility)</li> <li>2. Detector 2 value ( if off, -999.0 for backwards compatibility)</li> <li>3. Detector 3 value ( if off, -999.0 for backwards compatibility)</li> <li>4. Frequency of Marker</li> </ol> <p>If a sweep is in process when this function executes it aborts, and restarts after the function is complete.</p> <p>This command is not backwards compatible with the E7400 and PSA option 239 so the Backwards Compatibility command is included.</p>
Dependencies	<p>If <b>BW &amp; Avg Type</b> is in Autocoupled state, the (up to three) measurements taken by Measure at Marker are taken with Auto Coupled settings for the functions in the BW menu, even if those functions are in manual.</p>
Couplings	<p>If the specified Marker is not on, the analyzer turns it on at center of screen and does a peak search before performing the function.</p>
Status Bits/OPC dependencies	<p>OPC goes true when the measurement is complete</p>
Backwards Compatibility SCPI	<p>:MEASure:EMI:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12?</p> <p>(Performs a Measure at Marker function at specified marker’s current frequency and returns the results)</p>
Initial S/W Revision	<p>A.02.00</p>

Measure at Marker presents its information in a separate window which normally appears in the upper right of the display but can be repositioned to the upper left.

## Common Measurement Functions

### Marker Function

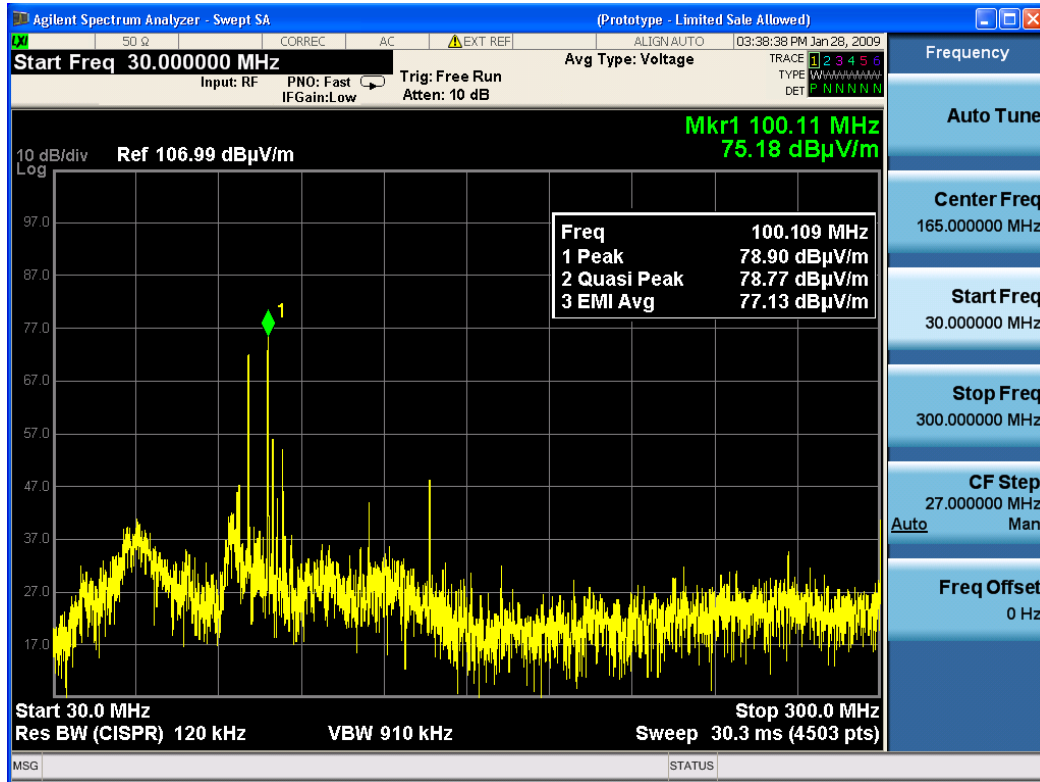

The Measure at Marker box shows the detector name for the selected detectors and “Off” for those not selected. The names used are:

Name	Detector
Normal	Normal
Peak	Peak
Sample	Sample
Neg Peak	Negative Peak
RMS	Average detector with Power Average (RMS)
Log Avg	Average detector with Log-Pwr Average
VoltageAvg	Average detector with Voltage Average
Quasi Peak	Quasi Peak
EMI Avg	EMI Average
RMS Avg	RMS Average

The marker frequency is shown in the “Freq” field. The measured value is shown for all detectors except those that are “Off.” For these, --- is displayed. The current Y-Axis unit is used, and the precision that is used for the detector value displays is exactly the same as for the Marker. The precision used for the Frequency display is six significant digits.

The sequence of steps in the measurement is as follows:

- Any sweep in progress is aborted.
- If in Zero Span, the Center Frequency is used as the frequency at which to take the reading, since in Zero Span, all markers are by definition at the Center Frequency
- If not in Zero Span:
  - If the selected marker is Off, it is first turned on in the center of the screen and a peak search performed.
  - If the selected marker is on, but offscreen, it is first moved to the center of the screen and a peak search performed. .
  - A frequency “zoom” function is performed to determine the frequency of the selected marker to the required precision. If you are operating with too large a value of (span/sweep points) then the Measure at Marker window will not display, but instead an advisory message, “Span per point too large, narrow span or increase RBW or number of points”. This means you have chosen a combination of RBW, span and sweep points that makes each trace point much wider than the RBW, so that the trace point in which the signal appears is an inadequately precise measure of its frequency—for example, with a 30 MHz to 1000 MHz span, 601 trace points and 120 kHz RBW, each trace point is 13 times as wide as the RBW. In this case, a SCPI query of the results will yield –999 dBm for each detector.
  - If the zoom is successful, the analyzer goes to zero span at this frequency
- Each detector is then read in successive single-point zero span sweeps, using a sweep time equal to the specified dwell time. The value displayed by Measure at Marker represents the maximum value output by the detector during the dwell time Autocoupled bandwidth and average type settings are used for each detector unless the **BW & Avg Type** key is set to **As Set**, in which case the current bandwidth and average type settings are used.
- Each result is then displayed in the measure at marker window as it becomes available.
- The analyzer returns to its pre-Measure at Marker span and settings after executing a Measure at Marker function, including Bandwidth, Avg Type, and EMC Std - regardless of the setting of **BW & Avg Type**
- Finally, if the sweep had to be aborted, the aborted sweep is restarted.

While the function is executing, all the fields except Freq show --- for their values until the measurement is complete for that detector. As each detector is read, an informational message is displayed in the status line, for example,

Measuring with detector 1 (Peak) with RBW=120 kHz

After the last detector, the status line is cleared.

**Meas at Marker Window**

This key opens a menu which controls the Measure at Marker window.

Key Path	Marker Function, Measure at Marker
Readback	In square brackets, the state of the window then the window position, separated by commas, as [On, Left]

Common Measurement Functions  
**Marker Function**

Initial S/W Revision	A.02.00
----------------------	---------

**Window On/Off** This key turns the Measure at Marker window on and off. It turns on automatically when Measure at Marker is initiated and turns off on a Preset. If the Window is turned on without a Measure at Marker result, --- is displayed for each result for which the detector is not “Off”.

Key Path	<b>Marker Function, Measure at Marker, Meas at Marker Window</b>
<b>Remote Command</b>	:DISPlay:WINDow:MAMarker[:STATE] ON OFF 1 0 :DISPlay:WINDow:MAMarker[:STATE]?
Example	:DISP:WIND:MAM ON
Couplings	The window turns on automatically when Measure at Marker is initiated and turns off on a Preset.
Preset	Off
State Saved	Saved in state
Readback Text	On Off
Initial S/W Revision	A.02.00

**Position Left/Right** This key controls the placement of the Measure at Marker window on the display.

Key Path	<b>Marker Function, Measure at Marker, Meas at Marker Window</b>
<b>Remote Command</b>	:DISPlay:WINDow:MAMarker:POSition LEFT RIGHT :DISPlay:WINDow:MAMarker:POSition?
Example	:DISP:WIND:MAM:POS RIGH
Preset	Right
State Saved	Saved in state
Readback Text	Left Right
Initial S/W Revision	A.02.00

**Detectors**

This key opens up a menu that allows you to configure the detectors to be used for the Measure at Marker reading. Any of the analyzer’s detectors can be used for each of the three detectors, or any of the three can be turned off. The dwell time for each detector is also settable.

When performing a Meas at Marker, the dwell time settings that you select will depend on the characteristics of the emission you are measuring. The default dwell time (200 ms) should work well for typical EUT emissions, but sometimes you will encounter emissions for which the defaults are not optimal. This is especially the case for emissions that vary slowly over time or have a slow repetition rate. By lengthening the dwell times you can increase the likelihood of accurately measuring these low repetition rate signals.



When Measure at marker is activated, the receiver makes a zero span measurement for each of the (up to) three detectors selected, using the Dwell Time set for each detector. If the signal's repetition period is greater than 200 ms (the default setting), the dwell time should be increased to capture at least two and preferably more repetitions of the signal. Additionally, if you do not need or do not wish to use a detector to make a measurement, that specific detector may be turned off.

If the Measure at Marker window is being displayed, and one of the detectors is changed, any value being displayed for that detector changes to “---“ until the next successful reading from that detector.

Key Path	Marker Function, Measure at Marker,
<b>Remote Command</b>	:CALCulate:MAMarker:DETECTOR[1] 2 3 OFF NORMAL AVERAGE POSITIVE SAMPLE NEGATIVE QPEAK EAVERAGE RAVERAGE :CALCulate:MAMarker:DETECTOR[1] 2 3?
Example	:CALC:MAM:DET2 QPE Sets the detector for measure at marker detector 2 to Quasi peak :CALC:MAM:DET OFF Sets the detector for measure at marker detector 1 to Off
State Saved	Saved in state
Initial S/W Revision	A.02.00

Key Path	Marker Function, Measure at Marker,
<b>Remote Command</b>	:CALCulate:MAMarker:DETECTOR[1] 2 3:DWELL <dwell time> :CALCulate:MAMarker:DETECTOR[1] 2 3:DWELL?
Example	:CALC:MAM:DET2:DWELL 500 ms Sets the detector for measure at marker detector 2 to dwell for 500 ms
State Saved	Saved in state
Backwards Compatibility SCPI	[:SENSE]:EMI:MEASURE:DETECTOR:DWELL <dwell time> ! Sets all of the detectors dwell time to the specified amount
Initial S/W Revision	A.02.00

**Detector 1** This menu lets you select the detector to be used for Detector 1, or turn Detector 1 off. This is a 1-of-N menu that shows the normal list of detectors, but with the “Auto” key replaced by “Off”.

Key Path	Marker Function, Measure at Marker, Detectors
<b>Remote Command</b>	See “Detectors” on page 1564.

Common Measurement Functions  
**Marker Function**

Example	:CALC:MAM:DET QPE Sets the detector for measure at marker detector 1 to Quasi peak :CALC:MAM:DET OFF Sets the detector for measure at marker detector 1 to Off
Preset	Peak
State Saved	Saved in state
Readback Text	Detector name
Initial S/W Revision	A.02.00

**Detector 2** This menu lets you select the detector to be used for Detector 2, or turn Detector 2 off. This is a 1-of-N menu that shows the normal list of detectors, but with the “Auto” key replaced by “Off”.

Key Path	<b>Marker Function, Measure at Marker, Detectors</b>
Remote Command	See “Detectors” on page 1564.
Example	:CALC:MAM:DET2 QPE Sets the detector for measure at marker detector 2 to Quasi peak :CALC:MAM:DET2 OFF Sets the detector for measure at marker detector 2 to Off
Preset	Quasi Peak
State Saved	Saved in state
Readback Text	Detector name
Backwards Compatibility SCPI	[[:SENSe]:EMI:MEASure:DETEctor:QPEak[:STATe] OFF ON 0 1] ! If sent with On as a parameter, sets detector 2 to Quasi Peak ! If sent with Off as a parameter, sets detector 2 to Off
Initial S/W Revision	A.02.00

**Detector 3** This menu lets you select the detector to be used for Detector 3, or turn Detector 3 off. This is a 1-of-N menu that shows the normal list of detectors, but with the “Auto” key replaced by “Off”.

Key Path	<b>Marker Function, Measure at Marker, Detectors</b>
Remote Command	See “Detectors” on page 1564.
Example	:CALC:MAM:DET3 QPE Sets the detector for measure at marker detector 1 to Quasi peak :CALC:MAM:DET3 OFF Sets the detector for measure at marker detector 1 to Off
Preset	EMI Average

State Saved	Saved in state
Readback Text	Detector name
Backwards Compatibility SCPI	[:SENSe]:EMI:MEASure:DETEctor:AVERage[:STATe] OFF ON 0 1  ! If sent with On as a parameter, sets detector 3 to EMI Average ! If sent with Off as a parameter, sets detector 3 to Off
Initial S/W Revision	A.02.00

**Detector 1 Dwell Time** This is the time specified by the user to dwell while taking the measurement for detector 1. The minimum allowed dwell time is based on the current detector. If “Off” is selected for detector 1, this key is grayed out and shows 200 ms.

Key Path	<b>Marker Function, Measure at Marker, Detectors</b>
<b>Remote Command</b>	See “ <a href="#">Detectors</a> ” on page 1564.
Example	:CALC:MAM:DET:DWEL 400 ms Sets the dwell time for detector 1 to 400 ms
Preset	200 ms
State Saved	Saved in state
Min	1 ms
Max	60 s
Default Unit	s
Initial S/W Revision	A.02.00

**Detector 2 Dwell Time** This is the time specified by the user to dwell while taking the measurement for detector 2. The minimum allowed dwell time is based on the current detector. If “Off” is selected for detector 2, this key is grayed out and shows 200 ms.

Key Path	<b>Marker Function, Measure at Marker, Detectors</b>
<b>Remote Command</b>	See “ <a href="#">Detectors</a> ” on page 1564.
Example	:CALC:MAM:DET2:DWEL 400 ms Sets the dwell time for detector 2 to 400 ms
Preset	200 ms
State Saved	Saved in state
Min	1 ms
Max	60 s
Default Unit	s
Initial S/W Revision	A.02.00

**Detector 3 Dwell Time** This is the time specified by the user to dwell while taking the measurement for detector 3. The minimum allowed dwell time is based on the current detector. If “Off” is selected for detector 3, this key is grayed out and shows 200 ms.

Key Path	Marker Function, Measure at Marker, Detectors
<b>Remote Command</b>	See “Detectors” on page 1564.
Example	:CALC:MAM:DET3:DWEL 400 ms Sets the dwell time for detector 1 to 400 ms
Preset	200 ms
State Saved	Saved in state
Min	1 ms
Max	60 s
Default Unit	s
Initial S/W Revision	A.02.00

### **BW & Avg Type**

This key controls the type of bandwidth and average type coupling used in Measure at Marker.

If set to “Autocoupled”, then the RBW and Average Type are selected by the instrument during the Measure at Marker function, according to the normal Autocouple rules, regardless of whether RBW and Average Type are currently in Auto. If set to “As Set”, then the current value for RBW and Average Type are used (which of course, could also be “Auto”).

Here are the details of the two modes:

If **BW & Avg Type** is set to **Autocoupled**, **Measure at Marker** behaves as follows:

- 1) The **EMC Std** changes to CISPR if any of the CISPR detectors (EMI Avg, RMS Avg, QPD) becomes selected; for all other detectors, the value of **EMC Std** that existed before Measure at Marker is used.
- 2) **RBW** autocouples throughout Measure at Marker, even if **RBW** is set to **Manual**. The autocouple rules are based on whatever the instantaneous setting of EMC Std, Span, and Center Freq are.

If **BW & Avg Type** is set to **As Set**, **Measure at Marker** behaves as follows:

- 1) The **EMC Std** never changes; so if it is set to **None** it stays at **None** throughout, even if one of the CISPR detectors is selected.
- 2) If **RBW** is set to **Auto**, then **RBW** autocouples throughout Measure at Marker. The autocouple rules are based on whatever the setting of EMC Std, Span, and Center Freq are.
- 3) If **RBW** is set to **Manual**, the RBW never changes at all throughout Measure at Marker, it stays at the value to which it was set before Measure at Marker began.

The analyzer returns to its pre-Measure at Marker span and settings after executing a Measure at Marker function, including Bandwidth, Avg Type, and EMC Std.

It is important to note that, when RBW is coupled to Frequency, as it is when **EMC Std** is anything but

“None”, for all EMI measurements, the frequency it is coupled to for Measure at Marker is the MARKER frequency, not the Center Frequency.

Key Path	<b>Marker Function, Measure at Marker</b>
<b>Remote Command</b>	:CALCulate:MAMarker:COUpling ON OFF 1 0 :CALCulate:MAMarker:COUpling?
Example	:CALC:MAM:COUP ON
Preset	Autocoupled
State Saved	Saved in state
Readback Text	Autocoupled As Set
Initial S/W Revision	A.02.00

**Center Presel On/Off**

This key controls the automatic centering of the preselector for the Measure at Marker function.

When Center Presel is On, the first step in performing the Measure at Marker function is to perform a Presel Center. This is not performed if the microwave preselector is off, or the selected marker’s frequency is below Band 1. If the function is not performed, no message is generated.

<b>Remote Command</b>	:CALCulate:MAMarker:PCENter ON OFF 1 0 :CALCulate:MAMarker:PCENter?
Example	:CALC:MAM:PCEN ON
Initial S/W Revision	A.02.00
Key Path	<b>Marker Function, Measure at Marker</b>
Dependencies	Blank in models that do not include a preselector, such as option 503. If the SCPI is sent in these instruments, it is accepted without error, and the query always returns 0.
Preset	On
Backwards Compatibility SCPI	[:SENSe]:EMI:MEASure:PCENter[:STATe] OFF ON 0 1 [:SENSe]:EMI:MEASure:PCENter[:STATe]?



## Marker To

The Marker -> key accesses menu keys that can copy the current marker value into other instrument parameters (for example, Center Freq). The currently selected marker is made the active function on entry to this menu (if the currently selected marker is not on when you press this front panel key, it will be turned on at the center of the screen as a normal type marker and then made the active function).

The **Marker ->** (or Marker To) feature is used to quickly assign a marker's x- or y-axis value to another parameter. For example, if a marker's x-axis value is 500 MHz and y-axis value is -20 dBm, pressing **Mkr -> CF** would assign 500 MHz to **Center Freq** and pressing **Mkr ->Ref Lvl** would assign -20 dBm to **Ref Level**.

Notes	All Marker To functions executed from the front panel use the selected marker's values, while all Marker To remote commands specify in the command which marker's value to use.  Consistent with other remote marker commands, sending a Marker To remote command will never change which marker is selected.
Initial S/W Revision	Prior to A.02.00

### Mkr->CF

Sets the center frequency of the analyzer to the frequency of the selected marker. The marker stays at this frequency, so it moves to the center of the display. In delta marker mode, this function sets the center frequency to the x-axis value of the delta marker. When the frequency scale is in log mode, the center frequency is not at the center of the display.

If the currently selected marker is not on when this key is pressed, it will be turned on at the center of the screen as a normal type marker.

Key Path	<b>Marker -&gt;</b>
Remote Command	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:CENTer
Example	CALC:MARK2:CENT sets the CF of the analyzer to the value of marker 2.
Notes	Sending this command selects the subcoded marker  If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.
Dependencies	This function is not available (key is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Center Frequency apply (see the Frequency Section).
Initial S/W Revision	Prior to A.02.00

**Mkr->CF Step**

Sets the center frequency (CF) step size of the analyzer to the marker frequency, or in a delta-marker mode, to the frequency difference between the delta and reference markers.

If the currently selected marker is not on when this key is pressed, it will be turned on at the center of the screen as a normal type marker.

Key Path	Marker ->
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:STEP
Example	CALC:MARK1:STEP sets the CF step to the value (or delta value) of marker 1.
Notes	Sending this command selects the subopcoded marker If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.
Dependencies	This function is not available (key is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting CF Step apply (see the Frequency Section).
Initial S/W Revision	Prior to A.02.00

**Mkr->Start**

Changes the start frequency to the frequency of the selected marker. The marker stays at this frequency, so it moves to the left edge of the display. In delta marker mode, this function sets the start frequency to the x-axis value of the delta marker.

If the currently selected marker is not on when this key is pressed, it will be turned on at the center of the screen as a normal type marker.

Key Path	Marker ->
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:STARt
Example	CALC:MARK1:STAR sets the start frequency to the value (or delta value) of marker 1.
Notes	Sending this command selects the subopcoded marker If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.
Dependencies	This function is not available (key is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Start Frequency apply (see the Frequency Section).



Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Mkr->Stop

Changes the stop frequency to the frequency of the selected marker. The marker stays at this frequency, so it moves to the right edge of the display. In delta marker mode, this function sets the stop frequency to the x-axis value of the delta marker.

If the currently selected marker is not on when this key is pressed, it will be turned on at the center of the screen as a normal type marker.

Key Path	<b>Marker -&gt;</b>
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:STOP
Example	CALC:MARK3:STOP sets the stop frequency to the value (or delta value) of marker 3.
Notes	Sending this command selects the subopcoded marker If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.
Dependencies	This function is not available (key is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Stop Frequency apply (see the Frequency Section).
Initial S/W Revision	Prior to A.02.00

### MkrΔ->Span

Sets the start and stop frequencies to the values of the delta markers. That is, it moves the lower of the two marker frequencies to the start frequency and the higher of the two marker frequencies to the stop frequency. The marker mode is unchanged and the two markers (delta and reference) end up on opposite edges of the display.

Key Path	<b>Marker -&gt;</b>
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:DEL Ta:SPAN
Example	CALC:MARK2:DELT:SPAN sets the start and stop frequencies to the values of marker 2 and its reference marker.
Notes	Sending this command selects the subopcoded marker
Dependencies	This function is only available when the selected marker is a delta marker. Otherwise the key is grayed out.  In addition, this function is not available when x-axis is the time domain

## Marker To

Couplings	All the usual couplings associated with setting Span apply (see the Section “SPAN X Scale” on page 1681”).
Backwards Compatibility SCPI	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:SPAN
Initial S/W Revision	Prior to A.02.00

**MkrΔ->CF**

Sets the center frequency to the frequency difference between the selected marker and its reference marker. The marker is then changed to a Normal marker and placed at the center of span.

Key Path	<b>Marker -&gt;</b>
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:DEL Ta:CENTer
Example	CALC:MARK2:CENT sets the CF of the analyzer to the value of marker 2.
Notes	Sending this command selects the subopcoded marker
Dependencies	This function is only available when the selected marker is a delta marker. Otherwise the key is grayed out.  In addition, this function is not available when x-axis is the time domain
Initial S/W Revision	Prior to A.02.00

**Mkr->Ref Lvl**

Sets the reference level to the amplitude value of the selected marker, moving the marked point to the reference level (top line of the graticule). The marker’s mode (Normal, Delta, Fixed) doesn’t matter in this case. For example, given a delta marker, if the delta marker is the selected marker, its amplitude is applied to the reference level. If the reference marker is selected, its amplitude is applied to the reference level.

If the currently selected marker is not on when this key is pressed, it will be turned on at the center of the screen as a normal type marker, and its amplitude applied to the reference level.

Key Path	<b>Marker -&gt;</b>
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:RLE Vel
Example	CALC:MARK2:RLEV sets the reference level of the analyzer to the amplitude of marker 2.
Notes	Sending this command selects the subopcoded marker  If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.
Couplings	All the usual couplings associated with setting Reference Level apply.
Initial S/W Revision	Prior to A.02.00

## Meas

The information in this section is common to all measurements. For key and remote command information for a specific measurement, refer to the section that describes the measurement of interest.

Measurements available under the Meas key are specific to the current Mode.

When viewing Help for measurements, note the following:

**NOTE** Operation for some keys differs between measurements. The information displayed in Help pertains to the current measurement. To see how a key operates in a different measurement, exit Help (press the Cancel Esc key), select the measurement, then reenter Help (press the Help key) and press that key.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Remote Measurement Functions

This section contains the following topics:

[“Measurement Group of Commands” on page 1576](#)

[“Current Measurement Query \(Remote Command Only\) ” on page 1578](#)

[“Limit Test Current Results \(Remote Command Only\)” on page 1579](#)

[“Data Query \(Remote Command Only\)” on page 1579](#)

[“Calculate/Compress Trace Data Query \(Remote Command Only\)” on page 1579](#)


[“Calculate Peaks of Trace Data \(Remote Command Only\)” on page 1585](#)

[“Format Data: Numeric Data \(Remote Command Only\)” on page 1586](#)

[“Format Data: Byte Order \(Remote Command Only\)” on page 1588](#)

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

## Measurement Group of Commands

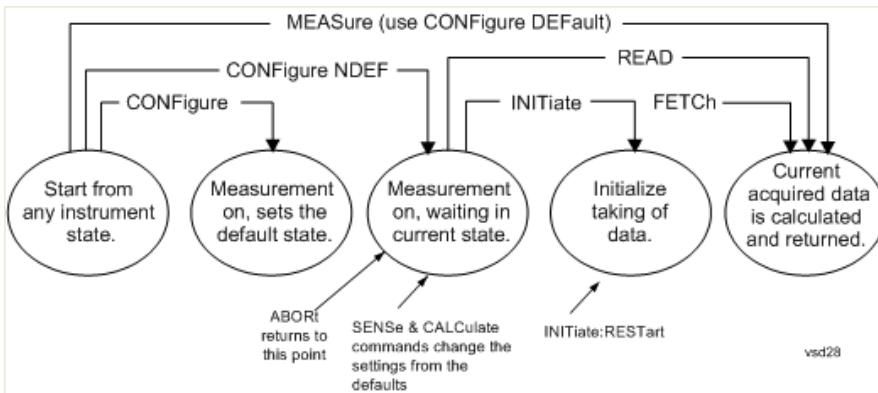**Measure Commands:****:MEASure:<measurement>[n]?**

This is a fast single-command way to make a measurement using the factory default instrument settings. These are the settings and units that conform to the Mode Setup settings (e.g. radio standard) that you have currently selected.

- Stops the current measurement (if any) and sets up the instrument for the specified measurement using the factory defaults
- Initiates the data acquisition for the measurement
- Blocks other SCPI communication, waiting until the measurement is complete before returning results.
- If the function does averaging, it is turned on and the number of averages is set to 10.
- After the data is valid it returns the scalar results, or the trace data, for the specified measurement. The type of data returned may be defined by an [n] value that is sent with the command.

The scalar measurement results will be returned if the optional [n] value is not included, or is set to 1. If the [n] value is set to a value other than 1, the selected trace data results will be returned. See each command for details of what types of scalar results or trace data results are available.

ASCII is the default format for the data output. (Older versions of Spectrum Analysis and Phase Noise mode measurements only use ASCII.) The binary data formats should be used for handling large blocks of data since they are smaller and faster than the ASCII format. Refer to the FORMat:DATA command for more information.

If you need to change some of the measurement parameters from the factory default settings you can set up the measurement with the CONFigure command. Use the commands in the SENSe:<measurement> and CALCulate:<measurement> subsystems to change the settings. Then you can use the READ? command to initiate the measurement and query the results.

If you need to repeatedly make a given measurement with settings other than the factory defaults, you can use the commands in the SENSe:<measurement> and CALCulate:<measurement> subsystems to set up the measurement. Then use the READ? command to initiate the measurement and query results.

Measurement settings persist if you initiate a different measurement and then return to a previous one. Use READ:<measurement>? if you want to use those persistent settings. If you want to go back to the default settings, use MEASure:<measurement>?.

**Configure Commands:**

**:CONFigure:<measurement>**

This command stops the current measurement (if any) and sets up the instrument for the specified measurement using the factory default instrument settings. It does not initiate the taking of measurement data unless INIT:CONTinuous is ON. If you change any measurement settings after using the CONFigure command, the READ command can be used to initiate a measurement without changing the settings back to their defaults.

In the Swept SA measurement in Spectrum Analyzer mode the CONFigure command also turns the averaging function on and sets the number of averages to 10 for all measurements.

**:CONFigure:NDEFault<measurement>** stops the current measurement and changes to the specified measurement. It does not change the settings to the defaults. It does not initiate the taking of measurement data unless INIT:CONTinuous is ON.

The **CONFigure?** query returns the current measurement name.

The **CONFigure:CATalog?** query returns a quoted string of all measurement names in the current mode. For example, "SAN, CHP, OBW, ACP, PST, TXP, SPUR, SEM, LIST".

**Fetch Commands:**

**:FETCh:<measurement>[n]?**

This command puts selected data from the most recent measurement into the output buffer. Use FETCh if you have already made a good measurement and you want to return several types of data (different [n] values, for example, both scalars and trace data) from a single measurement. FETCh saves you the time of re-making the measurement. You can only FETCh results from the measurement that is currently active, it will not change to a different measurement. An error is reported if a measurement other than the current one, is specified.

If you need to get new measurement data, use the READ command, which is equivalent to an INITiate followed by a FETCh.

The scalar measurement results will be returned if the optional [n] value is not included, or is set to 1. If the [n] value is set to a value other than 1, the selected trace data results will be returned. See each command for details of what types of scalar results or trace data results are available. The binary data formats should be used for handling large blocks of data since they are smaller and transfer faster than the ASCII format. (FORMat:DATA)

FETCh may be used to return results other than those specified with the original READ or MEASure command that you sent.

**INITiate Commands:**

**:INITiate:<measurement>**

This command is not available for measurements in all the instrument modes:

- Initiates a trigger cycle for the specified measurement, but does not output any data. You must then use the FETCh<meas> command to return data. If a measurement other than the current one is specified, the instrument will switch to that measurement and then initiate it.
- For example, suppose you have previously initiated the ACP measurement, but now you are running the channel power measurement. If you send INIT:ACP? it will change from channel power to ACP and will initiate an ACP measurement.
- Does not change any of the measurement settings. For example, if you have previously started the ACP measurement and you send INIT:ACP? it will initiate a new ACP measurement using the same instrument settings as the last time ACP was run.
- If your selected measurement is currently active (in the idle state) it triggers the measurement, assuming the trigger conditions are met. Then it completes one trigger cycle. Depending upon the measurement and the number of averages, there may be multiple data acquisitions, with multiple trigger events, for one full trigger cycle. It also holds off additional commands on GPIB until the acquisition is complete.

**READ Commands:**

**:READ:<measurement>[n]?**

- Does not preset the measurement to the factory default settings. For example, if you have previously initiated the ACP measurement and you send READ:ACP? it will initiate a new measurement using the same instrument settings.
- Initiates the measurement and puts valid data into the output buffer. If a measurement other than the current one is specified, the instrument will switch to that measurement before it initiates the measurement and returns results.

For example, suppose you have previously initiated the ACP measurement, but now you are running the channel power measurement. Then you send READ:ACP? It will change from channel power back to ACP and, using the previous ACP settings, will initiate the measurement and return results.

- Blocks other SCPI communication, waiting until the measurement is complete before returning the results

If the optional [n] value is not included, or is set to 1, the scalar measurement results will be returned. If the [n] value is set to a value other than 1, the selected trace data results will be returned. See each command for details of what types of scalar results or trace data results are available. The binary data formats should be used when handling large blocks of data since they are smaller and faster than the ASCII format.

(FORMat:DATA)

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**Current Measurement Query (Remote Command Only)**

This command returns the name of the measurement that is currently running.

<b>Remote Command:</b>	:CONFigure?
Example:	CONF?

Initial S/W Revision:	Prior to A.02.00
-----------------------	------------------

### Limit Test Current Results (Remote Command Only)

Queries the status of the current measurement limit testing. It returns a 0 if the measured results pass when compared with the current limits. It returns a 1 if the measured results fail any limit tests.

<b>Remote Command:</b>	:CALCulate:CLIMits:FAIL?
Example:	CALC:CLIM:FAIL? queries the current measurement to see if it fails the defined limits.  Returns a 0 or 1: 0 it passes, 1 it fails.
Initial S/W Revision:	Prior to A.02.00

### Data Query (Remote Command Only)

Returns the designated measurement data for the currently selected measurement and subopcode.

n = any valid subopcode for the current measurement. See the measurement command results table for your current measurement, for information about what data is returned for the subopcodes.

This command uses the data setting specified by the FORMat:BORDER and FORMat:DATA commands and can return real or ASCII data. (See the format command descriptions under Input/Output in the Analyzer Setup section.)

<b>Remote Command:</b>	:CALCulate:DATA[n]?
Notes:	The return trace depends on the measurement.  In CALCulate:<meas>:DATA[n], n is any valid subopcode for the current measurement. It returns the same data as the FETCh:<measurement>? query where <measurement> is the current measurement.
Initial S/W Revision:	Prior to A.02.00

### Calculate/Compress Trace Data Query (Remote Command Only)

Returns compressed data for the currently selected measurement and subopcode [n].

n = any valid sub-opcode for that measurement. See the MEASure:<measurement>? command description of your specific measurement for information on the data that can be returned.

The data is returned in the current Y Axis Unit of the analyzer. The command is used with a sub-opcode <n> (default=1) to specify the trace. With trace queries, it is best if the analyzer is not sweeping during the query. Therefore, it is generally advisable to be in Single Sweep, or Update=Off.

This command is used to compress or decimate a long trace to extract and return only the desired data. A typical example would be to acquire N frames of GSM data and return the mean power of the first burst

Common Measurement Functions  
**Meas**

in each frame. The command can also be used to identify the best curve fit for the data.

<b>Remote Command:</b>	:CALCulate:DATA<n>:COMPRESS? BLOCk CFIT MAXimum MINimum MEAN DMEan RMS RMSCubed SAMP le SDEVIation PPHase [, <soffset> [, <length> [, <roffset> [, <rlimit> ]]]]
Notes:	The command supports 5 parameters. Note that the last 4 (<soffset>, <length>, <roffset>, <rlimit>) are optional. But these optional parameters must be entered in the specified order. For example, if you want to specify <length>, then you must also specify <soffset>. See details below for a definition of each of these parameters.  This command uses the data in the format specified by FORMat:DATA, returning either binary or ASCII data.
Example:	To query the mean power of a set of GSM bursts:  Supply a signal that is a set of GSM bursts.  Select the IQ Waveform measurement (in IQ Analyzer Mode).  Set the sweep time to acquire at least one burst.  Set the triggers such that acquisition happens at a known position relative to a burst.  Then query the mean burst levels using, CALC:DATA2:COMP? MEAN,24e-6,526e-6 (These parameter values correspond to GSM signals, where 526e-6 is the length of the burst in the slot and you just want 1 burst.)
Initial S/W Revision:	Prior to A.02.00

- BLOCk or block data - returns all the data points from the region of the trace data that you specify. For example, it could be used to return the data points of an input signal over several timeslots, excluding the portions of the trace data that you do not want. (This is x,y pairs for trace data and I,Q pairs for complex data.)
- CFIT or curve fit - applies curve fitting routines to the data. <soffset> and <length> are required to define the data that you want. <roffset> is an optional parameter for the desired order of the curve equation. The query will return the following values: the x-offset (in seconds) and the curve coefficients ((order + 1) values).

MIN, MAX, MEAN, DME, RMS, RMSC, SAMP, SDEV and PPH return one data value for each specified region (or <length>) of trace data, for as many regions as possible until you run out of trace data (using <roffset> to specify regions). Or they return the number of regions you specify (using <rlimit>) ignoring any data beyond that.

- MINimum - returns the minimum data point (x,y pair) for the specified region(s) of trace data. For I/Q trace data, the minimum magnitude of the I/Q pairs is returned.
- MAXimum - returns the maximum data point (x,y pair) for the specified region(s) of trace data. For I/Q trace data, the maximum magnitude of the I/Q pairs is returned.
- MEAN - returns a single value that is the arithmetic mean of the data point values (in dB/ dBm) for the specified region(s) of trace data. For I/Q trace data, the mean of the magnitudes of the I/Q pairs is



returned. See the following equations.

**NOTE** If the original trace data is in dB, this function returns the arithmetic mean of those log values, not log of the mean power which is a more useful value. The mean of the log is the better measurement technique when measuring CW signals in the presence of noise. The mean of the power, expressed in dB, is useful in power measurements such as Channel Power. To achieve the mean of the power, use the RMS option.

**Equation 1**  
**Mean Value of Data Points for Specified Region(s)**

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i \quad \text{vsd27-1}$$

where  $X_i$  is a data point value, and  $n$  is the number of data points in the specified region(s).

**Equation 2**  
**Mean Value of I/Q Data Pairs for Specified Region(s)**

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} |X_i| \quad \text{vsd27-2}$$

where  $|X_i|$  is the magnitude of an I/Q pair, and  $n$  is the number of I/Q pairs in the specified region(s).

- DMEan - returns a single value that is the mean power (in dB/ dBm) of the data point values for the specified region(s) of trace data. See the following equation:

**Equation 3**  
**DMEan Value of Data Points for Specified Region(s)**

$$\text{DME} = 10 \times \log_{10} \left( \frac{1}{n} \sum_{X_i \in \text{region}(s)} 10^{\frac{X_i}{10}} \right) \quad \text{vsd27-3}$$

- RMS - returns a single value that is the average power on a root-mean-squared voltage scale (arithmetic rms) of the data point values for the specified region(s) of trace data. See the following equation.

For I/Q trace data, the rms of the magnitudes of the I/Q pairs is returned. See the following equation.

---

**NOTE** This function is very useful for I/Q trace data. However, if the original trace data is in dB, this function returns the rms of the log values which is not usually needed.

---

**Equation 4**  
**RMS Value of Data Points for Specified Region(s)**

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i^2} \quad \text{vsd27-4}$$

where  $X_i$  is a data point value, and  $n$  is the number of data points in the specified region(s).

**Equation 5**  
**RMS Value of I/Q Data Pairs for Specified Region(s)**

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i X_i^*} \quad \text{vsd27-5}$$

where  $X_i$  is the complex value representation of an I/Q pair,  $X_i^*$  its conjugate complex number, and  $n$  is the number of I/Q pairs in the specified region(s).

Once you have the rms value for a region of trace data (linear or I/Q), you may want to calculate the mean power. You must convert this rms value (peak volts) to power in dBm:

$$10 \times \log[10 \times (\text{rms value})^2]$$

- **SAMPLE** - returns the first data value (x,y pair) for the specified region(s) of trace data. For I/Q trace data, the first I/Q pair is returned.
- **SDEVIATION** - returns a single value that is the arithmetic standard deviation for the data point values for the specified region(s) of trace data. See the following equation.

For I/Q trace data, the standard deviation of the magnitudes of the I/Q pairs is returned. See the following equation.

**Equation 6**  
**Standard Deviation of Data Point Values for Specified Region(s)**

$$\text{SDEV} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (X_i - \bar{X})^2} \quad \text{vsd27-7}$$

where  $X_i$  is a data point value,  $\bar{X}$  is the arithmetic mean of the data point values for the specified region(s), and  $n$  is the number of data points in the specified region(s).

$$\text{SDEV} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (|X_i| - \bar{X})^2}$$

vsd27-8

where  $|X_i|$  is the magnitude of an I/Q pair,  $\bar{X}$  is the mean of the magnitudes for the specified region(s), and  $n$  is the number of data points in the specified region(s).

- PPHase - returns the x,y pairs of both rms power (dBm) and arithmetic mean phase (radian) for every specified region and frequency offset (Hz). The number of pairs is defined by the specified number of regions. This parameter can be used for I/Q vector (n=0) in Waveform (time domain) measurement and all parameters are specified by data point in PPHase.

The rms power of the specified region may be expressed as:

$$\text{Power} = 10 \times \log [10 \times (\text{RMS I/Q value})] + 10.$$

The RMS I/Q value (peak volts) is:

$$\sqrt{\frac{1}{n} \sum_{X_i \in \text{region}} X_i X_i^*}$$

vsd27-9

where  $X_i$  is the complex value representation of an I/Q pair,  $X_i^*$  its conjugate complex number, and  $n$  is the number of I/Q pairs in the specified region.

The arithmetic mean phase of the specified region may be expressed as:

$$\frac{1}{n} \sum_{Y_i \in \text{region}} Y_i$$


vsd27-10

where  $Y_i$  is the unwrapped phase of I/Q pair with applying frequency correction and  $n$  is the number of I/Q pairs in the specified region.

The frequency correction is made by the frequency offset calculated by the arithmetic mean of every specified region's frequency offset. Each frequency offset is calculated by the least square method against the unwrapped phase of I/Q pair.


### Sample Trace Data - Constant Envelope

(See below for explanation of variables.)

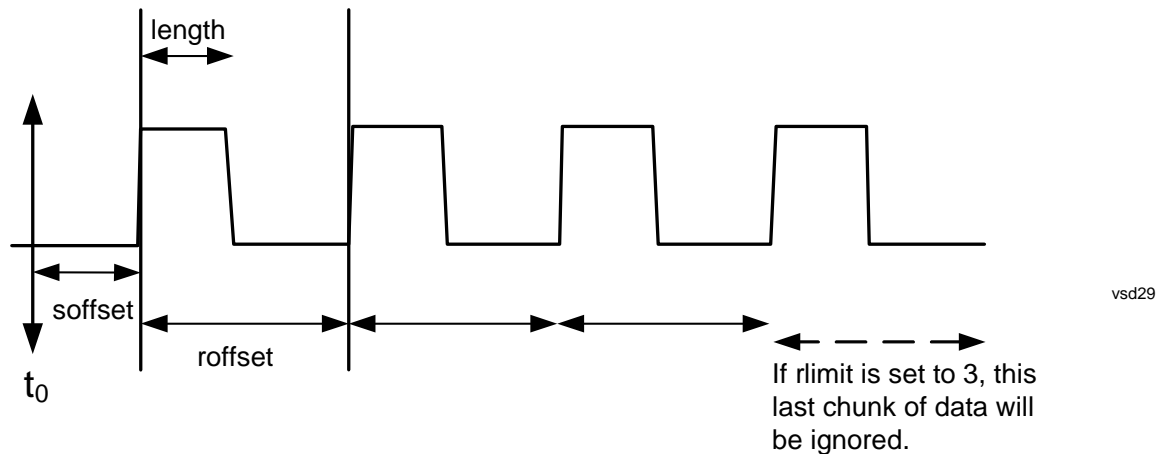

### Sample Trace Data - Not Constant Envelope

(See below for explanation of variables.)

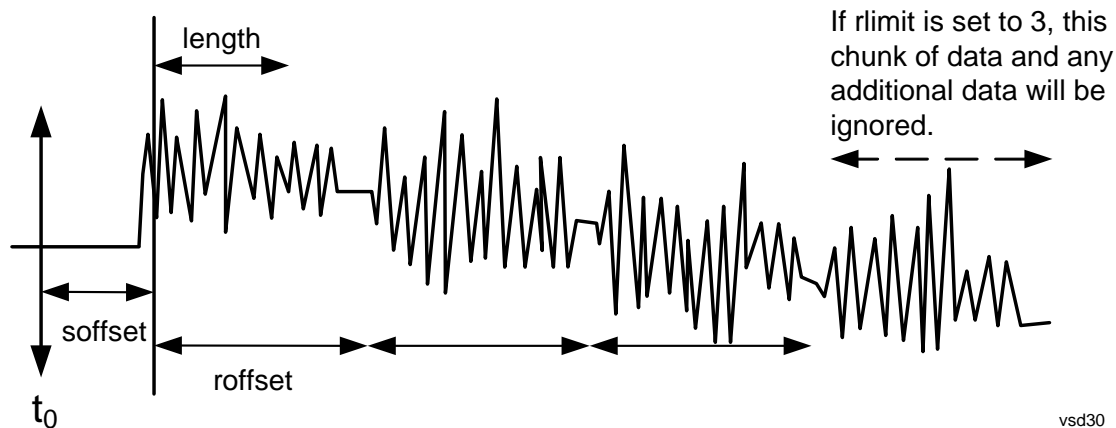

<soffset> - start offset is an optional real number. (It is in seconds for time-domain traces, and is a dimensionless index 0 to Npoints - 1, for frequency-domain traces). It specifies the amount of data at the beginning of the trace that will be ignored before the decimation process starts. It is the time or frequency change from the start of the trace to the point where you want to start using the data. The default value is zero.

<length> - is an optional real number. (It is in seconds for time-domain traces, and is a dimensionless index 0 to Npoints - 1, for frequency-domain traces). It defines how much data will be compressed into one value. This parameter has a default value equal to the current trace length.

<roffset> - repeat offset is an optional real number. (It is in seconds for time-domain traces, and is a dimensionless index 0 to Npoints - 1, for frequency-domain traces). It defines the beginning of the next field of trace elements to be compressed. This is relative to the beginning of the previous field. This parameter has a default value equal to the <length> variable. Note that this parameter is used for a completely different purpose when curve fitting (see CFIT above).

<rlimit> - repeat limit is an optional integer. It specifies the number of data items that you want returned. It will ignore any additional items beyond that number. You can use the Start offset and the Repeat limit to pick out exactly what part of the data you want to use. The default value is all the data.

**Calculate Peaks of Trace Data (Remote Command Only)**

Returns a list of all the peaks for the currently selected measurement and sub-opcode [n]. The peaks must meet the requirements of the peak threshold and excursion values.

n = any valid sub-opcode for the current measurement. See the MEASure:<measurement> command description of your specific measurement for information on the data that can be returned.

The command can only be used with specific sub-opcodes with measurement results that are trace data. Both real and complex traces can be searched, but complex traces are converted to magnitude in dBm. In many measurements the sub-opcode n=0, is the raw trace data which cannot be searched for peaks. And Sub-opcode n=1, is often calculated results values which also cannot be searched for peaks.

This command uses the data setting specified by the FORMat:BORDER and FORMat:DATA commands and can return real or ASCII data. If the format is set to INT,32, it returns REAL,32 data.

The command has four types of parameters:

- Threshold (in dBm)
- Excursion (in dB)
- Sorting order (amplitude, frequency, time)
- Optional in some measurements: Display line use (all, > display line, < display line)

<p><b>Remote Command:</b></p>	<p>For Swept SA measurement:</p> <pre>:CALCulate:DATA[1]   2   3   4   5   6 :PEAKs? &lt;threshold&gt;, &lt;excursion&gt; [, AMPLitude   FREQuency   TIME [, ALL   GTDLine   LTDLine]]</pre> <p>For most other measurements:</p> <pre>:CALCulate:DATA[1]   2   3   4   5   6 :PEAKs? &lt;threshold&gt;, &lt;excursion&gt; [, AMPLitude   FREQuency   TIME]</pre>
<p>Example:</p>	<p>Example for Swept SA measurement in Spectrum Analyzer Mode:</p> <p>CALC:DATA4:PEAK? -40,10,FREQ,GTDL This will identify the peaks of trace 4 that are above -40 dBm, with excursions of at least 10 dB. The peaks are returned in order of increasing frequency, starting with the lowest frequency. Only the peaks that are above the display line are returned.</p> <p>Query Results 1:</p> <p>With FORMat:DATA REAL,32 selected, it returns a list of floating-point numbers. The first value in the list is the number of peak points that are in the following list. A peak point consists of two values: a peak amplitude followed by its corresponding frequency (or time).</p> <p>If no peaks are found the peak list will consist of only the number of peaks, (0).</p>

<p>Notes:</p>	<p>&lt;n&gt; - is the trace that will be used</p> <p>&lt;threshold&gt; - is the level below which trace data peaks are ignored. Note that the threshold value is required and is always used as a peak criterion. To effectively disable the threshold criterion for this command, provide a substantially low threshold value such as -200 dBm. Also note that the threshold value used in this command is independent of and has no effect on the threshold value stored under the Peak Criteria menu.</p> <p>&lt;excursion&gt; - is the minimum amplitude variation (rise and fall) required for a signal to be identified as peak. Note that the excursion value is required and is always used as a peak criterion. To effectively disable the excursion criterion for this command, provide the minimum value of 0.0 dB. Also note that the excursion value used in this command is independent of and has no effect on the excursion value stored under the Peak Criteria menu.</p> <p>Values must be provided for threshold and excursion. The sorting and display line parameters are optional (defaults are AMPLitude and ALL).</p> <p>Note that there is always a Y-axis value for the display line, regardless of whether the display line state is on or off. It is the current Y-axis value of the display line which is used by this command to determine whether a peak should be reported</p> <p>Sorting order:</p> <p>AMPLitude - lists the peaks in order of descending amplitude, with the highest peak first (default if optional parameter not sent)</p> <p>FREQUENCY - lists the peaks in order of occurrence, left to right across the x-axis.</p> <p>TIME - lists the peaks in order of occurrence, left to right across the x-axis.</p> <p>Peaks vs. Display Line:</p> <p>ALL - lists all of the peaks found (default if optional parameter not sent).</p> <p>GTDLIne (greater than display line) - lists all of the peaks found above the display line.</p> <p>LTDLine (less than display line) - lists all of the peaks found below the display line.</p>
<p>Initial S/W Revision:</p>	<p>Prior to A.02.00</p>

**Format Data: Numeric Data (Remote Command Only)**

This command specifies the format of the trace data input and output. It specifies the formats used for trace data during data transfer across any remote port. It affects only the data format for setting and querying trace data for the :TRACe[:DATA], TRACe[:DATA]?, :CALCulate:DATA[n]? and FETCh:SANalyzer[n]? commands and queries.

<p><b>Remote Command:</b></p>	<p>:FORMat [:TRACe] [:DATA] ASCii   INTeger, 32   REAL, 32   REAL, 64</p> <p>:FORMat [:TRACe] [:DATA] ?</p>
-------------------------------	---

Notes:	<p>The query response is:</p> <p>ASCIi: ASC,8</p> <p>REAL,32: REAL,32</p> <p>REAL,64: REAL,64</p> <p>INTeger,32: INT,32</p> <p>When the numeric data format is REAL or ASCII, data is output in the current Y Axis unit. When the data format is INTeger, data is output in units of m dBm (.001 dBm).</p> <p>Note that the INT,32 format is only applicable to the command, TRACe:DATA. This preserves backwards compatibility for the Swept SA measurement. For all other commands/queries which honor FORMat:DATA, if INT,32 is sent the analyzer will behave as though it were set to REAL,32.</p> <p>The INT,32 format returns binary 32-bit integer values in internal units (m dBm), in a definite length block.</p>
Dependencies:	<p>Sending a data format spec with an invalid number (for example, INT,48) generates no error. The analyzer simply uses the default (8 for ASCII, 32 for INTeger, 32 for REAL).</p> <p>Sending data to the analyzer which does not conform to the current FORMat specified, results in an error.</p>
Preset:	ASCIi
Initial S/W Revision:	Prior to A.02.00

The specs for each output type follow:

ASCIi - Amplitude values are in ASCII, in the current Y Axis Unit, one ASCII character per digit, values separated by commas, each value in the form:

SX.YYYYYYEsZZ

Where:

S = sign (+ or -)

X = one digit to left of decimal point

Y = 5 digits to right of decimal point

E = E, exponent header

s = sign of exponent (+ or -)

ZZ = two digit exponent

REAL,32 - Binary 32-bit real values in the current Y Axis Unit, in a definite length block.

REAL,64 - Binary 64-bit real values in the current Y Axis Unit, in a definite length block.

**Meas**

**Format Data: Byte Order (Remote Command Only)**

This command selects the binary data byte order for data transfer and other queries. It controls whether binary data is transferred in normal or swapped mode. This command affects only the byte order for setting and querying trace data for the :TRACe[:DATA], TRACe[:DATA]? , :CALCulate:DATA[n]? and FETCh:SANalyzer[n]? commands and queries.

By definition any command that says it uses FORMat:DATA uses any format supported by FORMat:DATA.

The NORMal order is a byte sequence that begins with the most significant byte (MSB) first, and ends with the least significant byte (LSB) last in the sequence: 1|2|3|4. SWAPped order is when the byte sequence begins with the LSB first, and ends with the MSB last in the sequence: 4|3|2|1.

<b>Remote Command:</b>	:FORMat:BORDER NORMAL   SWAPped :FORMat:BORDER?
Preset:	NORMAL
Initial S/W Revision:	Prior to A.02.00



---

## Meas Setup

The Meas Setup key opens up a menu of softkeys that allow you to control the most important parameters for the current measurement.

---

**NOTE** In the Meas Setup menu you may configure Averaging, by setting the Average Number and the Average Type.

---

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

### Average/Hold Number

Sets the terminal count number N for **Average**, **Max Hold** and **Min Hold** trace types. This number is an integral part of how the average trace is calculated. Basically, increasing N results in a smoother average trace.

See [“More Information” on page 1589](#).

See [“AVER:CLE command” on page 1590](#).

Key Path	<b>Meas Setup</b>
<b>Remote Command</b>	[ :SENSe ] :AVERage:COUNT <integer> [ :SENSe ] :AVERage:COUNT?
Couplings	Restarting any of these functions ( <b>Average</b> , <b>Max Hold</b> or <b>Min Hold</b> ) restarts all of them, as there is only one count.
Preset	100
State Saved	Saved in Instrument State
Min	1
Max	10000
Status Bits/OPC dependencies	See the Section <a href="#">“Sweep/Control” on page 1687</a> for a discussion of the Sweeping, Measuring, Settling and OPC bits, and the Hi Sweep line. All are affected when a sequence is reset.
Initial S/W Revision	Prior to A.02.00

### More Information

When in **Single**, the sweep stops when N is reached. If you want to add one more Average, or one more trace to Max Hold or Min Hold, simply press the Up key while Average/Hold Number is the active function.

## Meas Setup

In **Cont** (continuous), averaging and holding continues even after N is reached. Therefore, using doing trace holding in **Cont**, the value of N is irrelevant. But for averaging, each new sweep is exponentially averaged in with a weighting equal to N.

For details of how the average trace is calculated and how this depends on the **Average/Hold Number**, see [“Average Type” on page 1590](#). For details on how the various control functions in the instrument start and restart averaging. See the Section [“Sweep/Control” on page 1687](#) for a discussion of the Sweeping, Measuring, Settling and OPC bits, and the Hi Sweep line. All are affected when a sequence is reset.

The Average/Hold Number is not affected by Auto Couple.

### AVER:CLE command

The AVER:CLE command (below) resets the average/hold count and does an INIT:IMM, which begins another set of sweeps when trigger conditions are satisfied. It only does this if an active trace is in Average or Hold type.

<b>Remote Command:</b>	[ :SENSE ] :AVERAge:CLEAr
Example:	AVER:COUN 100 AVER:CLE sets the current count (k and K) to 1 and restarts the averaging process.
Notes:	When the instrument receives this command it performs an INIT:IMM, if and only if there is an active trace in Max Hold, Min Hold, or Average type.
Default Unit:	Enter
Initial S/W Revision:	Prior to A.02.00

### Average Type

Lets you control the way averaging is done by choosing one of the following averaging scales: log-power (video), power (RMS), or voltage averaging. Also lets you choose Auto Average Type (default).

When performing Trace Averaging, , the equation that is used to calculate the averaged trace depends on the average type. See the descriptions for the keys which select each Average Type ([“Log-Pwr Avg \(Video\)” on page 1592](#)(Video), [“Pwr Avg \(RMS\)” on page 1593](#)(RMS), or [“Voltage Avg” on page 1593](#)) for details on these equations.

See [“More Information” on page 1591](#).

Key Path	Meas Setup
<b>Remote Command</b>	[ :SENSE ] :AVERAge:TYPE:AUTO OFF ON 0 1 [ :SENSE ] :AVERAge:TYPE:AUTO?
Preset	ON
State Saved	Saved in Instrument State

Readback line	1-of-N selection as Log-Pwr (Video) for Log-Pwr (Video) Avg Pwr (RMS) for Power Avg Voltagefor Voltage
Initial S/W Revision	Prior to A.02.00

<b>Remote Command:</b>	[ :SENSe] :AVERAge:TYPE RMS   LOG   SCALar [ :SENSe] :AVERAge:TYPE?
Notes:	Parameters map to avg types as: RMS = Pwr (RMS) Avg LOG = Log-Pwr (Video) Avg SCALar = Voltage Avg
Preset:	LOG
Backwards Compatibility SCPI:	[ :SENSe]:AVERAge:TYPE LINear sets Scalar averaging [ :SENSe]:AVERAge:TYPE VOLTage sets Scalar averaging [ :SENSe]:AVERAge:TYPE VIDEo sets Log-Power averaging [ :SENSe]:AVERAge:TYPE LPOWer sets Log-Power averaging [ :SENSe]:AVERAge:TYPE POWEr sets RMS averaging
Initial S/W Revision:	Prior to A.02.00

### More Information

When you select log-power averaging, the measurement results are the average of the signal level in logarithmic units (decibels). When you select power average (RMS), all measured results are converted into power units before averaging and filtering operations, and converted back to decibels for displaying. Remember: there can be significant differences between the average of the log of power and the log of the average power.

These are the averaging processes within a spectrum analyzer and all of them are affected by this setting:

Trace averaging (see Section [“Trace/Detector” on page 1715](#)) averages signal amplitudes on a trace-to-trace basis. The average type applies to all traces in Trace Average (it is not set on a trace-by-trace basis).

Average detector (see Section [“Trace/Detector” on page 1715](#)) averages signal amplitudes during the time or frequency interval represented by a particular measurement point.

Noise Marker (see Section [“Marker Function” on page 1551](#)) averages signal amplitudes across measurement points to reduce variations for noisy signals.

VBW filtering (see Section [“BW” on page 1439](#)) adds video filtering which is a form of averaging of the video signal.

When **Auto** is selected, the analyzer chooses the type of averaging (see below). When one of the average types is selected manually, the analyzer uses that type regardless of other analyzer settings, and shows

## Meas Setup

Man on the **Average Type** softkey.

### Auto

Chooses the optimum type of averaging for the current instrument measurement settings.

Key Path	<b>Meas setup, Average Type</b>
Example	AVER:TYPE:AUTO ON
Notes	See <b>Average Type</b> , above
Couplings	Here are the auto-select rules for <b>Average Type</b> : <b>Auto</b> selects <b>Voltage Averaging</b> if the Detector for any active trace is <b>EMI Average</b> or <b>QPD or RMS Average</b> ; otherwise it selects <b>Power (RMS) Averaging</b> if a <b>Marker Function (Marker Noise, Band/Intvl Power)</b> is on, or <b>Detector</b> is set to <b>Man</b> and <b>Average</b> ; otherwise if <b>Amplitude, Scale Type</b> is set to <b>Lin</b> it selects <b>Voltage Averaging</b> ; otherwise, if the EMC Standard is set to CISPR, it selects <b>Voltage</b> ; otherwise <b>Auto</b> selects <b>Log-Power Average</b> .  Note that these rules are only applied to active traces. Traces which are not updating do not impact the auto-selection of Average Type.
State Saved	Saved in Instrument State
Readback	The type auto-selected is displayed in the readback line on the <b>Average Type</b> key
Initial S/W Revision	Prior to A.02.00

### Log-Pwr Avg (Video)

Selects the logarithmic (decibel) scale for all filtering and averaging processes. This scale is sometimes called “Video” because it is the most common display and analysis scale for the video signal within a spectrum analyzer. This scale is excellent for finding CW signals near noise, but its response to noise-like signals is 2.506 dB lower than the average power of those noise signals. This is compensated for in the Marker Noise function.

The equation for trace averaging on the log-pwr scale is shown below, where K is the number of averages accumulated. (In continuous sweep mode, once K has reached the Average/Hold Number, K stays at that value, providing a continuous running average.)

$$\text{New avg} = ((K-1)\text{Old avg} + \text{New data})/K$$

Assumes all values in decibel scale.

Key Path	<b>Meas setup, Average Type</b>
Example	AVER:TYPE LOG
Notes	See “ <a href="#">“Average Type” on page 1590</a> ”
Couplings	See “ <a href="#">“Auto” on page 1592</a> ”
Readback	<b>Log-Pwr (Video)</b>

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Pwr Avg (RMS)

In this average type, all filtering and averaging processes work on the power (the square of the magnitude) of the signal, instead of its log or envelope voltage. This scale is best for measuring the true time average power of complex signals. This scale is sometimes called RMS because the resulting voltage is proportional to the square root of the mean of the square of the voltage.

In the equation for averaging on this scale (below), K is the number of averages accumulated. (In continuous sweep mode, once K has reached the Average/Hold Number, K stays at that value, providing a running average.)

$$\text{New avg} = 10 \log \left( \frac{1}{K} \left( (K-1)(10^{\text{Old avg}/10} + 10^{\text{New data}/10} \right) \right)$$

Equation assumes all values are in the decibel scale.

Key Path	<b>Meas setup, Average Type</b>
Example	AVER:TYPE RMS
Notes	See <a href="#">“Average Type” on page 1590</a>
Couplings	See <a href="#">“Auto” on page 1592</a>
Readback	<b>Pwr (RMS)</b>
Initial S/W Revision	Prior to A.02.00

### Voltage Avg

In this Average type, all filtering and averaging processes work on the voltage of the envelope of the signal. This scale is good for observing rise and fall behavior of AM or pulse-modulated signals such as radar and TDMA transmitters, but its response to noise-like signals is 1.049 dB lower than the average power of those noise signals. This is compensated for in the **Marker Noise** function.

In the equation for averaging on this scale (below), K is the number of averages accumulated. (In continuous sweep mode, once K has reached the Average/Hold Number, K stays at that value.)

$$\text{New avg} = 20 \log \left( \frac{1}{K} \left( (K-1)(10^{\text{Old avg}/20} + 10^{\text{New data}/20} \right) \right)$$

Equation assumes all values are in the decibel scale.

Key Path	<b>Meas setup, Average Type</b>
Example	AVER:TYPE SCAL
Notes	See <a href="#">“Average Type” on page 1590</a>
Couplings	See <a href="#">“Auto” on page 1592</a>
Readback	<b>Pwr (RMS)</b>
Initial S/W Revision	Prior to A.02.00

## Meas Setup

### Limits

The limits softkey opens up a menu of softkeys to control the limits for the current measurement. Limits arrays can be entered by the user, sent over SCPI, or loaded from a file.

Initial S/W Revision	A.02.00
Key Path	<b>Meas Setup</b>
Dependencies	This key will only appear if you have the proper option installed in your instrument.
Preset	Limits are turned off by a Preset, but the Limits arrays (data) are only reset (deleted) by Restore Mode Defaults. They survive shutdown and restarting of the analyzer application, which means they will survive a power cycle.

### Select Limit

Specifies the selected limit. The term “selected limit” is used throughout this document to specify which limit will be affected by the functions.

Key Path	<b>Meas Setup, Limits</b>
Notes	The selected limit is remembered even when not in the Limit Menu.
Preset	Limit 1, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in State.
Initial S/W Revision	A.02.00

### Limit On/Off

Selects whether the limit and margin are displayed. If Test Limits is on, this also determines whether the test trace (see [“Test Trace” on page 1596](#)) will be tested against the limit. If **Limit On/Off** is **On**, the following occurs:

- The limit line is displayed, in the same color as the limited trace, but paler. Portions of traces which fail the limits will be displayed in red.
- The margin line is displayed if Margin is on and the Margin Value is non-zero (see [“Margin” on page 1601](#)). The margin line is displayed in the same color as the limit line, but paler still and dashed. Portions of traces which pass the limits but fail the margin will be displayed in amber.
- The trace is tested for the purpose of the “Trace Pass/Fail” indication in the graticule if, in addition to **Limit On/Off** being **On**, the trace is displayed and **Test Limits (All Limits)** is on (see [“Test Limits” on page 1606](#)). If the trace is not tested, no report of the trace passing or failing is seen on the graticule. Note that the SCPI queries of Limit Pass/Fail are independent of these conditions; the test is always performed when queried over SCPI.

The PASS/FAIL box in the corner of the Meas Bar is only displayed if there is at least one “Trace Pass/Fail” indication displayed in the graticule.

Note that the red and amber coloring of traces which fail the limits and/or margins only applies to traces whose X-axis corresponds to the current analyzer X-axis. Traces which are not updating (in View, for

example) will not change color if the analyzer X-axis settings (eg, start and stop frequency) do not match those of the trace, for example if they have been changed since the trace stopped updating. In this case, the Invalid Data indicator (\*) will appear in the upper right hand corner.

When the limits are frequency limits but the trace is a zero-span trace, the limit trace is drawn at the limit amplitude of the center frequency. When the limits are time limits but the trace is a frequency domain trace, the limit trace is drawn according to the current time axis, with the left of the screen being 0 and the right being equal to sweep time.

Key Path	Meas Setup, Limits
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6:DISPlay OFF   ON   0   1 :CALCulate:LLINe[1]   2   3   4   5   6:DISPlay?
Example	:CALC:LLIN2:DISP ON !turns on the display for limit line 2.
Dependencies	This command will generate an “Option not available” error unless you have the proper option installed in your instrument.
Couplings	Limit display ON selects the limit. Testing is done on all displayed limits if <b>Test Limits (All Limits)</b> is ON. Entering the limit menu from the GUI turns on the selected limit.
Preset	OFF
State Saved	Saved in State.
Backwards Compatibility SCPI	:CALCulate:LLINe[1] 2:STATe OFF ON 0 1  (In the past you had to send the DISP command as well as the STATe command in order to get a limit on and testing. Now, the DISP command is sufficient, but we accept the state command and do nothing with it)
Initial S/W Revision	A.02.00

### Properties

Accesses a menu which lets you set the properties of the selected limit.

Key Path	Meas Setup, Limits
Initial S/W Revision	A.02.00

### Select Limit

Specifies the selected limit. The term “selected limit” is used throughout this document to specify which limit will be affected by the functions.

Key Path	Meas Setup, Limits, Properties
Notes	The selected limit is remembered even when not in the Limit Menu.
Preset	Limit 1, not affected by Mode Preset, preset by Restore Mode Defaults.

## Meas Setup

State Saved	Saved in State.
Initial S/W Revision	A.02.00

### Test Trace

Selects the trace you want the limit to test. A limit is applied to one and only one trace; each trace can have both an upper and a lower limit. When executing Limit Test, the limit is applied only to the specified trace.

A trace can have multiple limit lines simultaneously; in that case, only one upper and one lower limit line will affect the color of the trace. Other limit lines will be displayed, and will affect the pass/fail status, but the trace will not turn red if it crosses a secondary limit line.

Key Path	Meas Setup, Limits, Properties
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6 :TRACe 1   2   3   4   5   6 :CALCulate:LLINe[1]   2   3   4   5   6 :TRACe?
Example	:CALC:LLIN3:TRAC 2 applies limit 3 to trace 2.
Notes	When the trace display is off, the trace is not tested. The trace is tested only when the trace display is on and Test Limits (see <a href="#">“Test Limits” on page 1606</a> ) is on.
Couplings	This matters when testing a trace or limit line for failure, via :CALC:LLIN3:FAIL? or :CALC:TRAC2:FAIL?
Preset	Limits 1 and 2 preset to 1, Limits 3 and 4 preset to 2, Limits 5 and 6 preset to 3 Not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in State.
Min	1
Max	6
Readback	Trace 1 2 3 4 5 6
Initial S/W Revision	A.02.00

### Type

Selects whether the limit you are editing is an upper or lower limit. An upper limit fails if the trace exceeds the limit. A lower limit fails if the trace falls below the limit.

Key Path	Meas Setup, Limits, Properties
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6 :TYPE UPPer   LOWer :CALCulate:LLINe[1]   2   3   4   5   6 :TYPE?
Example	:CALC:LLIN2:TYPE LOW !sets limit line 2 to act as a lower limit.
Couplings	If a margin has already been set for this limit line, and this key is used to change the limit type, then the margin value will reverse sign.



Preset	Upper for Line 1, 3, and 5; Lower for Line 2, 4, 6. Not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in State.
Initial S/W Revision	A.02.00

### Interpolation

Accesses a menu which lets you set the frequency and amplitude interpolation of the selected limit.

Key Path	<b>Meas Setup, Limits, Properties</b>
Readback	[Lin Log Frequency, Lin Log Amplitude]
Initial S/W Revision	A.02.00

### Frequency Interpolation

This key is grayed out if Time is the selected X Axis Units. Sets the interpolation between frequency points, allowing you to determine how limit trace values are computed between points in a limit table. The available interpolation modes are linear and logarithmic. If frequency interpolation is logarithmic (Log), frequency values between limit points are computed by first taking the logarithm of both the table values and the intermediate value. A linear interpolation is then performed in this logarithmic frequency space. An exactly analogous manipulation is done for logarithmic amplitude interpolation.

Note that the native representation of amplitude is in dB.

For linear amplitude interpolation and linear frequency interpolation, the interpolation is computed as:

$$y = 20 \log\left(\frac{10^{\frac{y_{i+1}}{20}} - 10^{\frac{y_i}{20}}}{f_{i+1} - f_i}(f - f_i) + 10^{\frac{y_i}{20}}\right)$$

For linear amplitude interpolation and log frequency interpolation, the interpolation is computed as:

$$y = 20 \log\left(\frac{10^{\frac{y_{i+1}}{20}} - 10^{\frac{y_i}{20}}}{\log f_{i+1} - \log f_i}(\log f - \log f_i) + 10^{\frac{y_i}{20}}\right)$$

For log amplitude interpolation and linear frequency interpolation, the interpolation is computed as:

$$y = \frac{y_{i+1} - y_i}{f_{i+1} - f_i}(f - f_i) + y_i$$

For log amplitude interpolation and log frequency interpolation, the interpolation is computed as:

$$y = \frac{y_{i+1} - y_i}{\log f_{i+1} - \log f_i}(\log f - \log f_i) + y_i$$

## Meas Setup

**NOTE** Interpolation modes determine how limit values are computed between points in the limit table. The appearance of a limit trace is also affected by the amplitude scale, which may be linear or logarithmic.

Key Path	<b>Meas Setup, Limits, Properties, Interpolation</b>
Remote Command	:CALCulate:LLINe[1]   2   3   4   5   6:CONTRol:INTerpolate:TYPE LOGarithmic   LINear  :CALCulate:LLINe[1]   2   3   4   5   6:CONTRol:INTerpolate:TYPE?
Example	:CALC:LLIN:CONT:INT:TYPE LIN !sets limit line 1 frequency interpolation to linear.
Preset	Linear, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00

### Amplitude Interpolation

Sets the interpolation to linear or logarithmic for the specified limiting points set, allowing you to determine how limit trace values are computed between points in a limit table. See Frequency Interpolation for the equations used to calculate limit values between points.

Key Path	<b>Meas Setup, Limits, Properties, Interpolation</b>
Remote Command	:CALCulate:LLINe[1]   2   3   4   5   6:AMPLitude:INTerpolate:TYPE LOGarithmic   LINear  :CALCulate:LLINe[1]   2   3   4   5   6:AMPLitude:INTerpolate:TYPE?
Example	:CALC:LLIN:AMPL:INT:TYPE LIN !sets limit line 1 amplitude interpolation to linear.
Preset	Logarithmic, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00

### Fixed / Relative

Opens a menu which will allow you to specify that the selected limit is relative to either Center Frequency or Reference level.

Key Path	<b>Meas Setup, Limits, Properties</b>
Readback	Fixed Rel to CF Rel to RL Rel to CF + RL (square brackets)
Initial S/W Revision	A.02.00

**Relative to CF**

Chooses whether the limit line frequency points are coupled to the instrument center frequency, and whether the frequency points are expressed as an offset from the instrument center frequency. If the limit lines are specified with time, this has no effect. The limit table must in this case support negative frequencies.

For example, assume you have a frequency limit line, and the analyzer center frequency is at 1 GHz. If Relative to CF is “Off”, entering a limit line segment with a frequency coordinate of 300 MHz displays the limit line segment at 300 MHz, and the limit line segment will not change frequency if the center frequency changes. If Relative to CF is “On”, entering a limit line segment with a frequency coordinate of 300 MHz displays the limit line segment at CF + 300 MHz, or 1.3 GHz. Furthermore, if the center frequency changes to 2 GHz, the limit line segment will be displayed at CF + 300 MHz, or 2.3 GHz.

It is possible to change this setting after a limit line has been entered. When changing from On to Off or vice-versa, the frequency values in the limit line table change so that the limit line remains in the same position for the current frequency settings of the analyzer.

Pressing this button makes Center Frequency the active function.

Key Path	Meas Setup, Limits, Properties, Fixed/Relative
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6 :FREQuency:CMODE:RELative ON   OFF   1   0 :CALCulate:LLINe[1]   2   3   4   5   6 :FREQuency:CMODE:RELative?
Example	:CALC:LLIN:FREQ:CMOD:REL ON !makes limit line 1 relative to the center frequency.
Notes	If the Trace Domain is changed to Time (:CALCulate:LLINe:CONTRol:DOMain TIME), the SCPI command :CALCulate:LLINe[1] 2 3 4 5 6:FREQuency:CMODE:RELative ON OFF 1 0 will have no effect.
Couplings	Pressing this button makes Center Frequency the active function.
Preset	Off, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00

**Relative to RL**

Chooses whether the limit line amplitude points are coupled to the instrument reference level, and whether the amplitude points are expressed as an offset from the instrument reference level.

For example, assume you have a limit line, and the reference level at –10 dBm. If Relative to RL is “Off”, entering a limit line segment with an amplitude coordinate of –20 dB displays the limit line segment at –20 dBm, and the limit line segment will not change amplitude if the reference level amplitude changes. If Relative to RL is “On”, entering a limit line segment with an amplitude coordinate of –20 dB displays the limit line segment at RL – 20 dB, or –30 dBm. Furthermore, if the reference level amplitude changes to –30 dBm, the limit line segment will be displayed at RL – 20 dB, or –50 dBm.

It is possible to change this setting after a limit line has been entered. When changing from On to Off or vice-versa, the amplitude values in the limit line table change so that the limit line remains in the same position for the current

## Meas Setup

reference level settings of the analyzer.

Key Path	Meas Setup, Limits, Properties, Fixed/Relative
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6 :AMPLitude:CMODE:RELative ON OFF 1 0  :CALCulate:LLINe[1]   2   3   4   5   6 :AMPLitude:CMODE:RELative?
Example	:CALC:LLIN:AMPL:CMOD:REL ON !makes limit line 1 relative to the reference level amplitude.
Couplings	Pressing this button makes Reference level the active function.
Preset	Off, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00

### Description

Provides a description of up to 60 characters by which the operator can easily identify the limit. Will be stored in the exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump.

Key Path	Meas Setup, Limits, Properties
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6 :DESCRiption "Description" :CALCulate:LLINe[1]   2   3   4   5   6 :DESCRiption?
Example	:CALC:LLIN:DESC "European Emissions"
Preset	"" (null String), not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state
Readback	As much of the description will fit on one line of the key, followed by "..." if some of the description will not fit on one line of the key.
Initial S/W Revision	A.02.00

### Comment

Sets an ASCII comment field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump. The Limits .csv file supports this field.

Key Path	Meas Setup, Limits, Properties
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6 :COMMeNt "text " :CALCulate:LLINe[1]   2   3   4   5   6 :COMMeNt?
Example	:CALC:LLIN1:COMM "this is a comment"

Preset	"" (null String), not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Readback	As much of the description will fit on one line of the key, followed by "..." if some of the description will not fit on one line of the key.
Initial S/W Revision	A.02.00

### Margin

Selects a margin for this limit, which will cause a trace to Fail Margin when the trace is between the limit line and the margin line. Portions of the traces which pass the limit but fail the margin will be displayed in an amber color.

A margin is always specified in dB relative to a limit – an upper limit will always have a negative margin, and a lower limit will always have a positive margin. If a value is entered with the incorrect sign, the system will automatically take the negative of the entered value.

If the limit type is switched from lower to upper while margin is present, the margin will reverse sign.

When the Margin is selected, it may be turned off by pressing the Margin key until Off is underlined. This may also be done by performing a preset. Margin is the default active function whenever the margin is on, and it is not the active function whenever the margin is off.

The margin lines are displayed in the same color as limit lines, but paler. . If the limited trace is blanked then the limit line and the margin line will be blanked as well.

Key Path	Meas Setup, Limits
<b>Remote Command</b>	:CALCulate:LLINe[1] 2 3 4 5 6:MARGin <rel_amp1> :CALCulate:LLINe[1] 2 3 4 5 6:MARGin? :CALCulate:LLINe[1] 2 3 4 5 6:MARGin:STATe OFF ON 0 1 :CALCulate:LLINe[1] 2 3 4 5 6:MARGin:STATe?
Example	:CALC:LLIN1:MARG -2dB !sets limit line 1's margin to -2 dB (Limit Line 1 is by default an upper limit). :CALC:LLIN2:MARG 1dB !sets limit line 2's margin to 1 dB (Limit Line 2 is by default a lower limit). :CALC:LLIN2:MARG:STAT OFF !turns off the margin for limit line 2 and removes any tests associated with that margin line.
Notes	The queries "Limit Line Fail?" (:CALCulate:LLINe[1] 2 3 4 5 6:FAIL?) and "Trace Fail?" (:CALCulate:TRACe[1] 2 3 4 5 6:FAIL?) will return 1 if the margin fails.
Couplings	This will affect :CALC:LLIN3:FAIL or :CALC:TRAC2:FAIL?
Preset	not affected by Mode Preset, set to 0 dB for all Limits by Restore Mode Defaults.
State Saved	Saved in instrument state.

## Meas Setup

Min	-40 dB (Upper); 0 dB (Lower)
Max	0 dB (Upper); 40 dB (Lower);
Default Unit	dB
Initial S/W Revision	A.02.00

### Edit

Opens the Table Editor for the selected limit line.

When entering the menu, the editor window (with the limit table) turns on, the selected Limit is turned **On** and the amplitude scale is set to **Log**. The display of the trace to which the selected limit applies is turned on (thus, traces in Blank are set to View and traces in Background are set to On). Turning on the Limit means its display will be on, and its testing mode will be on as well; you should turn off any other limits that are on if they interfere with the editing of the selected limit.

---

#### NOTE

The table editor will only operate properly if the analyzer is sweeping, because its updates are tied to the sweep system. Thus, you should not try to use the editor in single sweep, and it will be sluggish during compute-intensive operations like narrow-span FFT sweeps.

---

When exiting the edit menu (by using the Return key or by pressing an instrument front panel key), the editor window turns off, however the Limit is still on and displayed, and the amplitude scale remains **Log**.

Limits are turned off by a Preset, but the Limits arrays (data) are only reset (deleted) by Restore Mode Defaults. They survive shutdown and restarting of the analyzer application, which means they will survive a power cycle.

Key Path	<b>Meas Setup, Limits</b>
Couplings	Turns the Limit Peaks table off.  A remote user can enter or access limit line data via :CALCulate:LLINE[1] 2 3 4 5 6:DATA
Initial S/W Revision	A.02.00

### Navigate

Lets you move through the table to edit the desired point

Key Path	<b>Meas Setup, Limits, Edit</b>
Notes	There is no value readback on the key
Initial S/W Revision	A.02.00

**Frequency**

Lets you edit the frequency of the current row.

Key Path	<b>Meas Setup, Limits, Edit</b>
Notes	There is no value readback on the key
Initial S/W Revision	A.02.00

**Amplitude**

Lets you edit the Amplitude of the current row.

Key Path	<b>Meas Setup, Limits, Edit</b>
Notes	There is no value readback on the key
Min	-1000 dBm
Max	1000 dBm
Initial S/W Revision	A.02.00

**Insert Point Below**

Pressing this key inserts a point below the current point. The new point is a copy of the current point. And becomes the current point. The new point is not yet entered into the underlying table, and the data in the row is displayed in LightGray.

Key Path	<b>Meas Setup, Limits, Edit</b>
Initial S/W Revision	A.02.00

**Delete Point**

This is an immediate action key. It will immediately delete the currently-selected point, whether or not that point is being edited, and select Navigate. The point following the currently-selected point (or the point preceding if there is none) will be selected.

Key Path	<b>Meas Setup, Limits, Edit</b>
Initial S/W Revision	A.02.00

**Copy from Limit**

Copies an existing limit into the current limit, including all secondary parameters (Description, Associated Trace, Type, Margin, Interpolation, Relative to CF/RL).

<b>Remote Command:</b>	:CALCulate:LLINE[1]   2   3   4   5   6 :COPY LLINE1   LLINE2   LLINE3   LLINE4   LLINE5   LLINE6
Example:	:CALC:LLINE2:COPY LLINE1 !copies the data from line 1 into line 2.

## Meas Setup

Notes:	Auto return to the Edit menu.
Initial S/W Revision:	A.02.00

### Build from Trace

Builds a limit using an existing trace. This command will overwrite all data in the limit. Since a straight copy would typically have hundreds or thousands of segments, the data will be approximated to better represent a limit line; small excursions whose width is less than 10 trace buckets will sometimes not be captured. Secondary parameters which are not associated with traces (Description, Associated Trace, Type, Margin, Interpolation, Relative to CF/RL) will be unchanged.

When taking a trace in order to build a limit, it will often work well to take the trace with a resolution bandwidth wider than the expected measurement, a video bandwidth lower than the expected measurement, and with the detector set to Max Hold or Min Hold.

Note that an upper limit will be built above the trace, while a lower limit will be built below the trace. If the trace is constant, the limit should pass after being built.

<b>Remote Command:</b>	:CALCulate:LLINe[1]   2   3   4   5   6 :BUILd TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6
Example:	:CALC:LLIN2:BUIL TRACE1 !builds limit line 2 based on the data in trace 1. This will overwrite the data in the table editor.
Notes:	Auto return to Edit menu.
Initial S/W Revision:	A.02.00

### Offset

Enters a menu which allows you to offset the limit trace by a specified frequency, time, or amplitude. The offsets will be immediately applied to the limit trace for display and failure calculation; the offset can also be applied to the points in the limit line.

Key Path	<b>Meas Setup, Limits, Edit</b>
Initial S/W Revision	A.02.00

### X Offset

Offsets the limit trace by some specified frequency (for Frequency-based limit lines) or a time (for time-based limit lines).

Key Path	<b>Meas Setup, Limits, Edit, Offset</b>
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6 :OFFSet:X <value> :CALCulate:LLINe[1]   2   3   4   5   6 :OFFSet:X? <value> = <freq> if Limit X-Axis Unit is Frequency, <value> = <time> if Limit X-Axis Unit is Time



Example	:CALC:LLIN:OFFS:X -50MHZ !sets the X axis offset to -50 MHz. :CALC:LLIN:OFFS:UPD !will apply the X axis offset to all points in the limit line, then reset the X axis offset to zero.
Preset	0 Hz if Limit X-Axis Unit is Frequency 0 S if Limit X-Axis Unit is Time
State Saved	Saved in State, survives Preset
Min	-500 GHz
Max	500 GHz
Default Unit	Determined by X axis scale.
Initial S/W Revision	A.02.00

**Y Offset**

Offsets all segments in the limit line by some specified amplitude.

Key Path	<b>Meas Setup, Limits, Edit, Offset</b>
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6:OFFSet:Y <rel ampl> :CALCulate:LLINe[1]   2   3   4   5   6:OFFSet:Y?
Example	:CALC:LLIN:OFFS:Y -3 dB !sets the Y axis offset to -3 dB. :CALC:LLIN:OFFSet:UPD !will apply the Y axis offset to all points in the limit line, then reset the Y axis offset to zero.
Preset	0 dB
State Saved	Saved in instrument state.
Min	-Infinity
Max	+Infinity
Default Unit	dB
Initial S/W Revision	A.02.00

**Apply Offsets to Limit Table**

Adds the X and Y offsets to each point in the limit table, then resets the X and Y offset values to zero. This has no effect on the position of the limit trace.

For example, if the X offset is -10 MHz and the Y offset is 1 dB, the values in the limit table will be updated as follows: 10 MHz will be subtracted from each X value, 1 dB will be added to each Y value. The offset values will then be reset to zero. The limit trace will not be moved and the limit table will be updated to accurately reflect the currently-displayed limit trace.

Key Path	<b>Meas Setup, Limits, Edit, Offset</b>
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6:OFFSet:UPDate

## Meas Setup

Example	:CALC:LLIN:OFFS:UPD !sets updates the limit table to reflect the X and Y offsets, then resets the offsets to zero.
State Saved	No state
Initial S/W Revision	A.02.00

### Scale X Axis

Matches the X Axis to the selected Limit, as well as possible.

For frequency limits and a frequency-domain X-axis, sets the Start and Stop Frequency to contain the minimum and maximum Frequency of the selected Limit. The range between Start Frequency and Stop Frequency is 12.5% above the range between the minimum and maximum Frequency so that span exceeds this range by one graticule division on either side.

For time limits and a time-domain X-axis, sets the sweep time to match the maximum Time of the selected Limit.

If the domain of the selected limit does not match the domain of the X Axis, no action is taken. Standard clipping rules apply, if the value in the table is outside the allowable range for the X axis.

Key Path	<b>Meas Setup, Limits, Edit</b>
Initial S/W Revision	A.02.00

### Delete Limit

Deletes the currently selected limit line. Pressing Delete Limit purges the data from the limit line tables.

Limit data – including secondary parameters such as description, margin value, etc. - will be cleared and returned to factory preset settings.

When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete limit. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter; if so, after the deletion, the informational message “Limit deleted” appears in the MSG line.

Key Path	<b>Meas Setup, Limits</b>
<b>Remote Command</b>	:CALCulate:LLINe[1]   2   3   4   5   6 :DELeTe
Example	:CALC:LLIN2:DEL !deletes all data for limit line 2.
Initial S/W Revision	A.02.00

### Test Limits

Selects whether displayed traces are tested against displayed limits (i.e. those for which Limit On/Off is set to On).

For each displayed trace for which a Limit is turned on, a message will be displayed in the upper-left corner of the graticule to notify whether the trace passes or fails the limits.

If the trace is at or within the bounds of all applicable limits and margins, the text “Trace x Pass” will be displayed in green, where x is the trace number. A separate line is used for each reported trace.

If the trace is at or within the bounds of all applicable limits, but outside the bounds of some applicable margin, the text “Trace x Fail Margin” will be displayed in amber, where x is the trace number. A separate line is used for each reported trace.

If the trace is outside the bounds of some applicable limits, the the text “Trace x Fail” will be displayed in red, where x is the trace number. A separate line is used for each reported trace.

If the trace has no enabled limits, or the trace itself is not displayed, no message is displayed for that trace.

The PASS/FAIL box in the corner of the Meas Bar is only displayed if there is at least one “Trace Pass/Fail” indication displayed in the graticule.

If two amplitude values are entered for the same frequency, a single vertical line is the result. In this case, if an upper line is chosen, the lesser amplitude is tested. If a lower line is chosen, the greater amplitude is tested.

This command only affects the display, and has no impact on remote behavior. Limit queries over SCPI test the trace against the limit regardless of whether the trace or the limit is turned on (exception: the query :CALCulate:TRACe[1]|2|3|4|5|6:FAIL? tests only the limits that are turned on for that trace).

Key Path	Meas Setup, Limits
<b>Remote Command</b>	:CALCulate:LLINe:TEST OFF ON 0 1 :CALCulate:LLINe:TEST?
Example	:CALC:LLIN:TEST ON !turns on testing, and displays the results in the upper left corner.
Preset	On, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00

### X-Axis Unit

Selects how the limit-line segments are defined. Pressing X Axis Unit selects whether the limit lines will be entered using frequency (Freq) or sweep time (Time) to define the segments. They can be specified as a table of limit-line segments of amplitude versus frequency, or of amplitude versus time.. When the X-Axis Unit is set to Time, a time value of zero corresponds to the start of the sweep, which is at the left edge of the graticule, and the column and softkey in the Limit Table Editor will read Time instead of Frequency

Switching the limit-line definition between Freq and Time will erase all of the current limit lines. When you do this from the front panel, a warning dialog will pop up letting you know that you are about to erase all the limit lines, and prompting you to hit “OK” if you are sure:

Changing the X Axis Unit will erase all your limit lines. Are you sure you want to do this? Press **Enter** or **OK** to proceed, or **Cancel(Esc)** to cancel.

Key Path	Meas Setup, Limits
----------	--------------------

## Meas Setup

<b>Remote Command</b>	:CALCulate:LLINe:CONTRol:DOMain FREQuency TIME :CALCulate:LLINe:CONTRol:DOMain?
Example	:CALC:LLIN:CONT:DOM FREQ !deletes all currently existing limit lines, then sets all limit lines to be specified in terms of frequency.
Couplings	This affects all limit lines simultaneously, and resets all limit line data except the .wav file and email address stored in the Actions.
Preset	Freq, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00

### Delete All Limits

Deletes all limit lines. Pressing Delete All Limits purges the data from all limit line tables.

All limit data will be cleared and returned to factory preset settings.

When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete all limits. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter; if so, after the deletion, the informational message “All Limits deleted” appears in the MSG line.

Key Path	<b>Meas Setup, Limits</b>
<b>Remote Command</b>	:CALCulate:LLINe:ALL:DELeTe
Example	:CALC:LLIN:ALL:DEL !deletes all data for all limit lines.
Initial S/W Revision	A.02.00

### Limit Line Data (Remote Command Only, Backwards Compatibility)

Defines the limit line values, and destroys all existing data. Up to 200 points may be defined for each limit using the following parameters.

<x>Frequency or time values as specified by :Calculate:LLINe:CONTRol:DOMain. Units default to Hz (for frequency) and seconds (for time).

Range: –30 Gs to +30 Gs for time limits, –3 kHz to +350 GHz for frequency limits.

<ampl>Amplitude values units default to dBm. Up to two amplitude values can be provided for each x-axis value, by repeating <x-axis> in the data list.

Range: –1000 dBm to +1000 dBm

<connect> connect values are either "0" or "1." A "1" means this point will be connected to the previously defined point to define the limit line. A "0" means that it is a point of discontinuity and is not

connected to the preceding point. The connect value is ignored for the first point.

<b>Remote Command:</b>	:CALCulate:LLINe[1] 2 3 4 5 6:DATA <x>, <ampl>, <connect> :CALCulate:LLINe[1] 2 3 4 5 6:DATA?
Example:	:CALC:LLIN3:DATA 1E9,-20,0,2E9,-20,1,2E9,-10,1,3E9,-10,1 describes a stair-stepped limit line.
Preset:	Limit line data is cleared by Restore Mode Defaults. However, it survives shutdown/restart of the analyzer application (including power cycle)
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00

### Limit Line Fail? (Remote Command Only)

Tests a limit line against its associated trace. Returns a 0 if the trace is within the limit and margin, a 1 if the trace exceeds either the limit or the margin.

Note that this command only tests one limit line – other limit lines are not tested when executing this command. To see whether a trace passed all limits, use :CALCulate:TRACe:FAIL?.

Note this command performs the test regardless of whether the trace or the limit is turned on on the display.

<b>Remote Command:</b>	:CALCulate:LLINe[1] 2 3 4 5 6:FAIL?
Example:	:CALC:LLIN:FAIL? returns a zero if limit line 1's associated trace has no failure, 1 if there is a margin or limit failure.
Initial S/W Revision:	A.02.00

### Limit State (Remote Command Only, SCPI standard compatibility)

Sets or queries whether the limit line is tested. This command is identical to :CALC:LLIN[1]|2|3|4|5|6:DISP.

<b>Remote Command:</b>	:CALCulate:LIMit[1] 2 3 4 5 6:STATe ON OFF 0 1 :CALCulate:LIMit[1] 2 3 4 5 6:STATe?
Example:	:CALC:LIM:STAT ON turns on limit line 1
Couplings:	This command is identical to :CALC:LLIN:DISP Testing is done on all displayed limits if "Test All Limits" is ON.
Preset:	Off (all limits)
State Saved:	Saved in State.
Initial S/W Revision:	A.02.00

## Meas Setup

### Limit Line Control (Remote Command Only, SCPI standard compatibility)

Defines a list of limit line control (frequency or time) values for a given limit line. Up to 2000 points may be defined for each limit using the following parameters.

<x>Frequency or time values as specified by :CALCulate:LLINE:CONTRol:DOMain. Units default to Hz (for frequency) and seconds (for time).

Range: –30 Gs to +30 Gs for time limits, –3 kHz to +1200 GHz for frequency limits.

Note that X values may be repeated if a vertical step in the limit line is desired.

The points query returns the number of points in the control. It should match the number of points in the amplitude, that is, the number of values for the CONTRol axis and for the corresponding UPPER and/or LOWER limit lines must be identical. If one array is larger than the other, the limit trace is built using only as much data as is contained in the smaller array.

An empty array returns not a number (9.91e+37 to a data query), 0 to a POINTs query.

<b>Remote Command:</b>	:CALCulate:LIMit[1] 2 3 4 5 6:CONTRol[:DATA] <x>, <x>, ... :CALCulate:LIMit[1] 2 3 4 5 6:CONTRol[:DATA]?
Example:	:CALC:LIM:CONT 1GHz,2GHz,2GHz,3GHz !describes the X values of a stair-stepped limit line.
Preset:	Limit line data is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00

<b>Remote Command:</b>	:CALCulate:LIMit[1] 2 3 4 5 6:CONTRol:POINTs?
Example:	:CALC:LIM:CONT:POIN? !returns the number of points in the limit line.
Preset:	Limit line data is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00

### Limit Line Upper / Lower (Remote Command Only, SCPI standard compatibility)

Defines a list of amplitude values for a given limit line. Changing the number of elements in the list spectrum will automatically turn the limit line off. Using the “UPP” syntax defines an upper limit line, using the “LOW” syntax defines a lower limit line. Note that a line may not be simultaneously both upper and lower; the type of the limit line will automatically be changed as appropriate. Up to 200 points may be defined for each limit using the following parameters.

<ampl>Amplitude values units default to dBm.

Range: –200 dBm to +100 dBm

The points query returns the number of points in the amplitude list. It will not be possible to turn on the limit line unless the number of points in the control matches the number of points in the amplitude.

The points query returns the number of points in the amplitude list. It should match the number of points in the control, that is, the number of values for the CONTROL axis and for the corresponding UPPER and/or LOWER limit lines must be identical. If one array is larger than the other, the limit trace is built using only as much data as is contained in the smaller array.

An empty array returns the system error “list is empty” to a data query, 0 to a POINTs query.

<b>Remote Command:</b>	:CALCulate:LIMit [1]   2   3   4   5   6 :UPPer[:DATA] <ampl>, <ampl>, ... :CALCulate:LIMit [1]   2   3   4   5   6 :UPPer[:DATA] ?
Example:	:CALC:LIM:UPP -10, -10, -20, -20 !describes the amplitude values of an upper limit line
Preset:	Limit line data is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00

<b>Remote Command:</b>	:CALCulate:LIMit [1]   2   3   4   5   6 :UPPer:POINTs?
Example:	:CALC:LIM:UPP:POIN? !returns the number of points in the upper limit line.
Preset:	Upper Limit line data/points is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00

<b>Remote Command:</b>	:CALCulate:LIMit [1]   2   3   4   5   6 :LOWer[:DATA] <ampl>, ... :CALCulate:LIMit [1]   2   3   4   5   6 :LOWer[:DATA] ?
Example:	:CALC:LIM:LOW -10, -10, -20, -20 !describes the amplitude values of an lower limit line
Preset:	Limit line data is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00

<b>Remote Command:</b>	:CALCulate:LIMit [1]   2   3   4   5   6 :LOWer:POINTs?
Example:	:CALC:LIM:UPP:POIN? !returns the number of points in the lower limit line.
Preset:	Limit line data/points is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00

### Limit Fail? (Remote Command Only, SCPI standard Compatibility)

Tests a limit line against its associated trace. Returns a 0 if the trace is within the limit and margin, a 1 if

## Meas Setup

the trace exceeds either the limit or the margin. This command is identical to “:CALC:LLIN:FAIL?”

Note that this command only tests one limit line – other limit lines are not tested when executing this command. To see whether a trace passed all limits, use :CALCulate:TRACe:FAIL?.

Note this command performs the test regardless of whether the trace or the limit is turned on on the display.

<b>Remote Command:</b>	:CALCulate:LIMit[1]   2   3   4   5   6 :FAIL?
Example:	:CALC:LIM:FAIL? !returns a zero if limit line 1’s associated trace has no failure, 1 if there is a margin or limit failure.
Couplings:	This command is identical to :CALC:LLIN:FAIL?
Initial S/W Revision:	A.02.00

### Limit Clear (Remote Command Only, SCPI standard Compatibility)

Clears a limit line, and all associated data. This command is identical to “:CALC:LLIN:DEL”

<b>Remote Command:</b>	:CALCulate:LIMit[1]   2   3   4   5   6 :CLEAr
Example:	:CALC:LIM2:CLE !deletes all data for limit line 2.
Couplings:	This command is identical to :CALC:LLIN:DEL
Initial S/W Revision:	A.02.00

### Trace Fail? (Remote Command Only)

Tests a trace against all associated limit lines. Returns a 0 if the trace is within all limits and margins, a 1 if the trace exceed either the limit or the margin. If no limits apply to the selected trace, this will automatically return a 0.

Only applies to limits that are turned on, if a Limit is off it will not be tested. If a Trace is not displaying it will still be tested, and if **Test Limits (All Limits)** is off the Trace will still be tested.

This command ignores limit lines that are assigned to other traces.

<b>Remote Command:</b>	:CALCulate:TRACe[1]   2   3   4   5   6 :FAIL?
Example:	:CALC:TRAC3:FAIL? !returns a zero if there is no failure, 1 if the trace exceeds either the limit or the margin.
Initial S/W Revision:	A.02.00

### Fixed / Relative Limit (Remote Command Only, Backwards Compatibility)

This command sets both Relative to CF and Relative to RL simultaneously for all limits. If queried, it returns whether Limit Line 1 is set Relative to CF, and ignores all other fixed/relative data.

<b>Remote Command:</b>	:CALCulate:LLINe:CMODE FIXed RELative :CALCulate:LLINe:CMODE?
------------------------	--



Example:	:CALC:LLIN:CMOD REL !makes all limit lines relative to the center frequency and reference level.
Notes:	<p>This SCPI command is only supported for Backwards Compatibility.</p> <p>PSA offers only the following softkey, which is generic to all limit lines: Limits Fixed / Rel.</p> <p>On the X-Series, this functionality is provided by a softkey which is specific to each limit line, and which provides a sub-menu with 2 softkeys (Relative to CF / Relative to RL).</p> <p>In order to be consistent with the implementation of the following new commands:</p> <pre>:CALCulate:LLINe[1] 2 3 4 5 6:FREQUency:CMODE:RELative ON OFF 1 0</pre> <pre>:CALCulate:LLINe[1] 2 3 4 5 6:FREQUency:CMODE:RELative?</pre> <p>and</p> <pre>:CALCulate:LLINe[1] 2 3 4 5 6:AMPLitude:CMODE:RELative ON OFF 1 0</pre> <pre>:CALCulate:LLINe[1] 2 3 4 5 6:AMPLitude:CMODE:RELative?</pre> <p>The :CALCulate:LLINe:CMODE? Query will returns 1 if Limit Line 1 is set Relative to CF, and returns 0 otherwise.</p>
Preset:	Fixed
Initial S/W Revision:	A.02.00

### Merge Limit Line Data

Adds the points with the specified values to the current limit line, allowing you to merge limit line data. Up to two amplitude values are allowed for each X value. If more than 200 points are entered to be merged, the first 200 points are merged, then an error 'too many DATA entries' is reported.

<b>Remote Command:</b>	:CALCulate:LLINe[1] 2 3 4 5 6:DATA:MERGe <x-axis>, <ampl>, <connected>
Example:	:CALC:LLIN1:DATA:MERG 1000000000,-20,0,2000000000,-30,1 !merges the 10GHz segment and the 20GHz segment into limit line 1. Note that the 20GHz segment will be connected to the next lower point, which may or may not be the 10GHz point.
Notes:	<p>This SCPI command is only supported for Backwards Compatibility.</p> <p>Although PSA had a limit of 200 points, it is acceptable to increase that limit.</p>
Preset:	Fixed
Initial S/W Revision:	A.02.00

### N dB Points

Turns N dB points on and off and allows you to set the N dB value. N dB uses the selected marker. If the selected marker is not on when N dB is turned on, the selected marker turns on, as a Normal marker, at center screen, and is used by N dB.

## Meas Setup

See “N dB Points Results Query” on page 1614.

See “More Information” on page 1614.

Key Path	Meas Setup
Remote Command	:CALCulate:BWIDth BANDwidth:NDB <rel_ampl> :CALCulate:BWIDth BANDwidth:NDB? :CALCulate:BWIDth BANDwidth[:STATE] OFF ON 0 1 :CALCulate:BWIDth BANDwidth[:STATE]?
Notes	If the selected marker is turned <b>Off</b> it turns off N dB Points. N DB Points is unaffected by Auto Couple
Preset	Off, 3.01 dB OFF
Preset	Off, 3.01 dB OFF
State Saved	The on/off status and the offset value are both saved in instrument state.
Min	-140 dB
Max	-0.01 dB
Initial S/W Revision	Prior to A.02.00


## N dB Points Results Query

Remote Command:	:CALCulate:BWIDth BANDwidth:RESult?
Example:	:CALC:MARK:AOFF set selected marker to 1 :CALC:MARK:MAX put marker 1 on peak :CALC:BWID ON turn on N dB for the selected marker (1) :CALC:BWID:NDB-3.01 set the offset to -3.01 dB :CALC:BWID:RES? Query the result
Notes:	-100 returned if invalid reading
Initial S/W Revision:	Prior to A.02.00

## More Information

A marker should be placed on the peak of interest before turning on N dB points. The N dB points function looks for the two points on the marker’s trace closest to the marker’s X Axis value that are N dB below the marker’s amplitude, one above and the other below the marker’s X Axis value. (That is, one point is to the right and one is to the left of the selected marker.) The selected N dB value is called the offset. The function reports the frequency difference (for frequency domain traces) or time difference (for time domain traces) between those two points.

Each point is identified by a horizontal arrow pointing towards the marker, next to the trace. The arrows used by the N dB Points function will be as shown in the figure below (where each square represents one pixel). They point in, horizontally, at the trace below a peak, on either side of its skirts. There is one pixel between the arrow and the trace

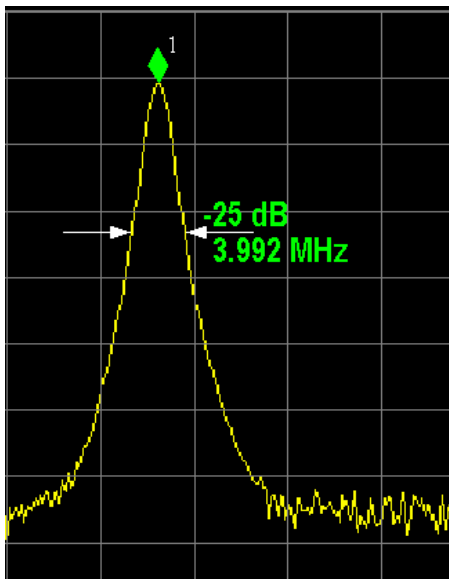

N dB Points can be used to measure the bandwidth of a signal; it is commonly used in conjunction with a tracking generator to measure filter bandwidths.



In one of the common use cases, the marker is placed on a peak, and the arrows are displayed N dB down the skirt from the marker on either side of the peak. The N dB value and the frequency difference between the two arrows is displayed around the arrow as shown in the figure above. Normally this displays on the right hand arrow, but if this would place any part of the text offscreen to the right then it displays on the left arrow.


If the analyzer is unable to find data that is N dB below the marker on either side of the marker, the arrows are displayed at the indicator point of the marker, no value (---) will be displayed as the result and -100 Hz returned remotely (see figure below):



Some sample N dB scenarios are shown below, to illustrate how the function works in various cases. In each case, the two-headed blue arrow represents N dB of amplitude.

Meas Setup

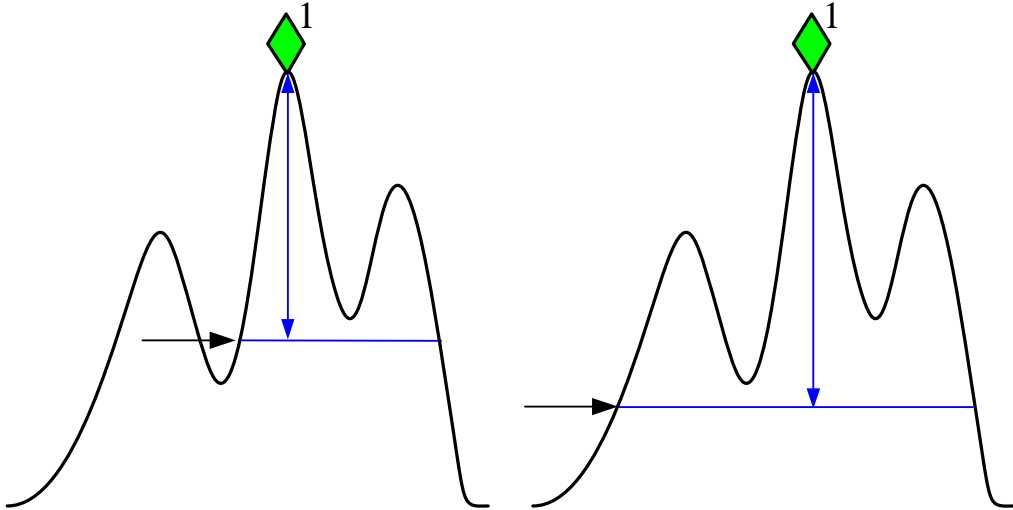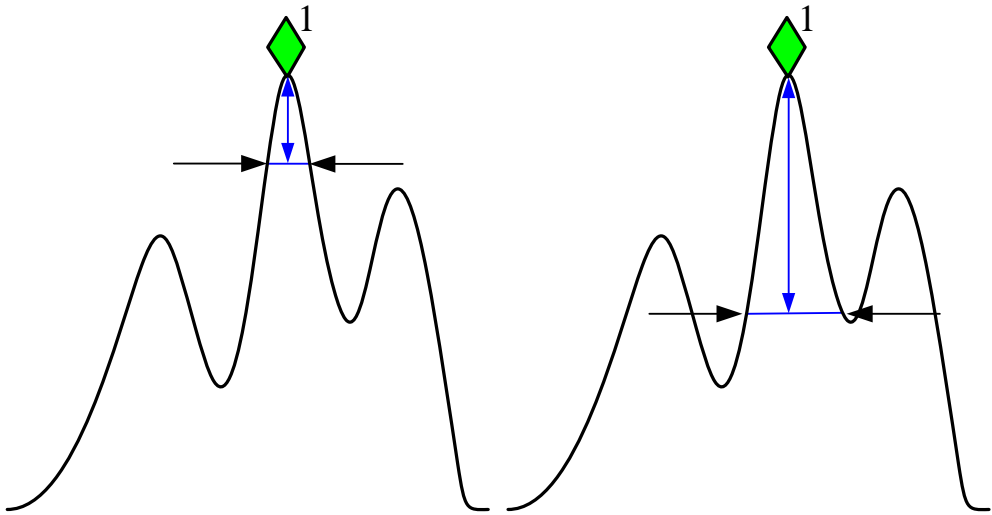

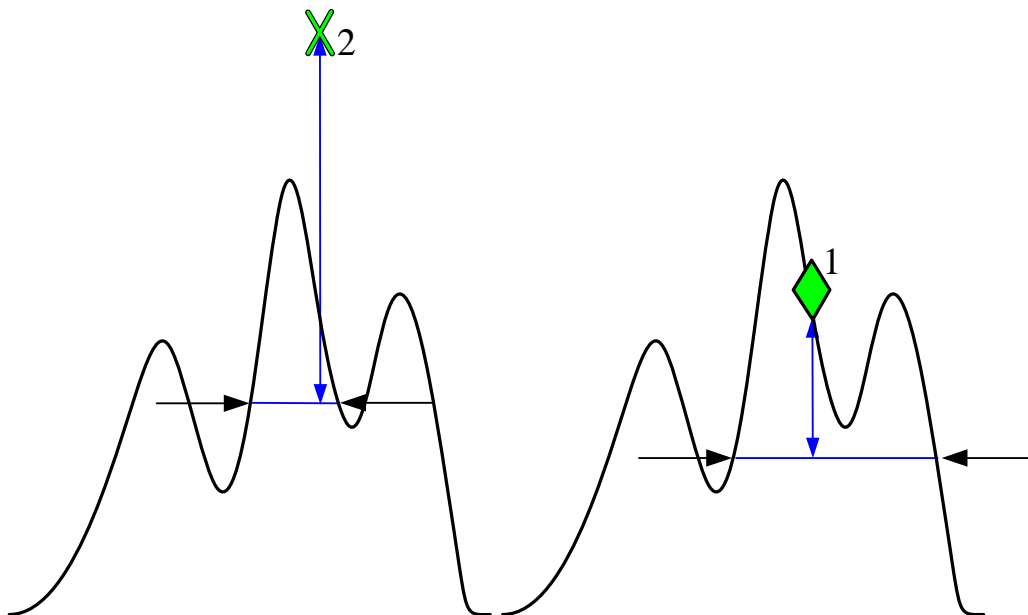

### PhNoise Opt

Selects the LO (local oscillator) phase noise behavior for various desired operating conditions.

<b>Remote Command:</b>	[ :SENSe ] :FREQuency:SYNTHeSis [ :STATe ] 1   2   3 [ :SENSe ] :FREQuency:SYNTHeSis [ :STATe ] ?
<b>Example:</b>	FREQ:SYNT 2      selects optimization for best wide offset phase noise
<b>Notes:</b>	<p>Parameter:</p> <ul style="list-style-type: none"> <li>1 - optimizes phase noise for small frequency offsets from the carrier.</li> <li>2 - optimizes phase noise for wide frequency offsets from the carrier.</li> <li>3 - optimizes LO for tuning speed</li> </ul> <p>(In PXA, the local oscillator hardware provides for extra-low phase noise at the expense of some speed. In these models, the “fast tuning” option lets you go faster at the expense of some noise. In all other models, the fastest possible tuning is the same as the close-in phase noise setting; in those models, the settings for option 1 are used if option 3 is selected.)</p>
<b>Preset:</b>	Because this function is in Auto after preset, and because Span after preset > 314.16 kHz (see Auto rules, next section) the state of this function after Preset will be 2
<b>Dependencies:</b>	Does not appear in all models. The key is blank in those models, but the SCPI command is accepted for compatibility (although no action is taken).
<b>Initial S/W Revision:</b>	Prior to A.02.00
<b>Modified at S/W Revision:</b>	A.02.00

## Meas Setup

### Auto

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions.

The X-Series has two grades of LO; a high performance LO that gives the best phase noise performance; and a medium-performance LO that gives excellent performance.

In models with the high performance LO, Auto will choose:

Fast Tuning whenever Span > 44.44 MHz or RBW > 1.9 MHz

otherwise, if center frequency is < 195 kHz OR ALL of the following are true:

CF >= 1 MHz AND Span <= 1.3 MHz AND RBW <= 75 kHz

then Best Close in Phase Noise;

otherwise, Best Wide-offset Phase Noise

In models with the medium-performance LO, Auto will choose:

**Fast Tuning** whenever Span > 12.34 MHz or RBW > 250 kHz

otherwise, if center frequency is < 25 kHz OR ALL of the following are true:

CF >= 1 MHz AND Span <= 141.4 kHz AND RBW <= 5 kHz

then **Best Close in Phase Noise**;

otherwise, **Best Wide-offset Phase Noise**

In units whose hardware does not provide for an extra-fast tuning option, the settings for Fast Tuning are the same as Best Close-in, so in those models you will see no difference between these settings.

These rules apply whether in swept spans, zero span, or FFT spans.

Key Path	Meas Setup, PhNoise Opt
<b>Remote Command</b>	[ :SENSe ] :FREQuency:SYNTHeSis:AUTO[ :STATe ] OFF   ON   0   1 [ :SENSe ] :FREQuency:SYNTHeSis:AUTO[ :STATe ] ?
Example	FREQ:SYNT:AUTO ON
Preset	ON
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

### Best Close-in P Noise

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

Key Path	Meas Setup, PhNoise Opt
Example	FREQ:SYNT 1

Couplings	The frequency below which the phase noise is optimized is model dependent: EXA: [offset <20 kHz] MXA: [offset <20 kHz] PXA: [offset <140 kHz]
Readback	Close-in.  If manually selected the “Man” will be underlined. The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some analyzers this annotation appears as [offset <20 kHz]
Initial S/W Revision	Prior to A.02.00

### Best Wide-offset Noise

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

Key Path	<b>Meas Setup, PhNoise Opt</b>
Example	FREQ:SYNT 2
Couplings	The frequency below which the phase noise is optimized is model dependent: EXA: [offset >30 kHz] MXA: [offset >30 kHz] PXA: [offset >160 kHz]
Readback	Wide-offset.  If manually selected the “Man” will be underlined. The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some analyzers this annotation appears as [offset >30 kHz]
Initial S/W Revision	Prior to A.02.00

### Fast Tuning

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term “fast tuning” refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In this mode in PXA, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

(In models whose hardware does not provide for a fast tuning option, the settings for Best Close-in P

## Meas Setup

Noise are used if Fast Tuning is selected. This gives the fastest possible tuning for that hardware set.)

Key Path	<b>Meas Setup, PhNoise Opt</b>
Example	FREQ:SYNT 3
State Saved	Saved in instrument state.
Readback	Fast Tuning. Also, the “Man” must be underlined.
Initial S/W Revision	Prior to A.02.00

## ADC Dither

Accesses the menu to control the ADC Dither function. The dither function enhances linearity for low level signals at the expense of reduced clipping-to-noise ratio. The reduced clipping-to-noise ratio results in higher noise, because we work to ensure that the clipping level of the ADC relative to the front terminals remains unchanged with the introduction of dither, and this results in reduced ADC dynamic range. So making measurements with ADC dither gives you better amplitude linearity, but turning ADC dither off gives you a lower noise floor (better sensitivity).

With dither on, the third-order distortions are usually invisible for mixer levels below –35 dBm. With dither off, these distortions can be visible, with typical power levels of –110 dBm referred to the mixer. Detection nonlinearity can reach 1 dB for dither off at mixer levels around –70 dBm and lower, while the specified nonlinearity is many times smaller with dither on.

When ADC Dither is on, the linearity of low-level signals is improved. The enhanced linearity is mostly improved scale fidelity. The linearity improvements of dither are most significant for RBWs of 3.9 kHz and less in swept mode, and FFT widths of 4 kHz and less in FFT mode.

The increased noise due to turning dither on is most significant in low band (0 to 3.6 GHz) with IF Gain set to Low, where it can be about 0.2 dB.

Key Path	<b>Meas Setup</b>
Example	ADC:DITH:HIGH !Sets the ADC dither setting to High ADC:DITH ON ! Sets the ADC dither setting to Medium In older instruments the “Medium” key was labeled “On” and the SCPI for this setting is NOT changing.
<b>Remote Command</b>	[ :SENSE ] :ADC:DITHer [ :STATe ] OFF   ON   HIGH [ :SENSe ] :ADC:DITHer [ :STATe ] ?
Dependencies	In some models, the “High” parameter is not available. In some instruments, the HIGH parameter is honored and the HIGH state set, and returned to a query, but the Medium dither level is actually used.
Preset	AUTO



Backwards Compatibility SCPI	The old command [:SENSe]:ADC:DITHer AUTO is aliased to [:SENSe]:ADC:DITHer:AUTO[:STATe] ON; because of this, the [:SENSe]:ADC:DITHer function cannot be a true Boolean, so the query, [:SENSe]:ADC:DITHer? returns OFF or ON (not 1 or 0 like a true Boolean)
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

### Auto

Sets the ADC dither to automatic. The analyzer then chooses the dither level according to which is most likely to be the best selection, based on other settings within the digital IF.

When in Auto, the analyzer sets the dither to Medium whenever the effective IF Gain is Low by this definition of IF Gain = Low:

- When Sweep Type = Swept, IF Gain = Low whenever Swept IF Gain is set to Low Gain, whether by autocoupling or manual selection.
- When Sweep Type = FFT, IF Gain = Low whenever FFT IF Gain is set to "Low Gain," which cannot happen by autocoupling.

Whenever the IF Gain is not low by this definition, Auto sets the dither to Off.

Key Path	Meas Setup, ADC Dither
<b>Remote Command</b>	[ :SENSe ] :ADC :DITHer :AUTO [ :STATe ] OFF   ON   0   1 [ :SENSe ] :ADC :DITHer :AUTO [ :STATe ] ?
Example	ADC:DITH:AUTO ON
Preset	ON
State Saved	Saved in instrument state
Readback	The "Auto" is underlined, and the readback value is whatever setting is auto-selected
Initial S/W Revision	Prior to A.02.00

### High (Best Log Accy)

When ADC dither is set to High, the scale fidelity is especially good, most notably the relative scale fidelity. The tradeoff is that there is a modest loss of noise floor performance, up to about a decibel.

Key Path	Meas setup, ADC Dither
Example	ADC:DITH:HIGH
Readback	If manually selected, the readback is High, with the "Man" underlined
Initial S/W Revision	A.02.00

## Meas Setup

### Medium (Log Accy)

The Medium setting of ADC Dither (known as “On” in earlier versions of the instrument software) improves the linearity of low-level signals at the expense of some noise degradation.

Key Path	<b>Meas setup, ADC Dither</b>
Example	ADC:DITH:ON
Readback	If manually selected, the readback is Medium, with the “Man” underlined
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

### Off (Best Noise)

When ADC Dither is Off, the instrument noise floor is improved, because without the need to make room for the dither, you get a lower noise floor and better sensitivity.

Key Path	<b>Meas setup, ADC Dither</b>
Example	ADC:DITH:OFF
Readback	If manually selected, the readback is Off, with the “Man” underlined.
Initial S/W Revision	Prior to A.02.00

### Swept IF Gain

To take full advantage of the RF dynamic range of the analyzer, there is an added switched IF amplifier with approximately 10 dB of gain. When you can turn it on without overloading the analyzer, the dynamic range is always better with it on than off. The **Swept IF Gain** key can be used to set the IF Gain function to Auto, or to High Gain (the extra 10 dB), or to Low Gain. These settings affect sensitivity and IF overloads.

This function is only active when in Swept sweeps. In FFT sweeps, the FFT IF Gain function is used instead.

Key Path	<b>Meas Setup</b>
<b>Remote Command</b>	[ :SENSe ] : IF : GAIN : SWEPT [ :STATe ] OFF   ON   0   1 [ :SENSe ] : IF : GAIN : SWEPT [ :STATe ] ?
Example	IF:GAIN:SWEP ON
Notes	where ON = high gain OFF = low gain

Couplings	<p>The ‘auto’ rules for Swept IF Gain depend on attenuation, preamp state, start and stop frequency and the setting of FFT IF Gain. Set the Swept IF Gain to High (On) when the total input attenuation is 0 dB, the preamp is off, the start frequency is 10 MHz or more, and the FFT IF Gain is autocoupled, or manually set to Autorange, or manually set to High. Also set the Swept IF Gain to High (On) when the total input attenuation is 2 dB or less, the preamp is on, the start frequency is 10 MHz or more, and the stop frequency is 3.6 GHz or less and the FFT IF Gain is autocoupled, or manually set to Autorange, or manually set to High. Under all other circumstances, set the Swept IF Gain to Low (Off).</p> <p>If the sweep type is Swept, the start frequency of the instrument is less than 10 MHz, and you put Swept IF Gain in Manual On, a warning condition is generated and remains in effect as long as this condition exists. The warning message is about a possible IF overload.</p> <p>As with most parameters with an AUTO state, AUTO COUPLE sets it to Auto, and setting any specific value (for example on or off) will set the AUTO state to false.</p>
Preset	<p>Auto after a Preset which yields Off unless the Preamp is on.</p> <p>Auto and Off after Meas Preset.</p>
State Saved	Saved in instrument state.
Readback Line	High Gain or Low Gain
Initial S/W Revision	Prior to A.02.00

**Auto**

Activates the auto rules for Swept IF Gain

Key Path	<b>Meas setup</b>
<b>Remote Command</b>	[ :SENSE ] : IF : GAIN : SWEPT : AUTO [ : STATE ] OFF   ON   0   1 [ :SENSE ] : IF : GAIN : SWEPT : AUTO [ : STATE ] ?
Example	IF:GAIN:SWEP:AUTO ON
Preset	ON
Initial S/W Revision	Prior to A.02.00

**Low Gain (Best for Large Signals)**

Forces Swept IF Gain to be off.

Key Path	<b>Meas setup, ADC Ranging</b>
Example	IF:GAIN:SWEP OFF
State Saved	Saved in instrument state.
Readback	Low Gain

## Meas Setup

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### High Gain (Best Noise Level)

Forces Swept IF Gain to be on.

Key Path	<b>Meas setup, ADC Ranging</b>
Example	IF:GAIN:SWEP ON
Dependencies	The High setting for <b>Swept IF Gain</b> is grayed out when <b>FFT IF Gain</b> is manually set to Low (not when Low is chosen by the auto-rules).
State Saved	Saved in instrument state.
Readback	High Gain
Initial S/W Revision	Prior to A.02.00

### FFT IF Gain

Accesses the keys to set the ranging in the digital IF when doing FFT sweeps. When in Autorange mode, the IF checks its range once for every FFT chunk, to provide the best signal to noise ratio. You can specify the range for the best FFT speed, and optimize for noise or for large signals.

When the sweep type is FFT and this function is in Autorange, the IF Gain is set ON initially for each chunk of data. The data is then acquired. If the IF overloads, then the IF Gain is set OFF and the data is re-acquired. Because of this operation, the Auto setting uses more measurement time as the instrument checks/resets its range. You can get faster measurement speed by forcing the range to either the high or low gain setting. But you must know that your measurement conditions will not overload the IF (in the high gain range) and that your signals are well above the noise floor (for the low gain range), and that the signals are not changing.

Key Path	<b>Meas Setup</b>
<b>Remote Command</b>	[ :SENSE] : IF : GAIN : FFT [ : STATE] AUTOrange   LOW   HIGH [ :SENSE] : IF : GAIN : FFT [ : STATE] ?
Couplings	As with most parameters with an AUTO state, AUTO COUPLE sets it to Auto, which then picks AUTOrange, and setting any specific value (AUTOrange, LOW or HIGH) will set the AUTO state to false.
Preset	AUTOrange
State Saved	Saved in instrument state.
Readback Line	Autorange, High Gain or Low Gain
Initial S/W Revision	Prior to A.02.00

### Auto

Allows the instrument to pick the FFT IF Gain method as appropriate. This “Auto” state is set by the

Auto Couple key, and it puts it in Autorange.

Key Path	Meas setup
<b>Remote Command</b>	[ :SENSe] : IF:GAIN:FFT:AUTO [ :STATe] OFF   ON   0   1 [ :SENSe] : IF:GAIN:FFT:AUTO [ :STATe] ?
Example	IF:GAIN:FFT:AUTO ON
Preset	ON
State Saved	Saved in instrument state.
Backwards Compatibility SCPI	DISPlay:WINDow[1]:TRACe:Y[:SCALe]:LOG:RANGe:AUTO
Initial S/W Revision	Prior to A.02.00

### Autorange (Slower – Follows Signals)

Turns the ADC ranging to automatic which provides the best signal to noise ratio. Autorange is usually preferred over the manual range choices.

Key Path	Meas setup, FFT IF Gain
Example	IF:GAIN:FFT AUORange
State Saved	Saved in instrument state.
Readback	Autorange
Initial S/W Revision	Prior to A.02.00

### Low Gain (Best for Large Signals)

Forces FFT IF Gain to be off.

Key Path	Meas setup, FFT IF Gain
Example	IF:GAIN:FFT LOW
State Saved	Saved in instrument state.
Readback	Low Gain
Initial S/W Revision	Prior to A.02.00

### High Gain (Best Noise Level)

Forces FFT IF Gain to be on.

Key Path	Meas setup, FFT IF Gain
Example	IF:GAIN:FFT HIGH
Dependencies	The High setting for <b>FFT IF Gain</b> is grayed out when <b>Swept IF Gain</b> is manually set to Low (not when Low is chosen by the auto-rules).

## Meas Setup

State Saved	Saved in instrument state.
Readback	High Gain
Initial S/W Revision	Prior to A.02.00

### Analog Demod Tune & Listen

The Analog Demod Tune & Listen key opens the Analog Demod menu which contains keys to turn the demod function on and off and select modulation type. This key only appears if the N9063A Analog Demod personality is installed and licensed, or if Option EMC is installed and licensed.

When the function is on (set to AM, FM, or PM), the demodulated signal is fed to the analyzer's speaker. Muting and volume control functions are done through the standard Windows speaker volume control interface.

Key Path	<b>Meas Setup</b>
Remote Command	[ :SENSE] :DEMod AM FM PM OFF [ :SENSE] :DEMod?
Example	DEM AM turns amplitude demodulation function ON
Dependencies	When Tune & Listen is turned on, all active traces are forced to use the same detector.  CISPR detectors (QPD, EMI Avg, RMS Avg) and Tune & Listen are mutually exclusive. No sound output will be heard if one of these detectors is selected.
Preset	OFF
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

### AM

Pressing this key, when it is not selected, selects and activates the AM demodulation function. Pressing it a second time branches to the AM Demod menu where AM demodulation settings can be adjusted.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen</b>
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

### Channel BW (AM Demod)

Sets the RBW setting used by the hardware during the demodulation period in nonzero spans. Note that this is a separate parameter only for the demodulation function and does not affect the RBW setting in the BW menu which is used during the normal sweep. The flat top filter type must be used during the demodulation period. A 5 kHz Video Bandwidth filter is used.

In Zero Span, the instrument's RBW & VBW filters are used for the demodulation; thus, the Channel BW (and RBW filter type) will match those of the instrument. This allows gap-free listening. The Channel BW key is grayed out and the value displayed on the key matches the current RBW of the instrument. Upon leaving zero span, the non-zero-span setting of Channel BW is restored as well as the flattop filter type.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen, AM</b>
Remote Command	[ :SENSe] :DEMod:AM:BANDwidth:CHANnel <freq> [ :SENSe] :DEMod:AM:BANDwidth:CHANnel?
Example	DEM:AM:BAND:CHAN 200 kHz
Notes	This key/command is grayed out in zero span.
Dependencies	Unavailable in zero span.
Couplings	In zero span only, the value is set equal to the instrument's current RBW value and it displays that value on the softkey, but the softkey is grayed out.
Preset	30 kHz
State Saved	Saved in instrument state.
Min	390 Hz
Max	8 MHz
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00

## FM

Pressing this key, when it is not selected, selects and activates the FM demodulation function. Pressing it a second time branches to the FM Demod menu where FM demodulation settings can be adjusted.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen</b>
Example	DEM FM turns frequency demodulation function ON
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

## Channel BW (FM Demod)

Sets the RBW setting used by the hardware during the demodulation period in nonzero spans. Note that this is a separate parameter only for the demodulation function and does not affect the RBW setting in the BW menu which is used during the normal sweep. The flat top filter type must be used during the demodulation period. A 5 kHz Video Bandwidth filter is used.

In Zero Span, the instrument's RBW & VBW filters are used for the demodulation; thus, the Channel BW (and RBW filter type) will match those of the instrument. This allows gap-free listening. The Channel BW key is grayed out and the value displayed on the key matches the current RBW of the

## Meas Setup

instrument. Upon leaving zero span, the previous setting of Channel BW and the flattop filter type are restored.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen, FM</b>
<b>Remote Command</b>	[ :SENSe] :DEMod:FM:BAWdwidth:CHANnel <freq> [ :SENSe] :DEMod:FM:BAWdwidth:CHANnel?
Example	DEM:FM:BAWd:CHAN 200 MHz
Notes	This key / command is grayed out in zero span
Dependencies	Unavailable in zero span.
Couplings	In zero span only, the value is set equal to the instrument's current RBW value and it displays that value on the softkey, but the softkey is grayed out.
Preset	150 kHz
State Saved	Saved in instrument state.
Min	390 Hz
Max	8 MHz
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00

### De-emphasis (FM Demod only)

The De-emphasis setting controls a single-pole filter (6 dB/octave roll off), usually to counter intentional pre-emphasis in the transmitter. When De-emphasis state is OFF the hardware digital filter is bypassed, otherwise the setting is applied

The De-emphasis softkey is only available when FM is the demod selected. It is grayed out for AM and PM.

Key Path	<b>Meas Setup, Analog Demod Tune &amp; Listen, FM</b>
<b>Remote Command</b>	[ :SENSe] :DEMod:FM:DEEMphasis OFF US25 US50 US75 US750 [ :SENSe] :DEMod:FM:DEEMphasis?
Example	DEM:FM:DEEM US75 DEM:FM:DEEM?
Dependencies	Only available in FM. Grayed out for AM and PM.
Preset	US75 (recommended for US commercial FM 75 $\mu$ s pre-emphasis)
State Saved	Saved in instrument state.
Readback line	1-of-N selection
Initial S/W Revision	Prior to A.02.00



**Off**

This setting bypasses the De-emphasis filter.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen, FM, De-emphasis</b>
Example	DEM:FM:DEEM OFF
Readback	Off
Initial S/W Revision	Prior to A.02.00

**25  $\mu$ s**

Sets the De-emphasis time constant to 25 $\mu$ s.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen, FM, De-emphasis</b>
Example	DEM:FM:DEEM US25
Readback	25 $\mu$ s
Initial S/W Revision	Prior to A.02.00

**50  $\mu$ s**

Sets the De-emphasis time constant to 50  $\mu$ s.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen, FM, De-emphasis</b>
Example	DEM:FM:DEEM US50
Readback	50 $\mu$ s
Initial S/W Revision	Prior to A.02.00

**75  $\mu$ s**

Sets the De-emphasis time constant to 75  $\mu$ s.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen, FM, De-emphasis</b>
Example	DEM:FM:DEEM US75
Readback	75 $\mu$ s
Initial S/W Revision	Prior to A.02.00

**750  $\mu$ s**

Sets the De-emphasis time constant to 750  $\mu$ sec.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen, FM, De-emphasis</b>
Example	DEM:FM:DEEM US750

## Meas Setup

Readback	750 $\mu$ s
Initial S/W Revision	Prior to A.02.00

### PM

Pressing this key, when it is not selected, selects and activates the PM demodulation function. Pressing it a second time branches to the PM Demod menu where PM demodulation settings can be adjusted.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen</b>
Example	DEM PM turns Phase demodulation function ON
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

### Channel BW (PM Demod)

Sets the RBW setting used by the hardware during the demodulation period in nonzero spans. Note that this is a separate parameter only for the demodulation function and does not affect the RBW setting in the BW menu which is used during the normal sweep. The flat top filter type must be used during the demodulation period. A 5 kHz Video Bandwidth filter is used.

In Zero Span, the instrument's RBW & VBW filters are used for the demodulation; thus, the Channel BW (and RBW filter type) will match those of the instrument. This allows gap-free listening. The Channel BW key is grayed out and the value displayed on the key matches the current RBW of the instrument. Upon leaving zero span, the previous setting of Channel BW and the flattop filter type are restored.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen, M</b>
<b>Remote Command</b>	[ :SENSE ] :DEMod:PM:BANDwidth:CHANnel <freq> [ :SENSE ] :DEMod:PM:BANDwidth:CHANnel?
Example	DEM:PM:BAND:CHAN 200 MHz
Notes	This key / command is grayed out in zero span
Dependencies	Unavailable in zero span.
Couplings	In zero span only, the value is set equal to the instrument's current RBW value and it displays that value on the softkey, but the softkey is grayed out.
Preset	100 kHz
State Saved	Saved in instrument state.
Min	390 Hz
Max	8 MHz
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00

**Off**

Pressing this key, turns the demodulation function off.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen</b>
Example	DEM OFF turns the demodulation function OFF
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

**Demod Time**

Sets the amount of time the instrument demodulates the signal after each sweep. The demodulated signal can be heard through the speaker during demodulation. In zero span, demodulation can be performed continuously, making this parameter not applicable, hence it is grayed out in zero span.

Key Path	<b>Meas Setup, Analog Demod Tune&amp;Listen</b>
<b>Remote Command</b>	[ :SENSe ] :DEMod:TIME <time> [ :SENSe ] :DEMod:TIME?
Example	DEM:TIME 500 ms DEM:TIME?
Notes	This key / command is grayed out in zero span
Dependencies	Unavailable in zero span.
Preset	500 ms
State Saved	Saved in instrument state.
Min	2 ms
Max	100 s
Initial S/W Revision	Prior to A.02.00

**Demod State (Remote Command Only)**

Sets or queries the state of the Analog Demod Tune and Listen function. Setting the state to ON with this command will select AM demodulation by default and activate it (turn it on).

The response to the query is determined by the current setting of [ :SENSe ] :DEMod AM|FM|PM|OFF. The response will be 1 if AM, FM, PM are selected, or 0 if OFF is selected..

<b>Remote Command:</b>	[ :SENSe ] :DEMod:STATe OFF ON 0 1 [ :SENSe ] :DEMod:STATe?
Preset:	OFF
Initial S/W Revision:	Prior to A.02.00

## Meas Setup

### Noise Source

This menu allows you to turn the noise source power on or off when making manual noise figure measurements. It is included in the Spectrum Analyzer Mode as an adjunct to the full controls that are available in the Noise Figure Mode. It is only available in the Swept SA measurement of the Spectrum Analyzer Mode.

See “[More Information](#)” on page 1632.

Key Path	<b>Meas Setup</b>
Remote Command	:SOURce:NOISe:TYPE NORMal   SNS :SOURce:NOISe:TYPE?
Example	SOUR:NOIS:TYPE NORM
Couplings	If no SNS is connected, this parameter will be set to “Normal” When Type is set to “SNS” and the SNS is disconnected, this parameter gets bumped to “Normal” When an SNS is not connected, the SNS type will be grayed (disabled).
Preset	Normal
State Saved	Saved in instrument state.
Range	Normal   SNS
Remote Compatibility Info	In previous Noise Figure analysis applications, this command could optionally be preceded with the :SENSE keyword. The optional :SENSE keyword is no longer supported.
Initial S/W Revision	Prior to A.02.00

### More Information

There are 2 types of noise sources: a Smart Noise Source (SNS), and a "Normal" noise source - e.g. 346 series. This menu allows the user to control both. The SNS has its own connector on the rear of the analyzer and when it is connected the user can then select it from the “Type” 1 of N, allowing the State parameter to then control the SNS. The "Normal" source is controlled by a BNC connector that supplies 28V. If SNS is NOT connected then the “state” parameter controls the "Normal" noise source 28V BNC port. If both are connected the “Type” parameter will determine which source the “State” parameter will control. Two sources can never be controlled together. The “SNS attached” SCPI query detailed below can be used remotely to determine if an SNS is connected. SNS functionality is limited to turning on and off only. The SNS ENR data and temperature cannot be queried, unless the Noise Figure application is installed. The SNS ENR data is issued in printed form when an SNS is purchased or can be read from the analyzer’s Noise Figure application if installed, or other Agilent noise figure instruments that support the SNS (NFA and ESA with option 219).

When first entering the Swept SA measurement the “State” will be set to OFF and the 28v BNC drive and SNS turned off to ensure the two are in sync. When the Swept SA measurement is exited, the “State” parameter will be set to OFF and the 28v BNC and SNS drive turned off.

For making manual noise figure measurements the following setup is recommended:

Set the SPAN to Zero

Set attenuation to 0 dB

Set the PRE-AMP ON

Set the RBW to 4MHz

Set the Detector to AVERAGE

Set the sweep time to 16ms - sets the variance correctly for good results.

Set a Band/Interval Power Marker function and set the interval over the full width of trace i.e. Left to 0s and Right to 16ms

### State

This key turns the Noise Source on and off.

Key Path	Meas Setup
<b>Remote Command</b>	:SOURce:NOISe[:STATe] ON OFF 1 0 :SOURce:NOISe[:STATe]?
Example	SOUR:NOIS OFF
Couplings	<ol style="list-style-type: none"> <li>1. If an SNS is connected, and the Type is set to SNS, this parameter turns the SNS on and off.</li> <li>2. When an SNS is not connected this parameter turns the BNC 28V output on and off.</li> <li>3. When the SA mode is first entered this parameter is set to OFF and the 28v drive turned OFF.</li> <li>4. When the SA mode is exited this parameter is set to OFF and the 28v drive turned OFF.</li> </ol>
Preset	OFF
State Saved	Saved in instrument state.
Remote Compatibility Info	In previous Noise Figure analysis applications, this command could optionally be preceded with the :SENSe keyword. The optional :SENSe keyword is no longer supported.
Initial S/W Revision	Prior to A.02.00

### SNS Attached (Remote Command Only)

If an Smart Noise Source (SNS) is present this command will return 1 otherwise it will return 0.

<b>Remote Command:</b>	:SOURce:NOISe:SNS:ATTached?
Example:	SOUR:NOIS:SNS:ATT?
Preset:	OFF

## Meas Setup

State Saved:	No
Remote Compatibility Info:	In previous Noise Figure analysis applications, this command could optionally be preceded with the :SENSe keyword. The optional :SENSe keyword is no longer supported.
Initial S/W Revision:	Prior to A.02.00

## Meas Preset

This key returns the Meas Local variables in the Swept SA measurement to their preset values. This is the same as sending the SCPI command CONF:SAN.

The only exception is Limits On/Off, which is a persistent Meas Local variable. It will be set to Off by a Mode Preset but not by Meas Preset.

Key Path	<b>Meas Setup</b>
Initial S/W Revision	Prior to A.02.00

## Mode

The Mode key allows you to select the available measurement applications or “Modes”. Modes are a collection of measurement capabilities packaged together to provide an instrument personality that is specific to your measurement needs. Each application software product is ordered separately by Model Number and must be licensed to be available. Once an instrument mode is selected, only the commands that are valid for that mode can be executed.

**NOTE** Key operation can be different between modes. The information displayed in Help is about the current mode.

To access Help for a different Mode you must first exit Help (by pressing the Cancel (Esc) key). Then select the desired mode and re-access Help.

For more information on Modes, preloading Modes, and memory requirements for Modes, see [“More Information” on page 1636](#)

Key Path	<b>Front-panel key</b>
<b>Remote Command</b>	:INSTrument [ :SElect ] SA   BASIC   WCDMA   CDMA2K   EDGE GSM   PNOISE   CDMA1XEV   CWLAN   WIMAXOFDMA   CWIMAXOFDM   VSA   VSA89601   LTE   IDEN   WIMAXFIXED   LTE TDD   TDSCDMA   NFIGURE   ADEMOD   DVB   DTMB   ISDBT   CMMB   RLC :INSTrument [ :SElect ] ?
Example	:INST SA
Notes	The available parameters are dependent upon installed and licensed applications resident in the instrument. Parameters given here are an example, specific parameters are in the individual Application.  A list of the valid mode choices is returned with the INST:CAT? Query.
Preset	Not affected by Preset. Set to SA following Restore System Defaults, if SA is the default mode.
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

Example	:INST ‘SA’
Initial S/W Revision	Prior to A.02.00
Notes	NOTE: The query is not a quoted string. It is an enumeration as indicated in the Instrument Select table above.  The command must be sequential: i.e. continued parsing of commands cannot proceed until the instrument select is complete and the resultant SCPI trees are available.

Backwards Compatibility SCPI	:INSTrument[:SElect] 'SA' 'PNOISE' 'EDGE' 'GSM' 'BASIC'
---------------------------------	---

### More Information

The Mode name appears on the banner after the word "Agilent" followed by the Measurement Title. For example, for the Spectrum Analyzer mode with the Swept Sa measurement running:

It is possible to specify the order in which the Modes appear in the Mode menu, using the Configure Applications utility (System, Power On, Configure Applications). It is also possible, using the same utility, to specify a subset of the available applications to load into memory at startup time, which can significantly decrease the startup time of the analyzer. During runtime, if an application that is not loaded into memory is selected (by either pressing that applications Mode key or sending that applications :INST:SEL command over SCPI), there will be a pause while the Application is loaded. During this pause a message box that says "Loading application, please wait..." is displayed.

Each application (Mode) that runs in the X-Series signal analyzers consumes virtual memory. The various applications consume varying amounts of virtual memory, and as more applications run, the memory consumption increases. Once an application is run, some of its memory remains allocated even when it is not running, and is not released until the analyzer program (xSA.exe) is shut down.

Agilent characterizes each Mode and assigns a memory usage quantity based on a conservative estimate. There is a limited amount of virtual memory available to applications (note that this is virtual memory and is independent of how much physical RAM is in the instrument). The instrument keeps track of how much memory is being used by all loaded applications - which includes those that preloaded at startup, and all of those that have been run since startup.

When you request a Mode that is not currently loaded, the instrument looks up the memory estimate for that Mode, and adds it to the residual total for all currently loaded Modes. If there is not enough virtual memory to load the Mode, a dialog box and menu will appear that gives you four options:

1. Close and restart the analyzer program without changing your configured preloads. This may free up enough memory to load the requested Mode, depending on your configured preloads
2. Clear out all preloads and close and restart the analyzer program with only the requested application preloaded, and with that application running. This choice is guaranteed to allow you to run the requested application; but you will lose your previously configured preloads. In addition, there may be little or no room for other applications, depending on the size of the requested application.
3. Bring up the Configure Applications utility in order to reconfigure the preloaded apps to make room for the applications you want to run (this will then require restarting the analyzer program with your new configuration). This is the recommended choice because it gives you full flexibility to select exactly what you want.
4. Exit the dialog box without doing anything, which means you will be unable to load the application you requested.

In each case except 4, this will cause the analyzer software to close, and you will lose all unsaved traces and results.

If you attempt to load a mode via SCPI that will exceed memory capacity, the Mode does not load and an error message is returned:

```
-225,"Out of memory;Insufficient resources to load Mode (mode name)"
```



where "mode name" is the SCPI parameter for the Mode in question, e.g. SA for Spectrum Analyzer Mode

### Application Mode Number Selection (Remote Command Only)

Select the measurement mode by its mode number. The actual available choices depend upon which applications are installed in your instrument. The modes appear in this table by NSEL number, which is not the same as their order in the Mode menu (see [“Detailed List of Modes”](#) on page 1641 for the mode order).

Mode	:INSTrument:NSElect <integer>	:INSTrument[:SElect] <parameter>
Spectrum Analyzer	1	SA
I/Q Analyzer (Basic)	8	BASIC
WCDMA with HSDPA/HSUPA	9	WCDMA
cdma2000	10	CDMA2K
GSM/EDGE/EDGE Evo	13	EDGE GSM
Phase Noise	14	PNOISE
1xEV-DO	15	CDMA1XEV
Combined WLAN	19	CWLAN
802.16 OFDMA (WiMAX/WiBro)	75	WIMAXOFDMA
Combined Fixed WiMAX	81	CWIMAXOFDM
Vector Signal Analyzer (VXA)	100	VSA
89601 VSA	101	VSA89601
LTE	102	LTE
iDEN/WiDEN/MotoTalk	103	IDEN
802.16 OFDM (Fixed WiMAX)	104	WIMAXFIXED
LTE TDD	105	LTETDD
TD-SCDMA with HSPA/8PSK	211	TDSCDMA
Noise Figure	219	NFIGURE
Analog Demod	234	ADEMODO
DVB-T/H	235	DVB
DTMB	236	DTMB
ISDB-T	239	ISDBT
CMMB	240	CMMB

Common Measurement Functions  
Mode

Remote Language Compatibility	266	RLC
-------------------------------	-----	-----

<b>Remote Command:</b>	:INSTRument:NSElect <integer> :INSTRument:NSElect?
Example:	:INST:NSEL 1
Notes:	SA mode is 1 The command must be sequential: i.e. continued parsing of commands cannot proceed until the instrument select is complete and the resultant SCPI trees are available.
Preset:	Not affected by Preset. Set to default mode (1 for SA mode) following Restore System Defaults.
State Saved:	Saved in state
Initial S/W Revision:	Prior to A.02.00

### Application Mode Catalog Query (Remote Command Only)

Returns a string containing a comma separated list of names of all the installed and licensed measurement modes (applications). These names can only be used with the :INSTRument[:SElect] command.

<b>Remote Command:</b>	:INSTRument:CATalog?
Example:	:INST:CAT?
Notes:	Query returns a quoted string of the installed and licensed modes separated with a comma. Example: "SA,PNOISE,WCDMA"
Initial S/W Revision:	Prior to A.02.00

### Application Identification (Remote Commands Only)

Each entry in the Mode Menu will have a Model Number and associated information: Version, and Options.

This information is displayed in the Show System screen. The corresponding SCPI remote commands are defined here.

### Current Application Model

Returns a string that is the Model Number of the currently selected application (mode).

<b>Remote Command:</b>	:SYSTem:APPLication[:CURRent][:NAME]?
Example:	:SYST:APPL?

Notes:	Query returns a quoted string that is the Model Number of the currently selected application (Mode). Example:  "N9060A"  String length is 6 characters.
Preset:	Not affected by Preset
State Saved:	Not saved in state, the value will be the selected application when a Save is done.
Initial S/W Revision:	Prior to A.02.00

### Current Application Revision

Returns a string that is the Revision of the currently selected application (mode).

<b>Remote Command:</b>	:SYSTem:APPLication[:CURRent]:REVision?
Example:	:SYST:APPL:REV?
Notes:	Query returns a quoted string that is the Revision of the currently selected application (Mode). Example:  "1.0.0.0"  String length is a maximum of 23 characters. (each numeral can be an integer + 3 decimal points)
Preset:	Not affected by a Preset
State Saved:	Not saved in state, the value will be the selected application when a Save is done.
Initial S/W Revision:	Prior to A.02.00

### Current Application Options

Returns a string that is the Options list of the currently selected application (Mode).

<b>Remote Command:</b>	:SYSTem:APPLication[:CURRent]:OPTion?
Notes:	Query returns a quoted string that is the Option list of the currently selected application (Mode). The format is the name as the *OPT? or SYSTem:OPTion command: a comma separated list of option identifiers. Example:  "1FP,2FP"  String length is a maximum of 255 characters.
Preset:	Not affected by a Preset

Common Measurement Functions  
Mode

State Saved:	Not saved in state per se, the value will be the selected application when a Save is invoked.
Example:	:SYST:APPL:OPT?
Initial S/W Revision:	Prior to A.02.00

### Application Identification Catalog (Remote Commands Only)

A catalog of the installed and licensed applications (Modes) can be queried for their identification.

#### Application Catalog number of entries

Returns the number of installed and licensed applications (Modes).

<b>Remote Command:</b>	:SYSTem:APPLication:CATalog[:NAME]:COUNT?
Example:	:SYST:APPL:CAT:COUN?
Preset:	Not affected by Preset
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00

#### Application Catalog Model Numbers

Returns a list of Model Numbers for the installed and licensed applications (Modes).

<b>Remote Command:</b>	:SYSTem:APPLication:CATalog[:NAME]?
Example:	:SYST:APPL:CAT?
Notes:	Returned value is a quoted string of a comma separated list of Model Numbers. Example, if SAMS and Phase Noise are installed and licensed: "N9060A,N9068A"  String length is COUNT * 7 - 1. (7 = Model Number length + 1 for comma. -1 = no comma for the 1st entry.)
Preset:	Not affected by a Preset
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00

#### Application Catalog Revision

Returns the Revision of the provided Model Number.

<b>Remote Command:</b>	:SYSTem:APPLication:CATalog:REvision? <model>
Example:	:SYST:APPL:CAT:REV? 'N9060A'

Notes:	Returned value is a quoted string of revision for the provided Model Number. The revision will be a null-string ("") if the provided Model Number is not installed and licensed. Example, if SAMS is installed and licensed:  "1.0.0.0"
Preset:	Not affected by a Preset.
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00

### Application Catalog Options

Returns a list of Options for the provided Model Number

<b>Remote Command:</b>	:SYSTem:APPLication:CATalog:OPTion? <model>
Example:	:SYST:APPL:CAT:OPT? 'N9060A'
Notes:	Returned value is a quoted string of a comma separated list of Options, in the same format as *OPT? or :SYSTem:OPTion?. If the provided Model Number is not installed and licensed a null-string ("") will be returned. Example, if SAMS is installed and licensed:  "2FP"  String length is a maximum of 255 characters.
Preset:	Not affected by a Preset
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00

### Detailed List of Modes

#### Spectrum Analyzer

Selects the Spectrum Analyzer mode for general purpose measurements. There are several measurements available in this mode. General spectrum analysis measurements, in swept and zero span, can be done using the first key in the Meas menu, labeled Swept SA. Other measurements in the Meas Menu are designed to perform specialized measurement tasks, including power and demod measurements.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
----------	------

## Common Measurement Functions Mode

Example	INST:SEL SA INST:NSEL 1
Initial S/W Revision	Prior to A.02.00

### **IQ Analyzer (Basic)**

The IQ Analyzer Mode makes general purpose frequency domain and time domain measurements. These measurements often use alternate hardware signal paths when compared with a similar measurement in the Signal Analysis Mode using the Swept SA measurement. These frequency domain and time domain measurements can be used to output I/Q data results when measuring complex modulated digital signals.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	<b>Mode</b>
Example	INST:SEL BASIC INST:NSEL 8
Initial S/W Revision	Prior to A.02.00

### **W-CDMA with HSDPA/HSUPA**

Selects the W-CDMA with HSDPA/HSUPA mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	<b>Mode</b>
Example	INST:SEL WCDMA INST:NSEL 9
Initial S/W Revision	Prior to A.02.00

### **GSM/EDGE/EDGE Evo**

Selects the GSM with EDGE mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Example	INST:SEL EDGEGSM INST:NSEL 13
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Mode</b>

Modified at S/W Revision	A.02.00
--------------------------	---------

### 802.16 OFDMA (WiMAX/WiBro)

Selects the OFDMA mode for general purpose measurements of WiMAX signals. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL WIMAXOFDMA INST:NSEL 75
Initial S/W Revision	Prior to A.02.00

### Vector Signal Analyzer (VXA)

The 89601X Vector Signal Analyzer provides vector-signal analysis measurement capability. It provides 3 main measurements that allow you to measure the signal quality of all varieties of RF modulation:

- Digital Demodulation
- Analog Demodulation
- Vector Signal Analysis

There are advanced modulation analysis and troubleshooting capabilities including the following communications formats: AM, FM, PM, WiMAX, W-CDMA, 2G, 3G, 3.5G, WLAN, digital video, and more. It also provides standard-specific measurements for analysis of iDEN, WiDEN, and MotoTalk signals with Option H09.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL VSA INST:NSEL 100
Initial S/W Revision	Prior to A.02.00

### Phase Noise

The Phase Noise mode provides pre-configured measurements for making general purpose measurements of device phase noise.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
----------	------

## Common Measurement Functions

### Mode

Example	INST:SEL PNOISE or INST:NSEL 14
Initial S/W Revision	Prior to A.02.00

### Noise Figure

The Noise Figure mode provides pre-configured measurements for making general purpose measurements of device noise figure.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	<b>Mode</b>
Example	INST:SEL NFIGURE Or INST:NSEL 219
Initial S/W Revision	Prior to A.02.00

### Analog Demod

Selects the Analog Demod mode for making measurements of AM, FM and phase modulated signals.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	<b>Mode</b>
Example	INST:SEL ADEMOM INST:NSEL 234
Initial S/W Revision	Prior to A.02.00

### TD-SCDMA with HSPA/8PSK

Selects the TD-SCDMA mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	<b>Mode</b>
Example	INST:SEL TDSCDMA INST:NSEL 211
Initial S/W Revision	Prior to A.02.00



### cdma2000

Selects the cdma2000 mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL CDMA2K INST:NSEL 10
Initial S/W Revision	Prior to A.02.00

### 1xEV-DO

Selects the 1xEV-DO mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL CDMA1XEV INST:NSEL 15
Initial S/W Revision	Prior to A.02.00

### LTE

Selects the LTE mode for general purpose measurements of signals following the LTE FDD standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL LTE INST:NSEL 102
Initial S/W Revision	Prior to A.02.00

### LTE TDD

Selects the LTE TDD mode for general purpose measurements of signals following the LTE TDD standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If

## Common Measurement Functions

### Mode

it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL LTETDD INST:NSEL 105
Initial S/W Revision	A.03.00

### DVB-T/H

Selects the DVB-T/H mode for measurements of digital video signals using this format. There are several power and demod measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL DVB INST:NSEL 235
Initial S/W Revision	A.02.00

### DTMB

Selects the DTMB mode for measurements of digital video signals using this format. There are several power and demod measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL DTMB INST:NSEL 236
Initial S/W Revision	A.02.00

### ISDB-T

Selects the ISDB-T mode for measurements of digital video signals using this format. There are several power and demod measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL ISDBT INST:NSEL 239

Initial S/W Revision	A.03.00
----------------------	---------

**CMMB**

Selects the CMMB mode for measurements of digital video signals using this format. There are several power and demod measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL CMMB INST:NSEL 240
Initial S/W Revision	A.03.00

**Combined WLAN**

Selects the CWLAN mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL CWLAN INST:NSEL 19
Initial S/W Revision	A.02.00

**Combined Fixed WiMAX**

Selects the Combined Fixed WiMAX mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL CWIMAXOFDM INST:NSEL 81
Initial S/W Revision	A.02.00

**802.16 OFDM (Fixed WiMAX)**

Selects the 802.16 OFDM (Fixed WiMAX) mode. This mode allows modulation quality measurements of signals that comply with IEEE 802.16a–2003 and IEEE 802.16–2004 standards, with flexibility to measure nonstandard OFDM formats. Along with the typical digital demodulation measurement results,

## Common Measurement Functions

### Mode

several additional 802.16 OFDM unique trace data formats and numeric error data results provide enhanced data analysis.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL WIMAXFIXED INST:NSEL 104
Initial S/W Revision	A.02.00

### iDEN/WiDEN/MOTOTalk

Selects the iDEN/WiDEN/MOTOTalk mode for general purpose measurements of iDEN and iDEN-related signals. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL IDEN INST:NSEL 103
Initial S/W Revision	A.02.00

### Remote Language Compatibility

The Remote Language Compatibility (RLC) mode provides remote command backwards compatibility for the 8560 series of spectrum analyzers, known as legacy spectrum analyzers.

---

**NOTE** After changing into or out of RLC mode, allow a 1 second delay before sending any subsequent commands.

---

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path	Mode
Example	INST:SEL RLC Or INST:NSEL 266
Initial S/W Revision	Prior to A.02.00

### 89601 VSA

Selecting the 89601 VSA mode will start the 89600-Series VSA software application. The 89600 VSA

software is powerful, PC-based software, offering the industry's most sophisticated general purpose and standards specific signal evaluation and troubleshooting tools for the R&D engineer. Reach deeper into signals, gather more data on signal problems, and gain greater insight.

- Over 30 general-purpose analog and digital demodulators ranging from 2FSK to 1024QAM
- Standards specific modulation analysis including:
- Cell: GSM, cdma2000, WCDMA, TD-SCDMA and more
- Wireless networking: 802.11a/b/g, 802.11n, 802.16 WiMAX (fixed/mobile), UWB
- RFID
- Digital satellite video and other satellite signals, radar, LMDS
- Up to 400K bin FFT, for the highest resolution spectrum analysis
- A full suite of time domain analysis tools, including signal capture and playback, time gating, and CCDF measurements
- Six simultaneous trace displays and the industry's most complete set of marker functions
- Easy-to-use Microsoft ® Windows ® graphical user interface

For more information see the Agilent 89600 Series VSA web site at [www.agilent.com/find/89600](http://www.agilent.com/find/89600)

To learn more about how to use the 89600 VSA running in the X-Series, after the 89600 VSA application is running, open the 89600 VSA Help and open the "About Agilent X-Series Signal Analyzers (MXA/EXA) with 89600-Series Software" help topic.

Key Path	Mode
Example	INST:SEL VSA89601 INST:NSEL 101
Initial S/W Revision	Prior to A.02.00

## Global Settings

Opens up a menu that allows you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. No matter what Mode you are in when you set the “Global Center Frequency” switch to on, it applies to all Modes that support Global Settings.

Key Path	Mode Setup
Initial S/W Revision	Prior to A.02.00

## Global Center Freq

The software maintains a Mode Global value called “Global Center Freq”.

When the **Global Center Freq** key is switched to **On** in any mode, the current mode’s center frequency is copied into the Global Center Frequency, and from then on all modes which support global settings use the Global Center Frequency. So you can switch between any of these modes and the Center Freq

## Common Measurement Functions

### Mode

will remain unchanged.

Adjusting the Center Freq of any mode which supports Global Settings, while **Global Center Freq** is **On**, will modify the Global Center Frequency.

When **Global Center Freq** is turned **Off**, the Center Freq of the current mode is unchanged, but now the Center Freq of each mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **On**, the Global Center Freq is preset to the preset Center Freq of the current mode.

This function is reset to Off when the Restore Defaults key is pressed in the Global Settings menu, or when **System, Restore Defaults, All Modes** is pressed.

Key Path	Mode Setup, Global Settings
Scope	Mode Global
<b>Remote Command</b>	:INSTrument:COUPle:FREQuency:CENTer ALL NONE :INSTrument:COUPle:FREQuency:CENTer?
Example	INST:COUP:FREQ:CENT ALL INST:COUP:FREQ:CENT?
Preset	Set to Off on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range	On Off
Initial S/W Revision	Prior to A.02.00

<b>Remote Command:</b>	:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF :GLOBal:FREQuency:CENTer[:STATe]?
Preset:	Off
Initial S/W Revision:	Prior to A.02.00

## Restore Defaults

This key resets all of the functions in the Global Settings menu to Off. This also occurs when **System, Restore Defaults, All Modes** is pressed.

Key Path	Mode Setup, Global Settings
<b>Remote Command</b>	:INSTrument:COUPle:DEFault
Example	INST:COUP:DEF
Backwards Compatibility SCPI	:GLOBal:DEFault
Initial S/W Revision	Prior to A.02.00

---

## Mode Setup

This key accesses a menu to allow you to select mode parameters. These settings apply to all measurements in the current mode.

Key Path	Front-panel key
----------	-----------------

### Radio

Accesses the Radio menu.

Key Path	<b>Mode Setup</b>
----------	-------------------

### Device

Allows you to specify the device to be used.

<b>Remote Command</b>	[ :SENSe]:RADio:STANdard:DEVIce BTS MS [ :SENSe]:RADio:STANdard:DEVIce?
Example	RAD:STAN:DEV MS RAD:STAN:DEV?
Key Path	<b>Mode Setup, Radio</b>
Mode	WCDMA
Scope	Meas Global
Preset	BTS
State Saved	Saved in instrument state.
Range	BTS   MS
Initial S/W Revision	Prior to A.02.00

### Demod

Accesses the Demod menu.

Key Path	<b>Mode Setup</b>
----------	-------------------

### HSPA enable

Allows you to specify the HSDPA/HSUPA option enable On/Off. This selection is necessary because some of the auto detection functions which are expecting a HSPA signal are less tolerant when the signal

## Mode Setup

is noisy or distorted. So, you should turn it off when the HSPA signal is not expected.

<b>Remote Command</b>	<code>[ :SENSe]:RADio:CONFiGure:HSDPa[:STATe] 0 1 OFF ON</code> <code>[ :SENSe]:RADio:CONFiGure:HSDPa[:STATe]?</code>
Example	<code>RAD:CONF:HSDP 0</code> <code>RAD:CONF:HSDP?</code>
Key Path	<b>Mode Setup, Demod</b>
Mode	WCDMA
Scope	Meas Global
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### HSPA+ enable

Allows you to specify the HSPA+ option enable On/Off. This selection is necessary because some of the auto detection functions which are expecting a HSPA+ signal are less tolerant when the signal is noisy or distorted. So, you should turn it off when the HSPA+ signal is not expected.

<b>Remote Command</b>	<code>[ :SENSe]:RADio:CONFiGure:EHSPa[:STATe] OFF ON 0 1</code> <code>[ :SENSe]:RADio:CONFiGure:EHSPa[:STATe]?</code>
Example	<code>RAD:CONF:EHSP 0</code> <code>RAD:CONF:EHSP?</code>
Key Path	<b>Mode Setup, Demod</b>
Mode	WCDMA
Scope	Meas Global
Notes	When HSPA enable is OFF, HSPA+ function is disabled too.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	A.03.00

### Restore Mode Defaults

See [“Restore Mode Defaults” on page 184.](#)



## Peak Search

Pressing the Peak Search key displays the Peak Search menu and places the selected marker on the trace point with the maximum y-axis value for that marker's trace. The Peak Search features allow you to define specific search criteria to determine which signals can be considered peaks, excluding unwanted signals from the search.

See [“More Information” on page 1653](#).

<b>Remote Command:</b>	:CALCulate:MARKer [1]   2   3   4   5   6   7   8   9   10   11   12:MAXimum
Example:	CALC:MARK2:MAX performs a peak search using marker 2. CALC:MARK2:Y? queries the marker amplitude (Y-axis) value for marker 2. CALC:MARK2:X? queries the marker frequency or time (X-axis) value for marker 2. SYST:ERR? can be used to query the errors to determine if a peak is found. The error -200 will be returned after an unsuccessful search.
Notes:	Sending this command selects the subopcoded marker.
Initial S/W Revision:	Prior to A.02.00

### More Information

If **Same as “Next Peak” Criteria** is selected, and either **Pk Excursion** or **Pk Threshold** are on, a signal must meet those criteria. If no valid peak is found, a message is generated. And then the marker is not moved. When **Highest Peak** is on, or both **Pk Excursion** and **Pk Threshold** are off, the marker is always placed at the point on the trace with the maximum y-axis value, even if that point is on the very edge of the trace (exception: negative frequencies and signals close to the LO are not searched at all).

Pressing Peak Search with the selected marker off causes the selected marker to be set to **Normal** at the center of the screen, then a peak search is immediately performed.

Pressing the front panel Peak Search key always does a peak search. Occasionally, you may need to get to the Peak Search menu key functions without doing a peak search. You can do this by first accessing the Peak Search menu. Then go to the other menus that you need to access. Finally, you can get back to the Peak Search key menu by using the front panel Return key and pressing it as many times as required to navigate back through the previously accessed menus until you get back to the Peak Search menu.

### Next Peak

Pressing Next Peak moves the selected marker to the peak that has the next highest amplitude less than the marker's current value. Only peaks which meet all enabled peak criteria are considered. If there is no valid peak lower than the current marker position, an error is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Key Path	<b>Peak Search</b>
----------	--------------------

**Peak Search**

<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT
Example	CALC:MARK2:MAX:NEXT !Selects marker 2 and moves it to the peak that is closest in amplitude to the current peak, but the next lower value.
Notes	Sending this command selects the subopcoded marker.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00

**Next Pk Right**

Pressing Next Pk Right moves the selected marker to the nearest peak right of the current marker which meets all enabled peak criteria. If there is no valid peak to the right of the current marker position, an error is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Key Path	<b>Peak Search</b>
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT
Example	CALC:MARK2:MAX:RIGHT !Selects marker 2 and moves it to the next peak to the right of the current marker position.
Notes	Sending this command selects the subopcoded marker.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00

**Next Pk Left**

Pressing Next Pk Left moves the selected marker to the nearest peak left of the current marker which meets all enabled peak criteria. If there is no valid peak to the left of the current marker position, an error is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Key Path	<b>Peak Search</b>
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT
Example	CALC:MARK2:MAX:LEFT selects marker 2 and moves it to the next peak to the left of the current marker position.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00

## Marker Delta

Performs the same function as the Delta 1-of-N selection key in the Marker menu. Basically this sets the control mode for the selected marker to Delta mode. See the Section [““Marker” on page 1531](#)” for the complete description of this function. The key is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and change the marker’s control mode to Delta without having to access two separate menus.

Initial S/W Revision	Prior to A.02.00
Key Path	<b>Peak Search or Marker</b>
Notes	Whenever the selected marker is in Delta mode and you are in the Peak Search menu, the Marker Delta key should be highlighted and the active function for setting its delta value turned on.

## Mkr->CF

Assigns the selected marker’s frequency to the Center Frequency setting. See the Section [““Marker To” on page 1571](#)” for the description of this function. The key is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and marker to CF without having to access two separate menus.

Key Path	<b>Peak Search or Marker -&gt;</b>
Dependencies	Same as specified under Marker To
Initial S/W Revision	Prior to A.02.00

## Mkr->Ref Lvl

Assigns the selected marker’s level to the Reference Level setting. See the Section [““Marker To” on page 1571](#)” for the description of this function. The key is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and marker to RL without having to access two separate menus.

Key Path	<b>Peak Search or Marker -&gt;</b>
Dependencies	Same as specified under Marker To
Initial S/W Revision	Prior to A.02.00

## Peak Criteria

Pressing this key opens the Peak Criteria menu and allows you to adjust the Pk Threshold and Pk Excursion parameters used for peak search functions.

For a signal to be identified as a peak it must meet certain criteria. Signals in the negative frequency range and signals very close to 0 Hz are ignored. If either the peak excursion or peak threshold functions are on, then the signal must satisfy those criteria before being identified as a peak.

When peak excursion and peak threshold are both off:

**Peak Search**

**Peak Search, Continuous Peak Search**, and maximum part of **Pk-Pk Search** will search the trace for the point with the highest y-axis value which does not violate the LO feedthrough rules. A rising and falling slope are not required for these three peak search functions.

The remaining search functions **Next Peak, Next Pk Right**, etc. will only consider trace points which have a rising and falling slope on the left and right respectively.

Key Path	<b>Peak Search</b>
Initial S/W Revision	Prior to A.02.00

**“Peak Search” Criteria**

This menu lets you decide what kind of search you want to do when the Peak Search key is pressed (or the equivalent SCPI command sent).

Note that there are two “types” of peak search functions. One type is the “Peak Search” type, the other type is the “Next Peak” type. “Next Peak” searches (for example, Next Peak, Next Pk Left, Next Pk Right) are always checked using the Excursion and Threshold criteria as long as these criteria are On. The “Peak Search” type of search, simply finds the highest point on the trace. However you can change the “Peak Search” type of search so that it also uses the Excursion and Threshold criteria. This allows you to find the Maximum point on the trace that also obeys the Excursion and/or Threshold criteria.

When **Highest Peak** is selected, pressing **Peak Search** simply finds the highest peak on the marker’s trace. If **Same as “Next Peak” Criteria** is selected, then the search is also forced to consider the Excursion and Threshold found under the **“Next Peak” Criteria** menu.

Key Path	<b>Peak Search, Peak Criteria</b>
<b>Remote Command</b>	:CALCulate:MARKer:PEAK:SEARch:MODE MAXimum PARAmeter :CALCulate:MARKer:PEAK:SEARch:MODE?
Notes	MAXimum corresponds to the <b>Highest Peak</b> setting PARAmeter corresponds to the <b>Same as “Next Peak” Criteria</b> setting
Preset	MAXimum
State Saved	Saved in instrument state.
Readback line	Current state
Initial S/W Revision	Prior to A.02.00

**Highest Peak** When this key is selected, pressing the Peak Search key or issuing the equivalent SCPI command finds the maximum point on the trace, subject to the peak-search qualifications. This also affects the Peak Search half of Pk-Pk search and the Continuous Peak Search.

Key Path	<b>Peak Search, Peak Criteria, “Peak Search” Criteria</b>
Example	CALC:MARK:PEAK:SEAR:MODE MAX
Readback	Highest Peak

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**Same as “Next Peak” Criteria** When this key is selected, pressing the Peak Search key or issuing the equivalent SCPI command finds the maximum point on the trace, but subject to the Excursion and Threshold set under the Next Peak Criteria menu. The search is, of course, also subject to the peak-search qualifications. This also affects the Peak Search half of Pk-Pk search and the Continuous Peak Search.

Key Path	<b>Peak Search, Peak Criteria, “Peak Search” Criteria</b>
Example	CALC:MARK:PEAK:SEAR:MODE PAR
Readback	Use Excurs & Thr
Initial S/W Revision	Prior to A.02.00

**“Next Peak” Criteria**

This key opens up a menu which allows you to independently set the Peak Excursion and Peak Threshold and turn them on and off.

Key Path	<b>Peak Search, Peak Criteria</b>
Initial S/W Revision	Prior to A.02.00

**Pk Excursion On/Off** Turns the peak excursion requirement on/off and sets the excursion value. The value defines the minimum amplitude variation (rise and fall) required for a signal to be identified as peak. For example, if a value of 6 dB is selected, peak search functions like the marker Next Pk Right function move only to peaks that rise and fall 6 dB or more.

When both Pk Excursion and Pk Threshold are on, a signal must rise above the Pk Threshold value by at least the **Peak Excursion** value and then fall back from its local maximum by at least the **Peak Excursion** value to be considered a peak.

---

**NOTE** In the event that a sequence of trace points with precisely the same values represents the maximum, the leftmost point is found.

---

See [“More Information” on page 1658](#).

Key Path	<b>Peak Search, Peak Criteria, “Next Peak” Criteria</b>
<b>Remote Command</b>	:CALCulate:MARKer:PEAK:EXCursion <rel_ampl> :CALCulate:MARKer:PEAK:EXCursion? :CALCulate:MARKer:PEAK:EXCursion:STATe OFF ON 0 1 :CALCulate:MARKer:PEAK:EXCursion:STATe?

## Peak Search

Example	:CALC:MARK:PEAK:EXC:STAT ON :CALC:MARK:PEAK:EXC 30 DB sets the minimum peak excursion requirement to 30 dB
Dependencies	Available only when Y axis unit is amplitude units, otherwise grayed out.
Couplings	Whenever you adjust the value of Pk Excursion (with the knob, step keys, or by completing a numeric entry), and Peak Threshold is turned ON, the Peak Threshold Line and the Peak Excursion Region are displayed.
Preset	6.0 dB ON
Preset	6.0 dB ON
State Saved	Saved in State
Min	0.0 dB
Max	100.0 dB
Initial S/W Revision	Prior to A.02.00

**More Information**

If two signals are very close together and the peak excursion and threshold criteria are met at the outside edges of the combined signals, this function finds the highest of these two signals as a peak (or next peak). However, if a signal appears near the edge of the screen such that the full extent of either the rising or falling edge cannot be determined, and the portion that is on screen does not meet the excursion criteria, then the signal cannot be identified as a peak.

When measuring signals near the noise floor, you can reduce the excursion value even further to make these signals recognizable. To prevent the marker from identifying noise as signals, reduce the noise floor variations to a value less than the peak-excursion value by reducing the video bandwidth or by using trace averaging.

**Pk Threshold On/Off** Turns the peak threshold requirement on/off and sets the threshold value. The peak threshold value defines the minimum signal level (or min threshold) that the peak identification algorithm uses to recognize a peak.

When both Pk Excursion and Pk Threshold are on, a signal must rise above the Pk Threshold value by at least the **Peak Excursion** value and then fall back from its local maximum by at least the **Peak Excursion** value to be considered a peak.

For example, if a threshold value of  $-90$  dBm is selected, the peak search algorithm will only consider signals with amplitude greater than the  $-90$  dBm threshold. If a threshold value of  $-90$  dBm is selected, and **Peak Excursion** is **On** and set to 6 dB, the peak search algorithm will only consider signals with amplitude greater than the  $-90$  dBm threshold which rise 6 dB above the threshold and then fall back to the threshold.

Key Path	<b>Peak Search, Peak Criteria, "Next Peak Criteria"</b>
----------	---

<b>Remote Command</b>	:CALCulate:MARKer:PEAK:THReshold <ampl> :CALCulate:MARKer:PEAK:THReshold? :CALCulate:MARKer:PEAK:THReshold:STATe OFF ON 0 1 :CALCulate:MARKer:PEAK:THReshold:STATe?
Example	CALC:MARK:PEAK:THR:STAT ON turns on the threshold criterion. CALC:MARK:PEAK:THR -60 dBm sets the threshold to -60 dBm.
Dependencies	When Ref Level Offset changes, Peak Threshold must change by the same amount.
Preset	-90.0 dBm ON
State Saved	Saved in instrument state.
Min	The current displayed Ref Level - 200 dB. The current displayed Ref Level is the current Ref Level, offset by the Ref Level Offset.
Max	The current displayed Ref Level. This means the current Ref Level, offset by the Ref Level Offset.
Default Unit	depends on the current selected Y axis unit
Initial S/W Revision	Prior to A.02.00

**Pk Threshold Line On/Off** Turns the peak threshold line on or off. Preset state is off. No equivalent SCPI command.


See [“More Information” on page 1659](#).

Dependencies	If Peak Threshold is Off and the Peak Threshold line is turned on, it should turn on Peak Threshold.
Initial S/W Revision	Prior to A.02.00

### More Information

The Peak Threshold line is green and has the value of the peak threshold (for example, “-20.3 dBm”) written above its right side, above the line itself. If Peak Excursion is ON it shows on the left side as a region above the Peak Threshold line. As with all such lines (Display Line, Trigger Level line, etc) it is drawn on top of all traces.

Peak Search

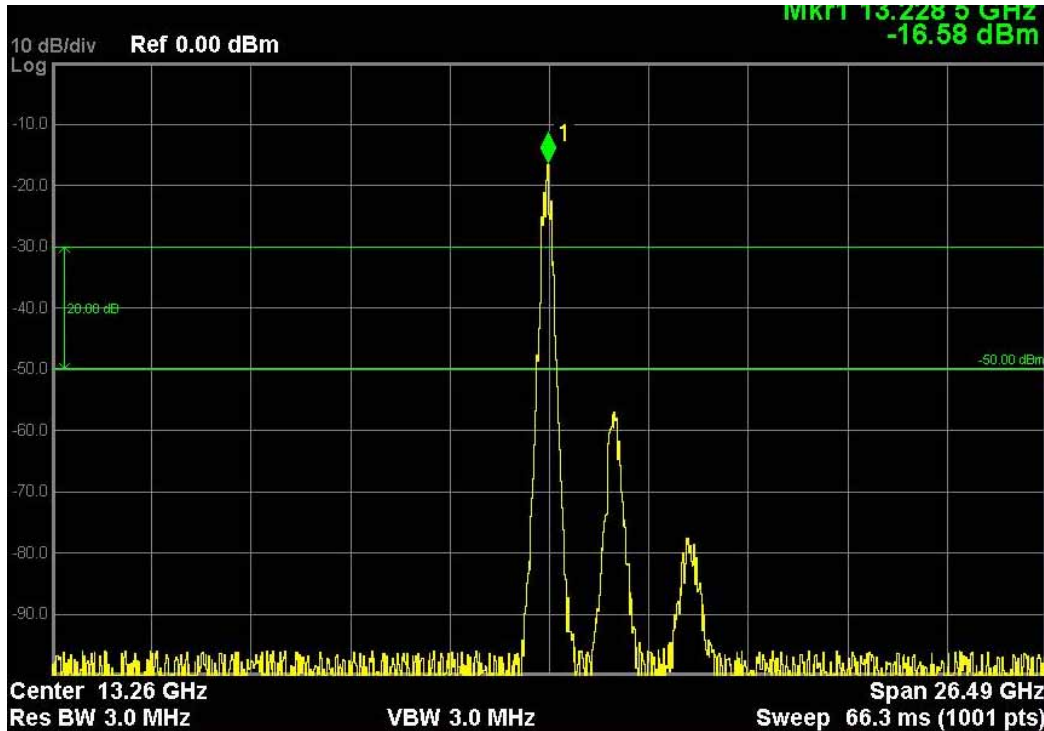

This function is automatically set to ON (thus turning on the Peak Threshold line) whenever the value of Peak Threshold or Peak Excursion becomes the active function, unless Peak Threshold is OFF. It is automatically set to OFF whenever Peak Threshold is set to OFF. Manually turning it ON automatically turns on Pk Threshold.

The Peak Excursion part is on whenever the Pk Threshold part is on, unless Peak Excursion is OFF.

**Peak Table**

Opens the Peak Table menu.

The Peak Table provides a displayed list of up to 20 signal peaks from the selected trace. If more than one trace window is displayed, the selected trace in the selected window is used. If there are more than 20 signals which meet the peak search criteria, only the 20 highest peaks are listed.

The Peak Table is updated after each sweep. The list of peaks in the Peak Table can be ordered either by ascending frequency or by descending amplitude. In either case, the entire trace is first evaluated and the 20 highest peaks are selected for inclusion in the list. After the peaks are selected, they are then sorted and displayed according to the Peak Sort setting.

Key Path	<b>Peak Search</b>
Initial S/W Revision	Prior to A.02.00

**Peak Table On/Off**

Turns Peak Table on/off. When turned on, the display is split into a measurement window and a peak table display window.



Turning the Peak Table on turns the Marker Table off and vice versa.

Key Path	Peak Search, Peak Table
<b>Remote Command</b>	:CALCulate:MARKer:PEAK:TABLE:STATe OFF ON 0 1 :CALCulate:MARKer:PEAK:TABLE:STATe?
Example	CALC:MARK:PEAK:TABL:STAT ON Turns on and displays the peak table.
Dependencies	When the Peak Table turns on, if Peak Threshold is On then it becomes the active function.
Preset	OFF
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

### Peak Sort

Sets the peak table sorting routine to list the peaks in order of descending amplitude or ascending frequency. The remote command can also be used to sort the peaks found using the :CALCulate:DATA:PEAKs command.

Key Path	Peak Search, Peak Table
<b>Remote Command</b>	:CALCulate:MARKer:PEAK:SORT FREQuency AMPLitude :CALCulate:MARKer:PEAK:SORT?
Example	CALC:MARK:PEAK:SORT AMPL Sets sorting routine to list peaks in order of descending amplitude. CALC:MARK:PEAK:SORT?
Preset	AMPLitude
Preset	AMPLitude
State Saved	Saved in instrument state.
Backwards Compatibility SCPI	:TRACe:MATH:PEAK:SORT
Backwards Compatibility SCPI	The old TRAC:MATH:PEAK:SORT command/query used in ESA is still supported for backward compatibility.
Initial S/W Revision	Prior to A.02.00

### Peak Readout

Shows up to twenty signal peaks as defined by the setting:

All (ALL) - lists all the peaks defined by the peak criteria, in the current sort setting.

Above Display Line (GTDLin) - lists the peaks that are greater than the defined display line, and that meet the peak criteria. They are listed in the current sort order.

Below Display Line (LTDLin) - lists the peaks that are less than the defined display line, and that meet

## Common Measurement Functions

### Peak Search

the peak criteria. They are listed in the current sort order.

If the peak threshold is defined and turned on, then the peaks must meet this peak criteria in addition to the display line requirements.

See “[More Information](#)” on page 1662.

Key Path	<b>Peak Search, Peak Table</b>
Remote Command	:CALCulate:MARKer:PEAK:TABLE:READout ALL GTDLine LTDLine  :CALCulate:MARKer:PEAK:TABLE:READout?
Example	CALC:MARK:PEAK:TABL:READ GTDL
Dependencies	Turning Display Line off forces Readout to ALL
Preset	All
Preset	All
State Saved	Saved in instrument state.
Readback line	1-of-N selection
Initial S/W Revision	Prior to A.02.00

### More Information

If the Display Line (see the Section “View/Display”) is turned on, the Peak Table can be selected to include all peaks, only those above the Display Line, or only those below the Display Line. See Figures 1–2 and 1–3 to understand what happens if both Display Line and Pk Threshold are turned on.

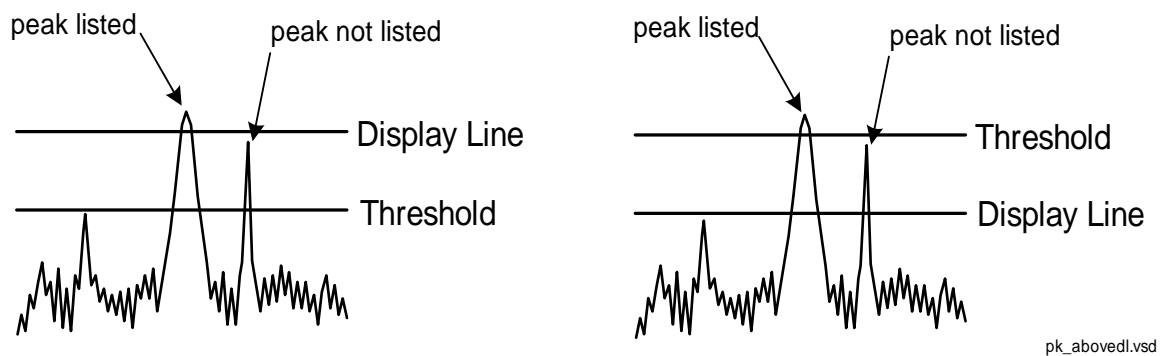


Figure 1- 2Above Display Line Peak Identification

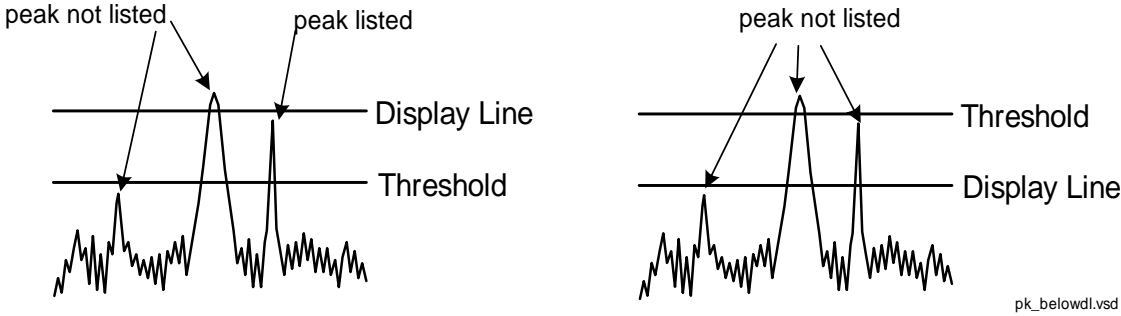


Figure 1- 3Below Display Line Peak Identification

**All** Sets the peak table to display the 20 highest peaks in the order specified by the current Peak Sort setting. If the Peak Criteria are turned on, then only peaks that meet the defined Pk Excursion and Pk Threshold values will be found.

Key Path	<b>Peak Search, Peak Table, Peak Readout</b>
Example	CALC:MARK:PEAK:TABL:READ ALL
Notes	Auto return after pressed
Readback	All
Initial S/W Revision	Prior to A.02.00

**Above Display Line** Sets the peak table to display only the 20 highest peaks above the display line in the order specified by the current Sort setting. If the Peak Criteria are turned on, then only peaks that meet the defined criteria will be found. If the display line is not already on, it is turned on (it has to be on or it cannot be used to exclude peaks).

Key Path	<b>Peak Search, Peak Table, Peak Readout</b>
Example	CALC:MARK:PEAK:TABL:READ GTDL
Notes	Auto return after pressed
Dependencies	When Above Display Line is selected, Display Line is turned on and becomes the active function.
Readback	Above DL
Initial S/W Revision	Prior to A.02.00

**Below Display Line** Sets the peak table to display only the 20 highest peaks below the display line as defined by the peak in the order specified by the current Sort setting. If the Peak Criteria are turned on, then only peaks that meet the defined criteria will be found. If the display line is not already on, it is

Common Measurement Functions  
**Peak Search**

turned on (it has to be on or it cannot be used to exclude peaks).

Key Path	<b>Peak Search, Peak Table, Peak Readout</b>
Example	CALC:MARK:PEAK:TABL:READ LTDL
Notes	Auto return after pressed
Dependencies	When Below Display Line is selected, Display Line is turned on and becomes the active function.
Readback	Below DL
Initial S/W Revision	Prior to A.02.00

**Continuous Peak Search On/Off**

Turns Continuous Peak Search on or off. When Continuous Peak Search is on, a peak search is automatically performed for the selected marker after each sweep. The rules for finding the peak are exactly the same as for **Peak Search**, including the use of the peak criteria rules. If no valid peak is found, a warning is generated after each sweep.

See [“More Information” on page 1664](#).

Key Path	<b>Peak Search</b>
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CPSearch[:STATE] ON OFF 1 0  :CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CPSearch[:STATE]?
Example	CALC:MARK:CPS ON Turns on Continuous Peak Search.
Notes	Sending this command selects the subcoded marker
Couplings	The Continuous Peak Search key is grayed out when the selected marker is a <b>Fixed</b> marker. Also, if Continuous Peak Search is on and the selected marker becomes a fixed marker, then Continuous Peak Search is turned off and the key grayed out.  <b>Signal Track</b> and <b>Continuous Peak Search</b> are mutually exclusive so if <b>Signal Track</b> is on, <b>Continuous Peak Search</b> will be grayed out and vice versa.
Preset	Mode Preset
State Saved	Saved in instrument state.
Status Bits/OPC dependencies	The Measuring bit should remain set while this command is operating and should not go false until the marker position has been updated.
Initial S/W Revision	Prior to A.02.00

**More Information**

When Continuous Peak Search is turned on a peak search is immediately performed and then is repeated

after each sweep. If Continuous Peak Search is turned on with the selected marker off, the selected marker is set to **Normal** at the center of the screen, and then a peak search is immediately performed and subsequently repeated after each sweep.

When in Continuous Peak Search, \*OPC will not return true, nor will READ or MEASURE return any data, until the sweep is complete and the marker has been re-peaked. Note further that if the analyzer is in a measurement such as averaging, and Continuous Peak Search is on, the entire measurement will be allowed to complete (i.e., all the averages taken up to the average number) before the repeak takes place, and only THEN will \*OPC go true and READ or MEASURE return data.

Note that this function is not the “Continuous Peak” function found in some other instruments. That function was designed to track the signal; this function simply does a Peak Search after each sweep.

When Continuous Peak Search is turned on for a marker, a little “hat” is placed above the marker.

### Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest y-axis value. It places the selected marker on the minimum value on its selected trace. And it places that marker’s reference marker on the peak of its selected trace. This function turns on the reference marker and sets its mode to **Fixed** if it is not already on. (These markers may be on two different traces.)

The rules for finding the maximum peak are exactly the same as for **Peak Search**, including the use of the peak criteria rules. However, the minimum trace value is not required to meet any criteria other than being the minimum y-axis value in the trace.

When Pk-Pk Search is successful, a message is displayed on the message line.

If the selected marker is off, a delta type marker is turned on and the peak-to-peak search is done. If the selected marker is on, but it is not a delta marker, then it is changed to delta which turns on the reference marker if needed, and then it performs the peak-to-peak function.

Key Path	Peak Search
<b>Remote Command</b>	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak
Example	CALC:MARK:PTP CALC:MARK:Y? !queries the delta amplitude value for marker 1.
Notes	Turns on the Marker Δ active function.
Notes	Sending this command selects the subcoded marker.
Dependencies	Pk-Pk Search is grayed out when <b>Coupled Markers</b> is on.
Couplings	The selected marker becomes a delta marker if not already in delta mode.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00

**Min Search**

Moves the selected marker to the minimum y-axis value on the current trace. Minimum (negative) peak searches do not have to meet the peak search criteria. It just looks for the lowest y-axis value. If the selected marker is Off, it is turned on before the minimum search is performed.

Key Path	Peak Search
<b>Remote Command</b>	:CALCulate:MARKer[1]   2   3   4   5   6   7   8   9   10   11   12 :MINimum
Example	CALC:MARK:MIN selects marker 1 and moves it to the minimum amplitude value.
Notes	Sending this command selects the subopcoded marker.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00

**Peak Data Query (RemoteCommand Only)**

This command works the same way in this and many other measurements, so it is documented in the Common Measurement Functions section.. For details about this key, see [“Calculate Peaks of Trace Data \(Remote Command Only\)”](#) on page 1585.

## Recall

Most of the functions under this key work the same way in many modes and measurements, so they are documented in the System Functions section. For details about this key, see “Recall” on page 189.

Recall functions specific to the W-CDMA Measurement Application are documented here.

### Trace

This key selects Trace as the data type to be imported. When pressed a second time, it brings up the Trace Menu, which lets you select the Trace into which the data will be imported.

This key is grayed out for measurements that do not support trace importing.

<b>Remote Command</b>	:MMEMory:LOAD:TRACe:DATA TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6 , <filename>
Example	:MMEM:LOAD:TRAC DATA TRACE2,"myTrace2.csv" imports the 2nd trace from the file myTrace2.csv in the current path. The default path is My Documents\SA\data\traces
Key Path	<b>Recall, Data</b>
Dependencies	Trace data is not available from all measurements. When unavailable, the key is grayed out. The key does not appear if no measurements in the current Mode support it.  If any error occurs while trying to load a file manually (as opposed to during remote operation), the analyzer returns to the Import Data menu and the File Open dialog goes away.
Couplings	When a trace is imported, <b>Trace Update</b> is always turned OFF for that trace and <b>Trace Display</b> is always turned ON.
Readback	1 2 3 4 5 6
Initial S/W Revision	Prior to A.02.00

### Trace 1, 2, 3, 4, 5, 6

Enables you to select which Trace to import the data into either 1, 2, 3, 4, 5 or 6. The default is the currently selected trace, which was selected in this menu or in the Trace/Det, Export Data, Recall Trace, or Save Trace menus. The exception is, if you have chosen All then it remains chosen until you specifically change it to a single trace.

Once selected, the key returns back to the Import Data menu and the selected Trace number is annotated on the key. Now you have selected exactly what needs to be imported. To trigger an import of the selected trace, you must select the Open key in the Import Data menu.

An example of using this menu is: If you select 4 and continue to the File Open dialog, then import Trace 4 from the file selected or entered in File Name option in the File Open dialog.

Key Path	<b>Recall, Data, Trace</b>
----------	----------------------------

## Recall

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Amplitude Correction

This key selects the Amplitude Corrections as the data type to be imported. When pressed a second time, it brings up the Select Menu, which lets you select the Correction into which the data will be imported.

Amplitude Corrections are fully discussed in the documentation of the Input/Output key, in the section [“Corrections” on page 1489](#).

A set of preloaded Corrections files can be found in the directory

```
../My Documents/ EMC Limits and Ampcor
```

Under this directory, the directory called Ampcor (Legacy Naming) contains a set of legacy corrections files, generally the same files that were supplied with older Agilent EMI analyzers, that use the legacy suffixes .ant, .oth, .usr, and .cbl, and the old 8-character file names. In the directory called Ampcor, the same files can be found, with the same suffixes, but with longer, more descriptive filenames.

When the Amplitude Correction is an Antenna correction and the Antenna Unit in the file is not **None**, the Y Axis Unit setting will change to match the Antenna Unit in the file.

Mode:	SA EDGE GSM
<b>Remote Command:</b>	:MMEMory:LOAD:CORRection 1 2 3 4, <filename>
Example:	:MMEM:LOAD:CORR 2 "myAmpcor.csv" recalls the Amplitude Correction data from the file myAmpcor.csv in the current directory to the 2nd Amplitude Correction table, and turns on Correction 2.  The default path is My Documents\amplitudeCorrections.
Couplings:	When a correction file is loaded from mass storage, it is automatically turned on ( <b>Correction ON</b> ) and <b>Apply Corrections</b> is set to On. This allows you to see its effect, thus confirming the load.



Dependencies:	<p>Only the first correction array (Correction 1) supports antenna units. This means that a correction file with an Antenna Unit can only be loaded into the Corrections 1 register. Consequently only for Correction 1 does the dropdown in the Recall dialog include.ant, and if an attempt is made to load a correction file into any other Correction register which DOES contain an antenna unit, a Mass Storage error is generated.</p> <p>Corrections are not supported by all Measurements. If in a Mode in which some Measurements support it, this key will be grayed out in measurements that do not. The key will not show at all if no measurements in the Mode support it.</p> <p>Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type. If any of these occur during manual operation, the analyzer returns to the Import Data menu and the File Open dialog goes away.</p> <p>This key does not appear unless you have the proper option installed in your instrument.</p> <p>This command will generate an “Option not available” error unless you have the proper option installed in your instrument.</p>
Key Path:	<b>Recall, Data</b>
Readback:	selected Correction
Initial S/W Revision:	A.02.00

### Amplitude Correction 1, 2, 3, 4

These keys let you pick which Correction to import the data into. Once selected, the key returns back to the Import Data menu and the selected Correction number is annotated on the key. The next step is to select the Open key in the Import Data menu.

Antenna corrections are a particular kind of Amplitude Corrections – they are distinguished in the corrections file by having the Antenna Unit set to a value other than None. Only Correction 1 supports Antenna Units.

Notes:	auto return
Key Path:	<b>Recall, Data, Amplitude Correction</b>
Dependencies:	Only Correction 1 may be used to load a Correction which contains an Antenna Unit other than None
Preset:	not part of Preset, but is reset to Correction 1 by Restore Input/Output Defaults; survives shutdown
State Saved:	The current Correction number is saved in State
Initial S/W Revision:	A.02.00

### Capture Buffer

Capture Buffer functionality is not available for all measurements. The captured data is raw data

## Recall

(unprocessed).

Example	MMEM:LOAD:CAPT "MyCaptureData.bin" This loads the file of capture data (on the default file directory path) into the instrument.
Key Path	<b>Recall, Data</b>
Mode	WCDMA
Dependencies	Capture buffer data is not available from all Measurements. When unavailable, the key is grayed out. The key does not appear if no measurements in the Mode support it.
Initial S/W Revision	Prior to A.02.00

## Restart

The Restart function restarts the current sweep, or measurement, or set of averaged/hold sweeps or measurements. If you are Paused, pressing Restart does a Resume.

The Restart function is accessed in several ways:

- Pressing the Restart key
- Sending the remote command INIT:IMMEDIATE
- Sending the remote command INIT:RESTART

<b>Remote Command:</b>	:INITiate[:IMMEDIATE]
Example:	:INIT:IMM
Couplings:	Resets average/hold count k. For the first sweep overwrites all active (update=on) traces with new current data. For application modes, it resets other parameters as required by the measurement.
Notes:	:INITiate:RESTART :INITiate:IMMEDIATE Either of the above commands perform exactly the same function.
Key Path:	<b>Front-panel key</b>
Status Bits/OPC dependencies:	This is an Overlapped command. The STATUS:OPERATION register bits 0 through 8 are cleared. The STATUS:QUESTIONABLE register bit 9 (INTEGRITY sum) is cleared. The SWEEPING bit is set. The MEASURING bit is set.
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:INITiate:RESTART
Example:	:INIT:REST
Couplings:	Resets average/hold count k. For the first sweep overwrites all active (update=on) traces with new current data. For application modes, it resets other parameters as required by the measurement.
Notes:	:INITiate:RESTART :INITiate:IMMEDIATE Either of the above commands perform exactly the same function.

**Restart**

Status Bits/OPC dependencies:	<p>This is an Overlapped command.</p> <p>The STATUS:OPERation register bits 0 through 8 are cleared.</p> <p>The STATUS:QUEStionable register bit 9 (INTegrity sum) is cleared.</p> <p>The SWEEPING bit is set.</p> <p>The MEASURING bit is set.</p>
Initial S/W Revision:	Prior to A.02.00

The **Restart** function first aborts the current sweep/measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is in the process of aligning when **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for Single operation, multiple sweeps may be taken when Restart is pressed (for example, when averaging/holding is on). Thus when we say that **Restart** "restarts a measurement," we may mean:

- It restarts the current sweep
- It restarts the current measurement
- It restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- It restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement
- depending on the current settings.

With **Average/Hold Number** (in **Meas Setup** menu) set to 1, or Averaging off, or no trace in Trace Average or Hold, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the analyzer stops sweeping once that sweep has completed. However, with **Average/Hold Number** >1 and at least one trace set to **Trace Average**, **Max Hold**, or **Min Hold (SA Measurement)** or **Averaging on (most other measurements)**, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Number**. A measurement average usually applies to all traces, marker results, and numeric results; but sometimes it only applies to the numeric results.

Once the full set of sweeps has been taken, the analyzer will go to idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the step up key while **Average/Hold Number** is the active function, or sending the remote command CALC:AVER:TCON UP.

## Save

Most of the functions under this key work the same way in many modes and measurements, so they are documented in the System Functions section. For details about this key, see [“Save” on page 205](#).

Save functions specific to the W-CDMA Measurement Application are documented here.

## Data

See [“Data \(Export\)” on page 212](#) in the System Functions chapter.

## Measurement Results

Different types of results are available for each particular measurement. The results that are available are documented under the individual measurements. These measurement results are the same as the results that are returned when using the MEASure:<measurement> command (usually for sub-opcode 1).

Measurement results may not be available for all measurements.

Example	MMEM:STOR:RES "MyResultsFile.xml"  This stores the measurement results data in the file MyResultsFile.xml in the default directory.
Key Path	<b>Save, Data</b>
Mode	SA ADEMOD BASIC(IQ Analyzer) CDMA2K GSMEDGE PNOISE WCDMA WIMAXOFDMA TDS CDMA
Notes	The key does not appear if no measurements in the Mode support it.
Initial S/W Revision	Prior to A.02.00

## Amplitude Correction

Pressing this key selects **Amplitude Corrections** as the data type to be exported. Pressing this key again brings up the Select Menu, which allows you to select which **Amplitude Correction** to save.

Amplitude Corrections are fully discussed in the documentation of the Input/Output key, in the section [“Corrections” on page 1489](#).

<b>Remote Command:</b>	:MMEMory:STORe:CORRection 1 2 3 4, <filename>
Example:	:MMEM:STOR:CORR 2 "myAmpcor.csv" saves Correction 2 to the file myAmpcor.csv on the current path.  The default path is My Documents\amplitudeCorrections.

Notes:	<p>If the save is initiated via SCPI, and the file already exists, the file will be overwritten.</p> <p>Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade.</p> <p>Both single and double quotes are supported for any filename parameter over SCPI.</p>
Key Path:	<b>Save, Data</b>
Readback:	1   2   3   4
Dependencies:	<p>Corrections are not supported by all measurements. If some, but not all, measurements in the current Mode support it, this key is grayed out in measurements that do not. If no measurements in the current Mode support it, the key does not appear at all.</p> <p>This key does not appear unless you have the proper option installed in your instrument.</p>
Initial S/W Revision:	A.02.00

### Corrections Data File

A Corrections Data File contains a copy of one of the analyzer correction tables. Corrections provide a way to adjust the trace display for predetermined gain curves (such as for cable loss).

The file's first five lines are system-required header lines, and must be in the correct order:

Required Text	Significance
<b>Amplitude Correction</b>	Data file type name
“Correction Factors for 11966E”	File Description
“Class B Radiated”	Comment
A.01.00.R000,N9020A	Instrument Version, Model Number
P13 EA3 UK6,01	Option List, File Format Version

Corrections files may include Antenna amplitude units. This amplitude unit in the Antenna Unit field is a conversion factor that is used to adjust the Y Axis Units of the current mode, if the mode supports Antenna Units. For more details on antenna correction data, refer to the Input/Output chapter, Corrections section.

The metadata required to properly import the correction data is:

- **Frequency Unit** for the x axis data
- **Antenna Unit** for the y axis data (not required)
- **Frequency Interpolation** algorithm – either Logarithmic or Linear

The data follows as comma separated X, Y pairs; one pair per line. The keyword “DATA” precedes the data.

For example, suppose you want to correct for an Antenna on an E4445A, version A.01.00 R0011, and the correction data is:

- 0 dB at 200 MHz
- 17 dB at 210 MHz
- 14.8 dB at 225 MHz

Then the file will look like:

```
Amplitude Correction
"Correction Factors for 11966E"
"Class B Radiated"
A.01.00 R001,N9020A
P13 EA3 UK6,01
Frequency Unit,MHz
Antenna Unit,dBuV/m
Frequency Interpolation,Linear
DATA
200.000000,0.00
210.000000,17.00
225.000000,14.80
```

The choices for the 1 of N fields in the metadata are as follows:

- Frequency Unit: Hz, kHz, MHz, GHz
- Antenna Unit: dBuv/m, dBuA/m, dBG, dBpT, None
- Frequency Interpolation: Logarithmic, Linear

**Amplitude Correction 1, 2, 3, 4**

These softkeys let you pick which Correction to save. Once selected, the key returns back to the Export Data menu and the selected Correction number is annotated on the key.

The next step in the Save process is to select the Save As key in the Export Data menu.

Key Path:	<b>Save, Data, Amplitude Correction</b>
Preset:	Not part of Preset, but is reset to Correction 1 by Restore Input/Output Defaults; survives shutdown
Readback:	1
Initial S/W Revision:	A.02.00

**Capture Buffer**

Capture Buffer functionality is not available for all measurements. The captured data is raw data

## Common Measurement Functions

### Save

(unprocessed).

Example	MMEM:STOR:CAPT "MyCaptureData.bin" This stores the capture data in the file MyCaptureData . bin in the default directory.
Key Path	<b>Save, Data</b>
Mode	WCDMA
Notes	The key does not appear if no measurements in the Mode support it.
Initial S/W Revision	Prior to A.02.00



---

## Single (Single Measurement/Sweep)

Sets the analyzer for Single measurement operation. The single/continuous state is Meas Global, so the setting will affect all the measurements. If you are Paused, pressing **Single** does a Resume.

Example:	:INIT:CONT OFF
Notes:	See <b>Cont</b> key description.
Key Path:	<b>Front-panel key</b>
Initial S/W Revision:	Prior to A.02.00

Common Measurement Functions  
**Single (Single Measurement/Sweep)**

---

## Source

This mode does not have any Source control functionality.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

Common Measurement Functions  
**Source**

## SPAN X Scale

Activates the Span function and displays a menu of span functions.

Key Path	<b>Front-panel key</b>
Initial S/W Revision:	Prior to A.02.00

### Span

Changes the displayed frequency range symmetrically about the center frequency. While adjusting the Span the Center Frequency is held constant, which means that both Start Frequency and Stop Frequency will change.

Span also sets the frequency entry mode to Center/Span. In Center/Span mode, the center frequency and span values are displayed below the graticule, and the default active function in the Frequency menu is **Center Freq.**

While discussing the Span function we make the distinction between “swept spans” and “zero span”. We use the term “swept spans” to mean spans other than zero; recognizing that, because of this terminology, the user can be in what we call a “swept span” even while performing an FFT “sweep”.

While in swept spans, setting the span to 0 Hz through SCPI or the front panel numeric key pad puts the analyzer into zero span. However, using the Step keys and the RPG in swept spans, the Span can only go as far down as 10 Hz and cannot be set to zero.

While in zero span, setting the Span to a non-zero value through SCPI or Front Panel puts the analyzer in swept spans.

If the Span is set to a value greater than the maximum allowable span of the instrument, an error is generated indicating the data is out of range and was clipped to upper limit.

Key Path	<b>SPAN X Scale</b>
<b>Remote Command</b>	[ :SENSe ] :FREQuency:SPAN <freq> [ :SENSe ] :FREQuency:SPAN?
Example	FREQ:SPAN 2GHz sets the span to 2GHz FREQ:SPAN 0 Hz sets the span to 0 Hz and puts the instrument in Zero Span
Notes	Preset and Max values depend on the Hardware Options (503, 507, 508, 513, 526)
Dependencies	If the electrical attenuator is enabled, any attempt to set Span such that the Stop Frequency would be >3.6 GHz results in an error. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.

Common Measurement Functions  
**SPAN X Scale**

Couplings	<p>Span affects RBW, sweep time, FFT &amp; Sweep choice (including FFT Width, Phase Noise Optimization and ADC Dither auto couplings.)</p> <p>When operating in “swept span”:</p> <ul style="list-style-type: none"> <li>Any value of the Center Frequency or Span that is within the frequency range of the analyzer is allowed when the value is being set through the front panel numeric key pad or the SCPI command. The other parameter is forced to a different value if needed, to keep the Start and the Stop Frequencies within the analyzer’s frequency range</li> <li>When using the knob or the step up/down keys or the UP  DOWN keywords in SCPI, the value that is being changed i.e. the Center Frequency or Span, is limited so that the other parameter is not forced to a new value</li> <li>The Span cannot be set to Zero by setting Start Frequency = Stop Frequency. The value of the last setting will be changed to maintain a minimum value of 10 Hz for the difference between start and stop frequencies.</li> </ul>
Preset	<p>Depends on instrument maximum frequency:</p> <p>Option 503 (3 GHz models): 2.99 GHz</p> <p>Option 503 (3.6 GHz models): 3.59 GHz</p> <p>Option 507 (7 GHz models): 6.99 GHz</p> <p>Option 507 (7.5 GHz models): 7.49 GHz</p> <p>Option 508: 8.39 GHz</p> <p>Option 513: 13.59 GHz</p> <p>Option 526: 26.49 GHz</p>
State Saved	Saved in State
Min	10 Hz unless entered directly, then 0 Hz is allowed, but nothing between 0 and 10 is ever allowed.
Max	<p>Option 503 (3 GHz models): 3.08 GHz</p> <p>Option 503 (3.6 GHz models): 3.7 GHz</p> <p>Option 507 (7 GHz models): 7.1 GHz</p> <p>Option 507 (7.5 GHz models): 7.58 GHz</p> <p>Option 508: 8.5 GHz</p> <p>Option 513: 13.8 GHz</p> <p>Option 526: 27.0 GHz</p> <p>If the knob or step keys are being used, depends on the value of the other three interdependent parameters Center Frequency, Start Frequency, Stop Frequency</p>
Default Unit	Hz

Status Bits/OPC dependencies	Overlapped if Signal Track is on (OPC shouldn't return or clear until the zooming has completed for the new span)
Initial S/W Revision	Prior to A.02.00

### Full Span

Changes the frequency span of the analyzer to the Preset frequency span of the analyzer and sets the Frequency entry mode to Center/Span.

The span is dependent on the currently selected Input (see the Section “Input/Output”).

Pressing this key while in zero span puts the analyzer back in swept span.

Key Path	<b>SPAN X Scale</b>
<b>Remote Command</b>	[ :SENSE] :FREQUENCY:SPAN:FULL
Example	FREQ:SPAN:FULL sets the span to full frequency range of the analyzer
Notes	n /a
Couplings	Turns off signal tracking (span zoom). It does NOT turn off the markers, nor the current active function.
Initial S/W Revision	Prior to A.02.00

### Zero Span

Changes the displayed frequency span to 0 Hz. The horizontal axis changes to time rather than frequency. The amplitude displayed is the input signal level at the current center frequency. This is a time-domain mode that changes several measurement functions and couplings. The instrument behavior is similar to an oscilloscope with a frequency selective detector installed in front of the oscilloscope. See Application Note 150 for more information on how to use zero span.

You can enter Zero Span in several ways:

Press the Zero Span key in Span

Set Span=0 Hz

Press last Span if the last span was 0

You cannot go to Zero Span by setting start freq = stop freq, or rolling span down with the RPG, that will limit you to 10 Hz

You can go back to Swept Span by setting Span to a nonzero value or pressing Last Span, assuming the last span was not also zero span.

Pressing Zero Span places the analyzer in Center/Span frequency entry mode.

The following table summarizes the differences between Zero Span and Swept Spans:

Zero Span	Swept Spans
-----------	-------------

## Common Measurement Functions

### SPAN X Scale

X axis is time	X axis is frequency
There is no auto-RBW selection unless the EMC Standard is CISPR or MIL	RBW coupled to Span when RBW in auto
There is no auto sweep time	Sweep time coupled to RBW when sweep time in auto
Interval Power calculated in Mkr Function	Band Power calculated in Mkr Function
Can only define time limits when in zero span	Can only define frequency limits when in swept SA
Marker Count counts at the center frequency	Marker Count counts at the marker frequency
CF Step Size set to RBW value	CF Step autocouples to 10% of Span
Some "Marker ->" commands not available.	Other "Marker ->" commands not available
Freq entry mode always Center/Span	Freq entry mode can be Center/Span or Start/Stop
N dB points reports a time difference.	N dB points reports a frequency difference.

Key Path	SPAN X Scale
Example	FREQ:SPAN 0 Hz sets the span to zero, switches to Zero Span Sending FREQ:SPAN 1 MHz while in Zero Span, switches to Swept span
Notes	Setting the Span to 0 Hz will change to Zero Span and setting the span to a non-zero value will select a swept span
Notes	n /a
Couplings	Pressing Zero Span key (switching to Zero Span): Turns off signal track function (span zoom). Turns off the auto-coupling of RBW and sweep time.
Initial S/W Revision	Prior to A.02.00

### Last Span

Changes the displayed frequency span to the previous span setting. If it is pressed immediately after Signal Track is turned off, then the span setting returns to the span that was in effect before Signal Track was turned on.

If this key is pressed while in a nonzero span, and the previous value of span was 0, it will put the analyzer back in Zero Span. And if it is pressed while in zero span, it will set the analyzer back to its last nonzero span.

Pressing Last Span places the analyzer in Center/Span frequency entry mode.

Key Path	SPAN X Scale
<b>Remote Command</b>	[ :SENSe ] :FREQuency:SPAN:PREVious
Example	FREQ:SPAN:PREV sets the span to the previous value



Notes	n /a
Initial S/W Revision	Prior to A.02.00

### Signal Track (Span Zoom)

When Marker 1 is placed on a signal and Signal Track is pressed, the marker remains on the signal while the analyzer retunes the center frequency to the marker frequency. The analyzer keeps the signal at the center of the display, as long as the amplitude of the signal does not change by more than  $\pm 3$  dB from one sweep to another. If Marker 1 is not in Normal or Delta, turning on Signal Track sets it to Normal, perform a peak search, and center the marker on the display.

See [“More Information” on page 1686](#).

Key Path	<b>SPAN X Scale, Signal Track</b>
<b>Remote Command</b>	:CALCulate:MARKer:TRCKing[:STATe] OFF ON 0 1 :CALCulate:MARKer:TRCKing[:STATe]?
Example	CALC:MARK:TRCK ON turns on Signal Track using Marker 1. CALC:MARK:TRCK?
Dependencies	Signal Track is associated with Marker 1. When marker 1 is turned off or set to Fixed, signal track is turned off as well.  Signal Track and Continuous Pk cannot be used with each other. If one is on, the other is grayed out. .  Signal Track is grayed out if in Zero Span.  But if Zero Span is entered while in Signal Track, Signal Track is turned off.  Signal Track can only function properly if the trace Marker 1 is on is updating. Therefore if Signal Track is on and the trace Marker 1 is on is put into View, Signal Track is turned off and the Signal Track key grayed out. Whenever the trace Marker 1 is on is not updating, the Signal Track key is grayed out.  Signal Track is only available in SA measurement . It should be grayed out in other Measurements in the Spectrum Analyzer mode.
Couplings	Signal Track can only function properly if the trace Marker 1 is on, is in Trace Update = Active. Therefore if the trace Marker 1 is on is in Update Off when Signal Track is turned on, it is changed to Update On. If the trace Marker 1 is on is set to Update Off while Signal Track is on, it turns off Signal Track.
Preset	OFF
State Saved	Saved in State
Status Bits/OPC dependencies	Overlapped until target span is achieved. The Measuring bit remains set until all signal track actions are complete (any reacquisition or zooming required). See details above this table.
Initial S/W Revision	Prior to A.02.00

## More Information

If marker 1 is off when Signal Track is turned on, marker 1 is turned on in the center of the screen and a peak search is performed. If marker 1 is already on, it stays on and is used where it is. If it is Fixed, it is set to Normal.

If you move the marker during Signal Track, a Mkr-> CF is performed and the signal track function starts over.

If the signal is lost, an attempt will be made to find it again and continue tracking. If there are other signals on screen that are near the same amplitude, one of them may be found instead since the algorithm is seeking a signal with amplitude similar to the amplitude of the original signal.

Signals near 0 Hz cannot be tracked effectively as they cannot be distinguished from the LO feed-through, which is excluded by intent from the search algorithm.

As a speed optimization, the center frequency is only changed if it differs from the marker position by 1% or more of the span.

If the analyzer is in Single Sweep and Signal Track is turned on, then nothing happens until a sweep is actually initiated (i.e. by an INIT:IMM or Single keypress, and a trigger). Once the sweep is initiated, the entire set of sweeps necessary to complete a pass through the signal track algorithm ensues before the analyzer returns \*OPC true, returns results to a READ or MEASure, or returns to the idle state.

If the span is changed while in Signal Track, either by you or because moving the instrument to the signal's frequency results in Span Limiting (as described under the Ferquency key), an "auto-zoom" algorithm is executed to get to the new span without losing the signal. In "auto zoom", the span is reduced in stages, with a sweep between each stage. You will see this zooming occur as each sweep is performed, and the new span is set.

When auto-zooming, the set of steps necessary to achieve the target span is to be considered a "measurement," thus the entire process executes even if the analyzer is in single sweep. \*OPC will not return true until the process is complete nor will results be returned to a READ or MEASure command. Note further that if the analyzer is in a measurement such as averaging when this happens, the act of changing the span restarts averaging but the first average trace is the last trace of the auto zoom.

When you increase the span, we go directly to the new span. No zooming is required.

This function is intended to track signals with a frequency that is changing (drifting), and an amplitude that is not changing. It keeps tracking if you are in continuous-sweep mode. If in single-sweep mode, as described above, the analyzer only does one center frequency adjustment as necessary.

## Sweep/Control

Accesses a menu that enables you to configure the Sweep and Control functions of the analyzer, such as Sweep Time and Gating.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00

### Sweep Time

Controls the time the analyzer takes to sweep the current frequency span when the Sweep Type is Swept, and displays the equivalent Sweep Time when the Sweep Type is FFT.

When Sweep Time is in Auto, the analyzer computes a sweep time which will give accurate measurements based on other settings of the analyzer, such as RBW and VBW.

---

**NOTE** The Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when the manual sweep time entered is faster than the sweep time computed by the analyzer's sweep time equations, that is, the Auto Sweep Time. The analyzer's computed sweep time will give accurate measurements; if you sweep faster than this your measurements may be inaccurate. A Meas Uncal condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW

On occasion other factors such as the YTF sweep rate (in high band) or the LO's capability (in low band) can cause a Meas Uncal condition. The most reliable way to correct it is to return the Sweep Time to Auto.

---

When Sweep Type is FFT, you cannot control the sweep time, it is simply reported by the analyzer to give you an idea of how long the measurement is taking.

Note that although some overhead time is required by the analyzer to complete a sweep cycle, the sweep time reported when Sweep Type is Swept does not include the overhead time, just the time to sweep the LO over the current Span. When Sweep Type is FFT, however, the reported Sweep Time takes into account both the data acquisition time and the processing time, in order to report an equivalent Sweep Time for a meaningful comparison to the Swept case.

Because there is no "Auto Sweep Time" when in zero span, the Auto/Man line on this key disappears when in Zero Span. The Auto/Man line also disappears when in an FFT sweep. In this case the key is grayed out as shown below.

Key Path	Sweep/Control
----------	---------------

Common Measurement Functions  
Sweep/Control

<p><b>Remote Command</b></p>	<pre>[ :SENSe] :SWEep:TIME &lt;time&gt; [ :SENSe] :SWEep:TIME? [ :SENSe] :SWEep:TIME:AUTO OFF ON 0 1 [ :SENSe] :SWEep:TIME:AUTO?</pre>
<p>Example</p>	<pre>SWE:TIME 500 ms SWE:TIME:AUTO OFF</pre>
<p>Notes</p>	<p>The values shown in this table reflect the “swept spans” conditions which are the default settings after a preset. See “Couplings” for values in the zero span domain.</p>
<p>Dependencies</p>	<p>The third line of the softkey (Auto/Man) disappears in Zero Span. The SCPI command SWEep:TIME:AUTO ON if sent in Zero Span generates an error message.</p> <p>Softkey grayed out and third line of the softkey (Auto/Man) disappears in FFT sweeps. Pressing the key or sending the SCPI for sweep time while the instrument is in FFT sweep generates a –221, “Settings Conflict;” error. The SCPI command :SWEep:TIME:AUTO ON if sent in FFT sweeps generates an error.</p> <p>Grayed out while in Gate View, to avoid confusing those who want to set Gate View Sweep Time.</p> <p>Key is grayed out in Measurements that do not support swept mode.</p> <p>Key is blanked in Modes that do not support swept mode.</p> <p>Set to Auto when Auto Couple is pressed or sent remotely</p>
<p>Couplings</p>	<p>Sweep Time is coupled primarily to Span and RBW. Center Frequency, VBW, and the number of sweep points also can have an effect. So changing these parameters may change the sweep time.</p> <p>The Sweep Time used upon entry to Zero Span is the same as the Sweep Time that was in effect before entering Zero Span. The Sweep Time can be changed while in Zero Span. Upon leaving Zero Span, the Auto/Man state of Sweep Time that existed before entering Zero Span is restored.</p> <p>If Sweep Time was in Auto before entering Zero Span, or if it is set to Auto while in zero span (which can happen via remote command or if <b>Auto Couple</b> is pressed) it returns to Auto and recouples when returning to non-zero spans.</p> <p>If Sweep Time was in Man before entering Zero Span, it returns to Man when returning to non-zero spans, and any changes to Sweep Time that were made while in Zero Span are retained in the non-zero span (except where constrained by minimum limits, which are different in and out of zero span).</p>
<p>Preset</p>	<p>The preset Sweep Time value is hardware dependent since Sweep Time presets to “Auto”.</p>
<p>State Saved</p>	<p>Saved in instrument state</p>
<p>Min</p>	<p>in zero span: 1 <math>\mu</math>s in swept spans: 1 ms</p>

Max	in zero span: 6000 s in swept spans: 4000 s
Status Bits/OPC dependencies	Meas Uncal is Bit 0 in the STATus:QUEStionable:INTegrity:UNCalibrated register
Initial S/W Revision	Prior to A.02.00

## Sweep Setup

Lets you set the sweep functions that control features such as sweep type and time.

Key Path	<b>Sweep/Control</b>
Dependencies	The whole Sweep Setup menu is grayed out in Zero Span, however, the settings in the menus under Sweep Setup can be changed remotely with no error indication.  Grayed out in measurements that do not support swept mode.  Blanked in modes that do not support swept mode
Initial S/W Revision	Prior to A.02.00

## Sweep Time Rules

Allows the choice of three distinct sets of sweep time rules. These are the rules that are used to set the sweep time when **Sweep Time** is in **Auto mode**. Note that these rules only apply when in the Swept **Sweep Type** (either manually or automatically chosen) and not when in FFT sweeps.

See [“More Information” on page 1690](#).

Key Path	<b>Sweep/Control, Sweep Setup</b>
<b>Remote Command</b>	[ :SENSe ] :SWEep:TIME:AUTO:RULEs NORMal   ACCuracy   SREsponse  [ :SENSe ] :SWEep:TIME:AUTO:RULEs?
Example	SWE:TIME:AUTO:RUL ACC
Dependencies	In Zero Span, this key is irrelevant and cannot be accessed (because the whole Sweep Setup menu is grayed out in Zero Span), however its settings can be changed remotely with no error indication.  Grayed out in FFT sweeps. Pressing the key while the instrument is in FFT sweep generates an advisory message. The SCPI is acted upon if sent, but has no effect other than to change the readout on the key, as long as the analyzer is in an FFT sweep.
Couplings	Set to Auto on Auto Couple
Preset	AUTO
State Saved	Saved in instrument state

Backwards Compatibility SCPI	<p>The old Auto Sweep Time command was the same [:SENSe]:SWEep:TIME:AUTO:RULEs NORMAl ACCuracy so it still works although it now has a third parameter (SRESponse).</p> <p>The old Sweep Coupling command was [:SENSe]:SWEep:TIME:AUTO:MODE SRESponse SANalyzer and it is aliased as follows:</p> <p>:SWEep:TIME:AUTO:MODE SRESponse is aliased to :SWEep:TIME:AUTO:RULEs SRESponse, and :SWEep:TIME:AUTO:MODE SANalyzer is aliased to :SWEep:TIME:AUTO:RULEs NORMAl</p> <p>The query :SWEep:TIME:AUTO:MODE? is aliased to :SWEep:TIME:RULEs?</p> <p>So it will fail to match for SANalyzer</p>
Initial S/W Revision	Prior to A.02.00

### More Information

The first set of rules is called **SA – Normal. Sweep Time Rules** is set to **SA-Normal** on a **Preset** or **Auto Couple**. These rules give optimal sweep times at a lossof accuracy. Note that this means that in the Preset or Auto Coupled state, instrument amplitude accuracy specifications do not apply.

Setting **Sweep Time Rules** to **SA-Accuracy** will result in slower sweep times than **SA-Normal**, usually about three times as long, but with better amplitude accuracy for CW signals. The instrument absolute amplitude accuracy specifications only apply when **Sweep Time** is set to **Auto**, and **Sweep Time Rules** are set to **SA-Accuracy**. Additional amplitude errors which occur when **Sweep Time Rules** are set to **SA-Normal** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **SA-Normal** is the preferred setting of **Sweep Time Rules**.

The third set of sweep time rules is called **Stimulus/Response** and is automatically selected when an integrated source is turned on, such as a Tracking Generator or a synchronized external source. The sweep times for this set of rules are usually much faster for swept-response measurements. Stimulus-response auto-coupled sweep times are typically valid in stimulus-response measurements when the system’s frequency span is less than 20 times the bandwidth of the device under test. You can select these rules manually (even if not making Stimulus-Response measurements) to get faster sweeps without the “Meas Uncal” warning, but you are then not protected from the over-sweep condition and may end up with uncalibrated results. However, it is commonplace in measuring non-CW signals such as noise to be able to get excellent measurement accuracy at sweep rates higher than those required for CW signal accuracy, so this is a valid measurement technique.

**Auto** Sets the analyzer to automatically choose the Sweep Time Rules for the measurement.

Key Path	<b>Sweep/Control, Sweep Setup, Sweep Time Rules</b>
<b>Remote Command</b>	<pre>[ :SENSe ] :SWEep:TIME:AUTO:RULEs:AUTO [ :STATe ] ON OFF 1 0 [ :SENSe ] :SWEep:TIME:AUTO:RULEs:AUTO [ :STATe ] ?</pre>

Example	:SWE:TIME:AUTO:RUL:AUTO ON
Couplings	Set on Preset or Auto Couple
Preset	ON
Initial S/W Revision	Prior to A.02.00

**SA - Normal** Chooses Sweep Time Auto Rules for optimal speed and generally sufficient accuracy.

Key Path	<b>Sweep/Control, Sweep Setup, Sweep Time Rules</b>
Example	:SWE:TIME:AUTO:RUL NORM
Couplings	Automatically selected unless Source is on If directly selected, sets AUTO to Off
Readback	SA - Normal
Initial S/W Revision	Prior to A.02.00

**SA - Accuracy** Chooses Sweep Time Auto Rules for specified absolute amplitude accuracy.

Key Path	<b>Sweep/Control, Sweep Setup, Sweep Time Rules</b>
Example	:SWE:TIME:AUTO:RUL ACC
Dependencies	Do not allow sweep time to fall below 20 ms when in SA - Accuracy
Couplings	If directly selected, sets AUTO to Off
Readback	SA - Accuracy
Initial S/W Revision	Prior to A.02.00

**Stimulus/Response** Chooses Sweep Time Auto Rules for use with a source.

Key Path	<b>Sweep/Control, Sweep Setup, Sweep Time Rules</b>
Example	:SWE:TIME:AUTO:RUL SRES
Couplings	Automatically selected when Source is on If directly selected sets AUTO to Off
Readback	SR
Initial S/W Revision	Prior to A.02.00

### Sweep Type

Chooses between the FFT and Sweep types of sweep.

Sweep Type refers to whether or not the instrument is in Swept or FFT analysis. When in Auto, the selection of sweep type is governed by two different sets of rules, depending on whether you want to optimize for dynamic range or for speed.

Common Measurement Functions  
Sweep/Control

FFT “sweeps” should not be used when making EMI measurements; therefore, when a CISPR detector (Quasi Peak, EMI Average, RMS Average) is selected for any active trace (one for which Update is on), the FFT key in the Sweep Type menu is grayed out, and the Auto Rules only choose Swept. If Sweep Type is manually selected to be FFT, the CISPR detectors are all grayed out.

FFT sweeps will never be auto-selected when Screen Video, Log Video or Linear Video are the selected Analog Output.

Key Path	Sweep/Control, Sweep Setup
<b>Remote Command</b>	[ :SENSe] :SWEep:TYPE FFT   SWEep [ :SENSe] :SWEep:TYPE?
Notes	For a backward compatibility, the following remote parameters AUTO SWP will be supported by the [:SENSe]:SWEep:TYPE command.
Dependencies	In Zero Span, this key is irrelevant and cannot be accessed (because the whole Sweep Setup menu is grayed out in Zero Span), however its settings can be changed remotely with no error indication.  When Gate is on, Gate Method selection affects Sweep Type: Method FFT&Sweep menu FFT Swept grayed out and rules choose FFT Video FFT grayed out and rules choose Swept LO FFT grayed out and rules choose Swept
Preset	AUTO
Backwards Compatibility SCPI	[:SENSe]:SWEep:TYPE AUTO !sets sweep type Auto to On [:SENSe]:SWEep:TYPE SWP !selects sweep type Swept
Initial S/W Revision	Prior to A.02.00

**Auto** When in Auto, the selection of sweep type is governed by two different sets of rules, depending on whether you want to optimize for dynamic range or for speed. These rules are chosen under the **Sweep Type Rules** key.

Key Path	Sweep/Control, Sweep Setup, Sweep Type
<b>Remote Command</b>	[ :SENSe] :SWEep:TYPE:AUTO OFF   ON   0   1 [ :SENSe] :SWEep:TYPE:AUTO?
Example	:SWE:TYPE:AUTO ON
Couplings	Pressing Auto Couple always sets Sweep Type to Auto.
Preset	ON
State Saved	Saved in instrument state



Initial S/W Revision	Prior to A.02.00
----------------------	------------------

**Swept** Manually selects swept analysis, so it cannot change automatically to FFT.

Key Path	<b>Sweep/Control, Sweep Setup, Sweep Type</b>
Example	SWE:TYPE SWE
Dependencies	Grayed out while in Gated FFT (meaning Gate is ON and Gate Method is FFT).  If this key is selected, the gate method Gated FFT is grayed out.
Couplings	This selection is chosen automatically if any of the CISPR detectors is chosen for any active trace, in which case the FFT Sweep Type selection is also grayed out.
State Saved	Saved in instrument state
Readback	Swept
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

**FFT** Manually selects FFT analysis, so it cannot change automatically to Swept.

Key Path	<b>Sweep/Control, Sweep Setup, Sweep Type</b>
Example	SWE:TYPE FFT
Dependencies	When a CISPR detector (Quasi Peak, EMI Average, RMS Average) is selected for any active trace, the FFT key is grayed out.  If Sweep Type is manually selected to be FFT, the CISPR detectors are all grayed out.  Grayed out while in Gated LO (meaning Gate is ON and Gate Method is LO).  Grayed out while in Gated Video (meaning Gate is ON and Gate Method is Video).  If this key is selected, all of the gate Methods except Gated FFT are grayed out.  If Manual FFT is selected, the Signal ID key is grayed out.  When Signal ID is on, Manual FFT is grayed out.
Couplings	For both the dynamic range case and the speed case, swept is chosen whenever any form of Signal ID is on.
State Saved	Saved in instrument state
Readback	FFT
Initial S/W Revision	Prior to A.02.00

### Sweep Type Rules

Selects which set of rules will be used for automatically choosing the Sweep Type when Sweep Type is in Auto.

Key Path	<b>Sweep/Control, Sweep Setup</b>
<b>Remote Command</b>	[ :SENSE ] :SWEep:TYPE:AUTO:RULEs SPEEd DRANge [ :SENSE ] :SWEep:TYPE:AUTO:RULEs?
Dependencies	In Zero Span, this key is irrelevant and cannot be accessed (because the whole Sweep Setup menu is grayed out in Zero Span), however its settings can be changed remotely with no error indication.
Preset	DRANge
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

**Auto** This selection is automatically chosen when Auto Couple is pressed. When in Auto, the Sweep Type Rules are set to Best Dynamic Range. It seems like a very simple Auto function but the use of this construct allows a consistent statement about what the Auto Couple key does.

Key Path	<b>Sweep/Control, Sweep Setup, Sweep Type Rules</b>
<b>Remote Command</b>	[ :SENSE ] :SWEep:TYPE:AUTO:RULEs:AUTO [ :STATe ] OFF ON 0 1 [ :SENSE ] :SWEep:TYPE:AUTO:RULEs:AUTO [ :STATe ] ?
Example	:SWE:TYPE:AUTO:RUL:AUTO ON
Couplings	Pressing Auto Couple always sets Sweep Type Rules to Auto.
Preset	ON
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

**Best Dynamic Range** This selection tells the analyzer to choose between swept and FFT analysis with the primary goal of optimizing dynamic range. If the dynamic range is very close between swept and FFT, then it chooses the faster one. This auto selection also depends on RBW Type.

In determining the Swept or FFT setting, the auto rules use the following approach:

If the RBW Filter Type is Gaussian use the RBW for the Normal Filter BW and if that RBW > 210 Hz, use swept; for RBW <= 210 Hz, use FFT

If the RBW Filter Type is Flat Top, use the same algorithm but use 420 Hz instead of 210 Hz for the transition point between Swept and FFT

If any of the CISPR detectors is chosen for any active trace, always use Swept.

Key Path	<b>Sweep/Control, Sweep Setup, Sweep Type Rules</b>
----------	---

Example	SWE:TYPE:AUTO:RUL DRAN sets the auto rules to dynamic range.
Couplings	Directly selecting this setting sets AUTO to OFF.
Readback	Dynamic Range
Initial S/W Revision	Prior to A.02.00

**Best Speed** This selection tells the analyzer to choose between FFT or swept analysis based on the fastest analyzer speed.

Key Path	<b>Sweep/Control, Sweep Setup, Sweep Type Rules</b>
Example	SWE:TYPE:AUTO:RUL SPE sets the rules for the auto mode to speed
Couplings	Directly selecting this setting sets AUTO to OFF.
Readback	Speed.
Initial S/W Revision	Prior to A.02.00

### FFT Width

This menu displays and controls the width of the FFT's performed while in FFT mode. The "FFT width" is the range of frequencies being looked at by the FFT, sometimes referred to as the "chunk width" -- it is not the resolution bandwidth used when performing the FFT.

It is important to understand that this function does not directly set the FFT width, it sets the limit on the FFT Width. The actual FFT width used is determined by several other factors including the Span you have set. Usually the instrument picks the optimal FFT Width based on the current setup; but on occasion you may wish to limit the FFT Width to be narrower than that which the instrument would have set.

---

**NOTE** this function does not allow you to widen the FFT Width beyond that which the instrument might have set; it only allows you to narrow it. You might do this to improve the dynamic range of the measurement or eliminate nearby spurs from your measurement.

---

Note that the **FFT Width** setting will have no effect unless in an FFT sweep.

See ["More Information" on page 1697](#)

<b>Remote Command</b>	[ :SENSe ] :SWEep:FFT:WIDTh <real> [ :SENSe ] :SWEep:FFT:WIDTh?
Example	SWE:FFT:WIDTh 167 kHz sets this function to "<167.4 kHz"
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Sweep/Control, Sweep Setup</b>

Common Measurement Functions  
Sweep/Control

Notes	<p>The parameter is in units of frequency.</p> <p>For values sent from SCPI, the analyzer chooses the smallest value that is at least as great as the requested value.</p> <p>Examples:</p> <p>Parameter 3.99 kHz is sent over SCPI. Analyzer chooses 4.01 kHz</p> <p>Parameter 4.02 kHz is sent over SCPI. Analyzer chooses 28.81 kHz</p> <p>Parameter 8 MHz is sent over SCPI. Analyzer chooses 10 MHz</p>
Dependencies	<p>In some models, the analog prefilters are not provided. In these models the <b>FFT Width</b> function is always in <b>Auto</b>. The FFT Width key is blanked in these models, and the SCPI commands are accepted without error but have no effect.</p> <p>In Zero Span, this key is irrelevant and cannot be accessed (because the whole Sweep Setup menu is grayed out in Zero Span). However, its settings can be changed remotely with no error indication.</p>
Couplings	The FFT Width affects the <b>ADC Dither</b> function (see Meas Setup key) and the point at which the instrument switches from Swept to FFT acquisition.
Preset	The Preset is Auto, but Preset will also pick Best Dynamic Range and hence this function will be set to ~Maximum
State Saved	Saved in instrument state
Min	4.01 kHz
Max	The maximum available FFT width is dependent on the IF Bandwidth option. For Option B10 the maximum available width is 10 MHz; for Option B25 it is 25 MHz, and for Option B40 it is 40 MHz.
Backwards Compatibility SCPI	<p>[ :SENSE]:SWEep:FFT:SPAN:RATio &lt;integer&gt;</p> <p>[ :SENSE]:SWEep:FFT:SPAN:RATio?</p> <p>The behavior of the analyzer when it receives this command is to compute the “intended segment width” by dividing the Span by the FFTs/Span parameter, then converting this intended width to an actual width by using the largest available FFT Width that is still less than the intended segment width. The “Span” used in this computation is whatever the Span is currently set to, whether a sweep has been taken at that Span or not.</p>
Modified at S/W Revision	A.04.00

Key Path	<b>Sweep/Control, Sweep Setup</b>
Remote Command	<p>[ :SENSE]:SWEep:FFT:WIDTh:AUTO OFF ON 0 1</p> <p>[ :SENSE]:SWEep:FFT:WIDTh:AUTO?</p>
Example	:SWE:FFT:WIDT:AUTO ON
Couplings	Pressing Auto Couple always sets FFT Width to Auto.
Preset	ON

State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

### More Information

An FFT measurement can only be performed over a limited span known as the “FFT segment”. Several segments may need to be combined to measure the entire span. For advanced FFT control in the X-Series, you have direct control over the segment width using the **FFT Width** control. Generally, in automatic operation, the X-Series sets the segment width to be as wide as possible, as this results in the fastest measurements.

However, in order to increase dynamic range, most X-series models provide a set of analog prefilters that precede the ADC. Unlike swept measurements, which pass the signal through a bandpass before the ADC, FFT measurements present the full signal bandwidth to the ADC, making them more susceptible to overload, and requiring a lower signal level. The prefilters act to alleviate this phenomenon - they allow the signal level at the ADC to be higher while still avoiding an ADC overload, by eliminating signal power outside the bandwidth of interest, which in turn improves dynamic range.


Although narrowing the segment width can allow higher dynamic ranges some cases, this comes at the expense of losing some of the speed advantages of the FFT, because narrower segments require more acquisitions and proportionately more processing overhead.

However, the advantages of narrow segments can be significant. For example, in pulsed-RF measurements such as radar, it is often possible to make high dynamic range measurements with signal levels approaching the compression threshold of the analyzer in swept spans (well over 0 dBm), while resolving the spectral components to levels below the maximum IF drive level (about -8 dBm at the input mixer). But FFT processing experiences overloads at the maximum IF drive level even if the RBW is small enough that no single spectral component exceeds the maximum IF drive level. If you reduce the width of an FFT, an analog filter is placed before the ADC that is about 1.3 times as wide as the FFT segment width. This spreads out the pulsed RF in time and reduces the maximum signal level seen by the ADC. Therefore, the input attenuation can be reduced and the dynamic range increased without overloading the ADC.

Further improvement in dynamic range is possible by changing the **FFT IF Gain** (in the **Meas Setup** menu of many measurements). If the segments are reduced in width, **FFT IF Gain** can be set to High, improving dynamic range.

Depending on what IF Bandwidth option you have ordered, there can be up to three different IF paths available in FFT sweeps, as seen in the diagram below:

Common Measurement Functions  
Sweep/Control

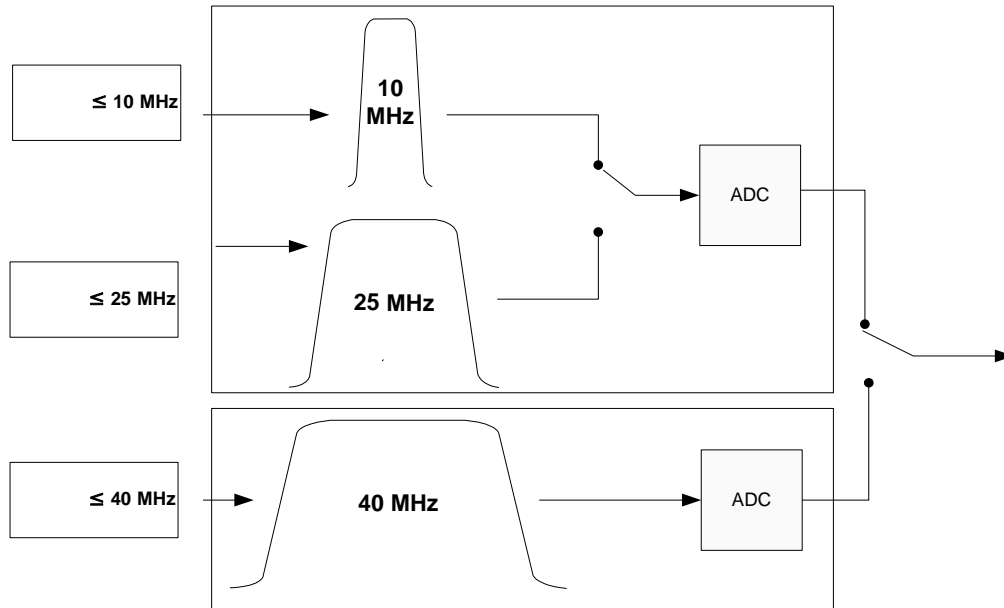

The 10 MHz path is always used for Swept sweeps. It is always used for FFT sweeps as well, unless the user specifies ~25 MHz in which case the 25 MHz path will be used for FFT sweeps, or ~40 MHz, in which case the 40 MHz path will be used for FFT sweeps. Note that, although each of these keys picks the specified path, the analyzer may choose an FFT width less than the full IF width, in order to optimize speed, trading off acquisition time versus processing time.

### Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the key changes to Resume. Pressing Resume un-pauses the measurement.

When you are Paused, pressing **Restart**, **Single** or **Cont** does a Resume.

Key Path	Sweep/Control
<b>Remote Command</b>	:INITiate:PAUSE
Dependencies	Grayed out in Measurements that do not support Pausing. Blanked in Modes that do not support Pausing.
Initial S/W Revision	Prior to A.02.00

Key Path	Sweep/Control
<b>Remote Command</b>	:INITiate:RESume
Dependencies	Grayed out in Measurements that do not support Pausing. Blanked in Modes that do not support Pausing.
Initial S/W Revision	Prior to A.02.00

## Gate

Accesses a menu that enables you to control the gating function. The Gate functionality is used to view signals best viewed by qualifying them with other events.

Gate setup parameters are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset.

---

**NOTE** Sweep Time autocoupling rules and annotation are changed by Gate being on.

---


Key Path	<b>Sweep/Control</b>
Scope	Meas Global
Readback	The state and method of Gate, as [Off, LO] or [On, Video]. Note that for measurements that only support gated LO, the method is nonetheless read back, but always as LO.
Initial S/W Revision	Prior to A.02.00

### Gate On/Off

Turns the gate function on and off.

When the Gate Function is on, the selected Gate Method is used along with the gate settings and the signal at the gate source to control the sweep and video system with the gate signal. Not all measurements allow every type of Gate Methods.

When Gate is on, the annunciation in the measurement bar reflects that it is on and what method is used, as seen in the following "Gate: LO" annunciator graphic.

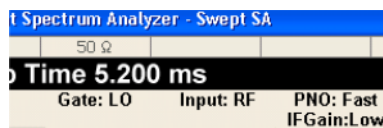

Key Path	<b>Sweep/Control, Gate</b>
<b>Remote Command</b>	[ :SENSe ] :SWEep:EGATe [ :STATe ] OFF   ON   0   1 [ :SENSe ] :SWEep:EGATe [ :STATe ] ?
Example	SWE:EGAT ON SWE:EGAT?
Dependencies	The function is unavailable (grayed out) and Off when: Gate Method is LO or Video and FFT Sweep Type is manually selected. Gate Method is FFT and Swept Sweep Type is manually selected. Marker Count is ON.

Common Measurement Functions  
Sweep/Control

Couplings	<p>When Meas Method is RBW or FAST, this function is unavailable and the key is grayed out.</p> <p>Whenever Gate is on, Meas Method, RBW or FAST is unavailable and keys for those are grayed out.</p> <p>When Gate is on, Offset Res BW and Offset Video BW are ignored (if you set these values) and the measurement works as if all Offset Res BW and all Offset Video BW are coupled with the Res BW and the Video BW under the BW menu. When Gate is on, the Offset BW key in the Offset/Limit menu is grayed out.</p>
Preset	Off
State Saved	Saved in instrument state
Range	On Off
Backwards Compatibility SCPI	[:SENSe]:SWEep:TIME:GATE[:STATe]
Initial S/W Revision	Prior to A.02.00

### Gate View On/Off

Turning on Gate View in the Swept SA measurement provides a single-window gate view display.

Turning on Gate View in other measurements shows the split-screen Gate View. In these measurements, when the Gate View is on, the regular view of the current measurement traces and results are reduced vertically to about 70% of the regular height. The Zero Span window, showing the positions of the Gate, is shown between the Measurement Bar and the reduced measurement window. By reducing the height of the measurement window, some of the annotation on the Data Display may not fit and is not shown.

Key Path	<b>Sweep/Control, Gate</b>
Remote Command	<pre>[ :SENSe ] :SWEep:EGATe:VIEW ON OFF 1 0</pre> <pre>[ :SENSe ] :SWEep:EGATe:VIEW?</pre>
Example	SWE:EGAT:VIEW ON turns on the gate view.
Dependencies	<p>In the Swept SA measurement:</p> <p>In Gate View, the regular Sweep Time key is grayed out .</p> <p>In the other measurements:</p> <p>When you turn Gate View on, the lower window takes on the current state of the instrument. Upon leaving Gate View, the instrument takes on the state of the lower window.</p> <p>When you turn Gate View on, the upper window Sweep Time is set to the gate view sweep time.</p>





## Common Measurement Functions Sweep/Control

example is for the ACP measurement:



Turning Gate View off returns the analyzer to the Normal measurement view.

In the Swept SA, the normal measurement view is the single-window Swept SA view. When returning to this view, the Swept SA measurement returns to the Span it was in before entering **Gate View** (even if that is Zero Span).

The **Gate View** window is triggered from the Gate Source, with zero trigger delay. Also, when updating the **Gate View** window, the Gate itself must not operate. So it is internally shut off while the gate view window is being updated. For the Swept SA measurement, this means that the Gate is internally shut off whenever the gate view window is displayed. The measurement bar and softkeys continue to show the Trigger source for the main sweep window and give no indication that the Gate is shut off or that the Gate View window is triggered from the Gate Source.

When in **Gate View**, vertical lines are displayed in the Gate View window as follows:

- Green lines are displayed at the gate edges as follows: in Edge Gate, a line is shown for Delay and one for the end of the Gate period (defined by Length, even in FFT. In Level Gate a line is shown only for Delay. You can adjust the position of the green lines by adjusting the gate length and the gate delay. These lines update in the Gate View window as the active function changes, even if the window is not being updated. In Gated LO and Gated Video, these lines are positioned relative to the delay reference line (not relative to 0 time). In Gated FFT, their location is relative to the left edge of the screen.
- A blue line is displayed showing the delay reference, that is, the reference point for the Gate Delay within the Zero Span window. The blue line represents where (in time) the effective location of the gate start would be if the gate were programmed to zero delay.

- The second blue line is labeled "MIN FAST" as shown in the figure above because it represents the minimum Gate Delay for fast Gated LO operation. This line is only displayed in Gated LO. You cannot scroll (knob) or decrement (down key) the Gate Delay to less than that represented by the position of this line, it can only be set below this position manually, although once there it can be moved freely with the knob while below the line.
- A yellow line in the Gated Video case only, is displayed at  $Blength$ , where  $Blength$  is the display point (bucket) length for the swept trace, which is given by the sweep time for that trace divided by number of Points – 1. So it is referenced to 0 time, not to the delay reference. This line is labeled NEXT PT (it is not shown in the figure above because the figure above is for Gated LO). The yellow line represents the edge of a display point (bucket). Normally in Gated Video, the bucket length must be selected so that it exceeds the off time of the burst. There is another way to use the analyzer in Gated Video measurements, and that is to set the bucket width much shorter than the off time of the burst. Then use the Max Hold trace function to fill in "missing" buckets more slowly. This allows you to see some of the patterns of the Gated Video results earlier, though seeing a completely filled-in spectrum later.

### Gate View Sweep Time

Controls the sweep time in the Gate View window. To provide an optimal view of the gate signal, the analyzer initializes Gate View Sweep Time based on the current settings of Gate Delay and Gate Length.

Key Path	Sweep/Control, Gate
<b>Remote Command</b>	[ :SENSe ] :SWEep:EGATe:TIME <time> [ :SENSe ] :SWEep:EGATe:TIME?
Example	SWE:EGAT:TIME 500 ms
Dependencies	Gate View Sweep Time is initialized:  On Preset (after initializing delay and length).  Every time the Gate Method is set/changed.  Additionally, in the Swept SA measurement, whenever you do a Preset, or leave Gate View, the analyzer remembers the Gate Delay and Gate Length settings. Then, when returning to Gate View, if the current Gate Delay and/or Gate Length do not match the remembered values Gate View Sweep Time is re-initialized.  1. Compute the location of the "gate stop" line, which you know is at time $t = t_{min} + GateDelay + GateLength$ .
Preset	519.3 $\mu$ s WiMAX OFDMA: 5 ms GSM/EDGE: 1 ms
State Saved	Saved in instrument state
Min	1 $\mu$ s
Max	6000 s
Initial S/W Revision	Prior to A.02.00

### Gate Delay

Controls the length of time from the time the gate condition goes True until the gate is turned on.

Key Path	Sweep/Control, Gate
Remote Command	[ :SENSE ] :SWEep:EGATE:DELay <time> [ :SENSE ] :SWEep:EGATE:DELay?
Example	SWE:EGAT:DELay 500ms SWE:EGAT:DELay?
Notes	Units of time are required or no units; otherwise an invalid suffix error will be generated. See error -131.
Preset	57.7 us WiMAX OFDMA: 71 us GSM/EDGE: 600 us
State Saved	Saved in instrument state
Min	0.0 us
Max	100 s
Backwards Compatibility SCPI	[:SENSE]:SWEep:TIME:GATE:DELay
Initial S/W Revision	Prior to A.02.00

### Gate Length

Controls the length of time that the gate is on after it opens.

Key Path	Sweep/Control, Gate
Remote Command	[ :SENSE ] :SWEep:EGATE:LENGth <time> [ :SENSE ] :SWEep:EGATE:LENGth?
Example	SWE:EGAT:LENG 1 SWE:EGAT:LENG?
Notes	Units of time are required or no units; otherwise an invalid suffix will be generated.
Dependencies	<p>Grayed out when Gate Method is set to FFT in which case the label changes to that shown below.</p> <div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p><b>Gate Length</b> (=1.83/RBW) 2.8 ms</p> </div> <p style="text-align: right; margin-right: 20px;">vsd 39-1</p> <p>The key is also grayed out if Gate Control = Level.</p>

Preset	461.6 us WiMAX OFDMA: 50 us GSM/EDGE: 200 us
State Saved	Saved in instrument state
Min	100 ns
Max	5 s
Backwards Compatibility SCPI	[:SENSe]:SWEep:TIME:GATE:LENGth
Initial S/W Revision	Prior to A.02.00

### Method

This lets you choose one of the three different types of gating.

Not all types of gating are available for all measurements.

Key Path	<b>Sweep/Control, Gate</b>
<b>Remote Command</b>	[ :SENSe ] :SWEep:EGATe:METhod LO VIDeo FFT [ :SENSe ] :SWEep:EGATe:METhod?
Example	SWE:EGAT:METh FFT
Preset	LO
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

**LO** When Gate is set to On, the LO sweeps whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source.

This form of gating is more sophisticated, and results in faster measurements. With Gated LO, the analyzer only sweeps while the gate conditions are satisfied. This means that a sweep could take place over several gate events. It would start when the gate signal goes true and stop when it goes false, and then continue when it goes true again. But since the LO is sweeping as long as the gate conditions are satisfied, the sweep typically finishes much more quickly than with Gated Video.

When in zero span, there is no actual sweep performed. But data is only taken while the gate conditions are satisfied. So even though there is no sweep, the gate settings will impact when data is acquired.

Key Path	<b>Sweep/Control, Gate, Method</b>
Dependencies	Key is unavailable when Gate is On and FFT Sweep Type manually selected. When selected, Sweep Type is forced to Swept and the FFT key in Sweep Type is grayed out.
Readback	LO
Initial S/W Revision	Prior to A.02.00

Common Measurement Functions  
Sweep/Control

**Video** When Gate is set to On, the video signal is allowed to pass through whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source.

This form of gating may be thought of as a simple switch, which connects the signal to the input of the spectrum analyzer. When the gate conditions are satisfied, the switch is closed, and when the gate conditions are not satisfied, the switch is open. So we only look at the signal while the gate conditions are satisfied.

With this type of gating, you usually set the analyzer to sweep very slowly. In fact, a general rule is to sweep slowly enough that the gate is guaranteed to be closed at least once per data measurement interval (bucket). Then if the peak detector is used, each bucket will represent the peak signal as it looks with the gate closed.

Key Path	Sweep/Control, Gate, Method
Dependencies	Key is unavailable when Gate is On and FFT Sweep Type manually selected. When selected, Sweep Type is forced to Swept and the FFT key in Sweep Type is grayed out
Readback	Video
Initial S/W Revision	Prior to A.02.00

**FFT** When Gate is set to On, an FFT is performed whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source. This is an FFT measurement which begins when the gate conditions are satisfied. Since the time period of an FFT is approximately  $1.83/RBW$ , you get a measurement that starts under predefined conditions and takes place over a predefined period. So, in essence, this is a gated measurement. You have limited control over the gate length but it works in FFT sweeps, which the other two methods do not.

Gated FFT cannot be done in zero span since the instrument is not sweeping. So in zero span the Gated LO method is used. Data is still only taken while the gate conditions are satisfied, so the gate settings do impact when data is acquired.

The Gate Length will be  $1.83/RBW$ .

This is a convenient way to make a triggered FFT measurement under control of an external gating signal.

Key Path	Sweep/Control, Gate
Dependencies	Key is unavailable when Gate is On and Swept Sweep Type manually selected. Key is unavailable when gate Control is set to Level. When selected, Sweep Type is forced to FFT and the Swept key in Sweep Type is grayed out Forces Gate Length to $1.83/RBW$
Readback	FFT
Initial S/W Revision	Prior to A.02.00

## Gate Source

The menus under the **Gate Source** key follow the same pattern as those under the **Trigger key**, with the exception that neither **Free Run** nor **Video** are available as Gate Source selections. Any changes to the settings in the setup menus under each Gate Source selection key (for example: **Trigger Level**) also affect the settings under the Trigger menu keys. Note that the selected Trigger Source does not have to match the Gate Source.

Key Path	Sweep/Control, Gate
<b>Remote Command</b>	[ :SENSe] :SWEep:EGATe:SOURce EXTernal1   EXTernal2   LINE   FRAMe   RFBurst  [ :SENSe] :SWEep:EGATe:SOURce?
Dependencies	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTernal2 parameter will generate a “Hardware missing; Not available for this model number” error
Preset	EXTernal 1  GSM/EDGE: FRAMe
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

## Control Edge/Level

Sets the method of controlling the gating function from the gating signal.

### Edge

In Edge triggering, the gate opens (after the Delay) on the selected edge (for example, positive) of the gate signal and closes on the alternate edge (for example, negative).

### Level

In Level triggering, the gate opens (after the Delay) when the gate signal has achieved a certain level and stays open as long as that level is maintained.


Key Path	Sweep/Control, Gate
<b>Remote Command</b>	[ :SENSe] :SWEep:EGATe:CONTRol EDGE   LEVEl  [ :SENSe] :SWEep:EGATe:CONTRol?
Example	SWE:EGAT:CONT EDGE
Dependencies	If the Gate Method is FFT the Control key is grayed out and Edge is selected.  If the Gate Source is TV, Frame or Line, the Control key is grayed out and Edge is selected.
Preset	EDGE
State Saved	Saved in instrument state
Backwards Compatibility SCPI	[ :SENSe]:SWEep:TIME:GATE:TYPE

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Gate Holdoff

Lets you increase or decrease the wait time after a gate event ends before the analyzer will respond to the next gate signal.

After any Gate event finishes, the analyzer must wait for the sweep system to settle before it can respond to another Gate signal. The analyzer calculates a "wait time," taking into account a number of factors, including RBW and Phase Noise Optimization settings. The goal is to achieve the same accuracy when gated as in ungated operation. The figure below illustrates this concept:

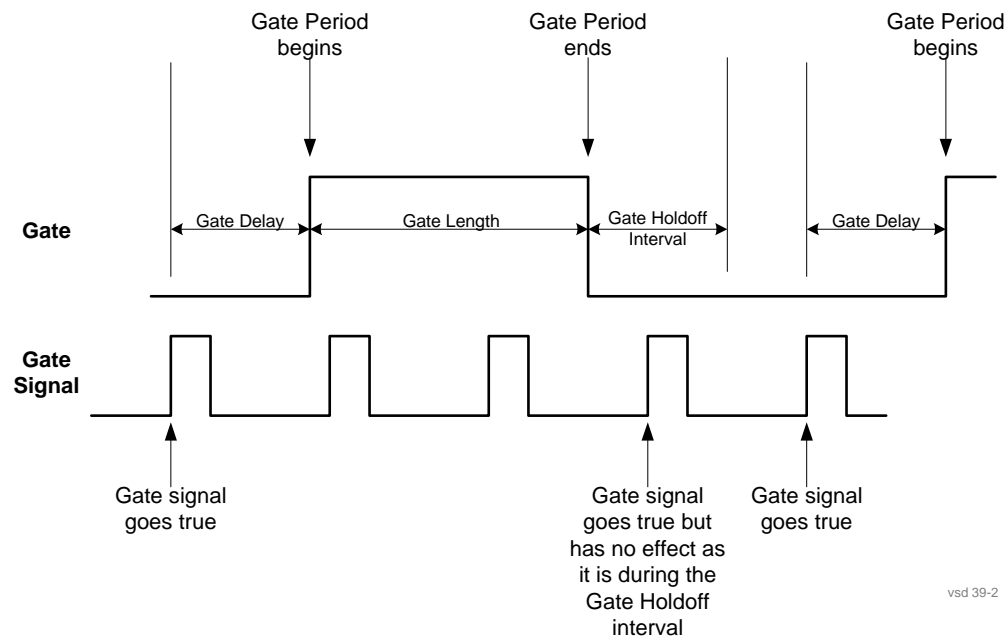

When Gate Holdoff is in Auto, the wait time calculated by the analyzer is used. When Gate Time is in Manual, the user may adjust the wait time, usually decreasing it in order to achieve greater speed, but at the risk of decreasing accuracy.

When the **Method** key is set to **Video** or **FFT**, the **Gate Holdoff** function has no effect.

In measurements that do not support Auto, the value shown when Auto is selected is “---” and the manually set holdoff is returned to a query.

Key Path	Sweep/Control, Gate
<b>Remote Command</b>	<pre>[ :SENSe]:SWEep:EGATe:HOLDoFF &lt;time&gt; [ :SENSe]:SWEep:EGATe:HOLDoFF? [ :SENSe]:SWEep:EGATe:HOLDoFF:AUTO OFF ON 0 1 [ :SENSe]:SWEep:EGATe:HOLDoFF:AUTO?</pre>



Example	SWE:EGAT:HOLD 0.0002 SWE:EGAT:HOLD? SWE:EGAT:HOLD:AUTO ON SWE:EGAT:HOLD:AUTO?
Couplings	<p>When <b>Gate Holdoff</b> is <b>Auto</b>, the <b>Gate Holdoff</b> key shows the value calculated by the analyzer for the wait time.</p> <p>Pressing the <b>Gate Holdoff</b> key while it is in <b>Auto</b> and not selected, causes the key to become selected and allows the user to adjust the value. If the value is adjusted, the setting changes to <b>Man</b>.</p> <p>Pressing the <b>Gate Holdoff</b> key, while it is in <b>Auto</b> and selected, does not change the value of <b>Gate Holdoff</b>, but causes the setting to change to <b>Man</b>. Now the user can adjust the value.</p> <p>Pressing the key while it is in <b>Man</b> and selected, cause the value to change back to <b>Auto</b>.</p> <p>Pressing the key while it is in <b>Man</b> and not selected, causes the key to become selected and allows the user to adjust the value.</p> <p>When <b>Method</b> is set to <b>Video</b> or <b>FFT</b>, the <b>Gate Holdoff</b> function has no effect.</p>
Preset	Auto Auto/On
State Saved	Saved in instrument state
Min	1 μsec
Max	1 sec
Initial S/W Revision	Prior to A.02.00

### Gate Delay Compensation

This function allows you to select an RBW-dependent value by which to adjust the gate delay, to compensate for changes in the delay caused by RBW effects.

You can select between uncompensated operation and two types of compensation, **Delay Until RBW Settled** and **Compensate for RBW Group Delay**.

See [“More Information” on page 1710](#)

Key Path	<b>Sweep/Control, Gate</b>
Scope	Meas Global
<b>Remote Command</b>	[ :SENSe] :SWEep:EGATe:DELay:COMPensation:TYPE OFF   SETTled   GDELay  [ :SENSe] :SWEep:EGATe:DELay:COMPensation:TYPE?
Example	SWE:EGAT:DEL:COMP:TYPE SETT SWE:EGAT:DEL:COMP:TYPE?

Notes	<p>Although this function is Meas Global, there are some measurements that do not support this function. In those measurements the operation will be Uncompensated. Going into one of those measurements will not change the Meas Global selection; it will simply display the grayed-out menu key with “Uncompensated” showing as the selection. This is a non-forceful grayout, so the SCPI command is still accepted.</p> <p>If Gate Delay Compensation is not supported at all within a particular mode, the key is not displayed, and if the SCPI command is sent while in a measurement within that mode, an “Undefined Header” error is generated.</p> <p>Measurements that do not support this function include: Swept SA</p>
Preset	<p>TD-SCDMA mode: Compensate for RBW Group Delay</p> <p>All other modes: Delay Until RBW Settled</p>
State Saved	Saved in instrument state
Range	Uncompensated Delay Until RBW Settled Compensate for RBW Group Delay
Readback text	Uncompensated Settled Group Delay
Initial S/W Revision	Prior to A.02.00

### More Information

Selecting **Uncompensated** means that the actual gate delay is as you sets it.

Selecting **Delay Until RBW Settled** causes the gate delay to be increased above the user setting by an amount equal to  $3.06/\text{RBW}$ . This compensated delay causes the GATE START and GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (for example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** key does NOT change.

**Delay Until RBW Settled** allows excellent measurements of gated signals, by allowing the IF to settle following any transient that affects the burst. Excellent measurements also require that the analysis region not extend into the region affected by the falling edge of the burst. Thus, excellent measurements can only be made over a width that declines with narrowing RBWs. Therefore, for general purpose compensation, you will still want to change the gate length with changes in RBW even if the gate delay is compensated.

Selecting **Compensate for RBW Group Delay** causes the gate delay to be increased above the user setting by an amount equal to  $1.81/\text{RBW}$ . This compensated delay causes the GATE START, GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (for example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** key does NOT change. **Compensate for RBW Group Delay** also includes gate length compensation; the gate length itself is adjusted as necessary to attempt to compensate for delay effects imposed by the RBW.

**Compensate for RBW Group Delay** is similar to **Delay Until RBW Settled** , but compensates for the

group delay of the RBW filter, rather than the filter settling time. As the RBW gets narrow, this can allow the settling tail of the RBW to affect the beginning part of the gated measurement, and allow the beginning of the RBW settling transient to affect the end of the gated measurement. These two effects are symmetric because the RBW response is symmetric. Because the gate length is not automatically compensated, some users might find this compensation to be more intuitive than compensation for RBW settling.

### Min Fast Position Query (Remote Command Only)

This command queries the position of the MIN FAST line, relative to the delay reference (REF) line. See section “[Gate View On/Off](#)” on page 1700. If this query is sent while not in gate view, the MinFast calculation is performed based on the current values of the appropriate parameters and the result is returned. Knowing this value lets you set an optimal gate delay value for the current measurement setup.

<b>Remote Command:</b>	[ :SENSe ] :SWEep :EGATe :MINFast?
Example:	SWE:EGAT:MIN?
Initial S/W Revision:	Prior to A.02.00

### Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more points provides greater resolution; using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time; however, it can slightly impact the trace processing time and therefore the overall measurement speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available to the user will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the analyzer. The sweep time resolution will change. Trace data for all the traces will be cleared and, if Sweep is in Cont, a new trace taken. If any trace is in average or hold, the averaging starts over.

When sweep points is changed, an informational message is displayed, "Sweep points changed, all traces cleared."

Key Path	Sweep
<b>Remote Command</b>	[ :SENSe ] :SWEep :POINTs <integer> [ :SENSe ] :SWEep :POINTs?
Example	SWE:POIN 5001 SWE:POIN?
Dependencies	Grayed out in measurements that do not support swept Blanked in modes that do not support swept.

Common Measurement Functions  
Sweep/Control

Couplings	<p>Will be affected by: log sweep</p> <p>Whenever the number of sweep points change:</p> <p>All trace data is erased</p> <p>Any traces with Update Off will also go to Display Off (like going from View to Blank in the older analyzers)</p> <p>Sweep time is re-quantized</p> <p>Any limit lines that are on will be updated</p> <p>If averaging/hold is on, averaging/hold starts over</p>
Preset	1001
State Saved	Saved in instrument state
Min	1
Max	40001
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

### Abort (Remote Command Only)

This command is used to stop the current measurement. It aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the analyzer is in the process of aligning when ABORT is sent, the alignment finishes before the abort function is performed. So ABORT does not abort an alignment.

If the analyzer is set for Continuous measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is set for Single measurement, it remains in the "idle" state until an :INIT:IMM command is received.

<b>Remote Command:</b>	:ABORT
Example:	:ABOR
Notes:	<p>If :INITiate:CONTinuous is ON, then a new continuous measurement will start immediately; with sweep (data acquisition) occurring once the trigger condition has been met.</p> <p>If :INITiate:CONTinuous is OFF, then :INITiate:IMMEDIATE is used to start a single measurement; with sweep (data acquisition) occurring once the trigger condition has been met.</p>
Dependencies:	<p>For continuous measurement, ABORT is equivalent to the Restart key.</p> <p>Not all measurements support the abort command.</p>

Status Bits/OPC dependencies:	The STATUS:OPERation register bits 0 through 8 are cleared. The STATUS:QUEStionable register bit 9 (INTEgrity sum) is cleared. Since all the bits that feed into OPC are cleared by the ABORT, the ABORT will cause the *OPC query to return true.
Initial S/W Revision:	Prior to A.02.00



## Trace/Detector

The **Trace/Detector** menu lets you control the acquisition, display, storage, detection and manipulation of trace data for the six available traces. The first page of this menu contains a selection of the trace type (**Clear Write, Trace Average, Max Hold, Min Hold**) for the selected trace. Those choices are described here.

A trace is a series of data points, each having an x and a y value. The x value is usually frequency (or time) and the y value is amplitude. Each data point is referred to as a trace point. In any given trace, trace point 0 is the first point, and trace point (sweep\_points – 1) is the last. For example, in a 1001 point trace, the first point is 0 and the last is 1000. Another term sometimes used to describe traces is bucket. A bucket is the frequency span before and after the trace point equal to the point spacing. The y value is measured across (during) this bucket.

For more information see:

[“Trace Update Indicator” on page 1716](#)

[“Trace Annotation” on page 1717](#)

Key Path	Trace/Detector
<b>Remote Command</b>	:TRACe [1]   2   3   4   5   6 :TYPE WRITe   AVERAge   MAXHold   MINHold :TRACe [1]   2   3   4   5   6 :TYPE?
Notes	WRITe = Clear Write AVERAge = Trace Average MAXHold = Maximum Hold MINHold = Minimum Hold
Couplings	,Sending a trace command does not cause the specified trace to become selected.  Selecting a trace type (pressing any of the four keys or sending a TRAC :TYPE command) puts <b>Update in On</b> and <b>Display in On</b> , even if that trace type was already selected.
Preset	Write.  During normal operation of the instrument (that is, other than at powerup), after a mode preset is performed, all active traces are cleared. This is so their domains and initial x values will match the current X Axis of the analyzer. Inactive traces are not cleared after a preset, so a trace which is in <b>Update=On</b> before a preset, and in <b>Update=Off</b> after the preset, will still have the data that it had before the preset.
State Saved	The type of each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00


### Trace Update Indicator

Trace updates can take one of two forms:

The trace is updated in a single operation that affects all of the points in the trace at once. This happens, for example, in the case of very fast (< 200 ms) sweeps, single-chunk FFT's, and the initial math operation after a math function is set for a trace.

The trace is updated in a series of discrete steps, with measurement data being gathered between each step. This will be the case for slow sweeps, multi-chunk FFT's, etc.

In the first case, no update indicator is required. In the second case, however, a visual indicator exists on the trace where the new data is being written, a green "caret" or ^ symbol, which moves across the bottom of the graticule showing the current trace point.

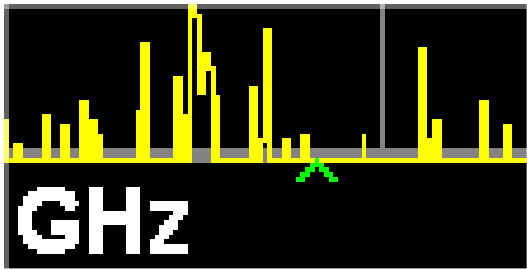

### Trace Annunciator Panel

The trace annunciator panel appears on the right hand side of the Meas Bar. Here is an explanation of the fields in this panel:



On the line labeled "TRACE", each trace number is shown, in the trace color. A green box is drawn around the currently selected trace

Below each trace number, on the line labeled "TYPE", is a letter signifying the trace type for that trace number, where

- W=Clear Write
- A=Trace Average
- M=Max Hold
- m=Min Hold

If the letter is white it means the trace is being updated (**Update = On**); if the letter is dimmed, it means the trace is not being updated (**Update = Off**). A strikethrough (e.g., W) indicates that the trace is blanked (**Display = Off**). Note that it is possible for a trace to be updating and blanked, which is useful if the trace is a trace math component.

The third line, labeled "DET", shows the detector type for each trace, or, if trace math is on for that trace,



it shows an “f” (for “math function”). It is not always possible to have a unique detector for each trace, but the analyzer hardware provides the maximum flexibility of detector selection in order to maintain the highest accuracy. The letters used for this readout are:

N=Normal  
A=Average  
P=peak  
p=negative peak  
S=Sample  
Q=Quasi Peak  
E=EMI Average  
R=RMS Average  
f=math function

If the DET letter is green it means the detector is in Auto; if it is white it means the detector has been manually selected.

### Trace Annotation

When Trace Annotation (see View/Display menu) is On, each non-blanked trace is labeled on the trace with the detector used to take it, unless a trace math function is on for that trace, in which case it is labeled with the math function.

The detector labels are:

NORMNormal

PEAKPeak

SAMPsSample

NPEAKNegative Peak

RMSAverage detector with Power Average (RMS)

LG AVGAverage detector with Log-Pwr Average

VAVGAverage detector with Voltage Average

QPEAKQuasi Peak

EMI AVGEMI Average

RMS AVGRMS Average

The trace math labels are:

PDIFPower Difference

PSUMPower Sum

LOFFLog Offset

LDIFLog Difference

### Select Trace

Determines which trace the type control keys will affect. Press **Trace** until the number of the desired

trace is underlined.

Key Path	Trace
Preset	Trace 1
State Saved	The number of the selected trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00

## Clear Write

In **Clear Write** type each trace update replaces the old data in the trace with new data. Pressing the **Clear Write** key for the selected trace, or sending the `TRAC:TYPE WRIT` command for the specified trace, sets the trace type to **Clear Write** and causes the trace to be cleared. Then a new sweep is initiated.

Because pressing **Clear Write** stops the current sweep and initiates a new one, **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep, and may not accurately reflect the displayed count. Therefore, when **Clear Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear Write**, if a measurement-related instrument setting is changed, a new sweep is initiated but the trace is not cleared.

Key Path	Trace/Detector
Example	TRAC:TYPE WRIT
Notes	See <a href="#">“Trace/Detector” on page 1715</a> .
Couplings	Whenever you press <b>Clear Write</b> or send the equivalent SCPI command, <b>Update</b> is set to <b>On</b> and <b>Display</b> is set to <b>On</b> .  Automatic detector selection and the VBW:RBW ratio auto rules both depend on the trace type selections
Preset	After a Preset, any trace that is in <b>Clear Write</b> is cleared (all trace points set to mintracevalue).
State Saved	The type for each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00

## Trace Average

In **Trace Average** type the analyzer maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data. Details of the averaging calculations may be found under [“Average/Hold Number” on page 1589](#) and [“Average Type” on page 1590](#) in the Meas Setup Section.

See [“Trace Averaging: More Information” on page 1719](#).

Key Path	Trace/Detector
----------	----------------

Example	TRAC2:TYPE AVER
Notes	See <a href="#">“Trace/Detector” on page 1715</a> .
Couplings	Affected by <b>Average Type</b> and <b>Average/Hold Number</b>  Whenever you press <b>Trace Average</b> or send the equivalent SCPI command, <b>Update</b> is set to <b>On</b> and <b>Display</b> is set to <b>On</b> .  Automatic detector selection and the VBW:RBW ratio auto rules both depend on the trace type selections.
Preset	after a Preset, any trace that is in Trace Average is cleared (all trace points set to mintracevalue).
State Saved	the type for each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00

### Trace Averaging: More Information

Pressing the **Trace Average** key (for the selected trace), or sending the TRAC:TYPE AVER command (for the specified trace), sets the trace type to **Trace Average** and causes the average to be restarted.

When in **Trace Average**, if a measurement-related instrument setting is changed, the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

The average/hold count k is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data

A new sweep is initiated.

Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

### Max Hold

In **Max Hold** type the analyzer maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data.

Pressing the **Max Hold** key for the selected trace, or sending the :TRAC:TYPE MAXH command for the specified trace, sets the trace type to **Max Hold**, causes the trace to be cleared, and causes the **Max Hold** sequence to be restarted.

When in **Max Hold**, if a measurement-related instrument setting is changed, the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Common Measurement Functions  
Trace/Detector

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

Key Path	Trace/Detector
Example	TRAC4:TYPE MAXH
Notes	See ““Trace/Detector” on page 1715”.
Couplings	Affected by <b>Average Type</b> and <b>Average/Hold Number</b> Whenever you press <b>Max Hold</b> or send the equivalent SCPI command, <b>Update</b> is set to <b>On</b> and <b>Display</b> is set to <b>On</b> . Automatic detector selection and the VBW:RBW ratio auto rules both depend on the trace type selections.
Preset	After a Preset, any trace that is in <b>Max Hold</b> is cleared (all trace points set to mintracevalue).
State Saved	The type for each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00

### Min Hold

In **Min Hold** type the analyzer maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under “Average/Hold Number” on page 1589 in the Meas Setup Section.

Pressing the **Min Hold** key for the selected trace, or sending the TRAC:TYPE MINH command for the specified trace, sets the trace type to **Min Hold**, causes the trace to be cleared, and causes the **Min Hold** sequence to be restarted.

When in **Min Hold**, if a measurement-related instrument setting is changed, the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, as there is only one count for Trace Average and Hold.

Key Path	Trace/Detector
Example	TRAC3:TYPE MINH
Notes	See ““Trace/Detector” on page 1715 ”.

Couplings	Affected by <b>Average Type</b> and <b>Average/Hold Number</b> . Whenever you press <b>Min Hold</b> or send the equivalent SCPI command, <b>Update</b> is set to <b>On</b> and <b>Display</b> is set to <b>On</b> . Automatic detector selection and the VBW:RBW ratio auto rules both depend on the trace type selections.
Preset	After a Preset, any trace that is in <b>Min Hold</b> is cleared (all trace points set to maxtracevalue).
State Saved	The type for each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00

**View/Blank**

This key lets you set the state of the two trace variables, Update and Display. The four choices available in this 1-of-N menu are:

Trace On: Update and Display both On

View: Update Off and Display On

Blank: Update Off and Display Off

Background: Update On, Display Off (this allows a trace to be blanked and continue to update “in the background”, which was not possible in the past)

A trace with Display Off is indicated by a strikethrough thru the type letter in the trace annotation panel in the Measurement bar. A trace with Update Off is indicated by dimming the type letter in the trace annotation panel in the Measurement bar. So in the example below, Traces 3, 4, 5 and 6 have Update Off and Traces 4 and 6 have Display Off.



See “Trace Update State On/Off” on page 1723.

See “Trace Display State On/Off” on page 1723.

See “More Information” on page 1723.

Key Path	Trace/Detector
----------	----------------

Notes	<p>The four states of this 1-of-N actually set two variables, Update and Display, to their four possible combinations:</p> <p>Trace On: Update and Display both On</p> <p>View: Update Off and Display On</p> <p>Blank: Update Off and Display Off</p> <p>Background: Update On, Display Off</p> <p>See tables below for detail on the SCPI to control these two variables.</p>
Couplings	<p>Selecting a trace type (Clear Write, Trace Average, Max Hold, Min Hold) for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in Trace On (<b>Update On and Display On</b>), even if that trace type was already selected.</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts the trace in Trace On (<b>Update On and Display On</b>), even if that detector was already selected.</p> <p>Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in Trace On (<b>Update On and Display On</b>), even if that math mode was already selected.</p> <p>Loading a trace from a file puts that trace in View regardless of the state it was in when it was saved; as does being the target of a <b>Copy</b> or a participant in an <b>Exchange</b>.</p>
Initial S/W Revision	Prior to A.02.00

### Trace Update State On/Off

Key Path	Trace/Detector
<b>Remote Command</b>	:TRACe[1]   2   3   4   5   6:UPDate[:STATE] ON OFF 0 1 :TRACe[1]   2   3   4   5   6:UPDate[:STATE] ?
Example	TRAC2:UPD 0 Makes trace 2 inactive (stops updating)
Couplings	Whenever you set <b>Update</b> to <b>On</b> for any trace, the <b>Display</b> is set to <b>On</b> for that trace.
Preset	1 0 0 0 0 0 ( <b>On</b> for Trace 1; <b>Off</b> for 2–6)
State Saved	Saved in Instrument State
Initial S/W Revision	Prior to A.02.00

### Trace Display State On/Off

Key Path	Trace/Detector
<b>Remote Command</b>	:TRACe[1]   2   3   4   5   6:DISPlay[:STATE] ON OFF 0 1 :TRACe[1]   2   3   4   5   6:DISPlay[:STATE] ?
Example	TRAC2:DISP,1 Makes trace 2 visible TRAC3:DISP,0 Blanks trace 3
Couplings	Whenever you set <b>Update</b> to <b>On</b> for any trace, the <b>Display</b> is set to <b>On</b> for that trace.
Preset	1 0 0 0 0 0 ( <b>On</b> for Trace 1; <b>Off</b> for 2–6)
State Saved	Saved in Instrument State
Initial S/W Revision	Prior to A.02.00

### More Information

When a trace becomes inactive, the following things happen:

Any update from the SENSE system (detectors) immediately stops (does not wait for end of sweep)  
the trace is displayed at half intensity (as long as it stays inactive)

Inactive traces display across the entire X Axis of the instrument. Their horizontal placement does not change even if X Axis settings subsequently are changed, although Y-axis settings will affect the vertical placement of data.

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

if data is written to that trace from remote

if trace data is loaded from mass storage

Common Measurement Functions  
Trace/Detector

if the trace is the target of a Copy or participant in an Exchange

if the trace is cleared using the Clear Trace function (below)

When a trace becomes active (Update=On), the trace is cleared, the average count is reset, and a new sweep is initiated.

Traces which are blanked (Display=off) do not display nor appear on printouts but are otherwise unaffected. They may be queried and markers may be placed on them.

Note that the action of putting a trace in Display=Off and/or Update=Off does not restart the sweep and does not restart Averaging or Hold functions for any traces.

Note also that whenever you set **Update** to **On** for any trace, **Display** is set to **On** for that trace.

### Detector

Selects a detector. The detector selected is then applied to the selected trace.

For the SCPI UI, two commands are provided. One is a legacy command, which affects all traces. There is also a command which is new for the X-Series, which uses a subopcode to specify to which trace the specified detector is to be applied.

The three detectors on the second page of the Detector menu, Quasi Peak, EMI Average, and RMS Average, are referred to collectively as the “CISPR detectors” because their behaviors are specified by the CISPR 16–1–1 specification.

See “[More Information](#)” on page 1726

Key Path	Trace/Detector, Detector
<b>Remote Command</b>	[ :SENSe ] :DETECTOR:TRACe[1]   2   3   4   5   6 AVERAge   NEGAtive   NORMAl   POSItive   SAMPlE   QPEak   EAVERage   RAVERage  [ :SENSe ] :DETECTOR:TRACe[1]   2   3   4   5   6?
<b>Example</b>	DET:TRAC AVER -- Sets trace 1’s detector to average DET:TRAC1 AVER -- Sets trace 1’s detector to average DET:TRAC2 SAMP -- Sets trace 2’s detector to sample
<b>Notes</b>	When a detector selection is made, the menu returns to the previous menu. Selecting any CISPR detector on any active trace sets the EMI Standard to CISPR.



Notes	<p>The query returns a name that corresponds to the detector type as shown below, and indicates the setting for Trace 1.</p> <table border="1"> <thead> <tr> <th>String Returned</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td>NORM</td> <td>Normal</td> </tr> <tr> <td>AVER</td> <td>Average / RMS</td> </tr> <tr> <td>POS</td> <td>Positive peak</td> </tr> <tr> <td>SAMP</td> <td>Sample</td> </tr> <tr> <td>NEG</td> <td>Negative peak</td> </tr> <tr> <td>QPE</td> <td>Quasi Peak</td> </tr> <tr> <td>EAV</td> <td>EMI Average</td> </tr> <tr> <td>RAV</td> <td>RMS Average</td> </tr> </tbody> </table>	String Returned	Definition	NORM	Normal	AVER	Average / RMS	POS	Positive peak	SAMP	Sample	NEG	Negative peak	QPE	Quasi Peak	EAV	EMI Average	RAV	RMS Average
String Returned	Definition																		
NORM	Normal																		
AVER	Average / RMS																		
POS	Positive peak																		
SAMP	Sample																		
NEG	Negative peak																		
QPE	Quasi Peak																		
EAV	EMI Average																		
RAV	RMS Average																		
Dependencies	<p>When Tune &amp; Listen is turned on, or Demod Audio is the selected Analog Output:</p> <ul style="list-style-type: none"> <li>all active traces are forced to use the same detector.</li> <li>CISPR detectors (QPD, EMI Avg, RMS Avg) are unavailable</li> </ul> <p>CISPR detectors are grayed out when you have manually selected FFT sweep. Conversely, if any CISPR detector is selected on an active trace, the auto rules for sweep type will never select FFT, and manual FFT selection will be grayed out.</p> <p>If the grayed out key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.</p>																		
Couplings	<p>The auto detector rules depend upon marker type, averaging state and type, trace state writing mode, and trace active state.</p> <p>If the Avg Type is in Auto, and any of the CISPR detectors is selected on any active trace, the Voltage Averaging type is auto-selected.</p>																		
Preset	<p>Preset returns all traces to “auto”, which will result in Normal (Rosenfell) detection for all traces.</p>																		
State Saved	<p>Saved in State</p>																		
Initial S/W Revision	<p>Prior to A.02.00</p>																		
Modified at S/W Revision	<p>A.02.00</p>																		
<b>Remote Command:</b>	<pre>[ :SENSe]:DETEctor[:FUNction] NORMAL AVERage POSitive SAMPle NEGative QPEak EAVerage  EPOSitive MPOSitive RMS [:SENSe]:DETEctor[:FUNction]?</pre>																		
Example:	<pre>DET AVER Sets detector to average for all traces DET:FUNC? Returns trace 1's detector setting</pre>																		

Notes:	<p>This is a SCPI only legacy command to preserve the classic functionality wherein all traces are affected when a detector is selected.</p> <p>The query returns a name that corresponds to the detector type as shown below, and indicates the setting for Trace 1.</p> <p>The RMS selection sets the detector type to AVERage and the Average Type to RMS. Therefore if RMS has been selected, the query will return the “AVER” string.</p> <p>The EPOS selection sets the detector type to Peak and the EMI Standard to CISPR. A query will then return POS</p> <p>The MPOS selection sets the detector type to Peak and the EMI Standard to MIL Impluse. A query will then return POS</p> <p>The RAV parameter is not included in the command because this is not a legacy detector; nonetheless, if it happens to be the detector on Trace 1 then RAV will be returned.</p> <table border="1" data-bbox="571 766 1427 1188"> <thead> <tr> <th>String Returned</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td>NORM</td> <td>Normal</td> </tr> <tr> <td>AVER</td> <td>Average / RMS</td> </tr> <tr> <td>POS</td> <td>Positive peak</td> </tr> <tr> <td>SAMP</td> <td>Sample</td> </tr> <tr> <td>NEG</td> <td>Negative peak</td> </tr> <tr> <td>QPE</td> <td>Quasi Peak</td> </tr> <tr> <td>EAV</td> <td>EMI Average</td> </tr> <tr> <td>RAV</td> <td>RMS Average</td> </tr> </tbody> </table>	String Returned	Definition	NORM	Normal	AVER	Average / RMS	POS	Positive peak	SAMP	Sample	NEG	Negative peak	QPE	Quasi Peak	EAV	EMI Average	RAV	RMS Average
String Returned	Definition																		
NORM	Normal																		
AVER	Average / RMS																		
POS	Positive peak																		
SAMP	Sample																		
NEG	Negative peak																		
QPE	Quasi Peak																		
EAV	EMI Average																		
RAV	RMS Average																		
Preset:	NORMal																		
State Saved:	Saved in State																		
Initial S/W Revision:	Prior to A.02.00																		
Modified at S/W Revision:	A.02.00																		

### More Information

The available detectors are:

The Sample detector indicates the instantaneous level of the signal at the center of the bucket represented by each display point.

The Normal detector determines the peak of CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.

The Average detector determines the average of the signal within the bucket. The averaging method depends upon Average Type selection (voltage, power or log scales).

The Peak detector determines the maximum of the signal within the bucket.

The Negative Peak detector determines the minimum of the signal within the bucket.

The Quasi-Peak detector is a fast-rise, slow-fall detector used in making CISPR compliant EMI measurements.

The EMI-Average detector provides a standard means to “smooth” the signal while still providing compliance to CISPR pulse response standards. It displays the average value of the amplitude envelope, rather than the average value of sample-detected amplitude, and uses an advanced algorithm to realize a lowpass filter that conforms to the latest CISPR standard.

The RMS Average detector is a frequency dependent RMS or Averaging filter, used in making CISPR compliant EMI measurements, which performs one averaging process (in the VBW hardware) on the "power" (a.k.a. RMS) scale, and another process on the voltage scale using a "meter movement simulator". This filter conforms to the 2007 revision of the CISPR 16-1-1 standard.

Because they may not find a spectral component's true peak, neither average nor sample detectors measure amplitudes of CW signals as accurately as peak or normal, but they do measure noise without the biases of peak detection.

When the Detector choice is Auto, the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.

When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings.

### Multiple Detectors

The analyzer always provides the requested detector on the specified trace. Depending on the detectors requested the analyzer can provide up to three different detectors simultaneously within the constraints of its digital processing algorithms. Some detectors utilize more resources; the Quasi-Peak detector, for example, utilizes most of the digital IF's resources, and the hardware in some analyzers is incapable of providing another detector when Quasi-Peak is on. If the limit of system resources is exceeded, detectors on some existing traces may be forced to change. When this happens, they change to match the detector just requested, and a message is generated: “Detector <X> changed due to physical constraints”, where X might contain multiple values.

Example: User has traces 1, 2, and 3 with Peak, Average, and Negative Peak. User specifies QPD for trace 1. Traces 2 and 3 also change to QPD and we generate the message “Detector 2,3 changed due to physical constraints”. Now all three traces have the QPD.

### Auto

This sets the detector for the currently selected trace to Auto. (For SCPI, the trace number is specified as a sub-opcode.) This will immediately apply the auto rules to determine a new detector value.

Key Path	Trace/Det, Detector
Remote Command	[ :SENSE] :DETECTOR:TRACe[1]   2   3   4   5   6 :AUTO ON   OFF   1   0 [ :SENSE] :DETECTOR:TRACe[1]   2   3   4   5   6 :AUTO?
Example	DET:TRACE2:AUTO ON sets trace 2 detection to automatic.
Dependencies	The auto detector rules depend upon marker type, averaging state and type, trace state writing mode, and trace active state.

Common Measurement Functions  
Trace/Detector

Couplings	Selecting AUTO, whether by pressing the softkey or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.
Preset	Auto (On) for all detectors.
State Saved	Saved in state
Initial S/W Revision	Prior to A.02.00

<b>Remote Command:</b>	[ :SENSe ] :DETEctor:AUTO ON   OFF   1   0 [ :SENSe ] :DETEctor:AUTO?
Example:	DET:AUTO ON
Notes:	SCPI only. Turns AUTO on or off for ALL detectors. This is a legacy command to preserve the classic functionality wherein all traces are affected when a detector is addressed
Notes:	The query returns the Auto state of Trace 1.
Initial S/W Revision:	Prior to A.02.00

**Normal**

This sets the detector for the current selected trace to Normal (Rosenfell).

When the signal is CW-like, it displays the peak-detected level in the interval (bucket) being displayed. If the signal is noise-like (within a bucket the signal both rose and fell), it alternates displaying the max/min values. That is, an even bucket shows the peak (maximum) within a two-bucket wide interval centered on the even bucket. And an odd bucket will show the negative peak (minimum) within a two-bucket wide interval. For example, for an even bucket the two-bucket wide interval is a combination of one-half bucket to the left of the even bucket, the even bucket itself, and one-half bucket to the right of the even bucket, so the peak found will be displayed in the correct relative location on screen. The odd buckets are similar.

Key Path	Trace/Det, Detector
Example	DET:TRAC3 NORM sets the detector to normal for trace 3.
Dependencies	Selecting any detector (even the currently selected detector) for a given trace turns Update and Display on for that trace. Normal detector is grayed out when the X scale is Log.
Couplings	Selecting a specific detector type turns “Auto” to false for this trace (manual). Selecting a detector for a trace (pressing the key or sending a [ :SENS ] :DET:TRAC command) puts <b>Update On and Display On</b> for that trace, even if that detector was already selected. Note that the legacy command [ :SENS ] :DET[:FUNC] does NOT exhibit this behavior. Selecting a detector, whether by pressing the softkey or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.
Initial S/W Revision	Prior to A.02.00

### Average (Log/RMS/V)

For each bucket (interval) in the trace, Average detection displays the average of the amplitude within the bucket using one of the following averaging methods:

Log power (also known as video)

Power (also known as RMS)

Voltage envelope

To explicitly set the averaging method, use the **Meas Setup, Average Type** key. When you are using average detection with the Power method is equivalent to what is sometimes referred to as “RMS detection”. The detailed information about the different types of averaging is found in **Average Type** in the **Meas Setup** key menu.

Key Path	Trace/Det, Detector
Example	DET:TRAC3 AVER sets the detector to average for trace 3.
Notes	For the specific case of a customer wanting RMS detection, they need to set the averaging type to RMS, and also select average detection for the trace:  AVER:TYPE RMS DET:TRAC AVER
Dependencies	Selecting any detector (even the currently selected detector) for a given trace turns Update and Display on for that trace.
Couplings	Selecting a specific detector type turns “Auto” to false for this trace (manual).  Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts <b>Update On and Display On</b> for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.  Selecting a detector, whether by pressing the softkey or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.  The VBW filter is not used for this detector, so varying the VBW will have no effect for any traces for which this detector is selected (other than to slow down the sweep, because of the coupling to Sweep Time of VBW). If the only traces which are active are traces for which VBW does not apply (traces with Average, EMI Average, RMS Average or Quasi Peak detectors), then the VBW annotation shows “---“ on the front panel, although still returns the current value of VBW to a SCPI query.  Use of the Average detector affects the VBW setting because of its effect on the VBW/RBW coupling. See the BW section under the key ““Video BW ” on page 1441”.
Initial S/W Revision	Prior to A.02.00

### Peak

For each bucket (interval) in the trace, Peak detection displays the highest amplitude within the bucket.

Peak detection is used for CW measurements and some pulsed-RF measurements. For FFT analysis, the

Common Measurement Functions  
Trace/Detector

highest amplitude across the frequency width of a bucket is displayed, even if that peak amplitude falls between samples of the spectrum computed in the FFT process.

Key Path	Trace/Det, Detector
Example	DET:TRAC2 POS sets the detector to peak for trace 2.
Couplings	<p>Selecting a specific detector type turns “Auto” to false for this trace (manual).</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts <b>Update On</b> and <b>Display On</b> for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the softkey or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p>
Initial S/W Revision	Prior to A.02.00

**Sample**

The sample detector displays the instantaneous level of the signal at the center of the bucket (interval) represented by each trace point.

Sample detection is good for displaying noise or noise-like signals.

Sample detection is not the best for making amplitude measurements of CW-like signals for two reasons. First, the peak response to a signal can occur between samples. So unless the Span to RBW ratio is lower than usual, then the highest sample can be well below the peak signal amplitude. Second, for the high sweep rates normally used, the peak response of the RBW filters is up to -0.5 dB. This sweeping error is compensated when using the peak and normal detectors by changing the overall gain. But the gain is not changed when in the sample detector, because doing so would cause errors in the response to noise. Instead, the auto-couple rules for sweep time are modified to give slower sweeps.

Key Path	Trace/Det, Detector
Example	DET:TRAC SAMP selects the Sample detector for trace 1.
Couplings	<p>Selecting a specific detector type turns “Auto” to false for this trace (manual).</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts <b>Update On</b> and <b>Display On</b> for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the softkey or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p>
Initial S/W Revision	Prior to A.02.00

**Negative Peak**

For each bucket (interval) in the trace, Negative Peak detection displays the lowest sample within the

bucket. Negative peak detection is similar to peak detection, but selects the minimum video signal.

Key Path	Trace/Det, Detector
Example	DET:TRAC2 NEG selects the negative peak detector for trace 2.
Couplings	<p>Selecting a specific detector type turns “Auto” to false for this trace (manual).</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts <b>Update On</b> and <b>Display On</b> for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the softkey or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p>
Initial S/W Revision	Prior to A.02.00

### Quasi Peak

Only appears with Option EMC installed and licensed.

This is a fast-rise, slow-fall detector used in making CISPR compliant EMI measurements and defined by CISPR Publication 16–1–1. Quasi-peak detection displays a weighted, sample-detected amplitude using specific, charge, discharge, and meter time constants derived from the legacy behaviors of analog detectors and meters. It is used for EMI measurements to provide a specific and consistent response to EMI-like signals.

Note that CISPR standard operation is to perform the averaging associated with quasi peak detection on the voltage scale. The user can manually set the Average Type to Log-Power or Power, but the results will no longer be CISPR compliant.

See [“More Information” on page 1732](#).

Key Path	Trace/Det, Detector
Example	DET:TRAC3 QPE selects the quasi-peak detector for trace 3.
Dependencies	<p>Unavailable in manual FFT sweep.</p> <p>Unavailable when Tune &amp; Listen is turned on, or Demod Audio is the selected Analog Output:</p>

Couplings	<p>If the user selects this detector on any active trace, the EMI Standard will be set to CISPR. If any inactive trace with this detector selected goes active, the EMI Standard is set to CISPR.</p> <p>If the Avg Type is in Auto, and this detector is selected on any active trace, the Voltage Averaging type is auto-selected.</p> <p>The VBW filter is not used for this detector, so varying the VBW will have no effect for any traces for which this detector is selected (other than to slow down the sweep, because of the coupling to Sweep Time of VBW). If the only traces which are active are traces for which VBW does not apply (traces with Average, EMI Average, RMS Average or Quasi Peak detectors), then the VBW annotation shows “---“ on the front panel, although still returns the current value of VBW to a SCPI query.</p> <p>Selecting a specific detector type turns the ““Auto ” on page 1727” (to false for this trace (manual).</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts <b>Update On</b> and <b>Display On</b> for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the softkey or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p>
Initial S/W Revision	A.02.00

### More Information

In the past, Quasi Peak and EMI Average measurements were often made on a linear display scale because those detectors only worked properly with signals on a linear (voltage) scale. The X-series analyzers are capable of making Quasi Peak and EMI Average detected measurements correctly on a log scale, due to the digital IF. This latter capability means that the user can observe detected EMI levels on a log scale, allowing a large visible dynamic range.

Also in the past, EMI analysis equipment would need to perform a ranging operation to set the reference level when one of these detectors was turned on, but the X-series analyzers do not - because of its digital IF, there is no need to set the reference level (range) to improve the accuracy nor to allow visibility of the detected level.

### EMI Average

Only appears with Option EMC installed and licensed.

The EMI Average detector in Agilent’s X-Series analyzers is so called to distinguish it from the Average detector, although EMI users typically refer to it simply as the “Average detector”. The intent of this detector is to provide a standard means to “smooth” the signal while still providing compliance to CISPR pulse response standards

Unlike the regular Average detector, the EMI Average detection displays the average value of the amplitude envelope, rather than the average value of sample-detected amplitude. It is defined for EMI measurements by the CISPR 16–1–1 standard and, in the X-series, uses a sophisticated algorithm to implement a lowpass filter that conforms to the latest CISPR standard.

Note that CISPR standard operation is to perform the envelope averaging on the voltage scale. The user



can manually set the Average Type to Log-Power or Power, but the results will no longer be CISPR compliant.

Key Path	Trace/Det, Detector
Example	DET:TRAC3 EAV selects the EMI average detector for trace 3.
Dependencies	Unavailable in manual FFT sweep. Unavailable when Tune & Listen is turned on, or Demod Audio is the selected Analog Output:
Couplings	<p>If the user selects this detector on any active trace, the EMI Standard will be set to CISPR. If any inactive trace with this detector selected goes active, the EMI Standard is set to CISPR.</p> <p>If the Avg Type is in Auto, and this detector is selected on any active trace, the Voltage Averaging type is auto-selected.</p> <p>The VBW filter is not used for this detector, so varying the VBW will have no effect for any traces for which this detector is selected (other than to slow down the sweep, because of the coupling to Sweep Time of VBW). If the only traces which are active are traces for which VBW does not apply (traces with Average, EMI Average, RMS Average or Quasi Peak detectors), then the VBW annotation shows “---“ on the front panel, although still returns the current value of VBW to a SCPI query.</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts <b>Update On</b> and <b>Display On</b> for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the softkey or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p>
Initial S/W Revision	A.02.00

### RMS Average

Only appears with Option EMC installed and licensed.

This key selects the RMS Average detector, a frequency dependent RMS/Averaging filter, used in making CISPR compliant EMI measurements. This filter conforms to the 2007 revision of the CISPR 16-1-1 standard.

This detector does one averaging process (in the VBW hardware) on the "power" (a.k.a. RMS) scale and another process on the voltage scale using a "meter movement simulator" similar to the one used in the QPD filter.

Note that the user can manually set the Average Type to Log-Power or Power, but the results will no longer be CISPR compliant.

Key Path	Trace/Det, Detector
Example	DET:TRAC3 RAV selects the RMS Average detector for trace 3.

Common Measurement Functions  
Trace/Detector

Notes	This key / command is grayed out when you have manually selected FFT sweep.
Dependencies	Unavailable in manual FFT sweep. Unavailable when Tune & Listen is turned on, or Demod Audio is the selected Analog Output:
Couplings	Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts <b>Update On</b> and <b>Display On</b> for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.
Couplings	If the user selects this detector on any active trace, the EMI Standard will be set to CISPR. If any inactive trace with this detector selected goes active, the EMI Standard is set to CISPR.  If the Avg Type is in Auto, and this detector is selected on any active trace, the Voltage Averaging type is auto-selected.  The VBW filter is not used for this detector, so varying the VBW will have no effect for any traces for which this detector is selected (other than to slow down the sweep, because of the coupling to Sweep Time of VBW). If the only traces which are active are traces for which VBW does not apply (traces with Average, EMI Average, RMS Average or Quasi Peak detectors), then the VBW annotation shows “---“ on the front panel, although still returns the current value of VBW to a SCPI query.  Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts <b>Update On</b> and <b>Display On</b> for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.  Selecting a detector, whether by pressing the softkey or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.
Initial S/W Revision	A.02.00

### Preset Detectors

The keys in this menu provide a quick way of setting a number of traces to convenient common detector settings. It is important to point out that these are not toggles or ‘modes’, and do not keep any detectors in a particular configuration. The effect is identical to just setting the traces’ detectors individually. These are simply one-time settings that are quicker than making many individual changes.

Dependencies	When you have manually selected FFT sweep, the Detector Preset choices that contain any CISPR detectors, are grayed out. If the grayed out key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.
Preset	No interaction with preset
State Saved	Not saved in state
Initial S/W Revision	Prior to A.02.00

### All Traces Auto

This is designed to quickly return the selected set of detectors to the “preset” state, which is auto-selected.

Couplings	Sets all traces' Detector Auto to true.
Initial S/W Revision	Prior to A.02.00

### Peak / Average / NPeak

This is a setting for making a measurement of the average power and the signal envelope.

Couplings	Trace 1: Set to peak detection, and Clear-Write. Trace 2: Set to average detection, and Clear-Write. Trace 3: Set to negative peak detection, and Clear-Write.
Initial S/W Revision	Prior to A.02.00

### Peak / Sample / NPeak

This is a setting for making a measurement that displays a power sample and the signal envelope.

Couplings	Trace 1: Set to peak detection, and Clear-Write. Trace 2: Set to sample detection, and Clear-Write. Trace 3: Set to negative peak detection, and Clear-Write.
Initial S/W Revision	Prior to A.02.00

### Clear Trace

Clears the selected trace (from the front panel) or the specified trace (from SCPI). Does not affect the state of any function or variable in the instrument. Loads mintracevalue into all of the points in the selected trace, unless the trace is in Min Hold in which case it loads maxtracevalue. It does this even if Update=Off.

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

Key Path	Trace/Detector
<b>Remote Command</b>	:TRACe:CLEAr TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6
Example	TRAC:CLE TRACE1 clears trace 1
Initial S/W Revision	Prior to A.02.00

### Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads mintracevalue into all of the points all traces, except traces in Min Hold in which case it loads

## Common Measurement Functions

### Trace/Detector

maxtracevalue. Does so even if Update=Off.

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

Key Path	Trace/Detector
<b>Remote Command</b>	:TRACe:CLEar:ALL
Example	TRAC:CLE:ALL clears all traces
Initial S/W Revision	Prior to A.02.00

### Math

This menu lets you turn on trace math functions. Trace math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a trace math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the **Trace Operands** key.

See [“Math: More Information”](#) on page 1738.

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

Key Path	Trace/Detector
<b>Remote Command</b>	:CALCulate:MATH TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, PDIFference   PSUM   LOFFset   LDIFference   OFF, TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, <real>, <real>  :CALCulate:MATH? TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6
Notes	The lower level menu, which contains an embedded 1-of-N, does not auto-return when a selection is made.

Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> <li>- Set 1 defines the “result trace”: TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6</li> <li>-Set 2 defines the “function”: PDifference PSUM LOFFset LDifference OFF</li> <li>- Set 3 is a “trace operand” (1): TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6</li> <li>- Set 4 is a “trace operand” (2): TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6</li> <li>- Set 5 defines the “Log Offset” (in dB).</li> <li>- Set 6 defines the “Log Difference Reference” (in dBm).</li> </ul> <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace it turns off any math function that is on for that trace and sets the new math function.</p> <p>The parameters sent in the command are reflected in the values in the softkey menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter error.</p> <p>Note that for some of the math modes some of the parameters are not relevant. For those modes, the parameters are ignored, and sending “,” is sufficient for those parameters.</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas. The return value of irrelevant parameters is undefined; empty fields (“,”) would be desirable.</p> <p>Remote command examples are included in each section below.</p>
Dependencies	<p>Trace Math is not available if <b>Normalize</b> is on.</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands a warning is generated and the function does not turn on.</p>
Couplings	<p>Whenever a math function is turned on for a trace, that trace is set to Display=On and Update=On.</p>
Preset	<p>OFF,TRACE5,TRACE6,0,0   OFF,TRACE6,TRACE1,0,0   OFF,TRACE1,TRACE2,0,0   OFF,TRACE2,TRACE3,0,0   OFF,TRACE3,TRACE4,0,0   OFF,TRACE4,TRACE5,0,0</p>
State Saved	<p>The trace math function for each trace is saved in Instrument State.</p>
Status Bits/OPC dependencies	<p>*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep</p>
Initial S/W Revision	<p>Prior to A.02.00</p>

## Math: More Information

**IMPORTANT:** to generate a trace math result, you must take a sweep. The trace math engine, described below, operates in concert with the sweep engine in the analyzer. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated. Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

A trace clear taking place

A trace being loaded from the file system

Trace data being sent in from the remote interface


A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

How trace math is processed:

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and average/hold functions, and presenting it to the user as trace data, consists of several functional blocks, as shown below:

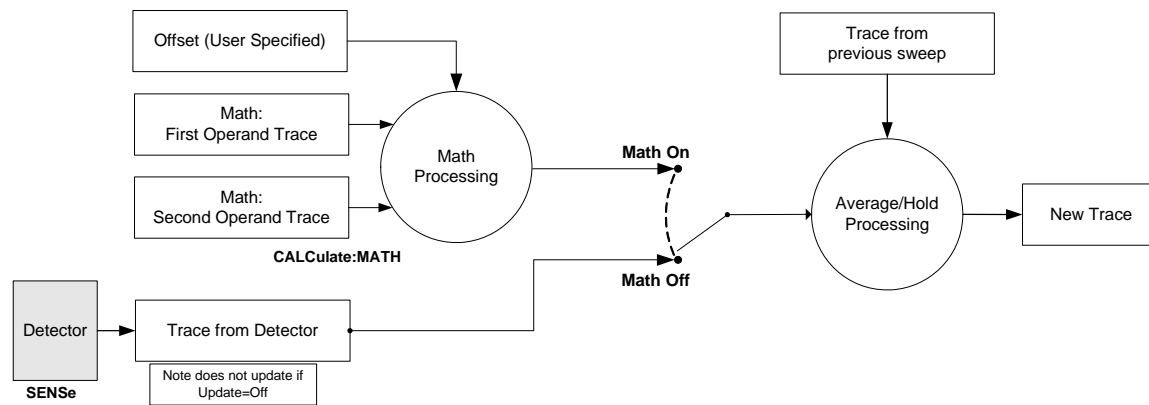

For each active trace, the current trace point is processed for Trace 1, then Trace 2, then Trace 3, etc. Trace data is taken from either the detector for that trace, or from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is Average, Max Hold, or Min Hold) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for Trace 1, Trace 2 is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is on for Trace 4, and its operand traces are Trace 2 and Trace 3, all detector, math, average and hold processing for traces 2 and 3 is complete before the math is performed for trace 4. When the current trace point is completed for all traces, the analyzer moves on to the next trace point.

### Power Diff (Op1-Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) - 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in FirstTrace is equal to maxtracevalue, the resultant point is also maxtracevalue.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is mintracevalue.

Key Path	Trace/Detector, Math
Example	:CALC:MATH TRACE1,PDIF,TRACE4,TRACE5,, sets Trace 1 to <b>Power Diff</b> trace math function, and sets the <b>First Trace</b> operand (for Trace 1) to Trace 4 and the <b>Second Trace</b> operand (for Trace 1) to Trace 5.
Couplings	Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in View ( <b>Update On and Display On</b> ), even if that math mode was already selected.
Initial S/W Revision	Prior to A.02.00

### Power Sum (Op1+Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.:

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to maxtracevalue, the resultant point is also maxtracevalue.

Key Path	Trace/Detector, Math
Example	:CALC:MATH TRACE1,PSUM,TRACE4,TRACE5,, sets Trace 1 to <b>Power Sum</b> trace math function and sets the <b>First Trace</b> operand (for Trace 1) to Trace 4 and the <b>Second Trace</b> operand (for Trace 1) to Trace 5.
Couplings	Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in View ( <b>Update On and Display On</b> ), even if that math mode was already selected.
Initial S/W Revision	Prior to A.02.00

### Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older analyzers. The offset is entered as the active function. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.:

$$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to maxtracevalue, the resultant point is also maxtracevalue.

If a point in the trace operand is equal to mintracevalue, the resultant point is also mintracevalue.

Example: If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

Key Path	Trace/Detector, Math
Example	:CALC:MATH TRACE1,LOFF,TRACE4,,-6.00, sets Trace 1 to <b>Log Offset</b> trace math function, sets the <b>First Trace</b> operand (for Trace 1) to Trace 4, leaves the <b>Second Trace</b> operand (for Trace 1) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 1) to -6 dB.
Couplings	Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in View ( <b>Update On and Display On</b> ), even if that math mode was already selected.
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB
Initial S/W Revision	Prior to A.02.00

### Log Diff (Op1-Op2+Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older analyzers. The reference is entered as the active function. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

Example: If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at -5 dBm, and the



reference is –25 dBm, then the destination trace will be –15 dBm.

Example: If the first operand trace1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

See “[More Information](#)” on page 1741.

Key Path	Trace/Detector, Math
Example	:CALC:MATH TRACE1,LDIF,TRACE4,TRACE5,,-6.00 sets Trace 1 to <b>Log Diff</b> trace math function, sets the <b>First Trace</b> operand (for Trace 1) to Trace 4, sets the <b>Second Trace</b> operand (for Trace 1) to Trace 5, and sets the Log Difference reference for Trace 1 to –6 dBm.
Couplings	Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in View ( <b>Update On and Display On</b> ), even if that math mode was already selected.
State Saved	The Log Difference reference value for each trace is saved in Instrument State
Min	Same as reference level
Max	Same as reference level
Default Unit	depends on the current selected Y axis unit
Initial S/W Revision	Prior to A.02.00

### More Information

If a point in FirstTrace is equal to maxtracevalue, the resultant point is also maxtracevalue.

If a point in FirstTrace is equal to mintracevalue, the resultant point is also mintracevalue.

If neither of the above is true for a given point, then:

If that point in SecondTrace is equal to maxtracevalue, the resultant point is mintracevalue.

If that point in SecondTrace is equal to mintracevalue, the resultant point is maxtracevalue.

### Off

Turns off Trace Math.

Key Path	Trace/Detector, Math
Example	CALC:MATH TRACE1 OFF turns off trace math for trace 1.
Notes	See Trace “Math”.
State Saved	The current trace math function is saved in Instrument State
Readback	Off
Initial S/W Revision	Prior to A.02.00

### Operands

Selects the trace operand(s) to be used for the trace math functions for the destination trace.

Key Path	Trace, Math
Notes	The operands of the trace math commands specify the trace operands. Since the operands are common to all math functions for a given trace, the most recently sent math function command sets the operands for each trace and are reflected on the trace operand keys.
Dependencies	The destination trace cannot be an operand.
Readback line	In square brackets, the First Trace operand, new line, and the second trace operand, as:  [Op1=Trace 1, Op2=Trace2]  where Trace 1 is operand 1 and Trace 2 is operand 2.
Initial S/W Revision	Prior to A.02.00

**Operand 1** Selects the first trace operand to be used for the trace math functions for the destination trace.

Key Path	Trace, Math, Trace Operands
Dependencies	The First Trace cannot be the same as the destination trace. The destination trace number is gray on the key, and the underline skips that number when selecting the trace.
Preset	Trace number – 2 (wraps at 1). For example, for Trace 1, the First Trace presets to Trace 5; for Trace 6, it presets to Trace 4.
State Saved	The First Trace operand for each trace is stored in instrument state.
Readback	Trace <trace number>
Initial S/W Revision	Prior to A.02.00

**Operand 2** Selects the second trace operand to be used for the trace math functions for the destination trace.

Key Path	Trace, Math, Trace Operands
Dependencies	The Second Trace cannot be the same as the destination trace. The destination trace number is gray on the key, and the underline skips that number when selecting the trace.
Preset	Trace number – 1 (wraps at 1). For example, for Trace 1, the Second Trace presets to Trace 6; for Trace 6, it presets to Trace 5.
State Saved	The Second Trace operand for each trace is stored in instrument state
Readback	Trace <trace number>

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Normalize

Displays menu keys that let you normalize trace data.

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

Key Path	Trace/Detector
Readback	[On] or [Off]
Initial S/W Revision	Prior to A.02.00

**Normalize On/Off** Normalize (On) activates the normalize function. On each sweep, the normalized trace (Trace 3) is subtracted from Trace 1 and the result is added to the normalized reference level. This arithmetic assumes all values are in decibel units, so we are actually taking a ratio.

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

See [“More Information” on page 1743](#).

See [“Normalize Block Diagram” on page 1744](#).

Key Path	Trace/Detector, Normalize
<b>Remote Command</b>	:CALCulate:NTData[:STATe] OFF ON 0 1 :CALCulate:NTData[:STATe]?
Example	CALC:NTD ON CALC:NTD?
Dependencies	<ul style="list-style-type: none"> <li>If Normalize (On) is pressed before Store Ref (1 3), an error message is generated. Normalize remains off in this case.</li> <li>Normalize is not available (grayed out) if any Trace Math function is on.</li> </ul>
Couplings	When Normalize is turned on, Trace 1 is placed in Clear/Write with Update = On and Display = On.
Preset	OFF
State Saved	Saved in Instrument State.
Initial S/W Revision	Prior to A.02.00

### More Information

First the following calculation is performed:

Trace 1 = (Trace 1D – Normalized Trace)

Where:

Trace 1D is the measured value of trace 1, as it comes from the SENSE subsystem.

Normalized Trace is Trace 3, in which you have previously stored a reference trace

All values are in decibel units.

This Trace 1 contains the values that will be returned from a trace query, or if the marker is placed on the trace.

For example, let's say bucket 1 on Trace 1 is at 0 dBm, and bucket 1 on Trace 3 is at 10 dBm. The resultant bucket is at  $0 \text{ dBm} - 10 \text{ dBm} = -10 \text{ dB}$  (just like with a delta marker).

You are also given the ability to define what (dB) value to use for Ref Level, and to define where on the screen the Ref Lvl line will appear using Normalized Reference Position. This flexibility in displaying the result allows a wide range of devices, including amplifiers, to be tested using Normalize.

In the example above, bucket 1 has the value of  $-10 \text{ dB}$ . Let us assume you have set Norm Ref Lvl to 5 dB. Thus bucket 1 will display 1.5 divisions below the Reference Level line (assuming 10 dB per division).

The Reference Level line is normally the top line of the graticule. If Norm Ref Posn is set to 10, this is the case. If it is set to 9, it is the next line down. If it is set to 5, it is the middle line of the graticule. If set to 0 it is the bottom line.

So in the example above, if Norm Ref Posn is set to 9, then bucket 1 will display 2.5 divisions below the top line of the graticule.

None of the manipulations of Norm Ref Posn and Norm Ref Lvl affect the data in the trace.


As Normalize displays a ratio between two traces (a difference, in dB) the Y-Axis Unit while in Normalize is dB in Log Amplitude and dimensionless in Linear. The Y Axis Unit chosen in the Y Axis Unit menu is unaffected by Normalize. When you leave Normalize the Y Axis Unit returns to the value set in the Y Axis Unit menu. While in Normalize, all amplitude functions, such as Marker Y and the values in other traces, should be always in db unit, and so should the returned trace query results. In other words, both trace query result and marker Y become independent of the Y Axis Unit chosen in the Y Axis Unit menu when normalize is on.

(In Linear, the equivalent calculation is performed but it yields a dimensionless ratio, so the normalized ref level will be unitless, presetting to 1, just as in Log it presets to 0 dB).

Y Axis annotation is blanked while in Normalize. Any other traces on the display are plotted in dB, where the dB value used is equivalent to the dBm value of the trace. For example, if bucket 1 in trace 2 is at  $-40 \text{ dBm}$ , that bucket is plotted at  $-40 \text{ dB}$ . All traces use Norm Ref Lvl and Norm Ref Posn for positioning on the display. When Normalize exits, the normal Ref Lvl is restored. This normal Ref Level is unaffected by Normalize.

### Normalize Block Diagram

A block diagram showing how Normalize works is presented below:

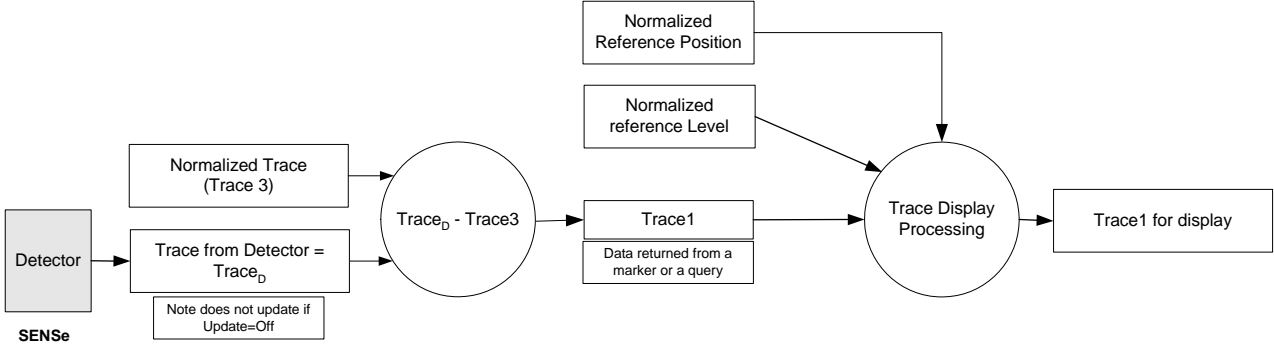

The normalize function is most useful for applying correction data to a trace while making a stimulus-response measurement with a tracking generator (or synchronized source). For example, connect the cables and a through line, in place of the device to be measured, between the tracking generator and the analyzer input. Notice that the frequency response is not perfectly flat, showing the response of the cables, as well as the flatness of both the tracking generator and the analyzer. Now press Store Ref (1 3), Normalize On. Notice that the displayed trace is now flat, or normalized. The position of the normalized trace can now be moved to a different position on the display by changing the normalized reference position. This may be useful if the device to be tested has positive gain, such as an amplifier. Now replace the through line with the device under test, and an accurate measurement of the gain or loss can be made.

**Store Ref (1 -> 3)** Copies trace 1 into trace 3. Store Ref (1 3) must be pressed before pressing Normalize (On). Note that this puts Trace 3 in Update=Off (not updating) and Display=On (visible).

Key Path	Trace/Detector, Normalize
Notes	There is no remote command for this function, however the trace copy command can be used for this purpose.
Dependencies	<ul style="list-style-type: none"> <li>If Normalize (On) is pressed before Store Ref (1 3), an error message is generated. Normalize remains off in this case.</li> </ul>
Initial S/W Revision	Prior to A.02.00

**Show Ref Trace (Trace 3)** Views or blanks the reference trace on the display. The reference trace is trace 3, so this is the same as setting Trace 3’s “Display” attribute.


Key Path	Trace/Detector, Normalize
Example	TRAC3 :DISP 1 shows the reference trace.
Notes	Use the TRAC3:DISP command to show or blank the reference trace Trace 3 is always the reference trace by definition.
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00

Common Measurement Functions  
Trace/Detector

**Norm Ref Lvl** Sets the level (in dB) of the normalized reference.

Key Path	Trace/Detector, Normalize
Remote Command	:DISP:WIND:WINDow[1]:TRACe:Y[:SCALe]:NRLevel <rel_amp1> :DISP:WIND:WINDow[1]:TRACe:Y[:SCALe]:NRLevel?
Example	DISP:WIND:TRAC:Y:NRL .10 dB DISP:WIND:TRAC:Y:NRL?
Preset	0 dB
State Saved	Saved in instrument state.
Min	-327.6 dB
Max	327.6 dB
Initial S/W Revision	Prior to A.02.00

**Norm Ref Posn** Offsets the displayed trace without affecting the instrument gain or attenuation settings. This allows the displayed trace to be moved without decreasing measurement accuracy. The normalized reference position is indicated with a right arrow on the left side of the display and a left arrow on the right side of the display, just inside the graticule. See picture below:

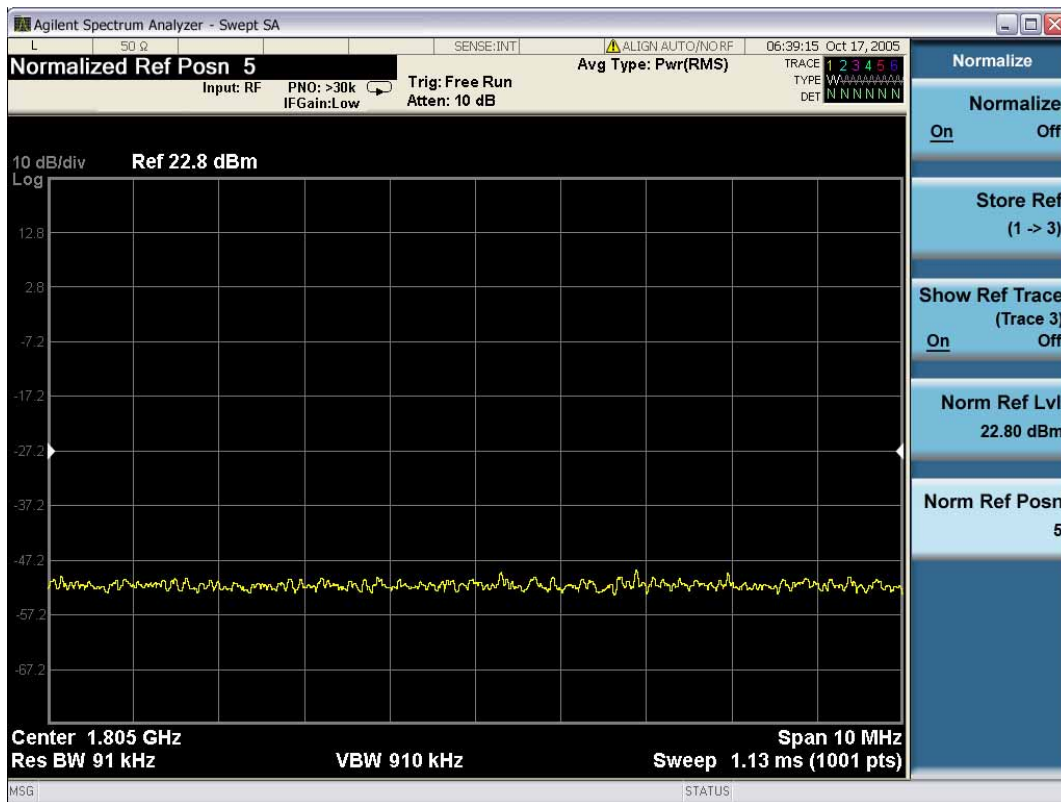

Key Path	Trace/Detector, Normalize
----------	---------------------------

<b>Remote Command</b>	:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRPosition <integer> :DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRPosition?
Example	DISP:WIND:TRAC:Y:NRP 5 DISP:WIND:TRAC:Y:NRP?
Notes	The top and bottom graticule lines correspond to 10 and 0, respectively.
Preset	10
State Saved	Saved in Instrument State.
Min	0
Max	10
Initial S/W Revision	Prior to A.2.00

### Copy/Exchange

This menu lets you copy any trace to any other trace, or exchange any trace with any other trace. The action is performed once, it is not an “every sweep” type of thing.

The X Axis settings and domain of a trace go with it when it is copied or exchanged.

Key Path	Trace/Detector
<b>Remote Command</b>	:TRACe:COPIY TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 :TRACe:COPIY?
Example	TRAC:COPIY TRACE1,TRACE3 copies Trace 1 to Trace 3 and puts Trace 3 in <b>Update=Off, Display=On</b>
Notes	The TRACe:COPIY command is of the form: :TRACe:COPIY <source_trace>,<dest_trace>
Notes	In the case of a <b>Copy</b> , the destination trace is put in <b>Update=Off, Display=On</b> after the copy. In the case of an <b>Exchange</b> , both traces are put into <b>Update=Off, Display=On</b> after the exchange.
Preset	TRACE1, TRACE2
Initial S/W Revision	Prior to A.02.00

<b>Remote Command:</b>	:TRACe:EXCHange TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 :TRACe:EXCHange?
Example:	TRAC:EXCH TRACE1,TRACE2 exchanges Trace 1 and Trace 2 and puts both traces in <b>Update=Off, Display=On</b> .

Common Measurement Functions  
**Trace/Detector**

Notes:	The TRACe:EXCHange command is of the form: :TRACe:EXCHange <trace_1>,<trace_2>
Preset:	TRACE1, TRACE2
Initial S/W Revision:	Prior to A.02.00

**From Trace**

Selects the trace to be copied to or exchanged with the **To Trace**

Key Path	Trace/Detector, Copy/Exchange
Notes	See “Copy/Exchange”.
Preset	1
Initial S/W Revision	Prior to A.02.00

**To Trace**

Selects the trace to be copied from or exchanged with the **From Trace**

Key Path	Trace/Detector, Copy/Exchange
Notes	See “Copy/Exchange”.
Preset	2
Initial S/W Revision	Prior to A.02.00

**Copy Now**

Executes the Copy operation and puts the destination trace in **Update=Off, Display=On**.

Key Path	Trace/Detector, Copy/Exchange
Notes	See “Copy/Exchange”.
Initial S/W Revision	Prior to A.02.00

**Exchange Now**

Executes the Exchange operation and puts both traces in **Update=Off, Display=On**.

Key Path	Trace/Detector, Copy/Exchange
Notes	See “Copy/Exchange”.
Initial S/W Revision	Prior to A.02.00

**Send/Query Trace Data ( Remote Command Only)**

This command allows trace data to be sent to the analyzer or queried from the analyzer. The response to



the query is a list of the amplitude points which comprise the requested trace in the current Y Axis Unit of the analyzer. The X Axis Unit is that of the destination trace (for send) or the source trace (for query).

See “Query Trace Data” on page 1749.

See “More Information” on page 1749.

<b>Remote Command:</b>	:TRACe[:DATA] TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, <data>
Notes:	The TRACe[:DATA] command is of the form: :TRACe:DATA <trace>,<data> where <trace> can be one of the following parameters: TRACE1,TRACE2,TRACE3,TRACE4,TRACE5,TRACE6 and where <data> can be - ASCII data, which consists of a string of values separated by comma or - REAL or INTeger sent as a definite length block, with a header describing the data to follow.
Couplings:	Sweep points will affect the amount of data  The FORMat:DATA command describes the different types of data formats that can be used with trace data.  Use the FORMat:BORDER command to set the byte order.
Initial S/W Revision:	Prior to A.02.00

### Query Trace Data

<b>Remote Command:</b>	:TRACe[:DATA]? TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6
Example:	TRAC TRACE1,-1,-2,-3,-4,-5 sends five points to Trace 1. Assuming that FORMat:DATA is set to ASCII, Y Axis Unit is set to dBm, and sweep points is set to 5, this will result in Trace 1 consisting of the five points -1 dBm, -2 dBm, -3 dBm, -4 dBm, and -5 dBm.  TRAC? TRACE2 queries the analyzer for the contents of trace 2.
Initial S/W Revision:	Prior to A.02.00

### More Information

The format and byte-ordering of the sent or received data will be dependent on the FORMat:DATA and FORMat:BORDER commands. ASCII data consists of a string of comma separated values. REAL or INTeger data is sent as a definite length block, with a header describing the data to follow.

For example, a four point trace might look like this if in ASCII (FORMat:DATA ASCIi):

-5.87350E+01, -5.89110E+01, -5.87205E+01, -5.12345E+01<NL><END>

and like this if in INTEger with 4 bytes per point (FORMat :DATA INT, 32):

```
#216<16 bytes of data><NL><END>
```

where the 2 in the #216 means “2 digits of numeric data to follow”, and the 16 is the 2 digits and means “16 binary bytes to follow” (this is the definite length block format).

Note that the data is terminated with <NL><END>. (For GPIB this is newline, or linefeed, followed by EOI set true. For LAN, this is newline only.)

The data format set by FORMat :DATA and FORMat :BORDER is used both for sending data to the instrument and receiving data from the instrument.

When sending data to the instrument, the data block must contain exactly the number of points currently specified in **Sweep, Points** or error will be generated and there will be no change to the target trace.

No units terminator (for example, dB or V) is used when sending data; the data is taken as being in the current Y Axis Unit of the analyzer.

When a trace is sent to the instrument, it immediately overwrites all of the data in the target trace, even if that trace is inactive, or even if it is active and in the middle of a sweep. If in the middle of a set of **Trace Average** or **Max/Min Hold** operations, it can totally mess up the result, so you must be careful. Similarly, when querying trace data, it is best if the analyzer is not sweeping during the query. Therefore, it is generally advisable to be in **Single Sweep, or Update=Off** when sending trace data to the analyzer or querying trace data from the analyzer.

### **Format Data: Numeric Data ( Remote Command Only)**

The :FORMat:DATA command is used to tell the analyzer how the data should look on output.

This comand works the same way in this and many other measurements, so it is documented in the Common Measurement Functions section.. For details about this key, see [“Format Data: Numeric Data \(Remote Command Only\)” on page 1586](#).

### **Format Data: Byte Order ( Remote Command Only)**

This command works the same way in this and many other measurements, so it is documented in the Common Measurement Functions section.. For details about this key, see [“Format Data: Byte Order \(Remote Command Only\)” on page 1588](#).

### **Smooth Trace Data (Remote Command Only)**

Not recommended for new designs. Use the CALCulate:DATA:COMPRESS command instead.

Smooths the trace according to the number of points specified in :TRACe:MATH:SMOoth:POINts. There is no equivalent front panel function.

The purpose of this function is to perform a spatial video averaging, as compared to the temporal version supplied by the video-average command [:SENSe]:AVERage:TYPE VIDEo. The functions of TRACe:MATH:SMOoth <trace> and [:SENSe]:AVERage:TYPE VIDEo|POWEr are not

interchangeable.

<b>Remote Command:</b>	:TRACe:MATH:SMOoth TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6
Initial S/W Revision:	Prior to A.02.00

### Number of Points for Smoothing (Remote Command Only)

Not recommended for new designs. (Will not be supported in future designs.) Use the CALCulate:DATA:COMPRESS command instead.

Specifies the number of points that will be smoothed. Increasing the number of points increases smoothing at the cost of decreasing resolution. If the number of points is an even number, then the number of points is increased by one. If the number of points is larger than the number of sweep points, then the number of sweep points is used, unless the number of sweep points is even, in which case the number of points will be the sweep points minus one. The number of points smoothed is always an odd number.

<b>Remote Command:</b>	:TRACe:MATH:SMOoth:POINTs <integer> :TRACe:MATH:SMOoth:POINTs?
Example:	TRAC:MATH:SMO:POIN 501
Notes:	Only odd values allowed; if <integer> even, add 1 unless <integer> = number of sweep points, in which case subtract 1 Used with the TRACe:MATH:SMOoth command.
Preset:	11
Min:	3
Max:	Number of sweep points
Initial S/W Revision:	Prior to A.02.00

### Mean Trace Data (Remote Command Only)

Not recommended for new designs. Use the CALCulate:DATA:COMPRESS command instead.

Returns the mean of the amplitudes of the trace amplitude elements in measurement units.

<b>Remote Command:</b>	:TRACe:MATH:MEAN? TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6
Example:	TRAC:MATH:MEAN? TRACE2
Initial S/W Revision:	Prior to A.02.00

### Calculate/Compress Trace Data Query (Remote Command Only)

This command works the same way in this and many other measurements, so it is documented in the

Common Measurement Functions section.. For details about this key, see [“Calculate/Compress Trace Data Query \(Remote Command Only\)” on page 1579](#).

### **Calculate Data Query (Remote Command Only)**

This command works the same way in this and many other measurements, so it is documented in the Common Measurement Functions section.. For details about this key, see [“Data Query \(Remote Command Only\)” on page 1579](#).

### Trigger

This key works the same way in this and many other measurements, so it is documented in the Common Measurement Functions section.. For details about this key, see [“Trigger” on page 1753](#).

## Trigger

Accesses a menu of keys to control the selection of the trigger source and the setup of each of the trigger sources. The analyzer is designed to allow triggering from a number of different sources, for example, Free Run, Video, External, RF Burst, and so forth.

The TRIG:SOURCe command (below) will specify the trigger source for the currently selected input (RF or I/Q). If you change inputs, the new input remembers the trigger source it was last programmed to for the current measurement, and uses that trigger source. You can directly set the trigger source for each input using the TRIGger:RF:SOURce and TRIGger:IQ:SOURce commands (later in this section).

Note the inclusion of the <measurement> parameter in the command below. Because each measurement remembers its own Trigger Source, the command must be qualified with the measurement name. Note that for the Swept SA measurement this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement.

See [“Trigger Source Presets” on page 1754](#)

See [“RF Trigger Source” on page 1757](#)

See [“I/Q Trigger Source” on page 1759](#)

See [“More Information” on page 1760](#)

<b>Remote Command</b>	:TRIGger:<measurement>[:SEQuence]:SOURce EXTernal1 EXTernal2 IMMediate LINE FRAMe RFBurst VIDeo  IF ALARm LAN IQMag IDEMod QDEMod IINPut QINPut AIQMag :TRIGger:<measurement>[:SEQuence]:SOURce?
Example	TRIG:ACP:SOUR EXT1 Selects the external 1 trigger input for the ACP measurement and the selected input  TRIG:SOUR VID Selects video triggering for the SANalyzer measurement in the Spectrum Analyzer mode. For SAN, do not use the <measurement> keyword.
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Front-panel key</b>

## Trigger

Notes	<p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available.</p> <p>Not all trigger sources are available for each input. See the “<a href="#">RF Trigger Source</a>” on page 1757 and “<a href="#">I/Q Trigger Source</a>” on page 1759 commands for detailed information on which trigger sources are available for each input.</p> <p>Other trigger-related commands are found in the INITiate and ABORt SCPI command subsystems.</p> <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.</p> <p>Available ranges and presets can vary from mode to mode.</p>
Dependencies	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTernal2 parameter will generate a “Hardware missing; Not available for this model number” error
Preset	See table below
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Backwards Compatibility SCPI	<p>[ :SENSe ] : &lt; measurement &gt; : TRIGger : SOURce</p> <p>This backwards compatibility command does not apply to the Swept SA measurement, for that just use :TRIGger:SOURce</p> <p>This backwards compatibility command does not apply to the monitor spectrum, log plot and spot frequency measurements at all.</p> <p>The backwards Compatibility SCPI command, [ :SENSe ] : ACPR : TRIGger : SOURce, is provided to support the same functionality as [ :SENSe ] : ACPr : TRIGger : SOURce (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to the fact that the ACPr node conflicts with the ACPower node.</p> <p>In earlier instruments, the parameter IF was used by apps for the video trigger, so using the IF enum selects video triggering.</p> <p>Sending IF in the command causes VID to be returned to a query.</p>
Modified at S/W Revision	A.03.00

### Trigger Source Presets

Here are the Trigger Source Presets for the various measurements:

Meas	Mode	Preset for RF	Preset for IQ	Notes

Swept SA	SA	IMM	IQ not supported	
CHP	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, LTE, LTETDD	IMM	IQ not supported	
OBW	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, LTE, LTETDD	1xEVDO: EXT1 others: IMM	IQ not supported	For 1xEVDO mode, the trigger source is coupled with the gate state, as well as the gate source. When the trigger source changes to RFBurst, External1 or External2, the gate state is set to on, and the gate source is set identically with the trigger source. When the trigger source changes to IMMEDIATE, VIDEO, LINE, FRAME or IF, the gate state is set to off.
CCDF	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, LTE, LTETDD	SA, WCDMA, C2K, LTE: IMMEDIATE WIMAXOFDMA : RFBurst LTETDD: BTS: External 1 MS: Periodic Timer TD-SCDMA: BTS: External 1 MS: RFBurst	TD-SCDMA: BTS: External 1 MS: IQMag LTETDD: BTS: External 1 MS: Periodic Timer Others: IMM	For TD-SCDMA: Trigger source is coupled with radio device. When radio device changes to BTS, trigger source will be changed to EXTERNAL1. When radio device changes to MS, trigger source will be set as RFBurst for RF or IQ Mag for BBIQ. When TriggerSource is RFBurst or IQ Mag, Measure Interval is grayed out.
ACP	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, LTE, LTETDD	IMM	IQ not supported	
Tx Power	SA, GSM, TD-SCDMA	SA, GSM: RFBurst TD-SCDMA: EXTERNAL	IMM	TD-SCDMA doesn't support the Line and Periodic Timer parameters. When the mode is TD-SCDMA, if the Radio Device is switched to BTS, the value will be changed to External 1 and if the Radio device is switched to MS, the value will be changed to RFBurst

## Trigger

SPUR	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xE V-DO, DVB-T/H, LTE, LTETDD	IMM	IQ not supported	
SEM	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, LTE, LTETDD	SA, WCDMA, C2K, TD-SCDMA, WIMAX OFDMA, LTE, LTETDD: IMMediate 1xEVDO(BTS): EXTernal1	IQ not supported	
CDP	WCDMA	IMM	IMM	
RHO	WCDMA	IMM	IMM	
PCON	WCDMA	IMM	IMM	
QPSK	WCDMA, C2K, 1xEVDO	All except CDMA1xEVDO: IMMediate CDMA1xEVDO: EXT1	IMM	
MON	All except SA and BASIC	IMM	IQ not supported	
WAV		LTETDD: BTS: External 1 MS: Periodic Timer  GSM/EDGE: RFBurst  All others: IMMediate	LTETDD: BTS: External 1 MS: Periodic Timer  GSM/EDGE: IQMag  All others: IMMediate	
PVT	WIMAXOFDMA	RFB	IMM	
EVM	WIMAXOFDMA , DVB-T/H, DTMB, LTE, LTETDD	IMM	IMM	LTE, LTETDD supports Free Run, Video and External 1 only.
SPEC	BASIC	IMM	IMM	
LOG Plot	PN	IMM	IQ not supported	
Spot Freq	PN	IMM	IQ not supported	



GMSK PVT	EDGE/GSM	RFB	IMM	
GMSK PFER	EDGE/GSM	RFB	IQMag	
GMSK ORFS	EDGE/GSM	RFB	IQ not supported	
EDGE PVT	EDGE/GSM	RFB	IMM	
EDGE EVM	EDGE/GSM	RFB	IQMag	
EDGE ORFS	EDGE/GSM	RFB	IQ not supported	
Combined WCDMA	WCDMA	IMM	IQ not supported	
Combined GSM	EDGE/GSM	RFB	IQ not supported	
List Power Step	WCDMA, EDGE/GSM	IMM	IQ not supported	
Transmit On/Off Power	LTETDD	LTETDD: BTS: External 1 MS: Periodic Timer	LTETDD: BTS: External 1 MS: Periodic Timer	

## RF Trigger Source

The **RF Trigger Source** command selects the trigger to be used for the specified measurement when RF is the selected input. The RF trigger source can be queried and changed even while another input is selected, but it is inactive until RF becomes the selected input.

Note the inclusion of the <measurement> parameter in the command below. Because each measurement remembers its own Trigger Source, the command must be qualified with the measurement name. Note that for the Swept SA measurement this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement.

<b>Remote Command:</b>	<pre>:TRIGger:&lt;measurement&gt;[:SEquence]:RF:SOURce EXTErnal1 EXTErnal2 IMMediate LINE FRAMe RFBurst VIDeo  IF ALARm LAN  :TRIGger:&lt;measurement&gt;[:SEquence]:RF:SOURce?</pre>
------------------------	---

## Trigger

Example:	<p>TRIG:ACP:RF:SOUR EXT1</p> <p>Selects the external 1 trigger input for the ACP measurement and the RF input</p> <p>TRIG:RF:SOUR VID</p> <p>Selects video triggering for the SANalyzer measurement and the RF input. For SAN, do not use the &lt;measurement&gt; keyword.</p>
Notes:	<p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available.</p> <p>Not all trigger sources are available for each input. For the <b>RF Trigger Source</b>, the following trigger sources are available:</p> <ul style="list-style-type: none"> <li>— IMMEDIATE - free run triggering</li> <li>— VIDEO - triggers on the video signal level</li> <li>— LINE - triggers on the power line signal</li> <li>— EXTERNAL1 - triggers on an externally connected trigger source marked "Trigger 1 In" on the rear panel</li> <li>— EXTERNAL2 - triggers on an externally connected trigger source marked "Trigger 2 In" on the front panel. In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTERNAL2 parameter will generate a "Hardware missing; Not available for this model number" error</li> <li>— RFBURST - triggers on the bursted frame</li> <li>— FRAME - triggers on the periodic timer</li> <li>— IF (video) - same as video, for backwards compatibility only</li> <li>— ALARM – LXI Alarm</li> <li>— LAN – LXI LAN event</li> </ul> <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.</p> <p>Available ranges, and presets can vary from mode to mode.</p>
Status Bits/OPC dependencies:	<p>The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.</p>
Backwards Compatibility SCPI:	<p>In earlier instruments, the parameter IF was used by apps for the video trigger, so using the IF enum selects video triggering.</p> <p>Sending IF in the query returns the VID enum.</p>
Initial S/W Revision:	Prior to A.02.00

## I/Q Trigger Source

This command selects the trigger to be used for the specified measurement when I/Q (which requires option BBA) is the selected input. The I/Q trigger source can be queried and changed even while another input is selected, but it is inactive until I/Q becomes the selected input.

<b>Remote Command:</b>	<pre>:TRIGger:&lt;measurement&gt;[:SEQuence]:IQ:SOURce EXTErnal1 EXTErnal2 IMMEdiate IQMag IDEMod QDEMod IINPut  QINPut AIQMag  :TRIGger:&lt;measurement&gt;[:SEQuence]:IQ:SOURce?</pre>
Example:	<pre>TRIG:WAVEform:SOUR IQM</pre> <p>Selects I/Q magnitude triggering for the IQ Waveform measurement and the I/Q input</p>
Notes:	<p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available.</p> <p>Not all trigger sources are available for each input. For the <b>I/Q Trigger Source</b>, the following trigger sources are available:</p> <ul style="list-style-type: none"> <li>— IMMEdiate - free run triggering</li> <li>— EXTErnal1 - triggers on an externally connected trigger source on the rear panel</li> <li>— EXTErnal2 - triggers on an externally connected trigger source on the front panel</li> <li>— IQMag - triggers on the magnitude of the I/Q signal</li> <li>— IDEMod - triggers on the I/Q signal's demodulated I voltage</li> <li>— QDEMod - triggers on the I/Q signal's demodulated Q voltage</li> <li>— IINPut - triggers on the I channel's ADC voltage</li> <li>— QINPut - triggers on the Q channel's ADC voltage</li> <li>— AIQMag - triggers on the magnitude of the auxiliary receiver channel I/Q signal</li> </ul> <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.</p> <p>Available ranges, an from mode to mode.d presets can vary</p>
Status Bits/OPC dependencies:	<p>The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.</p>
Initial S/W Revision:	Prior to A.02.00

## Trigger

### More Information

The trigger menus let you select the trigger source and trigger settings for a sweep or measurement. In triggered operation (basically, any trigger source other than Free Run), the analyzer will begin a sweep or measurement only with the selected trigger conditions are met, generally when your trigger source signal meets the specified trigger level and polarity requirements. (In FFT measurements, the trigger controls when the data acquisition begins for FFT conversion.)

For each of the trigger sources, you may define a set of operational parameters or settings which will be applied when that source is selected as the current trigger source. Examples of these settings are Trigger Level, Trigger Delay, and Trigger Slope. You may apply different settings for each source; so, for example, you could have a Trigger Level of 1v for External 1 trigger and -10 dBm for Video trigger.

Once you have established the settings for a given trigger source, they generally will remain unchanged for that trigger source as you go from measurement to measurement within a Mode (although the settings do change as you go from Mode to Mode). Furthermore, the trigger settings within a Mode are the same for the **Trigger** menu, the **Gate Source** menu, and the **Sync Source** menu that is part of the **Periodic Timer Trigger Setup** menu. That is, if **Ext1** trigger level is set to 1v in the **Trigger** menu, it will appear as 1v in both the **Gate Source** and the **Sync Source** menus. For these reasons the trigger settings commands are not qualified with the measurement name, the way the trigger source commands are.


The settings setup menu can be accessed by pressing the key for the current trigger source a second time. For example, one press of Video selects the Video trigger as the source. The Video key becomes highlighted and the hollow arrow on the key turns black. Now a second press of the key takes you into the Video Trigger Setup menu.

Trigger Setup Parameters:

The following examples show trigger setup parameters using an external trigger source.

Example 1 illustrates the trigger conditions with negative slope and no trigger occurs during trigger Holdoff time.

Example 2 illustrates the trigger conditions with positive slope, trigger delay, and auto trigger time.

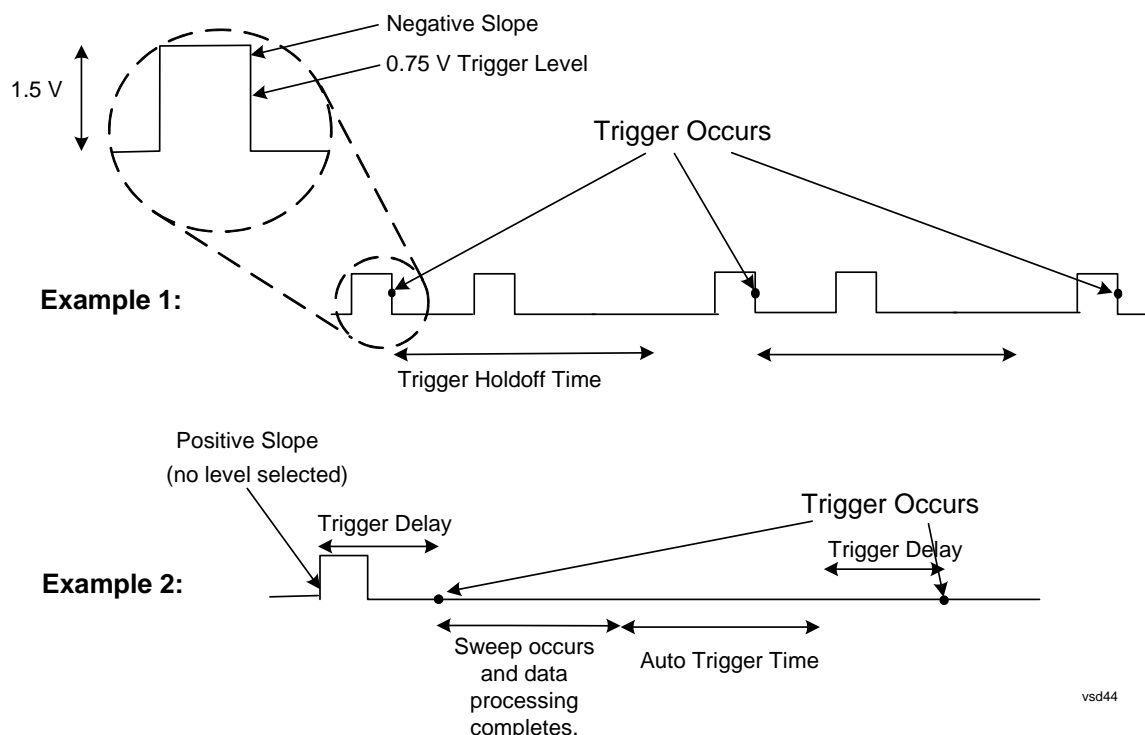

vsd44

## Free Run

Pressing this key, when it is not selected, selects free-run triggering. Free run triggering occurs immediately after the sweep/measurement is initiated.

Key Path	Trigger
Example	TRIG:SOUR IMM ! Swept SA measurement TRIG:<meas>:SOUR IMM ! Measurements other than Swept SA
State Saved	Saved in instrument state
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision	Prior to A.02.00

## Video (IF Envelope)

Pressing this key, when it is not selected, selects the video signal as the trigger. The Video trigger condition is met when the video signal (the filtered and detected version of the input signal, including both RBW and VBW filtering) crosses the video trigger level.

## Trigger

---

**NOTE** When the detector selected for all active traces is the average detector, the video signal for triggering does not include any VBW filtering.

---

The video trigger level is shown as a labeled line on the display. The line is displayed as long as video is the selected trigger source.

Pressing this key, when it is already selected, accesses the video trigger setup functions.

Key Path	<b>Trigger</b>
Example	TRIG:SOUR VID ! Swept SA measurement TRIG:<meas>:SOUR VID ! Measurements other than Swept SA
Notes	Log Plot and Spot Frequency measurements do not support Video Trigger
Dependencies	Video trigger is allowed in average detector mode.
State Saved	Saved in instrument state
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision	Prior to A.02.00

### Trigger Level

Sets a level for the video signal trigger. When the video signal crosses this level, with the chosen slope, the trigger occurs. This level is displayed with a horizontal line only if **Video** is the selected trigger source.

<b>Remote Command</b>	:TRIGger [ :SEquence ] :VIDeo:LEVel <ampl> :TRIGger [ :SEquence ] :VIDeo:LEVel ?
Example	TRIG:VID:LEV -40 dBm
Default Unit	depends on the current selected Y axis unit
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Trigger, Video</b>

Notes	<p>When sweep type = FFT, the video trigger uses the amplitude envelope in a bandwidth wider than the FFT width as a trigger source. This might often be useful, but does not have the same relationship between the displayed trace and the trigger level as in swept triggering.</p> <p>Amplitude Corrections are not taken into account by the Video Trig Level. For example, if you have given yourself effective gain with an amplitude correction factor, the Video Trigger will not fire until you have dropped the trigger line that far below the displayed signal level, rather than simply dropping it down to the displayed signal level.</p> <p>Note that other corrections, specifically External Gain and Ref Level Offset, modify the actual trace data as it is taken and therefore ARE taken into account by Trig Level.</p>
Couplings	This same level is used for the Video trigger source in the Trigger menu and for the Video selection in the Gate Source menu.
Preset	Set the Video Trigger Level –25 dBm on Preset. When the Video Trigger Level becomes the active function, if the value is off screen, set it to either the top or bottom of screen, depending on which direction off screen it was.
State Saved	Saved in instrument state
Min	–170 dBm
Max	+30 dBm
Backwards Compatibility SCPI	:TRIGger[:SEQuence]:IF:LEVel :TRIGger[:SEQuence]:IF:LEVel?
Backwards Compatibility SCPI	For backward compatibility with VSA/PSA comms apps, we need this alias.

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	<b>Trigger, Video</b>
<b>Remote Command</b>	:TRIGger[:SEQuence]:VIDeo:SLOPe POSitive NEGative :TRIGger[:SEQuence]:VIDeo:SLOPe?
Example	TRIG:VID:SLOP NEG
Preset	POSitive
State Saved	Saved in instrument state
Backwards Compatibility SCPI	:TRIGger[:SEQuence]:SLOPe :TRIGger[:SEQuence]:IF:SLOPe

## Trigger

Backwards Compatibility SCPI	<p>For backward compatibility, the following commands should update all instances of trigger slope (video/external/line). The query returns the trigger slope setting of the selected trigger source.</p> <pre>:TRIGger[:SEquence]:SLOPe POSitive NEGative</pre> <pre>:TRIGger[:SEquence]:SLOPe?</pre> <p>For backward compatibility with VSA/PSA comms apps, we need to alias</p> <pre>:TRIGger[:SEquence]:IF:SLOPe NEGative POSitive</pre> <pre>:TRIGger[:SEquence]:IF:SLOPe?</pre>
Initial S/W Revision	Prior to A.02.00

### Trig Delay

Controls a time delay during that the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in the time domain or FFT, but not in swept spans.

Key Path	Trigger, Video
Remote Command	<pre>:TRIGger[:SEquence]:VIDeo:DELAy &lt;time&gt;</pre> <pre>:TRIGger[:SEquence]:VIDeo:DELAy?</pre> <pre>:TRIGger[:SEquence]:VIDeo:DELAy:STATe OFF ON 0 1</pre> <pre>:TRIGger[:SEquence]:VIDeo:DELAy:STATe?</pre>
Example	<pre>TRIG:VID:DEL:STAT ON</pre> <pre>TRIG:VID:DEL 100 ms</pre>
Notes	<p>Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.</p>
Preset	Off, 1 us
State Saved	Saved in instrument state
Min	-150 ms
Max	+500 ms
Default Unit	s
Backwards Compatibility SCPI	<pre>:TRIGger[:SEquence]:IF:DELAy</pre> <pre>:TRIGger[:SEquence]:DELAy</pre>



Backwards Compatibility SCPI	<p>For backward compatibility with VSA/PSA comms apps, we need to alias Video trigger to</p> <pre>:TRIGger[:SEQuence]:IF:DELAy &lt;time&gt;</pre> <pre>:TRIGger[:SEQuence]:IF:DELAy?</pre> <p>For backward compatibility, the following commands should update all instances of trigger delay (not including RF Burst). The query returns the video trigger delay settings of the selected trigger source.</p> <pre>:TRIGger[:SEQuence]:DELAy &lt;time&gt;</pre> <pre>:TRIGger[:SEQuence]:DELAy?</pre> <pre>:TRIGger[:SEQuence]:DELAy:STATe OFF ON 0 1</pre> <pre>:TRIGger[:SEQuence]:DELAy:STATe?</pre> <p>Also, the legacy ESA command for trigger offset, TRIGger[:SEQuence]:OFFSet, is supported (see section “<a href="#">Trigger Offset (Remote Command Only)</a>” on page 1812). The offset specified by this commands is remembered by the analyzer and added to the video trigger delay whenever the value is sent to the hardware, when in zero span and in a Res BW <math>\geq 1</math> kHz.</p>
Initial S/W Revision	Prior to A.02.00

## Line

Pressing this key, when it is not selected, selects the line signal as the trigger. A new sweep/measurement will start synchronized with the next cycle of the line voltage. Pressing this key, when it is already selected, access the line trigger setup menu.

Key Path	Trigger
Example	<pre>TRIG:SOUR LINE ! Swept SA measurement</pre> <pre>TRIG:&lt;meas&gt;:SOUR LINE ! Measurements other than Swept SA</pre>
Dependencies	Line trigger is not available when operating from a "dc power source", for example, when the instrument is powered from batteries.
State Saved	Saved in instrument state
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision	Prior to A.02.00

## Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a

## Trigger

falling edge.

Key Path	Trigger, Line
<b>Remote Command</b>	:TRIGger[:SEquence]:LINE:SLOPe POSitive NEGative :TRIGger[:SEquence]:LINE:SLOPe?
Example	TRIG:LINE:SLOP NEG
Preset	POSitive
State Saved	Saved in instrument state
Backwards Compatibility SCPI	:TRIGger[:SEquence]:SLOPe (There are SLOPe backward compatibility commands.)
Initial S/W Revision	Prior to A.02.00

## Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Key Path	Trigger, Line
<b>Remote Command</b>	:TRIGger[:SEquence]:LINE:DELay <time> :TRIGger[:SEquence]:LINE:DELay? :TRIGger[:SEquence]:LINE:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:LINE:DELay:STATe?
Example	TRIG:LINE:DEL:STAT ON TRIG:LINE:DEL 100 ms
Notes	Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.
Preset	Off, 1.000 us
State Saved	Saved in instrument state
Min	-150 ms
Max	500 ms
Default Unit	S

Backwards Compatibility SCPI	There are DELay backward compatibility commands described in video, Section “ <a href="#">Trig Delay</a> ” on page 1764)  :TRIGger[:SEQuence]:DELay  (Also, the legacy ESA command for trigger offset, TRIGger[:SEQuence]:OFFSet, is supported. See section “ <a href="#">Trigger Offset (Remote Command Only)</a> ” on page 1812. The offset specified by this commands is remembered by the analyzer and added to the line trigger delay whenever the value is sent to the hardware, when in zero span and in a Res BW >= 1 kHz.)
Initial S/W Revision	Prior to A.02.00

## External 1

Pressing this key, when it is not selected, selects an external input signal as the trigger. A new sweep/measurement will start when the external trigger condition is met using the external 1 input connector on the rear panel.

Pressing this key, when it is already selected, accesses the external 1 trigger setup menu.

Key Path	<b>Trigger</b>
Example	TRIG:SOUR EXT1 ! Swept SA measurement TRIG:<meas>:SOUR EXT1 ! Measurements other than Swept SA
State Saved	Saved in instrument state
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision	Prior to A.02.00

## Trigger Level

Sets the value where the external 1 trigger input will trigger a new sweep/measurement.

Key Path	<b>Trigger, External 1</b>
<b>Remote Command</b>	:TRIGger[:SEQuence]:EXTernal1:LEVel <level> :TRIGger[:SEQuence]:EXTernal1:LEVel?
Example	TRIG:EXT1:LEV 0.4 V
Couplings	This same level is used for the Ext1 trigger source in the Trigger menu, for the Ext1 selection in the Periodic Timer sync source (in the Trigger menu and in the Gate Source menu), and also for the Ext1 selection in the Gate Source menu.

## Trigger

Preset	1.2 V
State Saved	Saved in instrument state
Min	-5 V
Max	5 V
Default Unit	V
Backwards Compatibility SCPI	:TRIGger[:SEQuence]:EXTernal:LEVel (For backward compatibility, EXTernal should also work.)
Initial S/W Revision	Prior to A.02.00

## Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	<b>Trigger, External 1</b>
<b>Remote Command</b>	:TRIGger[:SEQuence]:EXTernal1:SLOPe POSitive NEGative :TRIGger[:SEQuence]:EXTernal1:SLOPe?
Example	TRIG:EXT1:SLOP NEG
Couplings	This same slope is used in the Ext1 selection for the trigger source in the Trigger menu and for the period timer sync source (in the Trigger menu and in the Gate Source menu).
Preset	POSitive
State Saved	Saved in instrument state
Backwards Compatibility SCPI	For backward compatibility, EXTernal should also work.  Also, there are SLOPe backward compatibility cmds described in Video section “ <a href="#">Trig Slope</a> ” on page 1763 :TRIGger[:SEQuence]:SLOPe
Initial S/W Revision	Prior to A.02.00

## Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Key Path	<b>Trigger, External 1</b>
<b>Remote Command</b>	:TRIGger[:SEQuence]:EXTernal1:DELay <time> :TRIGger[:SEQuence]:EXTernal1:DELay? :TRIGger[:SEQuence]:EXTernal1:DELay:STATE OFF ON 0 1 :TRIGger[:SEQuence]:EXTernal1:DELay:STATE?

Example	TRIG:EXT1:DEL:STAT ON TRIG:EXT1:DEL 100 ms
Notes	Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.
Preset	Off, 1.000 us
State Saved	Saved in instrument state
Min	-150 ms
Max	+500 ms
Default Unit	s
Backwards Compatibility SCPI	For backward compatibility, EXTERNAL should also work.  Also, there are DELAY backward compatibility commands described in video section <a href="#">“Trig Delay ” on page 1764</a>  :TRIGGER[:SEQUENCE]:DELAY  Also, the legacy ESA command for trigger offset, TRIGGER[:SEQUENCE]:OFFSET, is supported (see section <a href="#">“Trigger Offset (Remote Command Only)” on page 1812</a> ). The offset specified by this commands is remembered by the analyzer and added to the external1 trigger delay whenever the value is sent to the hardware, when in zero span and in a Res BW >= 1 kHz.
Initial S/W Revision	Prior to A.02.00

## External 2

Pressing this key, when it is not selected, selects an external input signal as the trigger. A new sweep/measurement will start when the external trigger condition is met using the external 2 input connector. The external trigger 2 input connector is on the rear panel.

Pressing this key, when it is already selected, accesses the external 2 trigger setup menu.

Key Path	Trigger
Example	TRIG:SOUR EXT2 ! Swept SA measurement TRIG:<meas>:SOUR EXT2 ! Measurements other than Swept SA
Dependencies	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTERNAL2 parameter will generate a “Hardware missing; Not available for this model number” error
State Saved	Saved in instrument state

## Trigger

Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Trigger Level

Sets the value where the external 2 trigger input will trigger a new sweep/measurement.

Key Path	<b>Trigger, External 2</b>
Remote Command	:TRIGger[:SEQuence]:EXTernal2:LEVel :TRIGger[:SEQuence]:EXTernal2:LEVel?
Example	TRIG:EXT2:LEV 1.1 V
Couplings	This same level is used for the Ext2 trigger source in the Trigger menu, for the Ext2 selection in the Periodic Timer sync source (in the Trigger menu and in the Gate Source menu), and also for the Ext2 selection in the Gate Source menu.
Preset	1.2 V
State Saved	Saved in instrument state
Min	-5 V
Max	5 V
Default Unit	V
Initial S/W Revision	Prior to A.02.00

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	<b>Trigger, External 2</b>
Remote Command	:TRIGger[:SEQuence]:EXTernal2:SLOPe POSitive NEGative :TRIGger[:SEQuence]:EXTernal2:SLOPe?
Example	TRIG:EXT2:SLOP NEG
Couplings	This same slope is used in the Ext2 selection for the trigger source in the Trigger menu and for the period timer sync source (in the Trigger menu and in the Gate Source menu).

Preset	POSitive
State Saved	Saved in instrument state
Backwards Compatibility SCPI	Also, there are SLOPe backward compatibility commands described in Video, section :TRIGger[:SEQuence]:SLOPe
Initial S/W Revision	Prior to A.02.00

### Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Key Path	<b>Trigger, External 2</b>
Remote Command	:TRIGger[:SEQuence]:EXTernal2:DELAy <time> :TRIGger[:SEQuence]:EXTernal2:DELAy? :TRIGger[:SEQuence]:EXTernal2:DELAy:STATe OFF ON 0 1 :TRIGger[:SEQuence]:EXTernal2:DELAy:STATe?
Example	TRIG:EXT2:DEL:STAT ON TRIG:EXT2:DEL 100 ms
Notes	Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.
Preset	Off, 1.000 us
State Saved	Saved in instrument state
Min	-150 ms
Max	500 ms
Default Unit	s
Backwards Compatibility SCPI	Also, there are DELay backward compatibility commands described in video section " <a href="#">Trig Delay</a> " on page 1764. :TRIGger[:SEQuence]:DELAy  Also, the legacy ESA command for trigger offset, TRIGger[:SEQuence]:OFFSet, is supported (see section " <a href="#">Trigger Offset (Remote Command Only)</a> " on page 1812). The offset specified by this commands is remembered by the analyzer and added to the external2 trigger delay whenever the value is sent to the hardware, when in zero span and in a Res BW >= 1 kHz.

## Trigger

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### RF Burst

Pressing this key, when it is not selected, selects the RF Burst as the trigger. A new sweep/measurement will start when an RF burst envelope signal is identified from the signal at the RF Input connector. Pressing this key, when it is already selected, accesses the RF Burst trigger setup menu.

In some models, a variety of burst trigger circuitry is available, resulting in various available burst trigger bandwidths. The analyzer automatically chooses the appropriate trigger path based on the hardware configuration and other settings of the analyzer.

Key Path	Trigger
Example	TRIG:SOUR RFB ! Swept SA measurement TRIG:<meas>:SOUR RFB ! Measurements other than Swept SA
State Saved	Saved in instrument state
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.04.00

### Absolute Trigger Level

Sets the absolute trigger level for the RF burst envelope.

<b>Remote Command</b>	:TRIGger[:SEquence]:RFBurst:LEVel:ABSolute <ampl> :TRIGger[:SEquence]:RFBurst:LEVel:ABSolute?
Example	TRIG:RFB:LEV:ABS 10 dBm sets the trigger level of the RF burst envelope signal to the absolute level of 10 dBm
Default Unit	depends on the current selected Y-Axis unit
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Trig, RF Burst</b>
Scope	Meas Global



Notes	<p>Sending this command does not switch the setting from relative to absolute; to switch it you need to send the :TRIGger[:SEQuence]:RFBurst:LEVel:TYPE command, below.</p> <p>Amplitude Corrections are not taken into account by the Absolute Trigger Level. For example, if you have given yourself effective gain with an amplitude correction factor, the Absolute Trigger will not fire until you have set the trigger level that far below the displayed signal level, rather than simply to the displayed signal level. This is only true for Amplitude Corrections, not External Gain or Ref Level Offset functions.</p>
Couplings	This same level is used for the RF Burst trigger source in the Trigger menu, for the RF Burst selection in the Periodic Timer sync source (in the Trigger menu and in the Gate Source menu), and also for the RF Burst selection in the Gate Source menu
Preset	-20 dBm
State Saved	Saved in state
Min	-200 dBm
Max	100 dBm
Modified at S/W Revision	A.04.00

<b>Remote Command:</b>	:TRIGger [:SEQuence] :RFBurst :LEVel :TYPE ABSolute RELative :TRIGger [:SEQuence] :RFBurst :LEVel :TYPE?
Example:	TRIG:RFB:LEV:TYPE REL sets the trigger level type of the RF burst trigger to Relative.
Preset:	ABSolute
State Saved:	Saved in State
Key Path:	<b>Trig, RF Burst</b>
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.04.00

### Relative Trigger Level

Sets the relative trigger level for the RF burst envelope.

In some models, the relative burst trigger function is implemented in hardware. In other models, without the advanced triggering hardware required, the relative burst trigger function is implemented in software in some measurements, and is unavailable in other measurements.

When implemented in software, the relative RF Burst trigger function is implemented as follows:

The measurement starts with the absolute RF Burst trigger setting. If it can not get a trigger with that level, auto trigger fires and the acquisition starts anyway. After the acquisition, the measurement searches for the peak in the acquired waveform and saves it.

## Trigger

Now, in the next cycle of the measurement, the measurement determines a new absolute RF Burst level based on the peak value from the first measurement and the Relative RF Burst Trigger Level (always 0 or negative dB) set by the user. The following formula is used:

absolute RF Burst level = peak level of the previous acquisition + relative RF Burst level

If the new absolute RF Burst level differs from the previous by more than 0.5 dB, the new level is sent to the hardware; otherwise it is not updated (to avoid slowing down the acquisition)

Steps 2 and 3 repeat for subsequent measurements.

<b>Remote Command</b>	:TRIGger[:SEquence]:RFBurst:LEVel:RELative <rel_ampl> :TRIGger[:SEquence]:RFBurst:LEVel:RELative?
Example	TRIG:RFB:LEV:REL -10 dB sets the trigger level of the RF burst envelope signal to the relative level of -10 dB
Default Unit	dB or dBc
Initial S/W Revision	Prior to A.02.00
Key Path	<b>Trig, RF Burst</b>
Scope	Meas Global
Notes	Sending this command does not switch the setting from absolute to relative; to switch it you need to send the :TRIGger[:SEquence]:RFBurst:LEVel:TYPE command, above.  The relative trigger level is not available in some measurements. In those measurements the RELative parameter, and the :TRIGger[:SEquence]:RFBurst:LEVel:TYPE command (above), should generate an error if sent.
Dependencies	This key is grayed out and Absolute Trigger Level selected if the required hardware is not present in your analyzer and the current measurement does not support Relative triggering.
Preset	-6 dB GSM: -25 dB
State Saved	Saved in state
Min	-45 dB
Max	0 dB
Backwards Compatibility SCPI	:TRIGger[:SEquence]:RFBurst:LEVel Is aliased to: :TRIGger[:SEquence]:RFBurst:LEVel:RELative because the PSA had ONLY relative burst triggering
Modified at S/W Revision	A.04.00

## Trigger Slope

It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	Trigger, RF Burst
<b>Remote Command</b>	:TRIGger[:SEQuence]:RFBurst:SLOPe POSitive NEGative :TRIGger[:SEQuence]:RFBurst:SLOPe?
Example	TRIG:RFB:SLOP NEG
Couplings	This same slope is used in the RF Burst selection for the trigger source in the Trigger menu and for the period timer sync source (in the Trigger menu and in the Gate Source menu).
Preset	POSitive
State Saved	Saved in instrument state
Backwards Compatibility SCPI	Also, there are SLOPe backward compatibility commands described in Video section <a href="#">“Trig Slope ” on page 1763</a> :TRIGger[:SEQuence]:SLOPe
Initial S/W Revision	Prior to A.02.00

## Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Key Path	Trigger, RF Burst
<b>Remote Command</b>	:TRIGger[:SEQuence]:RFBurst:DELAy <time> :TRIGger[:SEQuence]:RFBurst:DELAy? :TRIGger[:SEQuence]:RFBurst:DELAy:STATe OFF ON 0 1 :TRIGger[:SEQuence]:RFBurst:DELAy:STATe?
Example	TRIG:RFB:DEL:STAT ON TRIG:RFB:DEL 100 ms
Notes	Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.
Preset	Off, 1.000 us
State Saved	Saved in instrument state
Min	-150 ms

## Trigger

Max	500 ms
Default Unit	s
Backwards Compatibility SCPI	Also, there are DELay backward compatibility commands described in video section “ <a href="#">Trig Delay</a> ” on page 1764.  :TRIGger[:SEQuence]:DELay
Initial S/W Revision	Prior to A.02.00

### Periodic Timer (Frame Trigger)

Pressing this key, when it is not selected, selects the internal periodic timer signal as the trigger. Triggering occurrences are set by the **Period** parameter, which is modified by the **Sync Source** and **Offset**. Pressing this key, when it is already selected, accesses the periodic timer trigger setup functions.

If you do not have a sync source selected (it is Off), then the internal timer will not be synchronized with any external timing events.

Key Path	<b>Trigger</b>
Example	TRIG:SOUR FRAM ! Swept SA measurement TRIG:<meas>:SOUR FRAM ! Measurements other than Swept SA
State Saved	Saved in instrument state
Readback	[Sync: <value of Sync Source>], for example, [Sync: External 1]
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision	Prior to A.02.00

#### Periodic Timer Triggering:

This feature selects the internal periodic timer signal as the trigger. Trigger occurrences are set by the **Periodic Timer** parameter, which is modified by the **Sync Source** and **Offset**.

The figure below shows the action of the periodic timer trigger. Before reviewing the figure, we'll explain some uses for the periodic trigger.


A common application is measuring periodic burst RF signals for which a trigger signal is not easily available. For example, we might be measuring a TDMA radio which bursts every 20 ms. Let's assume that the 20 ms period is very consistent. Let's also assume that we do not have an external trigger source available that is synchronized with the period, and that the signal-to-noise ratio of the signal is not high enough to provide a clean RF burst trigger at all of the analysis frequencies. For example, we might want to measure spurious transmissions at an offset from the carrier that is larger than the bandwidth of the RF burst trigger. In this application, we can set the Periodic Timer to a 20.00 ms period and adjust the offset from that timer to position our trigger just where we want it. If we find that the 20.00 ms is not exactly

right, we can adjust the period slightly to minimize the drift between the period timer and the signal to be measured.

A second way to use this feature would be to use **Sync Source** temporarily, instead of **Offset**. In this case, we might tune to the signal in a narrow span and use the RF Burst trigger to synchronize the periodic timer. Then we would turn the sync source off so that it would not mis-trigger. Mis-triggering can occur when we are tuned so far away from the RF burst trigger that it is no longer reliable.

A third example would be to synchronize to a signal that has a reference time element of much longer period than the period of interest. In some CDMA applications, it is useful to look at signals with a short periodicity, by synchronizing that periodicity to the "even-second clock" edge that happens every two seconds. Thus, we could connect the even-second clock trigger to Ext1 and use then Ext1 as the sync source for the periodic timer.

The figure below illustrates this third example. The top trace represents the even-second clock. It causes the periodic timer to synchronize with the leading edge shown. The analyzer trigger occurs at a time delayed by the accumulated offset from the period trigger event. The periodic timer continues to run, and triggers continue to occur, with a periodicity determined by the analyzer time base. The timer output (labeled "late event") will drift away from its ideal time due to imperfect matching between the time base of the signal being measured and the time base of the analyzer, and also because of imperfect setting of the period parameter. But the synchronization is restored on the next even-second clock event. ("Accumulated offset" is described in the in the **Offset** function section.)

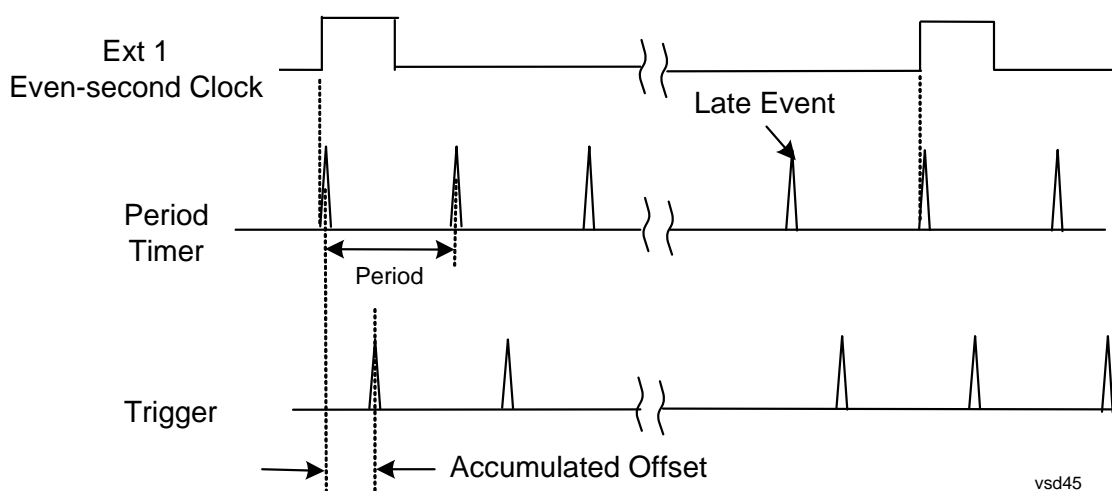

## Period

Sets the period of the internal periodic timer clock. For digital communications signals, this is usually set to the frame period of your current input signal. In the case that sync source is not set to OFF, and the external sync source rate is changed for some reason, the periodic timer is synchronized at the every external synchronization pulse by resetting the internal state of the timer circuit.

Key Path	Trigger, Periodic Timer
<b>Remote Command</b>	:TRIGger[:SEquence]:FRAMe:PERiod <time> :TRIGger[:SEquence]:FRAMe:PERiod?
Example	TRIG:FRAM:PER 100 ms

## Trigger

Notes	Internal hardware resolution is $1 / (30 \text{ MHz } 216)$ or about 0.5 ps. The manual UI resolution should be 1 ps. The remote command can be sent with more resolution but must be quantized to the hardware resolution when applied. Therefore, Joe Gorin proposed an internal software resolution smaller than 0.5 ps. Let's choose 0.1 ps.
Dependencies	The invalid data indicator turns on when the period is changed, until the next sweep/measurement completes.
Couplings	The same period is used in the Gate Source selection of the period timer.
Preset	20 ms GSM: 4.615383
State Saved	Saved in instrument state
Min	100.000 ns
Max	559.0000 ms
Default Unit	S
Initial S/W Revision	Prior to A.02.00

### Offset

Adjusts the accumulated offset between the periodic timer events and the trigger event. Adjusting the accumulated offset is different than setting an offset, and requires explanation.

The periodic timer is usually not synchronized with any external events, so the timing of its output events has no absolute meaning. Since the timing relative to external events (RF signals) is important, you need to be able to adjust (offset) it. However, you have no direct way to see when the periodic timer events occur. All that you can see is the trigger timing. When you want to adjust the trigger timing, you will be changing the internal offset between the periodic timer events and the trigger event. Because the absolute value of that internal offset is unknown, we will just call that the accumulated offset. Whenever the Offset parameter is changed, you are changing that accumulated offset. You can reset the displayed offset using Reset Offset Display. Changing the display does not change the value of the accumulated offset, and you can still make additional changes to accumulated offset.

To avoid ambiguity, we define that an increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event.

Key Path	<b>Trigger, Periodic Timer</b>
Remote Command	:TRIGger[:SEquence]:FRAMe:OFFSet <time> :TRIGger[:SEquence]:FRAMe:OFFSet?
Example	TRIG:FRAM:OFFS 1.2 ms

Notes	<p>The front panel interface (for example, the knob), and this command, adjust the accumulated offset, which is shown on the active function display. However, the actual amount sent to the hardware each time the offset is updated is the delta value, that is, the current accumulated offset value minus the previous accumulated offset value. Note that the accumulated offset value is essentially arbitrary; it represents the accumulated offset from the last time the offset was zeroed (with the Reset Offset Display key).</p> <p>Note that this command does not change the period of the trigger waveform. Note also that Offset is used only when the sync source is set to OFF, otherwise delay is used, see section <a href="#">“Trig Delay” on page 1783</a>.</p> <p>An increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event.</p>
Notes	<p>When the SCPI command is sent the value shown on the key (and the Active Function, if this happens to be the active function) is updated with the new value. However, the actual amount sent to the hardware is the delta value, that is, the current accumulated offset value minus the previous accumulated offset value.</p> <p>The SCPI query simply returns the value currently showing on the key.</p>
Dependencies	The invalid data indicator turns on when the offset is changed, until the next sweep/measurement completes.
Couplings	The same offset is used in the Gate Source selection of the period timer.
Preset	0 s
State Saved	Saved in instrument state
Min	-10.000 s
Max	10.000 s
Default Unit	S
Initial S/W Revision	Prior to A.02.00

### Offset Adjust (Remote Command Only)

This remote command does not work at all like the related front panel keys. This command lets you advance the phase of the frame trigger by the amount you specify.

It does not change the period of the trigger waveform. If the command is sent multiple times, it advances the phase of the frame trigger an additional amount each time it is sent. Negative numbers are permitted.

<b>Remote Command:</b>	:TRIGger[:SEquence]:FRAME:ADJust <time>
Example:	TRIG:FRAM:ADJ 1.2 ms
Notes:	<p>Note also that Offset is used only when the sync source is set to OFF, otherwise delay is used, see section <a href="#">“Trig Delay” on page 1783</a></p> <p>An increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event.</p>

## Trigger

Notes:	<p>The front panel interface (for example, the knob) and the :TRIG:FRAM:OFFS command adjust the accumulated offset, which is shown on the active function display. However, the actual amount sent to the hardware is the delta value, that is, the current offset value minus the previous offset value.</p> <p>When the SCPI command is sent the value shown on the key (and the Active Function, if this happens to be the active function) is updated by increasing it (or decreasing it if the value sent is negative) by the amount specified in the SCPI command.</p> <p>This is a "command only" SCPI command, with no query.</p>
Dependencies:	The invalid data indicator turns on when the offset is changed, until the next sweep/measurement completes.
Couplings:	The same offset is used in the Gate Source selection of the period timer.
Preset:	0 s
State Saved:	Saved in instrument state
Min:	-10.000 s
Max:	10.000 s
Default Unit:	S
Initial S/W Revision:	Prior to A.02.00

### Reset Offset Display

Resets the value of the periodic trigger offset display setting to 0.0 seconds. The current displayed trigger location may include an offset value defined with the **Offset** key. Pressing this key redefines the currently displayed trigger location as the new trigger point that is 0.0 s offset. The **Offset** key can then be used to add offset relative to this new timing.

Key Path	<b>Trigger, Periodic Timer</b>
<b>Remote Command</b>	:TRIGger [:SEQuence] :FRAMe:OFFSet:DISPlay:RESet
Example	TRIG:FRAM:OFFS:DISP:RES
Initial S/W Revision	Prior to A.02.00

### Sync Source

Selects a signal source for you to synchronize your periodic timer trigger to, otherwise you are triggering at some arbitrary location in the frame. Synchronization reduces the precision requirements on the setting of the period.

For convenience you may adjust the level and slope of the selected sync source in a conditional branch setup menu accessed from the Sync Source menu. Note that these settings match those in the **Trigger** and **Gate Source** menus; that is, each trigger source has only one value of level and slope, regardless of which menu it is accessed from.

Key Path	<b>Trigger, Periodic Timer</b>
----------	--------------------------------



<b>Remote Command</b>	:TRIGger[:SEquence]:FRAMe:SYNC EXTernal1 EXTernal2 RFBurst OFF  :TRIGger[:SEquence]:FRAMe:SYNC?
Example	TRIG:FRAM:SYNC EXT2
Dependencies	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTernal2 parameter will generate a “Hardware missing; Not available for this model number” error
Preset	Off  GSM/EDGE: RFBurst
State Saved	Saved in instrument state
Readback	The current setting is read back to this key and it is also Readback to the previous <b>Periodic Timer</b> trigger key.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

## Off

Turns off the sync source for your periodic trigger. With the sync source off, the timing will drift unless the signal source frequency is locked to the analyzer frequency reference.

Key Path	<b>Trigger, Periodic Timer, Sync Source</b>
Example	TRIG:FRAM:SYNC OFF
Readback	Off
Initial S/W Revision	Prior to A.02.00

## External 1

Pressing this key, when it is not selected, selects the external input port that you will use for the periodic trigger synchronization. Pressing this key, when it is already selected, accesses the external 1 sync source setup menu.

Key Path	<b>Trigger, Periodic Timer, Sync Source</b>
Example	TRIG:FRAM:SYNC EXT
Couplings	Same as External 1 trigger source.
Readback	External 1
Initial S/W Revision	Prior to A.02.00

## Trigger Level

Sets the value where the signal at the external 1 trigger input will synchronize with the periodic timer trigger. This same level is used in the Ext1 trigger source in the Trigger menu. See section [“Trigger Level” on page 1767](#) for information on this key and the SCPI command.

## Trigger

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge. This same value is used in the Ext1 trigger source in the Trigger menu. See section “[Trig Slope](#)” on page 1768 for information on this key and the SCPI command

### External 2

Pressing this key, when it is not selected, selects the external input port that you will use for the periodic frame trigger synchronization.

Pressing this key, when it is already selected, accesses the external 2 sync source setup menu.

Key Path	<b>Trigger, Periodic Timer, Sync Source</b>
Example	TRIG:FRAM:SYNC EXT2
Dependencies	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTernal2 parameter will generate a “Hardware missing; Not available for this model number” error
Couplings	Same as External 2 trigger source.
Readback	External 2
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.03.00

### Trigger Level

Sets the value where the signal at the external 2 trigger input will synchronize with the periodic timer trigger. This same level is used in the Ext2 trigger source in the Trigger menu. See section “[Trigger Level](#)” on page 1770 for information on this key and the SCPI command.

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge. This same value is used in the Ext2 trigger source in the Trigger menu. See section “[Trig Slope](#)” on page 1770 for information on this key and the SCPI command

### RF Burst

Pressing the key once selects the RF burst envelope signal to be used for the periodic timer trigger synchronization.

Press the key a second time to access the RF burst sync source setup menu.

Key Path	<b>Trigger, Periodic Timer, Sync Source</b>
Example	TRIG:FRAM:SYNC RFB
Couplings	Same as RF Burst trigger source.
Readback	RF Burst
Initial S/W Revision	Prior to A.02.00

**Trigger Level**

Sets the trigger level to be used for the RF Burst trigger. This same level is used in the RF Burst trigger source in the Trigger menu. See section “[Absolute Trigger Level](#)” on page 1772 for information on this key and the SCPI command.

**Trig Slope**

Controls the RF Burst trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge. This same value is used in the RF Burst trigger source in the Trigger menu. See section “[Trigger Slope](#)” on page 1775 for information on this key and the SCPI command

**Trig Delay**

This setting delays the measurement timing relative to the Periodic Timer.

Key Path	Trigger, Periodic Timer
<b>Remote Command</b>	:TRIGger[:SEquence]:FRAME:DELAy <time> :TRIGger[:SEquence]:FRAME:DELAy? :TRIGger[:SEquence]:FRAME:DELAy:STATe OFF ON 0 1 :TRIGger[:SEquence]:FRAME:DELAy:STATe?
Notes	Note that delay is used when the sync source is not set to OFF. If the sync source is set to OFF, offset is used, see section 5.3.7.2.
Preset	Off, 1.000 us
State Saved	Saved in instrument state
Min	-150 ms
Max	+500 ms
Default Unit	s
Initial S/W Revision	Prior to A.02.00

**Sync Holdoff**

Sync Holdoff specifies the duration that the sync source signal must be kept false before the transition to true to be recognized as the sync timing. The periodic timer phase is aligned when the sync source signal becomes true, after the Holdoff time is satisfied.

A holdoff of 2 ms will work with most WiMAX signals, but there may be cases where the burst off duration is less than 1 ms and this value will need to be changed.

Key Path	Trigger, Periodic Timer
<b>Remote Command</b>	:TRIGger[:SEquence]:FRAME:SYNC:HOLDoff <time> :TRIGger[:SEquence]:FRAME:SYNC:HOLDoff? :TRIGger[:SEquence]:FRAME:SYNC:HOLDoff:STATe OFF ON 0 1 :TRIGger[:SEquence]:FRAME:SYNC:HOLDoff:STATe?

## Trigger

Preset	On, 1.000 ms
State Saved	Saved in instrument state
Min	0 ms
Max	+500 ms
Default Unit	s
Initial S/W Revision	Prior to A.02.00

## LXI Trigger

Pressing this key when it is not selected selects the LXI system as the trigger. Pressing the key when it is already selected accesses the LXI trigger type selection menu, where either LAN Event or Alarm can be chosen. The key is annotated to display which of the two is currently selected.

---

**NOTE** For information about setting up measurements using LXI, refer to the Programmer's Guide located in your analyzer at: C:/Program Files/Agilent/Signal Analysis/Help/Bookfiles/x\_series\_prog.pdf. It is also available by selecting the "Additional Documentation" page of the Help.

---

Key Path	<b>Trigger</b>
Preset	ON
State Saved	Saved in instrument state
Readback	The LXI trigger source that becomes active when this key is selected is displayed. The possible values are "LAN Event" and "Alarm"
Initial S/W Revision	Prior to A.02.00

## LAN Event

Pressing this key when it is not selected selects the LAN event system as the LXI trigger. A new sweep/measurement starts when the pre-configured LAN message arrives if the LXI trigger is selected (see "[LXI Trigger](#)" on page 1784). Pressing this key when it is already selected accesses the LAN trigger setup menu.

---

**NOTE** Pressing this key causes Enabled LXI Alarm Triggers to be ignored, since the Trigger source is changed to LXI LAN Event.

---

Key Path	<b>Trigger, LXI Trigger</b>
Example	TRIG:SOUR LAN ! Swept SA measurement TRIG:<meas>:SOUR LAN ! Measurements other than Swept SA

Preset	ON
State Saved	Saved in instrument state
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision	Prior to A.02.00

### Disable All

Sets the Enable parameter of every member of the LXI LAN Event list to OFF.

Key Path	<b>Trigger, LXI Trigger, LAN Event</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:LAN:DISable:ALL
Example	:TRIG:LXI:LAN:DIS:ALL
Initial S/W Revision	Prior to A.02.00

### LAN Event List

After selecting LAN as the trigger source, the user is presented with a list of LXI Trigger LAN Events to be configured. By default, LAN0-LAN7 are available. Using the TRIG:LXI:LAN:ADD and TRIG:LXI:LAN:REM commands, the size of this list can be changed arbitrarily. Pressing a LAN event branches to that event's setup menu.

Key Path	<b>Trigger, LXI Trigger, LAN Event</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:LAN:LIST?
Example	:TRIG:LXI:LAN:LIST? !Returns the complete list of Trigger LAN Events which is, at minimum: "LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7"
Preset	"LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7"
State Saved	Saved in instrument state
Readback	Displays the value of the LXI Trigger LAN Event parameter (Enabled Disabled).
Initial S/W Revision	Prior to A.02.00

### Detection

Pressing this key accesses the Trigger Detection menu.

Selecting "Rise" causes the instrument to trigger on the receipt of a signal low LAN Event followed by a signal high LAN Event.

Selecting "Fall" caused the instrument to trigger on the receipt of a signal high LAN Event followed by a signal low

## Trigger

LAN Event.

Selecting "High" causes the instrument to trigger on every signal high LAN Event.

Selecting "Low" causes the instrument to trigger on every signal low LAN Event.

Key Path	<b>Trigger, LXI Trigger, LAN Event, &lt;lanEvent&gt;</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:LAN[:SET]:DETEction "LANEVENT", HIGH LOW RISE FALL
Example	:TRIG:LXI:LAN:DET "LAN0",HIGH
Notes	If a non existent LAN event is passed in the lanEvent argument, the command is ignored
Preset	HIGH
State Saved	Saved in instrument state
Range	HIGH   LOW   RISE   FALL
Readback	Currently selected detection type
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Trigger, LXI Trigger, LAN Event, &lt;lanEvent&gt;</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:LAN[:SET]:DETEction? "LANEVENT"
Example	:TRIG:LXI:LAN:DET? "LAN0"?
Notes	If a non existent LAN event is passed in the lanEvent argument, the command is ignored
Preset	HIGH
State Saved	Saved in instrument state
Range	HIGH   LOW   RISE   FALL
Readback	Currently selected detection type
Initial S/W Revision	Prior to A.02.00

## Delay

Sets the amount of delay that should pass between receiving a LXI Trigger LAN Event Trigger and the trigger action. A Delay of 0.0 s indicates that the instrument will trigger as soon as possible after receiving the proper LXI LAN Event.

Key Path	<b>Trigger, LXI Trigger, LAN Event, &lt;lanEvent&gt;</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:LAN[:SET]:DELay "LANEVENT", <time>
Example	:TRIG:LXI:LAN:DEL "LAN0",5S
Preset	0.0 s

State Saved	Saved in instrument state
Range	0.0 – 1.7976931348623157 x 10308 (Max Double)
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Trigger, LXI Trigger, LAN Event, &lt;lanEvent&gt;</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:LAN[:SET]:DELay? "lanEvent"
Example	:TRIG:LXI:LAN:DEL? "LAN0"
Preset	0.0 s
State Saved	Saved in instrument state
Range	0.0 – 1.7976931348623157 x 10308 (Max Double)
Initial S/W Revision	Prior to A.02.00

#### Enabled/Disabled

When the Trigger Source is set to LXI Trigger LAN Event, the instrument triggers upon receiving any event from the LXI Trigger LAN Event List whose Enabled parameter is set to ON.

If the Enabled parameter is set to OFF, the event is ignored.

Key Path	<b>Trigger, LXI Trigger, LAN Event, &lt;lanEvent&gt;</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:LAN[:SET]:ENABled "LANEVENT", ON OFF 1 0
Example	:TRIG:LXI:LAN:ENAB "LAN0",ON
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON 0 1
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Trigger, LXI Trigger, LAN Event, &lt;lanEvent&gt;</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:LAN[:SET]:ENABled? "LANEVENT"
Example	:TRIG:LXI:LAN:ENAB? "LAN0"
Preset	OFF
State Saved	Saved in instrument state
Range	OFF ON 0 1
Initial S/W Revision	Prior to A.02.00

## Trigger

### Add (Remote Command Only)

Adds the provided string to the list of possible LAN events to trigger on. As new LAN events are added, keys are generated in the LAN source menu. New key panels are generated as the number of possible LAN events increases past a multiple of six, and the "More" keys are updated to reflect the new number of key panels in the LAN source menu.

<b>Remote Command:</b>	:TRIGger [ :SEquence ] :LXI :LAN :ADD "LANEVENT"
Example:	:TRIG:LXI:LAN:ADD "LANEVENT"
Notes:	The maximum length of the string is 16 characters. Longer strings are concatenated to 16 characters and added. No event is added if the LAN Event already exists. This command modifies the LXI Trigger LAN Event List Parameter.
State Saved:	Saved in instrument state
Range:	Uppercase, Lowercase, Numeric, Symbol except for comma or semicolon
Initial S/W Revision:	Prior to A.02.00

### Remove (Remote Command Only)

Removes the provided string from the list of possible LAN events to trigger on. As LAN events are removed, keys are removed from the LAN source menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the "More" keys are updated to reflect the new number of key panels in the LAN source menu. It is not possible to remove the "LAN0" – "LAN7" events.

<b>Remote Command:</b>	:TRIGger [ :SEquence ] :LXI :LAN :REMOve [ :EVENT ] "LANEVENT"
Example:	:TRIG:LXI:LAN:REM "LANEVENT"
Notes:	The maximum length of the string is 16 characters. Longer strings are concatenated and the corresponding LAN Event is removed. Nothing happens if the LAN event does not exist. This command modifies the LXI Trigger LAN Event List Parameter.
State Saved:	No
Range:	Uppercase, Lowercase, Numeric, Symbol except for comma or semicolon
Initial S/W Revision:	Prior to A.02.00

### Remove All (Remote Command Only)

Clears the list of customer added LAN events that can cause the instrument to trigger. Events LAN0-LAN7 are not affected. As LAN events are removed, keys are removed from the LAN source menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the "More" keys are updated to reflect the new number of key panels in the LAN source menu.



It is not possible to remove the "LAN0" – "LAN7" events.

<b>Remote Command:</b>	:TRIGger [:SEquence] :LXI:LAN:REMOve:ALL
Example:	:TRIG:LXI:LAN:REM:ALL
Notes:	This command modifies the LXI Trigger LAN Event List Parameter.
Initial S/W Revision:	Prior to A.02.00

#### Event Filter (Remote Command Only)

Only LXI Trigger LAN Events coming from hosts matching the filter string are processed. There is no front panel access to this command

The syntax for specifying a filter is as follows:

Filter == ( [host[:port]] | [ALL[:port]] ) [,Filter]

Specifying an empty string means that LXI trigger packets are accepted as a Trigger from any port on any host on the network via either TCP or UDP.

Specifying only the port means that any host communicating over that port can send events.

Specifying ALL indicates that UDP multicast packets are accepted if they are directed to the Internet Assigned Numbers Authority (IANA) assigned multicast address on the IANA assigned default port, or the designated port if specified.

Examples:

"192.168.0.1:23"

"agilent.com, soco.agilent.com"

"agilent.com:80, 192.168.0.1"

- The TRIGger:LXI:LAN:FILTer command applies only to trigger events and will have no effect on state events, even when both are tied to the same event name (like "LAN0"). Similarly, the LXI:EVENT:INPut:LAN:FILTer command applies only to state events and will have no effect on trigger events.

<b>Remote Command:</b>	:TRIGger [:SEquence] :LXI:LAN[:SET] :FILTer "LANEVENT", "filterString" :TRIGger [:SEquence] :LXI:LAN[:SET] :FILTer?
Example:	:TRIG:LXI:LAN:FILT "LAN0","agilent.com" :TRIG:LXI:LAN:FILT?
Notes:	The maximum length of the string is 45 characters. Nothing happens if the LAN event does not exist.
Preset:	"" (empty string)
State Saved:	Saved in instrument state
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

## Trigger

### Count (Remote Command Only)

Returns the number of items in the LXI Trigger LAN Event List.

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:LAN:COUNT?
Example:	:TRIG:LXI:LAN:COUN?
Initial S/W Revision:	Prior to A.02.00

### Identifier (Remote Command Only)

Sets the string that is expected to arrive over the LAN for a given Trigger LAN Event to occur. The Identifier is variable to allow for easier system debugging.

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:LAN[:SET]:IDENTifier "LANEVENT", "identifier"  :TRIGger[:SEquence]:LXI:LAN[:SET]:IDENTifier? "LANEVENT"
Example:	:TRIG:LXI:LAN:IDEN "LAN0","debugstring"
Notes:	The maximum length of the string is 16 characters. Nothing happens if the LAN event does not exist. The default value is that the identifier is equivalent to the name of the LAN Event.
State Saved:	Saved in instrument state
Range:	Uppercase, Lowercase, Numeric, Symbol
Initial S/W Revision:	Prior to A.02.00

### Configure (Remote Command Only)

Allows the configuration of some of the above parameters from a single SCPI command.

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:LAN[:SET]:CONFigure "lanEvent", <enable>, <detection>, <delay>,<filter>,<identifier>
Example:	:TRIG:LXI:LAN:CONF "LAN0",1,FALL,0.0,"ALL","debugIdentifier"
Initial S/W Revision:	Prior to A.02.00

### Alarm

Pressing this key when it is not selected selects the alarm system as the LXI trigger. A new sweep/measurement starts when the configured IEEE 1588 time occurs if the LXI trigger is selected as the active trigger (see [“LXI Trigger” on page 1784](#)). Pressing this key when it is already selected accesses the alarm source selection menu.

Key Path	<b>Trigger, LXI Trigger</b>
Example	TRIG:ACP:SOUR ALAR

Preset	ON
State Saved	Saved in instrument state
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision	Prior to A.02.00

### Disable All

This key causes all Alarms in the trigger alarm list to go into the disabled state.

(Enabled = OFF)

Key Path	<b>Trigger, LXI Trigger, Alarm</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:ALARm:DISable:ALL
Example	:TRIG:LXI:ALAR:DIS:ALL
Initial S/W Revision	Prior to A.02.00

### Alarm List

After selecting Alarm as the trigger source, the user is presented with a list of possible alarms. Pressing an alarm (for example, "ALARM0") branches to the alarm setup menu.

Key Path	<b>Trigger, LXI Trigger, Alarm</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:ALARm:LIST?
Example	:TRIG:LXI:ALAR:LIST? Returns the complete list of Alarm events which is: "ALARM0"
Preset	"ALARM0"
State Saved	Saved in instrument state
Readback	Displays the value of the LXI Trigger Alarm Enabled parameter (Enabled Disabled).
Initial S/W Revision	Prior to A.02.00

### Date/Time

Absolute alarm time sets an alarm for one specific time using the date and time of day (for example, 12/14/2007 at 11:45:15.3456). The Date and Time are represented in the instrument's local time. This is the only way to set an alarm from the front panel.

Epoch time is another type of absolute alarm time. A specific time is identified by the number of seconds it occurs after January 1, 1970 00:00:00 in International Atomic Time (TAI). Epoch Time is time zone invariant. Epoch time

## Trigger

is only set via remote; see “[Epoch Time Value \(Remote Command Only\)](#)” on page 1794.

The date and time the alarm is scheduled to go off is noted on the branch softkey.

---

**NOTE** The Epoch Time Second and Epoch Time Fraction are the ultimate source of alarm information. The Absolute Time and Date may be changed from the front panel without being applied. When querying the Absolute Time and Date parameters from SCPI, if the Absolute Time and Date have not been applied (and therefore do not match the Epoch Time Second and Epoch Time Fraction), the string "(epoch time not set)" is added to the return value.

---

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;</b>
Readback	Annotated with the date and time the alarm is scheduled to go off.
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;,Time</b>
<b>Remote Command</b>	:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:ABSolu te "alarmEvent", "date", "time"
Example	:TRIG:LXI:ALAR:TIME:ABS "ALARM0","2007/4/6", "15:45:02.123456"
Notes	"date" is a representation of the date the alarm should occur in the form of "YYYY/MM/DD" where: YYYY is the four digit representation of year. (for example, 2007) MM is the two digit representation of month. (for example. 01 to 12) DD is the two digit representation of day. (for example, 01 to 28, 29, 30, or 31 depending on the month and year) "time" is a representation of the time of day the alarm should occur in the form of "HH:MM:SS.SSSSSS" where: HH is the two digit representation of the hour in 24 hour format MM is the two digit representation of minute SS.SSSSSS is a real representing seconds (for example 02.123456)
Preset	Current date at initialization at 00:00:00.000000
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;,Time</b>
<b>Remote Command</b>	:TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:ABSolu te? "alarmEvent"

Example	:TRIG:LXI:ALAR:TIME:ABS? "ALARM0"  This query returns data using the following format "YYYY/MM/DD HH:MM:SS.SSSSSS" If the Absolute time has been changed from the front panel, but has not been applied, the return value is of the form "YYYY/MM/DD HH:MM:SS.SSSSSS (epoch time not set)".
Notes	<date> is a representation of the date the alarm should occur in the form of YYYY/MM/DD where: YYYY is the four digit representation of year. (for example, 2007) MM is the two digit representation of month. (for example. 01 to 12) DD is the two digit representation of day. (for example, 01 to 28, 29, 30, or 31 depending on the month and year)  <time> is a representation of the time of day the alarm should occur in the form of HH:MM:SS.SSSSSS where: HH is the two digit representation of the hour in 24 hour format MM is the two digit representation of minute SS.SSSSSS is a real representing seconds (for example 02.123456)
Preset	Current date at initialization at 00:00:00.000000
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

**Date**

The date the alarm should occur. All absolute alarm time parameters are set using the same SCPI command; however they each have their own front panel control.

When setting alarm values from the front panel, the new alarm time is not registered with the alarm system until the "Set" key is pressed.

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;,Time</b>
Preset	Current date
State Saved	Saved in instrument state
Range	current date – 214748/12/31. Values representing a time in the past result in an error.
Initial S/W Revision	Prior to A.02.00

**Time**

The time of the day, in the instrument's local time (this takes into account time zones and daylight savings time), the alarm should occur. This parameter is based on a 24 hour clock.

All absolute alarm time parameters are set using the same SCPI command; however they each have their own front panel control.

When setting alarm values from the front panel, the new alarm time is not registered with the alarm system until the

## Trigger

"Set" key is pressed.

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;,Time</b>
Notes	<p>Uses a 24 hour clock.</p> <p>Values representing a time in the past result in an error.</p> <p>Only valid time values are accepted.</p> <p>The &lt;second&gt; field accepts a decimal number, and is valid to the microsecond position.</p> <p>The &lt;year&gt;, &lt;month&gt;, &lt;hour&gt;, and &lt;minute&gt; fields all accept integers.</p>
Preset	00:00:00.000000
State Saved	Saved in instrument state
Range	00:00:00.000000 – 23:59:59.999999
Initial S/W Revision	Prior to A.02.00

### Apply

Causes the Absolute Alarm Time values to be converted into an Epoch time (see [“Epoch Time Value \(Remote Command Only\)” on page 1794](#)), compared to the current time, and sent to the Alarm Trigger subsystem. This key can only be pressed when the epoch time and the absolute time are out of synch.

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;,Time</b>
Notes	Alarm times are settable to microsecond resolution.
Initial S/W Revision	Prior to A.02.00

### Epoch Time Value (Remote Command Only)

Sets the LXI Alarm Time. This represents the number of seconds after January 1, 1970 00:00:00, in TAI time, that the alarm should go off.

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME[:VALue] "alarmEvent", <seconds>, <fractionalSeconds>
Example:	:TRIG:LXI:ALAR:TIME "ALARM0",123456.0 S, 0.123456
Notes:	Values representing a time in the past result in an error.
Preset:	<p>Seconds: The number of whole seconds between Jan 1, 1970 at 00:00:00 (in TAI time) and the current date at initialization at 00:00:00 (in TAI time)</p> <p>FractionalSeconds: 0</p>
State Saved:	Saved in instrument state
Range:	<p>Seconds: Epoch time of current date at 00:00:00 (in TAI time) – 253402300800 + number of seconds local time zone offset from UTC</p> <p>FractionalSeconds: 0.0 – 0.999999</p>
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME[:VALue]?
Example:	:TRIG:LXI:ALAR:TIME?
Notes:	Values representing a time in the past result in an error.
Preset:	Seconds: The number of whole seconds between Jan 1, 1970 at 00:00:00 (in TAI time) and the current date at initialization at 00:00:00 (in TAI time) FractionalSeconds: 0
State Saved:	Saved in instrument state
Range:	Seconds: Epoch time of current date at 00:00:00 (in TAI time) – 253402300800 + number of seconds local time zone offset from UTC FractionalSeconds: 0.0 – 0.999999
Initial S/W Revision:	Prior to A.02.00

### Epoch Time Seconds (Remote Command Only)

Sets the seconds portion of the LXI Alarm time. This represents the number of seconds after January 1, 1970 00:00:00 (in TAI time) that the alarm should go off.

Values must be in the form of whole seconds; decimal values result in an error.

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME:SEConds "alarmEvent", <seconds>
Example:	:TRIG:LXI:ALAR:TIME:SEC "ALARM0",123456.0 S
Notes:	Values representing a time in the past result in an error. Values containing a decimal portion result in an error.
Preset:	The number of whole seconds between Jan 1, 1970 at 00:00:00 (in TAI time) and the current date at initialization at 00:00:00 (in TAI time)
State Saved:	Saved in instrument state
Range:	Epoch time of current date at 00:00:00 (in TAI time) – 253402300800 + number of seconds local time zone offset from UTC
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME:SEConds? "alarmEvent"
Example:	:TRIG:LXI:ALAR:TIME:SEC "ALARM0"?
Notes:	Values representing a time in the past result in an error. Values containing a decimal portion result in an error.
Preset:	The number of seconds between Jan 1, 1970 at 00:00:00 (in TAI time) and the current date at initialization at 00:00:00 (in TAI time)
State Saved:	Saved in instrument state

## Trigger

Range:	Epoch time of current date at 00:00:00 (in TAI time) – 253402300800 + number of seconds local time zone offset from UTC
Initial S/W Revision:	Prior to A.02.00

### Epoch Time Fraction (Remote Command Only)

Sets the sub-second value of the Epoch time.

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME[:VALue]:FRACtion "alarmEvent", <fractionalSeconds>
Example:	:TRIG:LXI:ALAR:TIME:FRAC "ALARM0",0.123456 S
Notes:	Values representing a time in the past result in an error.
Preset:	0
State Saved:	Saved in instrument state
Range:	0.0 – 0.999999
Initial S/W Revision:	Prior to A.02.00

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME[:VALue]:FRACtion? "alarmEvent"
Example:	:TRIG:LXI:ALAR:TIME:FRAC "ALARM0"?
Notes:	Values representing a time in the past result in an error.
Preset:	0
State Saved:	Saved in instrument state
Min:	0.0
Max:	0.999999
Initial S/W Revision:	Prior to A.02.00

### Relative Time (Remote Command Only)

Sets the values of Epoch Time Seconds and Epoch Time Fraction by adding an offset to the time when the command is issued. For example, if the Relative Time command is issued with an argument of 60s, the alarm will occur 1 minute in the future.

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME[:VALue]:RELative "alarmEvent", <seconds>
Example:	:TRIG:LXI:ALAR:TIME:REL "ALARM0",60.0s
Range:	0.0 – 1.7976931348623157 x 10308 (Max Double)
Initial S/W Revision:	Prior to A.02.00



<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME[:VALue]:RELati ve? "alarmEvent"
Example:	:TRIG:LXI:ALAR:TIME:REL "ALARM0"?
Range:	0.0 – 1.7976931348623157 x 10308 (Max Double)
Initial S/W Revision:	Prior to A.02.00

### Period

Sets the amount of time that should elapse between alarms in a repeating alarm trigger.

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:PERiod "alarmEvent", <seconds>
Example	:TRIG:LXI:ALAR:PER "ALARM0",1.2345 s
Notes	A period of 0.0s effectively causes the trigger to occur only once, since all repetitions are fired simultaneously
Preset	0.0 s
State Saved	Saved in instrument state
Range	0.0 – 1.7976931348623157 x 10308 (Max Double)
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:PERiod? "alarmEvent"
Example	:TRIG:LXI:ALAR:PER "ALARM0"?
Notes	A period of 0.0s effectively causes the trigger to occur only once, since all repetitions are fired simultaneously
Preset	0.0 s
State Saved	Saved in instrument state
Range	0.0 – 1.7976931348623157 x 10308 (Max Double)
Initial S/W Revision	Prior to A.02.00

### Repetitions

Sets the number of times a repeating alarm should fire once the initial alarm time has occurred.

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:REPeat "alarmEvent", <repetitions>

## Trigger

Example	:TRIG:LXI:ALAR:REP "ALARM0",10
Notes	A repetition value of 0 means infinite repetitions (zero is a special case, triggers at the given period indefinitely) A repetition value of 1 means 1 trigger only, not the initial trigger + 1 repeat
Preset	1
State Saved	Saved in instrument state
Range	1 – 2,147,483,647
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;</b>
<b>Remote Command</b>	:TRIGger [ :SEQuence ] :LXI :ALARm [ :SET ] :REPeat? "alarmEvent "
Example	:TRIG:LXI:ALAR:REP "ALARM0",10
Preset	1
State Saved	Saved in instrument state
Min	1
Max	2,147,483,647
Initial S/W Revision	Prior to A.02.00

### Enabled

If Enabled is set to ON and the trigger source is set to ALARm, this alarm causes the instrument to trigger.

If Enabled is set to OFF, this alarm is ignored

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;</b>
<b>Remote Command</b>	:TRIGger [ :SEQuence ] :LXI :ALARm [ :SET ] :ENABled "alarmEvent ", ON OFF  1 0
Example	:TRIG:LXI:ALAR:ENAB "ALARM0",ON
Preset	OFF
State Saved	Saved in instrument state
Range	1 0
Initial S/W Revision	Prior to A.02.00

Key Path	<b>Trigger, LXI Trigger, Alarm, &lt;alarmEvent&gt;</b>
<b>Remote Command</b>	:TRIGger [ :SEQuence ] :LXI :ALARm [ :SET ] :ENABled? "alarmEvent "

Example	:TRIG:LXI:ALAR:ENAB "ALARM0"?
Preset	OFF
State Saved	Saved in instrument state
Range	1 0
Initial S/W Revision	Prior to A.02.00

### Configure (Remote Command Only)

Allows the configuration of some of the above parameters from a single SCPI command.

<b>Remote Command:</b>	:TRIGger[:SEquence]:LXI:ALARm[:SET]:CONFigure "alarmEvent", <enable>, <epochSeconds>, <epochFraction>, <period>, <repeat>
Example:	:TRIG:LXI:ALAR:CONF "ALARM0",1,1000000.0,0.123456,1,2,3
Initial S/W Revision:	Prior to A.02.00

### Count (Remote Command Only)

Returns the number of alarms in the LXI Trigger Alarm List.

<b>Remote Command:</b>	:TRIGger1 TRIGger[:SEquence]:LXI:ALARm:COUNT?
Example:	:TRIG:LXI:ALAR:COUN?
Initial S/W Revision:	Prior to A.02.00

## Baseband I/Q

Pressing this key when it is not selected selects Baseband I/Q as the trigger. Pressing the key when it is already selected accesses the Baseband I/Q trigger type selection menu. The key is annotated to display which of the Baseband I/Q trigger types is currently selected.

Key Path	<b>Trigger</b>
State Saved	Saved in instrument state
Readback	The Baseband I/Q trigger source that becomes active when this key is selected is displayed. The possible values are "I/Q Mag", "I", "Q", "Input I", "Input Q", and "Aux I/Q Mag".
Initial S/W Revision	Prior to A.02.00

### I/Q Mag

Pressing this key, when it is not selected, selects the I/Q magnitude signal as the trigger. The I/Q Magnitude trigger condition is met when the I/Q magnitude crosses the I/Q magnitude trigger level. The

## Trigger

magnitude is measured at the output of the main I/Q digital receiver.

Key Path	<b>Trigger, Baseband I/Q</b>
Example	TRIG:<meas>:SOUR IQM
Readback Text	I/Q Mag
Initial S/W Revision	Prior to A.02.00

### Trigger Level

Sets a level for the I/Q magnitude trigger. When the signal crosses this level, with the chosen slope, the trigger occurs. If the specific Measurement displays the signal from the chosen sampling point a green line will be displayed to indicate the trigger level.

Key Path	<b>Trigger, Baseband I/Q, I/Q Mag</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:IQMag:LEVel <ampl > :TRIGger[:SEquence]:IQMag:LEVel?
Example	TRIG:IQM:LEV -30 dBm
Notes	The I/Q reference impedance is used for converting between power and voltage.
Preset	-25 dBm
State Saved	Saved in instrument state
Range	-200 dBm to 100 dBm
Readback Text	<level> dBm
Initial S/W Revision	Prior to A.02.00

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	<b>Trigger, Baseband I/Q, I/Q Mag</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:IQMag:SLOPe POSitive   NEGative :TRIGger[:SEquence]:IQMag:SLOPe?
Example	TRIG:IQM:SLOP POS
Preset	POSitive
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

## Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path	Trigger, Baseband I/Q, I/Q Mag
<b>Remote Command</b>	:TRIGger[:SEquence]:IQMag:DELay <time> :TRIGger[:SEquence]:IQMag:DELay? :TRIGger[:SEquence]:IQMag:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:IQMag:DELay:STATe?
Example	TRIG:IQM:DEL 10 ms TRIG:IQM:DEL:STAT ON
Preset	1 us OFF
State Saved	Saved in instrument state
Range	-2.5 s to +10 s
Initial S/W Revision	Prior to A.02.00

## I (Demodulated)

Pressing this key, when it is not selected, selects the main receiver's output I voltage as the trigger. The I (Demodulated) trigger condition is met when the I voltage crosses the I voltage trigger level.

Key Path	Trigger, Baseband I/Q
Example	TRIG:<meas>:SOUR IDEM
Readback Text	I
Initial S/W Revision	Prior to A.02.00

## Trigger Level

Sets a level for the I (Demodulated) trigger. When the signal crosses this level, with the chosen slope, the trigger occurs. If the specific Measurement displays the signal from the chosen sampling point a green line will be displayed to indicate the trigger level.

Key Path	Trigger, Baseband I/Q, I (Demodulated)
<b>Remote Command</b>	:TRIGger[:SEquence]:IDEMod:LEVel <voltage> :TRIGger[:SEquence]:IDEMod:LEVel?
Example	TRIG:IDEM:LEV 0.5 V
Preset	0.25 V
State Saved	Saved in instrument state

## Trigger

Range	-1 to 1 V
Readback Text	0.1 of displayed unit (V, mV, etc.)
Initial S/W Revision	Prior to A.02.00

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	<b>Trigger, Baseband I/Q, I (Demodulated)</b>
Remote Command	:TRIGger[:SEquence]:IDEMod:SLOPe POSitive   NEGative :TRIGger[:SEquence]:IDEMod:SLOPe?
Example	TRIG:IDEM:SLOP POS
Preset	POSitive
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

### Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path	<b>Trigger, Baseband I/Q, I (Demodulated)</b>
Remote Command	:TRIGger[:SEquence]:IDEMod:DELay <time> :TRIGger[:SEquence]:IDEMod:DELay? :TRIGger[:SEquence]:IDEMod:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:IDEMod:DELay:STATe?
Example	TRIG:IDEM:DEL 10 ms TRIG:IDEM:DEL:STAT ON
Preset	1 us OFF
State Saved	Saved in instrument state
Range	-2.5 s to +10 s
Initial S/W Revision	Prior to A.02.00

### Q (Demodulated)

Pressing this key, when it is not selected, selects the main receiver's output Q voltage as the trigger. The

Q (Demodulated) trigger condition is met when the Q voltage crosses the Q voltage trigger level.

Key Path	<b>Trigger, Baseband I/Q</b>
Example	TRIG:<meas>:SOUR QDEM
Readback Text	Q
Initial S/W Revision	Prior to A.02.00

### Trigger Level

Sets a level for the Q (Demodulated) trigger. When the signal crosses this level, with the chosen slope, the trigger occurs. If the specific Measurement displays the signal from the chosen sampling point a green line will be displayed to indicate the trigger level.

Key Path	<b>Trigger, Baseband I/Q, Q (Demodulated)</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:QDEMod:LEVel <voltage> :TRIGger[:SEquence]:QDEMod:LEVel?
Example	TRIG:QDEM:LEV 0.5 V
Preset	0.25 V
State Saved	Saved in instrument state
Range	-1 to 1 V
Readback Text	0.1 of displayed unit (V, mV, etc.)
Initial S/W Revision	Prior to A.02.00

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	<b>Trigger, Baseband I/Q, Q (Demodulated)</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:QDEMod:SLOPe POSitive   NEGative :TRIGger[:SEquence]:QDEMod:SLOPe?
Example	TRIG:QDEM:SLOP POS
Preset	POSitive
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

### Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger

## Trigger

criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path	Trigger, Baseband I/Q, Q (Demodulated)
Remote Command	:TRIGger[:SEquence]:QDEMod:DELay <time> :TRIGger[:SEquence]:QDEMod:DELay? :TRIGger[:SEquence]:QDEMod:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:QDEMod:DELay:STATe?
Example	TRIG:QDEM:DEL 10 ms TRIG:QDEM:DEL:STAT ON
Preset	1 us OFF
State Saved	Saved in instrument state
Range	-2.5 s to +10 s
Initial S/W Revision	Prior to A.02.00

## Input I

Pressing this key, when it is not selected, selects the I channel's ADC voltage as the trigger. The Input I trigger condition is met when the voltage crosses the trigger level.

Key Path	Trigger, Baseband I/Q
Example	TRIG:<meas>:SOUR IINP
Readback Text	Input I
Initial S/W Revision	Prior to A.02.00

## Trigger Level

Sets a level for the Input I trigger. When the signal crosses this level, with the chosen slope, the trigger occurs.

Key Path	Trigger, Baseband I/Q, Input I
Remote Command	:TRIGger[:SEquence]:IINPut:LEVel <voltage> :TRIGger[:SEquence]:IINPut:LEVel?
Example	TRIG:IINP:LEV 0.5 V
Preset	0.25 V
State Saved	Saved in instrument state
Range	-1 to 1 V
Readback Text	0.1 of displayed unit (V, mV, etc.)



Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	<b>Trigger, Baseband I/Q, Input I</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:IINPut:SLOPe POSitive   NEGative :TRIGger[:SEquence]:IINPut:SLOPe?
Example	TRIG:IINP:SLOP POS
Preset	POSitive
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

### Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path	<b>Trigger, Baseband I/Q, Input I</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:IINPut:DELay <time> :TRIGger[:SEquence]:IINPut:DELay? :TRIGger[:SEquence]:IINPut:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:IINPut:DELay:STATe?
Example	TRIG:IINP:DEL 10 ms TRIG:IINP:DEL:STAT ON
Preset	1 us OFF
State Saved	Saved in instrument state
Range	-2.5 s to +10 s
Initial S/W Revision	Prior to A.02.00

### Input Q

Pressing this key, when it is not selected, selects the Q channel's ADC voltage as the trigger. The Input Q trigger condition is met when the voltage crosses the trigger level.

Key Path	<b>Trigger, Baseband I/Q</b>
Example	TRIG:<meas>:SOUR QINP

## Trigger

Readback Text	Input Q
Initial S/W Revision	Prior to A.02.00

### Trigger Level

Sets a level for the Input Q trigger. When the signal crosses this level, with the chosen slope, the trigger occurs.

Key Path	<b>Trigger, Baseband I/Q, Input Q</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:QINPut:LEVel <voltage> :TRIGger[:SEquence]:QINPut:LEVel?
Example	TRIG:QINP:LEV 0.5 V
Preset	0.25 V
State Saved	Saved in instrument state
Range	-1 to 1 V
Readback Text	0.1 of displayed unit (V, mV, etc.)
Initial S/W Revision	Prior to A.02.00

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	<b>Trigger, Baseband I/Q, Input Q</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:QINPut:SLOPe POSitive   NEGative :TRIGger[:SEquence]:QINPut:SLOPe?
Example	TRIG:QINP:SLOP POS
Preset	POSitive
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

### Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path	<b>Trigger, Baseband I/Q, Input Q</b>
----------	---------------------------------------

<b>Remote Command</b>	:TRIGger[:SEquence]:QINPut:DELay <time> :TRIGger[:SEquence]:QINPut:DELay? :TRIGger[:SEquence]:QINPut:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:QINPut:DELay:STATe?
Example	TRIG:QINP:DEL 10 ms TRIG:QINP:DEL:STAT ON
Preset	1 us OFF
State Saved	Saved in instrument state
Range	-2.5 s to +10 s
Initial S/W Revision	Prior to A.02.00

### Auxiliary Channel I/Q Mag

Pressing this key, when it is not selected, selects the Auxiliary Channel I/Q magnitude signal as the trigger. The Auxiliary Channel I/Q Magnitude trigger condition is met when the auxiliary receiver's I/Q magnitude output crosses the Auxiliary I/Q magnitude trigger level.

Key Path	<b>Trigger, Baseband I/Q</b>
Example	TRIG:<meas>:SOUR AIQM
Readback Text	Aux I/Q Mag
Initial S/W Revision	Prior to A.02.00

### Trigger Level

Sets a level for the I/Q magnitude trigger. When the signal crosses this level, with the chosen slope, the trigger occurs.

Key Path	<b>Trigger, Baseband I/Q, Aux Channel I/Q Mag</b>
<b>Remote Command</b>	:TRIGger[:SEquence]:AIQMag:LEVel <ampl > :TRIGger[:SEquence]:AIQMag:LEVel?
Example	TRIG:AIQM:LEV -30 dBm
Notes	The I/Q reference impedance is used for converting between power and voltage.
Preset	-25 dBm
State Saved	Saved in instrument state
Range	-200 dBm to 100 dBm
Readback Text	<level> dBm

## Trigger

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path	<b>Trigger, Baseband I/Q, Aux Channel I/Q Mag</b>
Remote Command	:TRIGger[:SEquence]:AIQMag:SLOPe POSitive   NEGative :TRIGger[:SEquence]:AIQMag:SLOPe?
Example	TRIG:AIQM:SLOP POS
Preset	POSitive
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00

### Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path	<b>Trigger, Baseband I/Q, Aux Channel I/Q Mag</b>
Remote Command	:TRIGger[:SEquence]:AIQMag:DELay <time> :TRIGger[:SEquence]:AIQMag:DELay? :TRIGger[:SEquence]:AIQMag:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:AIQMag:DELay:STATe?
Example	TRIG:AIQM:DEL 10 ms TRIG:AIQM:DEL:STAT ON
Preset	1 us OFF
State Saved	Saved in instrument state
Range	-2.5 s to +10 s
Initial S/W Revision	Prior to A.02.00

### Trigger Center Frequency

This key sets the center frequency to be used by the auxiliary receiver.

Key Path	<b>Trigger, Baseband I/Q, Aux Channel I/Q Mag</b>
Remote Command	:TRIGger[:SEquence]:AIQMag:CENTer <freq> :TRIGger[:SEquence]:AIQMag:CENTer?

Example	:TRIG:AIQM:CENT 10 MHz
Notes	Trigger CF + 1/2 Trigger BW < Max Trigger CF – 1/2 Trigger BW > Min
Preset	0 Hz
State Saved	Saved in instrument state
Range	–40 MHz to 40 MHz
Initial S/W Revision	Prior to A.02.00

### Trigger Bandwidth

This key sets the information bandwidth used by the auxiliary receiver for the Auxiliary Channel I/Q Magnitude trigger.

Key Path	<b>Trigger, Baseband I/Q, Aux Channel I/Q Mag</b>
<b>Remote Command</b>	:TRIGger [:SEquence] :AIQMag: BANDwidth <freq> :TRIGger [:SEquence] :AIQMag: BANDwidth?
Example	:TRIG:AIQM:BAND 8 MHz
Notes	The combined sample rate for the main and auxiliary receivers cannot exceed 100 MSa/sec. The bandwidth available to the Trigger BW is limited to what is available after the main receiver's bandwidth (Info BW, sometimes pre-FFT BW) is set. Because of this limitation, the Max is not always achievable.  The combination of Trigger Center Freq and Trigger BW is also limited: Trigger CF + 1/2 Trigger BW < Max Trigger CF – 1/2 Trigger BW > Min
Preset	Bandwidth option dependent: No Opt: 10 MHz Opt B25: 25 MHz Opt S40: 40 MHz
State Saved	Saved in instrument state
Range	10 Hz to Maximum
Initial S/W Revision	Prior to A.02.00

### Auto/Holdoff

Opens up a menu that lets you adjust Auto Trigger and Trigger Holdoff parameters

Key Path	<b>Trigger</b>
----------	----------------

## Trigger

Readback line	<p>Displays a summary of the Auto Trig and Holdoff settings, in square brackets</p> <p>First line: Auto Off or Auto On</p> <p>Second Line: "Hldf" followed by:</p> <ul style="list-style-type: none"> <li>• If Holdoff is Off, readback Off</li> <li>• If Holdoff On and Type = Normal, readback value</li> <li>• If Holdoff On and Type = Above, readback value followed by AL</li> <li>• If Holdoff On and Type = Below, readback value followed by BL</li> <li>• If Holdoff Type selection is not supported by the current measurement, Holdoff Type is always Normal</li> </ul>
Initial S/W Revision	A.02.00

### Auto Trig

Sets the time that the analyzer will wait for the trigger conditions to be met. If they are not met after that much time, then the analyzer is triggered anyway.

Key Path	Trigger, Auto/Holdoff
Remote Command	<pre>:TRIGger[:SEquence]:ATRigger &lt;time&gt; :TRIGger[:SEquence]:ATRigger? :TRIGger[:SEquence]:ATRigger:STATe OFF ON 0 1 :TRIGger[:SEquence]:ATRigger:STATe?</pre>
Example	<pre>TRIG:ATR:STAT ON TRIG:ATR 100 ms</pre>
Notes	The "time that the analyzer will wait" starts when the analyzer is ready for a trigger, which may be hundreds of ms after the data acquisition for a sweep is done. The "time" ends when the trigger condition is satisfied, not when the delay ends.
Preset	Off, 100 ms
State Saved	Saved in instrument state
Min	1 ms
Max	100 s
Default Unit	s
Initial S/W Revision	Prior to A.02.00

### Trig Holdoff

Sets the holdoff time between triggers. When the trigger condition is satisfied, the trigger occurs, the delay begins, and the holdoff time begins. New trigger conditions will be ignored until the holdoff time

expires. For a free-running trigger, the holdoff value is the minimum time between triggers.

Key Path	Trigger, Auto/Holdoff
<b>Remote Command</b>	:TRIGger[:SEquence]:HOLDoff <time> :TRIGger[:SEquence]:HOLDoff? :TRIGger[:SEquence]:HOLDoff:STATe OFF ON 0 1 :TRIGger[:SEquence]:HOLDoff:STATe?
Example	TRIG:HOLD:STAT ON TRIG:HOLD 100 ms
Preset	Off, 100 ms
State Saved	Saved in instrument state
Min	0 s
Max	0.5 s
Default Unit	s
Initial S/W Revision	Prior to A.02.00

### Holdoff Type

Lets you set the Trigger Holdoff Type.

---

**NOTE** Holdoff Type is not supported by all measurements. If the current measurement does not support it, this key will be blank and the Holdoff Type will be Normal. If the Holdoff Type SCPI is sent while in such a measurement, the SCPI will be accepted and the setting remembered, but it will have no effect until a measurement is in force that supports Holdoff Type.

---

### Trigger Holdoff Type functionality:

#### NORMAL

This is the “oscilloscope” type of trigger holdoff, and is the setting when the Holdoff Type key does not appear. In this type of holdoff, no new trigger will be accepted until the holdoff interval has expired after the previous trigger.

#### ABOVE

If the trigger slope is positive, a trigger event is generated only if the signal characteristic of interest crosses the trigger threshold (with positive slope) and then remains above the threshold for at least the holdoff time. For negative slope, the trigger event is generated if the signal characteristic crosses the threshold (with negative slope) after having been above the threshold for at least the holdoff time. In either case, the trigger event is associated with the time the level was crossed.

#### BELow

If the trigger slope is positive, a trigger event is generated only if the signal characteristic of interest crosses the trigger threshold (with positive slope) after having been below the threshold for at least the

## Trigger

holdoff time. For negative slope, the trigger event is generated if the signal characteristic crosses the threshold (with negative slope) and then remains below the threshold for at least the holdoff time. In either case, the trigger event is associated with the time the level was crossed.

Key Path	<b>Trigger, Auto/Holdoff</b>
Remote Command	:TRIGger[:SEquence]:HOLDoFF:TYPE NORMa1 ABOVe BELOW :TRIGger[:SEquence]:HOLDoFF:TYPE?
Example	TRIG:HOLD:TYPE NORM
Preset	All modes but GSM/EDGE: Normal GSM/EDGE: Below
State Saved	Saved in instrument state
Initial S/W Revision	A.02.00

## Trigger Offset (Remote Command Only)

ESA Backwards Compatibility command

Remote Command:	:TRIGger[:SEquence]:OFFSet <time> :TRIGger[:SEquence]:OFFSet? :TRIGger[:SEquence]:OFFSet:STATe OFF ON 0 1 :TRIGger[:SEquence]:OFFSet:STATe?
Example:	TRIG:OFFS ON TRIG:OFFS -100 ms
Notes:	These are ESA commands for trigger offset that allowed you to use a positive or negative delay when in zero span and in a Res BW $\geq$ 1 kHz. For ESA compatibility, X-series analyzers keep track of this offset and add it to the Trigger Delay for line, video or external whenever the value is sent to the hardware, if in Zero Span and RBW $\geq$ 1 kHz.
Preset:	Off, 0 s
State Saved:	Saved in instrument state
Min:	-11 s
Max:	+11 s
Initial S/W Revision:	Prior to A.02.00



---

## View/Display

The View/Display key opens up the Display Menu (common to most measurements) and the View menu for the current measurement.

Some measurements have simple View menus, or even no View menu, others provide many different Views.

Views are different ways of looking at data, usually different ways of looking at the same data, especially when the data represents a time record that is being digitally processed with an FFT and/or other digital signal processing algorithms.

Key Path	<b>Front-panel key</b>
Initial S/W Revision	Prior to A.02.00

## Display

The **Display** menu is common to most measurements, and is used for configuring items on the display. Some **Display** menu settings apply to all the measurements in a mode, and some only to the current measurement. Those under the **System Display Settings** key apply to all measurements in all modes.

Key Path	<b>Display</b>
Initial S/W Revision	Prior to A.02.00


## Annotation

Turns on and off various parts of the display annotation. The annotation is divided up into four categories:

1. **Meas Bar:** This is the measurement bar at the top of the screen. It does not include the settings panel or the Active Function. Turning off the Meas Bar turns off the settings panel and the Active Function. When the Meas Bar is off, the graticule area expands to fill the area formerly occupied by the Meas Bar.
2. **Screen Annotation:** this is the annotation and annunciation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) This does NOT include the marker number or the N dB result. When off, the graticule expands to fill the entire graticule area.
3. **Trace annotation:** these are the labels on the traces, showing their detector (or their math mode).
4. **Active Function annotation:** this is the active function display in the meas bar, and all of the active function values displayed on softkeys.

See the figure below. Each type of annotation can be turned on and off individually.

## View/Display

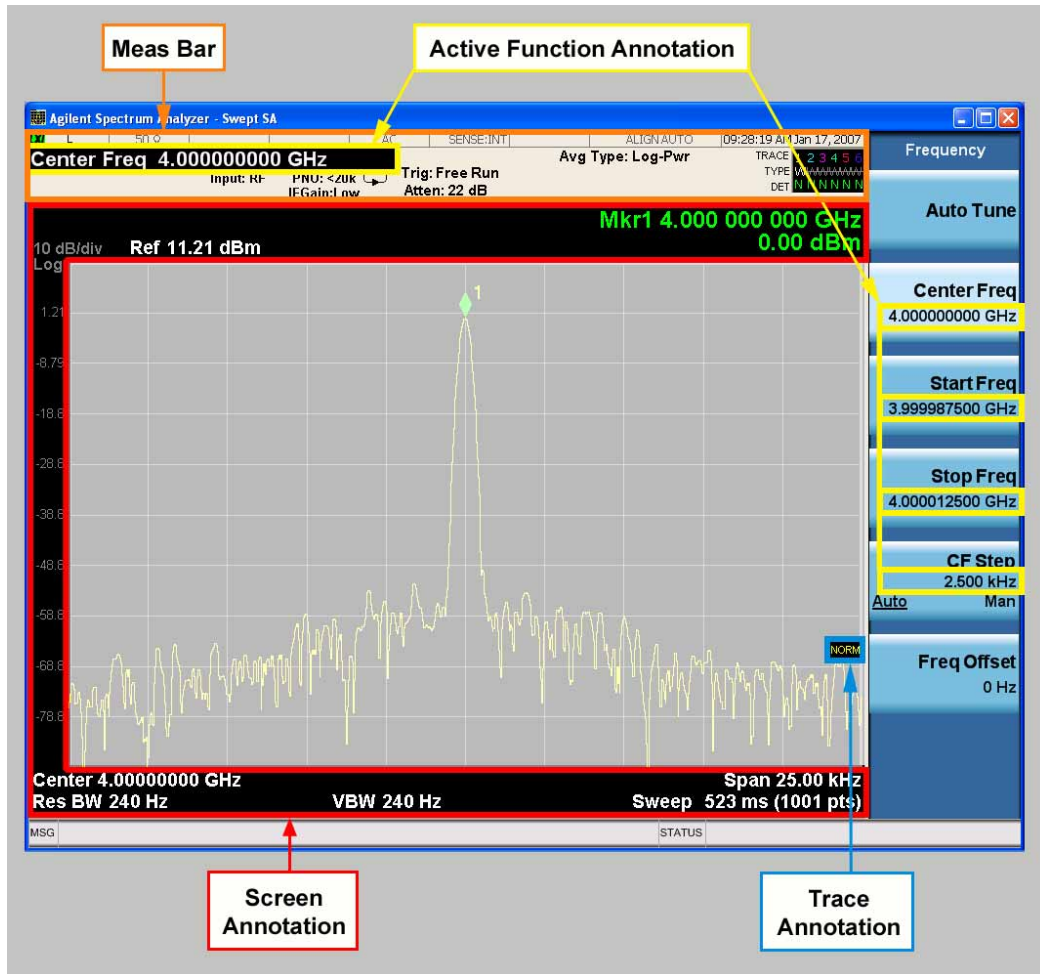

Key Path	View/Display, Display
Initial S/W Revision	Prior to A.02.00

### Meas Bar On/Off

This function turns the Measurement Bar on and off, including the settings panel. When off, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command:	:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1 :DISPlay:ANNotation:MBAR[:STATe]?
Example:	DISP:ANN:MBAR OFF
Dependencies:	Grayed out and forced to OFF when <b>System Display Settings, Annotation</b> is set to Off.
Preset:	On This should remain Off through a Preset when <b>System Display Settings, Annotation</b> is set to Off.

State Saved:	Saved in instrument state.
Key Path:	<b>View/Display, Display, Annotation</b>
Initial S/W Revision:	Prior to A.02.00

### Screen

This controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the y-axis annotation. This does NOT include marker annotation (or the N dB result). When off, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule as described in the Trace/Detector chapter.

<b>Remote Command:</b>	:DISPlay:ANNotation:SCReen[:STATe] OFF ON 0 1 :DISPlay:ANNotation:SCReen[:STATe]?
Example:	DISP:ANN:SCR OFF
Dependencies:	Grayed out and forced to OFF when <b>System Display Settings, Annotation</b> is set to Off.
Preset:	On This should remain Off through a Preset when <b>System Display Settings, Annotation</b> is set to Off
State Saved:	Saved in instrument state.
Key Path:	<b>View/Display, Display, Annotation</b>
Initial S/W Revision:	Prior to A.02.00

### Trace

Turns on and off the labels on the traces, showing their detector (or their math mode) as described in the Trace/Detector section.

If trace math is being performed with a trace, then the trace math annotation will replace the detector annotation.

<b>Remote Command:</b>	:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0 :DISPlay:ANNotation:TRACe[:STATe]?
Example:	DISP:ANN:TRAC OFF
Preset:	Off
State Saved:	Saved in instrument state.
Key Path:	<b>View/Display, Display, Annotation</b>
Initial S/W Revision:	Prior to A.02.00


### Active Function Values On/Off

Turns on and off the active function display in the Meas Bar, and all of the active function values

## View/Display

displayed on the softkeys.

Note that all of the softkeys that have active functions have these numeric values blanked when this function is on. This is a security feature..

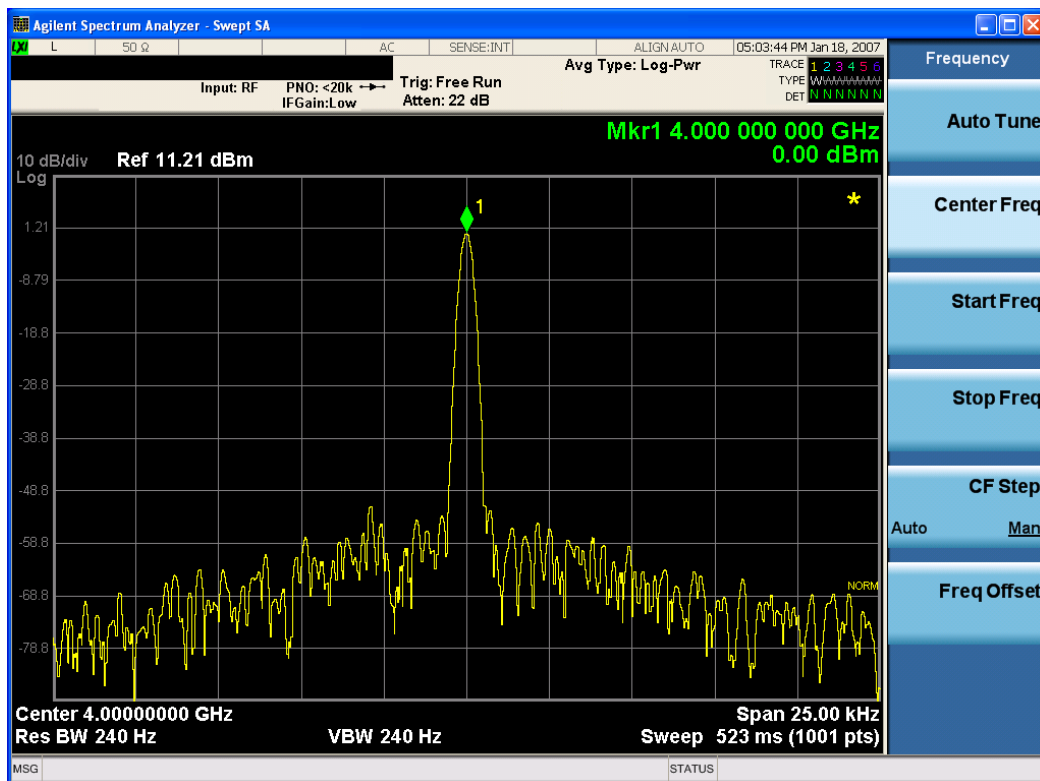

<b>Remote Command:</b>	:DISPlay:ACTivefunc[:STATE] ON OFF 1 0 :DISPlay:ACTivefunc[:STATE] ?
<b>Example:</b>	DISP:ACT OFF
<b>Dependencies:</b>	Grayed out and forced to OFF when <b>System Display Settings, Annotation</b> is set to Off.
<b>Preset:</b>	On This should remain Off through a Preset when <b>System Display Settings, Annotation</b> is set to Off
<b>State Saved:</b>	Saved in instrument state.
<b>Key Path:</b>	<b>View/Display, Display, Annotation</b>
<b>Initial S/W Revision:</b>	Prior to A.02.00

### Title

Displays menu keys that enable you to change or clear a title on your display.

Key Path	<b>View/Display, Display</b>
----------	------------------------------

Initial S/W Revision	Prior to A.02.00
----------------------	------------------

### Change Title

Writes a title into the "measurement name" field in the banner, for example, "Swept SA".

Press Change Title to enter a new title through the alpha editor. Press Enter or Return to complete the entry. Press ESC to cancel the entry and preserve your existing title.

The display title will replace the measurement name. It remains for this measurement until you press **Change Title** again, or you recall a state, or a Preset is performed. A title can also be cleared by pressing **Title**, **Clear Title**.

---

**NOTE** Notice the inclusion of the <measurement> parameter in the command below. Because each measurement remembers the Display Title, the command must be qualified with the measurement name. For the Swept SA measurement this is not the case; for backwards compatibility, no <measurement> parameter is used when changing the Display Title for the Swept SA measurement.

---

<b>Remote Command</b>	:DISPlay:<measurement>:ANNotation:TITLe:DATA <string> :DISPlay:<measurement>:ANNotation:TITLe:DATA?
Example	DISP:ANN:TITL:DATA "This Is My Title"  This example is for the Swept SA measurement in the Spectrum Analyzer mode. The SANalyzer <measurement> name is not used.  DISP:ACP:ANN:TITL:DATA "This Is My Title"  This example is for Measurements other than Swept SA.  Both set the title to: This Is My Title
Initial S/W Revision	Prior to A.02.00
Key Path	<b>View/Display, Display, Title</b>
Mode	All
Notes	Pressing this key cancels any active function.  When a title is edited the previous title remains intact (it is not cleared) and the cursor goes at the end so that characters can be added or BKSP can be used to go back over previous characters.
Preset	No title (measurement name instead)
State Saved	Saved in instrument state.

### Clear Title

Clears a title from the front-panel display. Once cleared, the title cannot be retrieved. After the title is

## View/Display

cleared, the current Measurement Name replaces it in the title bar.

Example:	DISP:ANN:TITL:DATA "" clears any existing title characters.
Notes:	Use the :DISPlay:ANNotation:TITLe:DATA <string> command with an empty string.
Preset:	Performed on Preset.
Key Path:	<b>View/Display, Display, Title</b>
Initial S/W Revision:	Prior to A.02.00

## Graticule

Pressing Graticule turns the display graticule On or Off. It also turns the graticule y-axis annotation on and off.

<b>Remote Command:</b>	:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1 :DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?
Example:	DISP:WIND:TRAC:GRAT:GRID OFF
Notes:	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the x-axis and y-axis.
Preset:	On
State Saved:	Saved in instrument state
Key Path:	<b>View/Display, Display</b>
Initial S/W Revision:	Prior to A.02.00

## Display Line

Activates an adjustable horizontal line that is used as a visual reference line. The line's vertical position corresponds to its amplitude value. The value of the display line (for example, "-20.3 dBm") appears above the line itself on the right side of the display in the appropriate font.

The display line can be adjusted using the step keys, knob, or numeric keypad. The unit of the Display Line is determined by the **Y axis unit** setting under **Amplitude**. If more than one window has a display line, the display line of the selected window is controlled.

If the display line is off the screen, it shows as a line at the top/bottom of the screen with an arrow pointing up or down. As with all such lines (Pk Thresh, Trigger Level, etc.) it is drawn on top of all traces.

The display line is unaffected by Auto Couple.

<b>Remote Command:</b>	:DISPlay:WINDow[1]:TRACe:Y:DLINe <amp;1> :DISPlay:WINDow[1]:TRACe:Y:DLINe? :DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe OFF ON 0 1 :DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe?
Example:	DISP:WIND:TRAC:Y:DLIN:STAT ON DISP:WIND:TRAC:Y:DLIN:STAT -32 dBm
Preset:	Set the Display Line to Off and -25 dBm on Preset. When the Display Line goes from Off to On, if it is off screen, set it to either the top or bottom of screen, depending on which direction off screen it was.  The Display Line's value does not change when it is turned off.
State Saved:	Saved in instrument state.
Min:	-∞ (minus infinity) in current units
Max:	+∞ (plus infinity) in current units
Key Path:	<b>View/Display, Display</b>
Default Unit:	Depends on the current selected Y axis unit
Initial S/W Revision:	Prior to A.02.00

### System Display Settings

These settings are "Mode Global" – they affect all modes and measurements and are reset only by **Restore Misc Defaults** or **Restore System Defaults** under System.

Key Path	<b>View/Display, Display</b>
Initial S/W Revision	Prior to A.02.00

### Annotation Local Settings

This is a Mode Global override of the meas local annotation settings. When it is **All Off**, it forces **Screen Annotation, Meas Bar, Trace, and Active Function Values** settings to be **OFF** for all measurements in all modes. This provides the security based "annotation off" function of previous analyzers; hence it uses the legacy SCPI command.

When it is **All Off**, the **Screen, Meas Bar, Trace, and Active Function Values** keys under the **Display, Annotation** menu are grayed out and forced to **Off**. When **Local Settings** is selected, you are able to set the local annotation settings on a measurement by measurement basis.

<b>Remote Command:</b>	:DISPlay:WINDow[1]:ANNOtation[:ALL] OFF ON 0 1 :DISPlay:WINDow[1]:ANNOtation[:ALL]?
Example:	:DISP:WIND:ANN OFF

## View/Display

Preset:	On (Set by Restore Misc Defaults)
State Saved:	Not saved in instrument state.
Key Path:	<b>View/Display, Display, System Display Settings</b>
Initial S/W Revision:	Prior to A.02.00

### Theme

This key allows you to change the Display theme. This is similar to the Themes selection under Page Setup and Save Screen Image. The four themes are detailed below.

<b>Remote Command:</b>	:DISPlay:THEME TDColor TDMonochrome FCOLor FMONochrome :DISPlay:THEMe?
Preset:	TDColor (Set by Restore Misc Defaults)
State Saved:	Not saved in instrument state.
Key Path:	<b>View/Display, Display, System Display Settings</b>
Notes:	TDColor – 3D is the standard color theme with filling and shading TDMonochrome – is similar to 3D color, but only black is used FCOLor – flat color is intended for inkjet printers to conserve ink. It uses a white background instead of black. FMONochrome – is like flat color, but only black is used
Example:	DISP:THEM TDM sets the display theme to 3D Monochrome.
Initial S/W Revision:	Prior to A.02.00

### Backlight

Accesses the display backlight on/off keys. This setting may interact with settings under the Windows "Power" menu.

When the backlight is off, pressing ESC, TAB, SPACE, ENTER, UP, DOWN, LEFT, RIGHT, DEL, BKSP, CTRL, or ALT turns the backlight on without affecting the application. Pressing any other key will turn backlight on and could potentially perform the action as well.

<b>Remote Command:</b>	:DISPlay:BACKlight ON OFF :DISPlay:BACKlight?
Preset:	ON (Set by Restore Misc Defaults)
Key Path:	<b>View/Display, Display, System Display Settings</b>
Initial S/W Revision:	Prior to A.02.00



**On**

Turns the display backlight on.

Example:	DISP:BACK ON
Key Path:	<b>View/Display, Display, System Display Settings, Backlight</b>
Readback:	On
Initial S/W Revision:	Prior to A.02.00

**Off**

Turns the display backlight off.

Example:	DISP:BACK OFF
Key Path:	<b>View/Display, Display, System Display Settings, Backlight</b>
Readback:	Off
Initial S/W Revision:	Prior to A.02.00

**Backlight Intensity**

An active function used to set the backlight intensity. It goes from 0 to 100 where 100 is full on and 0 is off. This value is independent of the values set under the Backlight on/off key.

<b>Remote Command:</b>	:DISPlay:BACKlight:INTensity <integer> :DISPlay:BACKlight:INTensity?
Example:	DISP:BACK:INT 50
Preset:	100 (Set by Restore Misc Defaults)
Min:	0
Max:	100
Key Path:	<b>View/Display, Display, System Display Settings</b>
Initial S/W Revision:	Prior to A.02.00

**Full Screen**

When **Full Screen** is pressed the measurement window expands horizontally over the entire instrument display. The screen graticule area expands to fill the available display area.

It turns off the display of the softkey labels, however the menus and active functions still work. (Though it would obviously be very hard to navigate without the key labels displayed.) Pressing **Full Screen** again while Full Screen is in effect cancels Full Screen.

Note that the banner and status lines are unaffected. You can get even more screen area for your data display by turning off the Meas Bar (in the Display menu) which also turns off the settings panel.

## View/Display

Full Screen is a Meas Global function. Therefore it is cancelled by the **Preset** key.

<b>Remote Command:</b>	:DISPlay:FSCReen[:STATe] OFF ON 0 1 :DISPlay:FSCReen[:STATe]?
Preset:	Off
State Saved:	Not saved in instrument state.
Key Path:	<b>Display</b>
Backwards Compatibility SCPI:	:DISPlay:MENU[:STATe] OFF ON 0 1
Backwards Compatibility SCPI:	DISPlay:MENU[:STATe] emulates ESA full screen functionality, which is the same as the FSCReen command in PSA except that the sense of on/off is reversed (that is, OFF means the menus are OFF) and the default is ON.
Initial S/W Revision:	Prior to A.02.00

### Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit so you can tell that the instrument is on. The display enable setting is mode global. The reasons for turning the display off are three:

- To increase speed as much as possible by freeing the instrument from having to update the display
- To reduce emissions from the display, drive circuitry
- For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending the SYSTem:DEFaults MISC command or the DISPlay:ENABle ON (neither \*RST nor SYSTem:PRESet enable the display.)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys or by sending the SYSTem:DEFaults MISC command or the DISPlay:ENABle ON (neither \*RST nor SYSTem:PRESet enable the display.)

and you are using either the SYSTem:KLOCK command or GPIB local lockout, then no front-panel key press will turn the display back on. You must turn it back on remotely.

<b>Remote Command:</b>	:DISPlay:ENABle OFF ON 0 1 :DISPlay:ENABle?
Example:	DISP:ENAB OFF
Couplings:	DISP:ENAB OFF turns Backlight OFF and DISP:ENAB ON turns Backlight ON. However, settings of Backlight do not change the state of DISP:ENAB

Preset:	On Set by SYST:DEF MISC, but Not affected by *RST or SYSTem:PRESet.
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00

