USER'S GUIDE Dynamic Measurement DC Source HP Model 66332A System DC Power Supply HP Model 6631B, 6632B, 6633B, 6634B

For instruments with Serial Numbers: HP 66332A: US36320401 and up HP 6631B: US37470101 and up HP 6632B: US36350826 and up HP 6633B: US36390236 and up HP 6634B: US36380206 and up



HP Part No. 5962-8196 Microfiche Part No. 5962-8197 Printed in USA: July 1999

Warranty Information

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard hardware product is warranted against defects in material and workmanship for a period of three years from date of delivery. HP software and firmware products, which are designated by HP for use with a hardware product and when properly installed on that hardware product, are warranted not to fail to execute their programming instructions due to defects in material and workmanship for a period of 90 days from date of delivery. During the warranty period Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective. HP does not warrant that the operation for the software firmware, or hardware shall be uninterrupted or error free.

For warranty service, with the exception of warranty options, this product must be returned to a service facility designated by HP. Customer shall prepay shipping charges by (and shall pay all duty and taxes) for products returned to HP for warranty service. Except for products returned to Customer from another country, HP shall pay for return of products to Customer.

Warranty services outside the country of initial purchase are included in HP's product price, only if Customer pays HP international prices (defined as destination local currency price, or U.S. or Geneva Export price).

If HP is unable, within a reasonable time to repair or replace any product to condition as warranted, the Customer shall be entitled to a refund of the purchase price upon return of the product to HP.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the Customer, Customer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation and maintenance. NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE THE CUSTOMER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

The above statements apply only to the standard product warranty. Warranty options, extended support contacts, product maintenance agreements and customer assistance agreements are also available. Contact your nearest Hewlett-Packard Sales and Service office for further information on HP's full line of Support Programs.

Safety Summary

The following general safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

GENERAL

This product is a Safety Class 1 instrument (provided with a protective earth terminal). The protective features of this product may be impaired if it is used in a manner not specified in the operation instructions.

Any LEDs used in this product are Class 1 LEDs as per IEC 825-1.

ENVIRONMENTAL CONDITIONS

This instrument is intended for indoor use in an installation category II, pollution degree 2 environment. It is designed to operate at a maximum relative humidity of 95% and at altitudes of up to 2000 meters. Refer to the specifications tables for the ac mains voltage requirements and ambient operating temperature range.

BEFORE APPLYING POWER

Verify that the product is set to match the available line voltage, the correct fuse is installed, and all safety precautions are taken. Note the instrument's external markings described under "Safety Symbols".

GROUND THE INSTRUMENT

To minimize shock hazard, the instrument chassis and cover must be connected to an electrical ground. The instrument must be connected to the ac power mains through a grounded power cable, with the ground wire firmly connected to an electrical ground (safety ground) at the power outlet. Any interruption of the protective (grounding) conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in personal injury.

ATTENTION: Un circuit de terre continu est essentiel en vue du fonctionnement sécuritaire de l'appareil. Ne jamais mettre l'appareil en marche lorsque le conducteur de mise ... la terre est d,branch,.

FUSES

Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short-circuited fuseholders. To do so could cause a shock or fire hazard.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Do not operate the instrument in the presence of flammable gases or fumes.

DO NOT REMOVE THE INSTRUMENT COVER

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made only by qualified service personnel.

Instruments that appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel.

SAFETY SYMBOLS		
	Direct current	
\sim	Alternating current	
\sim	Both direct and alternating current	
3~	Three-phase alternating current	
Ţ	Earth (ground) terminal	
	Protective earth (ground) terminal	
\rightarrow	Frame or chassis terminal	
\perp	Terminal is at earth potential. Used for measurement and control circuits designed to be operated with one terminal at earth potential.	
Ν	Terminal for Neutral conductor on permanently installed equipment	
L	Terminal for Line conductor on permanently installed equipment	
	On (supply)	
\bigcirc	Off (supply)	
\bigcirc	Standby (supply). Units with this symbol are not completely disconnected from ac mains when this switch is off. To completely disconnect the unit from ac mains, either disconnect the power cord or have a qualified electrician install an external switch.	
	In position of a bi-stable push control	
	Out position of a bi-stable push control	
<u>/h</u>	Caution, risk of electric shock	
	Caution, hot surface	
<u> </u>	Caution (refer to accompanying documents)	
WARNING	The WARNING sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.	
Caution	The CAUTION sign denotes a hazard. It calls attention to an operating procedure, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.	

Declaration Page

DECLARATION OF CONFORMITY according to ISO/IEC Guide 22 and EN 45014		
Manufacturer's Name:	Hewlett-Packard Company	
Manufacturer's Address:	150 Green Pond Road Rockaway, New Jersey 07866 U.S.A.	
declares that the Product		
Product Name:	a) Dynamic Measurement DC Sourceb) System DC Power Supply	
Model Number:	a) HP 66332A b) HP 6631B, 6632B, 6633B, 6634B	
conforms to the following Pro	Autor Specifications.	
Safety:	IEC 1010-1:1990+A1(1992) / EN 61010-1:1993	
Safety: EMC:	IEC 1010-1:1990+A1(1992) / EN 61010-1:1993 CISPR 11:1990 / EN 55011:1991 - Group 1 Class B IEC 801-2:1991 / EN 50082-1:1992 - 4 kV CD, 8 kV AD IEC 801-3:1984 / EN 50082-1:1992 - 3 V / m IEC 801-4:1988 / EN 50082-1:1992 - 0.5 kV Signal Lines 1 kV Power Lines	
	CISPR 11:1990 / EN 55011:1991 - Group 1 Class B IEC 801-2:1991 / EN 50082-1:1992 - 4 kV CD, 8 kV AD IEC 801-3:1984 / EN 50082-1:1992 - 3 V / m IEC 801-4:1988 / EN 50082-1:1992 - 0.5 kV Signal Lines	
EMC: Supplementary Information: The product herewith	CISPR 11:1990 / EN 55011:1991 - Group 1 Class B IEC 801-2:1991 / EN 50082-1:1992 - 4 kV CD, 8 kV AD IEC 801-3:1984 / EN 50082-1:1992 - 3 V / m IEC 801-4:1988 / EN 50082-1:1992 - 0.5 kV Signal Lines	

Acoustic Noise Information

Herstellerbescheinigung

Diese Information steht im Zusammenhang mit den Anforderungen der Maschinenläminformationsverordnung vom 18 Januar 1991.

- * Schalldruckpegel Lp <70 dB(A)
- * Am Arbeitsplatz
- * Normaler Betrieb
- * Nach EN 27779 (Typprüfung).

Manufacturer's Declaration

This statement is provided to comply with the requirements of the German Sound Emission Directive, from 18 January 1991.

- * Sound Pressure Lp <70 dB(A)
- * At Operator Position
- * Normal Operation
- * According to EN 27779 (Type Test).

Printing History

The edition and current revision of this manual are indicated below. Reprints of this manual containing minor corrections and updates may have the same printing date. Revised editions are identified by a new printing date. A revised edition incorporates all new or corrected material since the previous printing date.

Changes to the manual occurring between revisions are covered by change sheets shipped with the manual. In some cases, the manual change applies only to specific instruments. Instructions provided on the change sheet will indicate if a particular change applies only to certain instruments.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior consent of Hewlett-Packard Company. The information contained in this document is subject to change without notice.

© Copyright 1997 Hewlett-Packard Company

Edition 1 _____November, 1997

Table of Contents

Warranty Information	2
Safety Summary	3
Acoustic Noise Information	6
Printing History	6
Table of Contents	7
QUICK REFERENCE	9
HP 66332A Dynamic Measurement DC Source and	
HP 6611C-6614C System DC Power Supply	9
The Front Panel - At a Glance	10
Front Panel Number Entry	11
Front Panel Annunciators	12
Immediate Action Keys	12
Front Panel Menus - At a Glance	13
SCPI Programming Commands - At a Glance	14
The Rear Panel - At a Glance	15
GENERAL INFORMATION	17
Document Orientation	17
Safety Considerations	18
Options and Accessories	18
Description	19
Capabilities	19
Front Panel Controls	19
Remote Programming	19
Output Characteristic	20
INSTALLATION	21
Inspection	21
Damage	21
Packaging Material	21
Items Supplied	21
Cleaning	21
Location	22
Bench Operation	22
Rack Mounting	22
Input Connections	23
Connect the Power Cord	23
Output Connections	23 23
Wire Considerations	23 23
Current Ratings	23 24
Voltage Drops Multiple Load Connections	24
Remote Sense Connections	24
Sense Leads	24
Stability	25
OVP Considerations	26 26
Fast/Normal Operation	20
Inductive Loading	27
Capacitive Loading	27
INH/FLT Connections	27
Controller Connections	30
HP-IB Interface	30
RS-232 Interface	30

TURN-ON CHECKOUT	31
Introduction	31
Using the Keypad	31
Checkout Procedure	32
In Case of Trouble	34
Error Messages	34
Line Fuse	34
FRONT PANEL OPERATION	35
Introduction	35
Front Panel Description	35
System Keys	37
Function Keys	38
Immediate Action Keys	38
Scrolling Keys	38
Metering Keys	39
Output Control Keys	40
Entry Keys Examples of Front Donal Programming	41
Examples of Front Panel Programming 1 - Setting the Output Voltage and Current	42 42
2 - Querying and Clearing Output Protection	42
3 - Making Front Panel Measurements	43
4 - Programming the Digital Output Port	45
5 - Programming the Output Relay (option 760 only)	46
6 - Setting the HP-IB Address and RS-232 Parameters	46
7 - Saving and Recalling Operating States	47
SPECIFICATIONS	49
Specifications	49
Supplemental Characteristics	50
VERIFICATION AND CALIBRATION	53
Introduction	53
Equipment Required	53
Test Setup	53
Performing the Verification Tests	54
Turn-On Checkout	55
Voltage Programming and Measurement Accuracy	55
Current Programming and Measurement Accuracy	55
Performing the Calibration Procedure	59
Front Panel Calibration Menu	59
Front Panel Calibration	60
Calibration Error Messages	62
Changing the Calibration Password Calibration Over the HP-IB	63 63
ERROR MESSAGES	65
LINE VOLTAGE CONVERSION	69
Open the Unit Configure the Power Transformer	69 69
Install the Correct Line Fuse	70
Close the Unit	70
INDEX	71

Quick Reference

HP 66332A Dynamic Measurement DC Source and HP 6631B/6632B/6633B/6634B System DC Power Supplies

The HP 66332A is a 100 Watt, high performance dc power supply that provides dynamic measurement and analysis of voltage and current waveforms. It is designed to simplify the testing of digital cellular and mobile phones. For example, data acquired using its dynamic measurement capability can be used in determining the battery operating time of digital wireless communications products.

The HP 6631B/6632B/6633B/6634B are 100 Watt, high performance dc power supplies with output current measurement capability in the microampere range. They are well suited for testing portable battery-powered products.

Additionally, the combination of bench-top and system features in these dc sources provide versatile solutions for your design and test requirements.

Convenient bench-top features

- Up to 100 Watts output power
- Easy to use knob for voltage and current settings
- Highly visible vacuum-fluorescent front panel display
- Excellent load and line regulation; low ripple and noise
- Measurement capability down to microampere levels
- Current sinking up to the maximum rated output current
- Instrument state storage
- Portable case

Flexible system features

- HP-IB (IEEE-488) and RS-232 interfaces are standard
- SCPI (Standard Commands for Programmable Instruments) compatibility
- Triggered acquisition of digitized output current and voltage waveforms (HP 66332A only)
- I/O setup easily done from the front panel

The Front Panel - At a Glance


→ 14-character display shows output measurements and programmed values. Annunciators indicate operating modes and status conditions.

Rotary control sets voltage, current, and menu parameters.

Use **a** and **a** to set the resolution; then adjust the value with the knob.

front panel menu commands.

Y Optional front panel output connectors.

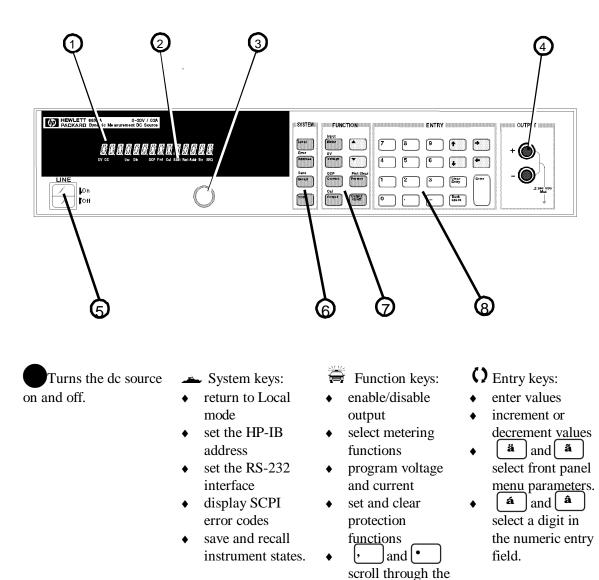


Front Panel Number Entry


Enter numbers from the front panel using one of the following methods:

Use the arrow keys and knob to change voltage or current settings

 
NOTE The output must be ON to see the displayed values change in Meter mode.



Use the Function keys and knob to change the displayed settings

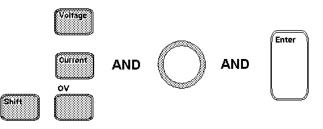


Use the Arrow keys to edit individual digits in the displayed setting

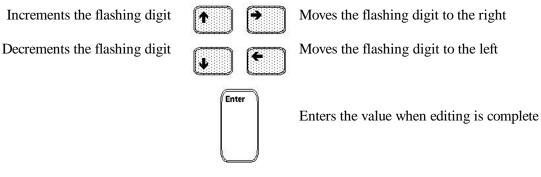

Use the Function keys and Entry keys to enter a new value

NOTE If you make a mistake, use the Backspace key to delete the number, or press the Meter key to return to meter mode.

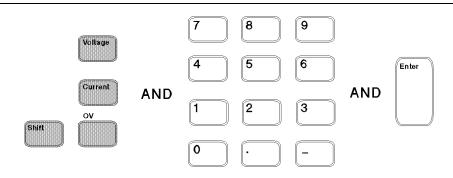

Front Panel Annunciators

cv cc	Unr Dis OCP Prot Cal Shift Rmt Addr Err SRQ
сѵ	The output is operating in constant voltage mode.
сс	The output is operating in constant current mode.
Unr	The output is unregulated.
Dis	The output is OFF. Press the Output On/Off key to turn the output on.
ОСР	The over-current protection state is ON. Press the OCP key to turn over-current protection off.
Prot	Indicates that the output has been disabled by one of the protection features. Press the Prot Clear key to clear the protection condition.
Cal	Calibration mode is ON. Scroll to the Cal Off command and press the Enter key to exit the calibration mode.
Shift	The Shift key has been pressed.
Rmt	The selected Remote programming interface (either HP-IB or RS-232) is active. Press the Local key to return the unit to front panel control.
Addr	The interface is addressed to talk or listen.
Err	There is an error in the SCPI error queue. Press the Error key to view the error code.
SRQ	The interface is requesting service.

Immediate Action Keys

Output On/Off	A toggle switch that turns the output of the dc source on or off.
Local	Activates front panel control when the unit is in remote mode (unless a Lockout command is in effect).
Shift Prot Clr	Resets the protection circuit and allows the unit to return to its last programmed state.
Shift OCP	A toggle switch that enables or disables overcurrent protection.

Front Panel Menus - At a Glance


		ADDRESS 7	Sate the LID ID Address
Address		INTE HPIB	Sets the HP-IB Address Selects an interface (HPIB or RS232)
	<u>ا</u>		
	,	BAUDRATE 300	Selects baud rate (300, 600, 1200, 2400, 4800, 9600)
	,	PARITY NONE	Selects message parity (NONE, EVEN, ODD, MARK, SPACE)
	,	FLOW NONE	Selects flow control (XON-XOFF, RTS-CTS, DTR-DSR, NONE)
	[,]	LANG SCPI	Selects language (SCPI or COMP)
Recall		*RCL 0	Recalls instrument state
Shift	Save	*SAV 0	Saves present instrument state
Shift	Error	ERROR 0	Displays errors in SCPI error queue
Meter		12.000V 0.204A	Measures output voltage and current
	,	12.500V MAX	Measures peak output voltage ¹
	, ,	1.000V MIN	Measures minimum output voltage ¹
	, ,	12.330V HIGH	Measures the high level of a voltage pulse waveform ¹
	ļ,	0.080V LOW	Measures the low level of a voltage pulse waveform ¹
	ļ,	12.000V RMS	Measures rms voltage ¹
	ļ,	0.350A MAX	Measures peak output current ¹
	ļ,	0.050A MIN	Measures minimum output current ¹
	ļ,	0.400A HIGH	Measures the high level of a current pulse waveform ¹
	ļ,	0.012A LOW	Measures the low level of a current pulse waveform ¹
	,	0.210A RMS	Measures rms current ¹
Voltage		VOLT 20.000	Sets the output voltage
Current		CURR 2.000	Sets the output current
Protect		<i>OC</i>	Protection status (example shows overcurrent tripped)
Output		*RST	Places the dc source in the factory-default state
	, ,	PON:STATE RST	Select the power-on state command (RST or RCL0)
	ļ,	PROT:DLY 0.08	Sets the output protection delay in seconds
	ļ,	RI LATCHING	Sets the remote inhibit mode (LATCHING, LIVE, or OFF)
	ļ,	DFI OFF	Sets the discrete fault indicator state (ON or OFF)
	ļ,	DFI:SOUR OFF	Selects the DFI source (QUES, OPER, ESB, RQS, or OFF)
	ļ,	PORT RIDFI	Sets the output port functions (RIDFI or DIGIO)
	ļ,	DIGIO 7	Sets and reads the I/O port value (0 through 7)
	ļ,	RELAY ON	Sets the output relay state (ON or OFF) ²
	$\overline{,}$	RELAY NORM	Sets the output relay polarity (NORM or REV) ²
Shift	ον	VOLT:PROT 22	Sets overvoltage protection level
Shift	Input	CURR:RANG HIGH	Sets current range (HIGH, LOW, or AUTO)
	, ,	CURR:DET ACDC	Sets current measurement detector (ACDC or DC) ¹
Shift	Cal	CAL ON	Accesses calibration menu (See User's Guide).
	$ \leq $, ,

Use **a** and **a** to select menu parameters. Us Meter to exit any menu and return to metering mode. ¹Not available on HP 6631B - 6634B or in Compatibility mode. ²Not available on HP 6631B.

SCPI Programming Commands - At a Glance

NOTE Most [optional] commands have been omitted for clarity. Refer to the Programming Guide for a complete description of all programming commands.

ABORt	SENSe
CALibrate	:CURRent :RANGe <n></n>
:CURRent [:POSitive]	:DETector ACDC DC ¹
:NEGative	:FUNCtion "VOLT" "CURR"
:MEASure :LOWRange	:SWEep :OFFSet :POINts <n>1</n>
:AC ¹	:POINts <n></n>
:DATA <n></n>	:TINTerval <n></n>
:LEVel P1 P2 P3 P4	[SOURce:] CURRent <n></n>
:PASSword <n></n>	:TRIGgered <n></n>
:SAVE	:PROTection :STATe <bool></bool>
:STATe <bool> [, <n>]</n></bool>	DIGital :DATA <n></n>
:VOLTage :PROTection	:FUNCtion RIDF DIG
DISPlay	VOLTage <n></n>
<bool></bool>	:TRIGgered <n></n>
:MODE NORMal TEXT	:PROTection <n></n>
:TEXT <display_string></display_string>	:ALC :BANDwidth? :BWIDth?
INITiate	STATus
:SEQuence[1 21]	:PRESet
:NAME TRANsient ACQuire ¹	:OPERation [:EVENt]?
:CONTinuous :SEQuence[1], <bool></bool>	:CONDition?
:NAME TRANsient, <bool></bool>	:ENABle <n></n>
MEASure FETCh	:NTRansition <n></n>
:ARRay :CURRent?1	:PTRansition <n></n>
:VOLTage?1	:QUEStionable [:EVENt]?
[:CURRent][:DC]? ²	:CONDition?
:ACDC?1	:ENABle <n></n>
:HIGH?1	:NTRansition <n></n>
:LOW? ¹	:PTRansition <n></n>
:MAX?1	SYSTem
:MIN? ¹	:ERRor?
:VOLTage [:DC]? ²	:LANGuage SCPI COMPatibility
:ACDC?1	:VERSion?
:HIGH?1	:LOCal
:LOW?1	:REMote
:MAX?1	:RWLock
:MIN? ¹	TRIGger
OUTPut	:SEQuence 2 :ACQuire [:IMMediate] ¹
<bool> [,NORelay]</bool>	:COUNt :CURRent <n>1</n>
:DFI <bool></bool>	:VOLTage <n>1</n>
:SOURce QUES OPER ESB RQS OFF	:HYSTeresis:CURRent <n>1</n>
:PON :STATe RST RCL0	:VOLTage <n>1</n>
:PROTection :CLEar	:LEVel :CURRent <n>1</n>
:DELay <n></n>	:VOLTage <n>1</n>
:RELay [:STATe] <bool>3</bool>	:SLOPe :CURRent POS NEG EITH ¹
:POLarity NORM REV ³	:VOLTage POS NEG EITH ¹
:RI :MODE LATCHing LIVE OFF	:SOURce BUS INTernal ¹
	[:SEQuence1 :TRANsient][:IMMediate]
¹ Not available on HP 6631B - 6634B	:SOURce BUS
² Fetch commands not available on HP 6631B – 6634B	:SEQuence1 :DEFine TRANsient
³ Not available on HP 6631B	:SEQuence2 :DEFine ACQuire1

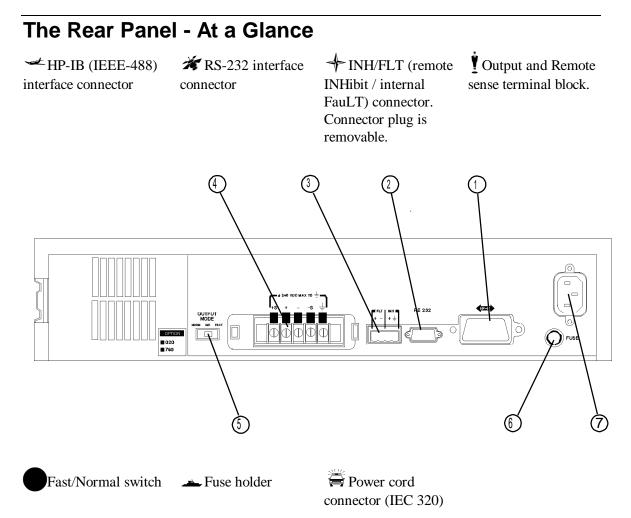

Use the front panel Address menu to

- Select the HP-IB or RS-232 interface (see chapter 4 in User's Guide)
- Select the HP-IB bus address (see chapter 4 in User's Guide)
- Configure the RS-232 interface (see chapter 4 in User's Guide)

General Information

Document Orientation

This manual describes the operation of the HP Model 66332A Dynamic Measurement DC Source and the HP Model 6631B/6632B/6633B/6634B System DC Power Supply. Unless otherwise noted, both units will be referred to by the description "dc source" throughout this manual. The following documents are shipped with your dc source:

- a User's Guide (this document), contains installation, checkout, and front panel information
- a Programming Guide, contains detailed HP-IB programming information
- an HP VXI*plug&play* instrument driver, for Windows 95 and Windows NT 4.0

The following Getting Started Map will help you find the information you need to complete the specific task that you want to accomplish. Refer to the table of contents or index of each guide for a complete list of the information contained within.

Task	Where to find information
Installing the unit	User's Guide
Line voltage connections	
Computer connections	
Load connections	
Checking out the unit	User's Guide
Verifying proper operation	
Using the front panel	
Calibrating the unit	
Using the front panel	User's Guide
Front panel keys	
Front panel examples	
Using the programming interface	User's Guide
HP-IB interface	Programming Guide
RS-232 interface	
Programming the unit using SCPI (and Compatibility)	Programming Guide
commands	
SCPI commands	
SCPI programming examples	
Compatibility language	
Programming the unit using the HP VXI <i>plug&play</i>	HP VXIplug&play installation sheet
instrument driver	and on-line help
Installing the instrument driver	NOTE
Instrument driver functions	NOTE: The driver must be installed on your computer to
C/C++ example programs	access the on-line information.
Visual BASIC example programs	
LabVIEW example programs	Drivers for HP-UX are available on the web at www.hp.com/go/power
HP VEE example programs	www.mp.com/go/power

Getting Started Map

Safety Considerations

This dc source is a Safety Class 1 instrument, which means it has a protective earth terminal. That terminal must be connected to earth ground through a power source equipped with a ground receptacle. Refer to the Safety Summary page at the beginning of this guide for general safety information. Before installation or operation, check the dc source and review this guide for safety warnings and instructions. Safety warnings for specific procedures are located at appropriate places in the guide.

Options and Accessories

Option	Description
Option	Description
100	87–106 Vac, 47–63 Hz
220	191–233 Vac, 47–63 Hz
230	207–253 Vac, 47–63 Hz
020	Front panel output binding posts
760	Isolation and polarity reversal relays (not available on HP 6631B)
1CM	Rack mount kit (HP p/n 5062-3974)
1CP	Rack mount kit with handles (HP p/n 5062-3975) Accessory Rack slide kit)HP p/n 1494-0060)
910	Service manual with extra operating manuals

Table 2-1. Options

¹Support rails are required when rack mounting units. Use E3663A support rails for HP rack cabinets, and E3664A for non-HP rack cabinets.

Item	HP Part Number
HP-IB cables	
1.0 meter (3.3 ft)	10833A
2.0 meters (6.6 ft)	10833B
4.0 meters (13.2 ft)	10833C
0.5 meters (1.6 ft)	10833D
RS-232 cable	34398A
(9-pin F to 9-pin F, 2.5 meter, null modem/printer cable with one 9-pin M to 25-pin F adapter	
RS-232 adapter kit (contains 4 adapters)	34399A
9-pin M to 25-pin M for pc or printer	
9-pin M to 25-pin M for pc or printer	
9-pin M to 25-pin M for modem	
9-pin M to 9-pin M for modem	

Table 2-2. Accessories

Description

Both the HP 66332A Dynamic Measurement DC Source and the HP 6631B/6632B/6633B/6634B System DC Power Supply combine two instruments in one unit. It includes a dc source, which produces dc output with programmable voltage and current amplitude, and a highly accurate voltage and current meter, with the capability to measure very low-level currents. Additionally, the HP 66332A Dynamic Measurement DC Source has the ability to measure and characterize output voltage and current of pulse or ac waveforms.

Capabilities

- Output Voltage and Current control with 12-bit programming resolution
- Extensive measurement capability:
 - dc voltage and current.
 rms and peak voltage and current (HP 66332A only).
 16-bit measurement resolution (low range accurate down to 2 microamperes).
 Triggered acquisition of digitized current and voltage waveforms (HP 66332A only).
- Front panel control with 14-character vacuum fluorescent display, keypad, and rotary control for voltage and current settings.
- Built-in HP-IB and RS-232 interface programming with SCPI command language.
- Non-volatile state storage and recall.
- Over-voltage, over-current, over-temperature, and RI/DFI protection features.
- Extensive selftest, status reporting, and software calibration.

Front Panel Controls

The front panel has both rotary (RPG) and keypad controls for setting the output voltage and current. The panel display provides digital readouts of a number of output measurements. Annunciators display the operating status of the dc source. System keys let you perform system functions such as setting the HP-IB address and recalling operating states. Front panel Function keys access the dc source function menus. Front panel Entry keys let you select and enter parameter values. Refer to chapter 5 for a complete description of the front panel controls.

Remote Programming

NOTE:	When shipped, HP 6631B/6632B/6633B/6634B units are set to the Compatibility programming language; HP 66332A units are set to the SCPI
	programming language.
	To change the programming language from Compatibility to SCPI, press the
	front panel Address key, use \checkmark to scroll to the LANG command, press \checkmark to
	select SCPI, then press Enter. Refer to the Programming Guide supplied with
	your dc source for further information about remote programming.

The dc source may be remotely programmed via the HP-IB bus and/or from an RS-232 serial port. HP-IB programming is with SCPI commands (Standard Commands for Programmable Instruments), which make the dc source programs compatible with those of other HP-IB instruments. Compatibility commands are also included to make the dc source compatible with

2 - General Information

the HP 6632A, 6633A, and 6634A Series dc power supplies (refer to appendix D in the the Programming Guide). Dc source status registers allow remote monitoring of a wide variety of dc source operating conditions.

Output Characteristic

The dc source's output characteristic is shown in the following figure. The output of the dc source may be adjusted to any value within the boundaries shown.

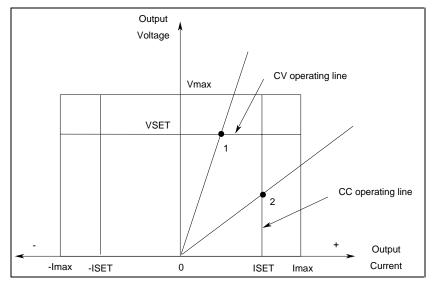


Figure 2-1. Dc Source Output Characteristic

The dc source can operate in either constant voltage (CV) or constant current (CC) over the rated output voltage and current. Although the dc source can operate in either mode, it is designed as a *constant voltage* source. This means that the unit turns on in constant voltage mode with the output voltage rising to its Vset value. There is no command for constant current operation. The only way to turn the unit on in constant current mode is by placing a short across the output and then enabling or turning the output on.

Note that the dc source cannot be programmed to operate in a specific mode. After initial turnon, the operating mode of the unit will be determined by the voltage setting, the current setting, *and* the load resistance. In figure 2-1, operating point 1 is defined by the load line traversing the positive operating quadrant in the constant voltage region. Operating point 2 is defined by the load line traversing the positive operating quadrant in the constant current region.

Figure 2-1 also shows a single range – two quadrant capability. This means that the dc source is capable of sourcing as well as sinking current over the output voltage range from zero volts to the rated maximum. The negative quadrant is identical to the positive quadrant. However, the negative current cannot be set independently; it tracks the value programmed for the positive current. Thus, if the positive current is set to 1 A, the negative current is also set to 1 A.

NOTE: If you attempt to operate the dc source beyond its output ratings, the output of the unit will become unregulated. This is indicated by the UNR annunciator on the front panel. The output may also become unregulated if the ac input voltage drops below the minimum rating specified in Appendix A.

Appendix A documents the dc source's specifications and supplemental characteristics.

Installation

Inspection

Damage

When you receive your dc source, inspect it for any obvious damage that may have occurred during shipment. If there is damage, notify the shipping carrier and the nearest HP Sales and Support Office immediately. The list of HP Sales and Support Offices is at the back of this guide. Warranty information is printed in the front of this guide.

Packaging Material

Until you have checked out the dc source, save the shipping carton and packing materials in case the unit has to be returned. If you return the dc source for service, attach a tag identifying the model number and the owner. Also include a brief description of the problem.

Items Supplied

The following user-replaceable items are included with your dc source. Some of these items are installed in the unit.

Item	Part Number	Description	
Power Cord	contact nearest HP Sales and Support Office		
Digital connector	1252-1488A	4-terminal digital plug that connects to the back of the unit.	
Output cover	06624-20007	Safety cover that installs over the output screw terminals.	
Terminal block screws	N/A	6-32 X 3/8 inch screws.	
Line Fuse	2110-0055 2110-0002	4 A for 100/120 Vac operation 2 A for 220/230 Vac operation	
Feet	5041-8801	feet for bench mounting	
User's Guide	5962-8196	Contains installation, checkout, and front panel information.	
Programming Guide	5962-8198	Contains detailed HP-IB programming information.	

Cleaning

Use a dry cloth or one slightly dampened with water to clean the external case parts. Do not attempt to clean internally.

WARNING: To prevent electric shock, unplug the unit before cleaning.

Location


The outline diagram in figure 3-1 gives the dimensions of your dc source. The dc source must be installed in a location that allows sufficient space at the sides and back of the unit for adequate air circulation (see Bench Operation).

Bench Operation

A fan cools the dc source by drawing air in through the sides and exhausting it out the back. Minimum clearances for bench operation are 1 inch (25 mm) along the sides. **Do not block the fan exhaust at the rear of the unit.**

Rack Mounting

The dc source can be mounted in a standard 19-inch rack panel or cabinet. Table 2-1 documents the HP part numbers for the various rack mounting options that are available for the dc source. Installation instructions are included with each rack mount option.

 

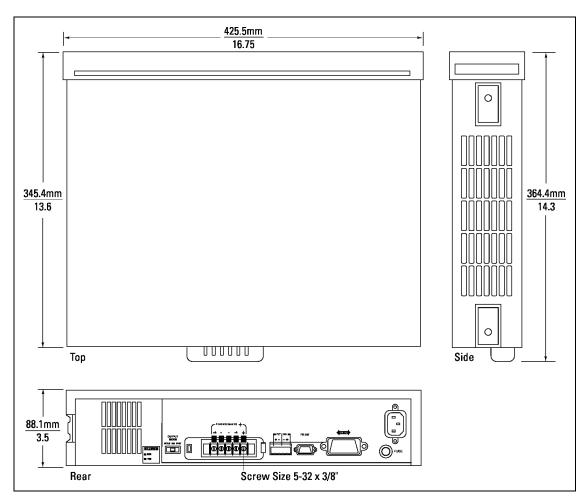


Figure 3-1. Outline Diagram

Input Connections

Connect the Power Cord

- 1. Unscrew the line fuse cap from the rear panel and verify that the fuse rating matches what is specified on the FUSES label on the rear panel. Reinstall the fuse. (See table 3-1 for fuse part numbers.)
- 2. Connect the power cord to the IEC 320 connector on the rear of the unit. If the wrong power cord was shipped with your unit, contact your nearest HP Sales and Support Office (refer to the list at the back of this guide) to obtain the correct cord.

Output Connections

The output terminal block has connections for the + and - output, the + and - sense inputs, and an earth ground terminal. The terminal block screws are 6-32 X 3/8 inch. Remove the safety cover by inserting a flat bladed screwdriver in the opening on the left side of the cover and pushing the locking tab to the left. This will release the cover.

Optional front panel binding posts are available to connect load wires for bench operation. The front panel binding posts are paralleled with the rear panel + and – connections. *Before using the front panel binding posts, make sure that the output terminals are jumpered for local sensing.*

NOTE: Front panel binding posts are provided for convenience. Only the rear panel terminals are optimized for noise, regulation, and transient response as documented in Appendix A.

Wire Considerations

To minimize the possibility of instability on the output,

- keep load leads as short as possible
- bundle or twist the leads tightly together to minimize inductance

Current Ratings

Fire Hazard To satisfy safety requirements, load wires must be large enough not to overheat when carrying the maximum short-circuit current of the dc source. If there is more than one load, then any pair of load wires must be capable of safely carrying the full-rated current of the dc source.

The following table lists the characteristics of AWG (American Wire Gage) copper wire.

Table 0 2. Ampacity and Resistance of Otranded Oopper Obnadetors			
AWG No.	Ampacity (in free air)	Resistance (at 20 deg. C)	
		W/m	₩/ft
20	8.33	0.0345	0.01054
18	15.4	0.0217	0.00663
16	19.4	0.0137	0.00417
14	31.2	0.0086	0.00262
12	40	0.0054	0.00165

Table 3-2. Ampacity and Resistance of Stranded Copper Conductors

3 - Installation

Voltage Drops

The load wires must also be large enough to avoid excessive voltage drops due to the impedance of the wires. In general, if the wires are heavy enough to carry the maximum short circuit current without overheating, excessive voltage drops will not be a problem. The voltage drops across the load wires should be limited to less than two volts. Refer to Table 3-2 to calculate the voltage drop for some commonly used AWG copper wire.

Multiple Load Connections

When the unit is in local sensing mode and you are connecting multiple loads to the output, connect each load to the output terminals using separate load leads. This minimizes mutual coupling effects and takes full advantage of the dc source's low output impedance. Each pair of wires should be as short as possible and twisted or bundled to reduce lead inductance and noise pickup.

If cabling considerations require the use of distribution terminals that are located remotely from the dc source, connect the dc source's output terminals to the remote distribution terminals by a pair of twisted or bundled wires. Connect each load to the distribution terminals separately. Remote voltage sensing is recommended under these circumstances. Sense either at the remote distribution terminals, or if one load is more sensitive than the others, sense directly at the critical load.

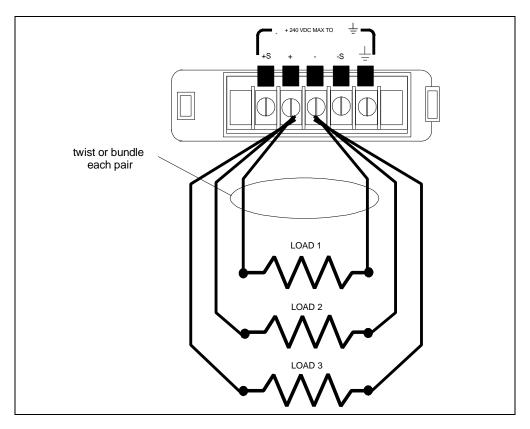


Figure 3-2. Multiple Load Connections

Remote Sense Connections

Under normal operation, the dc source senses the output voltage at the output terminals on the back of the unit. External sense terminals are available on the **back** of the unit that allow the output voltages to be sensed at the load, compensating for impedance losses in the load wiring. *You cannot remote sense at the optional front panel binding posts.*

The output terminal block of the unit is shipped configured for local sensing, with the +S terminal jumpered to +, and the -S terminal jumpered to -. Remove these jumpers when making your sense wire connections. The terminal block screws are 6-32 X 3/8 inch.

Sense Leads

The sense leads are part of the dc source's feedback path and must be kept at a low resistance (less than several ohms) to maintain optimal performance. Connect the sense leads carefully so that they do not become open-circuited. If the sense leads are left unconnected or become open during operation, the dc source will regulate at the output terminals, resulting in a 3% to 5% increase in output over the programmed value. Shorting the sense leads trips the OVP circuit.

NOTE: It is good engineering practice to twist and shield all signal wires to and from the sense connectors. Connect the shield at the dc source end only. Do not use the shield as one of the sensing conductors.

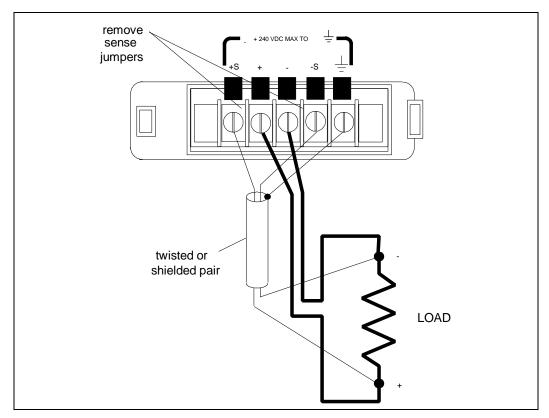


Figure 3-3. Remote Sense Connections

The overvoltage protection circuit senses voltage near the output terminals, not at the load. Therefore the signal sensed by the OVP circuit can be significantly higher than the actual voltage

3 - Installation

at the load. When using remote sensing, you must program the OVP trip voltage high enough to compensate for the voltage drop between the output terminals and the load. Also, if the sum of the programmed voltage and the load-lead drop exceeds the dc source's maximum voltage rating, this may also trip the OV protection circuit.

Stability

When the unit is configured for remote sensing, it is possible for the impedance of the load wires and the capacitance of the load to form a filter, which becomes part of the unit's feedback loop. This can degrade the unit's stability and result in poor transient response performance. In extreme cases it may also cause oscillations. The wiring guidelines previously discussed under "Wire Considerations" will eliminate most stability problems associated with load lead inductance. If additional measures are required:

- keep the load capacitance as small as possible
- use larger diameter load wires to reduce resistance

OVP Considerations

The dc source's OVP circuit contains a crowbar SCR, which effectively shorts the output of the dc source whenever the OVP trips. If an external voltage source such as a battery is connected across the output and the OVP is inadvertently triggered, the SCR will continuously sink a large current from the battery, possibly damaging the dc source.

To avoid this, program the OVP setting to its maximum value to prevent it from inadvertently tripping. Additionally, an internal fuse is connected in series with the SCR. This fuse will open to prevent large currents from damaging the SCR. If this internal fuse has opened, The FS status annunciator will be set. Refer to the Service Manual for instructions about replacing this fuse.

In addition, the OVP circuit's SCR crowbar has been designed to discharge capacitances up to a specific limit. These limits are:

HP 6631B	127,000 μF.
HP 6632B and 66322A	50,000 µF.
HP 6633B	20,000 µF.
HP 6634B	10,000 µF.

If your load capacitance approaches this limit, it is recommended that you do not intentionally trip the OVP and discharge the capacitance through the SCR as part of your normal testing procedure, as this may lead to long-term failure of some components.

Fast/Normal Operation

A switch on the rear of the unit lets you switch between operating in either Fast mode or Normal mode. When set to Fast mode, this switch disconnects the output capacitor that is located inside the unit. Fast mode lets you improve or enhance certain operating characteristics; while at the same time degrading other operating characteristics.

- 1. In Fast mode, the programming time for voltage programming is faster than for normal operation, however, output noise is greater.
- 2. In Fast mode, the absence of the internal output capacitor results in increased output impedance and therefore, greater stability when driving inductive loads. Conversely, the addition of external capacitive loads in Fast mode will reduce the stability of the unit during constant voltage operation.
- 3. In Normal mode, the internal output capacitor helps control peak voltage excursions away from the the nominal value for sudden changes in load current. In Fast mode, larger peak voltage excursions will show up at the output of the unit during sudden load current changes.

Capacitive Loading

In Normal mode, the dc source will be stable for many load capacitances, however, large load capacitances may cause ringing in the dc source's transient response. If this occurs, the problem may be solved by increasing or decreasing the total load capacitance.

In Fast mode, the dc source can maintain stability only for small capacitive loads. These limits are: HP 6631B 2.2 µE

III 0001B	2.2μ r.
HP 6632B and 66322A	1.0 µF.
HP 6633B	0.22 μF.
HP 6634B	0.10 µF.

Inductive Loading

Fast mode is recommended for driving inductive loads, although you will typically experience stable conditions in Normal mode. Inductive loads present no loop-stability problems in constant voltage operation, but may cause problems in constant current operation if the load impedance is outside the boundaries mentioned below.

The ratio of the load inductance (L) to the sum of the Equivalent Series Resistance (ESR) for the load (R1) and dc source (Rs), determines whether the source can drive a load without becoming unstable. To help determine this ratio, the value of Rs is listed as:

HP 6631B	0.1 ohm.
HP 6632B and 66322A	0.2 ohm.
HP 6633B	1.0 ohm.
HP 6634B	2.0 ohm.

If the ratio L/(R1 + Rs) is less than 0.005, the dc source can reliably drive the load.

INH/FLT Connections

3 - Installation

This rear panel connector, has a fault output port and an inhibit input port. The fault (FLT) output, also referred to as the DFI (discrete fault indicator) signal in the front panel and SCPI commands, is an open collector circuit that pulls the positive output low with respect to the negative (chassis referenced) common. The high impedance inhibit (INH) input, also referred to as the RI (remote inhibit) signal in the front panel and SCPI commands, is used to shut down the power supply output whenever the INH + is pulled low with respect to INH (chassis referenced) common.

The connector accepts wires sizes from AWG 22 to AWG 12. Disconnect the mating plug to make your wire connections.

NOTE:	It is good engineering practice to twist and shield all signal wires to and from the
	digital connectors. If shielded wire is used, connect only one end of the shield to
	chassis ground to prevent ground loops.

Figure 3-4 shows how you can connect the FLT/INH circuits of the dc source.

In example A, the INH input connects to a switch that shorts the Inhibit pin (+) to common whenever it is necessary to disable output of the unit. This activates the remote inhibit (RI) circuit, which turns off the dc output. The front panel Prot annunciator comes on and the RI bit is set in the Ouestionable Status Event register. To re-enable the unit, first open the connection between pins INH + and common and then clear the protection circuit. This can be done either from the front panel or over the HP-IB/RS-232.

In example B, the FLT output of one unit is connected to the INH input of another unit. A fault condition in one of the units will disable all of them without intervention either by the controller or external circuitry. The controller can be made aware of the fault via a service request (SRQ) generated by the Questionable Status summary bit. Note that the FLT output can also be used to drive an external relay circuit or signal other devices whenever a user-definable fault occurs.

Digital I/O Connections

As shown in Table 3-3 and Figure 3-5, the FLT/INH connector can also be configured as a digital I/O port. Information on programming the digital I/O port is found in chapter 5 and under [SOURce:]DIGital:DATA and [SOURce:]DIGital: FUNCtion commands in the Programming Guide. The electrical characteristics of the digital connector are described in appendix A.

Table 3-3. FLI/INH DIGItal I/O Connector		
PIN	FAULT/INHIBIT	DIGITAL I/O
1	FLT Output	Output 0
2	FLT Common	Output 1
3 INH Input		Input/Output 2
4	INH Common	Common

Table 3-3.	FLT/INH	DIGital I/	O Connector
------------	---------	------------	-------------

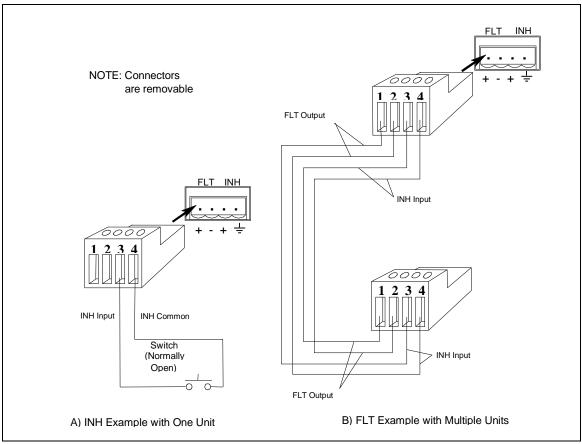


Figure 3-4. FLT/INH Examples

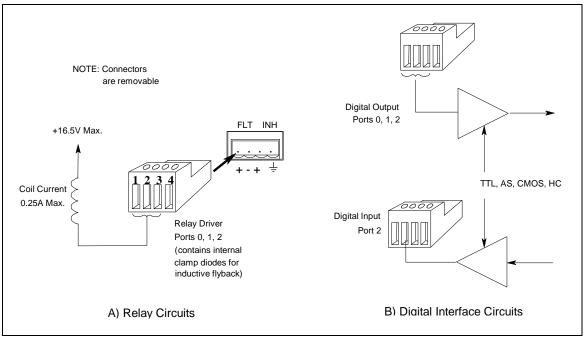


Figure 3-5. Digital I/O Examples

Controller Connections

The dc source connects to a controller either through an HP-IB or an RS-232 connector.

HP-IB Interface

Each dc source has its own HP-IB bus address, which can be set using the front panel **Address** key as described in chapter 5. HP-IB address data is stored in non-volatile memory. The dc source is shipped with its HP-IB address set to 5.

Dc sources may be connected to the HP-IB interface in series configuration, star configuration, or a combination of the two, provided the following rules are observed:

- The total number of devices including the controller is no more than 15.
- The total length of all cables used is no more than 2 meters times the number of devices connected together, up to a maximum of 20 meters. (Refer to table 2-2 for a list of HP-IB cables available from Hewlett-Packard.)
- Do not stack more than three connector blocks together on any HP-IB connector.
- Make sure all connectors are fully seated and the lock screws are firmly finger-tightened.

RS-232 Interface

The dc source has an RS-232 programming interface, which is activated by commands located in the front panel **Address** menu. All SCPI and COMPatibility commands are available through RS-232 programming. When the RS-232 interface is selected, the HP-IB interface is disabled.

The RS-232 connector is a DB-9, male connector. Adapters are available to connect the dc source to any computer or terminal with a properly configured DB-25 connector (see Table 2-2).

 


Figure 3-5. RS-232 Connector

Pin	Input/Output	Description	
1	-	no connection	
2	Input	Receive Data (RxD)	
3	Output	Transmit Data (TxD)	
4	Output	Data Terminal Ready (DTR)	
5	Common	Signal ground	
6	Input	Data Set Ready (DSR)	
7	Output	Request to Send (RQS)	
8	Input	Clear to Send (CTS)	
9	-	no connection	

Turn-On Checkout

Introduction

 
Successful tests in this chapter provide a high degree of confidence that the dc source is operating properly. For verification tests, see appendix B. Complete performance tests are given in the Service Guide.

NOTE: This chapter provides a preliminary introduction to the dc source front panel. See chapter 5 for more details.

Using the Keypad

(shift)

Some of the front panel keys perform two functions, one labeled in black and the other in blue. You access the blue function by first pressing the shift key. Release the key after you press it. The **Shift** annunciator will be on, indicating that you have access to any key's shifted function.



These keys let you scroll up and down through the choices in the presently selected function menu. All menu lists are circular; you can return to the starting position by continuously pressing either key.



These keys let you select the previous or the next parameter for a specific command. If the command has a numeric range, these keys increment or decrement the existing value. In meter mode, these keys can be used to adjust the magnitude of the output voltage or current. Only the flashing digit is changed by these keys. Use the \mathbf{a} and $\mathbf{\hat{a}}$ keys to move the flashing digit.

(**á**) and (**â**)

These **Entry** keys move the flashing digit in a numeric entry field to the right or left. This lets you increment or decrement a specific digit in the entry field using the $\mathbf{\tilde{a}}$ and $\mathbf{\ddot{a}}$ keys or the RPG knob.



Enter

The backspace key is an erase key. If you make a mistake entering a digit and have not yet pressed **Enter**, you can delete the digit by pressing **Backspace**. Delete more digits by repeatedly pressing this key.

Executes the entered value or parameter of the presently accessed command. Until you press this key, the parameters you enter with the other keys are displayed but not entered into the dc source. After pressing **Enter**, the dc source returns to Meter mode.

Checkout Procedure

The test in this section checks for output voltage and current on the dc source.

NOTE:	To perform the checkout procedure, you will need a wire for shorting the output
	terminals together.

The following procedure assumes that the unit turns on in the factory-default state. If you need more information about the factory default state, refer to the *RST command in chapter 4 of the Programming Guide. Note that the values shown in the Display column may not exactly match the values that appear on the front panel of your unit.

If you have not already done so, connect the power cord to the unit and plug it in.

Table 4-1. Checkout Programming Values				
Model	Voltage	OV Prot	Current	Note:
6631B	8	8.8	10	This checkout procedure is written for
				models
6632B/66332A	20	22	5	6632B and 66332A. If you have another
6633B	50	55	2	model, enter the correct values from the table
6634B	100	110	1	Where the procedure calls for an <input/> .

	Procedure	Disp	olay	Explanation
1.	Turn the unit on. The dc source undergoes a self- test when you first turn it on.	****** ADDR 0.2410V		During selftest, all display segments are briefly lit, followed by the HP-IB Address. The display then goes into meter mode with the Dis annunciator on, and all others off. In Meter mode the *****V digits indicate the output voltage and the *****A digits indicate the output current. The flashing digit on the display indicates the digit that will be affected if changes are made to the displayed values using the rotary control or the ã and ä keys. You will only see the changes if the output is ON.
NO	TE: Press the Meter	er key to exi	t a menu	at any time and return to meter mode. If the Err

TE: Press the Meter key to exit a menu at any time and return to meter mode. If the Err annunciator on the display is on, press the **Shift** key followed by the **Error** key to see the error number. See table 4-2 at the end of this chapter.

2.	Check that the dc source fan is on		You should be able to hear the fan and feel the air coming from the back of the unit.
3.	Press Voltage, <2, 0>, Enter	VOLT 0.000 VOLT <20>	Programs the output to the selected voltage. After the value is entered, the display returns to Meter mode. Because the output has not been enabled, the meter still indicates 0 volts.
4.	Press Output On/Off	<20.003V> 0.0006A	Turns the output on. The Dis annunciator should be off and CV should be on.
5.	Press Shift, OV	VOLT:PROT <22.00>	Display shows the overvoltage protection trip voltage for your unit.

	Procedure	Display	Explanation
6.	Press 5, Enter	VOLT:PROT 5 0.449V 0.145A	Programs the OVP to 5 volts, which is less than the previously set output voltage. Because the OVP voltage entered was less than the output voltage, the OVP circuit tripped. The output dropped to zero, CV turned off, and Prot turned on.
7.	Press Shift, OV, <2, 2>, Enter	VOLT:PROT <22>	Programs the OVP to a value greater than the output voltage setting of the unit. This prevents the OV circuit from tripping again when the protection condition is cleared.
8.	Press Shift, Prot Clear	<20.003V> 0.0034A	Clears the protection condition, thus restoring the output of the unit. Prot turns off and CV turns on.
9.	Press Output on/off		Turn the output off.
10.	Connect a jumper wire across the + and - output terminals.		Shorts the output of the unit.
11.	Press Output on/off.	0.0005V <0.5005>A	The CC annunciator is on, indicating that the unit is in constant current mode. The unit is sourcing output current at 10% of the maximum rating (the default output current limit setting).
12.	Press Current, <5>, Enter.	0.0452V <5.002>A	Programs the output current to the selected amperes.
13.	Press Shift, OCP	0.0005V 0.0003A	You enabled the overcurrent protection circuit. The circuit then tripped because the unit was operating in constant current mode. The CC annunciator turns off and the OCP and Prot annunciators come on.
14.	Press Shift, OCP	0.0005V 0.0003A	You have disabled the overcurrent protection circuit. The OCP annunciator turns off.
15.	Press Shift, Prot Clear	0.0452V <5.002A>	Restores the output. The Prot annunciator turns off. CC is on.
16.	Turn the unit off and remove the shorting wire from the output terminals.		The next time the unit turns on it will be restored to the *RST or factory default state.

In Case of Trouble

Error Messages

Dc source failure may occur during power-on selftest or during operation. In either case, the display may show an error message that indicates the reason for the failure.

Selftest Errors

Pressing the **Shift, Error** keys will show the error number. Selftest error messages appear as: ERROR <n> where "n" is a number listed in the following table. If this occurs, turn the power off and then back on to see if the error persists. If the error message persists, the dc source requires service.

Error No.	Failed Test
Error 0	No error
Error 1	Non-volatile RAM RD0 section checksum failed
Error 2	Non-volatile RAM CONFIG section checksum failed
Error 3	Non-volatile RAM CAL section checksum failed
Error 4	Non-volatile RAM STATE section checksum failed
Error 5	Non-volatile RST section checksum failed
Error 10	RAM selftest
Error 11 to 14	VDAC/IDAC selftest 1 to 4
Error 15	OVDAC selftest
Error 80	Digital I/O selftest error

Table 4-2. Power-On Selftest Errors

Runtime Error Messages

Line Fuse

If the dc source appears "dead" with a blank display and the fan not running, check your power source to be certain line voltage is being supplied to the dc source. If the power source is normal, the dc source fuse may be defective.

- 1. Turn off the front panel power switch and unplug the power cord.
- 2. Remove the fuse from the rear panel.
- 3. If the fuse is defective, replace it with a fuse of the same type (see "Input Connections" in chapter 3).
- 4. Turn on the dc source and check the operation.

NOTE: If the dc source has a defective fuse, replace it only once. If it fails again, the dc source requires service.

Front panel Operation

Introduction

Here is what you will find in this chapter:

- a complete description of the front panel controls
- front panel programming examples
- **NOTE:** The dc source must be in set to Local mode to use the front panel controls. Press the **Local** key on the front panel to put the unit in local mode.

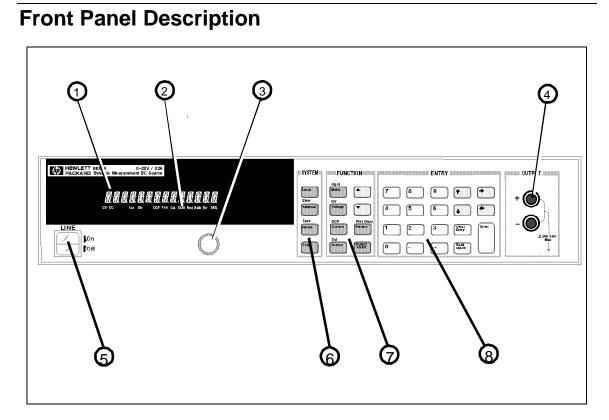


Figure 5-1. Front Panel, Overall View

5 - Front Panel Operation


🛩 Display	14-character vacuum fluorescent display for showing output measurements and programmed values.			
X Annunciators	 Annunciators light to indicate operating modes and status conditions: CV The dc source output is in constant-voltage mode. CC The dc source output is in constant-current mode. Unr The dc source output is in an unregulated state. Dis The dc source output is disabled (off). OCP The overcurrent protection state is enabled. Prot One of the dc source's output protection features is activated. Cal The dc source is in calibration mode. Shift The Shift key is pressed to access an alternate key function. Rmt The selected interface (HP-IB or RS-232) is in a remote state. Addr The interface is addressed to talk or to listen. Err There is a message in the SCPI error queue. SRQ The interface is requesting service from the controller. 			
+ Rotary Control	The rotary control lets you set the output voltage or current as well as menu parameters. Press \mathbf{a} and \mathbf{a} to select the resolution, then adjust the value with the knob.			
Ý Output Connectors	Optional front panel binding posts let you connect loads to the front of the unit. Before using the front panel binding posts, make sure that the output terminals are jumpered for Local sensing.			
Line	This turns the dc source on or off.			
🛥 System Keys	The system keys let you: Return to Local mode (front panel control) Set the dc source HP-IB address Set the RS-232 interface communication baud rate and parity bit Display SCPI error codes and clear the error queue Save and recall up to 4 instrument operating configurations			
Function Keys	 Function access command menus that let you: Enable or disable the output Select metering functions Program output voltage and current Display the protection status state Set and clear protection functions Set the output state at power-on Calibrate the dc source p and q scroll through the front panel menu commands 			
() Entry Keys	Entry keys let you: Enter programming values Increment or decrement programming values ā and ä select the front panel menu parameters			

System Keys

Refer to the examples later in this chapter for more details on the use of these keys.

SYSTEM
Local
Error
Save
Shift

Figure 5-2. System Keys

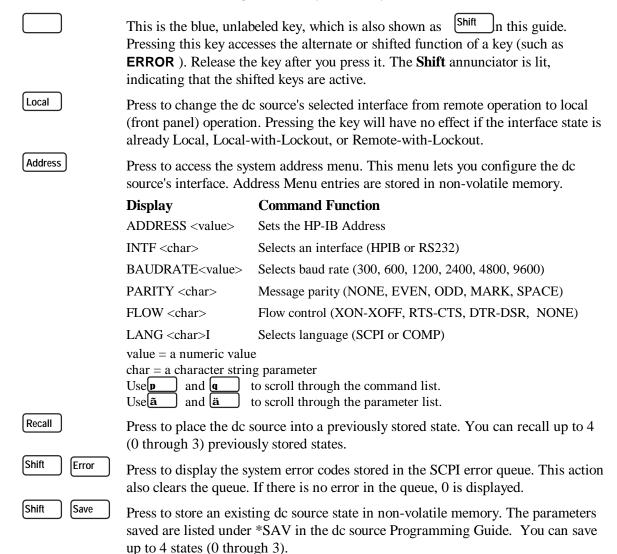

Function Keys

Refer to the examples later in this chapter for more details on the use of these keys.

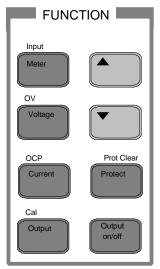


Figure 5-3. Function Keys

Immediate Action Keys

Immediate action keys immediately execute their corresponding function when pressed. Other function keys have commands underneath them that are accessed when the key is pressed.



Shift

This key toggles the output of the dc source between the on and off states. It immediately executes its function as soon as you press it. When off, the dc source output is disabled and the **Dis** annunciator is on.



Press this key to reset the protection circuit and allow the unit to return to its last programmed state. The condition that caused the protection circuit to become active must be removed prior to pressing this key, or the unit will shut down again and display the **Prot** annunciator again. (If **FS** protection is displayed on the front panel, the unit must be opened and an internal fuse replaced as described in the Service manual.)

Press this key to toggle between OCP enabled and disabled. If OCP is enabled the output will become disabled if the output mode changes from CV to CC mode. The OCP annunciator indicates the state of OCP.

Scrolling Keys

(OCP

Scrolling keys let you move through the commands in the presently selected function menu.



Press **q** to bring up the next command in the list. Press **p** to go back to the previous command in the list. Function menus are circular; you can return to the starting position by continuously pressing either key. The following example shows the commands in the Input function menu:



CURR:RANGE <char>

CURR:DET <char>

Metering Keys

Metering keys control the metering functions of the dc source. When the unit is operating in front panel meter mode, all front panel measurements are calculated from a total of 2048 readings taken at a 46.8 microsecond sampling rate. Therefore, the total acquisition time for a single front panel measurement is about 100 milliseconds. Refer to "Making Front Panel Measurements" for more information.

NOTE:	You can vary the both the sampling rate and the number of data points in each measurement when controlling the unit over the HP-IB interface. (Refer to chapter 3 in the Programming Guide).	
Meter	Press this key to access the meter menu list. Also use this key to exit a menu at any time and return to meter mode.	
	Display	Measurement
	<reading>V <reading>A</reading></reading>	Measures output dc voltage and current
	<reading>V MAX</reading>	Measures peak output voltage ¹
	<reading>V MIN</reading>	Measures minimum output voltage ¹
	<reading>V HIGH</reading>	Measures the high level of a voltage pulse waveform ¹
	<reading>V LOW</reading>	Measures the low level of a voltage pulse waveform ¹
	<reading>V RMS</reading>	Measures rms voltage ¹
	<reading>A MAX</reading>	Measures peak output current ¹
	<reading>A MIN</reading>	Measures minimum output current ¹
	<reading>A HIGH</reading>	Measures the high level of a current pulse waveform ¹
	<reading>A LOW</reading>	Measures the low level of a current pulse waveform ¹
	<reading>A RMS</reading>	Measures rms current ¹

Shift | Input

Press this key to access the following metering functions.

Display	Command Function
CURR:RANGE <char></char>	Select current range (AUTO, LOW or HIGH)
CURR:DET <char></char>	Select current measurement bandwidth $(ACDC \text{ or } DC)^1$

Notes:

¹ Available on HP Model 66332A in SCPI language mode only. reading = the returned measurement value = a numeric value char = a character string parameter

Use **b** and **c** to scroll through the menu commands. Use **a** and **a** to scroll through the menu parameters.

Use **a** and **a** to select a digit in a numeric entry field.

5 - Front Panel Operation

Output Control Keys

Output control keys control the output functions of the dc source.

Voltage	Press this key to access the voltage menu.		
Tonuge	Display Command Function		
	VOLT <value></value>	Sets the output voltage	
Current	Press this key to acces		
Current		Command Function	
	Display CURR <value></value>		
		Sets the output current	
Output	-	s the output menu list.	
	Display	Command Function	
	*RST	Places the dc source in the factory-default state	
	PON:STATE <char></char>	Select the power-on state command (RST or RCL0) ¹	
	RI <char></char>	Sets the remote inhibit mode (LATCHING, LIVE, or OFF) ¹	
	DFI <char></char>	Sets the discrete fault indicator state (ON or OFF)	
	DFI:SOUR <char></char>	Selects the DFI source (QUES, OPER, ESB, RQS, or OFF) ²	
	PORT <char></char>	Sets the output port functions (RIDFI or DIGIO) ¹	
	DIGIO <char></char>	Sets and reads the I/O port value (0 through 7)	
	RELAY <char></char>	Set relay state independent of output (``ON" or ``OFF")	
	REL:POL <char></char>	Set relay polarity (``NORM" or ``REV").	
	PROT:DLY <value></value>	Sets the output protection delay in seconds	
Protect	Press this key to displa	ay protection status.	
	Display	Command Function	
	OC OT OV RI FS	Status of the protection features (example shows all tripped)	
		Status of the protection features (example shows none tripped)	
Shift OV	Press this key to acces	s the overvoltage protection menu.	
	Display	Command Function	
	VOLT:PROT <value></value>	Sets overvoltage protection level	
Shift Cal	This key accesses the source).	calibration menu (Refer to Appendix B to calibrate your dc	

Notes:

¹These parameters are stored in non-volatile memory


²These status summary bits are explained in chapter 3 of the Programming Guide value = a numeric value

char = a character string parameter

Use **p** and **q** to scroll through the menu commands.

Use **a** and **b** to scroll through the menu parameters. Use **a** and **a** to select a digit in a numeric entry field.

Entry Keys

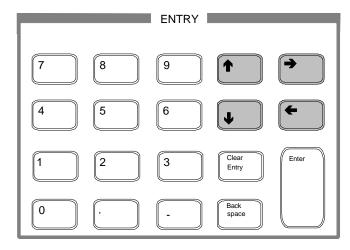

Refer to the examples later in this chapter for more details on the use of these keys.

Figure 5-4. Entry Keys

These keys let you scroll through choices in a **parameter** list that apply to a specific command. Parameter lists are circular; you can return to the starting position by continuously pressing either key. If the command has a numeric range, these keys increment or decrement the existing value. In meter mode, these keys can be used to adjust the magnitude of the output voltage or current. Only the flashing digit is changed by these keys. Use the **a** and **a** keys to move the flashing digit.



ã

ä

These keys move the flashing digit in a numeric entry field to the right or left. This lets you increment or decrement a specific digit in the entry field using the $\mathbf{\tilde{a}}$ and $\mathbf{\ddot{a}}$ keys or the RPG knob.



0 through **9** are used for entering numeric values. . is the decimal point. - is the minus sign. For example, to enter 33.6 press: **Enter Number, 3, 3, . , 6, Enter**.





Enter

This key aborts a keypad entry by clearing the value. This key is convenient for correcting a wrong value or aborting a value entry. The display then returns to the previously set function.

The backspace key deletes the last digit entered from the keypad. This key lets

you correct one or more wrong digits before they are entered.

This key executes the entered value or parameter of the presently accessed command. Until you press this key, the parameters you enter with the other Entry keys are displayed but not entered into the dc source. Before pressing **Enter**, you can change or abort anything previously entered into the display. After **Enter** is pressed, the dc source returns to Meter mode.

Examples of Front Panel Programming

You will find these examples on the following pages:

- 1 Setting the output voltage and current
- 2 Querying and clearing output protection
- 3 Making front panel measurements
- 4 Programming the digital port
- 5 Programming the output relay (Option 760 only)
- 6 Setting the HP-IB address or RS-232 parameters
- 7 Saving and recalling operating states

Similar examples are given in the dc source Programming Guide using SCPI commands.

1 - Setting the Output Voltage and Current

Set the output voltage

	Action	Display
1.	To enter an approximate value without using the voltage menu: On the Entry keypad, press $\hat{\mathbf{a}}$ or $\hat{\mathbf{a}}$ to select the 1's digit in the voltage field. Then rotate the front panel RPG knob to obtain 7 V. If the unit is in CC mode, you won't see the output voltage change until the	7.003V 0.004A
	voltage setting is low enough to cause the unit to go into CV mode.	
2.	The easiest way to enter an accurate value: On the Function keypad, press Voltage . On the Entry keypad, press 7 , Enter .	VOLT 7.000
3.	To make minor changes to an existing value: On the Function keypad, press Voltage . On the Entry keypad, press \hat{a} or \hat{a} to select the digit in the numeric field that you wish to change. For example, move the flashing digit to the ones column to change a value in this column. Then, press \tilde{a} to scroll from 7.000 to 8.000. Then press Enter .	VOLT 8.000
Set	the output current	
	Action	Display
1.	To enter an approximate value without using the current menu: On the Entry keypad, press \hat{a} or \hat{a} to select the tenths digit in the current field. Rotate the front panel RPG knob to obtain 0.9A. If the unit is in CV mode, you won't see the output current change until the current setting is low enough to cause the unit to go into CC mode.	8.003V 0.900A
2.	The easiest way to enter an accurate value: On the Function keypad, press Current . On the Entry keypad, press ., 9 , Enter .	CURR 0.900
3.	To make minor changes to an existing value: On the Function keypad, press Current . On the Entry keypad, press \hat{a} or \hat{a} to select the digit in the numeric field that you wish to change. For example, move the flashing digit to the tenths column to change a value in this column. Then, press \tilde{a} to scroll from 0.900 to 1.000. Then press Enter .	CURR 1.000
Ena	ble the output	
	Action	Display
1.	On the Function keypad, press Output On/Off to enable the output. The Dis annunciator will go off, indicating that the voltage is now applied to the output terminals. The A display indicates the actual output current.	8.003V 1.000A

2 - Querying and Clearing Output Protection

The dc source will disable its output if it detects an overvoltage or overcurrent fault condition. Other automatic fault conditions (such as overtemperature) also will disable the output.

Query and clear the dc source overcurrent protection feature as follows:

	Action	Display
1.	On the Function keypad, press Protect . In this example, OC indicates that an overcurrent condition has occurred. Other protection indicators are: OT (overtemperature), OV (overvoltage), RI (remote inhibit), and FS (internal fuse is open).	OC
2.	On the Function keypad, press Current . This displays the present output current limit. (10% of the maximum rating is the default current limit setting).	CURR 0.2045 (2 amp unit)
3.	To restore normal operation <i>after the cause of the overcurrent condition has been removed</i> , press Shift, Prot Clr . The OCP annunciator then will go	

3 - Making Front Panel Measurements

off.


When the dc source is operating in front panel meter mode, all front panel measurements are calculated from a total of 2048 readings taken at a 46.8 microsecond sampling rate. The unit alternates between voltage and current measurements. Therefore, the data acquisition time for a single front panel voltage or current measurement is about 100 milliseconds. The sample rate and number of data points are fixed, and there are no trigger controls for front panel measurements. This fixed sampling rate and data acquisition time combined with a built-in windowing function, reduces errors due to sampling a non-integral number of cycles of a waveform for frequencies of 25 Hz or greater. Note that the windowing function is less accurate when measuring output waveforms for frequencies less than 25 Hz, causing the front panel meter to jitter.

When controlling the unit over the HP-IB interface, you can vary both the sampling rate and the number of data points in each measurement. If you are using the HP 66332A dc source to measure waveform data, the HP-IB interface also lets you qualify the triggers that initiate the measurements. With this flexibility, measurement accuracy can be improved for waveforms with frequencies as low as several Hertz. Refer to chapter 3 in the Programming Guide for more information.

Two current measurement ranges can be selected in the Input menu. A high current range is available for measuring output currents up to the 30% higher than the maximum rating of the dc source. A low current range is available for improved resolution when measuring output currents below 20 milliamperes. The low current measurement range is accurate to 0.1% of the reading ± 2.5 microamperes. When the current Range is set to AUTO, the unit automatically selects the range that provides the best measurement resolution.

5 - Front Panel Operation

As previously mentioned, the HP 66332A dc source has the capability of measuring output waveform parameters such as peak, minimum, high level, and low level as illustrated in the following figure.

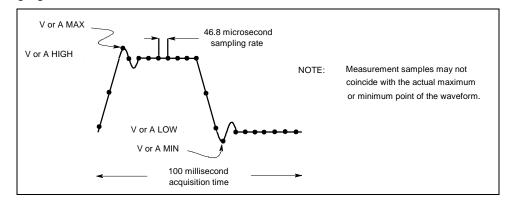



Use the Meter menu for making front panel measurements:

Use the Weter menu for making if one panel measurements.			
Action	Display		
For current measurements, press Shift, Input . Then press ä until ye obtain the CURR:RANG AUTO command. Press Enter to activate autoranging. Two other selections are also available. Select the High range when measuring currents above 20 mA. Select the Low range f improved resolution when measuring currents below 20 mA.			
For output waveform measurements, press Shift, Input . Then press of until you obtain the CURR:DET command. Check to make sure that a ACDC current detector is selected. This provides the best accuracy for waveform measurements. Only select the DC current detector if you a making dc current measurements and you require a dc measurement offset better than 1mA on the High current measurement range.	the r		
In the Low current measurement range, the current det the current detector in dc, accurate current measurement waveforms with frequency contents over a few kHz.			
On the Function keypad press Meter and press q repeatedly to access the following measurement parameters: dc voltage and current peak voltage¹ minimum voltage¹ high level of a voltage pulse waveform¹ low level of a voltage pulse waveform¹ minimum current¹ peak current¹ high level of a current pulse waveform¹ low level of a current pulse waveform¹ minimum current¹ high level of a current pulse waveform¹ low level of a orter pulse waveform¹ 	<reading>V <reading>A <reading>V MAX <reading>V MIN <reading>V HIGH <reading>V LOW <reading>V RMS <reading>A MAX <reading>A MIN <reading>A HIGH <reading>A LOW <reading>A RMS</reading></reading></reading></reading></reading></reading></reading></reading></reading></reading></reading></reading>		
	 Action For current measurements, press Shift, Input. Then press ä until yo obtain the CURR:RANG AUTO command. Press Enter to activate autoranging. Two other selections are also available. Select the High range when measuring currents above 20 mA. Select the Low range f improved resolution when measuring currents below 20 mA. For output waveform measurements, press Shift, Input. Then press of until you obtain the CURR:DET command. Check to make sure that a ACDC current detector is selected. This provides the best accuracy for waveform measurements. Only select the DC current detector if you a making dc current measurements and you require a dc measurement offset better than 1mA on the High current measurement range. e: In the Low current measurement range, the current detector in dc, accurate current measurement waveforms with frequency contents over a few kHz. On the Function keypad press Meter and press q repeatedly to access the following measurement parameters: dc voltage and current peak voltage¹ high level of a voltage pulse waveform¹ low level of a voltage pulse waveform¹ high level of a current pulse waveform¹ high level of a current pulse waveform¹ 		

4 - Programming the Digital Output Port

Your dc source is shipped with the output port function set to RIDFI mode. In this mode the port functions as a remote inhibit input with a discrete fault indicator output signal. You can also configure the port to act as a Digital Input/Output device.

To configure the RIDFI mode of the port, proceed as follows:

	Action	Display
1.	On the Function keypad, press Output .	*RST
2.	Scroll through the Output menu by pressing ${\bf q}$. The PORT command lets you select either the RIDFI or the DIGIO function.	PORT RIDFI
3.	Scroll to the RI command to configure the Remote INHibit indicator. Use the $\tilde{\mathbf{a}}$ and $\ddot{\mathbf{a}}$ keys to select either LIVE or LATCHING, either of which enable the RI indicator. With RI enabled, a low-true on the INH input will disable the output of the unit. LIVE causes the output of the unit to track the state of the INH input. LATCHING latches the output of the unit off in response to the inhibit signal.	RI LIVE RI LATCHING
4.	Access the Output menu again and scroll through the menu. The DFI command lets you enable the Discrete Fault Indicator. Use the \ddot{a} key and select ON to enable the FLT output. With the FLT output enabled, the open-collector logic signal can be used to signal external devices when a fault condition is detected.	DFI ON
5.	Scroll to the DFI:SOUR command to select the internal source that drives this signal. Use the \ddot{a} key to select from the RQS or ESB bits, or the Operation or Questionable status registers. Status summary bits are explained in chapter 3 of the Programming Guide.	DFI:SOUR RQS DFI:SOUR ESB DFI:SOUR OPER DFI:SOUR QUES
To c	onfigure the DIGIO mode of the port, proceed as follows:	
	Action	Display
1.	On the Function keypad, press Output .	*RST
2.	Scroll through the Output menu by pressing ${\bf q}$. The PORT command lets you select either the RIDFI or the DIGIO function.	PORT DIGIO
3.	Scroll to the DIGIO command to set and read the Digital Input/Output Port. Enter a number from 0 to 7 to program the four bits (0 programs	DIGIO 5

all bits low; 7 programs all bits high). Press Enter when done.

5 - Front Panel Operation

5 - Programming the Output Relay (option 760 only)

Units with option 760 have isolation and polarity reversal relays connected to the output and sense terminals. (Option 760 is not available on HP 6631B units.)

To control the relays independently of the Output On/Off switch, proceed as follows:

	Action	Display	
1.	On the Function keypad, press Output , and scroll through the Output menu until you get to the RELAY command. The display indicates whether the relay is presently closed (ON), or open (OFF).	RELAY ON	
2.	Use the ã and ä keys to select either ON to close the relay or OFF to open the relay. <i>Note that the output relays always open or close whenever the Output On/Off key is pressed.</i>	RELAY OFF	
To co	To control the polarity of the output relays, proceed as follows:		
	Action	Display	
1.	On the Function keypad, press Output , and scroll through the Output menu until you get to the REL:POL command. The display indicates the present condition of the relay (either normal or reversed).	REL:POL NORM	
2.	Use the $\mathbf{\tilde{a}}$ and $\mathbf{\ddot{a}}$ keys to select either NORM or REV. NORMal causes the relay polarity to be the same as the dc source output REVerse causes the relay polarity to be opposite to that of the dc source output.	RELAY OFF	

6 - Setting the HP-IB Address and RS-232 Parameters

Your dc source is shipped with the HP-IB address set to 5 This address can only be changed from the front panel using the Address menu located under the Address key. This menu is also used to select the RS-232 interface and specify RS-232 parameters such baud rate and parity.

Set the HP-IB address as follows:

	Action	Display
1.	On the System keypad, press Address.	ADDRESS 5
2.	Enter the new address. For example, Press 7 , Enter .	ADDRESS 7
Con	figure the RS-232 interface as follows:	
	Action	Display
1.	On the System keypad, press Address.	ADDRESS 5
2.	Scroll through the Address menu by pressing ${\bf q}$. The interface command lets you select the RS-232 interface. The baudrate command lets you select the baudrate. The parity command lets you select the parity. The flow command selects the flow control options.	INTF RS232 BAUDRATE 9600 PARITY EVEN XON-XOFF
3.	The $\tilde{\mathbf{a}}$ and $\ddot{\mathbf{a}}$ keys let you select the command parameters.	

7 - Saving and Recalling Operating States

NOTE:	This capability is only available when the unit is set to the SCPI programming
	language.

You can save up to 4 states (from location 0 to location 3) in non-volatile memory and recall them from the front panel. All programmable settings are saved.

Save an operating state in location 1 as follows:

	Action	Display
1.	Set the instrument to the operating state that you want to save.	
2.	Save this state to location 1. Press Save, 1, Enter.	*SAV 1
Rec	all a saved state as follows:	
	Action	Display
1.	Recall the state saved in location 1 by pressing Recall, 1, Enter	*RCL 1
Sele	ect the power-on state of the dc source as follows:	
	Action	Display
1.	On the Function keypad, press Output , and scroll through the Output menu until you get to the PON state command.	PON:STATE RST
2.	Use the $\tilde{\mathbf{a}}$ and $\ddot{\mathbf{a}}$ keys to select either RST or RCL0. RST sets the power- on state of the unit as defined by the *RST command. RCL0 sets the power-on state of the unit to the state saved in *RCL location 0.	
Cle	ar the non-volatile memory of the dc source as follows:	
	Action	Display
1.	On the Function keypad, press Output, Enter . This returns the unit to the factory-default settings.	*RST
2.	Save these settings to location 1. Press Save, 1, Enter.	*SAV 1
3.	Repeat step #2 for memory locations 2 through 4	*SAV 2 *SAV 3 *SAV 4

Specifications

Specifications

Table A-1 lists the specifications of the dc source. Specifications are warranted over the ambient temperature range of 0 to 55 °C. Unless otherwise noted, specifications apply when measured at the rear terminals after a 30-minute warm-up period.

Parameter		HP 6631B	HP 6632B	HP 6633B	HP 6634B	
			HP 66332A			
Output Ratings	Voltage:	0 – 8 V	0 – 20 V	0 – 50 V	0 – 100 V	
• 0	Current:	0 – 10A	0 - 5A	0 – 2 A	0 – 1A	
Programming Accuracy	Voltage:	0.05% + 5 mV	0.05% + 10 mV	0.05% + 20 mV	0.05% + 50 mV	
(@ 25C ±5°C)	+Current:	0.05% + 4 mA	0.05% + 2 mA	0.05% + 1 mA	0.05% + 0.5 mA	
DC Measurement	Voltage:	0.03% + 2 mV	0.03% + 3 mV	0.03% + 6 mV	0.03% + 12 mV	
Accuracy	Low Current range					
(via HP-IB or front panel	-20 mA to +20 mA:	$0.1\% + 2.5 \ \mu A^1$				
meters with respect to	High Current range					
actual output at 25C	+20 mA to +rated I:	$0.2\% + 1 \text{ mA}^2$	$0.2\% + 0.5 \text{ mA}^2$	$0.2\% + 0.25 \text{ mA}^2$	$0.2\% + 0.25 \text{ mA}^2$	
±5°C)	-20 mA to -rated I:	0.2% + 1.6 mA	0.2% + 1.1 mA	0.2% + 0.85 mA	0.2% + 0.85 mA	
Ripple and Noise	Normal mode voltage					
(in the range of 20 Hz to	(rms/p-p):	$0.3 \text{ mV}/3 \text{ mV}^3$	$0.3 \text{ mV}/3 \text{ mV}^3$	$0.5 \text{ mV}/3 \text{ mV}^3$	$0.5 \text{ mV}/3 \text{ mV}^3$	
20 MHz with outputs	Fast mode voltage					
ungrounded or with	(rms/p-p):	1 mV/10 mV	1 mV/10 mV	1 mV/15 mV	2 mV/25 mV	
either terminal grounded)	Current (rms):	3 mA	2 mA	2 mA	2 mA	
Load Regulation ⁴	Voltage:	2 mV	2 mV	4 mV	5 mV	
(change in output voltage	Current:	2 mA	1 mA	1 mA	1 mA	
or current for any load						
change within ratings)						
Line Regulation	Voltage:	0.5 mV	0.5 mV	1 mV	1 mV	
(change in output voltage	Current:	1 mA	0.5 mA	0.25 mA	0.25 mA	
or current for any line						
change within ratings)	NT 1 1	100	I	<u> </u>	<u> </u>	
Transient Response	Normal mode:	< 100 µs				
Time ⁴	Fast mode:	< 50 µs				

Table A-1. Performance Specifications

(for the output voltage to recover to its previous level within 0.1% of the voltage rating of the unit or 20 mV following a change in load current of up to 50% of the output current rating)

¹This specification may degrade slightly when the unit is subjected to an RF field \geq 3 V/meter.

²Applies in SCPI mode, with current detector set to DC. With current detector set to ACDC, accuracy is 0.2% + four times the fixed error value. In COMPatibility mode, accuracy is 0.2% + six times the fixed error value.

 3 For HP 6631B, 6632B, and 66332A (from 1 MHz to 20 MHz) = 0.3mV/15mV;

For HP 6633B and 6634B (from 1 MHz to 20 MHz) = 0.5mV/15mV

⁴Applies at rear terminals with unit set to remote sensing and with sense terminals externally jumpered to their respective output terminals.

Supplemental Characteristics

Table A-2 lists the supplemental characteristics, which are not warranted but are descriptions of typical performance determined either by design or type testing.

Table A-2. Supplemental Characteristics					
Parameter		HP 6631B	HP 6632B HP 66332A	HP 6633B	HP 6634B
Input Ratings (at full load)	100 Vac mains: 115 Vac mains: 220 Vac mains: 230 Vac mains:	87–106 Vac, 47–63 Hz, 3.5 A, 250 W 104–127 Vac, 47–63 Hz, 3 A, 250 W 191–233 Vac, 47–63 Hz, 1.6 A, 250 W 207–253 Vac, 47–63 Hz, 1.5 A, 250 W			
Output Programming Range	Voltage: Current: OVP:	0-8.190 V 0-10.237A 0-12V	0–20.475 V 0–5.1188 A 0–22 V	0–51.188 V 0–2.0475 A 0–55 V	0–102.38 V 0–1.0238 A 0–110 V
Average Programming Resolution	Voltage: Current: OVP:	2 mV 2.5 mA 60 mV	5 mV 1.25 mA 100 mV	12.5 mV 0.5 mA 250 mV	25 mV 0.25 mA 500 mV
OVP Accuracy		2.4% + 100 mV	2.4% + 240 mV	2.4% + 600 mV	2.4% + 1.2 V
Maximum Current Measurement		14.3 A	6.66 A	2.43 A	1.21 A
Average Current Measurement Resolution	High Range: Low Range:	436 uA 0.6 uA	213 μΑ 0.6 μΑ	74 μΑ 0.6 μΑ	37 μA 0.6 μA
Sink Current		-10 A	-5 A	-2 A	-1 A
Sink Current Tracking	SCPI mode ¹ : Compatibility mode:	0.4% + 4 mA -500 mA	0.4% + 2 mA -250 mA	0.4% + 1 mA -100 mA	0.4% + 0.5 mA -50 mA
Minimum Current in Compatibility Mode		40 mA	20 mA	8 mA	4 mA
Programming Accuracy Temperature Coefficient (change/°C)	Voltage: Current: OVP:	$\begin{array}{c} 0.01\% + 0.15 \ mV \\ 0.01\% + 60 \ uA \\ 0.01\% + 2 \ mV \end{array}$	$\begin{array}{c} 0.01\% \ +0.25 \ mV \\ 0.01\% \ + \ 30 \ \mu A \\ 0.015\% \ + \ 4 \ mV \end{array}$	$\begin{array}{c} 0.01\% + 0.5 \ mV \\ 0.01\% + 12 \ \mu A \\ 0.015\% + 10 \ mV \end{array}$	$\begin{array}{c} 0.01\% + 1 \ mV \\ 0.01\% + 6 \ \mu A \\ 0.015\% + 20 \ mV \end{array}$
Readback Accuracy Temperature Coefficient (change/°C)	Voltage: Current (ACDC): Current (DC): Current (Low range):	0.01% + 60 uV 0.05% + 320 uA 0.02% + 50uA 0.01% + 0.3 uA	$\begin{array}{c} 0.01\% + 150 \; \mu V \\ 0.05\% + 160 \; \mu A \\ 0.02\% + 25 \; \mu A \\ 0.01\% + 0.3 \; \mu A \end{array}$	$\begin{array}{c} 0.01\% + 500 \; \mu V \\ 0.05\% + 80 \; \mu A \\ 0.02\% + 10 \; \mu A \\ 0.01\% + 0.3 \; \mu A \end{array}$	$\begin{array}{c} 0.01\% + 750 \ \mu V \\ 0.05\% + 40 \ \mu A \\ 0.02\% + 5 \ \mu A \\ 0.01\% + 0.3 \ \mu A \end{array}$
Drift ²	Voltage: Current:	0.01% + 0.25 mV 0.01% + 100uA	$\begin{array}{c} 0.01\% + 0.5 \ mV \\ 0.01\% + 50 \ \mu A \end{array}$	$\begin{array}{l} 0.01\% + 1 \ mV \\ 0.01\% + 20 \ \mu A \end{array}$	$\begin{array}{c} 0.01\% + 1 \ mV \\ 0.01\% + 10 \ \mu A \end{array}$
Output Voltage Rise/Fall Time	Normal mode: Fast mode:	2 ms 400 μs (for a change from 10% to 90% or 90% to 10% of the total excursion)			
Output Voltage Settling Time	Normal mode: Fast mode:	6 ms 2 ms (to settle within 1 LSB or 0.025% times the rated voltage of the final value)			

Table A-2	Supplemental	Characteristics
-----------	--------------	------------------------

¹ For 8 volt unit, between 0 and 10 mA, the sink current remains at -10 mA.

For 20 volt unit, between 0 and 5mA, the sink current remains at -5 mA.

For 50 volt unit, between 0 and 2.5 mA, the sink current remains at -2.5 mA.

For 100 volt unit, between 0 and 1.25 mA, the sink current remains at -1.25 mA.

² Following a 30 minute warm-up, the change in output over 8 hours, under ambient temperature, constant load, and line operating conditions.

Table A-2. Supplemental Characteristics (continued)						
Parameter		HP 66332A	HP 6631B/6632B/6633B/6634B			
Dynamic Measurement Accuracy	Instantaneous Voltage: Instantaneous Current:	$\begin{array}{c} 0.03\% + 5 \ mV \\ 0.6\% + 2 \ mA^1 \end{array}$	not applicable			
Dynamic Measurement System	Buffer Length: Sampling Rate Range:	4096 points 15.6µs–31,200s	not applicable			
Measurement Time (voltage or current)		50 ms average (includes the default time of 30 ms ² for acquiring data, and a 20 ms data processing overhead)				
Command Processing Time		(for out	4 ms average put to begin to change receipt of digital data)			
Remote Sense Capability		Up to 2 V can be dropped across each load lead (add 2 mV to the voltage load regulation specification for each 1 V change in the positive output lead due to load current change.)				
Savable Instrument States (applies only in SCPI mode)		4 (i	n locations 0 to 3)			
RS-232 Interface Capabilities	Baud rates: Data formats: Language:	7 bits even or od	1200 2400 4800 9600 ld parity; 8 bits without parity or COMPatibility ³			
HP-IB Interface Capabilities	Language: Interface:	e: SCPI or COMPatibility ³				
INH/FLT Characteristics	Maximum ratings:	gs: 16.5 Vdc between terminals 1 and 2; 3 and 4 and from terminals 1 or 2 to chassis ground				
	FLT Terminals:	ls: Low-level output current = 1.25 mA max Low-level output voltage = 0.5 V max.				
	INH Terminals:	: Low-level input voltage = 0.8 V max. High-level input voltage = 2 V min. Low-level input current = 1 mA Pulse width = $100 \ \mu s$ min. Time delay = 4 ms typical				

Table A-2. Supplemental Characteristics (continued)

¹For full scale current changes with a risetime of 20 μ s, an additional 0.5% error exists in the first data point in the buffer after the change. The error percentage increases proportionally with the decrease in risetime.

²This time may be reduced by changing the default conditions of 2048 data points, however, measurement accuracy will be reduced.

³COMPatibility language is used to program the HP 663xA Series power supplies.

A - Specifications

Parameter		HP 66332A	HP	
			6631B/6632B/6633B/6634B	
Digital I/O Characteristics	Maximum ratings:	same as I	NH/FLT Characteristics	
	Digital OUT Port 0,1,2 (open collector)	Output leakage @ $16V = 0.1 \text{ mA} \text{ (ports 0,1)}$ = $12.5 \text{ mA} \text{ (port 2)}$ Output leakage @ $5V = 0.1 \text{ mA} \text{ (ports 0,1)}$ = $0.25 \text{ mA} \text{ (port 2)}$ Low-level output sink current @ $0.5 \text{ V} = 4 \text{ mA}$ Low-level output sink current @ $1 \text{ V} = 50 \text{ mA}$		
	Digital IN Port 2: (internal pull-up)	Low-level input current @ 0.4 V = 1.25 mA High-level input current @ 5 V = 0.25 mA Low-level input voltage = 0.8 V max. High level input voltage = 2.0 V min.		
Isolation to Ground		240 Vdc maximum from chassis ground		
Recommended Calibration Interval		(from the date	1 year e the unit is put into service)	
Regulatory Compliance	Listing pending: Certified to: Conforms to: Complies with:	UL 3111-1 CSA 22.2 No. 1010.1 IEC 1010-1 EMC directive 89/336/EEC (ISM Group1 Class B)		
Dimensions (see figure 3-1)		Height 88.1mm (3.5in.) Width 425.5mm (16.75in.) Depth 364.4mm (14.3in.)		
Net weight		12.7 kg (28 lbs.)		
Shipping weight			15 kg (33 lbs.)	

Table A-2. Supplemental Characteristics (continued)

Verification and Calibration

Introduction

This appendix includes verification and calibration procedures for the HP 66332A and HP 6631B/6632B/6633B/6634B dc source. Instructions are given for performing the procedures either from the front panel or from a controller over the HP-IB.

The verification procedures do not check all the operating parameters, but verify that the dc source is performing properly. Performance Tests, which check all the specifications of the dc source, are given in the applicable dc source Service Manual.

Important Perform the verification procedures before calibrating your dc source. If the dc source passes the verification procedures, the unit is operating within its calibration limits and does not need to be recalibrated.

Equipment Required

The equipment listed in the following table, or the equivalent to this equipment, is required for verification and calibration.

Equipment	Characteristics	Recommended Model
Digital Voltmeter	Resolution: 10 nV @ 1 V	HP 3458A
	Readout: 8.5 digits	
	Accuracy: >20 ppm	
Current Monitor ¹	15 A (0.1 Ω), ±0.04%, TC=5ppm/°C	Guildline 9230/15
Load Resistor	400Ω (HP 6631B calibration, used for	
(3 W min. TC=20ppm/°C)	verification of all models)	HP p/n 0811-2878
	1.1 k Ω (HP 6632B/66332A calibration)	
	2.5 k Ω (HP 6633B calibration)	
	5 k Ω (HP 6634B calibration)	
Power Supply	8 V @ 10 A	HP 6631B
HP-IB Controller	Full HP-IB capabilities	HP Series 200/300 or equivalent

Table B-1. Equipment Required

¹The 4- terminal current shunt is used to eliminate output current measurement error caused by voltage drops in the load leads and connections. It has special current-monitoring terminals inside the load connection terminals. Connect the voltmeter directly to these current-monitoring terminals.

Test Setup

Figure B-1 shows the setup for the tests. Be certain to use load leads of sufficient wire gauge to carry the full output current (see chapter 3).

B - Verification and Calibration

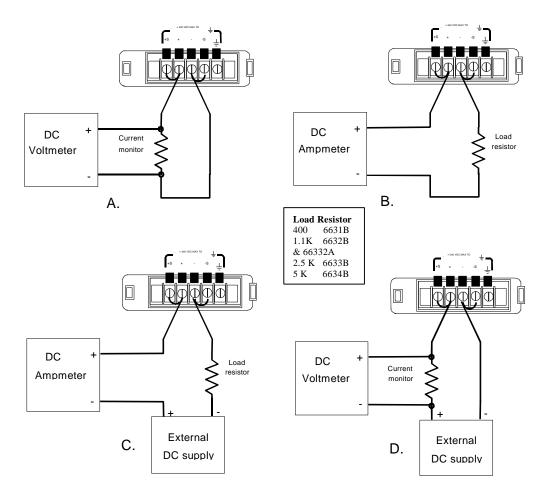


Figure B-1. Verification & Calibration Test Setup

Performing the Verification Tests

NOTE: The verification procedure can only be performed using the SCPI language commands. Use either the front panel **Address** key to access the LANG command, or use the SYSTem:LANGuage command to change the programming language to SCPI.

The following procedures assume you understand how to operate the dc source from the front panel as explained in chapter 5.

When performing the verification tests from an HP-IB controller, you may have to consider the relatively slow settling times and slew rates of the dc source as compared to computer and system voltmeters. Suitable WAIT statements can be inserted into the test program to give the dc source time to respond to the test commands.

Perform the following tests for operation verification in the order indicated.

- 1. Turn-On Checkout
- 2. Voltage Programming and Measurement Accuracy
- 3. Current Programming and Measurement Accuracy

		V		
	Full scale Voltage	Full Scale Current	Imax	Isink
6631B	8	10	10.238	- 10 A
6632B/66332A	20	5	5.1188	- 5 A
6633B	50	2	2.0475	- 2 A
6634B	100	1	1.0238	- 1 A

Table B-2. Verification Programming Values

Turn-On Checkout

Perform the Turn-On Checkout as directed in chapter 4.

NOTE: The dc source must pass turn-on selftest before you can proceed with the verification tests.

Voltage Programming and Measurement Accuracy

This test verifies the voltage programming, HP-IB measurement, and front panel meter functions. Values read back over the HP-IB should be the same as those displayed on the front panel. Measure the dc output voltage at the output terminals. Make sure the output mode switch is set to Normal and the sense terminals are directly jumpered to the output terminals.

	Action	Normal Result
1.	Turn off the dc source and connect a DMM to the output terminals.	
2.	Turn on the dc source with no load on the output. Set the output voltage to 0 V and the output current to full scale (see table B-2). Press Output On/Off to enable the output.	Output voltage near 0 V. Output current near 0 A.
3.	Record voltage readings at the DMM and on the front panel display in the appropriate table.	Readings within low voltage limits (see table B-3, 4, 5, or 6).
4.	Set the output voltage to the full scale rated voltage (see Table B-2).	Output voltage near full scale.
5.	Record voltage readings at the DMM and on the front panel display in the table.	Readings within high voltage limits (see table B-3, 4, 5, or 6).

Current Programming and Measurement Accuracy

This test verifies the current programming and measurement. Connect the appropriate current monitor (see table B-1) as shown in figure B-1A.

Current Programming and Measurement (High Range)

	Action	Normal Result
1.	Turn off the dc source and connect the DMM and current monitor as shown in figure B-1A.	
2.	Turn on the dc source, access the Input menu, and set the current sense detector to DC.	CURR:DET DC
3.	Set the output voltage to 5 V and the current to 0 A. Press Output On/Off to enable the output.	Output current near 0 A.
4.	Divide the voltage drop across the current monitor by its resistance to convert the value to amperes. Record the value.	Readings within low current limits (see table B-3, 4, 5, or 6).

B - Verification and Calibration

- 5. Set the output current to its full scale value (see Table B-2).
- 6. Divide the voltage drop across the current monitor by its resistance to convert the value to amperes. Record this value and the current reading on the front panel display.

Current Measurement (Low Range)

Action

- 7. Turn off the dc source and connect it as shown in figure B-1B with the 400 ohm load resistor. Set the DMM to operate in current mode.
- 8. Turn on the dc source, access the Input menu, and set the current range to LOW.
- 9. Set the output voltage to 0 V and the current to its full scale value (see table B-2). Press **Output On/Off** to enable the output.
- 10. Record the current reading from the DMM as well as from the front panel display. Enter the difference between the two readings in the appropriate table.
- 11. Set the output voltage to 8 volts.
- 12. Record the current reading from the DMM as well as from the front panel display. Enter the difference between the two readings in the table.

Current Sink Measurement

Action

- 13. Turn off the dc source and connect an external supply to the output of the unit as shown in figure B-1C using a 400 ohm load resistor. Set the DMM to operate in current mode.
- 14. Turn on the dc source, access the Input menu, and set the current range to LOW.
- 15. Access the Input menu and set the current sense detector to DC.
- 16. Turn on the external supply and program its'output for 8 volts and 1 A. Program the dc source to 0 V and 1 A. Press **Output On/Off** to enable the output.
- 17. Record the current reading from the DMM as well as from the front panel display. Enter the difference between the two readings in the table.
- Turn off the dc source and connect the current monitor and external supply to the output of the unit as shown in figure B-1D. Set the DMM to operate in dc voltage mode.
- 19. Turn on the external supply and program its' voltage to 5 volts and current for the full scale current rating of the UUT. Program the dc source to 0 V and full scale current (see table B-2). Press **Output On/Off** to enable the output.
- 20. Divide the voltage drop across the current monitor by its resistance to convert the value to amperes. Record this value as well as the current reading on the front panel display. Enter the difference between the two readings in the table.

Readings within high current limits (see tables B-3,4, 5 or 6).

Normal Result

CURR:RANG LOW

Output current near 0 A.

Readings within low current measurement (see table B-3, 4, 5 or 6).

Output current near +20 mA.

Readings within high current measurement (see table B-3, 4, 5 or 6).

Normal Result

CURR:RANG LOW

CURR:DET DC

Output current near -20 mA.

Readings within low current sink measurement (see table B-3,4, 5 or 6).

Output near -full scale current.

Readings within high current sink measurement (see table B-3, 4, 5 or 6).

Model HP 6631B	Report No	Date_			
Test Description	Minimum Specification	Recorded Results	Maximum Specification		
Voltage Programming and Measurement					
Low Voltage V _{out}	-5 mV	V	+5 mV		
Front Panel measurement	V _{out} -2 mV	mV	V_{out} +2 mV		
High Voltage V _{out}	8.991 V	V	8.009 V		
Front Panel measurement	V_{out} –4.4 mV	mV	V_{out} +4.4 mV		
Current Program	ning and Measurem	ent (High Range)			
Low Current I _{out}	-4 mA	A	4 mA		
High Current I _{out}	9.991 A	A	10.009 A		
Front Panel measurement	I _{out} –21 mA	mA	I_{out} +21 mA		
Current	Measurement (Low	Range)			
Low Current measurement	I_{out} –2.5 μA	μΑ	I_{out} +2.5 μA		
High Current measurement	I_{out} –22.5 μA	μΑ	I_{out} +22.5 μA		
Current Sink Measurement					
Low Current Sink measurement	I_{sink} –22.5 μA	μΑ	I_{sink} +22.5 μA		
High Current Sink measurement	I _{sink} –21.6 mA	mA	I_{sink} +21.6 mA		

 Table B- 3. Verification Test Record for HP 6631B

Table B- 4. Verification Test Record for HP 66332A or HP 6632B

Model HP	odel HP Report No Date				
Test Description	Minimum Specification	Recorded Results	Maximum Specification		
Voltage Programming and Measurement					
Low Voltage V _{out}	-10 mV	V	+10 mV		
Front Panel measurement	V_{out} –3 mV	mV	V_{out} +3 mV		
High Voltage V _{out}	19.980 V	V	20.020 V		
Front Panel measurement	V _{out} –9 mV	mV	V_{out} +9 mV		
Current Program	ning and Measurem	ent (High Range)			
Low Current I _{out}	-2 mA	A	2 mA		
High Current I _{out}	4.9955 A	A	5.0045 A		
Front Panel measurement	I _{out} -10.5 mA	mA	I_{out} +10.5 mA		
Current	Measurement (Low	Range)			
Low Current measurement	I_{out} –2.5 μA	μΑ	I_{out} +2.5 μA		
High Current measurement	I_{out} –22.5 μA	μΑ	I_{out} +22.5 μA		
Current Sink Measurement					
Low Current Sink measurement	I _{sink} –22.5 μA	μΑ	I_{sink} +22.5 μA		
High Current Sink measurement	I _{sink} –11.1 mA	mA	Isink +11.1 mA		

B - Verification and Calibration

Model HP 6633B	Report No	Date_		
Test Description	Minimum Specification	Recorded Results	Maximum Specification	
Voltage Pro	ogramming and Mea	asurement		
Low Voltage V _{out}	-20 mV	V	+20 mV	
Front Panel measurement	V _{out} –6 mV	mV	V_{out} +6 mV	
High Voltage V _{out}	49.955 V	V	50.045 V	
Front Panel measurement	V _{out} –21 mV	mV	V_{out} +21 mV	
Current Programm	ning and Measurem	ent (High Range)		
Low Current I _{out}	-1 mA	A	1 mA	
High Current I _{out}	1.998 A	A	2.002 A	
Front Panel measurement	I _{out} -4.25 mA	mA	I_{out} +4.25 mA	
Current	Measurement (Low	Range)		
Low Current measurement	I_{out} –2.5 μA	μΑ	I_{out} +2.5 μA	
High Current measurement	I_{out} –22.5 μA	μΑ	I_{out} +22.5 μA	
Current Sink Measurement				
Low Current Sink measurement	I_{sink} –22.5 μA	μΑ	I_{sink} +22.5 μA	
High Current Sink measurement	I _{sink} –4.85 mA	mA	I_{sink} +4.85 mA	

Table B- 5. Verification Test Record for HP 6633B

Table B- 6. Verification Test Record for HP 6634B

Model HP 6634B	Report No	Date_	
Test Description	Minimum Specification	Recorded Results	Maximum Specification
Voltage Pr	ogramming and Mea	asurement	
Low Voltage V _{out}	-50 mV	V	+50 mV
Front Panel measurement	V_{out} –12 mV	mV	V_{out} +12 mV
High Voltage V _{out}	99.90 V	V	100.10 V
Front Panel measurement	V _{out} –42 mV	mV	V_{out} +42 mV
Current Programming and Measurement (High Range)			
Low Current I _{out}	-0.5 mA	A	0.5 mA
High Current I _{out}	0.999 A	A	1.001 A
Front Panel measurement	I _{out} -2.25 mA	mA	I_{out} +2.25 mA
Current	Measurement (Low	Range)	
Low Current measurement	I_{out} –2.5 μA	μΑ	I_{out} +2.5 μA
High Current measurement	I_{out} –22.5 μA	μΑ	I_{out} +22.5 μA
Current Sink Measurement			
Low Current Sink measurement	I_{sink} –22.5 μA	μΑ	I_{sink} +22.5 μA
High Current Sink measurement	I _{sink} –2.85 mA	mA	I_{sink} +2.85 mA

Performing the Calibration Procedure

NOTE: The calibration procedure can only be performed using the SCPI language commands. Use either the front panel **Address** key to access the LANG command, or use the SYSTem:LANGuage command to change the programming language to SCPI.

Table B-1 lists the equipment required for calibration. Figure B-1 shows the test setup.

You do not have to do a complete calibration each time. If appropriate, you may calibrate only the voltage or current and proceed to "Saving the Calibration Constants". However, the voltage or current calibration sequence must be performed in its entirety. The following parameters may be calibrated:

- voltage programming and measurement
- overvoltage protection (OVP)
- current programming and measurement
- negative current programming
- low range measurement
- ac current measurement

Front Panel Calibration Menu

The Entry keypad is used for calibration functions.

Shift	Cal

Press this key to access the calibration menu.DisplayCommand FunctionCAL ON <value>Turns calibration mode on when the correct password
value is entered.CAL OFFTurns calibration mode offCAL:LEV <char>Advance to next step in sequence (P1 or P2).CAL:DATA <value>Enter an external calibration measurement.

CAL:VOLTBegin voltage calibration sequenceCAL:VOLT:PROTBegin voltage protection calibration

CAL:CURR Begin high range current calibration sequence

CAL:CURR:NEG Begin negative current calibration sequence

CAL:CURR:MEAS:LOW Begin low range current measurement calibration

CAL:CURR:MEAS:AC Begin ac current calibration sequence

CAL:SAVE Saves the calibration constants in non-volatile memory.

CAL:PASS <value> Set new calibration password.

Notes:

value = a numeric value

char = a character string parameter

Use \mathbf{p} and \mathbf{q} to scroll through the menu commands.

Use $\tilde{\mathbf{a}}$ and $\tilde{\mathbf{a}}$ to scroll through the menu parameters.

Use $\hat{\mathbf{a}}$ and $\hat{\mathbf{a}}$ to select a digit in a numeric entry field.

B - Verification and Calibration

Front Panel Calibration

These procedures assume you understand how to operate front panel keys (see chapter 5).

Enable Calibration Mode

	Action	Disj	play
1.	Reset the unit by selecting Output , scrolling to *RST and pressing Enter .	*R	ST
2.	Press Output On/Off to enable the output.	00.003V	0.0006A
3.	To begin calibration press Shift Cal , scroll to CAL ON and press Enter .	CAL C	ON 0.0
4.	Enter the calibration password from Entry keypad and press Enter . If the password is correct the Cal annunciator will come on. If CAL DENIED appears, then an internal switch has been set to prevent the calibration from being changed. (See the Service Manual.) If the password is incorrect, an error occurs. If the active password is lost, the calibration function can be recovered by setting an internal switch that defeats password protection. (See the Service Manual.)	CAL D OUT OF	

Voltage Programming and Measurement Calibration

	Action	Display
5.	Connect the DMM (dc volts mode) directly to the dc source. Do not connect the load resistor or current shunt.	
6.	Press Shift Cal, scroll to CAL VOLT, and press Enter.	CAL:VOLT
7.	Press Shift Cal , scroll to CAL LEV, and press Enter to select the first calibration point.	CAL:LEV P1
8.	Press Shift Cal , scroll to CAL DATA, and use the Entry keypad to enter the voltage value displayed on the DMM.	CAL:DATA 0.00
9.	Press Shift Cal , scroll to CAL LEV, use ä to scroll to P2 (the second calibration point), and press Enter .	CAL:LEV P2
10.	Press Shift Cal , scroll to CAL DATA, and use the Entry keypad to enter the second voltage value displayed on the DMM.	CAL:DATA 0.00
Ove	rvoltage Protection Calibration	
	Action	Display

11.	Press Shift Cal, scroll to CAL VOLT PROT, and press Enter.	CAL:VOLT:PROT
12.	Wait for the dc source to compute the OVP calibration constant. The display returns to Meter mode when the calculation is complete.	

Current Programming and High-Range Measurement Calibration

	Action	Display
13.	Connect the appropriate current monitor as shown in figure B-1A. Connect the DMM (in dc mode) across the current shunt.	
14.	Press Shift Cal, scroll to CAL CURR, and press Enter.	CAL:CURR
15.	Press Shift Cal , scroll to CAL LEV, and press Enter to select the first calibration point.	CAL:LEV P1
16.	Press Shift Cal and scroll to CAL DATA. Wait for the DMM reading to stabilize. Then read the DMM and compute the first current value (DMM reading ÷ shunt resistance). Use the Entry keypad to enter the first current value.	CAL:DATA 0.00
17.	Press Shift Cal , scroll to CAL LEV, use Ψ to scroll to P2 (the second calibration point), and press Enter .	CAL:LEV P2
18.	Press Shift Cal and scroll to CAL DATA. Wait for the DMM reading to stabilize. Then read the DMM and compute the second current value (DMM reading ÷ shunt resistance). Use the Entry keypad to enter the second current value.	CAL:DATA 0.00
Nega	tive Current Programming Calibration	
	Action	Display
19.	Connect a negative supply to the output in series with the appropriate load resistor as shown in figure B-1C. Set the DMM to operate in current mode. Set the negative supply to the full scale voltage rating of the UUT.	
20.	Press Shift Cal, scroll to CAL CURR NEG, and press Enter.	CAL:CURR:NEG
21.	Wait for the dc source to compute the negative current calibration constant. The display returns to Meter mode when the calculation is complete.	

Low-Range Current Measurement Calibration

	Action	Display
22.	Press Shift Cal, scroll to CAL CURR MEAS LOW, and press Enter.	CAL:CURR:MEAS:LOW
23.	Connect the UUT as shown in figure B-1B with the appropriate load resistor for your model. Set the DMM to operate in current mode.	
24.	Press Shift Cal , scroll to CAL LEV, and press Enter to select the first calibration point.	CAL:LEV P1
25.	Press Shift Cal and scroll to CAL DATA. Wait for the DMM reading to stabilize. Then use the Entry keypad and enter the current reading displayed on the DMM.	CAL:DATA 0.00

B - Verification and Calibration

AC Current Measurement Calibration (HP 66332A only)

	Action		Display
26.		ct all loads from the dc source. Make sure the mode switch ar panel is set to Normal.	
27.	Press Shi	ft Cal, scroll to CAL CURR MEAS AC, and press Enter.	CAL:CURR:MEAS AC
28.	28. Wait for the dc source to compute the ac current calibration constant. The display returns to Meter mode when the calculation is complete.		
Savir	ng the Cal	ibration Constants	
WAR	NING:	Storing calibration constants overwrites the existing ones If you are not sure you want to permanently store the new step. The dc source calibration will then remain unchange	constants, omit this

	Action	Display
29.	Press Shift Cal, scroll to CAL SAVE, and press Enter.	CAL:SAVE
30.	Press Shift Cal , select CAL OFF, and press Enter to exit Calibration mode. *RST and *RCL will also set the calibration state to OFF.	CAL OFF

Calibration Error Messages

Errors that can occur during calibration are shown in the following table.

	Table D- 7. Thi -ID Calibration Error messages		
Error	Meaning		
401	CAL switch prevents calibration (This is a hardware disable, see the Service Manual.)		
402	CAL password is incorrect		
403	CAL not enabled		
404	Computed readback cal constants are incorrect		
405	Computed programming cal constants are incorrect		
406	Incorrect sequence of calibration commands		

Table B- 7. HP-IB Calibration Error Messages

Changing the Calibration Password

change the password to 0 (zero).

The factory default password is 0. You can change the password when the dc source is in calibration mode (which requires you to enter the existing password). Proceed as follows:

	Action	Display
1.	Begin by pressing Shift Cal and scrolling to the CAL ON command.	CAL ON 0.0
2.	Enter the existing password from Entry keypad and press Enter	
3.	Press Shift Cal and scroll to the CAL PASS command.	CAL:PASS 0
4.	Enter the new password from the keypad. You can use any number with up to six digits and an optional decimal point. If you want the calibration function to operate without requiring any password, change the password to 0 (zero).	
NOT	E: If you want the calibration function to operate without requiring	g any password,

Calibration Over the HP-IB

You can calibrate the dc source by using SCPI commands within your controller programming statements. Be sure you are familiar with calibration from the front panel before you calibrate from a controller. Each front panel calibration command has a corresponding SCPI command. When you write your calibration program, perform the calibration procedure in the same order as the front panel procedure documented in this appendix.

The SCPI calibration commands are explained in chapter 3 of the dc source Programming Guide. Calibration error messages that can occur during HP-IB calibration are shown in table B-3.

Error Messages

Error Number List

This appendix gives the error numbers and descriptions that are returned by the dc source. Error numbers are returned in two ways:

- Error numbers are displayed on the front panel
- Error numbers and messages are read back with the SYSTem:ERRor? query.
 SYSTem:ERRor? returns the error number into a variable and returns two parameters: an NR1 and a string.

The following table lists the errors that are associated with SCPI syntax errors and interface problems. It also lists the device dependent errors. Information inside the brackets is not part of the standard error message, but is included for clarification.

When errors occur, the Standard Event Status register records them in bit 2, 3, 4, or 5 as described in the following table:

Error Number	Error String [Description/Explanation/Examples]
	Command Errors -100 through -199 (sets Standard Event Status Register bit #5)
-100	Command error [generic]
-101	Invalid character
-102	Syntax error [unrecognized command or data type]
-103	Invalid separator
-104	Data type error [e.g., "numeric or string expected, got block data"]
-105	GET not allowed
-108	Parameter not allowed [too many parameters]
-109	Missing parameter [too few parameters]
-112	Program mnemonic too long [maximum 12 characters]
-113	Undefined header [operation not allowed for this device]
-121	Invalid character in number [includes "9" in octal data, etc.]
-123	Numeric overflow [exponent too large; exponent magnitude >32 k]
-124	Too many digits [number too long; more than 255 digits received]
-128	Numeric data not allowed

Table C-1. Error Numbers

C - Error Messages

121	Invalid suffix [unreasonized units, or units not appropriate]
-131	Invalid suffix [unrecognized units, or units not appropriate]
-138	Suffix not allowed
-141	Invalid character data [bad character, or unrecognized]
-144	Character data too long
-148	Character data not allowed
-150	String data error
-151	Invalid string data [e.g., END received before close quote]
-158	String data not allowed
-160	Block data error
-161	Invalid block data [e.g., END received before length satisfied]
-168	Block data not allowed
-170	Expression error
-171	Invalid expression
-178	Expression data not allowed
	Execution Errors -200 through -299 (sets Standard Event Status Register bit #4)
-200	Execution error [generic]
-222	Data out of range [e.g., too large for this device]
-223	Too much data [out of memory; block, string, or expression too long]
-224	Illegal parameter value [device-specific]
-225	Out of memory
-270	Macro error
-272	Macro execution error
-273	Illegal macro label
-276	Macro recursion error
-277	Macro redefinition not allowed
	System Errors -300 through -399 (sets Standard Event Status Register bit #3)
-310	System error [generic]
-350	Too many errors [errors beyond 9 lost due to queue overflow]
	Query Errors -400 through -499 (sets Standard Event Status Register bit #2)
-400	Query error [generic]
-410	Query INTERRUPTED [query followed by DAB or GET before response complete]
-420	Query UNTERMINATED [addressed to talk, incomplete programming message received]
-430	Query DEADLOCKED [too many queries in command string]
-440	Query UNTERMINATED [after indefinite response]

	Selftest Errors 0 through 99 (sets Standard Event Status Register bit #3)
0	No error
1	Non-volatile RAM RD0 section checksum failed
2	Non-volatile RAM CONFIG section checksum failed
3	Non-volatile RAM CAL section checksum failed
4	Non-volatile RAM STATE section checksum failed
5	Non-volatile RST section checksum failed
10	RAM selftest
11	VDAC/IDAC selftest 1
12	VDAC/IDAC selftest 2
13	VDAC/IDAC selftest 3
14	VDAC/IDAC selftest 4
15	OVDAC selftest
80	Digital I/O selftest error
	Device-Dependent Errors 100 through 32767 (sets Standard Event Status Register bit #3)
213	Ingrd receiver buffer overrun
216	RS-232 receiver framing error
217	RS-232 receiver parity error
218	RS-232 receiver overrun error
220	Front panel uart overrun
221	Front panel uart framing
222	Front panel uart parity
223	Front panel buffer overrun
224	Front panel timeout
401	CAL switch prevents calibration
402	CAL password is incorrect
403	CAL not enabled
404	Computed readback cal constants are incorrect
405	Computed programming cal constants are incorrect
406	Incorrect sequence of calibration commands
407	CV or CC status is incorrect for this command
408	Output mode switch must be in NORMAL position
601	Too many sweep points
602	Command only applies to RS-232 interface
603	CURRent or VOLTage fetch incompatible with last acquisition
604	Measurement overrange

Line Voltage Conversion

WARNING: *Shock Hazard* Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made only by qualified service personnel.

Open the Unit

- Turn off ac power and disconnect the power cord from the unit.
- Remove the four screws that secure the cover (use a #2 Pozi drive).
- Slightly spread the bottom of the cover and pull it back to remove it from the unit.

Configure the Power Transformer

- Locate the ac input wiring harness on the left side of the transformer.
- Use a needlenose pliers and connect the ac input wiring harness according to the information in the following figure:

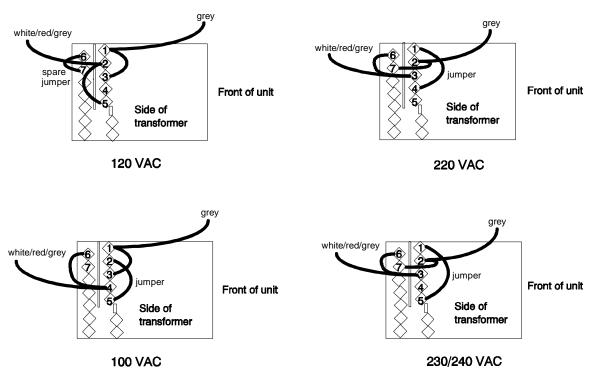


Figure D-1, Power Transformer AC Input Connections

D - Line Voltage Conversion

Install the Correct Line Fuse

- Unscrew the line fuse cap from the rear panel and install the correct fuse.
 For 100/120 Vac operation: 4 A; HP part number 2110-0055
 For 220/230 Vac operation: 2 A; HP part number 2110-0002
- Mark the voltage setting that the unit has been set to on the rear panel label.

Close the Unit

- Replace the outer cover.
- Reconnect the power cord and turn on the unit.

Index

-- -- , 43

+/- terminals, 23 +S/-S terminals, 23

__0_

0 ... 9, 41

—A—

ac line conversion, 69 accessories, 18 ACDC current detector, 44 airflow, 22 annunciators Addr, 36 Cal, 36 CC. 36 CV, 36 Dis, 36 Err, 36 OCP, 36 Prot, 36 Rmt, 36 Shift, 36 SRQ, 36 Unr, 36 AWG ratings, 23

—C—

cables, 18 calibration, 59 current programming - high range, 61 current programming - low range, 61 enable, 60 equipment, 53 error messages, 62 menu, 59 OVP, 60 password, 63 peak current, 61 saving, 62 setup, 53 voltage measurement, 60 voltage programming, 60 capacitive loading, 27 capacitor discharge limit, 26 CC mode, 42

checkout procedure, 32 cleaning, 21 clear protection, 43 controller connections, 30 controls and indicators, 19 conversion, ac line, 69 crowbar circuit, 26 current measurement range, 43 CV mode, 20,42

—**D**—

damage, 21 DC current detector, 44 DFI signal, 28 DIGIO, 45 digital connector, 21, 28 digital I/O, 28 digital output port, 45 dimensions, 22 disabling multiple units, 28

—E—

enable output, 42 enter value, 42 entry keys, 41 **á**, 41 0 ... 9, 41 Backspace, 41 Clear Entry, 41 Enter Number, 41 error messages, 34 error numbers, 65

—**F**—

fast mode, 27 features, 19 FLT, 45 FLT output, 28 front panel, 19, 35 annuncuiators, 36 connections, 23 controls and indicators, 35 keys, 36 FS, 38, 43 FS status, 26 function keys, 38 **p**, 38 Cal, 40 Current, 40 immediate action, 38 Input, 39 Meter, 39

Index

OCP, 38 Output, 40 Output On/Off, 38 OV, 40 Prot Clear, 38 Protect, 40 Voltage, 40 fuses, 23

—G—

ground, earth, 18 guide, programming, 17 guide, user's, 17

—H—

history, 6 HP-IB, 46 address, 46 connections, 30 interface, 30

_I__

inductive loading, 27 INH, 45 INH input, 28 input connections, 23 power, 18 inspection, 21

_L__

line fuse replacing, 34 line voltage conversion, 69 load line, 20 load voltage drops, 24 location, 22

M

making measurements, 43 manuals, 21 measurement ranges, 43 multiple loads, 24

__N__

non-volatile memory clearing, 47 storing, 37, 40 normal mode, 27

0

OC, 43

operating features, 19 option 760, 46 options, 18 ÔT, 43 output characteristic, 20 connections, 23 connector, 21 control keys, 40 current setting, 42 enable, 42 rating, 20 voltage setting, 42 output relay, 46 OV, 42 OVLD, 34, 42 OVP capacitor discharge limit, 26 circuit, 26

P

power cord, 21, 23 power receptacle, 18 preliminary checkout, 31 print date, 6 protection FS, 43 OC, 43 OT, 43 OV, 43 RI, 43

-0-

query protection, 43

—**R**—

rack mount kit, 18 rack mounting, 22 rear panel connections, 28, 30 recalling operating states, 47 remote programming, 19 remote sensing, 25 stability, 26 repacking, 21 RI, 43 signal, 28 RIDFI, 45 RS-232, 46 connections, 30 interface, 30

safety class, 18 safety warning, 18

Index

saving operating states, 47 selftest errors, 34 sense connections, 25 service guide, 18 setting voltage/current, 42 shift annunciator, 31 shift key, 31 shorting switch, 28 specifications, 49 stability with remote sensing, 26 supplemental characteristics, 50 system errors, 65 system keys, 37 Address, 37 Error, 37 Interface, 37 Local, 37 RCL, 37 Save, 37 Shift, 37

—T—

turn-on checkout, 31, 55

verification current measurement accuracy, 55 current programming, 55 equipment, 53 setup, 53 test record, 57 voltage measurement accuracy, 55 voltage programming, 55 verification tests, 31

warranty, 2 wire current ratings, 23 wiring considerations, 23

HP Sales and Support Office

For more information, call your local HP sales office listed in your telephone directory or an HP regional office listed below for location of your nearest sales/support office.

United States of America:

Hewlett-Packard Company Test and Measurement Organization 5301 Stevens Creek Blvd Bldg 51L-5C Santa Clara, CA 95052-8059 (800) 452 4844

Asia Pacific:

Hewlett-Packard Asia Pacific Ltd. 17-21/F Shell Tower, Time Square 1 Matheson Street, Causeway Bay, Hong Kong (852) 2599 7070

Australia/New Zealand:

Hewlett-Packard Australia Ltd. 31-41 Joseph Street Blackburn, Victoria 3130 Australia 131 347 ext. 2902

Canada:

Hewlett-Packard Canada Ltd. 5150 Spectrum Way Mississauga, Ontario L4W 5Gl (905) 206 4725

Europe:

Hewlett-Packard European Marketing Center P.O. Box 999 1180 AZ Amstelveen The Netherlands

Japan:

Yokogawa Hewlett-Packard Ltd. Measurement Assistance Center 9-1, Takakura-Cho, Hachioji-Shi, Tokyo, 192, Japan (81) 426 48 3860

Latin America:

Hewlett-Packard Latin American Region Headquarters 5200 Blue Lagoon Drive 9th Floor Miami, Florida 33126 U.S.A. (305) 267 4245/4220

Manual Updates

The following updates have been made to this manual since the November 1997 printing indicated on the Printing History page.

7/8/99

Additional information about CV mode operation has been added to page 20.

A note has been added to Table A-1 for the Ripple and Noise specifications and a correction has been made for Model HP 6631B.

Steps 22 and 23 on page 61 under Low Range Current Measurement Calibration have been switched.