4338A-01

S	Е	R	V	Ι	С	Е	Ν	0	Т	Е
							SUPERSEDE	ES: None	!	
433	8A Mi	lliohme	ter							
Seria	al Numb	oers: 0000.	100000	0 / 3148J0	00383					
		on preve vboard a		-	A2F1	fuse ca	aused by a sl	hort circ	cuit in	
	licate Se A-02	ervice Note	es:							
4338	A-01 A-02									
То В	e Perfoi	rmed By:	Agiler	nt-Qualifie	ed Perso	onnel				
Part	s Requi	red:								
Part		Qty.		Descriptio						
	-1494 -0716	11.5 mn 1		Tube, Hea A2F1, Fus		able				
	ation:							• • • • • •	1	
-		e LED on A 2F1 fuse w					e coating on the function.	inside of t	the front	
	-				1 9					
								C	Continued	,
							DATE: 19 Feb	oruary 19	93	

## ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:							
	<b>MODIFICATION</b>	RECOMMENDED					
ACTION CATEGORY:	<ul> <li>IMMEDIATELY</li> <li>ON SPECIFIED FAILURE</li> <li>AGREEABLE TIME</li> </ul>	STANDARDS: Labor 0.5 Hour					
LOCATION CATEGORY:	<ul> <li>CUSTOMER INSTALLABLE</li> <li>ON-SITE</li> <li>SERVICE CENTER</li> </ul>	SERVICE RETURN USED RETURN INVENTORY: SCRAP PARTS: SCRAP SEE TEXT SEE TEXT					
AVAILABILITY:	PRODUCT'S SUPPORT LIFE	AGILENT RESPONSIBLE UNTIL: February 1995					
AUTHOR: YO	ENTITY: 3355	ADDITIONAL INFORMATION:					

© 1993 AGILENT TECHNOLOGIES
PRINTED IN U.S.A.



## Solution/Action:

If the display doesn't function, check and replace the A2F1 fuse and take the following countermeasures. (See Figure 1.)

- 1. Cut the heat shrinkable tube (P/N 0890-1494) by 11.5 mm and attach it onto the LED pins.
- 2. Shrink the tube by heating it up.

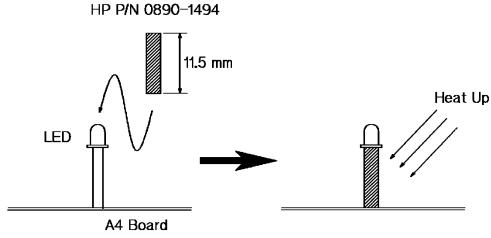




Figure 2 shows the location of the LED.

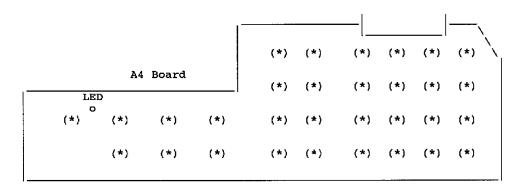


Figure 2. LED Location