

INSTRUMENT REPAIR

5253B
FREQUENCY
CONVERTER

OPERATING AND SERVICE MANUAL

HEWLETT  PACKARD

MANUAL CHANGES

MODEL 5253B

FREQUENCY CONVERTER

Manual Serial Prefix: 513-
Manual Printed: NOV 1965

MAKE ALL CORRECTIONS IN THIS MANUAL ACCORDING TO ERRATA BELOW, THEN CHECK THE FOLLOWING TABLE FOR YOUR
INSTRUMENT SERIAL PREFIX (3-DIGITS) OR SERIAL NUMBER (8-DIGITS) AND MAKE ANY LISTED CHANGES IN THE MANUAL.

► NEW ITEM.

SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES	SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES

ERRATA

Replace Page 3-1 with new Page 3-1.

Dec 27, 65

Supplement A for
05253-9006

SECTION III

OPERATION

3-1. FRONT PANEL.

3-2. The functions of the front panel control, meter, connector, and retaining screws are given in Figure 3-1.

3-3. MAXIMUM INPUT VOLTAGES.

3-4. Damage to the converter may result if an AC signal greater than 2 v RMS or a DC voltage greater than 100 v is applied to converter INPUT connector.

3-5. OPERATING PROCEDURES.

3-6. NORMAL RANGE MEASUREMENTS.

3-7. Figure 3-2 is the procedure to be used for measurement of frequencies from 50.1 to 512 Mc with INPUT signal amplitudes from 50 mv to 1 v RMS.

3-8. EXTENDED RANGE MEASUREMENTS.

3-9. The frequency of signals not within the normal range of 50.1 to 512 Mc, 50 mv to 1 v RMS, may be measured using the following procedures:

3-10. 50 TO 50.1 MC, 50 MV TO 1 V RMS. Perform steps 1 through 5 of Figure 3-2. Then:

- a. Set mixing frequency control to slightly more than 60 Mc.
- b. Turn mixing frequency control slowly clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
- c. Subtract counter display (in Mc) from reading of mixing frequency control (in Mc) for frequency of INPUT signal.

3-11. 50 TO 512 MC, AMPLITUDE LESS THAN 50 MV RMS. The front panel level indicator meter indicates in the green portion of its scale only when converter is properly tuned and amplitude of INPUT signal is adequate for accurate frequency measurement. However, because of conservative specifications of both the converter and counter, frequencies may often be accurately measured when meter reads in the red portion of its scale. To make these extended range measurements:

a. Follow normal procedure (Figure 3-2 or Paragraph 3-10, depending upon frequency range) except that mixing frequency control should be tuned for first maximum reading on the level indicator meter, regardless of the color of region maximum.

b. Check frequency measurement result as described in Paragraph 3-12, or

c. Insert an external variable attenuator (such as Hewlett-Packard Model 355A or 355C) in the transmission line between the converter and the source of INPUT signal. Vary attenuation from 0 to 1 db during final step of frequency measurement procedure. If counter display does not change more than momentarily (during switching of attenuator), INPUT signal is above noise threshold and frequency measurement result is valid.

3-12. DOUBLE-CHECKING FREQUENCY MEASUREMENT RESULT.

3-13. Because of the heterodyne action of the converter, frequency measurement results obtained at any one setting of the mixing frequency control may be checked at other settings. See Figure 3-3 for examples.

Table 3-1. Frequency Resolution

INPUT SIGNAL FREQUENCY = 151.1223344 Mc MIXING FREQUENCY CONTROL set to 140 Mc		
Time Base Setting	Counter Display	Measurement Resolution
.1 μ s	* (no display)	
1 μ s	1 1. Mc	1 5 1. Mc
10 μ s	1 1.1 Mc	1 5 1.1 Mc
.1 ms	1 1.1 2 Mc	1 5 1.1 2 Mc
1 ms	1 1 1 2 2. kc	1 5 1.1 2 2 Mc
10 ms	1 1 1 2 2.3 kc	1 5 1.1 2 2 3 Mc
.1 s	1 1 1 2 2.3 3 kc	1 5 1.1 2 2 3 3 Mc
1 s	1 1 1 2 2.3 3 4 kc	1 5 1.1 2 2 3 3 4 Mc
10 s	1 1 2 2.3 3 4 4 kc	1 5 1.1 2 2 3 3 4 4 Mc



CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period. No other warranty is expressed or implied. We are not liable for consequential damages.

For any assistance contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



OPERATING AND SERVICE MANUAL

MODEL 5253B FREQUENCY CONVERTER

SERIALS PREFIXED: 513-

This manual applies directly to \oplus Model 5253B Frequency Converters having serial number prefix 513-

OLDER INSTRUMENTS

This manual with changes provided in Appendix I also applies to models having serial prefix numbers 450, 321, and 311

MODEL 5253A

This manual with information provided in Appendix II also applies to Model 5253A Frequency Converters having serial prefix numbers 238 and 226.

Copyright HEWLETT-PACKARD COMPANY 1963
1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL	1-1	V MAINTENANCE (cont'd)	
1-1. Description	1-1	5-10. Repair and Replacement	5-1
1-5. Specifications	1-1	5-12. Printed Circuit Component	5-3
1-7. Accessory	1-1	Replacement	5-3
1-9. Instrument Identification	1-1	5-14. Video Amplifier Assembly	5-3
1-11. Cooling	1-1	Replacement	5-3
II PREPARATION FOR USE	2-1	5-16. Mixer Diode Replacement	5-3
2-1. Unpacking and Mechanical Inspection .	2-1	5-18. Meter Replacement Procedure	5-3
2-3. Electrical Inspection	2-1	5-20. Harmonic Generator Adjustment	5-4
2-5. Storage and Reshipment	2-1	5-22. Low Pass Filter Adjustment	5-4
2-8. Installation	2-1	5-25. Mechanical Adjustment of Meter	
2-11. Power Requirements	2-1	Zero	5-5
2-13. Electrical Connections	2-1	5-28. Sensitivity Check	5-5
III OPERATION	3-1	5-29. Meter Accuracy Check	5-5
3-1. Front Panel	3-1	5-30. Low Pass Filter Check	5-5
3-3. Maximum Input Voltages	3-1	5-31. In-Cabinet Performance Check	5-6
3-5. Operating Procedures	3-1		
3-6. Normal Range Measurements	3-1		
3-8. Extended Range Measurements	3-1		
3-12. Double-Checking Frequency			
Measurement Result	3-1		
3-14. Aid to Rapid Tuning	3-3		
IV PRINCIPLES OF OPERATION	4-1		
4-1. General	4-1		
4-5. Harmonic Generator (A2, A3), and			
Harmonic Selector Cavity	4-1		
4-7. Mixer (A4)	4-2		
4-9. Video Amplifier Assembly (A1)	4-2		
4-11. Level Indicator Meter	4-2		
V MAINTENANCE	5-1		
5-1. General	5-1		
5-2. Introduction	5-1		
5-4. Periodic Maintenance	5-1		
5-6. Test Equipment	5-1		
5-8. Troubleshooting	5-1		
		APPENDIX II - Model 5353A	
		IIA-1. Introduction	IIA-1
		IIA-3. Description	IIA-1
		IIA-7. Operating Procedure	IIA-1
		IIA-8. Normal Range Measurements	IIA-1
		IIA-10. Extended Range Measurements	IIA-1
		IIA-14. Video Amplifier Assembly (A1)	IIA-3
		IIA-16. Level Indicator Meter	IIA-3
		IIA-18. Harmonic Generator Adjustment	IIA-3
		IIA-20. Low Pass Filter Adjustment	IIA-3
		IIA-22. Meter Adjustment	IIA-3
		Meter Zero	IIA-5
		IIA-26. Sensitivity Check	IIA-5
		IIA-27. Meter Accuracy Check	IIA-5
		IIA-28. Low Pass Filter Check	IIA-5
		IIA-29. In-Cabinet Performance	
		Check	IIA-6

LIST OF ILLUSTRATIONS


Figure	Page	Figure	Page
1-1. Model 5253B	1-0	5-4. Top View - Test Points	5-9
3-1. Front Panel	3-0	5-5. Schematic Diagram	5-9
3-2. Frequency Measurement Procedure	3-2	APPENDIX	
3-3. Typical Frequency Measurements	3-3	IA-1. Schematic Diagram	IA-2
4-1. Block Diagram	4-0	IIA-1. Frequency Measurement Procedure	IIA-2
4-2. Harmonic Generator (A2, A3)	4-0	IIA-2. Video Amplifier (A6)	IIA-4
4-3. Harmonic Selector Cavity	4-1	IIA-3. Level Indicator Meter Circuit	IIA-4
4-4. Balanced Mixer (A4)	4-2	IIA-4. Top View	IIA-6
4-5. Video Amplifier (A1)	4-3	IIA-5. Left Side View	IIA-7
4-6. Level Indicator Meter Circuit	4-3	IIA-6. Right Side View	IIA-8
5-1. A1 Video Amplifier Component Location	5-6	IIA-7. Top View - Test Points	IIA-9
5-2. Left Side View	5-7	IIA-8. Schematic Diagram	IIA-11
5-3. Right Side View	5-8		

LIST OF TABLES

Table	Page	Table	Page
1-1. Specifications	1-1	6-2. Replaceable Parts	6-4
3-1. Frequency Resolution	3-1	APPENDIX	
5-1. Recommended Test Equipment	5-1	IA-1. Reference Designation Index	IA-3
5-2. Resistance Troubleshooting Aid	5-1	IIA-1. Specifications	IIA-1
5-3. Troubleshooting Procedure	5-2	IIA-2. Troubleshooting Procedure	IIA-10
5-4. Adjustments after Repair	5-4	IIA-3. Reference Designation Index	IIA-12
6-1. Reference Designation Index	6-2	IIA-4. Replaceable Parts	IIA-14



5253B
frequency
converter

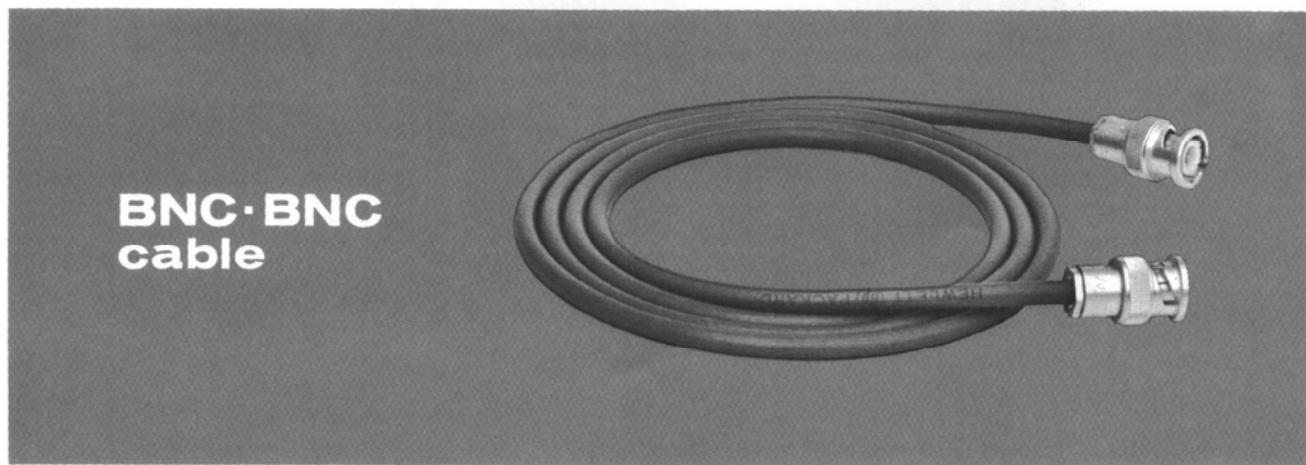

BNC-BNC
cable

Figure 1-1. Model 5253B and Accessory

SECTION I

GENERAL

1-1. DESCRIPTION.

1-2. The Hewlett-Packard Model 5253B Frequency Converter is a plug-in unit which converts a Hewlett-Packard Model 5243L or 5245L Electronic Counter into a direct reading counter from 50 to 512 Mc.

1-3. The stability and accuracy of the basic counter are retained by multiplying a 10-Mc signal, derived from the 1-Mc internal time base of the counter, to a selectable harmonic frequency between 50 and 500 Mc. This known harmonic of 10 Mc is then heterodyned with the INPUT signal. If the resulting difference frequency is between 100 kc and 12 Mc (bandwidth of amplifier in plug-in), it is counted and displayed by the counter. The frequency of the INPUT signal is then indicated by the combination of the MIXING FREQUENCY control (in megacycles; front panel of plug-in) and the digital display of the counter (in megacycles).

1-4. A front panel meter, by monitoring the difference-frequency output of the plug-in to the counter, aids in selecting the desired MIXING FREQUENCY and also in determining if INPUT signal amplitude is adequate for accurate frequency measurement.

1-5. SPECIFICATIONS.

1-6. Table 1-1 contains all technical specifications for the Model 5253B when operated in the Model 5243L

or Model 5245L Electronic Counter. Test specifications given in the Maintenance Section (Section V) of this manual, for the purposes of troubleshooting and adjustment, do not represent the technical specifications of the instrument.

1-7. ACCESSORY.

1-8. A 50-ohm coaxial cable, 48 inches long, male BNC to male BNC, is furnished with the Model 5253B.

1-9. INSTRUMENT IDENTIFICATION.

1-10. Hewlett-Packard identifies each Model 5253B with a two-section, eight-digit serial number. If the first three digits of the serial number of your instrument do not agree with those on the title page of this manual, change sheets supplied with the manual will define the differences between your instrument and the Model 5253B described in this manual.

1-11. COOLING.

1-12. The Model 5253B is cooled by the ventilation system of the counter in which it is installed. See operating and service manual of counter for cooling system maintenance instructions.

Table 1-1. Specifications*

RANGE: As converter for 5243L or 5245L counter, 50 Mc to 512 Mc, using mixing frequencies of 50 Mc to 500 Mc in 10 Mc steps.

ACCURACY: Retains accuracy of 5243L or 5245L counter

INPUT VOLTAGE RANGE: 50 mv to 1 v RMS

MAXIMUM INPUT: 2 v RMS or 100 vdc will not damage the instrument

INPUT IMPEDANCE: Approximately 50 ohms

LEVEL INDICATOR: Meter aids frequency selection; indicates output voltage level to counter

REGISTRATION: Counter display is added to the converter dial reading

WEIGHT: Net 5-1/2 lbs, shipping 9 lbs

ACCESSORY FURNISHED: ^④10503A (AC-16K) Cable, 4 feet long, male BNC connectors

*When installed in Hewlett-Packard Model 5243L or Model 5245L Electronic Counter.

SECTION II

PREPARATION FOR USE

2-1. UNPACKING AND INSPECTION.

2-2. If the shipping carton is damaged, ask that the carrier's agent be present when the instrument is unpacked. Inspect the instrument for damage (scratches, dents, broken knobs, etc). If the instrument is damaged or fails to meet specifications, notify the carrier and the nearest Hewlett-Packard field office immediately (field offices are listed at the back of this manual). Retain the shipping carton and the padding material for the carrier's inspection. The field office will arrange for the repair or replacement of your instrument without waiting for the claim against the carrier to be settled.

2-3. ELECTRICAL INSPECTION.

2-4. The performance check procedure (Paragraph 5-31) may be used to verify proper electrical operation as part of an incoming quality control inspection.

2-5. STORAGE AND RESHIPMENT.

2-6. **PACKAGING.** To protect valuable electronic equipment during storage or reshipment, always use the best packaging methods available. Your Hewlett-Packard field engineer can provide packing materials similar to those used for original factory packaging. Here are two recommended packing methods:

a. **Original.** Place instrument in original container. Replace each packing pad and filler in the exact position that it originally occupied.

b. **Alternate.** Cover panel with soft wrapping paper. Wrap corrugated cardboard completely around instrument and place in strong corrugated cardboard container (350 lb/sq in. bursting test). Insert filler material between wrapped instrument and container to obtain a snug fit on all surfaces. Filler should be rubberized hair (2 in. thick), excelsior (6 in. thick), or equivalent.

2-7. **ENVIRONMENT.** Conditions during storage and shipment should normally be limited as follows:

a. Maximum altitude 20,000 feet (6,096 meters).

b. Minimum temperature -40°F (-40°C).

c. Maximum temperature 167°F (75°C).

CAUTION

TURN COUNTER POWER OFF BEFORE
INSTALLING OR REMOVING FREQUENCY
CONVERTER.

2-8. INSTALLATION.

2-9. The Model 5253B plugs into the rectangular compartment at the right-hand side of the front panel of the Model 5243L or 5245L Electronic Counter. To install unit in counter, first check that retaining screw (see Figure 3-1) is turned fully counterclockwise, then push unit firmly into compartment until front panel of plug-in is flush with front panel of counter. Then turn retaining screw clockwise until it is tight.


2-10. To remove unit from counter, turn retaining screw counterclockwise to its stop. Then grasp mixing frequency selector (see Figure 3-1) and firmly pull unit from counter. If any difficulty is encountered with installation or removal, check that retaining screw is fully counterclockwise.

2-11. POWER REQUIREMENTS.

2-12. All electrical power required to operate the Model 5253B is supplied by the counter in which the unit is installed.

2-13. ELECTRICAL CONNECTIONS.

2-14. INPUT connector on front panel of plug-in (see Figure 3-1) is the only external electrical connection to the unit. All other connections are made through the 50-pin connector at the rear of plug-in when installed in counter.

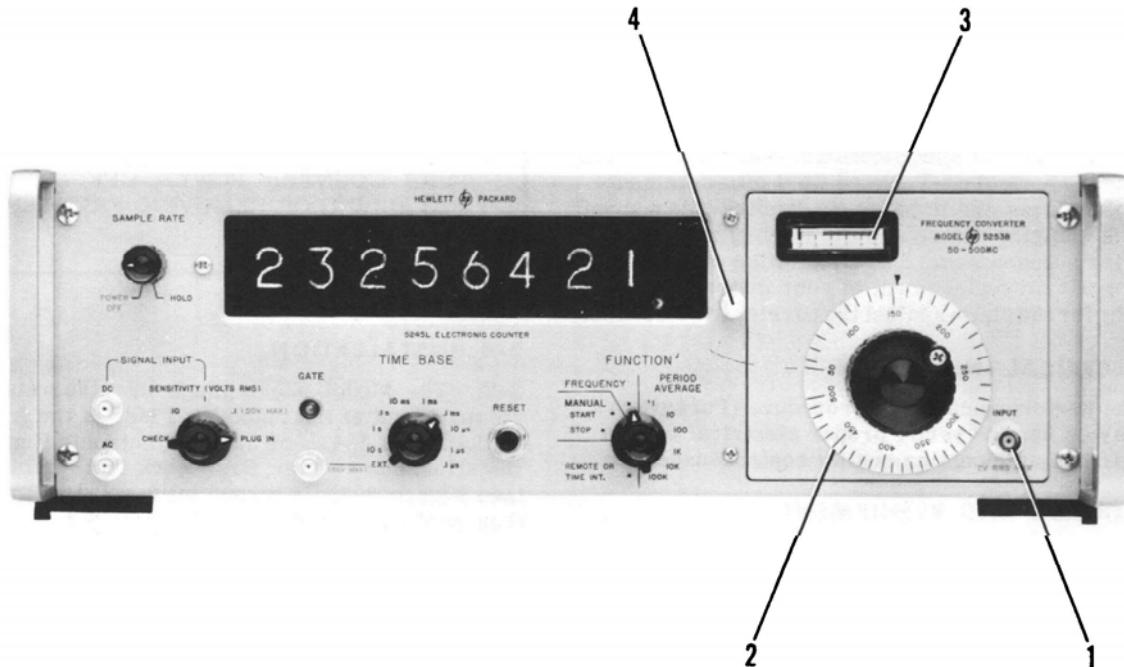

1. INPUT signal connector.
2. MIXING FREQUENCY SELECTOR. Calibrated in mc, this control tunes the internal cavity to select a harmonic of 10 mc to be heterodyned with the INPUT signal.
3. LEVEL INDICATOR METER. The meter circuit continuously monitors the level of the

difference-frequency output of converter to counter. When meter reads in the green portion of its scale, INPUT signal amplitude is adequate for accurate frequency measurement.

4. RETAINING SCREW. The screw which holds the converter in place is located on the front panel of the counter. To tighten, turn fully clockwise. To loosen, turn fully counter-clockwise.

05253-A-13

Figure 3-1. Front Panel

SECTION III

OPERATION

3-1. FRONT PANEL.

3-2. The functions of the front panel control, meter, connector, and retaining screws are given in Figure 3-1.

3-3. MAXIMUM INPUT VOLTAGES.

3-4. Damage to the converter may result if an AC signal greater than 2 v RMS or a DC voltage greater than 100 v is applied to converter INPUT connector.

3-5. OPERATING PROCEDURES.

3-6. NORMAL RANGE MEASUREMENTS.

3-7. Figure 3-2 is the procedure to be used for measurement of frequencies from 100.1 to 512 Mc with INPUT signal amplitudes from 50 mv to 1 v RMS.

3-8. EXTENDED RANGE MEASUREMENTS.

3-9. The frequency of signals not within the normal range of 100.1 to 512 Mc, 50 mv to 1 v RMS, may be measured using the following procedures:

3-10. 88 TO 100.1 MC, 50 MV TO 1 V RMS. Perform steps 1 through 5 of Figure 3-2. Then:

- a. Set mixing frequency control to slightly more than 110 Mc.
- b. Turn mixing frequency control slowly clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
- c. Subtract counter display (in Mc) from reading of mixing frequency control (in Mc) for frequency of INPUT signal.

3-11. 88 TO 512 MC, AMPLITUDE LESS THAN 50 MV RMS. The front panel level indicator meter indicates in the green portion of its scale only when converter is properly tuned and amplitude of INPUT signal is adequate for accurate frequency measurement. However, because of conservative specifications of both the converter and counter, frequencies may often be accurately measured when meter reads in the red portion of its scale. To make these extended range measurements:

a. Follow normal procedure (Figure 3-2 or Paragraph 3-10, depending upon frequency range) except that mixing frequency control should be tuned for first maximum reading on the level indicator meter, regardless of the color of region maximum.

b. Check frequency measurement result as described in Paragraph 3-12, or


c. Insert an external variable attenuator (such as Hewlett-Packard Model 355A or 355C) in the transmission line between the converter and the source of INPUT signal. Vary attenuation from 0 to 1 db during final step of frequency measurement procedure. If counter display does not change more than momentarily (during switching of attenuator), INPUT signal is above noise threshold and frequency measurement result is valid.

3-12. DOUBLE-CHECKING FREQUENCY MEASUREMENT RESULT.

3-13. Because of the heterodyne action of the converter, frequency measurement results obtained at any one setting of the mixing frequency control may be checked at other settings. See Figure 3-3 for examples.

Table 3-1. Frequency Resolution

INPUT SIGNAL FREQUENCY = 151.1223344 Mc MIXING FREQUENCY CONTROL set to 140 Mc		
Time Base Setting	Counter Display	Measurement Resolution
.1 μ s	* (no display)	
1 μ s	1 1. Mc	1 5 1. Mc
10 μ s	1 1.1 Mc	1 5 1.1 Mc
.1 ms	1 1.1 2 Mc	1 5 1.1 2 Mc
1 ms	1 1 1 2 2 . kc	1 5 1.1 2 2 Mc
10 ms	1 1 1 2 2 .3 kc	1 5 1.1 2 2 3 Mc
.1 s	1 1 1 2 2 .3 3 kc	1 5 1.1 2 2 3 3 Mc
1 s	1 1 1 2 2 .3 3 4 kc	1 5 1.1 2 2 3 3 4 Mc
10 s	1 1 2 2 .3 3 4 4 kc	1 5 1.1 2 2 3 3 4 4 Mc

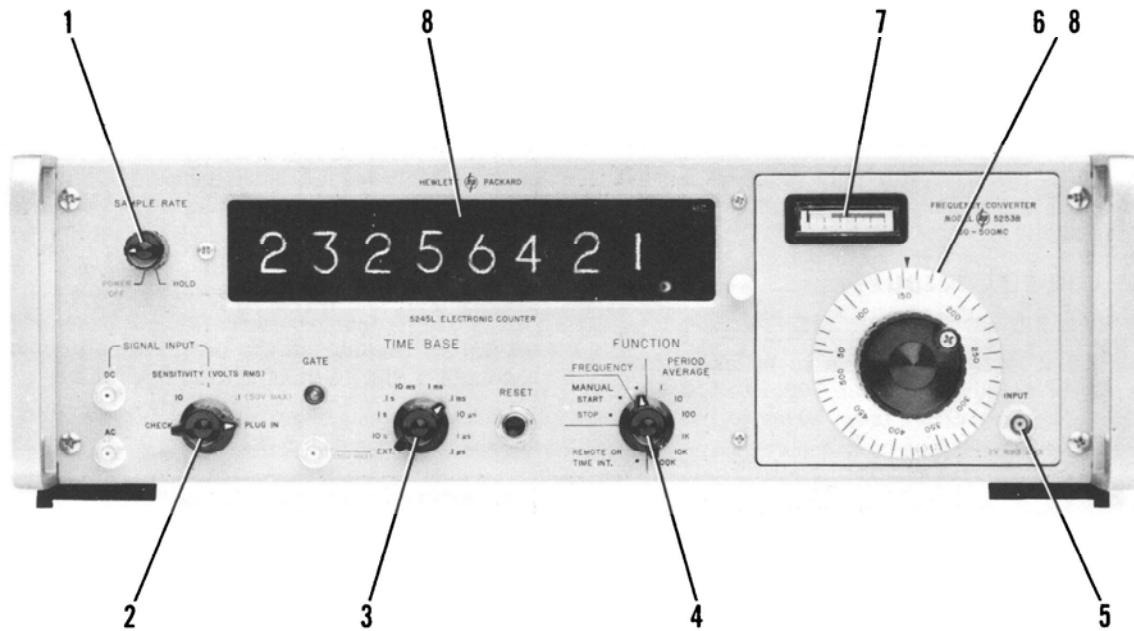

1. Turn SAMPLE RATE control slightly out of POWER OFF position.
2. Set SENSITIVITY to PLUG IN.
3. Set TIME BASE to .1 ms.*
4. Set FUNCTION to FREQUENCY.
5. Connect signal whose frequency is to be measured to INPUT of converter.
6. Set mixing frequency control to read slightly less than 50 Mc.
7. Slowly turn mixing frequency control counter-clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
8. Add counter display (in Mc) to mixing frequency control reading (in Mc) for frequency of INPUT signal.

* TIME BASE setting may vary, depending on desired resolution of INPUT signal frequency. See Table 3-1.


05253-A-14

Figure 3-2. Frequency Measurement Procedure

3-14. AID TO RAPID TUNING

3-15. To easily obtain an indication of the proper MIXING FREQUENCY when rapidly tuning the Model 5253B through its frequency range in search of an unknown INPUT frequency, set counter FUNCTION control to MANUAL START. This allows the counter to

totalize each cycle of any difference frequency produced during rapid tuning. When counter display changes, indicating that the MIXING FREQUENCY is heterodyning with the INPUT frequency and producing a difference frequency within the frequency range of the basic counter, set counter FUNCTION control to FREQUENCY and proceed with measurement.

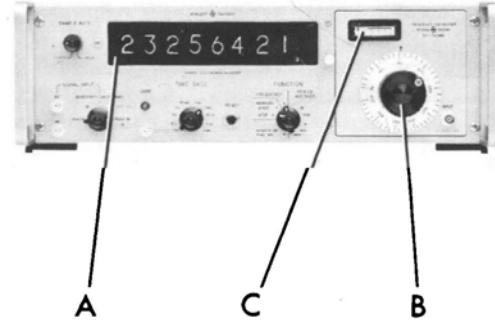

INPUT FREQ.	A	B	C	
155.000 MC	00000000	140	<input type="checkbox"/> <input checked="" type="checkbox"/>	DIFFERENCE FREQUENCY OF 15 MC IS ABOVE PASS BAND OF VIDEO AMPLIFIER ASSEMBLY.
	00005000	150	<input checked="" type="checkbox"/> <input type="checkbox"/>	150.000 MC $+ 5.000 \text{ MC}$ \hline 155.000 MC
	00005000	160	<input type="checkbox"/> <input checked="" type="checkbox"/>	160.000 MC $- 5.000 \text{ MC}$ \hline 155.000 MC
150.030 MC	00010030	140	<input type="checkbox"/> <input checked="" type="checkbox"/>	140.000 MC $+ 10.030 \text{ MC}$ \hline 150.030 MC
	00000000	150	<input type="checkbox"/> <input checked="" type="checkbox"/>	DIFFERENCE FREQUENCY OF 30 KC IS BELOW PASS BAND OF VIDEO AMPLIFIER ASSEMBLY.
	00009970	160	<input checked="" type="checkbox"/> <input type="checkbox"/>	160.000 MC $- 9.970 \text{ MC}$ \hline 150.030 MC
512.000 MC	00000000	480	<input type="checkbox"/> <input checked="" type="checkbox"/>	DIFFERENCE FREQUENCY OF 32 MC IS ABOVE PASS BAND OF VIDEO AMPLIFIER ASSEMBLY.
	00000000	490	<input checked="" type="checkbox"/> <input type="checkbox"/>	DIFFERENCE FREQUENCY OF 22 MC IS ABOVE PASS BAND OF VIDEO AMPLIFIER ASSEMBLY.
	00012000	500	<input type="checkbox"/> <input checked="" type="checkbox"/>	500.000 MC $+ 12.000 \text{ MC}$ \hline 512.000 MC

05253-A-II

Figure 3-3. Typical Frequency Measurements

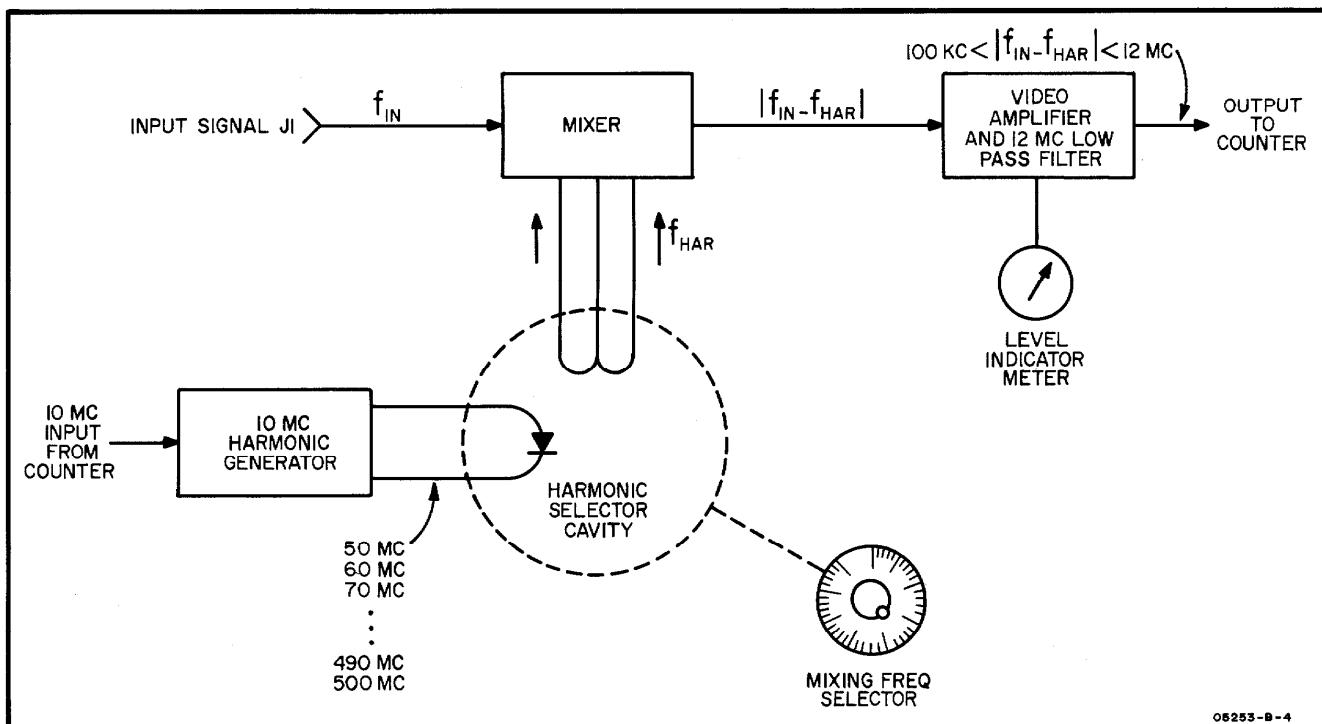


Figure 4-1. Block Diagram

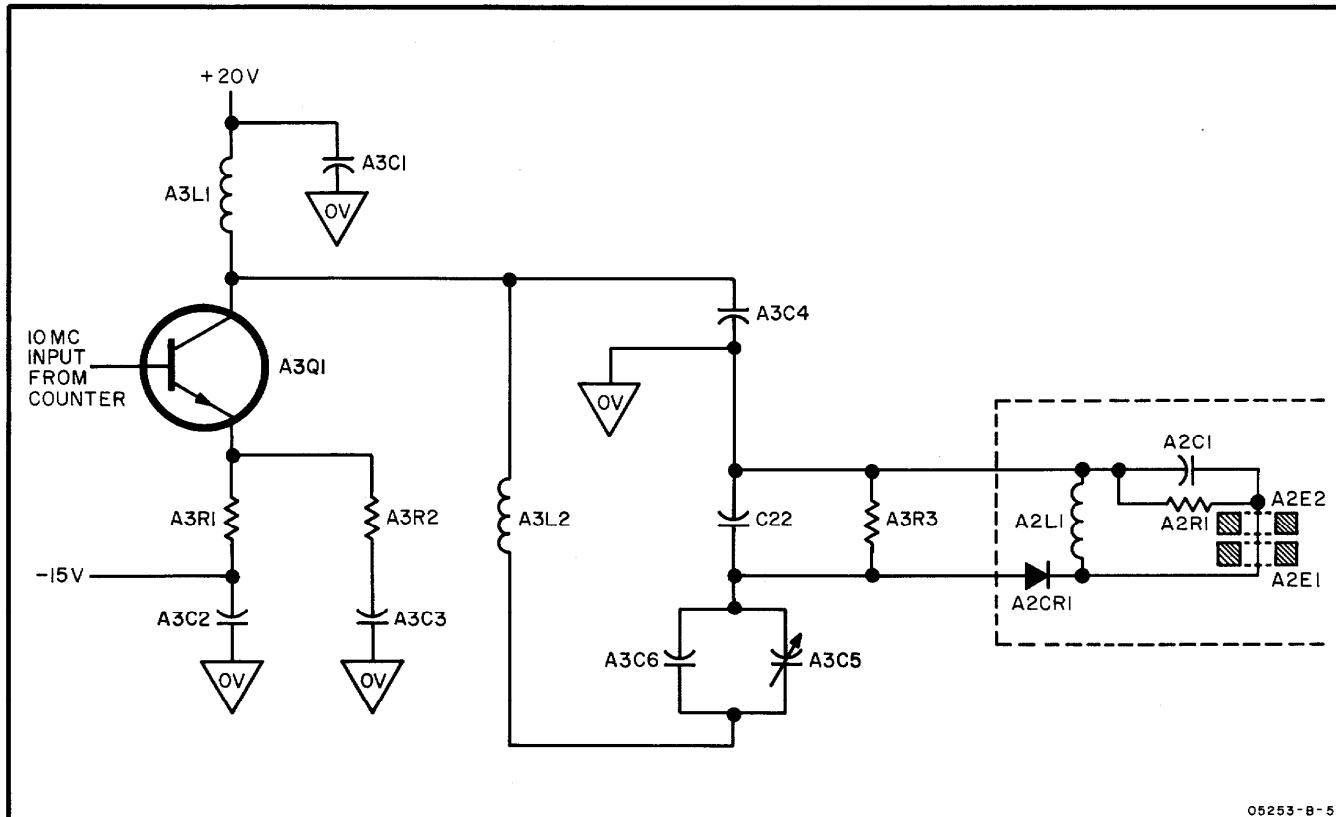


Figure 4-2. Harmonic Generator (A2, A3)

SECTION IV

PRINCIPLES OF OPERATION

4-1. GENERAL

4-2. The Model 5253B is a heterodyne frequency converter designed to extend the range of frequency measurement of the Model 5243L and 5245L Electronic Counters to 512 Mc.

4-3. The converter contains four basic functional sections: harmonic generator, harmonic selector cavity, mixer, and video amplifier (see Figure 4-1).

4-4. In normal operation, the harmonic generator produces all of the harmonics of 10 Mc between 50 and 500 Mc. The harmonic selector cavity is tuned to select one of these harmonics to be supplied to the mixer. The mixer output is the difference frequency produced by the mixing of the INPUT frequency and the frequency supplied by the harmonic selector cavity. This difference frequency is amplified by the video amplifier and supplied to the counter input circuit. A low-pass filter within the video amplifier prevents all difference frequency signals above approximately 12 Mc from reaching the counter input circuit. The output of the video amplifier is monitored by a meter circuit which indicates when difference frequency output amplitude is greater than minimum signal required by counter input circuit.

4-5. HARMONIC GENERATOR (A2,A3), AND HARMONIC SELECTOR CAVITY

4-6. A 10-Mc signal, supplied by the Counter, is amplified by A3Q1 to cause a tuned circuit, composed of A3L2, A3C4, A3C5, A3C6, and C22, to oscillate at 10-Mc (Fig. 4-2). Step-recovery diode*, A3CR1, takes energy from this tuned circuit during a portion of each cycle of the 10-Mc oscillation and produces a sharp step in the current flowing in the input loop of the harmonic selector cavity. This current step makes available, inside the cavity, all harmonics of 10 Mc from 10 Mc (fundamental) to over 500 Mc (fiftieth harmonic). The remaining components of the step-recovery diode network (Assembly A2) are used to maintain the sensitivity of the counter across its frequency range. The harmonic selector cavity is tuned to resonate at a particular harmonic of 10 Mc between 50 and 500 Mc so that energy at that frequency is coupled from the input loop to the output loops providing one of the two inputs to the mixer circuit (Fig. 4-22).

*-hpa- Application Note #1 (The Step Recovery Diode; Circuit Design and Performance), -hpa- Application Note #2 (Harmonic Generation, Rectification, and Lifetime Evaluation with the Step Recovery Diode; reprinted from the PROCEEDINGS OF THE IRE, VOL. 50, NO. 7, JULY 1962); available from -hp associates-, 620 Page Mill Road, , Palo Alto, California.

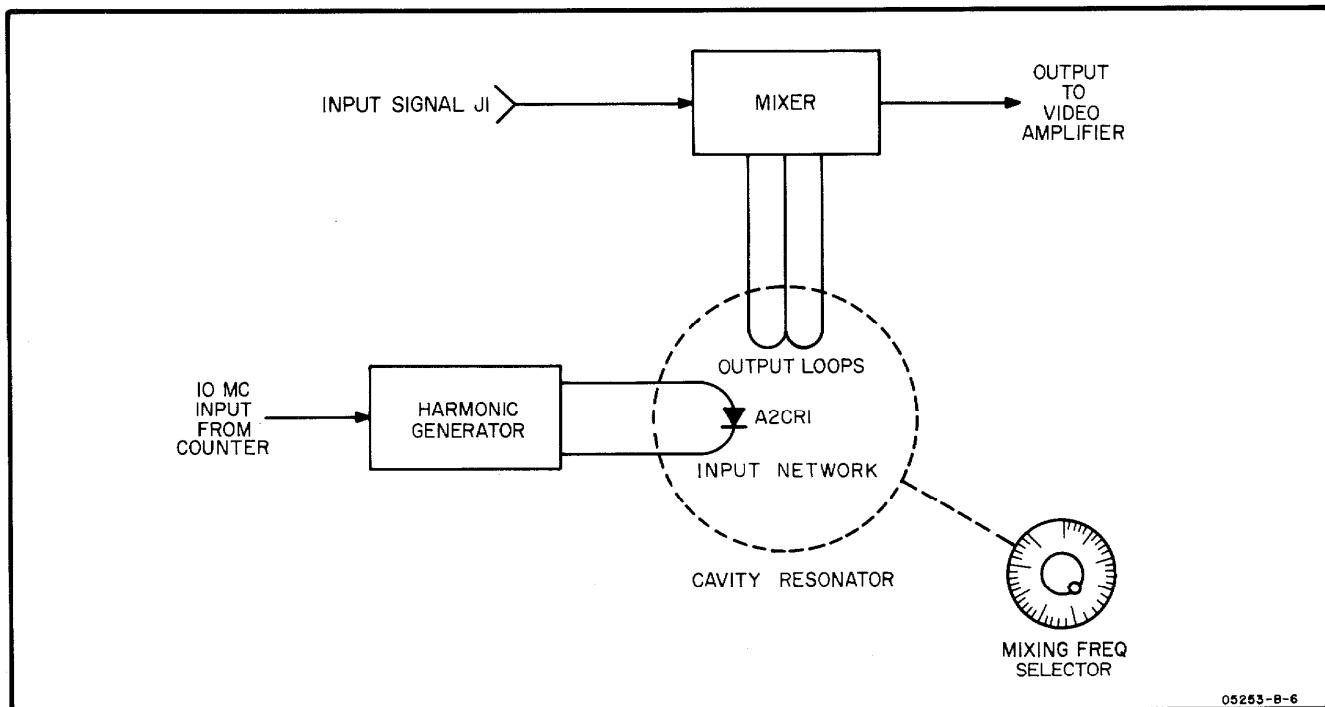


Figure 4-3. Harmonic Selector Cavity

4-7. MIXER (A4)

4-8. Matched diodes are used in a balanced mixer circuit in order to minimize the generation of even-order harmonics of both the INPUT signal and the selected mixing frequency. The balanced input signal required by the circuit is accomplished by grounding the junction of the two resistors of equal value, A4R1 and A4R2, and installing ferrite rings (E1, E2, and E3) around the input coaxial cable (see Figure 4-4). Both sides of resistor A4R1 are returned to common for DC currents. However, for AC currents in the frequency range of 50 to 512 Mc, the impedance of the input signal path is large, due to the inductance provided by the ferrite rings E1, E2, and E3, causing a balanced AC signal condition at the mixer diodes. Limiting diode A4CR2 prevents INPUT signals of high amplitude from overloading the mixer circuit. The output of the mixer diodes, during normal operation when the converter is properly tuned, is a complex signal containing the INPUT signal frequency, the frequency of the harmonic of 10 Mc to which the harmonic selector cavity is tuned, the frequency that is the sum of these two frequencies, and the frequency that is the difference between these two frequencies. Inductor A4L1 reduces the amplitude of any signal with a frequency above approximately 15 Mc before the signal reaches the input to the video amplifier. The output of the mixer circuit is then essentially composed of the difference frequency signal.

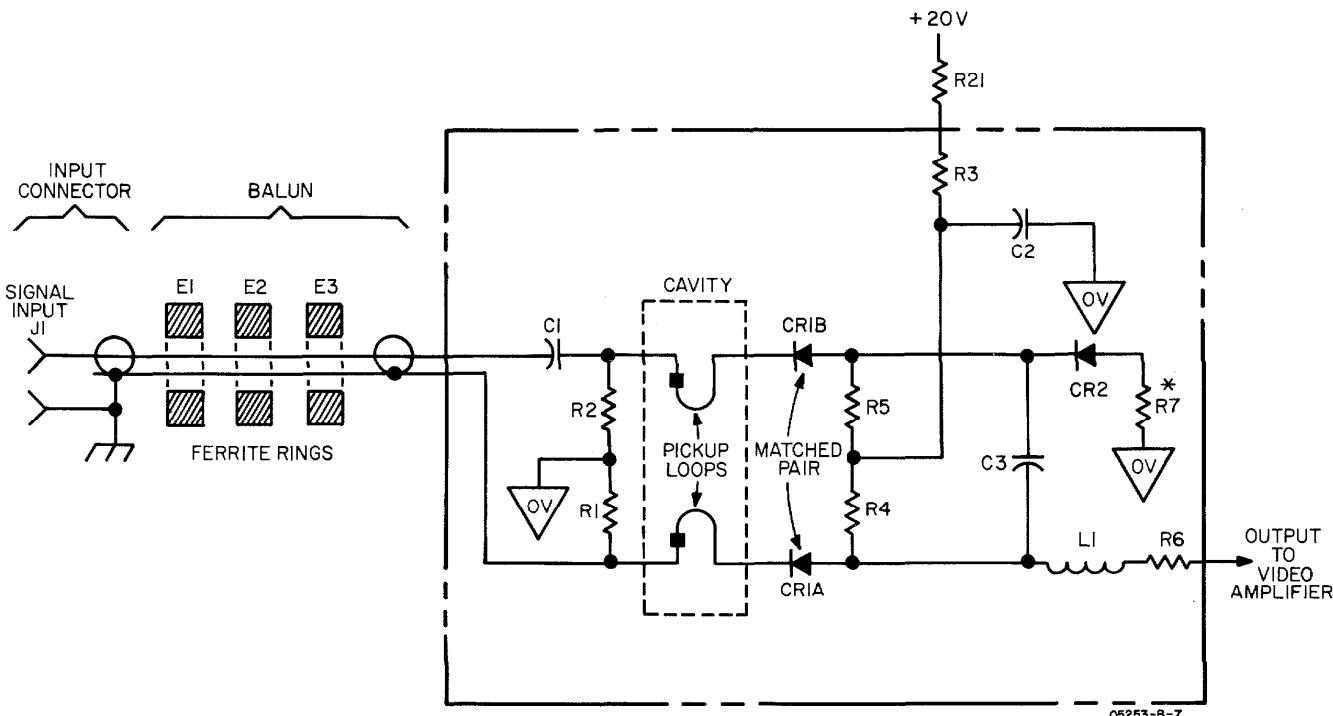


Figure 4-4. Balanced Mixer (A4)

4-9. VIDEO AMPLIFIER ASSEMBLY (A1)

4-10. The output of the mixer circuit is amplified by transistors A1Q1 and A1Q2 and is fed to the 12-Mc low-pass filter network (see Figure 4-5). This filter passes any signal frequency below approximately 12 Mc and attenuates all higher frequency signals. The lowpass filter output is amplified by A1Q3 and A1Q4 and fed to the last transistor amplifier, A1Q5, which provides both the output to the counter and the drive for the level indicator meter. The limiter diode, A1CR1, prevents the amplitude of the video amplifier output signal from exceeding approximately 300 mv RMS so that counter input circuits will not be overloaded. The low frequency limit of the video amplifier, determined by the bypass and interstage coupling networks, is approximately 100 kc. The converter output signal to the counter, when converter is properly tuned, will be between approximately 100 kc and 12 Mc and will have an amplitude that is less than approximately 300 mv RMS.

4-11. LEVEL INDICATOR METER

4-12. The DC current supply for the meter is produced by metering detector A1CR3 and smoothed by capacitor A1C16 (see Figure 4-6). The value of shunt resistor A1R20 is selected to make level indicator meter M1 read at red-green border when amplitude of converter output to counter is in excess of the 100-mv RMS minimum signal amplitude normally required by the counter for accurate frequency measurement.

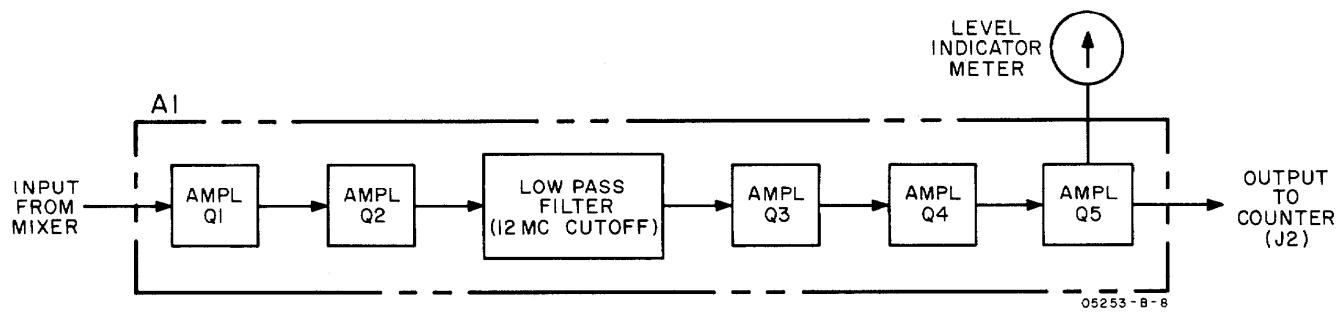


Figure 4-5. Video Amplifier (A1)

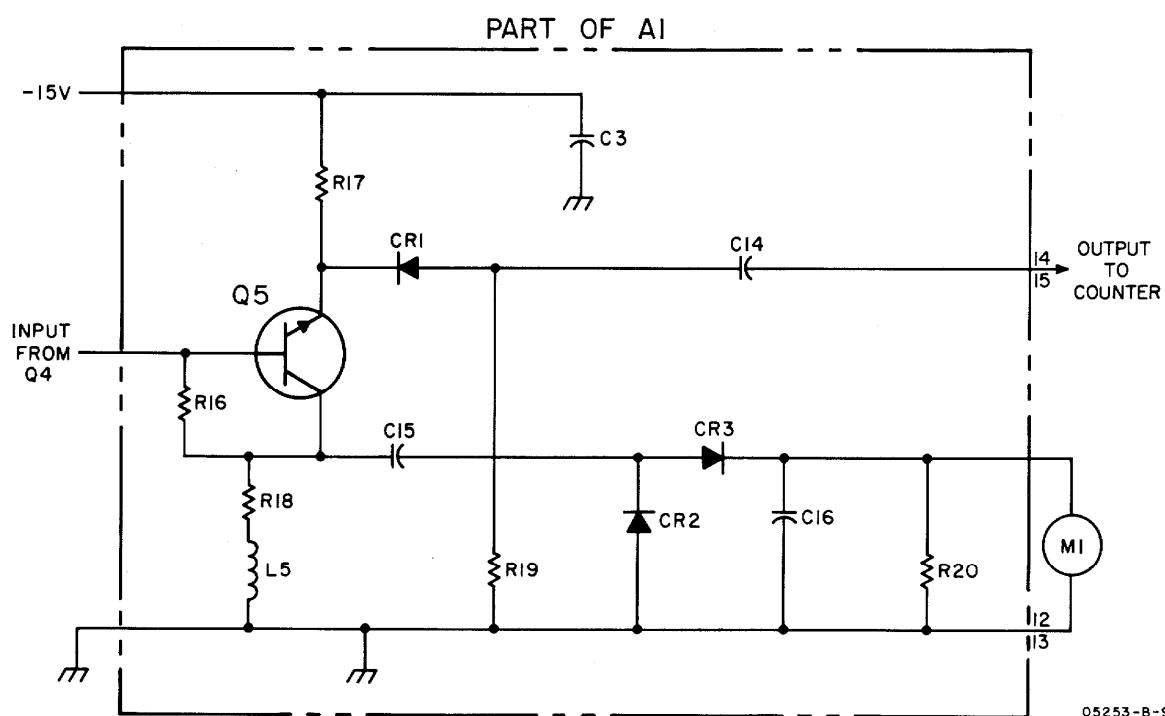


Figure 4-6. Level Indicator Meter Circuit

SECTION V

MAINTENANCE

5-1. GENERAL.

5-2. INTRODUCTION.

5-3. This section contains information concerning periodic maintenance, troubleshooting and recommended test equipment, repair, circuit adjustments, and performance testing. A complete schematic diagram of the converter is at the rear of this section (Figure 5-5).

5-4. PERIODIC MAINTENANCE.

5-5. No special maintenance procedures are required when the converter is operated in normal environments. However, if unit is subjected to operation in extremely dusty environments, periodically clean all gears with a lint-free cloth and apply a coating of light, petroleum base, open-gear grease to all gear teeth.

5-6. TEST EQUIPMENT.

5-7. All test instruments required for performance testing, troubleshooting, and circuit adjustment after repair are listed in Table 5-1. Instruments having equivalent specifications may be substituted for the specific instruments recommended.

5-8. TROUBLESHOOTING.

5-9. Table 5-2 lists resistances from connecting pins on connector J1 to chassis (when unit is not connected to counter) to aid in troubleshooting. Table 5-3 is a suggested troubleshooting procedure which lists circuit conditions at Test Points throughout the converter. These Test Points are keyed to the component

location drawings, Figures 5-1, 5-2, 5-3 and 5-4, and also to the schematic diagram, Figure 5-5. Voltages listed in Table 5-3 are approximate and may vary widely between instruments, due to variations in component values. Table 5-4 lists recommended adjustments to be made after repair of any section of the converter.

Table 5-2. Resistance Troubleshooting Aid

Location	Resistance (to Chassis)*
J1 - Pin 1	> 100 megohms
J1 - Pin 15	1 K ohms ±20%
J1 - Pin 20	140 K ohms ±20%
J1 - Pin 25	125 K ohms ±20%

*Unit not connected to counter.

5-10. REPAIR AND REPLACEMENT.

5-11. Paragraphs 5-12 through 5-19 are replacement procedures to aid in repair of the converter. Detailed procedures for replacement of all the individual components of the unit are beyond the scope of this manual. In-field repair is, for the most part, simple and straightforward. However, do not attempt adjustment of the gearing arrangement, the harmonic selector cavity or the step-recovery diode. Should gear, cavity, or step recovery diode problems arise, please contact your Hewlett-Packard field office to arrange for repair.

Table 5-1. Recommended Test Equipment

Instrument	Required Characteristics	Use	Instrument Recommended
Electronic Counter		Supply Power, Visual Operational Indicator	⊖ Model 5243L or ⊖ Model 5245L
RF Millivoltmeter	1 Mc to 20 Mc 10 mv to 10 vdc 10 mv resolution	Circuit Adjustment, Troubleshooting	⊖ Model 411A with Pen Type Probe Tip, ⊖ 11022A (formerly ⊖ 411A-21B)
DC VTVM and Ohmmeter	0 to +25 vdc 0.1 v resolution 0 to 100 M ohms	Circuit Adjustment, Troubleshooting	⊖ Model 412A
VHF Signal Generator	50 Mc to 480 Mc 10 mv to 1 v	Circuit Adjustment, Troubleshooting	⊖ Model 608C
Oscilloscope	15 Mc bandwidth	Circuit Adjustment, Troubleshooting	⊖ Model 175A with ⊖ Model 1752A High Gain Amplifier and ⊖ Model 1780A Aux Unit
Extension Cable	50 pin straight-thru connections	Circuit Adjustment, Troubleshooting	⊖ 10506A (formerly ⊖ AC-16Y)

Table 5-3. Troubleshooting Procedure

All voltages given are approximate and may vary from instrument to instrument because of variations in component characteristics.

TEST EQUIPMENT: \oplus Model 411A RF Millivoltmeter with \oplus 11022A (formerly 411A-21B) Pen Type Probe Tip,
 \oplus Model 412A DC VTVM

REMOVE \oplus 5253B FROM COUNTER; SELF-CHECK COUNTER	See counter manual for self-check procedure.
CONNECT \oplus 5253B TO COUNTER WITH EXTENSION CABLE, \oplus 10506A (formerly AC-16Y)	Extension cable available from \oplus ; see parts list.
\star 1 +20 VDC	Checks power supplied to plug-in from counter; see counter manual for power supply adjustment procedure.
\star 2 -15 VDC	
\star 3 + 6 VDC 2 VAC	Checks 10-Mc drive of harmonic generator.
\star 4 \pm 2 VDC 2 VAC	Checks generator diode drive. Voltages vary widely because of both the detuning effect of voltmeter probe and the variable value of A3R3. DC voltage may be either + or -, depending upon factory determined generator diode orientation.
\star 5 +100 MV DC	Voltages vary widely because of diode characteristics. Voltages are 0 VDC when diode shorted, and +20 VDC when diode open. Voltages should be approximately equal because of matched characteristics.
\star 6 +100 MV DC	

CONNECT SIGNAL GENERATOR TO \oplus 5253B.
SET GENERATOR TO 52 MC, CW, 100 MV.
SET COUNTER CONTROLS AND 5253B TO
MEASURE FREQUENCY OF INPUT SIGNAL.

\star 7 5 MV RMS	This voltage is total harmonic energy output of mixer and varies widely.
\star 8 -11.3 VDC 30 MV RMS	Checks bias and amplification of A1Q2 and A1Q1.
\star 9 -12.3 VDC 17 MV RMS	General check of low pass filter section
\star 10 -9.3 VDC 360 MV RMS	Checks bias and amplification of A1Q3 and A1Q4
\star 11 -7.1 VDC 300 MV RMS	Checks operation of A1Q5
\star 12 0 VDC 190 MV RMS	Checks operation of limiter, A1CR1
\star 13 0 MV DC WHEN METER READS AT LEFT END OF SCALE; 50 MV DC WHEN METER READS FULL SCALE; 15 MV DC WHEN TEST POINT #12 IS 100 MV RMS, AND METER READS AT RED-GREEN BORDER.	Checks accuracy of meter circuit in relation to output to counter

5-12. PRINTED CIRCUIT COMPONENT REPLACEMENT.

5-13. Component lead-holes in the Model 5253B circuit boards have plated walls to insure good electrical contact between conductors on the opposite sides of the board. To prevent damage to this plating and also to the replacement component, apply heat sparingly and work carefully. The following replacement procedure is recommended:

- a. Remove defective component.
- b. Melt solder in component lead-holes. Use clean, "dry" soldering iron to remove excess solder. Clean holes with toothpick or wooden splinter. Do not use metal tool for cleaning as this may damage the through-hole plating.
- c. Bend leads of replacement component to the correct shape and insert component leads in component lead-holes. Using heat and solder sparingly, solder leads in place. Heat may be applied to either side of board as is convenient. A heat sink (long-nose pliers, commercial heat-sink tweezers, etc.) should be used when replacing transistors and diodes in order to prevent excessive heat from being conducted by the leads from the soldering iron to the component.
- d. Through-hole plating breaks are indicated by the separation from the board of the round conductor-pad on either side of the board. To repair breaks, press conductor-pads against board and solder replacement component lead to conductor-pad on both sides of the board.

5-14. VIDEO AMPLIFIER ASSEMBLY REPLACEMENT.

5-15. If video amplifier printed circuit board requires replacement, follow this procedure:

- a. Remove the converter from counter.
- b. Unscrew and remove small screw (MP1; see Figure 5-4) which holds video amplifier A1 in place. Remove screws which secure supporting bracket to front panel. Remove supporting bracket.
- c. Firmly grasp assembly at component-free end and pull out of socket using a slight back-and-forth sideways movement.
- d. Check that the connecting terminals of replacement assembly are clean. Push replacement assembly firmly into socket and check for proper seating. Replace supporting bracket and all screws.
- e. All replacement video amplifier assemblies are adjusted and inspected at the factory for optimum performance. However, if a general operational check is desired, perform the in-cabinet performance check given in Paragraph 5-31.

5-16. MIXER DIODE REPLACEMENT.

5-17. If either of the matched pair of mixer diodes (A4CR1A or A4CR1B) is found to be defective, both

diodes should be replaced. The recommended replacement procedure is as follows:

- a. Remove mixer-assembly shield cover (see Figure 5-3).
- b. Remove diodes from spring clips, noting orientation.
- c. Install replacement diodes with same orientation.
- d. Replace mixer-assembly shield cover.
- e. Perform the sensitivity check (Paragraph 5-28) to insure that converter operation is within specifications.

5-18. METER REPLACEMENT PROCEDURE.

5-19. If the level indicator meter requires replacement, follow this procedure:

- a. Remove converter from counter.
- b. Unscrew and remove small retaining screw (MP1; see Figure 5-4) which holds video amplifier board A1 in place. Remove screws which secure supporting bracket to front panel. Remove supporting bracket.
- c. Firmly grasp video amplifier board at the component-free end and pull board out of socket using a slight back-and-forth sideways movement.
- d. Place converter on bench with bottom plate resting on bench surface and with the front panel facing to the rear of the bench.
- e. Remove screw (MP2) which holds aluminum spacer-rod (MP3) to plastic rear-support (MP4; see Figure 5-2). Grasp spacer-rod and turn counterclockwise to remove rod from front support.
- f. Cut connecting wires at meter terminals.
- g. Remove screws (MP5, 6; see Figure 5-4) from meter bezel at sides of meter. Push bezel forward as far as possible.
- h. Remove screws (MP7, 8) on top of meter bracket.
- i. Grasp meter and gently pull meter (and bracket) backwards out of front panel hole, at the same time twisting rear of meter slightly sideways to the right and pulling up.
- j. Remove bracket and hardware from meter and install in identical manner on replacement meter. Hardware which may come from the manufacturer with the replacement meter may be discarded.
- k. Place meter (with bracket) in unit by reversing removal procedure.
- l. Replace screws on top of meter bracket.
- m. Replace meter bezel at sides of meter.

- p. Check that meter terminals are not close to front bearing-block. Bend terminals away from block if necessary.
- q. Strip 1/4-inch insulation from ends of each connecting wire and solder to meter terminals. Black wire goes to inside terminal and white wire goes to outside terminal.
- r. Replace aluminum spacer-rod. Tighten only "finger-tight" as excessive torque may break end of rod.
- s. Replace screw which holds spacer-rod to rear-support.
- t. Replace video amplifier assembly, supporting bracket, and all screws.

5-20. HARMONIC GENERATOR ADJUSTMENT.

5-21. To adjust the harmonic generator assembly, proceed as follows:

- a. Remove converter from counter and reconnect to counter with Extension Cable, #10506A.
- b. Connect VHF Signal Generator to converter INPUT and set to 472 Mc, CW, at 100 mv.
- c. Connect RF Millivoltmeter to Test Point #12 (see Figure 5-4).
- d. Set converter mixing frequency control to 470 Mc, and tune for maximum reading on RF Millivoltmeter.
- e. Vary output of VHF Signal Generator to make converter level indicator meter read at red-green border.

f. Using plastic tuning tool, tune A3C5 (see Figure 5-2) for maximum reading on RF Millivoltmeter. Tune A3C5 through hole in harmonic generator assembly shield cover.

5-22. LOW PASS FILTER ADJUSTMENT.

5-23. To adjust the low pass filter in the video amplifier assembly, proceed as follows:

- a. Remove converter from counter and reconnect to counter with Extension Cable, #10506A.
- b. Connect VHF Signal Generator to converter INPUT and set to 110 Mc, CW, at 50 mv.
- c. Connect RF Millivoltmeter to Test Point #12 (see Figures 5-4 and 5-5).
- d. Set converter mixing frequency control to 100 Mc and tune for maximum reading on RF Millivoltmeter.
- e. Set Signal Generator to 116.2 Mc, CW, at 1 v.
- f. Using plastic tool, adjust variable inductor A1L4 (see Figures 5-1 and 5-5) for minimum reading of RF Millivoltmeter.
- g. Set Signal Generator to 120.2 Mc, CW, at 1 v.
- h. Using plastic tool, adjust variable inductor A1L3 (see Figures 5-1 and 5-5) for minimum reading of RF Millivoltmeter.
- i. Set Signal Generator to 115 Mc, CW, at 1 v.
- j. Reading of RF Millivoltmeter should be less than 100 mv. If reading is above 100 mv, troubleshoot video amplifier assembly.

Table 5-4. Adjustments after Repair

AFTER REPLACING COMPONENT IN THIS SECTION:	PERFORM:
Harmonic generator (A3)	Harmonic generator adjustment (Paragraph 5-20)
Mixer (A4)	Sensitivity check (Paragraph 5-28)
A1Q1	Sensitivity check (Paragraph 5-28)
A1Q2	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
Low Pass Filter	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
A1Q3	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
A1Q4	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
Meter circuit	Meter accuracy check (Paragraph 5-29)

5-24. METER CALIBRATION ADJUSTMENT. (pri.)

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, $\#10506A$.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set counter controls as shown in Figure 3-2. Counter should display approximately 2 Mc.

d. Vary VHF Generator output to make level indicator meter read at red-green border.

e. Using RF Millivoltmeter, measure voltage at Test Point #12. Voltage should be between 100 mv and 130 mv. If not, change value of resistor A1R19 to change voltage to between 100 mv and 130 mv. If voltage is too high, increase value of A1R19. If voltage is too low, decrease value of A1R19. Repeat steps d and e after changing value of A1R19.

5-25. MECHANICAL ADJUSTMENT OF METER ZERO.

5-26. TRUE SIGNAL LEVEL INDICATION. Level indicator meter is adjusted at the factory for proper mechanical zero. However, normal aging of meter components may change indicated zero level. To insure accuracy of input signal level indication, periodic adjustment of meter zero may be necessary.

5-27. ZERO-SET. When meter is properly zero-set, pointer rests over the zero calibration mark at the left-hand end of meter scale when converter is (1) at normal operating temperature, (2) in normal operating position, and (3) without power. Proceed as follows:

a. Allow counter and converter to operate for one hour to permit meter movement to reach normal operating temperature.

b. Turn counter off and allow one minute for all capacitors to discharge.

c. Remove converter from counter to enable access to rear of meter.

d. Remove adhesive-backed-paper cover from meter zero-adjustment access hole on top-rear of meter.

e. Carefully insert small tool in access hole and engage adjustment fork.

f. Vary setting of adjustment fork until meter reads zero.

g. Remove tool and replace adhesive-backed-paper cover on access hole. This completes meter zero adjustment procedure.

5-28. SENSITIVITY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, $\#10506A$.

b. Set VHF Signal Generator to 52 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Adjust controls as shown in Figure 3-2.

d. Set converter mixing frequency control to 50 Mc. Counter should display approximately 2 Mc.

e. Using RF Millivoltmeter, measure output of converter at Test Point #12 (see Figures 5-4 and 5-5). Voltage should be at least 100 mv.

f. Repeat above steps c, d, and e with VHF Generator frequency of 472 Mc and converter mixing frequency control set to 470 Mc. Converter output to counter, as measured by RF Millivoltmeter, should be at least 100 mv.

g. A similar check may be made at any frequency within the range of the Model 5253B. Converter output to counter should be at least 100 mv when difference frequency is between 100 kc and 12 Mc and converter is properly tuned.

5-29. METER ACCURACY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, $\#10506A$.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.

d. Vary output of VHF Signal Generator for converter level indicator to make meter read at red-green border.

e. Using RF Millivoltmeter, measure converter output to counter at Test Point #12. Voltage should be between 100 mv and 130 mv. If not, see Paragraph 5-24 for meter calibration adjustment procedure.

5-30. LOW PASS FILTER CHECK.

a. Turn counter power off, remove converter from counter and reconnect to counter with Extension Cable, $\#10506A$.

b. Set VHF Signal Generator to 110 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Set converter mixing frequency control to 100 Mc. Counter should display approximately 10 Mc.

d. Connect RF Millivoltmeter to Test Point #12. Vary output of VHF Signal Generator for RF Millivoltmeter reading of 100 mv. Note output level of VHF Signal Generator.

e. Set VHF Signal Generator to 115 Mc at same output level as noted in step d above. Converter output to counter, as shown on RF Millivoltmeter, should not exceed 50 mv. If converter output to counter is greater than 50 mv, see Paragraph 5-23 for low pass filter adjustment procedure.


5-31. IN-CABINET PERFORMANCE CHECK.

- a. Turn counter power off and install converter.

b. Set VHF Signal Generator to 52 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Counter should display approximately 2 Mc.

d. Set VHF Signal Generator to any frequency between 50 Mc and 512 Mc with output of 50 mv. Counter should display correct frequency at any frequency within this range.

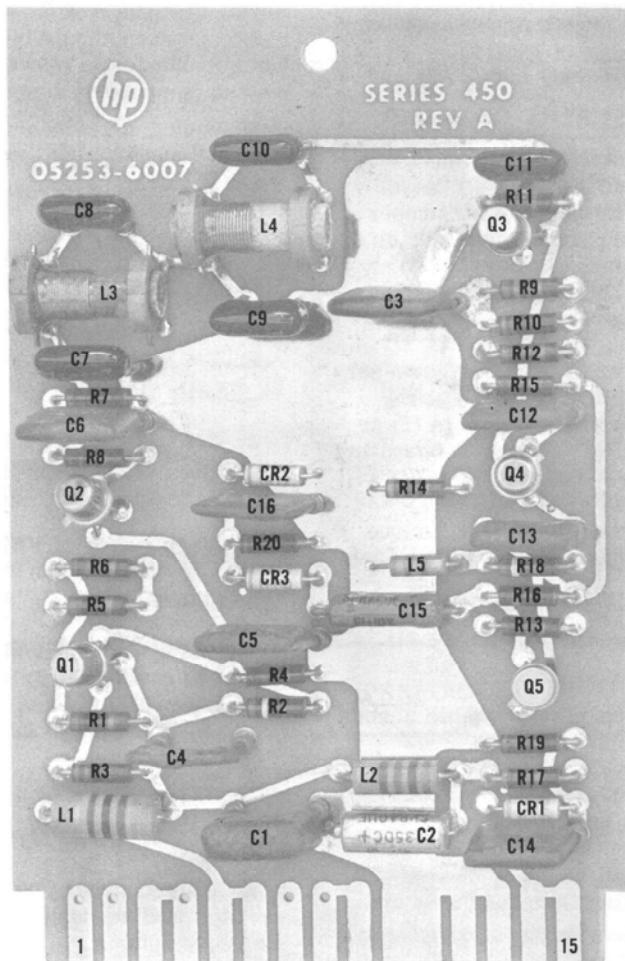

05253-A-12

Figure 5-1. Video Amplifier Assembly A1 Component Location

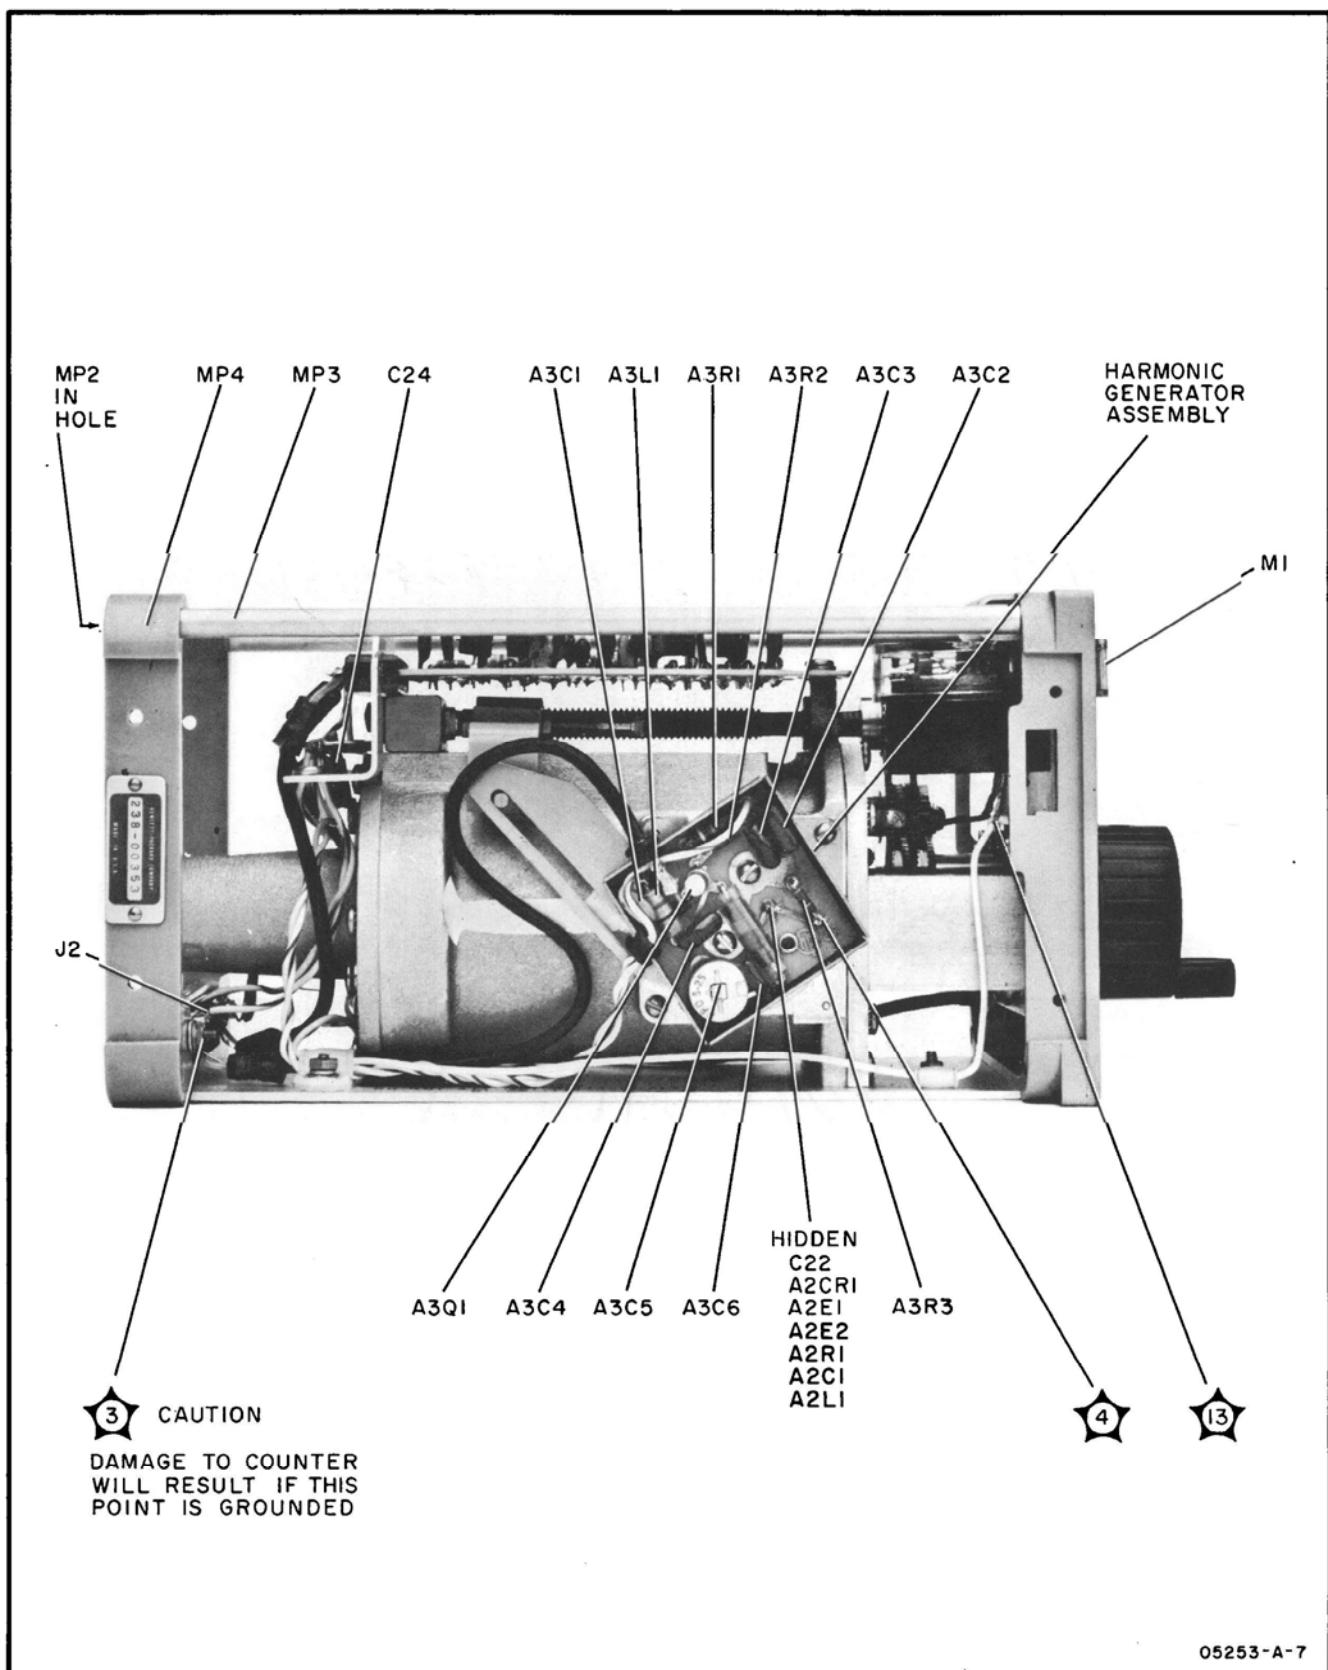


Figure 5-2. Left Side View

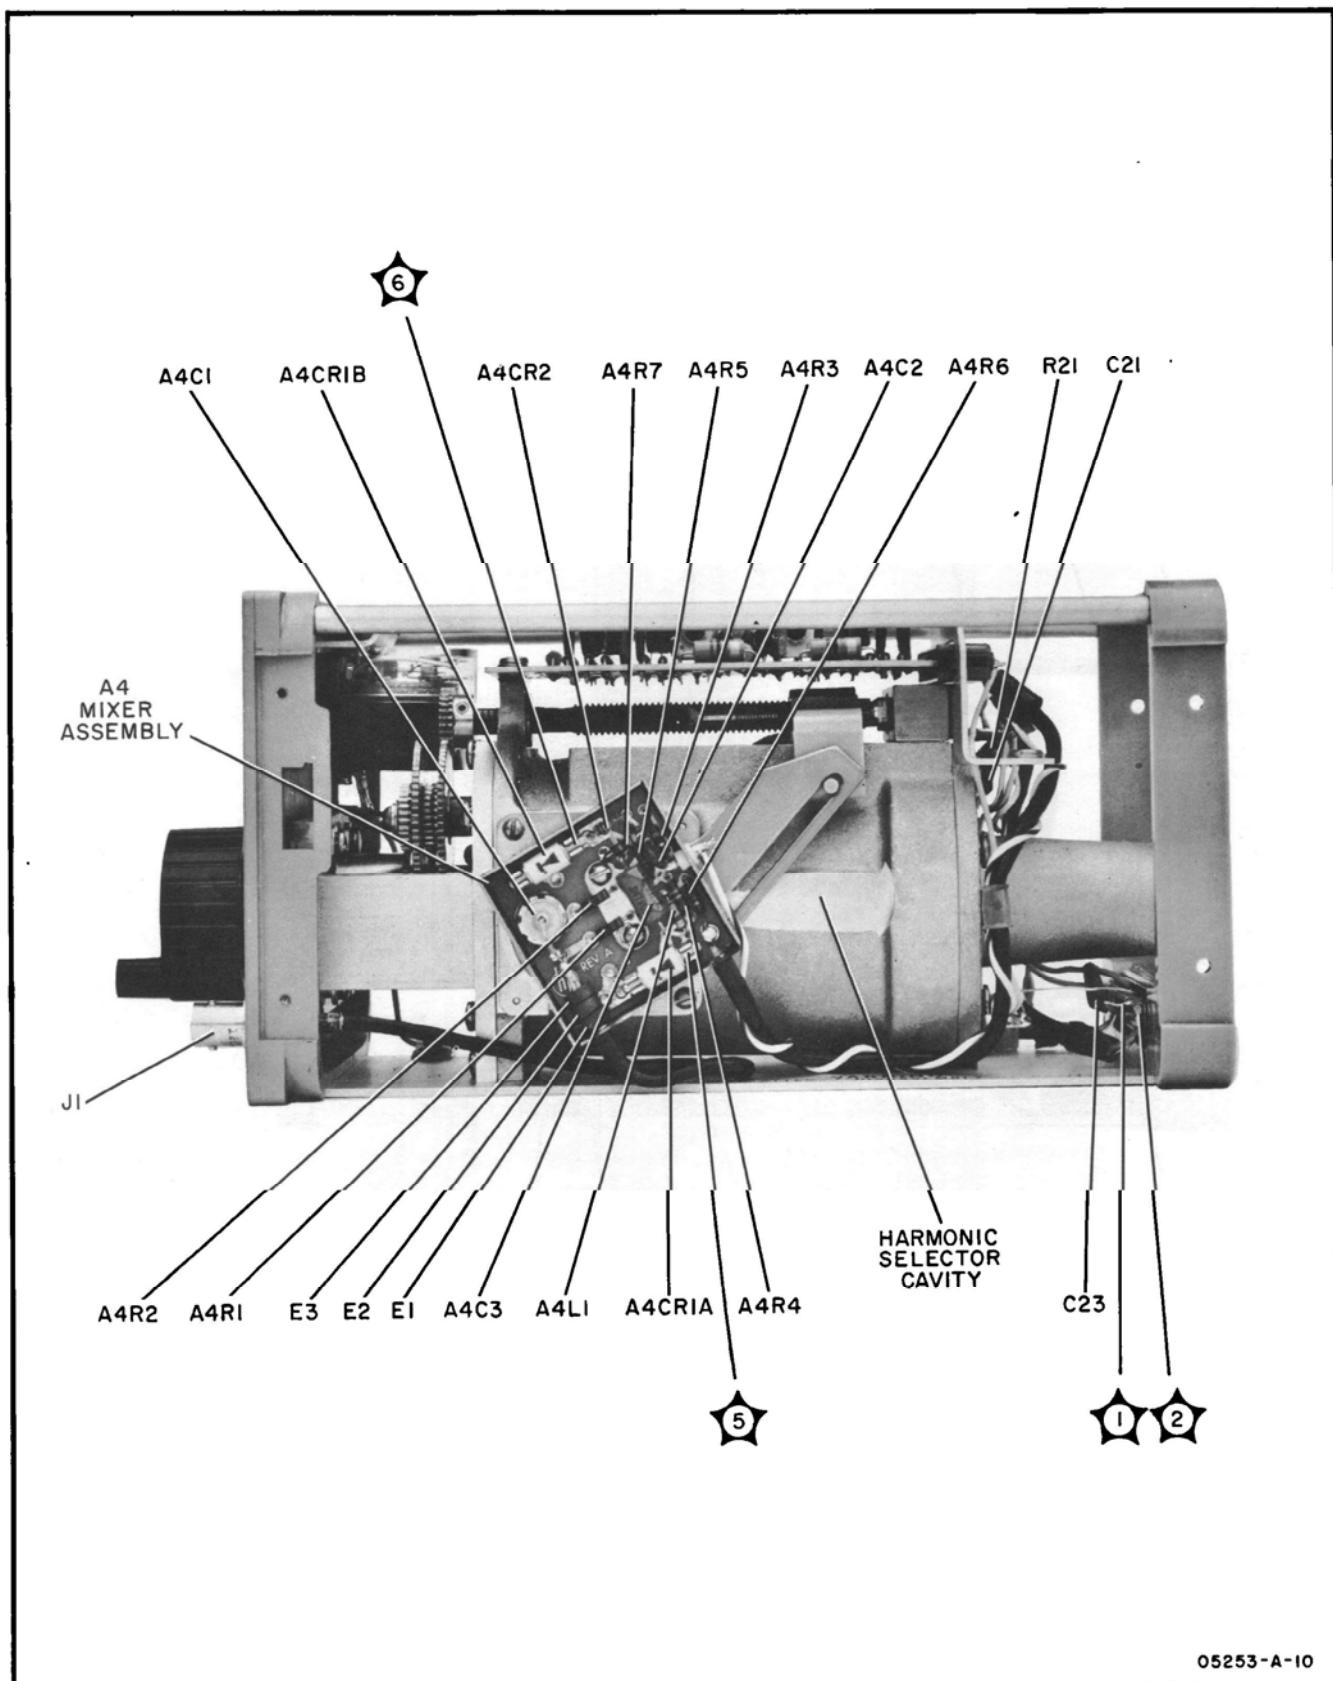


Figure 5-3. Right Side View



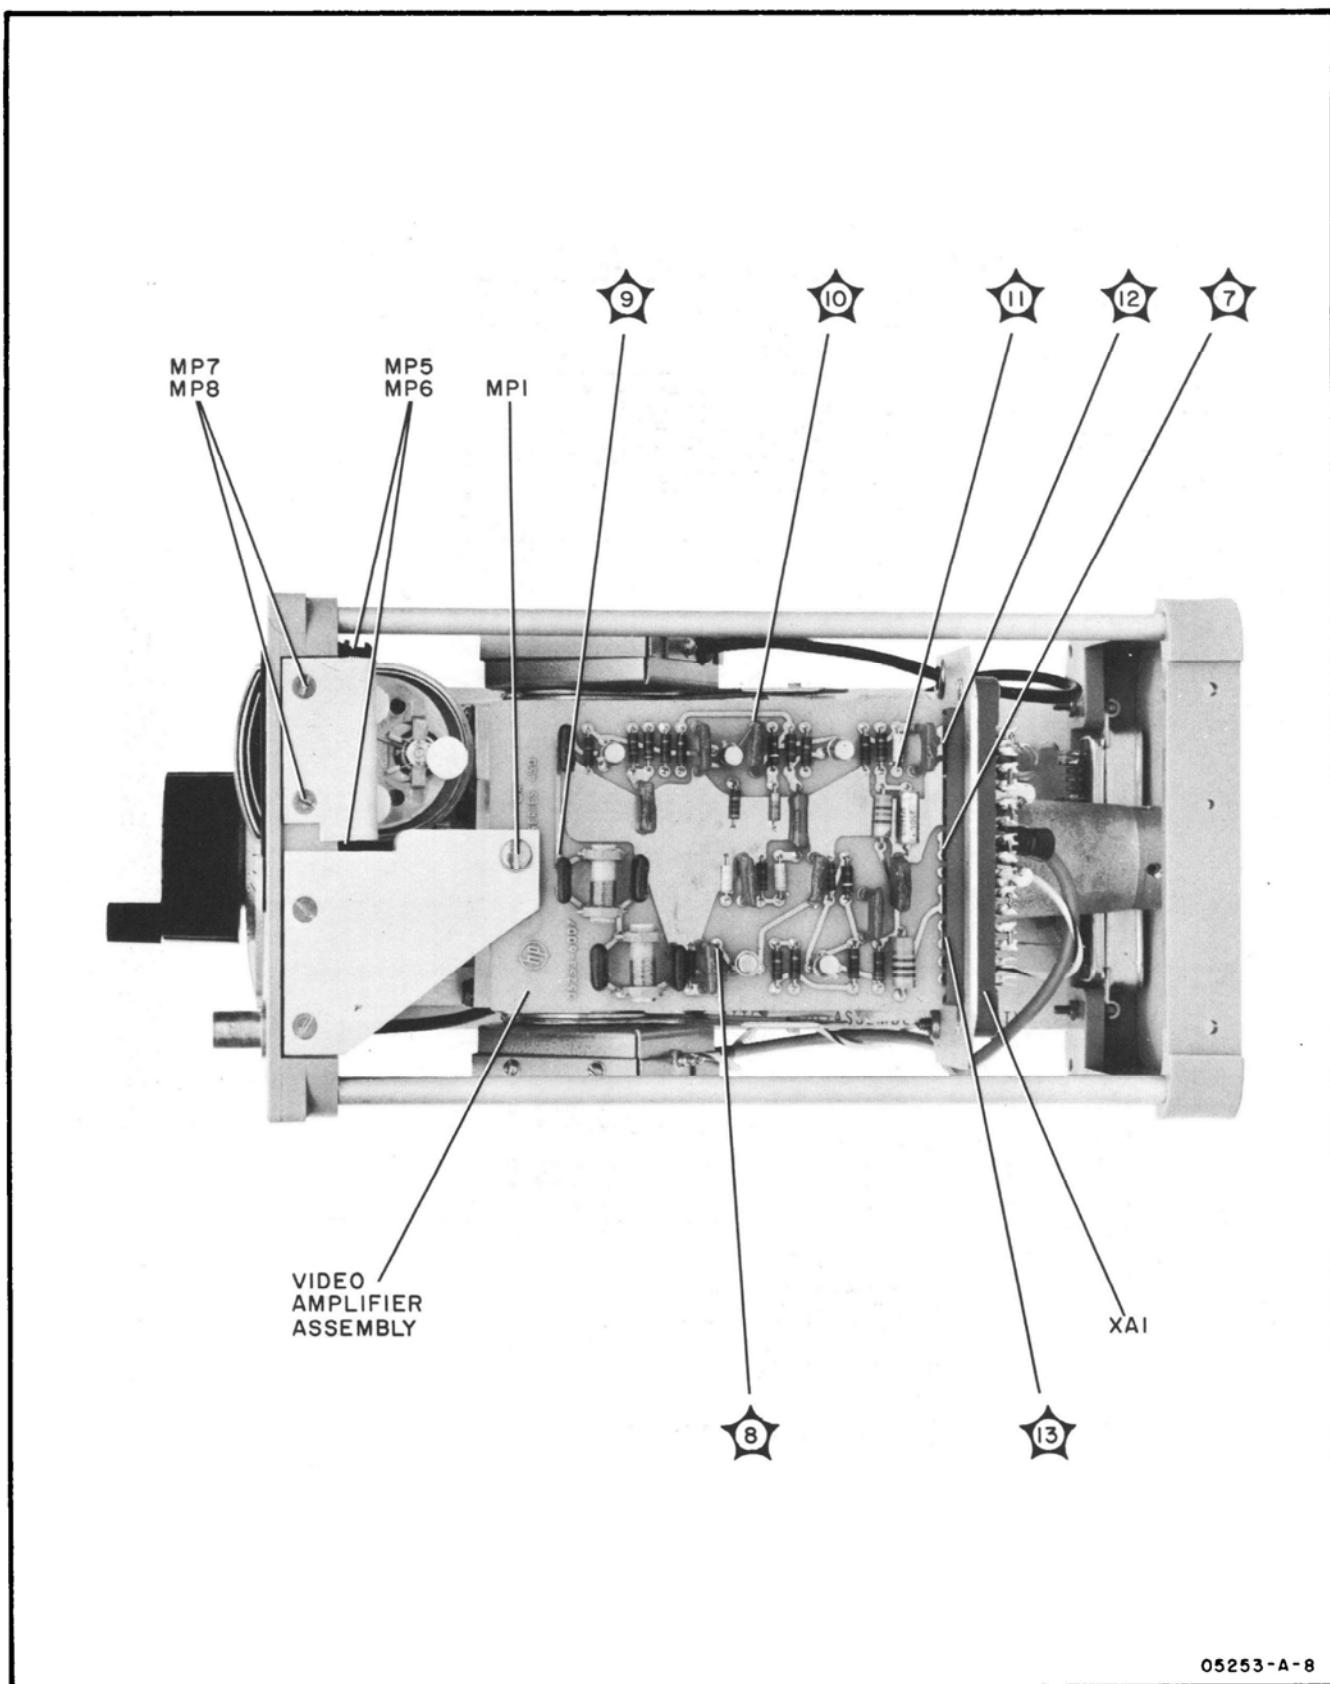


Figure 5-4. Top View - Test Points


01874-2

05253-A-8

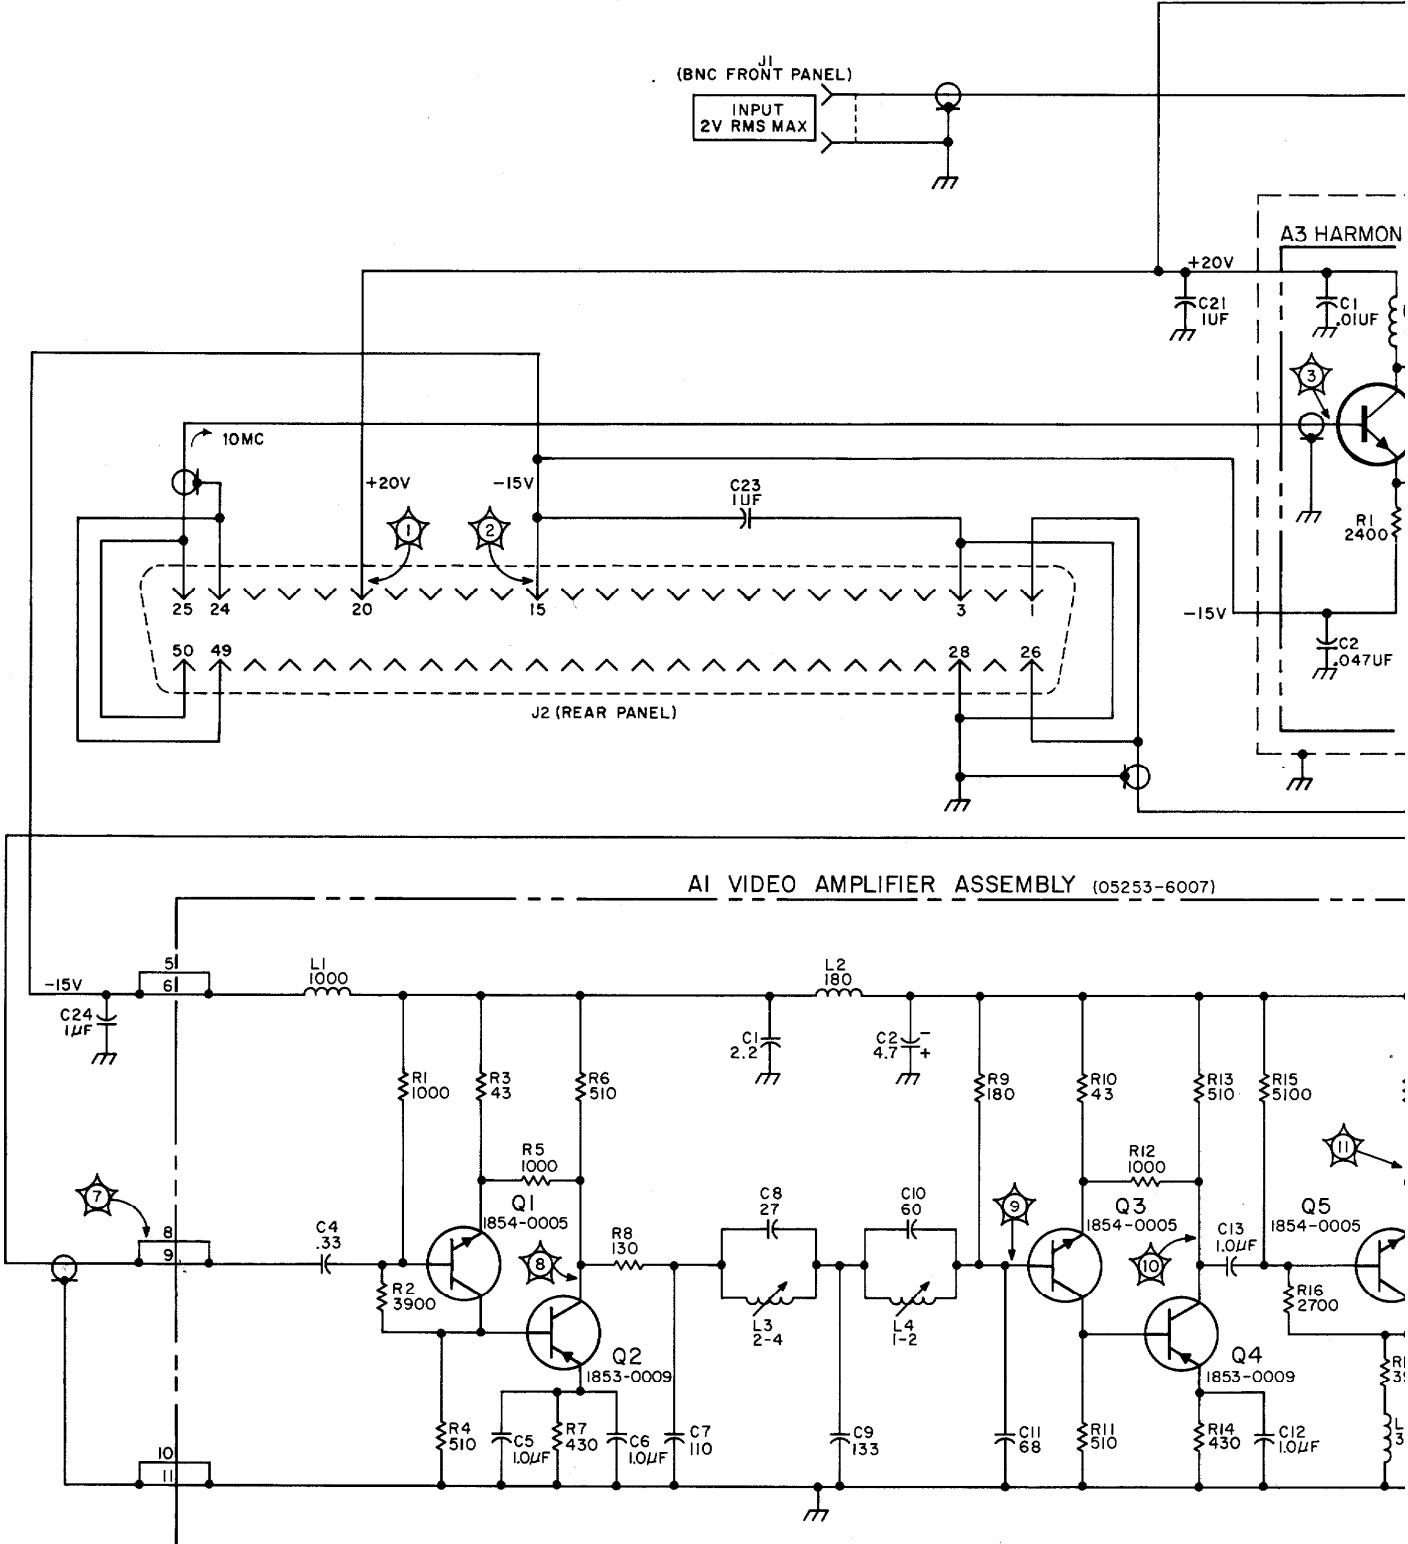

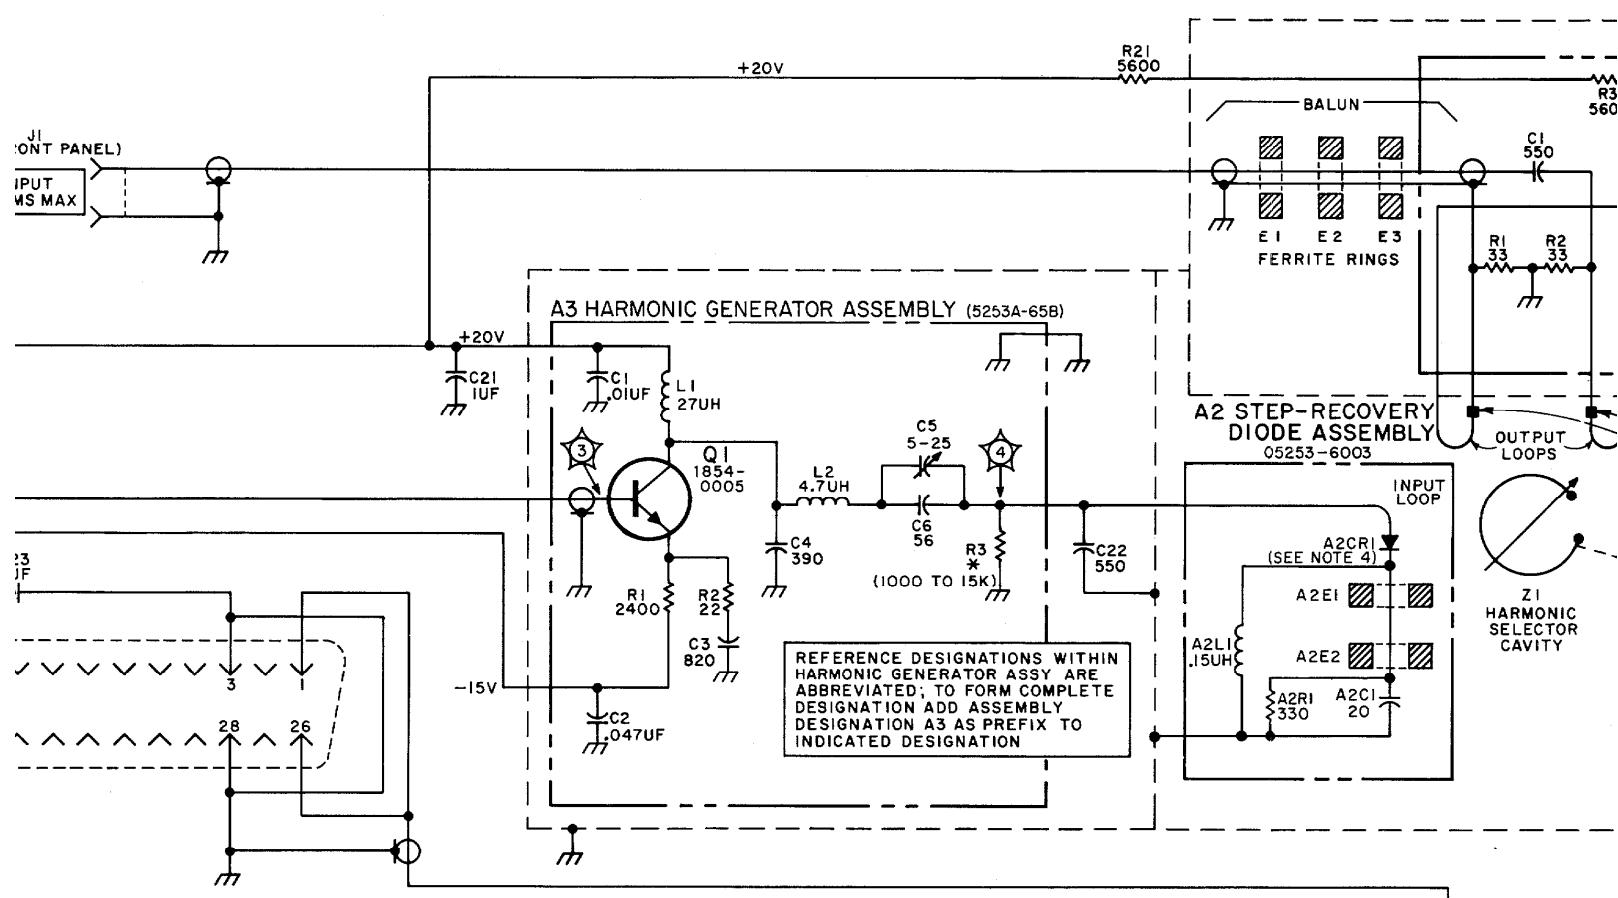

DEO AMPLIFIER ASSEMBLY (05253-6007)

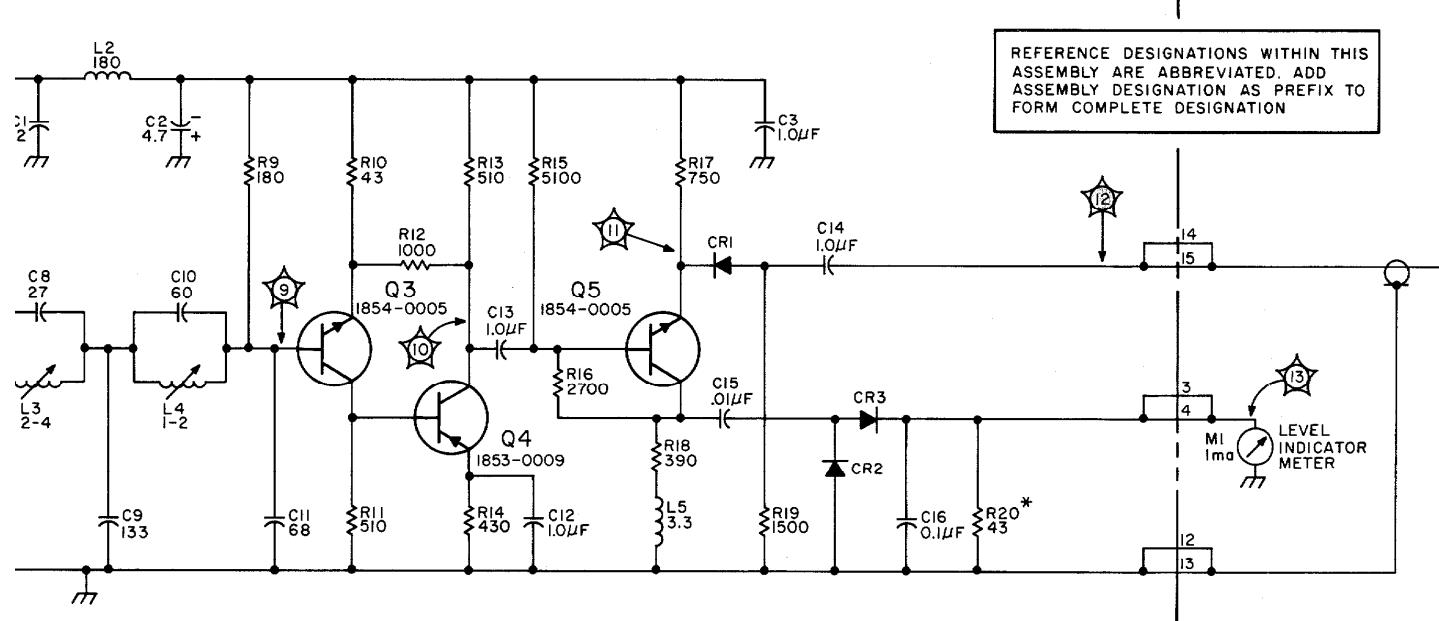

NO PRE
C21 -
E1 -
J1 -
MI
R21
Z1

OMITTEI
CI -

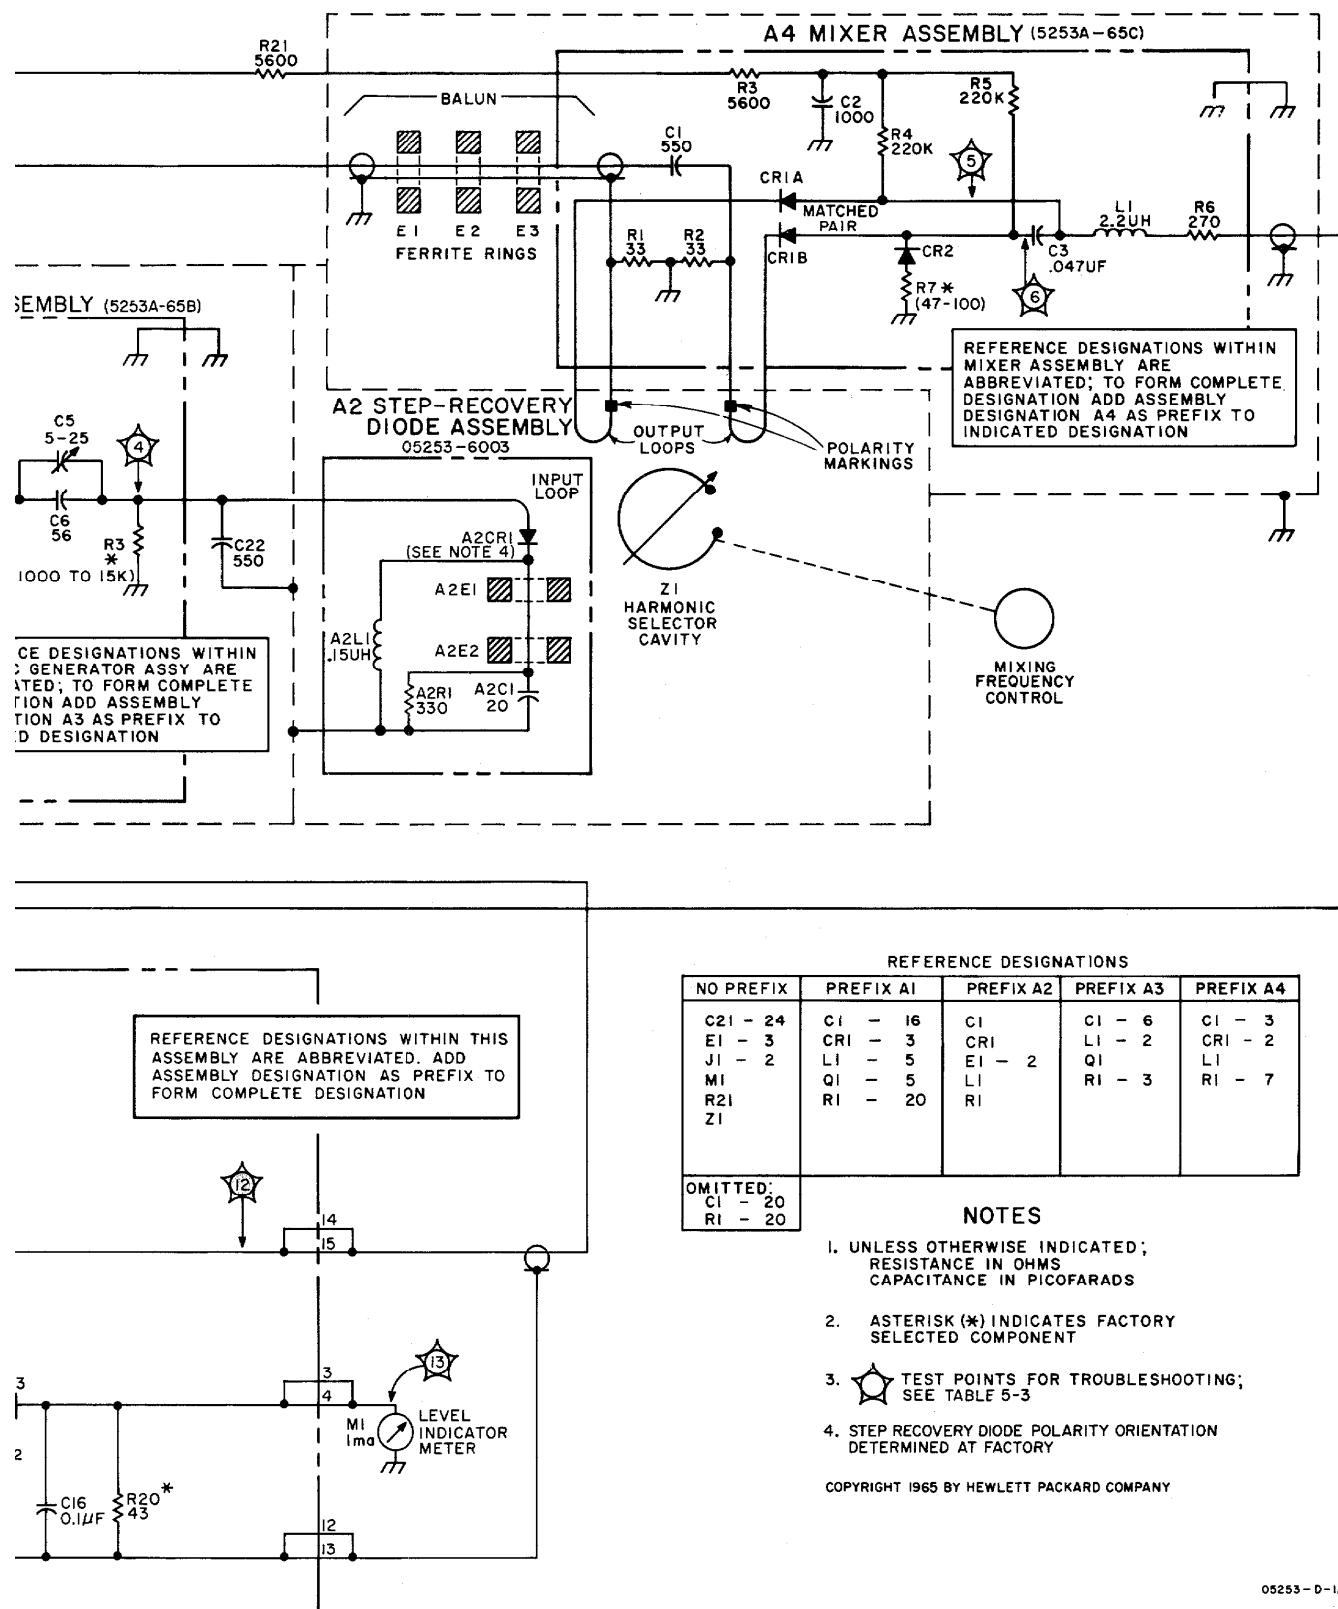


Figure 5-5. Schematic Diagram

5-9/5-10

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alpha-numerical order of their reference designators and indicates the description and stock number of each part, together with any applicable notes. Table 6-2 lists parts in alpha-numerical order of their stock number and provides the following information on each part:

- a. Description of the part (see list of abbreviations below).
- b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 6-3.
- c. Manufacturer's part number.
- d. Total quantity used in the instrument (TQ column).

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard stock numbers.

6-6. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

REFERENCE DESIGNATORS

A	= assembly	E	= misc electronic part	MP	= mechanical part	TB	= terminal board
B	= motor	F	= fuse	P	= plug	TP	= test point
C	= capacitor	FL	= filter	Q	= transistor	V	= vacuum tube, neon bulb, photocell, etc.
CP	= coupling	J	= jack	R	= resistor	W	= cable
CR	= diode	K	= relay	RT	= thermistor	X	= socket
DL	= delay line	L	= inductor	S	= switch	Y	= crystal
DS	= device signaling (lamp)	M	= meter	T	= transformer		

ABBREVIATIONS

A	= amperes	GE	= germanium	N/C	= normally closed	RMO	= rack mount only
A.F.C	= automatic frequency control	GL	= glass	NE	= neon	RMS	= root-mean-square
AMPL	= amplifier	GRD	= ground(ed)	NI PL	= nickel plate	S-B	= slow-blow
B.F.O.	= beat frequency oscillator	H	= henries	N/O	= normally open	SCR	= screw
BE CU	= beryllium copper	HEX	= hexagonal	NPO	= negative positive zero (zero temperature coefficient)	SE	= selenium
BH	= binder head	HG	= mercury	NRFR	= not recommended for field replacement	SECT	= section(s)
BP	= bandpass	HR	= hour(s)	NSR	= not separately replaceable	SEMICON	= semiconductor
BRS	= brass	IF	= intermediate freq	OBD	= order by description	SI	= silicon
BWO	= backward wave oscillator	IMPG	= impregnated	OH	= oval head	SIL	= silver
CCW	= counter-clockwise	INCD	= incandescent	OX	= oxide	SL	= slide
CER	= ceramic	INCL	= include(s)	P	= peak	SPL	= special
CMO	= cabinet mount only	INS	= insulation(ed)	PC	= printed circuit	SST	= stainless steel
COEF	= coefficient	INT	= internal	PF	= picofarads = 10 ⁻¹² farads	SR	= split ring
COM	= common	K	= kilo = 1000	PH BRZ	= phosphor bronze	STL	= steel
COMP	= composition	LIN	= linear taper	PHL	= Phillips	TA	= tantalum
CONN	= connector	LK WASH	= lock washer	PIV	= peak inverse voltage	TD	= time delay
CP	= cadmium plate	LOG	= logarithmic taper	P/O	= part of	TGL	= toggle
CRT	= cathode-ray tube	LPF	= low pass filter	POLY	= polystyrene	TI	= titanium
CW	= clockwise	M	= milli = 10 ⁻³	PORC	= porcelain	TOL	= tolerance
DEPC	= deposited carbon	MEG	= meg = 10 ⁶	POS	= position(s)	TRIM	= trimmer
DR	= drive	METFLM	= metal film	POT	= potentiometer	TWT	= traveling wave tube
ELECT	= electrolytic	MFR	= manufacturer	PP	= peak-to-peak	U	= micro = 10 ⁻⁶
ENCAP	= encapsulated	MINAT	= miniature	PT	= point	VAR	= variable
EXT	= external	MOM	= momentary	RECT	= rectifier	VDCW	= dc working volts
F	= farads	MTG	= mounting	RF	= radio frequency	W/	= with
FH	= flat head	MY	= "mylar"	RH	= round head	W	= watts
FIL H	= fillister head	N	= nano (10 ⁻⁹)			WW	= wirewound
FXD	= fixed					W/O	= without

Table 6-1. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	05253-6007 05253-2007	ASSY:AMPLIFIER BOARD:BLANK P.C.	
A1C1	0160-0128	C:FXD CER 2.2UF 20% 25VDCW	
A1C2	0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	
A1C3	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C4	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C5	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C6	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C7	0140-0194	C:FXD MICA 110 PF 5% 300 VDCW	
A1C8	0160-0178	C:FXD MICA 27PF 5% 300VDCW	
A1C9	0160-0332	C:FXD MICA 133PF 1%	
A1C10	0140-0214	C:FXD MICA 60PF 5% 300VDCW	
A1C11	0140-0192	C:FXD MICA 68PF 5% 300VDCW	
A1C12	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C13	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C14	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C15	0160-0161	C:FXD MY 0.01 UF 10% 200VDCW	
A1C16	0150-0121	C:FXD CER 0.1UF +80%-20% 50VDCW	
A1CR1	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1CR2	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1CR3	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1L1	9140-0137	COIL:FXD RF 1000UH	
A1L2	9140-0138	COIL:FXD RF 180UH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UH	
A1L5	9140-0143	COIL:FXD RF 3.3 UH	
A1Q1	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1Q2	1853-0009	TRANSISTOR:SILICON PNP	
A1Q3	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1Q4	1853-0009	TRANSISTOR:SILICON PNP	
A1Q5	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1R1	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R2	0683-3925	R:FXD COMP 3900 OHM 5% 1/4W	
A1R3	0683-4305	R:FXD COMP 43 OHM 5% .25W	
A1R4	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R5	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R6	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R7	0683-4315	R:FXD COMP 430 OHM 5% 1/4W	
A1R8	0683-1315	R:FXD COMP 130 OHM 5% 1/4W	
A1R9	0683-1815	R:FXD COMP 180 OHM 5% 1/4W	
A1R10	0683-4305	R:FXD COMP 43 OHM 5% .25W	
A1R11	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R12	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R13	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R14	0683-4315	R:FXD COMP 430 OHM 5% 1/4W	
A1R15	0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	
A1R16	0683-2725	R:FXD COMP 2700 OHM 5% 1/4W	
A1R17	0683-7515	R:FXD COMP 750 OHM 5% 1/4W	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
A1R18 A1R19 A1R20	0683-3915 0683-1525 0683-4305	RIFXD COMP 390 OHM 5% 1/4W RIFXD COMP 1500 OHM 5% 1/4W RIFXD COMP 43 OHM 5% .25W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
A2	05253-6003	ASSY:STEP RECOVERY DIODE	
A2C1 A2CR1	0150-0061	CIFXD CER 20 PF 100 VDCW SPECIALY SELECTED PART NOT RECOMMENDED FOR FIELD REPLACEMENT	
A2E1 A2E2	9170-0029 9170-0029	CORE: FERRITE BEAD CORE: FERRITE BEAD	
A2L1	9140-0170	COIL-FXD .15 UH 20% 350 MA	
A2R1	0683-3315	RIFXD COMP 330 OHM 5% 1/4W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
A3	5253A-65B	ASSY:HARMONIC GENERATOR	
A3C1 A3C2 A3C3 A3C4 A3C5	0150-0093 0170-0094 0140-0151 0140-0200 0130-0016	CIFXD CER 0.01UF +80-20% 100VDCW CIFXD MY 0.047UF 20% 50VDCW CIFXD MICA 820PF 2% 300VDCW CIFXD MICA 390PF 5% 300VDCW CIVAR CER 5-25 PF NPO	
A3C6	0140-0191	CIFXD MICA 56 PF 5% 300 VDCW	
A3L1 A3L2 A3Q1 A3R1 A3R2 A3R3	9140-0107 9140-0025 1854-0005 0686-2425 0683-2205 0683-5625	COIL:FXD RF 27 UH COIL:FXD RF 4.7 UHY TRANSISTOR:SILICON NPN 2N708 RIFXD COMP 2400 OHM 5% 1/2W RIFXD COMP 22 OHM 5% 1/4W RIFXD COMP 5600 OHM 5% 1/4W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
A4	5253A-65C	ASSY:MIXER	
A4C1 A4C2 A4C3	0140-0069 0150-0050 0170-0040	CIFXD MICA 550 PF 10% 500 VDCW CIFXD CER 1000PF 600 VDCW CIFXD MY .047 UF 10% 200VDCW	
A4CR1 A4CR2	1900-0011 1910-0016	SEMICON DEVICE:DIODE 1N416BM MATCH PAIR DIODE:GERMANIUM:100MA AT0.85V 60PIV	
A4L1	9140-0142	COIL:FXD RF 2.2 UH	
A4R1 A4R2 A4R3 A4R4 A4R5	0683-3305 0683-3305 0684-5621 0683-2245 0683-2245	RIFXD COMP 33 OHM 5% 1/4W RIFXD COMP 33 OHM 5% 1/4W RIFXD COMP 5.6K OHM 10% 1/4W RIFXD COMP 220K OHM 5% 1/4W RIFXD COMP 220K OHM 5% 1/4W	
A4R6 A4R7	0683-2715 0683-6205	RIFXD COMP 270 OHM 5% 1/4W RIFXD COMP 62 OHM 5% 1/4W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
C21 C22	0160-0127 0140-0069	CIFXD CER 1UF 20% 25VDCW CIFXD MICA 550 PF 10% 500 VDCW NOT RECOMMENDED FOR FIELD REPLACEMENT	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
C23	0160-0127	C:FXD CER 1UF 20% 25VDCW	
C24	0160-0127	C:FXD CER 1UF 20% 25VDCW	
E1	9170-0059	MAGNETIC CORE:TOROID FERRITE	
E2	9170-0059	MAGNETIC CORE:TOROID FERRITE	
E3	9170-0059	MAGNETIC CORE:TOROID FERRITE	
J1	1250-0102	CONNECTOR:BNC	
J2	1251-0099	CONNECTOR:50 PIN MINAT	
M1	1120-0140	METER:0-1 MILLIAMPERE EDGE-VIEW	
R21	0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	
XA1	1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	
		MISCELLANEOUS	
	05251-0002	BRACKET:METER	
	05253-0006	BRACKET:PANEL	
	05253-2014	PANEL:FRONT	
	05253-0005	PLATE:BOTTOM	

See list of abbreviations in introduction to this section

Table 6-2 Replaceable Parts

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0130-0016	C:VAR CER 5-25 PF NPO	28480	0130-0016	1
0140-0069	C:FXD MICA 550 PF 10% 500 VDCW	00853	TYPE M 100 E10	2
0140-0151	C:FXD MICA 820PF 2% 300VDCW	04062	RDM15F821G3S	1
0140-0176	C:FXD MICA 100 PF 2% 300 VDCW	04062	DM15F101G 300V	1
0140-0189	C:FXD MICA 5825 PF 2% 300 VDCW	04062	DM20F5825G	1
0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	04062	RDM15E560J3C	2
0140-0192	C:FXD MICA 68PF 5% 300VDCW	04062	RDM15E680J3C	1
0140-0193	C:FXD MICA 82 PF 5% 300 VDCW	04062	DM15E820J 300V	1
0140-0194	C:FXD MICA 110 PF 5% 300 VDCW	04062	RDM15F111J3C	1
0140-0200	C:FXD MICA 390PF 5% 300VDCW	04062	RDM15F391J3C	1
0140-0203	C:FXD MICA 30PF 5% 500VDCW	04062	DM15E300J 500V	1
0140-0204	C:FXD 47PF 5% NPO 500 VDCW	04062	DM15E470J	1
0140-0214	C:FXD MICA 60PF 5% 300VDCW	04062	RDM15E600J3C	1
0150-0050	C:FXD CER 1000PF 600 VDCW	84411	TYPE E	1
0150-0061	C:FXD CER 20 PF 100 VDCW	56289	53C47	1
0150-0093	C:FXD CER 0.01UF +80-20% 100VDCW	91418	TA	1
0150-0121	C:FXD CER 0.1UF +80%-20% 50VDCW	56289	5C50A	3
0160-0127	C:FXD CER 1UF 20% 25VDCW	56289	5C13	14
0160-0128	C:FXD CER 2.2UF 20% 25VDCW	56289	5C15	1
0160-0137	C:FXD CER 0.33UF 20% 25VDCW	56289	5C10	3
0160-0161	C:FXD MY 0.01 UF 10% 200VDCW	28480	0160-0161	1
0160-0178	C:FXD MICA 27PF 5% 300VDCW	04062	RDM15E270J3S	1
0160-0332	C:FXD MICA 133PF 1%	28480	0160-0332	1
0170-0040	C:FXD MY .047 UF 10% 200VDCW	28480	0170-0040	1
0170-0094	C:FXD MY 0.047UF 20% 50VDCW	84411	TYPE 602	1
0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	56289	150D475X9035B2	2
0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025	5
0683-1225	R:FXD 1200 OHM 5% 1/4W	01121	EB1225	4
0683-1315	R:FXD COMP 130 OHM 5% 1/4W	01121	CB 1315	1
0683-1525	R:FXD COMP 1500 OHM 5% 1/4W	01121	CB 1525	1
0683-1815	R:FXD COMP 180 OHM 5% 1/4W	01121	CB 1815	1
0683-2205	R:FXD COMP 22 OHM 5% 1/4W	01121	CB 2205	1
0683-2225	R:FXD 2.2K OHM 5% 1/4W	01121	CB2225	1
0683-2245	R:FXD COMP 220K OHM 5% 1/4W	01121	CB 2245	2
0683-2715	R:FXD COMP 270 OHM 5% 1/4W	01121	CB 2715	1
0683-2725	R:FXD COMP 2700 OHM 5% 1/4W	01121	CB-2725	1
0683-3305	R:FXD COMP 33 OHM 5% 1/4W	01121	CB 3305	3
0683-3315	R:FXD COMP 330 OHM 5% 1/4W	01121	CB 3315	1
0683-3615	R:FXD COMP 360 OHMS 5% 1/4W	01121	CB 3615	1
0683-3915	R:FXD COMP 390 OHM 5% 1/4W	01121	CB 3915	2
0683-3925	R:FXD COMP 3900 OHM 5% 1/4W	01121	CB 3925	1
0683-4305	R:FXD COMP 43 OHM 5% .25W	01121	CB 4305	3
0683-4315	R:FXD COMP 430 OHM 5% 1/4W	01121	CB 4315	2
0683-4725	R:FXD COMP 4700 OHMS 5% 1/4W	01121	CB 4725	2
0683-5115	R:FXD COMP 510 OHM 5% 1/4W	01121	CB 5115	5
0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	01121	CB 5125	1
0683-5625	R:FXD COMP 5600 OHM 5% 1/4W	01121	CB 5625	1
0683-6205	R:FXD COMP 62 OHM 5% 1/4W	01121	CB 6205	1
0683-6815	R:FXD COMP 680 OHMS 5% 1/4W	01121	CB 6815	1
0683-7515	R:FXD COMP 750 OHM 5% 1/4W	01121	CB 7515	1

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0683-7525	R:FXD COMP 7500 OHMS 5% 1/4W	01121	CB 7525	1
0683-8205	R:FXD COMP 82 OHMS 5% 1/4W	01121	CB 8205	1
0684-1041	R:FXD 100 K OHM 10% 1/4 W	01121	CB 1041	1
0684-1511	R:FXD COMP 15K OHMS 10% 1/4W	01121	CB 1231	1
0684-2701	R:FXD 27 OHM 10% 1/4 W	01121	CB 2701	1
0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621	2
0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	01121	EB 2425	1
1120-0140	METER JO-1 MILLIAMPERE EDGE-VIEW	28480	1120-0140	1
1250-0102	CONNECTOR:BNC	91737	7011	1
1251-0099	CONNECTOR:50 PIN MINAT	28480	1251-0099	1
1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	95354	SD-615UR	1
1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	87216	2N2048	4
1853-0009	TRANSISTOR:SILICON PNP	28480	1853-0009	2
1854-0005	TRANSISTOR:2N708 NPN SILICON	07263	2N708	4
1900-0011	SEMICON DEVICE:DIODE 1N416BM MATCH PAIR	93332	1N416BM	1
1901-0040	DIODE:SILICON	28480	1901-0040	3
1910-0016	DIODE:GERMANIUM:100MA ATO.85V 60PIV	28480	1910-0016	1
1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	28480	1910-0022	3
9140-0025	COIL:FXD RF 4.7 UHY	28480	9140-0025	1
9140-0107	COIL:FXD RF 27 UH	99800	1840-38	1
9140-0111	COIL:FXD RF 3.3UHY	28480	9140 0111	1
9140-0118	COIL:FXD 500 UH 5%	99800	2500-14	2
9140-0125	COIL:VAR 0.9-1.9 UH	28480	9140-0125	2
9140-0126	COIL:VAR 1.76-4.02	28480	9140-0126	2
9140-0137	COIL:FXD RF 1000UH	28480	9140-0137	1
9140-0138	COIL:FXD RF 180UH 5%	99800	9140-0138	1
9140-0142	COIL:FXD RF 2.2 UH	28480	9140-0142	1
9140-0143	COIL:FXD RF 3.3 UH	28480	9140-0143	1
9140-0170	COIL-FXD .15 UH 20% 350 MA	78526	11503M	1
9170-0029	CORE: FERRITE BEAD	02114	56-590-65/4A	2
9170-0059	MAGNETIC CORE:TOROID FERRITE	02114	396T125-303	3
05253-2007	BOARD:BLANK P.C. AMPLIFIER	28480	05253-2007	1
05253-6003	ASSY:STEP RECOVERY DIODE	28480	05253-6003	1
05253-6007	ASSY:AMPLIFIER	28480	05253-6007	1
5253A-65B	ASSY:HARMONIC GENERATOR	28480	5253A-65B	1
5253A-65C	ASSY:MIXER	28480	5253A-65C	1
05251-0002	BRACKET:METER	28480	05251-0002	1
05253-0005	PLATE:BOTTOM	28480	05253-0005	1
05253-0006	BRACKET:PANEL	28480	05253-0006	1
05253-2014	PANEL:FRONT	28480	05253-2014	1

See list of abbreviations in introduction to this section

Table 6-3. Manufacturer's Code

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U.S.A. Common	Any supplier of U.S.	07115	Corning Glass Works	Bradford, Pa.	24555	General Radio Co.	West Concord, Mass.	73293	Hughes Products Division of Hughes Aircraft Co.	Newport Beach, Calif.
00136	McCoy Electronics	Mount Holly Springs, Pa.		Electronic Components Dept.		26365	Gries Reproducer Corp.	New Rochelle, N.Y.	73445	Ampex Electronic Co., Div. of North American Phillips Co., Inc.	Hicksville, N.Y.
00213	Sage Electronics Corp.	Rochester, N.Y.	07126	Digital Co.	Pasadena, Calif.	26462	Globe File Co. of America, Inc.	Carlsbad, N.J.	73490	Beckman Helipac Corp.	So. Pasadena, Calif.
00334	Humidair Corp.	Colton, Calif.	07137	Transistor Electronics Corp.	Minneapolis, Minn.	26592	Hamilton Watch Co.	Lancaster, Pa.	73506	Bradley Semiconductor Corp.	Hartford, Conn.
00335	Westrex Corp.	New York, N.Y.	07138	Westinghouse Electric Corp.		28480	Hewlett-Packard Co.	Palo Alto, Calif.	73559	Carling Electric, Inc.	Hartford, Conn.
00373	Garlock Packing Co., Electronic Products Div.	Camden, N.J.		Electronic Tube Div.	Elmira, N.Y.	33173	G.E. Receiving Tube Dept.	Owensboro, Ky.	73682	George K. Garrett Co., Inc.	Philadelphia, Pa.
00565	Aerovox Corp.	New Bedford, Mass.	07149	Filmtron Corp.	New York, N.Y.	34534	Lectrom Inc.	Chicago, Ill.	73734	Federal Screw Prod. Co.	Chicago, Ill.
00779	Amp, Inc.	Harrisburg, Pa.	07233	Ciach-Graphik Co.	City of Industry, Calif.	36196	Slanwick Corp.	Hawkesbury, Ontario, Canada	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio
00781	Aircraft Radic Corp.	Boonton, N.J.	07261	Avnet Corp.	Los Angeles, Calif.	37942	Taylor Corp.	Indianapolis, Ind.	73793	The General Industries Co.	Elyria, Ohio
00815	Northen Engineering Laboratories, Inc.	Burlington, Wis.	07263	Fairchild Semiconductor Corp.	Mountain View, Calif.	39543	Mechanical Industries Prod. Co.	Akron, Ohio	73846	Goshen Stamping & Tool Co.	Goshen, Ind.
00853	Sangamo Electric Company, Ondill Division (Capacitors)	Marion, Ill.	07322	Minnesota Rubber Co.	Minneapolis, Minn.	40920	Miniature Precision Bearings, Inc.	Kenne, N.H.	73899	JFD Electronics Corp.	Brooklyn, N.Y.
00866	Goe Engineering Co.	Los Angeles, Calif.	07387	The Bittcher Corp.	Los Angeles, Calif.	42190	Muler Co.	Chicago, Ill.	73905	Jennings Radio Mfg. Co.	San Jose, Calif.
00891	Carl E. Holmes Corp.	Los Angeles, Calif.	07700	Technical Wire Products	Springfield, N.J.	43390	C.A. Norgren Co.	Englewood, Colo.	74276	Signaite Inc.	Neptune, N.J.
01121	Allen Bradley Co.	Milwaukee, Wis.	07910	Continent Device Corp.	Hawthorne, Calif.	44655	Omnite Mfg. Co.	Skokie, Ill.	74455	J.H. Wins, and Sons	Winchester, Mass.
01255	Liton Industries, Inc.	Beverly Hills, Calif.	07933	Rheem Semiconductor Corp.	Mountain View, Calif.	47904	Polaroid Corp.	Cambridge, Mass.	74661	Industrial Condenser Corp.	Chicago, Ill.
01285	TRW Semiconductors Inc.	Lawndale, Calif.	07966	Shockwell Semi-Conductor Laboratories	Palo Alto, Calif.	48620	Precision Thermometer and Inst. Co.	Philadelphia, Pa.	74686	R. F. Products Division of Amphen-	
01295	Texas Instruments, Inc., Transistor Products Div.	Dallas, Texas	07980	Boonton Radio Corp.	Boonton, N.J.	49956	Raytheon Company	Lexington, Mass.	75024	Borg Electronics Corp.	Danbury, Conn.
01349	The Allance Mfg. Co.	Alliance, Ohio	08145	U.S. Engineering Co.	Los Angeles, Calif.	52990	Rowan Controller Co.	Baltimore, Md.	75070	International Resistance Co.	Philadelphia, Pa.
01561	Chassi-Trak Corp.	Indianapolis, Ind.	08289	Blinn, Delbert, Co.	Pomona, Calif.	63743	Ward Leonard Electric	Mt. Vernon, N.Y.	75173	Jones, Howard B., Division	
01580	Pacific Relays, Inc.	Van Nuys, Calif.	08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada	54294	Waltcross Mfg. Co.	Selma, N.C.	75279	James Knights Co.	Sandwich, Ill.
01930	American Corp.	Rockford, Ill.	08717	Sloan Company	Burbank, Calif.	55026	Simpson Electric Co.	Chicago, Ill.	75382	Kulka Electric Corporation	Mt. Vernon, N.Y.
01961	Pulse Engineering Co.	Santa Clara, Calif.	08718	Cannon Electric Co., Phoenix Div.	Phoenix, Ariz.	55933	Sonotone Corp.	Elmsford, N.Y.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.
02114	Ferroxcube Corp. of America	Saugerties, N.Y.	08752	CBS Electronics Semiconductor Operations, Div. of C.B.S., Inc.	Lowell, Mass.	55938	Sorenson & Co., Inc.	So. Norwalk, Conn.	75915	Littlefuse Inc.	Des Plaines, Ill.
02286	Coile Mfg. Co.	Palo Alto, Calif.	08964	Mel-Rain	Indianapolis, Ind.	56137	Spaulding Fibre Co., Inc.	Tonawanda, N.Y.	76005	Lord Mfg. Co.	Erie, Pa.
02660	Amphenol-Borg Electronics Corp.	Chicago, Ill.	09026	Babcock Relays, Inc.	Costa Mesa, Calif.	56229	Sprague Electric Co.	North Adams, Mass.	76210	C.W. Marwedel	San Francisco, Calif.
02735	Dynec Corp. of America, Semiconductor and Materials Div.	Somerville, N.J.	09134	Texas Capacitor Co.	Houston, Texas	59446	Telex, Inc.	St. Paul, Minn.	76433	Micamold Electronic Mfg. Corp.	Brooklyn, N.Y.
02771	Vocaline Co. of America, Inc.	Old Saybrook, Conn.	09250	Atchim Electronics	Sun Valley, Calif.	60730	Thomas & Betts Co.	Elizabeth 1, N.J.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.
02777	Hopkins Engineering Co.	San Fernando, Calif.	09252	Electric Assemblies, Inc.	Chicago, Ill.	60741	Tripplett Electrical Inc.	Bluffton, Ohio	76493	J.W. Miller Co.	Los Angeles, Calif.
03058	G.E. Semiconductor Products Dept.	Syracuse, N.Y.	09569	Mallory Battery Co. of Canada, Ltd.	Toronto, Ontario, Canada	61775	Union Switch and Signal, Div. of Westinghouse Air Brake Co.	Swissvale, Pa.	76530	Monadnock Mills	San Leandro, Calif.
03705	Apex Machine & Tool Co.	Dayton, Ohio	09664	The Bristol Co.	Watervliet, Conn.	62119	Universal Electric Co.	Ossow, Mich.	76545	Mueller Electric Co.	Cleveland, Ohio
03797	Elema Corp.	El Monte, Calif.	10214	General Transistor Western Corp.	Los Angeles, Calif.	63743	Ward-Leonard Electric Co.	Mt. Vernon, N.Y.	76584	Oak Manufacturing Co.	Crystal Lake, Ill.
03877	Transitron Electronic Corp.	Wakefield, Mass.	10411	Ti-Tal, Inc.	Berkley, Calif.	65295	Witek Manufacturing Co.	Chicago 23, Ill.	77088	Bendix Pacific Division of Bendix Corp.	
03888	Pyroflox Resistor Co.	Morristown, N.J.	10464	Carbundium Co.	Niagara Falls, N.Y.	66346	Wolenski Optical Co.	Rochester, N.Y.	77075	Precision Metals Co.	No. Hollywood, Calif.
03954	Air Marine Motors, Inc.	Los Angeles, Calif.	11236	CTS of Berne, Inc.	Berne, Ind.	70276	Alien Mfg. Co.	Hartford, Conn.	77221	Phosian Instrument and Electronic Co.	South Pasadena, Calif.
04009	Arrow, Hart and Hegeman Elect. Co.	Hartford, Conn.	11237	Chicago Telephone of California, Inc.	So. Pasadena, Calif.	70319	Almetall Screw Prod. Co., Inc.	New York, N.Y.	77250	Phil-Mig. Co.	Chicago, Ill.
04013	Taurus Corp.	Lambertville, N.J.	11312	Microwave Electronics Corp.	Palo Alto, Calif.	70485	Atlantic India Rubber Works, Inc.	Garden City, N.Y.	77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.
04062	Elmco Products Co.	New York, N.Y.	11534	Duncan Electronic, Inc.	Santa Ana, Calif.	70563	Amperite Co., Inc.	Chicago, Ill.	77342	Potter and Brumfield, Div. of American Machine and Foundry	Princeton, Ind.
04222	Hi-Q Division of Aerovox	Myrtle Beach, S.C.	11711	General Instrument Corporation	Newark, N.J.	70903	Belden Mfg. Co.	Mt. Vernon, N.Y.	77530	Radio Condenser Co.	Brooklyn, N.Y.
04298	Elgin National Watch Co., Electronics Division	Burbank, Calif.	11717	Imperial Electronic, Inc.	Buena Park, Calif.	70998	Bird Electronic Corp.	New York, N.Y.	77564	Radio Receptor Co., Inc.	Harrisburg, Pa.
04354	Precision Paper Tube Co.	Chicago, Ill.	11870	Melabs, Inc.	Palo Alto, Calif.	71002	Birnbach Radic Co.	Quincy, Mass.	77565	Resistance Products Co.	Torrance, Calif.
04404	Dynec Division of Hewlett-Packard Co.	Palo Alto, Calif.	12136	Philadelphia Handle Co.	Camden, N.J.	71041	Boston Gear Works Div. of Murray Co. of Texas	Cleveland, Ohio	77569	Rubbercraft Corp. of Calif.	
04651	Sylvania Electric Prods., Inc., Electronic Tube Div.	Mountain View, Calif.	12697	Clarostat Mfg. Co.	Dover, N.H.	71218	Bud Radio Inc.	Paramus, N.J.	78189	Shaperoof Division of Illinois Tool Works	Elgin, Ill.
04713	Motorola, Inc., Semiconductor Prod. Div.	Phoenix, Arizona	12859	Nippin Electric Co., Ltd.	Tokyo, Japan	71266	Cinch Fastener Corp.	Plainville, Conn.	78283	Signal Indicator Corp.	New York, N.Y.
05227	Westinghouse Electric Corp., Sem-Conductor Dept.	Youngwood, Pa.	12930	Sylvania Semiconductor Inc.	Newport Beach, Calif.	71400	Bussmann Fuse Div. of McGraw-Edison Co.	St. Louis, Mo.	78290	Struthers-Dunn Inc.	Pitman, N.J.
05347	Ultronix, Inc.	San Mateo, Calif.	13396	Telefunken (G.M.B.H.)	Hannover, Germany	71436	Chicago Condenser Corp.	Chicago, Ill.	78452	Thompson-Bremer & Co.	Chicago, Ill.
05593	Illumitronic Engineering Co.	Sunnyvale, Calif.	13835	Midland Mfg. Co.	Kansas City, Kansas	71450	CTS Corp.	Elkhart, Ind.	78471	Tiley Mfg. Co.	San Francisco, Calif.
05616	Cosmo Plastic (c/o Electrical Spec. Co.)	Cleveland, Ohio	14093	Sem-Tech	Newbury Park, Calif.	71465	Cannon Electric Co.	Los Angeles, Calif.	78488	Stackpole Carbon Co.	St. Marys, Pa.
05624	Barber Colman Co.	Rockford, Ill.	14193	Calif. Resistor Corp.	Santa Monica, Calif.	71471	Cinema Engineering Co.	Burbank, Calif.	78493	Standard Thomson Corp.	Waltham, Mass.
05728	Tiffen Optical Co.	Roslyn Heights, Long Island, N.Y.	14298	Automatic Components, Inc.	Conshohocken, Pa.	71482	C.P. Clare & Co.	Chicago, Ill.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
05729	Metropolitan Telecommunications Corp.	Brooklyn, N.Y.	14655	Coronet Ubiquit Elec. Corp.	So. Plainfield, N.J.	71591	Centralab Div. of Globe Union Inc.	Milwaukee, Wis.	78790	Transformer Engineers	Pasadena, Calif.
05783	Stewart Engineering Co.	Santa Cruz, Calif.	14960	Williams Mfg. Co.	San Jose, Calif.	71616	Commercial Plastics Co.	Chicago, Ill.	78947	Umite Co.	Newtonville, Mass.
05820	Wakefield Engineering Inc.	Watkinsville, Mass.	15203	Webster Electronics Co., Inc.	Brooklyn, N.Y.	71700	The Cornish Wire Co.	New York, N.Y.	79142	Veeder Root, Inc.	Hartford, Conn.
05820	The Bassick Co.	Bridgeport, Conn.	15291	Jur-Amsco Corporation	Hollywood, Calif.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	79251	Wenco Mfg. Co.	Chicago, Ill.
05715	Bausch and Lomb Optical Co.	Rochester, N.Y.	15688	Long Island City 1, N.Y.	Long Island City 1, N.Y.	71753	A.O. Smith Corp., Crowley Div.	West Orange, N.J.	79272	Continental-Wirt Electronics Corp.	Philadelphia, Pa.
06402	E.T.A. Products Co. of America	Chicago, Ill.	16758	Deico Radio Div. of G.M. Corp.	Kokomo, Ind.	71785	Cinch Mfg. Corp.	Chicago, Ill.	79663	Zierick Mfg. Corp.	New Rochelle, N.Y.
06475	Western Devices, Inc.	Inglewood, Calif.	17474	Tranex Company	Canoga Park, Calif.	71794	Dow Corning Corp.	Midland, Mich.	80031	McPiv Division of Sessions Clock Co.	Morristown, N.J.
06540	Anatom Electronic		18486	Radio Industries	Des Plaines, Ill.	72092	Etel McCullough, Inc.	San Bruno, Calif.	80120	Schnitzer Alloy Products	Elizabeth, N.J.
06540	Hardware Co., Inc.	New Rochelle, N.Y.	18563	Curtis Instrument Inc.	Mt. Kisco, N.Y.	72136	Electro Motive Mfg. Co., Inc.		80130	Times Facsimile Corp.	New York, N.Y.
06555	Beede Electrical Instrument Co., Inc.	Penecook, N.H.	18673	E.I. DuPont and Co., Inc.	Wilmington, Del.	72699	General Instrument Corp., Semiconductor Div.	Willimantic, Conn.	80131	Electronic Industries Association	Air brand
06751	U.S. Semcor Division of Nuclear Corp. of America	Phoenix, Arizona	19315	Eclipse Pioneer, Div. of Bausch and Lomb Optical Co.	Teterboro, N.J.	72758	Girard-Hopkins	Providence, R.I.	80207	Unimax Switch, Div. of W.L. Maxson Corp.	Wallingford, Conn.
06812	Torrington Mfg. Co., West Div.	Van Nuys, Calif.	19500	Thomas A. Edison Industries, Div. of McGraw-Edison Co.	West Orange, N.J.	72765	Drake Mfg. Co.	Chicago, Ill.	80223	United Transformer Corp.	New York, N.Y.
07088	Kelvin Electric Co.	Van Nuys, Calif.	19701	Electra Manufacturing Co.	Kansas City, Mo.	72825	Hugh H. Eby Inc.	Brooklyn, N.Y.	80248	Oxford Electric Corp.	Chicago, Ill.
00015-39	Revised: February, 1965		20183	Electronic Tube Corp.	Philadelphia, Pa.	72928	Gudeman Co.	Chicago, Ill.	80294	Bourns Laboratories, Inc.	Riverside, Calif.
			2126	Executive, Inc.	New York, N.Y.	72964	Robert M. Hadley Co.	Erie, Pa.	80411	Fulton Div. of Robertshaw Fulton Controls Co.	Columbus 16, Ohio
			2150	Fansteel Metallurgical Corp.	No. Chicago, Ill.	72982	Erie Resistor Corp.	Princeton, Ind.	80486	1 Star Products Inc.	Defiance, Ohio
			21335	The Faflar Bearing Co.	New Britain, Conn.	73061	Hansen Mfg. Co., Inc.	Chicago, Ill.	80509	Avery Adhesive Label Corp.	Monrovia, Calif.
			21964	Fed. Telephone and Radio Corp.	Clifton, N.J.	73076	H. M. Harper Co.	Erie, Pa.	80583	Hammerlund Co., Inc.	New York, N.Y.
			24446	General Electric Co.	Schenectady, N.Y.	73138	Helipot Div. of Beckman Instruments, Inc.	Fulterton, Calif.	80540	Stevens, Arnold, Co., Inc.	Boston, Mass.
			24455	G.E., Lamp Division	Nela Park, Cleveland, Ohio			81030	International Instruments, Inc.	New Haven, Conn.	
								81073	Grayhill Co.	LaGrange, Ill.	
								81095	Triad Transformer Corp.	Venice, Calif.	
								81312	Winchester Electronics Co., Inc.	Norwalk, Conn.	

Galley 3 - Hewlett Packard Code List

From: FSC. Handbook Supplements
H4-1 Dated DECEMBER 1964
H4-2 Dated MARCH 1962

Section VI
Table 6-3

Model 5253B

Table 6-3. Manufacturer's Code (cont'd)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
81349	Military Specification	85474	R.M. Bracamonte & Co.	San Francisco, Calif.	93929	G. V. Controls	Livingston, N. J.	98220	Francis L. Mosley	Pasadena, Calif.
81415	Wilker Products, Inc.	Cleveland, Ohio	85560	Koiled Kords, Inc.	New Haven, Conn.	93982	Insuline-Van Norman Ind., Inc.	98279	Microdot, Inc.	So. Pasadena, Calif.
81453	Raytheon Mfg. Co., Industrial Components Div., Indust. Tube Operations	Newton, Mass.	85911	Seamless Rubber Co.	Chicago, Ill.	94137	Electronic Division	Manchester, N.H.	98291	Sealectro Corp.	Manhattan, N.Y.
81483	International Rectifier Corp.	El Segundo, Calif.	86197	Clifton Precision Products	Clifton Heights, Pa.	94144	General Cable Corp.	Bayonne, N.J.	98405	Carad Corp.	Redwood City, Calif.
81541	The Artpax Products Co.	Cambridge, Mass.	86579	Precision Rubber Products Corp.	Dayton, Ohio	94145	Raytheon Mfg. Co., Industrial Components Div., Receiving Tube Operation	Quincy, Mass.	98731	General Mills	Minneapolis, Minn.
81660	Barry Controls, Inc.	Watertown, Mass.	86684	Radio Corp. of America, RCA Electron Tube Div.	Harrison, N.J.	94146	Raytheon Mfg. Co., Semiconductor Div., California Street Plant	Newton, Mass.	98821	North Hills Electric Co.	Mineola, N.Y.
82032	Cartor Parts Co.	Skokie, Ill.	87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	94148	Scientific Radio Products, Inc.	98925	Clevite Transistor Prod. Div. of Clevite Corp.	Waltham, Mass.
82142	Jeffers Electronics Division of Speer Carbon Co.	Du Bois, Pa.	87473	Western Fibrous Glass Products Co.	San Francisco, Calif.	94154	Tung-Sol Electric, Inc.	Loveland, Colo.	98978	International Electronic Research Corp.	Burbank, Calif.
82170	Allen B. DuMont Labs, Inc.	Clifton, N.J.	87664	Van Waters & Rogers Inc.	Seattle, Wash.	94197	Curtiss-Wright Corp.	Newark, N.J.	99109	Columbia Technical Corp.	New York, N.Y.
82209	Maguire Industries, Inc.	Greenwich, Conn.	87930	Tower Mfg. Corp.	Providence, R.I.	94222	Electronics Div.	East Paterson, N.J.	99312	Varian Associates	Palo Alto, Calif.
82213	Sylvania Electric Prod. Inc. Electronic Tube Div.	Emporia, Pa.	88140	Cutter-Hammer, Inc.	Lincoln, Ill.	94230	Southco Div. of S. Chester Corp.	Lester, Pa.	99518	Marshall Industries, Electron Products Division	Pasadena, Calif.
82376	Astron Co.	East Newark, N.J.	88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94264	Tru Ohm Prod. Div. of Model Engineering and Mfg. Co.	Chicago, Ill.	99707	Control Switch Division, Controls Co. of America	El Segundo, Calif.
82389	Switchcraft, Inc.	Chicago, Ill.	88698	General Mills, Inc.	Buffalo, N.Y.	94330	Wire Cloth Products Inc.	Chicago, Ill.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
82647	Metals and Controls, Inc., Div. of Texas Instruments, Inc., Spencer Prod.	Attleboro, Mass.	89231	Graybar Electric Co.	Oakland, Calif.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	99848	Wico Corporation	Indianapolis, Ind.
82866	Research Products Corp.	Madison, Wis.	89462	Waldes Kohinor, Inc.	Cambridge, Mass.	95023	Philbrick Researchers, Inc.	Boston, Mass.	99934	Renbrandt, Inc.	Boston, Mass.
82877	Rotron Manufacturing Co., Inc.	Woodstock, N.Y.	89473	General Electric Distributing Corp.	Schenectady, N.Y.	95236	Allies Product Corp.	Miami, Fla.	99942	Hoffman Semiconductor Div. of Hoffman Electronics Corp.	Evanston, Ill.
82893	Vector Electronic Co.	Glendale, Calif.	89636	Carter Parts Div. of Economy Baler Co.	Chicago, Ill.	95238	Continental Connector Corp.	Woodside, N.Y.	99957	Technology Instrument Corp. of Calif.	Newbury Park, Calif.
83053	Western Washer Mfr. Co.	Los Angeles, Calif.	89655	United Transformer Co.	Chicago, Ill.	95264	Lerco Electronics, Inc.	Burbank, Calif.	THE FOLLOWING H-P VENDORS HAVE NO NUMBER ASSIGNED IN THE LATEST SUPPLEMENT TO THE FEDERAL SUPPLY CODE FOR MANUFACTURERS HANDBOOK.
83058	Carr Fastener Co.	Cambridge, Mass.	90179	U.S. Rubber Co., Mechanical Goods Div.	Passaic, N.J.	95265	National Coil Co.	Sheridan, Wyo.	J0000 Winchester Electronics, Inc.	Santa Monica, Calif.	
83085	New Hampshire Ball Bearing, Inc.	Peterborough, N.H.	90970	Bearing Engineering Co.	San Francisco, Calif.	95275	Vitramon, Inc.	Bridgeport, Conn.	0000F Malco Tool and Die	Los Angeles, Calif.	
83125	Pyramid Electric Co.	Darlington, S.C.	91260	Connor Spring Mfg. Co.	San Francisco, Calif.	95348	Gordas Corp.	Bloomfield, N.J.	0000M Western Coil Div. of Automatic Ind., Inc.	Redwood City, Calif.	
83148	Electro Cords Co.	Los Angeles, Calif.	91345	Miller Dial & Nameplate Co.	El Monte, Calif.	95354	Methode Mfg. Co.	Chicago, Ill.	0000P Ty-Cat Mfg. Co., Inc.	Holliston, Mass.	
83166	Victory Engineering Corp.	Springfield, N.J.	91418	Radio Materials Co.	Chicago, Ill.	95712	Dage Electric Co., Inc.	Franklin, Ind.	0000Q Willow Leather Products Corp.	Newark, N.J.	
83258	Bendix Corp., Red Bank Div.	Red Bank, N.J.	91506	Augat Brothers', Inc.	Attleboro, Mass.	95987	Weckesser Co.	Chicago, Ill.	0000A British Radio Electronics Ltd.	Washington, D.C.	
83259	Hubbell Corp.	Mundelein, Ill.	91637	Dale Electronics, Inc.	Columbus, Neb.	96067	Huggins Laboratories	Sunnyvale, Calif.	0000B ETA	England	
83330	Smith, Herman H., Inc.	Brooklyn, N.Y.	91662	Elico Corp.	Philadelphia, Pa.	96095	Hi-Q Division of Aerovox	Olean, N.Y.	0000C Indiana General Corp., Elect. Div.	Indiana	
83365	Central Screw Co.	Chicago, Ill.	91737	Gremer Mfg. Co., Inc.	Wakefield, Mass.	96256	Thordarson-Messner Div. of Maguire Industries, Inc.	Mt. Carmel, Ill.	0000B Precision Instrument Components Co.	Van Nuys, Calif.	
83551	Gavia Wire and Cable Co., Div. of Amerace Corp.	Brookfield, Mass.	91927	K F Development Co.	Redwood City, Calif.	96296	Solar Manufacturing Co.	Los Angeles, Calif.	000MM Rubber Eng. & Development	Hayward, Calif.	
83594	Burroughs Corp., Electronic Tube Div.	Plainfield, N.J.	91929	Minneapolis-Honeywell Regulator Co., Microswitch Div.	Freeport, Ill.	96330	Carlton Screw Co.	Chicago, Ill.	000NW A "N" D Manufacturing Co.	San Jose 27, Calif.	
83740	Eveready Battery	New York, N.Y.	91961	Nahm-Bros. Spring Co.	Oakland, Calif.	96341	Microwave Associates, Inc.	Burlington, Mass.	000Q Cooltron	Oakland, Calif.	
83777	Model Eng. and Mfg., Inc.	Huntington, Ind.	92180	Tri-Connector Corp.	Pebbody, Mass.	96501	Excel Transformer Co.	Oakland, Calif.	000SS Control of Elgin Watch Co.	Burbank, Calif.	
83821	Loyd Scruggs Co.	Festus, Mo.	92196	Universal Metal Prod., Inc.	Bassett Puento, Calif.	97464	Industrial Retaining Ring Co.	Irvington, N.J.	000WW California Eastern Lab.	Burlingame, Calif.	
84171	Arco Electronics, Inc.	New York, N.Y.	92607	Tinsolite Insulated Wire Co.	Tarrytown, N.Y.	97539	Automatic and Precision Mfg. Co.	Yonkers, N.Y.	00YY S. K. Smith Co.	Los Angeles 45, Calif.	
84395	A. J. Glesener Co., Inc.	San Francisco, Calif.	93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.	97966	CBS Electronics, Div. of C.B.S., Inc.	Danvers, Mass.	From: FSC Handbook Supplements	
84411	Good All Electric Mfg. Co.	Ogallala, Neb.	93359	Robbins and Myers, Inc.	New York, N.Y.	97979	Resistor Corp.	Yonkers, N.Y.	H4-1 Dated DECEMBER 1964	
84970	Sarkis Tarzian, Inc.	Bloomington, Ind.	93410	Stevens Mfg. Co., Inc.	Mansfield, Ohio	98141	Altek Brothers Inc.	Jamaica, N.Y.	H4-2 Dated MARCH 1962	
85454	Boonton Molding Company	Bloomington, N.J.	93768	Howard J. Smith Inc.	Port Monmouth, N.J.	98159	Rubber Tech, Inc.	Gardena, Calif.	
85471	A. B. Boyd Co.	San Francisco, Calif.									

APPENDIX I - MANUAL CHANGES

This manual applies directly to the 5253B Frequency Converter having serial prefix 513. This manual with the following changes also applies to the 5253B Frequency Converters having serial prefix numbers 450, 321, and 311.

<u>Instrument Serial Prefix No.</u>	<u>Change No.</u>
450	1
311, 321	1, 2

CHANGE 1: Tables 6-1, Misc., Table 6-2

Change: Plate: Bottom from 05253-0005 to ~~hp~~ Part No. 5253A-12E.
Bracket: Meter from 05251-0002 to ~~hp~~ Part No. 5253A-12F.
Bracket: Panel from 05253-0006 to ~~hp~~ Part No. 05253-0002.
Panel: Front from 05253-2014 to ~~hp~~ Part No. 05253-2003.

CHANGE 2: Figure 5-5, Table 6-1.

Change: A1 from 05253-6007 to 5253A-65A
Replace schematic with Figure IA-1
Replace A1 portion of parts list with Table IA-1

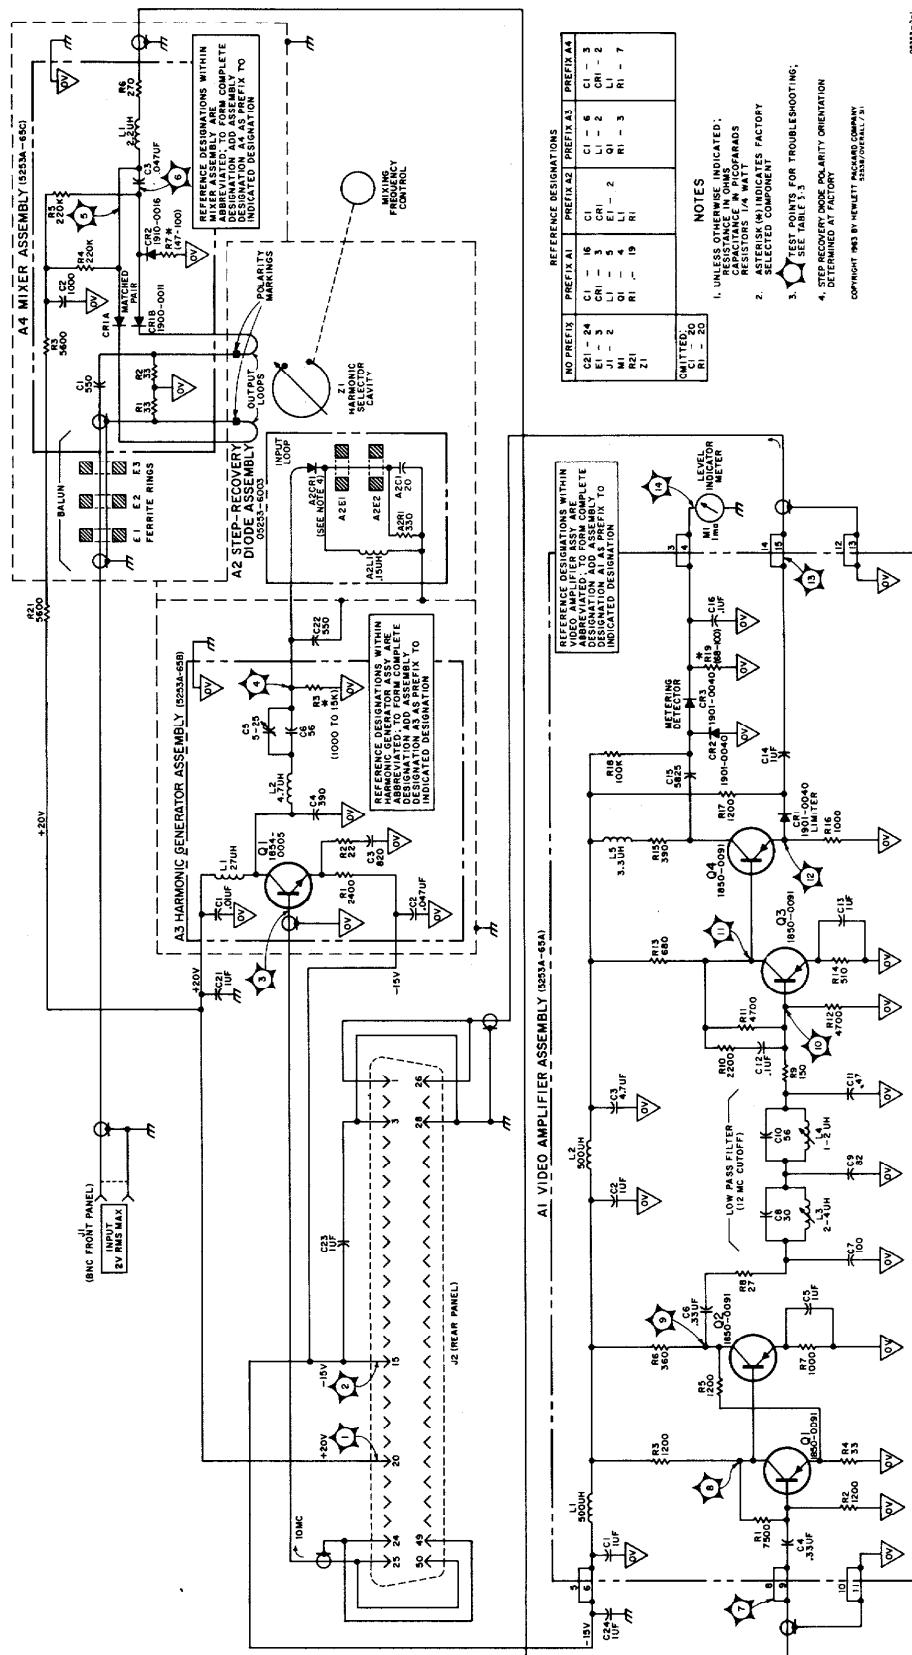


Figure IA-1

Table IA-1. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	5253A-65A	ASSY:VIDEO AMPLIFIER	
A1C1	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C2	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C3	0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	
A1C4	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C5	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C6	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C7	0140-0176	C:FXD MICA 100 PF 2% 300 VDCW	
A1C8	0140-0203	C:FXD MICA 30PF 5% 500VDCW	
A1C9	0140-0193	C:FXD MICA 82 PF 5% 300 VDCW	
A1C10	0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	
A1C11	0140-0204	C:FXD 47PF 5% NPO 500 VDCW	
A1C12	0150-0121	C:FXD .1MF 50VDCW	
A1C13	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C14	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C15	0140-0189	C:FXD MICA 5825 PF 2% 300 VDCW	
A1C16	0150-0121	C:FXD .1MF 50VDCW	
A1CR1	1901-0040	DIODE:SILICON	
A1CR2	1901-0040	DIODE:SILICON	
A1CR3	1901-0040	DIODE:SILICON	
L1	9140-0118	COIL:FXD 500 UH 5%	
L2	9140-0118	COIL:FXD 500 UH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UHY	
A1L5	9140-0111	COIL:FXD RF 3.3UHY	
A1Q1	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q2	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q3	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q4	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1R1	0683-7525	R:FXD COMP 7500 OHMS 5% 1/4W	
A1R2	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R3	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R4	0683-3305	R:FXD COMP 33 OHMS 5% 1/4W	
A1R5	0683-1225	R:FXD COMP 1200 OHMS 5% 1/4W	
A1R6	0683-3615	R:FXD COMP 360 OHMS 5% 1/4W	
A1R7	0683-1025	R:FXD COMP 1000 OHMS 5% 1/4W	
A1R8	0684-2701	R:FXD 27 OHM 10% 1/4 W	
A1R9	0684-1511	R:FXD COMP 15K OHMS 10% 1/4W	
A1R10	0683-2225	R:FXD 2.2K OHM 5% 1/4W	
A1R11	0683-4725	R:FXD COMP 4700 OHMS 5% 1/4W	
A1R12	0683-4725	R:FXD COMP 4700 OHMS 5% 1/4W	
A1R13	0683-6815	R:FXD COMP 680 OHMS 5% 1/4W	
A1R14	0683-5115	R:FXD COMP 510 OHMS 5% 1/4W	
A1R15	0683-3915	R:FXD COMP 390 OHMS 5% 1/4W	
A1R16	0683-1025	R:FXD COMP 1000 OHMS 5% 1/4W	
A1R17	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R18	0684-1041	R:FXD 100 K OHM 10% 1/4 W	
A1R19	0683-8205	R:FXD COMP 82 OHMS 5% 1/4W	

See list of abbreviations in introduction to this section

APPENDIX II - 5253A

IIA-1. INTRODUCTION.

IIA-2. The 5253A is basically the same as the 5253B except for frequency range. The 5253A measures from 100 to 500 Mc. The 5253B measures from 50 to 500 Mc. The frequency range of the 5253B was extended by changing the pick-up loop in the cavity. The 5253B manual will apply for most applications. Appendix II covers the differences between the two models and contains the necessary information for the operation and maintenance of the 5253A.

IIA-3. DESCRIPTION.

IIA-4. The Hewlett-Packard Model 5253A Frequency Converter is a plug-in unit which converts a Hewlett-Packard Model 5243L or 5245L Electronic Counter into a direct reading counter from 88 to 512 Mc.

IIA-5. The stability and accuracy of the basic counter are retained by multiplying a 10-Mc signal, derived from the 1-Mc internal time base of the counter, to a selectable harmonic frequency between 100 and 500 Mc. This known harmonic of 10 Mc is then heterodyned with the INPUT signal. If the resulting difference frequency is between 100 kc and 12 Mc (bandwidth of amplifier in plug-in), it is counted and displayed by the counter. The frequency of the INPUT signal is then indicated by the combination of the MIXING FREQUENCY control (in megacycles; front panel of plug-in) and the digital display of the counter (in megacycles).

IIA-6. A front panel meter, by monitoring the difference-frequency output of the plug-in to the counter,

aids in selecting the desired MIXING FREQUENCY and also in determining if INPUT signal amplitude is adequate for accurate frequency measurement.

IIA-7. OPERATING PROCEDURE.

IIA-8. NORMAL RANGE MEASUREMENTS.

IIA-9. Figure IIA-1 is the procedure to be used for measurement of frequencies from 100.1 to 512 Mc with INPUT signal amplitudes from 50 mv to 1 v RMS.

IIA-10. EXTENDED RANGE MEASUREMENTS.

IIA-11. The frequency of signals not within the normal range of 100.1 to 512 Mc, 50 mv to 1 v RMS, may be measured using the following procedures:

IIA-12. 88 TO 100.1 MC, 50 MV TO 1 V RMS. Perform steps 1 through 5 of Figure IIA-1. Then:

a. Set mixing frequency control to slightly more than 110 Mc.

b. Turn mixing frequency control slowly clockwise until level indicator meter first reaches a maximum reading in the green portion of the scale.

c. Subtract counter display (in Mc) from reading of mixing frequency control (in Mc) for frequency of INPUT signal.

Table IIA-1. Specifications*

RANGE: As converter for 5243L or 5245L counter, 88 Mc to 512 Mc, using mixing frequencies of 100 Mc to 500 Mc in 10 Mc steps

ACCURACY: Retains accuracy of 5243L or 5245L counter

INPUT VOLTAGE RANGE: 50 mv to 1 v RMS

MAXIMUM INPUT: 2 v RMS or 100 vdc will not damage the instrument

INPUT IMPEDANCE: Approximately 50 ohms


LEVEL INDICATOR: Meter aids frequency selection; indicates output voltage level to counter

REGISTRATION: Counter display is added to the converter dial reading

WEIGHT: Net 5-1/2 lbs, shipping 9 lbs

ACCESSORY FURNISHED: #10503A (AC-16K) Cable, 4 ft long, male BNC connectors

*When installed in Hewlett-Packard Model 5243L or Model 5245L Electronic Counter.

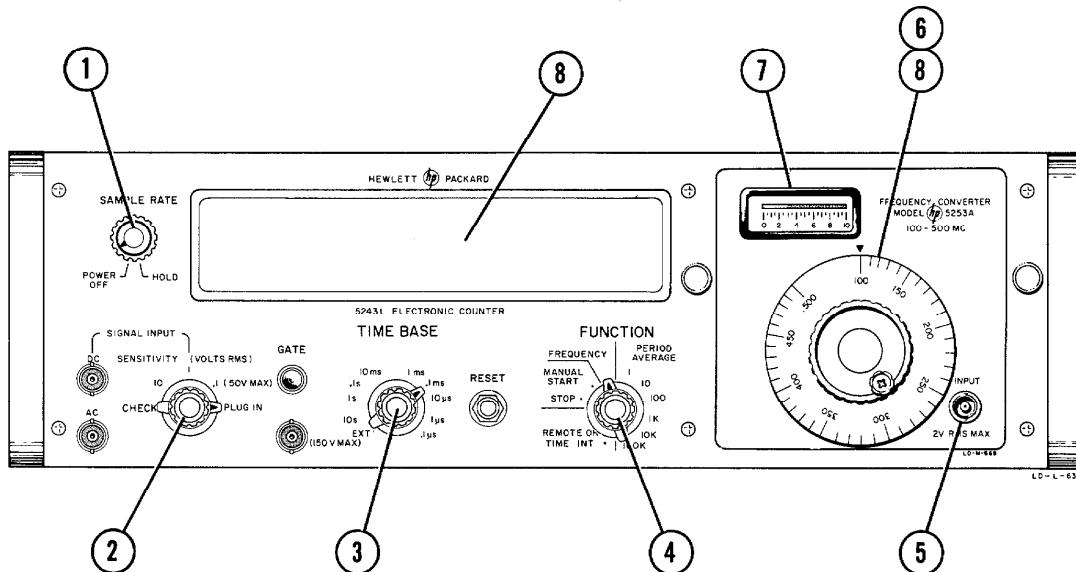

1. Turn SAMPLE RATE control slightly out of POWER OFF position.
2. Set SENSITIVITY to PLUG IN.
3. Set TIME BASE to .1 ms.*
4. Set FUNCTION to FREQUENCY.
5. Connect signal whose frequency is to be measured to INPUT of converter.
6. Set mixing frequency control to read slightly less than 100 mc.
7. Slowly turn mixing frequency control counter-clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
8. Add counter display (in mc) to mixing frequency control reading (in mc) for frequency of INPUT signal.

* TIME BASE setting may vary, depending on desired resolution of INPUT signal frequency. See table 3-1.

Figure IIA-1. Frequency Measurement Procedure

IIA-13. 88 TO 512 MC, AMPLITUDE LESS THAN 50 MV RMS. The front panel level indicator meter indicates in the green portion of its scale only when converter is properly tuned and amplitude of INPUT signal is adequate for accurate frequency measurement. However, because of conservative specifications of both the converter and counter, frequencies may often be accurately measured when meter reads in the red portion of its scale. To make these extended range measurements:

a. Follow normal procedure (Figure IIA-1 or Paragraph IIA-12, depending upon frequency range) except that mixing frequency control should be tuned for first maximum reading on the level indicator meter, regardless of the color of region maximum.

b. Insert an external variable attenuator (such as Hewlett-Packard Model 355A or 355C) in the transmission line between the converter and the source of INPUT signal. Vary attenuation from 0 to 1 db during final step of frequency measurement procedure. If counter display does not change more than momentarily (during switching of attenuator), INPUT signal is above noise threshold and frequency measurement result is valid.

IIA-14. VIDEO AMPLIFIER ASSEMBLY (A1).

IIA-15. The output of the mixer circuit is amplified by transistors A1Q1 and A1Q2 and is fed to the 12-Mc low-pass filter network (see Figure IIA-2). This filter passes any signal frequency below approximately 12 Mc and attenuates all higher frequency signals. The low-pass filter output is amplified by A1Q3 and fed to the last transistor amplifier, A1Q4, which provides both the output to the counter and the drive for the level indicator meter. The limiter diode, A1CR1, prevents the amplitude of the video amplifier output signal from exceeding approximately 300 mv RMS so that counter input circuits will not be overloaded. The low frequency limit of the video amplifier, determined by the bypass and interstage coupling networks, is approximately 100 kc. The converter output signal to the counter, when converter is properly tuned, will be between approximately 100 kc and 12 Mc and will have an amplitude that is less than approximately 300 mv RMS.

IIA-16. LEVEL INDICATOR METER.

IIA-17. The dc current supply for the meter is produced by metering detector A1CR3 and smoothed by capacitor A1C16 (see Figure IIA-3). The value of shunt resistor A1R19 is selected to make level indicator meter M1 read at red-green border when amplitude of converter output to counter is in excess of the 100-mv RMS minimum signal amplitude normally required by the counter for accurate frequency measurement.

IIA-18. HARMONIC GENERATOR ADJUSTMENT.

IIA-19. To adjust the harmonic generator assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, $\#$ 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 472 Mc, CW, at 100 mv.

c. Connect RF Millivoltmeter to Test Point #13 (see Figure IIA-5).

d. Set converter mixing frequency control to 470 Mc, and tune for maximum reading on RF Millivoltmeter.

e. Vary output of VHF Signal Generator to make converter level indicator meter read at red-green border.

f. Using plastic tuning tool, tune A3C5 (see Figure IIA-5) for maximum reading on RF Millivoltmeter. Tune A3C5 through hole in harmonic generator assembly shield cover.

IIA-20. LOW PASS FILTER ADJUSTMENT.

IIA-21. To adjust the low pass filter in the video amplifier assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, $\#$ 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 110 Mc, CW, at 50 mv.

c. Connect RF Millivoltmeter to Test Point #13 (see Figure IIA-7).

d. Set converter mixing frequency control to 100 Mc and tune for maximum reading on RF Millivoltmeter.

e. Set Signal Generator to 118 Mc, CW, at 1 v.

f. Using plastic tool, adjust variable inductor A1L4 (see Figure IIA-4) for minimum reading of RF Millivoltmeter.

g. Set Signal Generator to 117 Mc, CW, at 1 v.

h. Using plastic tool, adjust variable inductor A1L3 (see Figure IIA-4) for minimum reading of RF Millivoltmeter.

i. Set Signal Generator to 115 Mc, CW, at 1 v.

j. Reading of RF Millivoltmeter should be less than 100 mv. If reading is above 100 mv, troubleshoot video amplifier assembly.

IIA-22. METER ADJUSTMENT.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, $\#$ 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set counter controls as shown in Figure IIA-1. Counter should display approximately 2 Mc.

d. Vary VHF Generator output to make level indicator meter read at red-green border.

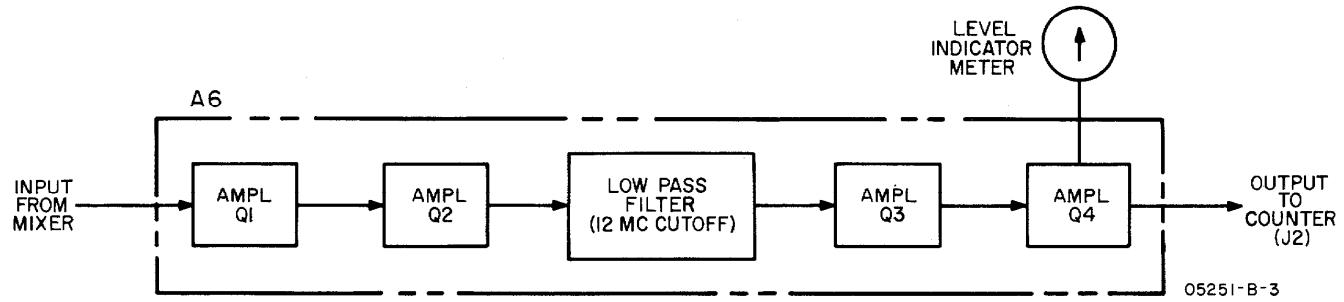


Figure IIA-2. Video Amplifier (A6)

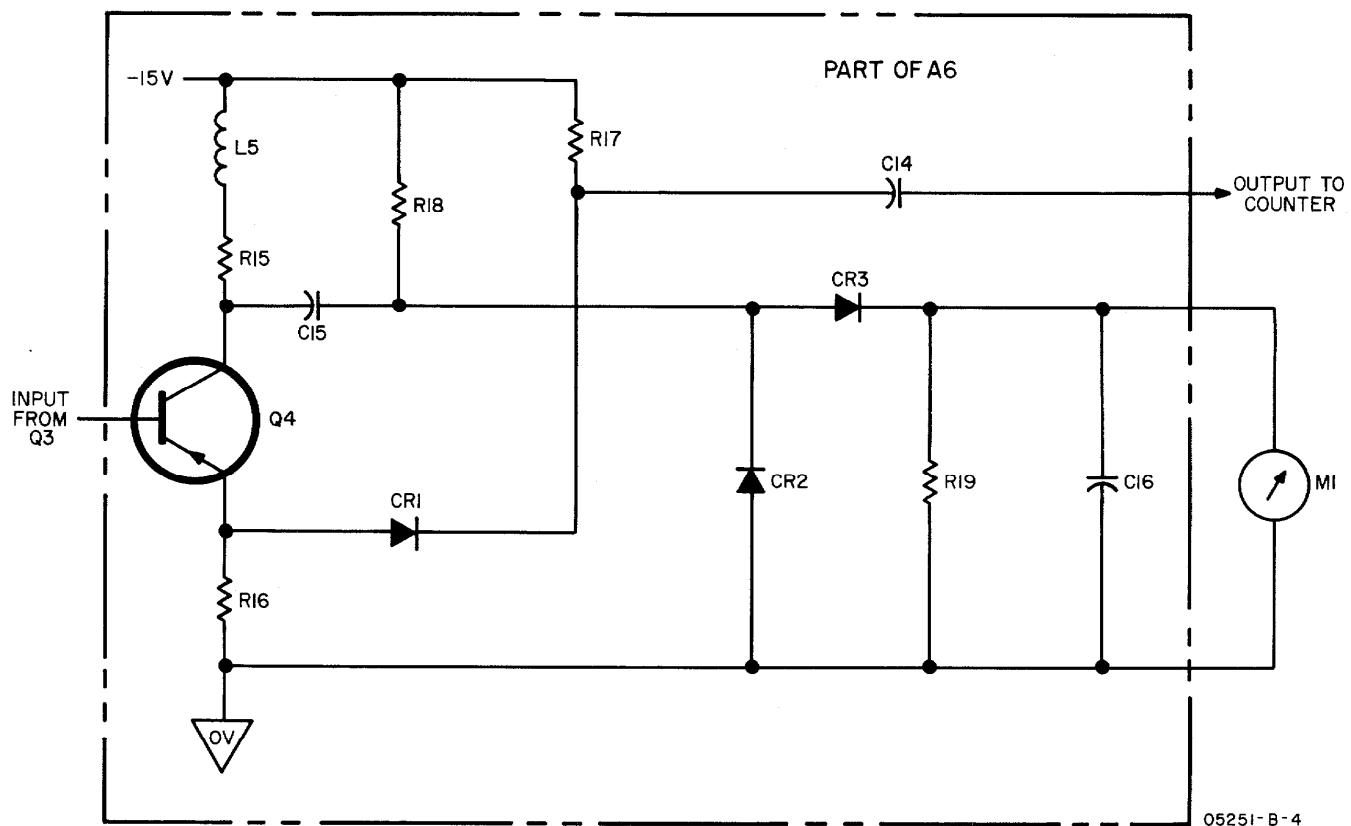


Figure IIA-3. Level Indicator Meter Circuit

e. Using RF Millivoltmeter, measure voltage at Test Point #13. Voltage should be between 100 mv and 130 mv. If not, change value of resistor A1R19 to change voltage to between 100 mv and 130 mv. If voltage is too high, increase value of A1R19. If voltage is too low, decrease value of A1R19. Repeat steps d and e after changing value of A1R19.

IIA-23. MECHANICAL ADJUSTMENT OF METER ZERO .

IIA-24. TRUE SIGNAL LEVEL INDICATION. Level indicator meter is adjusted at the factory for proper mechanical zero. However, normal aging of meter components may change indicated zero level. To insure accuracy of input signal level indication, periodic adjustment of meter zero may be necessary.

IIA-25. ZERO-SET. When meter is properly zero-set, pointer rests over the zero calibration mark at the left-hand end of meter scale when converter is (1) at normal operating temperature, (2) in normal operating position, and (3) without power. Proceed as follows:

- a. Allow counter and converter to operate for one hour to permit meter movement to reach normal operating temperature.
- b. Turn counter off and allow one minute for all capacitors to discharge.
- c. Remove converter from counter to enable access to rear of meter.
- d. Remove adhesive-backed-paper cover from meter zero-adjustment access hole on top-rear of meter.
- e. Carefully insert small tool in access hole and engage adjustment fork.
- f. Vary setting of adjustment fork until meter reads zero.
- g. Remove tool and replace adhesive-backed paper cover on access hole. This completes meter zero adjustment procedure.

IIA-26. SENSITIVITY CHECK.

- a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable , \oplus 10506A.
- b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.
- c. Adjust controls as shown in Figure IIA-2.
- d. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.
- e. Using RF Millivoltmeter, measure output of converter at Test Point #13 (see Figure IIA-7). Voltage should be at least 100 mv.

f. Repeat above steps c, d, and e with VHF Generator frequency of 472 Mc and converter mixing frequency control set to 470 Mc. Converter output to counter, as measured by RF Millivoltmeter, should be at least 100 mv.

g. A similar check may be made at any frequency within the range of the Model 5253A. Converter output to counter should be at least 100 mv when difference frequency is between 100 kc and 12 Mc and converter is properly tuned.

IIA-27. METER ACCURACY CHECK.

- a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, \oplus 10506A.
- b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.
- c. Set controls as shown in Figure IIA-1. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.
- d. Vary output of VHF Signal Generator for converter level indicator to make meter read at red-green border.
- e. Using RF Millivoltmeter, measure converter output to counter at Test Point #13. Voltage should be between 100 mv and 130 mv. If not, see Paragraph IIA-21 for meter calibration adjustment procedure.

IIA-28. LOW PASS FILTER CHECK.

- a. Turn counter power off, remove converter from counter and reconnect to counter with Extension Cable, \oplus 10506A.
- b. Set VHF Signal Generator to 110 Mc, CW, at 50 mv and connect to INPUT of converter.
- c. Set controls as shown in Figure IIA-1. Set converter mixing frequency control to 100 Mc. Counter should display approximately 10 Mc.
- d. Connect RF Millivoltmeter to Test Point #13. Vary output of VHF Signal Generator for RF Millivoltmeter reading of 100 mv. Note output level of VHF Signal Generator.
- e. Set VHF Signal Generator to 115 Mc at same output level as noted in step d above. Converter output to counter, as shown on RF Millivoltmeter, should not exceed 50 mv. If converter output to counter is greater than 50 mv, see Paragraph IIA-20 for low pass filter adjustment procedure.

IIA-29. IN-CABINET PERFORMANCE CHECK.

- a. Turn counter power off and install converter.
- b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.
- c. Set controls as shown in Figure IIA-1. Counter should display approximately 2 Mc.
- d. Set VHF Signal Generator to any frequency between 88 Mc and 512 Mc with output of 50 mv. Counter should display correct frequency at any frequency within this range.

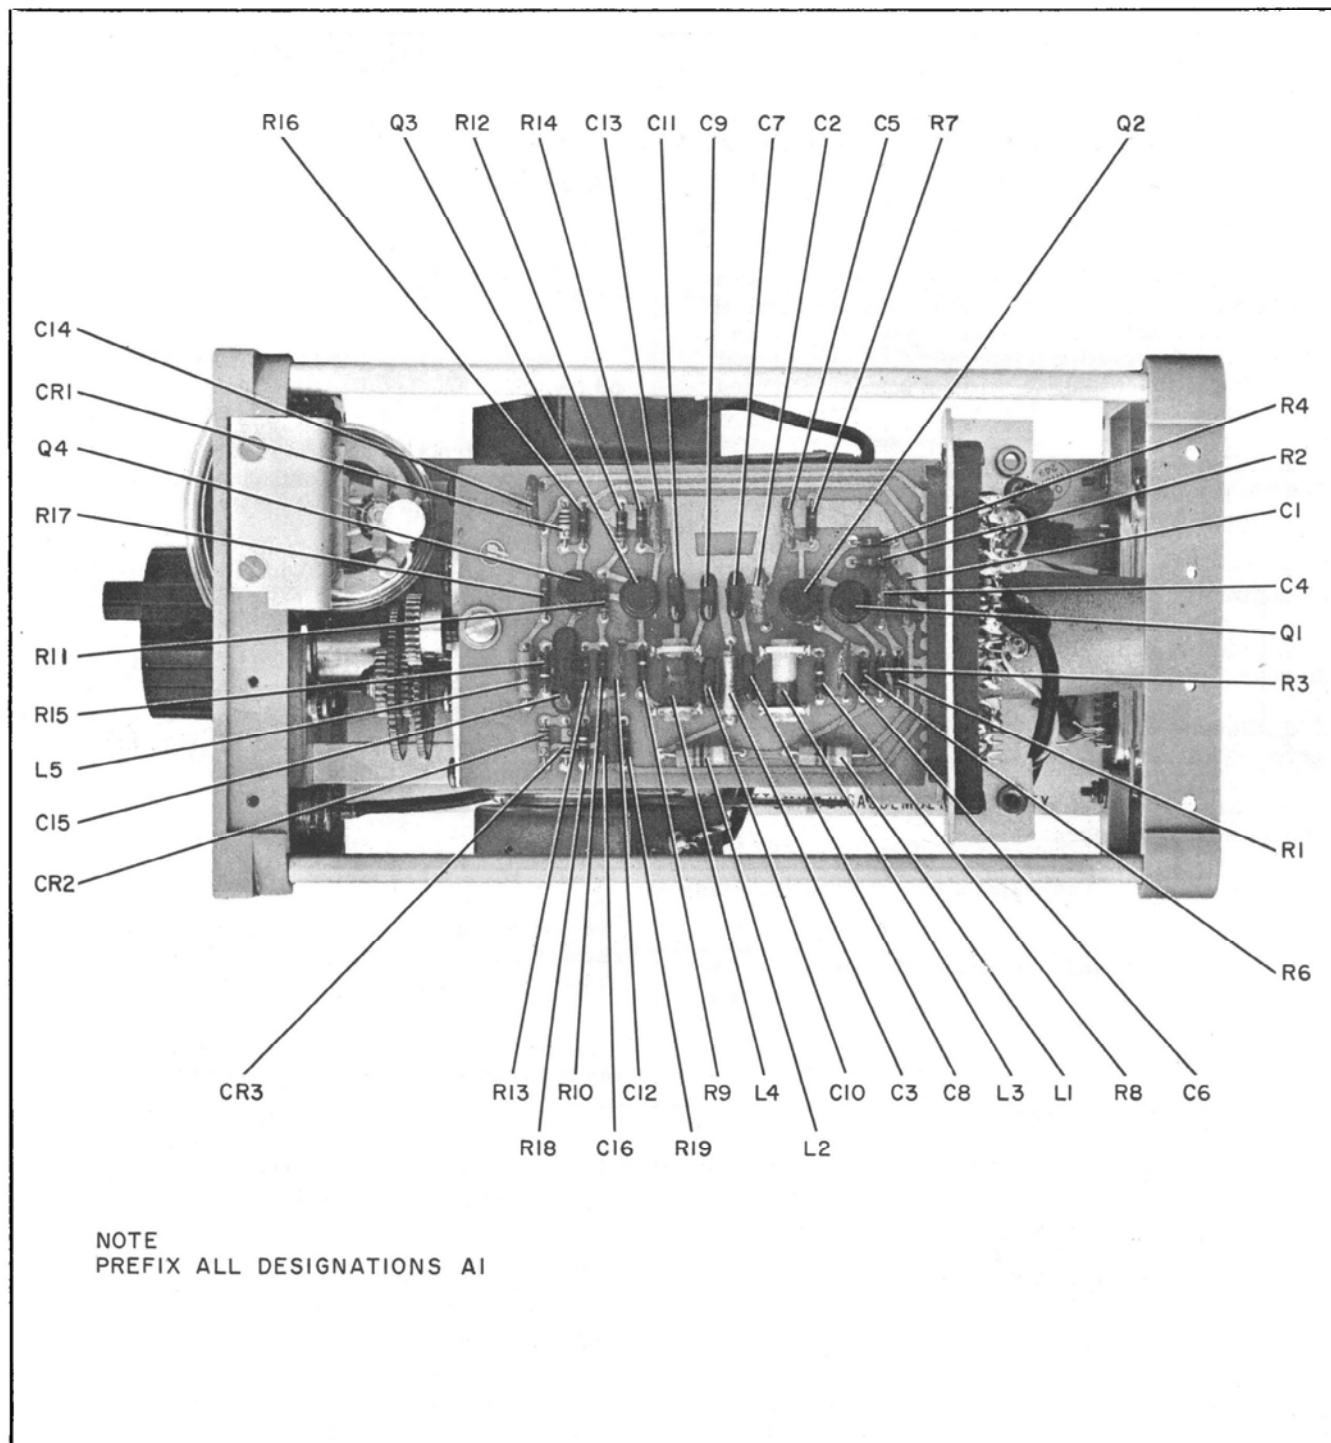


Figure IIA-4. Model 5253A, Top View

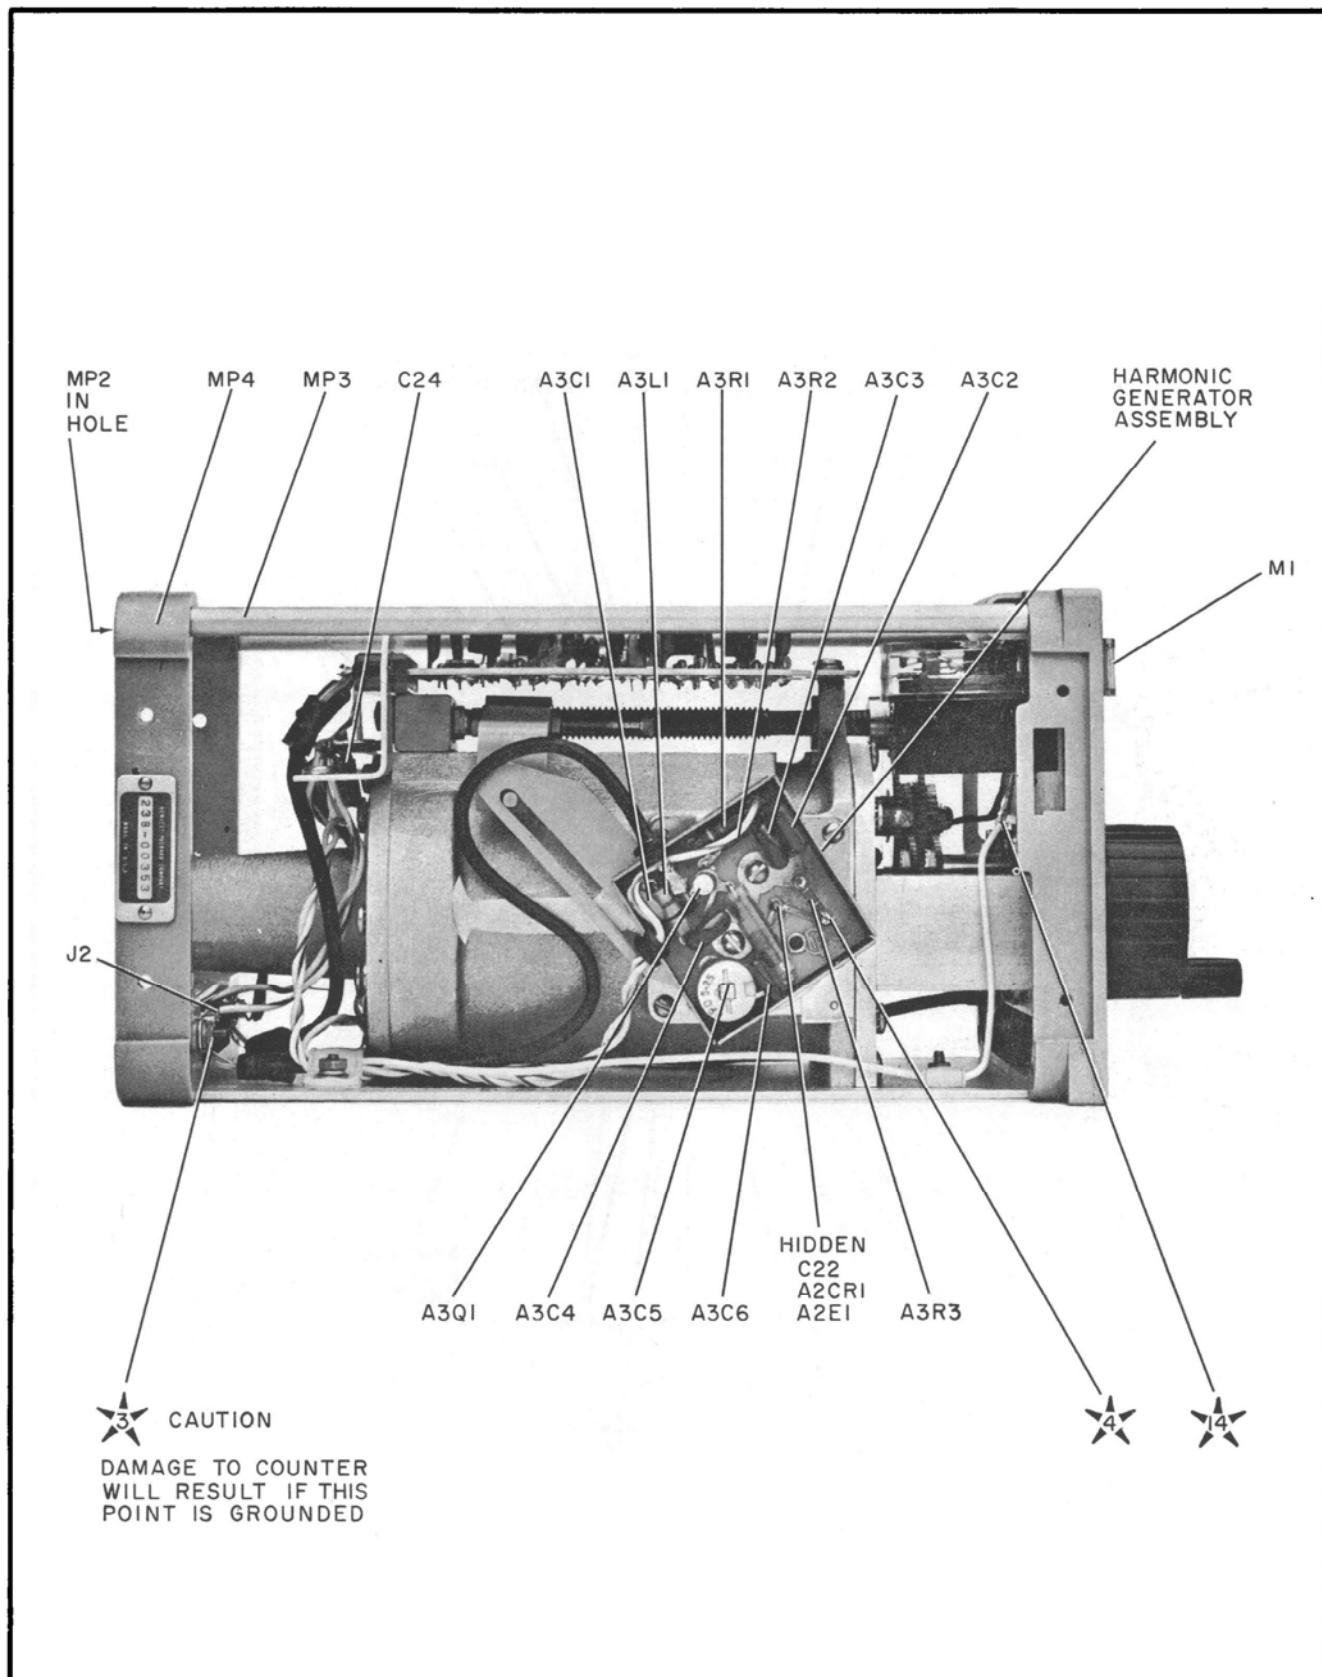


Figure IIA-5. Left Side View

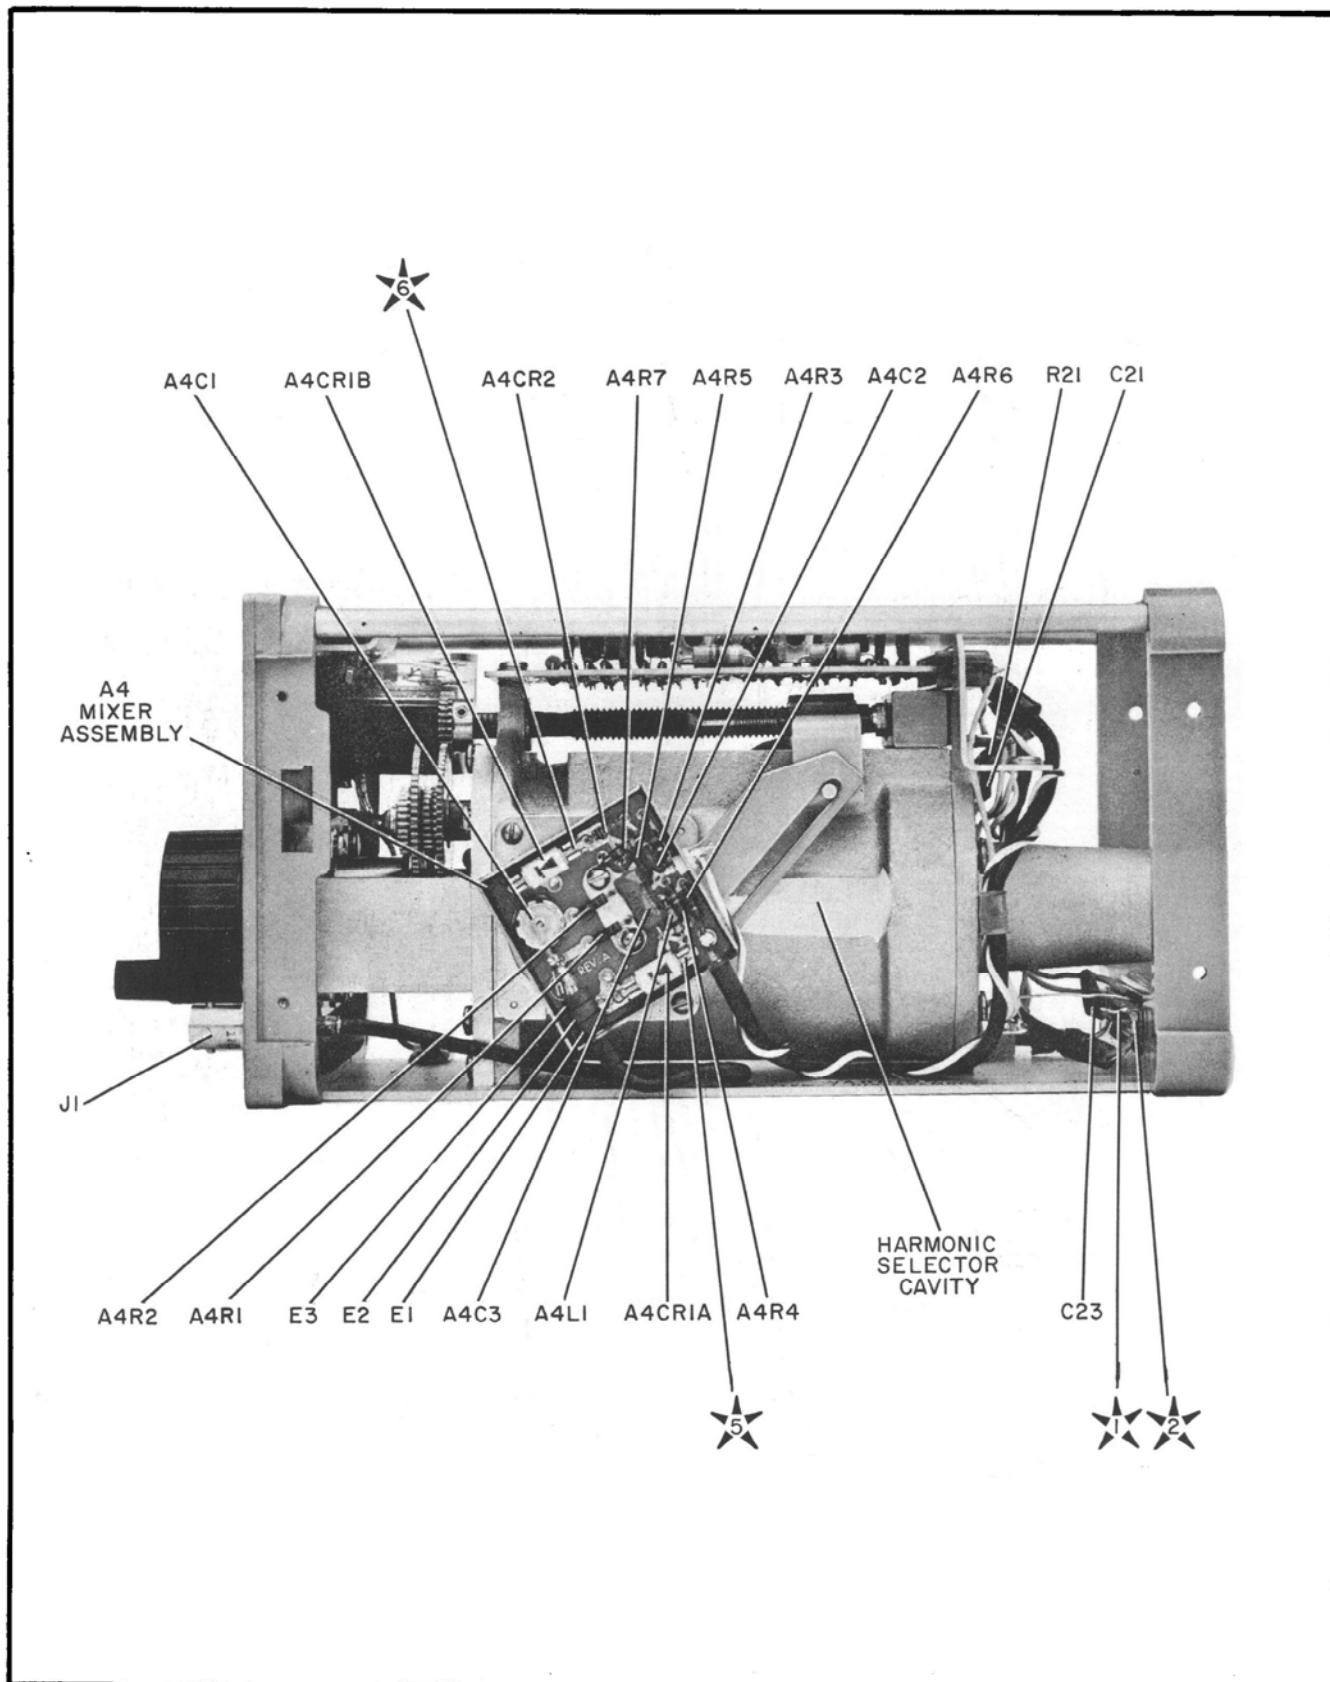


Figure IIA-6. Right Side View

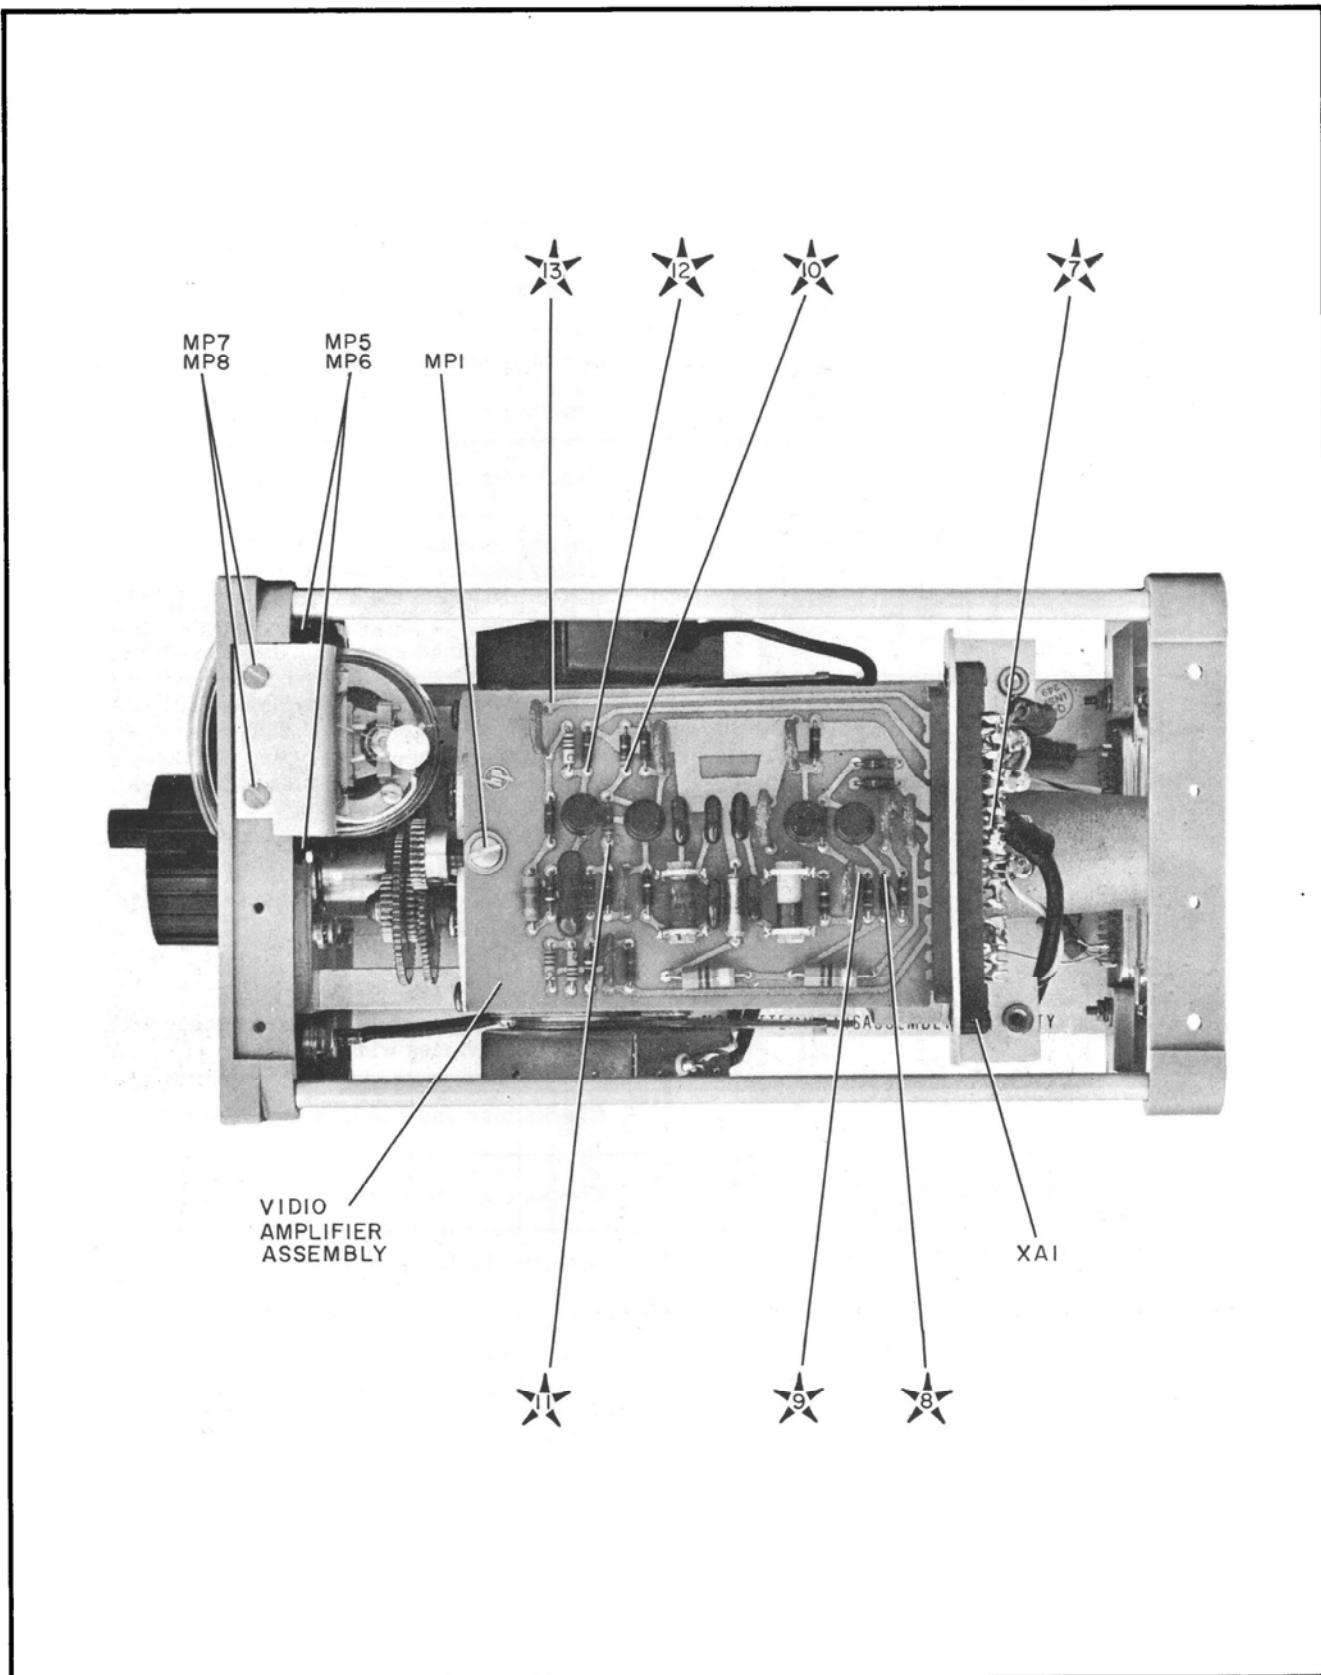


Figure IIA-7. Top View - Test Points

Table IIA-2. Troubleshooting Procedure

All voltages given are approximate and may vary from instrument to instrument because of variations in component characteristics.

TEST EQUIPMENT: \oplus Model 411A RF Millivoltmeter with \oplus 11022A (formerly 411A-21B) Pen Type Probe Tip,
 \oplus Model 412A DC VTVM

REMOVE \oplus 5253A FROM COUNTER; SELF-CHECK COUNTER	See counter manual for self-check procedure.
CONNECT \oplus 5253A TO COUNTER WITH EXTENSION CABLE, \oplus 10506A (formerly AC-16Y)	Extension cable available from \oplus ; see parts list.
\star 1 +20 VDC \star 2 -15 VDC	Checks power supplied to plug-in from counter; see counter manual for power supply adjustment procedure.
\star 3 + 6 VDC 2 VAC	Checks 10-Mc drive of harmonic generator.
\star 4 + 2 VDC 2 VAC	Checks generator diode drive. Voltages vary widely because of both the detuning effect of voltmeter probe and the variable value of A3R3. DC voltage may be either + or -, depending upon factory determined generator diode orientation.
\star 5 +100 MV DC \star 6 +100 MV DC	Voltages vary widely because of diode characteristics. Voltages are 0 VDC when diode shorted, and +20 VDC when diode open. Voltages should be approximately equal because of matched characteristics.

CONNECT SIGNAL GENERATOR TO \oplus 5253A.
SET GENERATOR TO 102 MC, CW, 100 MV.
SET COUNTER CONTROLS AND 5253A TO
MEASURE FREQUENCY OF INPUT SIGNAL.

\star 7 5 MV RMS	This voltage is total harmonic energy output of mixer and varies widely.
\star 8 -6 VDC 15 MV RMS	Checks bias and amplification of A1Q1
\star 9 -10 VDC 200 MV RMS	Checks bias and amplification of A1Q2
\star 10 -4 VDC 15 MV RMS	General check of low pass filter section
\star 11 -9 VDC 500 MV RMS	Checks bias and amplification of A1Q3
\star 12 -8.5 VDC 300 MV RMS	Checks operation of A1Q4
\star 13 0 VDC 200 MV RMS	Checks operation of limiter, A1CR1
\star 14 0 MV DC WHEN METER READS AT LEFT END OF SCALE; 50 MV DC WHEN METER READS FULL SCALE; 15 MV DC WHEN TEST POINT #13 IS 100 MV RMS, AND METER READS AT RED-GREEN BORDER.	Checks accuracy of meter circuit in relation to output to counter

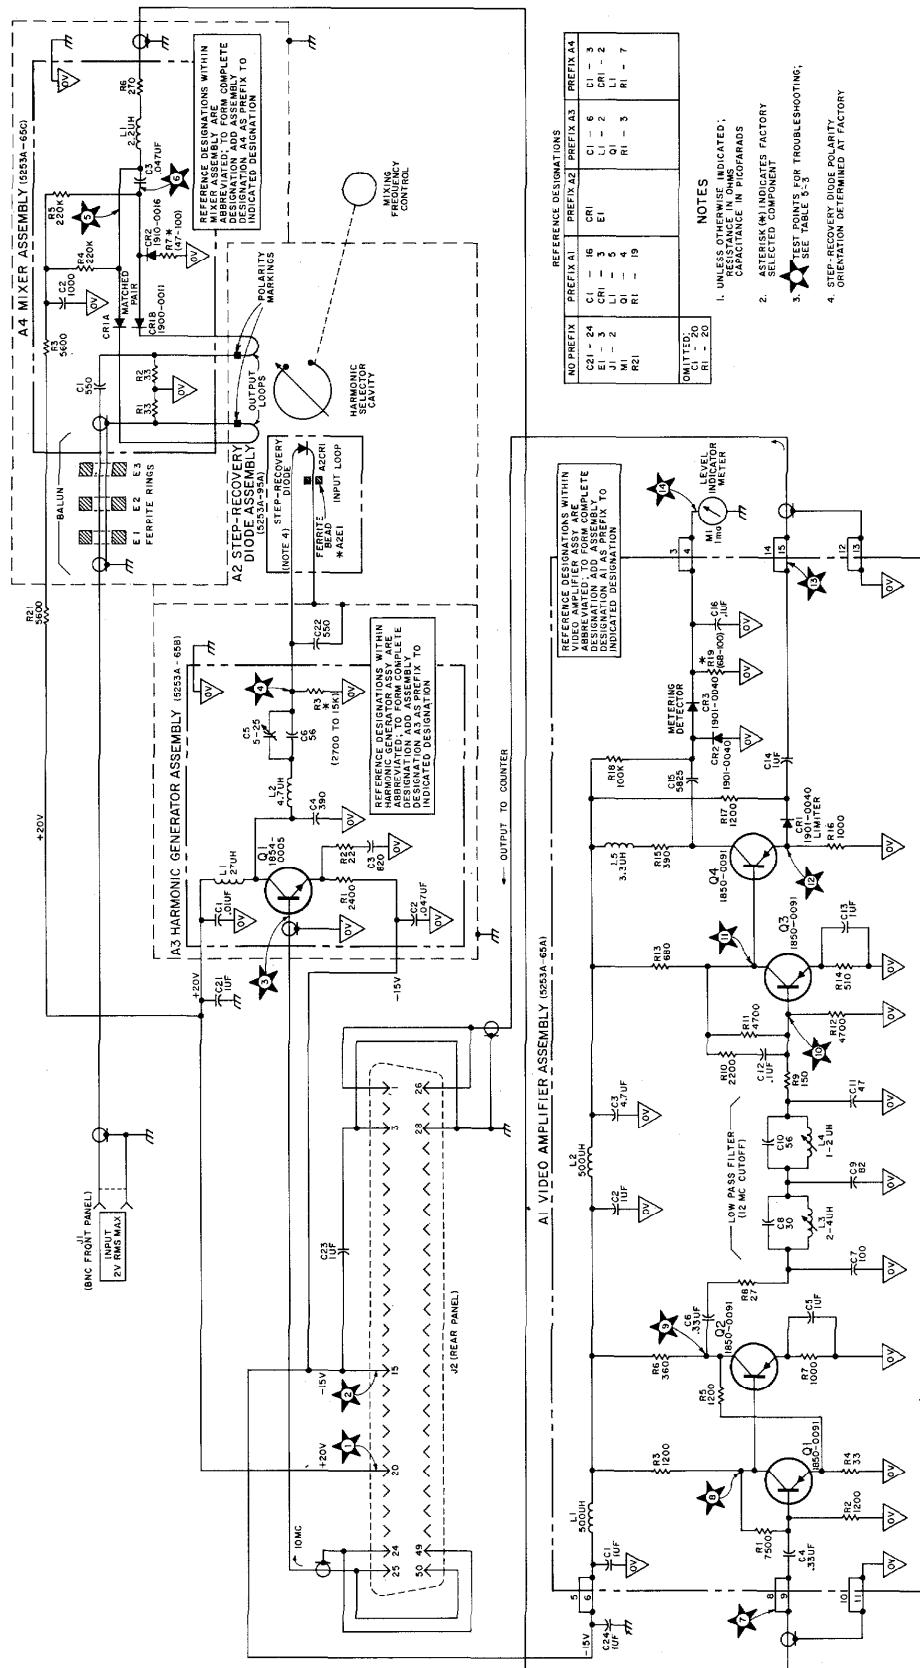


Figure IIA-8. Schematic Diagram

Table IIA-3. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	5253A-65A	ASSY:VIDEO AMPLIFIER	
A1C1	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C2	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C3	0180-0100	C:FXD ELECT TA 4.7 UF 10% 35VDCW	
A1C4	0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	
A1C5	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C6	0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	
A1C7	0140-0176	C:FXD MICA 100 PF 2% 300VDCW	
A1C8	0140-0203	C:FXD MICA 30 PF 5% 500VDCW	
A1C9	0140-0193	C:FXD MICA 82 PF 5% 300VDCW	
A1C10	0140-0191	C:FXD MICA 56 PF 5% 300VDCW	
A1C11	0140-0204	C:FXD MICA 47 PF 5% NPO 500VDCW	
A1C12	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A1C13	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C14	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C15	0140-0189	C:FXD MICA 5825 PF 2% 300VDCW	
A1C16	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A1CR1	1901-0040	DIODE:SILICON	
A1CR2	1901-0040	DIODE:SILICON	
A1CR3	1901-0040	DIODE:SILICON	
A1L1	9140-0118	COIL:500MH 5%	
A1L2	9140-0118	COIL:500 MH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02 UH	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UH	
A1L5	9140-0111	COIL:FXD RF 3.3 UH	
A1Q1	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q2	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q3	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q4	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1R1	0683-7525	R:FXD COMP 7500 OHM 5% 1/4W	
A1R2	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R3	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R4	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A1R5	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R6	0683-3615	R:FXD COMP 360 OHM 5% 1/4W	
A1R7	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R8	0684-2701	R:FXD COMP 27 OHM 10% 1/4W	
A1R9	0684-1511	R:FXD COMP 150 OHM 10% 1/4W	
A1R10	0683-2225	R:FXD COMP 2.2K OHM 5% 1/4W	
A1R11	0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	
A1R12	0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	
A1R13	0683-6815	R:FXD COMP 680 OHM 5% 1/4W	
A1R14	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R15	0683-3915	R:FXD COMP 390 OHM 5% 1/4W	
A1R16	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R17	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R18	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A1R19	0683-8205	R:FXD COMP 82 OHM 5% 1/4W FACTORY SELECTED PART; TYPICAL VALUE GIVEN	

See list of abbreviations in introduction to this section

Table IIA-3. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
A2	5253A-95A	ASSY:STEP RECOVERY DIODE NOT RECOMMENDED FOR FIELD REPLACEMENT	
A2CR1	1901-0120	DIODE:STEP RECOVERY,SPECIALLY SELECTED PART.	
A2E1		CORE:TOROID,SPECIALLY SELECTED PART.	
A3	5253A-65B	ASSY:HARMONIC GENERATOR	
A3C1	0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	
A3C2	0170-0094	C:FXD MY 0.047 UF 20% 50VDCW	
A3C3	0140-0151	C:FXD MYCA 820 PF 2% 300VDCW	
A3C4	0140-0200	C:FXD MICA 390 PF 5% 300VDCW	
A3C5	0130-0016	C:VAR CER 5-25 PF NPO	
A3C6	0140-0191	C:FXD MICA 56 PF 5% 300VDCW	
A3L1	9140-0107	COIL:FXD RF 27 UH	
A3L2	9140-0025	COIL:FXD RF 4.7 UH	
A3R1	0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	
A3R2	0683-2205	R:FXD COMP 22 OHM 5% 1/4W	
A3R3	0683-5625	R:FXD COMP 5600 OHM 5% 1/4W FACTORY SELECTED PART;TYPICAL VALUE GIVEN	
A4	5253A-65C	ASSY:MIXER DOES NOT CONTAIN A4CR1, ORDER SEPARATELY	
A4C1	0140-0069	C:FXD MICA 550 PF 10% 500VDCW	
A4C2	0150-0050	C:FXD CER 1000 PF 600VDCW	
A4C3	0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	
A4CR1	1900-0011	DIODE:SILICON 1N4168M, MATCHED PAIR	
A4CR2	1910-0016	DIODE:GERMANIUM 1 MICROSEC 60 WIV	
A4L1	9140-0142	COIL:FXD RF 2.2 UH	
A4R1	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A4R2	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A4R3	0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	
A4R4	0683-2245	R:FXD COMP 220K OHM 5% 1/4W	
A4R5	0683-2245	R:FXD COMP 220K OHM 5% 1/4W	
A4R6	0683-2715	R:FXD COMP 270 OHM 5% 1/4W	
A4R7	0683-6205	R:FXD COMP 62 OHM 5% 1/4W FACTORY SELECTED APRT;TYPICAL VALUE GIVEN	
C21	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
C22	0140-0069	C:FXD MICA 550 PF 10% 500VDCW	
C23	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
C24	0160-0227	C:FXD CER 1.0 UF 20% 25VDCW	
E1	9170-0059	CORE:TOROID	
E2	9170-0059	CORE:TOROID	
E3	9170-0059	CORE:TOROID	
J1	1250-0102	CONNECTOR:BNC	
J2	1251-0099	CONNECTOR:50-PIN MINIATURE	
R21	0684-5621	R:FXD COMP 5600 OHM 10% 1/4W	
XA1	1251-0135	CONNECTOR:15 CONTACTS	

See list of abbreviations in introduction to this section

Table IIA-4. Replaceable Parts

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
5253A-65A	ASSY:VIDEO AMPLIFIER	28480	5253A-65A	1
5253A-65B	ASSY:HARMONIC GENERATOR	28480	5253A-65B	1
5253A-65C	ASSY:MIXER	28480	5253A-65C	1
5253A-95A	ASSY:STEP RECOVERY DIODE	28480	5253A-95A	1
0130-0016	C:VAR CER 5-25 PF NPO	28480	0130-0016	1
0140-0069	C:FXD MICA 550 PF 10% 500VDCW	00853	TYPE M100 E10	2
0140-0151	C:FXD MICA 820 PF 2% 300VDCW	04062	DM15F 821G	1
0140-0176	C:FXD MICA 100 PF 2% 300VDCW	04062	DM15F 101G 300V	1
0140-0189	C:FXD MICA 5825 PF 2% 300VDCW	04062	DM20F 5825G	1
0140-0191	C:FXD MICA 56 PF 5% 300VDCW	04062	DM15E 560J 300V	2
0140-0193	C:FXD MICA 82 PF 5% 300VDCW	04062	DM15E 820J 300V	1
0140-0200	C:FXD MICA 390 PF 5% 300VDCW	04062	DM15F 391J 300V	1
0140-0203	C:FXD MICA 30 PF 5% 500VDCW	04062	DM15E 300J 500V	1
0140-0204	C:FXD MICA 47 PF 5% NPO 500VDCW	04062	DM15E 470J	1
0150-0050	C:FXD CER 1000 PF 600VDCW	18486	TYPE E	1
0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	91418	TA	1
0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50A	2
0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13	8
0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	56289	5C10	2
0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	56289	192P47392	1
0170-0094	C:FXD MY 0.047 UF 20% 50VDCW	84411	TYPE 602	1
0180-0100	C:FXD ELECT TA 4.7 UF 10% 35VDCW	56289	150D475X9035B2	1
0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025	2
0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	01121	CB 1225	4
0683-2205	R:FXD COMP 22 OHM 5% 1/4W	01121	CB 2205	1
0683-2225	R:FXD COMP 2.2K OHM 5% 1/4W	01121	CB 2225	1
0683-2245	R:FXD COMP 220K OHM 5% 1/4W	01121	CB 2245	2
0683-2715	R:FXD COMP 270 OHM 5% 1/4W	01121	CB 2715	1
0683-3305	R:FXD COMP 33 OHM 5% 1/4W	01121	CB 3305	3
0683-3615	R:FXD COMP 360 OHM 5% 1/4W	01121	CB 3615	1
0683-3915	R:FXD COMP 390 OHM 5% 1/4W	01121	CB 3915	1
0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	01121	CB 4725	2
0683-5115	R:FXD COMP 510 OHM 5% 1/4W	01121	CB 5115	1
0683-5625	R:FXD COMP 5600 OHM 5% 1/4W	01121	CB 5625	1
0683-6205	R:FXD COMP 62 OHM 5% 1/4W	01121	CB 6205	1
0683-6815	R:FXD COMP 680 OHM 5% 1/4W	01121	CB 6815	1
0683-7525	R:FXD COMP 7500 OHM 5% 1/4W	01121	CB 7525	1
0683-8205	R:FXD COMP 82 OHM 5% 1/4W	01121	CB 8205	1
0684-1041	R:FXD COMP 100K OHM 10% 1/4W	01121	CB 1041	1
0684-1511	R:FXD COMP 150 OHM 10% 1/4W	01121	CB 1511	1
0684-2701	R:FXD COMP 27 OHM 10% 1/4W	01121	CB 2701	1
0684-5621	R:FXD COMP 5600 OHM 10% 1/4W	01121	CB 5621	2
0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	01121	EB 2425	1
1250-0102	CONNECTOR:BNC	91737	1250-0102	1
1251-0099	CONNECTOR:50-PIN MINIATURE	02660	57-10500	1
1251-0135	CONNECTOR:15-CONTACTS	95354	SD 615UR	1
1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	87216	2N2048	4
1900-0011	DIODE:SiLiCON 1N4168M MATCHED PAIR	93332	1N4168M	1
1901-0040	DIODE:SiLiCON	28480	1901-0040	3
1910-0016	DIODE:GERMANIUM 1 MICROSEC 60 WIV	28480	1910-0016	1
9140-0025	COIL:FXD RF 4.7 UH	28480	9140-0025	1
9140-0107	COIL:FXD RF 27 UH	28480	9140-0107	1
9140-0111	COIL:FXD RF 3.3 UH	28480	9140-0111	1
9140-0118	COIL:500 MM 5%	99800	2500-14	2
9140-0125	COIL:VAR 0.9-1.9 UH	28480	9140-0125	1
9140-0126	COIL:VAR 1.76-4.02 UH	28480	9140-0126	1
9140-0142	COIL:FXD RF 2.2 UH	28480	9140-0142	1
9170-0059	CORE:TOROID	02114	396T125-102	3

See list of abbreviations in introduction to this section

HEWLETT - PACKARD SALES AND SERVICE OFFICES
in the United States and Canada

ALABAMA

Huntsville, 35802
 2003 Byrd Spring Rd. S.W.
 (205) 881-4591
 TWX: 510-579-2204

GEORGIA

Atlanta, 30305
 3110 Maple Drive, N.E.
 (404) 233-1141
 TWX: 810-751-3283

NEW JERSEY

Eatontown
 (201) 542-0852
Englewood, 07631
 391 Grand Avenue
 (201) 567-3933

TEXAS

Dallas, 75209
 P.O. Box 7166, 3605 Inwood Rd.
 (214) 357-1881 and 332-6667
 TWX: 910-861-4081
Houston, 77027
 P.O. Box 22813, 4242 Richmond Ave
 (713) 667-2407
 TWX: 713-571-1353

ALASKA

Bellevue, Wash. 98004
 11656 N.E. 8th Street
 (206) 454-3971
 TWX: 910-443-2303

HAWAII

North Hollywood, Calif. 91604
 3939 Lankershim Blvd.
 (213) 877-1282 and 766-3811
 TWX: 910-499-2170

NEW MEXICO

Albuquerque, 87108
 6501 Lomas Blvd., N.E.
 (505) 255-5586
 TWX: 910-989-1655

UTAH

Salt Lake City, 84115
 1482 Major St.
 (801) 486-8166
 TWX: 801-521-2604

ARIZONA

Scottsdale, 85251
 3009 No. Scottsdale Rd.
 (602) 945-7601
 TWX: 602-949-0111

ILLINOIS

Skokie, 60078
 5500 Howard Street
 (312) 677-0400
 TWX: 910-223-3613

NEW YORK

New York, 10021
 236 East 75th Street
 (212) 879-2023
 TWX: 710-581-4376
Rochester, 14623
 39 Sagingaw Drive
 (716) 473-9500
 TWX: 510-253-5981

VIRGINIA

Richmond, 23230
 2112 Spencer Road
 (703) 282-5451
 TWX: 710-956-0157

CALIFORNIA

North Hollywood, 91604
 3939 Lankershim Blvd.
 (213) 877-1282 and 766-3811
 TWX: 910-499-2170

INDIANA

Indianapolis, 46205
 3919 Meadows Dr.
 (317) 546-4891
 TWX: 317-635-4300

NEW YORK

WASHINGTON

Bellevue, 98004
 11656 N.E. 8th St.
 (206) 454-3971
 TWX: 910-443-2303

Sacramento, 95821
 2591 Carlsbad Ave.
 (916) 482-1463
 TWX: 916-444-8683

MARYLAND

Baltimore, 21207
 6660 Security Blvd.
 (301) 944-5400
Rockville, 20852
 12303 Twinbrook Pkwy.
 (301) 427-7560
 TWX: 710-828-9684

NORTH CAROLINA

High Point, 27262
 1923 N. Main Street
 (919) 882-6873
 TWX: 510-926-1516

GOVERNMENT CONTRACTING OFFICES

Middletown, Pa. 17057
 Hewlett-Packard
 Contract Marketing Division
 Olmsted Plaza
 (717) 944-7401
 TWX: 717-760-4816
West Conshohocken, Pa. 19428
 Hewlett-Packard
 Contract Marketing Division
 144 Elizabeth Street
 (215) 753-1811
 TWX: 215-820-3847

COLORADO

Englewood, 80110
 7965 East Prentice
 (303) 771-3455
 TWX: 303-771-3056

MASSACHUSETTS

Burlington, 01804
 Middlesex Turnpike
 (617) 272-9000
 TWX: 710-332-0382

OHIO

Cleveland, 44129
 5579 Pearl Road
 (216) 884-9209
 TWX: 216-888-0715

CANADA

Montreal, Quebec
 Hewlett-Packard (Canada) Ltd.
 8270 Mayrand Street
 (514) 735-2273
 TWX: 610-421-3484

CONNECTICUT

Middletown, 06458
 589 Saybrook Rd.
 (203) 346-6611
 TWX: 710-428-2036

MICHIGAN

Southfield, 48076
 24315 Northwestern Hwy.
 (313) 353-9100
 TWX: 313-357-4425

OKLAHOMA

Oklahoma City
 (405) 235-7062

Toronto, Ontario
 Hewlett-Packard (Canada) Ltd.
 1415 Lawrence Avenue West
 (416) 249-9196
 TWX: 610-492-2382

FLORIDA

Miami, 33125
 2907 Northwest 7th St.
 (305) 635-6461
Orlando, 32803
 621 Commonwealth Ave.
 (305) 425-5541
 TWX: 305-275-1234
St. Petersburg, 33708
 410-150th Ave., Madeira Beach
 (813) 391-0211
 TWX: 813-391-0666

MISSOURI

Kansas City, 64131
 7916 Paseo Street
 (816) 444-9494
 TWX: 816-556-2423

PENNSYLVANIA

Camp Hill
 (717) 737-6791
West Conshohocken, 19428
 144 Elizabeth Street
 (215) 248-1600 and 828-6200
 TWX: 215-828-3847
Monroeville, 15146
 2545 Moss Side Blvd.
 (412) 271-5227
 TWX: 710-797-3650

Vancouver, B.C.
 Hewlett-Packard (Canada) Ltd.
 2184 W. Broadway
 (604) 738-7520
 TWX: 610-922-5059

HEWLETT - PACKARD INTERNATIONAL OFFICES

Electronic Instrument Sales and Service

ARGENTINA

Mauricio A. Saurez
Telecomunicaciones
Carlos Calvo 224, Buenos Aires
Tel: 30-6312

AUSTRALIA

Sample Electronics (Vic.) Pty. Ltd.
9-11 Cremorne Street
Richmond E. I., Victoria
Tel: 42-4757 (3 lines)
Sample Electronics (N.S.W.) Pty. Ltd.
4 Grose Street, Glebe, N.S.W.
Tel: 69-6338 (6 lines)

AUSTRIA

UNILABOR H.m.b.H.
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33, Vienna IX/71
Tel: 42 61 81

BELGIUM

Hewlett-Packard Benelux
20-24 Rue de l'Hopital, Brusseis 1
Tel: 11.22.20

BRAZIL

Ciental Importacao e Comercio Ltda.
R. Des Eliseu Guilherme, 62
Sao Paulo 6
Tel: 32-4332

CHILE

Hector Calcagni
Cassila 13942, Santiago
Tel: 6.42.26

COLOMBIA

Instrumentacion Henrik A. Langebeck
& Cia. Ltda.
Apartado Aereo 6287
Bogota 1, D.E.
Tel: 45-78-06
Cable: AARIS - Bogota

DENMARK

Tage Olsen A/S
Ronneegade 1, Copenhagen 0
Tel: 29.48.00

FINLAND

INTO O/Y
P.O. Box 153
11 Meritullinkatu, Helsinki
Tel: 6.11.33

FRANCE

Hewlett-Packard France
150 Blvd. Massena, Paris 13e
Tel: 707.97.19

GERMANY

Hewlett-Packard VgmbH
Steindamm 35, Hamburg 1
Tel: 24.05.51

Hewlett-Packard VgmbH
Kurhessenstrasse 95

Frankfurt a. Main

Tel: 52.00.36

Hewlett-Packard VgmbH

Regnifriedstrasse 13

Munich 9

Tel: 49.51.21/2

Hewlett-Packard VgmbH

Technisches Büro

Herrenbergerstrasse 110

703 Boblingen, Wurttemberg

Tel: 6971

Hewlett-Packard VgmbH

Lietzenburger Strasse 30

1000 Berlin 30

Tel: 24 92 71

GREECE

K. Karayannis
Klaftmonos Square, Athens 124
Tel: 230.301

INDIA

The Scientific Instrument Company, Ltd.
6, Tej Bahadur Sapru Road, Allahabad 1
Tel: 2451
The Scientific Instrument Company, Ltd.
240, Dr. Dadabhai Naoroji Rd., Bombay 1
Tel: 26-2642
The Scientific Instrument Company, Ltd.
11, Esplanade East, Calcutta 1
Tel: 23-4129
The Scientific Instrument Company, Ltd.
30, Mount Road, Madras 2
Tel: 86339
The Scientific Instrument Company, Ltd.
B-7, Ajmeri Gate Extn., New Delhi 1
Tel: 271053

IRAN

Telecom Ltd.
P.O. Box 1812, Tehran
Tel: 43850

ISRAEL

Electronics & Engineering Ltd.
16 Kremenetski St., Tel Aviv
Tel: 35021-23

ITALY

Hewlett-Packard Italiana S.p.A.
Viale Lunigiana 46, Milan
Tel: 69.15.84/5/6
Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi, 25, Roma-Eur
Tel: 59.12.544/5

JAPAN

Yokogawa-Hewlett-Packard Ltd.
2270 Ishikawa-cho
Hachioji, Tokyo
Tel: Hachioji 0426-3-1231 (19 lines)
Yokogawa-Hewlett-Packard Ltd.
No. 3, 6-chome, Aoyama-Kitamachi
Akasaka, Minato-ku, Tokyo
Tel: 403-6511
Yokogawa-Hewlett-Packard Ltd.
No. 8, Umeda, Kita-ku, Osaka
Tel: 313-0091
Yokogawa-Hewlett-Packard Ltd.
No. 4, 3-chome, Himeikedori,
Chigusa-ku, Nagoya
Tel: 751-8545

KOREA

American Trading Company, Korea, Ltd.
112-35 Sokong-Dong, Jung-ku
Seoul P.O. Box 1103, Seoul
Tel: 3-7049, 3-7613

NETHERLANDS

Hewlett-Packard Benelux N.V.
23 Burg Roellstraat, Amsterdam W.
Tel: (020) 13.28.98 and 13.54.99

NEW ZEALAND

Sample Electronics (N. Z.) Ltd.
8 Matipo Street
Onehunga S. E. 5, Auckland
Tel: 565-361

NORWAY

Morgenstierne & Co. A/S
Ingeniorfirma
6 Wessels Gate, Oslo
Tel: 20 16 35

PANAMA

Electronico Balboa, S.A.
P.O. Box 4929
Panama City 5, Panama
Tel: 3-0833

PERU

Fernando Ezeta B.
Casilla 3061
Lima
Tel: 78745

PORTUGAL

TELECTRA
Rua Rodrigo da Fonseca 103
P.O. Box 2531, Lisbon 1
Tel: 68 60 72 and 68 60 73 and 68 60 74

PUERTO RICO & VIRGIN ISLANDS

San Juan Electronics, Inc.
150 Ponce de Leon, Stop 3
P.O. Box 5167
Pta. de Tierra Sta., San Juan 00906
Tel: 725-3342, 724-4406

SPAIN

ATAIO, Ingenieros
Enrique Larreta 12, Madrid 6
Tel: 235.43.44 and 235.43.45

SOUTH AFRICA

F. H. Flanter & Co. (Pty.), Ltd.
Rosella House
Buitenkloof Street, Cape Town
Tel: 3-3817

SWEDEN

H-P Instrument AB
Centralvagen 28, Solna, Centrum
Tel: 83.08.30
H-P Instrument AB
Idunagatan 28A
Goteborg
Tel: 27 68 00 and 27 68 01

SWITZERLAND

Max Paul Frey
Wankdorfstrasse 66, Berne
Tel: (031) 42.00.78

TAIWAN (FORMOSA)

Hwa Sheng Electronic Co., Ltd.
21 Nanking West Road, Taipei
Tel: 4 6076, 4 5936

TURKEY

TELEKOM Engineering Bureau
P.O. Box 376—Galata, Istanbul
Tel: 49.40.40

UNITED KINGDOM

Hewlett-Packard Ltd.
Dallas Rd., Bedford, England
Tel: Bedford 68052

VENEZUELA

Citec, C. A.
Edif. Arisan-Of #4
Avda. Francisco de Miranda-Chacaito
Apartado del Este 10.837, Caracas
Tel: 71.88.05

YUGOSLAVIA

Berlam S.A.
83 Avenue des Mimosas
Brussels 15, Belgium
Tel: 35.29.58

ELSEWHERE

Hewlett-Packard
Overseas Sales Department
1501 Page Mill Road
Palo Alto, California 94304, U.S.A.
Telephone: (415) 326-7000
TWX: 910-373-1267
Telex: 033811 Cable: HEWPACK

For Sales and Service Assistance in Areas Not Listed Contact:

IN EUROPE

Hewlett-Packard, S. A.
54 Route des Acacias
Geneva, Switzerland
Telephone: (022) 42.81.50
Telex: 2.24.86
Cable: HEWPACKSA

IN LATIN AMERICA

Hewlett-Packard Inter-Americanas
1501 Page Mill Road
Palo Alto, California 94304, U.S.A.
Telephone: (415) 326-7000
TWX: 910-373-1267
Telex: 033811 Cable: HEWPACK



05253-9006

PRINTED IN U.S.A.