



HEWLETT
PACKARD

**MULTIPLE OUTPUT LINEAR
SYSTEM DC POWER SUPPLIES
HP MODELS 6621A, 6622A, 6623A, 6624A, and 6627A**

OPERATING MANUAL FOR

HP MODEL 6621A, SERIALS 2751A-00561 AND ABOVE
HP MODEL 6622A, SERIALS 2750A-00801 AND ABOVE
HP MODEL 6623A, SERIALS 2751A-00631 AND ABOVE
HP MODEL 6624A, SERIALS 2750A-01621 AND ABOVE
HP MODEL 6627A, SERIALS 2751A-00101 AND ABOVE

***For instruments with higher Serial Numbers.
a change page may be included.**

UNITED STATES

(Cont'd.)

Hawaii

Hewlett-Packard Co. 39550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-9200
A.C.E.M.

Michigan

Hewlett-Packard Co. 2025 W. Larpenteur Avenue
St. Paul, MN 55113
Tel: (612) 644-1100
A.C.C.M.E.M.

Illinois

Hewlett-Packard Co. 2205 E. Empire Street
P. O. Box 1607
BLOOMINGTON, IL 61702-1607
Tel: (309) 662-9411
C.E.

California

Hewlett-Packard Co. 5201 Toliver Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 256-9800
A.C.C.M.E.M.

Indiana

Hewlett-Packard Co. 11911 N. Mendota Street
CARMEL, IN 46032
Tel: (317) 844-1100
A.C.C.M.E.M.

New Jersey

Hewlett-Packard Co. 117 E. Ludwig Rd., Suite 108
FT. WAYNE, IN 46825
Tel: (219) 482-4283
C.E.

Iowa

Hewlett-Packard Co. 20 New England Av., West
PISCATAWAY, NJ 08854
Tel: (201) 562-6100
A.C.C.M.E.

New Mexico

Hewlett-Packard Co. 7801 Jefferson N.E.
ALBUQUERQUE, NM 87109
Tel: (505) 823-6100
C.E.M.

Kansas

Hewlett-Packard Co. 3525 N.W. 56th Street
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499
C.E.M.

Kentucky

Hewlett-Packard Co. 9600 Main Street
CLARENCE, NY 14031
Tel: (716) 759-8621
C.E.M.

Louisiana

Hewlett-Packard Co. 1550 James Drive East
ST. ROSE, LA 70087
P. O. Box 1449
KENNER, LA 70063
Tel: (504) 467-4100
A.C.E.M.P.

Maryland

Hewlett-Packard Co. 3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-862-1943
A.C.C.M.E.M.

Massachusetts

Hewlett-Packard Co. 200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
A.C.C.M.E.M.

North Carolina

Hewlett-Packard Co. 7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A.C.C.M.E.M.

Tennessee

Hewlett-Packard Co. 2750 Monroe Blvd.
VALLEY Forge, PA 19482
Tel: (215) 666-9000
A.C.C.M.E.M.

Pennsylvania

Hewlett-Packard Co. 111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A.C.E.M.

Virginia

Hewlett-Packard Co. 3959 Electric Rd.
ROANOKE, VA 24018
Tel: (703) 774-3444
C.E.P.

Washington

Hewlett-Packard Co. 15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A.C.C.M.E.M.

West Virginia

Hewlett-Packard Co. 4305 Cox Road
GLEN ALLEN, VA 23060
Tel: (804) 747-7750
A.C.E.M.P.

Wisconsin

Hewlett-Packard Co. 275 N. Corporate Drive
BROOKFIELD, WI 53005
Tel: (414) 794-8800
A.C.E.M.

Uruguay

Hewlett-Packard Co. Casilla de Correo 370
MONTEVIDEO
Tel: 80-3805
Telex: Public Booth 901
A.C.E.M.

VENEZUELA

Hewlett-Packard de Venezuela C.A.
3A Transversal Los Rucos Norte
Edificio Sagre 2 B 3
CARACAS 1050
Tel: (582) 239-4133
Telex: 251046 HEWPACX
A.C.C.M.E.M.P.

Texas

Hewlett-Packard Co. 1826-F Kramer Lane
AUSTIN, TX 78758
Tel: (512) 835-6771
C.E.P.

Arizona

Hewlett-Packard Co. 5700 Cromo Drive
EL PASO, TX 79912
Tel: (915) 833-4400
C.E.M.P.

Colorado

Hewlett-Packard Co. 930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (972) 583-1700
A.C.E.M.P.

Florida

Hewlett-Packard Co. 9080 Springboro Pike
MAINTSBURG, OH 45342
Tel: (513) 433-2223
A.C.C.M.E.M.

Ohio

Hewlett-Packard Co. 2717 S. Arlington Rd.
AKRON, OH 44312
Tel: (216) 644-2270
C.E.

Missouri

Hewlett-Packard Co. 13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A.C.E.M.

Nebraska

Hewlett-Packard Co. 11626 Nicholas Street
OMAHA, NE 68154
Tel: (402) 493-0300
A.C.C.M.E.M.

North Carolina

Hewlett-Packard Co. 15885 Sprague Rd.
CLEVELAND, OH 44136
Tel: (216) 243-7300
A.C.C.M.E.M.

Oklahoma

Hewlett-Packard Co. 3525 N.W. 56th Street
NEW MEXICO, NM 87109
Tel: (505) 823-6100
C.E.M.

Kentucky

Hewlett-Packard Co. 305 N. Hurstbourne Lane
LOUISVILLE, KY 40222
Tel: (502) 226-0100
A.C.E.M.

Louisiana

Hewlett-Packard Co. 160 James Drive East
ST. ROSE, LA 70087
P. O. Box 1449
KENNER, LA 70063
Tel: (504) 467-4100
A.C.E.M.P.

Maryland

Hewlett-Packard Co. 200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
A.C.C.M.E.M.

Massachusetts

Hewlett-Packard Co. 7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A.C.C.M.E.M.

Tennessee

Hewlett-Packard Co. 2750 Monroe Blvd.
VALLEY Forge, PA 19482
Tel: (215) 666-9000
A.C.C.M.E.M.

Pennsylvania

Hewlett-Packard Co. 111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A.C.E.M.

Virginia

Hewlett-Packard Co. 3959 Electric Rd.
ROANOKE, VA 24018
Tel: (703) 774-3444
C.E.P.

Washington

Hewlett-Packard Co. 15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A.C.C.M.E.M.

West Virginia

Hewlett-Packard Co. 4305 Cox Road
GLEN ALLEN, VA 23060
Tel: (804) 747-7750
A.C.E.M.P.

Wisconsin

Hewlett-Packard Co. 275 N. Corporate Drive
BROOKFIELD, WI 53005
Tel: (414) 794-8800
A.C.E.M.

Uruguay

Hewlett-Packard Co. Casilla de Correo 370
MONTEVIDEO
Tel: 80-3805
Telex: Public Booth 901
A.C.E.M.

Zimbabwe

Field Technical Sales (Private) Ltd
45, Kelvin Road North
P. O. Box 3458
SALISBURY
Tel: 705 231
Telex: 4-122 RH
E.P.

Zambia

R.U. Tibury (Zambia) Ltd
P. O. Box 32792
LUSAKA
Tel: 215590
Telex: 40128
E

Zaire

Hewlett-Packard Co. 1020 Central Pkwy. South
SAN ANTONIO, TX 78222
Tel: (512) 494-9336
A.C.E.M.P.

Utah

Hewlett-Packard Co. 3530 W. 2100 South Street
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A.C.E.M.

Virginia

Hewlett-Packard Co. 840 Greenbrier Circle
CHESAPEAKE, VA 23320
Tel: (804) 424-7105
C.E.M.

Pennsylvania

Hewlett-Packard Co. 111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A.C.E.M.

North Carolina

Hewlett-Packard Co. 2750 Monroe Blvd.
VALLEY Forge, PA 19482
Tel: (215) 666-9000
A.C.C.M.E.M.

Tennessee

Hewlett-Packard Co. 275 N. Corporate Drive
BROOKFIELD, WI 53005
Tel: (414) 794-8800
A.C.E.M.

West Virginia

Hewlett-Packard Co. 4305 Cox Road
GLEN ALLEN, VA 23060
Tel: (804) 747-7750
A.C.E.M.P.

Wisconsin

Hewlett-Packard Co. 275 N. Corporate Drive
BROOKFIELD, WI 53005
Tel: (414) 794-8800
A.C.E.M.

Uruguay

Hewlett-Packard Co. Casilla de Correo 370
MONTEVIDEO
Tel: 80-3805
Telex: Public Booth 901
A.C.E.M.

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

DO NOT EXCEED INPUT RATINGS.

This instrument may be equipped with a line filter to reduce electromagnetic interference and must be connected to a properly grounded receptacle to minimize electric shock hazard. Operation at line voltages or frequencies in excess of those stated on the data plate may cause leakage currents in excess of 5.0 mA peak.

 
SAFETY SYMBOLS.

Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual (refer to Table of Contents).

Indicates hazardous voltages.



Indicate earth (ground) terminal.



FUSES

Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short circuited fuseholders. To do so could cause a shock or fire hazard.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes.

KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified service personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power, discharge circuits and remove external voltage sources before touching components.

DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

CAUTION

WARNING

The CAUTION sign denotes a hazard. It calls attention to an operating procedure, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

The WARNING sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

Instruments which appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel.

WHAT THIS MANUAL CONTAINS

This is the Operating manual for the HP 6621A through 6624A and 6627A Series of Multiple Output Linear System Power Supplies. It contains information relating to the installation, operation, and programming of these supplies as outlined below. Maintenance and troubleshooting instructions are given in a separate Service Manual (HP Part No. 5957-6379).

Section I – General Information

Section I contains a general description of the power supplies as well as instrument specifications and information concerning options and accessories.

Section II – Installation Procedures

Section II contains information to prepare the supply for use. Included in this section are power requirements, line voltage conversion, and HP-IB interface connections.

Section III – Getting Started

Section III contains a brief description of the supply's front panel controls and indicators and describes how to turn on the supply and to check its operation. An introduction to remote operation over the HP-IB is also given to help a first time user get started quickly.

Section IV – Output Connections and Operating Information

Section IV contains information about making connections to the supply's output terminals. General operating information is also provided.

Section V – Remote Operation

Section V contains all of the information required to operate the supply remotely via an HP-IB computer. All of the commands that can be used to program the supplies are described.

Section VI – Local Operation

Section VI contains instructions on using all of the front panel controls and indicators.

Appendix A – Calibration Procedures

Appendix A contains programming steps and procedures that are required to calibrate your power supply. It is recommended that the power supply be calibrated yearly.

Appendix B – Programming with the Series 200 Computer

Appendix B contains Series 200/300 Computer programming examples (in HP extended BASIC language) for your Power Supply's most frequently used functions.

Appendix C – Command Summary

Appendix C contains an alphabetical listing of all commands that can be sent to a supply.

Appendix D – Error Messages

Appendix D contains a listing and brief explanation of all error codes and messages for all programming and hardware errors.

CONTENTS

SECTION I GENERAL INFORMATION

1-1	INTRODUCTION	1-1
1-2	SAFETY CONSIDERATIONS	1-1
1-3	INSTRUMENT AND MANUAL IDENTIFICATION	1-1
1-4	OPTIONS	1-1
1-5	ACCESSORIES	1-1
1-6	DESCRIPTION	1-1
1-7	BASIC OPERATION	1-2
1-8	HP-IB Board	1-3
1-9	Output Boards	1-3
1-10	SPECIFICATIONS	1-4
1-11	Qualifying Conditions	1-4
1-12	Definitions	1-4

SECTION II INSTALLATION

2-1	INTRODUCTION	2-1
2-2	INITIAL INSPECTION	2-1
2-3	LOCATION AND COOLING	2-1
2-4	INPUT POWER REQUIREMENTS	2-2
2-5	LINE FUSE	2-2
2-6	POWER CORD	2-3
2-7	LINE VOLTAGE CONVERSION	2-3
2-8	HP-IB INTERFACE CONNECTION	2-4

SECTION III GETTING STARTED

3-1	INTRODUCTION	3-1
3-2	FRONT PANEL CONTROLS AND INDICATORS	3-1
3-3	TURNING ON YOUR SUPPLY	3-4
3-4	Normal Self Test Indications	3-4
3-5	Self Test Errors	3-5
3-6	CHECKING OUT YOUR SUPPLY USING LOCAL CONTROL	3-5
3-7	Voltage Test	3-5
3-8	Overvoltage Test	3-5
3-9	Current Test	3-6
3-10	INTRODUCTION TO REMOTE OPERATION	3-6
3-11	Enter/Output Statements	3-6
3-12	Reading the HP-IB Address	3-6
3-13	Changing the HP-IB Address	3-7
3-14	Sending a Remote Command	3-7
3-15	Getting Data from the Supply	3-7
3-16	Often Used Commands	3-7
3-22	Returning the Supply to Local Mode	3-8

SECTION IV OUTPUT CONNECTIONS AND OPERATING INFORMATION

4-1	INTRODUCTION	4-1
4-2	OUTPUT RANGES	4-1
4-3	Operating Quadrants	4-1
4-4	Range Selection	4-2
4-5	PROTECTION FEATURES	4-2
4-6	CONNECTING THE LOAD	4-5
4-7	Wire Size Selection	4-5
4-8	Multiple Loads	4-6
4-9	Positive and Negative Voltages	4-6
4-10	REMOTE VOLTAGE SENSING	4-6
4-11	Remote Sense Connections	4-7
4-12	Output Noise Considerations	4-7
4-13	Programming Response Time with an Output Capacitor	4-8
4-14	Open Sense Leads	4-8
4-15	OVERVOLTAGE TRIGGER CONNECTIONS	4-8
4-16	External Trigger Circuit	4-8
4-17	POWER SUPPLY PROTECTION CONSIDERATIONS	4-9
4-18	Battery Charging	4-9
4-19	Capacitive Load Limitation	4-9
4-20	PARALLEL OPERATION	4-9
4-21	CV Operation	4-9
4-22	CC Operation	4-10
4-23	Remote Sensing	4-10
4-24	Specifications for Parallel Operation	4-11
4-25	SERIES OPERATION	4-11
4-26	CV Operation	4-11
4-27	CC Operation	4-11
4-28	Remote Sensing	4-12
4-29	Specifications for Series Operation	4-12

SECTION V REMOTE OPERATION

5-1	INTRODUCTION	5-1
5-2	HP-IB OPERATION	5-1
5-3	Interface Functions	5-1
5-9	HP-IB Address Selection	5-2
5-10	Power-On Service Request (PON)	5-2
5-11	PROGRAMMING SYNTAX	5-2
5-12	Numeric Data	5-3
5-13	Order of Execution	5-3
5-14	Terminators	5-7
5-15	INITIAL CONDITIONS	5-7
5-16	POWER SUPPLY COMMANDS	5-7
5-17	Voltage Programming	5-7

SALES & SUPPORT OFFICES

Arranged alphabetically by country

COLOMBIA

Instrumentación
H.A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1486
Telex: 44400 INST CO
Cable: AARIS Bogota
CM,E,M

Carvajal, S.A.
Calle 29 Norte No. 6A-40
Apartado Aereo 26, CALI
Tel: 368-1111
Telex: 55650
C,E,P

CONGO

Seric-Congo
B.P. 2105, BRAZZAVILLE
Tel: 815034
Telex: 5262

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159, SAN JOSE
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGUR CR
CM,E,M

CYPRUS

Telerexa Ltd.
P.O. Box 1152
7 A Afroditis Avenue, NICOSIA
Tel: 45 628, 62 696
Telex: 2894 LEVIDO CY
E,M,P

DENMARK

Hewlett-Packard A/S
Kongevejen 25
DK-340 BIRKERØED
Tel: (02) 81-66-40
Telex: 37409 hpas dk
A,C,CM,E,M,P

Hewlett-Packard A/S
Rolighedsvvej 32
DK-8240 RISSKOV, Aarhus
Tel: (06) 17-60-00
Telex: 37409 hpas dk
C,E

DOMINICAN REPUBLIC

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
y Belgica, Cassilla 6423 CCI
QUITO
Tel: 245-0975, 243-052
Telex: 22548 CYEDE ED
E,P

EGYPT

International Engineering Assoc.
24 Hussein Hegazi Street
Kasr-el-Aimi, CAIRO
Tel: 23829, 21641
Telex: 93830 IEA UN
Cable: INTEGASSO
E

EL SALVADOR

IPESA de El Salvador S.A.
29 Avenida Norte 1223
SAN SALVADOR
Tel: 26-6858, 26-6868
Telex: 301 20539 IPESA SAL
A,C,CM,E,P

ETHIOPIA

FINLAND

Hewlett-Packard Oy
Piispankalliontie 17, 02200 ESPOO
Tel: (90) 887-21
Telex: 121563 HEWPA SF
A,C,CM,E,M,P

FRANCE

Hewlett-Packard France
Z.I. Mercure B, Rue Berthelot
13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: (42) 59-41-02
Telex: 410770F
A,C,E,M

Hewlett-Packard France
28 Rue de la République
Boite Postale 503
25026 BESANCON
Tel: (81) 83-16-22
Telex: 361157
C,E*

Hewlett-Packard France
13 Place Napoléon III
29000 BREST
Tel: (98) 41-87-90
E

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
69131 ECULLY Cedex (Lyon)
Tel: (78) 133-81-25
Telex: 310617F
A,C,E,M,P*

Hewlett-Packard France
Rue Fernand. Forest
Z.A. Kergardec
29239 GOUESNOU
Tel: (98) 41-87-90

Hewlett-Packard France
Parc Club des Tanneries
Batiment B4
4, Rue de la Faisanderie
67380 LINCOLSHEIM,
(Strasbourg)
Tel: (88) 76-15-00
Telex: 890141F
C,E*,M*,P*

Hewlett-Packard France
Centre d'affaire Paris-Nord
Batiment Ampere
Rue de la Commune de Paris
Boite Postale 300,
93153 LE BLANC-MESNIL
Tel: (1) 865-44-52
Telex: 211032F
C,E,M

Hewlett-Packard France
Parc d'activités Cadéra
Quartier Jean-Mermoz
Avenue du Président JF Kennedy
33700 MERIGNAC
(Bordeaux)
Tel: (56) 34-00-84
Telex: 550105F
C,E,M

Hewlett-Packard France
3, Rue Graham Bell, BP 5149
57074 METZ Cedex
Tel: (87) 36-13-31
Telex: 860602F
C,E

Hewlett-Packard France
Bat. A l'Erbie
Bureau vert du Bois Briand
44085 NANTES Cedex
Tel: (40) 50-32-22
Telex: 711085F
A,C,E,CM*,P

Hewlett-Packard France
125 Rue de Faubourg Banner
45000 ORLEANS
Tel: (38) 62-20-31
E,P*

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
91947 LES ULIS Cedex (Orsay)
Tel: (69) 07-78-25
Telex: 600048F
A,C,CM,E,M,P**

Hewlett-Packard France
124, Boulevard Tourasse
64000 PAU
Tel: (59) 80-38-02
Telex: 550365F
C,E*

Hewlett-Packard France
6, Place Sainte Croix
86000 POITIERS
Tel: (49) 41-27-07
Telex: 792335F
C,E*

Hewlett-Packard France
Parc d'activités de la Poterie
Rue Louis Kerautel-Bormel
35000 RENNES
Tel: (99) 51-42-44
Telex: 740912F
A*,C,E,M,P*

Hewlett-Packard France
98 Avenue de Bretagne
76100 ROUEN
Tel: (35) 63-57-66
Telex: 770035F
C,E

Hewlett-Packard France
4, Rue Thomas-Mann
Boite Postale 56
67033 STRASBOURG Cedex
Tel: (88) 28-56-46
Telex: 890141F
C,E,M,P*

Hewlett-Packard France
Le Pbricole, 3, Chemn
du Pigeonnier de la Cèpibre
3108 TOULOUSE Cedex
Tel: (61) 40-11-12
Telex: 531639F
A,C,E,M,P*

Hewlett-Packard France
Parc d'activité des Prés
1, Rue Papin, 59658
VILLENEUVE
D'ASCO Cedex
Tel: (20) 47-78 78
Telex: 160124F
C,E,M,P

Hewlett-Packard France
Parc d'activités Paris-Nord 11
45, Rue des 3 Soeurs
93420 VILLEPENTE
Tel: (1) 48 63 80 80
Telex: 211032F
C,E,M,P*

GABON

Sho Gabon
P.O. Box 89,
LIBREVILLE
Tel: 721-484
Telex: 5230

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertriebszentrum Mitte
Hewlett-Packard-Strasse
D-6380 BAD HOMBURG
Tel: (06172) 400-0
Telex: 410 844 hpbhg
A,C,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle, Keithstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 21 99 04-0
Telex: 018 3405 hpbm d
A,C,E,M,P

Hewlett-Packard GmbH
Vertriebszentrum Südwest
Schickardstrasse 2
D-7030 BOBLINGEN
Tel: (07031) 645-0
Telex: 7265 743 hep
A,C,CM,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle, Schleefstr. 28a
D-4600 DORTMUND-41
Tel: (032) 45001
Telex: 822858 hepdad
A,C,E

Hewlett-Packard GmbH
Vertriebszentrum Nord
Kapstadttring 5
D-2000 HAMBURG 60
Tel: (040) 63804-1
Telex: 021 63 032 hpph d
A,C,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle, Heidering 37-39
D-3000 HANNOVER 61
Tel: (0511) 5706-0
Telex: 092 3259
A,C,CM,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle, Rossauer Weg 2-4
D-6800 MANNHEIM
Tel: (0621) 70-05-0
Telex: 0462105
A,C,E

Hewlett-Packard GmbH
Geschäftsstelle,
Messerschmitzstrasse 7
D-7910 NEU ULM
Tel: (0731) 70-73-0
Telex: 07 128 16 HP ULM-D
A,C,E*

Hewlett-Packard GmbH
Geschäftsstelle,
Emmericher Strasse 13
D-8500 NURNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860 hpnbg
C,CM,E,M,P

Hewlett-Packard GmbH
Vertriebszentrum West
Berliner Strasse 111
D-4030 RATINGEN 3
Tel: (02102) 494-0
Telex: 589 070 hprad
A,C,E,M,P

Hewlett-Packard GmbH
Vertriebszentrum Süd,
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: (089) 61 20 7-0
Telex: 0524985
A,C,CM,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle, Ermilisallee
7517 WALDBRONN 2
Tel: (07243) 602-0
Telex: 782 838 hep
A,C,E

GREAT BRITAIN (See United Kingdom)

GREECE

Hewlett-Packard A.E.
178, Kifissias Avenue, 6th Floor
Halandri-ATHENS
Greece
Tel: 647 1543, 647 1673, 647 2971
Telex: 221 286 HPHLGR
A,C,CM**,E,M,P

Kostas Karayannis S.A.
8, Omirou Street
ATHENS 133
Tel: 32 30 303, 32 37 371
Telex: 215962 RKAR GR
A,C*,CM,E

GUATEMALA

IPESA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 3 16627, 317853, 66471/5
Telex: 3055765 IPESA GU
A,C,CM,E,M,P

HONG KONG

Hewlett-Packard Hong Kong Ltd.
G.P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road,
HONG KONG
Tel: 5-8323211
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG
C,E,P

ICELAND

Hewlett-Packard Iceland
Hoefdabakka 9
110 REYKJAVIK
Tel: (1) 67-1000
A,C,CM,E,M,P

INDIA

Computer products are sold
through Blue Star Ltd. All com-
puter repairs and maintenance
service is done through Com-
puter Maintenance Corp.

Blue Star Ltd.
B.D. Patel House
Near Sardar Patel Colony
AHMEDABAD 380 014
Tel: 403531, 403532
Telex: 0121-234
Cable: BLUE FROST
A,C,CM,E

Blue Star Ltd.
40/4 Lavelle Road
BANGALORE 560 001
Tel: 57881, 567780
Telex: 0845-430
Cable: BLUESTAR
A,C*,CM,E

Blue Star Ltd.
Sahas
4 14/2 Vir Savarkar Marg
Prabhadevi, BOMBAY 400 025
Tel: 430-6155, 430-6556
Telex: 011-71193 BSSS IN
Cable: FROSTBLUE
A,CM,E,M

Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 230131, 230132
Telex: 031-61120 BSNF IN
Cable: BLUESTAR
A,M,C,E

Blue Star Ltd.
13 Community Center
New Friends Colony
NEW DELHI 110 065
Tel: 633182, 636674
Telex: 031-61120
Cable: BLUEFROST
A,C*,CM,E,M

Blue Star Ltd.
2-2-47/1108 Bolarum Road
SECUNDERABAD 500 003
Tel: 72057, 72058
Telex: 0155-459
Cable: BLUEFROST
A,C,E

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthunkuzhi
TRIVANDRUM 695 013
Tel: 65799, 65820
Telex: 0884-259
Cable: BLUESTAR
E

INDONESIA

BERCA Indonesia P.T.
P.O. Box 2497/Jkt
Antara Bldg., 11th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 343989
Telex: 46748 BERSAL IA
A,C,E,M,P

CONTENTS (continued)

SECTION V (continued) REMOTE OPERATION

5-18 Current Programming.....	5-8
5-19 Range Switching.....	5-8
5-20 Output On/Off.....	5-9
5-21 Overvoltage Protection.....	5-9
5-22 Overcurrent Protection.....	5-9
5-23 Multiple Output Storage and Recall.....	5-10
5-24 The Clear Command.....	5-10
5-25 Status Reporting.....	5-10
5-30 Service Request Generation.....	5-12
5-33 Reprogramming Delay.....	5-13
5-34 Display On/Off.....	5-14
5-36 Other Queries.....	5-14

SECTION VI LOCAL OPERATION

6-1 INTRODUCTION.....	6-1
6-2 LOCAL MODE.....	6-1
6-3 LOCAL CONTROL OF OUTPUT FUNCTIONS.....	6-1
6-4 General.....	6-2
6-5 Setting Voltage.....	6-2
6-6 Setting Current.....	6-2
6-7 Enabling/Disabling an Output.....	6-2
6-8 Setting Overvoltage Protection.....	6-2
6-9 Resetting Overvoltage Protection.....	6-2
6-10 Enabling/Disabling Overcurrent Protection.....	6-2
6-11 Resetting Overcurrent Protection.....	6-3
6-12 Displaying the Contents of the Fault Register.....	6-3
6-13 Setting the Reprogramming Delay.....	6-3
6-14 LOCAL CONTROL OF SYSTEM FUNCTIONS.....	6-3
6-15 Setting the Supply's HP-IB Address.....	6-3
6-16 Displaying Error Messages.....	6-4
6-17 Storing and Recalling Voltage and Current.....	6-4
Settings for all Outputs	

APPENDIX A CALIBRATION

A-1 INTRODUCTION.....	A-1
A-2 TEST EQUIPMENT AND SETUP REQUIRED.....	A-1
A-3 GENERAL CALIBRATION PROCEDURE.....	A-2
A-4 CALIBRATION PROGRAM.....	A-3

APPENDIX B PROGRAMMING WITH THE SERIES 200/300 COMPUTER

B-1 INTRODUCTION.....	B-1
B-2 I/O PATH NAMES.....	B-1
B-3 VOLTAGE AND CURRENT PROGRAMMING.....	B-1
B-4 VOLTAGE AND CURRENT PROGRAMMING.....	B-1
WITH VARIABLES	
B-5 VOLTAGE AND CURRENT READBACK.....	B-2
B-6 PROGRAMMING POWER SUPPLY REGISTERS.....	B-3
B-7 Present Status.....	B-3
B-8 Service Request and Serial Poll.....	B-3
B-9 Error Detection.....	B-4
B-10 Stored Operating States.....	B-5
B-11 PROGRAMMING OUTPUTS CONNECTED.....	B-6
IN PARALLEL	
B-12 CC Operation.....	B-6
B-13 CV Operation.....	B-6
B-14 PROGRAMMING OUTPUTS CONNECTED.....	B-7
IN SERIES	

APPENDIX C COMMAND SUMMARY

C-1 INTRODUCTION.....	C-1
-----------------------	-----

APPENDIX D ERROR MESSAGES

D-1 INTRODUCTION.....	D-1
D-2 POWER-ON SELF TEST MESSAGES.....	D-1
D-3 ERROR RESPONSES.....	D-1
D-4 TEST RESPONSES.....	D-1

SALES & SUPPORT OFFICES

Arranged alphabetically by country

Product Line Sales/Support Key

- A Analytical
- CM Components
- C Computer Systems
- E Electronic Instruments & Measurement Systems
- M Medical Products
- P Personal Computer Products
- * Sales only for specific product line
- ** Support only for specific product line

IMPORTANT: These symbols designate general product line capabilities. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

AFRICA

NORTH/CENTRAL
 Hewlett-Packard S.A.
 7, rue du Bois-du-Lan
 Easthamstead, WOKINGHAM
 Berkshire, RG11 3LL
 Tel: 0344 773100
 Telex: 848805

ASIA

EASTERN EUROPE
 Cable: HEWPACKSA Geneva
 Telex: 27835 hmes
 Tel: (022) 83 12 12

WESTERN EUROPE

Hewlett-Packard Asia Ltd.
 47/F, 26 Harbour Road
 Wanchai, HONG KONG
 G.P.O. Box 863, Hong Kong
 Tel: 5-8330833

MIDWESTERN USA

Hewlett-Packard Co.
 5201 Tolliver Drive
 ROLLING MEADOWS,
 IL 60008
 Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard (Canada) Ltd.
 6877 Goreway Drive
 MISSISSAUGA, Ontario L4V 1M8
 Tel: (416) 678-9430

EASTERN USA

Hewlett-Packard Ges.m.b.H.
 Liebigasse 1, P.O. Box 72
 A-1222 VIENNA, Austria
 Tel: (222) 2500-0

NORTHERN EUROPE

Hewlett-Packard S.A.
 V.D. Hooplaan 241
 P.O. Box 999
 NL-1183 AG AMSTELVEEN
 The Netherlands
 Tel: 20-547999

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
 Intercontinental Headquarters
 3495 Deer Creek Road
 PALO ALTO, CA 94304
 Tel: (415) 857-1501

SOUTH EAST EUROPE

Hewlett-Packard S.A.
 World Trade Center
 110 Avenue Louis Casati
 1215 Contrin, GENEVA,
 Switzerland
 Tel: (022) 98 96 51

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
 Mediterranean and Middle East
 Operations
 Empresa Técnica
 de Equipamentos
 Rua Barbosa Rodrigues, 41-1 DT.
 Caixa Postal 6487
 Luanda
 Tel: 355-15,35516

ANGOLA

Hewlett-Packard S.A.
 Telectra Anglos LDA
 Empressa Técnica
 de Equipamentos
 Rua Barbosa Rodrigues, 41-1 DT.
 Caixa Postal 6487
 Luanda
 Tel: 355-15,35516

ARGENTINA

Hewlett-Packard Argentina S.A.
 Montañas 2140/50
 1428 BUENOS AIRES
 Tel: 781-4059/69

AUSTRALIA

Hewlett-Packard Australia Ltd.
 Adelaide, South Australia
 Office
 Tel: 256123

BRASILE

Hewlett-Packard do Brasil
 Blvd de la Voluire, 100
 Woiwedal,
 8-1200 BRUSSELS
 Ontario

BERMUDA

Hewlett-Packard (Canada) Ltd.
 552 Newbold Street
 LONDON, Ontario N6E 2S5
 Tel: (519) 686-9181

ARGENTINA

Hewlett-Packard Ges.m.b.H.
 Liebigasse 1, P.O. Box 72
 1825 INKSTER Blvd.
 WINNIPEG, Manitoba R2X 1R3
 Tel: (204) 694-2777

BAHRAIN

New Brunswick
 Nova Scotia
 P.O. Box 648, MANAMA
 Wabel Pharmacy
 Tel: 256123

AUSTRALIA

Hewlett-Packard Australia Ltd.
 Adelaide, South Australia
 Office
 Tel: 256123

PARKSIDE, S.A. 5063

Hewlett-Packard Belgium
 S.A./N.V.
 Blvd de la Voluire, 100
 Woiwedal,
 8-1200 BRUSSELS
 Ontario

BRUSSELS

Hewlett-Packard (Canada) Ltd.
 552 Newbold Street
 LONDON, Ontario N6E 2S5
 Tel: (519) 686-9181

BERMUDA

Hewlett-Packard (Canada) Ltd.
 6877 Goreway Drive
 MISSISSAUGA
 Ontario L4V 1M8
 Tel: (416) 678-9430

BRAZIL

Hewlett-Packard do Brasil
 Tel: 069-8644

ALPHAVILLE

Hewlett-Packard (Canada) Ltd.
 2670 Queensview Drive
 OTTAWA, Ontario K2B 8K1
 Tel: (613) 820-6483

OTTAWA

Hewlett-Packard (Canada) Ltd.
 3790 Victoria Park Avenue
 WILLOWDALE
 Ontario M2H 2H7
 Tel: (416) 499-2550

WILLOWDALE

Hewlett-Packard (Canada) Ltd.
 Edificio Argentina - Ala A
 6º Andar-conj 614
 Praia de Botafogo 228
 BRUNEL
 A.C.M.E.P.
 Komputer Wisman Sdn Bhd
 Room 1, 3rd Floor,
 Tumasek Plaza
 Jelang Turong
 BANDAR SERI BEGAWAN
 Tel: 23918,25603
 C.E.P.
 Casilla 16475, SANTIAGO 9
 Av. Italia 634 Santiago
 Chile
 Jorge Calcey y Cia
 Republic of
 CHINA, People's
 China Hewlett-Packard Co. Ltd.
 2nd Watch Factory Man Bldg.
 Shuang Yu Shou
 Bei San Huan Road
 Hai Dian District, BEIJING
 Tel: 28-0567

BEIJING

Hewlett-Packard (Canada) Ltd.
 11120-178th Street
 EDMONTON, Alberta T5S 1P2
 Tel: (403) 486-6666

EDMONTON

Hewlett-Packard (Canada) Ltd.
 British Columbia
 China Hewlett-Packard Co. Ltd.
 23/F Shanghai Union Bldg
 100 Yan An Dong Lu,
 SHANGHAI
 Tel: 265550
 Telex: 33571 CHPSB CN
 Cable: 3416 Shanghai
 A.C.M.E.M.P.

SHANGHAI

Hewlett-Packard Ges.m.b.H.
 Verkehrsstrasse 94
 A-8052 GRAZ
 Tel: (0316) 28-30-66
 Telex: 312375
 C.E.

GRAZ

Hewlett-Packard Australia Ltd.
 North Ryde, N.S.W., 2113
 P.O. Box 308
 17-23 Talavera Road
 Office
 Sydney, New South Wales
 C.M.E.P.

ALGERIA

Hewlett-Packard (Canada) Ltd.
 3030 3rd Avenue N.E.
 CALGARY, Alberta T2A 6T7
 Tel: (403) 235-3100

CALGARY

Hewlett-Packard (Canada) Ltd.
 11120-178th Street
 EDMONTON, Alberta T5S 1P2
 Tel: (403) 486-6666

EDMONTON

Hewlett-Packard (Canada) Ltd.
 British Columbia
 China Hewlett-Packard Co. Ltd.
 23/F Shanghai Union Bldg
 100 Yan An Dong Lu,
 SHANGHAI
 Tel: 265550
 Telex: 33571 CHPSB CN
 Cable: 3416 Shanghai
 A.C.M.E.M.P.

SHANGHAI

Hewlett-Packard (Canada) Ltd.
 11120-178th Street
 EDMONTON, Alberta T5S 1P2
 Tel: (403) 486-6666

EDMONTON

Hewlett-Packard (Canada) Ltd.
 British Columbia
 China Hewlett-Packard Co. Ltd.
 23/F Shanghai Union Bldg
 100 Yan An Dong Lu,
 SHANGHAI
 Tel: 265550
 Telex: 33571 CHPSB CN
 Cable: 3416 Shanghai
 A.C.M.E.M.P.

SHANGHAI

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20

Table D-3. TEST? Responses

Response Code (TEST? query)	Explanation
0	No errors were detected.
20	The timer on the HP-IB board failed self test. Refer to the Troubleshooting Section in the Service Manual.
21	The RAM on the HP-IB board failed self test. Refer to the Troubleshooting Section in the Service Manual. Note that if this failure occurred at power-on, it cannot be displayed on the front panel.
27	The ROM on the HP-IB board failed self test. Refer to the Troubleshooting Section in the Service Manual. Note that if this failure occurred at power-on, it cannot be displayed on the front panel.

Section I

GENERAL INFORMATION

1-1 INTRODUCTION

This section contains a general description of your power supply as well as its performance specifications. Information about options, accessories, and HP-IB cables is also provided. This manual describes all five models in the HP 6621A-6624A, and 6627A power supply family. Unless stated otherwise, the information in this manual applies to all of these models. Information that is specific to one model only is identified as such in this manual.

1-2 SAFETY CONSIDERATIONS

This product is a Safety Class 1 instrument, which means that it is provided with a protective earth terminal. This terminal must be connected to a power source that has a 3-wire ground receptacle. Review the instrument and this manual for safety markings and instructions before operation. Refer to the Safety Summary page at the beginning of this manual for a summary of general safety information. Safety information for specific procedures is located at appropriate places in this manual.

1-3 INSTRUMENT AND MANUAL IDENTIFICATION

Hewlett-Packard power supplies are identified by a two-part serial number, i.e. 2601A-00101. The first part of the serial number (the prefix) is a number/letter combination that denotes either the date of manufacture or the date of a significant design change. It also indicates the country of origin. (Starting at 1960, 26 = 1986; 01 = the first week of the year; A = U.S.A.) The second part of the serial number is a different sequential number assigned to each instrument starting with 00101.

If the serial number prefix on your power supply differs from that shown on the title page of this manual, a yellow Manual Changes sheet that is supplied with this manual explains the difference between your instrument and the instrument described by this manual. The change sheet can also contain information for correcting errors in the manual.

1-4 OPTIONS

Options 100, 120, 220, and 240 simply determine which line voltage is selected at the factory. For information about changing the line voltage setting, see paragraph 2-7.

Option 700 provides Control Interface Intermediate Language (CIIL) programming capabilities. These are described in a separate document entitled, "Appendix F Reference Guide for the CIIL Programmable 662x Supplies, Option 700" (HP P/N 5957-6371).

Option 750 consists of a fault indicator (FLT) and remote inhibit (INH) circuit and relay control, which provide additional shutdown protection should either the HP-IB and/or controller fail. This Option is described in a separate document entitled, "Appendix E Option 750 Operating Instructions for the Multiple Output Linear System DC Power Supply, HP Models 6621A, 6622A, 6623A, 6624A, and 6627A (HP P/N 5957-6372).

- #100 Input power, 100 Vac, 47-66 Hz
- #120 Input power, 120 Vac, 47-66 Hz
- #220 Input power, 220 Vac, 47-66 Hz
- #240 Input power, 240 Vac, 47-66 Hz
- #700 Computer Interface Intermediate Language (CIIL)
- #750 Fault (FLT) Remote Inhibit (INH) and Relay Control
- #908 One rack mount kit (5061-9677)
- #909 One rack mount kit with handles (5061-9683)
- #910 One service manual with extra operating manual

1-5 ACCESSORIES

- 10833A HP-IB cable, 1 m (3.3 ft)
- 10833B HP-IB cable, 2 m (6.6 ft)
- 10833C HP-IB cable, 4 m (13.2 ft)
- 10833D HP-IB cable, 0.5 m (1.6 ft)
- 10834A HP-IB connector extender
- Slide mount kit (1494-0059)

1-6 DESCRIPTION

The HP 6621A-6624A, and 6627A Multiple Output Linear Power Supplies feature a combination of programming capabilities and linear power supply performance that make

Table 1-1. Output Combinations Available

Model	Output 1	Output 2	Output 3	Output 4
HP 6621A	80 W Low Voltage	80 W Low Voltage	—	—
HP 6622A	80 W High Voltage	80 W High Voltage	—	—
HP 6623A	40 W Low Voltage	80 W Low Voltage	40 W High Voltage	—
HP 6624A	40 W Low Voltage	40 W Low Voltage	40 W High Voltage	40 W High Voltage
HP 6627A	40 W High Voltage	40 W High Voltage	40 W High Voltage	40 W High Voltage

Explanation	Message (ERR key)	Error Code (ERR? query)
Indicates there are no errors.	NO ERROR	0
You sent the supply a character it did not recognize.	INVALID CHAR	1
The format of your number is incorrect. Check syntax (see Section V).	INVALID NUM	2
You sent a command the supply does not understand. Resend a recognizable command.	INVALID STR	3 or 28
You sent a command with improper syntax. Check syntax of your command (see Section V).	SYNTAX ERROR	4
An out of range number was sent. Send a new number within the legal range.	NUMBER RANGE	5
The computer addressed the supply to talk, but it did not first request data. Send query first and then address the supply to talk.	NO QUERY	6
Quoted string in the DSP command exceeds the display length of 12 characters.	DISP LENGTH	7
May occur if too many numbers are sent. Error code 4 or error code 5 are more likely to occur for this condition.	BUFFER FULL	8
The EEPROM on the HP-IB board is not responding correctly to programming commands. An instrument failure has occurred and service is required. Refer to the Troubleshooting Section in the Service Manual.	EEPROM ERROR	9
An output error has occurred on an unknown output. Service is required. Refer to the Troubleshooting Section in the Service Manual.	HARDWARE ERR	10
Error codes 11 through 14 refer to a specific output where an output error has occurred. Service is required. Refer to the Output Board Troubleshooting section in the service manual.	HDW ERR CH 1	11
Same as in error 11.	HDW ERR CH 2	12
Same as in error 11.	HDW ERR CH 3	13
Same as in error 11.	HDW ERR CH 4	14
The supply's model number cannot be found. The HP-IB Interface board may be defective or the supply may require reprogramming. Refer to the Troubleshooting Section in the Service Manual.	NO MODEL NUM	15
An error has occurred during calibration. This may be the result of out of range numbers sent. If recalibration (See Appendix A) does not fix this there may be a hardware failure (Refer to the Troubleshooting Section in the Service Manual).	CAL ERROR	16
Unexplained EEPROM error; possibly as the result of incorrect calibration procedure. Recalibrate as described in Appendix A. If the problem persists, a hardware failure exists (Refer to the Troubleshooting Section in the Service Manual).	UNCALIBRATED	17
Calibration was attempted with the calibration jumper on the HP-IB board in the lockout position (See Section IV in the Service Manual). Reposition the jumper and re-calibrate if this is desired.	CAL LOCKED	18
The self test jumper on the HP-IB board is in the Skip Self Test Position (See Section IV in the Service Manual). Reposition the jumper and carry out self-test if this is desired.	SKIP SLF TST	22

Table D-2. ERROR Responses

Figure 1-1. Output Operating Ranges for HP Models 6621A, 6624A and 6627A.

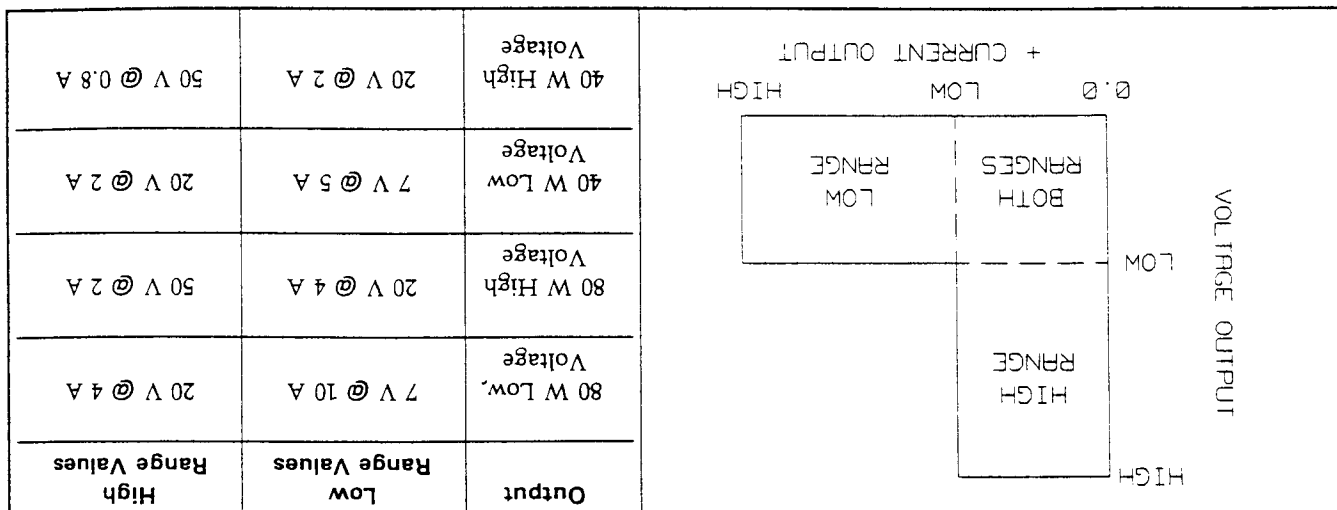


Figure 1-2 is a block diagram that illustrates the major assemblies contained within the power supply. As shown in the figure, each supply includes a power transformer, two or more output boards, an HP-IB board, and front panel (display and control keys).

1-7 BASIC OPERATION

Your power supply can be calibrated without having to remove the cover or even having to remove it from your system cabinet. This feature allows you to calibrate the supply at its normal operating temperature. The recommended calibration interval is one year. Refer to Appendix A of this manual for complete calibration details. A calibration security jumper is available inside the unit. Access is described in the service manual.

Output connections are made to rear panel screw terminals. Either the positive or negative output terminal can be grounded, or the output can be floated up to ± 240 Vdc (including output voltage) from chassis ground. Output voltage can be locally or remotely sensed, and identical outputs can be operated in series or parallel combinations for increased output voltage or current capability. As shipped from the factory, the power supply is jumpered for local sensing.

- Voltage and current measurement and readback.
- Present and accumulated status readback.
- Programmable overvoltage and overcurrent protection.
- Storage and recall of programmed voltage and current values for all outputs.
- Queries of programmed functions or settings.
- Output enable or disable.
- Programming syntax error detection.
- Programmable delay time for service request and OCP mask.
- Voltage, current, and overvoltage calibration.
- HP-IB interface selftest.
- Message display capability on the front panel.

Service can be requested from your power supply for up to ten reasons. The supply responds to a serial poll by identifying the output on which the fault occurred. Self-contained measurement and readback capability eliminate the need for externally scanning the outputs using a separate DVM. Upon command the supply will measure its output voltage or current and return the value on the HP-IB. The following functions are implemented via the HP-IB:

Your multiple output power supply can be both a listener and a talker on the HP-IB. (HP-IB is Hewlett-Packard's implementation of IEEE-488). The built-in interface is tailored to the supply, resulting in simpler programming. Voltage and current settings can be sent directly to the specified dual range output in volts and amps.

The output voltage and current for any output can be monitored with the front panel display. Output specific error messages are also displayed. Front panel annunciators show the operating status of the instrument. The front panel keypad lets you set and readback the voltage limit, current limit, and overvoltage trip level of any output. With the keypad, you can also enable or disable outputs, mask and delay bits in the fault register, enable overcurrent protection, reset overvoltage and overcurrent protection, and return to local operating mode.

The five models in this family offer a total of up to 200 watts of output power, with voltages up to 50 volts and currents up to 10 amps. The output combinations that correspond to each model are shown in Table 1-1. Each isolated output can supply power in two ranges as shown in Figure 1-1. This flexibility allows you to use the same output to power loads with different voltage and current requirements. No separate command is required to program ranges; the power supply automatically selects one of the operating ranges based on the last parameter (voltage or current) that is set. Additionally, each output contains an active downprogrammer, which means that voltage downprogramming can be accomplished as quickly as upprogramming, even without a load.

Appendix D ERROR CODES AND MESSAGES

D-1 INTRODUCTION

This appendix describes the HP-IB error codes that can be readback to the controller and the error messages that can be displayed on the power supply's front panel. A brief explanation of each code and message is also given. The error codes and/or messages fall into three categories: Power-on Self Test Messages, responses to the ERR? query, and responses to the TEST? query.

D-2 POWER-ON SELF TEST MESSAGES

The applicable message listed in Table D-1 is displayed on the supply's front panel if the corresponding function has failed the power-on self test. No error code numbers can be returned for these errors. If any of these error messages

appear, refer to the Troubleshooting section in the Service Manual.

D-3 ERROR RESPONSES

Table D-2 describes the error codes and messages that can be generated for various programming, calibration, and hardware errors. The error codes can be read back over the HP-IB in response to the ERR? query. The applicable error message is displayed on the supply's front panel when the ERR key is pressed. Sending the ERR? or pressing the ERR key clears the error.

D-4 TEST RESPONSES

Table D-3 describes the codes that can be read back over the HP-IB in response to the TEST? query. The TEST? query initiates a self test of the supply.

Table D-1. Power-On Self Test Error Messages

Message	Explanation
TIMER FAILED	The timer on the HP-IB board failed.
8291 FAILED	HP-IB control chip on the HP-IB board failed.
CV DAC CH <ch>	The voltage DAC on the specified output board failed.
CC DAC CH <ch>	The current DAC on the specified output board failed.
OV DAC CH <ch>	The overvoltage DAC on the specified output board failed.
FUSE CH <ch>	The return fuse on the specified output board is opened.
HDW ERR CH <ch>	The specified output board is down (no output).

The appropriate ac input voltage is applied to each output board where it is converted to a raw dc voltage which is subsequently linearly regulated to become the dc output voltage. The magnitude of the output and the mode of operation are determined by the load and the data received from the HP-IB computer or from the front panel.

Each power supply model contains one output board for each output that it provides. Models 6624A and 6627A contain four 40 watt output boards; Model 6623A contains two 40 watt output boards and one 80 watt output board; Models 6621A and 6622A each contain two 80 watt output boards.

1-8 HP-IB Board

The HP-IB board provides the interface between the user and the multiple outputs of the power supply. Each output board is actually an output channel that can be individually selected and controlled over the HP-IB or from the supply's front panel. Circuits on the HP-IB board interpret commands from the HP-IB or from the front panel to control the selected output.

The HP-IB board also processes measurement and status data received from the output boards. This data may be read back over the HP-IB and/or displayed on the supply's front panel.

The power supply has no potentiometers. Each output is individually calibrated over the HP-IB using calibration commands (see Appendix A). Correction factors are calculated by the power supply during calibration and are stored in a non-volatile memory which is located on the supply's HP-IB board. The supply contains no batteries.

1-9 Output Boards

The output boards are linear dc power supplies. Each isolated output has the L-shaped operating curve described in paragraph 1-6 and Figure 1-1.

The ac input to each output board is rectified and applied to a regulator circuit. Each output board employs series regulation techniques. A regulator element is connected in series with the load and operates in the linear region (between saturation and cutoff) of the transistor characteristic curve. Regulation is achieved by varying the conduction of the series element in response to a change in line voltage or circuit load.

The output board receives digital signals from the HP-IB board and converts them to analog signals which program the output voltage, current, and overvoltage values. The output may be programmed remotely over the HP-IB using commands (see Section V) or locally from the supply's front panel using the control keys (see Section VI).

The output board can be commanded to send measurement and status data back over the HP-IB and/or front panel. The data is sent back via the supply's HP-IB board. HP-IB readback capabilities include output voltage and current, present and accumulated status, and all programmed settings. The front panel LCD display can indicate the output voltage and current, the supply's HP-IB address, error messages, and programmed values. Annunciators on the front panel indicate the operating status of the selected channel (output board).

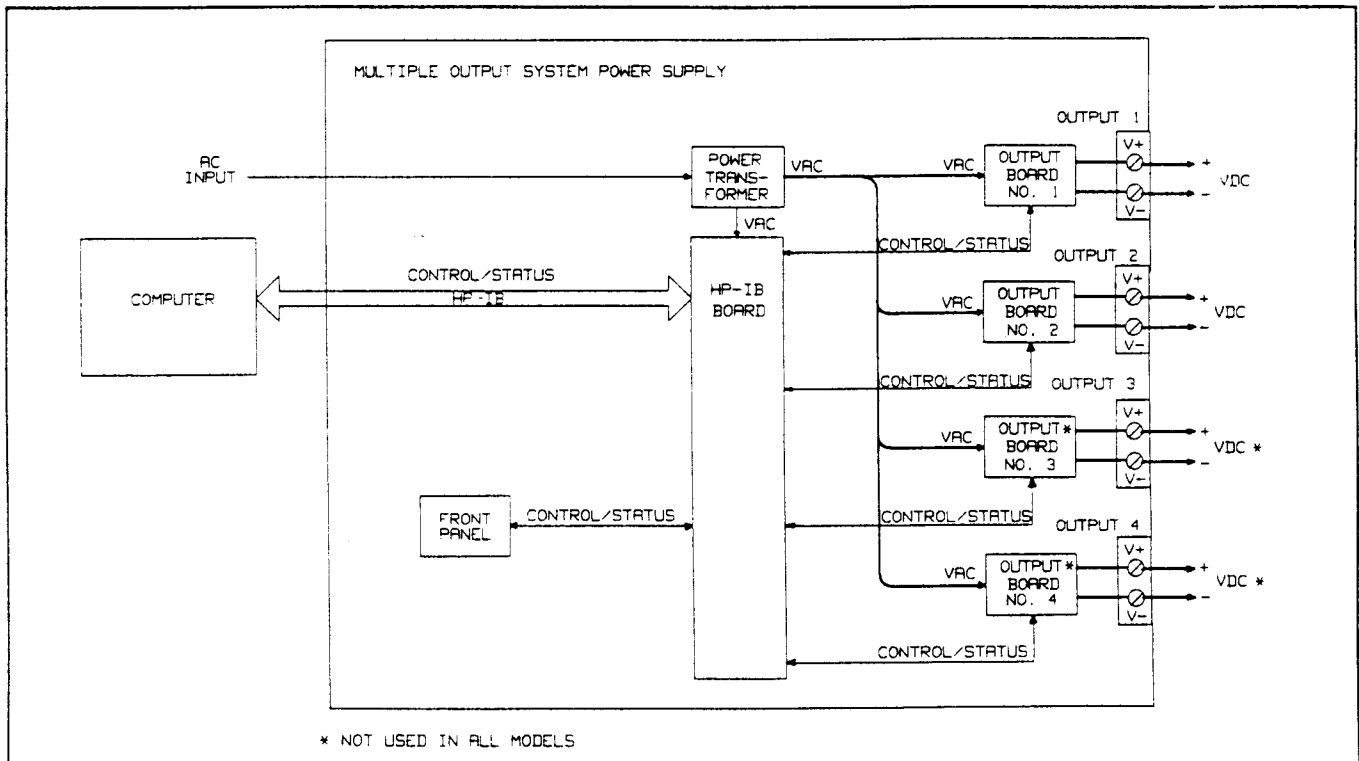


Figure 1-2. HP 6621A 6624A, and 6627A Multiple Output System Power Supplies, Block Diagram

*Indicates that the command can be executed from the front panel.

Command	Description
<p>VOUT? <ch></p> <p>* VSET <ch>, <voltage></p> <p>* VSET? <ch></p> <p>* UNMASK <ch>, <setting></p> <p>* UNMASK? <ch></p>	<p>Queries the measured output voltage of the specified output channel (see paragraph 5-17). The response is a real number. The front panel display can be used to monitor the measured output voltage (and current) of the selected output channel.</p> <p>Sets the voltage of the specified output channel (see paragraph 5-17).</p> <p>Queries the present voltage setting of the specified output channel (see paragraph 5-17). The response is a real number.</p> <p>Sets the bits in the mask register of the specified output channel to the setting (integer from 0 to 255). The mask register operates in conjunction with the status and fault registers (see paragraph 5-28).</p> <p>Queries the present setting of the mask register of the specified output channel (see paragraph 5-28). The response is an integer from 0 to 255.</p>

Table C-1. Command Summary (continued)

1-10 SPECIFICATIONS

Table 1-2 lists the specifications for the power supply. These specifications fall into two major categories: performance specifications and supplemental characteristics. Performance specifications describe the instrument's warranted performance. Supplemental characteristics give typical but non-warranted performance parameters. These provide information that is useful in applying the instrument. The Service Manual includes procedures for verifying the performance specifications.

1-11 Qualifying Conditions

All performance specifications apply over the full operating temperature range of the power supply (0 to 55°C) unless otherwise specified. All regulation, accuracy, etc. specifications are plus or minus the values listed. All measurements are made at the rear terminals of the supply with a resistive load and local sensing unless otherwise specified. Voltage measurements are made from the +S to the -S terminals. Overvoltage measurements are made from the +V to the -V terminals. +Current refers to the output acting as a current source while -Current refers to the output acting as a current sink.

1-12 Definitions

Load effect: Maximum steady state change in the regulated output parameter due to a change in load resistance on the output in question.

Source effect: Maximum steady state change in the regulated output parameter due to a change in the source voltage within rated values. (Expressed as a percentage of setting plus a constant).

Cross regulation: Maximum steady state change in the regulated output parameter due to a change in load resistance on any other output(s).

Programming accuracy: (Calibration temp $\pm 5^\circ\text{C}$) Maximum difference between the programmed value and the actual output. (Expressed as a constant plus a percentage of the setting).

Feedback accuracy: (Calibration temp $\pm 5^\circ\text{C}$) Maximum error in reading back an output parameter. (Expressed as a constant plus a percentage of the reading).

Output response time: Beginning at the time the power supply has finished processing a VSET command (change output voltage), the maximum time for the output voltage to settle to within a settling band about the final value from

any specified operating point. This value must be added to the command processing time to obtain total programming time (see Figure 1-3). Time constant is the maximum time required for the voltage to reach 63% of its final value.

Temperature coefficient: Maximum change in the regulated output parameter per $^\circ\text{C}$ change in ambient temperature after a 30 minute warmup. Expressed in parts-per-million plus a constant per $^\circ\text{C}$ (plus a constant for feedback temperature coefficient).

Long Term Drift: Maximum change of regulated output voltage or current during an 8-hour period following a 30 minute warmup, with all influence and control quantities maintained constant. Expressed as a percentage of setting plus a constant.

Short Term Drift: Maximum change of regulated output voltage or current within 30 minutes after a line and/or load change. Expressed as a percentage of setting plus a constant.

Output Noise (PARD): PARD replaces the former term of dc output voltage or current from its average value, over a specified bandwidth and with all influence and control quantities maintained constant.

Programming resolution: Average programming step size.

Current Sinking (-Current): Each output can sink as well as source current. The sinking capability is not programmable and depends upon the output voltage. The current sinking capability is described in greater detail in Section IV.

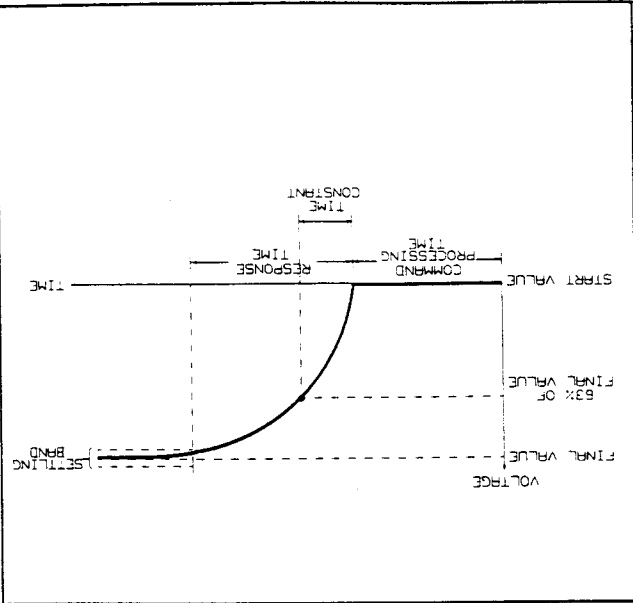


Figure 1-3. Output Response Characteristics

Table C-1. Command Summary (continued)

Command	Description
OVCAL <ch>	Causes the specified output channel to go through the overvoltage calibration routine (see Appendix A).
* OVRST <ch>	Attempts to reset the overvoltage crowbar circuit in the specified output channel (see paragraph 5-21).
* OVSET? <ch>	Queries the present overvoltage setting of the specified output channel (see paragraph 5-21). The response is a real number.
PON <on/off>	Enables power on service request (SRQ). On/off equals 1 causes the power supply to generate a service request when power is applied (see paragraph 5-32). On/off equals 0 disables the PON SRQ. The on/off setting is retained in the supply's memory through interruption of ac line power.
PON?	Queries the present state of the power on SRQ function (see paragraph 5-32). The response is either 1 (on) or 0 (off).
* RCL <reg>	Recalls the voltage and current settings for all output channels from the specified internal register (1 to 10). These settings were previously stored using the STO command. RCL programs all output channels in sequential order (1, 2, 3, 4) to these stored settings (see paragraph 5-23).
ROM?	Queries the revision date of the power supply's firmware. See Service Manual.
SRQ <setting>	Sets the causes for generating SRQ. Setting can be 0, 1, 2, or 3 as described in paragraph 5-31.
SRQ?	Queries the present setting of the reasons for issuing an SRQ (see paragraph 5-31). Response is 0, 1, 2, or 3 that corresponds with the SRQ <setting> described previously.
*STO <reg>	Stores the present voltage and current settings for all output channels in the specified register (1 to 10); see paragraph 5-23. These settings can be recalled when desired (see RCL command).
STS? <ch>	Queries the present status of the specified output channel. The response (integer 0-255) represents the sum of the binary weights of the status register bits (see paragraph 5-26).
TEST?	Causes the power supply to perform a self test of its HP-IB interface. The response is 0 if the test passes or an integer failure code (see paragraph 5-39).
VDATA <ch>, <Vlo>, <Vhi>	Sends data to calibrate the voltage setting and readback circuits of the specified output channel. Vlo and Vhi are measured values which the supply uses to calculate correction constants (see Appendix A).
VHI <ch>	Causes the voltage of the specified output channel to go to the high calibration point (see Appendix A).
VLO <ch>	Causes the voltage of the specified output channel to go to the low calibration point (see Appendix A).
VMUX? <ch>, <input>	Queries the measurement of the input (1 to 8) to the analog multiplexer on the specified output board. See Service Manual.

* indicates that the command can be executed from the front panel.

Table 1-2. Specifications (continued)

PERFORMANCE SPECIFICATIONS (continued)

Input Line Requirements:

Amplitude = +6%, -13% of nominal line voltage

Frequency Range = 47-66 Hz

Maximum Power = 550 W

Note: At low line, the supply will operate with up to $\frac{3}{4}$ Ω line resistance.

	100 V Option	120 V Option	220 V Option	240 V Option
High Line Inrush Current (pk)	85 A	85 A	50 A	50 A
High Line Input Current (rms)	6.3 A	5.7 A	3.0 A	3.0 A
Fuse Rating	8 A	8 A	4 A	4 A

HP-IB Interface Capabilities:

SH1, AH1, T6, L4, SR1, RL1, PP1, DC1, DT0, C0, E1

SUPPLEMENTAL CHARACTERISTICS

Outputs	40 W Low Voltage	40 W High Voltage	80 W Low Voltage	80 W High Voltage
---------	---------------------	----------------------	---------------------	----------------------

Programming Resolution:

Voltage	6 mV	15 mV	6 mV	15 mV
+ Current	25 mA	10 mA	50 mA	20 mA
OVP	100 mV	250 mV	100 mV	250 mV

Readback Resolution:

Voltage	6 mV	15 mV	6 mV	15 mV
+ or - Current	2 mA	0.8 mA	4 mA	1.6 mA

Fixed Overvoltage Protection: (Measure at output terminals +V and -V):

Minimum	22.5 V	56 V	22.5 V	56 V
Nominal	24 V	60 V	24 V	60 V
Maximum	26 V	64 V	26 V	64 V

Current Sink Capability:

Current sink limits are fixed approximately 10% higher than the maximum current source limits for a given operating voltage at any voltage above 2.5 V (see Section IV).

Command Processing Time: (see Figure 1-3):

7 milliseconds typical (with front panel display disabled). Using STO and RCL commands allows you to change all the voltage and current settings in about 10 mS (with front panel display disabled).

Series and Parallel Operation:

Two outputs can be operated directly in parallel or can be connected for straight series operation. Refer to Section IV for more information.

Table C-1. Command Summary (continued)

Command	Description
* ERR?	Queries the present programming or hardware error (see paragraph 5-37). An error code number is returned over the HP-IB to identify the error. In the local mode, pressing the ERK key will cause the appropriate error message (not the error code) to be displayed at the front panel. The error register is cleared after being read.
* FAULT? < ch >	Queries the fault register of the specified output channel (see paragraph 5-28). A bit is set in the fault register when the corresponding bit is set in both the status and the mask registers. The response is an integer 0 to 255. The fault register is cleared after being read.
ID?	Queries the identification (model number) of the supply. Response can be HP 6621A, HP 6622A, HP 6623A, HP 6624A, or HP 6627A as applicable (see paragraph 5-38).
IDATA < ch >, < ilo >, < ihi >	Sends data to calibrate the current setting and readback circuits of the specified output channel. Ilo and Ihi are measured values which the supply uses to calculate correction constants (see Appendix A).
IHI < ch >	Causes the current of the specified output channel to go to the high calibration point (see Appendix A).
ILO < ch >	Causes the current of the specified output channel to go to the low calibration point (see Appendix A).
IOUT? < ch >	Queries the measured output current of the specified output channel (see paragraph 5-18). The response is a real number. The front panel display can be used to monitor the measured output current (and voltage) of the selected output channel.
* ISET < ch >, < current >	Sets the current of the specified output channel (see paragraph 5-18).
* ISET? < ch >	Queries the present current setting of the specified output channel (see paragraph 5-18). The response is a real number.
* OCP < ch >, < on/off >	Enables the overcurrent protection circuit for the specified output channel. This circuit, when enabled, causes the output to go to the off state when the output is in the + CC mode. On/off is a 1 to turn on (enable) or a 0 to turn off (disable) the circuit (see paragraph 5-22).
* OCP? < ch >	Queries the overcurrent protection circuit on/off status for the specified output channel (see paragraph 5-22). Response is either a 1 (on) or a 0 (off). The OCP ENBLD annunciator on the front panel displays the on/off status of the OCP circuit for the selected output.
* OCRST < ch >	Returns the specified output channel to the previous settings after it had been turned off by the overcurrent protection circuit (see paragraph 5-22).
* OUT < ch >, < on/off >	Turns the specified output channel on or off. On/off equals 1 to turn the output on and equals 0 to turn the output off (see paragraph 5-20).
DCPON < on/off >	Sets the state of the outputs at power-on. For on/off = 0, all outputs will be off when the power supply is turned on. For on/off = 1 all outputs will be on when the power supply is turned on.
OUT? < ch >	Queries whether the specified output channel is turned on or off (see paragraph 5-20). The response is either 1 (on) or 0 (off). The front panel will display the message //DISABLED// when the selected output channel is turned off.
* OVSET < ch >, < overvoltage >	Sets the overvoltage trip point for the specified output channel (see paragraph 5-21).

* Indicates that the command can be executed from the front panel.

Table 1-2. Specifications (continued)

SUPPLEMENTAL CHARACTERISTICS (continued)			
<p>Reactive Load Capability:</p> <p>All outputs have been designed with the ability to operate with significant reactive loads without instability (refer to Figures 1-4 through 1-6).</p> <p>Output Impedance:</p> <p>Approximated by a resistance in parallel with an inductance (see graphs in Figure 1-7). The values for each output are:</p>			
40 W Low Voltage	80 W Low Voltage	80 W High Voltage	
0.15 Ω , 2.0 μ H	0.15 Ω , 0.8 μ H	0.5 Ω , 3 μ H	
<p>Safety Agency Compliance:</p> <p>This series of power supplies is designed to comply with the following standards: IEC 348, VDE 0411, UL 1244, ANSI C39.5, and CSA Electrical Bulletin 556B.</p>			
<p>Dimensions: (all models)</p> <p>Height = 132.6 mm (5.22in.)</p> <p>Width = 425.5 mm (16.75in.)</p> <p>Depth = 497.8 mm (19.6in.)</p>			
<p>Weight: (all models):</p> <p>Net Weight = 17.4 kg (38 lbs.)</p> <p>Shipping Weight = 22.7 kg (50 lbs.)</p>			

APPENDIX C Command Summary

C-1 INTRODUCTION

Table C-1 provides an alphabetical listing and a brief description of each command that can be sent to the HP 6621A-24A, and 6627A power supplies. All of the commands can be executed remotely over the HP-IB. Many of the commands can also be executed locally from the supply's front panel as indicated in the table.

Command headers are accepted in upper or in lower case letters although only upper case letters are used in this summary. The brackets < > indicate a number to be sent.

Note that <ch> must specify an output channel number from 1 through 4 as applicable. Commas or spaces are required between numbers. Spaces are optional between the command header and the first number; no commas are allowed between header and first number. Use semi-colons between multiple commands sent in one statement.


Section V gives a complete description (including syntax) of most of the commands listed. Calibration commands are described in Appendix A. Two of the commands listed (ROM? and VMUX?) are described in the Service Manual.

Table C-1. Command Summary


Command	Description
ASTS? <ch>	Queries the accumulated status (ASTS) of the specified output channel. The response (integer 0-255) represents the sum of the binary weights of the ASTS register bits (see paragraph 5-27). The ASTS register is automatically set to the present status after being queried.
CLR	Returns the entire power supply (all outputs) to the power on state except that the supply is not unaddressed and its store/recall registers are not changed (see paragraph 5-24).
CMODE <on/off>	Turns the calibration mode on or off. On/off is a 1 to turn the calibration mode on; a 0 turns it off (see Appendix A).
CMODE?	Queries if the calibration mode is on or off. Response is either a 1 (on) or 0 (off), (see paragraph 5-40).
* DLY <ch>, <delay>	Sets the reprogramming delay for the specified output channel. This delay is used to mask the CV, +CC, -CC, and UNR status bits from the fault register and the OCP function for the specified delay period (0 to 32 seconds). The delay time is initiated after a VSET, ISET, OUT, RCL, OVRST, or OCRST command is sent (see paragraph 5-33).
* DLY? <ch>	Queries the present reprogramming delay of the specified output channel (see paragraph 5-33). The response can be a real number from 0.000 to 32 seconds (e.g., .450 seconds).
DSP <on/off>	Turns the power supply's front panel display either on or off (see paragraph 5-34). On/off equals 1 to turn the display on or a 0 to turn it off.
DSP?	Queries the present status of the display (see paragraph 5-34). Response is either a 1 (on) or a 0 (off).
DSP "xxxxxxxxxxxx"	Puts the quoted string on the power supply's front panel display (see paragraph 5-35). Only numerals, upper case letters, and spaces are allowed (12 characters max) in the quoted string.

*indicates that the command can be executed from the front panel.

- ① ——— USING 14 AWG, 50 FOOT CABLE AND REMOTE SENSING
- ② - - - USING 14 AWG, 5 FOOT CABLE AND REMOTE SENSING
- ③ ——— USING 20 AWG, 50 FOOT CABLE AND REMOTE SENSING
- ④ - - - USING 20 AWG, 5 FOOT CABLE AND REMOTE SENSING
- ⑤ - - - USING LOCAL SENSING AND CAPACITIVE LOAD RIGHT AT OUTPUT TERMINALS

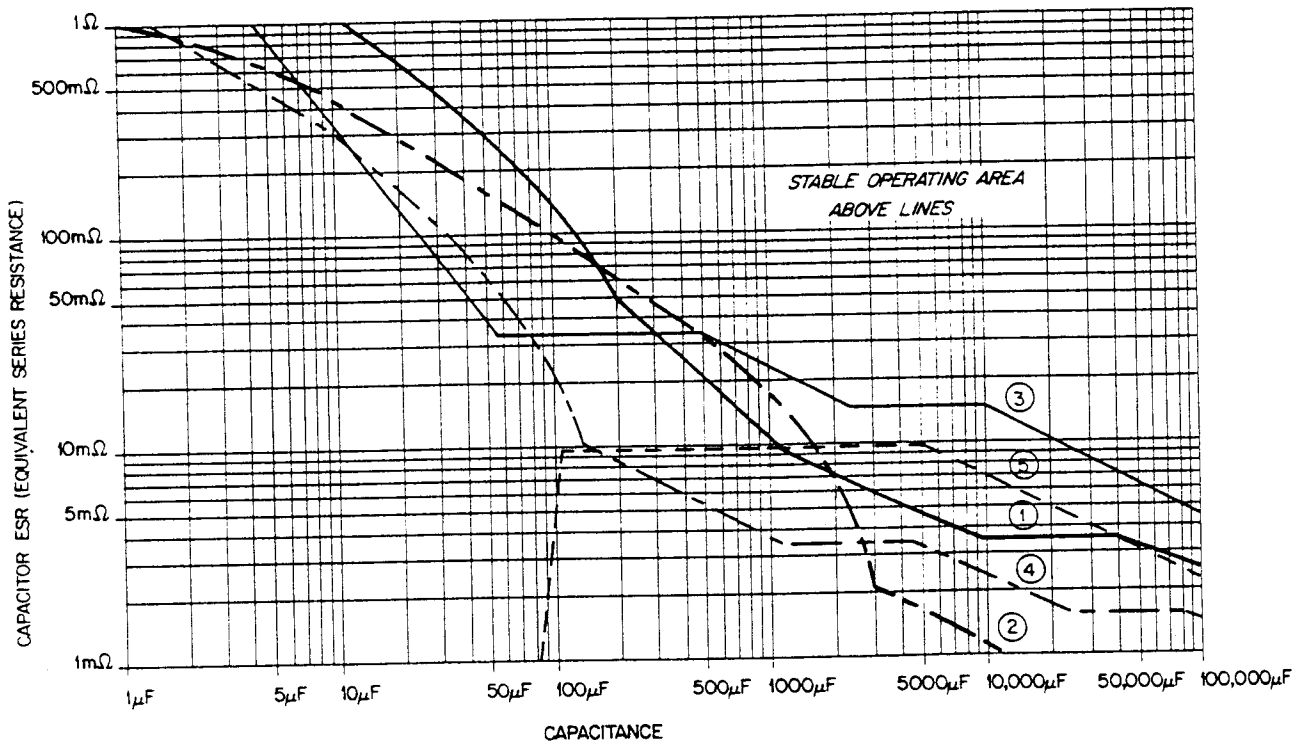

NOTE: CAPACITORS HAVING LOW CAPACITANCE AND LOW ESR (E.G. CERAMIC AND FILM CAPACITORS) ARE NOT RECOMMENDED FOR USE AS BYPASS CAPACITORS AT THE END OF A LONG LOAD CABLE (SEE ILLUSTRATION BELOW). THIS TYPE OF CAPACITOR MAY CAUSE THE OUTPUT TO BECOME UNSTABLE BECAUSE OF RESONANCE EFFECTS WITH THE LOAD LEAD INDUCTANCE. MOST ALUMINUM AND TANTALUM CAPACITORS FALL WITHIN THE STABLE OPERATING AREA OF THE GRAPHS SHOWN ABOVE. REFER TO PARAGRAPHS 4-6 THROUGH 4-14 FOR ADDITIONAL INFORMATION ABOUT CONNECTING LOAD LEADS AND REMOTE SENSE LEADS.

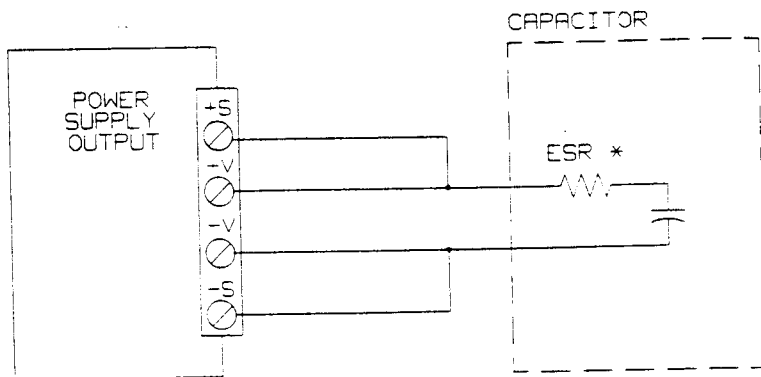

* EQUIVALENT SERIES RESISTANCE


Figure 1-4. CV Operation with Capacitive Load, Stability Graph for all Outputs

The following example programs outputs 1 and 2 which are connected in a series configuration.

```
10 ASSIGN @Ps to 705
20 INPUT "ENTER THE DESIRED CURRENT LIMIT POINT",I
30 INPUT "ENTER THE DESIRED VOLTAGE LIMIT POINT",V
40 OUTPUT @Ps;"CLR,ISSET1,";I;"ISSET2,";I
50 OUTPUT @Ps;"VSET1,";V/2;"VSET2,";V/2
60 END
```

```
LINE 10: Assigns the I/O pathname to the power supply.
LINE 20: Enter the desired current limit point.
LINE 30: Enter the desired voltage limit point.
LINE 40: Clears the supply and sets the current of both outputs to the desired current limit point.
LINE 50: Sets the voltage of each output to one half of the desired voltage limit point so that the sum is the desired
voltage limit point.
```

Figure 1-5. CC Operation with Inductive Load, Small Signal Stability Graph for HV (0 to 50 V) Outputs

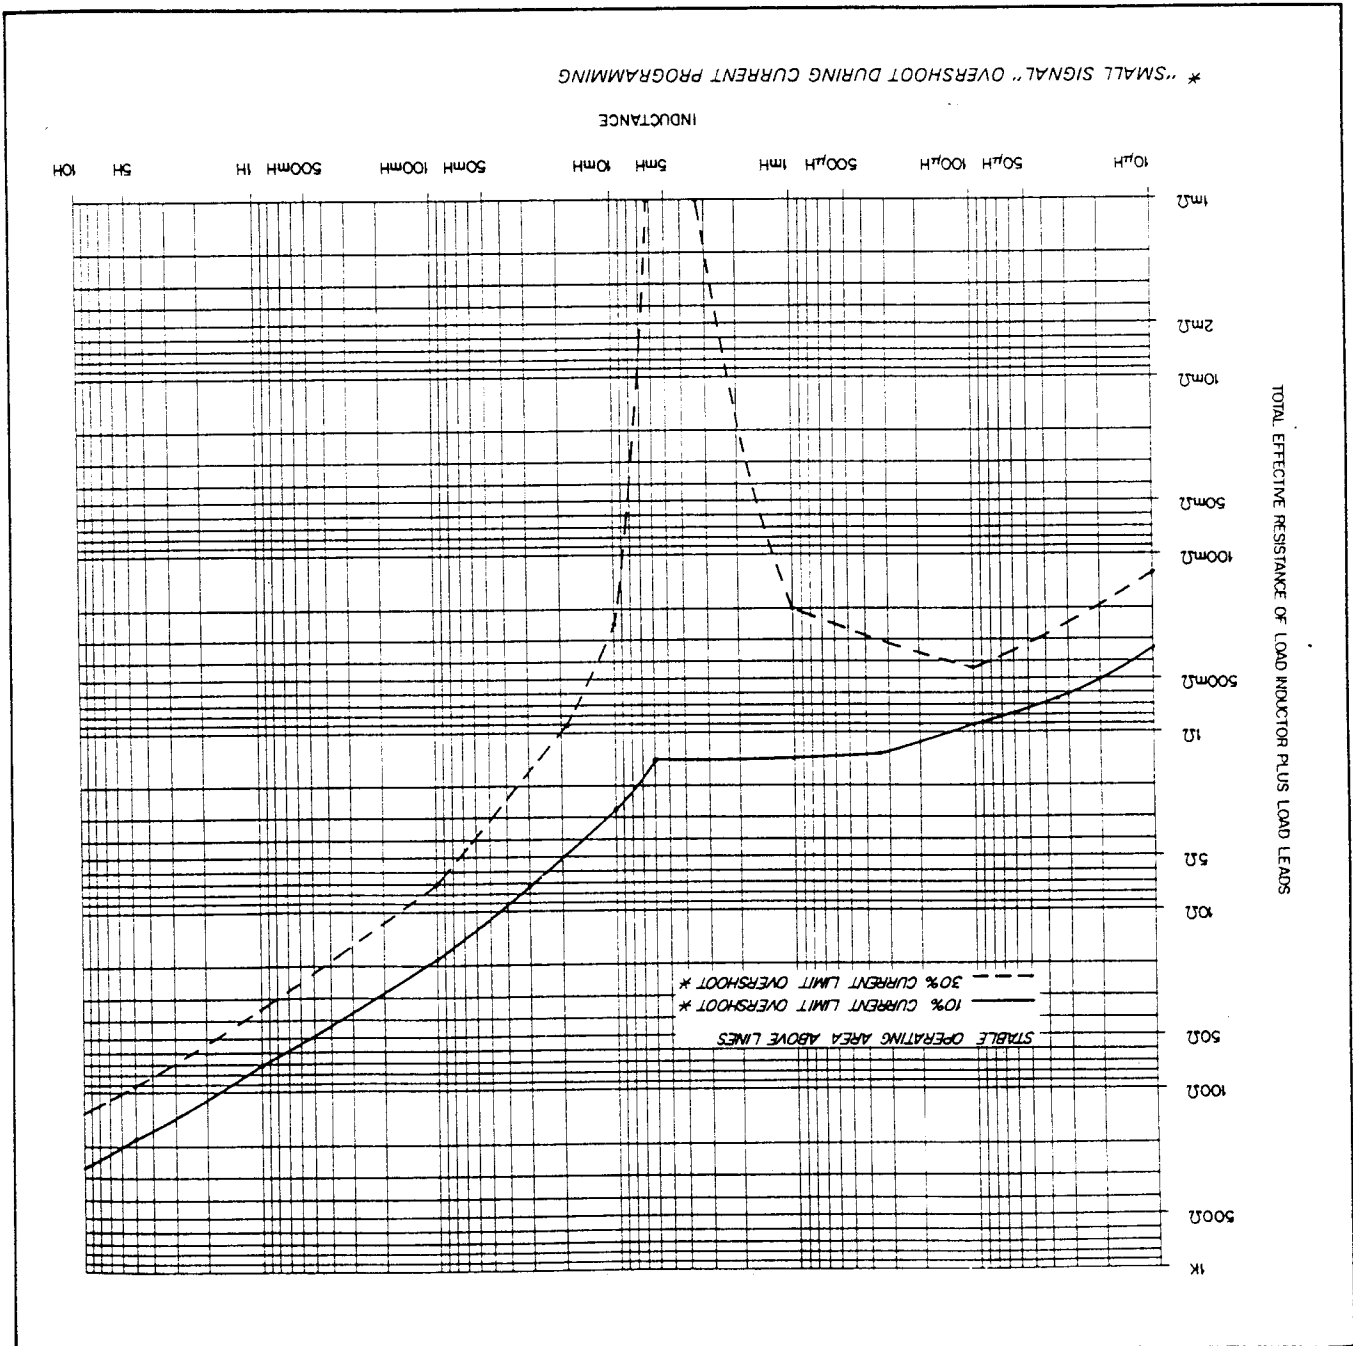

In the example that follows, outputs 1 and 2 (both 40 W or 80 W Low V channels) will be operating in parallel with output 1 in CV mode and output 2 in CC mode at output voltages above 2.5 V. Each is programmed to one half of the desired current limit point. Above 2.5 V, the voltage for output 2 is always programmed higher than that of output 1 to ensure that output 2 operates in the CC mode. Note that any current from output 2 that is not required by the load flows into the downprogrammer of output 1 and is reflected in the current readback of output 1. The total current supplied to the load can be read back by adding the results of reading back the currents of outputs 1 and 2. At 2.5 V and below, the outputs are set to the same voltage and the operating modes depend upon the load.

```

10 ASSIGN @Ps to 705
20 INPUT "ENTER OPERATING VOLTAGE",V1
30 INPUT "ENTER TOTAL CURRENT LIMIT",Ilim
40 C = Ilim/2
50 IF V1 > 7 THEN V2 = 20.2
60 IF V1 <= 7 THEN V2 = 7.07
70 IF V1 <= 2.5 THEN V2 = V1
80 OUTPUT @Ps;"CLR;ISET1,";C;"VSET1,";V1
90 OUTPUT @Ps;"ISET2,";C;"VSET2,";V2
100 WAIT 1
110 OUTPUT @Ps;"VOUT?1"
120 ENTER @Ps;Vout
130 OUTPUT @Ps;"IOUT?1"
140 ENTER @Ps;Iout1
150 OUTPUT @Ps;"IOUT?2"
160 ENTER @Ps;Iout2
170 PRINT "OUTPUT VOLTAGE IS ";Vout
180 PRINT "TOTAL OUTPUT CURRENT IS ";Iout1 + Iout2
190 END

```

LINE 10: Assigns the I/O pathname to the power supply.

LINE 20,30: Enter the operating voltage and current limit point.

LINE 40: Sets C equal to one half of the current limit point.

LINE 50-70: Determines the voltage setting for output 2. It is 20.2 V when the operating voltage is greater than 7 V, 7.07 V when the operating voltage is between 7 V and 2.5 V, and the same as the operating voltage below 2.5 V.

LINE 80: Clears the supply, sets the current of output 1 to one half of the current limit point, and sets the voltage of output 1 to the operating voltage.

LINE 90: Sets the current of output 2 to one half of the current limit point and sets the voltage of output 2 to the value determined by the operating voltage.

LINE 100: Waits 1 second before reading back output voltage and current.


LINE 110-160: Reads the output voltage of output 1 and the output current of outputs 1 and 2.

LINE 170: Prints the output voltage of the parallel outputs on the screen.

LINE 180: Prints the total output current of the parallel outputs on the screen. Note that this is the sum of the output currents of outputs 1 and 2.

B-14 PROGRAMMING OUTPUTS CONNECTED IN SERIES

To program outputs connected in series, you must first determine the maximum voltage and current that you would like to have available to your load. These values are the desired voltage limit and current limit points. Next, program the current of both outputs to this desired current limit point. The voltage of each output can then be programmed so that the sum of the voltages equals the desired voltage limit point. An easy way to do this is to set each output to one half of the desired limit point. Refer to Section IV for more information on series operation. Figures 4-13 and 4-14 are examples of series configurations which apply to both the CV and CC operating modes. Note the sense lead connections shown in Figure 4-14.

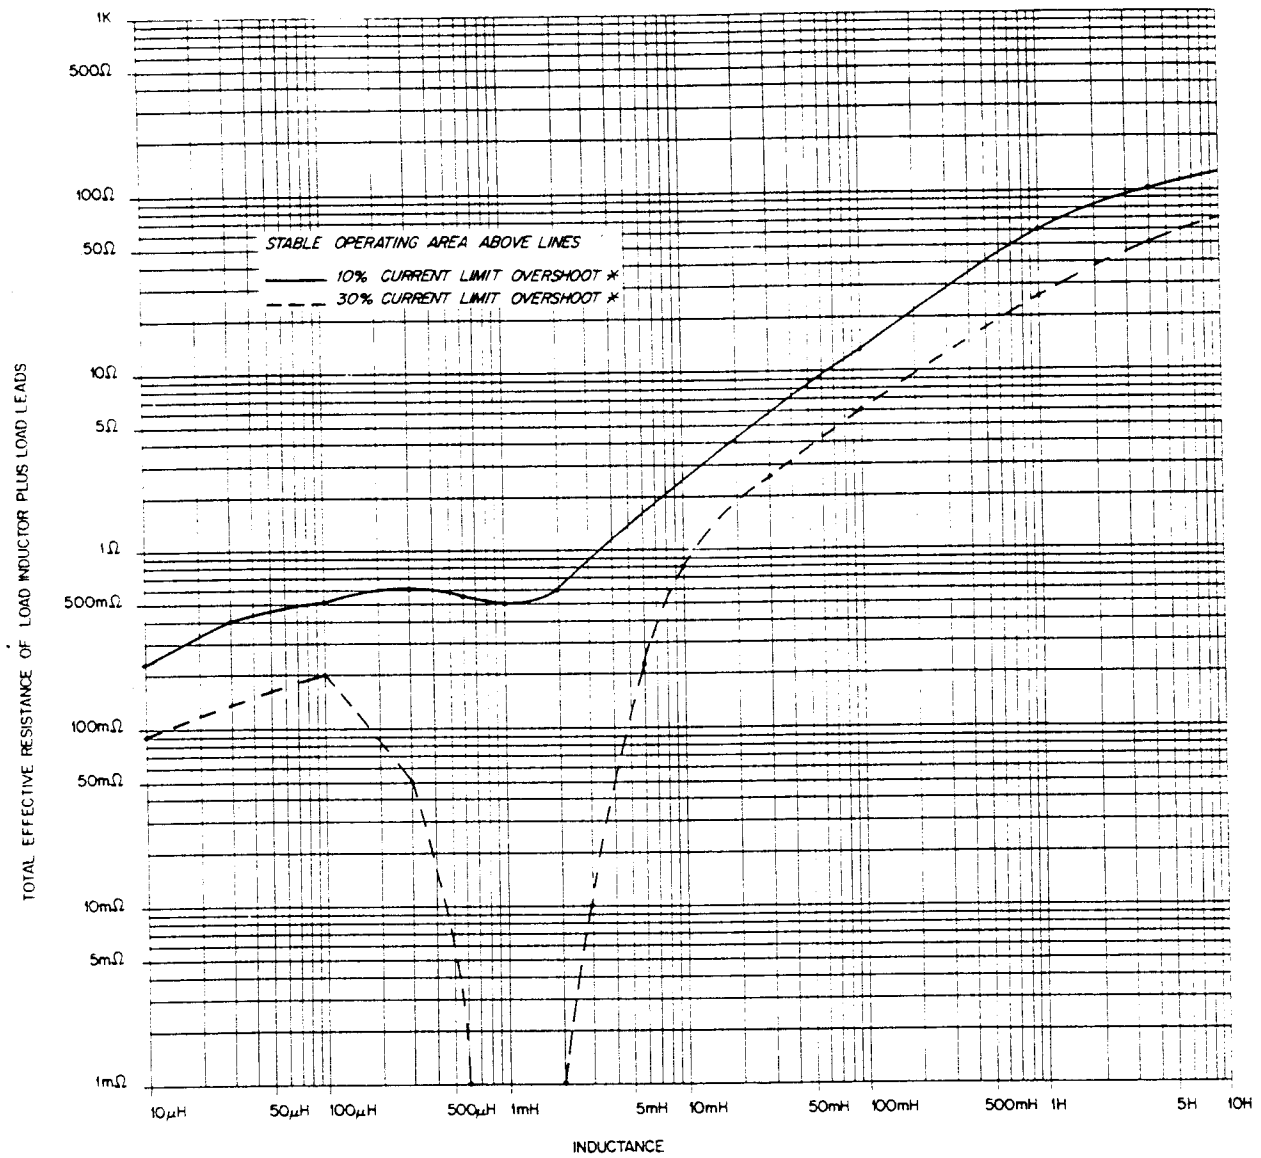

* "SMALL SIGNAL" OVERSHOOT DURING CURRENT PROGRAMMING

Figure 1-6. CC Operation with Inductive Load, Small Signal Stability Graph for LV (0 to 20 V) Outputs

For CV operation, one output must operate in CC mode and the other output must operate in CV mode. The output that is operating in CV mode will be controlling the voltage regulation of both outputs.

B-13 CV Operation

LINE 10: Assigns the I/O pathname to the power supply.
 LINE 20,30: Enter the voltage limit and operating current.
 LINE 40: Divides the total current requirement by 2.
 LINE 50: Clears the supply and sets each output to supply half of the desired operating current at any voltage up to the desired voltage limit.

```

60 END
10 ASSIGN @Ps TO 705
20 INPUT "ENTER VOLTAGE LIMIT",V
30 INPUT "ENTER OPERATING CURRENT",OC
40 C=OC/2
50 OUTPUT @Ps,"CLR,VSET1",V,"ISET1",C,"VSET2",V,"ISET2",C
60 END

```

Programming for CC operation is straightforward. Program each output to the desired voltage limit point. Then program each output to supply half of the total desired operating current. Both outputs will operate in CC mode. Note that the total desired current cannot exceed the combined current capability of both outputs. Figures 4-11 and 4-12 are examples of parallel configurations. These configurations apply to both CV and CC operating modes. Note the sense lead connections.

B-12 CC Operation

When programming outputs that are connected in parallel, it is convenient if you first know if you will be operating in CC or CV mode. Refer to Section IV for more information on parallel operation.

Only outputs that have equivalent voltage and current ratings can be connected in parallel.

CAUTION

B-11 PROGRAMMING OUTPUTS CONNECTED IN PARALLEL


LINE 10: Assigns the I/O pathname to the power supply.
 LINE 20: Disables output 1 and output 2.
 LINE 40-80: Stores 5 operating states for output 1 and output 2 in storage registers 1 through 5. Outputs not explicitly programmed will store the settings that are in effect when the store command is received.
 LINE 100: Clears the supply. All outputs are enabled and set to the initial power on state (0 volts; minimum current setting).
 LINE 110-140: Loops through the sequence of five states with a two second wait between states.

```

90 !
100 OUTPUT @Ps,"CLR"
110 FOR State = 1 TO 5
120 OUTPUT @Ps,"RCL",State
130 WAIT 2
140 NEXT State
150 END

```

Figure 1-7. Output Impedance (Typical) Graphs (See Supplemental Characteristics, Table 1-1)

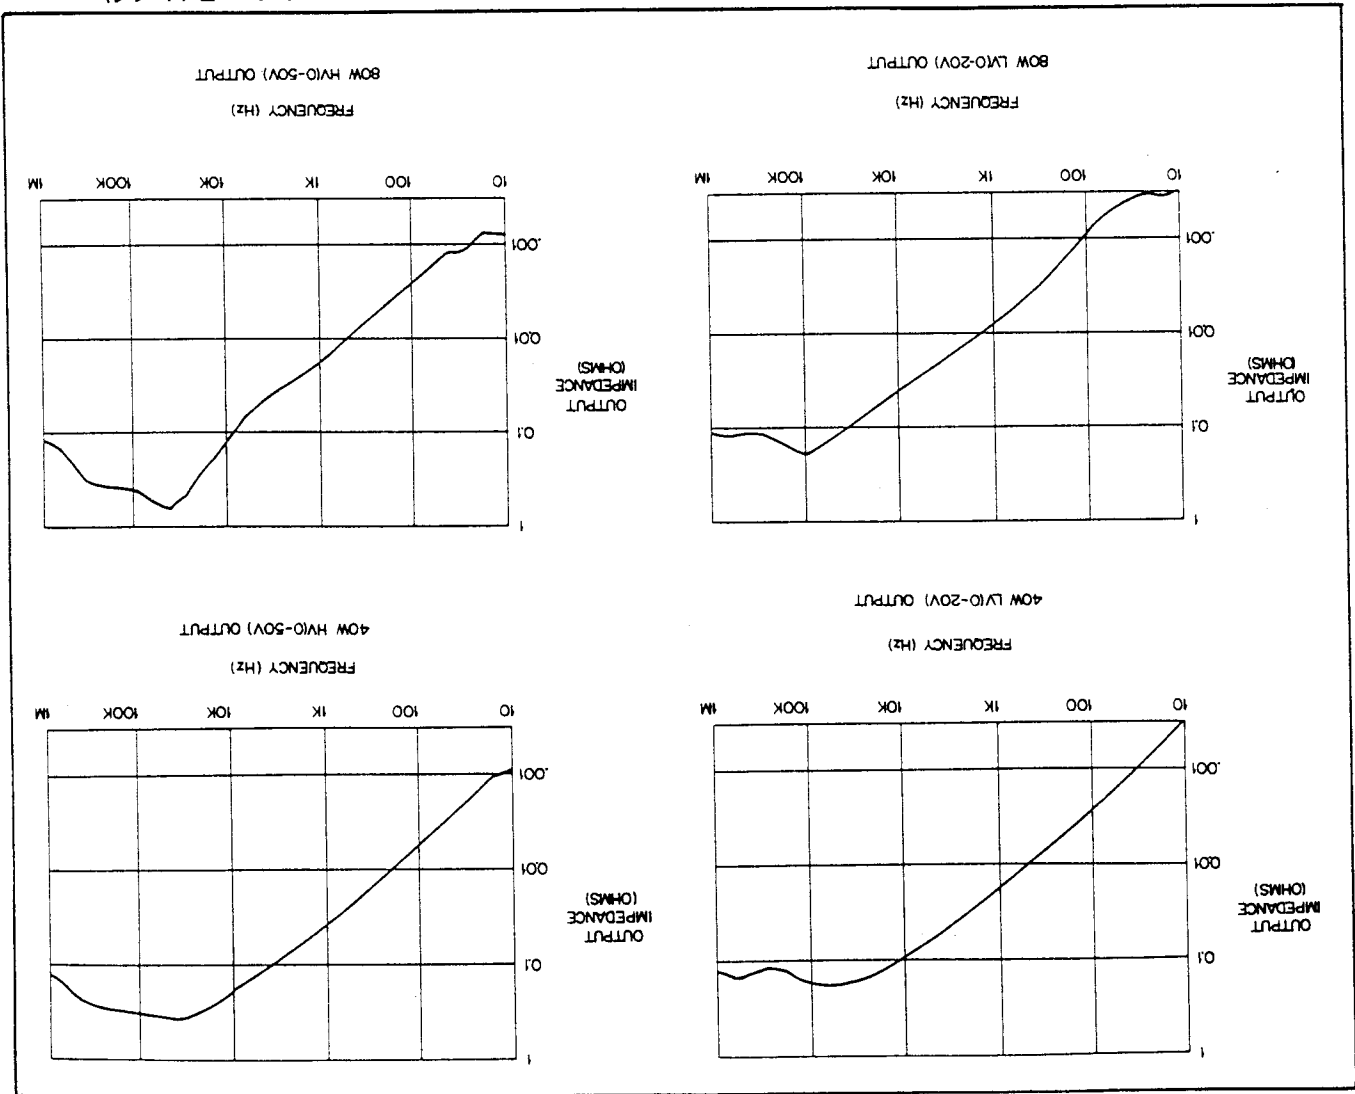

```

130 OUTPUT 2 USING "#,K";CHR$(255)&CHR$(75)
140 IF Err THEN
150 PRINT "POWER SUPPLY PROGRAMMING ERROR:"
160 END IF
170 SELECT Err
180 CASE 0
190 PRINT "NO ERROR OCCURRED"
200 SUBEXIT
210 CASE 1
220 PRINT "INVALID CHARACTER"
230 CASE 2
240 PRINT "INVALID NUMBER"
250 CASE 3
260 PRINT "INVALID STRING"
270 CASE 4
280 PRINT "SYNTAX ERROR"
290 CASE 5
300 PRINT "NUMBER OUT OF RANGE"
310 CASE 6
320 PRINT "DATA REQUESTED WITHOUT QUERY"
330 CASE 7
340 PRINT "STRING EXCEEDS DISPLAY LENGTH"
350 CASE 8
360 PRINT "NUMBER TOO LARGE FOR INPUT BUFFER"
370 CASE 28
380 PRINT "INVALID CHARACTERS IN STRING"
390 CASE ELSE
400 PRINT "UNRECOGNIZED ERROR NUMBER"; Err
410 END SELECT
420 PRINT "RE-ENTER STATEMENT AND TRY AGAIN"
430 SUBEND

```

LINE 10: Assigns the I/O path name to the power supply.
 LINE 20: Declare a common block for the I/O path name.
 LINE 30: Define interrupt on softkey depression and branch to error routine.
 LINE 40: Idle on softkey definition.
 LINE 80: Define subprogram Err_trap
 LINE 90: Disable interrupt capability while processing.
 LINE 100: Bring in the common block for the I/O pathname.
 LINE 110,120: Enter error code from power supply.
 LINE 130: Clears computer screen.
 LINE 140,150: If an error occurred, print message.
 LINE 170-420: Print message based on error code. Prompt user to try again. If no error occurred, print message saying no error occurred.

B-10 Stored Operating States

Your power supply has registers that can store up to 10 operating states. These states can be recalled in arbitrary order. Storing a state involves taking a "snapshot" of the voltage and current settings that are in effect when the command is received. The following example uses stored operating states to set up an output. Using this method of setting up outputs saves processing time and facilitates repeating the same commands.

```

10 ASSIGN @Ps TO 705
20 OUTPUT @Ps;"OUT1,0;OUT2,0"
30 !
40 OUTPUT @Ps;"VSET1,1;ISET1,.1;VSET2,5;ISET2,.1;STO1"
50 OUTPUT @Ps;"VSET1,2;ISET1,.2;VSET2,4;ISET2,.2;STO2"
60 OUTPUT @Ps;"VSET1,3;ISET1,.3;VSET2,3;ISET2,.3;STO3"
70 OUTPUT @Ps;"VSET1,4;ISET1,.4;VSET2,2;ISET2,.4;STO4"
80 OUTPUT @Ps;"VSET1,5;ISET1,.5;VSET2,1;ISET2,.5;STO5"

```


Section II INSTALLATION

2-1 INTRODUCTION

This section contains instructions for checking and mounting your power supply, connecting your supply to ac power, converting it from one line voltage to another, and connecting the HP-IB cable.

2-2 INITIAL INSPECTION

Your instrument was thoroughly inspected and tested before it left the factory. As soon as you receive it, remove the power supply from its packing case and check to make sure it has not been damaged in shipment. Check that there are no broken connectors or keys, and that the cabinet and panel surfaces are free from dents and scratches. Check the rear panel terminal blocks and front panel display for any cracks. If damage is found, you should file a claim with the carrier immediately and notify the Hewlett-Packard Sales and Service office nearest you.

Section III of this manual includes an electrical turn-on check-out procedure which, when carried out successfully, will give you a high level of confidence that the power supply is operating in accordance with its specifications. Detailed electrical checks complete with verification procedures are included in the Service Manual.

Keep the original packing materials for the carrier's inspection if there was damage, or in case any equipment has to be returned to Hewlett-Packard. Warranty information is printed on the inside cover of this manual. Remember to send a detailed description of the failure and symptoms when returning the power supply for service. Your Hewlett-Packard Sales and Service office will furnish the address of the nearest service office to which the instrument can be shipped.

2-3 LOCATION AND COOLING

Your power supply can operate without loss of performance within the temperature range of 0 to 55° C (measured at the fan intake). The fan, located at the rear of the unit, cools the supply by drawing air in through the openings on the rear panel and exhausting it through openings on the sides. Using Hewlett-Packard rack mount kits will not impede the flow of air.

Because the power supply is fan cooled, it must be installed in a location that allows sufficient space at the rear and the sides for adequate circulation of air. Either side may be restricted to have as little as 1 inch (25 mm) space.

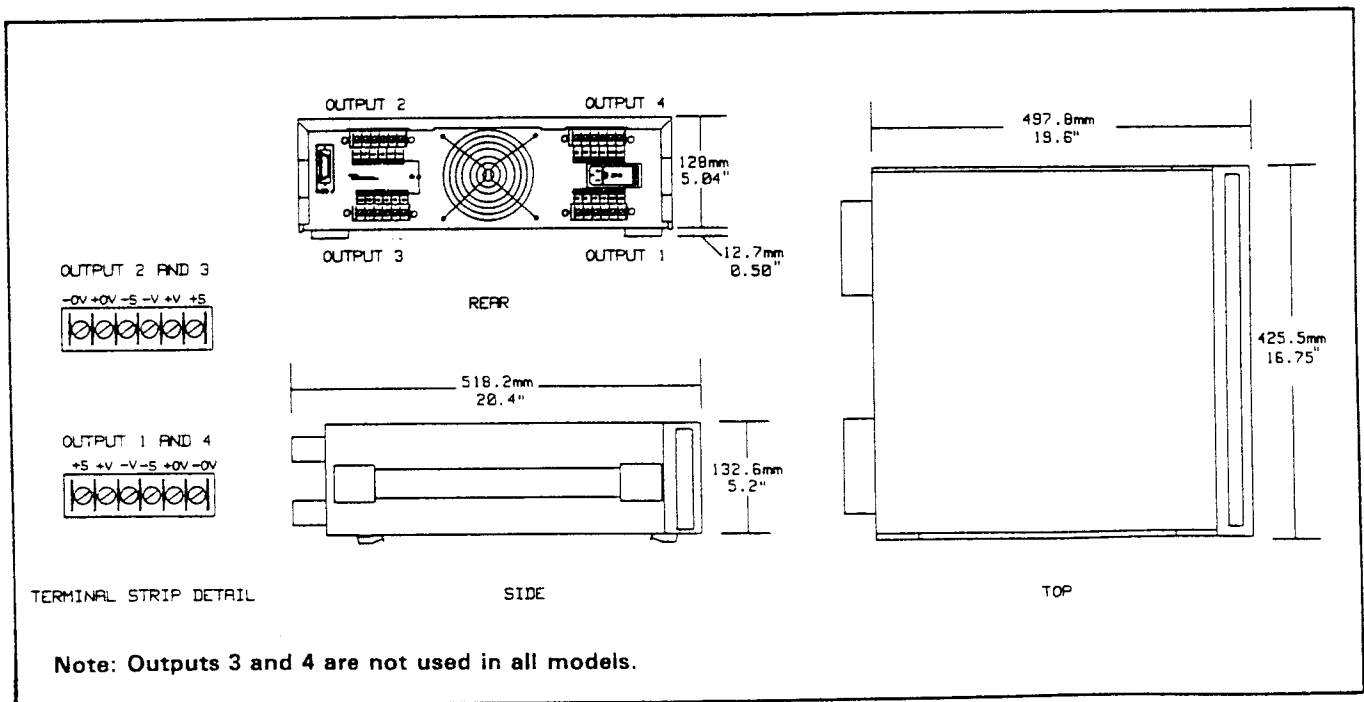


Figure 2-1. Outline Diagram

```

10 ASSIGN @Ps TO 205
20 COM /Ps/ @Ps
30 ON KEY 0 LABEL "ERROR?" CALL Err_trap
40 Lbl: GOTO Lbl
50 END
60 I
70 I
80 SUB Err_trap
90 OFF KEY
100 COM /Ps/ @Ps
110 OUTPUT @Ps;"ERR?"
120 ENTER @Ps;Err

```

The power supply can recognize programming errors and can inform you when a programming error occurs. When an error is detected, no attempt is made to execute the command. Instead, a bit in the serial poll register is set. If SRQ2 or SRQ3 is set, an interrupt will be generated. The following program checks for programming errors and can be entered and run as is. While it is running, commands can be sent to the power supply from the keyboard. If the ERROR annunciator on the power supply's front panel indicates that an error has been detected, depress the labeled softkey to display the error on your computer screen.

B-9 Error Detection


LINE 10: Assigns the I/O pathname to the power supply.
 LINE 20: Declare a common block for the I/O pathname. The COM statement must be used for the @Ps variable to preserve its value for use in the service routine.
 LINE 30: Returns the power supply to its power on state, unmask output 1's and output 2's OV status bits to generate fault, and enables the service request capability on all outputs.
 LINE 40: Define interrupt at interface 7, with HP-IB priority 1.
 LINE 50: Enable interrupt at interface 7 for service request type interrupts only.
 LINE 60: Sets the overvoltage of outputs 1 and 2 to 4 volts.
 LINE 70: Sets the voltage of outputs 1 and 2 above the OV setting so that both outputs will overvoltage when the program is run.
 LINE 80: Waits for the computer to receive the interrupt. This simulates conditions that would normally exist when a program is running.
 LINE 120: Defines the error handling routine.
 LINE 130: Disables interrupt capability while processing.
 LINE 140: Brings in the common block for the I/O pathname.
 LINE 150-180: Conducts a serial poll. If bit 0 in serial poll register indicates a fault for output 1, output 1 is disabled and the overvoltage circuit is reset.
 LINE 190-220: Checks bit 1 in serial poll register for a fault on output 2. If true, output 2 is disabled and the overvoltage circuit is reset.
 LINE 230: Reads fault registers to clear FAU bits in serial poll register.

```

130 OFF INTR
140 COM /Ps/ @Ps
150 IF BIT(SPOLL(@Ps),0) THEN
160 OUTPUT @Ps;"OUT1,0;OVRST1"
170 PRINT "OVERVOLTAGE ON OUTPUT #1"
180 END IF
190 IF BIT(SPOLL(@Ps),1) THEN
200 OUTPUT @Ps;"OUT2,0;OVRST2"
210 PRINT "OVERVOLTAGE ON OUTPUT #2"
220 END IF
230 OUTPUT @Ps;"FAULTT1;FAULTT2"
240 SUBEND

```

Figure 2-2. Rear Panel Detail (6624A Shown)

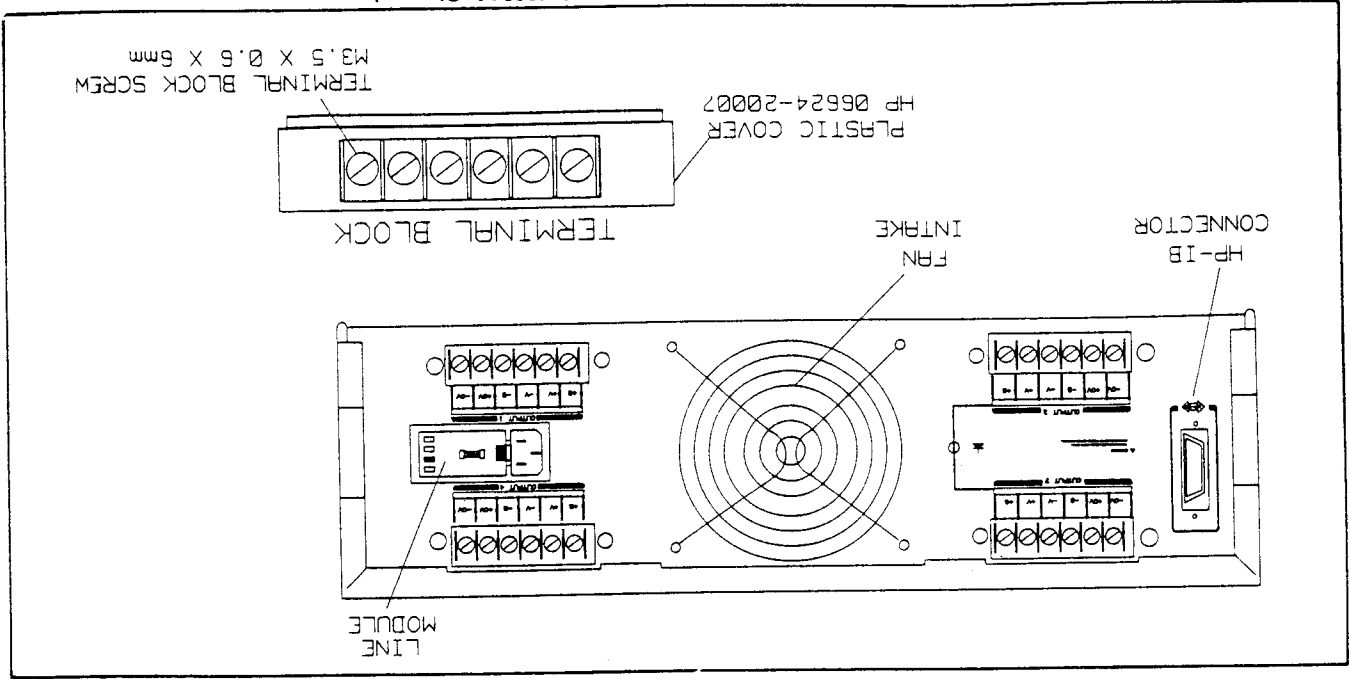

You can operate this power supply from a nominal 100 V, 120 V, 220 V or 240 V single phase power source at 47 to 66 Hz. The input voltage range, maximum input current, high line inrush current (PK), and the fuse required for each of the nominal inputs are listed in Table 2-1. You can check the line voltage setting of your supply by examining the door on the line module. This is located on the rear panel of your supply as shown in Figure 2-2. The red mark that appears in one of the four windows on the line module indicates the line voltage setting for which your supply is set.

2-4 INPUT POWER REQUIREMENTS

The power supply can be mounted in a standard 19 inch rack panel or enclosure. Rack mounting accessories for this unit are listed in paragraph 1-4 of Section I. Complete installation instructions are included with each rack mounting kit. It is recommended to use instrument support rails for non stationary applications.

Figure 2-1 gives the dimensions of the power supply cabinet. These dimensions apply to all five models. The cabinet has plastic feet that are shaped to ensure self-alignment when stacked with other Hewlett-Packard System II cabinets. The feet may be removed for rack mounting.

Nominal Voltage	Line Voltage Range	Maximum Input Current (rms)	High Line Inrush Current (PK)	Fuse	100 V
					120 V
Nominal Voltage	Line Voltage Range	Maximum Input Current (rms)	High Line Inrush Current (PK)	Fuse	220 V
					240 V
					Nominal -13%, +6%
					5.7 A
					3.0 A
					3.0 A
					85 A
					85 A
					50 A
					50 A
					4 A
					4 A

Table 2-1. Input Power

If necessary, you can convert the supply from one line voltage setting to another by following the instructions under LINE VOLTAGE CONVERSION (see paragraph 2-7).

2-5 LINE FUSE

The ac line fuse is located behind the door on the line module (see Figure 2-3). To access the fuse, remove the power cord and push against the tab on the line module in the direction of the ac input socket. The current rating of the fuse is based on the line voltage setting of your supply. Table 2-2 gives the HP part numbers for the fuses that should be used with specific line voltages. Either a 1/4 X 1 1/4 inch or a 5 mm X 20 mm normal blow type fuse should be used. Figure 2-3 shows the location of each type of fuse inside the line module.

Table 2-2. Line Fuses

Line Voltage	Fuse Needed	HP Part Number (for 1/4 X 1 1/4 in. fuses only)
100/120 V	8A	2110-0342
220/240 V	4A	2110-0055

Note: All fuses are rated for 250 V.

B-6 PROGRAMMING POWER SUPPLY REGISTERS

B-7 Present Status

The power supply makes available several forms of status information. Section 5 discusses the different registers and their functions. The present status register contains continuously updated information. The following example shows how to query bit position 0 of output 1's status register to see if output 1 is in CV mode. In this example, the program references the function as a variable in a conditional execution statement. Note that instead of printing a message, line 30 could be used to branch to another part of the program in the event that the supply is in CV mode.

```
10 ASSIGN @Ps TO 705
20 COM /Ps/ @Ps
30 IF FNCv__mode THEN
40 PRINT "OUTPUT1 IS IN CV MODE"
50 END IF
60 END
70 !
80 !
90 DEF FNCv__mode
100 COM /Ps/ @Ps
110 OUTPUT @Ps;"STS?1"
120 ENTER @Ps;Sts
130 RETURN BIT(Sts,0)
140 FNEND
```

Line 10: Assigns the I/O path name to the power supply.

Line 20: Declare a common block for the I/O path name. The COM statement must be used for the @Ps variable to preserve its value in the function subprogram.

Line 30,40,50: If FNCv__mode is true, print the message.

Line 90: Defines the Cv__mode function.

Line 100: Brings in the common block for the I/O pathname.

Line 110,120: Reads the present status of output 1 into the variable Sts.

Line 130: Returns the value of bit position 0 of Sts.

B-8 Service Request and Serial Poll

The fault and mask registers, when used in conjunction with the service request and serial poll functions, allow you to select which conditions can cause computer interrupts. The fault and mask registers can also be used independently of the serial poll or service request if so desired. The following example shows how to enable an interrupt to the computer in the case of an overvoltage condition. After the interrupt has occurred, this example includes an interrupt routine that conducts a serial poll to determine on which output the overvoltage occurred. Note that this example assumes that terminal block external OV trip lines are not wired together.

```
10 ASSIGN @Ps TO 705
20 COM /Ps/ @Ps
30 OUTPUT @Ps;"CLR;UNMASK1,8;UNMASK2,8;SRQ1"
40 ON INTR 7,1 CALL Err__trap
50 ENABLE INTR 7;2
60 OUTPUT @Ps;"OVSET1,4;OVSET2,4"
70 OUTPUT @Ps;"VSET1,5;VSET2,5"
80 Lbl: GOTO Lbl
90 END
100 !
110 !
120 SUB Err__trap
```

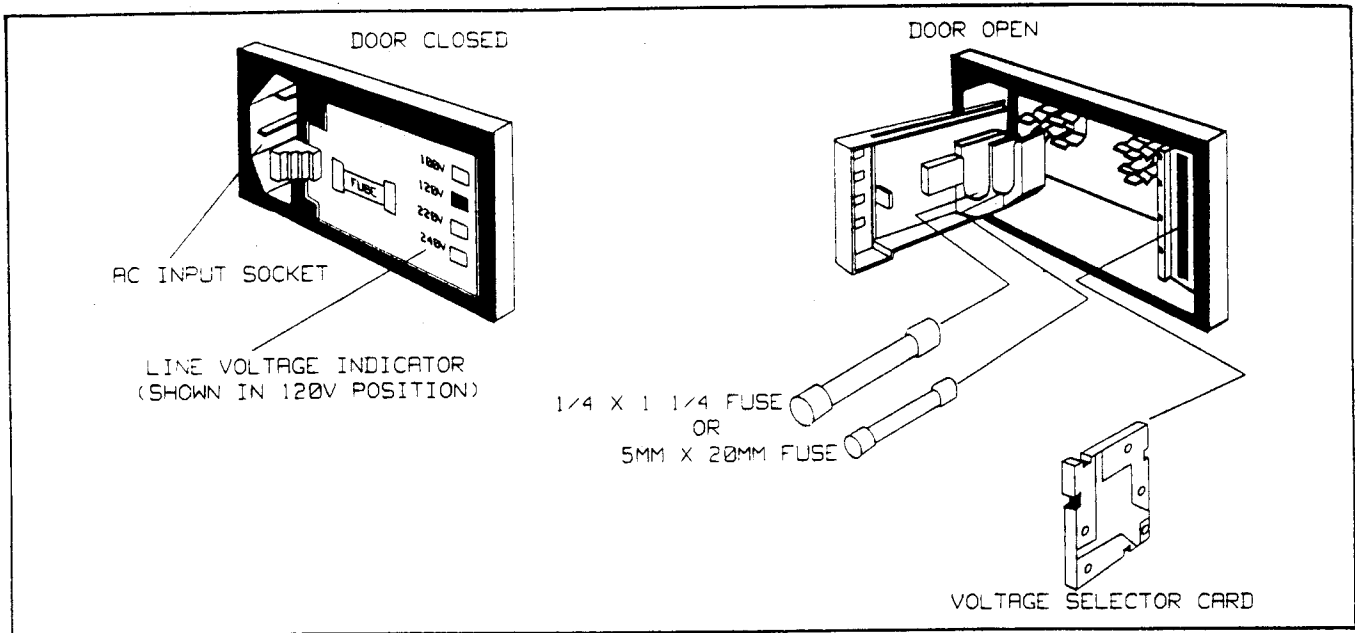


Figure 2-3. Line Module Detail

2-6 POWER CORD

The power supply is shipped from the factory with a power cord that has a plug appropriate for your location. Figure 2-4 shows the standard configuration of plugs used by Hewlett-Packard. Below each drawing is the HP part number for the replacement power cord equipped with a plug of that configuration. If a different power cord is required, contact the nearest Hewlett-Packard Sales and Service office.

For your protection, the National Electrical Manufacturer's Association (NEMA) recommends that the instrument panel and cabinet be grounded. This power supply is equipped with a three-conductor power cord; the third conductor being the ground. The power supply is grounded only when the power cord is plugged into an appropriate receptacle. Do not operate this power supply without adequate cabinet ground connection.

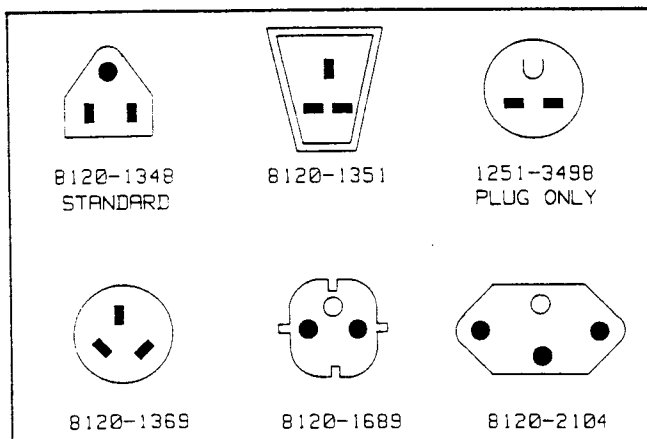


Figure 2-4. Power Cord Plug Configurations

WARNING

SHOCK HAZARD

Connect the power cord to a grounded receptacle before you connect any external floating voltages to the supply.

The offset pin on the standard three-prong power cord connector is the ground connection. If a two contact receptacle is encountered, it must be replaced with a properly grounded three-contact receptacle in accordance with the National Electrical Code, local codes and ordinances. The work should be done by a qualified electrician.

2-7 LINE VOLTAGE CONVERSION

You can change the supply to accept 100 V, 120 V, 220 V and 240 V ac input by adjusting the voltage selector card located inside of the line module (see Figure 2-3). After you have changed the line voltage, refer to Table 2-2 and check that the fuse inside the line module is the correct fuse for that line voltage. The procedure is as follows:

1. Turn off power and remove the power cord from the ac input socket on the back of the power supply.
2. To open the line module push against the tab on the line module in the direction of the ac input socket.
3. Remove the voltage selector card from its receptacle. This card is about one inch square and has a red notch in each of its four edges.

Line 10: Assigns the I/O pathname to the power supply.
 Line 20,30: Queries the supply for output 1's voltage setting. You cannot string multiple queries together in a single device command because the power supply can only return the most recently queried data.
 Line 40,50: Queries the supply for output 1's current limit.
 Line 60,70: Prints the results of the queries on the screen.

```

10 ASSIGN @Ps TO 705
20 OUTPUT @Ps;"VSET1"
30 ENTER @Ps;Vs1
40 OUTPUT @Ps;"ISET1"
50 ENTER @Ps;Is1
60 PRINT "VOLTAGE SETTING OF OUTPUT #1 = ";Vs1
70 PRINT "CURRENT LIMIT SETTING OF OUTPUT #1 = ";Is1
80 END

```

Reading back data from the power supply requires two statements. First, an output statement is used to query the power supply. A list of queries appears in Table 5-2. The power supply responds to the query by entering the requested data into a buffer. Next, an enter statement is used to read the data from the buffer on the power supply into a variable in the computer. The following program queries the power supply for the voltage and current settings of output 1 and prints the results on the screen.

B-5 VOLTAGE AND CURRENT READBACK

Reading back data from the power supply requires two statements. First, an output statement is used to query the power supply. A list of queries appears in Table 5-2. The power supply responds to the query by entering the requested data into a buffer. Next, an enter statement is used to read the data from the buffer on the power supply into a variable in the computer. The following program queries the power supply for the voltage and current settings of output 1 and prints the results on the screen.

```

10 ASSIGN @Ps TO 705
20 INPUT "ENTER A VOLTAGE FOR OUTPUT #1";V1
30 INPUT "ENTER A CURRENT LIMIT FOR OUTPUT #1";I1
40 INPUT "ENTER A VOLTAGE FOR OUTPUT #2";V2
50 INPUT "ENTER A CURRENT LIMIT FOR OUTPUT #2";I2
60 OUTPUT @Ps;"VSET1";V1;"ISET1";I1;"VSET2";V2;"ISET2";I2
70 END

```

Another way to use variables to represent data values in device commands is when using input statements to program the power supply. The following program uses input statements to program the voltage and current settings of output 1 and output 2.

Line 10: Assigns the I/O pathname to the power supply.
 Line 20: Initializes the power supply to its power on state and sets the current limit.
 Line 30,60: Increments the voltage in 0.1 V steps to 5 volts.
 Line 40: Sets the voltage of output 1 to the value of the variable "Voltage". The comma inside the quotes is required because it separates numbers in the device command (the output channel number from the voltage value in this case). A space <SF> may also be used instead of the comma. The semicolon outside the quotes is used because it suppresses the <CR> <LF> that the computer would normally send to the power supply if a comma were used as a separator after a string item. Using a comma in this case would produce a syntax error in the power supply.
 Line 50: Waits 0.2 seconds between steps.

2-8 HP-IB INTERFACE CONNECTOR

The HP-IB connector on the rear panel connects your power supply to your computer and other HP-IB devices (see Figure 2-2). Paragraph 1-5 in Section 1 lists the cables and cable accessories that are available from Hewlett-Packard. An HP-IB system can be connected together in any configuration (star, linear, or both) as long as the following rules are observed:

1. The total number of devices, including the computer, is no more than 15.

2. The total length of all the cables used is no more than two metres times the number of devices connected together, up to a maximum of 20 metres.

NOTE

IEEE Std. 488-1978 states that you should exercise caution if your individual cable lengths exceed 4 m.

Do not stack more than three connector blocks together on any HP-IB connector. The resultant leverage can exert excessive force on the mounting panels. Make sure that all connectors are fully seated and that the lock screws are firmly finger tightened. Do not use a screwdriver. Use a screwdriver only for the removal of the screws.

4. To select a voltage, insert the card into its receptacle so that after the door is closed, the red notch shows through the window next to the voltage level you require.

CAUTION

It is possible to insert the voltage selector card so that a red notch is not visible through any of the four windows. Do NOT operate the power supply while the selector card is in this position.

5. Install the correct fuse in the door of the line module if your line voltage change also requires a change in the rating of the fuse (see Table 2-2).

WARNING

FIRE HAZARD

Make sure the replacement fuse is one of the same type (size) and rating (amps) that is consistent with the voltage level you are operating at. Do not use a substitute fuse; use a fuse with the same HP Part number listed in Table 2-2. Either the inch or metric type fuse may be installed (see paragraph 2-5). Never install both types at the same time.

6. Close the door of the line module and insert the power cord in the ac input socket. Your power supply is now configured to operate at the voltage you selected.

Appendix B

PROGRAMMING WITH A SERIES 200/300 COMPUTER

B-1 INTRODUCTION

The purpose of this appendix is to serve as an introduction to programming your power supply with an HP Series 200/300 computer using the HP extended BASIC language. Examples are included that employ some of the most frequently used functions. These examples have been written so that they will run on any one of the five HP 6621A-6624A, and 6627A model power supplies. The values used in the examples (5 V and 1 A for instance), are within the operating locus of all outputs on all models. The examples program only channels one and two because all five models contain at least two channels (outputs).

You must be familiar with the BASIC language to understand the examples. If you do not recognize a programming statement, look up the keyword in the BASIC Language Reference document that was supplied with your computer, and look up the device command in Section V of this manual. Questions about program structure and selection are discussed in the BASIC Programming Techniques manual.

B-2 I/O PATH NAMES

Throughout this appendix, I/O path names are used in place of interface and device select codes. In a large program, I/O path names simplify changing the address of an instrument if necessary. Reading and writing the program is easier as well. The I/O path name can be carried in a common block and changed by a single assign statement.

In the programming examples in this appendix, the I/O path name @Ps is used for the power supply. The ASSIGN statement that defines the I/O path must precede any statements that use the I/O path name. Therefore, instead of using the statement OUTPUT 705;"VSET1,5" in the following programs, the equivalent OUTPUT @Ps;"VSET1,5" statement is used. The examples assume that the power supply is at address 5 and the HP-IB interface in the computer is select 7 (factory default).

B-3 VOLTAGE AND CURRENT PROGRAMMING

The power supply normally functions in one of two modes, either constant voltage with current limit or constant current with voltage limit. The operating mode is determined by a combination of voltage and current settings and load resistance. For example, with a 10 Ω load connected to output 1, the following program will put output 1 in constant voltage mode at 5 volts out with a 1 amp current limit. In this case the output current would be 0.5 A.

```
10 ASSIGN @Ps TO 705
20 OUTPUT @Ps;"VSET1,5;ISET1,1"
30 END
```

Line 10: Assigns the I/O pathname to the power supply.

Line 20: Sets output voltage and current. Note the use of the semicolon to separate multiple device commands.

If a 4 Ω load were used instead of a 10 Ω load, output 1 would have been operating in constant current mode at 1 amp out with a voltage limit of 5 volts. In this case the output voltage would be 4 V.

B-4 VOLTAGE AND CURRENT PROGRAMMING WITH VARIABLES

You can use variables in a program to represent data values in the device commands. This is useful in applications that require changing the voltage and current values to different predetermined settings. The following program uses a variable in a FOR NEXT loop to ramp up output voltage in 0.1 volt steps from 0 to 5 volts.

```
10 ASSIGN @Ps TO 705
20 OUTPUT @Ps;"CLR;ISET1,1"
30 FOR Voltage = 0 TO 5 STEP 0.1
40 OUTPUT @Ps;"VSET1,";Voltage
50 WAIT 0.2
60 NEXT Voltage
70 END
```


Table 3-1. Controls and Indicators (continued)

Number	Controls/Indicators	Description	Paragraph
6 (cont.)		<p>ERR- Displays a programming or hardware error message and clears the ERR bit in the serial poll register.</p> <p>STO - Used in conjunction with the numeric entry keys to store the present output voltage and current settings for all outputs in the specified internal register (1 to 10). Each register contains voltage and current settings for all output channels.</p> <p>RCL - Used in conjunction with the numeric entry keys to recall the settings from the specified internal register (1 to 10). All outputs are set to the recalled values.</p>	<p>5-37, 6-16</p> <p>5-23, 6-17</p> <p>5-23, 6-17</p>
7	<p>Output Control Keys (These twelve keys are output dependent).</p>	<p>OUTPUT SELECT - Selects one of the output channels for local control or display. This key allows the channels to be selected in forward (▶) or reverse (◀) sequence.</p> <p>VSET - Displays the selected output's present voltage setting. The setting can be changed using the numeric entry keys.</p> <p>ISSET - Displays the selected output's present current setting. The setting can be changed using the numeric entry keys.</p> <p>OUTPUT ON/OFF - Toggles the selected output on and off. When off, "DISABLED" appears on the display.</p> <p>OVSET - Displays the selected output's overvoltage trip point. The setting can be changed using the numeric entry keys.</p> <p>OVRST - Resets the selected output's overvoltage crowbar (the cause of the overvoltage must be removed before reset is successful).</p> <p>OCP - Toggles the selected output's overcurrent protection circuit on and off.</p> <p>OCRST - Resets the selected output's overcurrent condition and returns the output to its previous settings (the cause of the overcurrent must be removed before reset is successful).</p> <p>METER - Returns the display to the metering mode from any other mode (e.g. VSET). In the metering mode, the measured output voltage and current of the selected output are displayed.</p>	<p>3-6 – 3-9 6-3 – 6-13</p> <p>3-7, 3-8, 3-9, 5-17, 5-19, 6-5</p> <p>3-11, 5-18 5-19, 6-6</p> <p>5-20, 6-7</p> <p>3-8, 5-21 6-8</p> <p>3-8, 5-21 6-9</p> <p>3-9, 5-22, 6-10</p> <p>3-9, 5-22 6-11</p> <p>6-4</p>

Table 3-1. Controls and Indicators (continued)

Paragraph	Description	Controls/Indicators	Number
5-33, 6-13	DLY - Displays the reprogramming delay for the specified channel. The setting can be changed using the numeric entry keys.		7 (cont.)
5-28, 6-12	UNMASK - Displays the present setting of the mask register for the specified channel. The setting can be changed using the numeric entry keys.		8
5-28, 5-30, 6-12	FAULT - Displays the contents of the fault register for the specified channel. A bit gets set in the fault register when the corresponding bit is set in both the status and mask registers. Pressing the FAULT key also clears the fault register.		9
3-7 - 3-9, 6-4 - 6-17	0 to 9 - Set the value of the specified function and (e.g. VSET 1 6.550) → (backspace) - Erases the previous keystroke. Depressing this key without setting a value places the display in the metering mode. ENTER - Enters the values on the display for the specified function, initiates the function, and returns the display to the metering mode. Pressing this key without setting a value will result in retention of the previous values and returning the display to the metering mode.	Numeric Entry Keys (These keys are used in conjunction with many of the System Control and Output Control keys to enter the desired values into the power supply.)	
3-3	Turns ac power on and off.	LINE Switch	

3-4 Normal Self Test Indications

To turn on your supply, press the front panel LINE switch. When the power is initially applied, the supply performs a series of self tests which last about 3 seconds. Included in these tests are checks of circuits on the HP-IB board and on each of the output boards.

If the supply passes the self test, the display will first show all segments of the LCD display with annunciators on as illustrated in Figure 3-2.

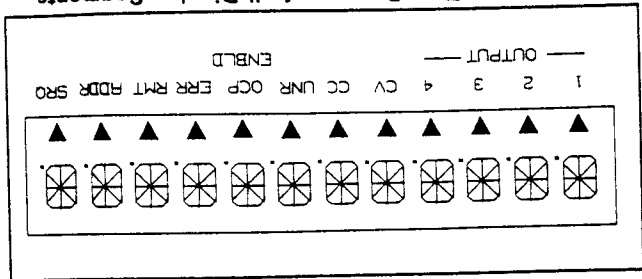


Figure 3-2. Test Pattern of all Display Segments at Power-on

The following paragraphs describe the power-on sequence which includes a self test of most of the power supply's circuits.

Before you turn on your supply, make sure that:

- The line module on the rear panel is set to match your input line voltage.
- The proper fuse is installed and the line cord is plugged in.

If you have any questions concerning installation or power requirements, review Section II.

3-3 TURNING ON YOUR SUPPLY

Table 3-1, in addition to providing a brief description of each control and indicator, lists the paragraphs in which the use of each control and indicator is described. Because most of the functions performed by the front panel controls can also be performed remotely by power supply commands, the corresponding paragraphs in Section V (Remote Operation) are listed in Table 3-1 where applicable.

```

640 COM /Instr/ @Ps,@Vm
650 WAIT .02
660 TRIGGER @Vm
670 ENTER @Vm;Reading
680 RETURN Reading
690 FNEND
700 !
710 DEF FNP_s_err
720 COM /Instr/ @Ps,@Vm
730 OUTPUT @Ps;"ERR?"
740 ENTER @Ps;Err
750 IF Err<>0 THEN PRINT "POWER SUPPLY ERROR # ";Err;" CORRECTION CONSTANTS NOT SAVED -
RESTART."
760 RETURN Err
770 FNEND

```

LINE 10: This comment line identifies the program as a CALIBRATION EXAMPLE.

LINE 30,40: Assigns I/O path names to the power supply and the voltmeter.

LINE 50: Establishes a COM block for the instruments on the HP-IB.

LINE 60: Initializes the variable Shunt_resistor to .1 ohms.

LINE 80: Clears the power supply.

LINE 90: Initializes the voltmeter to take voltage readings.

LINE 100,110: Tells the voltmeter to take a reading and clears the voltmeters output buffer. This reading is not used in the program.

LINE 120: Turns on the power supply calibration mode.

LINE 140: Labels the line "Start_loop" to loop back to when calibrating more than one output.

LINE 160: Enters the output channel number to be calibrated.

LINE 170,180: Prompts the user to make voltage calibration connections and waits for CONTINUE key to be pressed.

LINE 200: Sets the voltage of the specified output to the high calibration point.

LINE 210: Sets the variable Vhi to the output voltage as measured by the user defined function FNDvm.

LINE 230: Sets the voltage of the specified output to the low calibration point.

LINE 240: Sets the variable Vlo to the output voltage as measured by the user defined function FNDvm.

LINE 260: Sends the measured data in volts to the power supply for the specified channel.

LINE 280: Checks the power supply for errors with the user defined function FNP_s_err. If there was an error, the program goes to the line labelled Finish and the supply is cleared. The new measured data is not used and the previous calibration constants are maintained.

LINE 300: Instructs the power supply to perform an overvoltage calibration on the specified channel.

LINE 310-330: Displays a message on the computer until bit 4 (RDY) of the power supply's serial poll register indicates that the supply is finished processing the OVCAL command. This may take up to 10 seconds.

LINE 350: Checks for errors. See line 280.

LINE 370,380: Prompts the user to make current calibration connections and waits for CONTINUE key to be pressed.

LINE 400: Sets the current of the specified output to the high calibration point.

LINE 410: Sets the variable Ihi to the output current as measured by the voltmeter across the shunt resistor. Note that Ihi is in amps since the voltmeter returns volts and Shunt_resistor is in ohms.

LINE 430: Sets the current of the specified output to the low calibration point.

LINE 440: Sets the variable Ilo to the output current as measured by the voltmeter across the shunt resistor.

LINE 460: Sends the measured data in amps to the power supply for the specified channel.

LINE 480: Checks for errors. See line 280.

LINE 500: Set output voltage to 0 so that output connections may be safely moved.

LINE 520,530: Loops to Start_loop if the user has more outputs to calibrate—otherwise, continues.

LINE 550: Stores the calibration constants by turning off the power supply calibration mode.

LINE 570-600: Clears the supply and ends the main program.

LINE 630: Defines the user defined function FNDvm.

LINE 640: Brings in the COM block "Instr".

LINE 650: Waits .02 seconds for the supply to settle at the calibration points.

LINE 660,670: Takes a reading from the voltmeter.

LINE 680: Returns the voltmeter reading to the appropriate variable within the main program.

LINE 690: Ends the user defined function FNDvm.

LINE 710: Defines the user defined function FNP_s_err.

LINE 720: Brings in the COM block "Instr".

LINE 730,740: Queries the power supply for any errors.

LINE 750: If an error occurred, the computer reports the error.

LINE 760: Returns the error number to the appropriate place within the main program.

LINE 770: Ends the user defined function FNP_s_err.

After all segments are displayed, the supply's HP-IB address will appear for approximately 2 seconds as shown in Figure 3-3. As shipped from the factory, the power supply's address is set to 5. You must know this address before you can remotely program your supply (see paragraph 3-12).

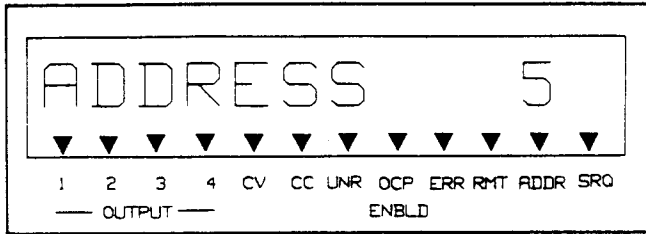


Figure 3-3. Typical Address Display During Power-On Self Test

When self test is successfully completed, the output voltage and current readings (both approximately 0) for output 1 will appear in the display as shown in Figure 3-4. Note that the CV annunciator will also indicate that the output is in the constant voltage mode.

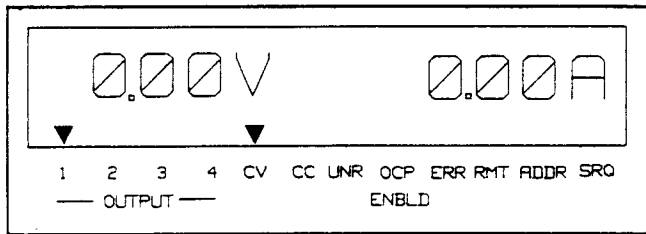


Figure 3-4. Typical Display at Power-On

3-5 Self-Test Errors

If the supply fails the power-on self-test, all power supply outputs will remain disabled (off) and the display will indicate the type of failure and the output channel on which it occurred. Figure 3-5 shows that self-test detected an error in output channel 3. Error messages that could appear on the display if self-test fails are listed below. Self-test error messages are explained in Appendix D and troubleshooting procedures are given in the Service Manual for the HP 6621A-6624A, and 6627A Power Supplies. You may also call your HP Sales office for help.

Power-On Self Test Error Messages

```

HDW ERR CH "N"
8291 FAILED
TIMER FAILED
CV DAC CH "N"
CC DAC CH "N"
OV DAC CH "N"
FUSE CH "N"
  
```

Note: "N" specifies the failed output channel number: 1,2,3, or 4 as applicable.

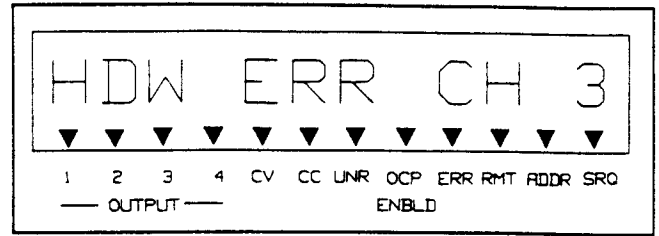


Figure 3-5. Sample Self-Test Failure Display

3-6 CHECKING OUT YOUR SUPPLY USING LOCAL CONTROL

The following procedures use the display and keys on the front panel to check each of your power supply's outputs. No test equipment, other than a jumper wire (14 AWG), is required to perform these tests. The tests must be repeated for each output of your particular supply. The checkout consists of voltage, overvoltage, and current tests. It is assumed that power has already been turned on, the supply has passed the power-on self-test, loads are not connected to any of the supply's outputs, and sense clips are connected between the sense terminals and the output terminals.

NOTE

The following procedures are identical for all models and for all outputs. Use the OUTPUT SELECT key to select an output to be tested. If an output fails any of the tests, refer to the troubleshooting section in the Service Manual

3-7 Voltage Test

1. Set the voltage of the selected output to 10 V by pressing:

2. Check that the display reads approximately 10 V and 0 A and the CV annunciator is on indicating that the supply is in the constant voltage mode of operation.

3-8 Overvoltage Test

1. Program the overvoltage protection (OVP) to 19 V by pressing:

2. Set the voltage to 16 V by pressing:

3. Check that the display reads approximately 16 V and 0 A.

4. Set the voltage to 20 V by pressing:

```

10 CALIBRATION EXAMPLE
20
30 ASSIGN @Ps TO 705
40 ASSIGN @Vm TO 722
50 COM /Instr/ @Ps, @Vm
60 Shunt_resistor = .1
70
80 OUTPUT @Ps; "CLR"
90 OUTPUT @Vm; "H T4"
100 TRIGGER 722
110 ENTER @Vm; Temp
120 OUTPUT @Ps; "CMODE 1"
130
140 startLoop: LOOP TO HERE FOR ADDITIONAL OUTPUTS
150
160 INPUT "ENTER OUTPUT CHANNEL TO BE CALIBRATED (1,2,3, or 4)"; Chan
170 DISP "SET UP OUTPUT "; Chan; " FOR VOLTAGE CALIBRATION & PRESS CONTINUE"
180 PAUSE
190
200 OUTPUT @Ps; "VHT"; Chan
210 Vhi = FNDvm
220
230 OUTPUT @Ps; "VLO"; Chan
240 Vlo = FNDvm
250
260 OUTPUT @Ps; "VDATA"; Chan, Vlo, Vhi
270
280 IF FNPs_err < 0 THEN Finish
290
300 OUTPUT @Ps; "OVCAL"; Chan
310 REPEAT
320 DISP "WAITING FOR OVERVOLTAGE CALIBRATION"
330 UNTIL BIT(SPOLL(@Ps), 4)
340
350 IF FNPs_err < 0 THEN Finish
360
370 DISP "SET UP OUTPUT "; Chan; " FOR CURRENT CALIBRATION & PRESS CONTINUE"
380 PAUSE
390
400 OUTPUT @Ps; "IH"; Chan
410 Ihi = FNDvm/Shunt_resistor
420
430 OUTPUT @Ps; "ILO"; Chan
440 Ilo = FNDvm/Shunt_resistor
450
460 OUTPUT @Ps; "IDATA"; Chan, Ilo, Ihi
470
480 IF FNPs_err < 0 THEN Finish
490
500 OUTPUT @Ps; "VSET "; Chan, "0"; ISET "; Chan, "0"
510
520 INPUT "ANY MORE OUTPUTS TO CALIBRATE? (Y OR N)"; XS
530 IF (XS = "Y" OR XS = "y") THEN startLoop
540
550 OUTPUT @Ps; "CMODE 0"
560
570 Finish: HERE WHEN DONE
580 OUTPUT @Ps; "CLR"
590 DISP "END OF CALIBRATION PROGRAM"
600 END
610
620
630 DEF FNDvm

```

ADDR

Before you can operate your power supply remotely, you need to know its HP-IB address. The address was displayed during the power on sequence described in paragraph 3-4. To see the address, press:

3-12 Reading the HP-IB Address

The supply's front panel ADDR annunciator is on when the supply is addressed to talk or to listen.

ENTER

The HP BASIC language statement that addresses the power supply to talk and reads back data from the power supply is:

OUTPUT

The programming statements you use to operate your supply from remote depend on your computer and its language. In particular, you need to know the statements your computer uses to output and enter information. For example, the HP BASIC language statement that addresses the power supply to listen and sends the command to the power supply is:

3-11 Enter/Output Statements

The programming examples that follow assume that a computer is connected to the HP-IB connector on the rear of your supply (see Section II), power is applied, and loads are not connected to any of the supply's outputs. The examples used are primarily for HP Series 200 computers using HP BASIC language. Read the manuals for your particular computer to find out which statements you must use.

The following paragraphs explain the fundamentals of operating the supply remotely from a computer. Only a few commonly used programming commands will be discussed. Refer to Section V for a detailed description of all the commands. The intent of this discussion is to help first time users to quickly become familiar with operating their supply from a computer.

3-10 INTRODUCTION TO REMOTE OPERATION

Repeat the tests given in paragraphs 3-7 through 3-9 for the other output channel (s) using the **OUTPUT SELECT** key.

14. Turn off the supply and remove the jumper from the output terminals.

13. Check that the display reads approximately 0 V and 0.5 A.

OC
RST

12. Reset the output by pressing:

OC
P

11. Disable the overcurrent protection circuit by pressing:

10. Check that the OCP ENBLD annunciator is on indicating that overcurrent protection is enabled and the display reads "OVERCURRENT". When in overcurrent, the output is disabled.

OC
P

9. Enable the overcurrent protection circuit by pressing:

8. Check that the display reads approximately 0 V and 0.5 A.

ISET . 5 ENTER

7. Set the current to 0.5 A by pressing:

6. Check that the display reads approximately 0 volts and the minimum current limit value (0.05 to 0.13A depending upon the model and output, see Table 5-4). Also, check that the front panel CC annunciator is on indicating that the output is in the constant current mode of operation.

VSET 5 ENTER

5. Set the voltage to 5 volts by pressing:

4. Use the **OUTPUT SELECT** to select the output being tested.

3. Turn on the supply.

2. Remove the barrier block cover from the output to be tested and connect a short circuit (jumper wire) between the + V and - V terminals of the output being tested.

1. Turn off the supply.

3-9 Current Test

7. Check that the display reads approximately 16 V and 0 A.

VSET 1 6 ENTER OV RST

6. Reset the supply by pressing:

5. Check that the display reads "OVERVOLTAGE".

1. CMODE <param> - This command turns the calibration mode either on or off. The parameter must be either a 1 or a 0. CMODE1 is used in the beginning of the calibration procedure to turn calibration mode on. CMODE0 is used at the end of the procedure to store the correction constants and turn calibration mode off. The CMODE? query can also be used at any time to determine if the supply is in calibration mode. A 1 indicates calibration mode is on; a 0 indicates calibration mode is off. Continue to the next command.
2. VHI <channel> - This command causes the voltage of the specified output channel to go to the high calibration point (full scale). After the command is sent, use the voltmeter to read the actual voltage <Vhi> put out by the power supply. Continue to the next command.
3. VLO <channel> - This command causes the voltage of the specified output channel to go to the low calibration point (voltage offset). After the command is sent, use the voltmeter to read the actual voltage <Vlo> put out by the power supply. Continue to the next command.
4. VDATA <channel>, <Vlo>, <Vhi> - This command is used to send the actual values measured by the voltmeter in the previous steps to the power supply. Refer to Table A-2 for the range of valid voltage readings that can be sent to the supply. <Vlo> is the voltage in volts that was measured after the VLO command was sent. <Vhi> is the voltage in volts that was measured after the VHI command was sent. The power supply uses these values to calculate the voltage and voltage readback correction constants of the specified output. Continue to the next command.
5. OVCAL <channel> - This command automatically calibrates the programmable overvoltage. This can only be done after the voltage has been calibrated. It may take up to 10 seconds for this command to execute. During this time, the front panel display indicates "CALIBRATING".

When the front panel display of the power supply no longer indicates "CALIBRATING", the overvoltage portion of the calibration procedure is complete. The voltages on the output are returned to zero volts after the overvoltage calibration. To continue with the current portion of the calibration procedure, connect a four terminal 0.1 Ω current shunt resistor (0.05%, 10 A) between the +V and -V output

terminals. Connect the voltmeter to the resistor's sense terminals. Refer to the current calibration setup in Figure A-1.

Continue calibrating output 1 with the following commands:

6. IHI <channel> - This command causes the current of the specified output channel to go to the high calibration point (full scale). After the command is sent, use the voltmeter to read the voltage drop across the current shunt resistor. Divide this reading by the shunt value to derive the actual current in amps <Ihi> put out by the supply. Continue to the next command.
7. ILO <channel> - This command causes the current of the specified output channel to go to the low calibration point (current offset). After the command is sent, use the voltmeter to read the voltage drop across the current shunt resistor. Divide this reading by the shunt value to derive the actual current in amps <Ilo> put out by the supply. Continue to the next command.
8. IDATA <channel>, <Ilo>, <Ihi> - This command is used to send the actual current values derived in steps 6 and 7 to the power supply. Refer to Table A-2 for the range of valid current readings that can be sent to the supply. <Ilo> is the current in amps that was put out by the supply after the ILO command was sent. <Ihi> is the current in amps that was put out by the supply after the IHI command was sent. The power supply uses these values to calculate the current and current readback correction constants of the specified output.

Repeat commands two through eight for any other outputs that must be calibrated on your power supply. After you have completed calibration of all outputs, turn the calibration mode off by sending the CMODE0 command (see step 1) to the power supply. The correction constants are stored in memory at this time.

A-4 CALIBRATION PROGRAM

The following calibration program can be used as is, provided you have an HP Series 200 computer with the BASIC programming language and an HP 3456A voltmeter. The calibration program is written with the assumption that your power supply is at address 705 and the voltmeter is at address 722. The program will ask you which output is to be calibrated and will prompt you to make the voltage and current calibration connections shown in Figure A-1.

A typical address display is shown in Figure 3-6:

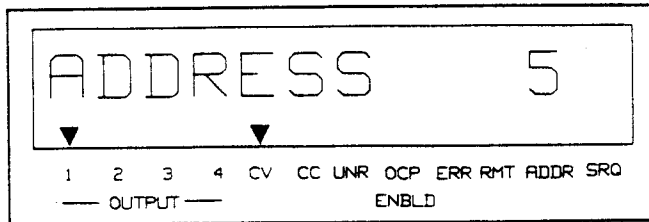


Figure 3-6. Typical Address Display

The displayed response is the power supply's HP-IB address. When sending a remote command, you append this address to the computer's HP-IB interface select code (normally 7). For example, if the select code is 7 and the power supply's HP-IB address is 5, the combination is 705.

3-13 Changing the HP-IB Address

NOTE

All examples in this discussion assume an HP-IB address of 5. It is recommended that you retain this address to simplify programming.

Every device on the HP-IB must have an address. The supply's address is factory set to decimal 5. Any address from 0 through 30 is a valid address. If you need to change the HP 662xA Supply's address press:

ADDR


You can now enter a new address. For example, press:

1 4 ENTER

You have now changed the address from 5 to 14. If you want to change the address back to 5, repeat the above procedure but use 5 instead of 14 in the last step. Note that the address is stored in the power supply's non-volatile memory and therefore will be retained through interruption of the ac line power.

3-14 Sending a Remote Command

To send the power supply a remote command, combine your computer's output statement with the HP-IB interface select code, the HP-IB device address, and finally, the power supply command. For example, to set the output voltage of output channel 1 to 2 volts, send:

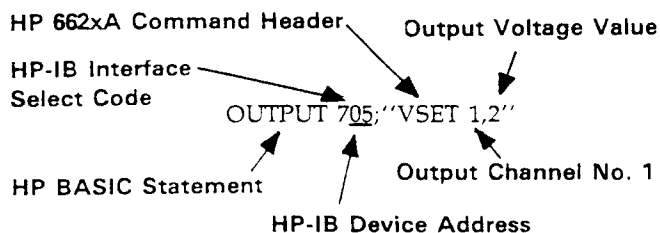

3-15 Getting Data from the Supply

The supply is capable of measuring the values of its output parameters in response to queries. In this example, the query asks the supply to measure the output voltage at output 1.

Measure Output Voltage Query

OUTPUT 705; "VOUT? 1"

Output Channel No. 1

When you send a query from remote, the supply does not display the response as it did when you executed the command from the front panel. Instead, it holds the response in an output buffer. The output buffer is a register that holds information until it is read by the computer or is replaced with new information.

NOTE

On an HP Series 200 Computer, the A variable must be declared before you do the following steps. Refer to your computer's operating manual for more information.

Use your computer's enter statement to get the response from the output buffer. For example, execute:

ENTER 705; A

Followed by:

DISP A

The ENTER statement enters whatever is in the supply's output buffer into the computer's A variable. The DISP statement displays the A variable's contents on the computer's display.

3-16 Often Used Commands

The command set contains over forty commands that allow you to program the power supply in a variety of applications. Within this command set, however, is a small subset of commands that are all you need for most applications. These commands are: VSET, ISET, VOUT?, IOUT?, OUT, OVSET, and OCP.

Each of these commands is briefly discussed in the following paragraphs to help you get started in programming your supply. To know more about these commands, refer to Section V.

3-17 Voltage and Current Programming. You can send voltage and current values to the power supply directly in volts or amps. The following examples use voltage and current values that are within the range of any output that the power supply provides.

Do not turn the power supply off during the calibration procedures. Otherwise, the correction constants are not stored. Exercise care when moving the leads.

NOTE

Start with output channel 1 and use the following commands to calibrate your power supply:

Before you continue with this procedure, disconnect all loads from the supply, strap the supply for local sensing, and connect the voltmeter to the + 5 and - 5 terminals as shown in the voltage calibration setup of Figure A-1.

while in calibration mode, send CLR or turn the supply off to maintain the previous calibration constants. This will prevent incorrect constants from being stored. See Table 5-8 for a list of errors.

The following general procedure applies to any computer that you are using to control your power supply. This procedure must be repeated for each output on your power supply. The calibration commands shown are the actual string commands that must be sent to the power supply. Because the power or invalid readings are sent to it, it is recommended that you perform some type of error checking after steps 4, 5, and 8 to ensure that the values sent to the supply are legitimate. Use the ranges in Table A-2 as a guide. If an error is detected

This procedure causes the voltage of the specified output to go to full scale value. Take appropriate precautions.

CAUTION

A-3 GENERAL CALIBRATION PROCEDURE

Output	Vio		Vhi		Ihi	
	Min	Max	Min	Max	Min	Max
40 W Low Voltage	0	0.1	18.5	20.5	0	4.5
40 W High Voltage	0.04	0.20	44	48	0	1.5
80 W Low Voltage	0	0.1	18.5	20.5	0.05	9
80 W High Voltage	0.04	0.20	44	48	0	1.5
	0.04	0.20	44	48	0	3.5

Table A-2. Voltage and Current Data Ranges

* Channels 3 and 4 are not used in all models.

Command	Header	Channel* Range	Data	Syntax (see Figure 5-2)
Calibration Mode	CMODE	-	0,1 (off,on)	C2
Set High Voltage	VHI	1,2,3,4	-	C3
Set Low Voltage	VLO	1,2,3,4	-	C3
Set High Current	IHI	1,2,3,4	-	C3
Set Low Current	ILO	1,2,3,4	-	C3
Calibrate Overvoltage	OVCAL	1,2,3,4	-	C3
Voltage Data	VDATA	1,2,3,4	see Table A-2	C5
Current Data	IDATA	1,2,3,4	see Table A-2	C5

Table A-1. Calibration Commands

When an output is turned on, it will return to the voltage and current settings determined by the present VSET and ISET values.

3-20 Overvoltage Setting. You can send an overvoltage setting value to the power supply directly in volts. If the output voltage exceeds this setting, the output crowbar is fired, and the output voltage is quickly downprogrammed and disabled (0 volts output).

To set the overvoltage value of output 2 to 3.5 volts, send:
OUTPUT 705; "OVSET 2,3.5"

3-21 Overcurrent Protection. The output will go to the off state (0 volts and min. current) when the overcurrent protection (OCP) feature is enabled and the output is in the + CC mode. To enable the overcurrent protection mode for output 2, send:

OUTPUT 705; "OCP 2,1"

To disable the overcurrent protection mode for output 2, send:

OUTPUT 705; "OCP 2,0"

When overcurrent protection is disabled and the output is in + CC mode, the output current will be limited to and will stay at the ISET value.

3-22 Returning the Supply to Local Mode

In the remote mode (RMT annunciator on), the front panel keys have no effect on any of the supply's outputs and only the computer can control the supply. However, you can still use the front panel display to monitor the output voltage and current or check any of the present settings (VSET, ISET, OVSET, etc.) of the selected output channel.

If you want to use the front panel keys to change the output settings, you must return the supply to the local mode. You can return the supply to the local mode (provided that the local lockout command has not been received from the computer) by pressing the LCL key. A change between the local and remote modes (or vice versa) will not result in a change in the power supply outputs. Refer to Section VI for additional details on using the LCL key and operating the supply in the local mode.

To set the voltage of output 1 to 5 volts, send:

OUTPUT 705; "VSET 1,5"

To set the current of output 2 to 450 milliamperes, send:

OUTPUT 705; "ISET 2,450"

3-18 Output Voltage and Current Measurement. You can instruct the supply to measure the actual output voltage and current at a specified output using the VOUT? and IOUT? queries, respectively.

To measure the output voltage at output 1, send:

OUTPUT 705; "VOUT? 1"

To get the measurement from the output buffer, send:

ENTER 705; A

DISP A

The computer should display a reading of approximately 5 volts.

To measure the output current at output 2, send:

OUTPUT 705; "IOUT? 2"

To get the measurement from the output buffer, send:

ENTER 705; A

DISP A

3-19 Output On/Off. You can turn a specified output on or off. Individual outputs can be controlled as shown below.

To turn off output 1, send:

OUTPUT 705; "OUT 1,0"

When an output is turned off, it is set to 0 volts and to the minimum current limit value.

To turn on output 1, send:

OUTPUT 705; "OUT 1,1"

Appendix A CALIBRATION PROCEDURES

INTRODUCTION

This appendix discusses the software calibration procedures for the power supply. These supplies should be calibrated annually or whenever certain repairs are made (see Service Manual).

Because there are no internal or external hardware adjustments, your power supply can be calibrated without removing the covers or removing it from the cabinet if it is rack mounted. Calibration is performed by measuring actual output values and sending them to the supply over the HP-IB. The power supply uses these values to calculate output, readback, and overvoltage correction constants. These correction constants are stored in a non-volatile memory on the HP-IB interface board of the supply. Thereafter, when a command such as "VSET1,5" is sent to set the voltage on output 1, the power supply uses the correction constants to accurately program the output.

Correction constants for offset and full scale voltage and current values are stored for one output channel at a time. A separate calibration command calculates and stores correction constants for the internal overvoltage circuit. This appendix lists the equipment that you need, shows the test setup to perform the calibration, gives a general calibration procedure that explains all of the calibration commands, and gives a sample program you can use if you have a HP 3456A voltmeter and a HP Series 200/300 computer with BASIC.

Security against accidental calibration is available. A jumper inside the unit may be moved to disable all calibration commands. Access to this jumper requires opening the unit (see the Service Manual).

Tables A-1 and A-2 give the data ranges for all of the power supply calibration commands. Refer to Figure 5-2 for the syntax structure of the calibration commands. You can either execute the calibration commands directly from the keyboard, or you can use them in a program to reduce the time involved in calibrating each output.

NOTE

The memory used to store correction constants will accept and store data about 10,000 times, which is more than sufficient for normal calibrations over the life of the instrument. However, do not put the unit in a calibration loop that repeatedly turns the calibration mode on and off.

A-2 TEST EQUIPMENT AND SETUP REQUIRED

The following test equipment is required for calibration:

1. A computer connected to the HP-IB connector on the back of the power supply.
2. A voltmeter accurate to 0.003% of reading.
3. A precision 0.1Ω , $\pm 0.05\%$, 10 amp shunt resistor (4 terminal).

Figure A-1 shows the setup required for calibrating both voltage and current. Observe polarity when connecting the voltmeter. Note that for voltage calibration, the voltmeter leads are connected to the +S and -S terminals and NOT the +V and -V terminals. Note that for both + and - current calibration the voltmeter leads are connected to the shunt resistor's sense terminals.



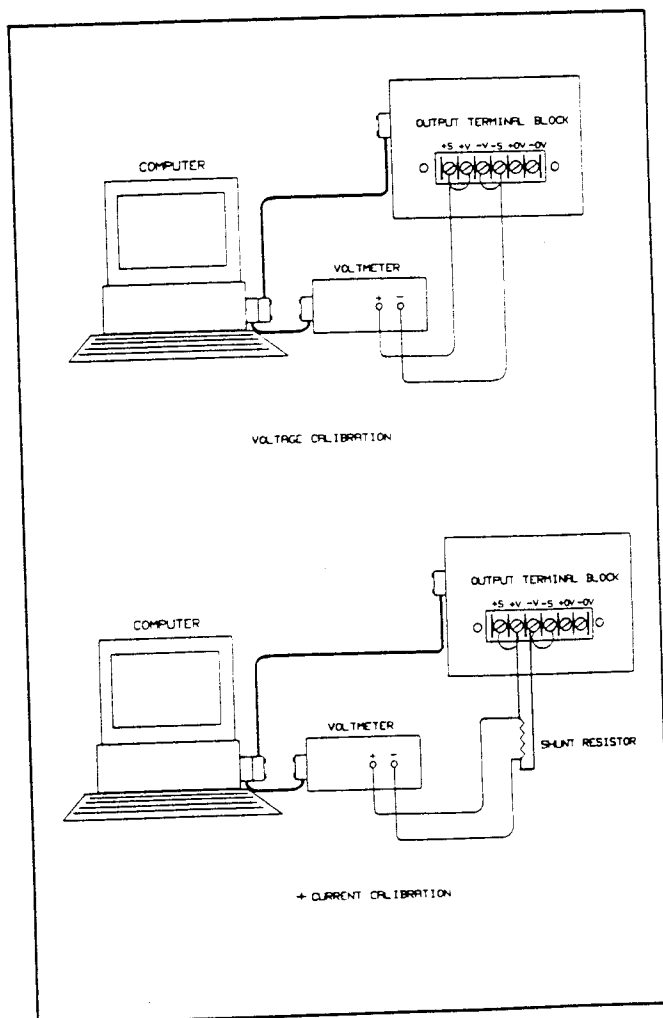



Figure A-1. Calibration Setup

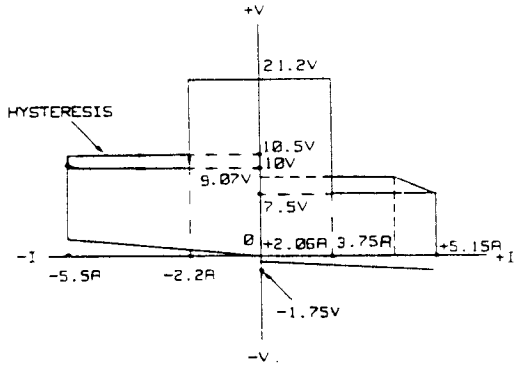


40W LOW VOLTAGE OUTPUT

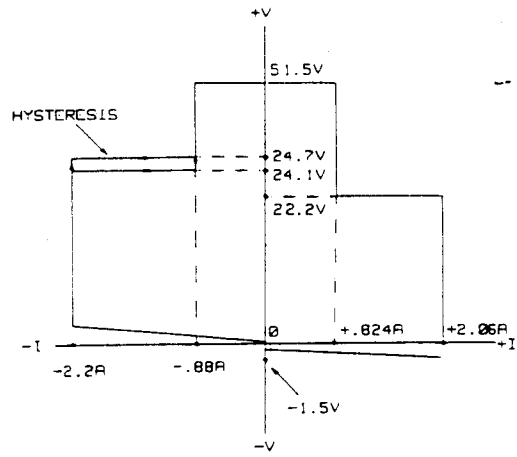


40W HIGH VOLTAGE OUTPUT

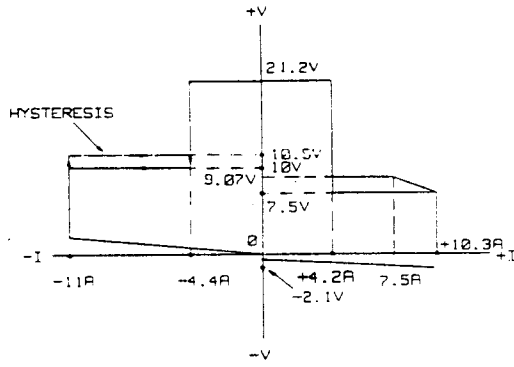


80W LOW VOLTAGE OUTPUT

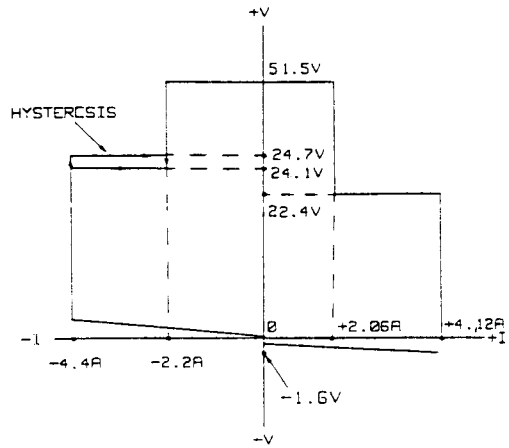

80W HIGH VOLTAGE OUTPUT

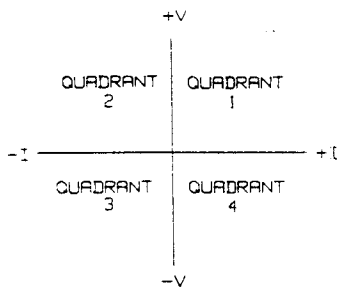

- QUADRANT 1 = CV OR +CC OPERATION
- QUADRANT 2 = CURRENT SINK OPERATION (CV OR -CC)
- QUADRANT 4 = REVERSE DIODE CHARACTERISTIC

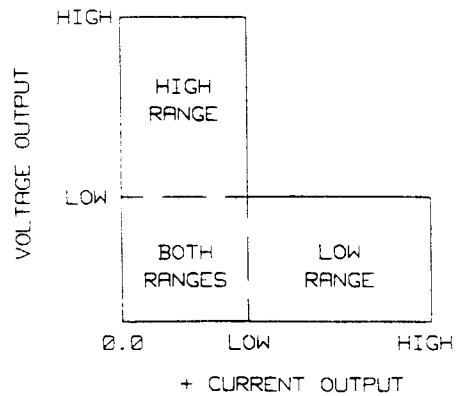

QUADRANT 1 RANGES

Figure 4-2. Typical Output Range Characteristics

all outputs. At power on each location contains zero volts and the minimum current limit (see paragraph 5-15).

The STO and RCL keys allow you to store and recall voltage and current settings for all your output channels from any of the ten internal registers (numbered 1 through 10). For example, you can store the present settings of voltage and current for all the output channels in internal register 2 by pressing:

STO 2 ENTER

You can change the settings of any of your supply's outputs any number of times as required and then program them to the settings stored in internal register 2 by pressing:

RCL 2 ENTER

The internal register will not retain the settings when power is turned off. When power is turned off and then on again, each internal register will be reset to the zero voltage and minimum current settings of each output channel.

The advantages in using the internal registers are that command processing time is saved and repetitive programming of different settings is simplified. The STO key can be used in conjunction with the OUTPUT ON/OFF key to store settings while the outputs are disabled (OFF). These stored settings can be used later to program the outputs to the stored settings using the RCL and OUTPUT ON/OFF keys.

Any integer from 0 through 30 can be selected.

For example, you can change the address of your supply to 10 by pressing:

ADDR 1 0 ENTER


The power supply can detect both programming and hardware errors. Upon detecting an error, the ERR annunciator on the front panel comes on and the ERR bit in the serial poll register will be set (see paragraph 5-29).

When an error is detected, you can display the error message by pressing the ERR key. The power supply will return the error message to the display and clear the error bit. For example, if you program a number that is not within the valid range, the ERR annunciator will come on. You can display the error message by pressing the ERR key. In this case, the error message "NUMBER RANGE" will be displayed. Errors generated either locally from the front panel or remotely from the HP-IB computer can be displayed by pressing the ERR key only when the supply is in the local mode. Pressing the ERR key also clears the error bit so if you press ERR again, the message "NO ERROR" will appear. All error codes and associated display messages are listed in Table 5-8.

6-17 Storing and Recalling Voltage and Current Settings for All Outputs

As described in paragraph 5-23, the power supply has 10 internal registers for storing voltage and current settings of

Figure 4-3. Typical Downprogramming Characteristic Below 2.0 V

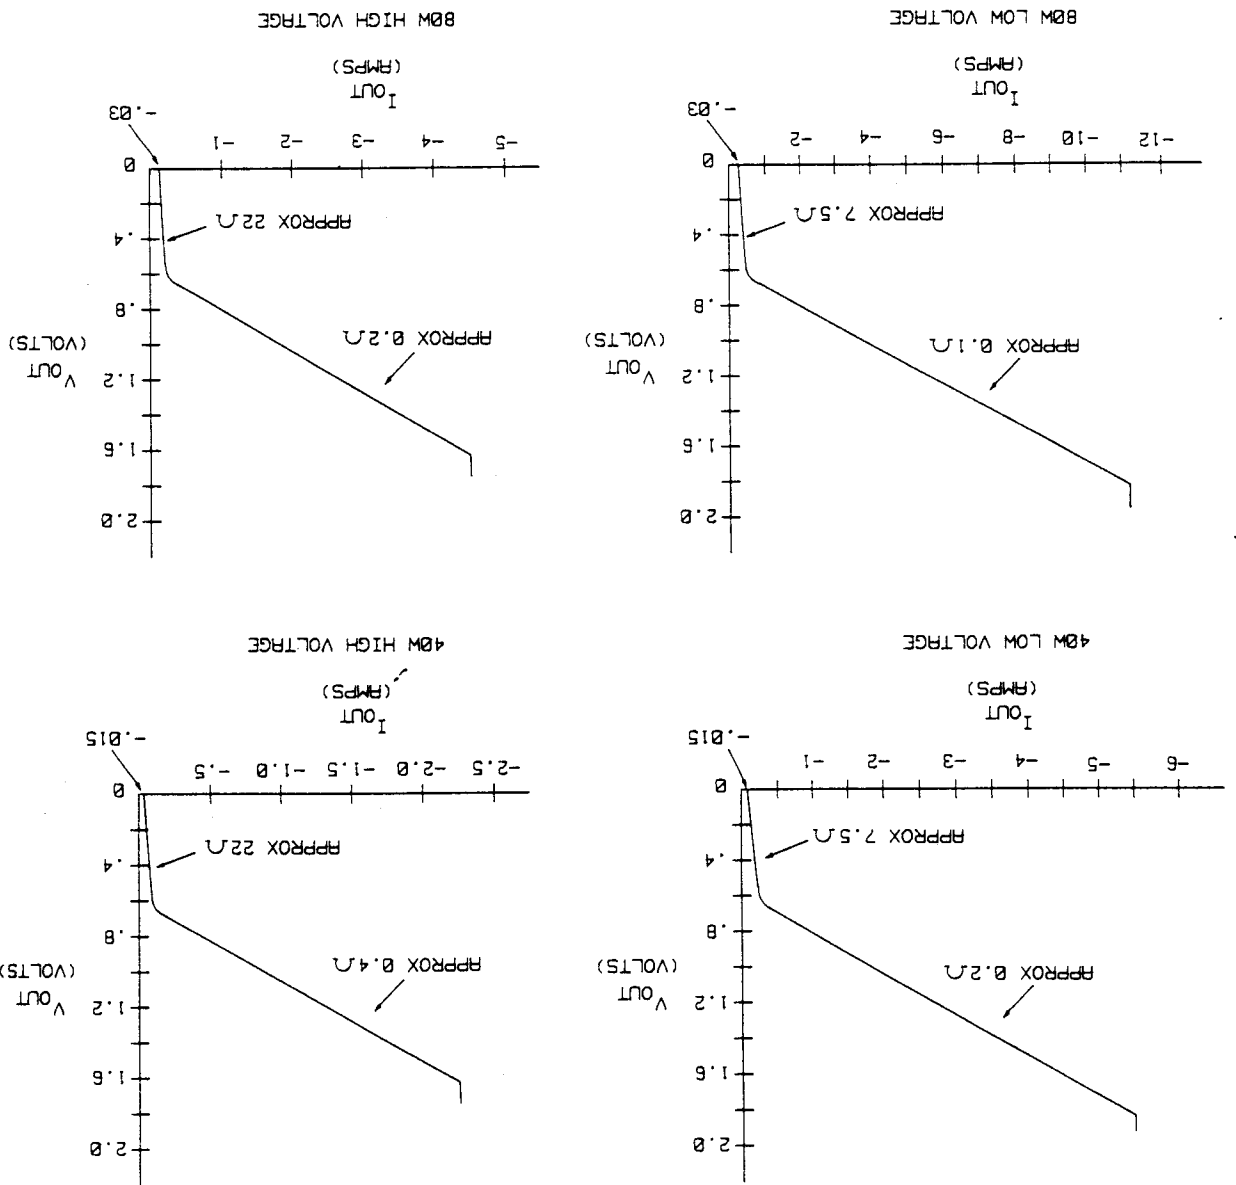

The selected output's overcurrent protection feature can be turned on and off from the front panel. The OCP key toggles the selected output's overcurrent protection circuit on and off. When it is on (enabled), the OCP ENBLD annunciator will be on.

6-11 Resetting Overcurrent Protection

The condition that activated the OCP circuit must first be cleared and then the output can be returned to its previous state by pressing the OCRST key.

6-12 Displaying the Contents of the Fault Register

Each output channel has a fault register which can be used in conjunction with the status and mask registers to report a fault condition. A detailed description of these registers is given in Section V. The main points of this description are repeated below for continuity in explaining how to use the front panel UNMASK and FAULT keys.

The mask register, which is set by the user, is used to specify which bits in the status register are enabled (unmasked) to set bits in the fault register. A bit is set in the fault register when the corresponding bit in the status register changes from 0 to 1 and the corresponding bit in the mask register is 1. Each output channel has its status, mask, and fault registers arranged as shown in Table 6-1.

Table 6-1. Bit Arrangement of the Status, Mask, and Fault Registers

Bit Position	7	6	5	4	3	2	1	0
Bit Weight	128	64	32	16	8	4	2	1
Condition	CP	OC	UNR	OT	OV	-CC	+CC	CV

Note that bits can be set in an output's fault register only when there is a change in either the status register or the mask register. Therefore, if a bit is set in the mask register (unmasked) while the corresponding condition is true in the status register, the associated bit will also be set in the fault register.

The UNMASK key is used to send a decimal number that is the sum of the weights of the bits to be set. The decimal number 0 will clear all bits in the mask register so that status register bits cannot set any of the corresponding fault register bits.

The following example uses the number 9 (8 + 1) to set the OV bit (8) and the CV bit (1) in the mask register of the selected output.

UNMASK **9** **ENTER**

This example allows only an OV and/or CV condition to appear as faults; i.e., set the corresponding bits in the fault register. Note that the mask register does not affect the status

register; it simply determines which bits in the status register can set bits in the fault register.

When you press the FAULT key, the contents of the fault register are displayed. For example, the display 9 indicates that the OV and CV bits in the fault register are set. The fault register is cleared immediately after it is read by pressing FAULT.

6-13 Setting the Reprogramming Delay

A power supply's output may switch modes momentarily after a new output value is programmed or the output is reset from zero. To prevent these momentary conditions from appearing as faults, each output has a reprogramming delay parameter. The delay parameter specifies a time period in which the CV, +CC, -CC, and UNR bits in the present status register are masked from the fault register and from the overcurrent protection (OCP) circuit after certain commands are sent. Refer to paragraph 5-33 for additional details about the reprogramming delay parameter.

The delay time is initiated following a VSET, ISET, OVRST, OCRST, OUT on/off, or RCL command that is sent from the front panel (or from a remote controller).

The delay time is settable from 0 to 32 seconds in .004 s (4 ms) intervals. The default (or power on value) is 20 ms.

For example, set the delay time of the selected output to 345 mS by pressing:

DLY **.** **3** **4** **5** **ENTER**

6-14 LOCAL CONTROL OF SYSTEM FUNCTIONS

The System Function keys consist of the ADDR, ERR, STO, and RCL keys as shown in Figure 6-1. These keys are independent of the output selected and are used in setting the supply's HP-IB address, displaying error messages, and storing/recalling voltage and current settings for all of the supply's output channels.

6-15 Setting the Supply's HP-IB Address

As described in paragraph 3-12, before you can operate the supply remotely, you must know its HP-IB address. You can find this out locally from the front panel by pressing:

ADDR

The supply's present address will appear in the display. Address 5 is the factory set address.

If you want to leave the address set at 5, you can return to the metering mode by pressing the METER key or you can press another function key.

If you want to change the address, you can enter a new value.

4-6 CONNECTING THE LOAD

Each terminal block cover on the rear panel is secured by a locking tab which snaps into a slot at the left of the terminal block. To remove, insert a screwdriver into this rectangular slot and move the locking tab to the left. When the locking tab releases, gently pull the terminal block cover away from the terminal block. To reinstall the cover, align it over the terminal block and gently press it into position until the locking tab engages.

WARNING

SHOCK HAZARD

Turn off ac power before making rear panel connections. All wires and straps must be properly connected with terminal block screws securely tightened. Replace terminal block covers before reapplying power.

Each rear terminal block has six M3.5 x 0.6 x 6 mm screws for attaching wires (see Figure 2-2). Load connections to the supply are made at the +V and -V terminals on each terminal block. Do not connect unterminated wires to the load

terminals. Wires used for load connections must be properly terminated with termination connectors securely attached. Remember to replace the impact resistant plastic covers (HP P/N 06624-20007) over the terminal blocks after making connections.

4-7 Wire Size Selection

WARNING

FIRE HAZARD

Select a wire size large enough to carry short-circuit current without overheating. Two factors must be considered when selecting wire size for load connections: conductor temperature and voltage drop. To satisfy safety requirements, load wires must be heavy enough not to overheat while carrying the short-circuit output current of the unit. Table 4-1 lists the current-carrying capacity (ampacity) for various sizes of stranded wire.

Note that the minimum wire size required to prevent overheating may not be large enough to prevent OV trip and

Table 4-1. Stranded Copper Wire Ampacity and Maximum Wire Lengths to Limit Load Lead Voltage Drop

Wire Size	Ampacity Per Wire (Amps)		Resistivity	Max Length to Limit Voltage Drop to 1 V Per Lead		
	2 Wire Bundled	4 Wire Bundled		5 A	10 A	20 A
(AWG)			(Ω /ft)	(feet)		
20	7.8	6.9	0.0102	20	10	5
18	14.5	12.8	0.0064	30	15	7.5
16	18.2	16.1	0.0040	50	25	12.5
14	29.3	25.9	0.0025	—	40	20
12	37.6	33.2	0.0016	—	—	30
(Cross Section Area in mm ²)			(Ω /m)	(meters)		
0.5	7.8	6.9	0.0401	5	2.4	1.2
0.75	9.4	8.3	0.0267	7.4	3.8	1.8
1	12.7	11.2	0.0200	10	5	2.6
1.5	15.0	13.3	0.0137	14.6	7.2	3.6
2.5	23.5	20.8	0.0082	—	12.2	6

Notes:

1. Ampacities for AWG wires are derived from MIL-W-5088B. Maximum ambient temp: 55°C. Maximum wire temp: 105°C.
2. Ampacities for metric wires are derived from IE Publication 335-1.
3. Ampacity of aluminum wire is approximately 84% of that listed for copper wire.
4. Because of wire inductance considerations, it is recommended that you keep your load leads twisted, tie wrapped, or bundled together and less than 50 feet (14.7 meters) in length per lead.
5. See Section 4-7 for information on wire gauge considerations with capacitive loads.

The power supply will accept programming values directly in volts and amps. The programmable voltage, current, and overvoltage ranges for the outputs of each model are given in Table 5-4. The power supply will round off the values received to the nearest multiple of the resolution for that particular output. If you send a value out of the valid range, it will not be executed and the ERR annunciator will come on. You can get a readout of the error on the display by pressing the ERR key. For an out-of-range error, the error message "NUMBER RANGE" will be displayed.

When you press the VSET, ISET, OVSET, DLY, or UNMASK key, the output selected and the present setting for that function will be displayed. For example, the front panel display in Figure 6-1 shows the VSET function for output 2 set to 1.250. You can change the setting using the numeric entry keys. Pressing the number keys will cause the present numeric setting to become blank and be replaced with the new numbers on the display. You can use the — key to erase previous keystrokes if you make a mistake.

Pressing the ENTER key will enter the values displayed for the function indicated, initiate that function, and return the display to the metering mode in which the measured output voltage and current for the selected output are displayed. Pressing the ENTER key without entering numbers will result in retention of the previous values and return to the metering mode. You can also return to the metering mode at anytime by pressing the METER key.

6-5 Setting Voltage

The selected output's voltage is programmed locally using the VSET key. For example, program the voltage to 5.25 volts by pressing:

VSET 5 . 2 ENTER

The front panel display then indicates the actual output voltage and current for the selected output.

6-6 Setting Current

The selected output's current is programmed locally using the ISET key. For example, program the current to 1.5 amps by pressing:

ISET 1 . 5 ENTER

The power supply will accept any programmed current between zero and the minimum programmable current and automatically set the output to the minimum programmable current without causing a programming error. See Table 5-4.

As described in paragraph 5-19, each output channel has a dual output range. The range is determined by the last value of voltage (VSET) or current (ISET) programmed.

6-7 Enabling/Disabling an Output

The selected output channel can be turned on and off from the front panel. The OUTPUT ON/OFF key toggles the selected output on and off. When an output is turned off, the message "DISABLED" will be displayed.

The OUTPUT ON/OFF key will not affect any other programmed functions nor will it reset an overvoltage or overcurrent condition. An output disabled by the OUTPUT ON/OFF key will behave as if it were programmed to zero volts and minimum current.

6-8 Setting Overvoltage Protection

Programmable overvoltage protection (OVP) guards your load against overvoltage by crowbaring and downprogramming the power supply output if the programmed overvoltage setting is exceeded.

A fixed OVP circuit with a trip level about 20 percent above the maximum programmable voltage acts as a backup to the programmable OVP. When overvoltage protection is activated, the output is shorted and the message "OVERVOLTAGE" will appear on the front panel display.

The selected output's overvoltage setting is programmed locally using the OVSET key. For example, program the overvoltage to 10.5 volts by pressing:

OVSET 1 0 . 5 ENTER

6-9 Resetting Overvoltage Protection

The condition that caused the OV must first be cleared and then the output can be returned to its previous state by pressing the OVRST key.

6-10 Enabling/Disabling Overcurrent Protection

The overcurrent protection feature guards against excessive output currents. When the output goes into the + CC mode and OCP is enabled, the OCP circuit is activated which downprograms the output voltage and disables the output. For this condition, the message "OVERCURRENT" appears on the front panel display.

Because of the unavoidable voltage drop developed in the load leads, the as-shipped terminal block strapping pattern shown in Figure 4-4 does not provide the best possible voltage regulation at the load. The remote sensing connections shown in Figure 4-5 improve the voltage regulation at the load by monitoring the voltage there instead of at the supply's output terminals. This allows the power supply to automatically compensate for the voltage drop in the load leads. Remote sensing is especially useful for CV

4-10 REMOTE VOLTAGE SENSING


Either positive or negative voltages can be obtained from the supply by grounding (or "commoning") one of the output terminals. Always use two wires to connect the load to the supply regardless of where or how the system is grounded. This supply can be operated with any output terminal ± 240 Vdc (including output voltage) from ground.

4-9 Positive and Negative Voltages

When a load is connected through relay or switch contacts, contact bounce may activate the overvoltage circuit and shut down the supply. Therefore, it is recommended that the output be downprogrammed to 0 or turned-off (disabled) before the relay (or switch) contact is opened or closed.

NOTE

Figure 4-4. Optimum Hookup for Multiple Loads, Local Sensing

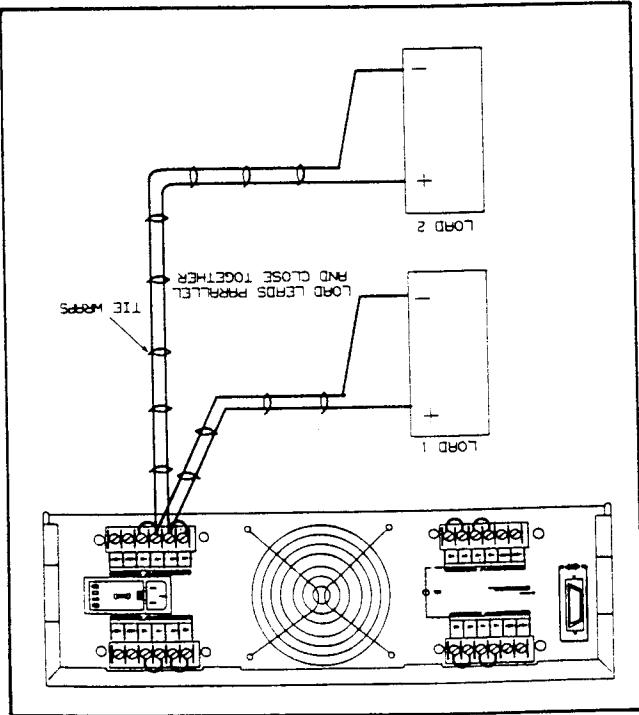

If load considerations require the use of distribution terminals that are located remotely from the supply, connect the power supply output terminals to the remote distribution terminals by a pair of twisted or bundled wires. Connect each load to the distribution terminals separately. Remote voltage sensing is recommended under these circumstances. Sense either at the remote distribution terminals or, if one load is more sensitive than the others, directly at the critical load.

If you are using the as-shipped terminal block strapping pattern (local sensing) and are connecting multiple loads to one output, connect each load to the output terminals using separate connecting wires (see Figure 4-4). This minimizes mutual coupling effects and takes full advantage of the power supply's low output impedance. Each pair of wires should be as short as possible and twisted or bundled to reduce lead inductance and noise pickup.

4-8 Multiple Loads

Load lead resistance is an important factor relating to the CV stability of the supply with remote sensing of capacitive loads. If high capacitance loads are expected, you should not use wire gauges heavier than 12 to 14 AWG for long runs of load lead. See Figure 1-4 for more information about stability with output capacitors.

The OVP circuit senses at the main output terminals and not on the sense leads. Thus, the voltage sensed by the OVP circuit could be as much as 2 V higher than the voltage being regulated at the load. Program the OVP trip voltage accordingly when using remote sensing. In addition, if the voltage drop exceeds 1.5 V on either load lead, a protective circuit will fire the OVP circuit regardless of the OVP setting.

NOTE

Table 4-1 lists the resistivity for various wire sizes and the maximum lengths to limit the voltage drop to 1.0 volts for various currents.

To prevent tripping of the overvoltage circuit, pick a wire size sufficient to handle the FULL output current of the unit no matter what the intended load current or current limit setting.

NOTE

to maintain good regulation. The load wires should be large enough to limit the voltage drop to no more than 1.0 volt per lead. Only 0.5 volt drop per lead is allowed when programming to maximum voltage settings. (See Figure 4-6). With remote sensing, load regulation is degraded 1 mV per 200 mV in the -V output terminal load lead. (See Section 4-11).

Section VI LOCAL OPERATION

6-1 INTRODUCTION

Section III introduced you to the supply's front panel controls and indicators to help you turn on the supply and perform the checkout procedures that were given in that section. The following paragraphs describe how to use all of the front panel controls and indicators. Most of the remote operations described in Section V can also be performed locally from the supply's front panel.

6-2 LOCAL MODE

In order to use the front panel keys to control the supply, the local mode must be in effect. The local mode is in effect immediately after power is applied. Table 5-3 lists the initial settings for all of the power supply's functions when power is initially applied. When the local mode is in effect (RMT annunciator off), the Output Function, System Function, and Numeric Entry keys on the front panel (see Figure 6-1) can be used to operate the power supply.

In the remote mode (front panel RMT annunciator on), the front panel keys will have no effect on any of the supply's outputs and only the computer can control the supply. You can, however, still use the front panel display to view the

output voltage and current readings or the present settings for the selected output channel while the supply is in the remote mode.

You can return the supply to the local mode from the remote mode by pressing the LCL key provided that the local lockout command has not been received from the HP-IB controller. Pressing the LCL key will also turn the supply's display back on if it was turned off with a DSP command during remote operation (see paragraph 5-34). A change between the local and remote modes will not result in a change in the power supply's outputs.

6-3 LOCAL CONTROL OF OUTPUT FUNCTIONS

The Output Function keys (see Figure 6-1) allow you to control the selected output. Figure 6-1 shows the annunciator arrow over OUTPUT 2 indicating that output channel 2 is selected. Pressing the OUTPUT SELECT key selects the output channels in forward (▶) or reverse (◀) sequence. Note that Figure 6-1 illustrates the front panel for the HP 6624A supply which has four output annunciators. The HP 6627A front panel also has four annunciators. The front panels for HP Models 6621A, 6622A, and 6623A are identical to Figure 6-1 except they have fewer output annunciators.

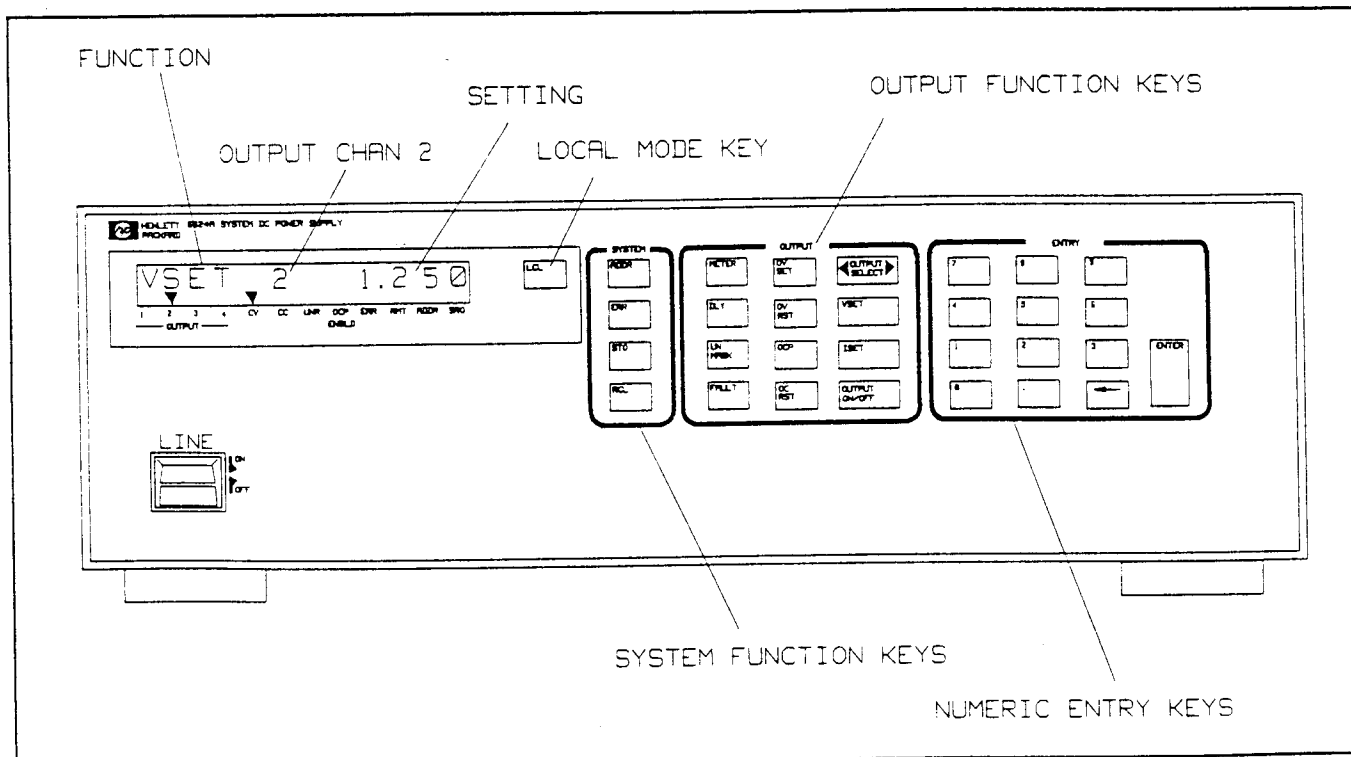


Figure 6-1. Front Panel (Model 6624A shown)

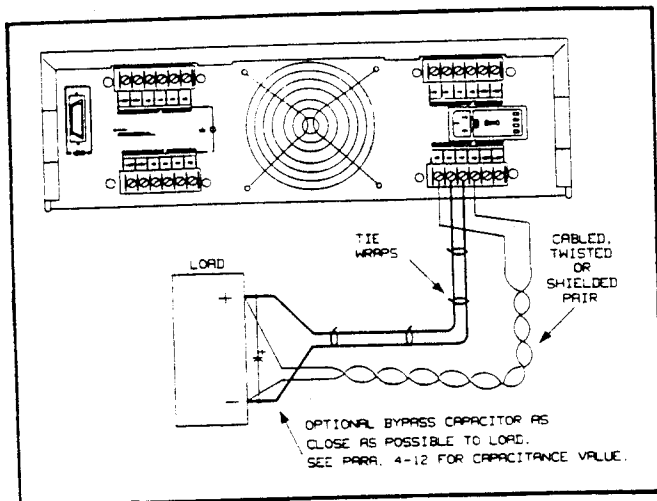


Figure 4-5. Remote Voltage Sensing

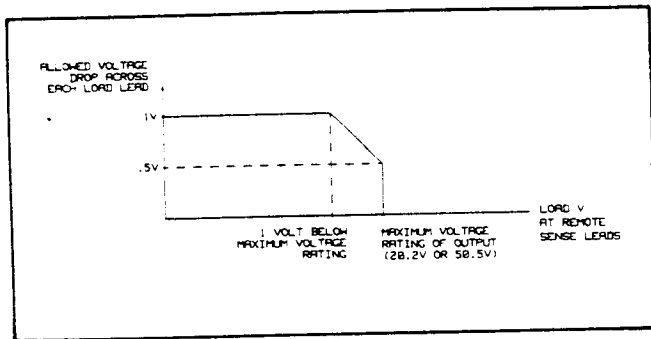


Figure 4-6. Allowable Load Lead Voltage Drop with Remote Sensing

operation with load impedances that vary or have significant lead resistance. It has no effect during CC operation. Because sensing is independent of other power supply functions, remote sensing can be used regardless of how the power supply is programmed. Note that with remote sensing, voltage readback monitors the load voltage at the sense points.

The maximum voltage available at the power supply output terminals during remote sensing (see Figure 4-6) is the maximum voltage (20.2 V or 50.5 V) rating plus one volt (i.e. 21.2 V or 51.5 V as shown in Figure 4-2). This allows a voltage drop of 0.5 V per load lead, or one volt total. For lower output voltages refer to Figure 4-2.

4-11 Remote Sense Connections

Remember to turn off the power supply before making or changing any connections on the rear panel terminal blocks. Connect the unit for remote sensing by first disconnecting the straps between sense and load terminals. Then make your connections as shown in Figure 4-5. Connect the sense leads as close to the load as possible. See paragraph 4-7 for

information on selection of load lead wire gauge. Best results will be obtained by using the shortest load leads practical. It is recommended that you keep your load leads under 14.7 metres (50 feet) per lead because of inductance effects.

The sense leads carry only a few milliamperes of current and therefore, can be lighter gauge than the load leads. However, note that any voltage drop in the sense leads can degrade the voltage regulation of the supply. Try to keep the sense lead resistance less than about 0.5Ω per lead (this requires 20 AWG or heavier for a 50 foot length). You can use the following formulas to calculate the CV load regulation error when using remote sensing:

OUTPUT TYPE
(40 W & 80 W)

FORMULA

$$\text{LV Output CV Reg Error(mV)} = R_s \left(\frac{V_{\text{set}}}{45} - \frac{V_{\text{drop}}}{1.1} \right)$$

$$\text{HV Output CV Reg Error(mV)} = R_s \left(\frac{V_{\text{set}}}{105} - \frac{V_{\text{drop}}}{3.3} \right)$$

CV Regulation Error = Remotely sensed voltage will change by this number of millivolts.

R_s = Resistance of each sense lead in Ω.

V_{set} = Programmed voltage value in volts.

V_{drop} = Total drop in the load leads in volts.

In addition, include ±1 mV error per 200 mV drop in the -V load lead independent of R_s value.

4-12 Output Noise Considerations

Any noise picked up on the sense leads will appear at the supply's output and may adversely affect CV load regulation. Twist the sense leads or use a ribbon cable to minimize the pickup of external noise. In extremely noisy environments it may be necessary to shield the sense leads. Ground the shield at the power supply end only; do not use the shield as one of the sensing conductors.

The noise specifications in Table 1-1 apply at the power supply output terminals when using local sensing. However, voltage transients may be produced at the load by noise induced in the leads or by load current transients acting on the inductance and resistance of the load lead. If it is desirable to keep voltage transient levels to a minimum, place an aluminum or a tantalum capacitor, with an approximate value of 10 μF per foot (30.5cm) of load lead, right across the load (see Figure 4-5). Refer to Figure 1-4 for capacitive load stability considerations.

Code	Explanation
0	This is the response to the TEST7 query when there are no errors.
20	The timer has failed self-test. Refer to the troubleshooting section in the Service Manual.
21	The RAM has failed self-test. Refer to the troubleshooting section in the Service Manual.
27	The ROM has failed the checksum test. Refer to the troubleshooting section in the Service Manual.

Table 5-9. TEST7 Responses

of OV terminals (see Figure 4-8). As long as all OV terminals are wired together, the outputs will be crowbarred simultaneously.

4-16 External Trigger Circuit

Figure 4-8 illustrates a recommended external circuit that can be used to provide an OV trip signal to the OV terminals. This circuit configuration provides good noise immunity and protects against the voltage pulse that is returned from the OV terminals every time that the overvoltage circuit fires. It can be operated from a wide range of bias voltages provided the input limiting resistors are chosen as tabulated in the figure. If it is not required to trip the OV with a TTL signal, then a bias supply, switch, current limiting resistor (R2), and protection diode are all that are required. Note that with the unit off (ac power removed), the +OV and -OV terminals are inactive.

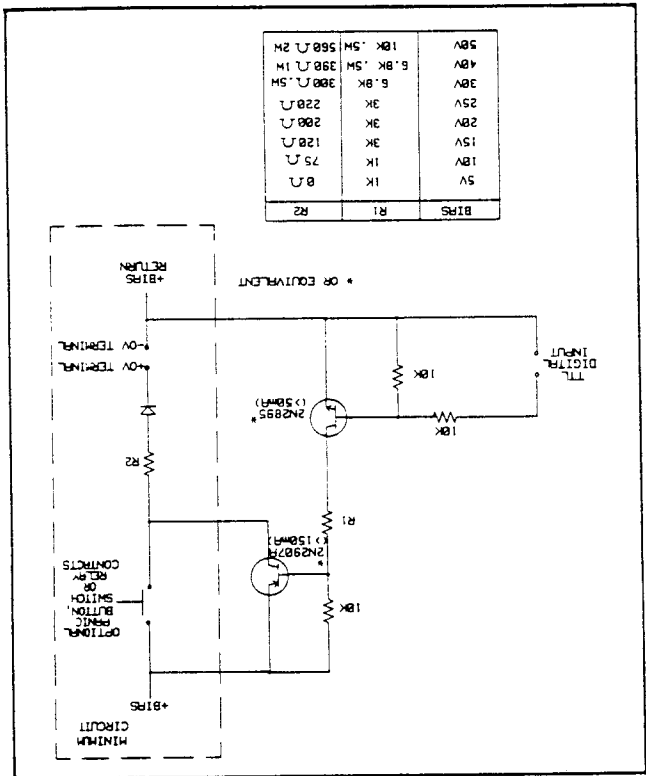


Figure 4-8. External Trigger Circuit

The internal equivalent OV circuit is shown in Figure 4-9. Note the internal DC blocking capacitor, bleed resistor, and noise bypass capacitors.

CAUTION

Do not exceed 50 volts maximum between the +OV and the -OV terminals. The OV terminals are rated at ±240 Vdc (including external OV voltage) from chassis ground or any other output terminals.

4-13 Programming Response Time with an Output Capacitor

Because voltage programming into an external output capacitor may cause the supply to briefly enter CC operating mode, voltage programming response time may be longer than that specified in Table 1-1. Use the following formula to estimate the additional response time:

$$\text{Additional Response Time} = \frac{\text{Added Output Capacitor}(\text{Change in Volt})}{\text{Current Limit Setting}}$$

4-14 Open Sense Leads

The sense leads are part of the supply's feedback path. Connect them in such a way so that they do not inadvertently become open circuited. The power supply includes protection resistors that reduce the effect of open sense leads during remote-sensing operation. If the sense leads open during operation, the supply returns to the local sensing mode, with the voltage at the output terminals approximately 2.5% higher (low voltage outputs) or approximately 3% higher (high voltage outputs) than the programmed value.

4-15 OVERVOLTAGE TRIGGER CONNECTIONS

Each output of your power supply has two OV terminals on its rear panel terminal block. These terminals are labeled +OV and -OV. By connecting the OV terminals all in parallel as shown in Figure 4-7, an overvoltage shutdown on any one output will also trigger the overvoltage on the remaining outputs. Any number of OV terminals up to eight sets can be strapped together. Observe polarity when connecting the OV terminals in parallel.

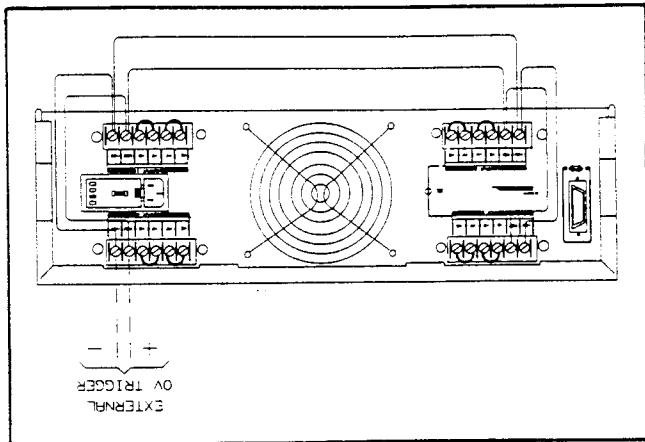


Figure 4-7. Overvoltage Connections

The overvoltage trip point for each output can be set either from the front panel or by remote programming. You can also externally fire the overvoltage circuit of one or more outputs by applying a 5 volt pulse of at least 50μs to any pair

Table 5-8. Error Messages

Front Panel Response	HP-IB Code	Explanation
NO ERROR	0	This is the response to the ERR? query when there are no errors.
INVALID CHAR	1	You sent the supply a character it did not recognize.
INVALID NUM	2	Format of your number is incorrect. Check number syntax.
INVALID STR	3 or 28	Occurs when you send a command the supply does not understand.
SYNTAX ERROR	4	Either too many parameters are sent without delimiters or the number representation is incorrect. Follow the Syntax Diagram in Figure 5-2. Check spaces and delimiters.
NUMBER RANGE	5	An out of range number was sent. Send a new number within the legal range.
NO QUERY	6	Computer addressed the supply to talk, but it did not first request data. Send query first then address supply to talk.
DISP LENGTH	7	Quoted string exceeds the display length of 12 characters. Shorten string to a maximum of 12 characters.
BUFFER FULL	8	This error may occur if too many numbers are sent. Error #4 or #5 may occur first.
EEPROM ERROR	9	EEPROM is not responding correctly to programming commands. An instrument failure has occurred and service is required.
HARDWARE ERR	10	An output error has occurred in an unknown output. Service is required.
HDW ERR CH 1	11	Errors 11 through 14 refer to a specific output where there is an output error. Service is required.
HDW ERR CH 2	12	Same as in Error #11
HDW ERR CH 3	13	Same as in Error #11
HDW ERR CH 4	14	Same as in Error #11
NO MODEL NUM	15	The interface cannot find its model number. There may be a hardware failure or the instrument may require reprogramming. Service is required.
CAL ERROR	16	You tried to use either a calibration command with CMODE off or the calibration failed while in CMODE. Enable CMODE and check numbers sent during calibration. Also, there could be a hardware error.
UNCALIBRATED	17	There is an incorrect checksum in the EEPROM possibly as a result of incorrect calibration procedure. Recalibrate, and if the problem persists, your supply has a hardware failure.
CAL LOCKED	18	Calibration was attempted with the Calibration Jumper on the HP-IB board in the lockout position. Reposition jumper if desired. See Service Manual.
SKIP SLF TST	22	The self test jumper on the HP-IB board is in the Skip Self Test position. No self-test was done. This is for diagnostics only. See Service Manual.

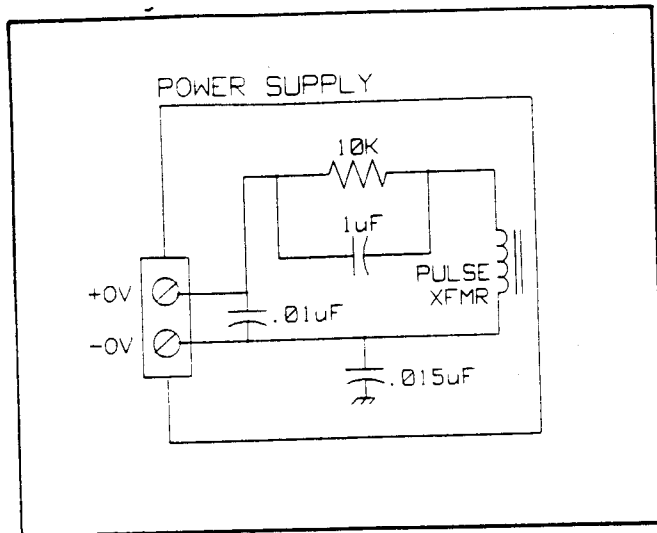


Figure 4-9. Equivalent Internal OV Trigger Circuit

4-17 POWER SUPPLY PROTECTION CONSIDERATIONS

4-18 Battery Charging

If you are using your supply in a battery charging application, it is recommended that a series protection diode be added to prevent damage to the supply during an overvoltage shutdown. Remember that each output has an overvoltage protection circuit that fires a crowbar to disable the output for any of the OVERVOLTAGE conditions described in paragraph 4-5.

Figure 4-10 illustrates the recommended connections and protection circuit for a battery charging application. The diode will prevent damage to your supply that can result from excessive battery current flowing into the supply's output in the event of an overvoltage shutdown.

4-19 Capacitive Load Limitation

The programmable overvoltage protection circuit can be used to downprogram capacitive loads although it is primarily intended for use as a protection feature as described in paragraph 4-5.

CAUTION

Repetitive (over 100 cycles) tripping of the overvoltage circuit with output capacitors greater than 5000µF on high voltage units and 20,000µF on low voltage units may result in eventual damage to the supply.

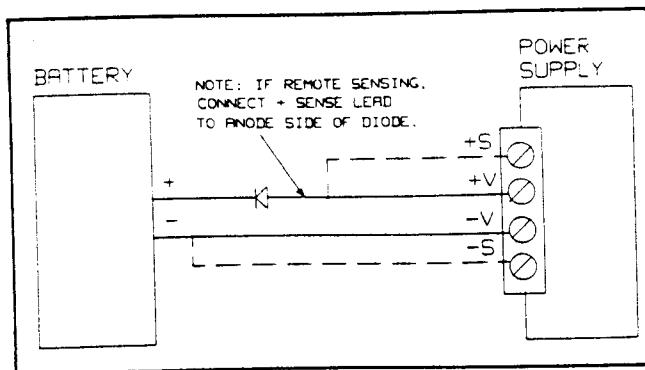


Figure 4-10. Recommended Protection Circuit for Battery Charging

4-20 PARALLEL OPERATION

CAUTION

Connect in parallel only outputs that have equivalent voltage and current ratings.

Connecting outputs in parallel provides a greater current capability than can be obtained from a single output. Because each output contains an active downprogrammer that is capable of sinking current from only ONE identical output, you can parallel no more than two outputs. These outputs must have equivalent voltage and current capability. For example, you can connect the 40 W low voltage outputs together because they have the same voltage and current ratings, but you cannot connect a 40 W high voltage and a 40 W low voltage output together because they have different voltage and current ratings.

As an example, Figure 4-11 shows how to connect two outputs in parallel to a single load with local sensing. This configuration applies to both CV and CC operating modes. Connecting the load leads of output 2 directly to the +V and -V terminals of output 1 keeps the total length of the load leads to a minimum and reduces the number of wire connections that must be made at the load itself. Connecting the +S and -S terminals of output 2 directly to the sense terminals of output 1 compensates for the IR drop in the interconnecting load leads.

4-21 CV Operation

For CV operation, one output must operate in CC mode and the other output must operate in CV mode. Although each output operates independently of the other, the output that is operating in CV mode will be "controlling" the voltage regulation of both outputs. Setting the output voltages as outlined in the following paragraph and configuring the outputs as shown in Figure 4-11 will allow output 1 to operate in CV mode and output 2 to operate in CC mode.

The supply will respond with a "1" which indicates that CMODE is on or a "0" which indicates that CMODE is off.

CMODE?

5-40 Calibration Mode Query. To be able to calibrate your power supply, the calibration mode (CMODE) must be turned on (See Appendix A for a detailed description of the calibration procedure). To find out if the CMODE is on or off, send the following query over the HP-IB and address the supply to talk:

TEST?

5-39 Test Query. You can get the power supply to perform a limited self-test at any time during its operation by sending the TEST? query over the HP-IB. This test does not affect the analog control circuits of the supply and it can be performed while the outputs are connected to external circuits. For tests of the analog control circuits refer to Section III. Responses to the test query are described in Table 5-9. This test cannot be done from the front panel. To instruct the power supply to carry out a self-test, send the following query and address the supply to talk:

ID?

5-38 ID Query. If you want to know the model number of the power supply you are working with, you can send the ID? query over the HP-IB. To do this send the following over the HP-IB and address the supply to talk.

The supply will respond with an error code number (see Table 5-8).

ERR?

5-37 ERROR Query. The power supply can detect both programming and hardware errors. You can use either the front panel (see paragraph 6-16) or the HP-IB to find out the type of error. Upon detecting an error, the error annunciator on the front panel and the ERR bit in the serial poll register will be set. When in local mode the supply will display the error name in response to pressing the ERR key on the front panel. Over the HP-IB, only the error code will be returned. After a query, the error bit is cleared. A description of these codes is given in Tables 5-8. To find out what the error is, send the following query and address the supply to talk:

In the examples discussed above, you saw how to use queries for each function discussed. The following paragraphs describe other queries which were not previously covered.

5-36 Other Queries

The BASIC programming statement for a series 200/300 computer would be as follows:
OUTPUT 705; "DSP"//OUTPUT 2 OK//

NOTE

5-35 Message Display Capability. The display command can also be used to display messages on the front panel. Messages may consist of a maximum of twelve alphanumeric characters. Only upper case alpha characters, numbers, and spaces will be displayed.
For example, to display the message "OUTPUT 2 OK", send the following command:
DSP "OUTPUT 2 OK"

The response will be either a "1" or a "0".
You can also find out the status of the display by sending the following query and addressing the supply to talk:
DSP?

DSP 1

To re-enable the display send the command:

DSP 0

When the display is on, the commands sent across the HP-IB may experience a slower processing time because the processor must also spend time to monitor the outputs and update the display. You can shorten your command processing time by turning off the display. To turn off the display, send the command:

5-34 Display On/Off

and address the supply to talk. The response will be a numeric value between 0 and 32.

DLY? 2 (using output 2 as an example)

To query the reprogramming delay setting of a particular output channel, send the following query:

If you send a value outside the 0 to 32 S range you will get a programming error. You may use the programming response times in the specifications table to give you an idea of a typical delay setting. However, the appropriate delay setting will also depend on load capacitance, load resistance, and current limit setting. See paragraph 4-13 for output capacitor considerations.

DLY 2, 08

To program a new value of 80 ms in output 2 for example, send the following:


Output Type	Maximum Low Range Voltage	Maximum High Range Voltage
(40 W @ 80 W)	7.07 V	20.2 V
Low Voltage Output		20.2 V
High Voltage Output	20.2 V	50.5 V

Table 4-2. Maximum Allowable Voltage Setting

The +OV and -OV terminals of output 1 should be wired to the +OV and -OV terminals of output 2. When programming the overvoltage setpoint, set both outputs to the same overvoltage value. When resetting the overvoltage, first disable both outputs by using the OUTPUT ON/OFF key or key or OLT command. Next, reset both overvoltages. Finally, re-enable the outputs with the OUTPUT ON/OFF key or OLT command.

To assure that output 2 will be operating in CC mode, you must program output 2's voltage to a higher value than the voltage of output 1. One way to accomplish this is to first program output 2 to the maximum allowable voltage setting for the desired operating range (see Table 4-2 or Figure 4-2). These values are 1% higher than the rated voltage for the operating range. Then, program output 1's voltage to the desired operating voltage. The lower voltage setting of output 1 will determine the voltage that appears across the load. The current limit point of the paralleled outputs is the sum of both individual current limit points. The output current of the parallel combination is the algebraic sum of the individual current readbacks.

Figure 4-11. Parallel Connections with Local Sensing

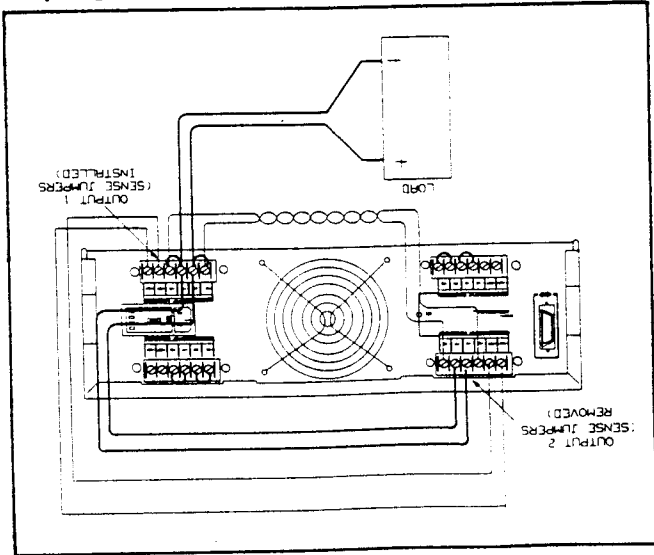

NOTE

Below 2.5 V the downprogrammer cannot sink the maximum rated current. (See Figures 4-2 and 4-3). To operate parallel outputs at voltages under 2.5 V, program both outputs to the same voltage setting. Depending on the load, one output may operate in the unregulated mode.

4-22 CC Operation

For CC operation, set the output voltages as outlined in paragraph 4-21, or alternatively, program the voltage settings of both outputs to the same voltage limit point. Then program the current of each output so that the sum of both currents equals the total desired operating current. The simplest way to accomplish this is to program each output to one half of the total desired operating current. Both outputs will operate in the CC mode.

4-23 Remote Sensing

If it is necessary to remote voltage sense at the load, parallel the sense leads of output 1 with the sense leads of output 2 and connect to the load as shown in Figure 4-12. The outputs can be programmed as previously described. Additional information on programming outputs connected in parallel is given in Appendix B.

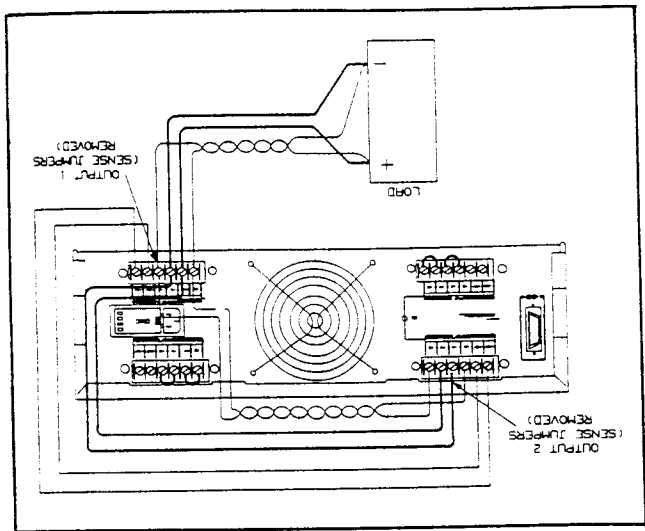


Figure 4-12. Parallel Connections with Remote Sensing

NOTE

When you query the fault, the fault register is cleared. Performing a serial poll will reset the RQS bit but will not clear the fault register.

If the SRQ on error was set, then you can send the error query ERR? and address the supply to talk. The response will identify the error by its code (see Table 5-8).

5-31 Service Request Enable/Disable. You can query the status of the service request enable/disable function by sending the query:

SRQ?

and addressing the power supply to talk. The response from the supply is one of the following:

0, 1, 2, or 3

0—indicates that the service request capability (except for power-on; see paragraph 5-32) is disabled.

1—indicates that it is enabled for output fault conditions.

2—indicates that it is enabled for error conditions.

3—indicates that it is enabled for both fault and error conditions.

The ability to generate service requests can be enabled or disabled using the SRQ command as described below.

To disable the service request capability, except for power-on, send:

SRQ 0

To enable the service request capability for all output faults, send:

SRQ 1

To enable the service request capability for errors, send:

SRQ 2

To enable the service request capability for both faults and errors, send:

SRQ 3

5-32 The Power-On Service Request. You can also cause the power supply to request service every time it is switched on or every time there is a temporary loss in power. To do this send the following command:

PON 1

If you want to disable this facility, send the command.

PON 0

If you want to find out if the power-on SRQ is enabled or disabled, send the following query:

PON?

and address the supply to talk. The supply will respond with a 1 or 0 as discussed above.

NOTE

The power-on (PON) SRQ mode is stored in the non-volatile memory of the supply so that although the supply may be switched off, it will remember the status of the last PON command at power-on and respond accordingly.

Table 5-7 summarizes all the conditions under which a service request will be generated.

Table 5-7 Conditions for generating a Service Request

Condition	Commands Sent		State of RQS Bit
	PON	SRQ	
• Any	0	0	0
• Power-on	1	-	1
• Error	-	2 or 3	1
• Fault	-	1 or 3	1

5-33 Reprogramming Delay

The power supply may switch modes or become unregulated momentarily after a new output value is programmed. Because of their short duration, these cases may not ordinarily be considered a fault but the supply will recognize this deviation and generate a fault signal. To prevent this, the reprogramming delay feature is implemented.

Reprogramming delay will delay the onset of certain fault conditions and prevent the power supply from registering a fault when these conditions are true. When the delay is in effect, the CV, +CC, -CC and UNR bits of the status register are masked and cannot communicate with the mask and fault registers and the OCP function. This will prevent the supply from registering a fault should any of these bits become set during the delay period. Reprogramming delay is initiated when any of the following functions are executed:

VSET; ISET; RCL; OVRST; OCRST; OUT on/off

At power-on reprogramming delay is set to 20 mS. You can specify new values between 0 and 32 S in steps of 4 mS. If you specify a value which is not a multiple of 4 mS, the supply will round off the set value to the nearest 4 mS multiple.

4-24 Specifications for Parallel Operation

Specifications for outputs operating in parallel can be obtained from the specifications for single outputs. Most specifications are expressed as a constant or as a percentage (or ppm) plus a constant. For parallel operation, the percentage portion remains unchanged while constant portions or any constants are changed as indicated below. For current readback accuracy and temperature coefficient of current readback, use the minus current specifications:

Current — All parallel specifications referring to current are twice the single output specification except for programming resolution which is the same for both single output and parallel output operation.

Voltage — All parallel specifications referring to voltage are the same as for a single output except for CV load effect, CV load cross regulation, CV source effect, and CV short term drift. Below 2.5 V, these are all twice the voltage programming accuracy (including the percentage portion). CV load effect above 2.5 V could be twice the load effect specification for a single output. CV output noise for output voltages less than 2.5 V may be slightly higher than the output noise for a single output.

Load Transient — 350 μ s maximum to recover within
Recovery Time 100 mV of nominal value following a load change within the range of 0 to full load.

4-25 SERIES OPERATION

WARNING

SHOCK HAZARD

Floating voltages must not exceed 240 Vdc. No output terminal may be more than 240 Vdc from chassis ground.

CAUTION

Connect in series only outputs that have equivalent current ratings. Each output has a reverse voltage protection diode across its output terminals. The current conducted by this diode is not internally limited by the output. Therefore, never connect an output in such a way that this diode will conduct current in excess of the rated current of the output since damage could result.

Connecting outputs in series provides a greater voltage capability than can be obtained from a single output. Because the current is the same through each element in a series circuit, outputs connected in series must have equivalent current ratings. Otherwise, the higher rated output could potentially damage the lower rated output by forcing excessive current through it under certain load conditions.

Figure 4-13 shows an example of how to connect two outputs in series to a single load with local sensing. This configuration applies to both CV and CC operating modes. Connecting the + load lead of output 2 directly to the - V terminal of output 1 completes the series connection between the two outputs. Connecting the + S terminal of output 2 directly to the - S terminal of output 1 and removing the sense jumper (between + S and + V) on output 2 compensates for the IR drop in the load lead from output 2 to output 1.

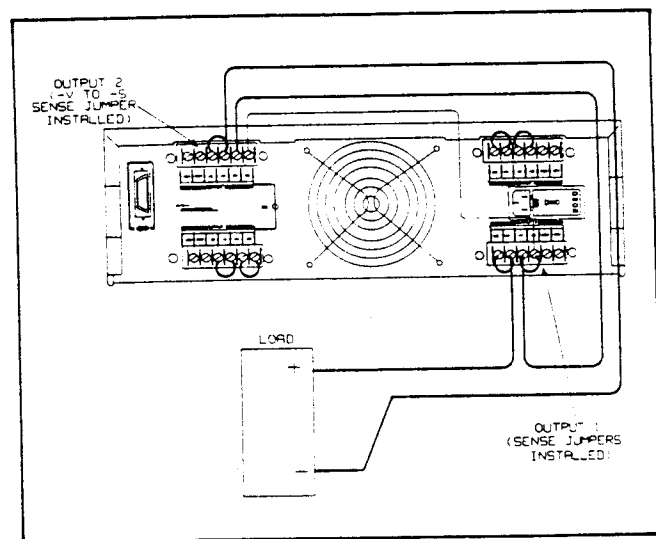


Figure 4-13. Series Connections with Local Sensing

4-26 CV Operation

For CV operation, first program the current setting of each output to the desired current limit point. Then program the voltage of each output so that the sum of both voltages equals the total desired operating voltage. The simplest way to accomplish this is to program each output to one half of the total desired operating voltage. Both outputs will operate in CV mode.

4-27 CC Operation

For CC operation, the current setting of each output must be programmed to the desired operating current. The sum of the voltage settings determines the voltage limit point. As an example, one way to program the voltage of the output is to set the voltage of each output to one half of the total voltage limit point. Then, at load voltages less than one half of the total voltage limit point, one output will operate in CC mode while the other output will be conducting through

Remember that the bits in the fault register can be set when there is a change in either the status register or the mask register. Each output has its status, mask, and fault registers arranged as shown in Figure 5-3 and Table 5-5. The mask register, which is set by the user, is used to specify which bits in the status register are enabled (unmasked) to set bits in the fault register. A bit is set in the fault register when the corresponding bit in the status register changes from "0" to "1", and the corresponding bit in the mask register is a "1". Also, if a bit in the status register is already set and then the corresponding bit in the mask register is set (unmasked), the corresponding bit in the fault register will be set.

In addition, if both status and mask register bits remain set after the fault register was read (and cleared), the fault register will remain cleared as long as there are no changes in either the status or mask registers with the following exception. Executing a VSET, ISET, RCL, OVRST, OCRST, or UT on/off command will cause the CV, +CC, -CC, or UNR bit (as applicable) in the fault register to be set. Note that the fault register is cleared immediately after it is read. As shown in Figure 5-3, if one or more bits in the fault register of a given output channel are set, then the FAU bit for that output in the serial poll register will also be set and a service request may be generated (see paragraph 5-30). To read the fault register of output 2 and find out which bits are set, send the following query and address the supply to talk:

FAULT? 2

The power supply responds with a number which can be decoded from Table 5-5. For example, the number 9 (8 + 1) indicates that the OV and the CV bits in the fault register are set.

NOTE

If the condition(s) generating the fault(s) is (are) removed but the fault register is not read, the bit(s) in the fault register will remain set.

5-29 The Serial Poll Register. The serial poll register is an 8 bit register which the supply uses to keep track of its internal operating status and to determine the operating status of each of its outputs. Table 5-6 defines each bit.

Table 5-6. Bit assignment of the Serial Poll Register

Bit Position	7	6	5	4	3	2	1	0
Bit Weight	128	64	32	16	8	4	2	1
Meaning	PON	RQS	ERR	RDY	FAU 4	FAU 3	FAU 2	FAU 1

The first four bits (0 to 3) in the register tell whether or not a particular output has a fault. If there is a fault in one of the outputs, then the corresponding FAU bit will be set. Thus

The RDY bit is set when processing is complete and is cleared when the supply is processing commands.

The ERR bit is set when a programming or hardware error occurs and is cleared when the error query (ERR?) is received. The error annunciator on the front panel informs the user when this bit is set or cleared.

The RQS bit is set when the power supply generates a service request and cleared after a serial poll is done (see paragraph 5-30).

The PON bit is set at power on and cleared when a CLR command is sent.

5-30 Service Request Generation

When operating your supply, you may want it to request service every time a fault or a programming error condition occurs. To do this you send a service request (SRQ) command. When the condition is true, the power supply responds by setting the RQS bit in the serial poll register, setting the SRQ annunciator on the front panel, and issuing an SRQ over the HP-IB.

The 662xA supplies can generate a service request for any of the following reasons: (refer to Table 5-7).


- **An Output Fault.** If there is a fault on one or more of the output channels and you previously sent the SRQ 1 or SRQ 3 (see paragraph 5-31) command, then an SRQ will be generated.
- **An Error.** If there is an error (see Tables 5-8) and you previously sent the SRQ 2 or SRQ 3 command, (see paragraph 5-31) then the supply will generate a service request.
- **Power-on.** At power-on, the PON bit of the serial poll register is set but the supply will only generate an SRQ if you previously sent a PON 1 command.
- **Input Line Voltage Dropout.** Same as power-on condition.

To find out the nature of the service request, you must do a serial poll. This will isolate the output that generated the request by checking which of the FAU bits are set in the case of a fault, or checking to see if the error bit is set in the case of an error. If the SRQ on faults was set, then send the fault query.

FAULT? 2 (using output 2 as an example)

and address the supply to talk if you want to find out which of the conditions you unmasked in Figure 5-3 are true. For example if the supply was in overvoltage and that condition was unmasked then the response from the fault query will be "8" (see Table 5-5).

Figure 4-14. Series Connections with Remote Sensing

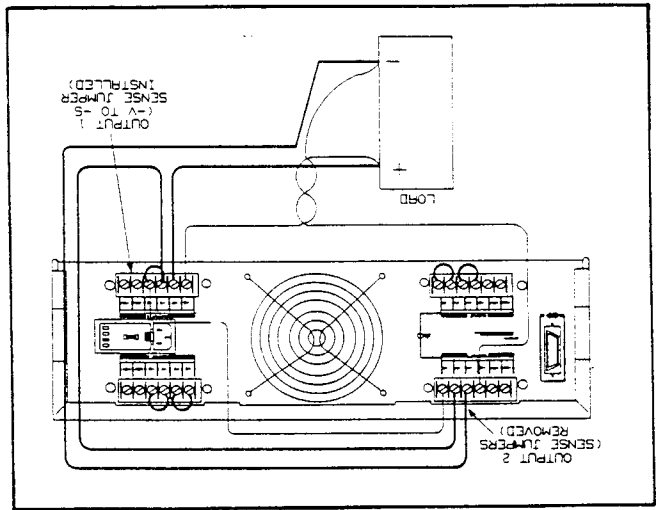

its internal reverse voltage protection diode. At load voltages greater than one half the total voltage limit point, the output that was in CC mode will change to CV mode while the output that was conducting through its diode will regulate the current in CC mode and provide the balance of the voltage required by the load. Note that the total load voltage can be found by adding the results of reading back the individual series outputs only when neither reverse voltage protection diode is conducting. When this diode is conducting, the corresponding output has reverse voltage across it so that its voltage readback may not be accurate. When an output is conducting through its reverse voltage protection diode, the output will have a reverse voltage across its output terminals with the $-V$ terminal more positive than the $+V$ terminal. This voltage will be maximum at the rated current of the output. (See Figure 4-2 for reverse diode characteristic). Note that when an output conducts through this diode, it will indicate CC mode even though it is not regulating the current or voltage. Also, note that the voltage readback is not specified to indicate negative voltages although it will operate down to a limit of about $-0.22V$ on the low voltage outputs and $-0.52V$ on the high voltage outputs. These values will still be indicated even if the actual voltage is more negative.

- Voltage specifications referring to single output resolution which is the same as for a single output.
- All series specifications referring to output except for CC load effect, CC load cross regulation, CC source effect, and CC short term drift which are twice the current programming accuracy (including the percentage portion).
- Load transient recovery time is the same to within approximately twice the voltage setting band since the output impedances of the series combination add together.

Specifications for outputs operating in series can be obtained from the specifications for single outputs. Most specifications are expressed as a constant or a percentage (or ppm) plus a constant. For series operation, the percentage portion remains unchanged while constant portions or any constants are changed as indicated below.

4-29 Specifications for Series Operation

Appendix B. It is necessary to remote voltage sense at the load, connect the sense leads of output 1 and output 2 as shown in Figure 4-14. Note that the $+V$ sense lead of output 2 must remain connected to the $-V$ sense terminal of output 1. The outputs may be set as previously described. Additional information on programming outputs connected in series is given in

4-28 Remote Sensing

The supply has one serial poll register which services all outputs and provides the user with other power supply status-related information as discussed in paragraph 5-29.

5-26 Status Register. Each output channel of the power supply maintains its present status in an eight bit register. This status register reports the status of the output channel whenever it is queried. A "1" in any of the bit positions indicates that the condition is true. As long as the condition continues to be true, the bit will remain set. Assignments for the bits are shown in Table 5-5.

Decoding of the reading is based on the weighted number placed on each bit of the eight bit status registers. For example, bit position 5 in the register has a bit weight of 32 (see Table 5-5). Each bit is assigned to a particular condition and the corresponding bit weight is used to identify that condition. When set, bit 5 indicates that the associated output is in the unregulated state. If this is the only bit that is set, the number 32 will be returned when the output's status register is queried.

Table 5-5. Bit assignment for the Status, Astatus, Fault, and Mask Registers

Bit Position	7	6	5	4	3	2	1	0
Bit Weight	128	64	32	16	8	4	2	1
Meaning	CP	OC	UNR	OT	OV	-CC	+CC	CV
<p>Where</p> <p>CV = Constant Voltage Mode +CC = Positive Constant Current Mode -CC = Negative Current Limit Mode OV = Overvoltage Protection circuit tripped OT = Over Temperature Protection circuit tripped UNR = Unregulated Mode OC = Over Current Protection tripped CP = Coupled parameter (See Note)</p> <p>Note: When the range is automatically switched as discussed in paragraph 5-19, the CP bit is set. It is cleared when you send a voltage or current value that causes no range change.</p>								

To query an output channel for its status, you must specify the output channel. For example, to find out the status at output 2 send the following query and address the supply to talk:

STS? 2

5-27 Accumulated Status Register. Each output channel of the power supply also maintains a cumulative status in its accumulated status (astatus) register. This register records

every status condition the power supply output entered since it was last queried. When queried, it returns a decimal number which is decoded as shown below. The astatus register is reset to the present value of the status register after it is queried. The bits are assigned as in Table 5-5. Here is an example to help you decode the decimal number (from 0 to 255) returned when the astatus register is queried. If the output channel was in overvoltage since the last reading of the astatus register and that channel is presently operating in constant voltage mode, the reading you will get when you query the register will be 9. To decode this we use table 5-5.

$$9 = 8 + 1$$

$$OV + CV$$

For example, to query the astatus register of output 2, send the following query and address the supply to talk.

ASTS? 2

5-28 The Mask and Fault Register. The fault register works in conjunction with the mask register. These are two eight bit registers which report any fault condition on a particular output channel. The mask register is used to set up the conditions that generate a fault which is latched into the fault register. The user can then read the fault register to determine the fault. When a bit in the fault register is set, the power supply can generate a service request for that output providing the service request command on fault (SRQ 1 or SRQ 3) was previously sent. See paragraph 5-30 for a discussion on service request.

To understand how these two registers work, we must include the status register in this discussion. Recall that the status register takes its input from the power supply and the user cannot change its contents. The mask register takes its inputs from the user, and the power supply cannot change its contents. The fault register takes its inputs from both the mask and the status registers. You can find out the setting of the mask register of output 2 by sending the following query and addressing the supply to talk:

UNMASK? 2

The response will be a numeric code between 0 and 255 which can be decoded by consulting Table 5-5. You can set the conditions to generate a fault by setting (unmasking) one or more bits in the mask register. The conditions will remain unmasked until you change them. To unmask conditions in output 2 for example, send the following command:

UNMASK 2,XXX

where XXX specifies the numeric code (0 to 255) for the unmasked conditions (see Table 5-5). If during operation, the output experiences any of the previously unmasked conditions, it will set the corresponding bit(s) in its fault register.

Section V

REMOTE OPERATION

5-1 INTRODUCTION

Section III introduced you to the basics of remote operation and provided a few simple examples using a Series 200 computer as the HP-IB controller. This section contains all the information required to control your power supply remotely and discusses in greater detail how each of the commands can be implemented. The material covered is intended for any controller capable of using the HP-IB interface functions mentioned in paragraph 5-3.

Four major sub-sections are discussed. These are:

1. HP-IB Operation
2. Programming Syntax
3. Initial Conditions
4. Power Supply Commands

The HP-IB section briefly describes the HP-IB interface functions to get you acquainted with remote programming using the HP-IB. Under Programming Syntax, the syntax of all commands, the numeric data formats and the programmable ranges for all models are given. Initial Conditions highlights the initial values of all the parameters at power-on. Power Supply Commands will describe all the commands which can be used to program the supply's functions including status reporting, error handling, protection features, and voltage and current programming. The power supply commands are summarized in Appendix C.

The examples are written in a generic form to make adaptation to your controller easy. You should be familiar with the use of your controller and its instruction set and how the power supply commands can be incorporated in your controller commands. If you are not familiar with the operation of the power supply, you are advised to read through Sections II through IV first.

5-2 HP-IB OPERATION

5-3 Interface Functions

Remote control is implemented by the HP-IB. It enables instructions to be sent from an external computer equipped with an HP-IB interface. The power supply implements the following IEEE-488 Interface Functions:

SH1 - Source Handshake	SR1 - Service Request
AH1 - Acceptor Handshake	RL1 - Remote/Local
T6 - Talker	PP1 - Parallel Poll
L4 - Listener	DC1 - Device Clear

The source handshake, acceptor handshake, talker and listener functions are implemented by the interface circuits of the power supply and the controller. The ADDR annunciator indicates when the power supply is addressed to listen or talk. (The talker function includes the Serial Poll, see paragraph 5-7).


5-4 Service Request. This is a message which can be initiated by the power supply to request service from the controller. When the supply is requesting service, it asserts the service request (SRQ) line on the HP-IB to interrupt the controller providing the controller is configured to service interrupts. A service request can be generated whenever there is a fault on one of the outputs (up to 4 outputs), a programming error has occurred, or at power on providing certain commands are sent. Service request commands are discussed in detail in paragraph 5-30.

The SRQ annunciator on the front panel display is turned on when the power supply is requesting service from the computer and remains on until the controller conducts a serial poll. A serial poll removes the service request and turns off the SRQ annunciator regardless of whether the condition that caused the service request continues to exist. The service request is also removed when you send the "CLR" command (see paragraph 5-24).

5-5 Remote/Local. The power supply can receive programming information either from the HP-IB (remote) or from the front panel (local). When the power supply is in remote, the state of the supply cannot be changed by using the front panel keys, although the LCL key will remain enabled. Remote operation takes precedence over local operation, hence if the supply is accepting commands remotely and you attempt to change it to local operation, the supply will not allow any local settings and will remain in remote. You can prevent the front panel from sending programming information by sending the local lockout command. This command is sent only from the HP-IB. If you change from local to remote or vice-versa, there will be no change in the programmed settings.

5-6 Parallel Poll. Parallel Poll allows the controller to receive at the same time one bit of data from each of up to eight instruments connected to the bus. HP power supplies designate bit #6, the RQS bit of the serial poll register for this operation. By checking the status of this bit, the computer can quickly determine which instruments on the bus requested service. Once an instrument is identified, the computer can perform a serial poll to find out the exact cause of the request. Parallel Poll does not reset this service request bit (RQS) in the power supply.

Figure 5-3. Functional Relationship of Status Registers

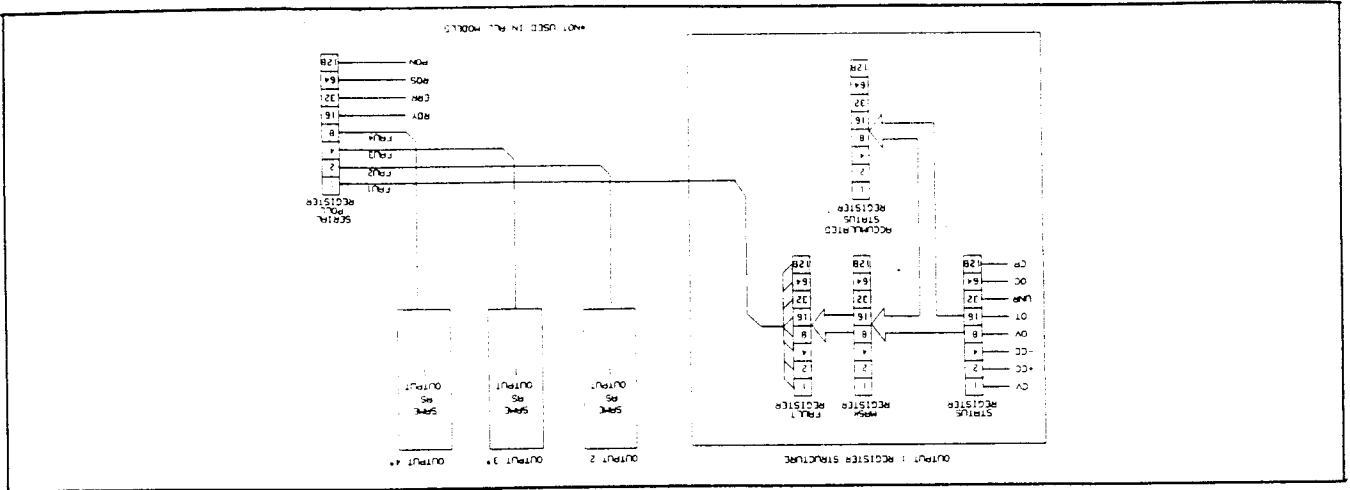

The power supply has the ability to report its internal status to the user whenever it is asked to do so. Depending on the type of status the user requested, the supply will interrogate the status, accumulated status, mask, or fault registers present in each output. The status register can report status independently (see paragraph 5-26) or it can work together with the mask and fault registers to report a fault (see paragraph 5-28). The accumulated status register records every status condition on the output experienced since the time it was last read (see paragraph 5-27). Figure 5-3 shows a conceptual model of the operation of these registers.

5-25 Status Reporting

CLR

To Clear the power supply, send the following command:

1. The store/recall registers are not cleared.
2. The power supply remains addressed to listen.
3. The PON bit in the serial poll register is cleared.

This command will return the power supply to its power-on state and all parameters are returned to their initial power-on values except for the following:

5-24 The Clear Command

When a register is recalled, the outputs will be set sequentially (output 1, output 2, etc.). If you attempt to recall registers which were not previously stored, then the supply will return the power-on values for that register (0 volts and minimum current limit). If you recalled registers outside the 1 to 10 range, you will get a number range error.

RCL 2

You can set the power supply outputs to these stored voltage and current settings by sending the recall command.

This command will take the programmed voltage and current settings of all output channels and store them in register 2.

At power-on, each of the registers contain 0 volts and the minimum current limit. To store voltage and current settings, you must specify the register (1 to 10). For example to store the present settings of current and voltage of all your supply's outputs in register 2, send the following command:

STO 2

The power supply has 10 internal registers each of which can store the voltage and current settings of all the outputs. By storing voltage and current settings for all outputs and recalling them later, you can have significant savings in programming time. (See Supplemental Characteristics in Table 1-1).

5-23 Multiple Output Storage & Recall

The supply can report a fault condition when an output is in overvoltage or overcurrent. Although the OVRST and OCRST commands re-enable the output, they do not clear the fault register. As a housekeeping measure, it is advisable to always clear the fault register by querying its value after an OV or OC reset.

NOTE


OCRST 1

The response from the power supply is either a "0" to indicate that OCP is off or a "1" to indicate that it is on. To reset the output channel after an overcurrent trip, you can either disable the OCP and send the reset command, or you can reduce the output current below the programmed current and then send the reset command. To reset output 1, send the command:

OCP? 1

You can find out the OCP setting by sending the following query and addressing the power supply to talk.

Figure 5-1. Typical Program Statement for Series 200 Computers

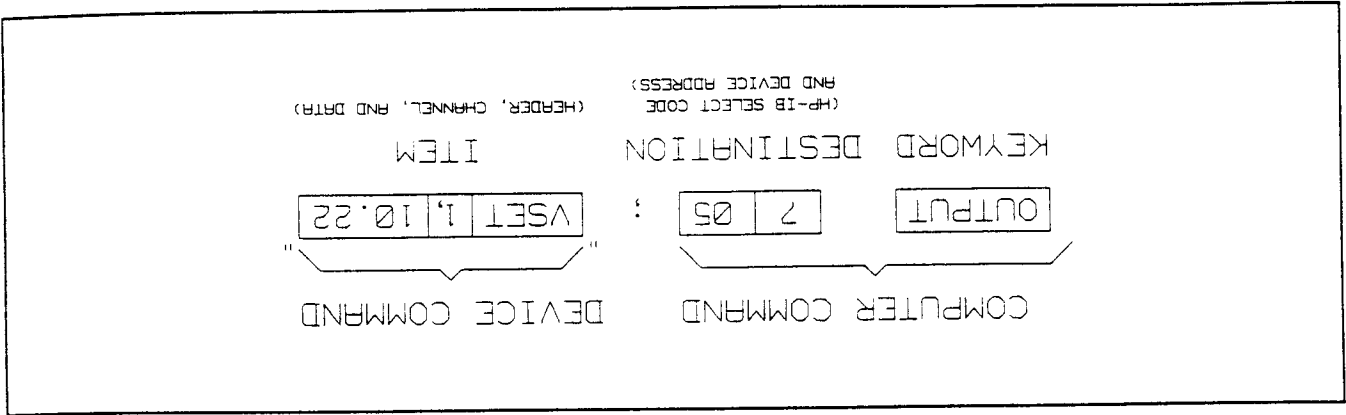

You can find out the present address or change the address of the supply by using the front panel ADDR key as described

5-9 HP-IB Address Selection

Clear (see paragraph 5-24).

CLR command performs the same function as Device addressed or an unaddressed command. The power supply state with a single command. It may be implemented as an used in systems to send all devices in the system to a known

5-8 Device Clear. The Device Clear command is typically used in systems to send all devices in the system to a known state with a single command. It may be implemented as an CLR command performs the same function as Device addressed or an unaddressed command. The power supply state with a single command. It may be implemented as an used in systems to send all devices in the system to a known

1978.

The power supply may be remotely configured to respond with a 0 or 1, on any of the data lines, to indicate that it is requesting service. This is done in accordance with IEEE-488

Unless remotely configured, the power supply will respond with a 1 on one of the HP-IB data lines if it is requesting service and its address is between 0 and 7. Addresses 0 through 7 define which data line (1 through 8) the supply will respond on. If the address is set to 8 or greater, the supply will not respond unless remotely configured.

IEEE-488 does not define what data an instrument should put on a bus in response to parallel poll. Many instruments such as Hewlett-Packard power supplies indicate the state of their RQS bit, but the operator should not assume that all instruments on the bus respond to parallel poll with their RQS bit.

NOTE

in Section III. Any address 0 through 30 is a valid address. If you program an address outside this range you will get a number range error.

NOTE

Care should be taken to not select the controller address.

5-10 Power-On Service Request (PON)

The power supply can request service from the controller when the power is turned on. This request can be enabled or disabled by sending a PON command (see paragraph 5-32). When the request is enabled, the supply can generate an SRQ at power-on or when there is a momentary loss in power. You can execute a serial poll to clear the service request. Table 5-7 details the conditions under which a PON command will generate an SRQ.

NOTE

The power supply has a non-volatile memory in which it stores certain system variables. Some of these variables are the calibration constants, the present supply address, and the present setting of the PON command.

5-11 PROGRAMMING SYNTAX

The following paragraphs describe the syntax of the device command that is used to program your power supply. As shown in Figure 5-1, the device command is a specific part of the program statement that your computer will accept. The first part of the statement is computer as well as programming language specific. Figure 5-1 shows the structure of a typical programming statement for an HP Series 200 computer. If you are using a different computer or programming language, refer to your computer programming manual to determine the correct syntax for this portion of the program statement. This section of the manual is only concerned with the device command portion (the part inside the quotes for Series 200 computers with BASIC) of the program statement.

Example 1: VSET 1,5; ISET 1,2

This example programs output 1 to 5 V and 2 A. These values are in the quadrant of the characteristic curve which has voltage and current boundaries common to both high and low operating ranges.

Example 2: VSET 1,20

Now output 1 is in the high range programmed to 20 V and 2 A.

Example 3: VSET 1,5; ISET 1,3

Output 1 is now in the low range programmed to 5 V and 3 A.

Example 4: VSET 1,10

Now output 1 is in the high range and the current is automatically scaled back from 3 A to the lower current limit of 2.06 A. The output is operating in the same range as that of Example 2.

Example 5: VSET 1,20; ISET 1,3

The ISET command will cause the voltage to be scaled back to the low range limit of 7.07 V and the output will operate within the boundaries of the low range as in Example 3.

NOTE

When the range is automatically switched, as in examples 4 and 5, the "coupled parameter" bit (CP) in the status register (see Table 5-5) is set to indicate that range switching occurred.

5-20 Output On/Off

The OUT command disables/enables an output channel of the power supply. It will not disturb any other programmed function nor will it reset the protection circuits. You can control individual outputs with the OUT command as shown below. For example, to disable output channel 1 send the following:

OUT 1,0

To enable output channel 1 send the following command

OUT 1,1

You can find out the present state of output 1 by sending the query:

OUT? 1

and addressing the supply to talk. The response from the supply is either a "0" to indicate output 1 is off or a "1" to indicate that the output is on. When disabled, the output

behaves as if it were programmed to zero volts and minimum current.

5-21 Overvoltage (OV) Protection

The programmable OV is a protection feature which can be set by the operator to protect the load against excessive voltage. When the actual voltage exceeds the programmed overvoltage setting for a given output channel, the OV is tripped. The OV circuit will fire the SCR crowbar which shorts across the output and the output assumes a low impedance state.

For example, to program the OV of output channel 1 to 9.5 V send the following command:

OVSET 1,9.5

To find out the OV setting for output channel 1 send the following query and address the supply to talk:

OVSET? 1

To enable an output after it went into overvoltage, you must first remove the overvoltage condition and then send the OV reset command.

To reset output 1 send:

OVRST 1

If you send the reset command without first removing the OV condition, the supply will fire the OV again.

NOTE

If the programmable OV fails, the supply has a fixed OV circuit which will fire the SCR crowbar if the voltage exceeds 120% of the maximum rated output. The fixed OV circuit will also fire the SCR crowbar if the supply is off (line cord disconnected) and an external source is supplying voltage which exceeds 120% of the maximum rated output.

5-22 Overcurrent Protection (OCP)

The OCP is a protection feature employed by the power supply to guard against excessive output currents. When the output enters the +CC mode and the OCP is enabled, the OCP circuit down programs the output voltage and disables the output.

To enable the OCP, for output channel 1, send the command

OCP 1,1

To disable the OCP, send the command

OCP 1,0

Figure 5-2 shows the possible syntax forms for the device commands that are used to program the power supply. Syntax forms for the calibration commands that are discussed in Appendix A are also included. The oblong shape at the left of the syntax forms contains the command header which must be entered as shown in Tables 5-1 and 5-2. Commands are accepted in either uppercase or lowercase letters (ASCII characters). Circles contain characters that must be entered exactly as shown. Characters such as a space <SP> or a comma are used to separate elements in the command string. Characters such as a line feed <LF> or a semicolon are used to terminate the command string. Rectangles contain parameters that follow the command header lines and arrows indicate the correct paths through the syntax diagrams.

5-12 Numeric Data

The power supply will accept numeric data in implicit point, explicit point, or scientific notation. A general syntax diagram

for numeric data is included in Figure 5-2. Implicit point notation means that numbers do not contain a decimal point; integers for example. Numbers written in explicit notation contain a decimal point, such as 12.35. In scientific notation, the letter E stands for "10 raised to". For example, 1.2E3 is read as 1.2 times 10 raised to the 3rd power, which equals 1,200. Plus and minus signs are considered numeric characters and are optional. If you program a number with an accuracy that is greater than the resolution of the supply, the number will automatically be rounded to the nearest multiple of the power supply's resolution. Table 5-1 gives the ranges for numeric data that is sent to the supply.

The power supply will also return numeric data (ASCII characters) to your computer. The format of the numbers returned depends upon the type of data requested. Table 5-2 gives the format for data returned to the computer in response to any of the queries that are listed.

Table 5-1. Power Supply Commands

Command	Header	*Output Channel	Data Range	Syntax (Fig. 5-2)
Set Voltage	VSET	1,2,3,4	See Table 5-4	C4
Set Current	ISET	1,2,3,4	See Table 5-4	C4
Set Overvoltage	OVSET	1,2,3,4	See Table 5-4	C4
OC Protection On/Off	OCP	1,2,3,4	0,1(off,on)	C4
Output On/Off	OUT	1,2,3,4	0,1(off,on)	C4
Set the State of all Outputs at Power-On.	DCPON	---	0,1(off,on)	C4
Unmask	UNMASK	1,2,3,4	0-255	C4
Reprogram Delay (in seconds)	DLY	1,2,3,4	0-32 (LSB = 0.004)	C4
Reset Overvoltage	OVRST	1,2,3,4	—	C3
Reset Overcurrent	OCRST	1,2,3,4	—	C3
Service Request	SRQ	—	0,1,2,3	C2
Power-On SRQ On/Off	PON	—	0,1(off, on)	C2
Display On/Off	DSP	—	0,1(off, on)	C2
Display Characters (up to 12 characters)	DSP	—	"string"	C6
Store Settings	STO	—	1-10	C2
Recall Settings	RCL	—	1-10	C2
Clear Supply	CLR	—	—	C1

*Output channels 3 and 4 are not used in all models (see Table 5-4).

Each output operates in the boundaries of either the low range or the high range as specified in Table 5-4. Refer to paragraph 4-2 for a detailed description of the dual range operation. The range is selected based on the programmed parameters. If the last parameter (voltage or current) programmed is outside of the existing range, the supply will automatically switch ranges. A sequence of examples are given on the next page to illustrate this operation. Output 1, used in the examples, is a 40 W Low V output.

5-19 Range Switching

The results are placed on the HP-IB and read into the controller.

IOU7 1

You can also instruct the supply to measure the actual output current at output channel 1 by sending the following query and address the supply to talk.

5-18 Current Programming

To program the current, send the output channel and the programmed value in amps. In the example below, output 1 is programmed to 1.15 amps.

ISET 1,1.15

The value you send must always be in amps. For example if you want to program 95 milliamps, convert to amps and then send the command

ISET 1,.095

If the output channel is in constant current (CC) mode of operation, then the actual current is the programmed current but if the output is in the CV mode, the programmed current is the current limit of that output.

To readback the programmed current for output 1, send the query and addressing the supply to talk.

ISET 1


* The maximum programmable voltage values for each range are 1% higher than the rated voltage and the maximum programmable current values for each range are 3% higher than the rated current.

** Each output channel "wakes up" with current programmed to a small positive value. This permits the output channel's output voltage to be programmed up without specifically programming the current. An output channel, in fact, cannot be programmed to zero amps. If the output channel receives a command to go to zero amps, or any positive current below the minimum programmable current, it will set itself to the minimum set value (e.g. 0.13 A) and no error will be generated.

Model	Output Channel	Operating Range	Output Voltage (Avg. Resolution)	Output Current** (Avg. Resolution)	Overvoltage Range (Avg. Resolution)
6621A	1 & 2	Low	0 to 7.07 V	0.13 to 10.30 A	0 to 23 V (0.10 V)
	3	High	0 to 20.2 V	0.07 to 4.12 A	0 to 55 V (0.25 V)
6622A	1 & 2	Low	0 to 7.07 V	0.13 to 10.30 A	0 to 23 V (0.10 V)
	3	High	0 to 20.2 V	0.07 to 4.12 A	0 to 55 V (0.25 V)
6623A	1	Low	0 to 7.07 V	0.08 to 5.15 A	0 to 23 V (0.10 V)
	2	High	0 to 20.2 V	0.13 to 4.12 A	0 to 23 V (0.10 V)
6624A	1 & 2	Low	0 to 7.07 V	0.08 to 5.15 A	0 to 23 V (0.10 V)
	3 & 4	High	0 to 20.2 V	0.05 to 2.06 A	0 to 55 V (0.25 V)
6627A	1-4	Low	0 to 20.2 V	0.05 to 2.06 A	0 to 55 V (0.25 V)
	(40 W High V)	High	0 to 50.5 V	0.05 to 0.824 A	0 to 55 V (0.25 V)

Table 5-4. Programmable Output Ranges for the HP 6621A-6624A and 6627A Supplies

Figure 5-2 (Sheet 1 of 2). Syntax Forms for Power Supply Commands

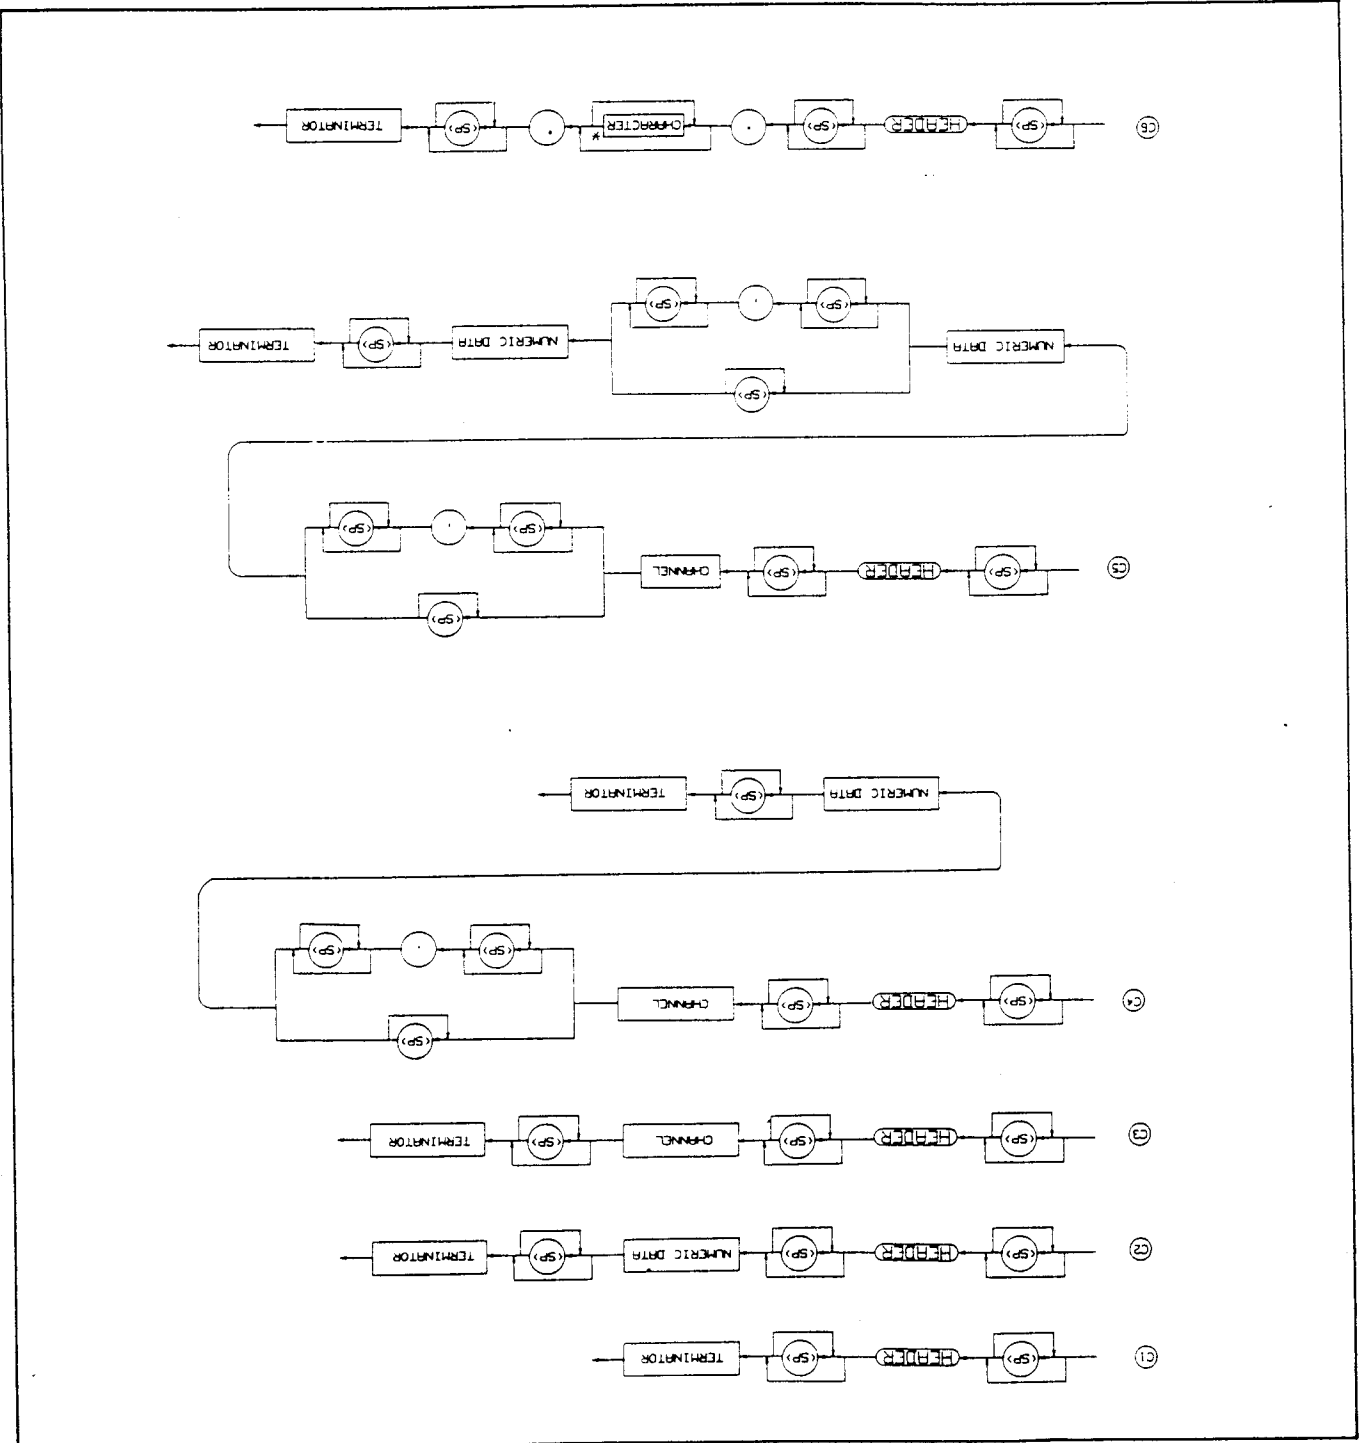

5-13 Order of Execution

When you send a set of instructions to the power supply, they are executed in the order in which they are received. The power supply completes the execution of the present command before executing another command. To send more than one command within the power supply command string, use a semicolon to separate the commands. This maximizes the rate at which the power supply accepts commands.

5-14 Terminators

Terminators mark the end of a command string. As shown in Figure 5-2, the semicolon, line feed <LF>, and carriage return line feed <CR> <LF> are the characters that indicate the end of a message to the power supply. When you are using the HP Series 200 computer with BASIC to send a command using the standard format (see Figure 5-1), the computer automatically sends <CR> <LF> on the data bus following the command.

5-15 INITIAL CONDITIONS

Immediately after power on, the power supply automatically undergoes a self-test and sets all parameters to their initial values. Table 5-3 lists the parameters and their initial values.

Table 5-3. Initial Conditions

Parameter	Initial Value
Voltage	0
Current	Minimum current limit
Reprogramming Delay	20 mS
Store/Recall registers	0 volts and min. current limit
Over Voltage (OV)	23 V on low voltage outputs and 55 V on high voltage outputs
Output Channels	On
OCP Enabled	Off
UNMASK register	0 (cleared)
SRQ	0 (Off)
Front Panel metering	Output #1
Power supply address	Last stored value (Factory set to 5)
Local Control	On (enabled)
PON bit	On
PON SRQ	Last stored value (Factory set to 0)
Cal Mode	Off

5-16 POWER SUPPLY COMMANDS

This section discusses the commands which you will use to program the supply's voltage and current, protection circuits, and enhanced features like storage and recall registers, and reprogramming delay. When programming, you should be aware that the current, voltage and overvoltage ranges for

each output of your supply may differ. Table 5-4 shows these values for the power supply. If you send values out of these ranges, you will get a number range error. A summary of all commands appears in Appendix C.

WARNING

The output voltage of some output channels exceeds the safe operating limit of 42.2 V. To avoid any electrical shock, program the voltage to zero volts or turn off ac input power before changing any rear panel connections. Make certain all straps are properly connected, terminal block screws are securely tightened and terminal block covers are replaced before reapplying power.

5-17 Voltage Programming

To program voltage, send the output channel and the programmed value. In the example below, output 1 is programmed to 5 V.

VSET 1,5

The values you send must always be volts. For example if you want to program 450 millivolts, convert to volts and then send the command:

VSET 1,.45

If the output channel is operating in constant voltage mode (CV annunciator on) then the actual voltage is the programmed voltage, but in CC mode of operation (CC annunciator on), the programmed voltage is the voltage limit for that output.

To readback the programmed voltage setting for output 1, send the query:

VSET? 1

and address the supply to talk. If you want to know the value of the actual output voltage of output 1, send the query:

VOUT? 1

The results are placed on the HP-IB and read into the controller when the supply is addressed to talk.

NOTE

The power supply will round the VSET and ISET settings to the nearest multiple of their resolution. Table 5-4 lists the average resolution of these settings.

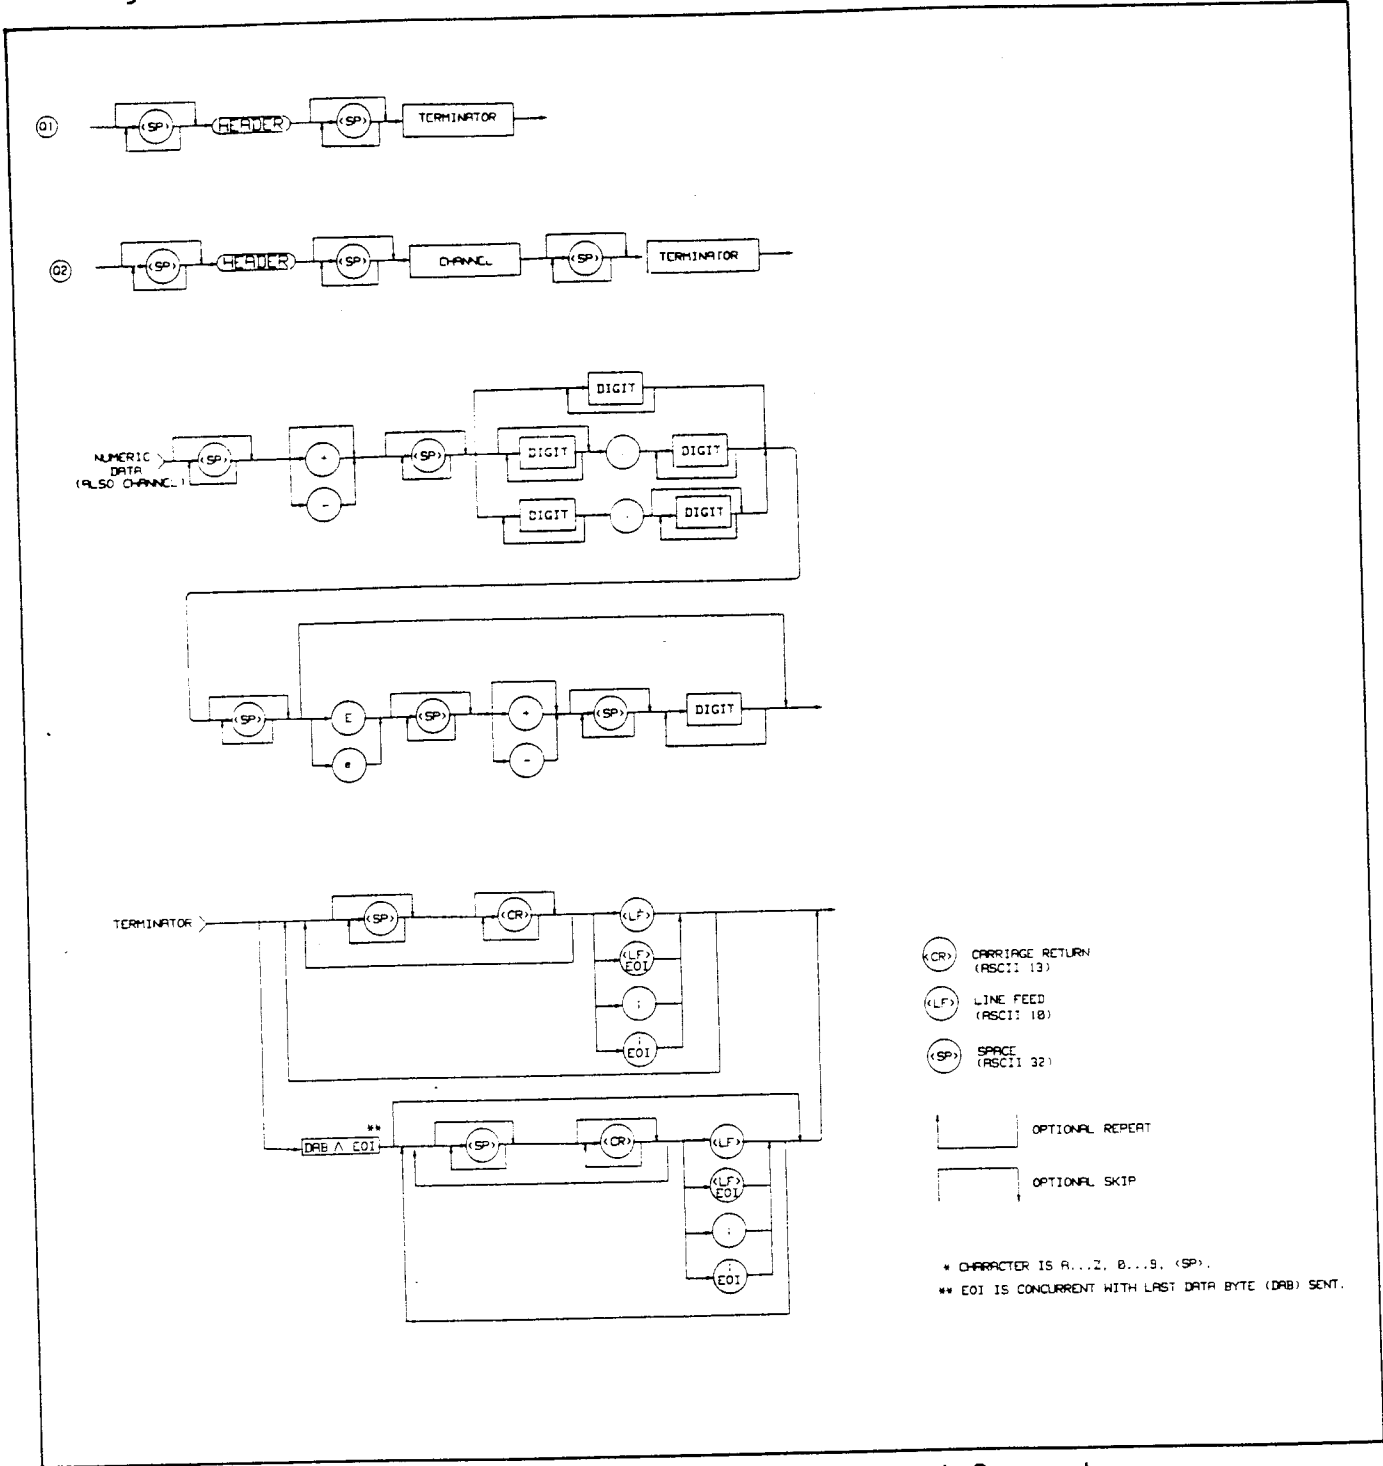


Figure 5-2 (Sheet 2 of 2). Syntax Forms for Power Supply Commands

- NOTES:
1. Output channels 3 and 4 are not used in all models. (See Table 5-4).
 2. Applies to 80 W Low V output.
 3. Applies to 40 W High V and 80 W High V outputs.
 4. "X" depends upon model.
 5. A space is returned for a + sign.
 6. All responses are followed by a <CR> and <LF> (EOI asserted with <LF>).
 7. Spaces are allowed between the header and the question mark.

S = Sign Z = Digit with leading zeros put out as spaces. D = Digit <sp> = space

Query	Header (Note 7)	Channel (Note 1)	Response (Notes 5 and 6)	Initial Value	Syntax (Fig. 5-2)
Voltage Setting	VSET ?	1,2,3,4	SZD,DDD	0	Q2
Current Setting	ISET ?	1,2,3,4	SZD,DDD SZZD,DD(Notes 2)	Min. Value (see Table 5-4)	Q2
Voltage Output	VOUT ?	1,2,3,4	SZD,DDD	-	Q2
Current Output	IOUT ?	1,2,3,4	SZD,DDD SD,DDD(Notes 3)	-	Q2
OVP Setting	OVSET ?	1,2,3,4	SZZD,DD	Full Scale (See Table 5-4)	Q2
OC Protection On/Off	OCF ?	1,2,3,4	ZZD	0(Off)	Q2
Output On/Off	OUT ?	1,2,3,4	ZZD	1(On)	Q2
Unmask Setting	UNMASK ?	1,2,3,4	ZZD	0(cleared)	Q2
Delay Setting	DLY ?	1,2,3,4	<sp>ZD,DDD	0.02 sec	Q2
Status	STS ?	1,2,3,4	ZZD	-	Q2
Accumulated Status	ASTS ?	1,2,3,4	ZZD	-	Q2
Fault	FAULT ?	1,2,3,4	ZZD	-	Q2
Error	ERR ?	-	ZZD	-	Q1
Service Request Setting	SRQ ?	-	ZZD	0(Off)	Q1
Power-On SRQ On/Off	PON ?	-	ZZD	Last stored value	Q1
Display On/Off	DSP ?	-	ZZD	1(On)	Q1
Model Number	ID ?	-	HP 662XA (Note 4)	-	Q1
Selftest	TEST ?	-	ZZD	-	Q1
Calibration Mode	CMODE ?	-	ZZD	0(Off)	Q1