

Signal Extractor Tool

Online Help



Notices

© Agilent Technologies, Inc. 2001-2007

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Trademarks

Microsoft®, MS-DOS®, Windows®, Windows 2000®, and Windows XP® are U.S. registered trademarks of Microsoft Corporation.

Adobe®, Acrobat®, and the Acrobat Logo® are trademarks of Adobe Systems Incorporated.

Manual Part Number

Version 03.70.0000

Edition

December 1, 2007

Available in electronic format only

Agilent Technologies, Inc. 1900 Garden of the Gods Road Colorado Springs, CO 80907 USA

Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Using the Signal Extractor Tool

The Signal Extractor is a simple tool that lets you extract signals or data from one input bus/signal and output the extracted data onto new buses/signals. In particular, it is suited to:

- Extract I and Q data (see page 7) from simple serial protocols.
- Remultiplex high-speed digital data (see page 11) that has been demultiplexed onto additional logic analyzer channels (because of the high state speeds).

Once you add a Signal Extractor tool, its properties dialog opens to let you:

- Select the input bus/signal.
- Load an XML format extractor algorithm file.

The extractor algorithm file defines output buses/signals and specifies how data should be extracted by identifying patterns and listing the commands to execute when those patterns are found.

- Signal Extractor Capabilities (see page 13)
- How the Signal Extractor Tool Works (see page 15)
- Adding a Signal Extractor Tool (see page 17)
- Creating Extractor Algorithms (see page 19)
- Signal Extractor Tool Properties Dialog (see page 49)
- Signal Extractor Tool Control, COM Automation (see page 51)
- Signal Extractor Tool Setup, XML Format (see page 53)

Contents

	Using the Signal Extractor Tool 3		
1	Example: Extracting I and Q Signals		
2	Example: Remultiplex Data		
3	Signal Extractor Capabilities		
4	How the Signal Extractor Tool Works		
5	Adding a Signal Extractor Tool		
6	6 Creating Extractor Algorithms		
	Using Register Commands 25		
	Using Debug Mode 29		
	Extractor Algorithm XML Format 30 <extractorcmd> Element 31 <extractorcmds> Element 33 <extractorfolder> Element 34 <extractorgrammar> Element 36 <extractorlabel> Element 37 <extractorlabels> Element 37 <extractorpattern> Element 37 <extractorpatterns> Element 37 <extractorpatterns> Element 37 <extractorsequence> Element 38 <extractorsequence> Element 38 <extractorsequences> Element 39 Signal Extractor Commands 41</extractorsequences></extractorsequence></extractorsequence></extractorpatterns></extractorpatterns></extractorpattern></extractorlabels></extractorlabel></extractorgrammar></extractorfolder></extractorcmds></extractorcmd>		
7	Signal Extractor Tool Properties Dialog		
8	Signal Extractor Tool Control, COM Automation		
9	Signal Extractor Tool Setup, XML Format		
	<setup> Element 54</setup>		
	Index		

Here we are extracting the I and Q signals from a simple serial stream, serial protocol, or from a parallel bus.

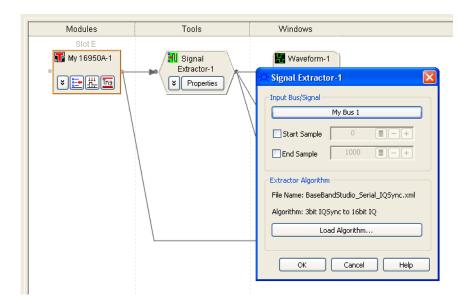


Figure 1 Signal Extractor Properties

The I and Q signals (in this example 16-bit wide buses) can then be viewed with other logic analyzer tools.

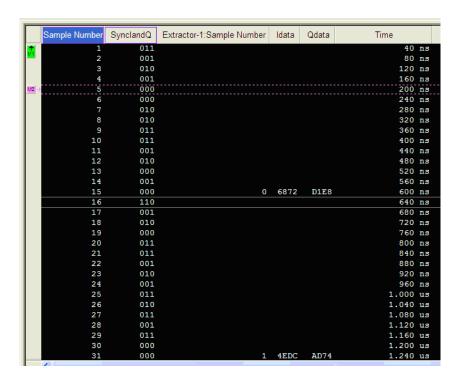


Figure 2 Signal extraction of 16-bit serial I and Q

For example, you can view the bus data as a chart in the Waveform display window.

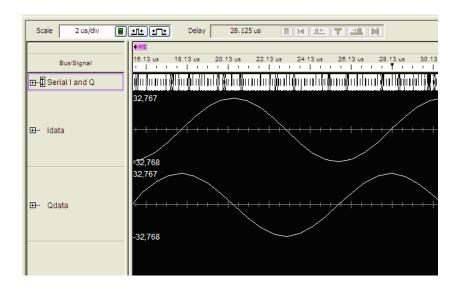


Figure 3 Second view of the extracted I and Q signals using chart

The I and Q samples can then be further processed to determine error vector magnitude (EVM) and a variety of other communications type measurements.

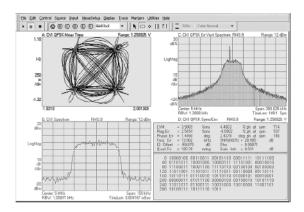


Figure 4 Agilent 89601A vector signal analysis software

1 Example: Extracting I and Q Signals

Here we are remultiplexing high-speed digital data that has been demultiplexed onto additional logic analyzer channels (because of the high state speeds).

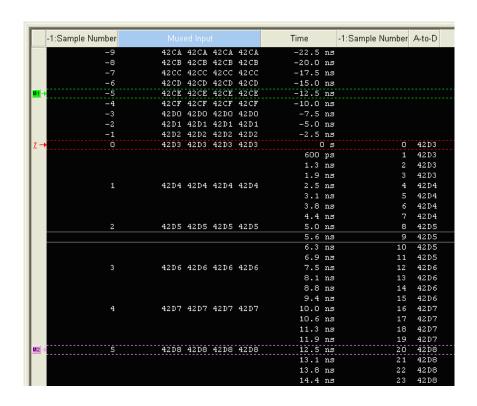


Figure 5 Signal Extractor doing remultiplex starting at sample 0

2 Example: Remultiplex Data



To understand the capabilities of the Signal Extractor consider these scenarios:

• You have a 4-bit wide serial bus with the following signals: 1-bit I value, 1-bit Q value, 1-bit sync signal, and 1-bit clock signal. The I and Q signals are each 16-bits long, in a serial manner, with the most significant bit of each I and Q 16-bit value coming on the occurrence of a sync signal.

The Signal Extractor can look for the occurrence of the sync signal and then extract the serial I and serial Q values and write them as a pair of standard 16-bit wide I and Q values.

• You have a 2-bit wide serial bus with the following signals: 1-bit wide protocol encoded I and Q values, and 1-bit clock. Assume the packet header for I and Q values is a constant pattern followed by 4 pairs of 12-bit long I and Q values.


The Signal Extractor can extract the 4 I and Q values and assign them to new buses. Again, the serial version of the I and Q values will be translated to pair of standard 12-bit wide I and Q values.

• You have a 48-bit wide bus with the following signals: 4x12 bits of A-to-D conversion. Each of the 12-bits is a high-speed sample of a 3.2 GHz A-to-D converter. The A-to-D converter is running at 3.2 MHz or 312 ps per sample. The signals are multiplexed out in groups of 4x12-bits and latched so that the logic analyzer can capture the A-to-D output at a rate of only 800 MHz or 1.25 ns per four samples.

The Signal Extractor can remultiplex the A-to-D signal back to the original 12-bit wide signal.



3 Signal Extractor Capabilities

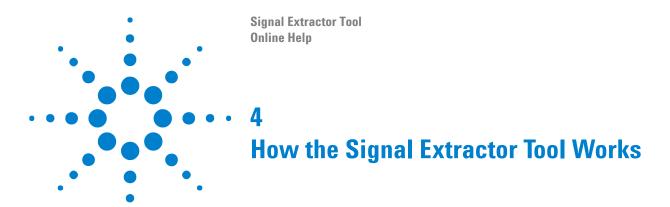

The Signal Extractor tool operates on one input bus/signal (which can be 1 to 128 bits wide). It operates on all data captured on that bus/signal unless starting and ending samples are specified.

The Signal Extractor tool extracts data from the input bus/signal using an algorithm that defines output buses/signals and specifies how data should be extracted. The extraction algorithm is based upon a series of ASCII, XML-format commands defined in a single algorithm file. You can create your own extraction algorithms or customize existing extraction algorithms. The extraction algorithm is based on a "find pattern then execute commands" model.

The Signal Extractor runs by looking for matching patterns from 1 to 128 bits in sequence. When a pattern is found, Signal Extractor commands are executed to extract out the specified signals. When the end of the extractor commands is reached, the Signal Extractor repeats the cycle by looking for matching patterns again from the beginning of the list.

The Signal Extractor tool runs every time new data is received, and it runs completely through the entire data input and outputs a complete set of extracted data.


Up to a total of 8 buses/signals (or columns of data) can be extracted from a single bus/signal. The eight output buses/signals are actually split into 2 groups of four buses/signals each. These sets of four buses/signals each have their own time base and sample count. For example, you can extract I and Q data as a pair of buses/signals with one time base and sample count. Frame start markers and perhaps control commands can be extracted into the second set of buses/signals with a second time base and second sample count.

4 How the Signal Extractor Tool Works




This procedure assumes that a bus or signal that has data to be extracted has already been defined in the logic analyzer module (see "Defining Buses and Signals" (in the online help)).

1 From the main menu, choose Tools>New Signal Extractor....

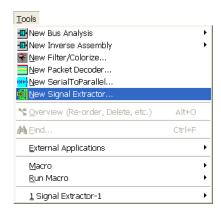

Or, in the Overview window, from a logic analyzer module's drop-down menu, choose **New Tool>Signal Extractor...**

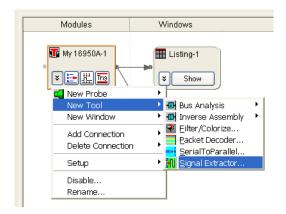

- 2 In the Signal Extractor dialog (see page 49), set up the tool properties:
 - a In the Input Bus/Signal box, click the bus button and select the name of the bus/signal that you want to extract data from.

You can extract signals from one input bus or signal (1 to 128 bits wide).

If your logic analyzer has a large memory depth and you want to reduce the number of samples that are processed (and speed up the processing of data), specify the **Start Sample** and **End Sample** of the data you want to process.


b In the **Extractor Algorithm** box, click **Load Algorithm...** and select the extractor algorithm file (see Creating Extractor Algorithms (see page 19)); then, click **Open**.

Example extractor algorithms have been included. You can find them under "Documents and Settings" for "All Users". For example, the default location is:


C:\Documents and Settings\All Users\Shared Documents\Agilent Technologies\Logic Analyzer\Extractor Algorithms

3 Click **OK** to close the Signal Extractor dialog and perform the extraction.

In the Overview window, the tool connection will look something like:

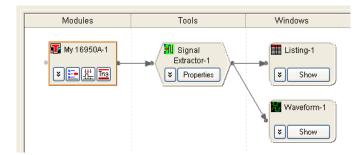

See Also • "Creating Extractor Algorithms" on page 19

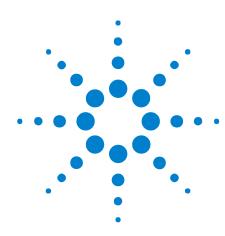

Creating Extractor Algorithms

A typical extraction algorithm file has this format:

- Algorithm name.
- Output bus/signal definitions.
- Signal Extractor patterns.
- Signal Extractor commands.

Extractor algorithm files are ASCII XML format files which you can edit with any text editor.

XML format files and strings have markup like <Tag>data</Tag> where Tag is an element name, <Tag> is a start tag, and </Tag> is an end tag.

XML elements can have data or child elements; child elements can have data or children, and so on.

XML elements can have attributes, which are *name='value'* pairs within the element's start tag. Values must be contained in quotes.

Empty tags are used for elements that don't have any data. Empty tags are distinguished from start tags by a closing /> instead of a closing >. Empty tags can have attributes just like ordinary start tags.

Tag and attribute names are case sensitive (for example, "width" is not same as "Width").

To create an extractor algorithm file:

1 Start with the <ExtractorGrammar> (see page 34) start and end tags:

```
<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
</ExtractorGrammar>
```

The AlgorithmDescription attribute is a text string that gives the algorithm a name; this string also appears in the Signal Extractor tool's properties dialog when the file is loaded.

2 Next, define the output buses/signals using <ExtractorLabel> (see page 36) elements within <ExtractorLabels> start and end tags:



You can define up to four output buses/signals on one timebase. If you want to define output signals on a different timebase, use the <ExtractorFolder> (see page 34) start and end tags which can contain up to four additional <ExtractorLabel> elements:

Some rules for <ExtractorLabel> and <ExtractorFolder>
elements:

- Only one <ExtractorFolder> is allowed. You can generate up to 4 buses/signals outside of a folder, and up to 4 buses/signals inside a folder. You can only generate two time bases.
- Bus/signal names must be unique inside or outside the folder (that is, you cannot have a signal named "Valid" outside the folder and another one inside the folder).
- The first bus/signal named in <ExtractorLabels> must be the first one written to, and it must be written to with the WriteLabelTime (see page 48) command. This is also true for the first bus/signal under <ExtractorFolder>.
- At least one <ExtractorLabel> element must be outside of the <ExtractorFolder> element; otherwise, there will be an error when loading the extractor algorithm.
- **3** Next, define patterns to look for and commands to execute for those patterns within <ExtractorSequences> and <ExtractorSequence> start and end tags:

```
</ExtractorFolder>
</ExtractorLabels>
<ExtractorSequences>
<ExtractorSequence>
</ExtractorSequence>
</ExtractorSequences>
</ExtractorSequences></ExtractorGrammar>
```

Note that the <ExtractorSequences> element can contain multiple <ExtractorSequence> elements. This means you can look for multiple patterns and have a unique command sequence for each pattern. However, only one command sequence can be active at a time. The first pattern that matches will cause the Signal Extractor to start executing the associated command sequence.

a To define patterns to look for, use <ExtractorPattern> (see page 37) elements within <ExtractorPatterns> start and end tags:

```
<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
   <ExtractorLabels>
      <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'</pre>
            VSAOutput='T' VSACompressionFactor='-16'/>
      <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'</pre>
            VSAOutput='T' VSACompressionFactor='-16'/>
      <ExtractorFolder FolderName='SecondBus'>
         <ExtractorLabel Name='FrameMarker' Width='1'
               DefaultBase='Binary' />
      </ExtractorFolder>
   </ExtractorLabels>
   <ExtractorSequences>
      <ExtractorSequence>
         <ExtractorPatterns>
            <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
         </ExtractorPatterns>
      </ExtractorSequence>
   </ExtractorSequences>
</ExtractorGrammar>
```

Pattern value masks can be 1 to 128 bits wide and do not have to be equal to the size of the input bus/signal. This lets you find long (up to 128-bit) patterns on a single bit wide input signal. Pattern value masks can accept 1's, 0's, and don't cares.

b To define commands to execute when a pattern is found, use <ExtractorCmd> (see page 31) elements within <ExtractorCmds> start and end tags:

```
DefaultBase='Binary' />
     </ExtractorFolder>
  </ExtractorLabels>
  <ExtractorSequences>
     <ExtractorSequence>
        <ExtractorPatterns>
            <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
         </ExtractorPatterns>
         <ExtractorCmds>
            <ExtractorCmd Cmd='Load' Bit='2' />
            <ExtractorCmd Cmd='Load' Bit='5' />
            <ExtractorCmd Cmd='Load' Bit='8' />
            <ExtractorCmd Cmd='Load' Bit='11' />
            <ExtractorCmd Cmd='Load' Bit='14' />
            <ExtractorCmd Cmd='Load' Bit='17' />
            <ExtractorCmd Cmd='Load' Bit='20' />
            <ExtractorCmd Cmd='Load' Bit='23' />
            <ExtractorCmd Cmd='Load' Bit='26' />
            <ExtractorCmd Cmd='Load' Bit='29' />
            <ExtractorCmd Cmd='Load' Bit='32' />
            <ExtractorCmd Cmd='Load' Bit='35' />
            <ExtractorCmd Cmd='Load' Bit='38' />
            <ExtractorCmd Cmd='Load' Bit='41' />
            <ExtractorCmd Cmd='Load' Bit='44' />
            <ExtractorCmd Cmd='Load' Bit='47' />
            <ExtractorCmd Cmd='WriteLabelTime' Name='Idata'</pre>
                 BitTime='0' />
            <ExtractorCmd Cmd='Load' Bit='1' />
            <ExtractorCmd Cmd='Load' Bit='4' />
            <ExtractorCmd Cmd='Load' Bit='7' />
            <ExtractorCmd Cmd='Load' Bit='10' />
            <ExtractorCmd Cmd='Load' Bit='13' />
            <ExtractorCmd Cmd='Load' Bit='16' />
            <ExtractorCmd Cmd='Load' Bit='19' />
            <ExtractorCmd Cmd='Load' Bit='22' />
            <ExtractorCmd Cmd='Load' Bit='25' />
            <ExtractorCmd Cmd='Load' Bit='28' />
            <ExtractorCmd Cmd='Load' Bit='31' />
            <ExtractorCmd Cmd='Load' Bit='34' />
            <ExtractorCmd Cmd='Load' Bit='37' />
            <ExtractorCmd Cmd='Load' Bit='40' />
            <ExtractorCmd Cmd='Load' Bit='43' />
            <ExtractorCmd Cmd='Load' Bit='46' />
            <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
            <ExtractorCmd Cmd='JumpDone' />
         </ExtractorCmds>
     </ExtractorSequence>
  </ExtractorSequences>
</ExtractorGrammar>
```

When the pattern matches, the extractor command sequence phase starts. The command sequence phase can:

• Extract-bits into a buffer (Load (see page 45) or LoadRange (see page 46) commands).

- Insert 0's or 1's into a buffer (LoadZero (see page 46) or LoadOne (see page 45) commands).
- Use registers for counters and other math operations (LoadInit (see page 45) to clear register 0 for other register commands, see "Using Register Commands" on page 25).
- Compare bits or time between bits and jump forward or backward in the command sequence (JumpCase1Bit (see page 42), JumpCase2Bit (see page 43), JumpCase3Bit (see page 43), JumpCase4Bit (see page 43), JumpForward (see page 44), JumpBackward (see page 42), JumpCmpReg (see page 44), JumpCmp2Regs (see page 43), or JumpTimeGreaterEqual (see page 44) commands). Be careful not to create loops that never exit.
- Write the buffer to 1 of 8 buses/signals with a time tag or with a generated time tag, like: TimeTag1 + 1/4 (TimeTag2 TimeTag1) (WriteLabelTime (see page 48), WriteLabelTimeDelta (see page 48), or WriteLabel (see page 48) commands).
- Skip ahead X-bits of data (GoTo (see page 42) or GoToReg (see page 42) commands).
- Reset the zero location (ResetBitZero (see page 47) (see page 42) command).
- End the command sequence phase and return to looking for patterns (JumpDone (see page 44) command).
- Enable or disable extractor pattern masks (EnablePattern (see page 42) or DisablePattern (see page 41) commands).
- Split an input pattern into 2, 4, or 8 output patterns (Split (see page 47) command).

When the command sequence phase ends, the Signal Extractor returns to looking for pattern masks, starting again with the first pattern mask.

4 Note that you can include comments in the extractor algorithm file beginning with <!-- and ending with -->. Comments can contain any text except double hyphen strings (which identify the beginning and the end of the comment). Comments can appear anywhere except inside tags. Comments can be used to hide XML elements. Beware of comments that hide required start or end tags.

See Also

- "Using Register Commands" on page 25
- "Using Debug Mode" on page 29
- "Extractor Algorithm XML Format" on page 30
- "Signal Extractor Commands" on page 41
- "Adding a Signal Extractor Tool" on page 17
- The included example extractor algorithm files. You can find them under "Documents and Settings" for "All Users". For example, the default location is:

C:\Documents and Settings\All Users\Shared Documents\Agilent Technologies\Logic Analyzer\Extractor Algorithms

Using Register Commands

There are various types of register commands:

- Register immediate operations: LoadReg (see page 46), AddReg (see page 41), SubReg (see page 47), MultReg (see page 46), DivReg (see page 42), AndReg (see page 41), OrReg (see page 47), and AddRegSignedLimit (see page 41).
- Register immediate jump: JumpCmpReg (see page 44).
- Two-register operations: Add2Regs (see page 41), Sub2Regs (see page 47), Mult2Regs (see page 46), Div2Regs (see page 42), And2Regs (see page 41), Or2Regs (see page 47), and Add2RegsSignedLimit (see page 41).
- Two-register jump: JumpCmp2Regs (see page 43).
- Special register commands: GoToReg (see page 42) and LoadRangeRegs (see page 46).

Register comments:

- Register 0 is an unsigned 128-bit integer and is the only register that can write to labels.
- Register 0 is automatically cleared after each write to a label.
- Register 0 should not be used to store values in.
- All math with register 0 converts results to unsigned 32-bit integers.
- Registers 1, 2, 3 are unsigned 32-bit integers and do unsigned 32-bit integer math.
- The JumpCmp commands use a 32-bit integer compare and jump to one of three locations.
- Divide will check for divide by 0 and make it divide by one so no exception will occur.
- The GoToReg is the same as GoTo Bit='x' except that we GoTo the bit position specified by the register. Only positive numbers. We cannot go to a negative number bit position.

To move the contents of register 0

You can now move the contents of register 0 to a different register by using the Add2Regs (see page 41) command. For example:

```
<!-- Initialize register 1 to zero. -->
<ExtractorCmd Cmd='LoadReg' Number='1' Value='0' />
<!-- Load into register 0 bits zero through five. -->
<ExtractorCmd Cmd='LoadRange' BitStart='0' BitEnd='5' />
<!-- Move register zero to register one. -->
<ExtractorCmd Cmd='Add2Regs' Number='1' Second='0' />
```

To use registers 1, 2, or 3 as counters

You can use the additional registers as counters. For example:

```
<!-- Initialize register 1 to five. -->
                <ExtractorCmd Cmd='LoadReg' Number='1' Value='5' />
                <!-- Subtract a value of 1 from register 1. -->
                <ExtractorCmd Cmd='SubReg' Number='1' Value='1' />
                <ExtractorCmd Cmd='JumpCmpReg' Number='1' Value='0' />
               <!-- If less than zero. -->
               <ExtractorCmd Cmd='JumpForward' Amount='10' />
               <!-- If equal zero. -->
               <ExtractorCmd Cmd='JumpForward' Amount='10' />
               <!-- If greater than zero. -->
                <ExtractorCmd Cmd='WriteLabelTime' Name='Data' BitTime='0' />
Example: using
               <!-- Pick up the length. -->
               <ExtractorCmd Cmd='LoadRange' ... />
      register
commands for a
                <!-- Register 1 has the length. -->
   long packet
               <ExtractorCmd Cmd='AddReg' Number='1' Second='0' />
               <!-- Make sub packets of 64-bytes. -->
               <ExtractorCmd Cmd='SubReg' Number='1' Value='64' />
               <ExtractorCmd Cmd='JumpCmpReg' Number='1' Value='0' />
               <ExtractorCmd Cmd='JumpForward' Amount='20' /> <!-- to Less_End -->
               <ExtractorCmd Cmd='JumpForward' Amount='10' /> <!-- to Equal_End -->
               <ExtractorCmd Cmd='ResetBitZero' />
               <!-- Do normal commands to output a sub packet of 64-bytes. -->
                <ExtractorCmd Cmd='LoadReg' Number='0' Value='0' />
                <ExtractorCmd Cmd='LoadRange' ... />
               <ExtractorCmd Cmd='WriteLabel' ... />
               <!-- Accumulate checksum. -->
               <ExtractorCmd Cmd='Add2Regs' Number='2' Second='0' />
               <ExtractorCmd Cmd='JumpBackward' ... /> <!-- to SubReg, repeat loop -->
               <!-- Equal_End -->
               <!-- Less_End -->
     Example:
               <ExtractorGrammar AlgorithmDescription="Show off the register cmds" >
                  <Comment Value='
   algorithm to
  demonstrate
                      This simple demo shows how we can use registers.
 register usage
                      Run the analyzer off line with dummy data using an eight
                      channel label.
                   '/>
                   <ExtractorLabels>
                      <ExtractorLabel Name='Data' Width='8' DefaultBase='Hex'</pre>
                            VSAOutput='T' VSACompressionFactor='-2'/>
                      <ExtractorLabel Name='Frame' Width='1' DefaultBase='Hex' />
                      <ExtractorLabel Name='BigFrame' Width='1' DefaultBase='Hex' />
```

```
</ExtractorLabels>
<ExtractorSequences>
   <ExtractorSequence>
      <ExtractorPatterns>
         <ExtractorPattern Value='b1' Width='1' Enabled='T' />
      </ExtractorPatterns>
      <ExtractorCmds>
         <ExtractorCmd Cmd='LoadRange' BitStart='0' BitEnd='7'/>
         <ExtractorCmd Cmd='JumpCmpReg' Number='0' Value='h8' />
         <ExtractorCmd Cmd='JumpForward' Amount='35' />
         <ExtractorCmd Cmd='JumpForward' Amount='1' />
         <ExtractorCmd Cmd='JumpCmpReg' Number='0' Value='h22' />
         <ExtractorCmd Cmd='JumpForward' Amount='3' />
         <ExtractorCmd Cmd='JumpForward' Amount='2' />
         <ExtractorCmd Cmd='LoadReg' Number='0' Value='h23' />
         <ExtractorCmd Cmd='LoadReg' Number='1' Value='0' />
         <ExtractorCmd Cmd='Add2Regs' Number='1' Second='0' />
         <ExtractorCmd Cmd='WriteLabelTime' Name='Data'
               BitTime='0' />
         <ExtractorCmd Cmd='LoadOne' />
         <ExtractorCmd Cmd='WriteLabel' Name='Frame' />
         <ExtractorCmd Cmd='LoadOne' />
         <ExtractorCmd Cmd='WriteLabel' Name='BigFrame' />
         <ExtractorCmd Cmd='GoTo' Bit='8' />
         <ExtractorCmd Cmd='ResetBitZero' />
         <Comment Value=' Making little frames of 4-bytes' />
         <ExtractorCmd Cmd='LoadRange' BitStart='0' BitEnd='7'/>
         <ExtractorCmd Cmd='WriteLabelTime' Name='Data'</pre>
               BitTime='7' />
         <ExtractorCmd Cmd='LoadOne' />
         <ExtractorCmd Cmd='WriteLabel' Name='Frame' />
         <ExtractorCmd Cmd='LoadRange' BitStart='8' BitEnd='15'/>
         <ExtractorCmd Cmd='WriteLabelTime' Name='Data'</pre>
               BitTime='15' />
         <ExtractorCmd Cmd='LoadRange' BitStart='16' BitEnd='23'/>
         <ExtractorCmd Cmd='WriteLabelTime' Name='Data'</pre>
               BitTime='23' />
         <ExtractorCmd Cmd='LoadRange' BitStart='24' BitEnd='31'/>
         <ExtractorCmd Cmd='WriteLabelTime' Name='Data'</pre>
               BitTime='31' />
         <ExtractorCmd Cmd='SubReg' Number='1' Value='4' />
         <ExtractorCmd Cmd='JumpCmpReg' Number='1' Value='4' />
         <ExtractorCmd Cmd='JumpForward' Amount='6' />
         <ExtractorCmd Cmd='JumpForward' Amount='1' />
         <ExtractorCmd Cmd='GoTo' Bit='32' />
         <ExtractorCmd Cmd='ResetBitZero' />
         <ExtractorCmd Cmd='JumpBackward' Amount='16' />
         <ExtractorCmd Cmd='WriteLabelTime' Name='Data'</pre>
               BitTime='0' />
         <ExtractorCmd Cmd='JumpDone'/>
         <ExtractorCmd Cmd='JumpDone'/>
         <ExtractorCmd Cmd='JumpDone'/>
         <ExtractorCmd Cmd='JumpDone'/>
         <ExtractorCmd Cmd='JumpDone'/>
         <ExtractorCmd Cmd='JumpDone'/>
         <ExtractorCmd Cmd='JumpDone'/>
```

6 Creating Extractor Algorithms

See Also

- "Creating Extractor Algorithms" on page 19
- "Signal Extractor Commands" on page 41

Using Debug Mode

You can debug Signal Extractor algorithms by turning on debug mode:

1 Use the DebugMode='On' attribute in the <ExtractorGrammar> (see page 34) element. For example:

```
<ExtractorGrammar AlgorithmDescription='Some description'
DebugMode='On' >
```

- 2 In the Agilent Logic Analyzer application, choose Edit->Options....
- 3 In the Options dialog, check Event Logging.
 - When you complete debugging, you will want to uncheck the Event Logging.
- **4** Load the Signal Extractor with the algorithm file that you want to debug. See "Adding a Signal Extractor Tool" on page 17.
- 5 Now, when the Signal Extractor is used, the debug output will be sent to the logic analyzer event logs which are located in \My Documents\ Agilent Technologies\Logic Analyzer\Log Files. Examine the agLastLogFolder.txt file to determine the folder to look at.

Example Debug Output

Extractor Algorithm XML Format

You can create Signal Extractor algorithms as XML format files with the following XML elements and hierarchy:

Example Note that you can have multiple <ExtractorSequence> elements to define different sets of commands for different patterns.

```
<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
   <ExtractorLabels>
      <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'</pre>
            VSAOutput='T' VSACompressionFactor='-16'/>
      <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'</pre>
            VSAOutput='T' VSACompressionFactor='-16'/>
      <ExtractorFolder FolderName='SecondBus'>
         <ExtractorLabel Name='FrameMarker' Width='1'
              DefaultBase='Binary' />
      </ExtractorFolder>
   </ExtractorLabels>
   <ExtractorSequences>
      <ExtractorSequence>
         <ExtractorPatterns>
            <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
         </ExtractorPatterns>
         <ExtractorCmds>
            <ExtractorCmd Cmd='Load' Bit='2' />
            <ExtractorCmd Cmd='Load' Bit='5' />
            <ExtractorCmd Cmd='Load' Bit='8' />
            <ExtractorCmd Cmd='Load' Bit='11' />
            <ExtractorCmd Cmd='Load' Bit='14' />
            <ExtractorCmd Cmd='Load' Bit='17' />
            <ExtractorCmd Cmd='Load' Bit='20' />
            <ExtractorCmd Cmd='Load' Bit='23' />
            <ExtractorCmd Cmd='Load' Bit='26' />
            <ExtractorCmd Cmd='Load' Bit='29' />
            <ExtractorCmd Cmd='Load' Bit='32' />
            <ExtractorCmd Cmd='Load' Bit='35' />
            <ExtractorCmd Cmd='Load' Bit='38' />
            <ExtractorCmd Cmd='Load' Bit='41' />
            <ExtractorCmd Cmd='Load' Bit='44' />
            <ExtractorCmd Cmd='Load' Bit='47' />
            <ExtractorCmd Cmd='WriteLabelTime' Name='Idata'
                  BitTime='0' />
            <ExtractorCmd Cmd='Load' Bit='1' />
```

```
<ExtractorCmd Cmd='Load' Bit='4' />
            <ExtractorCmd Cmd='Load' Bit='7' />
            <ExtractorCmd Cmd='Load' Bit='10' />
            <ExtractorCmd Cmd='Load' Bit='13' />
            <ExtractorCmd Cmd='Load' Bit='16' />
            <ExtractorCmd Cmd='Load' Bit='19' />
            <ExtractorCmd Cmd='Load' Bit='22' />
            <ExtractorCmd Cmd='Load' Bit='25' />
            <ExtractorCmd Cmd='Load' Bit='28' />
            <ExtractorCmd Cmd='Load' Bit='31' />
            <ExtractorCmd Cmd='Load' Bit='34' />
            <ExtractorCmd Cmd='Load' Bit='37' />
            <ExtractorCmd Cmd='Load' Bit='40' />
            <ExtractorCmd Cmd='Load' Bit='43' />
            <ExtractorCmd Cmd='Load' Bit='46' />
            <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
            <ExtractorCmd Cmd='JumpDone' />
         </ExtractorCmds>
     </ExtractorSequence>
  </ExtractorSequences>
</ExtractorGrammar>
```

See Also • "Creating Extractor Algorithms" on page 19

<ExtractorCmd> Element

<ExtractorCmd> elements are the heart of the Signal Extractor tool.
They let you extract bits into a value and then write the value to a
bus/signal.

Attributes

Name	Description
Amount	'number' — Used with Cmd='JumpBackward', Cmd='JumpForward',Cmd='Split'.
Bit	'number' — Non-negative signed 32-bit integer, used with Cmd='GoTo', Cmd='Load'.
Bit1	'number' — Non-negative signed 32-bit integer, used with Cmd='JumpCase1Bit', Cmd='JumpCase3Bit', Cmd='JumpCase3Bit', Cmd='JumpCase4Bit'.
Bit2	'number' — Non-negative signed 32-bit integer, used with Cmd='JumpCase2Bit', Cmd='JumpCase4Bit'.
Bit3	'number' — Non-negative signed 32-bit integer, used with Cmd='JumpCase3Bit', Cmd='JumpCase4Bit'.
Bit4	'number' — Non-negative signed 32-bit integer, used with Cmd='JumpCase4Bit'.

6 Creating Extractor Algorithms

BitEnd	'number' — Non-negative signed 32-bit integer, used with Cmd='LoadRange'.
BitStart	'number' — Non-negative signed 32-bit integer, used with Cmd='LoadRange'.
BitTime	'number' — Non-negative signed 32-bit integer, used with Cmd='WriteLabelTime'.
BitTimeEnd	'number' — Non-negative signed 32-bit integer, used with Cmd='WriteLabelTimeDelta'.
BitTimeStart	'number' — Non-negative signed 32-bit integer, used with Cmd='WriteLabelTimeDelta'.
Cmd	'string' — Name of the command, used with all commands. See "Signal Extractor Commands" on page 41.
Limit	'number' — From 1 to 32, used with signed limit register addition commands.
Name	<pre>'string' — Name of a bus/signal, used with Cmd='WriteLabel',Cmd='WriteLabelTime', Cmd='WriteLabelTimeDelta',Cmd='Split'.</pre>
Number	'zero-based_number'— Used with Cmd='DisablePattern', Cmd='EnablePattern'.
Second	'zero-based_number' — Used with register commands to identify the second register (0, 1, 2, or 3).
Size	'number' — Used with Cmd='Split'.
TimeDen	'decimal' — Denominator in fraction, used with Cmd='WriteLabelTimeDelta'.
TimeNum	'decimal' — Numerator in fraction, used with Cmd='WriteLabelTimeDelta'.
TimePS	'number' — Time in picoseconds, used with Cmd='JumpTimeGreaterEqual'.
Value	'number' — 32-bit integer, used with register commands.

Parents This element can have the following parents: <ExtractorCmds> (see page 33).

```
Example
```

```
<ExtractorCmds>
  <ExtractorCmd Cmd='Load' Bit='2' />
  <ExtractorCmd Cmd='Load' Bit='5' />
  <ExtractorCmd Cmd='Load' Bit='8' />
  <ExtractorCmd Cmd='Load' Bit='11' />
  <ExtractorCmd Cmd='Load' Bit='14' />
  <ExtractorCmd Cmd='Load' Bit='17' />
```

```
<ExtractorCmd Cmd='Load' Bit='20' />
  <ExtractorCmd Cmd='Load' Bit='23' />
  <ExtractorCmd Cmd='Load' Bit='26' />
  <ExtractorCmd Cmd='Load' Bit='29' />
  <ExtractorCmd Cmd='Load' Bit='32' />
  <ExtractorCmd Cmd='Load' Bit='35' />
  <ExtractorCmd Cmd='Load' Bit='38' />
  <ExtractorCmd Cmd='Load' Bit='41' />
  <ExtractorCmd Cmd='Load' Bit='44' />
  <ExtractorCmd Cmd='Load' Bit='47' />
  <ExtractorCmd Cmd='WriteLabelTime' Name='Idata' BitTime='0' />
  <ExtractorCmd Cmd='Load' Bit='1' />
  <ExtractorCmd Cmd='Load' Bit='4' />
  <ExtractorCmd Cmd='Load' Bit='7' />
  <ExtractorCmd Cmd='Load' Bit='10' />
  <ExtractorCmd Cmd='Load' Bit='13' />
  <ExtractorCmd Cmd='Load' Bit='16' />
  <ExtractorCmd Cmd='Load' Bit='19' />
  <ExtractorCmd Cmd='Load' Bit='22' />
  <ExtractorCmd Cmd='Load' Bit='25' />
  <ExtractorCmd Cmd='Load' Bit='28' />
  <ExtractorCmd Cmd='Load' Bit='31' />
  <ExtractorCmd Cmd='Load' Bit='34' />
  <ExtractorCmd Cmd='Load' Bit='37' />
  <ExtractorCmd Cmd='Load' Bit='40' />
  <ExtractorCmd Cmd='Load' Bit='43' />
  <ExtractorCmd Cmd='Load' Bit='46' />
  <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
   <ExtractorCmd Cmd='JumpDone' />
</ExtractorCmds>
```

<ExtractorCmds> Element

The <ExtractorCmds> element contains <ExtractorCmd> elements.

Children This element can have the following children: <ExtractorCmd> (see page 31).

Parents This element can have the following parents: <ExtractorSequence> (see page 38).

Example <ExtractorCmds>

```
<ExtractorCmd Cmd='Load' Bit='2' />
<ExtractorCmd Cmd='Load' Bit='5' />
<ExtractorCmd Cmd='Load' Bit='8' />
<ExtractorCmd Cmd='Load' Bit='11' />
<ExtractorCmd Cmd='Load' Bit='14' />
<ExtractorCmd Cmd='Load' Bit='17' />
<ExtractorCmd Cmd='Load' Bit='20' />
<ExtractorCmd Cmd='Load' Bit='20' />
<ExtractorCmd Cmd='Load' Bit='23' />
<ExtractorCmd Cmd='Load' Bit='23' />
<ExtractorCmd Cmd='Load' Bit='29' />
<ExtractorCmd Cmd='Load' Bit='32' />
<ExtractorCmd Cmd='Load' Bit='35' />
<ExtractorCmd Cmd='Load' Bit='38' />
<ExtractorCmd Cmd='Load' Bit='38' />
<ExtractorCmd Cmd='Load' Bit='41' />
```

```
<ExtractorCmd Cmd='Load' Bit='44' />
  <ExtractorCmd Cmd='Load' Bit='47' />
  <ExtractorCmd Cmd='WriteLabelTime' Name='Idata' BitTime='0' />
  <ExtractorCmd Cmd='Load' Bit='1' />
  <ExtractorCmd Cmd='Load' Bit='4' />
  <ExtractorCmd Cmd='Load' Bit='7' />
  <ExtractorCmd Cmd='Load' Bit='10' />
  <ExtractorCmd Cmd='Load' Bit='13' />
  <ExtractorCmd Cmd='Load' Bit='16' />
  <ExtractorCmd Cmd='Load' Bit='19' />
  <ExtractorCmd Cmd='Load' Bit='22' />
  <ExtractorCmd Cmd='Load' Bit='25' />
  <ExtractorCmd Cmd='Load' Bit='28' />
  <ExtractorCmd Cmd='Load' Bit='31' />
  <ExtractorCmd Cmd='Load' Bit='34' />
  <ExtractorCmd Cmd='Load' Bit='37' />
  <ExtractorCmd Cmd='Load' Bit='40' />
  <ExtractorCmd Cmd='Load' Bit='43' />
  <ExtractorCmd Cmd='Load' Bit='46' />
  <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
  <ExtractorCmd Cmd='JumpDone' />
</ExtractorCmds>
```

<ExtractorFolder> Element

The <ExtractorFolder> element contains output bus/signal definitions for a second time base.

Attributes

Name	Description
FolderName	'string' — Name for second group of 4 bus/signals. This is only needed if you are going to create a second time base and group of up to 4 bus/signals.

< Extractor Grammar > Element

The <ExtractorGrammar> element is the top element in an XML format Signal Extractor algorithm file.

Attributes

Name	Description
AlgorithmDescription	'string' — Short text description of the algorithm.
DebugMode	'On' — If present, this attribute causes all Signal Extractor operations to be sent to the logic analyzer event logging file. See "Using Debug Mode" on page 29.
InputMode	'Serialize' — If present, this attribute will cause the Signal Extractor tool to serialize the input bus/signal into a single bit stream before it starts searching for patterns.

Children This element can have the following children: <ExtractorLabels> (see page 37), <ExtractorSequences> (see page 39).

Parents None.

```
Example
```

```
<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
   <ExtractorLabels>
      <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'</pre>
            VSAOutput='T' VSACompressionFactor='-16'/>
      <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'</pre>
            VSAOutput='T' VSACompressionFactor='-16'/>
      <ExtractorFolder FolderName='SecondBus'>
         <ExtractorLabel Name='FrameMarker' Width='1'</pre>
               DefaultBase='Binary' />
      </ExtractorFolder>
   </ExtractorLabels>
   <ExtractorSequences>
      <ExtractorSequence>
         <ExtractorPatterns>
            <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
         </ExtractorPatterns>
         <ExtractorCmds>
            <ExtractorCmd Cmd='Load' Bit='2' />
            <ExtractorCmd Cmd='Load' Bit='5' />
            <ExtractorCmd Cmd='Load' Bit='8' />
            <ExtractorCmd Cmd='Load' Bit='11' />
            <ExtractorCmd Cmd='Load' Bit='14' />
            <ExtractorCmd Cmd='Load' Bit='17' />
            <ExtractorCmd Cmd='Load' Bit='20' />
            <ExtractorCmd Cmd='Load' Bit='23' />
            <ExtractorCmd Cmd='Load' Bit='26' />
            <ExtractorCmd Cmd='Load' Bit='29' />
            <ExtractorCmd Cmd='Load' Bit='32' />
            <ExtractorCmd Cmd='Load' Bit='35' />
            <ExtractorCmd Cmd='Load' Bit='38' />
            <ExtractorCmd Cmd='Load' Bit='41' />
            <ExtractorCmd Cmd='Load' Bit='44' />
            <ExtractorCmd Cmd='Load' Bit='47' />
            <ExtractorCmd Cmd='WriteLabelTime' Name='Idata'</pre>
                  BitTime='0' />
            <ExtractorCmd Cmd='Load' Bit='1' />
            <ExtractorCmd Cmd='Load' Bit='4' />
```

```
<ExtractorCmd Cmd='Load' Bit='7' />
            <ExtractorCmd Cmd='Load' Bit='10' />
            <ExtractorCmd Cmd='Load' Bit='13' />
            <ExtractorCmd Cmd='Load' Bit='16' />
            <ExtractorCmd Cmd='Load' Bit='19' />
            <ExtractorCmd Cmd='Load' Bit='22' />
            <ExtractorCmd Cmd='Load' Bit='25' />
            <ExtractorCmd Cmd='Load' Bit='28' />
            <ExtractorCmd Cmd='Load' Bit='31' />
            <ExtractorCmd Cmd='Load' Bit='34' />
            <ExtractorCmd Cmd='Load' Bit='37' />
            <ExtractorCmd Cmd='Load' Bit='40' />
            <ExtractorCmd Cmd='Load' Bit='43' />
            <ExtractorCmd Cmd='Load' Bit='46' />
            <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
            <ExtractorCmd Cmd='JumpDone' />
         </ExtractorCmds>
      </ExtractorSequence>
   </ExtractorSequences>
</ExtractorGrammar>
```

<ExtractorLabel> Element

The <ExtractorLabel> element contains an output bus/signal definition.

Attributes

Name	Description
DefaultBase	'Binary','Hex','Octal','Decimal', 'Signed Decimal'
Name	'string' — Text name of output bus/signal to display.
VSACompressionFactor	'number' — Optional value used to tell the Agilent 89601A vector signal analysis software about the serial compression or expansion that is occurring between the input data to the output data. A value of -16 implies that for every 16 input states the output bus/signal has 1 state. A value of +4 implies that for every 1 input state we are generating 4 output states.
VSAOutput	'F' — The bus/signal cannot be used with the Agilent 89601A vector signal analysis software. 'T' — The bus/signal can be used with the Agilent 89601A vector signal analysis software.
Width	'number' — Width of the output bus/signal in channels (1 to 128).

```
Parents This element can have the following parents: <ExtractorLabels> (see page 37), <ExtractorFolder> (see page 34).
```

```
Example <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex' VSAOutput='T' VSACompressionFactor='-16'/>
```

< Extractor Labels > Element

The <ExtractorLabels> element contains output bus/signal and bus/signal folder definitions.

Children This element can have the following children: <ExtractorLabel> (see page 36), <ExtractorFolder> (see page 34).

Parents This element can have the following parents: <ExtractorGrammar> (see page 34).

< Extractor Pattern > Element

The <ExtractorPattern> element describes a pattern to be found.

Attributes

Name	Description
Enabled	${}^{'} F{}^{'}$ — To indicate that this pattern is initially disabled. ${}^{'} T{}^{'}$ — If this pattern is initially enabled.
Value	'binary_or_hex_number' — Binary or hex pattern to search for first. Use a leading 'b' or 'h' and 'X' for don't care on some bits.
Width	'number' — Width of the pattern that you are looking for (1 to 128).

Parents This element can have the following parents: <ExtractorPatterns> (see page 37).

<ExtractorPatterns> Element

The <ExtractorPatterns> element contains <ExtractorPattern> elements.

Children This element can have the following children: <ExtractorPattern> (see page 37).

< Extractor Sequence > Element

</ExtractorPatterns>

Each extractor sequence consists of a set of extractor patterns and extractor commands. When one of the extractor patterns matches, it will start executing the corresponding extractor commands.

Multiple occurrences of ExtractorSequence can exist. Make sure the more specific ExtractorSequence occurs before the more generic ExtractorSequence. For example, you may have an ExtractorSequence to match for a particular type of serial frame and extract I and Q data from it as the first ExtractorSequence. Then, you may have a default ExtractorSequence to match all other types of serial frames that you are trying to determine sizes of so that you can skip past them properly.

Children This element can have the following children: <ExtractorPatterns> (see page 37), <ExtractorCmds> (see page 33).

Parents This element can have the following parents: <ExtractorSequences> (see page 39).

```
Example
         <ExtractorSequence>
            <ExtractorPatterns>
               <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
            </ExtractorPatterns>
            <ExtractorCmds>
               <ExtractorCmd Cmd='Load' Bit='2' />
               <ExtractorCmd Cmd='Load' Bit='5' />
               <ExtractorCmd Cmd='Load' Bit='8' />
               <ExtractorCmd Cmd='Load' Bit='11' />
               <ExtractorCmd Cmd='Load' Bit='14' />
               <ExtractorCmd Cmd='Load' Bit='17' />
               <ExtractorCmd Cmd='Load' Bit='20' />
               <ExtractorCmd Cmd='Load' Bit='23' />
               <ExtractorCmd Cmd='Load' Bit='26' />
               <ExtractorCmd Cmd='Load' Bit='29' />
```

<ExtractorCmd Cmd='Load' Bit='32' />
<ExtractorCmd Cmd='Load' Bit='35' />
<ExtractorCmd Cmd='Load' Bit='38' />
<ExtractorCmd Cmd='Load' Bit='41' />

```
<ExtractorCmd Cmd='Load' Bit='44' />
<ExtractorCmd Cmd='Load' Bit='47' />
<ExtractorCmd Cmd='WriteLabelTime' Name='Idata' BitTime='0' />
<ExtractorCmd Cmd='Load' Bit='1' />
<ExtractorCmd Cmd='Load' Bit='4' />
<ExtractorCmd Cmd='Load' Bit='7' />
<ExtractorCmd Cmd='Load' Bit='7' />
```

```
<ExtractorCmd Cmd='Load' Bit='13' />
     <ExtractorCmd Cmd='Load' Bit='16' />
     <ExtractorCmd Cmd='Load' Bit='19' />
     <ExtractorCmd Cmd='Load' Bit='22' />
     <ExtractorCmd Cmd='Load' Bit='25' />
     <ExtractorCmd Cmd='Load' Bit='28' />
     <ExtractorCmd Cmd='Load' Bit='31' />
     <ExtractorCmd Cmd='Load' Bit='34' />
     <ExtractorCmd Cmd='Load' Bit='37' />
     <ExtractorCmd Cmd='Load' Bit='40' />
     <ExtractorCmd Cmd='Load' Bit='43' />
     <ExtractorCmd Cmd='Load' Bit='46' />
     <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
     <ExtractorCmd Cmd='JumpDone' />
   </ExtractorCmds>
</ExtractorSequence>
```

< Extractor Sequences > Element

The <ExtractorSequences> element contains <ExtractorSequence> elements.

Children This element can have the following children: <ExtractorSequence> (see page 38).

Parents This element can have the following parents: <ExtractorGrammar> (see page 34).

```
Example <ExtractorSequences>
```

```
<ExtractorSequence>
  <ExtractorPatterns>
      <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
  </ExtractorPatterns>
   <ExtractorCmds>
      <ExtractorCmd Cmd='Load' Bit='2' />
      <ExtractorCmd Cmd='Load' Bit='5' />
      <ExtractorCmd Cmd='Load' Bit='8' />
      <ExtractorCmd Cmd='Load' Bit='11' />
      <ExtractorCmd Cmd='Load' Bit='14' />
      <ExtractorCmd Cmd='Load' Bit='17' />
      <ExtractorCmd Cmd='Load' Bit='20' />
      <ExtractorCmd Cmd='Load' Bit='23' />
      <ExtractorCmd Cmd='Load' Bit='26' />
      <ExtractorCmd Cmd='Load' Bit='29' />
      <ExtractorCmd Cmd='Load' Bit='32' />
      <ExtractorCmd Cmd='Load' Bit='35' />
      <ExtractorCmd Cmd='Load' Bit='38' />
      <ExtractorCmd Cmd='Load' Bit='41' />
      <ExtractorCmd Cmd='Load' Bit='44' />
      <ExtractorCmd Cmd='Load' Bit='47' />
      <ExtractorCmd Cmd='WriteLabelTime' Name='Idata' BitTime='0' />
      <ExtractorCmd Cmd='Load' Bit='1' />
      <ExtractorCmd Cmd='Load' Bit='4' />
      <ExtractorCmd Cmd='Load' Bit='7' />
      <ExtractorCmd Cmd='Load' Bit='10' />
```

```
<ExtractorCmd Cmd='Load' Bit='13' />
        <ExtractorCmd Cmd='Load' Bit='16' />
        <ExtractorCmd Cmd='Load' Bit='19' />
        <ExtractorCmd Cmd='Load' Bit='22' />
        <ExtractorCmd Cmd='Load' Bit='25' />
        <ExtractorCmd Cmd='Load' Bit='28' />
        <ExtractorCmd Cmd='Load' Bit='31' />
        <ExtractorCmd Cmd='Load' Bit='34' />
        <ExtractorCmd Cmd='Load' Bit='37' />
        <ExtractorCmd Cmd='Load' Bit='40' />
        <ExtractorCmd Cmd='Load' Bit='43' />
        <ExtractorCmd Cmd='Load' Bit='46' />
         <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
         <ExtractorCmd Cmd='JumpDone' />
      </ExtractorCmds>
   </ExtractorSequence>
</ExtractorSequences>
```

Signal Extractor Commands

 Table 1
 Signal Extractor Commands

Command	Parameters	Description
Add2Regs	Number Second	Adds to one register (Number='0,1,2,3') a value from another register (Second='0,1,2,3').
		<extractorcmd <br="" cmd="Add2Regs" number="2">Second='3' /></extractorcmd>
Add2RegsSignedLimit	Number Second Limit	Adds to one register (Number='0,1,2,3') a signed value from another register (Second='0,1,2,3'). The limit specifies the maximum and minimum values for the result (for example, with Limit='8', results must be from -80H to +7FH). <extractorcmd cmd="Add2RegsSignedLimit" limit="8" number="2" second="3"></extractorcmd>
AddReg	Number Value	Adds to a register (Number='0,1,2,3') an unsigned 32-bit integer value. <extractorcmd cmd="AddReg" number="2" value="hFFFF0"></extractorcmd>
AddRegSignedLimit	Number Value Limit	Adds to a register (Number='0,1,2,3') a signed 32-bit integer value. The limit specifies the maximum and minimum values for the result (for example, with Limit='8', results must be from -80H to +7FH).
		<extractorcmd cmd="AddRegSignedLimit" limit="8" number="2" value="hFFFFFFC0"></extractorcmd>
And2Regs	Number Second	Logically AND one register (Number='0,1,2,3') with a value from another register (Second='0,1,2,3').
		<extractorcmd <br="" cmd="And2Regs" number="2">Second='3' /></extractorcmd>
AndReg	Number Value	Logically AND a register (Number='0,1,2,3') with an unsigned 32-bit integer value. <extractorcmd cmd="AndReg" number="2" value="hFFFF0"></extractorcmd>
DisablePattern	Number	Disables the specified pattern (Number='zero-based_number'). If a pattern is disabled, it is not available to be matched. <extractorcmd cmd="DisablePattern" number="0"></extractorcmd>

 Table 1
 Signal Extractor Commands (continued)

Command	Parameters	Description
Div2Regs	Number Second	Divides one register (Number='0,1,2,3') with a value from another register (Second='0,1,2,3').
		<extractorcmd cmd="Div2Regs" number="2" second="3"></extractorcmd>
DivReg	Number Value	Divides a register (Number='0,1,2,3') with an unsigned 32-bit integer value.
	Value	<pre><extractorcmd cmd="DivReg" number="2" value="hffff0"></extractorcmd></pre>
EnablePattern	Number	Enables the specified pattern (Number='zero-based_number'). If a pattern is enabled, it is available to be matched. The first pattern that matches the value is accepted.
		<extractorcmd cmd="EnablePattern" number="3"></extractorcmd>
GoTo	Bit	Use this command to goto a specified bit (Bit='number'). This command is useful to position the extractor tool so that the next pattern match starts at the bit after the bit specified. Typically, you go to a specified bit and then execute a 'JumpDone' command. Note that a 'Load' bit command followed by a 'JumpDone' command has the same effect.
		<extractorcmd bit="1024" cmd="GoTo"></extractorcmd>
GoToReg	Number	Go to a bit number defined by a register (Number='0,1,2,3').
		<extractorcmd cmd="GoToReg" number="2"></extractorcmd>
JumpBackward	Amount	Jump backward the specified number of commands (Amount='number' from 1 to N; 0 is not allowed). Use this command to change the execution by jumping backward in the command sequence.
		<pre><extractorcmd amount="2" cmd="JumpBackward"></extractorcmd></pre>
JumpCase1Bit	Bit1	Use the value of the specified bit (Bit1='number') to determine the number of instructions to jump forward. If the value of the specified bit is zero, the next command will be executed. If the value of the specified bit is one, execution will skip one command and proceed on the next command.
		<pre><extractorcmd bit1="0" cmd="JumpCase1Bit"></extractorcmd></pre>

 Table 1
 Signal Extractor Commands (continued)

Command	Parameters	Description
JumpCase2Bit	Bit1 Bit2	Use the value of the specified bits (Bit1='number', Bit2='number') to determine the number of instructions to jump forward. Note Bit1 is the most significant bit (MSB). If the value at Bit1 is 1 and Bit2 is 0, the Signal Extractor jumps forward 10 binary +1 (always jumps forward to next command) or a total of 3 commands.
		<pre><extractorcmd bit1="0" bit2="1" cmd="JumpCase2Bit"></extractorcmd></pre>
JumpCase3Bit	Bit1 Bit2 Bit3	Use the value of the specified bits (Bit1, Bit2, Bit3) to determine the number of instructions to jump forward. This command is similar to the 'JumpCase2Bit' command except that it uses 3 bits.
		<extractorcmd <br="" bit1="0" cmd="JumpCase3Bit">Bit2='1' Bit3='2' /></extractorcmd>
JumpCase4Bit	Bit1 Bit2 Bit3 Bit4	Use the value of the specified bits (Bit1, Bit2, Bit3, Bit4) to determine the number of instructions to jump forward. This command is similar to the 'JumpCase2Bit' command except that it uses 4 bits. <extractorcmd bit1="0" bit2="1" bit3="2" bit4="3" cmd="JumpCase4Bit"></extractorcmd>
JumpCmp2Regs	Number Second	Compares one register (Number='0,1,2,3') with a value from another register (Second='0,1,2,3'). If register < value, execution jumps to the
		first command after. If register = value, execution jumps to the second command after.
		If register > value, execution jumps to the third command after.
		<pre><extractorcmd cmd="JumpCmp2Regs" number="2" second="3"></extractorcmd></pre>

 Table 1
 Signal Extractor Commands (continued)

Command	Parameters	Description
JumpCmpReg	Number Value	Compares a register (Number='0,1,2,3') with an unsigned 32-bit integer value.
	varae	If register < value, execution jumps to the first command after.
		If register = value, execution jumps to the second command after.
		If register > value, execution jumps to the third command after.
		<extractorcmd cmd="JumpCmpReg" number="2" value="hFFFF0"></extractorcmd>
JumpDone	None	Jump to the end of the command section and return to the pattern matching section of the Signal Extractor tool.
		<extractorcmd cmd="JumpDone"></extractorcmd>
JumpForward	Amount	Jump forward the specified number of commands (Amount='number' from 1 to N; 0 is not allowed). Use this command to change the execution by jumping forward in the command sequence.
		<extractorcmd amount="3" cmd="JumpForward"></extractorcmd>
JumpTimeGreaterEqual	BitTimeStart BitTimeEnd TimePS	Lets Signal Extractor make decisions based upon the time between two bits. All bits of a particular sample have the same time stamp, so you must choose bit numbers that represent the sample that you want to test.
		If the time between the starting and ending bits is less than the time in picoseconds, execution jumps to the first command after.
		If the time between the starting and ending bits is greater than or equal to the time in picoseconds, execution jumps to the second command after.
		<extractorcmd bittimeend="40" bittimestart="1" cmd="JumpTimeGreaterEqual" timeps="400"></extractorcmd>

 Table 1
 Signal Extractor Commands (continued)

Command	Parameters	Description
Load	Bit	Load the specified bit (Bit='number') into internal register 0. Bits already in the register are shifted by one bit to the left and this newest bit is ORed into the value. Note that bit 0 is considered the first left side bit in a pattern that matches. (Example: A 3 bit pattern is bit-0,bit-1,bit-2 for the pattern that matches and bit-3, bit-4, bit-5 for the next 3-bit pattern, etc.) <extractorcmd bit="0" cmd="Load"></extractorcmd>
LoadInit	None	Clears register 0.
		Register 0 is cleared when it is written to a label. It is also cleared at the beginning of the Signal Extractor. However, it is not cleared after a JumpDone command.
		The LoadInit command gives you the ability to use multiple extractor patterns to search for the bits to make a write statement. For example, these commands output 8 bits of Data from both patterns:
		ExtractorPattern Value='b1010xxxx' LoadRange BitStart='3' BitEnd='7' JumpDone ExtractorPattern Value='b1001xxxx' LoadRange BitStart='3' BitEnd='7' WriteLabelTime Name='Data' BitTime='0'
		Now, a second example using LoadInit to clear register 0 results in 4 bits of Data being output from just the second pattern:
		ExtractorPattern Value='b1010xxxx' LoadRange BitStart='3' BitEnd='7' JumpDone ExtractorPattern Value='b1001xxxx' LoadInit LoadRange BitStart='3' BitEnd='7' WriteLabelTime Name='Data' BitTime='0'
LoadOne	None	Loads a single bit of value one into internal register 0.
		<extractorcmd cmd="LoadOne"></extractorcmd>

 Table 1
 Signal Extractor Commands (continued)

Command	Parameters	Description
LoadRange	BitStart BitEnd	Load the specified range of bits (BitStart='number', BitEnd='number') into internal register 0. Bits already in the register are shifted to the left and these newest bits are ORed into the value. Note that BitStart and BitEnd can be any positive value. The BitStart will be ORed in first regardless of whether BitStart is greater than or less than BitEnd. <extractorcmd bitend="7" bitstart="0" cmd="LoadRange"></extractorcmd>
LoadRangeRegs	Number Second	Load the specified range of bits where the starting bit in the range is in one register (Number='0,1,2,3') and the ending bit in the range is in another register (Second='0,1,2,3'). Bits already in register 0 are shifted to the left and these newest bits are ORed into the value. The starting bit will be ORed in first regardless of whether it is greater than or less than the ending bit. <extractorcmd cmd="LoadRangeRegs" number="2" second="3"></extractorcmd>
LoadReg	Number Value	Loads a register (Number='0,1,2,3') with an unsigned 32-bit integer value. <extractorcmd cmd="LoadReg" number="2" value="hFFFF0"></extractorcmd>
LoadZero	None	Loads a single bit of value zero into internal register 0. <pre> <extractorcmd cmd="LoadZero"></extractorcmd> </pre>
Mult2Regs	Number Second	Multiplies one register (Number='0,1,2,3') with a value from another register (Second='0,1,2,3'). <extractorcmd cmd="Mult2Regs" number="2" second="3"></extractorcmd>
MultReg	Number Value	Multiplies a register (Number='0,1,2,3') with an unsigned 32-bit integer value. <extractorcmd cmd="MultReg" number="2" value="hFFFF0"></extractorcmd>


 Table 1
 Signal Extractor Commands (continued)

Command	Parameters	Description
Or2Regs	Number Second	Logically OR one register (Number='0,1,2,3') with a value from another register (Second='0,1,2,3').
		<extractorcmd cmd="Or2Regs" number="2" second="3"></extractorcmd>
OrReg	Number Value	Logically OR a register (Number='0,1,2,3') with an unsigned 32-bit integer value. <extractorcmd <="" cmd="OrReg" number="2" td=""></extractorcmd>
ResetBitZero	None	Value='hFFFF0' /> Resets the zero location. This command saves you from having to remember bit locations. The bit zero location can be assigned to a new
		value and the relative bit locations are now based upon this new location. For example: GoTo Bit='97' ResetBitZero LoadRange BitStart='3' BitEnd='7'
Split	Amount Size Name	Use this command to split a pattern into specified number of patterns (Amount='2', '4', '8') of size (Size='number' of channels) and then place these values using appropriate time tags on the bus/signal (Name='string'). Use this command to Remultiplex A-to-D for fastest performance. Note: Additional qualifications may be needed for fastest performance.
		<extractorcmd <br="" amount="4" cmd="Split">Size='16' Name='A-to-D' /></extractorcmd>
Sub2Regs	Number Second	Subtracts from one register (Number='0,1,2,3') a value from another register (Second='0,1,2,3').
		<extractorcmd <br="" cmd="Sub2Regs" number="2">Second='3' /></extractorcmd>
SubReg	Number Value	Subtracts from a register (Number='0,1,2,3') an unsigned 32-bit integer value.
		<extractorcmd cmd="SubReg" number="2" value="hFFFF0"></extractorcmd>

 Table 1
 Signal Extractor Commands (continued)


Command	Parameters	Description
WriteLabel	Name	Writes the internal register value to the specified bus/signal. Use this command to write out additional values to additional buses/signals. One 'WriteLabelTime' command must be executed first to generate a new time stamp. This command writes to the 3 additional bus/signals of a common time stamp group. This command just fills in the values for additional bus/signals without generating additional samples. <extractorcmd cmd="WriteLabel" name="Qdata"></extractorcmd>
WriteLabelTime	Name BitTime	Writes the internal register value to the specified bus/signal (Name='string') and then copies the time associated with the specified bit (BitTime='number') to the newly extracted value. After writing the internal register to a bus/signal the internal register is cleared. <extractorcmd bittime="0" cmd="WriteLabelTime" name="Idata"></extractorcmd> Be careful not to write multiple time values with the same time tag, and be careful not to write values such that time tags are out of sequence.
WriteLabelTimeDelta	Name TimeNum TimeDen BitTimeStart BitTimeEnd	Writes the internal register value to the specified bus/signal (Name='string') and then generates a time stamp by using a fraction (TimeNum='decimal') / (TimeDen='decimal') to create a time stamp that is the specified fraction between the BitTimeStart='number' and BitTimeEnd='number'. For example, to generate a time stamp that is half way between bit-29 and bit-30 you could use: <extractorcmd bittimeend="30" bittimestart="29" cmd="WriteLabelTimeDelta" name="Idata" timeden="2" timenum="1"></extractorcmd>

See Also • "<ExtractorCmd> Element" on page 31

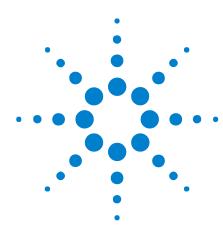

Signal Extractor Tool Properties Dialog

The Signal Extractor tool properties dialog lets you set up the tool to extract signals or data from one input bus/signal and output the extracted data onto new buses/signals.

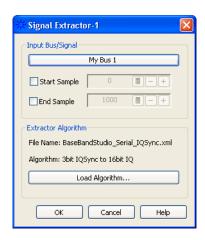

Input Bus/Signal	Selects the bus/signal that data will be extracted from.
Start Sample End Sample	Lets you reduce the number of samples being processed (and speed up processing).
Load Algorithm	Lets you load the extractor algorithm that specifies the output bus/signal names and how data should be extracted. Example extractor algorithms have been included. You can find them under "Documents and Settings" for "All Users". For example, the default location is: C:\Documents and Settings\All Users\Shared Documents\Agilent Technologies\Logic Analyzer\ Extractor Algorithms


See Also

- "Using the Signal Extractor Tool" on page 3
- "Creating Extractor Algorithms" on page 19



7 Signal Extractor Tool Properties Dialog

Signal Extractor Tool
Online Help

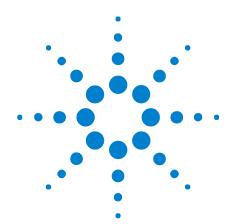

Signal Extractor Tool Control, COM Automation

The Agilent Logic Analyzer application includes the COM Automation Server. This software lets you write programs that control the Agilent Logic Analyzer application from remote computers on the Local Area Network (LAN).

In a COM automation program, you can configure a tool by:

- Loading a configuration file (which configures the complete logic analyzer setup).
- Using the "Tool" (in the online help) object's "DoCommands" (in the online help) method with an XML-format string parameter (see Signal Extractor Tool Setup, XML Format (see page 53)).

You can get information about a tool's configuration using the Tool object's "QueryCommand" (in the online help) method. Queries supported by the Signal Extractor tool are listed below.

For more information about logic analyzer COM automation and tool objects in general, see "COM Automation" (in the online help).

XML-Based Queries Supported

The Signal Extractor tool supports the following XML-based queries (made with the "Tool" (in the online help) object's "QueryCommand" (in the online help) method).

Query	Description
GetAllSetup	Returns the current setup, using the full tag set, used for writing generic configuration files (see the XML format <setup> element (see page 54)).</setup>

See Also

- "COM Automation" (in the online help)
- "Signal Extractor Tool Setup, XML Format" on page 53

8 Signal Extractor Tool Control, COM Automation



When you save logic analyzer configurations to XML format files, setup information for the Signal Extractor tool is included.

This XML format setup information is also used when writing COM automation programs to control the logic analyzer from a remote computer.

XML elements for the Signal Extractor tool have the following hierarchy:

<Setup> (see page 54)

See Also

- "XML Format" (in the online help)
- "Signal Extractor Tool Control, COM Automation" on page 51

<Setup> Element

The <Setup> element contains setup information for the Signal Extractor tool.

Attributes

Name	Description
EndingSampleNumber	'number'
ExtractorFile	'string'
InputBus	'string'
InputBusModule	'string'
StartingSampleNumber	'number'

Parents

This element can have the following parents: "<Tool>" (in the online help).

When used in COM automation, this element is returned by the "QueryCommand method" (in the online help)'s GetAllSetup query. You can also use this element string as an XMLCommand with the "DoCommands method" (in the online help) to configure the Serial To Parallel tool.

Example

```
<Setup InputBusModule='My 16950A-1' InputBus='My Bus 1'
    ExtractorFile='Z:\Documents and Settings\ab1234\My
    Documents\Agilent Technologies\Logic Analyzer\Config
    Files\Extractor_Test.xml'
    StartingSampleNumber='0' EndingSampleNumber='1000' />
```

Index

A	0
algorithm, Signal Extractor, 3	Q and I data, extracting, 3, 7, 13
C	R
COM automation, Signal Extractor tool, 51 commands, register, 25 commands, Signal Extractor, 41 counters, using registers as, 26	register commands, 25 register demo algorithm, 26 register immediate jump, 25 register immediate operations, 25 remultiplexing high-speed data, 3, 11, 13
D	S
debug mode, 29	Setup, XML element, 54
extract data from bus/signal, 3 extractor algorithm, 17, 49 extractor algorithms, creating, 19 extractor algorithms, XML Format, 30	Signal Extractor capabilities, 13 Signal Extractor commands, 41 Signal Extractor tool, 3 Signal Extractor tool, adding, 17 Signal Extractor tool, algorithm XML Format, 30 Signal Extractor tool, creating algorithms, 19
ExtractorCmd, XML element, 31 ExtractorCmds, XML element, 33 ExtractorFolder, XML element, 34 ExtractorGrammar, XML element, 34 ExtractorLabel, XML element, 36	Signal Extractor tool, how it works, 15 Signal Extractor tool, properties dialog, 49 special register commands, 25
ExtractorLabels, XML element, 37 ExtractorPattern, XML element, 37 ExtractorPatterns, XML element, 37 ExtractorSequence, XML element, 38 ExtractorSequences, XML element, 39	trademarks, 2 two-register jump, 25 two-register operations, 25
	X
H high-speed data, remultiplexing, 3, 11, 13	XML format, Signal Extractor tool, 53
I	
I and Q data, extracting, 3, 7, 13	
L	
long packet, register commands, 26	
N	
notices, 2	

Index