



ARM Target Interface Module Installation Notice

The target interface module (TIM) shipped with your order is different from the one described in the manual.


The new TIM does not support the TI XDS510 14-pin or the VLSI Jumpstart 14-pin connectors.

CAUTION:

Do not connect this TIM to a target which uses the TI XDS510 14-pin connector. Doing so will damage the TIM.

To connect the emulator to your target system, use these instructions instead of the instructions in your manual:

- 1 Connect the 50-pin cable to connector on the TIM.
- 2 **ARM 14-pin connector:** connect the 14-to-20 pin adapter to the 20-pin connector on the TIM then connect the 14-pin cable to the adapter.
ARM/HP 20-pin connector: connect one end of the 20-pin cable to 20-pin connector on the TIM.

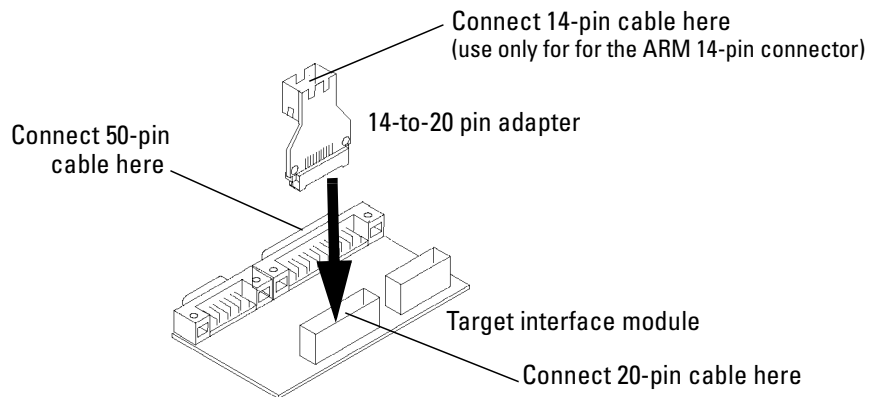

- 3 Connect the other end of the 14- or 20-pin cable to your target system.



