

AUTT

User's Manual

HP 85071B Materials Measurement Software

OTS LIBRARY



Printed in USA

OTS LIBRARY



2400011601

HP part number: 85071-90004
Printed in USA April 1993

Notice.

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

©Copyright Hewlett-Packard Company 1993
All Rights Reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

1400 Fountaingrove Parkway, Santa Rosa CA 95403-1799, USA

MS-DOS® is a U.S. registered trademark of Microsoft Corporation.

Microsoft® is a U.S. registered trademark of Microsoft Corporation.

Hewlett-Packard Software Product License Agreement and Limited Warranty

Important



Please carefully read this License Agreement before opening the media envelope or operating the equipment. Rights in the software are offered only on the condition that the Customer agrees to all terms and conditions of the License Agreement. Opening the media envelope or operating the equipment indicates your acceptance of these terms and conditions. If you do not agree to the License Agreement, you may return the unopened package for a full refund.

License Agreement

In return for payment of the applicable fee, Hewlett-Packard grants the Customer a license in the software, until terminated, subject to the following:

Use.

- Customer may use the software on one network analyzer instrument.
- Customer may not reverse assemble or decompile the software.

Copies and Adaptations.

- Customer may make copies or adaptations of the software:
 - For archival purposes, or
 - When copying or adaptation is an essential step in the use of the software with a computer so long as the copies and adaptations are used in no other manner.
- Customer has no other rights to copy unless they acquire an appropriate license to reproduce which is available from Hewlett-Packard for some software.
- Customer agrees that no warranty, free installation, or free training is provided by Hewlett-Packard for any copies or adaptations made by Customer.
- All copies and adaptations of the software must bear the copyright notices(s) contained in or on the original.

Ownership.

- Customer agrees that they do not have any title or ownership of the software, other than ownership of the physical media.
- Customer acknowledges and agrees that the software is copyrighted and protected under the copyright laws.
- Customer acknowledges and agrees that the software may have been developed by a third party software supplier named in

the copyright notice(s) included with the software, who shall be authorized to hold the Customer responsible for any copyright infringement or violation of this License Agreement.

Transfer of Rights in Software.

- Customer may transfer rights in the software to a third party only as part of the transfer of all their rights and only if Customer obtains the prior agreement of the third party to be bound by the terms of this License Agreement.
- Upon such a transfer, Customer agrees that their rights in the software are terminated and that they will either destroy their copies and adaptations or deliver them to the third party.
- Transfer to a U.S. government department or agency or to a prime or lower tier contractor in connection with a U.S. government contract shall be made only upon their prior written agreement to terms required by Hewlett-Packard.

Sublicensing and Distribution.

- Customer may not sublicense the software or distribute copies or adaptations of the software to the public in physical media or by telecommunication without the prior written consent of Hewlett-Packard.

Termination.

- Hewlett-Packard may terminate this software license for failure to comply with any of these terms provided Hewlett-Packard has requested Customer to cure the failure and Customer has failed to do so within thirty (30) days of such notice.

Updates and Upgrades.

- Customer agrees that the software does not include future updates and upgrades which may be available for HP under a separate support agreement.

Export.

- Customer agrees not to export or re-export the software or any copy or adaptation in violation of the U.S. Export Administration regulations or other applicable regulations.

Limited Warranty

Software.

Hewlett-Packard warrants for a period of 1 year from the date of purchase that the software product will execute its programming instructions when properly installed on the network analyzer instrument indicated on this package. Hewlett-Packard does not warrant that the operation of the software will be uninterrupted or error free. In the event that this software product fails to execute its programming instructions during the warranty period, Customer's remedy shall be to return the measurement card ("media") to Hewlett-Packard for replacement. Should Hewlett-Packard be unable to replace the media within a reasonable amount of time, Customer's alternate remedy shall be a refund of the purchase price upon return of the product and all copies.

Media.

Hewlett-Packard warrants the media upon which this product is recorded to be free from defects in materials and workmanship under normal use for a period of 1 year from the date of purchase. In the event any media prove to be defective during the warranty period, Customer's remedy shall be to return the media to Hewlett-Packard for replacement. Should Hewlett-Packard be unable to replace the media within a reasonable amount of time, Customer's alternate remedy shall be a refund of the purchase price upon return of the product and all copies.

Notice of Warranty Claims.

Customer must notify Hewlett-Packard in writing of any warranty claim not later than thirty (30) days after the expiration of the warranty period.

Limitation of Warranty.

Hewlett-Packard makes no other express warranty, whether written or oral, with respect to this product. Any implied warranty of merchantability or fitness is limited to the 1 year duration of this written warranty.

This warranty gives specific legal rights, and Customer may also have other rights which vary from state to state, or province to province.

Exclusive Remedies.

The remedies provided above are Customer's sole and exclusive remedies. In no event shall Hewlett-Packard be liable for any direct, indirect, special, incidental, or consequential damages (including lost profit) whether based on warranty, contract, tort, or any other legal theory.

Warranty Service.

Warranty service may be obtained from the nearest Hewlett-Packard sales office or other location indicated in the owner's manual or service booklet.

Safety Notes

The following safety notes are used throughout this manual. Familiarize yourself with each of the symbols and its meaning before operating this instrument.

Caution



The **caution** note denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a **caution** sign until the indicated conditions are fully understood and met.

Warning



The **warning** note denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a **warning** sign until the indicated conditions are fully understood and met.

Instruction Manual The **instruction manual** symbol. The product is marked with this symbol when it is necessary for the user to refer to the instructions in the manual.



Contents

1. General Information	
Introduction	1-1
The Software Incorporates Six Calculation Models	1-1
Reflection/Transmission Mu and Epsilon	
Nicholson-Ross Model	1-1
Reflection/Transmission Epsilon Precision Model	1-1
Reflection/Transmission Epsilon Fast Model	1-1
Reflection-Only Epsilon Short-Backed Model	1-2
Reflection-Only Epsilon Arbitrary-Backed Model	1-2
Reflection-Only Mu and Epsilon Single/Double Model	1-2
Items Supplied with the Software	1-2
First Steps	1-2
About this Manual	1-2
What This Manual Covers	1-3
Description of the Software	1-3
Software Features	1-4
Features New to this Revision	1-4
Equipment Required	1-4
Recommended Test Equipment	1-4
2. Getting Started	
Introduction	2-1
Section 1: MS-DOS Version of the Software	2-1
System Requirements	2-2
Computer	2-2
Software	2-2
IEEE-488 (HP-IB) Interface	2-2
Printers and Plotters	2-2
Network Analyzer and Test Set	2-2
Installation	2-3
Microsoft DOS Installation	2-3
Microsoft Windows Installation	2-3
HP 85071 Software Installation	2-4
HP-IB and GP-IB Interface Card Installation	2-4
For HP 82335B Interface Card Systems	2-4
For National Instruments AT-GPIB, GPIB-II, or GPIB-IIA Interface Card Systems	2-5
Hardware Installation	2-5
Starting the HP 85071 Software	2-6
Windows Compatible Software Operation	2-7
Microsoft Windows Basics	2-8
What Is a Window?	2-8
How to Use a Mouse	2-8
How to Use Drop-Down Menus	2-9
How to Use Dialog Boxes	2-10
How to Use Dialog Boxes with File Names	2-10

HP 85071 Windows Software Fundamentals	2-11
How to Exit the Program	2-12
Conclusion	2-12
Tips for Using Printers and Plotters under Microsoft	
Windows	2-12
Software	2-12
Setting Up Windows	2-12
Control Panel Settings	2-12
Add New Printer	2-13
Connections	2-13
Communications Port	2-14
The AUTOEXEC.BAT File	2-15
Cables	2-15
Printer Settings	2-15
“Define plot . . . ” in the HP 85071 Software	2-16
Other Files Worth Knowing About	2-16
Conclusion	2-16
SECTION 2: HP BASIC Version of the Software	2-17
System Requirements	2-17
Computer	2-17
BASIC and Binaries	2-17
IEEE-488 (HP-IB) Interface	2-18
Printers and Plotters	2-18
Network Analyzer and Test Set	2-18
Installation	2-19
HP BASIC Installation	2-19
HP 85071 Software Installation	2-19
Hardware Installation	2-19
Starting the HP 85071 Software	2-20
HP BASIC Software Operation	2-21
What are Softkeys?	2-21
How to Use Menus	2-21
How to Make Menu Selections	2-22
HP 85071 HP BASIC Software Fundamentals	2-22
Conclusion	2-23

3. Measurement Tutorial

Introduction	3-1
Section 1: General Overview	3-1
Sample Shapes	3-1
Calibrating the System	3-2
Measuring the MUT’s S-Parameters	3-2
Converting the S-Parameters to ϵ and μ	3-2
Section 2: Calibration Considerations	3-4
Calibration Notes	3-4
HP 8510 Considerations	3-4
HP 8719, HP 8720, HP 8722, HP 8753 Considerations	3-5
Reflection/Transmission Test Set Considerations	3-5
Section 3: Sample and Sample Holder Considerations	3-6
Sample Holder	3-6
Coaxial versus Waveguide Sample Holders	3-6
Free Space	3-6
Dimensions of Holder and Sample	3-6
Sample Holder Length	3-6
Distance to Sample	3-7

Sample Thickness	3-8
Other Factors	3-8
Air Gap Correction	3-9
Section 4: Measurement Models	3-10
Section 5: Waveguide Calibration and Measurement	
Example	3-11
How to Begin a Waveguide Calibration	3-11
Start the HP 85071 Software Program	3-11
Set Up the Measurement First	3-12
Change Start Frequency to 8.2 (GHz)	3-12
Change Stop Frequency to 12.4 (GHz)	3-12
Change Num Pts to 51	3-13
OK the Changes and Exit the Dialog Box	3-13
Define the Model	3-13
Define the Sample Holder	3-14
Perform the Calibration	3-15
Stabilize the Cable and Measure the First Standard (Flush Short)	3-15
Measure the Second Standard (1/4 Wavelength Offset Short)	3-16
Measure the Third Standard (Fixed Load)	3-16
Measure the Three Standards at Port 2	3-17
Measure the Transmission Standards	3-17
Conclude the Calibration	3-17
Measure a Sample Material	3-18
Scale the Display	3-18
Change the Format of the Data	3-19
Save the Measurement Data to Memory	3-20
Seeing the Effects of Cable Movement	3-20
Viewing More Than One Trace	3-20
Compare the Traces with Trace Math	3-21
Print or Plot the Data	3-22
Format Sets Print versus Plot	3-23
Saving Information	3-23
To Save the Test Setup to Disk	3-23
Saving Measurement Data	3-24
To Save To Disk	3-24
To Save To Memory	3-24
To Save Data Files To Disk	3-24
Recalling Information	3-24
To Recall a Test Setup from Disk	3-24
Recalling Measurement Data	3-25
To Recall from Disk	3-25
To Recall From Memory	3-25
To Recall Data Files from Disk	3-25
Conclusion	3-25

4. Advanced Measurement Techniques	
Introduction	4-1
Traceable Reference Measurements and Materials	4-1
Air Gap Correction	4-1
Sample Holder Length/Loss	4-2
Accessing MS-DOS Data Files	4-2
Importing Data into Lotus 1-2-3	4-2
Lotus 1-2-3 Method I: Importing Numbers without the Header	4-2
Lotus 1-2-3 Method II: Two Imports and a Copy	4-3
1. Import the Text	4-3
2. Import the Numbers	4-3
3. Erase the Excess Numbers	4-3
4. Parse the Column Headings	4-3
5. Move the Data Under the Headings	4-4
6. Discard the Last Line of Text	4-4
Lotus 1-2-3 Method III: One Import and a Parse	4-4
1. Import the Text	4-4
2. Parse the Column Headings	4-4
3. Parse the Data	4-5
4. Discard the Last Line of Text	4-5
Importing Data into Microsoft Excel	4-5
Importing Data into Word Processors	4-5
Accessing HP BASIC Data Files	4-6
5. In Case of Difficulty	
Introduction	5-1
Common Problems and Solutions	5-1
Before You Contact HP	5-2
Section 1: MS-DOS Error Messages	5-3
Section 2: HP BASIC Error Messages	5-6
6. Operator's Check	
Procedure for MS-DOS Software Version	6-1
HP 85071 Software Check	6-1
Procedure for HP BASIC Software Version	6-2
HP 85071 Software Check	6-2
7. Ordering Supplies	
Introduction	7-1
Literature	7-1
Hewlett-Packard Literature	7-1
Public Technical Papers	7-2
8. Software Reference	
Setup Menu	8-2
Set frequency	8-2
Start freq & Stop freq	8-2
Freq step	8-2
Num pts	8-2
Hz, KHz, MHz, GHz	8-3
Sweep mode	8-3
Model	8-4
Refl/Tran u & e N-R	8-4
Refl/Tran e Prec'n	8-5

Ref/Tran e Fast	8-5
Refl e Short-Back	8-6
Refl e Arbit-Back	8-6
Refl u & e Sing/Dbl	8-7
Sample holder	8-7
Air Gap Calculations	8-9
Coaxial Equations	8-10
Waveguide Equations	8-10
Verify estimate	8-11
Save setup	8-12
Recall setup	8-13
Short menus Full menus	8-13
Status bar	8-13
Measure Menu	8-13
Trigger measurement	8-14
Recalculate	8-15
Title	8-15
Forward measurement ONLY	8-15
Retrieve measurement	8-16
Retrieving measurement	8-16
Measure/Retrieve (Backing)	8-16
Measure/Retrieve (Sample)	8-16
Format Menu	8-17
e'	8-18
e''	8-18
Loss tangent e	8-19
Cole-Cole	8-19
u'	8-20
u''	8-20
Loss tangent u	8-21
Tabular (Re & Im)	8-21
Tabular (Re & Tan d)	8-22
Display Menu	8-22
Data-> memory	8-23
Memory-> data	8-24
Traces displayed	8-24
Reference trace	8-24
Trace math	8-24
Scale Menu	8-25
Autoscale	8-25
Set scale	8-25
Default	8-26
Output Menu	8-26
Print	8-27
Plot	8-27
Define plot	8-27
Save data	8-28
Recall data	8-29
Help Menu	8-30
Conclusion	8-31

Glossary

Index

Figures

2-1. Typical MS-DOS System Connection Diagram	2-6
2-2. Windows Program Manager System	2-7
2-3. HP 85071 Main Menu Screen	2-7
2-4. Graphic Showing a Window, Work Area, and Application Icon	2-8
2-5. Mouse and Location of Main Mouse Button	2-9
2-6. Drop-Down Menu and Highlighted, Selected Command	2-10
2-7. Example of Dialog Box	2-11
2-8. Principal Components of the Software Screen	2-11
2-9. Typical HP BASIC System Connection Diagram	2-20
2-10. HP BASIC Main Menu Screen	2-21
2-11. HP BASIC Sample Menu Selections	2-22
2-12. Main Menu Screen with Pull-Outs Describing Principal Functions of Components	2-22
3-1. Samples in Coaxial and Waveguide Transmission Lines and Free Space	3-2
3-2. Samples in Waveguide, Coaxial and Free Space	3-7
3-3. Sample Holder Reference Planes	3-7
3-4. Air Gap Correction Figure	3-9
3-5. Set Frequency ... Dialog Box (MS-DOS Version)	3-12
3-6. Model ... Dialog Box (MS-DOS Version)	3-13
3-7. Sample Holder Description Dialog Box (MS-DOS Version)	3-15
3-8. Measuring the Flush Short	3-16
3-9. Measuring the 1/4 Wavelength Offset Short	3-16
3-10. Measuring the Fixed Load	3-16
3-11. Measuring the Thru	3-17
3-12. Default Display of Air Measurement	3-18
3-13. Display of Air Measurement with Y-Maximum = 2	3-19
3-14. Example of Tabular (Re & Im) Format	3-19
3-15. Simultaneous Display of Two Traces Showing Effect of Cable Movement	3-21
3-16. Traces Compared With Trace Math	3-22
3-17. Output Menu (MS-DOS Version)	3-22
8-1. Setup Menu (MS-DOS Version)	8-2
8-2. Set Frequency ... Dialog Box (MS-DOS Version)	8-3
8-3. Calculation Anomalies in the Refl/Tran u & e N-R Model	8-4
8-4. Sample Holder ... Screen (MS-DOS Version)	8-8
8-5. Air Gap Waveguide Dialog Box (MS-DOS Version)	8-9
8-6. Coaxial Air Gap Correction Calculation Dimensions	8-10
8-7. Waveguide Air Gap Correction Calculation Dimensions	8-10
8-8. Save Setup ... Dialog Box (MS-DOS Version)	8-12
8-9. Measure Menu (MS-DOS Short Version)	8-14
8-10. Title ... Menu (MS-DOS Version)	8-15
8-11. Format Menu (MS-DOS Version)	8-17
8-12. Polyiron Measurement in e/ Format	8-18
8-13. Polyiron Measurement in e" Format	8-18

8-14. Polyiron Measurement in Loss Tangent e Format	8-19
8-15. Polyiron Measurement in u/ Format	8-20
8-16. Polyiron Measurement in u// Format	8-20
8-17. Polyiron Measurement in Loss Tangent u Format	8-21
8-18. Polyiron Measurement in Tabular (Re & Im) Format	8-21
8-19. Polyiron Measurement in Tabular (Re & Tan d) Format	8-22
8-20. Display Menu (MS-DOS Version)	8-23
8-21. Scale Menu (MS-DOS Version)	8-25
8-22. Set Scale . . . Screen (MS-DOS Version)	8-26
8-23. Output Menu (MS-DOS Version)	8-27
8-24. Define plot . . . Dialog Box (MS-DOS Version)	8-28
8-25. Save Data . . . Dialog Box (MS-DOS Version)	8-29
8-26. Help Menu (MS-DOS Version)	8-30

Tables

2-1.	2-14
3-1. Required Calibrations and S-parameter Measurements for Calculation Models	3-4
3-2. Calculation Models and Optimum Sample Thickness . .	3-8
3-3. Measurement Models	3-10
3-4.	3-23
7-1. Orderable Material Measurements Items	7-1