87510A-03

S	Е	R	V	Ι	С	Е		Ν	0	Т	Е
							SUPE	RSEDE	S: None	•	
875	510A G	ain-Ph	ase An	alyze	er						
Seri	al Numb	ers: 0000	0J00000	/ 3152J	00152						
(Firr	nware Re	evision 1.	.00)								
and	dificatio I "EQUO Be Perfor	CPARS	?".				s betwo	een "O	UTPRE	SO?"	
Part	ts Requir	ed:									
P/N			Descri	<b>A</b>			Qty.				
	0-86011		A1 RO				1				
	0-86012		A2 RO				1				
8751	0-90100		Manua	l Chang	ge Sheet	*1	1				
NOT	FE *1: Fo	or Japanes	se end-us	ser, ord	er P/N 87	7510-97	100				
Situ	ation:										
	measurer be differ				*	• • • •			t frequend	cy (fa)	
The close	"EQUCP est point	ARS?" o is chosen	outputs the from the	e frequ e measi	ency res arement j	ults fr ar points w	nd fa with	nout inter determin	rpolation. ed by the	The Continued	!
							DATE	: 01 Nov	vember 1	992	

## ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:								
	<b>MODIFICATION</b>	RECOMMENDED						
ACTION CATEGORY:	<ul> <li>IMMEDIATELY</li> <li>ON SPECIFIED FAILURE</li> <li>AGREEABLE TIME</li> </ul>	STANDARDS: Labor 1.0 Hour						
LOCATION CATEGORY:	CUSTOMER INSTALLABLE	SERVICE I RETURN USED RETURN INVENTORY: SCRAP PARTS: SCRAP SEE TEXT SEE TEXT						
AVAILABILITY:	PRODUCT'S SUPPORT LIFE	AGILENT RESPONSIBLE UNTIL: 30 October 1994						
AUTHOR: YH	ENTITY: 3355	ADDITIONAL INFORMATION:						

© 1992 AGILENT TECHNOLOGIES
PRINTED IN U.S.A.



START/STOP frequency and the "number of points". On the other hand, the "OUT-PRESO?" outputs the results which are interpolated from the measurement points. That is why these results are different.

## Solution/Action:

This bug was fixed at the firmware revision 2.00 and above. The "EQUCPARS?" also outputs the interpolated results.

Replace six ROMs on the A1 board and two ROMs on the A2 board with new ROMs and pass the manual change sheet to the end-user.

## **Procedure:**

- 1. Remove the A1 and the A2 boards according to the Replacement Procedures in the Service Manual.
- 2. Replace the six ROMs on the A1U43 through A1U48 of the A1 board.
- 3. Replace the two ROMs on the A2U1 through A2U2 of the A2 board.
- 4. Reinstall the A1 and A2 boards.
- 5. Attach the manual change sheet to the unit and return them to the end-user.