

# **User's Guide Supplement**

**Firmware Revisions 7.60 and Above  
for the  
Agilent Technologies  
8719D/20D/22D  
and  
8753E and 8753E Option 011**



**Agilent Technologies**

**Manufacturing Part Number: 08753-90445**

**Printed in USA**

**Print Date: December 1999**

**Supersedes October 1998**

© Agilent Technologies, Inc. 1998, 1999 All rights reserved.



08753-90445

---

## **Hewlett-Packard to Agilent Technologies Transition**

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, semiconductor products and chemical analysis businesses are now part of Agilent Technologies. To reduce potential confusion, the only change to product numbers and names has been in the company name prefix: where a product number/name was HP XXXX the current name/number is now Agilent XXXX. For example, model number HP8648 is now model number Agilent 8648.

For the latest information on Agilent's test and measurement products, go to:  
**[www.agilent.com/find/products](http://www.agilent.com/find/products)**.

In the U.S., call Agilent Technologies at 1-800-452-4844.

---

## **Documentation Warranty**

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

---

## **DFARS/Restricted Rights Notice**

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

---

# **User's Guide Supplement**

**Firmware Revisions 7.60 and Above  
for the  
HP 8719D/20D/22D,  
HP 8753E, and HP 8753E Option 011**



**HP Part Number: 08753-90445**

**Printed in USA**

**December 1999**

**Supersedes October 1998**

© Copyright 1998, 1999 Hewlett-Packard Company

---

## How to Use This Guide

This guide uses the following conventions:

**Front Panel Key**

This represents a key physically located on the instrument.

**SOFTKEY**

This represents a “softkey”, a key whose label is determined by the instrument firmware.

---

# Contents

Introduction .....	1
Four-Parameter Display Overview .....	2
Four-Parameter Display and Calibration .....	3
Enabling and Activating the Auxiliary Channels .....	3
Quick Four-Parameter Display Setup .....	4
Measurement Examples .....	5
Displaying All Four S-Parameters of a Two-Port Device .....	5
Activate the Auxiliary Channels .....	8
Uncouple the Display Markers .....	8
Characterizing a Duplexer .....	9
Configuring Four-Parameter Display .....	12
Adjusting the Position of Displayed Channels .....	12
Adjusting the Display Colors .....	12
Interaction between Display Softkeys .....	13
Enhanced Response Calibration .....	14
Enhanced Frequency Response Error Correction .....	14
Editing Enhanced Response Calibration Cal Kit Definitions .....	18
Markers .....	20
Rules Governing the Interaction between the Backspace Key, Markers, and the Softkey Menu .....	20
To Search for a Specific Amplitude .....	22
Searching for the Maximum Amplitude .....	22
Searching for the Minimum Amplitude .....	22
Searching for a Target Amplitude .....	23
Searching for a Bandwidth .....	24
Tracking the Amplitude that You Are Searching .....	24
Additions and Changes to the Network Analyzer User Interface .....	25
New Remote Commands .....	25
Softkey and Hardkey Functions .....	27
Display Colors .....	29
Changes to Menu Maps .....	29
Changes to the Display .....	29
Display Menu Map .....	30
Status Reporting Structure .....	31
New Error Messages .....	32
Preset Conditions .....	33
Saving Measurement Data to Disk .....	34
Data Files (Binary or ASCII) .....	34
New Binary Instrument State File .....	34
Miscellaneous .....	35
Power Ranges .....	35
HPGL Graphics (Noise Figure Meter HP 8970B Only) .....	35
Sampler Cal. .....	35
New Power Meter Support .....	35
IDN? .....	35
Rear Panel Service Test .....	36
One Path, Two Port Calibration Type Remote Commands .....	36
Calibration Kit 7-16 .....	36
Hewlett-Packard Sales and Service Offices .....	37



---

## Introduction

This document is intended for those who installed firmware upgrade 7.60 and above into their network analyzer. This upgrade gives your analyzer four-parameter display capability enabling you to measure and display all four S-parameters of a two-port device simultaneously. It also makes it easier to characterize duplexers using the HP 8753D Option K36 duplexer test adapter or similar adapter.

This supplement describes the new features of this firmware upgrade and how to use them. It is assumed that you have a basic knowledge of the analyzer. Where appropriate, this supplement refers to the analyzer's user's guide when it will enhance your understanding of the features in this upgrade.

## Four-Parameter Display Overview

The four-parameter display firmware upgrade adds two channels to your analyzer. These new channels, 3 and 4, make it possible to measure and display all four S-parameters of a device simultaneously.

Although independent of the other channels in most respects, channels 3 and 4 are permanently coupled to channels 1 and 2, respectively, by stimulus. That is, if channel 1 is set for a center frequency of 200 MHz and a span of 50 MHz, channel 3 will have the same stimulus values. This is a reciprocal relationship in that changes made to channel 3's stimulus immediately apply to channel 1. The coupling between channels are:

Channel 1 = Channel 3 (by stimulus)  
Channel 2 = Channel 4 (by stimulus)

Channels 1 and 2 are referred to as the *primary channels* and channels 3 and 4 are referred to as the *auxiliary channels*. Once channel 3 or 4 is made active, it can be configured independently of its primary channel in these variables:

- Measurement
- Format
- Scale/Div
- Reference position
- Reference value
- Electrical delay
- Phase offset
- Memory trace storage
- Markers
- Limit lines
- Trace colors



## Four-Parameter Display and Calibration

For the measurement examples used in this supplement, a full two-port calibration covering the entire frequency range of the analyzer was used. Interpolated error correction was then turned on to narrow the calibration to the range of the device under test (DUT).

---

**NOTE** With firmware revision 7.60 and above, a full two-port calibration is not required to utilize the four parameter display functions. The following examples resulting from a full two-port calibration are to be used as a guideline.

---

The calibration may be recalled from a previously saved instrument state or performed before enabling an auxiliary channel. If recalled, you may need to modify some of the parameters from the recalled instrument state in order to test your particular device. The recalled calibration must cover the range of the device to be tested.

### Enabling and Activating the Auxiliary Channels

The primary channel hardkeys, **Chan 1** and **Chan 2**, now activate auxiliary channels 3 and 4, as well as primary channels 1 and 2. Before an auxiliary channel can be made active, it must be enabled by setting **AUXCHAN on OFF** to **ON** in the Display menu. Enabled and active are defined as:

**Enabled:** A channel must be enabled before it can be made active. Both primary channels are always enabled. The auxiliary channels must be enabled via the Display menu before they can be made active by the primary channel hardkeys **Chan 1** or **Chan 2**.

**Active:** When made active, a channel can be configured for measurement type, format, limit lines, etc.

Auxiliary channel 3 or 4 is enabled by pressing **Chan 1** or **Chan 2** **Display**  
**DUAL|QUAD SETUP** **AUXCHAN on OFF** to **ON**.

Once the auxiliary channels are enabled, a hardkey will alternately make a primary channel or its auxiliary channel active. The amber LED adjacent to the **Chan 1** or **Chan 2** hardkey indicates which channel is active: when the LED is constantly lit, the primary channel is active; when it is flashing, the auxiliary channel is active. Pressing a channel hardkey toggles between a primary channel and its auxiliary channel.

## Quick Four-Parameter Display Setup

To quickly set up a four-parameter display, you can use the 4-PARAMETER SHORTCUT KEYS menu to set up a choice of common configurations.


To use the **4 PARAM DISPLAYS** menu to quickly set up a four-parameter display, press:

**Display** **DUAL** | **QUAD SETUP** **4 PARAM DISPLAYS**

Pressing **TUTORIAL** brings up a screen which color-codes each channel to the keys which affect it. For example, in Setup A, channel 1 is shown in yellow as well as the keys

**Chan 1**, **MEAS S11**, and **AUXCHAN on OFF**. Pressing all of the keys listed below Setup A in order from top to bottom achieves the same results (four-parameter display) as pressing **SETUP A** in the **4-PARAM DISPLAYS** menu.

**Figure 1 4 Parameter Displays Menu**

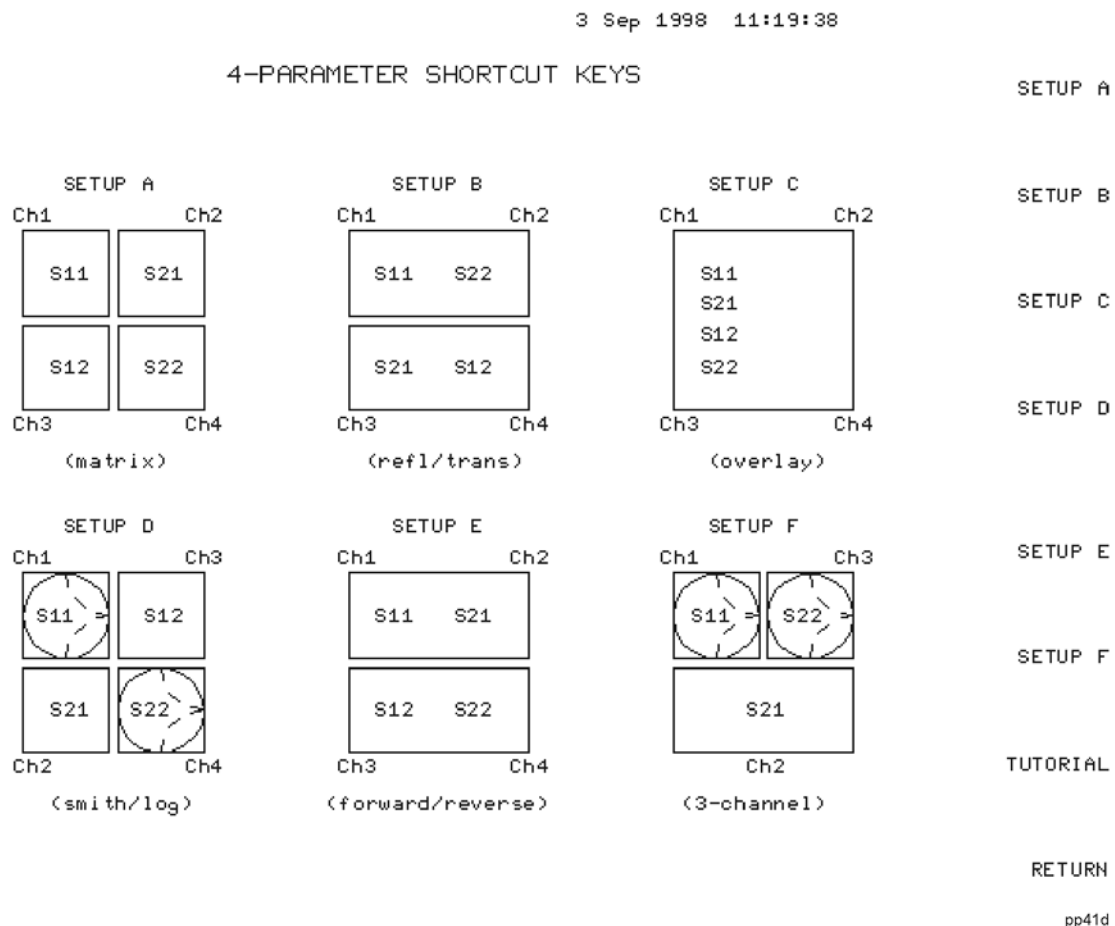

---

## Measurement Examples

### Displaying All Four S-Parameters of a Two-Port Device

This measurement example demonstrates how to display all four S-parameters of a two-port device. (If you are using an HP 8753E Option 011, you must have an S-parameter test set connected to your analyzer.) In this example, the device to be tested is a bandpass filter with a center frequency of 134 MHz.

---

**NOTE** The measurement examples in this supplement use a two-port calibration covering the entire range of the analyzer, then narrowed to the range of the DUT using interpolated error correction.


---

1. Press **(Preset)**.
2. Connect the DUT to the analyzer.
3. Set the format type for the DUT. This example uses **LOGMAG** format.
4. If channel 1 is not active, make it active by pressing **(Chan 1)**.
5. Press **(Display)** **DUAL | QUAD SETUP**. Set **DUAL CHAN on OFF** to **ON**, **AUX CHAN on OFF** to **ON**, and **SPLIT DISP** to **4X**.

The display will appear as shown in [Figure 2, “Three-Channel Display,” on page 6](#). Channel 1 is in the upper left-hand quadrant of the display, channel 2 is in the upper right-hand quadrant, and channel 3 is in the lower half of the display.


Notice that the default S-parameters are:  $S_{11}$  for channel 1;  $S_{21}$  for channel 2; and  $S_{12}$  for channel 3. These can be changed by making a channel active, then pressing **(Meas)** and selecting a different S-parameter for the channel.

**Figure 2 Three-Channel Display**

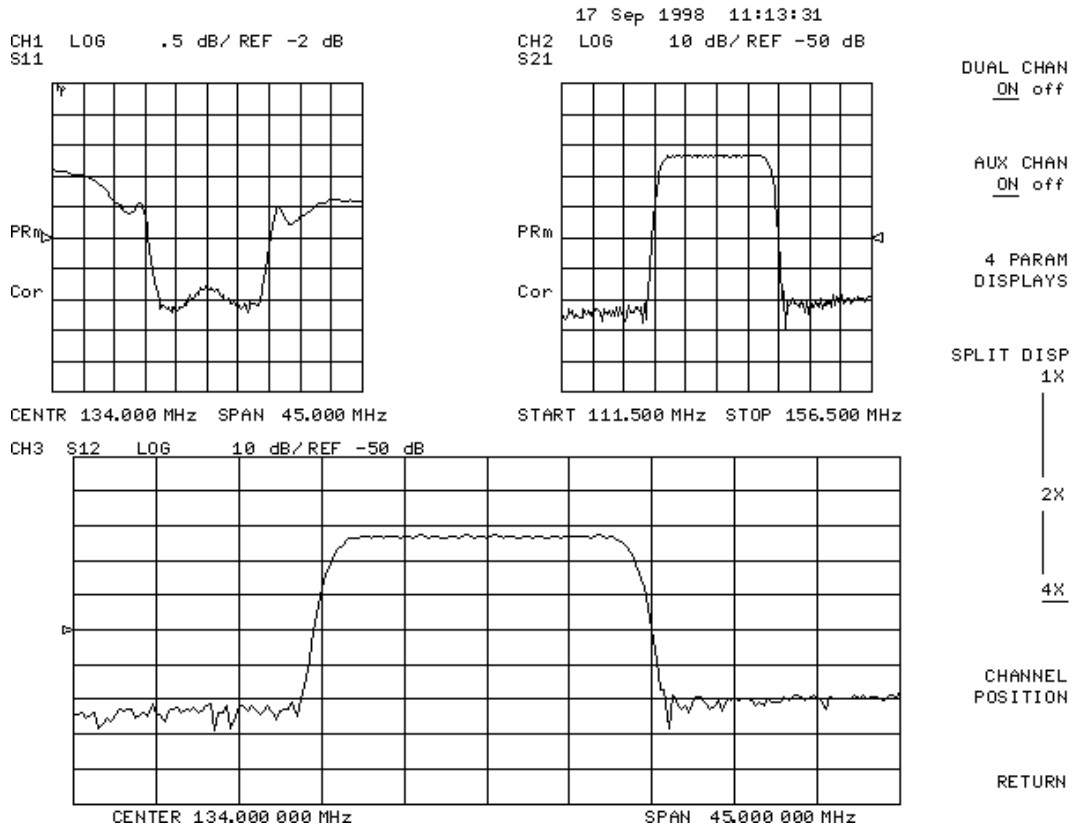

- Press **Chan 2** and set **AUX CHAN on OFF** to **ON** .  
 This enables channel 4, and the screen now displays four separate graticules as shown in **Figure 3**. Channel 1 is in the upper left-hand quadrant of the display, channel 2 is in the upper-right, channel 3 is in the lower-left, and channel 4 is in the lower-right.

**Figure 3 Four-Channel Display**

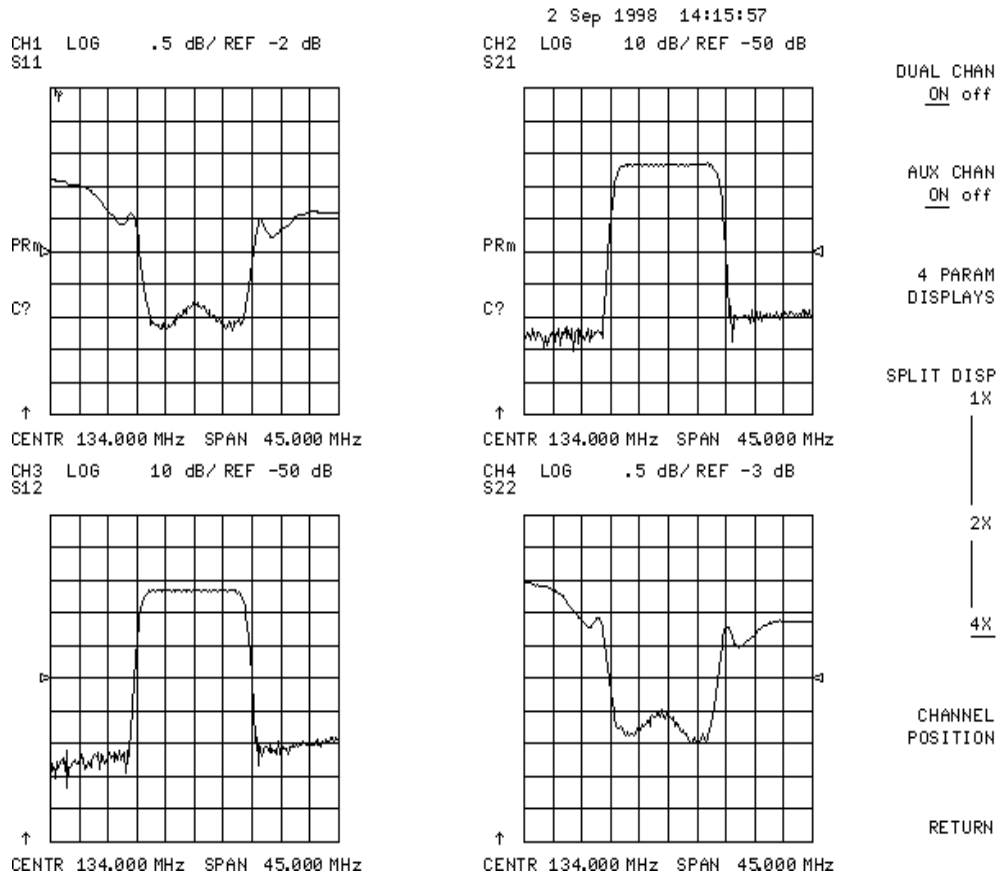

### Activate the Auxiliary Channels

7. Press **Chan 2**.  
The amber LED adjacent to the **Chan 2** hardkey flashes. This indicates that channel 4 is now active and can be configured.
8. Press **Marker** **MARKER 1** and **MARKER 2** .  
Markers 1 and 2 appear on all four channel traces and can be moved using the front panel control knob.
9. Press **Chan 1**.  
The LED is constantly lit, indicating channel 1 is active. Press **Chan 1** again and notice that the LED flashes, indicating that channel 3 is active.
10. Rotate the front panel control knob.  
Notice that marker 2 moves in all four channels.

### Uncouple the Display Markers

11. Press **Marker Fctn** **MARKER MODE MENU** .  
Set **MARKERS COUPLED UNCOUPLED** to **UNCOUPLED** .
12. Rotate the front panel control knob.  
Notice that marker 2 moves only on channel 3. If you activate another channel and rotate the control knob, the marker will move only in that channel.

## Characterizing a Duplexer

This measurement example demonstrates how to characterize a 3-port device, in this case a duplexer, using four-parameter display mode. (If you are using an HP 8753E Option 011, you must have an S-parameter test set connected to your analyzer.) You must use a test adapter to route the signals from the analyzer (a two-port instrument) to the duplexer (a three-port device). This example procedure is performed using an 8753E and one of the following test adapters:

- HP 8753D Option K36 duplexer test adapter
- HP 8753D Option K39 3-port test adapter

1. Press **(Preset)**.
2. Connect the test adapter to the analyzer according to the instructions for your particular model. Connect any test fixture or cables to the duplexer test adapter.
3. Set up channel 1 for the Tx-Ant stimulus parameters (start/stop frequency, power level, IF bandwidth).
4. Uncouple the primary channels from each other:  
Press **(Menu)**, then set **COUPLED CH on OFF** to **OFF**.
5. Set up control of the test adapter so that channel 1 is Tx:  
Press **(Seq) TTL I/O TTL OUT TESTSET I/O FWD (7) (x1) TESTSET I/O REV (7) (x1)**.
6. Perform a full 2-port calibration on channel 1 (refer to the user's guide if necessary).  
Press **(Cal) CALIBRATE MENU FULL 2-PORT**.

---

**NOTE** Make sure you connect the standards to the Tx port of the test adapter (or a cable attached to it) for the FORWARD calibration, and to the Ant port for the REVERSE calibration.

---

7. Press **(Chan 2)**.
8. Set up channel 2 for the Ant port-to-Rx port stimulus parameters.
9. Set up control of the test adapter so that channel 2 is Rx:  
Press **(Seq) TTL I/O TTL OUT TESTSET I/O FWD (6) (x1) TESTSET I/O REV (6) (x1)**.
10. Perform a full 2-port calibration on channel 2 (refer to the user's guide if necessary).  
Press **(Cal) CALIBRATE MENU FULL 2-PORT**.

---

**NOTE** Make sure you connect the standards to the Rx port of the test adapter (or a cable attached to it) for the FORWARD calibration, and to the Ant port for the REVERSE calibration.

---

11. Connect the DUT to the test adapter.

12. To set up a 2-graticule, 4-parameter display with Tx-Ant measurements on the top graticule and Ant Rx measurements on the bottom graticule, perform the following:

- Press **(Display) DUAL | QUAD SETUP**, then set **DUAL CHAN on OFF** to **ON**.
- **AUX CHAN on OFF** to **ON**
- Press **(Chan 1)**.
- **AUX CHAN on OFF** to **ON**

13. Save this state in the analyzer by pressing **(Save/Recall) SAVE STATE**.

14. The display will be similar to [Figure 4](#).

Normally, a 2-port calibration requires a forward and reverse sweep to complete before the displayed trace updates. For faster tuning, it is possible to set the number of sweeps for the active display ( $S_{11}$  and  $S_{21}$  for channel 1) to update more often than the unused parameters. In this example we chose 8 updates of the forward parameters to 1 update of the reverse channel 1, and 8 updates of the reverse to 1 update of the forward in channel 2 (where the active parameters are  $S_{22}$  and  $S_{12}$ ).


Press **(Chan 1) (System) CONFIGURE MENU TESTSET SW CONTINUOUS (8) (x1)**.

Press **(Chan 2) (System) CONFIGURE MENU TESTSET SW CONTINUOUS (8) (x1)**.



**Figure 4 Duplexer Measurement**

22 Nov 1999 13:20:21

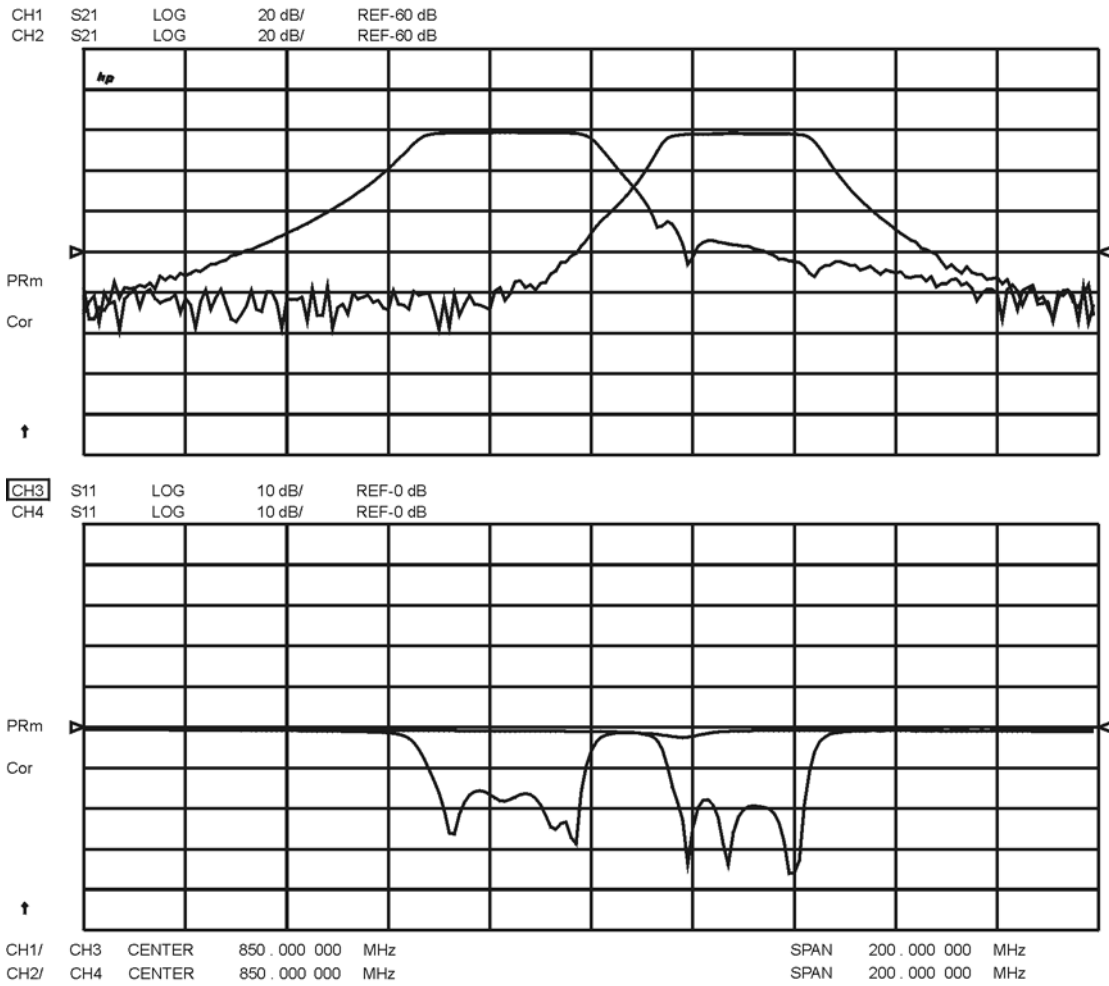

pp42d

---

## Configuring Four-Parameter Display

### Adjusting the Position of Displayed Channels

Once a multi-channel display has been created, the channels can be positioned using the **CHANNEL POSITION** softkey in the **Display** menu. The following example shows how to arrange the channels on your display.

1. Set up a four-channel display as described in [“Measurement Examples” on page 5](#).
2. Press **Display** **DUAL|QUAD SETUP** **CHANNEL POSITION**. In the 4X column,  $\begin{matrix} [1] & [2] \\ [3] & [4] \end{matrix}$  is selected (underlined).
3. Press  $\begin{matrix} [1] & [3] \\ [2] & [4] \end{matrix}$  and notice that channels 2 and 3 exchange places on the screen.

You also have a choice of channel position in the 2X display mode. If  $\begin{matrix} [1 & 2] \\ [3 & 4] \end{matrix}$  is selected, channels 1 and 2 will both be on the upper graticule. If  $\begin{matrix} [1 & 3] \\ [2 & 4] \end{matrix}$  is selected, channels 1 and 3 will both be in the upper graticule, and channels 2 and 4 will both be in the lower graticule.

Note that the number of channels appearing in 2X or 4X display mode is a function of the interaction between how many auxiliary channels are enabled, and the state of softkeys **DUAL CHAN on OFF** and **SPLIT DISPLAY 1X 2X 4X**. Refer to [Table 1, “Display Softkey Interaction,” on page 13](#), for a description of this interaction.

### Adjusting the Display Colors

The colors of the auxiliary channels' elements may be changed in the **Display** menu. Press **Display** **MORE** **ADJUST DISPLAY** **MODIFY COLORS** **MORE** to change the colors of the auxiliary channels. Channel-specific display elements whose color may be modified are data, limit lines, and memory traces.

Once an auxiliary channel element has been selected for color modification, its tint, brightness, and color may be changed in the same way that a primary channel's display colors are changed. For example, pressing **CH3 DATA LIMIT LN** opens the “Color Adjust Menu” where you can adjust the display colors according to your preference.

[Table 6, “Auxiliary Channel Default Display Colors,” on page 29](#), lists the default auxiliary channel display trace colors.

## Interaction between Display Softkeys

The interaction between softkeys **DUAL CHAN on OFF** , **AUX CHAN on OFF** , and **SPLIT DISP 1X 2X 4X** in the display menu determines the number of displayed channels.

[Table 1](#) describes the interaction between these softkeys. The **CHANNEL POSITION** softkey in the display menu determines how the channels are displayed.

**Table 1 Display Softkey Interaction**

NUMBER OF GRIDS	SPLIT DISP	DUAL CHAN ON	AUX CHANNELS ON
1	1X	XX <sup>a</sup>	XX <sup>a</sup>
	1X/2X/4X	Off	None
2	2X or 4X	Off	One or both
	2X	On	XX <sup>a</sup>
3	4X	On	One
4	4X	On	Both

- a. XX as an entry means that the value entered does not affect the number of grids displayed.

## Enhanced Response Calibration

The enhanced response calibration, activated by pressing the **ENHANCED RESPONSE** softkey within the calibrate menu, provides a one-port calibration to correct for directivity, source match, frequency response for reflection measurements, and frequency response for transmission measurements.

Enhanced response calibration improves accuracy in transmission measurements compared to a response calibration or a response and isolation calibration.

## Enhanced Frequency Response Error Correction

The enhanced frequency response error correction removes the following errors:

- directivity errors of the test setup
- source match errors of the test setup
- isolation errors of the test setup (optional)
- frequency response of the test setup

1. Press **Preset**.

2. Select the type of measurement you want to make.

- If you want to make measurements in the forward direction ( $S_{21}$   $S_{11}$ ), press

**Meas** **Trans: FWD S21 (B/R)**

- If you want to make measurements in the reverse direction ( $S_{12}$   $S_{22}$ ), press

**Meas** **Trans: REV S12 (A/R)**

3. Set any measurement parameters that you want for the device measurement: power, format, number of points, or IF bandwidth.

4. To access the measurement correction menus, press **Cal**.

5. If your calibration kit is different than the kit specified under the **CAL KIT [ ]** softkey, press **CAL KIT** **SELECT CAL KIT** (select your type of kit) **RETURN**.

If your type of calibration kit is not listed in the displayed menu, refer to the user's guide.


6. To select the correction type, press **Cal** **CALIBRATE MENU** **ENHANCED RESPONSE** and select the correction type.
  - If you want to make measurements in the forward direction, press **S11/S21 ENH. RESP.**
  - If you want to make measurements in the reverse direction, press **S22/S12 ENH. RESP.**
7. To measure the reflection standards, press **REFLECT'N**.
8. Connect a shielded open circuit to PORT 1 (or PORT 2 for reverse measurements).

---

**NOTE** Include any adapters that you will have in the device measurement. That is, connect the standard to the particular connector where you will connect your device under test.

---

**Figure 5 Standard Connections for Enhanced Response Calibration**

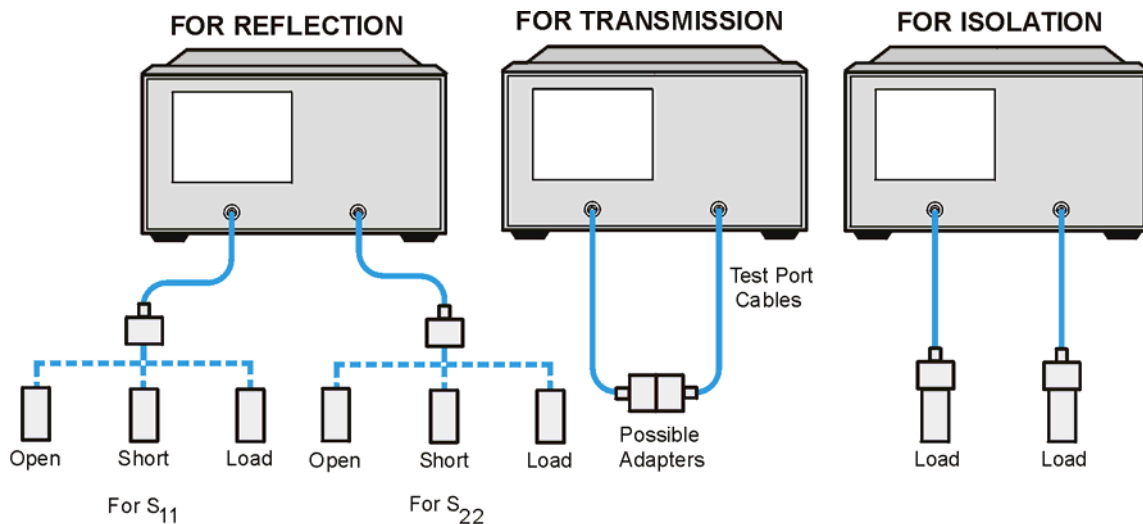

pa586e

9. To measure the standard, press **OPEN**.
 

The analyzer displays **WAIT - MEASURING CAL STANDARD** during the standard measurement. The analyzer underlines the **OPEN** softkey after it measures the standard.
10. Disconnect the open, and connect a short circuit to the test port.
11. To measure the standard, press **SHORT**.
 

The analyzer measures the short circuit and underlines the **SHORT** softkey.
12. Disconnect the short, and connect an impedance-matched load to the test port.

13. To measure the standard, press: **LOADS** , select the type of load you are using, and then press **LOADS DONE** when the analyzer has finished measuring the load.

Notice that the **LOADS** softkey is now underlined.

14. To compute the reflection correction coefficients, press **STANDARDS DONE** .

15. To start the transmission portion of the correction, press **TRANSMISSION** .

16. Make a “thru” connection between the points where you will connect your device under test as shown in [Figure 5, on page 15](#).

---

**NOTE** Include any adapters or cables that you will have in the device measurement. That is, connect the standard device where you will connect your device under test.

---

---

**NOTE** The thru in most calibration kits is defined with zero length. The correction will *not* work properly if a non-zero length thru is used, unless the calibration kit is modified to change the defined thru to the length used. This is important for measurements of non-insertable devices (devices having ports that are both male or both female). The modified calibration kit must be saved as the user calibration kit, and the **USER KIT** softkey must be selected before the calibration is started.

---

17. To measure the standard, press:

**FWD TRANS THRU** or **REV TRANS THRU**

**FWD MATCH THRU** or **REV MATCH THRU**

**STANDARDS DONE**

The analyzer underlines the softkey label after it makes each measurement.

18. Press **ISOLATION** and select from the following two options:

If you will be measuring devices with a dynamic range less than 90 dB, press

**OMIT ISOLATION**

If you will be measuring devices with a dynamic range greater than 90 dB, follow these steps:

- a. Connect impedance-matched loads to the test ports. Include the adapters that you would include for your device measurement.

---

**NOTE** If you will be measuring highly reflective devices such as filters, use the test device connected to the reference plane and terminated with a load, for the isolation standard.

---

b. Activate at least four times more averages than desired during the device measurement.

c. Press **Cal** **RESUME CAL SEQUENCE ISOLATION**  
**FWD or REV ISOLATION ISOLATION DONE** .

19.To compute the error coefficients, press **DONE FWD or REV ENH RESP** .

The analyzer displays the corrected measurement trace. The analyzer also shows the notation  $Cor$  at the left of the screen, indicating that error correction is on.

20.Return the averaging to the original state of the measurement.

---

**NOTE** You can save or store the measurement correction to use for later measurements. Refer to the chapters “Printing, Plotting, and Saving Measurement Results” and “Preset State and Memory Allocation” in your instrument’s user’s guide.

---

21.This completes the enhanced response correction procedure. You can connect and measure your device under test.

## Editing Enhanced Response Calibration Cal Kit Definitions

Table 2 illustrates the relationship between the calibration standard to classes, as it relates to editing of the calibration kit definitions in the network analyzer.

**Table 2 Relationship between Calibrations and Classes**

Class	Response	Response & Isolation	S11 1-port	S22 1-port	One path 2-port	Full 2-port	TRL/ LRM	Fwd Enh Resp	Rev Enh Resp
Reflection: <sup>a</sup>					•	•	•	•	•
S11A, RE FW MTCH			•		•	•	•	•	
S11B, LN FW MTCH			•		•	•	•	•	
S11C, LN FW TRAN			•		•	•	•	•	
S22A, LN RV MTCH				•		•	•		•
S22B, LN RV TRAN				•		•	•		•
S22C, LN RV TRAN				•		•	•		•
Transmission: <sup>a</sup>					•	•	•	•	•
Forward match					•	•	•	•	
Forward trans					•	•	•	•	
Reverse match						•	•		•
Reverse trans						•	•		•
Isolation: <sup>a</sup>					•	•	•	•	•
Forward					•	•	•	•	
Reverse						•	•		•
Response	•								
Response and isolation:									
Response		•							
Isolation		•							
TRL thru: <sup>b</sup>							•		
TRL reflect: <sup>b</sup>							•		
TRL line or match <sup>b</sup> :							•		

a. These subheadings must be called when doing full 2-port calibrations.

b. These subheadings must be called when doing TRL 2-port calibrations



**Table 3 Error Coefficient Arrays**

Array	Response	Response and Isolation	1-port	Enhanced Response	2-port <sup>a</sup>	TRL/LRM
01	$E_R$ or $E_T$	$E_X (E_D)^b$	$E_D$	$E_D$	$E_{DF}$	$E_{DF}$
02		$E_T (E_R)$	$E_S$	$E_S$	$E_{SF}$	$E_{SF}$
03			$E_R$	$E_R$	$E_{RF}$	$E_{RF}$
04				$E_X$	$E_{XF}$	$E_{XF}$
05				$E_L^c$	$E_{LF}$	$E_{LF}$
06				$E_T$	$E_{TF}$	$E_{TF}$
07					$E_{DR}$	$E_{DR}$
08					$E_{SR}$	$E_{SR}$
09					$E_{RR}$	$E_{RR}$
10					$E_{XR}$	$E_{XR}$
11					$E_{LR}$	$E_{LR}$
12					$E_{TR}$	$E_{TR}$

- a. One path, 2-port cal duplicates arrays 1 to 6 in arrays 7 to 12.  
b. Response and isolation corrects for crosstalk and transmission tracking in transmission measurements, and for directivity and reflection tracking in reflection measurements.  
c. This term is used to generate the calibration coefficients, but is not used during measurement error correction.

**Meaning of first subscript:**

D: directivity  
S: source match  
R: reflection tracking  
X: crosstalk or isolation  
L: load match  
T: transmission tracking

**Meaning of second subscript:**

F: forward  
R: reverse

## Markers

There are five markers available to each auxiliary channel, and they can be configured similarly to the primary channel markers.

Normally, the markers are coupled. For example, moving marker 1 (using the front panel control knob) moves marker 1 on all displayed channels. To move a marker on a single channel, uncouple all markers by pressing (Marker Fctn) **MARKER MODE MENU** , and setting **MARKERS:COUPLED UNCOUPLED** to **UNCOUPLED** .


If you want to see the traces clearly but need to keep marker information displayed, press the backspace key (←) beneath the front panel control knob. This will hide the softkey menu and move the marker information into the softkey menu area. The softkey menu can be restored and the marker information moved back into the graticules by pressing (←) again, or any softkey or hardkey that brings up a menu.

Figure 6, “Marker Display Before Pressing the Backspace Key,” on page 21, shows a four-parameter display with four markers on for all channels. After pressing the backspace key, the display appears as in Figure 7. Notice that the softkey menu is not visible and that the marker information for channels 2 and 4 has moved to the right side of the screen.


### Rules Governing the Interaction between the Backspace Key, Markers, and the Softkey Menu

- The backspace key will not hide the softkey menu if an active entry is in progress, such as when you are entering a new stimulus value.
- Marker information will move into the softkey menu area only if there are two or more markers present in the right-half of the display.
- The softkey menu is restored when the backspace key or another hardkey or softkey which brings up a menu is pressed.

**Figure 6 Marker Display Before Pressing the Backspace Key**

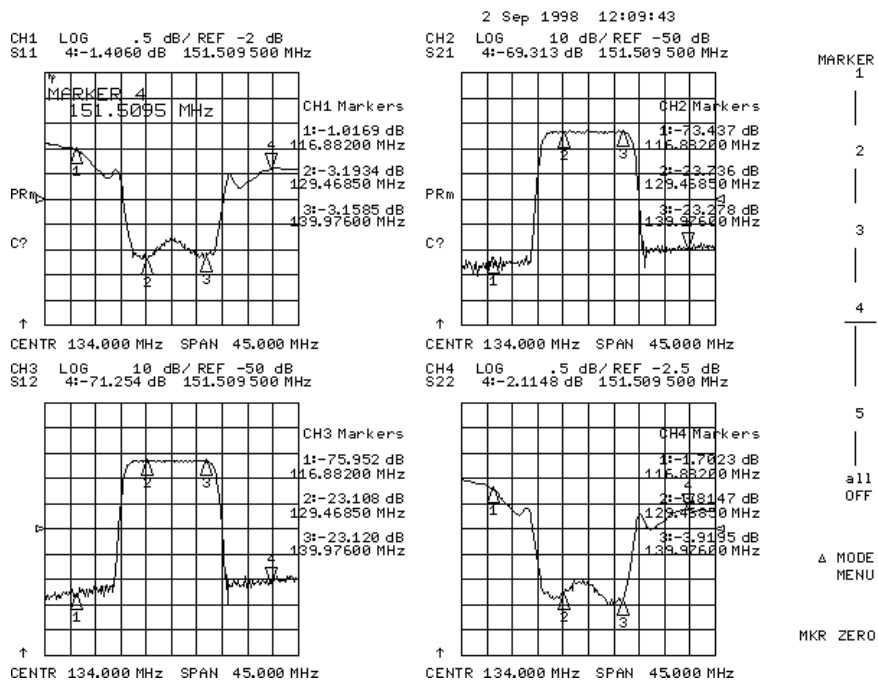

**Figure 7 Marker Display After Pressing the Backspace Key**

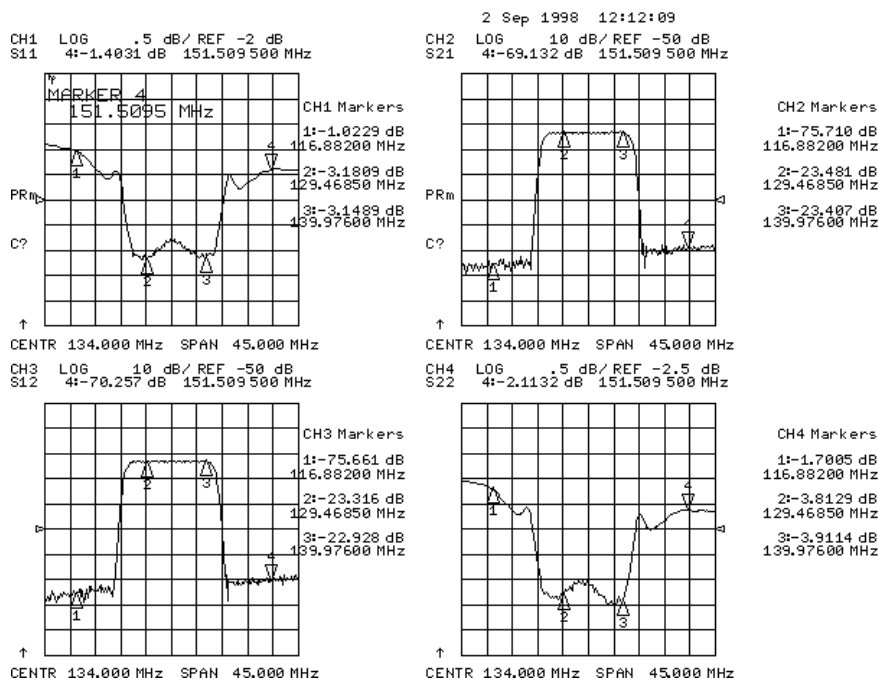


## To Search for a Specific Amplitude

These functions place the marker at an amplitude-related point on the trace. If you switch on tracking, the analyzer searches every new trace for the target point.

### Searching for the Maximum Amplitude


1. Press **Marker Fctn** **MKR SEARCH** to access the marker search menu.
2. Press **SEARCH: MAX** to move the active marker to the maximum point on the measurement trace.

**Figure 8 Example of Searching for the Maximum Amplitude Using a Marker**

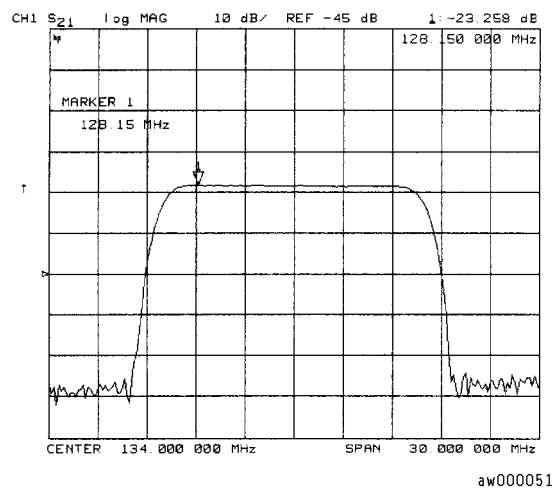


### Searching for the Minimum Amplitude

1. Press **Marker Fctn** **MKR SEARCH** to access the marker search menu.
2. Press **SEARCH: MIN** to move the active marker to the minimum point on the measurement trace.

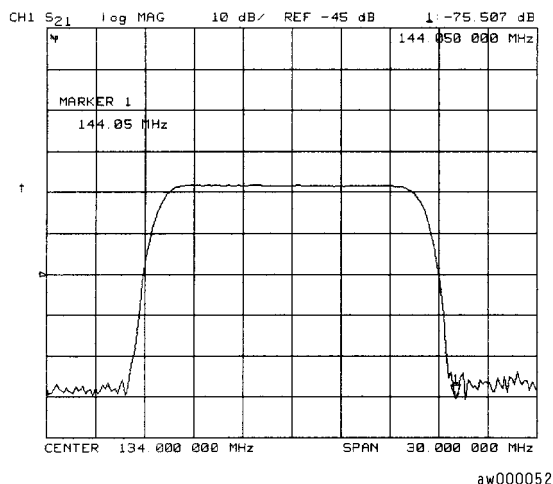**Figure 9 Example of Searching for the Minimum Amplitude Using a Marker****Searching for a Target Amplitude**

1. Press **Marker Fctn** **MKR SEARCH** to access the marker search menu.
2. Press **SEARCH: TARGET** to move the active marker to the target point on the measurement trace.
3. If you want to change the target amplitude value (default is  $-3$  dB), press **TARGET** and enter the new value from the front panel keypad. You may also press **Marker Search** **TARGET VALUE** to enter the new value.
4. If you want to search for multiple responses at the target amplitude value, press **SEARCH LEFT** and **SEARCH RIGHT**.

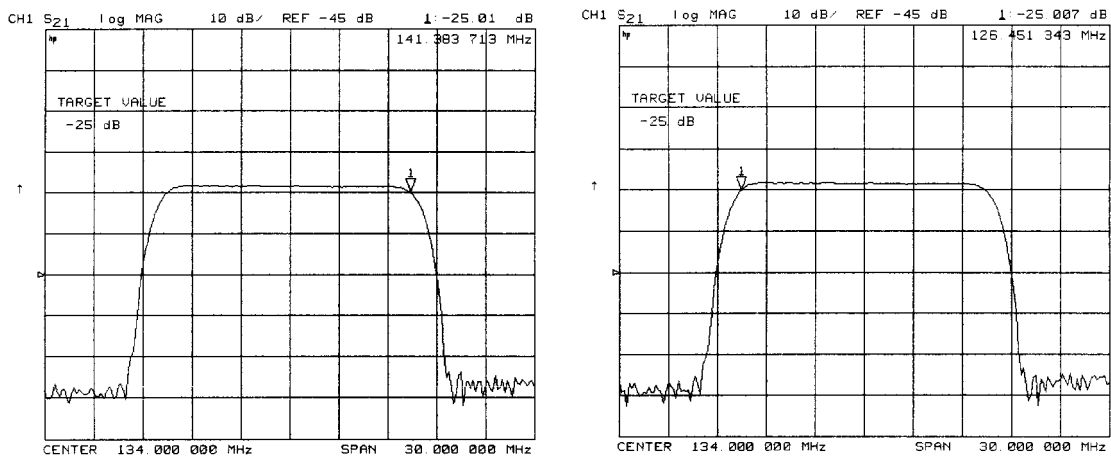**Figure 10 Example of Searching for a Target Amplitude Using a Marker**


pg6230

## Searching for a Bandwidth

The analyzer can automatically calculate and display the bandwidth (BW:), center frequency (CENT:), Q, and loss of the device under test at the center frequency. (Q stands for “quality factor,” defined as the ratio of a circuit's resonant frequency to its bandwidth.) These values are shown in the marker data readout.

1. Press **Marker Fctn** **MKR SEARCH** and **SEARCH: MAX** to place the marker near the center of the filter passband.
2. Press **Marker** **MKR ZERO** if you want the bandwidth relative to the maximum.
3. Press **Marker Fctn** **MKR SEARCH** to access the marker search menu.
4. Press **WIDTHS ON** to calculate the center stimulus value, bandwidth, and the Q of a bandpass or band reject shape on the measurement trace.
5. If you want to change the amplitude value (default is  $-3$  dB) that defines the passband or reject band, press **WIDTH VALUE** and enter the new value from the front panel keypad.

**Figure 11 Example of Searching for a Bandwidth Using Markers**

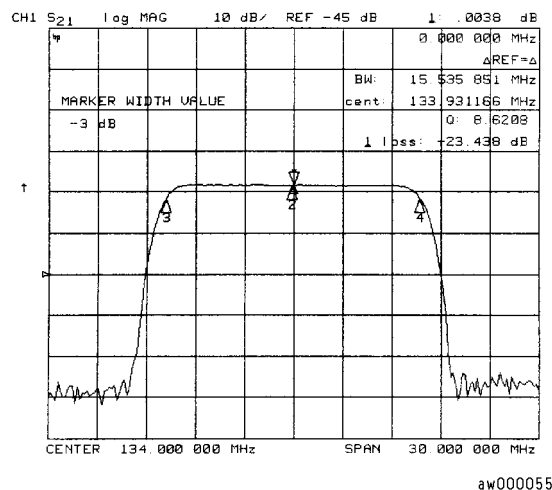

## Tracking the Amplitude that You Are Searching

1. Set up an amplitude search by following one of the previous procedures in [“To Search for a Specific Amplitude”](#) on page 22.
2. Press **Marker Fctn** **MKR SEARCH TRACKING ON** to track the specified amplitude search with every new trace and put the active marker on that point.

When tracking is not activated, the analyzer finds the specified amplitude on the current sweep and the marker remains at the same stimulus value, regardless of changes in the trace response value with subsequent sweeps.

## Additions and Changes to the Network Analyzer User Interface

This section describes the four-parameter display, and the enhanced response calibration features of firmware 7.60 and above.

### New Remote Commands

The firmware upgrade adds new remote commands for configuring the new display functions, and for performing enhanced response calibration. [Table 4](#) lists these new remote commands. Where a command has the same effect as a front-panel key, the key name is listed in the column “Equivalent Key.” These are new commands, and they do not change the commands of earlier versions of firmware.

**Table 4** New Remote Commands

Mnemonic	OPC- Compatible	Action	Equivalent Key
AUXC	Yes	Enables and disables auxiliary channels.	<b>AUX CHAN on OFF</b>
CHAN 3	Yes	Makes channel 3 active.	<b>CHAN 1</b>
CHAN 4	Yes	Makes channel 4 active.	<b>CHAN 2</b>
COLOCH3D	No	Selects channel 3 data/limit line color.	<b>CH3 DATA LIMIT</b>
COLOCH3M	No	Selects channel 3 memory trace color.	<b>CH3 MEM</b>
COLOCH4D	No	Selects channel 4 data/limit line color.	<b>CH4 DATA LIMIT</b>
COLOCH4M	No	Selects channel 4 memory trace color.	<b>CH4 MEM</b>
COLOLREF	No	Selects the display reference line color.	<b>REF LINE</b>
D2XUPCH3	No	Orients channels in 2-grid display with channel 3 on top.	2X: $\begin{bmatrix} 1 & 3 \\ 2 & 4 \end{bmatrix}$
D2XUPCH2	No	Orients channels in 2-grid display with channel 2 on top.	2X: $\begin{bmatrix} 1 & 2 \\ 3 & 4 \end{bmatrix}$
D4XUPCH3	No	Orients channels in 4-grid display with channel 3 in upper right-hand quadrant of display.	4X: $\begin{bmatrix} 1 & 3 \\ 2 & 4 \end{bmatrix}$
D4XUPCH2	No	Orients channels in 4-grid display with channel 2 in upper right-hand quadrant of display.	4X: $\begin{bmatrix} 1 & 2 \\ 3 & 4 \end{bmatrix}$
SPLID1	No	Displays all active channels in one full-size graticule.	<b>SPLIT DISP 1X</b>

**Table 4 New Remote Commands**




Mnemonic	OPC- Compatible	Action	Equivalent Key
SPLID2	No	Displays all active channels in two full-size graticules.	<b>SPLIT DISP 2X</b>
SPLID4	No	Displays each active channel in four separate graticules.	<b>SPLIT DISP 4X</b>
PCOLODATA3	No	Prints color for channel 3 data.	<b>CH3 DATA [COLOR]</b>
PCOLODATA4	No	Prints color for channel 4 data.	<b>CH4 DATA [COLOR]</b>
PCOLOMEMO3	No	Prints color for channel 3 memory.	<b>CH3 MEM [COLOR]</b>
PCOLOMEMO4	No	Prints color for channel 4 memory.	<b>CH4 MEM [COLOR]</b>
PCOLOREFL	No	Prints color for the reference line.	<b>REF LINE [COLOR]</b>
CALIERC	No	Begins an enhanced response calibration sequence (forward direction).	<b>S11/21 ENH. RESP</b>
ERCDONE	Yes	Concludes an enhanced response calibration (forward direction).	<b>DONE FWD ENH. RESP</b>
CALIRERC	No	Begins an enhanced response calibration sequence (reverse direction).	<b>S22/12 ENH. RESP</b>
RERCDONE	Yes	Concludes an enhanced response calibration (reverse direction).	<b>DONE REV ENH. RESP</b>
CALK716	No	Selects the HP 85038A 7-16 cal kit for calibration.	<b>7-16 HP 85038</b>



## Softkey and Hardkey Functions

The new four-parameter display hardkey and softkey functions are described in [Table 5](#).

**Table 5 New Hardkey and Softkey Functions**

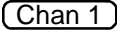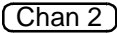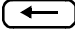Key	Function
	Makes channel 1 or auxiliary channel 3 active.
	Makes channel 2 or auxiliary channel 4 active.
<b>AUX CHAN on OFF</b>	Enables and disables an auxiliary channel.
<b>4 PARAM DISPLAYS</b>	Describes the basic features of four-parameter display and provides quick setup keys.
<b>SPLIT DISP 1X 2X 4X</b>	Splits the screen into 1, 2, 3, or 4 separate grids.
<b>CHANNEL POSITION</b>	Orients the auxiliary channels below or adjacent to their primary channels.
 (backspace key)	Turns off the softkey menu and, if there is more than one marker in the right-half of the display, moves the marker information into the softkey menu area. Makes marker information and trace data easier to view.
<b>CH3 DATA LIMIT LN</b>	Selects channel 3 data and limit lines display for color modification.
<b>CH3 MEM</b>	Selects channel 3 display memory trace for color modification.
<b>CH4 DATA LIMIT LN</b>	Selects channel 4 data and limit lines display for color modification.
<b>CH4 MEM</b>	Selects channel 4 display memory trace for color modification.
<b>REF LINE</b>	Selects the display reference line for color modification.
<b>GRATICULE</b>	Selects the display graticule for color modification.
<b>TEXT</b>	Selects display text for color modification.
<b>CH3 DATA [COLOR]</b>	Selects Channel 3 print data for color modification.
<b>CH3 MEM [COLOR]</b>	Selects Channel 3 print memory for color modification.
<b>CH4 DATA [COLOR]</b>	Selects Channel 4 print data for color modification.
<b>CH4 MEM [COLOR]</b>	Selects Channel 4 print memory for color modification.
<b>REF LINE [COLOR]</b>	Selects the print reference line for color modification.
<b>DO BOTH FWD THRU</b>	Activates both forward measurements (reflection and transmission) of the thru standard from the selective enhanced response calibration menus.
<b>DO BOTH REV THRU</b>	Activates both reverse measurements of the thru standard $S_{22}/S_{12}$ from the $S_{11}/S_{21}$ selective enhanced response calibration menus.
<b>DONE FWD ENH RESP.</b>	Concludes the enhanced response calibration (forward direction).

**Table 5 New Hardkey and Softkey Functions**

Key	Function
<b>DONE REV ENH RESP.</b>	Concludes the enhanced response calibration (reverse direction).
<b>ENHANCED RESPONSE</b>	Provides access to the series of menus used to perform an enhanced response calibration.
<b>REV ISOL'N</b>	Measures the reverse isolation of the calibration standard during an enhanced response cal.
<b>S11/21 ENH. RESP</b>	Provides an $S_{11}$ and $S_{21}$ enhanced response calibration (forward direction). Enhanced response generates a 1-port cal for $S_{11}$ and an improved calibration over the response cal for $S_{21}$ .
<b>S22/12 ENH. RESP</b>	Provides an $S_{22}$ and $S_{12}$ enhanced response calibration (reverse direction). Enhanced response generates a 1-port cal for $S_{22}$ and an improved calibration over the response cal for $S_{12}$ .

## Display Colors

Table 6 lists the default values for the auxiliary channels display colors.

**Table 6 Auxiliary Channel Default Display Colors**

Display Element	Tint	Brightness	Color
Ch3 Data/Limit Line	85	100%	100%
Ch3 Memory	90	100%	100%
Ch4 Data Limit/Line	33	100%	100%
Ch4 Memory	45	100%	100%

## Changes to Menu Maps

In the **Save/Recall** menu, **ISTATE UTILITIES** has been removed from the **FILE UTILITIES** sub-menu.

In the **Cal** menu, the default status of interpolated error-correction is now set to **ON**.

In the **CONFIGURATION** sub-menu of the **System** menu, **USER SETTINGS** has been added. Pressing **USER SETTINGS** leads to **PRESET SETTINGS**, then to **CAL INTERP on OFF**. Pressing this key will cause the analyzer to power-up with interpolated error-correction turned off.


## Changes to the Display

The symbols C? and C2 have been changed to CΔ. The meaning is the same as the original notation as described in Chapter 1, “Description and Options” in your analyzer’s user’s guide.

## Display Menu Map

This menu map shows the new **Display** menu and sub-menus. The most significant change to the **Display** menu is the addition of the **DUAL | QUAD SETUP** sub-menu.

**Figure 12 Display Menu Map**

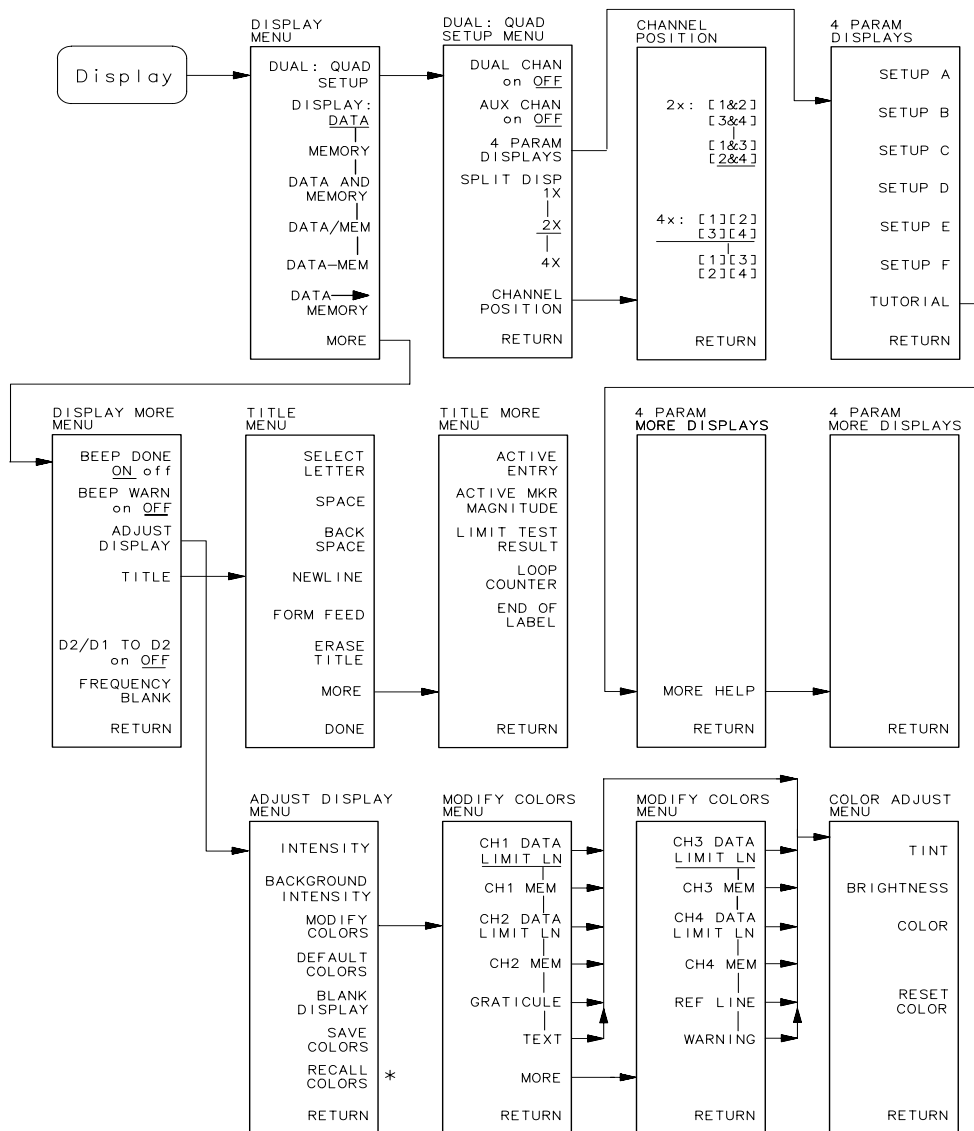


\* APPEARS ONLY WHEN COLORS HAVE BEEN SAVED.

## Status Reporting Structure

The status reporting structure of your analyzer has been changed to include extra bits associated with the auxiliary channels. Notice the addition of bits 8 through 11 to event status register B.

**Figure 13 Status Reporting Structure**

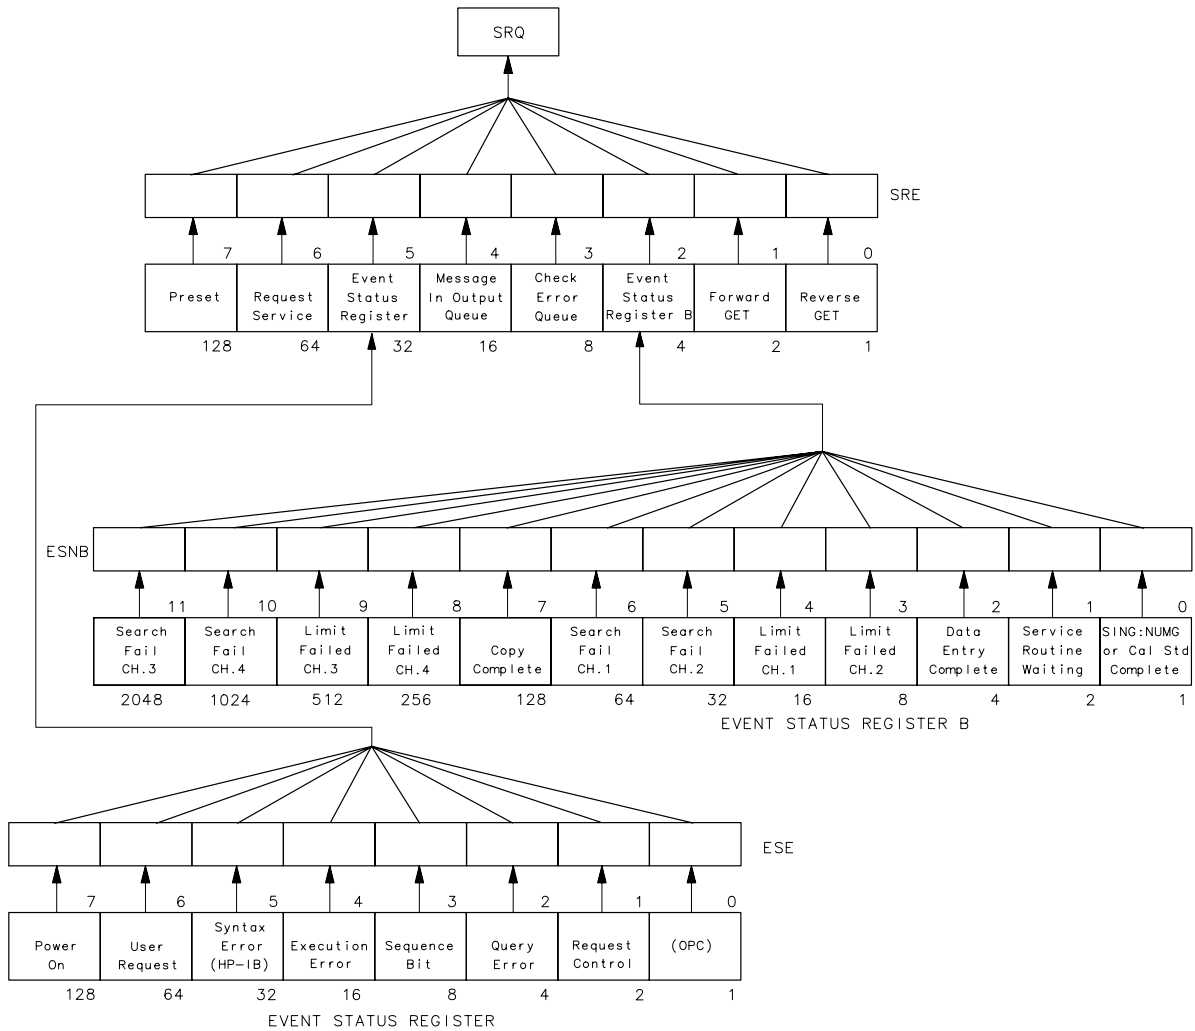

cb67d

## New Error Messages

The four-parameter display firmware upgrade includes new error messages. They are shown below, along with a description of each new message.

---

☐ CAUTION: AUX CHANNEL(S) RESTORED

ERROR NUMBER 214

**This message is displayed when a calibration is restored (from a recalled instrument state) and that instrument state had one or both auxiliary channel(s) enabled.**

---

## Preset Conditions

Pressing **(Preset)** sets the new softkeys to the values shown in [Table 7](#). Where a softkey existed prior to the release of four-parameter display firmware, but its preset value has changed as a result of this firmware upgrade, the softkey name is preceded by an asterisk.

**Table 7 Preset Values of Softkeys**

Softkey	Power On or Preset
<b>AUX CHAN ON OFF</b>	OFF
<b>SPLIT DISP 1X 2X 4X</b>	2X
<b>CHANNEL POSITION</b>	2X: [1 & 3] [2 & 4]
	4X: [1] [2] [3] [4]
Channel 3 (measurement/format)	S12/Log Magnitude
Channel 4 (measurement/format)	S22/Log Magnitude
<b>CH 3 DATA LIMIT LN</b> (display color)	Magenta
<b>CH 4 DATA LIMIT LN</b> (display color)	Green
<b>CH 3 MEM</b> (display color)	Magenta
<b>CH 4 MEM</b> (display color)	Green
<b>REF LINE</b> (display color)	White
<b>GRATICULE</b> (display color)	Grey
<b>TEXT</b> (display color)	White
<b>CH3 DATA</b> (print color)	Magenta
<b>CH3 MEM</b> (print color)	Green
<b>CH4 DATA</b> (print color)	Blue
<b>CH4 MEM</b> (print color)	Red
<b>REF LINE</b> (print color)	Black
<b>*INTERPOL ON off</b>	ON

## Saving Measurement Data to Disk

This section describes the changes four-parameter display firmware makes to data files saved to disk. For more information on saving data files to disk, refer to the chapters “Printing, Plotting, and Saving Measurement Results” and “Preset State and Memory Allocation” in your user’s guide.

### Data Files (Binary or ASCII)

A binary or ASCII softkey selection may be used to select the manner in which the data is saved.

If **DATA ARRAY** is selected, and one or both auxiliary channels are displayed, files with extensions .d3 and/or .d4 will be saved.

If **FORMAT ARRAY** is selected and one or both auxiliary channels are displayed, files with extensions .f3 and/or .f4 are saved.

### New Binary Instrument State File

Files with .I, .P, and .W suffixes contain instrument state settings in a binary format which are only meant to be read by the network analyzer, and not to be interpreted by the user.

A file with a “W” suffix is saved to disk anytime an instrument state is saved to disk. This file can only be read by analyzers with four-parameter display capability.



---

## Miscellaneous

### Power Ranges

The power ranges extend to allow for 12 dB under-range and 6 dB over-range for each channel on the HP 8719D/20D/22D, and a 6 dB under-range and 6 dB over-range on the HP 8753E.

### HPGL Graphics (Noise Figure Meter HP 8970B Only)

The HPGL graphics scaling has been changed to allow a larger screen display of noise figure measurements.

### Sampler Cal

The firmware revision 7.60 and higher adds a sampler calibration for models HP 8719/20/22.

To set the instrument so that the sampler cal is on, press **(System) SERVICE MENU SERVICE MODES MORE SAMPLR COR on OFF**.

### New Power Meter Support

The firmware revision 7.60 and higher allows for use of HP E4419/E4418 power meters, in conjunction with power sensors HP E4412A and HP E4413A, as well as power sensors traditionally used with the HP 436/437/438 power meters.

If the power sensor being used is not one of the E-Series power sensors, the sensor calibration factors need to be entered into the table for the appropriate sensor (A or B) on the network analyzer (the same procedure as is done when using the HP 436/437/438 series of power meters).

If the power sensor is one of the E-Series sensors, the power meter reads the factors from the sensor itself, so the calibration factor table on the network analyzer is not used.

To ensure that the network analyzer will correctly apply the required correction factors, press: **(Local) SET ADDRESSES**. Set **POWER METER[436A]** to **POWER METER [438A/437]**.

### IDN?

The IDN? query string outputs the identification string:

HEWLETT PACKARD, 87NNEX, xxxxxxxxxxxx, X.XX where 87NNEX is the model number of the instrument, xxxxxxxxxxxx is the serial number of the instrument, and X.XX is the firmware revision of the instrument.

## **Rear Panel Service Test**

The Rear Panel Service Test (Test# 13) has changed to refer to the test as the HPIB Test (Test #13), with the exception of the HP 8719/20/22 where the test is displayed as the GPIB Test (Test #13).

## **One Path, Two Port Calibration Type Remote Commands**

The remote commands for the 1 path, 2-port calibration are still supported. However, the one path, 2-port calibration is no longer available from the front panel.

## **Calibration Kit 7-16**

HP 85038A 7-16 connector calibration kit has been added for firmware revision 7.60 and higher.

## Hewlett-Packard Sales and Service Offices

**Table 8 Hewlett-Packard Sales and Service Offices**

<b>UNITED STATES</b>		
Instrument Support Center Hewlett-Packard Company (800) 403-0801		
<b>EUROPEAN FIELD OPERATIONS</b>		
<b>Headquarters</b> Hewlett-Packard S.A. 150, Route du Nant-d'Avril 1217 Meyrin 2/ Geneva Switzerland (41 22) 780.8111	<b>France</b> Hewlett-Packard France 1 Avenue Du Canada Zone D'Activite De Courtaboeuf F-91947 Les Ulis Cedex France (33 1) 69 82 60 60	<b>Germany</b> Hewlett-Packard GmbH Hewlett-Packard Strasse 61352 Bad Homburg v.d.H Germany (49 6172) 16-0
<b>Great Britain</b> Hewlett-Packard Ltd. Eskdale Road, Winnersh Triangle Wokingham, Berkshire RG41 5DZ England (44 118) 9696622		
<b>INTERCON FIELD OPERATIONS</b>		
<b>Headquarters</b> Hewlett-Packard Company 3495 Deer Creek Rd. Palo Alto, CA 94304-1316 USA (415) 857-5027	<b>Australia</b> Hewlett-Packard Australia Ltd. 31-41 Joseph Street Blackburn, Victoria 3130 (61 3) 895-2895	<b>Canada</b> Hewlett-Packard (Canada) Ltd. 17500 South Service Road Trans-Canada Highway Kirkland, Quebec H9J 2X8 Canada (514) 697-4232
<b>Japan</b> Hewlett-Packard Japan, Ltd. Measurement Assistance Center 9-1, Takakura-Cho, Hachioji-Shi, Tokyo 192-8510, Japan TEL (81) -426-56-7832 FAX (81) -426-56-7840	<b>Singapore</b> Hewlett-Packard Singapore (Pte.) Ltd. 150 Beach Road #29-00 Gateway West Singapore 0718 (65) 291-9088	<b>Taiwan</b> Hewlett-Packard Taiwan 8th Floor, H-P Building 337 Fu Hsing North Road Taipei, Taiwan (886 2) 712-0404
<b>China</b> China Hewlett-Packard Co. 38 Bei San Huan X1 Road Shuang Yu Shu Hai Dian District Beijing, China (86 1) 256-6888		



## Numerics

1-path, 2-port calibration type  
remote commands, 36

## A

activate the auxiliary channels, 8  
activating auxiliary channels, 3  
additions to network analyzer  
user interface, 25  
adjust  
display colors, 12  
displayed channels position, 12  
amplitude  
specific search, 22  
tracking, 24  
ASCII files, 34  
auxiliary channels, 2  
activate, 8  
display colors, 29  
enabling and activating, 3

## B

backspace, 20  
bandwidth, searching for, 24  
binary files, 34

## C

calibration  
enhanced response, 14  
sampler, 35  
calibration kit 7-16, 36  
changes to the network analyzer  
user interface, 25  
channels  
auxiliary, 2  
primary, 2  
characterizing duplexer, 9  
commands  
remote, new, 25  
configuring four-parameter  
display, 12

## D

data files, saving, 34  
display  
all 4 s-parameters of a 2-port  
device, 5  
changes, 29  
colors, 29  
colors adjust, 12  
four-parameter, 2  
menu map, 30  
softkey interaction, 13  
display and calibration  
four-parameter, 3

display colors  
adjust, 12  
display markers  
uncouple, 8  
display setup  
four-parameter, 4  
duplexer, 9

## E

enabling and activating auxiliary  
channels, 3  
enabling auxiliary channels, 3  
enhanced frequency response  
error correction, 14  
enhanced response calibration, 14  
error correction  
enhanced frequency response,  
14

## F

files  
ASCII, 34  
binary, 34  
binary instrument state, 34  
data, 34  
four-parameter  
configuring display, 12  
display and calibration, 3  
display overview, 2  
display setup, 4  
four-parameter display, 2  
four-parameter display and  
calibration, 3  
functions  
hardkeys, 27  
softkeys, 27

## G

graphics  
HPGL, 35

## H

hardkeys  
functions, new, 27  
HPGL graphics, 35

## I

IDN?, 35  
interaction between display  
softkeys, 13  
interface  
user, 25  
introduction, 1

## K

kit  
7-16, 36

## M

markers, 20  
specific amplitude, searching  
for, 22  
uncouple, 8  
maximum amplitude, searching  
for, 22  
measurement  
duplexer, 9  
examples, 5  
measurement data to disk  
saving, 34  
menu map, 30  
changes, 29  
messages  
error, new, 32  
minimum amplitude, searching  
for, 22  
miscellaneous, 35  
1-path 2-port calibration type  
remote commands, 36  
calibration kit 7-16, 36  
HPGL graphics, 35  
IDN?, 35  
new power meter support, 35  
power ranges, 35  
rear panel service test, 36  
sampler cal, 35

## N

network analyzer user interface  
additions and changes, 25  
new error messages, 32  
new remote commands, 25

## P

power meter support, new, 35  
power ranges, 35  
preset, 33  
softkey values, 33  
primary channels, 2

## Q

quick four-parameter display  
setup, 4

## R

remote commands  
1-path, 2-port calibration type,  
36  
remote commands, new, 25

reporting  
status structure, 31

## S

sampler cal, 35

saving

ASCII files, 34

binary files, 34

data files, 34

measurement data to disk, 34

new binary instrument state  
file, 34

searching for specific amplitude,  
22

softkeys

functions, new, 27

interaction between display, 13

preset values, 33

s-parameters

displaying all 4 of a 2-port  
device, 5

specific amplitude, 22

bandwidth, searching for, 24

maximum amplitude, searching  
for, 22

minimum amplitude, searching  
for, 22

search for, 22

target amplitude, searching for,  
23

tracking the amplitude, 24

status reporting structure, 31

structure

status reporting, 31

## T

target amplitude, searching for,  
23

test

rear panel, 36

tracking the amplitude, 24

## U


uncouple the display markers, 8

user interface

additions and changes to the  
network analyzer, 25

# Contacting Agilent

This information supersedes all prior HP contact information.			
<b>Online assistance:</b> <a href="http://www.agilent.com/find/assist">www.agilent.com/find/assist</a>			
<b>Americas</b>			
<b>Brazil</b> <i>(tel)</i> (+55) 11 4197 3700 <i>(fax)</i> (+55) 11 4197 3800	<b>Canada</b> <i>(tel)</i> 888 447 7378 <i>(fax)</i> 905 282 6495	<b>Mexico</b> <i>(tel)</i> 1 800 734 7703 <i>(fax)</i> 1 800 734 7704	<b>United States</b> <i>(tel)</i> 800 829 4444 <i>(alt)</i> (+1) 303 662 3998 <i>(fax)</i> 800 829 4433
<b>Asia Pacific and Japan</b>			
<b>Australia</b> <i>(tel)</i> 1 800 225 574 <i>(alt)</i> 1 800 893 449 <i>(fax)</i> 1 800 681 776 <i>(fax)</i> 1 800 225 539	<b>China</b> <i>(tel)</i> 800 810 0508 <i>(alt)</i> 800 810 0510 <i>(fax)</i> 800 810 0507 <i>(fax)</i> 800 810 0362	<b>Hong Kong</b> <i>(tel)</i> 800 933 229 <i>(fax)</i> 800 900 701	<b>India</b> <i>(tel)</i> 1600 112 929 <i>(alt)</i> 1600 112 626 <i>(fax)</i> 1600 112 727 <i>(fax)</i> 1600 113 040
<b>Japan (Bench)</b> <i>(tel)</i> 0120 32 0119 <i>(alt)</i> (+81) 426 56 7799 <i>(fax)</i> 0120 01 2144	<b>Japan (On-Site)</b> <i>(tel)</i> 0120 802 363 <i>(alt)</i> (+81) 426 56 7498 <i>(fax)</i> (+81) 426 60 8953	<b>Singapore</b> <i>(tel)</i> 1 800 275 0880 <i>(fax)</i> (+65) 6836 0240 <i>(fax)</i> (+65) 6755 1235 <i>(fax)</i> (+65) 6755 1214	<b>South Korea</b> <i>(tel)</i> 080 770 7774 <i>(tel)</i> 080 778 0011 <i>(tel)</i> 080 778 0012 <i>(alt)</i> +65 270 1207 <i>(fax)</i> 080 778 0013 <i>(fax)</i> +82 080 778-0014 <i>(fax)</i> 080 770 7778
<b>Taiwan</b> <i>(tel)</i> 0800 047 661 <i>(tel)</i> 0800 047 669 <i>(fax)</i> 0800 047 667	<b>Thailand</b> <i>(tel)</i> 1 800 2758 5822 <i>(alt)</i> (+66) 259 3442 <i>(fax)</i> 1 800 656 336	<b>Malaysia</b> <i>(tel)</i> 1800 880 399 <i>(fax)</i> 1800 801 054	
<b>Europe</b>			
<b>Austria</b> <i>(tel)</i> 0820 87 44 11* <i>(fax)</i> 0820 87 44 22	<b>Belgium</b> <i>(tel)</i> (+32) (0)2 404 9340 <i>(alt)</i> (+32) (0)2 404 9000 <i>(fax)</i> (+32) (0)2 404 9395	<b>Denmark</b> <i>(tel)</i> (+45) 7013 1515 <i>(alt)</i> (+45) 7013 7313 <i>(fax)</i> (+45) 7013 1555	<b>Finland</b> <i>(tel)</i> (+358) 10 855 2100 <i>(fax)</i> (+358) (0) 10 855 2923
<b>France</b> <i>(tel)</i> 0825 010 700* <i>(alt)</i> (+33) (0)1 6453 5623 <i>(fax)</i> 0825 010 701*	<b>Germany</b> <i>(tel)</i> 01805 24 6333* <i>(alt)</i> 01805 24 6330* <i>(fax)</i> 01805 24 6336*	<b>Ireland</b> <i>(tel)</i> (+353) (0)1 890 924 204 <i>(alt)</i> (+353) (0)1 890 924 206 <i>(fax)</i> (+353) (0)1 890 924 024	<b>Israel</b> <i>(tel)</i> (+972) 3 9288 500 <i>(fax)</i> (+972) 3 9288 501
<b>Italy</b> <i>(tel)</i> (+39) (0)2 9260 8484 <i>(fax)</i> (+39) (0)2 9544 1175	<b>Luxemburg</b> <i>(tel)</i> (+32) (0)2 404 9340 <i>(alt)</i> (+32) (0)2 404 9000 <i>(fax)</i> (+32) (0)2 404 9395	<b>Netherlands</b> <i>(tel)</i> (+31) (0)20 547 2111 <i>(alt)</i> (+31) (0)20 547 2000 <i>(fax)</i> (+31) (0)20 547 2190	<b>Russia</b> <i>(tel)</i> (+7) 095 797 3963 <i>(alt)</i> (+7) 095 797 3900 <i>(fax)</i> (+7) 095 797 3901
<b>Spain</b> <i>(tel)</i> (+34) 91 631 3300 <i>(alt)</i> (+34) 91 631 3000 <i>(fax)</i> (+34) 91 631 3301	<b>Sweden</b> <i>(tel)</i> 0200 88 22 55* <i>(alt)</i> (+46) (0)8 5064 8686 <i>(fax)</i> 020 120 2266*	<b>Switzerland (French)</b> <i>(tel)</i> 0800 80 5353 opt. 2* <i>(alt)</i> (+33) (0)1 6453 5623 <i>(fax)</i> (+41) (0)22 567 5313	<b>Switzerland (German)</b> <i>(tel)</i> 0800 80 5353 opt. 1* <i>(alt)</i> (+49) (0)7031 464 6333 <i>(fax)</i> (+41) (0)1 272 7373
<b>Switzerland (Italian)</b> <i>(tel)</i> 0800 80 5353 opt. 3* <i>(alt)</i> (+39) (0)2 9260 8484 <i>(fax)</i> (+41) (0)22 567 5314	<b>United Kingdom</b> <i>(tel)</i> (+44) (0)7004 666666 <i>(alt)</i> (+44) (0)7004 123123 <i>(fax)</i> (+44) (0)7004 444555		
<i>(tel)</i> = primary telephone number; <i>(alt)</i> = alternate telephone number; <i>(fax)</i> = FAX number; * = in country number			

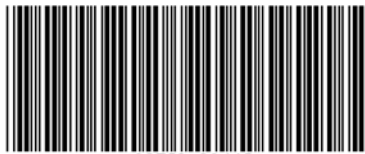

08753-90445