# INFORMATION ONLY-DOES NOT COMMUNICATE A MODIFICATION OR SAFETY CONDITION

E5070A-06B

## <u>SERVICE NOTE</u>

Supersedes: E5070A-06A

## E5070A ENA Series Network Analyzer, 300 kHz to 3 GHz

Serial Numbers: [0000A00000 / 9999Z99999]

HDD repair and Operating system update procedures are changed

**Parts Required:** 

P/N Description Qty.

04287-65000 Mass Storage Disk (HDD) for service 1

#### ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:

 
### **INFORMATION ONLY**

AUTHOR: KH PRODUCT LINE: WN

ADDITIONAL INFORMATION:

This procedure must be performed by Agilent Technologies service offices.

© AGILENT TECHNOLOGIES, INC. 2005 PRINTED IN U.S.A.





Page 2 of 14 E5070A-06B

#### **Situation:**

The new HDD (04287-65000) for repair does not include any operating system. When the HDD (04287-65000) is used, the operating system for E5070A should be installed. The power-on test limit file and the internal test file rev A.05.00 or later also should be installed in order to avoid unnecessary test failures.

#### **Solution/Action:**

The new HDD repair procedure for the E5070A is as follows. The procedure also can be used to update the operating system image without replacing the HDD.

#### **Required Equipment**

OS Image: DVD disk (Operating system for E5070A/71A, F/w rev.3.62, Agilent service office use only) Power-on test limit file and internal test file rev A.05.00 or later: Available at the E5070A firmware Rev A.03.62 download web site.

HDD: p/n 04287-65000 (It is available for 4287A(win98), E4991A(win98), E5070/71A)

Software: Symantec Ghost TM 8.0 (English version, Enterprise product)

System(PC): Windows 2000 Professional (or Windows XP Professional) with DVD drive (or available to support external DVD drives)

LAN Cable: Cross (It enables the peer-to-peer communication between the E5071A and the PC.) (or 2 straight cables and a hub.)

PC installed E5070/71A adjustment program(VEE, Agilent service office use only) and a GPIB cable


#### Outline of the procedure

- 1. Make Boot disks using Symantec Ghost (only needs to be done one time) (5 min.)
- 2. Replace the defective HDD with the new HDD(p/n 04287-65000) (10 min.)
- 3. Connect the E5070A to your PC installed Symantec Ghost directly
- 4. Set up IP address and subnet mask of your PC (5 min.)
- 5. Set up GhostCast server (20 min.)
- 6. Copy the image file onto the E5070A's HDD (30 min.)
- 7. Perform initial setting for the E5070A (20 min.)


**NOTE** Skip the procedure 2 when only updating the operating system image. The other procedures are common to the HDD replacement and the image update.

Page 3 of 14 E5070A-06B


- 1. Make Boot disks using Symantec Ghost (Required for the first time)
- 1) Click Start Programs Symantec Ghost Ghost Boot Wizard.
- 2) Select **Network Boot Disk** and press the **Next** button.

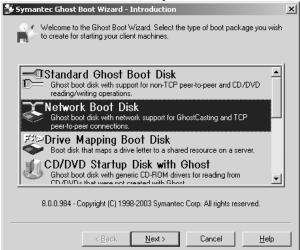

3) Select Intel PRO100 and press the Next button.

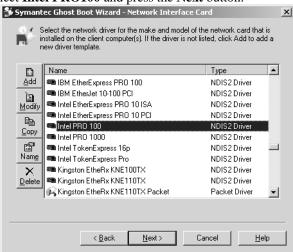


4) Press the **Next** button

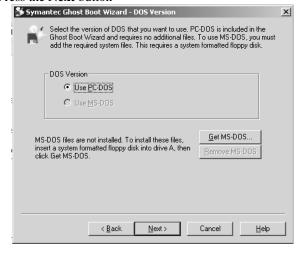

Page 4 of 14 E5070A-06B


5) Enter Parameters –**szeE**, and then press the **Next** button.

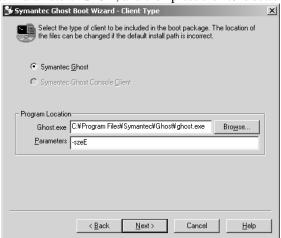

6) Press the **Next** button.



7) Select The IP setting ....., and enter IP address 192.168.0.1 and subnet mask 255.255.255.0. Press the **Next** button.

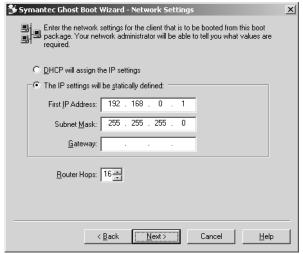


Page 5 of 14 E5070A-06B

8) Insert a floppy disk into your PC's FDD, and the Next button.



9) Press the **Next** button.

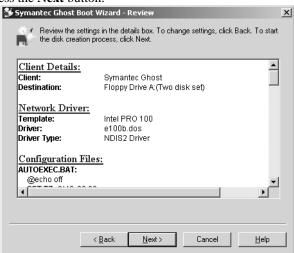


10) Press the **OK** button..




Page 6 of 14 E5070A-06B

11) Press the **Start** button.

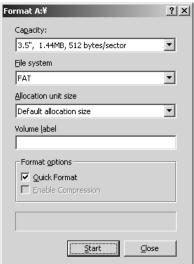

 
12) Press the **OK** button.




13) Press the **OK** button.



14) Press the **Close** button.

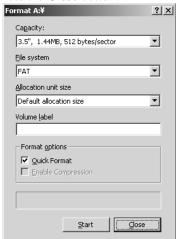


 15) Copying File.




Page 7 of 14 E5070A-06B

 
16) Insert the second disk into your PC's FDD, and press **OK** button..



17) Press the **Start** button.

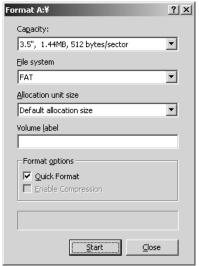

 18) Press the **OK** button.



19) Press the **OK** button.

 


20) Press the **Close** button.




Page 8 of 14 E5070A-06B

21) Copying File.



22) Press the **Finish** button.

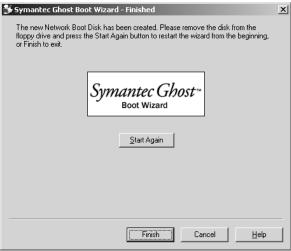

#### 2. Replace the defective HDD with the new HDD(p/n 04287-65000).

1) Replace the defective HDD with the new HDD (p/n 04287-65000). Refer to "A27 Mass Storage Disk Drive Replacement" of the E5070A/71A service guide.

#### 3. Connect the E5070A to your PC installed Symantec Ghost directly


1) Connect the E5070A to your PC installed Symantec Ghost directly using a crossed LAN cable (or two straight LAN cables and a Hab for LAN).

Page 9 of 14 E5070A-06B


#### 4. Set up your PC's IP address and subnet mask

1) Double-click "My Computer" icon on Windows desktop of your PC. And double-click Control Panel. The Control Panel window will appear.

2) In the Control Panel window, double-click Network and..., and click Local Area Connection.

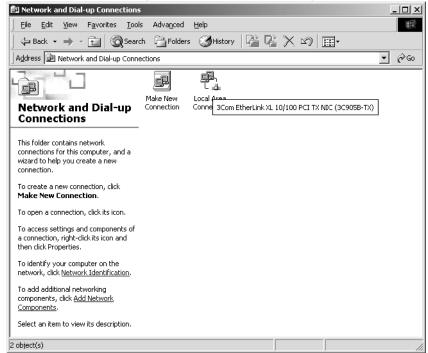


3) Press the **Properties** button.

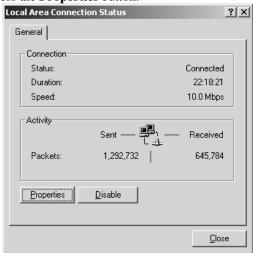


Page 10 of 14 E5070A-06B

4) Select TCP/IP and press the Properties button.

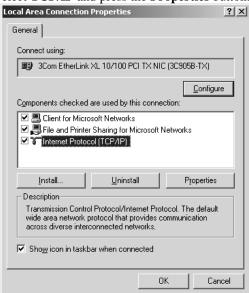

5) Select **Use the following IP address**, and then enter the IP address 192.168.0.2 and subnet mask 255.255.255.0. Press the **OK** button.

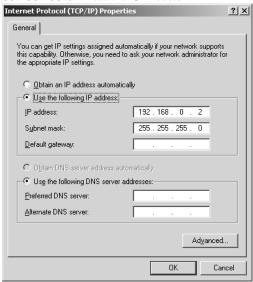


6) Restart your PC.

Page 11 of 14 E5070A-06B


#### 5. Set up GhostCastServer

1) Insert the DVD disk (Operating System for E5070A/71A) into your PC's DVD drive (or an external DVD drive). Then copy the image file of the DVD disk onto your PC's HDD (C drive) as a temporary image file.

- $2) \ Click \ Start-Programs-Symantec \ Ghost-GhostCastServer.$
- 3) Click the **Browse** button.

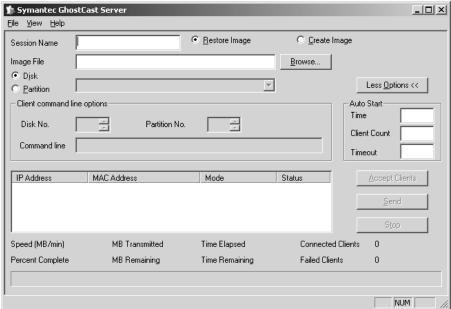

4) If Insert disk dialog box is displayed, click the Cancel button.

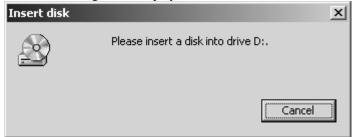


5) Select the temporary image file you copied, and press the **Open** button.




Page 12 of 14 E5070A-06B

6) Enter session name kobe and client count 1. Then select Restore Image and Disk

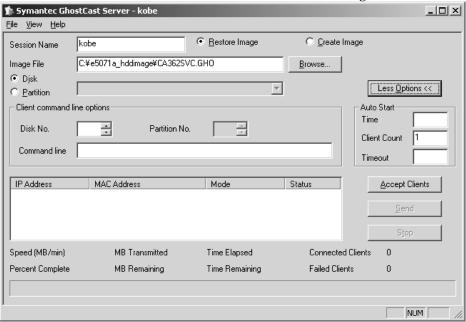

7) Click the **Accept Client**. Then, a message of "Waiting for client to connect..." is displayed.

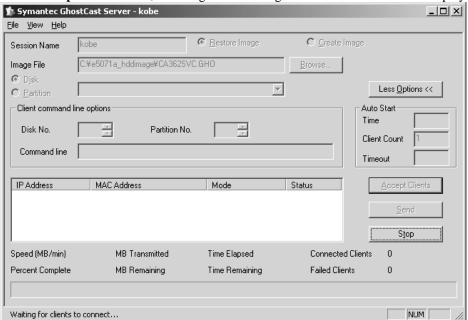


Page 13 of 14 E5070A-06B

6. Copy the image file onto the E5070A's HDD, by using the ghost boot disks. ENA BIOS options need to be changed to use the boot disks. Then, after the copy, the BIOS options need to be returned.

- 1) Connect the external keyboard and mouse to the connectors on the E5070A rear panel.
- 2) Turn the instrument on.
  - Press **Delete** key as soon as the message of "**Hit DEL if you want to run SETUP**" is displayed. Wait a few seconds until a message of "**Enter CURRENT Password**:" appears.
- 3) Press **Num Lock** key, and then enter password "**e507xa**" and press **Enter** key. Then BIOS setup utility main menu is displayed.
- 4) Select Advanced CMOS Setup, and press Enter key. Then Advanced CMOS setup window is displayed.
- 5) Change the 1st Boot Devices status from 1st IDE-HDD to Floppy, and press ESC key.
- 6) Select **Save settings and Exit**, and press **Enter** key. Then a message of "Save current setting and exit (Y/N)?" is displayed. Press **Y** and **Enter** key.
- 7) The E5070A is restarted. Then, a message of "Drive Not Ready. Insert BOOT diskette in A:. Press any key when ready." is displayed.
- 8) Insert the ghost boot disk (1<sup>st</sup> disk) into the FDD of the E5070A, and press **Enter** key.
- 9) PC DOS 7.1 Startup Menu is displayed. Then, select 1 and press Enter key.
- 10) Confirm that there are no error messages on the display.
- 11) A message of "Insert Ghost boot disk 2 (containing Ghost.exe). Press any key to continue.." is displayed. Then, insert the disk 2 into the FDD, and press Enter key.
- 12) **About Symantec Ghost** dialog box is displayed. Then, click the **OK** button.
- 13) Click Ghost Cast Unicast.
- 14) **GhostCast Session Name to Join** dialog box is displayed. Enter the session name **kobe**, select Server IP Address and enter the IP address **192.168.0.2**. Then, click the **OK** button.
- 15) **Select local destination drive by clicking on the driver number** dialog box is displayed. Then, click the **OK** button.
- 16) **Destination Drive Details** dialog box is displayed. Confirm that New Size and Old Size of each Label is as follows. Then, click the **OK** button.

| Label      | New Size | Old Size |
|------------|----------|----------|
| HOST FOR C | 1404     | 1404     |
| USER       | 3004     | 3004     |
| RECOVERY   | 705      | 705      |
| SWAP       | 4471     | 4471     |

- 17) **Question:** (LB22) dialog box is displayed. Then, click the Yes button.
- 18) **Progress Indicator** dialog box appears.
- 19) In your PC, a message of "GhostCast in progress.." is displayed.

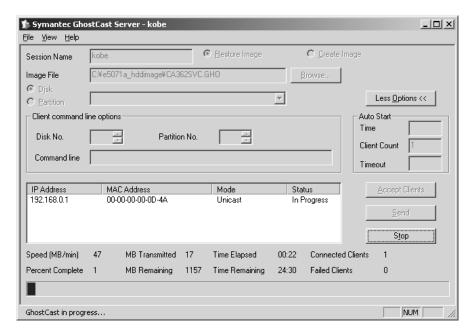

- 20) In E5070A display, Clone Complete dialog box is displayed. Then, click the Continue button and Quit.
- 21) Quit Symantec Ghost dialog box is displayed. Then, click the Yes button.

Page 14 of 14 E5070A-06B

- 22) **A:\GHOST>** prompt is displayed. Then, turn the E5070A off.
- 23) In your PC, **Transfer Complete** is displayed. Then, click the **OK** button.



- 24) Remove the boot disk from the E5070A's FDD.
- 25) Turn the E5070A on.

Press **Delete** key as soon as the message of "**Hit DEL if you want to run SETUP**" is displayed. Wait a few seconds until a message of "**Enter CURRENT Password**:" appears.

- 26) Press **Num Lock** key, and then enter password "**e507xa**" and press **Enter** key. Then BIOS setup utility main menu is displayed.
- 27) Select Advanced CMOS Setup, and press Enter key. Then Advanced CMOS setup window is displayed.
- 28) Change the 1st Boot Devices status from Floppy to 1st IDE-HDD, and press ESC key.
- 29) Select **Save settings and Exit**, and press **Enter** key. Then a message of "Save current setting and exit (Y/N)?" is displayed. Press **Y** and **Enter** key.
- 30) The E5070A is restarted.
- 31) Confirm that the firmware revision Rev. A.03.62 is displayed.
- 32) The measurement view is displayed, and a message of "Calibration data lost (band information)" is displayed. Then, turn the E5070A off.

#### 7. Perform initial setting for E5071A

- 1) Disconnect the LAN cable from the E5070A.
- 2) Turn the E5070A ON.
- 3) Perform the system recovery, referring to the appendix B of the E5070A service manual.
- 4) Install the power-on test limit file and the internal test file rev A.05.00 or later.
  - a) Down load the following files from the E5070A firmware rev 3.62 download web site and save them in a floppy disk.

Power-on test limit file: PowerOnTest.csv

Internal test file: InternalTest.VBA

- b) Copy the files from the floppy disk to the directory D:\Agilent\Service of the E5070A. (Windows Explorer can be opened, by pressing [Save/Recall] hardkey then "Explorer" softkey.)
- 5) Turn the E5070A off.
- 6) Connect the E5070A to your PC equipped with the E5070/71A adjustment program with a GPIB cable.
- 7) Turn the E5070A and the PC on.
- 8) Perform "HDD" in Spot Adjustment of the E5070/71A adjustment program.
- 9) Calibrate the touch screen (for option 016 only).