

Agilent N8262A P-Series Modular Power Meter

Service Guide



Agilent Technologies

Notices

© Agilent Technologies, Inc. 2007

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

N8262-90004

Edition

First Edition, May 4, 2007

Printed in Malaysia

Agilent Technologies, Inc.
3501 Stevens Creek Blvd.
Santa Clara, CA 95052 USA

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

U.S. Government Restricted Rights. Software and technical data rights granted to the federal government include only those rights customarily provided to end user customers. Agilent provides this customary commercial license in Software and technical data pursuant to FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for the Department of Defense, DFARS 252.227-7015 (Technical Data - Commercial Items) and DFARS 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation).

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Certification

Agilent Technologies certifies that this product met its published specifications at the time of shipment. Agilent further certifies that its calibration measurements are traceable to the United States National Institute of Standard and Technology (formerly National Bureau of Standards), to the extent allowed by that organization's calibration facility, and to the calibration facilities of other International Standards Organization members.

Limitation of Warranty

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the Buyer, Buyer-supplied products or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

The design and implementation of any circuit on this product is the sole responsibility of the Buyer. Agilent does not warrant the Buyer's circuitry or malfunctions of Agilent products that result from the Buyer's circuitry. In addition, Agilent does not warrant any damage that occurs as a result of the Buyer's circuit or any defects that result from Buyer-supplied products.

To the extent allowed by local law, Agilent makes no other warranty, expressed or implied, whether written or oral with respect to this product and specifically disclaims any implied warranty or condition of merchantability, fitness for a particular purpose or satisfactory quality.

Exclusive Remedies

To the extent allowed by local law, the remedies provided herein are the Buyer's sole and exclusive remedies. Agilent shall not be liable for any direct, indirect, special, incidental, or consequential damages (including lost profit or data), whether based on warranty, contract, tort, or any other legal theory.

Safety Summary

The following general safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Agilent Technologies, Inc. assumes no liability for the customer's failure to comply with these requirements.

Safety Notices

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or loss of life. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

Safety Symbols

The following symbol on the instrument and in the documentation indicates precautions that must be taken to maintain safe operation of the instrument.



Caution, risk of danger.

The Instruction Documentation Symbol. The product is marked with this symbol when it is necessary for the user to refer to the instructions in the supplied documentation.



Alternating current (AC).



This symbol indicates the operating switch for 'Stand-by' mode. Note, the instrument is NOT isolated from the mains when the switch is pressed.

To isolate the instrument, the mains coupler (mains input cord) should be removed from the power supply.



 
Direct current (DC).



Both direct and alternating current.



 
Three-phase alternating current.



Earth (ground) TERMINAL.



PROTECTIVE CONDUCTOR TERMINAL.



 
Frame or chassis TERMINAL.



 
Equipotentiality.



On (Supply).



Off (Supply).



Equipment protected throughout by DOUBLE INSULATION or REINFORCED INSULATION.



Caution, risk of electric shock.



Caution, hot surface.



In position of bi-stable push control.



Out position of bi-stable push control.

Regulatory Markings



The CE mark shows that the product complies with all the relevant European legal Directives (if accompanied by a year, it signifies when the design was proven).



The CSA mark is a registered trademark of the Canadian Standards Association. A CSA mark with the indicators "C" and "US" means that the product is certified for both the U.S. and Canadian markets, to the applicable American and Canadian standards.



The C-tick mark is a registered trademark of the Spectrum management Agency of Australia. This signifies compliance with the Australian EMC Framework regulations under the terms of the Radio Communications Act of 1992.



This product complies with the WEEE Directive (2002/96/EC) marking equipment. The affixed product label indicates that you must not discard this electrical/electronic product in domestic household waste.

ICES/NMB - 001

This ISM device complies with the Canadian ICES-001

General Safety Information

This is a Safety Class I instrument (provided with a protective earthing ground, incorporated in the power cord). The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor inside or outside of the instrument is likely to make the instrument dangerous. Intentional interruption is prohibited.

WARNING

- **DO NOT operate the product in an explosive atmosphere or in the presence of flammable gasses or fumes.**
- **DO NOT use repaired fuses or short-circuited fuseholders: For continued protection against fire, replace the line fuse(s) only with fuse(s) of the same voltage and current rating and type.**
- **DO NOT perform procedures involving cover or shield removal unless you are qualified to do so: Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers and shields are for use by service-trained personnel only.**
- **DO NOT service or adjust alone: Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, service personnel must not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.**
- **DO NOT operate damaged equipment: Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to a Agilent Technologies Sales and Service Office for service and repair to ensure the safety features are maintained.**
- **DO NOT substitute parts or modify equipment: Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the product. Return the product to a Agilent Technologies Sales and Service Office for service and repair to ensure the safety features are maintained.**

CAUTION

- Applying excessive voltage or overloading the device will cause irreversible damage to the circuitry.
 - Use the device with the cables provided.
-

General Safety Considerations

The following general safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Agilent Technologies, Inc. assumes no liability for the customer's failure to comply with these requirements.

WARNING

- **Before this instrument is switched on, make sure it has been properly grounded through the protective conductor of the ac power cable to a socket outlet provided with protective earth contact. Any interruption of the protective (grounding) conductor, inside or outside the instrument, or disconnection of the protective earth terminal can result in personal injury.**
-

CAUTION

- Any adjustments or service procedures that require operation of the instrument with protective covers removed should be performed only by trained service personnel.
-

Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC

This instruction complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical/electronic product in domestic household waste.

Product Category:

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a "Monitoring and Control Instrument" product.

The affixed product label is shown as below:



Do not dispose in domestic household waste

To return this unwanted instrument, contact your nearest Agilent office, or visit

www.agilent.com/environment/product

for more information.

In This Guide ...

- 1 Specifications** Chapter 1 lists the power meter's specifications and describes how to interpret these specifications.
- 2 Performance Tests** Chapter 2 contains procedures which allow you to test the power meter's electrical performance to its specifications.
- 3 Adjustments** Chapter 3 contains checks and adjustments that ensure proper performance of the power meter.
- 4 Theory of Operation** Chapter 4 describes how each of the power meter's individual assemblies operate.
- 5 Troubleshooting Guide** Chapter 5 contains troubleshooting flow charts designed to isolate faults in the Rmt I/O, LAN and RS232/422 interface ports.
- 6 Repair Guide** Chapter 6 details the power meter's replaceable parts. It also explains how to assemble and disassemble the power meter.
- 7 Contacting Agilent Technologies** Chapter 7 details what to do if you have a problem with your power meter.

Contents

Notices	ii
Certification	iii
Limitation of Warranty	iii
Exclusive Remedies	iii
Safety Summary	iv
Safety Notices	iv
Safety Symbols	v
Regulatory Markings	viii
General Safety Information	ix
General Safety Considerations	xi
Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC	xii
In This Guide ...	xiii

1 Specifications

Introduction	6
Specification Definitions	7
General Features	9
P-Series Modular Power Meter and Sensor	10
P-Series Modular Power Meter Specifications	12
P-Series Wideband Power Sensor Specifications	14
Sensor Calibration Uncertainty ⁹	15
1 mW Power Reference	16
System Specifications and Characteristics	20
Characteristics Peak Flatness	21

2 Performance Tests

Introduction	24
Complete Equipment List	25
1 mW Power Reference Level Test	27
Output Standing Wave Ratio (SWR) Test	29
Time Base Frequency Accuracy	31
Zero Set (Average Path)	32

Zero Set (Peak Path)	33
Linearity (Average Path)	34
Linearity (Peak Path)	35
Rise/Fall Time (Peak Path)	36

3 Adjustments

Introduction	40
Power Reference Level Adjustment	41

4 Theory of Operation

PPMC Assembly	44
Mother Board Assembly	45
Measurement Board Assembly	46
Calibrator Assembly	47
Front Panel Assembly	48
PSU Assembly	49

5 Troubleshooting Guide

Introduction	52
Power-Up Problems	53
Instrument Self-Test	54
Extended Self-Test	56
Performance Test	57
Power Reference Level Adjustment Problems	58
Communication Interface Failures	59
Additional Diagnostic Tests	60

6 Repair Guide

Introduction	62
Replaceable Parts	63
Required Torque Values for Fasteners	70
Disassembly Instructions	71
Reassembly Instructions	93
Additional Repair Notes	95

Replacing the PPMC Assembly 96

7 Contacting Agilent Technologies

Introduction 98

Before Calling Agilent Technologies 99

Check the Basics 100

Instrument Serial Numbers 101

Agilent Sales and Service Offices 102

Returning Your Power Meter for Service 103

Useful Web Pages 104



1 Specifications

Introduction	6
Specification Definitions	7
General Features	9
P-Series Modular Power Meter and Sensor	10
P-Series Modular Power Meter Specifications	12
P-Series Wideband Power Sensor Specifications	14
Sensor Calibration Uncertainty ⁹	15
1 mW Power Reference	16
System Specifications and Characteristics	20
Characteristics Peak Flatness	21

This chapter lists the power meter's specifications and describes how to interpret these specifications.



Introduction

This chapter details the power meter's specifications and supplemental characteristics

Specifications describe the warranted performance and apply after a 30 minute warm-up. These specifications are valid over the power meter's operating and environmental range unless otherwise stated and after performing a zero and calibration.

Supplemental characteristics, which are shown in *italics*, are intended to provide information useful in applying the power meter by giving typical, but non warranted performance parameters. These characteristics are shown in italics or denoted as "attributes", "nominal" or "approximate".

For information on measurement uncertainty calculations, refer to Agilent Application Note 64- 1A, "Fundamentals of RF and Microwave Power Measurements", Literature 5965- 6630.

Specification Definitions

There are two types of product specifications:

Warranted specifications are specifications which are covered by the product warranty and apply over 0 to 55½ °C unless otherwise noted. Warranted specifications include measurement uncertainty calculated with a 95 % confidence.

Characteristic specifications are specifications that are not warranted. They describe product performance that is useful in the application of the product. These characteristic specifications are shown in *italics*.

Characteristic information is representative of the product. In many cases, it may also be supplemental to a warranted specification. Characteristic specifications are not verified on all units. There are several types of characteristic specifications. These types can be placed in two groups:

One group of characteristic types describes ‘attributes’ common to all products of a given model or option. Examples of characteristics that describe ‘attributes’ are product weight, and 50 Ω input Type- N connector. In these examples product weight is an ‘approximate’ value and a 50ohm input is ‘nominal’. These two terms are most widely used when describing a product’s ‘attributes’.

The second group describes ‘statistically’ the aggregate performance of the population of products.

These characteristics describe the expected behavior of the population of products. They do not guarantee the performance of any individual product. No measurement uncertainty value is accounted for in the specification. These specifications are referred to as ‘typical’.

Conditions

The power meter and sensor will meet its specifications when:

- stored for a minimum of two hours at a stable temperature within the operating temperature range, and turned on for at least 30 minutes
- the power meter and sensor are within their recommended calibration period, and
- used in accordance to the information provided in the *N8262A P-Series Modular Power Meter User's Guide*.

General Features

Number of channels	Dual channel
Frequency range	N1921A P-Series Wideband Power Sensor, 50 MHz to 18 GHz N1922A P-Series Wideband Power Sensor, 50 MHz to 40 GHz
Measurements	Average, peak and peak-to-average ratio power measurements are provided with free-run or time gate definition. Time parameter measurements of pulse rise time, fall time, pulse width, time to positive occurrence and time to negative occurrence are also provided.
Sensor compatibility	P-Series modular power meter is compatible with all Agilent P-Series wideband power sensors, E-Series sensors (except E9320 range) and 8480 Series power sensor ¹ .

¹ Information contained in this document refers to operation with P-Series Sensors. For specifications when used with 8480 and E-Series Sensors (E4410 and E9300 range), refer to Lit Number 5965-6382E.

P-Series Modular Power Meter and Sensor

Key System Specifications and Characteristics

Maximum sampling rate	100 Msamples/sec, continuous sampling
Video bandwidth	≥ 30 MHz
Single shot bandwidth	≥ 30 MHz
Rise time and fall time	≤ 13 ns (for frequencies ≥ 500 MHz) ³ , see Figure 1
Minimum pulse width	50 ns ⁴
Overshoot	≤ 5 % ³
Average power measurement accuracy	N1921A: ≤ ± 0.2 dB or ± 4.5 % ⁵ N1922A: ≤ ± 0.3 dB or ± 6.7 %
Dynamic range	–35 dBm to +20 dBm (> 500 MHz) –30 dBm to +20 dBm (50 MHz to 500 MHz)
Maximum capture length	1 second
Maximum pulse repetition rate	10 MHz (based on 10 samples per period)

³ Specification applies only when the Off video bandwidth is selected.

⁴ The Minimum Pulse Width is the recommended minimum pulse width viewable on the power meter, where power measurements are meaningful and accurate, but not warranted.

⁵ Specification is valid over –15 to +12 dBm, and a frequency range 0.5 to 10 GHz, DUT Max. SWR < 1.27 for the N1921A, and a frequency range 0.5 to 40 GHz, DUT Max. SWR < 1.2 for the N1922A. Averaging set to 32, in Free Run mode.

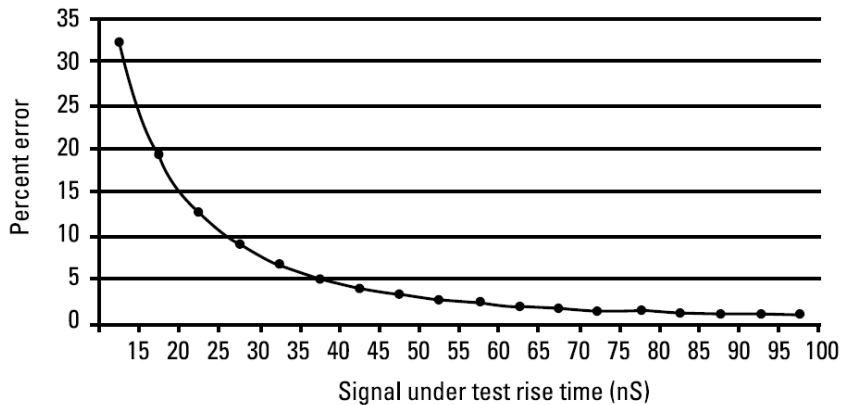


Figure 1 Measured rise time percentage error versus signal under test rise time

Although the rise time specification is ≤ 13 ns, this does not mean that the P-Series modular power meter and sensors combination can accurately measure a signal with a known rise time of 13 ns. The Measured rise time is the root sum of the squares (RSS) of the signal under test rise time and the system rise time (13 ns):

Measured rise time = $\sqrt{((\text{signal under test rise time})^2 + (\text{system rise time})^2)}$, and the % error is:

% Error = $((\text{measured rise time} - \text{signal under test rise time}) / \text{signal under test rise time}) \times 100$

P-Series Modular Power Meter Specifications

Meter uncertainty

Instrumentation linearity	$\pm 0.8\%$
---------------------------	-------------

Timebase

Timebase range	<i>2 ns to 100 msec/div</i>
Accuracy	± 10 ppm
Jitter	≤ 1 ns

Trigger

Internal trigger

Range	-20 to $+20$ dBm
Resolution	0.1 dB
Level accuracy	± 0.5 dB
Latency ⁶	160 ns ± 10 ns
Jitter	≤ 5 ns rms

External TTL trigger input

High	> 2.4 V
Low	< 0.7 V
Latency ⁷	90 ns ± 10 ns
Minimum trigger pulse width	15 ns
Minimum trigger repetition period	50 ns
Impedance	$50\ \Omega$
Jitter	≤ 5 ns rms

External TTL trigger output

	Low to high transition on trigger event.
High	> 2.4 V
Low	< 0.7 V
Latency ⁸	30 ns ± 10 ns
Impedance	$50\ \Omega$
Jitter	≤ 5 ns rms

*Trigger delay*Delay range ± 1.0 s, maximum

Delay resolution 1% of delay setting, 10 ns maximum

*Trigger hold-off*Range 1 μ s to 400 ns

Resolution 1% of selected value (to a minimum of 10 ns)

*Trigger level threshold hysteresis*Range ± 3 dBResolution 0.05 dB

⁶ Internal trigger latency is defined as the delay between the applied RF crossing the trigger level and the meter switching into the triggered state.

⁷ External trigger latency is defined as the delay between the applied trigger crossing the trigger level and the meter switching into the triggered state.

⁸ External trigger output latency is defined as the delay between the meter entering the triggered state and the output signal switching.

P-Series Wideband Power Sensor Specifications

The P-Series wideband power sensors are designed for use with the P-Series power sensor only.

Sensor model	Frequency range	Dynamic range	Damage level	Connector type
N1921A	50 MHz to 18 GHz	-35 dBm to +20 dBm (500 MHz)	+23 dBm (average power); +30 dBm (<1 μs duration)(peak power)	Type N (m)
N1922A	50 MHz to 40 GHz	35 dBm to +20 dBm (500 MHz)	-30 dBm to +20 dBm (50 MHz to 500 MHz)	2.4mm (m)

Maximum SWR

Frequency band	N1921A/N1922A
50 MHz to 10 GHz	1.2
10 GHz to 18 GHz	1.26
18 GHz to 26.5 GHz	1.3
26.5 GHz to 40 GHz	1.5

Sensor Calibration Uncertainty⁹

Definition: Uncertainty resulting from non-linearity in the sensor detection and correction process. This can be considered as a combination of traditional linearity, cal factor and temperature specifications and the uncertainty associated with the internal calibration process.

⁹ Beyond 70 % Humidity, and additional 0.6 % should be added to these values.

Frequency band	N1921A	N1922A
50 MHz to 500 MHz	4.5 %	4.3 %
500 MHz to 1 GHz	4.0 %	4.2 %
1 GHz to 10 GHz	4.0 %	4.4 %
10 GHz to 18 GHz	5.0 %	4.7 %
18 GHz to 26.5 GHz	5.9 %	
26.5 GHz to 40 GHz	6.0 %	

Physical characteristics

Dimensions <i>(Length x Width x Height)</i>	N1921A N1922A	<i>135 mm x 40 mm x 27mm</i> <i>127 mm x 40 mm x 27 mm</i>
Weights with cable	Option 105 Option 106 Option 107	<i>0.4 kg</i> <i>0.6 kg</i> <i>1.4 kg</i>
Fixed sensor cable lengths	Standard Option 106 Option 107	<i>1.5 m (5-feet)</i> <i>3.0 m (10-feet)</i> <i>10 m (31-feet)</i>

1 mW Power Reference

NOTE

The 1 mW power reference is provided for calibration of E-Series (E4410 and E9300) and 8480 Series Sensors. The P-Series sensors are automatically calibrated do not need this reference calibration.

Power output	1.00 mW (0.0 dBm). Factory set $\pm 0.4\%$ traceable to the National Physical Laborator (NPL) UK
Accuracy (over 2 years)	$\pm 1.2\%$ (0 to 55 °C) $\pm 0.4\%$ (25 to 10 °C)
Frequency	50 MHz nominal
SWR	1.08 (0 to 55 °C) <i>1.05 typical</i>
Connector type	Type N (f), 50 Ω

Front panel inputs/outputs

Recorder outputs ¹⁰	Analog 0-1 Volt, 1 k Ω output impedance, SMB connector. There are two recorder outputs with SMB connector.
Trigger input	Input has TTL compatible logic levels and uses a SMB connector.
Trigger output	Output provides TTL compatible logic levels and uses a SMB connector.

¹⁰Two recorder outputs are available on the N8262A P-Series modular power meter.

Rear panel inputs/outputs

10/100 BaseT LAN	Interface allow communication with an external controller.
Ground	Binding post, accepts 4 mm plug or bare-wire connection.
Line power	
<ul style="list-style-type: none"> • Input voltage range 	100 – 120 V \pm 10 % 220 – 240 V \pm 10 %
<ul style="list-style-type: none"> • Input frequency range 	50 – 60 Hz \pm 10 % (all voltages) 400 – 440 Hz \pm 10 % (100 – 120 V)
<ul style="list-style-type: none"> • Power requirement 	50 VA (30 Watts) not exceeding 75 VA (50 Watts)

WARNING

A 3 kV, 100 kHz transient in the power line may cause the instrument to reset.

Remote Programming

Interface	10/100 BaseT LAN interface
Command language	SCPI standard interface commands

Measurement Speed

Measurement speed via remote interface ≥ 1500 readings per second

Regulatory Information

Electromagnetic compatibility	Complies with the requirements of the EMC Directive 89/336/EEC
<ul style="list-style-type: none"> Product safety 	Conforms to the following product specifications: <ul style="list-style-type: none"> EN61010-1: 2001/IEC 1010-1:2001 EN 55011:1991 EN 55011:1991 IEC 61326-1:1997+A1:1998/EN 61326-1:1997+A1:1998 CISPR 11:1990/EN 55011:1991 Canada: CSA C22.2 No. 61010- 1:2004 USA: UL: 61010- 1:2004

Physical Characteristics

Dimensions	The following dimensions exclude front and rear panel protrusions: 44.2 mm H x 212.6 mm W x 420.3 mm D (1.75 in x 8.5 in x 19.63 in)
Net weight	≤ 3.5 kg (7.7lb) approximately
Shipping weight	≤ 7.7 kg (17.0 lb) approximately

Environmental Conditions

<i>General</i>	Complies with the requirement of the EMC Directive 89/336/EEC.
<i>Operating</i>	
Temperature	0 ° C to 55 ° C
Maximum humidity	95 % at 40 ° C (non-condensing)
Minimum humidity	15 % at 40 ° C (non-condensing)
Maximum altitude	3.000 meters (9,840 feet)
<i>Storage</i>	
Non-operating storage temperature	-30 ° C to +70 ° C
Non-operating maximum humidity	90 % at 65 ° C (non-condensing)
Non-operating altitude	15,420 meters (50,000 feet)

System Specifications and Characteristics

The video bandwidth in the meter can be set to High, Medium, Low and Off. The video bandwidths stated in the table below are not the 3 dB bandwidths, as the video bandwidths are corrected for optimal flatness (except the Off filter). Refer to [Figure 2](#) for information on the flatness response. The Off video bandwidth setting provides the warranted rise time and fall time specification and is the recommended setting for minimizing overshoot on pulse signals.

Dynamic response - rise time, fall time, and overshoot versus video bandwidth settings

Parameter	Video bandwidth setting				
	Low: 5MHz	Medium: 15 MHz	High: 30 MHz	< 500 MHz	> 500 MHz
Rise time/fall time ¹¹	< 56 ns	< 25 ns	< 13 ns	< 36 ns	< 13 ns
Overshoot ¹²				< 5 %	< 5 %

For option 107 (10 m cable), add 5 ns to the rise time and fall time specifications.

¹¹ Specified as 10 % to 90 % for rise time and 90 % to 10 % for fall time on a 0 dBm pulse.

¹² Specified as the overshoot relative to the settled pulse top power.

Characteristics Peak Flatness

The peak flatness is the flatness of a peak-to-average ratio measurement for various tone-separations for an equal magnitude two-tone RF input. Figure 2 refers to the relative error in peak-to-average ratio measurements as the tone separation is varied. The measurements were performed at -10 dBm with power sensors with 1.5 m cable lengths.

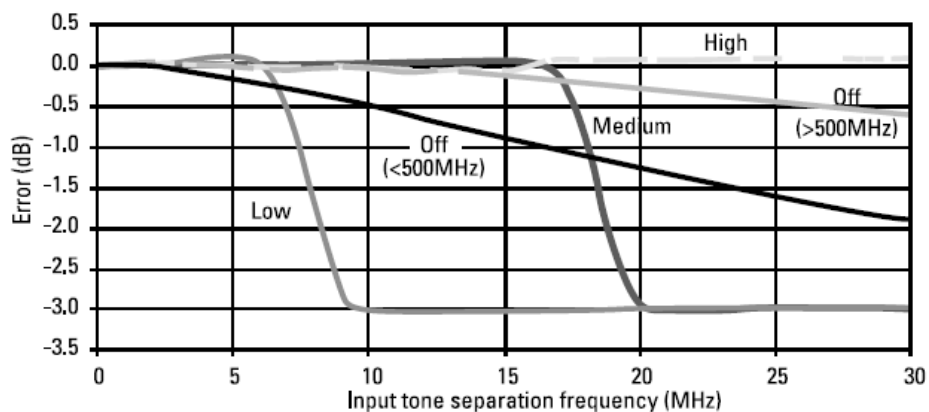


Figure 2 N192XA Error in peak-to-average measurements for a two-tone input (High, Medium, Low and Off filters)

Noise and drift

Sensor Model	Zeroing	Zero set		Zero drift ¹³	Noise per sample	Measurement noise (Free run) ¹⁴
		< 500 MHz	> 500 MHz			
N1921A/ N1922A	No RF on input	200 nW		100 nW	2 μW	50 nW
	RF present	550 nW	200 nW			

¹³ Within 1 hour after a zero, at a constant temperature, after 24 hour warm up of the power meter. This component can be disregarded with Auto zero mode set to ON.

¹⁴ Measured over a one minute interval, at a constant temperature, two standard deviations, with averaging set to 1.

Measurement average setting	1	2	4	8	16	32	64	128	256	512	1024
Free run noise multiplier	1	0.9	0.8	0.7	0.6	0.5	0.45	0.4	0.3	0.25	0.2

Video BW setting		Low 5 MHz	Medium 15 MHz	High 30 MHz	Off
Noise per sample multiplier	< 500 MHz	0.5	1	2	1
	> 500 MHz	0.45	0.75	1.1	1

Effect of video bandwidth setting

The noise per sample is reduced by applying the meter video bandwidth filter setting (High, Medium or Low). If averaging is implemented, this will dominate any effect of changing the video bandwidth.

Effect of time-gating on measurement

The measurement noise on a time-gated measurement will depend on the time gate length. 100 averages are carried out every 1 μs of gate length. The Noise per Sample contribution in this mode can approximately be reduced by $\sqrt{\text{gate length} / 10 \text{ ns}}$ to a limit of 50 nW.



2 Performance Tests

Introduction	24
Complete Equipment List	25
1 mW Power Reference Level Test	27
Output Standing Wave Ratio (SWR) Test	29
Time Base Frequency Accuracy	31
Zero Set (Average Path)	32
Zero Set (Peak Path)	33
Linearity (Average Path)	34
Linearity (Peak Path)	35
Rise/Fall Time (Peak Path)	36

This chapter contains procedures which allow you to test the power meter's electrical performance to its specifications.



Introduction

The performance tests described in this chapter test the power meter's electrical performance against the specifications detailed in [Chapter 1](#). They are used for incoming inspection, the calibration cycle (also called periodic maintenance), or after repairs have been made.

NOTE

- This document does not provide a complete breakdown for these tests; it only gives a brief overview of each, in line with Agilent's recommendation that the Agilent N7832A calibration software should be used at all times.
 - Performance Testing is limited to the measurement and verification of warranted specifications.
 - Some tests cannot be performed manually, and so the N7832A calibration software is essential.
 - Measurement uncertainty will not be addressed in this document (this is handled by the N7832A software).
-

The following performance tests are described in this chapter:

- [1 mW Power Reference Level Test](#)
- [Output Standing Wave Ratio \(SWR\) Test](#) (Power Reference Output)
- [Time Base Frequency Accuracy](#)
- [Zero Set \(Average Path\)](#)
- [Zero Set \(Peak Path\)](#)
- [Linearity \(Average Path\)](#)
- [Linearity \(Peak Path\)](#)
- [Rise/Fall Time \(Peak Path\)](#)

Complete Equipment List

Instrument	Critical Specifications	Recommended Agilent Model Number	Alternative Agilent Model Number
Analyzers			
Network Analyzer		N3383A	N3381A N3382A 8753ES/ET
Counters			
Universal Counter	Frequency: 10 MHz Gate time: 10 seconds	53132A	53131A
Meters			
Power Meter	Dual Channel Absolute Accuracy: $\pm 0.5\%$ Power Reference Accuracy: $\pm 0.9\%$ - (a best capability measurement is required for the Power Reference Output - the power level must be accurately measured, and the uncertainty of this measurement must also be known)	E4419B	E4419A
Power Sensor 2 required	Frequency: 50 MHz Amplitude Range: -70 dBm to -20 dBm SWR: ≤ 1.15 at 50 MHz	8481D	
Power Sensor	Frequency: 50 MHz Amplitude Range: -30 dBm to $+20$ dBm SWR: ≤ 1.1 at 50 MHz	8482A	
Attenuators			
20 dB Fixed Attenuator	Type-N(m,f)	8491A (Option 020)	
30 dB Fixed Attenuator	Type-N(m,f)	11708A	
Miscellaneous Devices			
10 MHz Frequency Standard			

2 Performance Tests

Pulse/Data Generator 81131A Output Modules required		81130A	
Power Splitter required	Frequency: DC to 6 GHz Insertion Loss: 6 to 7 dB, \leq 3 GHz SWR: <ul style="list-style-type: none"> < 1.1 10 MHz to 2 GHz < 1.3 2 GHz to 3 GHz 	11667A (Option 001)	
SMB(f) to BNC(m) cable	Frequency: DC to 10 GHz 50 Ω Coax 120 cm (48 in)		
Calibration Test Cable		N1912-61017	
Sensor cable required		11730A	
N-Type Calibration Kit		85032B	
Assorted accessories (cables and adapters) required			

1 mW Power Reference Level Test

Description

The 1 mW Power Reference is used for the calibration of 8480 Series & E- Series power sensors, and is traceable to national standards. This test uses an 8482A power sensor to transfer the power measured on an accurately calibrated E4419B or E4417A power meter to the DUT reference.

Equipment

Required test equipment: 1 unit of E4419B or E4417A dual channel power meter, 1 unit of 8482A power sensor. Either of these E4419B or E4417A power meters can be used. This specific power sensor model must be used.

Test Method

- 1 Enter the recorded measurement uncertainty of the E4419B or E4417A 1 mW Power Reference
- 2 Using the E4419B or E4417A power meter and the 8482A sensor, measure the 1mW Power Reference of the E4419B or E4417A
- 3 Using the E4419B or E4417A power meter and the 8482A sensor, measure the 1 mW Power Reference of the DUT
- 4 Using all of these values, the N7832A software will calculate the Power Reference Level of the DUT

2 Performance Tests

NOTE

- The 1 mW reference of the E4419B or E4417A power meter must be precisely calibrated at a standards accredited lab, and the uncertainty of this measurement known.
 - Anyone who has a basic understanding of metrology should be able to perform this test manually; it is simply the transfer of known power level with a known calibration uncertainty to the DUT.
 - An adjustment is available for this test if it fails (see [Chapter 3](#), “Adjustments”).
-

Output Standing Wave Ratio (SWR) Test

Description

Connector mismatch is the largest single contributor to measurement uncertainty, so this specification must be warranted to provide assurance of instrument accuracy. The 1 mW Power Reference Level test must be carried out prior to this test, as the VSWR specification is only valid at 1 mW. This test measures VSWR by equating relative powers (measured by the test system power meter and its sensors) when the power reference is exercised under different load conditions.

Equipment

- Required test equipment:
 - 1 unit of 8753ES/ ET network analyzer
 - 1 unit of 85032B Type N calibration kit
 - 1 unit of E4419B or E4417A dual channel power meter
 - 2 unit of 8481D power sensor
 - 2 unit of 11667A #001 power splitter
 - 1 unit of 20dB pad, Male to Female (e. g. 8491A)
 - 1 unit of 30dB pad (e. g. 11708A Reference Attenuator)
- An alternative network analyzer can be used, as long as it can measure S11 in the 45 MHz - 55 MHz range
- Either of these E4419B or E4417A power meters can be used
- These specific models of power sensors and power splitters must be used
- Any type of pad can be used (as long as there are no additional mating connections, or differing pad values)
- 1 unit of 11667A, 1 unit of 8481D and the 30 dB pad combine to create the 'Calibration System'
- 1 unit of 11667A, 1 unit of 8481D and the 20 dB pad combine to create the 'Measurement System'

Test Method

- 1 Obtain the S11 parameter of the Calibration System.
- 2 Connect the Measurement System to the Calibration System and obtain its S21 (load) & S21 (open) parameters.
- 3 Using only the Measurement System, terminated with the OPEN connector from the 85032B calibration kit, measure the 1 mW Power Reference Level of the DUT.
- 4 Remove the OPEN connector from the Measurement System, terminate it with the 50 R load from the 85032B calibration kit, and repeat the 1 mW Power Reference Level measurement.
- 5 Using all of these values, the N7832A software will calculate the VSWR of the Power Reference Output.

NOTE

- This test cannot be performed manually, due to the complexity of the equipment calibration procedure, and the complexity of the measurement algorithm.
 - No adjustment is available for this test if it fails (see [Chapter 5](#), “Troubleshooting Guide”).
-

Time Base Frequency Accuracy

Description

The accuracy of the 100 MHz sample clock determines the accuracy of all measurements that are based on samples taken over time. This test measures the Time Base by dividing the sample clock by 10 (within the meter) and feeding it out of the Trigger Output connector, where it can be directly measured by a Frequency Counter.

Equipment

- Required test equipment:
 - 1 unit of 53132A Frequency Counter
- An alternative Frequency Counter can be used, as long as it has the appropriate bandwidth (> 10 MHz)

Test Method

- 1 Enable the path that routes the Time Base signal to the Trigger Output connector.
- 2 Using the 53132A, measure the frequency of the signal at the Trigger Output connector.

NOTE

- This test can be configured manually via the command `SERV:BIST:TBAS:STAT ON`, which enables the 10 MHz feed to the Trigger Output connector (refer to the *Programming Guide* for further details on the use of this command).
- This test can also be configured manually via the front panel; access the Service menu, select Self Test, and select Time Base to enable the 10 MHz feed to the Trigger Output connector.
- No adjustment is available for this test if it fails (see [Chapter 5](#), “Troubleshooting Guide”).

Zero Set (Average Path)

Description

Zero Set is defined as the amount of residual offset error that is present following a zero operation. This offset error is caused by contamination from several sources, including circuit noise. This test measures the effectiveness of Zero Set by performing 15 back-to-back zero operations of the Average Path (with no sensor attached), after which the standard deviation of the results is calculated and returned as the measured value.

Equipment

- No test equipment required

Test Method

- 1 Execute the internal Zero Set measurement procedure for Channel A.
- 2 Read back the result of the measurement from the DUT.
- 3 Repeat this procedure for Channel B.

NOTE

- This test can be performed manually via the commands:
`SERV:BIST:PEAK[1|2]:ZSET`
`SERV:BIST:CW[1|2]:ZSET:NUM?`
(Refer to the *Programming Guide* for further details on the use of these commands)
 - No adjustment is available for this test if it fails (see [Chapter 5](#), “Troubleshooting Guide”).
-

Zero Set (Peak Path)

Description

Zero Set is defined as the amount of residual offset error that is present following a zero operation. This offset error is caused by contamination from several sources, including circuit noise. This test measures the effectiveness of Zero Set by performing 15 back-to-back zero operations of the Peak Path (with no sensor attached), after which the standard deviation of the results is calculated and returned as the measured value.

Equipment

- No test equipment required

Test Method

- 1 Execute the internal Zero Set measurement procedure for Channel A.
- 2 Read back the result of the measurement from the DUT.
- 3 Repeat this procedure for Channel B.

NOTE

- This test can be performed manually via the commands:
`SERV:BIST:PEAK[1|2]:ZSET`
`SERV:BIST:PEAK[1|2]:ZSET:NUM?`
(Refer to the *Programming Guide* for further details on the use of these commands)
 - No adjustment is available for this test if it fails (see [Chapter 5](#), “Troubleshooting Guide”).
-

Linearity (Average Path)

Description

Linearity over the full input voltage range of the measurement path is warranted to provide assurance of instrument accuracy. This test measures Linearity by using a calibration DAC and a calibration ADC (built into the DUT) to stimulate and compare performance of the Average Path against the measurement ADC, returning the worst case percentage error.

Equipment

- No test equipment required

Test Method

- 1 Execute the internal Linearity measurement procedure for Channel A.
- 2 Read back the result of the measurement from the DUT.
- 3 Repeat this procedure for Channel B.

NOTE

- This test can be performed manually via the commands:
`SERV:BIST:CW[1|2]:LIN 0`
`SERV:BIST:CW[1|2]:LIN:PERR?`
(Refer to the *Programming Guide* for further details on the use of these commands)
 - No adjustment is available for this test if it fails (see [Chapter 5](#), “Troubleshooting Guide”).
-

Linearity (Peak Path)

Description

Linearity over the full input voltage range of the measurement path is warranted to provide assurance of instrument accuracy. This test measures Linearity by using a calibration DAC and a calibration ADC (built into the DUT) to stimulate and compare performance of the Average Path against the measurement ADC, returning the worst case percentage error.

Equipment

- No test equipment required

Test Method

- 1 Execute the internal Linearity measurement procedure for Channel A.
- 2 Read back the result of the measurement from the DUT.
- 3 Repeat this procedure for Channel B.

NOTE

- This test can be performed manually via the commands:
`SERV:BIST:PEAK[1|2]:LIN 0`
`SERV:BIST:PEAK[1|2]:LIN:PERR?`
(Refer to the *Programming Guide* for further details on the use of these commands)
 - No adjustment is available for this test if it fails (see [Chapter 5](#), “Troubleshooting Guide”).
-

Rise/Fall Time (Peak Path)

Description

Linearity over the full input voltage range of the measurement path is warranted to provide assurance of instrument accuracy. This test measures Linearity by using a calibration DAC and a calibration ADC (built into the DUT) to stimulate and compare performance of the Peak Path against the measurement ADC, returning the worst case percentage error.

Equipment

- 1 unit of 81130A pulse/data generator mainframe
- 2 unit of 81131A output modules (installed in 81130A)
- 2 unit of N1912-61017 calibration test cable

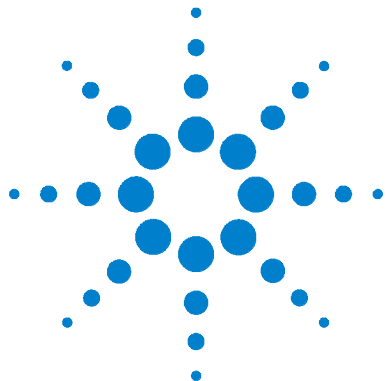
Test Method

- 1 Capture a train of 10 pulses with very fast rise/fall times.
- 2 Combine the sample data to create an equivalent pulse with 10 unit of the sample resolution of the DUT.
- 3 Analyze the equivalent pulse to determine the 10 % and 90 % voltage levels of the risign/falling edges
- 4 Analyze the equivalent pulse to determine when the 10 % and 90 % crossover points occur for both edges.
- 5 Using the times obtained for the 10 % & 90 % crossovers, the N7832A software will calculate the rise/fall time performance of the DUT.

NOTE

- This test cannot be performed manually, due to the complexity of the pulse analysis algorithm.
 - No adjustment is available for this test if it fails (see [Chapter 5](#), “Troubleshooting Guide”).
-

2 Performance Tests



3 Adjustments

Introduction 40

Power Reference Level Adjustment 41

This chapter contains checks and adjustments that ensure proper performance of the power meter.



Introduction

Attempts to correct the Power Reference Level if the Performance Test has failed. Power Reference Level is controlled by the coarse and fine settings of a digital potentiometer. Adjustment of the coarse and fine settings can only be carried out via remote commands. Adjustment can be carried out without having to remove the outer covers from the DUT.

Power Reference Level Adjustment

Equipment

- As per the Test Equipment list for the Power Reference Level Performance Test

Test Method

- 1 Set: Coarse = 834, Fine = 550
- 2 Measure Power Ref. Level as per the Performance Test:
 - a If the result is > 1 mW, the increment COARSE by 1
 - b If the result is < 1 mW, the decrement COARSE by 1
- 3 Repeat step 2 until the result crosses the 1 mW boundary (in either direction)
- 4 Measure Power Ref. Level as per the Performance Test:
 - a If the result is > 1 mW, then decrement FINE by 1
 - b If the result is < 1 mW, then increment FINE by 1
- 5 Repeat step 4 until the result crosses the 1 mW boundary (in either direction)
- 6 The adjustment is completed

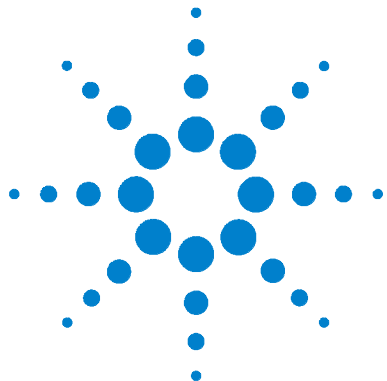
NOTE

- This adjustment can be performed manually via the commands:


```
SERV:CAL:ADJ:COUR <Value>
SERV:CAL:ADJ:COUR?
SERV:CAL:ADJ:FINE <Value>
SERV:CAL:ADJ:FIINE?
```

 (Refer to the *Programming Guide* for further details on the use of these commands)
- COARSE and FINE values are valid in the range of 0 to 1023
- If adjustment is not possible, then a fault may be present in the DUT (see [Chapter 5](#), "Troubleshooting Guide").

3 Adjustments



4 Theory of Operation

PPMC Assembly	44
Mother Board Assembly	45
Measurement Board Assembly	46
Calibrator Assembly	47
Front Panel Assembly	48
PSU Assembly	49

This chapter describes how each of the power meter's individual assemblies operate.



PPMC Assembly

Purpose

- Provides the main processor and memory for the power meter
- Provides external interfaces for LAN
- Stores the power meter firmware in Flash EEPROM
- Stores the power meter serial number and option data

Inputs

- Power supplies [from PSU, via Mother Board]
- Control and data lines [from Mother Board and Measurement Board(s)]
- LAN communications [from external equipment]

Outputs

- Control, address, and data lines [to Mother Board and Measurement Board(s)]

Mother Board Assembly

Purpose

- Provides the Average measurement path(s)
- Provides the Peak measurement path(s) to the Measurement Board(s)
- Provides external Trigger Input/Output and Recorder Output(s)
- Provides signal routing between the PPMC and Measurement Board(s)

Inputs

- Power supplies [from PSU]
- Sensed power level(s) [from Sensor Flexi(s)]
- Trigger Input [from external equipment]
- Control, address, and data lines [from PPMC]

Outputs

- Processed Average path measurement [to PPMC]
- Unprocessed Peak path measurement samples [to Measurement Board(s)]
- Trigger output & Recorder output(s) [to external equipment]
- Control and data lines [to PPMC]

Measurement Board Assembly

Purpose

- Provides data acquisition and processing for the Peak measurement path of a channel

Inputs

- Power supplies [from PSU, via Mother Board]
- Unprocessed Peak path measurement samples [from Mother Board]
- Control, address, and data lines [from PPMC]

Outputs

- Processed Peak path measurement data [to PPMC, via Mother Board]
- Control and data lines [to PPMC, via Mother Board]

Calibrator Assembly

Purpose

- Provides a 1 mW (0 dBm) Power Reference Level at 50 MHz

Inputs

- Power supplies [from PSU, via Mother Board]
- Control, address, and data lines [from PPMC]

Outputs

- 1 mW (0 dBm) Power Reference [to external equipment]
- Control and data lines [to PPMC, via Mother Board]

Front Panel Assembly

Purpose

- Provides mounting for the Channel A and B Sensor Flex, Rocker Switch, LED, Recorder Output, Trigger In/Out and Power Reference Connector

Inputs

- Power supplies [from PSU, via Mother Board]
- Front Panel Board Assembly

Outputs

- Control and data lines [to PPMC, via Mother Board]

PSU Assembly

Purpose:

- Provides various DC power supplies

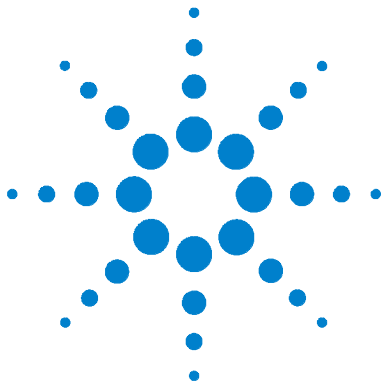
Inputs:

- 100 Vac~ 240 Vac, 50 Hz~ 60 Hz, 150 VA Max [from an external source]
- Control lines [from Front Panel, via Mother Board]

Outputs:

- +12 Vdc [to Mother Board]
- +5 Vdc]to Mother Board]
- - 5 Vdc [to Mother Board]
- - 12 Vdc [to Mother Board]

4 Theory of Operation



5 Troubleshooting Guide

Introduction	52
Power-Up Problems	53
Instrument Self-Test	54
Extended Self-Test	56
Performance Test	57
Power Reference Level Adjustment Problems	58
Communication Interface Failures	59
Additional Diagnostic Tests	60

This chapter contains troubleshooting flow charts designed to isolate faults in the LAN interface port.



Introduction

This chapter enables qualified service personnel to diagnose suspected faults with the power meter LAN interface port.

If there is a problem when attempting to use the LAN interface function, consult the *User's Guide* and confirm that all the user setups are correct before proceeding with the following fault finding flowcharts.

Power-Up Problems

Basic External Checks

- Check the mains power source is live
- Check the mains cable for any obvious damage

Basic Internal Checks

- Check/reseat the cable between the line module and the PSU
- Check/reseat the cable between the PSU and the Mother Board
- Green LED DS1: If this is off, then the PSU may be faulty
- Green LED DS4: This should come on when the power button is pressed
- Green LEDs DS2/DS3: These will flash on and off during normal operation

Possible Faults

- PSU
- Mother Board
- Rocker Switch defect
- Loose Front Panel Board Ribbon Cable

Instrument Self-Test

Instrument	Purpose	Debug Tips	Possible Faults
Test Point Voltages	Checks that all of the supply voltages are present	Replace the PSU to see if this clears the faults	PSU (low probability) Mother Board (high probability)
Calibrator	Verifies that the Calibrator is working (Note: This test does not check that the Calibrator meets its specifications)	Check/reseat that cable between the Calibrator Assembly and the Mother Board Attempt to adjust the 1 mW Power Reference Level	Calibrator Assembly (high probability) Mother Board (low probability)
Fan	Verifies that the Fan is working	Check/reseat the cable between the Fan Assembly and the Mother Board Check visually to see whether or not the Fan is working	Fan Assembly (high probability) Mother Board (low probability)
Battery	Checks that the lithium manganese battery on the Mother Board is working	Replace the battery to see if this clears the fault	Lithium Manganese Battery (high probability) Mother Board (low probability)
ChA Peak Path	Verifies that the Peak Path of Channel A is working (Note: This does not prove that the Peak Path meets its specifications)	Replace the Measurement Board Assembly for Channel A to see if this clears the fault	Measurement Board Assembly, Channel A (low probability) Mother Board (high probability)
ChA CW Path	Verifies that the Average Path of Channel A is working (Note: This does not prove that the Average Path meets its specifications)	Not applicable	Mother Board
ChA Measurement Board Check	Executes an internal self-test procedure on the Measurement Board Assembly for Channel A	Replace the Measurement Board Assembly for Channel A to see if this clears the fault	Measurement Board Assembly, Channel A (high probability) Mother Board (low probability)

ChB Peak Path	Verifies that the Peak Path of Channel B is working (Note: This does not prove that the Peak Path meets its specifications)	Replace the Measurement Board Assembly for Channel B to see if this clears the fault	Measurement Board Assembly, Channel B (low probability) Mother Board (high probability)
ChB CW Path	Verifies that the Average Path of Channel B is working (Note: This does not prove that the Average Path meets its specifications)	Not applicable	Mother Board
ChB Measurement Board Check	Executes an internal self-test procedure on the Measurement Board Assembly for Channel B	Replace the Measurement Board Assembly for Channel B to see if this clears the fault	Measurement Board Assembly, Channel B (high probability) Mother Board (low probability)

Extended Self-Test

Instrument	Purpose	Debug Tips	Possible Faults
Time Base	Provides a means to measure Time Base Frequency Accuracy	Check that the SMB cable being used is not damaged Check that the SMB is connected to 'Trig Out', not 'Trig In'	Mother Board

Performance Test

Type of Failures	Debug Tips	Possible Faults
1 mW Power Reference Level Failures	Attempt to adjust the 1 mW Power Reference Level	Calibrator Assembly (high probability) Mother Board (low probability)
VSWR Failures	Not applicable	Calibrator Assembly
Time Base Frequency Accuracy Failures	Check that the SMB cable being used is not damaged Check that the SMB is connected to 'Trig Out', not 'Trig In'	Mother Board
Zero Set (Average Path) Failures	Not applicable	Mother Board
Zero Set (Peak Path) Failures	Not applicable	Mother Board
Linearity (Average Path) Failures	Not applicable	Mother Board
Linearity (Peak Path) Failures	Replace the Measurement Board Assembly for the channel to see if this clears the fault	Measurement Board Assembly (low probability) Mother Board (high probability)
Rise/Fall Time (Peak Path) Failures	Check/reseat the Sensor Flex RF connections	Sensor Flex Assembly (low probability) Measurement Board Assembly (low probability) Mother Board (high probability)

Power Reference Level Adjustment Problems

Possible Faults

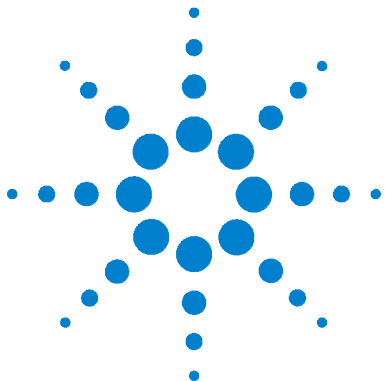
- Calibrator Assembly (high probability)
- Mother Board (low probability)

Communication Interface Failures

Type of Communication	Debug Tips	Possible Faults
LAN Communication	Check visually to see whether or not the connector is obstructed/damaged	PPMC Assembly

Additional Diagnostic Tests

Type of Functionality	Reason	Recommended Test Method	Possible Faults
Sensor Functionality	The N7832A software does not prove both paths of the Sensor Flex Assembly	Connect an E4412A sensor to the DUT and ensure it can be zeroed/calibrated	Sensor Flex Assembly



6 Repair Guide

Introduction	62
Replaceable Parts	63
Front Panel Assembly	63
Mother Board Assembly	66
PPMC (Processor PCI Mezzanine) Assembly	66
Measurement Board Assembly	67
PSU (Power Supply Unit)	68
Calibrator Assembly	69
Required Torque Values for Fasteners	70
Disassembly Instructions	71
Location of Replaceable Parts	71
Front Panel Disassembly Instructions	73
Calibrator Disassembly Instructions	82
Power Supply Disassembly Instructions	84
Mother Board, Measurement Board and PPMC Board Disassembly Instructions	87
Reassembly Instructions	93
Additional Repair Notes	95
Replacing the PPMC Assembly	96

This chapter details the power meter's replaceable parts. It also explains how to assemble and disassemble the power meter.



Introduction

This chapter contains details of some of the higher level components and assemblies which can be ordered from Agilent Technologies. It also details how to assemble and disassemble the power meter for repair. The contents included are:

- 1 Replaceable Parts
- 2 Required Torque Values for Fasteners
- 3 Disassembly Instructions
- 4 Reassembly Instructions
- 5 Additional Repair Notes
- 6 Replacing the PPMC Assembly

To order parts contact your local Agilent Technologies Sales and Service Office.

To return your power meter for servicing at a qualified service center refer to [Chapter 7](#), “Contacting Agilent Technologies”.



Replaceable Parts



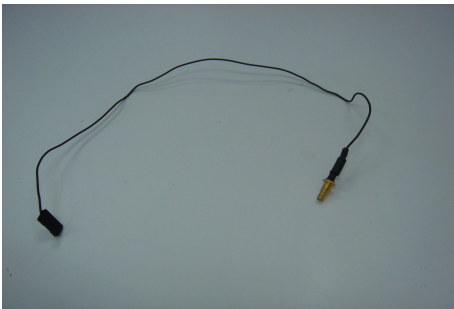
Front Panel Assembly



Front panel assembly can be available

Main Assembly


The standard P-Series modular power meter has the Reference Calibrator (semi-rigid reference cable), Rocker Switch, Recorder cable, Trigger In/Out cable, Channel A/B Sensor Flex Assembly at the front panel.

Agilent Part Number	Description	Visual
N8262-60107	Front Panel Assembly	 <p>The image shows the front panel assembly for the Agilent N8262A P-Series Modular Power Meter. It includes a semi-rigid reference cable with a yellow connector, a black trigger cable, and several other cables connected to the front panel. The panel features a digital display, a rocker switch, and various ports labeled 'RF IN', 'RF OUT', 'TRIG IN', 'TRIG OUT', 'REC', and 'CAL'. The Agilent logo and 'N8262A' model number are visible on the left side of the panel.</p>
N8262-20201	Front Frame	 <p>The image shows the front frame of the Agilent N8262A P-Series Modular Power Meter. It is a white, rectangular metal frame with a digital display, a rocker switch, and various ports labeled 'RF IN', 'RF OUT', 'TRIG IN', 'TRIG OUT', 'REC', and 'CAL'. The Agilent logo and 'N8262A' model number are visible on the left side of the frame.</p>

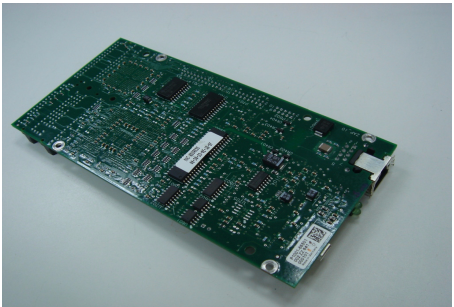
Agilent Part Number	Description	Visual
N8262-63002	Front Panel Board Assembly	
N8262-60206	<p>Channel A & B Sensor Flex Assembly</p> <p>Note:</p> <ul style="list-style-type: none"> • The same assembly is used for all two sensor positions • The Sensor Flex Assembly is supplied straight, and so it must be folded to match the assembly being replaced (see “Additional Repair Notes” on page 95) • Channel A & B Sensor Flex Assembly is not included with Front Panel Assembly, part number N8262-60107; if this is required, it is available as a separate item. 	
N8262-60209	Recorder Cable	

Agilent Part Number	Description	Visual
N8262-60208	Trigger In/Out Cable	
N8262-20101	<p>Power Reference Input</p> <p>Note:</p> <ul style="list-style-type: none"> Power Reference Input is not included with Front Panel Assembly, part number N8262-60107; if this is required, it is available as a separate item. 	


Mother Board Assembly

Agilent Part Number	Description	Visual
N8262-63001	PCA, Mother Board Assembly	



PPMC (Processor PCI Mezzanine) Assembly

Agilent Part Number	Description	Visual
N8200-60002	PPMC Assembly Note: <ul style="list-style-type: none"> • Refurbished PPMC Assemblies are not available • The PPMC Assembly must be programmed once it has been installed (see “Additional Repair Notes” on page 95) 	

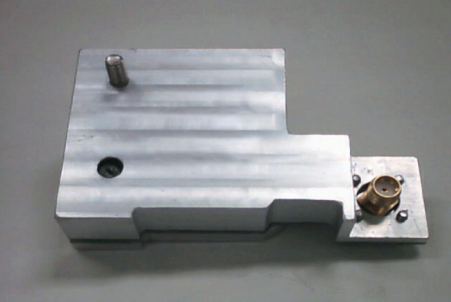
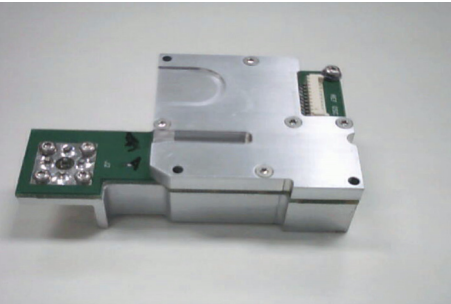

Measurement Board Assembly

Agilent Part Number	Description	Visual
N1912-60004	<p>Measurement Board</p> <p>Note:</p> <ul style="list-style-type: none">• There are two identical Measurement Board in the N8262A P-Series modular power meter	

PSU (Power Supply Unit)

Agilent Part Number	Description	Visual
0950-4918	PSU Note: <ul style="list-style-type: none"> • Refurbished PSUs are not available 	
N8262-60202	Power Supply Cable Assembly	

Calibrator Assembly

Agilent Part Number	Description	Visual
N1911-61002	Calibrator Assembly	<p>Top view</p>  <p>Bottom view</p> 
N8262-6021	Calibrator Cable Assembly	

Required Torque Values for Fasteners

Required tools and torque values for fasteners are listed below:

Item	Description/Default	Range of Values
<ul style="list-style-type: none"> • Fit Mother Board To Chassis • Fit Front Frame To Chassis • Fit Cover To Real Panel 	T20 Torx Screwdriver Bit	21 in lbs
<ul style="list-style-type: none"> • Fit Fan Guard To Fan Assembly • Fit Front Panel Board Assembly To Chassis • Fit Bumper Foot To Cover • Fit Power Supply To Chassis 	T10 Torx Screwdriver Bit	9 in lbs
<ul style="list-style-type: none"> • Fit Calibrator To Bottom Chassis 	T6 Torx Screwdriver Bit	3 in lbs
<ul style="list-style-type: none"> • Fit Mother Board To Chassis • Fit Measurement Board To Mother Board • Fit PPMC Board To Mother Board 	T8 Torx Screwdriver Bit	6 in lbs
<ul style="list-style-type: none"> • Fit Recorder Output To Front Frame • Fit Trigger In/Out To Front Frame 	1/4" Socket	6 in lbs
<ul style="list-style-type: none"> • Fit Channel A/B To Front Frame 	ODU Socket	6 in lbs
<ul style="list-style-type: none"> • Fit Power Reference Input Cable To Calibrator 	5/16" Socket	10 in lbs
<ul style="list-style-type: none"> • Fit Power Reference Input Cable To Front Frame 	19mm Socket	18 in lbs

NOTE

The ODU Socket is a special tool which is orderable using p/n N1912-21012.

This socket is used in conjunction with a 1/4" drive torque wrench, calibrated to 6 in lbs.

Disassembly Instructions

The guidelines in this section describe the disassembly of four major assembling in the Agilent N8262A P-Series modular power meter.

- Front panel disassembly.
- Calibrator disassembly.
- Power supply disassembly.
- Mother board, Measurement board and PPMC board disassembly.

Location of Replaceable Parts

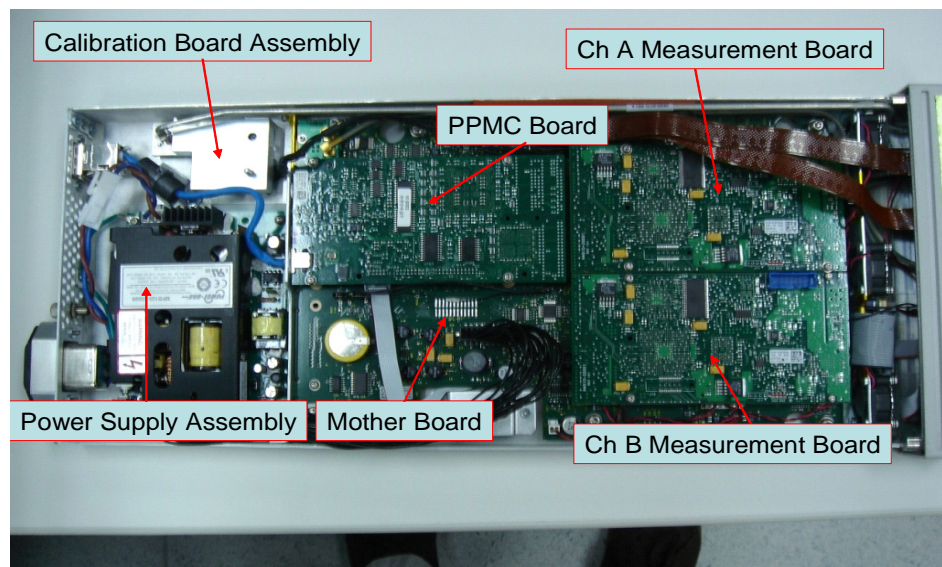


Figure 1 Overview of the main assemblies

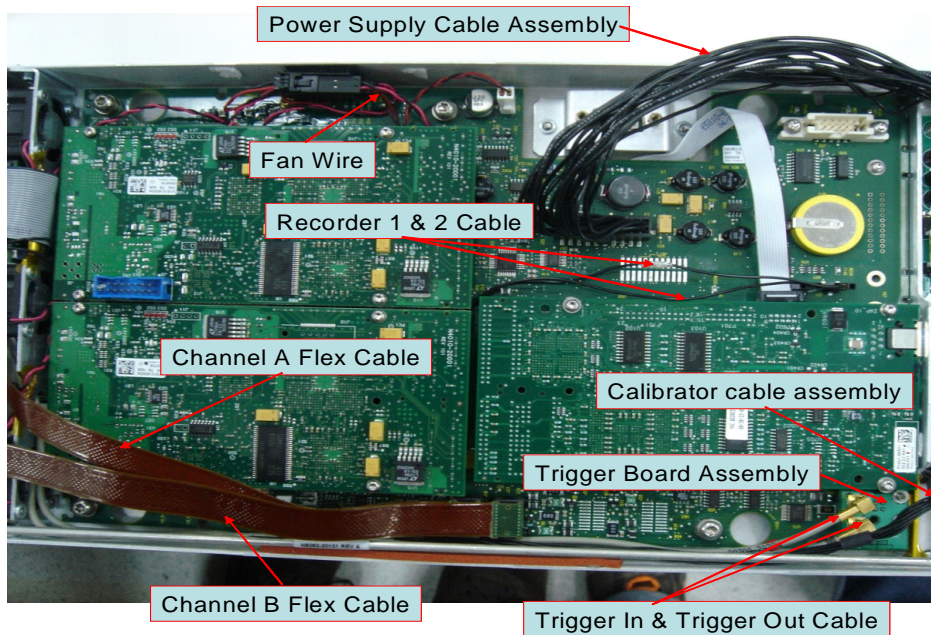


Figure 2 Overview of the replaceable parts

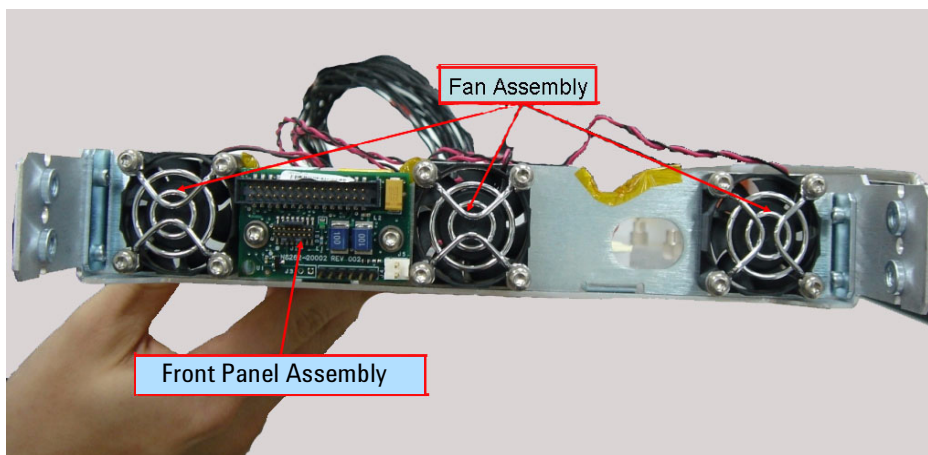
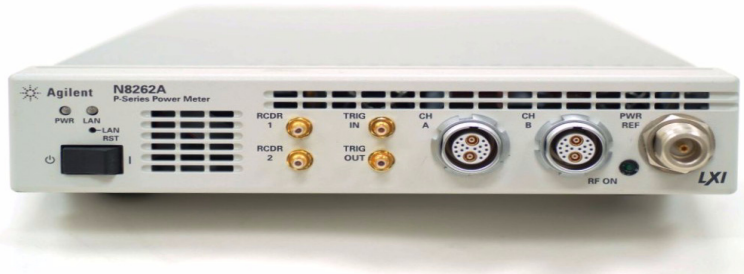
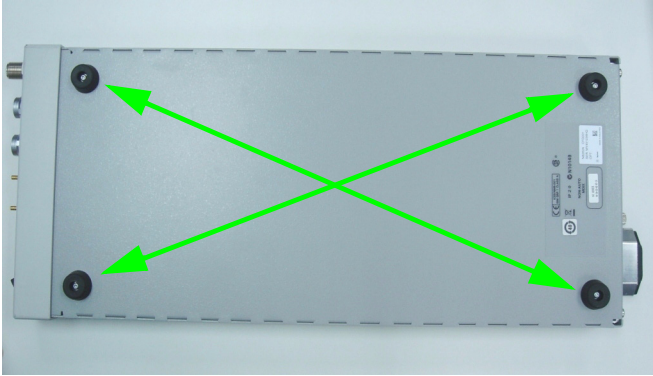

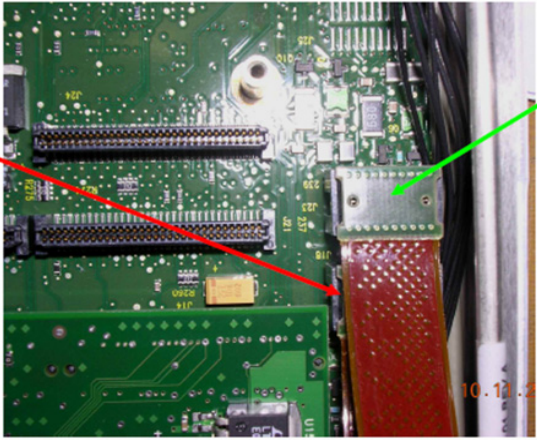


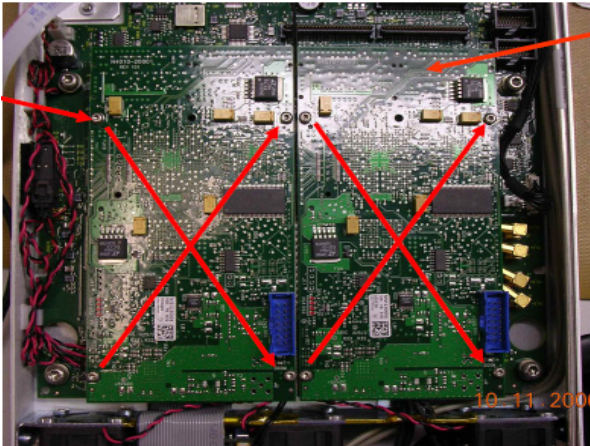
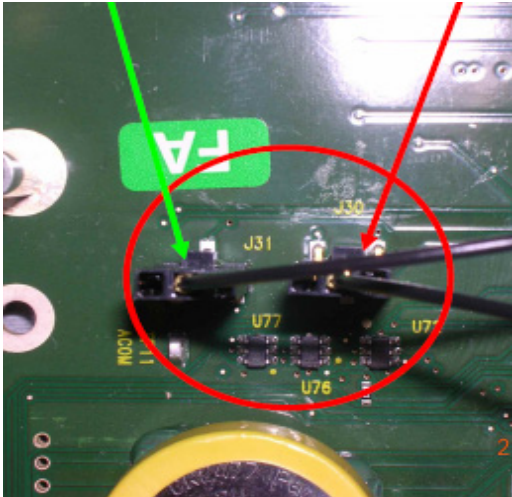
Figure 3 Overview of the front panel assemblies

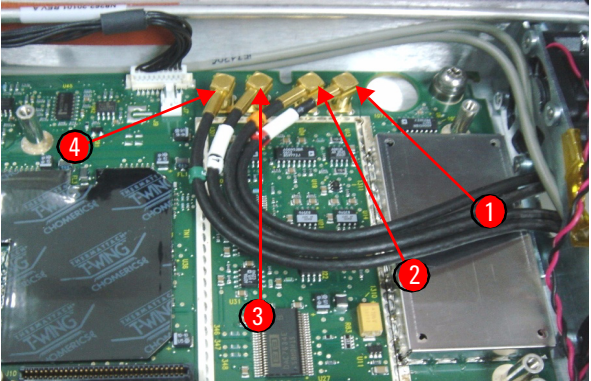
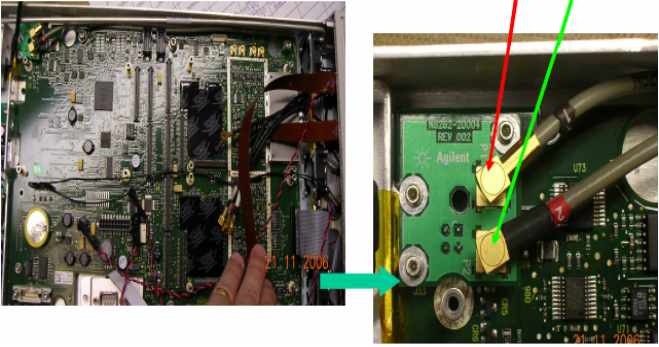
Front Panel Disassembly Instructions


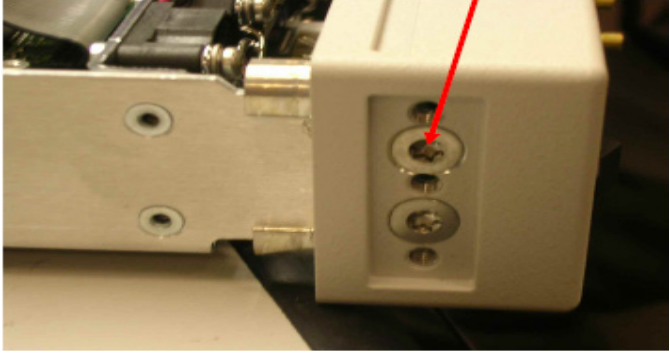


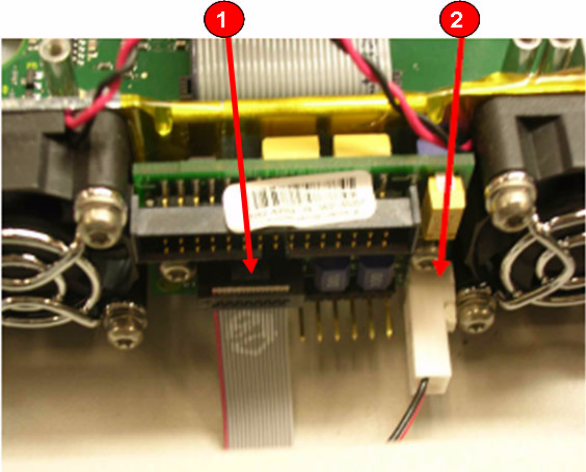
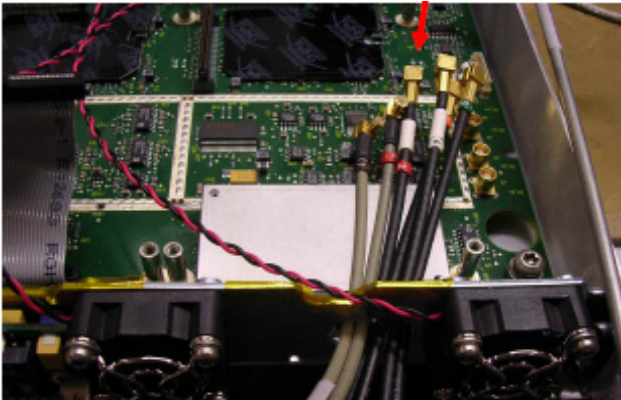
Instructions	Visual
<ul style="list-style-type: none"> Use the T10 Torx screwdriver bit to remove the 4 captive screws and remove the bumper foot. <p>Note:</p> <ul style="list-style-type: none"> You need to remove the bumper foot first before removing the cover. 	 <p>Figure 4</p>

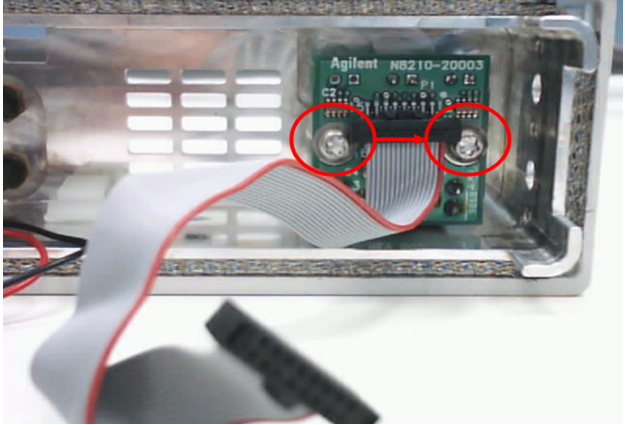
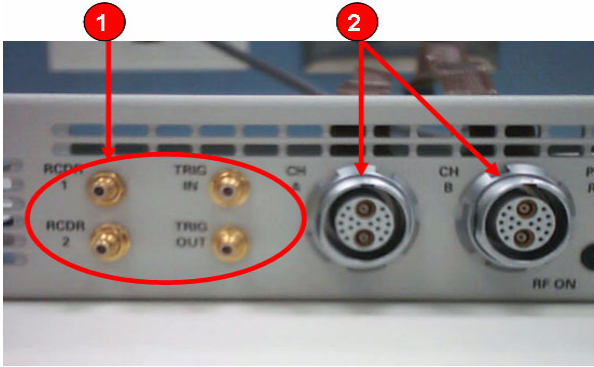
Instructions	Visual
<ul style="list-style-type: none"> • Use a T20 Torx screwdriver bit to remove the four screws located at the rear panel. • Pull and remove the cover at the rear panel. See Figure 5 for more details. 	 <p>Figure 5</p>
<ul style="list-style-type: none"> • Step 1 - Lift and remove Channel B sensor flex cable from J23. • Step 2 - Lift and remove Channel A sensor flex cable from J18. 	 <p>Figure 6</p>

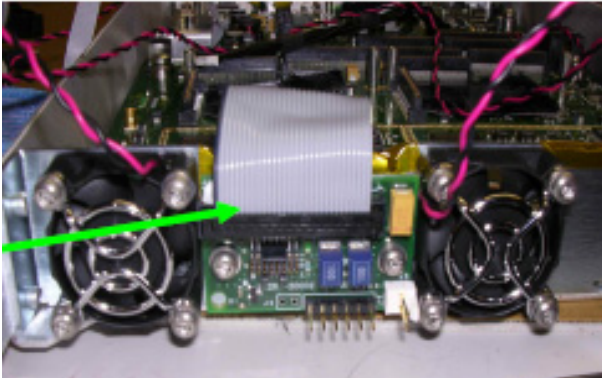
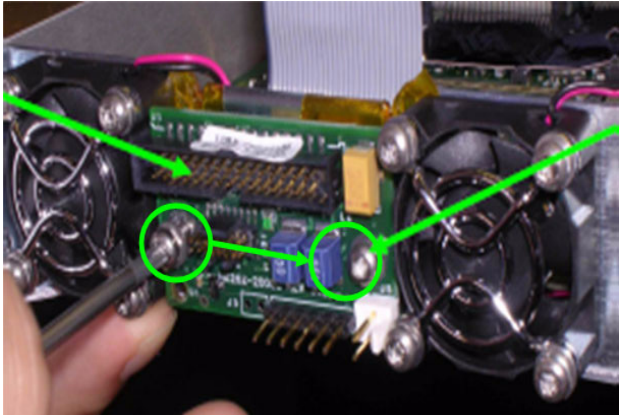
Instructions	Visual
<ul style="list-style-type: none"> • Use T8 Torx screwdriver bit to remove the eight screws which hold the measurement board assembly. Refer to Figure 7. • Lift and remove the measurement board assembly. 	 <p data-bbox="611 795 696 821">Figure 7</p>
<ul style="list-style-type: none"> • Lift and remove Recorder 1 cable and Recorder 2 cable from J31 and J30 respectively on the mother board assembly. 	 <p data-bbox="611 1394 696 1420">Figure 8</p>

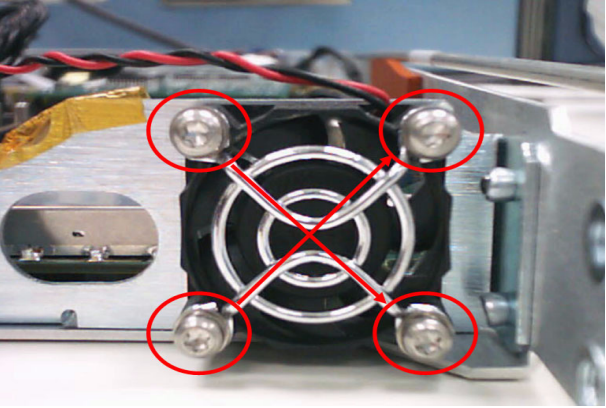
Instructions	Visual
<ul style="list-style-type: none"> • Step 1 - Lift and remove the top coaxial cable labeled 2 (Channel B) from J2. • Step 2 - Lift and remove the bottom coaxial cable labeled 3 (Channel B) from J3. • Step 3 - Lift and remove the top coaxial cable labeled 4 (Channel A) from J4. • Step 4 - Lift and remove the bottom coaxial cable labeled 5 (Channel A) from J5. <p>Note:</p> <ul style="list-style-type: none"> • These coaxial cables originally routed under the measurement board assembly. 	 <p>Figure 9</p>
<ul style="list-style-type: none"> • Step 1 - Lift and remove the coaxial cable labeled 1 (Trig. In) from P1. • Step 2 - Lift and remove the coaxial cable labeled 2 (Trig. Out) from P2. <p>Note:</p> <ul style="list-style-type: none"> • These coaxial cable are originally routed on the right side of the chassis along the wall. Refer to Figure 10 for details. 	 <p>Figure 10</p>

Instructions	Visual
<ul style="list-style-type: none">Remove the power reference input connector (See Figure 11): <p>Use the 19mm socket to remove the nut on the power reference input connector on the front panel.</p>	 <p data-bbox="611 788 711 817">Figure 11</p>
<ul style="list-style-type: none">Use T20 Torx screwdriver bit to remove the four screws (located at both side of the front panel) which hold the front frame to the chassis.	 <p data-bbox="611 1251 711 1281">Figure 12</p>

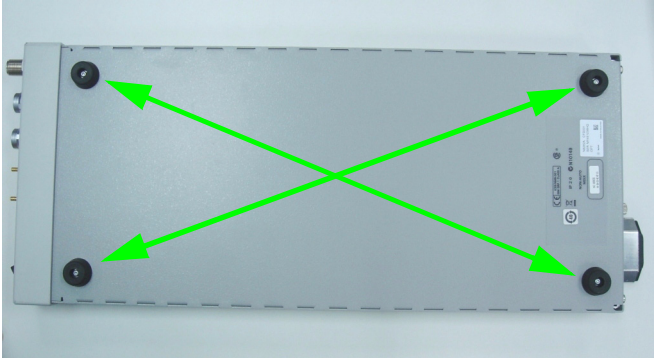
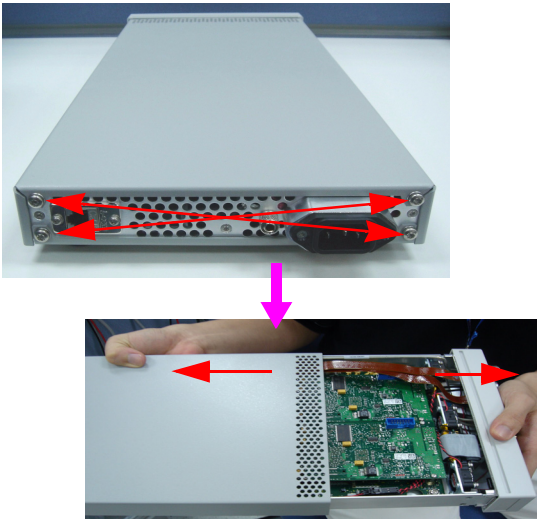
Instructions	Visual
<ul style="list-style-type: none"> • Step 1 - Disconnect the ribbon cable which connect the front panel board assembly to the rocker switch. • Step 2 - Pull and remove the LED wire from the front panel board assembly. 	 <p data-bbox="611 826 711 852">Figure 13</p>
<ul style="list-style-type: none"> • Take out the six coaxial cables through the hole in the chassis carefully. <p data-bbox="149 965 204 986">Note:</p> <ul style="list-style-type: none"> • During this step, you will be able to take out the front panel assembly which inclusive of Channel A and B sensor flex assembly, Recorder Output cables and Trigger In/Out cables. 	 <p data-bbox="611 1324 711 1350">Figure 14</p>

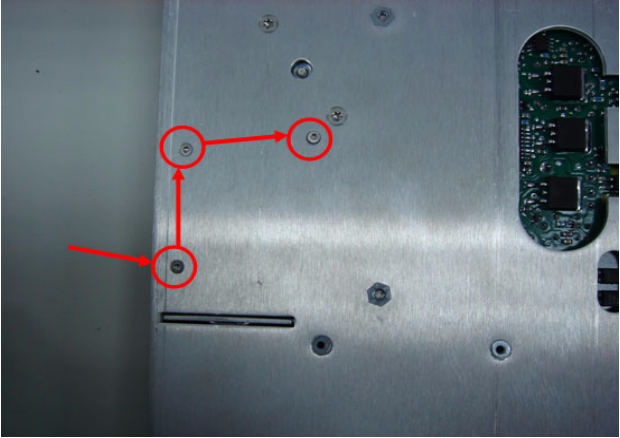
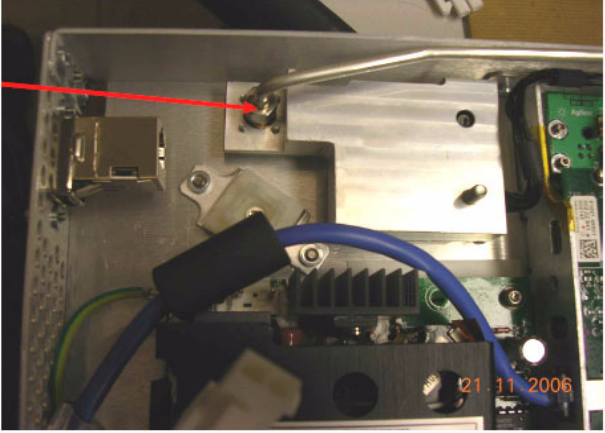
Instructions	Visual
<ul style="list-style-type: none"> Use T10 Torx screwdriver bit to remove the two screws (as shown in Figure 15) which hold the rocker switch board assembly. <p>Note:</p> <ul style="list-style-type: none"> You will be able to take out the rocker switch assembly during this step. 	 <p>Figure 15</p>
<ul style="list-style-type: none"> Step 1 - Use the 1/4" socket to remove the nuts. Remove the Trigger In/Out cables, and the Recorder Output cables. Step 2 - Use ODU socket to remove the nut of Channel A and B sensor flex assembly. <p>Note:</p> <ul style="list-style-type: none"> You are not require to remove all the nuts and sockets unless you wish to remove the front frame. You may remove the nuts or sockets for parts that need to be disassembled. 	 <p>Figure 16</p>

Instructions	Visual
<ul style="list-style-type: none"> Disconnect the ribbon cable which connects the mother board assembly and front panel board assembly. 	 <p data-bbox="611 730 711 756">Figure 17</p>
<ul style="list-style-type: none"> Use the T10 Torx screwdriver bit to remove the two screws which hold the front panel board assembly to the chassis. <p data-bbox="148 913 205 939">Note:</p> <ul style="list-style-type: none"> You will be able to remove the front panel board assembly during this step. 	 <p data-bbox="611 1251 711 1277">Figure 18</p>

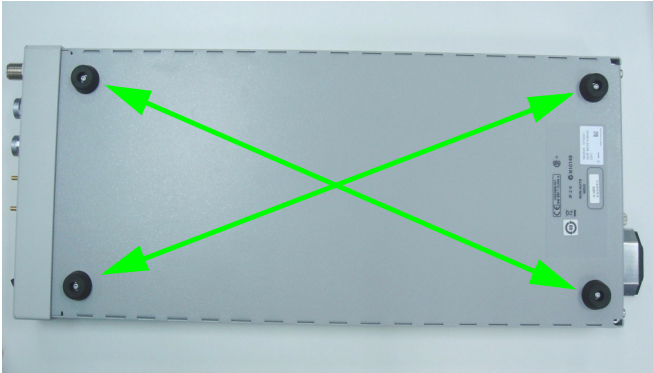
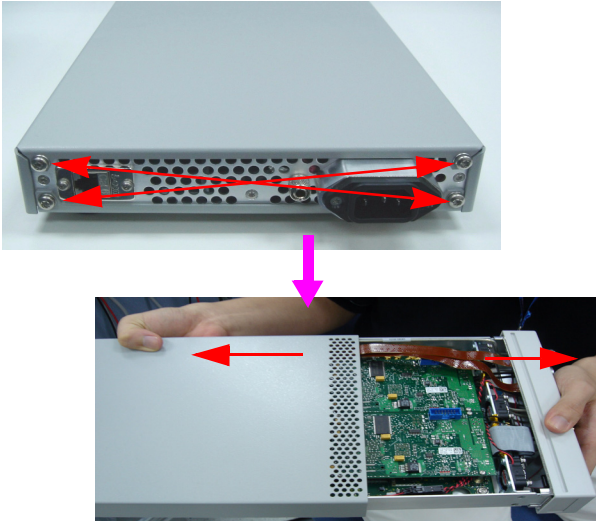
Instructions	Visual
<ul style="list-style-type: none">• Disconnect the fan assembly (as shown in Figure 19) <p>Use the T10 Torx screwdriver bit to remove the four screws, remove the fan guard and disconnect the fan assembly.</p> <p>Note:</p> <ul style="list-style-type: none">• You may use the same method to disconnect all the fan assemblies.	 <p>Figure 19</p>


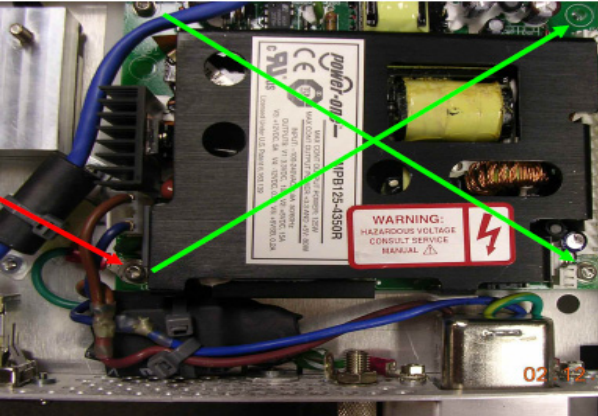
Calibrator Disassembly Instructions

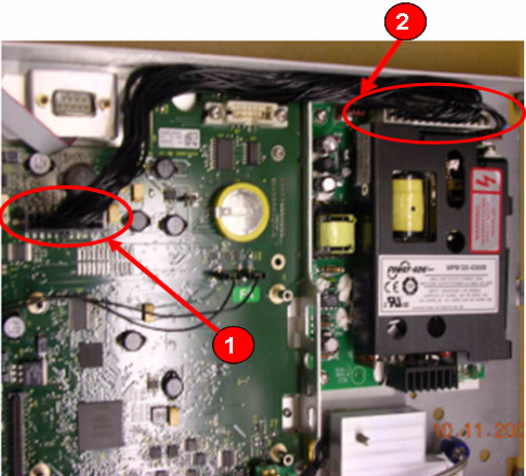
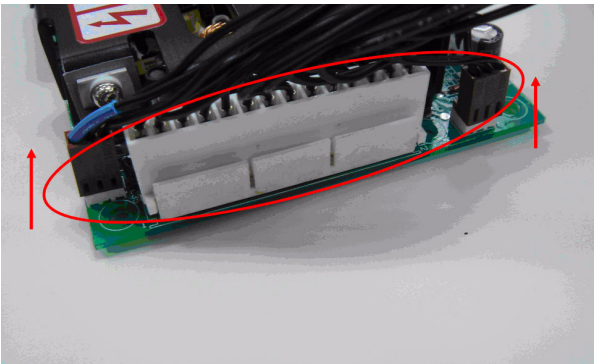
Instructions	Visual
<ul style="list-style-type: none"> Use the T10 Torx screwdriver bit to remove the 4 captive screws and remove the bottom feet. <p>Note:</p> <ul style="list-style-type: none"> You need to remove the bumper foot first before removing the cover. 	 <p>Figure 20</p>
<ul style="list-style-type: none"> Use a T20 Torx screwdriver bit to remove four screws located at the rear panel. Pull and remove the cover at the rear panel. See Figure 21 for more details. 	 <p>Figure 21</p>

Instructions	Visual
<ul style="list-style-type: none">Use the T6 Torx screwdriver bit to remove the three screws located on the bottom of the chassis.	 <p data-bbox="611 791 711 817">Figure 22</p>
<ul style="list-style-type: none">Use the 5/16 spanner to disconnect the power reference input from the calibrator assembly. <p data-bbox="148 961 205 987">Note:</p> <ul style="list-style-type: none">You will be able to remove the calibrator assembly at this step.	 <p data-bbox="611 1341 711 1367">Figure 23</p>

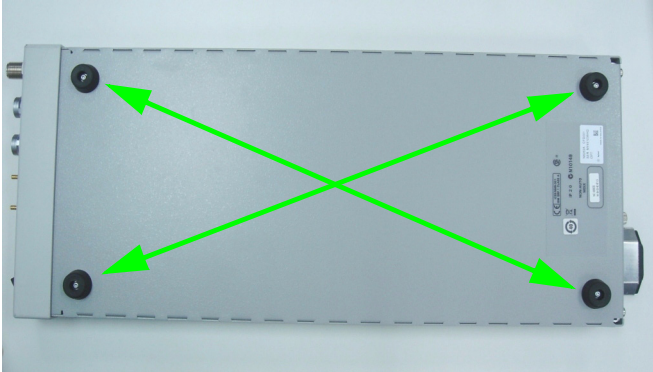
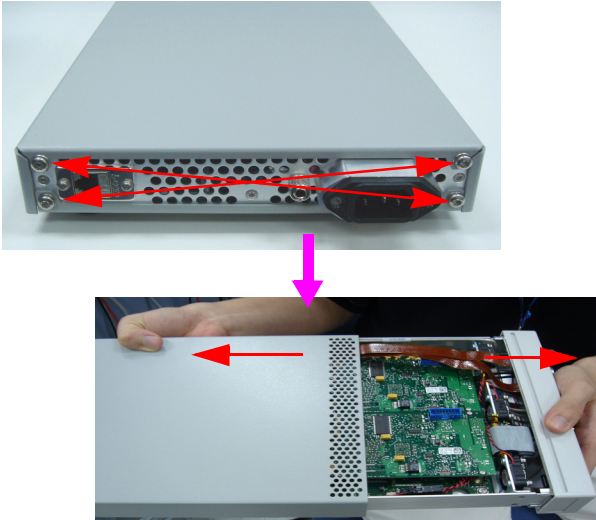
Power Supply Disassembly Instructions

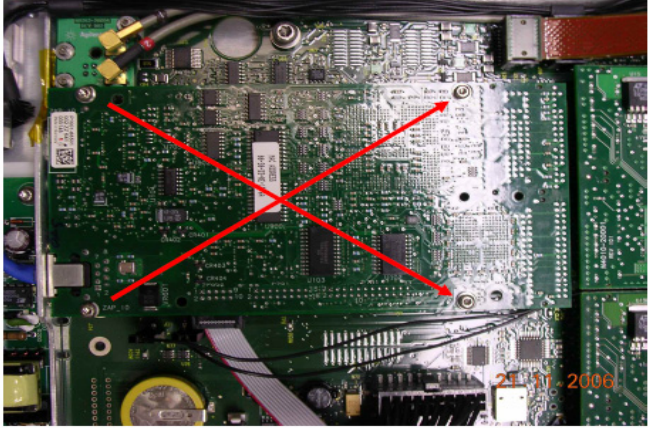
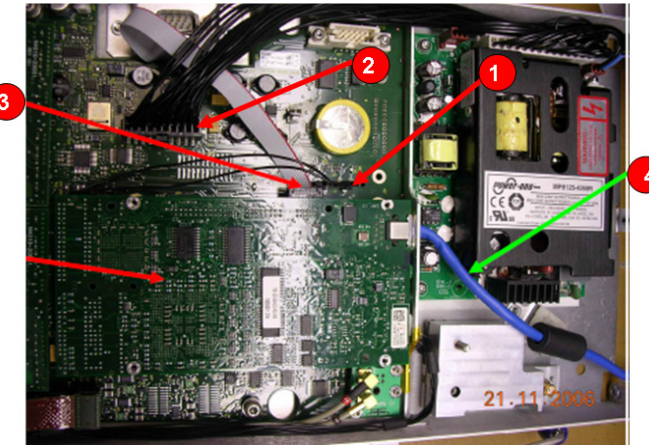
Instructions	Visual
<ul style="list-style-type: none"> Use the T10 Torx screwdriver bit to remove the 4 captive screws and remove the bumper foot. <p>Note:</p> <ul style="list-style-type: none"> You need to remove the bottom feet first before removing the cover. 	 <p>Figure 24</p>
<ul style="list-style-type: none"> Use a T20 Torx screwdriver bit to remove four screws located at the rear panel. Pull and remove the cover at the rear panel. See Figure 25 for more details. 	 <p>Figure 25</p>

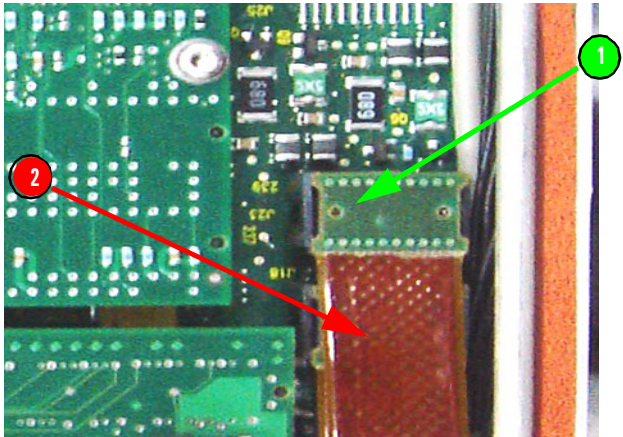
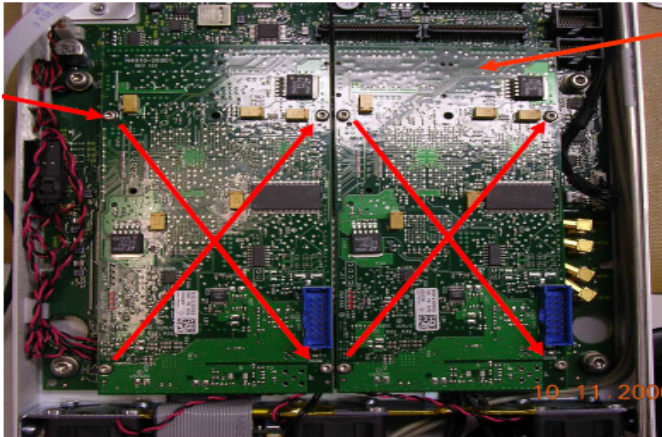
Instructions	Visual
<ul style="list-style-type: none"> Lift and remove the line module from the power supply unit. Refer to Figure 26. 	 <p data-bbox="611 791 711 817">Figure 26</p>
<ul style="list-style-type: none"> Use the T10 Torx screwdriver bit to remove the screw, and remove the lug from the power supply unit. Use the same tool to remove the three remaining screws. 	 <p data-bbox="611 1338 711 1364">Figure 27</p>

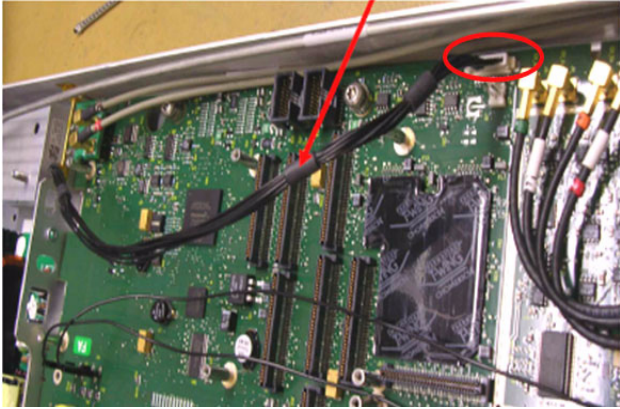
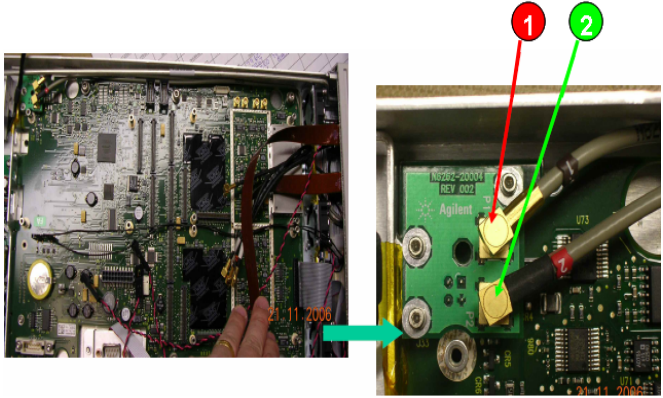
Instructions	Visual
<ul style="list-style-type: none"> • Step 1 - Lift and remove the power supply cable assembly from the mother board assembly. • Step 2 - Lift and remove the power supply unit. Disconnect the power supply cable assembly from the power supply unit. 	 <p>Figure 28</p>
<ul style="list-style-type: none"> • Lift and remove the power supply cable assembly from the power supply. 	 <p>Figure 29</p>

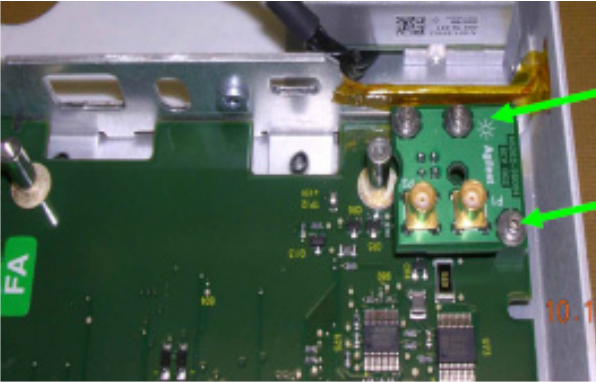
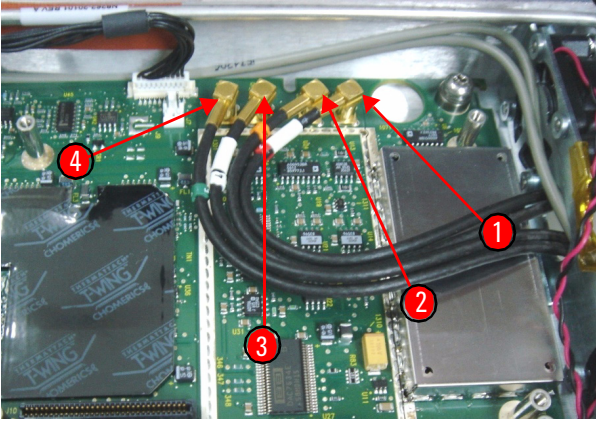
Mother Board, Measurement Board and PPMC Board Disassembly Instructions

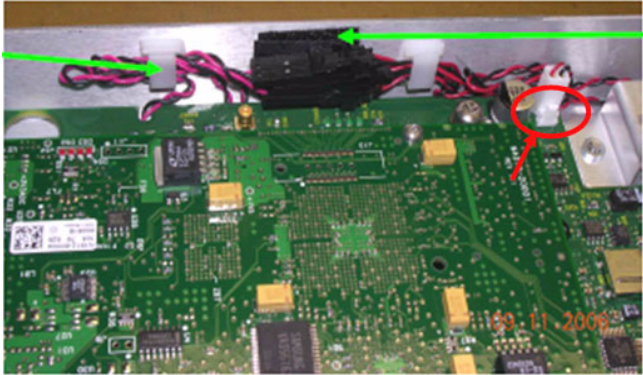
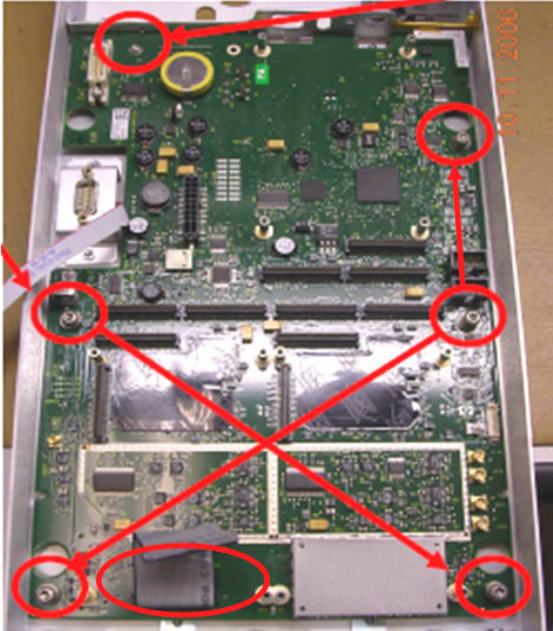
Instructions	Visual
<ul style="list-style-type: none"> Use the T10 Torx screwdriver bit to remove the 4 captive screws and remove the bumper foot. <p>Note:</p> <ul style="list-style-type: none"> You need to remove the bumper foot first before removing the cover. 	 <p>Figure 30</p>
<ul style="list-style-type: none"> Use a T20 Torx screwdriver bit to remove the four screws located at the rear panel. Pull and remove the cover at the rear panel. See Figure 31 for more details. 	 <p>Figure 31</p>

Instructions	Visual
<ul style="list-style-type: none"> Use the T8 Torx screwdriver bit to remove the four screws. Lift and remove PPMC assembly from the mother board assembly. 	 <p data-bbox="611 789 711 817">Figure 32</p>
<ul style="list-style-type: none"> Step 1 - Lift and remove Recorder 1 and Recorder 2 from J31 and J30 which are located on the mother board assembly. Step 2 - Lift and remove power supply cable assembly from the mother board. Step 3 - Disconnect the RS-232 ribbon cable from the PPMC assembly. Step 4 - Disconnect the LAN extension cable from PPMC assembly. <p>Note:</p> <ul style="list-style-type: none"> You will be able to remove PPMC assembly at this step. 	 <p data-bbox="611 1336 711 1364">Figure 33</p>

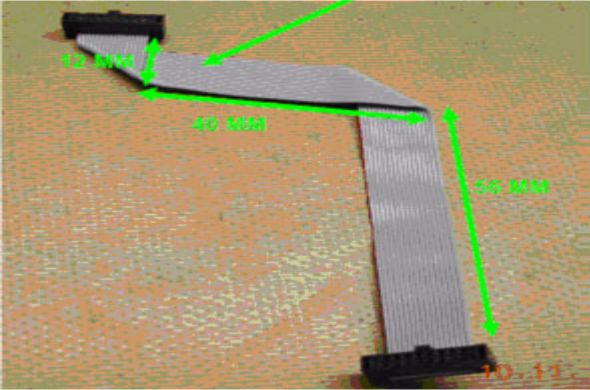
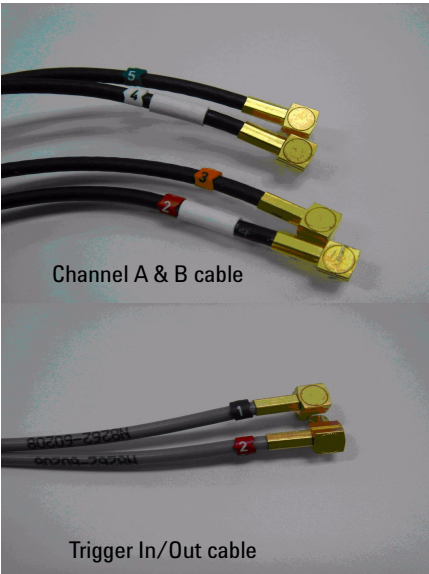
Instructions	Visual
<ul style="list-style-type: none"> • Step 1 - Lift and remove Channel B flex cable from J23. • Step 2 - Lift and remove Channel A flex cable from J18. 	 <p>Figure 34</p>
<ul style="list-style-type: none"> • Use T8 Torx screwdriver bit to remove the eight screws which hold the measurement to the mother board. • Lift and remove the measurement board assembly. <p>Note:</p> <ul style="list-style-type: none"> • You will be able to remove the measurement board assembly at this step. 	 <p>Figure 35</p>

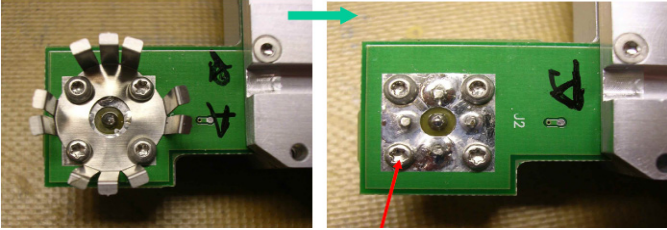
Instructions	Visual
<ul style="list-style-type: none"> Lift and remove calibrator cable assembly from the mother board assembly at J8. 	 <p>Figure 36</p>
<ul style="list-style-type: none"> Step 1 - Lift and remove the coaxial cable labeled 1 (Trig. In) from P1. Step 2 - Lift and remove the coaxial cable labeled 2 (Trig. Out) from P2. <p>Note:</p> <ul style="list-style-type: none"> These coaxial cable are originally routed on the right side of the chassis along the wall. Refer to Figure 37 for details. 	 <p>Figure 37</p>

Instructions	Visual
<ul style="list-style-type: none"> Use the 1.5 Hex Allen tool to disconnect the trigger board from the mother board assembly. Remove all the locks and flat washers. <p>Note:</p> <ul style="list-style-type: none"> You will be able to remove the trigger interface board assembly at this step. 	 <p>Figure 38</p>
<ul style="list-style-type: none"> Step 1 - Lift and remove the top coaxial cable labeled 2 (Channel B) from J2. Step 2 - Lift and remove the bottom coaxial cable labeled 3 (Channel B) from J3. Step 3 - Lift and remove the top coaxial cable labeled 4 (Channel A) from J4. Step 4 - Lift and remove the bottom coaxial cable labeled 5 (Channel A) from J5. <p>Note:</p> <ul style="list-style-type: none"> These coaxial cables originally routed under the measurement board assembly 	 <p>Figure 39</p>

Instructions	Visual
<ul style="list-style-type: none"> Disconnect the fan wire connector from the mother board assembly. Lift and remove the fan wire from the chassis wall. 	 <p>Figure 40</p>
<ul style="list-style-type: none"> Pull and remove the ribbon cable which is connected from the mother board assembly to the front panel board. Use the T20 Torx screwdriver bit and T8 screwdriver bit accordingly to remove the six screws which hold the mother board assembly to the chassis. Lift and remove the mother board assembly from chassis carefully. <p>Note:</p> <ul style="list-style-type: none"> You will be able to remove the mother board assembly at this step. 	 <p>Figure 41</p>

Reassembly Instructions

Instructions	Visual
<ul style="list-style-type: none"> • The reassembly process is simply the reverse of the disassembly process. However, there are various points to be aware of: <ul style="list-style-type: none"> ◦ Make sure the ribbon cable is shaped as in Figure 42 when you connect a new front panel board ribbon cable. 	 <p data-bbox="605 843 705 869">Figure 42</p>
<ul style="list-style-type: none"> • When connecting a new Trigger In/Out cable assembly or Channel A & B sensor flex cable, you are recommended to label each of the cable as follows: <ul style="list-style-type: none"> ◦ Channel A top cable labeled with 4 ◦ Channel A bottom cable labeled with 5 ◦ Channel B top cable labeled with 2 ◦ Channel B bottom cable labeled with 3 ◦ Trigger In cable labeled with 1 ◦ Trigger out cable labeled with 2 • See Figure 43 for details. 	 <p data-bbox="605 1515 705 1541">Figure 43</p>

Instructions	Visual
<ul style="list-style-type: none">• When connecting a new calibrator, make sure that you have removed the metal gasket by removing the attached screws using the T6 Torx screwdriver bit.• After removing the metal gasket, place back the screws to original position. <p>Note:</p> <ul style="list-style-type: none">• New calibrator comes with metal gasket.	 <p>Figure 44</p>

Additional Repair Notes

Replacing A Sensor Flex Assembly:

- The Sensor Flex Assembly is supplied straight
- Create A Sharp Bend (Figure 45): The flex circuit must be bent at a right-angle where it meets the printed circuit board. It can only be bent after heat has been applied to it (i. e. using a hot-air gun, or a similar device)

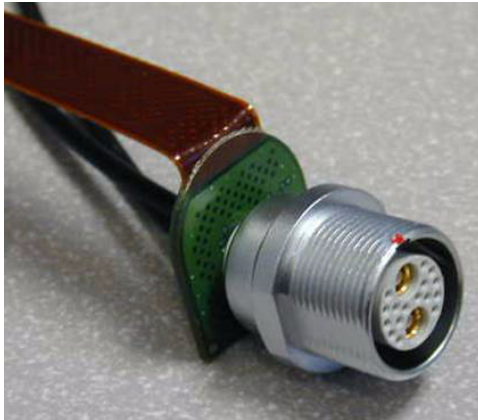


Figure 45 Creating a sharp bend

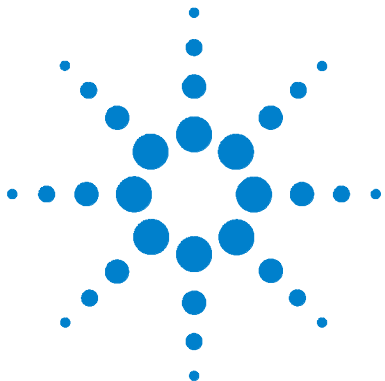
NOTE

- Once this sharp bend has been created, the flex should not be bent at this point again; to do so may break the tracking within the flex.
- Route and connect the sensor flex assembly: once the sensor flex assembly has been attached to the power meter; it should be folded to match the route taken by the assembly being replaced. Heat may be used to assist the folding of the flex.

Replacing the PPMC Assembly

- The PPMC Assembly is pre- programmed with N8262A firmware
- Always perform a firmware firmware to the instrument if the PPMC Assembly has been replaced
- Instrument Serial Number:
This can be stored in the PPMC Assembly via the command:
`SERV: SNUM <CHARACTER DATA>`
- Instrument Option(s):
This/these can be stored in the PPMC Assembly via the command:
`SERV: OPT "< CHARACTER DATA>"`

Refer to the *Programming Guide* for further details on the use of these commands.



7 Contacting Agilent Technologies

Introduction	98
Before Calling Agilent Technologies	99
Check the Basics	100
Instrument Serial Numbers	101
Agilent Sales and Service Offices	102
Returning Your Power Meter for Service	103
Useful Web Pages	104

This chapter details what to do if you have a problem with your power meter.



Introduction

Contacting Agilent Technologies

This section details what to do if you have a problem with your power meter. If you have a problem with your power meter, first refer to the page titled [“Before Calling Agilent Technologies”](#). This section contains a checklist that helps identify some of the most common problems. If you wish to contact Agilent Technologies about any aspect of the power meter, from service problems to ordering information, refer to the page titled [“Agilent Sales and Service Offices”](#). If you wish to return the power meter to Agilent Technologies, refer to the section titled [“Returning Your Power Meter for Service”](#).

Before Calling Agilent Technologies

Before calling Agilent Technologies or returning the power meter for service, please make the checks listed in [“Check the Basics”](#) on page 100. If your power meter is covered by a separate maintenance agreement, please be familiar with the terms.

Agilent Technologies offers several maintenance plans to service your power meter after warranty expiration. Call your Agilent Technologies Sales and Service Center for full details.

If the power meter becomes faulty and you wish to return the faulty instrument, follow the description on how to return the faulty instrument in [“Returning Your Power Meter for Service”](#) on page 103.

Check the Basics

Problems can be solved by repeating what was being performed when the problem occurred. A few minutes spent in performing these simple checks may eliminate time spent waiting for instrument repair. Before calling Agilent Technologies or returning the power meter for service, please make the following checks:

- Check that the line socket has power.
- Check that the power meter is plugged into the proper ac power source.
- Check that the power meter is switched on.
- Check that the other equipment, cables, and connectors are connected properly and operating correctly.
- Check the equipment settings in the procedure that was being used when the problem occurred.
- Check that the test being performed and the expected results are within the specifications and capabilities of the power meter.
- Check the power meter display for error message.
- Check operation by performing the self tests.
- Check with a different power sensor.

Instrument Serial Numbers

Agilent Technologies makes frequent improvements to its products to enhance their performance, usability and reliability. Agilent Technologies service personnel have access to complete records of design changes for each instrument. The information is based on the serial number and option designation of each power meter.

Whenever you contact Agilent Technologies about your power meter have a complete serial number available. This ensures you obtain the most complete and accurate service information. The serial number can be obtained by:

- Querying the power meter over a remote interface (via the *IDN? Command).
- From the serial number label.

The serial number label is attached to the bottom of each Agilent Technologies instrument. This label has two instrument identification entries. The first provides the instruments serial number and the second provides the identification number for each option built into the instrument.

The serial number is divided into two parts: the prefix (two letters and the first four numbers), and the suffix (the last four numbers).

The prefix letters indicate the country of manufacture. This code is based on the ISO international country code standard, and is used to designate the specific country of manufacture for the individual product. The same product number could be manufactured in two different countries. In this case the individual product serial numbers would reflect different country of manufacture codes. The prefix also consists of four numbers. This is a code identifying the date of the last major design change.

The suffix indicates an alpha numeric code which is used to ensure unique identification of each product throughout Agilent Technologies.

Agilent Sales and Service Offices

In any correspondence or telephone conversations, please refer to the power meter by its model number and full serial number. With this information, the Agilent representative can quickly determine whether your unit is still within its warranty period.

UNITED STATES	Agilent Technologies (tel) 1 800 829 4444
CANADA	Agilent Technologies Canada Inc., Test & Measurement (tel) 1 877 894 4414
EUROPE	Agilent Technologies, Test & Measurement, European Marketing Organization (tel) (31 20) 547 2000
JAPAN	Agilent Technologies Japan Ltd. (tel) (81) 426 56 7832 (fax) (81) 426 56 7840
LATIN AMERICA	Agilent Technologies, Latin America Region Headquarters, USA (tel) (305) 267 4245 (fax) (305) 267 4286
AUSTRALIA and NEW ZEALAND	Agilent Technologies Australia Pty Ltd. (tel) 1-800 629 4852 (Australia) (fax) (61 3) 9272 0749 (Australia) (tel) 0-800 738 378 (New Zealand) (fax) (64 4) 802 6881 (New Zealand)
ASIA PACIFIC	Agilent Technologies, Hong Kong (tel) (852) 3197 7777
You can visit our website:	www.agilent.com/find/assist

Returning Your Power Meter for Service

Use the information in this section if you need to return your power meter to Agilent Technologies.

Packaging the power meter for shipment to Agilent Technologies for service

- Fill in a blue service tag (available at the end of most hardcopy *Agilent Service Guides*) and attach it to the power meter. Please be as specific as possible about the nature of the problem. Send a copy of any or all of the following information:
 - Any error messages that appeared on the power meter display.
 - Any information on the performance of the power meter.

CAUTION

Power meter damage can result from using packaging materials other than those specified. Never use styrene pellets in any shape as packaging materials. They do not adequately cushion the power meter or prevent it from shifting in the carton. Styrene pellets cause power meter damage by generating static electricity and by lodging in the rear panel.

- Use the original packaging materials or a strong shipping container that is made of double-walled, corrugated cardboard with 159 kg (350 lb) bursting strength. The carton must be both large enough and strong enough to accommodate the power meter and allow at least 3 to 4 inches on all sides of the power meter for packing material.
- Surround the power meter with at least 3 to 4 inches of packing material, or enough to prevent the power meter from moving in the carton. If packing foam is not available, the best alternative is SD- 240 Air Cap™ from Sealed Air Corporation (Commerce, CA 90001). Air Cap looks like a plastic sheet covered with 1- 1/4 inch air filled bubbles. Use the pink Air Cap to reduce static electricity. Wrap the power meter several times in the material to both protect the power meter and prevent it from moving in the carton.
- Seal the shipping container securely with strong nylon adhesive tape.
- Mark the shipping container “FRAGILE, HANDLE WITH CARE” to ensure careful handling.
- Retain copies of all shipping papers.

Useful Web Pages

- Main Product Page
www.agilent.com/find/N8262A
- Performance Test & Calibration Software
www.calsw.tm.agilent.com

www.agilent.com

Contact us

To obtain service, warranty or technical support assistance, contact us at the following phone numbers:

United States:

(tel) 800 829 4444 (fax) 800 829 4433

Canada:

(tel) 877 894 4414 (fax) 800 746 4866

China:

(tel) 800 810 0189 (fax) 800 820 2816

Europe:

(tel) 31 20 547 2111

Japan:

(tel) (81) 426 56 7832 (fax) (81) 426 56 7840

Korea:

(tel) (080) 769 0800 (fax) (080) 769 0900

Latin America:

(tel) (305) 269 7500

Taiwan:

(tel) 0800 047 866 (fax) 0800 286 331

Other Asia Pacific Countries:

(tel) (65) 6375 8100 (fax) (65) 6755 0042

Or visit Agilent worldwide Web at:

www.agilent.com/find/assist

Product specifications and descriptions in this document are subject to change without notice.

© Agilent Technologies, Inc. 2007

Printed in Malaysia

First Edition, May 4, 2007

N8262-90004



Agilent Technologies