

# **N5532A Sensor Module User's and Service Guide**

**for the Agilent N5531S and N5530S Measuring Receiver Systems**



**Manufacturing Part Number: N5532-90004  
Supersedes Part Number: N5532-90003**

**Printed in USA**

**March 2006**

© Copyright 2004-2006 Agilent Technologies

---

## Notice

The information contained in this document is subject to change without notice.

Agilent Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Agilent Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

The following safety symbols are used throughout this manual. Familiarize yourself with the symbols and their meaning before operating this equipment.

---

### WARNING

***Warning* denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a warning note until the indicated conditions are fully understood and met.**

---

### CAUTION

*Caution* denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a caution sign until the indicated conditions are fully understood and met.

---

### NOTE

*Note* calls out special information for the user's attention. It provides operational information or additional instructions of which the user should be aware.

---

---

## Warranty

This Agilent Technologies instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Agilent Technologies will, at its option, either repair or replace products that prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Agilent Technologies. Buyer shall prepay shipping charges to Agilent Technologies and Agilent Technologies shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to Agilent Technologies from another country.

---

## 1. General Information

Description . . . . .	6
N5532A Block Diagram . . . . .	7
Instruments Covered by Manual . . . . .	8

## 2. Installation

Initial Inspection . . . . .	10
Operating Precautions . . . . .	10
Installing the Calibration Factors . . . . .	12
Installing the Cal Factors in the N5530S . . . . .	12
Installing the Cal Factors in the N5531S . . . . .	13

## 3. Specifications

N5532A Sensor Module Specifications . . . . .	16
N5532A Sensor Module Supplemental Information . . . . .	18

## 4. Maintenance and Repair

Maintenance . . . . .	22
Repair . . . . .	23
Power sensor replacement . . . . .	23
Disassembly Hints for Options 504, 518, and 526 . . . . .	24
Re-assembly Hints for Options 504, 518, and 526 . . . . .	25
Disassembly Hints for Option 550 . . . . .	25
Re-assembly Hints for Option 550 . . . . .	26
Replaceable Parts . . . . .	28
Calibration . . . . .	32
Cal Factor Data File Format . . . . .	35
Contacting Agilent Technologies . . . . .	37

---

# Contents

---

# 1 General Information

This user guide contains information about installation, operation, product specifications, calibration data, maintenance and repair, and storage conditions of the N5532A Sensor Module.

---

## Description

The N5532A is intended to be used with the N5531S or N5530S Measuring Receiver System. It is essentially a power sensor with a power splitter at the input. See [Figure 1-1 on page 7](#). In use, the sensor module's two output cables are connected to a power meter (E4418/19, E4416/17, or N1911/12 Series) and the Performance Spectrum Analyzer (PSA) RF Input. When using an N1911 or N1912 Series power meter, it is necessary to use an adapter (N5532A Option 019) to connect the output cable of the sensor module to the power meter. The sensor module is calibrated such that the power meter indicates the power supplied by the source under test.

The N5532A Sensor Module is offered in four frequency configurations:

- Option 504 covers 100 kHz to 4.2 GHz
- Option 518 covers 10 MHz to 18 GHz
- Option 526 covers 30 MHz to 26.5 GHz
- Option 550 covers 30 MHz to 50 GHz

The sensor module accurately measures power levels from -20 dBm to +30 dBm (10  $\mu$ W to 1 W). Calibration Factor (Cal Factor) information is unique to each sensor module and is supplied on a floppy disc included with each N5532A. Please refer to [“Installing the Calibration Factors” on page 2-12](#) for more information on using the Cal Factor Data.


---

**NOTE** The N5532A Sensor Module is compatible **ONLY** with the newer E4418/19, E4416/17, or N1911/12 Series power meters. They are **NOT** compatible with the earlier 430 Series or 70100 power meters. If used with an N1911/12 Series power meter, an adapter (N5532A Option 019) is required to connect the dc cable to the power meter.

---

## N5532A Block Diagram

**Figure 1-1** N5532A Sensor Module

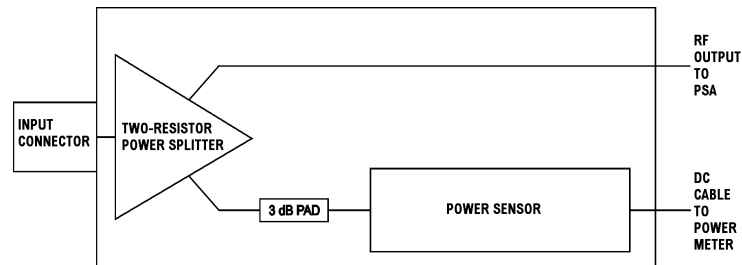

## Instruments Covered by Manual

These instruments have a two-part serial number: the prefix (two letters and the first four numbers), and the suffix (the last four numbers). The two letters identify the country in which the unit was manufactured. The four numbers of the prefix are a code identifying the date of the last major design change incorporated in your Agilent Technologies product. The four-digit suffix is a sequential number and coupled with the prefix, provides a unique identification for each unit produced. The contents of this manual apply directly to all serial numbers unless otherwise indicated.



---

## **2 Installation**

---

## Initial Inspection

Inspect the shipping container for damage. If the shipping container or packaging material is damaged, it should be kept until the contents of the shipment have been checked mechanically and electrically. If there is mechanical damage notify the nearest Agilent Technologies office as shown in [Table 4-3 on page 37](#). Keep the damaged shipping materials (if any) for inspection by the carrier and an Agilent Technologies representative.

## Operating Precautions

Maximum torque at the connector should NOT exceed 12 in-lb (135 Ncm) for the type-N connector, 8 in-lb (90 Ncm) for the APC 3.5 mm connector, or 8 in-lb (90 Ncm) for the 2.4 mm connector to avoid damage to the connector.

Connect the sensor module by turning only the hex nut portion of the connector. Damage can occur if torque is applied to the sensor module body.

The connector plastic insulator bead deteriorates when contacted by acetone, trichloroethylene, carbon tetrachloride, benzene, etc.

---

### WARNING

**BEFORE CONNECTING THE SENSOR MODULE TO OTHER INSTRUMENTS, ensure that all instruments are connected to the protective (earth) ground. Any interruption of the protective earth grounding will cause a potential shock hazard that could result in personal injury and cause damage to the sensor module.**

---

---

**CAUTION**

To prevent physical damage to the sensor module or device-under-test (DUT), pay careful attention to the mechanical setup. The mechanical design of the sensor module minimizes SWR. However, the weight and length of the module, combined with the stiffness of the interconnect cables, enables the exertion of considerable leverage at the module's input connector. To prevent physical damage to the sensor module, the DUT, and the mating connectors, and to assure best electrical performance, observe the following precautions:

1. Do not permit the interconnect cables of the sensor module to extend out where anyone passing by could accidentally push and exert leverage on the cables. This consideration is especially important when the DUT is a light-weight instrument that sits freely on a table.
  2. When possible, lay the sensor module on a supportive surface with the serial number label facing up. This consideration is especially important when rigid RF adapters are used to directly interconnect the sensor module to the DUT. RF adapters lengthen the leverage arm of the sensor module and are often fragile. When level-accuracy requirements permit, use flexible cables to interconnect the sensor module to the DUT.
  3. Do not bend or coil the interconnect cables (more than necessary) to a diameter circumscribing less than 150 mm (6 in.). This precaution often applies when the instruments are rack-mounted and interconnected to rear-panel connectors. Repeated flexing of coiled, interconnect cables can degrade SWR and increase RFI of the RF output cable.
  4. Do not attempt to tighten the type-N connector by twisting the body of the sensor module.
-

## Installing the Calibration Factors


Cal factors can be entered and stored in an internal table (Automatic Cal Factors) in the PSA's non-volatile memory. The table is automatically accessed during RF power measurements (after the measuring receiver has tuned to the frequency) to correct for the non-linear response of the power sensor. If no entry in the table directly corresponds to the frequency being measured, the measuring receiver derives a cal factor through linear interpolation using the nearest calibration points in the table.

### Installing the Cal Factors in the N5530S

There are two methods of installing the sensor module calibration factors (cal factors) in the N5530S Measuring Receiver System.

The first method loads and saves the cal factors using the PC. The second method uses the PSA to load the data.

**Figure 2-1** Utilities Menu

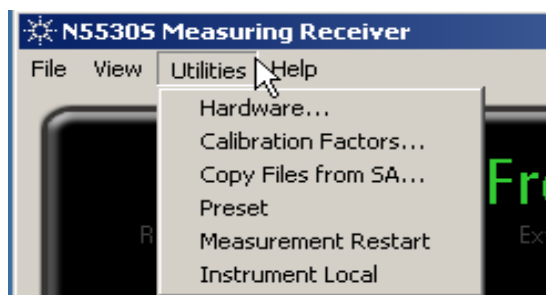

Both methods are accessed through the Utilities drop-down menu (See [Figure 2-1](#), "Utilities Menu.")

#### Using the PC to Load and Save the Cal Factors

1. Insert the N5532A Sensor Module Data Disk in the PC A:\ drive.

**NOTE**

If your PC does not have a floppy disc drive, use the PSA to save your cal data to your PC. Then use this procedure to load the sensor cal factors into the system.

2. Select **Calibration Factors** to bring up the **Calibration View Edit** dialog box.
3. Press **Load Cal File** in the **Calibration View Edit** dialog box. The **Open Calibration File** dialog box appears.
4. Navigate to the PC A:\ drive if necessary and select the CFData.XML file.

---

**NOTE**

---

If you obtained the cal data from the PSA, go to the directory you specified in [Step 2](#) of the next section to load the data.

5. Press **Open**.
6. Press **OK** to apply the Cal Factors to the system.

### Using the PSA to Save the Cal Factors to the PC

1. Insert the N5532A Sensor Module Data Disk into the PSA A:\ drive.
2. Select **Copy Files from SA** under the **Utilities** menu option of the N5531S or N5530S User Interface. Browse to the location you wish to place the SA floppy disc files.
3. Click **OK** to copy the calibration factor files to the specified location. Three files appear: CALTABLE.XSL (enables viewing with web browser), CFDATA.XML (actual Cal Factor Data), and CFCERT.DOC (Cal Factor Certification)<sup>1</sup>.
4. To load this data into the system, follow steps 2 through 6 in the section entitled, [“Using the PC to Load and Save the Cal Factors”](#) on [page 2-12](#).

### Installing the Cal Factors in the N5531S

1. Insert the floppy disk in to PSA floppy disk drive. Make sure the disk is for the sensor module you are using.
2. Press **MODE, Measuring Receiver, File, Load, Type**, and select **Calibration Factor** as the file type. Press **Dir Up, Up Arrow, Dir Select** to ensure the “A” drive is selected. Then press **Load Now** to load the cal factor file (CFDATA.XML) to the PSA spectrum analyzer.

---

1. . Provides traceability to National Institute of Standards and Technology or NIST



---

## 3 Specifications

The specifications listed in [Table 3-1, “Specifications,”](#) are the performance standards or limits against which the sensor module may be tested. These specifications are valid ONLY after proper calibration of the power meter.

## N5532A Sensor Module Specifications

**Table 3-1 Specifications**

Description	Specification	Comments
<b>Frequency Range</b> Option 504 Option 518 Option 526 Option 550	100 kHz to 4.2 GHz 10 MHz to 18 GHz 30 MHz to 26.5 GHz 30 MHz to 50 GHz	
<b>Power Range</b>	+30 dBm (1 watt) to -20 dBm (10 $\mu$ W)	
<b>Maximum Safe Power</b>	+30 dBm	Average Total Power
<b>Sensor Module Linearity</b> <i>Opt. 504</i> +30 to +20 dBm < +20 dBm	$\pm$ 3% negligible	
<b>Sensor Module Linearity</b> <i>Opt. 518</i> +30 to +20 dBm < +20 dBm	$\pm$ 3% negligible	
<b>Sensor Module Linearity</b> <i>Opt. 526</i> +30 to +20 dBm < +20 dBm	$\pm$ 3% negligible	
<b>Sensor Module Linearity</b> <i>Opt. 550</i> +30 to +20 dBm < +20 dBm	$\pm$ 3% negligible	
<b>Input SWR<sup>a</sup></b> <i>Opt. 504</i> 100 kHz to 2 GHz 2 GHz to 4.2 GHz	< 1.10:1 < 1.28:1	



**Table 3-1**      **Specifications**

Description	Specification	Comments
<b>Input SWR<sup>a</sup></b> <i>Opt. 518</i>  10 MHz to 2 GHz 2 GHz to 18 GHz	  < 1.10:1 < 1.28:1	
<b>Input SWR<sup>a</sup></b> <i>Opt. 526</i>  30 MHz to 2 GHz 2 GHz to 18 GHz 18 GHz to 26.5 GHz	  < 1.10:1 < 1.28:1 < 1.40:1	
<b>Input SWR<sup>a</sup></b> <i>Opt. 550</i>  30 MHz to 2 GHz 2 GHz to 18 GHz 18 GHz to 26.5 GHz 26.5 GHz to 33 GHz 33 GHz to 40 GHz 40 GHz to 50 GHz	  < 1.10:1 < 1.28:1 < 1.40:1 < 1.55:1 < 1.70:1 < 1.75:1	

a. When connected to PSA with at least 30 dB attenuation

## N5532A Sensor Module Supplemental Information

Table 3-2 Supplemental Information

Description	Supplemental Information	Comments
<b>Input Impedance</b>	50 ohms	
<b>Input Connector</b> Option 504 Option 518 Option 526 Option 550	Type-N (male) Type-N (male) APC 3.5 mm (male) 2.4 mm (male)	
<b>RF Output Insertion Loss</b> <i>Opt. 504</i>	7 dB @ 3 Hz to 8 dB @ 4.2 GHz	Typical
<b>RF Output Insertion Loss</b> <i>Opt. 518</i>	7 dB @ 3 Hz to 11 dB @ 18 GHz	Typical
<b>RF Output Insertion Loss</b> <i>Opt. 526</i>	7 dB @ 3 Hz to 13 dB @ 26.5 GHz	Typical
<b>RF Output Insertion Loss</b> <i>Opt. 550</i>	7 dB @ 3 Hz to 16 dB @ 50 GHz	Typical
<b>Military Specification</b>	Type tested to an equivalent of MIL-PRF-28800F class 3 environmental specifications	
<b>Altitude</b> Operating Storage	< 4600 meters (15,000 feet) <7600 meters (25,000 feet)	
<b>Temp. Range</b> Operating Storage	0 to +55 °C – 40 to 70 °C	
<b>Calibration Cycle</b>	1 year	
<b>Weight</b>	0.72 kgm (1.5 lb)	
<b>Shipping Weight</b>	1.28 kgm (2.8 lb)	

**Table 3-2 Supplemental Information**

<b>Description</b>	<b>Supplemental Information</b>	<b>Comments</b>
<b>Dimensions</b> Height Width Length <sup>a</sup> Length <sup>b</sup>	51.2 mm (2 in) 62.4 mm (2.5 in) 210 mm (8.3 in) 1905 mm (75 in)	

- a. From input connector to end of plastic casing.
- b. From input connector to end of cable.



---

## **4 Maintenance and Repair**

---

## Maintenance

### Cleaning Solutions

A solution of pure isopropyl or ethyl alcohol can be used to clean the connector (keeping in mind its flammable nature).

### Connector Cleaning


Clean the connector face using a cotton swab dipped in isopropyl alcohol. If the swab is too big, use a round wooden toothpick wrapped in a lint free cotton cloth dipped in isopropyl alcohol.



## Repair

### Power sensor replacement

If the power sensor requires replacement, 2 screws must be removed from the RF input connector flange of the replacement assembly. Prepare the replacement power sensor by removing the 2 screws using a 1.5-mm hex driver. Refer to [Figure 4-1](#) for location of screws. Note that the screws you need to remove are on the opposite end and opposite side of the notch in the power sensor cable connector.

**Figure 4-1** Location of Screws to be Removed

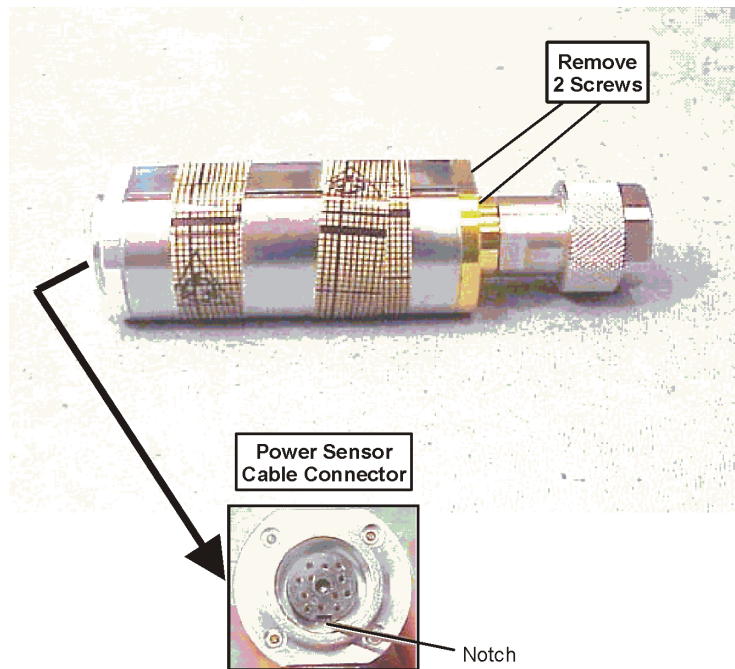

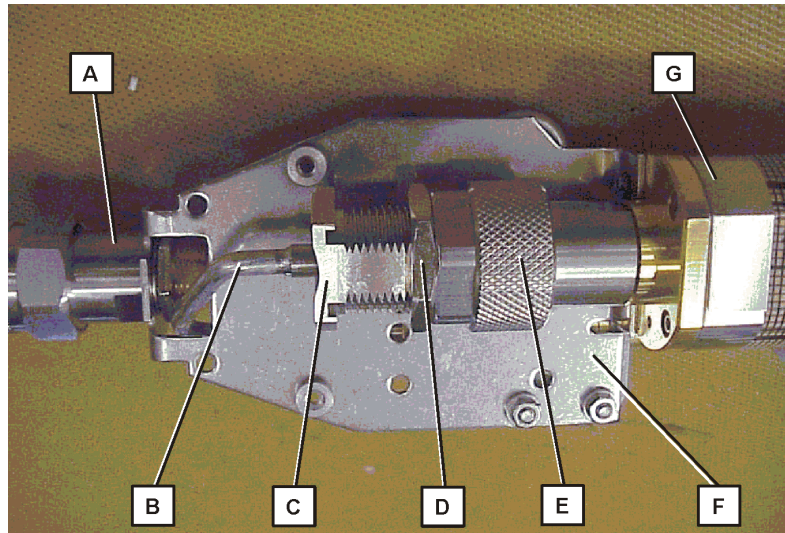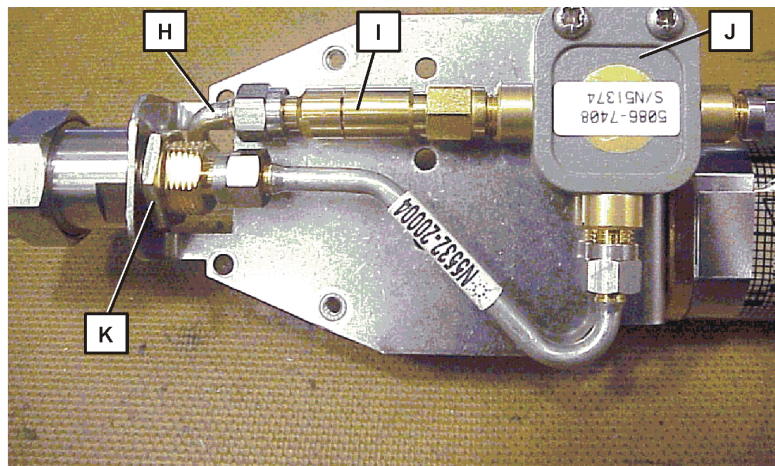**Disassembly Hints for Options 504, 518, and 526****Figure 4-2** Options 504, 518, and 526; Top View**Figure 4-3** Options 504, 518, and 526; Bottom View

**Hints for disassembling Option 504, 518, or 526.** Refer to [Figure 4-2](#) and [Figure 4-3](#):

**NOTE**

Option 526 will appear slightly different than shown in [Figure 4-2](#) and [Figure 4-3](#), due to the different connectors (APC 3.5 mm instead of Type N).

- The bulkhead connector (A) must be removed before the power sensor to 3 dB attenuator cable (B, H) can be removed.
- To remove the power sensor to 3 dB attenuator cable (B, H), hold



connector (C) with 3/4-inch open-end wrench while loosening nut (D) and power sensor connector (E).

- To remove power splitter (J), loosen connectors but do not remove the 2 cables or the 3 dB attenuator until the hardware that fastens the power splitter to the main deck (F) has been removed. This will keep from damaging the center conductors.

## Re-assembly Hints for Options 504, 518, and 526


**Hints for assembling Option 504, 518, or 526 after repair.** Refer to [Figure 4-2](#) and [Figure 4-3](#).


- Place the power sensor to 3 dB attenuator cable (B, H) through the rectangular hole in the main deck (F) before installing the bulkhead connector (A). Place lock washer and nut on bulkhead connector and torque to 25 inch-pounds.
- When fastening the power sensor (G) to the main deck (F), torque the 2 screws holding it to 3 inch-pounds.
- Connect the power sensor connector (E) to the cable (B) and torque to 8 inch-pounds while holding connector (C) with a 3/4-inch open-end wrench. Then, while still holding connector (C), tighten the nut (D) against the power sensor connector (E).
- When installing the power splitter (J), connect the 3 dB attenuator (I) and the 2 cables before fastening the power splitter to the main deck (F).
- All coax connectors should be torqued to 8 inch-pounds.

## Disassembly Hints for Option 550

Figure 4-4

Option 550; Top View

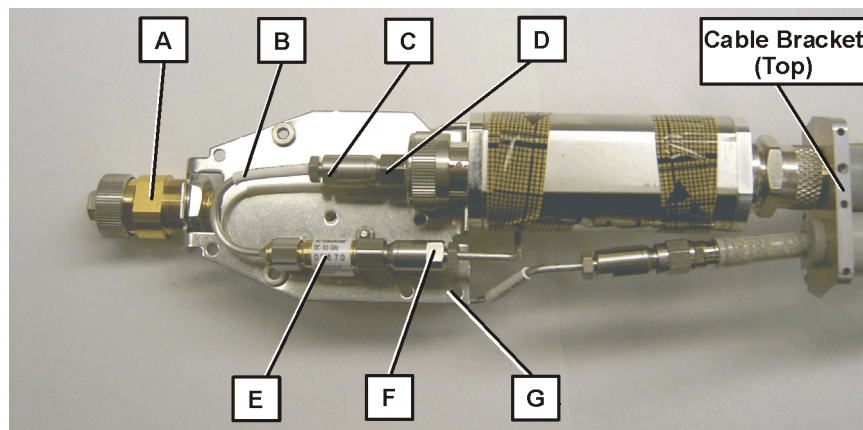

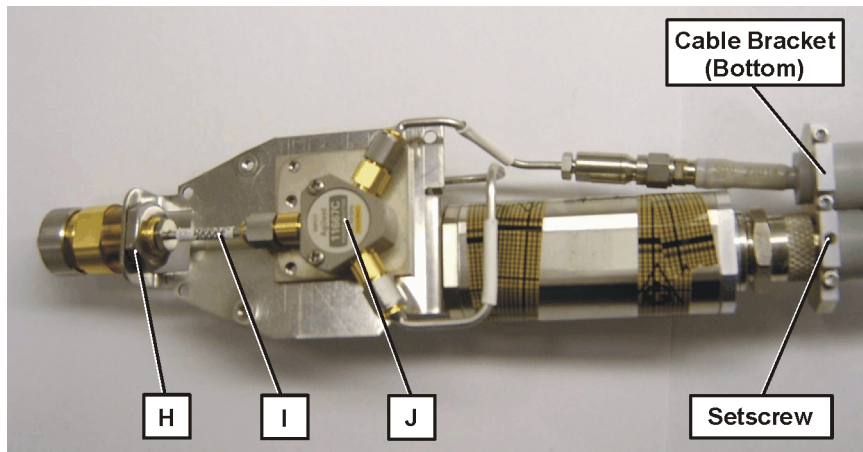**Figure 4-5**      **Option 550; Bottom View**

**Hints for disassembling Option 550.** Refer to [Figure 4-4](#) and [Figure 4-5](#).

- When removing the power sensor to 3 dB attenuator cable (B), hold connector (C) with a 1/4-inch open-end wrench while loosening the power sensor connector (D) using a 5/16-inch open-end wrench.
- When removing the power splitter (J), loosen the 3 connectors but do not disconnect the cables until the hardware that fastens the power splitter to the main deck (G) has been removed. This will keep from damaging the center conductors.
- When removing the 3 dB attenuator (E), hold connector (F) with a 1/4-inch open-end wrench while loosening the attenuator's connector using a 5/16-inch open-end wrench.

### Re-assembly Hints for Option 550

**Hints for assembling Option 550 after repair.** Refer to [Figure 4-4](#) and [Figure 4-5](#).

- To install the bulkhead connector (A), place lock washer and nut (H) on bulkhead connector and torque to 25 inch-pounds.
- When fastening the power sensor to the main deck (G), torque the 2 screws holding it to 3 inch-pounds.
- Connect the power sensor connector (D) to the cable (B) and torque to 8 inch-pounds while holding connector (C) with a 1/4-inch open-end wrench.
- When connecting the 3 dB attenuator (E) to the 3 dB attenuator to power splitter cable, torque to 8 inch-pounds while holding connector (F) with a 1/4-inch open-end wrench.

- When installing the power splitter (J), connect the 3 cables before fastening the power splitter to the main deck (G). Hold the nut with a 3/16-inch open-end wrench while tightening the corresponding screw (2 each) to secure the power splitter to the main deck.
- All coax connectors should be torqued to 8 inch-pounds.

**Replaceable Parts****Table 4-1 N5532A Series Sensor Module Replaceable Parts**

<b>Description</b>	<b>Part Number</b>	<b>Opt 504 (4 GHz)</b>	<b>Opt 518 (18 GHz)</b>	<b>Opt 526 (26 GHz)</b>	<b>Opt 550 (50 GHz)</b>
Screw, metric, 3.0 x 0.50 Front screws for cover attachment	0515-0667	X	X	X	X
Screw, socket head cap, metric 1.6 x 0.35, 10 mm long For sensor mounting	0515-1185	X	X	X	X
Washer, lock, helical, #0, 0.062-in-ID, 0.1-in-OD For sensor mounting	2190-0572	X	X	X	X
Screw, tapping, 4-20, 0.835 inch long, pan head, TORX For support block mounting and rear screws for cover attachment	0624-0824	X	X	X	X
Screw, 4-40, 0.562 inch long, pan head, Pozidrive For power splitter mounting	2200-0091	X	X	X	
Washer, lock, #4, helical, 0.115-in-ID For power splitter mounting	2190-0003	X	X	X	
Washer, lock, 3/8 inch, 0.384-in-ID For mounting 2.4 mm input connector	2190-0022				X
Hex nut, dbl chamfer, M10 x 1.0, 6 mm thick For mounting 2.4 mm input connector	0535-0992				X

**Table 4-1 N5532A Series Sensor Module Replaceable Parts**

Description	Part Number	Opt 504 (4 GHz)	Opt 518 (18 GHz)	Opt 526 (26 GHz)	Opt 550 (50 GHz)
Nut, 4-40, 0.063-in-thick For power splitter mounting	2260-0002	X	X	X	
Washer, lock, 7/16 inch, 0.439-in-ID For Type-N connector	2190-0104	X	X		
Hex nut, UNEF-2B-THD, 0.094-in-thick For Type N connector	2950-0132	X	X		
Washer, lock, helical, #2, 0.088-in-ID For cable bracket	2190-0112	X	X	X	X
Screw, socket head cap, 2-56, 0.25-in-long For cable bracket	3030-0053	X	X	X	X
Setscrew, 4-40, 0.25-in-long For sensor cable bracket (see <a href="#">Figure 4-5</a> )	3030-0824	X	X	X	X
Setscrew, 6-32, 0.125-in-long For input connector	3030-0022			X	
Hex nut, 2-56, 0.062-in-thick For power splitter mounting	0610-0002				X
Deck, main	N5532-00001	X	X		X
Deck, main (526)	N5532-20001			X	
Deck support block (right)	N5532-20021	X	X	X	X
Deck support block (left)	N5532-20022	X	X	X	X
Spacer For splitter	N5532-20003				X

**Table 4-1 N5532A Series Sensor Module Replaceable Parts**

Description	Part Number	Opt 504 (4 GHz)	Opt 518 (18 GHz)	Opt 526 (26 GHz)	Opt 550 (50 GHz)
Bracket, cable (top) (see <a href="#">Figure 4-4</a> )	11722-20006	X	X	X	X
Bracket, cable (bottom) (see <a href="#">Figure 4-5</a> )	11722-20007	X	X	X	X
Cover, plastic (top)	11722-40001	X	X	X	X
Cover, plastic (bottom)	11722-40002	X	X	X	X
Cable clip For sensor and RF output cables	11722-40003	X	X	X	X
Label, option ID	5185-1867	X	X	X	X
Label, product ID	N5532-80004	X	X	X	X
3 dB attenuator, 26 GHz	08493-60013	X	X	X	
3 dB attenuator, 50 GHz	08490-60010				X
Input connector, Type-N	5064-3806	X	X		
Input connector, 3.5 mm	08673-60040			X	
Input connector, 2.4 mm	N5532-20015				X
Power splitter, 26.5 GHz	5086-7408	X	X	X	
Power splitter, 50 GHz	N5532-60002				X
Power sensor, 4.2 GHz	N5532-60011	X			
Power sensor, 18 GHz	N5532-60012		X		
Power sensor, 26.5 GHz	N5532-60004			X	
Power sensor, 50 GHz	N5532-60005				X

**Table 4-1 N5532A Series Sensor Module Replaceable Parts**

<b>Description</b>	<b>Part Number</b>	<b>Opt 504 (4 GHz)</b>	<b>Opt 518 (18 GHz)</b>	<b>Opt 526 (26 GHz)</b>	<b>Opt 550 (50 GHz)</b>
Cable, input connector to splitter	N5532-20004	X	X		
Cable, input connector to splitter	N5532-20007			X	
Cable, RF input, 2.4 mm	N5532-20009				X
Cable, splitter to output	N5532-20018	X	X	X	
Cable, splitter to output	N5532-20010				X
Cable, splitter to attenuator	N5532-20011				X
Cable, attenuator to sensor	N5532-20012				X
Cable, attenuator to sensor	N5532-20006			X	
Cable, attenuator to sensor	N5532-20019	X	X		
Cable, sensor output, shielded	N5532-60010	X	X	X	X
Cable, RF output, 3.5 mm, 66 inches long	N5532-20013	X	X	X	
Cable, RF output, 2.4 mm, 66 inches long	N5532-20017				X

---

## Calibration

Agilent Technologies recommends that repair and calibration of the N5532A Sensor modules be performed at an Agilent Technologies service center. The service center has the required calibration standards and the ability to produce a calibration data disk in the format that the N5531S or N5530S Measuring Receiver System requires.

However, if your cal lab currently calibrates Agilent thermocouple power sensors such as the 8481A, 8482A, or 8487A, and the calibration standards and test metrology used meet the N5532A specifications listed in [Table 3-1 on page 16](#), you may wish to develop your own calibration process. Refer to Agilent Technologies Application Notes 1449-1 through 1449-4 for information regarding the fundamentals of RF and microwave power measurements. Application Note 1449-1 includes an overview of the theory and practice of sensor calibration.


[Figure 1-1 on page 7](#) shows that the N5532A Sensor Modules consist basically of a power splitter and an Agilent 848xA Power Sensor with a padded input. The module is calibrated as a standard power sensor with the RF OUTPUT TO PSA line terminated with a matched 50  $\Omega$  load.

The calibration power at the input should be 0 dBm  $\pm$ 2 dB. This is to ensure enough power is provided so the sensing element in the N5532A Sensor Module stays above its noise floor. The maximum calibration must not exceed +10 dBm to avoid non-linearities in the calibration standards (reference sensor or standard sensor).

The presence of the splitter and cable create a ripple in the sensor's input efficiency, so many frequency calibration points are required to accurately characterize the sensor module.



**Figure 4-6** Cal Factor (Ripple Due to Splitter and PSA Line Loading)

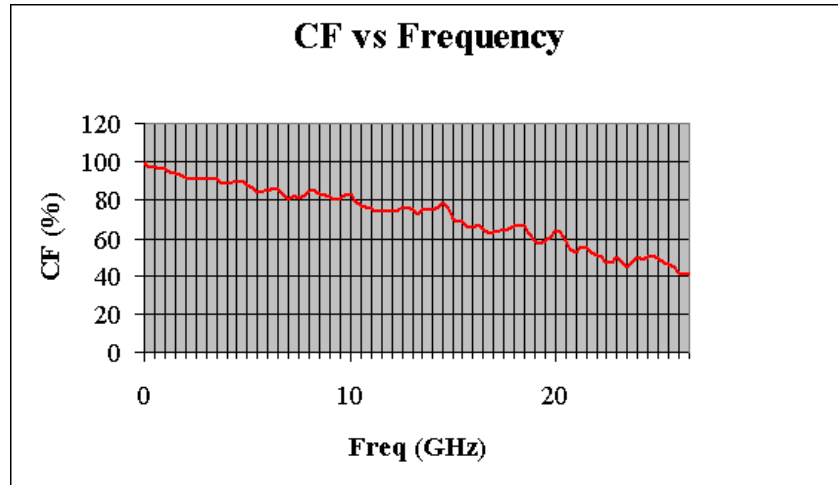

**Table 4-2 Recommended Calibration Points**

<b>N5532A Power Sensor</b>	<b>Frequency Points</b>
Option 504	100 kHz
	300 kHz
	1 MHz
	3 MHz
	5 MHz
	10 MHz
	30 MHz
	50 MHz
Option 518	100 MHz to 4.2 GHz in 100 MHz steps
	10 MHz
	30 MHz
	50 MHz
Option 526	100 MHz to 18 GHz in 100 MHz steps
	30 MHz
	50 MHz
Option 550	100 MHz to 26.5 GHz in 100 MHz steps
	30 MHz
	50 MHz
Option 550	100 MHz to 50 GHz in 100 MHz steps
	30 MHz
	50 MHz

Typical Cal Factor ranges for the 848xA Power Sensors are between 90% and 100%, depending on the efficiency of the sensor's thermocouple over the specified frequency range. With the added loss from the other passive components in front of the power sensor, there is approximately another 9 to 11 dB loss (or another 25% loss) from 50 MHz to 26.5 GHz. This, coupled with the fact that typical power sensor Cal Factor is defined with a constant power level at the input, and this application has a sloped power input, an additional 25% efficiency component is added. As a result, the N5532A Sensor Module will have about a 40% Cal Factor at 26.5 GHz. This is acceptable because the sensor is characterized with this behavior and thus will be corrected in the N5531S/30S Measuring Receiver System.

Upon calibrating the sensor module, the cal factor data is stored on a floppy disk. This disk allows you to transfer the cal data to the N5531S or N5530S Measuring Receiver System. Since there are hundreds of data points, manual entry is highly impractical.

## Cal Factor Data File Format

The N5532A data, "CFData.xml", is stored in an xml format. On each data disk, the data file is accompanied with an xsl file, "CalTable.xsl". This file contains the xml formatting instructions which are used by an xml viewer, such as Microsoft Internet Explorer. However, the xml file may be viewed by any text editor and will appear as shown below.

The system software does not need the xsl file because it's not trying to display the data. The system, however, does look for the specific "bookmarks" or "tags" used by the xml format. So, for the system to properly read the data from the file, the calibration data needs to be stored as shown in the following sample file.

**Figure 4-7 File Format for the N5532A Sensor Module Data Disk (Two Data Points Shown)**

```
<?xml version="1.0" encoding="utf-8"?>
<!--This file is used with the Agilent N5532A power sensor module.-->
<?xml-stylesheet type="text/xsl" href="CalTable.xsl"?>
<Calibration>
  <Version>1.0</Version>
  <ModelNumber>N5532A</ModelNumber>
  <Options>526</Options>
  <SerialNumber>US00010004</SerialNumber>
  <DateCalibrated>7/22/2004</DateCalibrated>
  <ReferenceCF>99</ReferenceCF>
  <CalFactor>
    <Frequency Unit= "Mhz">30</Frequency>
    <CalFactor Unit= "Percent">99.5127892581548</CalFactor>
    <CalFactorUnc Unit= "Percent">1.73435915811032</CalFactorUnc>
    <ReflectionMag Unit= "Linear">6.23774528503418E-03</ReflectionMag>
    <ReflectionPhase Unit= "Degrees">-82.1718749999999</ReflectionPhase>
    <ReflectionMagUnc Unit= "Linear">1.10418066980155E-03</ReflectionMagUnc>
  </CalFactor>
  <CalFactor>
    <Frequency Unit= "Mhz">50</Frequency>
    <CalFactor Unit= "Percent">99</CalFactor>
    <CalFactorUnc Unit= "Percent">1.24220367426375</CalFactorUnc>
    <ReflectionMag Unit= "Linear">8.19176435470581E-04</ReflectionMag>
    <ReflectionPhase Unit= "Degrees">65.3320312499999</ReflectionPhase>
    <ReflectionMagUnc Unit= "Linear">2.91455027642453E-03</ReflectionMagUnc>
  </CalFactor>
</Calibration>
```

The structure of the file is as follows:

- The first 3 lines are for the xml format.
- The fourth line marks the start of the calibration data, while the last line marks the end of the calibration data.
- The next 5 lines contain sensor-specific information: data format version, model number, option, serial number, and date calibrated.

## Maintenance and Repair

### Calibration

- The next line is the reference calibration factor.
- The rest of the data file is filled with frequency-dependent data. There are 6 lines for every data point and each data point is marked by the beginning `<CalFactor>` and the ending `</CalFactor>`. The data set includes frequency, cal factor, cal factor uncertainty, reflection magnitude, reflection phase, and reflection magnitude uncertainty.

---

## Contacting Agilent Technologies

Agilent Technologies has offices around the world to provide you with complete support for your accessories. To obtain servicing information or to order replacements, contact the nearest Agilent Technologies office listed in [Table 4-3 on page 37](#). In any correspondence or telephone conversations, refer to your accessory by its product number and full serial number.

**Table 4-3**      **Contacting Agilent Technologies**

**Online assistance:** [www.agilent.com/find/assist](http://www.agilent.com/find/assist)

**United States**

(tel) 1 800 452 4844

**Latin America**

(tel) (305) 269 7500

(fax) (305) 269 7599

**Canada**

(tel) 1 877 894 4414

(fax) (905) 282-6495

**Japan**

(tel) (81) 426 56 7832

(fax) (81) 426 56 7840

**Europe**

(tel) (31 20) 547 2323

(fax) (31 20) 547 2390

**Australia**

(tel) 1 800 629 485

(fax) (61 3) 9210 5947

**New Zealand**

(tel) 0 800 738 378

(fax) 64 4 495 8950

**Asia Pacific**

(tel) (852) 3197 7777

(fax) (852) 2506 9284

Maintenance and Repair  
**Contacting Agilent Technologies**