

## About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual is the best copy we could find; it may be incomplete or contain dated information. If we find a more recent copy in the future, we will add it to the Agilent website.

## Support for Your Product

Agilent no longer sells or supports this product. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available. You will find any other available product information on the Agilent Test & Measurement website, [www.tm.agilent.com](http://www.tm.agilent.com).

## HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, semiconductor products and chemical analysis businesses are now part of Agilent Technologies. We have made no changes to this manual copy. In other documentation, to reduce potential confusion, the only change to product numbers and names has been in the company name prefix: where a product number/name was HP XXXX the current name/number is now Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A.

**TACS/ETACS Cellular Tests  
HP 11807A,E Option 005  
Reference Guide  
for the HP 8920A,B,D**

**HP Part No. 11807-90158  
Printed in U. S. A.  
May 1997**

**First Edition (Rev. A)**

Copyright © Hewlett-Packard Company 1994

**RESTRICTED  
RIGHTS LEGEND**

Use, duplication or disclosure by the U. S. Government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software Clause in DFARS 252.227-7013.

Hewlett-Packard Company  
3000 Hanover Street  
Palo Alto, CA 94304  
U.S.A

Rights for non-DOD U. S. Government Departments and Agencies are as set forth in FAR 52.227-19 (c) (1, 2).

## **1 Product Description**

HP 11807A,E Software 14

Materials Included in This Package 15

Finding the Information You Need 19

Additional Services Available 20

## **2 Using the Software/HP 8920B, or HP 8920A FW above Rev. A.14.00**

Introduction 23

Testing Overview 24

Customizing Testing 30

## **3 Using the Software/HP 8920A FW Rev Below A.14.00**

Introduction 57

Testing Overview 58

Customizing Testing 65

## **4 Test, Parameter, and Pass/Fail Limit (Specification) Descriptions**

Introduction	90
TEST_01. CP Registration	91
TEST_02. CP Page	93
TEST_03. TX Frequency Error	94
TEST_04. TX Carrier Power	95
TEST_05. TX Peak Frequency Deviation	97
TEST_06. TX Audio Frequency Response	98
TEST_07. TX Audio Distortion	99
TEST_08. TX Signaling Tone	100
TEST_09. TX FM Hum and Noise	101
TEST_10. TX SAT Frequency Error & Deviation	102
TEST_11. TX Wideband Data Deviation	103
TEST_12. TX Compressor Response	106
TEST_13. TX Current Drain	108
TEST_14. RX Expander	109
TEST_15. RX Audio Frequency Response	111
TEST_16. RX Audio Distortion	113

TEST_17. RX Hum and Noise	114
TEST_18. RX SINAD	115
TEST_19. RX FVC Order Message Error Rate	117
TEST_20. CP Release	118
TEST_21. CP Origination	119
TEST_22. OT No Audio Functional	120
TEST_23. TX Quick General	121
TEST_24. RX Quick General	122
TEST_25. CP Flow Chart	123
TEST_26. TX Switch Channels	125
TEST_27. CP Hook Flash	127
TEST_28. TX DTMF Frequency Error	128
TEST_29. CP Issue 4 Page and MS Release	129
Test Parameter Descriptions	130
01. AA Enter Ph#? [0=If Needed, 1=Always,Here]	131
2. CP AID Number	133
3. CP Control Channel	134

4. CP Prt RECC RVC Data [0=no 1=yes 2=fail]	135
5. CP SAT Tone	136
6. RC Comandor Always On [0=no 1=yes]	137
7. RT External Pad and Cable Loss	138
8. RT High Supply Voltage	139
9. RT Low Supply Voltage	140
10. RT Nominal Supply Voltage	141
11. RT Test at Extreme Settings	142
12-14. RX Audio Response Start, Step, and Stop Frequencies	143
15-17. RX Expandor Response Start, Step, and Stop Levels	144
18. RX FVC Message Error Rate RF Level	145
19. RX RF Level for Signaling	146
20. RX RF Level for SINAD	147
21. RX RF Level for SINAD at Extremes	148
22. RX Set Audio Level [0=no xx=level volts]	149
23. RX Tolerance for Setting Audio Level	150
24-26. TX Audio Response Start, Step, and Stop Frequencies	151

27. TX Carrier Power Levels Tested	152
28-30. TX Compressor Start, Step, and Stop Levels	153
31. TX Current Drain Levels Tested	154
32. TX De-emphasis	155
33. TX Peak Frequency Deviation Step Frequency	156
34. TX Pk Freq Dev 50 Hz HPF	157
35-37. TX Switch Channels Start, Step, and Stop Channel	158
38. TX TS Atten for Signaling [0,20,40]	159
39. TX Units for Power Meas	160
40. TX Voltage for Compressor Zero Crossing	161
41. ZA MIN From? [0=RECC,1=all 0's,2=Phone #]	162
42. ZB use DUPLEX OUT & ANT IN	164
43. ZC Trnsient/SS Data [0=tran 1=bth 2=ss]	165
Pass/Fail Limit (Specification) Descriptions	166
1. RX Audio Distortion	167
2. RX Audio Rsp Dev From -6 dB/oct	168
3. RX Expander Track Error	169



- 4. RX Expander Zero Reference Level 170
- 5. RX Hum and Noise 171
- 6. RX Order Message Error Rate (OMER) 172
- 7. RX SINAD 173
- 8. TX Audio Distortion 174
- 9. TX Audio Response Dev From 6 dB/Oct 175
- 10-18. TX Carrier Power @Levels 0-7 176
- 19. TX Compressor Track Error dB 179
- 20. TX Compressor Zero Reference Deviation 180
- 21. TX Current Drain @Levels 0-3 181
- 22. TX Current Drain @ Levels 4-7 182
- 23. TX DTMF Frequency Error 183
- 24. TX FM Hum and Noise 184
- 25. TX Frequency Error 185
- 26. TX Peak Frequency Deviation 186
- 27. TX SAT Deviation 187
- 28. TX SAT Frequency Error 188

- 29. TX Signaling Tone Deviation 189
- 30. TX Signaling Tone Frequency 190
- 31. TX Wideband Data Deviation 191
- 32. TXT Wideband Data Deviation Transient 192

### **5 Reference (Alphabetical)**

- Conventions Used 194
- Copying Files 196
- Data Collection (Saving and Retrieving Test Results) 198
- Disks 211
- Exiting a Program 214
- HP-IB Control Annunciators 215
- Memory Cards 216
- Parameters 226
- Pass/Fail Limits (specifications) 228
- Pausing or Stopping a TEST 230
- Printing 231

Procedures	247
RAM Disk	254
Saving Tests Results	257
Serial Port	258
Test Execution Conditions	261
USER Keys	263

## **6 Problem Solving**

If You Have a Problem Testing Your Radio	266
If the test procedure doesn't run on an test set	267
If the HP 11807A,E program was incorrectly loaded	268
If the printer does not print the test results	269
If you can't get the data-collection function to work	271
If the cellular phone fails to obtain service	273
If the cellular phone registers, but won't page	274
If the cellular phone fails the audio tests	275
If a cellular phone links up with a system, not the test set	276

**Glossary 277**

**Index 281**



---

**Product Description**

## HP 11807A,E Software

The HP 11807A,E Option 005, Radio Test Software is used for automated testing of cellular phones. Software is written on One-Time Programmable (OTP) memory cards shown below. The test set's built-in computer (operating with HP Instrument BASIC programming language) allows automated measurements for manual, quick-functional, or full-parametric testing.

- Manual, quick-functional and full-parametric testing of cellular phones is done using pre-written Test Procedures on each OTP memory card.
- Also, user-defined Test Procedures may be created to meet your radio-specific testing needs. The user-defined Test Procedures are saved onto the Static Random-Access Memory (SRAM) memory card which is provided with each HP 11807A,E option.

## Materials Included in This Package

This package contains the following materials. Verify that all the materials are present and inspect them for damage. If a part is missing or appears to be damaged, contact your nearest Hewlett-Packard sales or service office.

- HP 11807A Option 005 Test Software (part number 11807-10005) or HP 11807E Option 005 Test Software (part number 11807-10024).
- SRAM memory card (uninitialized), for saving your own test procedures and results.
  - For HP 11807A, 32 Kbyte SRAM (part number HP 85700A).
  - For HP 11807E, 64 Kbyte SRAM (part number HP 83230A).
- HP 11807A Option 005 Software Reference Guide (part number 11807-90120).
- HP software product license agreement.



## Additional Equipment Required

The HP 11807A,E Option 005 software requires the test set to be configured with the following hardware:

- Tone/Digital Signaling, HP 8920A Option 004
- 256k RAM Memory extension, HP 8920A Option 005

## Recommended Equipment

Other hardware configurations for your test set are recommended, but not required:

- High-Stability Timebase, HP 8920A,D Option 001
- C-Message Weighting Filter, HP 8920A,D Option R13
- 6 kHz Bandpass Filter, HP 8920A,B Option R14

## External Power Supplies

An external dc power supply for the cellular phone can be configured to the test set in one of three ways:

1. A power supply or battery can be connected directly to the cellular phone.
2. A power supply can be connected to the rear-panel DC CURRENT MEASUREMENT banana-plug connectors. (This requires the HP 8920A Option 003, HP-IB/RS-232/Current Measurement.)
3. A power supply can be controlled by the test set when it is connected to the HP-IB connector. (This requires the HP 8920A,D Option 003, HP-IB/RS-232/Current Measurement.)

HP-IB programmable power supply from the following series are supported for external control:

- HP 664xA
- HP 665xA
- HP 667x A
- HP 668xA

---

**NOTE:**

---

The HP 662xA and HP 663xA series dc power supplies do not use SCPI commands and are not supported.

**Pad and Cable Loss.** Use parameter "**7. RT External Pad and Cable Loss**" on page 138 to compensate for any attenuator (*pad*) or cable losses from the cellular phone to the test set.

## Available Tests


The following tests can be performed with this software:

- CP Registration
- CP Page
- TX Frequency Error
- TX Carrier Power
- TX Peak Frequency Deviation
- TX Audio Frequency Response
- TX Audio Distortion
- TX Signaling Tone
- TX FM Hum and Noise
- TX SAT Frequency Error
- TX Wideband Data Deviation
- TX Compressor Response
- TX Current Drain
- RX Expandor
- RX Audio Frequency Response
- RX Audio Distortion
- RX Hum and Noise
- RX SINAD
- RX FVC Order Message Error Rate
- CP Release
- CP Origination
- OT No Audio Functional
- TX Quick General
- RX Quick General
- CP Flow Chart
- TX Switch Channels
- CP Hook Flash
- TX DTMF Frequency Error
- CP Issue 4 Page and MS Release


---

# Finding the Information You Need

This manual describes the setup and use of the HP 11807A,E Software with the HP 8920A,B,D test set. The book is arranged in self-contained chapters to provide the following information:

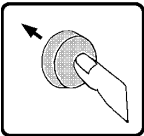


### PRODUCT DESCRIPTION CHAPTER 1

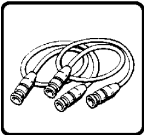

### USING THE SOFTWARE-CHAPTER 2

- Instructions for cabling test set.
- How to load
- How to run
- How to customize

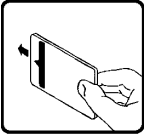

### TEST DESCRIPTIONS-CHAPTER 3

Definitions, special conditions and restrictions for:

- Tests
- Pass/fail limits
- Parameters



### REFERENCE-CHAPTER 4

- Alphabetically listed
- Detailed descriptions of all the features and functions of the software.
- For the advanced level user.




### PROBLEM SOLVING-CHAPTER 5


- Alphabetically listed
- Symptoms and possible corrections to frequent user problems.

MANUAL1

## Additional Services Available

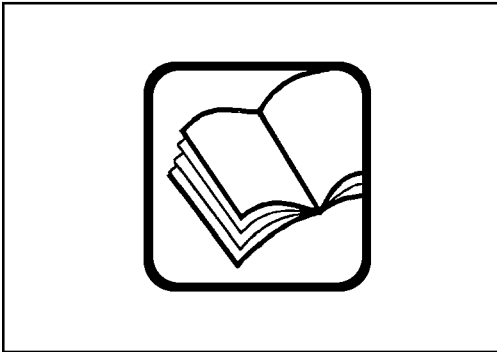

TROUBLE1

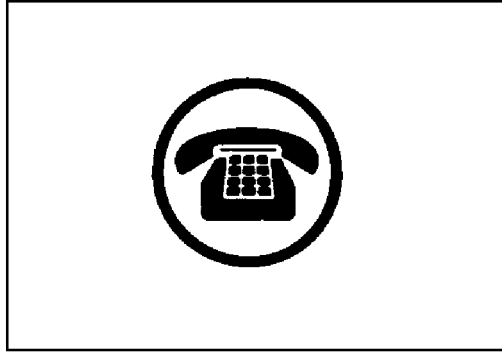

Consult the HP 8920A,B User's Guide or call the HP 8920A,B,D Hotline 1-800-922-8920 (in the USA and Canada only) and give your software model number.

---

**Using the Software/HP 8920B,  
or HP 8920A FW above Rev.  
A.14.00**

---

**NOTE:**

---

The firmware revision A.14.00 in the HP 8920A,D had several enhancements, which are standard in the HP 8920B. This chapter applies to users with:

- **HP 8920A test sets with firmware revision above A.14.00**
- **All HP 8920B test sets.**

The test set's firmware revision is displayed on the top right corner of the configuration screen.

- Press SHIFT CONFIG to display the configuration screen and read the firmware revision.

If you have an HP 8920A test set with firmware revision below A.14.00, refer to **chapter 3, "Using the Software/HP 8920A FW Rev Below A.14.00," on page 55**. Contact Hewlett-Packard at 1-800-922-8920 for details on upgrading your firmware if desired.

---

## **Introduction**

The software can be run on the factory default settings or customized to your individual needs and specific requirements. This chapter provides detailed information on how to load, run, and customize the software.

The test set has two methods of accessing on-line help. In each of the screens in the test environment, k4 (**He1p**) accesses specific information about how to set up/use the current screen. SHIFT HELP accesses the master help file, with an alphabetical listing of help topics.



## Testing Overview

---

## Testing Overview

Pressing TESTS will display what is called the TESTS (Main Menu) screen. To begin testing, you must first load the software and make connections. From this screen you have the option to:

### **Begin running tests:**

- The factory default settings are acceptable for your application or
- The software has already been customized and saved to a memory card


### **Customize the software:**

- Decide which tests you desire to run (Order of Tests)
  - you may want to run all, some, or just one of the tests.
- Specify which channels to test (Channel Information)
  - you may want to test one, some, or all of the channels on your radio.
- Change the pass/fail limits for specific measurements (Pass/Fail Limits)
  - you may want the pass/fail limits to have tighter or looser specifications than the default settings.
- Change the test environment and conditions (Test Parameters)
  - decide output format.
  - enter specific information about radio equipment and/or environment.
- Save any or all of the above customized changes to a memory card (Save/Delete Procedure)

### **Set Up Test Set:**

- Print test results or certain screens.
- Decide when and where test results are displayed (**Execution Conditions/Printer Setup**)

## To Run Tests

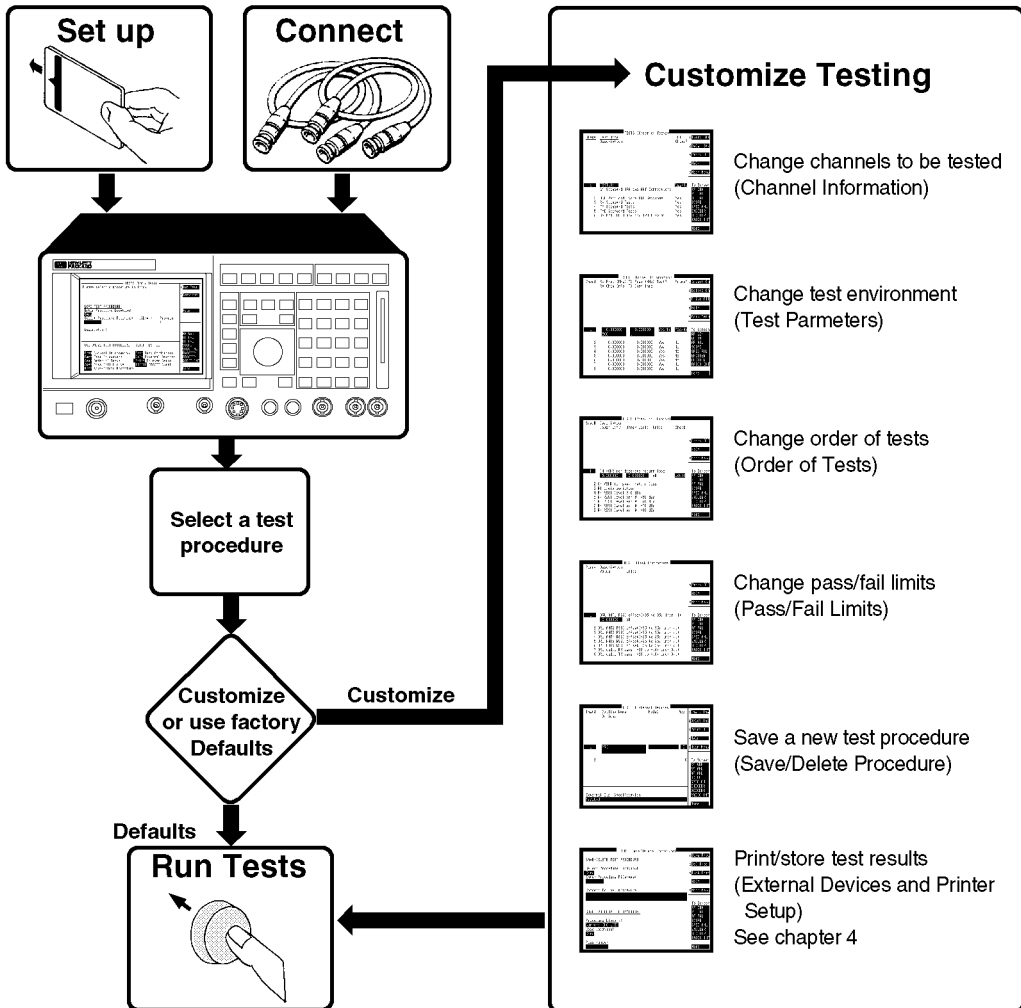


OVERVIEW1

## Testing Overview

### Setting Up the Test Set and Making Connections


Before you begin testing, you must set up the test set and make the appropriate hardware connections.

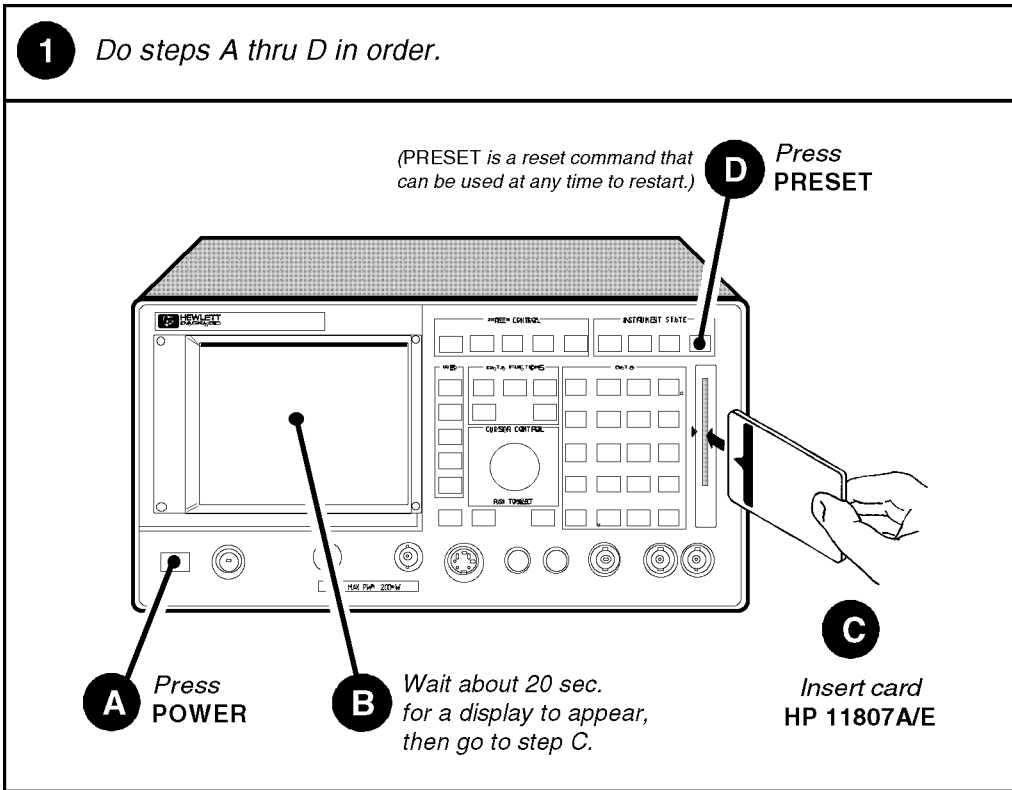

LOAD1

## Making a Connection

**2** Connect a radio to the test set.

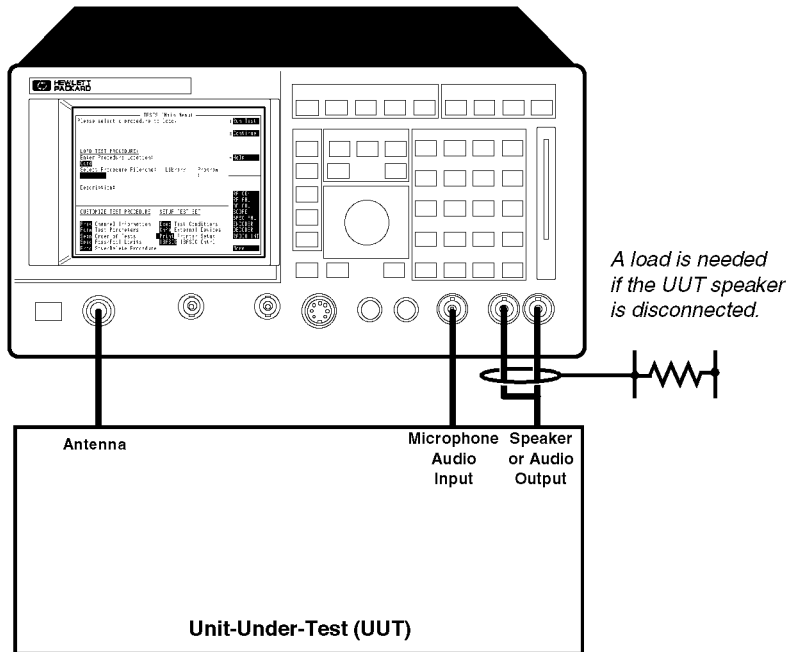

CONNECT1

## Testing Overview

### Selecting a Test Procedure

To load the software, you must first select the location to load from (in this case, it will be **card**) and a procedure filename. Your card comes pre-programmed with at least one procedure. The actual software program does not get loaded into the test set's memory until k1 (**Run Test**) is selected. It will take approximately 15 seconds to load the software in an HP 8920B, and approximately two minutes in an HP 8920A,D.

The software memory card can be removed after the program is loaded into the test set's memory. The program will remain in memory after a power-down/power-up cycle, unless it is manually deleted or a new program is loaded.


When tests begin to run, they are executed in the order in which they were entered into the Test Procedure.

Pressing CANCEL will pause the current test (press k2 to continue the test.)

## Selecting a Test Procedure


**1** Press **TESTS** to display the **TESTS** screen.

If you are in *IBASIC*, press *SHIFT, CANCEL* before pressing **TESTS**.

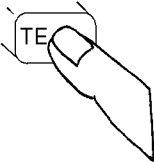


**2** Position cursor and select **Select Procedure Location:**.

**Position**



 
**Select**




**3** Position cursor and select **Card**.

**Position**



 **Select**




Choices :


- Card
- ROM
- RAM
- Disk

**4** Position cursor and select **Select Procedure Filename:**.

**Position**




 **Select**




**5** Position cursor and select **desired Procedure**.

**Position**

 

**Select**

 


Choices :


- XXXXXX
- XXXXXX
- XXXXXX
- XXXXXX

**6** Position cursor and select **Run Test**.

**Position**



 **Select**



8920A,D ≈ 2 min.  
8920B ≈ 15 sec.

- Run Test
- 2 Continue
- 4 Help

PROCED1

## Customizing Testing

---

### Customizing Testing

Because of the diversity of individual testing needs, the software has been designed so that changes may be easily made from the test set's front panel. You may store these changes on a memory card so that you may skip these steps in the future. See **"Saving a Test Procedure" on page 48**.

Because your needs change, the software allows changes to its default settings whenever you need to make them. For example, tests may be inserted or deleted, and later after running the tests you can change the pass/fail limits or decide to test different channels.

Most testing customization is accomplished through the customization screens. These customization screens are accessed from the main TESTS (Main Menu) screen as shown in the following figure. Customizing procedures is explained later in this chapter.

---

#### **NOTE:**

External Devices, Printer Setup, and IBASIC will not be explained in this customizing section.

- External Devices and Printer Setup are used when setting up printers and external disk drives which is explained in **"Disks" on page 211** and **"Printing" on page 231**.
  - IBASIC is used when writing your own programs and is not explained in this manual. If you need to write your own IBASIC programs you may acquire the following manuals:
    - HP 8920A,D
      - *HP Instrument Basic User's Handbook* HP part number E2083-90000.
      - *HP 8920 Programming Manual* HP part number 08920-90204.
    - HP 8920B
      - *HP Instrument Basic User's Handbook Version 2.0* HP part number E2083-90005.
      - *HP 8920 Programming Manual* HP part number 08920-90204.
-

## How to Customize Testing

**TESTS Screen**

TESTS (Main Menu)

Please select a procedure to load.

1 Run Test

2 Continue

4 Help

LOAD TEST PROCEDURE:

Select Procedure Location:

Card

Select Procedure Filename:    Library:    Program:

Description:

CUSTOMIZE TEST PROCEDURE:    SET UP TEST SET:

Freq Channel Information	Exec Execution Cond
Parm Test Parameters	Cnfg External Devices
Seqn Order of Tests	Print Printer Setup
Spec Pass/Fail Limits	IBASIC IBASIC Cntrl
Proc Save/Delete Procedure	

To Screen

RF GEN

RF ANL

RF ANL

SCOPE

SPEC ANL

ENCODER

DECODER

RADIO INT

More

Selecting a Test Function opens a Customization Screen.

CUSTOM1



## Customizing Testing

### Changing the Order of Tests

You may define the order of tests to include all, some, or just one of the tests available. When the first test is finished, the next will run. The test sequence will remain in the test set's battery backed-up memory until another test sequence is loaded or set up. For information on saving a customized test sequence, see "[Saving a Test Procedure](#)" on page 48.

Defining the order of tests is accomplished by inserting or deleting tests from the list of tests that come with the software package. See [chapter 4, "Test, Parameter, and Pass/Fail Limit \(Specification\) Descriptions,"](#) on page 89 for descriptions of tests included in this package.


The **All Chans?** field allows the user to decide to run the test on all channels entered in the **Channel Information** table, or just the channels which are selected as **Prime** in the Channel Information screen. This feature allows the user the flexibility to use channels that are selected as **Prime** in all the tests in the sequence, and those indicated as non-prime in a subset of tests (those tests with a **Yes** response in **All Chans**). For more information, see "[Specifying Channel Information](#)" on page 36.

The following describes how to create a new test sequence and enter a response to the **All Chans?** field.


 
## How to Change the Order of Tests

**1** Press **TESTS** to display the **TESTS (Main Menu)** screen.

If you are in IBASIC, press **SHIFT, CANCEL** before pressing **TESTS**.

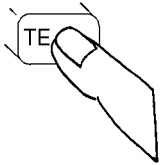
 


**2** Position cursor and select **Seqn Order of Tests**.



<b>Position</b>	
	<b>Freq</b> Channel Information
	<b>Parm</b> Test Parameters
<b>Select</b>	<b>Seqn</b> Order of Tests
	<b>Spec</b> Pass Fail Limits
	<b>Proc</b> Save/Delete Procedure

The Order of Tests screen is now present on your CRT.

**3** Position cursor and select **Step #** field.

<b>Position</b>	
	<i>Example</i>
<b>Select</b>	<b>"1"</b> <b>"TEST 5"</b>
	↑ "Test name"

  **4** Rotate knob until **Step #** which precedes the insertion point of the new test you are adding is highlighted, then select it.

<b>Rotate</b>	
	
<b>Select</b>	
	

For example, select step 7 if you want to insert the new test as step 8.


 

<b>"7"</b>	<b>"TEST_#"</b>
	"Test name"
<b>"8"</b>	"New test"

SEQ1


 

Continue on next page

**Customizing Testing**


 

**5** *Position cursor and select Insrt Stp.*

<p><b>Position</b></p>  <p><b>Select</b></p> 	 <table border="1" style="margin-left: auto; margin-right: auto;"> <tr><td>■ Insrt Stp</td></tr> <tr><td>2 Delet Stp</td></tr> <tr><td>3 Print All</td></tr> <tr><td>4 Edit Freq</td></tr> <tr><td>5 Edit Spec</td></tr> </table>	■ Insrt Stp	2 Delet Stp	3 Print All	4 Edit Freq	5 Edit Spec
■ Insrt Stp						
2 Delet Stp						
3 Print All						
4 Edit Freq						
5 Edit Spec						


 

**6** *Position cursor back at Step # field and select it.*

<p><b>Position</b></p>  <p><b>Select</b></p> 	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="width: 40px;">■ "7"</td> <td style="width: 80px;">"TEST_#"</td> </tr> <tr> <td></td> <td>"Test name"</td> </tr> </table> 	■ "7"	"TEST_#"		"Test name"
■ "7"	"TEST_#"				
	"Test name"				


 

**7** *Highlight and select Step # field of newly inserted test.*

<p><b>Highlight</b></p>  <p><b>Select</b></p> 	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="width: 40px;">"8"</td> <td style="width: 80px;">"TEST_#"</td> </tr> <tr> <td></td> <td>"Test name"</td> </tr> </table> 	"8"	"TEST_#"		"Test name"
"8"	"TEST_#"				
	"Test name"				


 

**8** *Position cursor and select Test Name field.*

<p><b>Position</b></p>  <p><b>Select</b></p> 	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="width: 40px;">"8"</td> <td style="width: 80px;">■ "TEST_#"</td> </tr> <tr> <td></td> <td>"Test name"</td> </tr> </table> 	"8"	■ "TEST_#"		"Test name"
"8"	■ "TEST_#"				
	"Test name"				

**9** *Rotate knob and select desired Test Name when it appears.*


<p><b>Rotate</b></p>  <p><b>Select</b></p> 	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="width: 40px;">"#"</td> <td style="width: 80px;">"TEST_#"</td> </tr> <tr> <td></td> <td>"Test name"</td> </tr> </table> 	"#"	"TEST_#"		"Test name"
"#"	"TEST_#"				
	"Test name"				

**10** *Position cursor at All Chans? field and select Yes or No.*

<p><b>Position</b></p>  <p><b>Select</b></p> 	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="width: 80px;">■ Yes/No</td> </tr> </table>  <p><i>(Press the knob to change the selection.)</i></p>	■ Yes/No
■ Yes/No		

SEQ2

**Continue on next page**

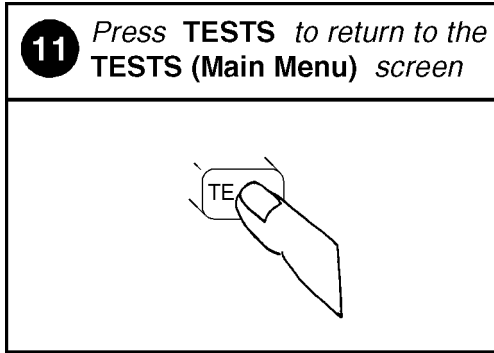

SEQ3

## Customizing Testing

### Specifying Channel Information

For each channel that you wish to specify, you must enter the following information into the Channel Information screen:

- Cell Channel
  - Enter the cell channel number.
- Options
  - For the last channel that you want tested in the **Channel Information** table, select **Options** and using the characters in the **Choices** menu enter **END**. This will speed up the testing time (so the software will not scan through the entries that are blank in the Channel Information screen).
- **Test?** (yes/no) specifies whether you want to test the UUT at this channel. If set to “No” then the UUT will not be tested at that channel, but you may retain the channel information in the table for later use. If set to “Yes” then the channel will be used as defined by settings of **Prime?** and **All Chans?** fields.
- **Prime?** (yes/no) specifies which channels are “prime”. Select “Yes” if you want to test the UUT at this channel on all the tests in the procedure. Select **No** if you want to test the UUT at this channel on just a subset of tests, which are designated by selecting **Yes** in the **All Chans** field of the Order of Tests screen. See **All Chans?** in "[How to Change the Order of Tests](#)" on page 33 for more information.

For information on saving the channel information table, see "[Saving a Test Procedure](#)" on page 48.

The **All Chans** field in the Order of Tests screen interacts closely with the **Prime?** field on the Channel Information screen. When the software runs, it begins by retrieving the first channel entered into the Channel Information screen. It then checks the response in the **Test?** field to determine if the UUT should be tested at that channel at this time. If there is a **No** response in the **Test?** field, the software will go to the next channel in the table. If there is a **Yes** response in the **Test?** field, the software will check if the channel is **Prime**.

A **Yes** response in the **Prime?** field indicates to test the UUT at that channel on the entire sequence of tests in the procedure. A **No** response in the **Prime?** field indicates to test the UUT at that channel on a subset of tests in the procedure. The subset of tests is determined by a **Yes** response in the **All Chans?** field. Therefore, tests with a **No** response in the **All Chans?** field will be run on *prime* channels only.

## Customizing Testing

Below is an example of how the software would run if you had a procedure set up as follows:

<b>Chan #</b>	<b>Test?</b>	<b>Prime?</b>
Chan 01	Yes	Yes
Chan 02	Yes	No
Chan 03	No	No

<b>Test Number</b>	<b>All Chan? Setting</b>
Test 01	No
Test 02	Yes
Test 03	Yes
Test 04	No

The result would be:

- Chan 01 is used in Test 01, Test 02, Test 03, and Test 04.
- Chan 02 is used in Test 02, and Test 03 only.
- Chan 03 is not used.

The following table shows how to properly configure these settings according to your testing needs.

<b>Testing Need</b>	<b>Necessary Field Settings</b>		
	<b>Test?</b>	<b>Prime?</b>	<b>All Chan?</b>
Test channel on all tests in sequence	Yes	Yes	Don't Care
Test channel on a subset of tests in sequence	Yes	No	Yes on tests you want included in the testing subset
Do not test this channel now, but retain information for later use	No	Don't Care	Don't Care




**Customizing Testing**


 
**How to Specify Channel Information**

**1** Press **TESTS** to display the **TESTS (Main Menu)** screen.

*IF you are in IBASIC, press **SHIFT, CANCEL** before pressing **TESTS**.*

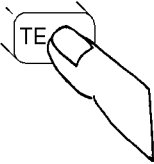


**2** Position cursor and select **Freq Channel Information**.

<b>Position</b>		<b>Freq</b> Channel Information
<b>Select</b>		<b>Parm</b> Test Parameters
		<b>Seqn</b> Order of Tests
		<b>Spec</b> Pass Fail Limits
		<b>Proc</b> Save/Delete Procedure

The Channel Information screen is now present on your CRT.


**3** Position cursor and select **Entry #** field.

 *(Disregard this number.)*




**4** Scroll to and select desired **Entry #**.


**Scroll**



 
**Select**



*(These numbers are examples.)*



**5** Position cursor and select **Cell Channel** field.

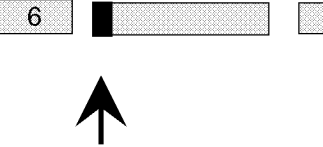

Continue on next page

**6** Use **DATA** keys to enter new Cell Channel, then select it.

**Enter**

**Select**

6 "New #"

(Enter your desired Cell Channel number)

**7** Position cursor at **Test?** field and select **Yes** or **No**.

**Position**

**Select**

Yes/No

(Press knob to change the selection.)

**8** Position cursor at **Prime?** field and select **Yes** or **No**.

**Position**

**Select**

Yes/No

(Press knob to change the selection.)

Repeat steps 3-8 for each Cell Channel you are entering. When you have completed entering all channels, go to step 9.

**9** Position cursor and select **Options** field.

**Position**

**Select**

#.#####

**10** Select these characters: **E N D**, then select **Done**.

**Position**

**Select**


Choices :

- Done
- Position
- Over/Ins
- Delete
- Del End
- Bk space
- A
- B
- C

FREQ2

Continue on next page

## Customizing Testing

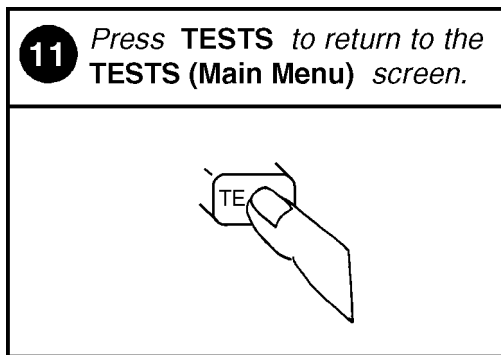









FREQ3

## Changing Pass/Fail Limits

      Pass/Fail limits define the values a measurement's result is compared against to determine if the UUT meets its specified standards. Default values are set in the test software. These default values may be changed to suit your particular requirements.

The following describes how to change the pass/fail (upper and lower) limits. See "**Pass/Fail Limit (Specification) Descriptions**" on page 166 for descriptions of each pass/fail limit. For information on saving customized pass/fail limits, see "**Saving a Test Procedure**" on page 48.

### How to Change Pass/Fail Limits

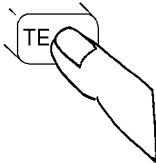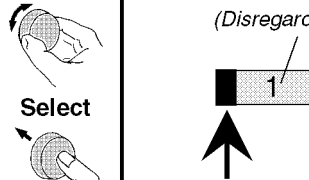
 

<p><b>1</b> Press <b>TESTS</b> to display the <b>TESTS</b> screen.</p> <p><i>IF you are in IBASIC, press SHIFT, CANCEL before pressing TESTS.</i></p> 	<p><b>2</b> Position cursor and select <b>Spec</b> Pass Fail Limits.</p> <table border="1"> <tbody> <tr> <td><b>Position</b></td> <td></td> </tr> <tr> <td></td> <td>Freq Channel Information</td> </tr> <tr> <td></td> <td>Parm Test Parameters</td> </tr> <tr> <td></td> <td>Seqn Order of Tests</td> </tr> <tr> <td><b>Select</b></td> <td>Spec Pass Fail Limits</td> </tr> <tr> <td></td> <td>Proc Save/Delete Procedure</td> </tr> </tbody> </table>	<b>Position</b>			Freq Channel Information		Parm Test Parameters		Seqn Order of Tests	<b>Select</b>	Spec Pass Fail Limits		Proc Save/Delete Procedure
<b>Position</b>													
	Freq Channel Information												
	Parm Test Parameters												
	Seqn Order of Tests												
<b>Select</b>	Spec Pass Fail Limits												
	Proc Save/Delete Procedure												
<p>The Pass Fail Limits screen is now present on your CRT.</p>	<p><b>3</b> Position cursor and select <b>Spec #</b> field.</p> <p>(Disregard this number.)</p> 												

SPEC1


 

Continue on next page

**Customizing Testing**

 
 
**4** *Scroll to and select desired Spec #.*

<p><b>Scroll</b></p>  <p><b>Select</b></p> 	<p>(This <b>Spec #</b> is an example.)</p> <p>6 FCC TX output p -1.000000 1.</p> 
---	--


 

**5** *Position cursor and select Lower limit field.*

<p><b>Position</b></p>  <p><b>Select</b></p> 	<p>6 FCC TX output p -1.000000 1.</p> 
---	---



**6** *Use DATA keys to enter new value, then select it.*

<p><b>Enter</b></p>  <p><b>Select</b></p> 	<p>6 FCC TX output p -0.500000 1.</p> <p>(Enter your desired value.)</p>
--	--


 

**7** *Position cursor and select Upper Limit field.*

<p><b>Position</b></p>  <p><b>Select</b></p> 	<p>C TX output power adjustme .500000 1.000000 dB</p> 
---	---

**8** *Use DATA keys to enter new value, then select it.*

<p><b>Enter</b></p>  <p><b>Select</b></p> 	<p>C TX output power adjustme .500000 0.500000 dB</p> <p>(Enter your desired value.)</p>
--	--



**9** *Position cursor and select Check field.*

<p><b>Position</b></p>  <p><b>Select</b></p> 	<p>Both</p> 
---	---

SPEC2


**Continue on next page**

  **10** *Position cursor and select Both .*

<p><b>Position</b></p> 	<p>Choices :</p> <p>Upper</p> <p>Lower</p> <p><input checked="" type="checkbox"/> Both</p> <p>None</p>
<p><b>Select</b></p> 	

SPEC3

**11** *Press **TESTS** to return to the **TESTS (Main Menu)** screen.*

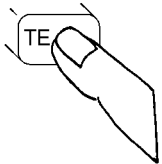





## Customizing Testing

### Changing the Test Parameters

The software uses parameters to optimize the test environment and conditions for your testing situation. Many of the test parameters are determined by examining your test needs. The software comes with default settings for test parameters. Review the defaults for your particular needs. See "**Test Parameter Descriptions**" on page 130 for descriptions of each test parameter. For information on saving customized test parameters, see "**Saving a Test Procedure**" on page 48.

The following describes how you can change test parameters through the Test Parameter screen to optimize your testing conditions.
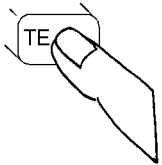
### How to Change the Test Environment and Conditions


 

<b>1</b> Press <b>TESTS</b> to display the <b>TESTS (Main Menu)</b> screen.	<b>2</b> Position cursor and select <b>Parm</b> Test Parameters.												
<p>If you are in IBASIC, press <b>SHIFT</b>, <b>CANCEL</b> before pressing <b>TESTS</b>.</p> 	<table border="1"><tr><td data-bbox="669 815 776 928"><b>Position</b> </td><td data-bbox="782 815 1146 1052"><table border="1"><tr><td data-bbox="809 857 876 880">Freq</td><td data-bbox="884 857 1104 880">Channel Information</td></tr><tr><td data-bbox="809 889 876 912">Parm</td><td data-bbox="884 889 1064 912">Test Parameters</td></tr><tr><td data-bbox="809 922 876 945">Seqn</td><td data-bbox="884 922 1037 945">Order of Tests</td></tr><tr><td data-bbox="809 954 876 977">Spec</td><td data-bbox="884 954 1059 977">Pass Fail Limits</td></tr><tr><td data-bbox="809 987 876 1010">Proc</td><td data-bbox="884 987 1131 1010">Save/Delete Procedure</td></tr></table></td></tr></table>	<b>Position</b> 	<table border="1"><tr><td data-bbox="809 857 876 880">Freq</td><td data-bbox="884 857 1104 880">Channel Information</td></tr><tr><td data-bbox="809 889 876 912">Parm</td><td data-bbox="884 889 1064 912">Test Parameters</td></tr><tr><td data-bbox="809 922 876 945">Seqn</td><td data-bbox="884 922 1037 945">Order of Tests</td></tr><tr><td data-bbox="809 954 876 977">Spec</td><td data-bbox="884 954 1059 977">Pass Fail Limits</td></tr><tr><td data-bbox="809 987 876 1010">Proc</td><td data-bbox="884 987 1131 1010">Save/Delete Procedure</td></tr></table>	Freq	Channel Information	Parm	Test Parameters	Seqn	Order of Tests	Spec	Pass Fail Limits	Proc	Save/Delete Procedure
<b>Position</b> 	<table border="1"><tr><td data-bbox="809 857 876 880">Freq</td><td data-bbox="884 857 1104 880">Channel Information</td></tr><tr><td data-bbox="809 889 876 912">Parm</td><td data-bbox="884 889 1064 912">Test Parameters</td></tr><tr><td data-bbox="809 922 876 945">Seqn</td><td data-bbox="884 922 1037 945">Order of Tests</td></tr><tr><td data-bbox="809 954 876 977">Spec</td><td data-bbox="884 954 1059 977">Pass Fail Limits</td></tr><tr><td data-bbox="809 987 876 1010">Proc</td><td data-bbox="884 987 1131 1010">Save/Delete Procedure</td></tr></table>	Freq	Channel Information	Parm	Test Parameters	Seqn	Order of Tests	Spec	Pass Fail Limits	Proc	Save/Delete Procedure		
Freq	Channel Information												
Parm	Test Parameters												
Seqn	Order of Tests												
Spec	Pass Fail Limits												
Proc	Save/Delete Procedure												

PARM1




Continue on next page

The Tests Parameters screen is now present on your CRT.




**3** Position cursor and select **Parm #** field.

<p><b>Position</b></p> 	<p>(Entries on your display may be different.)</p>
<p><b>Select</b></p> 	<p>1 RT audio test to 0.00000</p> 

    
 

**4** Scroll to and select **Parm #** to be changed.

<p><b>Scroll</b></p> 	<p>(This parameter number and description are examples.)</p>
<p><b>Select</b></p> 	<p>15 TX cable loss</p> 


**5** Position cursor and select **Value** field.

<p><b>Position</b></p> 	<p>15 TX cable loss</p>
<p><b>Select</b></p> 	<p>0.00000</p> 

**6** Use **DATA** keys to enter new value, then select it.

<p><b>Enter</b></p> 	<p>15 TX cable loss</p>
<p><b>Select</b></p> 	<p>1.000000</p>  <p>(Enter your desired value.)</p>

**7** Press **TESTS** to return to the **TESTS (Main Menu)** screen.

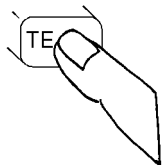

PAPM2



## Customizing Testing

### Saving a Test Procedure

A Test Procedure is a collection of channel information, test parameters, testing order, and pass/fail limits saved in a file that customizes the test software to a specific application. You may save the file to a memory card or disk.


When you save a procedure you will be saving channel information, test parameters, pass/fail limits, and testing order, plus a library that contains the names of all test parameters, pass/fail limits, and tests that are resident in the software. The library file comes from the software and cannot be modified. The library file will be automatically saved on the card or disk that is being used to store the new test procedure.

The following example shows how to save a new procedure to a memory card. For more information concerning procedures, see **"Procedures" on page 247**.

## How to Save a Test Procedure

**1** Press **TESTS** to display the **TESTS (Main Menu)** screen.

If you are in **IBASIC**, press **SHIFT, CANCEL** before pressing **TESTS**.

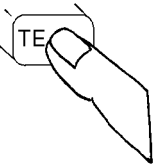


**2** Position cursor and select **Proc Save/Delete Procedure**.

Position											
Select											
	<table border="1"> <tr><td>Freq</td><td>Channel Information</td></tr> <tr><td>Parm</td><td>Test Parameters</td></tr> <tr><td>Seqn</td><td>Order of Tests</td></tr> <tr><td>Spec</td><td>Pass Fail Limits</td></tr> <tr><td>Proc</td><td>Save/Delete Procedure</td></tr> </table>	Freq	Channel Information	Parm	Test Parameters	Seqn	Order of Tests	Spec	Pass Fail Limits	Proc	Save/Delete Procedure
Freq	Channel Information										
Parm	Test Parameters										
Seqn	Order of Tests										
Spec	Pass Fail Limits										
Proc	Save/Delete Procedure										

The Save/Delete Procedure screen is now present on your CRT.

 
**3** Position cursor and select **Select Procedure Location**.

Position	
Select	
	<p>Select Procedure Location:</p> 

**4** Position cursor and select **Card**.

Position	
Select	
	<p>Choices :</p> <ul style="list-style-type: none"> <li><input checked="" type="checkbox"/> Card</li> <li><input type="checkbox"/> RAM</li> <li><input type="checkbox"/> Disk</li> </ul> <p>(You can also save procedures to an internal RAM disk or external disk drive. See chapter 4-Disks.)</p>

**5** Insert an initialized **SRAM** memory card.

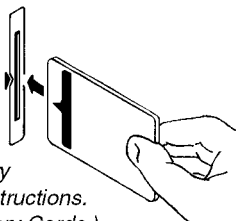


(For detailed memory card initialization instructions, see chapter 4-Memory Cards.)


PROCMAN1



Continue on next page

**Customizing Testing**

 
**6** *Position cursor and select*  
**Enter Procedure Filename:.**


**Position**  


**Select**  

 
Enter Procedure Filename:  
  



**7** *Select characters to name the procedure, then select Done.*


**Position**  

 
 

**Select**  


Choices :  
 Done  
 Position  
 Over/Ins  
 Delete  
 Del End  
 Bk space  
 A  
 B  
 C


**8** *Position cursor and select*  
**Enter Description for new ... .**


**Position**  

 
**Select**  


Enter Description for new ... :  
  


 
**9** *Select characters for the description, then select Done.*


**Position**  



**Select**  

 
Choices :  
 Done  
 Position  
 Over/Ins  
 Delete  
 Del End  
 Bk space  
 A  
 B  
 C



**10** *Position cursor at Procedure Library: and select Current.*

**Position**  


**Select**  


Procedure Library:  
Current / [NO LIB]  
  
 (The underline indicates which option is selected. Pressing knob changes the selection.)




**11** *Position cursor and select Code Location:.*

Code Location:  
  





PROCMAN2

  **Continue on next page**


**12** Position cursor at **Card** and select it.

<p><b>Position</b></p>  <p><b>Select</b></p> 	 <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Choices :</p> <ul style="list-style-type: none"> <li><input checked="" type="checkbox"/> Card</li> <li><input type="checkbox"/> RAM</li> <li><input type="checkbox"/> Disk</li> </ul> </div>
---	--

 **13** Position cursor at **Save Proc** and select it.

<p><b>Position</b></p>  <p><b>Select</b></p> 	 <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <ul style="list-style-type: none"> <li><input checked="" type="checkbox"/> Save Proc</li> <li>2 Del Proc</li> <li>3 Init Card</li> <li>4 Help</li> <li>5 Main Menu</li> </ul> </div>
---	---

**14** Press **TESTS** to return to the **TESTS (Main Tests)** screen.

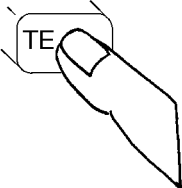

**15** To run the saved procedure, follow the instructions below.

- 1) Insert the RAM card with your saved procedure.
- 2) On the **TESTS (Main Menu)** screen, a) position cursor and select **Select Procedure Location:**, then select **Card**, b) position cursor and select **Select Procedure Filename:**, then select your saved file name.
- 3) Remove your RAM card and insert the original HP 11807B ROM memory card.
- 4) Press **Run Test** .

The original card contains the full program needed to run your procedure.

PROCMA3a

## Customizing Testing

### Changing Test Execution Conditions

**Test Execution Conditions** define where and when test output occurs. You may decide to:

- Display output on CRT only, or display on CRT and print hardcopy (**Output Results To**).

---

**NOTE:**

If printing test results is desired, after selecting **Printer**, additional steps are necessary to connect and configure the printer. See "**Printing**" on page 231.

- 
- Display (or print) only measurements that fail, or display (or print) all measurements that pass or fail (**Output Results For**).
  - Enter a title for an output heading for the displayed or printed results (**Output Heading**).
  - Stop testing when a measurement fails or continue through all of the tests without stopping (**If Unit-Under-Test-Fails**).
  - Pause between each measurement, or run through entire test (**Test Procedure Run Mode**).
  - Start the program automatically when the Test System is powered on. (**Autostart Test Procedure on Power-up**)


**Test Execution Conditions** is accessed from the **SETUP TEST SET:** list. To change a default setting, position the cursor to the desired field. Pressing the knob ("selecting") will toggle the underlined selection.

**Test Execution Conditions** settings are not retained after a power-down/power-up cycle, and will return to their default settings.

## How to Change Test Execution Conditions


**1** Press **TESTS** to display the **TESTS (Main Menu)** screen.

If you are in IBASIC, press **SHIFT, CANCEL** before pressing **TESTS**.

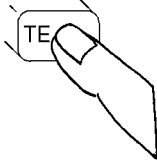

**2** Position cursor at **Exec Execution Cond** and select it.

<b>Position</b>	<b>Exec</b> Execution Cond
	Cnfg External Devices
	Print Printer Setup
<b>Select</b>	IBASIC IBASIC Cntrl

 

**3**

Select **Printer** to output test procedure results to the CRT and a printer.

Select **Failures** to display only the CRT and printer measurements that fail.

Select **Stop** to stop a Test Procedure when a failure occurs.

Select **Single Step** to stop a Test Procedure at the end of each measurement.

TESTS (Execution Conditions)

Output Results To:	<b>Crt/Printer</b>	1 <b>Run Test</b>
Output Results For:	<b>All/Failures</b>	2 <b>Continue</b>
Output Headings:		4 <b>Help</b>
		5 <b>Main Menu</b>
If Unit-Under-Test Fails:		To Screen
	<b>Continue/Stop</b>	RF GEN
Test Procedure Run Mode:	<b>Continuous/Single Step</b>	RF ANL
Autostart Test Procedure on Power-Up:	<b>Off/On</b>	RF ANL
		SCOPE
		SPEC ANL
		ENCODER
		DECODER
		RADIO INT
		More

TESTEXEa

## Customizing Testing

### Printing and Saving Test Results

Printing and saving test results are features of the software which require additional equipment and configuration. See **"Printing" on page 231** for detailed descriptions and instructions for these features.

---

**Using the Software/HP 8920A  
FW Rev Below A.14.00**



---

**NOTE:**

The firmware revision A.14.00 in the HP 8920A,D had several enhancements, which are standard in the HP 8920B. This chapter applies to users with:

- **HP 8920A test sets with firmware revision below A.14.00**

The test set's firmware revision is displayed on the top right corner of the configuration screen.

- Press SHIFT CONFIG to display the configuration screen and read the firmware revision.

If you have an HP 8920B or an HP 8920A with firmware revision above A.14.00, refer to **chapter 2, "Using the Software/HP 8920B, or HP 8920A FW above Rev. A.14.00," on page 21**. Contact Hewlett-Packard at 1-800-922-8920 for details on upgrading your firmware if desired.

---

## **Introduction**

The HP 11807A,E software can be run on the factory default settings or customized to your individual needs and the specific requirements. This chapter provides detailed information on how to load, run, and customize the software.

## Testing Overview

Pressing TESTS will display what is called the TESTS screen. To begin testing, you must first load the software and make connections. From this screen you have the option to:

### **Begin running tests:**

- The factory default settings are acceptable for your application or
- The software has already been customized and saved to a memory card


### **Customize the software:**

- Decide which tests you desire to run (**Edit Seqn**)
  - you may want to run all, some, or just one of the tests.
- Specify which channels to test (**Edit Freq**)
  - you may want to test one, some, or all of the channels on your radio.
- Change the pass/fail limits for specific measurements (**Edit Spec**)
  - you may want the pass/fail limits to have tighter or looser specifications than the default settings.
- Change the test environment and conditions (**Edit Parm**)
  - decide output format.
  - enter specific information about radio equipment and/or environment.
- Save any or all of the above customized changes to a memory card (**Proc Mngr**)

### **Set Up Test Set:**

- Print test results or certain screens.
- Decide when and where test results are displayed (**Edit Cnfg**)

## To Run Tests

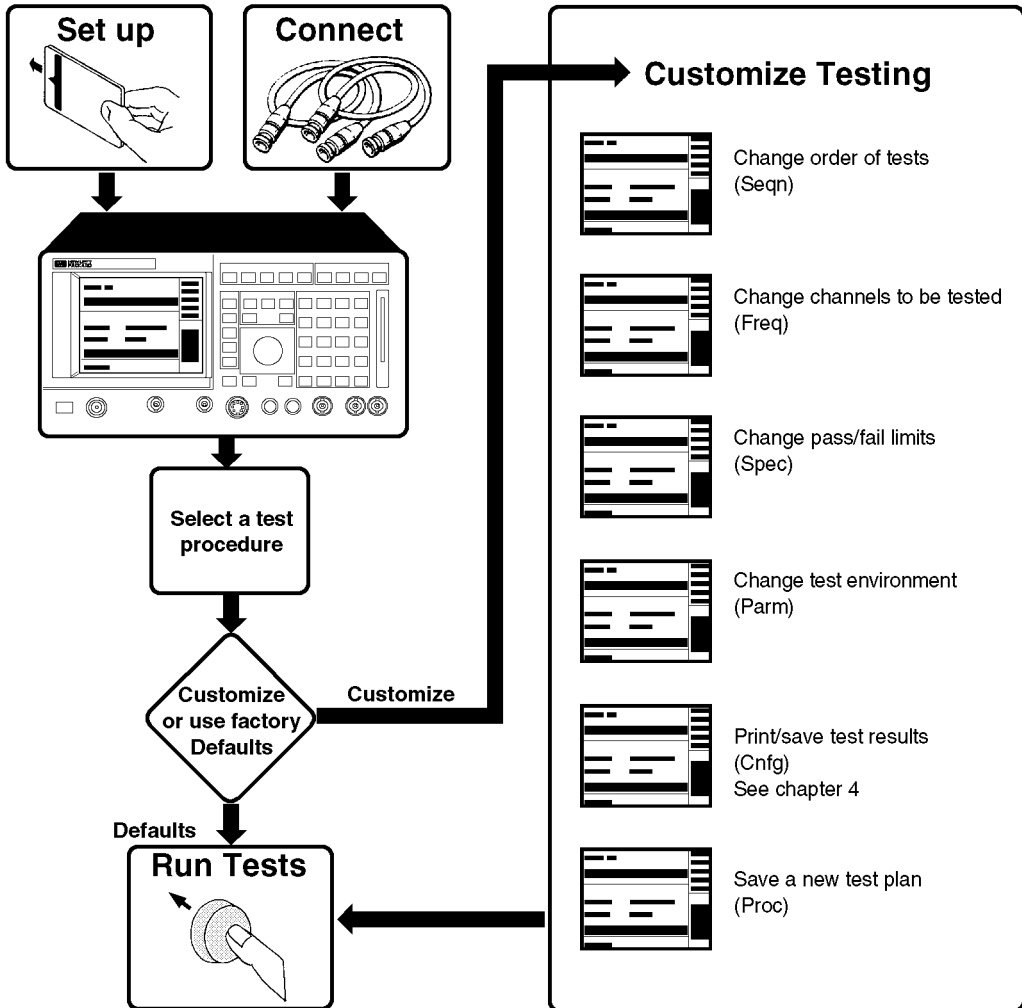


OVVIEW8

## Testing Overview


### Setting Up the Test Set and Making Connections

Before you begin testing, you must set up the test set and make the appropriate hardware connections.

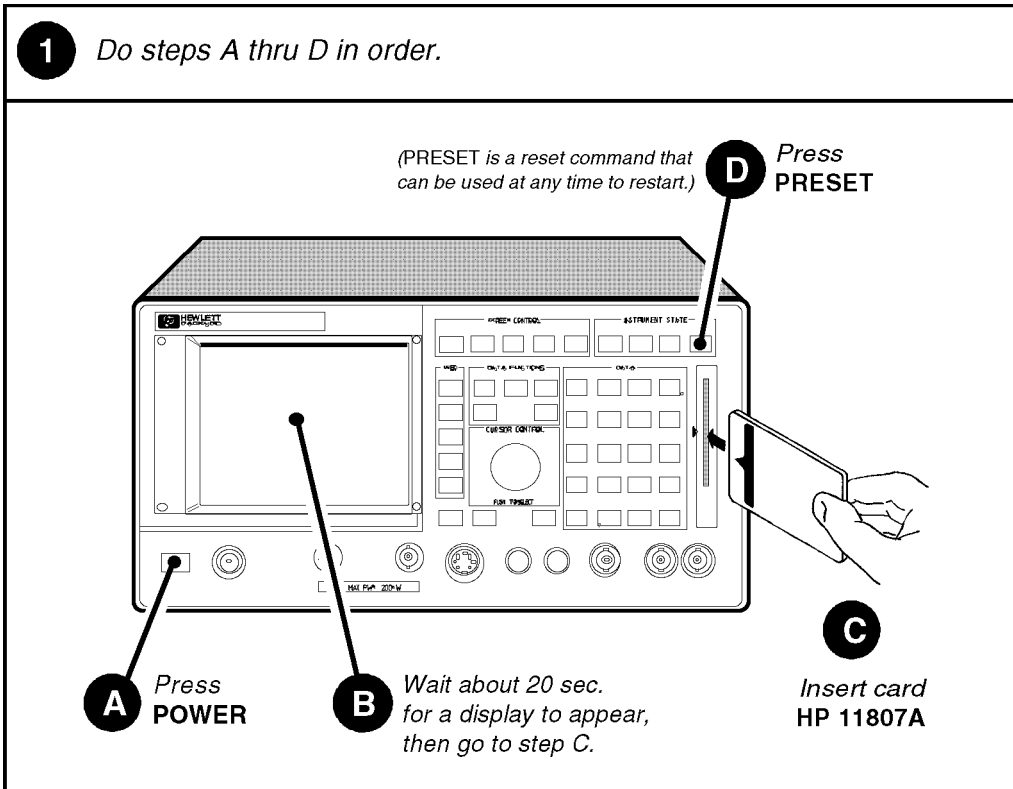

## Making a Connection

**2** Connect a radio to the test set.

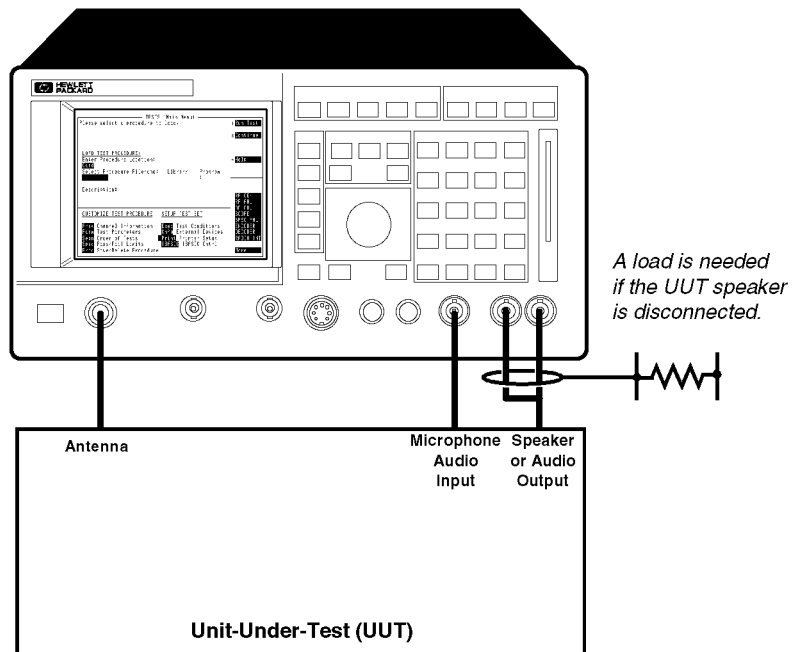

CONNECT

## Testing Overview

### Selecting a Test Procedure

To load the software, you must first select the location to load from (in this case, it will be **card**) and a procedure filename. Your card comes pre-programmed with at least one procedure. The actual software program does not get loaded into the test set's memory until k1 (**Run Test**) is selected. It will take approximately 2 minutes to load the software in an HP 8920A,D.

The software memory card can be removed after the program is loaded into the test set's memory. The program will remain in memory after a power-down/power-up cycle, unless it is manually deleted or a new program is loaded.

When tests begin to run, they are executed in the order in which they were entered into the Test Procedure.

Pressing CANCEL will pause the current test (press k2 to continue the test.)

#### **Loading a Software Upgrade, FW below rev A.12.04 only**

If you have purchased a software upgrade from the factory and are loading it for the first time, you must clear the old revision software from the test set memory before running the new revision software. If you do not, the new revision will not be loaded, and the old revision will be used. This is for FW below revision A.12.04 only. For firmware revision A.12.04 and above, the test set will check for differences in the code, and automatically load the most updated version.

The easiest way to clear the old revision software is to load a different software program. The LIST\_OPTS program that is stored in internal ROM can be used for this purpose.

**To Load the  
LIST\_OPTS Program:**



 
 

 

 
 
 
 

 
1. Press TESTS.
2. Position the cursor to **Select Procedure Location** and select it.
3. From the **Choices** menu, select **ROM**.
4. Position the cursor to **Select Procedure Filename** and select it.
5. From the **Choices** menu, select **LIST\_OPTS**.
6. Press k1 (**Run Test**).

The new revision software can now be loaded.



**Testing Overview**

**Selecting A Test Procedure**
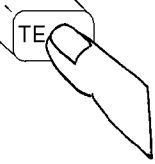
<p><b>1</b> Press <b>TESTS</b> to display the <b>TESTS</b> screen.</p>	<p><b>2</b> Position cursor at <b>Location</b> and select it.</p>
<p>If you are in <b>IBASIC</b>, press <b>SHIFT, CANCEL</b> before pressing <b>TESTS</b>.</p> 	<p><b>Position</b></p>  <p><b>Select</b></p>  <p>Procedure: Location</p> 
<p><b>3</b> Position cursor at <b>Card</b> and select it.</p>	<p><b>4</b> Position cursor at <b>Procedure</b> and select it.</p>
<p><b>Position</b></p>  <p><b>Select</b></p>  <p>Choices :</p> <ul style="list-style-type: none"> <li>■ Card</li> <li>ROM</li> <li>RAM</li> <li>Disk</li> </ul>	<p><b>Position</b></p>  <p><b>Select</b></p>  <p>Procedure: Location</p> 
<p><b>5</b> Position cursor at the desired <b>Procedure</b> and select it.</p>	<p><b>6</b> Position cursor at <b>Run Test</b> and select it.</p>
<p><b>Position</b></p>  <p><b>Select</b></p>  <p>Choices :</p> <ul style="list-style-type: none"> <li>■ XXXXXX</li> <li>YYYYYY</li> <li>ZZZZZZ</li> </ul>	<p><b>Position</b></p>  <p><b>Select</b></p>  <p>Procedures may take 2-3 minutes to load.</p> <ul style="list-style-type: none"> <li>■ Run Test</li> <li>2 Continue</li> <li>3 Edit Seqn</li> <li>4 Edit Freq</li> <li>5 Edit Spec</li> </ul>

PROCE01B

---

## Customizing Testing

Because of the diversity of individual testing needs, the software has been designed so that changes may be easily made from the test set's front panel. You may store these changes on an SRAM card so that you may skip these steps in the future. See "[Saving a Test Procedure Using the Procedure Manager](#)" on page 82.

You may customize your software at any time. Because your needs change, the software allows changes to its default settings when you need to make them and in any order that you choose. For example, tests may be inserted or deleted, and later after running the tests you can change the pass/fail limits or decide to test different channels.

Most testing customization is accomplished through the test set's Test Function screens. These Test Function screens are accessed from the main TESTS screen as shown in the following figure. All Test Functions are explained in this chapter by function.

---

### **NOTE:**


Edit Cnfg and IBASIC will not be explained in this customizing section.

- Edit Cnfg is used when setting up printers and external disk drives which is explained in "[Disks](#)" on page 211 and "[Printing](#)" on page 231.
- IBASIC is used when writing your own programs and is not explained in this manual. If you need to write your own IBASIC programs you may acquire the following manuals:
  - HP 8920A,D
    - *HP Instrument Basic User's Handbook* HP part number E2083-90000.
    - *HP 8920 Programming Manual* HP part number 08920-90204.
  - HP 8920B
    - *HP Instrument Basic User's Handbook Version 2.0* HP part number E2083-90005.
    - *HP 8920 Programming Manual* HP part number 08920-90204.

## Customizing Testing

### Beginning Software Customization

All software customization begins by accessing the TESTS screen first and then selecting the **Test Function** which will open the **Choices** menu. To access the TESTS screen, press TESTS on the front panel of the test set.

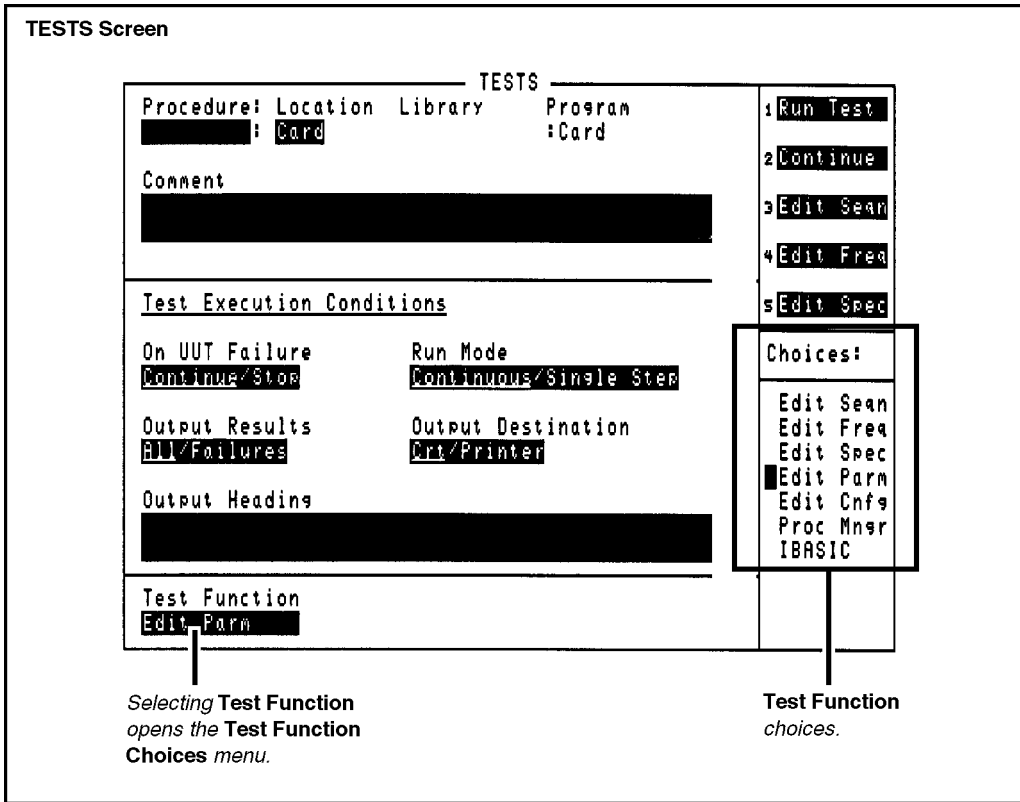

CUSTOM1B

## Changing the Order of Tests (Edit Sequence)

You may define a test sequence to include all, some, or just one of the tests available. When the first test is finished, the next will run. The test sequence will remain in the Test System's battery backed-up memory until another test sequence is loaded or set up. For information on saving a customized test sequence, see "[Saving a Test Procedure Using the Procedure Manager](#)" on page 82.

Creation of a test sequence is accomplished by inserting or deleting tests from the list of tests that come with the HP 11807A software package. See [chapter 4, "Test, Parameter, and Pass/Fail Limit \(Specification\) Descriptions,"](#) on page 89, for test descriptions.

The **All Chans?** field allows the user to decide to run the test on all channels entered in the frequency table, or just the channels which are selected as **Prime** in the Edit Freq screen. This feature allows the user the flexibility to use channels that are selected as **Prime** in all the tests in the sequence, and those selected as non-prime in a subset of tests (those with a **Yes** response in **All Chans**). For more information, see "[Specifying Channel Information \(Edit Frequency\)](#)" on page 71.


The following describes how to create a new test sequence and enter a response to **All Chans**.

**Customizing Testing**


 
**How to Change a Sequence of Tests**

**1** Press **TESTS** to display the **TESTS** screen.


*If you are in **IBASIC**, press **SHIFT, CANCEL** before pressing **TESTS**.*

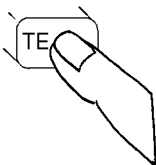


 
**2** Position cursor at **Test Function** and select it.

**Position**  
  
**Select**  


Test Function

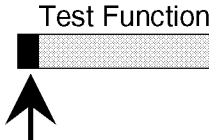


 
**3** Position cursor at **Edit Seqn** and select it.

**Position**  
  
**Select**  


Choices :

- █ Edit Seqn
- █ Edit Freq
- █ Edit Spec
- █ Edit Parm
- █ Edit Cnfg
- █ Proc Mngr
- █ IBASIC

**4** Position cursor at **Step #** field and select it.


**Position**  
  
**Select**  


Example


 
█ "#"

"TEST\_#"

"Test name"



**5** By rotating knob, highlight the **Step #** which precedes the insertion point of the new test that you are adding, then select it.

**Rotate**  
  
**Select**  


*For example, select step 7 if you want to insert the new test as step 8.*


█ "7"

"TEST\_#"

"Test name"

"8"

 

 
"New test"






SEQ1B

**Continue on next page**



 
**6** Position cursor at **Insrt Stp** and select it.

 <b>Position</b>		■ Insrt Stp
		2 Delet Stp
		3 Print All
		4 Edit Freq
		5 Edit Spec
 <b>Select</b>		




**7** Position cursor back at **Step #** field and select it.

 <b>Position</b>		■ "#"	"TEST #"
			"Test name"
 <b>Select</b>			

   

 
**8** Highlight **Step #** of the newly inserted test, then select it.

 <b>Position</b>	<i>This is the test that you selected at step 5.</i>		
		<table border="1"> <tr> <td>■ "#"</td> <td>"TEST #"</td> </tr> </table> "Test name"	■ "#"
■ "#"	"TEST #"		
 <b>Select</b>			

 

 
**9** Position cursor at **Test name** field and select it.

 <b>Position</b>		<table border="1"> <tr> <td>■ "#"</td> <td>"TEST #"</td> </tr> </table> "Test name"	■ "#"	"TEST #"
	■ "#"	"TEST #"		
 <b>Select</b>				

**10** Rotate knob until desired **Test Name** appears, then select it

 <b>Rotate</b>		<table border="1"> <tr> <td>■ "#"</td> <td>"TEST #"</td> </tr> </table> "Test name"	■ "#"	"TEST #"
	■ "#"	"TEST #"		
 <b>Select</b>				


**11** Position cursor at **All Chans?** field and select **Yes** or **No**.

 <b>Position</b>		<table border="1"> <tr> <td>■ Yes/No</td> </tr> </table> (Press the knob to change the selection.)	■ Yes/No
	■ Yes/No		
 <b>Select</b>			

Continue on next page

SEC2B

## Customizing Testing

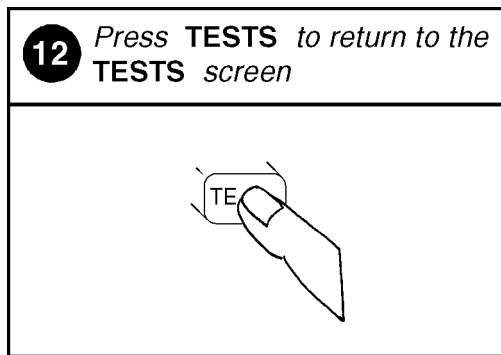

SEQ08

## Specifying Channel Information (Edit Frequency)

For each channel that you wish to specify, you must enter the following information into the Edit Frequency screen:

- **RX Chan Info**
  - Enter the channel number of the voice channel to be tested.
- **Test?** (yes/no) specifies whether you want to test the UUT at this channel. If set to “No” then the UUT will not be tested at that channel, but you may retain the channel information in the table for later use. If set to “Yes” then the channel will be used as defined by settings of **Prime?** and **All Chans?** fields.
- **Prime?** (yes/no) specifies which channels are “prime”. Select “Yes” if you want to test the UUT at this channel on all the tests in the procedure. Select **No** if you want to test the UUT at this channel on just a subset of tests, which are designated by selecting **Yes** in the **All Chans** field of the Edit Seqn screen. See **All Chans?** in "[Changing the Order of Tests \(Edit Sequence\)](#)" on page 67 for more information.

For information on saving the frequency table, see "[Saving a Test Procedure Using the Procedure Manager](#)" on page 82.



## Customizing Testing

The **All Chans** field in the Edit Seqn screen interacts closely with the **Prime?** field on the Edit Freq screen. When the software runs, it begins by retrieving the first channel entered into the Edit Freq screen. It then checks the response in the **Test?** field to determine if the UUT should be tested at that channel at this time. If there is a **No** response in the **Test?** field, the software will go to the next channel in the table. If there is a **Yes** response in the **Test?** field, the software will check if the channel is **Prime**.

A **Yes** response in the **Prime?** field indicates to test the UUT at that channel on the entire sequence of tests in the procedure. A **No** response in the **Prime?** field indicates to test the UUT at that channel on a subset of tests in the procedure. The subset of tests is determined by a **Yes** response in the **All Chans?** field. Therefore, tests with a **No** response in the **All Chans?** field will be run on *prime* channels only.

Below is an example of how the software would run if you had a procedure set up as follows:

<b>Chan #</b>	<b>Test?</b>	<b>Prime?</b>
Chan 01	Yes	Yes
Chan 02	Yes	No
Chan 03	No	No

<b>Test Number</b>	<b>All Chan? Setting</b>
Test 01	No
Test 02	Yes
Test 03	Yes
Test 04	No

The result would be:


 
 

 
 
 
 


 
 
 
 
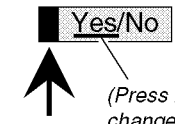
- Chan 01 is used in Test 01, Test 02, Test 03, and Test 04.
- Chan 02 is used in 02, and Test 03 only.
- Chan 03 is not used.

**Customizing Testing**

The following table shows how to properly configure these settings according to your testing needs.

<b>Testing Need</b>	<b>Necessary Field Settings</b>		
	<b>Test?</b>	<b>Prime?</b>	<b>All Chan?</b>
Test channel on all tests in sequence	Yes	Yes	Don't Care
Test channel on a subset of tests in sequence	Yes	No	Yes on tests you want included in the testing subset
Do not test this channel now, but retain information for later use	No	Don't Care	Don't Care

## How to Specify Channel Information

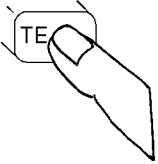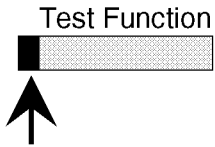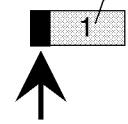



<p><b>1</b> Press <b>TESTS</b> to display the <b>TESTS</b> screen.</p> <p><i>IF you're in IBASIC, press <b>SHIFT, CANCEL</b> before pressing <b>TESTS</b>.</i></p> 	<p><b>2</b> Position cursor at <b>Test Function</b> and select it.</p> <p><b>Position</b></p>  <p><b>Select</b></p>  <p>Test Function</p> 
<p><b>3</b> Position cursor at <b>Edit Freq</b> and select it.</p> <p><b>Position</b></p>  <p><b>Select</b></p>  <p>Choices :</p> <ul style="list-style-type: none"> <li>■ Edit Seqn</li> <li>■ Edit Freq</li> <li>■ Edit Spec</li> <li>■ Edit Parm</li> <li>■ Edit Cnfg</li> <li>■ Proc Mngr</li> <li>■ IBASIC</li> </ul>	<p><b>4</b> Position cursor at <b>Chan #</b> field and select it.</p> <p><b>Position</b></p>  <p><b>Select</b></p>  <p>(Disregard this number)</p> 
<p><b>5</b> Scroll to the desired <b>Chan #</b> and select it.</p> <p><b>Position</b></p>  <p><b>Select</b></p>  <p>(This Chan # is an example.)</p>  <p>0.00000000</p>	<p><b>6</b> Position cursor at <b>Test?</b> field and select <b>Yes</b> or <b>No</b>.</p> <p><b>Position</b></p>  <p><b>Select</b></p>  <p>Yes/No</p> <p>(Press knob to change the selection.)</p> 

FREQ1B





Continue on next page

  Customizing Testing


 
 
**7** Position cursor at **Prime?** field and select **Yes** or **No**.

<b>Position</b> 	 <b>Yes/No</b>
<b>Select</b> 	 (Press knob to change the selection.)


**8** Position cursor at **RX Chan Info** field and select it.

<b>Position</b> 	 6 0.000000
<b>Select</b> 	

**9** Use **DATA** keys to enter new Channel #., then select it.

<b>Position</b> 	 6 0.000000 "New Info"
<b>Select</b> 	(Enter Channel #)

**10** Press **TESTS** to return to the **TESTS** screen.

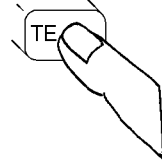



 
 

 

 

FREQ2b

## Changing Pass/Fail Limits (Edit Specifications)

Specifications are values that set pass/fail limits for tests. Default values are available in the test software. These default values may be changed to suit your particular requirements.

The following describes how to change the pass/fail (upper and lower) limits in the HP 8920A,D Edit Specification screen. See "[Pass/Fail Limit \(Specification\) Descriptions](#)" on page 166 for descriptions for each specification. For information on saving customized specifications, see "[Saving a Test Procedure Using the Procedure Manager](#)" on page 82.

### How to Change Pass/Fail Limits

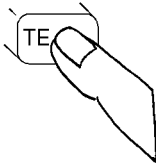
<p><b>1</b> Press <b>TESTS</b> to display the <b>TESTS</b> screen.</p>	<p><b>2</b> Position cursor at <b>Test Function</b> and select it.</p>
<p>IF you are in <b>IBASIC</b>, press <b>SHIFT, CANCEL</b> before pressing <b>TESTS</b>.</p> 	<p><b>Position</b></p>  <p><b>Select</b></p>  <p>Test Function</p> 
<p><b>3</b> Position cursor at <b>Edit Spec</b> and select it.</p>	<p><b>4</b> Position cursor at <b>Spec #</b> field and select it.</p>
<p><b>Position</b></p>  <p><b>Select</b></p>  <p>Choices :</p> <ul style="list-style-type: none"> <li>Edit Seqn</li> <li>Edit Freq</li> <li>■ Edit Spec</li> <li>Edit Parm</li> <li>Edit Cnfg</li> <li>Proc Mngr</li> <li>IBASIC</li> </ul>	<p><b>Position</b></p>  <p><b>Select</b></p>  <p>(Disregard this number.)</p> 


SPEC1B

Continue on next page


Customizing Testing

**5** Scroll to the desired **Spec #** and select it.

 
**Position**  
  
 (This **Spec #** is an example.)


**Select**  


6 FCC TX output p  
 -1.000000 1.




**6** Position cursor at **Lower limit** field and select it.


**Position**  

  
 
**Select**  


6 FCC TX output p  
 -1.000000 1.



**7** Use **DATA** keys to enter new value, then select it.


**Position**  

 
 
**Select**  


6 FCC TX output p  
 -0.500000 1.


(Enter your desired value.)

**8** Position cursor at **Upper Limit** field and select it.


**Position**  

 
 
**Select**  


C TX output power adjustme  
 .500000 1.000000 dB



**9** Use **DATA** keys to enter new value, then select it.


**Position**  


 
**Select**  


C TX output power adjustme  
 .500000 0.500000 dB


(Enter your desired value.)

**10** Position cursor at **Check** field and select it.

**Position**  


**Select**  




Both



 SPEC2B


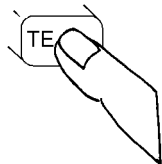
 
Continue on next page

**11** Position cursor at **Both** and select it.

<b>Position</b> 	<b>Choices :</b> Upper Lower <input checked="" type="checkbox"/> Both None
<b>Select</b> 	

SPEC3B

**12** Press **TESTS** to return to the **TESTS** screen.

<b>Position</b> 	
<b>Select</b> 	




 

 

 

 

 

 

## Customizing Testing

### Changing the Test Environment and Conditions (Edit Parameters)

The software uses parameters to optimize the test environment and conditions for your testing situation. Many of the parameters are determined by examining your test needs. Other parameters are determined by performing measurements to calibrate items in your system. Examples of parameters include cable losses, rated system deviation, and the audio test tone frequency your system requires. The HP 11807A software comes with default settings for parameters. The defaults should be reviewed for your particular needs. See "[Test Parameter Descriptions](#)" on page 130 for descriptions and default values for each parameter. For information on saving customized parameters, see "[Saving a Test Procedure Using the Procedure Manager](#)" on page 82.

The following describes how you can change parameters through the Edit Parameter screen to optimize your testing conditions.

### How to Change the Test Environment and Conditions

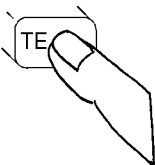
<b>1</b> Press <b>TESTS</b> to display the <b>TESTS</b> screen.	<b>2</b> Position cursor at <b>Test Function</b> and select it.				
<p>If you are in <b>IBASIC</b>, press <b>SHIFT, CANCEL</b> before pressing <b>TESTS</b>.</p> 	<table border="1"><tr><td data-bbox="658 950 779 1063"><b>Position</b> </td><td data-bbox="786 950 1135 1063"><b>Test Function</b> </td></tr><tr><td data-bbox="658 1071 779 1193"><b>Select</b> </td><td data-bbox="786 1071 1135 1193"></td></tr></table>	<b>Position</b> 	<b>Test Function</b> 	<b>Select</b> 	
<b>Position</b> 	<b>Test Function</b> 				
<b>Select</b> 					

PARM1B


Continue on next page

**3** Position cursor at **Edit Parm** and select it.

 **Position**



**Select**

 


Choices :


- Edit Seqn
- Edit Freq
- Edit Spec
- Edit Parm
- Edit Cnfg
- Proc Mngr
- IBASIC

**4** Position cursor at **Parm #** field and select it.

**Position**

 

**Select**

 


(Entries on your display may be different.)


1 RT audio test to  
0.00000

**5** Scroll to **Parm #** to be changed and select it

**Scroll**

 

**Select**

 


(This parameter number and description are examples.)


15 TX cable loss

**6** Position cursor at **Value** field and select it.

**Position**

 


**Select**

 


15 TX cable loss  
0.000000

**7** Use **DATA** keys to enter new value, and select it.

**Enter**

 


**Select**

 

15 TX cable loss  
1.000000

(Enter your desired value.)

**8** Press **TESTS** to return to the **TESTS** screen.

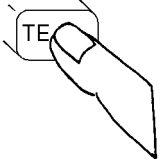

PARM2B

## Customizing Testing

### Saving a Test Procedure Using the Procedure Manager

A Test Procedure is a collection of pass/fail limits (specifications), the test environment and conditions (parameters), and a TEST sequence, saved in a file that customizes the test software to a specific application. You may save the file to a memory card or disk.


When you save a Procedure you will be saving parameters, specifications, and a test sequence, plus a library that contains the names of all parameters, specifications, and tests that are resident in the HP 11807A software. The library file comes from the HP 11807A software and cannot be modified. The library file will be automatically saved on the card or disk that is being used to store the new test procedure.

The following example shows how to save a new procedure to a memory card. For more information concerning procedures, see **"Procedures" on page 247**.

## How to Save a Test Procedure


**1** Press **TESTS** to display the **TESTS** screen.

If you are in **IBASIC**, press **SHIFT, CANCEL** before pressing **TESTS**.

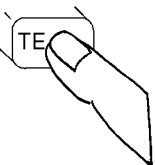


**2** Position cursor at **Test Function** and select it.


**Position**

 

**Select**

 


Test Function

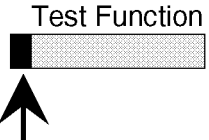


**3** Position cursor at **Proc Mngr** and select it.

**Position**

 


**Select**

 


Choices :

- Edit Seqn
- Edit Freq
- Edit Spec
- Edit Parm
- Edit Cnfg
- Proc Mngr
- IBASIC

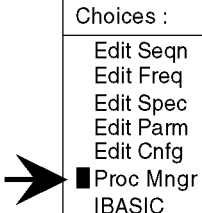


**4** Position cursor at **Procedure** field and select it.


**Position**

 

**Select**

 


Procedure: Location

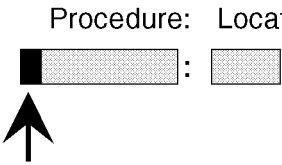


**5** Select characters to name the **Procedure**, then select **Done**.

**Position**

 


**Select**

 


Choices :

- Done
- Position
- Over/Ins
- Delete
- Del End
- Bk space
- A
- B
- C

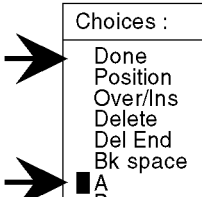

**6** Insert an initialized **SRAM** memory card.

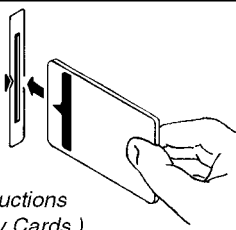

(For detailed memory card initialization instructions see chapter 4-Memory Cards.)

PROCMA1B

Continue on next page

**Customizing Testing**

**7** Position cursor at **Location** and select it.

Procedure: Location

**8** Position cursor at **Card** and select it.

**Position**

**Select**

Choices :

- Card
- RAM
- Disk

(You can also save procedures to an internal RAM disk or external disk drive. See Chapter 5-Disks.)

**9** Position cursor at **Comment** and select it.

**Position**

**Select**

Comment

**10** Select characters for the **Comment**, then select **Done**.

**Position**

**Select**

Choices :

- Done
- Position
- Over/Ins
- Delete
- Del End
- Bk space
- A
- B
- C

**11** Position cursor at **Library for new p....**, and select **Current**.

**Position**

**Select**

Library for new procedur

Current / [NO LIB]

(The underline indicates which option is selected. Pressing knob changes the selection.)

**12** Position cursor at **Program location for .....** and select it.


 
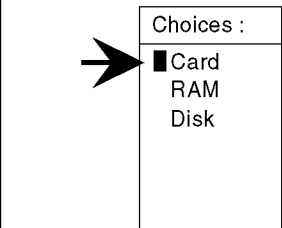
Program location for new procedu

Card


 



PROCMA2B

Continue on next page


**13** Position cursor at **Card** and select it.

<p><b>Position</b></p>  <p><b>Select</b></p> 	
---	---

**14** Position cursor at **Action** and select **Make Procedure**.

<p><b>Position</b></p>  <p><b>Select</b></p> 	<p><b>Action</b></p> <table border="1"> <tr> <td>                  Make Procedure                  Delete Procedure             </td> </tr> </table> <p>(To make selection, position the cursor in front of <b>Make Procedure</b>, then press the knob.)</p>	 Make Procedure Delete Procedure
 Make Procedure Delete Procedure		

**15** Press **TESTS** to return to the **TESTS** screen.

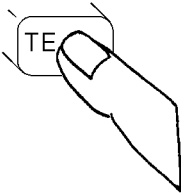

**To run the saved procedure:**

- 1) Load the **Procedure**.
- 2) Insert the original HP 11807B memory card.
- 3) Press **Run Test**.

The original card contains the full program needed to run your procedure.

PROCMA3B

## Customizing Testing

### Changing Test Execution Conditions

**Test Execution Conditions** define how your testing program starts and where and when test output occurs. You may decide to:

- Start the program automatically when the Test System is powered on. (**Autostart**)
- Stop testing when a measurement fails or continue through all of the tests without stopping. (**On UUT Failure**)
- Display (or print) only measurements that fail, or display (or print) all measurements that pass or fail. (**Output Results**)
- Pause between each measurement, or run through the entire test sequence. (**Run Mode**)
- Display output on CRT only, or display on CRT and print hardcopy. (**Output Destination**)

---

**NOTE:**

---

If printing test results is desired, after selecting **Printer** additional steps are **necessary to connect and configure the printer. See "Printing" on page 231.**

- Enter a title for an output heading for the displayed or printed results. (**Output Heading**). Select the field with the knob and enter the output heading by selecting the appropriate letters and the select **Done**.

**Test Execution Conditions** is located on the TESTS screen. Press TESTS to display them. To change a default setting, position the cursor to the desired field. Pressing the knob ("selecting") will toggle the underlined selection.

**Test Execution Conditions** settings (except for **Autostart**) are not retained after a power-down/ power-up cycle, and will return to their default settings. They are not stored on the memory card when a test procedure is saved.

## How to Change Test Execution Conditions

Selecting Stop causes the Test Procedure to stop when a failure occurs.

Selecting Single Step causes the Test Procedure to stop at the end of each measurement.

TESTS		
Procedure: [redacted]:	Location Library	Program [redacted]
Comment [redacted]	[redacted]	[redacted]
Test Execution Conditions		1 Run Test 2 Continue 3 Edit Setup 4 Edit Freq 5 Edit Spec
On UUT Failure Continue/Stop	Run Mode Continuous/Single Step	To Screen
Output Results All/Failures	Output Destination Crt/Printer	RF GEN RF ANL AF ANL SCOPE SPEC ANL ENCODER DECODER RADIO INT
Output Readings [redacted]	[redacted]	
Test Function Edit Setup		

Selecting Printer causes the test procedure results to be output to the CRT and a printer.

Selecting Failures causes the CRT and printer to display only the measurements that fail.

TESTEXEB



## Customizing Testing

### Printing and Saving Test Results

Printing and saving test results are features of the HP 11807A software which require additional equipment and configuration. See "**Printing**" on page 231 for detailed descriptions and instructions for these features.

---

**Test, Parameter, and Pass/Fail  
Limit (Specification)  
Descriptions**

### Introduction

---

## Introduction

Tests are a series of measurements, and one or more tests make up a procedure (see [chapter 2, "Using the Software/HP 8920B, or HP 8920A FW above Rev. A.14.00"](#)). While you may change the tests that make up a procedure, you may not change the measurements the test will perform. Generally, the order in which the tests are run is not important.

This chapter describes each test and the associated test parameters, pass/fail limits, and external equipment that are required. When you first load a test procedure or create a new test sequence, refer to this section to understand what test parameters and pass/fail limits are required for each test.

Tests are derived from the following industry standards:

- EIA – Electronic Industry Association, for 800MHz Cellular Subscriber Units
  - EIA/IS-19-B
  - EIA/TIA-553
- United Kingdom TACS Mobile Station - Land Station Compatibility Specification, Issue 4.

---

#### **NOTE:**

Refer to [chapter 2](#) in this manual for details about customizing a Test Procedure for testing your cellular phone.

## **TEST\_01. CP Registration**

This test reads the radio's Number Assignment Module (NAM) and outputs the following information:

- Phone number
- Serial number
- Power class
- Transmission (continuous or discontinuous)
- Equipped for (number of channels)

A registration must be performed before any tests can be run, otherwise the operator is prompted to enter the UUT phone number during testing.

The test works as follows:

- The UUT is forced to register with the test set.
- The system ID is incremented by 10 every time this test is performed to force the UUT to register.
- If an error occurs in this test, all testing is stopped.

### **Pass/Fail Limits Used**

#### **21. TX Current Drain @Levels 0-3**

## Test, Parameter, and Pass/Fail Limit (Specification) Descriptions

### TEST\_01. CP Registration

#### Test Parameters Used

01. AA Enter Ph#? [0=If Needed, 1=Always,Here]
2. CP AID Number
3. CP Control Channel
4. CP Prt RECC RVC Data [0=no 1=yes 2=fail]
5. CP SAT Tone
6. RC Compandor Always On [0=no 1=yes]
7. RT External Pad and Cable Loss
10. RT Nominal Supply Voltage
19. RX RF Level for Signaling
22. RX Set Audio Level [0=no xx=level volts]
23. RX Tolerance for Setting Audio Level
38. TX TS Atten for Signaling [0,20,40]
40. TX Voltage for Compressor Zero Crossing
41. ZA MIN From? [0=RECC,1=all 0's,2=Phone #]

---

## TEST\_02. CP Page

This test simulates a call to the mobile phone from the base station. Specifically, this test does the following:

1. Performs a page to the UUT.
2. Performs 3 of 5 majority voting on the Reverse Control Message.
3. Reverse Control Channel (RECC) information received from the UUT is printed.
4. Performs BCH error detection and correction of the Reverse Control Message.
5. Tests each section of the paging response message, bit by bit.

### Pass/Fail Limits Used

#### 21. TX Current Drain @Levels 0-3

### Test Parameters Used

01. AA Enter Ph#? [0=If Needed, 1=Always,Here]
2. CP AID Number
3. CP Control Channel
4. CP Prt RECC RVC Data [0=no 1=yes 2=fail]
5. CP SAT Tone
6. RC Compandor Always On [0=no 1=yes]
7. RT External Pad and Cable Loss
10. RT Nominal Supply Voltage
19. RX RF Level for Signaling
22. RX Set Audio Level [0=no xx=level volts]
23. RX Tolerance for Setting Audio Level
38. TX TS Atten for Signaling [0,20,40]
40. TX Voltage for Compressor Zero Crossing
41. ZA MIN From? [0=RECC,1=all 0's,2=Phone #]

**TEST\_03. TX Frequency Error**

---

## **TEST\_03. TX Frequency Error**

This test measures the difference between the unmodulated carrier frequency and the assigned carrier frequency. TX frequency error is measured with voice modulation off, while SAT modulation is always on.

The frequency error is expressed in parts-per-million (ppm).

### **Pass/Fail Limits Used**

#### **25. TX Frequency Error**

### **Test Parameters Used**

**NOTE:**

The following test parameters are used only if an external power supply has been configured to be used over HP-IB by the test set:

- 8. RT High Supply Voltage**
- 9. RT Low Supply Voltage**
- 10. RT Nominal Supply Voltage**
- 11. RT Test at Extreme Settings**

## **TEST\_04. TX Carrier Power**

This test measures the power available at the output terminals of the transmitter when connected to a 50 ohm load. This test is performed at the nominal supply voltage and can also be performed with high and low supply voltages for extreme measurements if a power supply is configured to the test set.

This test requires a programmable power supply if high-supply and low-supply power measurements are to be made. Output power is expressed in dBW or Watts.

### **Pass/Fail Limits Used**

***NOTE:***

Normally, all 8 power levels are tested; however, test parameter 27 allows you to select only the levels you want tested.

- 10 TX carrier power at level 0
- 11 TX carrier power at level 0 for class 2
- 12 TX carrier power at level 1
- 13 TX carrier power at level 2
- 14 TX carrier power at level 3
- 15 TX carrier power at level 4
- 16 TX carrier power at level 5
- 17 TX carrier power at level 6
- 18 TX carrier power at level 7

See [pass/fail limit 10-18. TX Carrier Power @Levels 0-7 on page 176](#)

### **Test Parameters Used**

[4. CP Prt RECC RVC Data \[0=no 1=yes 2=fail\]](#) (This test runs slower if test parameter 4 is set to print RVC data.)

[7. RT External Pad and Cable Loss](#)

[10. RT Nominal Supply Voltage](#)

[11. RT Test at Extreme Settings](#)

[27. TX Carrier Power Levels Tested](#)

[39. TX Units for Power Meas](#)



### Testing Conditions Fixed by the Software

- The power-level specification for Class III and IV radios are fixed by the software.

## **TEST\_05. TX Peak Frequency Deviation**

In this test, the audio input is over-driven at a constant level while the modulation rate is stepped from 300 Hz to 3 kHz (step size determined by test parameter 33). The steady-state peak+ and peak– frequency deviation is measured and reported at each step.

---

**NOTE:**

---

Audio connections from the radio to the test set are required for this test.

### **Pass/Fail Limits Used**

#### **26. TX Peak Frequency Deviation**

### **Test Parameters Used**

#### **33. TX Peak Frequency Deviation Step Frequency**

#### **34. TX Pk Freq Dev 50 Hz HPF**

### **Testing Conditions Fixed by the Software**

- Audio input level is increased 20 dB above the level required to produce 5.7 kHz deviation.
- The response of frequency deviation to step increases in audio level is measured using a 1 kHz rate.
- Steady-state for peak+ and peak– deviation is measured.  
Start frequency is set to 300 Hz.  
Stop frequency is set to 3 kHz.
- If test parameter 33 is set to 0, then the steady-state deviation is only measured at a 1 kHz rate.

**TEST\_06. TX Audio Frequency Response**

---

**TEST\_06. TX Audio Frequency Response**

This test measures how closely the frequency deviation of the transmitter follows a 6 dB/octave pre-emphasis slope over a given frequency range (between the audio response frequencies of 300 Hz and 3 kHz only).

**NOTE:** Audio connections from the radio to the test set are required for this test.

The test results indicate the flatness of the audio output as frequency is varied. The UUT's compressor is not disabled during this test.

Audio frequency response is expressed in dB error from the 6 dB/octave pre-emphasis slope.

**Pass/Fail Limits Used**

**9. TX Audio Response Dev From 6 dB/Oct**

**Test Parameters Used**

- 24 TX Audio response start frequency
  - 25 TX audio response step frequency
  - 26 TX audio response stop frequency
- See **pass/fail limit 24-26. TX Audio Response Start, Step, and Stop Frequencies on page 151**

**Testing Conditions Fixed by the Software**

- Audio frequency response is measured at 2.3 kHz deviation and the reference is taken at a 1 kHz rate.
- The rms detector is used when the 2.3 kHz reference is set.

## **TEST\_07. TX Audio Distortion**

This test measures the level of the demodulated carrier's audio distortion.

**NOTE:**

Audio connections from the radio to the test set are required for this test.

Transmitter audio distortion is expressed in dB.

### **Pass/Fail Limits Used**

**8. TX Audio Distortion**

### **Test Parameters Used**

**32. TX De-emphasis**

### **Testing Conditions Fixed by the Software**

- Audio distortion is measured at 2.3 kHz deviation and a 1 kHz rate.

## TEST\_08. TX Signaling Tone

This test measures the signaling tone's frequency and peak deviation. Since the SAT tone is always on in this test, deviation is measured with the rms detector, and without the signaling tone on. The peak deviation of the signaling tone is calculated from the two readings. Therefore, test results indicate peak deviation, not peak+ or peak-.

Since this test is run in the "maintenance mode" where the base station is waiting for an answer, the operator must press the send key on the handset to exit the test.

Signaling tone frequency and deviation are expressed in kHz.

### **Applications:**

The signaling tone (ST) is a 10 kHz tone generated by the radio on a voice channel and is transmitted to the cell site for confirming orders (Alert, Audit, Change Power, etc.), and for signaling flash and release requests.

### **Pass/Fail Limits Used**

- 29. TX Signaling Tone Deviation
- 30. TX Signaling Tone Frequency

## **TEST\_09. TX FM Hum and Noise**

This test measures the ratio of residual frequency modulation to the standard test modulation.

---

### ***NOTE:***

---

Audio connections from the radio to the test set are required for this test.

FM hum and noise is expressed in dB, from the formula:

$$-20 \times \text{Log} (\text{Reference Deviation} \div \text{Present Deviation})$$

### **Pass/Fail Limits Used**

**24. TX FM Hum and Noise**

### **Test Parameters Used**

**32. TX De-emphasis**

### **Testing Conditions Fixed by the Software**

- TX FM hum and noise is measured from a reference taken at 2.3 kHz deviation at a 1 kHz rate with a fixed SAT tone of 6000 Hz.

## TEST\_10. TX SAT Frequency Error & Deviation

This test measures the frequency error and peak deviation of three SAT tones. The rms detector is used for measuring SAT tone deviation and the reading is converted to peak.

Also, this test uses the 6 kHz BPF option if it is installed. (If there is no filter and the UUT has an open microphone, the readings may be affected by background noise. In this case, mute the handset.)

SAT frequency error is expressed in Hz, and peak deviation in kHz.

### **Applications:**

The supervisory audio tones are out-of-voice-band audio tones used for signaling. Three frequencies have been assigned: 5970, 6000, and 6030 Hz. One of the three tones is added to the voice transmission by a cell site. The radio then detects the tone and modulates the transmitted voice-channel carrier with a constant (relative) phase tone which is filtered or regenerated from the received tone to establish a closed loop between the mobile (cellular radio) and the cell site.

Transmission of the SAT by a cellular radio is suspended during transmission of wideband data on the reverse voice channel (RVC), but is not suspended when the signaling tone (ST) is sent.

### **Pass/Fail Limits Used**

**27. TX SAT Deviation**

**28. TX SAT Frequency Error**

## **TEST\_11. TX Wideband Data Deviation**

This test provides three possible modes of operation, determined by parameter "**43. ZC Trnsient/SS Data [0=tran 1=bth 2=ss]**" on page 165.

The first method, selected by setting parameter 43 to 0=tran, measures the Peak+ and Peak- frequency deviation of the data in the entire Reverse Voice Channel (RVC) burst to ensure that it is within the specified limits.

The entire burst is tested by sending the FVC is sent 5 times while the peak+ hold detector is on, and another 5 times while the peak- hold detector is on.

The second method, selected by setting parameter 43 to 1=bth, first performs the test on just the steady state portion of the RVC data signal, followed by a test of the entire signal (described above).

The steady state portion of the test is performed by measuring the RVC data signal between 20 msec and 50 msec following the beginning of the data burst. The peak + and - results are compared to values in pass/fail limit "**31. TX Wideband Data Deviation**" on page 191. The results of the transient portion of the test are compared to values in the pass/fail limit "**32. TXT Wideband Data Deviation Transient**" on page 192.

The third method, selected by setting parameter 43 to 2=ss, performs the test on just the steady state portion of the RVC data signal (as described above).



## Test, Parameter, and Pass/Fail Limit (Specification) Descriptions

### TEST\_11. TX Wideband Data Deviation

---

**NOTE:**

In all methods, the UUT should blank the SAT tone before sending the RVC message; therefore, SAT deviation should not be included in the deviation measurement. If the UUT has an open microphone, the readings may be affected by background noise. In this case, mute the handset.

The second and third test methods use trigger delay capabilities and can only be performed on an HP 8920B. If you are using an HP 8920A with HP 11807A, the software will ignore the setting of parameter 43 and perform the test using the first method only.

Using the first method, Hewlett-Packard Company has found that some cellular telephones fail this test because the telephones produce a carrier frequency transient at the beginning of wideband data transmission. This causes the peak frequency deviation to exceed the maximum specification of  $\pm 6.4 \text{ kHz} \pm 10\%$  specified in the TACS/ETACS Standard. This transient typically occurs during the first 10 milliseconds of the wideband data transmission from the telephone. The HP 11807A Option 004 software measures the FM peak deviation during the entire period while the telephone transmits its data and holds and displays only the highest positive and negative peaks detected. The HP Test Set has a fast peak detector which captures the peak deviation that occurs over the entire period, including the deviation that occurs in the first 10 milliseconds. The measurement method conforms to the TACS/ETACS Standard.

**TEST\_11. TX Wideband Data Deviation**

**Applications:**

Wideband data is 8-kilobit/second Manchester-encoded data that is used for cellular system signaling and control. Manchester encoding is accomplished by transforming each NRZ (non-return to zero) binary one to a zero-to-one transition and each NRZ binary zero to a one-to-zero transition.

The wideband data stream is then used to modulate the transmitter carrier using direct, binary, frequency-shift keying (FSK). A one (high state) into the modulator corresponds to a peak frequency deviation above the carrier frequency, and a zero (low state) into the modulator corresponds to a peak frequency deviation below the carrier frequency.

Wideband data is used on the paging and access channels and is used on the voice channels for handoff and other subscriber-unit control functions. All other modulation sources to the transmitter are inhibited when wideband data is being transmitted.

**Pass/Fail Limits Used**

**31. TX Wideband Data Deviation**

**32. TXT Wideband Data Deviation Transient**

**Test Parameters Used**

**43. ZC Trnsient/SS Data [0=tran 1=bth 2=ss]**

## TEST\_12. TX Compressor Response

This test measures the compressor's zero reference deviation and operating range. For every 2 dB change in input level, there should be a nominal output level change of 1 dB.

**NOTE:** Audio connections from the radio to the test set are required for this test.

Compressor response is expressed in kHz for the zero reference deviation, and in dB of tracking error over the indicated operating range.

### Applications:

A compressor is used in the voice input circuitry to decrease the variability of the modulation due to volume changes from the talker; this provides the appropriate predistortion for the complementary expander that is used in the cell-site receiver.

### Pass/Fail Limits Used

- 19. TX Compressor Track Error dB
- 20. TX Compressor Zero Reference Deviation

### Test Parameters Used

- 28 TX compressor start level
  - 29 TX compressor step level
  - 30 TX compressor stop level
- See [parameter 28-30. TX Compressor Start, Step, and Stop Levels on page 153](#)
- 40. TX Voltage for Compressor Zero Crossing

### **Testing Conditions Fixed by the Software**

- Compressor response to different input levels is measured.
- The “zero crossing” deviation is first measured by applying a 1 kHz rate input voltage to the UUT at a level specified by test parameter 40.
- The deviation is next set to 2.3 kHz and a reference is taken with the rms detector.
- The input is then varied using the start, stop and step test parameters 28-30 and the rms deviation is measured and the compressor response relative to the 2.3 kHz reference is calculated.

**TEST\_13. TX Current Drain**

---

## **TEST\_13. TX Current Drain**

This test measures the power-supply current required by the radio when it is transmitting. Also, this test requires that the test set has the optional current-measuring circuit Option 003 or an external power supply is configured to the test set. If an external power supply is configured, this test reads current from the external supply.

The transmitter current drain is expressed in Amps.

### **Pass/Fail Limits Used**

**NOTE:**

Normally, all 8 current-drain levels are tested; however, test parameter **"27. TX Carrier Power Levels Tested" on page 152** allows you to select only the levels you want.

**21. TX Current Drain @Levels 0-3**

**22. TX Current Drain @ Levels 4-7**

### **Test Parameters Used**

**4. CP Prt RECC RVC Data [0=no 1=yes 2=fail]**

**27. TX Carrier Power Levels Tested**

### **Testing Conditions Fixed by the Software**

- Only SAT modulation is on during the test.

---

## TEST\_14. RX Expander

This test measures the expander's zero reference level and operating range. For every 1 dB change in input level, there should be a nominal output level change of 2 dB.

---

### *NOTE:*

---

Audio connections from the radio to the test set are required for this test.

Expander response is expressed in dBV for the zero reference level, and in dB for the tracking error over the indicated operating range.

### **Applications:**

An expander is used to provide the complement of the cell site transmitter-compressor predistortion, this also provides receiver quieting.

### **Pass/Fail Limits Used**

**3. RX Expander Track Error**

**4. RX Expander Zero Reference Level**

### **Test Parameters Used**

15 RX Expander Response Start Level

16 RX Expander Response Step Level

17 RX Expander Response Stop Level

See **parameter 15-17. RX Expander Response Start, Step, and Stop Levels on page 144**

**22. RX Set Audio Level [0=no xx=level volts]**

**23. RX Tolerance for Setting Audio Level**

### Testing Conditions Fixed by the Software

- The expander response is measured at a 1 kHz rate and an RF input level of -50 dBm.
- A 2.3 kHz deviation is applied and the “zero crossing” of the receiver is measured. This value is retained as the reference level.
- Deviation is then varied over the desired range and the expander response relative to the “zero crossing” point is calculated.
- The sweep levels are set by the parameters listed above.

## **TEST\_15. RX Audio Frequency Response**

This test measures the ability of the receiver's audio output circuitry to follow a 6 dB/octave de-emphasis curve, as well as to follow an audio-bandpass response. The RF level for signaling (test parameter 19) is applied with a constant deviation. The modulation rate is swept over the audio frequency-response range (determined by test parameters 12-14).

---

### **NOTE:**

---

Audio connections from the radio to the test set are required for this test.

Receiver audio frequency response is expressed in dB error from a 6 dB/octave curve.

### **Pass/Fail Limits Used**

#### **2. RX Audio Rsp Dev From -6 dB/oct**

### **Test Parameters Used**

#### **6. RC Compandor Always On [0=no 1=yes]**

12 RX audio response start frequency

13 RX audio response step frequency

14 RX audio response stop frequency

See **parameter 12-14. RX Audio Response Start, Step, and Stop Frequencies on page 143**



**TEST\_15. RX Audio Frequency Response**

**Testing Conditions Fixed by the Software**

- A -50 dBm RF signal is applied to the receiver's antenna.
- The -50 dBm RF signal is modulated to deviate to 2.3 kHz at a 1 kHz rate with a 6000 Hz SAT tone present and a reference reading is made.
- The frequency rate is then swept over the desired range and the response measured.
- If the compandor is always on, a 2:1 correction is applied to the measured results.

## **TEST\_16. RX Audio Distortion**

This test measures the distortion from the receiver when a standard test tone is applied to the radio.

---

**NOTE:**

---

Audio connections from the radio to the test set are required for this test.

Also, this test uses the C-Message or CCITT audio filters if either of these options are installed in the test set. Otherwise it uses the 300 Hz to 3 kHz filters.

### **Pass/Fail Limits Used**

#### **1. RX Audio Distortion**

### **Testing Conditions Fixed by the Software**

- A -50 dBm RF signal is applied to the receiver's antenna.
- The -50 dBm RF signal is modulated to deviate to 2.3 kHz at a 1 kHz rate with a 6000 Hz SAT tone present.

## TEST\_17. RX Hum and Noise

This test measures the ratio, expressed in dB, of:

- The residual audio output in the absence of modulation,
- To the rated audio output.

**NOTE:** Audio connections from the radio to the test set are required for this test.

### Pass/Fail Limits Used

#### 5. RX Hum and Noise

### Testing Conditions Fixed by the Software

- A  $-50$  dBm RF signal is applied to the receiver's antenna.
- The  $-50$  dBm RF signal is modulated to deviate to 6.4 kHz at a 1 kHz rate with a 6000 Hz SAT tone present.

---

## TEST\_18. RX SINAD

This test sets and measures the ratio, expressed in dB, of:

- Signal + Noise + Distortion,
- to Noise + Distortion.

The receiver SINAD is measured at the RF level for SINAD specified by test parameter 20.

---

### *NOTE:*

---

Audio connections from the radio to the test set are required for this test.

### **SINAD Definition:**

Receiver SINAD is basically a distortion measurement of the receiver's audio output. This measurement differs from a "normal distortion" measurement in that the noise part of the equation is a significant part of the measurement.

This test is intended to measure receiver sensitivity. Receivers are typically required to provide at least 12 dB SINAD (less than 25% noise and distortion for RF input levels below 1 microvolt.

## Pass/Fail Limits Used

### 7. RX SINAD

**TEST\_18. RX SINAD**

**Test Parameters Used**

**NOTE:**

High and low supply voltages are measured only if an external power supply has been configured to be used over HP-IB by the HP 8920A and if test parameter 11 is set to test at extremes.

**8. RT High Supply Voltage**

**9. RT Low Supply Voltage**

**10. RT Nominal Supply Voltage**

**11. RT Test at Extreme Settings**

**20. RX RF Level for SINAD**

**21. RX RF Level for SINAD at Extremes**

**Testing Conditions Fixed by the Software**

- The “RF level for SINAD” (test parameter 20) is modulated to deviate to 5.7 kHz at a 1 kHz rate with a 6000 Hz SAT tone.
- The measurement is repeated at high and low supply voltages if test parameter 11 is set to 1.

## **TEST\_19. RX FVC Order Message Error Rate**

This test simulates a Forward Voice Channel (FVC) order message being sent from a cell site to the cellular radio and measures the Order Message Error rate.

The test works as follows:

- A Forward Voice Channel (FVC) audit message is sent 100 times and the number of acknowledgements from the UUT is counted.
- The RF level is set by test parameter 18.
- If the UUT misses 10 acknowledgements in a row the test terminates.

FVC order message error rate is expressed in %.

### **Pass/Fail Limits Used**

**6. RX Order Message Error Rate (OMER)**

### **Test Parameters Used**

**18. RX FVC Message Error Rate RF Level**

## TEST\_20. CP Release

This test simulates a cellular radio executing a release from the cell site after obtaining a voice channel.

The test works as follows:

- A release message is sent from the test set, then it waits two seconds before measuring the TX output power.
- You may use the following parameters to select your desired units for test results output:
  - dBWatts - Set parameter 39 TX Units for Power Meas to 0=dBW
  - Watts - Set parameter 39 TX Units for Power Meas to 1=Watts
  - dBm - Set parameter 42 ZB use DUPLEX OUT & ANT IN to 1=yes, and use the DUPLEX OUT port for the forward channel, and the ANT IN port for the reverse channel.
- The output power should be  $< -25$  dBW for the test to pass.

### Test Parameters Used

**39. TX Units for Power Meas**

**42. ZB use DUPLEX OUT & ANT IN**

---

## TEST\_21. CP Origination

This test simulates a call from the cellular phone to the base station (cell site). Specifically, this test does the following:

1. Performs an origination by the cellular radio.
2. Performs 3 of 5 majority voting on the Reverse Control Message.
3. Performs BCH error detection and correction of the Reverse Control Message, Wideband data.
4. Tests each section of the origination message, bit by bit.
5. Sends an Initial-Voice-Channel-Designation order to the UUT directing it to tune to a voice channel obtained from the **Channel Information** (or **Edit Freq**) table.

The test works as follows:

- A call is placed from the UUT to the test set.
- The operator is instructed to dial 123 123 4567 after the UUT has service. (Service is indicated by the ROAM lite coming on and the NO SERVICE lite going off on the UUT.)
- The RECC message is compared to the required message, except for the SCM and SN data.



**TEST\_22. OT No Audio Functional**

---

## **TEST\_22. OT No Audio Functional**

These tests are designed to provide you with a quick evaluation of the cellular radio receiver and transmitter without the need for audio connections from the radio to the test set. The following tests are performed:

**TEST\_03. TX Frequency Error**

**TEST\_04. TX Carrier Power**

**TEST\_08. TX Signaling Tone**

**TEST\_10. TX SAT Frequency Error & Deviation**

**TEST\_11. TX Wideband Data Deviation**

**TEST\_27. CP Hook Flash**

**TEST\_20. CP Release**

**TEST\_21. CP Origination**

RX tones functional

RX SINAD functional

TX microphone functional

The first eight tests in the above list are described individually in this chapter. The final three tests are available only as part of this test and they work as follows:

- When prompted, the operator is required to listen for tones from the receiver, and then select whether the test passed or failed.
- The operator is required to whistle into the transmitter and observe the deviation on the test set, and then select whether the test passed or failed.

### **Test Parameters Used**

**19. RX RF Level for Signaling**

**20. RX RF Level for SINAD**

---

**NOTE:**

Also, see individual test descriptions for additional specifications and test parameters associated with each test.

---

---

## **TEST\_23. TX Quick General**

These tests are designed to provide you with a quick evaluation of the cellular radio's transmitter capabilities.

**NOTE:** Audio connections from the radio to the test set are required for this test.

The following tests are included:

- TEST\_04. TX Carrier Power**
- TEST\_03. TX Frequency Error**
- TEST\_05. TX Peak Frequency Deviation**
- TEST\_07. TX Audio Distortion**
- TEST\_06. TX Audio Frequency Response**
- TEST\_12. TX Compressor Response**
- TEST\_09. TX FM Hum and Noise**
- TEST\_11. TX Wideband Data Deviation**
- TEST\_10. TX SAT Frequency Error & Deviation**
- TEST\_08. TX Signaling Tone**

**NOTE:** Also, see individual test descriptions for additional pass/fail limits and test parameters associated with each test.

**TEST\_24. RX Quick General**

---

## **TEST\_24. RX Quick General**

These tests are designed to provide you with a quick evaluation of the cellular radio's receiver capabilities.

**NOTE:** Audio connections from the radio to the test set are required for this test.

The following tests are performed:

**TEST\_18. RX SINAD**

**TEST\_16. RX Audio Distortion**

**TEST\_15. RX Audio Frequency Response**

**TEST\_14. RX Expander**

**TEST\_17. RX Hum and Noise**

### **Test Parameters Used**

#### **19. RX RF Level for Signaling**

**NOTE:** Also, see individual test descriptions for additional specifications and test parameters associated with each test.

## **TEST\_25. CP Flow Chart**

This test displays a flow-chart representing a cellular phone as it gains access to a system. Once a voice channel is obtained, you can test cellular-radio functions including handoffs, power-level changes, SAT changes, hook flashes, and clearing the system. At each stage, reverse wideband data is displayed for analysis, along with measurements of power, frequency error, deviation, and SAT.

### **Test Parameters Used**

- 3. CP Control Channel**
- 4. CP Prt RECC RVC Data [0=no 1=yes 2=fail]**
- 5. CP SAT Tone**
- 7. RT External Pad and Cable Loss**
- 19. RX RF Level for Signaling**

## Running the MANUAL Test Procedure

The MANUAL Test Procedure uses TEST\_25. There are a few things you need to know when you run this test.

- The control channel can be changed by selecting the **Cnt1 Chan** field.
- If the cellular phone doesn't roam, refer to **chapter 6, "Problem Solving," on page 265** for help.
- When the cellular phone is first set to roam, a phone registration must be done before paging can be done.

To register the phone, select the **Regist** field.

- After a phone registration is done, phone paging can be done.

Select the **Page** field to page the phone.

Dial a number and press the phone's SEND key to initiate an origination. Registration is not required for origination.

- Once a voice channel is obtained, refer to the flowchart on the screen and the associated fields to the right of the screen for operating functions.
  - **maintenance** allows you to run a maintenance check of the phone's signaling tone, frequency, and deviation.
  - **clear ls** allows you to clear the land station (ls).
  - **clear ms** allows you to clear the mobile station (ms).
  - **chng chan** allows you to change cellular phone channels.
  - **chng pwr** allows you to change cellular phone power.
  - **chng sat** allows you to change the Supervisory Audio Tone (sat).
  - **Hook Flash** allows you to transmit a hook flash number from the phone and receive and display it on the test set.

## **TEST\_26. TX Switch Channels**

This test measures transmitter frequency error, power, and SAT frequency error over a range of channels defined by test parameters 35-37.

The test works as follows:

- The UUT's channel number is changed over the desired range indicated by test parameters 35-37.
- At each new channel, the TX output power, RF frequency error, and SAT frequency error is measured.
- Each time the channel is changed, the SAT frequency is changed to the next valid SAT tone.

### **Pass/Fail Limits Used**

10 TX carrier power at level 0

11 TX carrier power at level 0 for class 2

12 TX carrier power at level 1

13 TX carrier power at level 2

See [parameter 10-18. TX Carrier Power @Levels 0-7 on page 176](#)

[25. TX Frequency Error](#)

[28. TX SAT Frequency Error](#)

## Test, Parameter, and Pass/Fail Limit (Specification) Descriptions

### TEST\_26. TX Switch Channels

#### Test Parameters Used

35 TX switch channels start channel

36 TX switch channels step channel

37 TX switch channels stop channel

See [parameter 35-37. TX Switch Channels Start, Step, and Stop Channel on page 158](#)

## **TEST\_27. CP Hook Flash**

This test verifies that the correct hook-flash number (3 digits) is correctly sent by the cellular radio.

The test works as follows:

1. A voice channel is established.
2. The operator is prompted to dial a 3-digit number and press the SEND key on the UUT.
3. The test detects the resulting signaling tone from the UUT and sends a “send-called-address” order to the UUT on the Forward Voice Channel (FVC).
4. The test receives the hook-flash number from the UUT on the Reverse Voice Channel and displays it. (The number is not compared to a specific value or number.)



## TEST\_28. TX DTMF Frequency Error

This test measures the transmitter's Dual-Tone Multifrequency (DTMF) frequency error for the phone's key pad. The low tone (LT) and high tone (HT) DTMF frequencies for each selected key are checked to make sure that the frequencies are within the DTMF frequency error limits for their nominal values.

DTMF frequency error is expressed in %.

### Applications:

There are two groups of sinusoidal high and low frequencies consisting of 1209, 1336, and 1477 Hz (HT's) in one group, and 609, 770, and 941 Hz (LT's) in the other group.

A DTMF signal is generated when a key is pressed on the handset. Each dialing key makes use of one assigned frequency from each group. The DTMF signal is encoded and transmitted for control purposes when dialing an origination from the phone.

## Pass/Fail Limits Used

### 23. TX DTMF Frequency Error

---

## **TEST\_29. CP Issue 4 Page and MS Release**

This test performs an issue 4 page and MS (Mobile Station) release on the UUT. The test ensures that the UUT can correctly respond to a call and then respond to various commands for the release.

## Test Parameter Descriptions

Test parameters are used to define the conditions under which a test will run. You may edit the test parameters to change the default values to meet your specific testing needs and conditions. Test parameters may be used in one or more tests.

For information on editing test parameters, see "[Customizing Testing](#)" on page 30.

Test parameters remain in battery-backed-up memory until you select a procedure to run. If you wish to prevent them from being lost when a new procedure is selected, you will have to have them in a procedure. See "[Saving a Test Procedure](#)" on page 48.

To print the list of test parameters, see "[Printing](#)" on page 231.

There are several different types of test parameters:

- Receiver/Transmitter Test Parameters (RT)
- Receiver Test Parameters (RX)
- Transmitter Test Parameters (TX)
- Extra Test Parameters (XX)

---

**NOTE:**

Refer to [chapter 2](#) in this manual for details about selecting test parameters for your FM radio.

---

---

## 01. AA Enter Ph#? [0=If Needed, 1=Always,Here]

This parameter specifies from where the test will get the phone number of the UUT. You may enter one of three options:

- 0
- 1
- the 10 digit phone number of the UUT

Setting Parameter 01 **AA Enter Ph#?** to **0=If Needed** tells the test set to prompt the user for the phone number of the UUT if:

- The phone number is needed to perform the first test in a test sequence, AND
- A MIN was not obtained by the test set running a previous test procedure.

Setting Parameter 01 to **1=Always** tells the test set to prompt the user for the phone number of the UUT each time the test procedure is run. (Note that if Parameter 41 **ZA MIN From?** is set to **1=All 0's** indicating an all zero MIN, the user is not prompted for a phone number). Setting Parameter 01 to anything other than **0=If Needed** or **1=Always** will cause the test set to use the number entered as a ten digit phone number for paging the UUT if one of the following conditions are also true:

- Parameter 41 **ZA MIN From?** is set to **2=Phone #**, indicating to the test set to get the MIN from the phone number.
- Parameter 41 is set to **0=RECC** and a MIN has not been previously entered into the test set by running a previous test procedure.

## Test, Parameter, and Pass/Fail Limit (Specification) Descriptions

### 01. AA Enter Ph#? [0=If Needed, 1=Always,Here]

#### Example

If Parameter 01 is set to **1231234567** and Parameter 41 is set to **2=Phone#**, the test set will use a MIN corresponding to phone number 123-123-4567 to page the UUT.

---

#### **NOTE:**

If a registration or an origination is performed that causes a new MIN to be entered into the test, this new MIN will then be used instead of the MIN derived from the entered phone number.

---

#### Used in Tests

All tests (when a system initialization is done by the software).

## **2. CP AID Number**

This test parameter is used to identify the Area Identification Number (AID) for the cellular phone's traffic area.

**For Example:**

If the UUT's AID number is 11100, you would enter **11100** as the value.

**It's Used in the Following Tests:**

All Tests (when a System Initialization is done by the software)

### 3. CP Control Channel

---

### 3. CP Control Channel

This test parameter is used to identify the control channel used by the UUT. Cellular phones that work on only one system need to specify the correct control channel in order to allow the phone to get into the “ROAM” state.

**For Example:**

If you want to use control channel 23 to set up a call with the UUT, you would enter **23** as the value.

**It’s Used in the Following Tests:**

All Tests (where a forward control channel is obtained) [TEST\\_25. CP Flow Chart](#)

## 4. CP Prt RECC RVC Data [0=no 1=yes 2=fail]

This test parameter allows you to print the Reverse Control Channel (RECC) and Reverse Voice Channel (RVC) messages to the display or printer.

The RECC message is a wideband data stream sent from the mobile station to the land station, and can consist of up to five words. The types of messages that can be transmitted over the RECC are:

- Page Response Message
- Origination Message
- Order Confirmation Message
- Order Message

The RVC message is a wideband data stream sent from the mobile station to the land station, and can consist of one or two words. The types of messages that can be transmitted over the RVC are:

- Order Confirmation Message
- Called-Address Message

### **It's Used in the Following Tests:**

All Tests (whenever the RECC or RVC messages are analyzed during testing)

[TEST\\_25. CP Flow Chart](#)



## 5. CP SAT Tone

---

### 5. CP SAT Tone

This test parameter allows you to set the Supervisory Audio Tone (SAT) frequency.

**For Example:**

If you want the SAT to be at 6000 Hz, you would enter **6000** as the value. All values are entered in Hz.

**It's Used in the Following Tests:**

All Tests (whenever a voice channel is obtained)

[TEST\\_25. CP Flow Chart](#)

## 6. RC Compandor Always On [0=no 1=yes]

This test parameter allows you to indicate whether or not the compandor is always on.

If this test parameter is set to **1** (Yes), the program assumes that the UUT's compressor circuitry is located before the pre-emphasis circuitry on the transmitter, and behind the de-emphasis circuitry in the receiver.

With the compandor always "ON" (set to **1**), the effects of an "ideal expander" are removed from the test results (of the RX Audio Frequency Response test 15, that is, the results are reduced in half). Also, the test operator is not prompted to turn the compandor "ON" and "OFF".

If this test parameter is set to **0** (No), then the test operator will be prompted to "turn the Radio compandor ON" during testing. Some manual control of the phone's compandor state is required.

### **For Example:**

If you do not want the compandor always on, you would enter **0** as the value. The value must be either a **0** for no, or a **1** for yes.

### **It's Used in the Following Tests:**

All Tests (whenever transmitter deviation is set by the software)

**TEST\_15. RX Audio Frequency Response**

## 7. RT External Pad and Cable Loss

This test parameter allows you to set the amount of loss for any external cables or pads (attenuators) connected to the test set. This loss is compensated for in power measurements and in signal generator level settings on the test set.

### **For Example:**

If a 30 dB attenuator is connected in line with the UUT antenna, you would enter 30 as the value. The value must be entered in dB.

### **It's Used in the Following Tests:**

All Tests (whenever a System Initialization is done by the software)

[TEST\\_04. TX Carrier Power](#)

[TEST\\_25. CP Flow Chart](#)

---

## 8. RT High Supply Voltage

This test parameter is used to set the UUT to the highest voltage rating that it is specified to operate at under extreme conditions. The high-supply voltage is set only when an external power supply is connected to the test set over HP-IB.

### For Example:

If you want to set the power supply voltage to operate the UUT at +20% of the normal (Nominal) supply voltage, and your Nominal Supply Voltage is 13.2V, you would enter **15.8** as the value.

The value must be entered in Vdc.

### It's Used in the Following Tests:

**TEST\_03. TX Frequency Error**

**TEST\_18. RX SINAD**

## 9. RT Low Supply Voltage

---

### 9. RT Low Supply Voltage

This test parameter is used to set the UUT to the lowest voltage rating that it is specified to operate at under extreme conditions. The low-supply voltage is set only when an external power supply is connected to the test set over HP-IB.

**For Example:**

If you want to set the power supply voltage to operate the UUT at – 20% of the normal (Nominal) supply voltage, and your Nominal Supply Voltage is 13.2V, you would enter **10.6** as the value.

The value must be entered in Vdc.

**It's Used in the Following Tests:**

**TEST\_03. TX Frequency Error**

**TEST\_18. RX SINAD**

## **10. RT Nominal Supply Voltage**

This test parameter is used to set the UUT to its nominal voltage rating that it is specified to operate at under normal conditions. This test parameter is needed only when using a stand-alone power supply or battery-operated phone.

### **For Example:**

If you want to set the power supply voltage to operate the UUT at 13.2V, you would enter **13.2** as the value.

The value must be entered in Vdc.

### **It's Used in the Following Tests:**

All Tests (whenever a System Initialization is done by the software)

**TEST\_03. TX Frequency Error**

**TEST\_04. TX Carrier Power**

**TEST\_18. RX SINAD**

## 11. RT Test at Extreme Settings

---

### 11. RT Test at Extreme Settings

This test parameter allows you to measure the output power for any of the seven power levels (determined by test parameter 27) at the extreme high and low supply voltage settings (determined by test parameters 8 and 9). This test parameter is used only when HP-IB control of the power supply is used.

**For Example:**

When this test parameter is set to **1**, the first power level in test parameter 27 is measured only. However, when this test parameter is set to **0**, all power levels set by test parameter 27 are measured.

**It's Used in the Following Tests:**

**TEST\_03. TX Frequency Error**

**TEST\_04. TX Carrier Power**

**TEST\_18. RX SINAD**

## 12-14. RX Audio Response Start, Step, and Stop Frequencies

---

### 12-14. RX Audio Response Start, Step, and Stop Frequencies

The RX Audio Frequency Response Start Frequency is the lowest input-signal frequency used in the RX Audio Frequency Response test.

The RX Audio Frequency Response Step Frequency is the step-size used to vary the input-signal frequency in the RX Audio Frequency Response test.

The RX Audio Frequency Response Stop Frequency is the highest input signal frequency used in the RX Audio Frequency Response test.

These test parameters are used to set the start, stop and step frequency settings as the RX Audio Frequency Response test measures the degree of closeness to which the audio output of a receiver follows the 6 dB/octave de-emphasis curve.

#### **For Example:**

If you want the modulation frequency to be varied from 300 Hz to 3000 Hz in 500 Hz steps:

- You would enter **.3** as the *Audio Response Start Frequency* value.
- You would enter **.5** as the *Audio Response Step Frequency* value.
- You would enter **3** as the *Audio Response Stop Frequency* value.

The value must be entered in kHz.

#### **It's Used in the Following Test:**

**TEST\_15. RX Audio Frequency Response**



## 15-17. RX Expander Response Start, Step, and Stop Levels

The RX Expander Start Level is the lowest input level relative to the zero crossing level that is used in the RX Expander test.

The RX Expander Step Level is the step-size used to vary the input level to the expander in the RX Expander test.

The RX Expander Stop Level is the highest relative input level to the expander that is used in the RX Expander test.

These test parameters are used to set the start, step, and stop “relative” input levels to the Expander circuitry for checking the output voltage-level changes for each input deviation.

### **For Example:**

If you want to measure the Expander’s operating range over which it provides a nominal output level change of 2 dB for an input level change of 1 dB:

- You might enter **-20** as the *Expander Start* value.
- You might enter **5** as the *Expander Step* value.
- You might enter **10** as the *Expander Stop* value.

The value must be entered in dB.

### **It’s Used in the Following Test:**

**TEST\_14. RX Expander**

---

## **18. RX FVC Message Error Rate RF Level**

This test parameter sets the RF level for testing the Forward Voice Control (FVC) order message error rate.

**For Example:**

If you want the RF level for testing the FVC order message error rate to be at  $-110$  dBm, you would enter **-110** as the value.

**It's Used in the Following Test:**

**TEST\_19. RX FVC Order Message Error Rate**

## 19. RX RF Level for Signaling

---

### 19. RX RF Level for Signaling

This test parameter sets the RF signal level for various measurements.

**For Example:**

If you want to apply a -50 dBm signal that will be modulated with a tone (fixed by the software) at a peak frequency deviation (fixed by the software), you would enter -50 as the value.

The value must be entered in dBm.

**It's Used in the Following Tests:**

All Tests (whenever the transmitter is set up for testing by the software)

[TEST\\_22. OT No Audio Functional](#)

[TEST\\_24. RX Quick General](#)

[TEST\\_25. CP Flow Chart](#)

## **20. RX RF Level for SINAD**

This test parameter sets the RF signal level for measuring SINAD.

**For Example:**

If you want the RF signal level to be at  $-116$  dBm for SINAD measurements, you would enter  $-116$  as the value.

The value must be entered in dBm.

**It's Used in the Following Tests:**

**TEST\_18. RX SINAD**

**TEST\_22. OT No Audio Functional**

## 21. RX RF Level for SINAD at Extremes

---

### 21. RX RF Level for SINAD at Extremes

This test parameter sets the RF signal level for measuring SINAD when measurements are done at extreme voltage-level settings.

**For Example:**

If you want the RF signal level to be at  $-113$  dBm for SINAD measurements, you would enter  $-113$  as the value.

The value must be entered in dBm.

**It's Used in the Following Test:**

**TEST\_18. RX SINAD**

## 22. RX Set Audio Level [0=no xx=level volts]

This test parameter determines whether or not screen prompts are displayed to help the operator set the volume control during all of the receiver tests.

To use this test parameter, the test operator must have control or have access to the audio power (volume control) from the UUT's transceiver unit.

### **For Example:**

If your radio is to be tested at 50% of rated audio power, enter the audio level in volts, for example **0.2** for 200 mV. The test operator is prompted to adjust to the correct volume level during testing. (The test set displays an "analog meter", correct adjustment is made when the meter needle is set in between the two longer lines on the meter.)

The value must be either a **0** for no, or a value for audio level in volts.

### **It's Used in the Following Tests:**

All Tests (whenever the receiver is set up for testing by the software)

## 23. RX Tolerance for Setting Audio Level

---

### 23. RX Tolerance for Setting Audio Level

This test parameter is used as the value of the maximum percentage of error that you are allowed for setting the UUT volume.

The value sets the tolerance window in the “analog meter” screen (refer to test parameter "**22. RX Set Audio Level [0=no xx=level volts]**" on page 149) that is used to manually set the UUT volume during testing; the meter needle must be within the tolerance window (shown by two larger lines on the meter) before the program will accept the manually set UUT volume. The tolerance should be as accurate as the volume control will allow.

---

**NOTE:**

This test parameter is only active when test parameter 22 (RX Set Audio Level) is set to accept audio level in volts.

**For Example:**

Enter the value as a percentage of the desired audio level. For example, if the UUT’s maximum audio power is 10 watts, and the tolerance for setting volume is set to 5%, the window will be 1 watt (which is 5% of 10 watts, the tolerance allows settings above and below the point determined by the audio level value converted from volts to watts).

**It’s Used in the Following Tests:**

All Tests (whenever the receiver is set up for testing by the software)

## 24-26. TX Audio Response Start, Step, and Stop Frequencies

The TX Audio Response Start Frequency is the lowest input signal frequency used in the TX Audio Frequency Response test.

The TX Audio Response Step Frequency is the step-size used to vary the input signal frequency in the TX Audio Frequency Response test.

The TX Audio Response Stop Frequency is the highest input signal frequency used in the TX Audio Frequency Response test.

These test parameters are used to set the start, stop and step frequency settings by the TX Audio Frequency Response test to measure the degree of closeness to which the audio output of the transmitter follows the 6 dB/octave pre-emphasis curve.

### **For Example:**

If you want the modulation frequency to vary from 300 Hz to 3000 Hz in 500 Hz steps:

- You would enter **.3** as the **TX Audio Response Start Frequency** value.
- You would enter **.5** as the **TX Audio Response Step Frequency** value.
- You would enter **3** as the **TX Audio Response Stop Frequency** value.

The value must be entered in kHz.

### **It's Used in the Following Test:**

**TEST\_06. TX Audio Frequency Response**



## 27. TX Carrier Power Levels Tested

---

### 27. TX Carrier Power Levels Tested

This test parameter allows you to measure the carrier power at any or at all of the power levels (0-7) shown below.

**For Example:**

If you want to measure the transmitter carrier power when it is at Power Levels 2 and 4, you would enter **20** as the value, as follows:

This test parameter's range is based upon a Binary Weighted Decimal (BWD). As shown in the table below, you choose the Power Levels that will be measured for carrier power and add their weighted values.

<b>Power Level</b>	7	6	5	4	3	2	1	0
<b>Weighted Value</b>	128	64	32	16	8	4	2	1

The test parameter ranges from a minimum value of **1** to a maximum value of **255**.

**It's Used in the Following Test:**

**TEST\_04. TX Carrier Power**

**TEST\_13. TX Current Drain**

## 28-30. TX Compressor Start, Step, and Stop Levels

The TX Compressor Start Level is the lowest relative input level to the compressor that is used in the TX Compressor Response test.

The TX Compressor Step Level is the step-size used to vary the input level to the compressor in the TX Compressor Response test.

The TX Compressor Stop Level is the highest relative input level to the compressor that is used in the TX Compressor Response test.

These test parameters are used to set the start, step, and stop relative input levels to the Compressor circuitry for checking the output deviation for each input voltage level.

### **For Example:**

If you want to measure the compressor's operating range over which it provides a nominal output level change of 1 dB for an input level change of 2 dB:

- You might enter **-30** as the **Compressor Response Start** value.
- You might enter **5** as the **Compressor Response Step** value.
- You might enter **25** as the **Compressor Response Stop** value.

The value must be entered in dB.

### **It's Used in the Following Test:**

**TEST\_12. TX Compressor Response**

### 31. TX Current Drain Levels Tested

---

## 31. TX Current Drain Levels Tested

This test parameter allows you to measure current drain at any or all of the power levels (0-7) shown below.

### For Example:

If you want to measure the transmitter current drain on the UUT when it is at Power Levels 1 and 4, you would enter **18** as the value, as follows:

This condition's range is based upon a Binary Weighted Decimal (BWD). As shown in the table below, you choose the power levels that will be measured for current drain and add their weighted values.

<b>Power Level</b>	7	6	5	4	3	2	1	0
<b>Weighted Value</b>	128	64	32	16	8	4	2	1

The test parameter ranges from a minimum value of **1** to a maximum value of **255**.

### It's Used in the Following Test:

**TEST\_13. TX Current Drain**

## **32. TX De-emphasis**

This test parameter allows you to turn on or off the de-emphasis filter on the test set in order to restore the received pre-emphasized signal.

### **For Example:**

If you want to turn the de-emphasis filter in the test set off, you would enter **0** as the value.

The value must be entered as a **0** for off, or a **1** for on.

### **It's Used in the Following Test:**

**TEST\_07. TX Audio Distortion**

**TEST\_09. TX FM Hum and Noise**

### 33. TX Peak Frequency Deviation Step Frequency

---

## 33. TX Peak Frequency Deviation Step Frequency

This test parameter sets the peak frequency deviation step size for the TX Peak Frequency Deviation test. Peak frequency deviation is measured between a start frequency of 300 Hz and a stop frequency of 3000 Hz (both values set by the software).

**For Example:**

If you want modulation limiting measured in step sized of 500 Hz, you would enter `0.5` as the value.

The value must be entered in kHz.

**It's Used in the Following Test:**

**TEST\_05. TX Peak Frequency Deviation**

## **34. TX Pk Freq Dev 50 Hz HPF**

This test parameter allows you to control the 50 Hz high-pass filter (HPF) for the TX Peak Frequency Deviation test.

**For Example:**

If you want to turn the HPF on, you would enter **1** as the value.

**It's Used in the Following Test:**

**TEST\_05. TX Peak Frequency Deviation**

## 35-37. TX Switch Channels Start, Step, and Stop Channel

This test parameter allows you to set the start, step, and stop channels for the TX Switch Channels test.

### **For Example:**

If you want to start the TX Switch Channels test at channel 100 and stop at channel 600, making sure that channels 200-500 are also tested, you would enter:

- **100** as the start channel value.
- **100** as the step channel value.
- **600** as the stop channel value.

### **It's Used in the Following Test:**

**TEST\_26. TX Switch Channels**

## **38. TX TS Atten for Signaling [0,20,40]**

This test parameter sets the input gain in the test set AF Analyzer to attenuate the audio which input to the test set (TS).

### **For Example:**

If you want to have a 20 dB input attenuation to the test set, you would enter **20** as the value.

Values are entered as 0, 20, or 40 dB.

### **It's Used in the Following Tests:**

All Tests (whenever signaling is done).



### 39. TX Units for Power Meas

---

## 39. TX Units for Power Meas

This test parameter allows you to choose between dBWatts and Watts units for measuring the transmitter's RF power.

**For Example:**

If you want RF power to be measured in dBWatts, you would enter **0** as the value.

Values are entered as a **0** for dBW, or as a **1** for Watts.

**It's Used in the Following Tests:**

**TEST\_04. TX Carrier Power**

**TEST\_23. TX Quick General**

## **40. TX Voltage for Compressor Zero Crossing**

This test parameter sets the voltage that is used to modulate the UUT transmitter for the purpose of measuring the resulting frequency deviation and comparing it to a specified compressor zero reference deviation.

### **For Example:**

If you want the peak deviation of the carrier to occur at the zero reference point when 0.1 Vrms is applied to the transmitter, you would enter **.1** as the value.

The value must be entered in Vrms.

### **It's Used in the Following Test:**

**TEST\_12. TX Compressor Response**

41. ZA MIN From? [0=RECC,1=all 0's,2=Phone #]

---

41. ZA MIN From? [0=RECC,1=all 0's,2=Phone #]

This parameter specifies from where the test set will get the Mobile Identification Number (MIN) of the UUT.

Setting Parameter 41 to **0=RECC** causes the test set to get the MIN from the Reverse Control Channel (RECC) Data. The RECC Data (data sent on the control channel from the UUT to the test set) sent during a registration or an origination is read by the test set to obtain the MIN.

Setting Parameter 41 to **1=All 0's** causes the test set to use a MIN consisting of all zeros. An all zero MIN is an invalid MIN according to the IS-54 standard. Because some phones initially have an all zero MIN after being manufactured or serviced, this parameter (when set to **1=All 0's**) allows the test set to page phones with an all zero MIN.

---

**NOTE:**

An all zero MIN can also be entered into the test set by setting parameter 41 to **0=RECC** and getting the MIN from the RECC Data from a UUT that has an all zero MIN.

---

**NOTE:**

If Parameter 41 is set to **1=All 0's**, then Parameter 01 **AA Enter Ph#?** is not used.

Setting Parameter 41 to **2=Phone #** causes the test set to derive the MIN from the phone number, depending on the entry in Parameter 01 **AA Enter Ph#?** described below:

- If Parameter 01 contains a phone number, the phone number in Parameter 01 is used to derive a MIN.
- If Parameter 01 is set to **0=If Needed** or **1=Always**, the user will be prompted for a phone number if needed. This phone number will be used to derive the MIN.

---

**NOTE:**

If a registration or an origination test is performed that causes a new MIN to be entered into the test set, this new MIN will then be used instead of the MIN obtained as specified by Parameter 41.

---

**Used in Tests**

All tests (when a system initialization is done by the software).

42. ZB use DUPLEX OUT & ANT IN

---

## 42. ZB use DUPLEX OUT & ANT IN

This parameter allows you to select the RF ports on the HP 8920A which will be used for cellular phone tests. A value of 0 causes the RF IN/OUT port to be used for both forward and reverse channels. A value of 1 causes the DUPLEX OUT port to be used for the forward channel and the ANT IN port to be used for the reverse channel.

Use of the DUPLEX OUT and ANT IN ports allows the RF link between the HP 8920A and the cellular phone to be established via antennas instead of coaxial cable. In either case, parameter 7: RT External Pad and Cable Loss should be used to compensate for the path loss.

---

**NOTE:**

If the RF link is accomplished via antennas, it must be done inside a shielded environment to avoid interference with local cellular telephone service.

**It's Used in the Following Tests:**

All tests.

### 43. ZC Trnsient/SS Data [0=tran 1=bth 2=ss]

This parameter requires trigger delay capabilities only available on the HP 8920B. HP 11807A software will ignore this parameter.

For HP 11807E software, this parameter allows the user to select between three modes of operation for the execution of TEST\_11 TX Wideband Data Deviation.

- Select 0=tran (transient) to perform the test on the entire RVC data signal returned from the UUT.
- Select 1=bth (both) to perform the test on just the steady state portion of the RVC data signal followed by a test of the entire signal. This option uses trigger delay capabilities and can only be performed on an HP 8920B.
- Select 2=ss (steady state) to test only the steady state portion of the signal. This option uses trigger delay capabilities and can only be performed on an HP 8920B.

#### **It's Used in the Following Test:**

**TEST\_11. TX Wideband Data Deviation**

## Pass/Fail Limit (Specification) Descriptions

Pass/Fail Limits define the values a measurement's result is compared against to determine if the UUT meets its specified standards.

For information on editing Pass/Fail Limits, see "[Customizing Testing](#)" on page 30.

The list of pass/fail limits is arranged alphabetically. The first few capital letters in the title of each pass/fail limit indicate what the pass/fail limit refers to (see Prefixes and Abbreviations at the beginning of this chapter).

Pass/Fail Limits remain in battery-backed-up memory until you select a procedure to run. If you wish to prevent them from being lost when a new procedure is selected you will have to save them in a procedure. See "[Saving a Test Procedure](#)" on page 48. To print the list of Pass/Fail Limits, see "[To print TESTS screens:](#)" on page 240.

There are two types of pass/fail limits:

- Receiver Test Pass/Fail Limits (RX)
- Transmitter Test Pass/Fail Limits (TX)

---

**NOTE:**

---

Refer to [chapter 2](#) in this manual for details about selecting pass/fail limits for your FM radio.

---

## 1. RX Audio Distortion

This sets the pass/fail limits that are used when the receiver's audio distortion is measured while receiving the RF level for signaling (test parameter 19).

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Demodulation Distortion

### **For Example:**

If your standard states that audio distortion produced by the demodulator should be at least 24 dB below the level of the fundamental frequency, you would enter **NO LIMIT** as the Lower Limit and **-24** as the Upper Limit.

Lower and Upper Limits must be entered in dB.

### **It's Used in the Following Test:**

**TEST\_16. RX Audio Distortion**



## 2. RX Audio Rsp Dev From -6 dB/oct

---

### 2. RX Audio Rsp Dev From -6 dB/oct

This sets the pass/fail limits for the receiver's audio output circuitry, when its audio response is tested against a standard 6 dB/octave de-emphasis curve. The audio response should not deviate beyond the pass/fail limits over the frequency range of 400 to 2400 Hz.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: De-emphasis, and Bandpass Filter

#### **For Example:**

If your standard states that the audio response should not deviate more than +2 to -2 dB over the frequency range of 300 to 3000 Hz, you would enter -2 as the Lower Limit and 2 as the Upper Limit. (Check both limits.)

Lower and Upper Limits must be entered in dB.

#### **It's Used in the Following Test:**

**TEST\_15. RX Audio Frequency Response**

### 3. RX Expander Track Error

This sets the pass/fail limits that are used when the expander circuits are measured. The expander circuitry is required to follow its nominal 1:2 expansion characteristic with an output tolerance determined by this pass/fail limit.


Pass/fail limits are determined by using any applicable standard, like: TACS Standard:Expander

#### For Example:

If your standard sets the output voltage tolerance to be  $\pm 1$  dB from the Expander curve shown below, you would enter  $-1$  as the Lower Limit and  $1$  as the Upper Limit. Lower and Upper Limits must be entered in dB.

#### It's Used in the Following Test:

#### TEST\_14. RX Expander

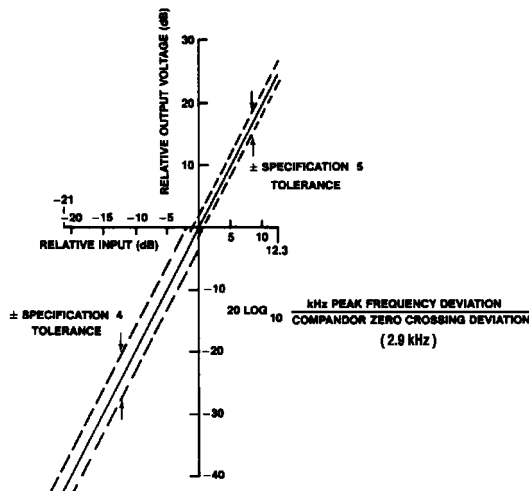

4. RX Expander Zero Reference Level

## 4. RX Expander Zero Reference Level

This sets the pass/fail limits that are used when the expander's 0 dB reference level is measured.


**For Example:**

If you state that the output voltage from the receiver should be -20 dBV rms  $\pm$  1 dB (to produce the 0 dB reference level as shown below), you would enter -21 as the Lower Limit and -19 as the Upper Limit. (Check both limits.)

Lower and Upper Limits must be entered in dBV rms.

**It's Used in the Following Test:**

**TEST\_14. RX Expander**

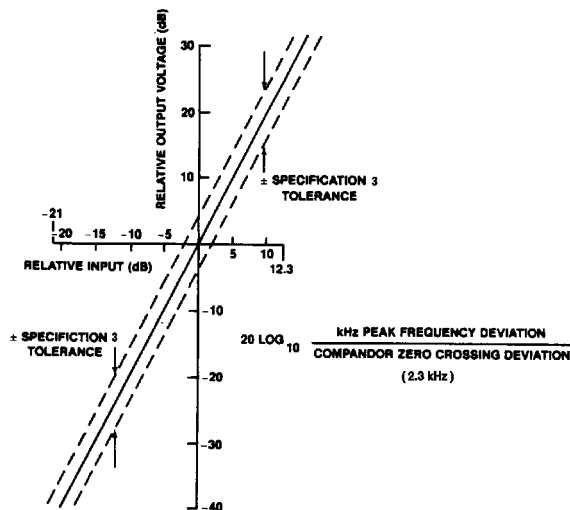

---

## 5. RX Hum and Noise

This sets the pass/fail limits for the hum and noise level of the receiver.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Demodulation Distortion

### **For Example:**

If your standard sets the hum and noise level of the receiver to be at least 32 dB below the audio output for a 1 kHz modulated RF carrier at -50 dBm having a  $\pm 6.4$  kHz peak frequency deviation, you would enter **NO LIMIT** as the Lower Limit and **-32** as the Upper Limit. (Check upper limits.)

Lower and Upper Limits must be entered in dB.

### **It's Used in the Following Test:**

**TEST\_17. RX Hum and Noise**

## 6. RX Order Message Error Rate (OMER)

---

### 6. RX Order Message Error Rate (OMER)

This sets the limits for testing the receiver as it processes the Forward Voice Control (FVC) order message.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: FVC Order Message

#### **For Example:**

If your standard states that the order-message error rate should not exceed 5%, you would enter 5 as the Upper Limit. (Check upper limits.)

Limits must be entered in percent.

#### **It's Used in the Following Test:**

**TEST\_19. RX FVC Order Message Error Rate**

---

## 7. RX SINAD

This sets the pass/fail limits used when SINAD is measured at the audio output of the receiver.

Pass/fail limits are determined by using any applicable standard such as:

- TACS Standard: Maximum Usable Sensitivity / Field Strength Sensitivity

**For Example:**

If your standard defines the usable sensitivity measurement that results in 20 dB SINAD at the audio output of the receiver, you would enter **20** as the Lower Limit and **NO LIMIT** as the Upper Limit.

Lower and Upper Limits must be entered in dB.

**It's Used in the Following Test:**

**TEST\_18. RX SINAD**

## 8. TX Audio Distortion

---

### 8. TX Audio Distortion

This sets the pass/fail limits for the audio distortion that is acceptable in the transmitter.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Modulation Distortion

#### **For Example:**

If your standard states that the transmitter distortion should be at least 26 dB below the level of the fundamental frequency, you would enter **NO LIMIT** as the Lower Limit and **-26** as the Upper Limit.

Lower and Upper Limits must be entered in dB.

#### **It's Used in the Following Test:**

**TEST\_07. TX Audio Distortion**

## 9. TX Audio Response Dev From 6 dB/Oct

This sets the pass/fail limits for the degree of closeness with which the frequency deviation of the transmitter follows the prescribed 6 dB/octave pre-emphasis characteristic curve over the range set by 24-26 TX audio response start, step and stop frequency test parameters.

Pass/fail limits are determined by any applicable standard, such as:

- TACS Standard: Pre-emphasis

### **For Example:**

If your standard states that from 300 to 3000 Hz the audio frequency response should not vary more than +2 to -2 dB from a true 6 dB/octave pre-emphasis curve, you would enter -2 as the Lower Limit and 2 as the Upper Limit.

Lower and Upper Limits must be entered in dB.

### **It's Used in the Following Test:**

**TEST\_06. TX Audio Frequency Response**



## 10-18. TX Carrier Power @Levels 0-7

These specifications set the pass/fail limits for the carrier's power levels measured at the transmitter's output terminals. Units for the pass/fail limits are set parameter 39 TX Units for Power Meas [0=dBW 1=Watts].

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Power Output and Power Control

### **For Example:**

If you are testing Power Class 1 radios and your standard lists the power levels and states that the output powers should be maintained within the range of +2 dB and -4 dB of nominal values over a specified temperature range, you would enter the following:

**Table 1**                      **Parameter 39 TX Units for Power Meas set to 0=dBW**

<b>Power Level</b>	<b>Nominal Value (dBW)</b>	<b>Lower Limit (dBW)</b>	<b>Upper Limit (dBW)</b>
Level 0	8.5	4.5	10.5
Level 0	4.5	0.5	6.5
Level 1	0.5	-3.5	2.5
Level 2	-3.5	-7.5	-1.5
Level 3	-7.5	-11.5	-5.5
Level 4	-11.5	-15.5	-9.5
Level 5	-15.5	-19.5	-13.5
Level 6	-19.5	-23.5	-17.5
Level 7	-23.5	-27.5	-21.5

**Table 2**                      **Parameter 39 TX Units for Power Meas set to 1=Watts**

<b>Power Level</b>	<b>Nominal Value (Watts)</b>	<b>Lower Limit(Watts)</b>	<b>Upper Limit (Watts)</b>
Level 0	7.08	2.82	11.22
Level 0	2.82	1.12	4.47
Level 1	1.12	0.447	1.78
Level 2	0.447	0.179	0.708
Level 3	0.179	0.0708	0.282
Level 4	0.0708	0.0282	0.112
Level 5	0.0282	0.0112	0.0447
Level 6	0.0112	0.00447	0.0178
Level 7	0.00447	0.00178	0.00708

## Test, Parameter, and Pass/Fail Limit (Specification) Descriptions

### 10-18. TX Carrier Power @Levels 0-7

---

**NOTE:**

---

$\text{dBW} = 10 \log (\text{Watts})$

**It's Used in the Following Tests:**

**TEST\_04. TX Carrier Power**

**TEST\_26. TX Switch Channels**

## 19. TX Compressor Track Error dB

This sets the pass/fail limits that are used when the compressor circuits are measured. The compressor circuitry is required to follow its nominal 1:2 compression characteristic with an output tolerance determined by this pass/fail limit.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Compressor


### For Example:

If your standard sets the output voltage tolerance to be  $\pm 0.5$  dB from the Compressor curve shown below, you would enter  $-.5$  as the Lower Limit and  $.5$  as the Upper Limit.

Lower and Upper Limits must be entered in dB.

It's Used in the Following Test:

### TEST\_12. TX Compressor Response

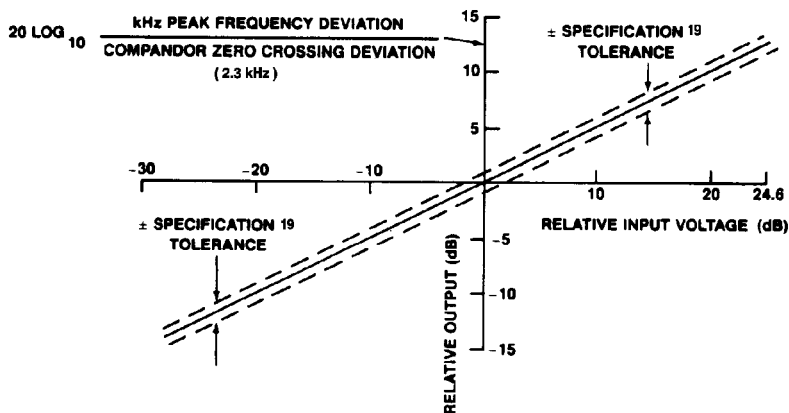

## 20. TX Compressor Zero Reference Deviation

---

### 20. TX Compressor Zero Reference Deviation

This sets the pass/fail limits that are used when the compressor's 0 dB reference deviation is measured. The 0 dB reference deviation is found when an voltage input (the 40. TX voltage for compressor zero crossing test parameter) to the transmitter produces an output at the transmitter equal to the specified peak frequency deviation.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Compressor

#### **For Example:**

If your standard states that the voltage input to the transmitter is a -15 dBV rms 1 kHz tone which produces 2.3 kHz  $\pm$ 0.1 kHz peak frequency deviation of the carrier at the output of the transmitter, you would enter **2.2** as the Lower Limit and **2.4** as the Upper Limit.

Lower and Upper Limits must be entered in kHz.

#### **It's Used in the Following Test:**

**TEST\_12. TX Compressor Response**

---

## **21. TX Current Drain @Levels 0-3**

This sets the pass/fail limits for current used by the transmitter when the radio is enabled to transmit at RF output power levels 0-3. This pass/fail limit is used whenever the test set performs a system initialization prior to running a test when an external power supply is connected over HP-IB.

limits are determined by using any applicable, such as:

- UUT Pass/fail Limit: Current Consumption, Transmit

### **For Example:**

If your UUT pass/fail limit defines the transmitter's current consumption to be 4 Amps for RF output power levels 0-3, you might enter **1** as the Lower Limit and **4** as the Upper Limit.

Lower and Upper Limits must be entered in Amps.

### **It's Used in the Following Test:**

**TEST\_13. TX Current Drain**

## 22. TX Current Drain @ Levels 4-7

This sets the pass/fail limits for current used by the transmitter when the radio is enabled to transmit at RF output power levels 4-7. This pass/fail limit is used whenever the test set performs a system initialization prior to running a test when an external power supply is connected over HP-IB.

Pass/fail limits are determined by using any applicable, such as:

- UUT Pass/fail Limit: Current Consumption, Transmit

### **For Example:**

If your UUT pass/fail limit defines the transmitter's current consumption to be 2.7 Amps for RF output power levels 4-7, you might enter .5 as the Lower Limit and 2.7 as the Upper Limit.

Lower and Upper Limits must be entered in Amps.

### **It's Used in the Following Test:**

**TEST\_13. TX Current Drain**

## **23. TX DTMF Frequency Error**

This sets the pass/fail limits for the amount of frequency error allowable for the DTMF (Dual-Tone Multi-Frequency) signals.

### **For Example:**

If your standard states that the seven tone frequencies in the high and low group DTMF signals should be within  $\pm 1.5\%$  of their nominal values, you would enter **-1.5** as the Lower Limit and **1.5** as the Upper Limit.

Lower and Upper Limits must be entered in %.

### **It's Used in the Following Test:**

**TEST\_28. TX DTMF Frequency Error**



## 24. TX FM Hum and Noise

---

### 24. TX FM Hum and Noise

This sets the pass/fail limits for the residual FM hum and noise measured from the radio.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: FM Hum and Noise

#### **For Example:**

If your standard states that FM hum and noise should be at least 26 dB below the level of a 1 kHz tone at  $\pm 2.3$  kHz deviation, you would enter **-26** as the Upper Limit.

Limits must be entered in dB.

#### **It's Used in the Following Test:**

**TEST\_09. TX FM Hum and Noise**

---

## 25. TX Frequency Error

This sets the pass/fail limits for the UUT's frequency stability.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Frequency Tolerance; Frequency Error

### **For Example:**

If your standard states that the carrier frequency should be maintained within  $\pm 2.5$  parts per million (ppm) of any assigned channel frequency, you would enter **-2.5** as the Lower Limit and **2.5** as the Upper Limit.

Lower and Upper Limits must be entered in ppm.

### **It's Used in the Following Tests:**

**TEST\_03. TX Frequency Error**

**TEST\_26. TX Switch Channels**

## 26. TX Peak Frequency Deviation

---

### 26. TX Peak Frequency Deviation

This sets the pass/fail limits when the transmitter circuits are tested for their ability to prevent the transmitter from producing deviation in excess of the rated system deviation.

**For Example:**

If your standard states that the instantaneous peak and steady-state deviations of the transmitter should not exceed the rated system peak-frequency deviation of  $\pm 9.5$  kHz, you would enter **9.5** as the Upper Limit.

Limits must be entered in kHz.

**It's Used in the Following Test:**

**TEST\_05. TX Peak Frequency Deviation**

---

## 27. TX SAT Deviation

This sets the pass/fail limits for the Supervisory Audio Tone (SAT) deviation.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Supervisory Audio Tone (SAT)

### **For Example:**

If your standard states that the peak frequency deviation of each transponded SAT should be  $\pm 1.7 \text{ kHz} \pm 10\%$ , you would enter **1.53** as the Lower Limit and **1.87** as the Upper Limit.

Lower and Upper Limits must be entered in kHz.

### **It's Used in the Following Test:**

**TEST\_10. TX SAT Frequency Error & Deviation**

## 28. TX SAT Frequency Error

---

### 28. TX SAT Frequency Error

This sets the pass/fail limits for frequency error allowable when the Supervisory Audio Tone (SAT) is tested.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Supervisory Audio Tone (SAT)

#### **For Example:**

If your standard states that any one of the three SAT tones should not vary in frequency more than  $\pm 1$  Hz, you would enter **-1** as the Lower Limit and **1** as the Upper Limit.

Lower and Upper Limits must be entered in Hz.

#### **It's Used in the Following Tests:**

**TEST\_10. TX SAT Frequency Error & Deviation**

**TEST\_26. TX Switch Channels**

---

## 29. TX Signaling Tone Deviation

This sets the pass/fail limits for the Signaling Tone deviation.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Signaling Tone (ST)

### **For Example:**

If your standard states that the nominal peak frequency deviation of the carrier produced by the Signaling Tone should be  $\pm 6.4 \text{ kHz} \pm 10\%$ , you would enter **5.76** as the Lower Limit and **7.04** as the Upper Limit.

Lower and Upper Limits must be entered in kHz.

### **It's Used in the Following Test:**

**TEST\_08. TX Signaling Tone**

### 30. TX Signaling Tone Frequency

---

## 30. TX Signaling Tone Frequency

This sets the pass/fail limits which are used when the Signaling Tone frequency is tested.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Signaling Tone (ST)

### **For Example:**

If your standard states that the Signaling Tone should be an 8 kHz  $\pm$ 1 Hz tone, you would enter **7999** as the Lower Limit and **8001** as the Upper Limit.

Lower and Upper Limits must be entered in Hz.

### **It's Used in the Following Test:**

**TEST\_08. TX Signaling Tone**

## **31. TX Wideband Data Deviation**

This sets the pass/fail limits for the Wideband Data deviation.

Pass/fail limits are determined by using any applicable standard, such as:

- TACS Standard: Wideband Data Signals; Modulation and Polarity.

### **For Example:**

If your standard states that the Wideband Data frequency deviation should be  $\pm 6.4$  kHz with a  $\pm 10\%$  tolerance, you would enter **5.76** as the Lower Limit and **7.04** as the Upper Limit.

Lower and Upper Limits must be entered in kHz.

### **It's Used in the Following Test:**

**TEST\_11. TX Wideband Data Deviation**



## 32. TXT Wideband Data Deviation Transient

---

### 32. TXT Wideband Data Deviation Transient

This sets the pass/fail limits for the transient portion of the wideband data deviation measurement (TEST\_11). This specification is only used if parameter "**43. ZC Trnsient/SS Data [0=tran 1=bth 2=ss]**" on **page 165** is set to 1=bth (both), which causes the software to separately report the transient and steady state portions of the measurement.

**It's Used in the Following Test:**

**TEST\_11. TX Wideband Data Deviation**

---

## Reference (Alphabetical)

This chapter provides detailed descriptions of the features and functions of the HP 11807A,E software. Topics are arranged alphabetically for quick, easy reference.

## Conventions Used

Special presentations of text in this manual reflect the appearance of the item being referred to.

Examples of these special presentations are:

TESTS

*A key on the test set.*

**Procedure:**

*Characters displayed on the CRT display.*

k1 (**Run Test**)

*A USER key, in the key column next to the CRT. Run Test is displayed on the CRT.*

**0.000000**

*A field on the CRT where entries can be made.*

*Titles of documentation are printed in italics.*

The term Test Set refers to the HP 8920A,B,D.

In the steps in this manual the following words are used to describe cursor and entry actions:

- **select** refers to pressing the knob after positioning the cursor in front of the appropriate field (**inverse video** area).
- **choose** means to position the cursor in front of an item in the **Choices:** or **To Screen** menu in the lower right corner of the CRT display, and then press the knob.
- **enter** means to use the numeric keypad, and the ENTER key or measurement units keys to make entries to fields. In some procedures, **enter** is used to describe the action of entering characters into a field.

---

## Copying Files

Files can be copied from one mass-storage device to another using IBASIC COPY commands. For example, to copy a file from an inserted memory card to the left drive of an external dual-disk drive with HP-IB address 700, press TESTS. Select **IBASIC Cntrl** from the **SET UP TEST SET** list (or **IBASIC** from the **Test Function** field). Position the cursor to the IBASIC command line and select it. Using the character list that appears in the **Choices** menu, enter the following command:

```
COPY "MY_TEST:INTERNAL" TO "MYFILE:;700,0"
```

You can copy a file from a memory card to an SRAM memory card by loading the program from the memory card into the test set, inserting an initialized SRAM memory card, and then using the IBASIC SAVE command. Enter the following:

```
COPY "MY_TEST:INTERNAL" TO "MYFILE:;700,0"
```

You can list the names of the files stored in a memory card or disk catalog by using the IBASIC CAT command. To display a list of file names on a memory card, enter the following:

```
CAT ":INTERNAL" or CAT
```

The mass storage powers-up to memory card as a default. If you did not change this setting, then **" :INTERNAL"** is optional. If you are entering many characters into the IBASIC command line, you may want to connect a terminal to the test set. See ["Configuration for Terminal or PC Operation" on page 208](#). You will also want to use a terminal if you have many files to list because file names displayed with the **CAT** IBASIC command scroll past the top of the test set's CRT display and cannot be scrolled down.

IBASIC is used when writing your own programs and is not explained in this manual. If you need to write your own IBASIC programs you may acquire the following manuals:

- HP 8920A,D
  - *HP Instrument Basic User's Handbook* HP part number E2083-90000.
  - *HP 8920 Programming Manual* HP part number 08920-90204.
- HP 8920B
  - *HP Instrument Basic User's Handbook Version 2.0* HP part number E2083-90005.
  - *HP 8920 Programming Manual* HP part number 08920-90204.

See also: "**Collection to a Memory Card or Disk**" on page 199 and "**Initializing a Disk**" on page 211.

## **Data Collection (Saving and Retrieving Test Results)**

The software has the capability to save test results to an SRAM memory card, to a disk drive, or to a PC.

## Collection to a Memory Card or Disk

You will have to make entries into the **External Devices** (Edit Config) screen to describe the type of data collection you are using.

### To configure

**External Devices**  
entries:

1. Press TESTS
2. Select **External Devices** from the **SET UP TEST SET** list (or **Edit Cnfg** from the **Test Function** field).
3. Position the cursor to the **Calling Name** field and select it.
4. Using the list of characters in the **Choices** menu, enter **DATA C** into the **Calling Name** next to **Inst# 1**. The entry will look like:

```
1 DATA C
```

Note: For some SW revisions, DATA C will appear in the **Choices** menu. In this case, you may select DATA C, then Done instead of typing each character individually.

5. Position cursor to the **Addr** field and select it.
6. Using the DATA keypad, enter a number into **Addr**, depending on the type of storage media you will be using (press ENTER when complete):

If you are using a memory card, enter **1** into the **Addr**:

```
1 DATA C 1
```



## Data Collection (Saving and Retrieving Test Results)

If you are using a disk drive, enter the HP-IB disk address. For example, if the drive you are using is set to 700, then the display needs to look like:

```
1 DATA C 700
```

Calling names can be entered in any order.

The test software supports data storage on Logical Interchange Format (LIF) and Disk Operating System (DOS) disk formats. Storage can be to any of the following file types:

- ASCII files under LIF
- BDAT files under LIF
- HP-UX files under LIF
- DOS files under DOS

You will be specifying the file type with the entry you make into the **Options** field immediately below **DATA C**. If no file type is entered, and the disk format is LIF, the software will select an HP-UX file type. If no file type is entered, and the disk format is DOS, the software will select a DOS file type. For example, if you are using a DOS file and you are not using an extension on the file name, the entry on this screen will look like:

```
1 DATA C 700
```

**Data Collection (Saving and Retrieving Test Results)**

If you are using an ASCII, BDAT or HP-UX file, you can specify the number of records allocated to the file. The DOS file is automatically updated as data is stored, so record allocation is not required. If you are using HP-UX files, you will have to enter **REC=** to establish a usable number of records. **REC=20480** sets the size to be the same as the default number of 256 byte records used for ASCII files ( $80 \times 256$ ). You can enter the **REC=** after the file type. For example, to use an ASCII file with 200 records of 256 bytes each, you will enter **ASCII REC=200** into the **Options** field.

---

**NOTE:**

---

For some software revisions, **REC=** and **ASCII REC=** will appear in the **Choices** menu. In this case, you may select **REC=** or **ASCII REC=**, enter the number of records using the DATA keypad, then select **Done**, instead of typing in each character individually.

The display will appear as follows:

```
1 DATA C 700
  ASCII REC=200
```

The default number of records, used when no **REC=** entry is made, is 80.

Items in the **Options** field can be separated by a comma or a space.

See "**Initializing a Disk**" on page 211 if using a new disk. See "**Initializing a Memory Card**" on page 221 if using a new memory card. The file types under LIF can be used by the test set's IBASIC controller and some HP workstations. The DOS format is required if you wish to use the disk with a PC.

## Data Collection (Saving and Retrieving Test Results)

Table 3 Data Collection (Saving/Retrieving Tests) Configuration Summary

Inst#	Calling Name Options	Model	Addr	Description
first unused #	<i>data</i> collection		7xx <sup>1</sup>	To HP-IB disk drive
	Options <sup>2</sup>			
	File types of <i>ascii</i> ,		7xx <sup>1</sup>	LIF format
	or <i>bdat</i>			LIF format
	or ( <i>ext</i> ) <sup>3</sup>			DOS file type
	or blank <sup>4</sup>			DOS or HP-UX file type <sup>4</sup>
	<i>rec=xxxxx</i> (number of records)			Number of records
first unused #	<i>data</i> collection		1	To memory card
	Options <sup>2</sup>			
	File types of <i>ascii</i> ,		7xx <sup>1</sup>	LIF format
	or <i>bdat</i>			LIF format
	or ( <i>ext</i> ) <sup>3</sup>			DOS file type
	or blank <sup>4</sup>			DOS or HP-UX file type <sup>4</sup>
	<i>rec=xxxxx</i> (number of records)			Number of records
first unused #	<i>data</i> collection		9	Serial to external computer (laptop)

1. xx = Last two digits of HP-IB address.
2. These options apply to disk drive and memory card data collection. They do not apply when collecting data with Addr=9.
3. A DOS file name extension. For example, the file name may be CELL1.EXT.
4. DOS is used if the disk format is DOS. HP-UX is used if the disk format is LIF.

## Retrieving Data from a Memory Card

To retrieve the test results after they have been saved on an SRAM memory card, you will have to run an IBASIC program. The following is a program to transfer data from a memory card to a terminal emulator. You can type the program lines into the IBASIC command line from a terminal emulator. See "[Configuration for Terminal or PC Operation](#)" on page 208 in this chapter.

To enter the data retrieval program:

1. Press TESTS.
2. Select **IBASIC Cntrl** from the **SET UP TEST SET** list (or **IBASIC** from the **Test Function** field).
3. Position the cursor to the IBASIC command field (large field in the upper part of the display) and select it. From the list of characters in the **Choices** field, enter the following IBASIC program statements and commands.
4. Enter **SCRATCH** to delete the previous IBASIC program. Be sure it's saved first.

**Data Collection (Saving and Retrieving Test Results)**

5. Enter the following program:

```
10 DIM A$(120)
```

*Sets the string length to 120.*

```
20 ASSIGN @File TO "RES:INTERNAL";FORMAT ON
```

*Opens a path to the memory card file called "RES" (for results).*

```
30 ON ERROR GOTO 80
```

*Exits at end of file if an error is encountered.*

```
40 LOOP
```

*Extracts file contents.*

```
50 ENTER @File;A$
```

*Transfers part of the file to the string.*

```
60 OUTPUT 9;A$
```

*The string is  
output at the Serial port.*

```
70 END LOOP
```

*Goes back to get more of the file.*

```
80 END
```

*End of the program.*

6. Press k1 (**Run**) to run the entered IBASIC program.

---

***DIFFERENCE  
BETWEEN RUN  
AND RUN TEST***

The USER **Run** key, assigned as a default key on the TESTS (**IBASIC Controller**) screen, will start an IBASIC program that is resident in the test set's memory. The USER **Run Test** key, assigned as a default key on the TESTS screens, will load and run the program that is called from the **Select Procedure Filename:** and **Select Procedure Location:** entries on the TESTS **Main Menu** screen.

---

## Collection to a PC

Test results can be output through the serial port. A variety of devices can receive the data. An HP Palmtop computer, PC, laptop, or terminal can be used. A terminal emulator can log the test results to a file. Examples of terminal emulator programs are HP AdvanceLink and ProComm, a product of DataStorm Technologies, Inc.

### For example: Configuring an IBM-Compatible PC with HP AdvanceLink for DOS

1. Load and run HP AdvanceLink on your PC.
2. Use the following [table 4, "Global Configuration Settings" on page 205](#), [table 5, "Terminal Configuration Settings" on page 206](#) and [table 6, "Remote Configuration Settings" on page 206](#) to set the global configuration, terminal configuration, and remote configuration settings.

**Table 4**                      **Global Configuration Settings**

FIELD	SETTING	FIELD	SETTING
Keyboard	USASCII	Memory Size	32K
Personality	HP	Plotter I/F	None
Language	English	HP Mode	Yes
Terminal Mode	Alphanumeric	Video Type	<i>Select your display type</i>
Remote to	<i>enter PC's serial port #</i>	Forms Path	<i>Enter path if used</i>
Printer I/F	None	Screen Size	<i>Enter the size</i>

## Data Collection (Saving and Retrieving Test Results)

**Table 5 Terminal Configuration Settings**

<b>FIELD</b>	<b>SETTING</b>	<b>FIELD</b>	<b>SETTING</b>
Terminal ID	2392A	Esc Xfer(N)	YES
Local Echo	OFF	ASCII 8 Bits	YES
CapsLock	OFF	FldSeparator	US
Start Col	01	BlkTerminator	RS
Bell	ON	ReturnDef	CR
XmitFnctn(A)	NO	Copy	Fields
SPOW(B)	NO	Type Ahead	NO
InhEolWrp(C)	NO	ROW Size	80
Line/Page(D)	LINE	Host Prmpt Char	D1
InhHndShk(G)	NO	Horiz. Scroll. Incr.	08
Inh DC2(H)	NO	Large [+] Key	+

**Table 6 Remote Configuration Settings**

<b>FIELD</b>	<b>SETTING</b>	<b>FIELD</b>	<b>SETTING</b>
Baud Rate	4800	SR(CH)	LO
Parity/Data Bits	None/8	Recv Pace	None
Eng Ack	No	Xmit Pace	None
Asterisk	OFF	CS(CB)Xmit	NO
Chk Parity	NO		

**Data Collection (Saving and Retrieving Test Results)****To set up for data collection to a PC:**

1. Press TESTS.
2. Select **External Devices** from the **SET UP TEST SET** list (or **Edit Cnfg** from the **Test Function** field).
3. Position the cursor to the **Calling Name** field and select it.
4. Using the list of characters in the **Choices** menu, enter **DATA C** (next to **Inst# 1**):

1 DATA C

5. Position the cursor to the **Addr** field and select it.
6. Using DATA keypad, enter **9** and press ENTER:

1 DATA C 9

Calling names can be entered in any order.



## Configuration for Terminal or PC Operation

It is preferable to enter long strings of characters into fields using a terminal. The characteristics of the serial port, when used for instrument control from a terminal or terminal emulator, are determined by settings on the test set's I/O CONFIGURE screen.

Set the following:

- **Serial In** to **Inst**
- **IBASIC Echo** to **On**
- **Inst Echo** to **On**

Set the remaining configuration entries to match the settings of your terminal or PC program.

### Equivalent Front-Panel Control Characters

The following [table 7](#) lists the terminal/computer keystrokes that equate to front-panel controls. Each equivalent character must be preceded by the Escape key.

For example, to remotely access the CONFIGURE screen, you type **Esc, C** on your terminal/computer. (Be sure to use upper-case C for this example.)

Alternate sequences for 5 commonly-used functions are also available. Hold down the Ctrl (control) key and select the corresponding key for the desired function. (Example: Ctrl/H moves the cursor to the left one space.)

ENTER - ^J or ^M

CANCEL - ^C

BACKSPACE - ^H

KNOB\_TURN\_CW - ^R

KNOB\_TURN\_CCW - ^L

## Data Collection (Saving and Retrieving Test Results)

Table 7 Equivalent Front-Panel Control Characters

Function	Equiv. ESC Char.	Function	Equiv. ESC Char.	Function	Equiv. ESC Char.
CANCEL	!	SAVE	G	PRESET	i
PERCENT MHZ_V	(	REF_SET	J	INCR_DIV_10	j
S_KHZ_MV	)	METER	K	INCR_SET	k
BACKSPACE	-	AVG	L	INCR_TIMES_10	l
ENTER	.	LO_LIMIT	M	DOWN	m
RELEASE	0	HI_LIMIT	N	UP	n
K1	1	E	R	SEVEN	o
K2	2	F	S	EIGHT	p
K3	3	B	U	NINE	q
K4	4	C	V	FOUR	r
K5	5	D	W	FIVE	s
K1_PRIME	6	A	X	SIX	t
K2_PRIME	7	EEX	Z	ONE	u
K3_PRIME	8	YES_ON_OFF	[	TWO	v
ASSIGN	9	NO_PPM_W	]	THREE	w
KNOB_TURN_CCW	<	RX	a	ZERO	x
KNOB_TURN_CW	>	TX	b	POINT	y
MSSG	A	DUPLEX	c	PLUS_MINUS	z
HELP	B	PREV	d	OHM_PCT_DEL_DBUV	{
CONFIG	C	TESTS_MAIN	e	DB_GHZ_DBM	

**Data Collection (Saving and Retrieving Test Results)****Table 7                      Equivalent Front-Panel Control Characters**

<b>Function</b>	<b>Equiv. ESC Char.</b>	<b>Function</b>	<b>Equiv. ESC Char.</b>	<b>Function</b>	<b>Equiv. ESC Char.</b>
HOLD	D	LOCAL	f	MS_HZ_UV	}
PRINT	E	RECALL	g		
ADRS	F	MEAS_RESET	h		

---

## Disks

### Initializing a Disk

If you are starting with a blank disk, you will have to initialize it to the format you have chosen. Disk drives require specific commands to perform initialization. The test set's IBASIC commands to initialize some disks are described here. You should verify that the drive you are using can be controlled by the test set and that you are initializing a disk using a drive or PC that has a compatible format.

#### To initialize a disk to LIF in an HP-IB disk drive:

1. Verify that the test set **Mode** on the I/O CONFIGURE screen is set to **Control**:
  - Press TESTS.
  - Select **IBASIC Cntrl** from the **SET UP TEST SET** list (or **IBASIC** from the **Test Function** field).
  - Position the cursor to the IBASIC command field and select it.
  - With the list of characters in the **Choices** menu, enter the following:

INITIALIZE “:,7xx,y”

where:

xx = the HP-IB address of the disk drive, and

y = the unit number of the drive.

#### To initialize a disk to DOS in an HP-IB drive:

Follow the procedure for the LIF format, replacing the INITIALIZE statement with **INITIALIZE “DOS:,7xx,y”**.

## Retrieving Data from a Disk

One way to retrieve the test results from a disk is to run an IBASIC program. A program to transfer data from a disk to a terminal emulator is given below. You can type it into the IBASIC command line from the terminal emulator.

Be sure your program is saved, because it will be deleted from programmable memory. The file name for this example is “RES”. The disk address is 700, and the drive number is 0. The entire file name is **RES: , 700 , 0.**

### To enter the data retrieval program:

1. Press TESTS.
2. Select **IBASIC Cntrl** from the **SET UP TEST SET** list (or **IBASIC** from the **Test Function** field).
3. Position the cursor to the IBASIC command field (large field in the upper part of the display) and select it. From the list of characters in the **Choices** field, enter the following IBASIC program statements and commands.
4. Enter **SCRATCH** to delete the previous IBASIC program. Be sure it's saved first.

5. Enter the following program:

```
10 DIM A$(120)
```

*Sets the string length to 120.*

```
20 ASSIGN @File TO "RES:,700,0"
```

*Opens a path to the file called "RES" (for results).*

```
30 ON ERROR GOTO 80
```

*Exits at end of file if an error is encountered.*

```
40 LOOP
```

*Extracts file contents.*

```
50 ENTER @File;A$
```

*Transfers part of the file to the string.*

```
60 OUTPUT 9;A$
```

*The string is output at the serial port.*

```
70 END LOOP
```

*Goes back to get more of the file.*

```
80 END
```

*End of the program.*

6. Press k1 (**Run**) to run the entered IBASIC program.

## Exiting a Program

Do not press RX or TX to exit the program. Selecting the RX TEST or TX TEST screen causes signal paths internal to the test set to be modified. If you exit the program to a screen other than RX TEST or TX TEST, the settings necessary to resume testing will be retained.

After you have made the manual settings you want, press the DUPLEX key as a last step before continuing the software. This will cause the test set to be properly set up.

Another way to safely exit is to:

1. Press CANCEL.
2. Press DUPLEX.
3. Press SHIFT SAVE.
4. Using list of characters in the **Choices** menu, enter a register name or number.
5. Select **Done**.
6. Operate the test set manually.
7. Press RECALL.
8. Choose the name of the saved setup.
9. Press TESTS.
10. Press k2 (**Continue**.)

---

## HP-IB Control Annunciators

The words, letters, and symbols at the top right corner of the CRT display indicate these conditions:

- **R** indicates remote operation from an external controller or IBASIC program in the test set. This letter will be displayed while the software is running.
- **L** indicates that the test set is listening, and is ready to receive a manual or remote command.
- **T** indicates that the test set is talking to another HP-IB device.
- **S** indicates that a service request has been generated.
- **C** indicates that the test set is currently an active controller. Control mode is set on the I/O CONFIGURE screen. The test set must be a controller if HP-IB peripherals are to be controlled.
- **\*** indicates that an IBASIC program is running, or that the IBASIC controller is executing a command.
- **?** indicates that an IBASIC program is waiting for a user response.
- **-** indicates that the IBASIC program is paused.
- **SHIFT** indicates that the SHIFT key was pressed, and that the next key entry will be shifted. (Press SHIFT again to clear).



## **Memory Cards**

Memory cards are inserted into the slot on the test set's front panel. The memory card is powered by the test set while it is inserted. Arrows printed on the memory card and the test set's front panel indicate the direction and orientation of card insertion.

Memory cards are used to store or retrieve the following:

- Software code
- An HP-supplied Procedure, containing:
  - A default TEST sequence
  - Default test parameter values
  - Default pass/fail limit values
- A Library file
- Procedures you make, optimized for your application
- Data collection files
- Channel Information
- User defined keys

Three types of memory cards are available:

- Static Random Access Memory (SRAM)
  - SRAM cards have read and write capability. SRAM cards can be programmed and read with the test set.
- One-Time Programmable (OTP)
  - Once programmed with a suitable card programmer, OTP cards have read-only capability. OTP cards can be read with the test set, but cannot be programmed with the test set.
- Flash Memory
  - Flash cards have read and write capability. They can only be written to, or programmed with a suitable card reader/programmer. Flash memory cards cannot be written to, or programmed with a test set. Flash memory cards can be read by the test set.

---

**NOTE:**

Hewlett-Packard-supplied software code and Hewlett-Packard procedure and library files are typically supplied on either OTP cards or flash cards. Flash cards can be distinguished from OTP cards by a small write protect (WP) switch in the end of the flash cards. SRAM cards also have a write protect or safe switch in the end of the card, but they also use a battery. Software and procedure/library files stored on a flash card cannot be overwritten by a test set regardless of the position of the write protect (WP) switch.

The software memory card can be removed after the program is loaded into the test set memory. The program will remain in memory after a power-down/power-up cycle, until a new program is loaded. Loading a new program will replace the existing program.

**Memory Cards****SRAM Memory Cards**

A Static Random Access Memory (SRAM) Card can be used to store test results and procedures you make. The following parts can be used.


**Table 8 SRAM Memory Card Products for HP 8920A,D**

<b>Memory</b>	<b>Product</b>
32 kilobytes	HP 85700A
128 kilobytes	HP 85702A
256 kilobytes	HP 85704A
512 kilobytes	HP 85705A

**Table 9 PCMCIA SRAM Memory Card Products for HP 8920B**

<b>Memory</b>	<b>Product</b>
64 kilobytes	HP 83230A
256 kilobytes	HP 83233A
1 megabyte	HP 83231A

SRAM memory cards use a lithium battery (For HP 11807A: part number CR 2016 or HP part number 1420-0383. For HP 11807E: part number CR 2025 or HP part number 1420-0509). Programs and data will be retained for over one year if the memory card is stored at 25° C. The memory card is powered by the test set while it is inserted. Replace the battery while the memory card is inserted into a powered-up test set. To retain data and programs, it should be replaced annually. See the *HP 8920 User's Guide*. The write-protect switch on an SRAM memory card will write protect the card when it is set toward the outside of the card.

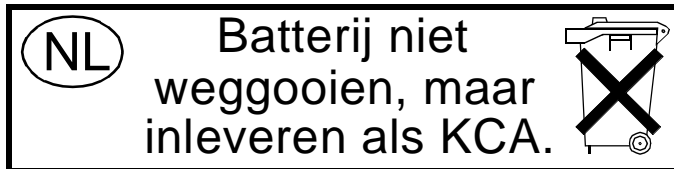

## Memory Cards

### Memory Card Storage Space

Procedures use 12-16 records each. A Library uses 20-35 records. A single library must be included on the card. A record is 256 bytes. Approximately 11 kilobytes of overhead is required on each card.

Use the following formula to estimate the storage space needed:

$$\text{Storage Space (in kilobytes)} = (\text{Number of Procedures} \times 4.1) + 20$$

For example, if you want to save ten different procedures, you will need 61 kilobytes of memory. The 64 kilobyte or 128 kilobyte card is sufficient.

The storage space you need for data collection depends on the number of test results that are saved. You will need approximately 4 kilobytes per page of test results that you save. A page of test results is about 57 lines of CRT or printer output.

The storage space of smaller SRAM cards can be quickly used. If you are collecting large quantities of data, data collection using a PC or printer may be preferable.

## Initializing a Memory Card

Initializing HP 11807A cards (Smart Cards) using the TESTS **Save/Delete Procedure** screen automatically defaults to LIF format. Initializing HP 11807E cards (PCMCIA) using the TESTS **Save/Delete Procedure** screen automatically defaults to DOS format. However, initializing cards from the **Save/Delete Procedure** screen is only available on HP 8920B or HP 8920A,D test sets with firmware above revision A.14.00. If these settings do not match your needs, or you have firmware below revision A.14.00, there is another method described below in which you may select the format.

- Press TESTS.
- Select **Save/Delete Procedure** from the **CUSTOMIZE TEST PROCEDURE** list.
- Insert the SRAM card in the slot on the front panel. (Make sure the switch on the card is not in the write-protected position).
- Press k3 **Init Card**.
- Press Yes if you want to continue.

There are two ways to initialize a memory card to select the format. If you have a terminal emulator attached to the test set, you can type a command into the IBASIC command line. A second way to initialize a card is to run the ROM program RAM\_MNG.

### To initialize an SRAM card using IBASIC

1. Press TESTS.
2. Select **IBASIC Cntrl** from the **SET UP TEST SET** list (or **IBASIC** from the **Test Function** field).
3. Position the cursor to the IBASIC command line and select it.
4. Using the list of characters under the **Choices** menu, enter the following IBASIC command:

For LIF format: **INITIALIZE ":INTERNAL"**

## Memory Cards

For DOS format: **INITIALIZE "DOS:INTERNAL"**

### To initialize an SRAM card using RAM\_MNG

1. Press TESTS.
2. Position the cursor to the **Select Procedure Location** (or **Location**) field and select it.
3. From the **Choices** menu, select **ROM**.
4. Position the cursor to the **Select Procedure Filename** (or **Procedure**) field and select it.
5. From the **Choices** menu, select **IB\_UTIL** (or **RAM\_MNG**).
6. Press k1 (**Run Test**).
7. Follow the displayed instructions.

---

**NOTE:**

---

Loading RAM\_MNG will delete any procedure or program in memory.

## Retrieving Data from a Memory Card

To retrieve the test results after they have been saved on an SRAM memory card, you will have to run an IBASIC program. The following is program to transfer data from a memory card to a terminal emulator. You can type the program lines into the IBASIC command line from a terminal emulator. See "[Configuration for Terminal or PC Operation](#)" on page 208.



## Memory Cards

- To enter the data retrieval program:**
1. Press TESTS.
  2. Select **IBASIC Cntrl** from the **SET UP TEST SET** list (or **IBASIC** from the **Test Function** field).
  3. Position the cursor to the IBASIC command field (large field in the upper part of the display) and select it. From the list of characters in the **Choices** field, enter the following IBASIC program statements and commands.
  4. Enter **SCRATCH** to delete the previous IBASIC program. Be sure it's saved first.
  5. Enter the following program:

```
10 DIM A$(120)
```

*Sets the string length to 120.*

```
20 ASSIGN @File TO "RES:INTERNAL";FORMAT ON
```

*Opens a path to the memory card file called "RES" (for results).*

```
30 ON ERROR GOTO 80
```

*Exits at end of file if an error is encountered.*

```
40 LOOP
```

*Extracts file contents.*

```
50 ENTER @File;A$
```

*Transfers part of the file to the string.*

```
60 OUTPUT 9;A$
```

*The string is output at the serial port.*

```
70 END LOOP
```

*Goes back to get more of the file.*

```
80 END
```

*End of the program.*

6. Press k1 (**Run**) to run the entered IBASIC program.

---

***DIFFERENCE  
BETWEEN RUN AND  
RUN TEST***

The USER **Run** key, assigned as a default key on the TESTS (**IBASIC Controller**) screen, will start an IBASIC program that is resident in the test set's memory. The USER **Run Test** key, assigned as a default key on the other TESTS screens, will load and run the program that is called from the **Select Procedure Filename** and **Select Procedure Location** entries on the TESTS **Main Menu** screen.

---

## Parameters

Parameters are values you enter that optimize your use of the test software. Many of the parameters are determined by examining your test needs.

Default values are set into the software. Some of these values are derived from standard methods of measurement and some are derived from the industry standard requirements. Load a Procedure and select the **Test Parameters** screen from the **CUSTOMIZE TEST PROCEDURE** list, to see the default values.

You should verify that parameters are properly set after you select the tests to be placed in your procedure.

Parameters remain in battery-backed-up memory until you select a procedure to run. If you wish to prevent them from being lost when a new procedure is selected, you will have to save them in a procedure. See "[Saving a Procedure](#)" on page 248.

To print the parameters list, see "[To print TESTS screens:](#)" on page 240.

**To edit a parameter value:**

1. Press TESTS.
2. Select **Test Parameters** from the **CUSTOMIZE TEST PROCEDURE** list (or **Edit Parm** from the **Test Function** field).
3. Position the cursor to the **Parm#** field and select it.
4. Rotate the knob to the desired parameter number and select it.
5. Position the cursor to the **Value** field and select it.
6. Enter the desired value using the DATA keypad and press ENTER.
  - Use the ← key to backspace.
  - Press CANCEL to cancel entries and retain the old value.
7. Press k5 (**Main Menu**) (or TESTS) to return to the TESTS screen.

## **Pass/Fail Limits (specifications)**

Pass/Fail Limits are values you enter that set passing limits for tests. Default values are available in the test software. They have been derived from standard methods of measurement.

Pass/Fail Limits do not have to be changed when you select a test or change the tests in your procedure. Each test has pass/fail limits that apply to it.

You should verify that pass/fail limits are properly set after you select the tests to be placed in your procedure. Lists of the pass/fail limits used by each of the tests are contained in the test descriptions in **chapter 4** of this manual. A lock is provided to prevent access to the pass/fail limits. See "**Securing a Procedure**" on page 252.

Pass/fail limits remain in the test set's battery-backed-up memory until you select a procedure to run. If you wish to prevent pass/fail limits from being lost when a new procedure is selected, you will have to save them in a procedure. See "**Saving a Procedure**" on page 248.

To print the pass/fail limits list, see "**To print TESTS screens:**" on page 240.

**To edit a pass/fail limit value:**

1. Press TESTS.
2. Select **Pass/Fail Limits** from the **CUSTOMIZE TEST SET** list (or **Edit Spec** from the **Test Function** field).
3. Position the cursor to the **Spec#** field and select it.
4. Rotate the knob to the desired pass/fail limit number and select it.
5. Position the cursor to the **Lower Limit** or the **Upper Limit** field and select it.
6. Enter desired value using the DATA keypad and press ENTER.
  - Use the ← key to backspace.
  - Press CANCEL to cancel entries and retain the old value.
7. Position the cursor to the **Check** field and select it.
8. From the **Choices** menu, select the combination of upper and lower limits to be checked.

## Pausing or Stopping a TEST

To pause the program, press CANCEL.

To stop the program, press SHIFT then CANCEL. This performs an IBASIC RESET operation.

---

### ***CHANGING SETTINGS WHILE PAUSED***

If you make changes to instrument settings while the program is paused, subsequent operation may be unpredictable. Error messages may or may not be displayed. See "[Exiting a Program](#)" on page [214](#).

---

#### **To continue a paused program:**

1. Press TESTS.
2. Press k1 (**C**ontinue.)

The test time is displayed when the test is completed. This time includes the time that the program is paused and the time that it is waiting for connection and inputs to be made. If you are testing through midnight, the test time will not display properly.

---

## Printing

You can print any of the following:

- Test results
- TESTS screens
  - "External Devices" (Edit Cnfg)
  - "Order of Tests" (Edit Seqn)
  - "Channel Information" (Edit Freq)
  - "Pass/Fail Limits" (Edit Spec)
  - "Test Parameters" (Edit Parm)

### How to Print (task list)

There are five basic steps to printing listed below. A detailed description of each of these steps is at the end of this section.

1. Check to see if your printer is supported by the test set (see **"Supported Printers" on page 232**).
2. Determine if your printer requires serial, parallel, or HP-IB connection. Connect the printer to the appropriate port on the test set (see **"Printer Connection" on page 233**).
3. Configure the test set for your printer and its interface (see **"Configuring the Test Set for Printing" on page 236**).
4. Instruct the test set what to print (see **"To print test results:" on page 237**).



## **Supported Printers**

- HP ThinkJet printer
- HP QuietJet printer
- HP PaintJet printer
- HP DeskJet printer
- HP LaserJet printer
- Epson FX-80 printer
- Epson LQ-850 printer

If you do not have one of these printers, consult your printer's manual for the correct printer settings to emulate one of the supported printers.

## Printer Connection

### HP-IB Connection

An HP-IB printer can be connected to the test set's rear-panel HP-IB connector with an HP-IB cable.

### Serial Connection

A serial printer can be attached to the serial port. See [figure 1, "Test Set RJ-11 Serial Port Connections," on page 234](#). Use the following RJ-11 pins for this connection.

- RJ-11 Pin 2 - test set Receive Data
- RJ-11 Pin 4 - Ground
- RJ-11 Pin 5 - test set Transmit Data

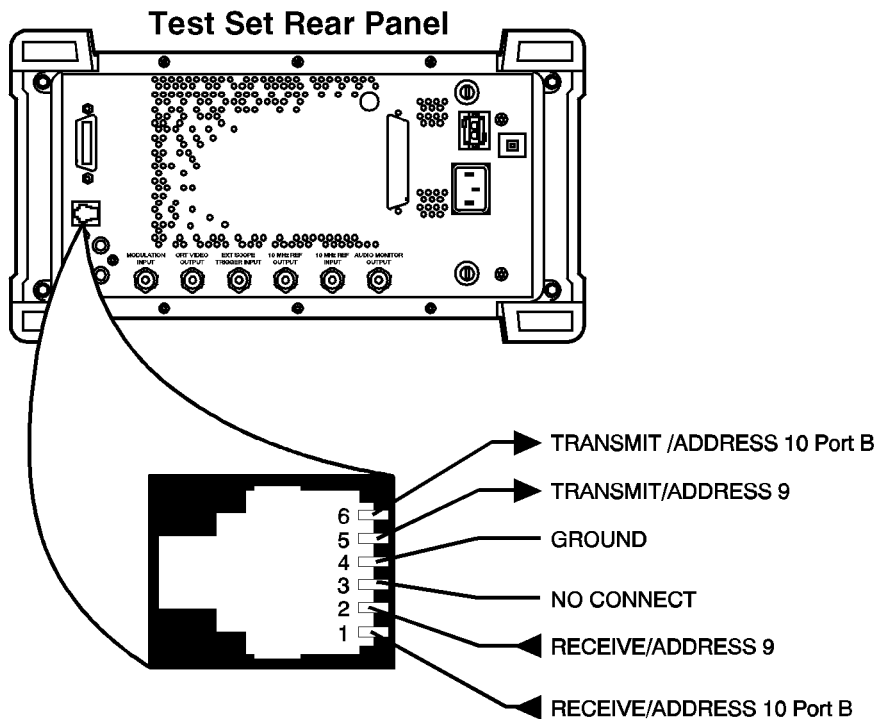
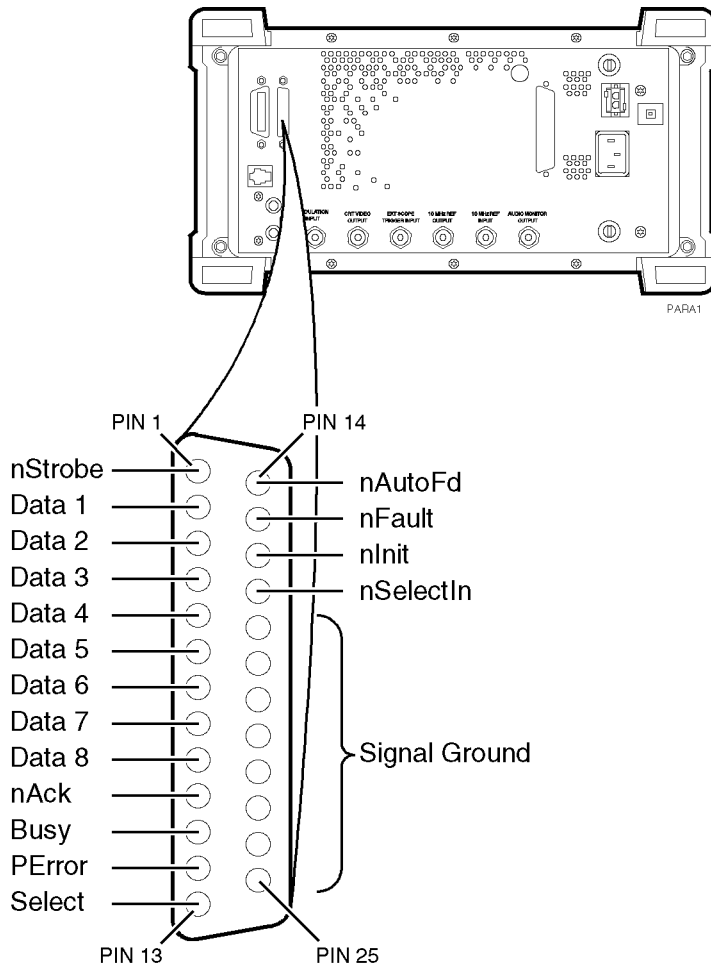


Figure 1

Test Set RJ-11 Serial Port Connections

### Parallel Connection

A parallel printer can be attached to the parallel port. Use the following **figure 2** for pin information.



**Figure 2**

**Test Set Parallel Port Connections**

## Configuring the Test Set for Printing

If using a serial printer, you cannot use the serial port for other connections at the same time, such as Data Collection (saving test results). Serial port connections are shown earlier in this section.

---

### ***PRINTER SETUP DIFFERENCES***

The HP 8920A,D had several firmware enhancements, which are standard in the HP 8920B. The following **Setup Printer** section applies to users with:

- HP 8920A,D test sets with firmware above revision A.14.00.
- All HP 8920B test sets.

The test set's firmware revision is displayed on the top right corner of the configuration screen.

- Press SHIFT CONFIG to display the configuration screen and read the firmware revision.

If you have an HP 8920A with firmware revision below A.14.00, refer to the next section, titled "**To Setup Printer Using HP 8920A FW Below Rev A.14.00**" on page 242. Contact Hewlett-Packard at 1-800-922-8920 for details on upgrading your firmware if desired.

EXCEPTION: If you are using A.xx.xx revision software, you can not use the **Printer Setup** screen regardless of your firmware revision. Refer to the instructions for firmware below A.14.00.

---

## To Setup Printer Using Any HP 8920B Or HP 8920A FW Above Rev A.14.00

1. Press TESTS
2. Select **Printer Setup** from the **SET UP TEST SET** list.
3. Position the cursor to **Model** and select the desired printer.
4. Position the cursor to **Print Port** and select the desired port.
5. (If HP-IB only) Position the cursor to **Printer Adrs** and enter the HP-IB address for your printer (0-30).
6. Set the following options if desired:
  - Lines/Page (controls the number of lines, 20-120, printed on a page before a form feed is sent to the printer)
  - FF at Start (to cause a form feed at the start of a test sequence)
  - FF at End (to cause a form feed at the end of a test sequence)
7. From the **To Screen** menu, select **More**.
8. From the **Choices** menu, select **IO CONFIG**.
  - For Serial Printing, set the **Serial Baud** field and other serial communications fields listed under it to correspond to your printer's configuration.
  - For HP-IB Printing, set the **Mode** field to **Control**.
9. Press TESTS to return to the TESTS (**Main Menu**) screen.

### To print test results:

1. Press TESTS
2. Select **Printer Setup** from the **SET UP TEST SET** list.
3. Position the cursor to **Output Results To** and select **Printer**.
4. Position the cursor to **Output Results For** and select **All** if you want all results printed, or **Failures** if you want failures only printed.
5. (Optional) Position the cursor to **Output Heading** and enter your desired heading.

## Printing

### To send Escape Sequences to the printer

If you have revision B.xx.xx software, you may use the test set to send escape sequences to control printer options such as pitch, margins, paper size, and so forth. The software comes with some pre-defined escape sequences compatible with HP printers, listed below, or you have the option to enter others which are compatible with your printer (use your printer's user's manual for the available print features and corresponding escape sequences). This function is not available with revision A.xx.xx software.

The software already has an implied escape character for the first sequence, you need only to enter the escape sequence following the escape character. However, if you are linking two or more sequences together, you must use the ~ to indicate the escape character between each sequence. If the sequence exceeds the space allotted in the options field, you may continue with additional escape sequences in the next available **Options** field. You must however, still enter **Escape Seq** in the **Calling Name** field and the appropriate address in the **Addr** field for all subsequent entries.

## How to send an Escape Sequence:

1. Press TESTS.
2. Select **External Devices** from the **SET UP TEST SET** list.
3. Position the cursor to the **Inst#** field and select it.
4. Rotate the knob until an empty **Calling Name** field appears, and select it.
5. Position the cursor to the **Calling Name** field and select it.
6. Select **Escape Seq** from the **Choices** menu.
7. Position the cursor to the **Addr** (address) field and select it.
8. Using the DATA keypad, enter **9** for serial printers, **15** for parallel printers, or **70X** for HP-IB printers, then press ENTER.
9. Position the cursor to the **Options** field (directly under **Calling Name**) and select it.
10. Select the desired escape sequence from the **Choices** menu if applicable, or enter an appropriate sequence using the list of characters below the choices.



**Table 10**                      **Escape Sequence Definitions for HP Printers**

<b>Escape Sequence</b>	<b>Print Feature</b>
&l66P	Sets page length to 66 lines
&l72P	Sets page length to 72 lines
&l6D	Sets lines per inch to 6 lines
&l8D	Sets lines to inch to 8 lines
(s12h12v6T	Selects 12 characters per inch 12/72 inch character height gothic typeface
&a9L~&l6E	Sets left margin to 9 characters top margin to 6 lines
(s12h12v6T~&a9L~&l6E	Selects 12 characters per inch 12/72 inch character height gothic typeface left margin to 9 characters top margin to 6 lines
&l8d88P	Selects 8 lines per inch 88 lines per page
&l8d96P	Selects 8 lines per inch 96 lines per page
(s16.67h12V~&a17L~&l6E	Selects 16.67 characters per inch 12/72 inch character height left margin to 17 characters top margin to 6 lines

**To print TESTS screens:**

TESTS screens include:

- "External Devices"
- "Order of Tests"
- "Channel Information"
- "Pass/Fail Limits"
- "Test Parameters"

The same general process is used to print the information for all of the above TESTS screens.

1. Make sure that your printer is properly connected and configured as explained earlier in this section.
2. Press TESTS.
3. Select the **CUSTOMIZE TEST PROCEDURE** screen of your choice.
4. Press k3 (**Print All**) and select it.
5. Press TESTS to return to the TESTS (Main Menu) screen.

## To Setup Printer Using HP 8920A FW Below Rev A.14.00

1. Press **TESTS**
2. Select **Edit Cnfg** from the **Test Function** field.
3. Position the cursor to the **Inst#** field and select it.
4. Rotate the knob until an empty **Calling Name** field appears, and select it.
5. Position the cursor to the **Calling Name** field and select it.
6. Using the list of characters in the **Choices** menu, enter the word **Printer**. Select **Done** when complete.
7. Position the cursor to the **Model** field and select it (optional).
8. Using the DATA keypad, enter the Model # and press ENTER.
9. Position the cursor to the **Addr** (address) field and select it.
10. Using the DATA keypad, enter **9** for serial printers, **15** for parallel printers, or **70x** for HP-IB printers, then press ENTER.
11. Position the cursor to the **Options** field (directly under **Calling Name**) and select it.
12. Using the list of characters from the **Choices** menu, the following commands may be entered. Separate the commands with commas (example; **LN=60 , START , END**)
  - **LN** equals the number of printed lines per page.
  - **START** causes a form feed at the start of each printout.
  - **END** causes a form feed at the end of each printout.
13. From the **To Screen** menu, select **More**.
14. From the **Choices** menu, select **IO CONFIG**.
15. For Serial Printers:
  - Set the **Serial Baud** field and other serial communications fields listed under it to correspond to your printer's configuration.

**16.** For HP-IB Printers:

- Position the cursor to the **Mode** field and select it.
- From the **Choices** menu, select **Control**.
- Position the cursor to the **Print Adrs** field and select it.
- Rotate the knob and select the HP-IB address of your printer.
- Position the cursor to the **Print To** field. Pressing knob will toggle the underlined selection. Select to underline **HP-IB**.

**17.** Press TESTS to return to the TESTS screen.**To print test results**

1. Make sure that your printer is properly connected and configured as explained earlier in this section.
2. Press TESTS.
3. Position the cursor to the **Output Results To:** field (or the **Output Destination** field). Pressing knob will toggle the underlined selection. Select to underline **Printer**.
4. Position the cursor to the **Output Heading** field and select it.
5. Using the list of characters in the **Choices** menu, enter a printout heading (optional). Select **Done** when the heading is complete.

**To send Escape Sequences to the printer**

If you have revision B.xx.xx software, you may use the test set to send escape sequences to control printer options such as pitch, margins, paper size, and so forth. You may enter sequences which are compatible with your printer (use your printer's user's manual for the available print features and corresponding escape sequences). This function is not available with revision A.xx.xx software.

The software already has an implied escape character for the first sequence, you need only to enter the escape sequence following the escape character. However, if you are linking two or more sequences together, you must use the ~ to indicate the escape character between each sequence. If the sequence exceeds the space allotted in the options field, you may

## Printing

continue with additional escape sequences in the next available **Options** field. You must however, still enter **Escape Seq** in the **Calling Name** field and the appropriate address in the **Addr** field for all subsequent entries.

### How to send an Escape Sequence:

1. Press TESTS.
2. Select **Edit Cnfg** from the **Test Function** field.
3. Position the cursor to the **Inst#** field and select it.
4. Rotate the knob until an empty **Calling Name** field appears, and select it.
5. Position the cursor to the **Calling Name** field and select it.
6. Enter **ESCAPE SEQ** using the characters in the **Choices** menu. Select **Done** when you are finished.
7. Position the cursor to the **Addr** (address) field and select it.
8. Using the DATA keypad, enter **9** for serial printers, **15** for parallel printers, or **70X** for HP-IB printers, then press ENTER.
9. Position the cursor to the **Options** field (directly under **Calling Name**) and select it.
10. Select the desired sequence using the list of characters below the choices.

**Table 11**                      **Examples of Common Escape Sequences**

<b>Escape Sequence</b>	<b>Print Feature</b>
&l66P	Sets page length to 66 lines
&l72P	Sets page length to 72 lines
&l6D	Sets lines per inch to 6 lines
&l8D	Sets lines to inch to 8 lines
(s12h12v6T	Selects 12 characters per inch 12/72 inch character height gothic typeface
&a9L~&l6E	Sets left margin to 9 characters top margin to 6 lines
(s12h12v6T~&a9L~&l6E	Selects 12 characters per inch 12/72 inch character height gothic typeface left margin to 9 characters top margin to 6 lines
&l8d88P	Selects 8 lines per inch 88 lines per page
&l8d96P	Selects 8 lines per inch 96 lines per page
(s16.67h12V~&a17L~&l6E	Selects 16.67 characters per inch 12/72 inch character height left margin to 17 characters top margin to 6 lines

## Printing

### To print TESTS screens

TESTS screens include:

- "Edit Cnfg"
- "Edit Seqn"
- "Edit Freq"
- "Edit Spec"
- "Edit Parm"

The same general process is used to print the information for all of the above TESTS screens.

1. Make sure that your printer is properly connected and configured as explained earlier in this section.
2. Press TESTS.
3. Select the TESTS screen you desire.
4. Press k3 (**Print All**) and select it.
5. Press TESTS to return to the TESTS screen.

---

## Procedures

A procedure is a collection of test parameters, pass/fail limits and a testing order, saved in a file that customizes the test software to a specific application. You may save the file on a memory card or disk.

You do not have to save a test sequence in a procedure. Each test can be stand-alone if desired. After you choose a procedure, you can choose which of the tests you want to run.

When you save a procedure you will only be saving test parameters, pass/fail limits and a testing order. The memory card or disk must also contain a library file. A library file contains the names of all of the test parameters, pass/fail limits and tests that are in the test software. The library you use will be the library that is supplied with your software. When you save your procedure, the library will be automatically saved on the same card or disk.

The procedure(s) supplied with your software will be listed in the **Choices:** column when you select the **Select Procedure Filename:** (or **Procedure**) field. Procedures will be displayed if your software memory card is plugged in.



## Saving a Procedure

After you have set up the test software you can save the setup to an SRAM memory card, disk, or internal RAM memory by doing the following.

The memory card or disk you use must be initialized before its first use. See "[Initializing a Memory Card](#)" on page 221 or "[Initializing a Disk](#)" on page 211. If you are using a disk drive, you may have to enter the **External Disk Specification** into the TESTS **External Devices** screen (or **Edit Cnfg** screen). It will be used when the **Select Procedure Location:** field on the TESTS screen is **Disk**.

### To save a procedure:

1. Press TESTS.
2. Select **Save/Delete Procedure** from the **CUSTOMIZE TEST PROCEDURE** list (or **Proc Mngr** from the **Test Function** field).
3. Position the cursor to the **Select Procedure Location** (or **Location**) field and select it.
4. From the **Choices** menu, select the desired location. The media must be initialized before a file can be saved. To initialize an SRAM card (HP 8920B or HP 8920A,D firmware above revision A.14.00 only, otherwise see "[Initializing a Memory Card](#)" on page 221):
  - Insert card in the slot on the test set's front panel.
  - Press k3 (**Init Card**)
  - Press **Yes**. Note: this will delete any procedures or programs from memory.

To initialize a RAM disk, see "Memory Cards/Mass Storage" in the *HP 8920 Programmer's Guide*.

5. Position the cursor to the **Enter Procedure Filename** (or **Procedure**) field and select it.
6. From the list of characters in the **Choices** menu, enter a filename. Filename must be nine characters or less. When filename is complete, position cursor to **Done** and select it. Procedure filenames that already exist on the card will appear at the top of the list of characters.

7. If you selected **Card**, insert an initialized memory card into the slot on the test set's front-panel.
8. Verify that the card or other media is not write-protected. See **"Memory Cards" on page 216**.
9. Position the cursor to the **Enter Description for New Procedure** (or **Comment for new procedure**) field and select it. From the list of characters in the **Choices** menu, enter comments. When the comments are complete, position the cursor to **Done** and select it.
10. Position the cursor to the **Procedure Library** (or **Library for new procedure**) field and select **Current** (Current underlined). The name of the Library is displayed on the TESTS screen.
11. Position the cursor to the **Code Location** (or **Program location for new procedure**) field and select it.  
  
From the **Choices** menu, choose memory **Card**, **ROM**, **RAM** or **Disk**. When a procedure is run, the test system will look in this location for a code file if it is not resident in the Test Set's battery-backed-up memory. This location will usually be the software memory card.
12. Press **k1 (Save Proc)** (or position the cursor to the **Action** field and select **Make Procedure**). A procedure will be saved at the location you chose.

## Loading a Procedure

A procedure can be loaded from storage media into the test set's battery-backed-up memory by doing the following.

### To load a procedure:

1. Press TESTS.
2. Position the cursor to the **Select Procedure Location** (or **Location**) field and select it.
3. From the **Choices** menu, choose the desired location where the procedure is stored and select: **Card, ROM, RAM** or **Disk**.
4. Position the cursor to the **Select Procedure Filename** (or **Procedure**) field and select it.
5. From the **Choices** menu, choose the procedure file that you want to load.
6. Read the **Description** (or **Comment**) field to ensure that the loaded procedure file is the one you want.

## Deleting a Procedure

Procedures can be removed from an SRAM memory card, disk or RAM by doing the following.

### To delete a Procedure:

1. Press TESTS.
2. Select **Save/Delete Procedure** from the **CUSTOMIZE TEST PROCEDURE** list (or **Proc Mngr** from the **Test Function** field).
3. Position the cursor to the **Select Procedure Location** (or **Location**) field and select it.
4. From the **Choices** menu, select the desired location.
5. Position the cursor to the **Enter Procedure Filename** (or **Procedure**) field and select it.
6. From the **Choices** menu, select the name of the procedure you wish to delete.
7. Press k2 (**Del Proc**) (or position the cursor to the **Action** field and select **Delete Procedure**).
8. Press Yes if you wish to continue.

## Securing a Procedure

After you have set up your test software with a testing order, channel information, test parameters, and pass/fail limits, you may wish to secure it. This operation will prevent the viewing and changing of those functions. You can select the items you wish to secure or un-secure. An IBASIC ROM program is stored in the Test Set's firmware to do this.

You can secure the procedure that is supplied with the test software. It is shipped un-secured.

After you make a procedure, you can secure it.

### To secure a Procedure:

1. Press TESTS.
2. Position the cursor to the **Select Procedure Location** (or **Location**) field and select it.
3. From the **Choices** menu, select **ROM**.
4. Position the cursor to the **Select Procedure Filename** (or **Procedure**) field and select it.
5. From the **Choices** menu, select **IB\_UTIL** (or **SECURE\_IT**).
6. Press k1 (**Run Test**).
7. Select the location of the procedure you want to secure: k1 (**memory Card**) or k2 (**RAM**).

---

### NOTE:

RAM refers to the RAM Disk memory within the test set. Before selecting RAM, you must initialize the RAM as a disk. See "[RAM Disk](#)" on page 254, and "[Initializing RAM Disks](#)" on page 254.

8. Proceed with the on-line instructions. You may wish to secure only one of the items, such as pass/fail limits.
9. When you are prompted to enter the **pass number**, enter any sequence of numerals 0 through 9 using the DATA keypad. Enter 9 digits or less.

**To un-secure a procedure:**

To un-secure a procedure, you must know the **pass number**.

1. Press TESTS.
2. Position the cursor to the **Select Procedure Location** (or **Location**) field and select it.
3. From the **Choices** menu, select **ROM**.
4. Position the cursor to the **Select Procedure Filename** (or **Procedure**) field and select it.
5. From the **Choices** menu, select **IB\_UTIL** (or **SECURE\_IT**).
6. Press k1 (**Run Test**).
7. Select the location of the procedure you want to un-secure: k1 (**memory Card**) or k2 (**RAM**).
8. Enter the name of the procedure you wish to un-secure.
9. If the procedure has any item secured, you will be asked for the **pass number**.
10. Proceed with the on-line instructions. Select the items you wish to un-secure.
11. When you are prompted, enter the **pass number** using the DATA keypad.

---

## RAM Disk

RAM disk is a section of internal memory that acts much like a flexible disk. Programs can be stored, re-stored, erased, and retrieved.

The RAM disk is partitioned into four separate volumes; 0-3. Each volume is treated as a separate disk. You can also specify the size of each disk in 256-byte increments.

The four RAM disk volumes are designated **:MEMORY,0,0** to **:MEMORY,0,3**. For example, to catalogue the contents of RAM disk volume '0' from the **IBASIC Cntrl** screen, enter

```
CAT ":MEMORY,0,0"
```

Volume 0's contents can be viewed.

---

### **RAM DISK ERASURE**

Any existing programs or formatting on RAM is erased if you use the RAM\_MNG or COPY\_PL ROM programs, or the SERVICE screen's RAM Initialize function. Therefore, you should only use RAM disks for short-term storage of files.

---

### **Initializing RAM Disks**

Each RAM disk volume must be initialized before it can be used.

---

#### **NOTE:**

If you are using a RAM disk to store a test procedure, you must initialize the RAM disk volume 0. When the software saves a procedure to the Test Set's RAM, it automatically stores the procedure into the memory location volume 0. This is not changeable.

---

**To initialize RAM disk Volume 0:**

Volume 0 can be initialized using the **RAM\_MNG** procedure stored on the internal ROM's **IB\_UTIL** menu.

- 1 Press the **TESTS** key.
2. Position the cursor to the **Select Procedure Location** field and select it.
3. From the list in the **Choices:** menu, select **ROM**.
4. Position the cursor to the **Select Procedure Filename** field and select it.
5. From the list in the Choices menu, select **RAM\_MNG**.

**RAM\_MNG** is the RAM manager program.

6. Press the k1 (**Run Test**) key.  
The program will begin execution.
7. Read the precautions provided on the Test Set's screen and then press the k1 (**Yes**) key to continue.
8. Press the k3 (**Int RAM**) key.

This selects the Test Set's internal RAM as the location to be initialized.

- 9 Enter the number of records you wish to initialize using the data key pad and then press the ENTER key.

50 records should be sufficient for saving a procedure.

10. Press the k1 (**Yes**) key to verify the number of records was entered correctly.

The internal RAM **:MEMORY,0,0** is initialized.



## RAM Disk

### To initialize RAM volumes 1,2, or 3:

Volumes 1, 2, and 3 must be initialized from the **IBASIC Cntrl** screen.

- 1 Press the TESTS key.
2. Select **IBASIC Cntrl** from the **SET UP TEST SET** list (or the Test Function field).
- 3 Position the cursor to the data entry field and select it.
4. Using the list of characters from the **Choices:** menu, enter the following command:

```
INITIALIZE ":MEMORY,0,<volume number 1-3>",<volume size>
```

or

```
INITIALIZE ":MEMORY,0,1",50
```

The optional 'volume size' in the command lets you specify the memory area set aside for each disk in 256-byte blocks.

## **Saving Tests Results**

See "[Data Collection \(Saving and Retrieving Test Results\)](#)" on page 198.

## Serial Port

This 6-pin, RJ-11 serial port is used to input and output serial data. Serial data is used for entering programs, printing, and for sending test results to a connected controller, disk drive, or terminal.

### Operating Considerations

The serial communications settings are defined on the I/O CONFIGURE screen. Ground is used with both IBASIC and all other serial connections. Transmit B and Receive B are exclusively used with IBASIC programs. Transmit and Receive are used with all other serial connections (see [figure 1, "Test Set RJ-11 Serial Port Connections," on page 234](#)).

The IBASIC Controller sends data to and receives data from the serial ports using address **9** for the primary port, and address **10** for Port B.

Use an RJ-11/25-pin RS-232 adapter (HP P/N 98642-66508) and RJ-11 cable (HP P/N 98642-66505) to connect the HP 8920A,B,D to a serial printer or terminal/computer.

---

#### ***RJ-11 CONNECTORS***

RJ-11 cables and adapters can be wired several ways. If you buy a cable or adapter other than the HP parts listed, verify the connections for the pins indicated in the following [table 12](#) before connecting cables to the instruments.

The following [table 12](#) lists connections for Transmit, Receive, and Ground pins (address 9).

**Table 12**                      **Connections for Transmit, Receive, and Ground Pins**

<b>HP 8920A/D RJ-11 Serial Port</b>		<b>Terminal/PC 25-Pin RS-232</b>		<b>Terminal/PC 9-Pin RS-232</b>
Pin 2 (RX)	to	pin 2 (TX)	or	pin 3 (TX)
Pin 5 (TX)	to	pin 3 (RX)	or	pin 2 (RX)
Pin 4 (GND)	to	pin 7 (GND)	or	pin 5 (GND)

Serial Port

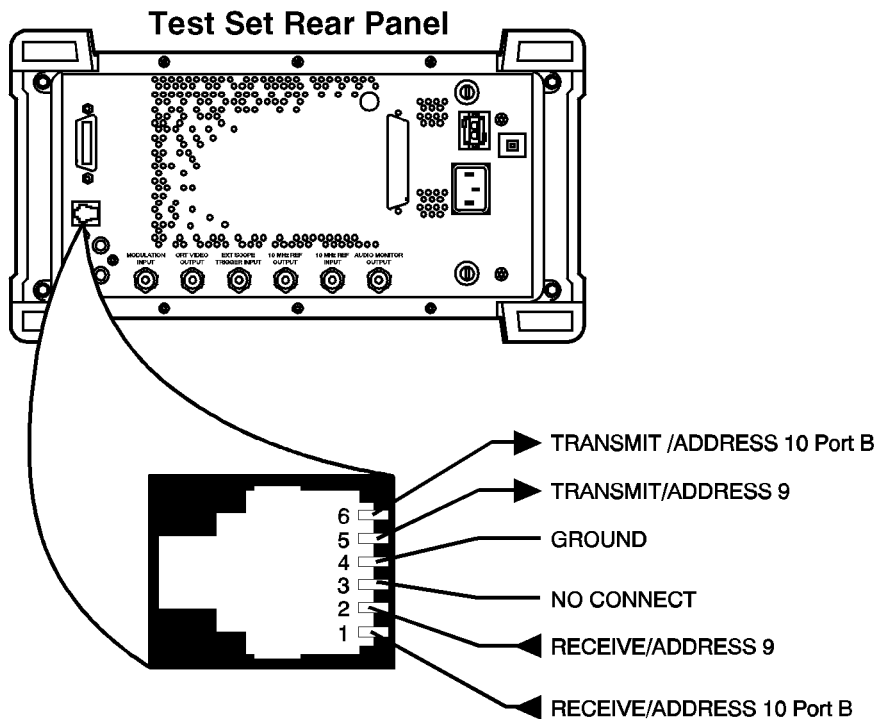


Figure 3 Test Set RJ-11 Serial Port Connections

---

## Test Execution Conditions

In some situations, you may wish to change the way the software works when a test result is obtained. **Test Execution Conditions** allow you to do this.

**Test Execution Conditions** are accessed from the **SET UP TEST SET** list on the TESTS (Main Menu) screen. Press TESTS, then select **Execution Cond** to display them. (They are displayed directly on the main TESTS screen in firmware below revision A.14.00).

**Test Execution Conditions** are not retained after a power-down/power-up cycle.

The following **Test Execution Conditions** can be set as needed:

### Output Results To: (Output Destination)

You can select either: **Crt** or **Printer** Default:**Crt**

You can specify where test results are to be placed. If you select **Crt**, results will be displayed on the test set's CRT. If you select **Printer**, test results will be sent to the CRT and to a printer. You must connect and configure a printer if you select **Printer**. See "**Printing**" on page [231](#).

### Output Results For: (Output Results)

You can select either: **All** or **Failures** Default:**All**

You can specify if you want only the failed results to be displayed or printed. This will be useful if you generally do not print test results, and want to ensure that failed results are displayed or printed.

## Output Heading

You can use this field to enter a heading that will be printed or displayed.

Select the **Output Heading** field. Use the knob to choose and enter the characters that you want to appear in the heading.

Choose **Done** when you are finished.

## If Unit-Under-Test Fails (If UUT Fails)

You can select either: **Continue** or **Stop** Default:**Continue**

If you set this to **stop**, and a pass/fail result is **F**, the program will stop.

## Test Procedure Run Mode (Run Mode)

You can select either: **Continuous** or **Single Step**

Default:**Continuous**

You can make tests pause at certain times. If you set this to **Single Step**, the program will pause after a comparison is made between a test determination and the expected result. For example, tests will pause after the program compares the results to a specification. You can continue from the paused state by pressing k2 (**Continue**).

## Autostart Test Procedure on Power-Up

You can select either: **On** or **Off** Default: **Off**

You can set up the test set so that if the procedure was previously loaded, the procedure will be immediately executed when the test set is powered on.

---

## USER Keys

When you are using the test set, you will see the following USER keys assigned appear at times in the top right corner of the display. These keys are assigned to the hard keys k1 through k5. In many cases, these keys can be used as “shortcuts” instead of positioning the cursor and selecting. USER keys are sometimes referred to as softkeys.

**Clr Scr** clears the test set’s CRT display.

**Continue** continues the program after it has been paused.

**Delete Stp** is used to edit items in a test sequence. When you press this key, the test in the displayed sequence that has its **Step #** highlighted (inverse video) will be deleted. The tests that follow in the sequence will be scrolled up by one step.

**Del Proc** is used to delete the selected procedure. When you press this key, you will be prompted to verify the command by pressing Yes.

Press **Done** when you want to exit a test or have completed a task. The program will continue if there is a next test in the sequence or if there are additional program steps in the test being run.

**Help** provides information on how to use the current TEST screen.

**Init Card** is used to initialize a memory card. Before you press this key, verify that the card is inserted correctly and not in the write-protected position.

**Insrt Stp** is used to enter items into a test sequence. When you press this key, the test in the displayed sequence that has its **Step #** highlighted (inverse video) will be copied into a new sequence location, immediately after the highlighted one. The tests that follow in the sequence will be scrolled down by one step. This key does nothing if there are no items in the sequence. Choose a test before using this key to insert another.



## USER Keys

**Main Menu** is used to return to the main TESTS screen. The same result is achieved by pressing TESTS.

**Page Up**\Page Down are used to quickly display items in the list when some of the items won't fit on the screen.

**Run** starts an IBASIC program that has been loaded into the test set's memory.

**Run Test** loads and runs the program that is called from the procedure that has been entered into the TESTS screen **Select Procedure Filename:** entry. If the program is already loaded into the test set's memory, it will be started.

**Save Proc** is used to save the specified procedure.

**Sngr Step** steps the IBASIC program one line at a time. This is different from **Continuous/Single Step** run mode. See "[Test Execution Conditions](#)" on page 261.

**Stop Test** pauses the test software.

**Take It** causes the program to accept the setting of an adjustment, and proceed with the program. The test, determining if the adjustment is within limits, is ceased.

**Yes**\No are pressed when answering questions displayed on the test set's CRT display.

---

## Problem Solving

## If You Have a Problem Testing Your Radio

This section contains information for solving some of the most common problems related to using the HP 11807A,E radio-test software. All problems in this section have a single obvious symptom (shown in bold typeface at the top of each page), but many possible causes (listed in order from the most probable cause to the least probable cause).

---

**NOTE:**

If the test set displays an error that states “One or more self- tests failed”, you have a hardware problem. In this case, refer to the test set’s *Assembly Level Repair* manual.

If the problem has to do with operating the test set, you’ll want to refer to the MESSAGE screen to list errors or operating messages that have occurred since the instrument was turned on. To do this, press the SHIFT and then the MSSG key.

Also, the *HP Instrument BASIC* manual describes any errors that happen as a result of running IBASIC programs.

---

---

## If the test procedure doesn't run on an test set

- Check to see that the memory card is correctly inserted into the test set.
- Check to see that a test procedure file has been loaded into the test set.

In the upper left corner of the TESTS (Main Menu) screen, a file name should be seen in the **Select Procedure** field. If the field is blank, then a test procedure file has not been loaded.

To load a test procedure file:

1. Press TESTS.
  2. Position the cursor to the **Select Procedure Location** (or **Location**) field and choose **Card** from the **Choices** menu.
  3. Position the cursor to the **Select Procedure Filename** (or **Procedure**) field and choose the test procedure file you want from the **Choices** menu.
- Check that you have selected k1 (**Run Test**) to start testing.
  - Check the MESSAGE screen to see if an error is causing the test procedure to not run.

If you see the error message “Structures improperly matched” or “Improper context terminator”, the software program was incorrectly loaded into the test set. In this case, refer to the directions, "[If the HP 11807A,E program was incorrectly loaded](#)" on page 268.

---

### NOTE:

Test procedure files are not the actual code or program needed to run the tests. You'll need to load the test procedure file, then run the selected tests with the memory card containing the program code inserted in the memory card slot. The program code remains loaded in the test set until another program is loaded.

---

## If the HP 11807A,E program was incorrectly loaded

An error message like “Structures improperly matched” or “Improper context terminator” appears. It takes 2-4 minutes to load an HP 11807A program when k1 (**Run Test**) is first pressed. It takes approximately 15 seconds to load an HP 11807E program. Thereafter, it takes only a few seconds to run.

- Were the SHIFT CANCEL keys pressed or the memory card removed while the program was loading? If this was done, you will need to clear the RAM, or load another program and then re-load the HP 11807A,E program.

To clear RAM in the test set: (All SAVE registers are lost.)

1. Press TESTS.
  2. Position the cursor to **Select Procedure Location** and choose **ROM** from the **Choices** menu.
  3. Position the cursor to **Select Procedure Filename** and choose **IB\_UTIL** (or **COPY\_PL**) from the **Choices** menu.
  4. Press k1(**Run test**).
  5. Press k5 (**CLEAR RAM**).
  6. Press TESTS, and re-load and run the test procedure you want.
- Check to see that the test set has enough RAM memory. To see if there's enough RAM memory:
    1. Press TESTS.
    2. Position the cursor to **Select Procedure Location** and choose **ROM** from the **Choices** menu.
    3. Position the cursor to **Select Procedure Filename** and choose **LIST\_OPTS** from the **Choices** menu.
    4. Press k1 (**Run Test**).
    5. If the screen displays **OPTIONAL RAM**, your test set has enough RAM memory. If **OPTIONAL RAM** is not displayed, refer to "**Additional Services Available**" on page 20.

---

## If the printer does not print the test results

- Check that the printer is turned on.
- Check that the HP-IB, parallel, or serial cable from the test set to the printer is connected.

**If have firmware below revision A.14.00 OR you are using software with Revision A.xx.xx**

1. Press TESTS.
2. Check that **Printer** was selected as the **Output Destination** in the **Test Execution Conditions**.
3. Check that the test set is correctly configured for HP-IB, parallel, or serial printing:

**For a HP-IB printer:**

- Check that the printer's **Calling Name** is "PRINTER" and its address is correctly set up in the External Devices (or Edit Cnfg) screen.
- Check that the I/O CONFIGURE screen has been set up correctly:
  - Mode=Control
  - Print To=HP-IB
  - Print Adrs=address of your printer

**For a parallel printer:**

- Check that the printer's **Calling Name** is **PRINTER** and its address is set to **15** in the External Devices (or Edit Cnfg) screen.

**If the printer does not print the test results**

**For a serial printer:**

- Check that the printer's **Calling Name** is **PRINTER** and its address is set to **9** in the External Devices (or Edit Cnfg) screen.
- Check that the I/O CONFIGURE screen has been set up correctly for the printer's baud rate, parity, and so forth.

Refer to the test set's *User's Guide* for details about configuring the printer.

**If you have an HP 8920B or HP 8920A,D with firmware above revision A.14.00 AND you are using software with Revision B.xx.xx**

1. Press TESTS.
2. Select **Printer Setup** from the **SET UP TEST SET** list.
3. Check that **Printer** was selected in the **Output Results To:.**
4. Check that the test set is correctly configured for HP-IB or serial printing:
  - a. Select **Model** and choose the most compatible printer model from the **Choices** menu.
  - b. Select **Printer Port** and choose which printer port you are using.
  - c. If the HP-IB port was selected, check that the correct **Printer Adrs** was entered.
  - d. If the Serial port was selected, check that the I/O CONFIGURE screen has been set up correctly for the printer's baud rate, parity, and so forth.

Refer to the test set's *User's Guide* for details about configuring the printer.

---

## If you can't get the data-collection function to work

- Check that you have **DATA C** entered in the TESTS (**External Devices**) (or **Edit Config**) menu.
  1. Press TESTS.
  2. Select the External Devices screen, from the **SET UP TEST SET** list (or **Edit Config** from the **Test Function** field).
  3. Position the cursor to the **Calling Name** field, push the knob and enter:  
**DATA C.**
- Check the **Model** field, it should be kept empty since it is not used.
- Check the **Addr** (address) field to make sure the correct address is entered for where the data is to be stored.
  1. If data is to be stored on an SRAM memory card, enter “1” into the **Addr** field.
  2. If data is to be stored on an external computer through the test set's RS-232 serial port (if available), enter “9” into the **Addr** field.
  3. If data is to be stored on an external disk drive over HP-IB, enter an address of “700” or greater into the **Addr** field.



If you can't get the data-collection function to work

- Check the **Options** field to make sure it is correctly set up:
  1. **For an external disk drive (LIF format) or an SRAM memory card:**
    - a. Enter **ASCII** for saving data as an ASCII file.
    - b. Enter **BDAT** for saving data as a Binary-Data file.
    - c. As an option, you may enter **REC=xxx**, where “xxx” is the number of records for each file. (The software defaults to 80 records. However, if too small a record size is used, you’ll get an “**End of file error**” when the test is run.)
  2. **For a DOS disk drive, you may keep the Options field empty, or you may enter any of the following key words:**
    - a. Enter **ASCII** for saving data as an ASCII file.
    - b. Enter **BDAT** for saving data as a Binary-Data file.
    - c. Enter **REC=xxx** for the file’s record size, where “xxx” is the number of records for each file. (The software defaults to 80 records. However, DOS systems automatically change record size if it’s too small.)
    - d. Enter a (**dot extension**) of 3 characters or less for the file name. For example, all model ABCD radio’s tested may be organized to have a “.ABC” file extension.
- Check the test set to make sure it’s in the controller mode if you are using an external disk drive.
  1. Access the I/O Configure screen from the **More** field in the **To Screen** menu.
  2. Position the cursor to the **Mode** field and select **Control**.

---

**NOTE:**

When the test operator is prompted to enter a file name where data is to be stored, the protocol for the mass-storage device being used must be followed.

Hierarchical directory paths are not allowed, and all files are created with “**FORMAT ON**”.

Also, when initializing a disk, use the following format (“7xx” is the disk address, “y” is the device selector):

**DOS disk: INITIALIZE “DOS:CS80,7xx,y”**

**LIF disk: INITIALIZE “:,7xx,y”**

---

## If the cellular phone fails to obtain service

- ❑ Check test **parameter 3. CP Control Channel on page 134** to make sure it is set to the correct control channel for which your cellular phone is programmed to use. The range of control channels for phones programmed to use the “A band” is 313-333. The range of control channels for phones programmed to use the “B band” is 334-354.
- ❑ Check the antenna connection on the cellular phone. The cellular phone’s antenna should be connected to the test set RF IN/OUT connector and not to the DUPLEX OUT connector.
- ❑ Check that the cellular phone is on frequency with the test set’s timebase.

The test set Option 001 High-Stability Timebase is recommended for cellular phone testing.

If your test set is equipped with Option 001, use a frequency counter to ensure that the High-Stability timebase is on frequency.

## If the cellular phone registers, but won't page

- Check the cellular phone to see if it is the type with all zeros in its Mobile Identification Number (MIN). In some cases, new cellular phones have not been programmed with a MIN number.

If it is, set **parameter 41. ZA MIN From?** [0=RECC,1=all 0's,2=Phone #] **on page 162** number to **1** (for yes).

## If the cellular phone fails the audio tests

- Check the specifications for the cellular phone to make sure they match with those entered in the HP 11807A,E software Pass/Fail Limits.

Select **Pass/Fail Limits** from the **Customize Test Procedure** list (or **Edit Spec** from the **Test Function** field), and note the limits that have been entered for the corresponding audio specifications.

- Check the audio connections from the cellular phone to the test set. Refer to **"Making a Connection" on page 27** to view the interconnection diagram for details.
- Check the cellular phone to make sure the microphone is not active. (Mute the microphone input).

For a handset type phone, make sure the handset is on the "hook".

For a handheld type phone, make sure the handheld is muted

- Check the cellular phone to see if the audio lines carry other signals.

For example, if the audio lines carry other dc signals, a blocking capacitor in series with the test set is required.

## If a cellular phone links up with a system, not the test set

- Check to see if the testing area is in the proximity of a cell site.

Corrective action:

Raise the signal level of **parameter 19. RX RF Level for Signaling** to overpower the external cell-site signal.

- Check to see if the cellular phone's antenna connector is connected to the test set RF IN/OUT connector.

Corrective action:

Connect a cable from the cellular phone to the test set RF IN/OUT connector.

---

## Glossary

**CANCEL** A key used to pause (stop) the IBASIC program running in the test set.

**card** Refers to the memory card containing the procedures for testing the unit-under-test.

**Choices** Refers to a field in the lower right of the screen that displays several possible functions for selection.

**Continue** Proceed with the IBASIC software program if it has been stopped (paused).

**cursor** Refers to the brightened region of the screen used to indicate the field/function currently being accessed.

**Del Step** A function to delete a step in the procedure.

**Disp Loc** A menu function which presents an assembly diagram that displays location of the adjustable component.

**ESD** ElectroStatic Discharge - A transfer of electric charge from one place to another. Devices can be damaged by the energy transferred during the discharge.

**field** An area on the CRT with an inverse video display (**example**) where entries can be made.

**function** Refers to a particular field, feature, or operation of the test set.

**Help** A feature providing specific information about how to use the current screen in the TESTS environment. This feature is accessed by pressing k4 (**Help**) from any TEST screen. Note: only available in the HP 8920B and HP 8920A,D firmware above revision A.14.00.

**HELP** A feature providing additional test set information accessed by pressing SHIFT, then TX (HELP) keys. Help topics are listed in alphabetical order.

**highlight** Refers to the brightened region (cursor) of the screen used to indicate the field/function currently being accessed.

**IBASIC** Instrument BASIC is the computer language (code or software) used by the test set's built-in controller. The IBASIC software is downloaded from the OTP CARD into the test set's RAM. This software is then used to control the test set during autotesting the unit-under-test.

---

## Glossary

**initialize** A card or disk must be formatted prior to storing data. This may be done by pressing k3 (**Init Card**) on the TESTS (Save/Delete Procedure) screen. The default for PCMCIA cards (HP 11807E) is DOS format, and for Epson Cards (HP 11807A,B) is LIF format. See *"Memory Cards" on page 216* for information on changing these default settings.

**key (USER keys)** Keys refer to any of the push buttons on the front panel of the test set. The USER keys are a specific grouping of keys labeled k1 to k5 which perform the associated numbered function in the action field located in the upper right of the screen. The USER keys are user programmable.

**knob** The large tuning dial for cursor control located in the center of the test set front panel. This knob is rotated to position the cursor on the screen and then pressed to select the particular field or function.

**library** A collection of the names of all of the parameters, pass/fail limits, and tests in the test software. The test software and the test set's firmware use the library, test software program code file, and a procedure to run a customized application program. A library is stored as a file on a memory card or other mass storage with its associated procedure files.

**Location** Where to retrieve or save

a particular testing procedure, for example, to a disk, card, RAM, or PC.

**measurement** A series of calculations on data measured by the test set. These calculations provide a value to be compared against pass/fail limit values that verify the performance of the unit-under-test.

**Main Menu** The screen accessed by pressing the TESTS key, or k5 (**Main Menu**). It is used to customize and execute (run) automated testing.

Also referred to as the "TESTS" screen.

**menu** The test set's screen displays various tasks to be selected with the cursor control knob or the USER keys; this display is the menu.

**message** The upper portion of the test set's screen is reserved for messages and prompts. Messages give an indication of the status of the test set, for example, **System initialization**.

**OTP** One Time Programmable (OTP) refers to a CARD on which code or data may only be stored once; similar to ROM. The HP 11807A/E software is shipped on an OTP memory card.

**parameters** Entries you make for calibration data, phone characteristics, or test customization. They give you flexibility in the way you use the software. Default values for parameters are present in the software.

**pass/fail limits** Pass/fail limits are the names of criteria verifying the performance of the unit-under-test. Usually, the associated measurement value must fall within the HI/LO limits of pass/fail values to verify performance of the unit-under-test. Default values in the test software have been derived from standard methods of measurement or from the unit-under-test requirements.

**pause** Using the CANCEL key pauses the running of IBASIC software in the test set and allows access to the keyboard functions. CONTINUE allows the software to proceed.

**peak+/- max** A detector in the test set that measures and computes the maximum of the absolute value of the positive and negative excursions of the measurement. For example, when an FM waveform with a +10 kHz and -9 kHz deviation is applied, 10 kHz will be displayed.

**PRESET** Sets the test set to its initial power-up state.

**procedure** A shortened label for test

procedure. A procedure is a collection of channels, parameters, pass/fail limits, and testing order, saved in a file, that customizes the test software to a specific application. Procedures are made by editing existing channels, parameters, pass/fail limits, and testing order, and saving the resulting files to a memory card, disk or internal test set RAM.

**prompts** The upper portion of the test set (inverse video field) is reserved for prompts and messages. The prompt directs the user to take some action. Messages give an indication of the status of the test set.

**RAM** Random Access Memory - The memory in the test set that is used to store program code and data. The test set's RAM is battery-backed-up, retaining data and program codes when the power is turned off.

**ROM** Read Only Memory

**Run Test** Directs the test set to load the program from the current procedure and begin testing (may take up to two minutes).

**save** Save and store are used synonymously and refer to putting data or software on some memory device, such as, card or RAM.

**screen** Refers to the video display of the test set.



---

## Glossary

**select** To choose a particular field or function. Rotate the CURSOR CONTROL knob and position the highlighted cursor on the chosen field or function, then press the knob. An alternative method is to press the numbered USER key having the same number as displayed alongside the desired function.

**softkey** The name of the set of keys next to the CRT display that can be assigned to certain special actions or fields. The keys are also called USER keys.

**SRAM** Static Random Access Memory - A data storage device. SRAM memory cards can be used with the test set to save programs and test results.

**Step#** Orders the sequence of tests, e.g. Step #1 may be Test\_5, and Step #2 may be Test\_26 and so on.

**store** Store and save are used synonymously and refer to putting data or software on some memory device, such as card, RAM.

**tests** Tests are a collection of measurements (or a series of other tests) which verify a particular specification value or operation of the UUT. A sequence of tests are contained in a test procedure.

**TESTS screen** The screen accessed by pressing the TESTS key. It is used

to customize and execute (run) all automated testing. Also referred to as the "Main Menu".

**USER keys** A group of keys located immediately to the right of the test set's screen that allow the user to more rapidly select certain functions without rotating and pressing the knob. These key assignments are displayed in the upper right portion of the test set's screen. The number on the left of the function corresponds to the number on the user key k1 to k5.

**values** The scalar quantities or numbers inserted in the inverse video fields of the pass/fail limits or parameters. Units of measure (dB, inches, volts, watts, etc.) are contained in the pass/fail limits and test parameters.

## Numerics

1-800 help line, [20](#)

## A

AA Enter Ph#?  
parameter description, [131](#)  
additional services available, [20](#)  
AdvanceLink, [205](#)  
all zero MIN number, [162](#)  
antenna  
connection on the phone, [273](#)  
Area Identification Number (AID)  
test parameter, [133](#)  
ASCII file type, [200](#)  
attenuator loss, [16](#)  
attenuators  
connected to test set, [138](#)  
audio connections  
from the cellular phone, [275](#)  
audio distortion  
pass/fail limit, [167](#), [174](#)  
audio distortion test  
for receiver, [113](#)  
for transmitter, [99](#)  
audio frequency response test  
for receiver, [111](#)  
for transmitter, [97](#)  
audio level  
setting it, [150](#)  
audio lines  
carry other dc signals, [275](#)  
audio output flatness, [97](#)  
audio power  
rated, [149](#)  
audio response deviation  
pass/fail limit, [168](#), [175](#)  
audio response frequencies  
test parameters, [143](#), [151](#)  
audio tests  
if the cellular phone fails, [275](#)  
Autostart, [86](#)  
Autostart Test Procedure on Power-Up,  
[262](#)

## B

bandpass filter (BPF)  
6 kHz option, [102](#)  
Bandpass, 6 kHz, filter, [16](#)  
BCH error detection, [92](#)  
BDAT file type, [200](#)  
Binary-Weighted Decimal (BWD),  
[152](#), [154](#)

## C

- cable loss
  - for pads and cables, 16
- CANCEL, 230, 277
- capacitor
  - dc blocking, 275
- card
  - how to insert, 26, 60
- carrier power at levels 0-7
  - pass/fail limit, 176
- carrier power test
  - for transmitter, 95
- CAT IBASIC command, 196
- CCITT filter, 113
- cell site release, 118
- cell-site signal
  - to overpower the external, 276
- cellular phone
  - antenna connection on the, 273
  - audio connections, 275
  - audio tests, 275
  - can't link up with test set, 276
  - MIN number, 274
  - registers, but won't page, 274
  - won't roam if its off frequency, 273
- Changing the Order of Tests, 32
- channel information
  - general description, 36
  - securing, 252
- channel numbers
  - specifying information, 36, 71
- chng chan
  - on flowchart, 124
- chng pwr
  - on flowchart, 124
- chng sat
  - on flowchart, 124
- Choices, 194, 277
- choose, 195
- Class III and IV radios, 95
- clear ls
  - on flowchart, 124
- clear ms
  - on flowchart, 124
- Clr Scr, 263
- C-Message filter, 16, 113
- compandor is always on
  - test parameter, 137
- compressor
  - zero reference deviation, 106
- compressor levels
  - test parameters, 153
- compressor response test
  - for transmitter, 106
- compressor tracking error
  - pass/fail limit, 179
- compressor zero-reference deviation
  - pass/fail limit, 180
- configuration
  - for data collection, 199
  - for terminal or PC operation, 208
- CONFIGURE screen
  - for printer, 269
- configuring an IBM-compatible PC
  - with HP AdvanceLink, 205
- connecting
  - the radio, 26, 60
- connecting a printer, 233
- connections
  - parallel printer, 235
  - RJ-11 connector, 233
  - serial printer, 233
- Continue, 263, 277
- Continue USER key, 230
- continuing a paused program, 230
- control channel
  - test parameter, 134
- conventions used, 194
- COPY IBASIC command, 196
- COPY\_PL program, 268
- copying files, 196
- current drain at levels 0-3
  - pass/fail limit, 181
- current drain at levels 4-7
  - pass/fail limit, 182
- current drain levels tested
  - test parameter, 154
- current drain test
  - for transmitter, 108
- current measurement, 16
- current-measuring circuit, 108
- cursor, 277
- customizing testing, 30, 65

## D

data collection  
description, 198  
entering the configuration for, 199  
example configuration, 200  
memory card part numbers, 218  
retrieving data, 203, 212, 223  
saving to a memory card or disk, 199  
to a PC, 205  
to a PC, setting up, 207  
dc blocking capacitor, 275  
DC Current Measurement connectors,  
16  
de-emphasis  
test parameter, 155  
de-emphasis curve, 111, 168  
Del Proc, 263  
Delet Stp, 263, 277  
deleting a procedure, 251  
disk  
initializing, 211  
initializing a RAM disk, 254  
retrieving data from, 212  
disk drive  
External Disk Specification, 248  
disk formats, LIF and DOS, 200  
distortion  
audio, 99  
distortion and noise, 115  
distortion, audio  
pass/fail limit, 174  
Done, 263  
DOS disk format, 200  
DOS file type, 200  
DTMF frequency error  
pass/fail limit, 183  
DTMF frequency error test  
for transmitter, 128  
DUPLEX OUT  
connector, 273

## E

Edit Configuration  
data collection to a PC, 207  
Edit Frequency, 36, 71  
Edit Parameter, 46, 80  
Edit Sequence, 67  
Edit Spec, 228  
Edit Specifications, 43, 77  
enter, 195  
ENTER key, 194  
error  
Improper context terminator, 268  
improper context terminator, 267  
Structures improperly matched, 268  
structures improperly matched, 267  
errors  
from hardware problems, 266  
from IBASIC, 266  
from operating HP 8920A, 266  
on MESSAGE screen, 266  
escape sequences, 238  
rev B software with fw below  
A.14.00, 243  
exiting a program, 214  
expander  
zero reference level, 109  
expander levels  
test parameters, 144  
expander test  
for receiver, 109  
expander tracking error  
pass/fail limit, 169  
expander zero-reference level  
pass/fail limit, 170  
external pad and cable loss  
test parameter, 138

## F

Factory Hot Line, 20  
field, 277  
selecting a, 194  
file name  
disk example, 212  
file types, ASCII, BDAT, DOS, and  
HP-UX, 200  
files  
copying, 196  
filter  
6 kHz Bandpass, 16  
C-Message, 16  
flash  
memory cards, 217  
flow-chart test, 123  
FM hum and noise  
pass/fail limit, 184  
FM hum and noise test  
for transmitter, 101  
Forward Voice Channel (FVC), 92  
Forward Voice Control (FVC)  
order message, 172  
frequency  
editing values, 36, 71  
general description, 71  
frequency counter  
to put timebase on frequency, 273  
frequency deviation step frequency  
test parameter, 156  
frequency deviation test  
for transmitter, 96  
frequency error  
pass/fail limit, 185  
frequency error test  
for transmitter, 94  
front-panel control characters, 208  
FVC message error rate RF level  
test parameter, 145  
FVC Order Message error rate test  
for receiver, 117

## H

- handoffs, [123](#)
- handset
  - type of phone, [275](#)
- hardware configurations, [16](#)
- hardware errors, [266](#)
- harmonic distortion, [167](#)
- Help, [263](#)
- high-pass filter, [157](#)
- High-Stability timebase
  - for cellular radio testing, [273](#)
  - use a frequency counter, [273](#)
- high-supply voltage
  - test parameter, [139](#)
- hook flash
  - on flowchart, [124](#)
- hook flash test, [126](#)
- hook flashes, [123](#)
- HP-IB
  - power supply, [16](#)
- HP-IB control annunciators, [215](#)
- HP-IB printer, [236](#), [269](#)
- HP-IB printer connections, [233](#)
- HP-UX file type, [200](#)
- hum and noise
  - pass/fail limit, [171](#)
- hum and noise test
  - for receiver, [114](#)
  - for transmitter, [101](#)

## I

- IBASIC, [277](#)
  - copying files, [196](#)
  - initializing a disk, [211](#)
  - retrieving data from a card, [203](#), [224](#)
  - retrieving data from a disk, [212](#)
  - TESTS screen, [30](#), [65](#)
- IBASIC commands
  - entering from a terminal, [196](#)
- IBASIC errors, [266](#)
- If Unit-Under-Test Fails, [262](#)
- If Unit-Under-Test-Fails, [52](#)
- If UUT Fails, [262](#)
- Improper context terminator
  - error, [268](#)
- improper context terminator
  - error, [267](#)
- industry standards
  - for Option 005, [90](#)
- Init Card, [263](#)
- initializing, [278](#)
  - RAM disk, [254](#)
- initializing a disk, [211](#)
- initializing an SRAM memory card,
  - [221](#)
- Insrt Stp, [263](#)

## L

- library, [278](#)
  - definition, [48](#), [82](#)
  - saving, [48](#), [82](#), [247](#)
- LIF disk format, [200](#)
- loading a procedure, [250](#)
- loading software, [26](#), [60](#)
- loading software upgrade, [62](#)
- Location, [64](#), [278](#)
- low-supply voltage
  - test parameter, [140](#)

## M

Main Menu, [263](#), [278](#)  
maintenance mode, [100](#)  
maintenance  
  on flowchart, [124](#)  
Manchester-encoded data, [103](#)  
measurement, [278](#)  
memory card, [277](#)  
memory cards  
  are used for, [216](#)  
  determining whether it is OTP, flash,  
  or SRAM, [217](#)  
  flash, [217](#)  
  how they're powered, [216](#)  
  initializing, [221](#)  
  inserting, [216](#)  
  OTP, [14](#), [217](#)  
  removing, [217](#)  
  retrieving data from, [203](#), [223](#)  
  saving data to, [198](#)  
  software, [26](#), [60](#)  
  SRAM, [14](#), [217](#)  
  SRAM battery part number, [218](#)  
  Static Random Access Memory  
  (SRAM), [218](#)  
  storage space needed, [220](#)  
  write protect switch, [219](#)  
MESSAGE screen errors, [266](#)  
microphone  
  affected by noise, [102](#)  
  make sure it's not active, [275](#)  
mobile identification number, [274](#)  
Mobile Identification Number (MIN),  
  [162](#)  
modulation deviation limit 50 Hz HPF  
  test parameter, [157](#)  
modulation distortion, [174](#)

## N

NAM  
  Number Assignment Module, [91](#)  
No, [263](#)  
no audio functional tests, [120](#)  
NO SERVICE lite, [119](#)  
noise  
  into an open microphone, [102](#)  
noise and distortion, [115](#)  
nominal-supply voltage  
  test parameter, [141](#)  
non-return to zero (NRZ), [103](#)

## O

OMER  
  pass/fail limit, [172](#)  
On UUT Failure, [86](#)  
operating errors, [266](#)  
Optional RAM message, [268](#)  
order message, [135](#)  
order message error rate  
  pass/fail limit, [172](#)  
order of tests  
  printing, [231](#)  
  saving, [248](#)  
order-confirmation message, [135](#)  
order-message error-rate test, [117](#)  
origination message, [135](#)  
origination test  
  call processing, [119](#)  
OTP  
  memory cards, [217](#)  
OTP card, [278](#)  
OTP memory cards, [14](#)  
Output Destination, [86](#), [261](#)  
Output Heading, [52](#), [86](#), [262](#)  
output power levels tested  
  test parameter, [152](#)  
output power test, [95](#)  
Output Results, [86](#), [261](#)  
Output Results For, [52](#), [261](#)  
Output Results To, [52](#), [261](#)

## P

- Page Down, [263](#)
- Page field, [123](#)
- page test, [92](#)
- Page Up, [263](#)
- page-response message, [135](#)
- paging
  - and access channels, [103](#)
- parallel printer connections, [235](#)
- parameters, [279](#)
  - editing values, [46](#), [80](#), [226](#)
  - general description, [46](#), [80](#), [226](#)
  - printing, [231](#)
  - saving, [48](#), [82](#), [226](#), [248](#)
  - securing, [252](#)
- part numbers
  - memory card battery, [218](#)
  - SRAM Memory Cards, [218](#)
- pass number, [252](#)
- pass/fail limits, [279](#)
  - default values, [166](#)
  - descriptions, [166](#)
  - editing values, [43](#), [77](#), [229](#)
  - general description, [43](#), [77](#), [228](#)
  - printing, [231](#)
  - saving, [228](#), [248](#)
  - securing, [252](#)
- pause, [279](#)
- pausing a test, [230](#)
- PC
  - collecting data to, [205](#)
- peak frequency deviation
  - pass/fail limit, [186](#)
- peak frequency deviation test
  - for transmitter, [96](#)
- phone
  - registers, but won't page, [274](#)
  - antenna connection on the, [273](#)
  - audio connections, [275](#)
  - audio tests, [275](#)
  - can't link up with test set, [276](#)
  - MIN number, [274](#)
    - won't roam if its off frequency, [273](#)
  - phone number, [91](#)
    - how to enter, [131](#)
  - phone paging, [123](#)
  - phone registration, [123](#)
  - power class, [91](#)
  - power measurement
    - units for measuring RF power, [160](#)
  - power supplies, [16](#)
  - power-level changes, [123](#)
  - power-supply current, [108](#)
  - predistortion, [106](#), [109](#)
  - pre-emphasis curve, [175](#)
  - pre-emphasis slope, [97](#)
  - PRESET, [26](#), [60](#), [279](#)
  - print options
    - pitch, margins, paper size, typeface, [238](#), [243](#)
  - printer
    - does not print, [269](#)
    - HP-IB, [236](#)
    - HP-IB or serial, [269](#)
    - output heading, [262](#)
    - serial, [236](#)
  - printers supported, [232](#)
  - printing, [231](#)
    - test results, [261](#)
    - test results using firmware above revision A.14.00, [237](#)
    - test results using firmware below revision A.14.00, [243](#)
    - TESTS Screens, [240](#), [246](#)
    - using A.xx.xx revision software, [236](#)
  - Procedure, [64](#)
  - procedure, [279](#)
    - deleting, [251](#)
    - general description, [48](#), [82](#), [247](#)
    - loading into test set memory, [250](#)
    - names, [247](#)
    - saving, [48](#), [82](#), [248](#)
    - securing, [252](#)
    - un-securing, [253](#)
    - what is saved, [247](#)
  - program
    - exiting a program, [214](#)
    - incorrectly loaded, [268](#)
    - stored in test set memory, [217](#)
  - programmable power supplies, [16](#)

---

## Q

quick general tests  
  for receiver, [122](#)  
  for transmitter, [121](#)

## R

radio  
  connecting, [26, 60](#)  
RAM, [279](#)  
  disk, [254](#)  
  initializing, [254](#)  
  memory expansion, [16](#)  
RAM memory  
  enough for the test set, [268](#)  
REC=  
  default entry, [201](#)  
  entering record number, [201](#)  
REC= to set record size, [201](#)  
RECC message, [119, 135](#)  
RECC RCV Data  
  test parameter, [135](#)  
receiver  
  quick general tests, [122](#)  
  receiver hum and noise, [114](#)  
  receiver sensitivity, [115](#)  
Regist field, [123](#)  
registration test, [91](#)  
release test  
  call processing, [118](#)  
retrieving data from a memory card,  
  [203](#)  
Reverse Control Channel (RECC), [92](#)  
Reverse Control Message, [92](#)  
RF level  
  for signaling, [111](#)  
RF level for signaling  
  test parameter, [146](#)  
RF level for signalling  
  parameter, [276](#)  
RF level for SINAD  
  test parameter, [147](#)  
RF level for SINAD, at extremes  
  test parameter, [148](#)  
RF power  
  units for measuring, [160](#)  
RF sensitivity, [173](#)  
RF signal level, [146](#)  
RJ-11 connectors, [258](#)  
rms detector, [100](#)

roam  
  if the phone won't, [273](#)  
ROAM lite  
  for origination, [119](#)  
ROM, [279](#)  
Run, [263](#)  
Run Mode, [86, 262](#)  
Run Test, [263, 279](#)  
  difference between Run and, [204, 224](#)  
running tests, [22](#)  
  overview, [24, 58](#)



## S

- SAT changes, 123
- SAT deviation
  - pass/fail limit, 187
- SAT frequency error, 125
  - pass/fail limit, 188
- SAT frequency error and Deviation test
  - for transmitter, 102
- SAT tone
  - test parameter, 136
- SAT tones, 102
- save, 279
- SAVE IBASIC command, 196
- Save Proc, 263
- SAVE registers lost, 268
- saving
  - procedure, 48, 82
  - test procedure, 48
  - test results, 198
- saving a procedure, 248
- SECURE IT ROM program, 252
- securing a procedure, 252
- select, 195, 280
- sensitivity
  - for the receiver, 115, 173
- sequence
  - changing, 32
  - editing, 67
  - general description, 32, 67
  - saving, 48, 82
- serial number, 91
- Serial Port, 258
- serial port connections
  - figure, 258
- serial printer, 236, 269
- serial printer connections, 233
- set audio level
  - test parameter, 149
- signaling tone (ST), 100
- signaling tone deviation
  - pass/fail limit, 189
- signaling tone frequency
  - pass/fail limit, 190
- signaling tone test
  - for transmitter, 100
- signaling, tone/digital, 16
- SINAD
  - pass/fail limit, 173
- SINAD test
  - for receiver, 115
- Sngl Step, 263
- softkey, 280
- softkeys, 263
- software
  - how to load, 64
  - loading, 26, 60
  - overview, 26, 59
  - stopping the, 230
  - software revision A.xx.xx
    - printer setup, 236
  - software upgrade
    - loading, 62
  - special display conventions used, 194
  - specifications
    - editing values, 43, 77
    - general description, 43, 77, 228
    - saving, 48, 82
  - specifying channel information
    - general description, 36, 71
- SRAM, 280
  - memory cards, 217, 218
- SRAM memory cards, 14
- standards
  - for Option 005, 90
  - TACS, 90
- steady-state frequency deviation, 96
- Stop Test, 263
- stopping a test, 230
- stopping the program
  - using Test Execution Conditions, 52, 86, 261
- Structures improperly matched
  - error, 268
- structures improperly matched
  - error, 267
- subscriber-unit
  - control functions, 103
- switch channels
  - test parameters, 158
  - switch channels test
    - for transmitter, 125
  - system ID, 91

## T

TACS standard, 90  
Take It, 263  
terminal emulator, 212  
  configuration, 208  
  DataStorm Technologies, Inc. Pro-Comm, 205  
  HP AdvanceLink, 205  
test at extreme settings  
  test parameter, 142  
Test Execution Conditions, 52, 86, 261  
Test Function  
  Edit Frequency, 71  
  Edit Parameter, 46, 80  
  Edit Sequence, 67  
  Edit Specifications, 43, 77  
  Procedure Manager, 48, 82  
Test Functions, 65  
test parameters  
  default values, 130  
  descriptions, 130  
  editing values, 226  
  general description, 226  
test procedure, 48  
  saving, 248  
Test Procedure Run Mode, 52, 262  
test procedures  
  don't run, 267  
  to load, 267  
test results  
  printing using firmware above revision A.14.00, 237  
  printing using firmware below revision A.14.00, 243  
  retrieving from a disk, 212  
  retrieving from a memory card, 203, 223  
  saving, 198  
  where sent, 261  
test time, 230  
testing order  
  securing, 252  
testresults

  output failures, 261  
tests, 280  
  entering a sequence of, 32, 67  
  environment and conditions, 46, 80  
  pausing or stopping, 230  
  running, 22  
TESTS (Pass/Fail Limits) screen  
  entering into, 229  
TESTS screen, 280  
timebase  
  High-Stability, 16  
tolerance for setting audio level  
  test parameter, 150  
tone/digital signaling, 16  
tracking error, 106, 109  
  pass/fail limit, 169  
transmission  
  continuous or discontinuous, 91  
transmitter  
  quick general tests, 121  
  transmitter current, 108  
  transmitter distortion, 174

## U

upgrade  
  loading software upgrade, 62  
use DUPLEX OUT & ANT IN  
  parameters, 164  
  user key, 194  
USER keys, 263, 280  
UUT phone number  
  how to enter, 131  
UUT volume level, 150

---

## V

voice channels  
  for handoff, [103](#)  
voltage for compressor zero crossing  
  test parameter, [161](#)  
volume level  
  on the UUT, [150](#)

## W

wideband data  
  displayed by flowchart, [123](#)  
wideband data deviation  
  pass/fail limit, [191](#)  
wideband data deviation test  
  for transmitter, [103](#)  
wideband data deviation transient  
  pass/fail limit, [192](#)  
wideband data stream, [135](#)

## Y

Yes, [263](#)

---

## Z

- ZA MIN From?
  - parameter description, [162](#)
- zero reference level
  - for expander, [109](#)