

GPIB Command Syntax

for

E1966A 1xEV-DO Terminal Test Application Revision A.03
E6706A Lab Application Revision A.01

1000-1905



Notice

Information contained in this document is subject to change without notice.

All Rights Reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

This material may be reproduced by or for the U.S. Government pursuant to the Copyright License under the clause at DFARS 52.227-7013 (APR 1988).

Agilent Technologies, Inc.
Learning Products Department
24001 E. Mission
Liberty Lake, WA 99019-9599
U.S.A.

| | |
|-----------------------|----|
| ABORt | 9 |
| AFGenerator | 10 |
| CALibration | 10 |
| CALCulate:SMONitor | 11 |
| CALL:APARAmeter | 12 |
| CALL:APPLiCation | 13 |
| CALL:AWGNoise | 14 |
| CALL:BAND | 14 |
| CALL:CCHannel | 14 |
| CALL:CCODE | 15 |
| CALL:CHANnel | 15 |
| CALL:CLPControl | 15 |
| CALL:CONNected | 15 |
| CALL:CONTRol | 16 |
| CALL:COUNT | 17 |
| CALL:COUNT:DTMonitor | 19 |
| CALL:DATA | 20 |
| CALL:DCONnected | 22 |
| CALL:DORMant | 22 |
| CALL:FUNCTion:DATA | 22 |
| CALL:HANDoff | 22 |
| CALL:IDLE:DATA? | 23 |
| CALL:MCCode | 23 |
| CALL:MS | 24 |
| CALL:OPERating:MODE | 25 |
| CALL:PARAmeter:SECTOR | 25 |
| CALL:PLOGging | 25 |
| CALL:PNOFfset | 26 |
| CALL:POWer | 26 |
| CALL:RFGenerator | 26 |
| CALL:SCLose | 26 |
| CALL:SETup | 27 |
| CALL:SOPen? | 27 |
| CALL:STATus | 28 |
| CALL:TEST856 | 30 |
| CALL:TOTAL:POWer | 30 |
| CALL:TRIGger | 31 |
| CALL:WAVEform | 31 |
| DISPlay | 31 |
| FETCH:AFANalyzer | 32 |
| FETCH:CAPPower | 33 |
| FETCH:GAPPower | 34 |
| FETCH:CPERror | 35 |
| FETCH:CPOWer | 35 |
| FETCH:CTDPower | 35 |

| | |
|--------------------------------|-----|
| FETCh:CTXSpurious | .36 |
| FETCh:DAPower | .36 |
| FETCh:DOWQuality | .37 |
| FETCh:SAUDio | .39 |
| FETCh:SMONitor | .40 |
| FETCh:TROPower | .41 |
| INITiate | .41 |
| READ | .43 |
| RFANalyzer | .44 |
| RFGenerator:OUTPut | .45 |
| SETup:CONTinuous | .46 |
| SETup:AFANalyzer | .46 |
| SETup:CAPPower | .48 |
| FETCh:GAPPower | .49 |
| SETup:CPError | .50 |
| SETup:CPOwer | .51 |
| SETup:CTDPower | .52 |
| SETup:CTXSpurious | .53 |
| SETup:DAPower | .54 |
| SETup:DOWQuality | .55 |
| SETup:SAUDio | .56 |
| SETup:SMONitor | .58 |
| SETup:TROPower | .60 |
| STATus:OPERation | .60 |
| STATus:PRESet | .61 |
| STATus:QUEStionable | .61 |
| Status Byte Register | .62 |
| Standard Event Status Register | .63 |
| SYSTem:APPLication | .64 |
| SYSTem:AUDio | .65 |
| SYSTem:BEEPer | .65 |
| SYSTem:COMMunicate | .65 |
| SYSTem:CONFigure | .66 |
| SYSTem:CORRection | .66 |
| SYSTem:CURRent:TA | .66 |
| SYSTem:DATE | .67 |
| SYSTem:ERRor? | .67 |
| SYSTem:FATal | .67 |
| SYSTem:MEASurement:RESet | .67 |
| SYSTem:PRESet | .67 |
| SYSTem:REGister | .67 |
| SYSTem:ROSCillator | .68 |

| | |
|----------------------------------|----|
| SYSTem:SYNChronized | 68 |
| SYSTem:TIME | 68 |
| SYSTem:TZONE | 68 |
| SYSTem:UTC | 68 |
| IEEE 488.2 Common Commands | 69 |

GPIB Syntax for E1966A and E6706A

Description

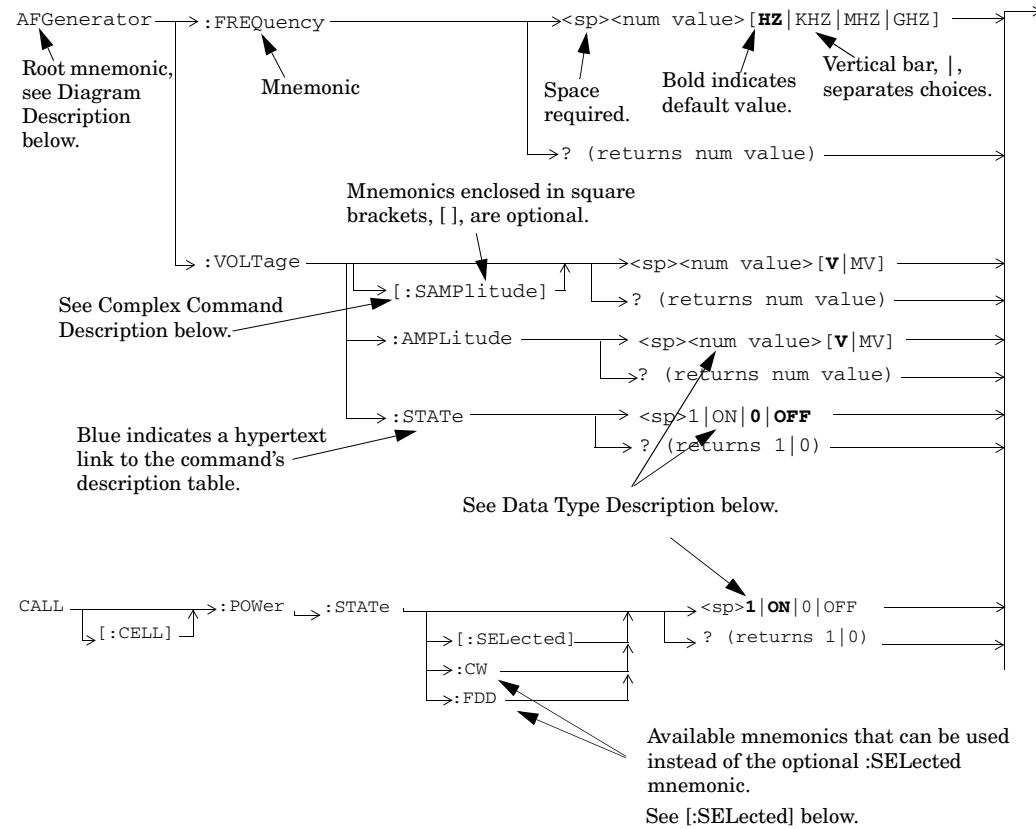


Diagram Description

Mnemonics are connected by lines. Each line can be followed in only one direction, as indicated by the arrow at the end of the line. Any combination of mnemonics that can be generated by starting at the root mnemonic and following the line in the direction of the arrow is syntactically correct.

The uppercase letters of a mnemonic represent the short form of the mnemonic, whereas the long form of a mnemonic is the short form followed by the lowercase letters. The test set accepts either the long form or the short form of the mnemonic. The mnemonics that are inside square brackets are optional. That is, a command operates the same whether or not the mnemonic in square brackets is used in the command.

The drawings show the proper use of spaces. Where spaces are required they are indicated by <sp>, otherwise no spaces are allowed between mnemonics.

Complex Command Description

Complex commands are valuable because they set the state of the parameter and a value for that parameter. For example, the command in the above figure that contains the mnemonic [:SAMplitude] is a complex command because sets the state to ON as well as the amplitude. You can use parameters such as amplitude, frequency, gain, number, time, and value as a complex command. Refer to the specific command for the parameter that applies.

Data Type Description

| | |
|-----------------------------|---|
| num value | Integer, float or scientific values. For example, CALL:POWer -55.5 CALL:POWer -5.55E+001 CALL:CHANnel 525 |
| string | Characters. The string will often need to be enclosed in single or double quotes, depending upon your programming environment. For example, CALL:UPLink:PRACHannel:ASUBchannels '111111111111' The string returned by the test set is enclosed by double quotes. |
| choice1 choice2 choice3 | Specific character choices. For example, CALL:OPERating:MODE D2KTest SYSTem:COMMunicate:GPIB:DEBug ON |

[:SElected] Mnemonic

The [:SElected] Mnemonic is an optional mnemonic that implies a current selection on the test set. Often there are other mnemonics that can be used in place of the [:SElected] mnemonic to configure a setting that is not the currently selected configuration on the test set. The mnemonics that can replace the [:SElected] mnemonic are listed in parentheses separated by vertical bars (|) in the description table title. An example of a command that contains the [:SElected] mnemonic is shown in the following table.

GPIB Syntax for E1966A and E6706A


CALL[:CELL]:POWER:AMPLitude[:SELEcted]

CALL[:CELL]:POWER:AMPLitude:(CWIFDD) ←

Available mnemonics that can be use instead of the optional [:SELEcted] mnemonic.


| | |
|----------|--|
| Function | Sets/queries the desired cell power level. (See “Cell Pow information about desired versus current power levels.) The optional [:SELEcted] keyword in this command spec queried applies to the current system type (see “CALL[:C settings for the CW operating mode are independent of operating modes. |
| Setting | Range: (This is the range of settings accepted, see “Cell I Ranges” for the actual hardware range of the source <ul style="list-style-type: none"> • FDD: -165 dBm/3.84MHz to +37 dBm/3.84MHz • CW: -177 dBm to +40 dBm |

ABORt

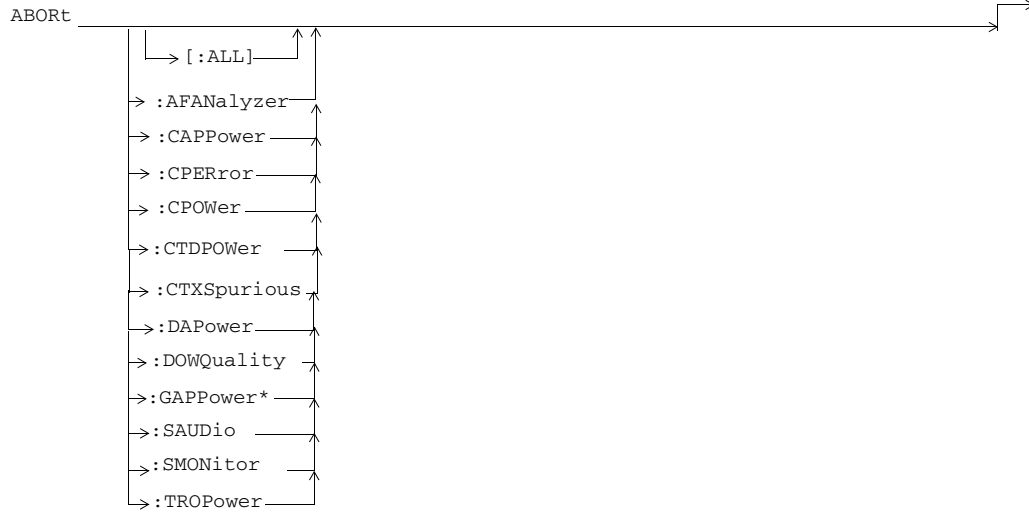


* This command is only applicable to the lab application.




AFGenerator

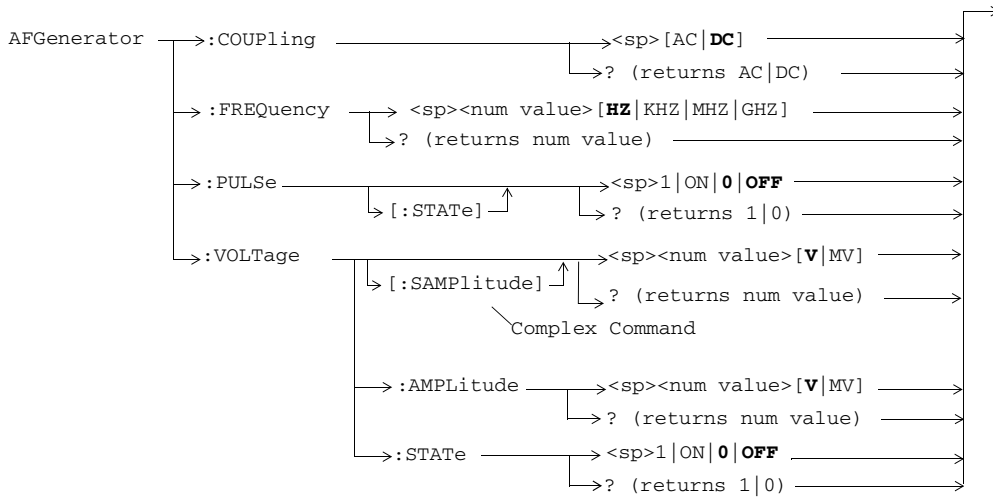

CALibration

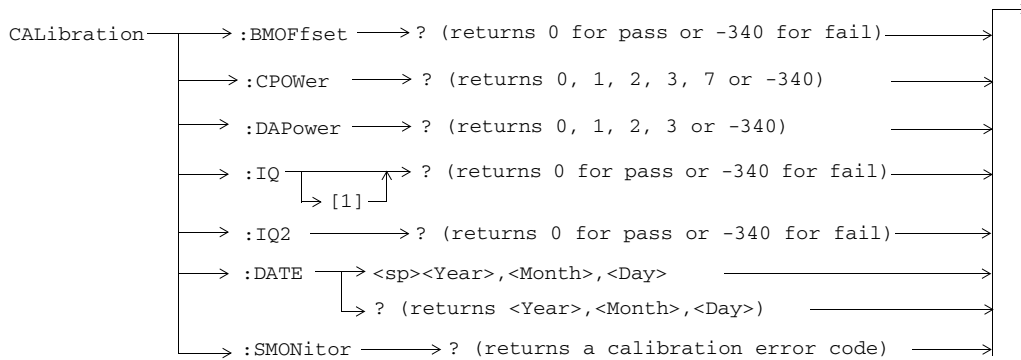


CALCulate:SMONitor

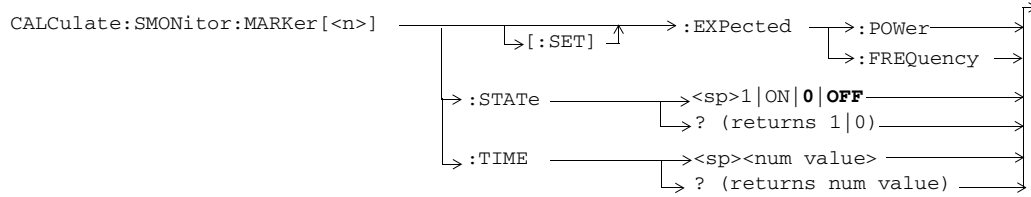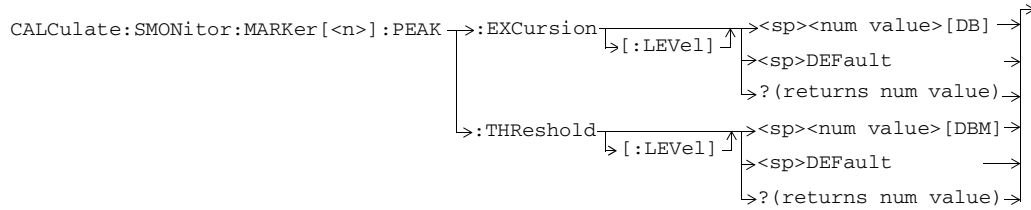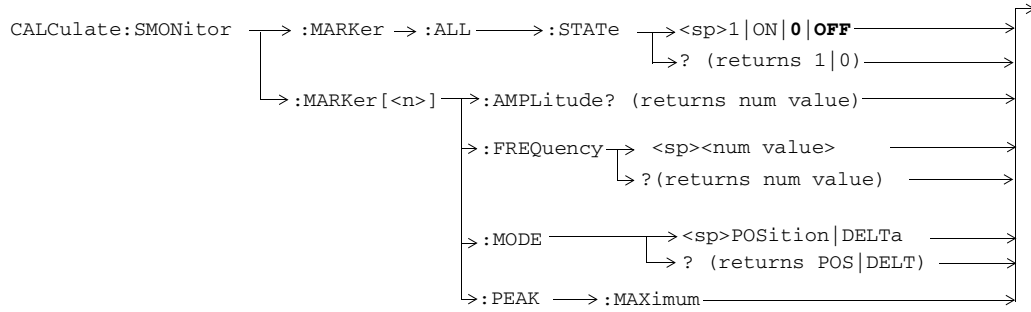

GPIB Syntax for E1966A and E6706A

CALL:APARAmeter

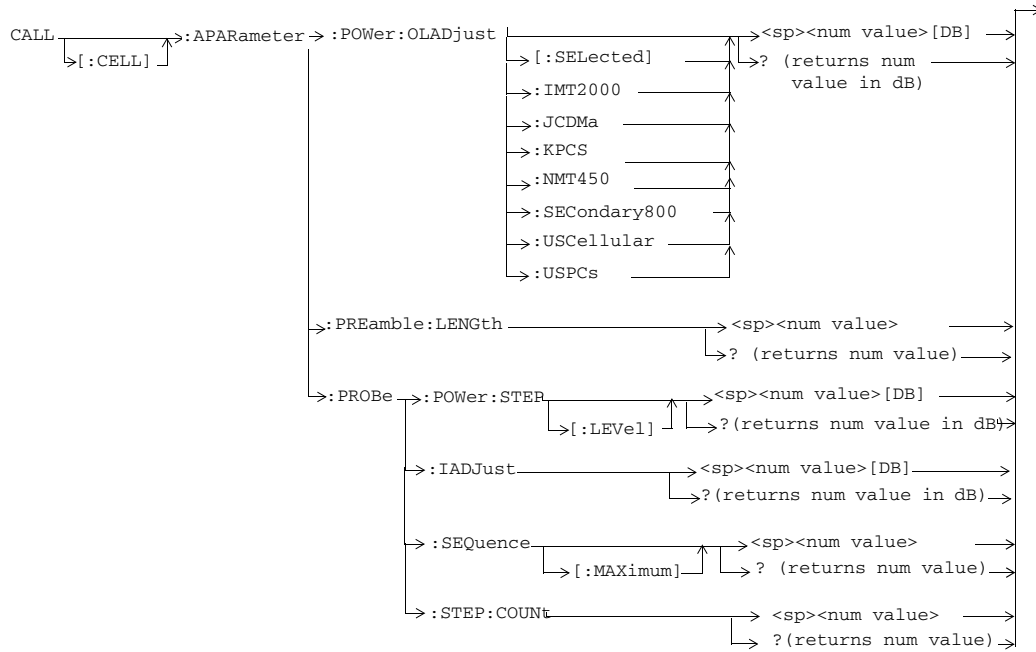


CALL:APPLication




* This command is only applicable to the lab application.


CALL:AWGNoise

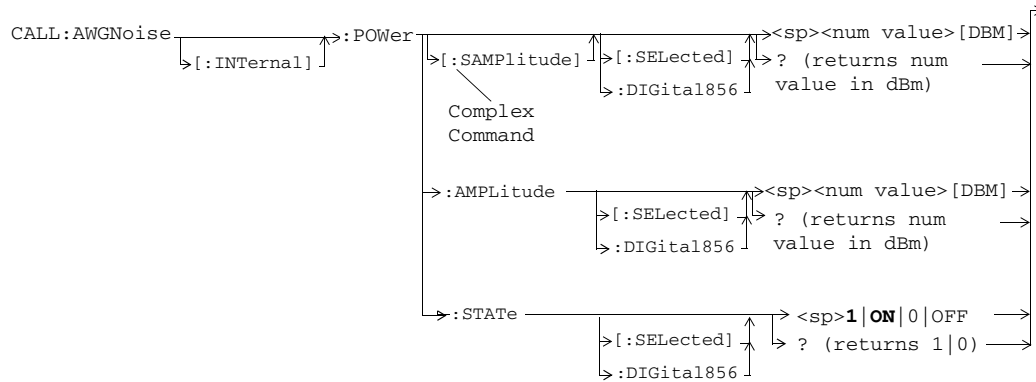

CALL:BAND

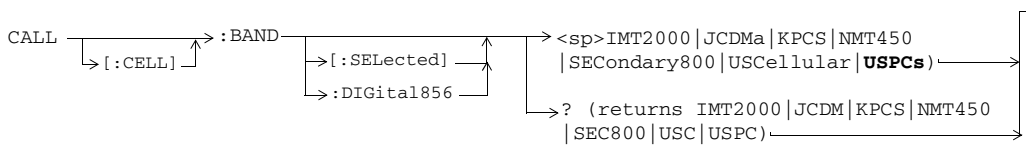


CALL:CCHannel

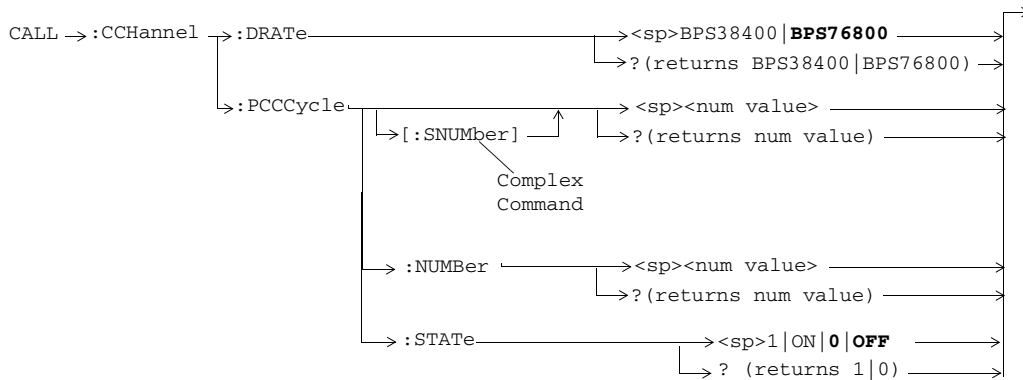


CALL:CCODE




CALL:CHANnel

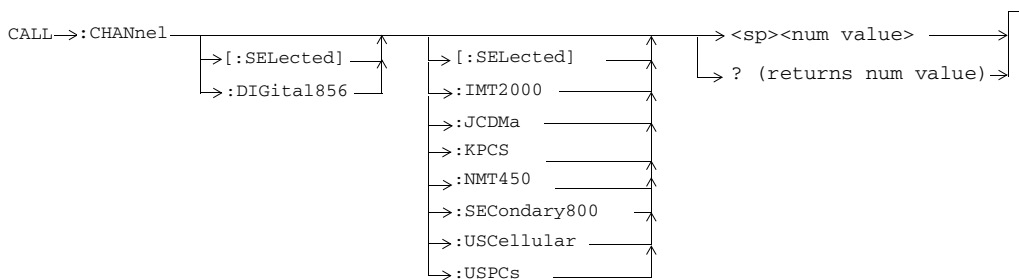


CALL:CLPControl

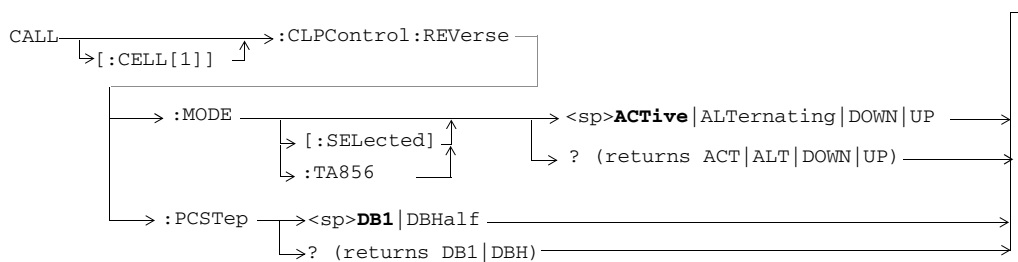

CALL:CONNected

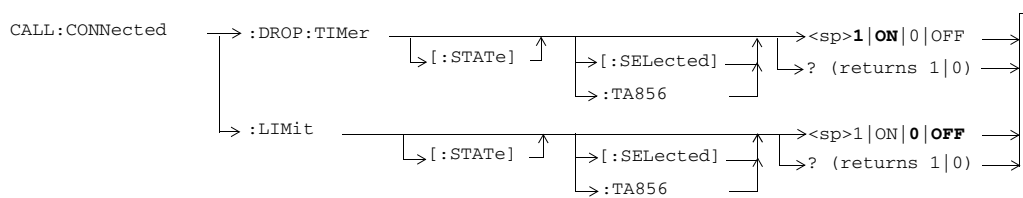


CALL:CONTRol

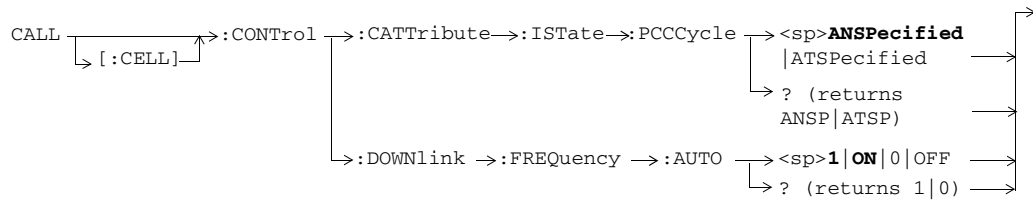


All commands shown in this diagram are only applicable to the Lab Application.

CALL:COUNT

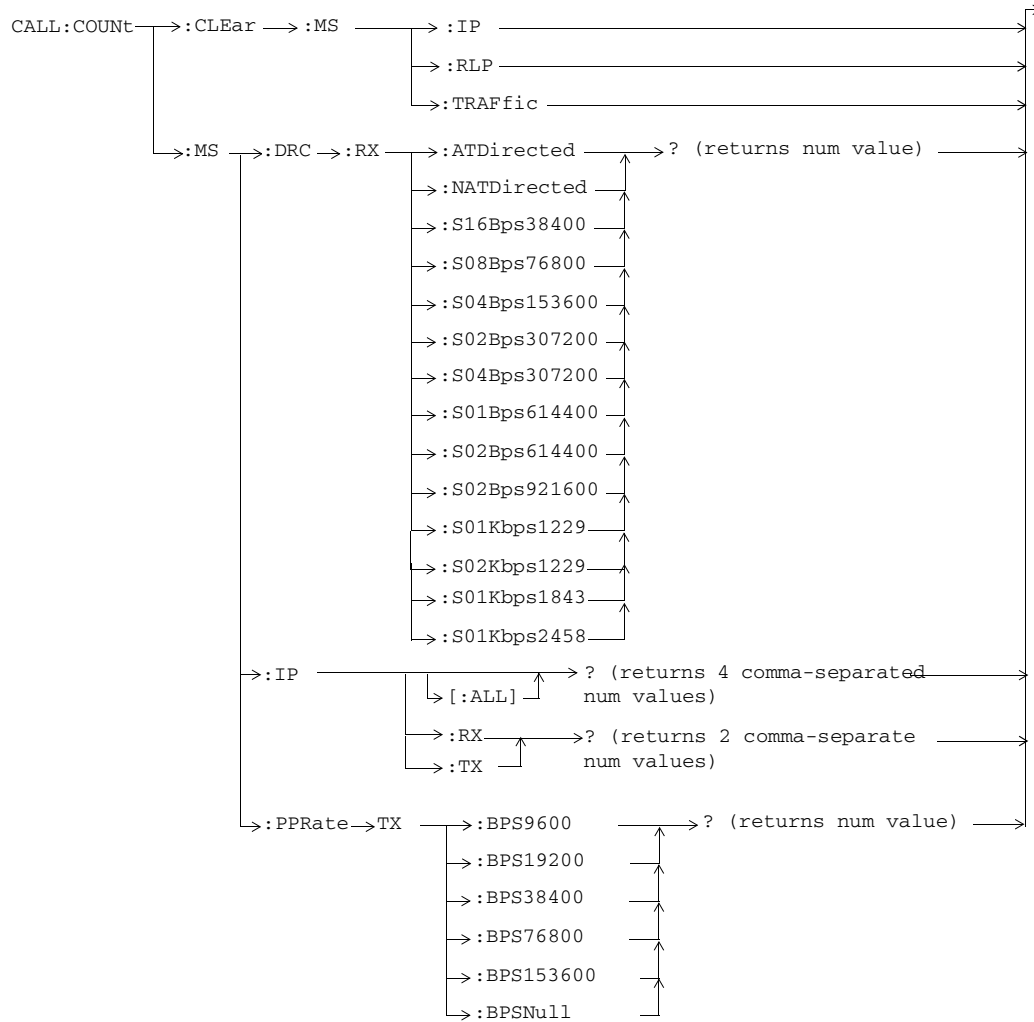


All of the commands shown in this diagram are only applicable to the lab application.

GPIB Syntax for E1966A and E6706A

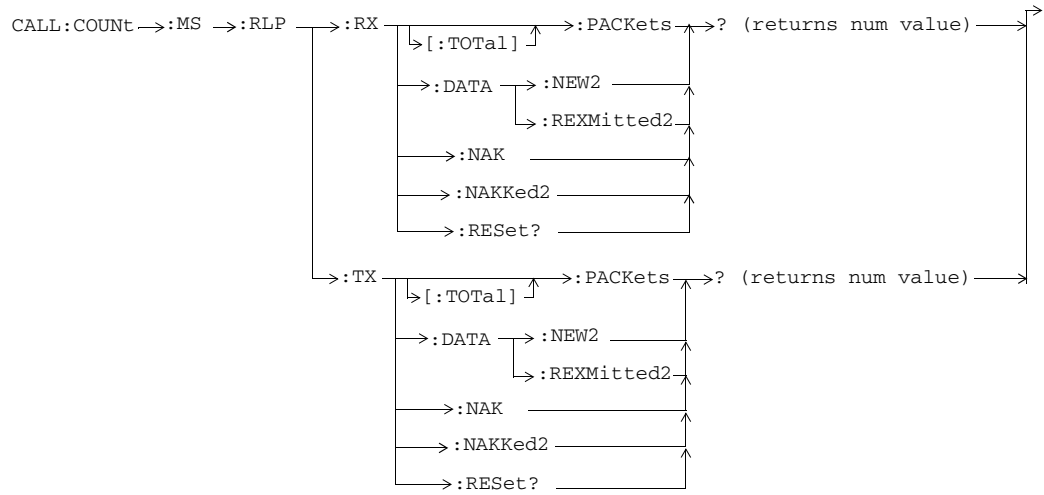

All of the commands shown in this diagram are only applicable to the lab application.


CALL:COUNT:DTMonitor

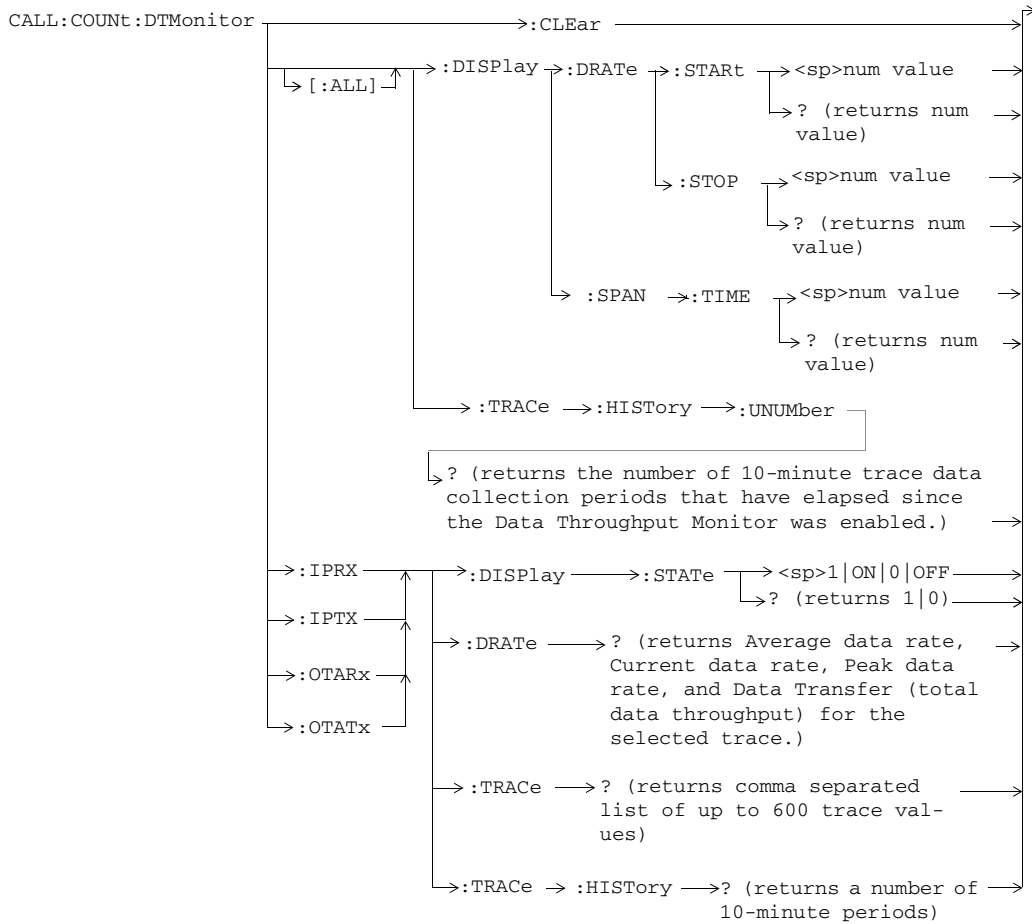

All commands shown in this diagram are only applicable to the lab application.


GPIB Syntax for E1966A and E6706A

CALL:DATA

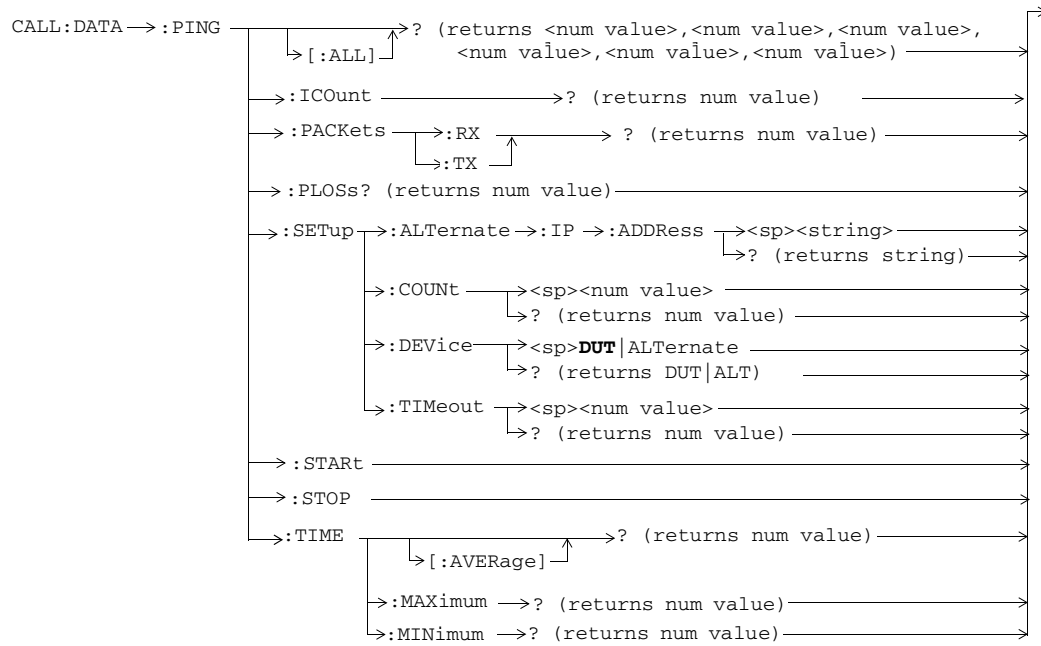


All commands shown in this diagram are only applicable to the lab application.

GPIB Syntax for E1966A and E6706A

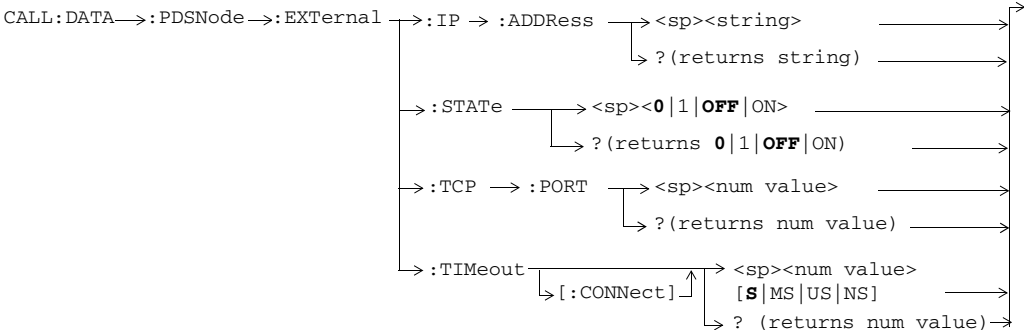


All commands shown in this diagram are only applicable to the lab application.

CALL:DCONnected

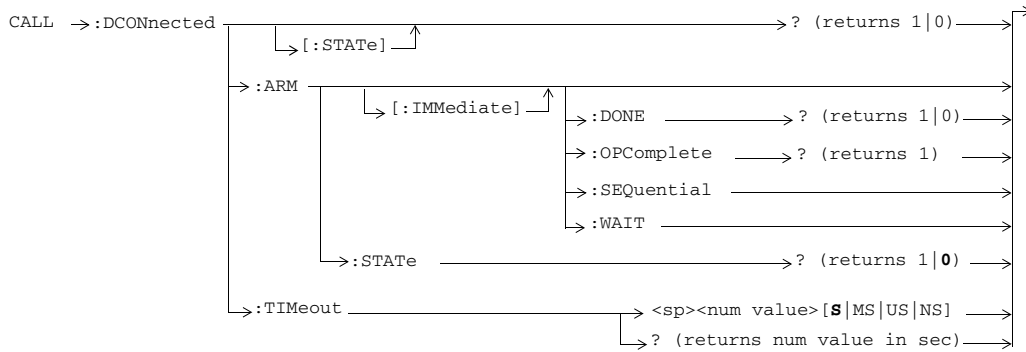


CALL:DORMant*

 


* This command is only applicable to the lab application.

CALL:FUNcTion:DATA

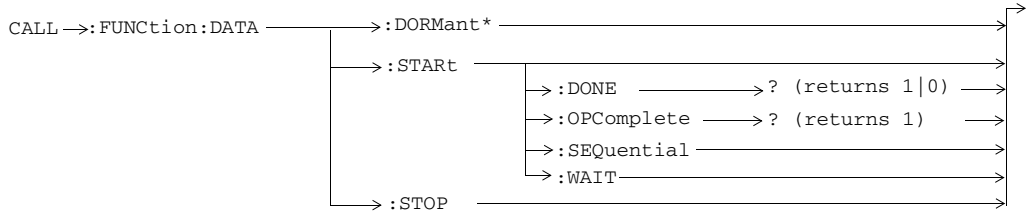


* This command is only applicable to the lab application.

 
CALL:HANDoff



CALL:IDLE:DATA?

 


CALL:MCCode

 


GPIB Syntax for E1966A and E6706A

CALL:MS

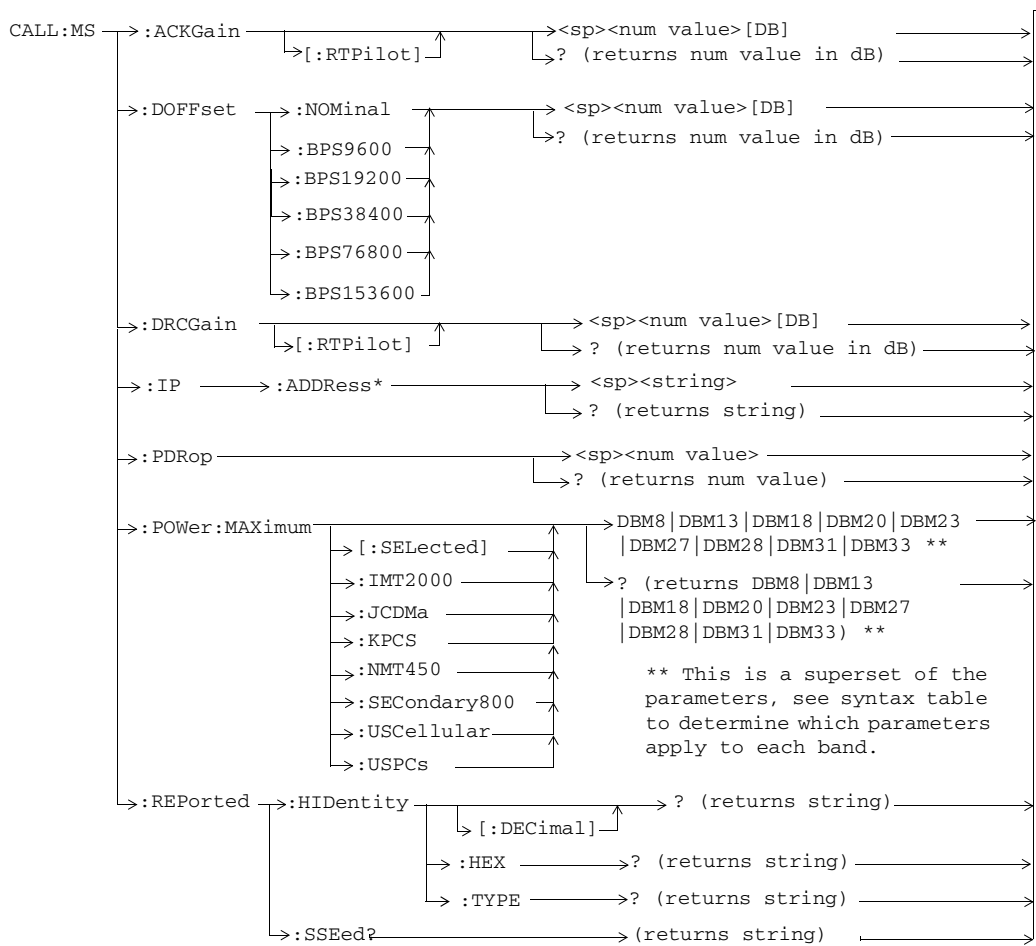


* These commands are only applicable to the lab application.

 CALL:OPERating:MODE




* This setting/query return is only applicable to the lab application.

CALL:PARAMeter:SECTor

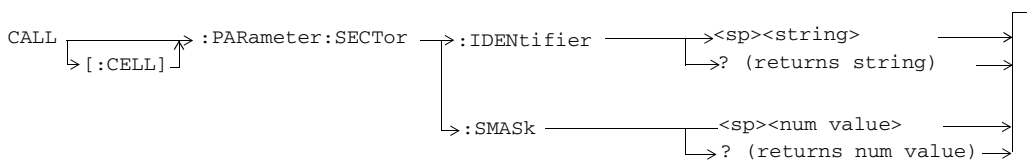


CALL:PLOGging

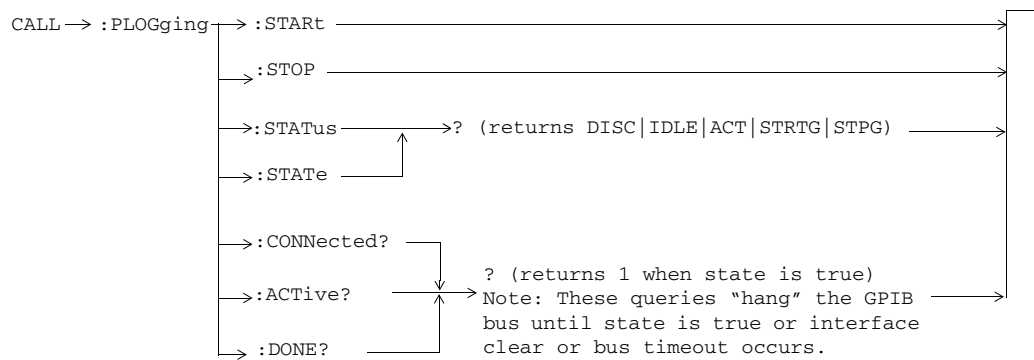


All commands shown in this diagram are only applicable to the lab application.

GPIB Syntax for E1966A and E6706A

 
CALL:PNOFfset




CALL:POWer

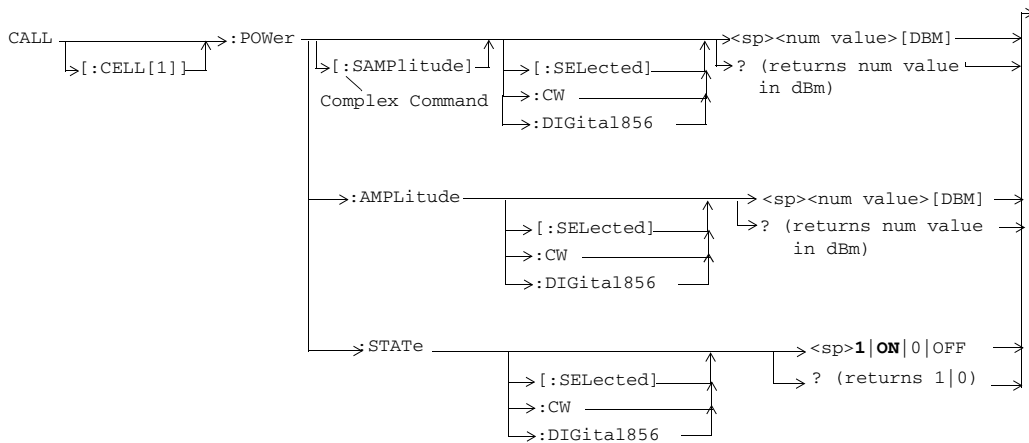


CALL:RFGenerator

 


CALL:SClose

 

CALL:SETup

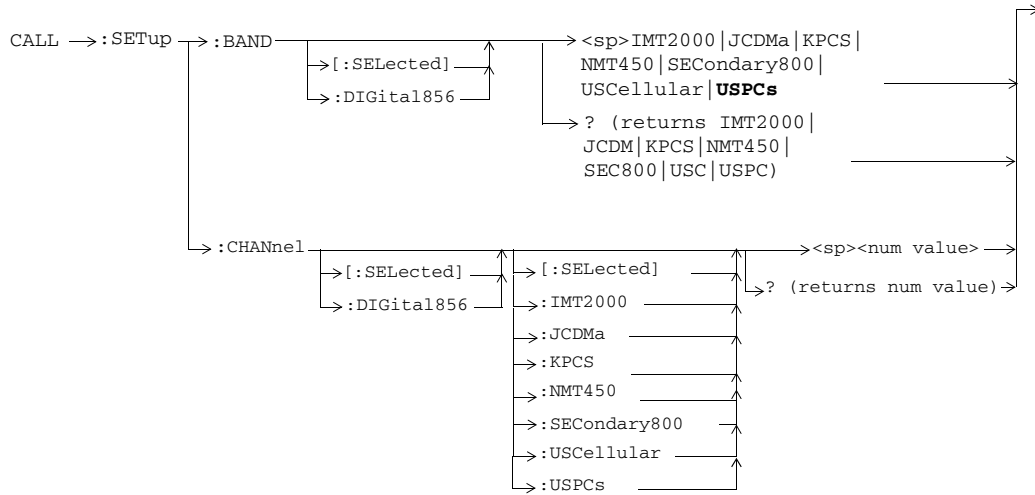


CALL:SOPen?

 


GPIB Syntax for E1966A and E6706A

CALL:STATus

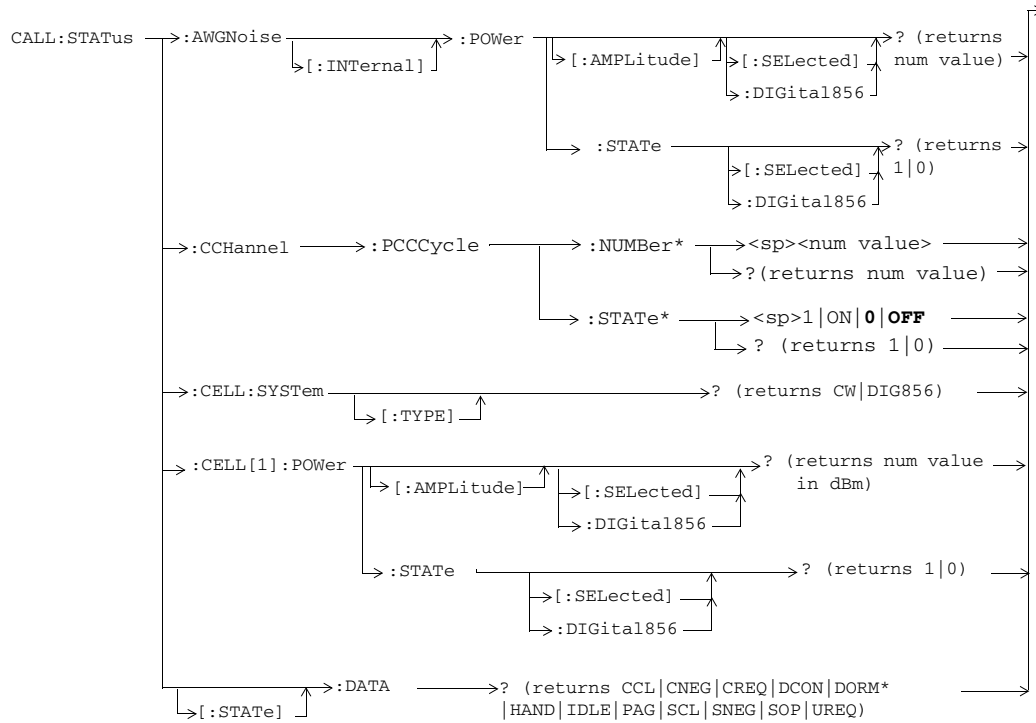


* This query return is only applicable to the lab application.

GPIB Syntax for E1966A and E6706A

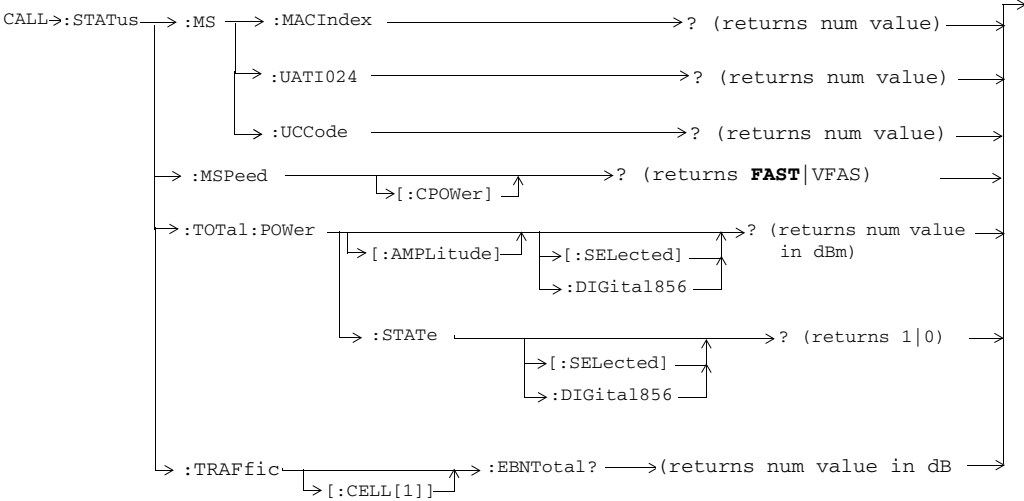


GPIB Syntax for E1966A and E6706A

CALL:TEST856

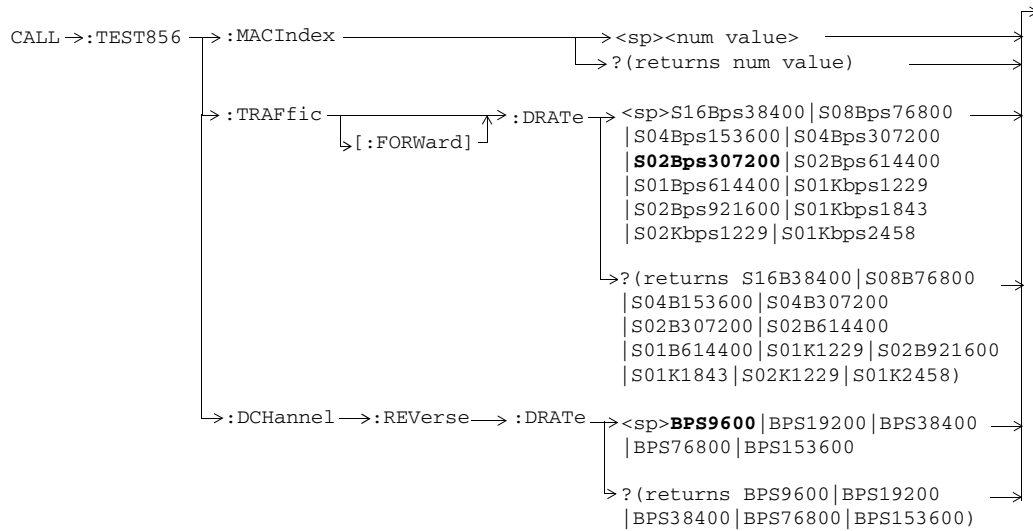


All commands shown in this diagram are only applicable to the lab application.


CALL:TOTAL:POWER

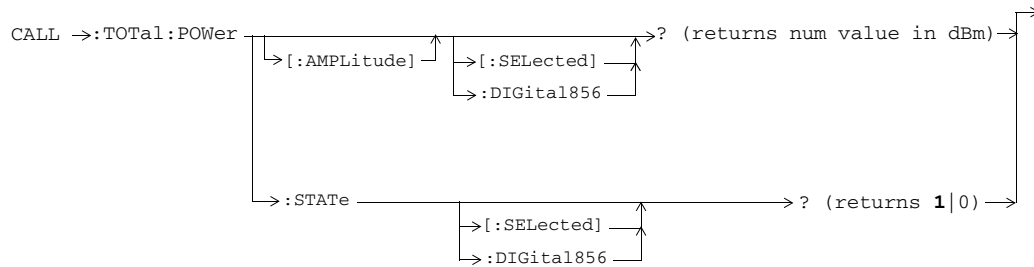


CALL:TRIGger

 



CALL:WAVeform


 


DISPlay

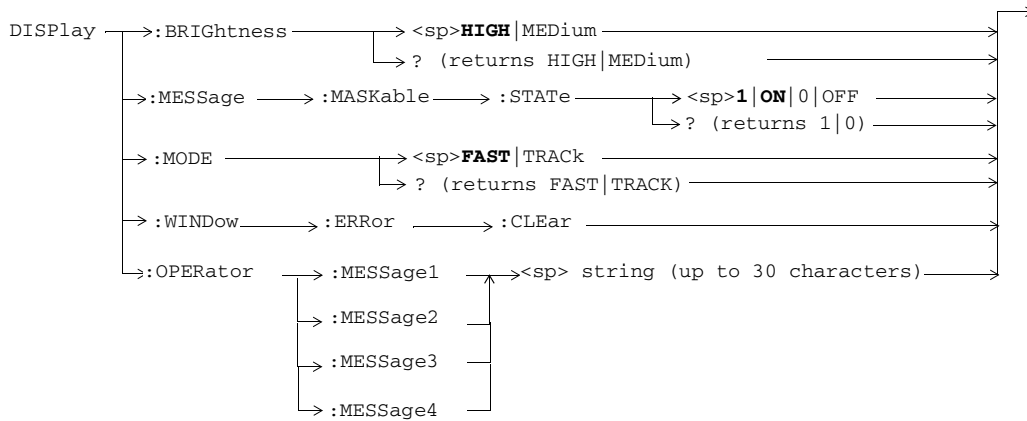


FETCH:AFANalyzer

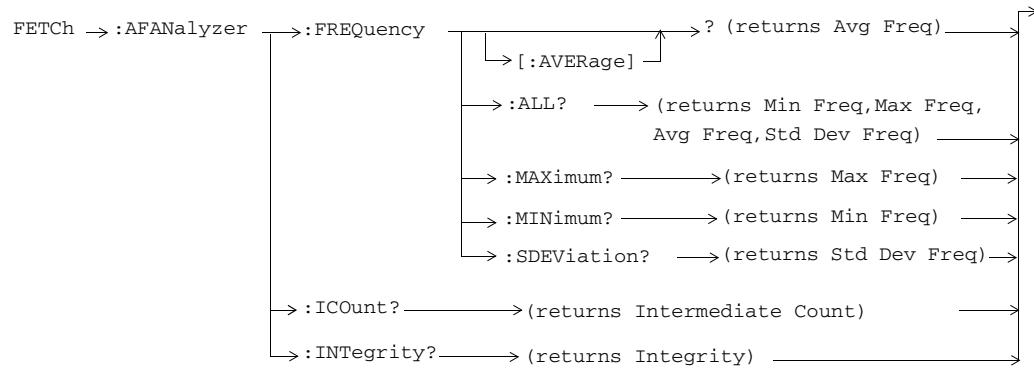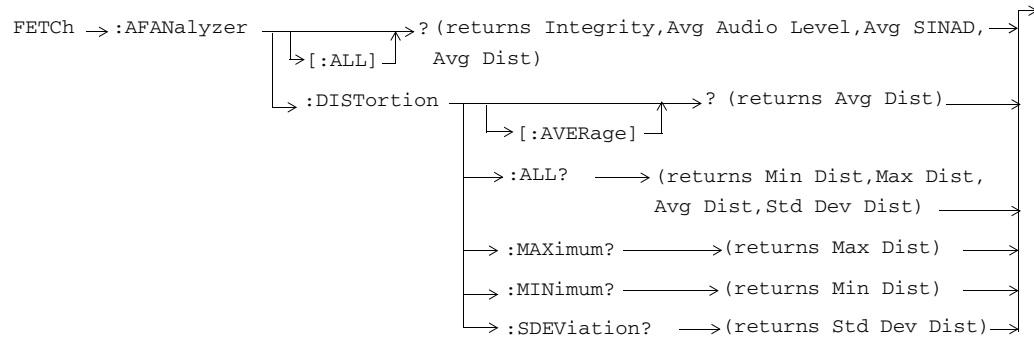


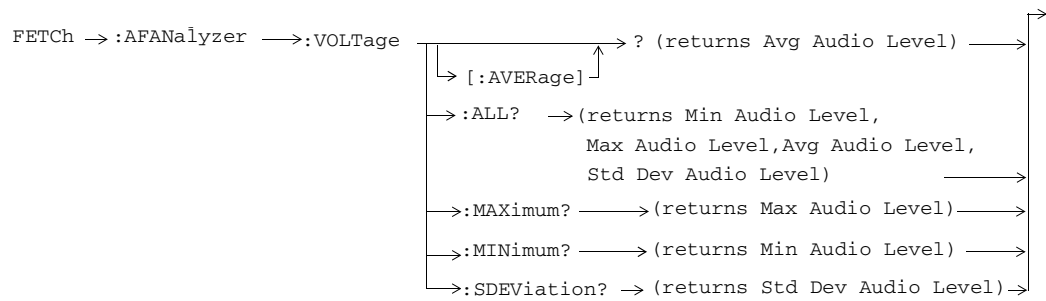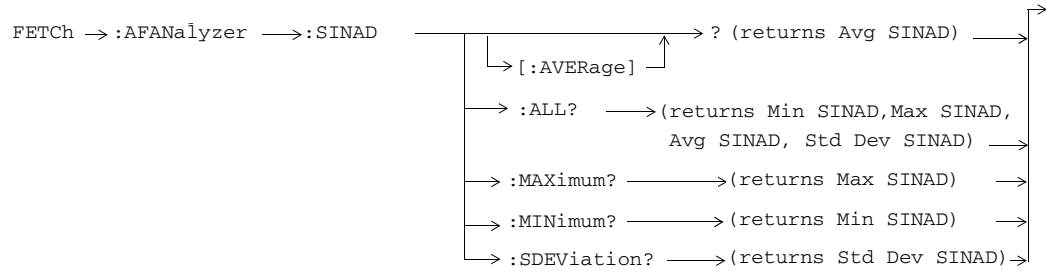

FETCh:CAPPower

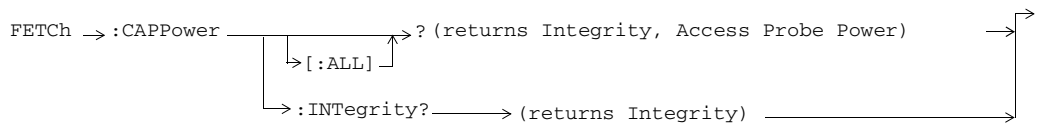


FETCH:GAPPower

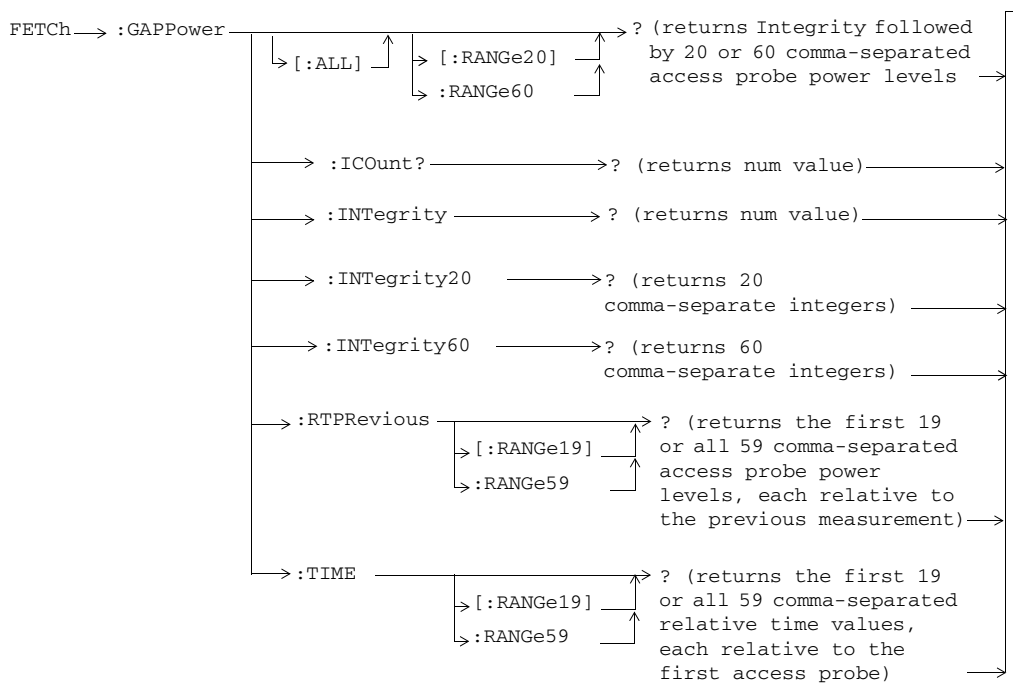


All commands shown in this diagram are only applicable to the lab application.


FETCH:CPERror

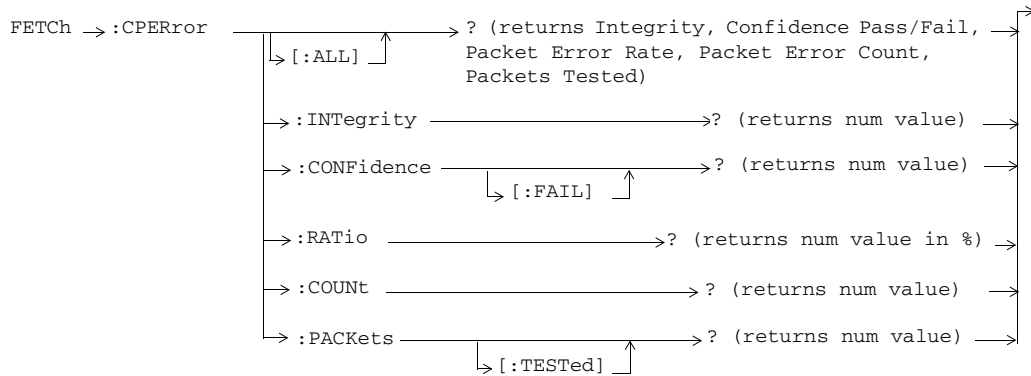


FETCH:CPOWER

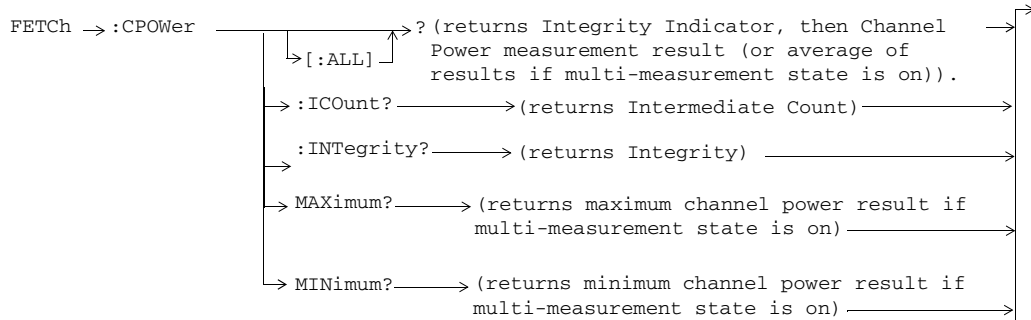


FETCH:CTDPower

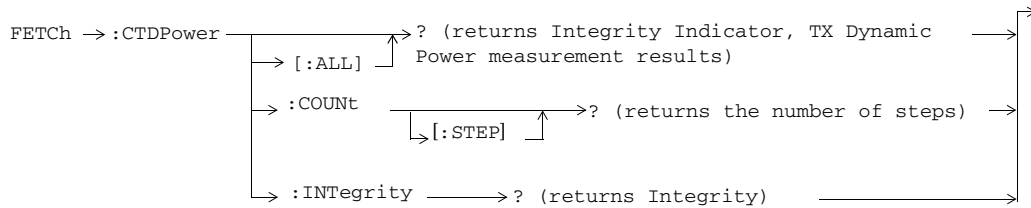


FETCh:CTXSpurious

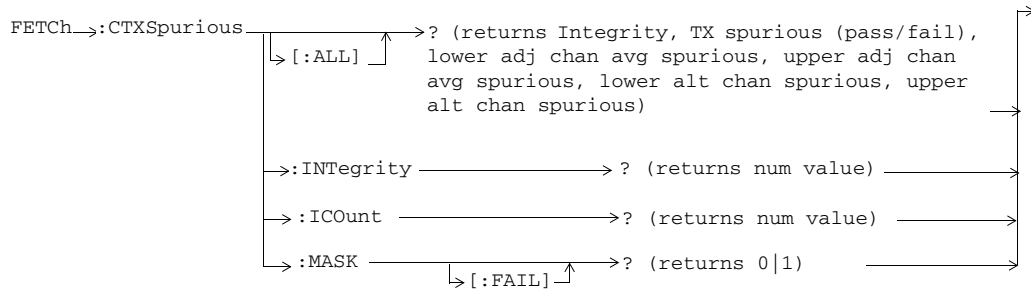


FETCh:DAPower


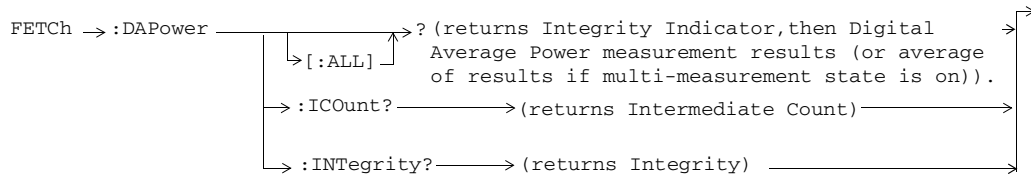



FETCH:DOWQuality

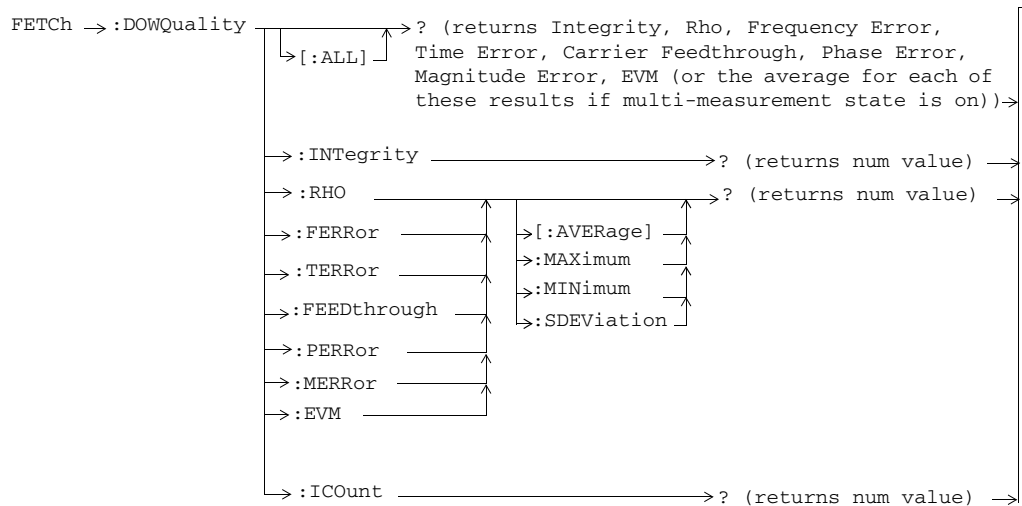

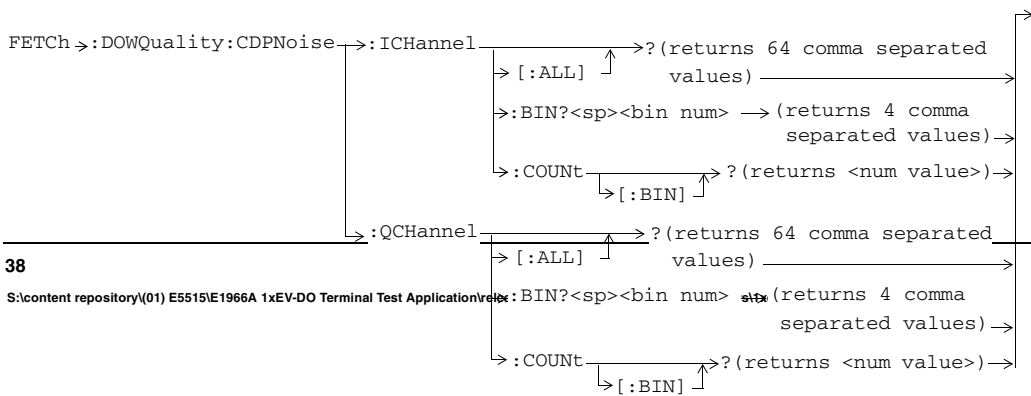


FETCH:SAUDio

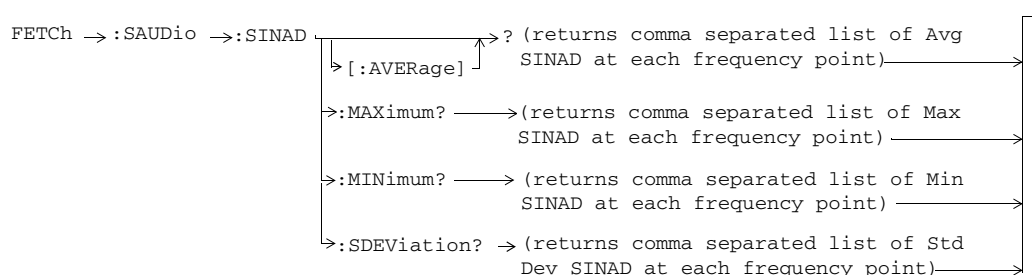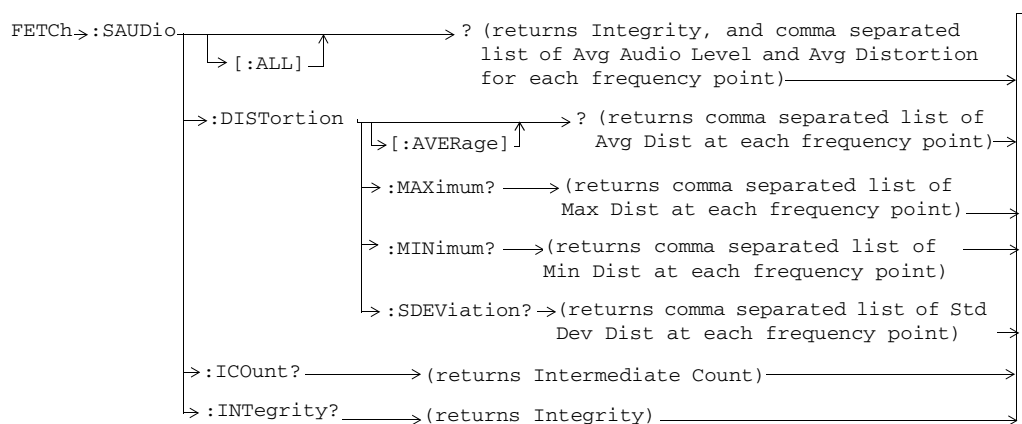


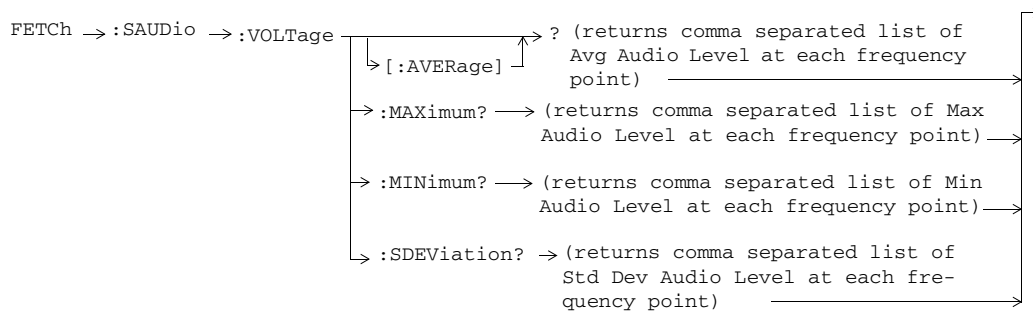


FETCh:SMONitor

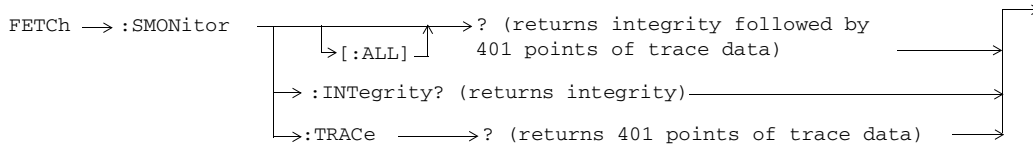


FETCH:TROPower

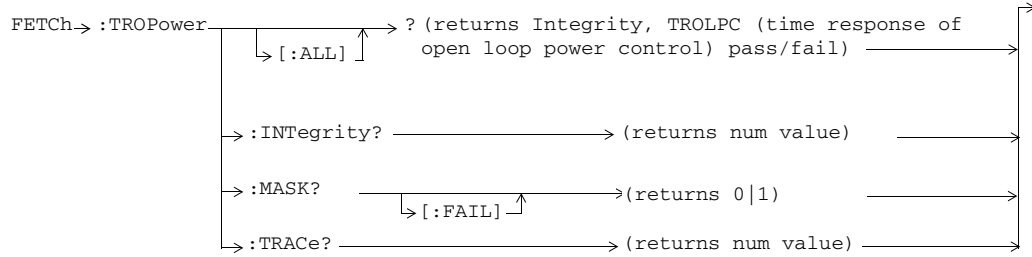

INITiate

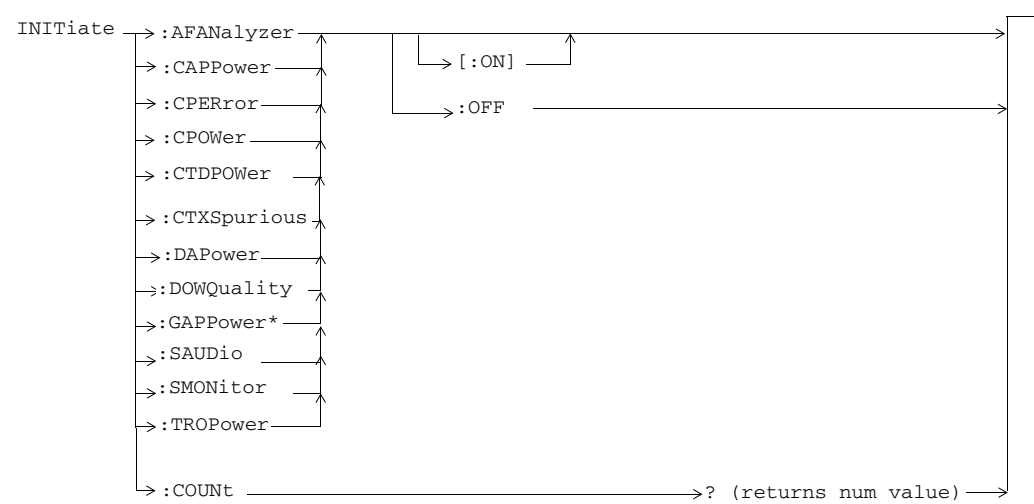


* This command is only applicable to the lab application.

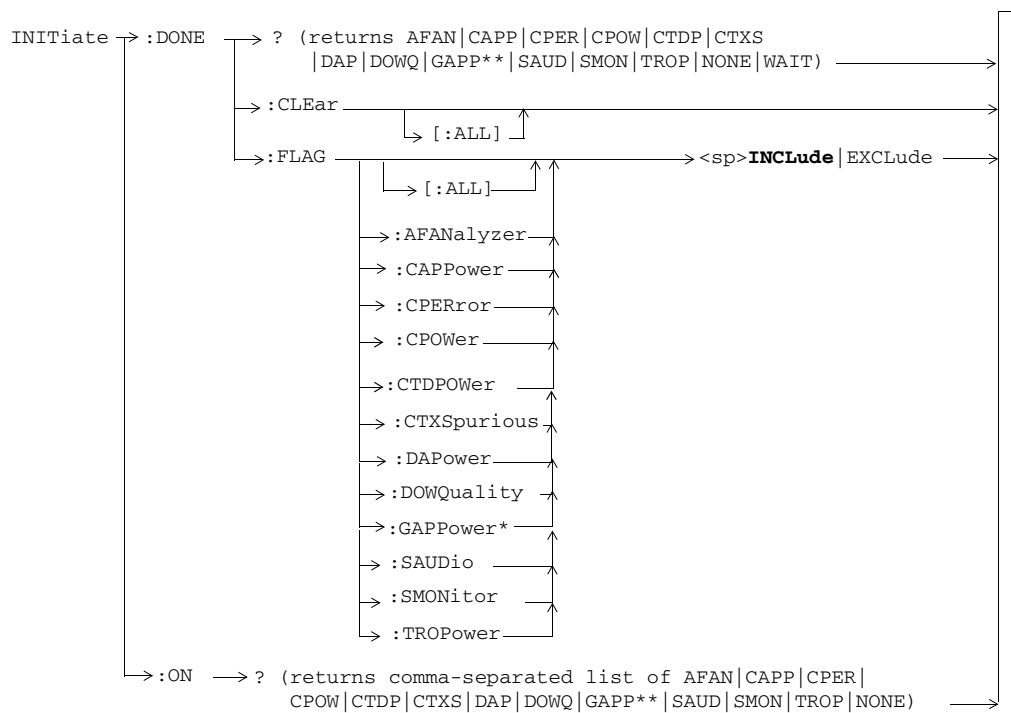

* This command is only applicable to the lab application.
 ** This query result is only applicable to the lab application.

READ

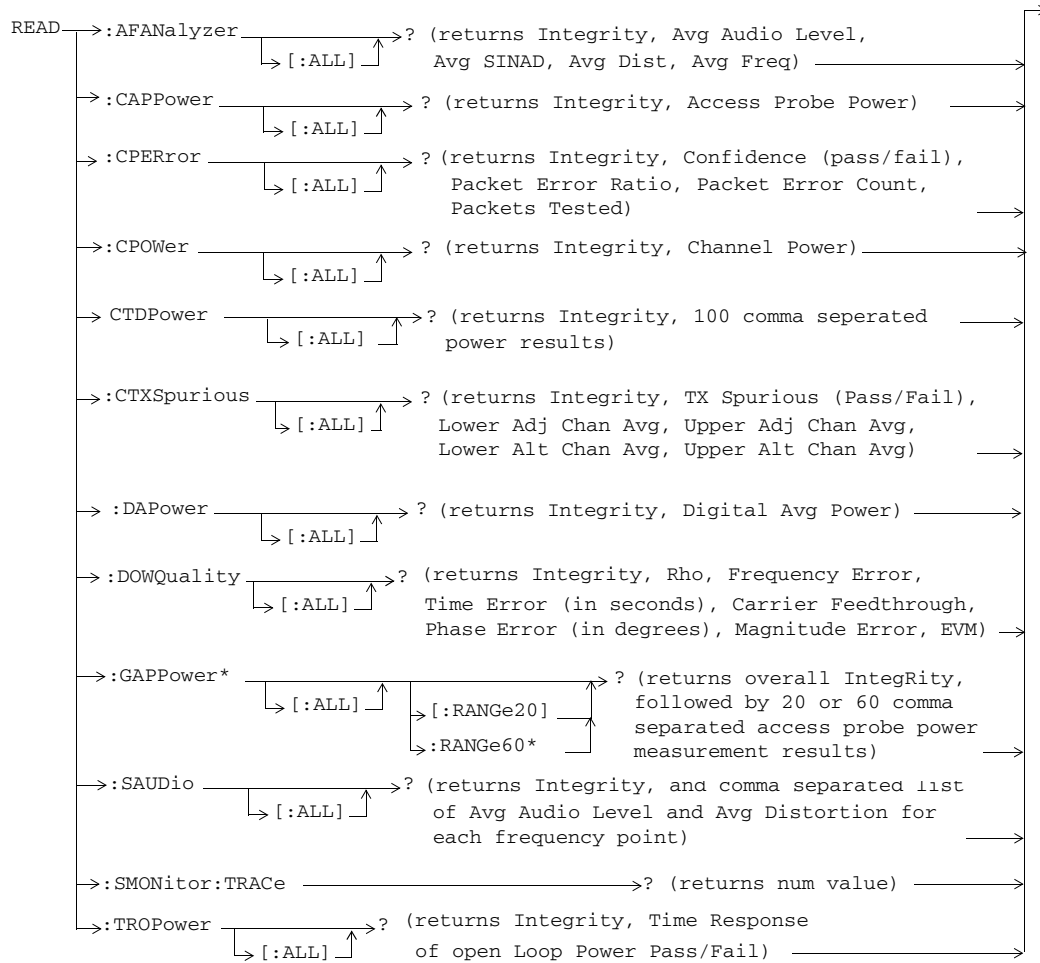


* These commands are only applicable to the lab application.

RFAnalyzer




* These commands are only applicable to the Lab Application.


 
RFGenerator:OUTPut





SETup:CONTInuous

 


SETup:AFANalyzer

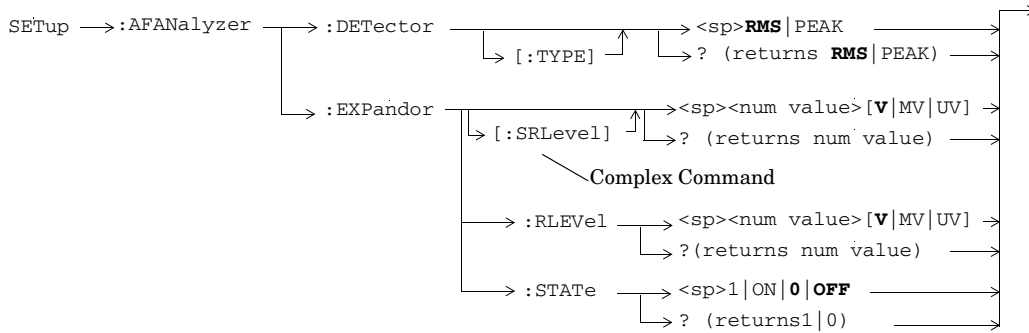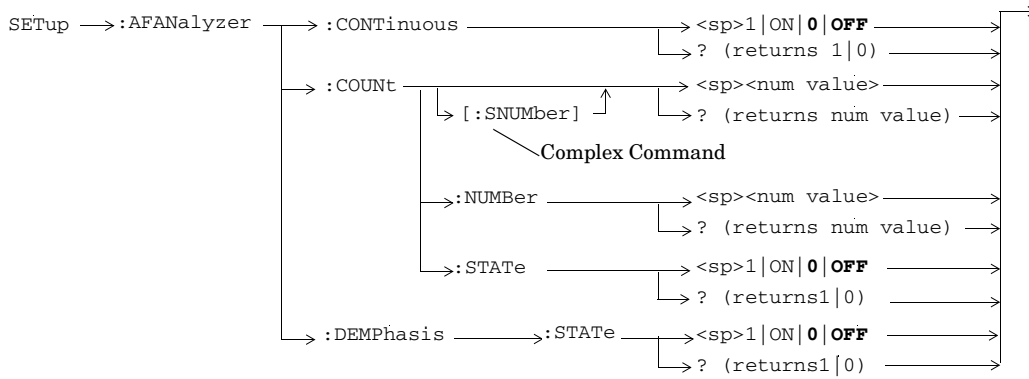


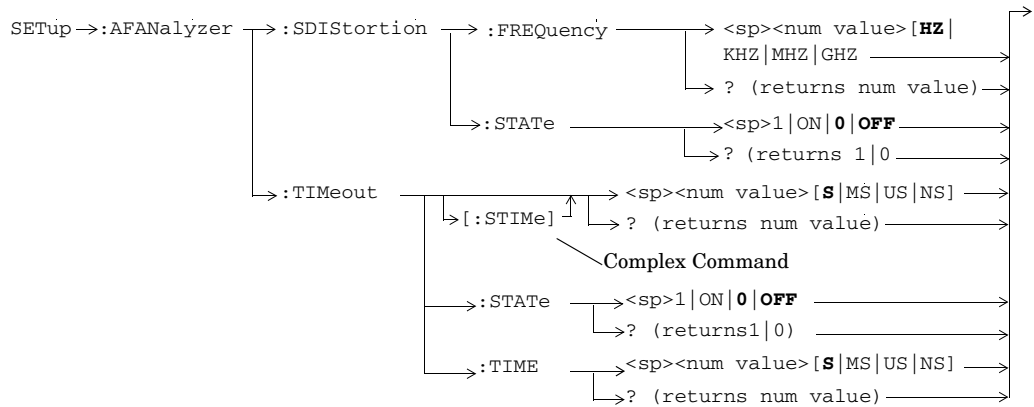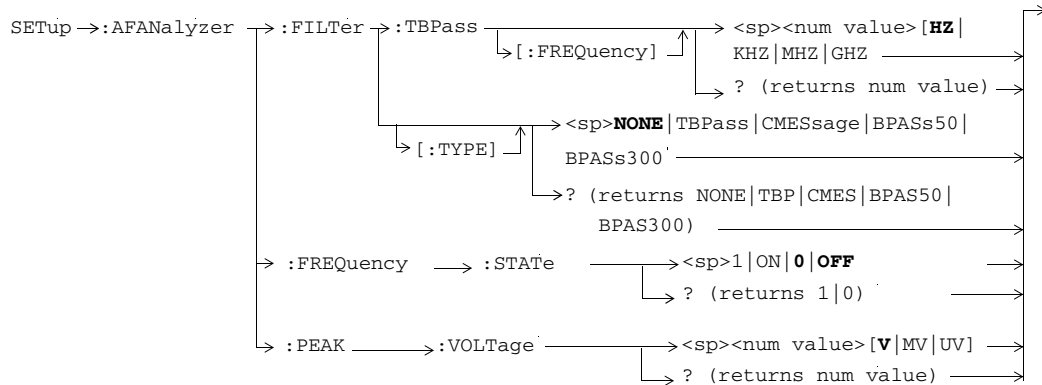

SETup:CAPPower

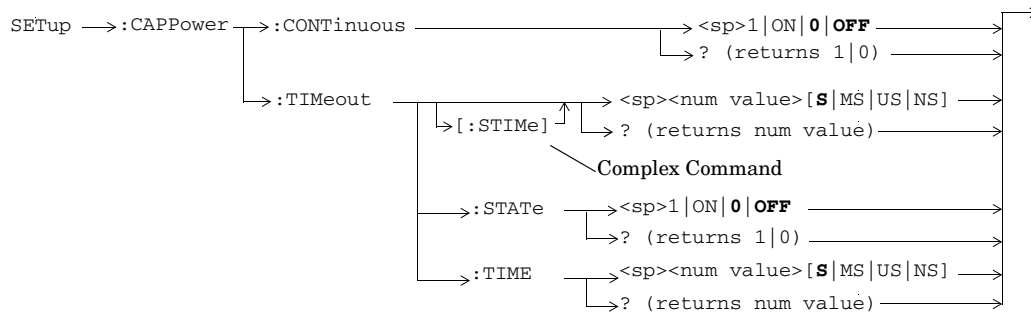


FETCH:GAPPower

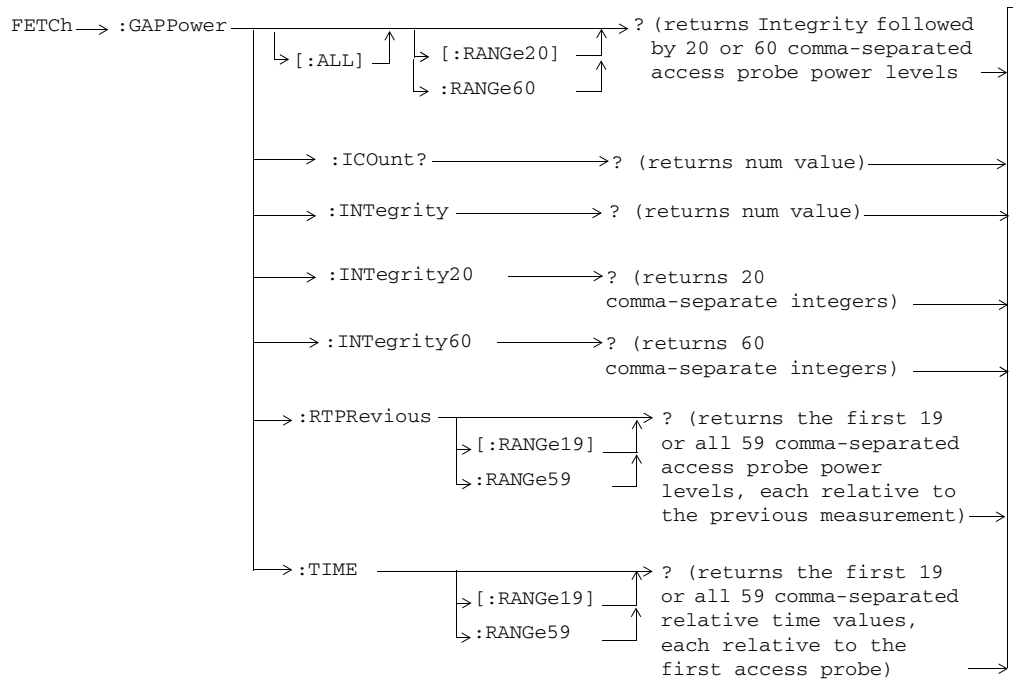



All commands shown in this diagram are only applicable to the lab application.

SETup:CPERror


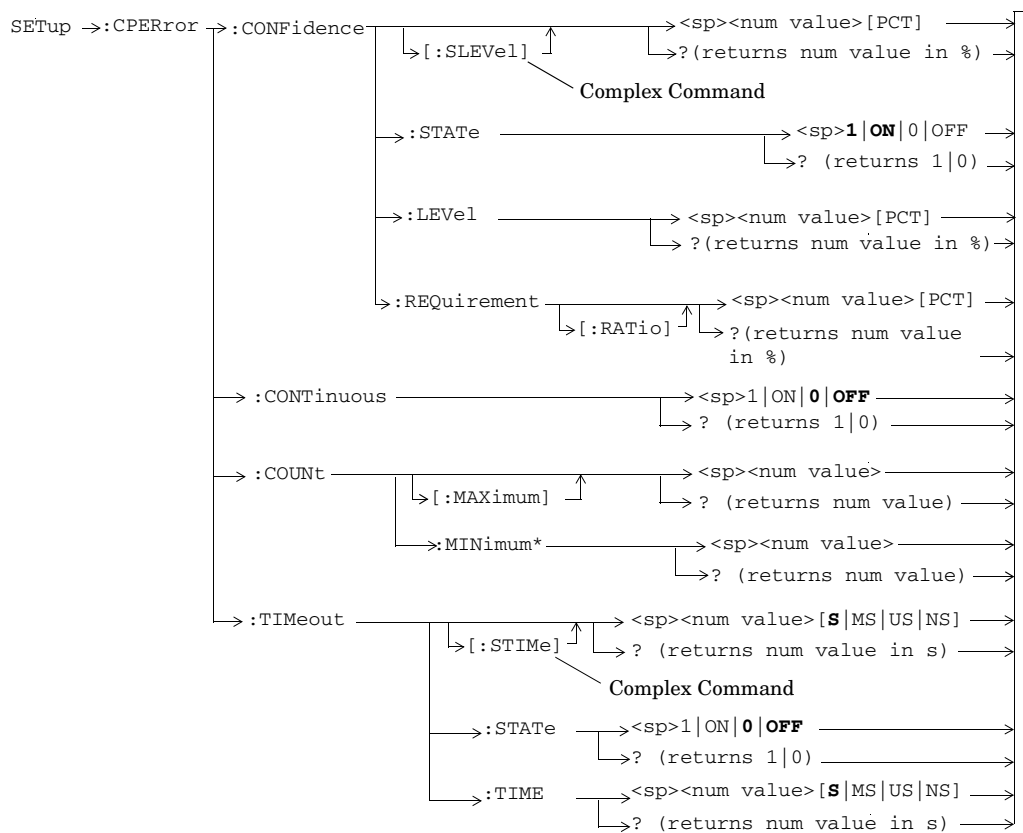


* This command is only applicable to the lab application.



SETup:CPOWER

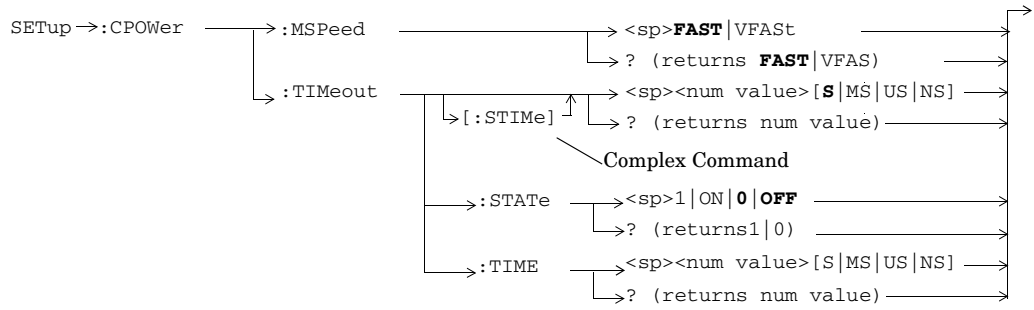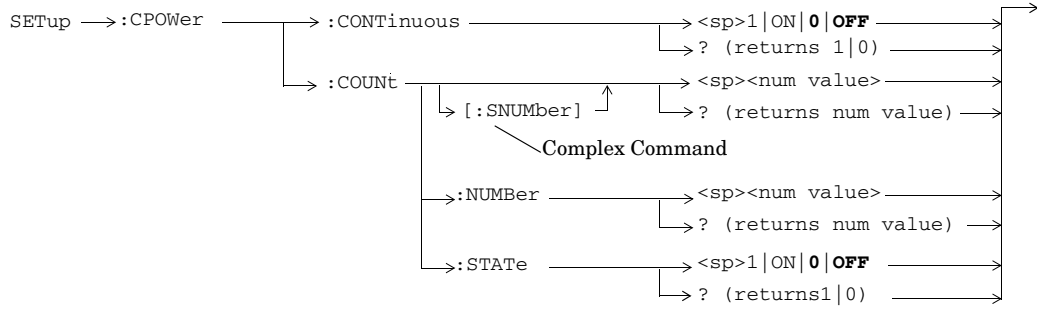



SETup:CTDPower

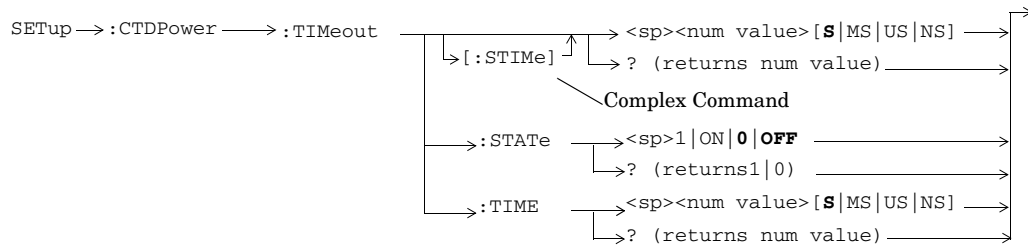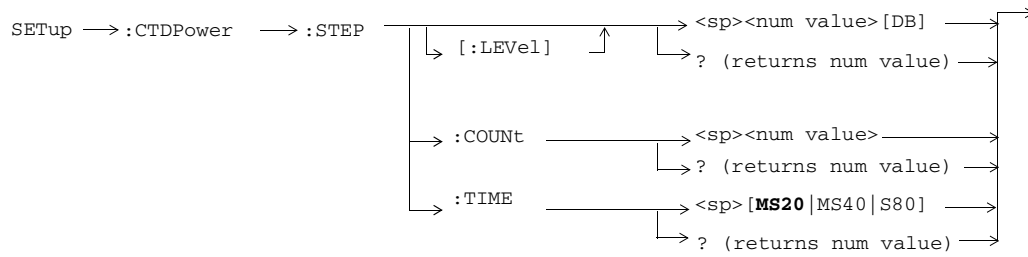


SETup:CTXSpurious

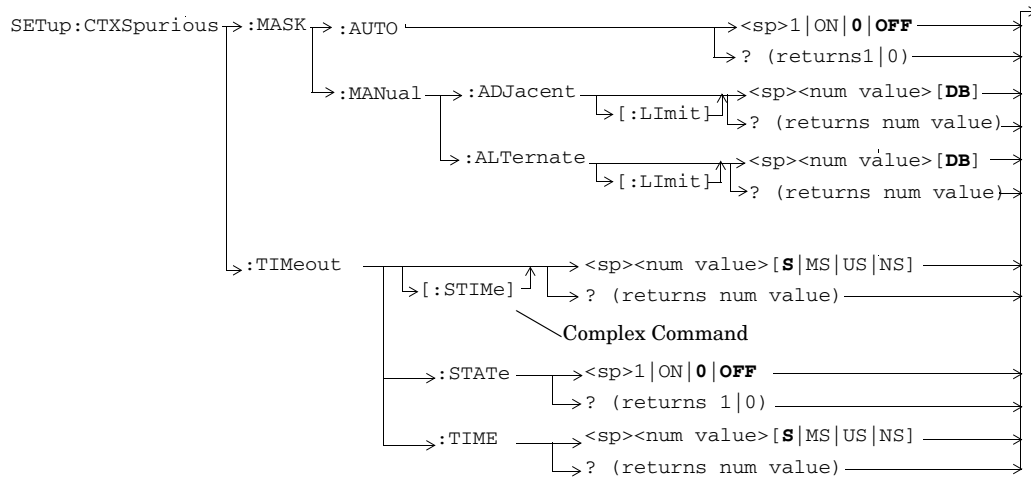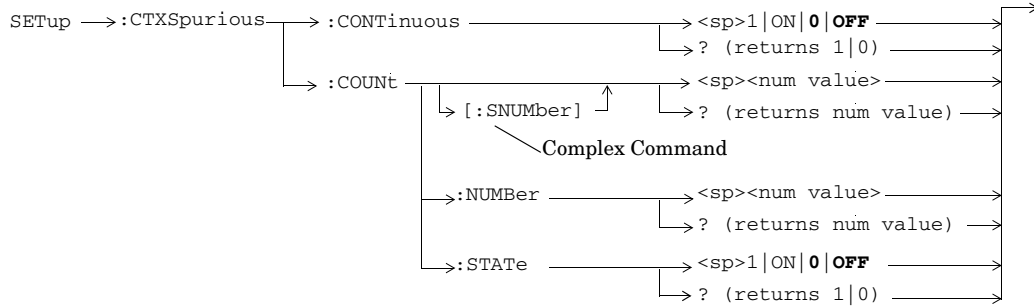



SETup:DAPower

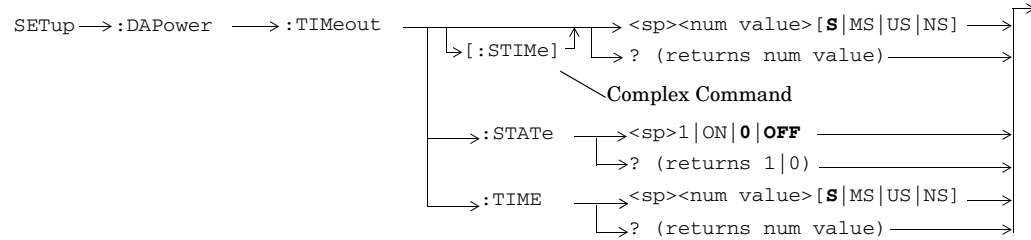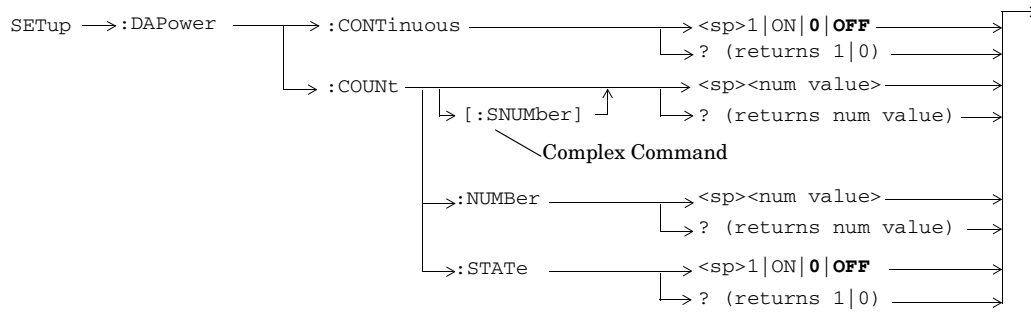


SETup:DOWQuality

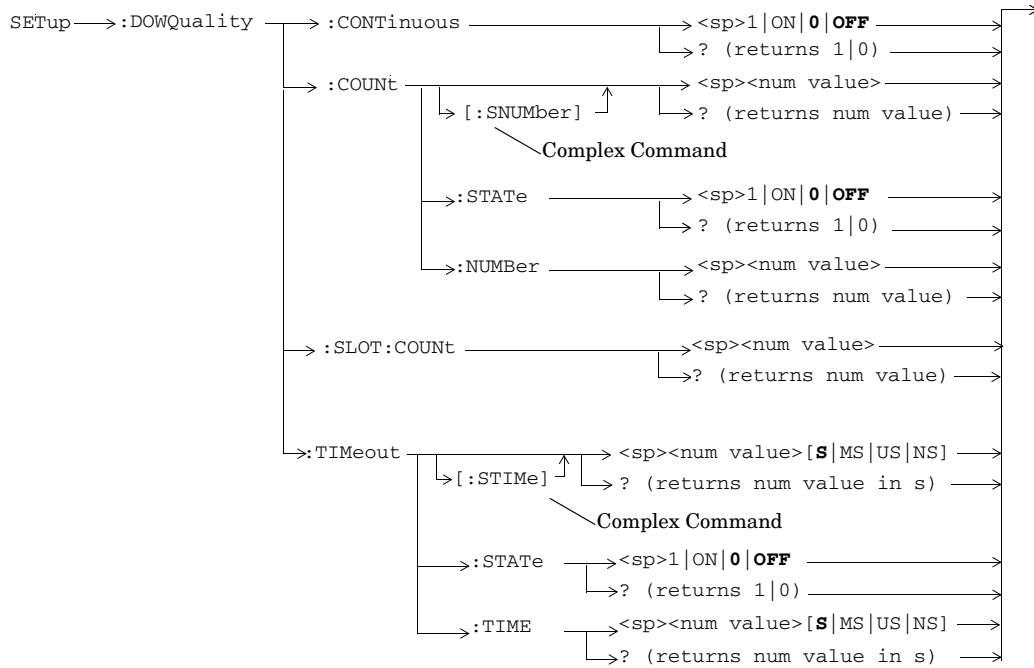



SETup:SAUDio

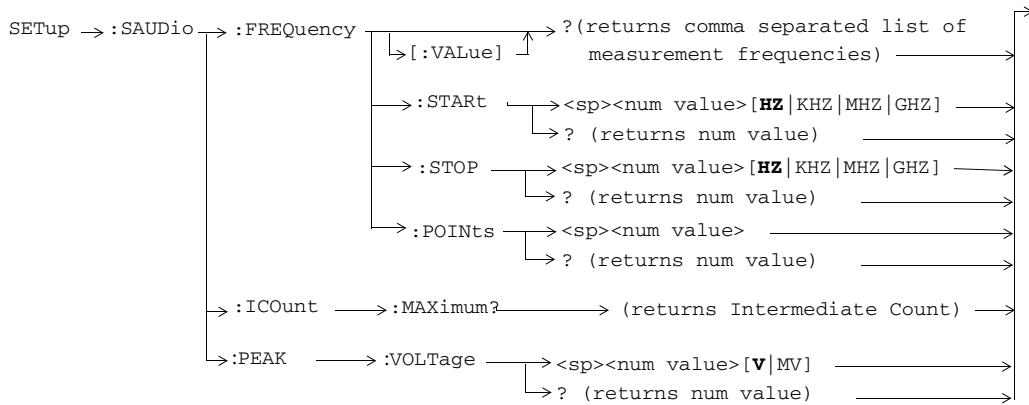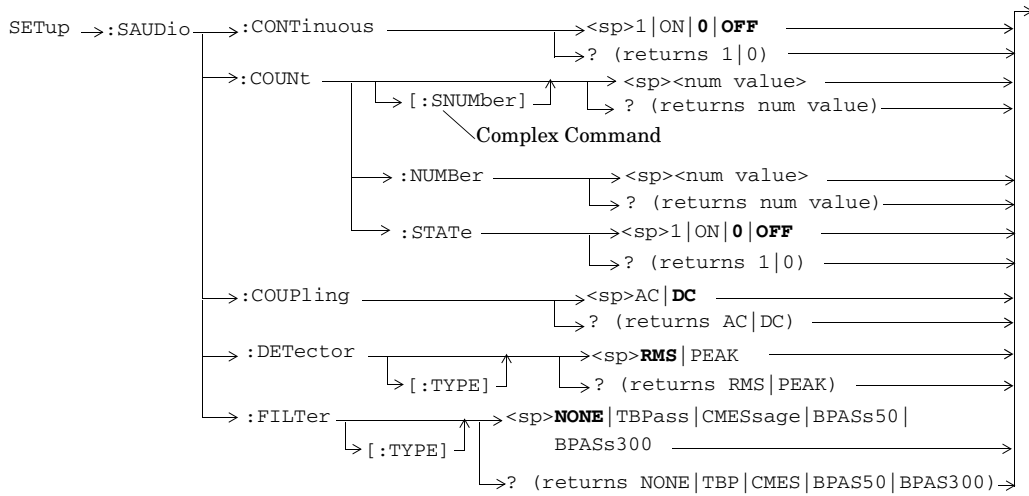

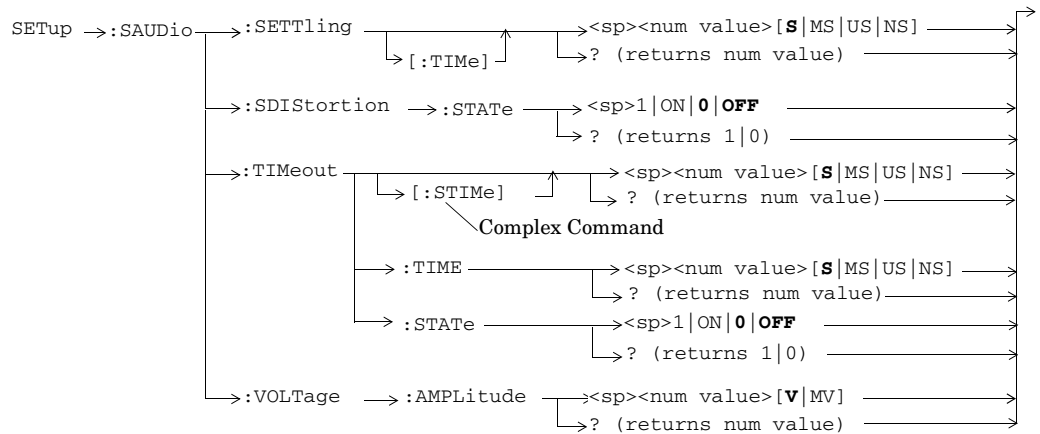


SETup:SMONitor

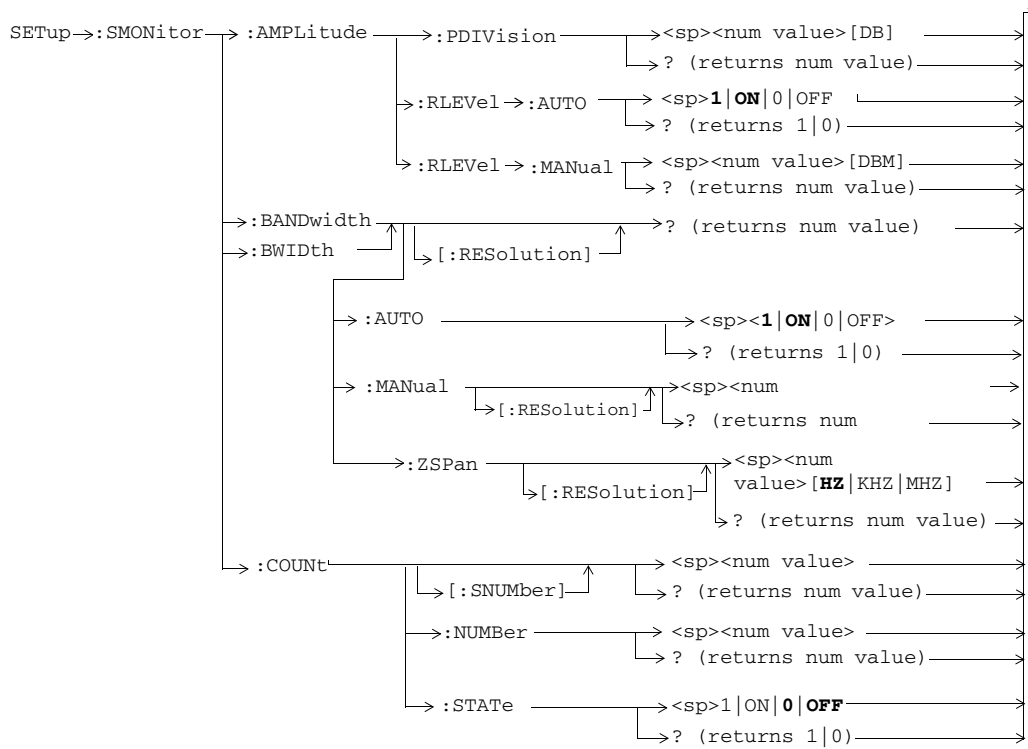


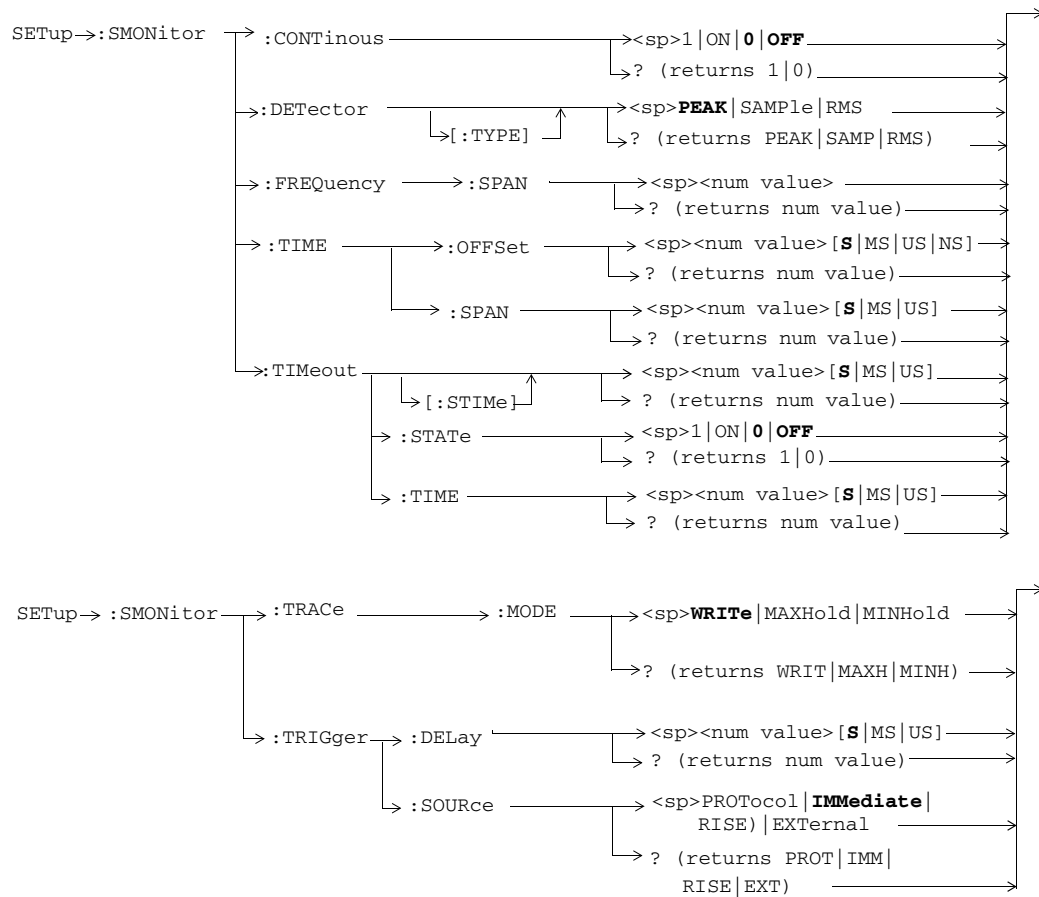

SETup:TROPower

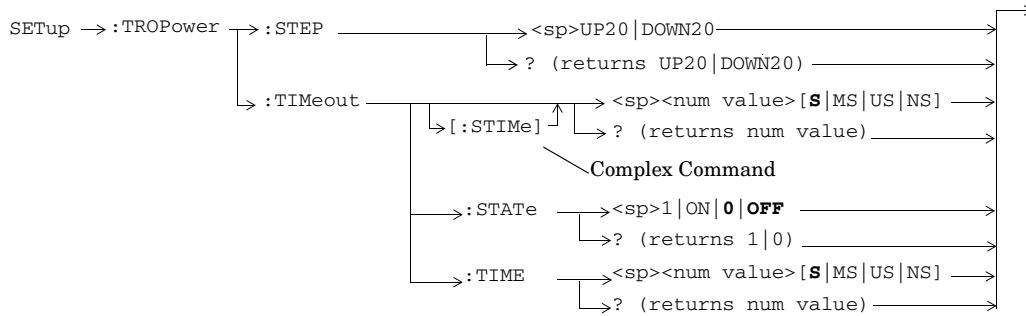

STATus:OPERation

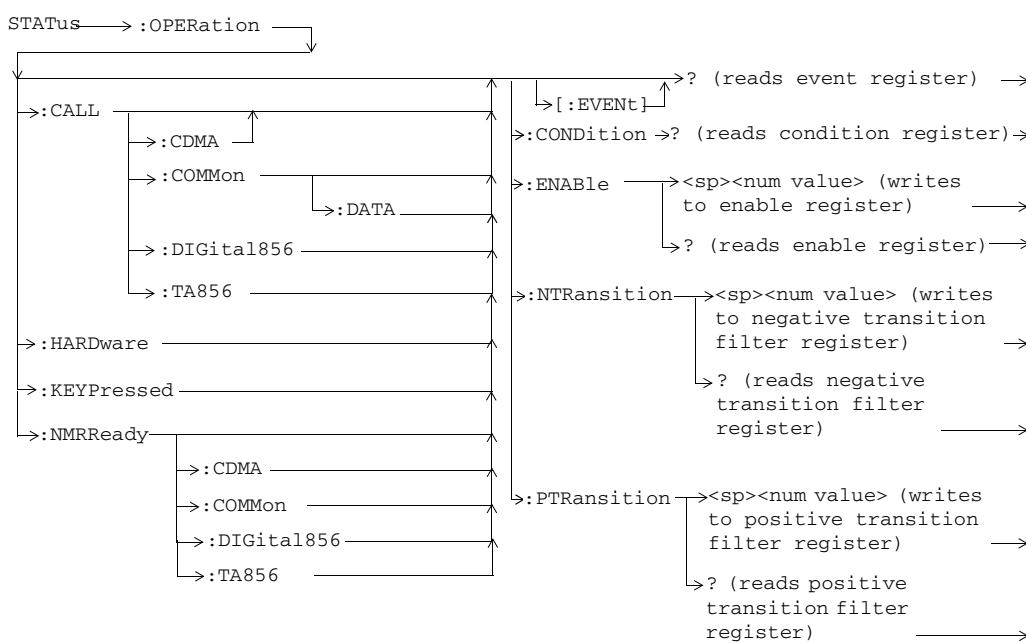


STATUS:PRESet

STATUS → :PRESet →


STATUS:QUEStionable

STATUS → :QUEStionable

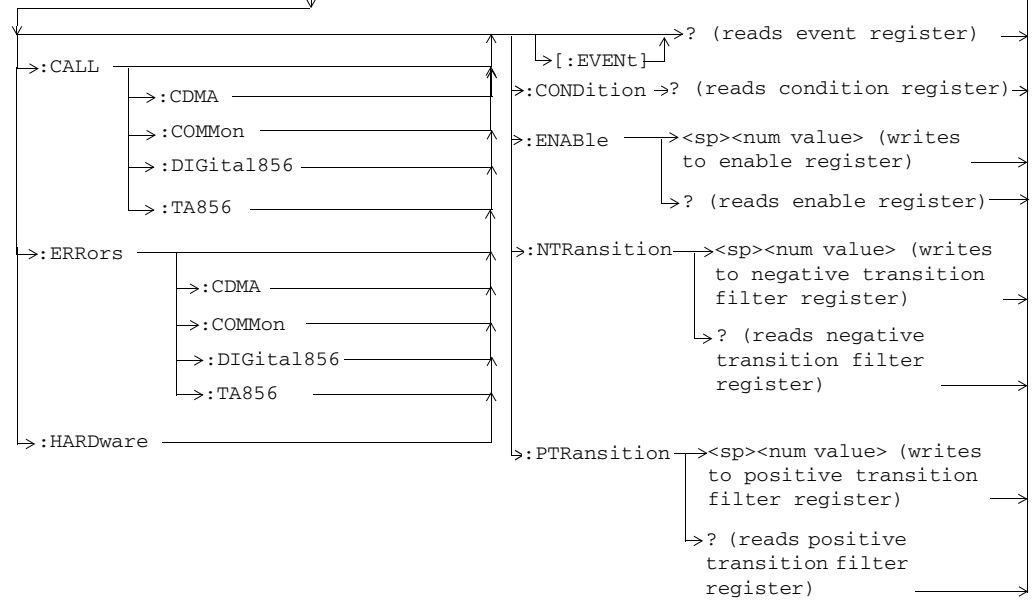

Status Byte Register

 *STB?

*STB? 

NOTE The Status Byte Register can also be read with a serial poll. For example, the command “Status_byte = SPOLL(714)” would perform a serial poll of the Status Byte Register, returning and releasing RQS (bit 6).

Standard Event Status Register

*ESR?

*ESR? → Reads and clears the Std Event Status Register. →


*ESE?

*ESE? → Reads the Std Event Status Register Enable Register →



*ESE

*ESE → Writes to the Std Event Status Register Enable Register →


SYSTem:APPLication

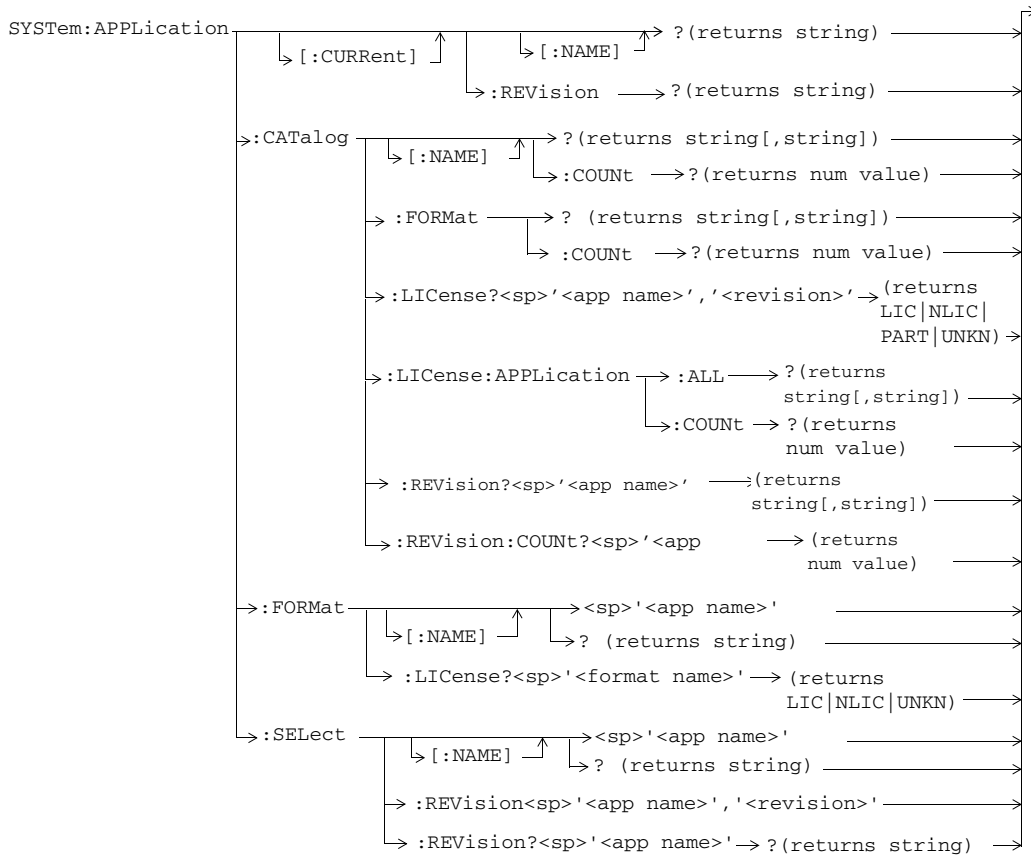


SYSTEM:Audio

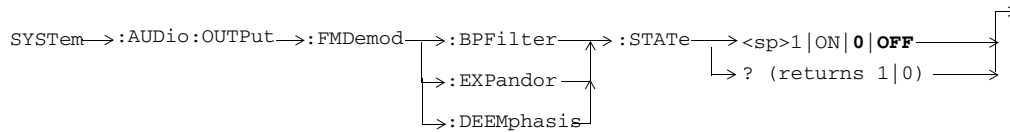 

SYSTEM:BEEPer

 


SYSTEM:COMMunicate

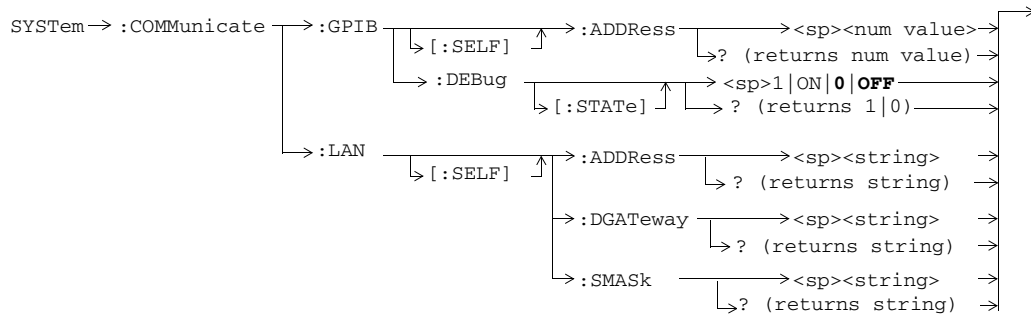


SYSTEM:CONFigure

SYSTEM → :CONFigure → :INformation → :HARDware → :VERBose? →


SYSTEM:CORRection

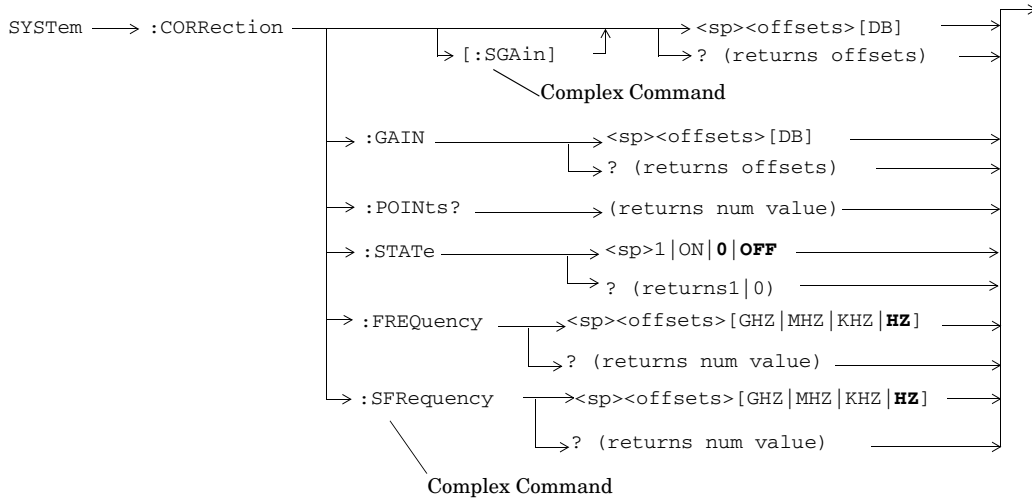


SYSTEM:CURRent:TA

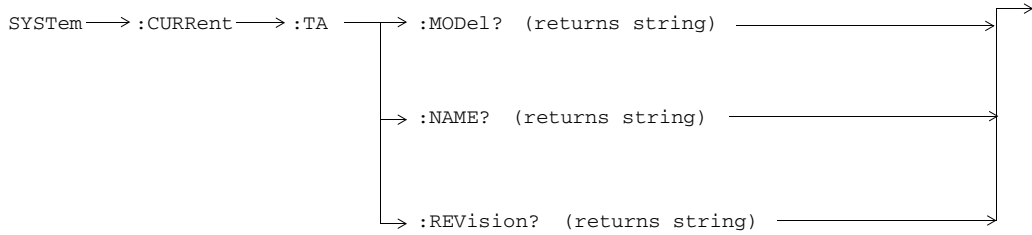


SYSTem:DATE

 


SYSTem:ERRor?

 


SYSTem:FATal

 


SYSTem:MEASurement:RESet

 


SYSTem:PRESet

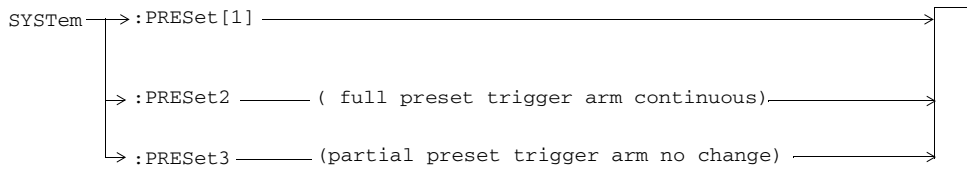


SYSTem:REGister

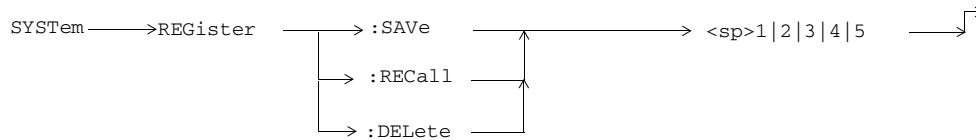


SYSTem:ROSCillator

 


SYSTem:SYNChronized

 


SYSTem:TIME

 

SYSTem:TZONE

 

SYSTem:UTC

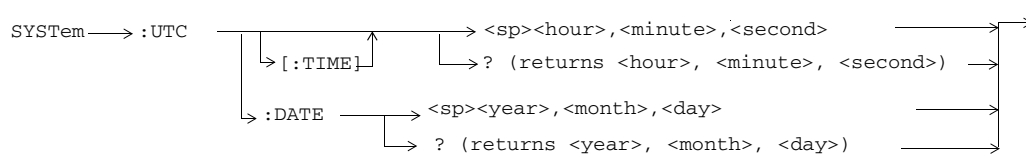

IEEE 488.2 Common Commands

Description

***CLS** The *CLS, clear status command, is defined in “IEEE Std 488.2-1992”, 10.3. This command will also clear and close the error message screen on the test set’s display.

***ESE** The *ESE, standard event status enable command, is defined in “IEEE Std 488.2-1992”, 10.10.

***ESE?** The *ESE?, standard event status enable query, is defined in “IEEE Std 488.2-1992”, 10.11.

***ESR?** The *ESR?, standard event status register query, is defined in “IEEE Std 488.2-1992”, 10.12.

***IDN?** The *IDN?, identification query, is defined in “IEEE Std 488.2-1992”, 10.14. *IDN? is used to retrieve information about the test set in ASCII format.

*IDN?, returns ASCII codes 32 through 126 excluding comma and semicolon in four comma separated fields. Field 1 returns the manufacturer, field 2 returns the instrument model number, field 3 returns the serial number, field 4 returns 0.

***OPC** The *OPC, operation complete command, is defined in “IEEE 488.2-1992”, 10.18. *OPC causes the test set to continuously sense the No Operation Pending flag. When the No Operation Pending flag becomes TRUE, the OPC event bit in the standard event status register (ESR) is set to indicate that the state of all pending operations is completed. The *OPC common command is not recommended for use as an overlapped command.

***OPC?** The *OPC?, operation complete query, is defined in “IEEE Std 488.2-1992”, 10.19. The *OPC? query allows synchronization between the controller and the test set using either the message available (MAV) bit in the status byte, or a read of the output OPC?. The *OPC? query does not effect the OPC event bit in the Standard Event Status Register (ESR). The *OPC? common command is not recommended for use as an overlapped command.

***OPT?** The *OPT?, option identification query, is defined in “IEEE Std 488.2-1992”, 10.20. Each option will have a unique name, that name will be returned with the query.

***RST** The *RST, full preset command, is defined in “IEEE Std 488.2-1992”, 10.32. *RST is the recommended command when performing a full preset on the test set. A *RST restores the majority of settings to their default values.

- *RST sets trigger arm to single
- PRESet2 sets trigger arm to continuous

***SRE** The *SRE, service request enable command, is defined in “IEEE Std 488.2-1992”, 10.34. The parameter range for this command is 0 through 255.

***SRE?** The *SRE?, service request enable query, is defined in “IEEE Std 488.2-1992”, 10.35. Values returned by this query range from 0 through 255.

***STB?** The *STB?, read status byte query, is defined in “IEEE Std 488.2-1992”, 10.36. Values returned by this query range from 0 through 255.

***WAI** The *WAI, wait-to-continue command, is defined in “IEEE Std 488.2-1992”, 10.39. The *WAI command prevents the test set from executing any further commands or queries until all pending operation flags are false. The *WAI common command is not recommended for use as an overlapped command.

Index

To find a syntax equivalent for a field on the Test Set's display.

1. Find the field name on the Test Set's display.
2. Look up the name in the alphabetical listing.
3. Turn to the page indicated.

Numerics

-0.885 MHz Offset, 36
0.885 MHz Offset, 36
-1.98 MHz Offset, 36
1.98 MHz Offset, 36
100 Hz BW BPF Center Frequency
audio analyzer, 47

A

Abort Measurement, 9
Access Probe Power, 33
Ack Channel Gain, 24
Active Cell Operating Mode, 25
Alternate Ping Address, 20
Amplitude, 10
Application Selection, 64
Application Setup, 64
Application Switch, 64
Application, Revision, License, 64
AT Directed Packets, 13
AT Max Power, 24
Audio Analyzer Setup
SINAD/Distortion Fundamental Frequency, 47
Audio Frequency, 32
Audio Generator, 10
Audio Generator Coupling, 56
Audio Generator Level, 57
Audio Level, 33
Audio Out Port, 65
AWGN Power, 14, 28
AWGN Power State, 28

B

Band, 14
Band Pass Filter Frequency
FM, 47
Beeper State, 65

C

Cal. Burst Mod Offset 1, 10
Cal. first IQ Modulator, 10
Cal. second IQ Modulator, 10
Calibrate Channel Power, 10
Calibrate Digital Avg Pwr, 10
Call Drop Timer, 15
Call Limit Mode, 15
Carrier Feedthrough, 37
Cell Band, 14
Cell Band, Handoff, 27
Cell Channel, 15
Cell Power, 26, 28
Cell Power State, 28
Channel, 15
Channel Power, 35
Channel, Handoff, 27
Close Session, 26
Code Domain Power, 38
Code Domain Power + Noise, 38
Color Code, 15
Continuous, 46
Control Channel Data Rate, 14
Corrupted Bursts, 17, 19
Country Code, 23
Coupling, 10
Current System Type, 28
CW Operating Mode, 25

D

Data Connection State, 22
Data Connection State Change
Detector, 22
Data Connection State Change
Detector Timeout, 22
Data Connection Status, 28
Data Offset 153k6, 24
Data Offset 19k2, 24
Data Offset 38k4, 24
Data Offset 76k8, 24
Data Offset 9k6, 24
Data Offset Nom, 24
Data Throughout Monitor, 19
Date (yyyy.mm.dd), 67
Decode Errors, 17, 19
De-Emphasis State
audio analyzer, 46
Default Gateway, 65
DELETE hardkey, 67
Detector Type, 56
Peak (audio analyzer), 47
RMS (audio analyzer), 47
Device Settling Time, 57
Device to Ping, 20
Digital Average Power, 36
Display Brightness, 31
Display Mode, 31

Distortion

audio, 32
Swept Audio, 39
DRC Channel Gain, 24
DUT IP Address, 24

E

Eb/Nt, 29
End Data Connection, 22
EVM, 37
Execute Handoff, 22
Expander Reference Level
audio analyzer, 47
Expected CW Power, 44
Expected Peak Voltage, 56
Expected Power
DIGital856, 44
External Trigger Type, 31
ExtRef, 68

F

Filter Type, 56
100 Hz BW BPF (audio analyzer), 47
300 Hz to 15 kHz (audio analyzer), 47
50 Hz to 15 kHz (audio analyzer), 47
C-Message (audio analyzer), 47
None (audio analyzer), 47
FM Demodulation Setup
Bandpass Filter State, 65
Deemphasis State, 65
Expander State, 65
Force Dormant, 22
Frequency, 10
Frequency (MHz)
amplitude offset, 66
Frequency Band, 14
Frequency Error, 37
FTAP Rate, 13
FULL (preset) key, 61

G

gotolink SEL, 6
GPIB Address, 65

H

Handoff, 22
Handoff Cell Band, 27
Handoff Channel, 27
Hardware ID (Decimal), 24
Hardware ID (Hex), 24
Hardware ID Type (Hex), 24

Index

I

Idle State, 23
Initiate Measurements, 42
Instrument Information
 Test Application, 66
IntRef, 68

L

LAN IP Address, 65
Last Calibration, 10
Limited TAP, GPIB Command, 13

M

MAC Index, 29
Magnitude Error, 37
Maskable Message Display State,
 31, 65
Max Frames Allowed for
 Assignment, 17, 19
MCC, 23
Meas Frequency, 44
Measurement Frequency, 44
Measurement Frequency Control,
 44
MEASUREMENT RESET key, 67
Measurement Speed
 Channel Power, 52
Measurement Timeout
 Access Probe Power, 48
 audio analyzer, 47
 Channel Power, 51, 52
 Digital Average Power, 54
 Swept Audio, 57
 TX Spurious Emissions, 53
Message Log, 67
Missing Bursts, 17, 19
Mobile Country Code, 23
Multi-Measurement Count
 audio analyzer, 46
 Channel Power, 51, 52
 Digital Average Power, 54
 Swept Audio, 56
 TX Spurious Emissions, 53

N

Number
 amplitude offset, 66
Number of Points, 56

O

Offset (dB)
 amplitude offset, 66
Open Loop Adjust, 12
Operating Mode, 25

P

Packet Error Count, 35
Packet Error Rate Confidence
 Level, 50
Packet Error Rate Confidence
 Pass/Fail, 35
Packet Error Rate Integrity, 35
Packet Error Rate Maximum
 Packet Count, 50
Packet Error Rate Measurement
 Results, 35
Packet Error Rate Requirement,
 50
Packet Loss, 20
Packets Received, 20
Packets Tested, 35
Packets Transmitted, 20
Pages, 17, 19
Phase Error, 37
Pilot Drop, 24
Ping, 20
Ping Count, 20
Ping Setup
 Alternate Ping Address, 20
 Device to Ping, 20
 Ping Count, 20
 Ping Timeout, 20
Ping Timeout, 20
PN Offset, 26
power control
 reverse link, 15
 reverse link step size, 15
Preamble Length, 12
Preferred Control Channel Cycle,
 14
Preferred Control Channel Cycle
 Mode, 16
PRESET key, 61
Probe Initial Adjust, 12
Probe Num Step, 12
Probe Power Step, 12
Probe Sequence Max, 12
Protocol Logging, 25
Pulse, 10
Pwr Ctrl Size, 15

R

RACHs, 17, 19
Rcvr Power Ctrl, 44
Read Measurement, 43
Receiver Power, 44
Receiver Power Control, 44
Register recall hardkey, 67
Rev, License, 64
reverse power control, 15
RF Gen Freq Ctrl, 16
RF Generator Frequency, 26

RF IN/OUT Amplitude Offset
 State, 66
RF IN/OUT Amptd Offset, 66
RF IN/OUT Amptd Offset Setup,
 66
RF Output Port, 45
Rho, 37
Round Trip (ms) min/avg/max, 20
RTAP Rate, 13
Rvs Power Ctrl, 15

S

SAVE hardkey, 67
Sector ID, 25
Session Application Type, 13
Session Open State, 27
Session Seed, 24
SINAD, 33
 Swept Audio, 39
SINAD/Distortion Fundamental
 Frequency
 audio analyzer, 47
SINAD/Distortion State, 57
 audio analyzer, 47
Single, 46
Slots to Measure, 55
Start Data Connection, 22
Start Frequency, 56
Start Ping, 20
step size
 reverse link power control, 15
Stop Frequency, 56
Stop Ping, 20
Subnet Mask, 25, 65
Summary Results
 Packet Loss, 20
 Packets Received, 20
 Packets Transmitted, 20
 Round Trip (ms) min/avg/max,
 20
Swept Audio, 39

T

Test Application (instrument
 information), 66
Test Application Protocol, 13
Test Mode Forward Traffic Rate,
 30
Test mode MAC Index, 30
Test Signal, 31
Time (hh.mm), 68
Time Error, 37
Time Zone (hh.mm), 68
Total RF Power, 29, 30
Total RF Power State, 29
Trigger, 31
Trigger Arm, 46

Index

Access Probe Power, 48
audio analyzer, 46
Channel Power, 51, 52
Digital Average Power, 54
Swept Audio, 56
TX Spurious Emissions, 53
TX Spurious Emissions, 36

U

UATI 24, 29
UATI Color Code, 29
Universal Coordinated Time
(UTC), 68
Universal Coordinated Time
(UTC) Date, 68
Uplink Frequency, 44

W

Waveform Quality + Code
Domain, 37