

INFORMATION ONLY – DOES NOT COMMUNICATE  
A MODIFICATION OR SAFETY CONDITION

**3070-71**

**S E R V I C E N O T E**

---

Supersedes:  
None

Agilent 3070 Board Test System

Serial Numbers: 0000A00000 / 9999Z99999

**E3786A Bar Code Reader does not have a Carriage Return (CR) capability out-of-box.**

**Parts Required:**  
None

ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION: <b>INFORMATION ONLY</b>
AUTHOR: Guy Sittler      PRODUCT LINE: 0980
ADDITIONAL INFORMATION:

© AGILENT TECHNOLOGIES, INC. 2003  
PRINTED IN U.S.A.



January 29, 2003

**Situation:**

Carriage Return capability is not enabled on new bar code readers; it must be enabled by the user.

**Solution/Action:**

Before enabling the carriage return option, verify that the bar code reader cord is secure in the wand.

Verifying cord connection:

1. A confirmation beep from the wand that an electrical connection has been made.
2. A click that confirms that the RJ-45 cable is securely connected into the wand.

After verifying the Bar Code Reader (BCR) cord connection, you can proceed with programming the BCR for carriage return enabling.

Enabling Carriage Return:

1. Locate in the PSC "User's/Programming Guide" (revision C), the "Suffix" section (page 26).
3. Scan the UPC (Universal Product Code) labeled "MC".

Verify that the bar code reader has been programmed correctly by scanning a few UPCs.

**Note:**

If you scan a UPC in a bt-basic window (on the command line), the UPC (numeric or alpha-numeric) will be handled as a mathematical expression. Therefore, the number that you get below the command line is the decimal equivalent of the expression evaluated.