

HP E1485C Main Assembly Replacement Installation

This replacement Main assembly (E1485-6x50x) does not include any optional memory simms. When replacing the E1485C Main assembly you must remove the optional memory simms from the defective assembly, and install them in this replacement assembly prior to installation into the module. Refer to the memory removal and installation sections of the *Installation and Service Guide* for instructions.

Caution This installation must be performed at a static protected site to prevent static discharge damage during the handling of the PC assembly.
