


HAMEG

Instruments

MANUAL

Oscilloscope HM 305

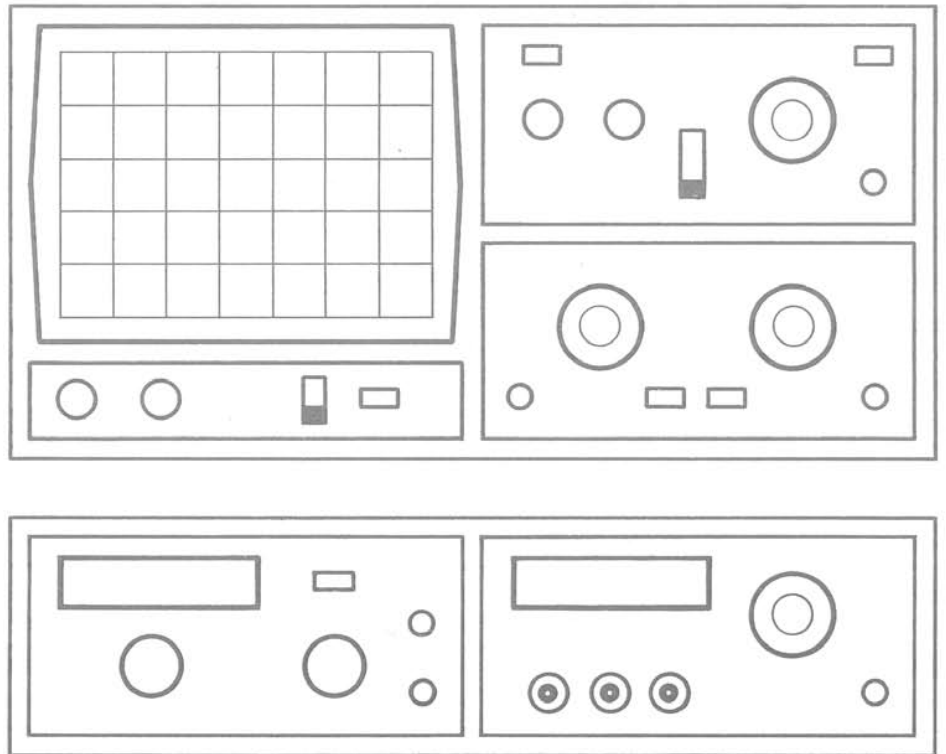

**Oscilloscope datasheet
with technical details**

Operating Instructions

Symbols	M 1
General Information	M 1
Use of tilt handle	M 1
Safety	M 1
Operating conditions	M 2
Warranty	M 2
Maintenance	M 2
Protective Switch-Off	M 2
Power supply	M 2
Type of signal voltage	M 3
Amplitude Measurements	M 3
Time Measurements	M 4
Connection of Test Signal	M 5
First Time Operation	M 7
Trace Rotation TR	M 7
Probe compensation and use	M 7
Operating Modes of the Y Amplifier	M 9
X-Y Operation	M 9
Phase difference measurement in DUAL mode	M10
Measurement of an amplitude modulation	M11
Triggering and Timebase	M11
Automatic Peak-Triggering	M11
Normal Triggering, Slope	M12
Trigger Coupling	M12
Triggering of Video Signals	M12
Line Triggering	M13
Alternate Triggering	M13
External Triggering	M13
Trigger Indicator	M13
Function of variable HOLD OFF control	M14
Y Overscanning Operation	M14
Component Tester	M14
Test Patterns	M17

Storage mode

Signal capture modes	M18
Controls and indicators of the storage section and their functions	M18
Storage resolution and operating modes	M19
Maximum signal frequency in storage mode	M20
Operating modes of the vertical amplifiers	M20
HAMEG Interface	M20
Safety note	M22

Short Instruction K 1

Front Panel Elements	
Folder with Front View	K 2

**Oscilloscope
HM 305**

Test Instructions

General	T 1
Cathode-Ray Tube: Brightness, Focus, Linearity, Raster Distortions	T 1
Astigmatism Check	T 1
Symmetry and Drift of the Vertical Amplifier	T 1
Calibration of the Vertical Amplifier	T 1
Transmission Performance of the Vertical Amplifier	T 2
Operating Modes:CHI/II-TRIG.I/II, DUAL, ADD, CHOP., INV.I/II and XY-Operation	T 2
Triggering Checks	T 3
Timebase	T 3
Component Tester	T 4
Trace Alignment	T 4

Service Instructions

General	S 1
Instrument Case Removal	S 1
Operating Voltages	S 1
Maximum and Minimum Brightness	S 1
Astigmatism control	S 1
Trigger Threshold	S 2
Trouble-Shooting the Instrument	S 2
Replacement of Components and Parts	S 2
Adjustments	S 2

Specifications

Vertical Deflection

Operating modes: Channel I or Ch. II separate, Channel I and II: alternate or chopped (Chopper Frequency approx. 0.5MHz)
Sum or Difference from Channel I and Ch. II, (both channels invertable).
XY-Mode: via Channel I and Channel II (analog).
Frequency range: 2x DC to 30MHz (-3dB).
 Risettime: <12ns. Overshoot: ≤1%.
Deflection coefficient: 12 calibrated positions from 5mV/div. to 20V/div. in 1-2-5 sequence, Accuracy in calibrated positions: ±3%, variable 2.5:1 to min. **50V/div.**
Y-Mag. x5 (calibrated) to **1mV/div.** ±5% in the frequency range DC to 10MHz (-3dB)
Input impedance: 1MΩ || 20pF.
 Input coupling: DC - AC - GD (Ground)
 Input voltage: max. 400V (DC + peak AC).

Triggering

Automatic (peak-to-peak): **<20Hz-100MHz** (≤0.5div.), Normal: **DC-100MHz**.
 Slope: positive or negative.
ALT.-Triggering: LED for trigger indication.
 Sources: Channel I, channel II, line, external.
 Coupling: **AC** (≥10Hz - 100MHz), **DC** (0 - 100MHz), **LF** (0 - ≤1.5kHz).
Triggering ext.: ≥0.3V_{pp} from 30Hz to 30MHz
Active TV-Sync-Separator (pos. and neg.)

Horizontal Deflection

Time coefficients (analog): 20 calibr. positions from 0.2s/div. to 0.1μs/div. in 1 - 2 - 5 sequence, Accuracy in calibrated positions: ±3%, variable 2.5:1 up to 0.5s/div., with **X-Magnification x10 to 10ns/div.** ±5%.
Hold-off time: variable to approx. 10:1.
Time coefficients (digital): 22 calibr. positions from 50s/div. to 5μs/div. in 1 - 2 - 5 sequence, with **X-Magnification x10 to 0.5μs/div.** ±5%.
Bandwidth X-amplifier: 0-3MHz (-3dB).
 Input X-amplifier via Channel II,
 Sensitivity see Channel II.
X-Y-phase shift: <3° below 220kHz.

Digital Storage


Operating modes: Refresh, Roll, Single (with Reset-button and Ready-LED), Hold Ch. I and Ch. II,
Automatic Dot Joiner.
Sampling rate: max. **40MS/s per channel realtime.**
 Pretrigger: 0 or 50%
Memory: 2048x8 bit per channel.
 Resolution: Y: **25 points/div.**, X: **200 points/div.**
 With X-magnification x10: X: 20 points/div..
 HAMEG-Interface for HAMEG-Graphics-Printer and Multifunction-Interface HO79-5

Component Tester

Test voltage: approx. 6V_{rms} (open circuit).
Test current: max. 5mA_{rms} (short circuit).
Test frequency: approx. 50Hz
 One test lead is grounded (Safety Earth).

General Information

CRT: D14-364GY/123 or ER151-GH/-, rectangular screen (8x10cm) internal graticule
Acceleration voltage: approx 2000V
Trace rotation: adjustable on front panel
Calibrator: square-wave generator (t_r <4ns) ≈1kHz/1MHz; Output: 0.2V ±1% and 2V
Line voltage: 100-240V AC ±10%, 50/60Hz
Power consumption: approx. 46 Watt at 50Hz.
 Min./Max. ambient temperature: -10°C...+40°C
Protective system: Safety class I (IEC1010-1)
 Weight: approx. 6kg, color: techno-brown
 Cabinet: W 285, H 125, D 380 mm
 Subject to change without notice. 3/95

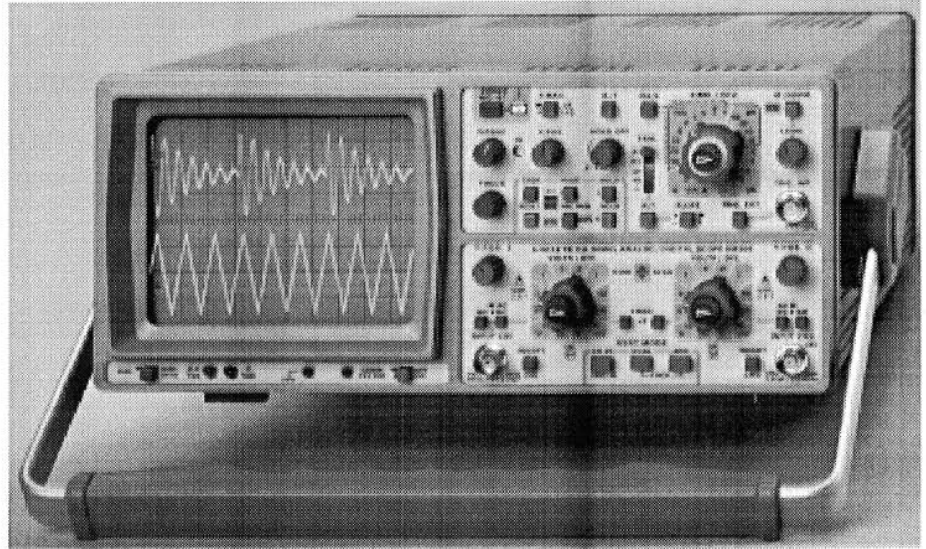

Analog-/Digital-Oscilloscope HM 305

Analog: 2 Channels DC-30MHz, max. 1mV/div., Comp.-Tester
 Time base 0.2s-10ns/div., Triggering DC-100MHz.

Digital: Max. Sampling rate 2x40MS/s, Storage 2x 2048x8 bit,
 Time base 50s-0.5μs/cm, Pre-Trigger, Dot-Joiner.


The worldwide success of HAMEG's HM205 oscilloscope has led to the introduction of the new and improved **HM305** Analog/Digital oscilloscope. This instrument offers increased performance and extended specifications over its predecessor.

The maximum storage mode sampling rate has been raised to **40MS/s** for each channel. In the single event capture mode, a **2MHz** signal would be sampled **20 times** per signal period. The integrated **"dot-join"** function performs a linear interpolation, which connects the individual sampling points to form a smooth curve. A **2,048 bytes/channel** memory enables extremely **fine horizontal resolution**. This yields a display that contains over 200 sampled points per division. The **HM305** offers an outstanding update rate. Pre-triggering (negative time triggering) allows the instrument to display and store signals that occur 50% (of the sweep duration) prior to triggering.


Operation of the storage section is very simple. When the **STORE** pushbutton is depressed, the input signals are sampled and stored. This can be accomplished in the **SINGLE, REFRESH** and **ROLL** mode. Pushing the **HOLD** button freezes the memory contents. Stored data can be documented from the parallel, external **HAMEG Bus** output. The **HD148** Graphic Printer can be directly connected to the Bus or an optional HAMEG Multifunction Interface **HO79-5** can be used to offer RS-232, IEEE-488 and printer interfaces.

The Analog Mode features and operation of the **HM305** are easy to use and are similar to those of the HM303. Energy and weight reduction are accomplished through the use of a **switching mode power supply**, which accepts a wide range of line voltages without switch or jumper changes. Rotary switches use logic level (cold) switching to configure sensitive signal paths for optimized performance. Transition between Analog and Storage Mode signal measurements are easily accomplished with the **HM305** which has an ideal "hands-on" feel and is perfect for a wide array of measurement tasks.

Screen photo of stored video signals

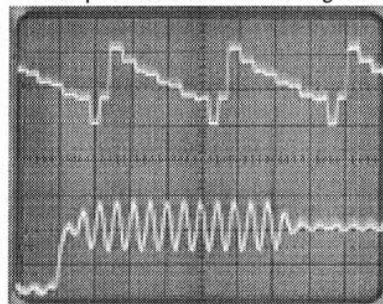

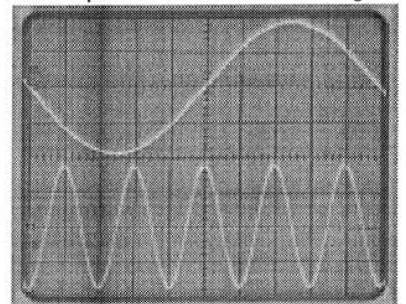


Screen photo of stored sine wave signals



Accessories supplied: Line Cord, Operators Manual, 2 Probes 1:1/10:1

Operating Instructions

 Symbols

-  ATTENTION - refer to manual
-  Danger - High voltage
-  Protective ground (earth) terminal

General Information

This oscilloscope is easy to operate. The logical arrangement of the controls allows anyone to quickly become familiar with the operation of the instrument, however, experienced users are also advised to read through these instructions so that all functions are understood.


Immediately after unpacking, the instrument should be checked for mechanical damage and loose parts in the interior. If there is transport damage, the supplier must be informed immediately. The instrument must then not be put into operation.

Use of tilt handle

To view the screen from the best angle, there are three different positions (C, D, E) for setting up the instrument. If the instrument is set down on the floor after being carried, the handle automatically remains in the upright carrying position (A).

In order to place the instrument onto a horizontal surface, the handle should be turned to the upper side of the oscilloscope (C). For the D position (10° inclination), the handle should be turned to the opposite direction of the carrying position until it locks in place automatically underneath the instrument. For the E position (20° inclination), the handle should be pulled to release it from the D position and swing backwards until it locks once more.

The handle may also be set to a position for horizontal carrying by turning it to the upper side to lock in the B position. At the same time, the instrument must be lifted, because otherwise the handle will jump back.

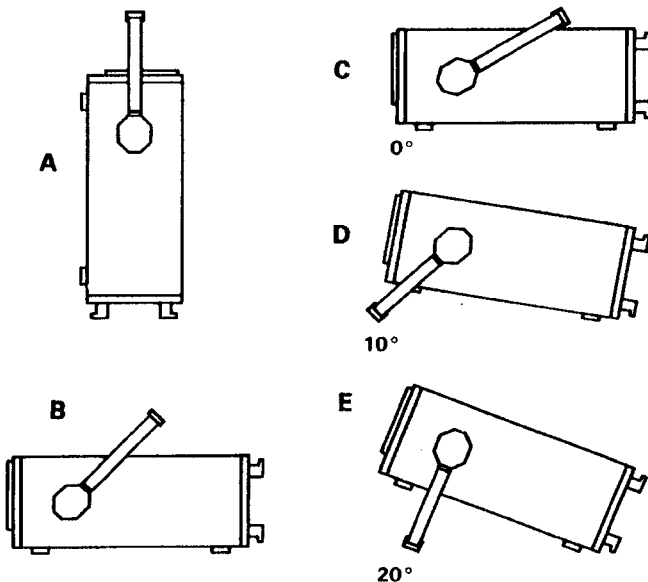

Safety

This instrument has been designed and tested in accordance with **IEC Publication 1010-1, Safety requirements for electrical equipment for measurement, control, and laboratory use**. The CENELEC regulations EN 61010-1 correspond to this standard. It has left the factory in a safe condition. This instruction manual contains important information and warnings which have to be followed by the user to ensure safe operation and to retain the oscilloscope in a safe condition. The case, chassis and all measuring terminals are connected to the protective earth contact of the appliance inlet. The instrument operates according to **Safety Class I** (three-conductor power cord with protective earthing conductor and a plug with earthing contact). The mains/line plug shall only be inserted in a socket outlet provided with a protective earth contact. The protective action must not be negated by the use of an extension cord without a protective conductor.

The mains/line plug should be inserted before connections are made to measuring circuits.

The grounded accessible metal parts (case, sockets, jacks) and the mains/line supply contacts (line/live, neutral) of the instrument have been tested against insulation breakdown with 2200V DC.

Under certain conditions, 50Hz or 60Hz hum voltages can occur in the measuring circuit due to the interconnection with other mains/line powered equipment or instruments. This can be avoided by using an isolation transformer (Safety Class II) between the mains/line outlet and the power plug of the device being investigated.

Most cathode-ray tubes develop X-rays. However, **the dose equivalent rate falls far below the maximum permissible value of 36pA/kg (0.5mR/h)**.

Whenever it is likely that protection has been impaired, the instrument shall be made inoperative and be secured against any unintended operation. The protection is likely to be impaired if, for example, the instrument

- shows visible damage,
- fails to perform the intended measurements,
- has been subjected to prolonged storage under unfavourable conditions (e.g. in the open or in moist environments),
- has been subject to severe transport stress (e.g. in poor packaging).

Operating conditions

The instrument has been designed for indoor use.

The permissible ambient temperature range during operation is +10°C (+50°F) ... +40°C (+104°F). It may occasionally be subjected to temperatures between +10°C (+50°F) and -10°C (+14°F) without degrading its safety. The permissible ambient temperature range for storage or transportation is -40°C (-40°F) ... +70°C (+158°F).

The maximum operating altitude is up to 2200m (non-operating 15000m). The maximum relative humidity is up to 80%.

If condensed water exists in the instrument it should be acclimatized before switching on. In some cases (e.g. extremely cold oscilloscope) two hours should be allowed before the instrument is put into operation. The instrument should be kept in a clean and dry room and must not be operated in explosive, corrosive, dusty, or moist environments. The oscilloscope can be operated in any position, but the convection cooling must not be impaired. The ventilation holes may not be covered. For continuous operation the instrument should be used in the horizontal position, preferably tilted upwards, resting on the tilt handle.

The specifications stating tolerances are only valid if the instrument has warmed up for 30 minutes at an ambient temperature between +15°C (+59°F) and +30°C (+86°F). Values without tolerances are typical for an average instrument.

Warranty

HAMEG warrants to its Customers that the products it manufactures and sells will be free from defects in materials and workmanship for a **period of 2 years**. This warranty shall not apply to any defect, failure or damage caused by improper use or inadequate maintenance and care. HAMEG shall not be obliged to provide service under this warranty to repair damage resulting from attempts by personnel other than HAMEG representatives to install, repair, service or modify these products.

In order to obtain service under this warranty, Customers must contact and notify the distributor who has sold the product.

Each instrument is subjected to a quality test with 10 hour burn-in before leaving the production. Practically all early failures are detected by this method. In the case of shipments by post, rail or carrier it is recommended that the original packing is carefully preserved. Transport damages and damage due to gross negligence are not covered by the guarantee.

In the case of a complaint, a label should be attached to the housing of the instrument which describes briefly the faults observed. If at the same time the name and telephone number (dialing code and telephone or direct number or department designation) is stated for possible queries, this helps towards speeding up the processing of guarantee claims.

Maintenance

Various important properties of the oscilloscope should be carefully checked at certain intervals. Only in this way is it largely certain that all signals are displayed with the accuracy on which the technical data are based. The test methods described in the test plan of this manual can be performed without great expenditure on measuring instruments. However, purchase of the HAMEG scope tester HZ 60, which despite its low price is highly suitable for tasks of this type, is very much recommended.

The exterior of the oscilloscope should be cleaned regularly with a dusting brush. Dirt which is difficult to remove on the casing and handle, the plastic and aluminium parts, can be removed with a moistened cloth (99% water +1% mild detergent). Spirit or washing benzine (petroleum ether) can be used to remove greasy dirt. The screen may be cleaned with water or washing benzine (but not with spirit (alcohol) or solvents), it must then be wiped with a dry clean lint-free cloth. Under no circumstances may the cleaning fluid get into the instrument. The use of other cleaning agents can attack the plastic and paint surfaces.

Protective Switch-Off

This instrument is equipped with a switch mode power supply. It has both overvoltage and overload protection, which will cause the switch mode supply to limit power consumption to a minimum.

In this case a ticking noise may be heard.

Power supply

The oscilloscope operates on mains/line voltages between 100V_{AC} and 240V_{AC}. No means of switching to different input voltages has therefore been provided.


The power input fuses are externally accessible. The fuseholder is located above the 3-pole power connector. The power input fuses are externally accessible, if the rubber connector is removed. The fuseholder can be released by pressing its plastic retainers with the aid of a small screwdriver. The retainers are located on the right and left side of the holder and must be pressed towards the center. The fuse(s) can then be replaced and pressed in until locked on both sides.

Use of patched fuses or short-circuiting of the fuseholder is not permissible; HAMEG assumes no liability whatsoever for any damage caused as a result, and all warranty claims become null and void.

Fuse type:

Size **5x20mm**; 0.8A, 250V AC fuse; must meet IEC specification 127, Sheet III (or DIN 41 662 or DIN 41 571, sheet 3).

Time characteristic: **time-lag**.

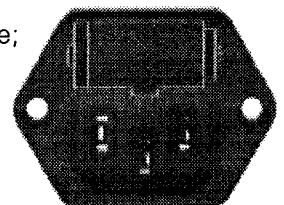

Type of signal voltage

With the HM 305, most repetitive signals in the frequency range up to **at least 30MHz** (-3dB) can be examined. Sinewave signals of 50MHz are displayed with a height of approx. 50% (-6dB). However when examining square or pulse type waveforms, attention must be paid to the **harmonic content** of such signals. The repetition frequency (fundamental frequency) of the signal must therefore be significantly smaller than the upper limit frequency of the vertical amplifier.

Displaying composite signals can be difficult, especially if they contain no repetitive higher amplitude content which can be used for triggering. This is the case with bursts, for instance. To obtain a well-triggered display in this case, the assistance of the **variable holdoff** and/or variable time control may be required. Television **video signals** are relatively easy to trigger using the built-in **TV-Sync-Separator (TV)**.

For optional operation as a DC or AC voltage amplifier, the vertical amplifier input is provided with a **DC/AC** switch. The **DC** position should only be used with a series-connected attenuator probe or at very low frequencies or if the measurement of the DC voltage content of the signal is absolutely necessary.


When displaying very low frequency pulses, the flat tops may be sloping with **AC** coupling of the vertical amplifier (**AC** limit frequency approx. 1.6 Hz for 3dB). In this case, **DC** operation is preferred, provided the signal voltage is not superimposed on a too high DC level. Otherwise a capacitor of adequate capacitance must be connected to the input of the vertical amplifier with DC coupling. This capacitor must have a sufficiently high breakdown voltage rating. **DC** coupling is also recommended for the display of logic and pulse signals, especially if the pulse duty factor changes constantly. Otherwise the display will move upwards or downwards at each change. Pure direct voltages can only be measured with **DC**-coupling.

Amplitude Measurements

In general electrical engineering, alternating voltage data normally refers to effective values (rms = root-mean-square value). However, for signal magnitudes and voltage designations in oscilloscope measurements, the peak-to-peak voltage (V_{pp}) value is applied. The latter corresponds to the real potential difference between the most positive and most negative points of a signal waveform.

If a sinusoidal waveform, displayed on the oscilloscope screen, is to be converted into an effective (rms) value, the resulting peak-to-peak value must be divided by $2\sqrt{2} = 2.83$. Conversely, it should be observed that sinusoidal voltages indicated in V_{rms} (V_{eff}) have 2.83 times the potential

difference in V_{pp} . The relationship between the different voltage magnitudes can be seen from the following figure.

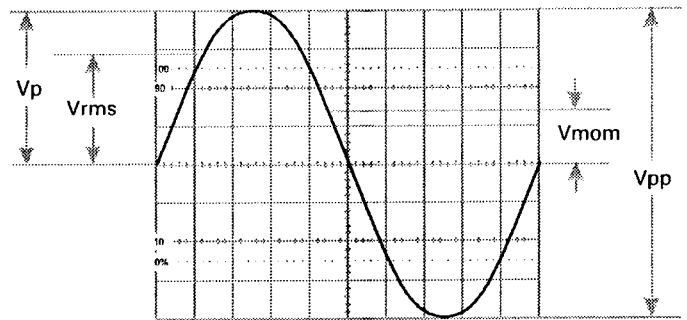

Voltage values of a sine curve

V_{rms} = effective value; V_p = simple peak or crest value;
 V_{pp} = peak-to-peak value; V_{mom} = momentary value.

The minimum signal voltage which must be applied to the Y input for a trace of 1 div. height is **1mV_{pp}** when the **Y-MAG. x5** pushbutton is depressed, the **VOLTS/DIV.** switch is set to 5mV/div., and the vernier is set to **CAL** by turning the **fine adjustment knob** of the VOLTS/DIV. switch fully clockwise. However, smaller signals than this may also be displayed. The **deflection coefficients** on the input attenuators are indicated in **mV/div.** or **V/div.** (peak-to-peak value).

The magnitude of the applied voltage is ascertained by multiplying the selected deflection coefficient by the vertical display height in div.

If an attenuator probe x10 is used, a further multiplication by a factor of 10 is required to ascertain the correct voltage value.

For exact amplitude measurements, the variable control on the attenuator switch must be set to its calibrated detent CAL. When turning the variable control ccw, the sensitivity will be reduced by a factor of 2.5.

Therefore every intermediate value is possible within the 1-2-5 sequence.

With direct connection to the vertical input, signals **up to 400V_{pp}** may be displayed (attenuator set to **20V/div.**, variable control to left stop).

With the designations

H = display height in div.,

U = signal voltage in V_{pp} at the vertical input,

D = deflection coefficient in **V/div.** at attenuator switch,

the required value can be calculated from the two given quantities:

$$U = D \cdot H \qquad H = \frac{U}{D} \qquad D = \frac{U}{H}$$

However, these three values are not freely selectable. They have to be within the following limits (trigger threshold, accuracy of reading):

H between 0.5 and 8div., if possible 3.2 to 8div.,
U between 1mV_{pp} and 160V_{pp},
D between 1mV/div. and 20V/div. in 1-2-5 sequence.

Examples:

Set deflection coefficient **D** = 50mV/div. $\hat{=}$ 0.05V/div.,
observed display height **H** = 4.6div.,
required voltage U = 0.05x4.6 = **0.23V_{pp}**.

Input voltage **U** = 5V_{pp},
set deflection coefficient **D** = 1V/div.,
required display height H = 5:1 = **5div.**

Signal voltage $U = 230V_{rms} \times 2\sqrt{2} = 651V_{pp}$
(voltage > 160V_{pp}, with probe 10:1: **U** = 65.1V_{pp}),
desired display height **H** = min. 3.2div., max. 8div.,
max. deflection coefficient **D** = 65.1:3.2 = 20.3V/div.,
min. deflection coefficient **D** = 65.1:8 = 8.1V/div.,
adjusted deflection coefficient D = **10V/div.**


The input voltage must not exceed 400V, independent from the polarity. If an AC voltage which is superimposed on a DC voltage is applied, the maximum peak value of both voltages must not exceed + or -400V. So for AC voltages with a mean value of zero volt the maximum peak to peak value is 800V_{pp}.

If attenuator probes with higher limits are used, the probes limits are valid only if the oscilloscope is set to DC input coupling. If DC voltages are applied under AC input coupling conditions the oscilloscope maximum input voltage value remains 400V. The attenuator consists of a resistor in the probe and the 1MΩ input resistor of the oscilloscope, which are disabled by the AC input coupling capacity when AC coupling is selected. This also applies to DC voltages with superimposed AC voltages. It also must be noted that due to the capacitive resistance of the AC input coupling capacitor, the attenuation ratio depends on the signal frequency. For sinewave signals with frequencies higher than 40Hz this influence is negligible.

In the GD (ground coupling) setting, the signal path is interrupted directly beyond the input. This causes the attenuator to be disabled again, but now for both DC and AC voltages.

With the above listed exceptions HAMEG 10:1 probes can be used for DC measurements up to 600V or AC voltages (with a mean value of zero volt) of 1200V_{pp}. The 100:1 probe HZ53 allows for 1200V DC or 2400V_{pp} for AC.

It should be noted that its AC_{peak} value is derated at higher frequencies. If a normal x10 probe is used to measure high voltages there is the risk that the compensation trimmer bridging the attenuator series resistor will break down causing damage to the input of the oscilloscope. However, if for example only the residual ripple of a high voltage is to be displayed on the oscilloscope, a normal x10 probe is sufficient. In this case, an appropriate high voltage capacitor (approx. 22-68nF) must be connected in series with the input tip of the probe.

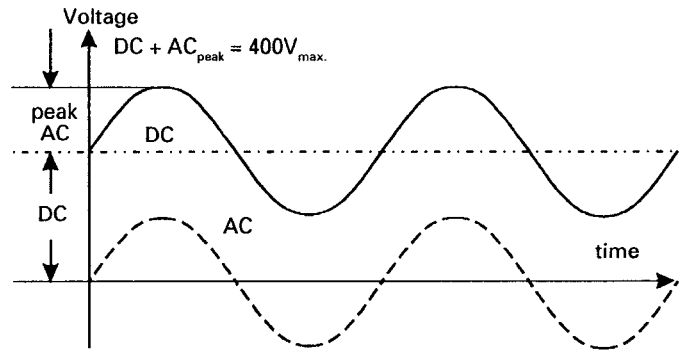

Total value of input voltage
The dotted line shows a voltage alternating at zero volt level. If superimposed on a DC voltage, the addition of the positive peak and the DC voltage results in the max. voltage (DC + AC_{peak}).

With **Y-POS.** control (input coupling to **GD**) it is possible to use a horizontal graticule line as **reference line for ground potential** before the measurement. It can lie below or above the horizontal central line according to whether positive and/or negative deviations from the ground potential are to be measured.

Time Measurements

As a rule, most signals to be displayed are periodically repeating processes, also called periods. The number of periods per second is the repetition frequency. Depending on the time base setting of the **TIME/DIV.** switch, one or several signal periods or only a part of a period can be displayed. The time coefficients are stated in **s/div., ms/div.** and **μs/div.** on the **TIME/DIV.**-switch. The scale is accordingly divided into three fields.

The duration of a signal period or a part of it is determined by multiplying the relevant time (horizontal distance in div.) by the time coefficient set on the TIME/DIV.-switch.

The variable time control (identified with an arrow knob cap) must be in its calibrated position CAL. (arrow pointing horizontally to the right).

With the designations

- L** = displayed wave **length in div.** of one period,
- T** = **time in seconds** for one period,
- F** = recurrence **frequency in Hz** of the signal,
- T_c** = **time coefficient in s/div.** on timebase switch and the relation **F = 1/T**, the following equations can be stated:

$$T = L \cdot T_c \quad L = \frac{T}{T_c} \quad T_c = \frac{T}{L}$$

$$F = \frac{1}{L \cdot T_c} \quad L = \frac{1}{F \cdot T_c} \quad T_c = \frac{1}{L \cdot F}$$

With depressed X-MAG. (x10) pushbutton the T_c value must be divided by 10.

However, these four values are not freely selectable. They have to be within the following limits:

- L** between 0.2 and 10div., if possible 4 to 10div.,
- T** between 0.01μs and 2s,
- F** between 0.5Hz and 30MHz,
- T_c** between 0.1μs/div. and 0.2s/div. in 1-2-5 sequence (with **X-MAG. (x10)** in out position), and
- T_c** between 10ns/div. and 20ms/div. in 1-2-5 sequence (with pushed **X-MAG. (x10)** pushbutton).

Examples:

Displayed wavelength **L** = 7div.,
 set time coefficient **T_c** = 0.1µs/div.,
required period T = 7x0.1x10⁻⁶ = **0.7µs**
required rec. freq. F = 1:(0.7x10⁻⁶) = **1.428MHz.**

Signal period **T** = 1s,
 set time coefficient **T_c** = 0.2s/div.,
required wavelength L = 1:0.2 = **5div..**

Displayed ripple wavelength **L** = 1div.,
 set time coefficient **T_c** = 10ms/div.,
required ripple freq. F = 1:(1x10x10⁻³) = **100Hz.**

TV-line frequency **F** = 15625Hz,
 set time coefficient **T_c** = 10µs/div.,
required wavelength L = 1:(15 625x10⁻⁵) = **6.4div..**


Sine wavelength **L** = min. 4div., max. 10div.,
 Frequency **F** = 1kHz,
 max. time coefficient **T_c** = 1:(4x10³) = 0.25ms/div.,
 min. time coefficient **T_c** = 1:(10x10³) = 0.1ms/div.,
set time coefficient T_c = 0.2ms/div.,
required wavelength L = 1:(10³x0.2x10⁻³) = **5div.**

Displayed wavelength **L** = 0.8div.,
 set time coefficient **T_c** = 0.5µs/div.,
pressed X-MAG. (x10) button: T_c = 0.05µs/div.,
required rec. freq. F = 1:(0.8x0.05x10⁻⁶) = **25MHz,**
required period T = 1:(25x10⁶) = **40ns.**

If the time is relatively short as compared with the complete signal period, an expanded time scale should always be applied (**X-MAG. (x10)** button pressed). In this case, the ascertained time values have to be divided by **10**. The time interval of interest can be shifted to the screen center using the **X-POS.** control.

When investigating pulse or square waveforms, the critical feature is the **risetime of the voltage step**. To ensure that transients, ramp-offs, and bandwidth limits do not unduly influence the measuring accuracy, the risetime is generally measured between **10%** and **90%** of the vertical pulse height. For measurement adjust the Y attenuator switch with its variable control together with the **Y-POS.** control so that the pulse height is precisely aligned with the 0 and 100% lines of the internal graticule. The 10% and 90% points of the signal will now coincide with the 10% and 90% graticule lines. **The risetime is given by the product of the horizontal distance in div. between these two coincidence points and the time coefficient setting.** If X x10 magnification is used, this product must be divided by 10. The **fall time** of a pulse can also be measured by using this method.

The following figure shows correct positioning of the oscilloscope trace for accurate risetime measurement.

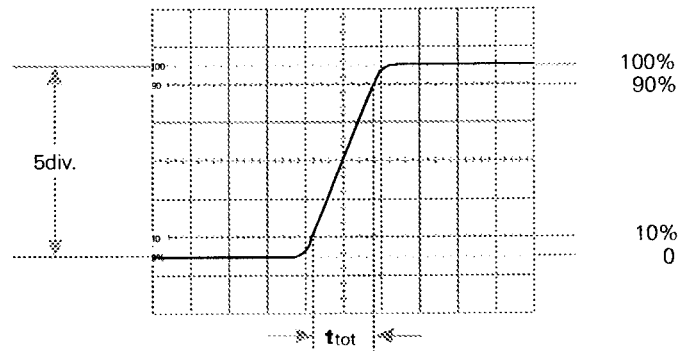

With a time coefficient of 0.2µs/div. and pushed X-MAG x10 button the example shown in the above figure results in a measured total risetime of

$$t_{tot} = 1.6div \cdot 0.2\mu s/div. : 10 = 32ns$$

When very fast risetimes are being measured, the risetimes of the oscilloscope amplifier and of the attenuator probe has to be deducted from the measured time value. The risetime of the signal can be calculated using the following formula.

$$t_r = \sqrt{t_{tot}^2 - t_{osc}^2 - t_p^2}$$

In this t_{tot} is the total measured risetime, t_{osc} is the risetime of the oscilloscope amplifier (approx. 12ns), and t_p the risetime of the probe (e.g. = 2ns). If t_{tot} is greater than 100ns, then t_{tot} can be taken as the risetime of the pulse, and calculation is unnecessary.

Calculation of the example in the figure above results in a signal risetime

$$t_r = \sqrt{32^2 - 12^2 - 2^2} = 29.6ns$$

The measurement of the rise or fall time is not limited to the trace dimensions shown in the above diagram. It is only particularly simple in this way. In principle it is possible to measure in any display position and at any signal amplitude. It is only important that the full height of the signal edge of interest is visible in its full length at not too great steepness and that the horizontal distance at 10% and 90% of the amplitude is measured. If the edge shows rounding or overshooting, the 100% should not be related to the peak values but to the mean pulse heights. Breaks or peaks (glitches) next to the edge are also not taken into account. With very severe transient distortions, the rise and fall time measurement has little meaning. For amplifiers with approximately constant group delay (therefore good pulse transmission performance) the following numerical relationship between rise time **t_r** (in ns) and bandwidth **B** (in MHz) applies:

$$t_r = \frac{350}{B} \quad B = \frac{350}{t_r}$$

Connection of Test Signal

Caution:When connecting unknown signals to the oscilloscope input, always use automatic triggering and set the **DC-AC** input coupling switch to **AC**. The attenuator switch should initially be set to **20V/div.**

Sometimes the trace will disappear after an input signal has been applied. The attenuator switch must then be turned back to the left, until the vertical signal height is only 3-8div. With a signal amplitude greater than $160V_{pp}$, an attenuator probe must be inserted before the vertical input. If, after applying the signal, the trace is nearly blanked, the period of the signal is probably substantially longer than the set value on the **TIME/DIV.** switch. It should be turned to the left to an adequately larger time coefficient.

The signal to be displayed can be connected directly to the Y-input of the oscilloscope with a shielded test cable such as HZ 32 or HZ 34, or reduced through a x10 or x100 attenuator probe. The use of test cables with high impedance circuits is only recommended for relatively low frequencies (up to approx. 50 kHz). For higher frequencies, the signal source must be of low impedance, i.e. matched to the characteristic resistance of the cable (as a rule 50 Ohm). Especially when transmitting square and pulse signals, a resistor equal to the characteristic impedance of the cable must also be connected across the cable directly at the Y-input of the oscilloscope. When using a 50Ω cable such as the HZ 34, a 50Ω through termination type HZ22 is available from HAMEG. When transmitting square signals with short rise times, transient phenomena on the edges and top of the signal may become visible if the correct termination is not used. A terminating resistance is sometimes recommended with sine signals as well. Certain amplifiers, generators or their attenuators maintain the nominal output voltage independent of frequency only if their connection cable is terminated with the prescribed resistance. Here it must be noted that the terminating resistor HZ22 will only dissipate a maximum of 2 Watts. This power is reached with $10 V_{rms}$ or at $28.3 V_{pp}$ with sine signal.

If a x10 or x100 attenuator probe is used, no termination is necessary. In this case, the connecting cable is matched directly to the high impedance input of the oscilloscope. When using attenuator probes, even high internal impedance sources are only slightly loaded (approx. $10 M\Omega \parallel 16 pF$ or $100 M\Omega \parallel 9 pF$ with HZ 53). Therefore, if the voltage loss due to the attenuation of the probe can be compensated by a higher amplitude setting, the probe should always be used. The series impedance of the probe provides a certain amount of protection for the input of the vertical amplifier. Because of their separate manufacture, all attenuator probes are only partially compensated, therefore accurate compensation must be performed on the oscilloscope (see "Probe compensation page M7).

Standard attenuator probes on the oscilloscope normally reduce its bandwidth and increase the rise time. In all cases where the oscilloscope bandwidth must be fully

utilized (e.g. for pulses with steep edges) we strongly advise using the **probes HZ 51** (x10) **HZ 52** (x10 HF) and **HZ 54** (x1 and x10). This can save the purchase of an oscilloscope with larger bandwidth and has the advantage that defective components can be ordered from HAMEG and replaced by oneself. The probes mentioned have a HF-calibration in addition to low frequency calibration adjustment. Thus a group delay correction to the upper limit frequency of the oscilloscope is possible with the aid of an 1MHz calibrator, e.g. HZ60.

In fact the bandwidth and rise time of the oscilloscope are not noticeably changed with these probe types and the waveform reproduction fidelity can even be improved because the probe can be matched to the oscilloscope's individual pulse response.

If a x10 or x100 attenuator probe is used, DC input coupling must always be used at voltages above 400V. With AC coupling of low frequency signals, the attenuation is no longer independent of frequency, pulses can show pulse tilts. Direct voltages are suppressed but load the oscilloscope input coupling capacitor concerned. Its voltage rating is max. 400 V (DC + peak AC). **DC** input coupling is therefore of quite special importance with a x100 attenuation probe which usually has a voltage rating of max. 1200 V (DC + peak AC). A **capacitor** of corresponding capacitance and voltage rating may be connected in **series with the attenuator** probe input for blocking DC voltage (e.g. for hum voltage measurement).

With all attenuator probes, the **maximum AC input voltage** must be **derated** with frequency usually above 20kHz. Therefore the derating curve of the attenuator probe type concerned must be taken into account.

The selection of the ground point on the test object is important when displaying small signal voltages. It should always be as close as possible to the measuring point. If this is not done, serious signal distortion may result from spurious currents through the ground leads or chassis parts. The ground leads on attenuator probes are also particularly critical. They should be as short and thick as possible. When the attenuator probe is connected to a BNC-socket, a BNC-adapter, which is often supplied as probe accessory, should be used. In this way ground and matching problems are eliminated.

Hum or interference appearing in the measuring circuit (especially when a small deflection coefficient is used) is possibly caused by multiple grounding because equalizing currents can flow in the shielding of the test cables (voltage drop between the protective conductor connections, caused by external equipment connected to the mains/line, e.g. signal generators with interference protection capacitors).

First Time Operation

Before applying power to the oscilloscope it is recommended that the following simple procedures are performed:

- Check that all pushbuttons are in the **out** position, i.e. released.
- Rotate the variable controls with arrows, i.e. **TIME/DIV.** variable control, **CH.I** and **CH.II** attenuator variable controls, and **HOLD OFF** control to their calibrated detent.
- Set all controls with marker lines to their midrange position (marker lines pointing vertically).
- The **TRIG.** selector lever switch in the X-field should be set to the position uppermost.
- Both **GD** input coupling pushbutton switches for **CH.I** and **CH.II** in the Y-field should be set to the **GD** position.

Switch on the oscilloscope by depressing the red **POWER** pushbutton. An LED will illuminate to indicate working order. The trace, displaying one baseline, should be visible after a short warm-up period of approx. 10 seconds. Adjust **Y-POS.I** and **X-POS.** controls to center the baseline. Adjust **INTENS.** (intensity) and **FOCUS** controls for medium brightness and optimum sharpness of the trace. The oscilloscope is now ready for use.

If only a spot appears (**CAUTION!** CRT phosphor can be damaged), reduce the intensity immediately and check that the **XY** pushbutton is in the released (out) position. If the trace is not visible, check the correct positions of all knobs and switches (particularly **AT/NORM.** button in out position).

To obtain the maximum life from the cathode-ray tube, the minimum intensity setting necessary for the measurement in hand and the ambient light conditions should be used.

Particular care is required when a single spot is displayed, as a very high intensity setting may cause damage to the fluorescent screen of the CRT. Switching the oscilloscope off and on at short intervals stresses the cathode of the CRT and should therefore be avoided.

The instrument is so designed that even incorrect operation will not cause serious damage. The pushbuttons control only minor functions, and it is recommended that before commencement of operation all pushbuttons are in the "out" position. After this the pushbuttons can be operated depending upon the mode of operation required.

The HM305 accepts all signals from DC (direct voltage) up to a frequency of at least 30MHz (-3dB). For sinewave

voltages the upper frequency limit will be 50MHz (-6dB). However, in this higher frequency range the vertical display height on the screen is limited to approx. 4-5div. The time resolution poses no problem. For example, with 50MHz and the fastest adjustable sweep rate (10ns/div.), one cycle will be displayed every 2div. The tolerance on indicated values amounts to $\pm 3\%$ in both deflection directions. All values to be measured can therefore be determined relatively accurately.

However, from approximately 10MHz upwards the measuring error will increase as a result of loss of gain. At 18MHz this reduction is about 10%. Thus, approximately 11% should be added to the measured voltage at this frequency. As the bandwidth of the amplifiers may differ slightly (normally between 30 and 35MHz), the measured values in the upper frequency range cannot be defined exactly. Additionally, as already mentioned, for frequencies above 30MHz the dynamic range of the display height steadily decreases. The vertical amplifier is designed so that the transmission performance is not affected by its own overshoot.

Trace Rotation TR

In spite of Mumetal-shielding of the CRT, effects of the earths magnetic field on the horizontal trace position cannot be completely avoided. This is dependent upon the orientation of the oscilloscope on the place of work. A centred trace may not align exactly with the horizontal center line of the graticule. A few degrees of misalignment can be corrected by a potentiometer accessible through an opening on the front panel marked TR.

Probe compensation and use

To display an undistorted waveform on an oscilloscope, the probe must be matched to the individual input impedance of the vertical amplifier.

For this purpose a square wave signal with a very fast rise time and minimum overshoot should be used, as the sinusoidal contents cover a wide frequency range. The frequency accuracy and the pulse duty factor are not of such importance.

The built-in calibration generator provides a square wave signal with a very fast risetime (<4ns), and switch-selectable frequencies of approx. 1kHz and 1MHz from two output sockets below the CRT screen.

This signal should not be used for frequency calibration!


One output provides $0.2V_{pp} \pm 1\%$ ($t_r < 4ns$) for 10:1 probes, and the other $2V_{pp}$ for 100:1 probes. When the attenuator switches are set to $5mV/div$ vertical deflection coefficient, these calibration voltages correspond to a screen amplitude of **4div**.

The output sockets have an internal diameter of 4.9mm to accommodate the internationally accepted shielding tube diameter of modern Probes and F-series slimline probes. Only this type of construction ensures the extremely short ground connections which are essential for an undistorted waveform reproduction of non-sinusoidal high frequency signals.

Adjustment at 1kHz

The C-trimmer adjustment (low frequency) compensates the capacitive loading on the oscilloscope input (approx. 20 pF for the HM 305). By this adjustment, the capacitive division assumes the same ratio as the ohmic voltage divider to ensure the same division ratio for high and low frequencies, as for DC. (For 1:1 probes or switchable probes set to 1:1, this adjustment is neither required nor possible). A baseline exactly parallel to the horizontal graticule lines is a major condition for accurate probe adjustments. (See also "Trace rotation **TR**").

Connect the probes (Types HZ51, 52, 53, 54, or HZ36) to the **CH.I** input. All pushbuttons should be released (in the out position). Set input coupling to DC, the attenuator to **5 mV/div.**, and **TIME/DIV.** switch to **0.2 ms/div.**, and all variable controls to **CAL.** position. Plug the the probe tip into the appropriate calibrator output socket, i.e. 10:1 probes into the **0.2V** socket, 100:1 probes into the **2V** socket.

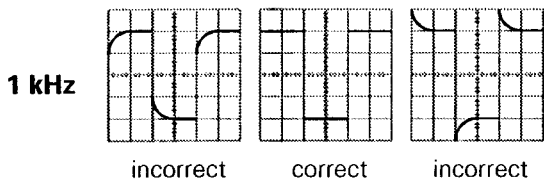

Approximately 2 complete waveform periods are displayed on the CRT screen. Now the compensation trimmer has to be adjusted. The location of the low frequency compensation trimmer can be found in the probe information sheet. Adjust the trimmer with the insulating screw driver provided until the tops of the square wave signal are exactly parallel to the horizontal graticule lines (see 1 kHz diagram). The signal height should then be $4 div. \pm 0.12div.$ ($= 3\%$). During this adjustment, the signal edges will remain invisible.

Adjustment at 1MHz

Probes HZ51, 52 and 54 can also be HF-compensated. They incorporate resonance de-emphasizing networks (R-trimmer in conjunction with inductances and capacitors) which permit probe compensation in the range of the upper frequency limit of the vertical oscilloscope amplifier. Only this compensative adjustment ensures optimum



utilisation of the full bandwidth, together with constant group delay at the high frequency end, thereby reducing characteristic transient distortion near the leading edge (e.g. overshoot, rounding, ringing, holes or bumps) to an absolute minimum.

Using the probes HZ51, 52 and 54, the full bandwidth of the HM305 can be utilized without risk of unwanted waveform distortion.

Prerequisite for this HF compensation is a square wave generator with fast risetime (typically 4 ns), and low output impedance (approx. 50Ω), providing 0.2V and 2V at a frequency of approx. 1MHz. The calibrator output of the HM305 meets these requirements when the **CAL.** pushbutton is depressed.

Connect the probe to CH.I input. Depress the **CAL.** pushbutton for 1MHz. All other pushbuttons should be released (out position). Set the CH.I input coupling to **DC**, attenuator switch to **5mV/div**, and **TIME/DIV.** switch to **0.2µs/div**. Set all variable controls to **CAL.** position.

Insert the probe tip into the output socket marked **0.2V**. A waveform will be displayed on the CRT screen, with leading and trailing edges clearly visible. For the HF-adjustment now to be performed, it will be necessary to observe the rising edge as well as the upper left corner of the pulse top. The location of the high frequency compensation trimmer(s) can also be found in the probe information sheet. These R-trimmer(s) have to be adjusted such that the beginning of the pulse is as straight as possible. Overshoot or excessive rounding are unacceptable. The adjustment is relatively easy if only one adjusting point is present. In case of several adjusting points the adjustment is slightly more difficult, but causes a better result. The rising edge should be as steep as possible, with a pulse top remaining as straight and horizontal as possible.

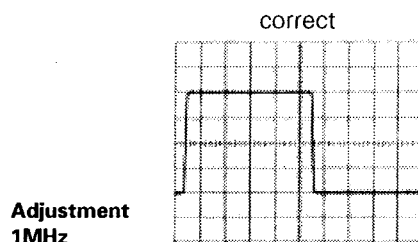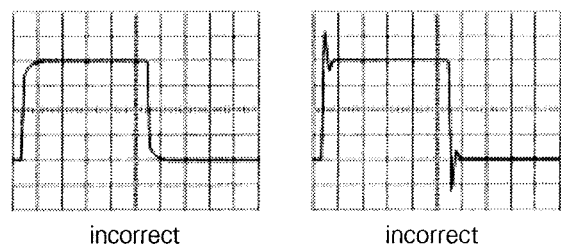

After completion of the HF-adjustment, the signal amplitude displayed on the CRT screen should have the same value as during the 1kHz adjustment.

Probes other than those mentioned above, normally have a larger tip diameter and may not fit into the calibrator outputs. Whilst it is not difficult for an experienced operator to build a suitable adapter, it should be pointed out that most of these probes have a slower risetime with the effect that the total bandwidth of scope together with probe may fall far below that of the HM305. Furthermore, the HF-adjustment feature is nearly always missing so that waveform distortion can not be entirely excluded.

The adjustment sequence must be followed in the order described, i.e. first at 1kHz, then at 1MHz. The calibrator frequencies should not be used for timebase calibration. The pulse duty cycle deviates from 1:1 ratio.

Prerequisites for precise and easy probe adjustments, as well as checks of deflection coefficients, are straight horizontal pulse tops, calibrated pulse amplitude, and zero-potential at the pulse base. Frequency and duty cycle are relatively uncritical. For interpretation of transient response, fast pulse risetimes and low-impedance generator outputs are of particular importance.

Providing these essential features, as well as switch-selectable output-frequencies, the calibrator of the HM305 can, under certain conditions, replace expensive squarewave generators when testing or compensating wideband-attenuators or -amplifiers. In such a case, the input of an appropriate circuit will be connected to one of the CAL.-outputs via a suitable probe.

The voltage provided at a high-impedance input ($1M\Omega || 15-50pF$) will correspond to the division ratio of the probe used ($10:1 = 20mV_{pp}$, $100:1 =$ also $20mV_{pp}$ from 2V output). Suitable probes are HZ51, 52, 53, and 54.

Operating modes of the vertical amplifiers

The vertical amplifier is set to the desired operating mode by using the 3 pushbuttons (CH I/II, DUAL and ADD) in the Y field of the front panel. For **Mono** mode all 3 buttons must be in their released positions; only channel I can then be operated. The button CH I/II-TRIG.I/II must be depressed in mono mode for Channel II. The internal triggering is simultaneously switched over to Channel II with this button.

If the **DUAL** button is depressed, both channels are working. Two signals can be displayed together in this button position (alternate mode) if the time-base setting and the repetition frequency of the signal are suited. This mode is not suitable for displaying very slow-running processes. The display then flickers too much or it appears to jump. If the **ADD** button is depressed **in addition** to **DUAL**, both channels are switched over constantly at a high frequency within a sweep period (**CHOP** mode). Low

frequency signals **below 1kHz, or with periods longer than 1ms** are then also displayed without flicker. CHOP mode is not recommended for signals with higher repetition frequencies.

If only the **ADD** button is depressed, the signals of both channels are algebraically added ($\pm I \pm II$). Whether the resulting display shows the **sum** or **difference** is dependent on the phase relationship or the polarity of the signals **and** on the positions of the **INVERT** buttons.

In-phase input voltages:

Both **INVERT CH.I and INVERT CH.II** buttons released or depressed = sum.

Only one **INVERT** button depressed = difference.

Antiphase input voltages:

Both **INVERT** buttons released or depressed = difference.

INVERT CH.I or INVERT CH.II button depressed = sum.

In the **ADD** mode the vertical display position is dependent upon the **Y-POS.** setting of **both** channels. The same attenuator switch position is normally used for both channels with algebraic addition.

Please note that the Y-POS. settings are added too but are not affected by the **INVERT** pushbuttons.

Differential measurement techniques allow direct measurement of the voltage drop across floating components (both ends above ground). Two identical probes should be used for both vertical inputs. In order to avoid ground loops, use a separate ground connection and do not use the probe ground leads or cable shields.

X-Y Operation (analog mode)

For **X-Y operation**, the pushbutton in the X field marked **XY** must be depressed. The X signal is then derived from the **INPUT CH II (X)**. **The calibration of the X signal during X-Y operation is determined by the setting of the Channel II input attenuator and variable control. The instrument automatically switches to analog mode if XY-mode is selected.**

This means that the sensitivity ranges and input impedances are identical for both the X and Y axes. However, the **Y-POS.II** control is disconnected in this mode. Its function is taken over by the **X-POS.** control. It is important to note that the **X-MAG. (x10)** facility, normally used for expanding the sweep, should not be operated in the X-Y mode. It should also be noted that the bandwidth of the X amplifier is $\geq 3MHz$ ($-3dB$), and therefore an increase in phase difference between both axes is noticeable from 50kHz upwards.


The inversion of the X-input signal using the **INVERT CH.II** button is not possible.

Lissajous figures can be displayed in the X-Y mode for certain measuring tasks:

- Comparing two signals of different frequency or bringing one frequency up to the frequency of the other signal. This also applies for whole number multiples or fractions of the one signal frequency.
- Phase comparison between two signals of the same frequency.

Phase comparison with Lissajous figures

The following diagrams show two sine signals of the same frequency and amplitude with different phase angles.

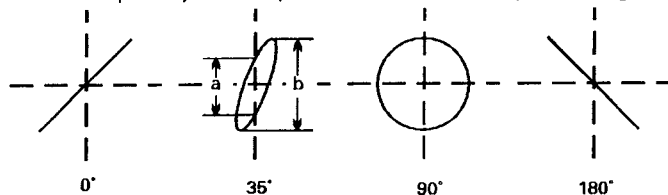

Calculation of the phase angle or the phase shift between the X and Y input voltages (after measuring the distances **a** and **b** on the screen) is quite simple with the following formula, and a pocket calculator with trigonometric functions. Apart from the reading accuracy, the signal height has no influence on the result.

$$\sin \varphi = \frac{a}{b}$$

$$\cos \varphi = \sqrt{1 - \left(\frac{a}{b}\right)^2}$$

$$\varphi = \arcsin \frac{a}{b}$$

The following must be noted here:

- Because of the periodic nature of the trigonometric functions, the calculation should be limited to angles $\leq 90^\circ$. However here is the advantage of the method.
- Do not use a too high test frequency. The phase shift of the two oscilloscope amplifiers of the HM 305 in the X-Y mode can exceed an angle of 3° above 220 kHz.
- It cannot be seen as a matter of course from the screen display if the test voltage leads or lags the reference voltage. A CR network before the test voltage input of the oscilloscope can help here. The $1\text{ M}\Omega$ input resistance can equally serve as R here, so that only a suitable capacitor C needs to be connected in series. If the aperture width of the ellipse is increased (compared with C short-circuited), then the test voltage leads the reference voltage and vice versa. This applies only in the region up to 90° phase shift. Therefore C should be sufficiently large and produce only a relatively small just observable phase shift.

Should both input voltages be missing or fail in the X-Y mode, a very bright light dot is displayed on the screen. This dot can burn into the phosphor at a too high brightness setting (INTENS. knob) which causes either a lasting loss of brightness, or in the extreme case, complete destruction of the phosphor at this point.


Phase difference measurement in DUAL mode

A larger phase difference between two input signals of the same frequency and shape can be measured very simply on the screen in Dual mode (**DUAL** button depressed). The time base should be triggered by the reference signal (phase position 0). The other signal can then have a leading or lagging phase angle. Alternate mode should be selected for frequencies $\geq 1\text{ kHz}$; the Chop mode is more suitable for frequencies $< 1\text{ kHz}$ (less flickering).

For greatest accuracy adjust not much more than one period and approximately the same height of both signals on the screen. The variable controls for amplitude and time base and the **LEVEL** knob can also be used for this adjustment without influence on the result. Both base lines are set onto the horizontal graticule center line with the **Y-POS.** knobs before the measurement. With sinusoidal signals, observe the zero (crossover point) transitions; the sine peaks are less accurate. If a sine signal is noticeably distorted by even harmonics, or if a DC voltage is present, **AC** coupling is recommended for **both** channels. If it is a question of pulses of the same shape, read off at steep edges.

Phase difference measurement in DUAL mode

- t** = horizontal spacing of the zero transitions in div.
- T** = horizontal spacing for one period in div.

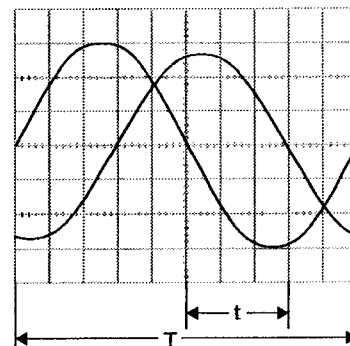

In the example illustrated, **t** = 3div. and **T** = 10div. The phase difference in degrees is calculated from

$$\varphi^\circ = \frac{t}{T} \cdot 360^\circ = \frac{3}{10} \cdot 360^\circ = 108^\circ$$

$$\text{arc } \varphi = \frac{t}{T} \cdot 2\pi = \frac{3}{10} \cdot 2\pi = 1,885\text{rad}$$

Relatively small phase angles at not too high frequencies can be measured more accurately in the X-Y mode with Lissajous figures.

Measurement of an amplitude modulation

The momentary amplitude u at time t of a HF-carrier voltage, which is amplitude modulated without distortion by a sinusoidal AF voltage, is in accordance with the equation

$$u = U_T \cdot \sin \Omega t + 0,5m \cdot U_T \cdot \cos(\Omega - \omega)t - 0,5m \cdot U_T \cdot \cos(\Omega + \omega)t$$

where U_T = unmodulated carrier amplitude
 $\Omega = 2\pi F$ = angular carrier frequency
 $\omega = 2\pi f$ = modulation angular frequency
 m = modulation factor (i.a. $\leq 1 \hat{=} 100\%$).

The lower side frequency $F-f$ and the upper side frequency $F+f$ arise because of the modulation apart from the carrier frequency F .

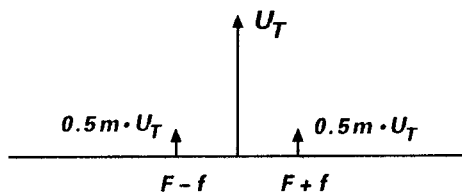


Figure 1
Amplitude and frequency spectrum for AM display ($m = 50\%$)

The display of the amplitude-modulated HF oscillation can be evaluated with the oscilloscope provided the frequency spectrum is inside the oscilloscope bandwidth. The time base is set so that several wave of the modulation frequency are visible. Strictly speaking, triggering should be external with modulation frequency (from the AF generator or a demodulator). However, internal triggering is frequently possible with normal triggering (**AT/NORM.** button depressed) using a suitable **LEVEL** setting and possibly also using the time variable adjustment.

Oscilloscope setting for a signal according to figure 2:
 Depress no buttons. **Y: CH. I; 20mV/div.; AC.**
TIME/DIV.: 0.2ms/div.
 Triggering: **NORMAL**; with **LEVEL**-setting; **internal (or external) triggering.**

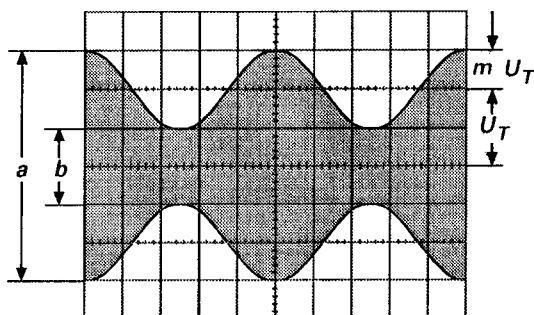


Figure 2
Amplitude modulated oscillation: $F = 1 \text{ MHz}$; $f = 1 \text{ kHz}$;
 $m = 50\%$; $U_T = 28.3 \text{ mV}_{\text{rms}}$.

If the two values a and b are read from the screen, the modulation factor is calculated from

$$m = \frac{a-b}{a+b} \quad \text{or} \quad m = \frac{a-b}{a+b} \cdot 100 [\%]$$

where $a = U_T(1+m)$ and $b = U_T(1-m)$.

The variable controls for amplitude and time can be set arbitrarily in the modulation factor measurement. Their position does not influence the result.

Triggering and time base

Time related amplitude changes on a measuring signal (AC voltage) are displayable in Yt-mode. In this mode the signal voltage deflects the beam in vertical direction while the timebase generator moves the beam from the left to the right of the screen (time deflection).

Normally there are periodically repeating waveforms to be displayed. Therefore the time base must repeat the time deflection periodically too. To produce a stationary display, the time base must only be triggered if the signal height and slope condition coincide with the former time base start conditions. A DC voltage signal can not be triggered as it is a constant signal with no slope.

Triggering can be performed by the measuring signal itself (internal triggering) or by an external supplied but synchronous voltage (external triggering).

The trigger voltage should have a certain minimum amplitude. This value is called the **trigger threshold**. It is measured with a sine signal. When the trigger voltage is taken internally from the test signal, the trigger threshold can be stated as vertical **display height in div.**, through which the time base generator starts, the display is stable, and the trigger LED lights.

The internal trigger threshold of the HM305 is given as $\leq 5 \text{ div}$. When the trigger voltage is externally supplied, it can be measured in V_{pp} at the **TRIG. INP.** socket. Normally, the trigger threshold may be exceeded up to a maximum factor of 20.

The HM305 has two trigger modes, which are characterized in the following.

Automatic Peak-Triggering

With the **AT/NORM.** pushbutton in out position (released = automatic triggering) the sweep generator is running without test signal or external trigger voltage. A base line is always displayed even with no signal or a DC signal. With an applied AC signal the peak value triggering enables the user to select the voltage point on the trigger signal, by the adjustment of the **LEVEL** control. The **LEVEL** control range depends on the **peak to peak value** of the signal. This trigger mode is therefore called Automatic Peak (Value)- Triggering. Operation of the scope needs only a correct amplitude and timebase setting, for a constantly visible trace. **AT** mode is recommended for all

uncomplicated measuring tasks. However, automatic triggering is also the appropriate operation mode for the "entry" into difficult measuring problems, e.g. when the test signal is unknown relating to amplitude, frequency or shape. Presetting of all parameters is now possible with automatic triggering; the change to normal triggering can follow thereafter.

The automatic triggering works above **20Hz**. The failure of automatic triggering at frequencies below 20Hz is abrupt. However, it is not signified by the trigger indicator (**TR**) LED; this is still blinking. Break down of triggering is best recognizable at the left screen edge (the start of the trace in differing display height).

The automatic triggering operates over all variations or fluctuations of the test signal above 20Hz. However, if the pulse duty factor of a square-wave signal exceeds a ratio of 100:1, switching over to normal triggering will be necessary.

Automatic triggering is practicable with internal and external trigger voltage.

In combination with alternate triggering (**ALT.** button depressed) the peak value detection is switched off. Then the **LEVEL** control is inoperative.

Normal Triggering

With normal triggering (**AT/NORM.** button depressed) and **LEVEL** adjustment, the sweep can be started by AC signals within the frequency range selected by the **TRIG.** coupling switch. ***In the absence of an adequate trigger signal or when the trigger controls (particularly the LEVEL control) are misadjusted, no trace is visible, i.e. the screen blanked completely.***

In "refresh" storage mode, the most recently sampled waveform remains stored in the memory.

When using the internal normal triggering mode, it is possible to trigger at any amplitude point of a signal edge, even with very complex signal shapes, by adjusting the **LEVEL** control. Its adjusting range is directly dependent on the display height, which should be at least **0.5div.** If it is smaller than 1div., the **LEVEL** adjustment needs to be operated with a sensitive touch. In the external normal triggering mode, the same applies to approx. $0.3V_{pp}$ external trigger voltage amplitude.

Other measures for triggering of very complex signals are the use of the time base variable control and **HOLDOFF** time control, hereinafter mentioned.

Slope

The time base generator can be started by a rising or falling edge of the test signal. This is valid with automatic and with normal triggering. The selected slope is set with the **SLOPE (+/-)** pushbutton. The plus sign (button released) means an edge, which is coming from a negative potential and rising to a positive potential. That has nothing to do with zero or ground potential and absolute voltage values. The positive slope may also lie in a negative part of a

signal. A falling edge (minus sign) triggers, when the **SLOPE (+/-)** pushbutton is depressed.

However the trigger point may be varied within certain limits on the chosen edge using the **LEVEL** control. The slope direction is always related to the input signal and the non inverted display.

Trigger coupling

The coupling mode and accordingly the frequency range of the trigger signal can be changed using the **TRIG.** selector switch.

AC: Trigger range <20Hz to 100MHz.

This is the most frequently used trigger mode. The trigger threshold is increasing below 20Hz and above 100MHz.

DC: Trigger range DC to 100MHz.

DC triggering is recommended, if the signal is to be triggered with quite slow processes or if pulse signals with constantly changing pulse duty factors have to be displayed.

With DC- or LF-trigger coupling, always work with normal triggering and LEVEL adjustment.

LF: Trigger range DC to 1.5kHz (low-pass filter).

The LF position is often more suited for low-frequency signals than the DC position, because the (white) noise in the trigger voltage is strongly suppressed. So jitter or double-triggering of complex signals is avoidable or at least reduced, in particular with very low input voltages. The trigger threshold increases above 1.5kHz.

TV: The built-in **active TV-Sync-Separator** enables the separation of sync pulses from the video signal. Even distorted video signals are triggered and displayed in a stable manner.

Video signals are triggered in the automatic mode. The internal triggering is virtually independent of the display height, but the sync pulse must exceed 0.5div. height. For TV sync pulse separation the **TRIG.** switch must be set to **TV.** The **TIME/DIV.**-switch selects between **field (.2s/div. - 1ms/div.)** and **line (.5ms/div. - .1µs/div.).**

The slope of the leading edge of the synchronization pulse is critical for the **SLOPE** pushbutton setting. If the displayed sync pulses are **above** the picture (field) contents, then the **SLOPE** pushbutton (\pm) must be in **+** position (out). In the case of sync pulses **below** the field/line, the leading edge is negative and the **SLOPE** pushbutton must therefore be depressed (to **-**). Since the **INVERT** function may cause a misleading display, it must not be activated until after correct triggering is achieved.

On the 2ms/div setting field TV triggering is selected and 1 field is visible if a 50 fields/s signal is applied. If the hold off control is in fully ccw position, it triggers without line interlacing affects caused by the consecutive field. More details in the video signal become visible if the **X-MAG. (x10)** pushbutton is depressed (in). The **X-POS.** control

allows to display any part of the expanded signal. The influence of the integrating network which forms a trigger pulse from the vertical sync pulses may become visible under certain conditions.

Disconnecting the trigger circuit (e.g. by rapidly pressing and releasing the **EXT.** button) can result in triggering the consecutive (**odd** or **even**) field.

On the 10 μ s/div setting line TV triggering is selected and approx. 1 1/2 lines are visible. Those lines originate randomly from the odd and even fields.

The sync-separator-circuit also operates with external triggering. It is important that the voltage range (0.3V_{pp} to 3V_{pp}) for external triggering should be noted. Again the correct slope setting is critical, because the external trigger signal may not have the same polarity or pulse edge as the test signal. This can be checked, if the external trigger voltage itself is displayed first (with internal triggering).

In most cases, the composite video signal has a high DC content. With constant video information (e.g. test pattern or color bar generator), the DC content can be suppressed easily by **AC** input coupling of the oscilloscope amplifier. With a changing picture content (e.g. normal program), **DC** input coupling is recommended, because the display varies its vertical position on screen with AC input coupling at each change of the picture content. The DC content can be compensated using the **Y-POS.** control so that the signal display lies in the graticule area. Then the composite video signal should not exceed a vertical height of 6div.

Line triggering (~)

A voltage originating from mains/line (50 to 60Hz) is used for triggering purposes if the **TRIG.** switch is set to ~. This trigger mode is independent of amplitude and frequency of the Y signal and is recommended for all mains/line synchronous signals. This also applies within certain limits to whole number multiples or fractions of the line frequency. Line triggering can also be useful to display signals below the trigger threshold (less than 0.5div). It is therefore particularly suitable for measuring small ripple voltages of mains/line rectifiers or stray magnetic field in a circuit. In this trigger mode the **SLOPE** pushbutton selects the positive or negative portion of the line sinewave. The **LEVEL** control is used for trigger point adjustment in case of normal triggering (**AT/NORM.** depressed).

Magnetic leakage (e.g. from a power transformer) can be investigated for direction and amplitude using a search or pick-up coil. The coil should be wound on a small former with a maximum of turns of a thin lacquered wire and connected to a BNC connector (for scope input) via a shielded cable. Between cable and BNC center conductor a resistor of at least 100 Ω should be series-connected (RF decoupling). Often it is advisable to shield statically the surface of the coil. However, no shorted turns are permissible. Maximum, minimum, and direction to the magnetic source are detectable at the measuring point by turning and shifting the coil.

Alternate triggering (analog mode)

With **alternate triggering** (**ALT.** button depressed) it is possible to trigger two signals which are different in frequency (asynchronous). In this case the oscilloscope must be operated in **alternateDUAL** mode with signals of sufficient height at each input. To avoid trigger problems due to different DC voltage components, **AC** input coupling for both channels is recommended.

The internal trigger source is switched in the same way as the channel switching after each time base sweep.

In this trigger mode the instrument internally switches over from Automatic Peak (Value)-Triggering to Automatic-Triggering.

Phase difference measurement is not possible in this trigger mode.

External triggering

The internal triggering is disconnected by depressing the **TRIG. EXT.** button. The timebase can be triggered externally via the **TRIG. INP.** socket using a 0.3V_{pp} to 3V_{pp} voltage, which is in synchronism with the test signal. This trigger voltage may have completely different form from the test signal voltage. Triggering is even possible in certain limits with whole number multiples or fractions of the test frequency, but only with synchronous signals. The input impedance of the TRIG. INP. socket is approx. 100k Ω || 10pF. The maximum input voltage of the input circuit is 100V (DC+peak AC).

It must be noted that a different phase angle between the measuring and the triggering signal may cause a display not coinciding with the **SLOPE** pushbutton setting.

The trigger coupling selection can also be used in external triggering mode. Unlike internal triggering, the lowest frequency for external triggering is 20Hz in all trigger coupling conditions.

Trigger indicator

An LED on condition (**TR**) indicates that the trigger signal has a sufficient amplitude and the LEVEL control setting is correct. This is valid with automatic and with normal triggering. The indication of trigger action facilitates a sensitive LEVEL adjustment, particularly at very low signal frequencies. The indication pulses are of only 100ms duration.

Thus for fast signals the LED appears to glow continuously, for low repetition rate signals, the LED flashes at the repetition rate or at a display of several signal periods not only at the start of the sweep at the left screen edge, but also at each signal period.

In automatic triggering mode the sweep generator starts repeatedly without test signal or external trigger voltage. If the trigger signal frequency is <20Hz the sweep generator starts without awaiting the trigger pulse. This causes an untriggered display and a flashing trigger LED (TR).

Holdoff-time adjustment (analog mode)

If it is found that a trigger point cannot be located on extremely complex signals even after repeated and careful adjustment of the **LEVEL** control, a stable display may be obtained using the **HOLD OFF** control (in the X-field). This facility varies the holdoff time between two sweep periods approx. up to the ratio 10:1. Pulses or other signal waveforms appearing during this off period cannot trigger the timebase. Particularly with burst signals or aperiodic pulse trains of the same amplitude, the start of the sweep can be delayed until the optimum or required moment.

A very noisy signal or a signal with a higher interfering frequency is at times displayed double. It is possible that LEVEL adjustment only controls the mutual phase shift, but not the double display. The stable single display of the signal, required for evaluation, is easily obtainable by expanding the hold off time. To this end the HOLD OFF knob is slowly turned to the right, until one signal is displayed.

A double display is possible with certain pulse signals, where the pulses alternately show a small difference of the peak amplitudes. Only a very exact **LEVEL** adjustment makes a single display possible. The use of the **HOLD OFF** knob simplifies the right adjustment.

After specific use the **HOLD OFF** control should be reset into its calibration detent (fully ccw), otherwise the brightness of the display is reduced drastically. The function is shown in the following figures.

Function of var. HOLD OFF control

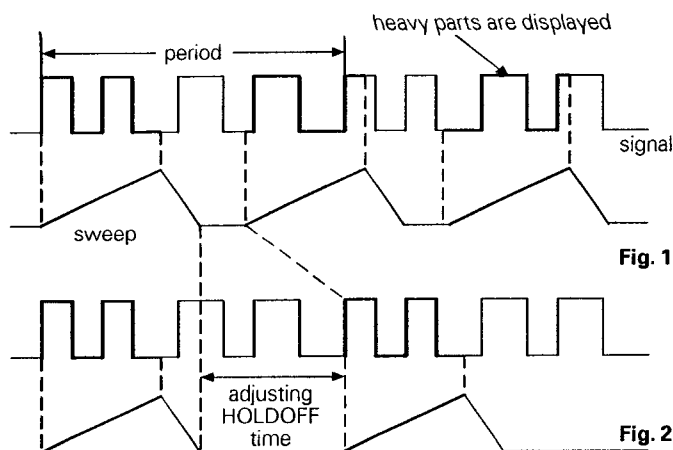


Fig. 1 shows a case where the **HOLD OFF** knob is in the minimum position and various different waveforms are overlapped on the screen, making the signal observation unsuccessful.

Fig. 2 shows a case where only the desired parts of the signal are stably displayed.

Y Overscanning Indication

This indicator shows any vertical overscan of the usable (10 x 8) screen area, if any part of the signal or baseline are outside the graticule. The indication is achieved by 2 light-emitting diodes, marked **OVERSCAN**, which are located between the attenuators. Should one LED illuminate without an input signal, this means that the respective vertical positioning control has been improperly adjusted.

Because each LED correlates with one of both possible directions, it can be seen in which direction the trace has left the screen. With dual channel operation, misadjustment of both **Y-POS.** controls can occur. If both traces lie in the same direction, one LED illuminates likewise. If one trace is positioned above and the other below the graticule, both LEDs are illuminated. The indication of the Y position after crossing the graticule area occurs **in each operating mode**, also when, due to missing time deflection, no baseline is displayed, or when the oscilloscope is in the X-Y mode.

As previously written in the paragraph "First Time Operation", the **AT/NORM.** pushbutton should be switched in **AT** position, as a baseline is then permanently displayed, also without any input signal. The trace disappears at times after applying an input signal. The LED indication shows, in which direction the trace has left the screen, above or below the graticule. Illumination of both LEDs at the same time after applying a signal means that the vertical deflection has overscanned the graticule edges in both vertical directions. With DC input coupling and an applied signal with a relatively high DC offset, smaller sizes also of displayed signals can overscan the raster edges, because the DC voltage causes a vertical position shift of the display height, which seemed correctly adjusted. In this case, a smaller display height must be accepted, or **AC** input coupling has to be selected.

Component Tester (analog mode)

General

The HM305 has a built-in electronic Component Tester (**COMP. TESTER**), which is used for instant display of a test pattern to indicate whether or not components are faulty. The **COMP. TESTER** can be used for quick checks of semiconductors (e.g. diodes and transistors), resistors, capacitors, and inductors. Certain tests can also be made to integrated circuits. All these components can be tested in and out of circuit.

The test principle is fascinatingly simple. A built-in generator delivers a sine voltage, which is applied across the component under test and a built-in fixed resistor. The sine voltage across the test object is used for the horizontal deflection, and the voltage drop across the resistor (i.e. current through test object) is used for vertical deflection of the oscilloscope. The test pattern shows a current-voltage characteristic of the test object.

Since this circuit operates with a frequency of 50Hz ($\pm 10\%$) and a voltage of 6V max. (open circuit), the indicating range of the component tester is limited. The *impedance of the component under test is limited to a range from 20 Ω to 4.7k Ω .* Below and above these values, the test pattern shows only short-circuit or open-circuit. For the interpretation of the displayed test pattern, these limits should always be borne in mind. However, most electronic components can normally be tested without any restriction.

Using the Component Tester

The component tester is switched on by depressing the **COMP. TESTER** pushbutton (on) beneath the screen. This makes the vertical preamplifier and the timebase generator inoperative. A shortened horizontal trace will be observed. It is not necessary to disconnect scope input cables unless in-circuit measurements are to be carried out. In the **COMP. TESTER** mode, the only controls which can be operated are **INTENS.**, **FOCUS**, and **X-POS.**. All other controls and settings have no influence on the test operation.

For the component connection, two simple test leads with 4mm Ø banana plugs, and with test prod, alligator clip or sprung hook, are required. The test leads are connected to the insulated socket and the adjacent ground socket beneath the screen. The component can be connected to the test leads either way round.

After use, to return the oscilloscope to normal operation, release the **COMP. TESTER** pushbutton (off).

Test Procedure

Caution! Do not test any component in live circuitry – remove all grounds, power and signals connected to the component under test. Set up Component Tester as stated above. Connect test leads across component to be tested. Observe oscilloscope display.

Only discharged capacitors should be tested!

Test Pattern Displays

Page M17 shows typical test patterns displayed by the various components under test.

- **Open circuit is indicated by a straight horizontal line.**
- **Short circuit is shown by a straight vertical line.**

Testing Resistors

If the test object has a linear ohmic resistance, both deflecting voltages are in the same phase. The test pattern expected from a resistor is therefore a sloping straight line. The angle of slope is determined by the resistance of the resistor under test. With high values of resistance, the slope will tend towards the horizontal axis, and with low values, the slope will move towards the vertical axis.

Values of resistance from **20 Ω** to **4.7k Ω** can be approximately evaluated. The determination of actual values will come with experience, or by direct comparison with a component of a known value.

Testing Capacitors and Inductors

Capacitors and inductors cause a phase difference between current and voltage, and therefore between the X and Y

deflection, giving an ellipse-shaped display. The position and opening width of the ellipse will vary according to the impedance value (at 50Hz) of the component under test.

A horizontal ellipse indicates a high impedance or a relatively small capacitance or a relatively high inductance.

A vertical ellipse indicates a small impedance or a relatively large capacitance or a relatively small inductance.

A sloping ellipse means that the component has a considerable ohmic resistance in addition to its reactance.

The values of capacitance of normal or electrolytic capacitors from **0.1μF** to **1000μF** can be displayed and approximate values obtained. More precise measurement can be obtained in a smaller range by comparing the capacitor under test with a capacitor of known value. Inductive components (coils, transformers) can also be tested. The determination of the value of inductance needs some experience, because inductors have usually a higher ohmic series resistance. However, the impedance value (at 50Hz) of an inductor in the range from **20Ω** to **4.7kΩ** can easily be obtained or compared.

Testing Semiconductors


Most semiconductor devices, such as diodes, Z-diodes, transistors, FETs can be tested. The test pattern displays vary according to the component type as shown in the figures below.

The main characteristic displayed during semiconductor testing is the voltage dependent knee caused by the junction changing from the conducting state to the non conducting state. It should be noted that both the forward and the reverse characteristic are displayed simultaneously. This is a two-terminal test, therefore testing of transistor amplification is not possible, but testing of a single junction is easily and quickly possible. Since the test voltage applied is only very low, all sections of most semiconductors can be tested without damage. However, checking the breakdown or reverse voltage of high voltage semiconductors is not possible. More important is testing components for open or short-circuit, which from experience is most frequently needed.

Testing Diodes

Diodes normally show at least their knee in the forward characteristic. This is not valid for some high voltage diode types, because they contain a series connection of several diodes. Possibly only a small portion of the knee is visible. Z-diodes always show their forward knee and, up to

approx. 7V, their Z-breakdown, forms a second knee in the opposite direction. A Z-breakdown voltage of more than 6.8V can not be displayed.

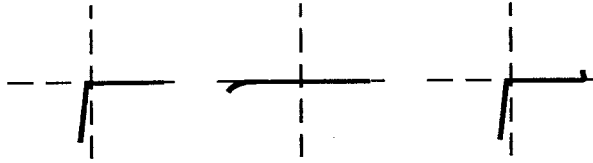

Type: Normal Diode High Voltage Diode Z-Diode 6.8V
 Terminals: Cathode-Anode Cathode-Anode Cathode-Anode
 Connections: (CT-GD) (CT-GD) (CT-GD)


The polarity of an unknown diode can be identified by comparison with a known diode.

Testing Transistors

Three different tests can be made to transistors: base-emitter, base-collector and emitter-collector. The resulting test patterns are shown below.

The basic equivalent circuit of a transistor is a Z-diode between base and emitter and a normal diode with reverse polarity between base and collector in series connection. There are three different test patterns:

For a transistor the figures b-e and b-c are important. The figure e-c can vary; but a vertical line only shows short circuit condition.

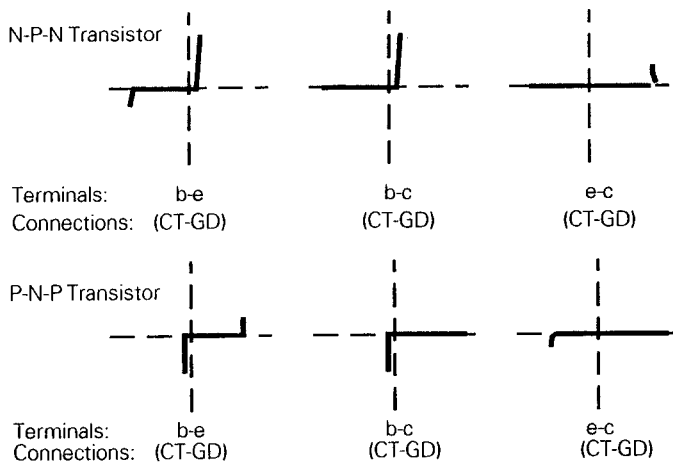

N-P-N Transistor
 Terminals: b-e b-c e-c
 Connections: (CT-GD) (CT-GD) (CT-GD)

P-N-P Transistor
 Terminals: b-e b-c e-c
 Connections: (CT-GD) (CT-GD) (CT-GD)

These transistor test patterns are valid in most cases, but there are exceptions to the rule (e.g. Darlington, FETs). With the **COMP. TESTER**, the distinction between a P-N-P to an N-P-N transistor is discernible. In case of doubt, comparison with a known type is helpful. It should be noted that the same socket connection (**COMP. TESTER** or ground) for the same terminal is then absolutely necessary. A connection inversion effects a rotation of the test pattern by 180 degrees round about the center point of the scope graticule.

In-Circuit Tests


Caution! During in-circuit tests make sure the circuit is dead. No power from mains/line or battery and no signal inputs are permitted. Remove all ground connections including Safety Earth (pull out power plug from outlet). Remove all measuring cables including probes between oscilloscope and circuit under test. Otherwise both COMP. TESTER leads are not isolated against the circuit under test.

In-circuit tests are possible in many cases. However, they are not well defined. This is caused by a shunt connection of real or complex impedances – especially if they are of relatively low impedance at 50Hz – to the component under test, often results differ greatly when compared with single components. In case of doubt, one component terminal may be unsoldered. This terminal should then be connected to the insulated **COMP. TESTER** socket avoiding hum distortion of the test pattern.


Another way is a test pattern comparison to an identical circuit which is known to be operational (likewise without power and any external connections). Using the test prods, identical test points in each circuit can be checked, and a defect can be determined quickly and easily. Possibly the device itself under test contains a reference circuit (e.g. a second stereo channel, push-pull amplifier, symmetrical bridge circuit), which is not defective.

The test patterns on page M17 show some typical displays for in-circuit tests.


Single Components

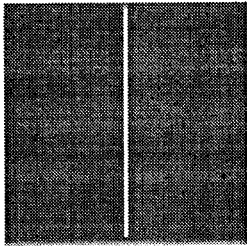


Short circuit

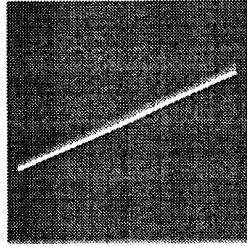

Resistor 510Ω

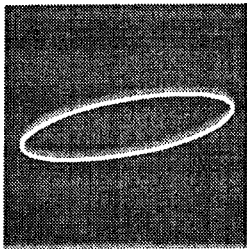


Mains transformer prim.

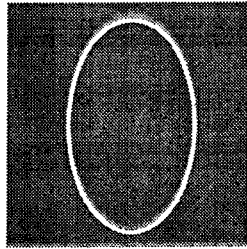


Capacitor 33μF


Single Transistors

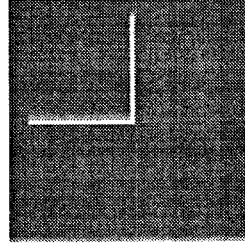


Junction B-C

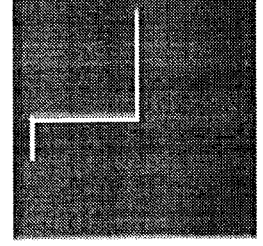

Junction B-E

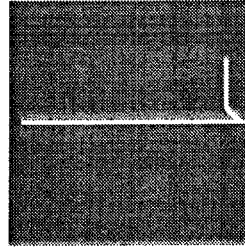


Junction E-C

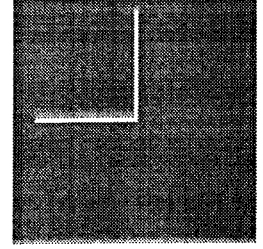


FET


Single Diodes

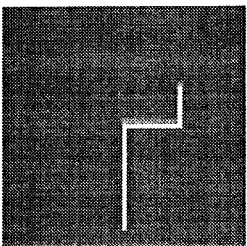


Z-diode below 7V

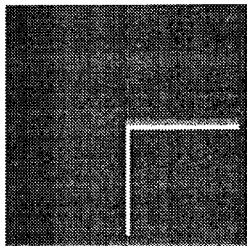


Z-diode beyond 7V

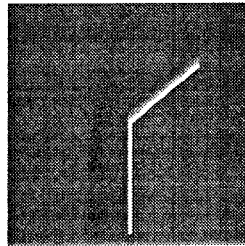


Diode paralleled by 680Ω

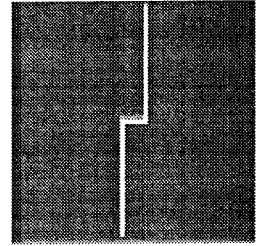


2 Diodes antiparallel

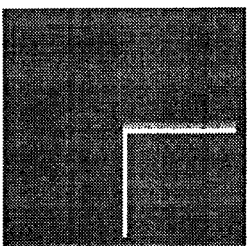


Silicon diode

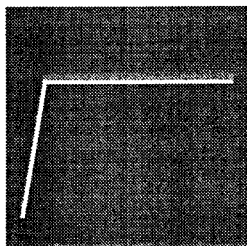


Germanium diode

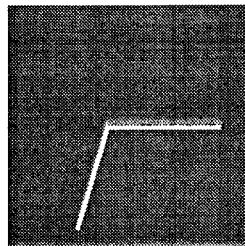


Diode in series with 51Ω

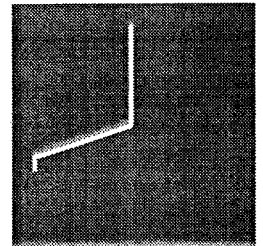


B-E paralleled by 680Ω

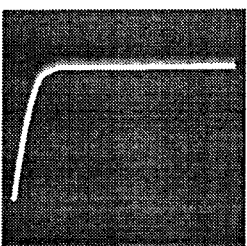


Rectifier

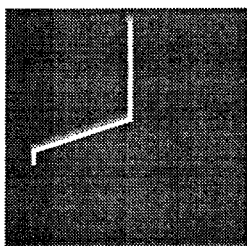

Thyristor, G + A together

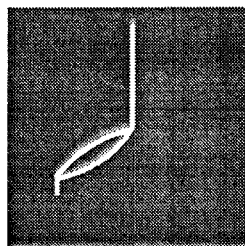

B-E with 1μF+680Ω

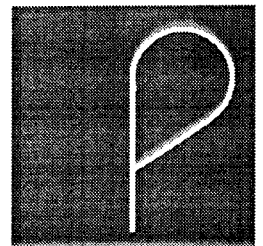

Si.-Diode with 10μF

Storage mode

The HM305 has an 8-bit A/D converter for each channel. The maximum sampling rate that can be driven by the digital timebase is **40MS/s** (40 million samples per second). Where signal capture is concerned, there is essentially no difference between capture of repeating signals and recording of one-time events. For the improvement of waveform recognition, the successive dots are linearly joined by luminescent lines.

Signal capture can either be performed in response to a trigger in either **SINGLE** or **REFRESH** mode, or else trigger-independent in **ROLL** mode.

The signal data captured in digital storage mode can be accessed for documentation purposes via the HAMEG interface.

Signal capture modes

In storage mode signal can be captured and displayed in 3 different modes:

1. **REFRESH** mode (RFR indicated)
2. **SINGLE** mode (SGL indicated)
3. **ROLL** mode (ROL indicated)

The display obtained in **REFRESH** mode is equivalent to that of an analog oscilloscope. A trigger event starts the data acquisition at the left-hand screen edge (0% pretrigger) and ending at the right-hand. The next trigger event then starts signal capture again, overwriting the data of the previous sampling cycle.

If automatic (AT) triggering is selected and no signal applied, the Y trace position is captured. As in analog mode a signal is displayed untriggered if its repetition frequency is below the trigger automatic frequency. In normal (NORM.) trigger mode without trigger signal, the sampling is stopped. In contrast to analog mode where the screen is blanked, the last captured signal is displayed unless a new trigger event causes a new data acquisition.

In **SINGLE** mode one-time events can be captured. The sampling starts after the **RESET LED** lights. After a trigger event occurred and after the recording, the **RESET LED** extinguishes.

The automatic trigger is switched off internally in **SINGLE** mode to avoid a data acquisition without trigger event. Nevertheless the peak value detection is operative if the **AT/NORM.** pushbutton is in **AT** position. It is recommended to select **NORM.** triggering and **DC** trigger coupling.

The trigger point (signal amplitude required for triggering) can only be determined indirectly. First use **AT** trigger mode and set the baseline (0 Volt) without input signal (**GD**) to a suitable graticule line. Then select **DC** input coupling and **DC** trigger coupling and display the component

tester signal with suitable amplitude. Select **NORM.** triggering and adjust **LEVEL** for the required trigger point above or below the previous baseline position. If e.g. the trigger point is 2 divisions above that position, triggering occurs when the input voltage rises above or falls below (**SLOPE** dependent) that voltage. The voltage amplitude then depends only on the attenuator setting and the probe. With a trigger point 2 divisions above 0 Volt, the attenuator in 1V/division and x10 probe, the trigger point is at +20V.

ROLL mode is only available in the "s" (for seconds) timebase range from 50s/Div. to 0.1s/Div. (marked on the front panel with a dashed line). After the **ms/s** pushbutton is depressed (s), **ROLL** mode can be selected with the **MODE** button.

In **ROLL** mode, the contents of memory and thus also the signal display are continuously updated. Because signal capture is untriggered, no idle status arise while waiting for a new trigger event to start signal capture again. With each new sampling cycle, therefore, the previously captured data are shifted to the left by one address. The leftmost value (shown at the left-hand edge of the screen) is thus shifted completely out of the memory and lost.

Controls and indicators of the storage section and their functions

In general, the storage mode controls and indicators are grouped together in the X field, and are framed to group them together. The exception is the **ms/s** time button. The storage controls are inoperative in analog mode.

STOR.: When this button is locked into its depressed position, the scope is switched over from analog to storage operation, and a **MODE** LED lights up to indicate this. Pressing the button again releases it, returning the scope to analog mode and extinguishing the LED.

As mentioned in the description of the XY- and COMPONENT TESTER mode, those modes are only available in analog operation. Both modes take priority over storage mode and force the instrument into analog mode operation.

MODE: The storage operation and the capturing mode are indicated by one of the three LED's.

RFR = REFRESH mode
SGL = SINGLE event capture mode
ROL = ROLL mode

Each touch of the **MODE** button selects the next mode and the corresponding LED lights. With the **ms/s** pushbutton in its released (ms) position, Refresh (**RFR**) and Single (**SGL**) mode are selectable.

If the **ms/s** pushbutton is in the depressed position (s) the

sequence is **RFR - SGL - ROL - RFR**.

If the **TIME/DIV.** switch is incorrectly set the **MODE LED** flashes.

HOLD I, HOLD II: Each channel can be protected against being overwritten by new data. Pressing the **HOLD** pushbutton(s) saves the memory contents currently displayed on screen. In addition mode (**ADD**) depress **HOLD I**.

HOLD I and/or **HOLD II** can be depressed at any time, immediately halting any further updating of the memory contents. Particularly when using slow timebase positions for triggered operation, it is actually possible to observe how the old memory contents are successively overwritten by new data. If **HOLD** is then pressed in the middle of a sampling cycle, a breakpoint or irregular joint may result between the new data and the old data.

This effect can be avoided by performing a signal capture in single-shot mode (**SGL**), even if a repeating signal is being studied. This results in a complete new sampling cycle that is then no longer overwritten once completed. Afterwards one or both **HOLD** button(s) can be pressed to prevent the data from being overwritten again by accidentally pressing **RESET**.

It is also possible to store each channel separately in **MONO** mode and display both channels in **DUAL** mode.

If the instrument is switched off, even **HOLD** cannot prevent the data from being lost.

RESET pushbutton: If, after a data acquisition has been completed, the **RESET** button is pressed while **SINGLE** mode is selected, the **RESET LED** lights up. This indicates that the oscilloscope is ready to perform a single scan, and the scope immediately begins capturing signal data. After a trigger event and completion of the sampling cycle, data capture is halted.

Especially when capturing signals in the seconds time-base range, it is important to keep in mind that the time for capture of a signal's prehistory must elapse first before a trigger event can take effect. If this were not so, then the recorded prior history of the displayed signal would not correspond to the pretrigger value.

After completing a sampling cycle, the **RESET** pushbutton can be pressed to turn the **RESET LED** (which has meanwhile gone out) back on and initiate a new sampling cycle, thus overwriting the previously captured signal data.

While the **ms/s** time-base range switch is in its "**s**" position, the signal data captured in **SINGLE** mode are immediately visible. They are shown in the form of a roll display, but this is the only feature associated with **ROLL** mode.

PRE-TRIG. pushbutton: The **PRETRIGGER** function is used to capture signals that occur prior to a trigger event. When the **PRE-TRIG.** button is in its depressed position, the trigger

event's prehistory extending back over 50% of the screen width is captured; in its released position, the pretrigger function is switched off (0%). As was already mentioned, the pretrigger function can only be activated in triggered operating modes, **not in the ROLL** mode. Pretriggering is always enabled in **SINGLE** mode, and **disabled** (i.e. set to 0%) when measuring in the **seconds** time range in **REFRESH** mode (**NORM.** triggering) in order to avoid excessive wait times while capturing periodically occurring signals.

TIME/DIV. rotary switch: When storage mode is active, the digitally generated, crystal-controlled timebase generates the pulses for signal data capture. The sampling rate is set using the **TIME/DIV.** switch; the fine-adjustment knob is disabled, however. Because the sampling rate is limited to a maximum frequency of **40MS/s** (40 million samples per second), and because 2k bytes of memory are available for storage of the data (2000 sampling values, displayed over 10 divisions in the X direction), the lowest selectable time coefficient in storage mode is **5µs/division**. This can be increased to a maximum of **50ms/division** using the **TIME/DIV.** switch. This range is surrounded by a black border line around the time/division scale, and is active whenever the **ms/s** switch is set to "**ms**" (in its released position).

Since even larger time/division coefficients are useful when using the scope in storage mode, they can be expanded by a **factor of 1000**. To do so, set the **ms/s** switch to "**s**" (seconds). The area of the scale surrounded by the dashed border line is now active. Time coefficients between **50 s/division** and **0.1 s/division** can be set.

Storage resolution and operating modes

Vertical resolution

The dot density in each operating mode is 8 bits = $2^8 = 256$ dots displayed over a height of roughly 10 cm (25 dots per division). However, only 8 divisions within the screen graticule can be evaluated.

Horizontal resolution

The dot density per channel is 11 bits = $2^{11} = 2048$ dots. Of these, 2000 dots are displayed over a width of 10 cm (200 dots per division). The remaining 48 dots fall beyond the right-hand edge of the screen graticule.

Horizontal resolution with X magnification

In digital storage mode it is possible to expand the signal display in the X direction. This is equivalent to increasing the sampling rate while simultaneously reducing the horizontal resolution. This magnification is performed in the analog X portion of the HM305, and has no effect on the stored data.

X magnification results in expanded display of just one section of the stored signal; the desired section can be selected using the X-POS. control.

Maximum signal frequency in storage mode


The highest capturable signal frequency cannot be exactly defined, since it depends to a large extent on the waveform and the displayed amplitude (vertical deflection) of the signal.

With the start of each data acquisition, the signal voltage at the inputs of the analog-to-digital converters is briefly measured (sampled), converted to an 8-bit digital value, and written to an address in RAM. The next sampled value is converted in the same way, but stored at the next RAM address.

The time intervals between the individual signal samples are determined by the time-base setting. At the maximum sampling rate of 40 megasamples/s (40 MHz) - on the time-base setting 5 μ s/div. - every 25 ns the A/D converters are briefly switched to "measurement". Assuming that 10 measurements per signal period are sufficient, this yields a minimum signal period duration of $10 \times 25 \text{ ns} = 250 \text{ ns}$, corresponding to a maximum signal frequency of 4 MHz. Since the memory capacity is 2k bytes = 2048 measurements, which are displayed over a trace width of approx. 10.2 divisions, 10 sampling values (corresponding to a period of 4 MHz) are displayed within a horizontal deflection of 0.5 mm. For evaluation purposes, it is therefore advisable to display this signal frequency with X-MAG.x10. This results in a signal period being displayed over 5 mm, making the signal easier to evaluate.

The displayed trace height in the Y direction also has an effect on the quality of signal representation. For instance, a sine wave depicted with 10 samples per period can be less clearly recognized at a signal height of 8 divisions than with an amplitude of 2 divisions.

The figure shows a sinewave signal recorded with different sampling rates (timebase settings) The insufficient sampling rate in the 2ms/div. timebase setting caused aliasing.

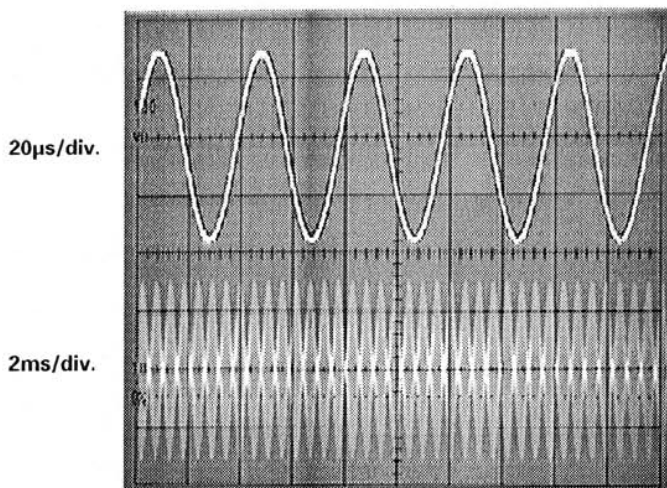

Operating modes of the vertical amplifiers

In principle, the HM 305 can operate in digital storage mode with the same operating modes as in analog (realtime) mode. Thus, the following can be displayed:

- Channel I by itself
- Channel II by itself
- Channels I and II simultaneously
- The sum of both channels
- The difference between Channel I and Channel II

Storage mode differs from analog operation of the scope in the following respects:

- With the DUAL button depressed (for simultaneous display of the signals of both channels), both input signals are also simultaneously captured, since each channel has its own A/D converter. In contrast to analog mode, therefore, it is not necessary to switch between chopped and alternating mode. Pressing the CHOP. button has no effect.
- Because of the high refresh rate (approx. 400 Hz) of the screen display, no flicker can occur.

HAMEG interface

The rear panel of the HM 305 contains a 25-pin D-SUB connector that can be used to access the data stored in memory for documentation purposes. Only signal data are available. The data can be read out in digital form. It is also possible (by employing suitable external equipment) to transfer data (digital only) into the oscilloscope's memory, thus causing it to be displayed on-screen. This is a useful feature because - in contrast to data display on a computer's monitor with its limited resolution - it permits display of signal with the full resolution of the 2k-byte memory.

Data can be transferred directly, i.e. without an interface, to a HAMEG Graphics Printer HD148 for hardcopy of the currently displayed data. This can be done in various different operating modes. The X magnification possible with the scope is ignored by the external device. For more detailed information, please consult the operating manual of the graphics printer.

The externally connectable Multifunction-Bus HO79-5 offers a wide number of documentation functions. There are three ports available for (digital) data transfer:

PRINTER port (25 pole D-SUB female connector) for devices with CENTRONICS connector.

RS232 port (9 pole D-SUB female connector) for serial data transfer.

IEEE-488 (female connector) for parallel data transfer in "device" or "talk only" operation.

Different data formats can be used:

Binary: Signal data directly and not converted from the memory.


HPGL: Signal data converted to HPGL for graphic representation on HPGL compatible printers.

PCL: Signal data converted to PCL for graphic representation on PCL compatible printers.

EPSON: Signal data converted for documentation on EPSON compatible printers.

Interface connector

Pin assignments and their functions.

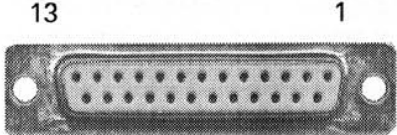Pin Name	Active	Type	Function
1 GND	-	-	not connected
14 HBØ	-	Data	Bit Ø (LSB)
2 HB1	-	Data	Bit1
15 HB2	-	Data	Bit 2
3 HB3	-	Data	Bit 3
16 HB4	-	Data	Bit 4
4 HB5	-	Data	Bit 5
			
17 HB6	-	Data	Bit 6
5 HB7	-	Data	Bit 7 (MSB)
18 +5V	-	-	Supply voltage of scope approx. +4.5V/350mA
6 GND	-	-	Reference potential (analog)
19 -	-	-	-
7 -	-	-	-
20 -	-	-	-
8 -	-	-	-
21 DATAVAL	LOW	OUT	Data valid: low level
9 CLRAC	LOW	INP	Reset address counter: low level
22 CLKAC	HIGH	INP	Clock input of address-counter Leading edge increments counter address by 1
10 SRQ	HIGH	INP	Service request: High level interrupts internal readout clock
23 HBWR	LOW	OUT	Read/write switchover low level lets data be written into scope memory
11 TE	LOW	OUT	Transmit enable: Low level signalizes ready-to-transmit
24 HBRESET	LOW	INP	Set single mode: Low level sets RESET mode (LED lights up)
12 -	-	-	-

25 GND	-	-	Reference potential (digital)
13 GND	-	-	Reference potential (digital)
Explanations:	INP	=	Input signal for HM305
	OUT	=	Output signal from HM305
	LOW	=	Low level, 0 to 0.8V
	HIGH	=	High level, 2.0 to 5V

Attention:

The following conditions must be met when connecting external equipment to the HAMEG interface:

The input voltages may only be in the range from 0 to +5 V. The outputs are not short-circuit-proof; the load must therefore have a minimum impedance of 2kΩ.

Readout of data memory:

The following information is provided merely to aid you in understanding the processes involved. With the HAMEG Graphics Printer or the HO79-5 they are largely automated.

Before reading out the contents of the data memory, the states of the data lines indicate the oscilloscope type. If HB1 is high while all other data lines are in their low states, the oscilloscope is recognized as the HM305.

During readout, the data lines carry levels corresponding to the memory contents.

The memory contents are read out as follows:

1. **SRQ** goes high = service request.
 2. **TE** is continually polled until it is in its low state, thus indicating the HM305 is ready to transmit.
 3. **CLRAC** is briefly pulled low so that the readout counter is set to address Ø.
 4. The **CLKAC** (clock address counter) line is toggled from low to high (positive-going signal edge). After this the data lines carry the data of byte Ø until the next leading edge makes byte 1 available. Each positive-going signal edge must of course be followed by a negative-going edge (resulting in a square-wave signal).
The memory contents must always be completely read out (4 x 2048 bytes = 8192 clock signals), regardless of what operating mode the scope is in (mono/dual). While the currently valid, i.e. displayed, 2-kilobyte data blocks are being read out, this is indicated by a low state on DATAVAL. Any devices connected to the HAMEG interface only document the currently valid data blocks. The signal data are always output in the following sequence: 2048 bytes of Channel I data and 2048 bytes of Channel II data.
- The data transfer sequence is: 2048 data byte from channel I, 2048 data byte from channel II and further 4096 byte non valid data. During the transfer of the non valid

data DATAVAL\ is switched to high state.

5. **SRQ** is pulled back low, thus ending readout and putting the HM305 back into normal operating mode.

Automatic readout of single-shot events

The following is a description of how data are read out in SINGLE mode. The SINGLE button must be depressed, and the scope must have been prepared for a trigger event by pressing the RESET button.

Since what happens in this case is largely identical with the sequence just described in detail in the previous section, only the differences are discussed here.

A: First the **TE** line is queried as described in step 2. A low state on **TE** signals that the HM305 has captured a signal event and has completed data capture. Then the signal data are transferred following the same sequence of steps 1 through 5. While this is happening, **TE** again performs its normal function as described in step 2.

B: **HBRESET** is briefly pulled low. This puts the HM305 back into readiness for a new trigger event, and the RESET LED lights up. Upon receipt of a trigger event, the process continues as described in step A.

Writing data into memory

As already mentioned, it is also possible to write data into the oscilloscope memory by way of the HO79-5. These data must have first been stored on a data storage device, e.g. hard disk. The data can be transferred by the computer using either a serial (RS-232C) or parallel (IEEE-488 bus) port, passing through the HO79-5 and being deposited in the HM 305 memory.

This permits digitally stored signals to again be displayed on the scope with full horizontal resolution, which cannot usually be done on the computer's monitor owing to the poor resolution of the graphic cards used.

If data are written into the memory first depress the HOLD button(s). Otherwise new data from the A/D converter may immediately overwrite the data.

The procedure followed is largely identical with that used for data readout:

1. **SRQ** must be set to high state = service request.
2. **HBWR** is set to low state. This switches the scope to the write mode.
3. **TE** is continually polled until it is in its low state, thus

indicating that the HM 305 is ready.

4. **CLRAC** is briefly pulled low so that the write operation can be initiated.

5. The data for byte 0 are placed on the data lines.

6. The **CLKAC** (clock address counter) line is toggled from low to high (positive going signal edge). The data previously placed on the data lines are then written into memory, and at the same time the counter address is incremented to byte 1. Afterwards the data for byte 1 are placed on the lines and another positive-going signal pulse is sent to **CLKAC**. Each positive-going signal edge must of course be followed by a negative-going edge (resulting in a square wave signal).

With **CLKAC** the entire memory address space (4x2k byte) must be run through, regardless of what operating mode the scope is in (mono/dual). As in the readout procedure the write procedure sequence must be: 2048 data byte for channel I, 2048 data byte for channel II and further 4096 non valid data byte which are not displayed.

7. **SRQ** is pulled back low and **HBWR** to high, thus ending the write operation and putting the HM 305 back into normal operating mode.

Safety note

All connections of the interface have a galvanic connection to the protective earth line, as the oscilloscope has to be operated under Safety Class I conditions.

Measurements of high measurement reference potentials are therefore not possible, and run the risk of damaging the oscilloscope, the interface, and any connected devices.

If the safety instructions are not followed (see also "Safety" on page M 1), then any resulting damages to HAMEG products are excluded from the warranty. Nor does HAMEG assume any liability for injury to persons or damage to other makes of equipment.

Switching on and initial setting

Connect instrument to power outlet, depress red **POWER** button. LED indicates operating condition.
Case, chassis and all measuring terminals are connected to the safety earth conductor (Safety Class II).

Do not depress any further button. **TRIG.** selector switch to **AC**.

AT/NORM. button released, **CH.I** input coupling switch to **GD**, set **TIME/DIV.** switch to 50 μ s/div.

Adjust **INTENS.** control for average brightness.

Center trace on screen using **X-POS.** and **Y-POS.I** controls. Then focus trace using **FOCUS** control.

Vertical amplifier mode

Channel I: All buttons in the Y section in out position.

Channel II: **CHI/II** button depressed.

Channel I and II: **DUAL** button depressed. Alternate channel switching: **CHOP. (ADD)** button in out position.

Signals <1kHz or time coefficient ≥ 1 ms/div: **DUAL** and **CHOP.** buttons depressed.

Channel I+II or -I-II (sum): depress only **ADD** button.

Channel -I+II or +I-II (difference): depress **ADD** and the corresponding **INVERT** button.

Triggering mode

Select trigger mode with **AT/NORM.** button:

AT = Automatic Peak-Triggering <20Hz to 80MHz (out position). **NORM.** = Normal Triggering (depressed).

Trigger edge direction: select slope with **SLOPE (\pm)** button.

Internal triggering: select channel with **TRIG. I/II (CH. I/II)** button.

Alternating triggering (internal): **ALT.** pushbutton depressed, **CHOP.** button in the out position.

External triggering: **TRIG. EXT.** button depressed; sync signal (0.3V_{pp} to 3V_{pp}) to **TRIG. INP.** socket.

Line triggering: **TRIG.** selector switch to \sim .

Select trigger coupling with **TRIG.** selector switch. Trigger frequency ranges:

AC: <20Hz to 100MHz; **DC:** DC to 100MHz; **LF:** DC to 1.5kHz.

TV: Composite video signal with line or horizontal frequency.

TIME/DIV. 0.2s/div. - 1ms/div. = field frequency

TIME/DIV. 0.5ms/div. - 0.1 μ s/div. = line frequency

Select edge direction with **SLOPE (\pm)** button (sync. pulse above +, below -).

Pay attention to trigger indicator: **TR** LED next to the **AT/NORM** button.

Storage mode

Mode selector switch: **STOR.**-button, **MODE** indicator lights.

Select acquisition mode with **MODE**-button, **ROL** is available if **ms/s** button is depressed.

Protect storage content with **HOLD** button(s):

Channel I: **HOLD I** button depressed; Channel II: **HOLD II** button depressed;

Channel I and II (DUAL): **HOLD I and HOLD II** depressed;

ADD (sum or difference): **HOLD I** button depressed.

SINGLE event capture: first select **SGL** (Mode-button), then press **RESET** button.

RESET is dark after the completion of single event capture.

Event capture with 50% prehistory: **PRE-TRIG.**-button depressed

(not available in ROLL- and REFRESH-mode in the s [seconds] timebase settings).

Measurements

Apply test signal to the vertical input connectors of **CH I** and/or **CH II**.

Before use, calibrate attenuator probe with built-in square wave generator **CAL.**

Switch input coupling to **AC** or **DC**.

Adjust signal to desired display height with attenuator switch.

Select time coefficient on the **TIME/DIV.** switch.

Set trigger point with **LEVEL** knob for normal triggering.

Trigger complex or aperiodic signals with longer **HOLD OFF**-time.

Amplitude measurement with Y fine control at right stop (**CAL.**).

Time measurement with time fine control at right stop (**CAL.**).

Horizontal expansion 10 fold with **X-MAG. (x10)** button depressed.

External horizontal deflection (**X-Y mode**) with **XY** button depressed (X input: **CH II**).


Component Tester (analog mode)

Press **COMP. TESTER** button (on). Connect both component terminals to **COMP. TESTER** jacks.

In-circuit test: Circuit under test must be disconnected from battery or power (pull out power plug), signals and ground (earth). Remove all signal connections to HM305 (cable, probe), then start testing.

Front Panel Elements HM 305 (Brief Description – Front View)

Element	Function	Element	Function
① POWER (pushbutton + LED)	Turns scope on and off. LED indicates operating condition.	②① COMP. TESTER (pushbutton switch)	Switch to convert oscilloscope to component tester mode.
② INTENS. (knob)	Intensity control for trace brightness	②② Y-POS.I (knob)	Controls vertical position of channel I display.
③ TR (potentiometer; adjustment with screwdriver)	Trace rotation. To align trace with horizontal graticule line. Compensates influence of earth's magnetic field.	②③ GD-AC-DC (pushbutton switches)	Selects input coupling of CH. I vertical amplifier. DC = direct coupling AC = coupling via capacitor GD = signal disconnected from input, Y amplifier input grounded.
④ FOCUS (knob)	Focus control for trace sharpness.	②④ INPUT CH I (BNC connector)	Channel I signal input. Input impedance 1MΩ 20pF.
⑤ X-MAG. x10 (pushbutton switch)	10 fold expansion in the X direction. Max. resolution 10ns/div.	②⑤ INVERT CH I (pushbutton switch)	Inversion of CH. I display. In combination with ADD button = difference CH. II CH. I.
⑥ X-POS. (knob)	Controls horizontal position of trace.	②⑥ VOLTS/DIV. (12 position rotary switch)	Channel I input attenuator. Selects Y input sensitivity in mV/div. or V/div. in 1-2-5 sequence.
⑦ HOLD OFF (knob)	Controls holdoff-time between sweeps. Normal position = full ccw.	②⑦ VAR. GAIN (knob)	Fine adjustment of Y amplitude CH. I. Increases attenuation factor min. by 2.5 (left hand stop). For amplitude measurement must be in CAL. position (right hand stop).
⑧ XY (pushbutton switch)	Selects X-Y operation, stops sweep. X signal via CH. II.	②⑧ CH I/II-TRIG. I/II (pushbutton switch)	No button depressed: CH. I only and triggering from channel I. When depressed, channel II only and triggering from channel II. (Trigger selection in DUAL mode).
Attention! Phosphor burn-in without deflection.		②⑨ Y MAG. x5 (pushbutton switches)	When depressed, increasing of Y-sensitivity (CH I or CHII resp.) 5 fold (max. 1mV/div.)
⑨ TRIG. (lever switch) AC-DC-LF-TV-~	Trigger selector: AC: 20Hz-100MHz. DC: DC-100MHz. LF: DC-1.5kHz. TV: Triggering for frame and line. ~: Internal line triggering.	③① ADD (pushbutton switch)	ADD depressed only: algebr. addition. In combination with INVERT: difference.
TR (LED)	LED lights, if sweep is triggered.	③② OVERSCAN (LED indicators)	Direction indicators. Illuminated when trace passes vertical screen limits.
⑩ ALT. (pushbutton switch)	Triggering alternates between CHI and CHII in alternating DUAL Channel mode only.	③③ VAR. GAIN (knob)	Fine adjustment of Y amplitude CH. II. Increases attenuation factor min. by 2.5 (left hand stop). For amplitude measurement must be in CAL. position (right hand stop).
⑪ SLOPE +/- (pushbutton switch)	Selects the slope of the trigger signal. + = rising edge; - = falling edge.	③④ VOLTS/DIV. (12 position rotary switch)	Channel II input attenuator. Selects Y input sensitivity in mV/div. or V/div. in 1-2-5 sequence.
⑫ TIME/DIV. (rotary switch)	Selects time coefficients (speeds) of timebase, from 0.2s/div. to 0.1μs/div.	③⑤ INVERT CH II (pushbutton switch) = difference CH. I CH. II.	Inversion of CH. II display (not in X-Y mode). In combination with ADD button = difference CH. I CH. II.
⑬ Variable timebase control (center knob)	Variable adjustment of timebase. Decreases X deflection speed at least 2.5 fold. For time measurements turn to right hand stop.	③⑥ AC-DC-GD (pushbutton switches)	Selects input coupling of the CH II vertical amplifier. Specs see ②③.
⑭ TRIG. EXT. (pushbutton switch)	Button released = internal triggering. Button depressed = external triggering, trigger signal via TRIG. INP ⑰.	③⑦ INPUT CH II (BNC connector)	CH. II signal input and input for horizontal deflection in X-Y mode.
⑮ AT/NORM. (pushbutton switch)	Button released = autom. triggering, trace visible without input signal. Button depressed = normal triggering with LEVEL adjustment ⑱.	③⑧ Y-POS.II (knob)	Controls vertical position of channel II display. Inoperative in X-Y mode.
⑯ LEVEL (knob)	Adjustment of trigger level.		
⑰ TRIG. INP. (BNC connector)	Input for external trigger signal. (Pushbutton TRIG. EXT. ⑭ depressed.)		
⑱ CAL. 1kHz/1MHz (pushbutton switch)	Selects calibrator frequency. Button released: approx. 1kHz, Button depressed: approx. 1MHz.		
⑲ 0.2V-2V (test sockets)	Calibrator square wave output, 0,2V _{pp} or 2V _{pp} .		
⑳ COMP. TESTER (4mm jacks)	Connectors for test leads of the Component tester.		

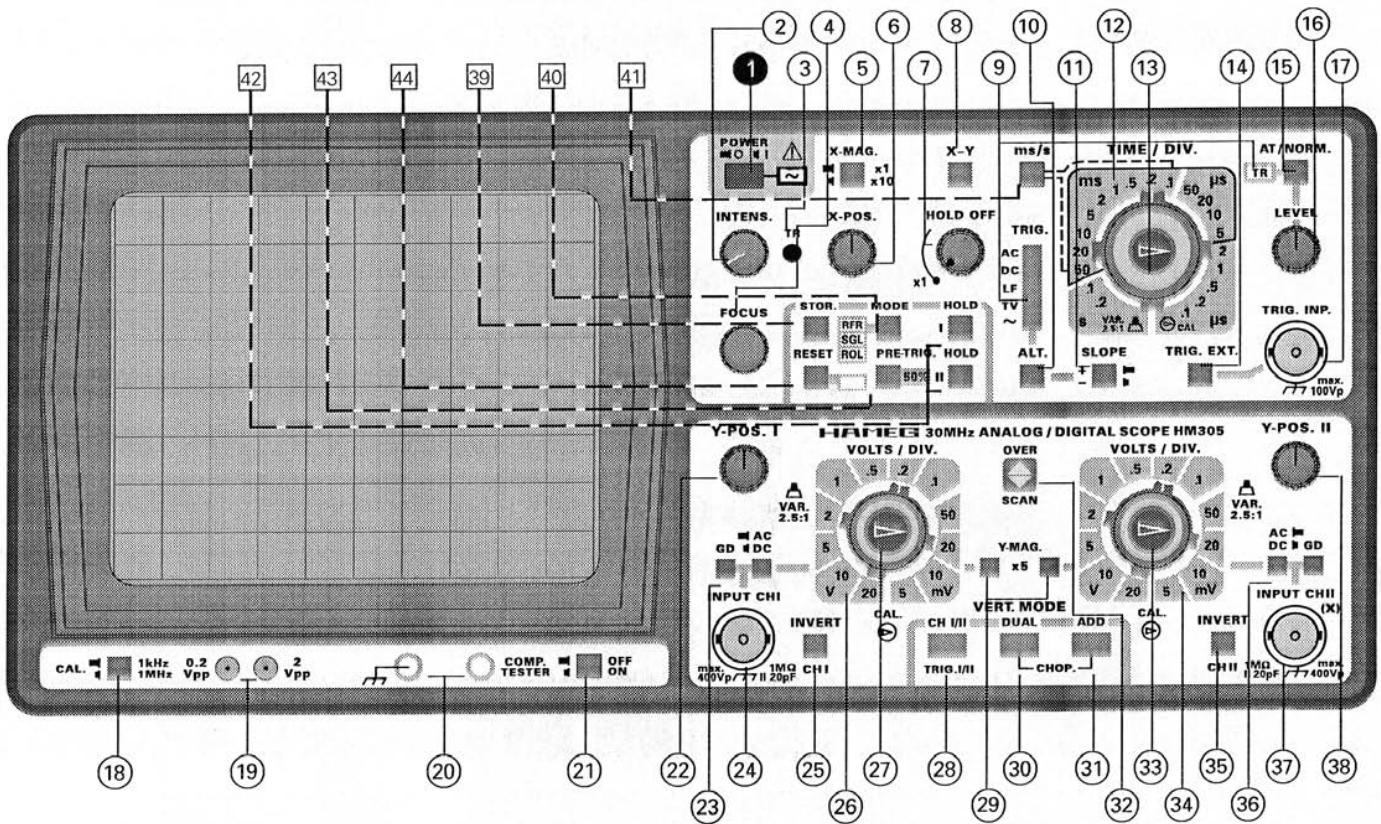

Elements for storage mode:

Element	Function	Element	Function
39 STOR. (pushbutton)	Selects analog or storage mode.	42 HOLD I / II (pushbuttons)	HOLD I: Saves the channel I and ADD storage content. HOLD II: Saves the channel II content.
40 MODE (pushbutton and LED's)	MODE indicates storage mode and acquisition mode. If timebase range is wrong the indicator flashes. RFR = REFRESH mode SGL = SINGLE (single event capture) ROL = ROLL mode (50s/div. - 100ms/div. only)	43 PRE-TRIG. (pushbutton)	Signal data acquisition with 50% prehistory. Not available if s- timebase settings are selected in REFRESH mode and ROLL mode.
41 ms/s (pushbutton)	Time coefficients (framed by the dashed line) are extended 1000 fold if this button is depressed.	44 RESET (pushbutton and LED)	Arms oscilloscope for single event capture (indicated by LED). LED extinguishes after signal capture.

Test Instructions

General

These Test Instructions are intended as an aid for checking the most important characteristics of the HM305 at regular intervals without the need for expensive test equipment. Resulting corrections and readjustments inside the instrument, indicated by the following tests, are described in the Service Instructions or on the Adjusting Plan. They should only be undertaken by qualified personnel.

As with the First Time Operation instructions, care should be taken that all knobs with arrows are set to their calibrated positions. None of the pushbuttons should be depressed. TRIG. selector switch to **AC**. It is recommended to switch on the instrument for about 20 minutes prior to the commencement of any check.

Cathode-Ray Tube: Brightness and Focus, Linearity, Raster Distortions

Normally, the CRT of the HM305 has very good brightness. Any reduction of this brightness can only be judged visually. However, decreased brightness may be the result of wrong setting or reduced high voltage. The latter is easily recognized by the greatly increased sensitivity of the vertical amplifier. Right setting means, that the **HOLD OFF** control should be turned to the left stop; the **X-MAG. (x10)** button should be released; a medium time coefficient should be selected; line triggering (~ position) should be used only with a suitable **TIME/DIV.** switch setting (e.g. **2ms/div.**). The control range for maximum and minimum brightness (intensity) must be such that the beam just disappears before reaching the left hand stop of the **INTENS.** control (particularly when the **XY** button is depressed), while with the control at the right hand stop the focus and the line width are just acceptable.

With maximum intensity the timebase fly-back must on no account be visible. Visible trace fault without input signal: bright dot on the left side or decreasing brightness from left to right or shortening of the baseline. (Cause: Incorrect Unblanking Pulse.) It should be noted that with wide variations in brightness, refocusing is always necessary. Moreover, with maximum brightness, no "pumping" of the display must occur. If pumping does occur, it is normally due to a fault in the regulation circuitry for the high voltage supply. The presetting pots for the high voltage circuit, minimum and maximum intensity, are only accessible inside the instrument (see Adjusting Plan and Service Instructions).

A certain out-of-focus condition in the edge zone of the screen must be accepted. It is limited by standards of the CRT manufacturer. The same is valid for tolerances of the orthogonality, the undeflected spot position, the non-linearity and the raster distortion in the marginal zone of

the screen in accordance with international standards (see CRT data book). These limit values are strictly supervised by HAMEG. The selection of a cathode-ray tube without any tolerances is practically impossible.

Astigmatism Check

Check whether the horizontal and vertical sharpness of the display are equal. This is best seen by displaying a square-wave signal with the repetition rate of approximately 1MHz. Focus the horizontal tops of the square-wave signal at normal intensity, then check the sharpness of the vertical edges. If it is possible to improve this vertical sharpness by turning the **FOCUS** control, then an adjustment of the astigmatism control is necessary. A potentiometer of 47k Ω is provided inside the instrument for the correction of astigmatism (see Service Instructions). A certain loss of marginal sharpness of the CRT is unavoidable; this is due to the manufacturing process of the CRT.

Symmetry and Drift of the Vertical Amplifier

Both of these characteristics are substantially determined by the input stages of the amplifiers.

The symmetry of both channels and the vertical final amplifier can be checked by inverting Channel I and II (depress the corresponding **INVERT** pushbutton). The vertical position of the trace should not change by more than 0.5div. However, a change of 1div. is just permissible. Larger deviations indicate that changes have occurred in the amplifier.

A further check of the vertical amplifier symmetry is possible by checking the control range of the **Y-POS.** controls. A sine-wave signal of 10-100kHz is applied to the amplifier input. When the **Y-POS.** control is then turned fully in both directions from stop to stop with a display height of approximately **8div.**, the upper and lower positions of the trace that are visible should be approximately of the same height. Differences of up to 1div. are permissible (input coupling should be set to **AC**).

Checking the drift is relatively simple. **20 minutes after switching on the instrument**, set the baseline exactly on the horizontal center line of the graticule. The beam position must not change by more than **0.5div.** during the following hour.

Calibration of the Vertical Amplifier

Two square-wave voltages of **0.2V_{pp} ± 1%** and **2V_{pp}** are present at the output sockets of the calibrator (**CAL.**) If a direct connection is made between the **0.2V** output and the

input of the vertical amplifier (e.g. using a **x1 probe**), the displayed signal in the **50mV/div.** position (variable control to **CAL.**) should be **4div.** high (**DC** input coupling). Maximum deviations of 0.12div. (3%) are permissible. If a **x10 probe** is connected between the **2V** output and Y input, the same display height should result. With higher tolerances it should first be investigated whether the cause lies, within the amplifier or in the amplitude of the square-wave signal. On occasions it is possible that the probe is faulty or incorrectly compensated. If necessary the measuring amplifier can be calibrated with an accurately known DC voltage (**DC** input coupling). The trace position should then vary in accordance with the deflection coefficient set.

With variable control at the attenuator switch fully counter-clockwise, the input sensitivity is decreased at least by the factor 2.5 in each position. In the **50mV/div.** position, the displayed calibrator signal height should vary from 4div. to at least 1.6div.

Transmission Performance of the Vertical Amplifier

The transient response and the delay distortion correction can only be checked with the aid of a square-wave generator with a fast risetime (**max. 5ns**). The signal coaxial cable (e.g. HZ34) must be terminated at the vertical input of the oscilloscope with a resistor equal to the characteristic impedance of the cable (e.g. with HZ22). Checks should be made at 100Hz, 1kHz, 10kHz, 100kHz and 1MHz, the deflection coefficient should be set at **5mV/div.** with **DC** input coupling (Y variable control in **CAL.** position). In so doing, the square pulses must have a flat top without ramp-off, spikes and glitches; no overshoot is permitted, especially at 1MHz and a display height of **4-5div.**. At the same time, the leading top corner of the pulse must not be rounded. In general, no great changes occur after the instrument has left the factory, and it is left to the operators discretion whether this test is undertaken or not. A suited generator for this test is HZ60 from HAMEG.

Of course, the quality of the transmission performance is not only dependent on the vertical amplifier. **The input attenuators**, located in the front of the amplifier, **are frequency-compensated in each position**. Even small capacitive changes can reduce the transmission performance. Faults of this kind are as a rule most easily detected with a square-wave signal with a low repetition rate (e.g. 1kHz). If a suitable generator with max. output of 40V_{pp} is available, it is advisable to check at regular intervals the deflection coefficients on all positions of the input attenuators and readjust them as necessary. A compensated **2:1 series attenuator** (e.g. HZ23) is also necessary, and this must be matched to the input impedance of the oscilloscope. This attenuator can be

made up locally. It is important that this attenuator is shielded. For local manufacture, the electrical components required are a 1MΩ ±1% resistor and, in parallel with it, a trimmer 3-15pF in parallel with approx. 12pF. One side of this parallel circuit is connected directly to the input connector of CH.I or CH.II and the other side is connected to the generator, if possible via a low-capacitance coaxial cable. The series attenuator must be matched to the input impedance of the oscilloscope in the **5mV/div.** position (variable control to **CAL.**, **DC** input coupling; square tops exactly horizontal; no ramp-off is permitted). This is achieved by adjusting the trimmer located in the 2:1 attenuator. **The shape of the square-wave should then be the same in each input attenuator position.**

Operating Modes: CH.I/II, DUAL, ADD, CHOP., INVERT and X-Y Operation

On depressing the **DUAL** pushbutton, two traces must appear immediately. On actuation of the **Y-POS.** controls, the trace positions should have no effect on each other. Nevertheless, this cannot be entirely avoided, even in fully serviceable instruments. When one trace is shifted vertically across the entire screen, the position of the other trace must not vary by more than 0.5mm.

A criterion in chopped operation is trace widening and shadowing around and within the two traces in the upper or lower region of the screen. Set **TIME/DIV.** switch to **2μs/div.**, depress the **DUAL** and **CHOP.** pushbutton, set input coupling of both channels to **GD** and advance the **INTENS.** control fully clockwise. Adjust **FOCUS** for a sharp display. With the **Y-POS.** controls shift one of the traces to a +2div., the other to a -2div. vertical position from the horizontal center line of the graticule. Do not try to synchronize (with the time variable control) the chop frequency (0.5MHz)! Then alternately release and depress the **CHOP.** pushbutton. Check for negligible trace widening and periodic shadowing in the chopped mode.

It is important to note that in the **I+II** add mode (only **ADD** depressed) or the **I-II** difference mode (**INVERT CHII** button depressed in addition) the vertical position of the trace can be adjusted by using **both** the Channel I and Channel II **Y-POS.** controls.

In X-Y Operation (**XY** pushbutton depressed), the sensitivity in both deflection directions will be the same. When the signal from the built-in square-wave generator is applied to the input of Channel II, then, as with Channel I in the vertical direction, there must be a horizontal deflection of **4div.** when the deflection coefficient is set to **50mV/div.** position (variable control set to its **CAL.** position, **X-MAG. (x10)** button in out position). The check of the mono channel display with the **CHI/II** button is unnecessary; it is contained indirectly in the tests above stated.

Triggering Checks

The internal trigger threshold is important as it determines the display height from which a signal will be stably displayed. It should be approx. 0.3-0.5div. for the HM305. An increased trigger sensitivity creates the risk of response to the noise level in the trigger circuit. This can produce double-triggering with two out-of-phase traces.

Alteration of the trigger threshold is only possible internally. Checks can be made with any **sine-wave voltage** between 50Hz and 1MHz. The **AT/NORM.** button should be in out position (**Automatic Triggering**). Following this it should be ascertained whether the same trigger sensitivity is also present with Normal Triggering (**AT/NORM.** button depressed). In this trigger mode, a **LEVEL** adjustment is necessary. The checks should show the same trigger threshold with the same frequency. On depressing the **SLOPE** button, the start of the sweep changes from the positive-going to the negative-going edge of the trigger signal.

As described in the Operating Instructions, the trigger frequency range is dependent on the trigger coupling selected. For lower frequencies the **LF** coupling mode can be selected. In this mode, triggering up to at least 1.5kHz (sine-wave) is possible. Internally the HM305 should trigger perfectly at a display height of approx. 0.5div., when the appropriate trigger coupling mode is set.

For external triggering (**TRIG. EXT.** button depressed), the **EXT. TRIG.** input connector requires a signal voltage of at least **0.3V_{pp}**, which is in synchronism with the Y input signal. The voltage value is dependent on the frequency and the trigger coupling mode (**AC-DC-LF**).

Checking of the TV triggering is possible with a video signal of any given polarity.

Use the **TV** position of the TRIG. switch for video sync pulse separation. In TV triggering mode the **TIME/DIV.** switch setting selects between **line/horizontal** pulse separation (TIME/DIV. switch from **.5ms/div. to .1µs/div.**) and **frame/vertical** pulse separation (TIME/DIV. switch from **.2s/div. to 1ms/div.**). With the **SLOPE** button the correct slope of the sync pulse (front edge) must be selected. This slope is then valid for both sync frequencies.

Perfect TV triggering is achieved, when in both display modes the amplitude of the complete TV signal (from white level to the top of the line sync pulse) is limited between 0.8 and 6div.

The display should not shift horizontally during a change of the trigger coupling from **AC** to **DC** with a **sine-wave signal without DC offset**.

If both vertical inputs are **AC** coupled to the same signal and both traces are brought to coincide exactly on the screen, when working in the **alternate dual channel mode**, then no change in display should be noticeable, when the **CH I/II - TRIG. I/II** button is depressed or released or when the TRIG. selector switch is changed from **AC** to **DC** position.

Checking of the line/mains frequency triggering (50-60Hz) is possible, when the input signal is time-related (multiple or submultiple) to the power line frequency (TRIG. selector switch to ~). There is no trigger threshold visible in this trigger mode. Even very small input signals are triggered stably (e.g. ripple voltage). For this check, use an input of approx. 1V. The displayed signal height can then be varied by turning the respective input attenuator switch and its variable control.

Timebase

Before checking the timebase it should be ascertained that the **trace length is approx. 10div. in all time ranges**. If not, it can be corrected with the potentiometer X x1 (see Adjusting Plan). This adjustment should be made with the **TIME/DIV.** switch in a mid position (i.e. **20µs/div.**). Prior to the commencement of any check set the time variable control to **CAL.** The **X-MAG. (x10)** button should be in out position. This condition should be maintained until the variation ranges of these controls are checked.

Check that the **sweep runs from the left to the right side of the screen** (TIME/DIV. switch to **0.1s/div.**; **X-POS.** control in mid-range). This check is only necessary after changing the cathode-ray tube.

If a precise marker signal is not available for checking the **Timebase time coefficients**, then an accurate sine-wave generator may be used. Its frequency tolerance should not be greater than $\pm 1\%$. The timebase accuracy of the HM305 is given as $\pm 3\%$, but it is considerably better than this. For the simultaneous checking of timebase linearity and accuracy at least 10 oscillations, i.e. **1 cycle every div.**, should always be displayed. For precise determination, set the peak of the first marker or cycle peak exactly behind the first vertical graticule line using the **X-POS.** control. Deviation tendencies can be noted after some of the marker or cycle peaks.

If a precise Time Mark Generator is used for checking, Normal Triggering (**AT/NORM.** button depressed) and **LEVEL** control adjustment is recommended.

The following table shows which frequencies are required for the particular ranges.

Analog-Mode	Storage-Mode
	50s/cm - 0.02Hz
	20s/cm - 0.05Hz
	10s/cm - 0.1Hz
	5s/cm - 0.2Hz
	2s/cm - 0.5Hz
	1s/cm - 1Hz
	0.5s/cm - 2Hz
0.2s/cm - 5Hz	0.2s/cm - 5Hz
0.1s/cm - 10Hz	0.1s/cm - 10Hz
50ms/cm - 20Hz	50ms/cm - 20Hz
20ms/cm - 50Hz	20ms/cm - 50Hz
10ms/cm - 100Hz	10ms/cm - 100Hz
5ms/cm - 200Hz	5ms/cm - 200Hz
2ms/cm - 500Hz	2ms/cm - 500Hz
1ms/cm - 1kHz	1ms/cm - 1kHz
0.5ms/cm - 2kHz	0.5ms/cm - 2kHz
0.2ms/cm - 5kHz	0.2ms/cm - 5kHz
0.1ms/cm - 10kHz	0.1ms/cm - 10kHz
50µs/cm - 20kHz	50µs/cm - 20kHz
20µs/cm - 50kHz	20µs/cm - 50kHz
10µs/cm - 100kHz	10µs/cm - 100kHz
5µs/cm - 200kHz	5µs/cm - 200kHz
2µs/cm - 500kHz	
1µs/cm - 1MHz	
0.5µs/cm - 2MHz	
0.2µs/cm - 5MHz	
0.1µs/cm - 10MHz	

When the **X-MAG. (x10)** button is depressed, a marker or cycle peak will be displayed every 10div. $\pm 5\%$ (with variable control in **CAL.** position; measurement in the **5µs/div.** range). The tolerance is better measurable in the **50µs/div.** range (one cycle every 1div.).

Holdoff time

The variation of the holdoff time during turning the **HOLD OFF** knob can not be tested without opening the instrument. However, a visual check can be made. Without input signal, set **TIME/DIV.** and time variable control cw, use automatic triggering. At the left hand stop of the **HOLDOFF** knob, the trace should be bright. It should darken remarkably at the right hand stop of the **HOLDOFF** knob.

Component Tester

After pressing the **COMP. TESTER** button, a horizontal straight line has to appear immediately, when the **COMP. TESTER** socket is open. The length of this trace should be approx. **8div.** With connection of the **COMP. TESTER** socket to the ground jack in the Y-Section, a vertical straight line with approx. 6div. height should be displayed. The above stated measurements have some tolerances.

Trace Alignment

The CRT has an admissible angular deviation $\pm 5^\circ$ between the X deflection plane D1-D2 and the horizontal center line of the internal graticule. This deviation, due to tube production tolerances (and only important after changing the CRT), and also the influence of the earths magnetic field, which is dependent on the instruments North orientation, are corrected by means of the **TR** potentiometer. In general, the trace rotation range is asymmetric. It should be checked, whether the baseline can be adjusted somewhat sloping to **both sides** round about the horizontal center line of the graticule. With the HM305 in its closed case, an angle of rotation $\pm 0.57^\circ$ (0.1div. difference in elevation per 10div. graticule length) is sufficient for the compensation of the earths magnetic field.

Service Instructions

General

The following instructions are intended as an aid for the electronic technician, who is carrying out readjustments on the HM305, if the nominal values do not meet the specifications. These instructions primarily refer to those faults, which were found after using the Test Instructions. However, this work should only be carried out by properly qualified personnel. For any further technical information call or write to HAMEG. Addresses are provided at the back of the manual. It is recommended to use only the original packing material, should the instrument be shipped to for service or repair (see also Warranty, page M2).

Instrument Case Removal

The rear cover can be taken off after unplugging the power cords triple-contact connector and after two cross recessed pan head screws (M4x30mm) with two washers on it have been removed. While the instrument case is firmly held, the entire chassis with its front panel can be withdrawn forward. When the chassis is inserted into the case later on, it should be noticed that the case has to fit under the flange of the front panel. The same applies for the rear of the case, on which the rear cover is put.

Caution

During opening or closing of the case, the instrument must be disconnected from all power sources for maintenance work or a change of parts or components. If a measurement, trouble-shooting, or an adjustment is unavoidable, this work must be done by a specialist, who is familiar with the risk involved.

When the instrument is set into operation after the case has been removed, attention must be paid to the acceleration voltage for the CRT –2025V and to the operating voltages for both final amplifier stages 185V and 141V. Potentials of these voltages are on the PS-Board, the CRT-PCB, on the upper and lower PCBs. Such potentials are moreover on the checkpoint strips on the upper and lower horizontal PCBs. They are highly dangerous and therefore precautions must be taken. It should be noted furthermore that shorts occurring on different points of the CRT high voltage and unblanking circuitry will definitely damage some semiconductors and the opto-coupler. For the same reason it is very risky to connect capacitors to these points while the instrument is on.

Capacitors in the instrument may still be charged, even when the instrument is disconnected from all voltage sources. Normally, the capacitors are discharged approx. 6 seconds after switching off. However, with a defective instrument an interruption

of the load is not impossible. Therefore, after switching off, it is recommended to connect one by one all terminals of the check strips on the upper PCB across 1k Ω to ground (chassis) for a period of 1 second.

Handling of the CRT needs utmost caution. The glass bulb must not be allowed under any circumstances to come into contact with hardened tools, nor should it undergo local superheating (e.g. by soldering iron) or local undercooling (e.g. by cryogenic-spray). We recommend the wearing of safety goggles (implosion danger).

The complete instrument (with case closed and POWER button depressed) is after each intervention undergo a voltage test with 2200V, DC, between accessible parts to both mains/line supply terminals. This test is dangerous and requires an adequately trained specialist.

Operating Voltages

All operating voltages (+6.3V, +12V, –12V, +141V, +185V, –2025V) are stabilized by the switch mode power supply. The +12V supply is further stabilized and used as a reference voltage for –12V stabilisation. These different operating voltages are fixed voltages, except the +12V, which can be adjusted. The variation of the fixed voltages greater than 5% from the nominal value indicates a fault. Measurements of the high voltage may only be accomplished by the use of a sufficient highly resistive voltmeter (>10M Ω). You must make absolutely sure that the electric strength of the voltmeter is sufficiently high. It is recommended to check the ripple and also the interaction from other possible sources. Excessive values might be very often the reason for incomprehensible faults.

Maximum and Minimum Brightness

Two variable resistors (220k Ω and 470k Ω), located on the switch mode power supply PCB, are used for these adjustment procedures (see Adjusting Plan). They may only be touched by a properly insulating screwdriver (Caution! High voltage!). The adjustments may possibly have to be repeated, because the functions of both variable resistors are dependent on each other. Correct adjustment is achieved, when the trace can be blanked while **XY** pushbutton is depressed and, in addition, when the requirement described in the Test Instructions are met.

Astigmatism control

The ratio of vertical and horizontal sharpness can be adjusted by the variable resistor of 47k Ω , located on the lower PCB (see Adjusting Plan). As a precaution however, the voltage for the vertical deflecting plates (approx.

+85V) should firstly be checked, because this voltage will affect the astigmatism correction. While the adjustment is being carried out (with medium brightness and a 1MHz square-wave signal), the upper horizontal square-wave tops are firstly focussed with the **FOCUS** control. Then the sharpness of the vertical lines are corrected with the 47k Ω Astigm. pot. The correction should be repeated several times in this sequence. The adjustment is finished, when the **FOCUS** knob **exclusively** brings no improvement of the sharpness in **both** directions.

Trigger Threshold

The internal trigger threshold should be in the range 0.3 to 0.5div. display height. It is strongly dependent on the comparator IC. If there are compelling reasons to replace this comparator, it may be that triggering becomes too sensitive or too insensitive caused by the IC gain tolerances (see Test Instructions: "Triggering Checks", page T3). In extreme cases, the hysteresis resistor of the comparator should be changed. Generally, max. halving or doubling of this resistance value should be sufficient. A too small trigger threshold cause double-triggering or premature trigger action due to interference pulses or random noise. A too high trigger threshold prevents the display of very small display heights.

Trouble-Shooting the Instrument

For this job, at least an isolating variable mains/line transformer (protection class II), a signal generator, an adequate precise multimeter, and, if possible, an oscilloscope are needed. This last item is required for complex faults, which can be traced by the display of signal or ripple voltages. As noted before, the regulated high voltage and the supply voltages for the final stages are highly dangerous. Therefore it is recommended to use **totally insulated extended probe tips**, when trouble-shooting the instrument. Accidental contact with dangerous voltage potentials is then unlikely. Of course, these instructions cannot thoroughly cover all kinds of faults. Some common-sense will certainly be required, when a complex fault has to be investigated.

If trouble is suspected, visually inspect the instrument thoroughly after removal of the case. Look for loose or badly contacted or discolored components (caused by overheating). Check to see that all circuit board connections are making good contact and are not shorting to an adjacent circuit. Especially inspect the connections between the PCBs, to front chassis parts, to CRT PCB, to trace rotation coil (inside of CRTs shielding), and to the control potentiometers and switches on top of and beneath the PCBs. This visual inspection can lead to success much more quickly than a systematic fault location using measuring instruments. Prior to any extensive trouble-shooting, also check the external power source.

If the instrument fails completely, the first and important step – **after checking the power fuses** – will be to measure the deflecting plate voltages of the CRT. In almost any case, the faulty section can be located. The sections represent:

1. Vertical deflection.
2. Horizontal deflection.
3. CRT circuit.
4. Power supply.

While the measurement takes place, the position controls of both deflection devices must be in mid-position. When the deflection devices are operating properly, the separate voltages of each plate pair are almost equal then (Y approx. 80V and X approx 71V). If the separate voltages of a plate pair are very different, the associated circuit must be faulty. An absent trace in spite of correct plate voltages means a fault in the CRT circuit. Missing deflection plate voltages is probably caused by a defect in the power supply.

Replacement of Components and Parts

For the replacement of parts and components use only parts of the same or equivalent type. Resistors unspecified in the diagrams have a power dissipation of 1/5 Watt (Melf) or 1/8 Watt (Chip) respectively and a tolerance of 1%. Resistors in the high voltage circuit must have sufficient electric strength. Capacitors without a voltage value must be rated for an operating voltage of 63V. The capacitance tolerance should not exceed 20%. Many semiconductors are selected, especially all amplifier transistors, which are contained in push-pull circuits. If a selected semiconductor is defective, both push-pull transistors of a stage should be replaced by selected components, because otherwise there are possibly deviations of the specified data or functions. The Service Department can give you advice for troubleshooting and replaceable parts. Replacement parts can be ordered by letter or telephone from the nearest HAMEG Service Office. Please supply the following information: Instrument type and serial number, description of the part (type and part number on the circuit drawing).

Adjustments

As advised in the Operating, Test and Service Instructions, small corrections and adjustments are easily carried out with the aid of the Circuit Diagrams and Adjusting Plan. However, a complete recalibration of the scope should not be attempted by an inexperienced operator, but only someone with sufficient expertise. Several precision measuring instruments with cables and adapters are required, and only then should the pots and trimmers be readjusted, provided that the result of each adjustment can be exactly determined. Thus for each operating mode and switch position, a signal with the appropriate sine or square waveform, frequency, amplitude, risetime and duty cycle is required.

HAMEG[®]

Instruments

Oscilloscopes
Multimeters
Counters
Frequency
Synthesizers
Generators
R- and LC-
Meters
Spectrum
Analyzers
Power Supplies
Curve Tracers
Time Standards

Germany

HAMEG GmbH

Kelsterbacher Str. 15-19
60528 FRANKFURT am Main
Tel. (069) 67805 0
Telefax (069) 6780513

France

HAMEG S.a.r.l

5-9, av. de la République
94800-VILLEJUIF
Tél. (1) 4677 8151
Telefax (1) 4726 3544

Spain

HAMEG S.L.

Villarroel 172-174
08036 BARCELONA
Teléf. (9) 3 4301597
Telefax (9) 3 3212201

Great Britain

HAMEG LTD

74-78 Collingdon Street
LUTON Bedfordshire LU1 1RX
Phone (01582)413174
Telefax (01582)456416

United States of America

HAMEG, Inc.

1939 Plaza Real
OCEANSIDE, CA 92056
Phone (619) 630 4080
Telefax (619) 630 6507

HAMEG, Inc.

266 East Meadow Avenue
EAST MEADOW, NY 11554
Phone (516) 794 4080
Toll-free (800) 247 1241
Telefax (516) 794 1855

Hong Kong

HAMEG LTD

Flat 1, 4/F.
Crown Industrial Building
106 How Ming St., Kwun Tong
Kowloon, Hong Kong
Phone (852) 2 793 0218
Telefax (852) 2 763 5236