



















Hammond XK-1 Factory Preset Contents	Bank Number	9	9	9	9	9	9	9	9	9	9	9
	Preset Number	1	2	3	4	5	6	7	8	9	10	11
	Bank Name	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1
	Preset Name	Cancel	WhiteShade	PercusBass	Four Beat	Funk Bass	Surf Coast	BlueTigers	10thAvenue	Popcorn	Doubling	N.E.S.
UpperDrawbar	Reg16	0	8	4	3	6	5	6	0	0	8	0
	Reg513	0	0	4	3	0	0	0	0	0	5	0
	Reg8	0	8	5	4	6	8	8	5	0	8	5
	Reg4	0	8	5	5	6	8	8	5	0	8	0
	Reg223	0	0	5	6	0	0	0	8	0	5	7
	Reg2	0	8	0	0	6	8	8	8	0	0	0
	Reg135	0	0	0	0	0	0	0	8	0	4	0
	Reg113	0	0	0	0	0	0	4	8	0	0	3
	Reg1	0	8	0	0	6	0	8	8	0	0	3
	VoiceType	B-Type	Mellow	B-Type	B-Type	B-Type	Brite	Brite	Mellow	B-Type	B-Type	Brite
	DrawbarClickAttack	12	12	12	7	10	10	8	8	0	12	0
	DrawbarClickRelease	5	7	5	2	3	3	0	2	0	5	0
	DrawbarEnvAttack	2	8	2	5	4	4	8	8	8	2	6
	DrawbarEnvRelease	10	15	10	10	12	10	14	10	15	10	13
	FoldBackLow	2C	2C	1C	2C	2C	2C	2C	2C	2C	2C	2C
	FoldBackHi	4G	4G	4G	4G	4G	5C	5C	4G	4G	4G	5C
	BendLengthDown	2	2	12	2	12	2	2	2	2	2	2
	BendLengthUp	2	2	2	2	2	2	2	2	2	2	2
	DrawbarClickLpf	110	110	110	120	127	127	127	110	110	110	110
	BendMode	Bend	Bend	Motor	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend
BendTime	14	14	35	14	14	14	14	14	14	14	14	
BendAmp	Off	Off	On	Off	Off	Off	Off	Off	Off	Off	Off	
Percussion	Second	Off	Off	Off	Off	Off	Off	Off	Off	On	Off	Off
	Third	Off	Off	On	On	Off	Off	Off	Off	On	On	Off
	FastDecay	Off	Off	On	On	Off	Off	Off	Off	On	Off	Off
	PercSoft	Off	Off	On	On	Off	Off	Off	Off	On	Off	Off
	LevelSoft	5	5	2	5	5	5	5	5	5	5	5
	LevelNormal	11	11	6	11	11	11	11	11	10	11	11
	DecayFast	2	2	2	2	2	2	2	2	2	2	2
	DecayNormal	5	5	5	5	5	5	5	5	5	5	5
	Touch	On	On	On	On	On	On	On	On	Off	On	On
	Velocity	Off	Off	Off	Off	Off	Off	Off	Off	On	Off	Off
	KeyTrack	On	On	Off	On	On	On	On	On	Off	On	On
	OneFeetCancel	On	On	On	On	On	On	On	On	On	On	On
	DrawbarLevel	-3dB	-3dB	-3dB	-3dB	-3dB	-3dB	-3dB	-3dB	-3dB	-3dB	-3dB
ExtraVoice	ExvOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
	VoiceNo	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s
	OctaveShift	0	0	0	0	0	0	0	0	0	0	0
	Volume	100	100	100	100	100	100	100	100	100	100	100
	VelocityCurve	2	2	2	2	2	2	2	2	2	2	2
	ModulationOn	On	On	On	On	On	On	On	On	On	On	On
	SplitOn	Off	On	On	On	On	On	On	On	On	Off	On
IntZone	ManualBass	Off	On	On	On	On	On	Off	Off	Off	Off	Off
	LUKeyRangeLo	36	36	36	36	36	36	36	36	36	36	36
	LUKeyRangeHi	96	96	96	96	96	96	96	96	96	96	96
	PedalRangeHi	59	59	59	59	59	47	54	54	54	59	63
	SplitPoint	59	59	59	59	59	47	54	54	54	59	63
	SplitLowerOctave	1	1	0	1	1	1	1	1	1	1	0
	LeslieOn	Off	On	On	Off	Off	Off	Off	Off	On	On	Off
	LeslieFast	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
Animation	VibratoChorus	Off	Off	On	On	On	Off	On	Off	Off	Off	Off
	VibratoMode	Off	Off	Off	3	2	1	1	2	Off	Off	Off
	VibratoSpeed	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	7.25Hz	6.83Hz	6.83Hz	6.83Hz
	OdDriveLevel	0	0	0	0	0	0	0	25	0	0	0
	LeslieBrake	Off	On	Off	Off	Off	Off	Off	Off	Off	Off	Off
	LeslieCabinet	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1
	LeslieModOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
	OdOn	On	Off	Off	Off	Off	Off	Off	On	Off	On	Off
	OdExpCtrlOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
	V1Depth	8	8	8	8	8	8	8	8	8	8	8
	V2Depth	11	11	11	11	11	11	11	11	11	11	11
	V3Depth	14	14	14	14	14	14	14	14	14	14	14
	C1Depth	8	8	8	8	8	8	8	8	8	8	8
	C2Depth	11	11	11	11	11	11	11	11	11	11	11
	C3Depth	14	14	14	14	14	14	14	14	14	14	14
	TremDepth	8	8	8	8	8	8	8	8	8	8	8
	ChoEnrLvl	6	6	6	6	6	6	6	6	6	6	6
EqRev	EqBassGain	Plus0	Plus0	Plus3	Plus0	Plus3	Plus0	Plus3	Plus0	Mins6	Plus0	Plus0
	EqMidGain	Plus0	Plus0	Plus0	Plus6	Plus0	Plus0	Plus3	Plus2	Plus0	Plus0	Plus0
	EqTrebleGain	Plus0	Plus0	Plus3	Plus0	Plus3	Plus0	Plus6	Plus3	Plus4	Plus6	Plus0
	EqTrebleGain	1.2kHz	480Hz	480Hz	2.0kHz	480Hz	480Hz	1.4kHz	2.9kHz	2.0kHz	480Hz	480Hz
	ReverbOn	On	On	On	On	On	On	On	On	On	On	On
	ReverbType	Hall 1	Plate	Room1	LiveHouse	Room1	Plate	Plate	Hall2	RevDly	Delay	Hall 1
	ReverbLevel	8	11	7	11	5	10	11	8	10	12	8
	ReverbTime	25	28	10	10	10	16	24	21	26	0	25
	ReverbFb	0	0	0	0	0	0	0	0	8	0	0
	ReverbDelayTime	0	0	0	0	0	0	0	0	36	22	0
LeslieOnReverb	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
LowerDrawbar	Reg16	0	0	7	0	0	0	0	0	0	0	0
	Reg513	0	0	7	0	0	0	0	0	0	0	0
	Reg8	0	5	7	0	0	0	7	5	5	0	8
	Reg4	0	3	0	0	0	0	6	4	4	0	2
	Reg223	0	0	0	0	0	0	0	3	3	0	0
	Reg2	0	4	0	0	0	0	0	0	0	0	0
	Reg135	0	0	0	0	0	0	0	0	0	0	0
	Reg113	0	0	0	0	0	0	0	0	0	0	0
	Reg1	0	4	0	0	0	0	0	0	0	0	0
	PedalDrawbar	Reg16	0	7	8	8	8	6	8	7	7	7
Reg8		0	0	0	2	0	6	2	3	3	3	5
VoiceType		Muted	Muted	Normal	Muted	Synth1	Muted	Muted	Muted	Muted	Muted	Muted
NoClick		NoClick	NoClick	NoClick	SoftClick	SoftClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick
BendLengthDown		2	2	12	2	12	2	2	2	2	2	2
BendLengthUp		2	2	2	2	2	2	2	2	2	2	2
SustainOn		Off	On	Off	On	On	Off	Off	Off	Off	Off	Off
SustainLength		2	2	1	1	1	2	2	2	2	2	2
Length		Cont	Cont	D1	D5	Cont	Cont	5	Cont	Cont	Cont	Cont
Velocity		Off	Off	1	1	Off	Off	Off	Off	Off	Off	Off
Mode	0	0	0	1	0	0	1	0	1	1	0	

Hammond XK-1 Factory Preset Contents	Bank Number	10	10	10	10	10	10	10	10	10	10	10	
	Preset Number	1	2	3	4	5	6	7	8	9	10	11	
	Bank Name	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	
	Preset Name	Cancel	Soloist	ChokeNose	S.F.4ever	Tea Lounge	Le Femme	Triplet 90	Triplet100	Triplet110	Triplet120	Triplet130	
UpperDrawbar	Reg16	0	8	8	0	8	0	8	8	8	8	8	
	Reg513	0	8	8	0	0	0	8	8	8	8	8	
	Reg8	0	8	8	8	3	8	8	8	8	8	8	
	Reg4	0	8	8	3	0	8	8	8	8	8	8	
	Reg223	0	8	8	0	0	0	0	0	0	0	0	
	Reg2	0	8	8	0	7	8	0	0	0	0	0	
	Reg135	0	0	0	0	0	0	0	0	0	0	0	
	Reg113	0	8	8	0	0	0	0	0	0	0	0	
	Reg1	0	8	8	0	0	8	0	0	0	0	0	
	VoiceType	B-Type	B-Type	B-Type	Mellow	Mellow	Brite	B-Type	B-Type	B-Type	B-Type	B-Type	
	DrawbarClickAttack	12	12	12	0	0	0	12	12	12	12	12	
	DrawbarClickRelease	5	5	5	0	0	0	5	5	5	5	5	
	DrawbarEnvAttack	2	2	2	15	8	8	2	2	2	2	2	
	DrawbarEnvRelease	10	10	10	15	15	15	10	10	10	10	10	
	FoldBackLow	2C	2C	2C	2C	2C	2C	2C	2C	2C	2C	2C	
	FoldBackHi	4G	4G	4G	4G	4G	5C	4G	4G	4G	4G	4G	
	BendLengthDown	2	12	12	2	2	2	2	2	2	2	2	
	BendLengthUp	2	2	2	2	2	2	2	2	2	2	2	
	DrawbarClickLpf	110	127	127	110	110	110	110	110	110	110	110	
	BendMode	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	
BendTime	14	30	14	14	14	14	14	14	14	14	14		
BendAmp	Off	On	On	Off	Off	Off	Off	Off	Off	Off	Off		
Percussion	Second	Off	Off	On	Off	On	Off	Off	Off	Off	Off	Off	
	Third	Off	On	Off	Off	Off	Off	On	On	On	On	On	
	FastDecay	Off	On	On	Off	Off	Off	On	On	On	On	On	
	PercSoft	Off	Off	Off	Off	Off	Off	On	On	On	On	On	
	LevelSoft	5	5	6	5	2	5	5	5	5	5	5	
	LevelNormal	11	12	16	11	5	11	11	11	11	11	11	
	DecayFast	2	2	2	2	3	2	2	2	2	2	2	
	DecayNormal	5	5	6	5	6	5	5	5	5	5	5	
	Touch	On	On	On	On	On	On	On	On	On	On	On	
	Velocity	Off	Off	On	Off	Off	Off	Off	Off	Off	Off	Off	
	KeyTrack	On	Off	Off	On	Off	On	On	On	On	On	On	
	OneFeetCancel	On	Off	Off	On	On	On	On	On	On	On	On	
	DrawbarLevel	-3dB	0dB	0dB	-3dB	0dB	-3dB	-3dB	-3dB	-3dB	-3dB	-3dB	
	ExtraVoice	ExvOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
VoiceNo		E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	
OctaveShift		0	0	0	0	0	0	0	0	0	0	0	
Volume		100	100	100	100	100	100	100	100	100	100	100	
VelocityCurve		2	2	2	2	2	2	2	2	2	2	2	
ModulationOn		On	On	On	On	On	On	On	On	On	On	On	
IntZone		SplitOn	Off	Off	Off	On	On	On	Off	Off	Off	Off	Off
	ManualBass	Off	On	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	LUKeyRangeLo	36	36	36	36	36	36	36	36	36	36	36	
	LUKeyRangeHi	96	96	96	96	96	96	96	96	96	96	96	
	PedalRangeHi	59	96	59	59	59	59	59	59	59	59	59	
	SplitPoint	59	59	59	54	59	54	59	59	59	59	59	
	SplitLowerOctave	1	1	1	1	1	1	1	1	1	1	1	
Animation	LeslieOn	Off	On	On	Off	Off	Off	On	On	On	On	On	
	LeslieFast	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	VibratoChorus	Off	Off	Off	Off	On	Off	Off	Off	Off	Off	Off	
	VibratoMode	Off	Off	Off	1	2	Off	Off	Off	Off	Off	Off	
	VibratoSpeed	6.83Hz	6.83Hz	6.83Hz	6.10Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	
	OdDriveLevel	0	32	40	0	0	20	0	0	0	0	0	
	LeslieBrake	Off	On	On	Off	Off	Off	On	On	On	On	On	
	LeslieCabinet	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1	
	LeslieModOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	OdOn	On	On	On	Off	Off	On	On	On	On	On	On	
	OdExpCtrlOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	V1Depth	8	8	8	8	8	8	8	8	8	8	8	
	V2Depth	11	11	11	11	11	11	11	11	11	11	11	
	V3Depth	14	14	14	14	14	14	14	14	14	14	14	
	C1Depth	8	8	8	8	8	8	8	8	8	8	8	
	C2Depth	11	11	11	11	11	11	11	11	11	11	11	
	C3Depth	14	14	14	14	14	14	14	14	14	14	14	
	TremDepth	8	8	8	8	8	8	8	8	8	8	8	
	ChoEnrLef	6	6	6	6	6	6	6	6	6	6	6	
	EqRev	EqBassGain	Plus0	Plus9	Mins9	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0
EqMidGain		Plus0	Mins9	Plus8	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	
EqTrebleGain		Plus0	Plus9	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	
		480Hz	1.0kHz	2.4kHz	480Hz	480Hz	480Hz	480Hz	480Hz	480Hz	480Hz	480Hz	
ReverbOn		On	On	On	On	On	On	On	On	On	On	On	
ReverbType		Hall 1	PanDly	Room1	Room1	LiveHouse	Hall2	Delay	Delay	Delay	Delay	Delay	
ReverbLevel		8	9	15	4	8	8	8	8	8	8	8	
ReverbTime		25	0	15	19	21	21	0	0	0	0	0	
ReverbFb		0	8	0	0	0	0	8	8	8	8	8	
ReverbDelayTime		0	45	0	0	0	0	45	44	43	42	41	
LeslieOnReverb		Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
LowerDrawbar		Reg16	0	0	0	0	0	0	0	0	0	0	0
	Reg513	0	0	0	0	0	0	0	0	0	0	0	
	Reg8	0	0	0	1	3	4	0	0	0	0	0	
	Reg4	0	0	0	2	3	5	0	0	0	0	0	
	Reg223	0	0	0	2	3	2	0	0	0	0	0	
	Reg2	0	0	0	2	0	1	0	0	0	0	0	
	Reg135	0	0	0	2	0	0	0	0	0	0	0	
	Reg113	0	0	0	1	0	0	0	0	0	0	0	
	Reg1	0	0	0	0	0	0	0	0	0	0	0	
	PedalDrawbar	Reg16	0	8	8	5	6	8	0	0	0	0	0
		Reg8	0	0	2	0	0	0	0	0	0	0	0
		VoiceType	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted
		NoClick	Normal	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	
BendLengthDown		2	12	0	2	2	2	2	2	2	2	2	
BendLengthUp		2	2	0	2	2	2	2	2	2	2	2	
SustainOn		Off	Off	Off	Off	On	On	Off	Off	Off	Off	Off	
SustainLength		2	2	2	2	3	2	2	2	2	2	2	
Length		Cont	Cont	Cont	Cont	Cont	5	Cont	Cont	Cont	Cont	Cont	
Velocity		Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
Mode	0	1	Poly	Poly	0	Mono	Poly	Poly	Poly	Poly	Poly		

Hammond XK-1 Factory Preset Contents	Bank Number	11	11	11	11	11	11	11	11	11	11	11	
	Preset Number	1	2	3	4	5	6	7	8	9	10	11	
	Bank Name	DemoSong	DemoSong	DemoSong	DemoSong	DemoSong	DemoSong	DemoSong	DemoSong	DemoSong	DemoSong	DemoSong	
	Preset Name	Cancel	XK-1Happy1	XK-1Happy2	XK-1Happy3	AcidWash 1	AcidWash 2	B3 Cookin	Shooting 1	Shooting 2	Liberatio1	Liberatio2	
UpperDrawbar	Reg16	0	8	8	8	8	8	8	0	8	8	8	
	Reg513	0	8	0	8	0	8	8	0	0	8	8	
	Reg8	0	8	0	8	0	8	8	0	8	8	8	
	Reg4	0	0	0	0	0	0	8	0	0	8	8	
	Reg223	0	0	0	0	0	0	0	0	0	4	6	
	Reg2	0	0	8	0	0	0	8	0	0	3	6	
	Reg135	0	0	8	0	0	0	8	0	6	0	5	
	Reg113	0	0	8	0	0	0	8	0	5	0	5	
	Reg1	0	0	8	8	0	0	8	0	4	0	5	
	VoiceType	B-Type	B-Type	B-Type	B-Type	B-Type	B-Type	B-Type	B-Type	B-Type	B-Type	B-Type	
	DrawbarClickAttack	12	10	10	10	10	10	10	7	7	12	12	
	DrawbarClickRelease	5	5	5	5	5	5	5	3	3	5	5	
	DrawbarEnvAttack	2	0	0	0	0	0	0	0	0	2	2	
	DrawbarEnvRelease	10	10	10	10	10	10	10	4	4	10	10	
	FoldBackLow	2C	2C	2C	2C	2C	2C	2C	2C	2C	2C	2C	
	FoldBackHi	4G	4G	4G	4G	4G	4G	4G	4G	4G	4G	4G	
	BendLengthDown	2	2	2	2	2	2	2	2	2	2	2	
	BendLengthUp	2	2	2	2	2	2	2	2	2	2	2	
	DrawbarClickLpf	110	110	110	110	110	110	110	127	127	110	110	
	BendMode	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	
BendTime	14	30	30	30	30	30	30	30	30	30	30		
BendAmp	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off		
Percussion	Second	Off	Off	Off	Off	Off	Off	Off	On	Off	Off	Off	
	Third	Off	On	Off	Off	On	Off	Off	Off	Off	On	Off	
	FastDecay	Off	On	On	On	On	On	On	Off	Off	On	On	
	PercSoft	Off	On	On	On	On	On	Off	Off	Off	On	On	
	LevelSoft	5	6	6	6	6	6	5	6	6	6	6	
	LevelNormal	11	11	11	11	11	11	11	11	11	12	12	
	DecayFast	2	3	3	3	5	5	3	5	5	3	3	
	DecayNormal	5	8	8	8	8	8	6	8	8	6	6	
	Touch	On	On	On	On	On	On	On	On	On	On	On	
	Velocity	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	KeyTrack	On	On	On	On	On	On	On	On	On	On	On	
	OneFeetCancel	On	On	On	On	On	On	On	On	On	On	On	
	DrawbarLevel	-3dB	-3dB	-3dB	-3dB	-3dB	-3dB	-3dB	0dB	0dB	-3dB	-3dB	
	ExtraVoice	ExvOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
VoiceNo		E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	E.Pf 70s	
OctaveShift		0	0	0	0	0	0	0	0	0	0	0	
Volume		100	100	100	100	100	100	100	100	100	100	100	
VelocityCurve		2	2	2	2	2	2	2	2	2	2	2	
ModulationOn		On	On	On	On	On	On	On	On	On	On	On	
IntZone		SplitOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
		ManualBass	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
	LUKeyRangeLo	36	36	36	36	36	36	36	36	36	36	36	
	LUKeyRangeHi	96	96	96	96	96	96	96	96	96	96	96	
	PedalRangeHi	59	59	59	59	59	59	59	59	59	59	59	
	SplitPoint	59	59	59	59	59	59	59	52	52	59	59	
	SplitLowerOctave	1	0	0	0	0	0	0	1	1	0	0	
Animation	LeslieOn	Off	On	On	On	On	On	On	On	On	On	On	
	LeslieFast	Off	Off	On	Off	Off	Off	On	Off	On	Off	On	
	VibratoChorus	Off	On	On	On	On	On	On	On	On	On	On	
	VibratoMode	Off	Off	3	3	Off	3	3	Off	3	Off	Off	
	VibratoSpeed	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.50Hz	6.50Hz	
	OdDriveLevel	0	5	5	5	5	5	10	0	3	10	45	
	LeslieBrake	Off	On	On	On	Off	Off	On	Off	Off	Off	Off	
	LeslieCabinet	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1	
	LeslieModOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	OdOn	On	On	On	On	On	On	On	On	On	On	On	
	OdExpCtrlOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	On	On	
	V1Depth	8	8	8	8	8	8	8	8	8	8	8	
	V2Depth	11	11	11	11	11	11	11	11	11	11	11	
	V3Depth	14	14	14	14	14	14	14	14	14	14	14	
	C1Depth	8	8	8	8	8	8	8	8	8	8	8	
	C2Depth	11	11	11	11	11	11	11	11	11	11	11	
	C3Depth	14	14	14	14	14	14	14	14	14	14	14	
	TremDepth	8	8	8	8	8	8	8	8	8	8	8	
	ChoEnrLef	6	6	6	6	6	6	6	6	6	6	6	
	EqRev	EqBassGain	Plus0	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus2	Plus2
EqMidGain		Plus0	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus0	Plus0	
EqTrebleGain		Plus0	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus4	Plus4	Mins2	
		1.2kHz	Freq700	Freq700	Freq700	Freq700	Freq700	Freq700	Freq700	1.2kHz	1.2kHz	480Hz	
ReverbOn		On	On	On	On	On	On	On	On	On	On	On	
ReverbType		Hall 1	Hall2	Hall2	Hall2	Hall2	Hall2	Hall2	Plate	Plate	Church	Church	
ReverbLevel		8	6	6	6	6	6	6	11	11	11	11	
ReverbTime		25	25	25	25	25	25	25	28	28	25	25	
ReverbFb		0	0	0	0	0	0	0	0	0	0	0	
ReverbDelayTime		0	45	45	45	45	45	45	45	0	0	0	
LeslieOnReverb		Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
LowerDrawbar		Reg16	0	7	8	8	8	8	8	0	0	2	3
	Reg513	0	4	4	4	4	4	8	0	0	2	3	
	Reg8	0	7	8	8	8	8	8	6	6	8	8	
	Reg4	0	0	0	0	0	0	8	6	5	7	6	
	Reg223	0	0	0	0	0	0	0	0	0	5	4	
	Reg2	0	0	0	0	0	0	0	0	0	4	3	
	Reg135	0	0	0	0	0	0	0	0	0	0	0	
	Reg113	0	0	0	0	0	0	0	0	0	2	0	
	Reg1	0	0	0	0	0	0	0	0	0	1	0	
	PedalDrawbar	Reg16	0	6	8	8	0	0	8	8	8	8	8
Reg8		0	0	0	0	0	0	0	0	0	4	4	
VoiceType		Muted	Normal	Normal	Normal	Muted	Muted	Normal	Normal	Normal	Muted	Muted	
NoClick		NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	
BendLengthDown		2	0	0	0	2	2	0	2	2	2	2	
BendLengthUp		2	0	0	0	2	2	0	2	2	2	2	
SustainOn		Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
SustainLength		2	2	2	2	S3Sustain	S3Sustain	2	4	4	3	3	
Length		Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	
Velocity		Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
Mode	0	Poly	Poly	Poly	0	0	Poly	Poly	Poly	Poly	Poly		



Hammond XK-1 Factory Preset Contents	Bank Number	Default
	Preset Number	
	Bank Name	
	Preset Name	
UpperDrawbar	Reg16	0
	Reg513	0
	Reg8	0
	Reg4	0
	Reg223	0
	Reg2	0
	Reg135	0
	Reg113	0
	Reg1	0
	VoiceType	B-Type
	DrawbarClickAttack	12
	DrawbarClickRelease	5
	DrawbarEnvAttack	2
	DrawbarEnvRelease	10
	FoldBackLow	2C
	FoldBackHi	4G
	BendLengthDown	2
	BendLengthUp	2
	DrawbarClickLpf	110
	BendMode	Bend
	BendTime	14
	BendAmp	Off
Percussion	Second	Off
	Third	Off
	FastDecay	Off
	PercSoft	Off
	LevelSoft	5
	LevelNormal	11
	DecayFast	2
	DecayNormal	5
	Touch	On
	Velocity	Off
	KeyTrack	On
	OneFeetCancel	On
	DrawbarLevel	-3dB
ExtraVoice	ExvOn	Off
	VoiceNo	E. Pf 70s
	OctaveShift	0
	Volume	100
	VelocityCurve	2
	ModulationOn	On
IntZone	SplitOn	Off
	ManualBass	Off
	LUKeyRangeLo	36
	LUKeyRangeHi	96
	PedalRangeHi	59
	SplitPoint	59
	SplitLowerOctave	0
Animation	LeslieOn	Off
	LeslieFast	Off
	VibratoChorus	Off
	VibratoMode	Off
	VibratoSpeed	6.83Hz
	OdDriveLevel	0
	LeslieBrake	Off
	LeslieCabinet	#1
	LeslieModOn	Off
	OdOn	Off
	OdExpCtrlOn	Off
	V1Depth	8
	V2Depth	11
	V3Depth	14
	C1Depth	8
	C2Depth	11
	C3Depth	14
	TremDepth	8
	ChoEnfLev	6
EqRev	EqBassGain	Plus0
	EqMidGain	Plus0
	EqTrebleGain	Plus0
		1.2kHz
	ReverbOn	Off
	ReverbType	Hall 1
	ReverbLevel	8
	ReverbTime	25
	ReverbFb	0
	ReverbDelayTime	0
	LeslieOnReverb	Off
LowerDrawbar	Reg16	0
	Reg513	0
	Reg8	0
	Reg4	0
	Reg223	0
	Reg2	0
	Reg135	0
	Reg113	0
	Reg1	0
PedalDrawbar	Reg16	0
	Reg8	0
	VoiceType	Muted
		NoClick
	BendLengthDown	2
	BendLengthUp	2
	SustainOn	Off
	SustainLength	2
	Length	Cont
	Velocity	Off
	Mode	Poly