

AVR 130 REMOTE CONTROL FUNCTIONS

- 1 Power Off Button
- 2 IR Transmitter Window
- 3 Program Indicator
- 4 Power On Button
- 5 Input Selectors
- 6 AVR Selector
- 7 AM/FM Tuner Select
- 8 Dim Button
- 9 Test Button
- 10 Sleep Button
- 11 DSP Surround Mode Selector
- 12 Night Mode Button
- 13 Channel Select Button
- 14 ▲▼ Buttons
- 15 Set Button
- 16 ◀▶ Buttons
- 17 Digital Select Button
- 18 Numeric Keys
- 19 Tuner Mode Button
- 20 Direct Button
- 21 Tuning Up/Down Buttons
- 22 Macro Buttons
- 23 Dolby Mode Select Button
- 24 DTS Digital Mode Select Button
- 25 Logic 7 Mode Select Button
- 26 Track Skip Up/Down Buttons
- 27 Transport Controls
- 28 Stereo Mode Selector Button
- 29 DTS Neo:6 Mode Select Button
- 30 Disc Skip Button
- 31 Preset Up/Down Buttons
- 32 Clear Button
- 33 Memory Button
- 34 Delay Button
- 35 Speaker Select Button
- 36 Spare Button
- 37 Volume Up/Down Button
- 38 TV/Video Button
- 39 6-Channel Direct Input Button
- 40 Mute

