


DVD 22 FRONT-PANEL INFORMATION DISPLAY

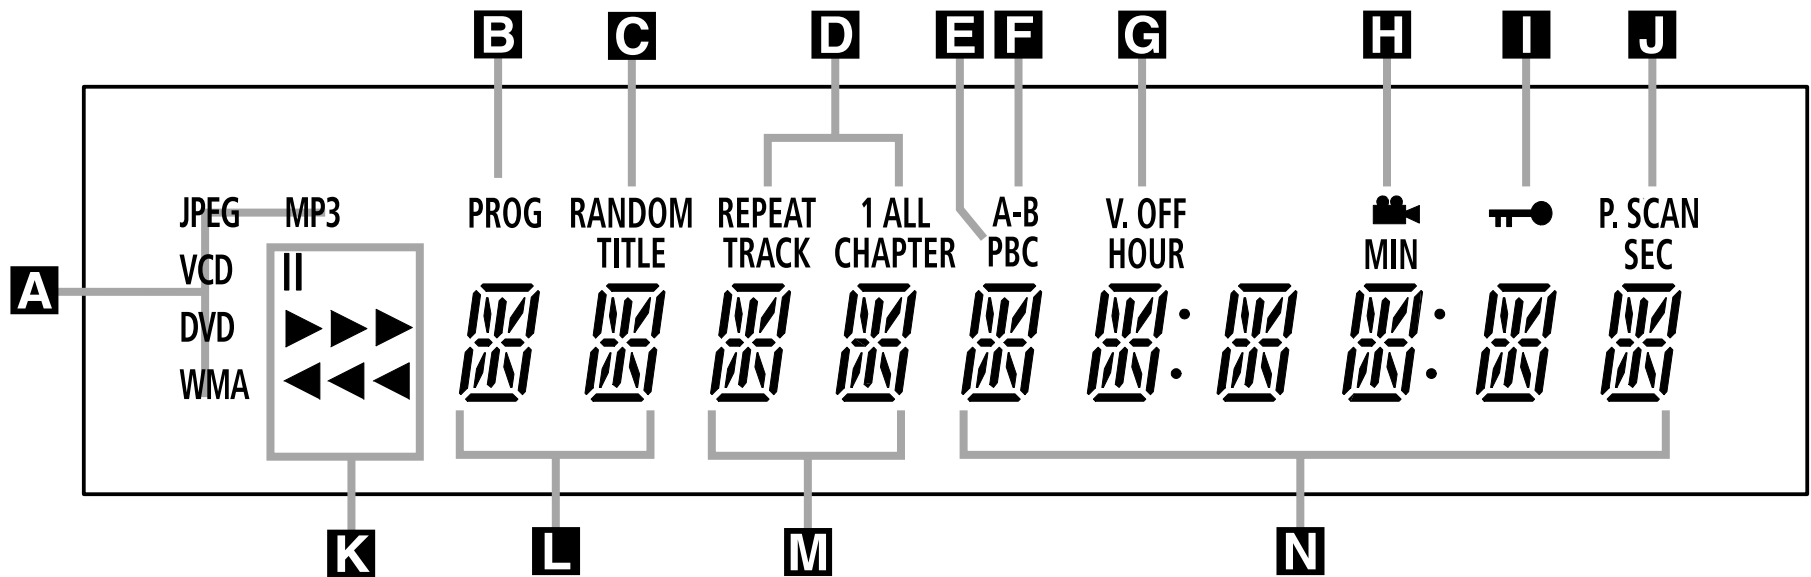

A Disc-Type Indicators

B Program Indicator

C Random Indicator

D Repeat Indicators

E VCD Playback Control Indicator

F A-B Repeat Indicator

G V-OFF Indicator

H Angle Indicator

I Parental Lock Indicator

J Progressive Scan Indicator

K Playback-Mode Indicator

L Title Indicators

M Chapter/Track Number Indicators

N Time Indicators