


DVD 31 FRONT-PANEL INFORMATION DISPLAY

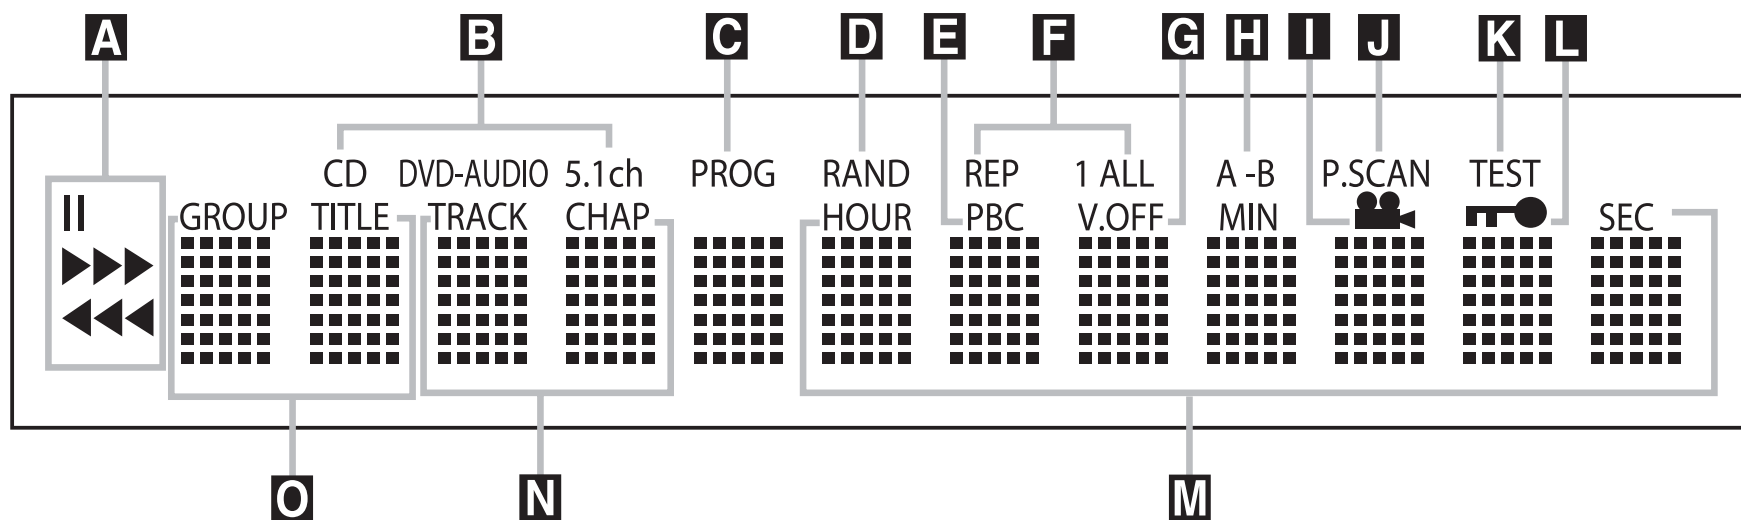

A Playback Mode Indicators

B Disc Type Indicators

C Program Indicator

D Random Indicator

E VCD Playback Control Indicator

F Repeat Indicators

G V-OFF Indicator

H A-B Repeat Indicator

I Angle Indicator

J Progressive Scan Indicator

K Test Signal Indicator

L Parental Lock Indicator

M Time Indicators

N Chapter/Track Indicators

O Group/Title Indicators