RF-3200 OPERATOR CARD

POWER UP PROCEDURE: REVIEW THE RF-3200 USERS GUIDE OPERATIONS SECTION TO ENSURE FAMILIARITY WITH BASIC TRANSCEIVER CONTROL OPERATIONS.	TO OPERATE FULL FREQ TUNING (GROUP "F") HALF DUPLEX OPERATION:
SELECT POWER ON AT THE TRANSCEIVER AND OBSERVE THE FRONT PANEL DISPLAYS ILLUMINATE.	SELECT GROUP "F"
NOTE RF-3200 DISPLAYS CAN ALSO BE CONTROLLED USING THE DIM KEY BEHIND THE RF-3200 FROM	
PANEL ACCESS DOOR.	■ ② ③ SELECT THE DESIRED RECEIVE FREQUENCY USING
CHANNEL OPERATION:	EITHER THE TUNING KNOB OR THE KEYPAD AND THE ENT BUTTON.
SELECT THE DESIRED GROUP; 1-9, "A".	PRESS CHAN/MON BUTTON UNTIL ONLY THE "TX" INDICATOR IS LIT.
PRESS CHAN/MON SWITCH TO DISPLAY CURREN CHANNEL NUMBER	SELECT THE DESIRED TRANSMIT FREQUENCY SELECT THE DESIRED TRANSMIT FREQUENCY USING EITHER THE TUNING KNOB OR THE
USE EITHER TUNING KNOB OR THE NUMERIC KEYPAD AND THE ENT BUTTON. SELECT THE DESIRED CHANNEL NUMBER.	KEYPAD AND THE ENT BUTTON. SELECT THE DESIRED MODE
SELECT THE DESIRED MODE. IF THE MODE HAS BEEN PREPROGRAMMED, IT CANNOT BE CHANGED.	MONITOR TX FREQUENCY BEFORE TRANSMITTING (PRESS CHAN/MON UNTIL TX INDICATOR IS LIT.
MONITOR THE FREQUENCY BEFORE USE. FOR HALF-DUPLEX CHANNELS, PRESS CHAN MON BUTTON UNTIL ONLY THE TX INDICATOR IS LIT.	KEY THE RADIO TO AUTOMATICALLY TUNE ALL SYSTEM COMPONENTS, AND BEGIN TRANSMITTING.
KEY THE RADIO TO AUTOMATICALLY TUNE ALI SYSTEM COMPONENTS AND BEGIN TRANSMITTING	USE THE DIM KEY TO CONTROL DISPLAY BRIGHTNESS.
TO OPERATE FULL FREQ TUNING (GROUP F) SIMPLEX OPERATION: SELECT GROUP "F".	USE THE SCAN BUTTON TO ENABLE/DISABLE THE SCAN FEATURE. "SC" IS DISPLAYED AS THE RADIO SCANS EACH CHANNEL IN THE SELECTED GROUP (1-9).
FOR SIMPLEX OPERATION, PRESS CHAN/MON BUTTON UNTIL BOTH "RX" AND "TX" INDICATORS ARE LIT.	PRESS THE "RFL" KEY (WHILE TRANSMITTING) RFL TO DISPLAY THE REFLECTED POWER LEVEL (FORWARD POWER IS NORMALLY DISPLAYED).
USE EITHER THE TUNING KNOB OR THE NUMER KEYPAD AND THE ENT BUTTON. SELECT THE DESIRED FREQUENCY.	PRESS THE CLARIFIER BUTTON AND USE THE TUNING CONTROL KNOB TO FINE TUNE THE RECEIVER.
SELECT THE DESIRED MODE	PRESS TO SQUELCH BACKGROUND NOISE IF NECESSARY.
KEY THE RADIO TO AUTOMATICALLY TUNE AL SYSTEM COMPONENTS AND BEGIN TRANSMITTING.	REFER TO THE USERS GUIDE FOR MORE DETAILED INFORMATION.