

# 10. Junction box JU-D8

JU-D8 is the connector conversion box containing an RS-232C interface circuit.

### (1) Section name and functions

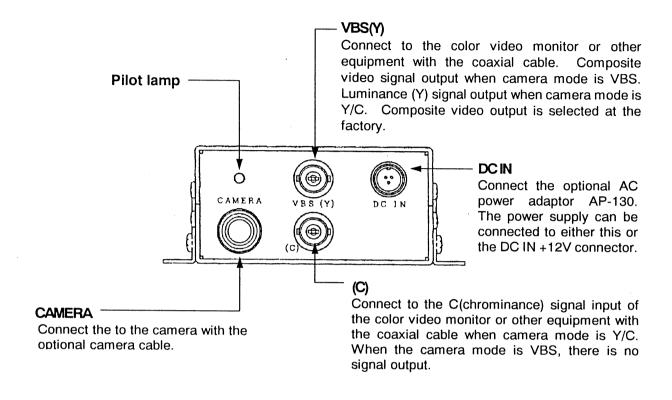


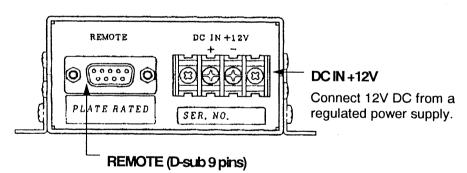


Connect to the RS-232C connector of a personal computer (with the optional straight-cable) to use the (optional) camera control software RS-D8 for camera setting

## (2) Connection with junction box JU-D8

 Connection of composite video output [ Mode select switch\_6 (VBS/YC) : VBS side ]

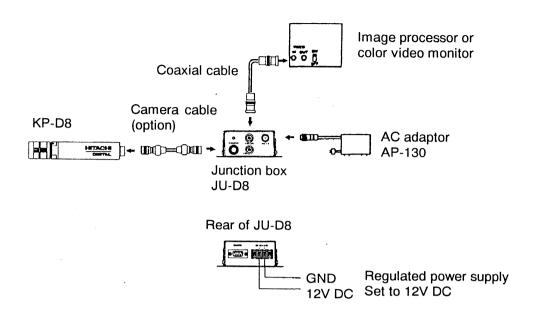



- When not using the AP-130 supply 12V from rear of the JU-D8.
- Set to 75 ohms termination switch only of the end monitor when plural monitors are connected in loop-through.
- Connection of Y/C signal output [ Mode select switch\_6 (VBS/YC) : Y/C side ]

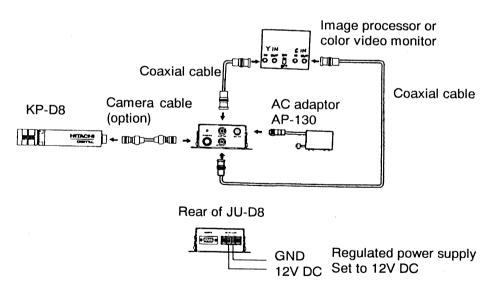

- When not using the AP-130 supply 12V from rear of the JU-D8.
- Set to 75 ohms termination switch only of the end monitor when plural monitors are connected in loop-through.


#### Connection with junction box JU-M1A

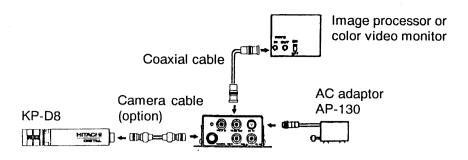

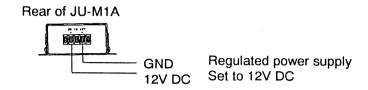

- · Connection of composite video output.
- Do not connect the cables to TRIG B IN, TRIG /VD IN, HD IN connector.
- When not using the AP-130 supply 12V from rear of the JU-D8.

## · Connection with junction box JU-D8 and a personal computer

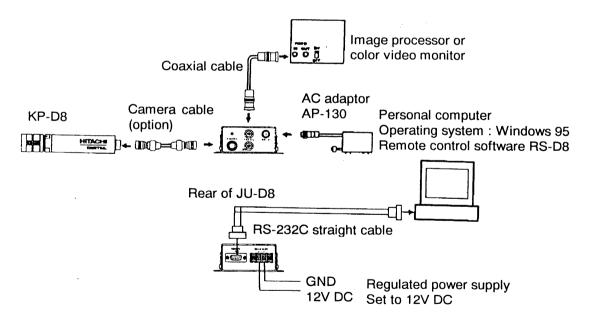

- Windows 95 is the trademark of Microsoft corporation.
- When not using the AP-130 supply 12V from rear of the JU-D8.

#### # Connection of JU-D8 and personal computer

Use a straight interface cable for connecting the junction box JU-D8 to the RS-232C port of the personal computer. The following 5 signals needed to be connected. Check when preparing the cable.

JU-D8 Plug : D-sub 9 pin (male)

Personal computer Plug:D-sub 9 pins (female)

Signal name	Pin	,	pin	Signal name
_	1		1	CD
TX	2		2	RD(RXD)
RX	3		3	TD(TXD)
_	4		4	DTR
GND	5		5	GND
	6		6	DSR
	7		7	RS(RTS)
_	8		8	CS(CTS)
_	9	Note	9	RI

#### Note


RS (pin 7) and CS (pin 8) have short-circuited on printed circuit board on the side of junction box JU-D8.

When installing the optional RS-232C interface circuit, short RTS (pin 7) and CTS (pin 8).

# 11. Camera cable [C-201KSM/C-501KSM/C-102KSM]

Cables dedicated for connecting the camera head and the Junction box JU-D8 are available as option.

Length	Туре	
2m	C-201KSM	
5m	C-501KSM	
10m	C-102KSM	

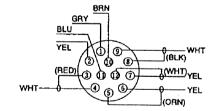

## # Attenuation due to cable length (dB)

Length	Attenuation a	Voltage drop	
	4MHz 50dB/km	7MHz 70dB/km	10V/km
2m	0.05 dB	0.07dB	0.02V
5m	0.10 dB	0.14dB	0.05V
10m	0.25dB	0.7dB	0.1V
*100m	5.0dB	7.0dB	1.0V

<sup>\*</sup> Only for reference value

## Internal connection of Junction box JU-D8

