

2 Installing the Site Maintenance Terminal

About This Chapter

This task describes how to install the Site Maintenance Terminal application on a suitable Site Maintenance Terminal PC.

[2.1 Configuration Requirements of the Site Maintenance Terminal PC](#)

The Site Maintenance Terminal PC meets the requirements for the configuration of hardware and software and for the communication capability.

[2.2 Installing the Site Maintenance Terminal \(Site Maintenance Terminal System\)](#)

The Site Maintenance Terminal is a component of the LMT software. The installation of the Site Maintenance Terminal can be finished through the installation of the LMT software.

2.1 Configuration Requirements of the Site Maintenance Terminal PC

The Site Maintenance Terminal PC meets the requirements for the configuration of hardware and software and for the communication capability.

Hardware Requirements

Table 2-1 lists the hardware requirements for the installation of the Site Maintenance Terminal PC.

Table 2-1 Hardware requirements

Item	Quantity	Minimum Configuration
CPU	1	PIII 866 CPU
RAM	1	256 MB
Hard disk	1	20 GB
Display adapter resolution	1	800×600
Ethernet adapter	1	10 Mbit/s or 100 Mbit/s
CD drive	-	-
Other devices	3×1	Keyboard, mouse, modem

Software Requirements

Table 2-2 lists the software requirements for the installation of the Site Maintenance Terminal PC.

Table 2-2 Software requirements

Item	Recommended Configuration
Operating system	Microsoft Windows 98/2000/XP
Default language of the operating system	English (United States)
Web browser	Microsoft Internet Explorer 5.5 or later versions

Communication Capability Requirements

The Site Maintenance Terminal PC supports the TCP/IP protocol.

2.2 Installing the Site Maintenance Terminal (Site Maintenance Terminal System)

The Site Maintenance Terminal is a component of the LMT software. The installation of the Site Maintenance Terminal can be finished through the installation of the LMT software.

Prerequisite

- The setup disk and the instructions about the installation of the LMT application are available. Huawei provides both the disk and the instructions.
- The valid installation serial number of the LMT software is available.
- The Site Maintenance Terminal PC meets the **requirements for the configuration of hardware and software and for the communication capability**.

Procedure

Install LMT software.

 **NOTE**

When selecting the software components to be installed, you need to select the **Site Maintenance Terminal System**.

----End