## IBM.

Networking

 
## 5250 Express ISA Adapter

Hardware Configuration Program


- 1. Shut down your PC and insert the second diskette from the 2.04 adapter diskettes. Boot you PC to the 2nd floppy. This will open an application called "Hardware Configuration."
- 2. Press the "enter" key at the first screen to continue with the program.

5250 Adapter Tests							
5250 Adapter Tests							
Version 2.00							
(c) Copyright IBM Corp. 1995,1997	(c) Copyright IBM Corp. 1995,1997						
Enter=Continue Fl=Help F3=Quit							


3. You will see four options on your next screen. Select the forth option, "Configure Adaptor" and press the "enter" key.



 
4. The next menu gives you five options, select the forth option "Select Adapter Type" and press the "enter" key.



5. Select your adapter type from the next menu and press the "enter" key.

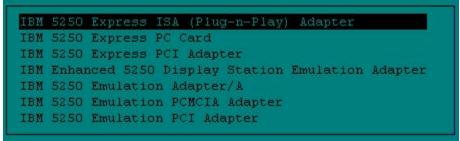

 - 6. You will receive three messages, after the third message is displayed, press any key.
- 7. At the next menu select the option "Change Adapter Configuration."



8. Select the option "Automatic Configuration" and press the enter key.



9. You will receive a message after you have automatically configured the settings on your adaptor. Press any key to continue.



10. Press "Escape" to return to the previous menu.

View	Ac	lapter	C	onfiguration
Chang	ye.	Adapte	er	Configuration
Test	Ac	lapter	C	onfiguration
Selec	3C	Adapte	er	Туре
Exit				

- 11. Select "Test Adapter Configuration" and press enter.
- 12. Upon completion of the test you should receive a message that informs you "Your Adapter Test has Successfully Completed."

Adapter configuration testing has successfully completed.

- 13. If you have received that message, your adapter is configured properly. You may need to run our <u>line diagnostic tests</u>.
- 14. If you have received an error message you may need to change the resource settings or call technical support at 1-800-237-5511.



**IBM 5250 Emulation Home Page** 

IBM Home	> ORDER	EMPLOYMENT	> CONTACT IBM > LEGAL
> EXPRESS	▶ TCP/IP	▶5308	> 6299 / 7299 >