IEM. Networking

5250 Express PCI Adapter

Hardware Configuration

- 1. Shut down your PC and insert the second diskette from the 2.04 adapter diskettes. Boot you PC to the 2nd floppy. This will open an application called "Hardware Configuration."
- 2. Press the "Enter" key at the first screen to continue with the program.



- 3. You will see four options on your next screen. Select the forth option, "Configure Adaptor" and press the "Enter" key.
- 4. The next menu gives you five options, select the forth option "Select Adapter Type" and press the "Enter" key.


View Adapter Configuration Change Adapter Configuration Test Adapter Configuration Select Adapter Type Exit

5. Select your adapter type from the next menu and press the "Enter" key.


1 of 3 2/26/99 10:50 AM

```
IBM 5250 Express ISA (Plug-n-Play) Adapter
IBM 5250 Express PC Card
IBM 5250 Express PCI Adapter
IBM Enhanced 5250 Display Station Emulation Adapter
IBM 5250 Emulation Adapter/A
IBM 5250 Emulation PCMCIA Adapter
IBM 5250 Emulation PCI Adapter
```

- 6. You will receive three messages, after the third message is displayed, press any key.
- 7. At the next menu select the option "Change Adapter Configuration."

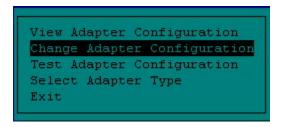

8. Select the option "Automatic Configuration" and press the enter key.

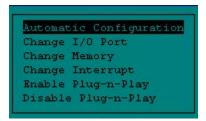


9. You will receive a message after you have automatically configured the settings on your adaptor. Press any key to continue.



2 of 3 2/26/99 10:50 AM

- 10. Press "Escape" to return to the previous menu.
- 11. Select "Test Adapter Configuration" and press enter.

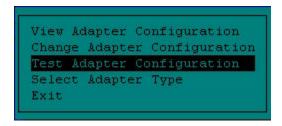

12. Upon completion of the test you should receive a message that informs you "Your Adapter Test has Successfully Completed."

Adapter configuration testing has successfully completed.

- 13. If you have received that message, your adapter is configured properly. You may need to run our <u>line diagnostic tests</u>.
- 14. If you have received an error message you may need to change the resource settings or call technical support at 1-800-237-5511.



IBM 5250 Emulation Home Page

➤ IBM Home ➤ ORDER ➤ EMPLOYMENT ➤ CONTACT IBM ➤ LEGAL

➤ EXPRESS ➤ TCP/IP ➤ 5308 ➤ 6299 / 7299 ➤

3 of 3