




Networking

## 5250 Express PC Card Hardware Configuration Program


1. Shut down your PC and insert the second diskette from the 2.04 adapter diskettes. Boot you PC to the 2nd floppy. This will open an appliiction called "Hardware Configuration."
2. Press the "enter" key at the first screen to continue with the program.




3. The next menu gives you five options, select the forth option "Select Adapter Type" and press the "enter" key.

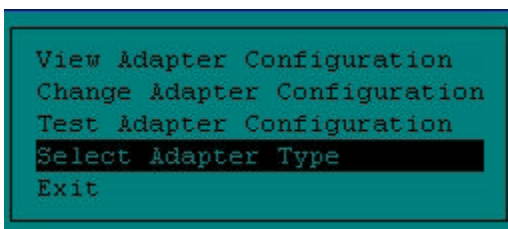

4. Select your adapter type from the next menu and press the "Enter" key.

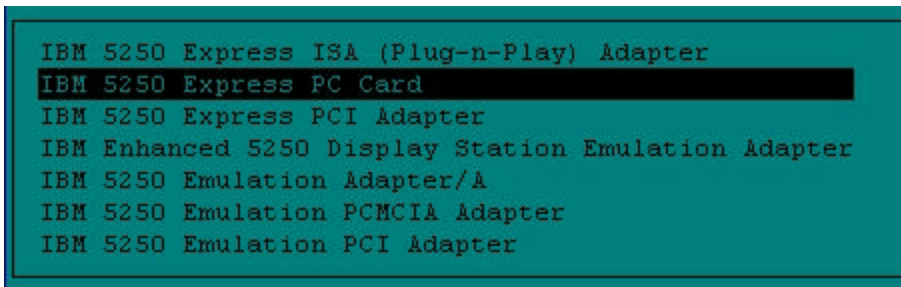


5. There will be a grey message box that pops up telling you that we have created your initial configuration, then another saying that the configuration has been saved.

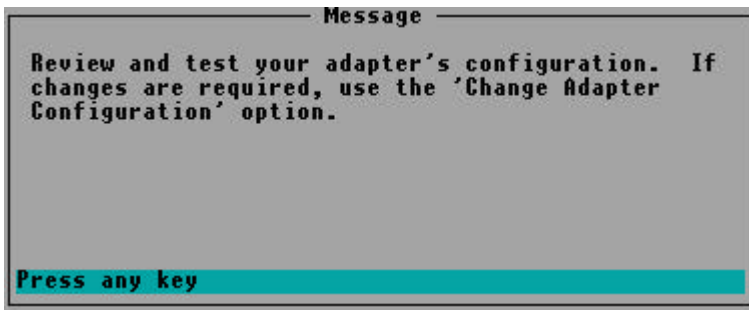


6. Yet another message telling you to test your adapter configuration should now be on your display. Press any key (really - any old key will do) to move to the next step.
7. This brings you to the Adapter Configuration Menu. Select "Change Adapter Configuration".



8. This brings you to the Change Adapter Configuration menu. Select "Change PCMCIA Support".

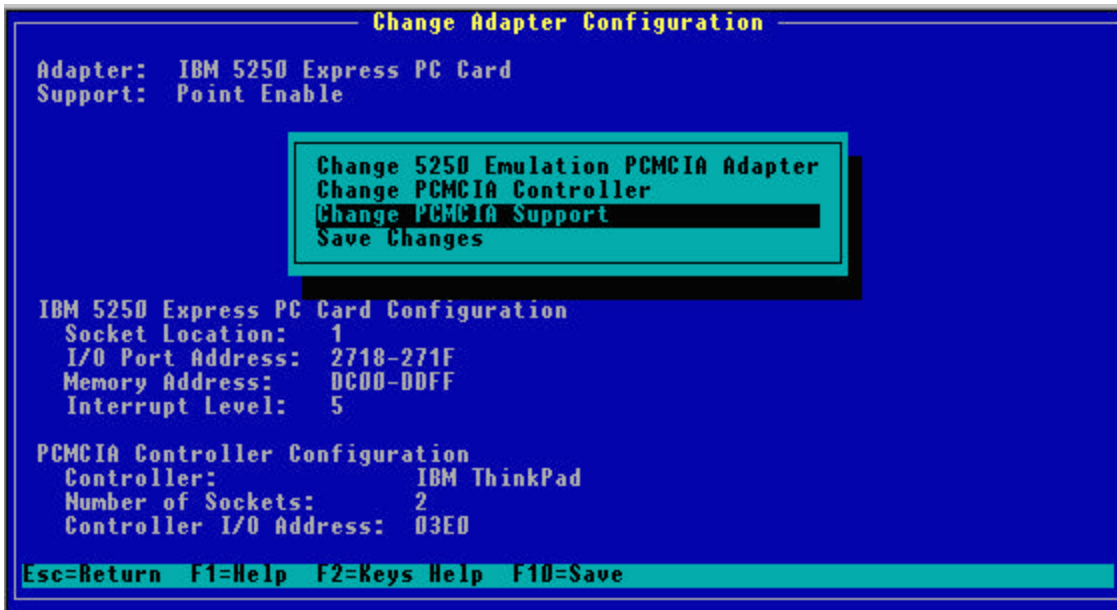

9. You should have the "Change PCMCIA Support" menu on your display.

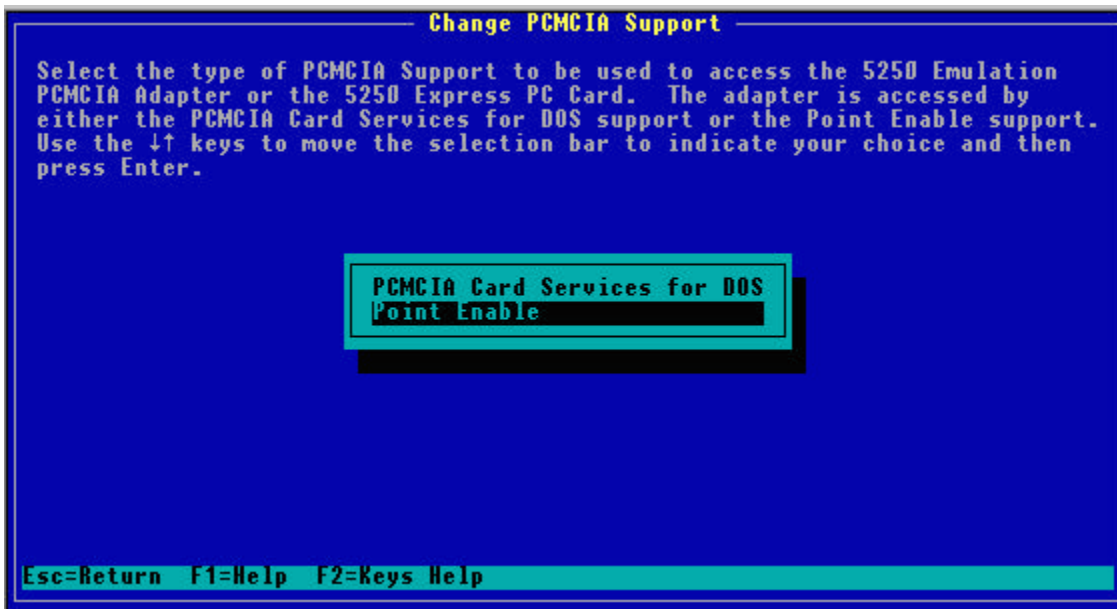

Choose **Point Enable** to give yourself consistent resources. IE: What we want is for your 5250 Express PC Card to always get the same system resources for memory, IRQ, and I/O segment each time you boot this diskette.

Choose a path . . .

- [PCMCIA Card Services for DOS](#)

- [Point Enable](#)



## [IBM 5250 Emulation Home Page](#)

