




Switch Settings

Using Micro Channel Software on the AT bus or ISA software on the Micro Channel or PCMCIA bus will cause the CARD NOT FOUND ... error. Be sure the emulation software was purchased for the bus configuration you are currently using. The following chart will confirm what software you have installed on your PC.


DP5250.COM	40448	06-22-93	PCMCIA
DP5250.COM	40448	12-15-93	ISA/AT
DP5250.COM	40448	05-12-93	MCA

 The other area of concern should be the DIP switches located on the top rear of the adapter card. (ISA/AT machines ONLY) These switches are set with #1 and #6 to the ON position in their DEFAULT CONFIGURATION. That is where the AT software expects to find the adapter. If you change these DIP switches, then you MUST change the software settings to match. This setting is controlled in the Advanced Options Menu, option 3, then option 6. The chart on the following page will assist you in configuring your ISA bus adapter.




NOTE: Switches #7 and #8 are currently **UNUSED** by this adapter, and should be in the OFF position

 
NOTE: The switches **MUST** be fully depressed to function **CORRECTLY**. I suggest using a writing pen to make these changes. Use of anything smaller (like a paper clip) will cause serious problems if it becomes lodged in the bus of the PC.




240X

 


24DX

 


241X

 


24EX

 


242X

 


24FX

 


243X

 


250X

 


244X

 


251X

 


245X

 


252X

 


246X

 


253X

 


247X

 


254X

 


248X

 


255X

 


249X

 


256X

 


24AX

 


257X

 


24BX

 


258X

 


24CX

 


259X

 


25AX

 


267X

 


25BX

 


268X

 


25CX

 


269X

 


25DX

 


26AX

 


25EX

 


26BX

 


25FX

 


26CX

 


260X

 


26DX

 


261X

 


26EX

 


262X

 


26FX

 


263X

 


270X

 


264X

 


271X

 


265X

 


272X

 


266X

 


273X

 


274X

 


275X

 


276X

 


277X

 


278X

 


279X

 


27AX

 


27BX

 


27CX

 

27DX

 

27EX

 

27FX

The black squares represent the switch in a depressed state. Using your pen, firmly depress the switches on the card to match the diagram, then set your software to match. **THE PC MUST BE POWERED OFF** during this operation.

Use the blank provided below to record your settings **BEFORE** you make **ANY CHANGES**.

