

Nways Multiprotocol Routing Services



# Software User's Guide

## Version 3.3

**Note**

Before using this document, read the general information under "Notices" on page xxiii.

**Tenth Edition (June 1999)**

This edition applies to Version 3.3 of the IBM Nways Multiprotocol Routing Services and to all subsequent releases and modifications until otherwise indicated in new editions or technical newsletters.

Order publications through your IBM representative or the IBM branch office serving your locality. Publications are not stocked at the address below.

IBM welcomes your comments. A form for readers' comments is provided at the back of this publication. If the form has been removed, you may address your comments to:

Department CGF  
Design & Information Development  
IBM Corporation  
P.O. Box 12195  
RESEARCH TRIANGLE PARK NC 27709  
USA

When you send information to IBM, you grant IBM a non-exclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

© **Copyright International Business Machines Corporation 1994, 1999. All rights reserved.**

US Government Users Restricted Rights – Use duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

---

# Contents

<b>Figures</b> . . . . .	xix
<b>Tables</b> . . . . .	xxi
<b>Notices</b> . . . . .	xxiii
<b>Notice to Users of Online Versions of This Book</b> . . . . .	xxv
<b>Trademarks</b> . . . . .	xxvii
<b>Preface</b> . . . . .	xxix
Who Should Read This Manual . . . . .	xxix
About the Software . . . . .	xxix
Conventions Used in This Manual . . . . .	xxx
IBM 2210 Nways Multiprotocol Router Publications . . . . .	xxx
Summary of Changes for the IBM 2210 Software Library . . . . .	xxxii

---

## Part 1. Understanding and Using the Software . . . . . 1

<b>Chapter 1. Getting Started</b> . . . . .	3
Before You Begin . . . . .	3
Migrating to the Current Release . . . . .	3
Accessing the Software Using Local and Remote Consoles . . . . .	3
Local Consoles . . . . .	4
Remote Consoles . . . . .	5
Logging In Remotely or Locally . . . . .	5
Reloading or Restarting the Device . . . . .	6
Exiting the Device . . . . .	6
Discussing the User Interface System . . . . .	6
Understanding the First-Level User Interface . . . . .	7
<b>Chapter 2. Using the Software</b> . . . . .	9
Entering Commands . . . . .	9
Connecting to a Process . . . . .	9
Identifying Prompts . . . . .	10
Getting Help . . . . .	10
Exiting a Lower Level Environment . . . . .	11
Getting Back to OPCON . . . . .	11
Some Configuration Suggestions . . . . .	11
Creating a First Configuration . . . . .	11
Basing a Configuration on an Existing Configuration . . . . .	12
Accessing the Second-Level Processes . . . . .	13
Accessing the Configuration Process, CONFIG (Talk 6) . . . . .	14
Accessing the Console Operating/Monitoring Process, GWCON (Talk 5) . . . . .	14
Accessing the Third-Level Processes . . . . .	15
Adding Devices . . . . .	15
Accessing Feature Configuration and Operating Processes . . . . .	19
Accessing Protocol Configuration and Operating Processes . . . . .	19
Command Completion . . . . .	21
Online Help When Command Completion is Enabled . . . . .	22
Online Help When Command Completion is Disabled . . . . .	23
Command History . . . . .	24
Repeating a Command in the Command History . . . . .	24

Repeating a Series of Commands in the Command History . . . . .	24
---	----

<b>Chapter 3. The OPCON Process and Commands . . . . .</b>	<b>27</b>
What is the OPCON Process? . . . . .	27
Accessing the OPCON Process . . . . .	27
OPCON Commands . . . . .	27
Breakpoint . . . . .	28
Configuration . . . . .	29
Console . . . . .	29
Divert . . . . .	29
Event . . . . .	30
Flush . . . . .	30
Halt. . . . .	31
Intercept . . . . .	31
Logout . . . . .	32
Memory . . . . .	32
Pause (EasyStart only) . . . . .	33
Ping . . . . .	33
Reload . . . . .	34
Restart . . . . .	34
Status. . . . .	35
Stop (EasyStart only) . . . . .	36
Suspend . . . . .	37
Talk. . . . .	37
Telnet . . . . .	37

---

<b>Part 2. Understanding, Configuring, and Using Base Services . . . . .</b>	<b>41</b>
--	-----------

<b>Chapter 4. The CONFIG Process (CONFIG - Talk 6) and Commands . . . . .</b>	<b>43</b>
What is CONFIG? . . . . .	43
Using EasyStart . . . . .	43
Config-Only Mode . . . . .	44
Quick Configuration . . . . .	46
Configuring User Access . . . . .	47
Configuring Spare Interfaces . . . . .	48
Resetting Interfaces. . . . .	51
Entering and Exiting CONFIG . . . . .	54
CONFIG Commands . . . . .	54
Add. . . . .	55
Boot . . . . .	62
Change . . . . .	62
Clear . . . . .	64
Delete. . . . .	66
Disable . . . . .	67
Enable . . . . .	68
Environment . . . . .	69
Event . . . . .	71
Feature . . . . .	71
List . . . . .	72
Network . . . . .	75
Patch . . . . .	76
Performance . . . . .	78
Protocol . . . . .	78
Qconfig . . . . .	79
Set . . . . .	79
Time . . . . .	83

Unpatch . . . . .	84
Update . . . . .	84
<b>Chapter 5. The Boot CONFIG Process . . . . .</b>	<b>87</b>
What is Boot CONFIG? . . . . .	87
Configuring Booting . . . . .	87
Using a Device as a Boot Server . . . . .	88
How the BOOTP Forwarding Process Works . . . . .	88
A Device as a BOOTP Client . . . . .	88
A Device as a BOOTP Relay Agent . . . . .	89
Enabling/Disabling BOOTP Forwarding . . . . .	89
Configuring a BOOTP Server . . . . .	89
Using the Trivial File Transfer Protocol (TFTP) . . . . .	90
Accessing Configuration Files From a Remote Host or Router . . . . .	91
Filename Definitions for IBD. . . . .	91
IBD Considerations When Transferring a File . . . . .	92
Transferring Large Amounts of Data to Multiple Files . . . . .	92
Specifying the Maximum Number of Blocks to Transfer to a File at the Receiver . . . . .	93
Validating the Configuration Load . . . . .	93
Loading an Image at a Specific Time . . . . .	93
Configuring Dumping . . . . .	94
Dump Files . . . . .	94
TFTP Server, Boot and Dump Directories. . . . .	94
Installing Software/Code . . . . .	94
<b>Chapter 6. Configuring Boot CONFIG . . . . .</b>	<b>97</b>
Entering and Exiting Boot CONFIG . . . . .	97
Boot CONFIG Commands . . . . .	97
Add. . . . .	98
Change . . . . .	100
Copy . . . . .	102
Delete. . . . .	103
Describe . . . . .	104
Disable . . . . .	104
Enable . . . . .	105
Erase . . . . .	105
List . . . . .	106
Load . . . . .	108
Store . . . . .	109
Timedload . . . . .	110
TFTP . . . . .	111
<b>Chapter 7. Boot Options . . . . .</b>	<b>115</b>
Before you Begin. . . . .	115
Booting From the Integrated Boot Device Using a Console Terminal . . . . .	115
BOOTP Using a Console Terminal . . . . .	116
Booting from a TFTP host server using a console terminal . . . . .	117
Boot Options Available. . . . .	117
Accessing the Boot Options. . . . .	117
Boot Option Prompts . . . . .	118
B (Boot) . . . . .	120
BC (Boot in Config-only Mode). . . . .	120
BM (Boot using console queries) . . . . .	121
BN (Boot, But Do Not Run, Using Console Queries) . . . . .	123
BP (Boot using BOOTP) . . . . .	123

D (Dump using stored configuration)	124
DIAG (Execute IBM Extended Diagnostic Program)	124
DM (Dump using Console Queries)	125
UB (Display TFTP Boot Configuration)	125
UC (Display Hardware Configuration)	126
UG (Go execute at address in RAM)	126
LC (Load Configuration Memory)	127
CC (Clear Configuration Memory)	128
ZB (ZModem Boot)	128
ZC (ZModem configuration memory load)	128
Configuring the 2210	129

**Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and**

<b>Commands</b>	131
What is GWCON?	131
Entering and Exiting GWCON	131
GWCON Commands	132
Activate	132
Boot	133
Buffer	133
Clear	135
Configuration	135
Disable	137
Environment	138
Error	139
Event	140
Fault	140
Feature	140
Interface	140
Log	141
Memory	141
Network	143
Performance	144
Protocol	144
Queue	144
Reset	146
Statistics	146
Test	146
Uptime	147

**Chapter 9. The Messaging (MONITR - Talk 2) Process**

What is Messaging (MONITR)?	149
Commands Affecting Messaging	149
Entering and Exiting the Messaging (MONITR) Process	149
Receiving Messages	149

**Chapter 10. Using the Event Logging System (ELS)**

What is ELS?	151
Entering and Exiting the ELS Configuration Environment	152
Event Logging Concepts	152
Causes of Events	152
Interpreting a Message	153
Using ELS	155
Managing ELS Message Rotation	156
Capturing ELS Output Using a Telnet Connection on a UNIX Host	156
Configuring ELS So Event Messages Are Sent In SNMP Traps	157

Using ELS to Troubleshoot a Problem . . . . .	157
ELS Example 1 . . . . .	157
ELS Example 2 . . . . .	158
ELS Example 3 . . . . .	158
Using and Configuring ELS Remote Logging . . . . .	159
Syslog Facility and Level . . . . .	159
Remote Workstation Configuration . . . . .	159
Configuring the 2210 for Remote Logging. . . . .	161
Remote Logging Output . . . . .	163
Additional Considerations. . . . .	166
Using ELS Message Buffering . . . . .	167
<b>Chapter 11. Configuring and Monitoring the Event Logging System (ELS) .</b>	<b>171</b>
Accessing the ELS Configuration Environment . . . . .	171
ELS Configuration Commands . . . . .	171
Add. . . . .	172
Advanced . . . . .	172
Clear . . . . .	172
Default . . . . .	173
Delete. . . . .	173
Display . . . . .	173
Filter . . . . .	174
List . . . . .	174
Nodisplay . . . . .	176
Noremote . . . . .	176
Notrace . . . . .	178
Notrap. . . . .	178
Remote . . . . .	179
Set . . . . .	181
Trace . . . . .	184
Trap . . . . .	185
ELS Net Filter Configuration Commands . . . . .	185
ELS Message Buffering Configuration Commands . . . . .	188
Entering and Exiting the ELS Operating Environment . . . . .	191
ELS Monitoring Commands . . . . .	192
Advanced . . . . .	192
Clear . . . . .	192
Display . . . . .	193
Files . . . . .	193
Filter . . . . .	194
List . . . . .	194
Nodisplay . . . . .	196
Noremote . . . . .	197
Notrace . . . . .	198
Notrap. . . . .	198
Packet Trace . . . . .	199
Remote . . . . .	199
Remove . . . . .	201
Restore . . . . .	201
Retrieve . . . . .	201
Save . . . . .	202
Set . . . . .	202
Statistics. . . . .	206
Trace . . . . .	208
Trap . . . . .	209
View . . . . .	209

Packet-trace Monitoring Commands . . . . .	210
ELS Net Filter Monitoring Commands . . . . .	213
ELS Message Buffering Monitoring Commands . . . . .	215
<b>Chapter 12. Configuring and Monitoring Performance . . . . .</b>	<b>221</b>
Performance Overview. . . . .	221
Performance Reporting Accuracy . . . . .	221
Accessing the Performance Configuration Environment. . . . .	221
Performance Configuration Commands . . . . .	222
Disable . . . . .	222
Enable . . . . .	222
List . . . . .	222
Set . . . . .	223
Accessing the Performance Monitoring Environment. . . . .	223
Performance Monitoring Commands. . . . .	223
Disable . . . . .	224
Enable . . . . .	224
List . . . . .	224
Report. . . . .	224
Set . . . . .	224

---

**Part 3. Understanding, Configuring and Operating Interfaces. . . . . 227**

<b>Chapter 13. Getting Started with Network Interfaces . . . . .</b>	<b>229</b>
Before You Continue . . . . .	229
Network Interfaces and the GWCON Interface Command . . . . .	229
Accessing Network Interface Configuration and Console Processes . . . . .	229
Accessing Link Layer Protocol Configuration and Console Processes . . . . .	230
Defining Spare Interfaces. . . . .	230
<b>Chapter 14. Configuring IEEE 802.5 Token-Ring Network Interfaces . . . . .</b>	<b>231</b>
Accessing the Token-Ring Interface Configuration Process . . . . .	231
Token-Ring Configuration Commands . . . . .	231
List . . . . .	231
LLC . . . . .	232
Packet-Size. . . . .	232
Set . . . . .	233
Source-routing. . . . .	233
Speed. . . . .	234
Accessing the Interface Monitoring Process . . . . .	234
Token-Ring Interface Monitoring Commands. . . . .	235
Dump . . . . .	235
LLC . . . . .	236
Token-Ring Interfaces and the GWCON Interface Command. . . . .	236
Statistics Displayed for 802.5 Token-Ring Interfaces . . . . .	236
<b>Chapter 15. Configuring and Monitoring LLC Interfaces . . . . .</b>	<b>241</b>
Accessing the Interface Configuration Process . . . . .	241
LLC Configuration Commands . . . . .	241
List . . . . .	242
Set . . . . .	243
Accessing the Interface Monitoring Process . . . . .	244
LLC Monitoring Commands . . . . .	245
Clear-Counters . . . . .	245
List . . . . .	245
Set . . . . .	250



<b>Chapter 16. Using the Ethernet Network Interface</b> . . . . .	253
Displaying Ethernet Statistics through the Interface Command . . . . .	253
<b>Chapter 17. Configuring and Monitoring the Ethernet Network Interface</b> . . . . .	257
Accessing the Ethernet Interface Configuration Process . . . . .	257
Ethernet Configuration Commands . . . . .	257
Connector-Type . . . . .	258
IP-Encapsulation . . . . .	258
List . . . . .	258
Physical-Address. . . . .	258
Accessing the Ethernet Interface Operating Process . . . . .	259
Ethernet Interface Monitoring Commands . . . . .	259
Collisions . . . . .	259
<b>Chapter 18. Overview of LAN Emulation</b> . . . . .	261
LAN Emulation Benefits . . . . .	261
LAN Emulation Components . . . . .	262
Addressing in ATM . . . . .	263
ESI . . . . .	264
ATM Addresses of LAN Emulation Components . . . . .	264
Overview of Related ILMI Functions . . . . .	265
Manual Configuration of the Signaling Version . . . . .	265
Locating the LECS Using ILMI . . . . .	265
Overview of the LECS Function . . . . .	266
Sample Situations for Use of the LECS Assignment Policies . . . . .	268
More Information About TLVs . . . . .	269
Connecting to the LES. . . . .	270
Address Registration . . . . .	271
Address Resolution . . . . .	271
Connecting to the BUS . . . . .	271
BUS Functions . . . . .	272
Establishing Data Direct VCCs. . . . .	273
Overview of Extensions for LAN Emulation . . . . .	273
Broadcast Manager . . . . .	273
BCM Support for IP . . . . .	274
BCM Support for IPX . . . . .	274
BCM Support for NetBIOS . . . . .	275
BCM Support for Source Route Bridging . . . . .	275
LAN Emulation Reliability. . . . .	276
LAN Emulation Security . . . . .	277
Key Configuration Parameters for LAN Emulation . . . . .	278
<b>Chapter 19. Using ATM</b> . . . . .	279
ATM and LAN Emulation . . . . .	279
How to Enter Addresses . . . . .	279
ATM-LLC Multiplexing . . . . .	280
ATM Virtual Interface Concepts . . . . .	280
Advantages of Using ATM Virtual Interfaces . . . . .	280
Disadvantages of using ATM Virtual Interfaces . . . . .	281
<b>Chapter 20. Configuring and Monitoring ATM</b> . . . . .	283
Accessing the ATM Interface Configuration Process . . . . .	283
ATM Configuration Commands. . . . .	283
ATM Interface Configuration Commands . . . . .	284
Add. . . . .	285
List . . . . .	285

QoS Configuration . . . . .	286
Remove . . . . .	286
Set . . . . .	286
Enable . . . . .	290
Disable . . . . .	290
Accessing the Virtual ATM Interface Configuration Process . . . . .	290
ATM Virtual Interface Configuration Commands . . . . .	291
Add. . . . .	291
List . . . . .	291
Remove . . . . .	291
Accessing the ATM Monitoring Process . . . . .	292
ATM Monitoring Commands . . . . .	292
Interface . . . . .	292
ATM-LLC. . . . .	293
ATM Interface Monitoring Commands (ATM INTERFACE+ Prompt) . . . . .	293
List . . . . .	293
Trace . . . . .	294
Wrap . . . . .	295
ATM-LLC Monitoring Commands . . . . .	295
List . . . . .	296
ATM Virtual Interface Monitoring Commands . . . . .	296
<b>Chapter 21. Using LAN Emulation Clients.</b> . . . . .	297
LAN Emulation Client Overview . . . . .	297
<b>Chapter 22. Configuring and Monitoring LAN Emulation Clients</b> . . . . .	299
Configuring LAN Emulation Clients . . . . .	299
Add. . . . .	299
Config. . . . .	300
List . . . . .	300
Remove . . . . .	300
Configuring an ATM Forum-Compliant LE Client . . . . .	300
ARP Configuration . . . . .	301
Frame. . . . .	303
IP-Encapsulation (for Ethernet ATM Forum-Compliant LEC only) . . . . .	304
List . . . . .	304
LLC . . . . .	305
QoS . . . . .	305
RIF-Timer (for Token-Ring Forum-compliant LEC only) . . . . .	305
Set . . . . .	305
Source-Routing (for Token-Ring Forum-Compliant LEC only). . . . .	315
LLC Configuration Commands . . . . .	316
List . . . . .	316
Set . . . . .	317
Accessing the LEC Monitoring Environment . . . . .	318
LEC Monitoring Commands . . . . .	319
List . . . . .	319
LLC . . . . .	323
MIB. . . . .	323
QoS Information . . . . .	327
Trace . . . . .	327
LLC Monitoring Commands . . . . .	328
List . . . . .	328
Set . . . . .	328
<b>Chapter 23. Configuring Serial Line Interfaces</b> . . . . .	331

Accessing the Interface Configuration Process . . . . .	331
Clocking and Cable Type . . . . .	331
Network Interfaces and the GWCON Interface Command . . . . .	332
<b>Chapter 24. Using the X.25 Network Interface . . . . .</b>	<b>333</b>
Basic Configuration Procedures . . . . .	333
Setting the National Personality . . . . .	334
Understanding the X.25 Defaults . . . . .	334
X.25 Support Over ISDN BRI D-Channel (X.31) . . . . .	336
Null Encapsulation . . . . .	336
Limitations . . . . .	336
Configuration Changes . . . . .	336
Configuring Null Encapsulation and Closed User Groups (CUG) . . . . .	337
Understanding Closed User Groups . . . . .	338
Bilateral Closed User Groups . . . . .	339
Types of Extended Closed User Groups . . . . .	339
Establishing X.25 Circuits with Closed User Groups on a Device . . . . .	339
Configuring X.25 Closed User Groups . . . . .	340
<b>Chapter 25. Configuring and Monitoring the X.25 Network Interface . . . . .</b>	<b>341</b>
X.25 Configuration Commands. . . . .	341
Set . . . . .	342
Enable . . . . .	346
Disable . . . . .	347
National Enable . . . . .	347
National Disable . . . . .	349
National Set . . . . .	350
National Restore . . . . .	355
Add. . . . .	356
Change . . . . .	362
Delete. . . . .	364
List . . . . .	365
Accessing the Interface Monitoring Process . . . . .	367
X.25 Monitoring Commands. . . . .	368
List . . . . .	368
Parameters . . . . .	369
Reset . . . . .	370
Statistics . . . . .	370
X.25 Network Interfaces and the GWCON Interface Command . . . . .	372
Statistics Displayed for X.25 Interfaces. . . . .	372
<b>Chapter 26. Using XTP . . . . .</b>	<b>375</b>
The X.25 Transport Protocol . . . . .	375
Configuration Information. . . . .	376
DTE Address Wildcards . . . . .	377
XTP Backup Peer Function . . . . .	378
Searching for a Remote DTE . . . . .	378
Connection Request Timer . . . . .	379
Local XTP . . . . .	379
XTP and Closed User Groups . . . . .	379
Configuring XTP . . . . .	380
Configuration Procedures. . . . .	380
Setting the Data Link . . . . .	381
Configuring the IP Interface . . . . .	381
Configuring X.25 . . . . .	381
Setting the National Personality . . . . .	383

Defining the IP Address . . . . .	383
Setting the Internal IP Address. . . . .	383
Configuring XTP . . . . .	383
Sample Configuration of Remote Routers. . . . .	385
<b>Chapter 27. Configuring and Monitoring XTP . . . . .</b>	<b>389</b>
XTP Configuring Commands . . . . .	389
Add. . . . .	389
Change . . . . .	392
Delete. . . . .	392
Enable . . . . .	394
Disable . . . . .	394
Set . . . . .	394
List . . . . .	394
XTP Monitoring Commands . . . . .	396
Add. . . . .	396
Delete. . . . .	397
List . . . . .	397
<b>Chapter 28. Using Frame Relay Interfaces . . . . .</b>	<b>401</b>
Frame Relay Overview . . . . .	401
Frame Relay Network . . . . .	402
Frame Relay Switched Virtual Circuits . . . . .	403
Frame Relay Interface Initialization . . . . .	403
Orphan Circuits . . . . .	404
Configuring PVC States to Affect the Frame Relay Interface State. . . . .	405
Frame Relay Frame. . . . .	406
Frame Forwarding over the Frame Relay Network . . . . .	408
Protocol Addresses . . . . .	408
Multicast Emulation and Protocol Broadcast . . . . .	408
Frame Relay Network Management . . . . .	409
Management Status Reporting. . . . .	409
Full Status Report . . . . .	409
Link Integrity Verification Report . . . . .	410
Consolidated Link Layer Management (CLLM) . . . . .	410
Frame Relay Data Rates . . . . .	410
Committed Information Rate (CIR) . . . . .	410
Orphan Permanent Virtual Circuit CIR . . . . .	411
Committed Burst (Bc) Size . . . . .	411
Excess Burst (Be) Size . . . . .	411
Line Speed . . . . .	412
Minimum Information Rate . . . . .	412
Maximum Information Rate . . . . .	412
Variable Information Rate. . . . .	413
Circuit Congestion . . . . .	413
CIR Monitoring . . . . .	413
Congestion Monitoring. . . . .	414
Congestion Notification and Avoidance. . . . .	414
Bandwidth Reservation over Frame Relay . . . . .	416
Fragmentation Over a Frame Relay Interface . . . . .	416
Voice Forwarding Over Frame Relay . . . . .	417
Displaying the Frame Relay Configuration Prompt . . . . .	417
Frame Relay Basic Configuration Procedure. . . . .	418
Enabling Frame Relay PVC Management. . . . .	419
Enabling Frame Relay SVC Management. . . . .	419

<b>Chapter 29. Configuring and Monitoring Frame Relay Interfaces . . . . .</b>	<b>421</b>
Frame Relay Configuration Commands . . . . .	421
Add . . . . .	422
Change . . . . .	429
Disable . . . . .	430
Enable . . . . .	432
List . . . . .	438
LLC . . . . .	444
Remove . . . . .	445
Set . . . . .	446
Accessing the Frame Relay Monitoring Prompt. . . . .	451
Frame Relay Monitoring Commands. . . . .	451
Clear . . . . .	452
Disable . . . . .	452
Enable . . . . .	452
List . . . . .	453
LLC . . . . .	462
Notrace . . . . .	462
Set . . . . .	462
Trace . . . . .	464
Frame Relay Interfaces and the GWCON Interface Command . . . . .	464
Statistics Displayed For Frame Relay Interfaces . . . . .	464
<b>Chapter 30. Using Point-to-Point Protocol Interfaces . . . . .</b>	<b>467</b>
PPP Overview. . . . .	467
PPP Data Link Layer Frame Structure . . . . .	468
The PPP Link Control Protocol (LCP) . . . . .	469
LCP Packets . . . . .	471
Link Establishment Packets . . . . .	472
Link Termination Packets . . . . .	473
Link Maintenance Packets . . . . .	473
PPP Authentication Protocols . . . . .	473
Password Authentication Protocol (PAP) . . . . .	474
Challenge-Handshake Authentication Protocol (CHAP) . . . . .	475
Microsoft PPP CHAP Authentication (MS-CHAP) . . . . .	475
Shiva Password Authentication Protocol (SPAP) . . . . .	475
Configuring PPP Authentication . . . . .	476
Configuring PPP Callback . . . . .	477
Using AAA with PPP . . . . .	478
The PPP Network Control Protocols. . . . .	478
AppleTalk Control Protocol . . . . .	479
Banyan VINES Control Protocol . . . . .	479
Bridging Protocols . . . . .	479
Callback Control Protocol. . . . .	479
DECnet IV Control Protocol . . . . .	479
IP Control Protocol . . . . .	480
IPv6 Control Protocol . . . . .	480
IPX Control Protocol . . . . .	481
OSI Control Protocol . . . . .	481
APPN HPR Control Protocol . . . . .	481
APPN ISR Control Protocol . . . . .	481
Using and Configuring Virtual Connections . . . . .	481
VC Considerations . . . . .	482
Configuring a VC. . . . .	482
<b>Chapter 31. Configuring and Monitoring Point-to-Point Protocol Interfaces</b>	<b>485</b>

Accessing the Interface Configuration Process . . . . .	485
Accessing the PPP Interface Configuration Prompt . . . . .	486
Point-to-Point Configuration Commands . . . . .	486
Disable . . . . .	486
Enable . . . . .	488
List . . . . .	490
LLC . . . . .	494
Set . . . . .	494
Accessing the Interface Monitoring Process . . . . .	503
Point-to-Point Monitoring Commands . . . . .	504
Clear . . . . .	504
List . . . . .	504
LLC . . . . .	526
Point-to-Point Protocol Interfaces and the GWCON Interface Command . . . . .	527
<b>Chapter 32. Using the Multilink PPP Protocol . . . . .</b>	<b>531</b>
MP Considerations . . . . .	532
Multi-Chassis MP . . . . .	533
Configuring a Multilink PPP Interface . . . . .	533
Configuring MP on PPP Dial Circuits . . . . .	533
Configuring MP on PPP Serial Links . . . . .	534
Configuring MP on Layer-2-Tunneling Nets . . . . .	534
Configuring Multi-Chassis MP . . . . .	535
<b>Chapter 33. Configuring and Monitoring Multilink PPP Protocol (MP) . . . . .</b>	<b>537</b>
Accessing the MP Configuration Prompt . . . . .	537
MP Configuration Commands for Multilink PPP Interfaces . . . . .	537
Disable . . . . .	537
Enable . . . . .	538
Encapsulator . . . . .	538
List . . . . .	538
Set . . . . .	539
Monitoring MP Interface Status . . . . .	541
Accessing the MP Monitoring Commands . . . . .	541
Multilink PPP Protocol Monitoring Commands . . . . .	541
List . . . . .	541
<b>Chapter 34. Configuring and Monitoring SDLC Relay . . . . .</b>	<b>547</b>
Overview of SDLC Relay . . . . .	547
Basic Configuration Procedure . . . . .	549
Dynamic Reconfiguration . . . . .	549
Accessing the SDLC Relay Configuration Environment . . . . .	549
SDLC Relay Configuration Commands . . . . .	550
Add . . . . .	550
Delete . . . . .	551
Disable . . . . .	552
Enable . . . . .	552
List (for network SRLY) . . . . .	553
List (for protocol SDLC Relay) . . . . .	553
Set . . . . .	555
Accessing the SDLC Relay Monitoring Environment . . . . .	557
SDLC Relay Monitoring Commands . . . . .	557
Clear-Port-Statistics . . . . .	557
Disable . . . . .	558
Enable . . . . .	558
List . . . . .	558

SDLC Relay Interfaces and the GWCON Interface Command . . . . .	560
<b>Chapter 35. Using SDLC Interfaces</b> . . . . .	561
Basic Configuration Procedure . . . . .	561
Configuring Switched SDLC Call-In Interfaces . . . . .	561
SDLC Configuration Requirements . . . . .	562
<b>Chapter 36. Configuring and Monitoring SDLC Interfaces</b> . . . . .	563
Accessing the SDLC Configuration Environment . . . . .	563
SDLC Configuration Commands . . . . .	564
Add. . . . .	564
Delete. . . . .	566
Disable . . . . .	566
Enable . . . . .	566
List . . . . .	566
Set . . . . .	569
Accessing the SDLC Monitoring Environment . . . . .	576
SDLC Monitoring Commands . . . . .	576
Add. . . . .	576
Clear . . . . .	577
Delete. . . . .	577
Disable . . . . .	577
Enable . . . . .	577
List . . . . .	578
Msgsz. . . . .	581
Set . . . . .	581
Test . . . . .	585
SDLC Interfaces and the GWCON Interface Command. . . . .	585
Statistics Displayed for SDLC Interfaces . . . . .	585
<b>Chapter 37. Using Binary Synchronous Relay (BRLY)</b> . . . . .	587
BRLY Overview . . . . .	587
Sample BRLY Configuration. . . . .	588
BRLY Considerations . . . . .	590
<b>Chapter 38. Configuring and Monitoring BSC Relay.</b> . . . . .	593
Basic Configuration Procedure. . . . .	593
BSC Relay Configuration Commands . . . . .	593
Add. . . . .	594
Delete. . . . .	596
Disable . . . . .	596
Enable . . . . .	597
List (for network BSC) . . . . .	597
List (for protocol BRLY) . . . . .	598
Set . . . . .	599
Accessing the BSC Relay Monitoring Environment . . . . .	601
BSC Relay Monitoring Commands . . . . .	601
Clear . . . . .	602
Disable . . . . .	602
Enable . . . . .	602
List . . . . .	603
BSC Relay Interfaces and the GWCON Interface Command. . . . .	605
<b>Chapter 39. Using the V.25bis Network Interface</b> . . . . .	607
Before You Begin . . . . .	607
Configuration Procedures. . . . .	607

Adding V.25bis Addresses . . . . .	607
Configuring the V.25bis Interface . . . . .	608
Adding Dial Circuits . . . . .	609
Configuring Dial Circuits . . . . .	609
<b>Chapter 40. Configuring and Monitoring the V.25bis Network Interface . . . . .</b>	<b>611</b>
Accessing the Interface Configuration Process . . . . .	611
V.25bis Configuration Commands. . . . .	611
List . . . . .	612
Set . . . . .	613
Accessing the Interface Monitoring Process . . . . .	615
V.25bis Monitoring Commands. . . . .	615
Calls . . . . .	616
Circuits . . . . .	617
Parameters . . . . .	617
Statistics . . . . .	618
V.25bis and the GWCON Commands . . . . .	620
Statistics for V.25bis Interfaces and Dial Circuits . . . . .	620
<b>Chapter 41. Using the V.34 Network Interface . . . . .</b>	<b>623</b>
Before You Begin . . . . .	623
Configuration Procedures. . . . .	623
Adding V.34 Addresses . . . . .	623
Configuring the V.34 Interface . . . . .	624
Adding Dial Circuits . . . . .	625
Configuring Dial Circuits . . . . .	625
<b>Chapter 42. Configuring and Monitoring the V.34 Network Interface . . . . .</b>	<b>627</b>
Accessing the Interface Configuration Process . . . . .	627
V.34 Configuration Commands. . . . .	627
List . . . . .	628
Set . . . . .	629
Accessing the Interface Monitoring Process . . . . .	631
V.34 Monitoring Commands. . . . .	631
Calls . . . . .	632
Circuits . . . . .	633
Parameters . . . . .	633
Statistics . . . . .	634
V.34 and the GWCON Commands . . . . .	636
Statistics for V.34 Interfaces and Dial Circuits . . . . .	636
<b>Chapter 43. Using the ISDN Interface . . . . .</b>	<b>639</b>
ISDN Overview . . . . .	639
ISDN Adapters and Interfaces . . . . .	639
Dial Circuits. . . . .	640
Addressing . . . . .	641
Oversubscribing and Circuit Contention . . . . .	641
Cost Control Over Demand Circuits . . . . .	642
Caller ID and LIDS . . . . .	642
ISDN Cause Codes . . . . .	642
Sample ISDN Configurations . . . . .	644
Frame Relay over ISDN Configuration . . . . .	644
WAN Restoral Configuration . . . . .	645
Channelized T1/E1 . . . . .	645
Requirements and Restrictions for ISDN Interfaces . . . . .	646
Router. . . . .	646



Switches/Services Supported . . . . .	646
ISDN Interface Restrictions . . . . .	647
Dial Circuit Configuration Requirements . . . . .	647
Before You Begin . . . . .	647
Configuration Procedures. . . . .	647
Adding ISDN Addresses . . . . .	647
Configuring ISDN Parameters . . . . .	648
Configuring the ISDN Interface. . . . .	650
Adding Dial Circuits . . . . .	650
Configuring Dial Circuits . . . . .	651
ISDN I.430 and I.431 Switch Variants . . . . .	653
Native I.430 Support . . . . .	653
Native I.431 Support . . . . .	653
X.31 Support . . . . .	654
<b>Chapter 44. Configuring and Monitoring the ISDN Interface.</b> . . . . .	655
ISDN Configuration Commands . . . . .	655
Block-Calls . . . . .	655
Disable . . . . .	656
Enable . . . . .	656
List . . . . .	656
Remove . . . . .	657
Set . . . . .	657
Cause Code . . . . .	662
Accessing the Interface Monitoring Process . . . . .	663
ISDN Monitoring Commands . . . . .	663
Block-Calls . . . . .	663
Calls . . . . .	664
Channels. . . . .	664
Circuits . . . . .	665
Dial-dump . . . . .	666
L2_Counters . . . . .	666
L3_Counters . . . . .	666
TEI . . . . .	666
Parameters . . . . .	666
Statistics . . . . .	667
ISDN and the GWCON Commands . . . . .	669
Interface — Statistics for ISDN Interfaces and Dial Circuits . . . . .	669
Configuration - Information on Router Hardware and Software . . . . .	670
<b>Chapter 45. Configuring and Monitoring Dial Circuits</b> . . . . .	671
Adding a Dial Circuit On a Leased Line . . . . .	671
Dial Circuit Configuration Commands . . . . .	672
Delete. . . . .	672
Encapsulator . . . . .	672
List . . . . .	673
Set . . . . .	675
Dial Circuit Monitoring Commands . . . . .	678
Callback . . . . .	679

---

**Part 4. Appendixes . . . . . 681**

<b>Appendix A. Quick Configuration Reference.</b> . . . . .	683
Quick Configuration Tips . . . . .	683
Making Selections . . . . .	683
Integrated Modems . . . . .	683

Exiting and Restarting . . . . .	683
When You're Done . . . . .	683
Starting the Quick Configuration Program . . . . .	683
Configuring LAN Emulation . . . . .	684
Configuring Interfaces . . . . .	685
Ethernet . . . . .	685
Token-Ring . . . . .	686
Configuring Multilink PPP (MP) Interfaces. . . . .	687
Configuring Dial-Circuits . . . . .	689
Configuring Dial-in Access to LANs (DIALs) Interfaces and DIALs Server Information . . . . .	690
Configuring Bridging . . . . .	694
Configuring Protocols . . . . .	695
Configuring IP . . . . .	696
Configuring IPX . . . . .	697
Configuring DECnet (DNA) . . . . .	700
Configuring Booting . . . . .	702
TFTP Boot . . . . .	703
BOOTP Boot . . . . .	703
IBD Boot . . . . .	704
Enabling Console Modem-Control . . . . .	704
Restarting the Router . . . . .	704
<b>Appendix B. X.25 National Personalities . . . . .</b>	<b>707</b>
GTE-Telenet . . . . .	707
DDN . . . . .	707
<b>Appendix C. Making a Router Load File from Multiple Disks . . . . .</b>	<b>709</b>
Assembling a Load File Under DOS. . . . .	709
Assembling a Load File Under UNIX . . . . .	709
Disassembling a Load File Under DOS . . . . .	710
Disassembling a Load File Under UNIX . . . . .	711
<b>List of Abbreviations . . . . .</b>	<b>713</b>
<b>Glossary . . . . .</b>	<b>723</b>
<b>Index . . . . .</b>	<b>747</b>
<b>Readers' Comments — We'd Like to Hear from You. . . . .</b>	<b>765</b>

---

## Figures

1. Multiprotocol Routing Services . . . . .	7
2. Relationship of Processes and Commands . . . . .	8
3. Memory Utilization . . . . .	32
4. Message Generated by an Event . . . . .	153
5. Syslog Message Description . . . . .	159
6. syslog.conf Configuration File . . . . .	161
7. Configuring the 2210 for Remote Logging . . . . .	162
8. Configuring Subsystems and Events for Remote Logging . . . . .	163
9. Sample Contents from Syslog News Info File . . . . .	164
10. Output from Talk 2 . . . . .	165
11. Sample Contents from <i>Syslog_user_alert</i> File . . . . .	165
12. Example of Setting Up a Static ARP Entry . . . . .	166
13. Example of Recurring Sequence Numbers in Syslog Output . . . . .	167
14. Physical and Logical Views of a Simple LAN Emulation Network . . . . .	262
15. Default Connections Between LE Clients and the LES . . . . .	270
16. Default Connection Between LE Clients (LECs) and BUS . . . . .	272
17. LAN Emulation Redundancy . . . . .	276
18. Closed User Group Null Encapsulation . . . . .	338
19. Configuration Before and After XTP . . . . .	376
20. Sample XTP Configuration . . . . .	380
21. DLCIs in Frame Relay Network . . . . .	402
22. DLCIs in Frame Relay Network . . . . .	404
23. Orphan Circuit . . . . .	405
24. Frame-Relay Frame Format . . . . .	406
25. Congestion Notification and Throttle Down . . . . .	415
26. Examples of Point-to-Point Links . . . . .	468
27. PPP Frame Structure . . . . .	469
28. LCP Frame Structure (in PPP Information Field) . . . . .	471
29. Multichassis MP . . . . .	535
30. Example of an SDLC Relay Configuration . . . . .	548
31. Physical BSC Relay Configurations . . . . .	587
32. Virtual BSC Relay Multipoint Configuration . . . . .	588
33. Combination Virtual and Physical BRLY Multipoint Configuration . . . . .	588
34. BRLY Configuration for Router A (Commands entered at Router A) . . . . .	589
35. BRLY Configuration for Router B (Commands entered at Router B) . . . . .	590
36. BRLY Configuration for Router C (Commands entered at Router C) . . . . .	590
37. Frame Relay over ISDN Configuration . . . . .	644
38. Using ISDN for WAN Restoral . . . . .	645
39. X.31 Support . . . . .	654



---

## Tables

1. Processes, Their Purpose, and Commands to Access . . . . .	10
2. Network Architecture and the Supported Interfaces . . . . .	17
3. OPCON Commands. . . . .	28
4. CONFIG Command Summary . . . . .	54
5. Access Permission . . . . .	60
6. Environment Command Summary. . . . .	70
7. IBM 2210 Feature Numbers and Names . . . . .	71
8. Additional Functions Provided by the Set Prompt Level Command. . . . .	82
9. Default and Maximum Settings for Interfaces. . . . .	83
10. Conventions for File Name Extensions . . . . .	92
11. Boot CONFIG Commands . . . . .	97
12. Add Boot Entry Parameters . . . . .	99
13. Description of Boot Methods. . . . .	115
14. Boot Options . . . . .	118
15. Boot Option Prompts . . . . .	118
16. GWCON Command Summary . . . . .	132
17. Logging Levels. . . . .	154
18. Packet Completion Codes (Error Codes) . . . . .	154
19. ELS Configuration Command Summary . . . . .	171
20. ELS Net Filter Configuration Commands . . . . .	186
21. ELS Message Buffering Configuration Commands. . . . .	188
22. ELS Monitoring Command Summary . . . . .	192
23. Packet Trace Monitoring Command Summary . . . . .	210
24. ELS Net Filter Monitoring Commands . . . . .	213
25. ELS Message Buffering Monitoring Commands . . . . .	215
26. PERF Configuration Command Summary . . . . .	222
27. PERF Monitoring Command Summary . . . . .	223
28. Token-Ring Configuration Command Summary . . . . .	231
29. Token-Ring 4/16 Valid Packet Sizes . . . . .	233
30. Token-Ring Monitoring Command Summary . . . . .	235
31. LLC Configuration Command Summary . . . . .	241
32. LLC Monitoring Command Summary. . . . .	245
33. Ethernet Configuration Command Summary . . . . .	257
34. Ethernet monitoring command Summary . . . . .	259
35. ATM Configuration Command Summary . . . . .	283
36. ATM INTERFACE Configuration Command Summary . . . . .	284
37. ATM Virtual Interface Configuration Command Summary . . . . .	291
38. ATM monitoring command Summary. . . . .	292
39. ATM INTERFACE monitoring command Summary. . . . .	293
40. ATM LLC Configuration Command Summary . . . . .	296
41. LAN EMULATION Client Configuration Commands Summary . . . . .	299
42. LAN Emulation Client Configuration Commands Summary. . . . .	301
43. ATM LAN Emulation Client ARP Configuration Commands Summary. . . . .	301
44. ATM LAN Emulation Client ARP Config Commands Summary . . . . .	302
45. LLC Command Summary . . . . .	316
46. LE Client Monitoring Command Summary. . . . .	319
47. LLC Monitoring Command Summary. . . . .	328
48. Set Command . . . . .	334
49. National Enable Parameters . . . . .	335
50. National Set Parameters . . . . .	335
51. Establishing Incoming X.25 Circuits for Closed User Groups . . . . .	339
52. X.25 Configuration Commands Summary . . . . .	341
53. Example VC Definitions . . . . .	345

54.	X.25 Monitoring Command Summary . . . . .	368
55.	XTP Configuration Commands Summary . . . . .	389
56.	XTP Monitoring Commands Summary . . . . .	396
57.	Protocol Address Mapping . . . . .	408
58.	Frame Relay Management Options . . . . .	419
59.	Frame Relay Configuration Commands Summary . . . . .	421
60.	Frame Relay Management Options . . . . .	450
61.	Transmit Delay Units and Range for the 2210 Serial Interface . . . . .	451
62.	Frame Relay Monitoring Commands Summary . . . . .	451
63.	LCP Packet Codes . . . . .	471
64.	Point-to-Point Configuration Command Summary . . . . .	486
65.	Point-to-Point Monitoring Command Summary . . . . .	504
66.	MP Configuration Commands . . . . .	537
67.	MP Monitoring Commands . . . . .	541
68.	SDLC Relay Configuration Commands Summary . . . . .	550
69.	Valid Values for Frame Size in Set Frame-Size Command . . . . .	556
70.	SDLC Relay Monitoring Commands Summary . . . . .	557
71.	SDLC Configuration Commands Summary . . . . .	564
72.	Valid Values for Frame Size in Link Frame-Size Command . . . . .	571
73.	SDLC Monitoring Commands Summary . . . . .	576
74.	BSC Relay Configuration Commands Summary . . . . .	594
75.	Valid Values for Frame Size in Set Frame-Size Command . . . . .	600
76.	BSC Relay Monitoring Commands Summary. . . . .	601
77.	V.25bis Configuration Commands Summary . . . . .	611
78.	V.25bis Monitoring Command Summary . . . . .	615
79.	V.34 Configuration Commands Summary . . . . .	627
80.	V.34 Monitoring Command Summary . . . . .	632
81.	ISDN Q.931 Cause Codes . . . . .	643
82.	ISDN Configuration Command Summary . . . . .	655
83.	ISDN Cause Codes Command Summary . . . . .	662
84.	ISDN Monitoring Command Summary . . . . .	663
85.	Dial Circuit Configuration Commands Summary. . . . .	672
86.	Dial Circuit Configuration Commands Summary. . . . .	678

---

## Notices

References in this publication to IBM products, programs, or services do not imply that IBM intends to make these available in all countries in which IBM operates. Any reference to an IBM product, program, or service is not intended to state or imply that only IBM's product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any of IBM's intellectual property rights may be used instead of the IBM product, program, or service. Evaluation and verification of operation in conjunction with other products, except those expressly designated by IBM, are the user's responsibility.

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to the IBM Director of Licensing, IBM Corporation, North Castle Drive, Armonk, NY 10504-1785, USA.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement.

This document is not intended for production use and is furnished as is without any warranty of any kind, and all warranties are hereby disclaimed including the warranties of merchantability and fitness for a particular purpose.





---

## Notice to Users of Online Versions of This Book

For online versions of this book, you are authorized to:

- Copy, modify, and print the documentation contained on the media, for use within your enterprise, provided you reproduce the copyright notice, all warning statements, and other required statements on each copy or partial copy.
- Transfer the original unaltered copy of the documentation when you transfer the related IBM product (which may be either machines you own, or programs, if the program's license terms permit a transfer). You must, at the same time, destroy all other copies of the documentation.

You are responsible for payment of any taxes, including personal property taxes, resulting from this authorization.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Some jurisdictions do not allow the exclusion of implied warranties, so the above exclusion may not apply to you.

Your failure to comply with the terms above terminates this authorization. Upon termination, you must destroy your machine-readable documentation.



---

## Trademarks

The following terms are trademarks of the IBM Corporation in the United States or other countries or both:

Advanced Peer-to-Peer Networking	IBM	PS/2
AIX	Micro Channel	RS/6000
AIXwindows	NetView	System/370
APPN	AS/400	Nways
VTAM	BookManager	

UNIX is a registered trademark in the United States and other countries licensed exclusively through X/Open Company Limited.

Microsoft, Windows, Windows NT, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation.

Other company, product, and service names may be trademarks or service marks of others.



---

## Preface

This manual contains the information that you will need to use the router user interface for configuration and operation of the Multiprotocol Routing Services base code installed on your Nways device. With the help of this manual, you should be able to perform the following processes and operations:

- Configure, monitor, and use the Multiprotocol Routing Services base code.
- Configure, monitor, and use the interfaces and Link Layer software supported by your Nways device .

This manual is the first volume of the software library for the 2210, which is described in “IBM 2210 Nways Multiprotocol Router Publications” on page xxx. A specific Nways device might not support all of the features and functions described within the library. If a feature or function is device-specific, that restriction is indicated in the relevant manual.

This manual refers to the 2210 as either “the router” or “the device”. The examples in the library represent the configuration of a 2210, but the actual output you see may vary. Use the examples as a guideline to what you might see while configuring your device.

---

## Who Should Read This Manual

This manual is intended for persons who install and manage computer networks. Although experience with computer networking hardware and software is helpful, you do not need programming experience to use the protocol software.

**To get additional information:** Changes may be made to the documentation after the books are printed. If additional information is available or if changes are required after the books have been printed, the changes will be in a file (named README) on diskette 1 of the configuration program diskettes. You can view the file with an ASCII text editor.

---

## About the Software

IBM Nways Multiprotocol Routing Services is the software that supports the IBM 2210 (licensed program number 5801-ARR). This software has these components:

- The base code, which consists of:
  - The code that provides the routing, bridging, data link switching, and SNMP agent functions for the device.
  - The router user interface, which allows you to configure, monitor, and use the Multiprotocol Routing Services base code installed on the device. The router user interface is accessed locally through an ASCII terminal or emulator attached to the service port, or remotely through a Telnet session or modem-attached device.

The base code is installed at the factory on the 2210.

- The Configuration Program for IBM Nways Multiprotocol Routing Services (referred to in this book as the *Configuration Program*) is a graphical user interface that enables you to configure the device from a stand-alone workstation. The Configuration Program includes error checking and online help information.

The Configuration Program is not pre-loaded at the factory; it is shipped separately from the device as part of the software order.

You can also obtain the Configuration Program for IBM Nways Multiprotocol Routing Services from the IBM Networking Technical Support home page. See *Configuration Program User's Guide for Nways Multiprotocol and Access Services Products*, GC30-3830, for the server address and directories.

---

## Conventions Used in This Manual

The following conventions are used in this manual to show command syntax and program responses:

1. The abbreviated form of a command is underlined as shown in the following example:

```
reload
```

In this example, you can enter either the whole command (reload) or its abbreviation (rel).

2. Keyword choices for a parameter are enclosed in brackets and separated by the word or. For example:

```
command [keyword1 or keyword2]
```

Choose one of the keywords as a value for the parameter.

3. Three periods following an option mean that you enter additional data (for example, a variable) after the option. For example:

```
time host ...
```

In this example, you enter the IP address of the host in place of the periods, as explained in the description of the command.

4. In information displayed in response to a command, defaults for an option are enclosed in brackets immediately following the option. For example:

```
Media (UTP/STP) [UTP]
```

In this example, the media defaults to UTP unless you specify STP.

5. Keyboard key combinations are indicated in text in the following ways:

- **Ctrl-P**
- **Ctrl -**

The key combination **Ctrl -** indicates that you should press the Ctrl key and the hyphen simultaneously. In certain circumstances, this key combination changes the command line prompt.

6. Names of keyboard keys are indicated like this: **Enter**
7. Variables (that is, names used to represent data that you define) are denoted by italics. For example:

```
File Name: filename.ext
```

---

## IBM 2210 Nways Multiprotocol Router Publications

**Library reorganization:** Beginning with Version 3.2, the following changes to the organization of the library took place:

- The information in the *Software User's Guide* titled **Understanding, Using and Configuring Features** was moved into a new manual, *Using and Configuring Features*.

- The chapters on using, configuring, and monitoring the DIALs feature were moved into the *Using and Configuring Features* book.

**Information updates and corrections:** To keep you informed of engineering changes, clarifications, and fixes that were implemented after the books were printed, refer to the IBM 2210 home pages at:

<http://www.networking.ibm.com/220/220prod.html>

The following list shows the books that support the IBM 2210.

## **Operations and Network Management**

### **SC30-3681**

*Software User's Guide*

This book explains how to:

- Configure, monitor, and use the IBM Nways Multiprotocol Routing Services software shipped with the router.
- Use the Multiprotocol Routing Services command-line router user interface to configure and monitor the network interfaces and link-layer protocols shipped with the router.

### **SC30-3992**

*Using and Configuring Features*

### **SC30-3680**

*Protocol Configuration and Monitoring Reference Volume 1*

### **SC30-3865**

*Protocol Configuration and Monitoring Reference Volume 2*

These books describe how to access and use the Multiprotocol Routing Services command-line router user interface to configure and monitor the routing protocol software and features shipped with the router.

They include information about each of the protocols that the devices support.

### **SC30-3682**

*Event Logging System Messages Guide*

This book contains a listing of the error codes that can occur, along with descriptions and recommended actions to correct the errors.

## **Configuration**

### **Online help**

The help panels for the Configuration Program assist the user in understanding the program functions, panels, configuration parameters, and navigation keys.

### **GC30-3830**

*Configuration Program User's Guide for Nways Multiprotocol and Access Services Products*

This book discusses how to use the Configuration Program.

### **GG24-4446**

*IBM 2210 Nways Multiprotocol Router Description and Configuration Scenarios*

This book contains examples of how to configure protocols using IBM Nways Multiprotocol Routing Services.

## **Safety**

### **SD21-0030**

*Caution: Safety Information - Read This First*

This book provides translations of caution and danger notices applicable to the installation and maintenance of an IBM 2210.

The following list shows the books in the IBM 2210 Nways Multiprotocol Router library, arranged according to tasks.

## **Planning and Installation**

### **GA27-4068**

*IBM 2210 Introduction and Planning Guide*

### **GC30-3867**

*IBM 2210 Nways Multiprotocol Router Installation and Initial Configuration Guide*

These books are shipped with the 2210. They explain how to prepare for installation, install the 2210, perform an initial configuration, and verify that the installation is successful.

These books provide translations of danger notices and other safety information.

## **Diagnostics and Maintenance**

### **SY27-0345**

*IBM 2210 Nways Multiprotocol Router Service and Maintenance Manual*

This book is shipped with the 2210. It provides instructions for diagnosing problems with and repairing the 2210.

---

## **Summary of Changes for the IBM 2210 Software Library**

The following list applies to changes in the software that were made in Version 3.3. The changes consist of:

- **New functions:**

- Encoding subsystem (ES)
- Dynamic Host Configuration Protocol (DHCP) services
- Virtual private network (VPN)
  - Directory services: Lightweight Directory Access Protocol (LDAP) support
  - ISAKMP/Oakley support
  - Layer 2 Forwarding (L2F)
  - Point to Point Tunneling protocol (PPTP)
  - Differentiated Services
- Support of J2 6 Mbps for maximum for Frame Relay CIR, Bc, and Be
- Frame Relay packet fragmentation
- Voice packet forwarding over Frame Relay

- **Enhanced functions:**

- IP enhancements





## Summary of Changes

---

## **Part 1. Understanding and Using the Software**



---

## Chapter 1. Getting Started

This chapter shows you how to get started with using the following components related to the IBM 2210 Nways Multiprotocol Router (2210) and the Multiprotocol Routing Services:

- Device console terminals
- Device software (Multiprotocol Routing Services)
- Device software user interface

The information in this chapter is divided into the following sections:

- “Before You Begin”
- “Accessing the Software Using Local and Remote Consoles”
- “Discussing the User Interface System” on page 6

---

### Before You Begin

Before you begin, refer to the following checklist to verify that your device is installed correctly.

Have you...

- Installed all necessary hardware?
- Connected the console terminal (video terminal) to the device?

**Attention:** If you are using a service port-attached terminal to configure or monitor your IBM 2210 and your service terminal is unreadable, you need to change some parameters in your configuration. (See “Service Terminal Display Unreadable” in IBM 2210 Nways Multiprotocol Router Service and Maintenance Manual.)

Refer to your hardware documentation.

- Connected your device to the network using the correct network interfaces and cables?
- Run all necessary hardware diagnostics?

For more information on any of these procedures, refer to the *IBM 2210 Nways Multiprotocol Router Installation and Initial Configuration Guide*.

### Migrating to the Current Release

Refer to the *IBM 2210 Nways Multiprotocol Router Service and Maintenance Manual* for information about migrating to a new code level.

---

### Accessing the Software Using Local and Remote Consoles

The device console lets you use the device user interface to monitor and change the function of the device’s networking software. The device supports local and remote consoles.

## Local Consoles

Local consoles are either directly connected by an EIA 232 (RS-232) cable, or connected via modems to the device. You may need to use a local console during the initial software installation. After the initial setup connection, you can connect using Telnet, as long as IP forwarding has been enabled. (Refer to *Protocol Configuration and Monitoring Reference* for more information on enabling IP forwarding.)

When the configured device is started for the first time, a boot message appears on the screen, followed by the OPERator's CONsole or OPCON prompt (\*). The \* prompt indicates that the device is ready to accept OPCON commands.

Your Multiprotocol Routing Services software may have been pre-configured at the factory. If it was, you do not need to use a local console to perform initial configuration. If, however, your Multiprotocol Routing Services was not pre-configured at the factory, you will need to use an ASCII terminal attached to the 2210 service port to initially configure it.

**Important:** Garbage, random characters, reverse question marks, or the inability to connect your terminal to the 2210 service port can have many causes. The following list contains some of those causes:

- The most common cause of garbage or random characters on the service console is that the baud rate is not synchronized with the IBM 2210.

If the 2210 is set to a specific baud rate, the terminal or terminal emulator must be set to the same baud rate.

If the IBM 2210 is set to autobaud (this is the default), press the terminal break key sequence and press **Enter**.

A typical break key sequence for PC terminal emulators is Alt-B (refer to the terminal emulator documentation). Most ASCII terminals have a **Break** key (often used in conjunction with the **Ctrl** key).

Refer to your hardware documentation for more information.

- Defective terminal or device (ac) grounds.
- Defective, incorrectly shielded, or incorrectly grounded EIA 232 (RS-232) cable between the terminal and the IBM 2210.
- Defective terminal or terminal emulator.
- Defective IBM 2210 system board.
- High ambient electromagnetic interference (EMI) levels.
- Power line disturbances.

(See "Service Terminal Display Unreadable" in the *IBM 2210 Nways Multiprotocol Router Service and Maintenance Manual*.)

Once the 2210 is initially configured, you will not need a local console for device operation, as long as IP is enabled.

The device software automatically handles console activity. When upgrading the software, you might have to use the local console. For information on attaching and configuring local consoles, refer to the *IBM 2210 Nways Multiprotocol Router Installation and Initial Configuration Guide*.

# Remote Consoles

Remote consoles attach to the device using a standard remote terminal protocol. Remote consoles provide the same function as local consoles, except that a local console must be used for initial configuration if your IBM 2210 was not pre-configured at the factory.

## Telnet Connections

The device supports both Telnet Client and Server. The remote console on the device acts as a Telnet server. The device acts as a Telnet client when connecting from the device to either another device or a host using the **telnet** command in the OPCON (\*) process.

## Remote Login Names and Passwords

During a remote login, the device prompts you for a login name and password. You can display the login name when logged in to the device from a remote console by using a device **status** command.

# Logging In Remotely or Locally

Logging in to a local console is the same as logging in to a remote console except that you must connect to the device by starting Telnet on your host system. To log in remotely, begin at step 1. To log in locally, begin at step 3.

To log in from a remote console:

1. Connect to the device by starting Telnet on your host system. Your host system is the system to which remote terminals are connected.
2. Supply the device's name or Internet Protocol (IP) address.

To use device names, your network must have a name server. Issue either the device name or the IP address as shown in the following example:

```
% telnet brandenburg
```

*or*

```
% telnet 128.185.132.43
```

At this point, it makes no difference whether you have logged in remotely or locally.

3. If you are prompted, enter your login name and password.

```
login:  
Password:
```

It is possible that there is a login and no password. The password controls access to the device. If a password has not been set, press the **Enter** key at the Password: prompt. Logins are not set automatically. For security, you can set up user names and passwords using the **add user** command in the CONFIG process. For additional information, see the **add user** configuration command, on page 60. Remember to restart to activate any changes.

**Note:** If you do not enter a login name and valid password within 1 minute of the initial prompt, or if you enter an incorrect password three times in succession, the device drops the Telnet connection.

4. Press the **Enter** key to display the asterisk (\*) prompt.

You may have to press the **Enter** key more than once or press **Ctrl-P** to obtain the \* prompt.

Once at this level, you can begin to enter commands from the keyboard. Press the **Backspace** key to delete the last character typed in on the command line. Press the **Delete** key or **Ctrl-U** to delete the whole command line entry so that you can reenter a command. See “Command Completion” on page 21 and “Command History” on page 24 for more information.

You can also use local Telnet commands on your Telnet client to close the Telnet connection.

**Note:** If you use a VT100 terminal, do not press the **Backspace** key, because it inserts invisible characters. Use the **Delete** key.

5. Exit the device as described in “Exiting the Device”.

## Reloading or Restarting the Device

Use the **reload** command to reboot the device and load a new copy of the code into memory.

For example:

```
* reload
```

```
The configuration has been changed, save it? (Yes or [No] or Abort)
```

```
Are you sure you want to reload the gateway? (Yes or [No]): yes
```

Use the **restart** command to invoke a new configuration. For example, to change a configuration parameter that is not dynamically configurable, you can make and save the change, then restart the device.

Restart does not reload the code, it simply invokes the new configuration. As a result, restart is much faster than reload.

For example:

```
* restart
```

```
The configuration has been changed, save it? (Yes or [No] . . . or Abort)
```

```
Are you sure you want to restart the gateway? (Yes or [No]): yes
```

## Exiting the Device

Return to the \* prompt and use the **logout** command to close the Telnet connection. For example:

```
IP Config> exit  
Config> Ctrl-P  
* logout
```

```
%
```

You can also use local Telnet commands on your Telnet client to close the Telnet connection.

---

## Discussing the User Interface System

The software is a multitasking system that schedules use of the CPU among various processes and hardware devices. The device software:



- Provides timing and memory management, and supports both local and remote operator consoles from which you can view and modify the device's operational parameters.
- Consists of functional modules that include various user interface processes, all network interface drivers, and all protocol forwarders purchased with the device.

## Understanding the First-Level User Interface

The user interface to the software consists of the main menu (process) and several subsidiary menus (processes). These menus are related to the multiple levels of processes in the software.

The first level of processes consists of the OPCON and CONFIG-ONLY processes. In most cases, you will use the OPCON process to access the second level to configure or operate the base services, features, interfaces, and protocols you will run on your IBM 2210.

The second level contains processes such as Configuration (CONFIG), Console (GWCON) and Event Logging System (MONITR). You may use the OPCON commands **configuration**, **console** or **event** to access these second level processes. Alternatively, you may use the **status** command to list the second level processes and then use the **talk pid** command to access the second-level processes. There are processes that you cannot use in the software. See Table 1 on page 10 for an overview of the processes.

Figure 1 shows the processes and how they fit within the structure of the device software.

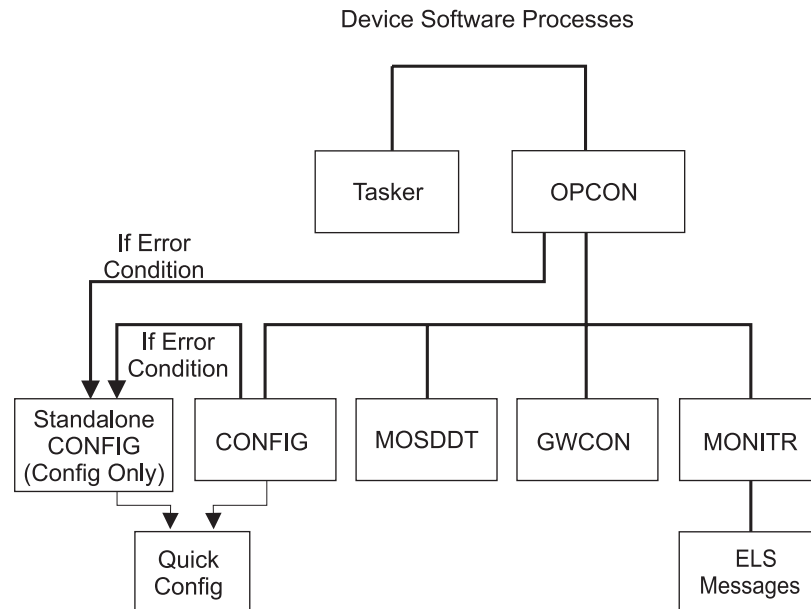 


Figure 1. Multiprotocol Routing Services

Figure 2 on page 8 is an example of the relationship between the various process levels.

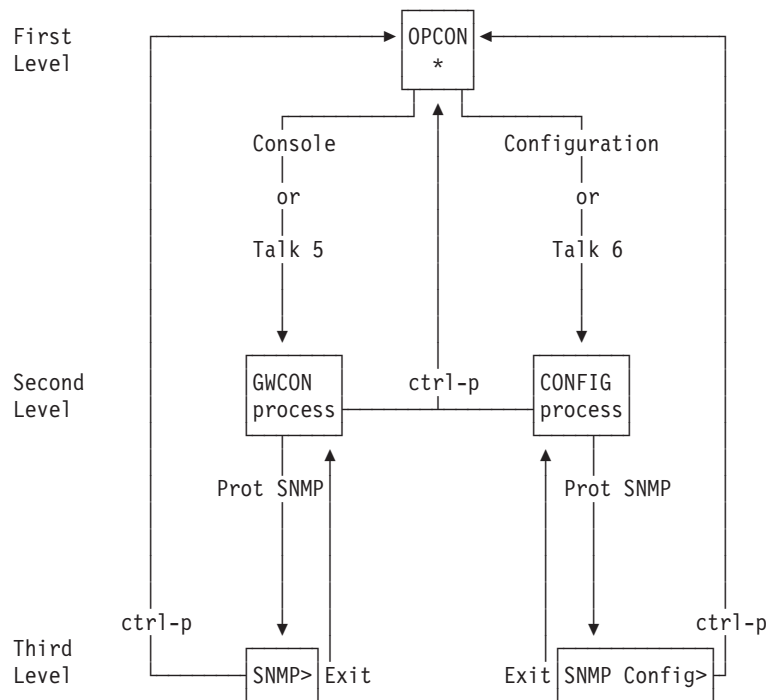 


Figure 2. Relationship of Processes and Commands

**Note:** Also shown in Figure 2 are the various commands to access each process level and return from each process level.

See “What is the OPCON Process?” on page 27 for more information about OPCON, and “Config-Only Mode” on page 44 for more information about CONFIG-ONLY.

The ROPCON process handles processing from remote consoles and is essentially the same as the OPCON process.

### Quick Configuration Process

Quick Configuration, or Quick Config, allows you to quickly configure portions of the device without dealing with the specific operating system commands. When you initially load or restart the device with no configuration, you enter Config-Only and you can access Quick Config menus from that process. If the device has devices configured and the devices do not have any protocols configured, the device automatically starts Config-Only and then enters Quick Config.

You can also enter Quick Config from the CONFIG process using the **qconfig** command.

### System Security

Multiple users with login permissions can be added using the **add user** command. See “Configuring User Access” on page 47 for details on security issues and for information on the **set password** and **add user** commands.

---

## Chapter 2. Using the Software

This chapter describes how to use the software. It consists of:

- “Entering Commands”
- “Connecting to a Process”
- “Some Configuration Suggestions” on page 11
- “Accessing the Second-Level Processes” on page 13
- “Accessing the Third-Level Processes” on page 15
- “Command Completion” on page 21
- “Command History” on page 24

---

### Entering Commands

When typing a command, remember the following:

- You may type only enough sequential letters of the command to make it unique among the available commands. For example, to execute the **reload** command you must enter **rel** as a minimum. The minimum number of required characters are underlined in the command syntax chapters.
- Commands are not case-sensitive.
- Sometimes, only the first letter of the command (and subsequent options) is required to execute the command. For example, typing **s** at the \* prompt followed by pressing the **Enter** key causes the **status** command to be executed.
- When command completion is enabled, you can press Esc and enter **?** to obtain help on entering commands. See “Command Completion” on page 21 and “Command History” on page 24 for more information.

---

### Connecting to a Process

When you start the device, the console displays a boot message. The OPCON prompt (\*) then appears on the screen indicating that you are in the OPCON process and you can begin entering OPCON commands. This is the command prompt from which you communicate with different processes.

Commands that are needed more often appear before the “- - - -” separator. Enter the appropriate command at the OPCON prompt (\*). See Table 3 on page 28 for a list of commands.

Alternatively, you can:

1. Find out the process ID (PID) number of a process by entering the **status** command at the \* prompt.

The **status** command displays information about the device processes, such as the process IDs (PIDs), process names and status of the process. Issuing the **status** command is shown in the following example:

```
* status
Pid  Name      Status TTY  Comments
1    COpCn1   RDY   TTY0
2    Monitr   DET   --
3    Tasker   RDY   --
```

```

4  MOSDBG  DET  --
5  CGWCon  DET  --
6  Config  DET  --
7  Ezystrt IDL  --
8  ROpCn1  IDL  TTY1 128.185.210.125
9  ROpCn2  IDL  TTY2
10 CES3    IDL  --
11 TOUT    IDL  --
12 L2S3    RDY  --
13 L3L2    RDY  --
14 LLL2    RDY  --
15 S3CE    RDY  --

```

- Use the **talk pid** command, where *pid* is the number of the process to which you want to connect. (For more information about these and other OPCON commands, refer to “What is the OPCON Process?” on page 27.)

**Note:** Not every process listed has a user interface (for example, the **talk 3** process). The **talk 4** command is for use by IBM service representatives.

## Identifying Prompts

Each process uses a different prompt. You can tell which process your console is connected to by looking at the prompt. (If the prompt does not appear when you enter the **talk pid** command, press **Enter** again.)

The following list shows the prompts for the five main processes:

*Table 1. Processes, Their Purpose, and Commands to Access*

Process	Level and Purpose	Command to Access	Input Prompt
OPCON	Level 1 - access to all secondary levels	<b>Ctrl-P</b>	asterisk (*)
CONFIG	Level 2 - base services configuration and access to configuration third level	<b>Configuration or talk 6</b>	Config >
GWCON	Level 2 - base services operation and monitoring and access to operations and monitoring on third level	<b>Console or talk 5</b>	plus sign (+)
MONITR	Level 2 - message display	<b>Event or talk 2</b>	(none)
MOSDBG	Level 2 - diagnostic environment	<b>talk 4</b>	\$

**Note:** Only enter the **talk 4** command under the direction of a service representative.

At the OPCON prompt level, you can begin to enter commands from the keyboard. Use the **Backspace** key to delete the last character typed in on the command line. Use **Ctrl-U** to delete the whole command line entry so that you can reenter a command. See “Command Completion” on page 21 and “Command History” on page 24 for additional details or press **Escape ?**.

## Getting Help

At the command prompts, you can obtain help in the form of a listing of the commands available at that level. To do this, type **?** (the **help** command), and then press **Enter**. Use **?** to list the commands that are available from the current level. You can usually enter a **?** after a specific command name to list its options.

## Exiting a Lower Level Environment

The multiple-level nature of the software places you in secondary, tertiary, and even lower level environments as you configure or operate the 2210. To return to the next higher level, enter the **exit** command. To get to the secondary level, continue entering **exit** until you receive the secondary level prompt (either Config> or +).

For example, to exit the ASRT protocol configuration process:

```
ASRT config> exit
Config>
```

If you need to get to the primary level (OPCON), enter the intercept character (**Ctrl-P** by default).

## Getting Back to OPCON

To get back to the OPCON prompt (\*), press **Ctrl-P**. You must always return to OPCON before you can communicate with another process. For example, if you are connected to the console (GWCON) process and you want to connect to the CONFIG process, you must press **Ctrl-P** to return to OPCON first. The **Ctrl-P** key combination is the default *intercept character*.

If you use the intercept character from a third-level or lower level menu to return to the \* prompt, the next time you use the **talk** command to talk to the same process, you will reenter that same level menu. This link goes away when the device is re-initialized.

---

## Some Configuration Suggestions

Configuring a 2210 is different depending on whether you are configuring for the first time, creating a configuration based on an existing configuration, or just updating a configuration. Use the following sections as a guide to the best procedure to use, depending on your needs.

## Creating a First Configuration

This procedure assumes that you have no other 2210 that contains a configuration similar to the one for the 2210 you are configuring. The procedure also assumes that you have just taken the 2210 out of the box. Although this procedure specifies an order, you can perform the actual configuration (after step 3) in any order.

To configure a IBM 2210 for the first time:

1. Examine the 2210 you are configuring to determine which interfaces you need to configure. Note these for later use.
2. Connect to the 2210 as described in “Accessing the Software Using Local and Remote Consoles” on page 3.
3. Initially configure a port on the 2210 and at least an internal IP address for the device using Quick Config as described in “Quick Configuration” on page 46 or “Appendix A. Quick Configuration Reference” on page 683. Configure the minimum needed to allow you to Telnet into the device.
4. Configure any base services, such as boot options. Access the configuration process as described in “Accessing the Configuration Process, CONFIG (Talk 6)” on page 14.

5. Configure the interfaces. Access the interface configuration process as described in “Accessing the Network Interface Configuration Process” on page 15.
6. Configure any required features. Access the feature configuration process as described in “Accessing Feature Configuration and Operating Processes” on page 19.
7. Configure any protocols that will run through this device. Access the protocol configuration process as described in “Accessing Protocol Configuration and Operating Processes” on page 19.

**Note:** At the very least, you will configure IP in this step.

8. Restart the device as described in “Reloading or Restarting the Device” on page 6.

## Basing a Configuration on an Existing Configuration

This section describes how to:

- Base a configuration on the configuration in an operating 2210
- Permanently update the configuration in a 2210
- Temporarily update the configuration of a 2210 while the 2210 is operating

### Basing on an Existing Configuration

If you already have a 2210 that has the same interfaces, features, and protocols that you want to configure on a new 2210, you can save time by basing the configuration on the existing 2210. You can perform this type of configuration either using the command line interface or by using the configuration program that comes with the 2210. In both cases, the procedures assume that the 2210 is not in your production network.

To base a configuration on an existing configuration using the command line interface:

1. Obtain a copy of the configuration you want to use.
  - a. Enter **talk 6** at the OPCON (\*) prompt.
  - b. Enter **boot** at the Config> prompt.
  - c. Enter the **copy** command at the Boot config> prompt. See “Chapter 5. The Boot CONFIG Process” on page 87 for more information.
2. Connect to the 2210 that you are configuring.
3. Load the configuration you obtained in step 1 into the 2210 using TFTP GET. See “Chapter 5. The Boot CONFIG Process” on page 87.
4. Update the configuration.
5. Restart the 2210.

To base a configuration on an existing configuration using the configuration program:

1. Start the configuration program.
2. Retrieve the configuration from the 2210 on which you want to base the new configuration.
3. Make the changes you need for the new configuration. These changes include addresses, the host names, users, and other items.

4. Save the configuration with a different name from the name that you used to retrieve the configuration.
5. Send the configuration to the 2210 you are configuring.
6. Restart the 2210.

For more about using the configuration program, see *Configuration Program User's Guide for Nways Multiprotocol and Access Services Products GC30-3830*.

### Permanently Updating a Configuration

To permanently update a configuration:

1. Access the 2210 you are updating as described in "Accessing the Software Using Local and Remote Consoles" on page 3. You will see the \* prompt.
2. Enter the **talk 6** command to access the configuration process.
3. Enter the appropriate commands to access the third-level process that configures the areas that you are changing.
4. Enter **exit** as many times as needed to return to the configuration process.
5. Restart the 2210.

### Temporarily Updating a Configuration

The ability to temporarily update a configuration allows you to make changes to some of the operating characteristics of a 2210 until you can make permanent updates to the configuration. This enables you to implement changes immediately to resolve problems or improve performance and avoid an outage during a peak period. You can then make permanent updates to the configuration and schedule an outage so you can restart to pick up the change.

To temporarily update a configuration:

1. Access the 2210 you are updating as described in "Accessing the Software Using Local and Remote Consoles" on page 3. You will see the \* prompt.
2. Enter the **talk 5** command to access the operating/monitoring process.

**Note:** Not all interface types, protocols, or features allow you to make temporary config changes via talk 5 commands.

3. Enter the appropriate commands to access the third-level process that monitors the areas that you are changing.
4. Enter **exit** as many times as needed to return to the operating/monitoring process.
5. Enter **Ctrl-P** to return to the \* prompt.
6. Exit the device as described in "Exiting the Device" on page 6

---

## Accessing the Second-Level Processes

All interfaces, features, and protocols have commands that you use to access the following processes:

- The configuration process to initially configure and enable the interface, feature, or protocol, as well as perform later configuration changes.
- The operating/monitoring process to display information about each interface, feature, or protocol, to make temporary configuration changes, or to activate configuration changes.

You can also configure or operate some base system services through the second-level processes. The commands to perform these functions are described starting in “What is CONFIG?” on page 43.

The next sections describe the procedures for accessing the second-level processes.

## Accessing the Configuration Process, CONFIG (Talk 6)

Each protocol configuration process is accessed through the device’s CONFIG process. CONFIG is the second-level process of the device user interface that lets you communicate with third-level processes. Protocol processes are examples of third-level processes.

The CONFIG command interface is made up of levels of menus. Protocol configuration command interfaces are menus within the CONFIG interface. Each protocol configuration interface has its own prompt. For example, the prompt for the SNMP protocol command interface is `SNMP config>`.

The next sections describe these procedures in more detail.

### Entering the CONFIG Process

To enter the CONFIG process from OPCON and obtain the CONFIG prompt, enter the **configuration** command. Alternatively, you can enter the OPCON **talk** command and the PID for CONFIG. The PID for CONFIG is 6.

```
* configuration
```

or

```
* talk 6
```

The console displays the CONFIG prompt (`Config>`). If the prompt does not appear, press the **Enter** key again.

**Quick Configuration Process:** Quick Configuration, or Quick Config, allows you to quickly configure portions of the device without dealing with the specific operating system commands. You enter the Quick Config menus from the CONFIG process using the **qconfig** command (see “Quick Configuration” on page 46).

### Restarting or Reloading the Device

Changes that you make to the protocol parameters through CONFIG do not take effect until you either activate the net that contains any dynamic changes or the device software.

To restart the device, enter the OPCON **restart** command. For example:

```
* restart
```

Are you sure you want to restart the device? (Yes or No): **yes**

## Accessing the Console Operating/Monitoring Process, GWCON (Talk 5)

To view information about the interfaces, features, or protocols or to change parameters while running, you must access and use the operating (monitoring) process. Operating command interfaces are modes of the GWCON interface. Within



the GWCON mode, each interface, feature, or protocol interface has its own prompt. For example, the prompt for the SNMP protocol is `SNMP>`.

**Note:** Any parameters you change in this process will not remain active across any event that causes the 2210 to reload the operational code, such as a power outage or entering the **restart** command.

The next sections describe these procedures in more detail.

## Entering the GWCON Command Process

To enter the GWCON process from OPCON and obtain the GWCON prompt, enter the **console** command. Alternatively, you may enter the **talk** command and the PID for GWCON. The PID for GWCON is 5. For example:

```
* console
```

or

```
* talk 5
```

The GWCON prompt (+) then displays on the console. If the prompt does not appear, press **Enter** again.

---

## Accessing the Third-Level Processes

After accessing the second level, you must enter commands on the third level to configure or operate the interfaces, features, and protocols in your IBM 2210. The following sections describe how to access the third level processes.

## Adding Devices

This section describes how to use the **add device** command to configure the network interfaces. A network interface is usually an adapter, but it can also be a definition used by an operating process. For example, two IP addresses can be assigned to one port and each one is considered an interface. After you establish an interface using the **add device** command, you can access the network interface configuration and operating processes, for example, the Talk 5 monitoring processes. These processes are used to change and monitor the software-configurable parameters for the network interfaces that are used in your device.

## Accessing the Network Interface Configuration Process

Use the following procedure to access the device's configuration process. This process gives you access to a specific interface's *configuration* process.

1. At the OPCON prompt, enter the **configuration** command.

```
* configuration
```

After you enter the **configuration** command, the CONFIG prompt (`Config>`) displays on the console. If the prompt does not appear when you first enter **configuration**, press **Enter** again.

Use the **add device** command to create a network interface. The **add device** command automatically assigns the interface number. (Enter **add device ?** to get a list of the supported device types.)

These are the types of devices that are supported:

a. Dial circuits

The following example adds a dial circuit interface:

```
Config> add device dial-circuit
Enter the number of PPP Dial Circuit interfaces [1]?
Adding device as interface 8
Base net for this circuit[0]?4
Defaulting Data-link protocol to PPP
Use "set data-link" command to change the data-link protocol
Use "net 8" command to configure circuit parameters
```

b. The following example adds a dial-in circuit:

```
Config>add device dial-in
Enter the number of dial-in interfaces [1]?
Adding device as interface 5
Base net for this circuit [0]? 5
Defaulting Data-link protocol to PPP
Use "set data-link" command to change the data-link protocol
Use "net 5" command to configure circuit parameters
```

c. The following example adds a dial-out circuit:

**Note:** The dial-out device type is only supported if the software load includes the DIALs feature.

```
Config>add device dial-out*
Enter the number of dial-out interfaces [1]?
Adding device as interface 6*
Base net for this circuit [0]? 4
Defaulting Data-link protocol to Dial-out*
Use "net 6" command to configure circuit parameters*
```

d. Multilink PPP

The following example adds a multilink PPP interface:

```
Config>add device multilink-ppp
Enter the number of Multilink PPP interfaces [1]?
Adding device as interface 7
Defaulting Data-link protocol to PPP
Use "net 7" command to configure circuit parameters
```

**Notes:**

- a. Interfaces are automatically created for the base ports and ports on an adapter inserted into the feature slot for those models that have a feature slot, so you only need to use the **add device** command to create virtual interfaces. The examples below show the types of virtual interfaces that can be added.
  - b. When you create interfaces for serial adapters or dial circuits, the default data-link type is PPP. However, you can use the **set data-link** command to change the data-link type. Refer to Table 2 on page 17 for the data-link types supported on serial ports and dial circuits, and to the description of the **set data-link** command on page 79.
2. At the Config> prompt, enter the **list devices** command to display the network interface numbers for which the device is currently configured, as follows:

```
Config> list devices
```

```
Ifc 0 Ethernet                CSR 81600, CSR2 80C00, vector 94
Ifc 1 WAN X.25                CSR 81620, CSR2 80D00, vector 93
Ifc 2 WAN X.25                CSR 81640, CSR2 80E00, vector 92
Ifc 3 WAN PPP                 CSR 381620, CSR2 380D00, vector 125
Ifc 4 WAN Frame Relay        CSR 381640, CSR2 380E00, vector 124
Ifc 5 Token Ring              CSR 600000, vector 95
```

3. Record the interface numbers.
4. Enter the CONFIG **network** command and the number of the interface you want to configure. For example:

```
Config> network 1
```

The appropriate configuration prompt (such as TKR Config> for token-ring), now displays on the console.

**Note:** Not all network interfaces are user-configurable. For interfaces that cannot be configured, you receive the message:

That network is not configurable

**Displaying the Interface Configuration:** From the same interface configuration prompts, you can list configuration information specific to that selected interface by using the **list** command. For example:

```
TKR Config> list

Token-Ring configuration:

PACKET SIZE (INFO FIELD): 4472
Speed:                    16 Mb/sec
Media:                   Shielded

RIF Aging Timer:         120      Source Routing:           Enabled
MAC Address:             000000000000
```

**Configuring the Network Interface:** Refer to the specific chapters in this guide for complete information on configuring your IBM 2210's network interfaces.

Table 2 lists network architectures and the supported interfaces for each architecture.

*Table 2. Network Architecture and the Supported Interfaces*

Network Architecture	Supported Interfaces
ATM	Dual Port Serial Interface (25 Mbps) for IBM 2210
802.5 Token-Ring	IBM 2210 Token-Ring 4/16 Interface
Ethernet	IBM 2210 Ethernet Interface
ISDN	Serial Interfaces for IBM 2210 as follows:  Basic Rate Interface (BRI) PRI/Channelized T1/J1 Interface * PRI/Channelized E1 Interface *  <b>Notes:</b> 1. The interfaces marked with an asterisk (*) can be used either as ISDN or channelized interfaces.  <b>Note:</b>
Point-to-Point	Serial Interface for IBM 2210, dial circuit interface; supported on 4-port and 8-port WAN concentration adapters
Frame Relay	Serial Interface for IBM 2210, dial circuit interface; supported on 4-port and 8-port WAN concentration adapters
X.25	Serial Interface for IBM 2210; supported on 4-port and 8-port WAN concentration adapters and dial circuits
SDLC Relay	Serial Interface for IBM 2210; supported on 4-port and 8-port WAN concentration adapters
Bisync	Serial Interface for IBM 2210; supported on 4-port and 8-port WAN concentration adapters
SDLC	Serial Interface for IBM 2210; supported on 4-port and 8-port WAN concentration adapters and dial circuits

Table 2. Network Architecture and the Supported Interfaces (continued)

Network Architecture	Supported Interfaces
V.25bis	Serial Interface for IBM 2210; supported on 4-port and 8-port WAN concentration adapters
V.34	Serial Interface for IBM 2210; supported on 4-port and 8-port WAN concentration adapters and 4-port and 8-port Dial Access adapters.
Dial-Out	Supports DIALs and Telnet dial-out over V.34 base interfaces
Dial-In	A PPP dial circuit interface that has configuration parameters defaulted to support DIALs
Multilink PPP (MP)	Supported on any PPP link
L2TP, L2F, and PPTP	Supports virtual PPP DIALs connections through the Layer 2 Tunneling Protocol (L2TP), Layer 2 Forwarding (L2F), and Point to Point Tunneling Protocol (PPTP).

**Notes:**

1. PPP dial circuit interfaces can use ISDN, a V.34 network, or V.25bis as the base network interface.
2. FR dial circuit interfaces can use an ISDN or a V.25bis network as the base network interface.
3. Dial-Out circuit interfaces use a V.34 network as the base network interface.
4. Dial-In circuit interfaces can use an ISDN or V.34 network as the base network interface.
5. SDLC dial circuits use V.25bis as the base network interface.
6. X.25 uses the ISDN BRI D-channel as the base network interface.

**Accessing the Network Interface Console Process**

To monitor information related to a specific device, access the console process by using the following procedure:

1. At the OPCON prompt, enter the **console** command . For example:  

```
* console
```
2. The GWCON prompt (+) is displayed on the console. If the prompt does not appear when you first enter GWCON, press **Enter** again.
3. At the GWCON prompt, enter the **configuration** command. For example:

```
+ configuration
```

```
Multiprotocol Routing Services
2210-MRS Feature 3768 V3.2 Mod 0 PTF 0 RPQ 0 MRS.E00 cc4_2a
Boot ROM version 1.20 Watchdog timer enabled Auto-boot enabled

Time: 13:34:56 Thursday March 9, 1995 Console baud rate: 9600
```

```
Num Name Protocol
0 IP DOD-IP
3 ARP Address Resolution
11 SNMP Simple Network Management Protocol
12 OSPF Open SPF-Based Routing Protocol
23 ASRT Adaptive Source Routing Transparent Enhanced Bridge
```

```
Num Name Feature
1 BRS Bandwidth Reservation
2 MCF MAC Filtering
```

```
3 Networks:
Net Interface MAC/Data-Link Hardware State
```

```

0 Eth/0 Ethernet/IEEE 802.3 SCC Ethernet Up
1 PPP/0 Point to Point SCC Serial Line Up
2 PPP/1 Point to Point SCC Serial Line UP

```

4. Enter the **GWCON network** command and the number of the interface you want to monitor. For example:

```

+ network 2
X.25>

```

In this example, the X.25 console prompt is displayed on the console. You can then view information about the X.25 interface by entering the X.25 console commands.

**Monitoring the Network Interface:** Refer to the specific chapters in this manual for complete information on monitoring your 2210's network interfaces.

## Accessing Feature Configuration and Operating Processes

To help you access the Multiprotocol Routing Services feature configuration and operating processes, this section outlines both of these procedures.

### Accessing the Feature Processes

Use the **feature** command from the CONFIG process to access configuration commands for specific Multiprotocol Routing Services features outside of the protocol and network interface configuration processes.

Use the **feature** command from the GWCON process to access console commands for specific features that are outside of the protocol and network interface console processes.

Enter a question mark after the **feature** command to display a listing of the features available for your software release. For example:

```

Config> feature ?

WRS
BRS
MCF

Feature name or number [1] ?

```

To access a particular feature's configuration or operating prompt, enter the **feature** command at the Config> or + (GWCON) prompt, respectively, followed by the feature number or short name. For example:

```

Config> feature mcf

MAC filtering user configuration

Filter Config>

```

Table 7 on page 71 lists the available feature numbers and names.

Once you access the configuration or operating prompt for a feature, you can begin entering specific commands for the feature. To return to the previous prompt level, enter the **exit** command at the feature's prompt.

## Accessing Protocol Configuration and Operating Processes

This section describes how to access the protocol configuration and operating processes.

## Entering a Protocol Configuration Process

To enter the desired protocol configuration process from the CONFIG> prompt:

1. At the CONFIG> prompt, enter the **list configuration** command to see the numbers and names of the protocols purchased in your copy of the software. See page 72 for sample output of the **list configuration** command.
2. From the Config> prompt, enter the **protocol** command with the number or short name (for example, SNMP) of the protocol you want to configure. The protocol number and short name is obtained from the **list configuration** command display. In the following example, the command has been entered for accessing the SNMP protocol configuration process:

```
Config> protocol SNMP
```

or

```
Config> protocol 11
SNMP user configuration
```

The protocol configuration prompt then displays on the console. The following example shows the SNMP protocol configuration prompt:

```
SNMP config>
```

You can now begin entering the protocol's configuration commands. See the corresponding protocol section of the *Protocol Configuration and Monitoring Reference* for more information on specific protocol configuration commands.

In summary, the **protocol** command lets you enter the configuration process for the protocol software installed in your device. The **protocol** command enters a protocol's command process. After entering the protocol command, the prompt of the specified protocol appears. From the prompt, you can enter commands specific to that protocol.

## Entering a Protocol Operating Process

To enter a protocol console process from the GWCON prompt:

1. At the GWCON prompt, enter the **configuration** command to see the protocols and networks configured for the device. For example:

```
+configuration
```

```
Multiprotocol Routing Services
2210-MRS Feature 3768 V3.2 Mod 0 PTF 0 RPQ 0 MRS.E00 cc4_2a
Boot ROM version 1.10 Watchdog timer enabled Auto-boot enabled
Time: 13:43:04 Thursday March 9, 1995 Console baud rate: 9600
```

```
Num Name Protocol
0 IP DOD-IP
3 ARP Address Resolution
7 IPX Network IPX
11 SNMP Simple Network Management Protocol
12 OSPF Open SPF-Based Routing Protocol
23 ASRT Adaptive Source Routing Transparent Enhanced Bridge
26 DLS Data Link Switching
```

```
Num Name Feature
1 BRS Bandwidth Reservation
2 MCF MAC Filtering
```

```
3 Networks:
Net Interface MAC/Data-Link Hardware State
0 TKR/0 Token-Ring/802.5 IBM Token-Ring Up
1 FR/0 Frame Relay SCC Serial Line Down
2 PPP/0 Point to Point SCC Serial Line Up
```

2. Enter the GWCON **protocol** command with the protocol number or short name of the desired protocol displayed in the configuration information.

In the following example, the command has been entered for accessing the SNMP protocol console process.

```
+ protocol 11
```

*or*

```
+ protocol SNMP
```

The protocol console prompt then displays on the console. This example shows the SNMP protocol console prompt:

```
SNMP>
```

You can now begin entering the protocol's commands. See the corresponding protocol section of the *Protocol Configuration and Monitoring Reference* for more information on specific protocol console commands.

---

## Command Completion

The automatic command completion function assists you with the syntax for commands entered at the command line.

To illustrate the behavior of Command Completion, assume that the following commands are allowed in a given menu context. (This is an example menu only.)

### **enable**

auto-refresh

caching

### **set**

cache-size

cache-timeout

priority

- If you type **ena** and press the Space Bar, the full command is shown as **ENABLE**. If you now type **?**, a list of possible items to enable are shown (**auto-refresh** and **caching**) and the command **ENABLE** remains on the command line.
- If you type **ena** and press **Enter**, a message is printed that the command is not fully specified, and a list of possible items to enable are shown (**auto-refresh** and **caching**) and the command **ENABLE** remains on the command line.
- Because the **ENABLE** command requires an item to enable, it appears in a list of possible command completions with “...” in the left margin to indicate that more input is required for the command.
- If your input matches multiple commands, a list of possible completions is displayed. Your input on the new command line is expanded to the longest common prefix. For example, if you enter **set ca**, and then press the space bar, **CACHE-SIZE** and **CACHE-TIMEOUT** will be listed, and the new command line will be expanded to **SET cache-**, since “cache-” is common to both possible completions. Now you must type the letter “s” or the letter “t” to distinguish between the possible completions “size” or “timeout”.
- Common commands sometimes appear in an alternate form (**SHOW**, **DISPLAY**, **LIST**). If the Command Completion does not yield a match on a common command, such as **SHOW**, the alternatives **DISPLAY** or **LIST** will be displayed, if found.

- If the search for a command (and alternatives) does not yield an exact match, you are presented with a list of possible completions, using some portion of your input. For example, **enable** followed by the Space Bar would be replaced with **ena** and **ENABLE** would be listed as the possible completion.
- When a list of possible commands is shown, you can use the Tab key to cycle through one command at a time on the current command line. You can use the Space Bar or Enter key to select the command shown.

## Online Help When Command Completion is Enabled

The following online help is available when command-completion is enabled.

See page 68 for the **enable command-completion** syntax.

**?** Question mark displays a list of possible completions. A message appears if the command is already complete.

### Space Bar

Attempts to complete the current word on the command line. If a unique match is not found, possible completions are listed.

**Tab** Attempts to complete the current word on the command line. If a unique match is not found, possible completions are listed and you may cycle through these possible completions using the Tab key. Use the Space Bar or the Enter key to select the currently displayed command.

**Enter** Attempts to complete the current word on the command line. If the command is complete, Enter executes the command and stores it in the Command History. If the command is incomplete, a list of possible completions is displayed.

**Ctrl-P** Returns to the MOS Operator Console prompt (\*). (Ctrl-P is the default Intercept Character.)

### Backspace

Deletes the last character on the command line.

**Ctrl-W** Deletes the last word on the command line.

**Ctrl-U** Aborts the current command.

**Ctrl-L** Refreshes the current command line to display its contents.

**Ctrl-B** Retrieve Backward. Replaces the current command line with the previous command in the circular Command History.

**Ctrl-F** Retrieve Forward. Replaces the current command line with the next command in the Command History.

**Ctrl-R** Marks the start of a Repeat Sequence in the Command History. Use with the **Ctrl-N** function.

**Ctrl-N** Replaces the current command line with the next command in the Repeat Sequence whose starting command was marked with **Ctrl-R**.

**Ctrl-C** Cancels Easy-Start, if active.

### Escape ?

**Escape**, followed by "?" prints this Command Line Help:

The following rules apply to automatic command completion:

- Completed commands are shown in UPPERCASE on the command line.



- Common commands sometimes appear in an alternate form (**ADD** versus **CREATE**). If the command completion does not yield a match on a common command, any alternative commands will be displayed.
- If the search for a command (and alternative commands) does not yield a unique match, a list of possible completions is shown, and the longest common prefix is presented.
- When possible completions are listed, commands requiring further command input are shown with “...” in the left margin.
- When a Command History retrieve key (Ctrl-B,F,N) is pressed, the Command History is scanned for a command that successfully parses in the current command context. A tone will be sounded if no such command exists.
- Some command menus are built dynamically. Command Completion cannot always follow these dynamic links. '?' can be entered in these cases.
- To disable Command Completion for just one command (to enter a comment), type any Comment Character as the first character on the command line. The Comment Characters are !@#%\*.:;/"
- Command Completion will be disabled in the event of an internal error. Report the Debug information on the screen to Customer Support.
- Command Completion is currently Enabled. To Disable this option, use the **disable command-completion** command from Configuration talk 6.

## Online Help When Command Completion is Disabled

The following online help is available when command-completion is disabled:

- ?** When a ? (Question Mark) is entered at the end of the command line, a list of possible completions is shown.
- Enter** Executes the command and stores it in the Command History. A message is printed if the command is not fully specified
- Ctrl-P** Returns to the MOS Operator Console prompt (\*). (Ctrl-P is the default Intercept Character.)
- Backspace**  
Deletes the last character on the command line.
- Ctrl-U** Aborts the current command.
- Ctrl-B** Retrieve Backward. Replaces the current command line with the previous command in the circular Command History.
- Ctrl-F** Retrieve Forward. Replaces the current command line with the next command in the Command History.
- Ctrl-R** Marks the start of a Repeat Sequence in the Command History. Use with the **Ctrl-N** function.
- Ctrl-N** Replaces the current command line with the next command in the Repeat Sequence whose starting command was marked with **Ctrl-R**.
- Ctrl-C** Cancels Easy-Start, if active.
- Escape ?**  
**Escape**, followed by “?” prints this Command Line Help:

Command Completion is currently Disabled. To Enable this option, use the **enable command-completion** command from Configuration talk 6.

---

## Command History

The Command History contains up to the last 20 commands entered by the user in OPCON, GWCON (Talk 5) or CONFIG (Talk 6) command line menus.

Backward and Forward retrieve keys can be used to recall previously entered commands. In addition, a facility is provided to enable the advanced user to repeat a particular series of commands.

### Repeating a Command in the Command History

By pressing **Ctrl-B** (backward) or **Ctrl-F** (forward) at any command line prompt in an OPCON, GWCON or CONFIG menu, the current command line is replaced by the previous or next command in the Command History. The Command History is common across the command line interface. That is, a command entered while in a GWCON menu can be retrieved from within CONFIG and a command entered while in a CONFIG menu can be retrieved from within GWCON.

When automatic Command Completion is enabled (See "Command Completion" on page 21) and a Command History retrieve key (Ctrl-B,F,N) is pressed, the Command History is scanned for a command that successfully parses in the current command context. A tone will be sounded if no such command exists.

The Command History contains the most recently entered commands, up to a maximum of the last 20 commands. If only three commands have been entered since a restart, pressing **Ctrl-F** or **Ctrl-B** circles through only those three commands. If no commands have been entered thus far, **Ctrl-F** or **Ctrl-B** results in tone sound.

**Note:** A command aborted by pressing **Ctrl-U** will not be entered into the Command History. When Command Completion is enabled, only complete commands are entered into the Command History.

To enter two similar commands:

```
display sub 1es  
display sub 1ec
```

Enter:

```
display sub 1es, then press Enter  
Ctrl-B for Backward, and the current line is replaced with-  
display sub 1es  
Press Backspace and replace "s" with "c" to get  
display sub 1ec and then press Enter
```

### Repeating a Series of Commands in the Command History

There is an additional feature for advanced users to facilitate repeating a particular series of GWCON or CONFIG commands. C1, C2,...,Cn in the Command History is referred to as a *repeat sequence*. This feature may be more convenient than simply using **Ctrl-B** and **Ctrl-F** when you must repeat a given task that requires multiple commands. Enter **Ctrl-R** (repeat) to set the start of the *repeat sequence* at command C1. Enter **Ctrl-N** (next) successively to retrieve the next command in the

repeat sequence. Commands are not automatically entered, but are placed on the current command line allowing you to modify or enter the command.

To produce the desired behavior of a repeat sequence, the first command retrieved using the first **Ctrl-N** (next) depends on the manner in which the start of the repeat sequence was set using **Ctrl-R** (repeat).

Setting the start of the repeat sequence with **Ctrl-R** can be done in two ways:

1. When C1 is initially entered
2. When C1 is retrieved from the Command History with **Ctrl-B** or **Ctrl-F**.

## Starting a Repeat Sequence As Commands Are Entered

If you enter **Ctrl-R** as command C1 is being keyed in, and then enter commands C2, C3... Cn. **Ctrl-N** will successively bring commands C1, C2, ... Cn, C1, C2, ... Cn, C1, ... to the command line.

In Example 1, the start of the repeat sequence is set as the first command is keyed in. The user knows ahead of time that the same commands to be entered in GWCON need to be repeated in CONFIG.

### Example 1

1. As the first command in the sequence is keyed in, use **Ctrl-R** (repeat) to set the start of the repeat sequence.

```
*console
+event Ctrl-R
```

then press **Enter** to set the start of the repeat sequence.

2. Continue typing the subsequent commands in the sequence:

```
Event Logging System user console
ELS>display sub les
ELS>display sub lec
ELS>exit
+
```

3. To enter these same commands in CONFIG, press **Ctrl-P** (the default OPCON intercept character) and go to CONFIG.

```
+--press Ctrl-P-
*configuration
Config>Ctrl-N for NEXT to retrieve the start of this sequence-
Config>event Enter
Event Logging System user configuration
ELS config>Ctrl-N for NEXT to retrieve the next command in sequence-
ELS config>display sub les Enter
ELS config>Ctrl-N for NEXT to retrieve the next command in sequence-
ELS config>display sub lec Enter
ELS config>Ctrl-N for NEXT to retrieve the next command in sequence-
ELS config>exit Enter
Config>
```

## Starting a Repeat Sequence After All Commands Are Entered

On the other hand, if you first enter C1, C2, ... Cn, and retrieve C1 via **Ctrl-B** or **Ctrl-F**. Entering **Ctrl-R**, entering **Ctrl-N** successively brings commands C2,..., Cn, C1, C2,..., Cn, C1,...,Cn to the command line (see Example 2). The first occurrence of C1 is bypassed since C1 is already available on the command line at the time it was retrieved, and does not need to be recalled again by the first **Ctrl-N**.

In Example 2, all the commands are entered and then the first command in the sequence to be repeated is retrieved. A sequence of commands has been entered in GWCON, and the same sequence needs to be repeated in CONFIG.

### Example 2

1. Enter the following commands in GWCON:

```
*console
+event
Event Logging System user console
ELS>display sub les
ELS>display sub lec
ELS>exit
+
```

2. To enter these same commands in CONFIG, press **Ctrl-P** (the default OPCON intercept character) and go to CONFIG.

```
+Ctrl-P-
*configuration
Config>Ctrl-B four times to retrieve the start of
      the four command sequence in this example-
Config>event
Config>event Ctrl-R for REPEAT to set the start of the repeat sequence-
Config>event Enter
Event Logging System user configuration
ELS config>Ctrl-N for NEXT to retrieve the next command in sequence-
ELS config>display sub les Enter
ELS config>Ctrl-N for NEXT to retrieve the next command in sequence-
ELS config>display sub lec Enter
ELS config>Ctrl-N for NEXT to retrieve the next command in sequence-
ELS config>exit Enter
Config>
```

---

## Chapter 3. The OPCON Process and Commands

This chapter describes the OPCON interface configuration and operational commands. It includes the following sections:

- “What is the OPCON Process?”
- “Accessing the OPCON Process”
- “OPCON Commands”

---

### What is the OPCON Process?

The Operator Console process (OPCON) is the root-level process of the device software user interface. The main function of OPCON is to communicate with processes at the secondary level, such as Configuration, Console, and Event Logging. Using OPCON commands, you may also:

- Display information about device memory usage
- Restart the device software
- Reload the device software (reboot)
- Telnet or ping to other devices or hosts
- Display status information about all device processes
- Manipulate the output from a process
- Change the OPCON intercept character

---

### Accessing the OPCON Process

When the device starts for the first time, a boot message appears on the console. Then the OPCON prompt (\*) appears on the console, indicating that the OPCON process is active and ready to accept commands.

The OPCON process allows you to configure, change, and monitor all of the device’s operating parameters. While in the OPCON process, the device is forwarding data traffic. When the device is booted and enters OPCON, a copyright logo and an asterisk (\*) prompt appears on the locally attached console terminal. This is the OPCON (OPERator’s CONsole) prompt, the main user interface that allows access to second-level processes.

Some changes to the device’s operating parameters made while in OPCON take effect immediately without requiring reinitializing of the device. If the changes do not take effect, use the **restart** command at the \* prompt.

At the \* prompt, an extensive set of commands enables you to check the status of various internal software processes, monitor the performance of the device’s interfaces and packet forwarders, and configure various operational parameters.

---

### OPCON Commands

This section describes the OPCON commands. Commands that are needed more often appear before the “- - - -” separator. Each command includes a description, syntax requirements, and an example. The OPCON commands are summarized in Table 3 on page 28. To use them, access the OPCON process and enter the

appropriate command at the OPCON prompt (\*).

Table 3. OPCON Commands

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Configuration*	Accesses the device's configuration process. (talk 6)
Console*	Accesses the device's console process. (talk 5)
Event Logging System*	Accesses the device's event logging process. (talk 2)
ELS Console*	Accesses the device's secondary ELS Console process. (talk 7)
Logout	Logs off a remote console.
Ping	Pings a specified IP address.
Reload	Reloads the device.
Telnet	Connects to another device.
-----	-----
Breakpoint	Enters the MOS system debugging tool.
Divert	Sends the output from a process to a console or other terminal.
Flush	Discards the output from a process.
Halt	Suspends the output from a process.
Intercept	Sets the OPCON default intercept character.
Memory	Reports the device's memory usage.
Pause	Suspends EasyStart (for EasyStart only).
Restart	Restarts (but does not reload) the device software.
Status	Shows information about all device processes.
Stop	Stops EasyStart and enters Config Only mode (for EasyStart only).
Talk	Connects to another device process and enables the use of its commands.

\* When you use this command for the first time, you will be reminded that you can use **Ctrl-P** to return to the MOS Operator Console prompt (\*).

## Breakpoint

Use the **breakpoint** command to trap information in the MOS system debugging tool, inspect memory, place breakpoints, or obtain a core dump. This command should be used only by software specialists.

If the watchdog timer is on when you invoke this command, the contents of core memory are dumped (if dumping is enabled) when the watchdog timer fires. All routing processes are halted.

The **breakpoint** command must be issued from a local console.

**Note:** Do not use this command during normal operations because it completely halts operation of the software. If you accidentally enter the **breakpoint** command, quickly press **Esc**, and then **p**.

### Syntax:

**breakpoint**

## Configuration

Use the **configuration** command to access the device's configuration process (talk 6). See "Chapter 4. The CONFIG Process (CONFIG - Talk 6) and Commands" on page 43 for more information.

### Syntax:

**configuration**

### Example:

```
* configuration
```

(To return to the MOS Operator Console prompt (\*), press Control-P)

```
Gateway user configuration
Config>
```

## Console

Use the **console** command to access the device's console and monitoring process (talk 5). See "Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands" on page 131 for more information.

### Syntax:

**console**

### Example:

```
* console
```

```
CGW Operator Console
```

```
+
```

## Divert

Use the **divert** command to send the output from a specified process to a specified terminal. This command allows you to divert the output of several processes to the same terminal to simultaneously view the output. The **divert** command is commonly used to redirect MONITR output messages to a specific terminal. The device allows only certain processes to be redirected.

The **divert** command requires the PID and tty# (number of the output terminal). To obtain these values, use the OPCON **status** command. The terminal number can be the number of either the local console (tty0) or one of the remote consoles (tty1, tty2). The following example shows Event Logging System messages generated by the MONITR process (2) being sent to a remote console *tty1* (1).

Event messages are displayed immediately even though you may be in the middle of typing a command. The display and keyboard have separate buffers to prevent command confusion. The following example shows the MONITR process connected to TTY0 after executing the **divert 2 0** command. If you want to stop the output, enter **halt 2**. The **halt** command is described in "Halt" on page 31.

### Syntax:

**divert** *pid tty#*

**Example:**

Copyright Notices:  
Copyright IBM Corp. 1994, 1997  
MOS Operator Console

For help using the Command Line Interface, press ESCAPE, then '?'

\* **divert 2 0**

\* **status**

Pid	Name	Status	TTY	Comments
1	COpCN1	IOW	TTY0	gzs
2	Monitr	IDL	TTY0	
3	Tasker	RDY	--	
4	MOSDDT	DET	--	
5	CGWCon	DET	--	
6	Config	DET	--	
7	Ezysrt	IDL	--	
8	ROpCN1	IDL	TTY1	
9	ROpCN2	RDY	TTY2	j1g@128.185.40.40
10	CES3	IDL	--	
11	TOUT	IDL	--	
12	L2S3	IDL	--	
13	L3L2	IDL	--	
14	LLL2	IDL	--	
15	S3CE	IDL	--	

## Event

Use the **event** command to access the device's event logging process, (talk 2). See "Chapter 10. Using the Event Logging System (ELS)" on page 151 for more information.

**Syntax:**

**event**

## Flush

Use the **flush** command to clear the output buffers of a process. This command is generally used before displaying the contents of the MONITR's FIFO buffer to prevent messages from scrolling off the screen. Accumulated messages are discarded.

The device allows only certain processes to be flushed. To obtain the PID and tty#, use the OPCON **status** command. In the following example, after executing the **flush 2** command, the output of the MONITR process is sent to the Sink (it has been flushed).

**Syntax:**

**flush** *pid*

**Example:**

\* **flush 2**

\* **status**

Pid	Name	Status	TTY	Comments
1	COpCN1	IOW	TTY0	
2	Monitr	IDL	SNK	
3	Tasker	RDY	--	
4	MOSDDT	DET	--	



```

5  CGWCon  DET  --
6  Config  DET  --
7  Ezsstrt IDL  --
8  ROpCN1  IDL  TTY1
9  ROpCN2  RDY  TTY2 j1g@128.185.40.40

```

## Halt

Use the **halt** command to suspend all subsequent output from a specified process until the **divert**, **flush**, or **talk** OPCON command is issued to the process. The device cannot redirect all processes. **Halt** is the default state for output from a process. To obtain the PID for this command, use the OPCON **status** command. In the following example, after executing the **halt 2** command, the MONITR process is no longer connected to TTY0. Event messages no longer appear.

### Syntax:

```

halt          pid

```

### Example:

```

* halt 2
* status
Pid Name      Status TTY  Comments
1  COpCN1    IOW  TTY0 gzs
2  Monitr    IDL  --
3  Tasker    RDY  --
4  MOSDDT    DET  --
5  CGWCon    DET  --
6  Config    DET  --
7  Ezsstrt   IDL  --
8  ROpCN1    IDL  TTY1
9  ROpCN2    RDY  TTY2 j1g@128.185.40.40

```

## Intercept

Use the **intercept** command to change the OPCON intercept character. The intercept character is what you enter from other processes to get back to the OPCON process. The default intercept key combination is **Ctrl-P**.

The intercept character can be a control character. Enter the  $\hat{\ } (shift 6)$  character followed by the letter character or non-alphanumeric character, such as !@#\$%, you want for the intercept character.

**Note:** This change applies to only the current login session.

### Syntax:

```

intercept    ^ character

```

### Example 1:

```

* intercept ^a

```

From this example, the intercept character is now **Ctrl-A**.

### Example 2:

```

* intercept !

```

From this example, the intercept character is now **!**.

## Logout

Use the **logout** command to terminate the current session for the user who enters the logout command. If the console login is enabled, this command will require the next user to log in using an authorized userid/password combination. If the console login is not enabled, the OPCON prompt appears again.

### Syntax:

**logout**

## Memory

Use the **memory** command to obtain and display information about the device's global heap memory usage. The display helps you to determine if the device is being utilized efficiently. For an example of memory utilization, see Figure 3.

See "Memory" on page 141 for memory usage via talk 5.

### Syntax:

**memory**

### Example:

```
* memory
Number of bytes:  Busy = 319544, Idle = 1936, Free = 1592
```

**Busy** Specifies the number of bytes currently allocated.

**Idle** Specifies the number of bytes previously allocated but freed and available for reuse.

**Free** Specifies the number of bytes that were never allocated from the initial free storage area.

**Note:** The sum of the Idle and Free memory equals the total available heap memory.

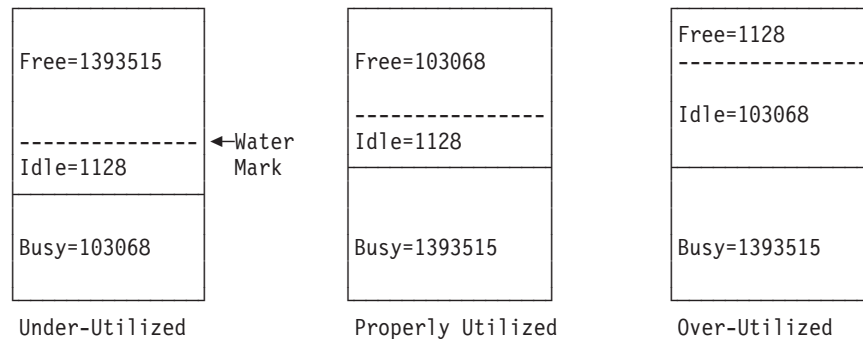 


Figure 3. Memory Utilization

## Pause (EasyStart only)

Use the **pause** command to suspend the EasyStart function. Use this command only when debugging the device. After completing your debugging session, enter the **restart** command to restart the device and resume the EasyStart function. The device will reenter EasyStart.

### Syntax:

**pause**

### Example:

```
pause
Entering EasyStart operation. Type 'stop' to terminate.
ELS messages are automatically displayed in this mode.

EasyStart>

EZ.001: Starting.
EZ.007: Waiting up to 6 seconds for devices to pass self-test.
pause
* restart
Are you sure you want to restart the gateway? (Yes or [No]): yes
```

```
Copyright Notices:
Copyright IBM Corp. 1994, 1997
```

```
MOS Operator Console
```

```
Entering EasyStart operation. Type 'stop' to terminate.
ELS messages are automatically displayed in this mode.
```

```
EasyStart>

EZ.001: Starting.
EZ.007: Waiting up to 60 seconds for devices to pass self-test.
BTP.010: net 0, int TKR/0, Sent client request (htype: 6)
BTP.011: net 1, int FR/0, Could not snd client req because: Ifc not up
BTP.011: net 2, int FR/1, Could not snd client req because: Ifc not up
BTP.011: net 3, int FR/2, Could not snd client req because: Ifc not up
```

## Ping

Use the **ping** command to have the device send ICMP Echo messages to a given destination (that is, “pinging”) and watch for a response. This command can be used to isolate trouble in the internetwork.

### Syntax:

**ping** *dest-addr [src-addr data-size ttl rate tos data-value]*

The ping process is done continuously, incrementing the ICMP sequence number with each additional packet. Each matching received ICMP Echo response is reported with its sequence number and the round-trip time. The granularity (time resolution) of the round-trip time calculation is usually around 20 milliseconds, depending on the platform.

To stop the ping process, type any character at the console. At that time, a summary of packet loss, round-trip time, and number of unreachable ICMP destinations will be displayed.

When a broadcast or multicast address is given as destination, there may be multiple responses printed for each packet sent, one for each group member. Each returned response is displayed with the source address of the responder.

You can specify the size of the ping (number of data bytes in the ICMP message, excluding the ICMP header), value of the data, time-to-live (TTL) value, rate of pinging, and TOS bits to set. You can also specify the source IP address. If you do not specify the source IP address, the device uses its local address on the outgoing interface to the specified destination. If you are validating connectivity from any of the device's other interfaces to the destination, enter the IP address for that interface as the source address.

Only the destination parameter is required; all other parameters are optional. By default the size is 56 bytes, the TTL is 64, the rate is 1 ping per second, and the TOS setting is 0. The first 4 bytes of the ICMP data are used for a timestamp. By default the remaining data is a series of bytes with values that are incremented by 1, starting at X'04', and rolling over from X'FF' to X'00' (for example, X'04 05 06 07 . . . FC FD FE FF 00 01 02 03 . . .'). These values are incremented only when the default is used; if the data byte value is specified, all of the ICMP data (except for the first 4 bytes) is set to that value and that value is not incremented. For example, if you set the data byte value to X'FF', the ICMP data is a series of bytes with the value X'FF FF FF . . .'.  
.. FC FD FE FF 00 01 02 03 . . .'). These values are incremented only when the default is used; if the data byte value is specified, all of the ICMP data (except for the first 4 bytes) is set to that value and that value is not incremented. For example, if you set the data byte value to X'FF', the ICMP data is a series of bytes with the value X'FF FF FF . . .'.

**Example:**

```
* ping
Destination IP address [0.0.0.0]? 192.9.200.1
Source IP address [192.9.200.77]?
Ping data size in bytes [56]?
Ping TTL [64]?
Ping rate in seconds [1]?
Ping TOS (00-FF) [0]? e0
Ping data byte value (00-FF) [ ]?
PING 192.9.200.77-> 192.9.200.1:56 data bytes,ttl=64, every 1 sec.
56 data bytes from 192.9.200.1:icmp_seq=0.ttl=255.time=0.ms
56 data bytes from 192.9.200.1:icmp_seq=1.ttl=255.time=0.ms
56 data bytes from 192.9.200.1:icmp_seq=2.ttl=255.time=0.ms

----192.9.200.1 PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max=0/0/0 ms
```

## Reload

Use the **reload** command to reboot the device by loading in a new copy of the device software. When you use this command from a remote console, you install a new software load without going to the device. This command executes the same functions as pressing the reset button except that the device will not dump (if so configured). Before the reload takes effect, you are prompted to confirm the reload. You are also prompted if you have not saved the configuration changes.

**Syntax:**

**reload**

**Example:**

```
* reload
Are you sure you want to reload the gateway (Yes or No)?
```

## Restart

Use the **restart** command to reinitialize the software. After you reinitialize the software, a bus reset occurs. This causes the connected network interfaces to

self-test, all routing tables to clear, and any packets in the device to drop. Before the restart takes effect, you are prompted to confirm the restart.

**Note:** If you use this command from a remote console, your Telnet session will be lost because all device processes are being restarted.

**Syntax:**

**restart**

**Example:**

```
* restart
Are you sure you want to restart the gateway (Yes or No)? Yes
```

```
Copyright Notices:
Copyright IBM Corp. 1994, 1997
MOS Operator Console
```

```
For help using the Command Line Interface, press ESCAPE, then '?'
```

```
*
```

## Status

Use the **status** command to display information about all device processes. By entering the PID after the **status** command, you can look at the status of only the desired process. The following example shows the total status display.

**Syntax:**

**status** *pid*

**Example:**

```
* status
Pid Name      Status TTY  Comments
1   COpCN1     IOW   TTY0
2   Monitr     IDL   --
3   Tasker     RDY   --
4   MOSDDT     DET   --
5   CGWCon     IOW   --
6   Config     IOW   TTY1
7   Ezystprt   IDL   --
8   ROpCN1     IOW   TTY1 128.185.46.101
9   ROpCN2     RDY   TTY2 128.185.46.104
```

**Pid** Specifies the PID. This is the process to talk to from OPCON, or it can be an argument to the STATUS command to request status information about a specific process.

**Name** Specifies the process name. It usually corresponds to the name of the program that is running in the process.

**Status**

Specifies one of the following:

**IDL** Specifies that the process is idle and waiting for completion of some external event, such as asynchronous I/O.

**RDY** Specifies that the process is ready to run and is waiting to use the CPU.

**IOW** Specifies that the process is waiting for synchronous I/O, usually its expected standard input, to complete.

**DET** Specifies that the process has output ready to be displayed and it is

either waiting to be attached to a display console or waiting to have its output diverted to a specified console.

**FZN** Specifies that the process is frozen due to an error. This usually means the process is trying to use a device which is faulty or incorrectly configured.

**TTYn** Specifies the output terminal, if any, to which the process is currently connected.

**TTY0** Local console

**TTY1 or TTY2**  
Telnet consoles.

**Sink** Process has been flushed.

**Two dashes (--)**  
Process has been halted.

**Comments**

Specifies the user's login IP address provided during login when a user is logged in using Telnet (ROpCon).

## Stop (EasyStart only)

Use the **stop** command to stop the EasyStart function and enter Config-only mode. For information about Config-only mode, see "Config-Only Mode" on page 44.

**Syntax:**

**stop**

**Example:**

```
* stop
EasyStart> EZ.001: Starting.
EZ.007: Waiting up to 6 seconds for devices to pass self-test.
stop EZ.006: All dlinks/parameters tried but failed; resetting to def values.
EZ.009: *** Restarting Router ***
```

No Protocols Configured. Entering Quick Config

```
Router Quick Configuration for the following:
o Interfaces
o Bridging
    Spanning Tree Bridge (STB)
    Source Routing Bridge (SRB)
    Source Routing/Transparent Bridge (SR/TB)
    Source Routing Transparent Bridge (SRT)
o Protocols
    IP (including OSPF, RIP and SNMP)
o Booting
```

Event Logging will be enabled for all configured subsystems with logging level 'Standard'

```
*****
Interface Configuration
*****
```

```
Type 'Yes' to Configure Interfaces
Type 'No' to skip Interface Configuration
Type 'Quit' to exit Quick Config Configure Interfaces? (Yes, No, Quit):
[Yes] q
```

Quick Config Done

Config (only)>

## Suspend

Use the **suspend** command to temporarily disable Command Completion for the current session only. If you are using an automated script, you can issue **suspend yes** as the first command if you want to temporarily disable Command Completion.

For information about Command Completion, see “Command Completion” on page 21 .

### Syntax:

**suspend**

## Talk

You can use the **configuration**, **console**, or **event** commands to connect to other processes, such as CONFIG, GWCON, or MONITR, or use the **talk** command. After connecting to a new process, you can send specific commands to and receive output from that process. You cannot talk to the TASKER or OPCON processes.

To obtain the PID, use the OPCON **status** command. Once you are connected to the second-level process, such as CONFIG, use the intercept character, **Ctrl-P**, to return to the \* prompt.

### Syntax:

**talk** *pid*

### Example:

```
* talk 5
```

```
CGW Operator Console
```

```
+
```

When using third-level processes, such as SNMP Config> or SNMP>, use the **exit** command to return to the second level.

## Telnet

Use the **telnet** command to remotely attach to another device or to a remote host. The only optional parameter is the terminal type that you want to emulate.

You can use the **telnet** command with IPv4 or with IPv6 addresses.

A device has a maximum of five Telnet sessions: two servers (inbound to the device), and three clients (outbound from the device).

**Note:** To use Telnet in a pure bridging environment, enable Host Services.

### Syntax:

## telnet

*ip-address terminal-type*

**Example 1:** `telnet 128.185.10.30` or `telnet 128.185.10.30 23` or `telnet 128.185.10.30 vt100`

```
Trying 128.185.10.30 ...
Connected to 128.185.10.30
Escape character is '^['
```

**Example 2:** `telnet 1:9::10`

```
Trying 1:9::10 ...
Connected to 1:9::10
Escape character is '^['
```

When telnetting to a non-existent IP address, the device displays:

```
Trying 128.185.10.30 ...
```

To enter the Telnet command mode, type the escape character-sequence, which is **Ctrl-]**, at any prompt.

```
telnet>
```

If you Telnet into a device,

- Press **← Backspace** to delete the last character typed on the command line.

**Note:** When using a VT100 terminal, do not press **← Backspace** because it inserts invisible characters. Press **Delete** to delete the last character.

- Press **Ctrl-U** at the `telnet>` prompt to delete the whole command line entry so that you can reenter a command.

The Telnet command mode consists of the following subcommands:

**close** Close current connection

**display** Display operating parameters

**mode** Try to enter line-by-line or character-at-a-time mode

**open** Connect to a site

**quit** Exit Telnet

**send** Transmit special characters (send ? for more)

**set** Set operating parameters (set ? for more)

**status** Print status information

**toggle** Toggle operating parameters (toggle ? for more)

**z** Suspend Telnet

**?** Print help information

The **status** and **send** subcommands have one of two responses depending on whether or not the user is connected to another host. For example:

Connected to a host:

```
telnet> status
Connected to 128.185.10.30 Operating in character-at-a-time mode. Escape character is '^['.

telnet> send ayt
```

**Note:** The send command currently supports only `ayt`.



Not connected to a host:

```
telnet> status  
Need to be connected first.  
  
telnet> send ayt  
  
Need to be connected first.
```

Use the **close** subcommand to close a connection to a remote host and terminate the Telnet session. Use the **quit** subcommand to exit the **telnet** command mode, close a connection, and terminate a Telnet session.

```
telnet> close
```

*or*

```
telnet> quit  
logout  
*
```



---

## **Part 2. Understanding, Configuring, and Using Base Services**



---

## Chapter 4. The CONFIG Process (CONFIG - Talk 6) and Commands

This chapter describes the CONFIG process configuration and operational commands. It includes the following sections:

- “What is CONFIG?”
- “Entering and Exiting CONFIG” on page 54
- “CONFIG Commands” on page 54

---

### What is CONFIG?

The Configuration process (CONFIG) is a second-level process of the device user interface. Using CONFIG commands, you can:

- Set or change various configuration parameters
- Add or delete an interface to the hardware configuration
- Enter the Boot CONFIG command mode
- Enter the Quick Configuration mode
- Clear, list, or update configuration information
- Enable or disable console login and modem control
- Communicate with third-level processes, including protocol environments

**Note:** Refer to the chapter “Migrating to a New Code Level” in *IBM 2210 Nways Multiprotocol Router Service and Maintenance Manual* for information about migrating to a new code level.

CONFIG lets you display or change the configuration information stored in the device’s nonvolatile configuration memory. Changes to system and protocol parameters do not take effect until you restart the device or reload the device software. (For more information, refer to the OPCON **restart** and **reload** commands in “What is the OPCON Process?” on page 27).

The CONFIG command interface is made up of levels that are called modes. Each mode has its own prompt. For example, the prompt for the SNMP protocol is `SNMP config>`.

If you want to know the process and mode you are communicating with, press **Enter** to display the prompt. Some commands in this chapter, such as the **network** and **protocol** commands, allow you to access and exit the various levels in CONFIG. See Table 4 on page 54 for a list of the commands you can issue from the CONFIG process.

### Using EasyStart

EasyStart mode automatically downloads the configuration of the router from a BOOTP server. During the process the router displays the EasyStart> prompt and ELS messages which track the process.

1. The Network Administrator sets up the BOOTP server with records for downloading configurations. The Network Administrator must configure the

## Using the CONFIG Process

BOOTP server with a valid configuration file for your type of router. For more information about configuring a BOOTP server, see “BOOTP Using a Console Terminal” on page 116.

2. Turn on the router and it loads itself from the IBD or the network using BOOTP. As soon as the operating software starts running, EasyStart begins to work if the router has no devices or protocols configured, as it would for a new router. On startup, devices are entered into the configuration automatically with default parameters.

**Note:** EasyStart begins when default devices are configured but no protocols are configured.

There is no manual entry into EasyStart but you can cause the router to go into EasyStart by typing the following commands at the Config prompt:

```
Config>clear all
You are about to clear all non Device configuration information.
Are you sure you want to do this (Yes or [No]): yes
non Device configuration cleared

Config>clear device
You are about to clear all Device configuration information
Are you sure you want to do this (Yes or [No]): yes
Device configuration cleared

*restart
Are you sure you want to restart the gateway? (Yes or [No]): yes
```

```
Copyright Notices:
Copyright IBM Corp. 1994, 1997
```

```
MOS Operator Console Entering EasyStart operation.
Type 'stop' to terminate.
ELS messages are automatically displayed in this mode.
```

```
EasyStart>
```

```
EZ.001: Starting.
EZ.007: Waiting up to 30 seconds for devices to pass self-test.
```

```
stop
EZ.009: *** Restarting Router ***
```

```
No Protocols Configured. Entering Quick Config
```

```
Router Quick Configuration for the following:
o Interfaces
o Bridging
  Spanning Tree Bridge (STB)
```

If you are in EasyStart and you enter **stop**, the router restarts and puts you into Quick Config automatically. For more information about Quick Config, see “Qconfig” on page 79.

If you are in EasyStart and you enter **pause**, the router suspends the EasyStart process. Enter **restart** to resume the process. Only suspend EasyStart for debugging purposes.

## Config-Only Mode

Config-Only mode is entered if the configuration file that you are using is empty or no protocols are configured. Config-Only mode can also be entered manually to recover from an invalid configuration that is causing the router to crash during start-up.

## Automatic Entry Into Config-Only Mode

Config-Only mode is entered if the router detects a problem during operation or during router initialization.

The following conditions cause the router to enter Config-Only mode:

- The software load does not match the device configuration. Specifically, an attempt is made to configure a device or data link that is not supported by the software load.
- Devices are configured but no protocols are configured.

If the router enters Config-Only mode because an unsupported device is configured:

- Change the device information to match the hardware installed in (and supported by) the router, or change the unsupported device to “null device”.
- Enter the **Restart** or **Reload** command from the Config (only)> prompt.
- The router will automatically enter OPCON (\*).

If no protocols or devices are configured other than default devices, the router comes up in EasyStart. For additional information, see “Using EasyStart” on page 43.

## Manual Entry Into Config-Only Mode

To enter Config-Only mode, do one of the following:

- To reload or restart the router with no configuration.  
To reload or restart the router with no configuration, use the **cc** command.
- Reload or restart the router with no protocols configured.
- Use the bootstrap monitor **bc** command to boot to config-only mode.

**Note:** If autoboot is enabled and if you press **Ctrl-C** while the software is loading, you go directly to the bootstrap monitor > prompt without seeing the text and you can skip step 1. Otherwise, the following text appears:

```
PROM Load/Dump Program * Revision: 1.15 *
Copyright IBM Corp. 1994, 1997
Host **VL-51* loading
Using Ethernet at ( 81600, 94).
Trying host 128.185.210.125, via 128.185.123.28
file loads/latest-gen.rbx2-multisna.ldc
.loading
.....
....
```

1. If boot information is missing, the software will load from the IBD. If the first IBD file is invalid, such as a config file, the software will go to the manual load prompt:

```
No valid boot records found, attempting IBD load
Loading using IBD Load Image "v12-15.cfg"
Bad record header 0

No valid server configured -- Entering manual mode
Device types available:
```

```
IBD
Token Ring
WAN
```

Device type:

2. Press **Ctrl-C** to go to the bootstrap monitor. The > prompt appears.

```
Bootstrap Monitor v1.15
Copyright IBM Corp. 1994, 1997
>
```

## Using the CONFIG Process

### 3. Boot to Config-Only mode.

```
>bc
PROM Load/Dump Program * Revision: 1.15 *
Copyright IBM Corp. 1994, 1997
Host **VL-51* loading

Device types available:

    IBD
    Ethernet
    WAN

Device type [Ethernet]:
Connector Type (AUI/RJ45) [AUTO_CONFIG]:
Interface IP address [128.185.123.51]: 10.1.155.22
IP mask [FFFFFF00]:
Boot from host [128.185.210.125]:
Via gateway [128.185.123.28]: 43
Boot file name [loads/latest-gen.rbx2-multisna.ldc]:

Using Ethernet at (    0, 0).
Trying host 128.185.210.125, via 128.185.123.28
file loads/latest-gen.rbx2-multisna.ldc
.loading
*.....Starting at 1040010

The Standalone Configuration Process. You are here because
The watchdog timer timed out and/or Autoboot not selected

Config (only)>
```

See “Chapter 7. Boot Options” on page 115 for more information.

## Quick Configuration

Quick Configuration (Quick Config) provides a minimal set of commands that allow you to configure various devices (interfaces), bridging protocols, routing protocols, and booting records present in the router load. It also allows configuration of some of the interfaces, booting information, and if the corresponding hardware feature is installed, Console Modem-Control. You can also configure an SNMP community with WRITE\_READ\_TRAP access. This is useful during initial setup because the configuration program uses SNMP SET commands to transfer the configuration.

Quick Config complements the existing configuration process by offering a shortcut. This shortcut allows you to configure the minimum number of parameters for these devices, bridging protocols, and routing protocols and booting records without having to exit and enter the different configuration processes. The other parameters are set to selected defaults.

Situations that call for the router to be quickly configured are:

- Blank or corrupted configuration memory, such as when one of the following situations occurs:
  - The router is configured for the first time.
  - Voltage fluctuations caused corruption of configuration memory.
  - The CPU board, which contains the configuration memory chip, was replaced in the router.
- Demonstration purposes, for which the router needs to be quickly configured to demonstrate its capabilities.
- Bench-marking tests to get the tests going without having to learn the router’s operating system commands.

Quick Config operates as follows:

- It asks a series of questions with default values.



## Using the CONFIG Process

- It offers a short-cut to the detailed configuration of the normal mode command set.

Quick Config sets a number of default parameters based upon how you answer the configuration questions. What cannot be configured with Quick Config can be configured using Config after exiting Quick Config.

You cannot delete Quick Config information from within Quick Config. However, you can correct information either by exiting and returning to Quick Config, or by entering the **restart** command as a response to some Quick Config questions.

For complete information on using the Quick Config software, see “Appendix A. Quick Configuration Reference” on page 683.

There are two ways to get into Quick Config: automatically from EasyStart or manually.

### Automatic Entry Into Quick Config Mode

If you are in EasyStart and you type **stop**, the router enters Quick Config automatically.

What you cannot configure with Quick Config you can configure using CONFIG processes after exiting Quick Config.

You cannot delete Quick Config information; but you can correct it by exiting and returning to Quick Config.

### Manual Entry Into Quick Config Mode

You might want to run Quick Config manually to demonstrate the router’s capabilities or to reconfigure dynamically to perform benchmark tests without having to learn the router’s operating system commands.

To enter Quick Config, type **qconfig** at the `Config>` prompt.

### Exiting from Quick Config Mode

To exit Quick Config, restart by entering **r** from any prompt. Follow the queries until you enter **no** and then enter **q** to quit. The router returns to either the `Config (only)>` or the `Config>` prompt.

## Configuring User Access

The device configuration process allows for a maximum of 50 user names, passwords, and levels of permission. Each user needs to be assigned a password and level of permission. There are three levels of permission: *Administration*, *Operation*, and *Monitoring*.

For more information, see on page 61.

## Using the CONFIG Process

### Technical Support Access

If you are the system administrator, when you add a new user for the first time, you are asked if you want to add Technical Support access. If you answer yes, Technical Support is granted the same access privileges that you have as system administrator.

The password for this account is automatically selected by the software and is known by your service representative. This password can be changed using the **change user** command; however, if you do change the password, customer service cannot provide remote support. For additional information on the use of the **change user** command, see “Change” on page 62.

## Configuring Spare Interfaces

Occasionally, you may need to configure a new interface along with its bridging and routing protocols without having to restart the device. You can accomplish this by configuring a number of **spare interfaces** on your device. Spare interfaces are useful if:

- You are adding dial circuits to your device.  
Use spare interfaces to add new V.25bis, V.34, or ISDN dial circuits on an existing V.25bis, V.34, or ISDN interface.
- **Note:** You cannot add spare interfaces to channelized ISDN T1/E1 interfaces.
- You are adding ATM LAN Emulation clients.  
Use spare interfaces to add Token-Ring or Ethernet ATM LAN Emulation clients to an existing ATM interface.

To configure a spare interface:

1. Access the CONFIG process by entering **configuration**.
2. Configure the number of spare interfaces for the device using the **set spare-interfaces** command.
3. Exit the CONFIG process by pressing **Ctrl-P**.
4. Restart the device.

#### Example:

```
* configuration
Config> set spare 2
Config>
*restart
Are you sure you want to restart the gateway? (Yes or [No]) yes
```

When the device restarts, the spare interfaces are installed as null devices.

To use one of the spare interfaces:

1. Access the CONFIG process by entering **configuration**.
2. Add a dial circuit using the **add device** command.
3. Configure the spare interface by using the **net** command to configure the interface or add ATM LAN Emulation clients.
4. Configure the various protocols and features using the **protocol** and **feature** commands.
5. Exit the CONFIG process by pressing **Ctrl-P**.
6. Access the GWCON process by entering **console**.

7. Bring the new interface online to the network using the **activate** command.

The following example shows how to configure and activate a new dial circuit on which the IP protocol is enabled. The dial circuit and IP protocol configuration are not shown.

### Example:

```
*configuration
Config> add device dial-circuit
Config> net 6
Circuit configuration
Circuit config>
:
Here you would configure the dial circuit
:
Circuit config> exit
Config> protocol ip
IP>
:
Here you would configure the IP protocol on the dial circuit.
:
IP> exit
Config>
*console
+activate 6
```

The following example shows how to configure and activate a new ATM LAN Emulation Client on which the IP protocol is configured. The ATM LAN Emulation Client and IP configurations are not shown.

```
* configuration
Config> net 0
ATM User Configuration
ATM Config> le-client
ATM LAN Emulation Clients Configuration
LE Client config> add token-ring
Added Emulated LAN as interface 6
LE Client config> config 6
ATM LAN Emulation Client configuration
:
(Here you would configure the ATM LAN Emulation Client)
:
Token Ring Forum Compliant LEC Config> exit
LE Client config> exit
ATM Config> exit
Config> protocol ip
IP Config>
:
(Here you would configure IP on the ATM LAN Emulation Client)
:
IP Config> exit
Config> write
ctrl-p
* console
+ activate 6
Interface 6 activated successfully
```

## Restrictions for Spare Interfaces

The **activate** command cannot be used to activate a new interface on the network under the following conditions:

- You have already entered a **delete interface** command. The device must be restarted if **any** interface has been deleted. You cannot delete a spare interface (indicated by **null** in list displays).

## Using the CONFIG Process

- The spare interface is the only interface that enables a protocol or feature. The protocol or feature must already be enabled on an existing interface before it can be used by a spare interface.
- The new spare interface has a header size or trailer size greater than the sizes for other interfaces.
- There is not enough memory to allocate receive buffers for the new interface.

In these cases, you must restart the device to bring the new interface online.

You can configure the following interfaces as spare interfaces, but you cannot activate them on the network using the **activate** command:

- SDLC Relay
- PPP Multilink master and dedicated link nets

You must restart the device to bring these interfaces online.

You can configure the following protocols on spare interfaces, but you cannot activate them on the network using the **activate** command:

- LNM
- OSI/DECnet V
- XTP

**Note:** When using the configuration program, use the following to work with spare interfaces:

1. Make the configuration changes for the spare interface on the device
2. Enter the **activate** command on the device to bring the spare interface, protocols, and features online
3. Retrieve the configuration using the configuration program
4. Save the retrieved configuration into the configuration program database

There are requirements for certain functions. These are:

APPN	To activate this protocol on a spare interface, you must first activate the interface and then configure the protocol on the activated interface.
Bandwidth Reservation (BRS)	To configure BRS on a spare interface, you must enable BRS on each network interface where Frame Relay circuits will be active before activating the spare interface. After activating the spare interface, you can then use BRS configuration commands to make changes such as adding a traffic class or assigning a protocol to a traffic class.
DECnet IV	To activate this protocol on a spare interface, you must first activate the interface and then configure the protocol on the activated interface. Use the DECnet IV <b>set</b> command to activate the configuration changes.
Frame Relay	<ul style="list-style-type: none"><li>• You cannot activate an FR dial circuit interface unless the dial circuit's base net is already active.</li><li>• An activate for an FR dial circuit will fail if the frame size, MAC header, or trailer required by the spare interface is larger than other dial circuits already assigned to the base net.</li><li>• If data compression is not already active in the device, data compression will not work on a spare interface defined for data compression.</li></ul>
BGP	Use the BGP <b>reset neighbor</b> command to activate new neighbors.

## Using the CONFIG Process

IPX	Use the <b>reset</b> command to activate static routes, static services, and filter lists on the spare interface.
PPP	<ul style="list-style-type: none"><li>• If data compression is not already active in the device, data compression does not work on a spare interface defined for data compression.</li><li>• You cannot activate a spare PPP interface if the device's global buffer is too small to support a 1500-byte PPP MRU.</li><li>• You cannot activate a PPP dial circuit interface unless the dial circuit's base net is already active.</li><li>• An activate for a PPP dial circuit will fail if the frame size, MAC header, or trailer required by the spare interface is larger than other dial circuits already assigned to the base net.</li></ul>
Bridging	<ul style="list-style-type: none"><li>• Bridging was not already active.</li><li>• NetBIOS filters are defined on the spare interface.</li><li>• The spare interface caused a change to the bridge personality or behavior (for example, adding SR port to pure TB bridge).</li></ul>
IP	Use the reset IP command to bring configuration changes online for access-controls and packet-filters.
WAN Restoral/ WAN Reroute	<p>The spare interface cannot be activated if any of the following conditions exist:</p> <ul style="list-style-type: none"><li>• The spare interface is configured as a WRS primary, and its configured WRS secondary is already a WRS primary or WRR primary or WRR alternate.</li><li>• The spare interface is configured as a WRS primary, and its configured WRS secondary is already actively restoring some other WRS primary.</li><li>• The spare interface is configured as a WRS secondary, and its configured WRS primary is already a WRS secondary or WRR primary or WRR alternate.</li><li>• The spare interface is configured as a WRS secondary, and its configured WRS primary is already actively being restored by some other WRS secondary.</li><li>• The spare interface is configured as a WRR primary, and its configured WRR alternate is already a WRS primary or WRS secondary or WRR primary or WRR alternate.</li><li>• The spare interface is configured as a WRR alternate, and its configured WRR primary is already a WRS primary or WRS secondary or WRR alternate.</li><li>• The spare interface is configured as a WRR alternate, and its configured WRR primary is already actively being rerouted by some other WRR alternate.</li></ul>

## Resetting Interfaces

Occasionally, you might need to change the configuration of a network interface along with its bridging and routing protocols without restarting the device. The **reset** command allows you to disable a network interface and then enable it using new interface, bridging and routing configuration parameters.

The interface, protocols and features configuration parameters are changed using the CONFIG process (talk 6) commands. The talk 6 commands affect the contents of the configuration memory. The configuration changes are activated by issuing the GWCON process (talk 5) **reset** command.

## Using the CONFIG Process

To reset an interface:

1. Access the CONFIG process (talk 6).
2. Use the **net** command and other commands to change configuration parameters.
3. Use the **protocol** and **feature** commands to change the interface-based configuration parameters.
4. Exit the CONFIG process by pressing **Ctrl-P**.
5. Access the GWCON process (talk 5).
6. Use the **reset** command to reset the interface and the protocols and features on the interface.

### Example:

```
* configuration
Config>net 1
PPP Config>

. . . change PPP parameters . . .

PPP Config>exit
Config>protocol ipx
IPX Config>

. . . change IPX parameters on the PPP interface . . .

IPX Config>exit
Config>
*talk 5
+reset 1
Resetting net 1 PPP/0...successful
```

**Note:** When using the configuration program, do the following to make configuration changes to existing interfaces:

1. Make the configuration changes for the interface on the device
2. Enter the **reset** command to reset interface, protocol and feature parameters
3. Retrieve the configuration using the configuration program
4. Save the retrieved configuration into the configuration program database

## Restrictions for Resetting Interfaces

The **reset** command cannot be used to reset a network interface if:

- You have already entered a **delete interface** command. The device must be restarted if any interface has been deleted.
- You have changed the hardware or data link type. For example, changing the data link type from PPP to Frame Relay.
- You have configured a larger MTU.
- You have configured a routing protocol or bridging on the interface, but that routing protocol or bridging is not currently active in the device.

In these situations, you must restart or reload the device to activate the configuration changes.

You can change the configuration parameters of the following types of interfaces, but you cannot activate the changes using the **reset** command:

- ATM
- PPP Multilink master and dedicated link nets
- ISDN

- SDLC
- SDLC Relay
- V.25bis

You must restart or reload the device to activate the configuration changes.

You can change the configuration parameters of the following protocols and features, but you cannot activate the changes using the **reset** command:

- AppleTalk
- Vines
- OSI/DECnet V
- LNM
- XTP
- WAN Restoral
- WAN Reroute

You must restart or reload the device to activate the configuration changes.

There are also requirements for certain functions. They are:

PPP dial circuits	A PPP dial circuit cannot be reset if any of the dial circuit parameters have changed.
Frame Relay dial circuits	A Frame Relay dial circuit cannot be reset if any of the dial circuit parameters have changed.
Compression	Compression requires large header and trailer sizes. Unless compression is already enabled on some other interface, it is likely that the header and trailer sizes will be too small. In this case, compression is disabled automatically on the interface and an ELS message is logged (rather than causing the entire reset interface to fail).
Bridging	<ul style="list-style-type: none"><li>• Bridging was not already active.</li><li>• NetBIOS filters are defined on the interface you are resetting.</li><li>• The reset interface caused a change to the bridge personality or behavior (for example, adding SR port to pure TB bridge).</li></ul>
BGP	Use the BGP <b>reset neighbor</b> command to activate neighbor configuration changes.
APPN	Use the <b>activate_new_config</b> command to activate configuration changes.
IPX	Use the IPX <b>reset</b> command to activate configuration changes for static routes, static services, and filter-lists.
DNA IV	Use the DNA IV <b>set</b> command to activate configuration changes.
SNMP	Use the SNMP <b>revert</b> command to activate configuration changes.

### Entering and Exiting CONFIG

To enter the CONFIG process from OPCON and obtain the CONFIG prompt, enter the **configuration** command. Alternatively, you can enter the OPCON **talk** command and the PID for CONFIG. The PID for CONFIG is 6.

\* **configuration**

or

\* **talk 6**

The console displays the CONFIG prompt (Config>). If the prompt does not appear, press the **Enter** key again.

To exit CONFIG and return to the OPCON prompt (\*), enter the intercept character. (The default is **Ctrl-P**.)

### CONFIG Commands

This section describes each of the CONFIG commands. Each command includes a description, syntax requirements, and an example. The CONFIG commands are summarized in Table 4.

After accessing the CONFIG environment, enter the configuration commands at the Config> prompt.

Table 4. CONFIG Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Add	Adds an interface to the device configuration, or a user to the device.
Boot	Enters Boot CONFIG command mode.
Change	Changes a user's password or a user's parameter values associated with this interface. Also changes a slot/port of an interface.
Clear	Clears configuration information.
Delete	Deletes an interface from the router configuration or deletes a configured user.
Disable	Disables command completion, login from a remote console,
Enable	Enables command completion, login from a remote console,
Environment	Monitors the operational temperature of the device if it has two service ports.
Event	Enters the Event Logging System configuration environment.
Feature	Provides access to configuration commands for independent device features outside the usual protocol and network interface configuration processes.
List	Displays system parameters, hardware configuration, a complete user list (including PPP users).
Network	Enters the configuration environment of the specified network.
Patch	Modifies the device's global configuration.
Performance	Provides a snapshot of the main processor utilization statistics.
Protocol	Enters the command environment of the specified protocol.
Qconfig	Initiates the Quick Config process.
Set	Sets system-wide parameters for buffers, host name, inactivity timer, packet size, prompt level, number of spare interfaces, baud rate, logging disposition and level, restart count, location, and contact person.



Table 4. CONFIG Command Summary (continued)

Command	Function
Time	Keeps track of system time and displays it on the console.
Unpatch	Restores patch variables to default values.

## Add

Use the **add** command to add an interface to the configuration, or user-access. This command also recreates device records if the configuration is inadvertently lost.

### Syntax:

```

add                callback . . .
                    device
                    isdn-address . . .
                    ppp-user
                    tunnel-profile
                    user . . .
                    v25-bis-address
                    v34-address
    
```

### callback

Use the **add callback** command to add, delete, or list information for callback on ISDN.

- Add**            Adds a callback number to the authentication lists.
- Delete**        Deletes a callback number from the authentication list.
- Lists**          Displays the authentication list and other related information.

### device *device\_type*

The **add device** command is used to create virtual interfaces like dial circuit interfaces. You must enter the interface device type (*device\_type*) and you may be prompted for additional configuration parameters. See "Configuring the Network Interface" on page 17 for information about configuration parameters and supported device types.

If you enter **add device ?**, a list of supported device types is displayed.

All device and protocol configuration information related to network interfaces is stored by interface number. Any changes made to interface numbers will invalidate much of the device configuration information in the protocols.

```

Config> add device dial-circuit
Adding device as interface 8
Defaulting Data-link protocol to PPP
Use "set data-link" command to change the data-link protocol
Use "net 8" command to configure circuit parameters
    
```

### isdn-address *address-name network-dial-address network-subdial-address*

Adds the local and remote numbers of the ISDN end-points that will be communicating with your router.

#### address-name

Can be anything (such as a description of the port).

## CONFIG Commands

### network-dial-address

The telephone number of the local or the destination port.

### network-subdial-address

The additional part of the telephone number, such as an extension, that gets interpreted when the interface connects to a PBX; this parameter is optional.

**Note:** You can use punctuation, such as parentheses and dashes, but the punctuation is not significant (the router uses only the numbers).

```
Example: add isdn-address line 1 local
Assign network dial address [0 - 32 digits]? 1 2345 67
Assign network subdial address [0 - 19 digits]? 98765
```

### ppp-user

Adds the user profile of a remote user to the local PPP user data base. You can add up to 500 users. You add a PPP user for each remote router or DIALs client that can connect to the device you are configuring. You must configure PPP users if either of the following conditions exist:

- You are using PPP authentication protocols, PPP encryption, the Dial-In Access to LANs (DIALs) feature, or allowing users to use the dial-out feature. You need to configure a PPP user for either type of encryption - Encryption Control Protocol (ECP) or Microsoft Point-to-Point Encryption (MPPE); however, MPPE does not require the encryption key.
- You want the PPP user data base to be locally stored and managed by the device. If you want PPP user information to be obtained from a RADIUS, TACACS, or TACACS+ server, then you should configure the Authentication feature instead of configuring local PPP users.

**Note:** MPPE cannot use the RADIUS, TACACS, or TACACS+ server. For MPPE, the PPP user data base must be local.

If ECP has been enabled for the user, you are prompted for the PPP user name, password, IP address, and encryption key .

If the DIALs feature is in the software load, you are asked if this is a DIALs user.

If you are adding a user for a DIALs client, then you are prompted for the hostname, type of route, network mask, connect time, call-back information, and dial-out capability.

See “Using a Dial-In Access to LANs (DIALs) Server” in the *Using and Configuring Features* for more information.

A user profile stored locally on the device consists of the following:

**Name** The userid of the PPP user, used during authentication. See “PPP Authentication Protocols” on page 473.

#### Password

The password known to the user and the device, used during authentication. It can be up to 31 characters in length, consist of any alphanumeric character, and is case sensitive. See “PPP Authentication Protocols” on page 473 for more information.

#### Enter again to verify

Enter the password again for verification.

### **Allow inbound access**

Allows inbound access to this user profile.

**Valid values:** yes, no

**Default value:** no

### **Will user be tunneled?**

Specifies whether this dial-in user should be tunneled to an LNS destination. If you enter “yes”, you are prompted for information about the LNS.

**Valid values:** yes, no

**Default value:** no

### **Number of days before account expiry**

The number of days before the account expires.

**Valid values:** 0 to 360

**Default value:** 180

### **Number of grace logins allowed**

The number of login attempts allowed after the password expires.

**Valid values:** 0 to 100

**Default value:** 0

### **Hostname to use when connecting to this peer:**

Specifies the local hostname of this LAC that is passed as identification to the LNS during tunnel setup.

### **Tunnel Server endpoint:**

Specifies the IP address of the LNS to which this user is tunneled.

### **Type of Route**

Either “Host Route” or “Net Route.”

A host route is generally applied for single-user access. A net route is generally applied to a network access. A net route allows you to enter a net mask.

### **IP Address**

IP address to be assigned to a user.

A user profile-based IP address to offer to a dial-in client if requested. There are a number of ways for a 2210 to obtain an IP address for a dial-in client. See “IP Control Protocol” on page 480 for more information.

**Valid values:** any valid IP address

**Default value:** none

### **Net-Route Mask**

Mask for a network user.

If the dial-in user is connecting to a DIALs-enabled PPP interface, the router automatically adds a temporary static route to that client for the duration of the PPP session. Typically, this static route has a net mask of 255.255.255.255 (the default value), which implies that there is a single IP host at the other end of the PPP link. However, the net mask can be overridden. If configured, this mask is used when adding the temporary route. An example of this is a small

## CONFIG Commands

router with a single network of hosts that dials into a DIALs-enabled router. The single route to the small office router will be installed automatically based on the user profile, making it unnecessary to configure routing protocols between the two hosts and cutting down on routing traffic overhead over a potentially slow link.

### Hostname

Hostname to be sent to the Proxy DHCP server for use by Dynamic DNS. See “Using a Dial-In Access to LANs (DIALs) Server” in *Using and Configuring Features* for more information.

### Time-Allotted

The length of time a DIALs user can be connected. This is the total for this session, and should not be confused with an inactivity timer.

**Valid Values:** 0 to 71 827 788 minutes (0=unlimited)

**Default Value:** 0

### Callback type

Call-back method, either “Roaming” or “Required.” The call-back parameters are used to specify whether the router will call back the user and what number to call back. See “Configuring PPP Callback” on page 477 for additional information.

### Dial-Out

Enables dial-out.

This parameter is specific to clients using the DIALs dial-out client. Enabling dial-out for a ppp-user allows this user to access a modem-pool of dial-out circuits. See “Using a Dial-In Access to LANs (DIALs) Server” in *Using and Configuring Features* for more information.

### Set encryption key

Specifies whether ECP encryption is to be enabled for this user/port.

**Valid values:** yes, no

**Default value:** no

### ECP encryption key

Enter 16-character ECP encryption key.

This parameter is displayed only if PPP Encryption Control Protocol (ECP) has been enabled using the talk 6 PPP Config> **enable ecp** command. MPPE does not require an encryption key. This ECP encryption key is used by the PPP Encryption Control Protocol (ECP). See “Using and Configuring Encryption Protocols” in *Using and Configuring Features*.

### Disable user

Allows you to disable a user-profile.

**Valid values:** yes, no

**Default value:** no

### Example:

```
Config> add ppp-user
Enter name: [ ]? pppusr01
Password:
Enter again to verify:
Allow inbound access for user? (Yes, No): [yes]
```

```

Will user be tunneled? (Yes, No): [No]
Number of days before account expiry[0-1000] [0]? 10
Number of grace logins allowed after an expiry[0-100] [0]? 5
IP address: [0.0.0.0]? 1.1.1.1
Set ECP encryption key for this user? (Yes, No): [No] no
Disable user ? (Yes, No): [No]

```

```

    PPP user name: pppusr01
    User IP address: 1.1.1.1
    Virtual Conn: disabled
    Encryption: disabled
    Status: enabled
    Login Attempts: 0
    Login Failures: 0
    Lockout Attempts: 0
    Account expires: Sun 17Feb2036 06:28:16
    Account duration: 10 days 00.00.00
    Password Expiry: <unlimited>

```

User 'pppusr01' has been added

### Example:

```

Config> add ppp-user
Enter name: [ ]? tunusr01
Password:
Enter again to verify:
Allow inbound access for user? (Yes, No): [Yes]
Will user be tunneled? (Yes, No): [No] yes
Enter hostname to use when connection to this peer: []? host01
Tunnel-Server endpoint address: [0.0.0.0]? 1.1.1.1

```

```

--more--          PPP user name: tunusr01
--more--          Endpoint: 1.1.1.1
--more--          Hostname: host01

```

User 'tunusr01' has been added

### Example with ECP encryption:

```

Config>add ppp-user
Enter name: [ ]? ppp_user2
Password:
Enter again to verify:
Allow inbound access for user? (Yes, No): [Yes]
Will user be tunneled? (Yes, No): [No]
Is this a 'DIALS' user? (Yes, No): [Yes]
Type of route? (hostroute, netroute): [hostroute]
Number of days before account expiry[0-1000] [0]?
Number of grace logins allowed after an expiry[0-100] [0]?
IP address: [11.0.0.185]?
Allow virtual connections? (Yes, No): [No]
Give user default time allotted ? (Yes, No): [Yes]
Enable callback for user? (Yes, No): [No]
Will user be able to dial-out ? (Yes, No): [No]
Set ECP encryption key for this user? (Yes, No): [No] y
Encryption key should be 16 characters long.
Encryption Key (16 characters ) in Hex(0-9, a-f, A-F):
Encryption Key again (16 characters) in Hex(0-9, a-f, A-F):
ECP encryption key is set.
Disable user ? (Yes, No): [No]

```

```

    PPP user name: ppp_user2
    User IP address: 11.0.0.185
    Netroute Mask: 255.255.255.255
    Hostname:          Virtual Conn: disabled
    Time allotted: Box Default
    Callback type: disabled
    Dial-out: disabled
    Encryption: enabled
    Status: enabled
    Login Attempts: 0
    Login Failures: 0
    Lockout Attempts: 0
    Account Expiry:    Password Expiry:
Is information correct? (Yes, No, Quit): [Yes]

```

User 'ppp\_user1' has been added

## CONFIG Commands

### **tunnel** *tunnel-name*

Gives a tunnel peer access through an IP network to the router. The peer is then authorized to initiate tunneled PPP sessions into the router. To configure a tunnel you must specify:

**Name** The hostname of the tunnel peer.

#### **Hostname to use when connecting to this peer**

The local hostname to use when connecting to this peer. This name is used for identification of the host on the peer.

#### **Set shared secret**

Specifies whether a shared secret is to be used.

#### **Shared Secret**

The secret shared between the LAC and LNS. It must be exactly the same on both ends of the tunnel.

#### **Enter again to verify**

Enter the shared secret again for verification.

#### **Tunnel-Server endpoint address**

The IP address of the tunnel peer (LAC or LNS).

#### **Example:**

```
Config> add tunnel
Enter name: []? tunnel02
Enter hostname to use when connecting to this peer: []? host02
Set shared secret? (Yes, No): [No]? yes
Shared secret for tunnel authentication:
Enter again to verify:
Tunnel-Server endpoint address: [0.0.0.0]? 2.2.2.22
```

```
Tunnel name: tunnel02
Endpoint: 2.2.2.22
```

### **user** *user\_name*

Gives a user access to the device. You can authorize up to 50 users to access the device. Each *user\_name* is eight characters and is case-sensitive.

When the first user is added, console login is automatically enabled. Each user added must be assigned one of the permission levels defined in Table 5.

When users are added, set login authentication to local. Otherwise a remote server must be used.

Table 5. Access Permission

Permission Level	Description
Administrator (A)	Displays configuration and user information, adds/modifies/deletes configuration and user information. The Administrator can access any router function.
Operator (O)	Views router configuration, views statistics, runs potentially disruptive tests, dynamically changes router operation, and restarts the router. Operators cannot modify the permanent router configuration. All actions can be undone with a system restart.
Monitor (M)	Views router configuration and statistics but cannot modify or disrupt the operation of the router.

Table 5. Access Permission (continued)

Permission Level	Description
Tech Support	Allows your service representative to gain access to the router if a password is forgotten. Cannot be assigned to users.

**Note:** To add a user, you must have administrative permission. You do not have to reinitialize the router after adding a user.

**Example:**

```
add user John
Enter password:
Enter password again:
Enter permission (A)admin, (O)perations, (M)onitor [A]?
Do you want to add Technical Support access? (Yes or [No]):
```

**Enter password**

Specifies the access password for the user. Limited to 80 alphanumeric characters and is case-sensitive.

**Enter password again**

Confirms the access password for the user.

**Enter permission**

Specifies the permission level for the user: A, O, or M (see Table 5 on page 60).

**Do you want to add Technical Support access?**

This is only an option if the user has a Dial In Access load. See Table 5 on page 60.

**v25-bis-address**

Adds the local and remote numbers of the V.25bis end-points that communicate with the router. The network *address-name* can be anything, such as a description of the port. You can use any string of up to 23 printable ASCII characters. The *network-dial-address* is the telephone number of the local or destination port. For more information, see “Chapter 39. Using the V.25bis Network Interface” on page 607.

**Note:** You can use punctuation, such as parentheses and dashes, but the punctuation is not significant (the router uses only the numbers).

```
Example: add v25-bis-address
remote-site baltimore 1-909-555-0983
```

**v34-address**

Adds the local and remote numbers of the V34 end-points that will be communicating with the router. The network *address-name* can be anything, such as a description of the port. You can use any string of up to 23 printable ASCII characters. The *network-dial-address* is the telephone number of the local or destination port. You can enter up to 31 characters that are in the valid dial characters for the connected modem. For more information, see “Chapter 41. Using the V.34 Network Interface” on page 623.

**Note:** You can use punctuation, such as parentheses and dashes, but the punctuation is not significant (the router uses only the numbers).

**Example: add v34-address**

```
Assign address name [1-23] chars []? remote-site-baltimore
Assign network dial address [1-20 digits] []? 1-909-555-1234
```

## CONFIG Commands

### Boot

Use the **boot** command to enter the Boot CONFIG command environment. For Boot CONFIG information, see “Chapter 5. The Boot CONFIG Process” on page 87.

#### Syntax:

boot

### Change

Use the **change** command to modify an interface in the configuration, change your own password, or change user information.

#### Syntax:

```
change                               device . . .  
                                       password  
                                       ppp_user . . .  
                                       tunnel-profile
```

#### **device dial-circuit**

Allows you to change a device interface into a *NULL* interface (an interface for which the configuration information is ignored) or to change a NULL interface, that was originally a dial circuit interface, back to a dial circuit interface.

#### **Example:**

```
change device dial-circuit  
Interface number [0]? 3  
Defaulting Data-link protocol to PPP
```

#### **Example:**

```
change device null  
Interface number [0]? 1
```

#### **password**

Modifies the password of the user who is now logged in.

**Note:** To change a user password, you must have administrative permission.

#### **Example:**

```
change password  
Enter current password:  
Enter new password:  
Enter new password again:
```

#### **Enter current password**

Specifies your current password.

#### **Enter new password**

Specifies your new password.

#### **Enter new password again**

Specifies your new password again for confirmation. If your confirmation does not match the previous new password, the old password remains in effect.



**ppp\_user**

Changes the information for a specific PPP user.

**Syntax:**

```
change ppp_user           encryption-key
                           parameters
                           password
```

**encryption-key**

Changes the encryption key for a PPP user. The following example shows the dialog for changing an encryption key.

**Example - Change Encryption key:**

```
Config>change ppp_user encryption-key
Enter user name: [ ]? leslie
Enable encryption for this user/port (y/n) [No]:y
Encryption key should be 16 characters long.
Encryption Key (16 characters ) in Hex(0-9, a-f, A-F):
Encryption Key again (16 characters) in Hex(0-9, a-f, A-F):
User 'leslie' has been updated
Config>
```

**parameters**

Changes all of the ppp-user options for a user. This parameter works similar to the **add ppp\_user** except that the values shown within the [ ] are the current values and the change command does not verify the changes or list them back to you when you are done. See “Add” on page 55 for details about the **add ppp\_user** command.

**password**

Changes the password for the PPP user.

**Example - Change password:**

```
Config>change ppp_user password
Enter user name: [ ]? sam
Password:
Enter password again:
User 'sam' has been updated
Config>
```

**user** Modifies the user information that was previously configured with the **add user** command.

**Note:** To change a user, you must have administrative permission.

**Example:**

```
change user
User name: [ ]
Change password? (Yes or No)
Change permission? (Yes or [No])
```

**tunnel-profile**

Changes the configuration for a tunnel peer.

```
Config>change tunnel-profile
Enter name: [ ]? lac.org
Enter hostname to use when connecting to this peer: [lns.org]?
set shared secret? (Yes, No): [No]
Tunnel-Server endpoint address: [11.0.0.1]? 11.0.0.2

profile 'lac.org' has been updated
Config>
```



named-profiles  
nat  
ndp6  
ndr  
osi (OSI)  
ospf (OSPF routing protocol)  
ppp (Point-to-Point)  
prompt  
rip6  
rsvp  
sdlc  
snmp  
srly (SDLC Relay)  
tcp/ip-host  
time (Time of day information)  
user  
v25bis  
v34  
vines (Banyan VINES)  
wrs (WAN Restoral feature)  
x25  
xtp

To clear a process from nonvolatile configuration memory, enter the **clear** command and the process name. To clear all information from configuration memory, except for device information, use the **clear all** command. To clear all information, including the device information, use the **clear all** command and then the **clear device** command.

The **clear user** command clears all user information except the device console login information. This is left as enabled (if it was configured as enabled) even though the default value is “disabled”.

### Notes:

1. To clear user information, you must have administrative permission.
2. There may be other items in the list, depending upon what is included in the software load.

### Example: clear els

```
You are about to clear all Event Logging configuration information
Are you sure you want to do this (Yes or No):
```

**Note:** The previous message appears for any parameter configuration you are clearing.

## CONFIG Commands

### Delete

Use the **delete** command to remove an interface or range of interfaces from the list of devices stored in the configuration, or to remove a user. To use the **delete** command, you must have administrative permission.

#### Syntax:

```
delete                coprocessor . . .  
                        interface . . .  
                        isdn-address  
                        ppp_user . . .  
                        tunnel  
                        user . . .  
                        v25-bis-address  
                        v34-address
```

#### **interface** [*intfc#* or *intfc#range*]

To delete an interface, enter the interface or network number as part of the command. (Only devices that were added with the **add device** command can be deleted.) To obtain the interface number that the device assigns, use the **list device** command.

The delete interface command deletes the device configuration and any protocol information for that interface. However, the device will continue to run the previous configuration until it is restarted.

To delete a range of interfaces, specify the first and last interface in the range separated by a hyphen, as shown in the following example:

```
delete interface 13-21
```

You can also enter an interface number or range of interface numbers, when prompted.

#### **interface** [*intfc#* or *intfc#range*]

To delete an interface, enter the interface or network number as part of the command. (Only devices that were added with the **add device** command can be deleted.) To obtain the interface number that the device assigns, use the **list device** command.

The delete interface command deletes the device configuration and any protocol information for that interface. However, the device will continue to run the previous configuration until it is restarted.

To delete a range of interfaces, specify the first and last interface in the range separated by a hyphen, as shown in the following example:

```
delete interface 13-21
```

You can also enter an interface number or range of interface numbers, when prompted.

#### **isdn-address** *address-name*

Removes a previously added ISDN address.

**Note:** If the *address-name* contains spaces (for example, **remote site XYZ**), you cannot enter the command on one line. Type `delete isdn-address` and press **Return**. Then enter the name when prompted.

**ppp\_user** *user\_name*

Deletes a user from the PPP user data base.

**tunnel-profile**

Deletes a tunnel from the tunnel profile database.

**user** *user\_name*

Removes user access to the device for the specified user.

**v25-bis-address** *address-name*

Removes a previously added V25bis address.

**Note:** If the *address-name* contains spaces (for example, **remote site Baltimore**), you cannot enter the command on one line. Type `delete v25-bis-address` and press **Return**. Then enter the name when prompted.

**v34-address** *address-name*

Removes a previously added V34 address.

**Note:** If the *address-name* contains spaces (for example, **remote site New York**), you cannot enter the command on one line. Type `delete v34-address` and press **Return**. Then enter the name when prompted.

## Disable

Use the **disable** command to disable command completion, login from a remote console,

**Syntax:**

```

disable                command-completion
                          console-login
                          interface . . .
                          modem-control

```

**command-completion**

Use the **disable command-completion** command to disable the automatic command completion function. See “Command Completion” on page 21 for a discussion of the automatic command completion function.

**Note:** Command completion defaults to *disabled* for existing configurations and defaults to *enabled* for new configurations. If you are using an existing configuration and want to use command completion, you need to use the **enable command-completion** command to enable this function.

**console-login**

Disables the user from being prompted for a user ID and password on the physical console. The default is disabled.

## CONFIG Commands

### **interface** *interface#*

Causes the specified interface to be disabled after issuing the **restart** or **reload** command. The default is enabled.

### **modem-control** [**service1** or **service2**]

Disables monitoring of modem control lines on the console port. The default is disable. If the device has two service ports, specify to which service port you connected the modem, either **service1** or **service2**. To disable *both* service ports, disable them separately.

## Enable

Use the **enable** command to enable command completion, login from a remote console,

Specify **enable modem-control carrier-wait** or **enable modem-control ring-wait**. For devices with two service ports, also specify **service1** or **service2**.

### **Syntax:**

```
enable                command-completion  
                     console-login  
                     interface . . .  
                     modem-control
```

### **command-completion**

Use the **enable command-completion** command to enable the automatic command completion function, which assists with the command syntax. See “Command Completion” on page 21 for a discussion of the automatic command completion function.

### **console-login**

Enables the user to be prompted for a user ID and password on the physical console. This is useful for security situations. If you do not configure any administrative users and you enable this feature, the following message appears:

```
Warning: Console login is disabled until an  
administrative user is added.
```

**Attention:** Before enabling console login, save the configuration with console login disabled. If login authentication is set to a remote server using Radius or Tacacs+ and the device is unable to reach the authentication server, then access to the device is denied. By disabling the console login, a lock-out situation is prevented.

### **interface** *interface#*

Causes the interface to be enabled after issuing the **restart** command.

### **modem-control** [**carrier-wait** or **ring-wait**] [**service1** or **service2**]

Sets up the device for login on the physical console, if the physical console is connected to the device through a modem. Before using this command, be sure to:

Set your modem for auto-answer.

Verify that the console baud rate is equal to the modem baud rate.

## CONFIG Commands

Verify that the cable connecting the modem to the device is configured correctly.

Turn echo off by using the ATE0 command.

Run in quiet mode by using the ATQ1 command.

Verify that any necessary jumpers are set. Refer to your device's *User's Guide* more information. The device automatically hangs up the modem when you log out. Also, if your modem becomes disconnected from the device while you are using it, the device logs you out.

Specify the service port for both the **enable modem-control carrier-wait** and the **enable modem-control ring-wait** commands. For devices with two service ports, also specify to which service port you connected the modem, either **service1** or **service2**. To enable *both* service ports, enable them separately.

**Note:** No console connection can be made with the device after enabling modem control unless you clear all configuration and restart the device.

You can tell the device to wait for the carrier-detect signal from the modem before sending Request to Send. This is the standard method of modem control.

You can tell the device to wait for the ring-indication signal before raising Request to Send or Data Terminal Ready. This is provided for countries requiring an earlier handshake.

### Example:

```
Config> enable modem-control carrier-wait service1
```

## Environment

**Note:** This command is to be invoked *only* for routers with two service ports.

The Environment System lets you monitor the operational temperature of the router. You can configure high and low temperature thresholds; when the operational temperature of the router exceeds one of these thresholds, the router emits periodic ELS events until the operational temperature of the router falls below (for high temperature conditions) or rises above (for low temperature conditions) the threshold.

Under extremely warm conditions, a chip holds the router in a reset state which prevents it from operating. To ensure correct operation of the router, a temperature chip allows it to operate in the range  $-55^{\circ}\text{C}$  to  $+85^{\circ}\text{C}$  ( $-67^{\circ}\text{F}$  to  $+185^{\circ}\text{F}$ ). However, only the upper limit affects the operation of the router; a temperature chip shuts off the router at  $85^{\circ}\text{C}$  or above and the router does not come back on until it is at  $80^{\circ}\text{C}$  or below. Although extreme cold does not interrupt the router's operation,  $-55^{\circ}\text{C}$  is the lowest temperature the chip registers.

The **environment** command displays the ENV config> prompt.

### Syntax:

environment

## CONFIG Commands

### Environment Commands

Table 6. Environment Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
List	Displays system parameters, hardware configuration, a complete user list (including PPP users).
Set	Sets system-wide parameters for buffers, host name, inactivity timer, packet size, prompt level, number of spare interfaces, baud rate, logging disposition and level, restart count, location, and contact person.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

**List:** Use the **list** command to display the environment settings.

#### Syntax:

**list**

#### Example: **list**

```
Current Ambient Temperature: 53C (127F)
Recalculate temperature interval: 30 seconds (approx)
High Temperature Alarm Threshold: 80C (176F)
Low Temperature Alarm Threshold: 0C (32F)
(Hysteresis value: +/- 5C)
```

*Hysteresis* is the amount the temperature must change past the set alert threshold before the alert condition is cleared. For a device with two service ports, hysteresis value is fixed at  $\pm 5$  degrees. For example, if you specify a high-temp-threshold of 75°C, you will get ELS messages from 75 degrees and above. The temperature must go below 70 degrees before the condition is cleared ( $75 - 5 = 70$ ). If you specify a low-temp-threshold of -10°C, you will get ELS messages from -10 degrees and below. The temperature must move above -5 degrees before you no longer get ELS messages ( $-10 + 5 = -5$ ).

**Set:** Use the **set** command to set the high and low temperatures at which the system raises an alarm condition.

**Note:** The reset temperature level is factory set. You cannot modify it.

#### Syntax:

```
set high-temp-threshold
      low-temp-threshold
      recalc-temp-interval
```

#### **high-temp-threshold** *degrees\_celcius*

Sets the high temperature at which you will receive ELS messages before the router resets. The value should be about 10°C less than the maximum (85°C) so that you get some ELS messages before the router resets itself.

#### **low-temp-threshold** *degrees\_celcius*

Sets the low temperature at which you will receive ELS messages. The



value should be about 10°C more than the minimum (–55°C) so that you get some ELS messages. The router does not reset itself on cold temperatures.

**Note:** Temperature ranges vary depending on the environment in which you place the router. Use the **environment** command described on page 69 to determine your router’s natural operating range over time.

**recalc-temp-interval** *seconds*

Sets the amount of time between successive temperature readings.

**Valid values:** 10 to 86400 seconds

**Default value:** 60

## Event

Use the **event** command to enter the Event Logging System (ELS) environment so that you can define the messages that will appear on the console. Refer to “Chapter 10. Using the Event Logging System (ELS)” on page 151 for information about ELS.

**Syntax:**

event

## Feature

Use the **feature** command to access configuration commands for specific device features outside of the protocol and network interface configuration processes.

**Syntax:**

feature [feature# or feature-short-name]

All 2210 features have commands that are executed by:

- Accessing the configuration process to initially configure and enable the feature, as well as perform later configuration changes.
- Accessing the console process to monitor information about each feature, or make temporary configuration changes.

The procedure for accessing these processes is the same for all features. The following information describes the procedure.

Enter a question mark after the **feature** command to obtain a listing of the features available for your software release.

To access a feature’s configuration prompt, enter the **feature** command followed by the feature number or short name. Table 7 lists available feature numbers and names.

Table 7. IBM 2210 Feature Numbers and Names

Feature Number	Feature Short Name	Accesses the following feature configuration process
0	WRS	WAN Restoral/Reroute
1	BRS	Bandwidth Reservation

## CONFIG Commands

Table 7. IBM 2210 Feature Numbers and Names (continued)

Feature Number	Feature Short Name	Accesses the following feature configuration process
4	VCRM	Virtual Circuit and Resource Management
7	ES	Encoding Subsystem
9	DIALs	Dial-In-Access to LANs
10	AUTH	Authentication
12	LAYER	Layer 2 Tunneling Protocol, Layer 2 Filtering, Point-to-Point Tunneling Protocol
16	DHCP	DHCP Services
20	POLICY	Policy feature
21	DS	Differentiated services

Once you access the configuration prompt for a feature, you can begin entering specific configuration commands for the feature. To return to the CONFIG prompt, enter the **exit** command at the feature's configuration prompt.

## List

Use the **list** command to display configuration information for all network interfaces, or configuration information for the device.

### Syntax:

```
list                configuration  
                    devices  
                    named-profile  
                    isdn-address  
                    patches . . .  
                    ppp_users . . .  
                    tunnel-profile  
                    users . . .  
                    v25-bis-address  
                    v34-address
```

### configuration

Displays configuration information about the device.

#### Example: list configuration

```
Hostname: acctg  
Maximum packet size: [autoconfigured]  
Maximum number of global buffers: [autoconfigured]  
Number of spare interfaces: 0  
Number of Restarts before a Reload/Dump: 64  
Logging disposition: detached  
Console baudrate: 9600 (Autobaud)  
Console inactivity timer (minutes): 0  
Physical console login: disabled  
Modem Control Enabled, using CARRIER-WAIT type control  
Contact person for this node: [none]  
Location of this node: [none]  
  
Configurable Protocols:  
Num Name Protocol  
0 IP DOD-IP
```

```

3  ARP  Address Resolution
4  DN   DNA Phase IV
6  VIN  Banyan VINES
7  IPX  NetWare IPX
8  OSI  ISO CLNP/ISIS/ISIS
9  DVM  Distance Vector Multicast Routing Protocol
10 BGP  Border Gateway Protocol
11 SNMP Simple Network Management Protocol
12 OSPF Open SPF-Based Routing Protocol
20 SDLC SDLC/HDLC-Relay
22 AP2  AppleTalk Phase 2
23 ASRT Adaptive Source Routing Transparent Enhanced Bridge
24 HST  TCP/IP Host Services
25 LNM  Lan Network Manager
26 DLS  Data Link Switching
27 XTP  X.25 Transport Protocol
28 APPN Advanced Peer-to-Peer Networking [HPR]
29 NHRP Next Hop Routing Protocol
30 APPN Advanced Peer-to-Peer Networking [ISR]

```

Configurable Features:

```

Num Name  Feature
0  WRS    WAN Restoral
1  BRS    Bandwidth Reservation
2  MCF    MAC Filtering
6  QoS    Quality of Service
7  CMPRS  Data Compression Subsystem
8  NDR    Network Dispatching Router
10 AUTH  Authentication
12 LAYER L2TP

```

27616 bytes of configuration memory free

### devices [*device or devicerange*]

Displays the relationship between an interface number and the hardware interface. You can also use this command to check that a device was added correctly issuing the **add** command.

You can also specify a range of devices to list as shown in the following example:

```

list dev 2-5
Ifc 2 WAN X.25                CSR 81640, CSR2 80E00, vector
92
Ifc 3 WAN PPP                 CSR 381620, CSR2 380D00, vector 125
Ifc 4 WAN Frame Relay        CSR 381640, CSR2 380E00, vector 124
Ifc 5 Token Ring             CSR 600000, vector 95

```

**Note:** If you do not specify an interface number or a range of interfaces, all interfaces are displayed.

#### Example: list devices

```

Ifc 0 Ethernet                CSR 81600, CSR2 80C00, vector 94
Ifc 1 WAN X.25                CSR 81620, CSR2 80D00, vector 93
Ifc 2 WAN X.25                CSR 81640, CSR2 80E00, vector 92
Ifc 3 WAN PPP                 CSR 381620, CSR2 380D00, vector 125
Ifc 4 WAN Frame Relay        CSR 381640, CSR2 380E00, vector 124
Ifc 5 Token Ring             CSR 600000, vector 95

```

**Note:** The number of receive buffers noted are exceptions from the receive buffer defaults. The **set receive buffers** command is discussed under "Set" on page 79.

### isdn-address

Displays the current ISDN address configurations.

```

Example: list isdn-address
Address assigned name      Network Address      Network Subdial Address
-----
remote site XYZ           1 2345 67           98765

```

### patches

Displays the values of patch variables that have been entered using the **patch** command.

**Example:**

## CONFIG Commands

<b>list patches</b>	
Patched variable	Value
ping-size	60
ping-ttl	59
ethernet-security	3

### ppp\_users

Lists specific PPP user profile parameters.

**Example:** List of PPP users when DIALS is not in the software load

```
Config> list ppp_users
List (Name, Verb, User, Addr, Encr):

    PPP User Name: joe
    User IP Address: Interface Default
    Encryption: Not Enabled
```

**Example:** List of PPP users when DIALS is in the software load

```
Config> list ppp_users
List (Name, Verb, User, Addr, Call, Time, Dial, Encr):

    PPP User Name: joe
    User IP Address: Interface Default
    Net-Route Mask: 255.255.255.255
    Hostname: <undefined>
    Time-Allotted: Box Default
    Call-Back Type: Not Enabled
    Dial-Out: Not Enabled
    Encryption: Not Enabled
```

When you enter **list ppp\_users**, the software will prompt you to enter one of the following:

**Name** List all of the names in the database.

**Verb** List verbose information about each user. List all information pertaining to each user profile.

**User** List verbose information about a single user.

**Addr (address)**

List IP address information for each user, including IP Address, net mask and hostname.

**Call (callback)**

List callback information for each user, including the type of callback and number.

**Time** List time allowed configured for each user.

**Dial (dialback)**

List dial out status for each user.

**Encr (encryption)**

List whether encryption is enabled for each user.

### tunnel-profile

Displays the tunnel-profile parameters.

**Example:**

```
Config>list tunnel-profile

Endpoint Tunnel name Hostname
11.0.0.192 lac lns

1 TUNNEL record displayed.

Config>
```

**Tunnel Name**

Specifies the configured name for the peer.

**Server Endpoint**

The IP address of the peer.

**Type** Specifies the type of peer connection.

**Medium**

Specifies the protocol that the tunnel is using.

**Local Host Name**

Specifies the name configured for use when connecting to the peer.

**users** Displays the users configured to access the system.

**Example:**

```
list users
USER          PERMISSION
joe           operations
mary          administrative
peter         monitor
```

**v25-bis-address**

Displays the current V25bis address configurations. The V25bis address configuration consists of the network address and network address name for a local port (serial line interface) or destination port. The network address is the telephone number of the local or destination port. The network address name can be anything, such as the description of the port. See "Chapter 39. Using the V.25bis Network Interface" on page 607 for more information.

```
Example:
list v25-bis-address
Address assigned name      Network Address
-----
v25-1                      8982800
v25-2                      8980001
delaware                   1-666-555-4444
```

**v34-address**

Displays the current V34 address configurations. For more information, see "Chapter 41. Using the V.34 Network Interface" on page 623.

```
Example:
list v34-address
Local Network Address Name = v403
Local Network Address      = 1-508-898-2403
```

## Network

Use the **network** command to enter the network interface configuration environment for supported networks. Enter the interface or network number as part of the command. (To obtain the interface number, use the CONFIG **list device** command.) The appropriate configuration prompt (for example, TKR Config>) will be displayed. See the network interface configuration chapters in this book for complete information on configuring your types of network interfaces.

**Syntax:**

**network** *interface#*

**Notes:**

1. If you change a user-configurable parameter, you may use the GWCON **reset interface** command, or you may **restart**
2. Not all network interfaces are user-configurable. For interfaces that you cannot configure, you receive the message: That network is not configurable.



## CONFIG Commands

**Note:** It is preferable to set this parameter with the **set ttl** IP configuration command. (See the “Set” section of the “Using and Configuring IP” chapter of *Protocol Configuration and Monitoring Reference Volume 1* .) This patch variable remains for compatibility with configurations from older releases.

### **ip-mtu** *bytes*

This parameter limits the IP MTU size to the specified value. When this parameter is set, the IP MTU size on a given network interface is set to the lesser of the ip-mtu value and the largest value that network interface’s configured frame size can accommodate.

### **Inm-link-via-tbport** *new value*

Allows LNM to link to a token-ring over an Ethernet transparent bridge (TB) port.

When set to 1, the LNM link is allowed.

When set to 0, the default, the LNM link is not allowed.

### **more-lines** *#\_of\_lines*

The number of lines to display on the console when listing long output.

### **mosheap-lowmark** *new value*

This parameter specifies the percentage of free MOS heap memory, at which the device notifies the operator that an out-of-memory error is imminent. This notification allows the operator to take action to free up MOS heap memory before the device receives an error and stops.

When the operator receives notification, the operator can reconfigure the device and then reboot, minimizing the outage to the network. Specifying 0 for this parameter suppresses this warning.

**Valid Values:** 0 to 100

**Default Value:** 10

### **ospf-import-rate** *rate*

Number of routes imported per second.

### **ping-size** *bytes*

The size of the data portion (that is, excluding IP and ICMP headers) of the ICMP PING packet that is sent via the IP>**ping** command. Default: 56 bytes. (The size of the PING data can also be entered as a parameter of the **ping** command as described in the “Ping” section of the “Monitoring IP” chapter of *Protocol Configuration and Monitoring Reference Volume 1* .)

### **ping-ttl** *seconds*

The TTL (time-to-live) sent in PINGs by the IP>**ping** command. Default: 64. (The TTL can also be entered as a parameter of the **ping** command as described in the “Ping” section of the “Monitoring IP” chapter of *Protocol Configuration and Monitoring Reference Volume 1* .)

### **ppp-echo** *new value*

When set to 1, the device will not send PPP Echo Requests on any PPP interface. PPP Echo Requests are sent to remote devices as part of PPP maintenance to ensure the remote device is operational. Consider enabling this variable when running PPP on a slow line and using that line to transmit large data packets such that the PPP maintenance packets are not exchanged often enough to keep the PPP interface up.

### **relax-jate**

Relaxes JATE ISDN restriction.

## CONFIG Commands

### **rip-static-suppress** *new value*

When set to a non-zero value, static routes will not be advertised by RIP over a given interface unless the IP config> **enable send static** command is given for the interface. This changes the semantics of the **enable send static** command. When **rip-static-suppress** is equal to 0 (the default), the list of the routes advertised via RIP is the union of those specified by the interface's RIP flags.

### **tftp-max-rxto-time**

**tftp-max-rxto-time** allows you to specify the maximum time to wait for a response from the partner before failing the transfer. **Default value:** 5 minutes

The units for this patch variable are seconds.

### **tftp-min-rexmtime**

**tftp-min-rexmtime** allows you to specify the smallest interval of time to wait for a response from the partner before retransmitting the last packet sent. **Default value:** 1

The units for this patch variable are seconds.

**Note:** You must specify the complete name of the patch variable that you want to change. You cannot use an abbreviated syntax for the patch name.

## Performance

Use the **performance** command at the Config> prompt to enter the configuration environment for performance. See "Chapter 12. Configuring and Monitoring Performance" on page 221 for more information.

### performance

## Protocol

Use the **protocol** command at the Config> prompt to enter the configuration environment for the protocol software installed in the device.

### **Syntax:**

**protocol** *[prot# or prot\_name]*

The **protocol** command followed by the desired protocol number *or* short name lets you enter a protocol's command environment. After you enter this command, the prompt of the specified protocol appears. From the prompt, you can enter commands specific to that protocol. To return to Config>, enter the **exit** command.

### **Notes:**

1. To see the names and numbers of the protocols in your software load, at the Config> prompt, enter **list configuration**.
2. When you change a user-configurable parameter, you may be able to use the protocol's GWCON **reset** command, or you may have to restart the device for the change to take effect. To do so, enter the **restart** command at the OPCON prompt (\*).

The changes you make through CONFIG are kept in a configuration database in nonvolatile memory and are recalled when you restart the device.





## CONFIG Commands

- SDLC
- SRLY
- V25BIS
- V34
- X25

*Interface#* is the number of the interface you are configuring.

**Note:** The data-link parameter cannot be changed for integrated modems.

### **down-notify** *interface# # of seconds*

Allows the user to specify the number of seconds before declaring an interface as being down. The normal maintenance packet interval is 3 seconds, and it takes four maintenance failures to declare the interface as down.

The **set down-notify** command is used primarily when tunneling LLC traffic over an IP network using OSPF. If an interface goes down, OSPF cannot detect it fast enough because of the length of time that it takes for an interface to be declared down. Therefore, LLC sessions would begin to timeout. You can set the down-notify timer to a lower value, allowing OSPF to sense that an interface is down quicker. This enables an alternate route to be chosen more quickly, which will prevent the LLC sessions from timing out.

**Note:** If the **set down-notify** command is executed on one end of a serial link, the same command must be performed at the other end of the link or the link may not come up and stay up.

#### **Interface#**

The number of the interface you are configuring.

#### **# of seconds**

The down notification time value that specifies the maximum time that will elapse before a down interface is marked as such. Large values will cause the device to ignore transient connection problems, and smaller values will cause the device to react more quickly. The range of values is 1 to 300 seconds and the default is 0, which sets the 3-second period. Setting the down notification time to 0 will restore the default time for that interface.

The **list devices** command will show the down notification time setting for any interface that has the default value overridden.

### **global-buffers** *max#*

Sets the maximum number of global packet buffers, which are the packet buffers used for locally originated packets. The default is to autoconfigure for the maximum number of buffers (up to 10000). To restore the default, set the value to 0. To display the setting for global-buffers, use the **list configuration** command.

### **hostname** *name*

Adds or changes the device name. The device name is for identification only; it does not affect any device addresses. The *name* must be :

- Less than 78 characters and is case sensitive
- Set before storing the device's configuration memory in IBD.

### **inactivity-timer** *#\_of\_min*

Changes the setting of the Inactivity Timer. The Inactivity Timer logs out a user if the remote or physical console is inactive for the period of time specified in this command. This command affects only consoles that require login. The default setting of 0 turns the inactivity timer off, indicating that no logoff is performed, no matter how long a console remains inactive.

### **input-low-water** *interface# low\_ #\_of\_receive\_buffers*

Allows you to configure an interface's low threshold for receive buffers. When the current number of receive buffers for an interface is less than the interface's low threshold, the packet is eligible for flow control (dropping) if the packet is queued on an output queue that has reached its high threshold (fair) value. See the description of the GWCON **queue** command for more details on flow control.

Lowering the low threshold value will make it less likely that packets from this interface will be dropped when sent on congested networks. However, lowering the value may negatively affect performance if underruns occur because the receive buffer queue is empty. Raising the value has the opposite effect. To determine if underruns are occurring, use the GWCON **interface** command and specify the interface number. To determine if packets from this interface are being dropped because the low threshold has been reached, use the GWCON (Talk 5) **error** command and look at the Input Flow Drop counter value for the interface.

The range of values is 1 to 255. The default is both product-specific and device-specific. The low threshold should be less than the requested number of receive buffers. Specifying a value of 0 restores the autoconfigured default.

Use the GWCON (Talk 5) **buffer** and **queue** commands to show the low threshold setting.

*Interface#* is the number of the interface you are configuring.  
*Low\_#\_of\_receive\_buffers* is the low threshold value.

### **location** *sysLocation*

Sets the physical location of an SNMP node. There is a limit of 80 characters for the *sysLocation* name length. This variable is for information purposes only and has no effect on device operation. It is useful for SNMP management identification of the system.

### **logging disposition** *setting*

Changes the SRAM record for the default logging disposition. This command affects the MONITR process (that is, it changes the default setting at startup).

The logging disposition *settings* are as follows:

- **console** writes to the console (equivalent to the OPCON **divert 2 0** command).
- **detached** holds the data and does not print it (equivalent to the OPCON **halt 2** command).
- **flush** discards the data (equivalent to the OPCON **flush 2** command).

If you have a printing terminal attached to the device's console port, you can obtain a hard copy of the startup messages by setting the logging disposition to **console**, and restarting the device.

### **packet-size** *max\_packet\_size\_in\_bytes*

Establishes or changes the maximum size for global buffers and receive

## CONFIG Commands

buffers. If you specify a value of 0 as the maximum packet size, the size of receive buffers for an interface is based on that interface's configured packet size and the packet size of global buffers are autoconfigured. If you specify a non-zero value, the configured value is used as the global buffer packet size and any interfaces that have a configured packet size that is larger than the maximum packet size will use the maximum packet size for their receive buffers. A value of 0 (for autoconfigure) is the default.

**Attention:** Use this command only under direct instructions from your service representative. **Never** use it to reduce packet size – **only** to increase it.

### **prompt** *user-defined-name*

Adds a user-defined name as a prefix to all operator prompts, replacing the hostname.

The user-defined-name can be any combination of characters, numbers, and spaces up to 80 characters. Special characters may be used to request additional functions as described in Table 8.

### **Example:**

```
set prompt
What is the new MOS prompt [y]? AnyHost 99
AnyHost 99 Config>
```

Table 8. Additional Functions Provided by the Set Prompt Level Command

Special Characters	Function Provided by the Set Prompt Level Command
\$n	Displays the hostname. This is useful when you want the hostname included in the prompt. For example:  Config> <b>set prompt</b> What is the new MOS prompt [y]? <b>\$n</b> hostname:: Config>
\$t	Displays the time. For example:  Config> <b>set prompt.</b> What is the new MOS prompt [y]? <b>\$t</b> 02:51:08[GMT-300] Config>
\$d	Displays the current date-month-year. For example:  Config> <b>set prompt.</b> What is the new MOS prompt [y]? <b>\$d</b> 26-Feb-1997 Config>
\$v	Displays the software VPD information in the following format: program-product-name Feature xxxx Vx.x PTFx RPQx
\$e	Erases one character <i>after</i> this combination within the user-defined prompt.
\$h	Erases one character <i>before</i> this combination within the user-defined prompt.
\$_	Adds a carriage return to the user-defined prompt.
\$\$	Displays the \$.
<p><b>Note:</b> You can combine these commands. For example:</p> <pre>Config&gt; set prompt What is the new MOS prompt [y]? \$n::\$d hostname::26-Feb-1997 Config&gt;</pre>	

**receive-buffers** *interface# max#*

Adjusts the number of private receive buffers for most interfaces to increase the receive performance of an interface and to reduce flow control drops when the router is forwarding many packets from a fast interface to a slow interface. The range of values is 5 to 1000. To restore the default, specify a value of 0. Not all device types allow the maximum number of receive buffers to be configured or support up to 1000 receive buffers. Use Table 9 to determine the default and maximum values for each device type. This command does not enforce the maximum values shown in Table 9. It allows you to configure a maximum value that is not supported by a device. The effect of this command is shown by the GWCON **buffer** command. If you configure a valid maximum value, this value appears in the Input Req column of the GWCON buffer command output. If you configure a maximum value that is not supported by the device, the GWCON **buffer** command shows the default number of receive buffers in the Input Req column and a GW subsystem ELS message is logged.

**Note:** This command is not applicable for ISDN Primary Rate Interfaces. For ISDN PRI, the number of receive buffers is fixed at 5 per B-channel, 115 for T1 and 150 for E1. When in channelized mode, the PRI gets 5 receive buffers per configured timeslot.

Table 9. Default and Maximum Settings for Interfaces

Interface	Default	Maximum
ATM	80	1000
Ethernet	50	50
WAN/Serial	24	255
<b>Note:</b> The WAN/Serial row values apply to interfaces on integrated WAN ports, WAN concentration adapters, and Dial Access modem adapters.		
ISDN BRI (except 1sx, 1ux models).	10	30
<b>Note:</b> The maximum number of receive numbers for an ISDN-BRI adapter that is running in I.430 mode is 24.		
TKR	40	120

**spare-interfaces** *n*

Defines *n*, the number of spare interfaces, for this device. See “Configuring Spare Interfaces” on page 48 for additional information.

## Time

Use the **time** command to set the 2210 system clock and date, and to display the values on the user console. These values can then be used to time-stamp ELS messages.

**Note:** The 2210 has a hardware clock that maintains the date and time after device reinitialization.

**Syntax:**

```

time                               host . . .
                                   list
                                   offset
                                   set . . .
    
```

## CONFIG Commands

sync . . .

**host** *IP\_address*

Sets the IP address of the RFC 868-compliant host that will be used as the time source. This is the address of a host which will respond to an empty datagram on UDP port 37 with a datagram containing the current time.

**list** Displays all configured time-related parameters. This includes the current time (if set) and the source of the time (operator or IP address from which time was last received).

```
Example: time list
05:20:27 Wednesday December 7, 1994
Set by: operator
Time Host: 131.210.4.1
Sync Interval: 10 seconds GMT
Offset: -300 minutes
```

**offset** *minutes*

Defines the time zone, in minutes, offset from GMT (Greenwich Mean Time). Note that values west of GMT are negative. For example, EST is 5 hours earlier than GMT, so the command would be **time offset -300**.

**Valid values:** -720 to 720

**Default value:** 0

**set** *<year month date hour minute second>*

Prompts you to set the current time. If you do not specify the entire time in the command, you are prompted for the remaining values. You can change the date as shown in the following example.

```
Example: time set
year [1996] 1997
month [12]?
date [6]? 7
hour [11]? 12
minute [3]?
second [2]?
```

**sync** *seconds*

Sets the period, in seconds, at which the device will poll the time host for the current time.

## Unpatch

Use the **unpatch** command to restore the values of the patch variables entered with the **patch** command to their default values. See the **patch** command in "Patch" on page 76 for details.

**Syntax:**

**unpatch** *variable\_name*

**Note:** You *must* specify the complete name of the patch variable to be restored.

## Update

Use the **update** command to update the configuration memory when you receive a new software load.

**Syntax:**

**update** *version-of-SRAM*

## CONFIG Commands

Follow the instructions on the release notice sent with the software. The **update** command is the last command that you enter when loading new software. After you enter this command, the console displays a message indicating configuration memory is being updated.

## CONFIG Commands



---

## Chapter 5. The Boot CONFIG Process

This chapter describes the Boot CONFIG process. This chapter includes the following sections:

- “What is Boot CONFIG?”
- “How the BOOTP Forwarding Process Works” on page 88
- “Using the Trivial File Transfer Protocol (TFTP)” on page 90
- “Validating the Configuration Load” on page 93
- “Loading an Image at a Specific Time” on page 93
- “Configuring Dumping” on page 94

---

### What is Boot CONFIG?

Router nonvolatile configuration database memory contains the data that controls the router boot and dump capabilities. The Boot CONFIG commands allow you to modify this data.

Using Boot CONFIG commands, you can:

- Add, modify, or remove entries from the boot and dump configuration database.
- Disable or enable network memory dumping and assign a unique name to the dump files.
- Use the TFTP protocol to transfer (using the **TFTP** command or **copy** command) configuration information between router memory and remote hosts.
- View the current boot and dump configuration database.
- Store file images to the Integrated Boot Device (IBD).
- Store the current image to the IBD.
- Leave the Boot CONFIG command environment and return to the CONFIG process.
- List the contents of the IBD.
- Delete files from the IBD.
- Copy files to and from the local router memory and another local router memory or host file system.
- Save any changes you have made to system and protocol parameters.

Changes made to system and protocol parameters through Boot CONFIG take effect when you restart the router or when you reload the router software.

### Configuring Booting

Boot files are the same as load image files. A boot file contains the software load for the router and resides on a host server, or an IBD. The host server is, for example, any PC, router, or workstation, that is running the IP protocol and TFTP. The boot configuration database can contain an entry for each boot file, configured using the **add** command. Each entry contains the address of the host server, the next hop router, and the timeout, path, and filenames of the boot files.

## Using the Boot CONFIG Process

You can configure more than one boot file in the boot configuration database by specifying the path and name of each boot file (using the **add** command described on page “Add” on page 98). If you have more than one host server, you can use a different host server to boot the router when another host server cannot be reached over the network.

To configure booting:

1. Add an address record, using the **add address** command from the `Boot config>` prompt, that specifies the interface from which you want it to boot.
2. Add the boot record, using the **add boot-entry** command from the `Boot config>` prompt, specifying the host address, next hop router (if necessary), and the path and filename of the host.

## Using a Device as a Boot Server

A device can also function as a boot server. Devices that do not have an IBD can obtain their load files or boot files from a router that has an IBD. Use the **add boot-entry** command to designate the location of the router with the boot file. Make sure that you include the entire path name of the load file with this command. On a router with the load in IBD, this is `IBD/filename`.

---

## How the BOOTP Forwarding Process Works

BOOTP (documented in RFC 951) is a bootstrap protocol used by a router or a diskless workstation to learn its IP address, the location of its boot file, and the boot server name. A device can act as a *BOOTP client* or as a *BOOTP relay agent* for another device. The following sections describe these two processes.

### A Device as a BOOTP Client

A device acts as a BOOTP Client when it needs to find the location of the boot file and boot server. You can specifically configure the device's boot PROM configuration record so the router can act as a BOOTP Client, or it can become a BOOTP Client if, during booting, it does not contain a valid file name and path to the location of the boot file and server. When either of these two conditions exists, the router broadcasts a UDP packet over one of its LAN interfaces to the *BOOTP server* that contains the path name of the boot file and server.

The following describes the BOOT client forwarding process:

1. The BOOTP client copies its MAC address (either Ethernet or Token Ring) into a BOOTP packet (UDP packet) and broadcasts it onto the local LAN. BOOTP is running on top of UDP.
2. The BOOTP server receives the request and looks up the client's Ethernet address in its database. If found, it formats a BOOTP reply containing the client's IP address, the location of its boot file, and the boot server name. The reply is then sent back over the LAN to the BOOTP client.

**Note:** If multiple hops are required before reaching the BOOTP server, a BOOTP relay agent receives the packet. BOOTP relay agent is explained in the next section.

3. When the router receives the BOOTP reply packet, it uses the information it contains to initiate a TFTP request to the boot server.

## A Device as a BOOTP Relay Agent

If BOOTP request requires multiple hops before reaching the BOOTP server, the BOOTP relay agent routes the packet via IP to all BOOTP servers that it knows about. If any other router receives this packet while it is being routed via IP, it will examine the packet to determine whether it is a BOOTP packet and route that packet toward the BOOTP servers that it knows about. The following describes the BOOTP relay agent forwarding process:

1. A device acting as the local BOOTP relay agent, receives the BOOTP request packet from the BOOTP client, modifies the checksum, places an IP header on the packet with the relay agent's IP address copied into the body of the BOOTP request, and routes the packet to all BOOTP servers.
2. The BOOTP servers receive the request and look up the client's MAC address in their database. If a server finds the client's address, it formats a BOOTP reply containing the client's IP address, the location of its boot file, and the boot server name. The reply is then sent to the BOOTP relay agent.
3. The BOOTP relay agent receives the reply, makes an entry in its ARP table for the client, and then forwards the reply to the BOOTP client.
4. The client then continues to boot using the information that is contained in the BOOTP reply packet to initiate a TFTP request to the boot server.

## Enabling/Disabling BOOTP Forwarding

To enable or disable BOOTP forwarding on the router, enter the following appropriate command at the IP configuration prompt:

```
IP Config> enable bootp
IP Config> disable bootp
```

When enabling BOOTP, you are prompted for the following values:

- Maximum number of application hops you want the BOOTP request to go. This is the maximum number of BOOTP relay agents that can forward the packet. This is *not* the maximum number of IP hops to the BOOTP server. A typical value for this parameter is 4.
- Number of seconds you want the client to retry before you forward the BOOTP request. *This parameter is not commonly used.* A typical value for this parameter is 0.

After accepting a BOOTP request, the router forwards the BOOTP request to each BOOTP server. If there are multiple servers configured for BOOTP, the transmitting server replicates the packet.

## Configuring a BOOTP Server

The BOOTP server is either an AIX or UNIX host with a *bootpd* daemon, or a DOS host (running software available from FTP Software). The BOOTP server contains a file (maintained by the network administrator) that lists all the BOOTP clients that this server is responsible for, and their associated IP addresses, boot file locations, and boot server names.

When the BOOTP server receives a BOOTP request, it matches the MAC address of the client with the MAC address in its BOOTP file. If a match occurs, the server

## Using the Boot CONFIG Process

constructs a BOOTP reply and adds the client's IP address, along with the location of the Boot server and boot filename. If a match does not occur, the packet is dropped.

To add a BOOTP server to the router's configuration, enter the following command at the IP configuration prompt:

```
IP Config> add BOOTP-SERVER [IP address of server]
```

You can configure multiple servers. In addition, if you know only the network number of the server, or if multiple servers reside on the same network segment, you can configure a broadcast address for the server using the **enable directed-broadcast** command at the IP config> prompt.

---

## Using the Trivial File Transfer Protocol (TFTP)

TFTP is a file transfer protocol that runs over the Internet UDP protocol. This implementation provides multiple, simultaneous TFTP file transfers between a router's nonvolatile configuration memory, Integrated Boot Device (IBD), and remote hosts.

TFTP allows you to:

- Store a configuration file from a router to a server
- Copy a configuration file from a server to a router
- Copy a configuration or load file to an IBD.

TFTP transfers involve a *client* node and a *server* node. The client node generates a TFTP request onto the network. The router acts as a client node by generating TFTP requests from the router console using the Boot Config> process **copy** command.

**Note:** The **tftp** command and the **copy** command have the same function but the syntax is different.

The client can transfer a copy of the configuration file stored in configuration memory, or any file stored in the IBD.

The server is any device (for example, a personal computer (PC), router, or workstation) that receives and services the TFTP requests. When the router acts as a server, transfers are transparent to the user. Use the ELS subsystem tftp message log to view the transfer in progress.

**Note:** A file server or router is not allowed to *copy* any file into another router's nonvolatile config memory or IBD. To write to the router, use the **copy** command at the destination's local Boot config> prompt.

Before using the **copy** command, note that:

- The device configuration must include the IP protocol and have at least one configured IP address. Also, the router must not be operating in CONFIG-Only mode.
- When a device's configuration memory is empty (i.e., initially installing the device, corrupted SRAM), you must set the following parameters to restore the device's configuration.
  1. Set the device's host name.

## Using the Boot CONFIG Process

2. Configure IP so that the device can reach each host with the archived configuration. The *Protocol Configuration and Monitoring Reference* explains the IP configuration commands.
- The source IP address for TFTP transfers is the device ID. This ID, by default, is a configured IP address for one of the device's network interfaces. To change the router ID, use the **set router ID** command at the IP Config> prompt.
  - All TFTP data transfers are 512 bytes long. A data transfer of less than 512 bytes indicates an end to the transfer. A protocol, client, or remote host error generates an error packet which terminates the transfer.
  - Download configuration files into the same type of router from which you are uploading the file.

**Note:** This implementation of TFTP does not allow you to *copy* to other routers.

Every TFTP transfer has a client and server UDP port number. When a client node generates an initial request to the server, an unused UDP port number on the client node is randomly selected as the client port. The server port is the UDP port number 69 (decimal). If a TFTP server is running on the server, it listens on UDP port 69. When the server receives a request from the network, a UDP port number currently unused on the server is randomly selected as the host port. The file transfers then occur on these two UDP ports.

## Accessing Configuration Files From a Remote Host or Router

To access configuration files from a remote host or router:

1. At the Boot config> prompt, type **copy** and press **Enter**.
2. At the source filename [CONFIG]? prompt, specify the remote IP address and the pathname.

This is the TFTP host or another router with the file in its IBD.

3. At the destination filename [Config]? prompt, press **Enter**.

By pressing **Enter** you are accepting the default filename, CONFIG. For example:

```
Boot config>copy
source filename[CONFIG]?128.185.210.125:loads/configs/v1-28.cfg
destination filename [CONFIG]?
COPYing from "128.185.210.125:loads/configs/v1-28.cfg" to
"CONFIG"
COPY succeeded
```

## Filename Definitions for IBD

Each file or *image* stored on the IBD must have a unique *loadname* associated with it. The file name for the IBD can contain the complete path name in addition to the file name.

**Example 1: test.cfg**

**Example 2: /usr/loads/test.1dc**

The following example shows how to store a file to the IBD at the Boot config> prompt:

**Example: copy 128.185.210.125:/usr/config/test.cfg ibd/test.cfg**

## Using the Boot CONFIG Process

The router accepts any printable ASCII character as part of the file name definition, with two exceptions:

- The file name cannot begin with a numeric character
- The file name cannot contain a RETURN or LF (line feed) character.

The character string can accept a space, but it is recommended that you avoid using a space character, as this character is invisible. Another user who tries to enter the file name without the required space receives an error message.

**Note:** When using a IBM 2210 as a boot server for other routers, be sure to include the complete path name to the load file with the **add boot-entry** command on the booting router.

The following table contains the convention for filename extensions.

*Table 10. Conventions for File Name Extensions*

Type of File	Filename Extension
Configuration	.cfg
Load	.ldc

## IBD Considerations When Transferring a File

When transferring a file to the IBD consider the following:

- A full load may not fit into one bank of the IBD.
- Any load that needs more than one bank for storage writes only to empty, numerically adjacent banks. For example, when storing a load too large for bank 2, the load is stored in bank 3, as long as bank 3 is empty.
- If an adjacent bank is unavailable to store a large load, a TFTP Disk Full message appears on the console, the load is not stored, and the IBD remains unchanged. Any portion of the load that was stored in a bank is then removed.

## Transferring Large Amounts of Data to Multiple Files

This function is important for situations where the receiving TFTP server has a bug handling the block count wrapping back to zero or having a value of X'8000'. The TFTP protocol requires that a block count be transmitted with every data block. The acknowledgement for that data block carries the block number that was in the data block being acknowledged. The transmitter of the data won't send any more data until it receives an acknowledgement for the last data block sent. Once the receiver of the data sends the acknowledgement it expects to receive a data block with a block count that is one greater than the block count it previously received. This block count is two bytes long.

Some TFTP servers have improperly implemented this as a signed short word (two-byte variable where the high order bit being 1 indicates a negative value) and others as an unsigned long word (four byte variable).

If the amount of data to be transferred is so great that the block count wraps, then depending on how the receiver verifies the block count, it may or may not acknowledge the data. If the receiver uses a signed short, the problem will be experienced when the block count goes from X'7FFFF' to X'8000'. If the receiver uses an unsigned long or short, the problem will be experienced when the block count goes from X'FFFF' to X'0000'. In both cases the block count in the data block will appear to be less than the previously received block count and the receiver gets confused.

The transmitting TFTP on the router will either receive an error packet or time out waiting for the receiver to respond. When this happens, TFTP on the router will realize that the block count had wrapped and will automatically recover by making a write request to the receiver for a new file. The new file name is derived from the original file name. The new file name is derived by overlaying the last two characters of the original file name with two decimal digits. Every time the block count wraps, a new file will be written until all the data has been transferred. Tools like **cat** can be used at the receiver to concatenate the files.

### Specifying the Maximum Number of Blocks to Transfer to a File at the Receiver

A patch variable was added so that you can specify the maximum number of blocks to transfer to a file at the receiver. This allows you to tell the device to automatically do a write request for a new file once the number of blocks specified has been sent. Doing this circumvents the automatic recovery described above, speeding up the transfer by avoiding the 5-minute timeout period.

The only values that may be specified for this patch variable are: X'FFFF' (65535) and X'7FFF' (32767).

This patch variable is useful if you know that the receiving server has problems handling the wrap of the block count.

---

## Validating the Configuration Load

There are two methods for validating an image before it is written into the device's configuration memory:

- In the first method, the device assigns an identifier, called a *Magic Number*, to each platform type for the image that is archived and the image that is being restored. If the numbers do not match, the transfer is aborted and the console displays the message `Bad Magic Number`.
- In the second method, the host name for the device that originally archived the image is compared to the host name for the device that is restoring the image. If the host names do not match, the transfer is aborted and the console displays the message:

```
COPY error -  
Got hostname "<hostname>" - is this okay (Yes or [NO])? no
```

This allows you to bring in the configuration from another device even if the hostname does not match. The configuration needs to be correct for your model device.

When a transfer fails due to a lack of RAM space, the console displays an error message.

---

## Loading an Image at a Specific Time

There may be occasions when you may want to load an image into a device on a specific day and time when you will be unavailable. You can configure the device to perform a timed load using the **timedload activate command**. Other commands allow you to view a device's scheduled load information or cancel a scheduled load. See "Boot CONFIG Commands" on page 97 for information on these commands.

### Configuring Dumping

An important feature of the 2210 is the ability to dump the contents of system memory and processor's registers to another host during a system reset that results from a software crash, hardware failure, or by pressing the reset button.

To configure dumping, do the following from the `Boot config>` prompt:

1. *Add address.*  
This can be the same as the boot address used in configuring booting.
2. *Add a dump entry.*  
This is the location of the host or server that is going to receive the dump file. You can add a dump entry with the **add dump-entry** command. The average size of a dump file is 8 MB.
3. *Enable dumping.*  
Dumping will not work unless you enable it using the **enable dumping** command. Dumping will remain enabled until you use the **disable dumping** command to terminate it.

### Dump Files

Dump files contain the contents of the system memory and processor registers.

When the device crashes and dumping is enabled, the contents of memory are written to a remote host using TFTP. Each dump entry contains the location of the host server and the path, timeout, and file names for the dump files.

You can configure the device to automatically append a unique character string to the dump file names. This prevents an existing dump file from being overwritten by subsequent dumps. However, unique naming of the dump files can cause the server's disk to become full if there are successive dumps. Unique naming may also be incompatible with the security requirements of some TFTP servers. Some servers require that a file already exist on the server to allow writing the dumps.

Dump files are for diagnostic purposes only. Enable the device's dump and unique-naming capabilities only on the advice of your Customer Service representative.

### TFTP Server, Boot and Dump Directories

You must create directories on the destination server to contain the boot and dump files. These directories must reside on a host server and the boot directories must be globally readable and the dump directories globally writable. The boot and dump functions use the TFTP protocol. Your TFTP server may impose additional restrictions.

---

### Installing Software/Code

To download a new load module from a server into the IBD, perform the following steps:

1. Install your load file into a server that is reachable by the device. Make sure the TFTP daemon is running in your server. On the device, issue the following commands at the router console:



2. At the OPCODE prompt (\*):
  - a. Enter **status** to display the Config process ID (PID).  

```
* status
```
  - b. Enter **talk** and the Config PID to access the Config> command environment.  

```
* talk 6
```
3. At the Config> prompt, enter **boot**. This will access the Boot config> command environment.

```
Config> boot
Boot config>
```

4. At the Boot config> prompt, enter **add address** to specify an IP address over which the device can boot. This needs to be done only once for each interface you want to be able to use. It should not be done each time you want to get a new load module.

You will then be prompted for the following information:

- Interface number. This is the number of the interface over which the router will transfer the file.
- New address. This is the IP address of this interface.
- Net mask. This is the network mask for this interface.

```
Boot config> add address
Which interface is this address for [0]?
New address [0.0.0.0] ?
Net mask for this interface [255.255.255.0]?
```

The next steps are needed only if you added a boot address. If your boot address is already configured, skip these steps and go to step 9.

5. Press **Ctrl-P** to return to the OPCODE prompt (\*).
6. Enter **restart** at the OPCODE prompt.
7. Enter **talk** and the Config PID.
8. Enter **boot** at the Config> prompt to return to the Boot config> command environment.
9. At the Boot config> prompt, enter **tftp get**. This initiates the file transfer of the load module.

You will be prompted for the following information:

- Local filename. For the local filename, enter the filename of the new load in the IBD.
- Remote host. For the remote host, enter the IP address of the server.
- Host filename. For the host filename, specify the entire path and filename on the host machine.

```
Boot config> tftp get
Local filename []? ibd/newloadfile
Remote host []?
Host filename []?
```

10. Enter **list boot-entries** at the Boot config> prompt. This lists the load modules in your IBD.

```
Boot config> list boot-entries
```

Note the entry number of the load module in the IBD that you were using prior to receiving this load module.

## Using the Boot CONFIG Process

The boot database is where the router goes to determine where to get the load module from. You may have multiple entries in your database. The first entry is usually a load module in the IBD, and the second is usually a load module on a remote host or router.

11. To change the boot database pointer to the module you just loaded, enter **change boot** at the `Boot config>` prompt. This is what determines which load module is used the next time you reboot the router.

```
Boot config> change boot
```

You will then be prompted for the entry number of the previous module you were using in IBD. This is the entry number from step 10 on page 95. The boot entry number will usually be "1".

```
Change which entry?: 1
```

12. Enter the filename of the new load. This is the name that you specified at step 9 on page 95 to store in the IBD. Filenames are case sensitive.

```
remote host or IBD load name:
```

13. Enter **exit**.

```
Boot config> exit
```

14. Press **Ctrl-P** to return to the OPCON prompt (\*).

15. Enter **restart** to make sure the configuration change from the "change boot" command takes effect.

16. Enter **reload** to load the device with the new load module.

17. Once you are confident with the new load, you can create space in your IBD for future loads by erasing the previous load:

- a. Enter **talk 6**.

- b. Enter **boot**.

```
Config> boot
```

- c. Enter **list ibd** to list the content of the banks. Note the number of the banks where the previous load is stored.

```
Boot config>list ibd
```

- d. Enter **erase** and either the previous load name or the bank numbers. For example, to erase from bank 36 to 50, enter:

```
Boot config> erase 36-50
```

---

## Chapter 6. Configuring Boot CONFIG

This chapter describes the Boot CONFIG configuration and operational commands. It includes the following sections:

- “Entering and Exiting Boot CONFIG”
- “Boot CONFIG Commands”

---

### Entering and Exiting Boot CONFIG

To enter the Boot CONFIG command environment, use the CONFIG **boot** command. When the router’s software is initially loaded, it is running in the OPCODE process, signified by the \* prompt. From the \* prompt:

1. Enter **talk 6**.
2. At the Config> prompt, type **boot**.
3. At the Boot config> prompt, type **?**. See “Add” on page 98 for a list of commands.

To return to the CONFIG process, type **exit**.

---

### Boot CONFIG Commands

This section describes the Boot CONFIG commands. Each command includes a description, syntax requirements, and an example. Table 11 summarizes the Boot CONFIG commands.

After accessing the Boot CONFIG environment, enter the boot configuration commands at the Boot config> prompt.

*Table 11. Boot CONFIG Commands*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds a boot interface IP address to a specified interface, host boot entry, or host dump entry.
Change	Changes the boot interface IP address, network boot entry data, or network dump entry data.
Copy	Copies boot files and configuration files to or from remote routers and hosts or between resources within the router.
Describe	Displays information about the stored loadfile images in the IBD.
Delete	Deletes a network boot interface address, a host boot entry, or host dump entry.
Disable	Disables memory dump or unique naming of the dump files.
Enable	Enables memory dump or unique naming of dump files.
Erase	Erases a stored image on an IBD bank.
List	Displays all network boot addresses, all boot and dump configuration data, the contents of the IBD, BOOTP name settings, and scheduled image load information.
Load	Copies a boot file from the IBD to RAM or copies a boot file from a remote host to RAM.
Store	Copies the boot file from RAM to the IBD.

Table 11. Boot CONFIG Commands (continued)

Command	Function
Timeload	Schedules an image load into the device on a specific day and time, cancels a scheduled load or displays scheduled load information.
TFTP	Initiates TFTP file transfers between device memory or IBD and remote hosts.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## Add

Use the **add** command to enter boot/dump parameters into the device’s configuration database.

### Syntax:

```

add                address
                    boot-entry
                    bp-device
                    dump-entry

```

### address

Specifies the IP address of the interface or device over which the device can boot or dump. When you enter the **add address** command, you must supply or accept the default value of the following information:

- Interface number of the network interface
- IP address
- Network mask

To obtain the interface number (Ifc#), use the CONFIG **list devices** command. “What is CONFIG?” on page 43 describes this command.

**Note:** Failure to add an address results in the device being unable to boot or dump over the network.

Remember the following:

- The first address you enter corresponds to the first boot-entry entered, the second address to second boot-entry, and so on.
- Multiple boot entries can use the same IP address (interface).
- You must enter this command if you are using the **add boot-entry**, **add dump-entry** and **load remote** commands.

```

Example: add address
Which interface is this address for [0]?
New address [0.0.0.0] ? 128.185.1.2
Net mask for this interface [255.255.255.0]?

```

### boot-entry

Specifies the information needed by the device to locate the TFTP host server and retrieve the boot image file. There are several ways that a device can boot:

- If the router is booting up using software stored in its IBD, then you must specify the IBD loadname as the first boot entry in the configuration. You can configure more than one boot device. Obtain the loadname using the **list ibd** command. The loadname is case-sensitive.

```
Example: add boot-entry
remote host or IBD loadname [0.0.0.0]? 128.185.30.0
via gateway (0.0.0.0 if none) [0.0.0.0]? 0.0.0.0
timeout in seconds [3]? 10
file name [ ]? loads/Y21.1dc
```

- If the device is booting using software stored on a TFTP server, then you must specify the IP address of the remote TFTP host server. Note that the TFTP host server can be another device with an IBD.
- If the TFTP host server is on a remote network (not directly connected to the booting router), you must specify the IP address of the next hop (router) towards the host server.

Table 12. Add Boot Entry Parameters

remote host or IBD loadname?	IP address of the remote host or an IBD loadname. <b>Note:</b> An IBD loadname must start with a letter. Otherwise, the system interprets the string as an IP address.
via gateway?	IP address of the first hop router, if any. If the TFTP host server is on a directly connected network, answer 0.0.0.0.
timeout in seconds?	Specifies the amount of time the device will wait before retransmission takes place. The default is 3 seconds. This may need to be set to a longer time over exceptionally slow boot paths.
file name?	The complete directory path and name of the boot image file on the TFTP host server. (The complete directory path is not necessary on some machines. The default assumes the path is tftpboot/ which is invisible to you, so if the path is /tftpboot/loads/name, you type <b>loads/name</b> .)  <ul style="list-style-type: none"> <li>– When referencing a file stored on a UNIX-based operating system use a forward slash "/" and remember that the file name is case-sensitive. If the path requires the leading forward slash (/) use a double forward slash (//): 128.185.15.1//tftpboot/loads/name.</li> <li>– When referencing a file stored on a DOS disk use a backward slash "\" and remember that the file name is not case-sensitive.</li> </ul>

**Note:** To view a list of the current boot configuration, enter the Boot CONFIG list boot command.

```
Example: list boot-entry
remote host or IBD loadname [0.0.0.0]? 10.0.0.5
via gateway (0.0.0.0 if none) [0.0.0.0]? 12.0.0.7
timeout in seconds [3] 10
file name [ ] loads/v1.1dc
```

### bp-device

Provides a BOOTP boot-up capability as follows for retrieving the device's software from a BOOTP (Boot Protocol) device.

- If the device has never been configured or is missing its automatic boot up configuration information and the auto-boot switch is enabled, the device will automatically attempt to use BOOTP on all LAN interfaces to retrieve its boot-up information.
- During an auto-boot, the device will try to use the information provided in the boot entries to retrieve its load image file first. If the device cannot retrieve its load image file with the information in the boot entries, it will then attempt to boot up using BOOTP.
- The interfaces selected with the **add bp-device** command depend on the locations of the BOOTP servers in the network.
- You cannot use BOOTP to boot over directly connected serial interfaces.

```
Example: add bp-device
Which interface number [0]? 1
```

### dump-entry

Specifies the IP address of the remote host that will receive the dump

file(s). When you enter the **add dump-entry** command, you must supply the following information:

remote host?	IP address of the remote host on which the dump file will be stored, usually same as boot server
via gateway?	If host is on a remote network (not directly connected to the booting device), you must specify the IP address of the next hop (router) towards the host. If the host is on a directly connected network, answer 0.0.0.0.
timeout in seconds?	Specifies the amount of time the device will wait before retransmission takes place. The default is 3 seconds. This may need to be set to a longer time over exceptionally slow boot paths.
file name?	Base dump path and filename (may have unique suffix appended).

To view a list of the dump configurations, enter the **list dump-entries** command.

#### Example:

```
add dump-entry
remote host [0.0.0.0]? 128.185.162.30
via gateway (0.0.0.0 if none) [0.0.0.0]? 128.185.160.3
timeout in seconds [3]?
file name []? c:\dump\gertrude.dmp
```

## Change

Use the **change** command to modify entries in the existing address, boot-entry, and dump-entry information without deleting and re-adding the information. You can delete and reenter information instead of using the **change** command.

#### Syntax:

```
change                address
                        boot-entry
                        bp-device
                        dump-entry
```

#### address

Changes an existing address for a boot interface or device that was previously added. When you enter the **change address** command, you must supply the following information:

- Address entry number
- Interface number of the network interface
- IP address
- Network mask

**Note:** The console displays some of this information, such as the address entry number, when you enter the Boot CONFIG **list** command. To obtain the interface number (Ifc#), use the CONFIG **list devices** command. ( “What is CONFIG?” on page 43 describes this command.)

#### Example:

```
change address
Change which entry [1]? 1
Which interface is this address for [0]? 1
New address [192.9.1.1]? 128.185.162.1
Net mask for this interface [255.255.255.0]?
```

### boot-entry

Modifies the configuration about a previously added network boot file. When you enter the **change boot-entry** command, you must supply the following information:

- Boot entry number
- IP address of the remote host
- IP address of the first hop router, if any
- TFTP retransmission timer value
- Boot file name, if different from the current file name.

**Note:** The console displays some of this information, such as the boot entry number, when you enter the Boot CONFIG **list boot-entries** command.

#### Example:

```
change boot-entry
change which entry [1]?
remote host [18.123.0.16]?
via gateway (0.0.0.0 if none) [0.0.0.0]?
timeout in seconds [3]?
file name [user/lib/gw/gwimage.ldb]?
```

### bp-device

Changes the interface that is the BOOTP device. To obtain the entry number for an interface, use the **list boot-entries** command.

#### Example:

```
change bp-device
Change which entry [1]?
Which interface is this entry for [1]?
```

**Note:** For more information on the BOOTP protocol and its related processes, refer to the chapters on configuring and monitoring the IP protocol in the *Protocol Configuration and Monitoring Reference*

### dump-entry

Modifies the configuration about a previously added network dump file. When you enter the **change dump-entry** command, you must supply the following information:

- Dump entry number
- IP address of the remote host
- IP address of the first hop router, if any
- TFTP retransmission timer value
- Base boot file name, if different from the current file name

**Note:** Use the Boot CONFIG **list dump-entries** command to display this information.

#### Example:

```
change dump-entry
change which entry [1]? 1
remote host [18.123.0.16]?
via gateway (0.0.0.0 if none) [0.0.0.0]?
timeout in seconds [3]?
file name [user/lib/gw/gwimage.ldb]? c:\dump\debug1.dmp
```

# Copy

Use the **copy** command to copy boot files and configuration files to and from remote routers and hosts. To use the **copy** command, the device must have IP configured and running on at least one interface. The device cannot be in Config-only mode.

## Syntax:

```
copy config  
[ibd or filename]  
[host-ip-address or filename]
```

## Example 1 - Copying from a Remote Router:

```
Boot config> copy  
source filename [CONFIG] 128.185.110.30/ibd/Y17.ldc  
destination filename IBD/Y17.ldc
```

*Source filename* and *destination filename* must be one of the following:

**config** Configuration memory

### ibd/filename

File name on IBD. Include the complete pathname.

### IP address/remote

Remote file on TFTP host.

### path and filename

Include the complete pathname.

**Note:** When copying a file to the IBD, the file is placed in the largest set of contiguous free banks. If no banks are available the message COPY error - TFTP Disk Full or IBD full appears on the console.

In the example above, get the source from a remote router whose IP address is 128.185.110.30. The IBD has a filename Y17.ldc. The colon (:) is used here as the delimiter. The *destination* has a filename of Y17.cfg.

## Example 2 - Copying from a Remote Host:

```
Boot config> copy  
source filename [CONFIG] 128.185.110.30/router/loads/2210.02.cfg  
destination filename ibd/2210.02.cfg
```

In the example above, the source has a path and filename. The destination is an IBD.

## Example 3 - Copying Within a Device:

```
Boot config> copy  
source filename [CONFIG] config  
destination filename [CONFIG]? ibd/2210.02.cfg
```

In the example above, the source is the configuration memory. The destination is an IBD.

**config** Gets the same result as if you type copy and press the **Enter** key, except that you do not get prompted for the source filename.



**[ibd or filename]**

Copies a boot file or configuration file from an IBD. You must include the file name.

**[host-ip-address or filename]**

Copies a boot file or configuration file from a remote host. You must include the file name.

## Delete

Use the **delete** command to remove entries from the boot and dump configuration database.

**Syntax:**

```
delete                address
                        boot-entry
                        bp-device
                        dump-entry
```

**address #**

Removes an interface address entry from the boot and dump configuration database.

When you enter the **delete address** command, a prompt appears for the entry you want to delete. The address entry number is the first number that appears on each line when you enter the **list address** command at the Boot config> prompt.

To verify the deletion, use the **list** command.

**Example:**

```
delete address
Delete which entry [1]?
```

**boot-entry**

Removes a boot entry from the boot and dump configuration database.

When you enter the **delete boot-entry** command, a prompt appears to enter the boot-entry you want to delete. The boot-entry number is the first number that appears on each line when you enter the **list boot-entries** command at the Boot config> prompt.

To verify the deletion, use the **list** command.

**Example:**

```
delete boot-entry
Delete which entry [1]? 2
```

**bp-device**

Removes the specified interface as a BOOTP device.

**Example:**

```
delete bp-device
Delete which entry [1]?
```

**Note:** For more information on the BootP protocol and its related processes, refer to the chapters on configuring and monitoring the IP protocol in the *Protocol Configuration and Monitoring Reference*

**dump-entry**

Removes a dump entry from the boot and dump configuration database.

When you enter the **delete dump-entry** command, a prompt appears for the entry you want to delete. The dump entry number is the first number that appears on each line when you enter the **list dump-entries** command at the Boot config> prompt.

To verify the deletion, use the **list** command.

**Example:**

```
delete dump-entry
Delete which entry [1]?
```

## Describe

Use the **describe** command to display information about a stored image in the IBD.

**Syntax:**

**describe** *loadname*

**loadname**

Displays the following information about the specified loadname:

- Copyright information.
- Supported protocols, features, and data-link types.
- Supported network interfaces.

**Example:**

```
describe ibd/test.ldb
      Copyright Notice .....

IBM 2210 Bridging Router  V1 R2.0[Y69]   Wed Mar 8 10:24:20 1995

Software configuration: Expanded Multi-Protocol DLSw
Includes:
  Internet Protocol - IP & OSPF
  Novell - IPX
  AppleTalk Phase 2 - AP2
  Banyan VINES - VIN
  Adaptive Source Routing Transparent Bridge - ASRT
    with NETBIOS Name Caching & Filtering
  Data Link Switching - DLSw
  SDLC Relay - SRLY
  Frame Relay
  PPP
  X.25
  V.25bis
  WAN Restoral/Reroute - WRS
  Bandwidth Reservation - BRS
  MAC Filtering - MCF
```

## Disable

Use the **disable** command to disable memory dumping and the unique naming of dump files.

**Syntax:**

**disable** dumping  
unique-naming

**dumping**

Prevents the device from performing a memory dump to the network when a system failure occurs. After entering this command, use the Boot CONFIG



Specifying a bank number may result in a partial erase of the load image file if it is large enough to traverse more than one bank.

#### Example 1:

```
erase test
Erasing bank 5 ...
Banks 1-4 contain ...
Banks 5-7 have been erased
```

#### Example 2:

```
erase 2
Are you sure you want to erase bank 2? (Yes or [No]): yes
Erasing bank 2 ...
Banks 5-7 has been erased
```

#### Example 3:

```
erase
Loadname or Bank Number: 4
Are you sure you want to erase bank 4? (Yes or [No]): yes
Erasing bank 4...
Bank 1 contains load "v1-29.cfg" which use 131094 bytes
  Loaded using TFTP over IP
  Filename config
  Host 0.0.0.0
Banks 2-3 contain load "v1-22.cfg" which uses 1832848 bytes
  Manual Booted using TKR-4/16 at (80001000, 72) as 10.1.155.29
  Filename loads/latest-gen.c5-multisna.ldc
  Host 128.185.210.125, Gateway 10.1.155.43
Bank 4 has been erased
```

If the erase fails, a message indicating the failure appears on the console along with the banks that failed. Failure information will appear in the **list** command until the router has been restarted. The router will **not** automatically delete any boot records referencing the image in the failed banks.

At boot time, if the boot PROM cannot find an image, it will display a message and try the next boot record.

## List

Use the **list** command to display the current boot and dump configuration database, the contents of the IBD, and scheduled image load information.

#### Syntax:

```
list                addresses
                    all
                    boot-entries
                    bp-device
                    dump-entries
                    ibd
                    view
```

#### addresses

Displays the IP addresses and their subnet masks of all the network boot interfaces entered using the **add address** command.

#### Example:

### list addresses

Interface addresses:  
1: 192.9.1.1 on interface 0, mask 255.255.255.252  
2: 192.9.223.39 on interface 2, mask 255.255.255.0

**all** Displays all boot and dump configuration data and the current settings for the dump, unique-naming capabilities, and scheduled image load information.

### Example:

Interface Addresses:

Boot files:  
1: "/u/steve/v1/load/v1060694/v1.X11.1dc" on 216.1.2.100 via 0.0.0.

BOOTP over interface(s): 0  
Dumping disabled  
Unique-naming disabled  
Dump to:

Banks 1-19 contain load "v1.X11.1dc" which uses 1199272 bytes  
Loaded using TFTP over IP  
Filename /u/steve/v1/load/v1060694/v1.X11.1dc  
Host 216.1.2.100  
Banks 20-48 have been erased  
Bank 49 in unknown(AA) state  
Banks 50-57 contain load "v1051894.1dc" which uses 508492 bytes  
Loaded using TFTP over IP  
Filename /u/steve/v1/load/v1051894/v1051894.1dc  
Host 216.1.2.100  
Banks 58-64 have been erased

Time Activated Load Schedule Information...

The router is scheduled to reload as follows.

Date: April 1, 1997  
Time: 13:00  
Remote host IP address: 1.1.1.2  
Via gateway: 0.0.0.0  
Timeout in seconds: 10  
Filename: /tftpboot/v13.img  
Interface address: 0  
New address: 1.1.1.1  
New mask: 255.255.255.0

### boot-entries

Displays the boot file configuration.

### Example:

```
list boot-entries
1: /usr/lib/gw/this-dn.1db on 192.9.1.2 via 0.0.0.0 for 3 secs
2: /usr/lib/gw/this.1db on 192.9.2.2 via 192.9.1.4 for 3 secs
3: IBD load "test"
```

### bp-device

Lists the interfaces that were previously added using the **add bp-device** command.

### Example:

```
list bp-device
BOOTP over interface(s): 0 1
```

### dump-entries

Displays the dump file configuration.

### ibd

Displays the contents of the IBD. It provides information similar to the GWCON **boot information** command and displays the loadname of the file and the host server from which the file was loaded. In addition, the erased and faulty banks of the IBD appear along with the faulty chips, if necessary.

### Example:

```
list ibd
Bank 1 contains load "2210-29.cfg" which uses 131094 bytes
Loaded using TFTP over IP
Filename config
Host 0.0.0.0
```

```

Banks 2-3 contain load "v1/load-ver2.ldc" which uses
1652961 bytes
  Loaded using TFTP over IP
  Filename loads/v1/load-ver2.ldc
  Host 128.185.210.125
Bank 4 contains load "v1/load-ver4.cfg" which uses 131084 bytes
  Loaded using TFTP over IP
  Filename CONFIG
  Host 0.0.0.0

```

“Loaded using TFTP over IP” implies that you used the **copy** command to IBD from this local router.

**view** Displays the time, date, and other information about a scheduled image load.

**Example:**

```

list view
Time Activated Load Schedule Information...

The router is scheduled to reload as follows.

Date: April 1, 1997
Time: 13:00
Remote host IP address: 1.1.1.2
Via gateway: 0.0.0.0
Timeout in seconds: 10
Filename: /tftpboot/v13.img
Interface address: 0
New address: 1.1.1.1
Network mask for this interface: 255.255.255.0

```

## Load

Use the **load** command to copy the boot file into the device’s main memory from either a local or remote source. The result of the **load** command is the same as performing the **reload** command from the \* prompt.

**Syntax:**

```

load                _local . . .
                   _remote . . .

```

**local** *loadname*

Retrieves a previously stored load image file from the device’s IBD into the router’s memory. The loadname must match one of the loadnames stored in the IBD. The loadname is case-sensitive.

To set up the IBD, use the **add boot-entry** command. This could take up to five minutes.

You must have a load file in the IBD before you can use the **load local** command successfully.

**Example:**

```

load local
Loadname: ibd/softrel.ldc

```

**Note:** If the software does not find the load file, then it will go into the boot monitor and do an auto-boot or manual boot, depending on the setting of your boot switch.

**remote**

Loads the boot file from a remote host into RAM. To perform a remote load:

1. Enter the **load remote** command after the Boot config> prompt and enter the remote host address, remote path name, first hop address, and TFTP timeout value after the prompts.

2. A prompt then asks you to confirm the load. Enter **no** to cancel the command. Enter **yes** to load the boot file from the remote host into RAM.

**Example:**

```
load remote
Remote Host Address [0.0.0.0]? 128.185.210.125
Remote Pathname[]? /loads/v1.1dc
First Hop Address[0.0.0.0]? 128.185.208.38
TFTP Timeout Value [3]?
Are you sure you want to reload the gateway(Yes or No): yes
```

**Remote Host Address**

IP address of the host containing the boot file.

**Remote Pathname**

Pathname and filename of the boot file you want to load.

**First Hop Address**

The address of the first-hop router that routes to other networks. This is needed if the remote host address is not on a directly connected network; otherwise, use the 0.0.0.0 default.

**TFTP Timeout Value**

The time interval between the TFTP packet retransmissions. Longer values (longer than the default value of 3) may be needed when booting over or across slow networks or serial lines.

## Store

Use the **store local** command to store a compressed image in erased banks of the IBD. The console displays the number of bytes that were stored. To verify that an image was stored, use the **list ibd** command.

**Note:** The router stores images sequentially from bank 1 to bank 4. When all 4 banks are full, you receive an error message. To create space in a bank, use the **erase loadname** or **erase bank-number** command.

As the device's load image file is stored into the IBD, it is compressed. The load image file will not overwrite a non-erased IBD and will not try to write beyond the end of the IBD. If the compression fails, the operator will be notified and the affected IBD will be erased.

The loadname can be any name up to 80 characters in length, can start with an alphabetic character, and is case-sensitive.

**Syntax:**

```
store local loadname
```

**loadname**

Stores the specified image in an erased bank of the IBD.

**Example:**

```
store local
Loadname: test
Will start storing at bank #2
:
.
Number (dec) bytes used
Boot config>
```

## Timedload

Use the **timedload** command to schedule an image load on a device, cancel a scheduled load, or to view scheduled load information.

This command allows you to load a software image into the device outside of peak network traffic periods when support personnel may not be present.

### Syntax:

```
timedload          activate
                   deactivate
                   view
```

### activate

Schedules an image load on the device. You will be prompted for information describing the source of the image similar to the **add boot-entry** and **add address** commands. See “Add” on page 98 for information about the parameters.

### Time of day to load image

Specifies the date and time at which the device will load the new image. Specify the value as *YYYYMMDDHHMM*, where:

*YYYY* is the four-digit year.

**Note:** If the current month on the device is December, the year data must be the current year or the following year. Otherwise, if the current month on the device is January through November, the year data must be the current year.

*MM* is the two digit month.

**MM Valid Values:** 01 to 12 with 01 representing January.

*DD* is the two-digit day of the month.

**DD Valid Values:** 01 to 31, depending on the value of *MM*.

*HH* is the two-digit hour in 24-hour time.

**HH Valid Values:** 00 to 23

*MM* is the two-digit minute of the hour.

**MM Valid Values:** 00 to 59

The following are examples of scheduling a load from different sources.

### Example 1. Load from a remote host:

```
Boot config> timedload activate
Time Activated Load Processing...

Remote host IP address or IBD load name [0.0.0.0] 1.1.1.2
Via gateway (0.0.0.0 if none) [0.0.0.0]? 0.0.0.0
Timeout in seconds [10]? 10
File name []? /tftpboot/v13.cce
Do you want to configure an interface address? (Yes, No, Quit): [No] yes
Which interface do you want to configure an address to boot over [0]? 0
New address [0.0.0.0]? 1.1.1.1
Network mask for this interface [255.255.255.0]? 255.255.255.0
Config filename [CONFIG] ? ibd/v13.cfg
Time of day to load image (YYYYMMDDHHMM) []? 199703191630
The load timer has been activated.
```

### Example 2. Load from the IBD:



```
Boot config> timeload activate
Time Activated Load Processing...

Remote host IP address or IBD load name [0.0.0.0] ibd:v13.cce
Time of day to load image (YYYYMMDDHMM) []? 199703191630
The load timer has been activated.
```

### **deactivate**

Cancels a scheduled load.

#### **Example 1. Deactivate time activated load:**

```
Boot Config> timeload deactivate
Deactivate Load Timer Processing...

Do you want to deactivate the load timer? (Yes, No, Quit) [No]? yes
The load timer has been deactivated
```

**view** Displays scheduled load information.

#### **Example 1. Load image source is a remote host:**

```
Boot Config> timeload view
Time Activated Load Schedule Information...

The router is scheduled to reload as follows.

Date: March 19, 1997
Time: 16:30
Remote host IP address: 1.1.1.2
Via gateway: 0.0.0.0
Timeout in seconds: 10
Filename: /tftpboot/v13.cce
Interface address: 0
New address: 1.1.1.1
Network mask for this interface: 255.255.255.0
Config filename: ibd/v13.cfg
```

#### **Example 2. Load image source is the IBD:**

```
Boot Config> timeload view
Time Activated Load Schedule Information...

The router is scheduled to reload as follows.

Date: March 19, 1997
Time: 16:30
Filename: v13.cce
Config filename: ibd/v13.cfg
```

## **TFTP**

Use the **TFTP** command to initiate TFTP file transfers between a remote host and the device's nonvolatile configuration memory or IBD. It provides the ability to store/retrieve a load image file into/from a TFTP server or a router with an IBD.

The router acts as a TFTP client. The remote host is any device (for example, router, workstation, PC) that is running IP that acts as a TFTP server node. The router cannot be in Config-only mode.

Entering the **TFTP get** and **put** commands locks the CONFIG process for the duration of the operation. The following two keyboard character combinations are recognized during the TFTP operation:

**Ctrl-P** Displays the OPCON prompt (\*).

**Ctrl-C** Cancels the TFTP operation.

**Note:** Do not press the reset button or power off the router while it is performing a **TFTP get** operation. This will leave the destination configuration memory in an inconsistent (and invalid) state. That is, you will have a partial configuration or load and it will appear to be valid.

## Syntax:

```
tftp          get
              put
```

### **get** CONFIG address-remote-server path/filename

Initiates a request to a TFTP server to transfer a file *from* the server *to* the device. The server sends a data packet and the client node acknowledges receipt of the data. This cycle continues until the transfer is complete and the following message appears on the console: TFTP transfer complete, Status: OK

If the TFTP transfer is unsuccessful, a detailed error message appear on the screen. While transferring a file to CONFIG, the following message appears on the console: Updating Config: Do Not Interrupt

If you are attempting to transfer a file to IBD, and there is not enough memory in the IBD, the following message appears on the console:

**Attention:** Do not reset or power off the router while updating of the configuration memory is in progress. This may corrupt the data in configuration memory, forcing you to reconfigure the router.

### Example:

```
tftp get
local filename [CONFIG]?
remote host [0.0.0.0]? 128.185.163.1
host filename [0A019947.cfg]? configs/v1-28.cfg
TFTP transfer complete, status: OK
```

### Local filename

Specifies the name that you want the file to appear under after it has been transferred to the local device. When entering the filename, make sure that you specify the **complete** pathname if you are transferring the file to the IBD. The default is CONFIG.

### Remote Host

Specifies the address of the host containing the file you want to transfer. The Magic Number stored in the file is compared to the number in static RAM. This prevents cross loading nonvolatile memories between types of devices.

### Host filename

Specifies the name of the file on the host that you want to transfer. Make sure that you specify the **complete** pathname. The default is the ASCII representation of one of the host's IP addresses in hexadecimal. This ensures that the file has a unique name.

The hostname must match the hostname in the archive file. The hostname is case-sensitive.

### **put** CONFIG address-remote-server path/filename

Initiates a request to a TFTP server to transfer a file *to* the server *from* the router. The server acknowledges the request and the client transfers the file. This cycle continues until the transfer is complete and the console displays the following message:

```
TFTP transfer complete, Status: OK
```

**Note:** The **TFTP put** command does not allow you to place a file in another device's configuration memory or IBD. You must be logged into that device and use the **TFTP get** command.

The console display is the same as the **TFTP get** command.

**Example:**

```
tftp put
Local filename [CONFIG]?
Remote host [0.0.0.0]? 128.185.163.1
Host filename [0A019947.cfg]?
TFTP transfer complete, status: Timeout
```

**local filename?**

CONFIG is a filename that refers to the device's nonvolatile memory.

**remote Host?**

You must specify the IP address of the remote host and filename to be used to store the CONFIG on the remote host.

**host filename?**

Specifies the name of the file on the host to which you want to transfer. Make sure that you specify the complete pathname. The default is the ASCII representation of one of the host's IP addresses in hexadecimal. This ensures that the file has a unique name. The hostname must match the hostname in the archive file. The hostname is case-sensitive.

**Example:**

```
tftp put IBD/r151.ldc
Remote host [0.0.0.0]? 140.187.2.100
Host filename [80B9D626.cfg]? v1605.ldc
TFTP transfer complete, status: OK
```

To abort a TFTP transaction, press **Ctrl-C**. Answer **yes** to Are you sure (yes or no):

The TFTP command generates the following error messages:

<b>Error Message</b>	<b>Meaning</b>
<b>Unknown Error</b>	Protocol failure.
<b>File Not Found</b>	Specified host file does not exist.
<b>Access Violation</b>	File protection error.
<b>Disk Full</b>	File system full during write.
<b>Illegal Operation</b>	Undefined TFTP operation requested.
<b>Unknown TID</b>	Unexpected TFTP packet received.
<b>File Already Exists</b>	File already exists.
<b>No Such User</b>	TFTP not supported on host.



---

## Chapter 7. Boot Options

This chapter covers the boot options available. Normally, the device boots from the Integrated Boot Device (IBD). You need to use this chapter only for maintenance or diagnostic operations or for software upgrades.

The boot options allow you to boot the 2210 using the following methods:

Table 13. Description of Boot Methods

Boot Method	Description
IBD	Boot from the IBD using queries. Use this method when the 2210 is configured for a different boot method and you want to boot the 2210 from the IBD instead.
TFTP Host Server	Boot from a load image file on a TFTP host server. Another router can act as a TFTP host server.
BOOTP	Boot over the LAN port using the Bootstrap Protocol.

Additional options available at the boot monitor prompt let you run diagnostics, display configuration information, load configuration memory from a host on the network or through the Service port, clear configuration in SRAM, and download and upload router code through the Service port.

Included in this chapter are the following sections:

- “Before you Begin”
- “Boot Options Available” on page 117
- “Boot Option Prompts” on page 118
- “Configuring the 2210” on page 129

---

### Before you Begin

Before booting the 2210, note the following:

- In order to use the procedures in this chapter, you must have a terminal connected directly to the 2210 (Refer to the *IBM 2210 Nways Multiprotocol Router Installation and Initial Configuration Guide* for an explanation of how to connect a terminal.)
- The 2210 is shipped with the boot file that is stored in the IBD.
- You cannot boot the 2210 over the ISDN interface.
- If you are booting over the Token-Ring interface and there is no Token Ring link active, you receive the following message: `lobe media test failed: function failure.`

**Note:** To stop a 2210 boot, press **Ctrl-C** on the terminal keyboard.

### Booting From the Integrated Boot Device Using a Console Terminal

An example of an IBD boot using a console terminal appears at the end of this procedure. Use this boot method when you have a load image stored in the IBD.

1. The following copyright information should be on the console screen. If necessary, press the **Reset** button, then **Ctrl-C** to display this information.

Bootstrap Monitor V1.0  
(c) Copyright IBM Corp. 1994, 1997

2. Enter **bm** and the console displays the following information and the first boot prompt:

```
PROM Load/Dump Program * Revision: 1.0 *
Copyright IBM Corp. 1994, 1997
```

```
IBD has load(s) load image names
```

```
Device Slot Number or IBD Load Name:
```

3. Enter the load image name. The IBD load name is case-sensitive. Press **Return**. The software is loading when you see this message:

```
Loading using IBD Load Image "ibmMRNS.ldc"
```

## BOOTP Using a Console Terminal

BOOTP tries to boot over all of the installed interfaces using all possible hardware configurations starting with the card that passes its self-test first. This generally occurs in the order Ethernet, and then token ring. For additional information about BOOTP, refer to Chapter 5. The Boot CONFIG Process.

A BOOTP boot is successful when the console displays the following information:

```
PROM Load/Dump Program * Revision: 1.0 *
Copyright IBM Corp. 1994, 1997
```

```
BOOTP Using interface name at (CSR address, vector address)
```

```
Trying connector
```

```
Doing BOOTP
```

```
Trying host IP address
```

```
    file name
```

```
loading
```

```
Copyright IBM Corp. 1994, 1997
```

```
Config Only Mode - Switch Selected
```

```
*
```

The \* indicates that the load image has finished loading.

## Unsuccessful BOOTP

A BOOTP boot fails under the following conditions:

- When the server does not know about the 2210. The console displays the following information:

```
PROM Load/Dump Program * Revision: 1.0 *
Copyright IBM Corp. 1994, 1997
```

```
BOOTP Using interface at (CSR address, vector address)
```

```
Trying connector
```

```
Doing BOOTP           BOOTP timeout
```

```
Auto BOOTP failed
```

The console then displays the prompts to perform a manual boot. Table 15 on page 119 describes these prompts.

- When the server knows about the 2210, but the load file is not present, the console displays the following information:

```
PROM Load/Dump Program * Revision: 1.0 *
Copyright IBM Corp. 1994, 1997
```

```
BOOTP Using interface at (CSR address, vector address)
```

```
Trying connector
```

```
Doing BOOTP
```

```
BOOTP got reply but server sent no filename
```

```
Manual BOOTP failed - Enter @ at prompt BOOTP again
```

Enter @ to retry BOOTP. If the retry fails, use another method to boot the 2210.

## Booting from a TFTP host server using a console terminal

You can use a load image file on a TFTP host server to boot the 2210. Another router can act as a TFTP host server. An example of a TFTP boot is shown below.

1. At the boot monitor prompt, (>), enter **bm** to display the following information and the first boot prompt.

```
PROM Load/Dump Program * Revision: 1.0 *  
Copyright IBM Corp. 1994, 1997
```

```
Device Types available:
```

```
    IBD  
    Token Ring  
    WAN
```

2. The prompts that appear depend on the type of interface you are booting over. See "BM (Boot using console queries)" on page 121 for details on booting an Ethernet, Token Ring, or WAN port. Table 15 on page 119 describes these prompts.

---

## Boot Options Available

Table 14 on page 118 lists the boot options available. Detailed descriptions of the boot process and system prompts follow the table.

## Accessing the Boot Options

1. Begin a load procedure by powering on the device or by typing **reload** at the OPCON (\*) prompt and pressing the **Enter** key.
2. To display the Boot monitor prompt (>), press **Ctrl-C** during a load procedure.
3. At the boot prompt (>), enter **?** to display the boot options. Table 14 on page 118 describes these options.

Table 14. Boot Options

Option	Name	Description
B	Boot using stored Configuration	Boots automatically using the configuration stored in TFTP or in the IBD.
BC	Boot to Config-only Mode using console queries	Displays prompts to manually boot the 2210 and then enters Config-only mode, allowing you to begin configuring the 2210.
BM	Boot using Console Queries	Displays prompts to manually boot the 2210. Table 15 on page 119 describes these prompts.
BN	Boot, but do not run, using console queries	Used by field personnel for debugging. Boots and returns to the Bootstrap Monitor, but does not start the load.
BP	Boot using BOOTP	Displays the prompts to boot using the Bootstrap Protocol.
D	Dump using stored Configuration	This feature is not currently available on the 2210
DIAG	Initiate IBM extended diagnostics	Starts the internal tests. When internal tests are complete, you have the option of continuing with the System Extended Checkout (Internal and External Tests), the WAN/LAN Wrap Menu, or Diagnostic Utilities. You can exit and reboot at any time.
DM	Dump using Console Queries	This feature is not currently available on the 2210.
UB	Display boot Configuration	Displays the static RAM TFTP bootstrap configuration.
UC	Display Hardware Configuration	Displays the information on the hardware configuration including device types, baud rate, memory sizes, base MAC address, part numbers, serial numbers, and revision levels.
UG	Go and Execute at Address in RAM	This option is used by field service personnel.
LC	Load Configuration Memory	Loads configuration memory from a host on the network.
CC	Clear Configuration Memory	Clears the configuration in SRAM.
ZB	ZModem Boot	Downloads and uploads router code through the service port.
ZC	ZModem Configuration Memory Load	Loads configuration memory through the service port.

---

## Boot Option Prompts

The following section explains each of the boot options in detail.

Table 15 on page 119 describes the prompts that appear when you boot the 2210. These prompts vary depending on your hardware configuration and the software loaded on the 2210.



Table 15. Boot Option Prompts

Prompt	Description
Device Type	The device type over which to boot the 2210; either the IBD, the Token-ring, or Ethernet interface.
IBD Loadname	The IBD loadname, which can include up to 79 characters, digits, and symbols and is case-sensitive. For initial installations, enter the filename in the Release Notes (file README.NTS that is on the backup software diskettes.)
Interface IP Address	The IP address of the 2210 interface over which you are booting.
IP Mask	A hexadecimal value that separates the IP network addresses from the other IP address fields. All bits that are part of the network and subnet should be 1.
Boot From Host	IP address of the host from which you are booting.
Via gateway	If the host from which you are booting is on another (sub)network, there is an intermediate router. Enter the IP address of the intermediate router.
Load Image Name	For initial installations, enter the load image name noted in the in the Release Notes (file README.NTS that is on the backup software diskettes.)
Boot File Name	Full pathname of where the load image file resides on the host server. For example, /usr/local/ibm2210.ldc (UNIX example).
<b>Ethernet Prompts</b>	
Connector Type (AUI/RJ45)	Enter one of the following to specify the cable type connected to this port:  <b>AUI</b> Thick/AUI (10BASE5) <b>RJ45</b> Unshielded Twisted Pair (10BASE-T) <b>AUTOCONFIG</b> Automatically senses the cable type
<b>Token Ring Prompts</b>	
Speed (4/16)Mb	Enter <b>4</b> or <b>16</b> to represent the token ring media transfer rate in Mbps (megabits per second). <b>Note:</b> The value you enter must match the speed of the ring that you are using.
Media (UTP/STP)	Enter one of the following to specify the cable type connected to this interface:  <b>UTP</b> Unshielded Twisted Pair <b>STP</b> Shielded Twisted Pair
<b>WAN Prompts</b>	
WAN port	WAN port over which you are booting the 2210, either <b>1</b> or <b>2</b> .
Timeout (secs)	How long, in seconds, the interface tries to boot over the network. The timeout must be greater than 5.
Clock Source (INT/EXT)	To connect to a: <ul style="list-style-type: none"> <li>• Modem or DSU, enter <b>EXT</b> for external clocking.</li> <li>• DTE device, use a DCE cable and enter <b>INT</b> for internal clocking.</li> </ul>
Internal Clock Speed	This prompt appears only if you enter <b>INT</b> as the Clock Source. The range is 1 to 10 000 000.

Table 15. Boot Option Prompts (continued)

Prompt	Description
Cable Type (X21/Other)	Enter <b>X21</b> to connect an X.21 cable to this port. Enter <b>other</b> to connect any other cable type to this port.

## B (Boot)

Boots the router automatically using the configuration stored in configuration memory. This option causes the router to boot from the IBD unless the configuration is stored on a TFTP host.

## BC (Boot in Config-only Mode)

Boots the 2210 and immediately enters Config-only mode. The following examples show how to boot the 2210 over the IBD and over the Token-Ring, Ethernet, and WAN interfaces. User entries are shown in bold. To accept the defaults shown in brackets, press **Enter**.

**Note:** In the sample interface dialog shown below, the device's interface type appears as either Token Ring or Ethernet in the Device Types listing and at the Device Type prompt.

Enter **bc** at the boot prompt (>). The software prompts you for the following router information:

Device Types available:

```

IBD
Token Ring/Ethernet
WAN
Device Type [WAN]: IBD

```

- If you enter **IBD**, you see the following:

```

IBD has load(s) loadname
IBD Load Name: loadname

```

To reload the current configuration, press **Enter**.

```

Loading using IBD Load Image "load name"

```

If you specify an incorrect or non-existent load name, the system issues the message: No such load and returns you to the IBD Load Name prompt.

- If you enter **Token Ring**, you see the following:

```

Media (UTP/STP) [UTP]:
Speed (4/16)Mb [16Mb]:
Interface IP address: 123.175.23.119
IP Mask (FFFFFF00):
Boot from host: 123.175.68.190
Via gateway: 123.175.23.213
Boot file name: ibmMRNS.ldc

```

```

Using Token Ring at (6000000, 0).
Trying host 123.175.68.190 via 123.175.23.213
file ibmMRNS.ldc

```

```

.loading
.....

```

```

Starting at 1040010

```

The Standalone Configuration Process. You are here because the watchdog timer timed out and/or Autoboot not selected.

Config (only)>

If there is no Token-Ring link active, you receive the following message:

lobe media test failed: function failure

- If you enter **Ethernet**, you see the following:

```
Connector Type (AUI/RJ45)[AUTO_CONFIG]:
Interface IP Address: 123.175.56.119
IP Mask (FFFFFF00):
Boot from host: 123.175.68.213
Via Gateway: 123.175.56.190
Boot File Name: ibmMRNS.ldc
```

```
Using Ethernet at (6000000, 0)
Trying host 123.175.68.213 via 123.175.56.190
file ibmMRNS.ldc
```

```
.loading
.....
```

Starting at 1040010

The Standalone Configuration Process. You are here because the watchdog timer timed out and/or Autoboot not selected.

Config (only)>

- Booting over a WAN

If there is no CTS signal active on the WAN port that you specify, you will receive the following message: CTS not active on WAN port #

**Note:** The PPP protocol is currently the only data link layer protocol that can be used when booting over a WAN interface.

## BM (Boot using console queries)

Boots using console queries. The following examples show how to boot the 2210 over the IBD and over the Token Ring, Ethernet, and WAN interfaces. User entries are shown in bold. To accept the defaults shown in brackets, press **Enter**.

You can also use this option to boot from a load image file on a TFTP host server.

**Note:** In the sample interface dialog that follows, the interface type specific to the 2210 appears as either Token Ring or Ethernet in the Devices Types listing and at the Device Type prompt.

Enter **bm** at the boot prompt (>). The software prompts you for the following router information:

Device Types available:

```
IBD
Token Ring/Ethernet
WAN
```

Device Type [Token Ring/Ethernet]: **IBD**

- If you enter **IBD**, you see the following:

```
IBD has load(s) load image name
IBD Load Name: load image name
```

To reload the current configuration, press **Enter**. To load another configuration, enter the load name at the prompt.

```
Loading using IBD Load Image "load name"
```

If you specify an incorrect or nonexistent load name, the system issues the following message: No such load and returns you to the IBD Load Name prompt.

- If you enter **Token Ring**, a configuration dialog similar to the following appears on your console.

**Note:** If the host you specify is not directly accessible by the router, the software will prompt you to enter the IP address of the gateway. This prompt is shown below in parentheses.

```
Media (UTP/STP) [UTP]:
Speed (4/16)Mb [16Mb]:
Interface IP address: 123.175.56.119
IP Mask (FFFFFF00):
Boot from host: 123.175.68.213
Via Gateway: 123.175.56.190
Boot File Name: ibmMRNS.ldc
```

```
Using Token Ring at (6000000, 0).
Interface configured for 16Mbps & UTP
Trying host 123.175.68.213 via 123.175.56.190
file ibmMRNS.ldc
loading
.....
```

```
Starting at 1040000
```

```
Copyright Notices:
Copyright IBM Corp. 1994, 1997
```

```
MOS Operator Console
```

```
For help using the Command Line Interface, press ESCAPE, then '?'
*
```

- If you enter **Ethernet**, you see the following:

```
Connector Type (AUI/RJ45)[AUTO_CONFIG]:
Interface IP Address: 123.175.56.119
IP Mask (FFFFFF00):
Boot from host: 123.175.68.213
Via Gateway: 123.175.56.190
Boot File Name: ibmMRNS.ldc
```

```
Using Ethernet at (6000000, 0)
Trying host 123.175.68.213 via 123.175.56.190
file ibmMRNS.ldc
```

```
.loading
.....
```

```
Starting at 1040000
```

```
Copyright Notices:
Copyright IBM Corp. 1994, 1997
```

```
MOS Operator Console
```

```
For help using the Command Line Interface, press ESCAPE, then '?'
*
```

- Booting over a WAN

If there is no CTS signal active on the WAN port that you specify, you will receive the following message: CTS not active on WAN port #

**Note:** The PPP protocol is currently the only data link layer protocol that can be used when booting over a WAN interface.

## BN (Boot, But Do Not Run, Using Console Queries)

Do not use this boot option. This option is used by field service personnel only.

## BP (Boot using BOOTP)

Boots using the Bootstrap Protocol. The following example shows how to boot the 2210. User entries are shown in bold. To accept the defaults shown in brackets, press **Enter**.

**Note:** In the following sample interface dialog, the device's interface type appears as either Token-Ring or Ethernet in the Device Types listing and at the Device Type prompt.

Enter **bp** at the boot prompt (>). The software prompts you for the following router information:

Device Types available:

Token Ring/Ethernet  
Device type (for BOOTP) [Token Ring]:

- If you enter **Token Ring**, you see the following:

Media (UTP/STP) [UTP]:  
Speed (4/16)Mb [16Mb]:

```
BOOTP Using Token Ring at (6000000, 0).  
Doing BOOTP o  
Interface configured for 16Mbps & UTP  
Trying host 123.175.68.213 via 123.175.56.190  
file load image name  
.loading  
.....
```

```
Copyright Notices:  
Copyright IBM Corp. 1994, 1997
```

```
MOS Operator Control  
*
```

- If you enter **Ethernet**, you see the following:

Connector Type (AUI/RJ45) [AUTO\_CONFIG]:

```
BootP Using Ethernet at (6000000, 0)  
Doing BootP o o o o  
Trying host 123.175.68.213 via 123.175.56.190  
file load image name  
.loading  
.....
```

```
Copyright Notices:  
Copyright IBM Corp. 1994, 1997
```

```
MOS Operator Control  
*
```

A BOOTP boot is successful when the terminal displays the OPCON (\*) prompt.

## Unsuccessful BOOTP

A BOOTP boot fails if the server is down, if the server cannot find the file you specified, or if TFTP fails. If BOOTP is unsuccessful, the terminal displays the message

```
Manual BOOTP failed - enter "@" at prompt to BOOTP again.
```

Enter @ to retry BOOTP. If the retry fails, use another method to boot the 2210.

## D (Dump using stored configuration)

Writes the contents of system memory to a file when a system failure occurs. If the unique naming capability is enabled, the router automatically appends a character string to the dump filename. Using this command prevents an existing dump file from being overwritten by subsequent dumps. For information about how to enable unique naming, refer to page 105.

Enter **d** at the boot prompt (>). The screen displays the following information:

```
PROM Load/Dump Program * Revision 1.0
Copyright IBM Corp. 1994, 1997
Host 325.321.62.763 loading

Using Token Ring/Ethernet (00000, 0)
Trying host 235.211.62.243 via 123.192.23.243
  file load image name

Loading

Starting at 1040000
```

If the dump fails, you will receive a **Dump failed** message with a brief explanation of the cause of the failure.

## DIAG (Execute IBM Extended Diagnostic Program)

Initiates internal self-test. When internal self-test is complete, you can select any of the extended diagnostics utilities provided. To run any of the extended diagnostics tests, you need the extended diagnostics Service Kit, feature code 2532. The kit includes all the necessary wrap plugs for the LAN, serial, and service ports.

1. Enter **diag** at the boot prompt (>) to execute the internal self-test. The screen displays a message similar to the following:

```
Starting at 1FF00

Starting Hardware Diagnostics
  Version: XXXXXX XXXXXX

Testing System Internal

System Checkout: All Systems Pass

Press space to continue.....
```

2. Press the space bar to get to the next level of diagnostic tests. To execute these tests you must remove the cables from the network and attach the

appropriate wrap plug(s). Follow the instructions included in the extended diagnostics Service Kit for installing the wrap plugs.

If you try to execute one of these tests without the wrap plugs installed, you receive the following message:

```
You have selected a test that requires external wrap
plugs to be present. Remove the cable(s) from the
network, and attach the appropriate wrap plug(s).
```

3. Press the space bar to select one of the diagnostic options available and follow the instructions provided with the extended diagnostics Service Kit.

```
Diagnostic Main Menu (c) 1994
```

- 1) System Checkout (Internal Tests)
  - 2) System Extended Checkout (Internal and External Tests)
  - 3) WAN/LAN Wrap Menu
  - 4) Diagnostic Utilities
- x) Exit (and Reboot)

## DM (Dump using Console Queries)

Displays prompts to manually configure the network dump information.

Enter **dm** at the boot prompt (>).

The screen displays the following information:

```
PROM Load/Dump Program * Revision 1.0
Copyright IBM Corp. 1994, 1997
Host ??? loading
```

```
Using Token Ring/Ethernet (00000, 0)
Trying host 0.0.0.0 via 0.0.0.0
file load image name
```

```
loading
```

```
Starting at 1040000
```

If the dump fails, you will receive a **Dump failed** message with a brief explanation of the cause of the failure.

## UB (Display TFTP Boot Configuration)

Displays the static RAM TFTP bootstrap configuration including:

- Host name
- Whether dumping is enabled or disabled
- Whether the unique naming capability is enabled or disabled
- Interface IP address, type of interface, and mask
- Boot file name
- Host IP address
- Gateway IP address

If you have created dump files, UB also displays the dump file name and IP address of the host on which the dump files reside and the IP address of the intermediate gateway, if applicable.

To display this information: Enter **ub** at the boot prompt (>). The screen displays information similar to the example shown below.

```
TFTP bootstrap configuration:
  Host ibmMRNSV1 - .191, Dumping disabled, Unique dump naming off
Interface Addresses:
  1: 128.196.145.191 on port 0 (Token Ring/Ethernet), mask FFFF00
Boot Files
  1: ibmMRNS.ldc on 123.175.68.213 via 123.175.56.190 for 20 secs
  2: r15.1.ldc on 123.175.68.213 via 123.175.56.190 for 20 secs
  3: ibmMRNS-univ.ldc on 123.175.68.213 via 123.175.56.190 for 20 secs
Dump Files:
  1: "gw/ibmMRNS.dmp" on 123.175.68.213 via 123.175.56.190 for 20 secs
>
```

## UC (Display Hardware Configuration)

Displays the following information:

- Device types available
- Console baud rate
- Size of main memory and IBD in number of Mbytes
- Base MAC address
- Router serial number
- System card serial number
- Model number
- System card part number
- System card revision (ECO) level
- Platform revision

**Note:** Each 2210 is programmed at the factory with a Base MAC address in Ethernet order. If you have a Token-Ring unit, the 2210 converts the address to Token-Ring order. However, the **uc** command displays the address in Ethernet order.

Enter **uc** at the boot prompt (>). The screen displays information similar to the following:

```
Boot device types available:
  IBD
  Token Ring
  WAN

Console Baud Rate:      9600 (Autobaud)
Main Memory size:      8 MB
IBD (flash Memory) size: 4 MB
Base MAC Address:      000093808068
System Part Number     04H7063
System Serial Number   55554000008
System EC Level        D50514
System Card Part Number 13H7771
System Card Serial Number 110653
System EC Level        C99200B
```

## UG (Go execute at address in RAM)

This option is used only by your service representative.



## LC (Load Configuration Memory)

Loads configuration memory from a host on the network. To use this option, do the following:

Enter **lc** at the boot prompt (>). The screen displays information similar to the following:

Device Types available:

```
IBD
Token Ring/Ethernet
WAN
```

Device type [Token Ring]:

- If you enter **Token Ring**, you will see the following:

```
Media (UTP/STP) [UTP]:
Speed (4/16)Mb [16Mb]:
Interface IP address: 123.175.56.119
IP Mask (FFFFFF00):
Load Cfg from host: 123.175.68.213
Via gateway: 123.175.56.190
Config File Name: ibmMRNS.cfg
```

```
Using Token Ring at (6000000, 0).
Trying host 123.175.68.213 via 123.175.56.190
file ibmMRNS.cfg
```

```
.loading
Receiving config memory image
.....
```

Starting at 1040000

```
Copyright Notices:
Copyright IBM Corp. 1994, 1997
```

```
MOS Operator Control
*
```

- If you enter **Ethernet**, you see the following:

```
Connector Type (AUI/RJ45)[AUTO_CONFIG]:
Interface IP address: 123.175.56.119
IP mask (FFFFFF00):
Load Cfg from host: 123.175.68.219
Via gateway: 123.175.56.190
Config file name: ibmMRNS.cfg
```

```
Using Ethernet at (6000000, 0).
Trying host 123.175.68.219 via 123.175.56.190
file ibmMRNS.cfg
```

```
.loading
Receiving config memory image
.....
```

Starting at 1040000

```
Copyright Notices:
Copyright IBM Corp. 1994, 1997
```

```
MOS Operator Control
*
```

- If you enter **WAN**, you see the following:

```

WAN port [2]:
Timeout (secs) [20] ?
Clock Source (INT/EXT) [INT]:
Internal Clock Speed 1
Interface IP address: 123.175.56.119
IP mask [FFFFFF00]:
Load Cfg from host: 123.175.68.219
Via gateway: 123.175.56.190
Config file name: ibmMRNS.cfg

Using Serial Line at ( 0, 0).
Trying host 123.175.68.219 via 123.175.56.190
file ibmMRNS.cfg

.loading
Receiving config memory image
.....
Starting at 1040000

Copyright Notices:
Copyright IBM Corp. 1994, 1997

MOS Operator Control
*
```

## CC (Clear Configuration Memory)

**Attention:** Issuing this command will cause all configuration information to be lost.

This command clears the configuration in memory. Enter **cc** at the boot prompt (>). The software prompts you for basic router information as follows:

Are you sure you want to clear config memory?

## ZB (ZModem Boot)

Downloads and uploads router code through the console port.

1. Enter **ZB** at the boot prompt (>) and the console displays:  
Are you sure you want to load via the console?
2. Enter **y** and the console displays the message:  
Okay, GO!!
3. Press **Return** to start the operation. The operation is completed when the system prompt (>) appears on the screen.

**Note:** Refer to the documentation supplied with your ZModem software for the ZModem commands to use at your console terminal.

## ZC (ZModem configuration memory load)

Loads configuration memory through the console port.

**Note:** This option requires that the remote boot server support ZModem software.

1. Enter **ZC** at the boot prompt (>). The console displays the following prompt:  
Are you sure you want to load config memory via the console?
2. Enter **y**. The console displays the message:  
Okay, GO!!
3. Press **Return** to start the operation. The operation is completed when the boot prompt appears on the screen.

4. Enter **n** to return to the OPCON prompt.

**Note:** Refer to the documentation supplied with your ZModem software for the ZModem commands to use at your console terminal.

---

## Configuring the 2210

After the 2210 has booted, you can configure it. The sections that follow briefly describe the configuration processes available when using an **ASCII terminal**.

**Note:** You can also use the IBM Nways Multiprotocol Routing Services Configuration Program (Configuration Program), to configure the 2210. The Configuration Program is run on a **stand-alone workstation** and has a graphical user interface. Once pre-configuration or Quick Configuration has taken place, you can use the Configuration Program to configure the 2210 completely.

Begin the configuration process as follows:

1. At the \* prompt, enter **status** to display the PID (process ID) of Config.

Pid	Name	Status	TTY	Comments
1	COpCN1	RDY	TTY0	
2	Monitr	DET	--	
3	Tasker	RDY	--	
4	MOSDDT	DET	--	
5	CGWCon	DET	--	
6	Config	DET	--	
7	ROpCN1	IDL	TTY1	128.185.133.2
8	ROpCN2	RDY	TTY2	128.185.134.50

2. Enter **talk** and the PID. From the output in 1, you would enter

```
* talk 6
```

Press **Return**. This displays the following information:

```
Gateway user configuration
Config>
```

3. You can now configure the interfaces, boot records, bridging and routing protocols using one of the following processes:

- The **Quick Configuration Process** allows you to configure selected devices, bridging protocols, and routing protocols by responding to the Quick Configuration prompts. After creating a minimal configuration, you must transfer a complete configuration to the 2210 using TFTP.

Enter **qc** at the `Config>` prompt to begin the Quick Configuration process.

- **CONFIG Process** allows you to configure all bridging and routing protocols, interfaces, and boot records by entering commands at the `Config>` prompt.

To configure the protocols using the CONFIG process, refer to the specific protocol chapters in the *Protocol Configuration and Monitoring Reference*. To configure other parameters including the interfaces and boot records, refer to the appropriate configuration chapters in this book.



---

## Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands

This chapter describes the GWCON process and includes the following sections:

- “What is GWCON?”
- “Entering and Exiting GWCON”
- “GWCON Commands” on page 132

---

### What is GWCON?

The Gateway Console (monitoring) process, GWCON (also referred to as CGWCON), is a second-level process of the device user interface.

Using GWCON commands, you can:

- List the protocols and interfaces currently configured in the device.
- Display memory and network statistics.
- Set current Event Logging System (ELS) parameters.
- Test a specified network interface.
- Communicate with third-level processes, including protocol environments.
- Enable and disable interfaces.

The GWCON command interface is made up of levels called modes. Each mode has its own prompt. For example, the prompt for the SNMP protocol is `SNMP>`.

If you want to know the process and mode you are communicating with, press **enter** to display the prompt. Some commands in this chapter, such as the **network** and **protocol** commands, allow you to access the various modes in GWCON.

---

### Entering and Exiting GWCON

To enter GWCON from OPCON (\*), choose one of the following methods:

1. Enter the OPCON **console** command:  
\* `console`
2. At the OPCON prompt, enter the **status** command to find the PID of GWCON. (See page 9 for a sample output of the **status** command.)

\* `status`

Then, enter the **talk** command followed by the PID number for GWCON:

\* `talk 5`

The console displays the GWCON prompt (+). If the prompt does not appear, press **enter**. Now you can enter GWCON commands.

To return to OPCON, enter the OPCON intercept character. (The default is **Ctrl-P**.)

### GWCON Commands

This section contains the GWCON commands. Each command includes a description, syntax requirements, and an example. The GWCON commands are summarized in Table 16.

To use the GWCON commands, access the GWCON process by entering **talk 5** and enter the GWCON commands at the (+) prompt.

Table 16. GWCON Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Activate	Enables a newly configured spare interface.
Boot	Displays information about how the device was booted last.
Buffer	Displays information about packet buffers assigned to each interface.
Clear	Clears network statistics.
Configuration	Lists status of the current protocols and interfaces.
Disable	Takes the specified interface off line.
Environment	Enters the Environment system console. Displays the current temperature and issues an alert when the temperature threshold, high or low, is passed.
Error	Displays error counts.
Event	Enters the Event Logging System environment.
Fault	Displays information about the last system fault.
Feature	Provides access to console commands for independent device features outside the usual protocol and network interface console processes.
Interface	Displays network hardware statistics or statistics for the specified interface.
Log	Sets or views the logging level for events not included in the Event Logging System.
Memory	Displays memory, buffer, and packet data.
Network	Enters the console environment of the specified network.
Performance	Provides a snapshot of the main processor utilization statistics.
Protocol	Enters the command environment of the specified protocol.
Queue	Displays buffer statistics for a specified interface.
Reset	Disables the specified interface and then re-enables it using new interface, protocol and feature configuration parameters.
Statistics	Displays statistics for a specified interface.
Test	Enables a disabled interface or tests the specified interface.
Uptime	Displays time statistics for the device.

## Activate

Use the **activate** command to enable a spare interface on this device. See “Configuring Spare Interfaces” on page 48 for more information.

### Syntax:

**activate** *interface#*

## Boot

Use the **boot** command to display boot information for this device.

### Syntax:

**boot**

### Example 1:

```
boot
Booted using Ethernet, line 0 at (80740000, 4) as 128.185.227.220
Filename vl.ldc
Host 128.185.122.17, Gateway 128.185.227.15
```

In the first example, the device was booted using TFTP over Ethernet. The message indicates the method of booting, the line number, the CSR (Command and Status Register) address, the IP address, the filename, the host, and the gateway. The *line number* distinguishes one port from another on a multiport board. The *CSR address* (the first of the two values in parentheses) identifies which interface board slot was used to boot the device.

The *IP address* listed after “as” (128.185.227.220 in this example) indicates which IP address the device used as its own IP address. The *Filename* is the name of the file that has the load image. The IP address listed after *Host* is the IP address of the server where the file is stored. The *Gateway*, if listed, is the device that routes the requests and responses between the server and the device that is booting.

### Example 2:

```
boot
Manual Booted using Integrated Boot Device Loadname vl.ver1
```

In the second example, the device was booted manually using the Integrated Boot Device (IBD). *Manual* indicates that the boot information was entered manually at boot time.

## Buffer

Use the **buffer** command to display information about packet buffers assigned to each interface or range of interfaces.

**Note:** Each buffer on a device is the same size and is dynamically built. Buffers vary in size from one device to another.

To display information about one interface only, enter the interface or network number as part of the command. To obtain the interface number, use the GWCON **configuration** command.

### Syntax:

**buffer** [*network# or range\_of\_network#*]

To display information about multiple interfaces, specify the *range\_of\_network#* (or a combination of *network#* and *range\_of\_network#*). For example, specifying **buffer 0 3 25-50** displays the information for nets 0, 3, and 25 through 50.

### Example:

## GWCON Commands

### buffer

Nt	Interface	Input Buffers:				Buffer sizes:						
		Req	Alloc	Low	Curr	Hdr	Wrap	Data	Trail	Total	Bytes	Alloc
0	TKR/0	20	20	7	0	109	92	2052	7	2260	45200	
1	PPP/0	20	20	7	20	109	92	2052	7	2260	45200	
2	PPP/1	10	10	4	0	108	92	2048	0	2248	22480	

**Nt** Network interface number associated with the software.

### Interface

Type of interface.

### Input Buffers:

**Req** Number of receive buffers requested. This is either the device's default number of receive buffers or a valid value set with the CONFIG (Talk 6) **set receive-buffers** command.

### Notes:

1. If this column is 0 for an interface, then this is a virtual interface for which receive buffers are not allocated. In this case, the virtual interface uses the receive buffers of the device that it is mapped to. For example, a dial circuit interface uses the receive buffers of its base net or interface.
2. If you specify a value on the CONFIG **set receive-buffers** command that is not supported by the device, then the number of buffers requested is equal to the device's default number of receive buffers.

**Alloc** Number of receive buffers allocated.

**Note:** The number of receive buffers allocated is less than the number of receive buffers requested if there is not enough memory available to allocate the requested number of buffers.

**Low** The device's low threshold for receive buffers. When the current number of receive (input) buffers for an interface is less than the interface's low threshold, the packet is eligible for flow control (dropping). See the description of the GWCON (Talk 5) **queue** command for more details on flow control. The low threshold is configurable using the CONFIG (Talk 6) **set input-low-water** command.

**Curr** Current number of buffers on this device. The value will be 0 if the device is disabled. When a packet is received, if the value of *Curr* is below *Low*, then the packet is eligible for flow control. (See the **queue** command for conditions.)

### Buffer Sizes:

**Hdr** Sum of the maximum hardware, MAC, and data link headers.

**Wrap** Allowance given for MAC, LLC, or Network layer headers due to protocol wrapping.

**Data** Maximum data link layer packet size.

**Trail** Sum of the largest MAC and hardware trailers.

**Total** Overall size of each packet buffer.

### Bytes Alloc

Amount of buffer memory for this device. This value is determined by multiplying the values of *Alloc* x *Total*.



## Clear

Use the **clear** command to delete statistical information about one or all of the device's network interfaces. This command is useful when tracking changes in large counters. Using this command does not save space or speed up the device.

Enter the interface (or net) number as part of the command. To get the interface number, use the GWCON **configuration** command.

### Syntax:

**clear** *interface# or range\_of\_interface#*

To clear information about multiple interfaces, specify the *range\_of\_network#* (or a combination of *interface#* and *range\_of\_interface#*). For example, specifying **clear 0 3 25-50** clears the information for nets 0, 3, and 25 through 50.

## Configuration

Use the **configuration** command to display information about the protocols and network interfaces. The output is displayed in three sections, the first section lists the device identification, software version, boot ROM version, and the state of the auto-boot switch. The second and third sections list the protocol and interface information.

### Syntax:

**configuration**

To display information about multiple interfaces, specify the *range\_of\_network#* (or a combination of *network#* and *range\_of\_network#*). For example, specifying **configuration 0 3 25-50** displays the information for nets 0, 3, and 25 through 50.

### Example:

**configuration**

```
Multiprotocol Routing Services

2210-MRS Feature 3768 V3.2 Mod 0 PTF 0 RPQ 0 MRS.E00 cc4 2a
Boot ROM version 1.20 Watchdog timer enabled Auto-Boot enabled
Time: 15:46:12 Friday September 20, 1996 Console baud rate: 9600
```

```
Num Name Protocol
0 IP DOD-IP
3 ARP Address Resolution
11 SNMP Simple Network Management Protocol
12 OSPF Open SPF-Based Routing Protocol
23 ASRT Adaptive Source Routing Transparent Enhanced Bridge
26 DLS Data Link Switching
```

```
Num Name Feature
2 MCF MAC Filtering
```

```
3 Networks:
Net Interface MAC/Data-Link Hardware State
0 TKR/0 Token-Ring/802.5 Token-Ring Up
1 Eth/0 Ethernet/IEEE 802.3 Ethernet/802.3 Up
2 PPP/0 Point to Point SCC Serial Line Up
```

- The first line gives the product name.
- The second line lists the program/product number, Feature Number, Version, Release, PTF and RPQ information.

## GWCON Commands

- The third line displays the version of the Boot PROM (Programmable Read Only Memory) that is currently installed in the router, and the current settings of the Watchdog Timer and Autoboot switches.
- The fourth line displays the date and time, and the current console baud rate settings for DTE and DCE, respectively.
- The remaining lines list the configured protocols, followed by the configured features.

The following information is displayed for protocols:

**Num** Number that is associated with the protocol.

**Name** Abbreviated name of the protocol.

**Protocol**

Full name of the protocol.

The following information is displayed for features:

**Num** Number associated with the feature.

**Name** Abbreviated name of the feature.

**Feature**

Full name of the feature.

The following information is displayed for networks:

**Net** Network number that the software assigns to the interface. Networks are numbered starting at 0. These numbers correspond to the interface numbers discussed under the CONFIG process.

**Interface**

Name of the interface and instance of this type of interface.

**MAC/Data Link**

Type of MAC/Data link configured for the interface.

**Hardware**

Specific kind of interface by hardware type.

**State** Current state of the network interface.

**Testing**

Indicates that the interface is undergoing a self-test. Occurs when the device is first started, when a problem is detected on the interface, or when the **test command** is used.

When an interface is operational, the interface periodically sends out maintenance packets and/or checks the physical state of the port or line to ensure that the interface is still functioning correctly. If the maintenance fails, the interface is declared down and a self-test is scheduled to run in 5 seconds. If a self-test fails, the interface transitions to the down state and the interval until the next self-test is increased up to a maximum of 2 minutes. If the self-test is successful, the network is declared up.

**Up** Indicates the interface is operational.

**Down** Indicates that the interface is not operational and has failed a self-test. The network will periodically transition to the testing state to determine if the interface can become operational again.

### Disabled

Indicates that the interface is disabled. An interface can be disabled by the following methods:

- An interface can be configured as disabled using the CONFIG **disable** command. Each time the device is reinitialized, the interface's initial state will be disabled. It will remain in the disabled state until an action is taken to enable it.
- An interface can be disabled using the GWCON **disable** command. This method is temporary because the interface will revert to its configured state (enabled or disabled) when the device is reinitialized.
- The network manager can disable the interface through SNMP. This method is temporary because the interface will revert to its configured state (enabled or disabled) when the device is reinitialized.

When an interface is disabled, it remains disabled until one of the following methods is used to enable it:

- The GWCON **test** command is used to start a self-test of the interface.
- The network manager initiates a self-test of the interface through SNMP.

WAN Reroute also can change the state of a disabled interface. If an interface is configured as an alternate interface for WAN Reroute and its configured state is disabled, WAN Reroute will start a self-test of the interface when the primary interface goes down. When the primary interface is operational and stable again, WAN Reroute puts the alternate interface back to its configured state. Refer to The WAN Reroute Feature in *Using and Configuring Features* for more information.

### Available

Indicates that the interface has been configured as a secondary WAN Restoral interface and it is available to back up the primary interface.

### Not Present

Indicates that the interface's adapter is not plugged in.

Not Present is also used as the state for a null device. Spare interfaces are displayed as null devices until they are activated.

### HW Mismatch

Indicates that the configured adapter type does not match the adapter type that is actually present in the slot.

## Disable

Use the **disable** command to take a network interface off-line, making the interface unavailable. This command immediately disables the interface. You are not prompted to confirm, and no verification message displays. If you disable an interface with this command, it remains disabled until you use the GWCON **test** command or an OPCON **restart** or **reload** command to enable it.

## GWCON Commands

Enter the interface or net number as part of the command. To obtain the interface number, use the GWCON **configuration** command.

**Note:** If the interface you are disabling is configured as an alternate WAN Reroute interface, you are asked if you want to disable any WAN Reroute primary/alternate pairings that include this alternate interface. If you answer *yes*, the interface is disabled and is no longer available to backup a primary interface. If you answer *no*, the alternate interface is disabled but WAN Reroute will attempt to bring it up if its corresponding primary interface goes down. See The WAN Reroute Feature, Using WAN Restoral, and Configuring and Monitoring WAN Restoral in the *Using and Configuring Features* for additional information.

### Syntax:

**disable**                                    interface *interface#*

## Environment

**Note:** Invoke this command **only** for routers with two service ports.

Displays the ENV> prompt, which has three available commands: **list**, **reset-max-min**, and **exit**. Type **exit** to return to the + prompt.

In extreme temperature conditions, the temperature chip holds the router in a reset state, preventing it from operating. To ensure correct operation of the router due to temperature conditions, the temperature chip allows the router to operate in the range -55°C to 85°C. This is not the operational range.

The temperature chip shuts off the router at 85°C (185°F) or above and does not come back on until it is 80°C (176°F) or below. Only heat affects the chip. It does not cause the router to reset on cold conditions. Minus 55°C (-67°F) is the lowest temperature the chip registers.

### Syntax:

**environment**

The **list** command displays a status screen with the current temperature, the amount of time between successive temperature readings, the noted maximum and minimum seen since the last reset/clear, and alerts when the temperature threshold, high or low, has been passed, as well as the hysteresis value.

### Example:

ENV>**list**

Time: 14:23:12      Sunday, January 09 2011

Current Ambient Temperature: 44C (111F)

Recalculate temperature approx. every 60 seconds.

Maximum: 48C (118F) at 11:47:32      Friday,      January 07 2011

Minimum: 40C (104F) at 15:24:21      Saturday,    January 08 2011

Last Max/Min Reset:      09:21:17      Thursday,    January 06 2011

High Temperature Alarm Threshold: 85C (185F)

Low Temperature Alarm Threshold: -55C (-67F)

(Hysteresis value: +/- 5C)

The **reset-max-min** command sets the value of the last recorded maximum and minimum to the current temperature. This is similar to resetting a standard high-low thermometer.

**Example**

**reset-max-min**

Maximum and Minimum Temperature reset to current ambient temperature: 44C (111F)

## Error

Use the **error** command to display error statistics for the network. This command provides a group of error counters.

**Syntax:**

**error** [network# or range\_of\_network#]

To display information about multiple interfaces, specify the range\_of\_network# (or a combination of network# and range\_of\_network#). For example, specifying **error 0 3 25-50** displays the information for nets 0, 3, and 25 through 50.

**Example:**

**error**

Nt	Interface	Input Discards	Input Errors	Input Unk	Input Proto	Input Flow Drop	Output Discards	Output Errors
0	TKR/0	0	0	0	0	0	0	0
1	PPP/0	0	0	0	0	0	0	0
2	PPP/1	0	0	0	0	0	0	0

**Nt** Network interface number associated with the software.

**Interface**

Type of interface.

**Input Discards**

Number of inbound packets which were discarded even though no errors were detected to prevent their being deliverable to a higher-layer protocol. The packets may have been discarded to free buffer space.

**Input Errors**

Number of packets that were found to be defective at the data link.

**Input Unk Proto**

Number of packets received for an unknown protocol.

**Input Flow Drop**

Number of packets received that are flow controlled on output.

**Output Discards**

Number of packets that the device chose to discard rather than transmit due to flow control.

**Output Errors**

Number of output errors, such as attempts to send over a network that is down or over a network that went down during transmission.

**Note:** The sum of the discarded output packets is not the same as input flow drops over all networks. Discarded output may indicate locally originated packets.

## GWCON Commands

### Event

Use the **event** command to access the Event Logging System (ELS) console environment. This environment is used to set up temporary message filters for troubleshooting purposes. All changes made in the ELS console environment will take effect immediately, but will go away when the device is reinitialized. See “Chapter 10. Using the Event Logging System (ELS)” on page 151 for information about the Event Logging System and its commands. Use the **exit** command to return to the GWCON process.

**Syntax:**

event

### Fault

Use the **fault** command to display information about the last system fault. This diagnostic information can help your service representative trace recurring system errors. Output that is generated is for use by the service representative only.

**Syntax:**

fault

### Feature

Use the **feature** command to access console commands for specific 2210 features outside of the protocol and network interface console processes.

Enter a question mark after the **feature** command to obtain a listing of the features available for your software release.

To access that feature’s console prompt, enter the **feature** command at the GWCON prompt followed by the feature number or short name. Table 7 on page 71 lists available feature numbers and names.

Once you access the prompt for that feature, you can begin entering specific commands to monitor that feature. To return to the GWCON prompt, enter the **exit** command at the feature’s console prompt.

**Syntax:**

feature *feature# or feature-short-name*

### Interface

Use the **interface** command to display statistical information about the network interfaces (for example, Ethernet). This command can be used without a qualifier to provide a summary of all the interfaces (shown in the following output) or with a qualifier to reveal detailed information about one specific interface.

Descriptions of detailed output for each type of interface are provided in the specific interface *Monitoring* chapters found in this guide. To obtain the interface number, use the GWCON **configuration** command.

**Syntax:**

**interface** [interface# or range\_of\_interface#]

To display information about multiple interfaces, specify the range\_of\_network# (or a combination of *interface#* and *range\_of\_interface#*). For example, specifying **interface 0 3 25-50** displays the information for nets 0, 3, and 25 through 50.

**Example: interface**

Nt	Nt'	Interface	CSR	Vec	Self-Test Passed	Self-Test Failed	Maintenance Failed
0	0	Eth/0	81600	5E	1	0	0
1	1	PPP/0	81620	5D	0	31	0
2	2	PPP/1	81640	5C	0	31	0

**Note:** The display varies depending on the device.

**Nt** Global interface number.

**Nt'** Reserved for dial circuit use. Interface number of the physical network interface that the dial circuit uses.

**Interface**  
Interface name.

**CSR** Command and Status Register address.

**Vec** Interrupt vector.

**Self-Test Passed**  
Number of times self-test succeeded (state of interface changes from down to up).

**Self-Test Failed**  
Number of times self-test failed (state of interface changes from up to down).

**Maintenance Failed**  
Number of maintenance failures.

## Log

Use the **log** command to view or temporarily change the current logging level of messages that are not included in the Event Logging System. The command is temporary and goes away when the device is reinitialized.

To display the current logging level, do not enter an octal number as part of the command. To change the logging level, enter the octal number of the new logging level as part of the command. The default logging level is 76 (octal).

**Note:** To change the initial logging level (that is, the level that the device uses when it starts), use the CONFIG **set logging level** command. (Refer to "What is CONFIG?" on page 43 for information about this command.)

**Syntax:**

**log** [octal\_#]

## Memory

Use the **memory** command to display the current CPU memory usage in bytes, the number of buffers, and the packet sizes.

## GWCON Commands

To use this command, free memory must be available. The number of free packet buffers may drop to zero, resulting in the loss of some incoming packets; however, this does not adversely affect device operations. The number of free buffers should remain constant when the device is idle. If it does not, contact your service representative.

### Syntax:

#### memory

### Example:

#### memory

```
Physical installed memory:    16 MB
Total routing (heap) memory: 12 MB
Routing memory in use:       13 %
```

	Total	Reserve	Never Alloc	Perm Alloc	Temp Alloc	Prev Alloc
Heap memory	12231155	26488	10687312	1438487	104924	432

```
Number of global buffers: Total = 300, Free = 300, Fair = 77, Low = 60
Global buff size: Data = 2048, Hdr = 17, Wrap = 72, Trail = 65, Total = 2208
```

### Physical installed memory

The total amount of physical RAM installed in the device.

### Total routing memory

The amount of memory available to the routing function, not including that allocated to the base operating system, system extensions, or options such as APPN. This is also called "heap" memory, and matches the "Total" heap memory size given in bytes shortly thereafter.

### Routing memory in use

The percentage of total routing memory that is currently being used by the routing function. Heap memory currently in use is counted under the following headings **Perm Alloc** and **Temp Alloc**.

### Heap memory:

Amount of memory used to dynamically allocate data structures.

**Total** Total amount of space available for allocation for memory.

### Reserve

Minimum amount of memory needed by the currently configured protocols and features.

### Never Alloc

Memory that has never been allocated.

### Perm Alloc

Memory requested permanently by device tasks.

### Temp Alloc

Memory allocated temporarily to device tasks.

### Prev Alloc

Memory allocated temporarily and returned.

Number of global buffers:

**Total** Total number of global buffers in the system.

**Free** Number of global buffers available.

**Fair** Fair number of buffers for each interface. (See "Low".)

**Low** The number of free buffers at which the allocation strategy changes to



conserve buffers. If the value of *Free* is less than *Low*, then buffers will not be placed on any queue that has more than the *Fair* number of buffers in it.

**Global buff size:**

Global buffer size.

**Data** Maximum data link packet size of any interface.

**Header**

Sum of the maximum hardware, MAC, and data link headers.

**Wrap** Allowance given for MAC, LLC, or Network layer headers due to protocol wrapping.

**Trailer** Sum of the largest MAC and hardware trailers.

**Total** Overall size of each packet buffer

## Network

Use the **network** command to enter the console environment for supported networks, such as X.25 networks. This command obtains the console prompt for the specified interface. From the prompt, you can display statistical information, such as the routing information fields for Token-Ring networks.

**Syntax:**

**network** *interface#*

At the GWCON prompt (+), enter the **configuration** command to see the protocols and networks for which the device is configured. See “Configuration” on page 135 for more information on the configuration command.

Enter **interface** at the + prompt for a display of the networks for which the device is configured.

Enter the GWCON **network** command and the number of the interface you want to monitor or change. For example:

```
+network 3
X.25>
```

In the example, the X.25> prompt is displayed. You can then view information about the X.25 interface by entering the X.25 operating commands.

After identifying the interface number of the interface you want to monitor, for interface-specific information, see the corresponding monitoring chapter in this manual for the specified network or link-layer interface. Console support is offered for the following network and link-layer interfaces:

- Bisync (BSC)
- Ethernet
- Frame Relay
- PPP
- SDLC
- SDLC Relay (SRLY)
- Token-Ring
- V.25bis

## GWCON Commands

- X.25
- ATM
- ISDN
- V.34
- Dial-In
- Dial-Out
- Multilink PPP (MP)
- Layer-2-Tunneling

## Performance

Use the **performance** command at the GWCON prompt to enter the monitoring environment for performance. See “Chapter 12. Configuring and Monitoring Performance” on page 221 for more information.

## Protocol

Use the **protocol** command to communicate with the device software that implements the network protocols installed in your device. The **protocol** command accesses a protocol’s command environment. After you enter this command, the prompt of the specified protocol appears. From the prompt, you can enter commands that are specific to that protocol.

### Syntax:

**protocol** *prot#*

Enter the protocol number or short name as part of the command. To obtain the protocol number or short name, enter the CONFIG command environment (Config>), and then enter the **list configuration** command. See “Accessing the Configuration Process, CONFIG (Talk 6)” on page 14 for instructions on accessing Config>. To return to GWCON, enter **exit**.

See the corresponding monitoring chapter in this manual or in the *Protocol Configuration and Monitoring Reference* for information on a specific protocol’s console commands.

## Queue

Use the **queue** command to display statistics about the length of input and output queues on the specified interfaces. Information about input and output queues provided by the queue command includes:

- The total number of buffers allocated
- The low-level buffer value
- The number of buffers currently active on the interface.

### Syntax:

**queue** *interface#or range\_of\_interface#*

To display information about multiple interfaces, specify the *range\_of\_network#* (or a combination of *interface#* and *range\_of\_interface#*). For example, specifying **queue 0 3 25-50** displays the information for nets 0, 3, and 25 through 50.

To display information about one interface only, enter the interface or network number as part of the command. To obtain the interface number, use the GWCON **configuration** command.

### Example:

```
queue
      Input Queue      Output Queue
Nt Interface  Alloc Low Curr    Fair Curr
0 Eth/0       30  10  30      30   1
1 PPP/0       24   4  24       4   0
2 FR/0        24   4  24       5   0
```

**Nt** Network interface number associated with the software.

### Interface

Type of interface.

### **Input Queue:**

**Alloc** Number of buffers allocated to this device.

**Low** The low threshold for receive (input) buffers is used to activate flow control for this device. The low threshold is configurable using the CONFIG (Talk 6) **set input-low-water** command.

**Curr** Current number of buffers on this device. The value will be 0 if the device is disabled.

### **Output Queue:**

**Fair** The high threshold for the interface's output queue when flow control is activated for an input device.

**Note:** When Bandwidth Reservation (BRS) is configured for PPP and Frame Relay interfaces, the output fair value is ignored and the queue lengths configurable with BRS are used to determine if a packet should be discarded due to flow control.

**Curr** Number of packets currently waiting to be transmitted on this device. The eligibility discard depends on the global low water mark described in the **memory** command.

If a packet is received and the input queue current value is less than the input queue low threshold value, then the packet will be subject to flow control. For locally originated packets, a packet is subject to flow control if the number of free global buffers is less than the low threshold for global buffers. If a packet subject to flow control is to be transmitted on a device which has an output queue current value that is greater than the output queue high threshold (fair), then the packet is dropped instead of queued. When a packet is dropped due to flow control, the output discards counter is incremented and ELS event GW.036 or GW.057 is logged. If the packet was not locally originated, the input flow drop counter for the input interface is incremented. The output discards and input flow drop counters are displayed by the GWCON **error** command.

Due to the scheduling algorithms of the device, the dynamic numbers of Curr (particularly the Input Queue Curr) may not be fully representative of typical values during packet forwarding. The console code runs only when the input queues have been drained. Thus, Input Queue Curr will generally be nonzero only when those packets are waiting on slow transmit queues.

## GWCON Commands

### Reset

Use the **reset** command to disable the specified interface and then re-enable it using new interface, protocol and feature configuration parameters. See “Resetting Interfaces” on page 51 for more information.

#### Syntax:

```
reset interface#
```

### Statistics

Use the **statistics** command to display statistical information about the network software, such as the configuration of the networks in the device.

#### Syntax:

```
statistics interface#or range_of_interface#
```

To display information about multiple interfaces, specify the *range\_of\_network#* (or a combination of *interface#* and *range\_of\_interface#*). For example, specifying **statistics 0 3 25-50** displays the information for nets 0, 3, and 25 through 50.

To display information about one interface only, enter the interface or network number as part of the command. To obtain the interface number, use the GWCON **configuration** command.

#### Example:

```
statistics
  Nt Interface  Unicast  Multicast  Bytes  Packets  Bytes
                   Pkts Rcv   Pkts Rcv   Received  Trans   Trans
0 Eth/0          137      1      8832   1068   65297
1 PPP/0           0        0         0        0         0
2 PPP/1           0        0         0        0         0
```

**Nt** Network interface number associated with the software.

#### Interface

Type of interface.

#### Unicast Pkts Rcv

Number of non-multicast, non-broadcast specifically-addressed packets at the MAC layer.

#### Multicast Pkts Rcv

Number of multicast or broadcast packets received.

#### Bytes Received

Number of bytes received at this interface at the MAC layer.

#### Packets Trans

Number of packets of unicast, multicast, or broadcast type transmitted.

#### Bytes Trans

Number of bytes transmitted at the MAC layer.

### Test

Use the **test** command to verify the state of an interface or to enable an interface that was previously disabled with the **disable** command. If the interface is enabled

and passing traffic, the **test** command will remove the interface from the network and run self-diagnostic tests on the interface.

### Syntax:

**test** *interface#*

**Note:** For this command to work, you must enter the **complete** name of the command followed by the interface number.

Enter the interface or network number as part of the command. To obtain the interface number, use the GWCON **configuration** command. For example, when testing starts, the console displays the following message:

```
Testing net 0 TKR/0...
```

When testing completes or fails, or when GWCON times out (after 30 seconds), the following possible messages are displayed:

```
Testing net 0 Eth/0 ...successful
Testing net 0 Eth/0 ...failed
Testing net 0 Eth/0 ...still testing
```

Some interfaces may take more than 30 seconds before testing is done.

**Note:** If the interface you are testing is configured as an alternate WAN Reroute interface, you are prompted:

- If you want to enable the interface's primary-alternate pairings if WAN Reroute is currently disabled for the alternate interface.

If you answer *yes*, the same action occurs as when you enter the **t 5 enable alternate-circuit** WAN reroute command described in Configuring and Monitoring WAN Restoral in *Using and Configuring Features*.

- If you want to test the interface.

Normally an alternate WAN Reroute interface is disabled until it is needed to back up its corresponding primary interface. If you answer *yes*, a self-test is started for the interface. If you answer *no*, a self-test does not occur.

See The WAN Reroute Feature, Using WAN Restoral, and Configuring and Monitoring WAN Restoral in the *Using and Configuring Features* for additional information.

## Uptime

Use the **uptime** command to display time statistics about the device, including the following:

- Number of restarts.
- Number of known crashes.
- Whether the device was last reloaded or restarted.
- Time elapsed since the last reload.
- Time elapsed since the last restart.

### Syntax:

**uptime**

## GWCON Commands

---

## Chapter 9. The Messaging (MONITR - Talk 2) Process

This chapter explains how to collect and display messages. (Refer to “Chapter 10. Using the Event Logging System (ELS)” on page 151 for information about ELS and message formats. Refer also to the *IBM Nways Event Logging System Messages Guide* for a description of each message. This chapter includes the following sections:

- “What is Messaging (MONITR)?”
- “Commands Affecting Messaging”
- “Entering and Exiting the Messaging (MONITR) Process”
- “Receiving Messages”

---

### What is Messaging (MONITR)?

The MONITR process provides a view of activity inside the device and the networks. MONITR also displays logging messages from the software.

---

### Commands Affecting Messaging

The following commands affect the messaging process:

- OPCON commands:
  - **divert** temporarily diverts output to a different device.
  - **flush** causes the software to discard the messages it collects.
  - **halt** reverses the action of the divert command.
  - **talk** displays message output.
- CONFIG **set logging disposition** command sets the initial device to which the software sends its output.

---

### Entering and Exiting the Messaging (MONITR) Process

To enter the messaging process from OPCON enter the **event** command or the **talk 2** command.

The console displays the messages the software has accumulated.

To exit messaging and return to OPCON, enter the OPCON intercept character (the default is **Ctrl-P**).

---

### Receiving Messages

To receive messages at your console, enter the messaging process as described in the previous section. The software then displays all the messages it has recorded since it was last invoked. While you are connected to the messaging process, it displays all messages as they arrive.

Use the OPCON **divert** and **halt** commands to view software messages while you are doing something else with the device. Permitted devices divert output to TTY0 (the local console), TTY1, or TTY2 (the remote consoles).

## Messaging (MONITR)

To specify a default device for MONITR, define the device in Static RAM by using the CONFIG **set logging disposition** command. Specifying a default device is useful if you have a terminal set up to print.



---

## Chapter 10. Using the Event Logging System (ELS)

This chapter describes the Event Logging System (ELS). The ELS continually logs all events, filtering them according to parameters that you select. A combination of operational counters and the ELS provides information for monitoring the health and activity of the system. The information is divided into the following sections:

- “What is ELS?”
- “Entering and Exiting the ELS Configuration Environment” on page 152
- “Event Logging Concepts” on page 152
- “Using ELS” on page 155
- “Using ELS to Troubleshoot a Problem” on page 157
- “Using and Configuring ELS Remote Logging” on page 159
- “Using ELS Message Buffering” on page 167

---

### What is ELS?

ELS is a monitoring system and an integral part of the device operating system. ELS manages the messages logged as a result of device activity. Use ELS commands to set up a configuration that sorts out only those messages you feel are important. You can then display the messages on the console terminal screen, log them to a remote workstation, or send the messages to a network management station using Simple Network Management Protocol (SNMP) traps.

The ELS system and the operational counters are the best troubleshooting tools you have to isolate problems in the device. A quick scan of the event messages will tell you whether the device has a problem and where to start looking for it.

In the ELS configuration environment, the commands are used to establish a default configuration. This default configuration does not take effect until the device reinitializes.

Occasionally, it is helpful to temporarily view messages using parameters other than was set up in the ELS configuration environment, without having to reinitialize the device. The ELS operating and monitoring environment is used to:

- Temporarily change the default ELS display settings
  - Changes made in the ELS console environment take effect immediately
  - Changes made in the operating/monitoring environment are not stored in nonvolatile configuration storage.
- View statistical information regarding ELS uses of dynamic RAM

**Note:** Specific ELS messages are described in the *IBM Nways Event Logging System Messages Guide*.

ELS is a subprocess that you access from the OPCON process.

### Entering and Exiting the ELS Configuration Environment

The ELS configuration environment (available from the CONFIG process) is characterized by the ELS Config> prompt. Commands entered at this prompt create the ELS default state that takes effect after you restart the device. These commands are described in greater detail later in this chapter.

Configuration commands that have subsystem, group, or event as a parameter are executed in the following order:

- Subsystem
- Group
- Event

To set a basic ELS configuration, enter the **display subsystem all standard** command at the ELS Config> prompt. This command configures the ELS to display messages from all subsystems with the STANDARD logging level (that is, all errors and unusual informational comments).

**Note:** The device does not have a default ELS configuration. You must enter the ELS configuration environment and set the default state.

To enter the ELS configuration environment from OPCON:

1. Enter the **configuration** command. The console displays the CONFIG prompt (Config>). If the prompt does not appear when you first enter CONFIG, press **enter**.
2. At the CONFIG prompt, enter the following command to access ELS:

```
Config> eve
```

The console displays the ELS configuration prompt (ELS config>). Now, you can enter ELS configuration commands.

To leave the ELS configuration environment, enter the **exit** command.

---

### Event Logging Concepts

This section describes how events are logged and how to interpret messages. Also described are the concepts of subsystem, event number, and logging level. A large part of ELS function is based on commands that accept the subsystem, event number, and logging level as parameters.

### Causes of Events

Events occur continuously while the device is operating. They can be caused by any of the following reasons:

- System activity
- Status changes
- Service requests
- Data transmission and reception
- Data and internal errors

When an event occurs, ELS receives data from the system that identifies the source and nature of the event. Then ELS generates a message that uses the data received as part of the message.

## Interpreting a Message

This section describes how to interpret a message generated by ELS. Figure 4 shows the message contents.

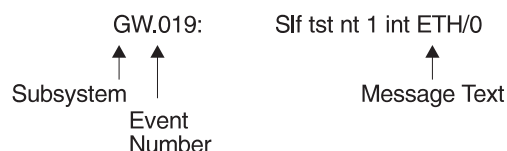 


Figure 4. Message Generated by an Event

The information illustrated in Figure 4 as well as the ELS logging level information displayed with the **list subsystem** command is as follows:

### Subsystem

*Subsystem* is a predefined short name for a device component, such as a protocol or interface. In Figure 4, **GW** identifies the subsystem through which this event occurred.

Other examples of subsystems include IP, TKR, and X25. On a particular device, the actual subsystems present depend on the hardware and software configured for that device. You can use the **list subsystem** command described in this chapter to see a list of the subsystems on your device.

Enter the subsystem as a parameter to an ELS command when you want the command to affect the entire subsystem. For example, the ELS command **display subsystem GW** causes all events (except the events with 'debug' logging level) that occur through the GW subsystem to be displayed.

### Event Number

*Event Number* is a predefined, unique, arbitrary number assigned to each message within a subsystem. In Figure 4, **019** is the event number within the GW subsystem. You can see a list of all the events within a subsystem by using the **list subsystem** command, where *subsystem* is the short name for the subsystem.

The event number always appears with a subsystem identifier, separated by a period. For example: **GW.019**. The subsystem and event number together identify an *individual* event. They are entered as a parameter to certain ELS commands. When you want a command to affect only the specified event, enter the subsystem and event number as a parameter for the ELS command.

### Logging Level

*Logging level* is a predefined setting that classifies each message by the type of event that generated it. Use the **list subsystem** ELS console command to display the setting of the logging level. Table 17 on page 154 lists the logging levels and types. ERROR, INFO, TRACE, STANDARD, and ALL are aggregates of other

## Using ELS

logging level types. STANDARD is the recommended default.

Table 17. Logging Levels

Logging Level	Type
UI ERROR	Unusual internal errors
CI ERROR	Common internal errors
UE ERROR	Unusual external errors
CE ERROR	Common external errors
ERROR	Includes all error levels above
UINFO	Unusual informational comment
CINFO	Common informational comment
INFO	Includes all comment levels above
STANDARD	Includes all error levels and all informational comment levels (default)
PTRACE	Per packet trace
UTRACE	Unusual operation Trace message
CTRACE	Common operation Trace message
TRACE	Includes all trace levels above
DEBUG	Message for debugging
ALL	Includes all logging levels

The logging level setting affects the operation of the following commands:

- **Display subsystem**
- **Nodisplay subsystem**
- **Trap subsystem**
- **Notrap subsystem**
- **Remote subsystem**
- **Noremote subsystem**

The logging level is set for a particular command when you specify it as a parameter to one of the above commands. For example:

```
display subsystem IP ERROR
```

Including the logging level on the command line modifies the **display** command so that whenever an event with a logging level of either UI-ERROR or CI-ERROR occurs through subsystem TKR, the console displays the resulting message.

You cannot specify the logging level for operations affecting groups or events.

### Message Text

*Message Text* appears in short form. In Figure 4 on page 153, `Slf tst nt 1 int ETH/0` is the message generated by this event. Variables, such as *source\_address* or *network*, are replaced with actual data when the message displays on the console.

The variable *error\_code* is referred to by some of the Event Logging System message descriptions (usually preceded by *rsn* or *reason*). They indicate the type of packet error detected. Table 18 on page 155 describes the error or packet completion codes. Packet completion codes indicate the disposition of the packets received by the device.

Table 18. Packet Completion Codes (Error Codes)

Code	Meaning
0	Packet successfully queued for output
1	Random, unidentified error
2	Packet not queued for output due to flow control reasons
3	Packet not queued because network is down
4	Packet not queued to avoid looping or bad broadcast
5	Packet not queued because destination host is down (only on networks where this can be detected)

ELS displays network information as follows:

```
nt 1 int Eth/0 (or ) network 1, interface Eth/0,
```

where:

- 1 is the network number (each network on the device is numbered sequentially from zero).
- 0 is the unit number (the interfaces of each hardware type are numbered sequentially from zero).

Ethernet and 802.5 hardware addresses appear as a long hexadecimal number.

IP (Internet Protocol) addresses are printed as 4 decimal bytes separated by periods, such as 18.123.0.16.

## Groups

*Groups* are user-defined collections of events that are given a name, the group name. Like the subsystem, subsystem and event number, and logging level, use the group name as a parameter to ELS commands. However, there are no predefined group names. You must create a group before you can specify its name on the command line.

To create a group, use the **add** configuration command, specify the name you want to call the group, and then specify the events you want to be part of the group. The events you add to the group can be from different subsystems and have different logging levels.

After creating a group, use the group name to manipulate the events in the group as a whole. For example, to turn off display of all messages from events that have been added to a group named `grouptwo`, include the group name on the command line, as follows:

```
nodisplay group grouptwo
```

To delete a group, use the **delete** command.

---

## Using ELS

To use ELS effectively, do the following:

- Know what you want before using the ELS system. Clearly define the problem or events that you want to see before using the MONITR process.
- Execute the command **nodisplay subsystem all all** to turn off all ELS messages.

## Using ELS

- Turn on only those messages that relate to the problem you are experiencing.
- Use the *IBM Nways Event Logging System Messages Guide* to determine which messages are not normal.

When initially viewing ELS from the MONITR process, you will see a considerable amount of information. Because the device cannot buffer and display every packet under moderate to heavy loads the buffers are flushed. When this occurs the following message is displayed:

```
xx messages flushed
```

The device does not save these messages. When this message appears, tailor the ELS output to display only that information that is important to the current task you are monitoring, or use the advanced ELS commands to establish a message buffer. See “Using ELS Message Buffering” on page 167.

## Managing ELS Message Rotation

It is also important to note that the ELS messages continually rotate through the device’s buffers. To stop and restart the displaying of ELS messages, use the following key combinations:

**Ctrl-S** to pause scrolling

**Ctrl-Q** to resume scrolling

**Ctrl-P** to go back to the last process

You may also want to capture the ELS output to a file. You can do this by starting a script file or log file from your location when Telneting to a device. You can also do this by attaching a PC to the device’s console port and starting a log file from within the terminal emulation package. This information is needed to help Customer Service diagnose a problem.

## Capturing ELS Output Using a Telnet Connection on a UNIX Host

Use a Telnet connection on an AIX or UNIX host to capture the ELS messages on your screen to a file on the host. Before beginning, set up ELS for the messages you want to capture using the ELS console commands in “Chapter 11. Configuring and Monitoring the Event Logging System (ELS)” on page 171.

To capture the ELS output to a file on an AIX or UNIX host, follow these steps:

1. From the host, enter **telnet device\_ip\_addr | tee local\_file\_name**
  - *device\_ip\_addr* is the IP address of the device
  - *local\_file\_name* is the name of the file on the host where you want the ELS messages to be saved.
  - The **tee** command displays the ELS messages on your screen and, at the same time, copies them to the local file.
2. From the OPCON prompt (\*), enter **t 2**. This accesses the MONITR process, which is the process that displays ELS messages on your screen. Depending on which ELS messages you configured, you should see ELS messages appearing on the screen.

As long as you are in the MONITR process, all ELS messages will be written to the local file. When you exit the MONITR process (by entering **Ctrl-P**) or terminate the Telnet session, the logging of messages to the local file will stop.

You can also use remote logging instead of capturing ELS output on a UNIX Host. For more information about remote logging, see “Using and Configuring ELS Remote Logging” on page 159.

## Configuring ELS So Event Messages Are Sent In SNMP Traps

ELS can be configured so that event messages are sent to a network management workstation in an SNMP enterprise-specific trap. These traps are useful for reporting status and diagnostic results, and are often used for remote monitoring of a 2210. When ELS is configured appropriately, an SNMP trap will be generated each time the selected event occurs. For more information about SNMP, see *Protocol Configuration and Monitoring Reference*.

To tell ELS that a specific event should be activated to be sent as an SNMP trap, at the ELS config> prompt or at the ELS> prompt, using IP as an example, type:

```
trap event ip.007
```

**Note:** If you are at the ELS config> prompt, you will need to reboot.

To enable the ELS enterprise-specific trap, follow these steps:

1. At the SNMP config> prompt, using **public** as an example, type:

```
SNMP config> add address public <network manager IP address>
SNMP config> enable trap enterprise public
SNMP config> set community access read_trap public
```

**Note:** You need to reboot to activate these changes.

2. Enable your network management station to receive and properly display the enterprise-specific traps.

Follow these steps to trap groups, subsystems, and events.

---

## Using ELS to Troubleshoot a Problem

If you are trying to troubleshoot a particular problem, display the messages related to the problem. For example, if experiencing a problem with bridging, turn on the bridging messages:

```
display subsystem srt all
display subsystem br all
```

Initially, because of the rapid pace of messages scrolling across the screen, you may want to record the numbers you see and look them up in the *Event Logging System Messages Guide* manual. Once you become familiar with different types of messages being displayed for a particular protocol, you can turn on and turn off only those messages that contain the information that you require to troubleshoot a problem. The following sections list specific ELS examples. Keep in mind that different problems may require different steps.

### ELS Example 1

You are interested in looking at the frequency of polling on a Token-Ring interface, and finding out whether the polls are successful.

## Using ELS

```
ELS> nodisplay subsystem all all
ELS> display subsystem tkr all
Ctrl-P
* t 2
```

As the messages begin to scroll by, look for ELS message tkr.031.

## ELS Example 2

SRB bridging is not working.

1. Check the configuration.
2. Use the GWCON bridging console to verify that the bridging interfaces are enabled.

3. Enter:

```
* t 6
config> event
ELS config> nodisplay subsystem all all
ELS config> display subsystem srb all
ELS config> exit
config> Ctrl-P
```

4. Restart the routing subsystem. When the subsystem has restarted, enter the following:

```
* t 2
```

## ELS Example 3

Router cannot communicate with an IPX server on an Ethernet.

1. Enter the **talk** command and the PID for GWCON.

```
* talk 5
```

The console displays the GWCON prompt (+). If the prompt does not appear when you first enter GWCON, press **Return**.

2. At the GWCON prompt (+), enter **IPX** to access the IPX console prompt (IPX>).
3. At the IPX console prompt, enter the **slist** command to verify that the server is listed. (See the section on monitoring IPX in the *Protocol Configuration and Monitoring Reference* for information on the **slist** command.)
4. Check the IPX configuration.
5. Enter the following:

```
* t 5
+ event
ELS> nodisplay subsystem all all
ELS> display subsystem IPX all
ELS> display subsystem eth all
ELS> Ctrl-P
* t 2
```

As the messages begin to scroll by, look for ELS message eth.001. This indicates that the server has a bad Ethernet type field.



## Using and Configuring ELS Remote Logging

The remotely-logged ELS message contains all of the information that is contained in ELS messages found in the monitor queue, as viewed under `talk 2`, and also contains additional information as shown in Figure 5.

Date/Time	IP address assigned by the user	Sequence Number used for detecting missing messages	Local Name assigned by the user	ELS Subsystem Name, & Formatted message
Nov 20 12:13:47	5.1.1.1	Msg [0444] from	** IBM/2210 **	:els: MPC.011 Del ent ...

Figure 5. Syslog Message Description

Note the following differences in the remote log display:

- The month and day of month in addition to the time, which is always displayed as the time-of-day.
- An IP address, which is the user-specified source IP address. If a DNS server resolves the source IP address to a hostname, then the hostname will be displayed instead of the IP address.
- A Sequence number is added to the message by the source device to assist in detecting dropped messages. See “Remote Logging Output” on page 163 for an explanation of dropped messages. When the sequence number of the message reaches 9999, the next sequence number is 0001.
- A “Local Name” for the source device, to assist in distinguishing between messages from multiple sources. If you do not configure a local name, this field is blank.

## Syslog Facility and Level

Remotely-logged ELS messages are transmitted over the network in UDP packets with the destination port number in the UDP header always equal to 514, the syslog port. To receive and process the UDP packets, the *syslog daemon* (`syslogd`) must be running in the remote workstation that is receiving and logging the ELS messages. See “Remote Workstation Configuration” for details.

Although it is not displayed in the remotely-logged ELS message, every ELS message sent on the network in a UDP packet must be assigned a *syslog\_facility* and a *syslog\_level*. The syslog daemon uses the combination of facility and level to determine where to route the message. Typically, you want the ELS messages to be written to one or more files in the remote host. Other options include displaying the message on the console, sending the message to one or more users, or sending the message to another workstation.

The commands you use to specify the *syslog\_facility* and *syslog\_level* values, along with other remote-logging related console commands, are described in “ELS Monitoring Commands” on page 192 and “ELS Configuration Commands” on page 171. Review these commands before reading through the next section.

## Remote Workstation Configuration

The following configuration assumes that a single 2210 is remote-logging to a single remote workstation. You can configure multiple 2210s to remote-log to the same

## Using ELS

remote workstation. However, a particular 2210 can log to one and only one remote workstation. The operating system used in this example is AIX 4.2. Your environment may be slightly different. For more information on syslog, refer to the documentation for your operating system.

To perform the configuration on an AIX workstation, you must log in as **root**. To configure the workstation:

1. Create or edit a `syslog.conf` file to specify where ELS messages with particular `syslog_facility` and `syslog_level` values are to be written. See the bottom of Figure 6 on page 161 for an example of how to specify the message destination. Note that the full pathname of the log files must be specified. The default location for the syslog configuration file is `/etc/syslog.conf`.
2. Create the files for logging syslog messages that you specified in the `syslog.conf` file.
3. Start the syslog daemon by entering **syslogd**. To start the syslog daemon from SRC (System Resource Controller), enter **startsrc -s syslogd**. If the pathname of the configuration file is not `/etc/syslog.conf`, then enter **syslogd -f *pathname***. To start the syslog daemon in debug mode, enter **syslogd -d**.

**Note:** Running multiple instances of the syslog daemon is not supported.

4. If the syslog daemon is already running when you create or modify the `syslog.conf` file, it must be restarted so that the daemon reinitializes the configuration from `syslog.conf`.
5. Verify the setup by using the **logger** command as follows:  

```
logger -p user.alert THIS IS A TEST MESSAGE (user.alert)
logger -p news.info THIS IS A TEST MESSAGE (news.info)
```

If the setup is correct, `THIS IS A TEST MESSAGE...` will be written to the files specified in `syslog.conf`.

```

# @(#)34      1.9 src/bos/etc/syslog/syslog.conf, cmdnet, bos411, 9428A410j 6/13/93 14:52:39
#
# COMPONENT_NAME: (CMDNET) Network commands.
#
# FUNCTIONS:
#
# ORIGINS: 27
#
# (C) COPYRIGHT International Business Machines Corp. 1988, 1989
# All Rights Reserved
# Licensed Materials - Property of IBM
#
# US Government Users Restricted Rights - Use, duplication or
# disclosure restricted by GSA ADP Schedule Contract with IBM Corp.
#
# /etc/syslog.conf - control output of syslogd
#
# Each line must consist of two parts:-
#
# 1) A selector to determine the message priorities to which the
#    line applies
# 2) An action.
#
# The two fields must be separated by one or more tabs or spaces.
#
# format:
#
# <msg_src_list>          <destination>
#
# where <msg_src_list> is a semicolon separated list of <facility>.<priority>
# where:
#
# <facility> is:
#   * - all (except mark)
#   kern,user,mail,daemon, auth, syslog, lpr, news, uucp, cron, authpriv, local0 - local7
#
# <priority or level> is one of (from high to low):
#   emerg,alert,crit,err(or),warn(ing),notice,info,debug
#   (meaning all messages of this priority or higher)
#
# <destination> is:
#   /filename - log to this file
#   username[,username2...] - write to user(s)
#   @hostname - send to syslogd on this machine
#   * - send to all logged in users
#
# example:
# "mail messages, at debug or higher, go to Log file. File must exist."
# "all facilities, at debug and higher, go to console"
# "all facilities, at crit or higher, go to all users"
# mail.debug          /usr/spool/mqueue/syslog
# *.debug             /dev/console
# *.crit              *
#
#   syslog messages with facility / priority values of LOG_USER,   LOG_ALERT
user.alert           /tmp/syslog_user_alert
#
#   syslog messages with facility / priority values of LOG_NEWS, LOG_INFO
news.info            /tmp/syslog_news_info

```

Figure 6. *syslog.conf* Configuration File

## Configuring the 2210 for Remote Logging

To configure a 2210:

1. In talk 6, configure the remote-logging facility as shown in Figure 7 on page 162. The IP address specified as the *source-ip-addr* should be an IP address that is configured in the 2210 for easier identification when the IP address or the hostname is shown in the remotely-logged ELS message. You should also verify that this IP address resolves quickly into a hostname by the name server or that

## Using ELS

the name server at least responds quickly with “address not found.” To determine whether this happens, issue the **host** command on your workstation as follows:

```
workstation> host 5.1.1.1
host: address 5.1.1.1 NOT FOUND
workstation>
```

If the response takes more than 1 second, select an IP address which resolves more quickly.

2. In talk 6 configure events and subsystems for remote-logging, as shown in Figure 8 on page 163.
3. Restart the 2210.

```
ELS config>set remote source-ip-addr 5.1.1.1
Source IP Addr = 5.1.1.1

ELS config>set remote remote-ip-addr 192.9.200.1
Remote Log IP Addr = 192.9.200.1

ELS config>set remote local-id ** IBM/2210 **
Remote Log Local ID = ** IBM/2210 **

ELS config>set remote no-msgs-in-buffer 100
Number of messages in Remote Log Buffer must be 100-512
Number of Messages in Remote Buffer = 100

ELS config><B>set remote facility log_news
Default Syslog Facility = LOG_NEWS

ELS config>set remote level log_info
Default Syslog Level = LOG_INFO

ELS config>set remote on
Remote Logging is ON

ELS config>list remote

----- Remote Log Status -----

Remote Logging is ON
Source IP Address = 5.1.1.1
Remote Log IP Address = 192.9.200.1
Default Syslog Facility = LOG_NEWS
Default Syslog Priority Level = LOG_INFO
Number of Messages in Remote Log = 100
Remote Logging Local ID = ** IBM / 2210 **
ELS config>
```

*Figure 7. Configuring the 2210 for Remote Logging*

```

ELS config>display sub snmp all
ELS config>remote sub snmp all log_news log_info

ELS config>display event srt.017
ELS config>remote event srt.017 log_news log_info

ELS config>display event stp.016
ELS config>remote event stp.016 log_user log_info

ELS config>display event stp.026
ELS config>remote event stp.026 log_news log_info

ELS config>display event stp.024
ELS config>remote event stp.024 log_news log_info

ELS config>display event ip.068
ELS config>remote event ip.068 log_news log_info

ELS config>display event ip.058
ELS config>remote event ip.058 log_news log_info

ELS config>display event ip.022
ELS config>remote event ip.022 log_news log_info

ELS config>display event gw.022
ELS config>remote event gw.22 log_news log_info

ELS config>display event arp.011
ELS config>remote event arp.011 log_user log_alert

ELS config>display event arp.002
ELS config>remote event arp.022 log_user log_alert

ELS config>list status
Subsystem:      SNMP
Disp levels:    ERROR INFO TRACE
Trap levels:    none
Trace levels:   none
Remote levels:  ERROR INFO TRACE
                Syslog Facility/Level: LOG_NEWS LOG_INFO

Event   Display Trap   Trace   Remote
SRT.017 On      Unset   Unset   On
                Syslog Facility/Level: LOG_NEWS LOG_INFO
STP.016 On      Unset   Unset   On
                Syslog Facility/Level: LOG_NEWS LOG_INFO
STP.026 On      Unset   Unset   On
                Syslog Facility/Level: LOG_NEWS LOG_INFO
STP.024 On      Unset   Unset   On
                Syslog Facility/Level: LOG_NEWS LOG_INFO
IP.068  On      Unset   Unset   On
                Syslog Facility/Level: LOG_NEWS LOG_INFO
IP.058  On      Unset   Unset   On
                Syslog Facility/Level: LOG_NEWS LOG_INFO
IP.022  On      Unset   Unset   On
                Syslog Facility/Level: LOG_NEWS LOG_INFO
GW.022  On      Unset   Unset   On
                Syslog Facility/Level: LOG_NEWS LOG_INFO
ARP.011 On      Unset   Unset   On
                Syslog Facility/Level: LOG_USER LOG_ALERT
ARP.002 On      Unset   Unset   On
                Syslog Facility/Level: LOG_USER LOG_ALERT

```

Figure 8. Configuring Subsystems and Events for Remote Logging

## Remote Logging Output

Figure 9 on page 164 shows a sample from the `/tmp/syslog_news_info` file. Notice that the first message has a sequence number of 310. This means that the first 309 ELS messages were not sent from the source 2210. There are several reasons for this:

- The remote-logging facility had not completed initialization when the messages were first passed to ELS

## Using ELS

- A route from the source 2210 to the remote workstation was not in the routing table
- The interface for the outbound UDP packet containing the ELS messages was not in the “Up” state

Notice in **1** that messages 311-313 did not get remote-logged. This is because an ARP request was outstanding and until the ARP response is received, all but the first packet is dropped in the source 2210. Additionally, the ARP cache is cleared at a user-configured refresh rate, and a new ARP request is issued. To determine when this is occurring, you can remote log events ARP.002 and ARP.011 in addition to the primary ELS events of interest. Figure 11 on page 165 shows ARP events logged to the *syslog\_user\_alert* file that account for events 445 and 446, which were indicated as missing in Figure 9.

```
Nov 20 12:03:16 worksta01 root: THIS IS A TEST MESSAGE (news.info)
Nov 20 12:08:48 5.1.1.1 Msg [0310] from ** IBM / 2210 **: els: IP.022: add nt 192.9.200.0 int 192.9.200.20
nt 0 int Eth/0
```

**1** ( messages 311, 312, and 313 did not get remote-logged due to ARP request outstanding - see explanation in the text)

**2** (messages 314 and 315 were logged to a separate file - see explanation in the text)

```
Nov 20 12:08:48 5.1.1.1 Msg [0316] from ** IBM / 2210 **: els: IP.068: routing cache cleared
Nov 20 12:08:48 5.1.1.1 Msg [0317] from ** IBM / 2210 **: els: IP.022: add nt 5.0.0.0 int 5.1.1.1 nt 5 int Eth/4
Nov 20 12:08:48 5.1.1.1 Msg [0318] from ** IBM / 2210 **: els: SRT.017: Enabling SRT on port 5 nt 5 int Eth/4
```

(message 319 was logged to a separate file)

```
Nov 20 12:08:48 5.1.1.1 Msg [0320] from ** IBM / 2210 **: els: IP.068: routing cache cleared
```

(120 messages not shown)

```
Nov 20 12:13:33 5.1.1.1 Msg [0441] from ** IBM / 2210 **: els: GW.022: Nt fld slf tst nt 3 int Eth/3
Nov 20 12:13:33 5.1.1.1 Msg [0442] from ** IBM / 2210 **: els: GW.022: Nt fld slf tst nt 6 int Eth/5
Nov 20 12:13:38 5.1.1.1 Msg [0443] from ** IBM / 2210 **: els: GW.022: Nt fld slf tst nt 11 int ISDN/0
```

(messages 444 and 447 were logged to a separate file)

(messages 445 and 446 did not get remote-logged due to ARP request outstanding)

```
Nov 20 12:13:50 5.1.1.1 Msg [0448] from ** IBM / 2210 **: els: GW.022: Nt fld slf tst nt 4 int PPP/0
Nov 20 12:13:50 5.1.1.1 Msg [0449] from ** IBM / 2210 **: els: IP.068: routing cache cleared
Nov 20 12:13:50 5.1.1.1 Msg [0450] from ** IBM / 2210 **: els: IP.058: del nt 4.0.0.0 rt via 0.0.0.4 nt 4 int PPP/0
```

Figure 9. Sample Contents from Syslog News Info File

If the initial ELS messages that are generated during and immediately after booting are of particular interest, then it is recommended that these messages also be displayed in the monitor queue, which is viewed with talk 2. Figure 10 on page 165 shows the talk 2 output including the initial messages that did not get remote-logged. Note that there is a message in the talk 2 output that indicates that the remote-logging facility is available. This does not indicate that a route exists to the remote workstation, nor that the associated interface is in the “Up” state. It simply provides a reference point before which no messages can be successfully remote-logged.

Also notice that you can account for the messages that were missing (indicated in Figure 9 with **2**) in the talk 2 output.

```

12:08:17 SNMP.024: generic trc (P2) at snmp_mg.c(766): Now 0 trap destinations
12:08:17 SNMP.012: comm public added
12:08:17 SNMP.012: comm public added
12:08:27 SNMP.022: ext err (Z1) at snmp_resconf.c(322): add_device_if_info(): sr
rdrec failed

12:08:27 SNMP.022: ext err (Z1) at snmp_resconf.c(322): add_device_if_info(): sr
rdrec failed

12:08:27 SNMP.028: err (E2) at snmp_moh.c(1583) : Duplicate
12:08:27 SNMP.028: err (E2) at snmp_moh.c(1583) : Duplicate
12:08:28 GW.022: Nt fld slf tst nt 13 int PPP/3
12:08:28 IP.022: add nt 4.0.0.0 int 4.1.1.1 nt 4 int PPP/0

    ( 297 messages not shown )

12:08:43 GW.022: Nt fld slf tst nt 12 int PPP/2
12:08:43 GW.022: Nt fld slf tst nt 13 int PPP/3
12:08:48 IP.022: add nt 192.9.200.0 int 192.9.200.20 nt 0 int Eth/0
12:08:48 SRT.017: Enabling SRT on port 1 nt 0 int Eth/0
12:08:48 STP.016: Select as root TB-1, det topol chg
12:08:48 STP.026: Root TB-1, strt hello tmr
12:08:48 ARP.002: Pkt in 1 1 800 nt 0 int Eth/0
12:08:48 ARP.002: Pkt in 2 1 800 nt 0 int Eth/0
12:08:48 IP.068: routing cache cleared

    ( 126 messages not shown )

12:13:38 GW.022: Nt fld slf tst nt 11 int ISDN/0
12:13:47 ARP.011: Del ent 1 3 nt 0 int Eth/0
12:13:47 ARP.011: Del ent 1 3 nt 0 int Eth/0
12:13:47 ARP.002: Pkt in 1 1 800 nt 5 int Eth/4
12:13:47 ARP.002: Pkt in 2 1 800 nt 0 int Eth/0
12:13:50 GW.022: Nt fld slf tst nt 4 int PPP/0

    Corresponding Sequence
    Numbers in
    Remote-Logging Files :

    [0310] first message logged
    -- not logged (ARP request) --
    -- not logged (ARP request)--
    -- not logged (ARP request)--
    [0314]
    [0315]
    [0316]

    [0443]
    [0444]
    -- not logged (ARP request) --
    -- not logged (ARP request)--
    [0447]
    [0448]

```

Figure 10. Output from Talk 2

You can use the timestamp, which appears in both the remote-logging output file and the talk 2 output, to determine when the first ELS message is successfully remote-logged. To use the timestamp for this purpose, configure ELS such that the timestamp in the monitor queue displays the time-of-day.

Also notice in Figure 9 on page 164 that messages 311-313 did not get remote-logged. This is because an ARP request was outstanding and until the ARP response is received, all but the first packet is dropped in the source IBM 2210. The ARP cache is cleared at a user-configured refresh rate, and the device issues a new ARP request. To determine when ARP requests are occurring, events ARP.002 and ARP.011 can be remote-logged, in addition to the ELS events of interest. Figure 11 shows ARP events logged to the *syslog\_user\_alert* file that account for events 445 and 446, which were indicated as missing in Figure 9 on page 164.

```

Nov 20 12:02:53 worksta01 root: THIS IS A TEST MESSAGE (user.alert)
Nov 20 12:08:48 5.1.1.1 Msg [0314] from ** IBM / 2210 **: els: ARP.002: Pkt in 1 1 800 nt 0 int Eth/0
Nov 20 12:08:48 5.1.1.1 Msg [0315] from ** IBM / 2210 **: els: ARP.002: Pkt in 2 1 800 nt 0 int Eth/0
Nov 20 12:08:48 5.1.1.1 Msg [0319] from ** IBM / 2210 **: els: ARP.002: Pkt in 2 1 800 nt 0 int Eth/0
Nov 20 12:13:47 5.1.1.1 Msg [0444] from ** IBM / 2210 **: els: ARP.011: Del ent 1 3 nt 0 int Eth/0
Nov 20 12:13:47 5.1.1.1 Msg [0447] from ** IBM / 2210 **: els: ARP.002: Pkt in 2 1 800 nt 0 int Eth/0

```

Figure 11. Sample Contents from *Syslog\_user\_alert* File

You can prevent the loss of ELS messages caused by this ARP sequence by establishing a static relationship between the IP address and the MAC address. The basic steps are outlined below and are illustrated in Figure 12 on page 166.

1. In talk 5, “ping” the remote workstation’s IP address
2. In talk 5, determine the interface (net) number used to send messages to the remote-workstation’s IP address

## Using ELS

3. Use the net number from the previous step to determine the associated MAC address
4. In talk 6, add an ARP entry to establish a static IP address to MAC address relationship

```
*t 5
+p ip

IP>ping 192.9.200.1
PING 192.9.200.20 -> 192.9.200.1: 56 data bytes, ttl=64, every 1 sec.
56 data bytes from 192.9.200.1: icmp_seq=0. ttl=64. time=0. ms
----192.9.200.1 PING Statistics----
1 packets transmitted, 1 packets received, 0% packet loss
round-trip min/avg/max = 0/0/0 ms

IP>dump

  Type  Dest net          Mask          Cost   Age      Next hop(s)
  .
  Dir*  192.9.200.0      FFFFFFF0     1      102305   Eth/0
  .

IP>exit
+int

Net  Net'  Interface  Slot-Port          Self-Test  Self-Test  Maintenance
0   0     Eth/0     Slot: 1  Port: 1          Passed     Failed     Failed
                                1          0            0
  .

+p arp
ARP>dump
Network number to dump [0]? 0
Hardware Address      IP Address      Refresh
02-60-8C-2D-69-5D   192.9.200.1    2

Ctrl-P
*t 6
config>p arp
ARP config>add entry
Interface Number [0]? 0
Protocol [IP]? IP
IP Address [0.0.0.0]? 192.9.200.1
Mac Address []? 02608C2D695D
ARP config> list entry

Mac address translation configuration

IF #      Prot #  Protocol -> Mac address
0         0      192.9.200.1 -> 02608C2D695D
ARP config>exit
Config>

Ctrl-P

*restart
Are you sure you want to reload the gateway? (Yes or [No]): Yes

(after reload, static ARP entry is active)
```

Figure 12. Example of Setting Up a Static ARP Entry

## Additional Considerations

### ELS Messages Containing IP Addresses

ELS messages containing an IP address which matches the IP address of the remote workstation will not be remote-logged, even if configured for remote-logging, and may appear under talk 2. These messages are discarded instead of being remote-logged in order to prevent excessive UDP packets from being sent on the network.



## Duplicate Logging

If a facility value is repeated in *syslog.conf*, for example:

```
user.debug      /tmp/syslog_user_debug
user.alert     /tmp/syslog_user_alert
```

The syslog daemon will log *user.debug* messages only to the */tmp/syslog\_user\_debug* file while *user.alert* messages will be logged to both the */tmp/syslog\_user\_debug* file and the */tmp/syslog\_user\_alert* file. This is consistent with the syslog design that logs the more severe conditions in multiple places.

To prevent this duplicate logging, it is recommended that different facility values be specified in the *syslog.conf* file. A total of 19 facility values are available.

## Recurring Sequence Numbers in Syslog Output Files

Depending upon the configuration of your network, it is possible for duplicate UDP packets containing ELS messages to arrive at the remote host. It is also possible for the packets to arrive in a different order than they were transmitted. An example of this phenomenon is shown in Figure 13. Notice that the messages with sequence numbers 628 through 633 are logged twice. Also notice that after the first occurrence of sequence number 0630, sequence number 0629 occurs again, followed by the second occurrence of 0630.

```
Apr 01 10:48:33 0.0.0.0 Msg [0628] from: RA22: : els: IPX.018: SAP gen rply sent nt 5 int TKR/1, 1 pkts
Apr 01 10:48:33 0.0.0.0 Msg [0628] from: RA22: : els: IPX.018: SAP gen rply sent nt 5 int TKR/1, 1 pkts
Apr 01 10:49:08 0.0.0.0 Msg [0629] from: RA22: : els: IPX.037: RIP resp sent nt 0 int TKR/0, 1 pkts
Apr 01 10:49:08 0.0.0.0 Msg [0630] from: RA22: : els: IPX.018: SAP gen rply sent nt 0 int TKR/0, 1 pkts
Apr 01 10:49:08 0.0.0.0 Msg [0629] from: RA22: : els: IPX.037: RIP resp sent nt 0 int TKR/0, 1 pkts
Apr 01 10:49:08 0.0.0.0 Msg [0630] from: RA22: : els: IPX.018: SAP gen rply sent nt 0 int TKR/0, 1 pkts
Apr 01 10:49:33 0.0.0.0 Msg [0631] from: RA22: : els: IPX.037: RIP resp sent nt 5 int TKR/1, 1 pkts
Apr 01 10:49:33 0.0.0.0 Msg [0631] from: RA22: : els: IPX.037: RIP resp sent nt 5 int TKR/1, 1 pkts
Apr 01 10:49:33 0.0.0.0 Msg [0632] from: RA22: : els: IPX.018: SAP gen rply sent nt 5 int TKR/1, 1 pkts
Apr 01 10:49:33 0.0.0.0 Msg [0632] from: RA22: : els: IPX.018: SAP gen rply sent nt 5 int TKR/1, 1 pkts
Apr 01 10:50:08 0.0.0.0 Msg [0633] from: RA22: : els: IPX.037: RIP resp sent nt 0 int TKR/0, 1 pkts
Apr 01 10:50:08 0.0.0.0 Msg [0633] from: RA22: : els: IPX.037: RIP resp sent nt 0 int TKR/0, 1 pkts
```

Figure 13. Example of Recurring Sequence Numbers in Syslog Output

Because neither Syslog nor UDP has the ability to handle duplicate or out of sequence packets, it is important to recognize the possibility of duplicate sequence numbers occurring.

---

## Using ELS Message Buffering

Message buffering is an advanced feature of ELS that can help you with problem determination. You can set up defaults that ELS will use for message buffering or change how messages are buffered while the device is operating. Message buffering can minimize the information lost because messages have wrapped in the default message buffers. Message buffering is accessible through the **advanced** configuration or monitoring command. It enables you to:

- Specify whether buffering is active.
- Specify what events are written to the message buffer.
- Stop buffering and free the memory allocated for buffering.
- Display the status of the message buffer.

## Using ELS

- Specify an event that stops message buffering and what action the system takes when the event occurs.
- Send a formatted version of the buffer to a file at a remote server.
- View a specific number or all of the ELS messages in the buffer.

For specifics about the commands, see “ELS Message Buffering Configuration Commands” on page 188 and “ELS Message Buffering Monitoring Commands” on page 215.

The following example shows how to configure ELS message buffering.

```
*t 5

CGW Operator Console

+event
Event Logging System user console
ELS>advanced
Advanced ELS Console
ELS Advanced>set buffer
Enter buffer size of 0 or between 1662 and 6648 KB [1662]? 1662
Buffer size set to 1662 KB
ELS Advanced>list status
-----Advanced ELS Configuration-----
Logging Status: OFF Wrap Mode: ON Logging Buffer Size: 1662 KB
Stop-Event: NONE Stop-String: NONE
Additional Stop-Action: NONE
-----Run-Time Status-----
Has Stop Condition Occurred? NO Messages currently in buffer: 0

ELS Advanced>set stop event gw.26
Stop Event "GW.026" has been set
ELS Advanced>exit
ELS>list ev gw.26
Level: C-TRACE
Message: Mnt nt %n int %s/%d
Active: Count: 742

ELS>advanced
Advanced ELS Console
ELS Advanced>set stop string Mnt nt 5
Stop String set to "Mnt nt 5"
ELS Advanced>set stop action SYSTEM-DUMP
Stop Action has been set to SYSTEM-DUMP
ELS Advanced>set wrap off
Advanced Wrap Mode set to OFF.

ELS Advanced>log subsys gw all
ELS Advanced>set logging on
Advanced Logging set to ON.
ELS Advanced>list status
-----Advanced ELS Configuration-----
Logging Status: OFF Wrap Mode: OFF Logging Buffer Size: 1662 KB
Stop-Event: GW.026 Stop-String: Mnt nt 5
Additional Stop-Action: SYSTEM-DUMP
-----Run-Time Status-----
Has Stop Condition Occurred? YES Messages currently in buffer: 7

ELS Advanced>view all noscroll

[1] 10:52:10 GW.026: Mnt nt 0 int Eth/0
[2] 10:52:10 GW.026: Mnt nt 5 int Eth/1 1
[3] 10:52:14 GW.026: Mnt nt 0 int Eth/0
[4] 10:52:14 GW.026: Mnt nt 5 int Eth/1
[5] 10:52:18 GW.026: Mnt nt 0 int Eth/0
[6] 10:52:18 GW.026: Mnt nt 5 int Eth/1
[7] 10:52:22 GW.026: Mnt nt 0 int Eth/0

BugHlt: Dump initiated by ELS Stop Action.

BUGHLT+80; Dump initiated by ELS Stop Action.
```

**1** This triggers stop action. Note that five more events get logged before logging stops and the stop action occurs.

| **Note:** In reality if the stop action is the SYSTEM-DUMP you will not be able to list  
| the final status as above nor view the buffer because the router will be  
| attempting to reload.

## Using ELS

---

## Chapter 11. Configuring and Monitoring the Event Logging System (ELS)

This chapter describes how to configure events logged by ELS and how to use the ELS commands. The information includes the following sections:

- “Accessing the ELS Configuration Environment”
- “ELS Configuration Commands”
- “Entering and Exiting the ELS Operating Environment” on page 191
- “ELS Monitoring Commands” on page 192

For more information on the Event Logging System and how to interpret ELS event messages, refer to “Chapter 10. Using the Event Logging System (ELS)” on page 151.

---

### Accessing the ELS Configuration Environment

The ELS configuration environment is characterized by the ELS `config>` prompt. Commands entered at this prompt are described “Chapter 11. Configuring and Monitoring the Event Logging System (ELS)”.

To enter the ELS configuration environment:

1. Enter **configuration**.

The monitoring displays the `Config>` prompt. If the prompt does not appear, press **enter**.

2. At the `Config>` prompt, enter the following command to access ELS:

```
event
```

The monitoring displays the ELS configuration prompt (`ELS config>`). Now, you can enter ELS configuration commands.

To leave the ELS configuration environment, enter the **exit** command.

---

### ELS Configuration Commands

Table 19 summarizes the ELS configuration commands. The remainder of this section describes each one in detail. After accessing the ELS configuration environment, you can enter ELS Configuration commands at the ELS `Config>` prompt.

*Table 19. ELS Configuration Command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds an event to an existing group or creates a new group.
Advanced	Places you in the advanced configuration environment in which you can configure message buffering.
Clear	Clears all ELS configuration information.
Default	Resets the display or trap setting of an event, group, or subsystem.

## ELS Configuration Commands (Talk 6)

Table 19. ELS Configuration Command Summary (continued)

Command	Function
Delete	Deletes an event number from an existing group or deletes an entire group.
Display	Enables message display on the console monitor.
Filter	Filter ELS messages based upon the net number.
List	Lists information on ELS settings and messages.
Nodisplay	Disables message display on the console.
Noremote	Disables remote logging to a remote workstation.
Notrace	Controls disablement of packet trace events.
Notrap	Keeps messages from being sent out in SNMP traps.
Remote	Allows messages to be logged to a remote workstation.
Set	Sets the pin parameter and the timestamp feature options.
Trace	Controls enablement of packet trace events.
Trap	Allows messages to be sent to a network management workstation in SNMP traps.
View	Allows viewing of traced packets.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

### Add

Use the **add** command to add an individual event to an existing group or to create a new group. Group names must start with a letter and are case sensitive. You cannot append an entire subsystem to a group.

**Syntax:**

**add** *group\_name subsystem.event\_number*

**Note:** If the specified group does not exist, the following prompt asks you to confirm the creation of a new group:

Group not found. Create new group? (yes or no)

### Advanced

Use the **advanced** command to enter the advanced configuration environment. In this environment you configure message buffering.

**Syntax:**

**advanced**

### Clear

Use the **clear** command to clear all of the ELS configuration information.

**Syntax:**

**clear**

**Example:**

**clear**

You are about to clear all ELS configuration information  
Are you sure you want to do this (Yes or No):

## Default

Resets the display or trap setting of an event, group, or subsystem back to a disabled state.

**Syntax:**

```
default                display
                        trap
                        remote
```

**display** *event or group or subsystem*

Controls the output of the display of messages to the monitoring.

**trap** *event or group or subsystem*

Controls the generation of traps to the network management station.

**remote** *event or group or subsystem*

Controls the generation of traps to the remote station.

## Delete

Use the **delete** command to delete an event number from an existing group or to delete the entire group. If the specified event is the last event to be deleted in a group, you will be notified. If *all* is specified instead of *subsystem.event\_number*, a prompt asks you to confirm the deletion of the entire group.

**Syntax:**

```
delete                group_name subsystem.event_number
```

## Display

Use the **display** command to enable message displaying on the monitoring monitor for specific events, a range of events for a subsystem, groups, or subsystems.

**Syntax:**

```
display                event . . .
                        group . . .
                        range . . .
                        subsystem . . .
```

**event** *subsystem.event#*

Displays messages of the specified event (*subsystem.event#*).

**group** *groupname*

Displays messages of a specified group (*groupname*).

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event in the specified event range.

Displays a range of messages for the specified subsystem.

**Example:**

## ELS Configuration Commands (Talk 6)

```
display range gw 19 22
```

Displays events gw.19, gw.20, gw.21, and gw.22.

### **subsystem** *subsystemname*

Displays messages associated with the specified subsystem. To find out which subsystems are on the device, type **list subsystems**.

**Note:** Although ELS supports all subsystems on the device, not all devices support all subsystems. See *Event Logging System Messages Guide* for a list of currently supported subsystems.

## Filter

Use the **filter** command to access the filter configuration command environment. See “ELS Net Filter Configuration Commands” on page 185 for complete command details.

### **Syntax:**

```
filter net
```

## List

Use the **list** command to get updated information regarding ELS settings and listings of selected messages.

### **Syntax:**

```
list all  
filter-status  
groups  
pin  
remote-log status  
status  
subsystem . . .  
subsystems all  
trace-status
```

**all** Lists information from all the **list** categories.

### **filter-status**

Lists ELS net number filters.

### **groups**

Lists the user-defined group names and contents.

### **pin**

Lists the current number of ELS event messages sent in SNMP traps (per second).

### **remote-log status**

Lists the current values of remote logging options.

### **Example:**



## ELS Configuration Commands (Talk 6)

### list r

```
Remote Logging is ON
Source IP Address = 192.67.38.2
Remote Log IP Address = 192.9.200.1
Default Syslog Facility = LOG_DAEMON
Default Syslog Priority Level = LOG_CRIT
Number of Messages in Remote Log = 256
Remote Logging Local ID = MYHOSTNAME
```

**status** Lists the subsystems, groups, and events that have been modified by the **display**, **nodisplay**, **trap**, **notrap**, **trace**, **notrace**, **remote**, and **noremove** commands.

### Example:

#### list status

```
Subsystem:          TKR
Disp Levels:        STANDARD
Trap levels:        none
Trace levels:        none
Remote levels:       ERROR INFO TRACE
Syslog Facility/Level: LOG_USER LOG_INFO

Group      Disp  Trap  Trace  Remote
Mygroup    Unset Unset  Unset  On
                        Syslog Facility/Level: LOG_DAEMON LOG_CRIT

Event      Disp  Trap  Trace  Remote
IP.007     Unset Unset  Unset  On
                        Syslog Facility/Level: LOG_CRON LOG_NOTICE
```

**Note:** Not only is remote logging enabled, but the display includes the Syslog Facility/Level values for each subsystem, group, and event. Ranges of events are listed as individual events.

### subsystem

Lists names, events, and descriptions of all subsystems.

(Example output from a **list subsystem** command can be found beginning on page 195.)

### subsystem *subsystem*

Lists all events in a specified subsystem.

### Example:

#### list subsystem gw

Event	Level	Message
GW.001	ALWAYS	Copyright 1984 Mass Institute of Technology
GW.002	ALWAYS	Portable CGW %s Rel %s strtd
GW.003	ALWAYS	Unus pkt len %d nt %d int %s/%d
GW.004	ALWAYS	Sys %s q adv alloc %d excd %d
GW.005	ALWAYS	Bffrs: %d avail %d idle fair %d low %d
GW.006	C-INFO	Pkt frm nt %d int %s/%d for uninit prt, disc
GW.007	C-INFO	Ip err %x nt %d int %s/%d
GW.008	U-INFO	Ip ovfl nt %d int %s/%d, disc
GW.009	UI-ERROR	Nt dwn ip rstrt nt %d int %s/%d
GW.010	UI-ERROR	Ip q len %d no ip buf nt %d int %s/%d
GW.011	U-INFO	Op err %x hst %wo nt %d int %s/%d
GW.012	U-INFO	Op err cnt excd hst %wo nt %d int %s/%d
GW.013	U-INFO	Rtrns cnt excd hst %wo nt %d int %s/%d
GW.014	UI-ERROR	Nt dwn op rstrt nt %d int %s/%d
GW.015	UI-ERROR	Nt dwn to hst %wo nt %d int %s/%d
GW.016	U-INFO	Op ovfl to hst %wo nt %d int %s/%d
GW.017	UE-ERROR	Intfc hdw mssng nt %d int %s/%d
GW.018	U-TRACE	Strt nt slf tst nt %d int %s/%d
GW.019	C-INFO	Slf tst nt %d int %s/%d
GW.020	U-TRACE	Nt pss slf tst nt %d int %s/%d
GW.021	UE-ERROR	Nt up nt %d int %s/%d
GW.022	U-TRACE	Nt fld slf tst nt %d int %s/%d

### subsystems all

Lists all events in all subsystems.

## ELS Configuration Commands (Talk 6)

### trace-status

Displays information on the status of packet tracing, including configuration and run-time information.

#### Example:

```
list trace-status
```

```
----- Configuration -----  
Trace Status:ON  Wrap Mode:ON  Decode Packets:ON  HD Shadowing:ON  
RAM Trace Buffer Size:100000  Maximum Trace Buffer File Size:10000000  
Max Packet Bytes Trace:256  Default Packet Bytes Traced:100  
Trace File Record Size:2048  Stop Trace Event: TCP.013  
Maximum Hours to HD Shadow: 1
```

## Nodisplay

Use the **nodisplay** command to select and turn off messages displaying on the console.

#### Syntax:

```
nodisplay          event. . .  
                   group . . .  
                   range . . .  
                   subsystem . . .
```

#### **event** *subsystem.event#*

Suppresses the displaying of a specified event (*subsystem.event#*).

#### **group** *groupname*

Suppresses the displaying of messages that were previously added to the specified group (*groupname*).

#### **range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Suppresses the displaying of a range of messages for the specified subsystem.

#### Example:

```
nodisplay range gw 19 22
```

Suppresses the display of events gw.19, gw.20, gw.21, and gw.22.

#### **subsystem** *subsystemname*

Suppresses the displaying of messages associated with the specified subsystem.

## Noremote

Use the **noremote** command to suppress the logging of events to a remote workstation based on event number, group, range of events, or subsystem.

**Note:** With the **noremote** command, there is usually no need to specify a *syslog\_facility* and *syslog\_level*, such as there is with the **remote** command. However, for **noremote subsystem** command, there exists the option of selectively suppressing specific message levels (for example, “error” only or “trace” only) rather than turning them all off. (If you do not specify any



## ELS Configuration Commands (Talk 6)

### Notrace

Disables packet trace for the specified event/range/subsystem/group.

#### Syntax:

```
notrace                event . . .  
                        group . . .  
                        range . . .  
                        subsystem . . .
```

#### **event** *subsystem.event#*

Suppresses the sending of packet trace data for the specified event#

#### **group** *groupname*

Suppresses the sending of packet trace data that was previously added to the specified group (*groupname*).

#### **range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Disables the sending of packet trace data for a range of messages for the specified subsystem.

#### **Example:**

```
trace range gw 19 22
```

Suppresses the sending of packet trace data for events gw.19, gw.20, gw.21, and gw.22.

#### **subsystem** *subsystemname*

Suppresses the sending of packet trace data for the specified subsystem (*subsystemname*).

### Notrap

Use the **notrap** command to select and turn off messages so that they are no longer sent to a network management workstation in SNMP traps.

#### Syntax:

```
notrap                event . . .  
                        group . . .  
                        range . . .  
                        subsystem . . .
```

#### **event** *subsystem.event#*

Suppresses the sending of the specified message in an SNMP trap (*subsystem.event#*).

#### **group** *groupname*

Suppresses the sending of messages in SNMP traps that were previously added to the specified group (*groupname*).

#### **range** *subsystemname first\_event\_number last\_event\_number*

## ELS Configuration Commands (Talk 6)

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Suppresses the sending of messages for the events in the specified range for the specified subsystem in SNMP traps.

### Example:

```
notrap range gw 19 22
```

Suppresses the sending of messages for events gw.19, gw.20, gw.21, and gw.22 in SNMP traps.

### **subsystem** *subsystemname*

Suppresses the sending of messages in SNMP traps that are associated with the specified subsystem.

## Remote

Use the **remote** command to select the events to be logged to a remote workstation by event number, range of events, group, or subsystem.

### Syntax:

```
remote          event . . .  
                  range . . .  
                  group . . .  
                  subsystem . . .
```

### **event** *subsystem.event# syslog\_facility syslog\_level*

Causes the specified event to be logged remotely.

Syslog facility and level values are used by the syslog daemon in the remote workstation to determine where to log the messages. This value overrides the default values that are set with the **set facility** and **set level** commands.

#### *syslog\_facility*

```
log_auth  
log_authpriv  
log_cron  
log_daemon  
log_kern  
log_lpr  
log_mail  
log_news  
log_syslog  
log_user  
log_uucp  
log_local0-7
```

#### *syslog\_level*

```
log_emerg  
log_alert
```

## ELS Configuration Commands (Talk 6)

log\_crit  
log\_err  
log\_warning  
log\_notice  
log\_info  
log\_debug

These values do NOT have any particular association with any daemons on the IBM 2210. They are merely identifiers which are used by the syslog daemon on the remote workstation.

**range** *subsystemname first\_event\_number last\_event\_number syslog\_facility syslog\_level*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the events in the specified range for the specified subsystem to be remotely logged based on the *syslog\_facility* and *syslog\_level* values. See “the remote event command” on page 179.

### Example:

```
remote range gw 19 22 log_user log_info
```

Causes the event gw.19, gw.20, gw.21, and gw.22 to be logged remotely on the *syslog\_facility* value of log\_user and the *syslog\_level* value of log\_info.

**group** *group.name syslog\_facility syslog\_level*

Allows events belonging to the specified group to be logged remotely based on the *syslog\_facility* and *syslog\_level* values. See “the remote event command” on page 179.

**subsystem** *subsystem.name message\_level syslog\_facility syslog\_level*

Where *subsystem.name* is the name of the subsystem and *message\_level* is the level of messages selected in the subsystem.

Causes the events within the specified *subsystem.name* whose *message\_level* agrees with the specified *message\_level* to be logged remotely at the files based on the *syslog\_facility* and *syslog\_level* values. See “the remote event command” on page 179.

*Message\_level* is a value such as “ALL,” “ERROR,” “INFO,” or “TRACE”. See “Logging Level” on page 153. The value specified in the **remote** command must agree with the value as coded on the particular event within the subsystem, or that event within the subsystem will not be remotely logged.

### Example:

```
remote subsystem TKR all log_user log_info
```

In the above example, all messages in subsystem TKR (“all” includes any messages coded for “error,” “info,” or “trace”) will be logged remotely based on log\_user and log\_info values at the remote host.

Use the **list all** or **list status** commands to display what you have set with the **noremove** and **remote** commands.

## Set

Use the **set** command to set the maximum number of tags per second, the timestamp feature, or to set tracing options.

### Syntax:

```
set                pin . . .
                    remote-logging . . .
                    timestamp . . .
                    trace . . .
```

### **pin** *max\_traps*

Use the **set pin** command to set the pin parameter to the maximum number of traps that can be sent on a per-second basis. Internally, the pin resets every tenth of a second. (One tenth of the number (*max\_traps*) is sent every tenth of a second.)

### **remote-logging**

Use the **set remote-logging** command to configure remote logging options. When these options are configured from the monitoring environment, the changes take effect immediately, and return to their previously configured settings when the device is rebooted.

### Syntax:

```
set remote-logging  on
                    off
                    facility . . .
                    level . . .
                    no-msgs
                    remote_ip_addr . . .
                    source_ip_addr ...
                    local_id
```

**on** Turns remote logging on. Remote logging is now enabled to allow any messages selected by the **remote** command to be actively logged.

**off** Turns remote logging off. All messages selected by the 'remote' command will be prevented from being logged.

### **facility**

Specifies a value that, in combination with the *level* value, is used by the syslog daemon in the remote workstation to determine where to log messages. This value is used for all remotely-logged ELS messages unless you specify a different value for a particular ELS event, range, group, or subsystem with the **remote** command.

These are all possible syslog facility values:

```
log_auth
log_authpriv
log_cron
log_daemon
```

## ELS Configuration Commands (Talk 6)

log\_kern  
log\_lpr  
log\_mail  
log\_news  
log\_syslog  
log\_user  
log\_uucp  
log\_local0-7

**level** Specifies a value that, in conjunction with the *facility* value, is used by the syslog daemon in the remote workstation to determine where to log messages. This value is used for all remotely-logged ELS messages unless you specify a different value for a particular ELS event, range, group, or subsystem with the **remote** command.

These are all possible syslog level values:

log\_emerg  
log\_alert  
log\_crit  
log\_err  
log\_warning  
log\_notice  
log\_info  
log\_debug

### **no-msgs**

Specifies the number of messages in the buffer for the remote log before log wraps.

### **remote\_ip\_addr**

This is an ip address of the form xxx.xxx.xxx.xxx where xxx can be any integer 0 to 255. It represents the ip address of the remote host where the log files reside.

### **source\_ip\_addr**

This is an ip address of the form xxx.xxx.xxx.xxx where xxx can be any integer 0 to 255.

You should use an IP address that is configured in the 2210 for easier identification when the IP address or the hostname is shown in the remotely-logged ELS message. You should also verify that this IP address is quickly resolved to a hostname by the name server, or at least that the name server responds quickly with "address not found."

To determine that the IP address resolves properly enter the **host** command on your workstation as shown:

```
workstation>host 5.1.1.1  
host: address 5.1.1.1 NOT FOUND  
workstation>
```

If the response takes more than 1 second, select an IP address that resolves more quickly.

### **local\_id**

This is any character string of up to 32 characters, which is



## ELS Configuration Commands (Talk 6)

included in the logged message at the remote file and can help identify which machine logged the message.

### **timestamp** [**timeofday** or **uptime** or **off**]

Allows you to turn on message timestamping so that either the time of day or uptime (number of hours, minutes, and seconds, but no date, since the device was last initialized) appears next to each message. Set timestamp can also be turned off.

Use the **set timestamp** command to enable one of the following timestamp options.

#### **timeofday**

Adds an HH:MM:SS prefix to each ELS message indicating the time of the occurrence during a 24-hour day.

#### **uptime**

Adds an HH:MM:SS prefix to each ELS message indicating the time of the occurrence during a 100-hour cycle. After 100 hours of uptime, the uptime counter returns to zero to begin another 100-hour cycle.

**off** Turns off the ELS timestamp prefix.

**trace** Use the **set trace** command to configure tracing options. If you configure tracing options from the monitoring environment, the changes take effect immediately. They return to their previously configured settings when the device is rebooted.

**Note:** Tracing should be used only under the direction of trained support personnel. Tracing, especially when used with disk-shadowing enabled, uses device resources and can impact overall performance and throughput.

#### **Syntax:**

```
set trace          decode  
                   default-bytes-per-pkt  
                   max-bytes-per-pkt  
                   off  
                   on  
                   reset  
                   stop-event  
                   wrap-mode
```

#### **decode** *off/on*

Turns packet decoding on or off. Packet decoding is not supported by all components.

#### **default-bytes-per-pkt** *bytes*

Sets the default number of bytes traced. This value is used if a value is not specified by the component doing the tracing.

#### **max-bytes-per-pkt** *bytes*

Sets the maximum number of bytes traced for each packet.

**off** Disables packet tracing.

## ELS Configuration Commands (Talk 6)

**on** Enables packet tracing.

**reset** Clears the trace buffer and resets all associated counters.

### **stop-event** *event id*

Stops tracing when an event (event id) occurs. Enter either an ELS event id (for example: TCP.013) or "None". "None" is the default. Tracing stops only if the display of the particular ELS event is enabled.

When a stop-event occurs, an entry is written to the trace buffer. The **view** command for this trace entry will display "Tracing stopped due to ELS Event Id: TCP.013".

After tracing stops due to a stop-event, you must re-enable tracing with the **set trace on** command. (A restart will also re-enable tracing if enabled from the ELS Config> prompt.)

### **wrap-mode** [off or on]

Turns the trace buffer wrap mode on or off. If wrap mode is on and the trace buffer is full, previous trace records will be overwritten by new trace records as necessary to continue tracing.

## Trace

Enables packet trace for the specified event/range/subsystem/group. When the **trace** command is used from the ELS Config> prompt, the changes become part of the configuration, and a reboot is required to activate the changes.

### **Syntax:**

**trace** event . . .  
group . . .  
range . . .  
subsystem . . .

### **event** *subsystem.event#*

Causes the specified trace event (*subsystem.event#*) to be displayed on the system monitoring.

### **group** *groupname*

Allows trace events that were previously added to the specified group to be displayed on the device monitoring.

### **range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the trace events in the specified range for the specified subsystem to be displayed on the system monitoring.

### **Example:**

```
trace range gw 19 22
```

Causes the trace events gw.19, gw.20, gw.21, and gw.22 to be displayed on the system monitoring.

**subsystem** *subsystemname*

Allows trace events associated with the specified subsystem to be displayed on the device monitoring.

## Trap

Use the **trap** command to select the message to be sent to the remote SNMP network management workstation. A remote SNMP network management workstation is an IP host in the network acting as an SNMP manager.

**Syntax:**

```
trap                event . . .
                    group . . .
                    range . . .
                    subsystem . . .
```

**event** *subsystem.event#*

Causes the specified message (*subsystem.event#*) to be sent to a network management workstation in an SNMP trap.

**group** *groupname*

Allows messages that were previously added to the specified group to be sent to a network management workstation in an SNMP trap.

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the messages that are in the specified range for the specified subsystem to be sent to a network management workstation in an SNMP trap.

**Example:**

```
trap range gw 19 22
```

Causes the messages in events gw.19, gw.20, gw.21, and gw.22 to be sent to a network management workstation in an SNMP trap.

**subsystem** *subsystemname*

Allows messages associated with the specified subsystem to be sent to a management station in an SNMP trap.

**Note:** Messages for the IP, ICMP, ARP and UDP subsystems cannot be sent in SNMP traps because these areas are or may be used in the process of sending the SNMP trap. This could lead to an infinite loop of traffic putting an undue strain on the device.

## ELS Net Filter Configuration Commands

ELS net filters give you the capability of looking only at ELS messages with certain net numbers and discarding other ELS messages.

When you create a filter, you specify the subsystem, event, or range of events to which the filter applies. You also specify the queue (for example, "DISPLAY",

## ELS Configuration Commands (Talk 6)

“TRAP”, “TRACE”, or “REMOTE-LOGGING”). Finally, you specify the net number (or range of net numbers) that you want to filter.

When you enable the filter, messages that have been turned on by the ELS commands are subject to filtering. The filter allows only messages with the specified net numbers. The filter causes the device to discard messages that do not contain the specified net numbers.

By reducing the number of ELS messages sent, you can more easily locate messages for the interfaces in which you are interested.

This section describes the commands to configure the ELS net filters. To configure these filters, enter the **filter net** command at the ELS> prompt. Then, enter the configuration commands at the ELS Filter net> prompt.

Table 20. ELS Net Filter Configuration Commands

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Create	Creates a filter and assigns it a number. A maximum of 64 filters is allowed.
Delete	Deletes a specified filter number or all filters.
Disable	Disables a specified filter number or all filters.
Enable	Enables a specified filter number or all filters.
List	Lists a specified filter number or all filters.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Create

Use the **create** command to create an ELS net filter.

#### Syntax:

```
create queue                event event_name net#_start net#_end  
                             _range event_range net#_start net#_end  
                             subsystem subsystem_name net#_start net#_end
```

**queue** The queue for which you are setting the filter. The valid queues are:

- Display
- Trace
- Trap
- Remote

**event** *event\_name net#\_start net#\_end*

Specifies the event and net numbers that you are filtering.

If you specify *net#\_start* and *net#\_end* as the same number, you are filtering on a single net number.

The command **create trap event GW.009 2 10** filters traps for message GW.009 for net numbers 2 through 10.

**range** *event\_range net#\_start net#\_end*

Specifies the range of ELS messages and net numbers that you are filtering.

## ELS Configuration Commands (Talk 6)

If you specify *net#\_start* and *net#\_end* as the same number, you are filtering on a single net number.

The command **create remote range ipx 19 22 3 6** filters all ipx messages beginning with IPX.019 and ending with IPX.022 for net numbers 3 through 6 for remote logging.

**subsystem** *subsystem\_name net#\_start net#\_end*

Specifies the subsystem and net numbers that you are filtering.

If you specify *net#\_start* and *net#\_end* as the same number, you are filtering on a single net number.

The command **create display subsys ip 1 1**, filters all ELS messages for the ip subsystem that contain net number 1 to the display. All other ip subsystem messages are discarded.

### Delete

Use the **delete** command to delete a specific ELS filter or all ELS filters.

#### Syntax:

```
delete                all  
                        filter filter#
```

**all** Deletes all currently configured filters.

**filter** *filter#*

Deletes the filter specified by *filter#*. Use the **list** command to obtain the number for the filter you want to delete.

### Disable

Use the **disable** command to disable a specific ELS filter or all ELS filters.

#### Syntax:

```
disable               all  
                        filter filter#
```

**all** Disables all currently configured filters.

**filter** *filter#*

Disables the filter specified by *filter#*. Use the **list** command to obtain the number for the filter you want to disable.

### Enable

Use the **enable** command to enable a specific ELS filter or all ELS filters.

#### Syntax:

```
enable                all  
                        filter filter#
```

**all** Enables all currently configured filters.

**filter** *filter#*

Enables the filter specified by *filter#*. Use the **list** command to obtain the number for the filter you want to enable.

## ELS Configuration Commands (Talk 6)

### List

Use the **list** command to list a specific ELS filter or all ELS filters.

#### Syntax:

```
list                all
                    filter filter#
```

**all** Lists all currently configured filters.

**filter** Lists the filter specified by *filter#*.

## ELS Message Buffering Configuration Commands

Table 21 describes the commands available at the ELS Config Advanced> prompt.

Table 21. ELS Message Buffering Configuration Commands

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
List	Displays the configuration settings for message buffering.
Log	Enables logging of selected messages to the message buffer.
Nolog	Turns off logging of selected messages to the message buffer.
Set	Sets the size of the message buffer, the wrapping mode, whether logging occurs, which event will end message buffering, and what the system does when message buffering is stopped by an event.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### List

Use the **list** command to list the ELS message buffering configuration.

#### Syntax:

```
list                status
```

#### Example:

```
ELS Config Advanced> list status
-----Configuration-----
Logging Status:  OFF   Wrap Mode:  ON   Logging Buffer Size:  8500   Kbytes
Stop-Event:     APPN.2   Stop-String:  netdn for intf 6
Additional Stop-Action:  NONE
```

See “Set” on page 190 for a description of the commands that change the values in the display.

### Log

Use the **log** command to select which messages will be logged to the message buffer.

#### Syntax:

```
log                event
                    group
```

## ELS Configuration Commands (Talk 6)

range

subsystem

**event** *subsystem.event#*

Causes the specified message (*subsystem.event#*) to be logged to the message buffer.

**group** *groupname*

Allows messages that were previously added to the specified group to be logged to the message buffer.

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the messages that are in the specified range for the specified subsystem to be logged to the message buffer.

**Example:**

```
log range gw 19 22
```

Causes the messages in events gw.19, gw.20, gw.21, and gw.22 to be logged to the message buffer.

**subsystem** *subsystemname*

Allows messages associated with the specified subsystem to be logged to the message buffer.

### Nolog

Use the **nolog** command to remove messages from the defined list of messages that are logged to the message buffer.

**Syntax:**

**nolog**

event

group

range

subsystem

**event** *subsystem.event#*

Causes the specified message (*subsystem.event#*) not to be logged to the message buffer.

**group** *groupname*

Allows messages that were previously added to the specified group not to be logged to the message buffer.

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the messages that are in the specified range for the specified subsystem not to be logged to the message buffer.

**Example:**

```
log range gw 19 22
```

## ELS Configuration Commands (Talk 6)

Causes the messages in events gw.19, gw.20, gw.21, and gw.22 not to be logged to the message buffer.

### **subsystem** *subsystemname*

Allows messages associated with the specified subsystem not to be logged to the message buffer.

## **Set**

Use the **set** command to configure various ELS message buffering options.

### **Syntax:**

```
set                buffer-size Kbytes  
                   logging [on or off]  
                   stop action . . .  
                   stop event subsystem.event#  
                   stop string text  
                   wrap on or off
```

### **buffer-size** *Kbytes*

Specifies the size, in kilobytes, of the message buffer that the system should allocate. The **mem** command displays this memory as Never Alloc. Setting this value too high could prevent the device from operating correctly after a reboot because of insufficient memory for protocols and features.

**Valid values:** 0 KB to 80% of the memory available on the device.

**Default value:** 0 (no message buffering)

**Note:** You must allocate a buffer with this command before you can set logging on.

### **logging** [*on* or *off*]

Specifies whether message buffering will occur. This command will not take affect until you allocate a buffer using the **set buffer-size** command. The default is off.

### **stop action** [*appn-dump* or *none* or *system-dump*]

Specifies the additional action the system takes when the “stop event” (and if specified, the “stop string”) occurs. The actions are:

#### **appn-dump**

Dumps the APPN protocol, if it is active. The APPN dump will indicate that the dump was taken as the result of a stop action.

**none** No other action is taken after logging stops.

#### **system-dump**

Dumps the entire system. The system dump will indicate that the dump was taken as the result of a stop action.

**Default value:** none

### **stop event** [*subsystem.event#* or *none*]

Specifies the event (*subsystem.event#*) that stops logging. If you have specified a stop string, the text in the stop string must also match. When the stop event occurs:

1. The next five ELS messages are logged.



2. Logging stops.
3. The system performs the specified “stop action.”

Logging remains stopped until the next time you issue the **set logging on** command or reboot the device.

If you do not specify the stop event when you enter the command, the system prompts you to enter the stop event. Specifying **none** disables the stop event function.

**Default value:** none

### **stop string** *text* or **none**

Specifies the string to be used in conjunction with the “stop event” to stop logging. If you have not specified a stop event, the system ignores the “stop string.”

*Text* can be any ASCII string up to 32 characters in length. If you do not specify *text* when you enter the command, the system will prompt you for the string. Entering **none** clears the “stop string.”

**Default value:** none

### **wrap** [**on** or **off**]

Specifies whether to stop the log when the buffer is full (off) or to log the new messages at the beginning of the buffer (on).

**Default value:** off

---

## Entering and Exiting the ELS Operating Environment

The ELS monitoring environment (available from the GWCON process) is characterized by the ELS> prompt. Commands entered at this prompt modify the current ELS parameter settings. These commands are described “Chapter 11. Configuring and Monitoring the Event Logging System (ELS)” on page 171.

To enter the ELS monitoring environment from OPCON:

1. Enter the **console** command.

```
* console
```

The monitoring displays the GWCON prompt (+). If the prompt does not appear when you first enter GWCON, press **enter**.

2. At the GWCON prompt, enter the following command to access ELS:

```
+ event
```

The monitoring displays the ELS monitoring prompt (ELS>). Now, you can enter ELS monitoring commands.

To leave the ELS monitoring environment, enter the **exit** command.

### ELS Monitoring Commands

This section summarizes and then explains all the ELS monitoring commands. After accessing the ELS Monitoring environment, you can enter ELS monitoring commands at the ELS> prompt.

Table 22. ELS Monitoring Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Advanced	Places you in the advanced configuration environment in which you can configure message buffering.
Clear	Resets to zero the counts of messages associated with specified events, groups, or subsystems.
Display	Enables message display on the console.
Exit	Exits the ELS console process and returns the user to GWCON.
Filter	Filter ELS messages based upon the net number.
List	Lists information on ELS settings and messages.
Nodisplay	Disables message display on the console.
Noremote	Disables remote logging to file at remote workstation.
Notrace	Disables trace event display on the console.
Notrap	Keeps messages from being sent out in SNMP traps to the network management workstation.
Packet-trace	Provides an enhanced central environment for setting and listing active packet tracing parameters.
Remote	Allows messages to be logged at a file on a remote workstation.
Remove	Frees up memory by erasing stored information.
Restore	Clears current settings and reloads initial ELS configuration.
Retrieve	Reloads the saved ELS configuration.
Save	Stores the current configuration.
Set	Sets the pin parameter and the timestamp feature.
Statistics	Displays available subsystems and pertinent statistics.
Trace	Enables trace event display on the console.
Trap	Allows messages to be sent to a network management workstation in SNMP traps.
View	Allows viewing of traced packets.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

#### Advanced

Use the **advanced** command to enter the advanced monitoring environment. In this environment you change message buffering operation.

**Syntax:**

**advanced**

#### Clear

Use the **clear** command to reset to zero the counts of the display, trace, trap, or remote commands as they relate to specific events, groups or subsystems.

**Syntax:**

## ELS Monitoring Commands (Talk 5)

**clear**                                    event . . .  
    group . . .  
    subsystem . . .

**event** *subsystem.event#*  
Resets the count of events to zero for displaying, trapping, tracing or remote logging of the specified event (*subsystem.event#*).

**group** *group.name*  
Resets the count of events to zero for displaying, trapping, tracing or remote logging of the specified group (*group.name*).

**subsystem** *subsystem.name*  
Resets the count of events to zero for displaying, trapping, tracing or remote logging of the specified subsystem (*subsystem.name*).

## Display

Use the display command to enable the message display on the monitoring monitor for specific events.

### Syntax:

**display**                                    event . . .  
    group . . .  
    range . . .  
    subsystem . . .

**event** *subsystem.event#*  
Displays messages for the specified event (*subsystem.event#*).

**group** *groupname*  
Displays messages of a specified group (*groupname*).

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event in the specified event range.

Displays a range of messages for the specified subsystem.

### Example:

```
display range gw 19 22
```

Displays events gw.19, gw.20, gw.21, and gw.22.

**subsystem** *subsystem.name*  
Displays any messages associated with the specified subsystem (*logging level*). If you do not specify a logging level, all messages for that subsystem are turned on.

## Files

Use the **files** command to transfer trace files to another host on the network using TFTP.

### Syntax:

## ELS Monitoring Commands (Talk 5)

**files trace tftp** *host\_IP\_addr filename*

**host\_IP\_addr**

Is the IP address of the host to which you are transferring the files.

**filename**

Is the target file name. For TFTP, the file name must be fully path specified, and the file name must already exist on the target host.

## Filter

Use the **filter** command to access the filter configuration command environment. See “ELS Net Filter Monitoring Commands” on page 213 for complete command details.

**Syntax:**

**filter** net

## List

Use the **list** command to get updated information regarding ELS settings and to get listings of selected messages.

**Syntax:**

**list** all  
active . . .  
event . . .  
filter-status  
groups . . .  
pin  
remote-log status  
subsystem . . .  
trace-status

**all** Lists all subsystems, defined groups, enabled subsystems, enabled events, and pins.

**active** *subsystem.name*

Displays the events that are active for a specific subsystem or have non-zero message counts.

**Example:**

```
list active ip
Event      Active  Count  Message
IP.007                2874  %I -> %I
IP.022                 13  add nt %I int %I nt %n int %s/%d
IP.036                2874  rcv pkt prt %d frm %I
IP.058                 23  del nt %I rt via %I nt %n int %s/%d
IP.068      D          37  routing cache cleared
D=Display on  T=Trap on  P=Packet Trace on  F=Filter on  R=Remote Logging on
A=Advanced on
```

If Remote logging is turned on, those events displayed as active for a subsystem will have an “R” next to their name.

### **event** *subsystem.event#*

Displays the logging level, the message, and the count of the specified event.

#### **Example:**

```
list event ip.007
```

```
Level: p-TRACE
Message: source_ip_address -> destination_ip_address
Active: Count: 84182
```

If Remote-logging had been activated for this event, and the *syslog\_facility* and *syslog\_level* values were *log\_daemon* and *log\_crit*, the last lines would look like:

```
Active: R count:84182
Syslog Facility: log_daemon Syslog Level: log_crit
```

### **filter-status**

Lists ELS net number filters.

### **groups** *group.name*

Displays the user-defined group names.

**pin** Lists the current number of ELS event messages sent per second in SNMP traps. This is a threshold value that can be used to reduce the amount of SNMP trap traffic.

#### **Example:**

```
list pin
```

```
Pin: 100 events/second
```

### **remote-log status**

Lists the current values of the remote logging options set in the **set remote-logging** command.

#### **Example:**

```
list r
```

```
Remote Logging is On
Source Ip Address = 192.9.200.8
Remote Log IP Address = 192.9.200.1
Default Syslog Facility = LOG_USER
Default Syslog Priority Level = LOG_INFO
Number of Messages in Remote Log = 256
Remote Logging Local ID = SPHINX
```

### **subsystem** *subsystem.name*

Lists event names, the total number of events that have occurred, and their descriptions.

**Note:** Although ELS supports all subsystems on the device, not all devices support all subsystems. See *ELS Messages* for a list of currently supported subsystems.

### **subsystem** *subsystem.name*

Lists all events, logging levels, and messages for the specified subsystem.

#### **Example:**

```
list subsystem eth
```

```
Event      Level      Message
ETH.001    P-TRACE    brd rcv unkwn type packet_type source_Ethernet_address ->
            destination_Ethernet_address nt network
ETH.002    UE-ERROR    rcv unkwn typ packet_type source_Ethernet_address ->
            destination_Ethernet_address nt network
ETH.010    C-INFO      LLC unk SAP_DSAP source_Ethernet_address ->
            destination_Ethernet_address nt network
```

## ELS Monitoring Commands (Talk 5)

### **subsystem all**

Lists all events, logging levels, and messages for every event that has occurred on the device.

### **trace-status**

Displays information on the status of packet tracing, including configuration and run-time information.

#### **Example:**

```
list trace-status
```

```
----- Configuration -----  
Trace Status:ON  Wrap Mode:ON  Decode Packets:OFF  HD Shadowing:OFF  
RAM Trace Buffer Size:100000  Maximum Trace Buffer File Size:10000000  
Default Packet Bytes Traced:100  Max Packet Bytes Traced:256  
----- Run-time Status -----  
Packets in RAM Trace Buffer:535  Free Trace Buffer Memory:180  
Trace Errors:22  First Packet:23  Last Packet:557  
Trace Buffers Shadowed to HD:0  Trace Buffer File Size:0
```

- “Trace Status” in the LIST TRACE-STATUS display will indicate OFF when STOP-ON-EVENT action occurs.
- “HD Shadowing” in the LIST TRACE-STATUS display will indicate OFF when STOP-ON-EVENT action occurs or when Time Limit is exceeded.
- “Trace Buffer File Size” will display <wrapped> when a wraparound has occurred in the trace file.
- If disk-shadowing time limit is exceeded, but there has not been a trace record written since the time expired, then “ HD-Shadowing Time Exceeded? NO < Next trace will turn it OFF>” will be displayed. When the next trace record has been written, then “HD-Shadowing Time Exceeded? YES” will be displayed.

ELS Config>**LIST TRACE** command under **talk 6** displays information similar to the following:

```
----- Configuration -----  
Trace Status:ON  Wrap Mode:ON  Decode Packets:ON  HD Shadowing:ON  
RAM Trace Buffer Size:100000  Maximum Trace Buffer File Size:10000000  
Max Packet Bytes Trace:256  Default Packet Bytes Traced:100  
Trace File Record Size:2048  Stop Trace Event: TCP.013  
Maximum Hours to HD Shadow: 1
```

## Nodisplay

Use the **nodisplay** command to select and turn off messages displaying on the console.

#### **Syntax:**

```
nodisplay          event . . .  
                   group . . .  
                   range . . .  
                   subsystem . . .
```

**event** *subsystem.event#*

Suppresses the displaying of messages for the specified event.

**group** *group.name*

Suppresses the displaying of messages that were previously added to the specified group (*group.name*).

**range** *subsystemname first\_event\_number last\_event\_number*

## ELS Monitoring Commands (Talk 5)

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Suppresses the displaying of a range of messages for the specified subsystem.

**Example:**

```
nodisplay range gw 19 22
```

Suppresses the display of events gw.19, gw.20, gw.21, and gw.22.

**subsystem** *subsystem.name*

Suppresses the displaying of messages associated with the specified subsystem (*logging level*).

## Noremote

Use the **noremote** command to select and turn off messages logging to a remote workstation.

**Syntax:**

```
noremote          event . . .  
                   group . . .  
                   range . . .  
                   subsystem . . .
```

**event** *subsystem.event#*

Suppresses the remote logging of messages for the specified event.

**group** *group.name*

Suppresses the remote logging of messages that were previously added to the specified group (*group.name*).

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Suppresses the remote logging of a range of messages for the specified subsystem.

**Example:**

```
noremote range gw 19 22
```

Suppresses the remote logging of events gw.19, gw.20, gw.21, and g.22

**subsystem** *subsystem.name*

Suppresses the remote logging of messages associated with the specified subsystem (*logging level*).

**Example:**

```
noremote subsystem tkr
```

**Note:** With noremote, there is no need to specify a Syslog Facility and Level, such as there is with Remote.

## ELS Monitoring Commands (Talk 5)

Use the **list event** and **list active** commands to verify what you set with the **remote** and **noremote** commands.

## Notrace

Use the **notrace** command to stop display of selected trace events at the monitoring.

### Syntax:

```
notrace          event . . .  
                  group . . .  
                  range . . .  
                  subsystem . . .
```

**event** *subsystem.event#*

Suppresses the display of the specified tracing event.

**group** *groupname*

Suppresses the display of tracing events related to the specified group (*groupname*).

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Disables the sending of packet trace data for a range of messages for the specified subsystem.

### Example:

```
notrace range gw 19 22
```

Suppresses the sending of packet trace data for events gw.19, gw.20, gw.21, and gw.22.

**subsystem** *subsystemname [logging-level]*

Suppresses the display of tracing events that are associated with the specified subsystem and logging level. If you do not specify a *logging-level* you suppress tracing for all logging levels for the subsystem.

### Example:

```
notrace subsystem fr1 error
```

```
notrace subsystem fr1
```

## Notrap

Use the **notrap** command to select and turn off messages so that they are no longer sent to a network management workstation in SNMP traps.

### Syntax:

```
notrap          event. . .  
                  group . . .  
                  range . . .  
                  subsystem . . .
```



**event** *subsystem.event#*

Suppresses the sending of the specified message in an SNMP trap (*subsystem.event#*).

**group** *groupname*

Suppresses the sending of messages in SNMP traps that were previously added to the specified group (*groupname*).

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Suppresses the sending of messages for the events in the specified range for the specified subsystem in SNMP traps.

**Example:**

```
notrap range gw 19 22
```

Suppresses the sending of messages for events gw.19, gw.20, gw.21, and gw.22 in SNMP traps.

**subsystem** *subsystemname [logging-level]*

Suppresses the sending of messages in SNMP traps that are associated with the specified subsystem and logging level. If you do not specify a *logging-level* you suppress trapping for all logging levels for the subsystem.

**Example:**

```
notrap subsystem eth error
```

## Packet Trace

Use the **packet-trace** command to display/enable/disable packet tracing information for various subsystems.

**Syntax:**

**packet-trace**

Use the **Exit** command when you are finished using Packet Trace.

For complete command descriptions, see “Packet-trace Monitoring Commands” on page 210.

## Remote

Use the **remote** command to select the events to be logged to a remote file by event number, range of events, group, or subsystem.

**Syntax:**

**remote**

```
event . . .  
group . . .  
range . . .  
subsystem . . .
```

## ELS Monitoring Commands (Talk 5)

**event** *subsystem.event# syslog\_facility syslog\_level*

Causes the specified event to be logged remotely.

Syslog facility and level values are used by the syslog daemon in the remote workstation to determine where to log the messages. This value overrides the default values that are set with the **set facility** and **set level** commands.

*syslog\_facility*

- log\_auth
- log\_authpriv
- log\_cron
- log\_daemon
- log\_kern
- log\_lpr
- log\_mail
- log\_news
- log\_syslog
- log\_user
- log\_uucp
- log\_local0-7

*syslog\_level*

- log\_emerg
- log\_alert
- log\_crit
- log\_err
- log\_warning
- log\_notice
- log\_info
- log\_debug

These values do NOT have any particular association with any daemons on the IBM 2210. They are merely identifiers which are used by the syslog daemon on the remote workstation.

### Example:

```
remote event gw.019 log_user log_info
```

**group** *group.name syslog\_facility syslog\_level*

Allows events belonging to the specified group to be logged remotely based on the *syslog\_facility* and *syslog\_level* values. See “the remote event command”.

**range** *subsystemname first\_event\_number last\_event\_number syslog\_facility syslog\_level*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the events in the specified range for the specified subsystem to be remotely logged based on the *syslog\_facility* and *syslog\_level*. See “the remote event command”.

### Example:

```
remote range gw 19 22 log_user log_info
```

Causes the event gw.19, gw.20, gw.21, and gw.22 to be logged remotely to the files specified by the *syslog\_facility* value of log\_user and the *syslog\_level* value of log\_info.

**subsystem** *subsystem.name message\_level syslog\_facility syslog\_level*

Where *subsystem.name* is the name of the subsystem and *message\_level* is the level of messages selected in the subsystem.

Causes the events within the specified *subsystem.name* whose *message\_level* agrees with the specified *message\_level* to be logged remotely based on the *syslog\_facility* and *syslog\_level*. See “the remote event command” on page 200.

*Message\_level* is a value such as ALL, ERROR, INFO, or TRACE. See “Logging Level” on page 153. The value specified in the **remote** command must agree with the value as coded on the particular event within the subsystem, or that event within the subsystem will not be remotely logged.

### Example:

```
remote subsystem eth all log_user log_info
```

In the above example, all messages in subsystem TKR (“all” includes any messages coded for “error,” “info,” or “trace”) will be logged remotely to files specified by log\_user and log\_info at the remote host.

Use the **list event** and **list active** commands to verify what you set with the **remote** and **noremove** commands.

## Remove

Use the **remove** command to free up memory by erasing stored information. If you have previously saved the current configuration with the **save** command, remove allows you to erase the saved configuration.

### Syntax:

remove

## Restore

Use the **restore** command to clear all current settings (except counters) and reload the initial ELS configuration. To retain the current settings, use the **save** command before restoring the initial configuration.

### Syntax:

restore

## Retrieve

Use the **retrieve** command to reload the saved ELS configuration. If you have previously saved the current configuration with the **save** command, use **retrieve** to reload it. **Retrieve** does not erase the saved configuration after it executes. To erase the saved configuration, use the **remove** command.

## ELS Monitoring Commands (Talk 5)

**Syntax:**

retrieve

## Save

Use the **save** command to store the current configuration (except counters). **Save** does not affect the default configuration (the one you set with the configuration commands). Use **save** after modifying the configuration with the monitoring commands with the intention of saving this configuration over a restart. There can be only one saved configuration at a time. To reload the saved configuration, use the **retrieve** command.

**Syntax:**

save

## Set

Use the **set** command to set the maximum number of traps per second, to set the timestamp feature, or to set the tracing options.

**Syntax:**

```
set                pin . . .  
                   remote-logging . . .  
                   timestamp . . .  
                   trace . . .
```

**pin** Use the **set pin** command to set the pin parameter to the maximum number of traps that can be sent on a per-second basis. Internally, the pin resets every tenth of a second. (One tenth of the number *max\_traps* is sent every tenth of a second.)

### remote-logging

Use the **set remote-logging** command to configure remote logging options. When these options are configured from the monitoring environment, the changes take effect immediately, and return to their previously configured settings when the device is rebooted.

**Syntax:**

```
set remote-logging  on  
                   off  
                   facility . . .  
                   level . . .  
                   local_id  
                   remote_ip_addr . . .  
                   source_ip_addr ...
```

**on** Turns remote logging on. Remote logging is now enabled to allow any messages selected by the **remote** command to be actively logged.

## ELS Monitoring Commands (Talk 5)

**off** Turns remote logging off. All messages selected by the **remote** command will be prevented from being logged.

### **facility**

Specifies a value that, in combination with the *level* value, is used by the syslog daemon in the remote workstation to determine where to log messages. This value is used for all remotely-logged ELS messages unless you specify a different value for a particular ELS event, range, group, or subsystem with the **remote** command.

These are all possible syslog facility values:

- log\_auth
- log\_authpriv
- log\_cron
- log\_daemon
- log\_kern
- log\_lpr
- log\_mail
- log\_news
- log\_syslog
- log\_user
- log\_uucp
- log\_local0-7

**level** Specifies a value that, in conjunction with the *facility* value, is used by the syslog daemon in the remote workstation to determine where to log messages. This value is used for all remotely-logged ELS messages unless you specify a different value for a particular ELS event, range, group, or subsystem with the **remote** command.

These are all possible syslog level values:

- log\_emerg
- log\_alert
- log\_crit
- log\_err
- log\_warning
- log\_notice
- log\_info
- log\_debug

### **local\_id**

Specifies a 1-32 character identifier that appears in the remote logging message that you can use to identify which machine logged a particular message.

### **remote\_ip\_addr**

This is an IP address of the remote host where the log files reside.

### **source\_ip\_addr**

Specifies the IP address of the machine that originated the message that is being remotely-logged.

You should use an IP address that is configured in the 2210 for easier identification when the IP address or the hostname is shown in the remotely-logged ELS message. You should also verify that

## ELS Monitoring Commands (Talk 5)

this IP address is quickly resolved to a hostname by the name server, or at least that the name server responds quickly with “address not found.”

To determine that the IP address resolves properly enter the **host** command on your workstation as shown:

```
workstation>host 5.1.1.1
host: address 5.1.1.1 NOT FOUND
workstation>
```

If the response takes more than 1 second, select an IP address that resolves more quickly.

### timestamp

Allows you to turn on message timestamping so that either the time of day or uptime (number of hours, minutes, and seconds, but no date, since the device was last initialized) appears next to each message, or to turn off message timestamping.

**Note:** If you turn on timestamping, you must remember to go back into the CONFIG process and set the device’s date and time using the time command. Otherwise, all messages will come out with 00:00:00, or negative numbers in the hours, minutes, and/or seconds, for example 00:-4:-5.

Use the **set timestamp** command to enable one of the following timestamp options:

#### timeofday

Adds an HH:MM:SS prefix to each ELS message indicating the time of the occurrence during a 24-hour day.

#### uptime

Adds an HH:MM:SS prefix to each ELS message indicating the time of the occurrence during a 100-hour cycle of uptime for the device. After 100 hours of uptime, the uptime counter returns to zero to begin another 100-hour cycle.

**off** Turns off the ELS timestamp prefix.

#### Syntax:

**set timestamp** [timeofday or uptime or off]

**trace** Use the **set trace** command to configure tracing options. When tracing options are configured from the monitoring environment, the changes take effect immediately, and return to their previously configured settings when the device is rebooted.

#### Syntax:

**set trace** decode . . .  
default-bytes-per-pkt . . .  
max-bytes-per-pkt . . .  
off  
on  
reset  
stop-event . . .

## ELS Monitoring Commands (Talk 5)

wrap-mode . . .

### **decode . . .**

Sets packet decode options. Packet decoding is not supported by all components.

#### **exclude**

Excludes the specified frame type for decode. The possible frame types for exclusion are:

##### **lecontrol**

LE Control

**ip** IP

**arp** ARP

**ipx** IPX

##### **netbios**

NetBIOS

**bpdu** BPDU

##### **appletalk**

AppleTalk

**aarp** AppleTalk ARP

**hex** Turns off printing of hexadecimal frame data.

##### **summary**

Turns off printing of a one-line summary decode. A complete decode is printed.

**all** Excludes all packet types from the trace. No frame types are decoded.

**none** Excludes no packet types from the trace. *exclude all*.

#### **include**

Includes the specified frame type for decode. The possible frame types for inclusion are:

##### **lecontrol**

LE Control

**ip** IP

**arp** ARP

**ipx** IPX

##### **netbios**

NetBIOS

**bpdu** BPDU

##### **appletalk**

AppleTalk

**aarp** AppleTalk ARP

**hex** Turns on printing of hexadecimal frame data.

## ELS Monitoring Commands (Talk 5)

### **summary**

Turns on printing of a one-line summary decode. A complete decode is not printed.

**all** Includes all packet types in the trace.

**none** Includes no packet types in the trace. This is the opposite of *include all*.

**off** Sets decoding off.

**on** Sets decoding on.

**Note:** The default setting is to print complete decode output for all frame types. Use the **list trace-status** command to see the current decode settings. See page 196.

### **default-bytes-per-pkt** *bytes*

Sets the default number of bytes traced. This value is used if a value is not specified by the component doing the tracing.

### **max-bytes-per-pkt** *bytes*

Sets the maximum number of bytes traced for each packet.

**off** Disables packet tracing.

**on** Enables packet tracing.

**reset** Clears the trace buffer and resets all associated counters.

### **stop-event** *event id*

Stops tracing when an event (event id) occurs. Enter either an ELS event id (for example: TCP.013) or "None". "None" is the default. Tracing stops only if the display of the particular ELS event is enabled.

When a stop-event occurs, an entry is written to the trace buffer. The **view** command for this trace entry will display "Tracing stopped due to ELS Event Id: TCP.013".

After tracing stops due to a stop-event, you must re-enable tracing with the **set trace on** command. (A restart will also re-enable tracing if enabled from the ELS Config> prompt.)

### **Example:**

```
set trace stop-event TCP.013
```

### **wrap-mode** *off/on*

Turns the trace buffer wrap mode on or off. When wrap mode is enabled and the trace buffer is full, previous trace records will be overwritten by new trace records as necessary to continue tracing.

## Statistics

Use the **statistics** command to display a list of all of the available subsystems and their statistics.

**Note:** The following example may not match your display exactly. The output of the command depends on the version and release of the installed software.

### **Syntax:**

**statistics**



**Example:**

**statistics**

Subsys	Vector	Exist	String	Active	Heap
GW	105	101	3411	0	0
FLT	20	7	184	0	0
BRS	50	5	201	0	0
ARP	150	142	7030	0	0
IP	100	100	2463	2	20
ICMP	30	21	529	0	0
TCP	60	57	2420	0	0
UDP	10	6	179	0	0
BTP	40	13	695	0	0
RIP	30	22	474	0	0
OSPF	80	73	2859	0	0
MSPF	40	17	593	0	0
TFTP	35	29	819	0	0
SNMP	30	28	821	0	0
DVM	30	21	589	0	0
DN	140	115	5842	0	0
XN	35	21	780	0	0
IPX	110	110	4705	0	0
CLNP	80	58	1763	0	0
ESIS	40	24	716	0	0
ISIS	80	58	2422	0	0
DNAV	50	26	1314	0	0
AP2	80	70	1755	0	0
ZIP2	60	51	1859	0	0
R2MP	50	38	1185	0	0
VIN	90	79	3159	0	0
SRT	120	94	5040	0	0
STP	60	32	1590	0	0
BR	50	30	1616	0	0
SRLY	30	28	1409	0	0
ETH	60	47	1098	0	0
SL	50	35	584	0	0
TKR	60	45	2031	0	0
X25	70	53	1909	0	0
FDDI	30	27	1155	0	0
SDLC	100	95	4263	0	0
FRL	130	97	6068	0	0
PPP	190	186	6394	0	0
X251	50	16	546	0	0
X252	50	34	996	0	0
X253	50	42	1649	0	0
ISDN	50	43	1994	0	0
IPPN	20	4	132	0	0
WRS	40	33	1938	0	0
LNM	70	60	3137	0	0
LLC	170	168	9840	0	0
BGP	80	74	2477	0	0
MCF	15	9	244	0	0
DLS	500	497	24340	0	0
V25B	30	28	1058	0	0
BAN	30	29	1223	0	0
COMP	80	26	1050	0	0
NBS	100	50	3029	0	0
ATM	300	216	10808	0	0
LEC	200	174	7258	0	0
APPN	100	28	467	0	0
ILMI	150	23	487	0	0
SAAL	30	26	621	0	0
SVC	30	26	465	0	0
LES	400	361	22333	0	0
LECS	150	145	5666	0	0
EVLOG	1	1	105	0	0
NOT	25	15	508	0	0
NHRP	250	211	8193	0	0
XTP	64	58	2271	0	0
ESC	150	67	3122	0	0
LCS	40	22	858	0	0
LSA	70	61	3506	0	0
MPC	130	30	1677	3	44
SCSP	40	34	1234	0	0
ALLC	50	36	1842	0	0

## ELS Monitoring Commands (Talk 5)

NDR	50	38	1150	0	0
MLP	100	93	4006	0	0
SEC	50	30	688	0	0
ENCR	100	4	194	0	0
PM	25	6	120	0	0
DGW	20	9	238	0	0
QLLC	55	54	2411	0	0
Total	6490	4942	215805	5	64

Maximum:7976 vector, 155 subsystem  
Memory:71784/620 vector+ 81256/217714 data+ 64 heap=371438Subsys

### Subsys

Name of subsystem

### Vector

Maximum size of subsystem

**Exist** Number of events defined in this subsystem

**String** Number of bytes used for message storage in this subsystem

**Active** Number of active (displayed, trapped, or counted) events in the subsystem

**Heap** Dynamic memory in use by subsystem

## Trace

Use the **trace** command to select the trace events to be displayed on the system monitoring. This command provides function that is similar to the **packet trace** command described in “Packet-trace Monitoring Commands” on page 210.

### Syntax:

```
trace          event . . .  
                group . . .  
                range . . .  
                subsystem . . .
```

**event** *subsystem.event#*

Causes the specified trace event (*subsystem.event#*) to be displayed on the system monitoring.

**group** *groupname*

Allows trace events that were previously added to the specified group to be displayed on the device monitoring.

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the trace events in the specified range for the specified subsystem to be displayed on the system monitoring.

### Example:

```
trace range gw 19 22
```

Causes the trace events gw.19, gw.20, gw.21, and gw.22 to be displayed on the system monitoring.

**subsystem** *subsystemname*

Allows trace events associated with the specified subsystem to be displayed on the device monitoring.

## Trap

Use the **trap** command to select the message to be sent to the remote SNMP network management workstation. A remote SNMP network management workstation is an IP host in the network acting as an SNMP manager.

**Syntax:**

```
trap          event . . .
                group . . .
                range . . .
                subsystem . . .
```

**event** *subsystem.event#*

Causes the specified message (*subsystem.event#*) to be sent to a network management workstation in an SNMP trap.

**group** *groupname*

Allows messages that were previously added to the specified group to be sent to a network management workstation in an SNMP trap.

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the messages that are in the specified range for the specified subsystem to be sent to a network management workstation in an SNMP trap.

**Example:**

```
trap range gw 19 22
```

Causes the messages in events gw.19, gw.20, gw.21, and gw.22 to be sent to a network management workstation in an SNMP trap.

**subsystem** *subsystemname*

Allows messages associated with the specified subsystem to be sent to a management station in an SNMP trap.

**Note:** Messages for the IP, ICMP, ARP and UDP subsystems cannot be sent in SNMP traps because these areas are or may be used in the process of sending the SNMP trap. This could lead to an infinite loop of traffic putting an undue strain on the device.

## View

Use the **view** command to view traced packets.

**Syntax:**

```
view          current
                first
```

## ELS Monitoring Commands (Talk 5)

jump  
last  
next  
prev  
search ...

### current

Displays the current trace packet. If the current packet is not valid, the first packet in the trace buffer is displayed.

**first** Displays the first traced packet in the trace buffer.

### jump *n*

Displays the traced packet *n* packets ahead of or behind the current packet.

**last** Displays the last traced packet in the trace buffer.

**next** Displays the next traced packet.

**prev** Displays the previous traced packet.

### search

Displays the next traced packet that contains the specified information. You can specify the search information by:

- Hexadecimal string
- IP address
- ASCII text

## Packet-trace Monitoring Commands

This section describes the Packet-trace Monitoring commands. After accessing the Packet-trace Monitoring environment, you can enter Packet-trace Monitoring commands at the ELS Packet Trace> prompt.

Table 23. Packet Trace Monitoring Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Off	Disables packet tracing.
On	Enables packet tracing. Prompts for memory trace buffer size if not previously set.
Reset	Clears the trace buffer and resets all associated counters.
Set	Configures tracing options.
Subsystems	Activates tracing for the subsystems that support packet tracing, or displays a summary.
Trace-status	Displays information on the status of packet tracing, including configuration and run-time.
View	Provides View Captured Packet Trace Buffers Console
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

### Off

Use the **off** command to disable packet tracing.

### Syntax:

off

### On

Use the **on** command to enable packet tracing.

**Syntax:**

on

### Reset

Use the **reset** command to clear the trace buffer and reset all associated counters.

**Syntax:**

reset

### Set

Use the **set** command to configure tracing options.

**Syntax:**

<u>set</u>	<u>decode</u>
	<u>default-bytes-per-pkt</u>
	<u>disk-shadowing</u>
	<u>max-bytes-per-pkt</u>
	<u>memory-trace-buffer-size</u>
	<u>stop-event</u>
	<u>wrap-mode</u>
	<u>exit</u>

For an explanation of the set command, see page 204.

## Subsystems

Use the **subsystems** command to activate tracing for the subsystems that support packet tracing, or to display a summary.

**Syntax:**

<u>subsystems</u>	<u>atm</u>
	<u>lec</u>
	<u>summary</u>

**Example:**

```
subsystems atm
Network number? 0
ATM Interface is selected
on | off | list [list]? on
Note that SVC uses VPI = 0, VCI = 5
and ILMI uses VPI = 0, VCI = 16
Beginning of VPI range [0]?
```

## ELS Monitoring Commands (Talk 5)

```
End of VPI range [0]?  
Beginning of VCI range [0]? 16  
End of VCI range [0]? 16  
Tracing event ATM.88: ATM frames
```

### Example:

```
subsystems lec  
Network number? 1  
ATM Emulated LAN is selected  
on | off | list [list]? on  
Trace which types of frames (data, control, both) [both]?  
Tracing event LEC.11: data frames over ATM Forum LEC: interface 1  
Tracing event LEC.12: control frames over ATM Forum LEC: interface 1  
Note that if the user DISABLEs and TESTs this LEC interface,  
the LEC trace settings from Talk 6 Config will take effect.
```

MAC Address packet filtering can be enabled under the LEC net using the 'trace mac-address' command.

### Example:

```
subsystems summary  
Subsystems Being Traced  
  
ATM      net number = 0, VPI Range:    0 -    0  
         VCI Range:    16 -    16  
LEC      net number = 1
```

## Trace-Status

Use the **trace-status** command to get updated information regarding packet trace.

### Syntax:

**trace-status**

### Example:

```
trace-status  
----- Configuration -----  
Trace Status:OFF Wrap Mode:OFF Decode Packets:OFF HD Shadowing:OFF  
RAM Trace Buffer Size:0 Maximum Trace Buffer File Size:10000000  
Max Packet Bytes Trace:256 Default Packet Bytes Traced:100  
Trace File Record Size:2048 Stop Trace Event: None  
Maximum Hours to HD Shadow: 24  
----- Run-time Status -----  
Packets in RAM Trace Buffer:0 Free Trace Buffer Memory:0  
Trace Errors:0 First Packet:0 Last Packet:0  
Trace Records Stored on HD:0 Trace Buffer File Size:0  
HD-Shadowing Time Exceeded? NO  
Has Stop Trace Event Occurred? NO
```

## View

Use the **view** command to enter the View Captured Packet Trace Buffers Monitoring.

For an explanation of the **view** commands, see "View" on page 209.

### Syntax:

```
view          _current  
              _first  
              _jump  
              _last  
              _next
```

prev  
search  
exit

## ELS Net Filter Monitoring Commands

This section describes explains the commands to manipulate ELS net filters. To enter the filter environment, enter the **filter net** command at the ELS> prompt. Enter the monitoring commands at the ELS Filter net> prompt.

Table 24. ELS Net Filter Monitoring Commands

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Create	Creates a filter and assigns it a number. A maximum of 64 filters is allowed.
Delete	Deletes a specified filter number or all filters.
Disable	Disables a specified filter number or all filters.
Enable	Enables a specified filter number or all filters.
List	Lists a specified filter number or all filters.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Create

Use the **create** command to create an ELS net filter.

#### Syntax:

```
create queue event event_name net#_start net#_end
range event_range net#_start net#_end
subsystem subsystem_name net#_start net#_end
```

**queue** The queue for which you are setting the filter. The valid queues are:

- Display
- Trace
- Trap
- Remote

**event** *event\_name* *net#\_start* *net#\_end*

Specifies the event and net numbers that you are filtering.

If you specify *net#\_start* and *net#\_end* as the same number, you are filtering on a single net number.

The command **create trap event GW.009 2 10** filters traps for message GW.009 for net numbers 2 through 10.

**range** *event\_range* *net#\_start* *net#\_end*

Specifies the range of ELS messages and net numbers that you are filtering.

If you specify *net#\_start* and *net#\_end* as the same number, you are filtering on a single net number.

## ELS Monitoring Commands (Talk 5)

The command **create remote range ipx 19 22 3 6** filters all ipx messages beginning with IPX.019 and ending with IPX.022 for net numbers 3 through 6 for remote logging.

**subsystem** *subsystem\_name net#\_start net#\_end*

Specifies the subsystem and net numbers that you are filtering.

If you specify *net#\_start* and *net#\_end* as the same number, you are filtering on a single net number.

The command **create display subsys ip 1 1**, filters all ELS messages for the ip subsystem that contain net number 1 to the display. All other ip subsystem messages are discarded.

### Delete

Use the **delete** command to delete a specific ELS filter or all ELS filters.

#### Syntax:

```
delete                all  
                        filter filter#
```

**all** Deletes all currently configured filters.

**filter** *filter#*

Deletes the filter specified by *filter#*. Use the **list** command to obtain the number for the filter you want to delete.

### Disable

Use the **disable** command to disable a specific ELS filter or all ELS filters.

#### Syntax:

```
disable              all  
                      filter filter#
```

**all** Disables all currently configured filters.

**filter** *filter#*

Disables the filter specified by *filter#*. Use the **list** command to obtain the number for the filter you want to disable.

### Enable

Use the **enable** command to enable a specific ELS filter or all ELS filters.

#### Syntax:

```
enable               all  
                     filter filter#
```

**all** Enable all currently configured filters.

**filter** *filter#*

Enable the filter specified by *filter#*. Use the **list** command to obtain the number for the filter you want to enable.



## List

Use the **list** command to list a specific ELS filter or all ELS filters.

### Syntax:

```
list                all
                    filter filter#
```

**all** Lists all currently configured filters.

**filter filter#**  
Lists the filter specified by *filter#*.

## ELS Message Buffering Monitoring Commands

Table 25 describes the commands available at the ELS Config Advanced> prompt.

Table 25. ELS Message Buffering Monitoring Commands

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Flush	Clears the message buffer and turns off logging to the message buffer.
List	Displays the operational settings for message buffering.
Log	Enables logging of selected messages to the message buffer.
Nolog	Turns off logging of selected messages to the message buffer.
Set	Sets the size of the message buffer, the wrapping mode, whether logging occurs, which event will end message buffering, and what the system does when message buffering is stopped by an event.
Tftp	Sends the ELS message buffer to a file at a remote host.
View	Displays all or a specific number of messages in the message buffer. You can also control how the messages scroll off the screen.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## Flush

Use the **flush** command to set logging off, clear the messages from the buffer, and release the buffer memory for other use by the system.

### Syntax:

```
flush                buffer
```

## List

Use the **list** command to list the ELS message buffering configuration.

### Syntax:

```
list                status
```

### Example:

## ELS Monitoring Commands (Talk 5)

```
ELS Advanced> list status
-----Configuration-----
Logging Status: OFF      Wrap Mode: ON      Logging Buffer Size: 8500 Kytes
Stop-Event: APPN.2      Stop-String: netdn for intf 6
Additional Stop-Action: APPN DUMP
-----Run-Time Status-----
Has Stop Condition Occurred ? YES      Messages currently in buffer: 1222
```

See “Set” on page 217 for a description of the commands that change the values in the display.

### Log

Use the **log** command to select which messages will be logged to the message buffer.

#### Syntax:

```
log          _event
              _group
              _range
              _subsystem
```

#### **event** *subsystem.event#*

Causes the specified message (*subsystem.event#*) to be logged to the message buffer.

#### **group** *groupname*

Allows messages that were previously added to the specified group to be logged to the message buffer.

#### **range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the messages that are in the specified range for the specified subsystem to be logged to the message buffer.

#### **Example:**

```
log range gw 19 22
```

Causes the messages in events gw.19, gw.20, gw.21, and gw.22 to be logged to the message buffer.

#### **subsystem** *subsystemname*

Allows messages associated with the specified subsystem to be logged to the message buffer.

### Nolog

Use the **nolog** command to remove messages from the defined list of messages that are logged to the message buffer.

#### Syntax:

```
nolog       _event
              _group
```

## ELS Monitoring Commands (Talk 5)

range

subsystem

**event** *subsystem.event#*

Causes the specified message (*subsystem.event#*) not to be logged to the message buffer.

**group** *groupname*

Allows messages that were previously added to the specified group not to be logged to the message buffer.

**range** *subsystemname first\_event\_number last\_event\_number*

Where *first\_event\_number* is the number of the first event in the specified event range, and *last\_event\_number* is the number of the last event of the specified event range.

Causes the messages that are in the specified range for the specified subsystem not to be logged to the message buffer.

**Example:**

```
log range gw 19 22
```

Causes the messages in events gw.19, gw.20, gw.21, and gw.22 not to be logged to the message buffer.

**subsystem** *subsystemname*

Allows messages associated with the specified subsystem not to be logged to the message buffer.

### Set

Use the **set** command to change configured ELS message buffering options.

**Syntax:**

```
set                logging [on or off]  
                   buffer-size Mbytes  
                   stop action . . .  
                   stop event subsystem.event#  
                   stop string text  
                   wrap [on or off]
```

**buffer-size** *Mbytes*

Specifies the size, in megabytes, of the message buffer that the system should allocate. The **mem** command displays this memory as “Never Alloc.” Setting this value too high could prevent the device from operating correctly after a reboot because of insufficient memory for protocols and features.

**Valid values:** 0 MB to 80% of the memory available on the device.

**Default value:** 0 (no message buffering)

**Note:** You must allocate a buffer with this command before you can set logging on.

## ELS Monitoring Commands (Talk 5)

### **logging [on or off]**

Specifies whether message buffering will occur. This command will not take effect until you allocate a buffer using the **set buffer-size** command. The default is off.

### **stop action [appn-dump or none or system-dump]**

Specifies the additional action the system takes when the “stop event” (and if specified, the “stop string”) occurs. The actions are:

#### **appn-dump**

Dumps the APPN protocol, if it is active. The APPN dump will indicate that the dump was taken as the result of a stop action.

**none** No other action is taken after logging stops.

#### **system-dump**

Dumps the entire system. The system dump will indicate that the dump was taken as the result of a stop action.

**Default value:** none

### **stop event [*subsystem.event#* or none]**

Specifies the event (*subsystem.event#*) that stops logging. If you have specified a stop string, the text in the stop string must also match. When the stop event occurs:

1. The next five ELS messages are logged.
2. Logging stops.
3. The system performs the specified “stop action.”

Logging remains stopped until the next time you issue the **set logging on** command or the device reboots.

If you do not specify the stop event when you enter the command, the system prompts you to enter the stop event. Specifying **none** disables the stop event function.

**Default value:** none

### **stop string *text* or none**

Specifies the string to be used in conjunction with the “stop event” to stop logging. If you have not specified a stop event, the system ignores the “stop string.”

*Text* can be any ASCII string up to 32 characters in length. If you do not specify *text* when you enter the command, the system will prompt you for the string. Entering **none** clears the “stop string.”

**Default value:** none

### **wrap [on or off]**

Specifies whether to stop the log when the buffer is full (off) or to log the new messages at the beginning of the buffer (on).

**Default value:** off

## **Tftp**

Use the **tftp** command to send the ELS message buffer to a remote host as a formatted file. You can also send a file that was created with the **write-buffer** command to a remote host.

### Syntax:

**tftp** *buffer* [formatted ] *dest\_ip\_address dest\_filename*

**buffer** [formatted ] *dest\_ip\_address dest\_filename*

Specifies that the ELS message buffer is to be sent to the remote host indicated by *dest\_ip\_address* as file *dest\_filename*. The buffer can be either formatted. If you do not enter the *dest\_ip\_address* and *dest\_filename*, the system prompts you for it.

### View

Use the **view** command to view all of the messages or a specific number of messages in the message buffer.

### Syntax:

**view** *all* [scroll/noscroll]

*last* [scroll/noscroll *number*]

**all** *scroll/noscroll*

Displays all of the messages in the message buffer.

**[scroll]**

Specifies that the screen pauses until you hit the spacebar.

**Note:** If you are displaying a large number of messages, specify scroll so you do not miss any critical messages.

**noscroll**

Specifies that the messages will scroll off the screen if the number of messages exceeds the screen length.

**last** *scroll/noscroll number*

Display the last *number* messages in the message buffer.

**[scroll]**

Specifies that the screen pauses after displaying a full screen of messages and waits for the user to hit the space bar to get the next screen.

**Note:** If you are displaying a large number of messages, specify scroll so you do not miss any critical messages.

**noscroll**

Specifies that the messages will scroll off the screen if the number of messages exceeds the screen length.

**number**

Specify a number from 1 to the total number of messages in the message buffer. To display the total number of messages in the buffer, use the **list status** monitoring command.

## ELS Monitoring Commands (Talk 5)

---

## Chapter 12. Configuring and Monitoring Performance

This chapter describes how to use the Performance configuration and monitor operating commands and includes the following sections:

- “Performance Overview”
- “Performance Reporting Accuracy”
- “Accessing the Performance Configuration Environment”
- “Performance Configuration Commands” on page 222
- “Accessing the Performance Monitoring Environment” on page 223
- “Performance Monitoring Commands” on page 223

---

### Performance Overview

Configuring performance allows you to monitor your CPU load. In the idle (non-work load) state, performance reflects operations that the device continuously performs as a part of managing external interfaces. The CPU load registered in the idle state is dependent upon:

- Number of protocols running.
- Number of interfaces/cards installed.
- Type of interfaces installed.

The performance function can be used as a tool for trend analysis, bottleneck evaluation, and capacity planning. By collecting the CPU utilization information on the device, a network manager can monitor:

- CPU load versus time of day.
- CPU load versus location of the device in the network.
- CPU load versus traffic throughput.
- CPU load versus user load (for example: TN3270 sessions, ISDN dial in clients)

---

### Performance Reporting Accuracy

If you request a performance analysis when the 2210 first comes online, you will see values that reflect an initialization state that has little or no network traffic, so it is of little use in helping to balance your network load.

It is best to use performance reports that are generated under normal loads after approximately 2 minutes of operation.

---

### Accessing the Performance Configuration Environment

Use the following procedure to access the Performance monitor configuration process.

1. At the OPCON prompt, enter **talk 6**. (For more detail on this command, see “What is CONFIG?” on page 43.) For example:

```
* talk 6
Config>
```





## Set

Use the **set** command to set the reporting period.

**Syntax:**

**set** *time*

**time** Specifies the short window time.

**Valid Values:** 2 - 30 seconds

**Default Value:** 2

## Accessing the Performance Monitoring Environment

Use the following procedure to access the Performance monitoring commands. This process gives you access to the Performance *monitoring* process.

1. At the OPCON prompt, enter **talk 5**. (For more detail on this command, see “Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands” on page 131.) For example:

```
* talk 5
+
```

After you enter the **talk 5** command, the GWCON prompt (+) displays on the terminal. If the prompt does not appear when you first enter configuration, press **enter** again.

2. At the + prompt, enter the **perf** command to get you to the PERF Console> prompt.

**Example:**

```
+ perf
PERF Console>
```

## Performance Monitoring Commands

This section describes the Performance monitoring commands.

*Table 27. PERF Monitoring Command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Clear	Clear the CPU utilization high water statistics and resets the reporting period to a new cycle.
Disable	Disables the collection of CPU utilization statistics or Talk 2 ELS monitor output.
Enable	Enables the collection of CPU utilization statistics or Talk 2 ELS monitor output.
List	Lists the configuration.
Report	Displays a report of performance statistics.
Set	Sets the reporting period.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## Performance Monitoring Commands (Talk 5)

### Disable

Use the **disable** command to disable collection of CPU utilization statistics and disable the talk 2 ELS monitor output.

**Syntax:**

```
disable                cpu statistics
                        t2 output
```

### Enable

Use the **enable** command to enable collection of CPU utilization statistics and enable the talk 2 ELS monitor output.

**Syntax:**

```
enable                cpu statistics
                        t2 output
```

### List

Use the **list** command to display the performance monitor configuration.

**Syntax:**

```
list
```

### Report

Use the **report** command to display performance monitor statistics.

**Syntax:**

```
report
```

**Example:**

```
PERF Console>report
-----
KEY:  SW = Short Window = 9 seconds
KEY:  LW = Long Window = 9.0 minutes (60 x SW)

CPU UTIL :  Most recent SW                = 38%
            Most recent LW                = 33%
            Highest for all SW's          = 92%
            Highest for all LW's          = 52%
            % of time cpu util (SW) was > 60% = 16%
            % of time cpu util (SW) was > 70% = 15%
            % of time cpu util (SW) was > 80% = 1%
            % of time cpu util (SW) was > 90% = 0%
            % of time cpu util (SW) was > 95% = 0%
-----
```

### Set

Use the **set** command to set the reporting period.

**Syntax:**

## Performance Monitoring Commands (Talk 5)

set

*time*

**time** Specifies the short window time.

**Valid Values:** 2 - 30 seconds

**Default Value:** 2

## Performance Monitoring Commands (Talk 5)

---

## **Part 3. Understanding, Configuring and Operating Interfaces**



---

## Chapter 13. Getting Started with Network Interfaces

The chapters of this book describe how to configure and monitor network interfaces and link layer protocols supported by the Router. The purpose of this chapter is to give you some basic configuration and monitoring guidelines. This chapter also provides you with basic procedures and information needed for monitoring the interfaces via the GWCON **interface** command. This chapter includes the following sections:

- “Before You Continue”
- “Network Interfaces and the GWCON Interface Command”
- “Accessing Network Interface Configuration and Console Processes”
- “Accessing Link Layer Protocol Configuration and Console Processes” on page 230
- “Defining Spare Interfaces” on page 230

---

### Before You Continue

Before you continue, make sure that you have familiarized yourself with the procedures necessary for accessing the network interface configuration processes.

For more information on these procedures, refer to the sections that follow in this chapter.

---

### Network Interfaces and the GWCON Interface Command

When configuring network interfaces, you may find it necessary to display certain information about specific interfaces. While some interfaces have their own console processes for monitoring purposes, the router displays statistics for *all* installed network interfaces when you use the **interface** command from the GWCON environment. (Refer to “Interface” on page 140.)

---

### Accessing Network Interface Configuration and Console Processes

The follow references contain the background information and examples of how to access the configuration and console prompts for interfaces.

Refer to “Adding Devices” on page 15, “Accessing the Network Interface Configuration Process” on page 15, and “Accessing the Network Interface Console Process” on page 18 for complete information on accessing interface configuration and console processes. Accessing these processes allows you to change and monitor software configurable parameters for network interfaces used in your router.

### Accessing Link Layer Protocol Configuration and Console Processes

Refer to “Chapter 1. Getting Started” on page 3 for complete information on accessing the protocol configuration and console processes. Accessing these processes allows you to change and monitor configurable parameters for Link Layer protocols supported by your router.

---

### Defining Spare Interfaces

There may be occasions when you will need to define interfaces on your device that do not currently exist. You accomplish this ***dynamic reconfiguration*** of a device by defining spare interfaces while you are configuring the device and then using the console process to activate the interfaces when they are present. See “Configuring Spare Interfaces” on page 48 and “Activate” on page 132 for details.



---

## Chapter 14. Configuring IEEE 802.5 Token-Ring Network Interfaces

This chapter describes Token-Ring interfaces configuration and operational commands. It includes the following sections:

- “Accessing the Token-Ring Interface Configuration Process”
- “Token-Ring Configuration Commands”
- “Accessing the Interface Monitoring Process” on page 234
- “Token-Ring Interface Monitoring Commands” on page 235
- “Token-Ring Interfaces and the GWCON Interface Command” on page 236

---

### Accessing the Token-Ring Interface Configuration Process

To display the TKR config> prompt, enter the network command followed by the interface number of the Token-Ring interface. For example:

```
Config>network 0
Token-Ring interface configuration
TKR Config>
```

Use the **list devices** command at the Config> prompt to display a list of interface numbers configured on the router.

**Note:** Whenever you change a parameter, you must restart the router for the changes to take effect.

---

### Token-Ring Configuration Commands

This section describes the Token-Ring configuration commands. Enter the commands at the TKR config> prompt. Table 28 lists Token-Ring configuration commands.

*Table 28. Token-Ring Configuration Command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
List	Displays the selected Token-Ring interface configuration.
LLC	Accesses the LLC configuration environment and subcommands.
Packet-size	Changes packet-size defaults for all Token-Ring networks.
Set	Sets the aging timer for the RIF cache and the physical (MAC) address. Also sets full or half-duplex operational modes.
Source-routing	Enables or disables source-routing on the interface.
Speed	Sets the interface speed in Mbps.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### List

Use the **list** command to display the current configuration for the Token-Ring interface.

## Configuring Token-Ring Network Interfaces

**Note:** If the MAC address is 0, the default station address is used.

### Syntax:

**list**

-

### Example:

```
list
Token-Ring configuration:

    Packet size (INFO field): 2052

Speed:                16 Mb/sec
RIF Aging Timer:      120
Source Routing:       Enabled
MAC Address:          000000000000
```

### Packet size

Size of the Token-Ring packet.

**Speed** Speed of the network.

### RIF Aging Timer

Amount of time that the router holds the information contained in the Routing Information Field (RIF).

### Source Routing

Status of the source-routing feature, enabled or disabled.

### MAC Address

Configured MAC address that was set with the **set physical-address** command. If all zeros are displayed, the MAC address is the default address.

## LLC

Use the **LLC** command to access the LLC configuration environment. See “LLC Configuration Commands” on page 241 for an explanation of each of these commands.

### Syntax:

**llc**

**Note:** If APPN is not included in your router software load, you will receive the following message if you try to use this command:

```
LLC configuration is not available for this network.
```

The LLC configuration environment is only available if APPN is included in the software load.

## Packet-Size

Use the **packet-size** command to change maximum packet-size for all Token-Ring networks. Enter the **packet-size** command followed by the desired number of bytes.

### Syntax:

**packet-size** *bytes*

## Configuring Token-Ring Network Interfaces

Table 29. Token-Ring 4/16 Valid Packet Sizes

Network Data Speed	Values (# of bytes)
4 Mbps	516 to 4498 <b>Note:</b> If a value greater than 4498 is defined for a 4 Mb TR then the software will set it to 4498. If the user does not specify a value, then the default is 2052.
16 Mbps	516 to 18144 <b>Note:</b> If you do not specify a value, then the default is 2052.

**Note:** If packet sizes are increased, buffer memory requirements will also increase.

## Set

Use the **set** command to set the Routing Information Field (RIF) timer and the physical (MAC) address.

### Syntax:

```
set                _physical-address  
                    _rif-timer
```

### physical-address

Indicates whether you want to define a locally administered address for the Token-Ring interface's MAC sublayer address, or use the default factory station address (indicated by all zeroes). The MAC sublayer address is the address that the Token-Ring interface uses to receive and transmit frames.

**Note:** Pressing **Return** leaves the value the same. Entering **0** and pressing **Return** causes the router to use the factory station address. The default is to use the factory station address.

**Valid values:** Any 12-digit hexadecimal address.

**Default value:** burned-in address (indicated by all zeroes).

### Example:

```
set physical-address  
MAC address in 00:00:00:00:00:00 form []?
```

### rif-timer

Sets the maximum amount of time (in seconds) that the information in the RIF is maintained before it is refreshed. The default is 120.

### Example:

```
set rif-timer  
RIF aging timer value [120]? 120
```

## Source-routing

Use the **source-routing** command to enable or disable end station source routing. Source routing is the process by which end stations determine the source route to use to cross source routing bridges. Source routing allows the IP, IPX, and AppleTalk Phase 2 protocols to reach nodes on the other side of the source routing bridge.



## Token-Ring Interface Monitoring Commands

This section summarizes the Token-Ring monitoring commands. Enter commands at the TKR> monitoring prompt. Table 30 lists the monitoring commands.

Table 30. Token-Ring Monitoring Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Dump	Displays a dump of the RIF cache.
LLC	Displays the LLC monitoring prompt.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

### Dump

When source routing is enabled in the tkr config> process, you can use the **dump** command to request a dump of the RIF cache contents.

#### Syntax:

**dump**

#### Example:

```
dump
MAC address      State      Usage      RIF
0000C90B1A57    ON_RING    Yes         0220
```

#### MAC address

Displays the MAC address of the Token-Ring interface.

**State** Displays one of the interface states:

On\_ring - indicates that a RIF was found for a node on the ring.

Have\_route - indicates that a RIF was found for a node on a remote ring.

No\_route - is displayed for a brief period of time as an explorer frame is sent out and the router is waiting for a return.

Discovering - indicates that the router sent an explorer frame to rediscover the RIF.

St\_route - indicates that a route obtained from a Spanning tree explorer.

**Usage** Indicates that a RIF was used in a packet. The number is arbitrary and has no functional significance.

**RIF** Displays a code that indicates the RIF in hexadecimal.

**Note:** The RIF is displayed only if Source Route Bridging is enabled on the Token-Ring interface.

- NetBIOS RIF data can be displayed using the following sequence of commands: **talk 5, protocol ASRT, name-caching, list cache rifs.**
- Data Link Switching RIF data can be displayed using the following sequence of commands: **talk 5, protocol dlsw, list llc2 session all.**

## Configuring Token-Ring Network Interfaces

### LLC

Use the **LLC** command to access the LLC monitoring prompt. LLC commands are entered at this new prompt. See “LLC Monitoring Commands” on page 245 for an explanation of each of these commands.

#### Syntax:

llc

---

## Token-Ring Interfaces and the GWCON Interface Command

While Token-Ring interfaces have their own monitoring processes for monitoring purposes, the router also displays complete statistics for installed network interfaces when you use the **interface** command from the GWCON environment.

### Statistics Displayed for 802.5 Token-Ring Interfaces

The following statistics display when you enter the **interface <net#>** command for a Token-Ring interface from the GWCON environment.

```
Nt Nt' Interface      CSR Vec   Passed   Failed   Failed
0 0 TKR/0           6000000 1C         1         0         0
Token-Ring/802.5 MAC/data-link on IBM Token-Ring interface
Microcode version: 000VL00A0 (050394)

Physical address      000C90820C7
Network speed         16 Mbps
Max packet size (INFO) 2052
Handler state         Ring open
Ring status           SERR | CO
Interface Restarts    0

# times Signal lost   0          # times Beaconing    0
Hard errors           0          Lobe wire faults    0
Auto-removal errors   0          Removes received     0
Ring recovery actions 0

Line errors           0          Burst errors         0
ARI/FCI errors        0          Inputs dropped       0
Frame copy errors     0          Token errors         0
Lost frames           0
```

The following section describes general interface statistics:

**Nt** Global interface number

**Nt'** Applies only to dial circuits

#### **Interface**

Interface name and Number of this interface within interfaces of type “intrfc”

**CSR** COMM and Status Registers address

**Vec** Interrupt vector

#### **Self-Test: Pass**

Number of times self-test succeeded

#### **Self-Test: Fail**

Number of times self-test failed

## Using the GWCON Interface Command

### **Maint: Fail**

Number of maintenance failures

The following section describes the statistics displayed that are specific to the Token-Ring interfaces:

### **Physical address**

Specifies the physical address of the Token-Ring interface.

### **Network speed**

Specifies the speed of the Token-Ring network that connects to the interface. The Network Speed counter displays the number of packets that the interface can pass per second.

### **Max packet size (info)**

Displays the maximum packet size configured for that interface. The Max Packet Size counter displays the maximum length, in bytes, of a packet that the interface transmits or receives. This counter is user-defined.

### **Handler state**

Displays the current state of the Token-Ring handler. The Handler state counter displays the state of the handler after the self-test runs.

### **Ring status**

Last Ring Status of the Token Ring interface.

- SIGL** SIGNAL\_LOSS The interface has detected a loss of signal on the ring.
- HERR** HARD\_ERROR The interface is presently transmitting or receiving beacon frames on the ring.
- SERR** SOFT\_ERROR The interface has transmitted a report error MAC frame.
- BEAC** TRANSMIT\_BEACON The interface is transmitting beacon frames to or from the ring.
- LWF** LOBE\_WIRE\_FAULT The interface has detected an open or short circuit in the cable between the interface and the wiring concentrator. The interface is closed and is at the state following initialization.
- ARMV** AUTO\_REMOVAL\_ERROR The interface has failed the lobe wrap test, which resulted from the beacon auto-removal process, and has removed itself from the ring. The interface has closed and is at the state following initialization.
- RMVD** REMOVED\_RECEIVED The interface has received a remove ring station MAC frame request and has removed itself from the ring. The interface is closed and is at the state following initialization.
- CO** COUNTER\_OVERFLOW One of the following error counters has incremented from 254 to 255: Line, ARI/FCI, Frame Copy, Lost Frames, Burst, Lobe wire faults, Removes received. This display shows these error counters.
- SSTA** SINGLE\_STATION The interface has sensed that it is the only station on the ring.
- RR** RING\_RECOVERY The interface observes claim Token MAC

## Using the GWCON Interface Command

frames on the ring. The interface may be transmitting the claim Token frames. This status remains until the interface transmits a ring purge frame.

### Interface Restarts

Specifies the number of times the Token Ring chip timed out, or the Token Ring driver received a bad command from the handler. For information about why a restart occurred, see messages TKR.37, TKR.38, TKR.39, TKR.40, and TKR.41. in *Event Logging System Messages Guide*

### # of times signal lost

Specifies the total number of times that the router was unable to transmit a packet due to loss of signal.

### Hard errors

Displays the number of times the interface transmits or receives beacon frames from the network.

### Auto-removal errors

Displays the number of times the interface, due to the beacon auto-removal process, fails the lobe wrap test and removes itself from the network.

### Ring recovery actions

Displays the number of times the interface detects claim token medium access control (MAC) frames on the network.

### Line errors

The Line Errors counter increments when a frame is repeated or copied and the Error Detected Indicator (EDI) is zero for the incoming frame:

One of the following conditions must also exist:

- A token with a code violation exists.
- A frame has a code violation between the starting and ending delimiter.
- A Frame Check Sequence (FCS) error occurs.

### ARI/FCI errors

The ARI/FCI (Address Recognized Indicator/Frame Copied Indicator) Errors counter increments if the interface receives either of the following:

An Active Monitor Present (AMP) MAC frame with the ARI/FCI bits equal to zero and a Standby Monitor Present (SMP) MAC frame with the ARI/FCI bits equal to zero.

More than one SMP MAC frame with the ARI/FCI bits equal to zero, without an intervening AMP MAC frame.

This error indicates that the upstream neighbor copied the frame but is unable to set the ARI/FCI bits.

### Frame copy errors

Displays the number of times the interface in receive/repeat mode recognizes a frame addressed to its specific address but finds the address recognize indicator (ARI) bits not equal to zero. This error indicates a possible line hit or duplicate address.

### Lost frames

Displays the number of times the interface is in transmit mode (stripping) and fails to receive the end of a transmitted frame.

### # times beaconing

Displays the number of times the interface transmits a beacon frame to the network.



## Using the GWCON Interface Command

### **Lobe wire faults**

Displays the number of times the network detects an open or short circuit in the cable between the interface and the wiring concentrator.

### **Removes received**

Displays the number of times the interface receives a remove ring station MAC frame request and removes itself from the network.

### **Burst errors**

Displays the number of times the interface detects the absence of transitions for five half-bit times between the start delimiter (SDEL) and the end delimiter (EDEL) or between the EDEL and the SDEL.

### **Inputs dropped**

Displays the number of times an interface in repeat mode recognizes a frame addressed to it but has no buffer space available to copy the frame.

### **Token errors**

The token errors counter increments when the active monitor detects a token protocol with any of the following errors:

- The MONITOR\_COUNT bit of token with nonzero priority equals one.

- The MONITOR\_COUNT bit of a frame equals one. No token or frame is received within a 10-ms window.

- The starting delimiter/token sequence has a code violation in an area where code violations must not exist.

## Using the GWCON Interface Command

---

## Chapter 15. Configuring and Monitoring LLC Interfaces

This chapter describes how to configure specific LLC interfaces in the router by using either the interface commands or the GWCON interface command.

Logical Link Level can be thought of as a “sub-protocol”. It is not accessed directly from either the Talk 6 (configuration) or the Talk 5 (monitoring) environment. Instead, it is accessed from the Token Ring, Point-to-Point (PPP), or Frame Relay protocols by entering an **LLC** command.

This chapter includes the following sections:

- “Accessing the Interface Configuration Process”
- “Accessing the Interface Monitoring Process” on page 244
- “LLC Monitoring Commands” on page 245
- “LLC Configuration Commands”

---

### Accessing the Interface Configuration Process

Access the configuration commands for the protocol you wish to configure over LLC:

- Token Ring, as described in “Chapter 14. Configuring IEEE 802.5 Token-Ring Network Interfaces” on page 231
- Point-to-Point, as described in “Chapter 30. Using Point-to-Point Protocol Interfaces” on page 467
- Frame Relay, as described in “Chapter 28. Using Frame Relay Interfaces” on page 401

Each of these prompt levels has an LLC command. Enter **LLC** to access the LLC configuration commands and perform LCC configuration. When you are finished, enter **Exit** to return to the prompt level for the protocol you are configuring.

---

### LLC Configuration Commands

LLC configuration is required when you need to pass packets over an SNA network. To enter these commands, you must first enter the LLC configuration environment (see “Accessing the Token-Ring Interface Configuration Process” on page 231).

This section summarizes and then explains all of the LLC configuration commands. These commands, shown in Table 31, enable you to configure LLC when you need to pass packets over a SNA network.

*Table 31. LLC Configuration Command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
List	Displays the selected LLC configuration.
Set	Sets the timers associated with LLC, and the size of the transmit and receive windows.

## Configuring LLC

Table 31. LLC Configuration Command Summary (continued)

Command	Function
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

## List

Use the **list** command to display the current configuration for the LLC.

### Syntax:

**list**

### Example:

```
list
Reply Timer (T1):          1 seconds
Receive ACK Timer (T2):    100 milliseconds
Inactivity Timer (Ti):     30 seconds
Max Retry value (N2):     8
Rcvd I-frames before ACK (N3): 1
Transmit Window (Tw):     2
Receive Window (Rw):      2
Acks needed to increment Ww (Nw): 1
```

### Reply Timer (T1)

This timer expires when the LLC fails to receive a required acknowledgment or response from the other LLC station.

### Receive ACK Timer (T2)

This timer is used to delay sending of an acknowledgment for a received I-format frame.

### Inactivity Timer (Ti)

This timer expires when the LLC does not receive a frame for a specified time period. When this timer expires the LLC transmits an RR until the other LLC responds or the N2 retry count is exceeded. Default is 30 seconds.

### Max Retry value (N2)

The maximum number of retries by the LLC protocol. Default is 8.

### Rcvd I-frames before ACK (N3)

This value is used with the T2 timer to reduce acknowledgment traffic for received I-frames. This counter sets a specified value and decrements each time an I-frame is received. When this counter reaches 0 or the T2 timer expires, an acknowledgment is sent. Default is 1.

### Receive Window (Rw)

Indicates the maximum number of unacknowledged sequentially numbered I-frames that an LLC can receive from a remote host.

### Transmit Window (Tw)

Indicates the maximum number of I-frames that can be sent before receiving an RR.

### Acks needed to increment Ww (Nw)

This field is set to a default value of 1.

## Set

Use the **set** command to configure the LLC.

**Attention:** Changing LLC parameters from the defaults can affect how the LLC protocol works.

### Syntax:

```

set          n2-max-retry count
             n3-frames-rcvd-before-ack count
             nw-acks-to-inc-window count
             rw-receive-window count
             t1-reply-timer seconds
             t2-receive-ack-timer seconds
             ti-inactivity-timer seconds
             tw-transmit-window count

```

#### **n2-max-retry**

The maximum number of retries by LLC protocol. For example, N2 is the maximum number of times the LLC transmits an RR without receiving an acknowledgment when the inactivity timer expires. Default is 8. Minimum is 1. Maximum is 127.

#### **Example:**

```

set n2-max-retry
Max Retry value (N2) [8]?

```

#### **n3-frames\_rcvd-before-ack**

This value is used with the T2 timer to reduce acknowledgment traffic for received I-frames. Set this counter to a specified value. Each time an I-frame is received, this value decrements. When this counter reaches 0 or the T2 timer expires, an acknowledgment is sent. Default is 1. Minimum is 1. Maximum is 255.

#### **Example:**

```

set n3-frames_rcvd-before-ack
Number I-frames received before sending ACK(N3) [1]?

```

#### **rw-receive-window**

Indicates the maximum number of unacknowledged sequentially numbered I-frames that an LLC can receive from a remote LLC peer. This value must be equal to or less than 127.

#### **Example:**

```

set rw-receive-window
Receive Window (Rw), 127 Max. [2]?

```

#### **nw-acks-to-inc-ww**

This field is set to a default value of 1.

#### **t1-reply-timer**

This timer expires when the LLC fails to receive a required acknowledgment or response from the other LLC station. When this timer expires, an RR is sent with the poll bit set and T1 is started again. If the LLC receives no response after the configured maximum number of retries (N2), the link underneath is declared inoperative. Default is 1. Minimum is 1. Maximum is 256.

## Configuring LLC

### Example:

```
set t1-reply-timer
Reply Timer (T1) in sec. [1]?
```

### t2-receive-ack-timer

This timer is used to delay sending of an acknowledgment for a received I-format frame. This timer is started when an I-frame is received. The timer is reset when an acknowledgment is sent. If this timer expires, LLC2 sends an acknowledgment as soon as possible. Set this value so that it is less than that of T1. This insures that the remote LLC2 peer receives the delayed acknowledgment before the T1 timer expires. Default is 1 (100 ms). Minimum is 1. Maximum is 2560.

### Example:

```
set t2-receive-ack-timer
Receive Ack timer (T2) in 100 millisec. [1]?
```

**Note:** If this timer is set to 1 (the default) it will not run (for example, **n3-frames\_rcvd-before-ack = 1**).

### ti-inactivity-timer

This timer expires when the LLC does not receive a frame for a specified time period. When this timer expires the LLC transmits an RR until the other LLC responds or the N2 retry count is exceeded. Default is 30 seconds. Minimum is 1 second. Maximum is 256 seconds.

### Example:

```
set ti-inactivity-timer
Inactivity Timer (Ti) in sec. [30]?
```

### tw-transmit-window

Sets the maximum number of I-frames that can be sent before receiving an RR. Assuming that the other end of the LLC session can actually receive this many consecutive I-frames, and the router has enough heap memory to keep copies of these frames until an acknowledgment is received, increasing this value may increase the throughput. Default is 2. Minimum is 1. Maximum is 127.

### Example:

```
set tw-transmit-window
Transmit Window (Tw), 127 Max. [2]?
```

---

## Accessing the Interface Monitoring Process

Access the monitoring commands for the protocol you wish to monitor over LLC:

- Token Ring, as described in “Chapter 14. Configuring IEEE 802.5 Token-Ring Network Interfaces” on page 231
- Point-to-Point, as described in “Chapter 31. Configuring and Monitoring Point-to-Point Protocol Interfaces” on page 485
- Frame Relay, as described in “Chapter 29. Configuring and Monitoring Frame Relay Interfaces” on page 421

Each of these prompt levels has an LLC command. Enter **LLC** to access the LLC monitoring commands to monitor LCC. When you are finished, enter **Exit** to return to the prompt level for the protocol you are monitoring.

## LLC Monitoring Commands

This section summarizes and then explains all of the LLC monitoring commands. These commands, shown in Table 32, let you monitor the LLC while passing packets over an SNA network.

Table 32. LLC Monitoring Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Clear-counters	Clears all statistical counters.
List	Displays interface, SAP, and session information.
Set	Allows the user to dynamically configure LLC parameters that are valid for the life of the session.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Clear-Counters

Use the **clear-counters** command to clear all the LLC statistical counters.

#### Syntax:

**clear-counters**

### List

Use the **list** command to display interface, service access point (SAP), and session information.

#### Syntax:

```
list                interface
                    sap . . .
                    session
```

#### interface

Displays all SAPs opened on this interface.

#### Example:

```
list interface
SAP      Number of Sessions
F4       1
```

#### sap sap\_number

Displays information for the specified SAP on the interface.

#### Example:

```
list sap
SAP value in hex (0FE) [1]? F4

Interface                0, TKR/0
Reply Timer(T1)          1 sec
Receive ACK Timer (T2)   100 millisec
Inactivity Timer (Ti)    30 sec
MAX Retry Value (N2)     8
MAX I-field Size (N1)    2052
Rcvd I-frames before ACK (N3) 1
Transmit Window Size (Tw) 2
Acks Needed to Inc Ww (Nw) 1
```

## Monitoring LLC

Frame	Xmt	Rcvd		
UI-frames	4	5		
TEST-frames	0	1		
XID-frames	0	0		
I-frames	291	26		
RR-frames	81	291		
RNR-frames	0	0		
REJ-frames	0	0		
SABME-frames	1	0		
UA-frames	0	1		
DISC-frames	0	0		
DM-frames	0	0		
FRMR-frames	0	0		
I-frames discarded by LLC		0		
I-frames Refused by LLC user		0		
Cumulative number of sessions		1		
Number of active sessions		1		
Session ID			Remote	
(int-sap-id)	Local MAC	Remote MAC	SAP	State
00F40000	00:00:C9:08:41:DB	10:00:5A:F1:02:37	F4	OPENED

### SAP value in hex (0FE)

The SAP value of the session.

### Interface

The interface number and type over which the session is running.

### Reply Timer (T1)

Indicates the time it takes for this timer to expire when the LLC fails to receive an acknowledgment or response from the other LLC station.

### Receive ACK Timer (T2)

Indicates the time delay the LLC uses before sending an acknowledgment for a received I-frame.

### Inactivity Timer (Ti)

Indicates the time the LLC waits during inactivity before issuing an RR.

### MAX Retry Value (N2)

The maximum number of retries by the LLC protocol.

### MAX I-field Size (N1)

Maximum amount of data (in bytes) allowed in the I-field of an LLC2 frame.

### Rcvd I-frame before ACK (N3)

Indicates the value that is used with T2 timer to reduce acknowledgment traffic for received I-frames.

### Transmit Window Size (Tw)

Indicates the maximum number I-frames that can be sent before receiving an RR.

### Acks Needed to Inc Ww (Nw)

This field is set to a default value of 1.

### Frames Xmt and Rcvd

Counter that displays the total number of frame types transmitted (Xmt) and (Rcvd).

### I-frames discarded by LLC

Counter that displays the total number of I-frames discarded by the LLC, usually because the sequence number is out of sequence.



**I-frames refused by LLC user**

Counter that displays the number of I-frames discarded by the software above the LLC. For example, DLSw (Data Link Switching).

**Cumulative number of sessions**

The total number of sessions that were opened over this SAP.

**Number of active sessions**

The total number of currently active sessions that are running over the interface.

**Session ID (int-sap-id)**

The session ID for the monitoring interface.

**Local MAC**

The router's LLC MAC address.

**Remote MAC**

The remote LLC's MAC address.

**Remote SAP**

The remote SAP of the LLC connection.

**Remote State**

The finite state(s) that results from interaction between the LLC peers. There are 21 states that are described below.

**Link\_Closed**

The remote LLC peer is not known to the local LLC peer and is considered as not existing.

**Disconnected**

The local LLC peer is known to the other peer. This LLC peer can send and receive XID, TEST, SABME, and DISC commands; and XID TEST, UA, and DM responses.

**Link\_Opening**

The state of the local LLC peer after sending a SABME or UA in response to a received SABME.

**Disconnecting**

The state of the local LLC after sending a DISC command to the remote LLC peer.

**FRMR\_Sent**

The local LLC peer has entered the frame reject exception state and has sent a FRMR response across the link.

**Link\_Opened**

The local LLC peer is in the data transfer phase.

**Local\_Busy**

The local LLC peer is unable to receive additional I-frames.

**Rejection**

A local LLC peer that has received one or more out-of-sequence I-frames.

**Checkpointing**

The local LLC peer has sent a poll to the remote LLC peer and is waiting for an appropriate response.

**CKPT\_LB**

A combination of checkpointing and local busy states.

## Monitoring LLC

### CKPT\_REJ

A combination of the checkpointing and rejection states.

### Resetting

The local LLC peer has received a SABME and is reestablishing the link.

### Remote\_Busy

The state that occurs when an RNR is received from the remote LLC peer.

### LB\_RB

A combination of local\_busy and remote\_busy states.

### REJ\_LB

A combination of rejection and local\_busy states.

### REJ\_RB

A combination of rejection and remote\_busy states.

### CKPT\_REJ\_LB

A combination of checkpointing, rejection, and local\_busy states.

### CKPT\_CLR

A combination state resulting from the termination of a local\_busy condition while the LLC peer is CKPT\_LB.

### CKPT\_REJ\_CLR

A combination state resulting from the transfer of an unconfirmed local busy clear while the link station is in the CKPT\_REJ\_LB state.

### REJ\_LB\_RB

A combination of the rejection, local\_busy, and remote\_busy states.

### FRMR\_Received

The local LLC peer has received an FRMR response from the remote LLC peer.

### Session

Displays information on the specified LLC session that is open on the interface.

#### Example:

```
list session
Session Id: [0]? 00-F4-0000

Interface0,                TKR/0
Remote MAC addr            10:00:5A:F1:02:37
Source MAC addr            00:00:C9:08:35:47
Remote SAP                  F4
Local SAP                  F4
RIF                         (089E 0101 0022 0010)
Access Priority             0
State                       LINK_OPENED
Replay Timer                1 sec
Receive ACK Timer (T2)     100 millisec
Inactivity Timer (Ti)      30 sec
MAX I-field Size (N1)     2052
MAX Retry Value (N2)      8
Rcvd I-frames before ACK (N3) 1
Transmit Window Size (Tw)  2
Working Transmit Size (Ww) 2
Acks Needed to Inc Ww (Nw) 1
Current Send Seq (Vs)      9
Current Rcv Seq (Vr)       7
Last ACK'd sent frame (Va) 9
No. of frames in ACK pend q 0
No. of frames in Tx pend q 0
Local Busy                  NO
Remote Busy                 NO
Poll Retry count            8
Appl output flow stopped   NO
Send process running       YES

Frame                       Xmt   Rcvd
I-frames                     1456  2678
```

RR-frames	502	403
RNR-frames	0	0
REJ-frames	0	0
I-frames discarded by LLC		0
I-frames Refused by LLC user		0

**Session Id**

Indicates the session ID number.

**Interface**

Indicates the number of the interface over which this session is running.

**Remote MAC addr**

Indicates the MAC address of the remote LLC peer.

**Source MAC addr**

Indicates the MAC address of the local LLC.

**Remote SAP**

The remote side SAP of the LLC connection.

**Local SAP**

The local side SAP of the LLC connection.

**RIF** The actual RIF of the frame.

**Access Priority**

Priority of the packet. 07 for upper layer control.

**State** The finite state(s) that results from interaction between the LLC peers. Refer to the **list sap** command on page 245 for more information.

**Receive ACK timer (T2)**

Indicates the time delay the LLC uses before sending an acknowledgment for a received I-frame.

**Inactivity timer (Ti)**

Indicates the time the LLC waits during inactivity before issuing an RR.

**MAX I-field size (N1)**

Maximum size of the data field (in bytes) of a frame. Default is the size of the interface.

**MAX Retry Value (N2)**

The maximum number of times the LLC transmits an RR without receiving an acknowledgment

**Rcvd I-frames before ACK (N3)**

Indicates the value that is used with T2 timer to reduce acknowledgment traffic for received I-frames.

**Transmit window size (Tw)**

Indicates the maximum number of I-frames that can be sent before receiving an RR.

**Working transmit size (Ww)**

The maximum number of I-frames that are sent before receiving an RR.

**Acks Needed to Inc Ww (Nw)**

This field is set to a default value of 1.

## Monitoring LLC

### **Current send seq (Vs)**

Send state variable (Ns value for the next I-frame to be transferred).

### **Current Rcv seq (Vr)**

Receive state variable (next in-sequence Ns to be accepted).

### **Last ACK'd sent frame (Va)**

Acknowledged state variable (last valid Nr received).

### **No. of frames in ACK pend q**

Number of transmitted I-frames waiting for acknowledgment.

### **No. of frames in transmit pend q**

Number of frames waiting to be transmitted.

### **Local Busy**

The local side of the LLC connection is sending RNRs.

### **Remote Busy**

The remote side of the LLC is receiving RNRs.

### **Poll Retry count**

Indicates the current value of the retry of the counter (counts down) in the LLC protocol.

### **Appl output flow stopped**

The LLC has told the application to stop giving it outgoing data frames.

### **Send process running**

This process runs concurrently with all other frame actions and takes I-frames in the transmit queue and sends them.

### **Frames Xmt and Rcvd**

Displays the total number of frame types transmitted (Xmt) and (Rcvd).

### **I-frames discarded by LLC**

Counter that displays the total number of I-frames discarded by the LLC, usually because the sequence number is out of sequence.

### **I-frames refused by LLC user**

Counter that displays the number of I-frames discarded by the software above the LLC. For example, DLSw (Data Link Switching).

## Set

Use the **set** command to dynamically configure the LLC parameters on a current LLC session. Any changes that you make to the parameters are effective for the life of session. These parameters are the same as those listed in "Set" on page 243.

**Attention:** Changing LLC parameters from the default can affect how the LLC protocol works.

### **Syntax:**

```
set                n2-max_retry count  
                   n3-frames-rcvd-before-ack count  
                   nw-acks-to-inc-ww count
```

t1-reply-timer *seconds*

t2-receive-ack-timer *seconds*

ti-inactivity-timer *seconds*

tw-transmit-window *seconds*

### **n2-max\_retry**

The maximum number of retries by LLC protocol. For example, N2 is the maximum number of times the LLC transmits an RR without receiving an acknowledgment when the inactivity timer expires. Default is 8. Minimum is 1. Maximum is 127.

### **n3-frames-rcvd-before-ack**

This value is used with the T2 timer to reduce acknowledgment traffic for received I-frames. Set this counter to a specified value. Each time an I-frame is received, this value is decremented. When this counter reaches 0 or the T2 timer expires, an acknowledgment is sent. Default is 1. Minimum is 1. Maximum is 255.

### **nw-acks-to-inc-ww**

This field is set to a default value of 1.

### **t1-reply-timer**

This timer expires when the LLC fails to receive a required acknowledgment or response from the other LLC station. When this timer expires, an RR is sent with the poll bit set and T1 is started again. If the LLC receives no response after the configured maximum number of retries (N2), the link underneath is declared inoperative. Default is 1. Minimum is 1. Maximum is 256.

### **t2-receive-ack-timer**

This timer is used to delay sending of an acknowledgment for a received I-format frame. This timer is started when an I-frame is received and reset when an acknowledgment is sent. If this timer expires, LLC2 sends an acknowledgment as soon as possible. Set this value so that it is less than that of T1. This insures that the remote LLC2 peer receives the delayed acknowledgment before the T1 timer expires. Default is 1 (100 ms). Minimum is 1. Maximum is 2560.

**Note:** If this timer is set to 1 (the default) it will not run (for example, **n3-frames-rcvd-before-ack=1**).

### **ti-inactivity-timer**

This timer expires when the LLC does not receive a frame for a specified time period. When this timer expires the LLC transmits an RR until the other LLC responds or the N2 timer expires. Default is 30 seconds. Minimum is 1 second. Maximum is 256 seconds.

### **tw-transmit-window**

Sets the maximum number of I-frames that can be sent before receiving an RR. Assuming that the other end of the LLC session can actually receive this many consecutive I-frames, and the router has enough heap memory to keep copies of these frames until an acknowledgment is received, increasing this value may increase the throughput. Default is 2. Minimum is 1. Maximum is 127.

## Monitoring LLC

---

## Chapter 16. Using the Ethernet Network Interface

This chapter describes how to use the Ethernet interface. It includes "Displaying Ethernet Statistics through the Interface Command".

---

### Displaying Ethernet Statistics through the Interface Command

You can also use the **interface** command from the GWCON environment to display the following statistics.

```
+ interface 0
                                     Self-Test Self-Test Maintenance
Nt Nt' Interface      CSR  Vec   Passed   Failed   Failed
0 0  Eth/0           81600 5E    1        1        0
Ethernet/IEEE 802.3 MAC/data-link on SCC Ethernet interface

Physical address      000093808000
PROM address         000093808000

Input statistics:
  failed, frame too long      0  failed, FCS error          0
  failed, alignment error     0  failed, FIFO overrun       0
  internal MAC rcv error      0  packets missed             0

Output statistics:
  deferred transmission      6  single collision           2
  multiple collisions        0  total collisions           2
  failed, excess collisions   0  failed, FIFO underrun      0
  failed, carrier sense err   0  SQE test error             0
  late collision              0  internal MAC trans errors  0
RISC Microcode Revision:    1
```

These statistics have the following meaning:

**Nt** Global network number.

**Nt'** This field is for the serial interface card. Disregard the output.

**Interface**

Interface name and its instance number.

**CSR** Command and status register address.

**Vec** Interrupt vector

**Self-Test: Passed**

Number of self-tests that succeeded.

**Self-Test: Failed**

Number of self-tests that failed.

**Maintenance: Failed**

Number of maintenance failures.

**Physical address**

The Ethernet address of the device currently in use. This may be the PROM address or an address overwritten by some other protocol.

**PROM address**

The permanent unique Ethernet address in the PROM for this Ethernet interface.

**Interface restarts**

The number of times the Ethernet chip timed out, or the Ethernet driver

## Using Ethernet Network Interfaces

received a bad command from the handler. For information about why a restart occurred, refer to messages Eth.043 and Eth.044 in the *IBM Nways Event Logging System Messages Guide*

### **Interface type**

This specifies the connector type as AUI or RJ45.

### **Input statistics:**

#### **failed, packet too long or failed, frame too long**

The Failed, Packet Too Long counter increments when the interface receives a packet that is larger than the maximum size of 1518 bytes for an Ethernet frame. This data is exported via SNMP as the dot3StatsFrameTooLongs counter.

#### **failed, CRC error or failed, FCS (Frame Check Sequence) error**

The Failed, CRC (Cyclic Redundancy Check) Error counter increments when the interface receives a packet with a CRC error. This data is exported via SNMP as the dd3StatsFCSErrors counter.

#### **failed, framing error or failed, alignment error**

The Failed, Framing Error counter increments when the interface receives a packet whose length in bits is not a multiple of eight.

#### **failed, FIFO over-run or failed, FIFO overrun**

The Failed, FIFO (First In, First Out) Overrun counter increments when the Ethernet chipset is unable to store bytes in the local packet buffer as fast as they come off the wire.

#### **collision in packet**

The counter increments when a packet collides as the interface attempts to receive a packet, but the local packet buffer is full. This error indicates that the network has more traffic than the interface can handle.

#### **short frame**

The counter increments when the interface receives a packet with a short frame.

#### **buffer full warnings**

The Buffer Full Warnings counter increments each time the local packet buffer is full.

#### **packets missed**

The Packets Missed counter increments when the interface attempts to receive a packet, but the local packet buffer is full. This error indicates that the network has more traffic than the interface can handle.

#### **internal mac rcv errors**

Receive errors that are not late, excessive, or carrier check collisions. This data is exported via SNMP as the dot3StatsInternalMacReceiveErrors counter. This statistic is the sum of the FIFO Overruns.

### **Output statistics:**

#### **initially deferred or deferred transmission**

The Initially Deferred counter increments when the carrier sense mechanism detects line activity causing the interface to defer transmission. This data is exported via SNMP as the dot3StatsDeferredTransmissions counter.

#### **single collision**

The Single Collision counter increments when a packet has a collision on the first transmission attempt, and then successfully sends the packet on



## Using Ethernet Network Interfaces

the second transmission attempt. This data is exported via SNMP as the dot3StatsSingleCollisionFrames counter.

### **multiple collisions**

The Multiple Collisions counter increments when a packet has multiple collisions before being successfully transmitted. This data is exported via SNMP as the dot3MultipleCollisionFrames counter.

### **total collisions**

The Total Collisions counter increments by the number of collisions a packet incurs.

### **failed, excess collisions**

The Failed, Excess Collisions counter increments when a packet transmission fails due to 16 successive collisions. This error indicates a high volume of network traffic or hardware problems with the network. This data is exported via SNMP as the dot3StatsExcessiveCollisions counter.

### **failed, FIFO underrun**

The Failed, FIFO Underrun counter increments when packet transmission fails due to the inability of the interface to retrieve packets from the local packet buffer fast enough to transmit them onto the network.

### **failed, carrier check or failed, carrier sense error**

The Failed, Carrier Check counter increments when a packet collides because carrier sense is disabled. This error indicates a problem between the interface and its Ethernet transceiver. This data is exported via SNMP as the dot3StatsCarrierSenseErrors counter.

### **CD heartbeat error or SQE test error**

The CD (Collision Detection) Heartbeat Error or SQE (Signal Quality Error) counter increments when the interface sends a packet but detects that the transceiver has no heartbeat. The packet is treated as successfully transmitted because some transceivers do not generate heartbeats. This data is exported via SNMP as the dot3StatsSQETestErrors counter.

### **internal mac tx errors or internal MAC trans errors**

Transmit errors that are not late, excessive, or carrier check collisions. This data is exported via SNMP as the dot3StatsInternalMacTransmitErrors counter. This statistic is the sum of the FIFO Underruns.

### **RISC Microcode Version:**

This gives the version of the microcode running in the RISC controller of the communications processor module.

## Using Ethernet Network Interfaces

---

# Chapter 17. Configuring and Monitoring the Ethernet Network Interface

This chapter describes Ethernet interface configuration and operational commands. It includes the following sections:

- “Accessing the Ethernet Interface Operating Process” on page 259
- “Ethernet Interface Monitoring Commands” on page 259

---

## Accessing the Ethernet Interface Configuration Process

Use the following procedure to access the configuration process. This process gives you access to an Ethernet interface’s *configuration* process.

1. At the OPCON prompt, enter **talk 6**. (For more detail on this command, refer to “What is the OPCON Process?” on page 27.) For example:

```
* talk 6
Config>
```

The CONFIG prompt (Config>) displays on the console. If the prompt does not appear when you first enter configuration, press **Return** again.

2. At the CONFIG prompt, enter the **list devices** command to display the network interface numbers for which the router is currently configured. For example:

```
Config> list devices
Ifc 0 Ethernet                CSR 81600, CSR2 80C00, vector 94
Ifc 1 WAN X.25                CSR 81620, CSR2 80D00, vector 93
Ifc 2 WAN X.25                CSR 81640, CSR2 80E00, vector 92
Ifc 3 WAN PPP                 CSR 381620, CSR2 380D00, vector 125
Ifc 4 WAN Frame Relay        CSR 381640, CSR2 380E00, vector 124
Ifc 5 Token Ring             CSR 600000, vector 95
```

3. Record the interface numbers.
4. Enter the **network** command and the number of the Ethernet interface you want to configure. For example:

```
Config> network 0
ETH Config>
```

The Ethernet configuration prompt (ETH Config>), is displayed.

---

## Ethernet Configuration Commands

This section summarizes and then explains the Ethernet configuration commands. Enter the commands at the ETH config> prompt.

Table 33. Ethernet Configuration Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Connector-Type	Sets the connector type.
IP-Encapsulation	Sets the IP encapsulation as Ethernet (type X’0800’) or IEEE (802.3 with SNAP).
List	Displays the current connector-type, NetWare IPX encapsulation, and IP encapsulation.

## Ethernet Configuration Commands (Talk 6)

Table 33. Ethernet Configuration Command Summary (continued)

Command	Function
Physical-Address	Sets the physical MAC address.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Connector-Type

Use the **connector-type** command to set the connector type. 2210s support AUI (10BASE5) and RJ-45 (10BASE-T) connectors, and auto-config options.

**Syntax:**

**connector-type** *name*

### IP-Encapsulation

Use the **ip-encapsulation** command to select Ethernet (Ethernet type X'0800') or IEEE 802.3 (Ethernet 802.3 with SNAP). Enter **e** or **i**.

**Syntax:**

**ip-encapsulation** *type*

### List

Use the **list** command to display the current configuration for the Ethernet interface including the connector-type, IPX encapsulation type, and IP encapsulation type.

**Syntax:**

**list** *all*

**Example:**

```
list all
Connector type:      AUI (10BASE5)
MAC Address:        12:15:00:FA:00:FE
```

### Physical-Address

Use the **physical-address** command to set the physical (MAC) address.

**physical-address**

This command lets you indicate whether you want to define a locally administered address for the Ethernet interface's MAC sublayer address, or use the default burned-in address (indicated by all zeros). The MAC sublayer address is the address that the Ethernet interface uses to receive and transmit frames.

**Note:** Pressing **Enter** leaves the value the same. Entering **0** causes the router to use the burned-in address. The default is to use the burned-in address.

**Valid Values:** Any 12-digit hexadecimal address.

**Default Value:** burned-in address (indicated by all zeros).

### Example:

```
set physical-address
```

```
MAC address in 00:00:00:00:00:00 form []? 12:15:00:FA:00:FE
```

---

## Accessing the Ethernet Interface Operating Process

To monitor information related to the Ethernet Network Interface, access the interface monitoring process by doing the following:

1. At the OPCON prompt, enter **talk 5**. For example:

```
* talk 5
```

The GWCON prompt (+) is displayed on the console. If the prompt does not appear when you first enter GWCON, press **Return** again.

2. At the GWCON prompt, enter the **configuration** command to see the protocols and networks for which the router is configured. For example:

```
+ configuration
```

See page “Configuration” on page 135 for sample output of the **configuration** command.

3. Enter the **network** command and the number of the Ethernet interface. In this example:

```
+ network 0  
ETH>
```

The Ethernet monitoring prompt is displayed. You can now view information about the Ethernet interface by entering monitoring commands.

---

## Ethernet Interface Monitoring Commands

This section summarizes and explains the Ethernet monitoring commands. Enter commands at the ETH> prompt. Table 34 lists the monitoring commands.

*Table 34. Ethernet monitoring command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Collisions	Displays collision statistics for the specified Ethernet interface.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Collisions

This command shows the counts of transmissions for packets that incurred collisions before successful transmission. Counters are given for packets sent after the collision XXXXx packets sent after 15 collisions. Increasing numbers of packets transmitting with collisions and higher numbers of collision per packet are signs of transmitting onto a busy Ethernet.

These counters are cleared by the OPCON **clear** command. This data is exported via SNMP as the dot3CollTable counter.

## Ethernet Interface Monitoring Commands (Talk 5)

### Syntax:

collisions

### Example:

```
Eth> coll
Transmitted with 1 collisions:0
Transmitted with 2 collisions:0
Transmitted with 3 collisions:0
Transmitted with 4 collisions:0
Transmitted with 5 collisions:0
Transmitted with 6 collisions:0
Transmitted with 7 collisions:0
Transmitted with 8 collisions:0
Transmitted with 9 collisions:0
Transmitted with 10 collisions:0
Transmitted with 11 collisions:0
Transmitted with 12 collisions:0
Transmitted with 13 collisions:0
Transmitted with 14 collisions:0
Transmitted with 15 collisions:0
```

---

## Chapter 18. Overview of LAN Emulation

**Note:** See the glossary for definitions of the acronyms and terms used in this chapter.

The IBM 2210 implements the *LAN Emulation Over ATM: Version 1.0 Specification* which is widely accepted as the industry standard for multivendor multiprotocol interoperability. This chapter introduces basic LAN emulation (LE) concepts in the context of the MSS implementation. It begins by examining the motivation for installing emulated LANs (ELANs).

---

### LAN Emulation Benefits

LAN emulation protocols allow ATM networks to provide the appearance of Ethernet and Token-Ring LANs. Although LAN emulation does not exploit all of the benefits of ATM, it is useful in migrating to ATM technology and lowering network management costs. It enables you to utilize high-speed ATM links and still protect your software and hardware investments.

Software investments are protected because application interfaces are unchanged (LAN emulation is implemented within the data link control layer, which is below the device driver interface of end stations). Hardware investments are protected with forwarding engines that bridge LAN and ATM networks so that existing adapters and wiring can continue to be used.

LAN emulation allows incremental installation of ATM adapters in stations with high-bandwidth requirements, for example, servers and engineering or multimedia workstations. Physical and logical views of a simple LAN emulation example are illustrated in 14.

## Overview of LAN Emulation

### Simple LAN Emulation Network

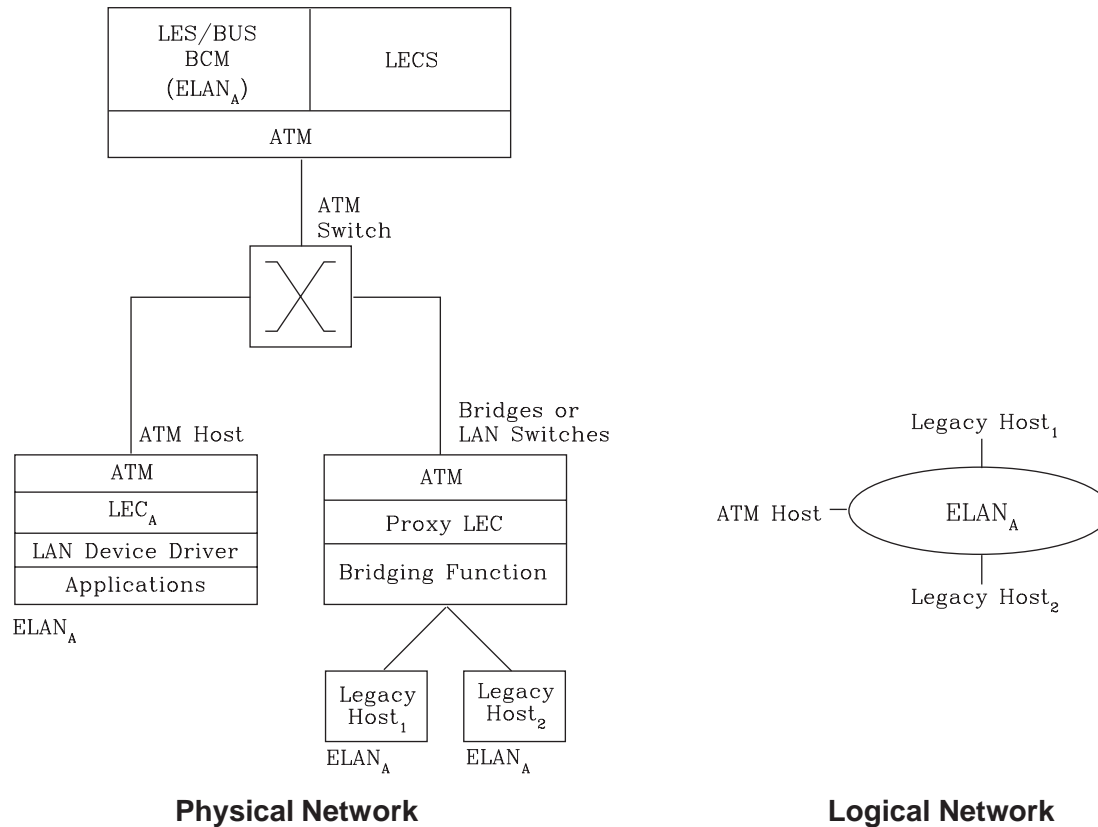 


Figure 14. Physical and Logical Views of a Simple LAN Emulation Network

The network management benefits of emulated LANs (ELANs) come from increased flexibility in handling moves, adds, and changes. Membership in an ELAN is not based on physical location; instead, logically-related stations are grouped to form an ELAN (stations can also be members of multiple ELANs).

As long as ELAN memberships are retained, no reconfiguration is needed when stations move to new physical locations. Similarly, no wiring modifications are needed to move stations from one ELAN to another.

---

## LAN Emulation Components

The following components implement an ELAN:

### LAN emulation (LE) clients (LECs)

LAN emulation components that represent users of the Emulated LAN.

### LE configuration server (LECS)

A LAN emulation service component that centralizes and disseminates configuration data.

### LE server (LES)

A LAN emulation service component that resolves LAN destinations to ATM addresses.



**Broadcast and Unknown Server (BUS)**

A LAN emulation service component responsible for the delivery of multicast and unknown unicast frames.

 
The LES, BUS, and LECS are collectively referred to as the LE service components. Each ELAN has a dedicated LES and BUS. LE clients reside in end systems, either in ATM-attached hosts or in bridges or LAN switches. The bridges or LAN switches represent hosts that are connected to Ethernet or Token-Ring LANs. LE clients provide a MAC-level service to higher level software. Either Ethernet IEEE 802.3 or IEEE 802.5 Token-Ring LANs can be emulated, but all stations on an ELAN must be of the same type.

The function that bridges between Token-Ring or Ethernet LAN segments and ELANs is called a Proxy LEC. To emulate a LAN, LE clients request services from the LECS, LES, and BUS. The following sections briefly review ATM addressing and pertinent Interim Local Management Interface (ILMI) functions. You need to understand these concepts before you can understand how the LE components function in the network.

---

**Addressing in ATM**

ATM uses 20-byte hierarchical addressing:

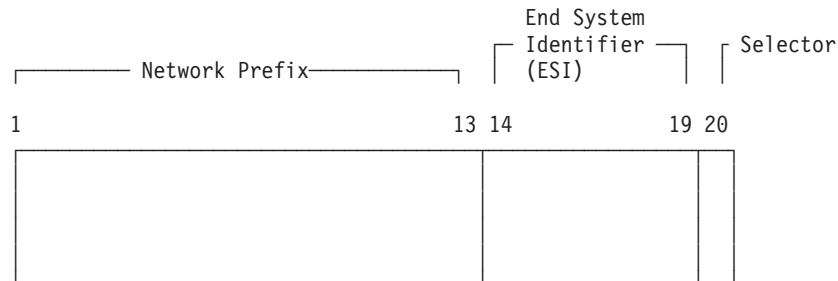

The first 13 octets of an ATM address are the Network Prefix. Each switch in your ATM network must have a unique Network Prefix. ATM switches use the Network Prefix to route VCC setup requests to the destination ATM switch. End systems, like this router, retrieve their Network Prefix from their ATM switch when they activate.

Octets 14–19 of an ATM address are the End System Identifier (ESI). Each end system attached to the same switch must use a disjoint set of ESIs. When an end system activates, it attempts to register its ESIs with its ATM switch using the Interim Local Management Interface (ILMI).

The ILMI defines a set of SNMP-based procedures used to manage the interface between an end system and an ATM switch. End systems use ILMI to:

- Obtain the network prefix from the switch
- Register their ESIs with the switch
- Dynamically determine the UNI version of the ATM switch
- LECs may get a list of LECS addresses from the switch

The switch forces all of its registered ESIs to be unique.

Octet 20 of an ATM address is the selector.

## Overview of LAN Emulation

End stations obtain their Network Prefix from the switch and form their own addresses by appending an ESI and selector. These addresses must then be registered with the switch, which rejects the registration if the ATM address is not unique.

## ESI

Each ATM interface on the router has a universally administered, or burned-in, MAC address. You can use the MAC address as an ESI for some or all of the router's ATM addresses. Alternatively, you can define up to 64 locally administered ESIs on each interface. If every end system uses its universally administered MAC address as its ESI, then ATM addresses are guaranteed to be unique. This eases the configuration burden. However, using locally administered ESIs can ease problem determination. You can use any combination of universal or locally administered ESIs.

One way to obtain a unique ATM address is to use a burned-in IEEE MAC address as the ESI and to locally choose a unique selector. By default, the router uses the MAC address of the ATM interface as the ESI in its ATM addresses. Additional ESIs can be configured on each ATM interface.

Each ESI can have up to 255 associated selectors (0x00 through 0xff). The range of selectors is partitioned into two subranges, a configured selector range and an automatically assigned selector range. The ATM interface parameter `max-configured-selector` gives the upper bound on the configured selector range.

The ATM components on the router have various ways of choosing a selector. Some components require you to explicitly configure a selector from the configured selector range. LES/BUSs are an example of such a component. Other components, such as Classical IP clients, allow the selector to be automatically assigned at run-time. You do not have to choose the selector because the router does this when it activates. This selector is not guaranteed to be consistent across router restarts. Automatic selector assignment is useful only for those ATM components whose ATM address does not have to be already known by other network devices.

You must configure ATM before you configure emulated LANs, bridging or routing.

---

## ATM Addresses of LAN Emulation Components

In general, ATM addresses must be unique among LAN emulation components. The only exception is that a LES and BUS serving the same ELAN can share an ATM address, as is the case on the router.

LAN emulation components are configured for a particular ATM interface. You can decide to use the burned-in MAC address as the ESI portion of the ATM address of the component or you can select one of the locally-administered ESIs that have been defined for the ATM interface. Multiple LE components can share the same ESI if they have unique selectors. By default, the configuration interface assigns each LE component a unique selector value for the configured ESI; however, you can override this assignment and explicitly configure a particular selector value.

An ATM interface parameter determines the number of selectors per ESI reserved for explicit assignment. The remainder are available for dynamic assignment by the ATM interface at run-time. LE components use only the selectors reserved for

explicit assignment; by default, 200 of the 256 possible selectors per ESI are reserved for explicit assignment. Run-time selector assignment is beneficial when you do not need to control the assigned selector, for example, when you are configuring clients in Classical IP that are not paired with an ARP server.

While ATM addresses must be unique among LE components, LE components can use the same ATM addresses as non-LE components, such as Classical IP servers.

---

## Overview of Related ILMI Functions

ILMI defines a set of SNMP-based procedures used to manage the user-network interface (UNI) between an ATM end system and an ATM switch. The following three ILMI functions are particularly relevant to LAN emulation:

1. ATM address registration, which is described in “Addressing in ATM” on page 263
2. Dynamic determination of the signaling version being run at the switch
3. Acquisition of the LECS ATM addresses

As mentioned in “Addressing in ATM” on page 263, ATM address registration is a joint effort between ATM end systems and switches. ATM addresses must be registered with the switch before calls can be placed or received.

By default, the ATM interfaces of a router use ILMI procedures to query the switch MIB in an attempt to determine the signaling version (UNI 3.0 or 3.1) being run at the switch. If the query succeeds, the ATM interface runs the same UNI version as the switch; if the query fails, the ATM interface runs UNI 3.0. Alternatively, you can override the default and explicitly configure the UNI version that will run on the ATM interface.

## Manual Configuration of the Signaling Version

You need to configure the signaling version manually if the ATM switch runs UNI 3.1 and has no UNI Version MIB variable. In this case, the ATM interface cannot dynamically determine the UNI version. Because the ATM interface in the router uses UNI 3.0 by default, you should manually configure the ATM interface to use UNI 3.1.

## Locating the LECS Using ILMI

ILMI is the method of choice for locating the LECS. The ILMI MIB at the ATM switch includes a list of LECS ATM addresses that can be retrieved by LE clients. This method is useful because the LECS ATM addresses need only be configured at ATM switches, not at LE clients, and there are fewer switches than LE clients. Clients attempt to connect to the first LECS on this list. If the connection fails, they try the next LECS address in succession until a connection is established.

### Overview of the LECS Function

LE clients are not required to use the LECS, although it is recommended. If the LECS is not used, each LE client must be configured with the ATM address of the LES that serves its ELAN. The LECS reduces the network management burden by serving as a centralized repository for configuration data, minimizing configuration of the LE clients.

**Note:** At most, one LECS is configurable on each router.

Clients connect to the LECS using well-defined procedures. The following steps are attempted by a client, in order, until a virtual channel connection (VCC) to the LECS is established:

1. Connect to the LECS using any configured LECS address information (configuration of an LECS ATM address at LE clients is optional and is **not** recommended).
2. Obtain a list of LECS addresses using ILMI and attempt to connect to each LECS on the list, in order, until a VCC is established.
3. Establish a VCC to the well-known LECS ATM address as defined by the ATM Forum.

As previously stated, ILMI is the preferred method for LE clients to locate the LECS. The well-known LECS address is needed because some switches do not support the ILMI method. Configuring the LECS address at the LE clients should be done **only** when the switch does not support the ILMI method and the LE service does not support the well-known LECS address.

The router and the IBM ATM switch support all three methods: the pre-configured LECS address, ILMI connection, and the well-known LECS ATM address.

The LECS must provide initial configuration data to LE clients. The most crucial piece of data is the ATM address of the LES. To provide this information to an LE client, the LECS must be able to identify the LE client and to determine the correct LES for that LE client. The LECS identifies an LE client using information in the LE\_CONFIGURATION\_REQUEST frame sent by the LE client. The configuration request can also contain information to identify the ELAN that the LE client is seeking to join. The following information can be included in the configuration request:

1. Primary ATM address of the LE client  
This field is required and uniquely identifies the LE client.
2. LAN destination associated with the LE client  
This field can contain a MAC address or a route descriptor that uniquely identifies the LE client or it can be unspecified.
3. ELAN Name  
This field can contain a name identifying the requested ELAN or the requesting LE client. In the router implementation, ELAN names are standard ASCII strings. The ELAN name can be unspecified in the request.
4. ELAN Type  
This field can specify that the LE client belongs to an Ethernet or Token-Ring ELAN, or it can be unspecified. If the LE client specifies the type of ELAN, the LECS cannot assign the client to an ELAN of a different type.
5. Maximum frame size supported by the LE client

## Overview of LAN Emulation

This field can specify the upper bound on the size of a data frame that can be processed by the LE client, or it can be unspecified. The LECS cannot assign a client to an ELAN with a maximum frame size *larger* than that specified by the client. If the ELAN allows frames too large for the client to handle, the client cannot function on that ELAN.

Given this information, the LECS assigns the LE client to a LES. This is accomplished through the use of policies and policy values. A policy is a criterion that the LECS uses to make LE client-to-LES assignment decisions. A policy value is a (value, LES) pair that indicates that the specified value should be assigned to the specified LES. For example, a policy could be the MAC address of the LE client, and a policy value could be (MAC ADDR\_A, LES\_1). An LE client with MAC ADDR\_A will be assigned to LES\_1 if the LE client has not already been assigned to another LES because of a higher-priority policy. One set of policies and policy values applies to all the ELANs.

In accordance with the LE service MIB Specification of the ATM forum, these are the six policies defined:

1. ATM address
2. MAC address
3. Route descriptor
4. ELAN type
5. Max frame size
6. ELAN name

Policies also have priorities. The LECS examines policies in prioritized order. Policies with smaller values in the priority field are considered before policies with larger values in the priority field. Policies with equal values in the priority field are considered at the same time and *ANDed* together.

The LECS assigns an LE client to a LES when all of the policies at the current priority level are satisfied and in agreement. The policies are satisfied when there is a policy value that matches the corresponding field in the configuration request for each policy at the current level. The policies are in agreement when the set of matches include a LES that is common to all the policies. If these conditions are not met, the LECS considers the policies at the next priority level. If the LECS is unable to find a LES at any priority level, an unsuccessful configuration response is returned to the LE client.

To understand the meaning of agreement of the policies, consider this example of policies not in agreement. Suppose that the policies at priority 1 are a MAC address and an ELAN name. One of the policy values is (X'400000121225', LES\_A) and one is (ELAN 1, LES\_B). If the LE client provides a LAN destination of X'400000121225', the MAC address policy is satisfied. If the LE client provides an ELAN name of *ELAN 1*, then the ELAN name policy is also satisfied. In this case the policies at priority 1 are *not* in agreement because they refer to different LESs. In this example, the LECS would examine the policies at the next priority level.

After determining the correct LES for an LE client, the LECS returns a configuration response to the LE client that includes the following information: LES ATM address, ELAN type, max frame size, and ELAN name. The configuration response can also include type/length/value (TLV) parameters. TLVs provide a method to download optional or user-defined parameters to the LE client.



This setup requires configuring the LE clients with the correct ELAN Name.

- Use names for the LE clients

Each LE client can be given its own name. For example, you could create the policy values (Joe, LES\_A) and (Mary, LES\_A). Then, the LE clients configured with these names would be directed to the same LES. This method requires configuring the ELAN name at each LE client and at the LECS. However, it allows Joe and Mary to move the client to a new location. Even though moving causes the client to have a new ATM address or MAC address, as long as you configure the new LE client with the same ELAN name, you retain membership in the original ELAN. This technique also offers a moderate amount of security if the names of each LE client are considered to be passwords.

### ELAN Type Policy

ELAN type policy values are most useful for providing default ELANs. For example, the following policy values would ensure that every LE client is assigned to one of the LESs:

```
(Token-ring ELAN Type,  LES_A)
(Ethernet ELAN Type,    LES_B)
(Unspecified ELAN Type, LES_C)
```

In general, policies used for providing default ELAN assignments should be given a low priority, so that the more specific policies are considered first.

### Max Frame Size Policy

The max frame size policy can also be used to provide default ELAN assignments.

### Duplicate Policy Values

Duplicates occur when the same policy value is associated with multiple LESs for a given policy. Duplicate policy values are allowed for the ELAN type and max frame size policies, but are not allowed for other policies. Duplicate values are useful only when combined with a different policy of the same priority.

For example, assume that there are three ELANs: an Ethernet ELAN with a max frame size of 4544 bytes, a Token-Ring ELAN with a max frame size of 4544 bytes, and another Token-Ring ELAN with a max frame size of 18190 bytes. LE clients could be assigned to the appropriate ELAN by setting the ELAN type and max frame size policies to the same priority level and defining the following policy values:

```
(Ethernet ELAN Type,    LES_1)    (Max Frame Size = 4544,  LES_1)
(Token-Ring ELAN Type,  LES_2)    (Max Frame Size = 4544,  LES_2)
(Token-Ring ELAN Type,  LES_2)    (Max Frame Size = 18190, LES_2)
```

## More Information About TLVs

TLVs are defined on an ELAN basis; therefore, the same set of TLVs is returned to all LE clients that are assigned to a particular ELAN. When a TLV is included in a configuration response, the LE client **must** use the value specified in the TLV as an operating parameter (if the LE client recognizes the ELAN type). A few examples of situations where TLVs might be beneficial are as follows:

- When ELANs are spread over large geographic locations, the default timeout values for LE clients may be insufficient. These timeouts can be controlled for all LE clients by specifying their value in a TLV at the LECS.

## Overview of LAN Emulation

- By default, ELANs use best-effort connections to connect to the BUS. For ELANs where BUS traffic is heavy, better performance can be obtained by using reserved bandwidth connections to the BUS. The characteristics of the Multicast Send VCC between the LE client and the BUS can be controlled with TLVs.
- A TLV can be used to download the ELAN segment number to source route bridges.

In addition to fine-tuning the configuration, TLVs force all clients on the ELAN to operate with consistent parameters. The IBM 2210 supports all ATM Forum-defined TLVs along with arbitrary, user-defined TLVs.

---

## Connecting to the LES

After obtaining the ATM address of the LES, the LE client initiates a Control Direct VCC to the LES. When this VCC has been established, the LE client sends an LE\_JOIN\_REQUEST to the LES. The LES responds by adding the LE client to the appropriate point-to-multipoint Control Distribute VCC and returning an LE\_JOIN\_RESPONSE. By default, the LES partitions proxy and non-proxy clients onto separate Control Distribute VCCs as illustrated in Figure 15; however, you can configure the LES to use a single Control Distribute VCC for all LE clients in order to reduce the number of point-to-multipoint VCCs that are required. Partitioning the VCCs is generally useful because it reduces the amount of nuisance traffic that is sent to non-proxy clients. No LE\_ARP\_REQUESTs are sent to non-proxy LE clients, as described in “Address Resolution” on page 271.

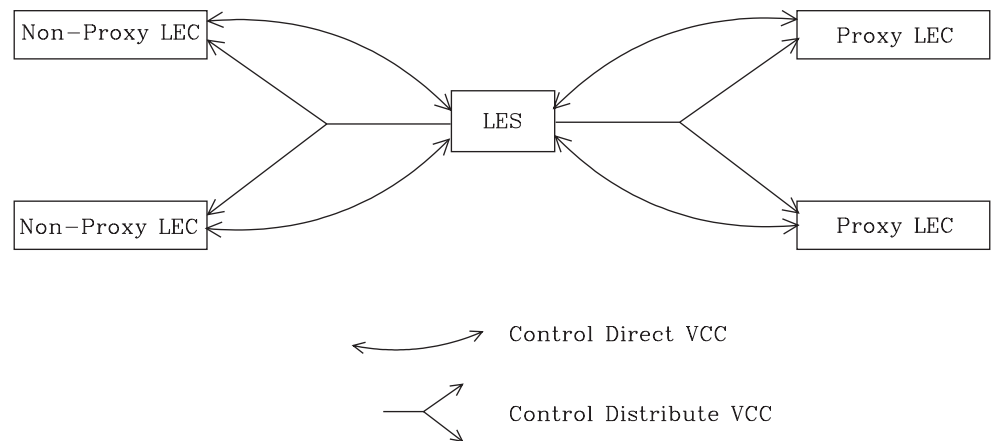 


Figure 15. Default Connections Between LE Clients and the LES

The following ATM connections are established between the LE client and the LES:

**Control Direct VCC (bidirectional point-to-point)**

From LE client to LES

**Control Distribute VCC (point-to-multipoint)**

From LES to LE client



---

## Address Registration

LE clients register LAN destinations with the LES to ensure uniqueness and to allow the LES to answer LE\_ARP\_REQUESTs, which LE clients issue to learn the ATM address associated with a particular LAN destination. Registrations include the LAN destination and the ATM address that the LE client associates with the LAN destination. A LAN destination can be either a MAC address or a route descriptor.

Proxy LE clients do not register the MAC addresses of stations on LAN segments that they are bridging to the ELAN. On the other hand, non-proxy LE clients must register all the LAN destinations that they represent. All route descriptors must be registered, regardless of whether they are associated with a proxy or a non-proxy LE client. Route descriptors are applicable only to proxy LECs that are performing source route bridging. A route descriptor contains the bridge number of the proxy LE client and the segment number of a ring that the LE client is bridging to that is equivalent to one hop away.

---

## Address Resolution

LAN communications are based upon source and destination MAC addresses. To enable such communication on an ATM network, MAC addresses must be resolved to ATM addresses. An LE client sends an LE\_ARP\_REQUEST to the LES to learn the ATM address of a particular LAN destination. If the LAN destination is registered, the LES responds with the ATM address associated with the LAN destination. Otherwise, the request is forwarded to all proxy LE clients on the Control Distribute VCC. There is no need to forward the request to non-proxy LECs because all of their LAN destinations are registered; however, if the LES is configured to use a single Control Distribute VCC, both proxy and non-proxy LE clients will receive the request. Control Distribute VCCs provide an efficient way for the LES to distribute control frames to multiple LE clients.

Proxy LE clients respond to LE\_ARP\_REQUESTs for unregistered MAC addresses that they represent. The LE\_ARP\_RESPONSE is sent to the LES on the Control Direct VCC, and the LES forwards the response to the LE client that issued the request.

---

## Connecting to the BUS

After connecting to the LES, an LE client issues an LE\_ARP\_REQUEST for the all 1s broadcast MAC address. The LES responds with the ATM address of the BUS. The LE client then initiates the establishment of a Multicast Send VCC to the BUS. The BUS responds by adding the LE client to the appropriate point-to-multipoint Multicast Forward VCC. By default, the BUS partitions proxy and non-proxy clients onto separate Multicast Forward VCCs; however, as was the case with the Control Distribute VCC, you can configure the BUS to use a single Multicast Forward VCC for all LE clients. Figure 16 on page 272 shows partitioned Multicast Forward VCCs.

## Overview of LAN Emulation

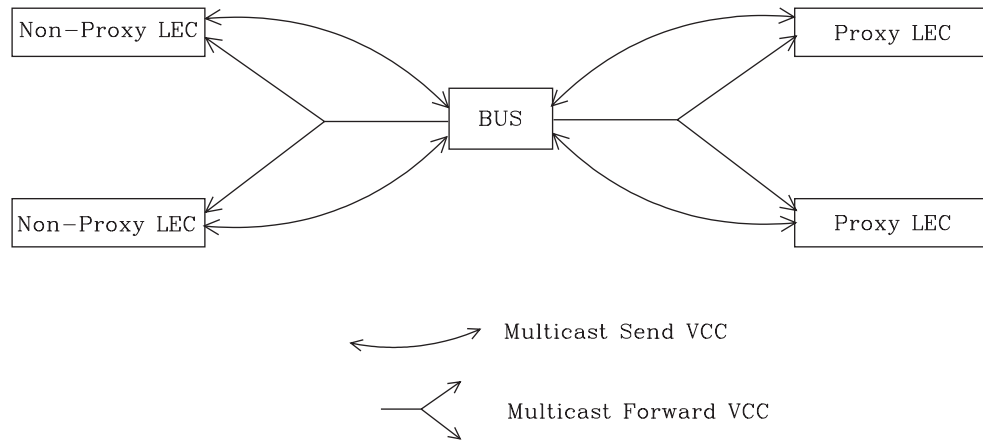 


Figure 16. Default Connection Between LE Clients (LECs) and BUS

This list is provided to help you clarify the ATM connections that are established between the LE client and the BUS:

**Multicast Send VCC (bidirectional point-to-point)**

From LE client to BUS

**Multicast Forward VCC (point-to-multipoint)**

From BUS to LE client

---

## BUS Functions

The BUS has two basic functions:

1. Distribute multicast frames to all the LE clients in the ELAN
2. Forward unicast frames to the appropriate destinations

An LE client sends unicast frames to the BUS if it does not have a direct connection to the LE client that represents the destination. To avoid creating a bottleneck at the BUS, the rate at which an LE client can send unicast frames to the BUS is limited.

In the router implementation, the BUS has two modes of operation: partitioning the unicast frame domain and not partitioning the unicast frame domain. If you partition the unicast frame domain, the BUS uses two Multicast Forward VCCs. Otherwise, the BUS uses a single Multicast Forward VCC.

If a single Multicast Forward VCC is used, the BUS operation is very simple; all received frames are simply forwarded to all LE clients. If two Multicast Forward VCCs are used, the BUS will not broadcast unicast frames to all LE clients; instead, unicast frames destined for non-proxy LE clients will be transmitted directly to the destination LE client on a Multicast Send VCC, and all other unicast frames will be transmitted only to proxy LE clients, using the Proxy Multicast Forward VCC. When two multicast VCCs are used, the router is considered to be in intelligent BUS (IBUS) mode.

IBUS mode reduces nuisance unicast frames, which are unicast frames not destined for the client; proxy clients do not receive unicast frames destined for non-proxy clients, and non-proxy clients never receive nuisance unicast frames. Network bandwidth devoted to nuisance frames is also reduced. On the other hand,

BUS processing requirements are increased and multicast frames must be transmitted twice (once on each Multicast Forward VCC). In general, IBUS operation is recommended; however, this option should be disabled in configurations that have source route bridges that join the ELAN as non-proxies.

---

### Establishing Data Direct VCCs

Data Direct VCCs connect two LE clients, and are used to exchange unicast frames without involving the BUS. The LE client uses the address resolution procedures to determine the ATM address associated with the required LAN destination. If the LE client already has a Data Direct VCC to the ATM address (perhaps for another LAN destination represented by the target LE client), unicast data frames are subsequently transmitted on the existing VCC; otherwise, the LE client invokes the signaling protocol to establish a new VCC.

The LE client maintains an LE\_ARP cache containing LAN destination-to-ATM address mappings. Entries in this cache are aged and must be periodically refreshed. The entries are refreshed when a data frame is received from the LAN destination. The LE client also attempts to refresh entries in the absence of data traffic.

Utilization of Data Direct VCCs is also monitored and the VCCs are released if there is no traffic for the VCC time-out period, which is configurable. Additionally, Data Direct VCCs are released in a least-recently used manner when establishment of a new Data Direct VCC fails due to insufficient resource availability.

---

### Overview of Extensions for LAN Emulation

IBM has made value-add extensions to ATM Forum LAN Emulation available on the router. These extensions offer improved performance, reliability, security, and manageability:

#### **Broadcast Manager (BCM)**

This function can improve overall network performance by reducing ELAN broadcasts.

#### **Redundancy**

The redundancy mechanism improves reliability by allowing backup servers to take over if failures occur at primary servers.

#### **Security**

Security is improved by letting the LECS control ELAN memberships.

#### **BUS Monitor**

This function enhances manageability by identifying the top users of the BUS.

The following sections describe each of these extensions.

---

### Broadcast Manager

Broadcast Manager (BCM) is an extension to LAN emulation that consists of IBM enhancement of the LAN emulation BUS. Without BCM, the following events occur:

- A multicast frame sent to the BUS is forwarded to all LE clients on the ELAN.

## Overview of LAN Emulation

- LE clients that include the proxy function to provide bridging support forward the broadcast frame on to other LAN segments.
- All end stations receive and process every broadcast frame.

BCM can be enabled on individual ELANs for any of these protocols:

IP  
IPX  
NetBIOS

When BCM is enabled, a minimal amount of layer 2 and layer 3 information is decoded for specific types of broadcast frames sent to the BUS. Whenever possible, BCM transforms broadcast frames into unicast frames, and sends them only to interested LE clients and end stations. BCM reduces both network traffic and associated end-station overhead by filtering nuisance broadcast frames. These functions can improve overall system performance and enable practical deployment of larger ELANs.

## BCM Support for IP

When enabled for IP, BCM scans all IP ARP requests and replies to learn the location of IP addresses in the IP subnet that contains this ELAN. The objective is for BCM to take each broadcast ARP request frame and forward it as a unicast frame directly to the LE client representing the target IP station. Both network traffic and end-station processing time are reduced when the request is forwarded directly to the appropriate LE client on the Multicast Send VCC instead of being broadcast to all LE clients on the Multicast Forward VCCs. When the destination station is located behind a bridge function, the LAN that the destination station belongs to also benefits from the reduced broadcast traffic.

## BCM Support for IPX

For IPX, BCM limits the scope of advertisements and other broadcast requests. IPX routers and servers periodically broadcast their known network and service information. IPX clients send broadcast requests to locate a particular service or router. Generally, these broadcasts, called Routing Information Protocol (RIP) and Service Advertising Protocol (SAP) packets, need to be received only by other IPX routers and servers.

When it is enabled for IPX, BCM dynamically identifies the set of IPX routers and servers based on advertisement transmissions, and only forwards RIP and SAP advertisements and other broadcast requests to other IPX routers and servers. A broadcast frame managed by BCM IPX is sent as a series of unicast frames to the dynamically-learned set of IPX routers and servers.

When BCM IPX Server Farm Detection is enabled, BCM IPX will detect an IPX server farm when the number of IPX routers and servers discovered behind a given LEC exceeds a configurable threshold, the *BCM IPX Server Farm Threshold*. When a server farm is detected, BCM IPX broadcasts a managed frame to each LEC representing a server farm, rather than transmitting multiple unicast frames to each downstream IPX router and server in the server farm. BCM IPX can now intelligently use the broadcast mechanism in areas of the network where it is desirable to do so.

With BCM IPX enabled, any quiet device (that is, a device that does not transmit IPX advertisements) that needs to receive IPX advertisements has to be configured as a BCM static target. An example of such a device is a station running software that discovers the IPX network topology by monitoring IPX advertisements.

If BCM IPX Server Farm detection is enabled and you wish to prevent a particular LEC from being treated by BCM IPX as a Server Farm, configure a BCM static target with the LEC's ATM address and a MAC address of 00.00.00.00.00.00. This forces BCM IPX to send frames managed by BCM as multiple unicast frames to each downstream IPX router and server detected behind this LEC, even if the number of routers and servers detected exceeds the *BCM IPX Server Farm Threshold*.

## BCM Support for NetBIOS

NetBIOS is considered to be a broadcast-abusive protocol and therefore an excellent candidate for BCM. NetBIOS communication is based on names. Transmitting stations can learn the MAC address associated with a particular destination name by broadcasting a query or by having the frame multicasted to the NetBIOS functional address. In the latter case, every NetBIOS device in the network must receive the frame and determine whether the destination name on the frame applies to itself. To make things even worse, NetBIOS devices tend to repeat transmission of certain types of frames as much as 10 times. Historically, this was to ensure that all devices receive the frame in cases where the network is heavily congested.

The BCM strategy is to associate unique NetBIOS names with MAC addresses and LE clients by learning names from NetBIOS frames sent to the BUS. After a unique NetBIOS name is learned, subsequent NetBIOS broadcast frames destined for that name are forwarded to a single LE client as a unicast frame. BCM also filters certain NetBIOS frames that are broadcast repeatedly.

BCM provides support for NetBIOS Namesharing. That is, BCM NetBIOS handles OS/2 LANServer stations with multiple LAN adapters sharing the same NetBIOS name.

## BCM Support for Source Route Bridging

Source Route Management (SRM) is an additional BCM feature that can be configured for 802.5 ELANs. When enabled, this feature will further process frames managed by BCM IP or BCM NetBIOS and, whenever possible, transform All Routes Explorer (ARE) or Spanning Tree Explorer (STE) frames into Specifically Routed Frames (SRF). Once a frame is transformed into an SRF, the frame no longer needs to be transmitted onto each ring in the bridged network.

The Token-Ring topology behind each LE client is learned by recording the routing information field (RIF) of frames received by the BUS. Because SRM dynamically learns Token-Ring topology information, an aging mechanism is used to remove information that has not been refreshed recently.

To decide whether to enable BCM or SRM (or both), you should compare the net system-wide benefit with the inevitable reduction in the rate at which packets are forwarded when BCM or SRM is enabled.

## Overview of LAN Emulation

**Note:** Broadcast Manager and Source Route Management are unavailable and cannot be enabled if **bus-mode** is set to *adapter* or *vcc-splice*.

## LAN Emulation Reliability

A perceived lack of robustness has been one of the most widely proclaimed criticisms of LAN emulation. While the ATM Forum is addressing this issue with specifications for distributing the LE service, the router offers an answer in the interim. Figure 17 provides a framework for describing the MSS redundancy solution.

Each LES/BUS may be independently configured for redundancy (the default is no

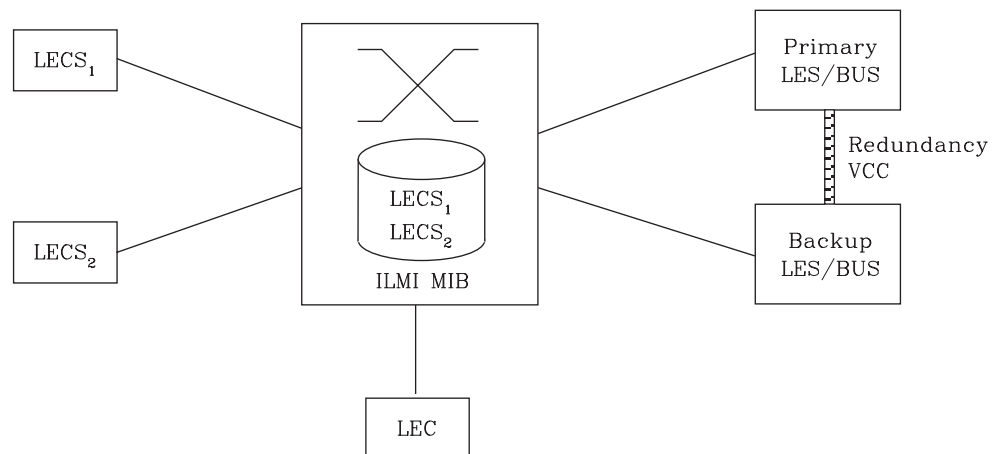 


Figure 17. LAN Emulation Redundancy

redundancy). If redundancy is enabled, the LES/BUS is configured to assume the role of a primary or a backup LES/BUS. Unless it has been configured as a redundant LES/BUS, the LES/BUS is primary. The primary LES/BUS is typically the only LES/BUS visible to the LE clients. It is responsible for setting up and maintaining an Enhanced Redundancy VCC to the backup LES. The presence of this VCC and timely status messages indicate that the primary LES/BUS is operational.

If the Enhanced Redundancy VCC is **not** present, the backup LES/BUS services ELAN requests in the usual manner. If the backup LES/BUS is servicing the ELAN when the Enhanced Redundancy VCC is established by the primary, the behavior is determined by the setting of LES/BUS Peer Redundancy Support.

Enabling Peer Redundancy support allows clients to remain active on the backup LES/BUS even after the Enhanced Redundancy VCC is established between the primary and backup LES/BUS. When Redundancy support is enabled, but Peer Redundancy is disabled, the backup terminates all its clients when the Enhanced Redundancy VCC is established, always yielding to the primary LES/BUS. When Redundancy and Peer Redundancy support are both enabled and the Enhanced Redundancy VCC is up, the primary and backup LES/BUS periodically transmit status messages to one another containing the number of active clients. In the event that the primary and backup LES/BUS each has active clients at the time when the Enhanced Redundancy VCC is established, the LES/BUS with the lower number of active clients terminates its clients, yielding to the LES/BUS with the higher number of active clients. If the number of active clients is equal, the backup LES/BUS yields to the primary. In order to give preference to the primary LES/BUS

in the race condition where primary and backup become operational at approximately the same time, the backup will yield to the primary if the Enhanced Redundancy VCC is established within one minute of the backup registering itself with the ATM switch.

For simplicity, only the Primary LES/BUS has the Peer Redundancy option. Peer Redundancy is disabled by default to maintain the redundancy behavior of prior releases of router software.

For the redundancy protocol to be effective, LE clients must detect the failure of the primary LES/BUS and connect to the backup. LE clients detect server failures by means of released VCCs. Connection to the backup LES/BUS is accomplished through the LECS.

Upon receiving an LE\_CONFIGURE\_REQUEST, the LECS assigns the LE client to the appropriate LES and ELAN. If this LES has no configured backup, then the LECS returns the ATM address of the LES. If the LES is configured with a backup LES, then the LECS returns either the primary or backup LES address.

The LECS returns the backup LES address if the backup LES exists on the same MSS Server as the LECS and is currently serving the ELAN, if the primary LES exists on the same MSS Server as the LECS and it is not currently serving the ELAN, or if neither LES exists on the same MSS Server as the LECS and the client was last assigned to the primary LES (within the past 5 minutes). Otherwise, it returns the primary LES address to the LE client.

The LECS retains a short-term memory of all client assignments so that it can alternately direct an LE client to a primary and backup LES. This simple heuristic makes the correct assignment in the nominal case of no failure and is self-correcting. At worst, the heuristic causes the LE client to repeat the configuration phase of joining an ELAN.

LECS robustness can be achieved by establishing duplicate LECSs on multiple platforms and including their ATM addresses in the ILMI database. LE clients will then connect to the backup LECS if the primary is unavailable. could be on MSS Server 1, while

---

## LAN Emulation Security

Traditional LANs offer security in the sense that a physical connection implies that two stations are on the same LAN. Because multiple emulated LANs can exist on a single ATM network, stations that are not on the ELAN can be physically connected to stations that are on the ELAN. This situation presents a security risk in that unauthorized stations can connect to the LES and attempt to use its services.

To control ELAN membership, an MSS LES can be configured to validate LE\_JOIN\_REQUESTs with the LECS. In this mode the LES forms an LE\_CONFIGURE\_REQUEST on behalf of the LE client using information from the LE\_JOIN\_REQUEST. These LE\_CONFIGURE\_REQUESTs include the source LAN destination, source ATM address, ELAN type, max frame size, and ELAN name from the LE\_JOIN\_REQUEST, along with an IBM Security TLV. The security requests are transmitted to the LECS by a multiplexing component called the LECS interface, and the LECS must validate the requests using its ELAN assignment database before LE clients are allowed to join the ELAN.

## Overview of LAN Emulation

A LECS interface is associated with an ATM interface, and all LESs configured on the ATM interface use the same LECS interface. The LECS interface conserves VCC resources by multiplexing security requests from multiple LESs onto a single VCC to the LECS. The LECS interface locates the LECS dynamically using the ILMI and well-known LECS address mechanisms. After the VCC to the LECS is established, the LECS interface issues a local query to determine whether the LECS is located on the same router. If the LECS is located on the same router, a local interface is used to confirm requests to join without transmitting requests onto the ATM network.

With the LECS interface, the router may ensure that an LE Client joins an ELAN only if the LECS approves of the join. This shifts the security burden from the LES to the LECS. Unfortunately, the LECS is also non-secure. The LECS accepts connections and queries from any station without verification. An intruder station may connect to the LECS and repeatedly query it for various configurations. The intruder may also pose as some other station and download another station's configuration.

LECS Access Controls permit the user to configure a list of ATM address prefixes which are not allowed access to the LECS configuration database. All LECS connection attempts and LE\_CONFIGURE\_REQUESTs from matching ATM addresses are automatically rejected. When used in conjunction with the LECS interface, a secure LANE environment is provided.

To maximize the security of an ELAN, the following steps are recommended:

1. At the LECS, use ATM addresses to assign clients to the LES. See "Overview of the LECS Function" on page 266 for more information.
2. Activate the LECS Interface on the router.
3. Activate the security option of the LESs.
4. Activate LECS Access Controls for any ATM address prefixes that should not be allowed to access the LECS.
5. Use *Address Screening* at the ATM switches. This option causes switches to validate that calling stations use their actual ATM addresses in the call setup. Thus, stations cannot impersonate other stations.

These steps ensure that stations are correctly identified and that only authorized stations join the ELAN.

---

## Key Configuration Parameters for LAN Emulation

This section briefly describes the required configuration parameters of the router LAN emulation components. The ATM interface for the LAN emulation components must be defined before the components can be created.

### 1. **LEC:**

To create an LE client, you only need to specify the ELAN type. If you define two LE clients on a single ATM interface and bridge them together, then one of the LE clients must use a non-default MAC address. By default, LE clients use the burned-in MAC address of the ATM interface. The default maximum frame size is 1516 bytes for Ethernet LE clients and 4544 bytes for token-ring LE clients.



---

## Chapter 19. Using ATM

This chapter describes how to use the ATM interface. It includes the following sections:

- “ATM and LAN Emulation”
- “How to Enter Addresses”
- “ATM-LLC Multiplexing” on page 280
- “ATM Virtual Interface Concepts” on page 280

---

### ATM and LAN Emulation

LAN emulation provides support for virtual Token-Ring and Ethernet LANs over an ATM network. Refer to “How to Enter Addresses” for a discussion of ATM addressing.

---

### How to Enter Addresses

Enter addresses in two ways, depending upon whether the address represents (1) an IP address, or (2) an ATM address, MAC address, or route descriptor, as follows:

1. IP address

Enter IP addresses in dotted decimal format, a 4-byte field represented by four decimal numbers (0 to 255) separated by periods (.).

**Example of IP Address:**

01.255.01.00

2. ATM or MAC address or route descriptor

Enter ATM addresses, MAC addresses, and route descriptors as strings of hexadecimal characters with or without optional separator characters between bytes. Valid separator characters are dashes (-), periods (.), or colons (:).

Examples of ATM address, MAC address or route descriptor

A1FF01020304

or

A1-FF-01-02-03-04

or

A1.FF.01.02.03.04

or

39.84.0F.00.00.00.00.00.00.00.00.00.03.10.00.5A.00.DE.AD.08

or

A1:FF:01:02:03:04

or even

A1-FF.01:0203:04

Each type of address requires a different number of hexadecimal characters:

**ATM** 40

**MAC** 12

**ESI** 12

**Route descriptor**

4

## Configuring ATM and LAN Emulation

This information applies to addresses entered for ATM, LAN emulation, Classical IP and ARP over ATM, IPX over ATM, and ARP over ATM.

---

### ATM-LLC Multiplexing

Protocols that run natively over an ATM interface can use ATM-LLC multiplexing to share ATM addresses and both SVC and PVC channels between users. ATM-LLC is implicitly configured when the protocols are configured and can be monitored using the ATM Config+ command prompt from **t 5**. There are no explicit configuration options for the ATM-LLC multiplexing function. For example, if two protocols which use ATM-LLC multiplexing are configured to use the same local ATM address (local endpoint), this implicitly configures ATM-LLC to use the same shared ATM address for both protocols.

See “ATM-LLC Monitoring Commands” on page 295 for additional information.

Sharing of ATM addresses or SVC/PVC channels is not possible between protocols that use the ATM-LLC multiplexing function and those that do not use the ATM-LLC multiplexing function (such as Classical IP). Currently, Server Cache Synchronization Protocol (SCSP) and APPN are the only two protocols that use the ATM-LLC multiplexing function.

---

### ATM Virtual Interface Concepts

An ATM Virtual Interface (AVI) creates the appearance of multiple ATM interfaces when, in fact, there is only one physical ATM interface. One or more AVIs can be configured for each physical ATM interface on the device. AVIs have the following characteristics:

- Each AVI must be defined on one (and only one) physical ATM interface. ATM real interface (ARI) will be used to mean a physical ATM interface.
- One or more AVIs can be configured on each ARI on a device.
- Higher layer protocols treat ARIs and AVIs equally. The protocols see the total number of ATM interfaces as the sum of the number of ARIs and AVIs configured on the device.
- Protocols can be configured on each ATM interface (real or virtual) independently of other interfaces.

For example, one can configure IP on interface 0 (which is a real ATM interface) with IP address 9.1.1.1 and another instance of IP with address 9.2.1.1 on interface 1 (which is an AVI). Whether an interface is a real ATM interface or a virtual interface configured on a real interface makes no difference to the protocol (IP in the example). In addition, whether virtual interface 1 is configured on top of real ATM interface 0 or some other physical ATM interface is also transparent to the protocols.

### Advantages of Using ATM Virtual Interfaces

Major advantages of using the ATM Virtual Interfaces are:

- Using the ATM Virtual Interface feature increases the number of protocol instances that can be supported on a physical ATM interface.

The actual number of AVIs that can be configured on an ARI is limited by physical resources, such as memory, available on the device. The total number

## ATM Virtual Interface Configuration Concepts

of interfaces that can be created depends on the data packet size for the interfaces and is limited to a maximum number of 253 per device.

The use of AVIs significantly improves the configuration options for protocols such as IPX that are limited to one instance or address per ATM interface. By configuring an appropriate number of AVIs, several IPX addresses can be supported on each physical ATM interface.

- The ATM Virtual Interface feature is crucial for supporting multicast routing protocols (such as MOSPF) over ATM networks.

In order for multicast to operate correctly, each logical subnet *must* be configured on a different interface because multicast routing protocols typically function in such a way that a packet coming in from a device interface will never be sent out over the same interface. Thus, if more than one subnet is configured on an interface and a source in one subnet sends a multicast packet to a member in another subnet defined on the same interface, this member will never receive the packet.

By creating an individual virtual interface for each subnet, packet multicasting can be performed successfully. Typically, the number of ATM interfaces on a device will be limited, in turn limiting the number of subnets that can be correctly configured for multicast operation. However, by creating as many AVIs as needed (according to the number of subnets that are required to be configured on the device), the number of physical ATM interfaces will no longer limit the number of subnets that can be configured on a device for correct multicast operation.

For example, the “one-armed” router cannot support multicast traffic over interfaces other than ELANs without the AVI feature, because incoming packets will never be sent out the same interface and will be discarded instead.

- Creating multiple AVIs on an ARI and configuring each different protocol instance (for example, each IP subnet) on a different AVI on the same ARI, can improve performance.

For example, when multiple subnets are configured on a single physical ATM interface, the interface will have to reduce the maximum transmission unit or MTU (the maximum packet size that can be sent or received over that interface) to the smallest MTU of all subnets sharing the same interface. However, if multiple AVIs are created on that ARI and each IP subnet is configured on a different AVI, every subnet can continue to use its existing MTU size without consideration of other subnets configured on the same physical ATM interface. This avoids possible reduction in throughput and delays due to packet fragmentation and reassembly caused by MTU size reduction.

Another performance improvement can be achieved by distributing the number of protocol addresses configured on a physical interface over different virtual interfaces configured on the same physical interface. The per-interface protocol lists get shortened, resulting in faster searches and reduced processing time.

## Disadvantages of using ATM Virtual Interfaces

The disadvantages of using ATM Virtual Interfaces are:

- Because AVIs do not have any physical resources of their own, each virtual interface may have fewer Virtual Connections (VCs) than a single physical interface. The available resources (in this example VCs) are partitioned among the different virtual interfaces configured on a single ARI and the ARI itself.

In the current implementation, resource allocation is *on demand*. Each physical ATM interface has a pool of resources that are available for use by all AVIs and the single ARI itself.

## ATM Virtual Interface Configuration Concepts

**Note:** Because all resources are shared among the ARI and all its AVIs, an ESI added on an ARI is automatically available to all AVIs configured on the ARI. You should not assign the same ESI and selector combination to two different protocol clients using the same ARI even though they are configured on different AVIs.

Limited PVC sharing is allowed across the ARI and the AVIs configured on the ARI. PVC sharing is limited to different protocol instances. Multiple instances of the same protocol are not allowed to share the same PVC.

---

## Chapter 20. Configuring and Monitoring ATM

This chapter describe the ATM interface configuration and operational commands. It includes the following sections:

- “Accessing the ATM Interface Configuration Process”
- “ATM Configuration Commands”
- “ATM Interface Configuration Commands” on page 284
- “ATM Virtual Interface Configuration Commands” on page 291
- “ATM Virtual Interface Monitoring Commands” on page 296
- “Accessing the ATM Monitoring Process” on page 292
- “ATM Monitoring Commands” on page 292
- “ATM Interface Monitoring Commands (ATM INTERFACE+ Prompt)” on page 293
- “ATM-LLC Monitoring Commands” on page 295

---

### Accessing the ATM Interface Configuration Process

The ATM carrier card and the 25 Mbps Charm Adapter must be in the feature slot before ATM can be configured. You must reload the device after the feature slot has the ATM carrier card/25 Mbps Charm Adapter combination in place.

Use the following procedure to access the configuration process.

1. At the OPCON prompt, enter **talk 6**. (For more detail on this command, refer to “What is the OPCON Process?” on page 27.) For example:

```
* talk 6
  Config>
```

The CONFIG prompt (`Config>`) displays on the console. If the prompt does not appear when you first enter configuration, press **Return** again.

2. At the CONFIG prompt, enter the **list devices** command to display the network interface numbers for which the device is currently configured.
3. Record the interface numbers.

If ATM is not specified as an interface, then execute the quick configuration process, `qconfig` to dynamically add the ATM interface.

4. Enter the **network** command and the number of the ATM interface you want to configure. For example:

The ATM configuration prompt (`ATM Config>`), is displayed.

---

### ATM Configuration Commands

This section summarizes the ATM configuration commands. Enter the commands at the ATM `config>` prompt.

*Table 35. ATM Configuration Command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.

## ATM Configuration Commands (Talk 6)

Table 35. ATM Configuration Command Summary (continued)

Command	Function
Interface	Displays the ATM Interface Config> prompt from which you can list, change, or configure the ATM Interface. <ul style="list-style-type: none"> <li>• Add an ESI.</li> <li>• List the current configuration or list ESIs.</li> <li>• Remove an ESI.</li> <li>• Set parameters of the ATM network.</li> <li>• Enable or disable an ESI.</li> <li>• Exit</li> </ul>
Le-client	Displays the LE Client Config> prompt from which you can list, change, or configure the LAN Emulation Client Interface as described in “Chapter 21. Using LAN Emulation Clients” on page 297. <ul style="list-style-type: none"> <li>• Add a LAN Emulation Client (LEC) for a token-ring or Ethernet emulated LAN.</li> <li>• Configure a LEC by network #. This command displays the LE Config&gt; prompt, from which you can configure a specific LAN Emulation Client (LEC).</li> <li>• List LAN Emulation Clients (LECs).</li> <li>• Remove a LAN Emulation Client (LEC).</li> </ul>
Virtual ATM	Displays the ATM Virtual Interface Config> prompt from which you can list, add, or remove the ATM Virtual Interface as described in “ATM Virtual Interface Configuration Commands” on page 291
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

---

## ATM Interface Configuration Commands

This section summarizes and then explains the commands for configuring a specific ATM interface.

Enter the commands at the ATM INTERFACE> prompt.

Table 36. ATM INTERFACE Configuration Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds an ESI.
List	Lists the current configuration or list ESIs.
Qos	Displays the ATM I/F 0 QoS Config> prompt from which you can configure Quality of Service as described in “QoS Configuration” on page 286.
Remove	Removes an ESI.
Set	Sets parameters of the ATM network.
Disable	Disables an ESI.
Enable	Enables an ESI.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Add

Use the **add** command to add an ESI to your ATM configuration.

Octets 14–19 of an ATM address are the End System Identifier (ESI). Each end system attached to the same switch must use a disjoint set of ESIs. When an end system activates, it attempts to register its ESIs with its ATM switch using ILMI. The switch forces all of its registered ESIs to be unique.

**Syntax:**

**add** esi *esi-address*

**esi** *esi-address*

Address of End System Identifier.

**Valid Values:** Any 12 hexadecimal digits

**Default Value:**

none

### List

Use the **list** command to list the configuration of this ATM device or to list the set of configured ESIs.

**Syntax:**

**list** configuration

esi

**configuration**

Lists the ATM device configuration. For an explanation of the listed fields, see “Set” on page 286.

**Example: list con**

```

ATM Configuration
Interface (net) number = 0
Maximum VCC data rate Mbps = 155
Maximum frame size = 9234
Maximum number of callers = 209
Maximum number of calls = 1024
Maximum number of parties to a multipoint call = 512
Maximum number of Selectors that can be configured = 200
UNI Version = UNI 3.0
Packet trace = OFF
    
```

**esi** Lists the ESIs in the ATM configuration.

**Example: list esi**

```
ATM INTERFACE> list esi
```

ESI	Enabled
000000000009	YES
000000000100	YES

## ATM Interface Configuration Commands (Talk 6)

### QoS Configuration

Use the **qos-configuration** command to display the ATM I/F 0 QoS Config> prompt from which you can configure Quality of Service as described in “QoS Configuration”.

**Syntax:**

**qos-configuration**

### Remove

Use the **remove** command to remove an ESI from your ATM configuration. All ATM components using this ESI should be reconfigured to use a different ESI. An ATM component that attempts to use a removed ESI may not activate on the next device restart.

**Syntax:**

**remove** esi *esi-address*

**esi** *esi-address*

Address of End System Identifier.

**Valid Values:** Any 12 hexadecimal digits

**Default Value:**  
none

### Set

Use the **set** command to specify ATM network parameters.

**Syntax:**

**set** max-callers  
max-calls  
max-config-selectors  
max-data-rate  
max-frame  
max-mp-parties  
network-id  
trace  
uni-version

**max-callers**

Sets the maximum number of entities on the device that use the ATM interface. Each LEC, Classical IP Client, and 1483 bridge interface qualifies as a user of the ATM interface. Increasing this parameter allows more users of the interface and uses more system memory.

**Valid Values:**  
An integer in the range 64 – 1024



## ATM Interface Configuration Commands (Talk 6)

**Default Value:**

209

**Example:**

```
ATM INTERFACE> set max-callers 25
```

**max-calls**

Sets the maximum number of switched virtual circuits (SVCs) that can exist on this ATM device. Every point-to-point and point-to-multipoint SVC uses system resources. This parameter helps limit the system resources reserved for signaling and switched connections. Increasing this parameter will allow more simultaneous SVCs. However, more system memory will be required to manage these connections.

**Valid Values:**

An integer in the range 64 - 10500

**Default Value:**

1024

**Example:**

```
ATM INTERFACE> set max-calls 500
```

**max-config-selectors**

Sets the maximum number of selectors under your specific control.

The selector is used to distinguish different users on the same end system. VCC setup requests are routed in the following hierarchical fashion: ATM switches route to the destination ATM switch using the Network Prefix, the destination ATM switch routes to the destination end system using the ESI, and the end system notifies the destination user based on the selector.

Each ESI can have up to 255 associated selectors (0x00 through 0xff). The range of selectors is partitioned into two subranges, a configured selector range and an automatically assigned selector range. The ATM interface parameter max-configured-selector gives the upper bound on the configured selector range.

The ATM components on the device have various ways of choosing a selector. Some components require you to explicitly configure a selector from the configured selector range. Other components, such as Classical IP clients, allow the selector to be automatically assigned at run-time. You do not have to choose the selector because the device does this when it activates. This selector is not guaranteed to be consistent across device restarts. Automatic selector assignment is useful only for those ATM components whose ATM address does not have to be already known by other network devices.

The relative sizes of the selector range can be modified to conform to the types and numbers of ATM users on the device.

**Valid Values:**

0 – 255 (0x00 – 0xFF)

**Default Value:**

200

**Note:** The selector is byte 20 of a 20-byte ATM address.

**Example:**

```
ATM INTERFACE> set max-config-selectors 225
```

## ATM Interface Configuration Commands (Talk 6)

### **max-data-rate** *speed*

Sets the default and upper bound for VCC traffic parameters of most LANE and CIP connections. For example, this is the default PCR for best-effort VCCs initiated by LE Clients. Signaled SCRs and PCRs cannot exceed this limit. The default value should be satisfactory in most situations. An example of a situation where it is beneficial to change this value would be if the majority of the stations use 25-Mbps adapters. In this case, it may be desirable to limit the data rate on VCCs to 25 Mbps so that the lower speed stations are not overwhelmed with frames from the device. The units for this parameter are Mbps.

#### **Valid Values:**

25

100

155

#### **Default Value:**

25

#### **Example:**

```
ATM INTERFACE> set speed 25
```

### **max-frame**

Sets the maximum number of octets permitted in any data frame sent or received on the ATM interface. System memory is allocated based upon this parameter. Increasing the max-frame requires more system memory, but allows processing of larger frames.

All device entities using the ATM interface must use a maximum frame size less than or equal to the max-frame-size of the ATM interface. This includes all LECs and 1483 bridge interfaces.

#### **Valid Values:**

An integer in the range 512 - 31000

#### **Default Value:**

9234

#### **Example:**

```
ATM INTERFACE> set max-frame 1000
```

### **max-mp-parties**

Sets the maximum number of leaves on a point-to-multipoint connection initiated by the device. This parameter affects system memory allocation. Increasing this value is necessary if the device must set up point-to-multipoint connection(s) to a large number of destinations.

#### **Valid Values:**

An integer in the range 1 – 5000

#### **Default Value:**

512

#### **Example:**

```
ATM INTERFACE> set max-mp-parties 300
```

### **network-id**

Sets the network id of the ATM interface. Multiple ATM interfaces should have the same network id if there is ATM connectivity between the interfaces.

## ATM Interface Configuration Commands (Talk 6)

**Valid Values:**

0 - 255

**Default Value:**

0

**trace** Sets the packet tracing parameters on the interface. Packet tracing can be enabled or disabled on a range of VPI/VCI values. Common VPI/VCI values to trace are:

- 0/5 for signalling packets
- 0/16 for ILMI packets.

**Valid Values:**

on, off

**Default Value:**

off

You are prompted for the VPI/VCI range you want to trace.

**Beginning VPI Valid Values:**

0 – 255

**Default Value:**

0

**Ending VPI Valid Values:**

0 - 255

**Default Value:**

255

**Beginning VCI Valid Values:**

0 - 65535

**Default Value:**

0

**Ending VCI Valid Values:**

0 - 65535

**Default Value:**

65535

**Example:**

```
ATM INTERFACE> set trace on
beginning of VPI range [0]? 0
end of VPI range [255]? 0
beginning of VCI range [0]? 5
end of VCI range [65535]? 5
```

**uni-version**

Sets the User Network Interface (UNI) version used by the ATM interface with communicating with the attached ATM switch. If the UNI versions are configured on the ATM switch and ATM device interface to a specific version (not AUTO-DETECT), the UNI versions must match.

If the UNI version is configured as AUTO, the ATM device attempts to learn the UNI version to use from the switch.

In UNI AUTO-DETECT mode, if the switch does not respond to the query for UNI version, the default is UNI 3.0. If the switch responds with a value other than UNI 3.0 or UNI 3.1, the default is UNI 3.1.

## ATM Interface Configuration Commands (Talk 6)

**Valid Values:**

[UNI 3.0|UNI 3.1|AUTO-DETECT|None]

**Default Value:**

UNI 3.0

**Note:** Must be compatible with the ATM switch.

**Example:**

```
ATM INTERFACE> set uni-version 3.0
```

## Enable

Use the **enable** command to enable an ESI in the configuration of your ATM device. The ATM interface attempts to register only enabled ESIs when it activates.

**Syntax:**

**enable** esi *esi-address*

**esi** *esi-address*

Address of End System Identifiers.

**Valid Values:**

Any 12 hexadecimal digits

**Default Value:**

none

**Example: enable esi**

```
ATM INTERFACE> enable esi 00:00:00:00:00:09
```

## Disable

Use the **disable** command to disable an ESI in the configuration. ATM components using disabled ESIs will not become active on the next device restart.

**Syntax: disable** esi *esi-address*

**esi** *esi-address*

Address of End System Identifiers.

**Valid Values:**

Any 12 hexadecimal digits

**Default Value:**

none

**Example: disable esi**

```
ATM INTERFACE> disable esi 00:00:00:00:00:09
```

---

## Accessing the Virtual ATM Interface Configuration Process

From the ATM Config> prompt of a selected real ATM interface, use the **Virtual ATM** command to enter the Virtual ATM configuration command mode.

## ATM Virtual Interface Configuration Commands

This section summarizes the ATM virtual interface configuration commands. Enter the commands at the ATM virtual interface config> prompt.

Table 37. ATM Virtual Interface Configuration Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Add	Adds a virtual ATM interface.
List	Lists the current configured virtual ATM interfaces.
Remove	Removes the virtual ATM interface from the current configuration.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

### Add

Use the **add** command to add an ATM virtual interface. A new ATM virtual interface is added to the corresponding ATM real interface (the configuration menu from which this ATM virtual interface configuration menu is accessed). The net/interface number assigned to the newly created ATM virtual interface is displayed and it is one number greater than the current largest interface number.

**Syntax:**

**add**

**Example:**

```
ATM Virtual Interface config> add
Added ATM Virtual Interface Net as interface 5 on physical ATM interface 0
ATM Virtual Interface config>
```

### List

Use the **list** command to list configured ATM virtual interfaces defined on the current real ATM interface.

**Syntax:**

**list**

**Example:**

```
ATM Virtual Interface config> list

                        ATM Virtual Interface Nets
-----
ATM interface number = 0
ATM Virtual Interface Net interface number = 5

ATM Virtual Interface config>
```

### Remove

Use the **remove** command to delete an ATM virtual interface. The virtual ATM interface on the real ATM interface with the specified interface number will be removed from the SRAM configuration records. If you do not specify an interface

## ATM Virtual Interface Configuration Commands (Talk 6)

number, the last ATM virtual interface on this real ATM interface will be deleted. If you enter a question mark (?), all ATM virtual interfaces on the current real ATM interface will be listed and you can select from that list the interface you want to remove.

### Syntax:

```
remove n
```

### Example: remove 5

```
Virtual ATM 5 deleted successfully.  
ATM Virtual Interface config>
```

---

## Accessing the ATM Monitoring Process

Use the following procedure to access the ATM monitoring commands. This process gives you access to an ATM's *monitoring* process.

1. At the OPCON prompt, enter **talk 5**. (For more detail on this command, refer to “What is the OPCON Process?” on page 27.) For example:

```
* talk 5  
+
```

The GWCON prompt (+) is displayed on the console. If the prompt does not appear when you first enter the console, press **Return** again.

2. Enter **interface** at the + prompt to display a list of configured interfaces.
3. Record the interface numbers.
4. Enter **network** followed by the number of the ATM interface.

```
+ network 1  
ATM+
```

The ATM monitoring prompt (ATM+) is displayed.

---

## ATM Monitoring Commands

This section summarizes the ATM monitoring commands for monitoring ATM interfaces. Enter the commands at the ATM+ prompt.

*Table 38. ATM monitoring command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Interface	Displays the ATM Interface+ prompt from which you can monitor the ATM Interface, as described in “ATM Interface Monitoring Commands (ATM INTERFACE+ Prompt)” on page 293.
Atm-llc	Displays the ATM LLC+ prompt from which you can monitor endpoints, a set of user clients, and a set of ATM channels.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Interface

Displays the ATM Interface+ prompt, described in “ATM Interface Monitoring Commands (ATM INTERFACE+ Prompt)” on page 293.



## ATM Interface Monitoring Commands (Talk 5)

- Circuit statistics
- VCCs
- Reserved Bandwidth

**circuit** Lists the statistics for a particular VCC by specifying the particular VCI-VPI pair. You can also specify the circuit on the command line; for example: list circuit 33.

### Example:

```
ATM INTERFACE+ list circuit
VPI [0]?
VCI [32]?33

Frames transmitted = 2 Bytes transmitted = 216
Frames received = 2 Bytes received = 216
```

**vccs** Lists all the VCCs established by the device. The VCCs may be permanent (PVC) or switched (SVC), point-to-point or point-to-multipoint, and each is identified by a unique VPI/VCI. The trace command uses the VPI/VCI value for a VCC to perform packet tracing over a particular VCC.

### Example:

**P-P** point to point VCC  
**P-MP** point to multipoint VCC  
**ILMI** Interim Local Management Interface VCC  
**SAAL** signalling VCC  
**Bx-y** Internally bound VCC to VPI x, VCI y  
**Sx-y** Internally spliced VCC to VPI x, VCI y

### reserved-bandwidth

Lists the reserved bandwidth on the ATM Interface.

### Example:

```
ATM INTERFACE+ list reserved-bandwidth
Line Rate : 155000 Kbps
Peak Reserved Bandwidth : None
Sustained Reserved Bandwidth : None
```

## Trace

Use the **trace** command activate packet tracing over a specified range of VPI/VCI values. You can view trace data by using ELS as described in “View” on page 209.

### Syntax:

```
trace list
on
off
```

**list** Displays the current packet tracing options on the ATM interface.

### Example:

```
ATM Interface+ trace
on | off | list []? list
Packet trace is ON
Range of VPIs to be traced: 0 - 0
Range of VCIs to be traced: 32 - 39
```



## ATM Interface Monitoring Commands (Talk 5)

**on** Starts packet tracing on all active VCCs within the specified VPI/VCI range.

**Example:**

```
ATM Interface+ trace on
beginning of VPI range [0]?
end of VPI range [0]?
beginning of VCI range [32]?
end of VCI range [65535]? 39
```

**off** Stops packet tracing on all VCCs.

**Example:**

```
ATM Interface+ trace off
ATM Interface+ trace list
Packet trace is OFF
```

## Wrap

Use the **wrap** command to perform a loopback data test on the ATM interface of the adapter. Wrap can be issued on a per VC basis by specifying VPI-VCI pairs. Data is looped back internally.

You can selectively start a wrap, stop a wrap, or display the current wrap settings.

If you stop or display a wrap, the following statistics will be displayed:

- Wrap transmits
- Wrap receives
- Wrap transmit errors
- Wrap receive errors
- Wrap receive timeouts

For display, the current wrap statistics are displayed.

For stop, the final wrap statistics are displayed.

**Syntax:**

```
wrap                                display
                                       start
                                       stop
```

**display**

Displays the current wrap settings.

**start** Starts the wrap procedure and specifies the VPI-VCI length of pattern and the pattern itself.

**Example:**

```
ATM Interface+ wrap start
VPI [0]?
VCI [32]?
wrap pattern length [32]?
Enter 32-byte wrap pattern: [ABCDEFGH IJKLMN OQRSTU VWXYZ123456]?
```

**stop** Stops the wrap procedure and displays final wrap statistics.

---

## ATM-LLC Monitoring Commands

This section explains the commands for monitoring ATM LLC multiplexing.

## ATM-LLC Monitoring Commands (Talk 5)

Enter the commands at the ATM-LLC+ prompt.

*Table 40. ATM LLC Configuration Command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
List	Lists various options
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## List

Use the **list** command to list various categories of ATM LLC monitoring data.

### Syntax:

```
list                endpoints  
                    channels
```

### endpoints

Lists the ATM addresses in use by protocols using the ATM-LLC multiplexing function on the device. The endpoint is displayed as the End System Identifier and the Selector.

#### Example: list endpoints

```
ATM-LLC+ list endpoints
```

### channels

Lists the channels in use by protocols using the ATM-LLC multiplexing function on the device.

#### Example: list channels

```
ATM-LLC+ list channels
```

---

## ATM Virtual Interface Monitoring Commands

Monitoring the ATM virtual interface is done using the ATM LLC monitoring commands. See “ATM-LLC Monitoring Commands” on page 295 for additional information.

---

## Chapter 21. Using LAN Emulation Clients

This chapter describes LAN Emulation Clients (LECs). It includes the following sections:

- “LAN Emulation Client Overview”

---

### LAN Emulation Client Overview

On the router, LECs serve the purpose of “ports” or “interfaces” on traditional routers and bridges. The router bridges and routes traffic between ports by receiving and transmitting traffic through its LECs.

LEC has two prompt levels:

1. `LE Client Config>` lets you enter commands that control the environment of all your LECs. The commands for this prompt level are described in “Configuring LAN Emulation Clients” on page 299
2. One of the commands, **config**, gets you to another prompt level, `LEC Config>`, at which you can enter commands to configure a specific LEC.

An explanation of commands for LAN Emulation Clients follows.



---

## Chapter 22. Configuring and Monitoring LAN Emulation Clients

This chapter describes how to configure LAN Emulation Clients (LECs). It includes the following sections:

- “Configuring LAN Emulation Clients”
- “Configuring an ATM Forum-Compliant LE Client” on page 300
- “Accessing the LEC Monitoring Environment” on page 318
- “LEC Monitoring Commands” on page 319

---

### Configuring LAN Emulation Clients

This section summarizes and explains the commands for configuring and using the set of LE Clients on a particular ATM interface.

To get to the LE Client Config> prompt, enter **le-c** at the ATM Config> prompt as described in “ATM Configuration Commands” on page 283.

Enter the commands at the LE Client Config> prompt under the ATM Config> prompt, as described in “ATM Configuration Commands” on page 283.

*Table 41. LAN EMULATION Client Configuration Commands Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds a LEC for the following types of ATM Forum-compliant Emulated LANs architectures: <ul style="list-style-type: none"><li>• Ethernet</li><li>• Token Ring</li></ul>
Config	Gets you to the LEC Config> prompt, from which you can configure a specific LAN Emulation Client.
List	Lists the LEC.
Remove	Removes a LEC.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Add

Use the **add** command to add a LEC for a Token-Ring or Ethernet emulated LAN.

#### Syntax:

```
add                Ethernet
                   Token Ring
```

#### token-ring

Token-ring emulated LAN

#### Example: add token ring

```
LE Client Config> add token-ring
Added Emulated LAN as interface 3
```



## Configuring Forum LE Clients

1. Use the **config** command at the LE Client Config> prompt to access the appropriate LEC interface number, or use the **network** configuration command with the appropriate LEC interface number.
2. Enter the appropriate commands at either the Ethernet Forum Compliant LEC Config> prompt or the Token Ring Forum Compliant LEC Config> prompt. Commands in the following table apply to both Token-Ring and Ethernet LECs except where indicated.

This section explains the commands for configuring an ATM Forum-compliant LAN Emulation Client.

Table 42. LAN Emulation Client Configuration Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
ARP-Configuration	Allows you to configure the LE-ARP configuration for the ATM Forum-compliant client
Frame	Sets the NetWare IPX encapsulation type.
IP-Encapsulation	Sets the IP encapsulation as Ethernet (type X'0800') or IEEE (802.3 with SNAP). Applies only to Ethernet LECs.
List	Lists the LAN Emulation Client configuration.
LLC	Accesses the LLC Config> configuration prompt for Token Ring LECs.
QoS-Configuration	Gets you to the e <sub>lan-x</sub> LEC QoS Config> prompt from which you can configure Quality of Service as described in LE Client QoS Configuration Commands in <i>Using and Configuring Features</i> .
RIF-Timer	Sets the maximum amount of time that information in the RIF is maintained before it is refreshed. Applies only to Token-Ring LECs.
Set	Sets the LAN Emulation Client parameters.
Source-routing	Used to enable or disable source-route bridging. Applies only to Token-Ring LECs.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## ARP Configuration

Use the **arp-configuration** command to configure the static LE-ARP entries for the ATM forum-compliant LAN Emulation Client.

### Syntax:

**arp-configuration**

### Example:

```
Token Ring Forum Compliant LEC Config> arp-configuration  
ATM LAN Emulation Clients ARP configuration
```

Table 43. ATM LAN Emulation Client ARP Configuration Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds an LE-ARP cache entry using a MAC or route descriptor ARP.

## Configuring Forum LE Clients

Table 43. ATM LAN Emulation Client ARP Configuration Commands Summary (continued)

Command	Function
Config	Sets cache entry QoS parameter values.
List	Lists configured ARP cache entries.
Remove	Removes an ARP cache entry.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Add

Use the **add** command to add an ARP cache entry using the MAC address or a route descriptor.

MAC addresses, and route descriptors are entered as strings of hexadecimal characters with or without optional separator characters between bytes. Valid separator characters are dashes (-), periods (.), or colons (:).

#### Syntax:

```
add                mac
                   route-descriptor
```

#### Example 1:

```
ARP config for LEC>add mac
MAC address of LE ARP Entry []? 123456789098
ATM address in 00.00.00.00.00.00:... form []? 390f000000000000000000000000123456789098
Destination Type - REMOTE or LOCAL [Remote]?
```

#### Example 2:

```
ARP config for LEC>add route 12.34
ATM address in 00.00.00.00.00.00:... form []? 390f0000000000000000000000001234567890988888
ARP config for LEC>
```

### Config

Use the **Config** command to configure the permanent ARP cache entry QoS parameters for the ATM forum-specific LAN Emulation Client.

#### Syntax:

```
config                arp-entry-number
```

#### Example:

```
ARP config for LEC> config
ARP entry number [1]
Configure LEC ARP entry
```

Table 44. ATM LAN Emulation Client ARP Config Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Set	Sets QoS parameter values.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

#### Set:



## Configuring Forum LE Clients

Use the **Set** command to configure the permanent ARP cache entry QoS parameters for the ATM forum-specific LAN Emulation Client.

### Syntax:

```
set                max-reserved-bandwidth  
                   traffic-type  
                   peak-cell-rate  
                   sustained-cell-rate  
                   qos-class  
                   max-burst-size
```

### Example:

```
ARP entry 'identifier' config> set ?  
MAX-RESERVED-BANDWIDTH  
TRAFFIC-TYPE  
PEAK-CELL-RATE  
SUSTAINED-CELL-RATE  
QOS-CLASS  
MAX-BURST-SIZE
```

See Configuring and Monitoring Quality of Service (QoS) in *Using and Configuring Features* for detailed information about the QoS parameters.

### List

Use the **list** command to display information about ARP configuration.

### Remove

Use the **remove** command to remove an configured MAC address or Route Descriptor LE-ARP entry.

Select the ARP entry number to be removed from the list provided.

### Syntax:

```
remove            arp-entry-number
```

## Frame

Use the **frame** command to set the NetWare IPX encapsulation type. The command options differ depending on the type of LEC (Token-Ring or Ethernet). For Token-Ring LECs, enter one of the following:

Option	Description	Syntax
Token-Ring using MSB	Uses the standard 802.2 IPX header with the noncanonical Token-Ring address bit ordering (MSB).	frame token-ring msb
Token-Ring using LSB	Uses the 802.2 IPX header with the canonical address bit ordering (LSB).	frame token-ring lsb

## Configuring Forum LE Clients

Option	Description	Syntax
Token-Ring with 802.2 SNAP using MSB	Uses the 802.2 format with a SNAP header and noncanonical address bit ordering. This encapsulation is used primarily in bridging environments.	frame token-ring_snap msb
Token-Ring with 802.2 SNAP using LSB	Uses the 802.2 format with a SNAP header and canonical address bit ordering.	frame token-ring_snap lsb
Ethernet 2.0	Uses Ethernet version 2.0 protocol 81-37.	frame ethernet_II
Ethernet 802.2	Uses Ethernet 802.3 with 802.2 SA E0.	frame ethernet_8022
Ethernet 802.3	Uses Ethernet 802.3 without any 802.2 header.	frame ethernet_802.3
Ethernet SNAP	Uses 802.3, 802.2 with SNAP PID 00-00-00-81-37.	frame ethernet_SNAP

### Syntax:

**frame** *ipx-encapsulation type*

**Note:** The frame command cannot be used in the network configuration process to set the IPX encapsulation unless the interface has been configured with IPX.

The IPX encapsulation can also be set in the IPX configuration environment. Refer to the Protocol Configuration and Monitoring Reference chapter on Configuring IPX for details.

### Example:

```
frame token_ring msb
```

## IP-Encapsulation (for Ethernet ATM Forum-Compliant LEC only)

Use the **IP-encapsulation** command to select Ethernet (Ethernet type X'0800') or IEEE 802.3 (Ethernet 802.3 with SNAP). Specify either type **Ethernet** or **IEEE-802.3**.

### Syntax:

**IP-encapsulation** Ethernet  
IEEE-802.3

## List

Use the **list** command to list the LE client configuration.

### Syntax:

**list**

## LLC

Logical Link Control can be thought of as a “sub-protocol”. It is not accessed directly from either the Talk 6 (configuration) or the Talk 5 (console) environment. Instead, it is accessed from the Token Ring LEC configuration menu by entering an **LLC** command.

Use the **llc** command to access the LLC Config> prompt. See “LLC Configuration Commands” on page 316 for more information.

**Syntax:**

llc

## QoS

Use the **qos-configuration** command to get you to the LEC QoS Config> prompt from which you can configure Quality of Service as described in LE Client QoS Configuration Commands in *Using and Configuring Features*.

**Syntax:**

qos-configuration

## RIF-Timer (for Token-Ring Forum-compliant LEC only)

Use the **RIF-Timer** command to set the maximum amount of time that information in the RIF is maintained before it is refreshed. Range is 0 to 4096. The default is 120 seconds.

**Syntax:**

rif-timer *value*

**Example:**

`rif-timer 100`

## Set

Use the **set** command to set LE Client parameters.

**Syntax:**

set *arp-aging-time*  
*arp-cache-size*  
*arp-queue-depth*  
*arp-response-time*  
*auto-config*  
*best-effort-peakrate*  
*bus-connect-retries*  
*conn-completion-time*

## Configuring Forum LE Clients

control-timeout  
data-direct-timeout  
data-direct-vcc-mode  
elan-name  
esi-address  
flush-timeout  
forward-delay  
forward-disconnect-timeout  
frame-size  
initial-control-timeout  
lecs-atm-address  
les-atm-address  
mac-address  
multicast-send-avg  
multicast-send-peak  
multicast-send-type  
multiplier-control-timeout  
path-switch-delay  
reconfig-delay-min  
reconfig-delay-max  
retry-count  
selector  
trace  
unknown-count  
unknown-time  
vcc-timeout

### **arp-aging-time**

Sets ARP aging time. This is the maximum time that a LEC will maintain an entry in its LE\_ARP cache in the absence of a verification of that relationship. A larger aging time may result in a faster session setup time, but may also use more memory and reacts slower to changes in network configuration.

#### **Valid Values:**

An integer number of seconds in the range of 10 to 300.

#### **Default Value:**

300

#### **Example:**

```
LEC Config> set arp-aging-time 200
```

### **arp-cache-size**

Sets the number of entries in the ARP cache. The size of the ARP cache

## Configuring Forum LE Clients

limits the number of simultaneous data direct VCCs. Larger ARP caches require more memory, but permit the client to simultaneously converse with a larger number of destinations.

### Valid Values:

An integer number in the range of 10 to 65535.

### Default Value:

5000

### Example:

```
LEC Config> set arp-cache-size 10
```

### arp-queue-depth

Sets the maximum number of queued frames per ARP cache entry. The LEC enqueues frames when switching the data path from the Multicast Send VCC to a Data Direct VCC. Frames passed to the LEC for transmission will be discarded if the queue is full. A larger queue requires more memory, but results in fewer discarded frames during the data path switch.

### Valid Values:

An integer number in the range of 0 to 10.

### Default Value:

5

### Example:

```
LEC Config> set arp-queue-depth 10
```

### arp-response-time

Sets expected ARP response time. This value controls how frequently an unanswered LE ARP request is retried. Larger values result in fewer LE ARPs, which causes less traffic and possibly increase the amount of time before a Data Direct VCC is established.

### Valid Values:

An integer number of seconds in the range of 1 to 30.

### Default Value:

1 second

### Example:

```
LEC Config> set arp-response-time 20
```

### auto-config

Specifies whether this LEC uses LECS auto-config mode. Specify YES or NO. The LEC may contact the LECS to obtain the address of its LES and various other configuration parameters.

### Valid Values:

If YES, then you do not have to configure the ATM address of the LES.

If NO, then you *must* configure the ATM address of the LES using the **set les-atm-address** command as described on page 311.

### Default Value:

NO

### Example:

```
LEC Config> set auto-config yes
```

## Configuring Forum LE Clients

### **best-effort-peakrate**

Sets the Best Effort Peak Rate. Used when establishing best effort multicast send connections.

The maximum peak rate depends on the maximum data rate of the ATM device.

Specify an integer from 1 to the maximum peak rate in Kbps (the definition is the maximum data rate) as follows:

- If ATM maximum data rate is 25 Mbps, the maximum peak rate is 25,000 Kbps.
- If ATM maximum data rate is 155 Mbps, the maximum peak rate is 155,000 Kbps.

#### **Valid Values:**

An integer number in the range of 1 - device maximum data rate.

#### **Default Value:**

155000

#### **Example:**

```
LEC Config> set best-effort-peakrate 24000
```

### **bus-connect-retries**

This parameter sets the maximum number of times that the LEC will attempt to reconnect to the BUS before returning to the initial state.

#### **Valid Values:**

0 - 2

#### **Default Value:**

1

### **connection-completion-time**

Sets the connection completion time. This is the time interval in which data or a READY\_IND message is expected from a calling party.

When a Data Direct VCC is established to the client, the LEC expects data or a READY\_IND message within this time period. The LEC will not transmit frames over a Data Direct VCC established to it until receiving data or a READY\_IND. This parameter value controls the amount of time which passes before the LEC issues a READY QUERY (in hopes of receiving a READY\_IND). Smaller values lead to faster response times, but also to unnecessary transmissions.

#### **Valid Values:**

An integer number of seconds in the range of 1 to 10.

#### **Default Value:**

4

#### **Example:**

```
LEC Config> set connection-completion-time 5
```

### **control-timeout**

This parameter sets the maximum cumulative control timeout of a request.

A current timeout value is initialized to the value of *initial-control-timeout*. If a response to a request is not received within the current timeout value, the current timeout is multiplied by the value of the *multiplier-control-*

## Configuring Forum LE Clients

**timeout** and the request is reissued. Each time the current timeout value expires, this process is repeated until the current timeout value exceeds the value of **control-timeout**.

**Valid Values:**

An integer number of seconds in the range of 10 to 300.

**Default Value:**

30

**Example:**

```
LEC Config> set control-timeout 100
```

**data-direct-timeout**

Specifies the timeout value for the data direct VCC. This parameter limits the time the Data Direct VCCs are left up without the LEC having a connection to the LES/BUS. If the LEC rejoins a LES/BUS before the timer expires, the time is stopped.

**Valid Values:**

10 - 300 seconds

**Default Value:**

30

**data-direct-vcc-mode**

Specifies whether persistent Data Direct VCC mode is enabled or disabled. When the Data Direct VCC mode is enabled, if the LEC loses its connection to the LES/BUS, the Data Direct VCCs are not dropped and the reconnect timeout timer is started. The LEC will continue to try to reconnect to the LES/BUS. If the LEC cannot reconnect to the LES/BUS before the **data-direct-timeout** expires, all Data Direct VCCs will be disconnected.

**Valid Values:**

yes or no

**Default Value:**

no

**elan-name**

Specifies name of the ELAN that the LEC wishes to join. This is the ELAN name sent to the LECS in the configure request (if the LEC autoconfigures) or to the LES in the join request. The LECS or LES may return a different ELAN name in the response.

**Valid Values:**

Any character string length of 0 - 32 bytes.

**Default Value:**

Blank

**Note:** A blank name (0 length string) is valid.

**Example:**

```
LEC Config> set elan-name FUZZY
```

**esi-address**

Sets the ESI portion of the LEC's ATM address.

Specify the ESI portion (octets 13 through 19) of the LEC's ATM address. The ESI and selector combination of the LEC must be unique among all LAN emulation components on the device.

## Configuring Forum LE Clients

### Valid Values:

Any 12 hexadecimal digits.

### Default Value:

Burned-in ESI

### Example:

```
set esi
Select ESI
(1) Use burned in ESI
(2) 11.22.33.44.55.66

Enter selection [1]?
```

### flush-timeout

Sets the flush timeout. This is the time limit to wait to receive the LE\_FLUSH\_RESPONSE after the LE\_FLUSH\_REQUEST has been sent before taking recovery action. During recovery, any queued frames are dropped and a new flush request is sent.

When switching from the multicast send to a data direct data path, the client sends a flush request over the multicast send VCC. Until a flush response is received, or until the path switch delay expires, frames are queued for the destination.

### Valid Values:

An integer number of seconds in the range of 1 to 4.

### Default Value:

4

### Example:

```
LEC Config> set flush-timeout 3
```

### forward-delay

Sets the forward delay. Entries in the LE ARP cache must be periodically re-verified. The forward delay time is the maximum amount of time a remote entry may remain in the cache during a network topology change. Larger aging times may result in stale (invalid) entries, but also cause less re-verification traffic.

### Valid Values:

An integer number of seconds in the range of 4 to 30.

### Default Value:

15

### Example:

```
LEC Config> set forward-delay 10
```

### forward-disconnect-timeout

This parameter sets the amount of time that a LEC will wait after losing its last Multicast Forward VCC from the BUS before returning to the initial state. This delay permits the BUS to attempt to reconnect to the client without returning to the initial state.

### Valid Values:

10 - 300 seconds

### Default Value:

60

### frame-size

Sets the frame size.



## Configuring Forum LE Clients

The value specified for frame-size must be equal to or less than the value specified for ATM max-frame using the ATM INTERFACE> **set max-frame** command as described on page 287.

### Valid Values:

1516  
4544  
9234  
18190

### Default Value:

If the ELAN type is token ring, the default is 4544. If the ELAN type is Ethernet, the default is 1516.

### Example:

```
LEC Config> set frame-size 4544
```

### initial-control-timeout

This parameter sets the value of the initial control timeout used in the control timeout algorithm described in 308.

### Valid Values:

1 - 10

### Default Value:

5

### Example:

```
LEC Config> set initial-control-timeout 10
```

### lecs-atm-address

Specifies the ATM address of the LECS.

If the client is set to auto configure, it attempts to connect to a LECS. If it is unable to connect to a LECS, then it may try another LECS ATM address. The LECS ATM addresses that are tried, in order, are:

1. This configured LECS address
2. Any LECS address obtained through ILMI
3. The well-known LECS address defined by the ATM Forum.

No default is provided.

**Note:** This command should be entered on one command line. It is shown here on two lines because of spacing.

### Example:

```
LEC Config> set lecs-atm-address  
39.84.0F.00.00.00.00.00.00.00.01.10.00.5A.00.DE.AD.01
```

### les-atm-address

Sets the LES ATM address. This command may be optional or required depending upon the setting of lecs-auto-config as described in the **set auto-config** command on page 307.

- If auto-config is YES, the les-atm-address is not configurable.
- If auto-config is NO, then the les-atm-address is required.

Specify the ATM address of the LES. No default is provided.

## Configuring Forum LE Clients

**Note:** This command should be entered on one command line. It is shown here on two lines because of spacing.

### Example:

```
LEC Config> set les-atm-address  
39.84.0F.00.00.00.00.00.00.00.01.10.00.5A.00.DE.AD.02
```

### mac-address

Sets the MAC address for this LE client. You *may* specify that the client use the burned-in MAC address of the ATM interface, or you may specify a different MAC address. If you have two clients that are bridged together, they should use different MAC addresses.

This MAC address is registered with the LES when the client joins the ELAN.

### Valid Values:

Any valid MAC address.

### Default Value:

none

### Example:

```
LEC Config> set mac-address  
Use adapter address for MAC? [No]  
MAC address []: 10.00.5a.00.00.01
```

### multicast-send-avg

Sets the multicast send VCC average rate in Kbps. Used by the LEC for reserving bandwidth on the VCC to the BUS. It specifies the forward and backward sustained cell rate used when setting up a reserved bandwidth multicast send VCC.

This parameter is only applicable when the multicast-send-type is reserved bandwidth. If multicast-send-avg equals multicast-send-peak, then a constant bit rate (CBR) multicast send is signalled. Otherwise, a variable bit rate (VBR) multicast send is signalled. Multicast-send-avg must be less than or equal to multicast-send peak.

A reserved bandwidth multicast send VCC may improve data transfer rates in congested networks, but reserving bandwidth and not using it wastes network resources.

When the multicast-send-type is reserved, then multicast-send-avg and multicast-send-peak must be specified.

### Example:

```
LEC Config> set multicast-send-avg 4000
```

### multicast-send-peak

Sets the multicast send peak rate in Kbps. Used by LEC for reserving bandwidth on the VCC to the BUS. It specifies the forward and backward peak cell rate used when establishing a reserved bandwidth multicast send VCC.

This parameter is only applicable when the multicast-send-type is reserved bandwidth. If multicast-send-avg equals multicast-send-peak, then a constant bit rate (CBR) multicast send is signalled. Otherwise, a variable bit rate (VBR) multicast send is signalled. Multicast-send-avg must be less than or equal to multicast-send peak.

## Configuring Forum LE Clients

A reserved bandwidth multicast send VCC may improve data transfer rates in congested networks, but reserving bandwidth and not using it wastes network resources.

When the multicast-send-type is reserved, then multicast-send-avg and multicast-send-peak must be specified.

### Example:

```
LEC Config> set multicast-send-peak 155
```

### multicast-send-type

Sets the multicast send type. Specifies the method used by the LEC when establishing the multicast send VCC.

If multicast-send-avg equals multicast-send-peak, then a constant bit rate (CBR) multicast send is signalled. Otherwise, a variable bit rate (VBR) multicast send is signalled. Multicast-send-avg must at least equal multicast-send peak.

A reserved bandwidth multicast send VCC may improve data transfer rates in congested networks, but reserving bandwidth and not using it wastes network resources.

When the multicast-send-type is reserved, then multicast-send-no and multicast-send-peak must be specified.

### Valid Values:

Best Effort or Reserved

### Default Value:

Best Effort

### Example:

```
LEC Config> set multicast-send-type best-effort
```

### multiplier-control-timeout

This parameter sets the value of the control timeout multiplier used in the control timeout algorithm described on page 308.

### Valid Values:

2 - 5

### Default Value:

2

### Example:

```
LEC Config> set multiplier-control-timeout 5
```

### path-switch-delay

Sets the path switch delay.

The LEC must ensure that all frames sent through the BUS to a destination have arrived at the destination before it can start using a Data Direct VCC. This is accomplished using the flush protocol, or by waiting path-switch-delay seconds after sending the last packet to the BUS. Smaller values improve performance, but may result in out-of-order packets in a heavily congested network.

### Valid Values:

An integer number of seconds in the range of 1 to 8.

### Default Value:

6

## Configuring Forum LE Clients

### Example:

```
LEC Config> set path-switch-delay 5
```

### reconfig-delay-min

This parameter sets the minimum delay time when LEC returns to the initial state. This value must be  $\leq$  *reconfig-delay-max*.

### Valid Values:

1 - the value of *reconfig-delay-max*

### Default Value:

1

### Example:

```
LEC Config> set reconfig-delay-min 5
```

### reconfig-delay-max

This parameter sets the maximum delay time when LEC returns to the initial state. This value must be  $\geq$  *reconfig-delay-min*.

### Valid Values:

1 - 10

### Default Value:

5

### Example:

```
LEC Config> set reconfig-delay-max 9
```

### retry-count

Sets the retry count. This is maximum number of times that the LEC retries an LE\_ARP\_REQUEST for a specific frame's LAN destination. If no ARP response is received after the specified number of retries, then the entry is purged from the LE ARP cache.

### Valid Values:

0, 1, or 2

### Default Value:

1

### Example:

```
LEC Config> set retry-count 2
```

### selector

Specifies the selector portion of the client's ATM address. The combination of ESI and selector must be unique among all LANE components on the device. By default, a unique selector is selected for the configured ESI.

### Valid Values:

Any octet, in hexadecimal, that is not in use by another LANE component with the same ESI.

### Example:

```
LEC Config> set selector 01
```

**trace** Enables tracing for the LEC. To perform packet tracing, three steps are required:

1. Enable packet tracing system (under ELS)
2. Enable tracing on the LEC subsystem (under ELS)
3. Enable packet tracing on the desired LECs (using this command).

**Valid Values:**

Yes or No

**Default Value:**

No

**Example:**

```
Token Ring LEC config>set trace
Trace packets on the LEC? [No]?yes
```

**unknown-count**

Sets the unknown frame count. This is the maximum number of frames for a specific unicast MAC address or route descriptor that may be sent to the BUS within the time specified by the unknown-time parameter. Larger values decrease the number of discarded frames while increasing the load on the BUS.

**Valid Values:**

An integer number of frames in the range of 1 to 255.

**Default Value:**

10

**unknown-time**

Sets the unknown frame time. This is the time interval during which the maximum number of frames for a specific unicast MAC address or route descriptor (specified by the unknown-count parameter) may be sent to the BUS. Larger values increase the number of discarded frames while decreasing the load on the BUS.

**Valid Values:**

An integer number of seconds in the range of 1 to 60.

**Default Value:**

1

**Example:**

```
LEC Config> set unknown-time 5
```

**vcc-timeout**

Sets the VCC timeout. Data direct VCCs over which no traffic has been sent for this period of time should be released.

**Valid Values:** 0 to 31536000 seconds (1 year).

**Default Value:** 1200

**Note:** This parameter is meaningful only for SVC connections.

**Example:**

```
LEC Config> set vcc-timeout 1000
```

## Source-Routing (for Token-Ring Forum-Compliant LEC only)

Use the **source-routing** command to enable or disable end station source-routing. Source routing is the process by which end stations determine the source route to use to cross source routing bridges. Source routing allows the IP, IPX, and AppleTalk Phase 2 protocols to reach nodes on the other side of the source route bridge.

## Configuring Forum LE Clients

This function of the device is not changed whether source routing is enabled or disabled. The default setting is enabled.

Some stations cannot properly receive frames with Source Routing RIF on them. This is especially common among NetWare drivers. Disabling source routing in this situation will allow you to communicate with these stations.

Source routing should be enabled only if there are source-routing bridges on this ring through which you want to bridge IP, IPX, and AppleTalk Phase 2 packets. Source routing must also be enabled so that LLC test response messages can be returned.

### Syntax:

```
source-routing          enable
                           disable
```

### Example:

```
source-routing disable
```

---

## LLC Configuration Commands

This section summarizes and then explains all of the LLC commands. These commands, shown in Table 45, let you monitor the LLC while passing packets over an SNA network.

*Table 45. LLC Command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
List	Displays configuration information.
Set	Allows the user to dynamically configure LLC parameters that are valid for the life of the session.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

## List

Use the **list** command to display configuration information.

### Syntax:

```
list
```

## Set

Use the **set** command to dynamically configure the LLC parameters on a current LLC session. Any changes that you make to the parameters are effective for the life of session.

**Attention:** Changing LLC parameters from the default can affect how the LLC protocol works.

### Syntax:

```
set                n2-max_retry count
                   n3-frames-rcvd-before-ack count
                   nw-acks-to-inc-ww count
                   rw-receive-window seconds
                   t1-reply-timer seconds
                   t2-receive-ack-timer seconds
                   ti-inactivity-timer seconds
                   tw-transmit-window seconds
```

#### **n2-max\_retry**

The maximum number of retries by LLC protocol. For example, N2 is the maximum number of times the LLC transmits an RR without receiving an acknowledgment when the inactivity timer expires. Default is 8. Minimum is 1. Maximum is 127.

#### **n3-frames-rcvd-before-ack**

This value is used with the T2 timer to reduce acknowledgment traffic for received I-frames. Set this counter to a specified value. Each time an I-frame is received, this value is decremented. When this counter reaches 0 or the T2 timer expires, an acknowledgment is sent. Default is 1. Minimum is 1. Maximum is 255.

#### **nw-acks-to-inc-ww**

This field is set to a default value of 1.

#### **rw-receive-window**

Sets the number of I-frames that can be received before an RR is transmitted. Default is 2. Minimum is 1. Maximum is 127.

#### **t1-reply-timer**

This timer expires when the LLC fails to receive a required acknowledgment or response from the other LLC station. When this timer expires, an RR is sent with the poll bit set and T1 is started again. If the LLC receives no response after the configured maximum number of retries (N2), the link underneath is declared inoperative. Default is 1. Minimum is 1. Maximum is 256.

#### **t2-receive-ack-timer**

This timer is used to delay sending of an acknowledgment for a received I-format frame. This timer is started when an I-frame is received and reset when an acknowledgment is sent. If this timer expires, LLC2 sends an acknowledgment as soon as possible. Set this value so that it is less than that of T1. This insures that the remote LLC2 peer receives the delayed acknowledgment before the T1 timer expires. Default is 1 (100 ms). Minimum is 1. Maximum is 2560.

## Configuring LLC

**Note:** If this timer is set to 1 (the default) it will not run (for example, **n3-frames-rcvd-before-ack=1**).

### **ti-inactivity-timer**

This timer expires when the LLC does not receive a frame for a specified time period. When this timer expires the LLC transmits an RR until the other LLC responds or the N2 timer expires. Default is 30 seconds. Minimum is 1 second. Maximum is 256 seconds.

### **tw-transmit-window**

Sets the maximum number of I-frames that can be sent before receiving an RR. Assuming that the other end of the LLC session can actually receive this many consecutive I-frames, and the device has enough heap memory to keep copies of these frames until an acknowledgment is received, increasing this value may increase the throughput. Default is 2. Minimum is 1. Maximum is 127.

---

## Accessing the LEC Monitoring Environment

Use the following procedure to access the LEC monitoring commands. This process gives you access to the LEC *monitoring* process.

1. At the OPCON prompt, enter **talk 5**. (For more detail on this command, refer to “What is the OPCON Process?” on page 27.) For example:

```
* talk 5
+
```

After you enter the **talk 5** command, the GWCON prompt (+) displays on the console. If the prompt does not appear when you first enter configuration, press **Return** again.

2. At the + prompt, enter the **network ?** command to display the network interface numbers for which the device is currently configured, and enter the *interface number* for the LEC you wish to monitor. For example:

```
+ network ?

1 : ATM Ethernet LAN Emulation: ETH
2 : IP Protocol Network
3 : Bridge Application
5 : CHARM ATM Adapter
Network number [0]? 1
LEC+
```

The LEC monitoring prompt (LEC+), is displayed.

If you know the interface number of the LEC you wish to monitor, enter the **network** command followed by the *interface number* of the LEC.

```
+ network 1
LEC+
```



## LEC Monitoring Commands

This section summarizes and then explains the LEC monitoring commands. You can access LEC monitoring commands at the LEC+ prompt. Table 46 shows the commands.

Table 46. LE Client Monitoring Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
List	Lists: <ul style="list-style-type: none"> <li>• LEC Address Resolution Table (ARP)</li> <li>• LEC configuration</li> <li>• Data Direct VCC information</li> <li>• Group addresses</li> <li>• RIF information</li> <li>• LEC statistics</li> <li>• VCC table.</li> </ul>
LLC MIB	Gets you to the LLC> monitoring prompt for Token Ring LECs. Displays LEC MIB objects including: <ul style="list-style-type: none"> <li>• LEC MIB Configuration Table</li> <li>• LEC MAC ARP Table</li> <li>• LEC Route Descriptor Table</li> <li>• LEC MIB Server VCC Tables</li> <li>• LEC MIB Statistics Table</li> <li>• LEC MIB Status Table</li> </ul>
QoS	Gets you to the LEC x QoS+ prompt from which you can monitor Quality of Service as described in Quality of Service Monitoring Commands in <i>Using and Configuring Features</i> .
Trace	Sets packet tracing on or off or sets a trace address or trace mask.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### List

Use the **list** command to list the LEC Address Resolution Table (ART), list the LEC configuration, list Data Direct VCC information, or list LEC statistics.

#### Syntax:

```
list
    _arp-table
    _configuration
    _data-direct-vccs
    _group
    _rif
    _statistics
    _vcc-table
```

**arp** Lists the LEC Address Resolution Table (entries in the ARP cache).

#### Example:

## Monitoring LE Clients

LEC+ list arp

LEC Address Resolution (LE ARP Cache) Table

```
Max Table Size      = 10
Free Table Entries  = 10
Current Mac Entries = 0
Current RD Entries  = 0
Arp Aging Time     = 300
Verify Sweep Interval = 60
```

MAC Address	Remote	Conn Handle	Xmit Queue Depth	BUS Frame Count	Arp Retry Count	Aging Timer	Destination	ATM Address
40.00.00.00.00.09	False	652	0	0	0	60	39.99.99.99.99.99.	99.00.00.99.99.30.02.40.00.00.00.00.09.81

**Note:** The Sweep Interval is always one-fifth of the ARP Aging Timer value.

### Max Table Size

The total number of entries available

### Free Table Entries

The number of free entries

### Current MAC Entries

### Current RD Entries

Route Descriptor ATM entries

### ARP Aging Time

Time for an entry to be aged out

### Verify Sweep Interval

### MAC Address

### Remote

### Connection Handle

### Queue Depth

### Xmit Frame Count

### BUS Retry Count

### ARP Aging Timer

### Destination ATM Address

## configuration

Lists the LEC configuration.

For Ethernet:

### Example:

```
IBM LEC+ list config
          ATM IBM LEC Configuration
          Physical ATM interface number = 0
```

## Monitoring LE Clients

```
LEC interface number           = 7
Primary ATM address
  ESI address                  = Use burned in addr
  Selector byte                 = 0x3
Emulated LAN type              = Ethernet IBM
Maximum frame size             = 1523
LE Client MAC address          = Use burned in addr
LE Server ATM address          = 00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00
Forward Peak Rate              = 25000
Backward Peak Rate            = 25000
  MAC cache size               = 32
MAC cache aging period        = 60
Route Descriptor cache size    = 32
Route Descriptor aging period  = 60
LES Registration interval      = 60
LES Registration retry count   = 3
LES keep alive count           = 10
Packet trace                   = No
IP Encapsulation               = ETHER
```

For Token Ring IBM:

### Example:

IBM LEC+list config

```
ATM IBM LEC Configuration
Physical ATM interface number = 0
LEC interface number         = 10
Primary ATM address
  ESI address                 = Use burned in addr
  Selector byte               = 0x6
Emulated LAN type            = Token Ring IBM
Maximum frame size           = 4551
LE Client MAC address        = Use burned in addr
LE Server ATM address        = 39.84.07.00.00.00.00.00.00.00.00.00.01.10.00.5A.DD.DA.02
Forward Peak Rate            = 25000
Backward Peak Rate           = 25000
  MAC cache size              = 32
MAC cache aging period      = 60
Route Descriptor cache size  = 32
Route Descriptor aging period = 60
LES Registration interval    = 60
LES Registration retry count = 3
LES keep alive count         = 10
Packet trace                 = No
RIF Aging Timer              = 120
Source Routing               = Enabled
```

For Token Ring Forum Compliant:

### Example:

LEC+ list config

```
Physical ATM interface number = 0
LEC interface number         = 9
LEC ATM address              = 39.99.99.99.99.99.00.00.99.99.31.01.09.FC.DD.D0.32.70.0A
LEC MAC address              = 40.00.82.10.17.09
lecConfigMode                 = Manual
lecConfigLanType              = 802.5 - Token Ring
lecConfigMaxDataFrameSize     = 4544
lecConfigLanName              =
lecConfigLesAtmAddress        = 39.99.99.99.99.99.00.00.99.99.31.01.40.00.82.10.17.00.09
lecControlTimeout             = 30
lecMaxUnknownFrameCount      = 10
lecMaxUnknownFrameTime       = 1
lecVccTimeoutPeriod           = 1200
lecMaxRetryCount              = 1
lecAgingTime                   = 300
lecForwardDelayTime           = 15
lecExpectedArpResponseTime    = 1
lecFlushTimeout               = 4
lecPathSwitchingDelay         = 6
lecLocalSegmentId             = 0x0
lecMulticastSendType          = 1
lecMulticastSendAvgRate       = 365566
lecMulticastSendPeakRate      = 365566
lecConnectionCompleteTimer    = 4
lecInitialControlTimeout      = 5
lecControlTimeoutMultiplier   = 2
V2 Capable                    = TRUE
lecForwardDisconnectTimeout    = 60
```

## Monitoring LE Clients

```
lecMinReconfigDelay      = 1
lecMaxReconfigDelay      = 5
lecMaxBusConnectRetries  = 0
lecElanId                = 0
ExplorerExclude          = TRUE
Data direct VCC mode     = TRUE
Data direct timeout      = 20
LE ARP queue depth       = 5
LE ARP cache size        = 5000
Forward peakrate         = 365566
Backward peakrate        = 365566
Packet trace             = Off
RIF aging timer          = 120
Source Routing           = enabled
```

See “Set” on page 305 for a definition of the parameters shown in the above examples.

**data** Lists the LEC Data Direct VCC information.

### Example:

LEC+ list data

```
LEC Data Direct VCC Table

Max Table Size      = 1019      Max no of SVC connections
Current Size        = 0          Currently used
Inactivity Timeout  = 1200      No Data Xfer Timeout before connection is
                                closed (seconds)
Sweep Interval      = 60

Conn      Inactive  User
Handle   VPI   VCI   Timer   Count   Destination ATM Address
-----
652      0    7241   300     1      39.99.99.99.99.99.00.00.99.99.30.02.
                                40.00.00.00.00.09.81
```

**group** Lists the group addresses in use by the LEC.

**rif** Lists the MAC address to Routing Information Field (RIF) mappings in use by the LEC.

### statistics

Lists LEC statistics.

### Example:

LEC+ list stat

```
LEC Statistics

In Octets.high      = 0          No of Bytes received
In Octets.low       = 346
In Discards         = 2          Packets discarded
In Errors           = 0          Rx.Errors
In Unknown Protos   = 0          Unknown protocols received
Out Octets.high     = 0          No of Bytes xmitted.
Out Octets.low      = 0
Out Discards        = 0
Out Errors          = 0          Tx.Errors
In Frames           = 0
Out Frames          = 0
In Bytes            = 0
Out Bytes           = 0
```

### VCC table

Lists VCC table.

### Example:

LEC+ list vcc



## Monitoring LE Clients

ExplorerExclude = FALSE  
Data direct VCC mode = TRUE  
Data direct timeout = 20

### **lecConfigMode**

LEC config mode: AUTO or MANUAL. If AUTO, LEC Uses LECS to get the LES ATM address.

### **lecConfigLanType**

LAN type, either Ethernet or token-ring

### **lecConfigMaxDataFrameSize**

Maximum frame size

### **lecConfigLanName**

ELAN Name

### **lecConfigLesAtmAddress**

LE Server ATM address

### **lecControlTimeout**

Timeout for request/response control frame

### **lecMaxUnknownFrameCount**

Maximum number of unknown frames

### **lecMaxUnknownFrameTime**

Period in which LEC will send a maximum of MaxUnknownFrameCount frames to the BUS for a given unicast LAN Destination, and it must also initiate the address resolution protocol to resolve that LAN Destination.

### **lecVccTimeoutPeriod**

Inactivity timeout of SVC Data Direct VCCs

### **lecMaxRetryCount**

LE ARP retry count

### **lecAgingTime**

Life of unverified entry in the ARP table

### **lecForwardDelayTime**

### **lecExpectedArpResponseTime**

ARP Request/Response cycle time

### **lecFlushTimeout**

LE Flush Request/Flush Reply timeout period

### **lecPathSwitchingDelay**

### **lecLocalSegmentId**

Segment ID of emulated LAN. Only for 802.5 clients

### **lecMulticastSendType**

Signaling parameter used by LEC for multicast send VCC

### **lecMulticastSendAvgRate**

Signaling parameter used by LEC for multicast send VCC

### **lecMulticastSendPeakRate**

Signaling parameter used by LEC for multicast send VCC

### **lecConnectionCompleteTimer**

Time to wait before sending a READY\_QUERY

### **lecInitialControlTimeout**

Specifies the maximum cumulative control timeout

### **lecControlTimeoutMultiplier**

Specifies the control timeout multiplier

### **lecConfigV2Capable**

Specifies whether the LEC is LANE version 2 capable

### **lecForwardDisconnectTimeout**

Specifies the time period to wait after losing last Multicast Forward VCC

### **lecMinReconfigDelay**

Specifies the minimum delay time the LEC waits in initial state

### **lecMaxReconfigDelay**

Specifies the maximum delay time the LEC waits in initial state

### **lecMaxBusConnectRetries**

Specifies the maximum BUS connect retries before returning to initial state

### **ExplorerExclude**

Specifies whether to drop RIF explorer frames

### **Data Direct VCC Mode**

Specifies the persistent Data Direct mode

### **Data Direct Timeout**

Specifies the persistent Data Direct VCC Timeout

**mac** Displays the LEC MAC ARP Table

**rd** Displays the LEC Route Descriptor Table

**server** Displays the LEC MIB Server VCC Tables

### **Example:**

LEC+ mib server

```
lecServerVccTable:
lecConfigDirectInterface    = 0
lecConfigDirectVpi         = 0
lecConfigDirectVci         = 0
lecControlDirectInterface   = 1
lecControlDirectVpi        = 0
lecControlDirectVci        = 38
lecControlDistributeInterface = 1
lecControlDistributeVpi    = 0
lecControlDistributeVci    = 37
lecMulticastSendInterface  = 1
lecMulticastSendVpi        = 0
lecMulticastSendVci        = 34
lecMulticastForwardInterface = 1
lecMulticastForwardVpi     = 0
lecMulticastForwardVci     = 33
```

### **lecConfigDirectInterface**

The interface associated with the Configuration Direct VCC

### **lecConfigDirectVpi**

VPI which identifies the above VCC if it exists

### **lecConfigDirectVci**

VCI which identifies the above VCC if it exists

### **lecControlDirectInterface**

The interface associated with the Control Direct VCC

## Monitoring LE Clients

### **lecControlDirectVpi**

VPI which identifies the above VCC if it exists

### **lecControlDirectVci**

VCI which identifies the above VCC if it exists

### **lecControlDistributeInterface**

The interface associated with the Control Distribute VCC

### **lecControlDistributeVpi**

VPI which identifies the above VCC if it exists

### **lecControlDistributeVci**

VCI which identifies the above VCC if it exists

### **lecMulticastSendInterface**

The interface associated with the Multicast Send VCC

### **lecMulticastSendVpi**

VPI which identifies the above VCC if it exists

### **lecMulticastSendVci**

VCI which identifies the above VCC if it exists

### **lecMulticastForwardInterface**

The interface associated with the Multicast Forward VCC

### **lecMulticastForwardVpi**

VPI which identifies the above VCC if it exists

### **lecMulticastForwardVci**

VCI which identifies the above VCC if it exists

## **statistics**

Displays the LEC MIB Statistics Table.

### **Example:**

```
LEC+ mib statistics
```

```
lecStatisticsTable:
  lecArpRequestsOut      = 1
  lecArpRequestsIn      = 0
  lecArpRepliesOut      = 0
  lecArpRepliesIn       = 1
  lecControlFramesOut   = 2
  lecControlFramesIn    = 2
  lecSvcFailures        = 1
```

### **lecArpRequestsOut**

No. of LE ARP requests sent by this LEC

### **lecArpRequestsIn**

No. of LE ARP requests received by this LEC

### **lecArpRepliesOut**

No. of LE ARP responses sent by this LEC

### **lecArpRepliesIn**

No. of LE ARP responses received by this LEC

### **lecControlFramesOut**

No. of Control Packets sent by this LEC

### **lecControlFramesIn**

No. of Control Packets received by this LEC

### **lecSvcFailures**

The total number of:



## Monitoring LE Clients

- Outgoing LAN Emulation SVCs which this client tried but failed, to open
- Incoming LAN Emulation SVCs which this client tried, but failed to establish
- Incoming LAN Emulation SVCs which this client rejected for protocol or security reasons

**status** Lists MIB status.

### Example:

LEC+ **mib status**

```
lecStatusTable:
  lecPrimaryAtmAddress      = 39.84.0F.00.00.00
  Client ATM address=      = 00.00.00.00.00.01.10.00.5A.00.DE.AD.03
  lecId                     = 1                               Assigned by LES
  lecInterfaceState         = Operational                    State of the LEC
  lecLastFailureRespCode    = None                          Error code from last
                                                                failed Config/Join resp.
  lecLastFailureState       = Initial State                  State of LEC when
                                                                updating above field.
  lecProtocol               = 1                               Protocol specified by
                                                                LEC in Join requests.
  LecVersion                = 1                               LEC Protocol Version
                                                                of above
  lecTopologyChange         = False
  lecConfigServerAtmAddress = 00.00.00.00.00.00.
  lecConfigSource           = Did not use LECS
  lecActualLanType          = 802.3 - Ethernet               Frame format currently
                                                                used by LEC
  lecActualMaxDataFrameSize = 1516
  lecActualLanName          = ETH                            Name of emulated LAN
                                                                that LEC joined.
  lecActualLesAtmAddress    = 39.84.0F.00.00.00.
  lecProxyClient            = False                           Is LES acting like a
                                                                proxy ?
```

## QoS Information

Use the **qos-information** command to get to the LEC x QoS+ prompt from which you can monitor Quality of Service as described in Quality of Service Monitoring Commands in *Using and Configuring Features*.

### Syntax:

**qos-information**

## Trace

Use the **trace** command to turn packet tracing on or off on the LEC. See "Packet-trace Monitoring Commands" on page 210 for more information.

Use the **trace mac-address** command to limit the data traced. A packet will only be traced if its destination or source MAC address logically ANDed with the trace MAC mask equals the trace MAC address logically ANDed with the trace MAC mask.

### Syntax:

**trace**

## LLC Monitoring Commands

This section summarizes and then explains all of the LLC commands. These commands, shown in Table 47, let you monitor the LLC while passing packets over an SNA network.

Table 47. LLC Monitoring Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
List	Displays configuration information.
Set	Allows the user to dynamically configure LLC parameters that are valid for the life of the session.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### List

Use the **list** command to display configuration information.

**Syntax:**

**list**

### Set

Use the **set** command to dynamically configure the LLC parameters on a current LLC session. Any changes that you make to the parameters are effective for the life of session.

**Attention:** Changing LLC parameters from the default can affect how the LLC protocol works.

**Syntax:**

```
set                n2-max_retry count
                   n3-frames-rcvd-before-ack count
                   nw-acks-to-inc-ww count
                   t1-reply-timer seconds
                   t2-receive-ack-timer seconds
                   ti-inactivity-timer seconds
                   tw-transmit-window seconds
```

**n2-max\_retry**

The maximum number of retries by LLC protocol. For example, N2 is the maximum number of times the LLC transmits an RR without receiving an acknowledgment when the inactivity timer expires. Default is 8. Minimum is 1. Maximum is 127.

**n3-frames-rcvd-before-ack**

This value is used with the T2 timer to reduce acknowledgment traffic for received I-frames. Set this counter to a specified value. Each time an

I-frame is received, this value is decremented. When this counter reaches 0 or the T2 timer expires, an acknowledgment is sent. Default is 1. Minimum is 1. Maximum is 255.

### **nw-acks-to-inc-ww**

This field is set to a default value of 1.

### **t1-reply-timer**

This timer expires when the LLC fails to receive a required acknowledgment or response from the other LLC station. When this timer expires, an RR is sent with the poll bit set and T1 is started again. If the LLC receives no response after the configured maximum number of retries (N2), the link underneath is declared inoperative. Default is 1. Minimum is 1. Maximum is 256.

### **t2-receive-ack-timer**

This timer is used to delay sending of an acknowledgment for a received I-format frame. This timer is started when an I-frame is received and reset when an acknowledgment is sent. If this timer expires, LLC2 sends an acknowledgment as soon as possible. Set this value so that it is less than that of T1. This insures that the remote LLC2 peer receives the delayed acknowledgment before the T1 timer expires. Default is 1 (100 ms). Minimum is 1. Maximum is 2560.

**Note:** If this timer is set to 1 (the default) it will not run (for example, **n3-frames-rcvd-before-ack=1**).

### **ti-inactivity-timer**

This timer expires when the LLC does not receive a frame for a specified time period. When this timer expires the LLC transmits an RR until the other LLC responds or the N2 timer expires. Default is 30 seconds. Minimum is 1 second. Maximum is 256 seconds.

### **tw-transmit-window**

Sets the maximum number of I-frames that can be sent before receiving an RR. Assuming that the other end of the LLC session can actually receive this many consecutive I-frames, and the device has enough heap memory to keep copies of these frames until an acknowledgment is received, increasing this value may increase the throughput. Default is 2. Minimum is 1. Maximum is 127.

## Monitoring LLC

---

## Chapter 23. Configuring Serial Line Interfaces

This chapter describes the interface configuration process for a serial interface and includes the following sections:

- “Accessing the Interface Configuration Process”
- “Network Interfaces and the GWCON Interface Command” on page 332

**IMPORTANT:** To configure Frame Relay, PPP, X.25, V.25bis, V.34, Bisync, SDLC Relay, and SDLC protocols on the serial interface, use the commands in this chapter and then refer to the commands in the chapters that describe the specific protocol.

See “Configuring the Network Interface” on page 17 for a table of protocols and the interfaces that support those protocols.

---

### Accessing the Interface Configuration Process

To access the interface configuration process for a serial interface, first access the `Config>` prompt and issue the command **set data-link**. Next, at the `Config>` prompt, enter the interface type and number to access the configuration environment for the interface.

For example, to configure a serial interface for X.25, you must access the X.25 `config>` environment by issuing the following commands:

```
Config> set data-link X25 2  
Config> network 2
```

From the X.25 `config>` environment, you can complete your configuration of X.25 on the serial interface. See “Chapter 24. Using the X.25 Network Interface” on page 333.

When you are done configuring the serial interface, enter the **restart** command after the `OPCON` prompt (\*) and respond **yes** to the prompt to enable the new configuration.

### Clocking and Cable Type

This section applies to all uses of a serial port for: FR, PPP, X.25, SDLC Relay, Bisync, and SDLC.

If a modem or CSU/DSU is attached to the serial port then the router is taking on the DTE role in terms of clocking on the line, so configure a DTE cable type and external clocking.

If you want to attach two routers directly without a modem, CSU/DSU, or modem eliminator, then one of the routers will take on the DCE role in terms of clocking on the line. Connect a direct attach cable to the router that will act as the DCE and configure the following parameters for its serial interface.

1. A DCE cable type
2. Internal clocking
3. The clocking/line speed

## Configuring Serial Line Interfaces

The other router will take on the DTE role in terms of clocking and should be configured as if it were attached to a modem or CSU/DSU

**Note:** Configuring a DTE as opposed to a DCE cable has no impact on whether or not the WAN net handler takes on the peer device. For example, the router always acts as a Frame Relay DTE device and uses a FR UNI interface even when a Frame Relay interface is configured to use a DCE cable.

---

## Network Interfaces and the GWCON Interface Command

While serial line interfaces do not have their own console process for monitoring purposes, routers can display complete statistics for all installed network interfaces when you use the **interface** command from the GWCON environment. For more information on the **interface** command and displaying statistics, see Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands.

---

## Chapter 24. Using the X.25 Network Interface

The X.25 network interface connects a router to an X.25 virtual circuit switched network. The X.25 network interface software and hardware allows the router to communicate over a public X.25 network. The X.25 network interface complies with CCITT 1980, CCITT 1984, CCITT 1988 and ISO 8208 1990 specifications for X.25 interfaces offering multiplexed channels and reliable end-to-end data transfer across a wide area network.

This chapter includes the following sections:

- “Basic Configuration Procedures”
- “X.25 Support Over ISDN BRI D-Channel (X.31)” on page 336
- “Null Encapsulation” on page 336
- “Understanding Closed User Groups” on page 338

For information on configuring X.25 Transport Protocol (XTP) for transporting X.25 traffic over TCP/IP, see “Chapter 26. Using XTP” on page 375.

For information about X.31 traffic, see “X.31 Support” on page 654.

---

### Basic Configuration Procedures

This section outlines the minimal configuration steps required to get the X.25 interface up and running. The X.25 parameters must be consistent with the X.25 network the interface on the router will connect to. For more information, refer to the configuration commands described in this chapter.

**Note:** You must restart the router for the configuration changes to take effect.

1. At the OPCON prompt (\*), type **talk 6**.  
The Config> prompt appears.
2. Type **list devices** to display a list of the interfaces from which you can select. Use the appropriate interface number in the following step.
3. Type **set data-link x25**.  
The Interface Number [0]? prompt appears.
4. Type the appropriate interface number.
5. Connect to the network by typing **net #** at the Config> prompt.  
The X.25 Config [#]> prompt appears.
6. At this prompt, type **set address x.25-node-address**.  
The X.25 address is a unique X.121 address that is used during call establishment. For DDN networks, use the **add htf-addr** and the **set htf-addr** commands to convert the protocol address associated with this interface to the X.121 address format required for DDN address translation. Failure to set the network address prevents the X.25 interface from joining the attached network.
7. Type **set equipment-type** and specify whether the frame and packet levels act as DCE or DTE. The default for this command is DTE.
8. Type **set svc** and define the lowest and highest SVCs that you are using. The default is for 1 SVC.

## Using the X.25 Network Interface

9. Type **add protocol** *protocol\_name* to add the protocols that will be running over the X.25 interface. You will be prompted for window size, default packet size, maximum packet size, circuit idle time, and max VCs.

**Note:** You need to add the protocols only once for all X.25 networks on the router.

10. Type **add address** *protocol\_name* to add an address translation for each protocol's destination address reachable over this interface.
11. Type **exit** to return to the Config> prompt.
12. Press **Ctrl-P** to return to the OPCon prompt (\*).
13. Type **restart** and respond **yes** to the prompt.

## Setting the National Personality

Each public data network, such as GTE's Telenet or DDN's Defense Data Network, has its own standard configuration. The term *National Personality* specifies a group of variables used to define a public data network's characteristics. The configuration information in the National Personality provides the router with control information for packets being transferred over the link. The National Personality option defines 27 default parameters for each public data network.

To view the configuration values that are in your X.25 National Personality, execute the X.25 configuration **list detailed** command. Configure each public data network connected to the router by executing the X.25 configuration **national-personality set** command.

The National Personality is a generalized template for network configuration. If necessary, you can individually configure each frame and packet layer parameter.

## Understanding the X.25 Defaults

The following tables list the defaults for the various parameters for the X.25 *set*, *national set* and *national enable* commands.

Table 48. Set Command

Parameter	Default
<u>address</u> ...	none
<u>cable</u>	none
<u>calls-out</u> ...	4
<u>clocking</u> ...	external
<u>default-window-size</u> ...	2
<u>encoding</u>	NRZ
<u>equipment-type</u> ...	DTE
<u>htf addr</u> ...	none
<u>inter-frame-delay</u> ...	0
<u>mtu</u>	1500
<u>national-personality</u> ...	GTE Telenet
<u>pvc</u> ...	low=0 high=0
<u>speed</u>	9600



Table 48. Set Command (continued)

Parameter	Default
<u>svc</u>	low inbound=0, high inbound=0 low 2-way=1, high 2-way=64 low outbound=0, high outbound=0
<u>throughput-class ...</u>	inbound=outbound=2400
<u>vc-idle ...</u>	30

Table 49. National Enable Parameters

Parameter	DDN Default	GTE Default
<u>accept-reverse-charges</u>	off	on
<u>bi-cug</u>	off	off
<u>bi-cug-with-outgoing-access</u>	off	off
<u>cug</u>	off	off
<u>cug-deletion</u>	off	off
<u>cug-insertion</u>	off	off
<u>cug-with-incoming-access</u>	off	off
<u>cug-with-outgoing-access</u>	off	off
<u>cug-zero-override</u>	off	off
<u>flow-control-negotiation</u>	on	on
<u>frame-ext-seq-mode</u>	off	off
<u>packet-ext-seq-mode</u>	off	off
<u>request-reverse-charges</u>	off	on
<u>suppress-calling-addresses</u>	off	off
<u>throughput-class-negotiation</u>	on	on
<u>truncate-called-addresses</u>	off	off

Table 50. National Set Parameters

Parameter	DDN Default	GTE Default
<u>call-req</u>	20 decaseconds	20 decaseconds
<u>clear-req ...</u>	retries=1	retries=1
	18 decaseconds	18 decaseconds
<u>disconnect-procedure ...</u>	passive	passive
<u>dly-recall-timer...</u>	0	0
<u>dp-timer</u>	500 milliseconds	500 milliseconds
<u>frame-window-size</u>	7	7
<u>n2-timeouts</u>	20	20
<u>packet-size ...</u>	128, max=256	128, max=256
<u>reset ...</u>	retries=1	retries=1
	18 decaseconds	18 decaseconds
<u>restart ...</u>	retries=1	retries=1
	18 decaseconds	18 decaseconds
<u>max-recall-retires ...</u>	3	3

## Using the X.25 Network Interface

Table 50. National Set Parameters (continued)

Parameter	DDN Default	GTE Default
min-recall	10 seconds	10 seconds
min-connect	90 seconds	90 seconds
collision-timer	10 seconds	10 seconds
standard-version	1984	1984
t1-timer	4 seconds	4 seconds
t2-timer	0	0
truncate-called-addr-size	2	2

---

## X.25 Support Over ISDN BRI D-Channel (X.31)

X.25 provides the same protocol support over ISDN BRI D-channel (X.31) with the following restrictions:

- The packet size must not exceed 256 bytes.
- The frame extended sequence mode must be enabled.
- X.31 must be configured as a DTE.

See "X.31 Support" on page 654 for more information.

---

## Null Encapsulation

Null Encapsulation allows the user to multiplex multiple network layer protocols over one X.25 circuit. This function may be used to avoid using an unreasonable number of virtual circuits.

## Limitations

Null Encapsulation is not supported for QLLC. This function is supported for Switched Virtual Circuits (SVCs), but not for Permanent Virtual Circuits (PVCs).

## Configuration Changes

The encapsulation option NULL has been added for the following T6 commands:

Under X25 config: add address IP (may input enc type = NULL)

Under X25 config: add address IPX (may input enc type = NULL)

Under X25 config: add address DNA (may input enc type = NULL)

Under X25 config: add address VINES (may input enc type = NULL)

Under X25 config: list addr will show active enc type = NULL if the priority 1 type is NULL.

T5 commands:

Under X25 int: List SVCS will include enc type = NULL

## Configuring Null Encapsulation and Closed User Groups (CUG)

Since More than one Protocol can run over one virtual circuit while using Null Encapsulation, the CUG(s) defined for each protocol over that circuit must be the same. It is strongly suggested that the user configure multiple Protocols same destination as follows:

Configure CUG using the add address. The CUG(s) defined must be the same for each protocol defined at the same address.


If the CUG is defined at the add protocol level, The CUG(s) must be the same for all peers. (This method is more restrictive).

Configure CUG at the interface level. This insures all peers have the same CUG values. (This method is the most restrictive)

Any of the above methods may be used as long as any incoming call CUG definition must be valid for all protocols sharing that circuit. Valid means that the CUG was defined for the specific address or was defaulted to use either the protocol or interface circuit definition.

## Using the X.25 Network Interface

 CASE 1: Incoming Closed User Groups (CUG)  
valid for both peers.

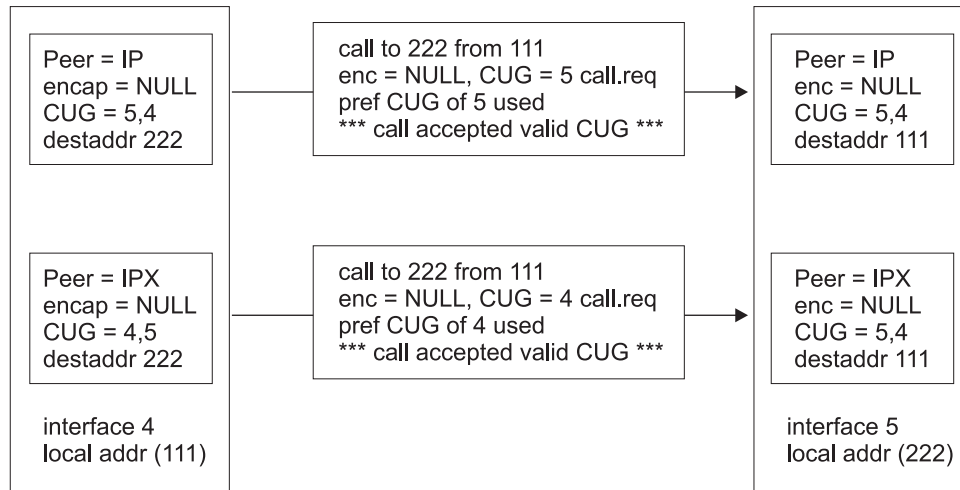

CASE 2: Incoming Closed User Groups (CUG)  
not valid for both peers.

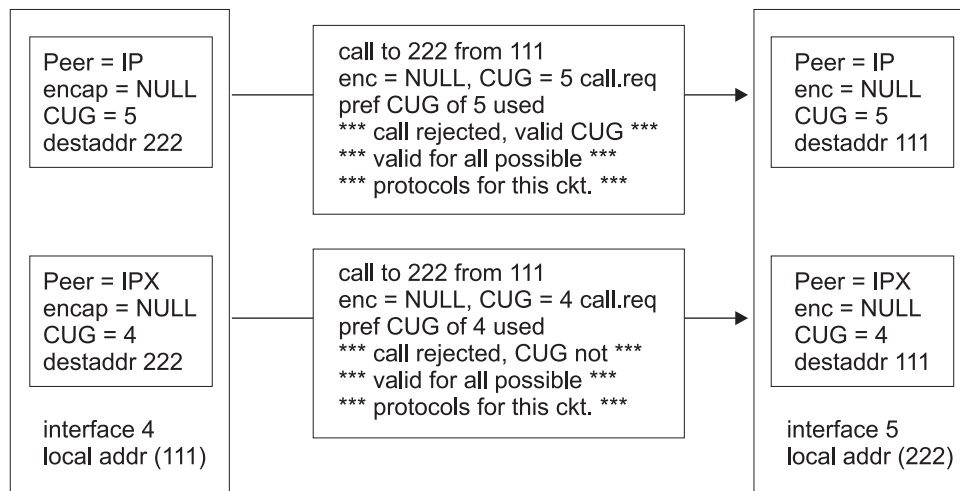


Figure 18. Closed User Group Null Encapsulation

## Understanding Closed User Groups

A *closed user group (CUG)* is a group of X.25 DTEs allowed to establish connections with other specific DTEs. CUG numbers are defined by your network provider and you can only use the CUGs the provider assigns you. You can configure an address-specific CUG, a protocol-specific CUG, or an interface-specific CUG. If all of three types of CUG numbers are configured for a DTE, the closed user group facility uses the address-specific destination CUG in a call request when contacting another DTE. If only a protocol-specific and an interface-specific CUG are configured for a DTE, the closed user group facility uses the protocol-specific CUG in a call request when contacting another DTE.

A single DTE can belong to multiple CUGs. You must specify a preferred CUG for that DTE. The preferred CUG is used when the router initiates calls to other DTEs. A single DTE cannot have more than a total of 5 preferred or normal closed user groups.

### Bilateral Closed User Groups

A *bilateral closed user group (BCUG)* is a closed user group consisting of only two DTEs. The DTEs within the BCUG can originate calls to members of the BCUG and any DTEs that are not members of any CUG or BCUG. A single DTE cannot have more than a total of 5 preferred or normal bilateral CUGs.

A DTE uses a BCUG to establish circuits in the same way the DTE uses CUGs to establish circuits (see Table 51), however, if both a BCUG and a CUG is defined for an interface, protocol, or address, the BCUG is used to establish the circuit.

### Types of Extended Closed User Groups

The following extensions to closed user groups are supported:

#### CUG with Outgoing Access

The DTE can belong to one or more CUGs. The DTE can originate calls to members of the CUG and to any DTE belonging to other CUGs with Incoming Access.

#### CUG with Incoming Access

The DTE can belong to one or more CUGs. The DTE can receive calls from DTEs not belonging to any CUG or from DTEs belonging to other CUGs with Outgoing Access.

#### BCUG with Outgoing Access

The DTE can belong to one or more BCUGs. The DTE can originate calls to members of the BCUG and to any DTE not belonging to any BCUG.

### Establishing X.25 Circuits with Closed User Groups on a Device

When you have enabled the closed user group facility, and a DTE receives a call request, it uses the CUG in the call request to determine whether to accept or reject the call from the DTE. If the CUG in the call request does not match a configured CUG on the interface, protocol, or on the destination associated with the calling DTE, the request is rejected. Table 51 summarizes how X.25 circuits are established based on CUGs, if the interface, protocol, and address CUG numbers are different and incoming access is not enabled.

Table 51. Establishing Incoming X.25 Circuits for Closed User Groups

Incoming Call Request Contains	Receiving DTE CUG Definition							
	Interface CUG Only	Protocol CUG Only	Address Specific CUG	Interface and Protocol CUG	Interface and Address CUG	Protocol and Address CUG	All CUGs	No CUGs
No CUG	Reject	Reject	Reject	Reject	Reject	Reject	Reject	Accept
Interface CUG	Accept	Reject	Reject	Reject	Reject	Reject	Reject	Reject

## Using the X.25 Network Interface

Table 51. Establishing Incoming X.25 Circuits for Closed User Groups (continued)

Protocol CUG	Reject	Accept	Reject	Accept	Reject	Reject	Reject	Reject
Address Specific CUG	Reject	Reject	Accept	Reject	Accept	Accept	Accept	Reject

For outgoing calls on an interface, if you have enabled either the CUG or the BCUG facility, each call request will contain the configured preferred CUG (if any) for the destination or, if no address-specific CUG is configured, the CUG used is the CUG defined for the protocol, or if no protocol-specific CUG is configured, the CUG used is the CUG defined for the interface. If no CUG number has been configured, the CUG facility is not included in any outgoing call request.

### Overriding Closed User Group Processing for CUG 0

You can configure the DTE such that it does not validate incoming calls with a CUG of 0 in the call request. This ability allows you to permit specific calls to complete even when you have not enabled incoming access. Using the **national enable cug 0 override** command forces the device to ignore the CUG facility if the CUG number is 0. The call request will not be compared with any configured CUG number.

## Configuring X.25 Closed User Groups

To use closed user groups on X.25 interfaces:

1. Request CUG numbers from your network provider. You will need these numbers when configuring X.25.
2. Enable the closed user group facility using the **national enable cug** command and related commands.
3. Enable the bilateral closed user group facility, if desired, using the **national enable bi-cug** command and related commands.
4. Configure the appropriate CUG numbers for the DTEs. Specify the preferred CUG, CUG, preferred bilateral CUG, and bilateral CUG, as needed. This is done through the **add address** command.
5. Configure the appropriate CUG and bilateral CUG for the protocol, if required. This is done through the **add protocol** command.

**Note:** You should only configure these CUGs if you are restricting all X.25 circuits established over the X.25 interface for this protocol to DTEs belonging to this set of unique CUGs or BCUGs unless you override it with an address-specific CUG.

6. Configure the appropriate CUG and bilateral CUG for the interface, if required. This is done through the **add cug** command.

**Note:** You should only configure these CUGs if you are restricting all X.25 circuits established over the X.25 interface to DTEs belonging to this set of unique CUGs or BCUGs unless you override it with an address or protocol-specific CUG.

---

## Chapter 25. Configuring and Monitoring the X.25 Network Interface

This chapter describes the X.25 configuration and operational commands and includes the following sections:

- “X.25 Configuration Commands”
- “Accessing the Interface Monitoring Process” on page 367
- “X.25 Monitoring Commands” on page 368
- “X.25 Network Interfaces and the GWCON Interface Command” on page 372

---

### X.25 Configuration Commands

This section summarizes and explains all the X.25 configuration commands.

The X.25 configuration commands allow you to specify network parameters for router interfaces that transmit X.25 packets. The information you specify with the configuration commands activates when you restart the router.

Enter the X.25 configuration commands at the X.25 config> prompt. Table 52 shows the commands.

*Table 52. X.25 Configuration Commands Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Set	Sets the local and DDN X.25 node addresses, window size for packet levels, identifies the National personality, the MTU, and the maximum number of calls. Defines the PVC and SVC channel ranges, the number of seconds that a switched circuit can be idle before it is cleared, and specifies whether one router needs to act as a DCE (when two routers are directly connected without an intervening X.25 network) or the more normal method of acting at a DTE connected to an X.25 network. Sets speed, encoding, clocking, throughput class, and cable type.
Enable/Disable	Enables/Disables incoming-calls-barred feature, outgoing-calls-barred feature, dynamic DDN address translations, and lower-dtr feature.
National Enable or National Disable	Enables/Disables the parameters defined by the National Personality configuration.
National Set	Sets parameters defined by the National Personality configuration.
National Restore	Restores the National Personality configuration to its default values.
Add/Change/Delete	Adds/Changes/Deletes an address translation, a protocol encapsulation, or a PVC definition.
List	Lists the defined address translations, National Personality parameters, protocol encapsulation, or PVC definitions.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## Configuring the X.25 Network Interface

### Set

Use the **set** command to configure local X.25 node addresses, maximum number of calls, frame and packet level window size, lowest to highest PVC and SVC channels, and the idle time for a switched circuit.

#### Syntax:

```
set          address . . .
              cable
              calls-out . . .
              clocking . . .
              default-window-size . . .
              encoding
              equipment-type . . .
              htf addr . . .
              inter-frame-delay . . .
              mtu
              national-personality . . .
              pvc . . .
              speed . . .
              svc
              throughput-class . . .
              vc-idle . . .
```

#### **address** *x.25-node-addr*

Sets the local X.25 interface address (*x.25-node-addr*). Set the X.25 node address to 0, not to 00, to delete the local X.25 address.

**Example: set address 8982800**

#### **cable** *type*

Sets the cable type as follows:

- RS-232 DTE
- RS-232 DCE
- V35 DTE
- V35 DCE
- V36 DTE
- X21 DTE
- X21 DCE

A DTE cable is used when you are attaching the router to some type of DCE device (for example, a modem or a DSU/CSU).

A DCE cable is used when the router is acting as the DCE and providing the clocking for direct attachment.

#### **calls-out** *value*

Sets the maximum number of locally initiated, simultaneously active SVCs.



## Configuring the X.25 Network Interface

**Valid Values:** 1 to 239

**Default Value:** 4

### **clocking** *external or internal*

To connect to a modem or DSU, configure external clocking and select the appropriate DTE cable with the **set cable** command. Use the **set speed** command to configure the line speed.

To connect directly to another DTE device, configure internal clocking, select the appropriate DCE cable with the **set cable** command, and configure the clocking/line speed with the **set speed** command.

**Default:** external

### **default-window-size** *value*

Sets the window size for the packet level assigned by the router if there is no window-size facility in the Call-Request packet. The range is determined by the National Personality packet modulus (PACKET-EXT-SEQ-MODE).

**Default:** 2

**Example:** **set default-window-size 3**

### **encoding** *NRZ or NRZI*

Sets the HDLC transmission encoding scheme for the interface. Encoding may be set for NRZ (non-return to zero) or NRZI (non-return to zero inverted). NRZ is the more widely used encoding scheme while NRZI is used in some IBM configurations.

**Default:** NRZ

### **equipment-type** *DCE or DTE*

Specifies whether the frame and packet levels act as DCE or DTE. This command has no relation to the cable type in use.

**Default:** DTE (must be DTE for X.31)

### **htf addr** *x.25-node-addr*

Sets the local DTE address when DDN is used. It converts the IP address to an X.121 address as opposed to the **set address** command, which is used to set the local DTE address when CCITT is used.

### **inter-frame-delay** *value*

This parameter defines the minimum delay between transmitted frames. Setting this parameter is useful when interfacing directly to older equipment. This parameter is the amount of time between frames in seconds.

**Default:** 0

### **mtu** *value*

Sets the Maximum Transmit Unit (MTU) in bytes. This is the maximum message size that will be delivered to the X.25 interface to package and transmit over the serial line. The range is 576 to 16384.

**Default:** 1500

If you are encountering packet reassembly timeouts when transferring data over the X.25 interface, you should determine what the minimum packet size is for all LAN or serial interfaces that lead to the end-point, then calculate a more suitable X.25 MTU. You should not directly consider the actual X.25 packet size in this calculation because X.25 tends to use a smaller packet size. X.25 usually sends up to 7 packets at one time before waiting for an acknowledgment.

## Configuring the X.25 Network Interface

For example, consider a network topology that includes:

- A Token-Ring LAN having a packet size of 4000
- An X.25 serial line having a packet size of 128 with a window size of 7 and a bit rate of 9600 bps
- An Ethernet LAN with a packet size of 1500

In this case, you should probably set the X.25 MTU to 1500. That means that about 12 packets will be sent over the X.25 interface. (MTU / X.25 packet size = number of X.25 packets to be sent).

When using an MTU of 4096, 32 packets must be sent over the X.25 interface. (4000 /128 = 31.25). In this case, packet reassembly timeouts will probably occur if the X.25 modem speed is 9600 bps. Using an X.25 modem speed of 56 Kbps would probably solve this problem.

### Notes:

1. The MTU parameter has significant impact on the memory requirements and memory utilization of the device. Use an MTU value of 8192 or less for devices with less than 8M of memory.
2. The amount of memory available while the device is running limits the number of SVCs that can be established and still maintain optimal performance. For recommendations on the maximum number of SVCs see the product home page on the World Wide Web.

### **national-personality** *GTE-Telenet or DDN*

Sets the 28 default parameters for either GTE-Telenet or DDN National Personality.

**Default:** GTE-Telenet

### **pvc low/high** *value*

Defines the lowest to the highest Permanent Virtual Circuit channel number. Zero indicates no PVCs. By default there are no PVCs.

#### **pvc low**

0

#### **pvc high**

0

The range is 1 to 4095. These values are setting boundaries of a given VC range. There is a maximum of 400 PVCs.

**Example:** `set pvc low 40`

**Note:** Values must not overlap values set for SVCs.

### **speed** *speed-setting*

For internal clocking, use this command to specify the speed of the transmit and receive clock lines.

For external clocking, this command does not affect the operation of the WAN/serial line but it does set the speed that some protocols, such as IPX, use to determine routing cost parameters. You should set the speed to match the actual line speed.

#### **Valid Values:**

Internal Clocking: 2400 to 2 048 000 bps

External Clocking: 2400 to 6 312 000 bps

## Configuring the X.25 Network Interface

### Notes:

1. The X.25 software is supported only at speeds up to 256 000 bps.
2. If you want to use a line speed greater than 2 048 000 bps when external clocking is configured, you can only do this on:
  - Interface 1
  - Port 1 of an 4-port WAN concentration adapter
  - Ports 1 and 5 of an 8-port WAN concentration adapter

All other WAN ports on the same adapter must be clocked at 64 000 bps or less.

**Default:** 9600

### **svc low/high** *inbound or two-way or outbound value*

Defines the lowest to the highest switched virtual circuit channel number. When low=high=0, no VCs in this category are defined.

**Example:** `set SVC low-two-way 1`

#### **Inbound**

Specifies the range of logical channel numbers to be assigned to inbound SVCs. By default, there are no inbound-only SVCs.

**Valid values:** 0 to 4095

**Default values:** 0

#### **Two-way**

Specifies the range of logical channel numbers to be assigned to two-way SVCs. By default, there are sixty-four 2-way SVCs.

**Valid values:** 0 to 4095

**Default values:**

**svc low**

1

**svc high**

64

#### **Outbound**

Specifies the range of logical channel numbers to be assigned to outbound SVCs. By default, there are no outbound-only SVCs.

**Valid values:** 0-4095

**Default:** 0

**Note:** Values in each range must not overlap other SVC ranges nor the PVC range. Table 53 shows a possible VC configuration.

Table 53. Example VC Definitions

	<b>Low</b>	<b>High</b>
PVC	1	40
inbound	0	0
two-way	41	59
outbound	60	500

## Configuring the X.25 Network Interface

### **throughput-class inbound or outbound** *bit-rate*

Defines the throughput class requested when making a call request while throughput negotiation is enabled.

**Default:** 2400 bps

This setting is ignored when processing incoming call requests.

### **vc-idle** *value*

Defines the number of seconds that a switched circuit can be idle before it is cleared by the router. Zero indicates that the router never clears an idle circuit.

**Valid values:** 1 to 255

**Default:** 30 seconds

## Enable

Use the **enable** command to enable DDN address translations, interface resets, or the incoming-calls-barred, outgoing-calls-barred, and lower-dtr features.

### **Syntax:**

enable ddn—address-translations

**Note:** Enabling `ddn-address-translations` is no longer allowed. This feature defaults to enabled when the national personality selected is DDN, and defaults to disabled in all other cases.

incoming-calls-barred

lower-dtr

outgoing-calls-barred

### **incoming-calls-barred**

Specifies that the router will not accept incoming calls. The default setting for this parameter is disabled or *off*, which allows incoming calls.

### **lower-dtr**

This parameter determines the way the data terminal ready (DTR) signal is handled for leased serial-line interfaces that are disabled. If this parameter is set to "disabled" (the default), the DTR signal will be raised when the interface is disabled.

If *lower-dtr* is set to "enabled," the DTR will be lowered when the interface is disabled. This behavior may be desirable in situations where the interface has been configured as an alternate link for WAN Reroute and the interface is connected to a dial-out modem which maintains its dial connection based on the state of the DTR signal.

When *lower-dtr* is enabled and the interface is disabled, the DTR signal is low and the modem keeps the dial connection down. When the interface is enabled, due to a WAN Reroute backup scenario, DTR is raised and the modem dials a stored number to the backup site. When the primary interface is restored, the alternate interface is disabled, DTR is lowered, and the modem hangs up the dial connection.

The following cable types are supported:

## Configuring the X.25 Network Interface

RS-232

V.35

V.36

The default setting is disabled.

### **outgoing-calls-barred**

Specifies that the router will not allow outgoing calls. The default setting for this parameter is disabled or *off*, which allows outgoing calls.

## Disable

Use the **disable** command to disable DDN address translations, interface resets as part of network certification, or the incoming-calls-barred or outgoing-calls-barred features.

**Note:** If you set DDN as the national personality, DDN address translation is enabled automatically and this parameter has no effect.

### **Syntax:**

disable

ddn-address-translations

**Note:** Disabling ddn-address-translations is no longer allowed. This feature defaults to enabled when the national personality selected is DDN, and defaults to disabled in all other cases.

incoming-calls-barred

lower-dtr

outgoing-calls-barred

## National Enable

Use the **national enable** command to enable a feature defined in the National Personality configuration.

### **Syntax:**

national enable

accept-reverse-charges

bi-cug

bi-cug-outgoing-access

cug

cug-deletion

cug-incoming-access

cug-insertion

cug-outgoing-access

cug-zero-override

flow-control-negotiation

frame-ext-seq-mode (required for X.31)

## Configuring the X.25 Network Interface

packet-ext-seq-mode

request-reverse-charges

suppress-calling-addresses

throughput-class-negotiation

truncate-called-addresses

### **accept-reverse-charges**

Accepts reverse charge calls during call establishment. This option is not available for DDN.

#### **DDN Default**

off

#### **GTE Default**

on

**bi-cug** Enables the bilateral closed user group facility on this device. By default, this facility is disabled.

**Note:** You cannot add any bilateral CUGs unless this parameter is enabled.

### **bi-cug-outgoing-access**

Enables the bilateral CUG with outgoing access facility on this device. By default, this facility is disabled.

**cug** Enables the closed user group facility on this device. By default, this facility is disabled.

**Note:** You cannot add any CUGs unless this parameter is enabled.

### **cug-deletion**

Deletes a CUG facility from a call packet received from XTP before transmitting it over X.25. By default, this function is disabled.

### **cug-incoming-access**

Enables the CUG with incoming access facility on this device. By default, this facility is disabled.

### **cug-insertion**

Inserts the appropriate (address-specific, protocol-specific, or interface-specific) preferred cug number into a call request received by XTP from the X.25 interface before transmitting the request over IP. If there is already a CUG facility in the call packet, it will not be replaced. By default, this function is disabled.

### **cug-outgoing-access**

Enables the CUG with outgoing access facility on this device. By default, this facility is disabled.

### **cug-zero-override**

Causes the closed user group facility to ignore any CUG facility in call request packets with a CUG number of 0. By default, this function is disabled.

### **flow-control-negotiation**

Enables the negotiation of packet and window size during call setup of SVCs.

#### **DDN Default**

on

## Configuring the X.25 Network Interface

### **GTE Default**

on

### **frame-ext-seq-mode**

Sets the frame layer sequence numbering to modulo 128 (i.e., 0 through 127).

### **DDN Default**

off (must be on for X.31)

### **GTE Default**

off

### **packet-ext-seq-mode**

Enables the packet layer to use extended sequence numbers (0 through 127).

### **DDN Default**

off

### **GTE Default**

off

### **request-reverse-charges**

Requests reverse charges for all outgoing calls.

### **DDN Default**

off

### **GTE Default**

on

### **suppress-calling-address**

Suppresses the source address in call packets.

### **DDN Default**

off

### **GTE Default**

off

### **throughput-class-negotiation**

Enables the registration of throughput class.

### **DDN Default**

off

### **GTE Default**

on

### **truncate-called-addresses**

Enables truncation of the called DTE address when transmitting a call to a DTE. This option applies only to XTP circuits.

### **DDN Default**

off

### **GTE Default**

off

## National Disable

Use the **national disable** command to disable a feature defined by the National Personality configuration.

## Configuring the X.25 Network Interface

### Syntax:

<u>n</u> ational <u>d</u> isable	<u>a</u> cept-reverse-charges
	<u>b</u> i-cug
	<u>b</u> i-cug-outgoing-access
	<u>c</u> ug
	<u>c</u> ug-deletion
	<u>c</u> ug-incoming-access
	<u>c</u> ug-insertion
	<u>c</u> ug-outgoing-access
	<u>c</u> ug-zero-override
	<u>f</u> low-control-negotiation
	<u>f</u> rame-ext-seq-mode
	<u>p</u> acket-ext-seq-mode
	<u>r</u> equest-reverse-charges
	<u>s</u> uppress-calling-addresses
	<u>t</u> hroughput-class-negotiation
	<u>t</u> runcate-called-addresses

## National Set

Use the **national set** command to set one or all of the default values made to the National Personality configuration.

### Syntax:

<u>n</u> ational <u>s</u> et	<u>c</u> all-req
	<u>c</u> lear-req . . .
	<u>d</u> isconnect-procedure . . .
	<u>d</u> ly-recall-timer . . .
	<u>d</u> p-timer
	<u>f</u> rame-window-size
	<u>n</u> 2-timeouts
	<u>p</u> acket-size . . .
	<u>r</u> eset . . .
	<u>r</u> estart . . .
	<u>m</u> ax-call-retries . . .
	<u>m</u> in-recall
	<u>m</u> in-connect
	<u>c</u> ollision-timer
	<u>s</u> tandard-version
	<u>t</u> 1-timer



## Configuring the X.25 Network Interface

t2-timer

truncate-called-addr-size

### call-req

Specifies the number of 10-second intervals permitted before giving up on a call request and clearing it. A zero indicates an infinite wait. In a list command output, this is displayed as the t21 timer.

#### DDN Default

20 decaseconds

#### GTE Default

20 decaseconds

### clear-req *retries or timer*

Specifies the number of clear request retransmissions.

#### Retries

Number of clear request transmissions permitted before action is taken. In a list command output, this is displayed as the r23 retry count.

#### DDN Default

retries=1

#### GTE Default

retries=1

**Timer** Number of 10-second intervals to wait before retransmitting a clear request packet. A zero in the timer value indicates an indefinite wait. In a list command output, this is displayed as the t23 timer.

#### DDN Default

18 decaseconds

#### GTE Default

18 decaseconds

### disconnect-procedure *passive or active*

Specifies the type of connect procedure to use when connecting.

#### DDN Default

passive

#### GTE Default

passive

#### Passive

Specifies that SABM frames are not initiated by the router when connecting.

**Active** Specifies that SABM frames are initiated by the router when connecting.

### dly-recall-timer

**This command does not apply to XTP or QLLC.** Specifies the time to delay after consecutive failing max-call-retries have been attempted. Min-recall timer will continue to be used to delay between call attempts until max-call-retries are exceeded. No call attempts will be attempted while the min-recall or dly-recall timer is running. The range is 0 to 1080 minutes. Specify 0 when the dly timer is not used.

#### DDN Default

0

## Configuring the X.25 Network Interface

### GTE Default

0

**Example: national set dly-recall 30**

### dp-timer

Specifies the number of milliseconds that the frame level remains in a disconnected state. Zero indicates immediate transition from disconnected phase to link setup state.

### DDN Default

500 milliseconds

### GTE Default

500 milliseconds

### frame-window-size

Specifies the number of frames that can be outstanding before acknowledgment.

### DDN Default

7

### GTE Default

7

### n2-timeouts

Specifies the number of times the retransmit timer (T1) can expire before the interface is recycled.

### DDN Default

20

### GTE Default

20

### packet-size *default or maximum or window*

Specifies the size of the packet.

#### default

Number of bytes in the data portion of the packet. Possible options include 128, 256, 512, 1024, 2048, and 4096. This value is used in the absence of packet size negotiation. *Default* cannot be greater than *maximum*.

### DDN Default

128

### GTE Default

128

#### maximum

Maximum number of bytes in the data portion of the packet. Possible options include 128, 256, 512, 1024, 2048, and 4096.

### DDN Default

256

### GTE Default

256

#### window

Number of outstanding I-frames permitted before acknowledgment is required. The range is determined by the National Personality Packet Modulus.

## Configuring the X.25 Network Interface

Related configuration parameters are

- Protocol max default window
- Set default window size

### **reset** *retries or timer*

Specifies the number of reset request retransmissions.

**Example:** `national set reset retries 2`

#### **retries**

Number of reset request transmissions permitted before the call is cleared. The range is 0 to 255. In a list command output, this is displayed as the r22 retry count.

##### **DDN Default**

1

##### **GTE Default**

1

**timer** Number of 10-second intervals to wait before retransmitting a reset request packet. The range is 0 to 255. A zero in the timer value indicates an indefinite wait. In a list command output, this is displayed as the t22 timer.

##### **DDN Default**

18 decaseconds

##### **GTE Default**

18 decaseconds

### **restart** *retries or timer*

Specifies the number of restart request transmissions.

#### **retries**

Number of restart request transmissions permitted before the interface is recycled. The range is 0 to 255. In a list command output, this is displayed as the r20 retry count.

##### **DDN Default**

1

##### **GTE Default**

1

**timer** Number of 10-second intervals to wait before retransmitting a restart request packet. The range is 0 to 255. A zero in the timer value indicates an indefinite wait. In a list command output, this is displayed as the t20 timer.

##### **DDN Default**

18 decaseconds

##### **GTE Default**

18 decaseconds

### **max-recall-retries**

**This command does not apply to XTP or QLLC.** Specifies how many re-call attempts (per destination) will be made before clearing data and starting the delay recall timer. Max-call-retries are defined across an interface. Specify 0 for no recall attempts.

##### **DDN Default**

3

## Configuring the X.25 Network Interface

### GTE Default

3

**Example: national set max-call-retries 5**

### min-recall

Specifies the minimum number of seconds to wait prior to reinitiating a call to open an SVC. The range is 0 to 255 seconds.

### DDN Default

10 seconds

### GTE Default

10 seconds

### min-connect

Specifies in seconds, the minimum amount a time an SVC will remain established once the connection is made barring any error conditions. The range is 0 to 255 seconds.

### DDN Default

90 seconds

### GTE Default

90 seconds

### collision-timer

Specifies in seconds, the time delay used prior to reinitiating a call to open an SVC if the original attempt resulted in a call collision. The range is 0 to 255 seconds.

### DDN Default

10 seconds

### GTE Default

10 seconds

### standard-version

Options are none, v1980, v1984, and v1988.

### DDN Default

1984

### GTE Default

1984

### t1-timer

Specifies the frame retransmit time in seconds. The range is 1 to 255.

### DDN Default

4 seconds

### GTE Default

4 seconds

### t2-timer

Specifies the amount of time in seconds to delay before acknowledging an I-frame. This is an optimization parameter. Setting the timer to 0 disables it. The range is 0 to 255.

### DDN Default

0

### GTE Default

0

## Configuring the X.25 Network Interface

### **truncate-called-addr-size**

Specifies the number of characters truncated from the end of a called address. This parameter pertains only to XTP circuits. The range is 0 to 10.

#### **DDN Default**

2

#### **GTE Default**

2

## National Restore

Use the **national restore** command to restore one or all of the default values made to the National Personality configuration via the **national set**, **national enable**, or **national disable** command.

### **Syntax:**

```
national restore          all  
                           accept-reverse-charges  
                           bi-cug  
                           bi-cug-outgoing-access  
                           call-req  
                           clear-req . . .  
                           cug  
                           cug-deletion  
                           cug-incoming-access  
                           cug-insertion  
                           cug-outgoing-access  
                           cug-zero-override  
                           disconnect-procedure . . .  
                           dp-timer  
                           flow-control-negotiation  
                           frame-ext-seq-mode  
                           frame-window-size  
                           min-collision-timer  
                           min-connect-timer  
                           min-recall-timer  
                           network-type . . .  
                           n2-timeouts  
                           packet-size . . .  
                           packet-ext-seq-mode  
                           request-reverse-charges  
                           reset . . .
```

## Configuring the X.25 Network Interface

restart . . .  
standard-version  
suppress-calling-addresses  
throughput-class-negotiation  
t1-timer  
t2-timer  
truncate-called-addresses  
truncate-called-addr-size

## Add

Use the **add** command to add an X.121 address, a DDN X.25 Address, a protocol configuration, or a PVC definition.

### Syntax:

add address  
bi-cugs  
cugs  
htf-address  
protocol  
pvc

### address

Adds an X.121 address translation for a protocol supported in the configuration of the router. The prompts that appear depend on the protocol address that you are adding. (See the following examples.) The protocol address and X.121 address being entered represent the protocol and X.121 DTE address of the remote DTE connecting to the router X.25 interface. The mapping of a protocol address and the X.121 address must be unique unless the protocol is APPN or DLSw. A protocol address cannot map to more than one X.121 address. Also, a specific X.121 address cannot map to more than one protocol address. The **set address** command is used to set the local X.25 address. After setting the local X.25 address, you can use an X.25 remote address to dial out and an optional incoming remote address for call ID. If only remote called address is entered, then this address will be used for outgoing calls and incoming call verification.

### Example: add address

#### IP example:

```
Protocol [IP]? IP
IP Address [0.0.0.0]? 128.185.1.2
Enc Priority 1 []? CC
Enc Priority 2 []? SNAP
Enc Priority 3 []? Null
X.25 Address []? 1234590
Remote address []?
Pref CUG []? 11
CUG (2) []? 12
CUG (3) []? 13
CUG (4) []? 14
```

## Configuring the X.25 Network Interface

```
CUG (5) []? 15
Pref BI-CUG []? 21
BI-CUG (2) []? 22
BI-CUG (3) []?
```

### IPX example:

```
Protocol [IP]? IPX
CUD Field Usage (Standard or Proprietary)
IPX Host Number (in hex) []?
Enc Priority 1 []? SNAP
Enc Priority 2 []?Nu11
X.25 Address []?
Pref CUG [] ?
Pref Bi-CUG[]? 1
BI-CUG (2)[]? 3
BI-CUG (3)[]
```

### Protocol

Specifies the protocol type of the address mapping you are adding. The valid values are APPN, DECnet, DLSw, IP, IPX and VINES. The default is IP.

### Enc Priority

Determines the encapsulation type, as defined in RFC 1356, that will be put in the CUD. For IP, valid choices are CC, SNAP or Null. For IPX, valid choice is SNAP or Null. Enc Priority 1 is used in the first call attempt; if this fails, then Priority 2 is used and so on.

### IP Address

Specifies the destination's IP address.

### CUD Field Usage

This field is for IPX to X.25 address mapping only. It determines how the Call User Data (CUD) field is filled in when call request packets are received for IPX. The CUD field can be either Standard or Proprietary. Standard indicates that the usage is protocol multiplexing used in RFC 1356. Proprietary indicates a proprietary CUD field that can only be used with 2210 or compatible routers. The default is Standard.

### IPX Host Number

Specifies the IPX host number of the destination.

### X.25 Address

Specifies the X.121 DTE address of the remote DTE connecting to the router X.25 interface. The maximum address length is 15 digits.

### pref cug

Specifies the preferred closed user group number for this DTE. The DTE uses this CUG when placing outgoing calls.

**Valid values:** 0 to 9999

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the closed user group facility using the **national enable** command.

**CUG** Specifies the closed user group numbers for this DTE. Up to five CUGs may be defined, including the pref CUG.

**Valid values:** 0 to 9999

## Configuring the X.25 Network Interface

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the closed user group facility using the **national enable** command.

### **pref bi-cug**

Specifies the bilateral closed user group number for this DTE. The DTE uses this CUG when placing outgoing calls.

**Valid values:** 0 to 9999

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the bilateral closed user group facility using the **national enable** command.

**bi-cug** Specifies the bilateral closed user group numbers for this DTE. Up to five CUGs may be defined.

**Valid values:** 0 to 9999

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the bilateral closed user group facility using the **national enable** command.

**cugs** Specifies the closed user group number for this X.25 interface.

**Valid values:** 0 to 9999

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the closed user group facility using the **national enable** command.

### **Example:**

```
add cugs
Pref CUG [ ]? 23
CUG (2) [ ]? 24
CUG (3) [ ]? 25
CUG (4) [ ]? 26
CUG (5) [ ]? 27
```

### **pref cug**

Specifies the preferred closed user group number for this DTE. This DTE uses this CUG when placing outgoing calls.

**Valid values:** 0 to 9999

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the closed user group facility using the **national enable** command.

**cug** Specifies the closed user group numbers for this DTE. Up to five CUGs may be defined.

**Valid values:** 0 to 9999



## Configuring the X.25 Network Interface

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the closed user group facility using the **national enable** command.

### bi-cugs

Specifies the closed user group number for this DTE.

**Valid values:** 0 to 9999

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the closed user group facility using the **national enable** command.

#### Example:

```
add bi-cugs
Pref BI-CUG [ ]? 23
BI-CUG (2) [ ]? 24
BI-CUG (3) [ ]? 25
BI-CUG (4) [ ]? 26
BI-CUG (5) [ ]? 27
```

### pref bi-cug

Specifies the preferred closed user group number for this DTE. This DTE uses this BI-CUG when placing outgoing calls.

**Valid values:** 0 to 9999

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the bilateral closed user group facility using the **national enable** command.

**bi-cug** Specifies the closed user group numbers for this DTE. Up to five BI-CUGs may be defined.

**Valid values:** 0 to 9999

**Default value:** None

**Note:** You will not be prompted for this value if you have not enabled the bilateral closed user group facility using the **national enable** command.

### htf-address

Adds a Defense Data Network (DDN) X.25 address translation.

#### Example:

```
add htf-address
Protocol [IP]
Convert HTF address
```

#### Protocol

Specifies the protocol that you are running over the X.25 interface. DDN supports IP only.

#### Convert HTF address

Converts the protocol address to a destination X.121 address in Host Table Format (HTF) format. Also see `ddn-address-translations` in the Enable/Disable commands section.

## Configuring the X.25 Network Interface

### protocol

Enables a protocol encapsulation and defines the associated parameters.

#### Example:

```
add protocol
Protocol [IP]?
Window Size [2]?
Default Packet Size [128]?
Maximum Packet Size [256]?
Circuit Idle Time [30]?
Max VCs [4]?
Pref CUG []? 1
CUG (2) []? 2
CUG (3) []? 3
CUG (4) []? 4
CUG (5) []? 5
Pref BI-CUG []? 11
BI-CUG (2) []? 12
BI-CUG (3) []? 13
BI-CUG (4) []? 14
BI-CUG (5) []? 15
```

#### QLLC example:

```
X.25 Config> add prot
Protocol [IP]? dls
Idle timer [30]?
QLLC response timer (in decaseconds) [2]?
QLLC response count [3]?
Accept Reverse Charges [N]?
Request Reverse Charges [N]?
Station Type (1) PRI (2) SEC (3) (PEER) [3]?
Max Packet Size [128]?
Packet window size [7]?
Max Message Size [1500]?
Call User Data (in hex, 0 for null) []?
Pref CUG []? 20
CUG (2) []? 21
CUG (3) []?
Pref BI-CUG []?
```

### Protocol

Specifies which protocol's encapsulation parameters you want to add: APPN, XTP, IP, DECnet, IPX, DLSw, or Banyan VINES. The default is IP.

### Window Size

Specifies the maximum negotiable packet window size, the number of packets that can be outstanding before requiring packet confirmation. The default is 2. The window size can be negotiated down to 1 by the called DTE.

Related configuration parameters are:

- Set Default Window

### Default Packet Size

Specifies the default requested packet size for SVCs. This value serves as the lowest negotiable packet size and must be equal to or less than the maximum packet size specified with the **national set packet-size** command. The maximum *default packet size* is 4096 bytes. The default value for this parameter is 128 bytes.

Related configuration parameters are:

- National Set Packet Size Default
- National Set Packet Size Maximum

### Maximum Packet Size

Specifies the maximum negotiable packet size for SVCs. This value

## Configuring the X.25 Network Interface

must be equal to or less than the maximum packet size specified with the **national set packet-size** command. The default value for this parameter is 256 bytes. The maximum value that can be configured for this parameter is 4096 bytes. This value is utilized in calculating the maximum frame size for this X.25 interface.

Related configuration parameters are:

- National Set Packet Size Default
- National Set Packet Size Maximum

### Circuit Idle Time

Specifies the number of seconds that an SVC can be idle before it is cleared by the router. The range is 0 to 65365. The default is 30 seconds. A 0 (zero) specifies that the circuit is never cleared by the router.

### Maximum VCs

Specifies the maximum number of circuits that are open to the same DTE address for a protocol. Refer to RFC 1356 for information on utilizing this parameter. The Valid range is 1 to 10. The default is 4.

### pref CUG, CUG, pref bi-cug, bi-cug

See **add address** command.

### The following are QLLC unique parameters:

#### QLLC response timer

The number of seconds to wait for a Q-response packet before retransmitting.

#### QLLC response count

The maximum number of times QLLC will retransmit. Upon exhausting this number of retries, the upper layer is notified which may result in the circuit being cleared or reset by the router.

### Accept Reverse Charges

Allows this protocol to override the setting of this National Personality parameter. This does not affect the National Personality parameter.

### Request Reverse Charges

Allows this protocol to override the setting of this National Personality parameter. This does not affect the National Personality parameter.

### Station Type

Specifies the default station type for this protocol:

**Pri** Primary Station

**Sec** Secondary Station

**Peer** Peer Station

### Max message size

The maximum message size for this protocol. Specify a value that is less than, or equal to, the Max MTU size of the interface.

## Configuring the X.25 Network Interface

### Call User Data

Specifies the default CUD field used in call packets for this protocol. Specify from 1-to-16 characters. If you do not specify characters, the default 0xC3 is used.

**pvc** Adds PVC, window size, and packet size definitions.

### Example: add pvc

#### IP example:

```
Protocol [IP]? IP
Packet Channel Range Start [1]?
Destination X.25 Address[]?
Packet Channel Range End [1]?
Window Size [2]?
Packet Size [128]?
```

### Protocol

Specifies which protocol's encapsulation you want to modify: APPN, XTP, DECnet, Banyan Vines, DLSw, IP or IPX. The default is IP.

### Packet Channel Range Start

Specifies the starting circuit number of this range of PVCs.

### Packet Channel Range End

Specifies the last circuit number of this range of PVCs. Defaults to the value of the Packet Channel Range Start.

### Destination X.25 Address

Specifies the X.25 address of the PVC's destination.

### Remote Address

Specifies the remote address for caller ID on received calls.

### Window Size

Specifies the number of packets that can be outstanding before requiring packet confirmation. The default is 2.

Related configuration parameters are:

- Set Default Window

### Packet Size

Specifies the maximum negotiable packet size for PVCs. This value must be equal to or less than the maximum packet size specified with the **national set packet-size** command. The default value for this parameter is 128 bytes. The maximum value that may be configured for this parameter is 4096 bytes. The maximum for X.31 is 256 bytes. This value is utilized in calculating the maximum frame size for this X.25 interface.

Related configuration parameters are:

- Nat Set Packet Size Default
- Nat Set Packet Size Maximum

## Change

Use the **change** command to change an X.121 address, an DDN X.25 Address, a protocol configuration, or a PVC definition.

**Note:** To change an IP address that is associated with an X.121 address, you must delete the record that contains the address correlation, then redefine the address mapping.

## Configuring the X.25 Network Interface

### Syntax:

**change**                                    address  
    htf-address  
    protocol  
    pvc

### address

Modifies a X.121 address translation. The prompts that appear depend on the protocol that is changing.

#### Example: change address

##### IP example:

```
Protocol [IP] IP
IP Address [0.0.0.0]?
Enc Priority []?
X.25 Address [00000124040000]?
```

##### IPX example:

```
Protocol [IP] IPX
CUD Field Usage (Standard or Proprietary) [Standard]?
IPX Host number (in hex) []?
Enc Priority []?
X.25 Address [00000124040000]?
```

### htf address

Changes a Defense Data Network (DDN) X.25 address translation.

#### Example:

```
change htf-address
Protocol [IP]
Change HTF address [0.0.0.0]?
New HTF address [10.4.0.124]?
```

### protocol

Changes a protocol configuration definition.

#### Example:

```
change protocol
Protocol [IP]
Window Size [2]
Default Packet Size [128]
Maximum Packet Size [256]
Circuit Idle Time [30]
Maximum VCs [6]
```

#### QLLC example:

```
X.25 Config> change prot
Protocol [IP]? d1s
Idle Timer [30]?
QLLC response timer (in decaseconds) [15]?
QLLC response count [255]?
Accept Reverse Charges [N]?
Request Reverse Charges [N]?
Station Type (1) PRI (2) SEC (3) PEER [3]?
Max Packet Size [256]?
Packet Window size [7]?
Max message size [2048]?
Call User Data (in HEX, 0 for Null) []? C3010000525450
```

**pvc** Changes PVC, window size, and packet size definitions.

**Note:** To change the protocol, packet channel or destination X.25 address, you must delete the record which contains the definition, then add it

## Configuring the X.25 Network Interface

back with the changed parameters. A change will apply to *all* PVCs in the range of circuits defined by the Packet Channel Range Start parameter.

### Example:

```
change pvc
Protocol [IP]? IP
Packet Channel Range Start[1]?
Destination X.25 Address [ ]?
Packet Channel Range End [1]
Window Size [2]?
Packet Size [128]?
```

## Delete

Use the **delete** command to delete an X.121 address, a protocol configuration definition, or a PVC definition.

### Syntax:

```
delete                address
                        bi-cugs
                        cugs
                        protocol . . .
                        pvc
```

### address

Deletes an X.121 address translation.

#### Example: delete address

#### IP example:

```
Protocol [IP]?
IP Address [0.0.0.0]?
```

#### IPX example:

```
Protocol [IP]? IPX
IPX Host Number (in hex) [2]?
```

### bi-cugs

Deletes a bilateral closed user group number used by this interface.

#### Valid values:

- Y** Deletes the current CUG.
- N** Does not delete the current CUG.
- ALL** Deletes all remaining CUGs.
- Q** Stops deleting any remaining CUGs.

#### Example:

```
delete bi-cugs
Delete Pref BI-CUG [Y]?
Delete BI-CUG (2) [Y]? N
Delete BI-CUG (3) [Y]? q
```

**cugs** Deletes the closed user group numbers used by this interface. This command works similar to the **delete bi-cug** command.

#### Example:

## Configuring the X.25 Network Interface

```
del cug
Delete Pref CUG [Y]?
Delete CUG (2) [Y]?
Delete CUG (3) [Y]? q
```

### **protocol** *prot-type*

Deletes a protocol encapsulation configuration definition. *Prot-type* is the name or number of the protocol encapsulation that is currently defined in the router's configuration.

**pvc** Deletes a PVC definition. *All* PVCs in the range of circuits defined by the Packet Channel Range Start parameter will be deleted.

### **Example:**

```
delete pvc
Protocol [IP]?
Destination X.25 Address [ ]?
Packet Channel Range Start [ ]?
```

## List

Use the **list** command to display the current configuration for the specified parameter.

### **Syntax:**

```
list          address
                all
                cugs
                detailed
                protocols
                pvc
                summary
```

### **address**

Lists all the X.121 address translations.

### **Example:**

```
list address
If#      Prot #      Active Enc      Protocol ->      X.25 address
1        0(IP)        CC              10.1.2.3 ->      1238765742
1        7(IPX)        SNAP           10              ->      12389
                CUGS: 11 12 13 14 15      BI-CUGS: 21 22
```

**all** Lists all the X.25 addresses, National Personality parameters, all defined protocols and their values, and all defined PVCs.

### **Example:**

```
list all
X.25 Configuration Summary
Node Address:          313131
Max Calls Out:         4
Inter-Frame Delay:    0      Encoding: NRZ
Speed:                 64000  Clocking: Internal
MTU:                   2048   Cable: V.35 DCE
Lower DTR: Disabled
Default Window:        2      SVC idle: 30 seconds
National Personality:  GTE Telenet (DTE)
PVC                    low: 1   high: 1
Inbound                low: 0   high: 0
```

## Configuring the X.25 Network Interface

```
Two-Way          low: 2    high: 64
Outbound         low: 0    high: 0
Throughput Class in bps Inbound: 2400
Throughput Class in bps Outbound: 2400
```

### X.25 National Personality Configuration

```
Request Reverse Charges: on  Accept Reverse Charges: on
Frame Extended seq mode: off Packet Extended seq mode: off
Incoming Calls Barred: off  Outgoing Calls Barred: off
Throughput Negotiation: on  Flow Control Negotiation: on
Suppress Calling Addresses: off DDN Address Translation: off
Truncate Called Addresses: off
Number of digits to truncate called addresses to: 2
CUG Support: off          BI-CUG Support: off
CUG Outgoing Access: off  CUG Incoming Access : off
BI-CUG Outgoing Access: off  CUG 0 Override: off
CUG Isertion: off        CUG deletion: off
Call Request Timer:      20 decaseconds
Clear Request Timer:    18 decaseconds (1 retries)
Reset Request Timer:    18 decaseconds (1 retries)
Restart Request Timer:  18 decaseconds (1 retries)
Min Recall Timer       10 seconds
Min Connect Timer      90 seconds
Collision Timer        5 seconds
T1 Timer: 4.00 seconds  N2 timeouts: 20
T2 Timer: 2.00 seconds  DP Timer: 500 milliseconds
Standard Version: 1984  Network Type: CCITT
Disconnect Procedure: passive
Window Size  Frame: 7  Packet: 2
Packet Size  Default: 128  Maximum: 256
```

### X.25 protocol configuration

No protocols defined

### X.25 PVC configuration

No PVCs defined

### X.25 address translation configuration

No address translations defined

**cugs** Lists the CUG and BI-CUG numbers for each X.25 interface in this device.

#### Example:

```
1 i cugs
CUGS: 23 24 25 26 27
```

#### detailed

Lists the value of all the default parameters that the **national set** command modifies. Descriptions of the screen display are listed in the **national set** command described later in this chapter.

#### Example:

```
list detail
```

### X.25 National Personality Configuration

```
Follow CCITT: on      OSI 1984: on      OSI 1988: off
Request Reverse Charges: off  Accept Reverse Charges: off
Frame Extended seq mode: off  Packet Extended seq mode: off
Incoming Calls Barred: off   Outgoing Calls Barred: off
Throughput Negotiation: on   Flow Control Negotiation: off
Suppress Calling Addresses: off DDN Address Translation: off
Truncate Called Addresses: off
Number of digits to truncate called address to: 2
CUG Support: off          BI-CUG Support: off
CUG Outgoing Access: off  CUG Incoming Access : off
BI-CUG Outgoing Access: off  CUG 0 Override: off
CUG Isertion: off        CUG deletion: off
T21 (Call Request Timer): 20 decaseconds
T23 (Clear Request Timer): 18 decaseconds (1 retries)
T22 (Reset Request Timer): 18 decaseconds (1 retries)
T20 (Restart Request Timer): 18 decaseconds (1 retries)
Min Recall Timer: 10 seconds
```



## Configuring the X.25 Network Interface

```
Min Connect Timer:      90 seconds
Collision Timer:        8 seconds
T1 Timer: 4.00 seconds  N2 timeouts: 20
T2 Timer: 0.00 seconds  DP Timer: 500 milliseconds
Standard Version:      1984   Network Type: CCITT
Disconnect Procedure:  active
Window Size   Frame: 7   Packet: 2
Packet Size   Default: 256 Maximum: 256
```

### protocols

Lists all the defined protocol configurations. See “Add” on page 356 for a description of the parameters.

#### Example:

```
list protocols
```

```
X.25 protocol configuration
```

Protocol Number	Window Size	Packet-Size Default	Packet-Size Maximum	Idle Time	Max VCs
0(IP)	2	128	256	30	4

CUGS: 11 12 13 14 15      BI-CUGS: 21 22

```
QLLC Protocols
```

Protocol Number	Packet Window	Packet MaxSize	Idle Time	Response Timer	Response Count	Reverse Charges Accept	Reverse Charges Request	Max Message	Station Type
26(DLSW)	7	256	30	15	255	N	N	2048	PEER

CUD : [C3 01 00 00 52 54 50 ]  
CUGS: 11 12 13 14 15      BI-CUGS: 21 22

**pvc** Lists all the defined PVCs.

#### Example:

```
list pvc
```

```
X.25 PVC configuration
```

Prtcl	X.25 Address	Active	Enc	Window	Pkt len	Pkt chan
0	8383838383	CC		4	1024	3 = 3

### summary

Lists all the values established by the **set** and **enable** commands. These values modify the X.25 configuration.

#### Example:

```
list summary
```

```
X.25 Configuration Summary
```

```
Node Address:      313131
Max Calls Out:     4
Inter-Frame Delay: 0   Encoding: NRZ
Speed:             64000 Clocking: Internal
MTU:               2048 Cable: V.35 DCE
Lower DTR:         Disabled
Default Window:    2   SVC idle: 30 seconds
National Personality: GTE Telenet (DTE)
PVC                low: 1 high: 1
Inbound            low: 0 high: 0
Two-Way            low: 2 high: 64
Outbound           low: 0 high: 0
Throughput Class in bps Inbound: 2400
Throughput Class in bps Outbound: 2400
```

---

## Accessing the Interface Monitoring Process

To monitor information related to the X.25 network interface, access the interface monitoring process as follows:

1. At the OPCON prompt, enter **talk 5**. For example:

## Configuring the X.25 Network Interface

```
* talk 5  
+
```

The GWCON prompt (+) is displayed on the console. If the prompt does not appear when you first enter GWCON, press **Return** again.

2. At the GWCON prompt, enter the **configuration** command to see the protocols and networks for which the router is configured. For example:

```
+ configuration
```

See page “Configuration” on page 135 for sample output of the **configuration** command.

3. Enter the **network** command and the number of the X.25 interface.

```
+ network 2  
X.25>
```

The X.25 monitoring prompt is displayed on the console. You can then view information about the X.25 interface by entering the X.25 monitoring commands.

---

## X.25 Monitoring Commands

This section summarizes and explains all the X.25 monitoring commands. The X.25 monitoring commands allow you to view the parameters and statistics of the interfaces and networks that transmit X.25 packets. Monitoring commands display configuration values for the physical, frame, and packet levels. You also have the option of viewing the values for all three protocol levels at once.

Enter the X.25 monitoring commands at the X.25> prompt. Table 54 shows the commands.

*Table 54. X.25 Monitoring Command Summary*

Monitoring Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
List	Lists individual PVC or SVC statistics and general information.
Parameters	Displays the current parameters for any level of the X.25 configuration.
Reset	Resets the dly-recall and min-recall timers for all peers on this interface, or resets timers for a specific destination by entering the X.25 destination address. This will allow the calling sequence to start over.
Statistics	Displays the current statistics for any level of the X.25 configuration.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## List

Use the **list** command to display the current active PVCs and SVCs.

### Syntax:

```
list                pvcs  
                    svcs
```

**pvc** Displays the configured permanent virtual circuits.

**svc** Displays the active switched virtual circuits.

## Configuring the X.25 Network Interface

### Example:

```
list svc
```

LCN/State	Destination Address	Originate Call	Transmits Queued	Protocol Encapsulated	Totals Xmts Rcvs Resets		
13 D	898280077113	YES	0	IP	8943	261	1
20 D	898280077114	NO	0	IP	943	43	0
42 P	898280077116	YES	6	IP	0	0	0
23 C	898280077117	YES	0	IP	3054	110	0

D - Data Transfer      P - Call Progressing  
C - Call Clearing

## Parameters

Use the **parameters** command to display the current parameters for any level of the X.25 configuration.

### Syntax:

```
parameters                    all  
                                 frame  
                                 packet  
                                 physical
```

**all**      Displays the parameters for the packet, frame, and physical levels.

**frame**    Displays the parameters for the frame level.

### Example:

```
parameters frame  
Frame Layer Parameters:  
Maximum Frame Size = 262 Maximum Window Size = 7  
Protocol Enabled = YES Equipment Type = DTE  
T1 Retransmit Timer = 4 T2 Acknowledge Timer = 2  
N2 Retry Counter = 20 Disconnect Procedure = PASSIVE  
Disconnect Timer = 500 Network Type = GTE  
Protocol Options: Inhibit Idle RRs No MOD 128 NO Enable SARM NO
```

### packet

Displays the parameters for the packet level.

### Example:

```
parameters packet  
Packet Layer Parameters:  
Default Packet Size = 128 Maximum Packet Size = 256  
Log 2 Packet size = 2 Acknowledge Delay = 0  
Layer Enabled = YES Default Window Size = 2  
Lowest SVC = 1 Highest SVC = 64  
Lowest PVC = 0 Highest PVC = 0  
T20 (Restart) = 18 R20 (Retry) = 1  
T21 (Call) = 20  
T22 (Reset) = 18 R22 (Retry) = 1  
T23 (Clear) = 18 R23 (Retry) = 1  
Network Type = GTE Equipment Type = DTE  
Recall Timer = 10 seconds  
Min Connect = 90 seconds  
Collision = 5 seconds
```

### physical

Displays the parameters for the physical level.

### Example:

```
parameters physical  
Physical Layer Parameters:  
Interface Type = V.35  
  
Maximum Frame Size = 264 InterFrame Delay = 2  
Configured Speed = 0 Clocking = External  
Encoding = NRZ  
Protocol Enabled = Yes
```

## Configuring the X.25 Network Interface

### Reset

Use the **reset** command to reset the dly-recall or min-recall timer and restart the calling attempts for all X.25 destinations or for a particular X.25 destination.

#### Syntax:

```
reset                all-peer-recall-tmrs  
                    peer-recall-tmr
```

#### **all-peer-recall-tmrs**

Resets the calling sequence for all X.25 destinations (peers) on this interface. So, if a destination was in the middle of dly-recall, this can be used to reset the timer and start the sequence over.

#### **Example: reset all-peer**

This command will return one of the following messages:

- Reset delay recall timers completed.
- No recall timers running for this net.
- No peers located for this net.

#### **peer-recall-tmr**

Resets the calling sequence for a particular X.25 destination (peer) on this interface. Enter the X.25 destination to be reset.

#### **Example 1: reset peer-recall-tmr**

```
reset peer-recall-tmr  
Enter X.25 address: 89828007713
```

This command will return one of the following messages:

- Reset delay recall timers completed.
- No recall timers running for this net.

#### **Example 2: reset peer-recall-tmr 89828007713**

```
reset peer-recall-tmr 89828007713
```

This command will return one of the following messages:

- Reset delay recall timers completed.
- No recall timers running for this net.

### Statistics

Use the **statistics** command to display the current statistics of any level of the X.25 configuration.

#### Syntax:

```
statistics  
all  
frame  
packet  
physical
```

**all** Displays the statistics for the packet, frame, and physical levels.

## Configuring the X.25 Network Interface

**frame** Displays the statistics for the frame level.

### Example:

```
statistics frame
Frame Layer Counters:      Received      Transmitted
Information Frames        0              0
RR Command                0              0
RR Response               0              0
RNR Command               0              0
RNR Response              0              0
REJ Command               0              0
REJ Response              0              0
SABM                      0              71
SABME                     0              0
UA                         0              0
DISC                      0              0
DM                         0              0
FRMR                      0              0
Total Bytes               0              0
T1 Timeouts 0 T2 Timeouts 0 N2 Timeouts 1
Bad Address 0 Unsolicited F-Bit 0 Invalid Ctl 0
Frame Layer Miscellaneous:
Queued Output Frames = 0 Protocol Layer State = Link Setup
Send Sequence N(S) = 0 Receive Sequence N(R)= 0
```

**packet**

Displays the statistics for the packet level.

### Example:

```
statistics packet
Packet Counters:      Received      Transmitted
Call Request          0              0
Call Accepted         0              0
Clear Request         0              0
Clear Confirm         0              0
Interrupt Request     0              0
Interrupt Confirm     0              0
RR Packet             0              0
RNR Packet            0              0
REJ Packet            0              0

Reset Request         0              0
Reset Confirm         0              0
Restart Request       0              0
Restart Confirm       0              0
Diagnostic            0              0
Data Packet           0              0
Data Bytes            0              0
Buffers Queued        0              0
Invalid Packets Received = 0
Switched Circuits Opened = 0
```

**physical**

Displays the statistics for the physical level.

### Example:

```
statistics physical
X.25 Physical Layer Counters:
Rx Bytes              0 Tx Bytes              0

Adapter cable:      V.35 DTE

V.24 circuit: 105 106 107 108 109 125 141
Nicknames:  RTS CTS DSR DTR DCD RI LL
PUB 41450:  CA CB CC CD CF
State:      ON ON ON ON ON OFF OFF

Line speed:         unknown
Last port reset:   12 minutes, 21 seconds ago

Input frame errors:
CRC error           0 alignment (byte length) 0
missed frame       0 too long (> 0 bytes) 0
aborted frame      0 DMA/FIFO overrun      0
L & F bits not set 0

Output frame counters:
DMA/FIFO underrun errors 0 Output aborts sent 0
```

### X.25 Network Interfaces and the GWCON Interface Command

While X.25 interfaces have their own monitoring processes for monitoring purposes, the router also displays complete statistics for installed network interfaces when you use the **interface** command from the GWCON environment. (For more information on the **interface** command, refer to Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands).

### Statistics Displayed for X.25 Interfaces

The following statistics display when you run the **interface** command from the GWCON environment for X.25 interfaces:

```
+interface
2
Nt Nt' Interface      CSR Vec   Passed   Failed   Failed
2 2  X25/0             81640 5C      0        0        0

X.25 MAC/data-link on SCC Serial Line interface
Interface State: DCD CTS Packet Layer Frame Layer
                  OFF OFF      DOWN      DOWN

Packet Counters:          Received          Transmitted
Data Packet                0                0
Data Bytes                 0                0
Buffers Queued              0                0
Invalid Packets Received = 0
Switched Circuits Opened = 0

Frame Layer Counters:     Received          Transmitted
Information Frames        0                0

X.25 Physical Layer Counters:
Rx Bytes                   0 Tx Bytes          0

Adapter cable:            Generic DTE RISC Microcode Revision: 2

V.24 circuit: 105 106 107 108 109 125 141
Nicknames:    RTS CTS DSR DTR DCD RI LL
PUB 41450:    CA CB CC CD CF
State:        ON  OFF OFF ON  OFF OFF OFF

Line speed:           unknown
Last port reset:     23 minutes, 48 seconds ago

Input frame errors:
CRC error             0 alignment (byte length) 0
missed frame          0 too long (> 0 bytes)   0
aborted frame         0 DMA/FIFO overrun       0
L & F bits not set   0

Output frame counters: DMA/FIFO underrun errors 0 Output aborts sent 0

Interface buffer pool: Total = 30, Free = 30
```

The following list describes the interface statistics:

**Nt** Global interface number

**Nt '** Reserved for future dial circuit use

**Interface**

Interface name and number (within interfaces of the same type)

**CSR** COMM and Status Registers address

**Vec** Interrupt vector

**Self-Test Passed**

Number of times self-test succeeded

## Configuring the X.25 Network Interface

### **Self-Test Failed**

Number of times self-test failed

### **Maintenance Failed**

Number of maintenance failures

### **Interface state**

Display the current state of the input modem control signals, the packet layer (X.25 layer 3), and the frame layer (X.25 layer 2).

### **Packet Counters**

Provides statistics on packets received and transmitted.

### **Data Packets**

Displays the number of data packets the interface transmits receives on the network

### **Data Bytes**

Displays the number of data bytes the interface transmits receives on the network.

### **Buffers Queued**

Displays the number of buffers currently queued for transmission over the network. These may be frame or packet layer supervisory messages as well as forwarder packets.

### **Invalid Packets Received**

Displays the number of invalid X.25 packets received from the network.

### **Switched Circuits Open**

Displays the number of switched circuits currently open.

### **Frame Layer Counters**

Provides statistics generated from Frame Layer counters.

### **Information Frames**

Displays the number of X.25 Information frames the interface has transmitted and received.

### **X.25 Physical Layer Counters**

Provides statistics generated from Physical Layer counters.

### **RX Bytes**

Display the number of bytes received by the Physical layer.

### **TX Bytes**

Displays the number of bytes transmitted by the Physical layer.

### **V.24 circuit Nicknames State**

The circuits, control signals, pin assignments and their state (ON or OFF).

**Note:** The symbol - - - in monitoring output indicates that the value or state is unknown.

### **Line speed**

The transmit clock rate.

### **Last port reset**

The length of time since the last port reset.

### **Input frame errors:**

#### **CRC error**

The number of packets received that contained checksum errors and as a result were discarded.

## Configuring the X.25 Network Interface

### **Alignment**

The number of packets received that were not an even multiple of 8 bits in length and as a result were discarded.

### **Too short**

The number of packets that were less than 2 bytes in length and as a result were discarded.

### **Too long**

The number of packets that were greater than the configured size, and as a result were discarded.

### **Aborted frame**

The number of packets received that were aborted by the sender or a line error.

### **DMA/FIFO overrun**

The number of times the serial interface card could not send data fast enough to the system packet buffer memory to receive them from the network.

### **Missed frame**

When a frame arrives at the device and there is no buffer available, the hardware drops the frame and increments the missed frame counter.

### **L & F bits not set**

On serial interfaces, the hardware sets input-descriptor information for arriving frames. If the buffer can accept the complete frame upon arrival, the hardware sets both the last and first bits of the frame, indicating that the buffer accepted the complete frame. If either of the bits is not set, the packet is dropped, the L & F bits not set counter is incremented, and the buffer is cleared for reuse.

**Note:** It is unlikely that the L & F bits not set counter will be affected by traffic.

### **Output frame counters:**

#### **DMA/FIFO underrun errors**

The number of times the serial interface card could not retrieve data fast enough from the system packet buffer memory to transmit them onto the network.

#### **Output aborts sent**

The number of transmissions that were aborted as requested by upper-level software.



---

## Chapter 26. Using XTP

This chapter describes the X.25 Transport Protocol (XTP) for transporting X.25 traffic over TCP/IP. Included are the following sections:

- “The X.25 Transport Protocol”
- “DTE Address Wildcards” on page 377
- “XTP Backup Peer Function” on page 378
- “Local XTP” on page 379
- “XTP and Closed User Groups” on page 379
- “Configuring XTP” on page 380
- “Configuration Procedures” on page 380

---

### The X.25 Transport Protocol

X.25 Transport Protocol (XTP) provides you with the services of a “protocol forwarder.” A protocol forwarder is the focal point for inbound and outbound protocol packet processing. Forwarders receive packets on one network interface and send them to another interface.

XTP is designed to work with X.25 devices that are situated at multiple remote sites. In such environments, XTP can eliminate the use of X.25 packet-switched networks for communicating with servers at one or more centralized locations.

To enable this, you use routers at the server and remote locations to encapsulate the data and deliver the X.25 packets between the clients and server via TCP/IP.

Figure 19 on page 376 illustrates a network configuration before and after using XTP.

## Using XTP

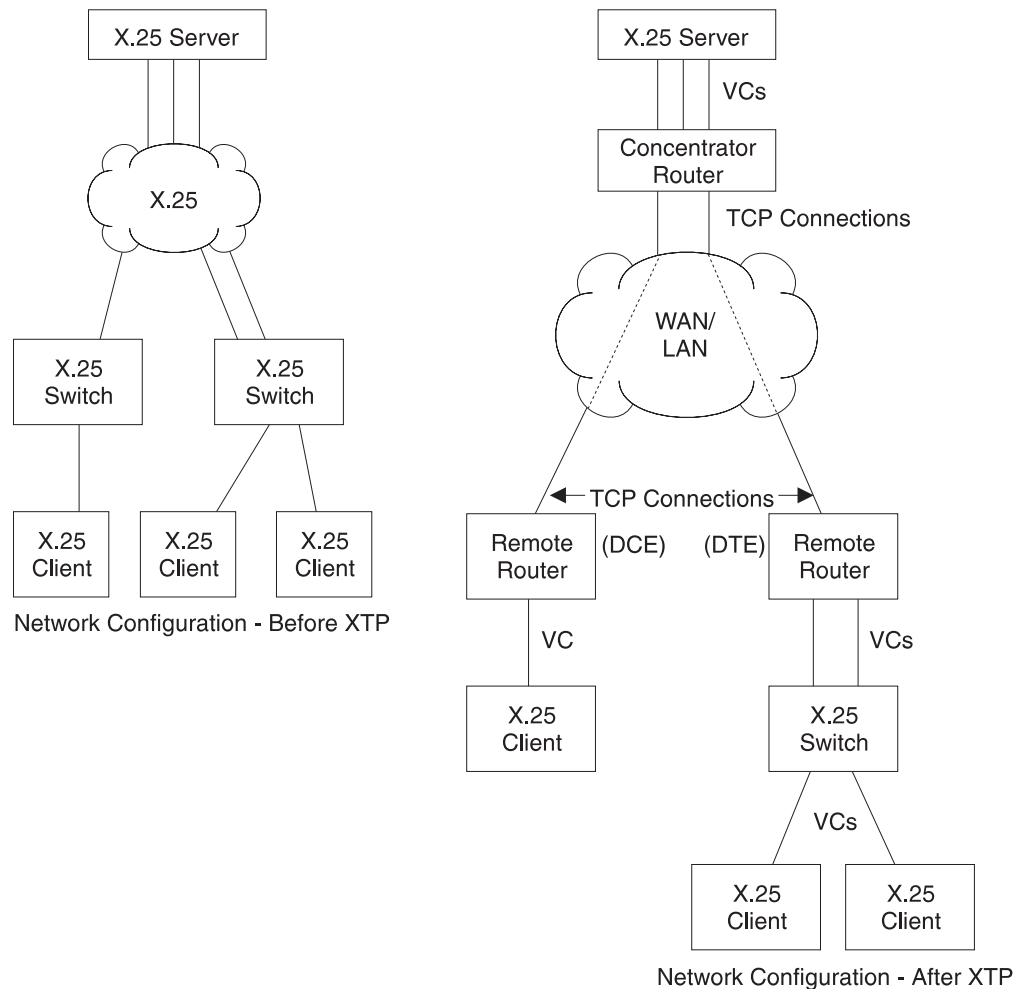 


Figure 19. Configuration Before and After XTP

## Configuration Information

X.25 recognizes an incoming call for XTP based on the node addresses configured for XTP. Therefore, in order to transport X.25 traffic between the X.25 nodes, you must configure X.25 to map to the data terminal equipment (DTE) address and IP addresses of the routers to which the nodes are connected.

For example, in Figure 19, you configure X.25 clients on remote routers and on the concentrator router. *Remote routers* in this example are the routers that connect the X.25 clients to the TCP/IP network that is used to access the X.25 server; the *concentrator router* connects the X.25 server to the TCP/IP network that is used to access the remote routers.

**Note:** When you configure XTP, if a router is connected to an X.25 switch, it is considered to be DTE. If it is not connected to a switch, it is considered to be DCE (Data Circuit-Terminating Equipment).

To configure a router for XTP, define the following information from the XTP config> prompt and then restart the router:

- Local DTEs
- Peer routers
- Remote DTEs
- PVCs
- CUGs

#### Local DTEs

X.25 nodes connected to the X.25 interfaces on the router

To configure local DTEs, use the X.121 address that is assigned to the local DTE. Multiple local DTEs can be configured on an interface.

#### Peer Routers

Routers with which you communicate over TCP/IP

Peer routers can differ depending on “point of view”. For example, in Figure 19 on page 376, the *two remote routers* are the peer routers from the perspective of the concentrator router. However, the *concentrator router* is the peer router from the perspective of the two remote routers.

You designate the peer router by its internal IP address.

#### Remote DTEs

Remote X.25 nodes to which the local X.25 nodes open connections and exchange data. Use the X.121 address that is assigned to the remote DTE.

Configure a *unique* IP address for each peer router. For example, in Figure 19 on page 376, the concentrator router must know the unique IP address of each remote router, and each remote router must know the IP address of the concentrator router.

**PVC** A permanent channel that remains connected after X.25 restarts.

PVCs, because they are constant channels, are similar to leased telephone lines. A PVC, in the XTP context, is a PVC from a local X.25 DTE node to a remote X.25 DTE.

When you configure a router for PVCs, map the IP address of the peer router and the PVC number of the remote and local DTE. A PVC is identified by four pieces of information which are the:

- Logical channel numbers of the local PVCs
- X.121 address of the local DTE
- Logical channel numbers of the PVCs on the remote (peer) router
- X.121 address of the remote DTE

**CUGS** The closed user groups for the XTP protocol. See “Understanding Closed User Groups” on page 338.

Additional configuration information can be found at “Configuring XTP” on page 380 and at “XTP Configuring Commands” on page 389.

---

## DTE Address Wildcards

The “\*” wildcard is available for DTE address configuration. This is in addition to the “?” character that can be specified in a DTE address to represent any one digit in that position in the address. For example, a specification of “1?2?3” can match address 18243 where the first, third, and fifth digits are 1, 2, and 3, respectively.

## Using XTP

The "\*" wildcard character can represent any string of zero or more digits. Its use is limited to the end of a DTE address specification. For example: "123\*", "5555\*", "9\*" or "\*". The special case of a DTE address of "\*" represents any DTE address, even a null address. The null address is useful for handling incoming calls with no calling address in the X.25 Call Request packet.

Use of the "\*" wildcard increases the chances for adding a local or a remote DTE address that conflicts with an existing address. The **add local-dte** and **add remote-dte** commands are enhanced to provide the conflicting address when the user attempts to add a DTE address that conflicts with an existing address.

**Example:** xtp config> add local-dte

```
Interface number [0]? 1
DTE address [ ] 123456
DTE address [ ]?
```

```
XTP config>add local-dte
Interface number [0]?1
DTE address [ ]?1*
DTE address conflicts with existing DTE address 123456
```

---

## XTP Backup Peer Function

The Backup Peer Function allows the association of multiple peer routers with a remote DTE. The user specifies a list of peer routers associated with a remote DTE.

Example:

```
XTP config>add rem
DTE address [ ]?123456
Peer router's internal IP Address [0.0.0.0]?10.0.0.2
Peer router's internal IP Address [0.0.0.0]?10.0.0.4
Peer router's internal IP Address [0.0.0.0]?11.0.0.1
Peer router's internal IP Address [0.0.0.0]?
```

When an incoming call for the remote DTE is received, a connection is attempted through each router in the list in the same order that they appear for the remote DTE.

## Searching for a Remote DTE

When a DTE initiates a call for a remote DTE, both DTE addresses are inspected to determine if they are acceptable for X.25 transport. If they are acceptable, the X.25 Transport protocol forwarder determines through which peer router to attempt to complete the call. It starts with the first router in the remote DTE's list of peer routers in its search. The first condition that must be met is an active TCP connection to the peer router. If there is not an active TCP connection to the peer, the next router in the list is checked. When an active TCP connection is found, an attempt is made to complete the call. The Connection Request Timer is started to time the call connection process.

The remote DTE search is terminated by one of the following events:

- Successful completion of the call through the peer router  
This completes call setup processing and ends the search for the remote DTE.
- Rejection of the call by the peer router  
This causes the search for the remote DTE to proceed to the next router in the peer router list.

- Expiration of the Connection Request Timer  
This causes the search for the remote DTE to proceed to the next router in the peer router list.

If a pass through the list of peer routers is completed without a successful connection through any of the peer routers, the call to the local DTE is cleared.

## Connection Request Timer

The Connection Request Timer is used to ensure that no call setup procedure hangs for an indeterminable time. There is a timer configured for each peer router.

Example:

```
XTP config>add peer-router
Router's internal IP Address [0.0.0.0]?10.0.0.2
Connection setup timeout [230]?60
```

The Connection Request Timer can be configured from 10 to 480 seconds. The default is 230 seconds. This default was determined based on the fact that the default setting for the X.25 Call Request Timer is 200 seconds.

The timer is started when an attempt is made to complete a call through a peer router. It is stopped when the call attempt is either accepted or rejected by the peer router.

---

## Local XTP

Local XTP allows you to route incoming X.25 traffic to the same or different interfaces on the current router. To configure local XTP, specify the router's internal IP address as a peer address on the **add peer** command.

---

## XTP and Closed User Groups

XTP supports closed user groups through the local DTE address defined by the **add local** or the **add cug** command. To enable XTP to use closed user groups, you must:

- Enable CUG or BI-CUG on the appropriate X.25 interfaces.
- Supply the XTP protocol-specific CUGs using the **add cug** and **add bi-cug** commands, if desired.
- Supply the appropriate closed user group numbers in the **add local** command. These include:
  - Closed user group number
  - Preferred closed user group number
  - Bilateral closed user group number
  - Preferred bilateral closed user group number
- Enable CUG insertion or deletion for the interface in the **national enable cug\_insertion** or **national enable cug\_deletion** commands, if desired.
- Enable the CUG 0 override option on the **national enable cug 0 override** command, if desired.

## Configuring XTP

XTP is a protocol forwarder used to transport X.25 traffic over TCP/IP. XTP allows existing X.25 devices to communicate over a TCP/IP backbone and migrate from an X.25 network to a network of your choice.

## Configuration Procedures

This section defines the detail for configuring the network displayed in Figure 20.

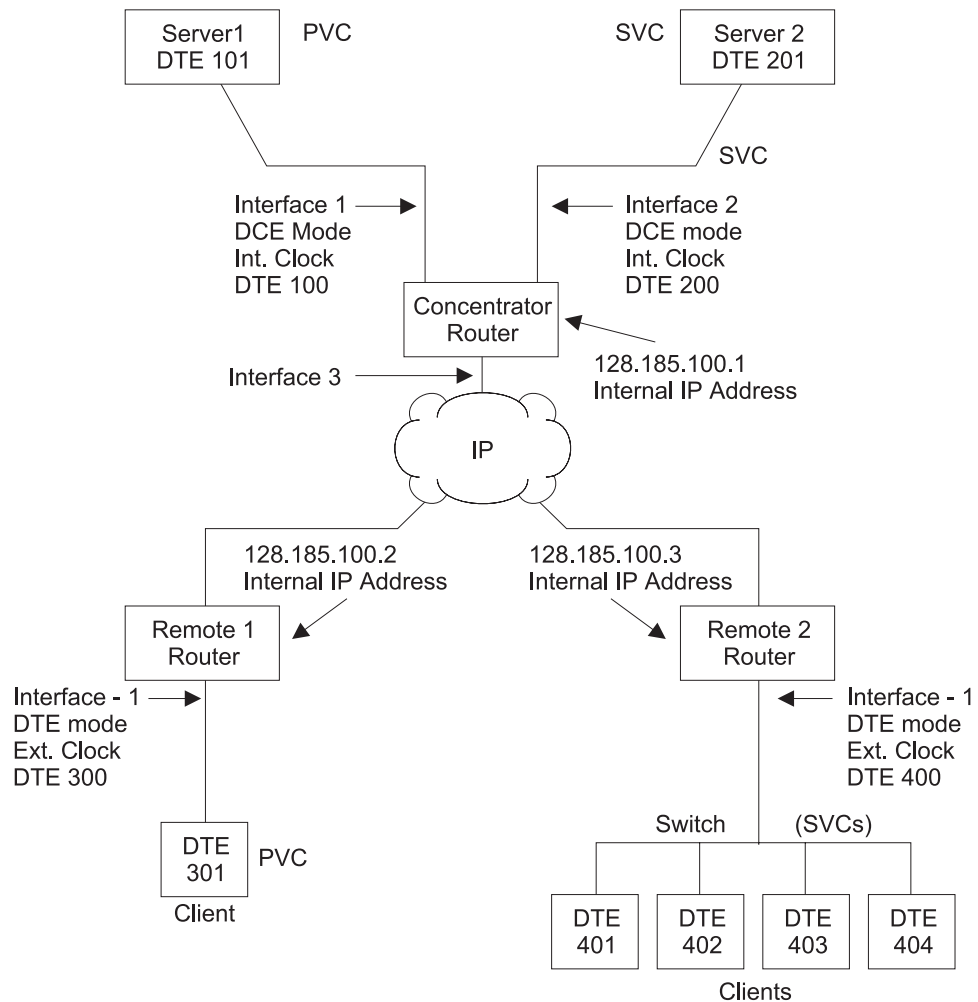 


Figure 20. Sample XTP Configuration

This configuration shows three routers, the Concentrator router, Remote 1 router, and Remote 2 router. To make XTP operational on this network, perform the following steps for each of these routers:

- Set the data link
- Configure the IP interface
- Configure X.25
- Set the National Personality values
- Define the IP address

- Set the Internal IP address
- Configure XTP

**Note:** New configurations do not take effect until you restart the router.

## Setting the Data Link

The data link defines the protocol you are using to send data packets over the network. Define the data link between the router you are configuring and each serial interface. The example in Figure 20 on page 380 configures a concentrator router with three serial interfaces, two for X.25 and one for PPP.

Set the data-link protocol for the serial interfaces:

```
Config>set data-link X25 1
Config>set data-link x25 2
Config>set data-link ppp 3
```

## Configuring the IP Interface

In Figure 20 on page 380, the IP interface is PPP; enter **network 3** at the Config> prompt to configure this PPP interface:

```
Config>network 3
PPP interface configuration
```

**Note:** This procedure does not include details about the configuration of PPP. For details, refer to *Software User's Guide*

## Configuring X.25

Before configuring XTP, configure the X.25 parameters for each interface. The following example configures the basic parameters for X.25 and is based on the topology in Figure 20 on page 380.

The parameters you need to configure depend on your network topology. For details about all the X.25 parameters, refer to *Software User's Guide*

### Interface 1

Use the following instructions to configure *Interface 1* on the concentrator router as defined in Figure 20 on page 380.

1. At the Config> prompt, enter **network** followed by the number of the X.25 interface. In this example, it is interface 1.

```
Config>network 1
X.25 User Configuration
X.25 Config>
```

2. Add the XTP protocol to the X.25 interface and define general interface values. Enter **add protocol xtp** at the X.25 Config> prompt. This command needs to be entered *one time only*.

```
X.25 Config>add protocol xtp
Window Size [2]?
Default Packet Size [128]?
Maximum Packet Size [256]?
```

3. Specify the network address by entering **set address** X.25 node address. In Figure 20 on page 380, the node address (DTE address) is 100.

```
X.25 Config>set address 100
```

## Using XTP

4. Enter **set clocking** followed by **internal** or **external** based on your router type.

```
X.25 Config>set clocking internal
```
5. Enter **set speed** followed by the access rate (line speed).

```
X.25 Config>set speed
Access rate in bps [9600]?19200
```
6. Enter **set equipment-type** and specify whether the frame and packet levels act as DCE or DTE.

```
X.25 Config>set equipment-type dce
```
7. Enter **set pvc** and define the lowest and the highest PVC you are using.

```
X.25 Config>set pvc low 1
X.25 Config>set pvc high 1
```
8. Enter **add pvc** to define individual PVCs.

```
X.25 Config>add pvc
Protocol [IP]?xtp
Packet Channel [1]?
Destination X.25 Address [ ]?101
Window Size [2]?
Packet Size [128]
```
9. (Optional) Enter **national enable truncate-called-addresses**. If you want to truncate the called address size, enter **national set truncate-called-address-size** followed by the number of digits to truncate the called DTE address to.
10. (Optional) Enable CUG support, CUG insertion, and CUG deletion as required.

## Interface 2

Use the following instructions to configure interface 2.

1. At the Config> prompt, enter **network** followed by the number of the X.25 interface. In Figure 20 on page 380, it is 2.

```
Config>network 2
X.25 User Configuration
X.25 Config>
```
2. Use the same procedures as defined in “Interface 1” on page 381 to set the following parameters for interface 2:
  - address = 200
  - clocking = internal
  - speed = 19200
  - equipment = dce
3. Enter **set svc** and define the lowest and highest SVC you are using.

There are three types of SVCs: two-way, inbound and outbound. The defaults are “svc low-two-way = 1” and “svc high-two-way = 64.” All other SVC types default to 0. For additional information on SVCs and PVCs, refer to *Software User’s Guide*

```
X.25 Config>set svc ?
X.25 Config>set svc low-inbound 0
X.25 Config>set svc high-inbound 0
X.25 Config>set svc low-outbound 0
X.25 Config>set svc high-outbound 0
X.25 Config>set svc low-two-way 2
X.25 Config>set svc high-two-way 2
```
4. Exit the X.25 Config> prompt.

```
X.25 Config>exit
Config>
```



## Setting the National Personality

Each X.25 public network has its own standard configuration. The National Personality refers to a group of 28 variables that define the characteristics of the public data network. These variables provide the router with control information for packets transferred over the link and influence the X.25 facilities used between and XTP router and its local DTE.

All facilities contained in incoming call requests are passed on to the peer router, regardless of whether the local router was configured to support that facility. For example, when packet size negotiation is requested in the incoming call and flow control negotiation is not configured in the router.

The router will insure any packet size and window size being negotiated is within the range specified when defining the X.25 interface. For example, a packet window greater than 7 is negotiated down to 7 if packet-ext-seq-mode has not been defined for the X.25 interface.

To view the configuration values, enter **list detailed** at the X.25 Config> prompt. To set the default values for the national personality, enter **set national-personality** at the X.25 Config> prompt. For further information, refer to *Software User's Guide*

## Defining the IP Address

Before you configure the Concentrator router (as displayed in Figure 20 on page 380) for XTP, define the IP address for this router. Enter **protocol ip** at the Config> prompt and enter **add address** at the IP config> prompt.

```
Config>protocol ip
IP config>add address
Which net is this address for [0]?3
New address [0.0.0.0]?128.185.100.7
Address mask [255.255.0.0]?255.255.255.0
```

## Setting the Internal IP Address

Each router identifies its peer routers by the internal IP address of the peer routers.

To set the internal IP address of the peer router, enter **set internal IP address** at the IP Config> prompt.

```
IP config>set internal-ip-address
Internal IP address [0.0.0.0]?128.185.100.1
```

## Configuring XTP

After you have configured X.25 and defined the IP address, you are ready to configure XTP for the router.

If you need further configuration information when configuring XTP, see “XTP Configuring Commands” on page 389.

**Note:** When configuring your network for XTP, remember that the peer routers are always the routers you are communicating with over TCP/IP. Therefore, the peer router can differ depending on the point of view. When configuring the routers defined as Remote 1 router and Remote 2 router in Figure 20 on page 380, to them the peer router is the Concentrator router.

## Using XTP

Implement the following steps to configure XTP for the router:

1. To access the XTP config> prompt, enter **protocol xtp** at the Config> prompt.
2. Add interface 1 to the XTP configuration. Enter **add local-dte** at the XTP Config> prompt.

```
XTP config>add local-dte
Interface number [0]?1
Allow inbound calls without calling DTE address? (Y or N) [N]? n
DTE address [ ]?101
Pref CUG [ ]? 18
CUG (2) [ ]? 2
CUG (3) [ ]?
Pref BI-CUG [0]?
DTE address [ ]?
```

Entering a null DTE address ends the command input.

3. Add interface 2 to the XTP configuration. Enter **add local-dte** at the XTP Config> prompt.

```
XTP config>add local-dte
Interface number [0]?2
Allow inbound calls without calling DTE address? (Y or N) [N]? n
DTE address [ ]?201
DTE address [ ]?
```

Entering a null DTE address ends the command input.

4. (Optional) Add XTP protocol-specific CUGs.

```
add cug
Pref CUG [ ]? 11
CUG (2) [ ]? 12
CUG (3) [ ]? 13
CUG (4) [ ]? 14
CUG (5) [ ]? 15

add bi-cug
Pref BI-CUG [ ]? 21
BI-CUG (2) [ ]? 22
BI-CUG (3) [ ]?
```

5. Add Remote 1 router as the peer router. Enter **add peer-router** and enter the IP address of this router.

```
XTP config>add peer-router
Router's internal IP Address [0.0.0.0]?128.185.100.2
Connection setup timeout [230]?
```

6. Add the remote DTE for Remote 1 router. Enter **add remote-dte** and enter the IP and DTE address of this DTE.

```
XTP config>add remote-dte
DTE address [ ]?301
Peer router's internal IP Address [0.0.0.0]?128.185.100.2
Peer router's internal IP Address [0.0.0.0]?
```

**Note:** A remote DTE is *required* only if one of the following applies:

- The Concentrator Router will be initiating XTP connections to the remote DTE due to incoming calls from its local DTEs.
- The DTE is part of an XTP PVC definition.

7. Add Remote 2 router (as the peer router). Enter **add peer-router** and enter the IP address of this router.

```
XTP config>add peer-router
Router's internal IP Address [0.0.0.0]?128.185.100.3
Connection setup timeout [230]?
```

8. Add the remote DTEs for Remote 2 router. Enter **add remote-dte** and enter the IP and DTE addresses of this DTE.

```
XTP config>add remote-dte
DTE address [ ]?401
Peer router's internal IP Address [0.0.0.0]?128.185.100.3
Peer router's internal IP Address [0.0.0.0]?
```

```
XTP config>add remote-dte
DTE address [ ]?402
Peer router's internal IP Address [0.0.0.0]?128.185.100.3
Peer router's internal IP Address [0.0.0.0]?

XTP config>add remote-dte
DTE address [ ]?403
Peer router's internal IP Address [0.0.0.0]?128.185.100.3
Peer router's internal IP Address [0.0.0.0]?

XTP config>add remote-dte
DTE address [ ]?404
Peer router's internal IP Address [0.0.0.0]?128.185.100.3
Peer router's internal IP Address [0.0.0.0]?
```

9. Add an XTP PVC to logically associate the local PVC to Server 1 with the remote DTE 301.

```
XTP config>add pvc
Local PVC Range Start [1]?
Local PVC Range End [1]?
Local X.25 DTE address [ ]? 101
Remote PVC Range Start [1]?
Remote PVC Range End [1]?
Remote X.25 DTE address [ ]?301
```

When entering DTE addresses, you can specify either of the following:

A '?' in place of any digit. The '?' means any single digit in this digit position.

An '\*' as the last digit of an address to represent any combination of zero or more digits.

## Sample Configuration of Remote Routers

The following is a sample configuration of Remote 1 router and Remote 2 router (see Figure 20 on page 380). The process is the same as that defined in the section at "Configuration Procedures" on page 380.

### Remote 1 router

```
*talk 6

Config>set data-link x25 1
Config>set data-link ppp 2
Config>network 1

X.25 Config>set address 300
X.25 Config>set clocking internal
X.25 Config>set speed 19200
X.25 Config>set equipment-type dce
X.25 Config>set pvc low 1
X.25 Config>set pvc high 1
X.25 Config>add pvc
Protocol [IP]?xtp
Packet Channel [1]?1
Destination X.25 Address [ ]?301

Window Size [2]?
Packet Size [128]?
X.25 Config>exit
Config>

Config>protocol ip
IP config>add address
Which net is this address for [0]?2
New address [0.0.0.0]?128.185.100.8
Address mask [255.255.0.0]?255.255.255.0

IP config>set internal-ip-address
Internal IP address [0.0.0.0]?128.185.100.2
IP Config>exit
Config>

Config>protocol xtp
```

## Using XTP

```
XTP config>add local-dte
Interface number [0]?1
Allow inbound calls without calling DTE address? (Y or N) [N]? n
DTE address [ ]?301
DTE address [ ]?

XTP config>add peer-router
Router's IP address?128.185.100.1

XTP config>add remote-dte
DTE address [ ]?101
Peer router's internal IP Address [0.0.0.0]?128.185.100.1
Peer router's internal IP Address [0.0.0.0]?

XTP config>add pvc
Local PVC Range Start [1]?
Local PVC Range End [1]?
Local X.25 DTE address [ ]? 101
Remote PVC Range Start [1]?
Remote PVC Range End [1]?
Remote X.25 DTE address [ ]? 301
```

## Remote 2 router

\*talk 6

```
Config>set data-link x25 1
Config>set data-link ppp 2
Config>network 1

X.25 Config>set address 400
X.25 Config>set clocking external
X.25 Config>set speed 19200
X.25 Config>set equipment-type dte
X.25 Config>set svc low-inbound 0
X.25 Config>set svc high-inbound 0
X.25 Config>set svc low-outbound 0
X.25 Config>set svc high-outbound 0
X.25 Config>set svc low-two-way 1
X.25 Config>set svc high-two-way 64
X.25 Config>add protocol
Protocol [IP]?xtp
Window Size [2]?
Default Packet Size [128]?
Maximum Packet Size [256]?
X.25 Config>exit

Config>protocol ip
IP config>add address
Which net is this address for [0]?2
New address [0.0.0.0]?128.185.100.9
Address mask [255.255.0.0]?255.255.255.0

IP config>set internal-ip-address
Internal IP address [0.0.0.0]?128.185.100.3
IP Config>exit
Config>

Config>protocol xtp
XTP config>add local-dte
Interface number [0]?1
Allow inbound calls without calling DTE address? (Y or N) [N]? n
DTE address [ ]?401
Pref CUG [ ]? 23
CUG (2) [ ]? 24
CUG (3) [ ]? 25
CUG (4) [ ]? 26
CUG (5) [ ]? 27

DTE address [ ]?402
Pref CUG [ ]?
DTE address [ ]?403
Pref CUG [ ]?
DTE address [ ]?404
Pref CUG [ ]?
DTE address [ ]?
```

```
XTP Config>add peer-router  
Router's IP address?128.185.100.1  
  
XTP config>add remote-dte  
DTE address [ ]?201  
Peer router's internal IP Address [0.0.0.0]?128.185.100.1  
Peer router's internal IP Address [0.0.0.0]?  
XTP config>exit  
  
Config>
```

## Using XTP

---

## Chapter 27. Configuring and Monitoring XTP

This chapter describe the XTP configuring and monitoring commands. It includes the following sections:

- “XTP Configuring Commands”
- “XTP Monitoring Commands” on page 396

---

### XTP Configuring Commands

This section describes the XTP configuring commands.

To access the XTP configuring environment, enter the **protocol xtp** command at the Config> prompt.

```
Config> p xtp
XTP config>
```

Enter the XTP configuring commands at the XTP config> prompt.

*Table 55. XTP Configuration Commands Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds an interface, peer router, closed user groups, remote DTE or PVC definitions.
Change	Changes a peer router, remote DTE or PVC definition.
Delete	Deletes a local DTE, peer router, closed user groups, remote DTE or PVC definition.
Enable-XTP	Activates the XTP forwarder.
Disable-XTP	Deactivates the XTP forwarder.
Set	Sets the value of the XTP Keepalive Timer.
List	Lists interfaces, peer routers, remote DTEs and PVC definitions.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Add

Adds a local X.25 node, a peer router, a remote X.25 node with corresponding routers, or a PVC from a local X.25 node to a remote X.25 node.

Wild card addressing is included in the XTP forwarder. When the local or remote DTE addresses are entered, they can contain a wild card character ( ? or \* ). For additional information on the use of wildcards, see “DTE Address Wildcards” on page 377.

#### Syntax:

```
add                bi-cug
                   cug
                   local-dte
                   peer-router
```

## XTP Configuring Commands (Talk 6)

remote-dte

pvc

**cug** Specifies the closed user group numbers for the XTP protocol. The first CUG you are prompted for is the preferred cug.

**Valid values:** 0 to 9999

**Default value:** None

**Example:**

```
add cug
Pref CUG [ ]? 114
CUG (2) [ ]? 314
CUG (3) [ ]? 478
CUG (4) [ ]?
```

**bi-cug** Specifies the bilateral closed user group numbers for the XTP protocol. The first bi-cug you are prompted for is the preferred bi-cug.

**Valid values:** 0 to 9999

**Default value:** None

**Example:**

```
add bi-cug
Pref BI-CUG [ ]? 50
BI-CUG (2) [ ]? 51
BI-CUG (3) [ ]? 52
BI-CUG (4) [ ]? 53
BI-CUG (5) [ ]? 54
```

### local-dte

Adds the X.25 DTE addresses, or the X.25 nodes, that communicate with the router on the specified interface. The valid interface numbers for use with XTP are 0 to 255.

You can configure multiple local nodes. However, if the option to allow incoming calls without a calling DTE address has been selected and such a call is received, the *last* local DTE address added becomes the calling DTE address for that call.

**Example:**

```
add local-dte

Interface number [0]?4
Allow inbound calls without calling DTE address? (Y or N) [N]? y
DTE address [ ]?101
Pref CUG [ ]? 23
CUG (2) [ ]? 24
CUG (3) [ ]? 25
CUG (4) [ ]? 26
CUG (5) [ ]? 27
Pref BI-CUG [ ]? 6
BI-CUG (2) [ ]? 7
BI-CUG (3) [ ]? 8
BI-CUG (4) [ ]? 9
BI-CUG (5) [ ]? 10
DTE address [ ]?
```

### peer-router

Adds peer routers. Enter the internal IP addresses of the routers to which the remote X.25 nodes are connected. You can use these IP addresses to open TCP connections and transport X.25 packets that contain connection requests and X.25 data.

If the internal IP address you configure for the peer-router is this router's internal IP address, the software establishes a local XTP connection.



### Example:

```
add peer-router
```

```
Router's internal IP Address [0.0.0.0]?128.185.100.2
Connection setup timeout [230]?
```

### remote-dte

Adds remote X.25 nodes and corresponding routers. You can connect remote nodes with local X.25 nodes so they can exchange data. You must configure an IP address for each remote X.25 node you configure. Any request or data sent to this remote node goes to the router. The router then uses one of its local X.25 interfaces to forward the data to the X.25 node.

Define a remote DTE if this router is to initiate XTP connections to the remote DTE due to incoming calls from its local DTEs, or if the remote DTE is part of an XTP PVC definition.

To use Local XTP, the peer router address must be the internal address of the local router and that DTE address must be previously defined using the **add local** command.

### Example:

```
add remote-dte
```

```
DTE address [ ]?301
Peer router's internal IP Address [0.0.0.0]?128.185.100.2
Peer router's internal IP Address [0.0.0.0]?
```

### pvc

Adds a PVC from a local X.25 node to a remote X.25 node.

Three things need to exist in order to activate a PVC configuration:

- An X.25 PVC from the router to the local X.25 node
- An X.25 PVC from the peer router to the remote X.25 node
- A TCP connection to the peer router where the remote node is resident

### Example:

```
XTP config>add pvc
Local PVC Range Start [1]?
Local PVC Range End [1]?
Local X.25 DTE address [ ]? 101
Remote PVC Range Start [1]?
Remote PVC Range End [1]?
Remote X.25 DTE address [ ]? 301
```

### Notes:

1. When you add PVCs to the router configuration, you also must configure the PVC in X.25. For details on configuring X.25 interfaces, refer to *Software User's Guide*
2. For Local XTP, you must define the PVC in both directions. You need this definition because the router is performing both local and remote functions. For example, to define Local PVC 8 and Remote PVC 10 when you are using Local XTP, you would do the following:

```
XTP config>add pvc
Local PVC Range Start [1]? 8
Local PVC Range End [1]? 8
Local X.25 DTE address [ ]? 108
Remote PVC Range Start [1]? 10
Remote PVC Range End [1]? 10
Remote X.25 DTE address [ ]? 301
```

```
XTP config>add pvc
Local PVC Range Start [1]? 10
Local PVC Range End [1]? 10
Local X.25 DTE address [ ]? 310
Remote PVC Range Start [1]? 8
```

## XTP Configuring Commands (Talk 6)

Remote PVC Range End [1]? 8  
Remote X.25 DTE address [ ]? 108

3. A PVC range can be defined through the PVC range start and PVC range end parameters. The same number of circuits must be defined in the local PVC range as in the remote PVC range. For example, if one circuit is defined in the local PVC range, one circuit must be defined in the remote PVC range.
4. The PVCs defined must fall within the range of 1 to 255.

**Note:** When you add PVCs to the router configuration, you also must configure the PVC in X.25. For details on configuring X.25 interfaces, refer to the *Software User's Guide*

## Change

Changes a peer router, remote DTE, or PVC from the XTP configuration.

### Syntax:

change peer-router  
remote-dte  
pvc

### peer-router

Changes specific peer routers from the XTP configuration.

#### Example:

```
change peer-router  
Router IP Address [0.0.0.0]?128.185.100.2
```

### remote-dte

Changes specific remote DTEs in the XTP configuration.

#### Example:

```
change remote-dte  
DTE address [ ]?401  
Peer router's internal IP Address [0.0.0.0]?128.185.100.2  
Peer router's internal IP Address [0.0.0.0]?
```

### pvc

Changes PVC definitions for all PVCs in the range defined by the Local PVC Range Start parameter.

#### Example:

```
change pvc  
Local PVC Range Start [1]?1  
Local DTE address [ ]?301
```

## Delete

Deletes a local DTE, peer router, remote DTE, or PVC from the XTP configuration.

### Syntax:

delete bi-cug  
cug  
local-dte

## XTP Configuring Commands (Talk 6)

ppeer-router

rremote-dte

ppvc

**bi-cug** Deletes a bilateral closed user group number used by this interface.

### Valid values:

- Y** Deletes the current CUG.
- N** Does not delete the current CUG.
- ALL** Deletes all remaining CUGs.
- Q** Stops deleting any remaining CUGs.

### Example:

```
delete bi-cug
Delete Pref BI-CUG [Y]?
Delete BI-CUG (2) [Y]? N
Delete BI-CUG (3) [Y]? q
```

**cug** Deletes the closed user group numbers used by this interface. This command works similar to the **delete bi-cug** command.

### Example:

```
del cug

Delete Pref CUG [Y]?
Delete CUG (2) [Y]?
Delete CUG (3) [Y]? q
```

### local-dte

Deletes specific local interfaces from the XTP configuration.

### Example:

```
delete local-dte

Interface number [0]?1
DTE address [ ]?101
Record deleted
```

### peer-router

Deletes specific peer routers from the XTP configuration.

### Example:

```
delete peer-router

Router IP Address [0.0.0.0]?128.185.100.2
Record deleted
```

### remote-dte

Deletes specific remote DTEs from the XTP configuration.

### Example: delete remote-dte

```
DTE address [ ]?401
```

**pvc** Deletes PVC definitions for all PVCs in the range defined by the Local PVC Range Start parameter.

### Example:

```
delete pvc

Local PVC Range Start [1]?1
Local DTE address [ ]?301
Record deleted
```

## XTP Configuring Commands (Talk 6)

### Enable

Activates the XTP forwarder.

**Syntax:** `enable-ntp`

**Example:** `enable-ntp`

### Disable

Deactivates the XTP forwarder.

**Syntax:** `disable-ntp`

**Example:** `disable-ntp`

### Set

Sets the XTP Keepalive Timer.

**Syntax:** `keep-alive-timer`

**Example:**

```
set keep-alive-timer
```

Keepalive timer in seconds [10]?60

### List

Lists the interfaces, peer routers, remote DTEs, or PVCs.

**Syntax:**

```
list all
      cugs
      keep-alive-timer
      local-dtes
      peer-routers
      remote-dtes
      pvc
      xtp-status
```

**all** Displays all the interfaces, peer routers, remote DTEs, and PVCs configured for XTP.

**Example:**

```
list all
```

```
STATUS: XTP-DISABLED
```

```
Local DTEs:
```

```
Interface      DTE Address
1              44444          Calling DTE address is optional
Pref CUG      : 7777  Others : 9999 0
Pref BI-CUG   : 0    Others :
```

## XTP Configuring Commands (Talk 6)

```
4          33333          Calling DTE address is optional
          Pref CUG      : 1      Others : 2 3 4 5
          Pref BI-CUG   : 6      Others : 7 8 9 10
```

Peer Routers      Connection Timeout

Remote DTEs:  
DTE Address      Peer Router(s)

PVCs:  
Local PVC            Local DTE            Remote PVC            Remote DTE  
LCN Range            Address            LCN Range            Address

```
Pref CUG        : 114    Others : 314 478
Pref BI-CUG     : 1      Others : 1 1 1 1111
```

KEEP-ALIVE-TIMER: 10 seconds

**cugs** Lists the CUG and BI-CUG numbers defined for the XTP protocol.

### keep-alive-timer

Displays all the Keepalive time configured for XTP.

### local-dtes

Displays all the local DTEs configured for XTP.

#### Example:

```
list local-dtes
```

```
Local DTEs:
Interface            DTE Addr
1                    101 Calling DTE address is required
2                    201 Calling DTE address is required
```

### peer-routers

Displays all the peer routers configured for XTP.

#### Example:

```
list peer-routers
```

```
Peer Routers:
128.185.100.2
128.185.100.3
```

**pvcs** Displays all the PVCs configured for XTP.

#### Example-

```
list pvcs
```

PVCs:

```
Local PVC            Local DTE            Remote PVC            Remote DTE
LCN Range            Address            LCN Range            Address
1 - 1                100                1 - 1                301
```

### remote-dtes

Displays all the remote DTEs configured for XTP.

#### Example:

```
list remote-dtes
```

```
Remote DTEs:
DTE Address            Peer Router
301                    128.185.100.2
401                    128.185.100.3
402                    128.185.100.3
403                    128.185.100.3
404                    128.185.100.3
```

### xtp-status

Displays the status of XTP indicating whether it is enabled or disabled.

#### Example:

```
list xtp-status
```

```
STATUS: XTP-ENABLED
```

### XTP Monitoring Commands

This section describes the XTP monitoring commands. These commands allow you to display the current active interfaces, peer routers, remote DTE, PVCs and SVCs. They also allow you to dynamically add or delete interfaces, DTEs, or peer routers.

To display the XTP> prompt, enter **protocol xtp** at the monitoring (+) prompt:

```
+protocol xtp
X.25 Transport Console
XTP>
```

Enter the XTP monitoring commands at the XTP> prompt.

*Table 56. XTP Monitoring Commands Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Dynamically adds local DTEs, remote DTEs, or peer routers
Delete	Dynamically deletes configurations for local DTEs, remote DTEs, or peer routers
List	Displays individual PVC or SVC statistics and general information
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## Add

Adds an interface, peer router, or remote DTE to the XTP configuration.

### Syntax:

```
add                _local-dtes
                    _peer-router
                    _remote-dtes
```

#### local-dtes

Adds a local interface to the XTP configuration.

#### Example:

```
add local-dtes
Interface number [0]?1
DTE address [ ]?101
```

#### peer-router

Adds a peer router to the XTP configuration.

#### Example:

```
add peer-router
Router's IP Address [0.0.0.0]?128.185.100.2
```

#### remote-dtes

Adds a remote DTE to the XTP configuration.

#### Example:

```
add remote-dtes
Peer router's IP Address [0.0.0.0]?128.185.100.2
DTE address [ ]?301
DTE address [ ]?
```

## Delete

Deletes a local DTE, peer router, or remote DTE from the router configuration.

### Syntax:

```
delete                local-dtes
                        peer-router
                        remote-dtes
```

### local-dtes

Deletes a local interface from the XTP configuration.

#### Example:

```
delete local-dtes
Interface Number [0]?1
DTE address [ ]?101
DTE address [ ]?
```

### peer-router

Deletes a peer router from the XTP configuration.

#### Example: delete peer-router

```
Router's IP Address [0.0.0.0]?123.185.100.2
```

### remote-dtes

Deletes a remote DTE from the XTP configuration.

#### Example:

```
delete remote-dtes
DTE address [ ]?401
DTE address [ ]?
```

## List

Displays the current active interfaces, peer routers, remote DTEs, PVCs, and SVCs.

### Syntax:

```
list                all
                        xtp-status
                        local-dtes
                        peer-routers
                        remote-dtes
                        pvcs
                        pvc-detailed
                        pvcs-all-detailed
                        svcs
                        svc-detailed
                        svc-all-detailed
```

**all** Displays output of all list command options.

#### Example:

## XTP Monitoring Commands (Talk 5)

**list all**

STATUS: XTP-ENABLED  
KEEP-ALIVE TIMER = 20 seconds

### LIST OF LOCAL DTES

Interface No	Local DTE	
1	101	Calling DTE address is required
2	201	Calling DTE address is required

### LIST OF PEER ROUTERS

Router	CNN State	Number of Ckts	Received Pkts	Received Bytes	Sent Pkts	Sent Bytes
128.185.100.3	Active	15	60	1533	12	142
128.185.100.2	Active	12	63	1620	10	130

### LIST OF REMOTE DTES

Remote DTE	Router IP
404	128.185.100.3
403	128.185.100.3
402	128.185.100.3
401	128.185.100.3
301	128.185.100.2

### LIST OF PVCS

Index No	Int No	PVC State	Local LCN	Local DTE	Remote LCN	Remote DTE
1	1	Active		100		301

### LIST OF SVCS (list svcs)

Index No	Int No	Logical Channel	SVC State	Local DTE	Remote DTE	Peer Router
1	2	5	ACT	33333333333333	44444444444444	3.3.3.3

### SVC 1 IN DETAIL (list svc-detailed)

Int No	Log Chn	SVC State	Received Pkts	Received Bytes	Sent Pkts	Sent Bytes	Dropped Pkts	Dropped Bytes
2	5	ACT	2	116	2	106	0	0

### LIST OF SVCS (svcs-all-detailed)

Int No	Log Chn	SVC State	Received Pkts	Received Bytes	Sent Pkts	Sent Bytes	Dropped Pkts	Dropped Bytes
2	5	ACT	1	7	1	2	0	0

## xtp-status

Displays whether XTP is enabled/disabled, and the time specified for the Keepalive Timer.

### Example:

**list xtp-status**

STATUS: XTP-ENABLED  
KEEP-ALIVE-TIMER = 20 seconds

## local-dtes

Displays all the interfaces configured for XTP.

### Example:

**list local-dtes**

### LIST OF LOCAL DTES

Interface	Local
-----------	-------



## XTP Monitoring Commands (Talk 5)

```
No          DTE
1           101    Calling DTE address is required
2           201    Calling DTE address is required
```

### peer-routers

Displays all the peer routers configured for XTP.

#### Example:

```
list peer-routers
```

```
LIST OF PEER ROUTERS
```

Router	CNN State	Number of Ckts	Received		Sent	
			Pkts	Bytes	Pkts	Bytes
128.185.100.3	Active	15	60	1533	12	142
128.185.100.2	Active	12	63	1620	10	130

### remote-dtes

Displays all the remote interfaces configured for XTP.

#### Example:

```
list remote-dtes
```

```
LIST OF REMOTE DTES
```

Remote DTE No	Router IP
404	128.185.100.3
403	128.185.100.3
402	128.185.100.3
401	128.185.100.3
301	128.185.100.2

**pvcs** Displays all the PVCs configured for XTP.

#### Example:

```
list pvcs
```

```
LIST OF PVCS
```

Index No	Int No	PVC State	Local LCN	Local DET	Remote LCN	Remote DTE
1	1	Active		100		301

### pvc-detailed

Displays detailed information for a specific PVC definition. For a listing of Index numbers, enter **list all** at the xtp> prompt.

#### Example:

```
list pvc-detailed
```

```
PVC Index Number [1]?1
```

```
PVC 1 IN DETAIL
```

Int No	PVC State	Received		Sent		Dropped	
		Pkts	Bytes	Pkts	Bytes	Pkts	Bytes
1	ACTIVE	55	3220	35	2350	15	1870

### pvcs-all-detailed

Displays detailed information for all PVC definitions.

#### Example:

```
list pvcs-all-detailed
```

```
LIST OF PVCS
```

INT No	Local LCN	PVC State	Received		Sent		Dropped	
			Pkts	Bytes	Pkts	Bytes	Pkts	Bytes
1		ACTIVE	55	3220	35	2350	15	1870

**svcs** Displays all the SVCs definitions.

#### Example:

## XTP Monitoring Commands (Talk 5)

### list svcs

LIST OF SVCS

Index	Int	LOG	SVC	Local	Remote	Peer
No	No	Chan	State	DTE	DTE	Router
1	1	1	Active	200	401	3.3.3.3
2	1	1	Active	200	402	3.3.3.3
3	2	2	Active	200	403	3.3.3.3
4	2	2	Active	200	404	3.3.3.3

### svc-detailed

Displays information for specific SVC definitions.

#### Example:

list svc-detailed

SVC Index Number [1]?1

SVC 1 IN DETAIL

Int	LOG	SVC	Received		Sent		Dropped	
No	Chan	State	Pkts	Bytes	Pkts	Bytes	Pkts	Bytes
1		ACTIVE	75	4220	55	3350	20	870

### svcs-all-detailed

Displays information for all the SVC definitions.

#### Example:

list svcs-all-detailed

LIST OF SVCS

Index	Int	Log	SVC	Received		Sent		Dropped	
No	No	Chn	State	Pkts	Bytes	Pkts	Bytes	Pkts	Bytes
1	1	1	ACTIVE	4220	55	550	20	870	
2	1	1	ACTIVE	3220	40	2350	15	970	
3	2	2	ACTIVE	4003	50	3892	20	870	
4	2	2	ACTIVE	3967	58	4167	12	800	

---

## Chapter 28. Using Frame Relay Interfaces

This chapter describes how to use the Frame Relay interface and includes the following sections:

- “Frame Relay Overview”
- “Frame Relay Network Management” on page 409
- “Frame Relay Data Rates” on page 410
- “Circuit Congestion” on page 413
- “Bandwidth Reservation over Frame Relay” on page 416
- “Displaying the Frame Relay Configuration Prompt” on page 417
- “Frame Relay Basic Configuration Procedure” on page 418
- “Enabling Frame Relay PVC Management” on page 419
- “Enabling Frame Relay SVC Management” on page 419

---

### Frame Relay Overview

The Frame Relay (FR) protocol is a method of transmitting internetworking packets by combining the packet switching and port sharing of X.25 with the high speed and low delay of time division multiplexing (TDM) circuit switching. FR allows you to connect multiple LANs to a single high-speed (1.54 Mbps) WAN link with multiple point-to-point virtual circuits (VCs). FR offers the following features:

- *High throughput and low delay.* Utilizing the *core aspects* (error detection, addressing, and synchronization) of the Link Access Protocol, D-Channel (LAPD) datalink protocol, FR eliminates all network layer (Layer 3) processing. By using only the core aspects, FR reduces the delay of processing each frame.
- *Congestion detection.* Upon receiving Backward Explicit Congestion Notification (BECN) or a Forward Explicit Congestion Notification (FECN), the router initiates a controlled slowdown of traffic, thereby avoiding a complete FR network shutdown.

The router can also initiate a slowdown of traffic when it receives a Consolidated Link Layer Management (CLLM) congestion message. CLLM is an optional part of the Frame Relay standards that provides additional management information about the operation of the frame relay network to attaching DTEs.

- *Circuit access and control.* As the router dynamically learns about the availability of non-configured circuits (orphan circuits), you can control access to those new circuits.
- *Network management option.* As your network requires, the FR protocol can operate with or without a local network management interface.
- *Multiplexing protocols.* Using one VC to pass multiple protocols.
- *Data compression* that supports the FRF.9 standard. See Using Data Compression in *Using and Configuring Features* for details.
- *Data encryption* using a proprietary encryption scheme. Refer to Using and Configuring Data Encryption in *Using and Configuring Features* for details.

FR provides no error correction or retransmission function. To provide error-free end-to-end transmission of data, FR relies on the intelligence of the host devices.

## Using Frame Relay

### Frame Relay Network

The FR network consists of the FR backbone (consisting of FR switches provided by the FR carrier) providing the FR service. The router functions as the FR connection device. The router encapsulates FR frames and routes them through the network based on a Data Link Connection Identifier (DLCI). The DLCI is the medium access control (MAC) address that identifies the PVC or SVC between the router and the FR destination device. For example, in Figure 21, a packet destined to go from router B to router D would have a DLCI of 19 to reach router D; however, a packet destined to go from router D to router B would have a DLCI of 16.

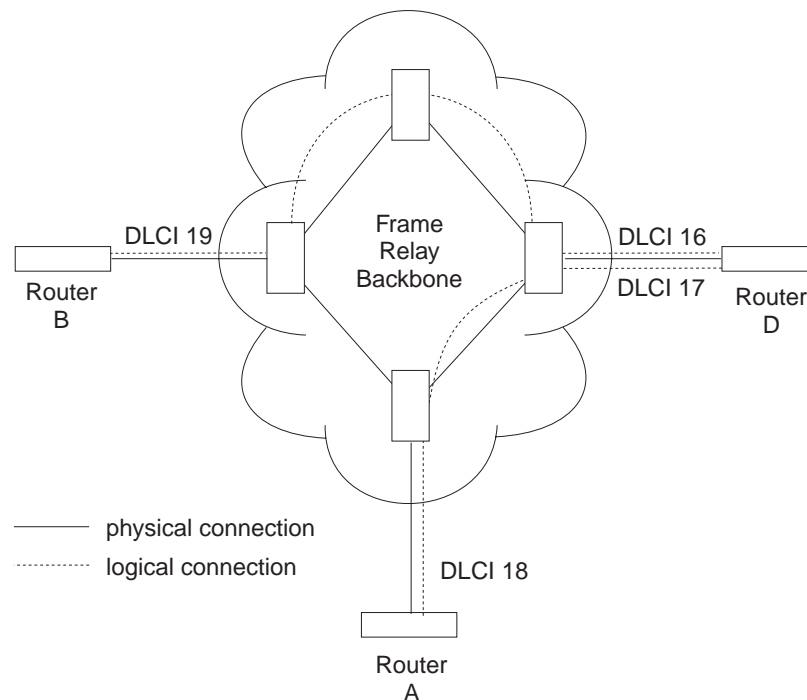 


Figure 21. DLCIs in Frame Relay Network

A DLCI can have either local or global significance. Local DLCIs are significant at the point of entry to the network, but global DLCIs are significant throughout the network. To the user, however, the DLCI that the router uses to route a packet is the DLCI that the user associates with the frame's global or local destination. DLCIs are configured through the FR configuration process or learned through FR management.

FR PVCs are predefined connections used to route data through a FR network. The bandwidth allocated for a PVC within the network is a subscription option and must be allotted to the PVC whether or not the PVC uses it.

A Frame Relay network has the following characteristics:

- Transports frames transparently. The network can modify only the DLCI, congestion bits, and frame check sequence. High-Level Data Link Control (HDLC) flags and zero bit insertion provide frame delimiting, alignment, and transparency.
- Detects transmission, format, and operational errors (frames with an unknown DLCI)

- Preserves the ordering of frame transfer on individual VCs
- Does not acknowledge or retransmit frames

### Frame Relay Switched Virtual Circuits

Frame Relay Switched Virtual Circuits (SVCs) provide the ability to implement "cut-through" routing in a Frame Relay network, minimizing or eliminating intermediate router hops between DTEs. Network complexity can be simplified and the DTE may experience improved performance.

SVCs may replace PVCs to conserve network bandwidth, reducing bandwidth cost.

FR SVC standards are a subset of ISDN standards and provide many of the same advantages as ISDN with less complexity.

The following protocols are supported over FR SVCs:

- AppleTalk 2
- ARP
- Bridging
- DECnet IV
- DLSw
- IP/OSPF/RIP/BGP4
- IPX

SVCs cannot be required and cannot belong to a required group.

### Frame Relay Interface Initialization

Local Management Interface (LMI) is used to determine the status of PVCs on a Frame Relay interface. If an LMI is enabled, the FR interface is active when a successful exchange of LMI frames occurs between the router and the FR switch; however, no data can be received from or transmitted to another router until an LMI status message indicates that the PVC status for the DLCI to the other router is active. Also, there are instances where the FR interface state is tied to PVC states and the interface does not come up even if LMI or Q.922 exchanges are successfully occurring (for additional information, see "Configuring PVC States to Affect the Frame Relay Interface State" on page 405).

If LMI is not enabled and SVCs are enabled, the Frame Relay interface is active when a successful exchange of Q.922 frames occurs between the router and the adjacent device. All PVCs are considered active at this point. However, SVCs are active only after a successful Q.933 activation exchange.

PVC status appears for all PVCs as either active or inactive. An active PVC has a completed connection to an end system. An inactive PVC does not have a completed connection to an end system because either an end system or an FR switch is off-line.

For example, in Figure 22 on page 404 router B has a configured PVC to router D. Router B is successfully interacting with FR management through FR switch B. Because either another FR switch is down or the end system is down, the

## Using Frame Relay

end-to-end PVC connection is not established. Router B receives an inactive status for that PVC.

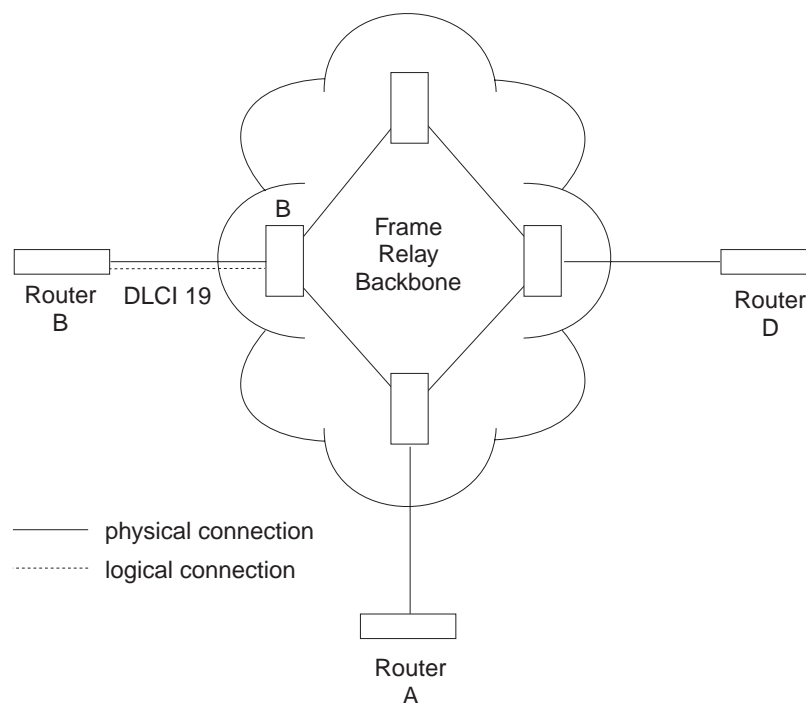 


Figure 22. DLCIs in Frame Relay Network

When the LMI and SVCs are disabled, the FR interface is running on a serial line and a DTE cable is being used, the FR protocol asserts the DTR and RTS modem control signals. (The Control signal is asserted for X.21). The FR interface goes up once the DSR, CTS, and DCD modem control signals are on. (When X.21 is used, the FR interface goes up once the Indication modem control signal is on.) The FR interface is down or in the testing state if either DSR, CTS, or DCD are off or, when X.21 is used, the Indication signal is off. Therefore, you need to ensure that the modem, modem eliminator, or DSU that is used drops one or more of these signals when the physical connection to the FR switch or the other FR DTE (if configured for FR DTE to DTE connectivity) is lost.

## Orphan Circuits

An orphan permanent virtual circuit is any PVC that is not configured for your router but is learned indirectly through the actions of the network management entity. For example, Figure 23 on page 405 assumes that router B has a configured PVC to router D, but none to router A. Router A configures a PVC to router B. Router B would then learn about the PVC to router A from LMI messages and classify it as an orphan.

Orphan PVCs are treated the same as configured circuits except that you may enable or disable their use with the **enable orphan-circuit** and **disable orphan-circuit** commands.

By disabling orphan circuits, you add a measure of security to your network by preventing any unauthorized entry into your network from a non-configured circuit.

## Using Frame Relay

By enabling orphan circuits, you allow the router to forward packets over circuits you did not configure. Packets that would normally be dropped are now forwarded.

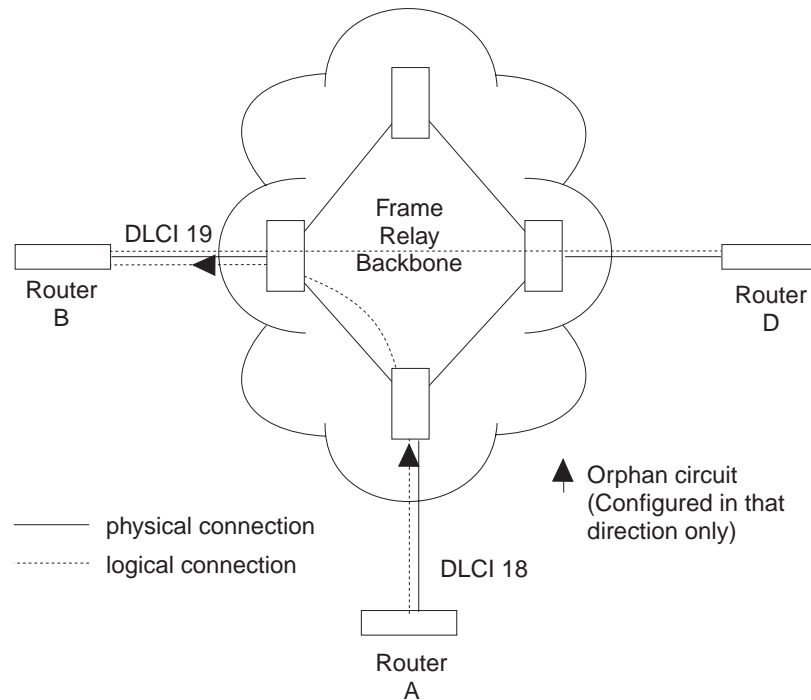 


Figure 23. Orphan Circuit

An orphan switched virtual circuit is an SVC that is not configured for your router but is created when a call-in is received for it. This is similar to Figure 23. However, Q.933 messages are used instead of LMI to generate the circuit and associate the appropriate parameters with it. Orphan SVCs are treated the same as configured SVCs except that you may enable or disable their use with the call-in option of the **enable switched-virtual-circuit** command.

## Configuring PVC States to Affect the Frame Relay Interface State

You can control the operation of your Frame Relay interface by

1. Enabling the “No-PVC” feature or
2. Configuring “required PVCs” or
3. Configuring “required PVC groups”.

By enabling the Frame Relay “No-PVC” feature, the Frame Relay interface becomes inactive when there are no active PVCs on the interface. If at least one PVC is active, the Frame Relay interface becomes active when a successful LMI exchange occurs between the router and the FR switch.

You can configure a PVC as a “required PVC”. If a PVC is required but not in a group, the Frame Relay interface becomes inactive when the PVC becomes inactive. When the PVC becomes active, the interface is activated following a successful exchange of LMI frames between the router and the Frame Relay switch.





## Command/Response (C/R)

This field's use is not defined within the Frame-Relay standards and the field is passed transparently across the network.

## Extended Address

This version of FR does not support extended addressing.

## Forward Explicit Congestion Notification (FECN)

The FR backbone network sets this bit to 1 to notify the user receiving the frame that congestion is occurring for the PVC in the direction the frame is being sent. You can configure the device to slow down data transmission in the direction from which it receives a FECN using the **enable throttle-transmit-on-fecn** command. You can also set the BECN bit in data frames sent to the originator of the FECN using the **enable notify-fecn-source** command.

APPN High Performance Routing (HPR) uses detection of this bit set to allow Rapid Transport Protocol's adaptive rate-based flow and congestion control algorithm to adjust the data send rate. This algorithm prevents traffic bursts and congestion, maintaining a high level of throughput.

## Backward Explicit Congestion Notification (BECN)

The FR backbone network sets this bit to 1 to notify the user that the frames sent by this router for this PVC have encountered congestion. The router then initiates a *throttle down* to a rate equal to or less than the user-defined CIR when CIR or congestion monitoring are enabled. The CIR for a PVC is supplied by the FR service provider and is configured using the **add permanent-virtual-circuit** command.

## Discard Eligibility (DE)

The Frame Relay network may discard transmitted data exceeding CIR on a PVC. The DE bit can be set by the router to indicate that some traffic should be considered discard eligible. If appropriate, the Frame Relay network will discard frames marked as discard eligible which may allow frames that are not marked discard eligible to make it through the network. To identify traffic that is discard eligible:

1. Configure BRS on the Frame Relay interface and any FR circuits that has traffic that you are making discard eligible.
2. Assign a protocol or filter to a BRS traffic class using the **assign** command. You specify whether the DE bit should be set on for this protocol or filter traffic.

## User Data

This field contains the protocol packet being transmitted. This field can contain a maximum of 8188 octets; however, the frame check sequence (FCS) can effectively detect errors only on a maximum of 4096 octets of data. The protocol data is preceded by a Frame Relay encapsulation header as defined in RFC 1490 and RFC 2427.

## Using Frame Relay

### Frame Check Sequence

This field is the standard 16-bit cyclic redundancy check (CRC) that HDLC and LAPD frames use. This field detects bit errors occurring in the bits of the frame between the opening flag and FCS.

## Frame Forwarding over the Frame Relay Network

When the FR protocol receives a packet for encapsulation, it compares the packet's network address to the entries in the address resolution protocol (ARP) cache. If the ARP cache contains the DLCI number that matches the network address, the FR protocol encapsulates that packet into a frame and transmits the frame over its specified local DLCI. If the ARP cache does not contain a match, the FR protocol sends out an ARP request over all configured PVCs on the interface. When the appropriate end-point responds with an ARP response, the FR protocol adds its local DLCI that received the ARP response to the ARP cache. Subsequent data packets directed to the same network address are then encapsulated into a frame and sent out over its local DLCI.

## Protocol Addresses

Protocol addresses can be either mapped statically to FR network PVC addresses or SVCs using locally configured names or discovered dynamically through Inverse ARP or ARP. (For more information on ARP and Inverse ARP, see the *Protocol Configuration and Monitoring Reference*.) Either method is protocol-dependent as illustrated in Table 57.

**Note:** Static protocol addresses are also referred to as static ARP entries. A static ARP entry is added to the configuration with the **add protocol-address** command.

Table 57. Protocol Address Mapping

Protocol Type	ARP and Inverse ARP Usage	Static Mapping	VC Configured at Protocol Configuration
AP2	Yes	Yes	No
IP	Yes	Yes	No
IPX	Yes	Yes	No
Banyan VINES**	No	No	No
DNA IV	Yes	Yes	No
OSI*, **	No	No	Yes

\* You must configure OSI at the protocol level to map the protocol address to the FR PVC.  
\*\* Not supported using SVCs.

## Multicast Emulation and Protocol Broadcast

Multicast emulation is an optional feature that allows protocols requiring multicast such as ARP to function properly over the FR interface. With multicast emulation, a multicast frame is transmitted on each active PVC. By using the **enable** and **disable multicast** commands, you can turn this feature on or off. Protocols that utilize multicast are AP2, ARP, Banyan VINES, DNA4, IP, and IPX.

Protocol broadcast is another optional feature that allows the IP RIP protocol to function properly over the FR interface. By using the **enable protocol-broadcast** and **disable protocol-broadcast** commands, you can turn this feature on or off.

For protocols that support ARP/InARP over Frame Relay, Frame Relay will only multicast a protocols packets over a circuit if a protocol address was either learned or configured for that circuit.

Multicast can also be enabled or disabled for an individual SVC. Use the multicast option on **add switched-virtual-circuit**.

---

## Frame Relay Network Management

The supplier of the FR network backbone provides FR network management. It is management's responsibility to provide FR end-stations (routers) with status and configuration information concerning PVCs available at the interface.

For PVCs, the FR protocol supports the ANSI T1.617 Annex D, ITU-T Q.933 Annex A (also referred to as CCITT Q.933 Annex A), and the Interim Local Management Interface (LMI) management entities. You can turn these entities on or off using the **enable** and **disable** LMI configuration commands. Specifically, FR LMI provides the following information:

- Notification of additional PVCs (orphans) and whether they are active or inactive, or notification of any PVC deletions.
- Notification of the availability of a configured PVC. The availability of a PVC is indirectly related to the successful participation of the PVC end-point in the *heartbeat polling* process, which is detailed in "Link Integrity Verification Report" on page 410.
- Verification of the integrity of the physical link between the end-station and network by using a *keep alive* sequence number interchange.

Although the FR interface supports PVC network management, it is not necessary for management to run on the FR backbone for the interface to operate over the FR backbone. For example, you may want to disable management for back-to-back configurations.

For SVCs, the FR protocol supports FRF 4 (Frame Relay Forum Implementation Agreement 4). This includes an implementation of ANSI Q.922 and a subset of ANSI Q.933. Q.922 provides verification of the integrity of the physical link between the router and the network. Q.933 provides the means for establishing and disconnecting SVCs across the network. Q.922 and Q.933 are always enabled when SVCs are used.

## Management Status Reporting

Upon request, FR LMI provides two types of status reports, a full status report and a link integrity verification report. A full status report provides information about all PVCs the interface knows about. A link integrity verification report verifies the connection between a specific end station and a network switch. All status inquiries and responses are sent over DLCI 0 for ANSI T1.617 Annex D and ITU-T Q.933 Annex A, or DLCI 1023 for interim LMI management.

## Full Status Report

When the FR interface requires a full status report, the router's FR protocol sends a status enquiry message to the FR network backbone requesting a full status report. A status enquiry message is a request for the status of all PVCs on the interface. Upon receiving this request, FR management must respond with a full status report

## Using Frame Relay

consisting of the link integrity verification element and a PVC status information element for each PVC. (See “Link Integrity Verification Report”.)

The PVC status information element contains the following information: the local DLCI number for the particular PVC; the state of the PVC (active or inactive); and whether the PVC is new or an existing PVC that management already knows about.

**Note:** The number of PVCs supplied at the FR interface is restricted by the network frame size and the amount of individual PVC information elements that can fit into a full status report. For example, 202 is the maximum number of PVCs for a network with a 1K frame size.

## Link Integrity Verification Report

The link integrity verification report, sometimes referred to as *heartbeat polling*, contains the link integrity verification element. This element is where the exchange of the send and receive sequence numbers takes place. By exchanging sequence numbers, management and the end station can evaluate the integrity of the synchronous link. The send sequence number is the current send sequence number of the message originator. The receiver looks at this number and compares it to the last send sequence number to verify that this number is incrementally correct. The receive sequence number is the last send sequence number that the originator sent out over the interface. It is the receiver's responsibility to place a copy of the send sequence number into the receive sequence number field. This way the originator can ensure that the receiver receives and interprets the frames correctly.

When an end-station fails to participate in this polling process, all remote end-stations with logically attached PVCs are notified through management's full status report mechanism that the PVC is inactive.

## Consolidated Link Layer Management (CLLM)

CLLM is an optional FR management function that is not widely supported by the industry but it has been adopted by some Frame Relay switch manufacturers. CLLM provides some of the same management information provided by LMI, in particular, outage notification. CLLM's main use is to provide asynchronous congestion notification of PVCs to attaching devices. A single CLLM message may indicate outage or congestion for multiple PVCs. The Frame Relay protocol supports the following standards for CLLM: ANSI T1.618, ITU-T (CCITT) Q.922 Annex A, and ITU-T (CCITT) X.36 Annex C.

---

## Frame Relay Data Rates

This section introduces data rates for Frame Relay permanent virtual circuits (PVCs).

### Committed Information Rate (CIR)

The CIR is the data rate that the network commits to support for the VC under normal, uncongested conditions. Any VC that is configured or is learned is provided a CIR (by the FR service provider). The CIR is a portion of the total bandwidth of the physical link of either 0, or between 300 bps and 6 312 000 bps reserved for the VC. A value of 64 Kbps for a single DS0 channel is most common.

You define the CIR with the **add permanent-virtual-circuit**, **change permanent-virtual-circuit**, **add switched-virtual-circuit**, or **change switched-virtual-circuit** configuration command. You can also dynamically change the CIR with the **set circuit** console command. You can also set the default CIR for all Frame Relay circuits on this interface using the **set CIR-defaults** command.

Some Frame Relay switches allow a value of 0 to be configured for CIR. When CIR is equal to 0, little or no bandwidth is reserved in the Frame Relay network backbone for the VC, and the VC's traffic uses non-reserved bandwidth.

### Orphan Permanent Virtual Circuit CIR

The router assigns a CIR to orphan circuits based on the CIR defaults configured at the interface level. If you are relying on the orphan circuit to route important data and the CIR, Bc, and Be values from the network provider are different from the values configured at the interface level, it is recommended that you define a PVC instead of an orphan circuit. Doing this, you can assign a CIR that the network commits to support.

### Committed Burst (Bc) Size

The *committed burst (Bc) size* is the maximum amount of data (in bits) that the network commits to deliver during a *calculated time (Tc) interval*. The Tc is equal to the Bc divided by the CIR ( $Tc = Bc / CIR$ ). If you configure 0 for CIR, Frame Relay uses a value of 1 second for Tc. .

For example, if you set a VC's CIR to 9600 bps and the committed burst size to 14 400 bits, the time period is 1.5 sec. ( $14\ 400\ \text{bits} / 9600\ \text{bps} = 1.5\ \text{sec}$ ). This means that the VC is allowed to transmit a maximum of 14 400 bits in 1.5 seconds.

**Note:** The minimum Tc supported by FR is .03 of a second.

This parameter is important because of the relationship between the committed burst size and the maximum frame size. If the maximum frame size in bits is greater than the committed burst size, the network may discard frames whose size exceeds the committed burst size. Therefore, the committed burst size should be greater than or equal to the maximum frame size. It should also equal the burst size set up with the network provider.

Use the **add permanent-virtual-circuit**, **change permanent-virtual-circuit**, **add switched-virtual-circuit** or **change switched-virtual-circuit** configuration commands to set the committed burst size. The **set circuit** console command can be used to dynamically change the committed burst size. You can also set the default committed burst size for all Frame Relay circuits on this interface using the **set CIR-defaults** command.

The device assigns orphan circuits a committed burst size based on the default you set with the **set CIR-defaults** command. If you configure 0 for CIR, then the committed burst (Bc) size also equals 0.

### Excess Burst (Be) Size

The *excess burst (Be) size* is the maximum amount of uncommitted data the router can transmit on a PVC in excess of the Bc during the Tc ( $Tc = Bc / CIR$ ) when CIR and Bc are nonzero. When CIR = 0, Frame Relay used a value of 1 second for Tc.

## Using Frame Relay

The network delivers this excess data with a lower probability of success than committed burst size data. Set the Be to a value greater than zero only if you are willing to accept the risk of discarded data and its effect on higher-layer protocol performance. The Be should equal the value set up with the network provider.

Use the **add permanent-virtual-circuit**, **change permanent-virtual-circuit**, **add switched-virtual-circuit** or **change switched-virtual-circuit** commands during frame-relay configuration to set the excess burst size. You can also use the **set circuit** console command to dynamically change the excess burst size. Orphan circuits will receive a default excess burst size equal to the value set in the **set CIR-defaults** command. If you configure 0 for CIR, then you must configure a nonzero value for the excess burst (Be) size. You can also set the default excess burst size for all Frame Relay circuits on this interface using the **set CIR-defaults** command.

## Line Speed

The *line speed* is the interface's line speed.

The FR interface's line speed is configured using the **set line-speed** configuration command. The line speed must be configured when internal clocking is used. However, it is recommended that you configure a line speed for external clocking since the router uses the line speed as the maximum information rate when congestion monitoring is enabled. Also some of the protocols use an interface's configured line speed when calculating a route's cost.

The line speed is not configurable on a Frame Relay dial circuit interface. If the dial circuit is mapped to an ISDN base interface, 64 Kbps is used as the line speed.

For dial circuits using Channelized T1/E1 as the base net, the line speed is 64 Kbps times the number of timeslots assigned or 56 Kbps if you set the bandwidth of the Channelized circuit to 56 Kbps. For example, if you set the number of timeslots for a Channelized circuit to 3, the line speed is 192 Kbps (3 \* 64 Kbps).

If the dial circuit is mapped to a V.25bis base interface, the line speed of the V.25bis interface is used for the FR dial circuit.

## Minimum Information Rate

The *minimum information rate (IR)* is the minimum data rate for a VC that the router throttles down to when it is notified of congestion. You set the minimum IR as a percentage of CIR using the **set ir-adjustment** configuration command. It can be dynamically changed using the **set ir-adjustment** console command. If you configure CIR equal to 0, the minimum IR is 1500 bps.

## Maximum Information Rate

The *maximum information rate* is the maximum data rate at which the router transmits for a VC. If the CIR monitoring feature is enabled and CIR and Bc are nonzero, the maximum information rate is calculated using CIR, Bc, and Be as follows:

$$( Bc + Be ) \text{ per } Tc \text{ interval}$$

If the CIR monitoring feature is enabled and CIR and Bc are configured equal to 0, the maximum information rate is equal to the excess burst size (Be) per second.

If the CIR monitoring feature is not enabled the maximum information rate is equal to the line speed.

### Variable Information Rate

The *variable information rate* (VIR) ranges from the configured minimum IR to the calculated maximum IR when the CIR monitoring or congestion monitoring features are enabled. The VIR is gradually decreased down to the minimum information rate when the router is notified of congestion on a circuit and is gradually increased to the maximum information rate when the router stops receiving congestion notifications. Using the **set ir-adjustment** configuration command, you configure the percentage of the information rate by which the VIR should decrease when the router is notified of congestion. You also use this command to configure the percentage of the information rate by which the VIR should be gradually increased when the congestion ends.

To avoid impulse loading of the network, the router initially sets the VIR to CIR when the VC becomes active. If you configure 0 for CIR, VIR is initially set to excess burst (Be) times the MIR adjustment percentage. For example, if Be is set to 64 000 and the MIR adjustment percentage is set to 25%, then the initial VIR would be equal to 16 000 bps.

The VIR can actually exceed the maximum value in one case. If the length of a frame in bits is greater than the maximum IR, Frame Relay transmits the frame anyway.

---

### Circuit Congestion

Circuit congestion occurs for one of the following reasons:

- The sender is transmitting faster than the allowable throughput
- The receiver is too slow when processing the frames
- An intermediate backbone link is congested, resulting in the sender transmitting faster than the available throughput allows.

When circuit congestion happens, the network must drop packets and/or shut down.

In response to circuit congestion, the router implements a *throttle down*, which is a step-wise slowing of packet transmission to the configured minimum IR. Throttle down occurs during the following conditions:

- Circuit congestion is occurring.
- The router is the sender of frames.
- CIR monitoring or congestion monitoring is enabled.

This section discusses monitoring of Frame Relay data rates and circuit congestion.

### CIR Monitoring

CIR monitoring is an optional Frame Relay feature that you can set for each interface to prevent the router from creating congestion conditions in the FR network. CIR monitoring allows the VIR for a VC to range between the configured minimum and maximum IR.

CIR monitoring is configured with the **enable cir-monitor** configuration command and is disabled by default. CIR monitoring, when enabled, overrides congestion

## Using Frame Relay

monitoring. You can also dynamically enable and disable CIR monitoring using the **enable cir-monitor** and **disable cir-monitor** console commands.

## Congestion Monitoring

Congestion monitoring is an optional feature, set per interface, that allows the VIR of VCs to vary in response to network congestion. The VIR assumes values between the minimum IR and a maximum IR of the line speed. Congestion monitoring is enabled by default. It can be disabled with the **disable congestion-monitor** configuration command and re-enabled with the **enable congestion-monitor** command. You can also dynamically enable and disable congestion monitoring using the **enable congestion-monitor** and **disable congestion-monitor** console commands.

CIR monitoring, if enabled, overrides congestion monitoring. If both CIR monitoring and congestion monitoring are disabled, the VIR for each VC on the interface is set to the line speed and does not decrease in response to network congestion.

**Note:** Even with compression enabled, the device uses the uncompressed size of frames to determine if the VIR is being exceeded.

## Congestion Notification and Avoidance

When congestion occurs, the FR backbone network is responsible for notifying the sender and receiver by sending out a FECN or a BECN signal. FECN and BECN are bits that are set in a frame to notify the DTEs at each end of a VC that congestion is occurring. FECN indicates that congestion is occurring in the same direction from which the frame was received; the sender is causing the congestion. BECN indicates that the frames sent by this DTE are causing network congestion.

Optionally, the network can use CLLM messages to convey congestion information for PVCs. CLLM messages are sent only to the congestion source and should be treated similarly to BECN messages by the DTE.

The example in Figure 25 on page 415 shows a congestion condition at switch B when frames are sent from router X to router Y. The FR backbone network notifies router X that frames it sends are encountering congestion by setting the BECN bit in frames sent to router X. The FR backbone network also notifies router Y that frames it receives encountered congestion by setting the FECN bit.

When the router receives a frame containing BECN, it is the router's responsibility to throttle down the VC's VIR (variable information rate) if either CIR monitoring or congestion monitoring is enabled. The router does this gradually as it receives consecutive frames with BECN until either the minimum IR is reached or a frame without BECN arrives. FR switches often set BECN in multiple frames after reaching a congestion threshold. In order for FR to avoid overreacting to network congestion when the network is setting multiple frames with BECN, FR will decrease a VC's VIR at most once every second. This allows the VIR to decrease gradually. As the router receives consecutive frames without BECN, the VIR gradually rises to the maximum IR.

Depending on the operation of the FR network, it may be necessary for the device to throttle down the VC's VIR when the device receives a FECN to minimize the overall amount of traffic being offered to the network as quickly as possible. Reducing the overall load on the network reduces the number of packets discarded



## Using Frame Relay

for all VCs to relieve congestion. Enabling the **throttle-transmit-on-fecn** parameter, along with either the CIR or congestion monitoring options, causes the device to treat a FECN like a BECN thus reducing overall FR network congestion when any congestion notification is received. Use the **throttle-transmit-on-fecn** parameter only in FR networks whose queuing methods do not provide dedicated buffers for both input and output. If the **throttle-transmit-on-fecn** is enabled, FR will decrease a VC's VIR at most once every second for each BECN or FECN received.

Some FR network switches set FECN to indicate congestion but do not set BECN. To provide congestion notification to the source of the congestion, enable the **notify-fecn-source** parameter allowing the device to set BECN in frames that it transmits over a VC on which it has received a FECN. This action provides a signal to the device that is causing the network congestion to throttle down its VC's VIR.

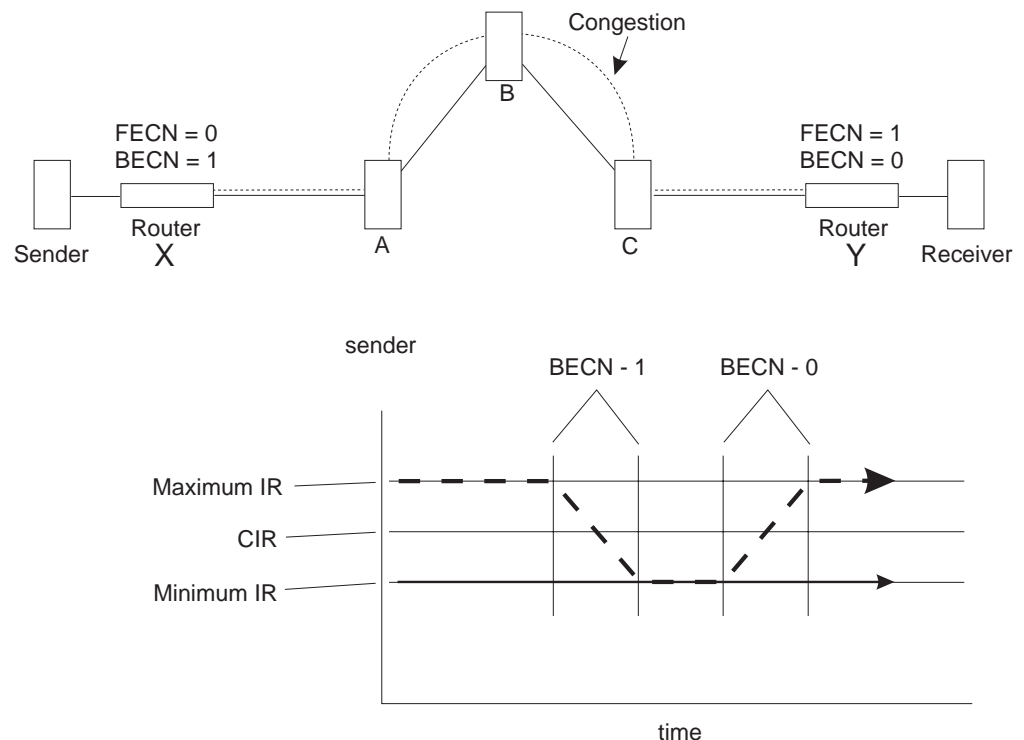 


Figure 25. Congestion Notification and Throttle Down

**Note:** If multiple DLCIs are configured between two end-stations when congestion occurs, it is possible that a second DLCI may be used to transmit data at a higher throughput until the congestion condition on the first DLCI is corrected.

Similarly, if the network provider supports CLLM, you can configure Frame Relay to *throttle down* its transmit rate for PVCs contained in a CLLM message. CLLM messages contain a cause code that indicates the type and severity of the problem being reported. The device reacts differently depending on the cause code and the CIR configured for each PVC contained in the CLLM message. When the device receives a CLLM message that indicates:

- A short-term condition, and the configured CIR for the PVC is nonzero, the Frame Relay protocol will throttle the transmit rate for the affected PVCs by the configured IR decrement percentage.

## Using Frame Relay

- A long-term condition, the Frame Relay protocol will set the transmit rate for the affected PVCs to the calculated minimum information rate.
- Facility or equipment failure or maintenance action, or if the CIR was configured as zero, the FR protocol will continue to transmit any queued data for the affected PVCs but will not accept any more outgoing packets from the upper layer protocols until the congestion condition is cleared.

Once a CLLM message for a PVC has been received, if the device does not receive any CLLM messages or BECNs within the  $T_y$  timer period or if a frame without a BECN is received, the device will consider the congestion condition cleared and gradually return the PVC to its configured transmission rates. If you are using CLLM to control congestion, you must not configure DLCI 1007 for any other use.

---

## Bandwidth Reservation over Frame Relay

For information on bandwidth reservation over Frame Relay, refer to “Using Bandwidth Reservation and Priority Queuing” and “Configuring and Monitoring Bandwidth Reservation” in *Using and Configuring Features*.

The bandwidth reservation system (BRS) should be configured to prioritize the data frame fragments if fragmentation is enabled on an interface. See “Fragmentation Over a Frame Relay Interface”.

---

## Fragmentation Over a Frame Relay Interface

Voice over Frame Relay (VoFR) is a method to transmit voice packets over a Frame Relay circuit. If you plan to use one Frame Relay circuit to carry both real-time (voice) and data traffic, you should configure that circuit to fragment the data traffic, especially if the link is relatively slow, for example, 64Kbps. Fragmentation is also needed for circuits on an interface that does not support voice if that interface exchanges with an interface that does support voice.

There are two types of fragmentation, end-to-end and interface (or UNI/NNI). Interface-level fragmentation has not been implemented by any major Frame Relay switch vendors and so it is not available from any Frame Relay service providers. Per the Frame Relay implementation agreement, FRF.12, end-to-end fragmentation is supported for PVCs only. Therefore, an interface with voice support can be used to support Frame Relay PVCs, but not SVCs.

You can configure the fragment sizes. Fragment sizes are not negotiated or communicated between interfaces and therefore may be different for two interconnected PVCs. The fragment size may vary from one link or PVC to another depending on the access speed of the link, the CIR of the PVC, and whether this interface is actually carrying real-time data or is communicating with another router whose interface is carrying real-time data. Other factors to consider when configuring fragmentation for voice over frame relay include committed burst size, BRS traffic classes and queue depths if BRS is configured, the number of global buffers created, and the number of receive buffers allocated to each interface.

Because of the overhead associated with fragmentation, it is best to keep the fragment size as large as possible while still maintaining high quality real-time data communications.

If a circuit transmits real-time data, you should configure the Bandwidth Reservation System (BRS) in addition to Frame Relay fragmentation on that interface and circuit. Enabling BRS can give higher priority to real-time data over other data. As a result, real-time data can be interleaved between other data that has been fragmented so that the queuing delay for the real-time data can be minimized.

BRS is required only for circuits that will actually be sending real-time data and other data. Other circuits on the interface, or circuits that communicate with interfaces that support real-time data, do not specifically need BRS support to allow interleaving.

Refer to the **assign** command in the chapter “Configuring and Monitoring Bandwidth Reservation” in the *Using and Configuring Features* for more information about configuring BRS.

**Note:** You can configure fragmentation either for an interface or for a circuit (also called a PVC). If you configure fragmentation for a PVC, you must use the **add permanent-virtual-circuit** or the **change permanent-virtual-circuit** command. The following example shows the **add permanent-virtual-circuit** command:

```
FR 1 Config>add perm 18
Committed Information Rate (CIR) in bps [64000]?
Committed Burst Size (Bc) in bits [64000]? 4800
Excess Burst Size (Be) in bits [0]?
Assign circuit name : :? VoFRcircuit1
Is circuit required for interface operation [N]?
Enable circuit for voice forwarding [N]?
Do you want to have end-to-end fragmentation performed [N]? y
Fragment size (50 to 1000) [256]?
Fragmented packet reassembly timer (3 to 10 seconds) [256]?
```

---

## Voice Forwarding Over Frame Relay

Voice forwarding over Frame Relay will enable a voice-capable or non-voice capable router to forward FRF.11 encapsulated packets, that is, voice packets, between Frame Relay PVCs without using a native voice adapter. This will allow a voice-capable router to multiplex voice and data over the same virtual circuit across the Frame Relay network. The voice-forwarding router will then route the received data using the protocol stack associated with the received traffic and forward the voice traffic to another PVC over the same or another Frame Relay interface. In a typical configuration, the voice traffic is forwarded to a locally attached voice-capable device.

Even though it is a DCE-like function, voice packet forwarding will be done over virtual circuits defined as DTEs. Voice forwarding will be allowed for PVCs only because voice over Frame Relay is supported for PVCs only.

A PVC that will be used for voice packet forwarding must be enabled through configuration to do so. In fact, a pair of PVCs on assumedly different Frame Relay interfaces must be defined to forward voice packets to each other. When you enable a PVC for voice forwarding, you must provide the net number and DLCI of the PVC to which the PVC should forward the voice packets. Frame Relay will forward all voice packets between the pair of PVCs defined to do voice forwarding.

---

## Displaying the Frame Relay Configuration Prompt

To access the Frame Relay configuration environment:

1. At the OPCON prompt (\*), type **talk 6**.

## Using Frame Relay

2. At the configuration prompt (Config>), enter the **list devices** command to see a list of interfaces configured on the router.
3. Enter the **network** command to display the Frame Relay configuration prompt. The network number is the number of the Frame Relay interface.

```
Config>network
What is the network number [0] 2
Frame Relay user configuration
FR 2 Config>
```

4. At the Frame Relay interface configuration prompt (FR Config>), use the commands discussed in this chapter to configure Frame Relay parameters.

---

## Frame Relay Basic Configuration Procedure

This section outlines the minimum configuration steps that you are required to perform to get the Frame Relay protocol up and running. If you desire any further configuration information and explanation, refer to the configuration commands described in this chapter.

**Note:** You must restart the router for new configuration changes to take effect.

- **Select FR management.** The FR Local Management Interface (LMI) protocol defaults to ANSI. You have the option of connecting to a network using the Interim LMI (REV1), ANSI T1.617 Annex D management, or ITU-T/CCITT Q.933 Annex A management. Use the **enable** and **set** commands to enable and set the required management.
- **Add a PVC.** Add any required PVCs that are needed if FR management is disabled or orphan circuits are disabled. If you want to bridge over a FR PVC, or if you want to run APPN over a FR PVC, you also must configure that PVC. Use the **add permanent-virtual-circuit** command.
- **Configure FR destination addresses.** If you are running a protocol such as IP or IPX over the FR interface, and are interconnecting with devices not supporting the Address Resolution Protocol (ARP) or Inverse ARP on FR, use the **add protocol-address** command to add the static protocol and address mapping.
- **Configure Bandwidth Reservation over Frame Relay.** In addition to the basic Frame Relay configuration, which must be done, you can also configure Bandwidth Reservation (an optional feature) over Frame Relay. For information on configuring Bandwidth Reservation, refer to Using Bandwidth Reservation and Priority Queuing in *Using and Configuring Features*.
- **Configure Discard Eligibility.** You can configure Discard Eligibility (DE) congestion control using Bandwidth Reservation. For information on configuring Discard Eligibility, refer to Using Bandwidth Reservation and Priority Queuing in *Using and Configuring Features*.
- **Configure Data Compression.** You can configure data compression for Frame Relay. For information on configuring data compression, refer to Configuring and Monitoring Data Compression in *Using and Configuring Features*.
- **Configure Data Encryption.** You can configure data encryption for Frame Relay. For information on configuring data encryption refer to Using and Configuring Data Encryption in *Using and Configuring Features*.

## Enabling Frame Relay PVC Management

There are three management options under Frame Relay:

- Interim Local Management Interface Revision 1
- ANSI T1.617 Annex D management
- ITU-T/CCITT Q.933 Annex A management.

Frame Relay defaults to ANSI enabled. If you want to change management types, or if you want to re-enable ANSI management, use the following procedure.

Enabling management over Frame Relay is a two-step process:

1. Enter the **enable lmi** command at the FR Config> prompt to enable management activity.
2. Enter the **set lmi-type** command to select the type of management for the interface.

See Table 58 for details of the management types available using the **set** command.

An example of how to set these management types is shown after the table. Also, refer to the **enable** and **set** command sections in this chapter for more information.

Table 58. Frame Relay Management Options

Command	Options	Description
set	lmi-type rev1	Conforms to LMI Revision 1 (Stratacom's Frame Relay Interface Specification)
set	lmi-type ansi	Conforms to ANSI T1.617 ISDN-DSS1-Signalling Specification for Frame Relay Bearer Service (known as Annex D)
set	lmi-type ccitt	Conforms to Annex A of ITU-T/CCITT Recommendation Q.933 - DSS1 Signalling Specification for Frame Mode Basic Call Control.

**Example:**

```
enable lmi
set lmi-type ansi
```

## Enabling Frame Relay SVC Management

Frame Relay SVC management is automatically enabled when SVCs are enabled.



---

## Chapter 29. Configuring and Monitoring Frame Relay Interfaces

This chapter describes the Frame Relay configuration and operational commands and includes the following sections:

- “Frame Relay Configuration Commands”
- “Accessing the Frame Relay Monitoring Prompt” on page 451
- “Frame Relay Monitoring Commands” on page 451
- “Frame Relay Interfaces and the GWCON Interface Command” on page 464

**Note:** For information on monitoring bandwidth reservation over Frame Relay, refer to Configuring and Monitoring Bandwidth Reservation in *Using and Configuring Features*.

---

### Frame Relay Configuration Commands

This section describes the Frame Relay configuration commands. Enter all commands at the Frame Relay *n*> prompt, where *n* represents the interface number. To access the Frame Relay *n*> prompt, perform the following steps:

1. At the OPCON prompt (\*), type **talk 5**.
2. At the GWCON prompt (+), enter the **interface** command to see a list of interfaces configured on the router.
3. Select the Frame Relay interface that you will configure.
4. Type **exit**.
5. At the OPCON prompt (\*), type **talk 6**.
6. At the Config> prompt, enter the **network** command followed by the network number of the frame relay interface. For example:

```
Config> net 2
Frame Relay user configuration
FR 2 Config>
```

You must restart the router for new configuration changes to take effect. Table 59 shows the commands.

Table 59. Frame Relay Configuration Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds PVCs, Required PVC groups, SVCs, and destination protocol addresses to the Frame Relay interface.
Change	Modifies a PVC, SVC, or Required PVC group previously defined by the <b>add</b> command.
Disable	Disables any enabled Frame Relay features.
Enable	Enables Frame Relay features such as circuit monitoring, management options, multicast, protocol-broadcast, fragmentation, and orphans.
List	Displays the current configuration of the LMI, PVCs, Required PVC groups, SVCs, HDLC information, and protocol addresses.

## Configuring Frame Relay Interfaces

Table 59. Frame Relay Configuration Commands Summary (continued)

Command	Function
LLC	Configures LLC parameters on the Frame Relay interface. These LLC parameters are required when running APPN over the Frame Relay interface.
Remove	Deletes any previously added PVCs, SVCs, or required PVC groups (if empty), or protocol addresses.
Set	Configures the Frame Relay management options and parameters (N1-parameter, N2-parameter, N3-parameter, P1 parameter, and T1-parameter). Configures the physical-layer parameters for FR serial interfaces. Sets the maximum frame size.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

**Note:** In this section, the terms *circuit number* and *PVC* are synonymous with the term DLCI (Data Link Circuit Identifier).

## Add

Use the **add** command to add a PVC, Required PVC group, or destination protocol address supported by the Frame Relay interface.

### Syntax:

```
add                permanent-virtual-circuit . . .  
                    protocol-address . . .  
                    pvc-group . . .  
                    switched-virtual-circuit . . .
```

### permanent-virtual-circuit

Adds a PVC to the Frame Relay interface beyond the reserved range 0 through 15. The maximum number of PVCs that can be added is approximately 992, but the actual number of PVCs that the interface can support depends on the throughput required for each PVC, the line speed, the type of protocols running on the interface, and the number of local management interface PVC information elements that can fit in the maximum frame size.

### Example:

```
add permanent-virtual-circuit  
Circuit Number [16]?  
Committed Information Rate (CIR) in bps [64000]?  
Committed Burst Size (Bc) in bits [64000]?  
Excess Burst Size (Be) in bits [0]?  
Assign Circuit name []?  
Is circuit required for interface operation [N]? y  
Does the circuit belong to a required PVC group [N]? y  
What is the group name []? group1  
Do you want to have data compression performed [Y]?  
Do you want to have end-to-end fragmentation performed [Y]?  
Fragment size (50 to 8190) [256]?  
Fragmented packet reassembly timer (3 to 10 seconds) [3]?  
Enable circuit for voice forwarding [N]? y  
Network number of voice forwarding PVC [0]?  
Circuit number of voice forwarding PVC [16]?  
Do you want to have data encryption performed [N]? y  
Should the encryption algorithm be CDMF (CDMF) or triple-DES (3DES) [CDMF]?  
Data encryption requires a key that is 16 hexadecimal characters long for CDMF,  
48 hexadecimal characters long for 3DES.  
  
You will be asked to enter the key twice for security reasons  
  
Please enter the key for the first time now
```



## Configuring Frame Relay Interfaces

A valid encryption key has been entered  
Please confirm the key by entering it again  
The encryption keys match - the key has been accepted

### **Circuit Number**

Indicates the circuit number for this PVC.

**Valid Values:** 16 to 1007.

### **Committed Information Rate**

Indicates the committed information rate (CIR). The CIR can be either 0, or a value in the range 300 bps to 6 312 000 bps. For more information, see “Committed Information Rate (CIR)” on page 410. The maximum is the value of the default CIR configured for the interface.

### **Committed Burst Size**

The maximum amount of data in bits that the network agrees to deliver during a measurement interval equal to committed burst (Bc) size / CIR seconds. The range is 300 to 6 312 000 bits. The maximum value is value of the default committed burst configured for the interface.

#### **Notes:**

1. If CIR is configured as 0 then the committed burst size is set to 0 and you are not prompted for a value. For additional information, see “Committed Burst (Bc) Size” on page 411.

### **Excess Burst Size**

The maximum amount of uncommitted data in bits in excess of committed burst size that the network attempts to deliver during a measurement interval equal to (Committed Burst Size/CIR) seconds. The range is 0 to 6 312 000 bits. The maximum value is the value configured for excess burst size for the interface. For additional information, see “Excess Burst (Be) Size” on page 411.

### **Assign Circuit Name**

Indicates the ASCII string that is assigned to describe the PVC. The default is unassigned.

### **Is the circuit required for operation**

Specify Y or N to indicate whether the circuit is required for interface operation.

### **Does the circuit belong to a required PVC group**

This prompt is displayed only for circuits that are required. Specify Y or N to indicate whether the circuit should belong to a required PVC group.

### **What is the group name**

Enables you to specify the name of the required PVC group when the PVC is defined as belonging to a required group. Enter a question mark (?) for a list of currently defined groups.

### **Do you want to have compression performed**

Enables you to specify whether or not the circuit will compress data packets. This question appears only if compression is enabled on the interface.

**Note:** If you enable compression on a PVC and exceed the interface’s compression circuit limit, you will get a message.

## Configuring Frame Relay Interfaces

Compression will be performed on the circuit, if possible - that is, the active compression limit has not been exceeded when the circuit becomes active. Compression limit includes the number of compression contexts allocated to SVCs as well as PVCs.

### Enable circuit for voice forwarding

Enables you to specify whether or not the circuit will forward voice packets. If you specify **Y** (yes), you must specify the network and circuit number of the PVC to which this PVC will forward voice frames.

### Do you want to have end-to-end fragmentation performed

Enables you to specify whether or not the circuit will perform fragmentation across the entire circuit. This question appears only if end-to-end fragmentation has been enabled on the interface. If UNI/NNI fragmentation is enabled, all circuits on this interface are automatically enabled for fragmentation, and this question does not appear.

When you specify the fragment size and reassembly timer values, you can override the defaults for the end-to-end fragment size and reassembly timer values configured for this interface.

### Do you want to have data encryption performed

Enables you to specify whether or not the circuit will encrypt data packets. This question appears only if encryption is enabled on the interface. The prompts for the encryption key and algorithm will only appear if you respond "yes" (or "y") to this question.

**Specifying the Encryption Key:** You must specify the encryption key value in hexadecimal characters.

**Valid Values:** 16 for CDMF, 48 for 3DES

### protocol-address

This command adds statically configured destination protocol (protocol-name) addresses to the Frame Relay interface. Statically configured destination protocol addresses are useful if neither Inverse ARP nor ARP is an option, or for other reasons such as security. Adding protocol name and address mappings (static ARP) is less efficient than Inverse ARP or ARP.

- Inverse ARP is the preferred, efficient method because of dynamic address mapping with no broadcasts.
- ARP is recommended if Inverse ARP is not an option. It is less efficient than Inverse ARP because it uses address broadcast and mappings are relearned at regular intervals.

This parameter prompts you for different information depending on the type of protocol that you are adding.

### Example:

```
add protocol-address  
Protocol name or number [0]?
```

### IP protocol:

```
IP Address [0.0.0.0]?  
Circuit Number or name [16]?
```

### IPX protocol:

Host Number (in hex) []?  
Circuit Number or name [16]?

### AppleTalk Phase 2 protocol:

Network Number (1-65279) []?  
Node Number (1-253) []?  
Circuit Number or name [16]?

### DN protocol:

Node address [0.0]?  
Circuit Number or name [16]?

### Protocol name or number

Defines the name or number of the protocol that you are adding. If you should specify an unsupported protocol, the system will prompt you with the error message:

```
Unknown protocol name, try again
```

For example, you may have erroneously specified one of the following:

Prot#	Name
0	IP
4	DN
7	IPX
22	AP2

To see a list of supported protocol types, type ? at the Protocol name or number [IP]? prompt.

### IP Address

Defines the 32-bit Internet address in dotted-decimal notation of the remote IP host.

### Host Number

Defines the 48-bit IPX node address of the remote IPX host.

### Network Number

Defines the AppleTalk Phase 2 network number of the remote AppleTalk host.

### Node Number

Defines the node number of the interface attached to the remote AppleTalk host.

### Node address

Defines the DECnet node address of the remote DECnet host. Configure the node address in the format x.y, where x is a 6-bit area address and y is a 10-bit node number.

### Circuit Number or name

Defines the PVC by DLCI or name or SVC by name that this remote protocol address is associated with.

### **pvc-group** *groupname*

Adds a required PVC group name.

**Note:** SVCs may not belong to a required PVC group.

### **switched-virtual-circuit**

Adds a switched virtual circuit (SVC). The SVC will act similar to a PVC except that the SVC's bandwidth will be allocated for it dynamically by the FR network only when the SVC is active. The number of SVCs that can be added is similar to the number of PVCs that can be added in that the

## Configuring Frame Relay Interfaces

number depends on the throughput required for each circuit, the line speed, etc. However, since the bandwidth for an SVC is only reserved when the SVC is active, it may be possible to support more SVCs over an interface than PVCs.

```
FR 4 Config>add switched-virtual-circuit
Circuit name []? svc01
Remote party number []? 12345
Remote party number numbering plan (E.164 or X.121) [E.164]?
Remote party number type (Unknown or International) [International]?
Remote party subaddress in hexadecimal []? 01
Remote party subaddress format (private or NSAP) [private]1?
Requested outgoing Committed Information Rate (CIR) in bps [64000]?
Minimum acceptable outgoing Committed Information Rate (CIR) in bps [64000]?
Requested incoming Committed Information Rate (CIR) in bps [64000]?
Minimum acceptable incoming Committed Information Rate (CIR) in bps [64000]?
Requested outgoing Committed Burst size (Bc) in bits [64000]?
Requested incoming Committed Burst size (Bc) in bits [64000]?
Requested outgoing Excess Burst size (Be) in bits [0]?
Requested incoming Excess Burst size (Be) in bits [0]?
Idle timer in seconds [60]?
Establish circuit to learn remote protocol addresses [Y]?
Is multicast required for this circuit [Y]?
Are call-ins allowed for this circuit [Y]?
```

### Circuit name

Specifies the circuit name for the SVC. This name will be used to associate the call with both a protocol and a BRS definition and will be used to identify a connection instead of a circuit number.

**Valid Values:** A 1 - 32 character ASCII string

**Default Value:** The name is required and must be unique for this interface

### Remote party number

Specifies the remote destination's Frame Relay address.

**Valid Values:** A 1 - 20 character string of decimal digits

**Default Value:** None

### Remote party numbering plan

Specifies the format of the remote party number. The numbering plan must match that used by the FR network.

**Valid Values:** E.164 (ISDN) or X.121 (Data)

**Default Value:** E.164

### Remote party number type

Specifies the destination Frame Relay party number type. The number type must match that used by the FR network.

**Valid Values:** International or Unknown

**Default Value:** International

### Remote party subaddress

Specifies the party entity (for example, protocol) within the destination node. If the subaddress is used, it will be matched to the remote device's subaddress. The subaddress at both ends of the connection must be the same.

The format of the **remote party subaddress** can be:

- NSAP

The number of digits entered must be even and in the range of X'0' - X'F'.

## Configuring Frame Relay Interfaces

- Private

If the encoding is BCD, then an odd number of digits in the range of 0 - 9 can be entered.

If the encoding is not BCD, then an even number of digits in the range of X'0' - X'F' can be entered.

The combination of **remote party number** and **remote party subaddress** must be unique on this interface. If parallel connections between two router interfaces is required, the subaddress must be used to uniquely identify each switched virtual connection definition.

**Valid Values:** 1 - 40 character hexadecimal string

**Default Value:** None

### **Requested outgoing throughput (CIR)**

Specifies the requested outgoing CIR. The network will provide this bandwidth, if available.

**Valid Values:** The CIR can be either 0, or a value in the range 300 bps to 6 312 000 bps.

**Default Value:** Default value is determined according to CIR-defaults at the interface level

### **Minimum acceptable outgoing Committed Information Rate (CIR)**

Specifies the minimum CIR that will be accepted if the network cannot provide the requested CIR.

**Valid Values:** The CIR can be either 0, or a value in the range 300 bps to 6 312 000 bps with a maximum of the **requested outgoing throughput (CIR)**.

**Default Value:** Default value is determined according to CIR-defaults at the interface level

### **Requested incoming CIR**

Specifies the requested incoming CIR.

**Valid Values:** The CIR can be either 0 or a value in the range 300 bps to 6 312 000 bps.

**Default Value:** Value of the **requested outgoing CIR**

### **Minimum acceptable incoming Committed Information Rate (CIR)**

Specifies the minimum CIR that will be accepted if the network cannot provide the requested CIR.

**Valid Values:** The CIR can be either 0 or a value in the range 300 bps to 6 312 000 bps with a maximum of the **requested incoming CIR**.

**Default Value:** Same as **minimum acceptable outgoing CIR**

### **Requested outgoing committed burst size (Bc)**

Specifies the requested outgoing committed burst size.

**Valid Values:** The CIR can be either 0 or a value in the range 300 bps to 6 312 000 bps.

**Default Value:** Value determined according to CIR-defaults at the interface level

## Configuring Frame Relay Interfaces

### **Requested incoming committed burst size (Bc)**

Specifies the requested incoming committed burst size.

**Valid Values:** The CIR can be either 0, or a value in the range 300 bps to 6 312 000 bps.

**Default Value:** Value equal to **requested outgoing Bc**

### **Outgoing excess burst size (Be)**

Specifies the requested outgoing burst size.

**Valid Values:** The CIR can be either 0, or a value in the range 300 bps to 6 312 000 bps.

**Default Value:** Value determined according to CIR-defaults at the interface level

### **Requested incoming excess burst size (Be)**

Specifies the requested incoming excess burst size.

**Valid Values:** The CIR can be either 0, or a value in the range 300 bps to 6 312 000 bps.

**Default Value:** Same as **requested outgoing excess burst size (Be)**

### **Idle timer**

Specifies the time period that a SVC will remain active in the absence of traffic. Specifying 0 designates this SVC as a fixed circuit that will be established the first time data arrives for it and will not be disconnected even if no traffic flows over it.

**Valid Values:** 0 - 65535 seconds

**Default Value:** 60

### **Establish circuit to learn remote protocol addresses**

Specifies whether this SVC should be established when the interface comes up to learn the protocol addresses of the adjacent node. This option can be used in place of statically configured destination protocol names and addresses for protocols that support dynamic address discovery, such as IP, IPX, Appletalk2, and DECnet IV to force the router to learn the protocol addresses associated with the remote device via directed InARP. Using this option may help reduce ARP broadcasts. The idle timer will be used to disconnect the SVC once the protocol addresses are learned.

**Valid Values:** yes or no

**Default Value:** yes

### **Is multicast required for this circuit**

Specifies whether or not this SVC should be used to transmit multicast packets on this interface even if it means setting the SVC up just to do so. You may use static routes to keep from requiring multicast over SVCs so that the SVCs will not be established just to exchange routing information.

**Valid Values:** yes or no

**Default Value:** Defaults according to the multicast emulation setting at the interface level

### **Are call-ins allowed**

Specifies whether or not a call-in from this remote DTE should be

## Configuring Frame Relay Interfaces

accepted. Specifying no can be used to block call-ins from specific users and help eliminate call-in/call-out race conditions.

**Valid Values:** yes or no

**Default Value:** yes

### Compression capable

Specifies whether Frame Relay compression is supported.

**Valid Values:** yes or no

**Default Value:** yes, if compression is enabled for the interface. Otherwise, no.

### Encryption capable

Enables you to specify whether or not the circuit will encrypt data packets. This question appears only if encryption is enabled on the interface. The prompts for the encryption key and algorithm will appear only if you activate encryption on the SVC.

**Specifying the Encryption Key:** You must specify the encryption key value in hexadecimal characters.

**Valid Values:** 16 for CDMF, 48 for 3DES

## Change

Use the **change permanent-virtual-circuit** command to change any previous PVCs that were added with the **add permanent-virtual-circuit** command. If you use end-to-end type fragmentation, use the **change permanent-virtual-circuit** command to designate the PVCs over which end-to-end fragmentation will take place.

### Syntax:

```
change permanent-virtual-circuit . . .  
switched-virtual-circuit . . .
```

### Example:

```
change permanent-virtual-circuit  
Circuit Number [16]?  
Committed Information Rate in bps [64000]?  
Committed Burst Size (Bc) in bits [64000]?  
Excess Burst Size (Be) in bits [0]?  
Assign Circuit Name: []?  
Is the circuit required for interface operation [N]?  
Does the circuit belong to a required PVC group [N]?  
Do you want to have data compression performed [Y]?  
Do you want end-to-end fragmentation performed on this circuit [Y]?  
Fragment size (50 to 8190) [256]?  
Fragmented packet reassembly timer (3 to 10 seconds) [3]?  
Do you want to have data encryption performed [N]?  
Enable circuit for voice forwarding [N]?
```

### permanent virtual circuit

See the **add permanent-virtual-circuit** command on page 422 for a description of the parameters, except for the fragmentation parameters. These are described at the **enable fragmentation** command.

### switched-virtual-circuit

```
FR 4 Config>change switched-virtual-circuit  
Circuit name []? svc01  
Remote party number []? 12345  
Remote party number numbering plan (E.164 or X.121) [E.164]?
```

## Configuring Frame Relay Interfaces

```
Remote party number type (Unknown or International) [International]?
Remote party subaddress in hexadecimal []? 01
Remote party subaddress format (private or NSAP) [private]1?
Requested outgoing Committed Information Rate (CIR) in bps [64000]?
Minimum acceptable outgoing Committed Information Rate (CIR) in bps [64000]?
Requested incoming Committed Information Rate (CIR) in bps [64000]?
Minimum acceptable incoming Committed Information Rate (CIR) in bps [64000]?
Requested outgoing Committed Burst size (Bc) in bits [64000]?
Requested incoming Committed Burst size (Bc) in bits [64000]?
Requested outgoing Excess Burst size (Be) in bits [0]?
Requested incoming Excess Burst size (Be) in bits [0]?
Idle timer in seconds [60]?
Establish circuit to learn remote protocol addresses [Y]?
Is multicast required for this circuit [Y]?
Are call-ins allowed for this circuit [Y]?
```

See page 425 for a description of the parameters.

## Disable

Use the **disable** command to disable those features previously enabled using the **enable** command.

### Syntax:

```
disable                cir-monitor
                        cllm
                        compression
                        congestion-monitor
                        dn-length-field
                        encryption
                        fragmentation
                        lmi
                        lower-dtr
                        multicast-emulation
                        no-pvc
                        notify-fecn-source
                        orphan-circuits
                        protocol-broadcast
                        switched-virtual-circuits
                        throttle-transmit-on-fecn
```

### **cir-monitor**

Disabling this feature allows the circuit's information rate to exceed the maximum information rate that is calculated using the parameters configured with the **add permanent-virtual-circuit** or **add switched-virtual-circuit** command. The default setting for this feature is disabled. See "Circuit Congestion" on page 413 for more information.

**cllm** Disables the device from *throttling down* in response to a CLLM message. The default is disabled. See "Circuit Congestion" on page 413 for details.



### **compression**

Disables compression on the interface. Compression will not be performed for any VC.

### **congestion-monitor**

Disables the congestion monitoring feature. Disabling this feature prevents a circuit's information rate from varying in response to congestion between the minimum information rate and the line speed. See "Circuit Congestion" on page 413 for more information. The default setting for this feature is enabled.

### **dn-length-field**

Prevents inter-operation with implementations of DECnet Phase IV over Frame Relay that require a length field to precede DECnet packets in Frame Relay frames, but allows inter-operation with DECnet Phase IV Frame Relay software that does not use a length field before the DECnet packet. Disabling dn-length-field causes Frame Relay not to insert a length field into transmitted frames containing DECnet packets and not to attempt to remove the length field from received frames containing DECnet packets.

**Note:** This option is presented as a configuration option only

### **encryption**

Disables encryption on the interface. Even though the PVCs on this interface may be encryption capable, encryption will not take place.

### **fragmentation**

Globally disables fragmentation for this interface.

### **lmi**

Disabling this parameter allows for normal operation or end-to-end Frame Relay testing in the absence of a real network or management interface. With end-to-end Frame Relay testing, it is necessary to add like PVCs (the same PVC number, such as 16 and 16) on both ends of the link.

### **lower-dtr**

This parameter determines how the data terminal ready (DTR) signal is handled for leased serial-line interfaces on the router. It is not supported on Frame Relay dial circuit interfaces. See the **enable lower-dtr** command for a more complete description of the lower-dtr parameter.

The following cable types are supported:

- EIA 232 (RS-232)
- V.35
- V.36

The default setting is **disable lower-dtr**.

### **multicast-emulation**

Disables multicast emulation on each active VC. The default setting for this feature is enabled. If you disable this feature, you are required to add protocol static address maps.

Some protocols, such as IPX RIP, will not function on the Frame Relay interface if multicast-emulation is disabled. The protocol-broadcast feature also requires multicast-emulation in order to function properly. For more information, see "Multicast Emulation and Protocol Broadcast" on page 408.

### **no-pvc**

Controls whether the interface is considered active or inactive. If no-pvc is

## Configuring Frame Relay Interfaces

disabled, the presence of active PVCs on the interface does not affect whether the Frame Relay interface is considered active or inactive.

### **notify-fecn-source**

Disables setting a BECN bit on the first packet destined to a device from which the router received a packet with the FECN bit set. See “Circuit Congestion” on page 413 for more information.

### **orphan-circuits**

Prohibits the use of all non-configured PVC orphan circuits at the interface. The default setting for orphan circuits is enabled. Disabling orphan circuits adds a measure of security to your network by preventing unauthorized entry from a non-configured circuit. However, if you disable orphan circuits, you are required to add PVCs that will be used on the interface.

### **protocol-broadcast**

Prohibits protocols such as IP RIP from functioning over the Frame Relay interface. For more information, see “Multicast Emulation and Protocol Broadcast” on page 408. The default setting for this feature is enabled.

### **switched-virtual-circuits**

Prohibits the use of SVCs.

### **throttle-transmit-on-fecn**

Prohibits the device from *throttling down* the transmission of packets in response to a packet with a FECN bit set on. The default is disabled. See “Circuit Congestion” on page 413 for more information.

## Enable

Use the **enable** command to enable Frame Relay features.

### **Syntax:**

<b><u>enable</u></b>	<u>cir-monitor</u>
	<u>cllm</u>
	<u>compression</u>
	<u>congestion-monitor</u>
	<u>dn-length-field</u>
	<u>encryption</u>
	<u>fragmentation</u>
	<u>lmi</u>
	<u>lower-dtr</u>
	<u>multicast-emulation</u>
	<u>notify-fecn-source</u>
	<u>no-pvc</u>
	<u>orphan-circuits</u>
	<u>protocol-broadcast</u>
	<u>switched-virtual-circuits</u>
	<u>throttle-transmit-on-fecn</u>
	<u></u>

### **cir-monitor**

Enables the circuit monitoring feature. The circuit monitoring feature ensures that the circuit's information rate varies between the minimum information rate and the maximum information rate, calculated using the parameters configured with the **add permanent-virtual-circuit** command or the **change permanent-virtual-circuit** command.

**Note:** The circuit monitoring feature overrides the congestion monitoring feature if there is a conflict when both are enabled. The default setting for this feature is disabled.

For additional information on CIR monitoring, see “CIR Monitoring” on page 413.

**Note:** To maximize throughput for circuits running data compression, you should not enable CIR monitoring on the same interface on which you have enabled compression. Because the device uses the uncompressed size of frames to determine if the VIR of a PVC is being exceeded and compressed frames will require less bandwidth, the CIR of a PVC will be under-utilized if the device strictly monitors and does not exceed the configured CIR. Instead, congestion monitoring can be used to allow the device to react to congestion indications sent by the FR network to avoid frame loss.

**cllm** Enables the device to *throttle down* in response to a CLLM message. Contact your FR network provider to see whether this support is available. See “Circuit Congestion” on page 413 for more information.

### **compression**

Enables compression on the interface. All compression-capable VCs on the interface can compress data packets, provided that contexts are available and the active compression circuit limit has not been exceeded. (See Configuring and Monitoring Data Compression in *Using and Configuring Features* for details.)

**Note:** To maximize throughput for circuits running data compression, you should not enable CIR monitoring on the same interface on which you have enabled compression. Because the device uses the uncompressed size of frames to determine if the VIR of a VC is being exceeded and compressed frames will require less bandwidth, the CIR of a VC will be under-utilized if the device strictly monitors and does not exceed the configured CIR. Instead, congestion monitoring can be used to allow the device to react to congestion indications sent by the FR network to avoid frame loss.

### **congestion-monitor**

Enables the congestion monitoring feature. This feature allows a circuit's information rate to vary in response to congestion between the minimum information rate and the line speed.

**Note:** The circuit monitoring feature overrides the congestion monitoring feature if there is a conflict when both are enabled. The default setting for this feature is enabled.

For additional information on congestion monitoring, see “Congestion Monitoring” on page 414.

## Configuring Frame Relay Interfaces

### **dn-length-field**

Supports inter-operation with implementations of DECnet Phase IV over Frame Relay that require a length field to precede DECnet packets in Frame Relay frames. Enabling dn-length-field causes Frame Relay to insert a length field into transmitted frames containing DECnet packets and to remove the length field from received frames containing DECnet packets. This option is disabled by default. By default, Frame Relay will neither insert nor attempt to remove the length field.

**Note:** This option is presented as a configuration option only when the router software contains the DECnet Phase IV protocol.

### **encryption**

Enables encryption on the interface. All VCs that are configured as encryption enabled, will encrypt all transmitted data.

**fragmentation** *fragmentation-type* *fragment-size* *fragmented packet-reassembly-timer* Enables fragmentation on an interface. Fragmentation on a circuit causes frames larger than the fragment size to be broken into smaller pieces and transmitted as separate frames. If end-to-end fragmentation is enabled, frames smaller than the fragment size will not be sent with a fragmentation header and can be interleaved between fragments of other frames. Fragmentation should be enabled for circuits that are either forwarding voice frames or communicating with another interface that is forwarding voice frames. Note however that fragmentation and interleaving can be done for any high priority data; that is, interleaving is supported for protocols other than voice over Frame Relay.

Keep in mind that you should configure the Bandwidth Reservation System (BRS) when you enable fragmentation to give priority to real-time traffic such as voice. For information on bandwidth reservation over Frame Relay, refer to “Using Bandwidth Reservation and Priority Queuing” and “Configuring and Monitoring Bandwidth Reservation” in *Using and Configuring Features*.

### **fragmentation-type**

The values of this parameter are:

- User Network Interface (UNI)/ Network-to-Network Interface (NNI)
- End-to-end

User Network Interface (UNI)/Network-to-Network Interface (NNI) is the default type. UNI is DTE to DCE fragmentation; NNI is DCE to DCE fragmentation; and end-to-end is DCE to DCE fragmentation over particular specified PVCs within the interface.

When UNI/NNI fragmentation is enabled, fragmentation occurs for all circuits on the interface, including management PVCs, that is, DLCI 0. When you configure fragmentation over a PVC, the fragmentation type for that circuit is always end-to-end. You must enable end-to-end fragmentation for both ends of the PVC when fragmenting. The fragment size need not be the same in both directions, however.

If the path to the next router passes through a Frame Relay switch, you should use the end-to-end fragmentation type. If you use

## Configuring Frame Relay Interfaces

UNI/NNI connection from the 2210 to the next router, make sure that your Frame Relay network provider supports UNI/NNI fragmentation.

**Valid Values:** UNI/NNI, or end-to-end

**Default Value:** UNI/NNI

### **fragment-size**

Displays the fragment size of each fragment in bytes. For UNI/NNI fragmentation, this parameter specifies the fragment size used for all circuits on the interface. For end-to-end fragmentation, this parameter specifies the default fragment size for PVCs on this interface.

The fragment sizes are not negotiated and do not need to be the same on both sides of the PVC. However, the frame sent cannot be larger than the MTU of the receiving end of the PVC, regardless of the fragment size. If the frame exceeds the MTU of the receiving end, when the fragment arrives that overloads the receiver, the receiver will perform the following actions:

1. send an error message stating that it cannot buffer the fragment
2. discard that fragment
3. display the message *Out of sequence fragments*
4. eventually discard all the fragments of that frame

### **Tips for Selecting the Fragment Size:**

- When you specify the fragment size, be sure that the fragment size is appropriate for the capacity of your link. The fragment size chosen should be based on the access rate and the amount of delay that is tolerable for any real-time data sharing the link.
- In addition, buffers on the router are allocated for each fragment. If the frame size is large and the fragment size very small, the router can allocate so many of its buffers to the fragments that the performance of the router itself is degraded.

**Valid Values:** 50 to 8190 bytes

**Default Value:** 256 bytes

### **fragmented-packet-reassembly-timer**

Displays the length of time in seconds that the receiver of the fragments waits for the next-in-sequence fragment to arrive. If this timer expires before the next fragment arrives, all the received fragments for that frame are discarded.

**Valid Values:** 3 to 10 seconds

**Default Value:** 3 seconds

**Imi** Enables management activity.

After issuing the **enable Imi** command, use the **set Imi-type** command to select the management mode for your Frame Relay interface. See “Enabling Frame Relay PVC Management” on page 419. The system defaults to ANSI T1.617 Annex D management.

## Configuring Frame Relay Interfaces

Use the **enable lmi** command to resume LMI management if you have previously disabled Frame Relay management.

LMI only provides information about PVCs on an interface, so it does not need to be enabled if only SVCs are used unless it is required by the network. Q.922 determines the usability of all SVCs on an interface and is an indicator of the state of the interface itself. When both PVCs and SVCs are on an interface, LMI and Q.922 may be active at the same time.

### **lower-dtr**

This parameter determines how the data terminal ready (DTR) signal is handled for leased serial-line interfaces that are disabled. It is not supported on Frame Relay dial circuit interfaces. If this parameter is set to "disabled" (the default), the DTR signal will remain raised when the interface is disabled.

When lower-dtr is enabled, DTR will be lowered when the interface is disabled. This behavior may be desirable in situations where the interface has been configured as an alternate link for WAN Reroute and the interface is connected to a dial-out modem which maintains its dial connection based on the state of the DTR signal.

If this feature is enabled and the interface is disabled, the DTR signal is low and the modem keeps the dial connection down. When the interface is enabled, due to a WAN Reroute backup scenario, DTR is raised and the modem dials a stored number to the backup site. When the primary interface is restored, the alternate interface is disabled, DTR is lowered, and the modem hangs up the dial connection.

The following cable types are supported:

- EIA 232 (RS-232)
- V.35
- V.36

The default setting is **disable lower-dtr**.

### **multicast-emulation**

Enables multicast emulation. This allows a multicast/broadcast frame to be transmitted on each active VC. Protocols such as ARP, IPX RIP, and IP RIP require multicast emulation to be enabled to function correctly over a Frame Relay interface. For more information, see "Multicast Emulation and Protocol Broadcast" on page 408. The default for this parameter is enabled.

### **no-pvc**

Controls whether the interface is considered active or inactive. When this feature is enabled, the Frame Relay interface becomes inactive when there are no active PVCs on the interface. If at least one PVC is active, the Frame Relay interface becomes active when a successful LMI exchange occurs between the router and the FR switch.

### **notify-fecn-source**

Enables setting a BECN bit on the first packet destined to a device from which the router received a packet with the FECN bit set. Use this parameter to enhance the congestion control mechanisms of the device in a network whether the FR switches do not themselves set BECN but set FECN. See "Circuit Congestion" on page 413 for more information.

### **orphan-circuits**

Enables the use of all non-configured orphan circuits. The default for this

## Configuring Frame Relay Interfaces

feature is enabled. See “Orphan Permanent Virtual Circuit CIR” on page 411 for information about the default CIR values.

### protocol-broadcast

Allows protocols such as IP RIP to function correctly over the Frame Relay interface. The multicast emulation feature must be enabled for the protocol-broadcast feature to function correctly. The default setting for this feature is enabled.

### switched-virtual-circuits

Allows the use of SVCs and prompts you for the local SVC network number, the numbering plan, whether call-ins from orphan SVCs are allowed, the number of dial-out retries performed for all SVCs on the interface, and whether network emulation mode, which is used in back-to-back (for example, dial circuit) router configurations, is required.

You can also use the **enable switched-virtual-circuits** command to change configured SVC interface parameters if SVCs have already been enabled.

#### Example:

```
FR 1 Config> enable switched
Local party number []? 4141990
Local party number numbering plan (E.164 or X.121) [E.164]?
Local party number type (Unknown or International) [International]?
Are call-ins allowed on this interface [Y]?
Call-out redial attempts [2]?
Network emulation mode [N]?
```

#### Local party number

Specifies the destination’s Frame Relay address.

**Valid Values:** A 1 - 20 character string of decimal digits

**Default Value:** None

#### Local party numbering plan

Specifies the format of the party number. The numbering plan must match that used by the FR network.

**Valid Values:** E.164 (ISDN) or X.121 (Data)

**Default Value:** E.164

#### Local party number type

Specifies the destination Frame Relay party number type. The number type must match that used by the FR network.

**Valid Values:** International or Unknown

**Default Value:** International

#### Call-ins allowed

Specifies whether calls from unconfigured (orphan) SVCs are allowed on this interface.

#### Call-out redial attempts

Specifies the number of call-out redial attempts that will be performed for each SVC in case of a call-out timeout on this interface.

**Default Value:** 2

#### Network emulation mode

Specifies whether this SVC is in network emulation mode. It is used for a back-to-back router configuration.

## Configuring Frame Relay Interfaces

### throttle-transmit-on-fecn

Enables the device to *throttle down* the transmission of packets in response to a packet with a FECN bit set on. Use this parameter to minimize overall FR network congestion whenever a congestion indication is received. It causes the device to react to a FECN in the same way that it reacts to a BECN.

## List

Use the **list** command to display currently configured management and PVC information.

### Syntax:

```
list                                all
                                     fragmentation-capable-pvcs
                                     hdlc
                                     lmi
                                     permanent-virtual-circuits
                                     protocol-addresses
                                     pvc-groups
                                     switched-virtual-circuits
                                     voice-forwarding-circuits
```

**all** Displays the Frame Relay configuration. The display is a combination of the **list hdlc**, the **list lmi**, and the **list permanent virtual circuits** commands.

See **list hdlc** and **list lmi** for descriptions of the parameters.

### fragmentation-capable-pvcs

Displays all PVCs which are end-to-end fragment enabled along with their fragment size and reassembly timer values.

**hdlc** Displays the Frame Relay High-Level Data Link Control (HDLC) configuration.

### Example:

```
list hdlc                                Frame Relay HDLC Configuration

Maximum frame size    = 2048
Encoding              = NRZ
Idle state            = Flag
Clocking              = External
Cable type            = V.35 DTE
Line speed (bps)     = 64000
Transmit delay        = 0
Lower DTR             = Enabled
```

### Encoding

The transmission encoding scheme for the serial interface. Encoding is NRZ (non-return to zero) or NRZI (non-return to zero inverted).

**Idle** The data link idle state: flag or mark.

### Clocking

The type of clocking: internal or external.



## Configuring Frame Relay Interfaces

### Cable type

The serial adapter cable type: RS-232, V.35, V.36, or X.21.

### Line Speed (bps)

Indicates the physical data rate for the Frame Relay interface.

### Maximum frame size

Indicates the maximum frame size that can be transmitted or received over the network at any given time.

### Transmit delay

Indicates the number of additional flag bytes sent between frames.

### Lower DTR

Indicates whether the router will drop the DTR signal when a WAN Reroute alternate link is no longer needed. Dropping the DTR signal causes the modem to terminate the leased-line connection for the alternate link. Lower DTR does not appear when the cable type is X.21.

### Note:

For a FR dial circuit interface, only the maximum frame size is displayed.

**Imi** Displays logical management and related configuration information about the Frame Relay interface.

### Example:

Frame Relay Configuration

```
LMI enabled           = No   LMI DLCI           = 0
LMI type             = ANSI  LMI Orphans OK      = Yes
CLLM enabled         = No   Timer Ty seconds    = 11
SVCs enabled         = No
Protocol broadcast   = Yes   Congestion monitoring = Yes
Emulate multicast    = Yes   CIR monitoring       = No
Notify FECN source   = No   Throttle transmit on FECN = No

Data compression     = No
3
Fragmentation Type = END-TO-END
Fragmentation Size = 440  Fragment reassembly timer = 3

Number VCs P1 allowed = 64   Interface down if no PVCs = No
Timer T1 seconds      = 10   Counter N1 increments    = 6
LMI N2 error threshold = 3   LMI N3 error threshold window = 4
MIR % of CIR          = 25   IR % Increment           = 12
IR % Decrement        = 25   DECnet length field      = No
Default CIR           = 64000 Default Burst Size       = 64000
Default Excess Burst  = 0
```

**3** The two lines that follow this marker appear only when fragmentation is on (yes).

### LMI enabled

Indicates whether the management features are enabled on the Frame Relay interface, yes or no.

### LMI DLCI

Indicates the management circuit number. This number reflects the LMI type: 0 for ANSI and ITU-T/CCITT and 1023 for REV1.

### LMI Type

Indicates the LMI type: REV1, ANSI, or CCITT.

## Configuring Frame Relay Interfaces

### **LMI Orphans OK**

Indicates if non-configured circuits are available for use, yes or no.

### **CLLM Enabled**

Indicates whether CLLM is enabled on the Frame Relay interface.

### **Timer Ty seconds**

Indicates the amount of time that must elapse without the device receiving any CLLM messages or BECNs before the device considers a congestion condition cleared and gradually return the PVC to its configured transmission rate.

### **SVC network number**

Specifies the network number for the SVCs on this interface.

### **SVC number type**

Specifies the SVC number type, unknown or international.

### **SVC numbering plan**

Specifies whether the numbering plan is E.164 or X.121.

### **SVC call-out redial attempts**

Specifies the number of call-out redial attempts on this interface.

### **SVC network emulation mode**

Specifies whether this interface operates in network emulation mode for SVCs.

### **SVC call-ins allowed**

Specifies whether call-ins are allowed on this interface.

### **Protocol Broadcast**

Indicates whether protocols such as IP RIP can function over the Frame Relay interface, yes or no.

### **Emulate multicast**

Indicates whether the multicast emulation feature is enabled on each active PVC, yes or no.

### **Congestion Monitoring**

Indicates whether the congestion monitoring feature that responds to network congestion is enabled, yes or no.

### **CIR monitoring**

Indicates whether the circuit monitoring feature that enforces the transmission rate is enabled, yes or no.

### **Notify FECN Source**

Indicates whether this device sets a BECN bit on the first packet destined to a device from which the router received a packet with the FECN bit set.

### **Throttle Transmit on FECN**

Indicates whether the device will *throttle down* the transmission of packets in response to a packet with a FECN bit set on.

### **Data compression**

Indicates whether this interface has data compression enabled.

### **Data encryption**

Indicates whether this interface has data encryption enabled and the number of circuits that are encryption capable.

## Configuring Frame Relay Interfaces

### Fragmentation

Indicates whether fragmentation is enabled on this interface.

### Fragmentation type

Displays the fragmentation type: User-to-Network (UNI) interface; Network-to-Network (NNI) interface; or end-to-end, which is fragmentation by peer DTEs over a specified PVC.

### Fragment size

Displays the fragment size of each fragment in bytes.

### Fragmentation timer value

Displays the length of time in seconds that the receiver of the fragments waits for the next fragment to arrive. If this timer expires before the next fragment arrives, all the received fragments for that frame are discarded.

### Orphan compression

Indicates whether orphan circuits on this interface will have data compression enabled.

**Note:** Enabling compression on orphan circuits will decrease the number of available compression contexts available for the native PVCs on the device.

Orphan compression applies to both PVCs and SVCs.

### Compression circuit limit

Indicates the maximum number of circuits that can participate in data compression.

### Number of compression VCs

Indicates the current number of VCs supporting data compression.

### P1 allowed

Indicates the number of allowable PVCs and SVCs for use with this interface.

### Timer T1 seconds

Indicates the frequency with which the Frame Relay interface performs a sequence number exchange with the Frame Relay switch LMI entity.

### Counter N1 increments

Indicates the number of T1 timer intervals which must expire before a complete PVC LMI status enquiry is made.

### LMI N2 error threshold

Indicates the number of management event errors occurring within the N3 window that will cause a reset of the Frame Relay interface.

### LMI N3 error threshold window

Indicates the number of monitored management events used to measure the N2 error threshold.

### MIR % of CIR

Minimum IR, expressed as a percentage of CIR.

### IR % Increment

Percentage by which the router increments the IR each time it receives a frame without BECN until it reaches the maximum IR.

## Configuring Frame Relay Interfaces

### IR % Decrement

Percentage by which the router decrements the IR each time it receives a frame that contains BECN until it reaches the minimum IR.

### Default CIR

The committed information rate, in bits per second, used as the default for VCs on this interface.

### Default Burst Size

The committed burst size, in bits, used as the default for VCs on this interface.

### Default Excess Burst Size

The excess burst size, in bits, used as the default for VCs on this interface.

### permanent-virtual-circuits

Displays all the configured PVCs on the Frame Relay interface.

#### Example:

```
FR 0 Config>LIST PERMANENT-VIRTUAL-CIRCUITS
```

```
Maximum circuits allowable = 64  
Total circuits configured = 3  
Total PVCs configured = 3
```

Circuit Name	Circuit Number	Options	CIR in bps	Burst Size	Excess Burst
Unassigned	16	R	64000	64000	0
Bigcir	17	F V	64000	64000	0
Unassigned	18		64000	64000	0

R = circuit is required

G = circuit is required and belongs to a required PVC group

F = circuit is fragmentation capable

c = circuit is data compression capable

V = circuit is voice forwarding enabled

### Maximum circuits allowable

Indicates the number of PVCs and SVCs that can exist for this interface. This number includes any PVCs that you added with the **add permanent-virtual-circuit** command and any SVCs that you added with the **add switched-virtual-circuit** command and dynamically learned through the management interface.

### Total PVCs configured

Indicates the total number of currently configured PVCs that can exist for this interface.

### Circuit Name

Indicates the ASCII designation of the configured PVC.

### Circuit Number

Indicates the DLCI of a currently configured PVC.

### Circuit Type

Indicates the type of virtual circuit currently configured. This release of Frame Relay only supports permanent virtual circuits.

### Committed Information Rate

Indicates the information rate at which the network agrees to transfer data under normal conditions.

## Configuring Frame Relay Interfaces

### Committed Burst Size

The maximum amount of data in bits that the network agrees to deliver during a measurement interval equal to (Committed Burst Size/CIR) seconds.

### Excess Burst Size

The maximum amount of uncommitted data in bits in excess of Committed Burst Size that the network attempts to deliver during a measurement interval equal to (Committed Burst Size/CIR) seconds.

### pvc-groups

Displays all the Required PVC groups on the Frame Relay interface.

#### Example:

```
list pvc-groups
  Required PVC group = group1

  Circuit # 16
```

### protocol-addresses

Displays all the statically configured protocol addresses of circuit mappings at the Frame Relay interface.

#### Example:

```
list protocol-addresses
  Frame Relay Protocol Address Translations
```

Protocol Type	Protocol Address	Circuit Number or Name
IP	125.2.29.4	21
IPX	000000004503	16

### Protocol Type

Displays the name of the protocol running over the interface.

### Protocol Address

Displays the protocol address of the device at the other end of the circuit.

### Circuit Number or Name

Displays the DLCI of the PVC or the name of the SVC that is handling the protocol.

### switched-virtual-circuits

```
FR 0 Config>LIST SWITCHED-VIRTUAL-CIRCUITS
```

```
Maximum circuits allowable = 64
Total SVCs configured = 2
```

Circuit Name	Options	Idle Timer		Outgoing Value	Incoming Value
SVC1	ILM c	60	CIR:	64000	64000
Remote party number: IE3445667			Min CIR:	64000	64000
Remote subaddress: Pc4456d			Burst:	64000	64000
			Excess:	0	0
svc1	ILM c	60	CIR:	64000	64000
Remote party number: IE3445666			Min CIR:	64000	64000
Remote subaddress: P344566			Burst:	64000	64000
			Excess:	0	0

```
Options: I - call-ins allowed, L - learn protocols, M - Multicast required
         c - compression capable, F - UNI/NNI fragmentation enabled
Address type: I - International, U - Unknown
Numbering plan: E - E.164, X - X.121
Subaddress format: N - NSAP, P - private
```

### Maximum circuits allowable

Indicates the number of circuits that can exist for this interface.

## Configuring Frame Relay Interfaces

### Total SVCs configured

Indicates the total number of currently configured SVCs for this interface.

### Circuit Name

Indicates the ASCII designation of the configured circuit.

### Committed Information Rate

Indicates the information rate at which the network agrees to transfer data under normal conditions.

### Committed Burst Size

The maximum amount of data in bits that the network agrees to deliver during a measurement interval equal to (Committed Burst Size/CIR) seconds.

### Excess Burst Size

The maximum amount of uncommitted data in bits in excess of Committed Burst Size that the network attempts to deliver during a measurement interval equal to (Committed Burst Size/CIR) seconds.

### Idle Timer

Time period that the SVC will remain active in the absence of traffic.

### Options

Indicates the options configured for the circuit.

### Remote party number

Remote destination FR address. This address is prefixed by the address type and numbering plan used.

### Remote subaddress

Remote party subaddress assigned to this connection. The subaddress is prefixed by the subaddress format.

### voice-forwarding-circuits

```
FR 2 Config>list voice
```

Circuit Name	Circuit Number	Forwarding Network	Forwarding Circuit
----- circ11	----- 17	----- 0	----- 16

### Circuit Name

Indicates the ASCII designation of the configured circuit.

### Circuit Number

Indicates the circuit for this PVC.

### Forwarding Network

Indicates the net number to which this circuit forwards voice frames.

### Forwarding Circuit

Indicates the circuit number to which this circuit forwards voice frames.

## LLC

Use the **LLC** command to access the LLC configuration environment. See “LLC Configuration Commands” on page 241 for an explanation of each of these commands.

**Note:** The **LLC** command is supported only if APPN is in the software load.

**Syntax:**

llc

## Remove

Use the **remove** command to delete any PVC, Required PVC group, or protocol-address previously added using the **add** command.

**Syntax:**

```
remove                permanent-virtual-circuit . . .  
                        protocol-address  
                        pvc-group  
                        switched-virtual-circuit circuit-name
```

**permanent-virtual-circuit** *pvc#*

Deletes any configured PVC in the range 16 to 1007.

**Notes:**

1. When you delete a PVC that is running compression, the interface decreases the count of active compression PVCs. If this action brings the count of compression PVCs below the limit, you will receive a message to that effect.
2. When you delete a PVC that is running encryption, the interface decreases the count of active encryption PVCs.

**Note:** Encryption support is optional. If your software load does not include encryption, you will not see encryption-related parameters.

The use of multiple encryption (using encryption at both the IP Security Layer and at the Frame Relay or PPP data-Link Layer) within the router is restricted by U.S.A. Government export regulations. It is only supported in software loads that are under strict export control (software loads that support RC4 with 128 bit keys and Triple DES).

**protocol-address**

Deletes any configured protocol addresses (static ARP entries). This parameter prompts you for different information depending on the type of protocol that you are adding.

**Example:**

```
remove protocol-address  
Protocol name or number [IP]?
```

**IP protocol:**

```
IP Address [0.0.0.0]?  
Circuit Name or Number [16]?
```

**IPX protocol:**

```
Host Number (in hex)[]?  
Circuit Name or Number [16]?
```

## Configuring Frame Relay Interfaces

### AppleTalk Phase 2 protocol:

Network Number (1-65279) []?  
Node Number (1-253) []?  
Circuit Name or Number [16]?

### DN protocol:

Node address [0.0]?  
Circuit Name or Number [16]?

### Protocol name or number

Defines the name or number of the protocol that you are deleting. If you try to delete an unsupported protocol the system will display the error message:

Unknown protocol name, try again

To see a list of supported protocols, type ? at the Protocol name or number [IP]? prompt.

### IP Address

Defines the 32-bit internet address of the remote IP host in dotted-decimal notation.

### Host Number

Defines the 48-bit node address of the remote IPX host.

### Network Number

Defines the AppleTalk Phase 2 network number.

### Node Number

Defines the node number of the interface attached to the remote AppleTalk host.

### Node address

Defines the DECnet node address of the remote DECnet host. Configure the node address in the format x,y, where x is a 6-bit area address and y is a 10-bit node number.

### Circuit Number

Defines the name of a PVC or SVC that the protocol runs over.

### **pvc-group** *groupname*

Deletes any configured PVC group by name. The group is removed only if it has no member circuits.

### **Example: remove pvc-group PVC group name [IP]?**

### **switched-virtual-circuit**

Deletes any configured SVC by circuit name.

## Set

Use the **set** command to configure the interface to run the Frame Relay protocol.

### Set Command Considerations

Two parameters, the n2-parameter and the n3-parameter, require further explanation before you configure them. The n2-parameter sets the error threshold for management events, and the n3-parameter sets the number of events that are monitored in the event window. If the number of management errors in the event window equals n2, the Frame Relay interface resets. For example:



## Configuring Frame Relay Interfaces

**set n3-parameter 4**

**set n2-parameter 3**

You now have a window size of 4 ( $n3 = 4$ ) and an error threshold of 3 ( $n2 = 3$ ). That means the system is monitoring 4 management events and checking to determine if any of those are in error. If the number of events in error equals 3 (the  $n2$  parameter), the Frame Relay interface is reset and the status of the network is considered *network down*.

For the status of the network to be considered *network up*, the number of events in error within the window must be less than  $n2$  prior to any change in status.

### Syntax:

**set** cable\*  
cir-defaults  
clocking\*  
encoding\*  
frame-size  
idle . . .\*  
ir-adjustment . . .  
line-speed\*  
lmi-type n1-parameter  
n2-parameter  
n3-parameter  
p1-parameter  
t1-parameter  
transmit-delay . . .\*  
ty-parameter

\* **Note:** The commands with an \* following them are not available for FR dial circuit interfaces.

**cable** *physical-interface-link-type data-connection-type*  
Sets the cable type for the network physical link.

A DTE cable is used when you are attaching the router to some type of DCE device (for example, a modem or a DSU/CSU). A DCE cable is used when the router is acting as the DCE and providing the clocking for direct attachment.

The available options are:

Physical Interface Link Type	Data Connection Type
EIA 232 (RS-232)	DTE, DCE
V35	DTE, DCE
V36	DTE
X21	DTE, DCE

### cir-defaults

Sets the default values for the circuit congestion parameters. The parameters are:

## Configuring Frame Relay Interfaces

**cir** Sets the default value of *cir* to the value provided by a Frame Relay network provider.

**Valid Values:** 0 or 300 to 204 800 bps

**Default Value:** 64 000

**bc** Sets the default value of *bc* to the value provided by a Frame Relay network provider.

**Valid Values:** See “Committed Burst (Bc) Size” on page 411

**Default Value:** 64 000

**be** Sets the default value of *be* to the value provided by a Frame Relay network provider.

**Valid Values:** See “Excess Burst (Be) Size” on page 411

**Default Value:** 0

### Example:

```
FR 6 config> set cir-default
Default Committed Information Rate (CIR) in bps [64000]? 48000
Default Committed Burst Size (Bc) in bits [64000]? 40000
Default Excess Burst Size (Be) in bits [0]? 52000
```

### clocking [external or internal]

To connect to a modem or DSU, configure external clocking and select the appropriate DTE cable with the **set cable** command. Use the **set line-speed** command to configure the line speed.

To connect directly to another DTE device, configure internal clocking, select the appropriate DCE cable with the **set cable** command, and configure the clocking/line speed with the **set line-speed** command.

**Default:** external

### encoding [NRZ or NRZI]

Sets the HDLC transmission encoding scheme as NRZ (non-return to zero) or NRZI (non-return to zero inverted). Most configurations use NRZ, which is the default.

### frame-size #

Sets the maximum size of the network layer portion of the frames transmitted and received on the interface. This maximum size includes the 2-byte DLCI address and the user data shown in figure 39-4. The size you configure must be consistent with the maximum frame size supported by the Frame Relay switch and by the other FR DTEs in the Frame Relay network. Values are 262 to 8190. The default is 2048. Since the configured frame size includes the DLCI address and the FR RFC 1490 and RFC 2427 multi-protocol encapsulation header, the maximum protocol packet size that can be transmitted is less than the configured frame size and is protocol dependent. The following table shows how many bytes to subtract from the configured frame size to determine the maximum protocol packet size that can be transmitted and received on the interface.

IP	4 bytes
IPX	10 bytes
Appletalk Phase 2	10 bytes

## Configuring Frame Relay Interfaces

DECnet Phase IV (DNA IV)	12 bytes
Banyan Vines	10 bytes
OSI	10 bytes
Bridging	10 bytes
APPN	58 bytes (see note)

**Note:** Assumes worst case for APPN BAN where a T/R MAC address header and LLC header are added in addition to the FR header bytes.

If FR data encryption is enabled then you must subtract up to an additional 12 bytes.

When using Frame Relay SVCs, the maximum information field size must be the same at both ends of the virtual circuit. To determine the maximum information field size, subtract 16 bytes from the frame size if encryption is enabled on the SVC and subtract 4 bytes if encryption is not enabled on the SVC.

### idle [flag or mark]

Sets the transmit idle state for HDLC framing. The default value is **flag**, which provides continuous flags (7E hex) between frames. The mark option puts the line in a marking state (OFF, 1) between frames. Mark idle causes the transmit LED to be dark between frames. Flag idle partially lights the transmit LED between frames.

### ir-adjustment *increment-% decrement-% minimum-IR*

Sets the minimum information rate (IR) and the percentages for incrementing and decrementing the IR in response to network congestion.

The minimum IR, expressed as a percentage of CIR, is the lower limit of the information rate. The minimum percentage is 1 and the maximum percentage is 100. The default is 25.

When network congestion clears, the information rate is gradually incremented by the IR adjustment increment percentage until the maximum information rate is reached. The minimum percentage is 1 and the maximum percentage is 100. The default is 12.

When network congestion occurs, the information rate is decremented by the IR adjustment decrement percentage each time a frame containing BECN is received until the minimum information rate is reached. The minimum percentage is 1, and the maximum percentage is 100. The default is 25.

### Example:

```
set ir-adjustment
IR adjustment % increment [12]?
IR adjustment % decrement [25]?
Minimum IR as % of CIR [25]?
```

### line-speed *rate*

For internal clocking, use this command to specify the speed of the transmit and receive clock lines.

For external clocking, this command does not affect the operation of the WAN/serial line but it does set the speed that some protocols, such as IPX, use to determine routing cost parameters. You should set the speed to match the actual line speed. If the speed is not configured, the protocols assume a speed of 1 000 000 bps.

### Valid Values:

## Configuring Frame Relay Interfaces

Internal Clocking: 2400 to 2 048 000 bps

External Clocking: 2400 to 6 312 000 bps

**Note:** If you want to use a line speed greater than 2 048 000 bps when external clocking is configured, you can only do this on:

- Interface 1
- Port 1 of an 4-port WAN concentration adapter
- Ports 1 and 5 of an 8-port WAN concentration adapter

All other WAN ports on the same adapter must be clocked at 64 000 bps or less.

### **lmi-type [rev1 or ansi or ccitt]**

Sets the management type for the interface. See “Enabling Frame Relay PVC Management” on page 419 for details on setting Frame Relay management. The default is type **ansi** enabled.

Table 60. Frame Relay Management Options

Command	Management Type	Description
set	lmi-type rev1	Conforms to LMI Revision 1, (Stratacom's Frame Relay Interface Specification)
set	lmi-type ansi	Conforms to ANSI T1.617 ISDN-DSS1-Signalling Specification for Frame Relay Bearer Service (known as Annex D)
set	lmi-type ccitt	Conforms to Annex A of ITU-T/CCITT Recommendation Q.933 - DSS1 Signalling Specification for Frame Mode Basic Call Control.

### **n1-parameter** *count*

Configures the number of T1 timer intervals which must expire before a complete PVC status enquiry is made. *Count* is the interval in the range 1 to 255. The default is 6.

### **n2-parameter** *max#*

Configures the number of errors that can occur in the management event window monitored by the n3-parameter before the Frame Relay interface resets. *Max#* is a number in the range 1 to 10. The default is 3. This parameter must be less than or equal to the n3-parameter or you will receive an error message.

### **n3-parameter** *max#*

Configures the number of monitored management events for measuring the n2-parameter. *Max#* is a number in the range 1 to 10. The default is 4.

### **p1-parameter** *max#*

Configures the maximum number of PVCs supported by the Frame Relay interface. This includes active, inactive, removed, and congested PVCs. *Max#* is a number in the range 0 to 992. The default is 64. 0 (zero) implies that the interface supports no PVCs.

### **t1-parameter** *time*

Configures the interval (in seconds) between sequence number exchanges with Frame Relay management. The management's T2 timer is the allowable interval for an end station to request a sequence number exchange with the manager. The T1 interval must be less than the T2 interval of the network. *Time* is a number in the range 5 to 30. The default is 10.

### transmit-delay #

Allows the insertion of a delay between transmitted packets. The purpose of this command is to slow the serial line so that it is compatible with older, slower serial devices at the other end. It can also prevent the loss of serial line hello packets between the lines. # is between 0 and 15 extra flags. The default is zero (0). Setting this parameter provides 0 to 15 extra flags between transmit frames. Table 61 lists the units and range values for serial interfaces.

Table 61. Transmit Delay Units and Range for the 2210 Serial Interface

Unit	Minimum	Maximum
Extra Flags	0	15

### ty-parameter time

Configures the interval after which the device considers an existing congestion condition indicated by the receipt of a CLLM message to be cleared. If the device receives a CLLM message before the timer expires, the device resets this timer.

**Valid Values:** 5 to 30 seconds.

**Default Value:** 11 seconds.

## Accessing the Frame Relay Monitoring Prompt

To access the Frame Relay operating commands and to monitor Frame Relay on your router, perform the following steps:

1. At the OPCON prompt (\*), type **talk 5**.
2. At the GWCON prompt (+), enter the **interface** command to see a list of interfaces configured on the router.
3. Enter the **network** command followed by the network number of the frame relay interface. For example:

```
+ net 2
Frame Relay Monitoring
FR 2 >
```

## Frame Relay Monitoring Commands

This section summarizes and then explains the Frame Relay Monitoring commands. Use these commands to gather information from the database. Table 62 shows the commands.

Table 62. Frame Relay Monitoring Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Clear	Clears statistical information on the Frame Relay interface.
Disable	Disables CIR monitoring and congestion monitoring on the Frame Relay interface.
Enable	Enables CIR monitoring and congestion monitoring on the Frame Relay interface.
List	Displays statistics specific to the data-link layer and Frame Relay management.
LLC	Displays the LLC monitoring prompt.



## Monitoring Frame Relay Interfaces

notify-fecn-source

throttle-transmit-on-fecn

### List

Use the **list** command to display statistics specific to the data-link layer and the Frame Relay interface.

#### Syntax:

```
list                all
                    circuit . . .
                    lmi
                    permanent-virtual-circuits
                    pvc-groups
                    svcs
                    switched-virtual-circuit
                    virtual-circuits
                    voice-forwarding-circuits
```

**all** Displays circuit, management, and VC statistics on the Frame Relay interface. The output displayed for this command is a combination of the **list lmi** and **list permanent-virtual-circuit** commands.

**circuit** *name or number*

Displays detailed virtual circuit configuration and statistical information for the specified VC using the input circuit name or DLCI.

#### Example:

```
list circuit 347
```

```
Circuit name = Valencia

Circuit state      = Active  Circuit is orphan = No
Frames transmitted = 0      Bytes transmitted  = 0
Frames received   = 0      Bytes received    = 0
Total FECNs      = 0      Total BECNs      = 0
Times congested  = 0      Times inactive   = 0
CIR in bits/second = 64000 Potential Info Rate = 56000
Committed Burst (BC) = 1200 Excess Burst (Be) = 54800
Minimum Info Rate = 16000 Maximum Info Rate = 64000
Required         = Yes    PVC group name   = group1

Compression capable = Yes  Operational      = Yes
R-Rs received      = 0    R-Rs transmitted = 0
R-As received      = 0    R-As transmitted = 0
R-R mode discards  = 0    Enlarged frames  = 0
Decompress discards = 0    Compression errors = 0
Compression ratio  = 1.72 to 1 Decompression ratio = 1.10 to 1

Fragmentation type = END-TO-END
Fragmentation Size = 0    Reassembly timer = 0
Fragments xmitted  = 0    Fragments received = 0
Voice Frames xmitted = 0  Voice Frames rcv'd = 0

Encryption capable = Yes  Operational      = Yes
Encryption errors  = 0    Decryption errors = 0
Rcv error discards = 0

Current number of xmit frames queued = 0
Xmit frames dropped due to queue overflow = 0
```

#### Circuit state

Indicates the state of the circuit: inactive, active, or congested.

Inactive indicates that the circuit is not available for traffic because

## Monitoring Frame Relay Interfaces

either the Frame Relay interface is down or the Frame Relay management entity has not notified the Frame Relay protocol that the circuit is active. Active indicates that data is being transferred. Congested indicates that data flow is being controlled.

### **Circuit is orphan**

Indicates if the circuit is a non-configured PVC learned through LMI management or a call-in for a non-configured SVC.

### **Frames/Bytes transmitted**

Indicates how many frames and bytes this VC has transmitted.

### **Frames/Bytes received**

Indicates how many frames and bytes this VC has received.

### **Total FECNS**

Indicates the number of times that this VC has been notified of inbound or downstream congestion.

### **Total BECNS**

Indicates the number of times that this VC has been notified of outbound or upstream congestion.

### **Times congested**

Indicates the number of times that this VC has become congested.

### **Times inactive**

Indicates the number of times that this VC was inoperable.

### **CIR in bits/sec**

Indicates the information rate of the VC within the range 300 bps to 6 312 000 bps. A value of 0 is also supported.

### **Potential Info Rate**

Indicates the current maximum rate in bits per second at which data will be transmitted for the circuit. The actual data rate will depend on the queue depths and priorities associated with the circuit.

If this field has a value of "Line Speed", then the maximum data rate is the actual line speed even if the line speed was not configured or was configured incorrectly for this interface.

### **Committed Burst (Bc)**

Maximum amount of data, in bits, that the router can transmit during the *time interval* (Tc). ( $Tc=Bc/CIR.$ )

### **Excess Burst (Be)**

Maximum amount of uncommitted data in bits the router can transmit on a VC in excess of the Bc during the time interval (Tc).

### **Minimum Info Rate**

Minimum Information Rate. The minimum data rate for a VC that the router throttles down to when it is notified of congestion.

### **Maximum Info Rate**

Maximum Information Rate. The maximum data rate at which the router transmits for a VC.

### **Required**

Yes or No. If yes, the PVC is a Required PVC.

### **PVC group name**

If the PVC is a member of a required PVC group, the name appears here; otherwise, "Unassigned" appears.



## Monitoring Frame Relay Interfaces

### Compression capable

Indicates whether the circuit can compress data packets.

### Operational

Indicates whether compression is active on the circuit. When this is yes, data is being compressed on this link.

### R-Rs received

Indicates the number of Reset-Request packets sent by the peer decompressor. A peer decompressor sends a Reset-Request whenever the peer detects that it is out of synch with its peer compressor. If this number increases rapidly, packets are being lost or corrupted on this circuit.

### R-Rs transmitted

Indicates the number of Reset-Request packets sent since compression started on the circuit. If this number increases rapidly, packets are being lost or corrupted on this circuit.

### R-As received

Indicates the number of Reset-Acknowledgements received in response to Reset-Requests. The compressor also sends out this packet to signal that it has reset its compression history.

### R-As transmitted

This is the number of Reset-Acknowledgements sent to the peer.

### R-R mode discards

Indicates the number of compressed data frames that were discarded while waiting for an R-A after sending out an R-R.

### Enlarged frames

This is a count of the frames that could not be compressed. Usually an incompressible frame is sent in its uncompressed format within a special compression frame type allowing the compressor and decompressor to remain synchronized.

### Decompress discards

Indicates the number of compressed frames that were discarded because of decompression errors.

### Compression errors

Indicates the number of frames that had compression errors which were transmitted in an uncompressed form.

### Compression ratio

Indicates the approximate effectiveness of the compressor.

### Decompression ratio

Indicates the approximate effectiveness of the decompressor.

### Fragmentation type

Indicates the fragmentation type. The values are UNI/NNI and end-to-end. See the talk 6 **enable fragmentation** command for more information.

### Fragmentation size

Indicates the size of the fragment. See the talk 6 **enable fragmentation** command for more information.

## Monitoring Frame Relay Interfaces

**Note:** If end-to-end fragmentation is configured, the fragment size shows the size configured of the interface, not the size for every PVC.

### Reassembly timer

Indicates the time set on the fragmented packet reassembly timer. If the next-in-sequence fragment in a fragmented packet fails to arrive before this timer expires, the fragment is discarded when it arrives and all the fragments of that frame are dropped.

### Encryption capable

Indicates whether this circuit is encryption enabled.

### Operational

Indicates whether encryption is active on the circuit. When this is yes, data is being encrypted on this link.

### Encryption errors

Indicates the number of frames that had encryption errors.

### Decryption errors

Indicates the number of frames that had decryption errors.

### Rcv error discards

Indicates the number of compressed frames that were discarded because of reception problems.

### Current number of xmit frames queued

Indicates the number of frames currently queued for this circuit by FR. These frames are waiting for space to become available on the serial device handler transmit queue for this interface.

### Xmit frames dropped due to queue overflow

Indicates the number of frames that could not be transmitted for this VC due to output queue overflow.

**Imi** Displays statistics relevant to the logical management on the Frame Relay interface.

### Example:

```
list Imi
Management Status:
-----
LMI enabled           = Yes   LMI DLCI           = 0
LMI type             = ANSI  LMI Orphans OK    = YES
CLLM enabled         = No

SVC local net number = 12345678
SVC Number type      = International
SVC Numbering plan   = E.164  SVC Call-out retries = 2
SVC Call-ins allowed = Yes   SVC Network emulation mode = No

Protocol broadcast   = Yes   Congestion monitoring = Yes
Emulate multicast    = Yes   CIR monitoring         = No
Notify FECN source   = No   Throttle transmit on FECN = No
Number VCs P1 allowed = 64   Interface down if no PVCs = No
Line speed (bps)     = 1000000 Maximum frame size (bytes) = 2048
Timer T1 seconds     = 10   Counter N1 increments = 6
LMI N2 threshold     = 3    LMI N3 threshold window = 4
MIR % of CIR         = 25   IR % Increment         = 12
IR % Decrement       = 25   DECnet length field    = No
Default CIR          = 64000 Default Burst Size     = 64000
  Default Excess Burst = 0
Current receive sequence = 0
Current transmit sequence = 1
Total status enquiries = 9   Total status responses = 0
Total sequence requests = 0   Total responses        = 0

Data compression enabled = No
Data encryption enabled = No
Fragmentation enabled   = No
```

## Monitoring Frame Relay Interfaces

### Virtual Circuit Status:

Total allowed	=	64	Total configured	=	2
Total active	=	0	Total congested	=	0
Total PVCs left net	=	0	Total PVCs join net	=	0

### Management Status:

#### LMI enabled

Indicates if Frame Relay management is active (yes or no).

#### LMI DLCI

Indicates the management circuit number. This number is either 0 (ANSI default or ITU-T/CCITT) or 1023 (interim LMI REV1).

#### LMI type

Indicates the type of frame relay management being used, ANSI, ITU-T/CCITT, or LMI Revision 1.

#### LMI orphans OK

Indicates if all non-configured circuits learned from Frame Relay LMI management are available for use (yes or no).

#### CLLM enabled

Specifies whether this circuit will throttle transmission on receiving CLLM frames.

#### Timer Ty seconds

Indicates the value of the CLLM Ty timer. This field is only displayed if CLLM is enabled.

#### Last CLLM cause code

Indicates the congestion cause code given in the last CLLM message received or **None** if no CLLM messages have been received. This field is only displayed if CLLM is enabled.

#### SVC local net number

Specifies the network number for the SVCs on this interface.

#### SVC number type

Specifies the SVC number type, unknown or international.

#### SVC numbering plan

Specifies whether the numbering plan is E.164 or X.121.

#### SVC call-out retries

Specifies the number of call-out redial attempts on this interface.

#### SVC network emulation mode

Specifies whether this interface operates in network emulation mode for SVCs.

#### SVC call-ins allowed

Specifies whether call-ins are allowed on this interface.

#### Protocol broadcast

Indicates if protocols such as IP RIP are able to operate over the Frame Relay interface.

#### Congestion monitoring

Indicates whether the congestion monitor feature that responds to network congestion is enabled (yes or no).

## Monitoring Frame Relay Interfaces

### **Emulate multicast**

Indicates whether the multicast emulation feature is enabled on each active PVC (yes or no).

### **CIR monitoring**

Indicates whether the circuit monitoring feature that enforces the transmission rate is enabled (yes or no).

### **PVCs P1 allowed**

Indicates the number of allowable VCs for use with this interface. This number is the maximum number of active, congested, inactive, and removed VCs that can be supported on the interface.

### **Interface down if no PVCs**

Indicates whether the router considers the interface unavailable when there are no active PVCs.

### **Line speed (bps)**

Indicates the configured data rate of the Frame Relay interface.

### **Timer T1 seconds**

Indicates the frequency with which the Frame Relay interface performs a sequence number exchange with the Frame Relay switch LMI entity.

### **Counter N1 increments**

Indicates the number of T1 timer intervals which must expire before a complete PVC LMI status enquiry is made.

### **LMI N2 error threshold**

Indicates the number of management event errors occurring within the N3 window that will cause a reset of the Frame Relay interface.

### **LMI N3 error threshold window**

Indicates the number of monitored management events used to measure the N2 error threshold.

### **MIR % of CIR**

Minimum IR, expressed as a percentage of CIR.

### **IR % Increment**

Percentage by which the router increments the IR each time it receives a frame without BECN until it reaches the maximum IR.

### **IR % Decrement**

Percentage by which the router decrements the IR each time it receives a frame that contains BECN until it reaches the minimum IR.

### **DECnet length field**

Indicates whether or not the DECnet length field feature is enabled. Some Frame Relay DECnet Phase IV implementations require a length field between the Frame Relay multiprotocol encapsulation header and the DECnet packet. A length field is inserted if the DECnet length field feature is enabled.

### **Default CIR**

Specifies the default CIR for this interface.

### **Default Burst Size**

Specifies the default burst size for this interface.

## Monitoring Frame Relay Interfaces

### Default Excess CIR

Specifies the default excess burst size for this interface.

### Current receive sequence

Indicates the current receive sequence number that the Frame Relay interface has received from the Frame Relay management entity.

### Current transmit sequence

Indicates the current transmit sequence number that the Frame Relay interface has sent to the Frame Relay management entity.

### Total status enquiries

Indicates the total number of status enquiries that the Frame Relay interface has made of the Frame Relay management entity.

### Total status responses

Indicates the total number of responses that the Frame Relay interface has received from the Frame Relay management entity in response to status enquiries.

### Total sequence requests

Indicates the total number of sequence number requests that the Frame Relay interface has sent to the Frame Relay management entity.

### Total responses

Indicates the total number of sequence number responses that the Frame Relay interface has received from the Frame Relay management entity.

### Data compression enabled

Indicates whether data compression is enabled on this interface.

### Data encryption enabled

Indicates whether data encryption is enabled on this interface.

### Fragmentation enabled

Indicates whether Frame Relay packet fragmentation is enabled on this interface.

### Orphan compression

Indicates whether orphan circuits on this interface will have data compression enabled.

**Note:** Enabling compression on orphan circuits will decrease the number of available compression contexts available for the native VCs on the device.

Orphan compression applies to both PVCs and SVCs.

### Compression circuit limit

Specifies the maximum number of VCs that can compress data on this interface.

### Active compression circuits

Specifies the number of VCs currently compressing data on this interface.

### Data encryption enabled

Indicates whether data encryption is enabled on this interface.

## Monitoring Frame Relay Interfaces

### Active encryption circuits

Indicates the number of VCs that are currently encrypting data.

### Virtual Circuit Status:

- *Total allowed*—Indicates the number of allowable VCs (including orphans) whose state is active, congested, removed, or inactive for use with this interface.
- *Total configured*—Indicates the total number of currently configured VCs for this interface.
- *Total active*—Indicates the number of active VCs on this interface.
- *Total congested*—Indicates the number of VCs that are throttled down because of congestion within the network.
- *Total PVCs left net*—Indicates the total number of PVCs that have been removed from the network.
- *Total PVCs joined net*—Indicates the total number of PVCs that have been added to the network.

### permanent-virtual-circuit

Displays general link-layer statistics and configuration information for all configured PVCs on the Frame Relay interface.

#### Example:

```
FR 0>LIST PERMANENT-VIRTUAL-CIRCUITS
```

Circuit Number	Circuit Name	Options	Type/State	Frames Transmitted	Frames Received
16	Unassigned	R	P/I	0	0
17	Bigcir	F V	P/I	0	0
18	Unassigned		P/I	0	0

```
Circuit type: 0 - Orphan P - PVC S - SVC  
Circuit state: A - Active I - Inactive R - Removed C - Congested  
R - Required G - Required and belongs to a PVC group  
F - circuit is fragmentation capable  
c - Data compression capable but not operational  
C - Data compression capable and operational  
V - circuit is voice forwarding enabled
```

#### Circuit#

Indicates the DLCI of the PVC.

#### Circuit Name

Name of the circuit, an ASCII string.

#### Orphan Circuit

Indicates whether the PVC is a non-configured circuit (yes or no).

#### Type/State

Indicates the state of the circuit, A (active), I (inactive), P (permanent), C (congested), or R (removed).

#### Frames Transmitted

Indicates how many frames this PVC has transmitted.

#### Frames Received

Indicates how many frames this PVC has received.

### pvc-groups

Displays required PVC group information for all required PVC groups. For each group this consists of the group name, the circuits in the group and the state (active, inactive, or removed) of each circuit.

## Monitoring Frame Relay Interfaces

### Example:

```
list pvc-groups
-----
Group name          Circuits in group  Circuit status
-----
group1              16                active
                   44                inactive
                   240               removed
```

**svcs** Displays all SVCs, either configured or orphaned, on the interface regardless of state.

### Example:

```
FR 1>list svcs
-----
Circuit Name          Remote party number  Circuit State  Call State  DLCI
-----
flotsam               911                 R             N           0
jetsam                666                 R             N           0
Circuit states: A - Active  I - Inactive  R - Removed  C - Congested
Call states: N - Null      I - Call Initiated  O - Outgoing call proceeding
                A - Active    D - Disconnect request  R - Release request
```

### switched-virtual-circuit

The following example displays configuration and operational information for a single SVC by name.

### Example:

```
FR 1>list switched-virtual-circuit flotsam
Circuit Name          Opt-ions  Idle Timer          Outgoing Value  Incoming Value
-----
flotsam               ILM       60                CIR: 0           0
Call state: Null     Burst: 0           0
Call Initiated by: None  DLCI: 0           Excess: 0         0
Remote party number: IE911
Remote subaddress: None

Options: I - call-ins allowed, L - learn protocols, M - multicast required
        C - compression capable and operational, c - compression capable
        E - encryption capable and operational, e - encryption capable

Address type: I - International, U - Unknown
Numbering plan: E - E.164, X - X.121
Subaddress format: N - NSAP, P - private
```

### virtual-circuits

Displays all PVCs and all active SVCs with associated information that is identical to the **list permanent-virtual-circuit** command.

```
FR 1>list virtual-circuits
```

Circuit Number	Circuit Name	Orphan Circuit	Type/State	Frames Transmitted	Frames Received
16	circ16	No	P/A	4	8
17	Unassigned	Yes	c P/I	0	0
18	flotsam	No	S/A	12	10
19	Unassigned	Yes	c P/A	7	2
24	circ24	No	P/R	0	0

P - PVC   S - SVC   A - Active   I - Inactive   R - Removed   C - Congested  
R - Required   G - Required and belongs to a PVC group  
c - Data compression capable but not operational  
C - Data compression capable and operational

## Monitoring Frame Relay Interfaces

### voice-forwarding-circuits

Displays all PVCs that have been defined as being capable of forwarding voice packets.

```
FR 2>list voice-forwarding-circuits
```

Circuit Name	Circuit Number	Forwarding Network	Forwarding Circuit
-----	-----	-----	-----
circ16	16	2	17
circ17	17	2	16

## LLC

Use the **LLC** command to access the LLC monitoring prompt. LLC commands are entered at this new prompt. See “LLC Monitoring Commands” on page 245 for an explanation of each of these commands.

### Syntax:

#### llc

**Note:** The LLC command is supported only if APPN is in the software load.

## Notrace

Use the **notrace** command to disable packet tracing for individual circuits or the entire interface. This command can be used as a filter when tracing specific circuits or interfaces is required. The default setting is to trace all circuits.

### Syntax:

```
notrace                circuit#  
                        circuitname  
                        all
```

### Example:

```
notrace 16  
    Disables packet tracing on circuit (PVC or SVC) with DLCI 16.  
notrace circuit phoenix  
    Disables packet tracing on circuit (PVC or SVC) named phoenix.  
notrace circuit all  
    Disables packet tracing on all circuits on this interface.
```

## Set

Use the **set** command to set the values for Committed Information Rate (CIR), Committed Burst Rate, and Excess Burst Rate for the specified VC. You also can set values for IR adjustment rates.

Changes made with this command do not affect the configuration data. They are in effect only until the router is restarted.





## Monitoring Frame Relay Interfaces

### Example:

```
set ir-adjustment
  IR adjustment % increment [12]?
  IR adjustment % decrement [25]?
  Minimum IR as % of CIR [25]?
```

## Trace

Use the **Trace** command to enable packet tracing for individual circuits or the entire interface and to list the tracing capability of all circuits on this interface. This command can be used as a filter when tracing specific circuits or interfaces is required. The default setting is to trace all circuits.

### Syntax:

```
trace          all
               circuitname
               circuit#
               list
```

### Example:

```
trace 16
  Enables packet tracing on circuit (PVC or SVC) with DLCI 16.
trace circuit phoenix
  Enables packet tracing on circuit (PVC or SVC) named phoenix.
trace circuit all
  Enables packet tracing on all circuits on this interface.
```

```
trace list
The following circuits are available for packet trace
Circuit Name          Circuit Number
-----
Unassigned            16
phoenix               25
jetsam                0
```

Lists the packet tracing capability of all circuits on this interface.

---

## Frame Relay Interfaces and the GWCON Interface Command

While Frame Relay interfaces have a monitoring process for monitoring purposes, the router also displays complete statistics for installed interfaces when you use the **interface** command from the GWCON environment. (For more information on the **interface** command, refer to “Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands” on page 131)

## Statistics Displayed For Frame Relay Interfaces

Statistics similar to the following are displayed when you execute the **interface** command from the GWCON environment for Frame Relay interfaces:

```
+interface 1
Nt Nt' Interface      CSR  Vec  Self-Test  Self-Test  Maintenance
1  1  FR/0             81620  5D   Passed    Failed     Failed
                                     1         0         0

Frame Relay MAC/data-link on SCC Serial Line interface

Adapter cable:                V.35 DTE  RISC Microcode Revision:
1

V.24 circuit: 105 106 107 108 109 125 141
```

## Monitoring Frame Relay Interfaces

```
Nicknames:   RTS CTS DSR DTR DCD RI LL
PUB 41450:   CA CB CC CD CF CE
State:       ON  ON  ON  ON  ON  OFF OFF
```

```
Line speed:           unknown
Last port reset:     5 hours, 8 minutes, 11 seconds ago
```

```
Input frame errors:
CRC error              0 alignment (byte length)
missed frame          0 too long (> 2062 bytes) 0
aborted frame         0 DMA/FIFO overrun      0
L & F bits not set    0
Output frame counters:
DMA/FIFO underrun errors 0 Output aborts sent 0
```

**Nt** Indicates the interface number as assigned by software during initial configuration.

**Nt'** Indicates the interface number as assigned by software during initial configuration.

**Note:** For FR dial circuit interfaces, Nt' is different from Nt. Nt' indicates the base interface (ISDN) that the dial circuit is running over.

### Interface

Indicates the type of interface and its instance number. Frame relay has a FR designation.

**CSR** Indicates the memory location of the control status register for the Frame Relay interface.

**Vec** Indicates the vector number for the Frame Relay interface.

### Self-test Passed

Indicates the total number of times the Frame Relay interface passed self-test.

### Self-test Failed

Indicates the total number of times the Frame Relay interface failed self-test.

### Maintenance Failed

Indicates the total number of times the interface was unable to communicate with Frame Relay management.

### V.24 circuit, Nicknames, and State

The circuits, control signals, pin assignments and their state (ON or OFF).  
Note: The symbol - - - in monitoring output indicates that the value or state is unknown.

### Line speed

The transmit clock rate.

### Last port reset

The length of time since the last port reset.

### Input frame errors:

#### CRC error

The number of packets received that contained checksum errors and as a result were discarded.

#### Alignment

The number of packets received that were not an even multiple of 8 bits in length and a result were discarded.

## Monitoring Frame Relay Interfaces

### Too short

The number of packets that were less than 2 bytes in length and as a result were discarded.

### Too long

The number of packets that were greater than the configured size, and as a result were discarded.

### Aborted frame

The number of packets received that were aborted by the sender or a line error.

### DMA/FIFO overrun

The number of times the serial interface could not send data fast enough to the system packet buffer memory to receive them from the network.

### Missed frame

When a frame arrives at the device and there is no buffer available, the hardware drops the frame and increments the missed frame counter.

### L & F bits not set

On serial interfaces, the hardware sets input-descriptor information for arriving frames. If the buffer can accept the complete frame upon arrival, the hardware sets both the last and first bits of the frame, indicating that the buffer accepted the complete frame. If either of the bits is not set, the packet is dropped, the L & F bits not set counter is incremented, and the buffer is cleared for reuse.

**Note:** It is unlikely that the L & F bits not set counter will be affected by traffic.

### *Output frame counters:*

### DMA/FIFO underrun errors

The number of times the serial interface could not retrieve data fast enough from the system packet buffer memory to transmit them to the network.

### Output aborts sent

The number of transmissions that were aborted as requested by upper-level software.

Statistics similar to the following are displayed for Frame Relay dial circuits when you execute the interface command from the GWCON environment:

+interface

4

Nt	Nt'	Interface	CSR	Vec	Passed	Self-Test Failed	Self-Test Failed	Maintenance
4	3	FR/0	81640	5C		0	4	0

Frame Relay MAC/data-link on ISDN Basic Rate interface

---

## Chapter 30. Using Point-to-Point Protocol Interfaces

This chapter describes how to use the Point-to-Point Protocol for interfaces on the device. Sections in this chapter include:

- “PPP Overview”
- “The PPP Link Control Protocol (LCP)” on page 469
- “PPP Authentication Protocols” on page 473
- “Using AAA with PPP” on page 478
- “The PPP Network Control Protocols” on page 478
- “Using and Configuring Virtual Connections” on page 481

See “Chapter 32. Using the Multilink PPP Protocol” on page 531 and “Chapter 33. Configuring and Monitoring Multilink PPP Protocol (MP)” on page 537 for information about using the Multilink PPP Protocol.

---

### PPP Overview

PPP provides a method for transmitting protocol datagrams at the Data Link Layer over serial point-to-point links. PPP provides the following services:

- Link Control Protocol (LCP) to establish, configure, and test the link connection.
- Encapsulation protocol for encapsulating protocol datagrams over serial point-to-point links.
- Authentication protocols (APs) to validate the identity of a peer (remote) unit, and to submit your own identity to the peer for validation.
- Network Control Protocols (NCPs) for establishing and configuring different network layer protocols. PPP allows the use of multiple network layer protocols.

Figure 26 on page 468 shows some examples of point-to-point serial links.

## Using PPP

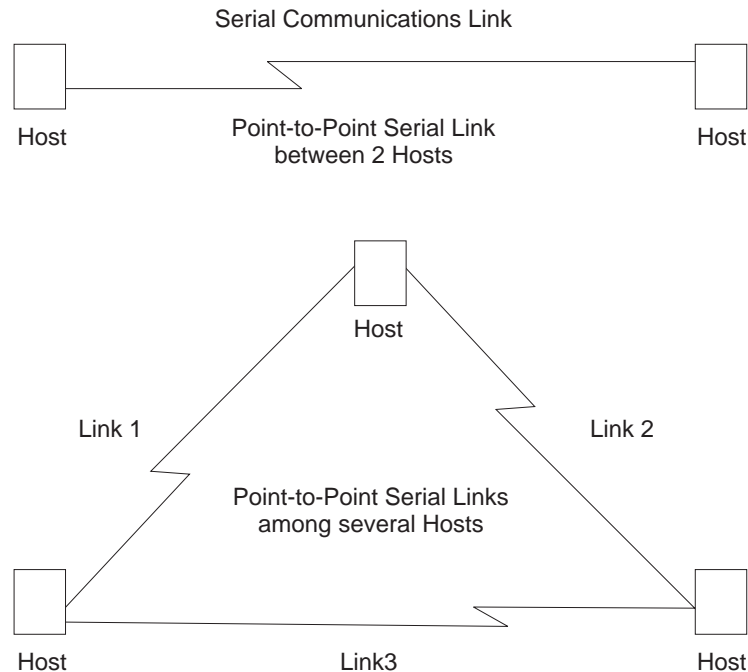 


Figure 26. Examples of Point-to-Point Links

PPP currently supports the following control protocols:

- AppleTalk Control Protocol (ATCP)
- DECnet Protocol Control Protocol (DNCP)
- Banyan VINES Control Protocol (BVCP)
- Bridging protocols (BCP, NBCP, and NBFCP)
- Internet Protocol Control Protocol (IPCP)
- Internet Protocol Version 6 Control Protocol (IPv6CP)
- IPX Control Protocol (IPXCP)
- APPN HPR Control Protocol (APPN HPRCP)
- APPN ISR Control Protocol (APPN ISRCP)
- OSI Control Protocol (OSICP)

Each end starts by sending LCP packets to configure and test the data link. After the link has been established, PPP sends NCP packets to choose and configure one or more network layer protocols. After network layer protocols have been configured, datagrams from each network layer can be sent over the link. The next sections explain these concepts in more detail.

## PPP Data Link Layer Frame Structure

PPP transmits data frames that have the same structure as High-level Data Link Control (HDLC) frames. PPP uses a byte-oriented transmission method with a single-frame format for all data and control exchanges. Figure 27 on page 469 illustrates the PPP frame structure and is followed by a detailed description of each field.

Flag	Address	Control	Protocol	Information	FCS	Flag
8 bits	8 bits	8 bits	16 bits	variable	16 bits	8 bits

Figure 27. PPP Frame Structure

### Flag Fields

The flag field begins and ends each frame with a unique pattern of 01111110. Generally a single flag ends one frame and begins the next. The receiver attached to the link continuously search for the flag sequence to synchronize the start of the next frame.

### Address Field

The address field is a single octet (8 bits) and contains the binary sequence 11111111 (0xff hexadecimal). This is known as the All-Station Address. PPP does not assign individual station addresses.

### Control Field

The control field is a single octet and contains the binary sequence 00000011 (0x03 hexadecimal). This sequence identifies the Unnumbered Information (UI) command with the P/F bit set to zero.

### Protocol Field

The protocol field is defined by PPP. The field is 2 octets (16 bits) and its value identifies the protocol datagram encapsulated in the Information field of the frame.

Protocol field values in the range '0xC000'–'0xFFFF' indicate Layer 3 data (protocol datagrams) such as LCP, PAP, CHAP, SPAP, and CCP. Values in the range '8000'–'BFFF' indicate that the datagrams belong to the Network Control Protocols (NCP). Values in the range '0'–'3FFF' identify the network protocol of specific datagrams.

### Information Field

The information field contains the datagram for the protocol specified in the protocol field. This is zero or more octets.

When the protocol type is LCP, exactly one LCP packet is encapsulated in the information field of PPP Data Link Layer frames.

### Frame Check Sequence (FCS) Field

The frame check sequence field is a 16-bit cyclic redundancy check (CRC).

PPP links can negotiate the use of various options which may modify the basic frame format; the description below applies to the frame format prior to any such modifications. PPP LCP packets are always sent in this format as well, regardless of negotiated options, so that LCP packets can be recognized even when there is a loss of synchronization on the line.

The router supports two such options: Address and Control Field Compression (ACFC) and Protocol Field Compression (PFC). These are described in detail in a later section.

---

## The PPP Link Control Protocol (LCP)

PPP's Link Control Protocol (LCP) establishes, configures, maintains, and terminates the point-to-point link. This process is carried out in four phases:

## Using PPP

1. Before exchanging any network layer datagrams, PPP first opens the connection through an exchange of LCP configuration packets. As part of this negotiation process, the PPP processes at each end of the link agree on various basic link level parameters such as the maximum packet size that can be transferred and whether the ends must use an authentication mechanism to identify themselves to their peers before carrying network traffic.  

If this negotiation is unsuccessful, the link is considered to be “down” and incapable of carrying any network traffic. If the negotiation is successful, LCP goes to an “Open” state and PPP goes on to the next phase.
2. After LCP successfully reaches an Open state, the next step in establishing the link is to perform authentication where each end of the link identifies itself to the other end using the “authentication protocol” that the other end dictated as part of the LCP negotiation.  

If authentication fails, the link is marked “down” and cannot carry any network traffic. If authentication succeeds or if authentication is not required, the PPP link moves to the next phase.
3. After authentication is negotiated, the peers negotiate encryption for the link. After authentication phase is complete, the router negotiates the use of encryption using Encryption Control Protocol (ECP) packets where each end of the link negotiates which encryption algorithm will be used to encrypt the data over this PPP link. If ECP did not reach “Open” state then the link is marked “down” and cannot carry any network traffic. If ECP successfully reaches “Open” state, or if encryption is not required, the PPP link moves to the next phase, NCP negotiation (except ECP, which is technically also an NCP). The link is considered to be “open” or “up” at this time, though it cannot yet carry layer-3 protocol datagrams.
4. Once the link is open, the router negotiates the use of various layer-3 protocols (for example, IP, IPX, DECnet, Banyan Vines) using Network Control Protocol (NCP) packets. Each layer-3 protocol has its own associated network control protocol. For example IP has IPCP and IPX has IPXCP. The basic format and mechanisms for all these NCP packets is the same for all protocols, and is basically a superset of the LCP mechanisms as described later in this section.  

Each layer-3 protocol is negotiated independently. When a particular NCP successfully negotiates, the link is “up” for that protocol's traffic. As with LCP, configuration information can be exchanged as part of this negotiation; for example, IPCP can exchange IP addresses or negotiate the use of “Van Jacobson IP header compression”.

As with LCP, it is possible for an NCP to fail to negotiate successfully with its peer. This might happen because the peer does not support a particular protocol or because some configuration option was unacceptable. If an NCP fails to reach the “Open” state, no layer-3 protocol packets can be exchanged for that protocol even though other layer-3 protocols are successfully passing traffic across the PPP link.
5. Finally, LCP has the ability to terminate the link at any time. This is usually done at the request of the user but may occur for other reasons such as: an administrative closing of the link, idle timer expiration, or failure to re-authenticate on a CHAP rechallenge.

For complete details about PPP LCP, authentication, and the general NCP negotiation mechanisms, consult RFCs 1331, 1334, 1570, and 1661.



## LCP Packets

LCP packets are used to establish and manage a PPP link and can be loosely divided into three categories:

- *Link establishment packets* that exchange configuration information and establish the link.
- *Link termination packets* that shut down the link or signal that a link is not accepting connections at a particular time. They also can be used to signal that a particular protocol is unrecognized (for example, during NCP negotiations).
- *Link maintenance packets* that monitor and debug a link.

Exactly one LCP packet is encapsulated in the information field of PPP Data Link Layer frames. In the case of LCP packets, the protocol field reads “Link Control Protocol” (C021 hexadecimal). Figure 28 illustrates the structure of the LCP packet and is followed by a detailed description of each field.

Code	Identifier	Length	Data(option)
------	------------	--------	--------------

Figure 28. LCP Frame Structure (in PPP Information Field)

**Code** The code field is one octet in length and identifies the type of LCP packet. The codes in Table 63 distinguish the packet types. They are described in more detail in later sections.

Table 63. LCP Packet Codes

Code	Packet Type
1	Configure-Request (Link Establishment)
2	Configure-Ack (Link Establishment)
3	Configure-Nak (Link Establishment)
4	Configure-Reject (Link Establishment)
5	Terminate-Request (Link Termination)
6	Terminate-Ack (Link Termination)
7	Code-Reject (Link Establishment)
8	Protocol-Reject (Link Establishment)
9	Echo-Request (Link Maintenance)
10	Echo-Reply (Link Maintenance)
11	Discard-Request (Link Maintenance)

### Identifier

The identifier field is one octet in length and is used to match packet requests to replies.

### Length

The length field is two octets in length and indicates the total length (that is, including all fields) of the LCP packet.

### Data (Option)

The data field is zero or more octets as indicated by the length field. The format of this field is determined by the code.

NCP packets are structured identically to LCP packets and are distinguished by having different PPP “Protocol” values. Each LCP packet type (distinguished by the code field) has the same meaning for each NCP, though an individual NCP may not implement all possible LCP packet types. NCPs normally implement all of the link

## Using PPP

establishment type packets that LCP defines. They may implement some of the additional LCP packet types, and they also may define additional packet types beyond what LCP uses. Unlike LCP packets, the structure of an NCP frame may be modified according to options negotiated by LCP during the link establishment phase.

## Link Establishment Packets

Link Establishment Packets establish and configure a point-to-point link including the following packet types:

### **Configure-Request**

LCP packet code field is set to 1. LCP transmits this packet type when it wants to open a point-to-point link. Upon receiving a Configure-Request, a peer station's LCP entity sends an appropriate reply, depending on whether it is ready to process packets.

### **Configure-Ack**

LCP packet code field is set to 2. The peer transmits this packet type when every configuration option in a Configure-Request packet is acceptable. Upon receiving the Configure-Ack (ack = acknowledgment), the originating station checks the Identifier field. This field must match the one from the last-transmitted Configure-Request or the packet is invalid.

Both ends send Configure-Request and both ends must receive a Configure-Ack before the link opens. Options negotiated for one direction may differ from that negotiated for the other direction. There is no "master-slave" relationship. Rather, each end works symmetrically.

### **Configure-Nak**

LCP packet code field is set to 3. The peer transmits this packet type when some part of the configuration option in a Configure-Request packet is unacceptable. The Identifier field is copied from the received Configure-Request and the Data (option) field is filled with the received unacceptable configuration options. The Identifier field must match the one from the last-transmitted Configure-Request or the packet is invalid and is discarded.

When the originator receives a Configure-Nak packet, a new Configure-Request packet is sent that includes modified, acceptable configuration options.

### **Configure-Reject**

LCP packet code field is set to 4. The peer transmits this packet type when some part of the configuration options in a Configure-Request packet is unacceptable. The Identifier field is copied from the received Configure-Request and the Data (option) field is filled with the received unacceptable configuration options. The Identifier field must match the one from the last-transmitted Configure-Request or the packet is invalid and is discarded.

When the originator receives a Configure-Reject packet, a new Configure-Request packet is sent that does not include any of the configuration options received in the Configure-Reject packet.

### **Code-Reject**

LCP packet code field is set to 7. The transmission of this packet type indicates that the LCP "code" field on a received packet is not recognized as a valid value. While this can indicate an error, it also can indicate that the peer does not implement some feature that you are trying to use.

**Protocol-Reject**

LCP packet code field is set to 8. The transmission of this packet type indicates that a PPP frame has been received that contains an unsupported or unknown protocol (the PPP “protocol” field was unrecognized for some packet). This usually occurs if you try to negotiate some NCP for a protocol that the other end doesn’t support. For example, if DECnet CP (DNCP) sends a Config-Request and the other end does not know about DECnet, the other end replies with an LCP Protocol-Reject on DNCP. Upon receiving a Protocol-Reject packet, the link stops transmitting the incorrect protocol.

**Note:** NCP packet types and structure are the same as LCP, although there are a few additional “code” fields associated with some NCPs.

## Link Termination Packets

Link Termination Packets terminate a link and include the following packet types:

**Terminate-Request**

LCP packet code field is set to 5. LCP transmits this packet type when a point-to-point link needs to be closed. These packets are sent until a Terminate-Ack packet is sent back, or until a retry counter is exceeded while waiting for an Ack.

**Terminate-Ack**

LCP packet code field is set to 6. Upon receiving a Terminate-Request packet, this packet type must be transmitted with the code field set to 6. Reception of a Terminate-Ack packet that was not expected indicates that the link has been closed.

## Link Maintenance Packets

Link Maintenance Packets manage and debug a link, and include the following packet types:

**Echo-Request and Echo-Reply**

LCP packet code fields are set to 9 and 10 respectively. LCP transmits these packet types in order to provide a Data Link Layer loopback mechanism for both directions on the link. This feature is useful, for example, in debugging a faulty link to determine link quality. These packets are sent only when the link is in the Open state.

**Discard-Request**

LCP packet code field is set to 11. LCP transmits this packet type to provide a data sink for Data link Layer testing. A peer that receives a Discard-Request *must* throw away the packet. This is useful in debugging a link. These packets are sent only when the link is in the Open state.

---

## PPP Authentication Protocols

PPP authentication protocols provide a form of security between two nodes connected via a PPP link. If authentication is required on a box, then immediately after the two boxes successfully negotiate the use of the link at the LCP layer (LCP packets are exchanged until LCP goes into an “open” state), they go into an “authentication” phase where they exchange authentication packets. A box is neither able to carry network data packets nor negotiate the use of a network protocol (NCP traffic) until authentication negotiation completes successfully.

## Using PPP

There are different authentication protocols in use: Password Authentication Protocol (PAP) and Challenge/Handshake Authentication Protocol (CHAP). Microsoft PPP CHAP (MS-CHAP) is also available to authenticate Windows workstations and peer routers. PAP and CHAP are described in detail in RFC 1334, and briefly described later in this section. MS-CHAP is described in RFC 1994.

On remote dial-in access ports, a third authentication protocol is available. This is Shiva Password Authentication Protocol (SPAP), which is a Shiva proprietary protocol. See “Shiva Password Authentication Protocol (SPAP)” on page 475 for more information.

Whether a box requires the other end to authenticate itself (and if so, with what protocol) is determined during the LCP negotiation phase. Authentication could be considered to “fail” even at the link establishment phase (LCP negotiation), if one end does not know how, or refuses to use, the authentication protocol the other end requires.

Each end of a link sets its own requirements for how it wants the other end to authenticate itself. For example, given two routers “A” and “B”, connected over a PPP link, side A may require that B authenticate itself to A using PAP, and side B may require that A similarly identify itself using CHAP. It is valid for one end to require authentication while the other end requires none.

In addition to initial authentication during link establishment, with some protocols an authenticator may demand that the peer reestablish its credentials periodically. With CHAP, for example, a rechallenge may be issued at any time by the authenticator and the peer must successfully reply - or lose the link.

If more than one authentication protocol is enabled on a link, the router initially attempts to use them in the following priority order:

1. MS-CHAP
2. CHAP
3. PAP
4. SPAP

**Note:** SPAP is only available on interfaces that have IBM DIALs Dial-In circuits configured.

If the remote side responds to the authentication request with NAK and suggests an alternative, the router uses the alternative, provided that it is enabled on the link. If the remote side continues responding to the router’s suggestions with NAK but does not provide an alternative that the router has enabled, the link is terminated.

## Password Authentication Protocol (PAP)

The Password Authentication Protocol (PAP) provides a simple method for the peer to establish its identity using a two-way handshake. This is done only upon initial link establishment. Following link establishment, the peer sends an ID/Password pair to the authenticator until authentication is acknowledged or the connection is terminated. Passwords are sent over the circuit “in the clear,” and there is no protection from playback or repeated trial and error attacks. The peer controls the frequency and timing of the attempts.

## Challenge-Handshake Authentication Protocol (CHAP)

The Challenge-Handshake Authentication Protocol (CHAP) is used to periodically verify the identity of the peer using a three-way handshake. This is done upon initial link establishment, and *may* be repeated anytime after the link has been established. After the initial link establishment, the authenticator sends a “challenge” message to the peer. The peer responds with a value calculated using a “one-way hash” function. The authenticator checks the response against its own calculation of the expected hash value. If the values match, the authentication is acknowledged; otherwise the connection is terminated.

## Microsoft PPP CHAP Authentication (MS-CHAP)

**Note:** MS-CHAP is not available in 4M V2L images.

MS-CHAP is an extension to PPP CHAP that is used to authenticate remote Windows workstations and peer routers. Both MS-CHAP and CHAP use PPP’s Link Control Protocol (LCP) to negotiate the desired authentication protocol in one or both directions; both use the CHAP protocol identifier as the PPP protocol; and each protocol uses a random challenge which is encrypted as part of the response.

MS-CHAP permits remote Windows workstations to change their passwords; however, MS-CHAP requires that the remote peer’s password has expired before the remote user is prompted to change the password.

MS-CHAP can be used with the internal PPP user Local List database, but *not* with the external AAA authentication server that is described in the chapter “Using Local or Remote Authentication” in *Using and Configuring Features*. If you plan to use Microsoft PPP Encryption (MPPE) on a PPP interface, you must enable MS-CHAP on that interface before you configure MPPE. Use the talk 6 command **enable mschap** to enable MS-CHAP.

## Shiva Password Authentication Protocol (SPAP)

**Note:** SPAP is only available on interfaces that have IBM DIALs Dial-In circuits configured.

The Shiva Password Authentication Protocol (SPAP) provides a simple method for the peer to establish its identity using a 2-way handshake similar to PAP. After the Link Establishment phase is complete, an Id/Password is repeatedly sent by the peer to the authenticator until authentication is acknowledged, the connection is terminated, or a retry counter expires.

SPAP is a moderately strong authentication protocol that uses a proprietary encryption algorithm for the password. In addition to authentication, SPAP offers:

- The ability to change a password.

**Note:** SPAP change password support is only available when the local PPP user list is used for authentication.

- The ability for the router to send a configurable banner requiring acknowledgment from the client after password authentication.
- The ability to use callback as an additional security feature.
- Virtual connections.

## Using PPP

### Configuring PPP Authentication

The following sections describe configuring PPP authentications for two situations:

- Configuring the 2210 to authenticate a remote device.
- Configuring the 2210 to be authenticated by a remote device.

These two situations are independent. You can do one or the other.

#### Configuring a PPP Interface to Authenticate a Remote Device

To authenticate a remote device or dial-in client:

1. Enable authentication on the PPP interface
  - At the `Config>` prompt, enter the **network** command to select the PPP interface to configure.
  - At the `PPP Config>` prompt, enable the authentication protocol you want to use.

You can use any of the following protocols:

- PAP
- MS-CHAP

**Note:** MS-CHAP can use the PPP local database to authenticate, but cannot use an authentication server.

- CHAP
- SPAP

**Note:** SPAP is only available on interfaces that have IBM DIALs Dial-In circuits configured.

2. Decide whether to authenticate locally or through an authentication server.
  - To authenticate locally, enter the name and password into the PPP user database.

At the `Config>` prompt, use the **add ppp\_user** command. See “Add” on page 55 for more information.

A 2210 maintains a single PPP user database. When the remote router or device sends its name and password to the device during the authentication phase, the device checks to see if that name and password are in the PPP user database.
  - To authenticate through an authentication server using TACACS, TACACS+, or RADIUS, you must configure the device to reach the authentication server and the name and password must be in the server’s database. Refer to “Using Local or Remote Authentication” in *Using and Configuring Features*.

#### Configuring a PPP Interface to be Authenticated by a Remote Device

To configure the device to be authenticated by a remote device or dial-in client, configure the device’s name and password:

1. At the `Config>` prompt, select the interface you are configuring using the **network** command.
2. At the `PPP Config>` prompt, type the **set name** command and provide the name and password that the device will use to identify itself to the remote router or device during the authentication phase.

**Attention:** Do not use the following commands unless you want the device to perform authentication as described in “Using Local or Remote Authentication” in *Using and Configuring Features* .

- **enable pap**
- **enable chap**
- **enable spap**

**Note:** SPAP is only available on interfaces that have IBM DIALs Dial-In circuits configured.

- **enable mschap**

## Configuring PPP Callback

Callback is a PPP feature associated with single user dial-in solutions. It attempts to accomplish two objectives. These objectives are:

- Callback can be used as a form of security. When used in this way, callback is generally referred to as required callback. When required callback is negotiated the user will be dialed back at a predetermined number. Only then will the PPP link be allowed to come up.
- Callback can also be implemented as a toll-saver feature. When used in this way, callback is generally referred to as roaming callback. Unlike required callback, roaming callback is requested by the client. The primary function of roaming callback is to bill the company maintaining the DIALs Server the toll charges instead of the user.

Callback is supported only on dial-in dial circuits over V.34 or ISDN networks.

### Example 1: Required callback enabled

```
Config>add PPP
Enter user name: [ ]? nocalldback
Password:
Enter password again:
Is this a Single-User or a Network? (Single-User, Network): [Single-User]

IP address for user nocalldback [0.0.0.0]?
Enter HostName: [ ]?
Give 'nocalldback' default time allotted ? (Yes, No): [Yes]
Enable Callback for 'nocalldback' ? (Yes, No): [No] yes
Type of Callback (Roaming Callback, Required Callback): [Roaming Callback] Requi
Dialback number for this user [ ]? 555-1234
Will 'nocalldback' be able to dial-out ? (Yes, No): [No]

PPP User Name: nocalldback
Type: Single User
User IP Address: Interface Default
SubNetMask: 255.255.255.255
Hostname: <undefined>
Time-Allotted: Box Default
Call-Back Type: Required Callback
Phone Number: 543-3186
Dial-Out: Not Enabled
Encryption: Not Enabled

Is information correct? (Yes, No, Quit): [No] yes
```

### Example 2: Callback disabled

```
Config>add PPP
Enter user name: [ ]? sallydoe
Password:
Enter password again:
Is this a Single-User or a Network? (Single-User, Network): [Single-User]

IP address for user nocalldback [0.0.0.0]?
Enter HostName: [ ]?
Give 'no callback' default time allotted ? (Yes, No): [Yes]
Enable Callback for 'no callback' ? (Yes, No): [No]
Will 'no callback' be able to dial-out ? (Yes, No): [No]
```

## Using PPP

```
PPP User Name: no callback
Type: Single User
User IP Address: Interface Default
SubNetMask: 255.255.255.255
Hostname: <undefined>
Time-Allotted: Box Default
Call-Back Type: Not Enabled
Dial-Out: Not Enabled
Encryption: Not Enabled

Is information correct? (Yes, No, Quit): [No] yes
```

### Example 3: Roaming callback enabled

```
Config>add PPP roaming_callback
Password:
Enter password again:
Is this a Single-User or a Network? (Single-User, Network): [Single-User]

IP address for user roaming_callback [0.0.0.0]?
Enter HostName: []?
Give 'roaming_callback' default time allotted ? (Yes, No): [Yes]
Enable Callback for 'roaming_callback' ? (Yes, No): [No] yes
Type of Callback (Roaming Callback, Required Callback): [Roaming Callback]

Will 'roaming_callback' be able to dial-out ? (Yes, No): [No]n

PPP User Name: roaming_callback
Type: Single User
User IP Address: Interface Default
SubNetMask: 255.255.255.255
Hostname: <undefined>
Time-Allotted: Box Default
Call-Back Type: Roaming Callback
Dial-Out: Not Enabled
Encryption: Not Enabled

Is information correct? (Yes, No, Quit): [No]yes
```

---

## Using AAA with PPP

See “Using Local or Remote Authentication” and “Configuring Authentication” in *Using and Configuring Features* for this information.

---

## The PPP Network Control Protocols

PPP has a family of Network Control Protocols (NCPs) for establishing and configuring different network layer protocols. The NCPs are responsible for configuring, enabling, and disabling the network layer protocols on both ends of the point-to-point link. NCP packets cannot be exchanged until LCP has opened the connection and the link reaches the OPEN state.

PPP supports the following Network Control Protocols:

- AppleTalk Control Protocol (ATCP)
- Banyan VINES Control Protocol (BVCP)
- Bridging protocols (BCP, NBCP, and NBFCP),
- Callback Control Protocol
- DECnet Control Protocol (DNCP)
- IP Control Protocol (IPCP)
- IPv6 Control Protocol (IPv6CP)
- IPX Control Protocol (IPXCP)
- OSI Control Protocol (OSICP)
- APPN High Performance Routing Control Protocol (APPN HPRCP)
- APPN Intermediate Session Routing Control Protocol (APPN ISRCP)



## AppleTalk Control Protocol

ATCP is specified in Request for Comments (RFC) 1378. IBM's implementation of ATCP supports the AppleTalk-Address option. The implementation supports both full router mode and half router mode. For additional information, refer to "AppleTalk over PPP" in *Protocol Configuration and Monitoring Reference Volume 2*.

## Banyan VINES Control Protocol

RFC 1763 describes BVCP. IBM's implementation of BVCP does not support any options.

## Bridging Protocols

Bridging Control Protocol (BCP) is specified in RFC 1638. IBM's implementation of BCP supports the IEEE 802.5 Line Identification Option and the Tinygram Compression Option.

NetBIOS Control Protocol (NBCP) is a proprietary NCP developed by Shiva Corporation and used by the IBM Dial In Access to LAN Client for OS/2, DOS and Windows for single-user dial-in. NBCP is used to transport NetBIOS and LLC/802.2 bridged traffic from these clients, dialed into a 2210 DIALs Server, onto an attached LAN. IBM's implementation of NBCP supports the MAC-Address and NetBIOS Name Projection options.

NetBIOS Frame Control Protocol (NBFCP) is specified in RFC 2097. NBFCP is used by Microsoft Windows 95 and Windows NT Dial-Up Networking clients for single-user dial-in. NBFCP is used to transport NetBIOS bridged traffic from these clients, dialed into a 2210 DIALs Server, onto an attached LAN. IBM's implementation of NBFCP supports the Name-Projection, Peer-Information and IEEE-MAC-Address-Required options.

## Callback Control Protocol

**Note:** CBCP is only available on interfaces that have IBM DIALs Dial-in circuits configured.

Callback Control Protocol (CBCP) is used by Microsoft Dial-Up Networking clients to negotiate callback. The 2210 supports callback to a single user-specified number (roaming callback) and callback to an administrator-specified number (required callback). The CBCP option of calling a list of numbers is not supported.

PPP users that want to use CBCP callback must have some form of authentication enabled (like PAP, CHAP, SPAP or MS-CHAP). There are no configuration parameters for CBCP. (The client determines when it is used.) See "Configuring PPP Callback" on page 477 for information about configuring PPP users for callback.

## DECnet IV Control Protocol

DNCP is specified in RFC 1762. IBM's implementation does not support any DNCP options.

## Using PPP

### IP Control Protocol

IPCP is specified in RFC 1332. IBM's implementation supports the following options:

- Van Jacobsen IP Header Compression as described in RFC 1144.

- Request an IP address

An IP address can be requested for this interface. If Dynamic-Address is enabled in the IP configuration for this interface, the peer will supply the address each time the connection is established.

- IP Address

The router can send its IP address, as well as accept an IP address, from a peer, or supply an IP address to a peer, if requested. If the router is configured to "Send Our Address" on a particular interface, and that interface has a valid, numbered IP address, then IPCP sends the address in its initial Configure-Request as option 3 (IP Address). IPCP also sends its address if the peer sends a Configure NAK with 0.0.0.0 for option 3 (IP Address), if a valid numbered address is configured for that PPP interface. IPCP will not send an unnumbered address to its peer.

A peer may specify its address (referred to as "Client Specified"), or request an address from the router by sending 0.0.0.0 for Option 3 in its initial Configure Request. The router may obtain this address from: the authenticated user profile (referred to as "User ID"), the interface itself (referred to as "Interface"), or the Dynamic Host Configuration Protocol (referred to as "Proxy DHCP"). Any one of these four methods for specifying the peer's IP address may be disabled or enabled at the 2210 level. For more information on enabling and disabling these items, see "Using a Dial-In Access to LANs (DIALs) Server" in the *Using and Configuring Features*.

The router automatically adds a static route directed to the PPP interface for the address that is successfully negotiated, allowing data to be routed properly to the dial-in client. When the IPCP connection is ended for any reason, this static route is subsequently removed. By default, the net mask for this route is 255.255.255.255 (hostroute); however, if a net mask is specified in the authenticated user's profile (see "Configuring PPP Authentication" on page 476) a net mask other than this may be used to allow routing to more than a single host across the PPP link (RIP or other routing protocols could also be used to discover routes if desired).

### IPv6 Control Protocol

IPv6 Control Protocol is specified in RFC 2023. In IBM's implementation of IPv6CP, the router can send its IP address, as well as accept an IP address, from a peer, or supply an IP address to a peer, if requested. If the router is configured to "Send Our Address" on a particular interface, and that interface has a valid, numbered IP address, then IPv6CP sends the address in its initial Configure-Request as option 3 (IP Address). IPv6CP also sends its address if the peer sends a Configure NAK with ::/0 for option 3 (IP Address), if a valid numbered address is configured for that PPP interface. IPv6CP will not send an unnumbered address to its peer.

A peer may specify its address (referred to as "Client Specified"), or request an address from the router by sending ::/0 for Option 3 in its initial Configure Request. The router may obtain this address from: the interface itself (referred to as "Interface") or the Dynamic Host Configuration Protocol (referred to as "Proxy DHCP"). Any one of these methods for specifying the peer's IP address may be

disabled or enabled at the 2210 level. For more information on enabling and disabling these items, see "Using a Dial-In Access to LANs (DIALs) Server" in the *Using and Configuring Features*.

The router automatically adds a static route directed to the PPP interface for the address that is successfully negotiated, allowing data to be routed properly to the dial-in client. When the IPv6CP connection is ended for any reason, this static route is subsequently removed. By default, the prefix length for this route is 128 (hostroute).

### IPX Control Protocol

IPXCP is specified in RFC 1552. IBM's implementation does not support any IPXCP options.

### OSI Control Protocol

OSICP is specified in RFC 1377. IBM's implementation of OSICP does not support any options.

### APPN HPR Control Protocol

Advanced Peer-to-Peer Networking (APPN) High Performance Routing (HPR) control protocol is specified in RFC 2043. No options are negotiated for this control protocol.

### APPN ISR Control Protocol

Advanced Peer-to-Peer Networking (APPN) Intermediate Session Routing (ISR) control protocol is specified in RFC 2043. No options are negotiated for this control protocol.

See "Using and Configuring Data Encryption" in *Using and Configuring Features* for information about configuring encryption for a PPP interface.

---

## Using and Configuring Virtual Connections

Virtual Connections (VC) are DIALs dial-in circuits that can be suspended when they become inactive for a predetermined period of time. The ability to suspend the connections can help control your networking costs by saving line charges for DIALs dial-in clients that are not active; instead of keeping the connections active, the system saves information about the session and then closes the call. When the same DIALs dial-in client reconnects to the server, the session information is restored and the connection resumes as if there were no interruption. See "Configuring a VC" on page 482 for more information.

You can configure DIALs servers to end VCs that have been suspended for a specified amount of time. You can also manually end a VC at any time. See the **set DIALs** command and "DIALs Global Monitoring Commands" in *Using and Configuring Features* for related commands.

## Using PPP

### VC Considerations

Keep the following in mind as you configure VCs:

- You can only use AAA local-list or RADIUS authentication when using VCs.
- A VC will not support IPX. When you configure a user to use VCs, IPX support for that user is disabled.
- The client configuration controls the suspension and resumption of a VC. The DIALs server cannot control that aspect of the connection.
- A VC can be established through an MP bundle.
- VCs cannot run over L2TP.
- Suspended VCs cannot be displayed with current network management tools.
- Do not assign an IP address to remote users by interface. Because another client could use an interface with which a client establishes a VC, when the VC attempts to reconnect with the server the connection will fail because the IP address is in use.
- A dial-in client must use SPAP for authentication.

### Configuring a VC

Configure VCs when you add a DIALs client at the Config> prompt. When you configure the user, you can either use the DIALs dial-in defaults (see the **set DIALs** command in the *Using and Configuring Features*) for the maximum suspend time and inactivity timeout, or configure specific values for the particular client. The following example shows the minimum configuration for a VC for DIALs dial-in client "jose."

```
Config>
Config> add ppp
Enter user name: []? jose
Password:
Enter password again:
Is this a 'DIALs' user? (Yes, No): [Yes]
Type of route? (hostroute, netroute): [hostroute]
IP address: [0.0.0.0]?
Enter hostname for dynamic DNS: []?
Allow Virtual Connections ? (Yes, No): [No] Yes
  Use Box Default inactivity timeout value and maximum suspended time? (Yes, No): [Yes] No
  User-based Max Suspend Time (hours)
  0-48 0=unlimited: [12] ? 10
  User-based Inactivity Timeout (seconds)
  10-1024: [30] ? 60
Give 'jose' default time allotted ? (Yes, No): [Yes]
Enable callback for 'jose' ? (Yes, No): [No]
Will 'jose' be able to dial-out ? (Yes, No): [No]

      PPP user name: jose
      User IP address: Interface Default
      Netroute Mask: 255.255.255.255
      Hostname:
      Time allotted: Box Default
      Callback type: Not Enabled
      Dial-out: Not Enabled

Is information correct? (Yes, No, Quit): [Yes]

User 'jose' has been added
Config>
```

## Using PPP

To display the box-level default values for maximum virtual connections, idle timeout period, and the global default maximum suspend time, use the DIALs `config>list vc-parameters` command in the DIALs feature. To display these parameters along with the maximum suspend time and inactivity timeout for all virtual connections, use the `list all` command in the DIALs feature. See “DIALs Global Monitoring Commands” in *Using and Configuring Features*.



---

## Chapter 31. Configuring and Monitoring Point-to-Point Protocol Interfaces

This chapter describes Point-to-Point Protocol interface configuration and operational commands in the device. Sections in this chapter include:

- “Accessing the Interface Configuration Process”
- “Point-to-Point Configuration Commands” on page 486
- “Accessing the Interface Monitoring Process” on page 503
- “Point-to-Point Monitoring Commands” on page 504
- “Point-to-Point Protocol Interfaces and the GWCON Interface Command” on page 527

---

### Accessing the Interface Configuration Process

Use the following procedure to access the router’s configuration process. This process gives you access to a specific interface’s *configuration* process.

1. At the OPCON prompt (\*), enter the **status** command to find the PID for CONFIG. (See page 9 for sample output of the **status** command.)
2. At the OPCON prompt, enter the OPCON **talk** command and the PID for CONFIG. (For more detail on this command, refer to “What is the OPCON Process?” on page 27.) For example:

```
* talk 6
```

After you enter the talk 6 command, the CONFIG prompt (Config>) displays on the console. If the prompt does not appear when you first enter **CONFIG**, press **Return** again.

3. At the CONFIG prompt, enter the **list devices** command to display the network interface numbers for which the router is currently configured. For example:

```
Config> list devices
```

```
Ifc 0 Ethernet                CSR 81600, CSR2 80C00, vector 94
Ifc 1 WAN X.25                CSR 81620, CSR2 80D00, vector 93
Ifc 2 WAN X.25                CSR 81640, CSR2 80E00, vector 92
Ifc 3 WAN PPP                 CSR 381620, CSR2 380D00, vector 125
Ifc 4 WAN Frame Relay         CSR 381640, CSR2 380E00, vector 124
Ifc 5 Token Ring              CSR 600000, vector 95
```

4. Record the interface numbers.
5. Enter the CONFIG **network** command and the number of the interface you want to configure. For example:

```
Config> network 1
```

The appropriate configuration prompt (such as TKR Config> for token-ring), now displays on the console.

**Note:** Not all network interfaces are user-configurable. For interfaces that cannot be configured, you receive the message:

```
That network is not configurable
```

## Configuring PPP Interfaces (Talk 6)

### Accessing the PPP Interface Configuration Prompt

To display the PPP config> prompt:

1. Enter **list devices** at the Config> prompt to display a list of interfaces.
2. If you have not already done so, set the data link protocol on one of the serial interfaces to PPP by entering **set data-link ppp** at the Config> prompt. For example:

```
Config> set data-link ppp
Interface Number [0]? 2
```

3. Enter **network** followed by the number of the PPP interface. For example:

```
Config> network 2
PPP config>
```

---

## Point-to-Point Configuration Commands

Table 64 summarizes the PPP configuration commands, and the rest of this section explains these commands. Enter the commands at the PPP config> prompt.

*Table 64. Point-to-Point Configuration Command Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Disable	Disables data compression (CCP), DTR line handling, CHAP, PAP, ECP. Also disables SPAP authentication in Remote LAN Access Features images.
Enable	Enables data compression (CCP), DTR line handling, CHAP, PAP, ECP. Also enables SPAP authentication in Remote LAN Access Features images.
List	Lists all information related to the point-to-point interfaces protocols, parameters, and options.
Set	Sets physical line (HDLC) parameters, LCP parameters, generic NCP parameters, and various NCP-specific options.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Disable

Disables data compression, authentication protocols, the DIALs feature, and SPAP authentication (SPAP authentication is supported *only* in DIALs Server images).

#### Syntax:

```
disable                ccp
                        chap
                        dials
                        enp
                        lower-dtr
                        mp
                        mppe
                        mschap
```



## Configuring PPP Interfaces (Talk 6)

pap

spap

- ccp** Disables the use of data compression on the interface. Refer to “Configuring and Monitoring Data Compression” in the *Using and Configuring Features* for more information.
- chap** Disables the use of the Challenge-Handshake Authentication Protocol. Refer to “Challenge-Handshake Authentication Protocol (CHAP)” on page 475 for more information.
- dials** Disables the DIALs feature on this interface. Refer to “Using a Dial-In Access to LANs (DIALs) Server” in the *Using and Configuring Features* for more information.
- ecp** This allows the router not to force the use of ECP encryption on this interface. The interface will still accept and execute Encryption Control Protocol (ECP) if the peer is using ECP.

**Note:** Encryption support is optional. If your software load does not include encryption, you will not see encryption-related parameters.

The use of multiple encryption (using encryption at both the IP Security Layer and at the Frame Relay or PPP data-Link Layer) within the router is restricted by U.S.A. Government export regulations. It is only supported in software loads that are under strict export control (software loads that support RC4 with 128 bit keys and Triple DES).

### lower-dtr

Determines the way the data terminal ready (DTR) signal is handled for leased serial-line interfaces that are disabled. If this parameter is set to “disabled” (the default) and the interface is disabled, the DTR signal is not dropped.

- mp** Disables the Multilink Protocol (MP) on this interface. See “Chapter 32. Using the Multilink PPP Protocol” on page 531 for more information.

#### Example:

```
disable mp
Disabled as a MP link
```

- mppe** Disables Microsoft Point-to-Point Encryption (MPPE) on this interface.

### mschap

Disables MS-CHAP authentication on this interface. Disabling MS-CHAP has two effects upon MPPE, depending upon whether MPPE is configured as mandatory or optional. If MPPE is mandatory, disabling MS-CHAP brings down the link. If MPPE is optional, disabling MS-CHAP disables MPPE over the link. See “Microsoft PPP CHAP Authentication (MS-CHAP)” on page 475 for more information.

**Note:** MS-CHAP is not supported in 4M V2L models.

- pap** Disables the use of the Password Authentication Protocol. Refer to “Password Authentication Protocol (PAP)” on page 474 for more information.
- spap** Disables the use of the Shiva Password Authentication Protocol (SPAP).

**Note:** SPAP is only available on interfaces that have IBM DIALs Dial-In circuits configured.



### lower-dtr

Determines the way the data terminal ready (DTR) signal is handled for leased serial-line interfaces that are disabled. If this parameter is set to “disabled” (the default) and the interface is disabled, the DTR signal is not dropped.

If Lower DTR is set to “enabled”, then the DTR signal will be dropped when the interface is disabled. This behavior may be desirable in situations where the interface has been configured as an alternate link for WAN Reroute and the interface is connected to a dial-out modem which maintains its dial connection based on the state of the DTR signal.

When the interface is disabled, the DTR signal is low and the modem keeps the dial connection down. When the interface is enabled, due to a WAN Reroute backup scenario, DTR is raised and the modem dials a stored number to the backup site. When the primary interface is restored, the alternate interface is disabled, DTR is lowered, and the modem hangs up the dial connection.

The following cable types are supported:

- RS-232
- V.35
- V.36

**Note:** The **enable lower-dtr** command is not supported on PPP dial circuit interfaces.

**mp** Enables the Multilink Protocol (MP) on this interface. See “Chapter 32. Using the Multilink PPP Protocol” on page 531 for more information.

#### Example:

```
enable mp
Enabled as a MP link
Is this link a dedicated MP link? [no] yes
MP interface for this MP link? [0] 3
```

**mppe** [*mandatory/optional*] [*stateless/stateful*]

Enables Microsoft Point-to-Point Encryption (MPPE). If MS-CHAP is not enabled on the interface, then MPPE cannot be enabled on that interface. See Microsoft Point-to-Point Encryption (MPPE) in the chapter “Using and Configuring Encryption Protocols” in *Using and Configuring Features* for more information.

#### mandatory

The client and the server must negotiate MPPE or the link will drop.

#### optional

The client will attempt to negotiate MPPE, but if the negotiation fails, the PPP link will remain active.

#### stateless

Session keys will be regenerated after transmitting each packet. This function is currently not supported by Microsoft Dial-Up Networking (DUN) clients.

#### stateful

Session keys will be regenerated after transmitting every 256 packets.

### mschap

Enables MS-CHAP authentication. When you enable MS-CHAP, you are prompted to provide the authenticator rechallenge interval. This value in

## Configuring PPP Interfaces (Talk 6)

seconds defines the length of time that will pass before the authenticator sends another challenge to the receiver of the authentication request to reconfirm the authentication. The value 0 indicates that no further challenges will be sent after the initial authentication.

Use the **set name** command to configure the name of the 2210 if the peer router is configured to authenticate the 2210's local name.

**Note:** MS-CHAP is not supported on 4M V2L models.

Note that MS-CHAP cannot be enabled if an external authentication server, as described in the chapter "Using Local or Remote Authentication" in *Using and Configuring Features*, has been configured. See "Microsoft PPP CHAP Authentication (MS-CHAP)" on page 475 for more information.

- pap** Enables the use of the Password Authentication Protocol. Refer to "Password Authentication Protocol (PAP)" on page 474 for more information.
- spap** Enables the use of the Shiva Password Authentication Protocol (SPAP). Refer to "Shiva Password Authentication Protocol (SPAP)" on page 475 for more information. The **enable spap** command is available only in software loads with the DIALs feature.

## List

Use the **list** command to display information related to the PPP interface and its protocol parameters and options.

### Syntax:

```
list                all  
                    bcp  
                    ccp  
                    ecp  
                    hdlc  
                    ipcp  
                    ipv6cp  
                    lcp  
                    ncp
```

**all** Lists all options and parameters related to the PPP interface. The **list all** command displays the output of *all* the individual **list...** parameters described below.

**bcp** Lists the Bridging Network control protocol options.

### Example:

```
list bcp  
BCP Options  
-----  
Tinygram Compression:DISABLED
```

### Tinygram Compression:

Displays whether Tinygram Compression is enabled/disabled.

**ccp** Displays the currently selected data compression options if data

## Configuring PPP Interfaces (Talk 6)

compression has been enabled. For additional information, see “Configuring and Monitoring Data Compression” in *Using and Configuring Features*.

If Microsoft Point-to-Point Encryption (MPPE) and data compression are both enabled, the type of data compression is MPPC.

**ecp** Displays the current Encryption Control Protocol state.

### Example:

```
list ecp
ECP Options
-----
Data Encryption enabled
Algorithm list: DESE-CBC
DESE (Data Encryption Standard Encryption Protocol)
```

### Data Encryption Enabled/Disabled

Indicates whether data encryption is enabled or disabled on interface.

### Algorithm List

Displays the supported encryption algorithms. DES, as described by RFC 1969, is the only encryption algorithm currently supported.

**hdlc** Lists parameters related to the High-Level Data Link Control (HDLC) protocol. On PPP dial circuit interfaces, the “list hdlc” option is not available. For dial circuits, hardware data link parameters are a function of the base net rather than the PPP dial circuit. For additional information, see “Chapter 45. Configuring and Monitoring Dial Circuits” on page 671.

### Example:

```
list hdlc
Encoding: NRZ
Idle State: Flag
Clocking: Internal
Cable type: V.35 DCE
Speed (bps): 6400

Transmit Delay Counter: 0
Lower DTR: Disabled
```

### Encoding:

HDLC transmission encoding scheme, either NRZ (non-return to zero) or NRZI (non-return to zero inverted).

### Idle State:

Bit pattern, either Flag or Mark, transmitted on the point-to-point link when the interface is not transmitting data.

### Clocking:

Interface clocking, either external or internal.

### Cable type:

Specifies the type of cable in use (RS-232, V.35, or V.36).

### Speed (bps):

The physical data rate of the interface. When clocking is internal, this is the data rate generated by the internal clock.

### Transmit Delay Counter:

Number of flags sent between frames.

### Lower DTR:

Enabled or Disabled. If Lower DTR is enabled, the router drops the DTR signal when a WAN Reroute alternate link is no longer needed. Dropping the DTR signal causes the modem to terminate the leased-line connection for the alternate link.

## Configuring PPP Interfaces (Talk 6)

### Notes:

1. The **list hdlc** command is not supported on PPP dial circuit interfaces.
2. This command displays the Lower DTR state only if Lower DTR is supported for the configured cable type.

**ipcp** Lists the Internet Protocol control protocol options.

### Example:

```
list ipcp
IPCP Options
-----
IPCP Compression:                None
Request an IP Address            No
Send Our IP Address              Yes
Remote IP Address to Offer if Requested: 10.0.0.3
```

### IPCP compression

Indicates whether the PPP handler accepts compressed IP headers. PPP supports Van Jacobson TCP/IP header compression (RFC 1144). Enable this option when the point-to-point link is running at a low baud rate.

A value of "Van Jacobson" indicates that header compression is supported. A value of "NONE" indicates that compressed headers are not being accepted.

### Request an IP Address

Indicates whether IPCP is configured to retrieve the local IP address for this PPP interface from the remote end of the link in the initial "Configure Request".

### Send Our IP Address

Indicates whether IPCP is configured to send the local IP address for this PPP interface to the remote end of the link in our initial "Configure Request". Some PPP implementations require this information.

**ipv6cp**

Lists the Internet Protocol version 6 control protocol options.

### Example:

```
list ipv6cp
IPv6CP Options
-----
Send Our IP Address:                Yes
```

### Send Our IP Address

Indicates whether IPv6CP is configured to send the local IP address for this PPP interface to the remote end of the link in our initial "Configure Request". Some PPP implementations require this information.

**lcp** Lists the parameters and options for the Link Control Protocol.

### Example:

#### PPP 7 Config>list lcp

```
LCP Parameters
-----
Config Request Tries:                20   Config Nak Tries:                10
Terminate Tries:                    10   Retry Timer:                      3000

LCP Options
-----
Max Receive Unit:                    1522  Magic Number:                      Yes
Peer to Local (RX) ACCM:              A0000
```

## Configuring PPP Interfaces (Talk 6)

```
Protocol Field Comp(PFC):          No  Addr/Cntl Field Comp(ACFC):      No
Authentication Options
-----
Authenticate remote using: none
Identify self as:                  ibm
```

Link Control Protocol includes the authentication protocols used to authenticate the remote peer. If the authentication protocol is either CHAP or Microsoft PPP CHAP (MS-CHAP), the rechallenge interval is displayed.

### Example:

#### PPP 7 Config>list lcp

```
LCP Parameters
-----
Config Request Tries:              20  Config Nak Tries:                  10
Terminate Tries:                   10  Retry Timer:                       3000

LCP Options
-----
Max Receive Unit:                  1522  Magic Number:                      Yes
Peer to Local (RX) ACCM:           A0000
Protocol Field Comp(PFC):          No   Addr/Cntl Field Comp(ACFC):        No

Authentication Options
-----
Authenticate remote using: MSCHAP or SPAP or CHAP or PAP [Listed in priority order]
CHAP Rechallenge Interval: 0
MSCHAP Rechallenge Interval: 0
Identify self as:                  ibm
```

#### Config Request Tries:

Number of times that LCP sends configure-request packets to a peer station while attempting to open a PPP link.

#### Config Nak Tries:

Number of times that LCP sends configure-nak (“not acknowledged”) packets to a peer station while attempting to open a PPP link.

#### Terminate Tries:

Number of times that LCP sends terminate-request packets to a peer station to close a PPP link.

#### Retry Timer:

Number of milliseconds that elapse before packet transmission continues according to the number of times set by the “Config tries” parameter.

#### Max Receive Unit:

Displays the maximum information field (packet) size handled by the link.

#### Peer to Local (Rx) ACCM

Displays the characters that the peer must “escape” when transmitting packets to the router on asynchronous lines.

#### Magic Number:

Indicates whether the magic number loopback detection option is enabled.

#### Protocol Field Comp (PFC):

Indicates whether the PFC option is enabled.

## Configuring PPP Interfaces (Talk 6)

### Addr/Cntl Field Comp(ACFC):

Indicates whether ACFC is enabled.

### Authenticate remote using:

A list of enabled authentication protocols.

### Identify Self As:

The name set with the **set name** command.

**ncp** Lists the parameters for all Network Control Protocols.

### Example:

```
list ncp
NCP Parameters
-----
Config Request Tries:      20   Config Nak Tries:      10
Terminate Tries:          10   Retry Timer:           3000
```

### Config Request Tries:

Number of times NCP sends configure-request packets to a peer station while attempting to open a PPP link.

### Terminate Tries:

While awaiting a Terminate-Ack, the number of times NCP sends Terminate-Request before it closes a PPP link.

### Config Nak Tries:

Number of times NCP sends configure-nak (not acknowledged) packets to a peer station while attempting to open a PPP link.

### Retry Timer:

Number of milliseconds that elapse before timing out of NCP's transmission of configure-request packets (to open the link) and terminate-request packets (to close the link).

## LLC

Use the **LLC** command to access the LLC configuration environment (available only if APPN is included in the software load). See "LLC Configuration Commands" on page 241 for an explanation of each of these commands.

### Syntax:

llc

## Set

Use the **set** command to set HDLC parameters, LCP options and parameters, IPCP options, BCP options, and NCP parameters. "Parameters" are related to internal operations for such things as retry counts. "Options" are things that are negotiated with the other end.

### Notes:

1. Values immediately following the command option prompts reflect the current setting of that option. They are not always the default values illustrated in this chapter.
2. The **set hdlc** commands are not supported on PPP dial circuit interfaces.

### Syntax:

set bcp



## Configuring PPP Interfaces (Talk 6)

ccp options  
ccp algorithms  
hdlc...  
ipcp  
ipv6cp  
lcp...  
name...  
ncp...

**bcp** Sets the Bridging Control Protocol (BCP) parameters.

### Example:

```
set bcp  
TINYGRAM COMPRESSION [no]:
```

### Tinygram Compression

Specifies whether or not Tinygram Compression is used. This option is useful for protocols that are prone to problems when bridged over low-speed (64 Kbps and below) lines. These protocols add zeroes between the data and the frame checksum to pad the Protocol Data Unit (PDU) to the minimum size. Tinygram compression removes the zeroes and preserves the frame checksum at the transmitting end. At the receiving end, it restores the packet to the minimum length.

### ccp options

Prompts you for the configurable options of the compression algorithms. Some of the options may be modified later by PPP negotiations with the peer router on the WAN link. For additional information, see “Configuring and Monitoring Data Compression” in *Using and Configuring Features* .

### Example:

```
set ccp options  
STAC: check mode (0=none, 1=LCB, 2=CRC, 3=Seq, 4=Ext) [3]?  
STAC: # histories [1]?
```

### STAC: check mode (0=none, 1=LCB, 2=CRC, 3=Seq, 4=Ext)

STAC compressed datagrams normally include a check value used by the two ends of the link to recognize when a compressed packet has been lost or corrupted, and some action is needed to re-synchronize the sender’s and receiver’s histories.

**Note:** Failure to detect a bad packet can cause all subsequent data to be decompressed incorrectly.

This option sets the exact form of check value used. Choose one of the following:

- 0** None: No check value is used. Without a check value, there is no way to determine that a packet has been lost, out-of-sequence, or corrupted. Do not use this mode unless the underlying data link provides reliable, sequenced packet delivery.
- 1** LCB: A “Longitudinal Control Byte” is used. This is a simple, 8-bit exclusive-OR checksum. *Its usage is strongly discouraged* because the receiver cannot detect a lost or an

## Configuring PPP Interfaces (Talk 6)

out-of-sequence packet, and the PPP frame checksum is a more reliable test of the packet's integrity.

- 2 CRC: A 16-bit cyclic redundancy checksum is used. Although this is a better test of a packet's integrity than the LCB, its use is still discouraged because the receiver still cannot use it to detect lost or out of sequence packets, and otherwise it becomes largely redundant with the frame checksum.
- 3 SEQ: An 8-bit sequence number is used (default). This is the preferred method of operation. If the number of histories is not 0, use of any other mode is strongly discouraged though another mode may be necessary for interoperability with certain non-RFC-compliant routers.
- 4 EXT: An extended mode that is similar to the sequence number mode, in that each packet includes a sequence number, but the compressed frame format is altered more radically. In extended mode, re-synchronization with a peer is performed differently than with the other modes; the signaling between the two nodes is based upon flags passed in the headers of compressed datagrams rather than distinct CCP control packets.

Extended mode is provided for compatibility with certain non- RFC-compliant implementations. It should be used only with clients that do not support mode 3.

### **STAC: # histories**

This sets the number of compression "contexts" or "histories" that are used by the STAC compression engine.

A nonzero value means that the compression engine maintains the specified number of histories where it keeps information about previous data sent in packets. This historical data is used to improve the effectiveness of the compression.

The receiver maintains a similar history and as long as the transmitter and receiver keep their histories in sync, the receiver can properly decompress the packets it receives. If the histories get out of sync, packets are discarded as unusable data. Normally, you should set the number of histories to 1 unless the link quality is very poor.

A value of zero means that each packet sent is compressed without regard to any past packets sent and may always be reliably decompressed by the receiver. However, because the compressor cannot exploit any information derived from examining prior packets, the effectiveness of the compression usually is not as good.

Some implementations support more than one history, subdividing the data stream into separate streams that are compressed independently. The router does not support the use of more than one history on a PPP link.

### **ccp algorithms *list-of-algorithms***

Specifies an exact list of compression algorithms to use. The order of preference depends on the order of entry in the list. When MPPE is

## Configuring PPP Interfaces (Talk 6)

activated on the link, the order of the CCP algorithms is ignored and only Microsoft Point-to-Point Compression (MPPC) is used.

When the link negotiates compression with another node, it offers the entire list of protocols to the peer node in preference order. The peer node should select the first protocol it can use from the preference list. Enabling multiple protocols allows the peer to dictate which compression algorithm will be used on the link. If you need to avoid an algorithm, do not specify the algorithm in the list.

Specifying **none** disables the use of any protocol effectively disabling compression. The valid compression algorithms are:

### STAC-LZS

The STAC-LZS algorithm as described in RFC 1974

**MPPC** The Microsoft Point-to-Point Compression algorithm as described in RFC 2118.

### Example:

```
set ccp algorithms
PPP 6 Config>set ccp alg
Enter a prioritized list of compression algorithms (first is preferred),
all on one single line.
Choices (can be abbreviated) are:
STAC-LZS MPPC
Compressor list [STAC-LZS]? stac mppc
```

### hdlc cable *cable type*

Set the HDLC cable type (that is connected to the interface) to one of the following types:

- RS-232 DTE
- RS-232 DCE
- V35 DTE
- V35 DCE
- V36 DTE
- X21 DTE
- X21 DCE

### Example: set hdlc cable rs-232 dce

A DTE cable is used when you are attaching the router to some type of DCE device (for example, a modem or a DSU/CSU).

A DCE cable is used when the router is acting as the DCE and providing the clocking for direct attachment.

### hdlc clocking *external or internal*

To connect to a modem or DSU, configure external clocking and select the appropriate DTE cable with the **set hdlc cable** command. Use the **set hdlc speed** command to configure the line speed.

To connect directly to another DTE device, configure internal clocking, select the appropriate DCE cable with the **set hdlc cable** command, and configure the clocking/line speed with the **set hdlc speed** command.

**Default:** external

### Example: set hdlc clocking internal

## Configuring PPP Interfaces (Talk 6)

### **hdlc encoding** *NRZ or NRZI*

Sets the HDLC transmission encoding scheme for an interface. Encoding may be set for NRZ (non-return to zero) or NRZI (non-return to zero inverted). NRZ is the more widely used encoding scheme while NRZI is used in some IBM configurations. The default value is NRZ.

**Example: set hdlc encoding nrz**

### **hdlc idle** *flag or mark*

Sets the data link idle state to either Flag or Mark.

The flag option provides continuous flags (7E hex) between frames.

The mark option puts the line in a marking state (OFF, 1) between frames.

**Example: set hdlc idle flag**

### **hdlc speed** *value*

For internal clocking, use this command to specify the speed of the transmit and receive clock lines.

For external clocking, this command does not affect the operation of the WAN/serial line but it does set the speed that some protocols, such as IPX, use to determine routing cost parameters. You should set the speed to match the actual line speed. If the speed is not configured, the protocols assume a speed of 1 000 000 bps.

#### **Valid Values:**

Internal Clocking: 2400 to 2 048 000 bps

External Clocking: 2400 to 6 312 000 bps

**Note:** If you want to use a line speed greater than 2 048 000 bps when external clocking is configured, you can only do this on:

- Interface 1
- Port 1 of an 4-port WAN concentration adapter
- Ports 1 and 5 of an 8-port WAN concentration adapter

All other WAN ports on the same adapter must be clocked at 64 000 bps or less.

**Example: set hdlc speed 56000**

### **hdlc transmit-delay** *value*

Sets the number of flags sent between frames. The purpose of this command is to slow the serial line so that it is compatible with older, slower serial devices at the other end.

The range is 0 to 15. The default is 0.

**Example: set hdlc transmit-delay 15**

**ipcp** Sets all Internet Protocol Control Protocol options for that link.

#### **Example:**

```
set ipcp
```

```
IP COMPRESSION [yes]:
```

```
Number of Slots: [16]:
```

```
Request an IP address [no]:
```

```
Send our IP address [yes]:
```

```
Note: unnumbered interface addresses will not be sent.
```

```
Interface remote IP address to offer if requested (0 for none) [0.0.0.0]? 10.0.0.3
```

### IPCP compression

Selects whether or not the PPP handler will accept compressed IP data. PPP supports Van Jacobson (VJ) TCP/IP header compression as described in RFC 1144. You should enable this option when the point-to-point link is running at a low baud rate.

Setting this value to **yes** enables the compression option. Setting this value to **no** disables the option. The default setting is **no**.

**Slots** Sets the number IP headers that are saved for referential purposes when determining the type of compression that is enabled. The range is 1 to 16. The default is 16.

### Request an IP address

Specifies if the local IP address for this interface should be retrieved from the remote end of the link. You should set this option to **yes** if the other end of this link provides the IP address. This is a typical feature provided by ISPs (Internet Service Providers).

This interface will need to have a proper IP configuration for this requested address to become usable. Specifically, Dynamic-Address must be enabled on this interface.

**Note:** The next question, **Send Our IP address**, will not be displayed if **Request an IP address** is set to **yes**.

### Send Our IP address

Specifies whether or not to send the local IP address to the remote end of the link. You should set this option to **yes** if the other end of the link requires the IP address.

If this value is set to **yes**, IPCP will send the IP address of the PPP interface, if the interface is configured with a numbered IP address, (that is, the address does not begin with 0). If this option is set to **no** and the peer sends us a Configure NAK with 0.0.0.0 for the IP Address option, the 2210 will respond with the address of the PPP interface if it is configured with a numbered address.

### ipv6cp

Sets the IPv6 Control Protocol option for the link.

#### Example:

```
set ipv6cp  
Send Our IP address [no]:
```

### Send Our IP address

Specifies whether or not to send the local IPv6 address to the remote end of the link. Set this option to **yes** if the other end of the link requires the IPv6 address.

If this parameter is set to **yes**, IPv6CP will send the IPv6 address of the PPP interface, if the interface is configured with a numbered IPv6 address, (that is, the address does not begin with 0). If this option is set to **no** and the peer sends us a Configure NAK with ::/0 for the IPv6 address option, the 2210 will respond with the address of the PPP interface if it is configured with a numbered address.

### lcp options or parameters

Sets the Link Control Protocol options and parameters for the PPP link.

#### Example:

## Configuring PPP Interfaces (Talk 6)

### set lcp options

Maximum Receive Unit (bytes) [2048]?  
Magic Number [yes]:  
Peer-to-Local Async Control Character Map (RX ACCM) [A0000] ?  
Protocol Field Compression (PFC) [no]?  
Addr/Cntl Field Compression (ACFC) [no]?

### Maximum receive unit

Sets the maximum size of the information field that are transferred in a single datagram. The range is 576 to 4089 bytes. The default is 2048.

### Magic number

Specifies whether or not the magic number option is enabled. The magic number provides a way of detecting looped back links in serial line configurations. When this option is enabled, the link uses the system clock as a random number generator. The random numbers that are generated are referred to as magic numbers.

When the LCP receives a Configure Request with a magic number present (i.e., the magic number option is enabled), the received magic number is compared with the magic number in the last Configure-Request sent to the peer. If the two magic numbers are different, the link is not considered looped back. If the two numbers are the same, the PPP handler attempts to bring the link down and up again to renegotiate magic numbers.

Setting this value to Yes enables the magic number option. Setting this value to No disables the option. The default setting is Yes.

### Async Control Character Map

Indicates which characters that the peer must “escape” when transmitting packets to the router on asynchronous lines. This allows certain sensitive ASCII control characters, such as XON and XOFF, to be transmitted transparently over the link.

Specify a 32-bit bit mask in hexadecimal. If a bit in position 'N' of the mask is set, the corresponding ASCII character 'N' must be escaped (the LSB is bit number 0, corresponding to the ASCII NUL character).

The default value for this option is '0A0000', indicating that XON and XOFF (control-Q and control-S) need to be escaped. This is for the benefit of modems that use XON/XOFF to perform software handshaking. If this is not an issue, then it is recommended that you change the ACCM to zero (no characters escaped).

LCP is always willing to negotiate the ACCM, even on synchronous lines, and the **list lcp** command in the PPP monitoring process will display the negotiated value. However, synchronous lines employ a “bit-stuffing” mechanism rather than an “escaping” mechanism, so the ACCM is not normally meaningful on synchronous lines. It may be meaningful if the router is connected to a modem that performs sync-to-async conversion, in which case its value should reflect the requirements of the attached modem on the asynchronous side.

### Addr/Cntl Field Compression (ACFC)

Specifies whether the peer can employ address and control field compression.

If the ACFC option is successfully negotiated by LCP, it means that the Address and Control field bytes which start off each packet may be omitted in the datagrams sent back and forth on the link. These

## Configuring PPP Interfaces (Talk 6)

bytes are always 0xFF 03, so there is no real information provided by them, and enabling ACFC means that the datagrams that are transmitted will be two bytes shorter.

To be precise, if you enable ACFC, you are indicating a receive-side capability. If you enable ACFC and LCP successfully negotiates it, the other end can employ ACFC in the packets it transmits to the local end (most PPP options work like this). The local end will only transmit packets *without* the address and control fields if the other end also indicates its ability to handle such packets.

Enabling ACFC does not obligate the other end to send packets without the address and control fields, even if it accepts the option. Enabling ACFC merely tells the peer that it optionally *may* use ACFC, and the router will be able to handle the incoming packets. If the peer indicates that it can handle ACFC, then the router always performs ACFC on the packets it transmits regardless of whether ACFC is enabled locally.

LCP packets always are sent with address and control fields present. This guarantees that LCP packets will be recognized even if there is a loss of link synchronization.

### Protocol Field Compression (PFC)

Specifies whether the peer is to employ protocol field compression.

When you specify “yes”, if the PFC option is negotiated successfully by LCP, the leading zero byte may be omitted from the “Protocol” field for those protocol values in the range '0x0000'–'0x00FF', for a one byte savings in the packets being transmitted. This range includes the majority of layer-3 protocol datagrams.

PPP protocol values are all assigned such that the upper byte of the protocol is an even value and the lower byte is an odd value (a limited use of the more generalized mechanism described by the ISO 3309 extension mechanism for address fields). Thus, the receiver can readily detect when the leading byte of a protocol value has been omitted (the first byte of the protocol field is odd rather than even), so there is no ambiguity interpreting frames in the presence of PFC.

PFC, like ACFC, is a receive side capability and the previous description of ACFC applies to PFC.

#### Example:

```
set lcp parameters
Config tries [20]?
NAK tries [10]?
Terminate tries [10]?
Retry timer (mSec) [3000]?
```

**Note:** The value immediately following the command option prompt is the current setting of that option. It is not always the default value illustrated in this chapter.

#### Retry timer

Sets the amount of time in milliseconds that elapses before LCP's transmission of configure-request (to open the link) and terminate-request (to close the link) packets is timed out. Expiration of this timer causes a timeout and the halting of configure-request

## Configuring PPP Interfaces (Talk 6)

and terminate-request packet transmission. The range is 200 to 30000 milliseconds. The default setting is 3000 milliseconds.

### Config tries

Sets the number of times that LCP sends configure-request packets to a peer station to establish the opening of a PPP link. The default value is 20. The range is 1 to 100.

The retry timer starts after the first configure-request packet is transmitted. This is done to guard against packet loss.

### NAK tries

Sets the number of times that LCP sends configure-nak (nak = not acknowledged) packets to a peer station while attempting to open a PPP link. The default value is 10. The range is 1 to 100.

LCP sends configure-nak packets upon receiving configure-request packets with some unacceptable configuration options. These packets are sent to refuse the offered configuration options and to suggest modified, acceptable values.

### Terminate tries

Sets the number of times that LCP sends terminate-request packets to a peer station to close a PPP link. The default value is 10. The range is 1 to 100.

The retry timer starts after the first terminate-request packet is transmitted. This is done to guard against packet loss.

**name** Sets the name that the router uses when responding to authentication requests from another router.

### Notes:

1. While the “case” that you use for names and passwords sent to the peer on the link are preserved for this product, interoperability with other vendor products is easier if all names and passwords are entered in *lowercase*.
2. Other implementations may not handle names with the same maximum length as supported in this product. The only indication is a message from the authenticator stating that there is a bad name. If you receive this type of message, try shortening the routerid.
3. This command sets the name of the local router. Use the talk 6 **add ppp-user** command at the Config> prompt to add each remote user to the local data base, if you want to use the local data base to track the remote users. The alternative is to configure the external AAA authentication server that is described in the chapter “Using Local or Remote Authentication” in *Using and Configuring Features* .

**Note:** The external AAA authentication server cannot be used by MS-CHAP.

### Example:

```
set name
PPP 7 Config>set name
Enter Local Name: [ ]? newyork
Password:
Enter password again:
PPP Local Name = newyork
```

### ncp parameters

Sets the basic operational parameters for most NCPs.



## Configuring PPP Interfaces (Talk 6)

**Note:** Although you access this command through a particular interface, this command will reset the parameters for all PPP interfaces.

### Example:

```
set ncp parameters
Config tries [20]
NAK tries [10]?
Terminate tries [10]?
Retry timer (mSec) [3000]?
```

### Config tries

Sets the number of configure-request packets sent by NCP to a peer station to attempt to open a PPP link. The range is 1 to 100. The default is 20.

This action indicates the desire to open an NCP connection with a specified set of configuration options. The retry timer starts after a configure-request packet is transmitted. This is done to guard against packet loss.

### NAK tries

Sets the number of configure-nak (nak = not acknowledged) packets that NCP sends to a peer station while attempting to open a PPP link. The range is 1 to 100. The default value is 10.

Upon receiving configure-request packets with some unacceptable configuration options, NCP sends configure-nak packets. These packets are sent to refuse the offered configuration options and to suggest modified, acceptable values.

### Terminate tries

Sets the number of terminate-request packets sent by NCP to a peer station to close a PPP link. The range is 1 to 100. The default value is 10.

This action indicates the desire to close an NCP connection. The retry timer is started after a terminate-request packet is transmitted. This is done to guard against packet loss.

### Retry timer

Sets the amount of time, in milliseconds, that elapses before NCP's transmission of configure-request (to open the link) and terminate-request (to close the link) packets is timed out. Expiration of this timer causes a timeout and the halting of configure-request and terminate-request packet transmission. The range is 200 to 30000 milliseconds. The default is 3000 milliseconds.

---

## Accessing the Interface Monitoring Process

To access the PPP interface monitoring process, do the following:

1. Enter **interface** at the + prompt to display a list of configured interfaces.
2. Enter **network** followed by the number of the PPP interface.

```
+ network 2
PPP>
```



## Monitoring PPP Interfaces (Talk 5)

spap - SPAP Authentication CP  
ccp - PPP Compression CP  
cdp - PPP compression  
compression - PPP compression  
bcp - Bridging (ASRT) CP  
brg - Bridging (ASRT)  
stp - Spanning Tree Protocol  
nbcsp - NetBios  
nbcfp - NetBios Frame  
ipcp - Internet Protocol CP  
ip - Internet Protocol  
ipv6cp - Internet Protocol version 6 CP  
ipv6 - Internet Protocol version 6  
ipxcp - Novell IPX CP  
ipx - Novell IPX  
atcp - AppleTalk (Phase 2) CP  
ap2 - AppleTalk (Phase 2)  
dncp - DECnet IV CP  
dn - DECnet IV  
osicp - ISO's OSI CP  
osi - ISO's OSI  
bvcsp - Banyan VINES CP  
vines - Banyan VINES  
isrcp - APPN ISR CP  
isr - APPN ISR  
hprcp - APPN HPR CP  
hpr - APPN HPR

**all** Lists all information and counters related to the point-to-point interface and PPP options and parameters. The output displayed for this command is a combination of the displays from all of the individual **list item** commands.

**Note:** If a network control protocol is not available on an interface, a message is displayed indicating that no protocol or statistics information is available for that network control protocol's list commands.

**cbcp** Lists statistics for the Callback Control protocol.

### Example: list cbcp

CBCP Statistics	In	Out
-----	---	----
Packets:	0	0
Octets:	0	0
Callback attempts:	0	
Successful callbacks:	0	

## Monitoring PPP Interfaces (Talk 5)

### Packets

Indicates the total number of CBCP packets transmitted (out) and received (in) over the current point-to-point interface.

### Octets

For CBCP frames, indicates the total number of bytes in Octets transmitted and received over the current point-to-point interface.

### Callback attempts

The number of CBCP callbacks attempted, including those in progress.

### Successful callbacks

The number of successful callbacks completed.

### control

Lists negotiated options or other state information for a control protocol.

ccp  
ecp  
lcp  
bcp  
nbc  
nbc  
nbc  
ipcp  
ipxcp  
atcp  
dn  
osicp  
bvcp  
isrcp  
hprcp

## Examples of the List Control CCP Command

### Example for STAC-LZC:

```
list control ccp
CCP State:          Open
Previous State:     Ack Sent
Time Since Change:  264 hours, 56 minutes and 58 seconds

Compressor:  STAC-LZS histories 1, check_mode SEQ
Decompressor: STAC-LZS histories 1, check_mode SEQ

MPPE : Negotiated 40 bit stateful
```

### Example for MPPC:

```
list control ccp
CCP State :          Open
Previous State :     Listen
Time Since Change:  167 minutes

Compressor : none
Decompressor : none

MPPE : Negotiated 40 bit stateful
```

## Definitions of Terms in the List Control CCP Example

### CCP state

The current state of the point-to-point link. If “Open”, then

## Monitoring PPP Interfaces (Talk 5)

compression was successfully negotiated on this link. If not open, compression is not running on the link. It will also show as “Open” if MPPE has been successfully negotiated.

### Previous State

State of the point-to-point link before the state displayed in the current state field.

### Compressor

Shows which compressor was negotiated and the options it is using.

### Decompressor

Shows which decompressor was negotiated and the options it is using.

**MPPE** MPPE options negotiated. See the talk 6 **enable mppe** command for descriptions of these parameters and Microsoft Point-to-Point Encryption (MPPE) in the chapter “Using and Configuring Encryption Protocols” in *Using and Configuring Features* for more information.

## Example of the List Control ECP Command

### Example:

```
PPP x>list control ecp
ECP State:                Open
Previous State:           Ack Sent
Time Since Change:        16 minutes and 40 seconds
Local (transmit) encrypter: DES
Remote (receive) encrypter: DES
```

## Definitions of Terms in the List Control ECP Example

### ECP State:

The current state of the point-to-point link. If “Open” then encryption was successfully negotiated on this link. If not “Open”, encryption is not running on the link.

### Previous State:

The state of the point-to-point link before the state displayed in the current state field.

### Time Since Change:

The elapsed time between the above two state changes.

### Local (transmit) encrypter:

This encryption algorithm is used for encrypting the data being sent on this PPP interface.

### Remote (receive) encrypter:

The encryption algorithm is used for decrypting the received data on this interface.

## Example of the List Control LCP Command

### Example:

```
list control lcp
Version:                1
Link phase:              Establishing connection (LCP)
```

## Monitoring PPP Interfaces (Talk 5)

```
LCP State:          Listen
Previous State:     Req Sent
Time Since Change:  1 minute and 57 seconds
Remote Username:    - No Authentication -
Last Identification Rx'd
Time Connected:     - No Connection -

LCP Option          Local          Remote
-----
Max Receive Unit:   2048          1500
Async Char Mask:    FFFFFFFF      FFFFFFFF
Authentication:     None           None
Magic Number:       7A8CBFD7      None
Protocol Field Comp: No              No
Addr/Cntl Field Comp: No            No
32-Bit Checksum:   No              No
```

### Definitions of Terms in the List Control LCP Example

#### Version

Displays the current version of the Point-to-Point Protocol.

#### Link phase

Displays the current activity on the link. This can have one of the following values:

**Dead** There is no activity on the link; the interface is down.

**LCP** The link is in LCP negotiation. This state occurs when first bringing up an interface. The interface may be in self-test at this time.

#### Authenticate

The link is performing initial authentication.

**ECP** The link is negotiating an ECP encryption algorithm.

**Note:** Encryption support is optional. If your software load does not include encryption, you will not see encryption-related parameters.

The use of multiple encryption (using encryption at both the IP Security Layer and at the Frame Relay or PPP data-Link Layer) within the router is restricted by U.S.A. Government export regulations. It is only supported in software loads that are under strict export control (software loads that support RC4 with 128 bit keys and Triple DES).

**Ready** Link is operating normally. NCPs can negotiate and data traffic associated with can flow after successful NCP negotiation.

#### Terminate

The link is being shut down.

#### LCP State

Displays the current state of the point-to-point link. These states include the following:

**OPEN** - Indicates that a connection has been made and data can be sent. The retry timer does not run in this state.

## Monitoring PPP Interfaces (Talk 5)

**CLOSED** - Indicates that the link is down and no attempt is being made to open it. In this state, all connection requests from peers are rejected.

**LISTEN** - Indicates that the link is down and no attempt is being made to open it. In contrast to the CLOSED state, however, all connection requests from peers are accepted.

**REQUEST-SENT** - Indicates that an active attempt is being made to open the link. A Configure-request packet has been sent but a Configure-Ack has not yet been received nor has one been sent. The retry timer is running at this time.

**ACK-RECEIVED** - Indicates that a Configure-request packet has been sent and a Configure-Ack packet has been received. The retry timer is still running since a Configure-Ack packet has not been transmitted.

**ACK-SENT** - Indicates that a Configure-Ack packet and a Configure-request packet have been sent but a Configure-Ack packet has not been received. The retry timer always runs in this state.

**CLOSING** - Indicates that an attempt is being made to close the connection. A Terminate-request packet has been sent but a Terminate-Ack packet has not been received. The retry timer is running in this state.

### **Previous State**

Displays the state of the point-to-point link prior to the state displayed in the Current state field. These states are the same as those described in the Current state field.

### **Time since change**

Displays the amount of time that has elapsed since the last link state change.

### **Remote Username**

When authentication is required on the link, this field shows the name that the peer supplied.

### **Last Identification Rx'd**

An optional packet type that is defined for LCP is an "Identification" packet. The contents of this packet are undefined but are normally expected to be a human-readable string provided by the peer to give some identifying information such as a name, manufacturer, model number, or other information the manufacturer wishes to provide. If the router receives such a packet, the contents of the last such packet received are displayed here.

### **Time Connected**

Indicates how long the peer has been connected on this link.

### **LCP Option**

These fields indicate the values of options that have been negotiated with the peer when LCP is in the Open state. When LCP is not open, these values represent initial defaults or configured values that will be used in subsequent LCP negotiations.

### **Max Receive Unit**

Indicates the maximum length for the packet size that the local and

## Monitoring PPP Interfaces (Talk 5)

remote ends can transmit. This is the maximum length of the payload portion of a PPP packet and it does not include PPP header and trailer bytes.

When LCP is in an Open state, the values indicate the lengths that have been negotiated with the peer. The router does not support differing MRU lengths for the peer and local end, so these values will be the same.

### Async Character Mask

This indicates the asynchronous control character mask that has been negotiated. The router accepts ACCM negotiation even on synchronous lines, although this does not affect the actual packet data sent. See the **set lcp options** command on page 499 for more information about the ACCM.

### Authentication

Indicates which authentication protocol, if any, each end of the link requires. Multiple protocols may be available at each end; this value indicates which protocol the units agreed to use.

### Magic number

Displays the current magic number being used for both the local and remote ends of the link for loopback detection.

### Protocol compression

Indicates whether PFC has been negotiated.

### Address/Control compression

Indicates whether ACFC has been negotiated.

### 32-bit checksum

Not currently supported. PPP will reject this option if it is received.

## Example of the List Control BCP Command

### Example:

```
list control bcp
BCP State:          Closed
Previous State:     Closed
Time Since Change:  5 hours, 25 minutes and 3 seconds

BCP Option          Local          Remote
Tinygram Compression  DISABLED      DISABLED
Source-route Info:
Remote side does not support source-route bridging
```

## Definitions of Terms in the List Control BCP Example

The BCP State fields are the same as those described under the **list control lcp** command.

### Tinygram Compression

Displays whether or not Tinygram Compression is enabled or disabled on the local and remote ends of the link.

### Source-route Info

Displays whether or not source route bridging is enabled for the local and remote ports that correspond to this interface.

## Example of the List Control NBSP Command



### Example:

```
list control nbcv
NBCP State:          Closed
Previous State:      Closed
Time Since Change:   3 hours, 48 minutes and 24 seconds
```

```
NetBIOS Control Protocol Info:
Local MAC Address = 0x000000000000
Remote MAC Address = 0x000000000000
Remote NetBIOS Names: (0)
```

### Definitions of Terms in the List Control NBCP Example

The NBCP State fields are the same as those described under the **list control lcp** command.

#### Local MAC Address

The Local MAC Address is the MAC Address that is used by the DOS/Win DIALs client. It is a pseudo-random number, or a Locally Administered Address (LAA), if you configured an LAA in the client.

#### Remote MAC Address

The Remote MAC Address is the MAC Address that the 2210 DIALs Server has assigned to this client for use on the LAN.

#### Remote NetBIOS Name

The list of NetBIOS names of LAN resources to which the client has requested access.

### Example of the List Control NBFCP Command

#### Example:

```
list control nbfcv
NBFCP State:          Closed
Previous State:      Closed
Time Since Change:   4 hours, 5 minutes and 58 seconds
```

```
NetBIOS Frame Control Protocol Info:
Local MAC Address = 0x000000000000
Remote MAC Address = 0x444553540000
Remote NetBIOS Names: (0)
```

```
Remote Peer Class:    0
Remote Peer Version Major: 0
Remote Peer Version Minor: 0
```

### Definitions of Terms in the List Control NBFCP Example

The NBFCP State fields are the same as those described under the **list control lcp** command.

#### Local MAC Address

The Local MAC Address is the MAC Address that is used by the Win 95/NT Dial-Up Networking client. It is a pseudo-random number, or a Locally Administered Address (LAA), if you configured an LAA in the client.

#### Remote MAC Address

The Remote MAC Address is the MAC Address that the 2210 DIALs Server has assigned to this client for use on the LAN.

#### Remote NetBIOS Name

The list of NetBIOS names of LAN resources to which the client has requested access.

## Monitoring PPP Interfaces (Talk 5)

### Remote Peer

The Remote Peer Class, Version Major, and Version Minor is the information passed back to the 2210 by the NBFCP Peer Information option.

### Example of the List Control IPCP Command

#### Example:

```
list control ipcp
IPCP State:          Listen
Previous State:      Closed
Time Since Change:   1 hour, 57 minutes and 52 seconds

IPCP Option          Local          Remote
-----
IP Address           0.0.0.0          10.0.0.152
Compression Slots    None              None

DNS servers obtained from remote:
  Primary DNS: 0.0.0.0
  Secondary DNS: 0.0.0.0

DHCP State:          BOUND
Lease Server:        10.0.0.111
Leased IP Address:   10.0.0.152
Lease Time:          4 minutes and 0 seconds
Renewal Time:        2 minutes and 0 seconds
Rebind Time:         3 minutes and 30 seconds
Lease Time Elapsed:  1 second
Lease Time Remaining: 3 minutes and 59 seconds

DHCP Client ID:     0100120B0000
```

### Definitions of Terms in the List Control IPCP Example

The IPCP state fields are the same as those described under the **list control lcp** command.

#### IP Address:

Indicates this interface's configured or negotiated IP address (Local) and the negotiated address of the remote (Remote), if any.

#### Compression Slots

Indicates the number of IP headers saved for referential purposes when determining the type of compression that is enabled.

#### DNS servers obtained from remote

Indicates the IP addresses of the Domain Name Servers (DNS) provided by the remote side.

#### DHCP State

This is the Proxy DHCP as described in RFC 1541.

#### Lease Server

The server from which the lease was acquired.

#### Leased IP address

The address leased to the client. This address should be equivalent to the "Remote IP Address" listed above.

#### Lease Time

Length of lease from the DHCP server for this address. When "Lease Time Elapsed" equals this time, the lease will be expire and the IPCP connection closed.

#### Renewal Time

Time after which Proxy DHCP attempts to extend this lease from the server. When "Lease Elapsed Time" equals this time, Proxy

## Monitoring PPP Interfaces (Talk 5)

DHCP attempts to renew the lease, resetting the "Lease Time," "Lease Elapsed Time," and "Lease Time Remaining," if successful.

### Rebind Time

Time before Proxy DHCP attempts to obtain a new lease from any configured DHCP server. When "Lease Elapsed Time" equals this time, Proxy DHCP attempts to obtain a new lease, resetting the "Lease Time," "Lease Elapsed Time," and "Lease Time Remaining," if successful.

### Leased Time Elapsed

Time elapsed for this lease. This is not necessarily the time for this particular dial-in session, as the lease may have been renewed. When the lease is renewed, this timer is set back to 0.

### Leased Time Remaining

Time remaining for this lease. This parameter is equal to "Lease Time" minus "Lease Time Elapsed."

### DHCP client ID

A unique ID for this client (dial-in user). All DHCP messages are identified to and from the DHCP server by this client ID.

## Example of the List Control IPXCP Command

### Example:

```
list control ipxcp
IPXCP State:      Closed
Previous State:   Closed
Time Since Change: 2 hours, 9 minutes and 9 seconds
```

The IPXCP state fields are the same as those described under the **list control lcp** command.

## Example of the List Control ATCP Command

### Example:

```
list control atcp
ATCP State:      Closed
Previous State:   Closed
Time Since Change: 6 hours, 27 minutes and 7 seconds

AppleTalk Address Info:
Common network number = 12
Local node ID = 49
Remote node ID = 76
```

## Definitions of Terms in the List Control ATCP Example

The ATCP State fields are the same as those described under the **list control lcp** command.

### Common Network Number

Network number of the two ends of the point-to-point link. (You must statically configure both ends of the link to have the same network number.)

### Local Node ID

Unique node number of the local end of the link.

### Remote Node ID

Unique node number of the remote end of the link.

### Example:

## Monitoring PPP Interfaces (Talk 5)

```
list control dnpc
DNCP State:          Closed
Previous State:      Closed
Time Since Change:   2 hours, 2 minutes and 58 seconds
```

The DNCP state fields are the same as those described under the **list control lcp** command.

### Example:

```
list control osicp
OSICP State:         Closed
Previous State:      Closed
Time Since Change:   6 hours, 28 minutes and 32 seconds
```

The OSICP State fields are the same as those described under the **list control lcp** command.

### Example of the List Control BVPC Command

### Example:

```
list control bvcp
BVCP State:          Open
Previous State:      Ack Sent
Time Since Change:   403 hours, 49 minutes and 2 seconds
```

The BVCP State fields are the same as those described under the **list control lcp** command.

**Note:** The command word **bvcp** and the acronym BVCP stand for the Banyan VINES Control Protocol (BVCP).

### Example of the List Control ISRCP Command

### Example:

```
list control isrcp
APPN ISRCP State:    Open
Previous State:      Ack Rcvd
Time Since Change:   1 hour, 48 minutes and 5 seconds
```

The APPN ISR control protocol (ISRCP) state fields are the same as those described under the list control lcp command.

### Example of the List Control HPRCP Command

### Example:

```
list control hprcp
APPN HPRCP State:    Open
Previous State:      Ack Rcvd
Time Since Change:   1 hour, 48 minutes and 10 seconds
```

The APPN HPR control protocol (HPRCP) state fields are the same as those described under the list control lcp command

**error** Lists information related to all error conditions tracked by the PPP software.

### Example:

list error		
Error Type	Count	Last One
-----	----	-----
Bad Address:	0	0
Bad Control:	0	0
Unknown Protocol:	0	0
Invalid Protocol:	0	0
Config Timeouts:	0	0
Terminate Timeouts:	0	0

### Bad address

Indicates the total number of bad addresses encountered over the point-to-point link. "Bad addresses" refers to the HDLC framing byte at the start of the packet.

## Monitoring PPP Interfaces (Talk 5)

### Bad control

Indicates the total number of bad control packets encountered over the point-to-point link. "Bad control" refers to the 0x03 prefix on HDLC encapsulated PPP packets ("UI" value that follows the 0xFF).

### Unknown protocol

Indicates the total number of unknown protocol packets encountered by the current link.

### Invalid protocol

Indicates the total number of invalid protocol packets encountered by the current link.

### Config timeouts

Indicates the total number of configuration timeouts experienced by the link.

### Terminate timeouts

Indicates the total number of link termination timeouts experienced by the link.

### interface

Lists PPP interface statistics.

#### Example:

```
list interface
Interface Statistic      In      Out
-----
Packets:                 0       0
Octets:                  0       0
```

### Packets

Indicates the number of packets received and transmitted on this interface.

### Octets

Indicates the number of octets received and transmitted on this interface.

### lcp

Lists statistics for the Link Control Protocol.

#### Example:

```
list lcp
LCP STATISTIC          IN      OUT
-----
PACKETS:               42     42
OCTETS:                1260   1260
CFG REQ:               0       0
CFG ACK:               0       0
CFG NAK:               0       0
CFG REJ:               0       0
TERM REQ              0       0
TERM ACK              0       0
ECHO REQ:             21     21
ECHO RESP:            21     21
DISC REQ:              0       0
CODE REJ:              0       0
```

### Packets

Indicates the total number of LCP packets transmitted (out) and received (in) over the current point-to-point interface.

### Octets

For LCP frames, indicates the total number of bytes in octets transmitted and received over the current point-to-point interface.

### CFG REQ

Indicates the total number of configure-request LCP packets transmitted and received over the current point-to-point interface.

## Monitoring PPP Interfaces (Talk 5)

### CFG ACK

Indicates the total number of configure-ack (acknowledged) LCP packets transmitted and received over the current point-to-point interface.

### CFG NAK

Indicates the total number of configure-nak (not acknowledged) LCP packets transmitted and received over the current point-to-point interface.

### CFG REJ

Indicates the total number of configure-reject LCP packets transmitted and received over the current point-to-point interface.

### TERM REQ

Total number of terminal request LCP packets transmitted and received over the current point-to-point interface.

### TERM ACK

Total number of terminal ack LCP packets transmitted and received over the current point-to-point interface.

### ECHO REQ

Indicates the total number of echo-request LCP packets transmitted and received over the current point-to-point interface.

### ECHO RESP

Indicates the total number of echo-response LCP packets transmitted and received over the current point-to-point interface.

### DISC REQ

Indicates the total number of discard-request LCP packets transmitted and received over the current point-to-point interface.

### CODE REJ

Indicates the total number of code-reject LCP packets transmitted and received over the current point-to-point interface.

**pap** Lists statistics for the Password Authentication Protocol.

### Example:

```
list pap
PAP Statistics          In          Out
-----
Packets:                0            0
Octets:                 0            0
Requests:               0            0
Acks:                   0            0
Naks:                   0            0
```

### Packets

The total number of PAP packets sent or received.

### Octets

The number of bytes of data that were sent or received in those packets.

### Requests

The number of PAP "Request" packets sent or received. These are the packets which contain the PAP name/password pairs.

**Acks** The number of Acks (success replies) sent or received for the PAP requests (for example, if the peer sends a valid Request packet, the router replies with an Ack).

## Monitoring PPP Interfaces (Talk 5)

**Naks** The number of Naks sent or received for the PAP requests (for example, if the peer sends an invalid Request packet, the router replies with a Nak).

**chap** Lists statistics for the Challenge-Handshake Authentication Protocol.

**Example:**

```
list chap
CHAP Statistics          In          Out
-----
Packets:                0           0
Octets:                 0           0
Challenges:             0           0
Responses:              0           0
Successes:              0           0
Failures:               0           0
```

### **Packets**

The total number of CHAP packets sent or received.

### **Octets**

The number of bytes of data that were sent or received in the packets.

### **Challenges**

The number of CHAP “Challenge” packets sent or received. A CHAP Challenge packet includes a randomly generated encryption key and is a demand on the peer to generate a suitable response based on that key and on stored password information.

### **Responses**

The number of CHAP “Response” packets sent or received. A Response packet contains a peer’s answer to a “Challenge” request.

### **Successes/Failures**

The number of Success or Failure packets sent or received. A unit sends out a Challenge packet and waits for the peer’s Response reply. It then examines the Response packet and sends a Success or Failure packet to indicate whether the Response was valid.

These counters reflect the number of Success or Failure packets sent. A peer gets several tries to respond successfully before authentication is considered to have failed.

## **mschap**

Lists MS-CHAP statistics for each direction.

### **Packets**

Total number of MS-CHAP packets.

### **Octets**

Total number of bytes contained in MS-CHAP packets.

### **Challenges**

Number of MS-CHAP challenge packets.

### **Responses**

Number of MS-CHAP response packets.

### **Successes**

Number of MS-CHAP success packets.

### **Failures**

Number of MS-CHAP failure packets.

## Monitoring PPP Interfaces (Talk 5)

### Failure: Restricted Hours

Number of failure packets sent due to the PPP user's attempt to access the 2210 outside of that user's permitted hours. This counter is not supported and will always be 0.

### Failure: Account Disabled

Number of failure packets sent because the PPP user's ID has been disabled at the 2210.

### Failure: Password Expired

Number of failure packets sent because the PPP user's password has expired.

### Failure: No Dialin Permission

Number of failure packets sent because the PPP user is not authorized to dial in to this 2210.

### Failure: Authentication

Number of failure packets sent because the PPP user's credentials (ID or password) are not known to the 2210.

### Failure: Change Password

Number of failure packets sent as a result of error encountered while processing the Change Password packet.

### Change Password

Number of change password packets. The router will never send a change password packet; therefore, the outbound counter will always be 0.

**ecp** Lists statistics for ECP (encryption control protocol) packets sent or received on the interface.

### Example:

```
PPP x>list ecp
```

```
ECP Statistic          In          Out
-----
Packets:                2            2
Octets:                 26           26
Reset Reqs:             0            0
Reset Acks:             0            0
Prot Rejects:           0            -
Local (transmit) encrypter: DES
Remote (receive) encrypter: DES
```

### Packets

Indicates the total number of ECP packets transmitted (out) and received (in) over the current point-to-point interface.

### Octets

Indicates the total number of bytes transmitted and received in the ECP packets.

### Reset Reqs

Indicates the number of Reset requests transmitted and received on this interface. A Reset Request will be sent whenever ECP discard an EDP packet.

**Note:** Because DES, the only supported encryption algorithm, does not send reset requests this number will be zero.

### Reset Acks

Indicates the reset acknowledgments transmitted and received on this interface. A Reset Ack packet will be sent for every Reset Request packet received.



## Monitoring PPP Interfaces (Talk 5)

**Note:** Because DES, the only supported encryption algorithm, does not send any Reset Requests this number will be zero.

### Prot Rejects

Indicates the total number of protocol reject packets transmitted and received over the current point-to-point interface.

### Local (transmit) encrypter

This encryption algorithm will be used to encrypt the data being sent on this point-to-point interface.

### Remote (receive) encrypter

This encryption algorithm will be used to decrypt the received data on this point-to-point interface.

**edp** Lists statistics associated with the ECP-encrypted packets being sent or received on the interface.

### Example:

```
PPP x>list edp
```

Encryption Statistic	In	Out
-----	--	---
Packets:	20	30
Octets:	29164	44790
Encrypted Octets:	29280	44880
Discarded Packets:	0	0
Prot Rejects:	0	-

### Packets

Indicates the total number of IP packets transmitted (out) and received (in) over the current point-to-point interface.

### Octets

Indicates the total number of octets of data bytes transmitted and received over the current IP connection.

### Encrypted Octets

Indicates the number of encrypted octets transmitted or received on this interface.

### Discarded Packets

Indicates the number of packets that were discarded because they could not be successfully decrypted.

### Prot Rejects

Indicates the total number of protocol reject packets transmitted and received over the current point-to-point interface.

**mppe** Displays encryption data statistics for Microsoft PPP Encryption (MPPE) configuration.

### Example:

```
list mppe
MPPE Statistic      In      Out
-----
Encrypted Octets :  0      0
Encrypted Packets :  0      0
Discarded Packets :  0      0
```

**spap** Lists statistics for the Shiva Password Authentication Protocol.

### Example:

```
list spap
SPAP Statistic      In      Out
-----
Packets:            0      0
Octets:             0      0
Requests:           0      0
Acks:               0      0
```

## Monitoring PPP Interfaces (Talk 5)

Naks:	0	0
Dialbacks:	0	0
PleaseAuthenticates:	0	0
Change Passwords:	0	0
Alerts:	0	0
MCCP Call Reqs	0	0
MCCP Callbacks	0	0
MCCP ACKs	0	0
MCCP NAKs	0	0

### Packets

The total number of SPAP packets sent or received.

### Octets

The number of bytes of data that were sent or received in those packets.

### Requests

The number of SPAP "Request" packets sent or received. These are the packets which contain the SPAP name/password pairs.

**Acks** The number of Acks (success replies) sent or received for the SPAP requests (for example, if the peer sends a valid Request packet, the router replies with an Ack).

**Naks** The number of Naks sent or received for the SPAP requests (for example, if the peer sends an invalid Request packet, the router replies with a Nak).

### Dialbacks

The number of times a user:

- Requested a callback (roaming callback) and it was granted.
- Dialed-in and they were configured for required callback and dialed back at the predetermined number stored in the user profile.

### PleaseAuthenticates

The number of SPAP please authenticate packets that have been sent or received on this interface. An SPAP please authenticate packet is sent as the result of a timeout when waiting for the other end to send an SPAP authenticate request.

### Change Passwords

The number of change password requests that sent or received on this interface.

**Alerts** The number of SPAP banners that have been sent or received.

### MCCP Call Reqs

Indicates that the sender requested another phone number to dial a second MP link.

### MCCP Callbacks

Indicates that the sender supplied a phone number on which to be called back to establish a second MP link.

### MCCP ACKs

The number of acknowledgments sent or received by MCCP.

### MCCP NAKs

The number of negative acknowledgments sent or received by MCCP.

**ccp** Lists statistics for compression control protocol.

### Example:

## Monitoring PPP Interfaces (Talk 5)

```
list ccp
CCP  Statistic      In      Out
-----
Packets:           24      25
Octets:            174     177
Reset Reqs:        0        0
Reset Acks:        0        0
Prot Rejects:      0        0
```

### Packets

Indicates the number of packets received and transmitted on this interface.

### Octets

Indicates the number of octets received and transmitted on this interface.

### Reset Reqs

The number of CCP dictionary “Reset Requests” that were transmitted or received.

### Reset Acks

The number of CCP dictionary “Reset Acknowledgments” that were transmitted or received.

Reset Request and Reset Acknowledgment packets are control packets passed between the CCP entities at each end, used to maintain synchronization of the data dictionaries at each end of the link.

### Prot Rejects

Indicates the number of protocol rejects of CCP packets sent by the peer (reception of a protocol reject would signify that the peer does not support CCP).

**cdp** Displays statistics associated with compressed data packets sent or received on this interface.

### Example:

```
list cdp
Compression Statistic      In      Out
-----
Packets:                   31035   46550
Octets:                    1614885 2421137
Compressed Octets:         931416  1521039
Incompressible Packets:    0        0
Discarded Packets:         0        0
Prot Rejects:              0        -
Compression Ratios         1.70     1.70
```

### Packets

These counters indicate the number of compressed datagrams sent and received. On the output side, the count includes only those packets that were actually sent as PPP compressed datagrams; it does not include packets that were found to be incompressible and sent in their original uncompressed form.

These counters count the packets sent or received that had the PPP protocol type of X'00FD' (CDP). When STAC extended mode or MPPC has been negotiated, incompressible packets may be encapsulated in CDP datagrams. This encapsulation would include the incompressible packets in these counts.

### Octets

These counters indicate the number of bytes effectively transmitted or received in compressed form. These counts reflect the lengths of the original datagrams before compression or after decompression.

## Monitoring PPP Interfaces (Talk 5)

### Compressed octets

These counters indicate the number of bytes for all of the compressed datagrams sent and received. These counts are the lengths of the actual CDP packets after compression or before decompression.

### Incompressible packets

These counters indicate the number of packets that were incompressible and therefore sent in original uncompressed form.

### Discarded packets

These counters indicate how many packets were discarded because they could not be successfully decompressed. Typically these packets will be packets that the peer was transmitting just after the router has sent a Reset-Request, but before the peer has received and processed the Reset-Request. Packets are also dropped if the router detects that data in the packets is incorrect. An example of incorrect data is a packet that contains a bad sequence number.

If the number of discarded packets increases too rapidly, then packets are being lost or corrupted on the line, probably due to noise on the line, and the link performance may be degraded.

### Protocol rejects

This counter indicates the number of Protocol-Rejects of CDP packets that have been received from a peer. This count should be zero, because the link will not send CDP packets if the use of compression has not already been negotiated.

### Compression ratios

The ratios give an approximate indication of the effectiveness of the compressor and decompressor. These ratios are based on the number of plain-text bytes divided by the number of corresponding compressed bytes, so values greater than 1 are preferable for both input and output. The higher the number, the more effective the compression.

The output ratio is computed as the ratio of the number of original plain-text bytes divided by the number of bytes sent as a result of attempting compression - whether the packet actually was compressed or sent as a CDP packet. If a data stream does not compress well and most of the packets are sent in their original form or in enlarged CDP packets, the compression output ratio will drop. If the ratio drops below 1.0, the compressor is actually reducing the effective bandwidth of the line rather than increasing it, and should be disabled on that interface if the state persists for a long time.

The input ratio is computed based on the number of bytes received in CDP frames divided into the number of decompressed bytes. Unlike the output ratio, this count does not include any packets that were incompressible and sent in plain-text form. This is because the router cannot determine if a received non-CDP packet was an incompressible packet that the peer sent in plain-text form, or just a packet that the peer did not attempt to compress.

Because of the method of calculation, the output ratio on one end of the link does not necessarily match the input ratio at the other end.

**compression**

This command displays the same information as `list cdp`.

**bcp** Lists statistics for the Bridging control protocol. These fields are the same as those described under the **list ip** command. (See “ip”.)

**Example:**

```
list bcp
BCP Statistic          In          Out
-----
Packets:               0           0
Octets:                0           0
Prot Rejects:         0           -
```

**brg** Lists statistics on the bridge packets received and transmitted over the PPP interface. These fields are the same as those described under the **list ip** command. (See “ip”.)

**Example:**

```
list brg
BRG Statistic          In          Out
-----
Packets:               0           0
Octets:                0           0
Prot Rejects:         0           -
```

**stp** Lists statistics for the spanning tree protocol. These fields are the same as those described under the **list ip** command. (See “ip”.)

**Example:**

```
list stp
Spanning Tree Statistic In          Out
-----
Packets:               0           0
Octets:                0           0
```

**nbcnp** Lists NetBIOS Control Protocol statistics for the point-to-point interface. These fields are the same as those described under the **list ip** command. (See “ip”.)

**Example:**

```
list nbcnp
NBCP Statistic          In          Out
-----
Packets:               0           0
Octets:                0           0
Prot Rejects:         0           -
```

**nbfcnp** Lists NetBIOS Frame Control Protocol statistics for the point-to-point interface. These fields are the same as those described under the **list ip** command. (See “ip”.)

**Example:**

```
list nbfcnp
NBFCP Statistic          In          Out
-----
Packets:               0           0
Octets:                0           0
Prot Rejects:         0           -
```

**ipcp** Lists Internet Protocol Control Protocol statistics for the point-to-point interface. These fields are the same as those described under the **list ip** command. (See “ip”.)

**Example:**

```
list ipcp
IPCP STATISTIC          IN          OUT
-----
PACKETS:               0           0
OCTETS:                0           0
PROT REJECTS:         0
```

**ip** Lists all information related to IP packets over the point-to-point link.

## Monitoring PPP Interfaces (Talk 5)

### Example:

```
list ip
IP Statistic      In      Out
-----
Packets:         349     351
Octets:          128488  129412
Prot Rejects:    0       -
```

### Packets

Indicates the total number of IP packets transmitted (out) and received (in) over the current point-to-point interface.

### Octets

Indicates the total number of octets transmitted and received over the current IP connection.

### Prot Rejects

Indicates the total number of protocol reject packets transmitted and received over the current point-to-point interface.

## ipv6cp

Lists Internet Protocol version 6 Control Protocol statistics for the point-to-point interface. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

```
list ipv6cp
IPv6CP STATISTIC  IN      OUT
-----
PACKETS:          0       0
OCTETS:           0       0
PROT REJECTS:     0
```

**ipv6** Lists all information related to IPv6 packets over the point-to-point link. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

```
list ipv6
IPv6 Statistic    In      Out
-----
Packets:          0       0
Octets:           0       0
Prot Rejects:     0
```

**ipxcp** Lists statistics for the IPX control protocol. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

```
list ipxcp
IPXCP Statistic   In      Out
-----
Packets:          0       0
Octets:           0       0
Prot Rejects:     0       -
```

**ipx** Lists IPX statistics for the point-to-point interface. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

```
list ipx
IPX Statistic     In      Out
-----
Packets:          0       0
Octets:           0       0
Prot Rejects:     0       -
```

**atcp** Lists statistics for the AppleTalk control protocol. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

## Monitoring PPP Interfaces (Talk 5)

```
list atcp
ATCP Statistic      In      Out
-----
Packets:           0        0
Octets:            0        0
Prot Rejects:      0        -
```

- ap2** Lists AppleTalk Phase 2 statistics for the point-to-point interface. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

**Example:**

```
list ap2
AP2 Statistic      In      Out
-----
Packets:           349     351
Octets:           128488 129412
Prot Rejects:      0
```

- dncp** Lists statistics on the DECnet control protocol packets. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

**Example:**

```
list dncp
DNCP Statistic     In      Out
-----
Packets:           0        0
Octets:            0        0
Prot Rejects:      0        -
```

- dn** Lists statistics on the DECnet packets received and transmitted over the PPP interface. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

**Example:**

```
list dn
DN Statistic       In      Out
-----
Packets:           0        0
Octets:            0        0
Prot Rejects:      0        -
```

- osicp** Lists statistics for the OSI control protocol. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

**Example:**

```
list osicp
OSICP Statistic    In      Out
-----
Packets:           0        0
Octets:            0        0
Prot Rejects:      0        -
```

- osi** Lists statistics on the OSI packets received and transmitted over the PPP interface. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

**Example:**

```
list osi
OSI Statistic      In      Out
-----
Packets:           0        0
Octets:            0        0
Prot Rejects:      0        -
```

- bvcp** Lists statistics on the Banyan VINES control protocol. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

**Example:**

```
list bvcp
BVCP Statistic     In      Out
-----
```

## Monitoring PPP Interfaces (Talk 5)

```
Packets:          0          0
Octets:           0          0
Prot Rejects:    0          -
```

**vines** Lists statistics for the Banyan VINES packets received and transmitted over the PPP interface. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

```
list vines
Vines Statistic      In          Out
-----
Packets:             10          13
Octets:              320         340
Prot Rejects:        0          -
```

**isrcp** Lists statistics for APPN ISR Control Protocol packets. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

```
list isrcp
APPN ISRCP Statistic In          Out
-----
Packets:             3          3
Octets:              12         12
Prot Rejects:        0          -
```

**isr** Lists statistics on the APPN ISR packets received and transmitted over the PPP interface. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

```
list isr
APPN ISR Statistic   In          Out
-----
Packets:             220         219
Octets:              1266        1157
Prot Rejects:        0          -
```

**hprcp** Lists statistics for APPN HPR Control Protocol packets. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

```
list hprcp
APPN HPRCP Statistic In          Out
-----
Packets:             3          3
Octets:              12         12
Prot Rejects:        0          -
```

**hpr** Lists statistics on the APPN HPR packets received and transmitted over the PPP interface. These fields are the same as those described under the **list ip** command. (See “ip” on page 523.)

### Example:

```
list hpr
APPN HPR Statistic   In          Out
-----
Packets:             780         715
Octets:              131907      69685
Prot Rejects:        0          -
```

## LLC

Use the **LLC** command to access the LLC monitoring prompt. LLC commands are entered at this new prompt. See “LLC Monitoring Commands” on page 245 for an explanation of each of these commands.



**Note:** This command is available only when APPN is included in the software load.

**Syntax:**

llc

## Point-to-Point Protocol Interfaces and the GWCON Interface Command

The PPP interface traffic is carried by an underlying data-link level device driver. Additional statistics that can be useful when monitoring PPP links may be obtained from the device driver statistics which are displayed using the **interface** command from the GWCON environment. (For more information on the **interface** command, refer to “Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands” on page 131.)

The statistics in this section are displayed when you run the **interface** command from the GWCON environment (talk 5) for the following interfaces used in point-to-point configurations:

**Example:**

```
+int 1
Net   Net'  Interface                               Self-Test  Self-Test Maintenance
1     1     PPP/0                                   Passed    Failed    Failed
0                                           2         0
0

Point to Point MAC/data-link on SCC Serial Line interface

Adapter cable:                V.35 DCE  RISC Microcode Revision:
0

V.24 circuit: 105 106 107 108 109
Nicknames:    RTS CTS DSR DTR DCD
PUB 41450:    CA  CB  CC  CD  CF
State:        ON  ON  ON  ON  ON

Line speed:                unknown
Last port reset:           1 minute, 54 seconds ago

Input frame errors:
CRC error                   0 alignment (byte length)
0
missed frame                0 too long (> 2182 bytes)
0
aborted frame               0 DMA/FIFO overrun
0

Output frame counters:
DMA/FIFO underrun errors    0 Output aborts sent
0
```

**Net**     Interface number as assigned by software during initial configuration.

**Net'**    Base interface number as assigned by software during initial configuration.

**Note:** For dial circuit interfaces, Net' is different from Net. For dial circuit interfaces, Net' indicates the base interface (ISDN or V.25bis) that the dial circuit uses.

**Interface No**

Type of interface and its instance number. The Point-to-Point interface type is PPP.

**CSR**    Command and status register addresses of the base network.

**Vec**     Interrupt vector address.

## Monitoring PPP Interfaces (Talk 5)

### **Self-Test: Passed**

Total number of times the point-to-point interface passed its self-test.

### **Self-Test: Failed**

Total number of times the point-to-point interface failed its self-test.

### **Maintenance: Failed**

Total number of maintenance failures.

### **Adapter cable**

Type of adapter cable that has been configured; for example, V.35 DTE.

### **V.24 circuit**

Circuits being used on the V.24. Note: The symbol - - - in monitoring output indicates that the value or state is unknown.

### **Nicknames**

Control signals Note: The symbol - - - in monitoring output indicates that the value or state is unknown.

### **PUB 41450**

Pin assignments Note: The symbol - - - in monitoring output indicates that the value or state is unknown.

**State** State of the V.24 circuits (on or off). Note: The symbol - - - in monitoring output indicates that the value or state is unknown.

### **Line speed**

Configured line speed or default value assumed (if line speed is configured as 0).

### **Last port reset**

Length of time since the port was reset.

### **CRC error**

The number of packets received that contained checksum errors and as a result were discarded.

### **Alignment (byte length)**

The number of packets received that were not an even multiple of 8 bits in length and as a result were discarded.

### **Too long (> 2048 bytes)**

The number of packets that were greater than the configured frame size, and as a result were discarded.

### **Aborted frame**

The number of packets received that were aborted by the sender or a line error.

### **DMA/FIFO overrun**

The number of times the serial interface could not send data fast enough to the system packet buffer memory to receive them from the network.

### **Missed frame**

When a frame arrives at the device and there is no buffer available, the hardware drops the frame and increments the missed frame counter.

### **L & F bits not set**

On serial interfaces, the hardware sets input-descriptor information for arriving frames. If the buffer can accept the complete frame upon arrival, the hardware sets both the last and first bits of the frame, indicating that the

## Monitoring PPP Interfaces (Talk 5)

buffer accepted the complete frame. If either of the bits is not set, the packet is dropped, the L & F bits not set counter is incremented, and the buffer is cleared for reuse.

**Note:** It is unlikely that the L & F bits not set counter will be affected by traffic.

### Output Frame Counters:

#### DMA/FIFO underrun errors

The number of times the serial interface could not retrieve data fast enough from the system packet buffer memory to transmit them onto the network.

#### Output aborts sent

The number of transmissions that were aborted as requested by upper-level software.

## Monitoring PPP Interfaces (Talk 5)

---

## Chapter 32. Using the Multilink PPP Protocol

This chapter describes how to use the Multilink PPP Protocol (MP). It includes the following sections:

- “MP Considerations” on page 532
- “Multi-Chassis MP” on page 533
- “Configuring a Multilink PPP Interface” on page 533

The Multilink PPP Protocol allows you to increase the bandwidth of:

- PPP leased lines, including channelized and I43x ISDN circuits
- PPP ISDN dial circuits
- PPP V.25bis dial circuits
- PPP V.34 dial circuits
- PPP Layer 2 Tunneling circuits

Increased bandwidth is accomplished by defining a **virtual link** made up of multiple links. The bandwidth of the resulting MP bundle is almost equal to the sum of the bandwidths of the individual links. The advantage is that large data packets transmitted across a single link can now be fragmented, transmitted across multiple links, and rebuilt at the receiving end station. MP uses both the Bandwidth Allocation Protocol and the Bandwidth Allocation Control Protocol to dynamically add and drop PPP dial circuits to a virtual link. MP also uses Bandwidth-On-Demand (BOD) to add “dedicated” MP dial links to an existing bundle.

There are two types of MP links: those that are dedicated and those that are simply enabled. A dedicated MP link is an MP-enabled interface configured as a link to a particular MP interface. If the link attempts to join another MP bundle, or if MP is not negotiated at all, the software terminates the link. All PPP links except for layer-2-tunneling interfaces can be configured as dedicated MP links. PPP leased links must be configured as dedicated MP links.

PPP dial-circuits and Layer 2-Tunneling can be configured as MP enabled. An MP-enabled link that is not dedicated can become a link in any MP bundle. If MP is not negotiated, the link operates as an independent interface using the link’s configured protocols.

You can configure a Multilink PPP interface that consists of multiple PPP dial circuits as part of the MP bundle.

There are also two types of MP interfaces: those that have a dedicated link and those that do not. An MP interface needs a dedicated link in any one of the following situations:

- The link is only for the MP interface
- The MP interface is configured for outbound calls. The dedicated link must then be configured with the destination phone number and caller identification.
- The MP interface is configured to receive a particular inbound call. In this case, the dedicated link is configured with the inbound destination phone number and caller identification.
- The MP interface needs to perform outbound authentication. In this case, all links use the same authentication name.

## Using MP

MP interfaces that do not have a dedicated link must be inbound-only interfaces. These interfaces are similar to the any inbound dial circuit.

The Bandwidth Allocation Protocol (BAP) and its control protocol (BACP) allow an MP interface to increase and decrease its bandwidth by adding and dropping dial circuits. When the bandwidth utilization algorithm determines that a link should be added to the bundle, if there is an available PPP dial-circuit, and the peer agrees, an additional call is placed.

BAP first searches for any idle dedicated PPP dial circuits for the MP interface, and then for any MP-enabled PPP dial circuit. It will not, however, use a dedicated PPP dial circuit of another MP circuit. The configured maximum number of links on the MP interface will never be exceeded.

BOD uses configured dial-circuit phone numbers to place calls when needed to add dedicated MP dial links to an existing bundle. Links are added to the bundle one at a time, if needed, during a polling period. BOD adds any PPP serial links to the bundle first and will retain the serial links throughout the life of the bundle. BOD only drops dial links.

MP supports the following features:

- BRS
- WRR
- WRS
- Dial-on-Demand
- DIALs

However, WRS, Dial-on-Demand, and DIALs are only supported on MP bundles that contain only dial circuits.

---

## MP Considerations

When configuring an MP bundle, keep the following in mind:

- Mixing dial circuits with “leased” lines causes the software to disable BAP on the bundle and use BOD instead. Only mix dial circuits with “leased” circuits when you desire to use BOD to manage the bundle.
- You cannot use Dial-on-Demand or WRS for MP bundles that contain either PPP “leased” lines or Layer 2 Tunneling circuits.
- You cannot use DIALs on bundles that contain PPP “leased” lines.
- All devices joining an MP bundle must have link speed configured.

### **Important:**

1. Do not configure a bundle with media with extremely dissimilar properties. The largest link should have no more than 4 times the capacity of the smallest link. If the speeds of the links in an MP bundle differ greatly, you may need to add receive buffers to the faster link.
  2. When bundling ISDN B-channels with slower media types, you may need to increase the number of ISDN buffers. Bundling ISDN B-channels with slower links is not recommended for ISDN primary.
- Adding a V.34 dial circuit to a bundle disables BAP and causes the software to use BOD instead.

---

## Multi-Chassis MP

An MP bundle with a Layer 2 Tunnel that contains a phone hunt group that spans multiple physical Network Access Servers is known as a *multi-chassis MP*. Multi-chassis MP uses rhelm or user-based tunneling (see “Using Local or Remote Authentication” in *Using and Configuring Features*) to establish the MP endpoint destination. See “Using Layer 2 Tunneling Protocol (L2TP)” in *Using and Configuring Features* for more information about L2TP.

---

## Configuring a Multilink PPP Interface

Configuring an MP interface depends on the type of interface used in the MP bundle. The following sections contain examples of the various configurations.

After configuring the MP interface, you may configure bandwidth-on-demand (BOD). The following example configures BOD on existing MP interface 17:

```
Config> net 17
MP config: 17> enable bod
Enable BAP? [N]

MP config: 17> set bandwidth-on-demand parameters
Add bandwidth % [90]:
Drop bandwidth % [70]:
Bandwidth test interval (sec) [15]

MP config: 17>
```

## Configuring MP on PPP Dial Circuits

This section shows how to configure a Multilink PPP interface by using an example that configures Multilink PPP with two ISDN dial circuits.

1. Add the two dial circuits and the multilink PPP interface.

```
*t 6

Config>add dev dial-circuit
Adding device as interface 7
Defaulting Data-link protocol to PPP
Use "net 7" command to configure circuit parameters
Config>add dev dial-circuit
Adding device as interface 8
Defaulting Data-link protocol to PPP
Use "net 8" command to configure circuit parameters
Config>add dev multilink-ppp
Enter the number of multilink PPP interfaces [1]?
Adding device as interface 9
Defaulting Data-link protocol to PPP
Use "net intf" command to configure circuit parameters
Config>
```

2. Configure each PPP dial circuit. (See “Chapter 45. Configuring and Monitoring Dial Circuits” on page 671.) In this example, the destination, call direction, and LIDs are set for one of the dial circuits.

```
Config>net 7
Circuit configuration
Circuit config: 7>set dest out
Circuit config: 7>set calls outbound
Circuit config: 7>set net 6
Circuit config: 7>
```

3. Enable MP on each dial circuit to be used for MP as follows:

```
Circuit config: 7>encapsulator
Point-to-Point user configuration
PPP 7 Config>enable mp
```

## Using MP

```
Enabled as a Multilink PPP Link,  
Use as a dedicated Multilink PPP link? [No]: yes  
Multilink PPP net for this Multilink PPP link [1]? 9  
NOTE: PPP configuration will be obtained from the Multilink PPP  
net. It is NOT necessary to configure PPP for this net!
```

**Note:** You cannot configure PPP parameters for dedicated links from this prompt. Dedicated links use the existing MP interface's PPP configuration.

By answering "Yes" to the question "Use as a dedicated Multilink PPP link?" the link becomes dedicated to the specified Multilink PPP interface (9 in this example). In this case, the link **must** be used for an MP bundle and **must** join the specified MP interface. The link cannot be used as a regular PPP dial circuit.

Answering "No" to "Use as a dedicated Multilink PPP link?" will allow this PPP dial-circuit to join any MP interface. At least one PPP dial-circuit **must** be a dedicated link to an outbound MP interface.

A dedicated PPP dial circuit obtains all PPP parameters (LCP options, authentication, and others) from its MP interface. MP enabled PPP dial circuits joining the same MP bundle **must** negotiate the same LCP parameters and authentication name.

4. Configure the MP interface. The "Dialout MP link net" should be a dedicated PPP dial circuit.

```
Config>net 9  
Circuit configuration  
MP config: 9>set calls out  
Dialout MP link net for this MP Net [0]? 7  
MP config: 9>
```

Protocols, BAP, BRS, WAN restoral, WAN reroute, and dial-on-demand are all run on the MP interface and not the PPP dial circuits.

## Configuring MP on PPP Serial Links

To configure MP on a PPP serial link, you enable MP on the interface using the **net** command. The link obtains its PPP configuration from the MP net.

### Example:

```
Config> net 1  
PPP 1 Config> enable MP  
  
Multilink PPP net for this Multilink PPP link [1]? 8  
NOTE: PPP configuration will be obtained from the Multilink PPP  
net. It is NOT necessary to configure PPP for this net!  
PPP 1 Config>
```

## Configuring MP on Layer-2-Tunneling Nets

To configure MP on an L2TP net, you enable MP through the L2TP encapsulator. You then must configure the same PPP negotiation parameters (see "Configuring L2TP" in *Using and Configuring Features*) for information about all nets joining in a single bundle.

### Example:



```
Config> feature layer-2-tunneling
Layer-2-Tunneling Config> encapsulator
PPP-L2TP Config> enable mp
```

NOTE: It IS necessary to configure PPP for this net! PPP negotiation parameters must be configured the same for all nets wishing to join the same Multilink PPP bundle.  
 PPP-L2TP Config>

## Configuring Multi-Chassis MP

To configure MP for Multi-Chassis MP, configure the DIALs feature for multi-chassis MP. The software prompts you for the endpoint discriminator to use.

### Example:

```
Config> feature DIALs
DIALs Config> set multi-chassis-mp
Enter Endpoint Discriminator to use from stacked group (0 for box S/N): 2345
DIALs Config>
```

The following example shows multichassis MP when ports RTR-2 and RTR-3 are in a hunt group.

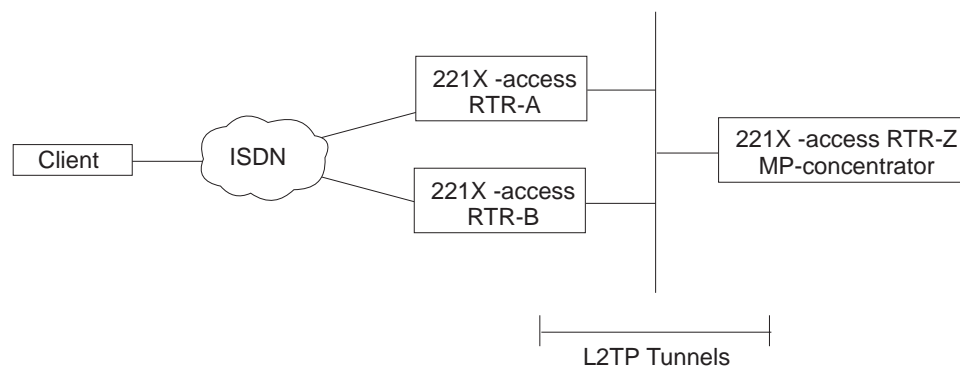 


Figure 29. Multichassis MP

Because there is a many-to-many relationship between access routers and MP-concentrators, all access routers (RTR-A, RTR-B) should be kept on a separate administrative domain from “MP concentrator” routers (RTR-Z). This applies if you want to use remote authentication (that is, RADIUS), you will need two RADIUS servers, one for access routers and one for MP concentrators. If you are using local-list, you are already using separate administrative domains.

In this scenario, you can choose to tunnel based on PPP username or “rhelm” name. It is less rigorous to use rhelm-based tunneling. The idea is to configure a tunnel-profile for RTR-Z on both RTR-A and RTR-B. No additional PPP users are required on these routers. RTR-Z would require 2 tunnel-profiles: one for RTR-A and one for RTR-B and a PPP username (in the form <username>@RTRZ) for each anticipated user. All dial-in circuits are configured on the “access” routers. The “MP concentrators” would have layer-2-tunneling devices and multilink-PPP devices.

At this point, we have “statically configured” multi-chassis MP. This means that a particular PPP username will always terminate MP on a preconfigured router as opposed to supporting an additional protocol which dynamically finds MP bundle heads and tunnels when needed. This network implementation will also help avoid client PPP negotiation idiosyncrasies when using different media types for each link

## Using MP

in a bundle (for example, tunnel one link and not the other). For example, DIALs clients cannot renegotiate LCP at any point. Also, Microsoft DUN clients do not fully support LCP renegotiation.

---

## Chapter 33. Configuring and Monitoring Multilink PPP Protocol (MP)

This chapter describes how to configure specific Multilink PPP interfaces in a device. The chapter includes:

- “Accessing the MP Configuration Prompt”
- “MP Configuration Commands for Multilink PPP Interfaces”
- “Monitoring MP Interface Status” on page 541
- “Accessing the MP Monitoring Commands” on page 541
- “Multilink PPP Protocol Monitoring Commands” on page 541

---

### Accessing the MP Configuration Prompt

To access the MP config> prompt:

1. Enter **talk 6** at the \* prompt.
2. Enter **net n**, where n is the number of the dial circuit or MP interface that you enabled to use MP.

**Note:** You are now configuring the Multilink PPP interface and not the PPP dial circuit that is part of the MP bundle.

---

### MP Configuration Commands for Multilink PPP Interfaces

Table 66 lists the commands available at the MP config> prompt.

*Table 66. MP Configuration Commands*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Disable	Disables the negotiation of bandwidth on demand.
Enable	Enables the negotiation of bandwidth on demand.
Encapsulator	Places you in the PPP config> prompt so you can change the data-link protocol configuration.
List	Displays the MP interface configuration parameters.
Set	Configures MP interface for inbound or outbound traffic. Also allows you to set the idle timeout and other MP and BAP parameters.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

#### Disable

Use the **disable** command to disable the negotiation of bandwidth-on-demand (BOD). Disabling BOD prevents the link from allocating additional bandwidth when necessary.

**Syntax:**

**disable** bod

## Configuring MP Enable

Use the **enable** command to enable the negotiation of BOD. Enabling BOD allows the link to allocate additional bandwidth when necessary.

### Syntax:

enable bod

## Encapsulator

Use the **encapsulator** command to access the PPP link-layer configuration for the Multilink PPP interface.

### Syntax:

encapsulator

### Example:

```
encapsulator
Point-to-Point user configuration
PPP config>
```

## List

Use the **list** command to display the current MP configuration.

### Syntax:

list

### Example:

```
list
Idle timer = 0 (fixed circuit)
Outbound calls = allowed
Dialout MP Link net = 7
Max fragment size = 750
Min fragment size = 375
Maximum number of active links = 2
Links associated with this MP bundle:
net number 7
net number 8
BAP enabled
Add bandwidth percentage = 90
Drop bandwidth percentage = 70
Bandwidth test interval (sec) = 15
```

### Idle timer

The setting of the idle timer for this circuit in seconds.

A setting of 0 indicates a fixed circuit. A nonzero setting configures a dial-on-demand MP circuit that will be brought down when the circuit is idle for the specified number of seconds. The circuit is reactivated when network traffic resumes.

### Outbound calls

Specifies whether the interface is configured to initiate outbound calls. If the interface cannot initiate outbound calls, this line is not displayed.

### Inbound calls

Specifies whether the interface is configured to initiate inbound calls. If the interface cannot accept inbound calls, this line is not displayed.

### Dialout MP link net

The dial circuit configured to place the first call for an outbound MP circuit.

### Max fragment size

Specifies the largest number of bytes of data a packet can contain before the packet is fragmented to be sent over MP links.

### Min fragment size

This is the minimum size of the fragments (in bytes) the software creates when a packet exceeds *Max fragment size*.

### Maximum number of active links

Specifies the configured maximum number of links in the MP virtual link (also known as *bundle*).

### Links associated with this MP bundle

Displays the links dedicated to this MP interface.

### BAP enabled

Specifies whether BAP is enabled on this interface.

### Add bandwidth percentage

The amount of bandwidth utilization at which the software will try to add a new link if BAP is enabled.

### Drop bandwidth percentage

The amount of bandwidth utilization at which the software will remove a link from the MP bundle if BAP is enabled.

### Bandwidth test interval

The time, in seconds, after which the software will check the bandwidth utilization to determine whether to add or drop a link from the bundle.

## Set

Use the **set** command to configure:

- The MP interface for inbound or outbound calls
- The idle timeout
- The MP parameters
- The BAP parameters

### Syntax:

```
set                bod parameters
                    calls
                    idle
                    mp parameters
```

### bod parameters

Prompts you to specify the BOD add and drop bandwidth percentages and the BOD test interval.

### Example:

```
set bod parameters
Add bandwidth % [90]? 80
Drop bandwidth % [70]? 50
Bandwidth test interval (sec) [15]? 25
```

## Configuring MP

### Add bandwidth %

The amount of bandwidth utilization at which the software will try to add a new link.

**Valid Values:** 1 to 99

**Default Value:** 90

### Drop bandwidth %

The amount of bandwidth utilization at which the software will remove a link from the MP bundle.

**Valid values:** 1 to 99

**Default value:** 70

### Bandwidth test interval (sec)

The time, in seconds, after which the software will check the bandwidth utilization to determine whether to add or drop a link from the bundle.

**Valid Values:** 10 to 200 seconds

**Default Value:** 15

**calls** Specifies whether this MP interface will initiate outbound calls, only accept outbound calls, or participate in both types of calls.

**Valid values:** inbound, outbound, or both

**Default value:** inbound

**Note:** If you specify outbound or both, the software will request the net number of the dedicated MP link that will place the first call.

### Example:

```
set calls outbound
Dialout MP link net for this MP net []? 4
```

**idle** Specifies the time period in seconds that an interface can have no protocol traffic at which the MP interface will end calls on all the links.

**Valid Values:** 0 to 65535

**Default Value:** 0

### mp parameters

Prompts you to enter the maximum and minimum fragment sizes and the maximum number of active links.

### Example:

```
set mp parameters
Max frag size [750]? 675
Min frag size [375]? 300
Max number of active links [2]? 4
```

### Max frag size

Specifies the largest of number of bytes of data a packet can contain before the packet is fragmented to be sent over MP links.

**Valid Values:** 100 to 3 000

**Default Value:** 750

### Min frag size

This is the minimum size of the fragments (in bytes) the software creates when a packet exceeds **Max fragment size**.

**Valid Values:** 100 to 3 000

**Default Value:** 375

**Max number of active links**

Specifies the configured maximum number of links in the MP virtual link (also known as **bundle**).

**Valid Values:** 1 to 64

**Default Value:** 2

## Monitoring MP Interface Status

To determine the status of all the MP interfaces in your device, use the **configuration** command in **talk 5** (see “Configuration” on page 135).

## Accessing the MP Monitoring Commands

To access the MP monitoring commands:

1. Enter **talk 5** at the \* prompt.
2. Enter **net n**, where **n** is the number of the MP interface that was created in talk 6 using **add device multilink-ppp** command.

## Multilink PPP Protocol Monitoring Commands

Table 67 shows the monitoring commands available for an MP interface.

*Table 67. MP Monitoring Commands*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
List	Displays BAP, BACP, BOD, and MP statistics, errors, and other information.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## List

Use the **list** command to display information about the MP interface including bandwidth allocation statistics.

**Syntax:**

```
list                bacp
                   bap
                   control bacp
                   control bod
                   control mp
                   mp
```

## Monitoring MP

**Note:** The examples that follow assume that the MP interface on this device is net number 6.

**bacp** The **list bacp** command lists the statistics for bandwidth allocation control packets which have been sent or received on this MP circuit.

**Example:**

```
PPP 6> list bacp
```

BACP Statistic	In	Out
-----	--	---
Packets:	6	8
Octets:	60	80
Rejects:	0	-

**bap** The **list bap** command lists the statistics for bandwidth allocation protocol packets which have been sent or received on this MP circuit.

**Example:**

```
PPP 6> list bap
```

BAP Statistic	In	Out
-----	--	---
Packets:	3	3
Octets:	22	37
Call Requests:	1	0
Call Response(ACK):	0	1
Call Resp(NK & FLLNK):	0	0
Call Response(Rej):	0	0
Callback Requests:	0	0
Callback Response(ACK):	0	0
Clbck Resp(NK & FLLNK):	0	0
Callback Response(Rej):	0	0
Drop Requests:	0	1
Drop Response(ACK):	1	0
Drop Resp(NK & FLLNK):	0	0
Drop Response(Rej):	0	0
Call Status(Success):	1	0
Call Status(Fail):	0	0

There are four different responses to a peer's request: ACK, NAK, FULL-NAK, and REJECT.

**ACK** Indicates the peer's request has been granted.

**NAK (NK)**

Indicates that the peer's request is supported but not desired at this time. Try again later.

**FULL-NAK (FLLNK)**

Indicates that the peer's request is supported but because of a resource condition, cannot be granted at this time. The request should not be sent again until the total bandwidth across the MP bundle changes.

**REJECT (REJ)**

Indicates that the request is not supported.

**control bacp**

The **list control bacp** command lists the current state of the BACP state-machine within PPP. The state information is identical to that produced for all of the PPP control protocols. Information about favored peer is also listed. Favored peer is used to alleviate BAP packet collisions (when both sides simultaneously initiate requests). During BACP negotiations, each side sends a magic-number and the one with the smallest magic number is the favored peer and should take precedence in the event of a collision. Typically, the call initiator will choose a **magic number** of X'1' and the call receiver will choose a magic number of X'FFFFFFF' establishing the call initiator as the favored peer.



```

PPP 6> list control bacp
BACP State:                Open
BACP Option                 Local                Remote
-----
Magic Number:              FFFFFFFF                1
Favorite Peer:             NO                    YES

```

### control bod

The **list control bod** command lists the current state of bandwidth-on-demand (BOD). This information includes BAP state, configured bandwidth-on-demand parameters for adding and subtracting bandwidth, current bandwidth, and information from the last bandwidth poll.

Valid BAP states are:

#### Closed

BACP is not opened – BAP is either not enabled or not supported by the peer.

**Ready** BACP is opened and there is no outstanding request being processed.

#### Call Req Sent

There is an outstanding call-request that was sent from the local machine.

#### Callback Req Sent

There is an outstanding callback-request that was sent locally.

#### Call Placed

As a result of a BAP request to add bandwidth, a call has been placed.

#### Retry Status Sent

The outgoing call failed to join the MP bundle, a retry status was sent.

#### No Retry Status Sent

The outgoing call either succeeded or exhausted all retries, a no retry status was sent.

#### Drop Req Sent

There is an outstanding drop request that was sent locally.

Configured bandwidth-on-demand parameters include add percentage, drop percentage, maximum number of active links in the MP bundle, and the bandwidth polling interval.

A BAP request to add a link to the bundle will be initiated if both the following conditions are met:

- The current number of active links is less than the configured maximum number of links.
- The bandwidth utilization across all links in the MP bundle is greater than the add percentage of the total available bandwidth for the MP bundle.

A BAP request to drop a link from the MP will be initiated if both the following conditions are met:

- The number of active links is greater than one.
- The bandwidth utilization across all links in the MP bundle is less than the drop percentage of the total available bandwidth for the MP bundle for the number of links minus one.

## Monitoring MP

Bandwidth can be polled only when BAP is in the ready state. The information listed from the previous poll will give you an idea of the bandwidth utilization across the MP bundle.

These two sets of information are displayed when a drop can be initiated:

- Bandwidth utilization across the entire bundle
- Bandwidth utilization across number of links minus one

To prevent thrashing, the second set of information is used when determining whether to drop a link.

### Example:

```
PPP 11>list control bod

BOD :                               Disabled
BAP :                               Disabled
Bandwidth test interval (sec):      15
Add bandwidth percentage:           90
Drop percentage (links-1):          70
Max # active links in MP bundle:    2
Time since last Bandwidth check (sec): 19
Currently:
  # active links in MP bundle:      0
  Total MP bandwidth (Bytes/sec):    0
Last Bandwidth Check:
  # active links in MP bundle:      0
  Avg Inbound bandwidth util (%):   0
  Avg Outbound bandwidth util (%):  0
```

### control mp

The **list control mp** command lists the current state of this MP circuit including the number of active links and bandwidth, the configured maximum number of links, and statistics for number of dropped packets. Dropped MP packets are classified into four categories:

**M** The packet is dropped because a sequence number has not been received and it is less than the minimum sequence number across all links' last received sequence number.

#### Timeout

The packet is dropped because a sequence number has not been received during a timeout period.

#### Q depth

The packet is dropped because the maximum queue depth was exceeded.

#### Seq order

The packet is dropped because the sequence number received was not expected. This occurs when MP receives delayed packet that it has already declared lost.

If a packet is dropped at the network layer, it can be either an M, Timeout, or Q depth packet. These counters are incremented appropriately when a packet is dropped.

```
PPP 11> list control mp
Current # active links in MP bundle:    0
Max # active links in MP bundle:       2
Total MP bandwidth (Bytes/sec):         0
Dropped Frags (lost packets):           0
Dropped Frags (timeout or receive overflow): 0
Dropped Frags (sequence not expected):  0

PPP 11>
```

**mp** The **list mp** command lists the statistics for packets which have been sent or received on this MP circuit. The number of bytes displayed is for pre-decompressed packets if compression was negotiated for the multilink PPP bundle.

```
PPP 6> list mp
```

MP Statistic	In	Out
-----	--	---
Bytes (Compressed):	61230	60259

## Monitoring MP

---

## Chapter 34. Configuring and Monitoring SDLC Relay

This chapter includes an overview of the Synchronous Data Link Control (SDLC) Relay function and describes its configuration and operational commands.

For further information on when to use DLSw SDLC versus SDLC Relay, refer to "Relationship to the SDLC Relay Function" in the "Using DLSw" chapter of *Protocol Configuration and Monitoring Reference Volume 1*.

The chapter includes the following sections:

- "Overview of SDLC Relay"
- "Basic Configuration Procedure" on page 549
- "Dynamic Reconfiguration" on page 549
- "Accessing the SDLC Relay Monitoring Environment" on page 557
- "SDLC Relay Monitoring Commands" on page 557
- "SDLC Relay Interfaces and the GWCON Interface Command" on page 560

---

### Overview of SDLC Relay

SDLC Relay is a function that transports SDLC packets encapsulated in IP over an IP connection. SDLC connections consist of a primary (polling) end point and a secondary (polled) end point. They are either point-to-point (one primary and one secondary device) or multipoint (one primary and several secondary devices). SDLC Relay maintains this design, except that routers forward the frames between the primary and secondary SDLC devices.

Figure 30 on page 548 shows an example of an SDLC Relay configuration with the primary SDLC device connected to two secondary SDLC control units.

## Configuring and Monitoring SDLC Relay

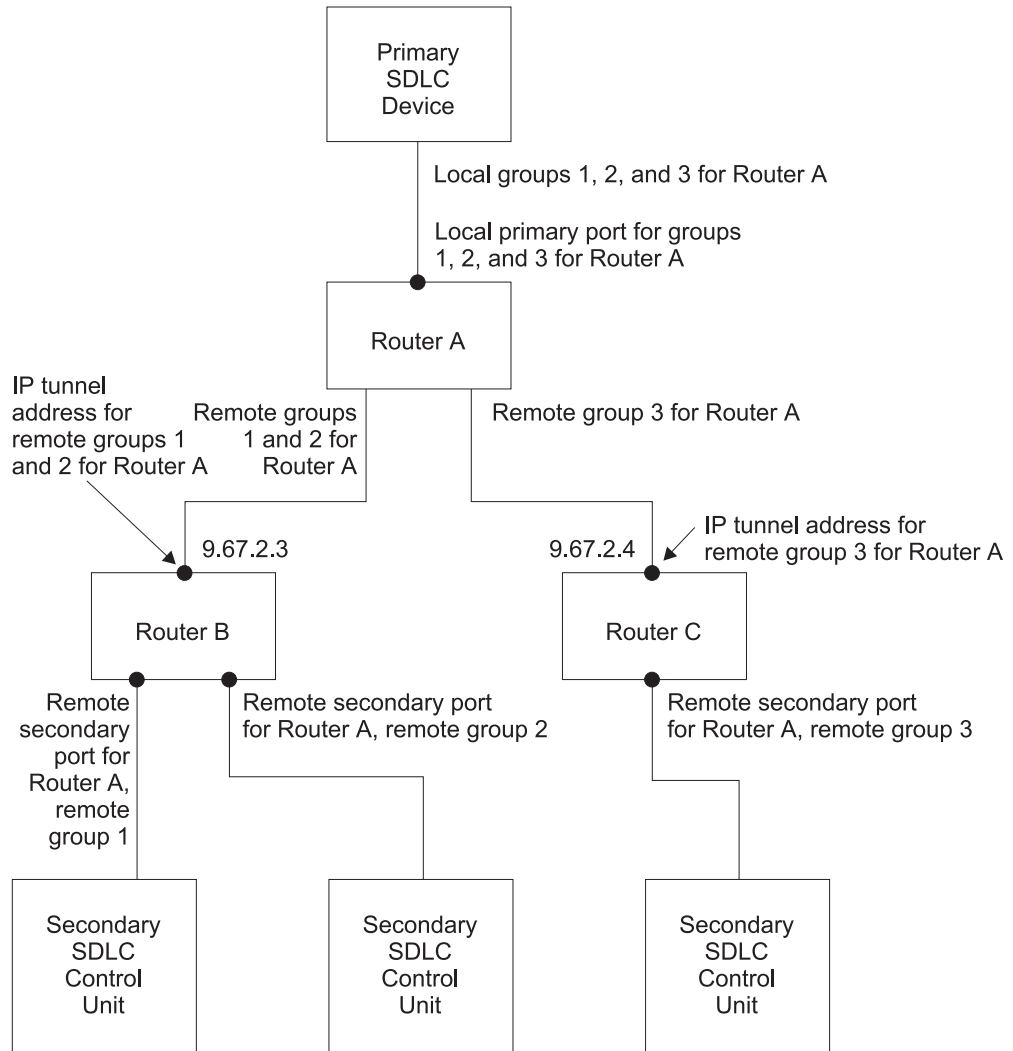 


Figure 30. Example of an SDLC Relay Configuration

As shown, the primary and secondary SDLC devices are each locally attached to a router. The routers communicate over an IP connection or tunnel and serve as a pipe between the SDLC end points. During configuration, you define the connections to the routers as virtual groups. You also assign arbitrary numbers to these groups to identify them for the router. A local group includes a local port, which is a router's local interface. Each local group has one corresponding remote group that consists of a remote port, which is the interface of the remote router, and the address of an IP tunnel that connects the local router to the remote router. The remote router is the local router's peer. For example, Router B and Router C are remote routers for Router A. The IP address of the tunnel must be the internal IP address of the remote router. Refer to the **set internal-IP-address** command in the *Protocol Configuration and Monitoring Reference Volume 2* for more information.

Each port is also identified as primary or secondary, depending upon the final end point of the connection. Within each group, one port is primary and one is secondary. Although the groups in the example have the same number for the local group and the corresponding remote group, this matching is not required. For example, for Router A, local group 2 includes the local primary port for local group 2. The corresponding remote group is also numbered 2, but it could have been identified by another number.

## Configuring and Monitoring SDLC Relay

The secondary SDLC control units connected to Router B in this example are not connected to the same line. This is an example of a virtual multipoint connection. If the SDLC control units are directly connected to the same line, that is considered a physical connection. Within one network, you can have both physical and virtual connections.

In a multipoint network, the secondary devices are identified by one-byte or two-byte station addresses. All SDLC relay routers within one SDLC network must use the same number of address bytes, either all one-byte or all two-byte. The routers identify the secondary SDLC control units dynamically. Based upon that knowledge, the routers can transmit frames for a particular device to that device. Broadcast frames continue to be broadcast from the sending device to all other devices in the network.

Only the half-duplex transmission mode is supported. This means that request-to-send (RTS) must be raised before each transmission. Clear-to-send (CTS) does not remain up permanently.

---

### Basic Configuration Procedure

This section outlines the minimum configuration steps required to get the SDLC Relay protocol up and running. For more explanation of the parameters, see “Overview of SDLC Relay” on page 547 and the descriptions of the configuration commands.

- *Add a local group.* You must configure the local group using the **add group** command.
- *Add a local port.* This identifies the interface that you are using for the local port. This also assures that no IP address is configured for the interface that you select. Use the **add local-port** command.
- *Add a remote port.* This identifies the port directly connected to the remote side of the serial line. Use the **add remote-port** command.

---

### Dynamic Reconfiguration

You can use the Talk 5 **reset interface#** and **activate interface#** commands to activate all SDLC Relay parameters that you have configured on an interface using Talk 6. Alternatively, you can restart or reload the router to make your new configuration changes take effect.

---

### Accessing the SDLC Relay Configuration Environment

To access the SDLC relay (SRLY) configuration environment:

1. At the Config> prompt, enter **set data-link srlly**.
2. Enter the interface number.
3. To configure the SRLY interface, enter the **network interface#** command. The SRLY *interface#* Config> prompt is displayed when **network interface#** is entered:

```
Config>network 2
SDLC Relay interface user configuration
SRLY 1 Config>
```

4. To configure the SRLY protocol parameters, enter the **protocol sdlc** command. The SDLC Relay config> prompt is displayed when **protocol sdlc** is entered:

## Configuring and Monitoring SDLC Relay

```
Config>protocol sdlc
SDLC Relay protocol user configuration
SDLC Relay config>
```

---

### SDLC Relay Configuration Commands

This section summarizes the SDLC Relay configuration commands. Both the **network** and **protocol** parameters for SDLC Relay are documented in this chapter.

The SDLC Relay configuration commands allow you to specify router parameters for interfaces transmitting SDLC Relay frames. Table 68 shows the commands for both the **network sdlc** and **protocol sdlc**.

Table 68. SDLC Relay Configuration Commands Summary

Command	Network SRLY	Protocol SDLC	Function
? (Help)	yes	yes	Lists all of the SDLC Relay configuration commands or lists the options associated with specific commands.
Add		yes	Adds groups, local ports, and remote ports.
Delete		yes	Deletes groups and ports.
Disable		yes	Disables groups and ports.
Enable		yes	Enables groups and ports.
List	yes	yes	Displays entire SDLC Relay and group specific configurations.
Set	yes		Sets the link parameters and remote station parameters.
Exit	yes	yes	Exits the SDLC Relay configuration environment and returns to the CONFIG environment.

### Add

Use the **add** command to add local groups, local ports, and remote ports.

#### Syntax:

```
add group local-group# group-type local-group-name
      local-port
      remote-port
```

**group** Defines a local group. A local group is identified by a number and a name.

#### Example: add group

```
Local group number: [1]?
Local group name []? CHICAGO-TO-MIAMI
(P)oint-to-Point or (M)ultipoint: [P]?
```

#### Local-group-number

The group number that you are designating to identify the local group.

#### Local-group-name

This is the name of this local group. You can use up to 32 ASCII characters to name the local group. If you do not provide a name, the default name of LOCAL-GROUP-*n* is used, where *n* is the local group number.



### Group-type

The group types are point-to-point or multipoint.

### local-port

Identifies the interface that you are using for the local port.

#### Example: add local-port

```
Local group number: [1]?  
Interface number: [0]? 3  
(P)rimary or (S)econdary: [S]? p
```

### Local group number

The local group number for the port.

### Network or interface number

The network or interface number of the router that designates the local port.

### Primary or Secondary

Designates the port type, primary (P) or secondary (S). The default is secondary.

### remote-port

Identifies the port directly connected to the serial line on the remote router.

#### Example: add remote-port

```
Local group number: [1]?  
IP address of remote router: [0.0.0.0]? 9.67.2.3  
Is the remote's upper group number limit 255 (current) or 15 (migration): [255]?  
Remote router group number: [1]?  
Does the connection use 2-byte station addressing: [Y]?  
(P)rimary or (S)econdary: [S]? s
```

### Group number

The local group number for the port.

### IP address of remote router

The internal IP address of the remote router. It identifies the IP tunnel that connects the router to the remote router.

### Upper group number limit

Support level of the remote router, defined by the upper limit of group numbers that you can use. The default is current, which is a limit of 255 and a range of 1 to 255.

### Remote router group number

The group number of the remote group to which this remote port belongs. The local and remote group number are not required to be the same number.

### Two-byte or one-byte station addressing

The number of bytes in the station address. The station address is the SDLC address of the secondary SDLC device. The default is two bytes.

### Primary or Secondary

Designates the port type, primary (P) or secondary (S). The default is secondary.

## Delete

Use the **delete** command to remove group numbers, local ports, and remote ports.

### Syntax:



## Configuring and Monitoring SDLC Relay

### port

Allows transfer of SDLC Relay frames to or from the specified local or remote port.

#### Example: enable port

Local group number: [1]?  
(L)ocal port or (R)emote port: [L]?

#### Group number

The group number of the group that includes the port.

#### Local or remote

Designates whether the port is local or remote.

## List (for network SRLY)

Use the **list** command to display the configuration of the SDLC Relay (SRLY) interface.

### Syntax:

**list**

### Example:

```
list
Maximum frame size in bytes = 2048
Encoding: NRZ
Idle State: Flag
Clocking: External
Cable Type: RS-232 DTE
Speed (bps): 0
Transmit Delay Counter: 0
```

#### Maximum frame size in bytes

Maximum frame size that can be sent over the link. The maximum frame size must be large enough to accommodate the largest frame and the 6 byte SRLY header.

#### Encoding

The transmission encoding scheme for the serial interface. Scheme is NRZ (non-return to zero) or NRZI (non-return to zero inverted).

#### Idle State

The data link idle state: flag or mark.

#### Clocking

The type of clocking: internal, external.

#### Cable Type

The serial interface cable type.

#### Speed (bps)

Lists the speed of the transmit and receive clocks.

#### Transmit Delay Counter

Number of flags sent between consecutive frames.

## List (for protocol SDLC Relay)

Use the **list** command to display the configuration of a specific group or of all groups.

## Configuring and Monitoring SDLC Relay

### Syntax:

```
list                all
                   group . . .
```

**all** Displays the configurations of all local groups.

### Example: list all

SDLC/HDLC Relay Configuration

```
Local group      = 1
Group Name       = CHICAGO-TO-MIAMI
Group Type       = MULTI           Enabled   = YES
Local port       = PRIMARY         Enabled   = YES
Interface        = 2
Remote port      = SECONDARY       Enabled   = YES
Remote group     = 1               Addressing = 2-BYTE
IP Address       = 9.67.2.3        Code level = CURRENT

Local group      = 2
Group Name       = CHICAGO-TO-RALEIGH
Group Type       = MULTI           Enabled   = YES
Local port       = PRIMARY         Enabled   = YES
Interface        = 3
Remote port      = SECONDARY       Enabled   = YES
Remote group     = 2               Addressing = 2-BYTE
IP Address       = 9.67.2.3        Code level = CURRENT

Local group      = 3
Group Name       = CHICAGO-TO-PITTSBURGH
Group Type       = PT-PT           Enabled   = YES
Local port       = PRIMARY         Enabled   = YES
Interface        = 4
Remote port      = SECONDARY       Enabled   = YES
Remote group     = 3               Addressing = 2-BYTE
IP Address       = 9.67.2.4        Code level = CURRENT
```

### Local group

Indicates the local group number.

### Group Name

Indicates the local group name.

### Group Type

Indicates the local group type, which is point-to-point or multipoint.

### Local port

Indicates whether the port is primary or secondary and its status, enabled or disabled.

### Interface

Indicates the network or interface number of the local port. This number matches the number displayed using the Config **list devices** command.

### Remote port

Indicates whether the remote port is primary or secondary and its status, enabled or disabled.

### Remote group

Indicates the group number of the remote group.

### Addressing

Indicates whether one-byte or two-byte addressing is used.

### IP address

Indicates the internal IP address of the remote router for this group. It identifies the IP tunnel that connects the router to the remote router.

### Code level

Indicates the code level, whether current or migration. The code level determines the range of numbers that can be used to identify the groups. Current code level has a range of 1 to 255; migration code level has a range of 0 to 15.

**group** *group#*  
Displays the configuration of a specified group.

## Set

Use the **set** command to configure the SRLY interface parameters.

### Syntax:

**set** cable  
clocking  
encoding  
frame-size  
idle  
speed  
transmit-delay

**cable** Sets the cable used on the serial interface. The options are:

- RS-232 DTE
- RS-232 DCE
- V35 DTE
- V35 DCE
- V36 DTE
- X21 DTE
- X21 DCE

A DTE cable is used when you are attaching the router to some type of DCE device (for example, a modem or a DSU/CSU).

A DCE cable is used when the router is acting as the DCE and providing the clocking for direct attachment.

### clocking *internal or external*

To connect to a modem or DSU, configure external clocking and select the appropriate DTE cable with the **set cable** command.

To connect directly to another DTE device, configure internal clocking, select the appropriate DCE cable with the **set cable** command, and configure the clocking/line speed with the **set speed** command.

**Default:** external

### Example:

```
set clocking internal
```

### encoding *nrz or nrzi*

Configures the SRLY interface's encoding scheme as NRZ (Non-Return to Zero) or NRZI (Non-Return to Zero Inverted). NRZ is the default.

## Configuring and Monitoring SDLC Relay

### Example:

```
set encoding nrz
```

### frame-size

Configures the maximum size of the frames that can be transmitted and received on the data link. If this value is set to a larger value than that specified with the add remote-secondary command, then this value is changed to reflect that maximum. The IBM 2210 generates an ELS message warning the user that this value is changing. The user will continue receiving this ELS message until it is changed in the SRAM configuration. Valid entries are shown in Table 69.

**Note:** The frame size must be large enough to accommodate the largest frame received plus a 15-byte SRLY header.

Table 69. Valid Values for Frame Size in Set Frame-Size Command

Minimum	Maximum	Default
128	18000	2048

### idle flag

Configures the transmit idle state for framing on the SRLY interface. The default is the flag option which provides continuous flags (7E hex) between frames.

The link will receive a flag idle transparently.

### idle mark

Configures the transmit idle state for framing on the SRLY interface. The mark option puts the line in a marking state (OFF, 1) between frames.

The link will receive a mark idle transparently.

### speed

For internal clocking, use this command to specify the speed of the transmit and receive clock lines.

For external clocking, this command does not affect the operation of the WAN/serial line.

#### Valid Values:

Internal Clocking: 2400 to 2 048 000 bps

External Clocking: 2400 to 6 312 000 bps

**Note:** If you want to use a line speed greater than 2 048 000 bps when external clocking is configured, you can only do this on:

- Interface 1
- Port 1 of an 4-port WAN concentration adapter
- Ports 1 and 5 of an 8-port WAN concentration adapter

All other WAN ports on the same adapter must be clocked at 64 000 bps or less.

### transmit-delay value

Allows the insertion of a delay between transmitted packets. This command ensures a minimum delay between frames so that it is compatible with older, slower serial devices at the other end. This value is specified as the number of flag bytes that should be sent between consecutive frames. The range is 0 - 15. The default is 0.

## Accessing the SDLC Relay Monitoring Environment

To monitor information related to the SDLC Relay interface, access the interface monitoring process by doing the following:

1. Enter the **status** command to find the PID for GWCON. (See page 9 for sample output of the **status** command.)
2. At the OPCON prompt, enter the **talk** command and the PID for GWCON. For example:

```
* talk 5
+
```

The GWCON prompt (+) is displayed on the console. If the prompt does not appear when you first enter GWCON, press **Return** again.

3. At the GWCON prompt, enter the **configuration** command to see the protocols and networks for which the router is configured. For example:

```
+ configuration
```

See page 135 for more sample output from the **configuration** command.

4. Enter the **protocol sdlc** command. For example:

```
+ prot sdlc
SDLC Relay>
```

The SDLC Relay prompt is displayed on the console. You can then view information about the SDLC Relay groups by entering the SDLC Relay monitoring commands.

## SDLC Relay Monitoring Commands

This section summarizes and then explains the SDLC Relay monitoring commands. The SDLC Relay monitoring commands allow you to view parameters for interfaces transmitting SDLC Relay frames. Some of these commands, such as **enable** and **disable** also take effect operationally, but they do not affect the configuration. The SDLC Relay> prompt is displayed for all SDLC Relay monitoring commands. Table 70 shows the commands.

Table 70. SDLC Relay Monitoring Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Clear-Port-Statistics	Clears SDLC Relay statistics for the specified port.
Disable	Temporarily suppresses groups and ports.
Enable	Temporarily turns on groups and ports.
List	Displays entire SDLC Relay and group specific configurations.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

### Clear-Port-Statistics

Use the **clear-port-statistics** command to discard the SDLC Relay statistics for all ports. The statistics include counters for packets forwarded and packets discarded.

**Syntax:**

## Configuring and Monitoring SDLC Relay

### clear-port-statistics

#### **clear-port-statistics**

Clears port statistics gathered since the last time you restarted the router or cleared statistics.

#### **Example:**

```
clear-port-statistics
Clear all port statistics? (Yes or No): Y
```

## Disable

Use the **disable** command to suppress data transfer for an entire group or a specific relay port. SRAM (static read access memory) does not permanently store the effects of the **disable** monitoring command. Therefore when you restart the router, the effects of this command are erased.

#### **Syntax:**

```
disable                group . . .
                        port
```

#### **group** *group#*

Suppresses transfer of SDLC Relay frames to or from the specified local group (group#).

**port** Suppresses transfer of SDLC Relay frames to or from the specified local or remote port.

## Enable

Use the **enable** command to turn on data transfer for an entire group or a specific local interface port. SRAM does not permanently store the effects of the **enable** monitoring command. Therefore when you restart the router, the effects of this command are erased.

#### **Syntax:**

```
enable                group . . .
                        port
```

#### **group** *group#*

Allows transfer of SDLC Relay frames to or from the specified local group (group#).

**port** Allows transfer of SDLC Relay frames to or from the specified local or remote port.

## List

Use the **list** command to display the configuration of a specific group or of all groups.

#### **Syntax:**

```
list                  all
                        group . . .
```

**all** Displays the configurations of all local ports.



## Configuring and Monitoring SDLC Relay

### Example:

```
list all
SDLC/HDLC Relay Configuration

Local group      = 1
Group Name       = CHICAGO-TO-MIAMI
Group Type       = MULTI                      Enabled    = YES
Local port       = PRIMARY                    Enabled    = YES
Interface        = 2
Remote port      = SECONDARY                  Enabled    = YES
Remote group     = 1                          Addressing = 2-BYTE
IP Address       = 9.67.2.3                   Code level = CURRENT

Local group      = 2
Group Name       = CHICAGO-TO-RALEIGH
Group Type       = MULTI                      Enabled    = YES
Local port       = PRIMARY                    Enabled    = YES
Interface        = 3
Remote port      = SECONDARY                  Enabled    = YES
Remote group     = 2                          Addressing = 2-BYTE
IP Address       = 9.67.2.3                   Code level = CURRENT

Local group      = 3
Group Name       = CHICAGO-TO-PITTSBURGH
Group Type       = PT-PT                      Enabled    = YES
Local port       = PRIMARY                    Enabled    = YES
Interface        = 4
Remote port      = SECONDARY                  Enabled    = YES
Remote group     = 3                          Addressing = 2-BYTE
IP Address       = 9.67.2.4                   Code level = CURRENT
```

### Local group

Indicates the local group number.

### Group Name

Indicates the local group name.

### Group Type

Indicates the local group type, which is point-to-point or multipoint.

### Local port

Indicates whether the port is primary or secondary and its status, enabled or disabled.

### Interface

Indicates the network or interface number of the local port. This number matches the number displayed using the Talk 6 **list devices** command or the Talk 5 **config** command.

### Remote port

Indicates whether the remote port is primary or secondary and its status, enabled or disabled.

### Remote group

Indicates the group number of the remote group.

### Addressing

Indicates whether one-byte or two-byte addressing is used.

### IP address

Indicates the internal IP address of the remote router for this group. It identifies the IP tunnel that connects the router to the remote router.

### Code level

Indicates the code level, whether current or migration. The code level determines the upper limit of the range of numbers that can be used to identify the groups.

## Configuring and Monitoring SDLC Relay

**group** *group#*

Displays the configurations of a specified group.

---

## SDLC Relay Interfaces and the GWCON Interface Command

While SDLC Relay interfaces have their own monitoring processes for monitoring purposes, the router also displays complete statistics for installed network interfaces when you use the **interface** command from the GWCON environment. (For more information on the **interface** command, refer to Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands.)

---

## Chapter 35. Using SDLC Interfaces

This chapter how to use the SDLC interface and includes the following sections:

- “Basic Configuration Procedure”
- “Configuring Switched SDLC Call-In Interfaces”
- “SDLC Configuration Requirements” on page 562

You enter SDLC configuration commands at the SDLC # Config> prompt, where # identifies the interface you specify with the network command. Changes made to the routers configuration do not take effect immediately, but become part of the router’s static configuration memory when it is restarted.

---

### Basic Configuration Procedure

This section outlines the minimum configuration required for SDLC to be usable by DLSw or by APPN.

Before beginning any configuration procedure, use the **list device** command from the config process to list the interface numbers of different devices. At the config prompt, select the interface you want to configure by entering either: **network interface number** or **n interface number**. If you need any further configuration command explanations, refer to the configuration commands described in this chapter.

---

### Configuring Switched SDLC Call-In Interfaces

A switched SDLC call-in interface allows a PU type 2.0 device to dial into a 2210 using a switched SDLC line, providing an additional connectivity option to your network. The interface is restricted to PU type 2.0 devices and can run DLSw only.

**Note:** You cannot configure APPN over a switched SDLC call-in interface.

To configure a switched SDLC call-in interface:

1. Configure a V.25bis base network:

```
Config> set data-link v25bis 2
Config> net 2
V25bis Config>
(configuration the V25bis net)
```

See “Chapter 39. Using the V.25bis Network Interface” on page 607 for more information about configuring V25bis.

**Note:** Any physical layer parameters such as the **encoding type** and **full** vs. **half duplex** are configured on the V.25bis interface and not on the Switched SDLC dial circuit interface.

2. Add a dial circuit device:

```
Config> add device dial
```

3. Set the data link for the dial circuit interface to SDLC. In this example, the dial circuit is interface 3.

```
Config> set data-link sdlc 3
```

4. Configure the dial circuit:

## Using SDLC Interfaces

```
Config> net 14
Dial circuit config> set net 2 1
Dial circuit config> encapsulator
sdslc config>
    (configure SDLC)
sdslc config> exit
Dial circuit config> exit
Config>
```

### 5. Configure DLSw:

```
Config> prot dsls
DLSw protocol user configuration
DLSw config> add sdslc
Interface # [0]? 3
SDLC Address or 'sw' (switched dial-in) [sw]? sw 2
Source MAC address [4000112402C1]? 4000003174d2
Source SAP in hex [4]?
Destination MAC address [000000000000]? 400000000004 3
Destination SAP in hex [0]? 4 4

XID0 block num in hex (0-0xfff) [0]? 017
XID0 id num in hex (0-0xffff) [0]? 00001
For a switched dial-in link station .....
- PU type is forced to be 2
- Configured XID block/id num is used to override
  fields in the XID0 from the SDLC station
  - if block/id set to zeroes, XID0 is not modified
  - otherwise configured fields are put into XID0
- Poll type is not configured (not used)
DLSw config> li sdslc all
Net Addr  Status  Source SAP/MAC  Dest SAP/MAC  PU  Blk/IdNum  PollFrame
3  FF(sw) Enabled  04 4000003174D2  04 400000000004  2  017/00001  TEST

DLSw config> exit
Config>
```

**1** You will not be able to set any other dial circuit parameters as the software will take defaults for all other parameter values. For information about the defaults, see “Encapsulator” on page 672.

**2** Specifying “sw” indicates that this is a switched SDLC call-in interface.

**3** The destination MAC address cannot be all 0s. If you specify or default to a value of 0, the software will prompt you for a valid address.

**4** The destination SAP cannot be 0. If you specify or default to a value of 0, the software will prompt you for a valid address.

See the “Using and Configuring DLSw” and the “Monitoring DLSw” chapters of *Protocol Configuration and Monitoring Reference Volume 1* for additional information about configuring DLSw.

---

## SDLC Configuration Requirements

In addition to the SDLC-specific configuration procedures and commands described in this chapter, you need to configure SDLC in the DLSw or APPN protocol. Only one protocol at a time, DLSw or APPN, may run over a given SDLC interface. In other words, link stations on a given SDLC interface cannot be divided between APPN and DLSw. If a DLSw configuration and an APPN configuration exist for the same SDLC interface, the first protocol to come active will own the SDLC interface.

---

## Chapter 36. Configuring and Monitoring SDLC Interfaces

This chapter describes the SDLC configuration and operational commands.

This chapter includes the following sections:

- “Accessing the SDLC Configuration Environment”
- “SDLC Configuration Commands” on page 564
- “Accessing the SDLC Monitoring Environment” on page 576
- “SDLC Monitoring Commands” on page 576
- “SDLC Interfaces and the GWCON Interface Command” on page 585
- “Statistics Displayed for SDLC Interfaces” on page 585

Changes made at the configuration command console (SDLC CONFIG>) become part of the SRAM configuration when you restart the router.

Conversely, SDLC monitoring commands entered within the SDLC monitoring process take effect immediately. However, changes made with monitoring commands do not become part of the router’s static configuration. When the router is restarted, the effects of the monitoring commands are overwritten by the router’s static configuration. Monitoring consists of these actions:

- Monitoring the protocols and network interfaces that are currently in use by the router
- Making real-time changes to the SDLC configuration without permanently affecting the SRAM configuration
- Displaying ELS (Event Logging System) messages relating to router activities and performance

---

### Accessing the SDLC Configuration Environment

Use the CONFIG process to change the configuration of the router. The new configuration takes effect when the router is restarted.

To enter the configuration process:

1. Enter **talk 6** (or **t 6**), at the OPCON (\*) prompt. This brings you to the CONFIG> prompt as shown in the following example:

```
MOS Operator Console
For help using the Command Line Interface, press ESCAPE, then '?'
* talk 6
CONFIG>
```

If the CONFIG> prompt does not appear immediately, press the **Enter** key again.

All SDLC configuration commands are entered at the SDLC config> prompt. You can use the GWCON t 5 (See “Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands” on page 131) environment to make dynamic configuration changes. However, these changes will disappear when the device is restarted.

2. At the Config> prompt, enter the **set data-link sdlc** command. When prompted, enter the name of the interface to associate with the SDLC device.

## Configuring SDLC Interfaces

```
Config>set data-link sdlc
Interface number [0]? 2
Config>
```

3. Next, enter the **network** command, plus the number of an SDLC interface that you entered earlier.

```
Config>network 2
SDLC 2 Config>
```

Refer to “Chapter 1. Getting Started” on page 3 for information related to the configuration environment.

---

## SDLC Configuration Commands

The SDLC configuration commands allow you to create or modify the SDLC interface configuration. This section summarizes and describes the commands you can issue from the SDLC Config> prompt within the network configuration console. Defaults for any command and its parameters are displayed on the console, they are enclosed in brackets immediately following the prompt.

**Note:** In addition to configuring SDLC using the commands described in this chapter, you also need to configure SDLC in the DLSw or APPN protocol.

2210 supports SDLC connections over RS-232, X.21, and V.35 serial interfaces. Table 71 lists SDLC configuration commands and their function.

*Table 71. SDLC Configuration Commands Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds an SDLC end station. If stations are not added specifically, they will be dynamically created with default values when DLSw or APPN activates devices.
Delete	Removes an SDLC end station.
Disable	Prevents connections to one of the SDLC link stations.
Enable	Allows connections to one of the SDLC link stations.
List	Displays configured information for one of the SDLC link stations or lines.
Set	Configures specific interface and link-station information.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Add

Use the **add** command to add an end station. The router is, by default the primary end station. If you do not use this command and if you configured an SDLC station in DLSw or in APPN, the end station is added for you. The software assigns the following defaults to the station:

- Maximum BTU is maximum allowable by the interface
- Tx and Rx Windows are 7 for MOD 8, 127 for MOD 128

If the defaults are satisfactory, you do not need to add SDLC stations.

**Syntax:**

**add** station

### Example:

```
add station
Enter station address (in hex) [C4]?
Enter station name [SDLC_C4]?
Include station in router as secondary group poll list (Yes or [No]):
Enter router as primary group poll address (0 means disable) [00]?
Enter max packet size [2048]?
Enter "A" for 2-WAY-ALTERNATING or "S" for 2-WAY-SIMULTANEOUS [S]?
Enter router as secondary link station poll pause [0]?
Enter receive window [7]?
Enter transmit window [7]?
```

### Enter station address

The station's SDLC address in the range 01 - FE.

### Enter station name

The name designation of the SDLC station (maximum characters is 8).

### Include station in router as secondary group poll list

Select whether or not to include this station in the secondary group poll list for this interface. The SDLC software supports the IBM 3174 group poll function for SDLC secondary station. You must add a group poll address using the **set link group-poll** command for this parameter to have an affect.

### Enter router as primary group poll address (0 means disable)

Specifies the group address that is to be polled. The Primary Group Poll Address is entered per station.

**Valid Values:** X'00' to X'FE', where 0 indicates not using group poll

**Default Value:** X'00'

### Enter max packet size

The maximum packet size that can be sent to or received from the remote link station. This value cannot be greater than that specified for the link. This value is configured with the **set link frame-size** command.

### Enter "A" for 2-WAY-ALTERNATING or "S" for 2-WAY-SIMULTANEOUS

Specifies whether the link station operates in a 2-way-simultaneous or 2-way-alternating mode. The default is inherited from the interface configuration.

### Enter router as secondary link station poll pause

Specifies the amount of time a secondary station will delay sending poll final after being polled.

#### Notes:

1. This value should be less than the poll timeout for the primary station.
2. Values other than 0 on multipoint links can cause poor response time.

**Valid Values:** 0 to 25.5 seconds in increments of 0.1 seconds

**Default Value:** 0

### Enter receive window

The maximum number of packets that the router can receive without sending an acknowledgement.

**Note:** Ensure that the receive window size is sufficiently large, because the router will disconnect the station if the window size is exceeded. Set the **receive window** to the maximum value for the configured





**list** link  
station name or all

**link** Displays the SDLC interface's configuration.

### Example:

```
list link
Link configuration for: LNK00001 (ENABLED)

Role:          PRIMARY          Type:          POINT-TO-POINT
Modulo:        8                Frame Size:    2048
Sc Gp Poll:    00              Dflt protcl:  ALTERNATE

Timers:  XID/TEST response:      2.0 sec
         SNRM response:          2.0 sec
         Poll response:          2.0 sec
         Inter-poll delay:       0.0
         Primary poll pause:     0.5 sec
         Dflt sec poll pause:    DISABLED
         RTS hold delay:         DISABLED
         Inactivity timeout:     30.0 sec

Counters: XID/TEST retry:      8
          SNRM retry:          6
          Poll retry:          10

SDLC 1 Config>
```

### Link configuration

The name and status of SDLC link station that are in the router's configuration.

**Role** The primary, secondary, or negotiable role for link stations that you configure using the **set link role** command.

**Type** The type of link, multipoint or point-to-point. IF **role** is *secondary*, a value of *multipoint* for this parameter causes RTS to be lowered when not transmitting.

### Duplex

Specifies the hardware capability of the line. For two-way simultaneous link management, *full duplex* hardware capability is required.

### Modulo

The sequence number range to use on the link: MOD 8 (0-7) or MOD 128 (0 - 127).

### Idle state

The bit pattern (FLAG or MARK) transmitted on the line when the interface is not transmitting data.

**Speed** The physical data rate of the interface. When the clocking is internal, this is the data rate generated by the internal clock. This parameter has no effect for externally clocked lines.

### Group Poll

Address used for the group poll feature. Secondary stations having group inclusion coded as *yes* will respond to unnumbered polls received from this address. This address must be non-zero for the group poll feature to be in effect for any secondary stations under this link. Each secondary station will still have a specific station address in addition to the group address.

**Cable** Specifies the type of cable in use (RS-232, V.35, V.36, or X.21).

### Encoding

Configures the SDLC transmission encoding scheme as NRZ (Non-Return to Zero) or NRZI (Non-Return to Zero Inverted).

## Configuring SDLC Interfaces

### Clocking

Interface clocking, external or internal.

### Frame Size

The maximum frame size that can be sent over the interface.

### Timers:

All the timers listed below have a 100ms resolution.

### XID/TEST resp.

The time to wait for an XID or TEST response message before retransmitting the XID or TEST frame. A value of 0 indicates that the router will not delay the retry past its next poll list turn.

### SNRM response

The maximum time to wait for a UA response message before the station retransmits SNRM(E).

### Poll response

The maximum time to wait for a response from any polled station before retrying.

### Inter-poll delay

The amount of time the router (with a primary role) waits after receiving a response, before polling the next station.

**Note:** Primary Poll Pause is the preferred poll timer. Inter-Poll Delay causes end user response time problems. See page 572 for more information about primary poll pause.

### RTS hold delay

The amount of time that the primary router waits before dropping RTS low after the transmission of a frame. The RTS hold delay parameter is specific to half-duplex and secondary multipoint operation.

### Interframe delay

Specifies an amount of time to inject flags between frames. The maximum value of 120 injects about 15 flags between frames for a 9600 baud line.

### Inactivity timeout

For idle NRM/E secondary stations, sets the time after which the interface changes the station to its recovery state. A 0 (zero) causes the station to remain idle indefinitely.

### Counters:

#### XID/TEST retry

The maximum number of times the router sends an XID or TEST frame without receiving a response before timing out. A value of 0 indicates that the router will retry indefinitely.

**SNRM** The maximum number of times the router will send an SNRM(E) frame without receiving a response before timing out. A value of 0 indicates that the router will retry indefinitely.

#### Poll retry

The maximum number of times the router polls the station without receiving a response before timing out. A value of 0 indicates that the router will continue to retry indefinitely.

## Configuring SDLC Interfaces

**Note:** Physical layer parameters such as **duplex type**, **speed**, **cable type**, **encoding**, **clocking**, and **inter-frame delay** do not apply for SDLC dial circuit interfaces and are not displayed by the **list link** command.

**station** *all or address or link station name*

Displays information for the specified SDLC link station or for all link stations.

### Example:

```
list station c1
Addr-A/S      Name      Status      Max BTU      Rx Window      Tx Window      Secondary Poll Pause      Primary GP Addr
(Sec Gp)
-----
C1   A SDLC_C1   ENABLED      2048         7              7              0.0 sec         00
```

### Example:

```
list station all
Addr-A/S      Name      Status      Max BTU      Rx Window      Tx Window      Secondary Poll Pause      Primary GP Addr
(Sec Gp)
-----
C1   A SDLC_C1   ENABLED      2048         7              7              0.0 sec         00
C2   A SDLC_C2   ENABLED      2048         1              7              0.0 sec         00
```

### Address

The address of the SDLC link station. The address in parentheses is the "router as secondary" Group Address of the interface which is used by the station if the station has group inclusion set, link is secondary, and the secondary group address is non-zero.

**Name** The character string name designation of SDLC link station.

### Status

The status of the SDLC link station, ENABLED or DISABLED.

### Max BTU

The frame size limit of the station. This frame size must not be larger than the maximum Basic Transmission Unit (BTU) packet size configured with the **set link frame-size** command.

### Rx Window

The size of the receive window.

### Tx Window

The size of the transmit window.

## Set

Use the **set** command to configure specific information for one or all SDLC link stations.

### Syntax:

```
set link
                                     cable*
                                     clocking*
                                     duplex* . . .
                                     encoding* . . .
                                     frame-size
                                     group poll* ...
                                     idle* . . .
```

## Configuring SDLC Interfaces

inactivity ...  
inter-frame delay\*  
modulo . . .  
name  
poll . . .  
role\* . . .  
rts-hold  
snrn  
speed\*  
type\* . . .  
xid/test  
station  
address. . .  
group-inclusion  
gp-address-prim  
max-packet  
name  
protocol  
recieve-window  
secondary-phase  
transmit-window

**\*Note:** These commands are not available for SDLC dial circuit interfaces.

### **link cable** *type*

Sets the cable connected to this interface. The options are V.36 and the following DCE and DTE types: RS-232, V.35, and X.21.

A DTE cable is used when you are attaching the router to some type of DCE device (for example, a modem or a DSU/CSU).

A DCE cable is used when the router is acting as the DCE and providing the clocking for direct attachment.

### **link clocking** *internal or external*

To connect to a modem or DSU, configure external clocking and select the appropriate DTE cable with the **set link cable** command.

To connect directly to another DTE device, configure internal clocking, select the appropriate DCE cable with the **set link cable** command, and configure the clocking/line speed with the **set link speed** command.

**Default:** external

### **link duplex** *full or half*

Configures the SDLC line for *full-duplex* or *half-duplex* signalling.

*Half-duplex* means that the 2210 raises RTS and expects to see CTS before it will transmit data. *Full-duplex* means that the 2210 does not wait for CTS to be raised before it transmits data.

## Configuring SDLC Interfaces

**Note:** The duplex type does not control how SDLC operates at the SDLC protocol level (two-way simultaneous or two-way alternating).

### link encoding *nrz* or *nrzi*

Configures the SDLC transmission encoding scheme as NRZ (Non-Return to Zero) or NRZI (Non-Return to Zero Inverted). NRZ is the default.

### link frame-size

Configures the maximum size of the frames that can be transmitted and received on the data link. Valid entries are shown in Table 72.

Table 72. Valid Values for Frame Size in Link Frame-Size Command

Minimum	Maximum	Default
128	18000	2048

Set the link frame size greater than or equal to the maximum packet size that you configured with the **set station xxx max packet** command. Otherwise, the router automatically resets the maximum packet size to the link frame size and issues the following ELS message:

```
SDLC.054: nt 3 SDLC/0 Stn xx-MaxBTU too large for Link adjusted (4096->2048)
```

### Example: set link frame-size

```
Frame size in bytes (128 - 18000)[2048]?
```

### link group-poll

Sets a group poll address for router as secondary stations on the link. The SDLC software supports the IBM 3174 group poll function. Use the **add station** or the **set station group inclusion** command to include a station in the group poll list.

### Example:

```
set link group-poll
Enter group poll address router as secondary (in hex) [00:]?f3
Group poll support enabled
```

### link idle flag

Configures the transmit idle state for SDLC framing. The default is the flag option which provides continuous flags (7E) between frames.

### Example: set link idle flag

The link will receive a flag idle transparently.

### link idle mark

Configures the transmit idle state for SDLC framing. The mark option puts the line in a marking state (OFF, 1) between frames.

### link inactivity *#-of-seconds*

For idle NRM/E secondary stations, sets the time after which the interface changes the station to its recovery state. The range is 0 to 7200 seconds. The default is 30. A 0 (zero) causes the station to remain idle indefinitely.

### Example:

```
set link inactivity
Enter secondary link station inactivity timeout :[30.0]?
```

### link inter-frame delay

Allows the insertion of a delay between transmitted packets. This command ensures a minimum delay between frames for compatibility with older, slower serial devices at the other end. This parameter is the amount of time between frames.

**Valid values:** 0 to 120

## Configuring SDLC Interfaces

**Default value:** 0

**Example:**

```
set link inter-frame
Transmit Delay Counter [0]?
```

### link modulo 8 or 128

Specifies the sequence number range to use on the link: MOD 8 (0-7) or MOD 128 (0 - 127). Default is MOD 8.

**Note:** When you change this value, the window sizes become invalid. Use the **set station** command to change the receive window and transmit window sizes. Valid window sizes are 0 through 7.

Also, when **link modulo** is 128, a SNRME rather than a SNRM is used at connection start-up and supervisory frame headers are expanded by an additional byte.

### link name

Establishes a character string for the link that you are configuring. This parameter is for informational purposes only.

**Example:**

```
set link name
Enter link name: [LINK_0]?
```

### link poll delay

Sets the time delay between each poll that is sent over the interface. **link poll delay** is less preferred than **link poll ppause**. **link poll delay** puts a delay between every poll, and thus causes response time problems even when the link is lightly utilized. If **link poll ppause** is set > 0, then **link poll delay** must be set to 0.

**Example:**

```
set link poll delay
Enter delay between polls [0]?
```

You can also use the t 5 command set link poll ppause to set **primary poll pause**.

### link poll ppause

Sets the primary poll pause.

This parameter determines the minimum time to restart the polling cycle. For example, if there are 5 stations on a multi-dropped link and all 5 station are polled in 0.2 seconds and PPAUSE is set to 0.5 seconds, then the poll of the first station will wait 0.3 more seconds. If data had been received from some stations, then the time to complete the polling of all 5 station probably would have taken longer than 0.5 seconds and the poll of the first station would not have been delayed.

**Example:**

```
set link poll ppause
Enter delay between polls [0.5]?
```

### link poll retry

Sets the number of times the interface retries to poll the secondary SDLC link station before it closes the connection.

**Example:**

```
set link poll retry
Enter poll retry count (0 = forever) [10]?
```

### link poll timeout

Sets the amount of time the interface waits for a poll response before timing out.

#### Example:

```
set link poll timeout
Enter poll timeout [2.0]?
```

### link role *primary or secondary or negotiable*

Configures the interface as an SDLC primary, secondary, or negotiable link station (default is primary).

#### Notes:

1. For DLSw, **negotiable** uses X'FF' (broadcast address) for the initial poll. When using broadcast address to negotiate the role, the link initially uses a default SDLC configuration and then resolves to a configured station if the specific address matches. When **primary** is the link role, the link performs an initial poll to a specific address.
2. For APPN point-to-point or negotiable, the broadcast address is used for the initial poll. For primary multipoint, the specific address is used.
3. For switched SDLC, the device must be primary, so **link role type** is not configurable for SDLC dial circuit interfaces.

### link rts-hold

The time to hold Request-to-Send (RTS) high after transmitting a frame. This setting is for half-duplex mode and has no effect in full-duplex mode. When the router is primary, this time is used for HDX or secondary multipoint.

#### Example:

```
set link rts-hold
Enter RTS hold duration after transmit complete [0.0]?
```

### link snrm *timeout or retry*

Configures the following SNRM(E) information for primary stations:

#### timeout

The time to wait for an Unnumbered Acknowledgements (UA) response before retransmitting an SNRM(E).

**retry** The number of times to retransmit an SNRM(E) without receiving a response before giving up.

#### Example:

```
set link snrm timeout
Enter SNRM response timeout [2.0]?
```

#### Example:

```
set link snrm retry
Enter SNRM retry count (0=forever) [6]?
```

### link speed

For internal clocking, use this command to specify the speed of the transmit and receive clock lines.

For external clocking, this command does not affect the operation of the WAN/serial line.

#### Valid Values:

## Configuring SDLC Interfaces

Internal Clocking: 2400 to 2 048 000 bps

External Clocking: 2400 to 6 312 000 bps

**Note:** If you want to use a line speed greater than 2 048 000 bps when external clocking is configured, you can only do this on:

- Interface 1
- Port 1 of an 4-port WAN concentration adapter
- Ports 1 and 5 of an 8-port WAN concentration adapter

All other WAN ports on the same adapter must be clocked at 64 000 bps or less.

### Example:

```
set link speed  
Line Speed [64000]?
```

### link type *multipoint or point-to-point*

Configures the SDLC link to either a multipoint link or a point-to-point link. If the router is secondary, this parameter determines whether RTS is controlled.

**Note:** For switched SDLC, the link is always point-to-point, so **link type** is not configurable for SDLC dial circuit interfaces.

### link xid/test *timeout or retry*

Configures the following XID/test information for primary stations:

#### timeout

The maximum amount of time to wait for an XID or TEST frame response before retransmitting the XID or TEST frame.

#### retry

The maximum number of times an XID or TEST frame is resent before giving up. A 0 (zero) causes the router to retry indefinitely.

### remote-secondary *address or link\_station\_name address <argument>*

Changes the remote station's SDLC address in the range 02 - FE.

**Example:** `set remote-secondary SDLC_C1 address ce`

### station *address or name address*

Changes the station's SDLC address in the range 01 to FE.

### Example:

```
set station c1 address  
Enter station address (in hex) [C1]?
```

### station *address or link\_station\_name group-inclusion no or yes*

For SDLC secondary stations, set whether to include this station in the group poll list for this link. For this to be effective, add a secondary group poll address using the **set link group-poll** command.

**Example:** `set station c1 group-inclusion yes`

### station *gr-address-prim*

Specifies the router as primary group address that is to be polled. A specific address cannot also be used as a group address.

**Valid Values:** X'00' to X'FE', where X'00' indicates not using group poll

**Default Value:** X'00'

### station *address or name max-packet*

The maximum size of the packet that the station can receive (default:



## Configuring SDLC Interfaces

2048). Do not set the maximum packet size larger than the link frame size that is configured with the **set link frame-size** command; if you do, the router automatically resets the maximum packet size to the link frame size and issues the following ELS message:

```
SDLC.054: nt 3 SDLC/0 Stn xx-MaxBTU too large for Link adjusted (4096->2048)
```

### Example:

```
set station c1 max-packet
Enter max packet size [2048]?
```

### station *address or name* name

The name of the SDLC station.

### Example:

```
set station c1 name
Enter station name [SDLC_C1]?
```

### station protocol

Defines whether the station runs as 2-way-alternating (TWA) or 2-way-simultaneous (TWS).

**Note:** TWS requires full-duplex hardware.

### station *address or name* receive window

The maximum number of frames the router can receive before sending a response. The range is 1 to 7. The default is 7.

### Example:

```
set station c1 receive-window
Enter receive window [7]?
```

**Note:** Ensure that the receive window size is sufficiently large, because the router will disconnect the station if the window size is exceeded. Set the **receive window** to the maximum value for the configured modulo.

### station secondary-pause

Specifies the amount of time the secondary station will delay sending poll final after being polled.

### Notes:

1. This value should be less than the poll timeout for the primary station.
2. Values greater than 0 on multipoint links can cause poor response time.

**Valid Values:** 0 to 25.5 seconds in increments of 0.1 seconds. A value greater than 0 is most useful on TWS point-to-point links since it allows both directions to send at the same time.

**Default Value:** 0

### station *address or name* transmit-window

The maximum number of frames the router can transmit before receiving a response frame. The range for MOD 8 is 1 to 7. The range for MOD 128 is 8 to 127.

### Example:

```
set station c1 transmit-window
Enter transmit window [7]?
```

---

### Accessing the SDLC Monitoring Environment

The monitoring environment is the GWCON process. To enter the GWCON process:

1. Enter **talk 5** (or **t 5**) at the OPCON (\*) prompt. This brings you to the GWCON (+) prompt as shown in the following example:

```
MOS Operator Console
For help using the Command Line Interface, press ESCAPE, then '?'
* talk 5
+
```

2. Next, enter the **network #** command using the number that identifies the interface that you previously configured for the SDLC device.

```
+ network 2
SDLC Console
SDLC-2>
```

You enter all GWCON (Monitoring) commands at the + prompt.

Refer to “Chapter 1. Getting Started” on page 3 for information related to the monitoring environment.

---

### SDLC Monitoring Commands

This section summarizes and then explains the SDLC console and related commands. Use these commands to gather information from the database. Table 73 lists SDLC monitoring commands and their function.

*Table 73. SDLC Monitoring Commands Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds an SDLC link station
Clear	Clears the counters on the SDLC interface.
Delete	Dynamically removes an SDLC link station.
Disable	Disables connections to one SDLC link station.
Enable	Enables connections to one SDLC link station.
List	Displays SDLC link stations configurations and link station information.
Msgsz	Permits monitoring bytes in data not otherwise visible. Between 12 and 50 bytes for SDLC ELS messages 50 - 53 can be displayed.
Set	Configures specific interface and link station information.
Test	Tests the link between the router and the SDLC link station.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Add

Use the **add** command to add an end station. The router is, by default the primary end station. If you do not use this command and if you configured an SDLC station in DLSw or APPN, the end station is added for you.

#### Syntax:

**add** station

For an example and for additional information on the **add** command, see “Add” on page 564.

## Clear

Use the **clear** command to clear counters for the interface, for a station, or for all stations. Use the **list all stations** command to list stations.

**Syntax:** **clear** link  
station ...

**link** *name or address*

Clears the counters for an SDLC interface.

**station** *name or address or all*

Clears counters for a specific station or for all stations.

## Delete

Use the **delete** command to terminate an existing SDLC connection without affecting the SDLC configuration in SRAM. This command terminates any SDLC session that may be in progress on the link station. The router is considered the primary end station by default.

**Syntax:**

**delete** station *name or address*

## Disable

Use the **disable** command to disable connection establishment on one or all SDLC link stations without affecting the SDLC configuration in SRAM. The **disable** command also terminates any existing connection to the station.

**Syntax:** **disable** link  
station . . .

**link** Prevents connection on all configured SDLC link stations on the interface by terminating all connections.

**station** *name or address*

Prevents connection to the specified end station (link station name) by terminating any existing connection.

## Enable

Use the **enable** command to enable connection establishment with remote SDLC link stations without affecting the SDLC configuration SRAM.

**Syntax:**

**enable** link  
station . . .

**link** Allows subsystems (for example, DLSw) to use SDLC's facilities.

## Monitoring SDLC Interfaces

station *name or address*

Allows connections to the specified end station.

## List

Use the **list** command to display statistics specific to the data link layer and the interface.

### Syntax:

```
list                link configuration  
                    link counters  
                    station . . .
```

### link configuration

Displays information for all configured SDLC link stations on the interface.

For an example and for additional information on the **list** command, see “List” on page 566.

**link counters** Displays information for the SDLC counters since the last router restart or the last clear counters.

### I-Frames

Total number of Information frames received and transmitted.

### I-Bytes

Total number of Information bytes received and transmitted.

### Re-Xmit

Total number of frames that were retransmitted.

### UI-Frames

Total number of Unnumbered Information frames received and transmitted.

### UI-Bytes

Total number of Unnumbered Information bytes received and transmitted.

**RR** Total number Receive-Ready (RRs) received and transmitted.

**RNR** Total number Receive-Not-Ready (RNRs) received and transmitted.

**REJ** Total number of Rejects received and transmitted.

**UP** Unnumbered Polls (group poll) received and transmitted.

**station** *all or address or link station name*

Displays the status of the specified SDLC link station or all stations. The software displays an \* next to the stations that were not explicitly configured using the **add station** command but were added to the configuration because they were defined and activated in the protocol layer (DLSw or APPN).

Displays information for the specified SDLC link station (link station name) on the interface.

## Monitoring SDLC Interfaces

### Address

The address of the SDLC link station. The address in parentheses is the group address of the station. A (00) indicates that a group address is not defined.

**Name** The character string name designation of SDLC link station.

### Status

The status of the SDLC link station:

#### Enabled

Enabled, but not allocated

#### Idle

Allocated, but not in use

#### Connected

Connected

#### Disconnected

Disconnected

#### Connecting

Connection establishment in progress.

#### Discnectng

Disconnection in progress

#### Recovering

Attempting to recover from a temporary data link error.

### Max BTU

The frame size limit of the remote station. This frame size must not be larger than the maximum Basic Transmission Unit (BTU) packet size configured with the **set link frame-size** command. The default is 2048 bytes.

### Rx Window

The size of the receive window.

### Tx Window

The size of the transmit window.

### **station name or address counters**

Displays frame transmit and receive counts for the specified link station.

#### I-Frames

Number of information frames received and transmitted

#### I-Bytes

Number of information bytes received and transmitted

#### Re-Xmit

Number of frames retransmitted

#### UI-Frames

Number of Unnumbered Information frames received and transmitted

#### UI-Bytes

Number of Unnumbered Information bytes received and transmitted

## Monitoring SDLC Interfaces

### XID-Frames

Number of Exchange Identification frames received and transmitted

**RR** Number of Receive Ready frames received and transmitted

**RNR** Number of Receive Not Ready frames received and transmitted

**REJ** Number of Rejects received and transmitted

**TEST** Number of Test frames received and transmitted

**SNRM** Number of Set Normal Response Mode frames received and transmitted

**DISC** Number of Disconnect frames received and transmitted

**UA** Number of Unnumbered Acknowledgment frames received and transmitted

**DM** Number of Disconnected Mode frames received and transmitted

**FRMR** Number of Frame Reject frames received and transmitted

**UP** Unnumbered Polls (group poll) received and transmitted.

### Example:

```
SDLC-2> list link counters
-----
I-Frames  I-Bytes  Re-Xmit  UI-Frames  UI-Bytes
-----
Send      0         0         0         0
Recv      0         0         0         0

      RR      RNR      REJ      UP
      ----      ----      ----      ----
Send      0         0         0         0
Recv      0         0         0         0

SDLC-2> list station c1
Addr-A/S  Name      Status    Max BTU  Rx Window  Tx Window  Secondary Poll Pause  Primary GP Addr
-----
C1        A SDLC_C1  ENABLED   2048     7           7           0.0 sec  00
```

### Example:

```
SDLC-2> list station all

Addr-A/S  Name      Status    Max BTU  Rx Window  Tx Window  Secondary Poll Pause  Primary GP Addr
-----
C1        A SDLC_C1  ENABLED   2048     7           7           0.0 sec  00
C2        A SDLC_C2  ENABLED   2048     1           7           0.0 sec  00
```

### Example:

```
SDLC-2> list station c1 counters
-----
I-Frames  I-Bytes  Re-Xmit  UI-Frames  UI-Bytes  XID-Frames
-----
Send      9         384      0           0           0           6
Recv      29        42792    0           0           0           3

      RR      RNR      REJ      TEST      SNRM      DISC
      ----      ----      ----      ----      ----      ----
Send      598       0         0           0           1           0
Recv      587       0         0           0           0           0

      UA      DM      FRMR      UP
      ----      ----      ----      ----
Send      0         0         0           0
Recv      1         0         0           0
```

## Msgsz

Use the **msgsz** command to display between 12 and 50 bytes of SDLC ELS messages 50 - 53.

### Syntax:

**msgsz**

### Enter between 12 and 50 bytes

Specifies the number of bytes to be displayed. The default is 12 bytes.

## Set

Use the **set** command to dynamically configure specific information for one or all SDLC link stations without affecting the SRAM configuration. In the SDLC monitoring environment, the **set** command can be executed only on disabled links or stations. All time values are entered in seconds, with a 0.1 second resolution.

### Syntax:

```

set          link
              group poll* ...
              inactivity ...
              modulo . . .
              name
              poll . . .
              protocol . . .
              role* . . .
              rts-hold
              secondary-pause . . .
              snrm
              type* . . .
              xid/test
station
              address. . .
              group-inclusion
              gp-address-prim
              max-packet
              name
              protocol
              receive-window
              secondary-pause
              transmit-window

```

**\*Note:** These commands are not supported on SDLC dial circuit interfaces.

## Monitoring SDLC Interfaces

### link group-poll *address*

Sets a group poll address for secondary stations on the link. The SDLC software supports the IBM 3174 group poll function. Use the **add station** or the **set station group inclusion** command to include a station in the group poll list.

#### Example:

```
set link group-poll
Enter group poll address (in hex) [00:]?f3
Group poll support enabled
```

### link inactivity

For idle NRM/E secondary stations, sets the time after which the interface changes the station to its recovery state. The range is 0 to 7200 seconds. The default is 30. A 0 (zero) causes the station to remain idle indefinitely.

#### Example:

```
set link inactivity
Enter secondary link station inactivity timeout :[30.0]?
```

### link modulo

Dynamically changes the range of sequence numbers to be used on the data link without affecting the SRAM configuration. Modulo 8 specifies a sequence number range 0 - 7, and modulo 128 specifies 0 - 127. Default is 8.

**Note:** When you change this value, the transmit and receive window sizes become invalid. Use the **set station** command to change the receive-window and transmit-window sizes.

### link name

Dynamically changes the name of the link without affecting the SRAM configuration. A maximum of 8 characters can be entered. This parameter is for informational purposes only.

#### Example:

```
set link name
Enter link name: [LINK_0]?
```

### link poll delay or timeout or retry

Dynamically changes the following poll information without affecting the SRAM configuration.

**delay** Configures the delay between each poll that is sent over the interface.

#### timeout

Configures the amount of time the router waits for a poll response before timing out.

**retry** Configures the number of times the interface retries to poll the remote SDLC link station before it closes the connection.

#### Example:

```
set link poll delay
Enter delay between polls [0.2]?
```

### link protocol

Defines whether the station runs as TWA or TWS.

**Note:** TWS requires full-duplex hardware.



**link role** *primary, secondary, or negotiable*

Configures the interface as an SDLC primary, secondary, or negotiable link station. The default is primary. Use of this command does not affect the SRAM configuration.

**Notes:**

1. For DLSw, **negotiable** uses X'FF' (broadcast address) for the initial poll. When using broadcast address to negotiate the role, the link uses a default SDLC configuration. When **primary** is the link role, the link performs an initial poll to a specific address.
2. For APPN point-to-point or negotiable, the broadcast address is used for the initial poll. For primary multipoint, the specific address is used.
3. For switched SDLC, the device must be primary, so **link role type** is not configurable for SDLC dial circuit interfaces.

**link rts-hold**

Dynamically changes the time to hold Request to Send (RTS) high after transmitting a frame without affecting the SRAM configuration. This setting is for half-duplex mode. This setting has no effect in full-duplex mode.

**Example:**

```
set link rts-hold
Enter RTS hold duration after transmit complete [0.0]?
```

**link secondary-pause**

Specifies the amount of time the secondary station will delay sending poll final after being polled.

**Notes:**

1. This value should be less than the poll timeout for the primary station.
2. Values greater than 0 on multipoint links can cause poor response time.

**Valid Values:** 0 to 25.5 seconds in increments of 0.1 seconds. A value of > 0 is most useful on TWS point-to-point links since it allows both directions to send at the same time.

**Default Value:** 0

**link snrm** *timeout or retry*

For primary stations, dynamically changes the following SNRM(E) information without affecting the SRAM configuration.

**timeout**

The time to wait for an Unnumbered Acknowledgment (UA) response before retransmitting an SNRM(E).

**retry** The number of times to retransmit an SNRM(E) without receiving a response before giving up.

**Example:**

```
set link snrm timeout
Enter SNRM response timeout [2.0]?
```

**link type** *multipoint or point-to-point*

Dynamically changes the SDLC link to either a multipoint link or a point-to-point link without affecting the SRAM configuration.

## Monitoring SDLC Interfaces

**Note:** For switched SDLC, the link is always point-to-point, so **link type** is not configurable for SDLC dial circuit interfaces.

### **link xid/test timeout or retry**

For primary stations, dynamically changes the following XID/test information without affecting the SRAM configuration.

#### **timeout**

The maximum amount of time to wait for an XID or TEST frame response before retransmitting the test frame.

**retry** The maximum number of times an XID or TEST frame is resent before giving up. A 0 (zero) causes the router to retry indefinitely.

**Note:** Examples for, and explanations of, the following parameters can be found in the SDLC configuration chapter at “Set” on page 569.

### **station address or name address**

Changes the station's SDLC address.

### **station group-inclusion**

For SDLC secondary stations, set whether to include this station in the group poll list for this link. For this to be effective, add a secondary group poll address using the **set link group-poll** command.

**Example:** **set station c1 group-inclusion yes**

### **station gp-address-prim**

Specifies the group address that is to be polled. A specific address cannot also be used as a group address.

**Valid Values:** X'00' to X'FE', where X'00' indicates not using group poll

**Default Value:** X'00'

### **station address or name max-packet**

Maximum size of packet that this station can receive.

### **station address or name name**

Name of the SDLC station.

### **station protocol**

Defines whether the station runs as TWA or TWS.

**Note:** TWS requires full-duplex hardware.

### **station address or name receive-window**

Maximum number of frames the router receives before an acknowledgement is required.

### **station secondary poll pause**

Specifies the amount of time the secondary station will delay sending poll final after being polled.

#### **Notes:**

1. This value should be less than the poll timeout for the primary station.
2. Values greater than 0 on multipoint links can cause poor response time.

**Valid Values:** 0 to 25.5 seconds in increments of 0.1 seconds. A value greater than 0 is most useful on TWS point-to-point links since it allows both directions to send at the same time.

**Default Value:** 0

**station *address or name* transmit-window**

Maximum number of frames router transmits before receiving a response frame.

## Test

Transmits a specified number of TEST frames to the specified station and waits for a response. Use this command to test the integrity of the connection. Press any key to cancel the test.

**Note:** Disable the specified link station before using this command

**Syntax:**

**test** *station name or address #frames-to-send  
frame-size*

**Example:**

```
test station c1
Number of frames to send [1]? 5
Frame length [265]?
Starting echo test -- press any key to abort
5 frames sent, 5 frames received, 0 compare errors, 0 timeouts
```

**Number of test frames to send**

Total number of frames to send.

**Frame length**

Length of frames to be sent. Frame length cannot be larger than the maximum frame length of the specified station.

The test may be aborted by pressing any key.

---

## SDLC Interfaces and the GWCON Interface Command

While the SDLC interface has a console process for operational purposes, the 2210 also displays complete statistics for installed interfaces when you use the **interface** command from the GWCON environment. (For more information on the interface command, refer to “Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands” on page 131.)

## Statistics Displayed for SDLC Interfaces

Using the **interface** command, you can display statistics for SDLC devices without entering the SDLC monitoring process. To do this, enter the **interface** command and an interface number at the + prompt.

**Nt** Indicates the interface number as assigned by software during initial configuration.

**Nt'** Indicates the interface number as assigned by software during initial configuration.

**Note:** For SDLC interfaces, the Nt' interface number is always the same as the Nt interface number.

## Monitoring SDLC Interfaces

**CSR** Indicates the memory location of the control status register for the SDLC interface.

**Self-test passed**

Indicates the total number of times the SDLC interface passed its self-test.

**Self-test failed**

Indicates the total number of times the SDLC interface was unable pass its self-test.

**Maintenance failed**

Indicates the number of maintenance failures.

The following parameters are displayed only if a cable is connected. The information displayed depends on the cable that is connected. Different parameters are displayed with other cables.

**Adapter cable**

Indicates the type of adapter cable that the level converter is using.

**V.24 circuit**

Indicates the circuits being used on the V.24.

**Nicknames**

Indicates the signals being used on the V.24 circuit.

**RS-232**

The EIA 232 (RS 232) circuit names.

**State** Indicates the state of V.24 circuits, signals, and pin assignments (ON or OFF).

**Line speed (configured)**

Indicates the currently configured line speed for the SDLC interface.

**Last port reset**

Indicates how long ago the port was last reset.

**Input frame errors**

Indicates the input frame error type (CRC error, too short, aborted, alignment, too long, DMA/FIFO overrun) and the total number of errors that have occurred.

**Output frame counters**

Indicates the total number of DMA/FIFO overruns and output aborts sent for output frames.

**Missed frame**

When a frame arrives at the device and there is no buffer available, the hardware drops the frame and increments the missed frame counter.

**L & F bits not set**

On serial interfaces, the hardware sets input-descriptor information for arriving frames. If the buffer can accept the complete frame upon arrival, the hardware sets both the Last and First bits of the frame, indicating that the buffer accepted the complete frame. If either of the bits is not set, the packet is dropped, the L & F bits not set counter is incremented, and the buffer is cleared for reuse.

**Note:** It is unlikely that the L & F bits not set counter will be affected by traffic.

# Chapter 37. Using Binary Synchronous Relay (BRLY)

This chapter describes how to use the Binary Synchronous Relay (BRLY) protocol. It includes the following sections:

- “BRLY Overview”
- “BRLY Considerations” on page 590

Binary Synchronous Relay (BRLY) is a protocol that encapsulates binary synchronous communications (BSC) traffic and transmits the traffic across IP connections. This function permits BSC traffic to flow between BSC peers as if a BSC connection exists between the peers. The following sections describe BRLY, some common configurations, and how to configure a BRLY scenario.

## BRLY Overview

BSC connections are similar to SDLC connections in that they consist of a primary end-point (polling) and a secondary end-point (polled). The connections can be either point-to-point, where the primary communicates with a single secondary, or multipoint, where the primary communicates with multiple secondaries. BRLY supports both physical and virtual multipoint connections.

In this implementation, the primary and secondary BSC devices are connected to routers which then connect to each other through IP. Figure 31 is a diagram of a point-to-point and a physical multipoint BRLY configuration. A physical multipoint connection is one where all of the secondary devices are on the same physical connection.

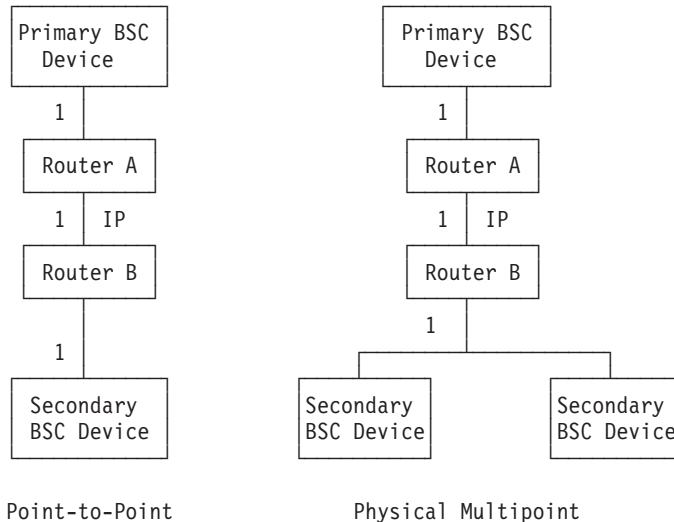 


Figure 31. Physical BSC Relay Configurations. The numbers in the figure represent the group numbers for BSC Relay.

A virtual multipoint connection connects a single BSC primary and multiple BSC secondaries by using different BRLY groups (different physical connections). Figure 32 on page 588 is a diagram of a virtual multipoint configuration.

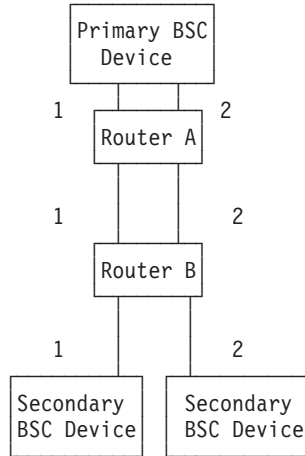 


Figure 32. Virtual BSC Relay Multipoint Configuration. The numbers in the figure represent the group numbers for BSC Relay.

BSC Relay also supports a combination of virtual and physical multipoint connections. Figure 33 is a diagram of a combination of virtual and physical multipoint connections.

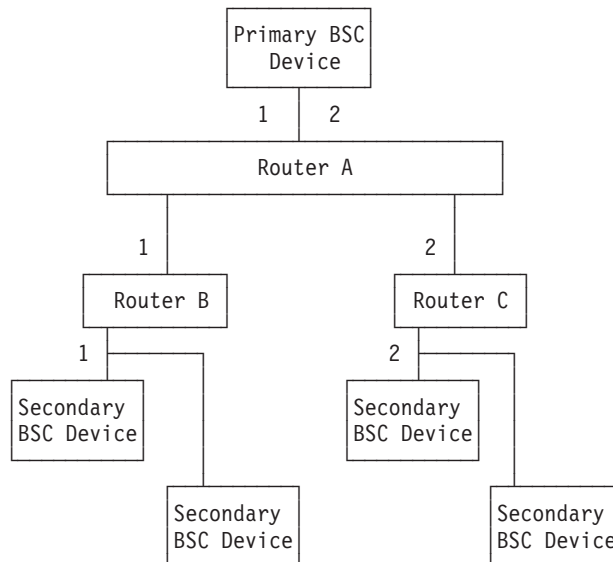 


Figure 33. Combination Virtual and Physical BRLY Multipoint Configuration. The numbers in the figure represent the group numbers for BSC Relay.

## Sample BRLY Configuration

The following examples illustrate configuring a BRLY network similar to the network in Figure 33. These examples use the following assumptions:

- Interface 1 on Routers A, B, and C have already been configured as BSC interfaces.
- The IP address for the Primary BSC Device's local port is 6.6.6.4.
- The IP address for the Router B's Secondary BSC devices local port is 6.6.6.1.
- The IP address for the Router C's Secondary BSC devices local port is 6.6.6.2.

```

Config>protocol brly
BSC Relay protocol user configuration
BRLY config>add group 1
Local group number: [1]?
Point to Point connection?(Yes or [No]):
BRLY config>add local
Local group number: [1]?
Interface number: [0]? 1
(P)primary or (S)econdary: [S]? p
Does this interface communicate with multiple remote groups [N]? y
BRLY config>add remote
Local group number: [1]?
IP address of remote router: [0.0.0.0]? 6.6.6.1
Remote router group number: [1]?
(P)primary or (S)econdary: [S]? s
Station address in hexadecimal (1 - FF): [1]? c1
BRLY config>li all

```

BSC Relay Configuration

Local Group	Group Type	Port Status	Net Number	Remote Group	Station Address	IP Address
1 (E)	MULTI	Local PRMRY (E) Remote SCNDRY (E)	1	1	C1	6.6.6.1

E = enabled, D = disabled

```

BRLY config>add group 2
Local group number: [1]? 2
Point to Point connection?(Yes or [No]):
BRLY config>add local
Local group number: [1]? 2
Interface number: [0]? 1
(P)primary or (S)econdary: [S]? p
Does this interface communicate with multiple remote groups [N]? y
BRLY config>add remote
Local group number: [1]? 2
IP address of remote router: [0.0.0.0]? 6.6.6.2
Remote router group number: [1]? 2
(P)primary or (S)econdary: [S]? s
Station address in hexadecimal (1 - FF): [1]? c5
BRLY config>li all

```

BSC Relay Configuration

Local Group	Group Type	Port Status	Net Number	Remote Group	Station Address	IP Address
1 (E)	MULTI	Local PRMRY (E) Remote SCNDRY (E)	1	1	C1	6.6.6.1
2 (E)	MULTI	Local PRMRY (E) Remote SCNDRY (E)	1	2	C5	6.6.6.2

E = enabled, D = disabled

Figure 34. BRLY Configuration for Router A (Commands entered at Router A)

**Notes:**

1. The configuration for group 1 starts at **1**.
2. The configuration for group 2 starts at **2**.

```

BRLY config>add group
Local group number: [1]?
Point to Point connection?(Yes or [No]):
BRLY config>add local
Local group number: [1]?
Interface number: [0]? 1
(P)primary or (S)econdary: [S]? s
Station address in hexadecimal (1 - FF): [1]? c1
BRLY config>add remote
Local group number: [1]?
IP address of remote router: [0.0.0.0]? 6.6.6.4
Remote router group number: [1]?
(P)primary or (S)econdary: [S]? p
BRLY config>1i all

```

#### BSC Relay Configuration

Local Group	Group Type	Port Status	Net Number	Remote Group	Station Address	IP Address
1 (E)	MULTI	Local SCNDRY (E) Remote PRMRY (E)	1	1	C1	6.6.6.4

E = enabled, D = disabled

Figure 35. BRLY Configuration for Router B (Commands entered at Router B)

```

BRLY config>add group
Local group number: [1]? 2
Point to Point connection?(Yes or [No]):
BRLY config>add local
Local group number: [1]? 2
Interface number: [0]? 1
(P)primary or (S)econdary: [S]? s
Station address in hexadecimal (1 - FF): [1]? c5
BRLY config>add remote
Local group number: [1]? 2
IP address of remote router: [0.0.0.0]? 6.6.6.4
Remote router group number: [1]? 2
(P)primary or (S)econdary: [S]? p
BRLY config>1i all

```

#### BSC Relay Configuration

Local Group	Group Type	Port Status	Net Number	Remote Group	Station Address	IP Address
2 (E)	MULTI	Local SCNDRY (E) Remote PRMRY (E)	1	2	C5	6.6.6.4

E = enabled, D = disabled

Figure 36. BRLY Configuration for Router C (Commands entered at Router C)

---

## BRLY Considerations

When configuring BRLY, keep the following in mind:



- Enabling BRLY will result in an increase of polling in the network which will reduce the total network throughput.
- BSC devices automatically disconnect if their inactivity timer expires. By default, this occurs after three seconds. An extremely busy network could result in BSC devices that disconnect frequently.



---

## Chapter 38. Configuring and Monitoring BSC Relay

This chapter describes the binary synchronous communications (BSC) Relay configuration and operational commands. It also includes a procedure for configuring a BSC interface.

The chapter includes the following sections:

- “Basic Configuration Procedure”
- “BSC Relay Configuration Commands”
- “BSC Relay Monitoring Commands” on page 601
- “BSC Relay Interfaces and the GWCON Interface Command” on page 605

---

### Basic Configuration Procedure

This section outlines a procedure to configure a BSC interface and the BSC Relay protocol. Refer to the configuration commands that are described in this chapter for further configuration information and explanation.

To configure a BSC relay interface and run BRLY over that interface:

1. Configure an interface as a BSC interface.
  - a. Enter **set data-link bsc** at the `Config>` prompt.
  - b. Enter the interface number when prompted.
  - c. Access the BSC interface configuration prompt:

```
Config>network 2
BSC interface user configuration
BSC 2 Config>
```
  - d. Display the current interface settings using the **list** command and change, if necessary, using the **set** command.
  - e. Repeat until you have configured all of the BSC interfaces you need.
2. Configure the BRLY protocol.
  - a. Access the BRLY protocol.

```
Config>protocol brly
BSC Relay protocol user configuration
BSC Relay config>
```
  - b. Add a group using the **add group** command.
  - c. Add a local port using the **add local-port** command.
  - d. Add a remote port using the **add remote-port** command. This identifies the port that is directly connected to the remote side of the serial line and specifies the IP address for the connection.
  - e. Repeat steps 2.b through 2.d until you have configured all of the groups, local ports, and remote ports needed.

---

### BSC Relay Configuration Commands

This section describes the BSC Relay configuration commands. This chapter describes both network and protocol parameters for BSC relay.

The BSC Relay configuration commands allow you to specify router parameters for interfaces that transmit BSC Relay frames. Restart the router to activate the

## Configuring BSC Relay (Talk 6)

configuration commands. Table 74 shows the commands for both the network BSC and protocol BRLY.

Table 74. BSC Relay Configuration Commands Summary

Command	Network BSC	Protocol BRLY	Function
? (Help)	yes	yes	Lists all of the configuration commands or lists the options associated with specific commands.
Add		yes	Adds groups, local ports, and remote ports.
Delete		yes	Deletes groups, local ports, and remote ports.
Disable		yes	Disables groups and ports.
Enable		yes	Enables groups and ports.
List	yes	yes	Displays entire BSC Relay, group-specific, and interface configurations.
Set	yes		Sets the link parameters and remote station parameters.
Exit	yes	yes	Exits the BSC Relay configuration environment and returns to the CONFIG environment.

## Add

Use the **add** command to add groups, local ports, and remote ports.

### Syntax:

```
add                group group#
                   local-port
                   remote-port
```

### **group** *group#*

Defines a primary to secondary connection. Each different connection requires a different group number.

#### **Example: add group**

```
Group number: [1]? 1
Group type: [multipoint]
```

#### **Group number**

The group number that you are designating for the group.

**Valid values:** 1 to 16

**Default value:** 1

#### **Group type**

Specifies the type of BSC connection this group supports.

**Valid values:** point-to-point or multipoint

**Default value:** multipoint

### **local-port**

Identifies the interface that you are using as the local port for a specific group. The local port is a connection to a BSC device that is connected directly to the 2210 you are configuring. The following example adds a primary local port.

#### **Example: add local-port**

```
Group number: [1]? 1
Interface number: [0]? 2
(P)rimary or (S)econdary:[S]? p
```

**Group number**

The group number for the port. This number must be configured previously using the **add group** command.

**Interface number**

The interface number of the router that designates the local port.

**Primary or Secondary**

Designates the port type, primary (P) or secondary (S).

**Default value:** S

**Station address character**

Specifies the character that the system displays for a secondary port. You will be prompted for this only if you configure the local port as a secondary.

**Valid values:** X'01' to X'FF'

**Default value:** None

**Note:** This value is used for display purposes only and identifies a group of secondaries.

**remote-port**

Identifies the IP address of the port that is directly connected to the serial line on the remote (peer) router. The following example shows the configuration of a remote port as a secondary.

**Example: add remote-port**

```
Group number: [1]? 1
IP address of remote router:[0.0.0.0]? 128.185.121.97
(P)primary or (S)econdary:[S]? s
Remote group number: [1]? 2
Station address character? cd
```

**Group number**

The group number for the port. This number must be configured previously using the **add group** command.

**IP address of remote router**

Identifies the IP address of the interface that communicates with the remote router.

**Primary or Secondary**

Designates the port type, primary (P) or secondary (S).

**Remote group number**

Specifies the group number for the remote port as it is defined at the remote router.

**Station Address Character**

Specifies the character that the system displays for a secondary port. You will be prompted for this only if you configure the local port as a secondary.

**Valid values:** X'01' to X'FF'

**Default value:** None

**Note:** This value is used for display purposes only and identifies a group of secondaries.

## Configuring BSC Relay (Talk 6)

### Delete

Use the **delete** command to remove groups, local ports, and remote ports.

#### Syntax:

```
delete                group group#  
                        local-port  
                        remote-port
```

**group** *group#*  
Removes a group (group#).

**Example: delete group 1**

**local-port** *group#*  
Removes the local port for the specified group.

**Example: delete local-port**

Group number: [1]? 2

#### Group number

The group number for the local port.

**remote-port**  
Removes the remote port for the specified group.

**Example: delete remote-port**

Group number: [1]? 1

#### Group number

The group number for the remote port.

### Disable

Use the **disable** command to suppress relaying for an entire relay group or a specific relay port.

#### Syntax:

```
disable                group group#  
                        port
```

**group** *group#*  
Suppresses transfer of BSC Relay frames to or from a specific local group.

**Example: disable group 1**

**port** Suppresses transfer of BSC Relay frames to or from a specific local or remote relay port.

**Example: disable port**

Group number: [1]? 2  
Local or Remote:[local]? remote

#### Group number

The group number of the port that you want to disable.

#### Local or Remote

Specifies whether to disable the local or remote port.

**Default value:** local

## Enable

Use the **enable** command to turn on data transfer for an entire relay group or a specific relay port.

### Syntax:

```
enable                group group#
                        port
```

### **group** *group#*

Allows transfer of BSC Relay frames to or from the specified group.

#### **Example: enable group 1**

**port** Allows transfer of BSC Relay frames to or from the specified local port.

#### **Example: enable port**

```
Group number: [1]? 2
Local or Remote: [local]? remote
```

#### **Group number**

The group number of the port that you want to enable.

#### **Local or Remote**

Specifies whether to enable the local or remote port.

**Default value:** local

## List (for network BSC)

Use the **list** command to display the configuration of a specific BSC interface. These commands are entered from the BSC *n* Config> prompt, where *n* is the number of the interface.

### Syntax:

```
list
```

### **Example:**

```
list
Maximum frame size in bytes: 2048
Encoding:                    NRZI
Idle State:                  Sync
Clocking:                    Internal
Cable type:                  V.35 DCE
Speed (bps):                 2048000
Code:                        ASCII
Checking algorithm:          LRC
Link EOT:                    No
Number of pairs of SYNs:     1
```

#### **Maximum frame size in bytes**

Maximum frame size that can be sent over the link. The maximum frame size must be large enough to accommodate the largest frame and the 15 byte BRLY header.

#### **Encoding**

The transmission encoding scheme for the serial interface. Scheme is NRZ (non-return to zero) or NRZI (non-return to zero inverted).

#### **Idle state**

The data link idle state: sync or mark.

## Configuring BSC Relay (Talk 6)

### Clocking

The type of clocking: internal, external.

### Cable type

The serial interface cable type.

### Speed (bps)

Lists the speed of the transmit and receive clocks.

**Code** The code type used by this device.

### Checking algorithm

The check character scheme for data.

### Link EOT

Specifies whether EOT transmissions are combined with poll and select transmissions when the transmissions occur back-to-back.

### Number of pairs of SYNs

The number of pairs of synchronization characters the system sends before any data.

## List (for protocol BRLY)

Use the **list** command to display the configuration of a specific group or of all groups. These commands are entered from the BSC Relay config> prompt.

### Syntax:

```
list                all
                   group group#
```

**all** Displays the configurations of all groups.

### Example: list all

#### BSC Relay Configuration

Local Group	Group Type	Port Status		Net Number	Remote Group	Station Address	IP Address
1 (E)	MULTI	Local	PRMRY (E)	1			
		Remote	SCNDRY (E)		1	C1	6.6.6.1
2 (E)	MULTI	Local	PRMRY (E)	1			
		Remote	SCNDRY (E)		2	C5	6.6.6.2

E = enabled, D = disabled

**Note:** The system does not display the remote port's net number at the local port as it is not part of the local group's configuration.

### Group Number

Indicates the group number and the status of the group, enabled (E) or disabled (D).

### Port Status

Indicates the type of port (local/remote primary/secondary) and its status, enabled (E) or disabled (D).

### Net Number

Indicates the interface number of the local port.

### Remote Group

The number of the group at the remote router.



### Address Character

The address character assigned to one secondary station.

### IP Address

Indicates the IP address of the remote port.

### group *group#*

Displays the configuration of a specified group.

## Set

Use the **set** command to configure the BSC interface parameters.

### Syntax:

```

set                cable
                    clocking [internal or external]
                    code [ebcdic or ascii]
                    check [CRC16, LRC or none]
                    encoding [nrz or nrzi]
                    eotlink [yes or no]
                    frame-size
                    idle [sync or mark]
                    speed bps
                    syns number
  
```

**cable** Sets the cable used on the serial interface. The options are:

- RS-232 DTE
- RS-232 DCE
- V35 DTE
- V35 DCE
- V36 DTE
- X21 DTE
- X21 DCE

Use a DTE cable when you are attaching the router to some type of DCE device (for example, a modem or a DSU/CSU).

A DCE cable is used when the router is acting as the DCE and providing the clocking for direct attachment.

### clocking [internal or external]

To connect to a modem or DSU, configure external clocking and select the appropriate DTE cable with the **set cable** command.

To connect directly to another DTE device, configure internal clocking, select the appropriate DCE cable with the **set cable** command, and configure the clocking/line speed with the **set speed** command.

**Default:** external

### code [ebcdic or ascii]

Specifies the code type that is used by this BSC device.

## Configuring BSC Relay (Talk 6)

**Default value:** ebcdic

### check [CRC16, LRC, or none]

Specifies the checking algorithm that is used by this BSC device. If *none* is specified, no checking algorithm is used. The data is passed through and if checking is done, it is done by the application.

**Default values:**

- If the code is EBCDIC, the default is cyclic redundancy check (CRC16).
- If the code is ASCII, the default is longitudinal redundancy check (LRC).

### encoding [*nrz* or *nrzi*]

Configures the BSC interface's encoding scheme as NRZ (Non-Return to Zero) or NRZI (Non-Return to Zero Inverted). NRZ is the default.

**Example:**

```
set encoding nrz
```

### eotlink [yes or no]

Specifies whether to combine EOT transmissions with poll and select transmissions when the transmissions occur back-to-back.

**Default value:** yes

### frame-size

Configures the maximum size of the frames that the system can transmit and receive on the data link. If this value is set to a value larger than the value specified with the **add remote-secondary** command, the system changes this value to reflect that maximum. The IBM 2210 generates an ELS message that warns the user. The user will continue receiving this ELS message until it is changed in the SRAM configuration. Valid entries are shown in Table 75.

**Note:** The frame size must be large enough to accommodate the largest frame that is received plus a 15-byte BRLY header.

Table 75. Valid Values for Frame Size in Set Frame-Size Command

Minimum	Maximum	Default
128	8190	2048

### idle [sync or mark]

Specifies which character the system sends in between BSC data transmissions.

**sync** Specifies that the BSC synchronizing character is sent. (See the **syms** parameter.)

**mark** Specifies that the all ones bits character (X'FF') is sent.

**Default value:** mark

### speed *bps*

For internal clocking, use this command to specify the speed of the transmit and receive clock lines.

For external clocking, this command does not affect the operation of the WAN/serial line.

**Valid Values:**

## Configuring BSC Relay (Talk 6)

Internal Clocking: 2400 to 2 048 000 bps

External Clocking: 2400 to 6 312 000 bps

**Note:** If you want to use a line speed greater than 2 048 000 bps when external clocking is configured, you can only do this on:

- Interface 1
- Port 1 of an 4-port WAN concentration adapter
- Ports 1 and 5 of an 8-port WAN concentration adapter

All other WAN ports on the same adapter must be clocked at 64 000 bps or less.

**syns** Specifies the number of pairs of SYN characters the system sends before any data. SYNs are the BSC synchronizing characters. (See the **idle** parameter.)

---

## Accessing the BSC Relay Monitoring Environment

To monitor information that is related to the BSC Relay protocol, access the interface monitoring process by:

1. At the OPCON prompt, enter the **talk** command and the PID for GWCON. For example:

```
* talk 5  
+
```

The system displays the GWCON prompt (+) on the console. If the prompt does not appear when you first enter GWCON, press **Return** again.

2. At the GWCON prompt, enter the **configuration** command to see the protocols and networks for which the router is configured. For example:

```
+ configuration
```

See page 135 for more sample output from the **configuration** command.

3. Enter the **protocol BRLY** command. For example:

```
+ prot brly  
BSC Re1ay>
```

The system displays the BSC Relay prompt on the console. You can then view information about the BSC Relay ports by entering the BSC Relay monitoring commands.

---

## BSC Relay Monitoring Commands

This section summarizes, and then explains the BSC Relay monitoring commands. The BSC Relay monitoring commands allow you to view parameters for interfaces that transmit BSC Relay frames. The system displays the BSC Re1ay> prompt for all BSC Relay monitoring commands. Table 76 shows the commands.

Table 76. BSC Relay Monitoring Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Clear	Clears BSC Relay statistics.
Disable	Suppresses groups and ports.

## Monitoring BSC Relay (Talk 5)

Table 76. BSC Relay Monitoring Commands Summary (continued)

Command	Function
Enable	Turns on groups and ports.
List	Displays entire BSC Relay and group specific configurations.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

## Clear

Use the **clear** command to discard the BSC Relay statistics for all ports. The statistics include counters for packets forwarded, and packets discarded. The command clears local and remote port statistics that is gathered since the last time you restarted the router or cleared statistics.

### Syntax:

**clear**

### Example:

```
clear
Clear all port statistics? (Yes or No): Y
```

## Disable

Use the **disable** command to suppress data transfer for an entire group or a specific relay port. SRAM (static read access memory) does not permanently store the effects of the **disable** monitoring command. Therefore when you restart the router, the effects of this command are erased.

### Syntax:

```
disable                group group#
                        port
```

**group** *group#*

Suppresses transfer of BSC Relay frames to or from a specific group.

**port** Suppresses transfer of BSC Relay frames to or from a specific local or remote port.

### Example:

```
disable port
Group number: [1]? 2
Local or Remote: [local]? remote
```

### Group number

Indicates the group number of the port that you want to disable.

### Local or Remote

Specifies whether to disable the local or remote port.

**Default value:** local

## Enable

Use the **enable** command to turn on data transfer for an entire group or a specific local interface port. SRAM does not permanently store the effects of the **enable** monitoring command. Therefore when you restart the router, the effects of this command are erased.

**Syntax:**

**enable** group *group#*  
port

**group** *group#*  
 Allows transfer of BSC Relay frames to or from the specified group.

**port** Allows transfer of BSC Relay frames to or from the specified local port.

**Example:**

```
enable port
Group number: [0]? 2
Local or Remote: [local]? remote
```

**group number**  
 Indicates the group number of the port that you want to enable.

**Local or Remote**  
 Specifies whether to disable the local or remote port.

**Default value:** local

## List

Use the **list** command to display the configuration of a specific group or of all groups.

**Syntax:**

**list** all  
group *group#*

**all** Displays the statistics of all local groups. See the **list group** command for a sample output.

**group** *group#*  
 Displays the statistics of a specified group.

**Example:**

```
list group 1
                                BSC Relay Configuration
-----
```

Local Group	Group Type	Port Status		Net Number	Remote Group	Station Address	IP Address
1 (E)	MULTI	Local Remote	PRMRY (E) SCNDRY (E)	1	1	C1	6.6.6.1

```
-----
Local port statistics:
Packets forwarded = 0
Packets discarded = 0

Remote port statistics:
Packets forwarded = 0
Packets discarded = 0
```

**Local Group**  
 Indicates the group number and the status of the group, enabled (E) or disabled (D).

**Group Type**  
 Specifies the type of BSC connection this group supports: point-to-point or multipoint.

**Port Status**  
 Indicates the type of port (local/remote primary/secondary) and its status, enabled (E) or disabled (D).

## Monitoring BSC Relay (Talk 5)

### Net Number

Indicates the device number of the local port.

### Station Address

The character that the system displays for a secondary port.

### IP Address

Indicates the IP address of the remote port.

### Remote Group

The number of the group at the remote router.

### Packets Forwarded

Indicates how many packets the system forwarded for the port.

### Packets Discarded

Indicates how many packets the system discarded for the port.

The following example displays the configuration built for Router A in the figure for "Sample BRLY Configuration" on page 588.

```
Ctrl-P
* talk 5
+p brly
BSC Console
BSC>1i all
```

#### BSC Relay Configuration

Local Group	Group Type	Port Status	Net Number	Remote Group	Station Address	IP Address
1 (E)	MULTI	Local PRMRY (E) Remote SCNDRY (E)	1	1	C1	6.6.6.1

#### Local port statistics:

```
Packets forwarded = 0
Packets discarded = 0
```

#### Remote port statistics:

```
Packets forwarded = 0
Packets discarded = 0
```

Local Group	Group Type	Port Status	Net Number	Remote Group	Station Address	IP Address
2 (E)	MULTI	Local PRMRY (E) Remote SCNDRY (E)	1	2	C5	6.6.6.2

#### Local port statistics:

```
Packets forwarded = 0
Packets discarded = 0
```

#### Remote port statistics:

```
Packets forwarded = 0
Packets discarded = 0
```

E = enabled, D = disabled

```
BSC>exit
```

## BSC Relay Interfaces and the GWCON Interface Command

While BSC Relay interfaces have their own monitoring processes, the router also displays complete statistics for installed network interfaces when you use the **interface** command from the GWCON environment. (For more information on the **interface** command, refer to Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands.)

## Monitoring BSC Relay (Talk 5)



---

## Chapter 39. Using the V.25bis Network Interface

The V.25bis interface allows routers to establish serial connections over switched telephone lines using V.25bis modems. This chapter describes how to use the V.25bis interface. It includes the following sections:

- “Before You Begin”
- “Configuration Procedures”

**Note:** You can assign a destination name to a **connection list** and assign a destination number to each line in the list. When that destination name is called, the numbers in the list are tried one by one until a connection is made or the list is exhausted.

---

### Before You Begin

Before you configure V.25bis on the router, make sure you have the following:

- V.25bis modems that support synchronous V.25bis commands and the 1988 ITU/CCITT V.25bis specification.
- If your modem does not automatically detect answer originate, you must:
  - Configure the modem at one end of the link to originate calls.
  - Configure the modem at the other end of the link to answer calls.
  - Set up the modem on the answering end to auto-answer.

---

### Configuration Procedures

This section describes how to configure your router for V.25bis. The tasks you need to perform are:

1. Adding V.25bis addresses
2. Configuring V.25bis parameters
3. Adding dial circuits
4. Configuring dial circuits

**Note:** You must restart the router for changes to the V.25bis configuration to take effect.

### Adding V.25bis Addresses

You need to add a V.25bis address for each local V.25bis interface as well as for each destination. The V.25bis address includes:

- *Address Name*. The address name is a description of the address. You can use any string of up to 23 printable ASCII characters.
- *Network Dial Address*. Telephone number of the local or destination port. You can enter up to 30 characters that are in the valid format of the connected V.25bis modem. For additional information consult your modem manual.

**Note:** The valid character set for telephone numbers as defined by the CCITT and supported by the IBM 2210 includes:

- The decimal digits 0 through 9

## Using V.25bis

- Colon (:) — "Wait Tone"
- Left-angled bracket (<) — "Pause", used for inserting a fixed delay (dependent on modem) between digit sequences. For example, when going through a PBX or PTN.
- Equal (=) — "Separator 3", which is "for national use." (Consult your modem manual.)
- The letter P — "Dialing to be continued in Pulse mode." (Not supported by some modems.)
- The letter T — "Dialing to be continued in DTMF mode." (Not supported by some modems.)

To add a V.25bis address, enter the **add v25-bis-address** command at the Config> prompt. For example:

```
Config>add v25-bis-address
Assign address name [1-23] chars []? remote-site-baltimore
Assign network dial address [1-30 digits] []? 19095551234
```

## Configuring the V.25bis Interface

This section explains how to configure the V.25bis interface. To configure, do the following:

1. To set up a serial line interface for V.25bis, set the data-link protocol for the serial line interface. From the Config> prompt, use the **set data-link v25bis** command. For example:

```
Config>set data-link v25bis
Interface Number [0]? 2
```

2. Display the V.25bis Config> prompt by entering the **network** command followed by the number of the interface. For example:

```
Config>network 2
V.25bis Data Link Configuration
V25bis Config>
```

You can use the **list devices** command at the Config> prompt to display a list of interface numbers configured on the router.

3. Use the **set local-address** command to specify the network address name of the local port. You must enter one of the address names you defined using the **add v25bis-address** command. For example:

```
V25bis Config>set local-address
Local network address name []? remote-site-baltimore
```

**Note:** You must restart the router for configuration changes to take effect.

### Optional V.25bis Parameters

The following are optional V.25bis parameters you can set. For a complete description of these commands, see "V.25bis Configuration Commands" on page 611.

- You can limit the number of successive calls to an address that is inaccessible or that refuses those calls. To do so, use the **set retries-no-answer** and the **set timeout-no-answer** commands.
- The **set disconnect-timeout** command controls the amount of time the router waits to initiate a call after dropping a signal from the previous call.
- The **set command-delay-timeout** command specifies the amount of time the router waits to initiate or answer a call after it turns on DTR.

- The **set connect-timeout** command specifies the number of seconds allowed for a call to be established.
- The **set duplex** command specifies the duplexing mode for the call.
- The **set encoding** command sets the encoding for the call.
- When you have finished configuring the interface, you can use the **list** command to display your configuration.

## Adding Dial Circuits

Dial circuits are mapped to V.25bis serial line interfaces. You can map multiple dial circuits to one serial line interface.

To add a dial circuit, use the **add device dial-circuit** command from the `Config>` prompt. The software assigns an interface number to each circuit. You will use this number to configure the dial circuit.

### Example:

```
Config>add device dial-circuit
Adding device as interface 6
```

**Note:** Dial circuits default to the Point-to-Point protocol (PPP). You can also set the dial circuit to use Frame Relay (FR) or SDLC.

## Configuring Dial Circuits

This section describes how to configure a dial circuit. For a complete description of the dial circuit commands, see “Chapter 45. Configuring and Monitoring Dial Circuits” on page 671.

**Note:** If the encapsulator type is SDLC, the only dial circuit parameter that you can set is the base net number.

To configure the dial circuit, do the following:

1. Display the `Circuit Config>` prompt by entering the **network** command followed by the interface number of the dial circuit. You can use the **list devices** command at the `Config>` prompt to display a list of the dial circuits that you added. For example:

```
Config>network 6
Circuit configuration
Circuit Config>
```

2. Map the dial circuit to a V.25bis interface. The Base net is the V.25bis interface number. For example:

```
Circuit Config>set net
Base net for this circuit [0]? 0
```

3. Specify the address name of the remote router to which the dial circuit will connect. You must use one of the names you defined using the **add v25-bis-address** command. For example:

```
Circuit Config>set destination
Assign destination address name []? newyork
```

4. Configure the dial circuit to initiate outbound calls only, accept inbound calls only, or both initiate and accept calls.

Use the **set calls** command. To avoid a conflict if both ends of the link attempt to establish a call at the same time, configure the dial circuit at one end of the link to accept inbound calls only, and configure the dial circuit at the other end of the link to initiate outbound calls only. For example:

## Using V.25bis

```
Circuit Config>set calls outbound  
Circuit Config>set calls inbound
```

**Note:** For WAN Restoral operations or another dial-on-demand application, you should set up the circuit for either inbound or outbound calls.

5. Specify the timeout period for the circuit.

Use the **set idle** command. If there is no traffic over the circuit for this specified time period, the dial circuit hangs up. To configure the circuit as a dedicated circuit, set the idle timer to zero. To configure the circuit to dial on demand, set the idle timer to a value other than zero. The range is 0 to 65535 and the default is 60 seconds. For example:

```
Circuit Config>set idle  
Idle timer (seconds, 0 means always active) [60]? 0
```

**Note:** For WAN Restoral or WAN Reroute operations you must set the idle time to 0.

6. Optionally, you can delay the time between when a call is established and the initial packet is sent.

Use the **set selftest-delay** command. Setting a selftest delay can prevent initial packets from being dropped. If your modems take extra time to synchronize, adjust this delay. For example:

```
Circuit Config>set selftest-delay  
Selftest delay(milli-seconds,0 means no delay) [150]?200
```

7. Set the inbound address name.

Use the **set inbound** command. You need to use this command only if you set up the circuit for both inbound and outbound calls and if the router's destination address is different from the destination address that the remote router dials. For example, the numbers would be different if one of the routers must go through a PBX, international, or inter-LATA exchange. For example:

```
Circuit Config>set inbound  
Assign destination inbound address name []? newyork
```

The inbound address name must match one of the names that you defined using the **add v25-bis-address** command.

8. Set the duplexing mode for the circuit using the **set duplex** command.
9. Set the encoding mode for the circuit using the **set encoding** command.
10. Optionally, you can enter the configuration process for the data-link layer protocol that is running on the dial circuit (PPP or Frame Relay). Use the **encapsulator** command. For example:

```
Circuit Config>encapsulator
```

---

## Chapter 40. Configuring and Monitoring the V.25bis Network Interface

This chapter describes the V.25bis configuration and operational commands and GWCON commands. It includes the following sections:

- “Accessing the Interface Configuration Process”
- “V.25bis Configuration Commands”
- “Accessing the Interface Monitoring Process” on page 615
- “V.25bis Monitoring Commands” on page 615
- “V.25bis and the GWCON Commands” on page 620

---

### Accessing the Interface Configuration Process

Use the following procedure to access the V.25bis configuration process.

1. At the OPCON prompt, enter the **talk** command and the PID for CONFIG. (For more detail on this command, refer to What is the OPCON Process?.) For example:

```
* talk 6
Config>
```

After you enter the **talk 6** command, the CONFIG prompt (Config>) displays on the console. If the prompt does not appear when you first enter **CONFIG**, press **Return** again.

2. At the CONFIG prompt, enter the **list devices** command to display the network interface numbers for which the router is currently configured. For example:

```
Config> list devices

Ifc 0 Ethernet                CSR 81600, CSR2 80C00, vector 94
Ifc 1 V.25bis                CSR 81620, CSR2 80D00, vector 93
Ifc 2 WAN X.25                CSR 81640, CSR2 80E00, vector 92
Ifc 3 WAN PPP                 CSR 381620, CSR2 380D00, vector 125
Ifc 4 WAN Frame Relay        CSR 381640, CSR2 380E00, vector 124
Ifc 5 Token Ring             CSR 600000, vector 95
```

3. Record the interface numbers.
4. Enter the CONFIG **network** command and the number of the interface you want to configure. For example:

```
Config> network 1
V.25bis Config>
```

The V.25bis configuration prompt now displays on the console.

---

### V.25bis Configuration Commands

Table 77 on page 612 summarizes and the rest of the section explains the V.25bis configuration commands. These commands allow you to display, create, or modify a V.25bis configuration. Enter the V.25bis configuration commands at the V.25bis Config> prompt.

## V.25bis Configuration Commands

Table 77. V.25bis Configuration Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
List	Displays the V.25bis configuration.
Set	Sets the local address, connect, disconnect, and no answer timeouts, number of retries after no answer, the duplexing mode, command delay timeout, and encoding.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## List

Use the **list** command to display the current V.25bis configuration.

### Syntax:

**list**

### Example:

```
list
      V.25bis Configuration

Duplex                = Full
Encoding              = NRZ
Local Network Address Name = v403
Local Network Address  = 15088982403

Non-Responding addresses:
Retries               = 1
Timeout              = 0 seconds

Call timeouts:
Command Delay        = 0 ms
Connect              = 60 seconds
Disconnect           = 2 seconds

Cable type            = V.35 DTE
Speed                 = 9600
```

### Duplex

Displays the duplex mode for the interface once the dial connection has been established.

### Encoding

Displays the transmission encoding scheme for the interface once the dial connection has been established. Encoding is either NRZ (non-return to zero) or NRZI (non-return to zero inverted).

### Local Network Address Name:

Displays the network address name of the local port.

### Local Network Address:

Displays the network dial address of the local port.

### Non-responding addresses:

#### Retries

Maximum number of calls the router attempts to make to a non-responding address during the timeout period.

#### Timeout

If the router reaches the maximum number of retries to a

## V.25bis Configuration Commands

non-responding address, it does not attempt to establish the call until this time has expired. This timeout period begins when the router attempts the first call.

### Call timeouts:

Number of call timeouts.

### Command Delay

Amount of time, in milliseconds, that the router waits to initiate or answer a call after it turns on DTR (Data Terminal Ready). If you set this parameter to 0, the router waits for the modem to respond to DTR with the CTS (Clear to Send) signal before it issues commands.

### Connect

Number of seconds allowed for a call to be established. If this parameter is set to 0, the modem controls the connection establishment timeout.

### Disconnect

After the routers drops DTR it waits this amount of time before it initiates further calls. If you set this parameter to 0, the router waits for the modem to respond to the DTR drop by dropping CTS and DSR before it initiates the next call.

## Set

Use the **set** command to configure local addresses, timeouts and delays for calls, retries and timeouts for non-responding addresses, and the HDLC cable type.

### Syntax:

```
set                command-delay timeout . . .  
                   connect-timeout . . .  
                   disconnect-timeout . . .  
                   duplex  
                   hdlc cable . . .  
                   hdlc encoding . . .  
                   hdlc speed . . .  
                   local-address . . .  
                   retries-no-answer . . .  
                   timeout-no-answer . . .
```

### **command-delay-timeout** # of milliseconds

After the router turns on DTR (Data Terminal Ready), it waits this amount of time before it initiates or answers a call. If you set this parameter to 0, the router waits for the modem to respond to DTR with the CTS (Clear to Send) signal before it issues commands. The range is 0 to 65535 milliseconds, and the default is 0.

### **connect-timeout** # of seconds

Sets the number of seconds allowed for a call to be established. The range is 0 to 65535 seconds, and the default is 60. If you set this parameter to 0, the modem controls the connection timeout. You should initially set this parameter to 0 and then use ELS event V25B.027 to find out how long it

## V.25bis Configuration Commands

takes to establish connections to various destinations. You can then set this parameter to a number slightly higher than the longest connect time.

**Note:** Normally government regulation limits modem manufacturers to a maximum length for call setup. This value is merely an optimization, although inter-operation with some DSUs may require that you change this parameter.

### **disconnect-timeout** # of seconds

Specifies the amount of time, in seconds, that the router waits after dropping DTR before it initiates further calls. The range is 0 to 65535 seconds, and the default is 2. If you set this parameter to 0, the router waits for the modem to respond to the DTR drop by dropping CTS and DSR before it initiates the next call.

### **duplex**

Specifies the duplex type of the line.

When full-duplex is configured, the RTS modem signal remains asserted once the dial connection has been established.

When half-duplex is configured, the router raises RTS when it is time to transmit and waits for CTS to be asserted by the modem. After CTS is asserted, the router transmits data packets and then drops RTS when the router is through transmitting to let the peer device respond.

Only configure half-duplex when using the V.25bis interface to handle switched SDLC and the attached modem requires the half-duplex mode of operation.

**Note:** Duplex must be full for PPP or Frame Relay circuits.

**Valid values:** full or half

**Default value:** full

### **hdlc cable** *rs232 dte*

Specifies the type of cable connected to this interface. Setting this parameter allows you to view the cable type when you enter the **interface** command at the GWCON (+) prompt and when you enter the **statistics** command at the V.25bis> monitoring prompt. This parameter does not affect operation of the router.

### **hdlc encoding**

Sets the HDLC transmission encoding scheme as NRZ (non-return to zero) or NRZI (non-return to zero inverted). Most configurations use NRZ. The configured encoding is used for the end-to-end connection.

**Note:** Although you might configure NRZI, the exchange between the DTE and the modem (as described by CCITT recommendation, *V.25bis*) uses NRZ as the encoding scheme.

**Valid values:** NRZ or NRZI

**Default value:** NRZ

### **hdlc speed**

Specifies the line speed for this interface. Setting this parameter allows you to view the line speed when you enter the interface command at the



## V.25bis Configuration Commands

GWCON (+) prompt and when you enter the statistics command at the V.25bis> monitoring prompt. The range is 300 to 2 048 000 bps.

**Note:** This command does not affect the actual line speed but it sets the speed some protocols, such as IPX, use when calculating routing cost parameters for dial circuits mapped to the V.25bis interface.

### **local-address** *address name*

Specifies the network address name of the local port. This address name must match one of the names that you defined at the Config> using the **add v25-bis-address** command.

**Example:** `set local-address line-1-local`

### **retries-no-answer** *value*

Some telephone service providers impose restrictions on automatic recalling devices to limit the number of successive calls to an address that is inaccessible or that refuses those calls. This parameter specifies the maximum number of calls the router attempts to make to a non-responding address during the timeout period. The range is 0 to 10, and the default is 1.

**Note:** Government regulation may also impose limits on the modem manufacturer that would supersede this parameter.

### **timeout-no-answer** *# of seconds*

After the router reaches the maximum number of **retries-no-answer** to a non-responding address, it does not initiate further calls to that address until this time has expired. This timeout period begins when the router attempts the first call to an address. The range is 0 to 65535 seconds, and the default is 0. If you set this parameter to 0, the modem controls the timeout period.

---

## Accessing the Interface Monitoring Process

To access the interface monitoring process for V.25bis, enter the following command at the GWCON (+) prompt:

```
+ network #
```

Where # is the number of the V.25bis serial line. You cannot directly access the V.25bis monitoring process for dial circuits, but you can monitor the dial circuits that are mapped to the serial line interface.

**Note:** V.25bis interfaces also have ELS troubleshooting messages that you can use to monitor V.25bis related activity. See the *IBM Nways Event Logging System Messages Guide* for further details.

---

## V.25bis Monitoring Commands

This section summarizes and explains the V.25bis operating commands. These commands allow you to view the calls, circuits, parameters, and statistics of the V.25bis interfaces.

Enter the V.25bis monitoring commands at the V.25bis> prompt. Table 78 on page 616 shows the commands.

## V.25bis Operating Commands

Table 78. V.25bis Monitoring Command Summary

Monitoring Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Calls	List the number of completed and attempted connections made for each dial circuit mapped to this interface since the last time statistics were reset on the router.
Circuits	Shows the status of all data circuits configured on the V.25bis interface.
Parameters	Displays the current parameters for the V.25bis interface. (This command is similar to the V.25bis Config> list command.)
Statistics	Displays the current statistics for the V.25bis interface.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

## Calls

Use the **calls** command to list the number of completed and attempted connections made for each dial circuit mapped to this interface since the last time statistics were reset on the router.

### Syntax:

#### calls

#### Example:

```
calls
Net Interface Site Name      In   Out  Rfsd  Blckd
1   PPP/0     v403          2    0    0     0
```

Unmapped connection indications: 0

**Net** Number of the dial circuit mapped to this interface.

#### Interface

Type of interface and its instance number.

#### Site Name

Network address name of the dial circuit.

**In** Number of inbound connections accepted for this dial circuit.

**Out** Number of completed connections initiated by this dial circuit.

**Rfsd** Number of connections initiated by this dial circuit that were refused by the network or the remote destination port.

**Blckd** Number of connection attempts that the router blocked. The router blocks connection attempts if the local port is already in use, the maximum number of retries to a non-responding address is reached, or a modem is not responding.

#### Unmapped connection indications:

Number of connection attempts that were refused by the router because there were no enabled dial circuits that were configured to accept the incoming calls.

## Circuits

The **circuits** command shows the status of all dial circuits configured on the V.25bis port.

### Syntax:

**circuits**

### Example:

```

circuit
Net Interface  MAC/Data-Link  State  Reason  Duration
2  PPP/0      Point to Point  Avail  Rmt Disc  1:02:25

```

**Net** Number of the dial circuit mapped to this interface

### Interface

Type of interface and its instance number.

### MAC/DataLink

Type of datalink protocol configured for this dial circuit.

**State** Current state of the dial circuit:

Up - currently connected

Available - not currently connected, but is available

Disabled - dial circuit was disabled

Down - failed to connect because of a busy dial circuit or because the link-layer protocol is down

### Reason

Reason for the current state:

nnn\_Data - (where nnn is the name of a protocol) the circuit is Up because a protocol had data to send.

Remote Disconnect - the circuit is either Down or Available because the remote destination disconnected the call.

Operator Request - the circuit is Available because the last call was disconnected by a monitoring command.

Inbound - the circuit is Up because the circuit answered an inbound call.

Restoral - the circuit is Up because of a WAN Restoral operation.

Self Test - the circuit was configured as static (idle time=0) and successfully connected once it was enabled.

### Duration

Length of time that the circuit has been in the current state.

## Parameters

Use the **parameters** command to display the current V.25bis serial line configuration. Note that this is the same information displayed in the V.25bis Config> list command.

### Syntax:

**parameters**

### Example:

## V.25bis Operating Commands

### parameters

V.25bis port Parameters

Local Network Address Name = v402  
Local Network Address = 15088982402

Non-Responding addresses:

Retries = 1  
Timeout = 0 seconds

Call timeouts:

Command Delay = 0 ms  
Connect = 0 seconds  
Disconnect = 0 seconds

### Local Network Address Name:

Network address name of the local port.

### Local Network Address:

Network dial address of the local port.

### Non-responding addresses:

#### Retries

Maximum number of calls the router attempts to make to a non-responding address during the timeout period.

#### Timeout

If the router reaches the maximum number of retries to a non-responding address, it does not attempt to establish the call until this time has expired. This timeout period begins when the router attempts the first call to an address.

### Call timeouts:

#### Command Delay

Amount of time, in milliseconds, that the router waits to initiate or answer a call after it turns on DTR (Data Terminal Ready). If you set this parameter to 0, the router waits for the modem to respond to DTR with the CTS (Clear to Send) signal before it issues commands.

#### Connect

Number of seconds allowed for a call to be established. If this parameter is set to 0, the modem controls the connection establishment timeout.

#### Disconnect

After the routers drops DTR it waits this amount of time before it initiates further calls. If you set this parameter to 0, the router waits for the modem to respond to the DTR drop by dropping CTS and DSR before it initiates the next call.

## Statistics

Use the **statistics** command to display the current statistics for this V.25bis interface.

### Syntax:

**statistics**  
\_

### Example:

## V.25bis Operating Commands

### statistics

V.25bis port Statistics

Adapter cable: RS-232 DTE RISC Microcode Revision: 1

```
V.24 circuit: 105 106 107 108 109 125 141
Nicknames:   RTS CTS DSR DTR DCD RI LL
RS-232      CA CB CC CD CF CE
State:      OFF OFF OFF OFF OFF OFF OFF
```

Line speed: 4800  
Last port reset: 24 seconds ago

```
Input frame errors:
CRC error           0 alignment (byte length)  0
missed frame       0 too long (> 2182 bytes)  0
aborted frame      0 DMA/FIFO overrun          0
L & F bits not set 0
Output frame counters:
DMA/FIFO underrun errors 0 Output aborts sent 0
```

### Adapter cable:

Type of adapter cable being used.

### V.24 circuit:

Circuit numbers as identified by V.24 specifications.

### Nicknames:

Common names for the circuits.

### RS-232

EIA 232 (also known as RS-232) names for the circuits.

**State:** Current state of the circuits: ON, OFF, or "---," which means that the state is undefined for this type of interface.

### Line speed:

The transmit clock speed (approximate).

### Last port reset:

Length of time since the port was reset.

### Input frame errors:

#### CRC error

Number of packets received that contained checksum errors and as a result were discarded.

#### Alignment (byte length)

Number of packets received that were not an even multiple of 8 bits in length and as a result were discarded.

#### Missed Frame

When a frame arrives at the device and there is no buffer available, the hardware drops the frame and increments the missed frame counter.

#### too long (> nnnn bytes)

Number of packets received that were greater than the configured frame size (nnnn) and as a result were discarded.

#### aborted frame

Number of packets received that were aborted by the sender or a line error.

## V.25bis Operating Commands

### DMA/FIFO overrun

The number of times the serial interface card could not send data fast enough to the system packet buffer memory to receive packets from the network.

### L & F bits not set

On serial interfaces, the hardware sets input-descriptor information for arriving frames. If the buffer can accept the complete frame upon arrival, the hardware sets both the last and first bits of the frame, indicating that the buffer accepted the complete frame. If either of the bits is not set, the packet is dropped, the L & F bits not set counter is incremented, and the buffer is cleared for reuse.

**Note:** It is unlikely that the L & F bits not set counter will be affected by traffic.

### Output frame counters:

#### DMA/FIFO underrun errors

Number of times the serial interface card could not retrieve data fast enough from the system packet buffer memory to transmit packets onto the network.

#### Output aborts sent

Number of transmissions that were aborted as requested by upper-level software.

---

## V.25bis and the GWCON Commands

While V.25bis has its own monitoring process for monitoring purposes, the router also displays configuration information and complete statistics for devices and circuits when you use the interface, statistics, and error commands from the GWCON environment. You can also use the GWCON **test** command to test DCEs and circuits.

**Note:** Issuing the **test** command to the V.25bis serial interface causes the current call to be dropped and re-dialed.

For more information on the GWCON command, see "Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands" on page 131.

## Statistics for V.25bis Interfaces and Dial Circuits

Use the **interface** command at the GWCON (+) prompt to display statistics for V.25bis serial line interfaces and dial circuits.

To display the following statistics for a V.25bis serial line interface, use the **interface** command followed by the *interface number* of the V.25bis serial line interface.

**Example:** interface 1

```
                Self-Test  Self-Test  Maintenance
Nt Nt' Interface      CSR  Vec   Passed   Failed   Failed
1  1  V.25/0      80000000  44    1        0        0
V.25bis MAC/data-link on SCC Serial Line interface
```

Adapter cable: RS-232 DTE RISC Microcode Revision: 1

V.24 circuit: 105 106 107 108 109 125  
Nicknames: RTS CTS DSR DTR DCD R1 LL

## V.25bis Operating Commands

```
RS-232:      CA CB CC CD CF CE
State:       OFF OFF OFF OFF OFF OFF OFF

Line Speed:      14.400 Kbps
Last port reset: 1 hour, 28 minutes, 25 seconds ago

Input frame errors:
CRC error          0 alignment (byte length)  0
missed frame       0 too long (> 2182 bytes)  0
aborted frame      0 DMA/FIFO overrun         0

Output frame counters:  DMA/FIFO underrun errors  0  Output aborts sent      0
```

To display the following statistics for a dial circuit, use the **interface** command followed by the *interface number* of the dial circuit.

### Example:

```
interface 3
          Self-Test Self-Test Maintenance
Nt Nt' Interface  CSR Vec  Passed  Failed  Failed
3 2  PPP/1      81640 5C   0      5      0
Point to Point MAC/data-link on V.25bis Dial Circuit interface
```

The following list describes the output for both serial line interfaces and dial circuits.

**Nt** Serial line interface number or dial circuit interface number.

**Nt'** If "Nt" is a dial circuit, this is the interface number of the V.25bis serial line interface to which the dial circuit is mapped.

### Interface

Interface type and its instance number.

**CSR** Command and status register addresses of base network.

**Vec** Interrupt vector address.

### Self-Test Passed

Number of self-tests that succeeded.

### Self-Test Failed

Number of self-tests that failed.

### Maintenance: Failed

Number of maintenance failures.

### Adapter cable:

Type of adapter cable that is being used.

### V.24 circuit:

Circuit numbers as identified by V.24 specifications.

### Nicknames

Common names for the circuits.

### RS-232

EIA 232 (also known as RS-232) names for the circuits.

**State** Current state of the circuits (ON or OFF).

### Line speed

The transmit clock speed (approximate).

### Last port reset

Length of time since the port was reset.

### Input frame errors:

## V.25bis Operating Commands

### **CRC error**

Number of packets received that contained checksum errors and as a result were discarded.

### **Alignment (byte length)**

Number of packets received that were not an even multiple of 8 bits in length and as a result were discarded.

### **Missed Frame**

When a frame arrives at the device and there is no buffer available, the hardware drops the frame and increments the missed frame counter.

### **too long (> nnnn bytes)**

Number of packets received that were greater than the configured frame size and as a result were discarded.

### **DMA/FIFO overrun**

The number of times the serial interface card could not send data fast enough to the system packet buffer memory to receive packets from the network.

### **L & F bits not set**

On serial interfaces, the hardware sets input-descriptor information for arriving frames. If the buffer can accept the complete frame upon arrival, the hardware sets both the last and first bits of the frame, indicating that the buffer accepted the complete frame. If either of the bits is not set, the packet is dropped, the L & F bits not set counter is incremented, and the buffer is cleared for reuse.

**Note:** It is unlikely that the L & F bits not set counter will be affected by traffic.

### **aborted frame**

Number of packets received that were aborted by the sender or a line error.

### ***Output frame counters:***

#### **DMA/FIFO underrun errors**

Number of times the serial interface card could not retrieve data fast enough from the system packet buffer memory to transmit packets onto the network.

#### **Output aborts sent**

Number of transmissions that were aborted as requested by upper-level software.



---

## Chapter 41. Using the V.34 Network Interface

The V.34 interface allows routers to establish serial connections over leased lines or over switched telephone lines using externally attached modems that support the standard AT command set or integrated modem adapters. This chapter describes how to use a V.34 interface. It includes the following sections:

- “Before You Begin”
- “Configuration Procedures”

**Note:** You can assign a destination name to a **connection list** and assign a destination number to each line in the list. When that destination name is called, the numbers in the list are tried one by one until a connection is made or the list is exhausted.

---

### Before You Begin

The IBM 2210 operates in leased line mode or in switched mode. If you are using switched mode, make sure that you have asynchronous modems that support the Hayes AT command set. Also, you must know the maximum DTE speed of each modem.

---

### Configuration Procedures

This section describes how to configure your router for V.34. The tasks you need to perform are:

1. Adding V.34 addresses
2. Configuring V.34 parameters
3. Adding dial circuits
4. Configuring dial circuits

**Note:** You must restart the router for changes to the V.34 configuration to take effect.

### Adding V.34 Addresses

A default V.34 address is created when V.34 interfaces are initially configured (called “default\_address”). Dial circuits configured on the V.34 interface default to the same address allowing some dial-in applications to work without modification of the V.34 address.

You need to add a V.34 address (or modify the default\_address) if you plan to use dial-out applications. The V.34 address includes:

- *Address Name.* The address name is a description of the address. You can use any string of up to 23 printable ASCII characters.
- *Network Dial Address.* Telephone number of the local or destination port. You can enter up to 31 characters that are in the valid dial characters for the connected modem.

**Note:** The valid character set for telephone numbers as defined by the CCITT and supported by the IBM 2210 includes:

## Using V.34

- The decimal digits 0 through 9
- Colon (:) – "Wait Tone"
- Left-angled bracket (<) – "Pause", used for inserting a fixed delay (dependent on modem) between digit sequences. For example, when going through a PBX or PTN.
- Equal (=) – "Separator 3", which is "for national use." (Consult your modem manual.)
- The letter P – "Dialing to be continued in Pulse mode." (Not supported by some modems.)
- The letter T – "Dialing to be continued in DTMF mode." (Not supported by some modems.)

V.34 addresses are not interface specific so they are added from the main Config> prompt. For example:

```
Config>add v34-address
Assign address name [1-23] chars []? remote-site-baltimore
Assign network dial address [1-20 digits] []? 1-909-555-1234
```

## Configuring the V.34 Interface

This section explains how to configure the V.34 interface. To configure, do the following:

1. To set up a serial line interface for V.34, set the datalink protocol for the serial line interface. From the Config> prompt, use the **set data-link v34** command. For example:

```
Config> set data-link v34
Interface Number [0]? 2
```

**Note:** The datalink is automatically set for integrated modem and cannot be changed.

2. Display the V.34 Config> prompt by entering the **network** command followed by the number of the interface. For example:

```
Config>network 2
V.34 Data Link Configuration
V34 System Net Config 2>
```

You can use the **list devices** command at the Config> prompt to display a list of interface numbers configured on the router.

3. Use the **set local-address** command to specify the network address name of the local port. You must enter one of the address names you defined using the **add v34-address** command. For example:

```
V34 System Net Config 2>set local-address
Local network address name []? remote-site-baltimore
```

**Note:** You must restart the router for configuration changes to take effect.

### Optional V.34 Parameters

The following are optional V.34 parameters you can set. For a complete description of these commands, see "V.34 Configuration Commands" on page 627.

- The V.34 interface allows routers to establish serial connections over leased lines or over switched telephone lines. Leased line mode uses a communications line dedicated to one destination. Switched mode gives you the potential to call other devices and not be dedicated to one destination.

- You can limit the number of successive calls to an address that is inaccessible or that refuses those calls. To do so, use the **set retries-no-answer** and the **set timeout-no-answer** commands.
- The **set disconnect-timeout** command controls the amount of time the router waits to initiate a call after dropping a signal from the previous call.
- The **set command-delay-timeout** command specifies the amount of time the router waits to initiate or answer a call after it turns on DTR.
- The **set connect-timeout** command specifies the number of seconds allowed for a call to be established.
- The **speed** command sets the maximum DTE speed for the modem.
- The **modem-init-string** command allows flexibility in modem configuration to accommodate user or external equipment requirements.
- When you have finished configuring the interface, you can use the **list** command to display your configuration.

## Adding Dial Circuits

Dial circuits are mapped to V.34 serial line interfaces. You can map multiple dial circuits to one serial line interface.

The V.34 interface supports multiple types of dial circuits. To add a dial circuit use one of the following commands from the `Config>` prompt.

- **add device dial-circuit**
- **add device dial-in**
- **add device dial-out**

The software assigns an interface number to each circuit. You will use this number to configure the dial circuit.

### Example:

```
Config> add device dial-circuit
Adding device as interface 6
```

**Note:** Dial circuits default to the Point-to-Point protocol (PPP). Although the **set data-link** command can be used to set the datalink of a dial circuit to Frame Relay, only PPP dial circuits are supported over V.34.

## Configuring Dial Circuits

This section describes how to configure a dial circuit. For a complete description of the dial circuit commands, see “Chapter 45. Configuring and Monitoring Dial Circuits” on page 671. To configure the dial circuit, do the following:

1. Display the `Circuit Config>` prompt by entering the **network** command followed by the interface number of the dial circuit. You can use the **list devices** command at the `Config>` prompt to display a list of the dial circuits that you added. For example:

```
Config>network 6
Circuit configuration
Circuit Config>
```

2. Map the dial circuit to a V.34 interface. The Base net is the V.34 interface number. For example:

```
Circuit Config>set net
Base net for this circuit [0]? 0
```

## Using V.34

3. Specify the address name of the remote router to which the dial circuit will connect. You must use one of the names you defined using the **add v34-address** command. For example:

```
Circuit Config>set destination
Assign destination address name []? newyork
```

4. Configure the dial circuit to initiate outbound calls only, accept inbound calls only, or both initiate and accept calls.

Use the **set calls** command. To avoid a conflict if both ends of the link attempt to establish a call at the same time, configure the dial circuit at one end of the link to accept inbound calls only, and configure the dial circuit at the other end of the link to initiate outbound calls only. For example:

```
Circuit Config>set calls outbound
Circuit Config>set calls inbound
```

**Note:** For WAN Restoral operations or another dial-on-demand application, you should set up the circuit for either inbound or outbound calls.

5. Specify the timeout period for the circuit.  
Use the **set idle** command. If there is no traffic over the circuit for this specified time period, the dial circuit hangs up. To configure the circuit as a dedicated circuit, set the idle timer to zero. To configure the circuit to dial on demand, set the idle timer to a value other than zero. The range is 0 to 65535 and the default is 60 seconds. For example:

```
Circuit Config>set idle
Idle timer (seconds, 0 means always active) [60]? 0
```

**Note:** For WAN Restoral operations you must set the idle time to 0.

6. Optionally, you can delay the time between when a call is established and the initial packet is sent.

Use the **set selftest-delay** command. Setting a self-test delay can prevent initial packets from being dropped. If your modems take extra time to synchronize, adjust this delay. For example:

```
Circuit Config>set selftest-delay
Selftest delay(milli-seconds,0 means no delay)[150]?200
```

7. Set the inbound address name.

Use the **set inbound** command. You need to use this command only if you set up the circuit for both inbound and outbound calls and if the router's destination address is different from the destination address that the remote router dials. For example, the numbers would be different if one of the routers must go through a PBX, international, or inter-LATA exchange. For example:

```
Circuit Config>set inbound
Assign destination inbound address name []? newyork
```

The inbound address name must match one of the names that you defined using the **add v34-address** command.

8. Optionally, you can enter the configuration process for the datalink layer protocol that is running on the dial circuit (PPP or Frame Relay). Use the **encapsulator** command. For example:

```
Circuit Config>encapsulator
```

---

## Chapter 42. Configuring and Monitoring the V.34 Network Interface

This chapter describes the V.34 configuration and operational commands and GWCON commands. It includes the following sections:

- “Accessing the Interface Configuration Process”
- “V.34 Configuration Commands”
- “Accessing the Interface Monitoring Process” on page 631
- “V.34 Monitoring Commands” on page 631
- “V.34 and the GWCON Commands” on page 636

---

### Accessing the Interface Configuration Process

Use the following procedure to access the V.34 configuration process.

1. At the OPCON prompt, enter the **talk** command and the PID for CONFIG. (For more detail on this command, refer to What is the OPCON Process?.) For example:

```
* talk 6
Config>
```

After you enter the **talk 6** command, the CONFIG prompt (Config>) displays on the console. If the prompt does not appear when you first enter **CONFIG**, press **Return** again.

2. At the CONFIG prompt, enter the **list devices** command to display the network interface numbers for which the router is currently configured. For example:

```
Config> list devices
Ifc 0 Ethernet                CSR 81600, CSR2 80C00, vector 94
Ifc 1 V.34 Base Net          CSR 81620, CSR2 80D00, vector 93
Ifc 2 WAN X.25               CSR 81640, CSR2 80E00, vector 92
Ifc 3 WAN PPP                 CSR 381620, CSR2 380D00, vector 125
Ifc 4 WAN Frame Relay        CSR 381640, CSR2 380E00, vector 124
Ifc 5 Token Ring             CSR 600000, vector 95
Ifc 6 4-port Modem Adapter    CSR 8001600, CSR2 8000C00, vector 158
Ifc 7 4-port Modem Adapter    CSR 8001620, CSR2 8000D00, vector 157
Ifc 8 4-port Modem Adapter    CSR 8001640, CSR2 8000E00, vector 156
Ifc 9 4-port Modem Adapter    CSR 8001660, CSR2 8000F00, vector 155
```

3. The V.34 interfaces are listed as “V.34 Base Net” , or 4-port Modem Adapter, or 8-port Modem Adapter. Record the interface numbers of interfaces to configure.
4. Enter the CONFIG **network** command and the number of the interface you want to configure. For example:

```
Config> network 1
V.34 System Net Config >
```

The V.34 configuration prompt now displays on the console.

---

### V.34 Configuration Commands

Table 79 on page 628 summarizes and the rest of the section explains the V.34 configuration commands. These commands allow you to display, create, or modify a V.34 configuration. Enter the V.34 configuration commands at the V.34 Config> prompt.

## Configuring V.34

Table 79. V.34 Configuration Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
List	Displays the V.34 configuration.
Set	Sets the local address, connect, disconnect, and no answer timeouts, number of retries after no answer, and command delay timeout.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

## List

Use the **list** command to display the current V.34 configuration.

### Syntax:

**list**

### Example for Switched Mode:

```
list
      V.34 System Net Configuration:

Operating Mode           = Switched

Local Network Address Name = v403
Local Network Address     = 1-508-898-2403

Non-Responding addresses:
Retries                  = 1
Timeout                  = 0 seconds

Call timeouts:
Command Delay            = 0 ms
Connect                  = 60 seconds
Disconnect                = 2 seconds

Modem strings:
Initialization string    = AT&S1L1&D2&C1X3

Speed (bps)              = 115200
```

### Example for Leased Mode:

```
list
      V.34 System Net Configuration:

Operating Mode           = Leased

Call timeouts:
Connect                  = 60 seconds
Disconnect                = 2 seconds

Speed (bps)              = 115200
```

### Operating Mode

Specifies whether the interface is in switched or leased line mode.

### Local Network Address Name:

Displays the network address name of the local port.

### Local Network Address:

Displays the network dial address of the local port.

### Non-responding addresses:

**Retries**

Maximum number of calls the router attempts to make to a non-responding address during the timeout period.

**Timeout**

If the router reaches the maximum number of retries to a non-responding address, it does not attempt to establish the call until this time has expired. This timeout period begins when the router attempts the first call.

**Call timeouts:**

Number of call timeouts.

**Command Delay**

Amount of time, in milliseconds, that the router waits to initiate or answer a call after it turns on DTR (Data Terminal Ready). If you set this parameter to 0, the router waits for the modem to respond to DTR with the CTS (Clear to Send) signal before it issues commands.

**Connect**

Number of seconds allowed for a call to be established. If this parameter is set to 0, the modem controls the connection establishment timeout.

**Disconnect**

After the routers drops DTR it waits this amount of time before it initiates further calls. If you set this parameter to 0, the router waits for the modem to respond to the DTR drop by dropping CTS and DSR before it initiates the next call.

**Modem strings:**

Command strings sent to the attached modem.

**Initialization string**

This is the last AT command string sent to the modem during initialization (before a call is accepted or attempted). A default string is provided which should work for most modems.

**Note:** For modems made by 3Com/U.S. Robotics, the initialization string must be changed to: AT&S1L1&D2&C1X3&B1&H1&R2

**Speed (bps)**

This is the DTE speed. The default should work for most modems, but you may need to set the speed lower to operate properly or higher to achieve maximum data speeds supported by the modem.

## Set

Use the **set** command to configure local addresses, timeouts and delays for calls, retries and timeouts for non-responding addresses, and the HDLC cable type.

**Syntax:**

```
set                command-delay timeout . . . (switched mode only)
                   connect-timeout . . .
                   disconnect-timeout . . .
                   speed . . .
```

## Configuring V.34

`_local-address . . .(switched mode only)`  
`mode . . .`  
`_modem-init-string . . .(switched mode only)`  
`_retries-no-answer . . .(switched mode only)`  
`_timeout-no-answer . . .`

**Note:** If you are configuring a V.34 interface to be in leased line mode, the following parameters cannot be configured:

- **command-delay-timeout**
- **local-address** *address*
- **local-address** *name*
- **modem-init-string**
- **retries-no-answer**

### **command-delay-timeout** # of milliseconds

After the router turns on DTR (Data Terminal Ready), it waits this amount of time before it initiates or answers a call. If you set this parameter to 0, the router waits for the modem to respond to DTR with the CTS (Clear to Send) signal before it issues commands. The range is 0 to 65535 milliseconds, and the default is 0.

### **connect-timeout** # of seconds

Sets the number of seconds allowed for a call to be established. The range is 0 to 65535 seconds, and the default is 60. If you set this parameter to 0, the modem controls the connection timeout. You should initially set this parameter to 0 and then use ELS event V34B.027 to find out how long it takes to establish connections to various destinations. You can then set this parameter to a number slightly higher than the longest connect time.

**Note:** Normally government regulation limits modem manufacturers to a maximum length for call setup. This value is merely an optimization, although inter-operation with some DSUs may require that you change this parameter.

### **disconnect-timeout** # of seconds

Specifies the amount of time, in seconds, that the router waits after dropping DTR before it initiates further calls. The range is 0 to 65535 seconds, and the default is 2. If you set this parameter to 0, the router waits for the modem to respond to the DTR drop by dropping CTS and DSR before it initiates the next call.

### **speed** # bits per second

Specifies the DTE speed in bits per second for the modem. You should try to use the maximum speed supported by the modem, although some modems may not autobaud properly at all supported speeds. If you suspect there is a problem, try a lower speed.

### **local-address** *address name*

Specifies the network address name of the local port. This address name must match one of the names that you defined at the Config> using the **add v34-address** command.

**mode** Specifies whether the interface is configured as a switched or leased line interface.



**Note:** You can use the **set mode** command to toggle between a value of *switched* and a value of *leased*.

If you have set the mode to a value of *switched*, this parameter is displayed as **mode-leased** and can be used to change the mode to *leased*.

If you have set the mode to a value of *leased*, this parameter is displayed as **mode-switched** and can be used to change the mode to *switched*.

**Default value:** Switched

**modem-init-string** *value*

This is an AT command string sent to the modem at the end of successful interface initialization. It can be used to tailor modem parameters for your application.

**retries-no-answer** *value*

Some telephone service providers impose restrictions on automatic recalling devices to limit the number of successive calls to an address that is inaccessible or that refuses those calls. This parameter specifies the maximum number of calls the router attempts to make to a non-responding address during the timeout period. The range is 0 to 10, and the default is 1.

**Note:** Government regulation may also impose limits on the modem manufacturer that would supersede this parameter.

**timeout-no-answer** *# of seconds*

After the router reaches the maximum number of **retries-no-answer** to a non-responding address, it does not initiate further calls to that address until this time has expired. This timeout period begins when the router attempts the first call to an address. The range is 0 to 65535 seconds, and the default is 0. If you set this parameter to 0, the modem controls the timeout period.

---

## Accessing the Interface Monitoring Process

To access the interface monitoring process for V.34, enter the following command at the GWCON (+) prompt:

```
+ network #
```

Where # is the number of the V.34 interface. You cannot directly access the V.34 monitoring process for dial circuits, but you can monitor the dial circuits that are mapped to the serial line interface.

**Note:** V.34 interfaces also have ELS troubleshooting messages that you can use to monitor V.34 related activity. See the *IBM Nways Event Logging System Messages Guide* for further details.

---

## V.34 Monitoring Commands

This section summarizes and explains the V.34 monitoring commands. These commands allow you to view the calls, circuits, parameters, and statistics of the V.34 interfaces.

## Configuring V.34

Enter the V.34 monitoring commands at the V.34> prompt. Table 80 shows the commands.

Table 80. V.34 Monitoring Command Summary

Monitoring Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Calls	List the number of completed and attempted connections made for each dial circuit mapped to this interface since the last time statistics were reset on the router.
Circuits	Shows the status of all data circuits configured on the V.34 interface.
Reset	Clears connections and resets the interface.
Parameters	Displays the current parameters for the V.34 interface. (This command displays the same information as the interface configuration "list" command.)
Statistics	Displays the current statistics for the V.34 interface.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

## Calls

Use the **calls** command to list the number of completed and attempted connections made for each dial circuit mapped to this interface since the last time statistics were reset on the router.

### Syntax:

#### calls

### Example:

```
calls
Net Interface Site Name      In   Out  Rfsd  Blckd
1   PPP/0     v403          2    0    0     0

Unmapped connection indications:  0
```

**Net** Number of the dial circuit mapped to this interface.

### Interface

Type of interface and its instance number.

### Site Name

Network address name of the dial circuit.

**In** Number of inbound connections accepted for this dial circuit.

**Out** Number of completed connections initiated by this dial circuit.

**Rfsd** Number of connections initiated by this dial circuit that were refused by the network or the remote destination port.

**Blckd** Number of connection attempts that the router blocked. The router blocks connection attempts if the local port is already in use, the maximum number of retries to a non-responding address is reached, or a modem is not responding.

### Unmapped connection indications:

Number of connection attempts that were refused by the router because there were no enabled dial circuits that were configured to accept the incoming calls.

## Circuits

The **circuits** command shows the status of all dial circuits configured on the V.34 port.

### Syntax:

**circuits**

### Example:

```

circuit
Net Interface  MAC/Data-Link  State  Reason  Duration
2  PPP/0      Point to Point  Avail  Rmt Disc  1:02:25

```

**Net** Number of the dial circuit mapped to this interface

### Interface

Type of interface and its instance number.

### MAC/DataLink

Type of datalink protocol configured for this dial circuit.

**State** Current state of the dial circuit:

Up - currently connected

Available - not currently connected, but is available

Disabled - dial circuit was disabled

Down - failed to connect because of a busy dial circuit or because the link-layer protocol is down

### Reason

Reason for the current state:

nnn\_Data - (where nnn is the name of a protocol) the circuit is Up because a protocol had data to send.

Remote Disconnect - the circuit is either Down or Available because the remote destination disconnected the call.

Operator Request - the circuit is Available because the last call was disconnected by a monitoring command.

Inbound - the circuit is Up because the circuit answered an inbound call.

Restoral - the circuit is Up because of a WAN Restoral operation.

Self Test - the circuit was configured as static (idle time=0) and successfully connected once it was enabled.

### Duration

Length of time that the circuit has been in the current state.

## Parameters

Use the **parameters** command to display the current V.34 serial line configuration. Note that this is the same information displayed in the V.34 Config> list command.

### Syntax:

**parameters**

### Example:

```

parameters
V.34 port Parameters

```

## Configuring V.34

```
Local Network Address Name = v402
Local Network Address      = 1-508-898-2402

Non-Responding addresses:
Retries                    = 1
Timeout                   = 0 seconds

Call timeouts:
Command Delay              = 0 ms
Connect                   = 0 seconds
Disconnect                 = 0 seconds

Modem strings:
Initialization string     = AT&S1L1&D2&C1X3
```

### Local Network Address Name:

Network address name of the local port.

### Local Network Address:

Network dial address of the local port.

### Non-responding addresses:

#### Retries

Maximum number of calls the router attempts to make to a non-responding address during the timeout period.

#### Timeout

If the router reaches the maximum number of retries to a non-responding address, it does not attempt to establish the call until this time has expired. This timeout period begins when the router attempts the first call to an address.

### Call timeouts:

#### Command Delay

Amount of time, in milliseconds, that the router waits to initiate or answer a call after it turns on DTR (Data Terminal Ready). If you set this parameter to 0, the router waits for the modem to respond to DTR with the CTS (Clear to Send) signal before it issues commands.

#### Connect

Number of seconds allowed for a call to be established. If this parameter is set to 0, the modem controls the connection establishment timeout.

#### Disconnect

After the routers drops DTR it waits this amount of time before it initiates further calls. If you set this parameter to 0, the router waits for the modem to respond to the DTR drop by dropping CTS and DSR before it initiates the next call.

## Statistics

Use the **statistics** command to display the current statistics for this V.34 interface.

### Syntax:

**statistics**

### Example:

```
statistics
V.34 port Statistics
Adapter cable:          RS-232 DTE  RISC Microcode Revision: 1
```

V.24 circuit: 105 106 107 108 109 125 141

```
Nicknames:   RTS CTS DSR DTR DCD RI  LL
RS-232      CA CB  CC  CD  CF  CE
State:      OFF OFF OFF OFF OFF OFF OFF
Line speed:                115.200 Kbps
Last port reset:          24 seconds ago
```

```
Input frame errors:
CRC error                0  alignment (byte length)  0
missed frame            0  too long (> 2182 bytes)  0
aborted frame          0  DMA/FIFO overrun        0
L & F bits not set      0
```

```
Output frame counters:
DMA/FIFO underrun errors 0  Output aborts sent    0
```

### Adapter cable:

Type of adapter cable being used.

### V.24 circuit:

Circuit numbers as identified by V.24 specifications.

### Nicknames:

Common names for the circuits.

### RS-232

EIA 232 (also known as RS-232) names for the circuits.

**State:** Current state of the circuits: ON, OFF, or "---," which means that the state is undefined for this type of interface.

### Line speed:

The transmit clock speed (approximate).

### Last port reset:

Length of time since the port was reset.

### Input frame errors:

#### CRC error

Number of packets received that contained checksum errors and as a result were discarded.

#### Alignment (byte length)

Number of packets received that were not an even multiple of 8 bits in length and as a result were discarded.

#### Missed Frame

When a frame arrives at the device and there is no buffer available, the hardware drops the frame and increments the missed frame counter.

#### too long (> nnnn bytes)

Number of packets received that were greater than the configured frame size (nnnn) and as a result were discarded.

#### aborted frame

Number of packets received that were aborted by the sender or a line error.

#### DMA/FIFO overrun

The number of times the serial interface card could not send data fast enough to the system packet buffer memory to receive packets from the network.

## Configuring V.34

### L & F bits not set

On serial interfaces, the hardware sets input-descriptor information for arriving frames. If the buffer can accept the complete frame upon arrival, the hardware sets both the last and first bits of the frame, indicating that the buffer accepted the complete frame. If either of the bits is not set, the packet is dropped, the L & F bits not set counter is incremented, and the buffer is cleared for reuse.

**Note:** It is unlikely that the L & F bits not set counter will be affected by traffic.

### Output frame counters:

#### DMA/FIFO underrun errors

Number of times the serial interface card could not retrieve data fast enough from the system packet buffer memory to transmit packets onto the network.

#### Output aborts sent

Number of transmissions that were aborted as requested by upper-level software.

---

## V.34 and the GWCON Commands

While V.34 has its own monitoring process for monitoring purposes, the router also displays configuration information and complete statistics for devices and circuits when you use the interface, statistics, and error commands from the GWCON environment. You can also use the GWCON **test** command to test DCEs and circuits.

**Note:** Issuing the **test** command to the V.34 serial interface causes the current call to be dropped and re-dialed.

For more information on the GWCON command, see “Chapter 8. The Operating/Monitoring Process (GWCON - Talk 5) and Commands” on page 131.

## Statistics for V.34 Interfaces and Dial Circuits

Use the **interface** command at the GWCON (+) prompt to display statistics for V.34 serial line interfaces and dial circuits.

To display the following statistics for a V.34 serial line interface, use the **interface** command followed by the *interface number* of the V.34 serial line interface.

### Example:

```
interface 1
Nt Nt' Interface      CSR  Vec    Self-Test  Self-Test  Maintenance
1 1  V.34/0    80000000  44      Passed    Failed     Failed
V.34 MAC/data-link on SCC Serial Line interface

Adapter cable:      RS-232 DTE      RISC Microcode Revision: 1

V.24 circuit: 105 106 107 108 109 125
Nicknames:      RTS CTS DSR DTR DCD R1 LL
RS-232:         CA CB CC CD CF CE
State:          OFF OFF OFF OFF OFF OFF OFF

Line Speed:       115.200 Kbps
Last port reset: 1 hour, 28 minutes, 25 seconds ago
```

```

Input frame errors:
  CRC error           0  alignment (byte length)  0
  missed frame       0  too long (> 2182 bytes)  0
  aborted frame      0  DMA/FIFO overrun        0

Output frame counters:
  DMA/FIFO underrun errors  0  Output aborts sent      0

```

To display the following statistics for a dial circuit, use the **interface** command followed by the *interface number* of the dial circuit.

**Example:**

```
interface 3
```

```

Nt Nt' Interface      CSR  Vec  Self-Test  Self-Test  Maintenance
   '          PPP/1      81640 5C    Passed    Failed     Failed
3  2          PPP/1      81640 5C     0         5         0

```

Point to Point MAC/data-link on V.34 Dial Circuit interface

The following list describes the output for both serial line interfaces and dial circuits.

**Nt** Serial line interface number or dial circuit interface number.

**Nt'** If "Nt" is a dial circuit, this is the interface number of the V.34 serial line interface to which the dial circuit is mapped.

**Interface**

Interface type and its instance number.

**CSR** Command and status register addresses of base network.

**Vec** Interrupt vector address.

**Self-Test Passed**

Number of self-tests that succeeded.

**Self-Test Failed**

Number of self-tests that failed.

**Maintenance: Failed**

Number of maintenance failures.

**Adapter cable:**

Type of adapter cable that is being used.

**V.24 circuit:**

Circuit numbers as identified by V.24 specifications.

**Nicknames**

Common names for the circuits.

**RS-232**

EIA 232 (also known as RS-232) names for the circuits.

**State** Current state of the circuits (ON or OFF).

**Line speed**

The transmit clock speed (approximate).

**Last port reset**

Length of time since the port was reset.

**Input frame errors:**

**CRC error**

Number of packets received that contained checksum errors and as a result were discarded.

## Configuring V.34

### **Alignment (byte length)**

Number of packets received that were not an even multiple of 8 bits in length and as a result were discarded.

### **Missed Frame**

When a frame arrives at the device and there is no buffer available, the hardware drops the frame and increments the missed frame counter.

### **too long (> nnnn bytes)**

Number of packets received that were greater than the configured frame size and as a result were discarded.

### **DMA/FIFO overrun**

The number of times the serial interface card could not send data fast enough to the system packet buffer memory to receive packets from the network.

### **L & F bits not set**

On serial interfaces, the hardware sets input-descriptor information for arriving frames. If the buffer can accept the complete frame upon arrival, the hardware sets both the last and first bits of the frame, indicating that the buffer accepted the complete frame. If either of the bits is not set, the packet is dropped, the L & F bits not set counter is incremented, and the buffer is cleared for reuse.

**Note:** It is unlikely that the L & F bits not set counter will be affected by traffic.

### **aborted frame**

Number of packets received that were aborted by the sender or a line error.

### **Output frame counters:**

#### **DMA/FIFO underrun errors**

Number of times the serial interface card could not retrieve data fast enough from the system packet buffer memory to transmit packets onto the network.

#### **Output aborts sent**

Number of transmissions that were aborted as requested by upper-level software.



---

## Chapter 43. Using the ISDN Interface

This chapter describes the Integrated Services Digital Network (ISDN) interfaces on the IBM 2210. It includes the following sections:

- “ISDN Overview”
- “ISDN Cause Codes” on page 642
- “Sample ISDN Configurations” on page 644
- “Channelized T1/E1” on page 645
- “Requirements and Restrictions for ISDN Interfaces” on page 646
- “Before You Begin” on page 647
- “Configuration Procedures” on page 647.
- “ISDN I.430 and I.431 Switch Variants” on page 653
- “X.31 Support” on page 654

---

### ISDN Overview

The ISDN interface software allows you to establish ISDN connections between routers or from a dial-in user to a router. You can set up the interface to act as a dedicated link or to initiate and accept switched-circuit connections, either on demand, automatically from restart, or on command by the operator.

I.430, I.431, and Channelized T1/E1 are not switched. They are permanent leased-line type connections.

### ISDN Adapters and Interfaces

The following ISDN adapters are available for the 14T, 24T, 24E, and 24M models:

- 1-Port S/T ISDN-BRI
- 4-Port S/T ISDN-BRI
- 4-Port U ISDN-BRI
- 1-Port Channelized E1 120-ohm ISDN-PRI
- 1-Port Channelized T1/J1 ISDN-PRI

The PRI/Channelized adapters have an integrated CSU/DSU, so an external CSU/DSU is not required.

The interfaces are:

- Basic Rate Interface (BRI)

The Basic Rate Interface provides two 64-Kbps (Kilobits per second) bearer (B) channels and one 16-Kbps data (D) channel. The B-channels are used as HDLC frame delimited 64-Kbps pipes. The D-channel is used to set up calls. The D-channel can also be used for X.25 traffic.
- Primary Rate Interface (PRI)

The Primary Rate Interface provides functions that are similar to those provided by the Basic Rate Interface. However, there are some important differences:

  - The PRI adapter does not support multipoint. The BRI adapter does.

## Using ISDN

- The PRI adapter provides T1/J1 or E1 support.
  - T1/J1 supports twenty-three 64-Kbps B-channels and one 64-Kbps D-channel.
  - E1 supports thirty 64-Kbps B-channels and one 64-Kbps D-channel.
- Channelized T1/E1
  - T1/J1 supports up to twenty-four 64-Kbps time slots.
  - E1 supports up to thirty-one 64-Kbps time slots.
  - You can group time slots in 64-Kbps chunks to aggregate bandwidth.

**Note:** If you are upgrading from BRI to PRI from talk 6, you must clear the ISDN and dial configurations first, then bring up PRI and configure for PRI.

- The PRI adapter does not support multipoint.
- The PRI adapter provides T1/J1 and E1 support.
  - T1/J1 supports twenty-three 64-Kbps B-channels and one 64-Kbps D-channel.
  - E1 supports thirty 64-Kbps B-channels and one 64-Kbps D-channel.
- The PRI adapter provides enhanced line ID (LID) support.

## Dial Circuits

There are four types of dial circuits:

- Static circuits (or link)

**Notes:**

1. I.430, I.431, and Channelized T1/E1 are leased line connections and therefore do not dial.
  2. ISDN considers X.25 traffic over the D-channel as a static circuit. However, you could configure the X.25 circuit as a PVC or SVC using the **encapsulator** command under the dial circuit configuration.
- Switched circuits that dial on demand and hang up after a specified idle time
  - WAN restoral circuits that are used only when an assigned primary leased line fails
  - Dial-in circuits are used to provide remote clients access to resources on the network.

When bridging over a dial on demand interface it is recommended that you disable spanning tree for that interface and create MAC filters to filter out all undesired traffic. (The MAC filters would drop all frames that are not destined specific MAC addresses.) This keeps the dial circuit from staying connected due to unwanted traffic.

**Note:** You don't need to add any MAC filters when running BAN traffic on a FR dial-on-demand interface. The BAN software always performs filtering such that the only bridging traffic that will keep a dial-on-demand circuit from hanging up is traffic whose destination MAC address matches the BAN DLCI MAC address.

Add a dial circuit for each potential destination. You can map multiple dial circuits to one ISDN interface. Each dial circuit is a normal serial line network, running Point-to-Point Protocol (PPP), Frame Relay or X.25 (for D-channels only). These protocols are configured to operate over the dial circuits.

**Note:** You can assign a destination name to a **connection list** (add ISDN address) and assign a destination number to each line in the list. When that destination name is called, the numbers in the list are tried one by one until a connection is made or the list is exhausted.

Routable protocols and bridging and routing features cannot communicate directly with an ISDN interface. You need to configure these protocols to run on the dial circuits. This implementation supports the following protocols and features for ISDN dial circuits:

- APPN
- Banyan VINES
- DECnet
- DLSw
- IP
- IPX
- IPv6
- AppleTalk 2
- Bridging (SRB, STP, SR-TB, and SRT)
- Bandwidth reservation
- WAN restoral
- DIALS

## Addressing

To place an ISDN call, specify the telephone number of the destination. To identify yourself to the switch, you need to specify your own telephone number. For ISDN, telephone numbers are called network dial addresses and, for convenience, they are given names called network address names that represent the telephone number.

When you set up an ISDN interface, you add addresses for each potential destination as well as for your own telephone number, which is called the local network address. When you configure a dial circuit, the local network address is obtained from the physical interface configuration and you set a destination address for the circuit.

## Oversubscribing and Circuit Contention

An ISDN PRI T1/J1 interface can support a maximum of 23 active calls, and an ISDN PRI E1 interface can support a maximum of 30 active calls. An ISDN BRI interface can support a maximum of two active calls. Normally, an ISDN BRI can have two active calls, except on the 1S4/1S8/1U4/1U8 models when the WAN is also active. There can be more dial circuits configured on an ISDN interface than active calls supported. This is called oversubscribing. If a dial circuit attempts a call when the ISDN interface has all calls active, there are two possibilities: 1) If the dial circuit has a higher priority than a dial circuit with an active call, the active call will be terminated for the low priority dial circuit and a call will be attempted for the low priority dial circuit and a call will be attempted for the higher priority dial circuit. 2) If the dial circuit does not have a higher priority than any dial circuits with active calls, no call will be made. The router will drop packets sent by protocols on dial circuits that cannot connect to their ISDN destination.

## Using ISDN

**Note:** There is no circuit contention when you are running X.25 over the D-channel because the D-channel is always available for the X.25 connection.

See “Set” on page 675 for more information about priority.

## Cost Control Over Demand Circuits

Dial-on-demand circuits always appear to be in the Up state to the protocols. Most protocols send out periodic routing information that could cause the router to dial out each time the routing information is sent over dial-on-demand circuits. To limit periodic routing updates, configure IP and OSI to use only static routes and disable the routing protocols (RIP, OSPF) over the dial circuits. If you are using IPX, configure static routes and services and disable the routing protocols (RIP, SAP) over the dial circuits. Another option is to configure low-frequency RIP and SAP update intervals, although this does not prevent RIP and SAP from broadcasting routing information changes as they occur. You should also enable IPX Keepalive filtering, which prevents keepalive and serialization packets from continually activating the dial-on-demand link.

## Caller ID and LIDS

If the ISDN service provides the ANI or CallerID (CLID) service by providing the Calling Party Number (CPN) in the ISDN setup message, you can use it to match up dial circuits to the appropriate caller. Otherwise, you must either use a proprietary line identification protocol (LID) or provide circuits that are “ANY INBOUND”.

The LID protocol uses the inbound destination in the dial circuit configuration and LID received to match the calling dial circuit to the receiving dial circuit. The LID protocol is a brief identification protocol initiated by the caller and answered by the receiver. If the caller does not provide the LID message, the receiver may reject the call, if any\_inbound dial circuit is not configured. LID exchanges occur on the B-channel.

When connecting to routes that do not support logical ids (LIDS), you can suppress the LID exchange using the config option under the individual dial circuit.

```
config> set lid_used no
```

On the incoming side, if lid\_used=no, the call is completed and the IBM 2210 does not wait for the LID to come on the B\_channel. Instead, the IBM 2210 tries to use the callerID received. If there is no match on the callerID the IBM 2210 checks to see if an any\_inbound dial circuit is available. If no any\_inbound circuit is available the call is rejected.

On the outgoing side, PPP/FR selftest starts immediately, after B-Channel is allocated.

---

## ISDN Cause Codes

This ISDN implementation specifies a cause code that will stop the router from attempting to establish a connection through an ISDN interface. If the application retries, the router again attempts to establish a connection through this interface and will succeed if the original problem has been corrected. If during the retry the

router encounters the same cause code, the application will not attempt further connection processing through this interface.

Cause code interpretations:

1. If cause0 is not "0x5" ignore the cause code.
2. If cause0 is "0x5" look at cause1. If the high-order (most significant) bit of cause1 is 0N, set it to 0FF.
3. Convert the result to decimal and look up the meaning in the following table, which is taken from *ITU-T Recommendation Q.850*.

Table 81. ISDN Q.931 Cause Codes

Code	Cause
1	Unallocated (unassigned number)
2	No route to specified transit network
3	No route to destination
6	Channel unacceptable
7	Call awarded and is being delivered in an established channel
16	Normal call clearing
17	User busy
18	No user responding
19	No answer from user (user alerted)
21	Call rejected
22	Number changed
26	Non-selected user clearing
27	Destination out of order
28	Invalid number format (address incomplete)
29	Facility rejected
30	Response to STATUS ENQUIRY
31	Normal, unspecified
34	No circuit/channel available
38	Network out of order
41	Temporary Failure
42	Switching equipment congestion
43	Access information discarded
44	Requested circuit/channel not available
47	Resource unavailable, unspecified
49	Quality of Service not available
50	Requested facility not subscribed
57	Bearer capability not authorized
58	Bearer capability not presently available
63	Service or option not available, unspecified
65	Bearer capability not implemented
66	Channel type not implemented
69	Requested facility not implemented

## Using ISDN

Table 81. ISDN Q.931 Cause Codes (continued)

Code	Cause
70	Only restricted digital information bearer capability is available
79	Service or option not implemented, unspecified
81	Invalid call reference value
82	Identified channel does not exist
83	A suspended call exists, but this call identity does not
84	Call identity in use
85	No call suspended
86	Call having the requested call identity has been cleared
88	Incompatible destination
91	Invalid transit network selection
95	Invalid message, unspecified
96	Mandatory information element is missing
97	Message type nonexistent or not implemented
98	Message not compatible with call state or message type nonexistent or not implemented
99	Information element nonexistent or not implemented
100	Invalid information element contents
101	Message not compatible with call state
102	Recovery on timer expiry
111	Protocol error, unspecified
127	Interworking, unspecified

## Sample ISDN Configurations

The following topics show several typical ISDN configurations.

### Frame Relay over ISDN Configuration

Figure 37 shows how you can connect to a Frame Relay network through an ISDN network. In this configuration, you set the data link on your dial circuits to Frame Relay.

**Note:** Dial circuits default to point-to-point (PPP) protocol. To change the protocol to Frame Relay, enter **set data-link fr** at the Config> prompt. A connection will only be usable if the data link on both ends matches (for example, either FR to FR, or PPP to PPP).

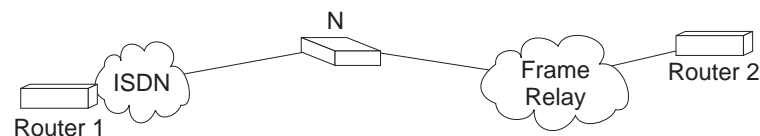 


Figure 37. Frame Relay over ISDN Configuration

**Note:** N could be either an ISDN TA connected to the FR switch, or an ISDN card in a FR switch.

## WAN Restoral Configuration

Figure 38 shows how you can use an ISDN connection to back up a failed dedicated WAN link (WAN restoral). In this example, Router A normally uses the WAN link to communicate with Router B. If that connection fails, the ISDN dial-up link reconnects the two routers. When the WAN link recovers, the secondary link automatically disconnects. For more information on how to configure the router for WAN restoral, see Using WAN Restoral in *Using and Configuring Features*.

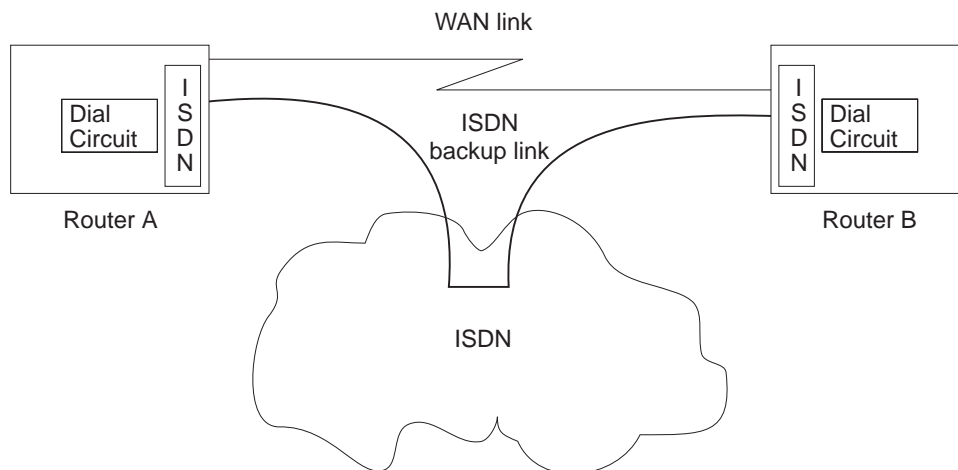 


Figure 38. Using ISDN for WAN Restoral

For WAN Restoral, only dial circuits configured for PPP can be used as the secondary link. For WAN Reroute, either a PPP dial circuit or a FR dial circuit can be used as the alternate link.

---

## Channelized T1/E1

When configured for channelized, the Channelized/PRI adapter allows you to get Fractional/Channelized T1/J1/E1 support. You can have channels of 56-Kbps or  $N \times 64$ -Kbps. This will let you multiplex multiple leased lines connections (for example: using V.35 at 56-Kbps) into one physical connection.

To configure a T1 or E1 Primary adapter as channelized:

1. Select "Channelized" as the switch variant for the ISDN interface.
2. Configure the time slots to be used for this ISDN interface when you configure the dial circuit. See "Set" on page 675 for more information.

### Example of configuring a Channelized T1 interface:

```
Config>n 6
ISDN Config>set switch chan
ISDN Config>list
```

#### ISDN Configuration

```
Maximum frame size in bytes      = 2048
Switch Variant/Service Type     = Channelized
Available Timeslots: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
```

```
Config>n 7
```

## Using ISDN

```
Circuit config: 7>set net 6
Circuit config: 7>set timeslot 2 3 4 24
Circuit config: 7>list

Base net                = 6
Idle character          = 7E
Bandwidth               = 64 Kbps
Timeslot                = 2 3 4 24
```

**Note:** If this were an E1 circuit, the available timeslots would be 1 to 31.

---

## Requirements and Restrictions for ISDN Interfaces

### Router

The ISDN software requires the following models of the IBM 2210:

- 127
- 128
- 14T
- 24E - requires an ISDN adapter
- 24T - requires an ISDN adapter
- 24M - requires an ISDN adapter
- 1S4
- 1S8
- 1U4
- 1U8

### Switches/Services Supported

The ISDN Basic Rate Interface (BRI) supports the following switches/services:

- AT&T 5ESS (North America)
- DMS100 (North America)
- USNI1 (North America National ISDN1)
- USNI2 (North America National ISDN2)
- NET 3 (European ETSI)
- INS-Net 64 (Japan)
- VN3 (France Telecom)
- AUS TS 013 (Australia)
- I.430 (See "ISDN I.430 and I.431 Switch Variants" on page 653.)

The ISDN Primary Rate Interface (PRI) supports the following switches/services:

Switch names	Valid command
AT&T 5ESS (North America)	5ESS
AT&T 4ESS (North America)	4ESS
Australia (AUSTEL)	AUSPRI
INS-Net 1500 (Japan, NTT)	INSPRI
National ISDN 2 (North America)	USNI2
NET 5 (Euro-ISDN, ETSI)	NET5
Northern Telecom DMS (DMSPRI)	DMSPRI
Native I.431	I431 (See "ISDN I.430 and I.431 Switch Variants" on page 653.)



Switch names	Valid command
Channelized T1/E1	CHANNELIZED

## ISDN Interface Restrictions

- You cannot boot or dump the router over an ISDN interface.
- Except for BRI, which allows you to use the D-channel for X.25 packet data, you cannot use the D-channel for data traffic. Normally the D-channel is used only for setting up and taking down B-channel connections.

## Dial Circuit Configuration Requirements

You need to consider the following when you configure PPP or Frame Relay with ISDN:

- The ISDN interface will not enforce transmit delay counters that you set in the PPP configurations.
- Do not enable pseudo-serial-ethernet on the dial circuit.

---

## Before You Begin

Before you configure ISDN, you need the following information:

- Telephone number of the local ISDN port.
- Destination telephone numbers, including any telephone extensions.
- Type of switch to which the ISDN interface is connected. See “Switches/Services Supported” on page 646 for the list of switches.

**Note:** Additional parameters, such as TEI and SPID may be required based on your Switch Type and your service provider.

---

## Configuration Procedures

This section describes how to configure your ISDN interface and its associated dial circuits. Specifically, the tasks you need to perform are:

1. Adding ISDN addresses
2. Configuring ISDN parameters
3. Configuring the ISDN Interface (PRI only)
4. Adding dial circuits
5. Configuring dial circuits

**Note:** You must restart the router for configuration changes to take effect.

## Adding ISDN Addresses

You need to add an ISDN address for each ISDN interface as well as for each destination. The ISDN address includes:

- *Address Name.* The address name is a description of the address. You can use any string of up to 23 printable ASCII characters.
- *Network Dial Address.* Telephone number of the local or destination port. You can enter up to 25 numbers as well as 6 characters, including punctuation. The router uses only the numbers.

## Using ISDN

- *Network Subdial Address*. Optional. This is an additional part of telephone number, such as an extension, that is interpreted once the interface connects to a PBX. You can enter up to 20 numbers, as well as 11 additional spaces and punctuation. The router uses only the numbers.

To add an ISDN address, enter the **add isdn-address** command at the Config> prompt. For example:

```
Config>add isdn-address
Assign address name [23] chars []? baltimore
Assign network dial address [1-15 digits] []? 1-555-0983
Assign network subdial address [1-20 digits] []? 23
```

To see a list of your ISDN addresses, enter **list isdn-address** at the Config> prompt.

To delete an ISDN address from your list, enter the **delete isdn-address** command at the Config> prompt.

## Configuring ISDN Parameters

Access the ISDN Config> prompt. To access the ISDN Config> prompt, enter the **network** command followed by the interface number of the ISDN interface at the Config> prompt. For example:

```
Config>network 3
ISDN user configuration
ISDN Config>
```

You can use the **list devices** command at the Config> prompt to display a list of interface numbers configured on the router. See “ISDN Configuration Commands” on page 655 for more information about configuration commands.

1. Specify the type of switch/service to which this ISDN interface is connected. Use the **set switch-variant** command to specify the type of switch to which this ISDN interface is connected. See “Switches/Services Supported” on page 646 for the list of switches/services. For example:

```
ISDN Config>set switch net5
```

This is the software type running at the switch (for example, DMS100 means running DMS100 Custom software).

2. Specify the network address name of the local port. Use the **set local-address-name** command to specify the network address name of the local port. You must use one of the address names you defined using the **add isdn-address** command. For example:

```
ISDN Config>: set local-address-name
Assign local address name []? baltimore
```

**Note:** This is what we will send in the Calling Party Number field of the ISDN Setup message.

3. Set the directory number of the local port. DNO is what the ISDN service provider is placing in the Called Party Number field in an ISDN setup message. This field is used for incoming calls only. If no DNO is configured, the router will answer any call made to it without checking the DNO field. If you have added a DNO field, you must use the **remove dn0** command to remove it. You cannot just blank it out with another set command.

```
ISDN Config>set dn0
Enter DNO (Directory-Number-0) [ ]?15550983
```

- For BRI only, set the ISDN interface to either point-to-point (pp) or multipoint (mp).

Point-to-point is one ISDN device on an ISDN line. Multipoint is two or more ISDN devices sharing an ISDN line. With some switch variants, you must configure the line as multipoint regardless of how many devices are on it. Check with your ISDN service provider.

```
ISDN Config>set multi-point-selection
Multipoint Selection [MP]? pp
```

**Note:** PRI is not configurable, it is always point-to-point.

- For BRI only, if you are connected to a U. S. switch variant, your service provider may require a Service Profile ID (SPID).

The SPID is a number up to 20 digits long that uniquely identifies the ISDN device. Your ISDN service provider assigns SPIDs. You must get the SPID number from your service provider.

```
ISDN Config>set spid
Enter BChannel Number [1]? 1
Enter Service Profile ID (SPID) []? 9195555550101
```

- For BRI only, set the Terminal Endpoint Identifier (TEI) to match the signalling TEI number of your ISDN switch.

Check with your service provider to find out which TEI signalling the switch supports. The default TEI is auto. If the switch to which your ISDN interface is connected does not support automatic TEI signalling, you must set the TEI to a value from 0 to 63, assigned by your provider.

If you are connected to a 5ESS or USNI1 BRI switch, you must set the TEI for each B-channel. The **set tei** command prompts you for a B-channel number.

```
ISDN Config>set tei
TEI [AUTO]? 10
```

**Note:** TEI for a PRI is always 0.

If you are using X.25 on the D-channel, you must configure a separate TEI for the D-channel. For example:

```
ISDN Config>set tei 2
TEI 2 []? 21
```

- To set the frame size, use the **set framesize** command. For example:

```
ISDN Config>set framesize
Framesize in bytes (1024/2048/4096/8192) [1024]? 2048
```

**Note:** If you choose a frame size of 1024, PPP will not work over the ISDN dial circuit, since the minimum frame size for PPP is 1500.

For more information about setting the ISDN framesize, see "Set" on page 657.

## Optional ISDN Parameters

This section describes optional ISDN parameters you can set. For a complete description of these commands see "ISDN Configuration Commands" on page 655.

- For all ISDN switches except INS64, you can configure the limit for the number of calls to an address. Use the **set retries-call-address** command to set the number of calls to a non-responding destination. Use the **set timeout-call-address** command to set the time period to wait before trying the call again.

## Using ISDN

When you have finished configuring the ISDN interface, you can use the **list** command to display your configuration.

## Configuring the ISDN Interface

### T1/J1 PRI Interface

Specify the following T1/J1 parameters:

1. For the T1/J1 PRI interface, line build out specifies the attenuation of the signal transmitted by the router's T1 port. Specify the `lbo` (line build out) based on the information provided by the service provider.

`a= -00.0 dB`

`b= -07.5 dB`

`c= -15.0 dB`

`d= -22.5 dB`

For example:

```
set int lbo a
```

2. Specify the code, either B8ZS or AMI. B8ZS is default. The service provider provides this information.

For example:

```
set int code AMI
```

3. Specify ZBTSI- Zero Byte Time Slot Inversion, either ENABLED or DISABLED. The default is DISABLED. The service provider provides this information.

For example:

```
set int ZBTSI enabled
```

4. Specify the `esf-data-link`. Select one of the following based on the service subscription:

**ANSI-T1.403 ANSI-IDLE AT&T-IDLE**

Default is ANSI-T1.403

For example:

```
set int esf-data-link ansi-idle
```

### E1 PRI Interface

For the E1 PRI interface, specify the following parameters:

1. Specify the code, either HDB3 or AMI. HDB3 is default. The service provider provides this information.

For example:

```
set int code HDB3
```

2. Specify the `crc4`, either ENABLED or DISABLED. Default is ENABLED. The service provider provides this information.

For example:

```
set int crc4 enabled
```

## Adding Dial Circuits

Dial circuits are mapped to ISDN interfaces. You can map multiple dial circuits to one ISDN interface.

To add a dial circuit, enter the **add device dial-circuit** command at the Config> prompt. The software assigns an interface number to each circuit. You will use this number to configure the dial circuit. For example:

```
Config>add device dial-circuit
Enter the number of PPP Dial Circuit interfaces [1]?
Adding device as interface 6
Base net for the circuits(s) [0]?
```

The number of dial circuits that can be configured depends on the total number of parameters to be configured and the size of the resulting configuration file.

**Note:** Dial circuits default to point-to-point (PPP) protocol. To change the dial circuit protocol to Frame Relay, enter the **set data-link fr** command at the Config> prompt. To change the dial circuit protocol to X.25, enter the **set data x25** command at the Config> prompt. Other data-link types (SDLC and SRLY) are not supported over ISDN.

## Configuring Dial Circuits

This section describes how to configure a dial circuit.

1. Display the Circuit Config> prompt by entering the **network** command followed by the interface number of the dial circuit. You can enter the **list devices** command at the Config> prompt to display a list of the interface numbers configured on the router. For example:

```
Config> network 6
Circuit configuration
Circuit Config>
```

2. Map the dial circuit to an ISDN interface. Use the **set net** command. The Base net is the ISDN interface number. (This is needed only if you are changing the base net.) For example:

```
Circuit Config> set net
Base net for this circuit [0]? 3
```

**Note:** If the dial circuit data link type is X.25 or the base net switch variant is 1.43x or channelized, the following steps (3-11 on page 652) do not apply.

3. Specify the address name of the remote router to which the dial circuit will connect. You must use one of the names you defined using the **add isdn-address** command. For example:

```
Circuit Config> set destination
Assign destination address name []? baltimore
```

4. Configure the dial circuit to initiate outbound calls only, accept inbound calls only, or to both initiate and accept calls.

Use the **set calls** command. For example:

```
Circuit Config> set calls outbound
Circuit Config> set calls inbound
Circuit Config> set calls both
```

**Note:**

5. Specify the timeout period for the circuit. Use the **set idle** command. If there is no traffic over the circuit for this specified time period, the dial circuit hangs up. To configure the circuit as a dedicated circuit, set the idle timer to zero. To configure the circuit to dial on demand, set the idle timer to a value other than zero. The range is 0 to 65535 and the default is 60 seconds. For example:

## Using ISDN

```
Circuit Config> set idle
Idle timer (seconds, 0 means always active) [0]? 0
```

**Note:** WAN restoral/reroute must be fixed.

6. Optionally, you can provide a LID name to send (instead of the default LID, which is the destination name) by specifying a `lid_out_addr`.

When more than one circuit is configured between two routers (parallel circuits), there must be a way to know which dial circuit connects them. For this purpose, a `lid_out_addr` is sent from the router at one end (the caller). The receiving router must have an inbound destination address that matches the `lid_out_address` on the sending router in order for the dial circuits to connect. The `lid_out_addr` must be an address name that has been previously added using "ADD ISDN-ADDRESS" at the **config**> prompt.

```
Circuit Config> set lid_out_addr router2
```

7. Optionally, you can set the relative priority of dial circuits.

The priority field allows a circuit to preempt another when no channels are available. If an outbound call is made and all the channels are in use, then the priority of the requesting dial circuit is checked against all the active dial circuits. If there is one whose priority is lower than this, then that circuit is disconnected and a call is made for the higher priority dial circuit.

**Note:** Only outbound dial-on-demand circuits will be brought down.

See "Set" on page 675 for more information about priority.

```
Circuit Config> set priority 1
```

8. Optionally, you can delay the time between when a call is established and the initial packet is sent. Use the **set selftest-delay** command. Some ISDN switches start to send data before receiving a signal indicating the complete establishment of the circuit at the destination. Setting a selftest delay can prevent initial packets from being dropped. For example:

```
Circuit Config> set selftest-delay
Selftest delay(milli-seconds,0 means no delay) [150]?200
```

9. Set the inbound address name.

Use the **set inbound** command. This command is for inbound circuits only. For example:

```
Circuit Config> set inbound
Assign destination inbound address name [ ]? newyork
```

The inbound destination number is used to match the incoming LID or CallerID with the dial circuit. If there is a match that dial circuit gets the call.

10. Optionally, you can enter the configuration process for the data-link layer protocol that is running on the dial circuit (PPP or Frame Relay).

Use the **encapsulator** command. For example:

```
Circuit Config> encapsulator
```

11. Optionally, you can use the **set bandwidth** command to set the line speed at which to make the call (either 56-Kbps or 64-Kbps). This provides per-call control for ISDN interfaces. For example:

```
Circuit Config> set bandwidth 56Kbps
```

## ISDN I.430 and I.431 Switch Variants

To use the Native I.430 mode that is supported in Japan and is known as D64S in Germany, you must code the ISDN switch variant as I.430. This treats the ISDN interface like a leased line. There is no D-channel signalling traffic in this mode.

Code the switch variant as I.431 when running a leased line over ISDN PRI (T1/J1 only).

### Native I.430 Support

Only one dial circuit is allowed per I.430 base net. You can configure the speed to either 64-Kbps, 80-Kbps, 128-Kbps, or 144-Kbps using the `set bandwidth` command. On models 1S4, 1S8, 1U4, and 1U8, if WAN and ISDN are both active, this is restricted to 64-Kbps only. See “Set” on page 657 to configure the bandwidth command.

#### Example: Base ISDN Net

```
Config> n 6
ISDN Config> set switch i430
ISDN Config> list all
```

#### ISDN Configuration

```
Maximum frame size in bytes = 2048
Switch Variant              = I430 BRI
PS1 detect                  = Enabled
```

#### Example: Dial Circuit

```
Config>n 7 ----- DIAL CIRCUIT (CAN ONLY BE ONE FOR I430)
Circuit config: 7>
Circuit config: 7>set net 6
Circuit config: 7>set bandwidth 128
Circuit config: 7>list all
```

```
Base net                    = 6
I430 BRI Bandwidth          = 128 kbs
```

### Native I.431 Support

When configuring for Native I.431 support, only one dial circuit should be used. It should be attached to the base net. The I.431 runs only on the ISDN PRI T1 adapter. The speed is fixed at 1.5 Mbps.

**Note:** The multiport ISDN PRI adapters do not support the I.431 switch variant. To utilize a full PRI line, select the channelized variant and assign all the timeslots to one dial circuit.

#### Example: Base ISDN net

```
Config> n 5
ISDN Config> set sw i431
ISDN Config> list all
```

#### ISDN Configuration

```
Maximum frame size in bytes = 2048
Switch Variant              = I431 PRI
```

#### Example: Dial Circuit

## Using ISDN

```
Config> n 6  
Circuit config: 6>set net 5  
Circuit config: 6>list all
```

Base net = 5

---

## X.31 Support

The ITU Standard X.31 is for transmitting X.25 packets over ISDN. This standard provides support for X.25 with Unconditional Notification on the ISDN BRI D-channel.

X.31 is available from service providers in several countries. It gives the router a 9600bps X.25 circuit. Since the D-channel is always present, this condition can be an X.25 PVC or SVC.

An X.31 example is, when a packet handler is provided by the ISDN service provider, the X.25 packets and LAP/B frames (RRs, SABMEs, etc.) will be transmitted and received on the D-channel along with the ISDN signaling (Q931/Q921) messages. The D-channel provides a connection that enables the ISDN user terminal to access the packet handler function within the ISDN by establishing a link layer connection (SAPI=16) to that function which can then be used to support packet communications according to X.25 layer 3 procedures. Maximum frame transfer size is 260 bytes.

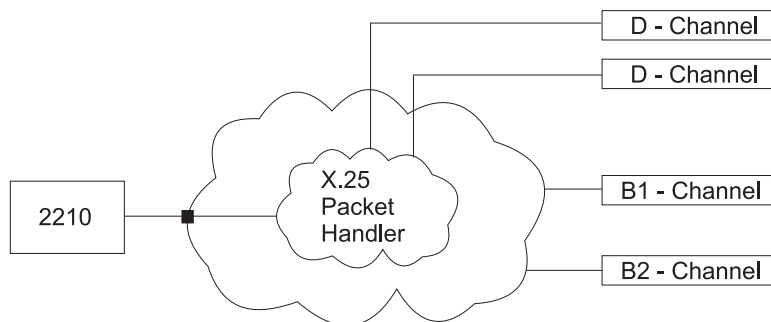 


Figure 39. X.31 Support

### Example:

```
Config>n 6  
Config>set data x25 6  
Circuit config: 6>set net 5  
Circuit config: 6>list all
```

Base net = 5

**Note:** You should assign an X.25 TEI or specify Auto on the BRI base net. The default value is none.



---

## Chapter 44. Configuring and Monitoring the ISDN Interface

This chapter describes the ISDN commands and GWCON commands. It includes the following sections:

- “ISDN Configuration Commands”
- “Accessing the Interface Monitoring Process” on page 663
- “ISDN Monitoring Commands” on page 663
- “ISDN and the GWCON Commands” on page 669

### Notes:

1. ISDN interfaces have both ELS messages and cause codes that you can use to monitor ISDN-related activity. See *Event Logging System Messages Guide*
2. The ISDN, Q931, CEME, LAPD, and DIAL ELS subsystems are available.

---

## ISDN Configuration Commands

Table 82 describes the ISDN configuration commands, and the following sections explain the commands. Enter these commands at the ISDN Config> prompt.

Table 82. ISDN Configuration Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Block-calls	Blocks incoming calls from a specific caller.
Disable	Valid only for BRI. Disables Power Source 1 detection.
Enable	Valid only for BRI. Enables Power Source 1 detection.
List	Displays the ISDN configuration.
Remove	Removes DN0 entries from the ISDN configuration.
Set	Sets the frame size, local address, no-answer timeouts, number of retries after no answer, type of ISDN switch, directory numbers, SPIDS, TEI and bandwidth.
Cause Code	Stops further processing attempts to establish a connection through an interface.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

## Block-Calls

Use the **block-calls** commands to block incoming calls. Caller numbers to be blocked must be added to the authentication list. The maximum number of caller blocked calls is 16 per interface.

Call block can be used for:

- An unsolicited call being constantly received.
- Network bringup/test where you need to ignore certain calls.

### Syntax:

```
block-calls          add  
                        list
```

## ISDN Configuration Commands

remove

**Add** Adds a caller's number to be blocked.

**List** Lists the callers' numbers to be blocked.

**Remove**

Removes a caller's number for the list to be blocked.

## Disable

The **disable** command disables Power Source 1 detection. If your switch does not supply Power Source 1, you should disable PS1.

**Note:** This command is valid only for BRI.

**Syntax:**

disable ps1

**Note:** On the U interface ISDN BRIs, there is no ps1 detect circuitry and the value of this field is ignored.

## Enable

The **enable** command enables Power Source 1 detection. If your ISDN switch supplies Power Source 1 (PS1), you should enable PS1 on the interface. This causes the interface to detect when the switch shuts down and to clear all information about the last call before it reestablishes the connection. For Euro-NET3 switches supporting restricted power mode, PS1 must be enabled.

Do not enable PS1 if your switch does not supply Power Source 1.

**Note:** This command is valid only for BRI.

**Syntax:**

enable ps1

**Note:** On the U interface ISDN BRIs, there is no ps1 detect circuitry and the value of this field is ignored.

## List

The **list** command displays the current ISDN configuration.

**Syntax:**

list

**Example: list**

```
ISDN Configuration
Local Network Address Name = line-1-local
Local Network Address     = 1-508-555-1234
Local Network Subaddress  = 21
Maximum frame size in bytes = 2048
Outbound call address Timeout = 180 Retries = 2
Switch-Variant-Model      = US National ISDN-1
Multipoint Selection      = Point-to-Point
DN0 (Directory Number 0) = 5551234
```

## ISDN Configuration Commands

```
DN1 (Directory Number 1)      = 5553456
Service Profile ID (B1)       = 91955555550100
Service Profile ID (B2)       = 91955555550101
TEI for B-Channel 1           = Automatic
TEI for B-Channel 2           = Automatic
TEI for X.25                   = Automatic
PS1 detect                     = Disabled
```

No circuit address accounting information being kept.

## Remove

The **remove** command lets you remove DN0 or DN1 entries that you set previously with the **set DN0** or **set DN1** command.

### Syntax:

```
remove          DN0-entry...
```

### Example:

```
remove DN0
```

## Set

The **set** command configures frame size, addresses, and timeouts. It also specifies the switch-variant and TEI number. For PRI, the terminal endpoint identifier (TEI) is always zero (0).

### Syntax:

```
set          framesize...
              frame-type2
              interface
              local-address-name...
              multipoint-selection1...
              RAI-type2
              retries-call-address...
              service-profile-id1...
              timeout-call-address1...
              switch-variant...
              dn0...
              dn1...3
              tei1...
```

### framesize 1024 or 2048 or 4096 or 8192

Sets the size of the network layer portion of frames transmitted and received on the ISDN interface. Data link and MAC layer headers are not

---

1. BRI only

2. Channelized only

3. PRI only

## ISDN Configuration Commands

included. You must set the ISDN frame size so that it is greater than or equal to the frame size configured for the dial circuits using the ISDN interface.

For PPP dial circuit interfaces, you can change the PPP MRU using the **set lcp options** command. The ISDN frame size must include enough bytes for the PPP MRU and the PPP header.

**Note:** If you choose a frame size of 1024, PPP will not work over the ISDN dial circuit, since the minimum frame size for PPP is 1500.

For FR dial circuit interfaces, you can change the frame size using the **set framesize** command. The ISDN frame size must be greater than or equal to the FR frame size.

If a dial circuit's frame size is greater than the ISDN frame size, then the dial circuit's frame size is decreased at router initialization.

### Example:

```
set framesize
Framesize in bytes (1024/2048/4096/8192) [1024]? 2048
```

### frame-type

Choices are D4 or ESF. This specifies the T1 multiframe format. Only ESF is supported for non-channelized mode. Frame type is configured under the base ISDN net menu.

### Example:

```
set frame-type
Circuit config: 10>set frame type
```

### interface

For PRI only. Sets the following interface parameter values for T1 and E1 lines.

#### For T1 PRI:

**lbo** The attenuation of the signal transmitted by the router's T1 port. This information is provided by the service provider.

#### Valid Values:

a= -00.0 dB

b= -07.5 dB

c= -15.0 dB

d= -22.5 dB

#### Default Value: a

**code** This information is provided by the service provider.

#### Valid Values: B8ZS or AMI

#### Default Values: B8ZS

**ZBTSI** Zero Byte Time Slot Inversion. This information is provided by the service provider.

#### Valid Values: Enabled or Disabled

#### Default Value: Disabled

### **esf-data-link**

The service subscription. This information is provided by the service provider.

#### **Valid Values:**

ANSI-T1.403  
ANSI-IDLE  
AT&T-IDLE

**Default Value:** ANSI-T1.403

### **For E1 PRI:**

**code** This information is provided by the service provider.

**Valid Values:** HDB3 or AMI

**Default Value:** HDB3

**crc4** Specifies whether the router's E1 port will transmit crc4 code words and check them in the received frames. This information is provided by the service provider.

**Valid Values:** Enabled or Disabled

**Default Value:** Disabled

### **local-address-name** *address name*

This is the network address name of the local ISDN interface. This address name must match one of the names that you defined at the Config> prompt using the **add isdn-address** command.

**Valid Values:** Any valid address

**Default Value:** None

#### **Example:**

```
set local-address-name  
Assign local address name []? line-1-local
```

### **multipoint-selection [mp or pp]**

For BRI only. Sets the ISDN physical bus to either point-to-point (pp) or multipoint (mp) configuration. Point-to-point is one ISDN device on an ISDN line. Multipoint is two or more ISDN devices sharing an ISDN line.

Some service providers require that you configure the line as multipoint regardless of how many devices are on the line. Check with your ISDN service provider.

#### **Example:**

```
set multipoint-selection  
Multipoint Selection [PP]? mp
```

### **RAI-type**

Choices are ANSI or Japanese. This specifies the method of indicating RAI on the T1 line when using D4 framing. ANSI RAI is indicated by a value of 0 in bit 2 of all channels. Japanese RAI is indicated by a value of 1 in the S-bit position of frame 12. RAI type is configured under the base ISDN net menu.

### **retries-call-address** *value*

Some telephone service providers impose restrictions on automatic recalling devices to limit the number of successive calls to an address that is inaccessible or that refuses those calls. **Retries-call-address** specifies the

## ISDN Configuration Commands

maximum number of calls the router attempts to make at one time. Setting **retries-call-address** to 0 causes the router to bring up all circuits at once.

If you set the switch-variant to INS64, you cannot change the **retries-call-address** default. It is fixed at 2.

**Valid Values:** 0 to 30

**Default Value:** 23 (2 for BRI)

### **service-profile-id B-channel# spid#**

For BRI only. Sets the service profile ID (SPID) for each B-channel. SPIDs are used in the United States to uniquely identify a particular ISDN device. This ID is a number up to 20 digits long and is assigned by ISDN service providers. SPIDs are used predominantly in a multipoint bus configuration where multiple ISDN devices share a single ISDN line. Check with your service provider to determine whether or not you are required to use a SPID.

#### **Example:**

```
set spid
Enter B-Channel Number [1]? 1
Enter Service Profile ID (SPID) [123]? 9195555550100
```

### **timeout-call-address # of seconds**

After the router reaches the maximum number of **retries-call-address** to a non-responding address, it does not make further calls to that address until this time has expired. The timeout period begins when the router attempts the first call to an address. Setting **timeout-call-address** to 0 causes the router to retry until the call is established.

If you set the switch-variant to INS64, you cannot change **timeout-call-address**. It is fixed at 180.

**Valid Values:** 0 to 65535 seconds

**Default Value:** 180 seconds

#### **Example:**

```
set timeout-call-address
Outbound call address Time-out (secs) [0]? 180
```

### **switch-variant**

Specifies the model of the switch to which this ISDN interface is connected. You can choose switch-variants/service type for the ISDN Basic Rate interface or the ISDN Primary Rate interface from the following lists.

#### **Valid Values Basic Rate Interface (BRI):**

- AT&T 5ESS (North America)
- DMS100 (North America)
- USNI1 (North America National ISDN1)
- USNI2 (North America National ISDN2)
- NET 3 (European ETSI)
- INS 64 (Japan)
- VN3 (France Telecom)
- AUS TS 013 (Australia)
- Native I.430

**Default Value:** NET 3

**Valid Values ISDN Primary Rate Interface (PRI)/Channelized T1/E1:**

- AT&T 5ESS (North America)
- AT&T 4ESS (North America)
- Australia (AUSTEL)
- INS-Pri (Japan, NTT)
- National ISDN 2 (North America)
- NET 5 (Euro-ISDN, ETSI)
- Northern Telecom 250 (DMSPRI)
- Native I.431
- Channelized T1/E1

**Default Value:** DMSPRI

### **dn0** *directory number 0*

To accept inbound calls **DN0** must match the network dial address (telephone number) you configured using the **set local-address-name** command. If DN0 is not configured no check is made and all calls will be accepted. If the switch does not provide the called party number in the incoming setup message, DN0 should not be configured. See on page 661 for additional information.

#### **Example:**

```
set dn0
Enter DN0 (Directory-Number-0) [ ]? 5088981234
```

### **dn1** *directory number 1*

DN1 is a secondary directory number supported by NET3, VN3 and AUS, switch variants. If DN1 is not configured no check is made and all calls will be accepted. If the switch does not provide the called party number in the incoming setup message, DN1 should not be configured. See on page 661 for additional information.

### **tei** *auto or none or value*

For BRI or X.25 over D-Channel only. This command sets the signalling TEI (terminal endpoint identifier) for the ISDN interface. This setting must match the signalling TEI of your switch. For PRI, the TEI is always set to zero (0). Check with your service provider to find out the correct TEI signal. The default is auto. Change this setting only if your switch does not support automatic TEI signalling. The valid settings for TEI are auto or a value from 0 to 63. If you set the TEI to none, you will disable the ISDN interface.

USNI-1 and 5ESS switches require that you set the TEI for each B-channel. If you set the switch variant to one of those switches, the **set tei** command prompts you for a B-channel number. See on page 661 for additional information.

#### **Example 1:**

```
set tei
TEI [AUTO]? 60
```

#### **Example 2:**

```
set tei
TEI 0 or TEI 1 [1]? 1
TEI [AUTO]?
```

#### **Example 3:**

```
set tei 2
TEI []? 21
```

**Note:** This applies to all Basic Rate ISDN switch variants:

## ISDN Configuration Commands

- DN0 and DN1 are used to verify that the incoming call is being delivered to the correct ISDN destination.
- If the destination number (Called Party Number) in the ISDN call being delivered does not match either DN0 or DN1, then the call is rejected.
- If the user wishes to bypass the destination verification checking, then do not configure either DN0 or DN1. If the ISDN line provisioning has only one DN, and the user wishes to use the destination verification then you must configure DN0. Do not configure DN1 unless the ISDN line is provisioned for two DNs.
- When configuring the SPIDs and TEIs, always be sure to configure the first SPID (SPID[0]) and TEI (TEI[0]). It will cause errors if you have a SPID[1] or TEI[1] configured without SPID[0] or TEI[0] configured.

## Cause Code

Use the **Cause Code** command to prevent the router from retrying to establish a connection through the ISDN interface when it receives a “specified” (valid value) response. Enter these commands at the Cause Config> prompt.

### Syntax:

```

cause code                ? (Help)
                               _add
                               _list
                               _remove
                               _exit
  
```

Table 83. ISDN Cause Codes Command Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Add	Adds cause code entries to the ISDN configuration.
List	Displays the cause code lists for the ISDN configuration.
Remove	Removes cause code entries from the ISDN configuration.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

**Add** Use the **add** command to add a cause code to an ISDN configuration.

**Valid Values:** Any hexadecimal value between 01 and FF

**Default Value:** None

**Syntax:** cause code add *value*

**Example:** add FF

**List** Use the **list** command to show the cause code list of an ISDN configuration.

**Syntax:** cause code list

### Remove

Use the **remove** command to remove a cause code from an ISDN configuration.

**Valid Values:** Any hexadecimal value between 01 and FF



**Default Value:** None

**Syntax:** cause code remove *value*

**Example:** remove FF

---

## Accessing the Interface Monitoring Process

To access the interface monitoring process for ISDN, enter the following command at the GWCON (+) prompt:

```
+ network #
```

Where # is the number of the ISDN interface. You cannot directly access the monitoring process for dial circuits, but you can monitor the dial circuits that are mapped to the ISDN interface.

---

## ISDN Monitoring Commands

The following sections explain the ISDN operating commands which allow you to view the accounting entries, calls, circuits, parameters, and statistics of the ISDN interfaces. Enter these commands at the ISDN> prompt.

*Table 84. ISDN Monitoring Command Summary*

Monitoring Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Block-calls	Blocks incoming calls from a specific caller.
Calls	Displays the number of completed and attempted connections made for each dial circuit mapped to this interface since the last time statistics were reset on the router.
Channels	Displays the statistics for the channels on the ISDN Primary Rate Interface.
Circuits	Displays the status of all data circuits configured on the ISDN interface.
Dial-dump	Displays the operation characteristics of the specified dial circuit.
L2_counters	Lists the L2/L1 states along with some L2 counters.
L3_counters	Lists counters of set ups sent/received/accepted.
TEI	Lists status of TEI's (BRI only)
Parameters	Displays the current parameters for the ISDN interface.
Signaling-L3	This command is to be used only by product support personnel.
Statistics	Displays the current statistics for the ISDN interface.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.

## Block-Calls

Use the **block-calls** commands to block incoming calls. Caller numbers to be blocked must be added to the authentication list. The maximum number of caller blocked calls is 16 per interface.

**Syntax:**

```
block-calls                add
```

## ISDN Monitoring Commands

list

remove

**Add** Adds a caller's number to be blocked.

**List** Lists the callers' numbers to be blocked.

### **Remove**

Removes a caller's number for the list to be blocked.

## Calls

Use the **calls** command to list the number of completed and attempted connections made for each dial circuit mapped to this interface since the last time statistics were reset on the router.

### **Syntax:**

calls

### **Example:**

```
calls
Net Interface Site Name      In   Out  Rfsd  Blckd
  4   PPP/1  v403                2    0    0     0
```

Unmapped connection indications: 0

**Net** Number of the dial circuit mapped to this interface.

### **Interface**

Type of interface and its instance number.

### **Site Name**

Network address name of the dial circuit.

**In** Inbound connections accepted for this dial circuit.

**Out** Completed connections initiated by this dial circuit.

**Rfsd** Connections initiated by this dial circuit that were refused by the network or the remote destination port.

**Blckd** Connection attempts that the router blocked. The router blocks connection attempts if all available channels are in use, if the maximum retries are used up and the router is waiting for the timer to count down, or if layer 1 is up, but layer 2 is down.

### **Unmapped connection indications:**

Connection attempts that were refused by the router because there were no enabled dial circuits that were configured to accept the incoming calls.

## Channels

The **channels** command lists the statistics for a channel on the ISDN Primary Rate Interface.

### **Syntax:**

channels

## Circuits

The **circuits** command shows the status of the dial circuits configured on the ISDN interface that are in the state of “Up” or “Available”.

### Syntax:

#### circuits

### Example:

```

circuit
Net Interface  MAC/Data-Link  State   Reason   Duration
4   PPP/1     Point to Point  Up B1   SelfTest 91:24:03
5   PPP/2     Point to Point  Up B2   Inbound  91:24:00

```

**Net** Number of the dial circuit mapped to this interface

### Interface

Type of interface and its instance number.

### MAC/Data-Link

Type of data-link protocol configured for this dial circuit.

**State** Current state of the dial circuit:

**Up** Currently connected.

### Available

Not currently connected, but available.

### Disabled

Dial circuit disabled.

**Down** Failed to connect because of a busy dial circuit or because the link-layer protocol is down.

### Reason

Reason for the current state:

### nnn\_Data

(Where nnn is the name of a protocol.) The circuit is up because a protocol had data to send.

### Rmt Disc

Remote Disconnect. The circuit is either down or available because the remote destination disconnected the call.

### Opr Req

Operator Request. The circuit is available because the last call was disconnected by a monitoring command.

### Inbound

The circuit is up because the circuit answered an inbound call.

### Restoral

The circuit is up because of a WAN-Restoral operation.

### Self Test

The circuit was configured as static (idle time=0) and successfully connected once it was enabled.

### Duration

Length of time that the circuit has been in the current state.

## ISDN Monitoring Commands

### Dial-dump

Use the **dial-dump** command to display the operation characteristics of the specified dial circuit.

**Syntax:**

**dial-dump** *circuitname*

### L2\_Counters

Use the **L2\_counters** command to list the L2/L1 states along with some L2 counters.

**Syntax:**

**L2\_counters**

### L3\_Counters

Use the **L3\_Counters** command to list counters of set ups sent/received/accepted.

**Syntax:**  
**L3\_counters**

### TEI

Use the **TEI** command to list the status of TEIs. For BRI only.

**Syntax:**

**parameters**

**Example:**

**parameters**

ISDN Port parameters:

```
Local Address Name:      v1233
Local Network Address:   20
Local Network Subaddress:
Frame Size:              2048
TEI 0:                   Automatic
TEI 1:                   Automatic
X.25 TEI:                21
Switch Variant:         AT&T 5ESS (United States)
Multipoint Selection:    Multipoint
Directory Number 0:      20
Outbound call address Timeout: 180      Retries: 0
```

### Parameters

Use the **parameters** command to display the current ISDN configuration.

**Syntax:**

**parameters**

**Example:**

### parameters

ISDN Port parameters:

```

Local Address Name:      v1233
Local Network Address:  20
Local Network Subaddress:
Frame Size:             2048
TEI 0:                  Automatic
TEI 1:                  Automatic
X.25 TEI:               21
Switch Variant:        AT&T 5ESS (United States)
Multipoint Selection:  Multipoint
Directory Number 0:    20
Outbound call address Timeout: 180      Retries: 0
    
```

## Statistics

Use the **statistics** command to display the current statistics for this ISDN interface.

### Syntax:

#### statistics

#### Example for BRI:

```

statistics
Link: Active   ISDN Firmware: 1.0   Handler State: Running

                D Channel   B1 Channel   B2 Channel

Total Transmits      32788      230217      164336
Total Receives       32789      164342      208255
Transmit Bytes       196767      22797579    6572177
Receive Bytes        196785      6572411     9517221
Invalid Interrupts   0           0           0

Transmit:   D      B1      B2      Receive:   D      B1      B2
Error       0      0      0      Error      0      5      0
Overflow    0      0      0      Overflow   0      0      0
Underrun    0      0      0      Overrun    0      0      0
Abort       0      0      0      Abort      0      5      0
                CRC Error   0      0      0
    
```

#### Example for BRI using I.430:

```

statistics
Link: Active   ISDN Firmware: 0.0   Handler State: Running

Total Transmits      32788
Total Receives       32789
Transmit Bytes       196767
Receive Bytes        196785
Invalid Interrupts   0

Transmit:

Error       0
Overflow    0
Underrun    0
Abort       0

Receive:

Error      0
Overflow   0
Overrun    0
Abort      0
CRC Error  0
    
```

This display shows the current state of the link, the firmware revision, and the state of the dial circuit. It also shows statistics on what was transmitted and received on the interface.

#### Example for PRI with E1:

```

statistics
Link: Active   ISDN Firmware: 1.0   Handler State: Running

Transmit   D Channel   Receive   D Channel

Packets      68422   Packets   68419
Bytes        411656   Bytes     413592
Overflow     23      Overflow   3
Underrun     0      Too Long   6
    
```

## ISDN Monitoring Commands

```

                                Abort          4
                                CRC error       8
                                Misaligned      3

Transmit  B Channels  Receive  B Channels

Packets      1499094  Packets      1499228
Bytes        59955660 Bytes        59951780
Overflow      0       Overflow      90
Underrun     0       Too Long     171
                                Abort          139
                                CRC error     232
                                Misaligned    72

E1 Status Register          E1 Error Count Registers

Receive AIS      : Off  CRC6 Errors:      4
Receive RAI     : Off  LCV Errors:      38
Receive Carrier Loss: Off FEB Errors:      11
Receive Loss of Sync: Off FAS Errors:      24

```

### Example for PRI with T1 using I.431:

```

statistics
Transmit          Receive

Packets          0       Packets          0
Bytes            0       Bytes            0
Overflow         68480   Overflow         0
Underrun         0       Too Long        0
                                Abort            0
                                CRC error         0
                                Misaligned       0

T1 Status Register          T1 Error Count Registers

Receive AIS      : Off  LCV Errors:      0
Receive RAI     : Off  CRC6 Errors:     0
Receive Carrier Loss: Off Sync Errors:    47937328
Receive Loss of Sync: On

T1 PRM Events          Local          Remote

CRC Error              0              0
Controlled Slip        0              0
Line Code Violation    0              0
Frame Sync Bit Error   0              0
Severely Errored Frame 0              0
Payload Loopback Active 0              0
PRMs Processed (1/sec) 0              0

```

### Example for Channelized T1:

```

statistics
Link: Active  ISDN Firmware: 0.0  Handler State: Running

Transmit          Receive

Packets          44       Packets          40
Bytes            1600    Bytes            1520
Overflow          0       Overflow         0
Underrun         0       Too Long        0
                                Abort            0
                                CRC error         0
                                Misaligned       0

T1 Status Register          T1 Error Count Registers

Receive AIS      : Off  LCV Errors:      0
Receive RAI     : Off  CRC6 Errors:     0
Receive Carrier Loss: Off Sync Errors:     0
Receive Loss of Sync: Off
Payload Loopback : Off
Line Loopback   : Off

T1 PRM Events          Local          Remote

CRC Error              0              0
Controlled Slip        0              0
Line Code Violation    0              0
Frame Sync Bit Error   0              0
Severely Errored Frame 0              0
Payload Loopback Active 0              0
PRMs Processed (1/sec) 46             46

```

## ISDN and the GWCON Commands

While ISDN has its own monitoring process for monitoring purposes, the router also displays configuration information and complete statistics for devices and circuits when you use the **interface**, **statistics**, and **error** commands from the GWCON environment. You can also use the GWCON **test** command to test DCEs and circuits.

**Note:** Issuing the **test** command to the ISDN interface causes the current calls to be dropped and re-dialed.

### Interface — Statistics for ISDN Interfaces and Dial Circuits

Use the **interface** command at the GWCON prompt (+) to display statistics for ISDN interfaces and dial circuits.

To display statistics for a dial circuit, enter the **interface** command followed by the interface number of the dial circuit. For ISDN interfaces, information is displayed on a D and B channel basis. (This is the same information that is displayed by the ISDN **statistics** command.)

**Example:**

**interface 3**

```

Nt Nt' Interface      CSR  Vec  Self-Test  Self-Test  Maintenance
3  3  ISDN/0           0    0    Passed    Failed    Failed
                                1      0
ISDN Base Net MAC/data-link on ISDN Basic Rate Interface interface
Link:  Active  ISDN Firmware:  1.0  Handler State: Running

                                D Channel  B Channels
Total Transmits                591          0
Total Receives                 601          0
Transmit Bytes                 3981         0
Receive Bytes                 4050         0
Invalid Interrupts            0            0

Transmit:  D      B Channels  Receive:  D      B Channels
Error      0          0        Error      0          0
Overflow   0          0        Overflow   0          0
Underrun   0          0        Overrun    0          0
Abort      0          0        Abort      0          0
                                CRC Error  0          0

```

To display the following statistics for a dial circuit, use the **interface** command followed by the interface number of the dial circuit.

**Example:**

**interface 4**

```

Nt Nt' Interface      CSR  Vec  Self-Test  Self-Test  Maintenance
4  3  PPP/1           0    0    Passed    Failed    Failed
                                1      2
Point to Point MAC/data-link on ISDN Basic Rate Interface

```

The following list describes the output for both ISDN and dial circuits.

**Nt** Serial line interface number or dial circuit interface number.

**Nt'** If *Nt* is a dial circuit, this is the interface number of the ISDN interface to which the dial circuit is mapped.

## ISDN and the GWCON Commands

**Interface**

Interface type and its instance number.

**CSR** Command and status register addresses of base network.

**Vec** Interrupt vector address.

**Self-Test Passed**

Number of self-tests that succeeded.

**Self-Test Failed**

Number of self-tests that failed.

**Maintenance: Failed**

Number of maintenance failures.

## Configuration - Information on Router Hardware and Software

Enter the **configuration** command at the GWCON (+) prompt to display information about the router hardware and software. It includes a section that displays the interfaces configured on the router along with the state of the interface.

If a dial circuit is configured to dial-on-demand, the state of the dial circuit is always displayed as Up whether or not it is connected. In this case Up means that the dial circuit is either connected or available.

If a dial circuit is configured as a static circuit, the state indicates Up only if the dial circuit is connected. (Refer to "Configuration" on page 135 for a sample output from the **configuration** command.)



---

## Chapter 45. Configuring and Monitoring Dial Circuits

This chapter describes how to configure dial circuits on a dial circuit interface mapped to a V.25bis, V.34, or ISDN interface. It contains the following sections:

- “Dial Circuit Configuration Commands” on page 672
- “Dial Circuit Monitoring Commands” on page 678

Dial-in and Dial-out interfaces are special types of dial circuit interfaces.

### Notes:

1. PPP dial circuit interfaces can use an ISDN, V.25bis, or V.34 network as the base-network interface.
2. FR dial circuit interfaces can use an ISDN or a V.25bis network as the base network interface.
3. Switched SDLC Call-In dial circuit interfaces use a V.25bis network as the base-network interface.
4. X.25 circuits can be used over ISDN D-channels for BRI.
5. Dial-Out circuit interfaces use a V.34 network as the base-network interface.
6. Dial-In circuit interfaces can use an ISDN or V.34 network as the base-network interface.

For information on how to configure dial circuits for use with:

- ISDN interfaces, see “Chapter 43. Using the ISDN Interface” on page 639.
- V.25bis interfaces, see “Chapter 39. Using the V.25bis Network Interface” on page 607.
- V.34 interfaces, see “Chapter 41. Using the V.34 Network Interface” on page 623.

---

### Adding a Dial Circuit On a Leased Line

Adding a dial circuit onto a leased line will set the following default values:

```
SET ANY_INBOUND
SET DESTINATION      default_address
SET IDLE              0
SET LIDS              no
```

**Note:** If you are configuring a V.34 interface to be in leased line mode, the following parameters cannot be configured:

- **callback**
- **calls**
- **destination name**
- **destination address/subaddress**
- **idle**
- **inbound destination**
- **lid\_used**
- **priority**

### Dial Circuit Configuration Commands

Table 85 describes the dial circuit configuration commands. Enter the dial circuit configuration commands at the `Circuit Config>` prompt. You must restart the router for configuration changes to take effect.

To access the `Circuit Config>` prompt, enter the **network** command followed by the interface number of the “dial circuit”. (The dial circuit number was assigned when you entered the **add device dial-circuit** command.) You can enter the **list devices** command at the `Config>` prompt to display a list of the dial circuits that you added.

Table 85. Dial Circuit Configuration Commands Summary

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See “Getting Help” on page 10.
Delete	Deletes the inbound call settings from the dial circuit configuration.
Encapsulator	Allows you to change the data-link protocol configuration.
List	Displays the dial circuit configuration parameters.
Set	Configures the dial circuit for inbound or outbound calls, maps the dial circuit to a serial line interface, and sets addresses, idle timeout, priority, lid_out address, inbound destination, and self-test delay.
Exit	Returns you to the previous command level. See “Exiting a Lower Level Environment” on page 11.

### Delete

Use the **delete** command to remove the inbound call settings from the dial circuit configuration.

#### Syntax:

**delete** *inbound destination*

#### **inbound destination**

Removes both the INBOUND destination and the ANY\_INBOUND settings from the dial circuit configuration. This causes the dial circuit to accept calls only from callers that have a phone number that matches the *destination* parameter.

### Encapsulator

Use the encapsulator command to enter the configuration process for the link-layer protocol (for example, PPP, Frame Relay, X.25, dial-out, SDLC) that is running on the dial circuit interface.

**Note:** The default for a dial circuit interface created via the **add device dial-circuit** command is PPP. To change the link layer type, at the `Config>` prompt:

- For Frame Relay, enter **set data-link frame-relay**.
- For SDLC, enter **set data-link sdlc**.
- For X.25 on the ISDN BRI D-channel, enter **set data-link x25**.

#### Syntax:

### encapsulator

The following example shows that the PPP configuration process is entered when the encapsulator command is used for a PPP dial circuit or dial-in interface.

#### **Example:**

```
encapsulator
Point-to-Point user configuration
PPP Config>
```

Be aware of the following when you configure a dial circuit that uses a V.25bis interface as the base network:

- The V.25bis interface pre-defines clocking as external. The modem (DCE) controls the clock speed. You cannot configure clocking, encoding, and other HDLC parameters as part of the dial circuit configuration.

Be aware that you cannot configure HDLC parameters of the dial circuit configuration when you configure PPP or Frame Relay for ISDN. Physical layer parameters are configured on the ISDN interface.

For information on configuring the PPP protocol, refer to “Chapter 23. Configuring Serial Line Interfaces” on page 331 or refer to “Chapter 30. Using Point-to-Point Protocol Interfaces” on page 467.

For information on configuring the Frame Relay protocol, see “Chapter 28. Using Frame Relay Interfaces” on page 401 or “Chapter 29. Configuring and Monitoring Frame Relay Interfaces” on page 421.

For information on configuring or monitoring SDLC interfaces, see “Chapter 35. Using SDLC Interfaces” on page 561 or “Chapter 36. Configuring and Monitoring SDLC Interfaces” on page 563.

For more information on configuring dial-in and dial-out interfaces, see “Using a Dial-In Access to LANs (DIALs) Server” in the *Using and Configuring Features*.

For information on configuring or monitoring X.25 interface, see “Chapter 25. Configuring and Monitoring the X.25 Network Interface” on page 341.

To return to the `Circuit Config>` prompt, use the **exit** command.

## List

Use the **list** command to display the current dial circuit configuration.

For more information about I.430 and I.431, see “ISDN I.430 and I.431 Switch Variants” on page 653.

#### **Syntax:**

```
list
```

#### **Example:**

**Note:** Options listed depend upon the type of interface used. All options may not be shown for all interface types.

## Configuring Dial Circuits

```
list
Any inbound          set
Bandwidth:           64
Base net:             1
Callback:            yes
Calls:               inbound
Destination name:    remote-site-sanfrancisco
Idle char:           7E
Idle timer:          = 60 sec
Inbound calls        allowed
Inbound dst name:    local-1
LID out address:     1234
LID used:            enabled
Net #:               2
Outbound calls       allowed
Priority:             8
SelfTest Delay Timer: = 0 ms
Time slot:           1 4 5 8
```

### **Any inbound**

Displays this setting when inbound calls that do not match any other dial circuit are mapped to this circuit and accepted as inbound calls.

### **Bandwidth**

Displays the bandwidth value in Kbps.

### **Base net**

Displays the name of the serial line interface to which this dial circuit is mapped.

### **Callback**

Displays the setting of this option.

**Calls** Displays the setting of this option.

### **Destination name**

Displays the network address name to be called for outbound circuits, and the default comparison address used by the LID mechanism for inbound calls.

### **Idle char**

Displays the idle character used for I.43x or channelized circuits.

### **Idle timer**

Displays the idle timer setting in seconds. The range is 0 to 65535; 0 indicates that this is a dedicated circuit (leased line).

### **Inbound calls allowed**

Displays this parameter when the circuit is configured to accept inbound calls.

### **Inbound dst name**

Displays this parameter if the circuit is configured to accept inbound calls that do not match any other addresses. This is an alternate comparison address name used by the LID mechanism for inbound calls.

### **LID out address**

Displays the name of the dial circuit connecting the routers.

### **LID used**

Displays the setting of this option.

**Net #** Displays the base circuit number.

### **Outbound calls allowed**

Displays this parameter when the circuit is configured to initiate outbound calls.

### Priority

Displays the setting of this parameter.

### SelfTest Delay Timer

Displays the self-test delay timer setting in milliseconds. The range is 0 to 65535; 0 indicates no delay.

### Time slot

Displays the list of slots to use for this dial circuit.

## Set

Use the **set** command to map the dial circuit to an interface (for example: ISDN , V.34, or V.25bis), configure the dial circuit for inbound and/or outbound calls, and set destination addresses, inbound addresses, idle timeout, and self-test delay.

### Note:

#### Notes:

1. If you are running SDLC, I.430, I.431, Channelized, or X.25 on a dial circuit, you will be unable to use the **set** command to change the following parameters as the software will use specific defaults:
  - Any\_inbound - any\_inbound is set
  - Calls - inbound
  - Destination - default address
  - Inbound destination - no destination inbound address
  - Idle - 0
  - Lid\_out\_addr - no LID name
  - Lid\_used - disabled
  - Priority - 8
  - Self\_test\_delay
2. If you are running a dial circuit on V.34, you will be unable to change the following parameters:
  - Bandwidth
  - Callback
  - Idle-char
  - lid\_out\_addr
  - timeslot

### Syntax:

```
set                any_inbound  
bandwidth...  
callback...  
calls...  
destination...  
idle...  
idle-char...  
inbound destination...  
lid_out_addr...
```

## Configuring Dial Circuits

lid\_used...  
net...  
priority...  
selftest-delay...  
timeslot...

**Note:** If you are configuring a V.34 interface to be in leased line mode, the following parameters cannot be configured:

- **callback**
- **calls**
- **destination** *name*
- **destination address/subaddress**
- **idle**
- **inbound destination**
- **lid\_used**
- **priority**

### **any\_inbound**

Specifies that inbound calls that do not match any other dial circuit will be mapped to this circuit and accepted as inbound calls.

### **bandwidth** *kbps*

Sets the bandwidth, in Kbps, for I.430 and Channelized T1/E1 circuits.

#### **Valid values:**

For I.430: 64 or 128

For Channelized: 56 or 64

**Default value:** 64

### **callback** [*Yes or No*]

The callback feature uses the callers telephone number to verify the call against an authentication table and then disconnects the incoming call. Callback then makes an outgoing call to the same caller. Callback should always be disabled. The default is no.

### **calls** [*outbound or inbound or both*]

Restricts this dial circuit to initiating outbound calls only, accepting inbound calls only, or both initiating and accepting calls. The default is both.

### **destination** *address\_name*

This parameter is required for the dial circuit to operate. It specifies the network dial address of the remote router to which this dial circuit will connect. The LID protocol uses this parameter as the default comparison address for incoming calls. This parameter must match an address name that you assigned using the Config> prompt with either the **add isdn address** command, the **add v25-bis address** command, or the **add v34-address** command.

**Example:** **set destination remote-site-sanfrancisco**

### **idle** *# of seconds*

Specifies a timeout period for the circuit. If there is no protocol traffic over the circuit for this specified time period, the dial circuit hangs up. The range

## Configuring Dial Circuits

is 0 to 65535, and the default is 60 seconds. A setting of zero specifies that there is no timeout period and that this is a dedicated circuit.

### Notes:

1. For WAN Restoral operations, you must set the idle timeout to 0.
2. On a I.43x, X.25 or Channelized circuit, you cannot set this parameter.

### idle-char

Specifies the idle character used for I.43x or channelized circuits.

**Note:** You cannot configure this parameter for regular ISDN circuits.

**Valid values:** 7E or FF

**Default value:** 7E

**Example:** set idle-char 7E

### inbound-destination *address\_name*

Set this parameter if the dial circuit is set up for both inbound and outbound calls and if this router's local dial address is different from the destination dial address that the remote router dials. For example, the numbers would be different if one of the routers must go through a PBX, international, or inter-LATA exchange. This parameter must match an address name that you assigned at the Config> prompt with either the **add isdn address** command, the **add v25-bis address** command, or the **add v34-address** command. The inbound destination number is used to match the incoming LID or CallerID with the dial circuit. If there is a match that dial circuit gets the call.

**Example:** set inbound remote-site-1

### lid\_out\_addr *address\_name*

The lid\_out\_addr is the name of a dial circuit between two routers. When more than one circuit is configured between two routers (parallel circuits), then there needs to be a way to unambiguously know which dial circuit connects between them. For this purpose, a lid\_out\_addr is sent from the router at one end (the caller). At the receiving end the other router configures the same string as the inbound destination name. The lid\_out\_addr must be an address name that has previously been added using **ADD ISDN-ADDRESS** from the config> prompt.

### lid\_used [enabled or disabled]

Suppresses the exchange of logical ids for circuits to devices that do not support logical ids.

**Valid values:** Enabled or disabled

**Default value:** Disabled

### net #

Sets the base network number of the interface to the # of the serial line interface to which you want to map this circuit.

**Note:** The interface must be a V.34 net for dial-out interfaces. You are prompted for this if you add the device.

### Example:

```
Circuit Config> set net
Base net for this circuit [ ]? 2
```

## Configuring Dial Circuits

### priority

The priority field allows an outbound dial-on-demand circuit to preempt another when no channels are available. If a call request is made and all the channels are in use, then the priority of the requesting dial-on-demand circuit is checked against all the active dial-on-demand circuits. If there is an outbound dial-on-demand circuit with lower priority, then that circuit is disconnected and a call is made for the higher priority dial-on-demand circuit. Only the priority on the outbound end of a connection is considered. An inbound dial-on-demand call will not be taken down in favor of a higher priority outbound call. An inbound dial-on-demand call cannot cause a lower priority call to be taken down.

### selftest-delay # of milliseconds

Use this parameter to delay the time between when the call is established and the time when the initial packet is sent. Setting a selftest-delay can prevent initial packets from being dropped. The range is 0 to 65535, and the default is 150.

For V.25bis dial circuits, adjust this setting if your modems take extra time to synchronize.

For ISDN dial circuits, you may need to adjust this setting for dial-on-demand links because some ISDN switches start to deliver data before signalling the complete establishment of the circuit at the destination end.

### timeslot list of slots

Specifies a slot or list of slots to use for this dial circuit. Your service provider will issue the number of the slots you can use for the circuit. Specify the list as slot numbers separated by blanks.

**Note:** You can only use this parameter for Channelized T1/E1 circuits.

#### Valid values:

For Channelized T1: 1 to 24

For Channelized E1: 1 to 31

**Default value:** None

**Example:** set timeslot 1 4 5 8

---

## Dial Circuit Monitoring Commands

Table 86 describes the dial circuit monitoring commands. Enter the dial circuit monitoring commands at the `Circuit Config>` prompt. You must restart the router for monitoring changes to take effect.

*Table 86. Dial Circuit Configuration Commands Summary*

Command	Function
? (Help)	Displays all the commands available for this command level or lists the options for specific commands (if available). See "Getting Help" on page 10.
Callback	Adds, deletes, or lists the information in the authentication cache.
Exit	Returns you to the previous command level. See "Exiting a Lower Level Environment" on page 11.



## Callback

Use the **callback** command to add, delete or list the information in the authentication cache.

**Syntax:**

```
callback          add  
                   delete  
                   list
```

**add** Adds a callback number to the authentication lists.

**delete** Deletes a callback number from the authentication lists

**list** Lists the callback numbers and other information in the authentication list.

## Configuring Dial Circuits

---

## Part 4. Appendixes



---

## Appendix A. Quick Configuration Reference

### Important

If you are attempting to configure or monitor your IBM 2210 and your service terminal is unreadable, see "Service Terminal Display Unreadable" in IBM 2210 Nways Multiprotocol Router Service and Maintenance Manual.

---

## Quick Configuration Tips

### Making Selections

On the panels that you view when using the Quick Configuration program, the information shown in brackets, [ ], is the default. For example:

Configure Bridging? (Yes, No, Quit): [Yes]

- To use the default Yes, press **Enter**.
- To use a value other than the default, such as No or Quit, choose from the values in the parentheses.
- If no value appears in the brackets, there is no default and you must type a value.

### Integrated Modems

Integrated modems are automatically configured.

### Exiting and Restarting

- To restart the current Quick Configuration section at any time, type **r**. For example, if you are in the Interface Configuration section, type **r** and press **Enter** to return to the beginning of that section.
- To exit Quick Configuration, type **q** and press **Enter**. The Config> prompt will appear.
- To restart Quick Configuration from the Config> prompt, type **qc** and press **Enter**.

### When You're Done

- Once you have completed your configuration, you must restart the IBM 2210 for the configuration to take effect. At the end of the Quick Configuration program, you are given this option.

---

## Starting the Quick Configuration Program

The following sections describe sample configurations using the Quick Configuration program (**qconfig**).

To start the quick configuration program, enter **qc** at the Config> prompt.

The program displays the following panel after starting.

Router Quick Configuration for the following:

- o Interfaces
- o Multilink PPP (w/o DIALs)
- o Dial Circuits (w/o DIALs)
- o Dial-in Access to LANs (DIALs)
- o Bridging
  - Spanning Tree Bridge (STB)
  - Source Routing Bridge (SRB)
  - Source Routing/Transparent Bridge (SR/TB)
  - Source Routing Transparent Bridge (SRT)
- o Protocols
  - IP (including OSPF, RIP, and SNMP)
  - IPX
  - DNA
- o Booting

Event Logging will be enabled for all configured subsystems with logging level 'Standard'

Note: Please be warned that any existing configuration for a particular item will be removed if that item is configured through Quick Configuration

*Event logging* records system activity, status changes, data transmission and reception, data and internal errors, and service requests. The logging level is set to standard (the default). For more information about error logging, refer to the *Event Logging System Messages Guide*.

During Quick Configuration you can:

1. Configure interfaces
2. Configure multilink PPP interfaces
3. Configure Dial circuits
4. Configure Dial-in and Dial-out circuits
5. Configure Dial-in Access to LANs (DIALs) information
6. Configure bridging
7. Configure protocols
8. Configure booting
9. Enable Console Modem-Control
10. Restart the router

---

## Configuring LAN Emulation

If you added an ATM device, you will see the following prompts:

```
*****
LAN Emulation Configuration
*****

Type 'Yes' to Configure LAN Emulation
Type 'No' to skip LAN Emulation Configuration
Type 'Quit' to exit Quick Config

Configure LAN Emulation? (Yes, No, Quit): [Yes]
```

You can configure either Token-Ring or Ethernet LAN Emulation clients from this question.

## Configuring Interfaces

```
*****
Interface Configuration
*****

Type 'Yes' to Configure Interfaces
Type 'No' to skip Interface Configuration
Type 'Quit' to exit Quick Config

Configure Interfaces? (Yes, No, Quit): [Yes]
```

1. Take one of the following actions:
  - Enter **y** to display the interface configuration prompts.
  - Enter **n** to skip interface configuration and continue with quick configuration.
  - Enter **q** to exit quick configuration. This displays the `Config>` prompt. To restart quick configuration from this prompt, enter **qc**.

When interface configuration begins, you can type 'r' any time at this level to restart Interface Configuration

The only WAN interfaces that you can configure using Quick Config are PPP, Frame Relay, and V34. The only parameters you can configure for PPP and Frame Relay are the cable type and the line speed if the IBM 2210 is providing the clocking. For V34 interfaces the cable type is set to RS-232 DTE with a clock speed of 115200.

**Note:** Some modems do not support 115200 as the DTE serial speed. If this is the case, you must go into the network configuration for that V34 net and lower the DTE speed.

What quick configuration displays next depends on whether you have an Ethernet or Token-Ring version of the IBM 2210.

## Ethernet

For Ethernet versions of the IBM 2210, configuration prompts similar to the following ones appear:

1. The interface verification:

```
Intf 0 is Ethernet

Intf 1 is WAN PPP
Encapsulation for WAN 1 (PPP, Frame Relay, V34): [PPP] PPP
```

2. Enter one of the following values to specify the encapsulation type:

**ppp** Point-to-Point Protocol

**fr** Frame Relay

**V34** V.34 Modem Handler

The following message is displayed for PPP and Frame Relay:

```
Cable type (RS-232 DTE, RS-232 DCE, V.35 DTE, V.35 DCE, V.36 DTE, X.21 DTE, X.21 DCE): [RS-232 DTE] V.35 DCE
```

**Note:** DTE cable types are used when attaching to a modem or DSU. DCE cable types are used when connecting directly to another DTE device and you want the 2210 to provide the clocking.

3. Enter the cable type you have or will connect to this WAN port.

```
Internal clock speed (decimal) (2400 - 2048000): [0] 1544000
```

Internal Clock Speed appears only if you enter a DCE cable.

The WAN prompts repeat for WAN Port 2.

```
Intf 2 is WAN PPP
Encapsulation for WAN 2 (PPP, Frame Relay, V34): [PPP]
Cable type (RS-232 DTE, RS-232 DCE, V.35 DTE, V.35 DCE, V.36 DTE, X.21 DTE, X.21 DCE): [RS-232 DTE] V.35 DCE
This is all configured device information:

Intf 0 is Ethernet, Connector (10BaseT, AUI) autoconfigured
Intf 1 is WAN 1 with PPP Encapsulation, V.35 direct attach cable
    internal clock speed 1544000 bits/second
Intf 2 is WAN 2 with PPP Encapsulation, V.35 modem cable

Save this configuration? (Yes, No): [Yes]
```

4. Enter **y** to save the configuration and continue with quick configuration. Enter **n** to re-display the interface configuration prompts.

## Token-Ring

For token-ring versions of the IBM 2210, configuration prompts similar to the following ones appear.

1. The interface verification:

```
Intf 0 is Token Ring
Speed in Mb/sec (4,16): [16]
```

2. Enter **4** or **16** to specify the media transfer speed in megabits per second. The media transfer speed must match the speed of the ring.

```
Connector (STP, UTP): [STP]
```

3. Enter one of the following values to specify the media you are using:

**STP** shielded twisted pair

**UTP** unshielded twisted pair

For a description of WAN prompts, see the Ethernet configuration prompts.



```

Intf 1 is a WAN PPP
Encapsulation for WAN 1
(PPP, Frame Relay, V34): [PPP]
Cable type (RS-232 DTE, RS-232 DCE, V.35 DTE, V.35 DCE, V.36 DTE, X.21 DTE,
X.21 DCE: [RS-232 DTE] V.35 DCE
Intf 2 is a WAN PPP
Encapsulation for WAN 2
(PPP, Frame Relay, V34): [PPP]
Cable type (RS-232 DTE, RS-232 DCE, V.35 DTE, V.35 DCE, V.36 DTE, X.21 DTE,
X.21 DCE: [RS-232 DTE] V.35 DCE
Internal clock speed (decimal) (4800 - 2048000): [0]

This is all configured device information:

Intf 0 is Token-Ring, Speed 16 Mb/sec, Connector UTP
Intf 1 is WAN1 with PPP Encapsulation, V.35 modem cable
Intf 2 is WAN2 with PPP Encapsulation, V.35 direct attach cable
    internal clock speed 0 bits/second

Save this configuration? (Yes, No): [Yes]

```

4. Enter **y** to save the configuration and continue with quick configuration. Enter **n** to re-display the interface configuration prompts.

---

## Configuring Multilink PPP (MP) Interfaces

If you have a router with ISDN capabilities, the following configuration questions will be displayed.

**Note:** The following example assumes a Primary ISDN adapter plugged into a 2210 Model 24x or Model 14x.

```

*****
Multilink PPP Configuration (w/o DIALs)
*****

Type 'Yes' to Configure Multilink PPP
Type 'No' to skip Multilink PPP Configuration
Type 'Quit' to exit Quick Config

Configure Multilink PPP? (Yes, No, Quit): [Yes]

```

1. Take one of the following actions:
  - Enter **y** to display the Multilink PPP configuration prompts
  - Enter **n** to skip Multilink PPP configuration and continue quick configuration
  - Enter **q** to exit quick configuration

The following status message appears when MP configuration begins displaying the current MP configuration. You have the choice of editing an existing MP interface configuration or starting a new MP bundle.

```

Current Multilink PPP Configuration:
Num   Intf#   Direction Max Links Link Intf# Base Intf# Destination
1     New Multilink PPP

Choose the Multilink PPP you wish to edit/add: (1 - 1): [1]

```

2. Select the number of your choice. Enter the last number in the list to start a new MP interface configuration or select the number of an existing MP interface to modify the configuration. (Note: There are no existing MP interfaces in the example above.) If you choose to add a new MP interface, the following questions will be asked. The questions vary slightly for INBOUND and OUTBOUND MP interfaces:

```

Enter maximum number of active links (2 - 23): [2] 3
Set Call Direction (Inbound, Outbound, Both): [Inbound] Inbound
Enter Idle timer (seconds, 0 means always active) (0 - 65535): [0] 0

```

- Next you are prompted to add/edit the ISDN dial-circuits that can be used by the MP interface. The example below demonstrates adding one dial-circuit but you may add more than one dial-circuit per MP interface. Choose to add a dial-circuit by selecting the last number in the list denoted by "New Circuit" or to edit an existing dial-circuit configuration by typing its corresponding number. (Note: The example below does not display any existing dial-circuit configuration.)

```

Current Dial Circuit Configuration:

Num Intf# Intf Type          BaseIntf# MP Direction Destination
1   New Circuit

Choose a Dial Circuit Link you wish to edit/add: (1 - 1): [1]
Enter interface # of Base Net, "?" for List,"Q" to quit: (6)

Address assigned name          Network Address  Network Subaddress
-----
default_address                99999999

Assign Line ID *In* Network Address:
Network Address name ([1-23] chars): LID_IN
Enter Network Address [1-26 digits]: 1234
Enter Network Subaddress [0-21 digits]:

Interface #:                    8
Interface Type:                 PPP Dial Circuit
Base Interface #:               6 (ISDN Base Net)
Multilink PPP Interface #:     7
Call Direction:                 Inbound only
Destination Name:               default_address
Line ID *IN* Name:              LID_IN

Is this correct (Yes, No): [Yes] Yes
Add another Dial Circuit Link (Yes, No): [Yes] No

```

- Next, the MP interface and all of the dial-circuits for the interface are listed for confirmation. In this case, there is only one dial-circuit for the MP interface.

```

Multilink PPP Interface #: 7
Call Direction:           Inbound only
Idle timer:                0 (fixed circuit)
Maximum Number of links:  3
Dial Circuit Link
  Interface #:             8
  Interface Type:          PPP Dial Circuit
  BASE Interface #:        6 (ISDN Base Net)
  Destination Name:        default_address
  Line ID *In* Name:       LID_IN
Is this correct (Yes, No): [Yes] Y

```

- To add/edit another MP interface type y to the following question. Answering n will exit you from the MP configuration section.

```

Add another Multilink PPP Interface (Yes, No): [Yes] n

```

- After configuring all of the MP interfaces, an MP confirmation question will appear with all of the configured MP interfaces listed. You can type y to save the changes or n to discard the new MP configuration.

```

Current Multilink PPP Configuration:
Num   Intf#   Direction Max Links Link Intf# Base Intf# Destination
1     7       In        3         8         6         default_ad

Save this configuration (Yes, No): [Yes] y

Multilink PPP configuration saved.

```

## Configuring Dial-Circuits

The following configuration questions are displayed for dial-circuit configuration:

```

*****
Dial Circuit Configuration (w/o DIALs)
*****

Type 'Yes' to Configure Dial Circuits
Type 'No' to skip Dial Circuits Configuration
Type 'Quit' to exit Quick Config

Configure Dial Circuits? (Yes, No, Quit): [Yes] y

```

1. Take one of the following actions:
  - Enter y to display the Dial-Circuit configuration prompts
  - Enter n to skip Dial-Circuit configuration and continue quick configuration
  - Enter q to exit quick configuration

The following status message appears upon entering the dial-circuit configuration. Note that in this example there is no existing dial-circuit configuration:

```

Current Dial Circuit Configuration:
Num Intf# Intf Type           BaseIntf# MP Direction ...
Destination
1   New Circuit

Choose the circuit you wish to edit/add: (1 - 1): [1] 1

```

2. Choose to add a new dial-circuit by selecting the number at the bottom of the list denoted by "New Circuit". Choose to edit an existing dial-circuit configuration by selecting the number of the dial-circuit which you wish to edit (Note: in the above example, there are no existing dial-circuits). The following is an example of the prompts that will be displayed to add a new, PPP, inbound dial-circuit:

```

Enter interface # of Base Net, "?" for List,"Q" to quit: (6)
Enter type of dial circuit for this net: (PPP, FRAME-RELAY): [FRAME-RELAY] PPP

Set Call Direction (Inbound, Outbound, Both): [Both] Inbound
Accept ANY INBOUND call (Yes, No): [No] Yes

```

3. After answering all of the questions, you will be given a confirmation for the dial-circuit as shown below:

```

Interface #:          13
Interface Type:      PPP Dial Circuit
Base Interface #:    6 (ISDN Base Net)
Idle timer:         0 (fixed circuit)
Call Direction:     Inbound only
Destination Name:   default_address
Line ID *IN* Name:  * ANY *

Is this correct (Yes, No): [Yes] Yes

```

- Next, you may choose to add/edit more dial-circuits in the same way as the example above.

```
Add another Dial Circuit (Yes, No): [Yes] No
```

- Finally, you will be asked to confirm the dial-circuit configuration and exit the dial-circuit configuration section. Answering y will save the dial-circuit configuration and answering n will discard changes made during this configuration session.

```

Current Dial Circuit Configuration:
Num Intf# Intf Type          BaseIntf# MP Direction
Destination
1 13   PPP Dial Circuit      6/ISDN   No In
default_addre

Save this configuration (Yes, No): [Yes] Yes

Dial circuit configuration saved.

```

---

## Configuring Dial-in Access to LANs (DIALS) Interfaces and DIALS Server Information

If the router you are configuring contains the DIALS feature, then you will be asked if you want to configure DIALS interfaces and DIALS server information. You will only be asked to configure DIALS interfaces if you have configured V34 on a base WAN interface or if an ISDN interface exists in your router. The following prompts lead you through the DIALS configuration:

```

*****
Dial-in Access to LANs (DIALS) Configuration
*****

Type 'Yes' to Configure DIALS Configuration
Type 'No' to skip DIALS Configuration Configuration
Type 'Quit' to exit Quick Config

Configure DIALS Interfaces? (Yes, No, Quit): [Yes]

```

- Take one of the following actions:
  - Enter y to display the DIALS Interface prompts
  - Enter n to skip DIALS Interface configuration
  - Enter q to exit quick configuration

If you answer yes and there ISDN is loaded on this device, the following question will be shown.

```

Current Multilink PPP Configuration:
Num Intf#  Direction  MaxLinks  DIALS
1     8     In          2          No

```

```

Enter the number of Multilink PPP DIALS interfaces:(0-23) 2
Enter maximum number of active links per Multilink PPP interface: 3

```

Next, the following prompt will be shown.

```

For Base Interface #1 (V.34 Base Net) no Dial Circuits are configured!
Add a DIALS (Dial-in) Interface for this Base Interface? (Yes, No): [No]y
Add a Dial-out DIALS Interface for this Base Interface? (Yes, No): [No] y

```

Num	Intf#	Intf Type	BaseIntf#	MP	Direction	Destination
1	3	PPP Dial-in Circuit	1/V34	No	In	N/A
2	4	Dial-out Dials Circuit	1/V34	No	Out	N/A

```

Save this configuration (Yes, No): [Yes]

```

```

Dial circuit configuration saved.

```

Answering no will take the user out of the DIALS server configuration.

- For every valid base WAN interface (V34 or ISDN) in the router, you are asked if you want to add a DIALS dial-in interface for this base net.
  - If the base net is ISDN BRI or ISDN PRI, you are asked if you want to add up to 2 or 23 respectively dial-in interfaces for the ISDN base net.
  - If the base net is V34 then you will also be asked if you want to add a DIALS dial-out circuit for this base net (Dial-out is not supported over ISDN).
- After answering yes or no to these questions, the current dial-circuit configuration for that base net is displayed. You can then save the configuration by answering yes or restart the configuration for that base net by answering no.
- After configuring all of your DIALS interfaces or by answering no to the DIALS interfaces question, you arrive at the DIALS Server configuration. Here you are asked to enter information about global settings for the DIALS server.

```

Configure DIALS Server? (Yes, No, Quit): [Yes] yes
Type 'r' any time at this level to restart Dial-in Access to LANs Configuration.

```

- Take one of the following actions:
  - Enter y to display the DIALS Server prompts
  - Enter n to skip DIALS Server configuration
  - Enter q to exit quick configuration

If you answer yes, the following prompt will be shown. Answering no takes you to the next configuration section.

```

Default number of minutes a user is allowed before being
disconnected, 0 is unlimited: (0)

```

- The default number of minutes on-line determines the maximum connection time for dial-in and dial-out users. Enter 0 if you want to this time to be unlimited. The default is zero if you have not configured this information previously.

DIALs Server name - up to 30 chars: (DIALOUT\_SERVER)

7. Enter the name of the DIALs server. The default is DIALOUT\_SERVER. This is the name of the server that will be displayed when dial-out clients "discover" DIALs Dial-out Servers on the network when they invoke the DIALs client's CHOOSER application.

Dial-out client type(s) supported (DIALs, TELNET, BOTH): [BOTH]

8. The previous question determines what level of dial-out support is turned on for the router. DIALs refers to supporting the IBM DIALs dial-out clients. Telnet dial-out refers to the ability to dial-out from a LAN based client using either a telnet application or a telnet serial port application. The default setting is to have both enabled.

Inactive time before a connection is dropped, 0 is unlimited: (30)

9. The previous question pertains to how long a dial-out circuit is active while no data is being transmitted or received. It should be set to the number of minutes that a connection over a dial-out circuit can be active without traffic. The default is 30 minutes.

Dial-in IP address assignment:  
Allow clients to specify their own IP address? (Yes, No, Quit) [No] y

10. The previous question allows dial-in clients to provide their own IP address to be used for the duration of the connection.

Assign address using the PPP User Profile? (Yes, No, Quit) [No] y

11. The previous question enables the device to provide the IP address in the PPP User Profile to the client to use for the duration of the connection.

Assign address based on the dial-in interface? (Yes, No, Quit) [No] y

12. The previous question enables the device to provide the IP address in the Dial-in interface for the client to use for the duration of the connection.

Assign address using IP address pools? (Yes, No, Quit) [Yes] y

Add addresses to an IP Address pool using the ADD IP-POOL command under FEATURE DIALs in the configuration console (talk 6).

13. The previous question enables the device to provide an IP address from the IP address pool for the client to use for the duration of the connection. IP address pools enable the device to provide an IP address from the IP address pools to the client to use for the duration of the connection.

Assign address using proxy DHCP? (Yes, No, Quit) [No] y  
How many DHCP Servers do you wish to use? (Maximum is 20) : (1) 2  
Enter DHCP Server Address: [ ] 10.0.0.1  
Enter DHCP Server Address: [ ] 10.0.0.2

14. The previous question enables the device to provide an IP address from a DHCP server to the client for use for the duration of the connection.

DHCP gateway (giaddr) interface:  10.0.0.15

- The DHCP Gateway interface, or giaddr (as defined in RFC1531), is an IP address associated with the subnet you wish the DHCP server to offer addresses within. This is necessary because the DHCP server may be used to lease addresses to more than one subnet. The giaddr allows the DHCP server to distinguish from which subnet to offer addresses as well as provide an address in which to respond to.

Quick Config will now ask you for an IP address to use as the giaddr. If you leave this address as 0.0.0.0, the IP address of the interface used to reach the DHCP server will be used. If you have only one LAN connected to the device and your dial-in users will be given addresses on the same subnet as this LAN, you can use 0.0.0.0 as this address.

**Note:** You will be permitted to enter an IP address here even if the address does not yet exist on the interface. However, an interface must be configured with this address before DHCP will work properly.

Do you want to use Dynamic DNS (requires hostnames to be configured for dial-in users)?  
(Yes, No): [Yes]y

- The response to the previous question determines if the router will instruct the DHCP server to update the Dynamic DNS with the hostname and IP address of a dial-in user.

If you will be using DHCP to administer IP address to your dial-in users, you should answer yes to this question.

This is all the configured Dial-in Access to LANs information:

Default number of minutes allowed per connection: Unlimited  
Inactive timer: 30  
LAN Protocols enabled for dial-out: TELNET DIALS  
DIALS Server name: DIALOUT\_SERVER

DIALS client IP address specification:

Client : Enabled  
UserID : Enabled  
Interface : Enabled  
Pool : Enabled  
DHCP Proxy : Enabled

Configured DHCP Servers : 10.0.0.1 10.0.0.2

DHCP Gateway address (giaddr): 10.0.0.15

Dynamic DNS: Enabled

Is this information correct? (Yes, No, Quit): [Yes]

- A summary of the information for DIALS configuration is displayed and you are asked if it is correct. If the information is correct, answer yes. If it is not and you want to reenter the information, answer no. If you want to terminate quick config, answer quit.

## Configuring Bridging

```
*****
Bridging Configuration
*****

Type 'Yes' to Configure Bridging
Type 'No' to skip Bridging Configuration
Type 'Quit' to exit Quick Config

Configure Bridging? (Yes, No, Quit): [Yes]
```

1. In response to Configure Bridging, take one of the following actions:
  - Enter **y** to display the bridging configuration prompts. The prompts that appear depend on your network configuration.
  - Enter **n** to skip the bridging configuration and continue with quick configuration.
  - Enter **q** to exit quick configuration. This displays the Config> prompt. To reenter quick configuration, enter **qc** after this prompt.
2. If you have configured for DIALs dial-in circuits the following panel will be displayed:

```
Transparent bridging automatically enabled
on DIALs ports? (Yes, No, Quit): [Yes]
```

Enter **y** to automatically add transparent bridge ports to the bridge configuration for each of the DIALs interfaces.

Enter **n** to automatically disable Bridging on each of the DIALs dial-in interfaces.

3. If you choose to configure bridging, Spanning Tree Bridging (STB) will be enabled on all LAN interfaces. You will see the following panels:

```
Type 'r' any time at this level to restart Bridging Configuration

STB will be enabled on all LAN interfaces
```

Enter **y** to configure SRT bridging. Otherwise, enter **n**. For each Token-Ring interface in the configuration, you will be prompted to enable Source Routing on the interface.

```
Configure SRT Bridging? (Yes, No): [Yes]
You are now configuring the Source Routing part of SRT Bridging
Bridge Number (hex) of this Router (1-F): [A]
```

4. Enter a bridge number, which is a hexadecimal value from 1 to F that is unique between two parallel segments.

```
Interface 0 (Port 1) is of type Token Ring
Configure Source Routing on this interface (Yes, No): [Yes]
```

5. Enter **y** to configure source routing on the interface. The console displays the next two lines.

```
Configuring Interface 0 (Port 1)
Segment Number (hex) of this Interface (1-FFF): [A1]
```

**Note:** The port number increases by one because source routing bridging does not allow a port number of zero.



A unique hexadecimal value from 1 to FFF is assigned to each interface. The interfaces on each ring (segment) have the same segment number, but the segment number is unique to each ring.

These prompts appear for each Token Ring interface.

```
Interface 1 (Port 2) is of type Token Ring
Configure Source Routing on this interface? (Yes, No): [Yes]
Configuring Interface 1 (Port 2)
Segment Number (hex) of this Interface (1-FFF): [A2]
```

If more than two interfaces are configured for source routing, enter a unique hexadecimal value from 1 to FFF unique for the internal virtual segment.

```
Virtual Segment Number (hex) of this Router (1-FFF): [A4]
```

6. A panel similar to the following is displayed:

```
This is all configured bridging information:

  Interfaces configured for STB:

  Interface #   Port #   Interface Type
  -----
           0           1           Token Ring
           1           2           Token Ring

The Source Routing part of SRT Bridging has been enabled

Bridge Number of this Router: A

Interfaces configured for Source Routing:

  Interface #   Port#   Segment #   Interface Type
  -----
           0           1           A1           Token Ring
           1           2           A2           Token Ring

Virtual Segment Number of this Router: A4

Save this Configuration? (Yes, No): [Yes]
```

7. Enter **y** to save the bridging configuration and continue with quick configuration. Enter **n** to re-display the bridging configuration prompts.

If you enter **y**, the following message appears:

```
Bridging configuration saved
```

---

## Configuring Protocols

After you save the bridging configuration, you will see the following panel:

```
*****
Protocol Configuration
*****

Type 'Yes' to Configure Protocols
Type 'No' to skip Protocol Configuration
Type 'Quit' to exit Quick Config

Configure Protocols? (Yes, No, Quit): [Yes]
```

Take one of the following actions:

- Enter **y** to configure the protocols.

- Enter **n** to skip protocol configuration and continue with quick configuration.
- Enter **q** to exit quick configuration.

You will first configure IP, then IPX, and then DECnet.

## Configuring IP

When you answer **y** to the Configure Protocol panel, quick configuration displays the following messages:

```
Type 'r' any time at this level to restart Protocol configuration
Configure IP? (Yes, No): [Yes]
```

1. Take one of the following actions:
  - Enter **y** to configure IP.
  - Enter **n** to skip IP configuration and continue with quick configuration.

If you have configured for DIALs dial-in interfaces, the following panel will be displayed:

```
Automatically configure IP on DIALs dial-in interfaces (this will
also enable ARP subnet routing)? (Yes, No, Quit): [Yes]
```

2. Take one of the following actions:
  - Enter **y** to automatically add unnumbered IP addresses for each DIALs interface. It will also enable ARP Subnet Routing for the router and turn off the sending of RIP packets on DIALs interfaces. All of these options are required for Dial-In Access to LANs interfaces and it is recommended for you to answer yes to this question if you desire IP to be enabled on DIALs interfaces.
  - Enter **n** to automatically disable IP on each of the DIALs dial-in interfaces.

The following lines appear for each interface.

```
Configuring Per-Interface IP Information
Type 'Yes' to Configure IP on this interface
Type 'No' to skip to the next interface
Type '?' to list interfaces
Type an interface # to skip to that interface
Type 'Quit' to exit Per-Interface IP Configuration

Configure IP on Interface 0 (Token Ring)?
(Yes, No, #, ?, Quit) [Yes]
IP Address: [] 128.185.141.1
Address Mask: [255.255.0.0]
```

3. Enter the IP address in decimal notation for example, 128.185.142.20. The console displays one of the following error messages if you enter an invalid IP address:

```
Bad address, please try again.
```

```
This address has already been assigned. Enter a different address
```

Address mask is a decimal value that reflects the IP network or subnetwork to which this interface is attached.

For more information about IP addressing or address masks, refer to the *Protocol Configuration and Monitoring Reference*, or consult your network administrator.

```
Per-Interface IP Configuration complete
```

```
Configuring IP Routing Information
Enable Dynamic Routing (Yes, No): [Yes]
```

4. Enter **y** if you want the routing protocols (RIP or OSPF) to build the routing tables. Enter **n** to manually add IP address destinations to the routing tables (static routes).

```
Enable OSPF? (Yes, No): [Yes]
```

5. Enter **y** to enable the OSPF routing protocol as the primary dynamic IP routing protocol. RIP will be enabled only to send advertisements, not to receive them. Enter **n** if you do not want to use OSPF. RIP will be enabled to send and receive advertisements.

```
OSPF Enabled with Max routes = 1000 and Max routers = 50
```

Max routes is the maximum number of autonomous system (AS) external routes imported into the OSPF routing domain. Max routers is the maximum number of OSPF routers in the routing domain.

```
Routing Configuration Complete
```

```
SNMP will be configured with the following parameters:
```

```
Community: public
Access:     READONLY
```

```
If you plan to use the graphical configuration tool
to download a configuration, it requires the definition
of a community name with read_write_trap access.
```

```
Define community with read_write_trap access ? (Yes, No): [Yes]
```

```
This is the information you have entered:
```

Interface #	IP Address	Address Mask
0	128.185.141.1	255.255.255.0
1	128.185.142.1	255.255.255.0
2	128.185.143.1	255.255.255.0

```
OSPF is configured, and RIP is configured only for 'sending'
```

```
SNMP has been configured with the following parameters:
```

```
Community: public
Access:     read_trap
```

```
Community: dana
Access:     read_write_trap
```

```
Save this configuration? (Yes, No): [Yes]
```

6. Enter **y** to save the IP configuration and continue with quick configuration. Enter **n** to re-display the protocol configuration prompts.

## Configuring IPX

After you save the IP configuration, you will see the following messages:

Configure IPX? (Yes, No): [Yes]

1. Enter **y** to configure IPX. Enter **n** to skip IPX configuration and continue with quick configuration.

You will see messages similar to the following:

```
Type 'r' any time at this level to restart IPX Configuration
IPX Configuration is already present
Configure IPX anyway? (Yes, No): [No] yes
```

2. Enter **y** to replace the existing configuration. Enter **n** to keep the current configuration and continue.

If you have configured for DIALs dial-in interfaces the following panel will be displayed:

Enable IPX on DIALs interfaces? (Yes, No): [Yes]

3. Enter **y** to automatically enable IPX on each of the DIALs interfaces. A random IPX network number will be generated for the interface and IPXWAN will be disabled for the DIALs interface. It is required that IPXWAN be disabled for DIALs interfaces.

Enter **n** to automatically disable IPX on each of the DIALs dial-in interfaces.

```
Configuring Per-Interface IPX Information

Type 'Yes' to Configure IPX on this interface
Type 'No' to skip to the next interface
Type an interface # to skip to that interface
Type '?' to list interfaces
Type 'Quit' to exit Per-Interface IPX Configuration

Configure IPX on Interface 0 (Token Ring)?
(Yes, No, #, ?, Quit) [Yes]
```

4. The next messages and your responses depend on whether you are configuring Token-Ring or Ethernet.

#### **Configuring Interface 0 (Token Ring):**

- a. The following prompt is displayed:

```
Token Ring encapsulation (frame) type? (TOKEN-RING MSB, TOKEN-RING LSB,
TOKEN-RING_SNAP MSB, TOKEN-RING_SNAP LSB): [TOKEN-RING MSB]
```

- b. Enter the encapsulation type used by the IPX protocol on your Token-Ring end stations.

Token-Ring MSB:	Most common encapsulation type and the default. The IBM 2210 builds outgoing packets with a 3-byte 802.2 header, (0xE0, 0xE0, 0x03). It sends the source and destination addresses in MSB (most significant bit), or noncanonical, format, which is the native address format for Token-Ring.
Token-Ring LSB	Same as Token-Ring MSB except the IBM 2210 sends the addresses in LSB (least significant bit), or canonical, format.
Token-Ring SNAP MSB	The IBM 2210 builds outgoing packets with an 8-byte 802.2/SNAP header (0xAA, 0xAA, 0x03, 0x00, 0x00, 0x00, 0x81, 0x37). It sends the source and destination addresses in most significant bit (MSB), or noncanonical, format.

Token-Ring SNAP LSB Same as Token-Ring SNAP MSB except the IBM 2210 sends the addresses in LSB, or canonical, format.

### Configuring IPX for Ethernet:

- a. The following prompts are displayed:

```
Ethernet encapsulation type? (ETHERNET_8022, ETHERNET_8023, ETHERNET_ii,
ETHERNET_SNAP): [ETHERNET_8023]
```

- b. Enter the encapsulation type used by the IPX protocol on your Ethernet end stations.

Ethernet_8022	Packet includes an 802.2 header.
Ethernet_8023	Uses an IEEE 802.3 packet format without the 802.2 header. This is the default and the default for NetWare versions prior to 4.0. Ethernet 802.3 does not conform to the IEEE 802 standards because it does not include an 802.2 header. It may cause problems with other nodes on the network.
Ethernet_II	Uses Ethernet type 8137 as the packet format. This format is required if you are using NetWare VMS on the Ethernet. This is the default for NetWare Versions 4.0 and higher.
Ethernet_SNAP	Uses the 802.2 format with a SNAP header. This encapsulation type is meant to be compatible with token-ring SNAP encapsulation. However, it violates IEEE standards and is not interoperable across conformal bridges.

5. Assign an IPX network number to the associated directly connected network. Every IPX interface must have a unique network number.

```
Configure IPX on Interface 1 (WAN PPP)
(Yes, No, #, ?, Quit) [Yes]
Network Number (hex) (1-FFFFFFFD): [1] 2

Enable IPXWAN? (Yes, No): [No] yes

Configure IPS on Interface 2 (WAN PPP)
(Yes, No, #, ?, Quit) [Yes]
Network Number (hex) (1-FFFFFFFD): [1] 3

Enable IPXWAN? (Yes, No): [No] yes

Host Number for Serial Lines: (000000000000) 1

Configure IPXWAN NodeID? (Yes, No): [Yes]
NodeID (hex) (1 - FFFFFFFD): [1] 4
```

If enabled, the IPXWAN protocol negotiates routing parameters to be used on the PPP serial interface before IPX packet forwarding begins. IPXWAN is not required to forward IPX packets on PPP serial interfaces. The IPXWAN Node ID is a unique IPX network number that identifies the router, and is required if IPXWAN is enabled on any network interfaces.

6. Host number is a unique 12-digit hexadecimal value assigned to an IPX router. It is required because serial lines do not have hardware node addresses from which to build a host number.

This is the information you have entered:

Per-Interface Configuration Information

Cir	Ifc	IPX Net(hex)	Encapsulation	IPXWAN
1	1	10	ETHERNET_8023	Not Configured
2	3	300		Not Configured
3	5	400		Not Configured
4	6	600		Enabled

Host Number for Serial Lines: 0002210A0000

IPXWAN Node ID = 2210A

IPX Router Name = ipxwan\_router-2210A

Save this configuration? (Yes, No): [Yes]

7. Enter **y** to save the IPX configuration and continue with quick configuration. Enter **n** to re-display the IPX configuration prompts.

If you enter **y**, the following message appears:

IPX configuration saved

## Configuring DECnet (DNA)

After you save the IPX configuration, you will see the following messages.

IPX Configuration saved

Configure DNA? (Yes, No): [Yes]

1. Enter **y** to configure DNA. Enter **n** to skip DNA configuration and continue with quick configuration.

Type 'r' any time at this level to restart DNA Configuration

Configuring Global DNA information

Highest Node Number (decimal) (1-1023): [32]

Router Level (Level1, Level2, DEC Level1, DEC Level2):  
[ Level2]

Highest Area (decimal) (1-63): [63]

Node Address (area.node): (63.32)

The above configuration fields are configured with the following considerations:

### Highest Node Number

Is the highest node address in the router's area. Setting it excessively high will affect the routers efficiency and require excess storage.

### Router Level

Identifies whether the router is a Level 1 or Level 2 router. A Level 1 router keeps track of all nodes in its area and does not care about nodes outside its area. A Level 2 router routes traffic between areas.

Normally you should select Level1 or Level2 with the following exception: select DEC Level1 or DEC Level2 only when this router must communicate over X.25 networks with routers conforming to the DEC X.25 standard.

### Highest Area

This number should be at least as high as the highest area number in the overall network.

### Node Address

Is the node ID of this router and must be unique in the network.

When you press Enter, the following is displayed:

```
Configuring Per-Interface DNA Information
Configuring Max Routers on each interface
Configuring Interface 0 (Ethernet)
Configure DNA on this interface? (Yes, No) [YES]
Max Routers (decimal) (1-33): [16]
Configuring Interface 1 (WAN PPP)
Configure DNA on this interface? (Yes, No) [Yes]
Configuring Interface 2 (Token Ring)
Configure DNA on this interface? (Yes, No) [Yes]
Max Routers (decimal) (1-33): [16]
```

2. Enter **y** for every interface that will be connected to the DECnet network. For LANs, Max Routers specifies how many other routers may be on this circuit. For router efficiency and memory requirements set this argument to a few more than the total number of adjacent routers on this circuit.

The following panel is displayed:

```
This is the information you have entered:

Global Configuration Information
Highest Node Number:      32
Router Level:             Level2
Highest Area:             63
Node Address:             63.32

Pre-Interface Configuration Information
Interface Number          Max Routers
0                          16
1                          1
2                          16

Save this configuration? (Yes, No): [Yes]
```

3. Enter **y** to save the DECnet configuration and continue with the quick configuration. Enter **n** to re-display the DECnet configuration prompts. If you enter **y**, the following message appears:

DNA Configuration Saved

## Configuring Booting

```
*****  
Boot Configuration  
*****  
  
Type 'Yes' to Configure Booting  
Type 'No' to skip Booting Configuration  
Type 'Quit' to exit Quick Config  
  
Configure Booting? (Yes, No, Quit): [Yes]
```

1. Enter **y** to display the boot configuration prompts. Enter **n** to skip boot configuration. Enter **q** to exit quick configuration.  
Any previous boot information is displayed, as illustrated in the following example:

```
Type 'r' any time at this level to restart Boot configuration  
  
Previous Boot information  
  
Booting Method:TFTP Boot  
Interface Number:0  
Interface IP Address:128.185.133.18  
Address Mask:255.255.255.0  
Host IP Address:128.185.120.120  
Gateway IP Address:128.185.133.7  
Boot file Name:ibm2210.ldc  
Create a boot record using this information? (yes, No): [Yes]
```

2. Enter **y** to create a boot record with the previous boot information and display the following prompts:

```
Boot Configuration saved  
  
Enable Console Modem-Control (Yes, No, Quit): [No]
```

3. Take one of the following actions:
  - Enter **y** if you are connecting a console to the IBM 2210 through a modem and if you want autologout on lost phone connections.
  - Enter **n** to connect a console directly to the IBM 2210.
  - Enter **q** to exit quick configuration.

When you enter **no**, you can then select another boot option from the next prompt.

```
Select Booting Method (TFTP Boot, BOOTP Boot, IBD Boot): [ ]
```

4. Enter the booting method you will use to boot the IBM 2210:
  - TFTP
  - BOOTP
  - IBD

The following sections describe the prompts that appear for each method.



## TFTP Boot

Select Booting Method (TFTP Boot, BOOTP Boot, IBD Boot): [ ]

1. Enter **TFTP** to boot using a TFTP host server and respond to the following prompts:

Interface Number ( ): [0]                      The number of the LAN interface over which to boot. For this version of the IBM 2210, you must use the default of 0.

Interface IP Address: [0.0.0.0]                IP address of the interface over which to boot. Enter the IP address in decimal notation.

Address Mask: [255.255.0.0]                 Address mask identifies the IP address class type. Class A is 255.0.0.0, Class B is 255.255.0.0, and Class C is 255.255.255.0.

Host IP Address: [ ]                          IP address of the host that contains the boot file.

Via Gateway: [ ]                              If the host is not on the same (sub)network as the IBM 2210, enter the IP address of an intermediate router.

Boot File Name:                              Name of the file over which to boot. You must use the full path for the boot file, for example:  
(*/path/filename.ext*)                        */usr/2210/bootfile.name*

```
TFTP Boot Configuration Complete

This is the information you have entered:

    Booting Method:TFTP Boot
    Interface Number:0
    Interface IP Address:128.185.141.1
    Address Mask:255.255.255.0
    Host IP Address:128.185.120.120
    Gateway IP Address:128.185.141.7
    Boot File Name:ibm2210.ldc

Save this configuration? (Yes, No): [Yes]
```

2. Enter **y** to create a boot record. Enter **n** to restart the boot configuration prompts.

## BOOTP Boot

Select Booting Method (TFTP Boot, BOOTP Boot, IBD Boot): [ ]

1. Enter **BOOTP** and the console displays a prompt to enter the interface number over which to boot.

Then a message similar to the following appears:

```
BOOTP Boot Configuration Complete

This is the information you have entered:

    Booting Method:BOOTP Boot
    Interface Number: 1

Save this configuration? (Yes, No): [Yes]
```

2. Enter **y** to create a boot record. Enter **n** to restart the boot configuration prompts.

## IBD Boot

```
Select Booting Method (TFTP Boot, BOOTP Boot, IBD Boot): [ ]
```

1. Enter **IBD** and the console displays a list of software loads in the IBD.

```
The following # loads(s) exist in the IBD  
load.name load.name load.name load.name
```

```
You may use only these loads to configure an IBD boot record  
IBD Load Name: (load.name) [ ]
```

2. Enter the name of the load you want the IBM 2210 to load when it boots.

```
IBD Boot Configuration Complete
```

```
This is the information you have entered:
```

```
Booting Method:      IBD Boot  
IBD Load Name:      load.name
```

If a load does not exist in the IBD, you receive the following message:

```
There are no loads in the IBD. Select another booting  
method
```

3. Enter **TFTP** or **BOOTP** to use another booting method.

---

## Enabling Console Modem-Control

```
Enable Console Modem-Control (Yes, No, Quit): [No]
```

Take one of the following actions:

- Enter **y** if you are connecting a console to the IBM 2210 through a modem and if you want autologout on lost phone connections.
- Enter **n** to connect a console directly to the IBM 2210.
- Enter **q** to exit quick configuration.

---

## Restarting the Router

After configuring, you will receive the following message:

```
Quick Config Done  
Restart the router? (Yes, No): [Yes]
```

1. Enter **y** to restart the router with the new configuration and display the following information:

```
RESTARTING THE ROUTER.....
```

```
Copyright IBM Corp. 1994, 1996  
MOS Operator Console
```

```
For help using the Command Line Interface, press ESCAPE, then '?'
```

```
*
```

2. Enter **n** and the console displays the following message:

Type **RESTART** at the Config> prompt for the configuration to take effect  
Config>

3. Enter **restart restart** after the Config> prompt to restart the IBM 2210 with the new configuration. To change or view the current configuration, enter **qc**.



---

## Appendix B. X.25 National Personalities

This appendix lists the default settings for GTE-Telenet and DDN.

---

### GTE-Telenet

The following parameters are the default settings for GTE-Telenet:

- Callreq: 20
- Clearreq:
  - Retries: 1
  - Timer: 18
- Disconnect: Passive
- DP-timer: 500 milliseconds
- Frame window size: 7
- Network Type: CCITT
- N2 timeouts: 20
- Packet:
  - Default size: 128
  - Maximum size: 256
  - Window size: 2
- Reset
  - Retries: 1
  - Timer: 18
- Restart
  - Retries: 1
  - Timer: 18
- Standard: 1984
- T1-timer: 4
- T2-timer: 2

---

### DDN

The following parameters are the default settings for DDN:

- Callreq: 20
- Clearreq:
  - Retries: 1
  - Timer: 18
- Disconnect: Passive
- DP-timer: 500 milliseconds
- Frame window size: 7
- Network Type: CCITT
- N2 timeouts: 20
- Packet:
  - Default size: 128
  - Maximum size: 256

- Window size: 2
- Reset
  - Retries: 1
  - Timer: 18
- Restart
  - Retries: 1
  - Timer: 18
- Standard: 1984
- T1-timer: 4
- T2-timer: 2

---

## Appendix C. Making a Router Load File from Multiple Disks

If a software load arrives on multiple disks, use the procedure in the following sections to combine the loads into one load file that the router can use at the time of booting.

The first disk contains the following four files that you need if you want to fragment an existing load for transport on multiple diskettes.

### **cutup.c**

(UNIX C source file that can be compiled using a standard C compiler)

### **cutup.exe**

(DOS)

Use the following files for reassembling the load fragments onto a DOS or UNIX server.

### **kopy.bat**

(DOS)

**kopy** (UNIX shell script)

---

## Assembling a Load File Under DOS

To assemble a load from the two diskettes, use the DOS batch file provided on diskette 1 (KOPY.BAT) using the following syntax:

```
kopy <installation_drive><destination_directory>
```

Before assembling the load make sure that you have created a destination directory, and that you have inserted the first diskette in the drive specified by the `installation_diskette_drive` parameter. The following example illustrates this procedure.

```
B:\>kopy b: c:\source\cutup\tmp
B:\>copy c:\gw0/B c:\source\cutup\tmp\gw.tmp
1 file(s) copied
.
Please mount the second diskette
Press any key to continue . . .
Copying the second load file fragment
B:\>
B:\>copy c:\source\cutup\tmp\gw.tmp/B + b:\gw1
c:\source\cutup\tmp\gw.tmp c:\SOURCE\CUTUP\TMP\GW.TMP
B:\GW1
1 file(s) copied
B:\>rename c:\source\cutup\tmp\gw.tmp gw.ldc
Load file reassembly was successful
B:>
```

---

## Assembling a Load File Under UNIX

To assemble a load from two UNIX diskettes, you can use the UNIX Bourne shell script (`kopy`) provided on diskette 1 using the following syntax:

```
kopy<installation_drive><diskette_directory><destination_directory>
```

Before assembling the load make sure that you have created the mount and destination directories, and that you have inserted the first diskette in the drive specified by the `installation_diskette_drive` parameter. The following example illustrates this procedure.

```
kopy /dev/fd0 /kew /pcfs
```

Please insert the first diskette

Copying the first load file fragment

Please mount the second diskette

Copying the second load file fragment

Load file reassembly was successful

```
# ls /kew
```

```
gw0  gw1  gw.ldc
```

If you can't use the UNIX Bourne shell script, you can assemble the load manually using the following procedure:

1. Copy the load fragments on the two diskettes (gw0 and gw1) into a directory on the UNIX file system.
2. Type the following UNIX command:

```
cat gw0 gw1 > gw.ldc
```

The resulting file (gw.ldc) is the assembled router load.

---

## Disassembling a Load File Under DOS

To disassemble a load under DOS, use the CUTUP.EXE file as follows:

```
cutup<file_extension><file_name><cut_length>
```

The file\_extension is attached to the front of each slice needed to cut. The file\_name is the DOS file name of the file to be disassembled. The cut\_length is the length that CUTUP.EXE makes each fragment as it disassembles the file. The following example illustrates this procedure.

```
C: \source\cutup>dir
Volume in drive C has no label
Volume Serial Number is XXXXXXXX
Directory of C: \SOURCE\CUTUP
.0730934:46p
..0730934:46p
GW      LDC 10225660728931:22p
CUTUP  EXE 105410902939:38a
2 file(s) 1033107 bytes
14811136 bytes free
C: \source\cutup>cutup gw.ldc gw 1000000
.....
.....
c: \SOURCE\CUTUP>dir
Volume in drive C has no label
Volume Serial Number is XXXXXXXX
Directory of C: \SOURCE\CUTUP
.0730934:46p
..0730934:46p
GW      0 10000000801931:22p
GW      LDC 10225660728931:22p
CUTUP  EXE 105410902939:38a
GW      1 225660801931:22p
4 file(s) 2055673 bytes
14811136 bytes free
```



---

## Disassembling a Load File Under UNIX

To disassemble a load under use cutup.c. Begin by compiling the program using your UNIX compiler to make a cutup executable file. Then use the following syntax:

```
cutup<file_extension><file_name><cut_length>
```

The file\_extension is attached to the front of each slice needed to cut. The file\_name is the DOS file name of the file to be disassembled. The cut\_length is the length CUTUP.EXE that is used to disassemble the file. The following example illustrates this procedure.

```
# ls -la
total 658
drwxrwxr-x 2 root 512 Aug 114:41 .
drwxrwxr-x 26 root 1024 Aug 114:41 ..
drwxrwxr-x 2 root 24576 Aug 114:41 cutup
drwxrwxr-r 2 root1022566 Aug 114:41 gw.ldc
```

```
# cutup gw.ldc gw 100000
```

```
# ls -la
total 658
drwxrwxr-x 2 root 512 Aug 114:41 .
drwxrwxr-x 26 root 1024 Aug 114:41 ..
drwxrwxr-x 2 root 24576 Aug 114:41 cutup
drwxrwxr-r 2 root1022566 Aug 114:41 gw.ldc
drwxrwxr-r 2 root1000000 Aug 114:41 gw0
drwxrwxr-r 2 root 22566 Aug 114:41 gw1
```



---

## List of Abbreviations

<b>AARP</b>	AppleTalk Address Resolution Protocol
<b>ABR</b>	area border router
<b>ack</b>	acknowledgment
<b>AIX</b>	Advanced Interactive Executive
<b>AMA</b>	arbitrary MAC addressing
<b>AMP</b>	active monitor present
<b>ANSI</b>	American National Standards Institute
<b>AP2</b>	AppleTalk Phase 2
<b>APPN</b>	Advanced Peer-to-Peer Networking
<b>ARE</b>	all-routes explorer
<b>ARI</b>	ATM real interface
<b>ARI/FCI</b>	address recognized indicator/frame copied indicator
<b>ARP</b>	Address Resolution Protocol
<b>AS</b>	autonomous system
<b>ASBR</b>	autonomous system boundary router
<b>ASCII</b>	American National Standard Code for Information Interchange
<b>ASN.1</b>	abstract syntax notation 1
<b>ASRT</b>	adaptive source routing transparent
<b>ASYNC</b>	asynchronous
<b>ATCP</b>	AppleTalk Control Protocol
<b>ATP</b>	AppleTalk Transaction Protocol
<b>AUI</b>	attachment unit interface
<b>AVI</b>	ATM virtual interface
<b>ayt</b>	are you there
<b>BAN</b>	Boundary Access Node
<b>BBCM</b>	Bridging Broadcast Manager
<b>BECN</b>	backward explicit congestion notification
<b>BGP</b>	Border Gateway Protocol
<b>BNC</b>	bayonet Niell-Concelman
<b>BNCP</b>	Bridging Network Control Protocol
<b>BOOTP</b>	BOOT protocol
<b>BPDU</b>	bridge protocol data unit
<b>bps</b>	bits per second
<b>BR</b>	bridging/routing

**BRS** bandwidth reservation  
**BSD** Berkeley software distribution  
**BTP** BOOTP relay agent  
**BTU** basic transmission unit  
**CAM** content-addressable memory  
**CCITT** Consultative Committee on International Telegraph and Telephone  
**CD** collision detection  
**CGWCON**  
     Gateway Console  
**CIDR** Classless Inter-Domain Routing  
**CIP** Classical IP  
**CIR** committed information rate  
**CLNP** Connectionless-Mode Network Protocol  
**CPU** central processing unit  
**CRC** cyclic redundancy check  
**CRS** configuration report server  
**CTS** clear to send  
**CUD** call user data  
**DAF** destination address filtering  
**DB** database  
**DBsum**  
     database summary  
**DCD** data channel received line signal detector  
**DCE** data circuit-terminating equipment  
**DCS** Directly connected server  
**DDLC** dual data-link controller  
**DDN** Defense Data Network  
**DDP** Datagram Delivery Protocol  
**DDT** Dynamic Debugging Tool  
**DHCP** Dynamic Host Configuration Protocol  
**dir** directly connected  
**DL** data link  
**DLC** data link control  
**DLCI** data link connection identifier  
**DLS** data link switching  
**DLSw** data link switching  
**DMA** direct memory access  
**DNA** Digital Network Architecture

<b>DNCP</b>	DECnet Protocol Control Protocol
<b>DNIC</b>	Data Network Identifier Code
<b>DoD</b>	Department of Defense
<b>DOS</b>	Disk Operating System
<b>DR</b>	designated router
<b>DRAM</b>	Dynamic Random Access Memory
<b>DSAP</b>	destination service access point
<b>DSE</b>	data switching equipment
<b>DSE</b>	data switching exchange
<b>DSR</b>	data set ready
<b>DSU</b>	data service unit
<b>DTE</b>	data terminal equipment
<b>DTR</b>	data terminal ready
<b>Dtype</b>	destination type
<b>DVMRP</b>	Distance Vector Multicast Routing Protocol
<b>E1</b>	2.048 Mbps transmission rate
<b>EDEL</b>	end delimiter
<b>EDI</b>	error detected indicator
<b>EGP</b>	Exterior Gateway Protocol
<b>EIA</b>	Electronics Industries Association
<b>ELAN</b>	Emulated LAN
<b>ELAP</b>	EtherTalk Link Access Protocol
<b>ELS</b>	Event Logging System
<b>ESI</b>	End system identifier
<b>EST</b>	Eastern Standard Time
<b>Eth</b>	Ethernet
<b>fa-ga</b>	functional address-group address
<b>FCS</b>	frame check sequence
<b>FECN</b>	forward explicit congestion notification
<b>FIFO</b>	first in, first out
<b>FLT</b>	filter library
<b>FR</b>	Frame Relay
<b>FRL</b>	Frame Relay
<b>FTP</b>	File Transfer Protocol
<b>GMT</b>	Greenwich Mean Time
<b>GOSIP</b>	Government Open Systems Interconnection Profile

**GTE** General Telephone Company

**GWCON** Gateway Console

**HDLC** high-level data link control

**HEX** hexadecimal

**HPR** high-performance routing

**HST** TCP/IP host services

**HTF** host table format

**IBD** Integrated Boot Device

**ICMP** Internet Control Message Protocol

**ICP** Internet Control Protocol

**ID** identification

**IDP** Initial Domain Part

**IDP** Internet Datagram Protocol

**IEEE** Institute of Electrical and Electronics Engineers

**ifc#** interface number

**IGP** interior gateway protocol

**InARP** Inverse Address Resolution Protocol

**IP** Internet Protocol

**IPCP** IP Control Protocol

**IPPN** IP Protocol Network

**IPX** Internetwork Packet Exchange

**IPXCP** IPX Control Protocol

**ISDN** integrated services digital network

**ISO** International Organization for Standardization

**Kbps** kilobits per second

**LAC** L2TP Network Access Concentrator

**LAN** local area network

**LAPB** link access protocol-balanced

**LAT** local area transport

**LCP** Link Control Protocol

**LED** light-emitting diode

**LF** largest frame; line feed

**LIS** Logical IP subnet

**LLC** logical link control

**LLC2** logical link control 2

**LMI** local management interface

**LNS** L2TP Network Server

**LRM** LAN reporting mechanism  
**LS** link state  
**LSA** link state advertisement  
**LSB** least significant bit  
**LSI** LAN shortcuts interface  
**LSreq** link state request  
**LSrxl** link state retransmission list  
**LU** logical unit  
**MAC** medium access control  
**Mb** megabit  
**MB** megabyte  
**Mbps** megabits per second  
**MBps** megabytes per second  
**MC** multicast  
**MCF** MAC filtering  
**MIB** Management Information Base  
**MIB II** Management Information Base II  
**MILNET**  
     military network  
**MOS** Micro Operating System  
**MOSDBG**  
     Micro Operating System Debugging Tool  
**MOSPF**  
     Open Shortest Path First with multicast extensions  
**MSB** most significant bit  
**MSDU** MAC service data unit  
**MRU** maximum receive unit  
**MTU** maximum transmission unit  
**nak** not acknowledged  
**NBMA** Non-Broadcast Multiple Access  
**NBP** Name Binding Protocol  
**NBR** neighbor  
**NCP** Network Control Protocol  
**NCP** Network Core Protocol  
**NetBIOS**  
     Network Basic Input/Output System  
**NHRP** Next Hop Resolution Protocol  
**NIST** National Institute of Standards and Technology  
**NPDU** Network Protocol Data Unit

**NRZ** non-return-to-zero  
**NRZI** non-return-to-zero inverted  
**NSAP** Network Service Access Point  
**NSF** National Science Foundation  
**NSFNET**  
National Science Foundation NETwork  
**NVCNFG**  
nonvolatile configuration  
**OPCON**  
Operator Console  
**OSI** open systems interconnection  
**OSICP**  
OSI Control Protocol  
**OSPF** Open Shortest Path First  
**OUI** organization unique identifier  
**PC** personal computer  
**PCR** peak cell rate  
**PDN** public data network  
**PING** Packet internet groper  
**PDU** protocol data unit  
**PID** process identification  
**P-P** Point-to-Point  
**PPP** Point-to-Point Protocol  
**PROM** programmable read-only memory  
**PU** physical unit  
**PVC** permanent virtual circuit  
**RAM** random access memory  
**RD** route descriptor  
**REM** ring error monitor  
**REV** receive  
**RFC** Request for Comments  
**RI** ring indicator; routing information  
**RIF** routing information field  
**RII** routing information indicator  
**RIP** Routing Information Protocol  
**RISC** reduced instruction-set computer  
**RNR** receive not ready  
**ROM** read-only memory



**ROpcon** Remote Operator Console

**RPS** ring parameter server

**RTMP** Routing Table Maintenance Protocol

**RTP** RouTing update Protocol

**RTS** request to send

**Rtype** route type

**rxmits** retransmissions

**rxmt** retransmit

**SAF** source address filtering

**SAP** service access point

**SAP** Service Advertising Protocol

**SCR** Sustained cell rate

**SCSP** Server Cache Synchronization Protocol

**sdel** start delimiter

**SDLC** SDLC relay, synchronous data link control

**seqno** sequence number

**SGID** sever group id

**SGMP** Simple Gateway Monitoring Protocol

**SL** serial line

**SMP** standby monitor present

**SMTP** Simple Mail Transfer Protocol

**SNA** Systems Network Architecture

**SNAP** Subnetwork Access Protocol

**SNMP** Simple Network Management Protocol

**SNPA** subnetwork point of attachment

**SPF** OSPF intra-area route

**SPE1** OSPF external route type 1

**SPE2** OSPF external route type 2

**SPIA** OSPF inter-area route type

**SPID** service profile ID

**SPX** Sequenced Packet Exchange

**SQE** signal quality error

**SRAM** static random access memory

**SRB** source routing bridge

**SRF** specifically routed frame

**SRLY** SDLC relay

**SRT** source routing transparent

<b>SR-TB</b>	source routing-transparent bridge
<b>STA</b>	static
<b>STB</b>	spanning tree bridge
<b>STE</b>	spanning tree explorer
<b>STP</b>	shielded twisted pair; spanning tree protocol
<b>SVC</b>	switched virtual circuit
<b>TB</b>	transparent bridge
<b>TCN</b>	topology change notification
<b>TCP</b>	Transmission Control Protocol
<b>TCP/IP</b>	Transmission Control Protocol/Internet Protocol
<b>TEI</b>	terminal point identifier
<b>TFTP</b>	Trivial File Transfer Protocol
<b>TKR</b>	token ring
<b>TMO</b>	timeout
<b>TOS</b>	type of service
<b>TSF</b>	transparent spanning frames
<b>TTL</b>	time to live
<b>TTY</b>	teletypewriter
<b>TX</b>	transmit
<b>UA</b>	unnumbered acknowledgment
<b>UDP</b>	User Datagram Protocol
<b>UI</b>	unnumbered information
<b>UTP</b>	unshielded twisted pair
<b>VCC</b>	Virtual Channel Connection
<b>VINES</b>	Virtual NEtworking System
<b>VIR</b>	variable information rate
<b>VL</b>	virtual link
<b>VNI</b>	Virtual Network Interface
<b>VR</b>	virtual route
<b>WAN</b>	wide area network
<b>WRS</b>	WAN restoral/reroute
<b>X.25</b>	packet-switched networks
<b>X.251</b>	X.25 physical layer
<b>X.252</b>	X.25 frame layer
<b>X.253</b>	X.25 packet layer
<b>XID</b>	exchange identification

**XNS** Xerox Network Systems  
**XSUM** checksum  
**ZIP** AppleTalk Zone Information Protocol  
**ZIP2** AppleTalk Zone Information Protocol 2  
**ZIT** Zone Information Table



---

## Glossary

This glossary includes terms and definitions from:

- The *American National Standard Dictionary for Information Systems*, ANSI X3.172-1990, copyright 1990 by the American National Standards Institute (ANSI). Copies may be purchased from the American National Standards Institute, 11 West 42nd Street, New York, New York 10036. Definitions are identified by the symbol (A) after the definition.
- The ANSI/EIA Standard—440-A, *Fiber Optic Terminology* Copies may be purchased from the Electronic Industries Association, 2001 Pennsylvania Avenue, N.W., Washington, DC 20006. Definitions are identified by the symbol (E) after the definition.
- The *Information Technology Vocabulary* developed by Subcommittee 1, Joint Technical Committee 1, of the International Organization for Standardization and the International Electrotechnical Commission (ISO/IEC JTC1/SC1). Definitions of published parts of this vocabulary are identified by the symbol (I) after the definition; definitions taken from draft international standards, committee drafts, and working papers being developed by ISO/IEC JTC1/SC1 are identified by the symbol (T) after the definition, indicating that final agreement has not yet been reached among the participating National Bodies of SC1.
- The *IBM Dictionary of Computing*, New York: McGraw-Hill, 1994.
- Internet Request for Comments: 1208, *Glossary of Networking Terms*
- Internet Request for Comments: 1392, *Internet Users' Glossary*
- The *Object-Oriented Interface Design: IBM Common User Access Guidelines*, Carmel, Indiana: Que, 1992.

The following cross-references are used in this glossary:

### Contrast with:

This refers to a term that has an opposed or substantively different meaning.

### Synonym for:

This indicates that the term has the same meaning as a preferred term, which is defined in its proper place in the glossary.

### Synonymous with:

This is a backward reference from a defined term to all other terms that have the same meaning.

**See:** This refers the reader to multiple-word terms that have the same last word.

### See also:

This refers the reader to terms that have a related, but not synonymous, meaning.

## A

**AAL.** ATM Adaptation Layer, the layer that adapts user data to/from the ATM network by adding/removing headers and segmenting/reassembling the data into/from cells.

**AAL-5.** ATM Adaptation Layer 5, one of several standard AALs. AAL-5 was designed for data communications, and is used by LAN Emulation and Classical IP.

**abstract syntax.** A data specification that includes all distinctions that are needed in data transmissions, but that omits (abstracts) other details such as those that depend on specific computer architectures. See also *abstract syntax notation 1 (ASN.1)* and *basic encoding rules (BER)*.

**abstract syntax notation 1 (ASN.1).** The Open Systems Interconnection (OSI) method for abstract syntax specified in the following standards:

- ITU-T Recommendation X.208 (1988) | ISO/IEC 8824: 1990
- ITU-T Recommendation X.680 (1994) | ISO/IEC 8824-1: 1994

See also *basic encoding rules (BER)*.

**ACCESS.** In the Simple Network Management Protocol (SNMP), the clause in a Management Information Base (MIB) module that defines the minimum level of support that a managed node provides for an object.

**acknowledgment.** (1) The transmission, by a receiver, of acknowledge characters as an affirmative response to a sender. (T) (2) An indication that an item sent was received.

**active.** (1) Operational. (2) Pertaining to a node or device that is connected or is available for connection to another node or device.

**active monitor.** In a token-ring network, a function performed at any one time by one ring station that

initiates the transmission of tokens and provides token error recovery facilities. Any active adapter on the ring has the ability to provide the active monitor function if the current active monitor fails.

**address.** In data communication, the unique code assigned to each device, workstation, or user connected to a network.

**address mapping table (AMT).** A table, maintained within the AppleTalk router, that provides a current mapping of node addresses to hardware addresses.

**address mask.** For internet subnetworking, a 32-bit mask used to identify the subnetwork address bits in the host portion of an IP address. Synonymous with *subnet mask* and *subnetwork mask*.

**address resolution.** (1) A method for mapping network-layer addresses to media-specific addresses. (2) See also *Address Resolution Protocol (ARP)* and *AppleTalk Address Resolution Protocol (AARP)*.

**Address Resolution Protocol (ARP).** (1) In the Internet suite of protocols, the protocol that dynamically maps an IP address to an address used by a supporting metropolitan or local area network such as Ethernet or token-ring. (2) See also *Reverse Address Resolution Protocol (RARP)*.

**addressing.** In data communication, the way in which a station selects the station to which it is to send data.

**adjacent nodes.** Two nodes connected together by at least one path that connects no other node. (T)

**Administrative Domain.** A collection of hosts and routers, and the interconnecting networks, managed by a single administrative authority.

**Advanced Peer-to-Peer Networking (APPN).** An extension to SNA featuring (a) greater distributed network control that avoids critical hierarchical dependencies, thereby isolating the effects of single points of failure; (b) dynamic exchange of network topology information to foster ease of connection, reconfiguration, and adaptive route selection; (c) dynamic definition of network resources; and (d) automated resource registration and directory lookup. APPN extends the LU 6.2 peer orientation for end-user services to network control and supports multiple LU types, including LU 2, LU 3, and LU 6.2.

**Advanced Peer-to-Peer Networking (APPN) end node.** A node that provides a broad range of end-user services and supports sessions between its local control point (CP) and the CP in an adjacent network node. It uses these sessions to dynamically register its resources with the adjacent CP (its network node server), to send and receive directory search requests, and to obtain management services. An APPN end node can also attach to a subarea network as a peripheral node or to other end nodes.

**Advanced Peer-to-Peer Networking (APPN) network.** A collection of interconnected network nodes and their client end nodes.

**Advanced Peer-to-Peer Networking (APPN) network node.** A node that offers a broad range of end-user services and that can provide the following:

- Distributed directory services, including registration of its domain resources to a central directory server
- Topology database exchanges with other APPN network nodes, enabling network nodes throughout the network to select optimal routes for LU-LU sessions based on requested classes of service
- Session services for its local LUs and client end nodes
- Intermediate routing services within an APPN network

**Advanced Peer-to-Peer Networking (APPN) node.** An APPN network node or an APPN end node.

**agent.** A system that assumes an agent role.

**alert.** A message sent to a management services focal point in a network to identify a problem or an impending problem.

**all-stations address.** In communications, synonym for *broadcast address*.

**American National Standards Institute (ANSI).** An organization consisting of producers, consumers, and general interest groups, that establishes the procedures by which accredited organizations create and maintain voluntary industry standards in the United States. (A)

**analog.** (1) Pertaining to data consisting of continuously variable physical quantities. (A) (2) Contrast with *digital*.

**AppleTalk.** A network protocol developed by Apple Computer, Inc. This protocol is used to interconnect network devices, which can be a mixture of Apple and non-Apple products.

**AppleTalk Address Resolution Protocol (AARP).** In AppleTalk networks, a protocol that (a) translates AppleTalk node addresses into hardware addresses and (b) reconciles addressing discrepancies in networks that support more than one set of protocols.

**AppleTalk Transaction Protocol (ATP).** In AppleTalk networks, a protocol that provides client/server request and response functions for hosts accessing the Zone Information Protocol (ZIP) for zone information.

**APPN network.** See *Advanced Peer-to-Peer Networking (APPN) network*.

**APPN network node.** See *Advanced Peer-to-Peer Networking (APPN) network node*.

**arbitrary MAC addressing (AMA).** In DECnet architecture, an addressing scheme used by DECnet Phase IV-Prime that supports universally administered addresses and locally administered addresses.

**area.** In Internet and DECnet routing protocols, a subset of a network or gateway grouped together by definition of the network administrator. Each area is self-contained; knowledge of an area's topology remains hidden from other areas.

**asynchronous (ASYNCR).** Pertaining to two or more processes that do not depend upon the occurrence of specific events such as common timing signals. (T)

**ATM.** Asynchronous Transfer Mode, a connection-oriented, high-speed networking technology based on cell switching.

**ATMARP.** ARP in Classical IP.

**attachment unit interface (AUI).** In a local area network, the interface between the medium attachment unit and the data terminal equipment within a data station. (I) (A)

**Attribute Value Pair (AVP).** A uniform method of encoding message types and bodies. This method maximizes the extensibility while permitting interoperability of L2TP.

**authentication failure.** In the Simple Network Management Protocol (SNMP), a trap that may be generated by an authentication entity when a requesting client is not a member of the SNMP community.

**autonomous system.** In TCP/IP, a group of networks and routers under one administrative authority. These networks and routers cooperate closely to propagate network reachability (and routing) information among themselves using an interior gateway protocol of their choice.

**autonomous system number.** In TCP/IP, a number assigned to an autonomous system by the same central authority that also assigns IP addresses. The autonomous system number makes it possible for automated routing algorithms to distinguish autonomous systems.

## B

**backbone.** (1) In a local area network multiple-bridge ring configuration, a high-speed link to which the rings are connected by means of bridges or routers. A backbone may be configured as a bus or as a ring. (2) In a wide area network, a high-speed link to which nodes or data switching exchanges (DSEs) are connected.

**backbone network.** A central network to which smaller networks, normally of lower speed, connect. The

backbone network usually has a much higher capacity than the networks it helps interconnect or is a wide-area network (WAN) such as a public packet-switched datagram network.

**backbone router.** (1) A router used to transmit data between areas. (2) One in a series of routers that is used to interconnect networks into a larger internet.

**Bandwidth.** The bandwidth of an optical link designates the information-carrying capacity of the link and is related to the maximum bit rate that a fiber link can support.

**basic transmission unit (BTU).** In SNA, the unit of data and control information passed between path control components. A BTU can consist of one or more path information units (PIUs).

**baud.** In asynchronous transmission, the unit of modulation rate corresponding to one unit interval per second; that is, if the duration of the unit interval is 20 milliseconds, the modulation rate is 50 baud. (A)

**bootstrap.** (1) A sequence of instructions whose execution causes additional instructions to be loaded and executed until the complete computer program is in storage. (T) (2) A technique or device designed to bring itself into a desired state by means of its own action, for example, a machine routine whose first few instructions are sufficient to bring the rest of itself into the computer from an input device. (A)

**Border Gateway Protocol (BGP).** An Internet Protocol (IP) routing protocol used between domains and autonomous systems.

**border router.** In Internet communications, a router, positioned at the edge of an autonomous system, that communicates with a router that is positioned at the edge of a different autonomous system.

**bridge.** A functional unit that interconnects multiple LANs (locally or remotely) that use the same logical link control protocol but that can use different medium access control protocols. A bridge forwards a frame to another bridge based on the medium access control (MAC) address.

**bridge identifier.** An 8-byte field, used in a spanning tree protocol, composed of the MAC address of the port with the lowest port identifier and a user-defined value.

**bridging.** In LANs, the forwarding of a frame from one LAN segment to another. The destination is specified by the medium access control (MAC) sublayer address encoded in the destination address field of the frame header.

**broadcast.** (1) Transmission of the same data to all destinations. (T) (2) Simultaneous transmission of data to more than one destination. (3) Contrast with *multicast*.

**broadcast address.** In communications, a station address (eight 1's) reserved as an address common to all stations on a link. Synonymous with *all-stations address*.

## C

**cache.** (1) A special-purpose buffer storage, smaller and faster than main storage, used to hold a copy of instructions and data obtained from main storage and likely to be needed next by the processor. (T) (2) A buffer storage that contains frequently accessed instructions and data; it is used to reduce access time. (3) An optional part of the directory database in network nodes where frequently used directory information may be stored to speed directory searches. (4) To place, hide, or store in a cache.

**call request packet.** (1) A call supervision packet that a data terminal equipment (DTE) transmits to ask that a connection for a call be established throughout the network. (2) In X.25 communications, a call supervision packet transmitted by a DTE to ask for a call establishment through the network.

**canonical address.** In LANs, the IEEE 802.1 format for the transmission of medium access control (MAC) addresses for token-ring and Ethernet adapters. In canonical format, the least significant (rightmost) bit of each address byte is transmitted first. Contrast with *noncanonical address*.

**carrier.** An electric or electromagnetic wave or pulse train that may be varied by a signal bearing information to be transmitted over a communication system. (T)

**carrier detect.** Synonym for *received line signal detector (RLSD)*.

**carrier sense.** In a local area network, an ongoing activity of a data station to detect whether another station is transmitting. (T)

**carrier sense multiple access with collision detection (CSMA/CD).** A protocol that requires carrier sense and in which a transmitting data station that detects another signal while transmitting, stops sending, sends a jam signal, and then waits for a variable time before trying again. (T) (A)

**CCITT.** International Telegraph and Telephone Consultative Committee. This was an organization of the International Telecommunication Union (ITU). On 1 March 1993 the ITU was reorganized, and responsibilities for standardization were placed in a subordinate organization named the Telecommunication Standardization Sector of the Telecommunication Union (ITU-TS). "CCITT" continues to be used for recommendations that were approved before the reorganization.

**channel.** (1) A path along which signals can be sent, for example, data channel, output channel. (A) (2) A functional unit, controlled by the processor, that handles the transfer of data between processor storage and local peripheral equipment.

**channel service unit (CSU).** A unit that provides the interface to a digital network. The CSU provides line conditioning (or equalization) functions, which keep the signal's performance consistent across the channel bandwidth; signal reshaping, which constitutes the binary pulse stream; and loopback testing, which includes the transmission of test signals between the CSU and the network carrier's office channel unit. See also *data service unit (DSU)*.

**checksum.** (1) The sum of a group of data associated with the group and used for checking purposes. (T) (2) In error detection, a function of all bits in a block. If the written and calculated sums do not agree, an error is indicated. (3) On a diskette, data written in a sector for error detection purposes; a calculated checksum that does not match the checksum of data written in the sector indicates a bad sector. The data are either numeric or other character strings regarded as numeric for the purpose of calculating the checksum.

**circuit switching.** (1) A process that, on demand, connects two or more data terminal equipment (DTEs) and permits the exclusive use of a data circuit between them until the connection is released. (I) (A) (2) Synonymous with *line switching*.

**class A network.** In Internet communications, a network in which the high-order (most significant) bit of the IP address is set to 0 and the host ID occupies the three low-order octets.

**class B network.** In Internet communications, a network in which the two high-order (most significant and next-to-most significant) bits of the IP address are set to 1 and 0, respectively, and the host ID occupies the two low-order octets.

**class of service (COS).** A set of characteristics (such as route security, transmission priority, and bandwidth) used to construct a route between session partners. The class of service is derived from a mode name specified by the initiator of a session.

**client.** (1) A functional unit that receives shared services from a server. (T) (2) A user.

**client/server.** In communications, the model of interaction in distributed data processing in which a program at one site sends a request to a program at another site and awaits a response. The requesting program is called a client; the answering program is called a server.

**clocking.** (1) In binary synchronous communication, the use of clock pulses to control synchronization of



data and control characters. (2) A method of controlling the number of data bits sent on a telecommunication line in a given time.

**collision.** An unwanted condition that results from concurrent transmissions on a channel. (T)

**collision detection.** In carrier sense multiple access with collision detection (CSMA/CD), a signal indicating that two or more stations are transmitting simultaneously.

**Committed information rate.** The maximum amount of data in bits that the network agrees to deliver.

**community.** In the Simple Network Management Protocol (SNMP), an administrative relationship between entities.

**community name.** In the Simple Network Management Protocol (SNMP), a string of octets identifying a community.

**compression.** (1) The process of eliminating gaps, empty fields, redundancies, and unnecessary data to shorten the length of records or blocks. (2) Any encoding to reduce the number of bits used to represent a given message or record.

**configuration.** (1) The manner in which the hardware and software of an information processing system are organized and interconnected. (T) (2) The devices and programs that make up a system, subsystem, or network.

**configuration database (CDB).** A database that stores the configuration parameters of one or several devices. It is prepared and updated using the configuration program.

**configuration file.** A file that specifies the characteristics of a system device or network.

**configuration parameter.** A variable in a configuration definition, the values of which can characterize the relationship of a product to other products in the same network or can define characteristics of the product itself.

**configuration report server (CRS).** In the IBM Token-Ring Network Bridge Program, the server that accepts commands from the LAN Network Manager (LNM) to get station information, set station parameters, and remove stations on its ring. This server also collects and forwards configuration reports generated by stations on its ring. The configuration reports include the new active monitor reports and the nearest active upstream neighbor (NAUN) reports.

**congestion.** See *network congestion*.

**connection.** In data communication, an association established between functional units for conveying information. (I) (A)

**control point (CP).** (1) A component of an APPN or LEN node that manages the resources of that node. In an APPN node, the CP is capable of engaging in CP-CP sessions with other APPN nodes. In an APPN network node, the CP also provides services to adjacent end nodes in the APPN network. (2) A component of a node that manages resources of that node and optionally provides services to other nodes in the network. Examples are a system services control point (SSCP) in a type 5 subarea node, a network node control point (NNCP) in an APPN network node, and an end node control point (ENCP) in an APPN or LEN end node. An SSCP and an NNCP can provide services to other nodes.

**control point management services (CPMS).** A component of a control point, consisting of management services function sets, that provides facilities to assist in performing problem management, performance and accounting management, change management, and configuration management. Capabilities provided by the CPMS include sending requests to physical unit management services (PUMS) to test system resources, collecting statistical information (for example, error and performance data) from PUMS about the system resources, and analyzing and presenting test results and statistical information collected about the system resources. Analysis and presentation responsibilities for problem determination and performance monitoring can be distributed among multiple CPMSs.

**control point management services unit (CP-MSU).** The message unit that contains management services data and flows between management services function sets. This message unit is in general data stream (GDS) format. See also *management services unit (MSU)* and *network management vector transport (NMVT)*.

## D

**D-bit.** Delivery-confirmation bit. In X.25 communications, the bit in a data packet or call-request packet that is set to 1 if end-to-end acknowledgment (delivery confirmation) is required from the recipient.

**daemon.** A program that runs unattended to perform a standard service. Some daemons are triggered automatically to perform their task; others operate periodically.

**data carrier detect (DCD).** Synonym for *received line signal detector (RLSD)*.

**data circuit.** (1) A pair of associated transmit and receive channels that provide a means of two-way data communication. (I) (2) In SNA, synonym for *link connection*. (3) See also *physical circuit* and *virtual circuit*.

**Notes:**

1. Between data switching exchanges, the data circuit may include data circuit-terminating equipment (DCE), depending on the type of interface used at the data switching exchange.
2. Between a data station and a data switching exchange or data concentrator, the data circuit includes the data circuit-terminating equipment at the data station end, and may include equipment similar to a DCE at the data switching exchange or data concentrator location.

**data circuit-terminating equipment (DCE).** In a data station, the equipment that provides the signal conversion and coding between the data terminal equipment (DTE) and the line. (I)

**Notes:**

1. The DCE may be separate equipment or an integral part of the DTE or of the intermediate equipment.
2. A DCE may perform other functions that are usually performed at the network end of the line.

**data link connection identifier (DLCI).** The numeric identifier of a frame-relay subport or PVC segment in a frame-relay network. Each subport in a single frame-relay port has a unique DLCI. The following table, excerpted from the American National Standards Institute (ANSI) Standard T1.618 and the International Telegraph and Telephone Consultative Committee (ITU-T/CCITT) Standard Q.922, indicates the functions associated with certain DLCI values:

DLCI Values	Function
0	in-channel signaling
1–15	reserved
16–991	assigned using frame-relay connection procedures
992–1007	layer 2 management of frame-relay bearer service
1008–1022	reserved
1023	in-channel layer management

**data link control (DLC).** A set of rules used by nodes on a data link (such as an SDLC link or a token ring) to accomplish an orderly exchange of information.

**data link control (DLC) layer.** In SNA, the layer that consists of the link stations that schedule data transfer over a link between two nodes and perform error control for the link. Examples of data link control are SDLC for serial-by-bit link connection and data link control for the System/370 channel.

**Note:** The DLC layer is usually independent of the physical transport mechanism and ensures the integrity of data that reaches the higher layers.

**data link layer.** In the Open Systems Interconnection reference model, the layer that provides services to transfer data between entities in the network layer over

a communication link. The data link layer detects and possibly corrects errors that may occur in the physical layer. (T)

**data link level.** (1) In the hierarchical structure of a data station, the conceptual level of control or processing logic between high level logic and the data link that maintains control of the data link. The data link level performs such functions as inserting transmit bits and deleting receive bits; interpreting address and control fields; generating, transmitting, and interpreting commands and responses; and computing and interpreting frame check sequences. See also *packet level* and *physical level*. (2) In X.25 communications, synonym for *frame level*.

**data link switching (DLSw).** A method of transporting network protocols that use IEEE 802.2 logical link control (LLC) type 2. SNA and NetBIOS are examples of protocols that use LLC type 2. See also *encapsulation* and *spoofing*.

**data packet.** In X.25 communications, a packet used for the transmission of user data on a virtual circuit at the DTE/DCE interface.

**data service unit (DSU).** A device that provides a digital data service interface directly to the data terminal equipment. The DSU provides loop equalization, remote and local testing capabilities, and a standard EIA/CCITT interface.

**data set ready (DSR).** Synonym for *DCE ready*.

**data switching exchange (DSE).** The equipment installed at a single location to provide switching functions, such as circuit switching, message switching, and packet switching. (I)

**data terminal equipment (DTE).** That part of a data station that serves as a data source, data sink, or both. (I) (A)

**data terminal ready (DTR).** A signal to the modem used with the EIA 232 protocol.

**data transfer rate.** The average number of bits, characters, or blocks per unit time passing between corresponding equipment in a data transmission system. (I)

**Notes:**

1. The rate is expressed in bits, characters, or blocks per second, minute, or hour.
2. Corresponding equipment should be indicated; for example, modems, intermediate equipment, or source and sink.

**datagram.** (1) In packet switching, a self-contained packet, independent of other packets, that carries information sufficient for routing from the originating data terminal equipment (DTE) to the destination DTE without relying on earlier exchanges between the DTEs

and the network. (1) (2) In TCP/IP, the basic unit of information passed across the Internet environment. A datagram contains a source and destination address along with the data. An Internet Protocol (IP) datagram consists of an IP header followed by the transport layer data. (3) See also *packet* and *segment*.

**Datagram Delivery Protocol (DDP).** In AppleTalk networks, a protocol that provides network connectivity by means of connectionless socket-to-socket delivery service on the internet layer.

**DCE ready.** In the EIA 232 standard, a signal that indicates to the data terminal equipment (DTE) that the local data circuit-terminating equipment (DCE) is connected to the communication channel and is ready to send data. Synonymous with *data set ready (DSR)*.

**DECnet.** A network architecture that defines the operation of a family of software modules, databases, and hardware components typically used to tie Digital Equipment Corporation systems together for resource sharing, distributed computation, or remote system configuration. DECnet network implementations follow the Digital Network Architecture (DNA) model.

**default.** Pertaining to an attribute, condition, value, or option that is assumed when none is explicitly specified. (1)

**dependent LU requester (DLUR).** An APPN end node or an APPN network node that owns dependent LUs, but requests that a dependent LU server provide the SSCP services for those dependent LUs.

**designated router.** A router that informs end nodes of the existence and identity of other routers. The selection of the designated router is based upon the router with the highest priority. When several routers share the highest priority, the router with the highest station address is selected.

**destination node.** The node to which a request or data is sent.

**destination port.** The 8-port asynchronous adapter that serves as a connection point with a serial service.

**destination service access point (DSAP).** In SNA and TCP/IP, a logical address that allows a system to route data from a remote device to the appropriate communications support. Contrast with *source service access point (SSAP)*.

**device.** A mechanical, electrical, or electronic contrivance with a specific purpose.

**digital.** (1) Pertaining to data that consist of digits. (T) (2) Pertaining to data in the form of digits. (A) (3) Contrast with *analog*.

**Digital Network Architecture (DNA).** The model for all DECnet hardware and software implementations.

**direct memory access (DMA).** The system facility that allows a device on the Micro Channel bus to get direct access to the system or bus memory without the intervention of the system processor.

**directory.** A table of identifiers and references to the corresponding items of data. (1) (A)

**directory service (DS).** An application service element that translates the symbolic names used by application processes into the complete network addresses used in an OSI environment. (T)

**directory services (DS).** A control point component of an APPN node that maintains knowledge of the location of network resources.

**disable.** To make nonfunctional.

**disabled.** (1) Pertaining to a state of a processing unit that prevents the occurrence of certain types of interruptions. (2) Pertaining to the state in which a transmission control unit or audio response unit cannot accept incoming calls on a line.

**domain.** (1) That part of a computer network in which the data processing resources are under common control. (T) (2) In Open Systems Interconnection (OSI), a part of a distributed system or a set of managed objects to which a common policy applies. (3) See *Administrative Domain* and *domain name*.

**domain name.** In the Internet suite of protocols, a name of a host system. A domain name consists of a sequence of subnames separated by a delimiter character. For example, if the fully qualified domain name (FQDN) of a host system is `ra1vm7.vnet.ibm.com`, each of the following is a domain name:

- `ra1vm7.vnet.ibm.com`
- `vnet.ibm.com`
- `ibm.com`

**domain name server.** In the Internet suite of protocols, a server program that supplies name-to-address translation by mapping domain names to IP addresses. Synonymous with *name server*.

**Domain Name System (DNS).** In the Internet suite of protocols, the distributed database system used to map domain names to IP addresses.

**dotted decimal notation.** The syntactical representation for a 32-bit integer that consists of four 8-bit numbers written in base 10 with periods (dots) separating them. It is used to represent IP addresses.

**dump.** (1) Data that has been dumped. (T) (2) To copy the contents of all or part of virtual storage for the purpose of collecting error information.

**dynamic reconfiguration (DR).** The process of changing the network configuration (peripheral PUs and

LUs) without regenerating complete configuration tables or deactivating the affected major node.

**Dynamic Routing.** Routing using learned routes rather than routes statically configured at initialization.

## E

**echo.** In data communication, a reflected signal on a communications channel. For example, on a communications terminal, each signal is displayed twice, once when entered at the local terminal and again when returned over the communications link. This allows the signals to be checked for accuracy.

**EIA 232.** In data communication, a specification of the Electronic Industries Association (EIA) that defines the interface between data terminal equipment (DTE) and data circuit-terminating equipment (DCE), using serial binary data interchange.

**Electronic Industries Association (EIA).** An organization of electronics manufacturers that advances the technological growth of the industry, represents the views of its members, and develops industry standards.

**EIA unit.** A unit of measure, established by the Electronic Industries Association, equal to 44.45 millimeters (1.75 inches).

**encapsulation.** (1) In communications, a technique used by layered protocols by which a layer adds control information to the protocol data unit (PDU) from the layer it supports. In this respect, the layer encapsulates the data from the supported layer. In the Internet suite of protocols, for example, a packet would contain control information from the physical layer, followed by control information from the network layer, followed by the application protocol data. (2) See also *data link switching*.

**encode.** To convert data by the use of a code in such a manner that reconversion to the original form is possible. (T)

**end node (EN).** (1) See *Advanced Peer-to-Peer Networking (APPN) end node* and *low-entry networking (LEN) end node*. (2) In communications, a node that is frequently attached to a single data link and cannot perform intermediate routing functions.

**entry point (EP).** In SNA, a type 2.0, type 2.1, type 4, or type 5 node that provides distributed network management support. It sends network management data about itself and the resources it controls to a focal point for centralized processing, and it receives and executes focal-point initiated commands to manage and control its resources.

**Ethernet.** A 10-Mbps baseband local area network that allows multiple stations to access the transmission medium at will without prior coordination, avoids

contention by using carrier sense and deference, and resolves contention by using collision detection and delayed retransmission. Ethernet uses carrier sense multiple access with collision detection (CSMA/CD).

**exception.** An abnormal condition such as an I/O error encountered in processing a data set or a file.

**exception response (ER).** In SNA, a protocol requested in the form-of-response-requested field of a request header that directs the receiver to return a response only if the request is unacceptable as received or cannot be processed; that is, a negative response, but not a positive response, can be returned. Contrast with *definite response* and *no response*.

**exchange identification (XID).** A specific type of basic link unit that is used to convey node and link characteristics between adjacent nodes. XIDs are exchanged between link stations before and during link activation to establish and negotiate link and node characteristics, and after link activation to communicate changes in these characteristics.

**explicit route (ER).** In SNA, a series of one or more transmission groups that connect two subarea nodes. An explicit route is identified by an origin subarea address, a destination subarea address, an explicit route number, and a reverse explicit route number. Contrast with *virtual route (VR)*.

**explorer frame.** See *explorer packet*.

**explorer packet.** In LANs, a packet that is generated by the source host and that traverses the entire source routing part of a LAN, gathering information on the possible paths available to the host.

**exterior gateway.** In Internet communications, a gateway on one autonomous system that communicates with another autonomous system. Contrast with *interior gateway*.

**Exterior Gateway Protocol (EGP).** In the Internet suite of protocols, a protocol, used between domains and autonomous systems, that enables network reachability information to be advertised and exchanged. IP network addresses in one autonomous system are advertised to another autonomous system by means of EGP-participating routers. An example of an EGP is the Border Gateway Protocol (BGP). Contrast with Interior Gateway Protocol (IGP).

## F

**fax.** Hardcopy received from a facsimile machine. Synonymous with *telecopy*.

**File Transfer Protocol (FTP).** In the Internet suite of protocols, an application layer protocol that uses TCP and Telnet services to transfer bulk-data files between machines or hosts.

**flash memory.** A data storage device that is programmable, erasable, and does not require continuous power. The chief advantage of flash memory over other programmable and erasable data storage devices is that it can be reprogrammed without being removed from the circuit board.

**flow control.** (1) In SNA, the process of managing the rate at which data traffic passes between components of the network. The purpose of flow control is to optimize the rate of flow of message units with minimum congestion in the network; that is, to neither overflow the buffers at the receiver or at intermediate routing nodes, nor leave the receiver waiting for more message units. (2) See also  *pacing*.

**fragment.** See  *fragmentation*.

**fragmentation.** (1) The process of dividing a datagram into smaller parts, or fragments, to match the capabilities of the physical medium over which it is to be transmitted. (2) See also  *segmenting*.

**frame.** (1) In Open Systems Interconnection architecture, a data structure pertaining to a particular area of knowledge and consisting of slots that can accept the values of specific attributes and from which inferences can be drawn by appropriate procedural attachments. (T) (2) The unit of transmission in some local area networks, including the IBM Token-Ring Network. It includes delimiters, control characters, information, and checking characters. (3) In SDLC, the vehicle for every command, every response, and all information that is transmitted using SDLC procedures.

**frame level.** Synonymous with  *data link level*. See  *link level*.

**frame relay.** (1) An interface standard describing the boundary between a user's equipment and a fast-packet network. In frame-relay systems, flawed frames are discarded; recovery comes end-to-end rather than hop-by-hop. (2) A technique derived from the integrated services digital network (ISDN) D channel standard. It assumes that connections are reliable and dispenses with the overhead of error detection and control within the network.

**front-end processor.** A processor such as the IBM 3745 or 3174, that relieves a main frame from the communication control tasks.

## G

**gateway.** (1) A functional unit that interconnects two computer networks with different network architectures. A gateway connects networks or systems of different architectures. A bridge interconnects networks or systems with the same or similar architectures. (T) (2) In the IBM Token-Ring Network, a device and its associated software that connect a local area network to

another local area network or a host that uses different logical link protocols. (3) In TCP/IP, synonym for  *router*.

**general data stream (GDS).** The data stream used for conversations in LU 6.2 sessions.

**general data stream (GDS) variable.** A type of RU substructure that is preceded by an identifier and a length field and includes either application data, user control data, or SNA-defined control data.

## H

**header.** (1) System-defined control information that precedes user data. (2) The portion of a message that contains control information for the message such as one or more destination fields, name of the originating station, input sequence number, character string indicating the type of message, and priority level for the message.

**heap memory.** The amount of RAM used to dynamically allocate data structures.

**Hello.** A protocol used by a group of cooperating, trusting routers to allow them to discover minimal delay routes.

**hello message.** (1) A message sent periodically to establish and test reachability between routers or between routers and hosts. (2) In the Internet suite of protocols, a message defined by the Hello protocol as an Interior Gateway Protocol (IGP).

**heuristic.** Pertaining to exploratory methods of problem solving in which solutions are discovered by evaluation of the progress made toward the final result.

**high-level data link control (HDLC).** In data communication, the use of a specified series of bits to control data links in accordance with the International Standards for HDLC: ISO 3309 Frame Structure and ISO 4335 Elements of Procedures.

**high-performance routing (HPR).** An addition to the Advanced Peer-to-Peer Networking (APPN) architecture that enhances data routing performance and reliability, especially when using high-speed links.

**hop.** (1) In APPN, a portion of a route that has no intermediate nodes. It consists of only a single transmission group connecting adjacent nodes. (2) To the routing layer, the logical distance between two nodes in a network.

**hop count.** (1) A metric or measure of distance between two points. (2) In Internet communications, the number of routers that a datagram passes through on its way to its destination. (3) In SNA, a measure of the number of links to be traversed in a path to a destination.

**host.** In the Internet suite of protocols, an end system. The end system can be any workstation; it does not have to be a mainframe.

**hub (intelligent).** A wiring concentrator, such as the IBM 8260, that provides bridging and routing functions for LANs with different cables and protocols.

**hysteresis.** The amount the temperature must change past the set alert threshold before the alert condition is cleared.

## I

**I-frame.** Information frame.

**information (I) frame.** A frame in I format used for numbered information transfer.

**input/output channel.** In a data processing system, a functional unit that handles transfer of data between internal and peripheral equipment. (I) (A)

**Integrated Digital Network Exchange (IDNX).** A processor integrating voice, data, and image applications. It also manages the transmission resources, and connects to multiplexers and network management support systems. It allows integration of equipment from different vendors.

**integrated services digital network (ISDN).** A digital end-to-end telecommunication network that supports multiple services including, but not limited to, voice and data.

**Note:** ISDNs are used in public and private network architectures.

**interface.** (1) A shared boundary between two functional units, defined by functional characteristics, signal characteristics, or other characteristics, as appropriate. The concept includes the specification of the connection of two devices having different functions. (T) (2) Hardware, software, or both, that links systems, programs, or devices.

**interior gateway.** In Internet communications, a gateway that communicates only with its own autonomous system. Contrast with *exterior gateway*.

**Interior Gateway Protocol (IGP).** In the Internet suite of protocols, a protocol used to propagate network reachability and routing information within an autonomous system. Examples of IGPs are Routing Information Protocol (RIP) and Open Shortest Path First (OSPF).

**intermediate node.** A node that is at the end of more than one branch. (T)

**intermediate session routing (ISR).** A type of routing function within an APPN network node that provides

session-level flow control and outage reporting for all sessions that pass through the node but whose end points are elsewhere.

**International Organization for Standardization (ISO).** An organization of national standards bodies from various countries established to promote development of standards to facilitate international exchange of goods and services, and develop cooperation in intellectual, scientific, technological, and economic activity.

**International Telecommunication Union (ITU).** The specialized telecommunication agency of the United Nations, established to provide standardized communication procedures and practices, including frequency allocation and radio regulations worldwide.

**internet.** A collection of networks interconnected by a set of routers that allow them to function as a single, large network. See also *Internet*.

**Internet.** The internet administered by the Internet Architecture Board (IAB), consisting of large national backbone networks and many regional and campus networks all over the world. The Internet uses the Internet suite of protocols.

**Internet address.** See *IP address*.

**Internet Architecture Board (IAB).** The technical body that oversees the development of the Internet suite of protocols that are known as TCP/IP.

**Internet Control Message Protocol (ICMP).** The protocol used to handle errors and control messages in the Internet Protocol (IP) layer. Reports of problems and incorrect datagram destinations are returned to the original datagram source. ICMP is part of the Internet Protocol.

**Internet Control Protocol (ICP).** The Virtual Networking System (VINES) protocol that provides exception notifications, metric notifications, and PING support. See also *RouTing update Protocol (RTP)*.

**Internet Engineering Task Force (IETF).** The task force of the Internet Architecture Board (IAB) that is responsible for solving the short-term engineering needs of the Internet.

**Internetwork Packet Exchange (IPX).** (1) The network protocol used to connect Novell's servers, or any workstation or router that implements IPX, with other workstations. Although similar to the Internet Protocol (IP), IPX uses different packet formats and terminology. (2) See also *Xerox Network Systems (XNS)*.

**Internet Protocol (IP).** A connectionless protocol that routes data through a network or interconnected networks. IP acts as an intermediary between the higher protocol layers and the physical network. However, this

protocol does not provide error recovery and flow control and does not guarantee the reliability of the physical network.

**interoperability.** The capability to communicate, execute programs, or transfer data among various functional units in a way that requires the user to have little or no knowledge of the unique characteristics of those units. (T)

**intra-area routing.** In Internet communications, the routing of data within an area.

**Inverse Address Resolution Protocol (InARP).** In the Internet suite of protocols, the protocol used for locating a protocol address through the known hardware address. In a frame-relay context, the data link connection identifier (DLCI) is synonymous with the known hardware address.

**IPPN.** The interface that other protocols can use to transport data over IP.

**IP address.** The 32-bit address defined by the Internet Protocol, standard 5, Request for Comments (RFC) 791. It is usually represented in dotted decimal notation.

**IP datagram.** In the Internet suite of protocols, the fundamental unit of information transmitted through an internet. It contains source and destination addresses, user data, and control information such as the length of the datagram, the header checksum, and flags indicating whether the datagram can be or has been fragmented.

**IP router.** A device in an IP internet that is responsible for making decisions about the paths over which network traffic will flow. Routing protocols are used to gain information about the network and to determine the best route over which the datagram should be forwarded toward the final destination. The datagrams are routed based on IP destination addresses.

**IPXWAN.** A Novell protocol that is used to exchange router-to-router information before exchanging standard Internetwork Packet Exchange (IPX) routing information and traffic over wide area networks (WANs).

## L

**L2TP Access Concentrator (LAC).** A device attached to one or more public service telephone network (PSTN) or ISDN lines capable of handling both PPP operation and of the L2TP protocol. The LAC implements the media over which L2TP operates. L2TP passes the traffic to one or more L2TP Network Servers (LNS). L2TP can tunnel any protocol carried by the PPP network.

**L2TP Network Server (LNS).** An LNS operates on any platform capable that can be a PPP end station. The LNS handles the server side of the L2TP protocol.

Since L2TP relies only on the single media over which L2TP tunnels arrive, the LNS has only a single LAN or WAN interface, yet is still able to terminate calls arriving from any the full range of PPP interfaces supported by a LAC. These include asynchronous ISDN, synchronous ISDN, V.120, and other types of connections.

**LAN bridge server (LBS).** In the IBM Token-Ring Network Bridge Program, the server that keeps statistical information about frames forwarded between two or more rings (through a bridge). The LBS sends these statistics to the appropriate LAN managers through the LAN reporting mechanism (LRM).

**LAN Emulation (LE).** An ATM Forum standard that supports legacy LAN applications over ATM networks.

**LAN Emulation Client (LEC).** A LAN Emulation component that represents users of the Emulated LAN.

**LAN Emulation Configuration Server (LECS).** A LAN Emulation Service component that centralizes and disseminates configuration data.

**LAN Emulation Server (LES).** A LAN Emulation Service component that resolves LAN Destinations to ATM Addresses.

**LAN Network Manager (LNM).** An IBM licensed program that enables a user to manage and monitor LAN resources from a central workstation.

**LAN segment.** (1) Any portion of a LAN (for example, a bus or ring) that can operate independently, but that is connected to other parts of the network by means of bridges. (2) A ring or bus network without bridges.

**layer.** (1) In network architecture, a group of services that is complete from a conceptual point of view, that is one out of a set of hierarchically arranged groups, and that extends across all systems that conform to the network architecture. (T) (2) In the Open Systems Interconnection reference model, one of seven conceptually complete, hierarchically arranged groups of services, functions, and protocols, that extend across all open systems. (T) (3) In SNA, a grouping of related functions that are logically separate from the functions in other groups. Implementation of the functions in one layer can be changed without affecting functions in other layers.

**LE.** LAN Emulation. An ATM Forum standard that supports legacy LAN applications over ATM networks.

**LEC.** LAN Emulation Client. A LAN Emulation component that represents users of the Emulated LAN.

**LECS.** LAN Emulation Configuration Server. A LAN Emulation Service component that centralizes and disseminates configuration data.

**LES.** LAN Emulation Server. A LAN Emulation Service component that resolves LAN Destinations to ATM Addresses.

**line switching.** Synonym for *circuit switching*.

**link.** The combination of the link connection (the transmission medium) and two link stations, one at each end of the link connection. A link connection can be shared among multiple links in a multipoint or token-ring configuration.

**link access protocol balanced (LAPB).** A protocol used for accessing an X.25 network at the link level. LAPB is a duplex, asynchronous, symmetric protocol, used in point-to-point communication.

**link-attached.** (1) Pertaining to devices that are connected to a controlling unit by a data link. (2) Contrast with *channel-attached*. (3) Synonymous with *remote*.

**link connection.** (1) The physical equipment providing two-way communication between one link station and one or more other link stations; for example, a telecommunication line and data circuit-terminating equipment (DCE). (2) In SNA, synonymous with *data circuit*.

**link level.** (1) A part of Recommendation X.25 that defines the link protocol used to get data into and out of the network across the full-duplex link connecting the subscriber's machine to the network node. LAP and LAPB are the link access protocols recommended by the CCITT. (2) See *data link level*.

**link-state.** In routing protocols, the advertised information about the usable interfaces and reachable neighbors of a router or network. The protocol's topological database is formed from the collected link-state advertisements.

**link station.** (1) The hardware and software components within a node representing a connection to an adjacent node over a specific link. For example, if node A is the primary end of a multipoint line that connects to three adjacent nodes, node A will have three link stations representing the connections to the adjacent nodes. (2) See also *adjacent link station (ALS)*.

**local.** (1) Pertaining to a device accessed directly without use of a telecommunication line. (2) Contrast with *remote*. (3) Synonym for *channel-attached*.

**local area network (LAN).** (1) A computer network located on a user's premises within a limited geographical area. Communication within a local area network is not subject to external regulations; however, communication across the LAN boundary may be subject to some form of regulation. (T) (2) A network in which a set of devices are connected to one another for communication and that can be connected to a

larger network. (3) See also *Ethernet* and *token ring*. (4) Contrast with *metropolitan area network (MAN)* and *wide area network (WAN)*.

**local bridging.** A function of a bridge program that allows a single bridge to connect multiple LAN segments without using a telecommunication link. Contrast with *remote bridging*.

**local management interface (LMI).** See *local management interface (LMI) protocol*.

**local management interface (LMI) protocol.** In NCP, a set of frame-relay network management procedures and messages used by adjacent frame-relay nodes to exchange line status information over DLCI X'00'. NCP supports both the American National Standards Institute (ANSI) and International Telegraph and Telephone Consultative Committee (ITU-T/CCITT) versions of LMI protocol. These standards refer to LMI protocol as *link integrity verification tests (LIVT)*.

**locally administered address.** In a local area network, an adapter address that the user can assign to override the universally administered address. Contrast with *universally administered address*.

**logical channel.** In packet mode operation, a sending channel and a receiving channel that together are used to send and receive data over a data link at the same time. Several logical channels can be established on the same data link by interleaving the transmission of packets.

**logical link.** A pair of link stations, one in each of two adjacent nodes, and their underlying link connection, providing a single link-layer connection between the two nodes. Multiple logical links can be distinguished while they share the use of the same physical media connecting two nodes. Examples are 802.2 logical links used on local area network (LAN) facilities and LAP E logical links on the same point-to-point physical link between two nodes. The term logical link also includes the multiple X.25 logical channels that share the use of the access link from a DTE to an X.25 network.

**logical link control (LLC).** The data link control (DLC) LAN sublayer that provides two types of DLC operation for the orderly exchange of information. The first type is connectionless service, which allows information to be sent and received without establishing a link. The LLC sublayer does not perform error recovery or flow control for connectionless service. The second type is connection-oriented service, which requires establishing a link prior to the exchange of information. Connection-oriented service provides sequenced information transfer, flow control, and error recovery.

**logical link control (LLC) protocol.** In a local area network, the protocol that governs the exchange of transmission frames between data stations independently of how the transmission medium is



shared. (T) The LLC protocol was developed by the IEEE 802 committee and is common to all LAN standards.

**logical link control (LLC) protocol data unit.** A unit of information exchanged between link stations in different nodes. The LLC protocol data unit contains a destination service access point (DSAP), a source service access point (SSAP), a control field, and user data.

**logical unit (LU).** A type of network accessible unit that enables users to gain access to network resources and communicate with each other.

**loopback test.** A test in which signals from a tester are looped at a modem or other network element back to the tester for measurements that determine or verify the quality of the communications path.

**low-entry networking (LEN).** A capability of nodes to attach directly to one another using basic peer-to-peer protocols to support multiple and parallel sessions between logical units.

**low-entry networking (LEN) end node.** A LEN node receiving network services from an adjacent APPN network node.

**low-entry networking (LEN) node.** A node that provides a range of end-user services, attaches directly to other nodes using peer protocols, and derives network services implicitly from an adjacent APPN network node, that is, without the direct use of CP-CP sessions.

## M

**Management Information Base (MIB).** (1) A collection of objects that can be accessed by means of a network management protocol. (2) A definition for management information that specifies the information available from a host or gateway and the operations allowed. (3) In OSI, the conceptual repository of management information within an open system.

**management station.** In Internet communications, the system responsible for managing all, or a portion of, a network. The management station communicates with network management agents that reside in the managed node by means of a network management protocol, such as the Simple Network Management Protocol (SNMP).

**mapping.** The process of converting data that is transmitted in one format by the sender into the data format that can be accepted by the receiver.

**mask.** (1) A pattern of characters used to control retention or elimination of portions of another pattern of characters. (I) (A) (2) To use a pattern of characters to

control retention or elimination of portions of another pattern of characters. (I) (A)

**maximum transmission unit (MTU).** In LANs, the largest possible unit of data that can be sent on a given physical medium in a single frame. For example, the MTU for Ethernet is 1500 bytes.

**medium access control (MAC).** In LANs, the sublayer of the data link control layer that supports medium-dependent functions and uses the services of the physical layer to provide services to the logical link control (LLC) sublayer. The MAC sublayer includes the method of determining when a device has access to the transmission medium.

**medium access control (MAC) protocol.** In a local area network, the protocol that governs access to the transmission medium, taking into account the topological aspects of the network, in order to enable the exchange of data between data stations. (T)

**medium access control (MAC) sublayer.** In a local area network, the part of the data link layer that applies a medium access method. The MAC sublayer supports topology-dependent functions and uses the services of the physical layer to provide services to the logical link control sublayer. (T)

**metric.** In Internet communications, a value, associated with a route, which is used to discriminate between multiple exit or entry points to the same autonomous system. The route with the lowest metric is preferred.

**metropolitan area network (MAN).** A network formed by the interconnection of two or more networks which may operate at higher speed than those networks, may cross administrative boundaries, and may use multiple access methods. (T) Contrast with *local area network (LAN)* and *wide area network (WAN)*.

**MIB.** (1) MIB module. (2) Management Information Base.

**MIB object.** Synonym for *MIB variable*.

**MIB variable.** In the Simple Network Management Protocol (SNMP), a specific instance of data defined in a MIB module. Synonymous with *MIB object*.

**MIB view.** In the Simple Network Management Protocol (SNMP), the collection of managed objects, known to the agent, that is visible to a particular community.

**MILNET.** The military network that was originally part of ARPANET. It was partitioned from ARPANET in 1984. MILNET provides a reliable network service for military installations.

**modem (modulator/demodulator).** (1) A functional unit that modulates and demodulates signals. One of

the functions of a modem is to enable digital data to be transmitted over analog transmission facilities. (T) (A) (2) A device that converts digital data from a computer to an analog signal that can be transmitted on a telecommunication line, and converts the analog signal received to data for the computer.

**modulo.** (1) Pertaining to a modulus; for example, 9 is equivalent to 4 modulo 5. (2) See also *modulus*.

**modulus.** A number, such as a positive integer, in a relationship that divides the difference between two related numbers without leaving a remainder; for example, 9 and 4 have a modulus of 5 ( $9 - 4 = 5$ ;  $4 - 9 = -5$ ; and 5 divides both 5 and -5 without leaving a remainder).

**monitor.** (1) A device that observes and records selected activities within a data processing system for analysis. Possible uses are to indicate significant departure from the norm, or to determine levels of utilization of particular functional units. (T) (2) Software or hardware that observes, supervises, controls, or verifies operations of a system. (A) (3) The function required to initiate the transmission of a token on the ring and to provide soft-error recovery in case of lost tokens, circulating frames, or other difficulties. The capability is present in all ring stations.

**multicast.** (1) Transmission of the same data to a selected group of destinations. (T) (2) A special form of broadcast in which copies of a packet are delivered to only a subset of all possible destinations.

**multiple-domain support (MDS).** A technique for transporting management services data between management services function sets over LU-LU and CP-CP sessions. See also *multiple-domain support message unit (MDS-MU)*.

**multiple-domain support message unit (MDS-MU).** The message unit that contains management services data and flows between management services function sets over the LU-LU and CP-CP sessions used by multiple-domain support. This message unit, as well as the actual management services data that it contains, is in general data stream (GDS) format. See also *control point management services unit (CP-MSU)*, *management services unit (MSU)*, and *network management vector transport (NMVT)*.

## N

**Name Binding Protocol (NBP).** In AppleTalk networks, a protocol that provides name translation function from the AppleTalk entity (resource) name (character string) into an AppleTalk IP address (16-bit number) on the transport layer.

**name resolution.** In Internet communications, the process of mapping a machine name to the

corresponding Internet Protocol (IP) address. See also *Domain Name System (DNS)*.

**name server.** In the Internet suite of protocols, synonym for *domain name server*.

**nearest active upstream neighbor (NAUN).** In the IBM Token-Ring Network, the station sending data directly to a given station on the ring.

**neighbor.** A router on a common subnetwork that has been designated by a network administrator to receive routing information.

**NetBIOS.** Network Basic Input/Output System. A standard interface to networks, IBM personal computers (PCs), and compatible PCs, that is used on LANs to provide message, print-server, and file-server functions. Application programs that use NetBIOS do not need to handle the details of LAN data link control (DLC) protocols.

**network.** (1) A configuration of data processing devices and software connected for information interchange. (2) A group of nodes and the links interconnecting them.

**Network Access Server (NAS).** A device providing temporary, on-demand network access to users. This access is point-to-point using PSTN or ISDN lines.

**network accessible unit (NAU).** A logical unit (LU), physical unit (PU), control point (CP), or system services control point (SSCP). It is the origin or the destination of information transmitted by the path control network. Synonymous with *network addressable unit*.

**network address.** According to ISO 7498-3, a name, unambiguous within the OSI environment, that identifies a set of network service access points.

**network addressable unit (NAU).** Synonym for *network accessible unit*.

**network architecture.** The logical structure and operating principles of a computer network. (T)

**Note:** The operating principles of a network include those of services, functions, and protocols.

**network congestion.** An undesirable overload condition caused by traffic in excess of what a network can handle.

**network identifier.** (1) In TCP/IP, that part of the IP address that defines a network. The length of the network ID depends on the type of network class (A, B, or C). (2) A 1- to 8-byte customer-selected name or an 8-byte IBM-registered name that uniquely identifies a specific subnetwork.

**Network Information Center (NIC).** In Internet communications, local, regional, and national groups

throughout the world who provide assistance, documentation, training, and other services to users.

**network layer.** In Open Systems Interconnection (OSI) architecture, the layer that is responsible for routing, switching, and link-layer access across the OSI environment.

**network management.** The process of planning, organizing, and controlling a communication-oriented data processing or information system.

**network management station.** In the Simple Network Management Protocol (SNMP), a station that executes management application programs that monitor and control network elements.

**network management vector transport (NMVT).** A management services request/response unit (RU) that flows over an active session between physical unit management services and control point management services (SSCP-PU session).

**network manager.** A program or group of programs that is used to monitor, manage, and diagnose the problems of a network.

**network node (NN).** See *Advanced Peer-to-Peer Networking (APPN) network node*.

**network user address (NUA).** In X.25 communications, the X.121 address containing up to 15 binary code digits.

**node.** (1) In a network, a point at which one or more functional units connect channels or data circuits. (I) (2) Any device, attached to a network, that transmits and receives data.

**noncanonical address.** In LANs, a format for the transmission of medium access control (MAC) addresses for token-ring adapters. In noncanonical format, the most significant (leftmost) bit of each address byte is transmitted first. Contrast with *canonical address*.

**Non-Return-to-Zero Changes-on-Ones Recording (NRZ-1).** A recording method in which the ones are represented by a change in the condition of magnetization, and zeros are represented by the absence of change. Only the one signals are explicitly recorded. (Previously called *non-return-to-zero inverted*, NRZI, recording.)

**nonseed router.** In AppleTalk networks, a router that acquires network number range and zone list information from a seed router attached to the same network.

## O

**Open Shortest Path First (OSPF).** In the Internet suite of protocols, a function that provides intradomain

information transfer. An alternative to the Routing Information Protocol (RIP), OSPF allows the lowest-cost routing and handles routing in large regional or corporate networks.

**Open Systems Interconnection (OSI).** (1) The interconnection of open systems in accordance with standards of the International Organization for Standardization (ISO) for the exchange of information. (T) (A) (2) The use of standardized procedures to enable the interconnection of data processing systems.

**Note:** OSI architecture establishes a framework for coordinating the development of current and future standards for the interconnection of computer systems. Network functions are divided into seven layers. Each layer represents a group of related data processing and communication functions that can be carried out in a standard way to support different applications.

**Open Systems Interconnection (OSI) architecture.** Network architecture that adheres to that particular set of ISO standards that relates to Open Systems Interconnection. (T)

**Open Systems Interconnection (OSI) reference model.** A model that describes the general principles of the Open Systems Interconnection, as well as the purpose and the hierarchical arrangement of its seven layers. (T)

**origin.** An external logical unit (LU) or application program from which a message or other data originates. See also *destination*.

**orphan circuit.** A non-configured circuit whose availability is learned dynamically.

## P

**padding.** (1) A technique by which a receiving component controls the rate of transmission of a sending component to prevent overrun or congestion. (2) See also *flow control*, *receive pacing*, *send pacing*, *session-level pacing*, and *virtual route (VR) pacing*.

**packet.** In data communication, a sequence of binary digits, including data and control signals, that is transmitted and switched as a composite whole. The data, control signals, and, possibly, error control information are arranged in a specific format. (I)

**packet internet groper (PING).** (1) In Internet communications, a program used in TCP/IP networks to test the ability to reach destinations by sending the destinations an Internet Control Message Protocol (ICMP) echo request and waiting for a reply. (2) In communications, a test of reachability.

**packet loss ratio.** The probability that a packet will not reach its destination or not reach it within a specified time.

**packet mode operation.** Synonym for *packet switching*.

**packet switching.** (1) The process of routing and transferring data by means of addressed packets so that a channel is occupied only during transmission of a packet. On completion of the transmission, the channel is made available for transfer of other packets. (I) (2) Synonymous with *packet mode operation*. See also *circuit switching*.

**parallel bridges.** A pair of bridges connected to the same LAN segment, creating redundant paths to the segment.

**parallel transmission groups.** Multiple transmission groups between adjacent nodes, with each group having a distinct transmission group number.

**path.** (1) In a network, any route between any two nodes. A path may include more than one branch. (T) (2) The series of transport network components (path control and data link control) that are traversed by the information exchanged between two network accessible units. See also *explicit route (ER)*, *route extension*, and *virtual route (VR)*.

**path control (PC).** The function that routes message units between network accessible units in the network and provides the paths between them. It converts the basic information units (BIUs) from transmission control (possibly segmenting them) into path information units (PIUs) and exchanges basic transmission units containing one or more PIUs with data link control. Path control differs by node type: some nodes (APPN nodes, for example) use locally generated session identifiers for routing, and others (subarea nodes) use network addresses for routing.

**path cost.** In link-state routing protocols, the sum of the link costs along the path between two nodes or networks.

**path information unit (PIU).** A message unit consisting of a transmission header (TH) alone, or a TH followed by a basic information unit (BIU) or a BIU segment.

**pattern-matching character.** A special character such as an asterisk (\*) or a question mark (?) that can be used to represent one or more characters. Any character or set of characters can replace a pattern-matching character. Synonymous with *global character* and *wildcard character*.

**permanent virtual circuit (PVC).** In X.25 and frame-relay communications, a virtual circuit that has a logical channel permanently assigned to it at each data

terminal equipment (DTE). Call-establishment protocols are not required. Contrast with *switched virtual circuit (SVC)*.

**physical circuit.** A circuit established without multiplexing. See also *data circuit*. Contrast with *virtual circuit*.

**physical layer.** In the Open Systems Interconnection reference model, the layer that provides the mechanical, electrical, functional, and procedural means to establish, maintain, and release physical connections over the transmission medium. (T)

**physical unit (PU).** (1) The component that manages and monitors the resources (such as attached links and adjacent link stations) associated with a node, as requested by an SSCP via an SSCP-PU session. An SSCP activates a session with the physical unit in order to indirectly manage, through the PU, resources of the node such as attached links. This term applies to type 2.0, type 4, and type 5 nodes only. (2) See also *peripheral PU* and *subarea PU*.

**ping command.** The command that sends an Internet Control Message Protocol (ICMP) echo-request packet to a gateway, router, or host with the expectation of receiving a reply.

**Point-to-Point Protocol (PPP).** A protocol that provides a method for encapsulating and transmitting packets over serial point-to-point links.

**polling.** (1) On a multipoint connection or a point-to-point connection, the process whereby data stations are invited, one at a time, to transmit. (I) (2) Interrogation of devices for such purposes as to avoid contention, to determine operational status, or to determine readiness to send or receive data. (A)

**port.** (1) An access point for data entry or exit. (2) A connector on a device to which cables for other devices such as display stations and printers are attached. (3) The representation of a physical connection to the link hardware. A port is sometimes referred to as an adapter; however, there can be more than one port on an adapter. There may be one or more ports controlled by a single DLC process. (4) In the Internet suite of protocols, a 16-bit number used to communicate between TCP or the User Datagram Protocol (UDP) and a higher-level protocol or application. Some protocols, such as File Transfer Protocol (FTP) and Simple Mail Transfer Protocol (SMTP), use the same well-known port number in all TCP/IP implementations. (5) An abstraction used by transport protocols to distinguish among multiple destinations within a host machine. (6) Synonymous with *socket*.

**port number.** In Internet communications, the identification of an application entity to the transport service.

**private branch exchange (PBX).** A private telephone exchange for transmission of calls to and from the public telephone network.

**problem determination.** The process of determining the source of a problem; for example, a program component, machine failure, telecommunication facilities, user or contractor-installed programs or equipment, environmental failure such as a power loss, or user error.

**program temporary fix (PTF).** A temporary solution or bypass of a problem diagnosed by IBM in a current unaltered release of the program.

**protocol.** (1) A set of semantic and syntactic rules that determine the behavior of functional units in achieving communication. (l) (2) In Open Systems Interconnection architecture, a set of semantic and syntactic rules that determine the behavior of entities in the same layer in performing communication functions. (T) (3) In SNA, the meanings of, and the sequencing rules for, requests and responses used for managing the network, transferring data, and synchronizing the states of network components. Synonymous with *line control discipline* and *line discipline*. See *bracket protocol* and *link protocol*.

**protocol data unit (PDU).** A unit of data specified in a protocol of a given layer and consisting of protocol control information of this layer, and possibly user data of this layer. (T)

## R

**Rapid Transport Protocol (RTP) connection.** In high-performance routing (HPR), the connection established between the endpoints of the route to transport session traffic.

**reachability.** The ability of a node or a resource to communicate with another node or resource.

**read-only memory (ROM).** Memory in which stored data cannot be modified by the user except under special conditions.

**real-time processing.** The manipulation of data that are required, or generated, by some process while the process is in operation. Usually the results are used to influence the process, and perhaps related processes, while it is occurring.

**reassembly.** In communications, the process of putting segmented packets back together after they have been received.

**receive not ready (RNR).** In communications, a data link command or response that indicates a temporary condition of being unable to accept incoming frames.

**receive not ready (RNR) packet.** See *RNR packet*.

**received line signal detector (RLSD).** In the EIA 232 standard, a signal that indicates to the data terminal equipment (DTE) that it is receiving a signal from the remote data circuit-terminating equipment (DCE). Synonymous with *carrier detect* and *data carrier detect (DCD)*.

**Recognized Private Operating Agency (RPOA).** Any individual, company, or corporation, other than a government department or service, that operates a telecommunication service and is subject to the obligations undertaken in the Convention of the International Telecommunication Union and in the Regulations; for example, a communication common carrier.

**reduced instruction-set computer (RISC).** A computer that uses a small, simplified set of frequently used instructions for rapid execution.

**remote.** (1) Pertaining to a system, program, or device that is accessed through a telecommunication line. (2) Synonym for *link-attached*. (3) Contrast with *local*.

**remote bridging.** The function of a bridge that allows two bridges to connect multiple LANs using a telecommunication link. Contrast with *local bridging*.

**Remote Execution Protocol (REXEC).** A protocol that allows the execution of a command or program on any host in the network. The local host receives the results of the command execution.

**Request for Comments (RFC).** In Internet communications, the document series that describes a part of the Internet suite of protocols and related experiments. All Internet standards are documented as RFCs.

**reset.** On a virtual circuit, reinitialization of data flow control. At reset, all data in transit are eliminated.

**reset request packet.** In X.25 communications, a packet transmitted by the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE) to request that a virtual call or a permanent virtual circuit be reset. The reason for the request can also be specified in the packet.

**ring.** See *ring network*.

**ring network.** (1) A network in which every node has exactly two branches connected to it and in which there are exactly two paths between any two nodes. (T) (2) A network configuration in which devices are connected by unidirectional transmission links to form a closed path.

**ring segment.** A section of a ring that can be isolated (by unplugging connectors) from the rest of the ring. See *LAN segment*.

**rlogin (remote login).** A service, offered by Berkeley UNIX-based systems, that allows authorized users of one machine to connect to other UNIX systems across an internet and interact as if their terminals were connected directly. The rlogin software passes information about the user's environment (for example, terminal type) to the remote machine.

**RNR packet.** A packet used by a data terminal equipment (DTE) or by a data circuit-terminating equipment (DCE) to indicate a temporary inability to accept additional packets for a virtual call or permanent virtual circuit.

**root bridge.** The bridge that is the root of a spanning tree formed between other active bridges in the bridging network. The root bridge originates and transmits bridge protocol data units (BPDUs) to other active bridges to maintain the spanning tree topology. It is the bridge with the highest priority in the network.

**route.** (1) An ordered sequence of nodes and transmission groups (TGs) that represent a path from an origin node to a destination node traversed by the traffic exchanged between them. (2) The path that network traffic uses to get from source to destination.

**route bridge.** A function of an IBM bridge program that allows two bridge computers to use a telecommunication link to connect two LANs. Each bridge computer is connected directly to one of the LANs, and the telecommunication link connects the two bridge computers.

**route extension (REX).** In SNA, the path control network components, including a peripheral link, that make up the portion of a path between a subarea node and a network addressable unit (NAU) in an adjacent peripheral node. See also *explicit route (ER)*, *path*, and *virtual route (VR)*.

**Route Selection control vector (RSCV).** A control vector that describes a route within an APPN network. The RSCV consists of an ordered sequence of control vectors that identify the TGs and nodes that make up the path from an origin node to a destination node.

**router.** (1) A computer that determines the path of network traffic flow. The path selection is made from several paths based on information obtained from specific protocols, algorithms that attempt to identify the shortest or best path, and other criteria such as metrics or protocol-specific destination addresses. (2) An attaching device that connects two LAN segments, which use similar or different architectures, at the reference model network layer. (3) In OSI terminology, a function that determines a path by which an entity can be reached. (4) In TCP/IP, synonymous with *gateway*. (5) Contrast with *bridge*.

**routing.** (1) The assignment of the path by which a message is to reach its destination. (2) In SNA, the forwarding of a message unit along a particular path

through a network, as determined by parameters carried in the message unit, such as the destination network address in a transmission header.

**routing domain.** In Internet communications, a group of intermediate systems that use a routing protocol so that the representation of the overall network is the same within each intermediate system. Routing domains are connected to each other by exterior links.

**Routing Information Protocol (RIP).** In the Internet suite of protocols, an interior gateway protocol used to exchange intradomain routing information and to determine optimum routes between internet hosts. RIP determines optimum routes on the basis of route metrics, not link transmission speed.

**routing loop.** A situation that occurs when routers circulate information among themselves until convergence occurs or until the networks involved are considered unreachable.

**routing protocol.** A technique used by a router to find other routers and to remain up to date about the best way to get to reachable networks.

**routing table.** A collection of routes used to direct datagram forwarding or to establish a connection. The information is passed among routers to identify network topology and destination feasibility.

**Routing Table Maintenance Protocol (RTMP).** In AppleTalk networks, a protocol that provides routing information generation and maintenance on the transport layer by means of the AppleTalk routing table. The AppleTalk routing table directs packet transmission through the internet from source socket to destination socket.

**RouTing update Protocol (RTP).** The VIRTUAL NEtworking System (VINES) protocol that maintains the routing database and allows the exchange of routing information between VINES nodes. See also *Internet Control Protocol (ICP)*.

**rsh.** A variant of the rlogin command that invokes a command interpreter on a remote UNIX machine and passes the command-line arguments to the command interpreter, skipping the login step completely.

## S

**SAP.** See service access point.

**seed router.** In AppleTalk networks, a router that maintains configuration data (network range numbers and zone lists, for example) for the network. Each network must have at least one seed router. The seed router must be initially set up using the configurator tool. Contrast with *nonseed router*.

**segment.** (1) A section of cable between components or devices. A segment may consist of a single patch cable, several patch cables that are connected, or a combination of building cable and patch cables that are connected. (2) In Internet communications, the unit of transfer between TCP functions in different machines. Each segment contains control and data fields; the current byte-stream position and actual data bytes are identified along with a checksum to validate received data.

**segmenting.** In OSI, a function performed by a layer to map one protocol data unit (PDU) from the layer it supports into multiple PDUs.

**sequence number.** In communications, a number assigned to a particular frame or packet to control the transmission flow and receipt of data.

**Serial Line Internet Protocol (SLIP).** A protocol used over a point-to-point connection between two IP hosts over a serial line, for example, a serial cable or an RS232 connection into a modem, over a telephone line.

**server.** A functional unit that provides shared services to workstations over a network; for example, a file server, a print server, a mail server. (T)

**service access point (SAP).** (1) In Open Systems Interconnection (OSI) architecture, the point at which the services of a layer are provided by an entity of that layer to an entity of the next higher layer. (T) (2) A logical point made available by an adapter where information can be received and transmitted. A single service access point can have many links terminating in it.

**Service Advertising Protocol (SAP).** In Internetwork Packet Exchange (IPX), a protocol that provides the following:

- A mechanism that allows IPX servers on an internet to advertise their services by name and type. Servers using this protocol have their name, service type, and address recorded in all file servers running NetWare.
- A mechanism that allows a workstation to broadcast a query to discover the identities of all servers of all types, all servers of a specific type, or the nearest server of a specific type.
- A mechanism that allows a workstation to query any file server running NetWare to discover the names and addresses of all servers of a specific type.

**session.** (1) In network architecture, for the purpose of data communication between functional units, all the activities which take place during the establishment, maintenance, and release of the connection. (T) (2) A logical connection between two network accessible units (NAUs) that can be activated, tailored to provide various protocols, and deactivated, as requested. Each session is uniquely identified in a transmission header (TH) accompanying any transmissions exchanged during the session. (3) In L2TP, L2TP creates a session

when an end-to-end PPP connection is attempted between a dial user and the LNS; regardless of whether the user initiates the session or the LNS initiates an outbound call. The datagrams for the session are sent over the tunnel between the LAC and LNS. The LNS and LAC maintain the state information for each user attached to an LAC.

**Simple Network Management Protocol (SNMP).** In the Internet suite of protocols, a network management protocol that is used to monitor routers and attached networks. SNMP is an application layer protocol. Information on devices managed is defined and stored in the application's Management Information Base (MIB).

**SNA management services (SNA/MS).** The services provided to assist in management of SNA networks.

**socket.** (1) An endpoint for communication between processes or application programs. (2) The abstraction provided by the University of California's Berkeley Software Distribution (commonly called Berkeley UNIX or BSD UNIX) that serves as an endpoint for communication between processes or applications.

**source route bridging.** In LANs, a bridging method that uses the routing information field in the IEEE 802.5 medium access control (MAC) header of a frame to determine which rings or token-ring segments the frame must transit. The routing information field is inserted into the MAC header by the source node. The information in the routing information field is derived from explorer packets generated by the source host.

**source routing.** In LANs, a method by which the sending station determines the route the frame will follow and includes the routing information with the frame. Bridges then read the routing information to determine whether they should forward the frame.

**source service access point (SSAP).** In SNA and TCP/IP, a logical address that allows a system to send data to a remote device from the appropriate communications support. Contrast with *destination service access point (DSAP)*.

**spanning tree.** In LAN contexts, the method by which bridges automatically develop a routing table and update that table in response to changing topology to ensure that there is only one route between any two LANs in the bridged network. This method prevents packet looping, where a packet returns in a circuitous route back to the sending router.

**sphere of control (SOC).** The set of control point domains served by a single management services focal point.

**sphere of control (SOC) node.** A node directly in the sphere of control of a focal point. A SOC node has exchanged management services capabilities with its

focal point. An APPN end node can be a SOC node if it supports the function to exchange management services capabilities.

**split horizon.** A technique for minimizing the time to achieve network convergence. A router records the interface over which it received a particular route and does not propagate its information about the route back over the same interface.

**spoofing.** For data links, a technique in which a protocol initiated from an end station is acknowledged and processed by an intermediate node on behalf of the final destination. In IBM 6611 data link switching, for example, SNA frames are encapsulated into TCP/IP packets for transport across a non-SNA wide area network, unpacked by another IBM 6611, and passed to the final destination. A benefit of spoofing is the prevention of end-to-end session timeouts.

**standard MIB.** In the Simple Network Management Protocol (SNMP), a MIB module that is located under the management branch of the Structure of Management Information (SMI) and that is considered a standard by the Internet Engineering Task Force (IETF).

**static route.** The route between hosts, networks, or both that is manually entered into a routing table.

**station.** An input or output point of a system that uses telecommunication facilities; for example, one or more systems, computers, terminals, devices, and associated programs at a particular location that can send or receive data over a telecommunication line.

**StreetTalk.** In the Virtual Networking System (VINES), a unique network-wide naming and addressing system that allows users to locate and access any resource on the network without knowing the network topology. See also *Internet Control Protocol (ICP)* and *RouTing update Protocol (RTP)*.

**Structure of Management Information (SMI).** (1) In the Simple Network Management Protocol (SNMP), the rules used to define the objects that can be accessed by means of a network management protocol. (2) In OSI, the set of standards relating to management information. The set includes the *Management Information Model* and the *Guidelines for the Definition of Managed Objects*

**subarea.** A portion of the SNA network consisting of a subarea node, attached peripheral nodes, and associated resources. Within a subarea node, all network accessible units (NAUs), links, and adjacent link stations (in attached peripheral or subarea nodes) that are addressable within the subarea share a common subarea address and have distinct element addresses.

**subnet.** (1) In TCP/IP, a part of a network that is identified by a portion of the IP address. (2) Synonym for *subnetwork*.

**subnet address.** In Internet communications, an extension to the basic IP addressing scheme where a portion of the host address is interpreted as the local network address.

**subnet mask.** Synonym for *address mask*.

**subnetwork.** (1) Any group of nodes that have a set of common characteristics, such as the same network ID. (2) Synonymous with *subnet*.

**Subnetwork Access Protocol (SNAP).** In LANs, a 5-byte protocol discriminator that identifies the non-IEEE standard protocol family to which a packet belongs. The SNAP value is used to differentiate between protocols that use \$AA as their service access point (SAP) value.

**subnetwork mask.** Synonym for *address mask*.

**subsystem.** A secondary or subordinate system, usually capable of operating independently of, or asynchronously with, a controlling system. (T)

**switched virtual circuit (SVC).** An X.25 circuit that is dynamically established when needed. The X.25 equivalent of a switched line. Contrast with *permanent virtual circuit (PVC)*.

**synchronous.** (1) Pertaining to two or more processes that depend upon the occurrence of specific events such as common timing signals. (T) (2) Occurring with a regular or predictable time relationship.

**Synchronous Data Link Control (SDLC).** (1) A discipline conforming to subsets of the Advanced Data Communication Control Procedures (ADCCP) of the American National Standards Institute (ANSI) and High-level Data Link Control (HDLC) of the International Organization for Standardization, for managing synchronous, code-transparent, serial-by-bit information transfer over a link connection. Transmission exchanges may be duplex or half-duplex over switched or nonswitched links. The configuration of the link connection may be point-to-point, multipoint, or loop. (I) (2) Contrast with *binary synchronous communication (BSC)*.

**SYNTAX.** In the Simple Network Management Protocol (SNMP), a clause in the MIB module that defines the abstract data structure that corresponds to a managed object.

**system.** In data processing, a collection of people, machines, and methods organized to accomplish a set of specific functions. (I) (A)

**system configuration.** A process that specifies the devices and programs that form a particular data processing system.

**system services control point (SSCP).** A component within a subarea network for managing the configuration, coordinating network operator and



problem determination requests, and providing directory services and other session services for users of the network. Multiple SSCPs, cooperating as peers with one another, can divide the network into domains of control, with each SSCP having a hierarchical control relationship to the physical units and logical units within its own domain.

**Systems Network Architecture (SNA).** The description of the logical structure, formats, protocols, and operational sequences for transmitting information units through, and controlling the configuration and operation of, networks. The layered structure of SNA allows the ultimate origins and destinations of information, that is, the users, to be independent of and unaffected by the specific SNA network services and facilities used for information exchange.

## T

**TCP/IP.** (1) Transmission Control Protocol/Internet Protocol. (2) A UNIX-like/Ethernet-based system-interconnect protocol originally developed by the US Department of Defense. TCP/IP facilitated ARPANET (Advanced Research Projects Agency Network), a packet-switched research network for which layer 4 was TCP and layer 3, IP.

**Telnet.** In the Internet suite of protocols, a protocol that provides remote terminal connection service. It allows users of one host to log on to a remote host and interact as directly attached terminal users of that host.

**threshold.** (1) In IBM bridge programs, a value set for the maximum number of frames that are not forwarded across a bridge due to errors, before a "threshold exceeded" occurrence is counted and indicated to network management programs. (2) An initial value from which a counter is decremented to 0, or a value to which a counter is incremented or decremented from an initial value.

**throughput class.** In packet switching, the speed at which data terminal equipment (DTE) packets travel through the packet switching network.

**time to live (TTL).** A technique used by best-effort delivery protocols to inhibit endlessly looping packets. The packet is discarded if the TTL counter reaches 0.

**timeout.** (1) An event that occurs at the end of a predetermined period of time that began at the occurrence of another specified event. (l) (2) A time interval allotted for certain operations to occur; for example, response to polling or addressing before system operation is interrupted and must be restarted.

**token.** (1) In a local area network, the symbol of authority passed successively from one data station to another to indicate the station temporarily in control of the transmission medium. Each data station has an opportunity to acquire and use the token to control the

medium. A token is a particular message or bit pattern that signifies permission to transmit. (T) (2) In LANs, a sequence of bits passed from one device to another along the transmission medium. When the token has data appended to it, it becomes a frame.

**token ring.** (1) According to IEEE 802.5, network technology that controls media access by passing a token (special packet or frame) between media-attached stations. (2) IEEE 802.5 network with a ring topology that passes tokens from one attaching ring station (node) to another. (3) See also *local area network (LAN)*.

**token-ring network.** (1) A ring network that allows unidirectional data transmission between data stations, by a token passing procedure, such that the transmitted data return to the transmitting station. (T) (2) A network that uses a ring topology, in which tokens are passed in a circuit from node to node. A node that is ready to send can capture the token and insert data for transmission.

**topology.** In communications, the physical or logical arrangement of nodes in a network, especially the relationships among nodes and the links between them.

**topology database update (TDU).** A message about a new or changed link or node that is broadcast among APPN network nodes to maintain the network topology database, which is fully replicated in each network node. A TDU contains information that identifies the following:

- The sending node
- The node and link characteristics of various resources in the network
- The sequence number of the most recent update for each of the resources described.

**trace.** (1) A record of the execution of a computer program. It exhibits the sequences in which the instructions were executed. (A) (2) For data links, a record of the frames and bytes transmitted or received.

**transceiver (transmitter-receiver).** In LANs, a physical device that connects a host interface to a local area network, such as Ethernet. Ethernet transceivers contain electronics that apply signals to the cable and that sense collisions.

**Transmission Control Protocol (TCP).** A communications protocol used in the Internet and in any network that follows the U.S. Department of Defense standards for internetwork protocol. TCP provides a reliable host-to-host protocol between hosts in packet-switched communications networks and in interconnected systems of such networks. It uses the Internet Protocol (IP) as the underlying protocol.

**Transmission Control Protocol/Internet Protocol (TCP/IP).** A set of communications protocols that support peer-to-peer connectivity functions for both local and wide area networks.

**transmission group (TG).** (1) A connection between adjacent nodes that is identified by a transmission group number. (2) In a subarea network, a single link or a group of links between adjacent nodes. When a transmission group consists of a group of links, the links are viewed as a single logical link, and the transmission group is called a *multilink transmission group (MLTG)*. A *mixed-media multilink transmission group (MMMLTG)* is one that contains links of different medium types (for example, token-ring, switched SDLC, nonswitched SDLC, and frame-relay links). (3) In an APPN network, a single link between adjacent nodes. (4) See also *parallel transmission groups*.

**transmission header (TH).** Control information, optionally followed by a basic information unit (BIU) or a BIU segment, that is created and used by path control to route message units and to control their flow within the network. See also *path information unit*.

**transparent bridging.** In LANs, a method for tying individual local area networks together through the medium access control (MAC) level. A transparent bridge stores the tables that contain MAC addresses so that frames seen by the bridge can be forwarded to another LAN if the tables indicate to do so.

**transport layer.** In the Open Systems Interconnection reference model, the layer that provides a reliable end-to-end data transfer service. There may be relay open systems in the path. (T) See also *Open Systems Interconnection reference model*.

**trap.** In the Simple Network Management Protocol (SNMP), a message sent by a managed node (agent function) to a management station to report an exception condition.

**Tunnel.** A tunnel is defined by an LNS-LAC pair. The tunnel carries PPP datagrams between the LAC and the LNS. A single tunnel can multiplex many sessions. A control connection operating over the same tunnel controls the establishment, release, and maintenance of all sessions and of the tunnel itself.

**tunneling.** To treat a transport network as though it were a single communication link or LAN. See also *encapsulation*.

**T1.** In the United States, a 1.544-Mbps public access line. It is available in twenty-four 64-Kbps channels. The European version (E1) transmits 2.048 Mbps.

## U

**universally administered address.** In a local area network, the address permanently encoded in an

adapter at the time of manufacture. All universally administered addresses are unique. Contrast with *locally administered address*.

**User Datagram Protocol (UDP).** In the Internet suite of protocols, a protocol that provides unreliable, connectionless datagram service. It enables an application program on one machine or process to send a datagram to an application program on another machine or process. UDP uses the Internet Protocol (IP) to deliver datagrams.

## V

**V.24.** In data communication, a specification of the CCITT that defines the list of definitions for interchange circuits between data terminal equipment (DTE) and data circuit-terminating equipment (DCE).

**V.25.** In data communication, a specification of the CCITT that defines the automatic answering equipment and parallel automatic calling equipment on the General Switched Telephone Network, including procedures for disabling of echo controlled devices for both manually and automatically established calls.

**V.34.** An ITU-T Recommendation for modem communication over standard commercially available voice-grade 33.6-Kbps (and slower) channels.

**V.35.** In data communication, a specification of the CCITT that defines the list of definitions for interchange circuits between data terminal equipment (DTE) and data circuit-terminating equipment (DCE) at various data rates.

**V.36.** In data communication, a specification of the CCITT that defines the list of definitions for interchange circuits between data terminal equipment (DTE) and data circuit-terminating equipment (DCE) at rates of 48, 56, 64, or 72 kilobits per second.

**version.** A separately licensed program that usually has significant new code or new function.

**VINES.** Virtual NEtworking System.

**virtual circuit.** (1) In packet switching, the facilities provided by a network that give the appearance to the user of an actual connection. (T) See also *data circuit*. Contrast with *physical circuit*. (2) A logical connection established between two DTEs.

**virtual connection.** In frame relay, the return path of a potential connection.

**virtual link.** In Open Shortest Path First (OSPF), a point-to-point interface that connects border routers that are separated by a non-backbone transit area. Because area routers are part of the OSPF backbone, the virtual link connects the backbone. The virtual links ensure that the OSPF backbone does not become discontinuous.

**Virtual Networking System (VINES).** The network operating system and network software from Banyan Systems, Inc. In a VINES network, virtual linking allows all devices and services to appear to be directly connected to each other, when they may actually be thousands of miles apart. See also *StreetTalk*.

**virtual route (VR).** (1) In SNA, either (a) a logical connection between two subarea nodes that is physically realized as a particular explicit route or (b) a logical connection that is contained wholly within a subarea node for intranode sessions. A virtual route between distinct subarea nodes imposes a transmission priority on the underlying explicit route, provides flow control through virtual route pacing, and provides data integrity through sequence numbering of path information units (PIUs). (2) Contrast with *explicit route (ER)*. See also *path* and *route extension (REX)*.

## W

**wide area network (WAN).** (1) A network that provides communication services to a geographic area larger than that served by a local area network or a metropolitan area network, and that may use or provide public communication facilities. (T) (2) A data communication network designed to serve an area of hundreds or thousands of miles; for example, public and private packet-switching networks, and national telephone networks. (3) Contrast with *local area network (LAN)* and *metropolitan area network (MAN)*.

**wildcard character.** Synonym for *pattern-matching character*.

## X

**X.21.** An International Telegraph and Telephone Consultative Committee (CCITT) recommendation for a general-purpose interface between data terminal equipment and data circuit-terminating equipment for synchronous operations on a public data network.

**X.25.** (1) An International Telegraph and Telephone Consultative Committee (CCITT) recommendation for the interface between data terminal equipment and packet-switched data networks. (2) See also *packet switching*.

**Xerox Network Systems (XNS).** The suite of internet protocols developed by the Xerox Corporation. Although similar to TCP/IP protocols, XNS uses different packet formats and terminology. See also *Internetwork Packet Exchange (IPX)*.

## Z

**zone.** In AppleTalk networks, a subset of nodes within an internet.

**Zone Information Protocol (ZIP).** In AppleTalk networks, a protocol that provides zone management service by maintaining a mapping of the zone names and network numbers across the internet on the session layer.

**zone information table (ZIT).** A listing of network numbers and their associated zone name mappings in the internet. This listing is maintained by each internet router in an AppleTalk internet.



---

# Index

## Numerics

2210  
as boot server 88

## A

accessing  
protocol  
configuration process 19  
operating (monitor) process 19  
second-level process 13, 15  
accessing the mp configuration prompt 537  
accessing the mp monitoring commands 541  
activate  
GWCON command 132  
activating spare interfaces 132  
add  
add 576  
ATM configuration command 285  
ATM Virtual Interface configuration command 291  
Boot CONFIG command 98  
BSC Relay configuration command 594  
CONFIG command 55  
ELS configuration command 172  
Frame Relay configuration command 422  
SDLC configuration command 564  
SDLC monitoring command 576  
SDLC Relay configuration command 550  
X.25 configuration command 356  
XTP configuration command 389  
XTP monitoring command 396  
add device example  
multilink PPP 16  
adding 16  
dial-in circuit  
example 16  
dial-out circuit  
example 16  
multilink PPP circuit  
example 16  
address entries  
changing 100  
deleting 103  
address registration in LAN emulation 271  
address resolution in LAN emulation 271  
address wildcards, DTE 377  
addresses  
ISDN 641  
addresses, entering  
ATM 279  
advanced  
ELS configuration command 172  
ELS monitoring command 192  
AppleTalk Control Protocol  
for PPP 479  
APPN HPR Control Protocol  
for PPP 481

APPN ISR Control Protocol  
for PPP 481  
ARP configuration  
config 302  
list 303  
remove 303  
set 303  
ATM  
how to enter addresses 279  
ATM addresses of LAN emulation components 264  
ATM addressing 263  
ATM configuration commands  
accessing 283  
add 285  
disable 290  
enable 290  
interface 284  
LE-Client 283  
LE-Services 283  
list 285  
qos 286  
remove 286  
set 286  
summary 283  
atm-llc  
ATM monitoring commands 293  
ATM LLC monitoring command  
list 296  
ATM monitoring commands  
accessing 292  
atm-llc 293  
interface 292, 293, 295  
list 293  
summary 292  
trace 294  
wrap 295  
ATM network interface  
monitoring 283  
using 279  
ATM Virtual Interface configuration commands  
add 291  
list 291  
remove 291  
summary 291  
ATM Virtual Interface monitoring commands  
summary 296  
authentication  
configuring PPP interface 476  
remote device  
configuring PPP interface to use 476  
autobaud, setting 79

## B

backup peer function, XTP 378  
Backward Explicit Congestion Avoidance 414  
Backward Explicit Congestion Notification (BECN)  
Frame Relay 407

- Banyan VINES Control Protocol (BVCP)
  - for PPP 479
- basing configuration
  - on existing 12
- baud rate, setting console 79
- BCM 273
  - Support for IP 274
  - Support for IPX
    - BCM IPX Server Farm 274
    - preventing a LEC from being treated as 274
  - support for NetBIOS 275
    - NetBIOS Namesharing 275
  - support for Source Route Bridging 275
- BCM IPX Server Farm
  - preventing a LEC from being treated as 274
- benefits of LAN emulation 261
- bilateral closed user groups
  - overview 339
- binary synchronous communications relay (BRLY)
  - considerations 590
  - overview 587
  - sample configuration 588
- boot
  - CONFIG command 62
  - GWCON command 133
- Boot and dump configuration database
  - displaying 106
- Boot CONFIG
  - process
    - entering from CONFIG 62
- Boot CONFIG commands
  - add 98
  - change 100
  - copy 102
  - delete 103
  - describe 104
  - disable 104
  - enable 105
  - erase 105
  - list 106
  - load 108
  - store 109
  - summary 97
  - tftp 111
  - timedload 110
- Boot CONFIG process
  - commands available from 97
  - description 87
  - entering 97
- Boot directory 94
- Boot file
  - copying into main memory 108
  - description of 87
- boot options
  - B (boot) 120
  - BC (boot in Config-only Mode) 120
  - BM (boot using console queries) 121
  - BN (boot, But Do Not Run, Using Console Queries) 123
  - BP (boot using BOOTP) 123
  - CC (clear Configuration Memory) 128
  - boot options (*continued*)
    - D (Dump using stored configuration) 120
    - description of 115
    - DIAG (Execute IBM Extended Diagnostic Program) 124
    - DM (Dump using Console Queries) 125
    - LC (load Configuration Memory) 127
    - prompts 118
    - UB (Display TFTP boot Configuration) 125
    - UC (Display Hardware Configuration) 126
    - UG (go execute at address in RAM) 126
    - ZB (ZModem boot) 128
    - ZC (ZModem configuration memory load) 128
- booting
  - accessing options 117
  - BOOTP 116
    - from TFTP 117
    - from the Integrated Boot Device 115
    - methods 115
    - option prompts 118
    - options 117
    - Unsuccessful BOOTP 116
- booting, configuring 702
- BOOTP
  - enabling/disabling 89
  - forwarding process 88
  - router as BOOTP Client 88
  - server 89
  - unsuccessful BOOTP 124
- BOOTP, configuring using quick configuration 703
- BOOTP Forwarding
  - description 88
- Bootstrap protocol 88
- breakpoint
  - OPCON command 28
- bridging, configuring using quick configuration 694
- Bridging Control Protocol (BCP)
  - for PPP 479
- Broadcast and Unknown Server 262, 271
- broadcast manager 273
- BSC interface
  - configuring 593
- BSC interface configuration commands
  - list 597
  - set 599
- BSC Relay
  - accessing monitoring environment 601
  - configuration
    - combination multipoint 588
    - physical multipoint 587, 588
    - point-to-point 587
    - virtual multipoint 587, 588
  - configuring 593
  - considerations 590
  - overview 587
  - sample configuration 588
- BSC Relay configuration commands
  - add 594
  - delete 596
  - disable 596
  - enable 597

- BSC Relay configuration commands *(continued)*
  - list 594
  - summary of 593
- BSC Relay monitoring commands
  - clear-port-statistics 602
  - disable 602
  - enable 602
  - list 603
  - summary of 601
- buffer
  - GWCON command 133
- BUS 261, 262
  - connecting to 271
  - functions of 272

## C

- cable type, clocking and 331
- call verification
  - ISDN 642
- callback
  - dial circuit monitoring command 679
- Callback Control Protocol (CBCP)
  - for PPP 479
- calls
  - ISDN monitoring command 664
  - V.25bis monitoring commands 616
  - V.34 monitoring command 632
- change
  - Boot CONFIG command 100
  - CONFIG command 62
  - Frame Relay configuration command 429
  - X.25 configuration command 362
  - XTP configuration command 392
- channels
  - ISDN monitoring command 664
- CHAP
  - authentication for PPP 475
  - configuration 486
  - monitoring 504
- CIR
  - monitoring 413
  - orphan permanent virtual circuit CIR 411
  - relationship to VIR 413
- Circuit congestion 413
  - responding with throttle down 413
- circuit contention
  - ISDN 641
- Circuit Information Rate (CIR) 410
- circuits
  - ISDN monitoring command 665
  - V.25bis monitoring commands 617
  - V.34 monitoring commands 633
- clear
  - BSC Relay monitoring command 602
  - CONFIG command 64
  - ELS configuration command 172
  - ELS monitoring command 192
  - Frame Relay monitoring command 452
  - GWCON command 135
  - PPP monitoring command 504
- clear *(continued)*
  - SDLC monitoring commands 602
- clear-counters
  - LLC monitoring command 245
- clear-port-statistics
  - SDLC Relay monitoring command 557
- CLLM
  - description of 410
- CLLM support 415
- clock, setting and changing 83
- clocking and cable type 331
- closed user groups
  - configuring 340
  - cug 0 override 340
  - establishing X.25 circuits 339
  - extended
    - types of 339
  - overview 338
  - XTP support
    - overview 379
- closing a telnet session 39
- code installation 94
- collisions
  - Ethernet monitoring command 259
- command
  - exit 11
- command history 23, 24
- commands
  - entering 9
  - environment
    - list 70
    - set 70
    - subcommands 70
- Committed Burst Size
  - definition 411
  - relationship to maximum frame size 411
- components of LAN emulation 262
- CONFIG commands
  - add 55
  - boot 62
  - change 62
  - clear 64
  - delete 66
  - disable 67
  - disable-completion 67
  - enable 68
  - Enable-completion 68
  - environment 69
  - event 71
  - features 71
  - List 72
  - network 75
  - patch 76
  - protocol 78
  - qconfig 79
  - set 79
  - summary of 54
  - time 83
  - unpatch 84
  - update 84

- Config-Only mode
  - description 44
  - entering automatically 45
  - manual entry 45
- CONFIG process
  - accessing 14
  - commands available from 54
  - description of 43
  - entering 14, 54
  - exiting 54
- configuration
  - accessing the mp prompt 537
  - basing on existing 12
  - displaying information about 135
  - first 11
  - GWCON command 135
  - network interfaces 17
  - OPCON command 15, 29
  - suggestions 11
  - updating 12
  - updating memory 84
- configuration commands
  - GWCON prompt 20
  - multilink PPP protocol (mp) 537
  - set prompt-level
    - add prefix to hostname 82
- configuration files
  - accessing 91
- configuration load
  - validating 93
- configuring
  - booting 702
  - DECnet 700
  - encryption 502
  - Ethernet 685
  - interfaces 685
  - IP 696
  - IPX 697
  - multilink PPP interface 533
    - for multi-chassis MP 535
    - on dial circuits 533
    - on Layer-2-Tunneling nets 534
    - on serial links 534
  - OPCON 27
  - PPP callback 477
  - user access 47
  - virtual connections (VC) 482
  - XTP 389
- configuring Booting 87
- configuring spare interfaces 48
  - activating 132
  - configuring 48
  - defining 230
  - restrictions 49
- configuring the 2210 129
- Congestion monitoring 414
- Congestion notification and avoidance
  - Backward Explicit Congestion Avoidance 414
  - Forward Explicit Congestion Avoidance 414
- connecting to a process 9
- connecting to the BUS 271
- connection request timer 379
- connector-Type
  - Ethernet configuration command 258
- considerations
  - multilink PPP protocol (MP) 532
  - virtual connections (VC) 482
- console
  - OPCON command 29
- console baud rate, setting 79
- console modem-control 704
- consolidated link layer management (CLLM)
  - description of 410
- coprocessor
  - accessing configuration process 15
- copy
  - Boot CONFIG command 102
- copy-config command
  - from a remote host 102
  - from a remote router 102
  - within a router 102
- CPU
  - displaying memory usage of 141
- create
  - ELS net filter configuration commands 186
  - ELS net filter monitoring commands 213

## D

- data direct VCCs 273
- Data Link Connection Identifier (DLCI)
  - Frame Relay 402, 406
- date, setting and changing 83
- DDN
  - default settings 707
- debugging tool
  - entering 28
- DECnet, configuring 700
- DECnet Control Protocol (DNCP)
  - for PPP 479
- default
  - ELS configuration command 173
- delete
  - Boot CONFIG command 103
  - BSC Relay configuration command 596
  - CONFIG command 66
  - delete 577
  - dial circuit configuration command 672
  - ELS configuration command 173
  - ELS net filter configuration commands 187
  - ELS net filter monitoring commands 214
  - ISDN 66
  - SDLC configuration command 566
  - SDLC monitoring command 577
  - SDLC Relay configuration command 551
  - X.25 configuration command 364
  - XTP configuration command 392
  - XTP monitoring command 397
- deleting configuration information 64
- describe
  - Boot CONFIG command 104
- description of OPCON 27



- device
  - displaying time statistics about 147
  - exiting 6
  - OPCON command 34
  - rebooting 34
  - restart 14
  - restarting 6
- device consoles
  - local 4
  - remote 5
  - using 3
- device processes
  - attaching to 37
  - connecting to 9
  - displaying information about 35
- device software
  - reloading 34
  - user interface 3
- dial circuit configuration commands
  - delete 672
  - dial circuits on leased lines 671
  - encapsulator 672
  - list 673
  - set 675
  - summary of 671
- dial circuit monitoring commands
  - callback 679
- dial circuits
  - adding 608, 624, 650
  - configuring 609, 625, 651
  - configuring for MP 533
  - ISDN 640
- dial circuits on leased lines 671
- dial-in circuit
  - add device example 16
- dial-in circuits
  - virtual connections (VC) 481
    - configuring 482
    - considerations 482
- dial-out circuit
  - add device example 16
- directories
  - boot and dump 94
- disable
  - ATM configuration command 290
  - authentication protocols 486
  - Boot CONFIG command 104
  - BSC Relay configuration command 596
  - BSC Relay monitoring command 602
  - CONFIG command 67
  - data compression 486
  - ELS net filter configuration commands 187
  - ELS net filter monitoring commands 214
  - Frame Relay configuration command
    - cir-monitor 430
  - Frame Relay monitoring command 452
  - GWCON command 137
  - ISDN configuration command 656
  - Lower DTR 486
  - multilink protocol 486
  - performance configuration command 222
  - disable (*continued*)
    - performance monitoring command 290
    - SDLC configuration command 566
    - SDLC link establishment connection 577
    - SDLC Relay configuration command 552
    - SDLC Relay monitoring command 558
    - X.25 configuration command 347
    - XTP configuration command 394
  - disable-completion
    - CONFIG command 67
  - display
    - ELS configuration command 173
    - ELS monitoring command 193
  - display hostname 82
  - display hostname software VPD 82
  - display hostname with carriage return 82
  - display hostname with changes 82
  - display hostname with date 82
  - display hostname with time 82
  - divert
    - OPCON command 29
  - DLCI (Data Link Connection Identifier)
    - Frame Relay 402
  - DOS
    - assembling a load file 709
    - disassembling a load file 710
  - DTE address wildcards 377
  - dump
    - Token-Ring monitoring command 235
  - dump file
    - description of 94
  - dumping
    - configuring for 94
  - duplicate policy values 269
  - dynamic routing
    - OSPF 697
    - RIP 697
- E**
  - EasyStart
    - using 43
  - EasyStart commands
    - pause 33
    - stop 36
  - EasyStart mode 43
  - ELAN name policy 268
  - ELAN type policy 269
  - ELS
    - capturing output using Telnet 156
    - concepts of 152
    - description of 151
    - entering 71
    - how to use 155
    - interpreting messages 153
    - message buffering
      - overview 167
    - monitoring 171
    - reloading 201
    - remote logging
      - additional considerations 166

- ELS (*continued*)
  - duplicate logging 156
  - messages containing IP addresses 166
  - output 163
  - recurring sequence numbers 167
  - remote-logging 181, 202
  - setting up traps 157
  - storing 202
  - tracing 183, 204
  - trapping 204, 209
  - troubleshooting example 1 157
  - troubleshooting example 2 158
  - troubleshooting example 3 158
  - using to troubleshoot 157
- ELS configuration
  - entering and exiting 152
- ELS configuration commands
  - add 172
  - advanced 172
  - clear 172
  - default 173
  - delete 173
  - display 173
  - filter 174
  - list 174
  - message buffering 188
    - list 188
    - log 188
    - nolog 189
    - set 190
  - nodisplay 176
  - noremote 176
  - notrace 178
  - notrap 178
  - remote 179
  - set 181
  - summary of 171
  - trace 208
  - trap 185
- ELS configuration environment
  - entering and exiting 171
- ELS console environment
  - 2210 remote logging
    - configuration 161
  - level
    - defined 159
  - remote logging 159
  - remote workstation
    - configuration 159
  - syslog facility
    - defined 159
- ELS messages 154
  - enabling logging to a remote file (Remote) 179, 199
  - explanation 154
  - groups 155
  - logging level 153
  - managing rotation 156
  - network information 155
  - suppressing display of 176
  - suppressing display of (nodisplay) 196
  - suppressing remote log (noremote) 176, 197
- ELS messages 198 (*continued*)
  - suppressing tracing 179
  - suppressing trapping 178, 198
  - suppressing trapping of (notrap) 198
  - trace 184
  - tracing 208
  - trapping 185, 209
- ELS monitoring commands
  - advanced 192
  - clear 192
  - display 193
  - files 193
  - filter 194
  - list 194
  - message buffering 215
    - flush 215
    - list 215
    - log 216
    - nolog 216
    - set 217
    - tftp 218
    - view 219
  - nodisplay 196
  - noremote 197
  - notrace 198
  - notrap 198
  - remote 199
  - remove 201
  - restore 201
  - retrieve 201
  - save 202
  - set 202
  - statistics 206
  - summary 192
  - trap 209
  - view 209
- ELS net filter configuration commands
  - create 186
  - delete 187
  - disable 187
  - enable 187
  - list 188
  - overview 185
- ELS net filter monitoring commands
  - create 213
  - delete 214
  - disable 214
  - enable 214
  - list 215
  - overview 213
- ELS operating environment
  - entering and exiting 191
- enable
  - ATM configuration command 290
  - authentication protocols 488
  - Boot CONFIG command 105
  - BSC Relay configuration command 597
  - BSC Relay monitoring command 602
  - CHAP 488
  - CONFIG command 68
  - data compression 488

- enable (*continued*)
  - ELS net filter configuration commands 290
  - ELS net filter monitoring commands 214
  - Frame Relay configuration command 432
  - Frame Relay monitoring command 452
  - ISDN configuration command 656
  - Lower DTR 488
  - multilink protocol 488
  - PAP 488
  - performance configuration command 222
  - performance monitoring command 224
  - SDLC configuration command 566
  - SDLC monitoring command 577
  - SDLC Relay configuration command 552
  - SDLC Relay monitoring command 558
  - X.25 configuration command 346
  - XTP configuration command 394
- Enable-completion
  - CONFIG command 68
- enable lmi 450
- enabling/disabling BOOTP forwarding 89
- enabling memory dump 105
- encapsulation type 699
- encapsulator
  - dial circuit configuration command 672
- encryption
  - configuring 502
- end system identifier 263
- environment
  - commands 70
    - list 70
    - set 70
  - CONFIG command 69
  - GWCON command 138
- environment, lower level
  - exiting 11
- environment commands
  - summary of 70
- erase
  - Boot CONFIG command 105
- error
  - GWCON command 139
- ESI 263
- Ethernet
  - configuring using quick configuration 685
  - displaying statistics 253
  - encapsulation type 699
  - encapsulation types for IPX 699
  - network interface
    - configuring 257
- Ethernet configuration commands
  - accessing 257
  - connector-Type 258
  - ip-encapsulation 258, 304
  - list 258
  - physical-address 258
  - summary 257
- Ethernet monitoring commands 259
  - collisions 259
  - summary 259

- Ethernet network interface
  - using 253
- Ethernet operating commands
  - accessing 259
- event
  - CONFIG command 71
  - GWCON command 140
  - OPCON command 30
- event logging
  - subsystem 153
- event number parameter 153
- Events
  - Causes 152
- Excess Burst Size
  - definition 411
  - setting for Frame Relay 412
- exit 594
  - console command 594
- exit command 11
- exiting
  - lower level environments 11
- exiting the device 6

## F

- fault
  - GWCON command 140
- features 71
  - accessing configuration and console processes 19
  - Bandwidth reservation 71
  - bandwidth reservation 140
  - CONFIG command 71
  - Encoding subsystem 71
  - GWCON command 140
  - MAC filtering 71, 140
  - WAN restoral 140
  - WAN restoral/reroute 71
- files
  - ELS monitoring command 193
- filter
  - ELS configuration command 174
  - ELS monitoring command 194
- first
  - configuration 11
- Flow control
  - packets 134
- flush
  - OPCON command 30
- forum-compliant LEC
  - ARP configuration 301
  - configuring a specific client 300
- Forward Explicit Congestion Avoidance 414
- Forward Explicit Congestion Notification (FECN)
  - Frame Relay 407
- Forwarding process
  - example 89
- Frame Relay 403
  - accessing configuration 417
  - Backward Explicit Congestion Notification 407
  - Bandwidth Reservation 416
  - circuit information rate 410
  - command/response 407

- Frame Relay 417 *(continued)*
  - configuring 417, 421
  - congestion notification and avoidance 414
  - Data Link Connection Identifier (DLCI) 406
  - data rates 410
  - discard eligibility 407
  - DLCI (Data Link Connection Identifier) 402
  - enabling PVC management 419
  - enabling SVC management 419
  - excess burst size 411
  - extended address 407
  - Forward Explicit Congestion Notification 407
  - frame format 406
  - frame forwarding described 408
  - HDLC flags 406
  - interface initialization 403
  - introduction 401
  - LAPD datalink protocol 401, 406
  - line speed 412
  - LMI management entities 409
  - management status reporting 409
    - description 409
    - full status report 409
    - link integrity verification report 410
  - maximum information rate 412
  - minimum information rate 412
  - multicast emulation 408
  - network 402
  - network interface 421, 464
  - network management 409
  - orphan permanent virtual circuits 404
  - orphan switched virtual circuits 405
  - permanent virtual circuits 403
  - protocol address mapping 408
  - PVCs and 405
  - required groups 405
  - static ARP 424
  - SVC
    - FRF 4 409
  - user data 407
  - using 401
  - variable information rate 413
  - variable information rate (VIR) 413
  - virtual circuits 401
- Frame Relay configuration commands 430, 432
  - add 422
    - permanent-virtual-circuit 422
    - protocol-address 422
  - add-protocol
    - AppleTalk2 protocol 425
    - DN protocol 425
    - IPX protocol 425
  - add protocol-address
    - IP protocol 424
  - change 429
  - disable
    - cir-monitor 430
    - cllm 430
    - compression 430
    - congestion 414
    - congestion-monitor 430

- Frame Relay configuration commands 430, 432 *(continued)*
  - disable *(continued)*
    - dn-length-field 430
    - encryption 430
    - fragmentation 430
    - lmi 430
    - lower-dtr 430
    - multicast-emulation 430
    - no-pvc 430
    - notify-fecn-source 430
    - orphan-circuits 430
    - protocol-broadcast 430
    - throttle-transmit-on-fecn 430
  - enable
    - cir-monitor 432
    - cllm 432
    - compression 432
    - congestion 414
    - congestion-monitor 432
    - dn-length-field 432, 434
    - encryption 432
    - lmi 432
    - lower-dtr 432
    - multicast-emulation 432
    - no-pvc 432
    - notify-fecn-source 432
    - orphan-circuits 432
    - protocol-broadcast 432
    - throttle-transmit-on-fecn 432
  - list 438
    - all 438
    - fragmentation-capable-pvcs 438
    - hdlc 438
    - lmi 438
    - permanent-virtual-circuits 438
    - protocol-address 438
  - llc 444
  - remove
    - permanent-virtual-circuit 445
    - protocol-address 445
  - remove-protocol
    - DN protocol 446
  - remove protocol-address
    - Appletalk2 protocol 446
    - IP protocol 445
    - IPX protocol 445
  - set
    - cable 447
    - clocking 447
    - default cir 447
    - frame-size 447
    - lmi-type 447
    - n1-parameter 447
    - n2-parameter 447
    - n3-parameter 447
    - p1-parameter 447
    - t1-parameter 447
    - transmit delay parameter 447
  - summary of 421

- Frame Relay Forum Implementation Agreement 4 (FRF 4) 409
- Frame Relay monitoring commands
  - clear 452
  - disable 452
    - cilm 452
    - notify-fecn-source 452
    - throttle-transmit-on-fecn 452
  - enable 452
    - cilm 452
    - notify-fecn-source 453
    - throttle-transmit-on-fecn 453
  - list 453
    - all 453
    - circuit 453
    - lmi 453
    - permanent-virtual-circuits 453
    - pvc-groups 453
  - llc 462
  - notrace 462
  - set 462
  - summary of 451
  - trace 464
- Frame Relay permanent virtual circuits (PVC)
  - changing 429
- Frame Relay switched virtual circuits (SVC) 403
  - adding 425
  - changing 429
  - listing 443, 444, 461
  - removing 446
- functions of the BUS 272

## G

- getting help 10, 594
- group
  - deleting 173
- group name parameter 155
- GTE-Telenet
  - default settings 707
- GWCON
  - commands
    - SDLC interface 585
    - X.25 interface 372
  - process
    - entering 15
- GWCON commands
  - activate 132
  - boot 133
  - buffer 133
  - clear 135
  - configuration 135
  - disable 137
  - environment 138
  - error 139
  - event 140
  - fault 140
  - features 140
  - interface 140, 229
  - log 141
  - memory 141
  - network 143

- GWCON commands (*continued*)
  - protocol 132
  - queue 144
  - reset 146
  - statistics 146
  - summary of 132
  - test 146
  - uptime 147
- GWCON process
  - description of 131
  - entering and exiting 131

## H

- halt
  - OPCON command 31
- HDLC flags
  - in Frame Relay frame 406
- help
  - console command 10, 594
- how to list the protocols 78

## I

- I.430 switch variant 653
- I.431 switch variant 653
- IBD
  - file transfer considerations 92
  - filename definitions 91
- IBD boot
  - configuring using quick configuration 704
- IBM 2210
  - Config-Only mode 45
- identifying prompts 10
- ILMI functions in LAN emulation 265
- image
  - loading at specific time 93
- installing software/code 94
- intercept
  - OPCON command 31
- intercept character 11
  - changing 31
- interface
  - ATM configuration command 284
  - ATM monitoring commands 292, 293, 295
  - GWCON command 140
  - list of processes 7
  - user 7
- interface device
  - adding 55
  - changing 62
- interfaces
  - configuring spare 48
  - spare 230
- interfaces, configuring 685
- interfaces, restrictions 49
- Interim Local Management Interface 265
- IP
  - TFTP 90
- IP, configuring 696
- IP (Internet Protocol), configuring using quick configuration 696

- IP Control Protocol (IPCP)
  - for PPP 480
- ip-encapsulation
  - Ethernet configuration command 258, 304
- IP monitoring commands
  - ping 33
- IPv6 Control Protocol (IPv6CP)
  - for PPP 480
- IPX, configuring 697
- IPX (Internetwork Packet Exchange)
  - configuring using quick configuration 698
  - Ethernet encapsulation types 699
  - token ring encapsulation types 698
- IPX Control Protocol (IPXCP)
  - for PPP 481
- ISDN
  - accessing monitoring process 663
  - addresses 641
  - call verification 642
  - configuring 647, 655
  - cost control over demand circuits 642
  - delete address 66
  - dial circuit contention 641
  - dial circuits 640
  - GWCON commands 669
  - interface restrictions 647
  - overview 639
  - PPP configuration 647
  - requirements and restrictions 646
  - sample configurations 644
  - switches supported 646
- ISDN configuration commands
  - disable 656
  - enable 656
  - list 656
  - remove 657
  - set 657
  - set switch variant 660
  - summary of 655
- ISDN interface
  - using 639
- ISDN monitoring commands
  - calls 664
  - channels 664
  - circuits 665
  - L2\_Counters 666
  - L3\_Counters 666
  - parameters 666
  - statistics 667
  - summary of 663
  - TEI 666

## K

- keepalive timer, setting for XTP 394
- key parameters for LAN emulation 278

## L

- L2\_Counters
  - ISDN monitoring command 666

- L3\_Counters
  - ISDN monitoring command 666
- LAN destination policy (MAC address policy) 268
- LAN emulation 261
  - address registration to the LES 271
  - address resolution by the LES 271
  - addressing in ATM 263
  - ATM addresses of LAN emulation components 264
  - ATM addressing for 263
  - benefits 261
  - Broadcast and Unknown Server (BUS) 262
  - Broadcast Manager (BCM) 273
  - BUS 262
  - client 262
  - components 262
  - components, ATM addresses of 264
  - configuration of the signaling version 265
  - configuration server 262
  - configuration server, policies and policy values 267
  - connecting to the BUS 271
  - connecting to the LES 270
  - ELAN name policy 268
  - ELAN type policy 269
  - establishing data direct VCCs 273
  - functions of the BUS 272
  - ILMI functions, related 265
  - key configuration parameters 278
  - LAN Emulation Configuration Server, overview of 266
  - LECS, overview of 266
  - LECS, policies and policy values 267
  - LECS duplicate policy values 269
  - LECS LAN destination policy (MAC address policy) 268
  - LECS TLVs 269
  - locating the LECS using ILMI 265
  - max frame size policy 269
  - overview 261
  - overview of related ILMI functions 265
  - overview of router extensions for LAN emulation 273
  - redundancy 276
  - reliability 276
  - sample assignment policies for LECS 268
  - security 277
  - server 262
  - signaling version 265
- LAN Emulation Client (LEC) 297
  - configuring 297, 299
- LAN Emulation Configuration Server 266
- LAN Emulation Server 270
- layer 2 tunneling
  - relationship with multilink PPP (MP) 533
- Layer 2 Tunneling nets
  - configuring for MP 534
- LE client 262
- LE-Client
  - ATM configuration command 283
- LE-Services
  - ATM configuration command 283

- LEC monitoring commands
  - accessing 318
  - list 319
  - mib 323
  - summary of 319
- LECS 261
  - and LAN emulation 262
  - and LAN extensions 266
  - component of LAN emulation 266
  - duplicate policy values 269
  - ELAN name policy 268
  - ELAN type policy 269
  - LAN destination policy (MAC address policy) 268
  - max frame size policy 269
  - sample assignment policies 268
  - TLVs 269
- LES 261, 262
  - address registration 271
  - address resolution 271
  - connecting to 270
- Line Speed 412
- Link Control Protocol (LCP)
  - packets 471
  - relationship to PPP 469
- list 20
  - ATM configuration command 285
  - ATM LLC monitoring command 296
  - ATM monitoring commands 293
  - ATM Virtual Interface configuration command 291
  - Boot CONFIG command 106
  - BSC interface configuration command 597
  - BSC Relay configuration command 598
  - BSC Relay monitoring command 603
  - CONFIG command 72
  - dial circuit configuration command 673
  - ELS configuration command 174
  - ELS monitoring command 194
  - ELS net filter configuration commands 188
  - ELS net filter monitoring commands 215
  - Ethernet configuration command 258
  - Frame Relay configuration command 438
  - Frame Relay monitoring command 453
  - ISDN configuration command 656
  - LEC monitoring command 319
  - list 578
  - LLC configuration command 316
  - LLC monitoring command 245, 328
  - performance configuration command 222
  - performance monitoring command 224
  - Point-to-Point configuration command 490
  - PPP monitoring command 504
  - SDLC configuration command 566
  - SDLC monitoring command 578
  - SDLC Relay configuration command 553
  - SDLC Relay monitoring command 558
  - Token-Ring configuration command 231
  - V.25bis configuration command 612
  - V.34 configuration command 628
  - X.25 configuration command 365
  - X.25 monitoring command 368
  - XTP configuration command 394
- list 397 (*continued*)
  - XTP monitoring command 285
- list devices 283
- list devices command 16, 257, 485, 611, 627
- listing the configuration 78
- llc
  - Frame Relay configuration commands 444
  - Frame Relay monitoring commands 462
  - Point-to-Point configuration command 494
  - PPP configuration commands 494
  - PPP monitoring commands 526
  - Token-Ring configuration command 232
  - Token-Ring configuration commands 232, 236
  - Token-Ring monitoring command 236
- LLC configuration commands
  - accessing 241
  - list 242, 316
  - set 243, 317
  - summary 241, 316, 328
- LLC monitoring commands
  - accessing 244
  - clear-counters 245
  - list 245, 328
  - set 250, 328
  - summary 245
- LLC network interfaces
  - configuring 241
- LMI management entities 409
- load
  - Boot CONFIG command 108
- load file, router
  - assembling under DOS 709
  - assembling under UNIX 709
  - creating from multiple disks 709
  - disassembling under DOS 710
  - disassembling under UNIX 711
- loading
  - at specific time 93
- loading software/code onto the 2210 94
- local consoles 4
- local terminals 4
- local XTP
  - description 379
- locating the LECS using ILMI 265
- log
  - GWCON command 141
- logging in
  - from local console 5
  - from remote console 5
  - remote login name 5
- logging level
  - changing 141
  - viewing 141
- login
  - disabling 67
  - enabling 68
- logout
  - OPCON command 32

## M

MAC address policy (LAN destination policy) 268

magic numbers 93

max frame size policy 267, 269

maximum information rate

for frame relay 412

memory

displaying information about 141

erasing information 201

GWCON command 141

obtaining information about 32

OPCON command 32

memory dump

disabling 104

enabling 105

message buffering

ELS configuration commands 188

list 188

log 188

nolog 189

set 190

ELS monitoring commands 215

flush 215

list 215

log 216

nolog 216

set 217

tftp 218

view 219

overview 167

messages

explanation 154

interpreting 153

receiving 149

messaging process

commands affecting 149

description of 149

entering and exiting 149

OPCON commands 149

receiving messages 149

mib

LEC monitoring command 323

minimum information rate

for frame relay 412

Modem

enabling 68

monitoring

accessing the mp commands 541

ATM 283

network interfaces 19

performance monitoring commands 223

monitoring commands

LAN Emulation Client (LEC) 299

multilink ppp protocol (mp) 541

MONITR process

commands affecting 149

description of 149

entering and exiting 149

OPCON commands 149

receiving messages 149

MOS system debugging tool

entering 28

MPPE options

listing 490

MS-CHAP

authentication for PPP 475

msgsz

SDLC monitoring command 581

multi-chassis MP 533

configuring 535

multilink PPP protocol (MP)

configuration commands 537

configuring

dial circuits 533

Layer 2 Tunneling nets 534

multi-chassis MP 535

serial links 534

considerations 532

monitoring commands 541

multi-chassis 533

overview 531

relationship with layer 2 tunneling 533

multilink PPP protocol (mp) monitoring commands

accessing 541

multilink protocol (mp) configuration prompt

accessing 537

## N

national disable

X.25 configuration command 349

national enable

X.25 configuration command 347

national personality, setting 383

national restore

X.25 configuration command 355

national set

X.25 configuration command 350

network

CONFIG command 75

environment 75, 143

GWCON command 143

network command 16, 257, 283, 318, 485, 611, 627

Network Control Protocols (NCP)

for PPP interfaces 478

AppleTalk Control Protocol 479

APPN HPR Control Protocol 481

APPN ISR Control Protocol 481

Banyan VINES Control Protocol (BVCP) 479

Bridging Control Protocol (BCP) 479

Callback Control Protocol (CBCP) 479

DECnet Control Protocol (DNCP) 479

IP Control Protocol (IPCP) 480

IPv6 Control Protocol (IPv6CP) 480

IPX Control Protocol (IPXCP) 481

OSI Control Protocol (OSICP) 481

network interface

accessing configuration process 15

accessing console process 18

configuring 15, 229

console process 15, 229



- network interface (*continued*)
  - deleting 15
  - disabling 137
  - displaying information about 72, 135, 140
  - displaying the configuration 17
  - enabling 147
  - GWCON interface command 229
  - monitoring 19, 229
  - SDLC 585
  - supported interfaces 17
  - verifying 147
  - X.25 372
- network software
  - displaying statistical information about 146
- nodisplay
  - ELS configuration command 176
  - ELS monitoring command 196
- nonvolatile configuration memory
  - replacing 62
- noremote
  - ELS configuration command 176
  - ELS monitoring command 197
- notrace
  - ELS configuration command 178
  - ELS monitoring command 198
  - Frame Relay monitoring commands 462
- notrap
  - ELS configuration command 178
  - ELS monitoring command 198

## O

- obtaining status of telnet session 39
- off
  - packet trace monitoring command 210
- on
  - packet trace monitoring command 211
- online help 22, 23
- OPCON commands
  - breakpoint 28
  - configuration 29
  - console 29
  - divert 29
  - event 30
  - flush 30
  - halt 31
  - intercept 31
  - logout 32
  - memory 32
  - reload 34
  - restart 34
  - status 35
  - summary of 27
  - suspend 37
  - talk 37
  - telnet 37
- OPCON interface
  - configuring 27
- OPCON process
  - accessing 27
  - commands available from 27

- OPCON process (*continued*)
  - description 27
  - getting back to 11
  - summary 7
- orphan permanent virtual circuits
  - Frame Relay 404
- orphan switched virtual circuits
  - Frame Relay 405
- OSI Control Protocol (OSICP)
  - for PPP 481
- OSPF 697
- output
  - discarding 30
  - sending to other consoles 29
  - suspending 31
- overview
  - binary synchronous communications relay (BRLY) 587
  - ELS net filter configuration commands 185
  - ELS net filter monitoring commands 213
  - of software 6
  - virtual connections (VC) 481
- overview of LAN emulation 261

## P

- packet completion codes 154
- packet forwarder
  - entering CONFIG environment for 78
- packet-size
  - Token-Ring configuration command 232
- packet trace
  - packet trace monitoring command 199
- packet trace messages
  - tracing packets 199
- packet trace monitoring commands
  - off 210
  - on 211
  - packet Trace 199
  - reset 211
  - set 211
  - subsystems 211
  - trace-status 212
  - view 212
- PAP authentication for PPP 474
- parameter defaults
  - X.25 334
- parameters
  - configuring 79
  - event number 153
  - for LAN emulation 278
  - ISDN monitoring command 666
  - key LAN emulation 261
  - V.25bis monitoring commands 617
  - V.34 monitoring commands 633
  - X.25 monitoring command 369
- password, setting for user 60
- passwords 5
- patch
  - CONFIG command 76
- pause
  - EasyStart command 33

- perf command 222
- performance
  - configuring 221
- performance configuration commands
  - disable 222
  - enable 222
  - list 222
  - set 223
  - summary 222
- performance monitoring commands
  - accessing 223
  - disable 224
  - enable 224
  - list 224
  - report 224
  - set 224
  - summary of 223
- physical-address
  - Ethernet configuration command 258
- pin parameter
  - setting 181
- ping
  - IP monitoring command 33
- Point-to-Point configuration commands
  - accessing 486
  - list 490
  - LLC 494
  - summary of 486
- Point-to-Point interfaces
  - configuring 485
- Point-to-Point network interface
  - using 467
- Point-to-Point Protocol (PPP) 480
  - accessing the configuration process 485
  - address fields 469
  - AppleTalk Control Protocol 479
  - APPN HPR Control Protocol 481
  - APPN ISR Control Protocol 481
  - authentication 473
  - Banyan Vines Control Protocol (BVCP) 479
  - Bridging Control Protocol (BCP) 479
  - Callback Control Protocol (CBCP) 479
  - control field 469
  - DECnet Control Protocol (DNCP) 479
  - flag fields 469
  - frame check sequence field 469
  - frame structure 468
  - information field 469
  - IPv6 Control Protocol (IPv6CP) 480
  - IPX Control Protocol (IPXCP) 481
  - LCP packets 471
  - Link Control Protocol (LCP) 469
  - link establishment packets 472
  - link maintenance packets 473
  - link termination packets 473
  - Network Control Protocols (NCP) 478
  - OSI Control Protocol (OSICP) 481
  - overview 467
  - protocol field 469
- policies 261
  - agreement of 267
- policies and policy values 267
- PPP
  - IP Control Protocol (IPCP) 480
- PPP callback
  - configuring 477
- PPP configuration commands
  - list
    - ccp 490
    - ecp 491
    - set 494
    - setting IPCP parameters 494
    - setting LCP parameters 494
- PPP interface monitoring process
  - accessing 503
- PPP monitoring commands
  - clear 504
  - list 504
    - dn 525
    - dncp 525
    - osi 525
    - osicp 525
    - listing IPCP parameters 504
    - listing LCP parameters 504
    - llc 526
    - summary of 504
- process
  - second-level
    - accessing 13, 15
- processes
  - communicating with 7
  - list of 7
- prompt-level
  - additional functions of
    - display hostname with carriage return 82
    - display hostname with changes 82
    - display hostname with date 82
    - display hostname with time 82
    - display hostname with VPD 82
  - configuration command
    - add prefix to hostname 82
    - display hostname 82
- prompts
  - boot options 118
  - CONFIG 10
  - device processes 10
  - GWCON 10
  - identifying 10
  - OPCON 10
- protocol
  - CONFIG command 78
  - configuration process 229, 230
  - console process 229, 230
  - entering configuration process 20
  - GWCON command 144
- protocol command 20, 21
- protocol console process
  - entering 20
- protocols
  - configuration and console processes
    - accessing 19
  - configuring using quick configuration 695

protocols (*continued*)  
  console process 19  
  displaying information about 135  
  entering configuration environment for 78  
  entering console process 20  
  generating a list of 78

## Q

qconfig  
  CONFIG command 79  
QoS  
  ATM configuration command 286  
queue  
  GWCON command 144  
Quick Config mode 47  
  automatic entry 47  
  manual entry 47  
quick configuration 8, 14  
  boot configuration  
    BOOTP user interface 703  
    IBD user interface 704  
    procedure 702  
    TFTP user interface 703  
  bridging configuration 694  
  description 46  
  device configuration 685  
  protocol configuration  
    IP user interface 696  
    IPX user interface 698  
    procedure 695  
Quick Configuration Reference 683

## R

redundancy of LAN emulation servers 276  
reliability of LAN emulation 276  
reload  
  OPCON command 34  
remote  
  ELS configuration command 179  
  ELS monitoring command 199  
remote consoles 5  
remote device  
  authentication  
    configuring PPP interface for 476  
    configuring PPP interface to use 476  
remote DTE, searching for 378  
remote logging  
  additional considerations 166  
  duplicate logging 167  
  messages containing IP addresses 166  
  recurring sequence numbers 167  
  output examples 163  
remote login 5  
remote terminals 5  
remove  
  ATM configuration command 286  
  ATM Virtual Interface configuration command 291  
  ELS monitoring command 201  
  Frame Relay configuration command 445  
  ISDN configuration command 657

report  
  performance monitoring command 224  
reset  
  GWCON command 146  
  packet trace monitoring command 211  
  X.25 monitoring command 370  
restart  
  OPCON command 6  
Restart  
  OPCON command 14  
restart  
  OPCON command 34  
restarting the device 6, 14  
restarting the router 704  
restore  
  ELS monitoring command 201  
retrieve  
  ELS monitoring command 201  
RIP 697  
route descriptor policy 267  
router  
  displaying information about 72  
  router, restarting 704  
  router extensions for LAN emulation 273  
  router load file  
    assembling under DOS 709  
    assembling under UNIX 709  
    creating from multiple disks 710  
    disassembling under DOS 710  
    disassembling under UNIX 711  
  router software  
    communicating with 144  
  router software installation 94

## S

sample, quick configuration 683  
save  
  ELS monitoring commands 202  
SDLC  
  accessing configuration 563  
  configuration procedure 561  
  configuration requirements 562  
  configuring 561, 563  
  network interface 585  
  switched call-in interface  
    configuring 561  
SDLC configuration commands  
  add 564  
  delete 566  
  disable 566  
  enable 566, 577  
  list 566  
  msgsz 581  
  set 569  
  summary of 564  
SDLC connections  
  support for 564  
SDLC monitoring commands  
  accessing 576  
  clear 577  
  link counters 578

- SDLC monitoring commands *(continued)*
  - list 576
  - summary of 576
- SDLC Relay
  - accessing configuration 549
  - accessing monitoring environment 557
  - configuring 547, 549
- SDLC Relay configuration commands
  - add 550
  - delete 551
  - disable 552
  - enable 552
  - list 553
  - set 555
  - summary of 550
- SDLC Relay monitoring commands
  - clear-port-statistics 557
  - disable 558
  - enable 558
  - list 558
  - summary of 557
- second-level
  - process
    - accessing 13, 15
- security of LAN emulation 277
- selector 263
- serial line interface
  - accessing the configuration process 331
- serial line interfaces
  - configuring 331
- serial PPP links
  - configuring for MP 534
- session
  - terminating 32
- set
  - ATM configuration command 286
  - BSC interface configuration command 599
  - CONFIG command 79
  - dial circuit configuration command 675
  - ELS configuration command 181
  - ELS monitoring command 202
  - Frame Relay configuration command 446
  - Frame Relay monitoring command 462
  - ISDN configuration commands 657
  - LLC configuration command 317
  - LLC monitoring command 250, 328
  - packet trace monitoring command 211
  - performance configuration command 223
  - performance monitoring command 224
  - PPP configuration command 494
  - SDLC configuration command 569
  - SDLC monitoring command 581
  - SDLC Relay configuration command 555
  - Token-Ring configuration command 233
  - V.25bis configuration command 613
  - V.34 configuration command 629
  - X.25 configuration command 342
  - XTP configuration command 394
- setting and changing time, date, and clock 83
- setting autobaud 79
- setting console baud rate 79

- signaling version configuration in LAN emulation 265
- software
  - installing 94
  - overview 6
  - user interface 7
- software installation 94
- source-routing
  - Token-Ring configuration command 233
- speed
  - Token-Ring configuration command 234
- SRAM device records
  - recreating 55
- statistics
  - clearing 135
  - ELS monitoring command 206
  - GWCON command 146
  - ISDN monitoring command 667
  - V.25bis monitoring commands 618
  - V.34 monitoring commands 634
  - X.25 monitoring command 370
- status
  - OPCON command 35, 485
- stop
  - EasyStart command 36
- store
  - Boot CONFIG command 109
- subsystems
  - packet trace monitoring command 211
- suggestions
  - configuration 11
- suspend
  - OPCON commands 37
- switch variant 653
  - setting for ISDN 660
- switched SDLC call-in interface
  - configuring 561

## T

- talk
  - OPCON command 37, 221, 223
- TCP/IP, transporting X.25 traffic over 375
- TDM (time division multiplexing) 401
- technical support access 48
- TEI
  - ISDN monitoring command 666
- telnet
  - closing a connection 39
  - obtaining status of Telnet session 38
  - OPCON command 37
  - quitting a session 39
- telnet command 38
- telnet connections 5
  - closing 39
  - obtaining status of 38
- temperature thresholds 69
- Temperature thresholds 138
- test
  - GWCON command 146
  - SDLC monitoring commands 585
  - test 585

- tftp
  - Boot CONFIG command 111
- TFTP
  - booting from 117
  - description of 90
  - IBD considerations 92
  - to and from IBD 91
- TFTP boot, configuring using quick configuration 703
- time
  - activated load of image 93
  - CONFIG command 83
  - setting and changing 83
- timeload
  - Boot CONFIG command 110
- Tinygram compression 495
- TLVs
  - defined on an ELAN basis 269
- Token Ring
  - configuring using quick configuration 686
- token ring
  - encapsulation types for IPX 698
- Token-Ring configuration commands
  - accessing 231
  - enabling for LLC 234
  - list 231
  - LLC 232
  - llc 236
  - packet-size 232
  - set 233
  - source-routing 233
  - speed 234
  - summary of 231
- Token-Ring Interface
  - statistics displayed for 236
- Token-Ring monitoring commands
  - accessing 234
  - dump 235
  - summary of 235
- Token-Ring network interfaces
  - configuring 231
- trace
  - ATM monitoring commands 294
  - ELS configuration commands 208
  - Frame Relay monitoring commands 464
- trace-status
  - packet trace monitoring command 212
- trap
  - ELS configuration commands 185
  - ELS monitoring command 209
- type length values 269

## U

- UNIX
  - assembling a load file 709
  - disassembling a load file 711
- unpatch
  - CONFIG command 84
- unsuccessful BOOTP 116
- update
  - CONFIG command 84
- updating
  - configuration 12

- uptime
  - GWCON command 147
- user access
  - adding user 60
  - changing password 62
  - changing user 63
  - configuring 47
  - deleting user 67
  - listing user information 75
  - setting password 60
- user interface
  - processes 7
  - software 7

## V

- V.25bis
  - accessing configuration 611
  - accessing monitoring process 615
  - adding addresses 607
  - configuring 607, 611
  - GWCON commands 620
- V.25bis configuration commands
  - list 612
  - set 613
  - summary of 611
- V.25bis monitoring commands
  - calls 616
  - circuits 617
  - parameters 617
  - statistics 618
  - summary of 615
- V.34
  - accessing configuration 627
  - accessing monitoring process 631
  - adding addresses 623
  - configuring 623, 627
  - GWCON commands 636
- V.34 configuration commands
  - list 628
  - set 629
  - summary of 627
- V.34 monitoring commands
  - calls 632
  - circuits 633
  - parameters 633
  - statistics 634
  - summary of 631
- V25bis address 75
- V34 address 75
- variable information rate
  - for frame relay 413
- VCs
  - Frame Relay 401
- view
  - ELS monitoring command 209
  - packet trace monitoring command 212
- virtual connections (VC)
  - configuring 482
  - considerations 482
  - overview 481

## W

- WANs, configuring using quick configuration 685
- wildcards, DTE address 377
- wrap
  - ATM monitoring commands 295

## X

- X.25
  - parameter defaults 334
  - X.25 configuration commands
    - add 356
    - change 362
    - delete 364
    - disable 347
    - enable 346
    - list 365
    - national disable 349
    - national enable 347
    - national restore 355
    - national set 350
    - set 342
    - summary of 341
  - X.25 interfaces
    - bilateral closed user groups
      - overview 339
    - closed user groups
      - configuring 340
      - establishing circuits 339
      - extended types 339
      - overriding processing for cug 0 340
      - overview 338
  - X.25 monitoring commands
    - list 368
    - parameters 369
    - reset 370
    - statistics 370
    - summary of 368
  - X.25 network interface
    - accessing the monitoring process 367
    - configuring 341
    - national personality 334, 707
    - statistics 372
    - using 333
  - X.25 Transport Protocol (XTP) 375
- XTP
  - backup peer function 378
  - closed user groups
    - overview 379
  - configuration commands
    - Add 389
    - Change 392
    - Delete 392
    - Disable 394
    - Enable 394
    - List 394
    - Set 394
  - configuration procedures 380
  - configuring 389
  - configuring commands 389

## XTP (continued)

- local XTP
  - description 379
- monitoring commands
  - Add 396
  - Delete 397
  - List 397
- setting keepalive timer 394
- setting national personality 383
- using 375

---

# Readers' Comments — We'd Like to Hear from You

**Nways Multiprotocol Routing Services  
Software User's Guide  
Version 3.3**

**Publication No. SC30-3681-09**

**Overall, how satisfied are you with the information in this book?**

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Overall satisfaction	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**How satisfied are you that the information in this book is:**

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Accurate	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Complete	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Easy to find	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Easy to understand	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Well organized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Applicable to your tasks	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**Please tell us how we can improve this book:**

Thank you for your responses. May we contact you?  Yes  No

When you send comments to IBM, you grant IBM a nonexclusive right to use or distribute your comments in any way it believes appropriate without incurring any obligation to you.

---

Name

---

Address

---

Company or Organization

---

Phone No.



Fold and Tape

Please do not staple

Fold and Tape



 
NO POSTAGE  
NECESSARY  
IF MAILED IN THE  
UNITED STATES

# BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

IBM Corporation  
Design & Information Development  
Department CGF/Bldg. 656  
PO Box 12195  
Research Triangle Park, NC 27709-9990



Fold and Tape

Please do not staple

Fold and Tape







Printed in the United States of America  
on recycled paper containing 10%  
recovered post-consumer fiber.

SC30-3681-09



Spine information:



Nways Multiprotocol Routing  
Services

**MRS V3.3 Software User's Guide**