APPLICATION NOTES

FOR THE



FM / AM-1500

COMMUNICATIONS SERVICE MONITOR

TABLE OF CONTENTS

	INTRODUCTION		TRANSMITTER MEASUREMENTS continued
page		page	THAT SHIP TEN MEROOTEMENTO COMMISSO
4-5	HOW TO USE THIS BOOK		
		30-31	Measuring isolation and insertion loss in Tx-Rx switches
	RECEIVER MEASUREMENTS	32-33	Monitoring SSB & ACSB testing
page		34-35	Synchronizing Simulcast Transmitters
6-7	Check local oscillators & xtals without opening radio case		- 1 - 40 V - 40 V
8-9	Measuring audio frequency response with tone sweep		ANTENNA & TRANSMISSION LINE MEASUREMENTS
10-11	Measuring 12 dB SINAD, Receiver Center Frequency and	page	
	Modulation Acceptance Bandwidth	36-37	Measuring Antenna Isolation
12-13	Checking IF Bandwidth & Symmetry	38-41	Tuning Antennas for Minimum VSWR
14-17	Receiver RF filter alignment	42-43	Cable Fault Location and Finding Cable Stub Lengths
18-19	High accuracy FM deviation measurements		
	using the Bessel null technique		
			DUPLEXER MEASUREMENTS
		page	
		44-45	Measuring Center Frequency, Insertion Loss and 3dB Points on
	TRANSMITTER MEASUREMENTS		Cavities
page		46-47	Transmitter cavity alignment
20-21	Measuring the output of very low power transmitters	48-49	Bandpass / Band reject duplexer alignment
22-25	Measuring transmitter harmonics	50-51	Measuring receiver desense in a duplexed system
26-27	Stage gain measurements using the spectrum analyzer	52-53	Measuring receiver isolation at Tx & Rx frequencies
28-29	Analyzing receiver desense due to external transmitter intermodulation	54-55	Measuring Tx noise suppression at Rx frequency


APPLICATION NOTE


HOW TO USE THIS BOOK

Application TITLE box


This Application Note book contains actual field applications of the IFR FM/AM-1500 Communications Service Monitor.


Overview... highlights of application

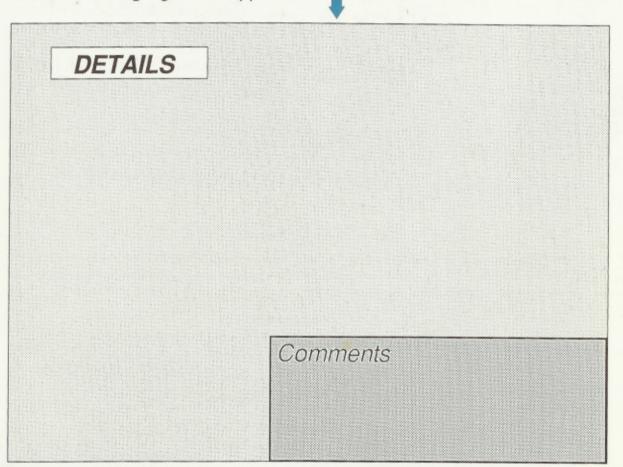

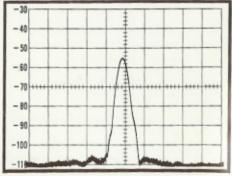

CRT IMAGES & WAVEFORMS

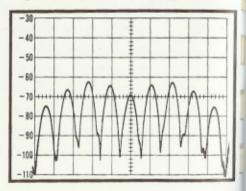

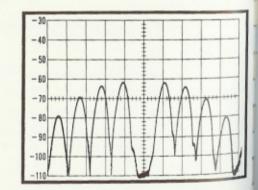

DETAILED SETUP

IFR FM/AM-1500

OUTPUT

INTENSITY

FOCUS

VERT POS

HOW TO USE THIS BOOK

XMTR or RCVR in FREQUENCY window indicates that you select proper frequency for the equipment under test.

ANTENNA

ATTENUATOR

HORIZ POS

OUTPUT

PWR OFF BATT

() M

This facing page shows connection information and the position of pertinent controls.

Those controls, readouts or indicators shown in **BLUE** affect the operation in this particular application.

SYMBOL EXPLANATION

Denotes a control requiring adjustment during the application.

Denotes a switch requiring a *change* of position during the application.

Antenna

XMITTER

Mic. input

Check local oscillators & xtals without opening radio case

CONCEPT


There is nothing fancy or complicated about an inductive pickup. The concept is to connect the high sensitivity spectrum analyzer (2 μ v) to an antenna that only picks up a small percentage of signal, obviously you don't want to look at all of the signals that are present in your shop. A 2 turn pickup loop works well from about 100 kHz through VHF. With the spectrum analyzer set to one of the wider dispersion settings, you can quickly determine the operation of the local oscillators.

EXAMPLE

Suppose that a hand-held VHF radio operating at 150 MHz comes across your bench. You know from experience that it probably has a first IF on or near 10.7 MHz. If you set the analyzer center FREQUENCY at 150.0000 MHz and the ANALYzer DISPeRsion to 5 MHz per horizontal division, the analyzer will scan from 125 to 175 MHz. Most radios radiate enough to pick up the high frequency local oscillator easily with the SNIFFER LOOP anywhere close to the radio. The Hi Freq L.O. should show up about two divisions to the left or right of the center frequency of 150 MHz. Exact frequency of any signal you can see on the analyzer is easily measured by jogging the FREQUENCY until the unknown signal is within 10 KHz, then use the error meter to get an exact reading.

Checking the Lo Freq local oscillator would be just as easy by setting the FREQUENCY of the analyzer on 10.7 MHz and ANALY DISPR to .2M. Now the analyzer will sweep from 9.7 to 11.7 MHz. The Lo Freq oscillator would typically be about 2.25 divisions (455 kHz) above or below center. The SNIFFER LOOP is less sensitive at the lower frequencies and the Lo Freq oscillator coil is usually shielded better than HF coils so you may have to hunt around the case a little to find the signal.

APPLICATION NOTE

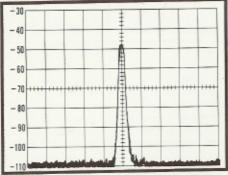


A **SNIFFER LOOP** lets you use the high sensitivity of the spectrum analyzer to show you if the local oscillators are running without opening the case.

Local oscillator picked up with sniffer loop

If you haven't used a **SNIFFER LOOP** we suggest you build yourself **two** of them and keep them with your 1500. One is used for *SNIFFING*, the second one is useful for non-contact signal injection. You may want to COLOR CODE both ends with vinyl tape to keep track of which one is injecting and which one is receiving.

A SNIFFER LOOP is such a useful tool when attached to your spectrum analyzer and tracking generator that you'll wonder how you've done without it.

A SNIFFER LOOP is nothing more than one or two turns of insulated wire on one end of a convenient length of coax. Install a male BNC connector on the other to connect to the 1500's ANTENNA input.

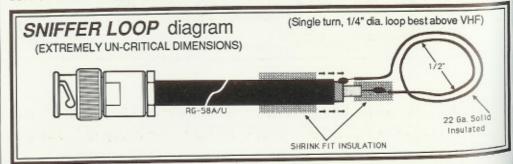

DETAILED SETUP

IFR FM/AM-1500


Connect SNIFFER LOOP to ANTENNA port

Check local oscillators & xtals without opening radio case

ATTENUATOR switch must be in 0 dB position for maximum sensitivity. SNIFFER LOOP use

Couple loop to the radiating coil to get at least a -80dBm on the analyzer response screen. -80dBm will quiet the FM/AM-1500's receiver section sufficiently to get a good FREQ ERROR reading once you have centered the signal near the center of the screen at an ANALY DISPR setting of less than 10K.

REMEMBER.. you are dealing with 2 receivers in the 1500, the spectrum analyzer and monitor receiver. Both use the same front end and connect to the outside world via the ANTENNA port.

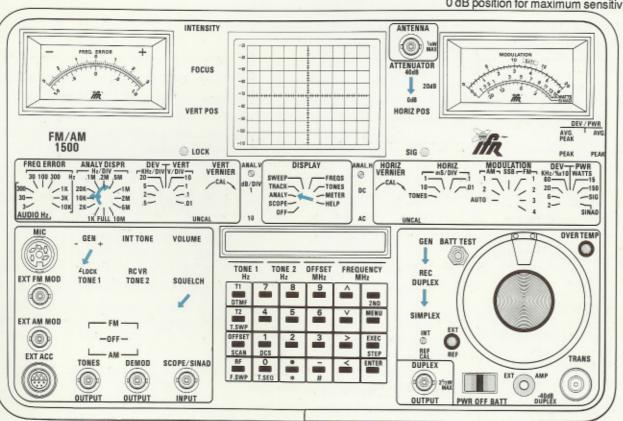

CAUTION: When using the SNIFFER LOOP on transmitters, bring the loop towards the radio after keying. Don't couple closely until you see the signal on the analyzer to avoid overloading or possible front end burn out. Keep the signal on the analyzer screen below the top (-30dBm) to prevent spurious generation due to overloading.

Measuring audio frequency response with tone sweep

APPLICATION NOTE

The 1500's Tone sweep menu can simplify audio frequency response testing by stepping through the 300-3000 Hz range quickly in octave steps so that receiver de-emphasis or transmitter pre-emphasis response may be checked.

If we set the audio output at 300 Hz to fill the 8 vertical divisions of the scope, then each octave increase in frequency should be half as many divisions if the receiver audio output meets the standard 6dB per octave de-emphasis curve.

PROCEDURE

Set DISPLAY to TONES Key ENTER, MENU, Λ , Λ , this should bring up the TONE SWEEP MENU on the CRT.

Key ENTER, 4, >, the cursor will now flash under START FREQ. Set the frequency to 300.

> will move the cursor to STOP FREQ. Set it at 3000.

>, moves the cursor on to INCRemental STEP. Key the \(\Lambda\) until it reads X.

In the next position enter the factor 2.0, this indicates that at each step the frequency will be doubled (an octave).

Set the INCRemental RATE to 5000 msec.

To start the TONE SWEEP running, use the following sequence.

ENTER, EXECUTE, 2ND, T.SWP, 4, (loop), ENTER.

TONE generator 1 will begin automatically stepping every 5 seconds through the following frequencies: 300, 600, 1200, 2400, 3000 Hz. The loop (●) repeats the function. Neat, but not real handy unless you have a plotter for the output. Even with a plotter you would still have to take the 6dB per octave decrease into account. Now, *How do I stop the darn thing?*

2nd, STEP will halt the cycle and leave the tone on.

Now, ^ will step the frequency up an octave at a time.(300 to 2400) If you step to 300 Hz and use the VERT VERNIER to fill the scope with the 300 Hz sine wave, each stroke of the ^ key will double the frequency which should cut the audio amplitude in half if it fits the deemphasis curve. The top step to 3000 Hz gives you a final check at the top of the audio passband to check for excessive roll off even though it isn't an octave step.


300 Hz = 8 div. 600 Hz = 4 div. 1200 Hz = 2 div. 2400 Hz = 1 div. 3000 Hz = 0.8 div. Peak to peak levels required to conform to 6dB per octave de-emphasis curve

Once programmed, this function will remain in the TONE SWEEP MENU as ITEM #04 for future use. (We selected item 4 so it won't be changed as easily when you call up the menu)

DETAILED SETUP

IFR FM/AM-1500

Measuring audio frequency response with tone sweep

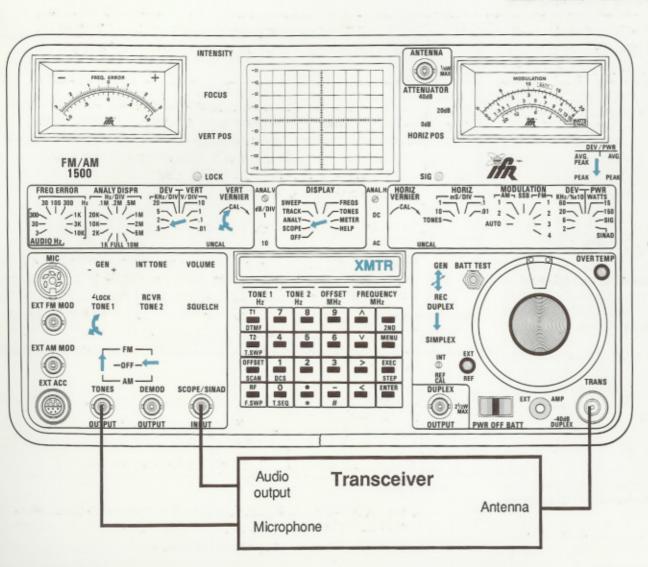

RECEIVER RESPONSE

The setup shown is for measuring receiver audio response as described on the facing page.

TRANSMITTER RESPONSE

Transmitter audio response may be measured by modulating the transmitter with TONES OUTPUT and measuring the deviation on the scope in the .5 KHz/DIV position.

Set the modulation level of the transmitter with the TONE 1 level control to produce 8 divisions of deflection on CRT at 2400 Hz.

Each octave step down in frequency should produce half the amplitude of audio if the pre-emphasis circuit is operating properly.