


You can use a normal standard RS232-Cabel

 CABLE- AND JUNCTIONS Service WORKFILE: CABRC21b		date:
Switchmodul: RC-SWL	receiver type: AOR AR 8600	09.10.01
Intern Info: for RadioCom receiver control		