
■ Microphone (HM-36)

DESCRIPTION

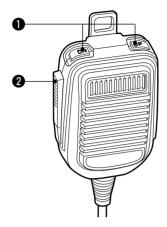

1 UP/DOWN SWITCHES [UP]/[DN]


Change the selected readout frequency or memory channel.

- Continuous pushing changes the frequency or memory channel number continuously.
- •The [UP]/[DN] switch can simulate a key paddle. Preset in the CW PADDL in initial set mode. (p. 32)

2 PTT SWITCH

Push and hold to transmit; release to receive.

MICROPHONE CONNECTOR

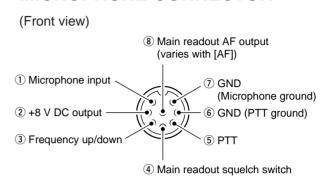

[MIC] Pin No.	FUNCTION	DESCRIPTION
2	+8 V DC output	Max. 10 mA
3	Frequency up	Ground
	Frequency down	Ground through 470 Ω
4	Squelch open	"Low" level
	Squelch closed	"High" level

CAUTION: DO NOT short pin 2 to ground as this can damage the internal 8 V regulator.

•HM-36 SCHEMATIC DIAGRAM

