

430MHz FM TRANSCEIVER

IC-47A/E

MAINTENANCE MANUAL



ICOM INCORPORATED

1-6-19, Kamikuratsukuri, Hirano-ku, Osaka 547, Japan
Phone: (06) 793-5301
Telex: ICOM TR J63649

ICOM EUROPE G.M.B.H.
Himmelgeister Strasse 100
4000 Duesseldorf 1
West Germany
Phone: 0211-346047
Telex: 41-8588082

ICOM AMERICA, INC.
2380 116th Avenue N.E.
Bellevue, WA 98004
Phone: (206) 454-8155
Telex: 230-152210 ICOM AMER BVUE

3331 Towerwood Dr., Suite 307
Dallas, Texas 75234
Phone: (214) 620-2781

ICOM CANADA LTD.
810 S.W. Marine Drive
Vancouver, B.C., Canada
Phone: (604) 321-1833
Telex: 21-454315

ICOM AUSTRALIA, PTY., Ltd.
7 Duke Street, Windsor 3181
Victoria, Australia
Phone: (03) 529-7582
Telex: 71-35521 ICOMAS AA35521

TABLE OF CONTENTS

SECTION 1 SPECIFICATIONS	1 - 1
SECTION 2 OPERATING CONTROLS	2 - 1 ~ 4
SECTION 3 CIRCUIT DESCRIPTION	3 - 1 ~ 10
SECTION 4 BLOCK DIAGRAM	4 - 1
SECTION 5 INSIDE VIEWS	5 - 1 ~ 2
SECTION 6 MECHANICAL PARTS AND DISASSEMBLY	6 - 1 ~ 3
SECTION 7 MAINTENANCE AND ADJUSTMENT	7 - 1 ~ 4
SECTION 8 VOLTAGE (CIRCUIT) DIAGRAMS	8 - 1 ~ 8
SECTION 9 BOARD LAYOUTS	9 - 1 ~ 4
SECTION 10 IC SPECIFICATIONS	10 - 1 ~ 10
SECTION 11 PARTS LIST	11 - 1 ~ 9
SECTION 12 UT-16 VOICE SYNTHESIZER UNIT	12 - 1 ~ 4

SECTION 1 SPECIFICATIONS

GENERAL

Numbers of semiconductors	:	Transistors 60	
		FETs 7	
		ICs 23	
		Diodes 99	
Frequency coverage	:	430 ~ 439.9875MHz (IC-47E #04)	
		440 ~ 449.9950MHz (IC-47A #05)	
		430 ~ 439.9950MHz (IC-47A #07)	
Frequency resolution	:	12.5kHz/25kHz steps (IC-47E)	
		5kHz/25kHz steps (IC-47A)	
Frequency control	:	Microcomputer-based PLL synthesizer with 5kHz steps.	
		Independent Dual VFO capability.	
Frequency stability	:	Within $\pm 0.001\%$	
Memory channels	:	9 channels with any inband frequency programmable	
Usable conditions	:	Temperature: $-10^{\circ}\text{C} \sim 60^{\circ}\text{C}$ ($14^{\circ}\text{F} \sim 140^{\circ}\text{F}$)	
		Operational time: Continuous	
Antenna impedance	:	50 ohms unbalanced	
Power supply requirement	:	13.8V DC $\pm 15\%$ (negative ground) 7A Max.	
Current drain (at 13.8V DC)	:	Transmitting: High (25W) Approx. 7.0A Low (5W) Approx. 3.5A	
		Receiving: At max audio output Approx. 0.7A Squelched Approx. 0.5A	
Dimensions	:	38(41)mm(H) \times 140mm(W) \times 226(238)mm(D)	
		(): Shows the dimensions including projections.	
Weight	:	Approx. 1.4kg	

TRANSMITTER


Output power	:	HIGH 25W LOW 5W	
Emission mode	:	16F3 (F3E 16K0)	
Modulation system	:	Variable reactance frequency modulation	
Max. frequency deviation	:	$\pm 5\text{kHz}$	
Spurious emission	:	More than 60dB below carrier	
Microphone	:	600 ohm electret condenser microphone with push-to-talk and frequency UP/DOWN switches. (with 1750Hz tone burst unit IC-47E) (with 16 key dual-tone pad IC-47A)	
Operating mode	:	Simplex, Semi-Duplex (Any offset in-band in 100kHz increments programmable)	

RECEIVER

Receiving system	:	Double-conversion superheterodyne	
Modulation acceptance	:	16F3 (F3E 16K0)	
Intermediate frequencies	:	1st: 21.8MHz 2nd: 455kHz	
Sensitivity	:	Less than 0.2 μV for 12dB SINAD Less than 0.4 μV for 20dB Noise quieting	
Squelch sensitivity	:	Less than 0.15 μV	
Spurious response rejection ratio	:	More than 60dB	
Selectivity	:	More than 15kHz at -6dB point Less than 30kHz at -60dB point	
Audio output power	:	More than 2.0W	
Audio output impedance	:	4 ~ 8 ohms	

SECTION 2 OPERATING CONTROLS

FRONT PANEL

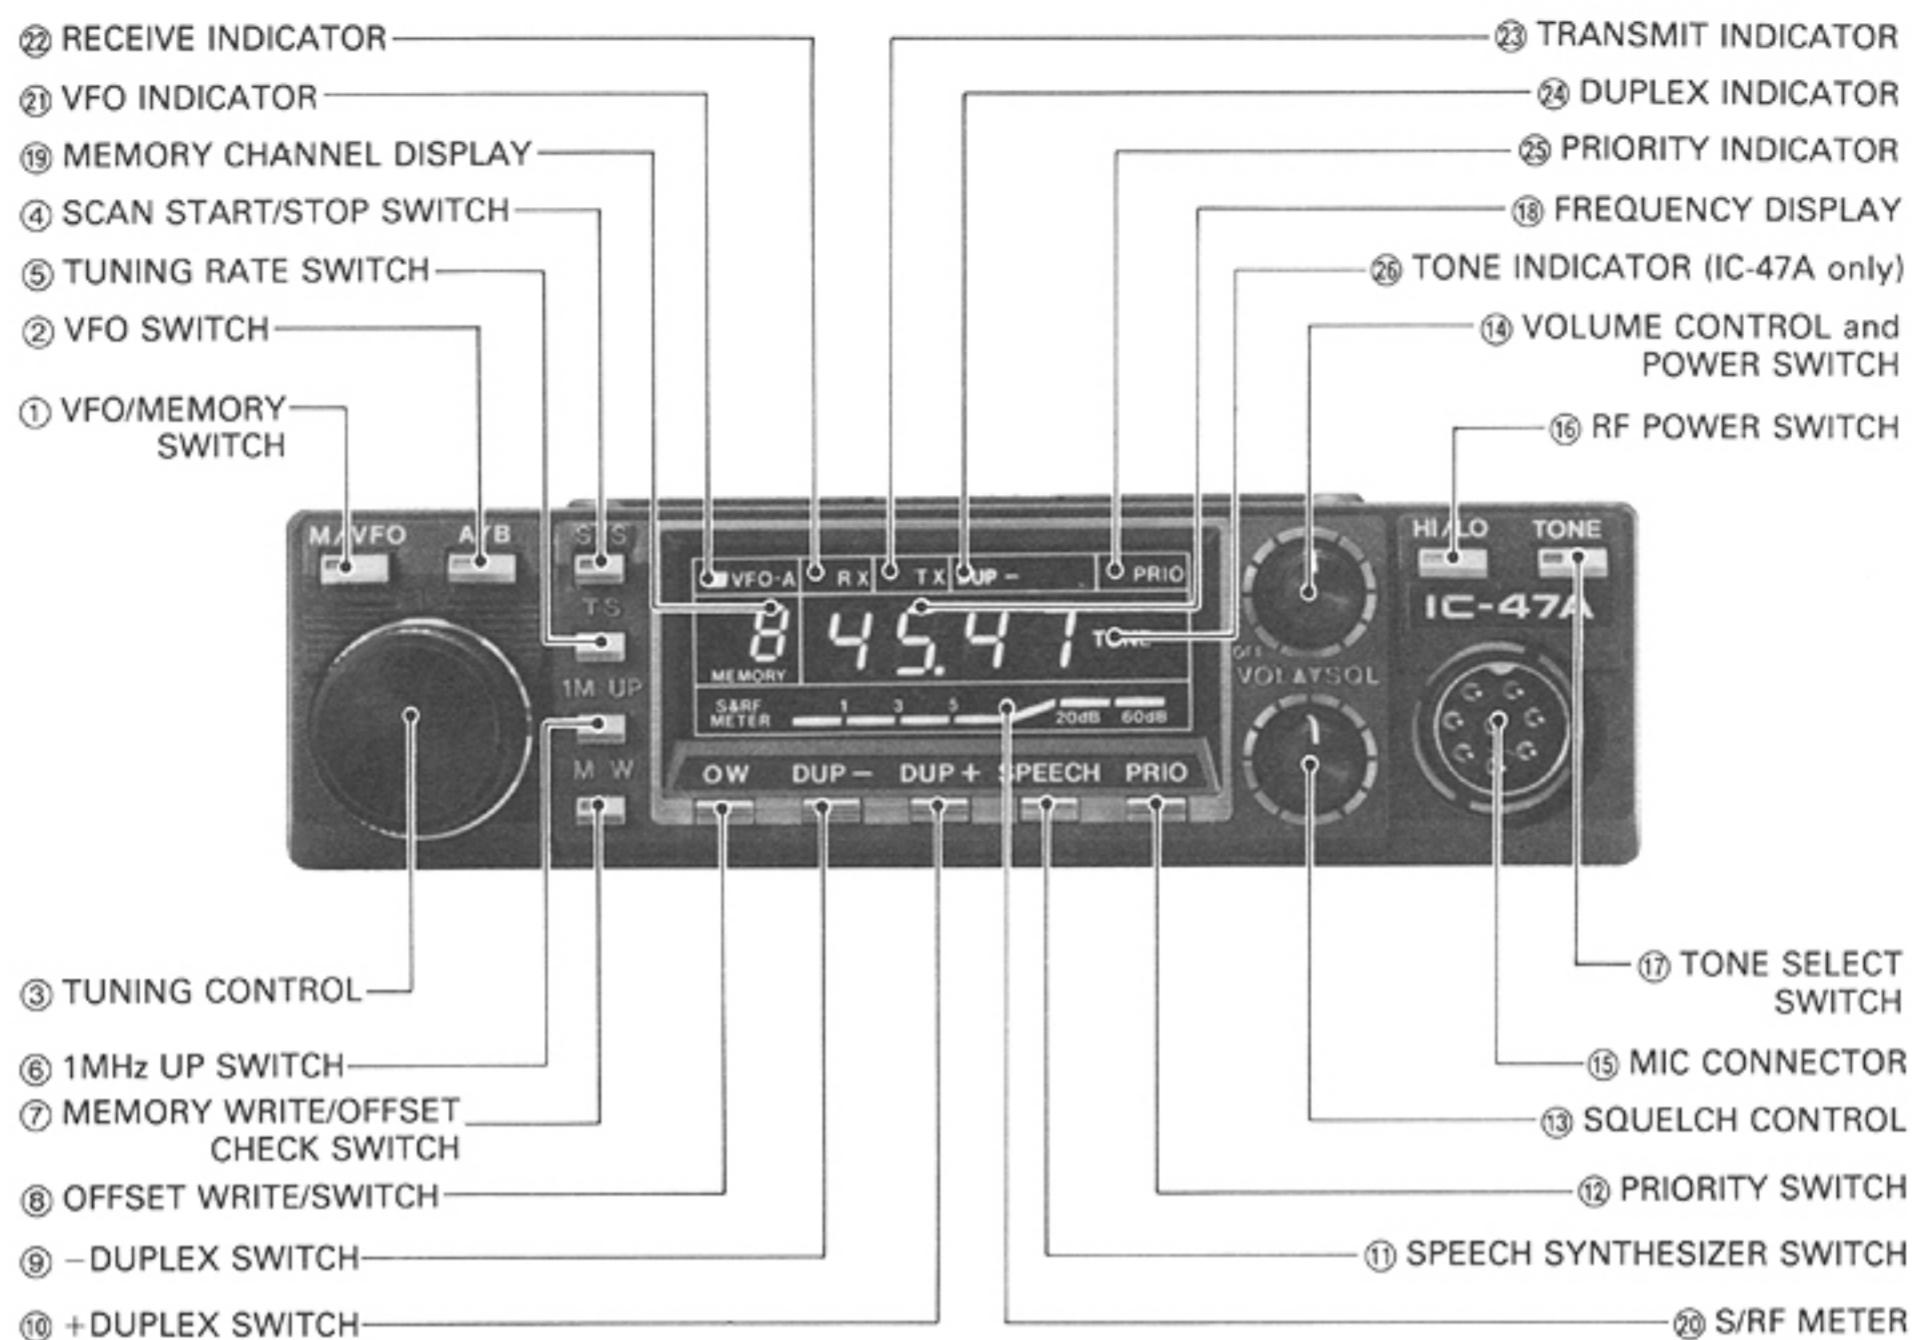

1. VFO/MEMORY SWITCH

Each push switches from MEMORY CHANNEL operation to VFO operation alternately. When the set is in the MEMORY CHANNEL operation, the letter "M" is displayed at the MEMORY CHANNEL DISPLAY. The selected memory channel number is also displayed at the MEMORY CHANNEL DISPLAY, however this number remains even if the VFO operation is selected.

2. VFO SWITCH

Selects either VFO, "A" or "B", for tuning. When the switch is in the out position, VFO A is selected and the VFO INDICATOR is illuminated. When the switch is pushed in, VFO B is selected and the VFO INDICATOR goes off.

3. TUNING CONTROL

In the VFO operation mode, rotating the TUNING CONTROL clockwise increases the frequency, while rotating it counterclockwise decreases the frequency. The frequency is changed in 5kHz steps (IC-47E: 12.5kHz steps) when the TUNING RATE switch is pushed in, and in 25kHz steps when the TUNING RATE switch is in the out position.

When tuning up past the upper limit of the operation band, the frequency will automatically revert to the lower limit. Likewise, when tuning down past the lower limit, the frequency will automatically revert to the upper limit.

4. SCAN START/STOP SWITCH

Starts and stops any of the scan functions. When depressing it to restart the scan, it will start from the memory channel or frequency displayed.

5. TUNING RATE SWITCH

Selects the tuning frequency steps. When this switch is pushed in, the frequency changes in 5kHz steps (IC-47E: 12.5kHz steps) by turning the TUNING CONTROL. When the switch is in the out position, the frequency changes in 25kHz steps.

6. 1MHz UP SWITCH

Each push increases the frequency in 1MHz steps. The lower digits will not change.

7. MEMORY WRITE/OFFSET CHECK SWITCH

In the SIMPLEX mode (neither DUP- nor DUP+ is illuminated), by pushing this switch, the displayed VFO frequency is written into the selected memory channel (the memory channel number is displayed on the MEMORY CHANNEL DISPLAY). Each memory channel stores not only an operating frequency but also an offset frequency, offset direction and subaudible tone frequency (tone number).

In the DUPLEX mode, while holding this switch, the receive frequency changes to the offset transmit frequency. Thus the repeater input frequency may be checked.

8. OFFSET WRITE SWITCH

While holding this switch, the offset frequency is displayed on the FREQUENCY DISPLAY. This offset frequency can be changed by pushing the -DUPLEX SWITCH, +DUPLEX SWITCH or 1MHz UP SWITCH. Each push of the -DUPLEX SWITCH, decreases the offset frequency 100kHz, the +DUPLEX SWITCH increases 100kHz and the 1MHz UP SWITCH increases 1MHz.

9. -DUPLEX SWITCH

By pushing this switch, the set is in the duplex mode and the transmit frequency will be set 5.0MHz (IC-47E: 7.6MHz) below the receive frequency. This can be changed to any 100kHz step in-band frequency. To turn off the duplex, push this switch again.

10. +DUPLEX SWITCH

By pushing this switch, the set is in the duplex mode and the transmit frequency will be set 5.0MHz (IC-47E: 7.6MHz) above the receive frequency. This can be changed to any 100kHz step in-band frequency. To turn off the duplex, push this switch again.

11. SPEECH SYNTHESIZER SWITCH

Each push turns on the optional speech synthesizer which verbally announces the displayed frequency in English.

12. PRIORITY SWITCH

Turns the priority function ON and OFF.

During a QSO or when receiving on a frequency with a VFO, if you would like to monitor your favorite frequency or a calling frequency, select the memory channel number containing that frequency, and push the PRIORITY SWITCH. The receiving frequency will go to the channel for a moment every five seconds.

When receiving on a frequency with a memory channel, by pushing the PRIORITY SWITCH, the receiving frequency will go to the VFO frequency previously set for a moment every five seconds.

13. SQUELCH CONTROL

Turning this control clockwise sets the squelch threshold higher. To turn OFF the squelch function, turn this control completely counterclockwise.

14. VOLUME CONTROL and POWER SWITCH

When the control is turned completely counterclockwise, the power is OFF. By turning the control clockwise beyond the "click", the unit is turned ON and the audio level increases by further rotating it clockwise.

15. MIC CONNECTOR

Connect the supplied microphone to this jack.

16. RF POWER SWITCH

Selects the RF output power HIGH or LOW. When the switch is out, the output power is HIGH, 25 watts. When the switch is pushed in, the output power is LOW, 5 watts.

17. TONE SELECT SWITCH (IC-47A)

While holding this switch, the subaudible tone number is displayed on the FREQUENCY DISPLAY and the TONE INDICATOR is illuminated, and by turning the TUNING CONTROL, the tone number can be changed.

TONE SWITCH (IC-47E)

When the optional CTCSS unit is installed, by pushing this switch, the CTCSS unit will be activated, and a specified subaudible tone can be transmitted in the duplex mode.

18. FREQUENCY DISPLAY

The four large 7 segment LED's represent the digits between 10MHz and 10kHz and small "50" for 5kHz of the operating frequency. (IC-47E also shows "25" for 2.5kHz and "75" for 7.5kHz.) The frequency indicated is the carrier frequency.

19. MEMORY CHANNEL DISPLAY

Shows that the set is in the memory channel mode or not, and the selected memory channel number. When the set is in the memory channel mode, the letter "M" is displayed here.

20. S/RF METER

Indicates S-unit and RF output level with seven LED's in line. The numbers on the S-meter represent S1 through S9 and 60dB over S9. The RF output level meter functions only as a relative output meter and does not indicate the wattage. These functions are switched automatically when T/R switching is made.

21. VFO INDICATOR

When the VFO A is selected, this indicator illuminates.

22. RECEIVE INDICATOR

Illuminates when the squelch is opened in the receive mode.

23. TRANSMIT INDICATOR

Illuminates in the transmit mode.

24. DUPLEX INDICATOR

Illuminates when the set is in the duplex mode. "DUP—" shows the transmit frequency will be below the receive frequency, and "DUP+" shows the transmit frequency will be above the receive frequency.


25. PRIORITY INDICATOR

The indicator lights when the function is activated.

26. TONE INDICATOR (IC-47A only)

Illuminates when the subaudible tone encoder is activated. When the selected tone number is "00", the tone encoder is turned off and this indicator does not illuminate.

REAR PANEL

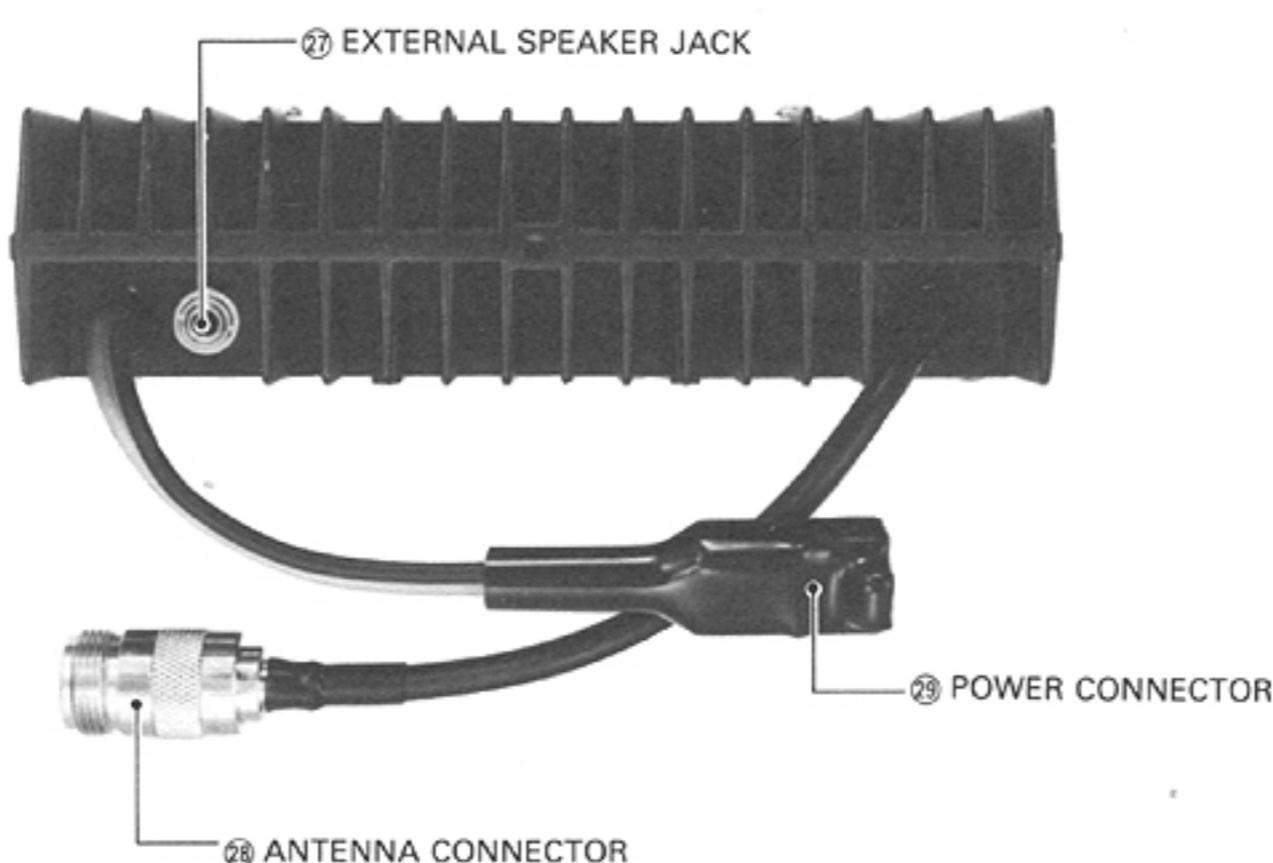

27. EXTERNAL SPEAKER JACK

When an external speaker is used, connect it to this jack. Use a speaker with an impedance of 4 ~ 8 ohms. When the external speaker is connected, the built-in speaker does not function.


28. ANTENNA CONNECTOR

This is used to connect an antenna to the set. The connector's impedance is 50 ohms and it mates with an N (UG-21/U) connector.

29. POWER CONNECTOR

Connect the supplied power cord to this connector.

UNDER THE ACCESS COVER

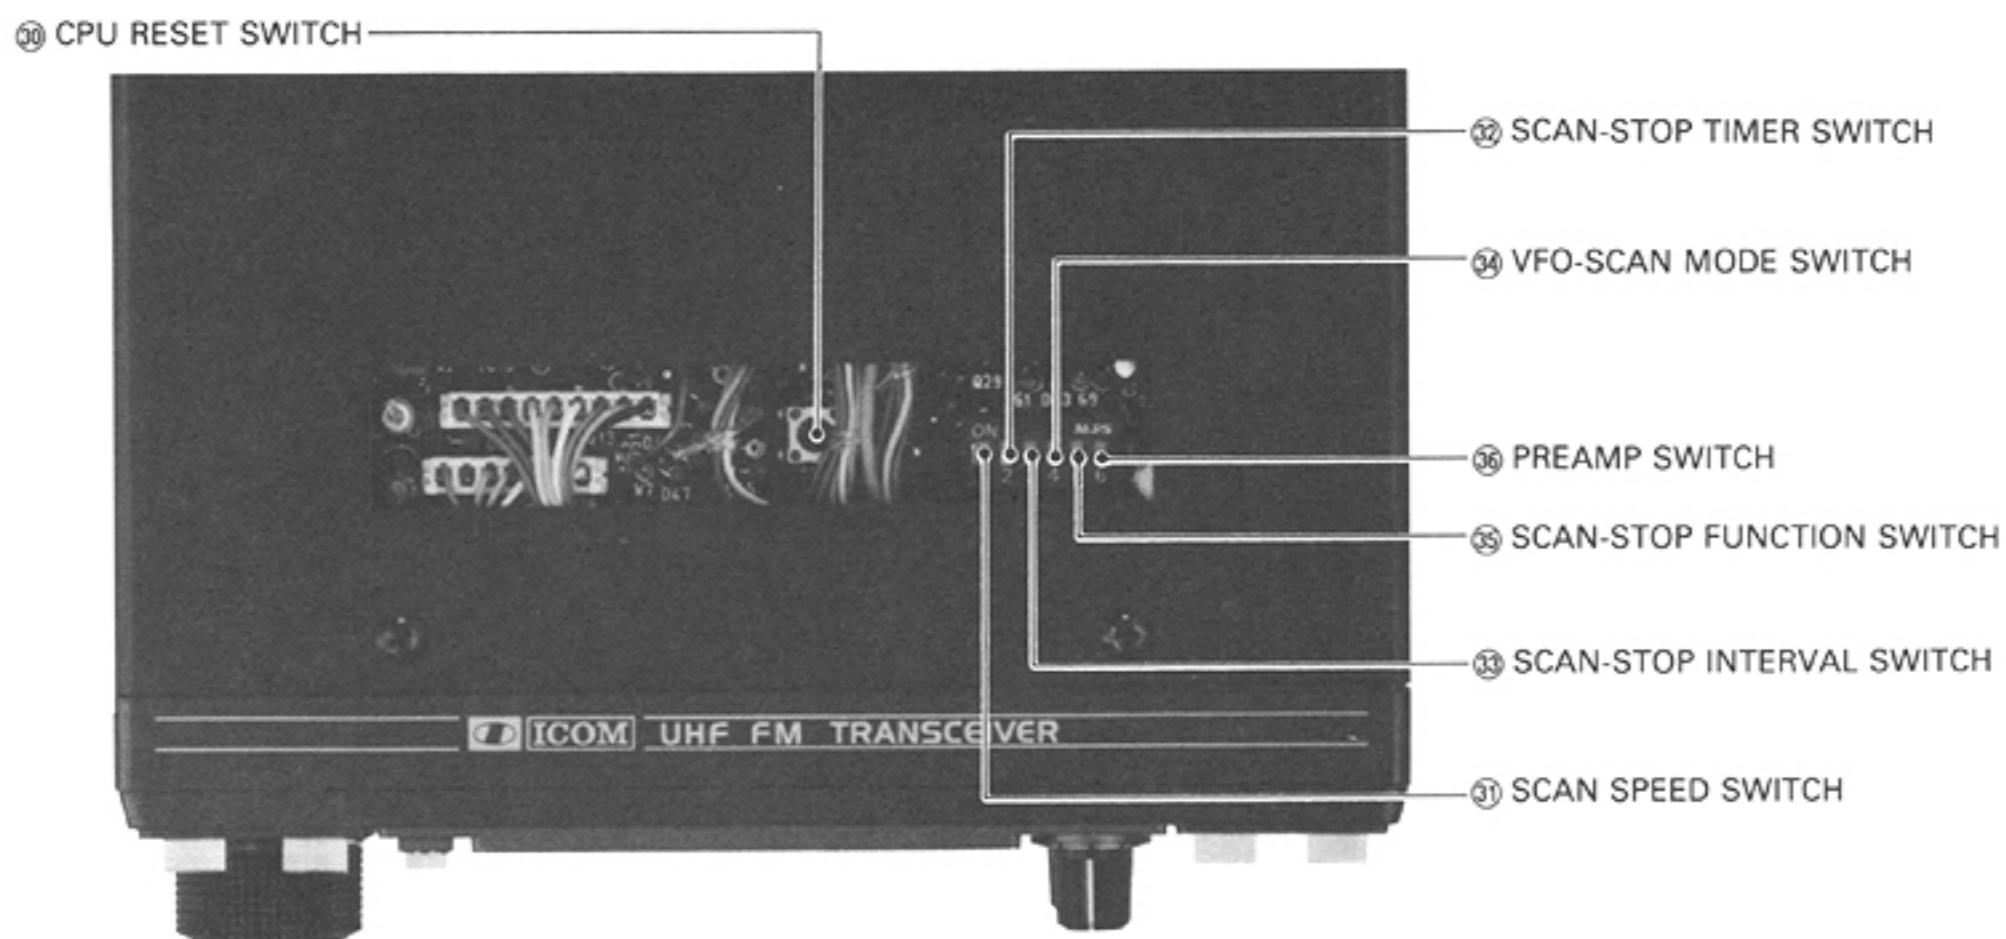

30. CPU RESET SWITCH

Resets the CPU into the initial condition. If the CPU seems to malfunction, push this switch while the power is ON, and the CPU will be reset.

31. SCAN SPEED SWITCH

Switches the scanning speed in any scan mode. Place the switch to the desired speed; "FAST" or "SLOW".

32. SCAN-STOP TIMER SWITCH

Switches the scan-stop interval function ON and OFF.

33. SCAN-STOP INTERVAL SWITCH

Switches the interval of the scan auto-stopping time. Place the switch to the desired interval; "LONG" for about 9 seconds or "SHORT" for about 3 seconds.

34. VFO-SCAN MODE SWITCH

Switches the VFO-scan function to either the programmed scan (PS) or the full range scan (FS).

35. SCAN-STOP FUNCTION SWITCH

Switches the scan-stop function to either stop on a busy channel or stop on an empty channel.

36. PREAMP SWITCH

Switches an external preamplifier such as optional mast-mounting preamplifier, IC-AG1, ON and OFF.

SECTION 3 CIRCUIT DESCRIPTION

3-1 RECEIVER CIRCUITS

3-1-1 LOW-PASS FILTER AND ANTENNA SWITCHING CIRCUIT

An incoming signal from the antenna connector is first fed to the Low-pass Filter consisting of C19 ~ C21, L4 and L5, and the high-pass filter consisting of C16 ~ C18 and L3 in the PA unit (RF Power Amplifier unit), and applied to the Antenna Switching Circuit consisting of D1 and D3. Switching diodes D1 and D2 turn OFF when in the receive mode and provide isolation from the transmitter. The incoming signal passes to the RF amplifier on the RF board.

3-1-2 RF AMPLIFIER AND FIRST MIXER

The signal from the switching circuit is fed to the RF amplifier Q1 and Q2 via the antenna tuning coil L1. The amplified signal passes to gate 1 of the first Mixer Q3 through the tuning circuits L2 ~ L5. Those circuits reduce interference and intermodulation from out-of-band signals.

The PLL (Phase Locked Loop) circuit supplies a local oscillator signal to gate 2 of Q3 to convert the RF signal into the first IF (21.8MHz). This produced signal passes to the IF circuit from the drain of Q3.

3-1-3 IF CIRCUIT

The first IF signal from Q3 is fed into the matched-pair crystal filter F11. The filtered signal passes to IF amplifier Q4. After, IC1 receives the amplified IF signal.

IC1 consists of a local oscillator, mixer, limiter amplifier, FM-demodulator, active filter and Squelch circuit. IC1 generates the 21.345MHz second local oscillator frequency. This signal and the first IF signal are mixed to produce the 455kHz second IF. The second IF exits from IC1 pin 3 and passes to a highly selective external ceramic filter F12. The filtered signal feeds back to IC1 pin 5 to be amplified and demodulated. The signal from the limiter amplifier passes internally to the demodulator, as well as to pin 7 which loops to pin 8 through the resonator crystal X2. The demodulated signal exits from IC1 pin 9.

3-1-4 AF AMPLIFIER, SQUELCH CIRCUIT AND RF METER CIRCUIT

The demodulated signal from IC1 pin 9 is fed to an integrating circuit (R29 and C80) to provide 6dB/octave de-emphasis. The de-emphasized signal is fed to the pre-amplifiers Q10 and Q11, and the AF amplifier IC4 via the VOLUME control. IC4 supplies sufficient drive for the speaker. Noise components from IC1 pin 9 feed through C37 and the SQUELCH control, and back to the IC1 active filter. This circuit filters the 20kHz noise signal and outputs it to pin 11. D4 rectifies the noise signal. The rectified DC voltage is fed to Q5. When Q5 is turned ON by the noise signal, the audio pre-amplifier Q10 cuts OFF since the base bias drops to zero volts. IC2a and b prevents malfunction of the SQUELCH circuit from adjacent channel signals. A sample of the second IF signal is fed into the meter amplifier IC6 and rectified by D9. This DC voltage is decoded by IC1 to drive the LED meter circuit in the Display unit.

3-2 TRANSMITTER CIRCUITS

3-2-1 MIC AMPLIFIER CIRCUIT

The microphone signal is fed into the amplifier Q12 on the Main board. This amplifier has a 6dB/octave response between 300Hz and 3kHz due to C110 and R83. IC7a is a limiter amplifier with R88 for gain adjustment. The rectangular waveform at the limiter amplifier output contains many harmonics. The harmonics which are 3kHz or higher are eliminated by the active low-pass filter IC7b. This filtered audio signal modulates the frequency of the VCO (Voltage Controlled Oscillator) to produce an FM signal. R94 is a variable resistor for adjusting the deviation.

3-2-2 MULTIPLIER AND DRIVER CIRCUITS

The VCO oscillates at one-half of the transmit frequency. Multiplier Q214 doubles the VCO signal to obtain the transmit frequency. This signal feeds through band-pass filter L209 into the driver amplifier Q8, and Q7 and Q6 on the Main board. The driver amplifies it to a suitable level for the power amplifier.

3-2-3 POWER AMPLIFIER CIRCUIT

The signal from the driver on the Main board is amplified by IC1 on the PA board to obtain 25 watts RF output. IC1 is a hybrid IC consisting of a two-stage RF power amplifier. The output signal of IC1 is fed to the antenna terminal through the T/R switching diode D1, the high-pass filter and the low-pass filter.

3-2-4 ALC (Automatic Level Control) AND RF POWER METER CIRCUITS


This circuit stabilizes the output power, even when the power supply voltage or the antenna load is fluctuating. The variation of the current of the power amplifier at R1 and R2 is amplified by the differential amplifier IC3 on the Main board. The output voltage is fed to Q1. Q1 controls the current to the module's driver stage to maintain constant RF power. The output power can be adjusted by R74 (High power position) and R71 (Low power position). A sample of the RF output power is fed to D2 and rectified, then fed to the indicator driver IC through the level adjust resistor R63.

3-3 VOLTAGE REGULATION AND RECEIVE-TRANSMIT SWITCH CIRCUITS

IC5 is a voltage regulator which has three regulators and a receive-transmit control terminal. A high level voltage applied to the control terminal pin 5 causes 8 volts to feed to the receive circuit from pin 6. In the transmit mode, the voltage at the control terminal is changed to zero volts, in which case, 8 volts feeds to the transmit circuit from pin 8. Pin 1 is the common output of the 8 volt regulator. Simultaneously, Q9 turns ON which supplies +8 volts to the driver amplifier circuit.

3-4 PLL (Phase Locked Loop) CIRCUIT

The PLL of this transceiver is a down-mixed loop that generates a frequency which is one-half of the required frequency, and it is shifted in 5kHz steps.

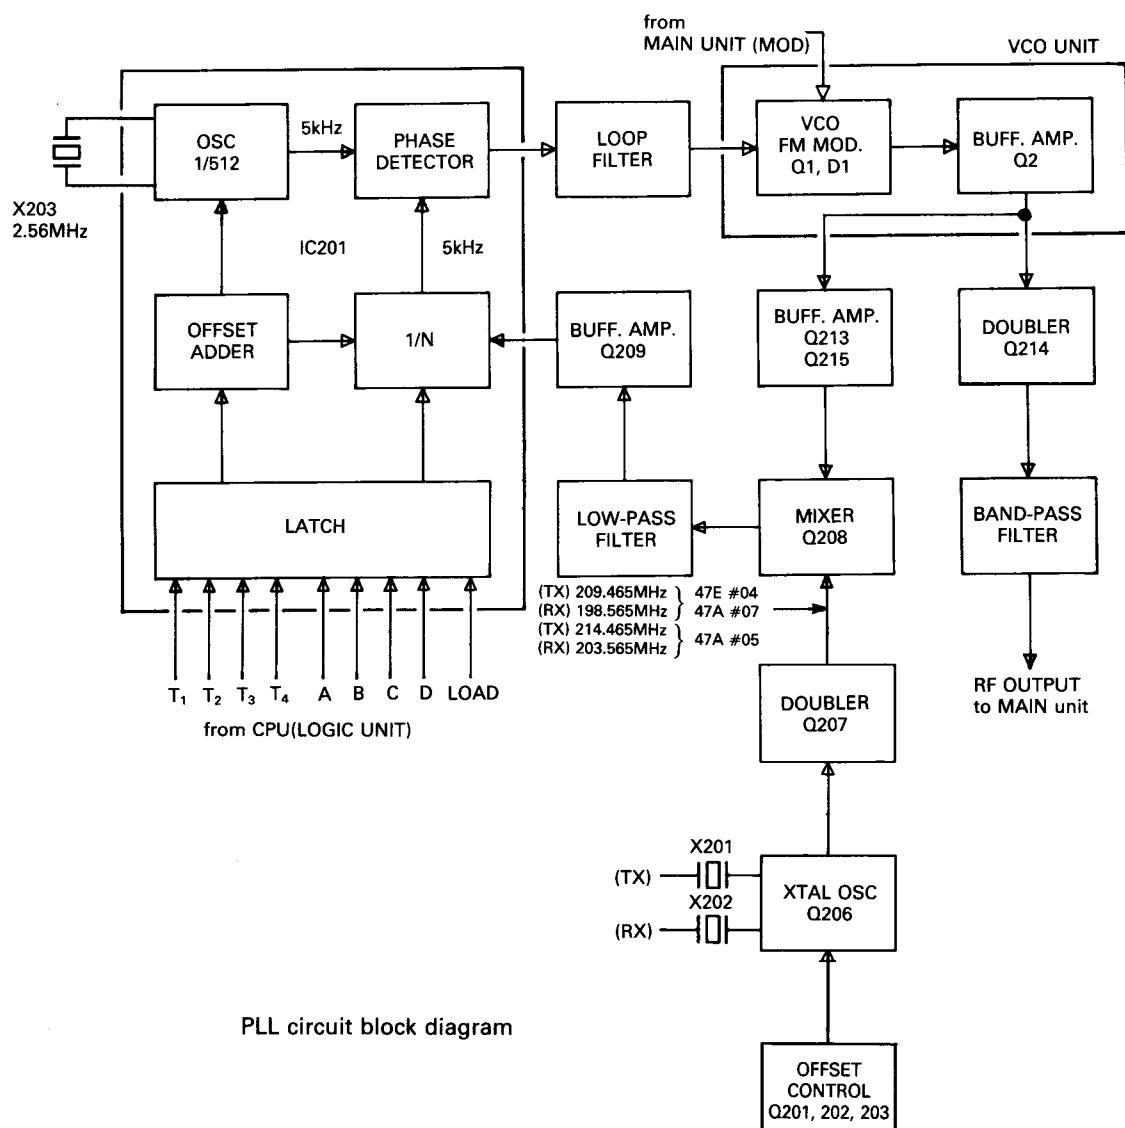


3-4-1 LOCAL OSCILLATOR CIRCUIT


The local oscillator contains two crystal units for receive and transmit. In the transmit mode, D209 receives a high level voltage from the logic circuit. This voltage turns Q204 OFF then Q205 ON. Q205 forward biases D211 which reverse biases D212. The frequency of this oscillator is determined by L201, C201, C202 and the capacitance of the varactor diode D207. The offset frequency is determined by the capacitance of D207. The relation is shown in Fig 1. In the receive mode, X202 is selected by the same method. Q206 oscillates with crystal X201 or X202 and the tripled frequency feeds through the resonant circuits L203 ~ L205 into the PLL mixer (Q208).

(EXAMPLE)


Transmit frequency 435.0000MHz (offset 0kHz)

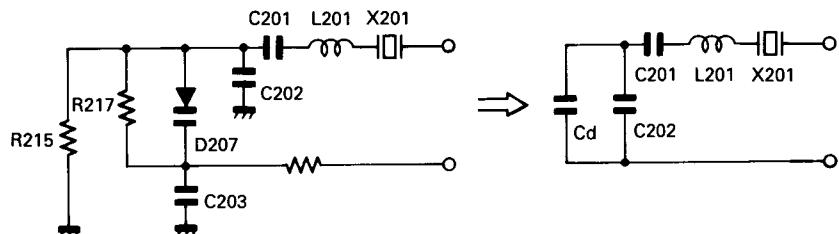

Transmit frequency 435.0125MHz (offset 2.5kHz)

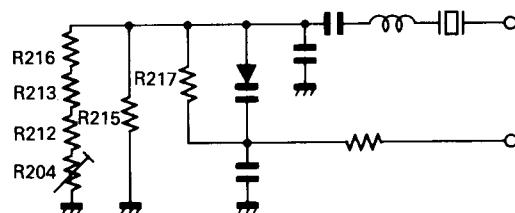

Transmit frequency 435.0250MHz (offset 5.0kHz)

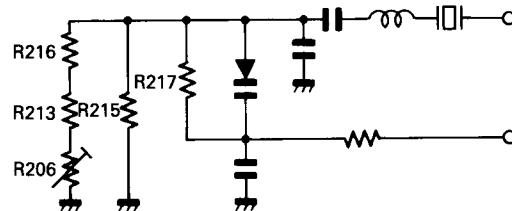

Transmit frequency 435.0375MHz (offset 7.5kHz)

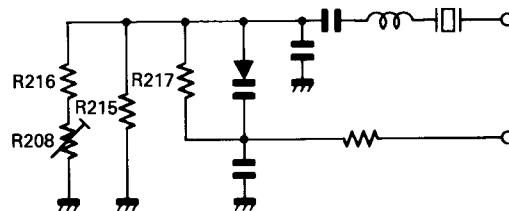


Fig. 1 PLL local oscillator

3-4-2 MIXER, LOW-PASS FILTER AND AMPLIFIER CIRCUITS

The output signal from the local oscillator circuit and the VCO signal from buffer amplifier Q213 combine in mixer Q208. The low-pass circuit of L206, C219 and C220 filters the output signal from Q208, and passes only the difference frequency produced by the mixer to Q209 for amplification to the correct drive level for the programmable divider.

3-4-3 REFERENCE FREQUENCY GENERATOR, PROGRAMMABLE DIVIDER, PHASE DETECTOR AND LOOP FILTER CIRCUITS

IC1 consists of the reference frequency generator, programmable divider and phase detector. The reference frequency generator oscillates at 2.56MHz, which is divided by 512. The resulting 5kHz reference frequency passes to the phase detector. The input signal at pin 12 of IC1 from the PLL mixer is divided by the "N" number. The programmable divider is also called the 1/N counter.

The relation between the "N" and the display frequency is as follows;

Display frequency F (MHz)	Input frequency to Pin 12 Fin=F/2-Flocal	CPU Output data	"N" (NOTE 1)	Fin/"N"
430.00	5.535	1000	1107	
430.01	5.540	1001	1108	
434.99	8.030	1499	1606	
435.00	8.035	1500	1607	
435.01	8.040	1501	1608	
439.00	10.035	1900	2007	
				5kHz
				IC-47E #04 IC-47A #07 (F _{LO} : 209.465MHz)


Display frequency F (MHz)	Input frequency to Pin 12 Fin=F/2-Flocal	CPU Output data	"N" (NOTE 1)	Fin/"N"
440.00	5.535	1000	1107	
440.01	5.540	1001	1108	
444.99	8.030	1499	1606	
445.00	8.035	1500	1607	
445.01	8.040	1501	1608	
449.00	10.035	1900	2007	
				5kHz
				IC-47A #05 (F _{LO} : 214.465MHz)

NOTE 1) IC201 has a +107 offset number, therefore, this number is bigger than the "N" by 107.

The frequency data is output from D0 ~ D3 of the CPU to IC201 (terminals A ~ D) of the PLL. At the same time, the digital data to the PLL is output from AD0 ~ AD3 of the CPU and input to T1 ~ T4 of PLL IC. Load pulses are consecutively sent from PL2 of the CPU, and data is selected according to its timing as shown in the chart below:

EXAMPLE: Display frequency: 435.27MHz (IC-47E #04, IC-47A #07)
445.27MHz (IC-47A #05)

CPU data: 1527

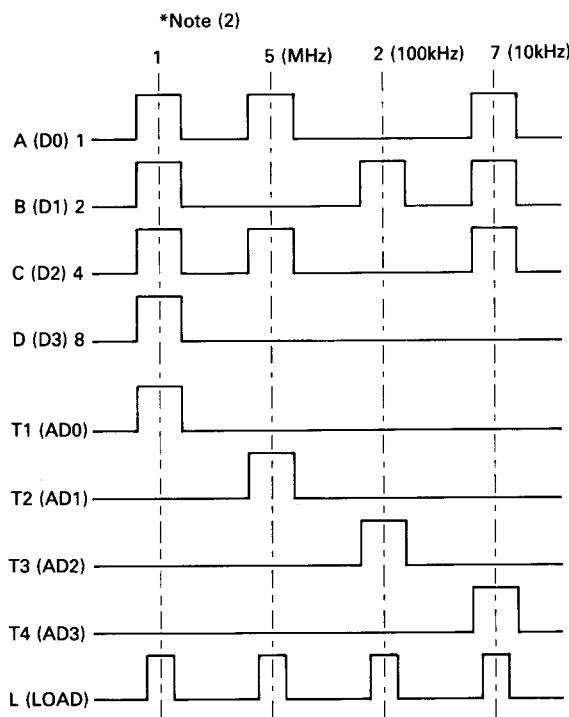

Note (2). All High data (A ~ D) means exceptionally 1 and initialization.

The digital phase detector in IC201 detects the phase difference of the programmable divider output and the reference frequency, and proportionately puts out a positive/negative pulse stream at pin 16. If there is a phase difference between the two input signals, pin 18 changes to ground level. The loop filter, consisting of R253, R256, R257, C244 and C245, converts the pulse stream from pin 16 into a DC voltage and determines the response time of the whole loop. When the frequency deviation of the VCO is very large, R256 is shunted to increase the response time of Q211 and Q212. The output signal is fed to varactor diode D1 of the VCO circuit as the control for the VCO frequency.

3-4-4 VCO AND FM MODULATION CIRCUITS

The VCO is a Clapp oscillator circuit, and oscillates in the 200 ~ 220MHz range. The frequency is controlled by the DC voltage from the loop filter. The D2 anode receives a positive voltage via R3 when the radio is in the receive mode. Then, D2 turns ON and inserts C7. Thus, the free-run frequency of the VCO decreases. In the transmit mode, D3 turns OFF. Thus, the free-run frequency of the VCO increases. The audio signal from the microphone is fed to the gate of Q1 to produce an FM signal. The VCO signal is amplified and doubled by Q214 and fed to the driver amplifier.

3-5 LOGIC CIRCUITS

This unit controls the frequency display, the operating mode display, etc., and is designed for high speed operation using a CMOS 4-bit CPU.

3-5-1 CPU


IC6 is the CPU. X IN and X OUT are the clock terminals for this CPU; input and output respectively for the 5MHz ceramic crystal oscillator. The CPU has other input and output ports with each having a specific function:

MICROPROCESSOR (IC6) EXPLANATION

Pin No.	Item	Function	Pin No.	Item	Function
1	K1	Not connected	22	MR	Memory/VFO output
2	K2	Not connected	23	MT	Mute signal output
3	K3	Not connected	24	RE1	Reset signal output
4	K4	Digit data output (10kHz)	25	CEN	Not connected
5	K5	Digit data output (100kHz)	26	A0	Data input (BCD 1)
6	K6	Digit data output (1MHz)	27	A1	Data input (BCD 2)
7	K7	Digit data output (10MHz)	28	A2	Data input (BCD 4)
8	K8	Digit data output (Memo. ch.)	29	A3	Data input (BCD 8)
9	D0	Data output (BCD 1)	30	Vss	GND
10	D1	Data output (BCD 2)	31	X IN	Clock
11	D2	Data output (BCD 4)	32	X OUT	Clock
12	D3	Data output (BCD 8)	33	RESET	Reset signal input
13	B0	Initial data input (BCD 1)	34	HOLD	Hold signal input
14	B1	Initial data input (BCD 2)	35	SCAN	Scan S/S output
15	B2	Initial data input (BCD 4)	36	DC	Display latch output
16	B3	Initial data input (BCD 8)	37	INT1	Rotary encoder signal input
17	AD0	Address data output (BCD 1)	38	DL	Data latch output
18	AD1	Address data output (BCD 2)	39	PL1	Not connected
19	AD2	Address data output (BCD 4)	40	PL2	PLL load output
20	AD3	Address data output (BCD 8)	41	PL3	Not connected
21	Vss	GND	42	V _{DD}	+5V input

3-5-2 CPU CONTROL CIRCUIT

A0 ~ A3 are the CPU data input terminals. To increase the number of available functions from the CPU, the outputs D0 ~ D3 pass to IC7 where Y0 ~ Y9 are generated and fed back to A0 ~ A3 through the matrix circuit consisting of transistors and diodes.

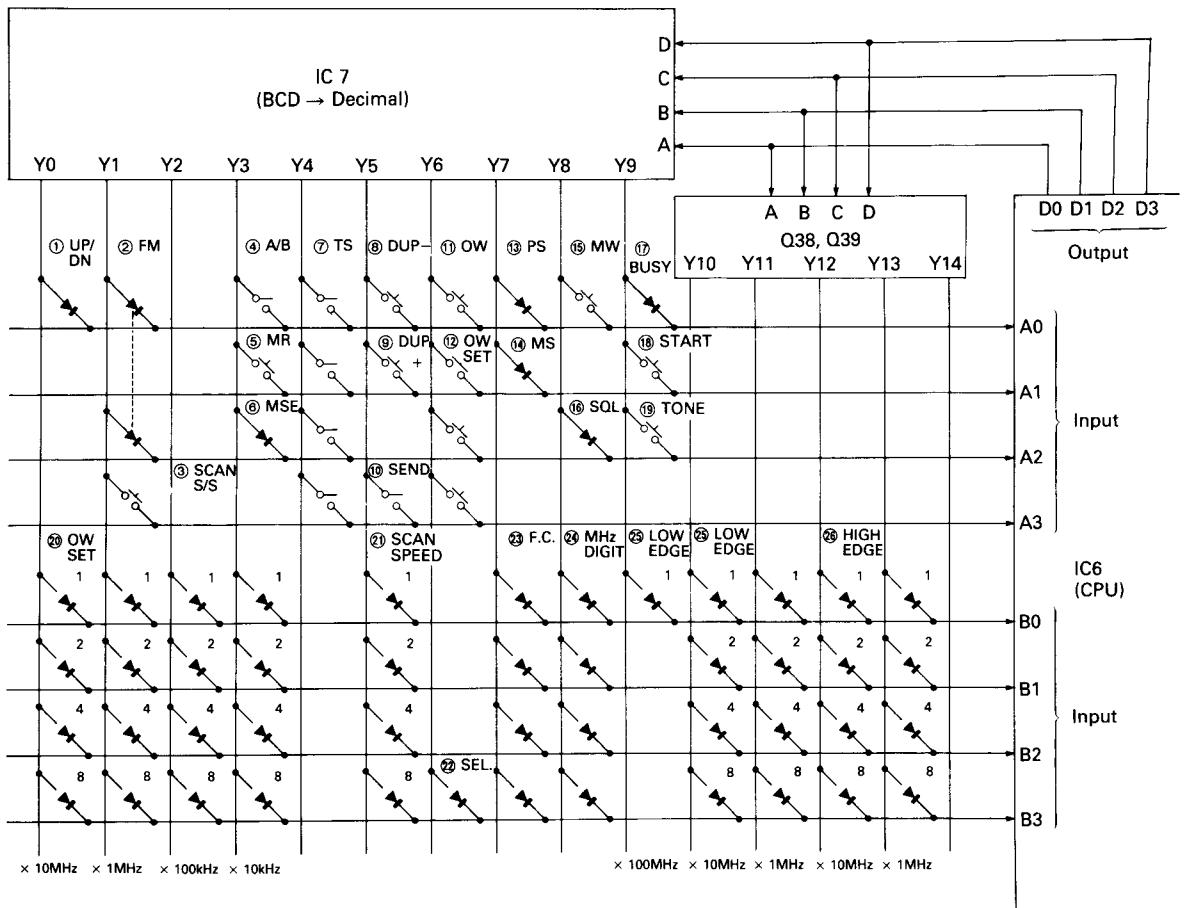

① Y0 → A0 (Up/Down) (IC4a, D3)

When this flow occurs, the operating frequency is increased by the pulse stream from the rotary encoder. When this flow does not occur the operating frequency is decreased.

② Y1 → A0 and A2 (Mode FM) (D33, D34)

This flow occurs when the mode is set to FM. The display shows the carrier frequency.

③ Y1 → A3 (Scan Start/Stop) (S/S Switch)

In the VFO mode, when the S/S switch is pressed, the operating frequency scans between frequencies written into memory channels 0 and 1. In the memory mode, the operating frequency scans through the memory channels.

④ Y3 → A1 (VFO A/B) (A/B Switch)

This flow occurs when the A/B switch is set to "B" position, and the unit operates at the frequency stored by "B" VFO. When the A/B switch is set to "A" position, the Y3 signal is not fed to A0, and the unit operates at the frequency stored by "A" VFO.

⑤ Y3 → A1 (Memory Read) (Q8, Q9)

This flow occurs when the VFO/MEMORY switch is pushed, and the operating mode is changed alternately between VFO and MEMORY CHANNEL operation.

⑥ Y3 → A2 (Mode Selector) (Q6, D7)

In the VFO mode, the data from the rotary encoder (tuning control) is fed into the "INT1" terminal of the CPU as frequency data. When the Y3 signal is not fed to A2, the data fed into "INT1" becomes memory channel data.

⑦ Y4 → A0 ~ A3 (Tuning Rate (TS) Switch)

This flow occurs when terminals A0 ~ A3 are programmed as in the table shown below, and the operating frequency shifts upwards or downwards at the indicated rate when the tuning control is rotated.

Stepping frequency	A0	A1	A2	A3
1kHz	0	0	0	0
10Hz	1	0	0	0
100Hz	0	1	0	0
20Hz	1	1	0	0
5kHz	0	0	1	0
15kHz	1	0	1	0
20kHz	0	1	1	0
12.5kHz	1	1	1	0
10kHz	0	0	0	1
25kHz	1	0	0	1
40kHz	0	1	0	1
150kHz	1	1	0	1
75kHz	0	0	1	1
1MHz	1	0	1	1

When the switch is pushed, Y4 is connected to A2 (IC-47E: to A0, A1 and A2), and the frequency changes in 5kHz (12.5kHz) steps when turning the tuning control. When the switch is set to the out position, Y4 is connected to A0 and A3, and the frequency changes in 25kHz steps.

⑧ Y5 → A0 (–Duplex) (Q22, Q25, D27)

This flow occurs when the OFFSET switch is set at DUP–, and the transmit frequency becomes lower than the receive frequency by an amount equal to the programmed offset frequency.

⑨ Y5 → A1 (+Duplex) (Q21, Q25, D26)

This flow occurs when the OFFSET switch is set at DUP+, and the transmit frequency becomes higher than the receive frequency by an amount equal to the programmed offset frequency.

⑩ Y1 → A3 (SEND) (Q14, D14)

This flow occurs when the PTT switch is pushed, and the CPU is in transmit mode.

⑪ Y6 → A0 (Offset Write) (Q23, D28)

This flow occurs when the OW switch is pushed, and the CPU is in the Offset Write mode.

⑫ Y6 → A1 ~ A3 (Offset Frequency Set) (Q19, Q20, Q24)

While the OW function is activated, pushing the DUP–, DUP+ or 1M UP switch programs the offset frequency as shown in the table below.

Offset Frequency	A1	A2	A3
+ 1MHz	1	0	0
+ 10MHz	0	1	0
+ 100kHz	1	1	0
– 1MHz	0	0	1
– 10MHz	1	0	1
– 100kHz	0	1	1

⑬ Y7 → A0 (Program Scan) (D36, R61)

This flow occurs when the S/S switch is pressed, and the operating frequency scans between frequencies written into memory channels 1 and 2. When the VFO-SCAN mode switch on the logic board is turned off, the operating frequency scans the entire band after the S/S switch is pressed.

⑭ Y7 → A1 (Memory Scan) (D35, R62)

When this flow occurs, the operating frequency scans through the memory channels.

⑯ Y8 → A0 (Memory Write) (Q15, D15)

This flow occurs when the MW switch is pushed. The operating frequency, duplex/simplex mode, offset frequency and subaudible tone frequency are stored in the CPU memory.

⑰ Y8 → A2 (Scan stop by SQL) (Q26, D30)

This flow occurs when scanning is halted by a signal opening the squelch. The flow stops when the scan resumes.

⑱ Y9 → A0 (Busy) (Q28, D32)

This flow occurs when the speech synthesizer (optional unit) functions, indicating the CPU is busy. The CPU does not accept any data at this time.

⑲ Y9 → A1 (Start) (Speech Switch)

This flow occurs when the SPEECH switch is pushed, and the speech synthesizer starts to function.

⑳ Y9 → A2 (Tone) (Tone switch)

This flow occurs when the TONE switch is pushed, and the tone generator starts to function.

㉑ Y0 ~ Y3 → B0 ~ B3 (Duplex Offset Frequency)

The initial offset frequency is determined by the location of diodes on the Matrix board. This programmed offset frequency is used when the power supply is first applied to the transceiver, or after the CPU is reset. The factory programming is 600kHz.

㉒ Y5 → B0 ~ B3 (Scanning Speed)

Diodes placed on the Matrix board determine the scanning speed as shown below.

Scanning speed	B0	B1	B2	B3
40m sec.	1	0	0	0
60m sec.	0	1	0	0
80m sec.	1	1	0	0
100m sec.	0	0	1	0
200m sec.	1	0	1	0
300m sec.	0	1	1	0
400m sec.	1	1	1	0
500m sec.	0	0	0	1
600m sec.	1	0	0	1
700m sec.	0	1	0	1
800m sec.	1	1	0	1
900m sec.	0	0	1	1
1.0sec.	1	0	1	1
1.2sec.	0	1	1	1
1.6sec.	1	1	1	1

㉓ Y6 → B3 (Selector)

This signal's purpose is to select the information as described in ㉔ or the information in ㉕ and ㉖ below.

㉔ Y7 → B0 ~ B3 (Frequency Coverage)

This is a matrix used to determine the frequency coverage.

Range (MHz)	B0	B1	B2	B3
430.000 ~ 439.999	0	1	1	0
432.000 ~ 433.499	1	1	1	0
430.000 ~ 449.999	0	0	0	1
432.000 ~ 437.999	1	0	0	1
NOTE	0	0	1	1

NOTE) This is to select the information as described in ㉔ or the information in ㉕ and ㉖ below.

④ Y8 → B0 ~ B3 (MHz Digit)

This matrix is to determine the value of the MHz digit on the display.

Display number	B0	B1	B2	B3
1	1	0	0	0
2	0	1	0	0
3	1	1	0	0
4	0	0	1	0
5	1	0	1	0
6	0	1	1	0
7	1	1	1	0
8	0	0	0	1
9	1	0	0	1

⑤ Y9 → B0, Y10, Y11 → B0 ~ B3 (Low Edge Frequency)


This matrix is to determine the low edge of the coverage.

⑥ Y13, Y14 → B0 ~ B3 (High Edge Frequency)

This matrix is to determine the high edge of the coverage.

3-5-3 CLOCK PULSE GENERATOR CIRCUIT

The clock pulses for changing the frequency are generated by a rotary encoder which is connected directly to the shaft of the tuning control. The rotary encoder supplies two signals which are 90 degrees out of phase. The relation between these two signals, Y0, A0 and INT1 are shown below;

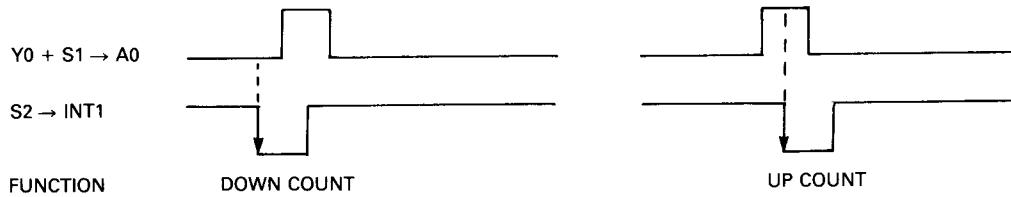

The CPU counts the leading edge of S2 and, at the same time, determines the tuning direction with the A0 level. In the memory mode, the MSE matrix switch is closed by Q6 and D7, and the memory channels are scanned by these two pulse streams.

3-5-4 MIC UP/DOWN (MUD) CONTROL CIRCUIT

When the UP switch on the microphone is pressed, the MUD terminal is grounded (0V) and the multivibrator, consisting of IC2c and IC2d, starts oscillating. This signal is fed to "INT1". The ground voltage is applied to R43, Q18 is turned OFF and Pin ⑨ of IC4 is "H" level. Thus, Y0 is connected to A0. The CPU counts the multivibrator pulses while shifting the operating frequency upwards. When the DOWN switch is pressed, the MUD terminal is grounded through a 470 ohm resistor installed inside the microphone.

The voltage divided by R40 and the 470 ohm resistor, about 1.9V, is applied to R43. Q18 turns ON, and the CPU counts the multivibrator pulses while shifting the operating frequency downwards.

3-5-5 SCANNING CONTROL CIRCUIT

The squelch signal from the Main unit is fed to the Schmitt trigger circuit consisting of IC3b and IC3c. This circuit controls Q26, which turns the SQL (Y8 → A2) circuit ON or OFF. Thus, the scanning is stopped (or started).

3-5-6 SCAN CIRCUIT

In the memory scan mode, the flow (Y7 → A1) occurs through R62 and D36. At the same time, Q29 is turned ON by the "H" level at the MR terminal, and the flow (Y7 → A0) does not occur. Thus, the program scan does not function. In the program scan mode, MR is "L" level, so the flow (Y7 → A1) does not occur, but the flow (Y7 → A0) does.

3-5-7 PRIORITY CIRCUIT

IC1b is latched by the priority switch, which controls the oscillator consisting of IC2a, and IC2b. The output signal from the oscillator is shaped by IC3a, and is fed to the CPU INPUT MATRIX circuit ($Y_3 \rightarrow A_1$). The memory and VFO frequencies are changed alternately by the signal.

3-5-8 PTT CIRCUIT

Q12 turns ON when the PTT switch is pressed. The voltage at the collector is ground level. This voltage is fed to the Main and PLL boards to select the transmit mode. At the same time, Q14 connects the SEND ($Y_5 \rightarrow A_3$) circuit to the CPU to place it in the transmit mode.

3-5-9 TONE GENERATOR CIRCUIT

IC13 is the tone generator which has its frequency controlled by crystal X2. Pushing the TONE switch, causes the frequency display to show a tone number instead of the operating frequency. While holding the TONE switch, rotating the tuning control changes the tone number. The required subaudible tone frequencies can be set by selecting the correct tone numbers.

Tone No.	Frequency	Tone No.	Frequency	Tone No.	Frequency
1	67.0Hz	22	141.3Hz	43	900.0Hz
2	71.9	23	146.2	44	1000.0
3	74.4	24	151.4	45	1600.0
4	77.0	25	156.7	46	1700.0
5	79.7	26	162.2	47	1750.0
6	82.5	27	167.9	48	1800.0
7	85.4	28	173.8	49	1300.0
8	88.5	29	179.9	50	2000.0
9	91.5	30	186.2	51	2200.0
10	94.8	31	192.8	52	2975.0
11	97.4	32	203.5	53	2550.0
12	100.0	33	210.7	54	2295.0
13	103.5	34	218.1	55	2125.0
14	107.2	35	225.7	56	—
15	110.9	36	233.6	57	—
16	114.8	37	241.8	58	—
17	118.8	38	250.3	59	—
18	123.0	39	500.0	60	—
19	127.3	40	600.0	61	—
20	131.8	41	700.0	62	—
21	136.5	42	800.0	63	—

3-5-10 VOLTAGE REGULATOR AND MEMORY BACKUP CIRCUITS


The supply voltage is regulated to 6.2V by IC5, and is divided into three parts designated M, S and D supplies. These supplies and the backup battery are distributed to the necessary circuits.


Conditions		M	S	D	BT1
Power supply code	Connected	○	—	—	—
	Not Connected	—	—	—	○
Power switch	ON	○	○	○	—
	OFF	○	—	—	—

NOTE) ○: State of function

While the power switch is turned on, a 6.2V regulated voltage is applied to the CPU. Thus the CPU works normally. When this regulated voltage drops or the power switch is turned off, the CPU enters the HALT condition. At this time, the CPU stops its clock oscillation and all functions. However, a 3V memory backup voltage from the backup battery BT1 is applied to the CPU through D41, and the CPU stores all current data such as the operating frequency and all memorized channels. Under normal conditions, the backup battery has a life of more than 5 years.


SECTION 4 BLOCK DIAGRAM

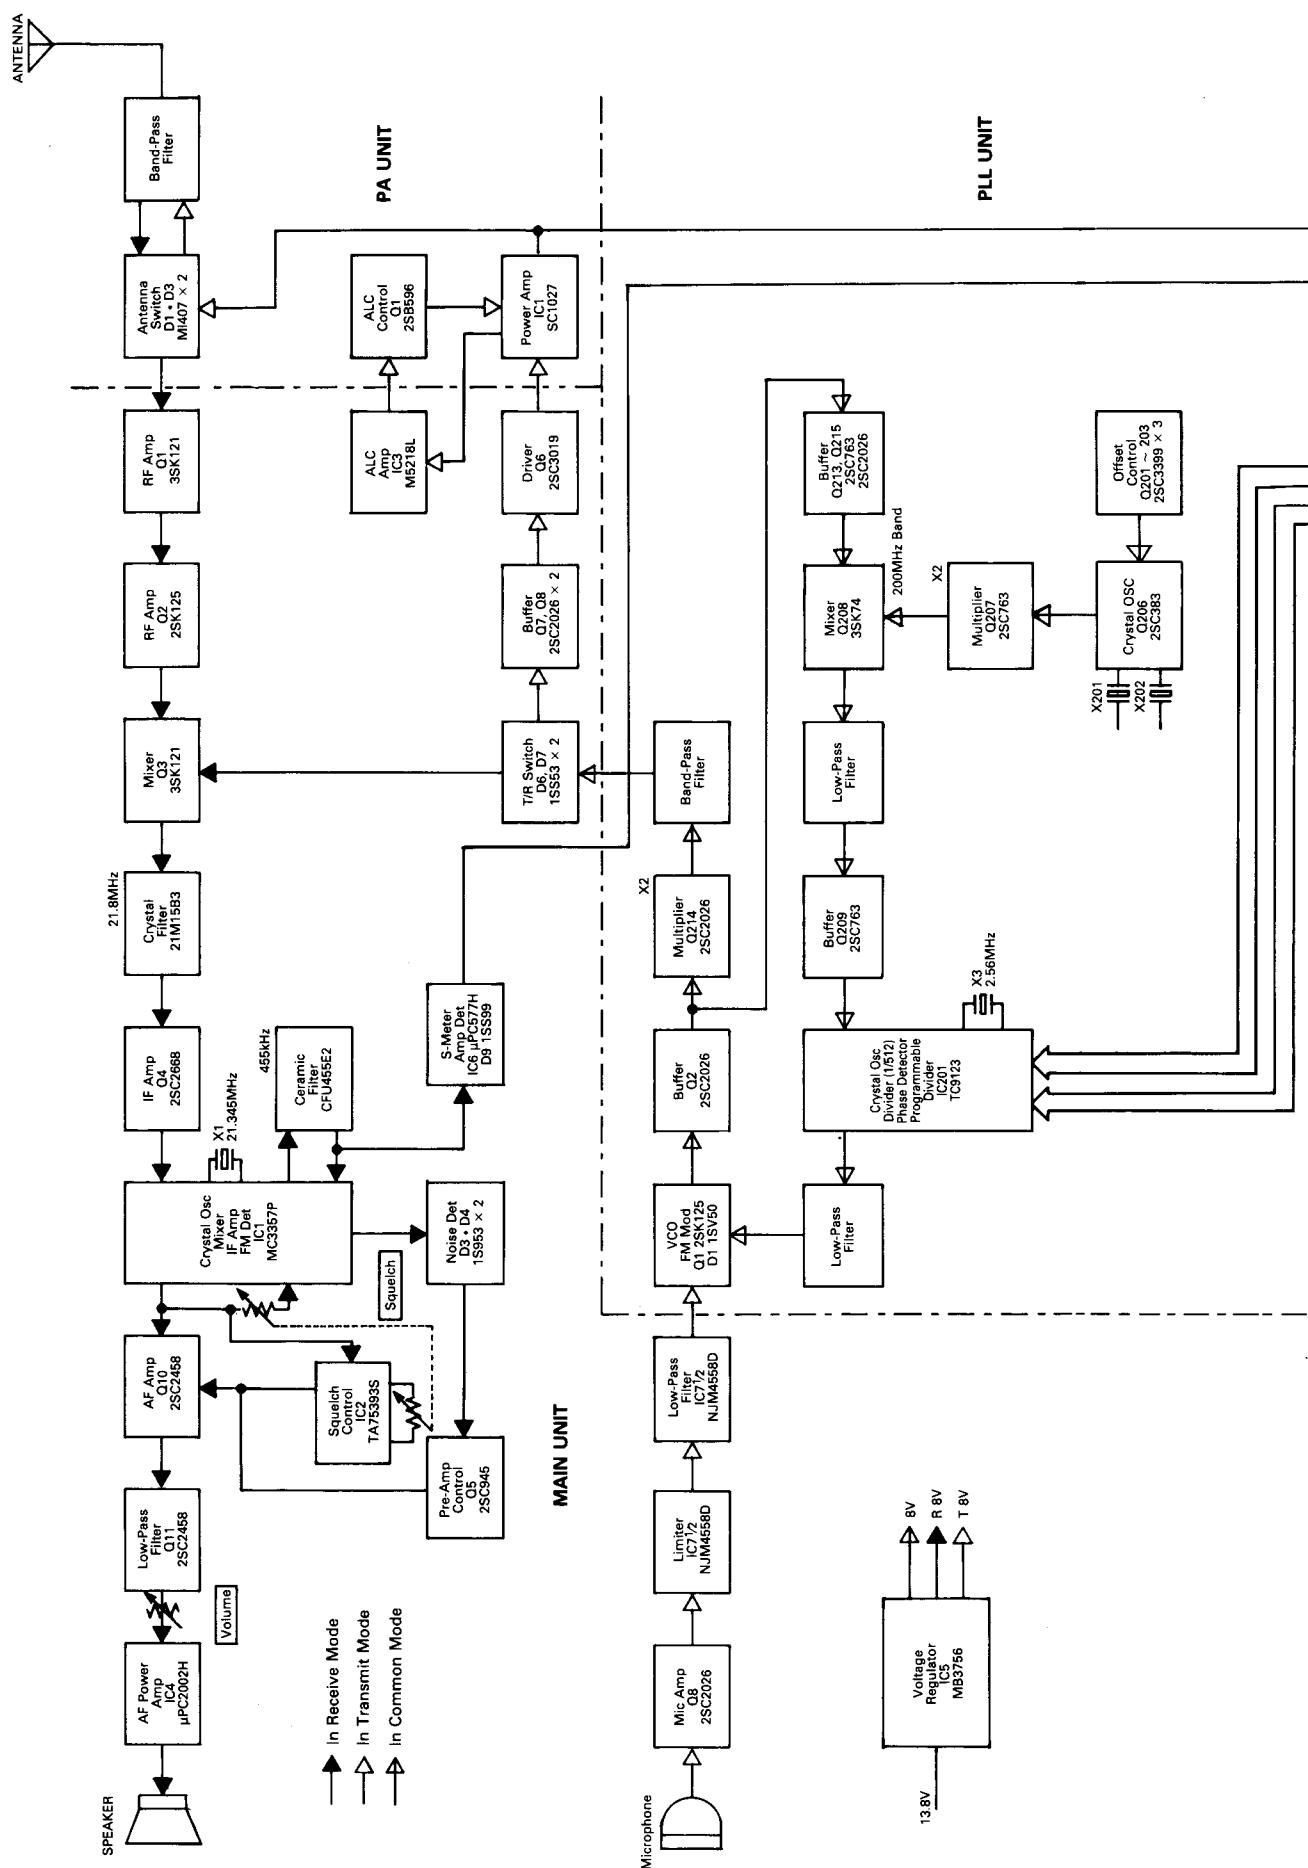

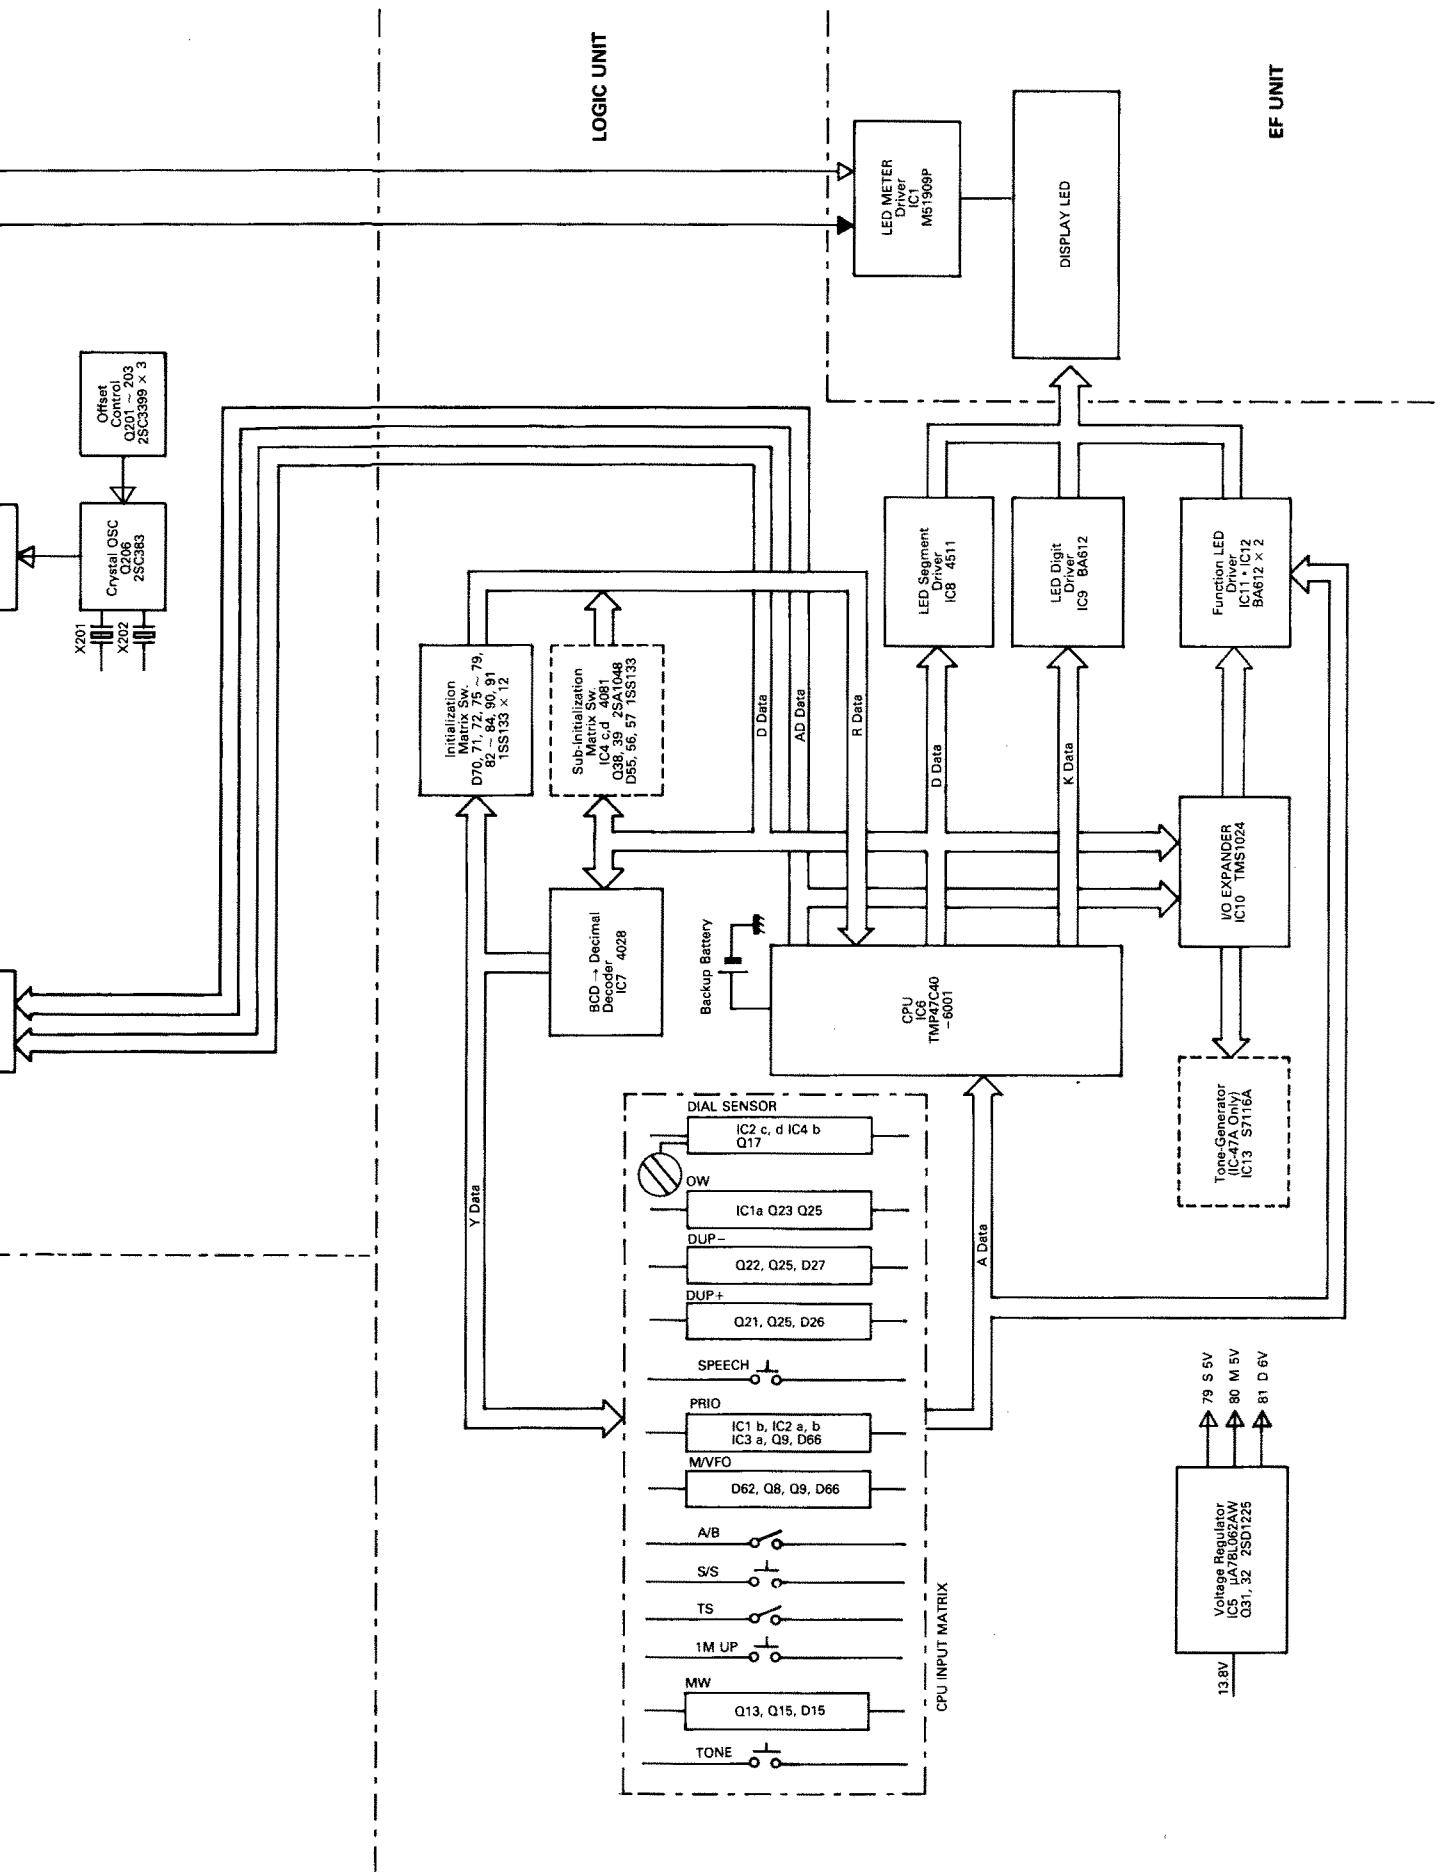


SECTION 5 INSIDE VIEWS

MAIN UNIT SIDE

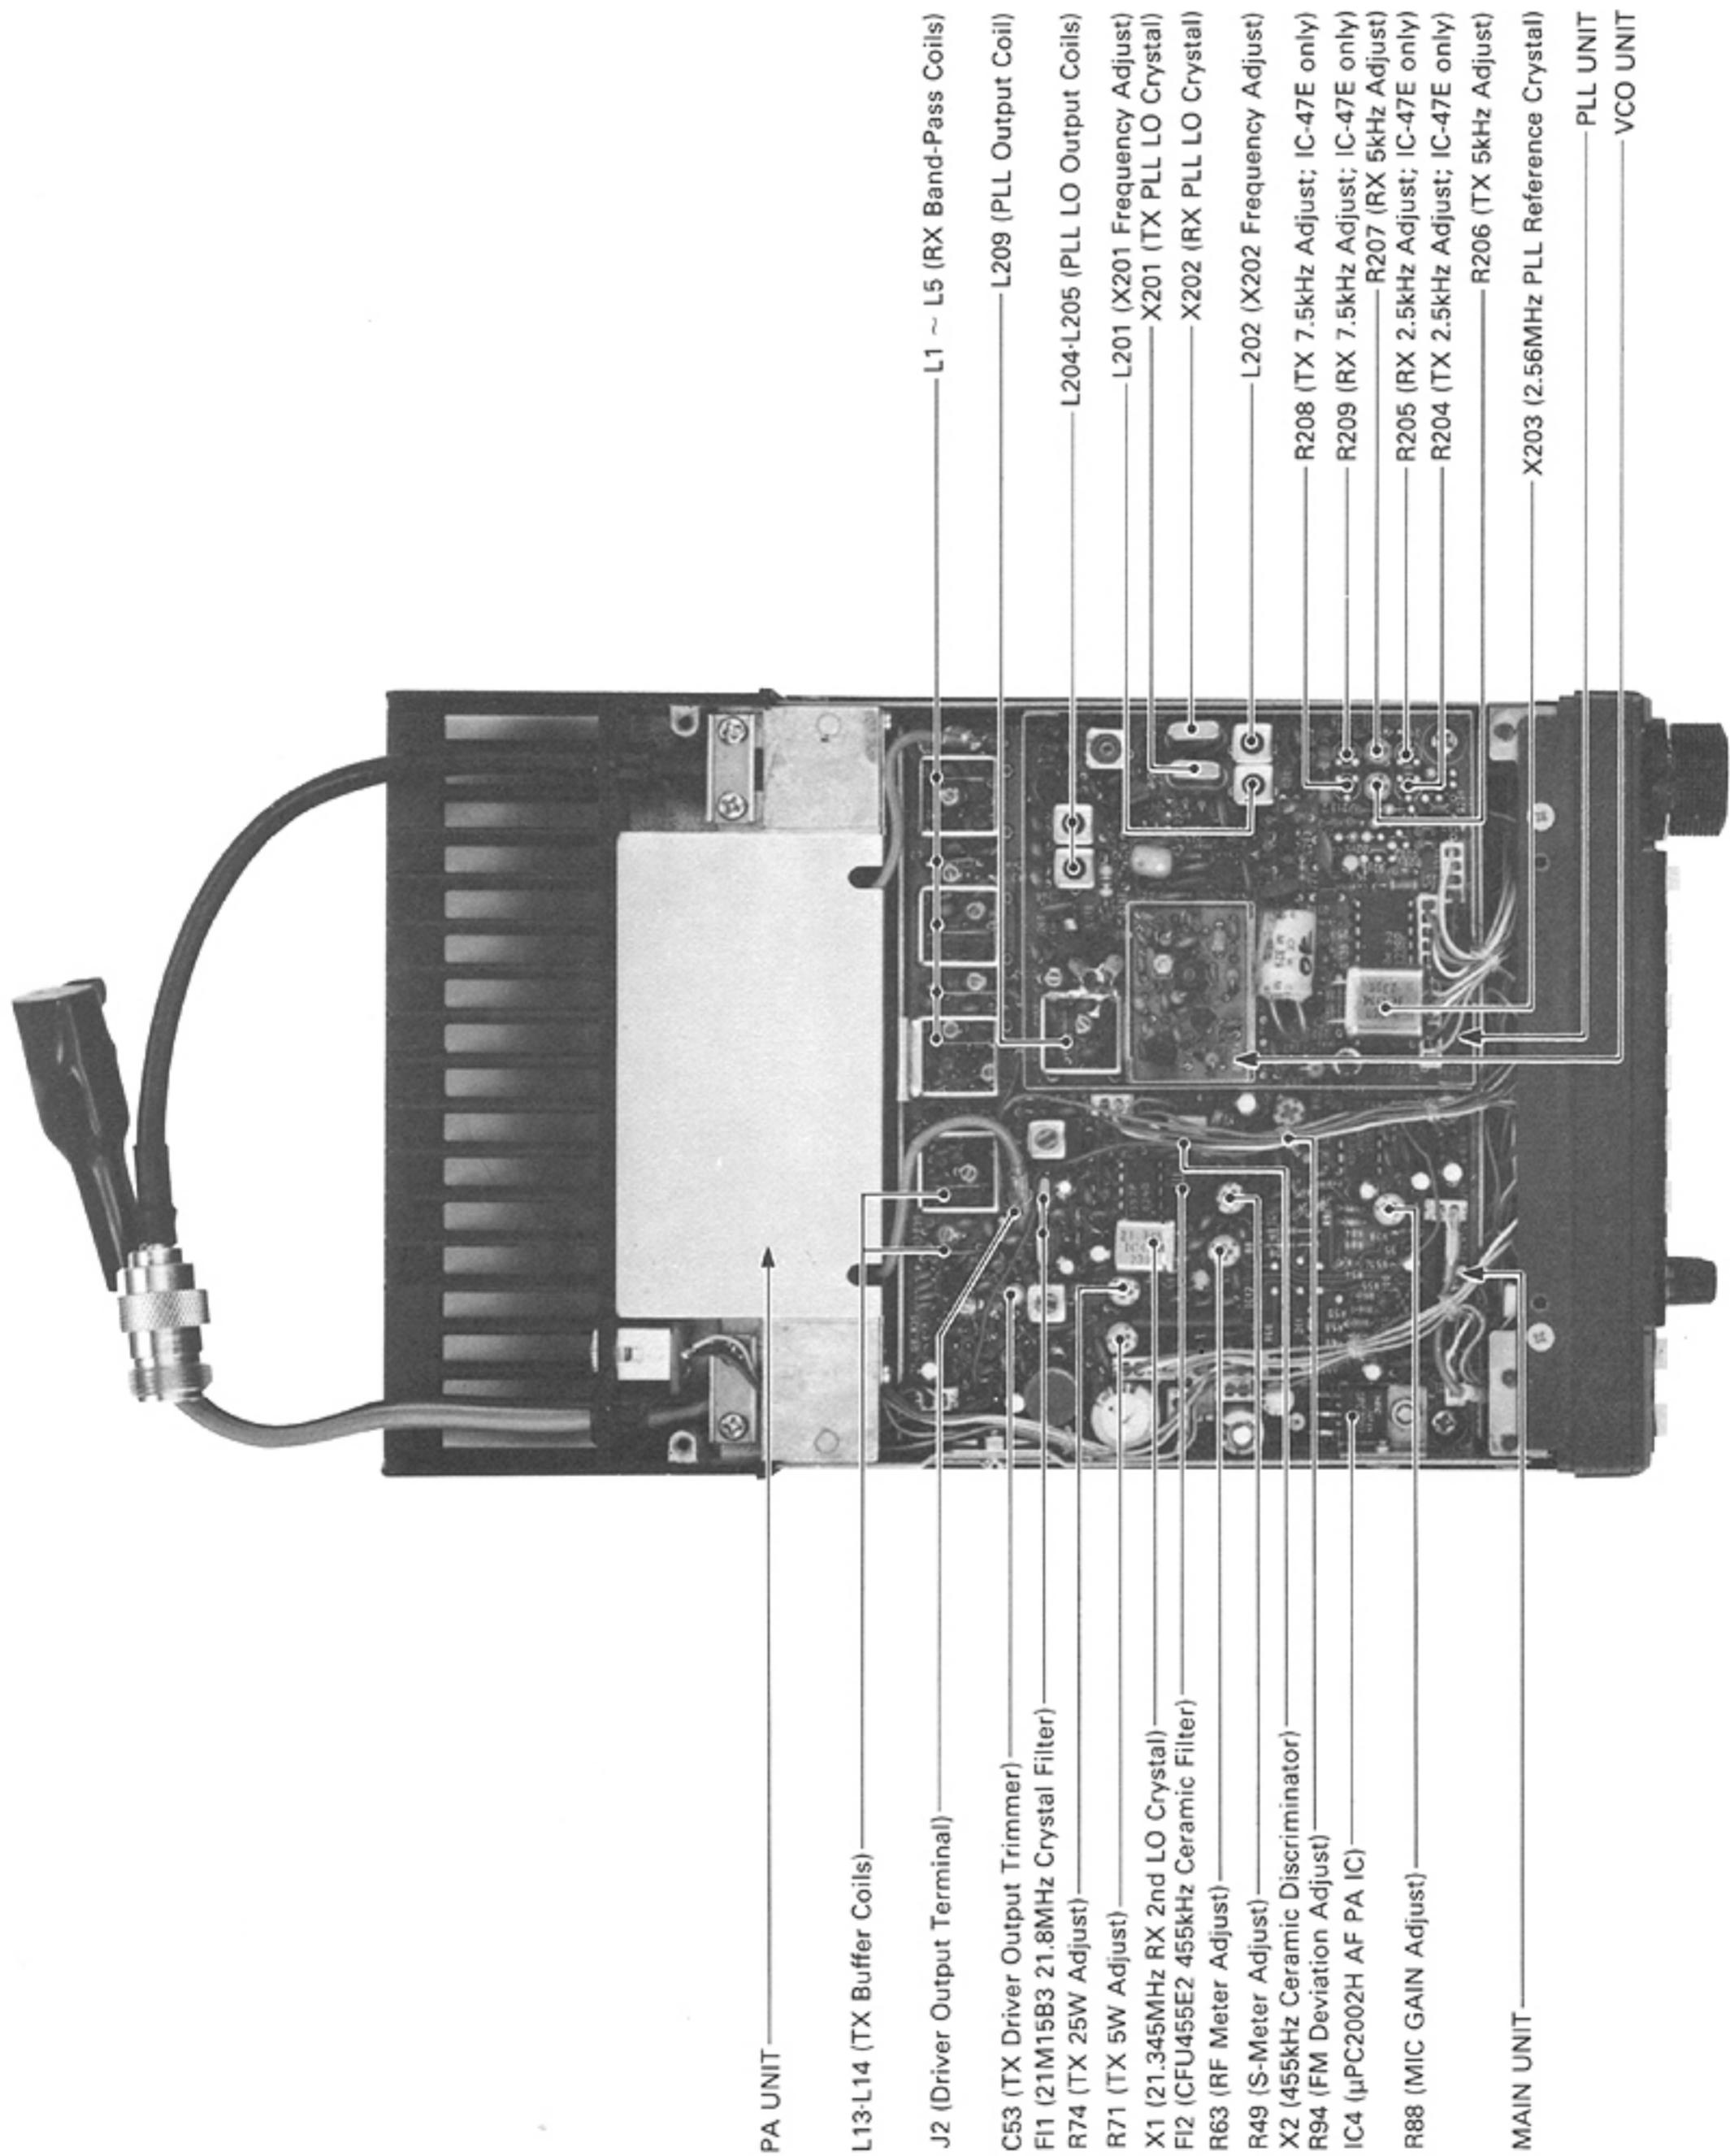


LOGIC UNIT SIDE

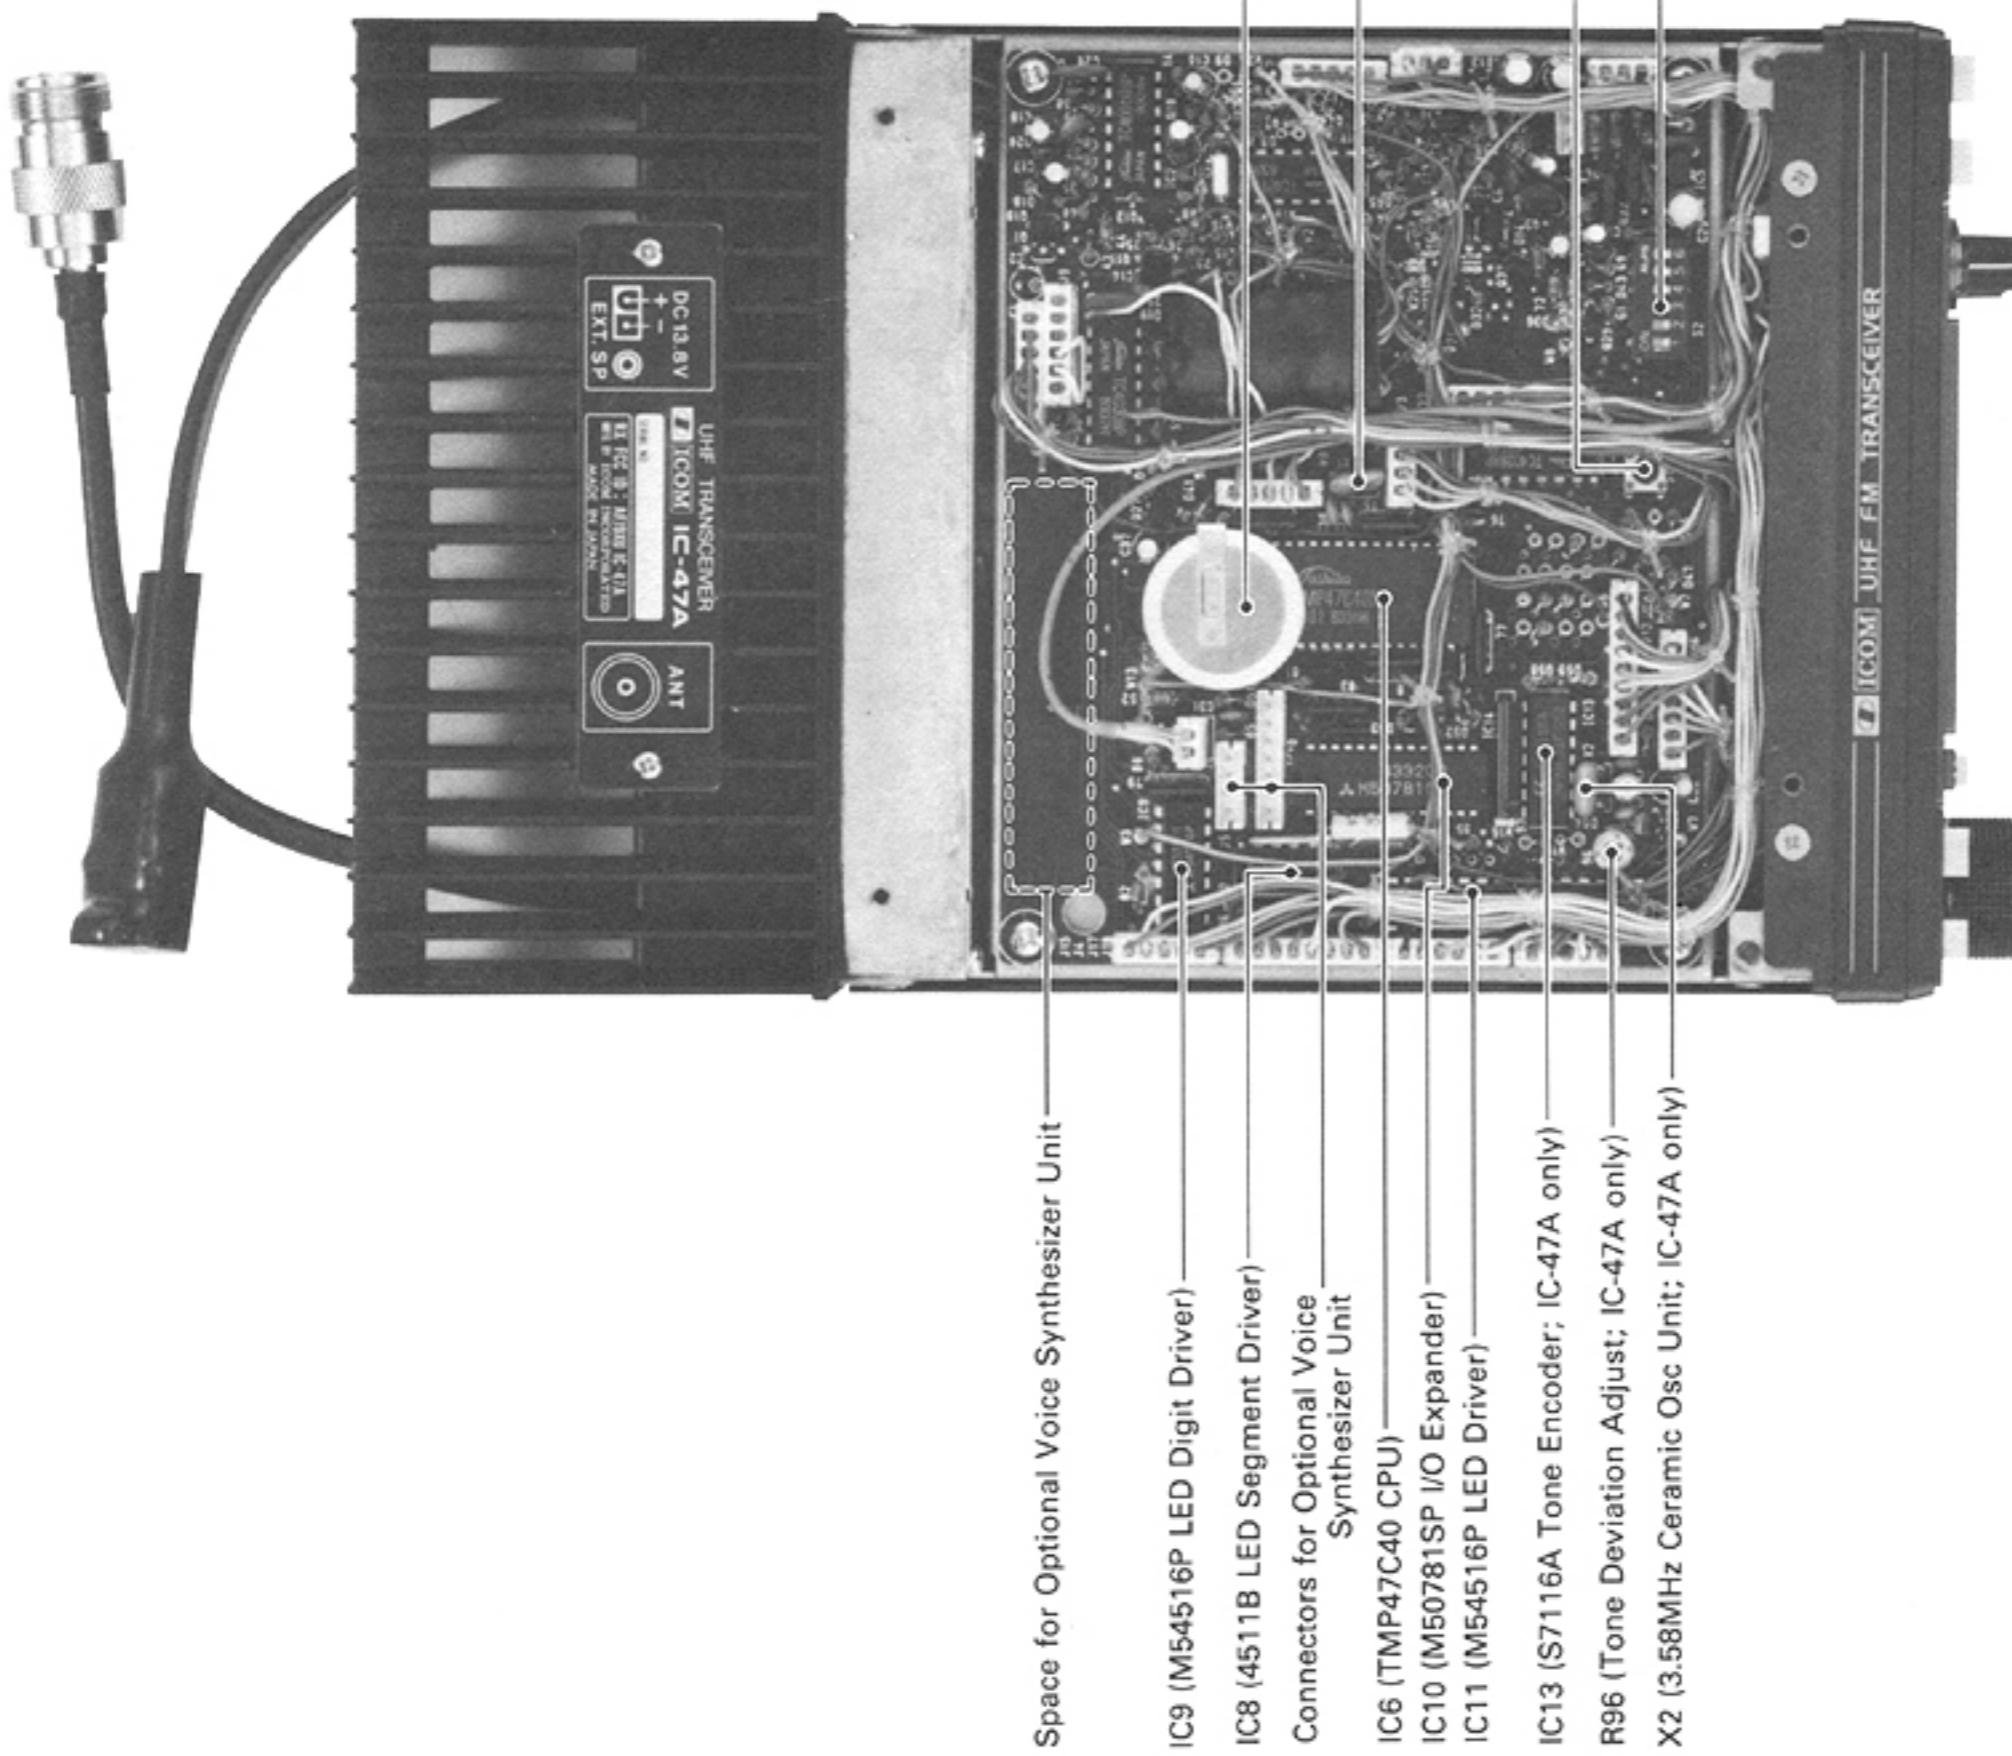


SECTION 6 MECHANICAL PARTS AND DISASSEMBLY


6 - 1 FRAME DISASSEMBLY


1. Remove the top cover (4 screws ①).
2. Remove the bottom cover (4 screws ②).
3. Remove the speaker connector.
4. Remove the front-panel knobs.
Remove the TUNING CONTROL knob screws ③ by using a hexagonal wrench.
5. Remove the four front panel frame screws ④, and then remove the entire front panel frame.

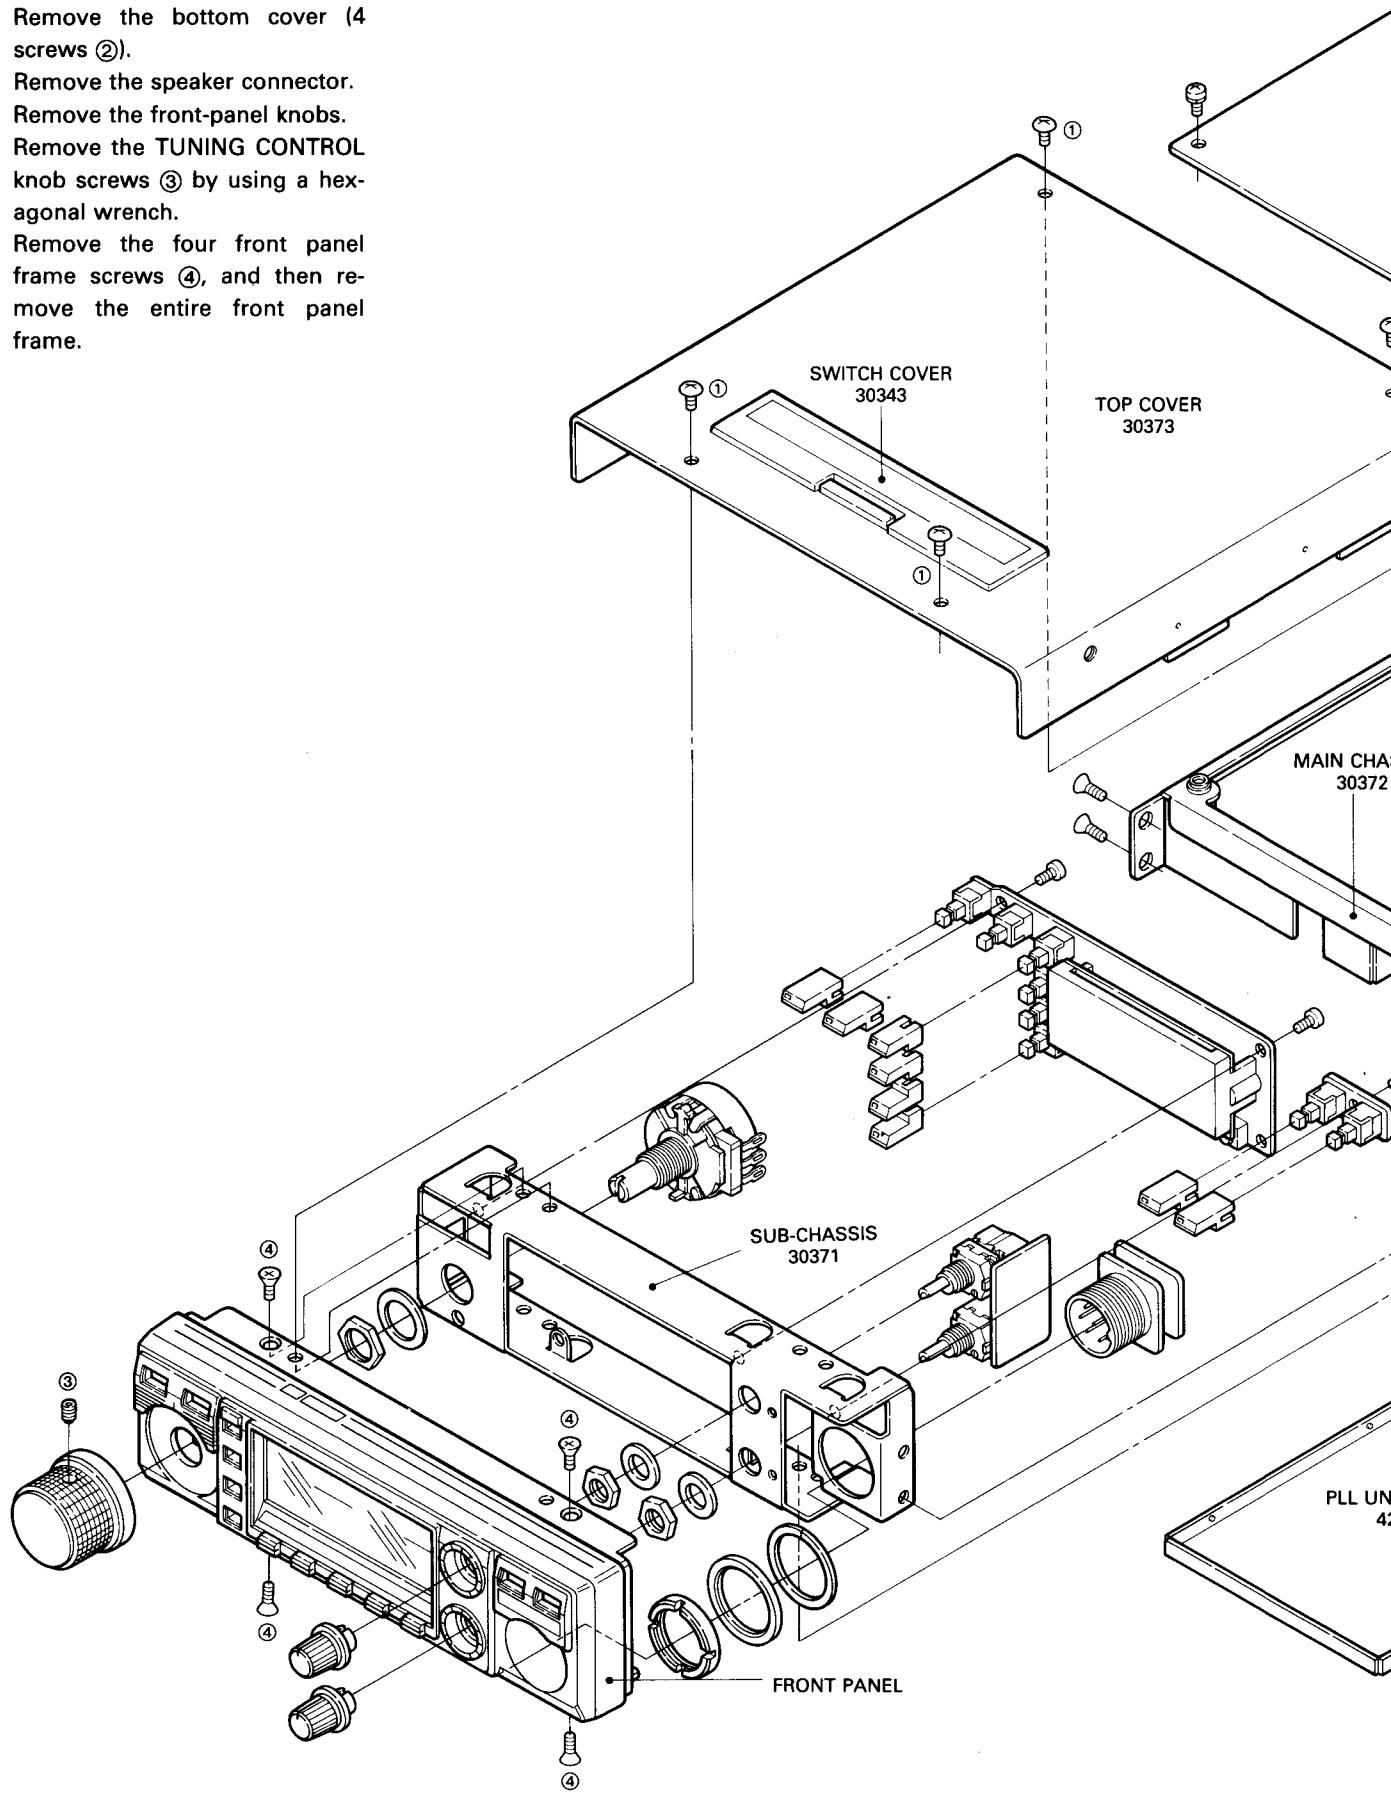

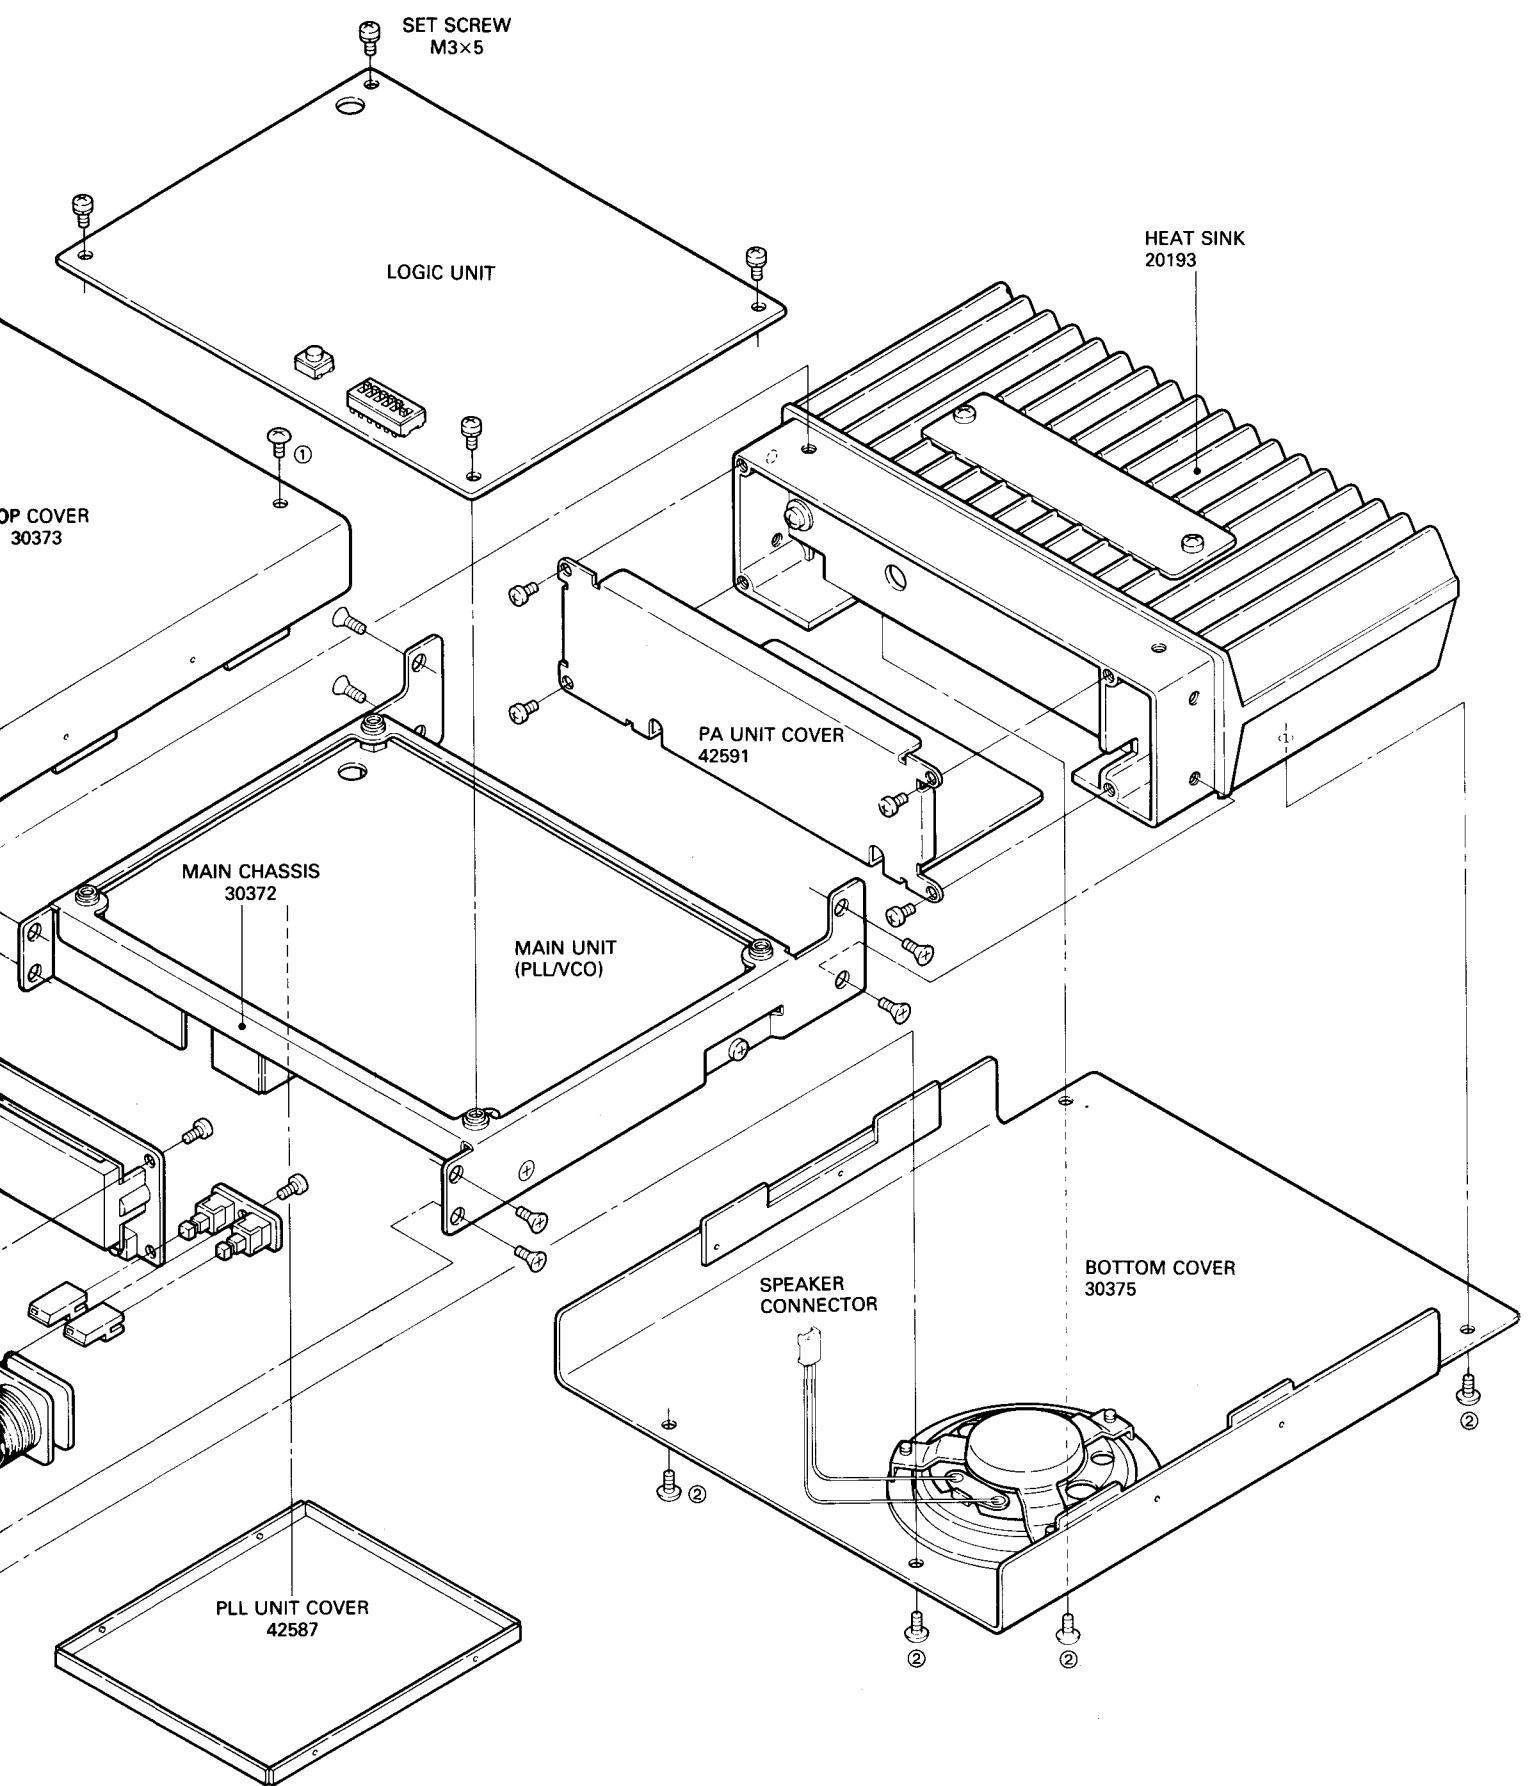


6 - 2 FRONT PANEL DISASSEMBLY

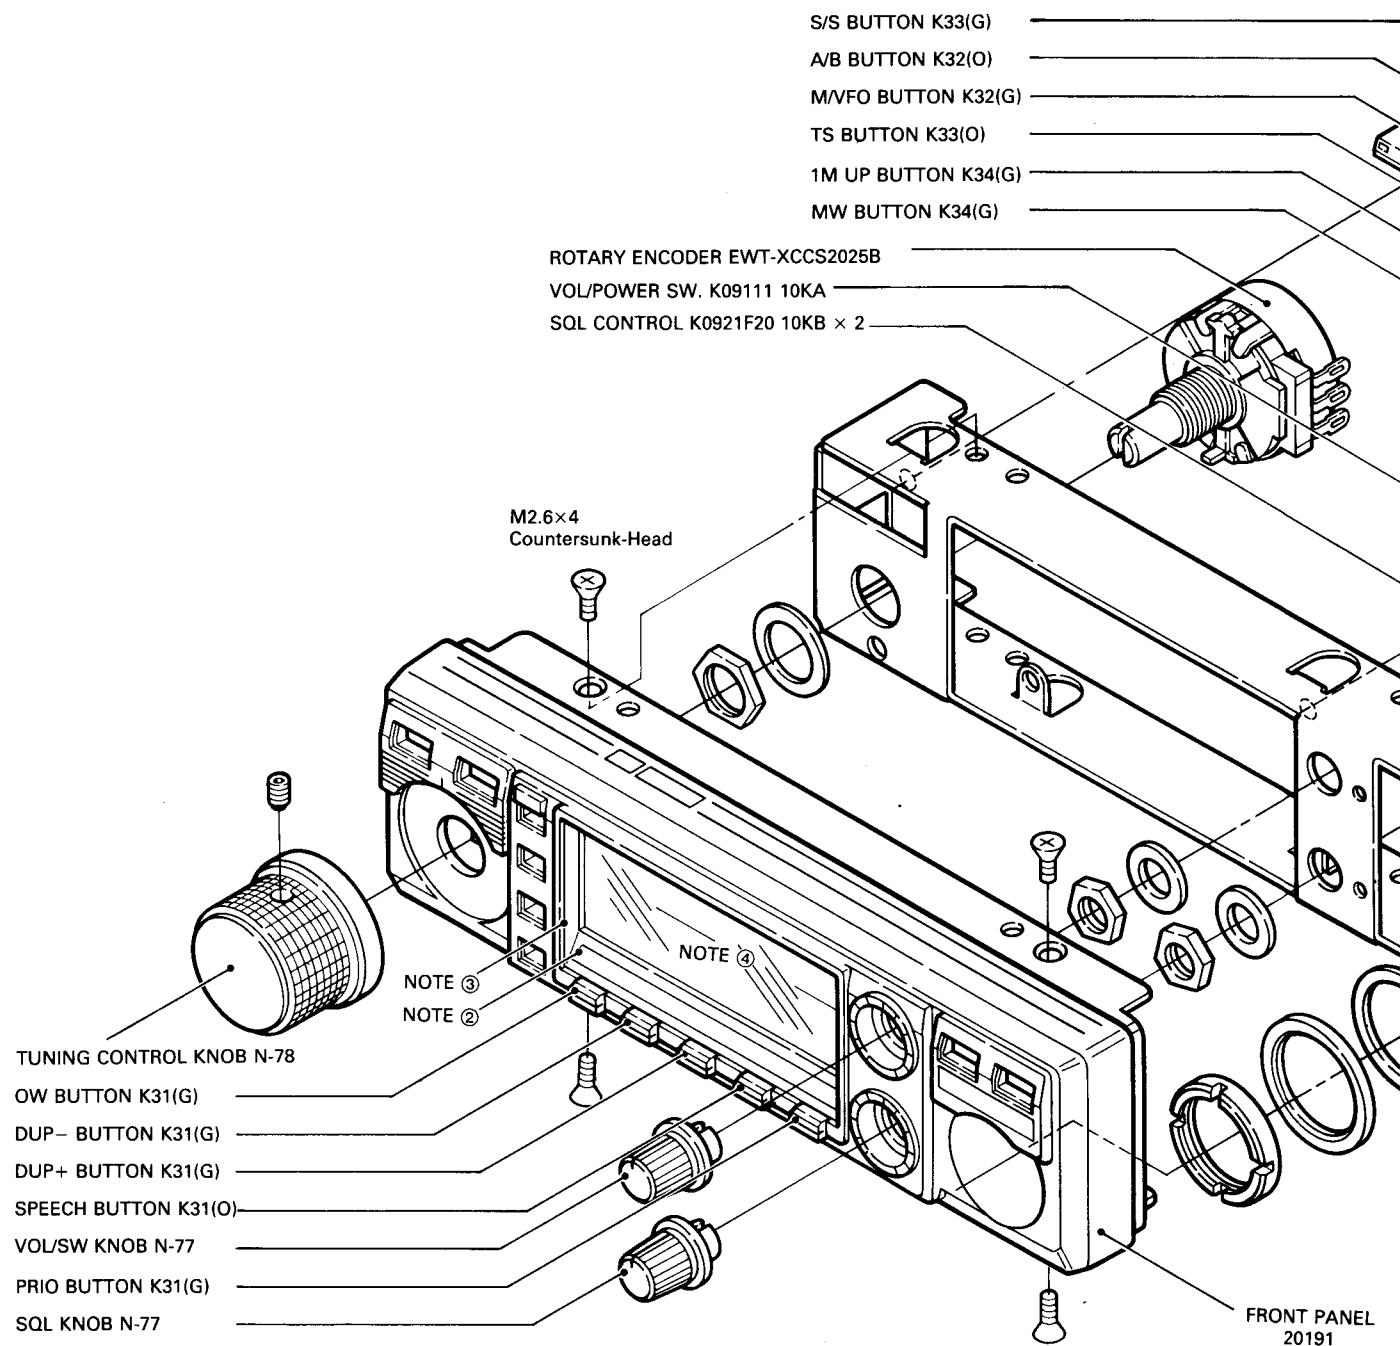


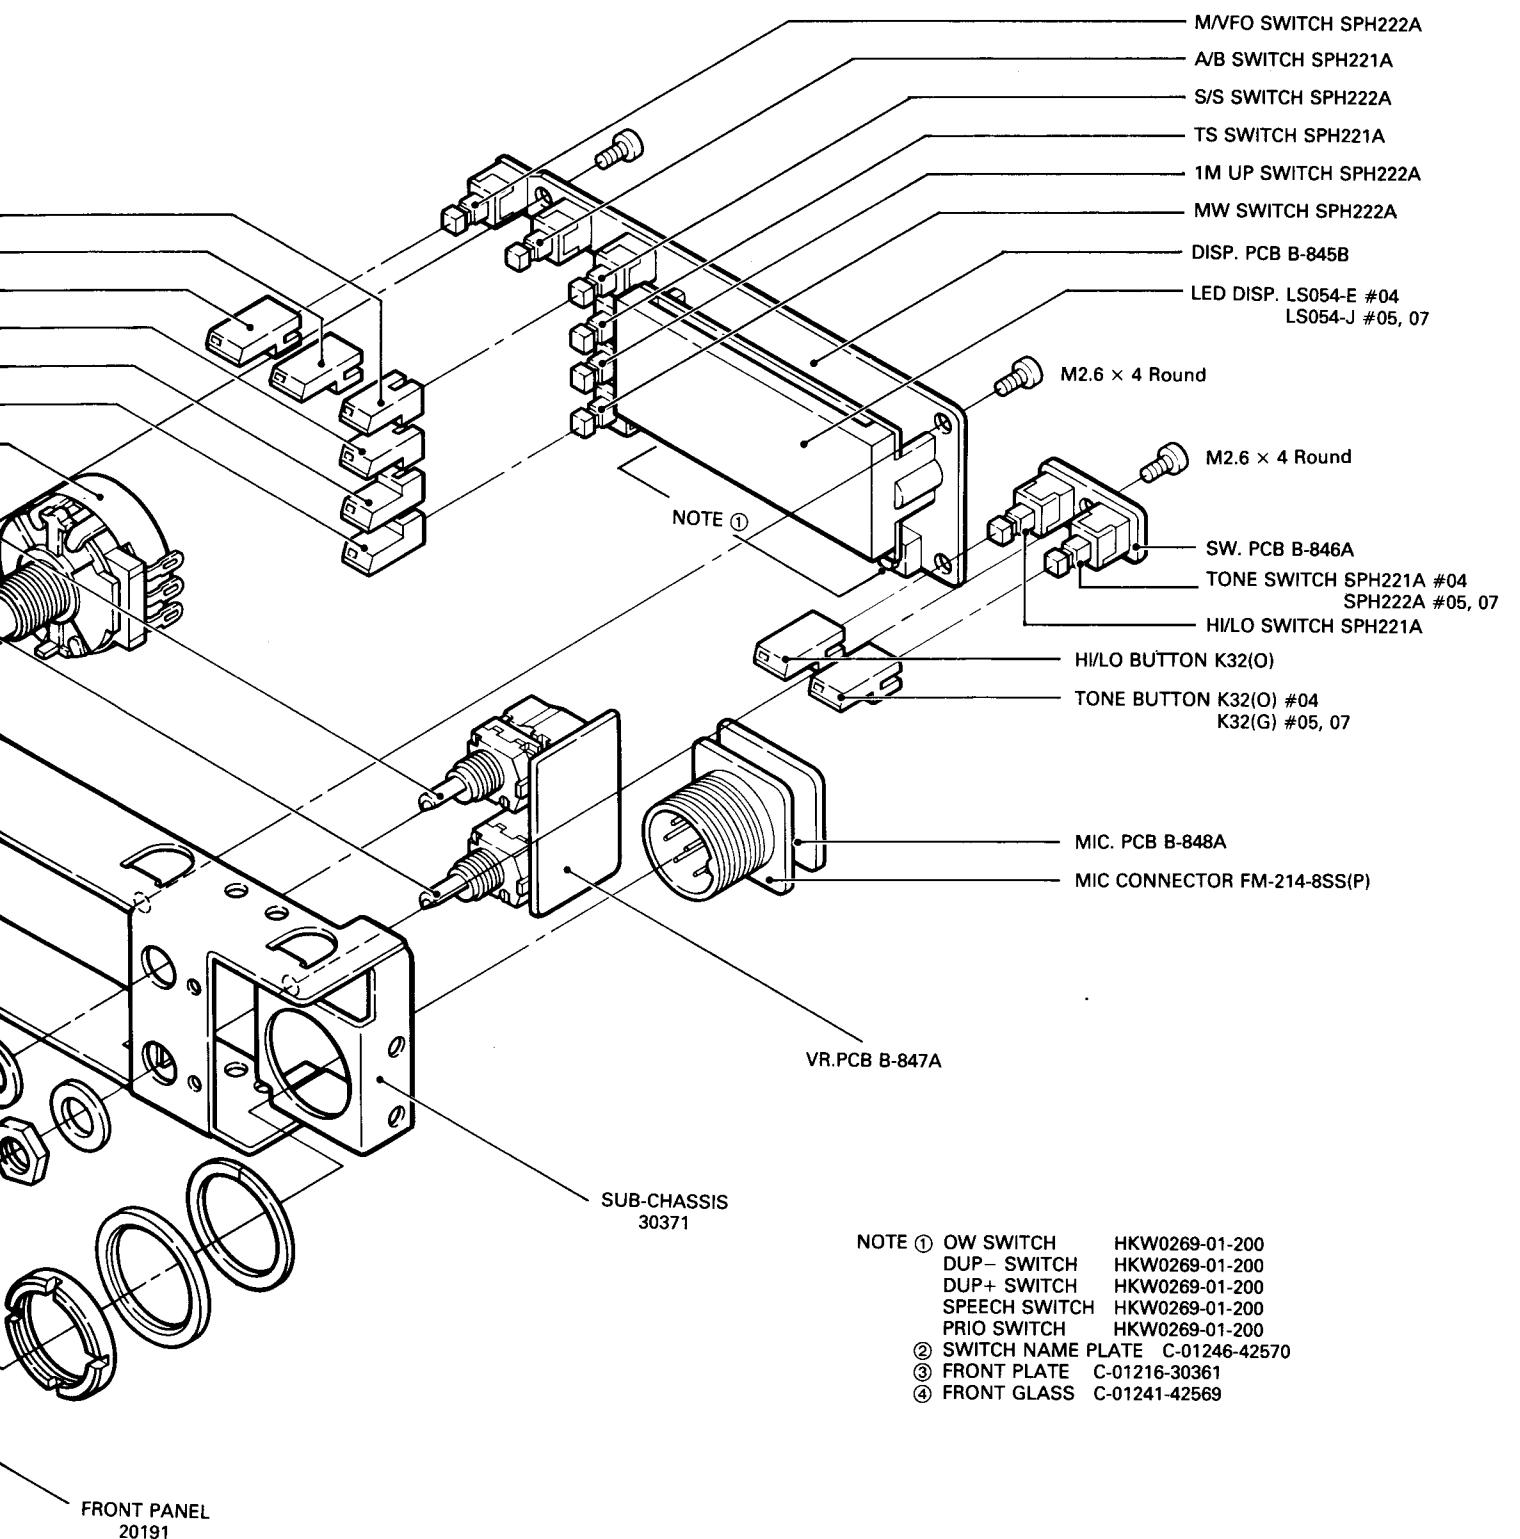

6 - 3 CONNECTOR CONNECTIONS

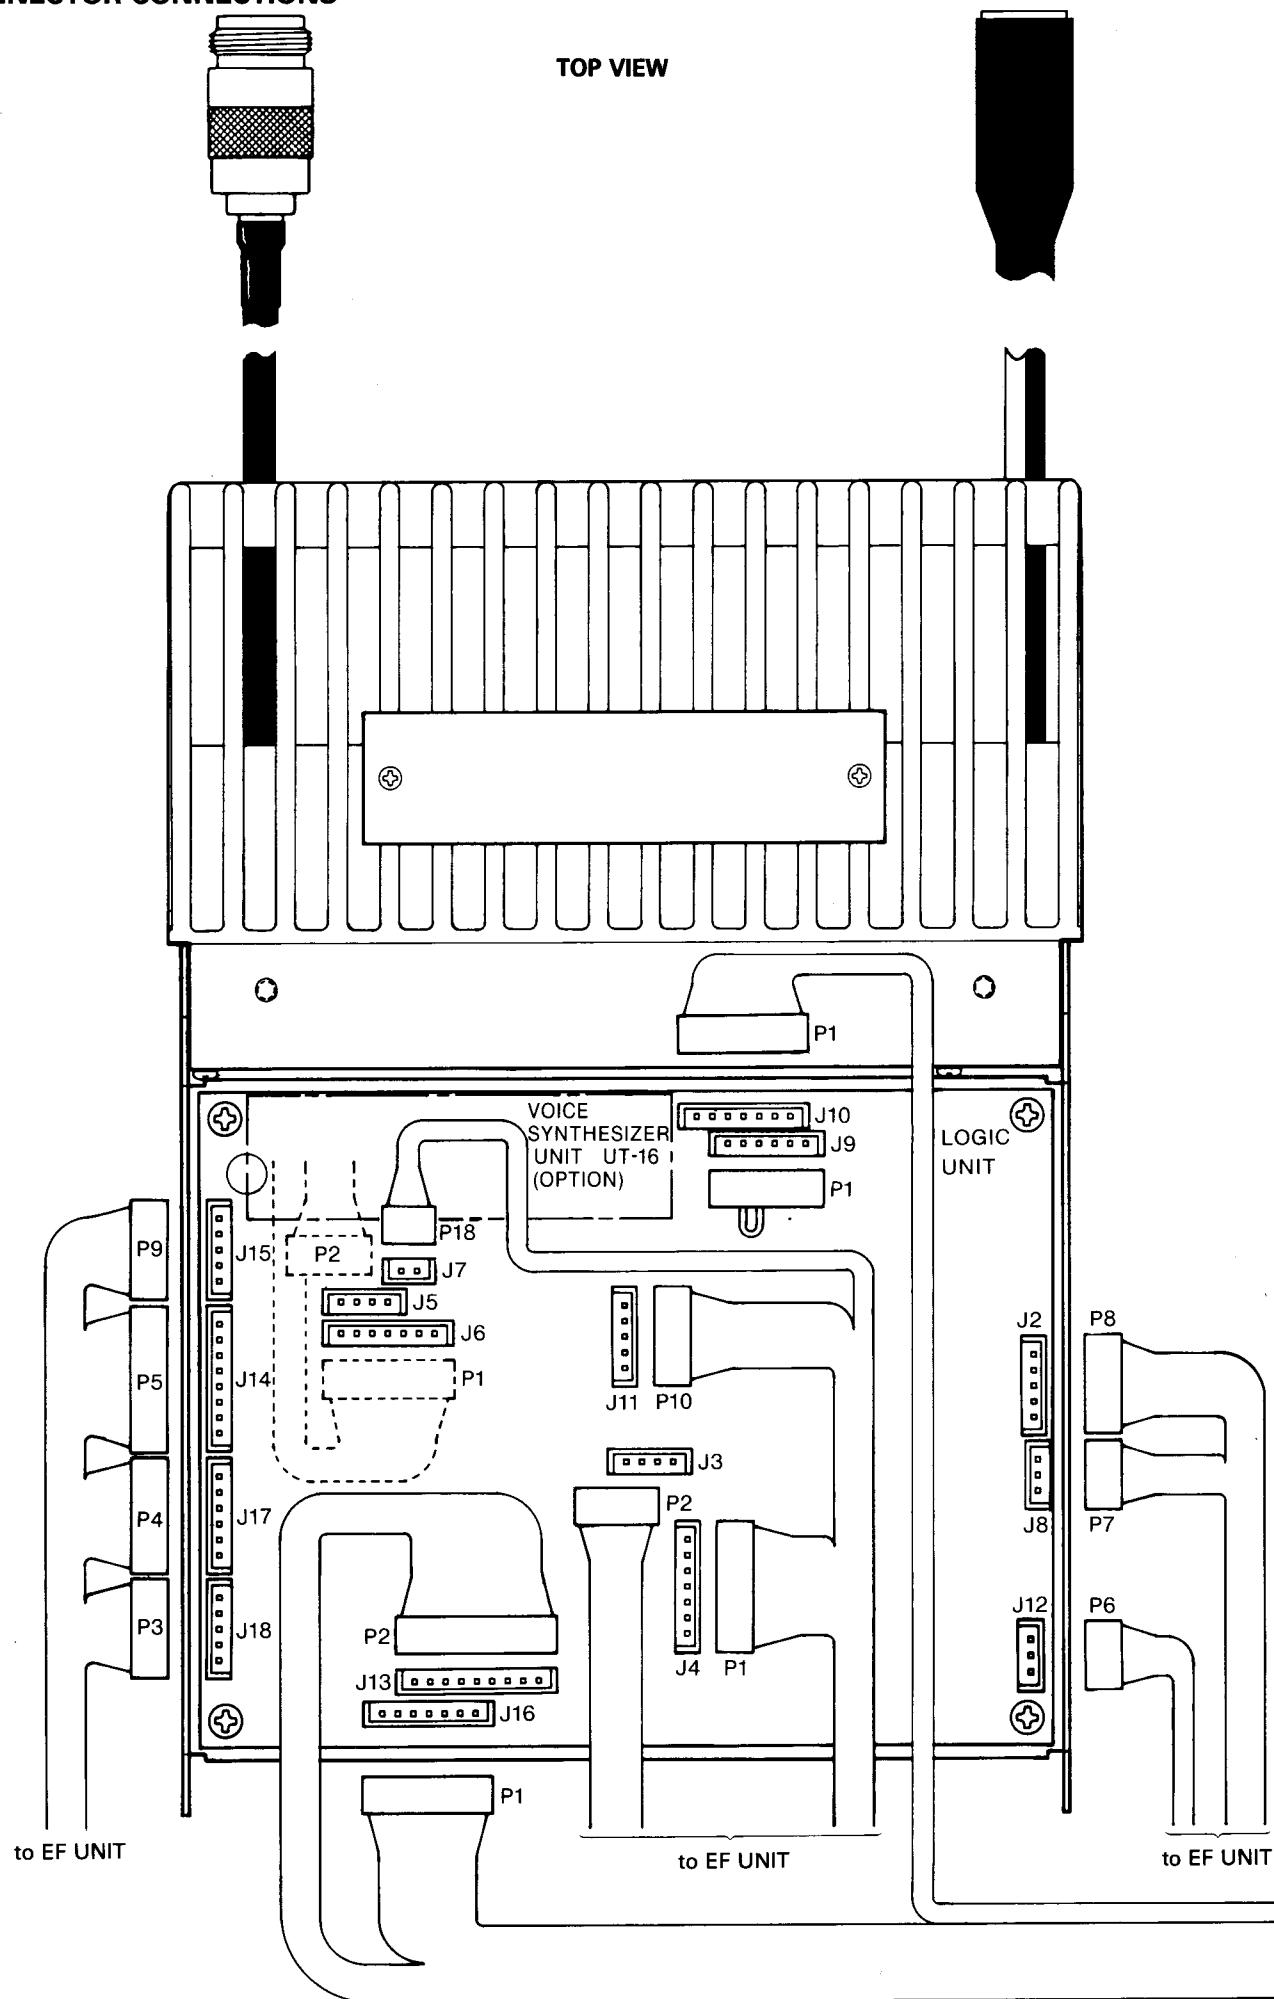

BOTTOM VIEW

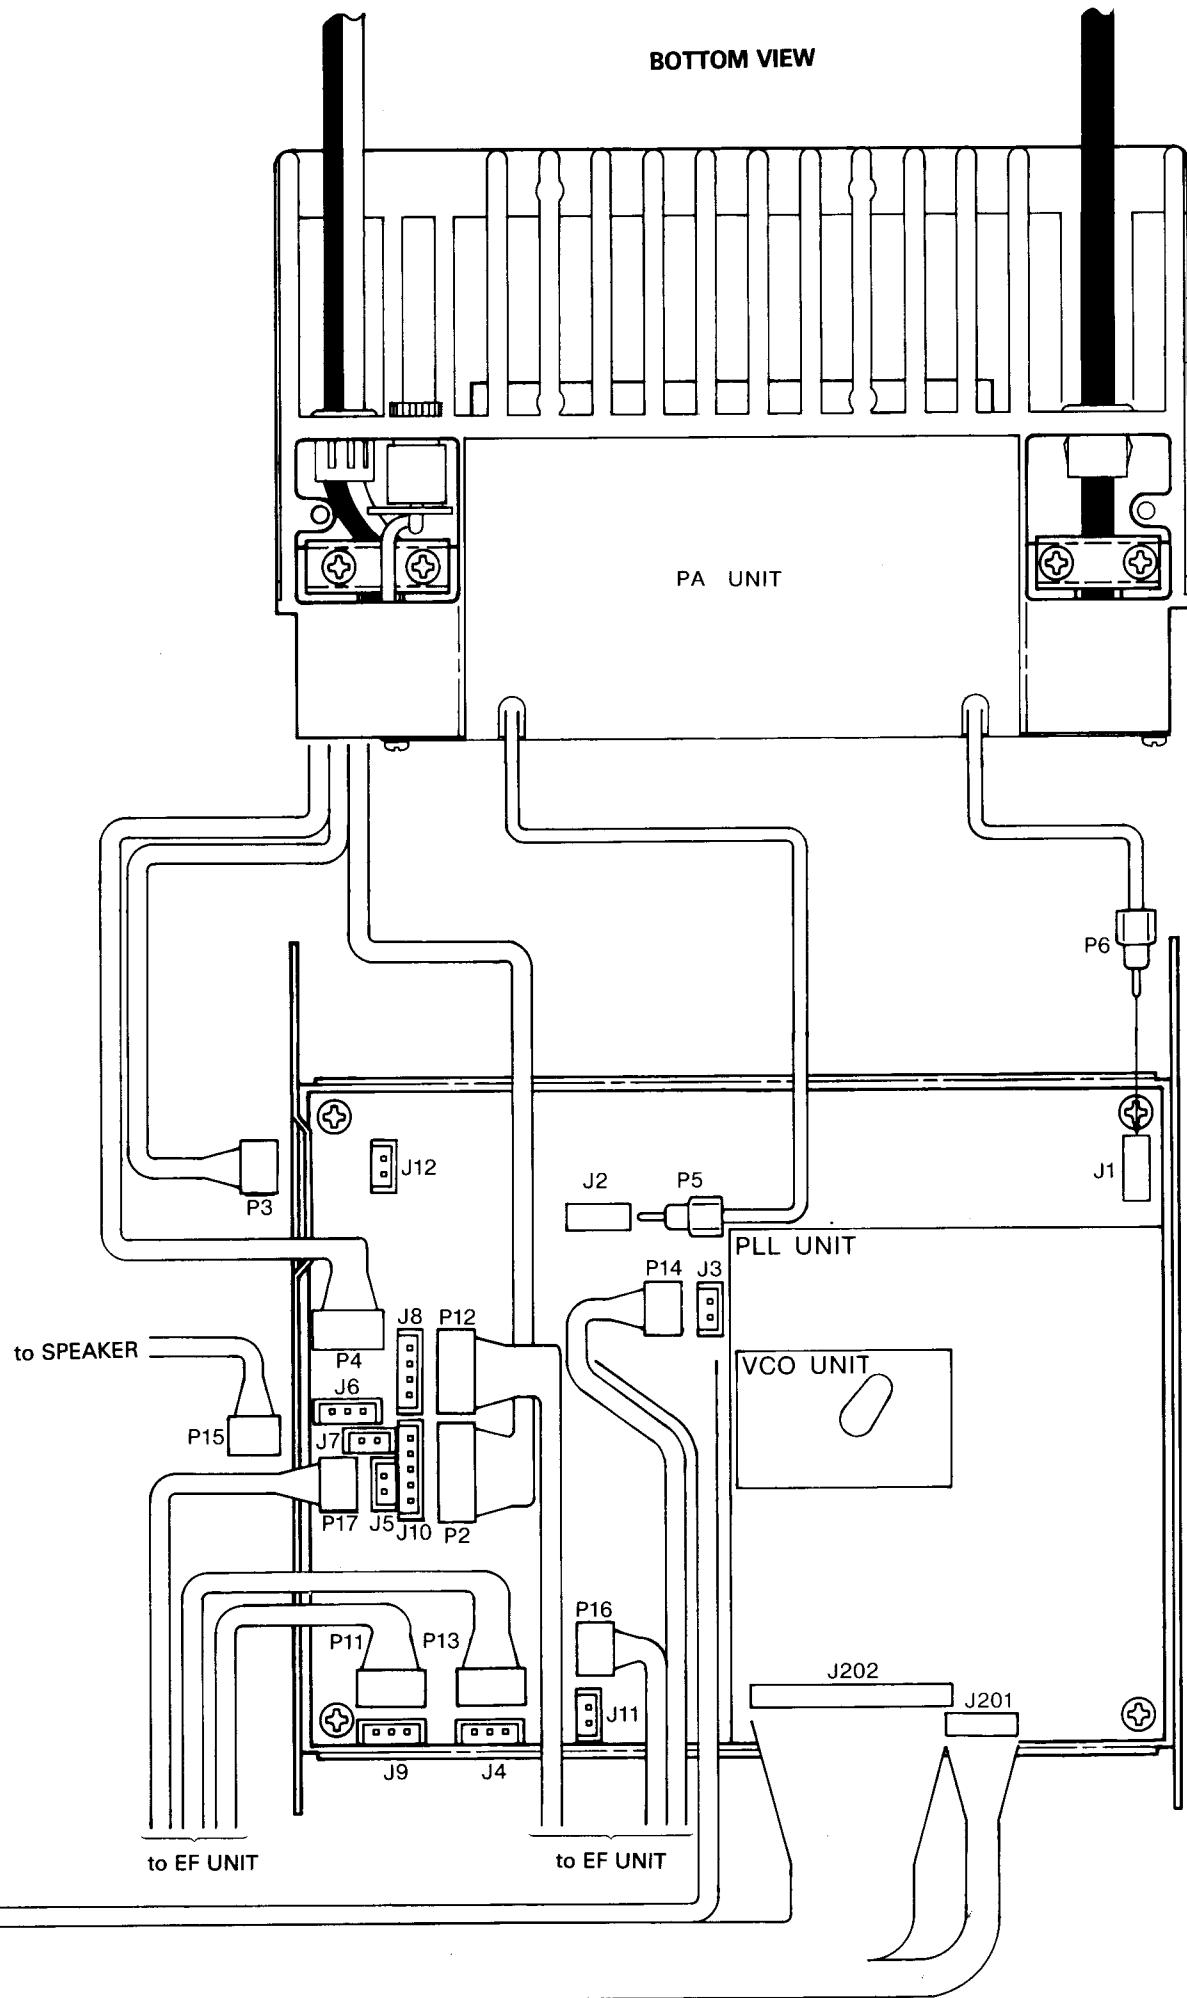

SECTION 7 MAINTENANCE AND ADJUSTMENT


7 - 1 PREPARATION BEFORE SERVICING

1. Detach the power cord and turn off the power switch before performing any work on the radio.
2. Do not short circuit components while making adjustments.
3. Use an insulated tuning tool for all adjustments.
4. Do not force any of the variable components. Tune them slowly and smoothly.
5. Follow the instructions exactly. If an indicated result is not obtained, repeat the instruction until the correct result is obtained.
6. Check the condition of connectors, solder joints and screws when adjustments are complete. Confirm that components do not touch each other.
7. There are several versions of this radio. Adjustment procedures and results may differ for each version. Be certain to follow the correct procedure for the radio you have.
8. Confirm defective operation of the radio first when checking an out-of-service unit. Verify that external sources do not cause the problem.
9. Use the correct tools and test equipment.
10. Remove the transceiver case as shown on Page 6-1 and Page 6-2.
11. Attach a 13.8 volt DC external power source to the power cord. Be sure to check the polarity.
12. For transmission problems, attach a dummy load to the antenna connector. For reception problems, attach an antenna or a signal generator to the antenna connector. Do not transmit into the signal generator.
13. Recheck for the suspected malfunction with the power switch on.
14. Check the defective circuit. Measure the DC voltages of the collector, base and emitter of each transistor.

7 - 2 PLL ADJUSTMENT

INSTRUMENTS REQUIRED			CONNECTIONS			
(1) VOLTAGE REGULATED POWER SUPPLY : OUTPUT VOLTAGE DC13.8V ± 15% : CURRENT CAPACITY MORE THAN 7A				(1) VOLTAGE REGULATED POWER SUPPLY	(5) RF POWER METER	
(2) OSCILLOSCOPE : FREQUENCY RANGE DC ~ 10MHz : MEASURING RANGE 0.01 ~ 10V				(3) FREQUENCY COUNTER	(2) OSCILLOSCOPE	
(3) FREQUENCY COUNTER : FREQUENCY RANGE 0.1 ~ 470MHz : ACCURACY BETTER THAN ±1PPM				L209	R248	
(4) MULTIMETER : MEASURING RANGE 50kΩ/VOLT or BETTER				R257	(4) MULTIMETER	
(5) RF POWER METER (TERMINATED TYPE) : MEASURING RANGE 50 watts : FREQUENCY RANGE 400 ~ 470MHz : IMPEDANCE 50Ω : SWR LESS THAN 1.1				ANT	(5) RF POWER METER	
Adjustment		Adjustment conditions	Unit	Adjustment location	Adjustment value	Unit
PRELIMINARY	1.	• Check the programmable divider input.	PLL	Connect the oscilloscope to R248.	Unstable or no waveform indicates PLL failure.	
	2.	• Check the master oscillator frequency.		Connect the oscilloscope to crystal (X203).	Check for a 2.56MHz signal.	
	3.	• Check IC and transistor voltages.	PLL/VCO	Connect the multimeter to IC201, Q206 ~ 209, Q213 ~ 215, Q1 ~ 2 (VCO).	See voltage information in section 8.	
PLL LOCK	1.	• Set operating frequency: 434.9850MHz (IC-47E#04), 444.9950MHz (IC-47A#05), 434.9950MHz (IC-47A#07). • Receive and transmit mode. Repeat this step several times.	PLL	Connect the oscilloscope (with a ×10 probe) to R248.	Maximum peak-to-peak value on the oscilloscope.	PLL
	2.	• Set operating frequency: 439.9875MHz (IC-47E#04), 449.9950MHz (IC-47A#05), 439.9950MHz (IC-47A#07). • Receive and transmit mode. Repeat this step several times.		Connect the multimeter to R257.	1.5V.	VCO
This PLL is locked under normal conditions. The voltage range is 0.5 ~ 6V. After changing the operating frequency to 430.00MHz (IC-47E#04, IC-47A#07) or 440.00MHz (IC-47A#05), check that the voltage at R257 is less than 5.5V.						
PLL L.O. FREQUENCY	1.	• Set operating frequency as follows: IC-47E#04: 435.0000MHz in TX mode, 434.9875MHz in TX mode, 434.9750MHz in TX mode, 434.9625MHz in TX mode, 435.0000MHz in RX mode, 434.9875MHz in RX mode, 434.9750MHz in RX mode, 434.9625MHz in RX mode. IC-47A#05: 445.0000MHz in TX mode, 444.9950MHz in TX mode, 445.0000MHz in RX mode, 444.9950MHz in RX mode. IC-47A#07: 435.0000MHz in TX mode, 434.9950MHz in TX mode, 435.0000MHz in RX mode, 434.9950MHz in RX mode.	PLL	Connect the frequency counter to L209.	435.0000MHz, 434.9875MHz, 434.9750MHz, 434.9625MHz, 413.2000MHz, 413.1875MHz, 413.1750MHz, 413.1625MHz. 445.0000MHz, 444.9950MHz, 423.2000MHz, 423.1950MHz. 435.0000MHz, 434.9950MHz, 413.2000MHz, 413.1950MHz.	PLL
						L201 R208 R206 R204 L202 R209 R207 R205
						L201 R206 L202 R207
						L201 R206 L202 R207


PLL/VCO UNIT

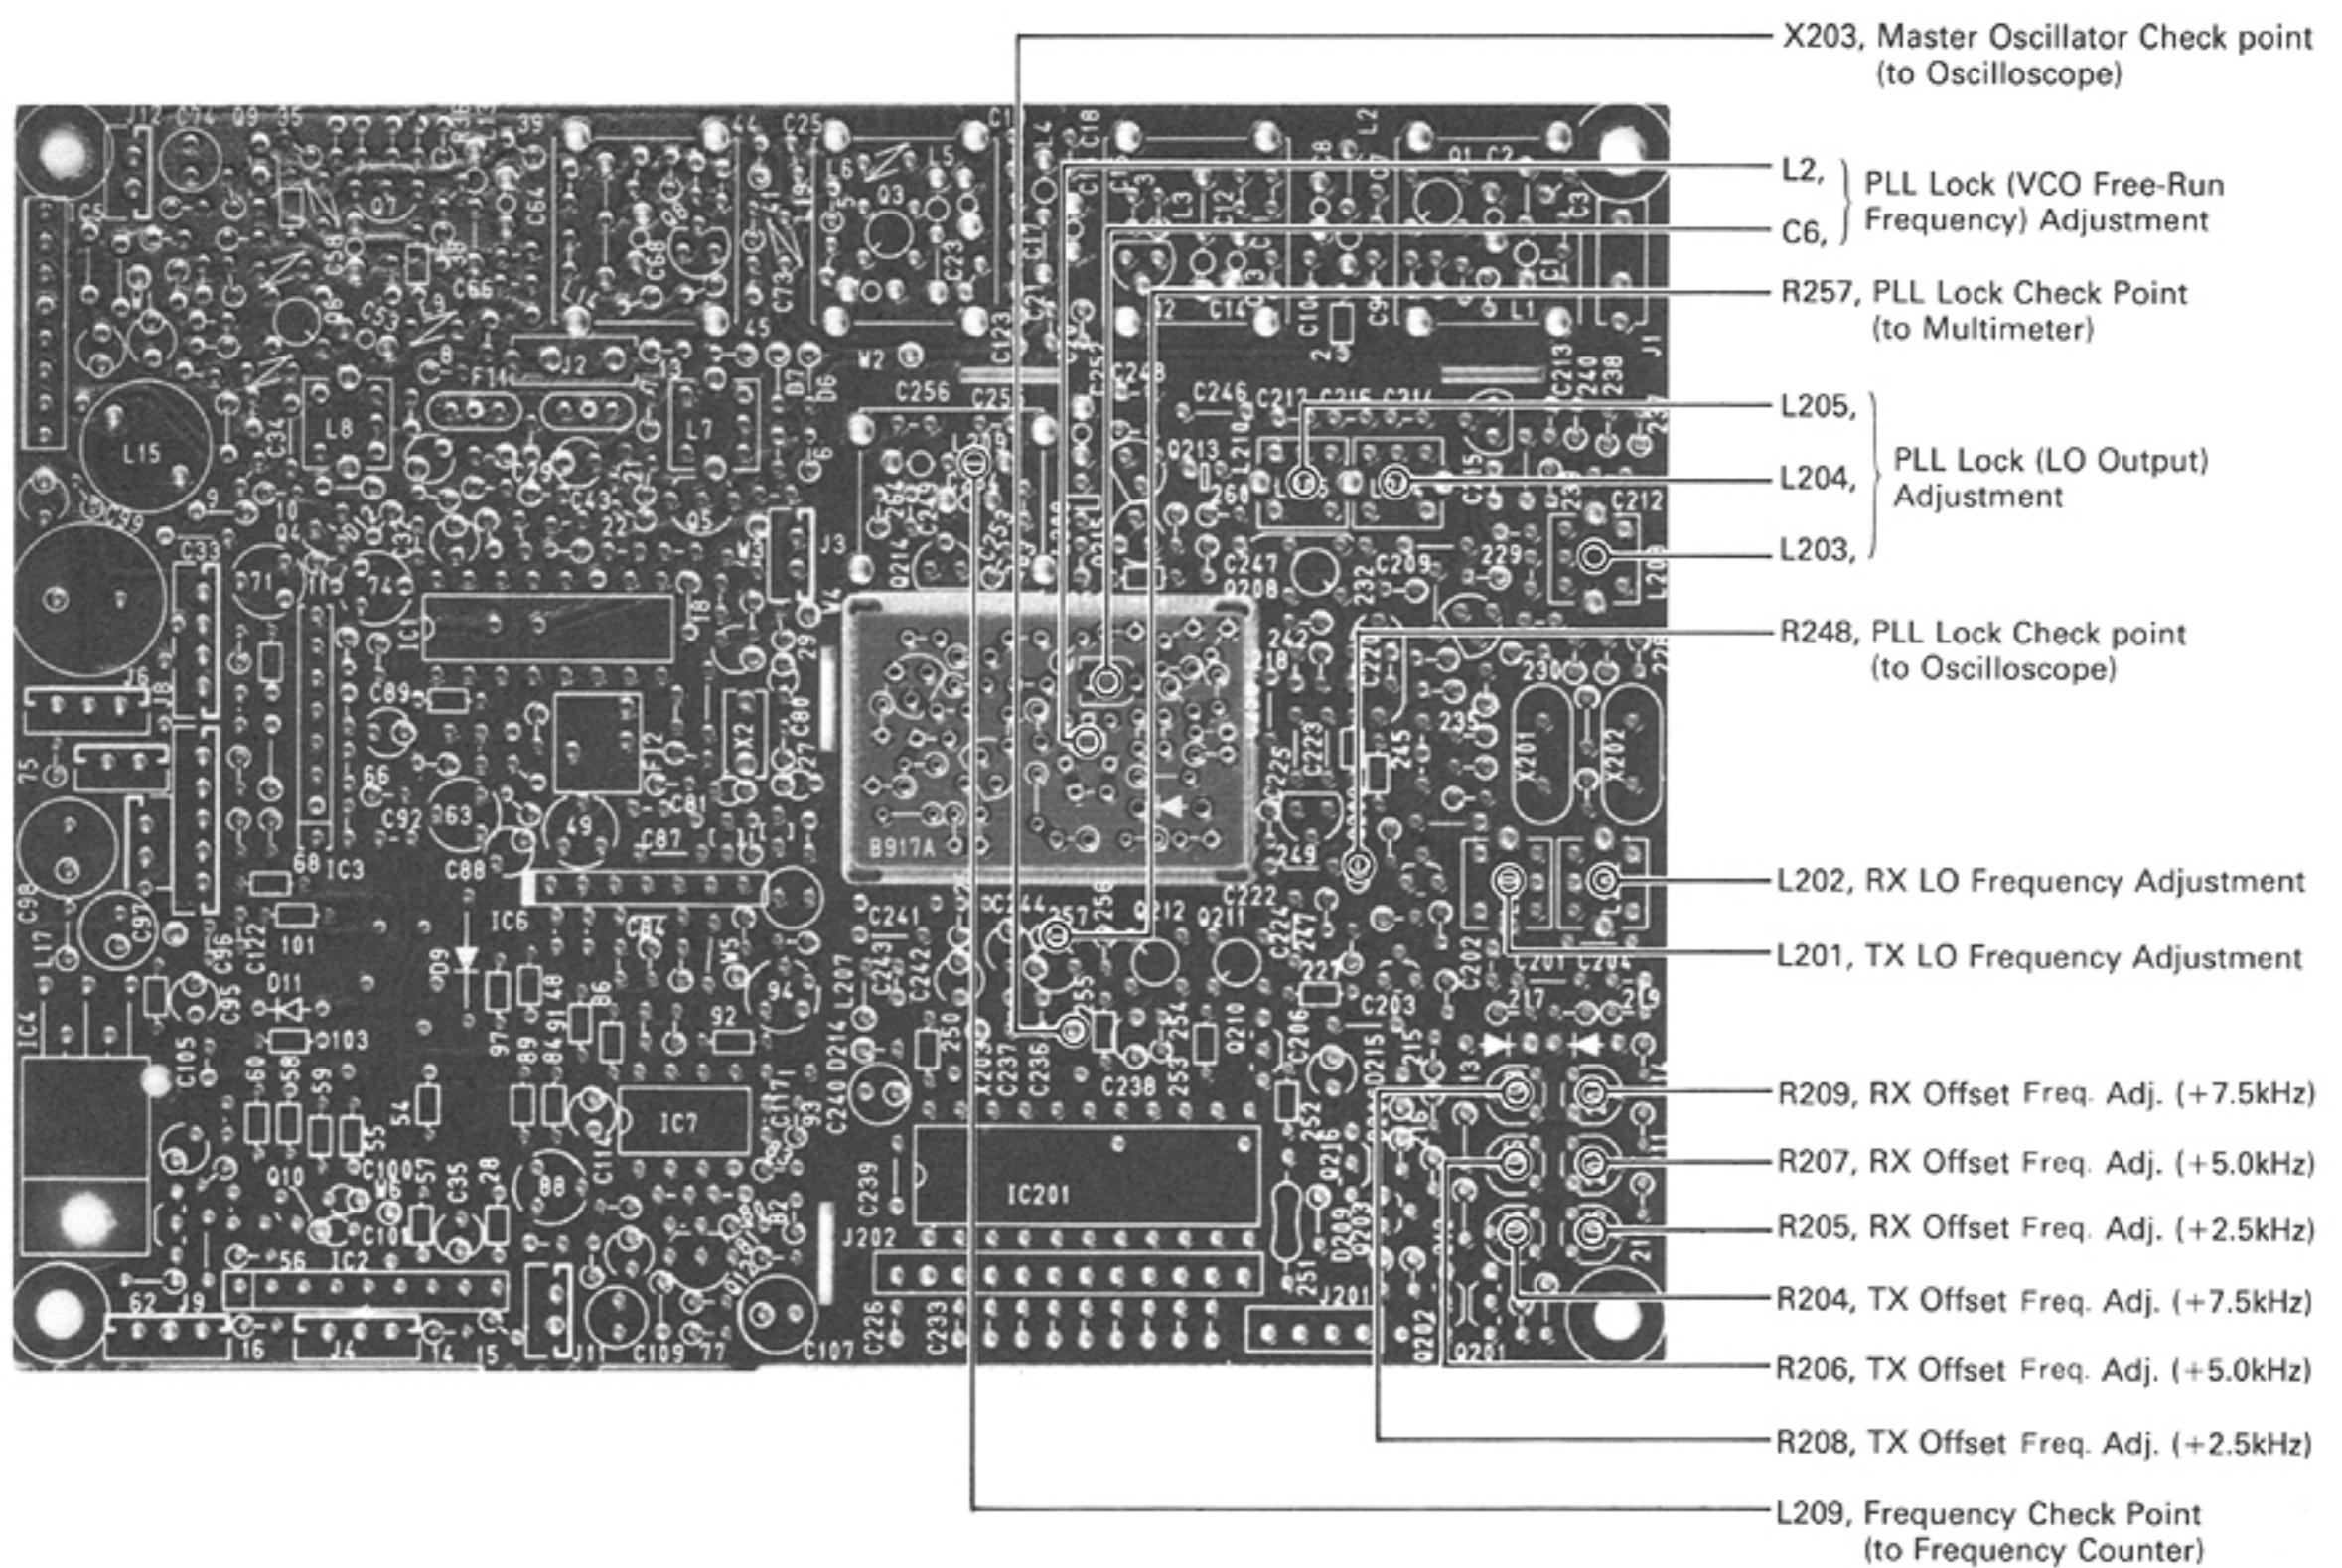

7 - 3 RECEIVER ADJUSTMENT

INSTRUMENTS REQUIRED			CONNECTIONS			
(1) VOLTAGE REGULATED POWER SUPPLY : OUTPUT VOLTAGE DC13.8V ± 15% : CURRENT CAPACITY MORE THAN 7A			<p>(1) VOLTAGE REGULATED POWER SUPPLY</p> <p>(3) AC MILLIVOLTMETER</p> <p>(2) SSG.</p> <p>(5) MULTIMETER</p> <p>O J8 PIN2</p> <p>EXT SP</p> <p>ANT</p>			
(2) STANDARD SIGNAL GENERATOR (SSG.) : FREQUENCY RANGE 0.1 ~ 470MHz : OUTPUT VOLTAGE -20 ~ +90dB μ (OdB μ = 1 μ V)			MAIN UNIT SIDE			
(3) AC MILLIVOLTMETER : MEASURING RANGE 0.001 ~ 3V			<p>(1) VOLTAGE REGULATED POWER SUPPLY</p> <p>(5) MULTIMETER</p> <p>(2) SSG.</p>			
(4) EXTERNAL SPEAKER : IMPEDANCE 8Ω			MAIN UNIT SIDE			
(5) MULTIMETER : INPUT IMPEDANCE 50kΩ/VOLT OR BETTER			<p>(1) VOLTAGE REGULATED POWER SUPPLY</p> <p>(7) OSCILLOSCOPE</p> <p>(8) DET</p> <p>Q3 Drain</p> <p>SYNC. IN</p> <p>ANT</p> <p>(6) SWEEP GENERATOR</p> <p>SYNC. OUT</p>			
(6) SWEEP GENERATOR : CENTER FREQUENCY 435MHz (IC-47E#04, 47A#07) 445MHz (IC-47A#05) : SWEEP BANDWIDTH ± 15MHz : OUTPUT IMPEDANCE 50Ω			MAIN UNIT SIDE			
(7) OSCILLOSCOPE (with external synchronization) : MEASURING RANGE 0.01 ~ 10V						
(8) DETECTOR (DET)						
<p>INPUT</p> <p>0.001</p> <p>1N60</p> <p>0.001</p> <p>100K</p> <p>OUTPUT (to oscilloscope)</p>						
Adjustment	Adjustment conditions	Unit	Adjustment location	Adjustment value	Unit	Adjustment Point
PRELIMINARY	1. • Check the sensitivity. (20dB noise quieting) • SQUELCH: CCW • No input to the ANTENNA CONNECTOR from the SSG.		Bridge the AC millivoltmeter to the EXT SPEAKER jack. Connect the external speaker.	Full Scale.		VOLUME
	NOTE: Do not readjust the VOLUME after this step.					
	2. • Set the SSG to receive frequency.		Connect the SSG to the ANTENNA CONNECTOR.	20dB decrease in level.		SSG level
	NOTE: The SSG output voltage is the 20dB quieting sensitivity.					
3. • Confirm the PLL works correctly.		See Section 7-2 PLL PRELIMINARY.				
4. • Check the receive path continuity. • Set the SSG for an FM test signal with 1kHz modulation. • Use a 0.01μF capacitor between the SSG and the test points. (A) L1 (B) L3 } Receive frequency. (C) L5 (D) Q3 Drain } 1st IF. (E) Q4 Base (F) IC1 Pin 16	MAIN	Monitor the receiver speaker.				
RF/IF STAGES	1. • Set the radio for the center radio's frequency range. 435MHz (IC-47E#04) (IC-47A#07), 445MHz (IC-47A#05). • Set the SSG for the receive frequency. • Reduce the output level so the RF voltmeter reads just above the noise.	MAIN	Connect the RF voltmeter to IC1 pin 16. (Or connect the multimeter to J8 pin 2.)	Maximum RF voltmeter (or multimeter).	PLL MAIN	C252 C254 C24 L7 L8
	NOTE: Final settings should produce 20dB quieting for a -8dB μ (0.4 μ V) signal. See PRELIMINARY section for method of measuring 20dB quieting level.					
RF AMPLIFIER	NOTE: Do not adjust C2, C8, C14, C16 and C22 without the instruments (6), (7) and (8). Contact your nearest ICOM service agency if you need adjustment.					
	1. • Connect a short jumper wire between L207 and GND. • Inject a -30dBm sweep signal to the ANTENNA CONNECTOR.	MAIN	Connect the DET to Q3 Drain.	Wave of DET output: Desired bandwidth	MAIN	C2 C8 C14 C16 C22
S-METER	1. • Set the radio for the center radio's frequency range. • Set the SSG for the receive frequency and +0dB μ output.		S-METER	2 segments.	MAIN	R49
	2. • Confirm linearity of S-METER. • Set the SSG for +30dB μ .			7 segments.		Verify

MAIN/PLL UNIT

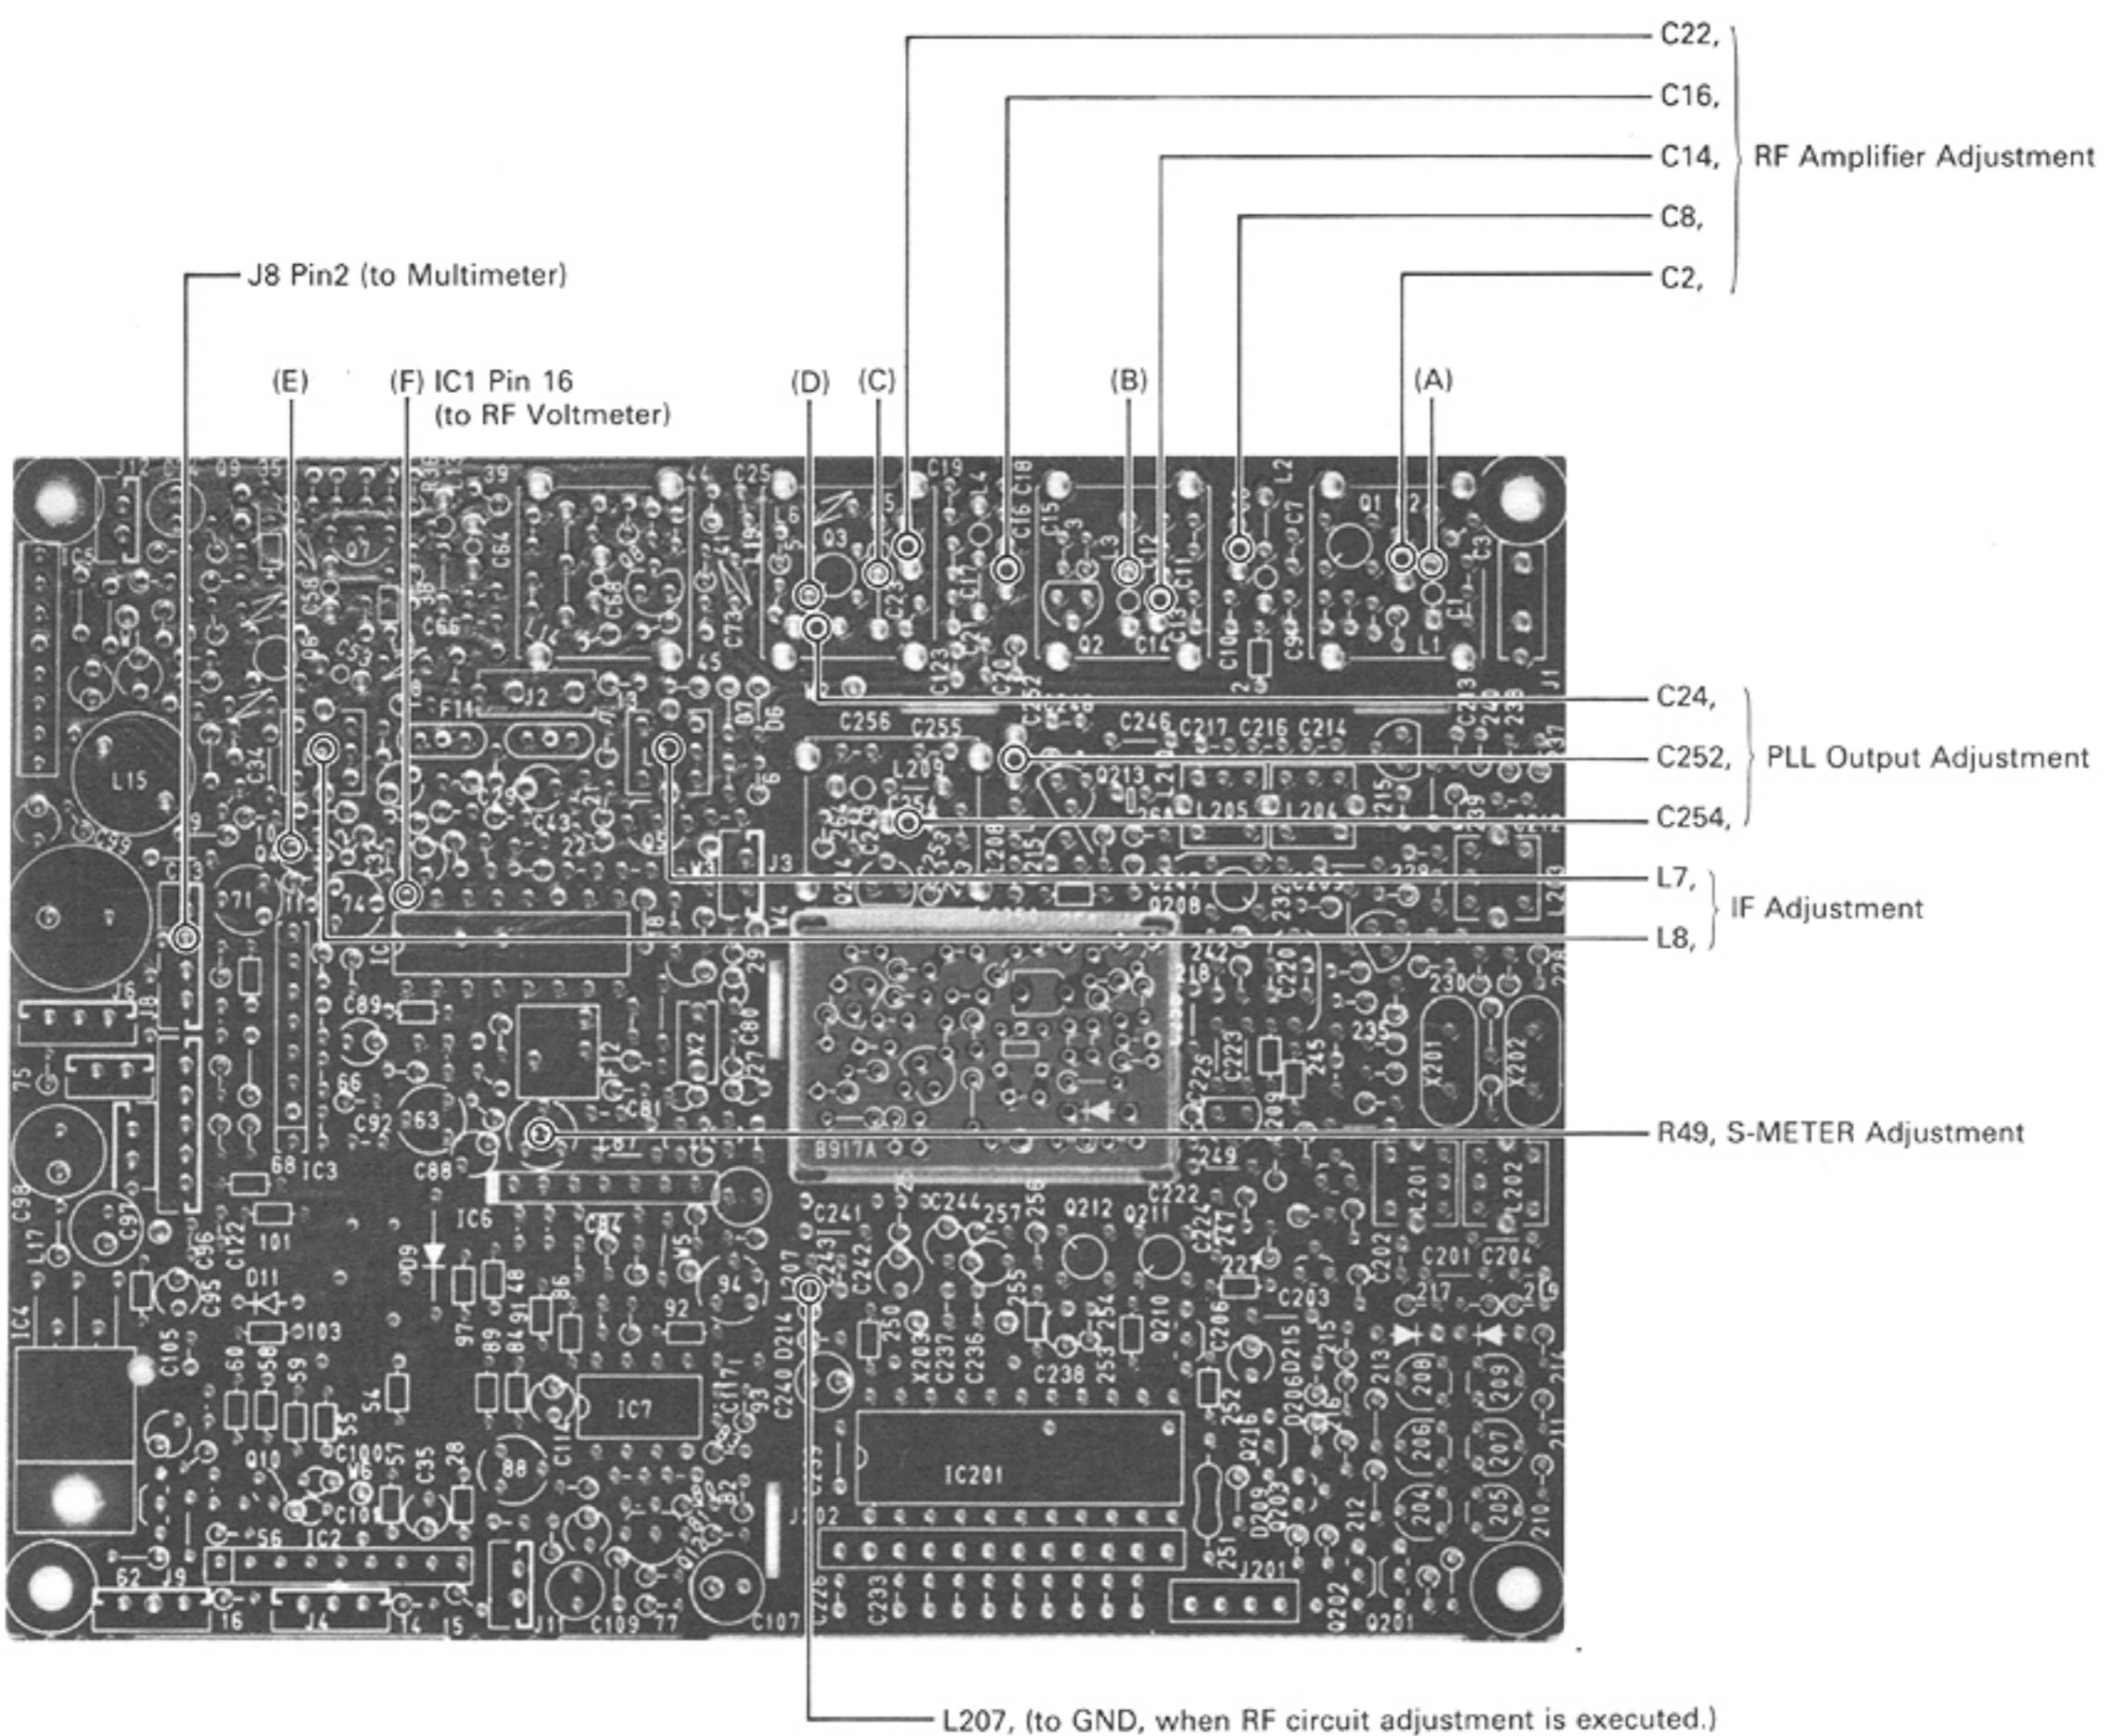

7 - 4 TRANSMITTER ADJUSTMENT

INSTRUMENTS REQUIRED		CONNECTIONS					
(1) VOLTAGE REGULATED POWER SUPPLY : OUTPUT VOLTAGE DC 13.8V ± 15% : CURRENT CAPACITY MORE THAN 7A							
(2) RF POWER METER (TERMINATED TYPE) : MEASURING RANGE 30 watts : FREQUENCY RANGE 400 ~ 470MHz : IMPEDANCE 50Ω : SWR LESS THAN 1.1							
(3) FM DEVIATION METER : FREQUENCY RANGE 400 ~ 470MHz : MEASURING RANGE 0 ~ ±10kHz							
(4) DIRECTIONAL COUPLER : FREQUENCY RANGE 400 ~ 470MHz : MEASURING RANGE 50Ω							
(5) AF OSCILLATOR : OUTPUT FREQUENCY RANGE 200 ~ 3000Hz : OUTPUT VOLTAGE 0 ~ 300mV							
(6) AC MILLIVOLTMETER : MEASURING RANGE 0.001 ~ 3V							
(7) RF VOLTMETER : FREQUENCY RANGE 0.1 ~ 470MHz : MEASURING RANGE 0.001 ~ 3V							
Adjustment		Adjustment conditions	Unit	Adjustment location	Adjustment value	Unit	
PRELIMINARY	1.	• Check the RF output power with RF POWER switch in HIGH position. • Transmit mode.	MAIN	Connect the RF power meter to the ANTENNA CONNECTOR.	25W.		
	2.	• Check the main points in the transmission path. • Transmit mode.		Connect the RF voltmeter to: (A) Q214 collector, (PLL) (B) Q8 collector, (C) Q6 collector.	Verify RF is present.		
	3.	• If the output power is low, check the regulated power supply voltage. • Do not adjust the trimmers.		Connect the multimeter to: (D) J12 Pin2.	8.0 V.		
	4.	• Check the main audio voltages. • Transmit mode. Apply a 1kHz 65mV signal to MIC connector.		Connect the oscilloscope to: (E) IC7 pin 7, (F) IC7 pin 5, (G) IC7 pin 3.	Verify AF is present.		
OUTPUT POWER	1.	• Set operating frequency to the center of the frequency range: 435MHz (IC-47E#04) (IC-47A#07), 455MHz (IC-47A#05). • RF POWER SW.: HIGH • Turn R74 counterclockwise. • Transmit mode.		Connect the RF power meter to ANTENNA CONNECTOR.	Maximum power.	PLL	C252 C254
	2.	• RF POWER SW.: LOW		Connect the RF power meter to ANTENNA CONNECTOR.	MAIN	C53 C58 C64 C68	R74
ALC	3.	• Confirm correct power over radio's frequency range.			5W.	MAIN	R71
	1.	• RF POWER SW.: LOW • Transmit mode.		S/RF meter	4 segments.		R63
	2.	• RF POWER SW.: HIGH		Connect the RF power meter and the deviation meter to the ANTENNA CONNECTOR using a directional coupler.	±4.8kHz deviation.	MAIN	R94
DEVIATION, MODULATION SENSITIVITY, S/N RATIO	3.	• Deviation meter deemphasis: OFF • Transmit mode. • R88: center position. Apply a 1kHz 20mV RMS (IC-47E) (65mV RMS (IC-47A)) signal to the MIC connector.		Connect the RF power meter and the deviation meter to the ANTENNA CONNECTOR using a directional coupler.	±3.5kHz deviation.	MAIN	R88
	1.	• Check the transmit signal-to-noise ratio. • No audio input. • Transmit mode. Remove the oscillator signal.			S+N/N: more than 40dB		Verify
	2.	• Set the TONE number to 38. • DUPLEX mode. • Transmit mode.		deviation meter	±0.5kHz deviation.	LOGIC	R96

MAIN/PLL UNIT

C252, PLL Output Adjustment -

C254, PLL Output Adjustment -

C68, RF Circuit Adjustment —

C64, RF Circuit Adjustment —

C53, RF Circuit Adjustment —

C58, RF Circuit Adjustment —


R71, ALC Adjustment (28W) —

R74, ALC Adjustment (5W) —


R63, RF Meter Adjustment (4 Seg.)

B24 Deviation Adjustment (4.8kHz)

B88. Mic. GAIN Adjustment (3.5kHz)

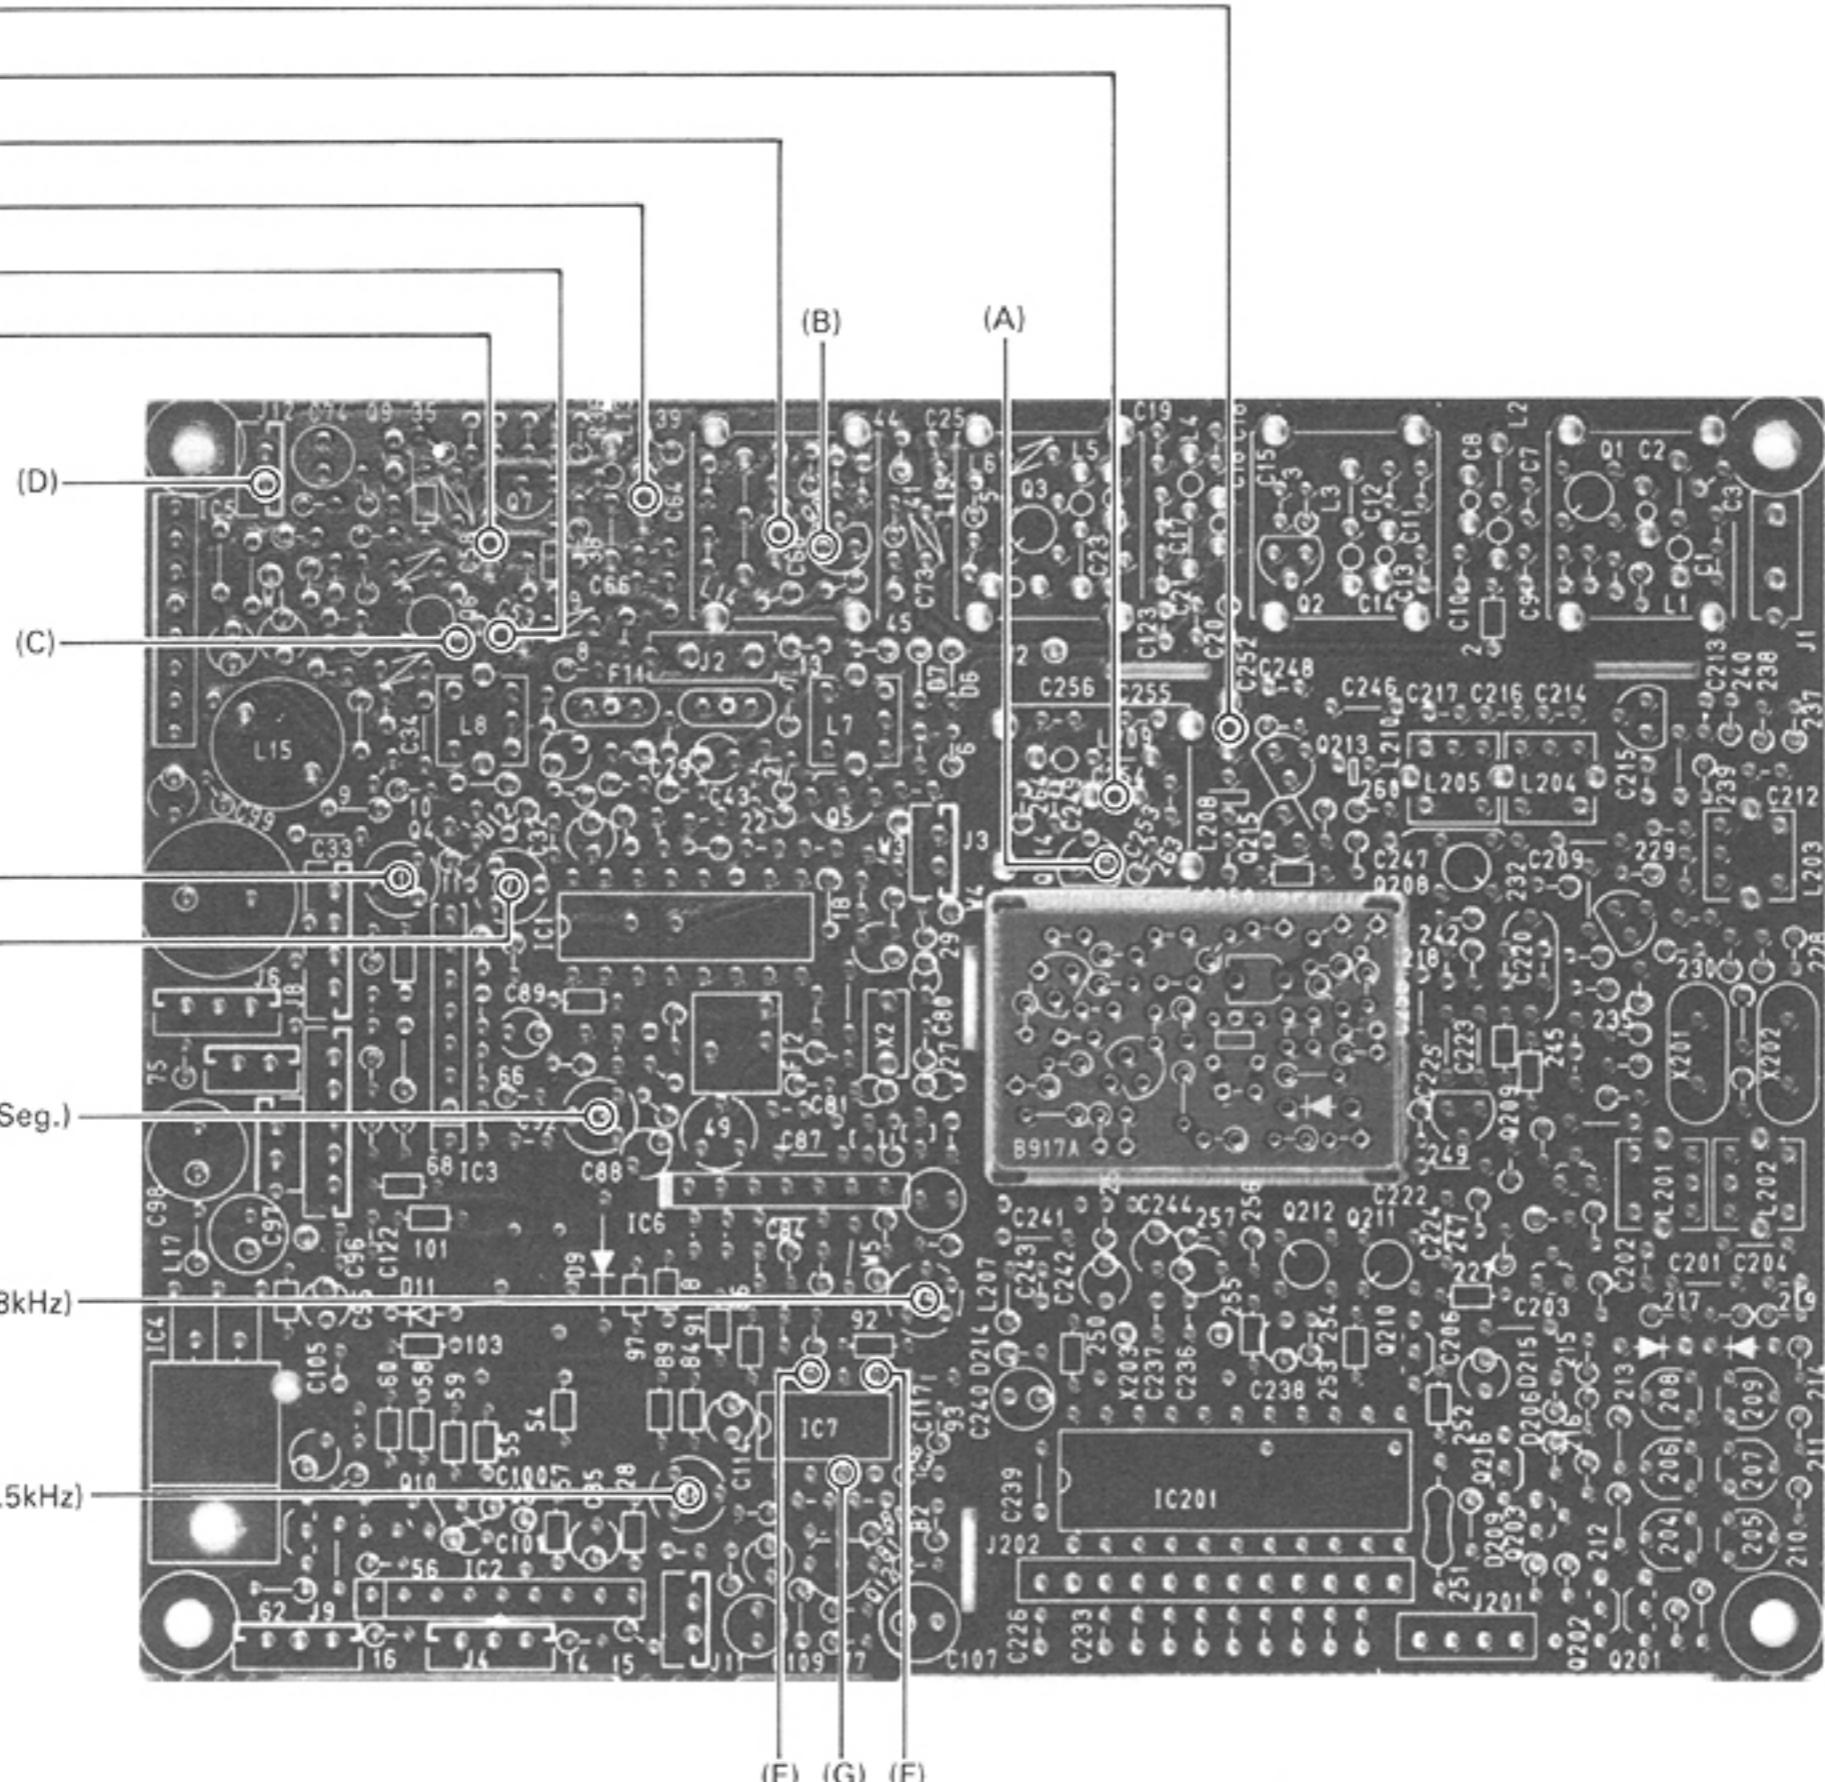



LOGIC UNIT

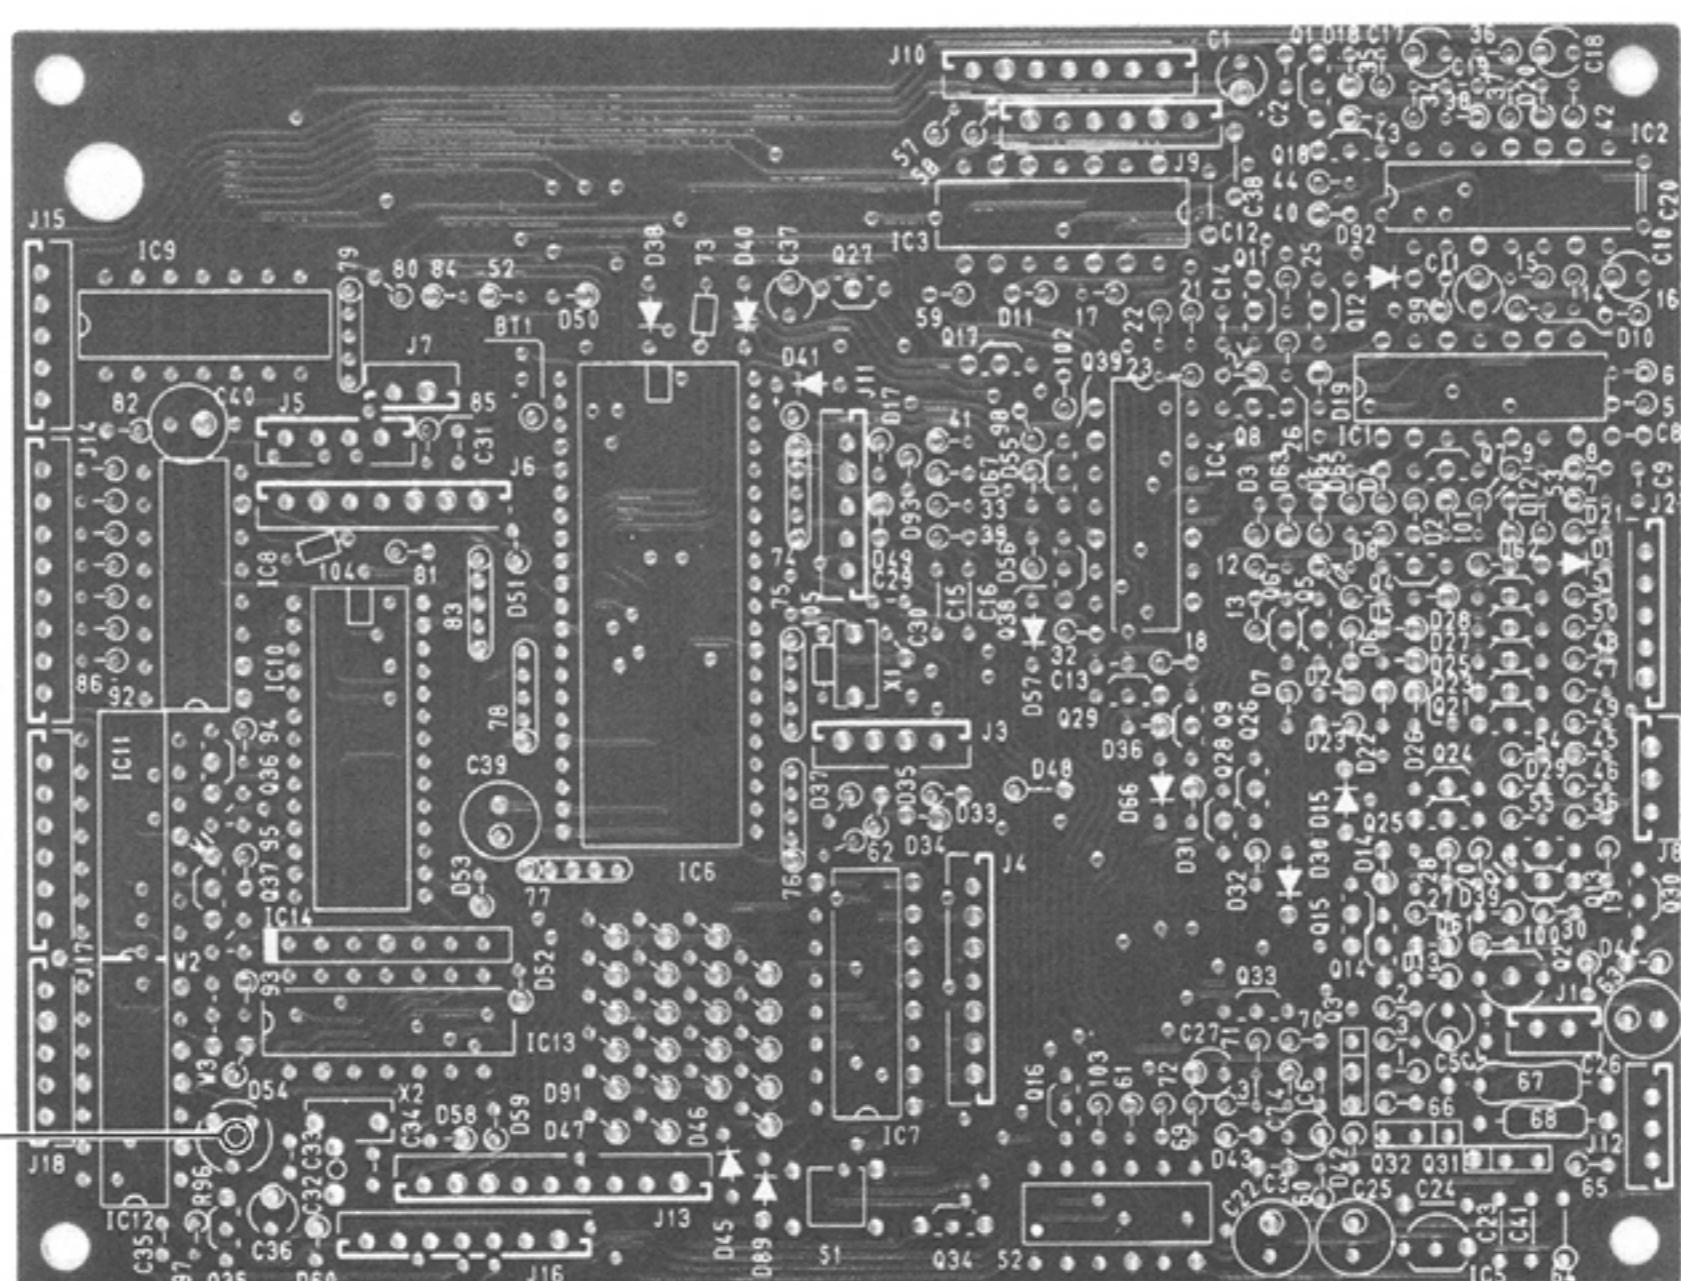

SECTION 8 VOLTAGE (CIRCUIT) DIAGRAMS

EF UNIT (#04)

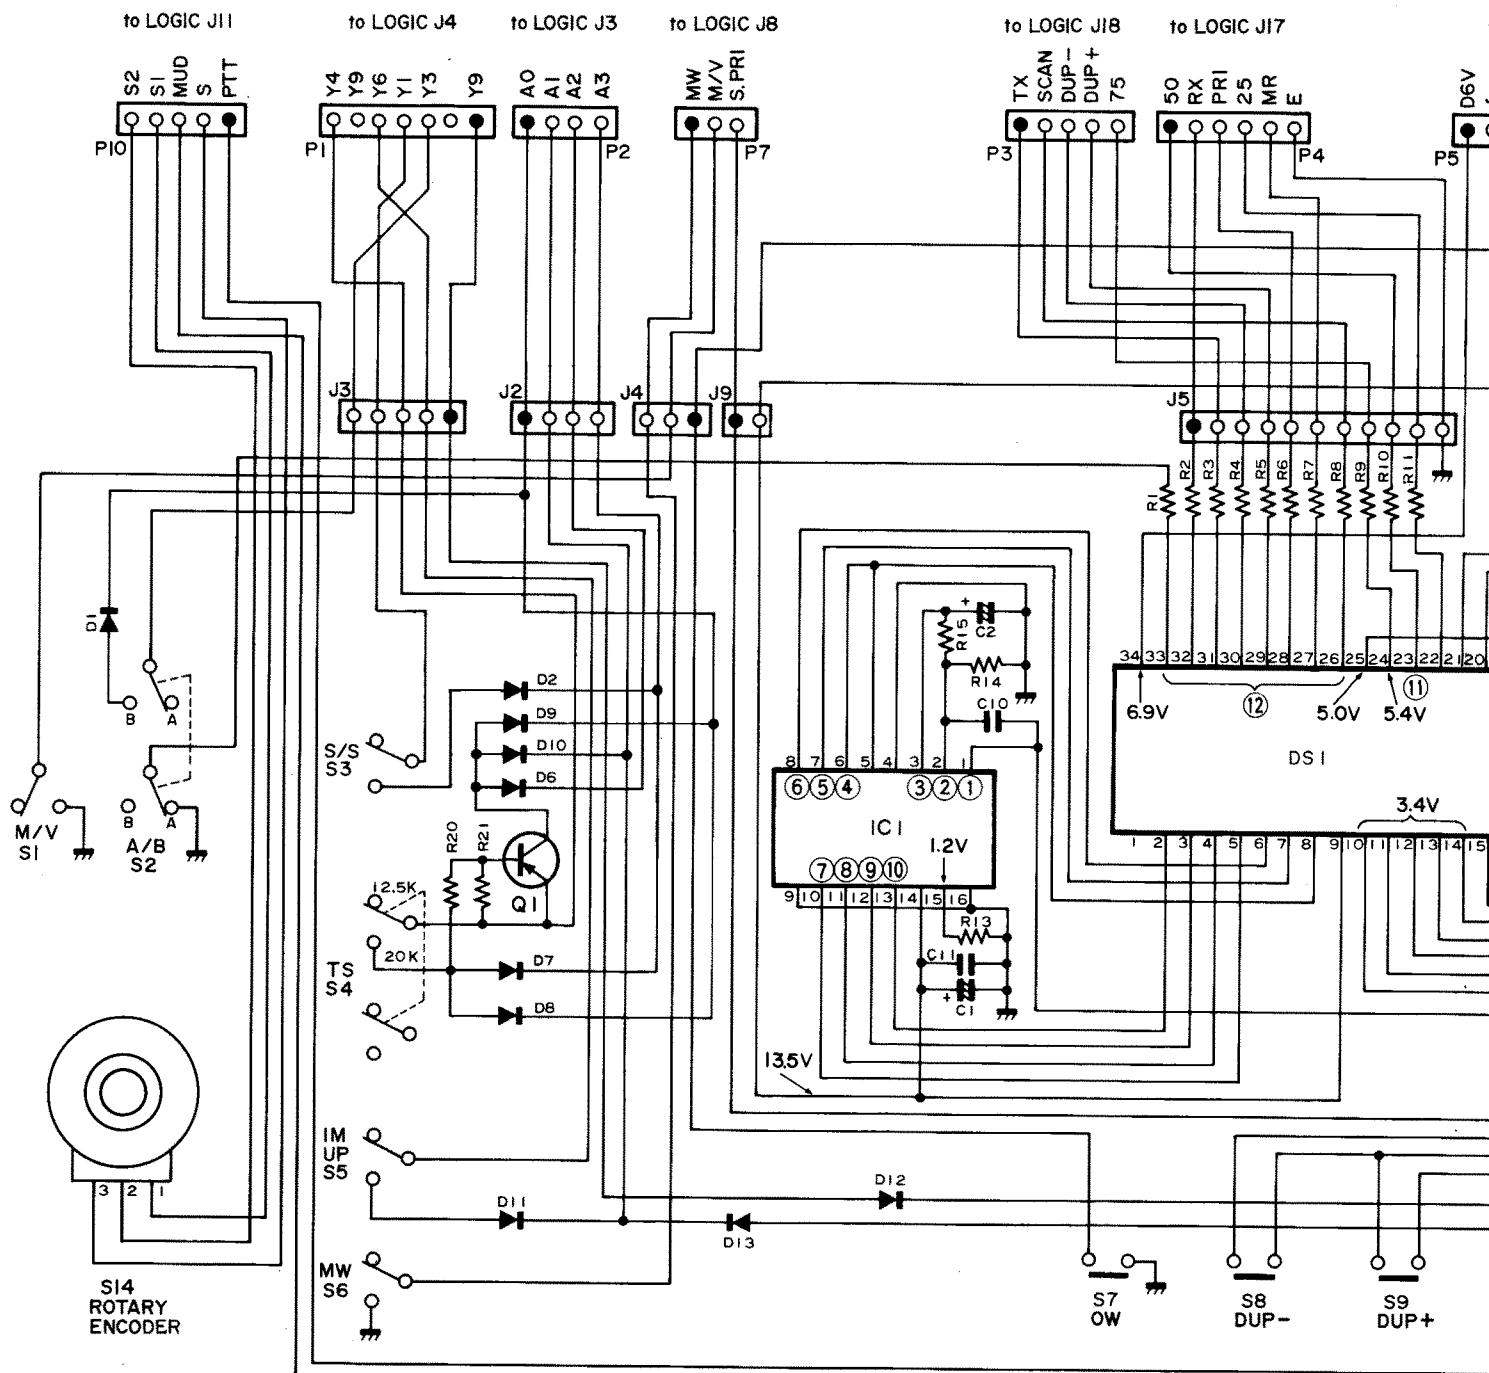

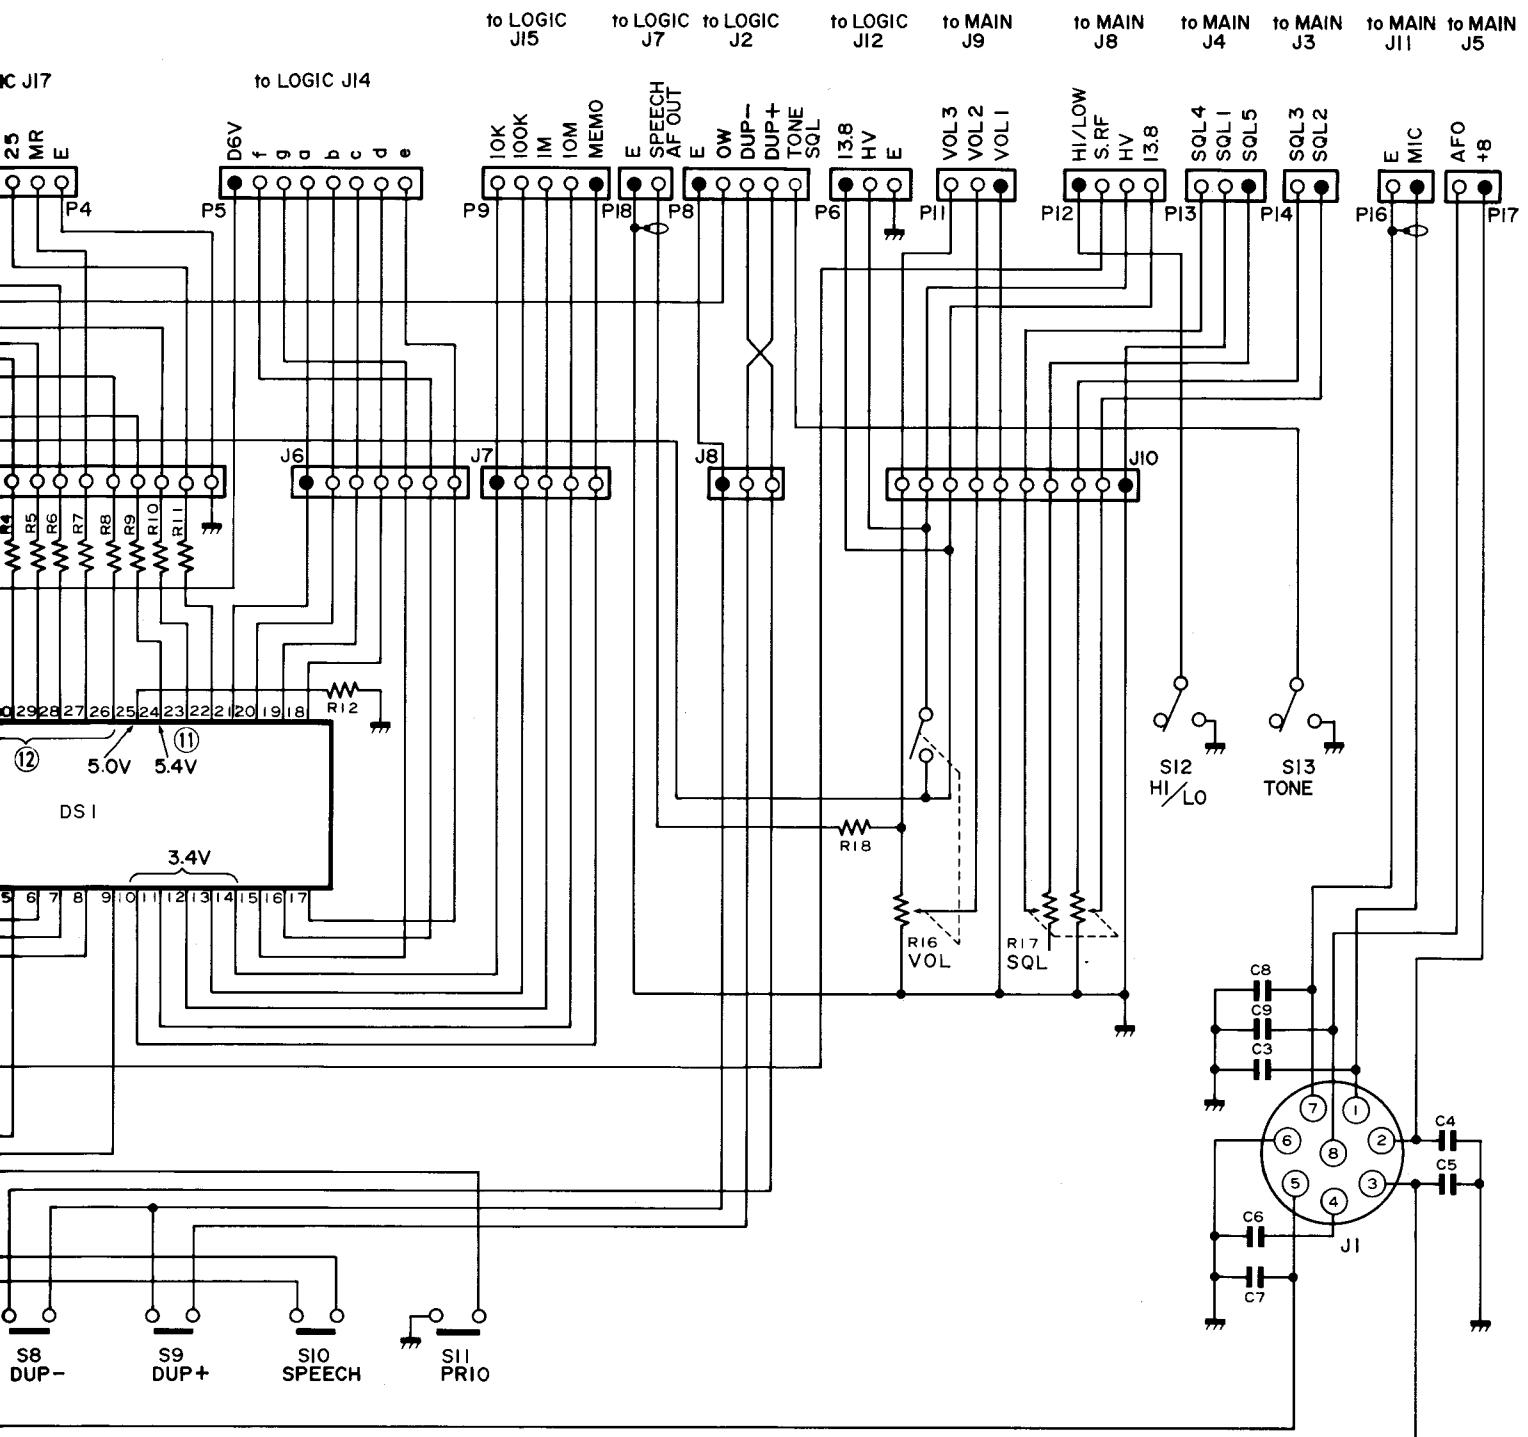



NO.	1	4	5	6	7	8	9	10	11	12	
L	OFF	0	11.9	10.3	11.8	10.1	11.7	10.1	11.7	5.4	54
E	ON	0.7	11.1	9.0	10.8	8.7	10.9	8.7	10.8	4.8	4.8

NO.	2	3
R X	0	0
T LOW	0.1	0.5
X H I	0.7	4.5

DC Voltage 50KΩ-V multimeter

EF UNIT (#05, 07)

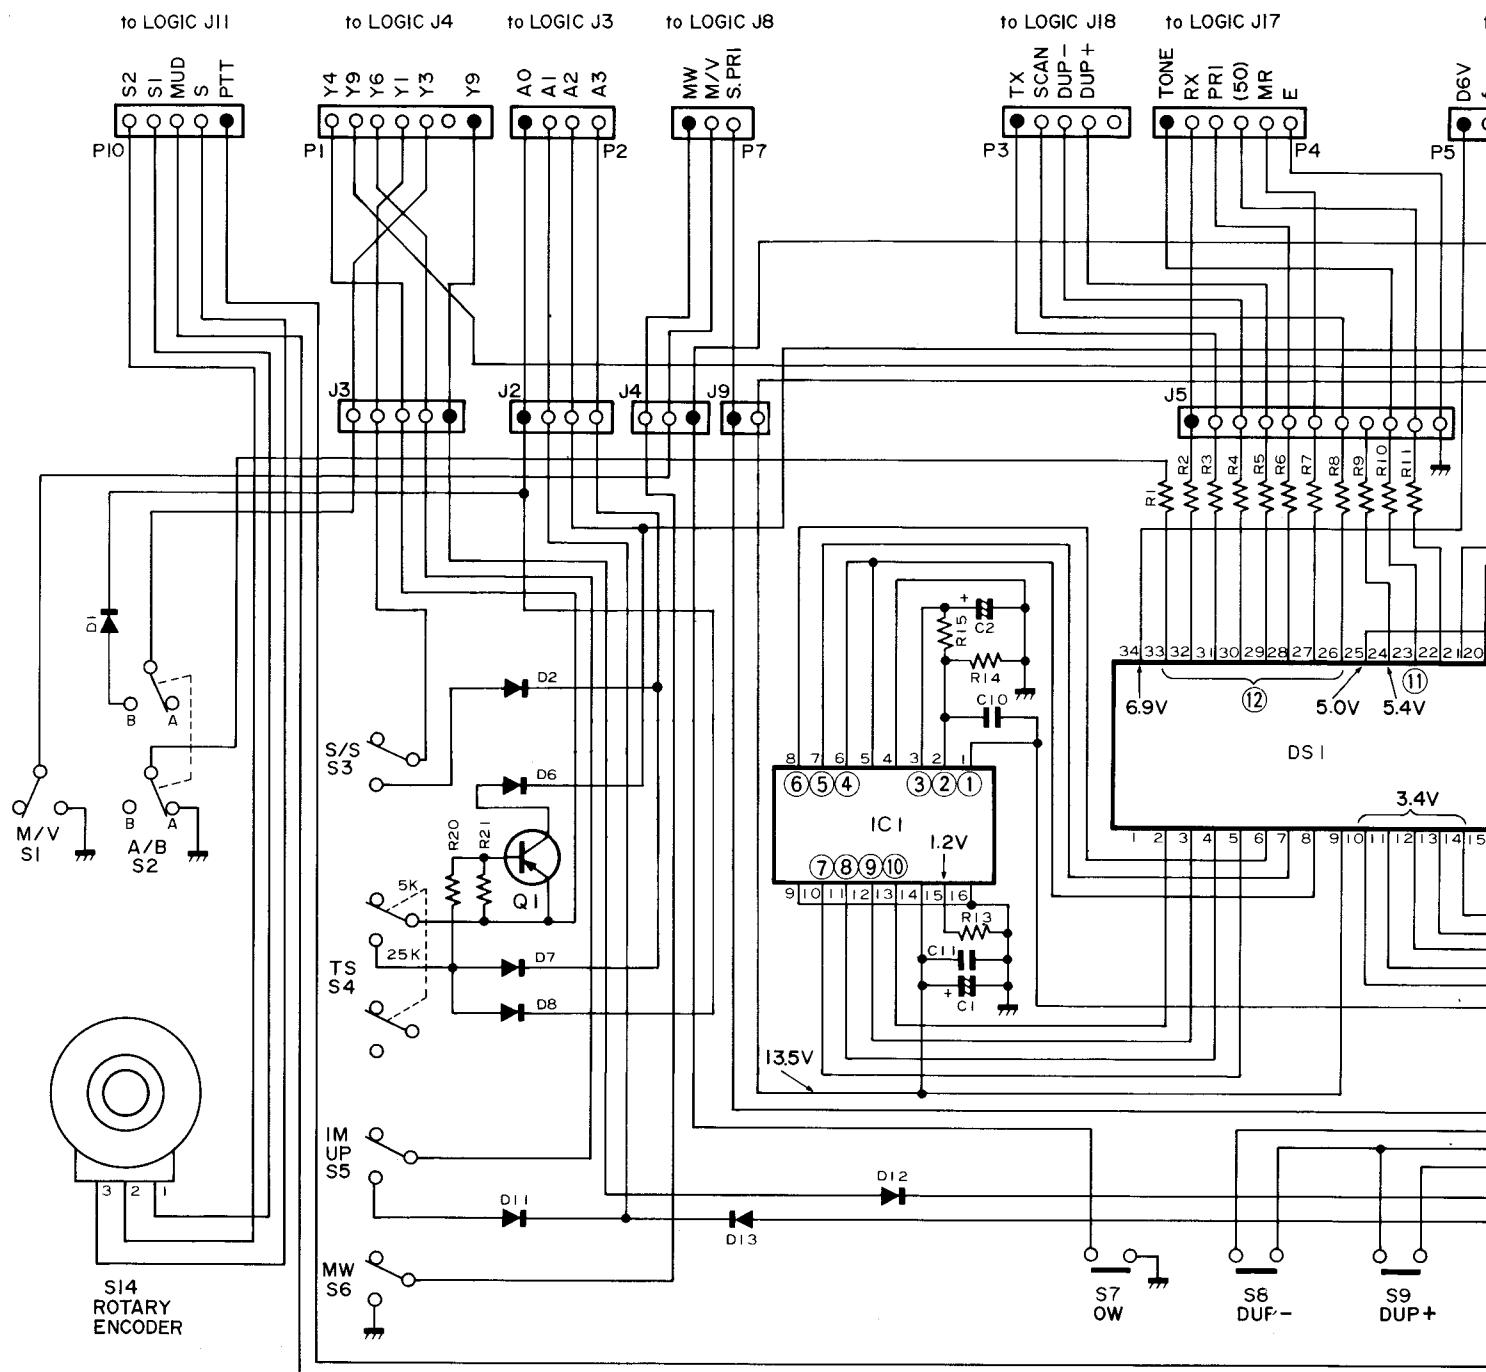

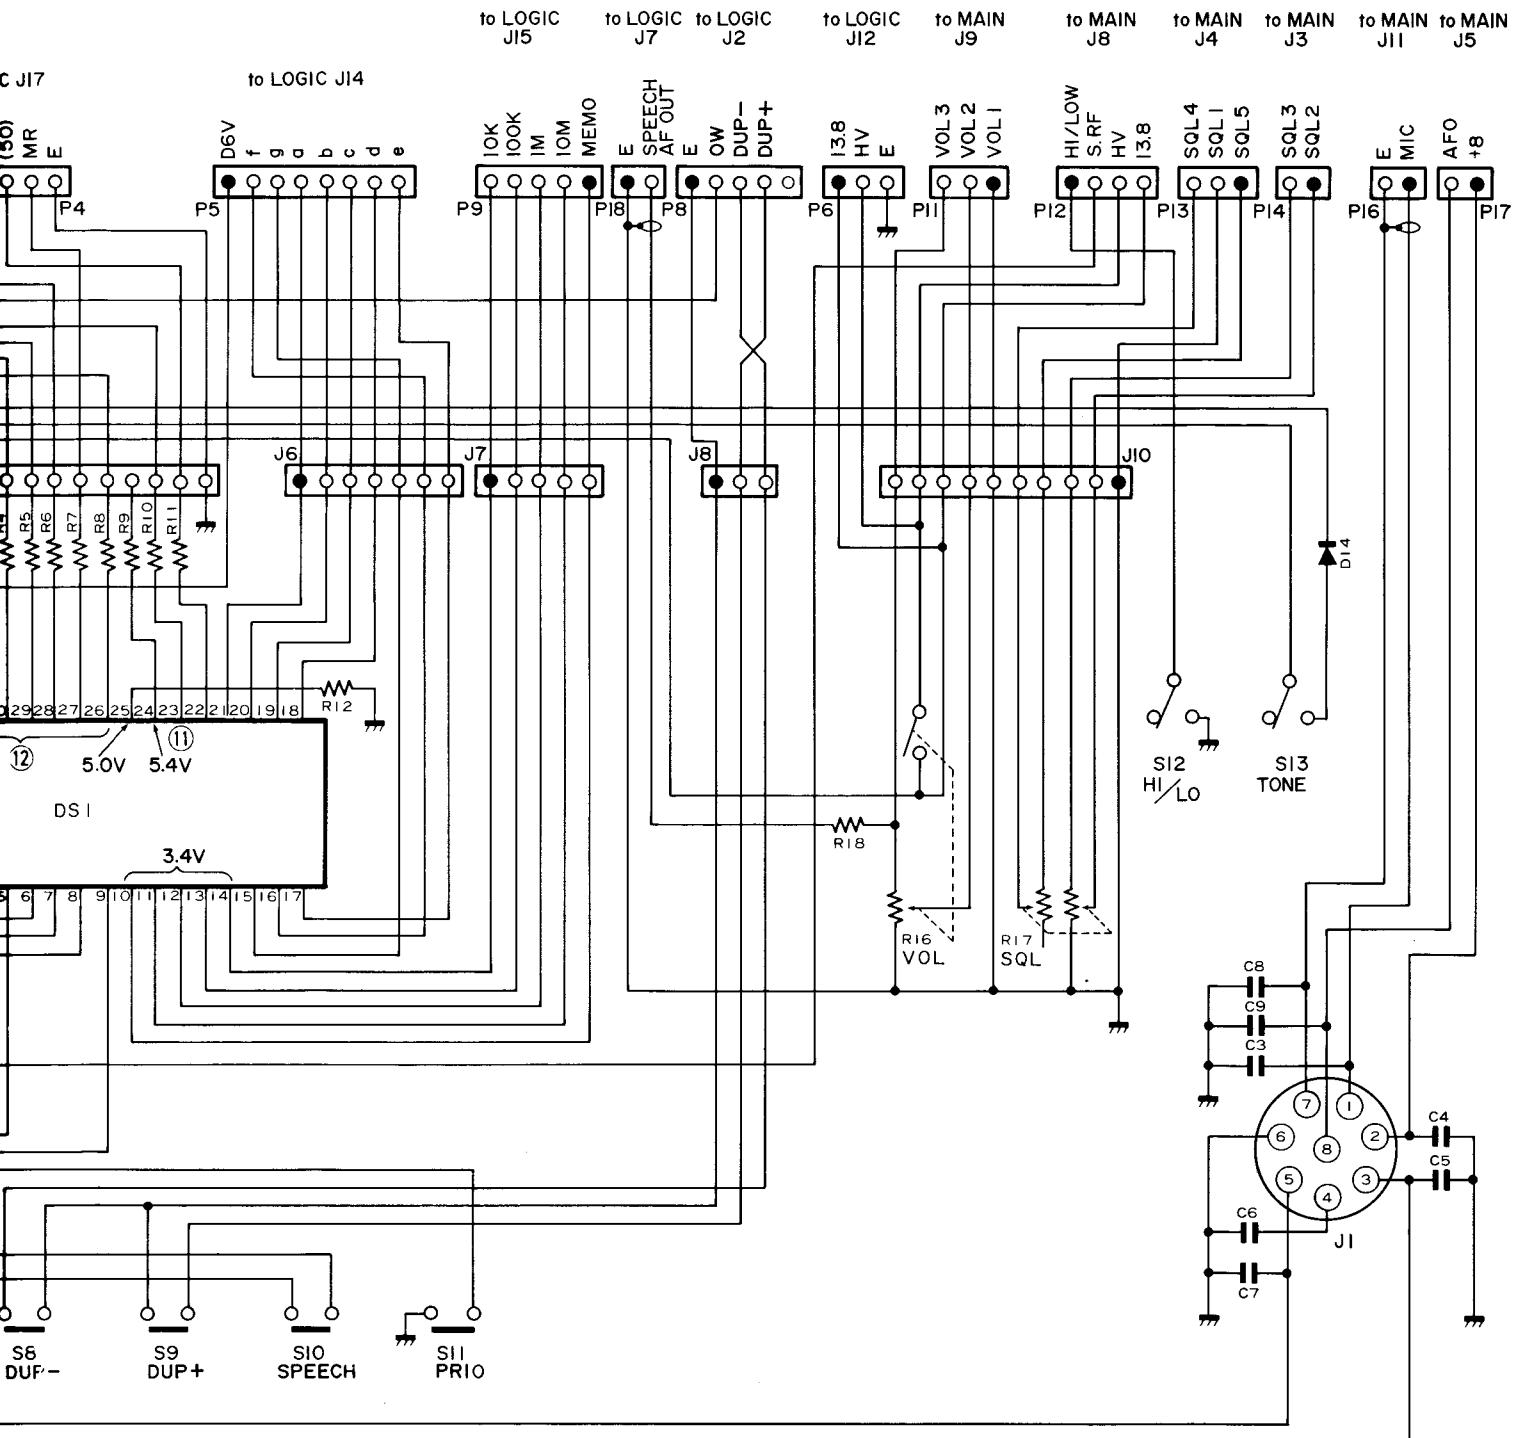



NO.	1	4	5	6	7	8	9	10	11	12
L	OFF	0	11.9	10.3	11.8	10.1	11.7	10.1	11.7	5.4
E	ON	0.7	11.1	9.0	10.8	8.7	10.9	8.7	10.8	4.8

NO.	2	3
R	X	0
T	LOW	0.1
X	H	0.7
		4.5


DC Voltage 50KΩ-V multimeter


MAIN UNIT

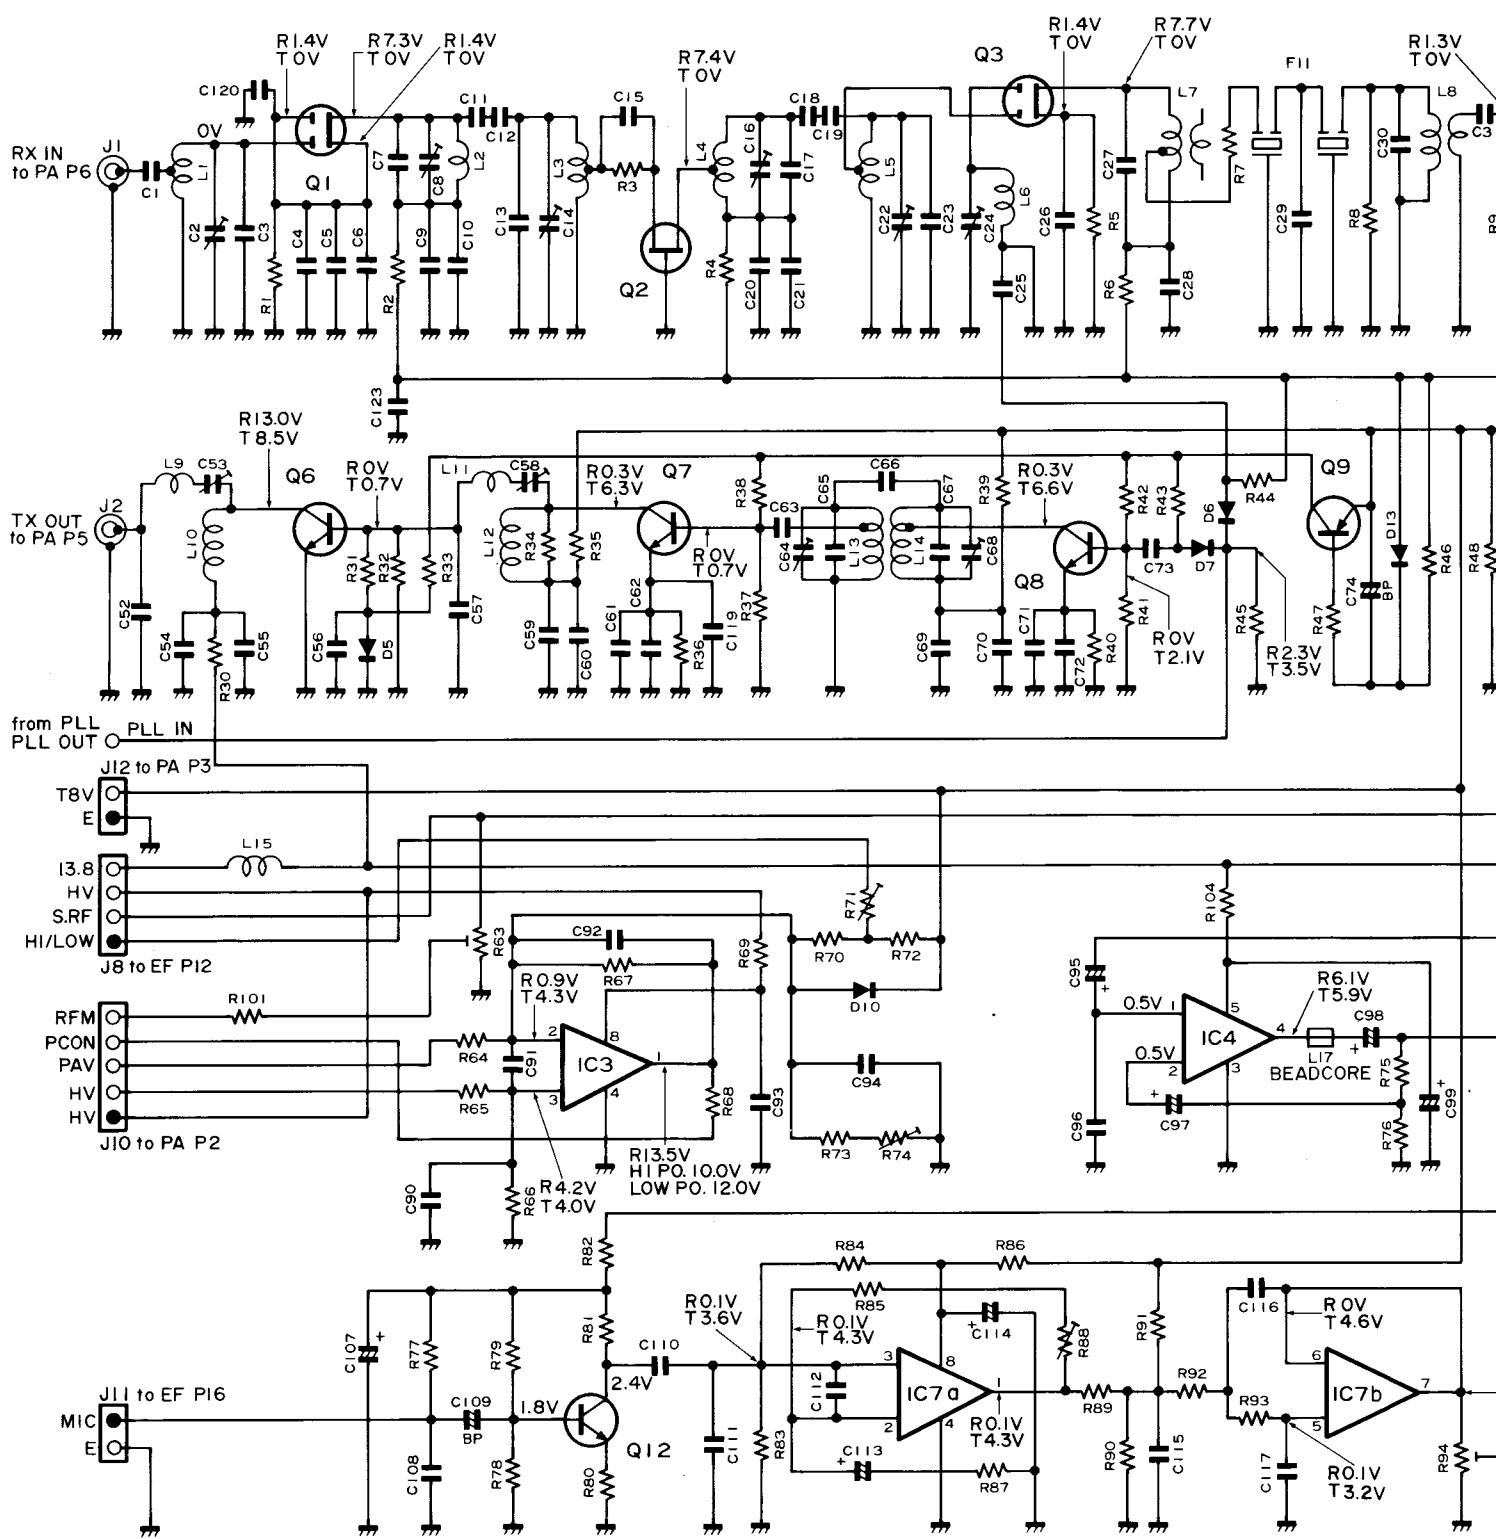

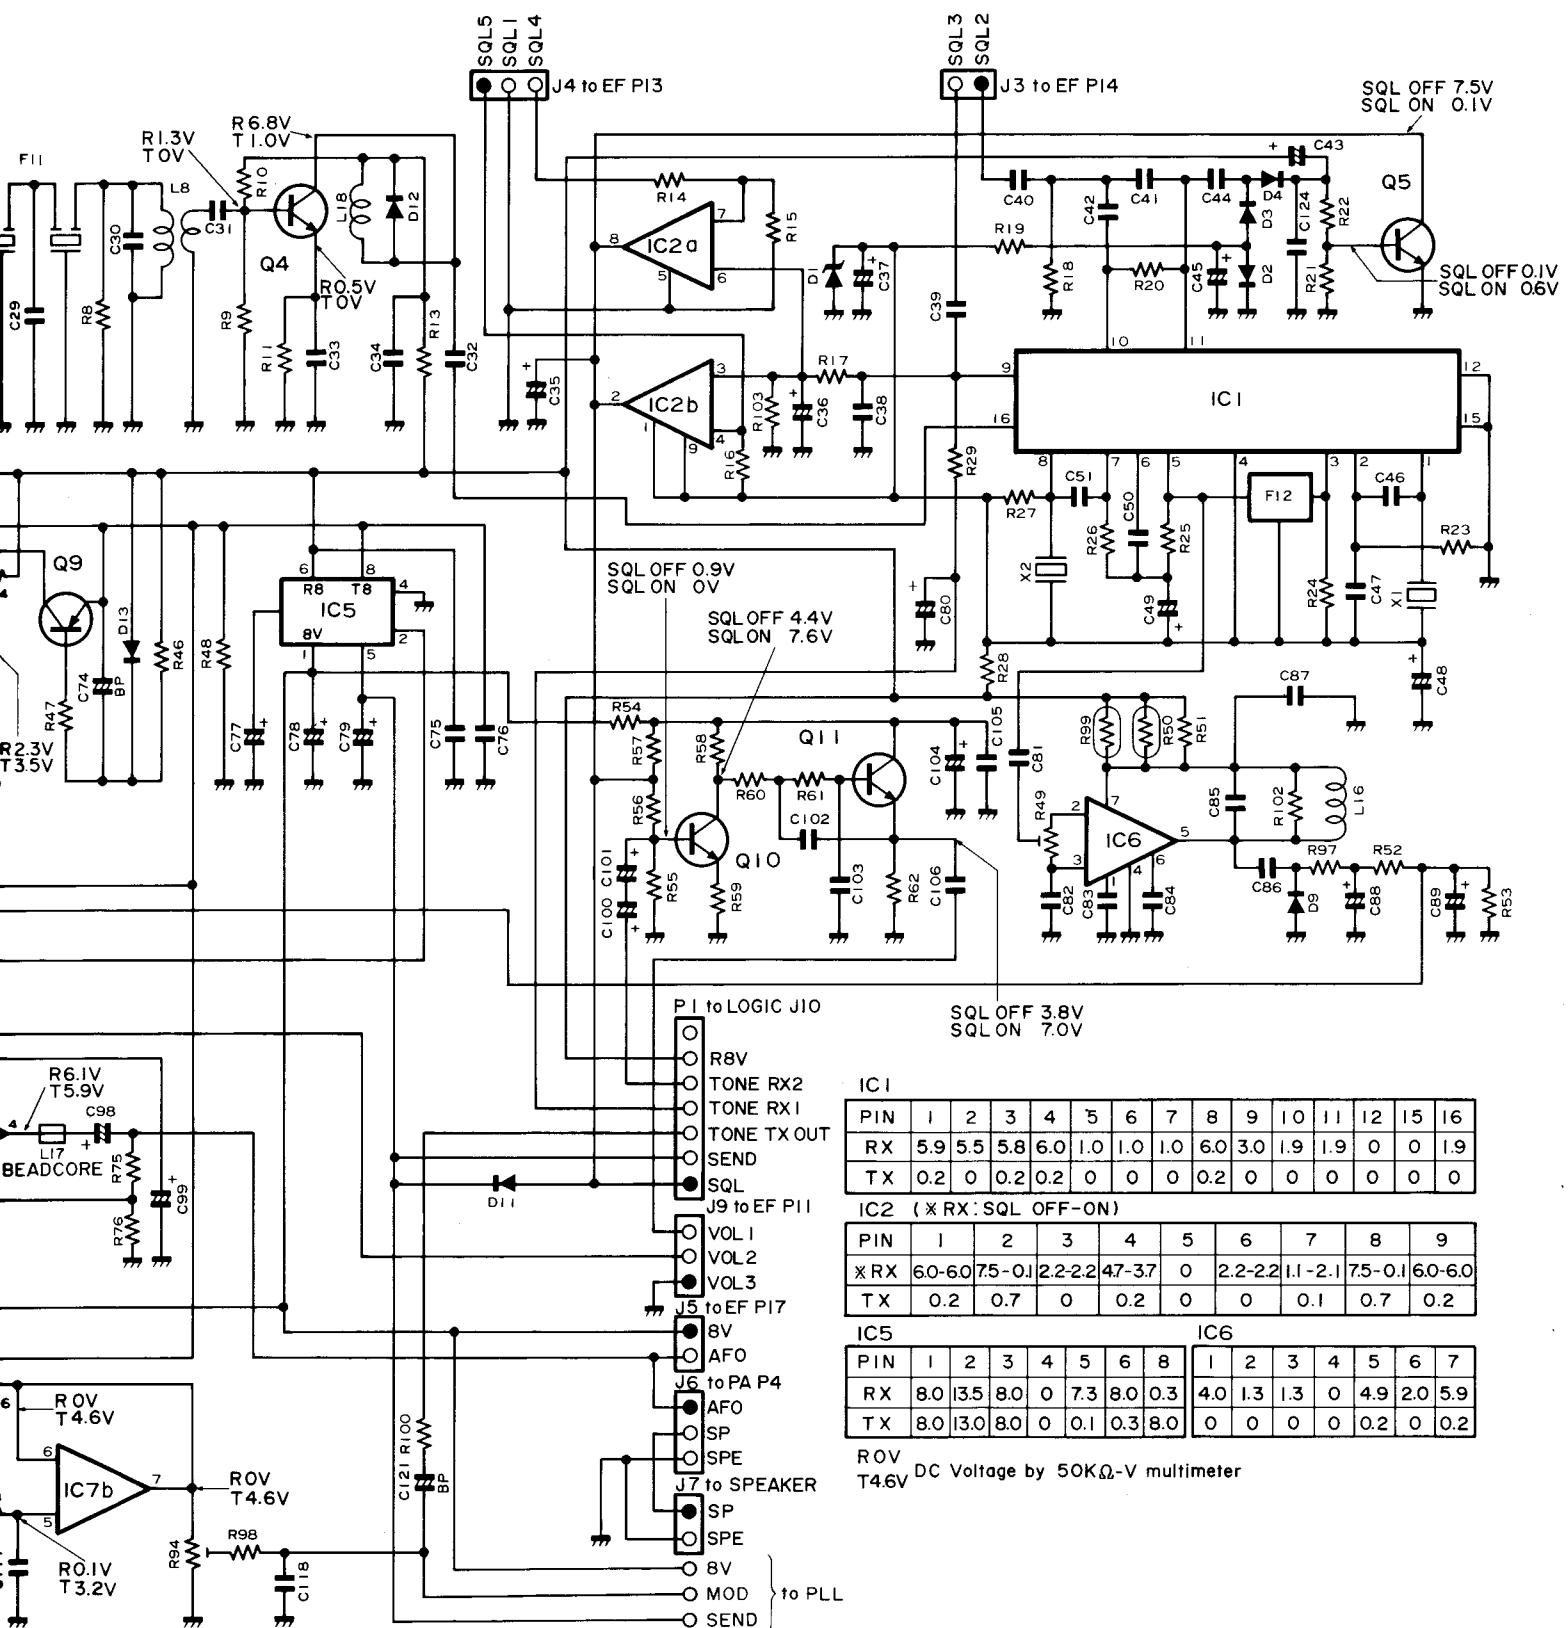



PLL/VCO UNIT

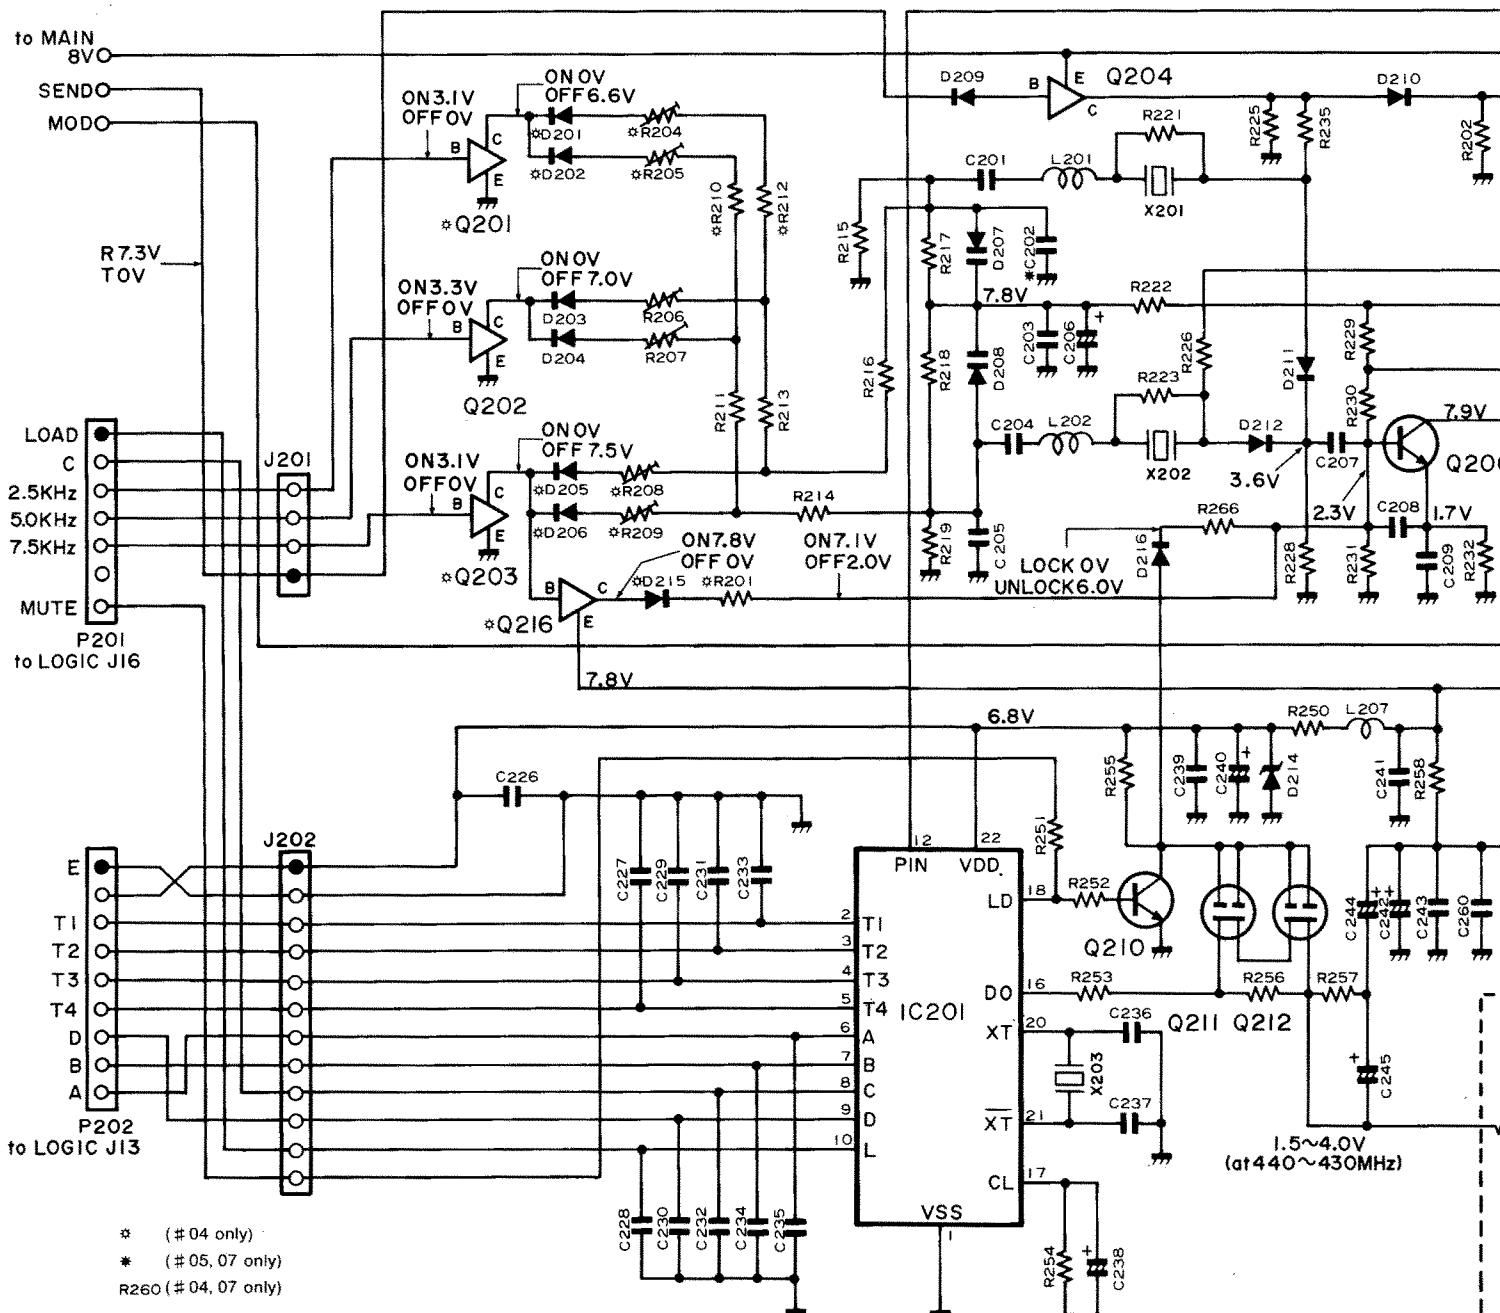

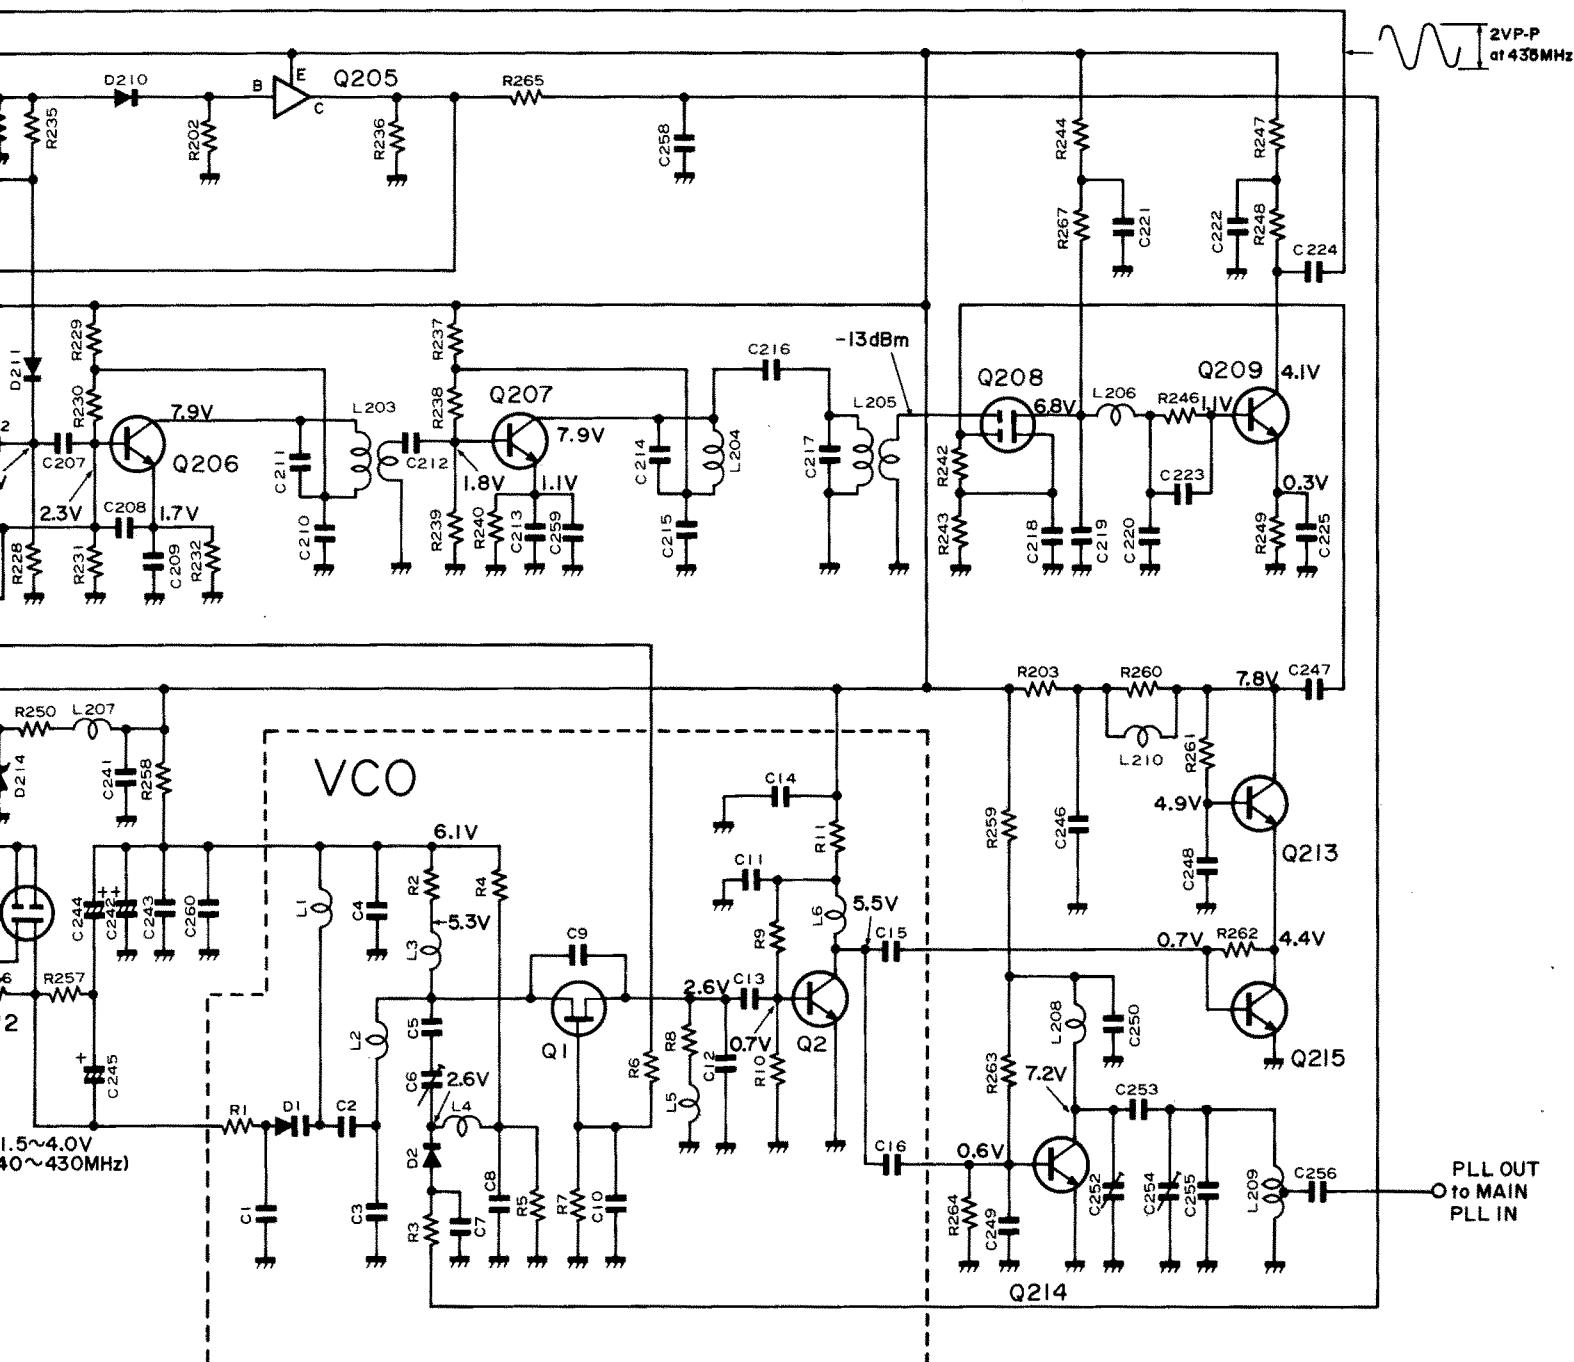














LOGIC UNIT





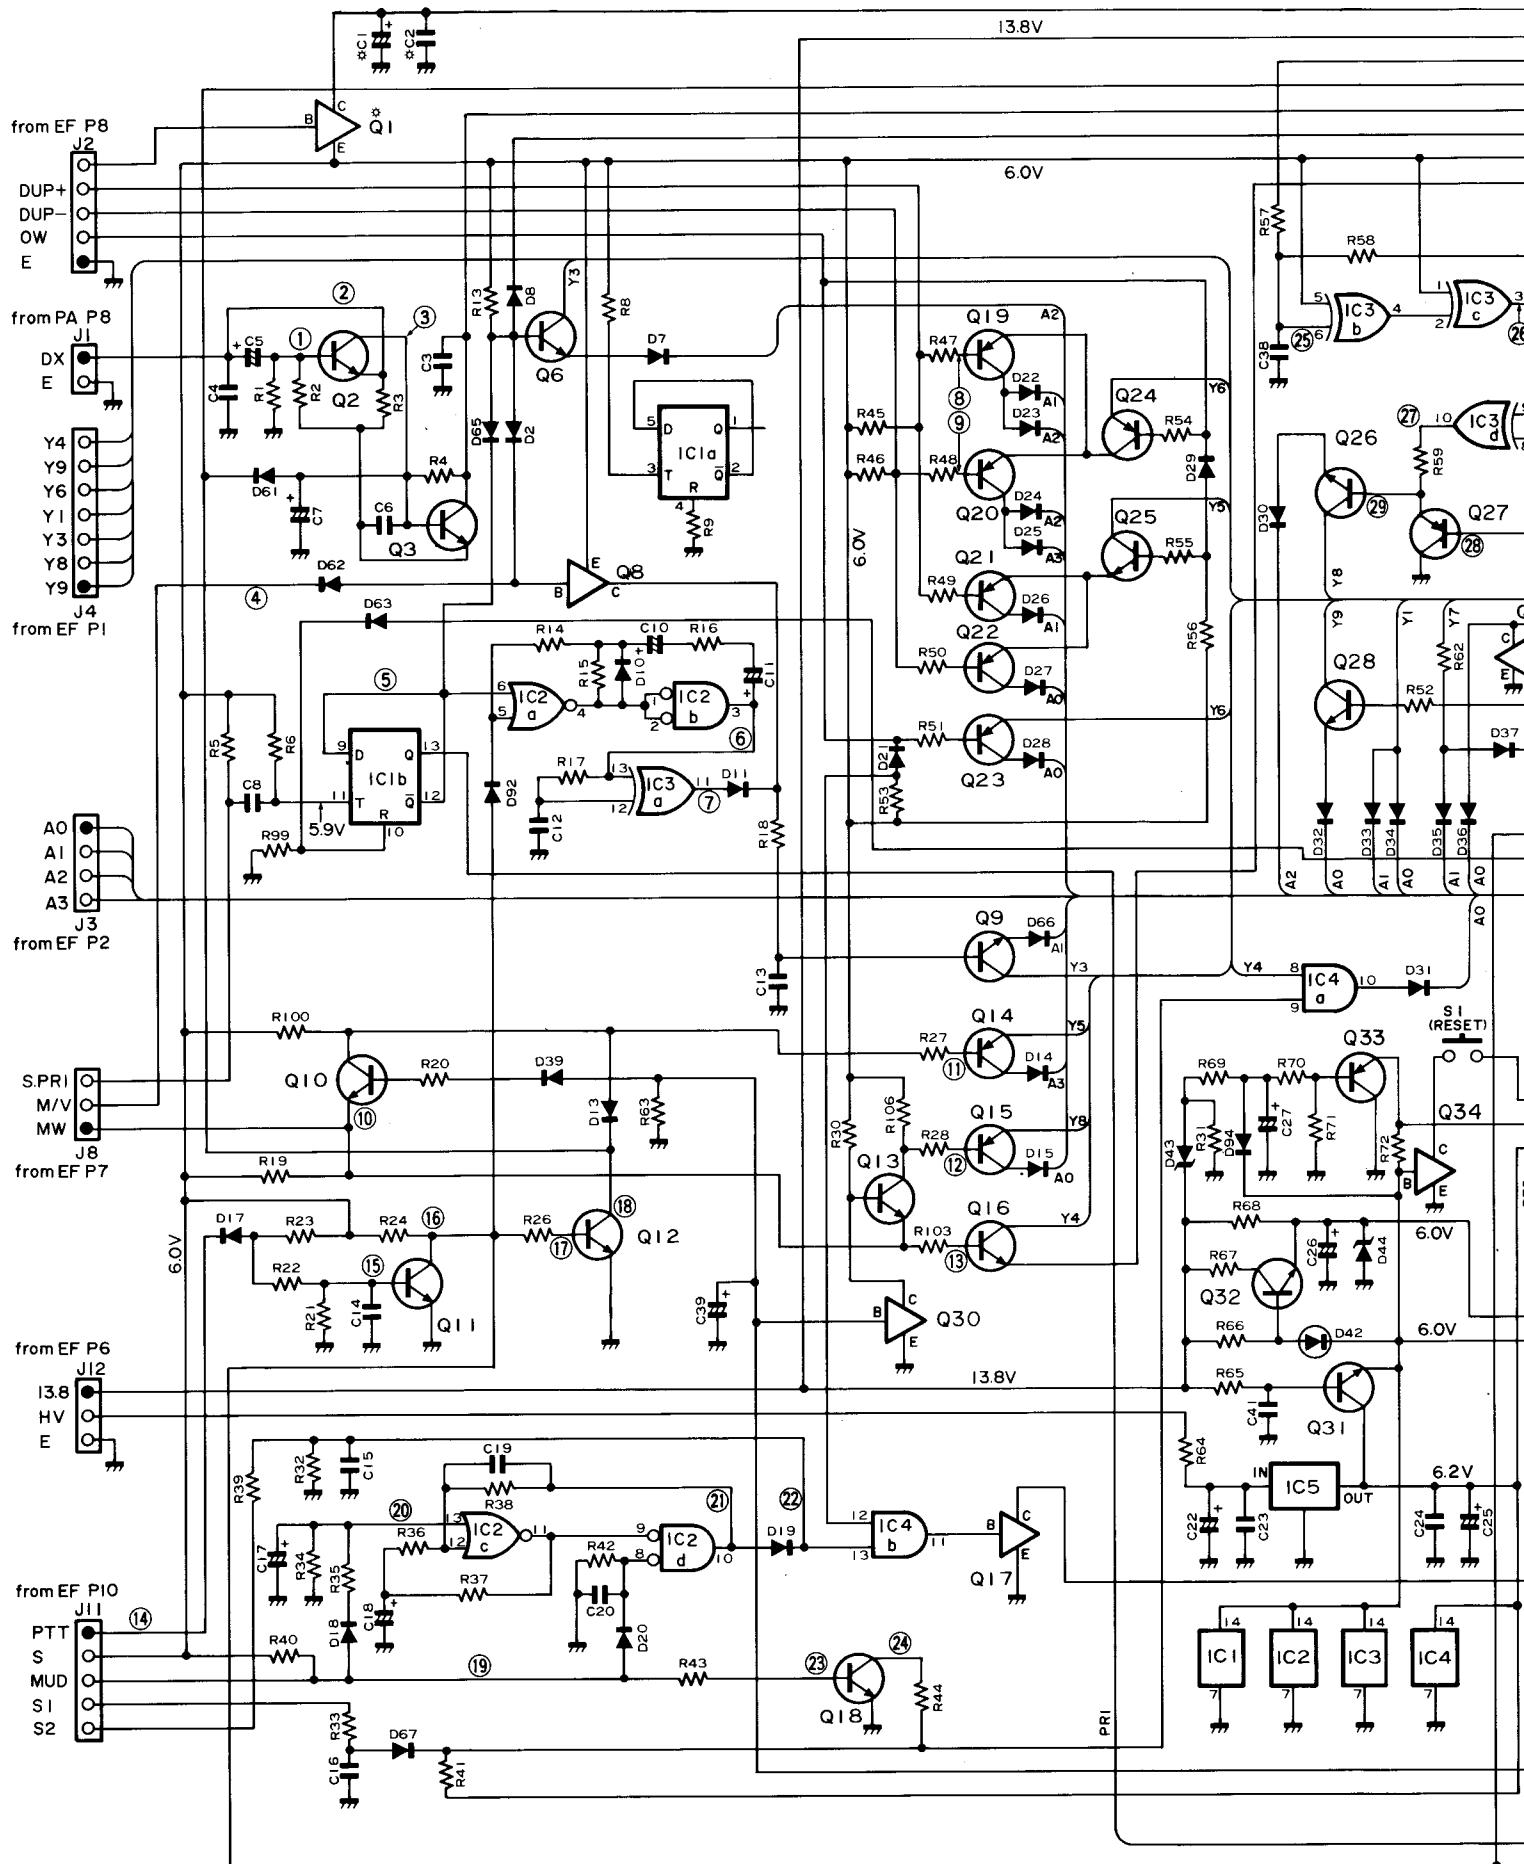


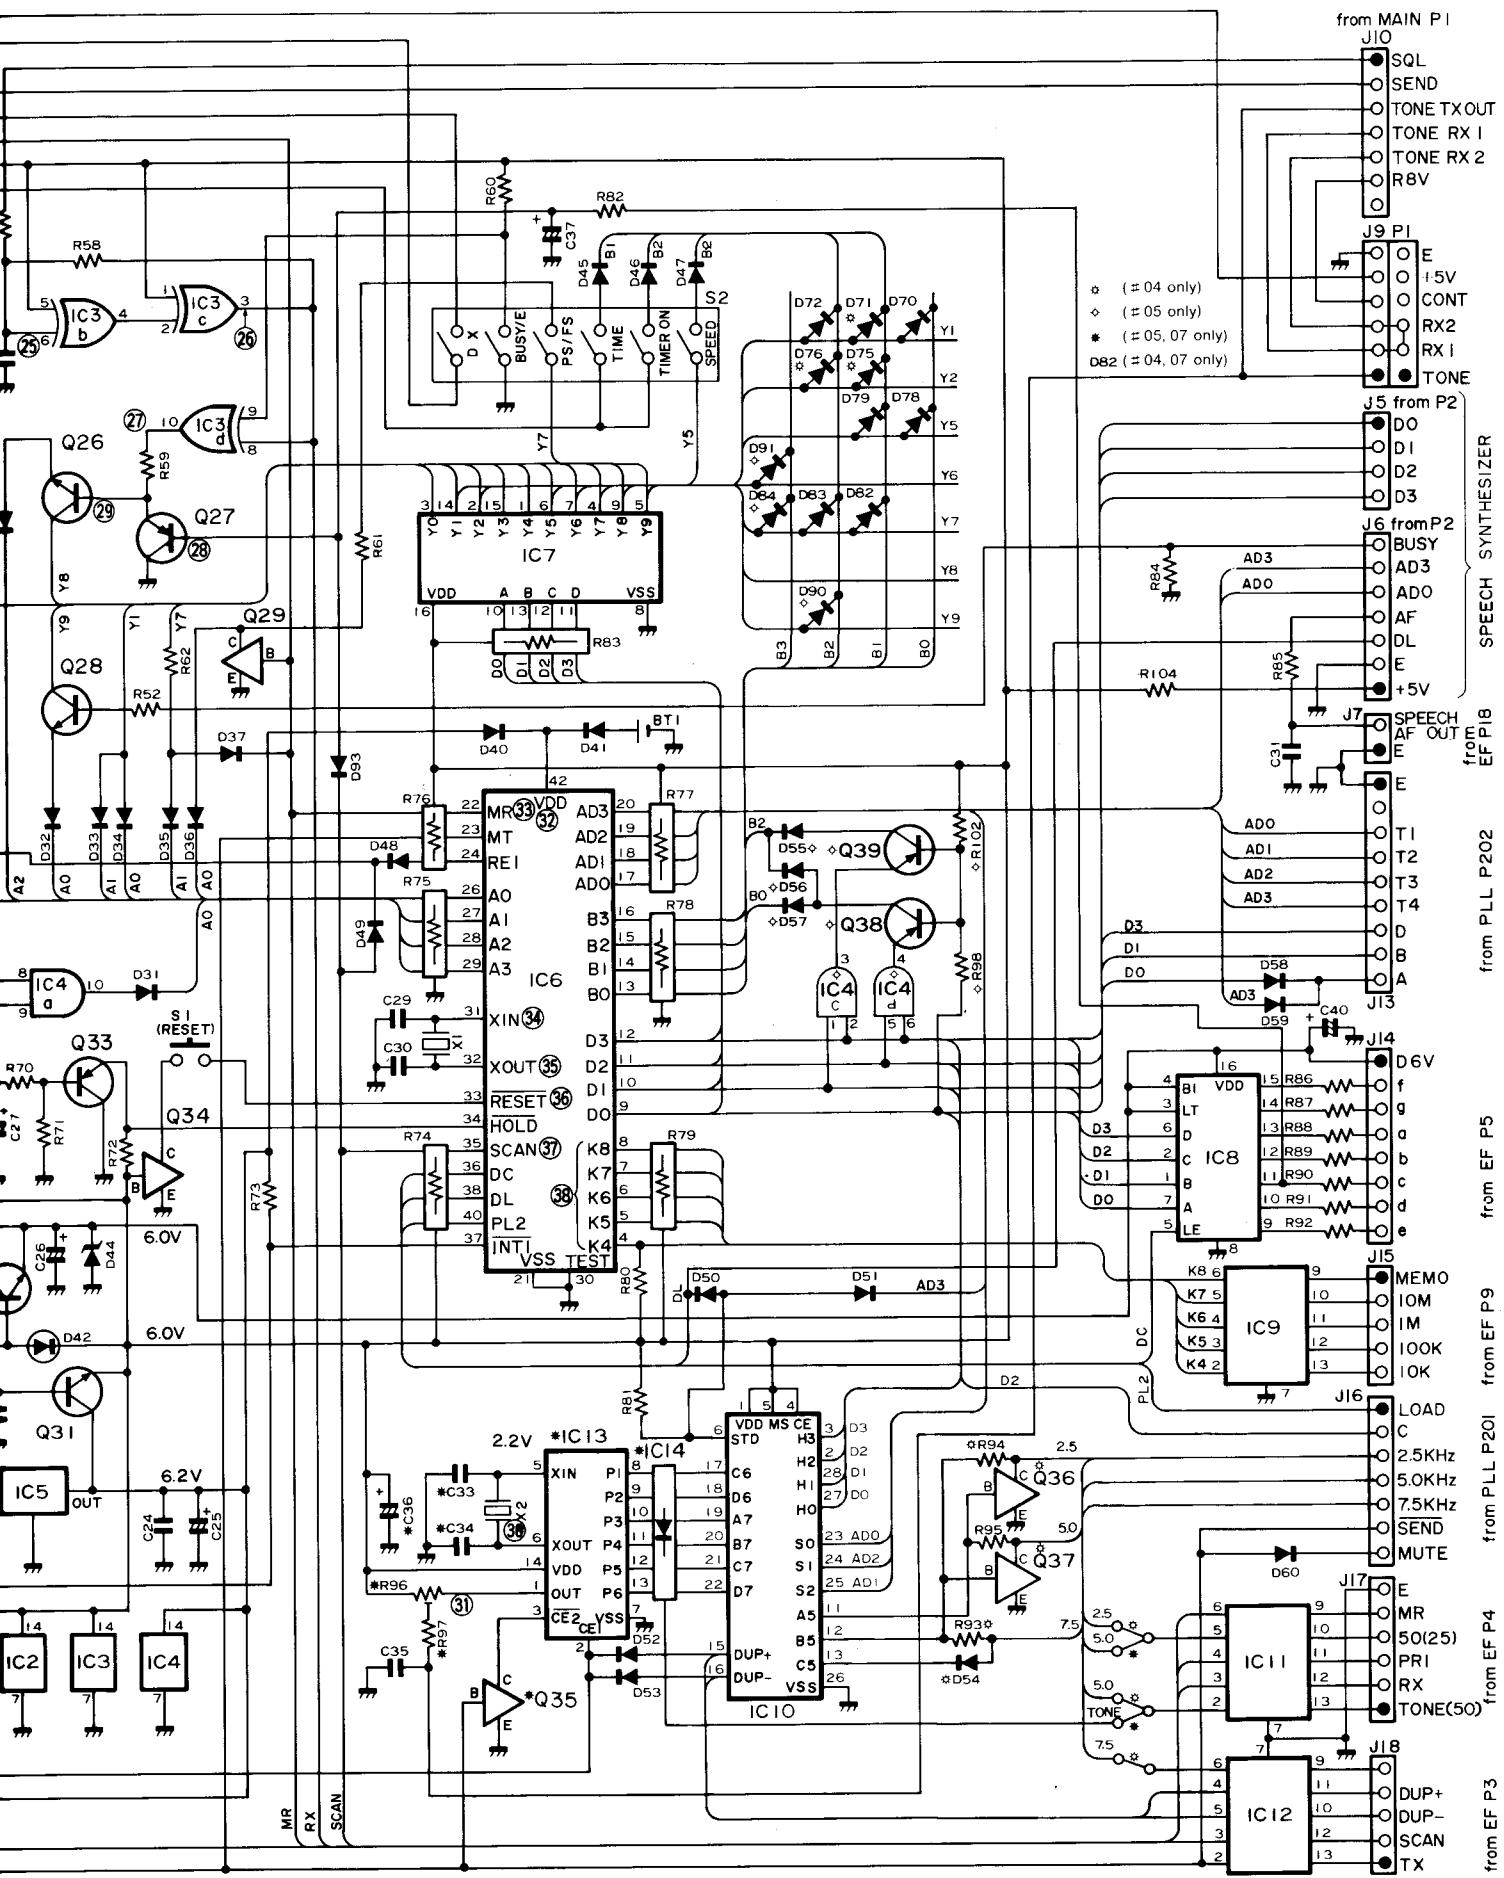


LOGIC UNIT

- Test equipment: 10MHz oscilloscope
- Multimeter 50kΩ/V
- Test frequency: 435.00MHz

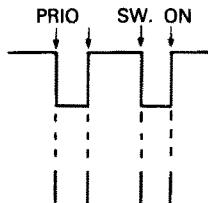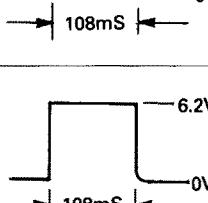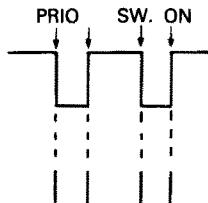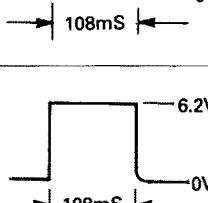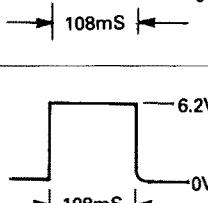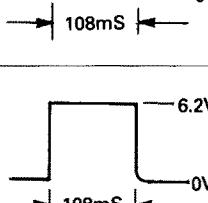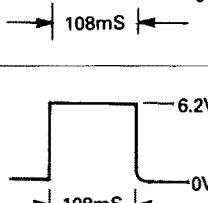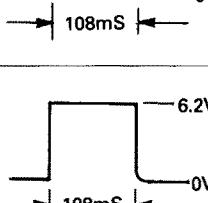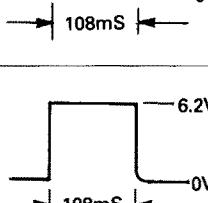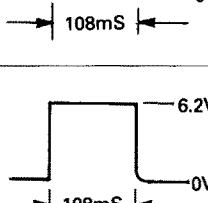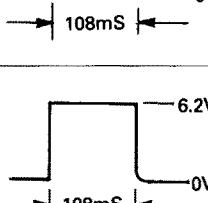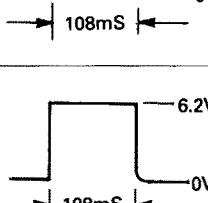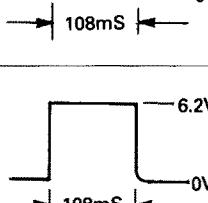No.	Point	Conditions	Voltage	No.	Point	Conditions	Voltage
1	Q2 Base	DX SW. OFF	0V	17	Q12 Base	RX	0V
		DX SW. ON	11.3V			TX	0.7V
		TX	0.5V				
2	Q2 Emitter	DX SW. OFF	0V	18	Q12 Collector	RX	6.3V
		DX SW. ON	13.5V			TX	0.1V
		TX	1.0V				
3	Q2 Collector	DX SW. OFF	0.2V	19	J11 PIN3	MUD(MIC UP/DN) SW. OFF	5.7V
		DX SW. ON	13.8V			MUD SW. UP	0V
		TX	0.5V			MUD SW. DN	2.0V
4	D62 Cathode	M/V SW. OFF	5.0V	20	IC2 PIN13	MUD SW. OFF	5.3V
		M/V SW. ON	0V			MUD SW. UP	0V
5	IC1 PIN9 (PIN10)	PRIOR SW. OFF	6.1V	21	IC2 PIN10	MUD SW. DN	1.6V
		PRIOR SW. ON	0V				
6	IC2 PIN3	PRIOR SW. ON	 <small>* Voltage level changes state with each push of PRIOR SW.</small>	22	IC4 PIN13	MUD SW. UP or DN ON	 <small>5.7V</small> <small>0V</small> <small>108mS</small>
		PRIOR SW. ON					
7	IC3 PIN11	PRIOR SW. ON	 <small>* Voltage level changes state with each push of PRIOR SW.</small>	23	Q18 Base	MUD SW. OFF	 <small>6.2V</small> <small>0V</small> <small>108mS</small>
		PRIOR SW. ON				MUD SW. UP	
8	Q19 Base	DUP SW. OFF	5.3V	24	Q18 Collector	MUD SW. DN	 <small>0.6V</small> <small>0V</small> <small>0.6V</small>
		DUP+ SW. ON	0V			MUD SW. OFF	
9	Q20 Base	DUP SW. OFF	5.3V	25	IC3 PIN6	MUD SW. UP	 <small>2.1V</small> <small>0V</small> <small>0.6V</small>
		DUP- SW. ON	0V			MUD SW. DN	
10	Q10 Emitter	MW SW. OFF	5.8V	26	IC3 PIN3	SQL OFF	 <small>5.9V</small> <small>0V</small> <small>0.4V</small>
		MW SW. ON	0V			SQL ON	
11	Q14 Base	RX	5.3V	27	IC3 PIN10	TX	 <small>6.0V</small> <small>0V</small> <small>0V</small>
		TX	1.0V				
12	Q15 Base	MW SW. OFF	5.3V	28	Q27 Base	SQL OFF	 <small>0.5V</small> <small>0.5V</small> <small>0.5V</small>
		MW SW. ON	0.2V			SQL ON	
13	Q16 Base	MW SW. OFF	5.7V	29	Q26 Base	TX	 <small>6.0V</small> <small>0V</small> <small>0V</small>
		MW SW. ON	0.7V				
14	J11 PIN1	RX	5.2V	28	Q27 Base	SQL OFF	 <small>0.5V</small> <small>0.5V</small> <small>0.5V</small>
		TX	0V			SQL ON	
15	Q11 Base	RX	0.7V	29	Q26 Base	TX	 <small>0.5V</small> <small>0V</small> <small>0V</small>
		TX	0.2V				
16	Q11 Collector	RX	0V	29	Q26 Base	SQL OFF	 <small>0.7V</small> <small>0V</small> <small>0V</small>
		TX	4.6V			SQL ON	
						TX	

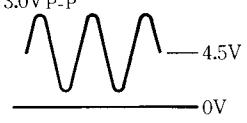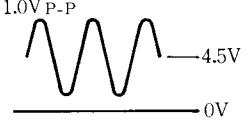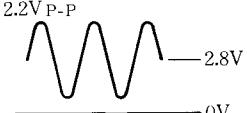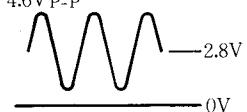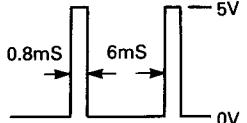No.	Point	Conditions	Voltage
30	IC13 PIN16	TONE NO. 08	3.0V P-P 
31	IC13 PIN1	TONE NO. 08	1.0V P-P 
32	IC6 PIN42 (VDD)	POWER SW. OFF	5.8V
		POWER SW. ON	5.5V
		BACK UP	3.0V
33	IC6 PIN22 (MR)	M/VFO SW.OFF	0V
		M/VFO SW. ON	5.0V
34	IC6 PIN31 (XIN)		2.2V P-P 
35	IC6 PIN32 (XOUT)		4.6V P-P 
36	IC6 PIN33 (RESET)	S1 OFF	3.9V
		S1 ON	0V
37	IC6 PIN35 (SCAN)	S/S SW. OFF	0.1V
		S/S SW. ON	5.3V
38	IC6 PIN4~ PIN8 (K4~K8)		0.8mS → 6mS → 




PA UNIT

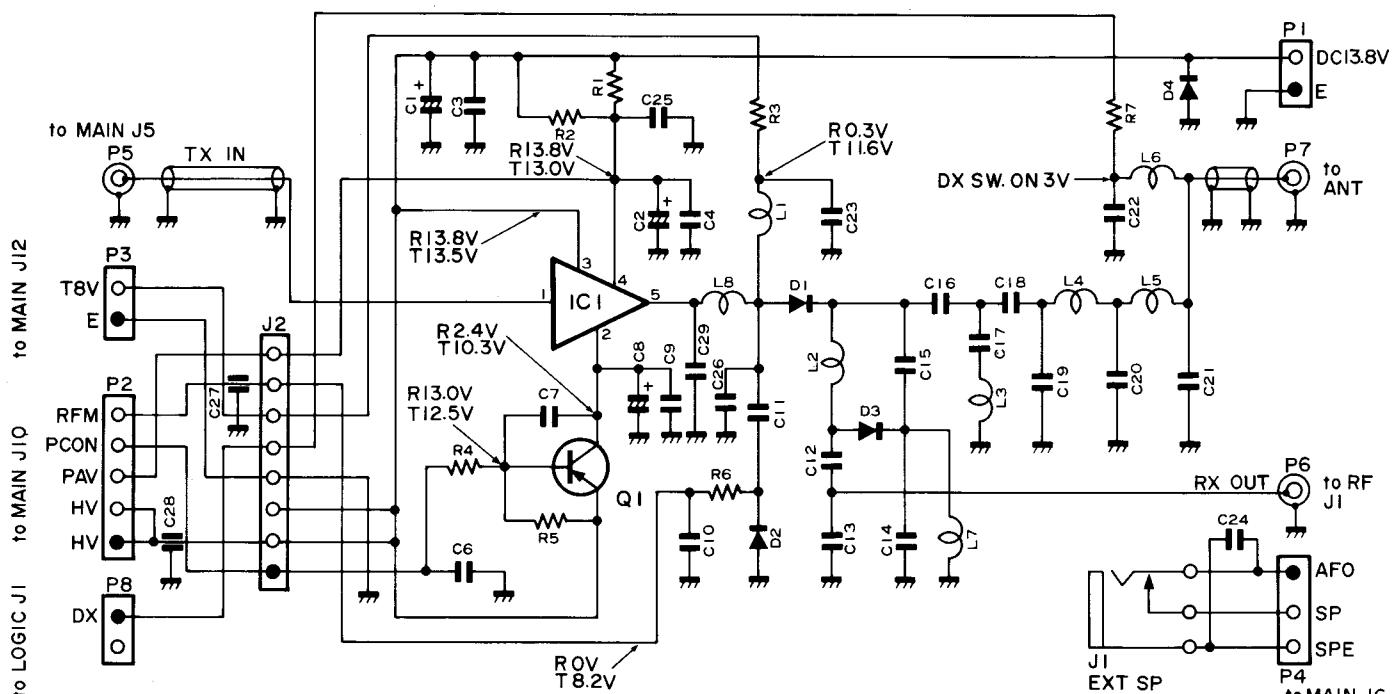


ROV
T8.2V DC Voltage by 50 KΩ-V multimeter

SECTION 9 BOARD LAYOUTS


EF UNIT

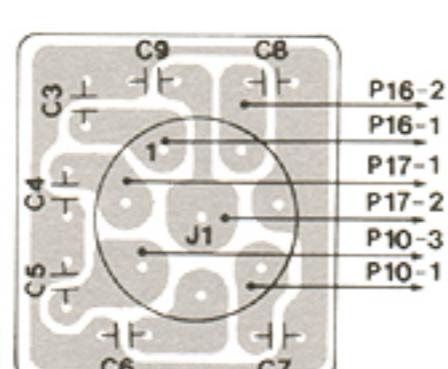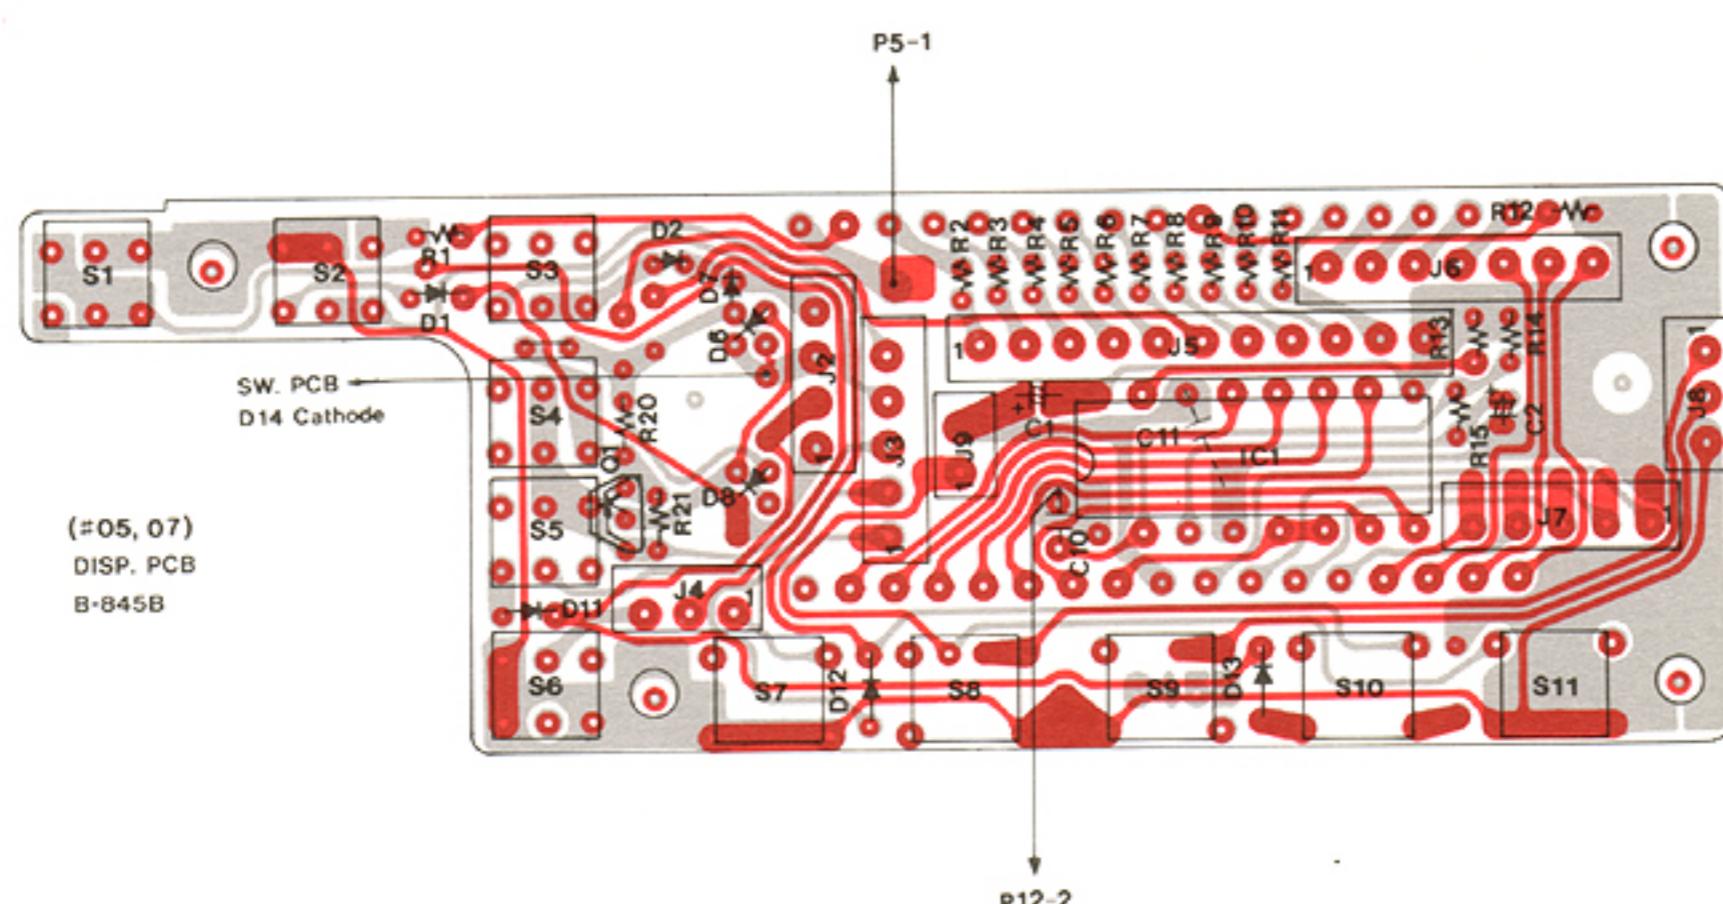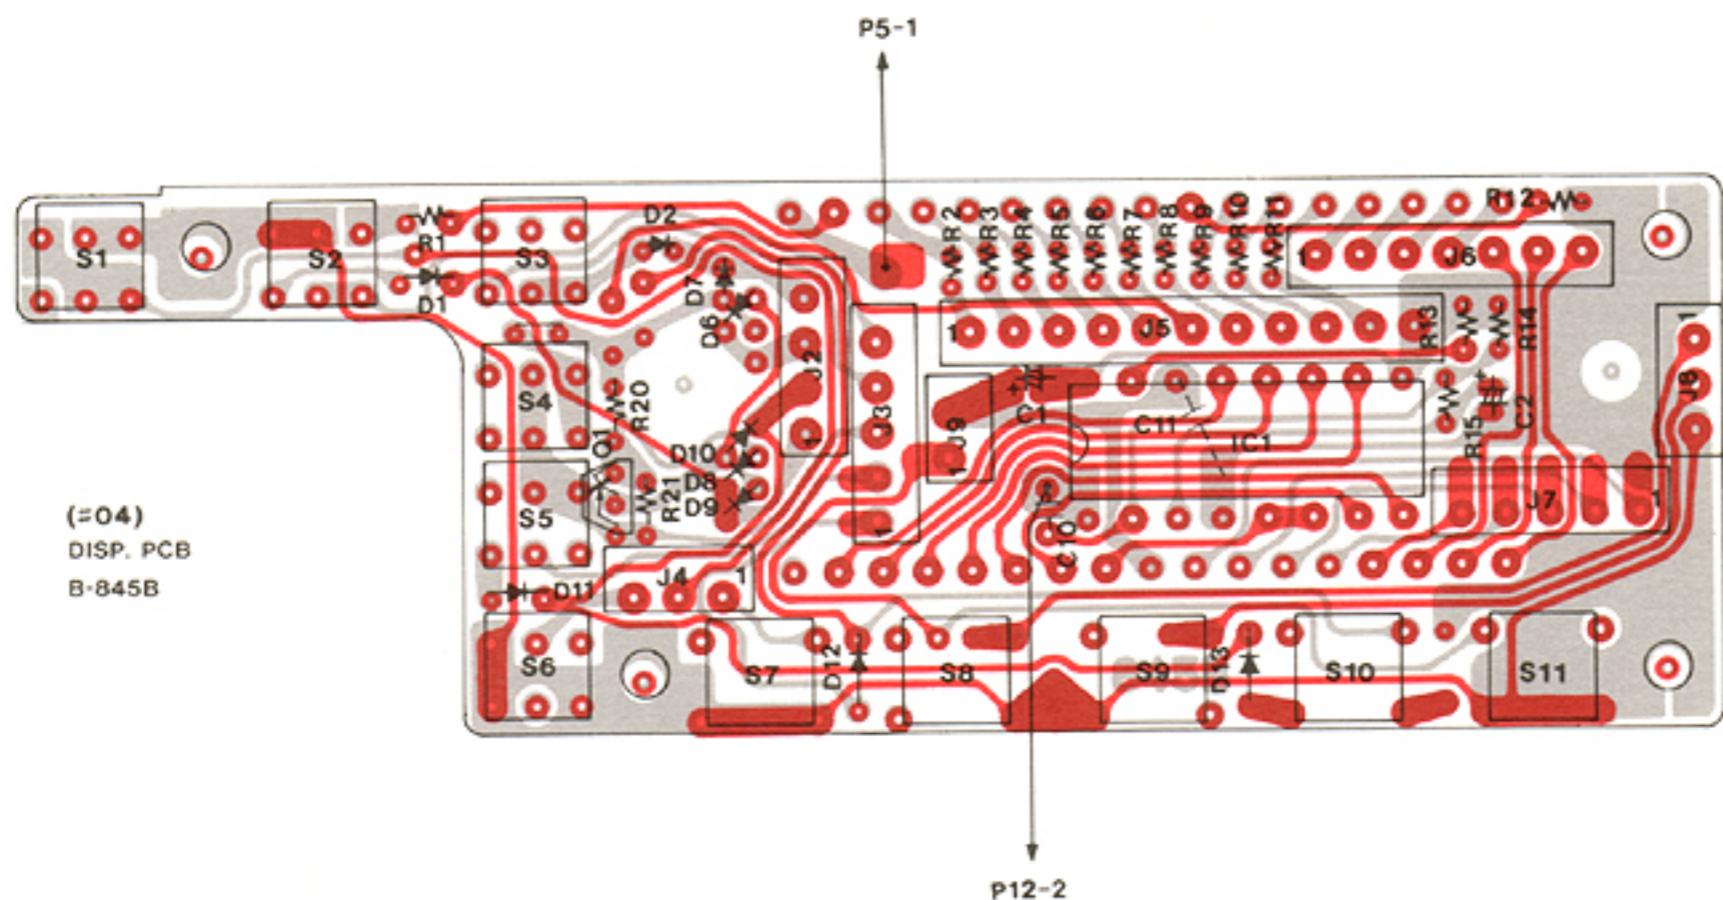


MIC. PCB
B-848A

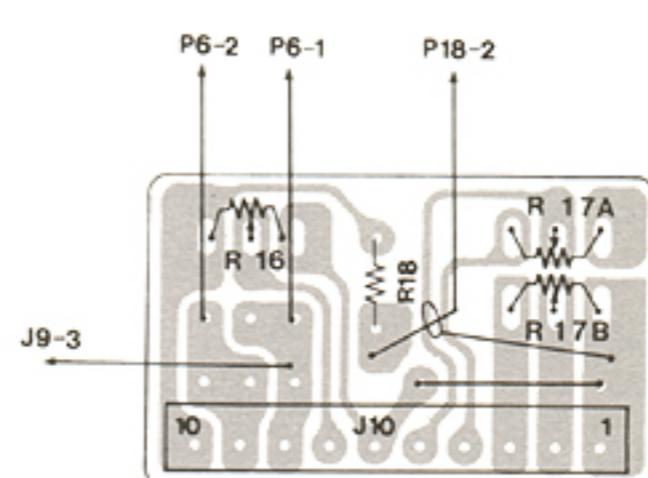

VR. PCB
B-847A

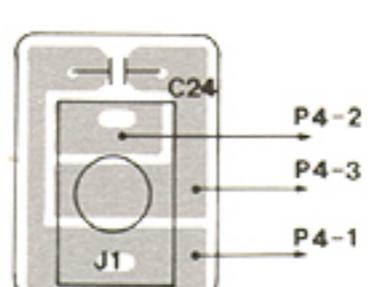









SPJ. PCB
B-855A

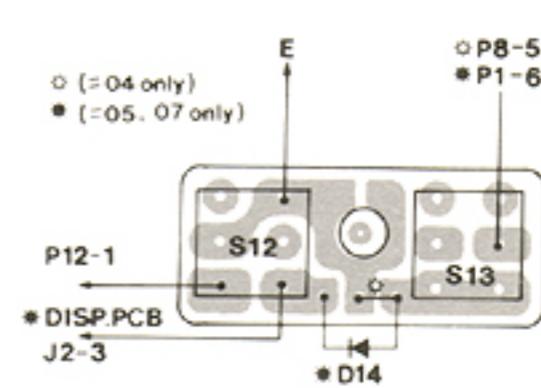

SW. PCB
B-846A


RF, MAIN & PLL UNITS

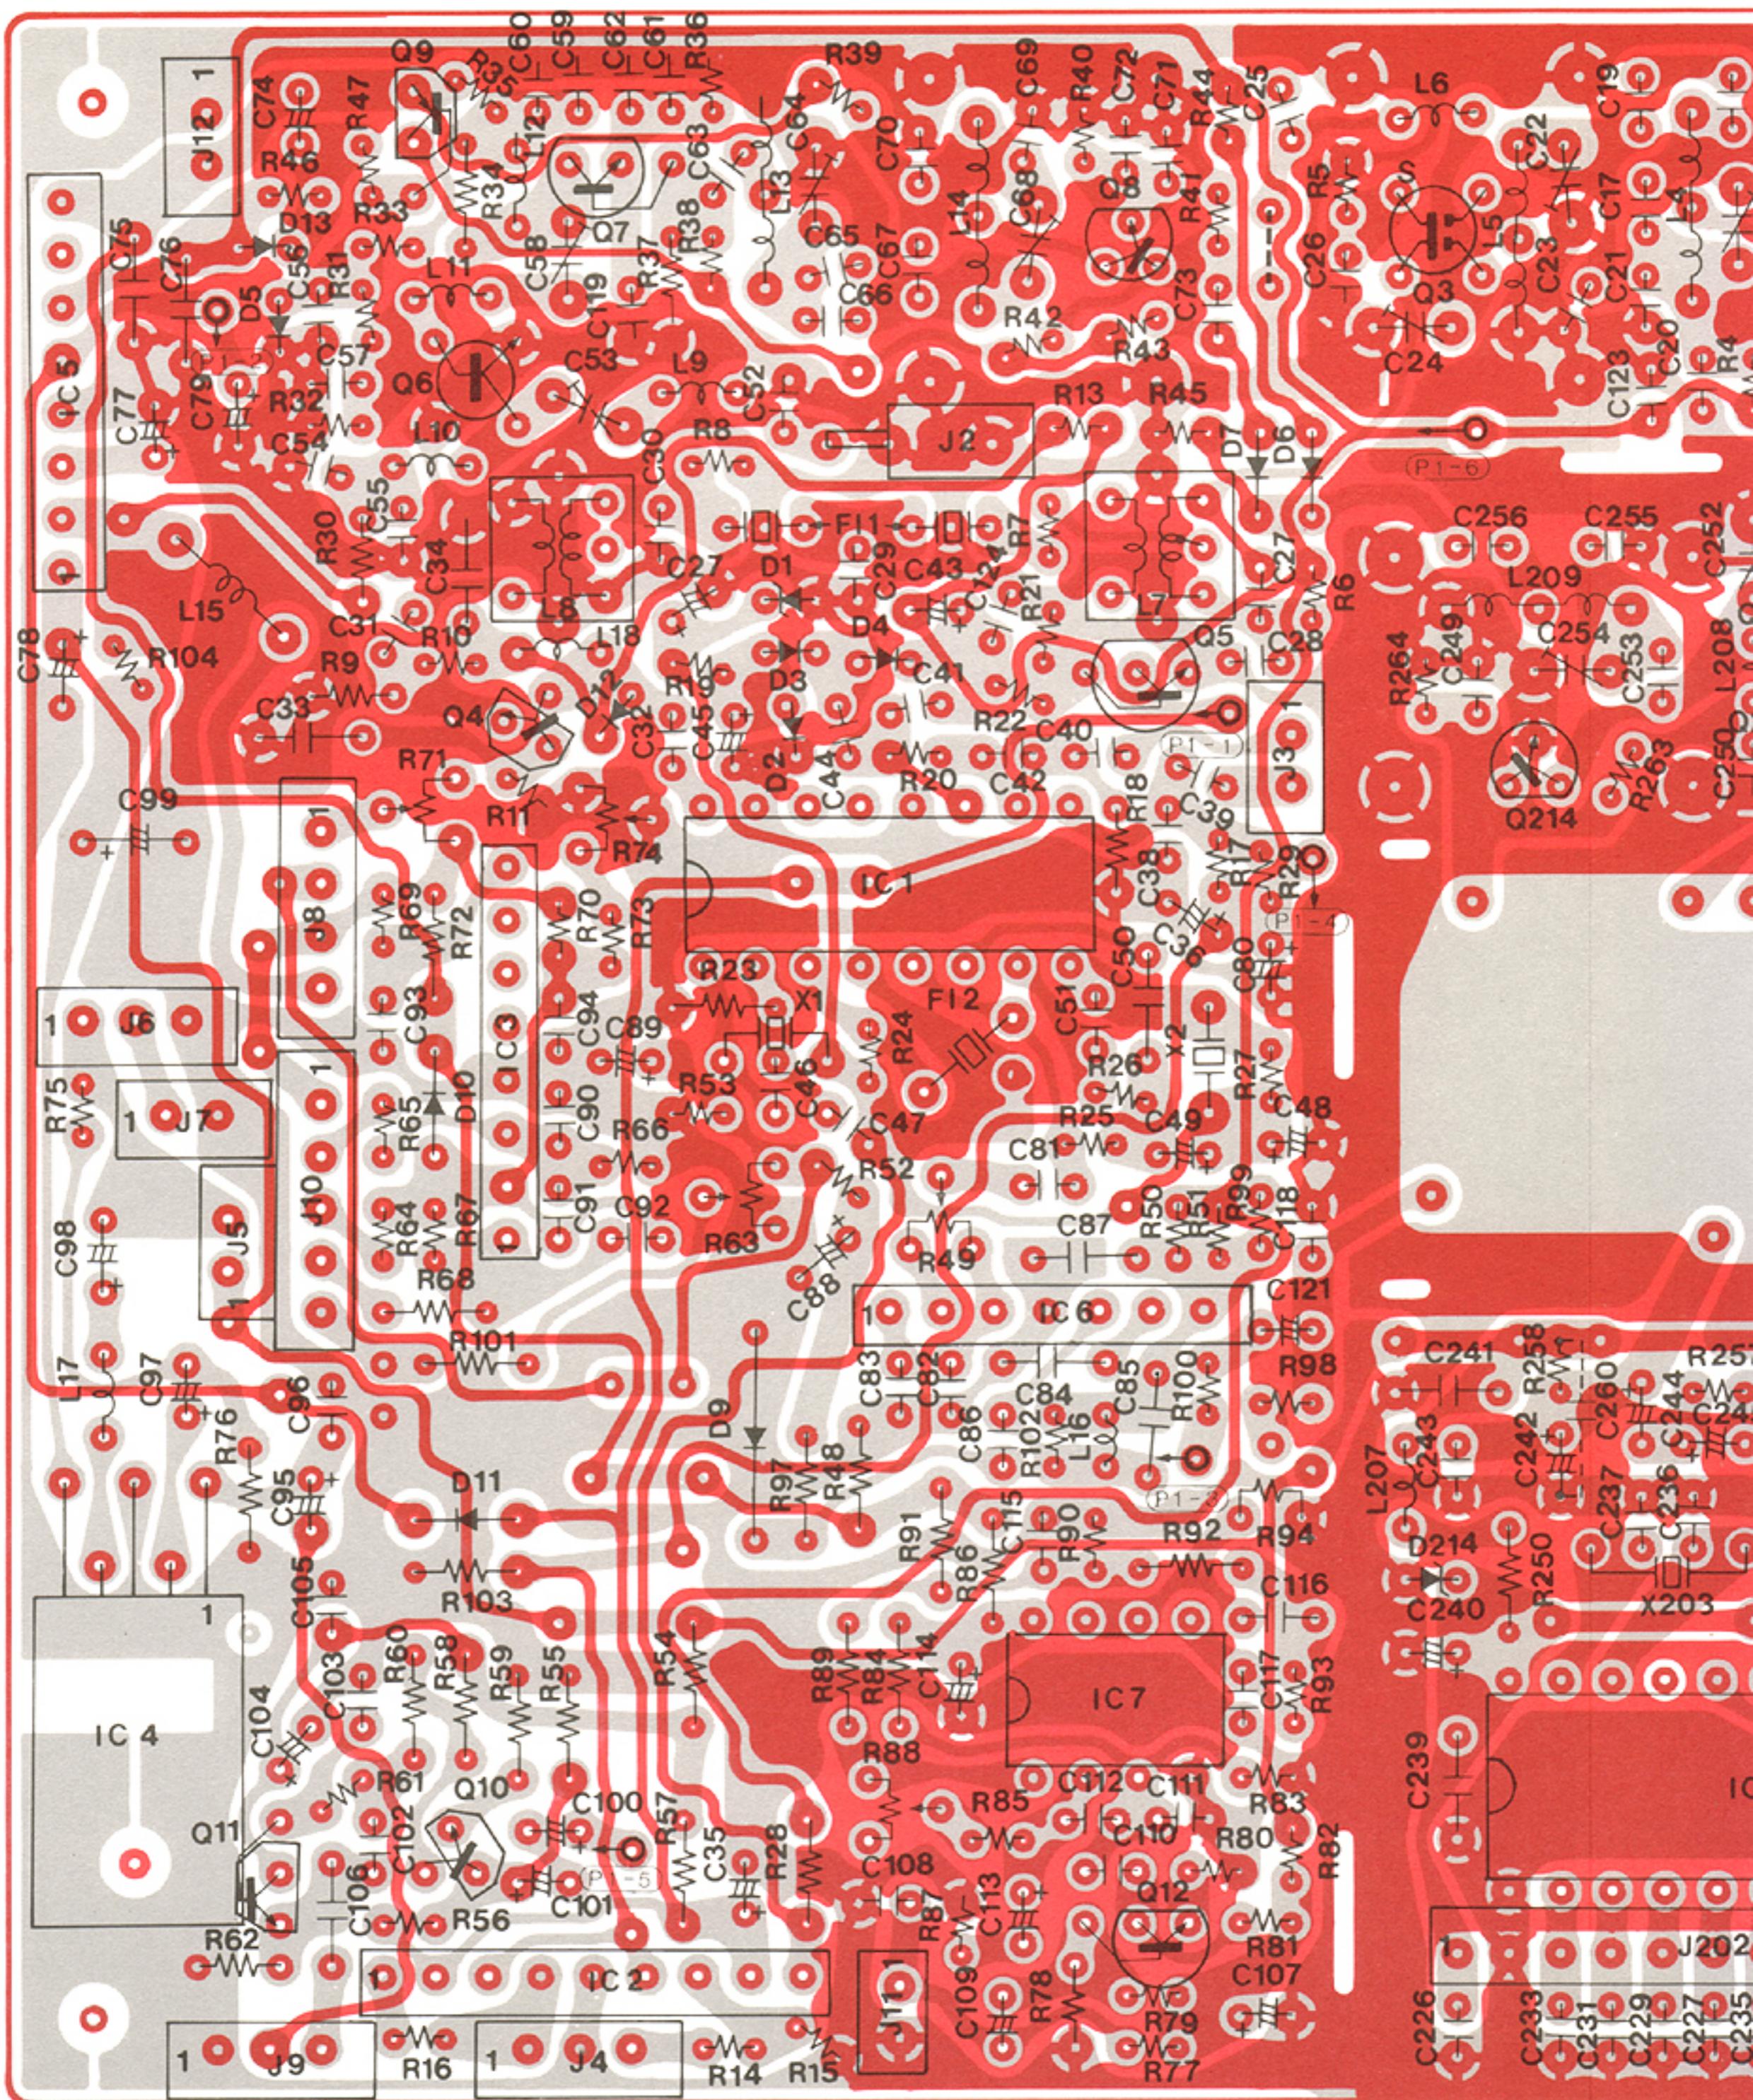

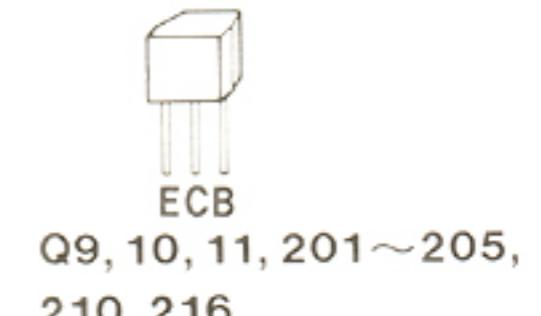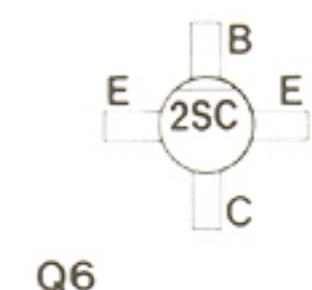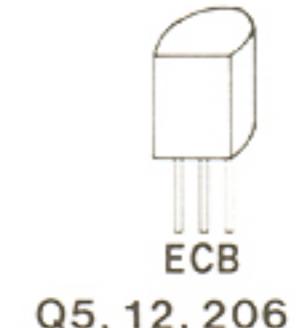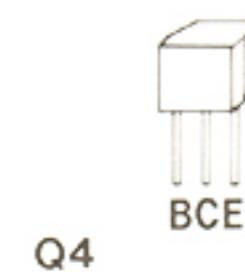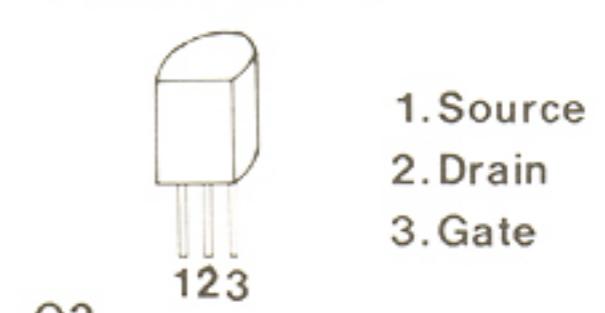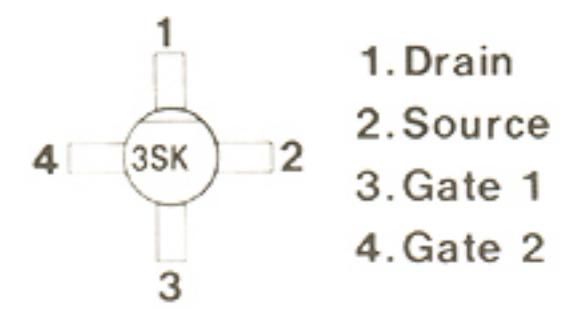
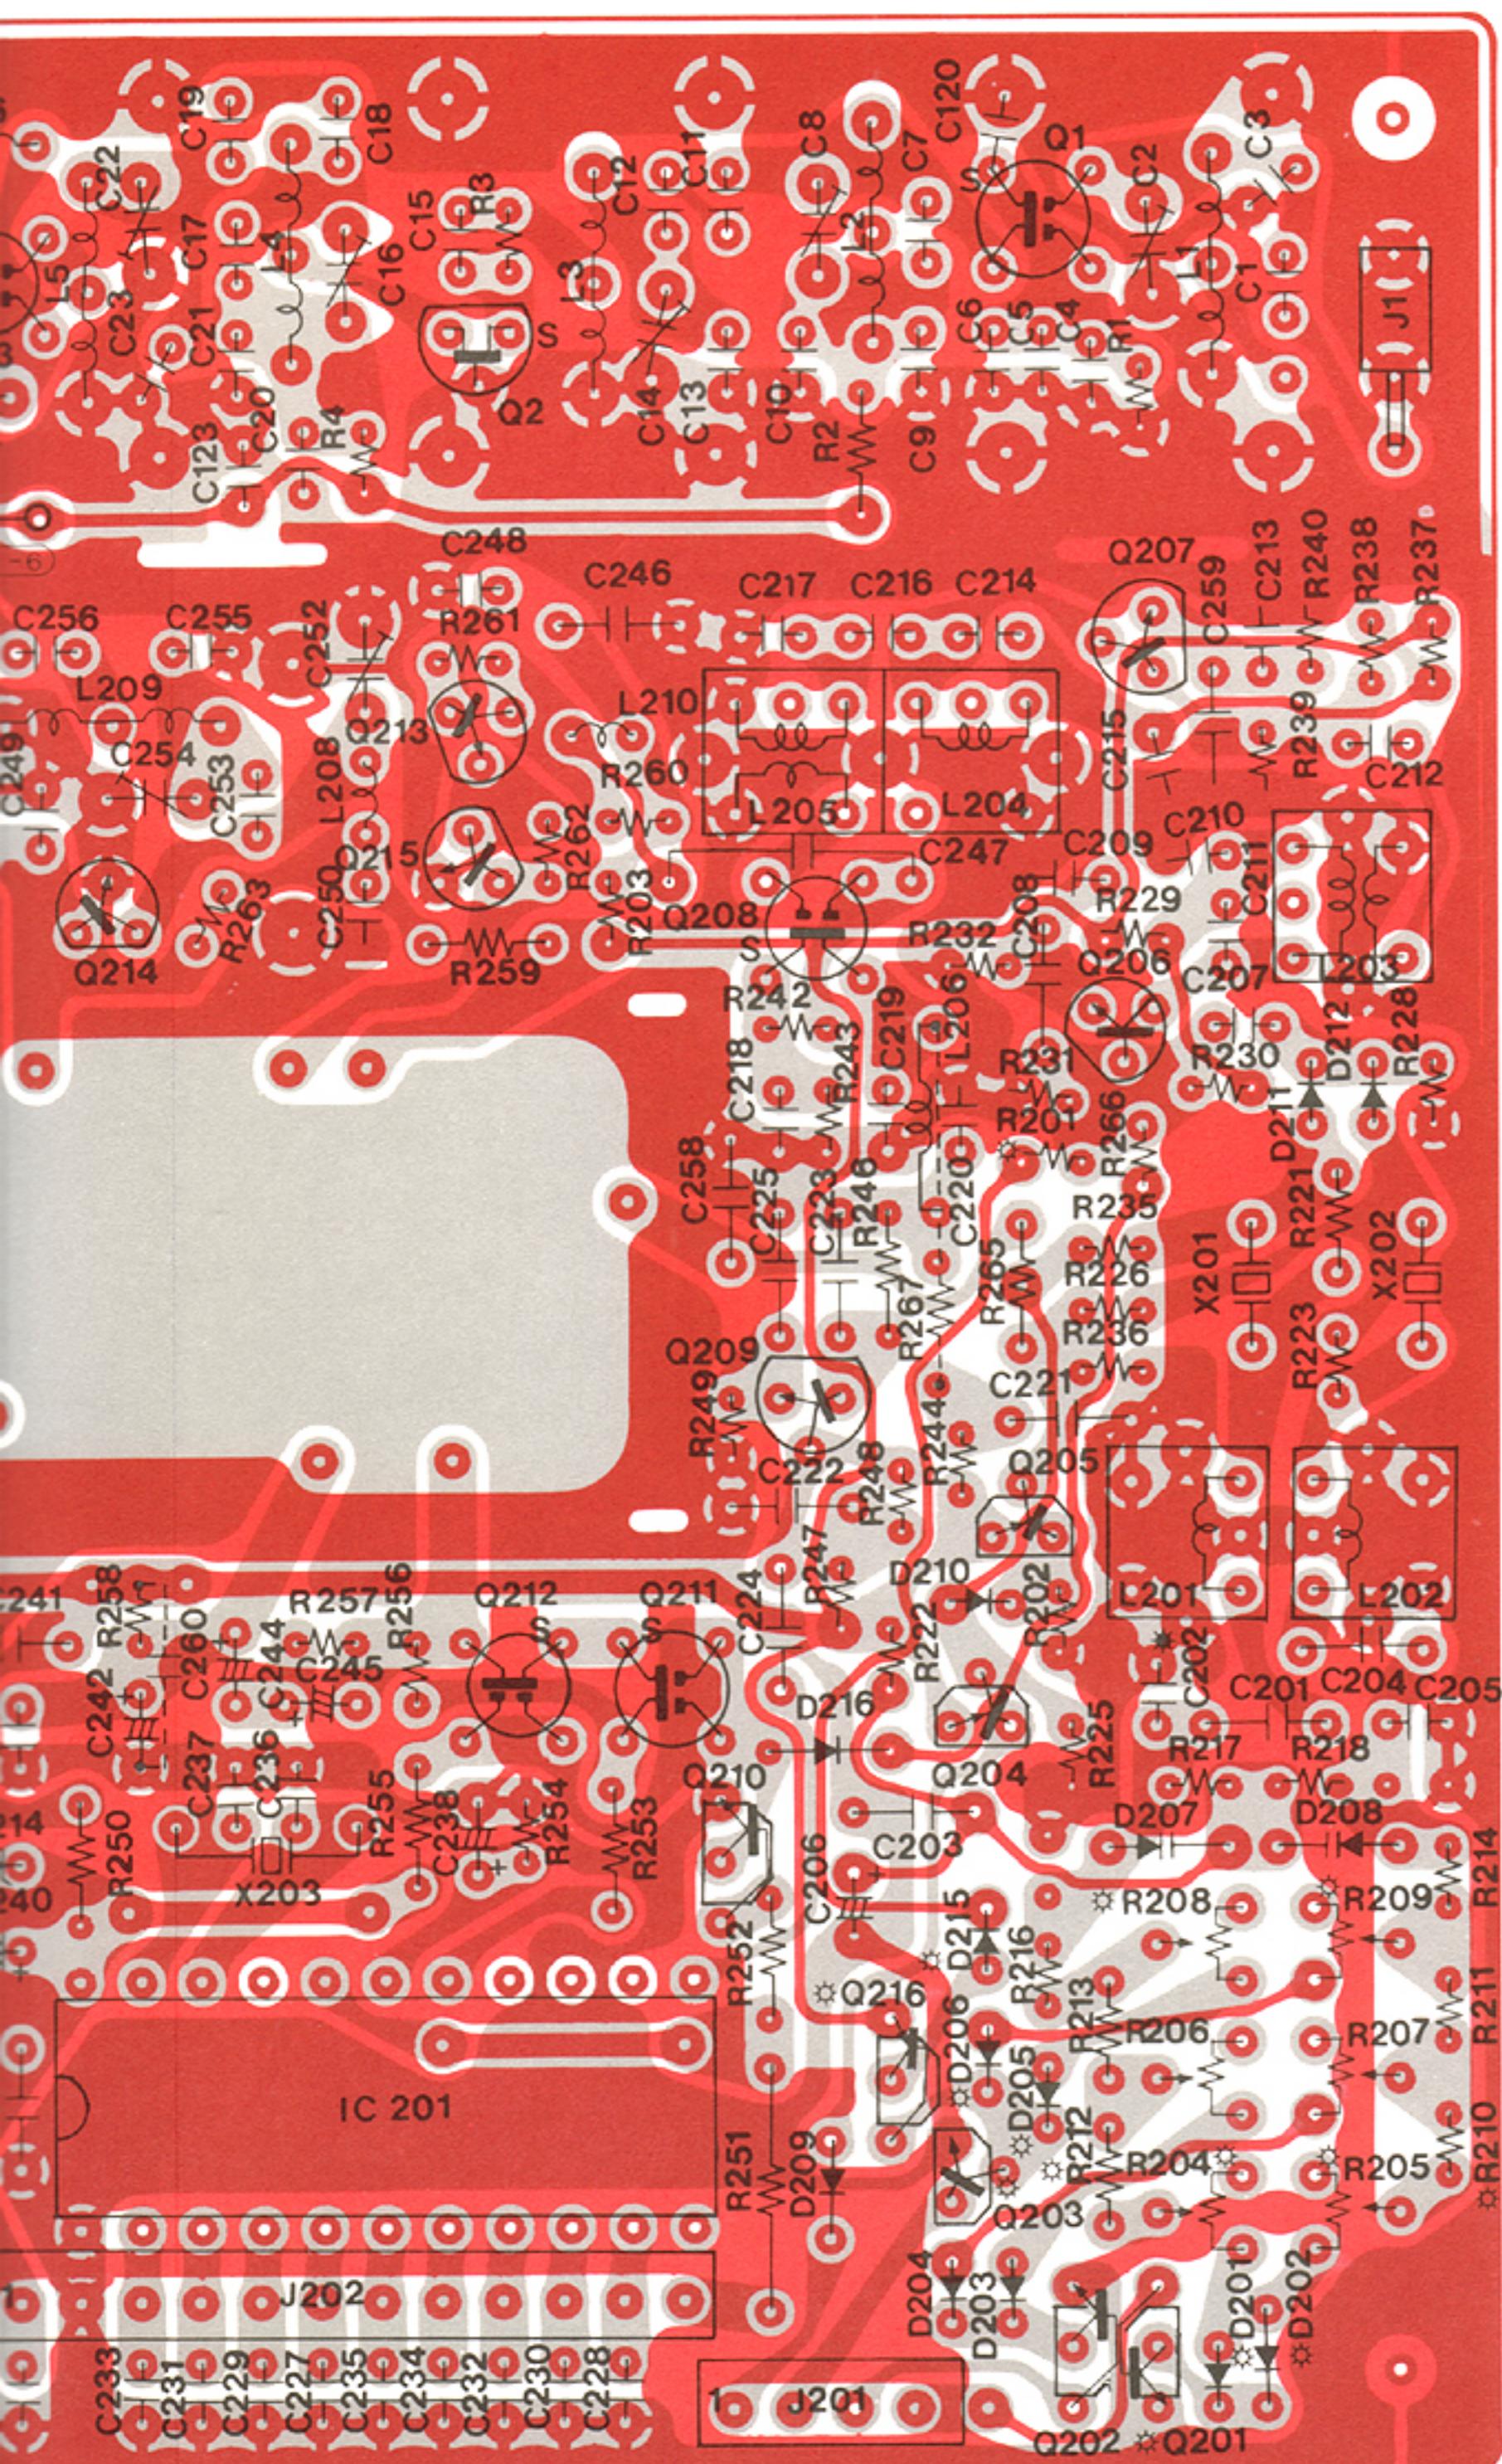


⊗ (=04 only)
◊ (=05 only)
★ (=05,07 only)
R260 (=04,07 only)


LOGIC UNIT

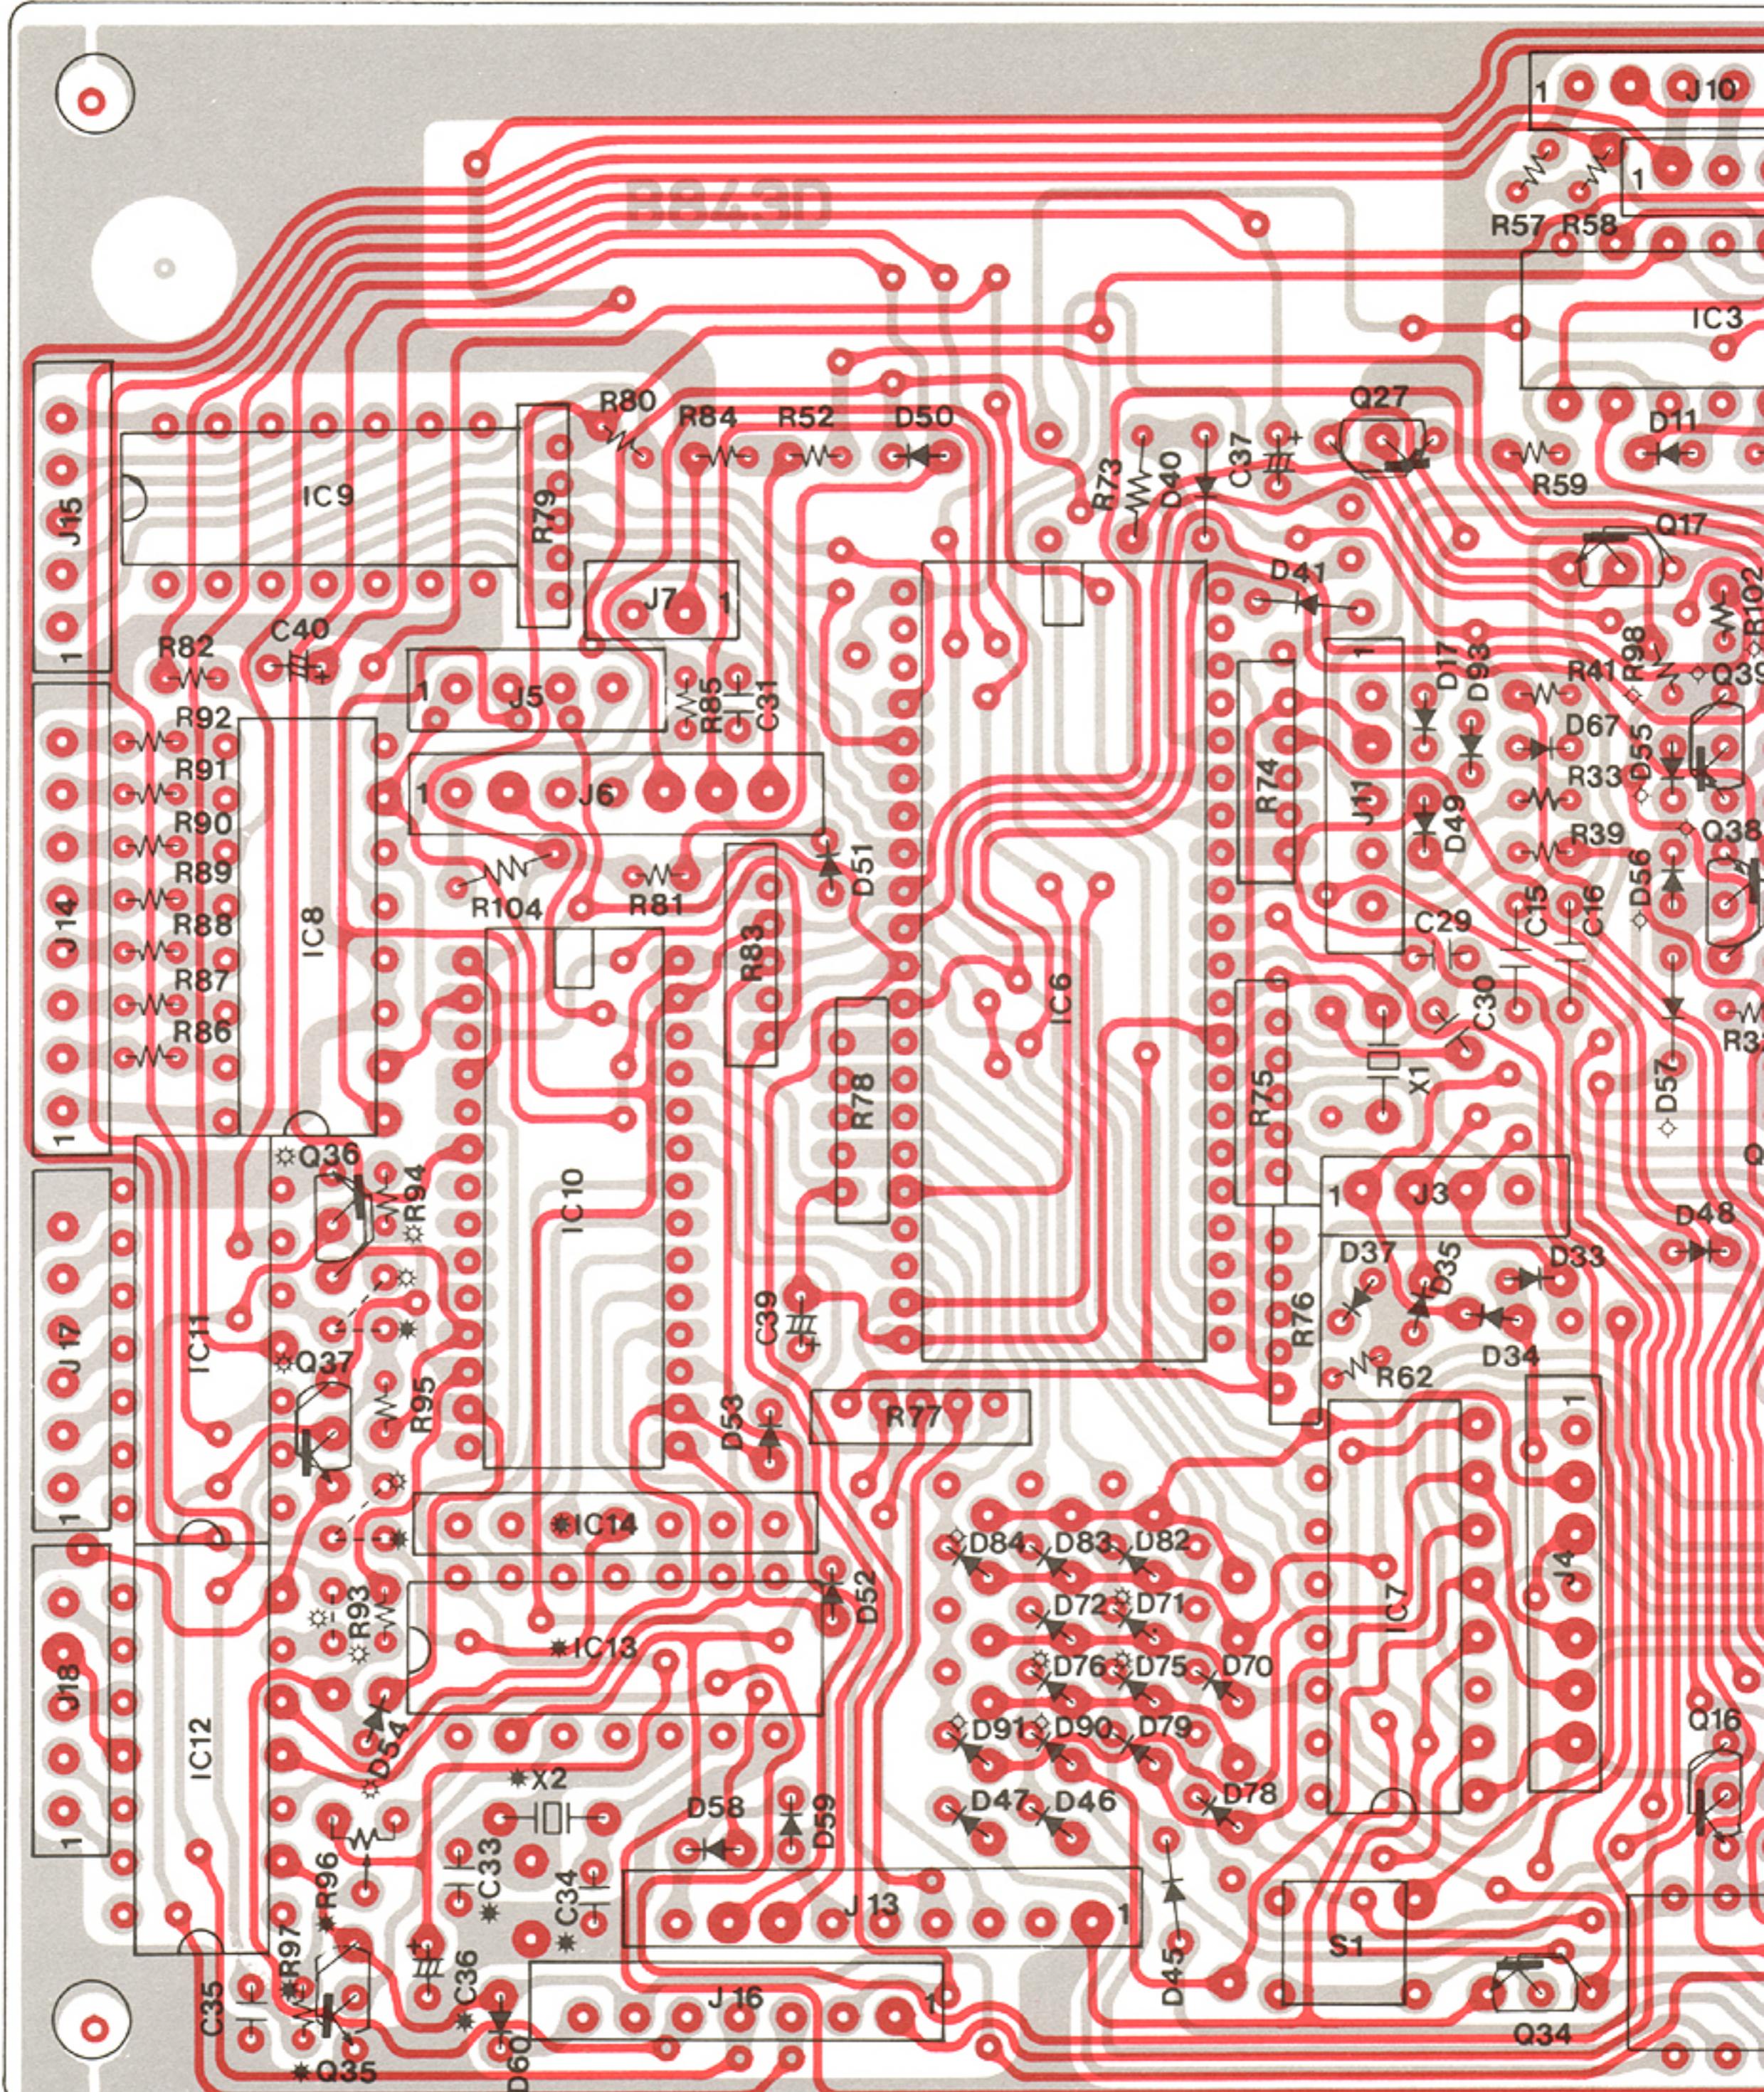

**LOGIC UNIT
B-843D**

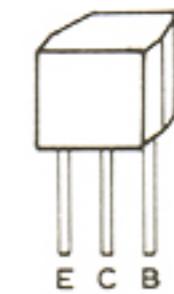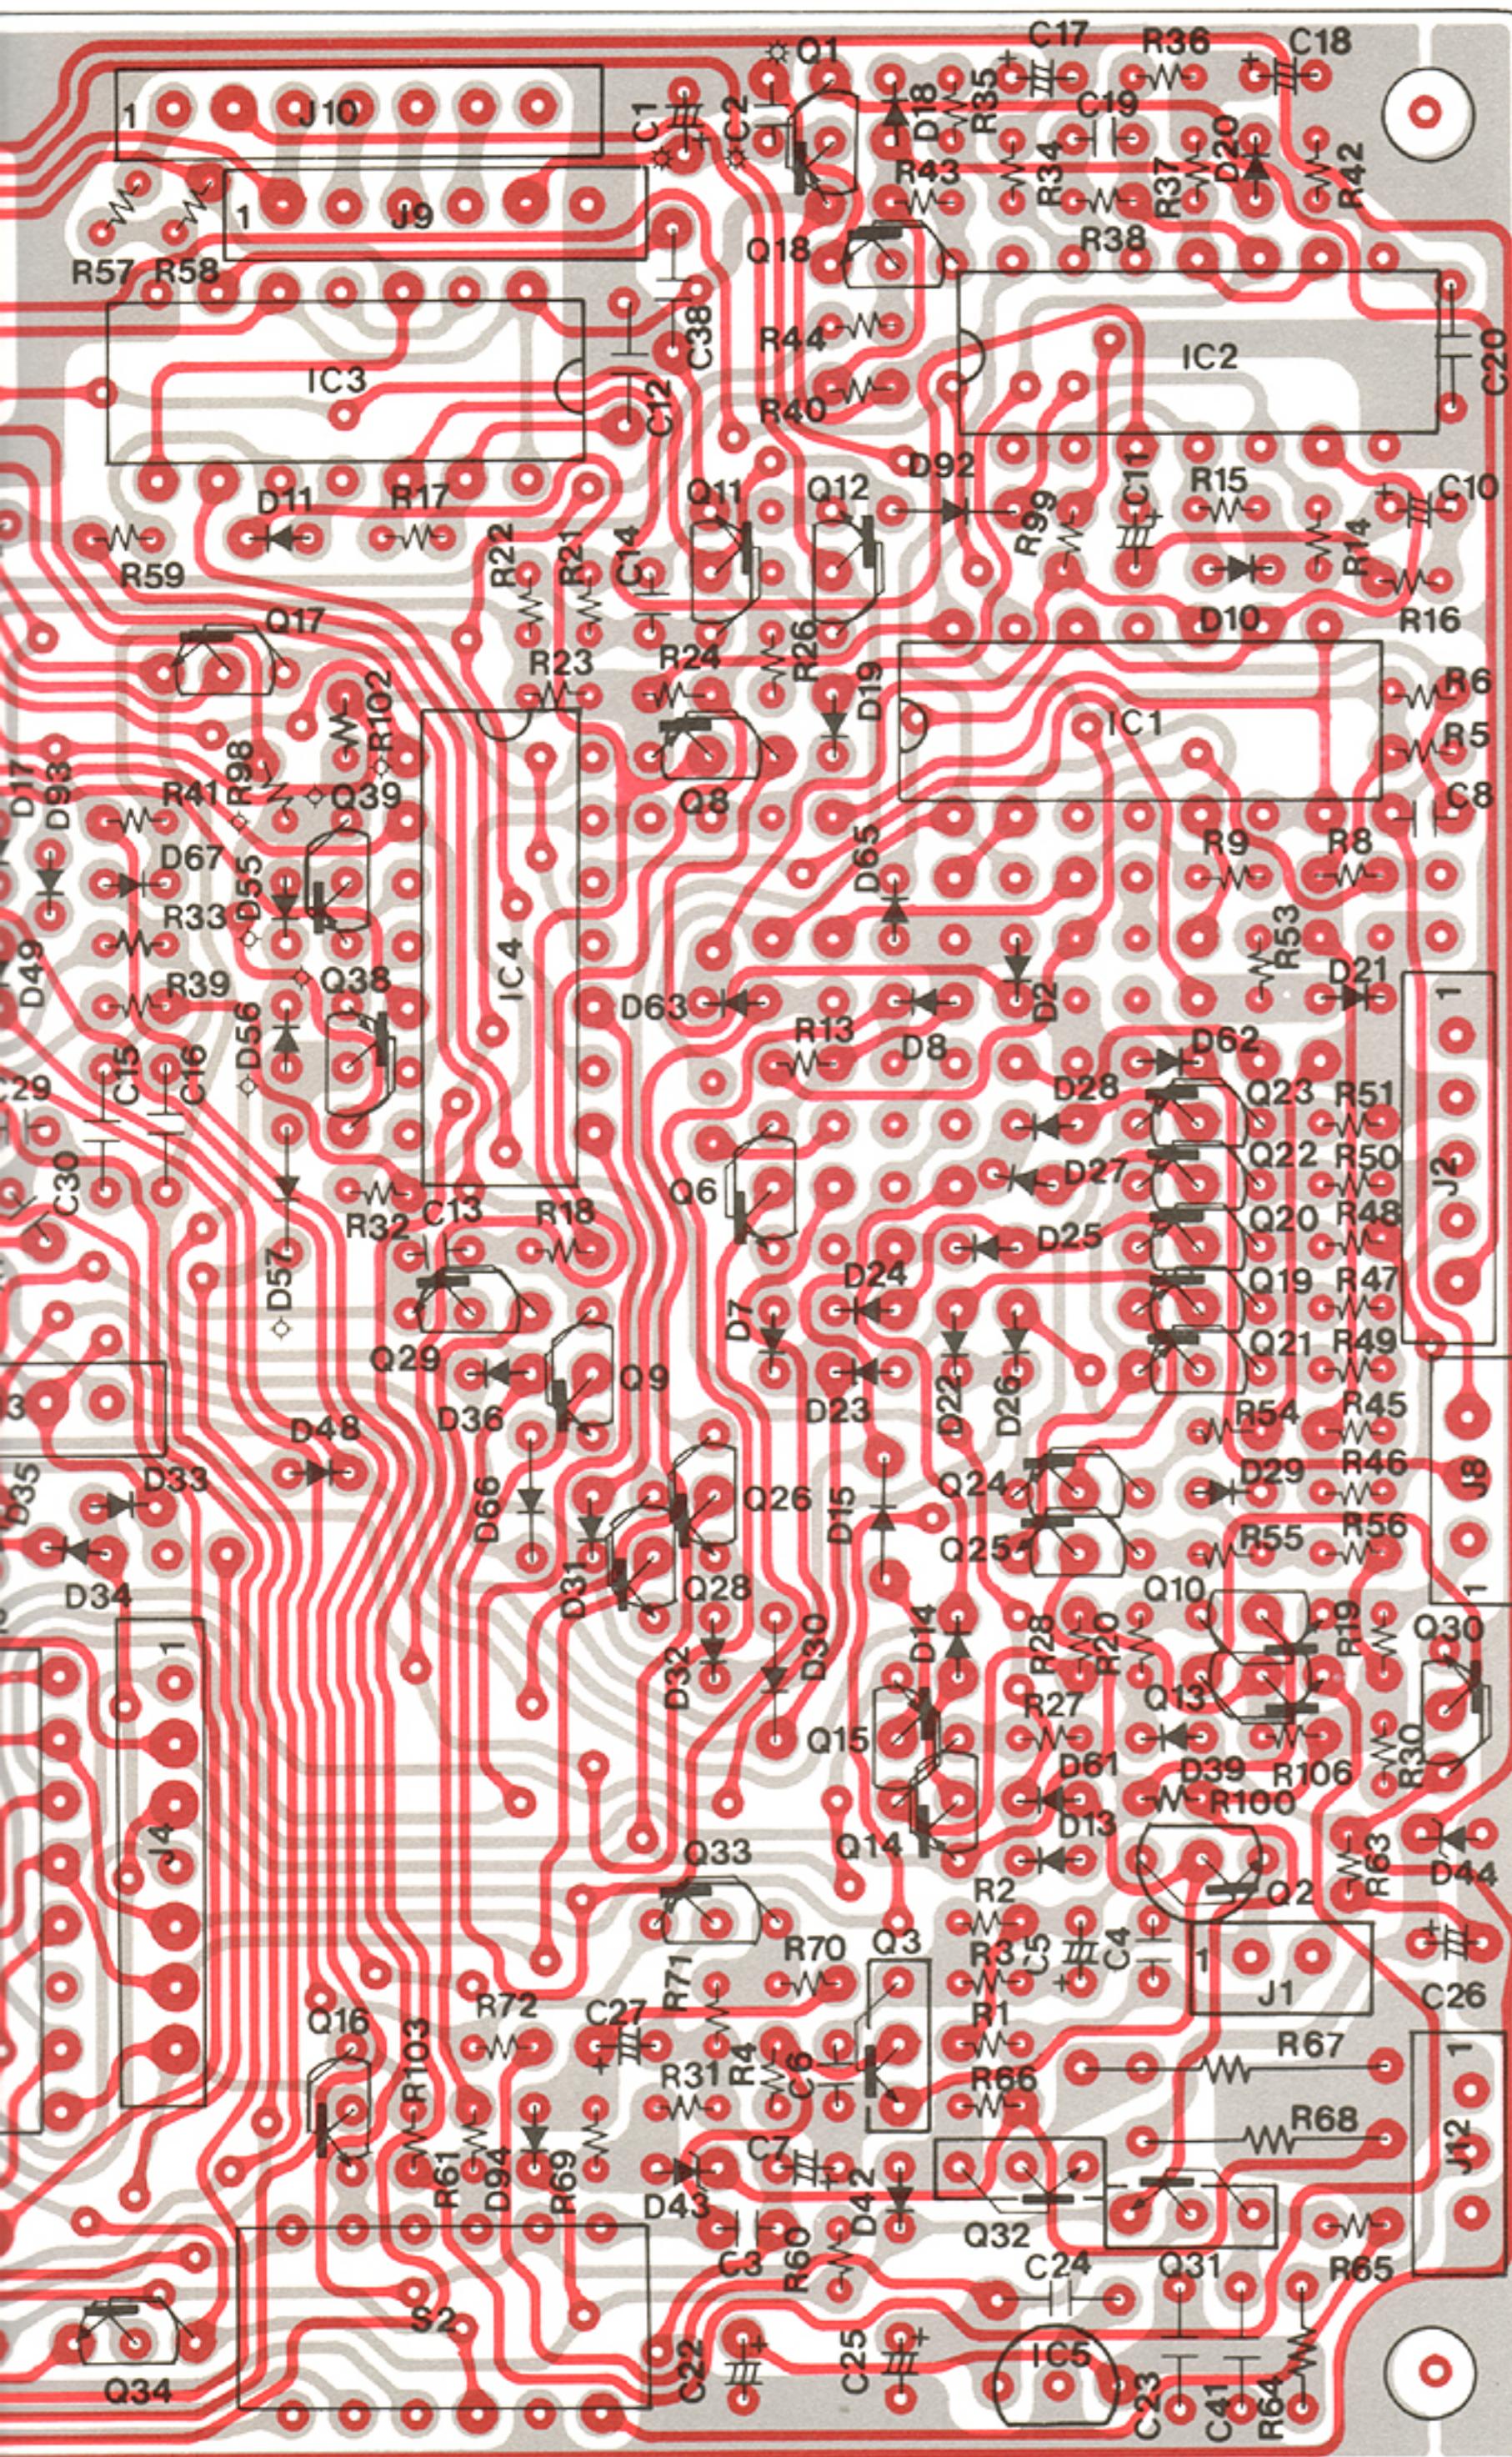


Q 1 - Q30
Q33 - Q39

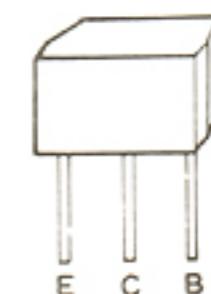



Q3, Q31, Q32

• (=04 only)
◊ (=05 only)
* (=05,07 only)
D82 (=04,07 only)

PA UNIT

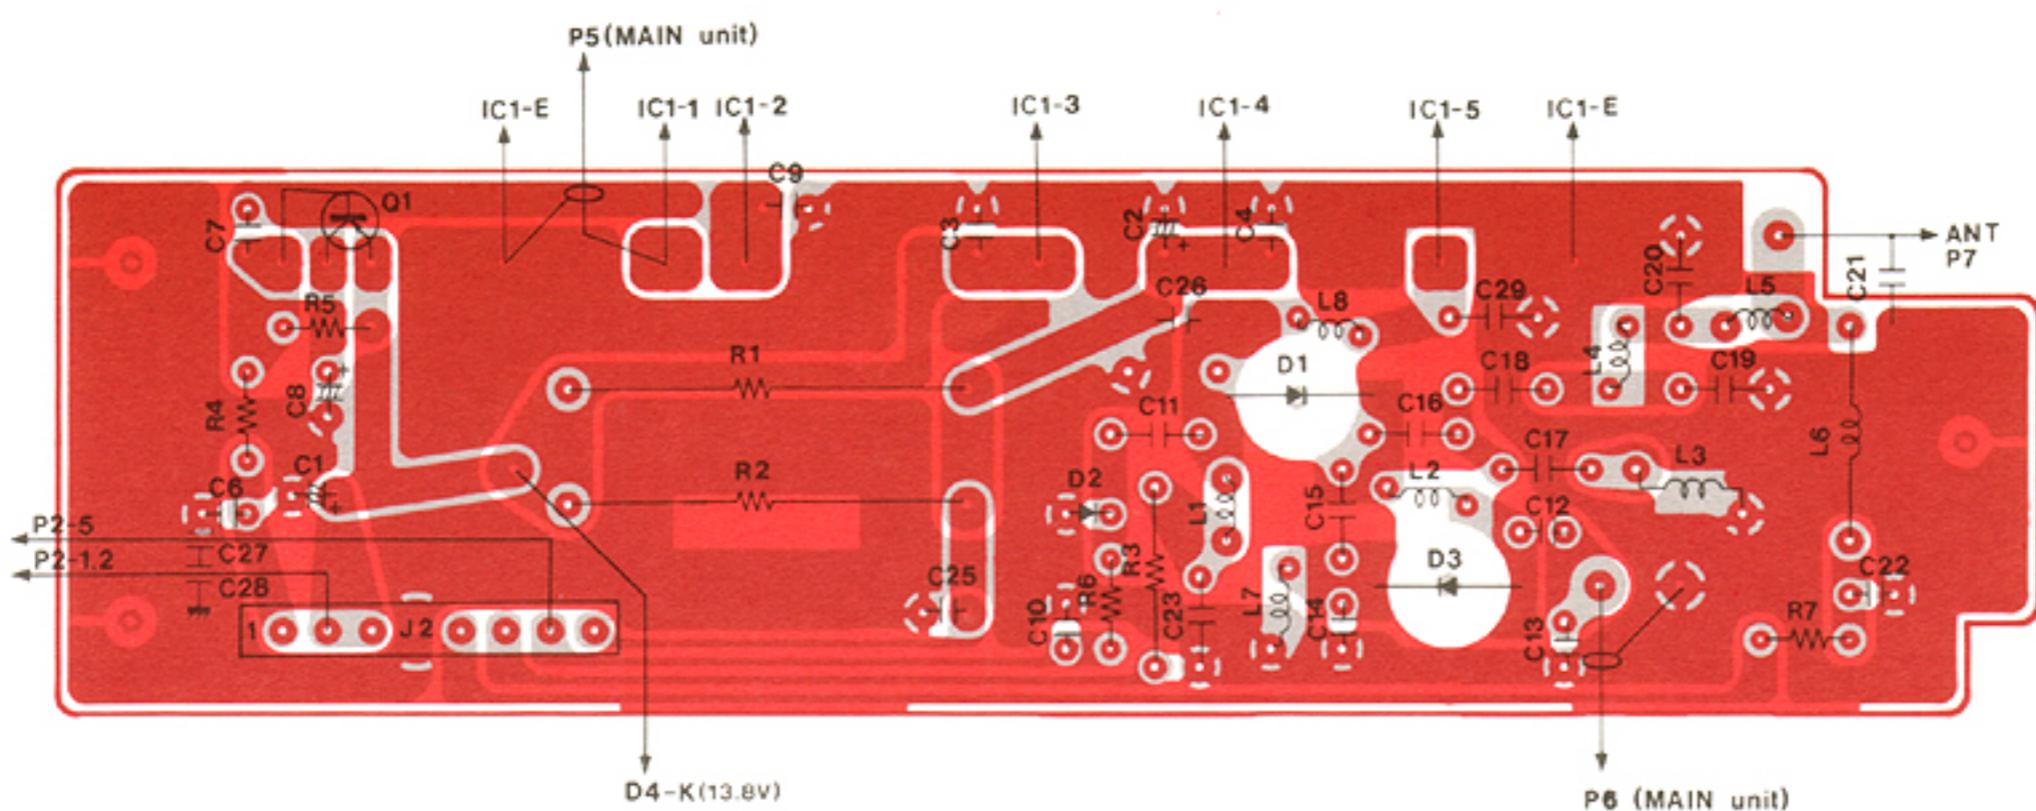

VCO UNIT

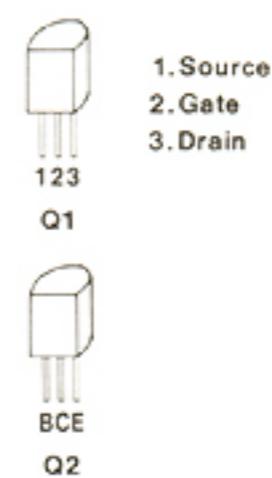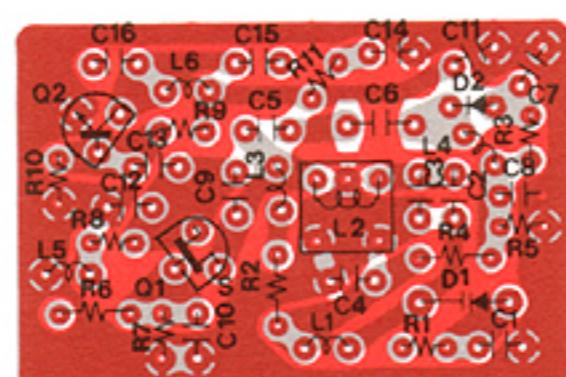

VCO UNIT
B-917

SECTION 10 IC SPECIFICATIONS


M51909	(EF unit)	10- 2
M5218L	(MAIN unit)	10- 2
TA75393S	(MAIN unit)	10- 3
MC3357P	(MAIN unit)	10- 3
μPC577H	(MAIN unit)	10- 4
MB3756	(MAIN unit)	10- 4
μPC2002H	(MAIN unit)	10- 5
NJM4558D	(MAIN unit)	10- 5
TC4001BP	(LOGIC unit)	10- 6
TC4013BP	(LOGIC unit)	10- 6
TC4028BP	(LOGIC unit)	10- 6
TC4030BP	(LOGIC unit)	10- 6
TC4081BP	(LOGIC unit)	10- 6
TC4511BP	(LOGIC unit)	10- 6
μA78L062AW	(LOGIC unit)	10- 6
TC9123BP	(PLL unit)	10- 7
BA612	(LOGIC unit)	10- 7
TMS1024NLC	(LOGIC unit)	10- 8
S7116A	(LOGIC unit)	10- 9
DAN601	(LOGIC unit)	10- 9
SC1027	(PA unit).....	10-10

M51909P (LED LEVEL METER INDICATOR)

Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V_{CC}	16	V
Output current	I_o	25	mA
Input voltage	V_{IN}	$-3 \sim V_{CC}$	V
Operating free-air temperature range	T	$-20 \sim +75$	°C

PIN CONNECTION

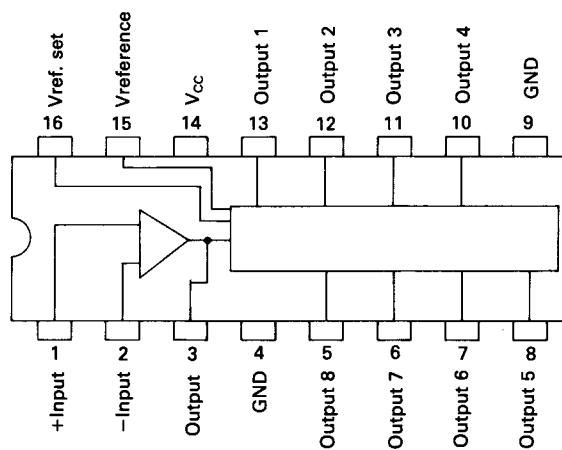


M5218L (DUAL AUDIO AMPLIFIER)

Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	$\pm V_{CC}$	± 18	V
Operating free-air temperature range	T	$-20 \sim +75$	°C

PIN CONNECTION

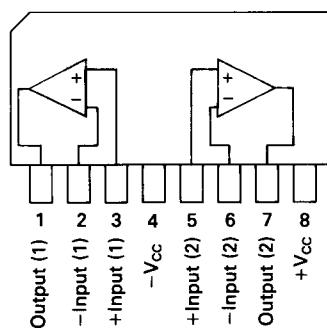


TA75393S (DUAL COMPARATOR)

Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V _{CC}	36	V
Operating free-air temperature range	T	-40 ~ 85	°C

PIN CONNECTION

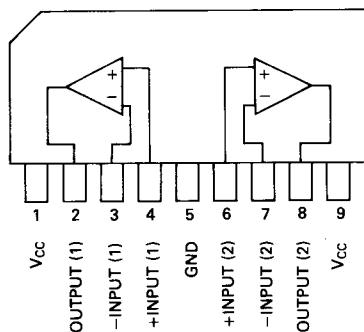


MC3357P (NARROW BAND FM IF)

Maximum Rating

Item	Symbol	Rating	Unit
Power supply voltage	V _{CC}	12	V
Operating free-air temperature range	T	-30 ~ 70	°C

PIN CONNECTION

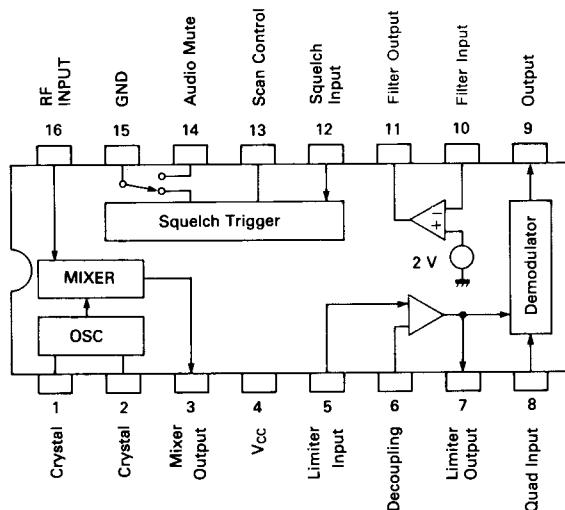


μPC577H (FM-IF AMPLIFIER)

Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V _{CC}	15	V
Input voltage	V _{IN}	±3.0	V
Operating free-air temperature range	T	-20 ~ 75	°C

PIN CONNECTION

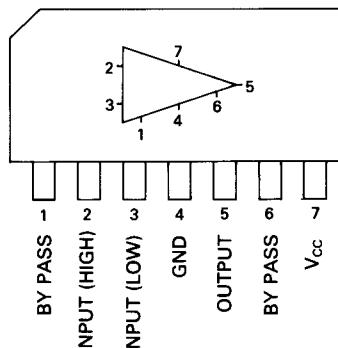


MB3756 (3-OUTPUT 8.2 V VOLTAGE REGULATOR)

Maximum Ratings

Item	Symbol	Rating	Unit
Input voltage	V _{IN}	18	V
Output current	I _{OUT}	100 (V _{out} (0), V _{out} (1)) 200 (V _{out} (2))	mA mA
Operating free-air temperature range	T	-20 ~ 75	°C

PIN CONNECTION

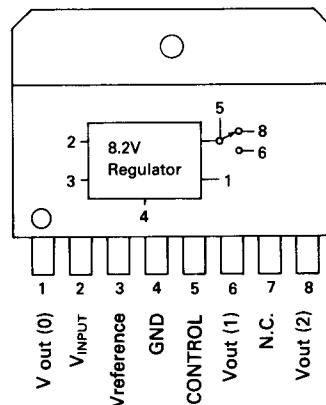


μPC2002H (5.4W AUDIO POWER AMPLIFIER)

Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V _{CC}	18	V
Output power	P _O	5.4 (4Ω Load)	W
Total dissipation	P _D	15	W
Audio distortion	T.H.D.	1.0	%
Operating free-air temperature range	T	-30 ~ 75	°C

PIN CONNECTION

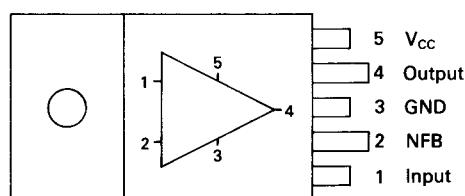


NJM 4558 D (DUAL OPERATIONAL AMPLIFIER)

Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V [±]	±18	V
Operating free-air temperature range	T	-20 ~ 75	°C

PIN CONNECTION

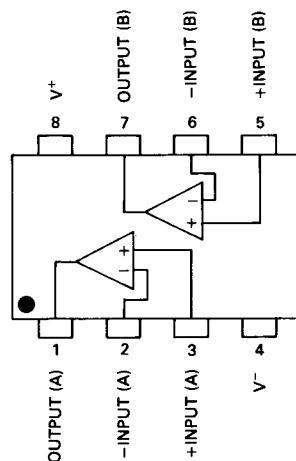


- TC4001UBP (Quad 2-input positive NOR GATE)**
TC4013BP (Dual D-type FLIP FLOP)
TC4028BP (BCD to Decimal DECODER)
TC4030BP (Quad Exclusive-OR GATE)
TC4081BP (Quad 2-input positive AND GATE)
TC4511BP (BCD to 7-SEGMENT DECODER and DRIVER)


Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V_{DD}	3 ~ 18	V
Input voltage	V_{IN}	$0 \sim V_{DD}$	V
Operating free-air temperature range	T	-40 ~ 85	°C


PIN CONNECTION

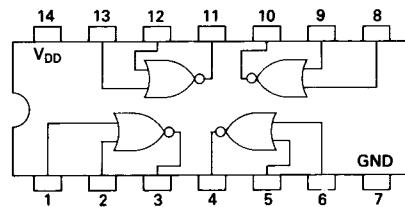


4001

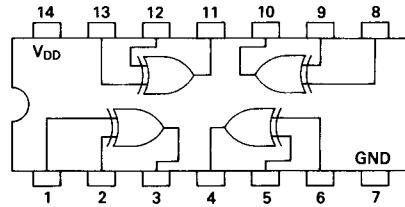


4030

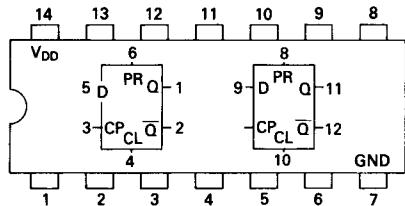


4013

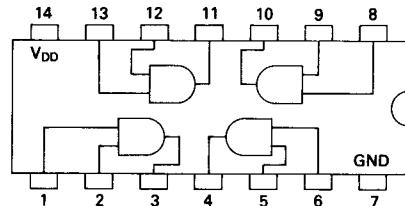

4081

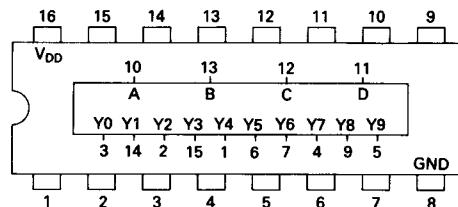

4028

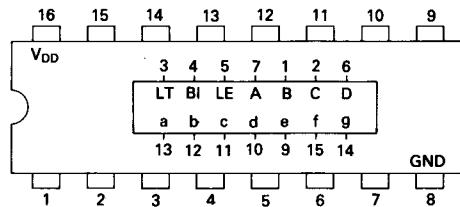


4511

μ A78L062AW (6.2V VOLTAGE REGULATOR)

Maximum Ratings

Item	Symbol	Rating	Unit
Input Voltage	V_{IN}	30	V
Total dissipation at 25°C	P	0.8	W
Operating free-air temperature range	T	0 ~ 150	°C

PIN CONNECTION

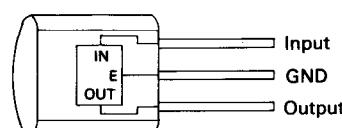


μ A78L062AW

TC9123BP (PROGRAMMABLE PHASE-LOCKED LOOP)

Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V_{DD}	-0.3 ~ 9.5	V
Input voltage	V_{IN}	-0.3 ~ $V_{DD} \pm 0.3$	V
Operating free-air temperature range	T	-30 ~ 70	°C

PIN CONNECTION

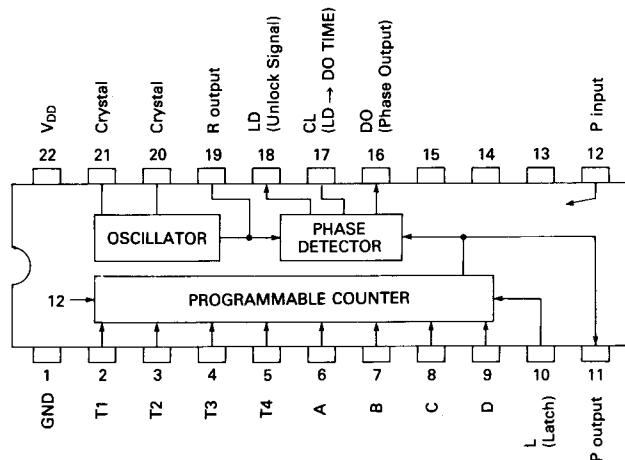


BA612 (5-UNIT 400 mA DARLINGTON TRANSISTOR ARRAY)

Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V_{CC}	30	V
Collector current	I_C	400	mA
Input voltage	V_{IN}	-0.5 ~ 30	V
Operating free-air temperature range	T	-25 ~ 75	°C

PIN CONNECTION

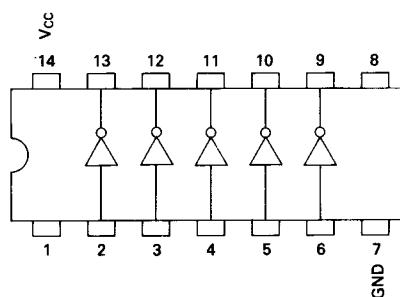


TMS1024NLC (I/O EXPANDER)


Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V_{DD}	7	V
Data input and output voltage	V_{IN}	$-0.3 \sim V_{DD} +0.3$	V
Operating free-air temperature range	T	$-10 \sim 70$	°C

PIN CONNECTIONS

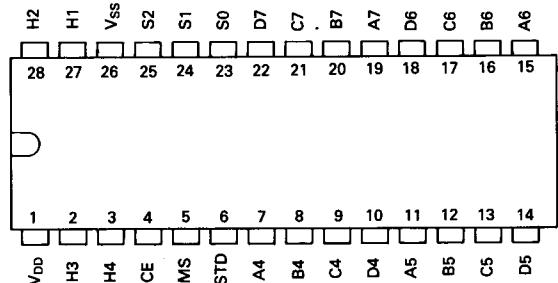

BLOCK DIAGRAM

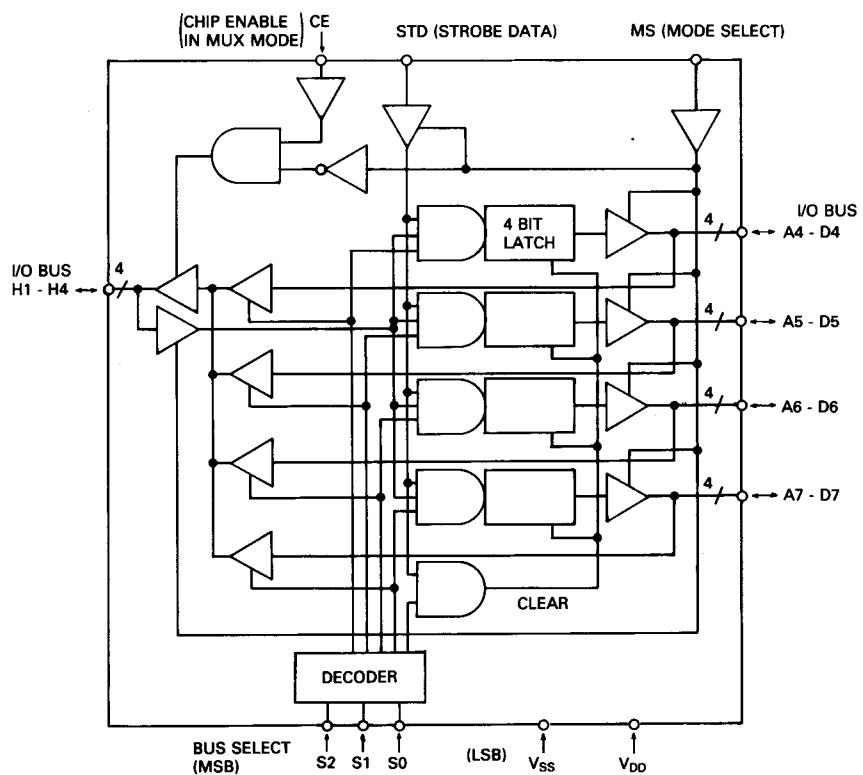


S-7116A (PROGRAMMABLE TONE GENERATOR)

Maximum Ratings

Item	Symbol	Rating	Unit
Power supply voltage	V _{DD}	12	V
Operating free-air temperature range	T	-25 ~ 70	°C

PIN CONNECTION

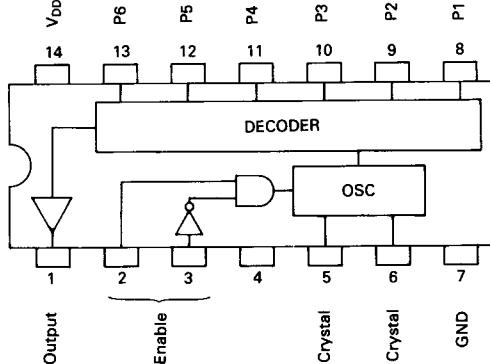

PROGRAMMING TABLE

Tone freq.	P1	P2	P3	P4	P5	P6	Tone freq.	P1	P2	P3	P4	P5	P6	Tone freq.	P1	P2	P3	P4	P5	P6	
67.0	1						136.5	1	1		1			500	1	1	1		1		
71.9		1					141.3		1	1		1		600			1		1		
74.4	1	1					146.2	1	1	1		1		700	1		1	1	1		
77.0			1				151.4				1	1		800	1	1	1	1	1		
79.7	1	1					156.7	1		1	1			900	1	1	1	1	1		
82.5		1	1				162.2		1		1	1		1000			1	1	1	1	
85.4	1	1	1				167.9	1	1		1	1		1600	1		1	1	1		
88.5				1			173.8			1	1	1		1700		1	1	1	1		
91.5	1			1			179.9	1		1	1	1		1750	1	1	1	1	1		
94.8		1		1			186.2		1	1	1	1		1800				1	1		
97.4	1	1	1				192.8	1	1	1	1	1		1300	1			1	1		
100.0			1	1			203.5					1		2000		1			1	1	
103.5	1		1	1			210.7	1				1		2200	1	1		1	1		
107.2		1	1	1			218.1			1		1		2975			1	1	1	1	
110.9	1	1	1	1			225.7	1	1			1		2550	1	1	1	1	1		
114.8				1			233.6			1		1		2295		1	1	1	1	1	
118.8	1			1			241.8	1		1		1		2125	1	1	1	1	1		
123.0		1			1		250.3		1	1		1		1275			1	1	1	1	
127.3	1	1		1										1445	1		1	1	1		
131.8			1	1																	


NOTE) 1 : V_{DD}
Blank : Ground or Open
Crystal frequency : 3.579545MHz

DAN601 (DIODE ARRAY)

Maximum Ratings

Item	Symbol	Rating	Unit
Reverse bias voltage	V _R	35	V
Forward current	I _F	25	mA
Operating free-air temperature range	T	-40 ~ 85	°C

PIN CONNECTION

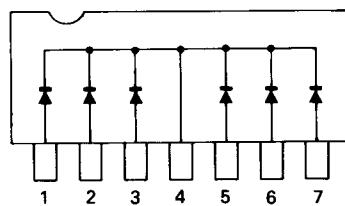


SC-1027 (25W UHF RF POWER AMPLIFIER)

Maximum Ratings ($T_c = 25^\circ\text{C}$)

Item	Symbol	Rating	Unit
Power supply voltage	V_{cc}	17	V
Input signal power	P_{IN}	0.5	W
Output signal power	P_{out}	40	W
Operating free-air temperature range	T	$-30 \sim +110$	$^\circ\text{C}$

PIN CONNECTION

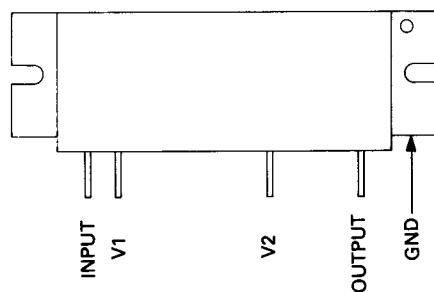

SECTION 11 PARTS LIST

[EF] UNIT

REF. NO. **DESCRIPTION** **TYPE (PARTS NO.)**

IC1	IC	M51909P
Q1	Transistor	2SA1048Y
D1	Diode	1SS211
D2	Diode	1SS211
D6	Diode	1SS211
D7	Diode	1SS211
D8	Diode	1SS211
D9	Diode	1SS211 (#04)
D10	Diode	1SS211 (#04)
D11	Diode	1SS211
D12	Diode	1SS211
D13	Diode	1SS211
D14	Diode	1SS211 (#05, 07)
R1	Resistor	470 ELR10
R2	Resistor	220 ELR10
R3	Resistor	1k ELR10
R4	Resistor	220 ELR10
R5	Resistor	220 ELR10
R6	Resistor	470 ELR10
R7	Resistor	220 ELR10
R8	Resistor	680 ELR10
R9	Resistor	220 ELR10
R10	Resistor	220 ELR10
R11	Resistor	220 ELR10
R12	Resistor	680 ELR10
R13	Resistor	5.6k EKR10
R14	Resistor	10k ELR10
R15	Resistor	56k ELR10
R16	Variable	10kA K09111
R17	Variable	10kB×2 K0921F20
R18	Resistor	10k R20
R20	Resistor	470k ELR10
R21	Resistor	100k ELR10
C1	Electrolytic	10 16V MS7
C2	Electrolytic	2.2 50V MS5 or RC3
C3	Ceramic	0.001 50V
C4	Ceramic	0.001 50V
C5	Ceramic	0.001 50V
C6	Ceramic	0.001 50V
C7	Ceramic	0.001 50V
C8	Ceramic	0.001 50V
C9	Ceramic	0.001 50V
C10	Ceramic	0.001 50V
C11	Ceramic	47p 50V

[EF] UNIT

REF. NO. **DESCRIPTION** **TYPE (PARTS NO.)**

P1	Connector	EHR-7
P2	Connector	EHR-4
P3	Connector	EHR-5
P4	Connector	EHR-6
P5	Connector	EHR-8
P6	Connector	EHR-3
P7	Connector	EHR-3
P8	Connector	EHR-5
P9	Connector	EHR-5
P10	Connector	EHR-5
P11	Connector	EHR-3
P12	Connector	EHR-4
P13	Connector	EHR-3
P14	Connector	EHR-2
P15	Connector	EHR-2
P16	Connector	EHR-2
P17	Connector	EHR-2
P18	Connector	EHR-2
DS1	LED Display	LS054-E (#04)
DS1	LED Display	LS054-J (#05, 07)
S1	Switch	SPH222A
S2	Switch	SPH221A
S3	Switch	SPH222A
S4	Switch	SPH221A
S5	Switch	SPH222A
S6	Switch	SPH222A
S7	Switch	HKW0269-01-200
S8	Switch	HKW0269-01-200
S9	Switch	HKW0269-01-200
S10	Switch	HKW0269-01-200
S11	Switch	HKW0269-01-200
S12	Switch	SPH221A
S13	Switch	SPH221A (#04)
S13	Switch	SPH222A (#05, 07)
S14	Rotary Encoder	EWT-XCCS2025B

J1	Connector	FM-214-8SS(P)
J2	Connector	TLB-P04H-B1
J3	Connector	TLB-P05H-B1
J4	Connector	TLB-P03H-B1
J5	Connector	TLB-P11H-B1
J6	Connector	TLB-P07H-B1
J7	Connector	TLB-P05H-B1
J8	Connector	TLB-P03H-B1
J9	Connector	TLB-P02H-B1
J10	Connector	TLB-P10H-B1

[MAIN] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
IC1	IC	MC3357P
IC2	IC	TA75393S
IC3	IC	M5218L
IC4	IC	μPC2002H
IC5	IC	MB3756
IC6	IC	μPC577H
IC7	IC	NJM4558D

[MAIN] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)	
Q1	FET	3SK121-Y	
Q2	FET	2SK125	
Q3	FET	3SK121-Y	
Q4	Transistor	2SC2668-0	
Q5	Transistor	2SC945-K	
Q6	Transistor	2SC3019	
Q7	Transistor	2SC2026	
Q8	Transistor	2SC2026	
Q9	Transistor	2SA1048-Y	
Q10	Transistor	2SC2458-GR	
Q11	Transistor	2SC2458-GR	
Q12	Transistor	2SC1571-G	
D1	Zener	RD6.2EB2	
D2	Diode	1SS53	
D3	Diode	1S953	
D4	Diode	1S953	
D5	Diode	1SS53	
D6	Diode	1SS53	
D7	Diode	1SS53	
D9	Diode	1SS99	
D10	Diode	1SS53	
D11	Diode	1SS133	
D12	Diode	LTZ-MR15	
D13	Diode	1SS53	
FI1	Crystal Filter	23M15B3	
FI2	Ceramic Filter	CFU455E2	
X1	Crystal	HC-18/T21.345MHz	
X2	Ceramic Discr.	CDB455C7A	
L1	Coil	LA-159	
L2	Coil	LA-159	
L3	Coil	LA-159	
L4	Coil	LA-159	
L5	Coil	LA-159	
L6	Coil	LA-147	
L7	Coil	LS-66	
L8	Coil	LS-66	
L9	Coil	LA-147	
L10	Coil	LA-147	
L11	Coil	LA-147	
L12	Coil	LA-147	
L13	Coil	LA-159	
L14	Coil	LA-158	
L15	Choke	LW-15	
L16	Choke	LAL03NA-121K	
L17	Bead Core	BT01RNI-A61	
L18	Choke	LAL03NA-101K	
R1	Resistor	220	ELR20
R2	Resistor	100	R20
R3	Resistor	47	ELR20
R4	Resistor	22	ELR20
R5	Resistor	470	ELR20
R6	Resistor	100	ELR20
R7	Resistor	1k	ELR20
R8	Resistor	4.7k	ELR20
R9	Resistor	10k	ELR20
R10	Resistor	22k	ELR20
R11	Resistor	47	ELR20
R13	Resistor	100	ELR20
R14	Resistor	3.3k	ELR20

[MAIN] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)	
R15	Resistor	3.9k	ELR20
R16	Resistor	4.7k	ELR20
R17	Resistor	100k	ELR20
R18	Resistor	3.9k	ELR20
R19	Resistor	10k	ELR20
R20	Resistor	330k	ELR20
R21	Resistor	82k	ELR20
R22	Resistor	10k	ELR20
R23	Resistor	22k	R20
R24	Resistor	1.5k	ELR20
R25	Resistor	1.5k	ELR20
R26	Resistor	47k	ELR20
R27	Resistor	1.5k	ELR20
R28	Resistor	47	R20
R29	Resistor	15k	ELR20
R30	Resistor	47	R20
R31	Resistor	100	ELR20
R32	Resistor	1k	ELR20
R33	Resistor	1k	ELR20
R34	Resistor	470	R20
R35	Resistor	47	ELR20
R36	Resistor	47	ELR20
R37	Resistor	220	R20
R38	Resistor	470	ELR20
R39	Resistor	47	ELR20
R40	Resistor	47	ELR20
R41	Resistor	1k	ELR20
R42	Resistor	2.2k	ELR20
R43	Resistor	1k	ELR20
R44	Resistor	2.2k	ELR20
R45	Resistor	1k	ELR20
R46	Resistor	22k	ELR20
R47	Resistor	10k	ELR20
R48	Resistor	1k	R20
R49	Trimmer	1k	H0651A
R50	Thermistor	33D28	
R51	Resistor	680	R20
R52	Resistor	10k	ELR20
R53	Resistor	10k	ELR20
R54	Resistor	100	R20
R55	Resistor	15k	R20
R56	Resistor	100k	ELR20
R57	Resistor	4.7k	R20
R58	Resistor	4.7k	R20
R59	Resistor	470	R20
R60	Resistor	5.6k	R20
R61	Resistor	15k	ELR20
R62	Resistor	5.6k	ELR20
R63	Trimmer	33k	H0521A
R64	Resistor	47k	ELR20
R65	Resistor	47k	ELR20
R66	Resistor	22k	ELR20
R67	Resistor	470k	ELR20
R68	Resistor	330	R20
R69	Resistor	47	ELR20
R70	Resistor	680k	ELR20
R71	Trimmer	470k	H0651A
R72	Resistor	180k	R20
R73	Resistor	18k	ELR20
R74	Trimmer	4.7k	H0651A
R75	Resistor	150	ELR20
R76	Resistor	4.7	R20
R77	Resistor	1k	ELR20
R78	Resistor	1.8k	ELR20

[MAIN] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
R79	Resistor	5.6k
R80	Resistor	220
R81	Resistor	1k
R82	Resistor	100
R83	Resistor	270k
R84	Resistor	220k
R85	Resistor	18k
R86	Resistor	47
R87	Resistor	100
R88	Trimmer	220k
R89	Resistor	150k
R90	Resistor	390k
R91	Resistor	270k
R92	Resistor	82k
R93	Resistor	82k
R94	Trimmer	3.3k
R97	Resistor	10k
R98	Resistor	10k
R99	Thermistor	33D28
R100	Resistor	15k
R101	Resistor	120k
R102	Resistor	10k
R103	Resistor	470k
R104	Resistor	4.7
C1	Ceramic	12p
C2	Trimmer	ECR-GA006A30
C3	Ceramic	3p
C4	Ceramic	0.001
C5	Ceramic	0.001
C6	Ceramic	0.001
C7	Ceramic	3p
C8	Trimmer	ECR-GA006A30
C9	Ceramic	0.001
C10	Ceramic	0.001
C11	Ceramic	0.75p
C12	Ceramic	0.5p
C13	Ceramic	3p
C14	Trimmer	ECR-GA006A30
C15	Ceramic	0.001
C16	Trimmer	ECR-GA006A30
C17	Ceramic	1p
C18	Ceramic	0.5p
C19	Ceramic	0.35p
C20	Ceramic	0.001
C21	Ceramic	0.001
C22	Trimmer	ECR-GA006A30
C23	Ceramic	3p
C24	Trimmer	ECR-GA006A30
C25	Ceramic	0.001
C26	Ceramic	0.001
C27	Ceramic	27p
C28	Ceramic	0.001
C29	Ceramic	5p
C30	Ceramic	27p
C31	Ceramic	82p
C32	Ceramic	0.001
C33	Ceramic	0.0047
C34	Ceramic	0.0047
C35	Electrolytic	2.2
C36	Electrolytic	1
C37	Electrolytic	10
C38	Barrier Layer	0.0022
C39	Ceramic	470p

[MAIN] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
C40	Barrier Layer	0.0015
C41	Ceramic	33p
C42	Barrier Layer	0.0015
C43	Electrolytic	1
C44	Ceramic	0.001
C45	Electrolytic	10
C46	Ceramic	120p
C47	Ceramic	68p
C48	Tantalum	1
C49	Tantalum	0.1
C50	Barrier Layer	0.1
C51	Ceramic	82p
C52	Ceramic	5p
C53	Trimmer	ECR-GA010D30
C54	Ceramic	0.001
C55	Ceramic	0.001
C56	Ceramic	0.001
C57	Ceramic	5p
C58	Trimmer	ECR-GA006A30
C59	Ceramic	0.001
C60	Ceramic	0.001
C61	Ceramic	0.001
C62	Ceramic	0.001
C63	Ceramic	10p
C64	Trimmer	ECR-GA006A30
C65	Ceramic	3p
C66	Ceramic	1p
C67	Ceramic	3p
C68	Trimmer	ECR-GA006A30
C69	Ceramic	0.001
C70	Ceramic	0.001
C71	Ceramic	0.001
C72	Ceramic	0.001
C73	Ceramic	10p
C74	Electrolytic	4.7
C75	Barrier Layer	0.1
C76	Barrier Layer	0.1
C77	Electrolytic	4.7
C78	Tantalum	0.1
C79	Tantalum	1
C80	Tantalum	0.1
C81	Ceramic	10p
C82	Barrier Layer	TBD05X103M
C83	Barrier Layer	TBD05X103M
C84	Barrier Layer	0.1
C85	Barrier Layer	820p
C86	Ceramic	0.001
C87	Barrier Layer	0.1
C88	Tantalum	2.2
C89	Electrolytic	2.2
C90	Ceramic	0.001
C91	Ceramic	0.001
C92	Ceramic	0.001
C93	Barrier Layer	TBD05X103M
C94	Ceramic	0.001
C95	Electrolytic	1
C96	Ceramic	0.001
C97	Electrolytic	100
C98	Electrolytic	220
C99	Electrolytic	470
C100	Tantalum	0.1
C101	Tantalum	0.1
C102	Barrier Layer	TBD05X103M
C103	Barrier Layer	0.0047

[MAIN] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)			REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
C104	Electrolytic	10	16V	MS5	D203	Diode	1SS53
C105	Ceramic	0.001	50V	B	D204	Diode	1SS53
C106	Barrier Layer	0.047	25V		D205	Diode	1SS53 (#04)
C107	Electrolytic	100	10V	MS7	D206	Diode	1SS53 (#04)
C108	Ceramic	0.001	50V	B	D207	Varactor	1SV50
C109	Electrolytic	0.47	25V	BP	D208	Varactor	1SV50
C110	Barrier Layer	0.01	25V		D209	Diode	1SS53
C111	Ceramic	0.001	50V	B	D210	Diode	1SS53
C112	Ceramic	0.001	50V	B	D211	Diode	1SS53
C113	Electrolytic	0.22	50V	MS7	D212	Diode	1SS53
C114	Electrolytic	10	16V	MS5	D214	Zener	RD6.8EB3
C115	Ceramic	0.001	50V	B	D215	Diode	1SS53 (#04)
C116	Mylar	0.0022	50V		D216	Diode	1SS53
C117	Ceramic	120p	50V				
C118	Ceramic	0.001	50V	B	X201	Crystal	HC43/U 34.912MHz (#04, 07)
C119	Ceramic	0.001	50V	B	X201	Crystal	HC43/U 35.745MHz (#05)
C120	Monolithic	470p	50V	GR42-6	X202	Crystal	HC43/U 33.095MHz (#04, 07)
C121	Electrolytic	0.47	50V	BP	X202	Crystal	HC43/U 33.929MHz (#05)
C123	Ceramic	0.001	50V		X203	Crystal	HC12/U 2.560MHz
C124	Ceramic	0.001	50V				
B1	MAIN. PCB	B-916C			L201	Coil	LS-107
P1	Connector	EHR-7			L202	Coil	LS-107
J1	MINI PIN	TMP-J01X-A1			L203	Coil	LS-145
J2	MINI PIN	TMP-J01X-A1			L204	Coil	LS-230A
J3	Connector	B2B-EH-S			L205	Coil	LS-230A
J4	Connector	B3B-EH-S			L206	Choke	EL0810SK13R9K
J5	Connector	B2B-EH-S			L207	Choke	LAL04NA-102K
J6	Connector	B3B-EH-S			L208	Coil	LA-126
J7	Connector	B2B-EH-S			L209	Coil	LA-159
J8	Connector	B4B-EH-S			L210	Coil	LA-135
J9	Connector	B3B-EH-S			R201	Resistor	100k ELR20 (#04)
J10	Connector	B5B-EH-S			R202	Resistor	10k ELR20
J11	Connector	B2B-EH-S			R203	Resistor	47 ELR20
J12	Connector	B2B-EH-S			R204	Trimmer	220k H0521A (#04)
					R205	Trimmer	100k H0521A (#04)
					R206	Trimmer	47k H0521A
					R207	Trimmer	22k H0521A
					R208	Trimmer	22k H0521A (#04)
					R209	Trimmer	2.2k H0521A (#04)
					R210	Resistor	39k ELR20 (#04)

[PLL] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)			REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
IC201	IC	TC9123BP			R211	Resistor	8.2k ELR20
Q201	Transistor	2SC3399 (#04)			R212	Resistor	82k ELR20 (#04)
Q202	Transistor	2SC3399			R213	Resistor	22k ELR20 (#04)
Q203	Transistor	2SC3399 (#04)			R213	Resistor	8.2k ELR20 (#05, 07)
Q204	Transistor	2SA1348			R214	Resistor	470 ELR20
Q205	Transistor	2SA1348			R216	Resistor	470 ELR20
Q206	Transistor	2SC383-TM			R217	Resistor	47k ELR20 (#04)
Q207	Transistor	2SC763-C			R217	Resistor	33k ELR20 (#05, 07)
Q208	FET	3SK74-M			R218	Resistor	33k ELR20
Q209	Transistor	2SC763-C			R221	Resistor	3.9k ELR20
Q210	Transistor	2SC2458			R222	Resistor	100 ELR20
Q211	FET	3SK74-M			R223	Resistor	3.9k ELR20
Q212	FET	3SK74-M			R225	Resistor	47k ELR20
Q213	Transistor	2SC763-C			R226	Resistor	15k ELR20
Q214	Transistor	2SC2026			R228	Resistor	4.7k ELR20
Q215	Transistor	2SC2026			R229	Resistor	100 ELR20
Q216	Transistor	2SA1348 (#04)			R230	Resistor	47k ELR20
D201	Diode	1SS53 (#04)			R231	Resistor	22k ELR20
D202	Diode	1SS53 (#04)			R232	Resistor	1k ELR20
					R235	Resistor	15k ELR20
					R236	Resistor	47k ELR20
					R237	Resistor	47 ELR20
					R238	Resistor	22k ELR20

[PLL] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)		REF. NO.	DESCRIPTION	TYPE (PARTS NO.)	
R239	Resistor	4.7k	ELR20	C231	Ceramic	470p	50V
R240	Resistor	1.5k	ELR20	C232	Ceramic	470p	50V
R242	Resistor	100k	ELR20	C233	Ceramic	470p	50V
R243	Resistor	120	ELR20	C234	Ceramic	470p	50V
R244	Resistor	100	ELR20	C235	Ceramic	470p	50V
R246	Resistor	68k	R20	C236	Ceramic	33p	50V CH
R247	Resistor	100	ELR20	C237	Ceramic	33p	50V CH
R248	Resistor	470	R20	C238	Tantalum	2.2	16V
R249	Resistor	47	ELR20	C239	Barrier Layer	0.1	16V
R250	Resistor	47	R20	C240	Electrolytic	47	10V
R251	Resistor	47k	R25	C241	Ceramic	0.0047	50V
R252	Resistor	10k	R20	C242	Electrolytic	470	16V
R253	Resistor	470	R20	C243	Ceramic	0.001	50V
R254	Resistor	1k	ELR20	C244	Tantalum	10	16V
R255	Resistor	10k	R20	C245	Tantalum	2.2	16V
R256	Resistor	8.2k	ELR20	C246	Ceramic	0.0047	50V
R257	Resistor	270	R20	C247	Cylinder	47p	UP125SL
R258	Resistor	220	ELR20	C248	Ceramic	0.001	50V
R259	Resistor	47	R20	C249	Ceramic	3p	50V
R260	Resistor	100	ELR20 (#04, 07)	C250	Ceramic	0.001	50V
R261	Resistor	56k	ELR20	C252	Trimmer	ECR-GA006A30	
R262	Resistor	68k	ELR20	C253	Ceramic	1p	50V
R263	Resistor	15k	ELR20	C254	Trimmer	ECR-GA006A30	
R264	Resistor	2.7k	ELR20	C255	Ceramic	3p	50V
R265	Resistor	120	R20	C256	Ceramic	15p	50V
R266	Resistor	47k	ELR20	C258	Ceramic	0.0047	50V
R267	Resistor	470	R20	C259	Ceramic	0.0047	50V
				C260	Barrier Layer	0.1	16V

C201	Ceramic	51p	50V	CH	J201	Connector	TLB-P04H-B1
C202	Ceramic	5p	50V	UJ (#05, 07)	J202	Connector	TLB-P12-B1
C203	Ceramic	0.0047	50V		P201	Connector	EHR-7
C204	Ceramic	100p	50V	CH (#04, 07)	P202	Connector	EHR-9
C205	Ceramic	7p	50V	UJ			
C206	Electrolytic	4.7	25V	MS7			
C207	Ceramic	100p	50V				
C208	Ceramic	47p	50V	CH			
C209	Ceramic	51p	50V	CH			
C210	Ceramic	0.001	50V	(#04, 07)			
C210	Barrier Layer	TMD05×103M (#05)					
C211	Ceramic	15p	50V	(#04, 07)	Q1	FET	2SK125
C211	Ceramic	12p	50V	(#05)	Q2	Transistor	2SC2026
C212	Ceramic	7p	50V	(#04, 07)	D1	Varactor	1SV50
C212	Ceramic	5p	50V	(#05)	D2	Diode	MI301
C213	Ceramic	0.001	50V				
C214	Ceramic	10p	50V	(#04, 07)	L1	Choke	LAL03NA1R0M
C214	Ceramic	9p	50V	(#05)	L2	Coil	LB-140
C215	Ceramic	0.001	50V	(#04, 07)	L3	Choke	LAL03NA1R0M
C215	Barrier Layer	TMD05×103M (#05)			L4	Choke	LAL03NA1R0M
C216	Ceramic	0.5p	50V		L5	Choke	LAL03NA1R0M
C217	Ceramic	10p	50V		L6	Choke	LAL03NA1R0M
C218	Ceramic	0.001	50V				
C219	Ceramic	33p	50V				
C220	Ceramic	33p	50V		R1	Resistor	470
C221	Ceramic	0.0047	50V		R2	Resistor	100
C222	Ceramic	0.0047	50V		R3	Resistor	47
C223	Ceramic	0.0047	50V		R4	Resistor	4.7k
C224	Barrier Layer	0.1	16V		R5	Resistor	4.7k
C225	Barrier Layer	0.1	16V		R6	Resistor	22k
C226	Ceramic	470p	50V		R7	Resistor	330
C227	Ceramic	470p	50V		R8	Resistor	330
C228	Ceramic	470p	50V		R9	Resistor	5.6k
C229	Ceramic	470p	50V		R10	Resistor	1k
C230	Ceramic	470p	50V		R11	Resistor	220

[VCO] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)	
Q1	FET	2SK125	
Q2	Transistor	2SC2026	
D1	Varactor	1SV50	
D2	Diode	MI301	
L1	Choke	LAL03NA1R0M	
L2	Coil	LB-140	
L3	Choke	LAL03NA1R0M	
L4	Choke	LAL03NA1R0M	
L5	Choke	LAL03NA1R0M	
L6	Choke	LAL03NA1R0M	
R1	Resistor	470	ELR10
R2	Resistor	100	ELR10
R3	Resistor	47	ELR10
R4	Resistor	4.7k	ELR10
R5	Resistor	4.7k	ELR10
R6	Resistor	22k	ELR10
R7	Resistor	330	ELR10
R8	Resistor	330	ELR10
R9	Resistor	5.6k	ELR10
R10	Resistor	1k	ELR10
R11	Resistor	220	ELR10

[VCO] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)		REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
C1	Ceramic	470p	50V	Q26	Transistor	2SC2458GR
C2	Ceramic	10p	50V	Q27	Transistor	2SA1048Y
C3	Ceramic	3p	50V	Q28	Transistor	2SC2458GR
C3	Ceramic	2p	50V	Q29	Transistor	2SC3399
C4	Ceramic	0.001	50V	Q30	Transistor	2SC3399
C5	Ceramic	22p	50V	Q31	Transistor	2SD1225M, R or Q
C5	Ceramic	18p	50V	Q32	Transistor	2SD1225M, R or Q
C6	Trimmer	CTZ-31E		Q33	Transistor	2SA1048Y
C7	Ceramic	470p	50V	Q34	Transistor	2SC3399
C8	Ceramic	0.001	50V	Q35	Transistor	2SC3399 (#05, 07)
C9	Ceramic	15p	50V	TH	Transistor	2SC3399 (#04)
C10	Ceramic	0.001	50V	Q36	Transistor	2SC3399 (#04)
C11	Ceramic	0.001	50V	Q37	Transistor	2SA1048Y (#05)
C12	Ceramic	10p	50V	Q38	Transistor	2SA1048Y (#05)
C12	Ceramic	8p	50V	Q39	Transistor	2SA1048Y (#05)
C13	Ceramic	1p	50V	D2	Diode	ISS133
C14	Ceramic	0.001	50V	D7	Diode	ISS133
C15	Ceramic	0.5p	50V	D8	Diode	ISS133
C16	Ceramic	12p	50V	D10	Diode	ISS133
B1	VCO PCB	B-917		D11	Diode	ISS133
				D13	Diode	ISS133
				D14	Diode	ISS133
				D15	Diode	ISS133
				D17	Diode	ISS133
				D18	Diode	ISS133

[LOGIC] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)		REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
IC1	IC	4013B		D19	Diode	ISS133
IC2	IC	4001UBP		D20	Diode	ISS133
IC3	IC	4030B		D21	Diode	ISS133
IC4	IC	4081B		D22	Diode	ISS133
IC5	IC	μA78L062AW		D23	Diode	ISS133
IC6	IC	TMP47C40-6001		D24	Diode	ISS133
IC7	IC	4028B		D25	Diode	ISS133
IC8	IC	4511B		D26	Diode	ISS133
IC9	IC	BA612		D27	Diode	ISS133
IC10	IC	TMS1024NLC or M50781SP		D28	Diode	ISS133
IC11	IC	BA612		D29	Diode	ISS133
IC12	IC	BA612		D30	Diode	ISS133
IC13	IC	S-7116A	(#05, 07)	D31	Diode	ISS133
IC14	Diode Array	DAN601	(#05, 07)	D32	Diode	ISS133
				D33	Diode	ISS133
				D34	Diode	ISS133
				D35	Diode	ISS133
Q1	Transistor	2SA1345	(#04)	D36	Diode	ISS133
Q2	Transistor	2SC945P		D37	Diode	ISS133
Q3	Transistor	2SD468C		D39	Diode	ISS133
Q6	Transistor	2SC2458GR		D40	Diode	ISS133
Q8	Transistor	2SA1345		D41	Diode	ISS133
Q9	Transistor	2SC2458GR		D42	LED	TLR123
Q10	Transistor	2SC2458GR		D43	Zener	RD5.1EB2
Q11	Transistor	2SC2458GR		D44	Zener	RD6.8EB3
Q12	Transistor	2SC2458GR		D45	Diode	ISS133
Q13	Transistor	2SC2458GR		D46	Diode	ISS133
Q14	Transistor	2SA1048Y		D47	Diode	ISS133
Q15	Transistor	2SA1048Y		D48	Diode	ISS133
Q16	Transistor	2SC2458GR		D49	Diode	ISS133
Q17	Transistor	2SC3399		D50	Diode	ISS133
Q18	Transistor	2SC2458GR		D51	Diode	ISS133
Q19	Transistor	2SA1048Y		D52	Diode	ISS133
Q20	Transistor	2SA1048Y		D53	Diode	ISS133
Q21	Transistor	2SA1048Y		D54	Diode	ISS133 (#04)
Q22	Transistor	2SA1048Y		D55	Diode	ISS133 (#05)
Q23	Transistor	2SA1048Y		D56	Diode	ISS133 (#05)
Q24	Transistor	2SA1048Y		D57	Diode	ISS133 (#05)
Q25	Transistor	2SC2458GR		D58	Diode	ISS133

[LOGIC] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
D59	Diode	ISS133
D60	Diode	ISS133
D61	Diode	ISS133
D62	Diode	ISS133
D63	Diode	ISS133
D65	Diode	ISS133
D66	Diode	ISS133
D67	Diode	ISS133
D70	Diode	ISS133
D71	Diode	ISS133 (#04)
D72	Diode	ISS133
D75	Diode	ISS133 (#04)
D76	Diode	ISS133 (#04)
D78	Diode	ISS133
D79	Diode	ISS133
D82	Diode	ISS133 (#04, 07)
D83	Diode	ISS133
D84	Diode	ISS133 (#05)
D90	Diode	ISS133 (#05)
D91	Diode	ISS133 (#05)
D92	Diode	ISS133
D93	Diode	ISS133
D94	Diode	ISS133
X1	Ceralock	CSA5.00MT or MG
X2	Crystal	HC-43/U 3.5795MHz (#05, 07)
R1	Resistor	3.3k ELR20
R2	Resistor	470 R20
R3	Resistor	22 ELR20
R4	Resistor	1k R20
R5	Resistor	22k ELR20
R6	Resistor	22k ELR20
R8	Resistor	22k ELR20
R9	Resistor	100k ELR20
R13	Resistor	47k ELR20
R14	Resistor	220k ELR20
R15	Resistor	1M ELR20
R16	Resistor	22k ELR20
R17	Resistor	1M ELR20
R18	Resistor	22k ELR20
R19	Resistor	4.7k ELR20
R20	Resistor	47k ELR20
R21	Resistor	10k ELR20
R22	Resistor	22k ELR20
R23	Resistor	2.2k ELR20
R24	Resistor	4.7k ELR20
R26	Resistor	47k ELR20
R27	Resistor	47k ELR20
R28	Resistor	47k ELR20
R30	Resistor	47k ELR20
R31	Resistor	10k R20
R32	Resistor	82k ELR20
R33	Resistor	4.7k R20
R34	Resistor	150k ELR20
R35	Resistor	1k ELR20
R36	Resistor	220k ELR20
R37	Resistor	47k ELR20
R38	Resistor	1M ELR20
R39	Resistor	4.7k R20
R40	Resistor	1k ELR20
R41	Resistor	1M R20
R42	Resistor	100k ELR20
R43	Resistor	22k ELR20

[LOGIC] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
R44	Resistor	100k R20
R45	Resistor	47k R20
R46	Resistor	47k R20
R47	Resistor	47k R20
R48	Resistor	47k R20
R49	Resistor	47k R20
R50	Resistor	47k R20
R51	Resistor	47k R20
R52	Resistor	47k R20
R53	Resistor	22k R20
R54	Resistor	47k R20
R55	Resistor	47k R20
R56	Resistor	47k R20
R57	Resistor	390k ELR20
R58	Resistor	1M ELR20
R59	Resistor	47k ELR20
R60	Resistor	47k ELR20
R61	Resistor	10k ELR20
R62	Resistor	10k ELR20
R63	Resistor	22k ELR20
R64	Resistor	22 R50X
R65	Resistor	4.7k R20
R66	Resistor	4.7k ELR20
R67	Resistor	27 R50X
R68	Resistor	120 R50X
R69	Resistor	10k ELR20
R70	Resistor	4.7k R20
R71	Resistor	22k R20
R72	Resistor	47k R20
R73	Resistor	47k R20
R74	Resistor Array	RNSA 05S472J
R75	Resistor Array	RNSA 05S472J
R76	Resistor Array	RNSA 05S472J
R77	Resistor Array	RNSA 05S472J
R78	Resistor Array	RNSA 05S373J
R79	Resistor Array	RNSA 05S472J
R80	Resistor	4.7k ELR20
R81	Resistor	47k ELR20
R82	Resistor	47k R20
R83	Resistor Array	RNSA 05S472J
R84	Resistor	47k ELR20
R85	Resistor	1k ELR20
R86	Resistor	39 ELR20
R87	Resistor	39 ELR20
R88	Resistor	39 ELR20
R89	Resistor	39 ELR20
R90	Resistor	39 ELR20
R91	Resistor	39 ELR20
R92	Resistor	39 ELR20
R93	Resistor	22k ELR20 (#04)
R94	Resistor	22k ELR20 (#04)
R95	Resistor	22k ELR20
R96	Trimmer	47k H0651A (#05, 07)
R97	Resistor	33k ELR20 (#05, 07)
R98	Resistor	47k R20 (#05)
R99	Resistor	100k ELR20
R100	Resistor	47k R20
R102	Resistor	100k R20
R103	Resistor	100k R20
R104	Resistor	220 R20
R106	Resistor	47k R20
C1	Electrolytic	10 16V MS7 (#04)
C2	Ceramic	0.001 50V (#04)
C3	Barrier Layer	0.0047 25V

[LOGIC] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)		
C4	Barrier Layer	0.0047	25V	
C5	Electrolytic	1	50V	MS7
C6	Barrier Layer	0.0047	25V	
C7	Electrolytic	1	50V	MS7
C8	Barrier Layer	TBD05X103M	25V	
C10	Electrolytic	10	16V	MS7
C11	Electrolytic	10	16V	MS7
C12	Barrier Layer	0.047	25V	
C13	Ceramic	470p	50V	
C14	Ceramic	0.001	50V	
C15	Barrier Layer	0.047	25V	
C16	Barrier Layer	0.047	25V	
C17	Electrolytic	4.7	16V	MS7
C18	Electrolytic	4.7	16V	MS7
C19	Barrier Layer	0.0022	25V	
C20	Barrier Layer	0.1	16V	
C22	Electrolytic	47	16V	MS7
C23	Barrier Layer	0.1	16V	
C24	Barrier Layer	0.1	16V	
C25	Electrolytic	100	10V	MS7
C26	Electrolytic	100	10V	MS7
C27	Electrolytic	10	16V	MS7
C29	Ceramic	33p	50V	
C30	Ceramic	33p	50V	
C31	Ceramic	0.001	50V	
C33	Ceramic	22p	50V	(#05, 07)
C34	Ceramic	22p	50V	(#05, 07)
C35	Barrier Layer	0.0047	16V	
C36	Electrolytic	10	16V	MS7 (#05, 07)
C37	Electrolytic	2.2	16V	MS7
C38	Barrier Layer	0.0047	25V	
C39	Electrolytic	100	10V	MS7
C40	Electrolytic	47	10V	MS9
C41	Barrier Layer	0.1	16V	
J1	Connector	B02B-EH		
J2	Connector	B05B-EH		
J3	Connector	B04B-EH		
J4	Connector	B07B-EH		
J5	Connector	B04B-EH		
J6	Connector	B07B-EH		
J7	Connector	B02B-EH		
J8	Connector	B03B-EH		
J9	Connector	B06B-EH		
J10	Connector	B07B-EH		
J11	Connector	B05B-EH		
J12	Connector	B03B-EH		
J13	Connector	B09B-EH		
J14	Connector	B08B-EH		
J15	Connector	B05B-EH		
J16	Connector	B07B-EH		
J17	Connector	B06B-EH		
J18	Connector	B05B-EH		
P1	Connector	EHR-06		
S1	Switch	KHH-10910		
S2	Switch	SGK1062		
BT1	Lithium Battery	BR2325-1HC		
B1	LOGIC PCB	B-843D		

[LOGIC] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)		
W10	Jumper	JPW-02A		
W14	Jumper	JPW-02A		
W33	Jumper	JPW-02A		
W34	Jumper	JPW-02A		
W36	Jumper	JPW-02A		
W37	Jumper	JPW-02A		
[PA] UNIT				
REF. NO.	DESCRIPTION	TYPE (PARTS NO.)		
IC1	IC	SC-1027		
Q1	Transistor	2SB596 O or Y		
D1	Diode	MI-407		
D2	Diode	1SS97		
D3	Diode	MI-407		
D4	Diode	15CD11		
L1	Coil	LA-136		
L2	Coil	LA-242		
L3	Coil	LA-253		
L4	Coil	LA-232		
L5	Coil	LA-147		
L6	Choke	LW-19		
L7	Coil	LA-242		
L8	Coil	LA-232		
R1	Resistor	0.15	RGB2	
R2	Resistor	0.15	RGB2	
R3	Resistor	100	R50X	
R4	Resistor	330	R20	
R5	Resistor	100k	R20	
R6	Resistor	4.7k	R20	
R7	Resistor	10	R20	
C1	Electrolytic	10	16V	MS7
C2	Electrolytic	10	16V	MS7
C3	Ceramic	0.001	50V	B
C4	Ceramic	0.001	50V	B
C6	Ceramic	0.001	50V	B
C7	Ceramic	0.001	50V	B
C8	Electrolytic	10	16V	MS7
C9	Ceramic	0.001	50V	B
C10	Ceramic	0.001	50V	B
C11	Ceramic	0.5	500V	SL
C12	Ceramic	20p	50V	SL
C13	Ceramic	5p	50V	SL
C14	Ceramic	20p	50V	SL
C15	Ceramic	3p	500V	SL
C16	Ceramic	18p	500V	SL
C17	Ceramic	12p	500V	SL
C18	Ceramic	15p	500V	SL
C19	Ceramic	3p	500V	SL
C20	Ceramic	8p	500V	SL
C21	Ceramic	6p	500V	SL
C22	Ceramic	0.001	50V	B
C23	Ceramic	0.0047	50V	B
C24	Ceramic	0.001	50V	B
C25	Ceramic	0.001	50V	B
C26	Ceramic	5p	500V	SL
C27	Feedthrough	TF240-602	SS332Z	50V

[PA] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
C28	Feedthrough	TF240-602
C29	Ceramic	SS332Z 50V 5p 500V SL
J1	SP. Jack	SJ-296
J2	Connector	TLB-P08H-B1
P1	Connector	LR02-1
P2	Connector	EHR-05
P3	Connector	EHR-02

[PA] UNIT

REF. NO.	DESCRIPTION	TYPE (PARTS NO.)
P4	Connector	EHR-03
P5	Connector	TMP-P01X-A
P6	Connector	TMP-P01X-A
P7	ANT. Code	OPC-050B
P8	Connector	EHR-02
B1	PA. PCB	B-875A
B2	SPJ. PCB	B-855A

SECTION 12 UT-16 VOICE SYNTHESIZER UNIT

12 - 1 ASSEMBLY PROCEDURE

- 1) Remove the top cover by unscrewing the four screws. (Fig. 1)

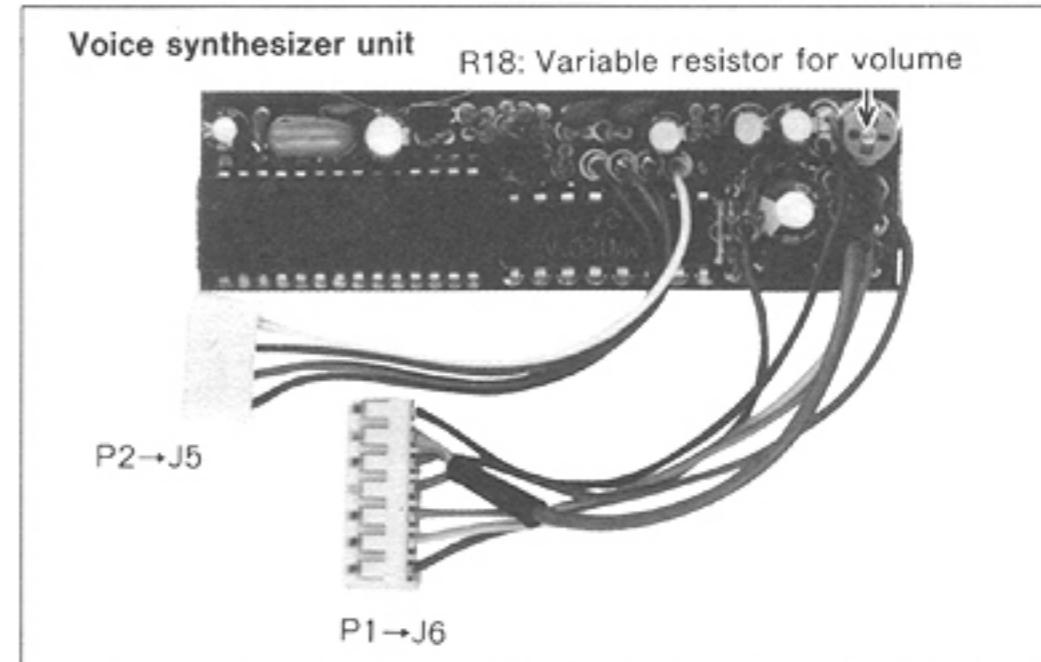
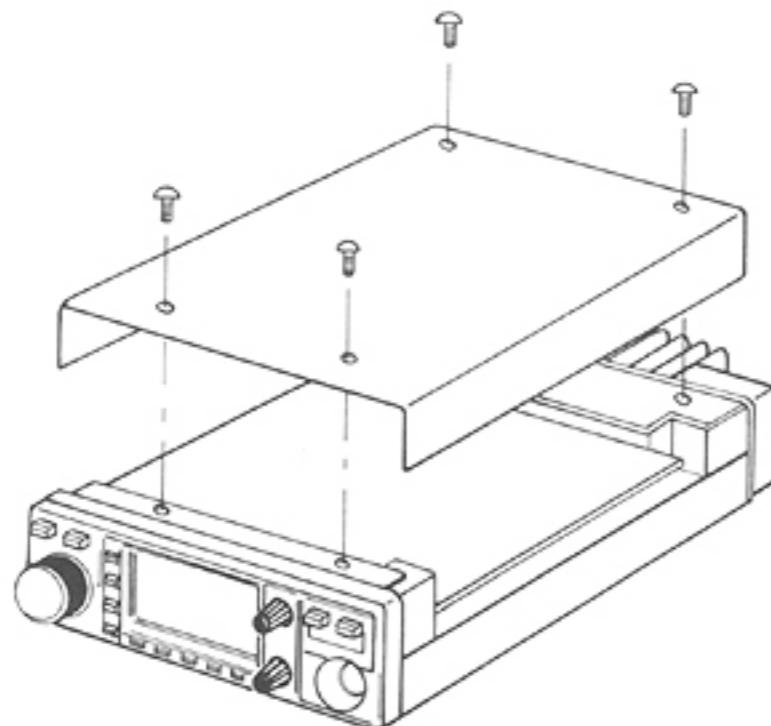


Fig. 1

- 2) Install the unit onto the spot as shown in the photo below. (Fig. 2)
 - Adhesive is applied on the sponge on the back of the unit, so remove the thin sheet from over the adhesive to attach the synthesizer unit.
- 3) Install the brown wire. (Fig. 2)
 - An unconnected lead wrapped in a vinyl tube is located as shown in the photo. Plug it into the pin "1" of J4. (Unplug the connector once before plugging in the lead.)
- 4) Insert the connectors P1 and P2 from the unit into the connectors J5 and J6. (Fig. 3)

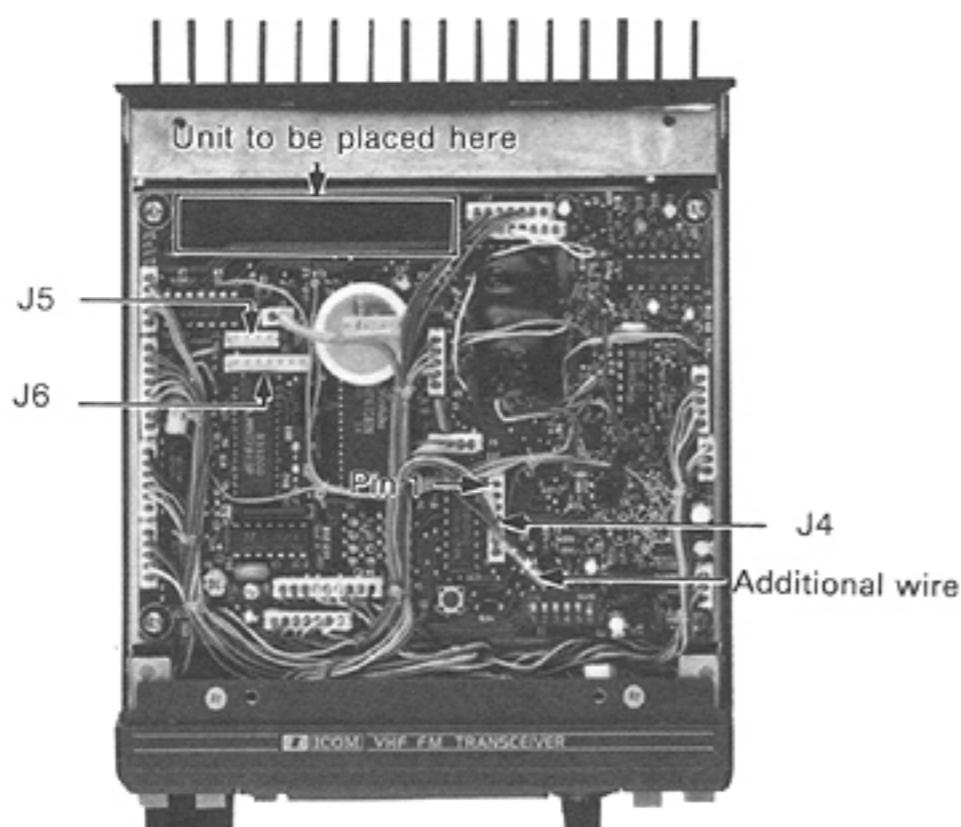


Fig. 2

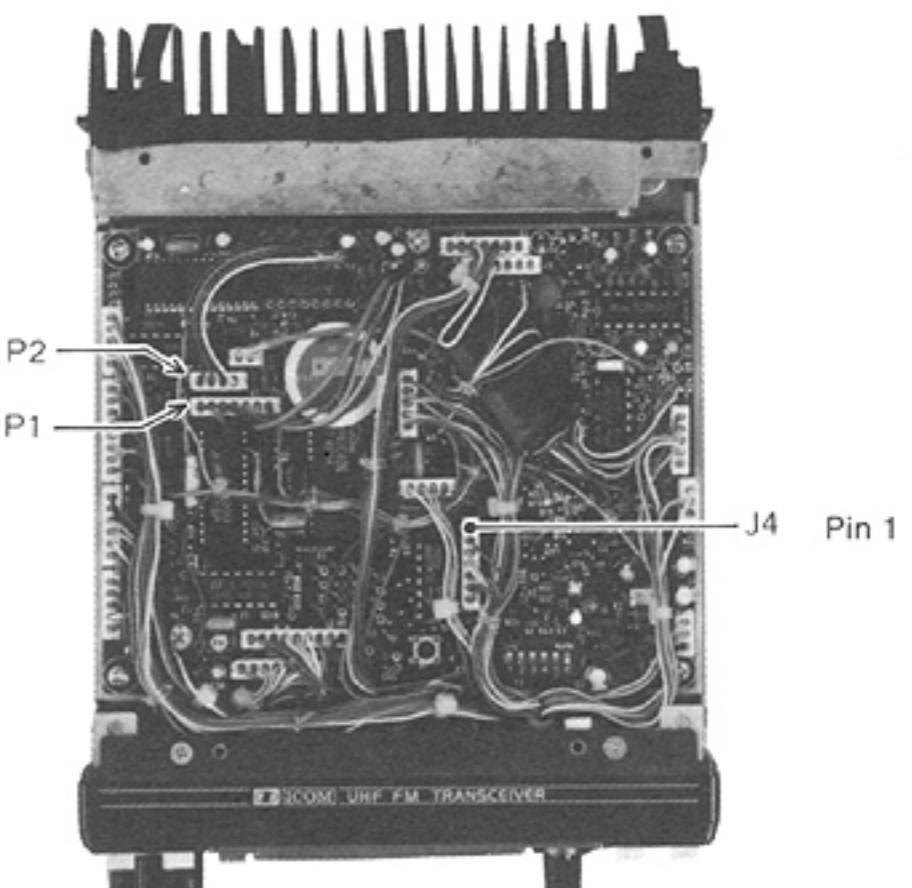


Fig. 3


12 - 2 OPERATION AFTER INSTALLATION

- When the SPEECH button on the front panel is pushed, the synthesizer unit verbally announces the displayed frequency in English.

For example: for 145.68MHz,

Display:

Announcement:

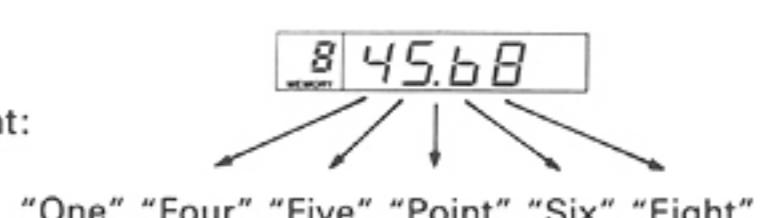


- While the volume of the announcement is adjustable with the volume control on the front panel of the transceiver, you can also adjust it with R18 in the unit if you want to make it louder or softer against the receive sound.

12 - 3 CIRCUIT DESCRIPTION


When the "SPEECH" button on the front panel is pushed, the data (D0 ~ D3) from the CPU (IC6) are fed to the inputs (IN1 ~ IN4) of IC1 (VOICE SYNTHESIZER UNIT). The data are transferred to either A port or B port by the signals at the "CKA" and "CKB" terminals. After receiving a pulse signal at the "Sync" terminal, IC2 produces voice signals from the data (D0 ~ D3) and outputs these signals to a mixer consisting of Q3 and Q4. The mixed signal is passed through a filter consisting of R11, R12, C5 and C6, and is amplified by Q5. The "BUSY" signal becomes "L" level on completion of a word indicating the circuit is ready for the next word. The announcement is made for the 100MHz through the 10kHz digits.

Timing chart of IC 2 (435.00MHz)

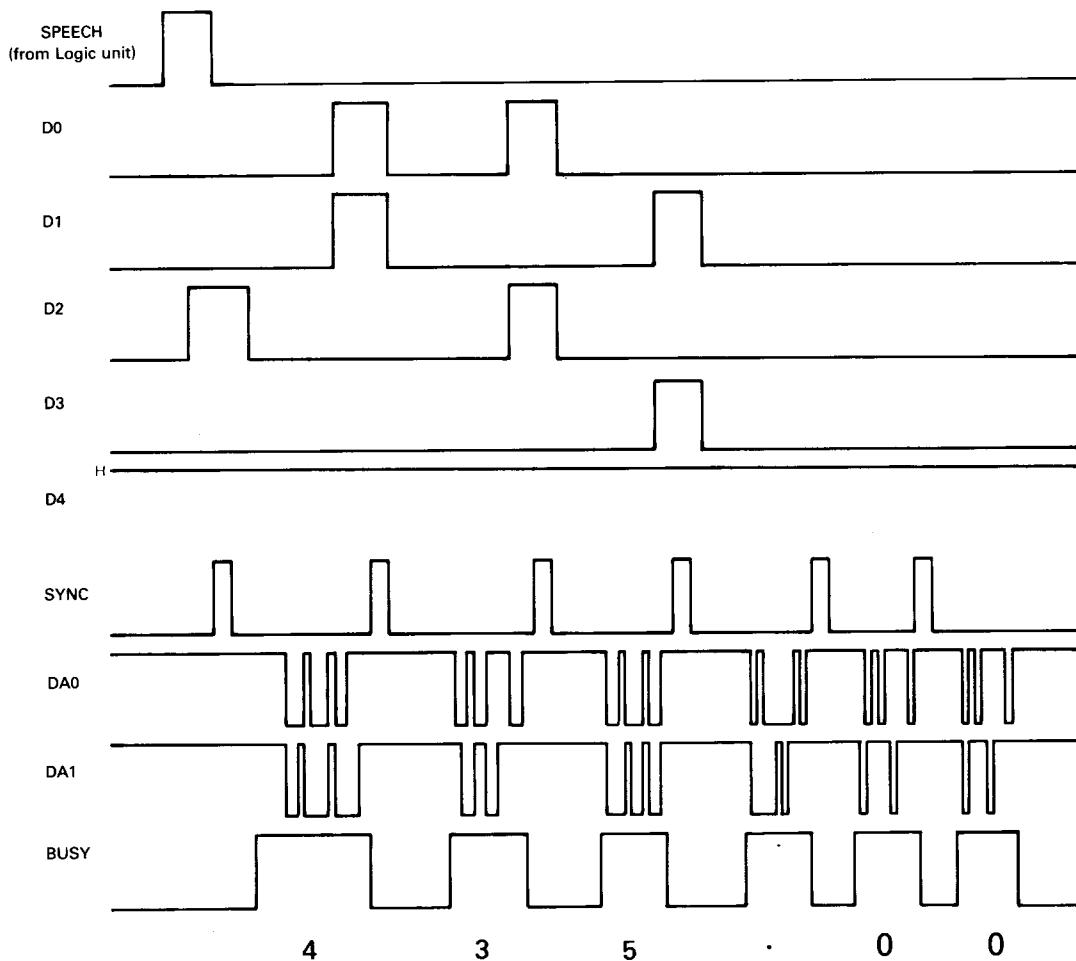


D0	D1	D2	D3	D4	
0	0	0	0	1	0 (Zero)
1	0	0	0	1	1 (One)
0	1	0	0	1	2 (Two)
1	1	0	0	1	3 (Three)
0	0	1	0	1	4 (Four)
1	0	1	0	1	5 (Five)
0	1	1	0	1	6 (Six)
1	1	1	0	1	7 (Seven)
0	0	0	1	1	8 (Eight)
1	0	0	1	1	9 (Nine)
0	1	0	1	1	• (Point)

BLOCK DIAGRAM

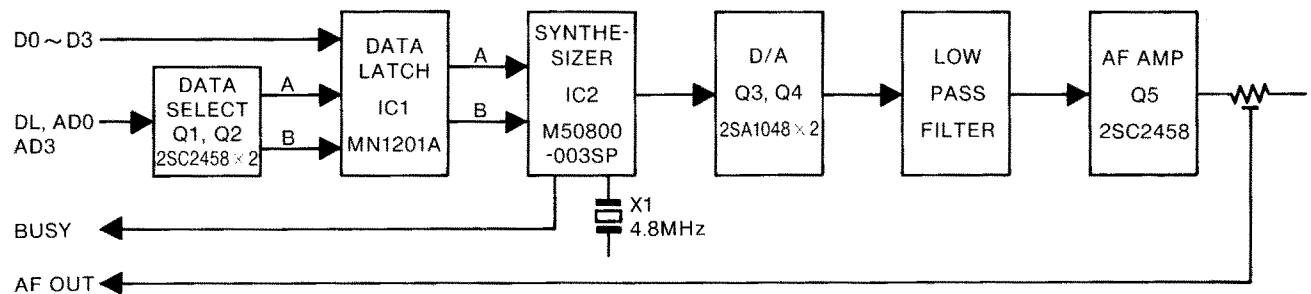


SCHEMATIC

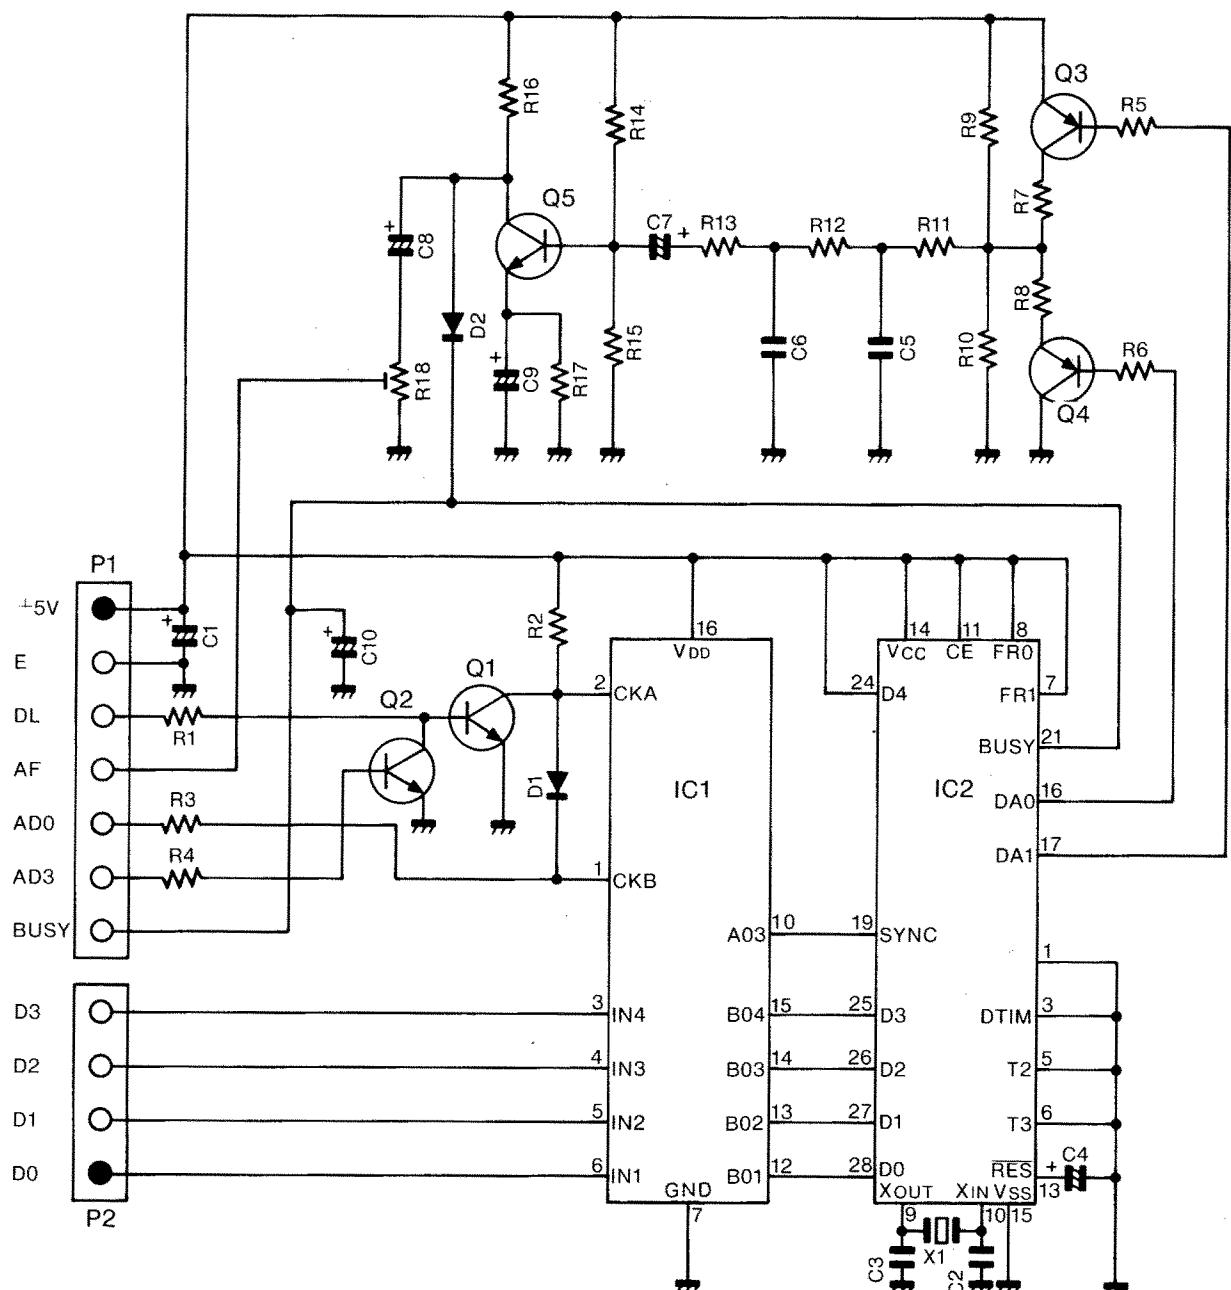


PARTS LIST


REF. NO.	DESCRIPTION	PART NO.		
IC1	IC	MN1201A		
IC2	IC	M50800-003SP		
Q1	Transistor	2SC2458-GR		
Q2	Transistor	2SC2458-GR		
Q3	Transistor	2SA1048		
Q4	Transistor	2SA1048		
Q5	Transistor	2SC2458-GR		
D1	Diode	1SS133		
D2	Diode	1SS211		
X1	Ceramic resonator	CSA480MG		
R1	Resistor	47K	ELR10	
R2	Resistor	10K	ELR10	
R3	Resistor	100K	ELR10	
R4	Resistor	47K	ELR10	
R5	Resistor	3.3K	ELR10	
R6	Resistor	3.3K	ELR10	
R7	Resistor	47K	ELR10	
R8	Resistor	47K	ELR10	
R9	Resistor	5.6K	ELR10	
R10	Resistor	5.6K	ELR10	
R11	Resistor	10K	ELR10	
R12	Resistor	10K	ELR10	
R13	Resistor	1K	ELR10	
R14	Resistor	100K	ELR10	
R15	Resistor	47K	ELR10	
R16	Resistor	2.2K	ELR10	
R17	Resistor	2.2K	ELR10	
R18	Trimmer	100K	H0521	
C1	Electrolytic	33	10V	RC3
C2	Ceremic	33P	50V	RC3
C3	Ceremic	33P	50V	
C4	Electrolytic	0.1	50V	RC3
C5	Barrier Layer	TBD05X-103M	25V	
C6	Barrier Layer	TBD05X-103M	25V	
C7	Electrolytic	0.47	50V	RC3
C8	Electrolytic	4.7	25V	RC3
C9	Electrolytic	22	6.3V	RC3
C10	Electrolytic	100	10V	MS7
P1	Connector	EHR-07		
P2	Connector	EHR-04		
B1	PCB	B-879A		

IC-47 A/E SCHEMATIC

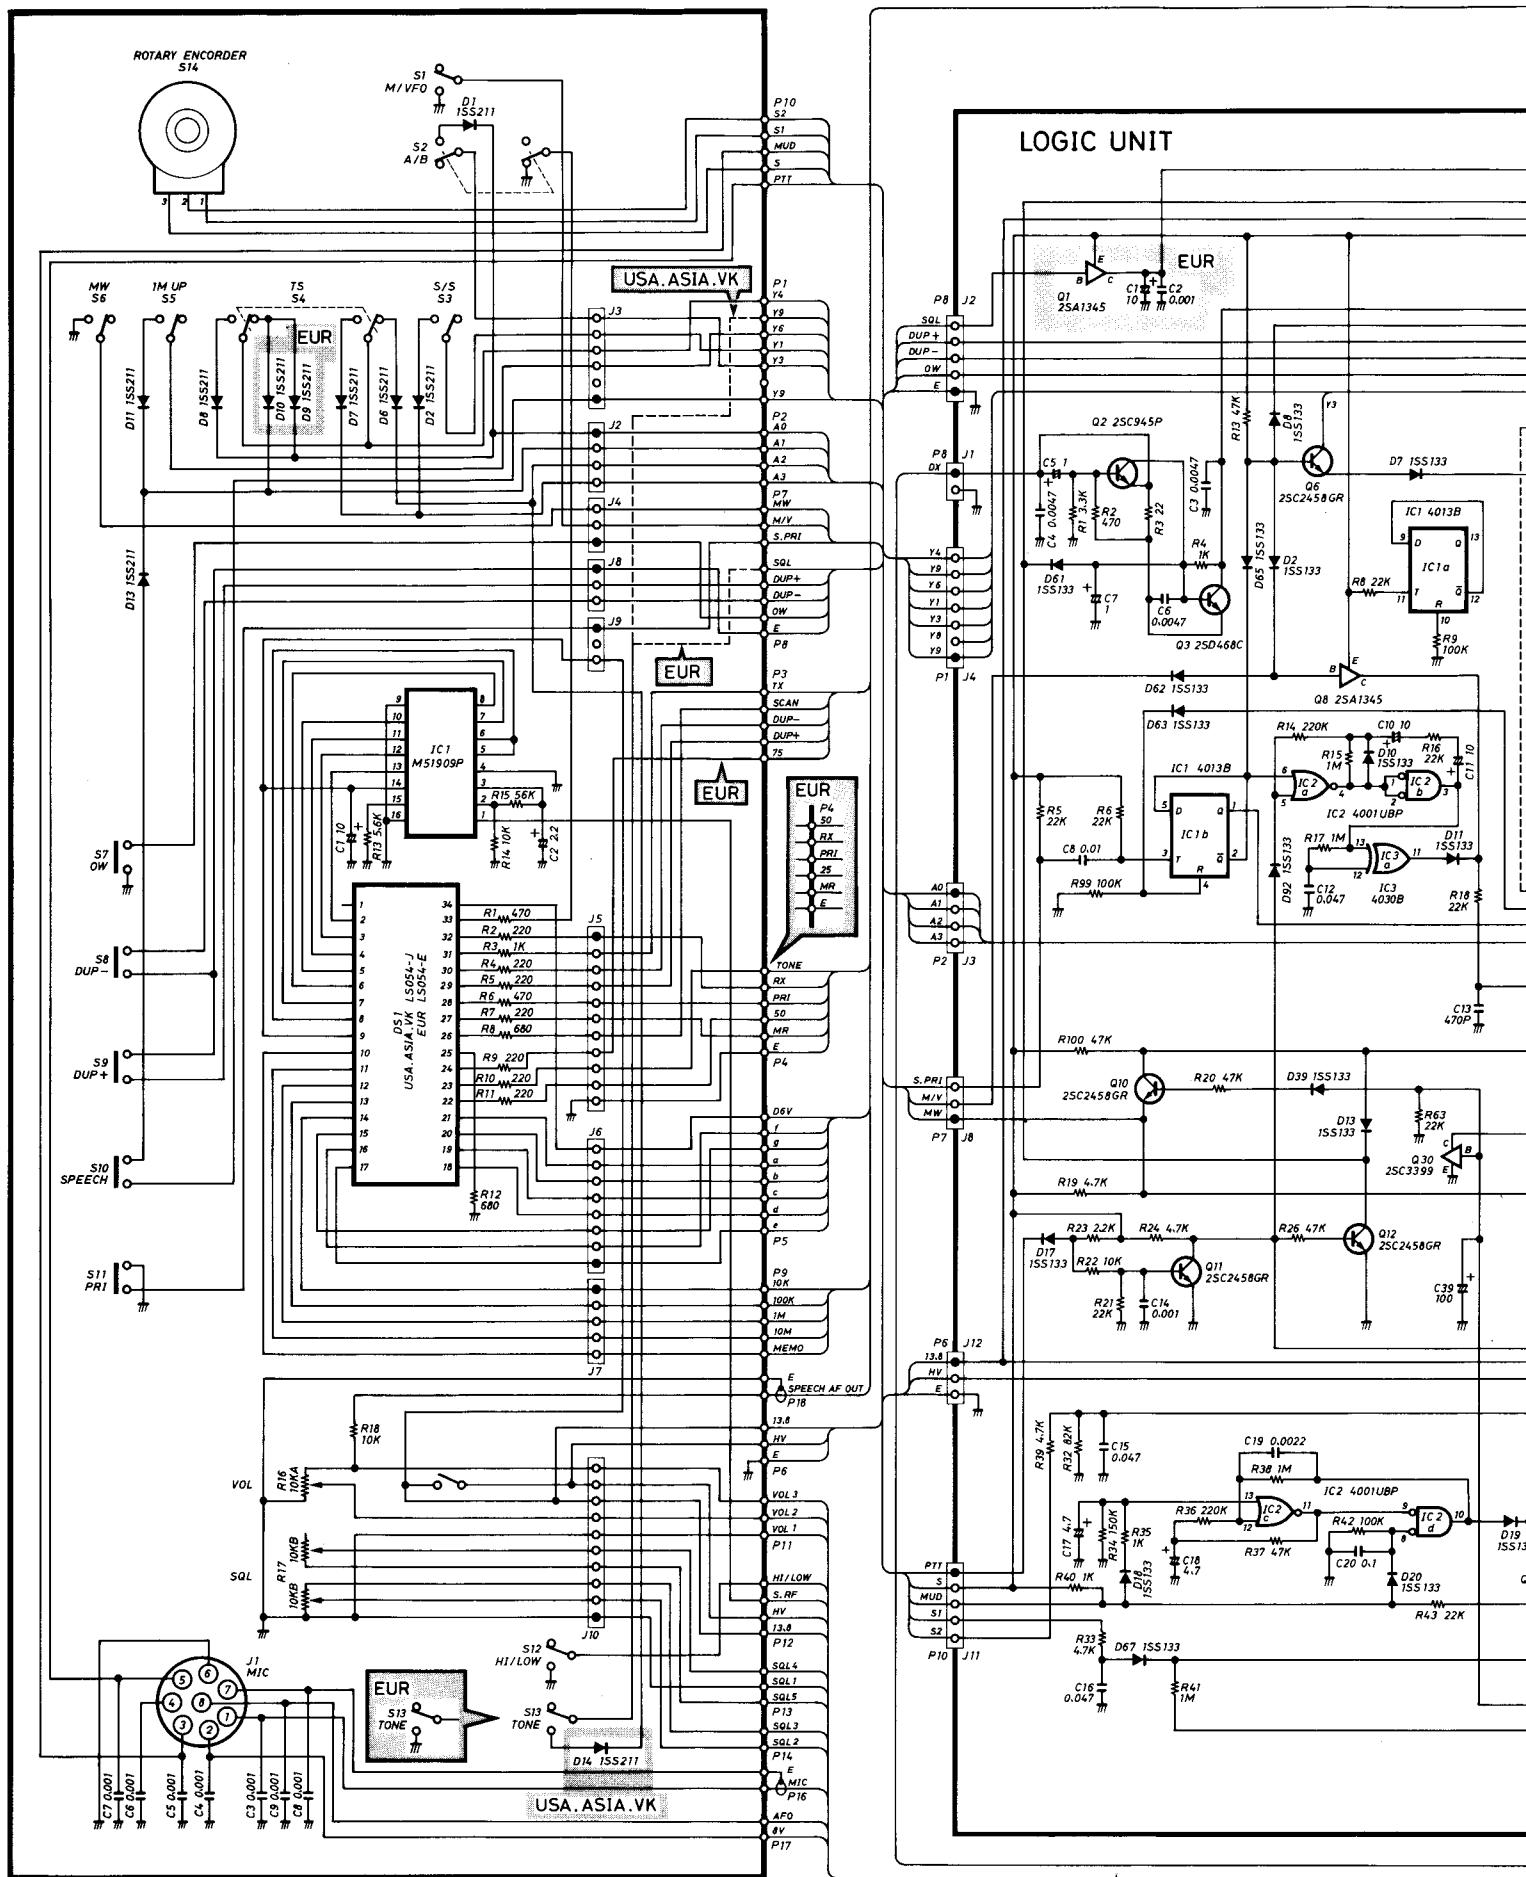


DIAGRAM

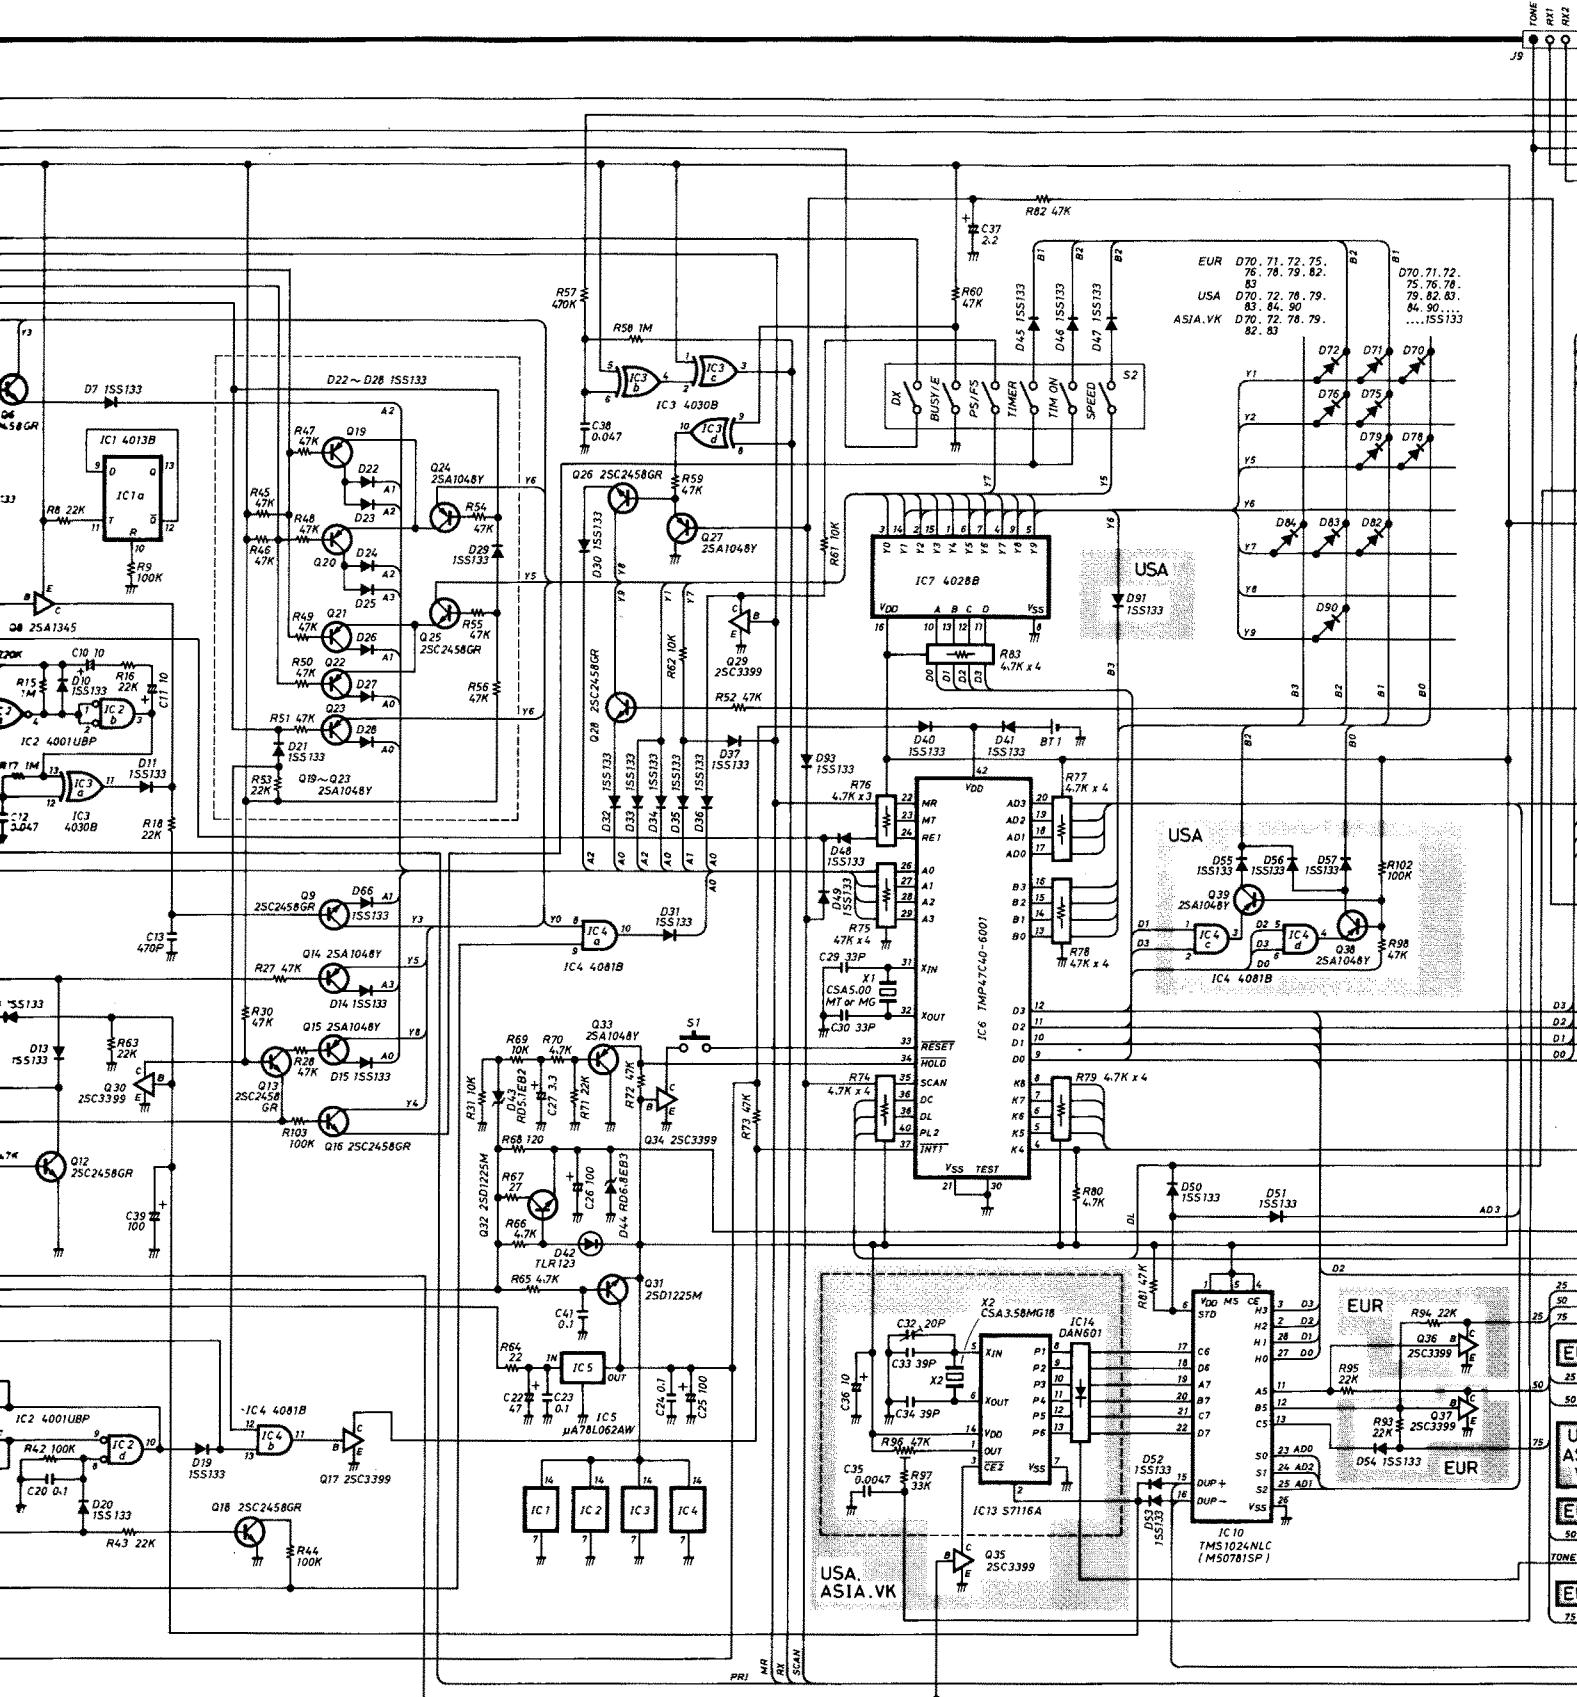


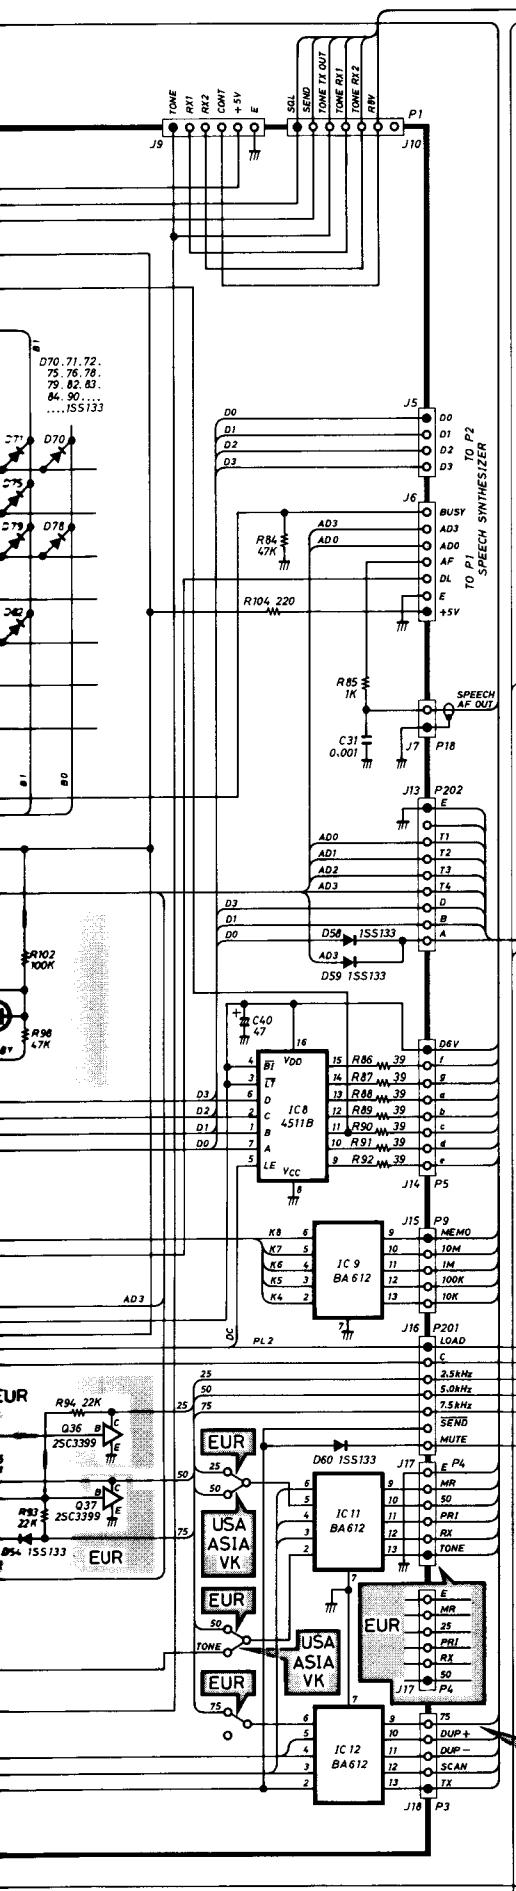


MAIN UNIT

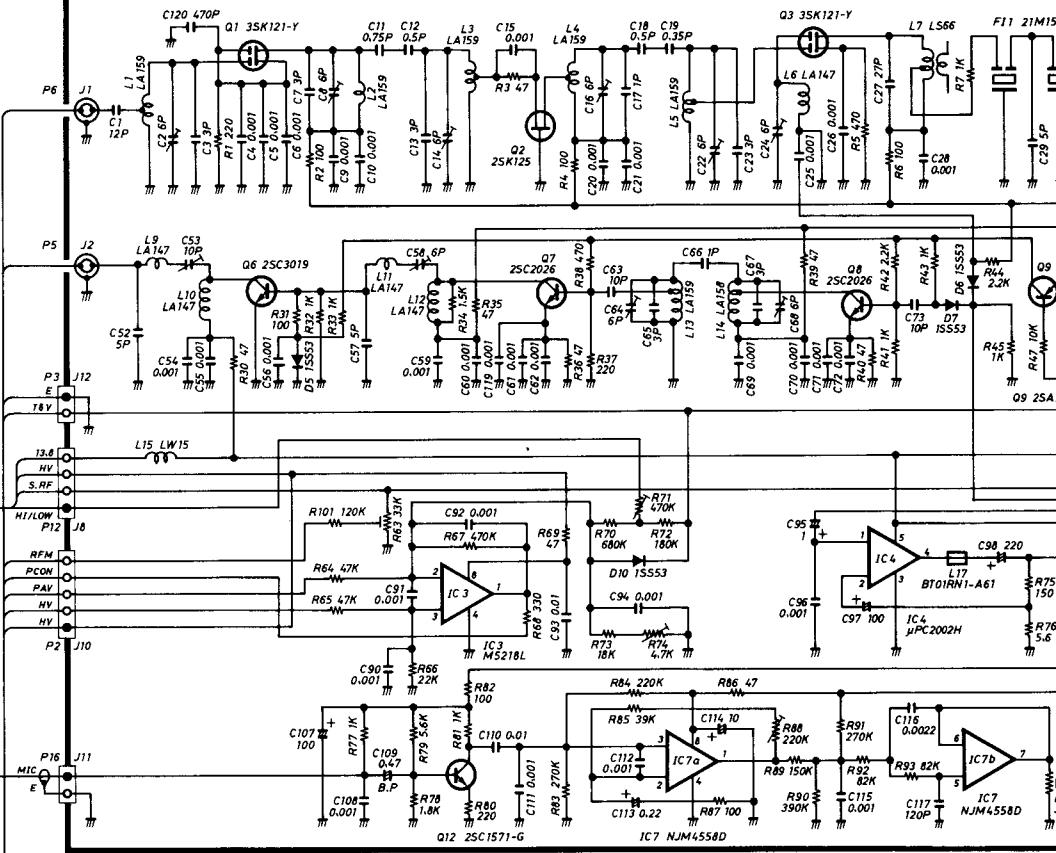

PLL

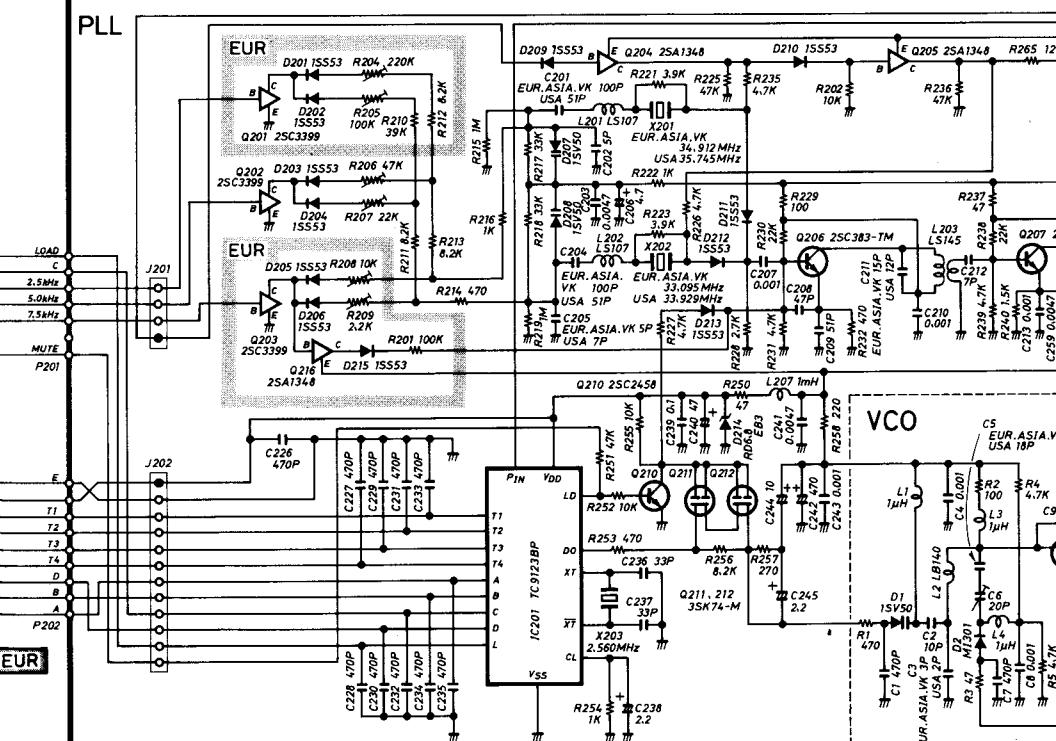

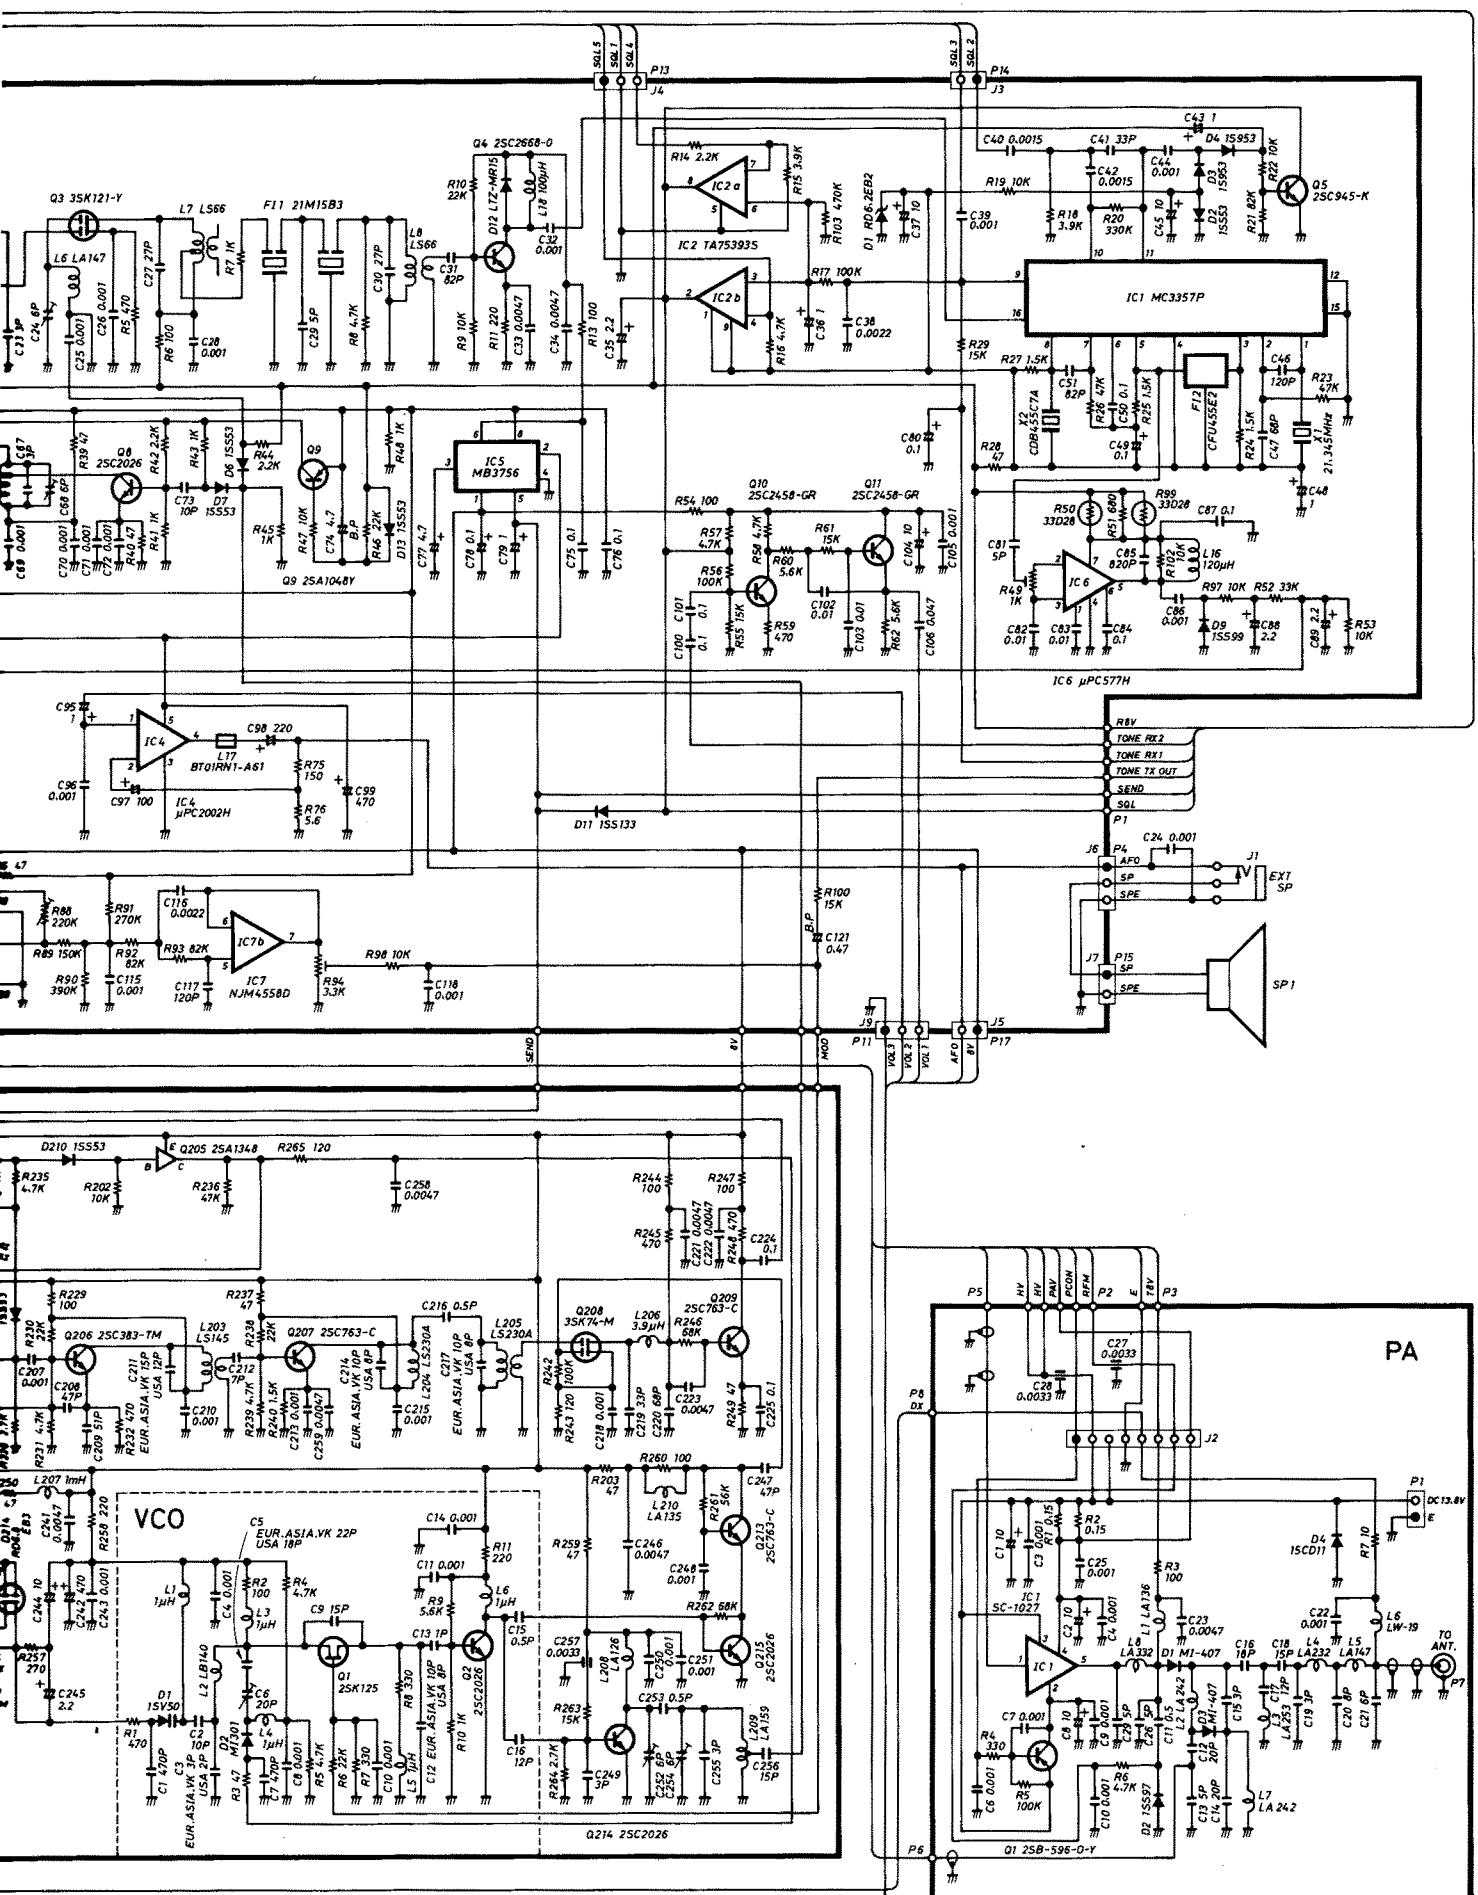

ICOM INCORPORATED

Some components subject to change
for an improvement without notice.

A-0551

Printed in Japan