


IC 751 ONLY NOT IC 751A

MAIN UNIT

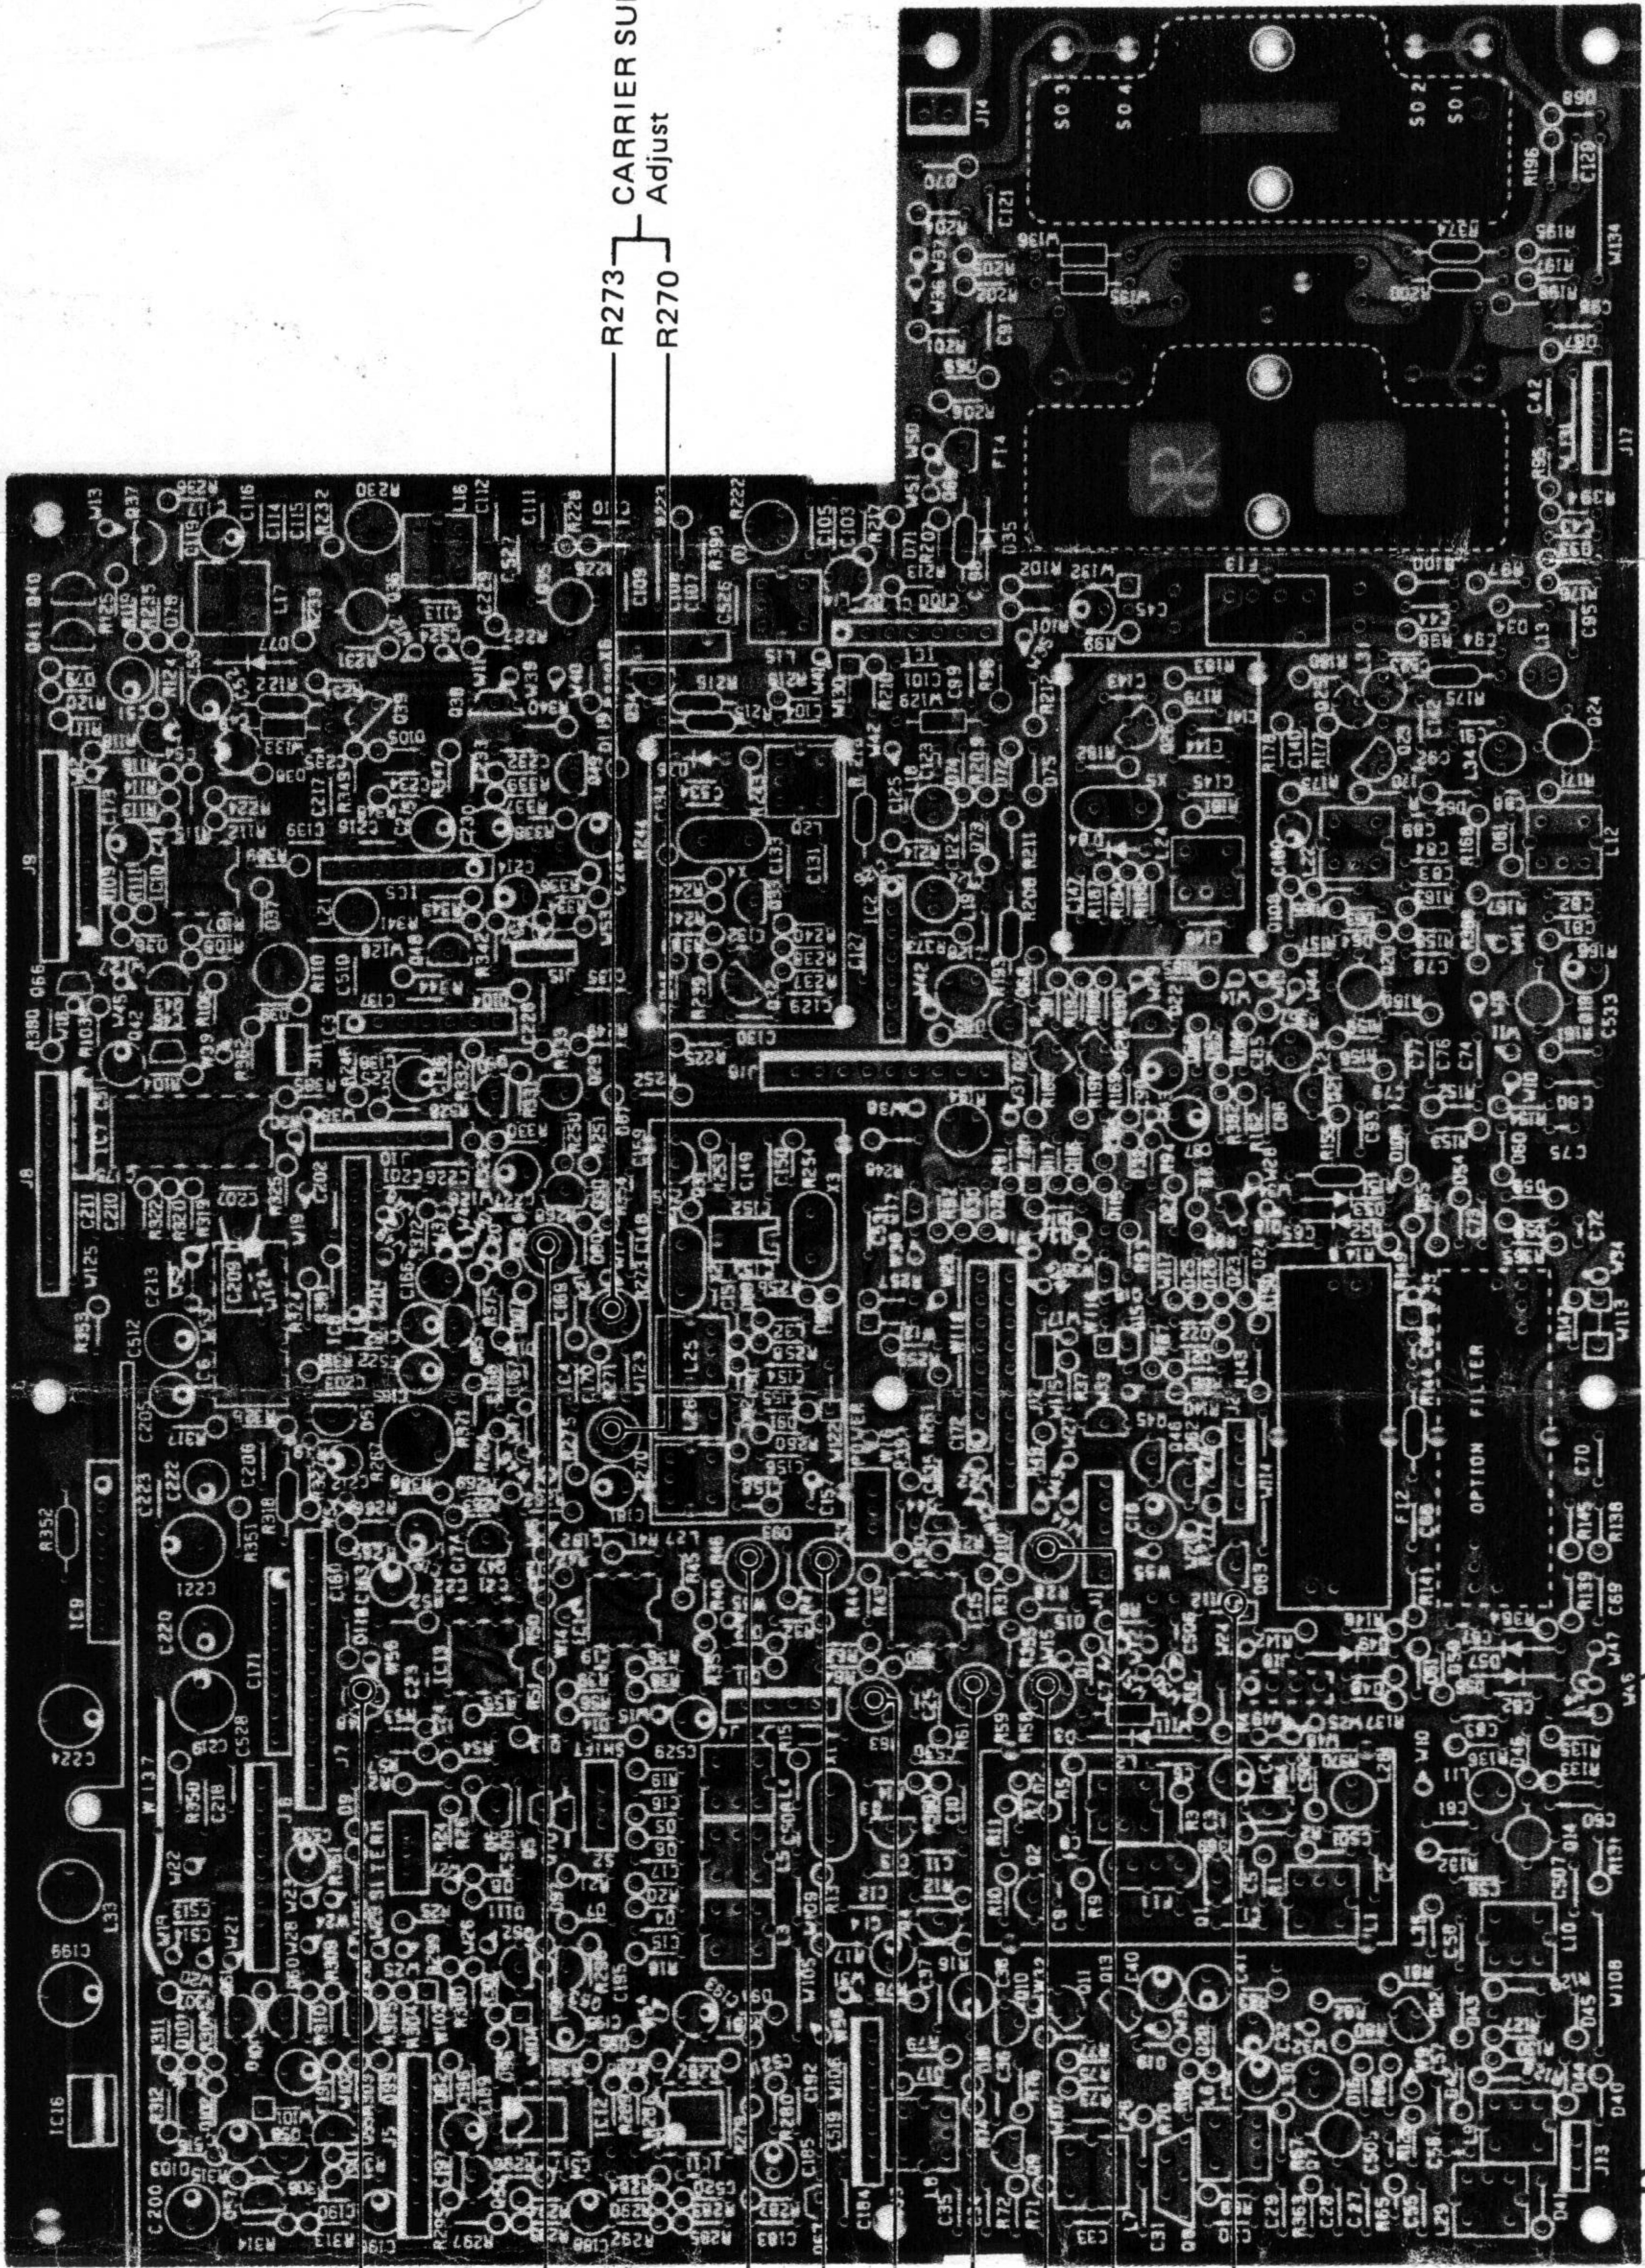

R48 Po METER Adjust

R268 ALC Adjust AM

R46 ALC Adjust Low

R44 ALC Adjust Hi

R63 Ic METER Adjust

R59 Ic METER Adjust

R58 Ic APC Adjust

R28 ALC METER Adjust

By shunting W112 to ground, ALC will be unfunctional.

R273 } CARRIER SUPPRESSION
R270 } Adjust

PROBE
PROBE
HERE

UNPLUG
J13