

RECEIVER ADJUSTMENT (CONTINUED)

ADJUSTMENT	ADJUSTMENT CONDITIONS	MEASUREMENT		VALUE	ADJUSTMENT POINT	
		UNIT	LOCATION		UNIT	ADJUST
2	<ul style="list-style-type: none"> Set the signal generator; <ul style="list-style-type: none"> Level : 50 μV (-73 dBm) Mod. : OFF 	FRONT PANEL	Multifunction meter	Maximum	MAIN	L26, L27, L28, L29, L40, L41, L46, L50, L55
		4	<ul style="list-style-type: none"> Apply no signal to the antenna connector. 			Adjust R414 to a point where the noise level is 30 dB down from 2.5 V.

MAIN UNIT

